



Multi-Pro® 1200 Turf Sprayer

Model No. 41107 - 230000308 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PTH.	phillips truss head
HF.	hex flange	PTO.	power take off
HH.	hex head	RH.	right hand
HHF.	hex head flange	SFH.	slotted fillister head
HHFTF.	hex head flange thread forming	SHH.	slotted hex head
HJ.	hex jam	SHWH.	slotted hex washer head
HLH.	hex lag head	SPH.	slotted pan head
HOC.	height-of-cut	SQH.	square head
HS.	hex	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HS.	hex socket head	TTH.	torx truss head
HWH.	hex washer head	WH.	wing head
HWHTF.	hex washer head thread forming		

Footnotes

- ❶

Not illustrated
- ❷

Not serviced separately
- ❸

 
Obtain Parts From Kohler

PROTOTYPE

Contents


Description	Page	Description	Page
Front Suspension Assembly	 4	Tank Hose Assembly	 46
Steering Cylinder Assembly No. 100-8278	 5	Sprayer Component Assembly	 47
Engine Cover Assembly	 6	Drain Screw Assembly	 48
Seat Support Assembly	 8	Top Mounted Suction Assembly	 49
Brake and Accelerator Pedal Assembly	 9	Lower Sprayer Component Assembly	 50
Master Cylinder Assembly No. 94-3800	 10	Safety Valve Assembly No. 100-6820	 51
Rear Fender and Battery Mount Assembly	 11	Hose Assemblies No. 1	 52
Right Hand Boom Mount Assembly No. 106-4960	 12	Hose Assemblies No. 2	 53
Left Hand Boom Mount Assembly No. 106-4961	 13	Transaxle Case Assembly Transaxle Assembly No. 104-9078	 55
Fresh Water Tank Assembly	 14	Transaxle Gear Shaft Assembly Transaxle Assembly No. 104-9078	 56
Fresh Water Tank Assembly No. 100-8438	 15	Countershaft Assembly Transaxle Assembly No. 104-9078	 57
Shifter Assembly	 16	Shift Fork Assembly Transaxle Assembly No. 104-9078	 58
Parking Brake and Console Assembly	 17	Differential Gear Assembly Transaxle No. 104-9078	 59
Front Wheel Assembly	 18	Vehicle Electrical Schematic	 60
Front Brake Assembly No. 100-8285	 19	Vehicle Hydraulic System	 61
Transaxle Installation Assembly	 20	Spray System Electrical Schematic	 62
Rear Wheel Assembly	 21	Spray System Flow Diagram	 63
Rear Brake Assembly No. 93-7125 (Right) and 93-7126 (Left)	 22	Crankshaft Assembly Kohler CH20S-64647	 64
Driveshaft Assembly No. 98-2918	 23	Crankcase Assembly Kohler CH20S-64647	 65
Engine Installation Assembly	 24	Oil Pan / Lubrication Assembly Kohler CH20S-64647	 66
Gearbox Assembly No. 99-0663	 26	Head / Valve / Breather Assembly Kohler CH20S-64647	 67
Drive Pulley Assembly No. 100-8289	 27	Ignition / Electrical Assembly Kohler CH20S-64647	 68
Steering Pump Assembly No. 100-8302	 28	Blower Housing and Baffle Assembly Kohler CH20S-64647	 69
Driver Clutch Assembly No. 100-8288	 29	Starting System Kohler CH20S-64647	 70
Pump Installation Assembly	 30	Fuel System Assembly Kohler CH20S-64647	 71
Pump Assembly No. 106-5121	 31	Engine Controls Kohler CH20S-64647	 72
Hydraulic Brake Line Assembly	 32	Air Intake / Filtration Assembly Kohler CH20S-64647	 73
Tank and Saddle Assembly	 33	Exhaust Assembly Kohler CH20S-64647	 74
Spray Tank Assembly No. 104-9020	 34		
Spray Tank Lid Assembly No. 94-7088	 35		
Throttle Linkage Assembly	 36		
Exhaust Assembly	 37		
Electrical Panel Assembly	 38		
Manual Control Assembly	 39		
Main On/Off Valve Assembly No. 106-4881	 40		
Pressure Control Valve Assembly	 41		
Boom Valve Assembly No. 106-4882	 42		
Flow Meter Assembly No. 106-4884	 43		
Hydraulic Hose Routing Assembly	 44		
Steering Control Assembly No. 92-3502	 45		

PROTOTYPE

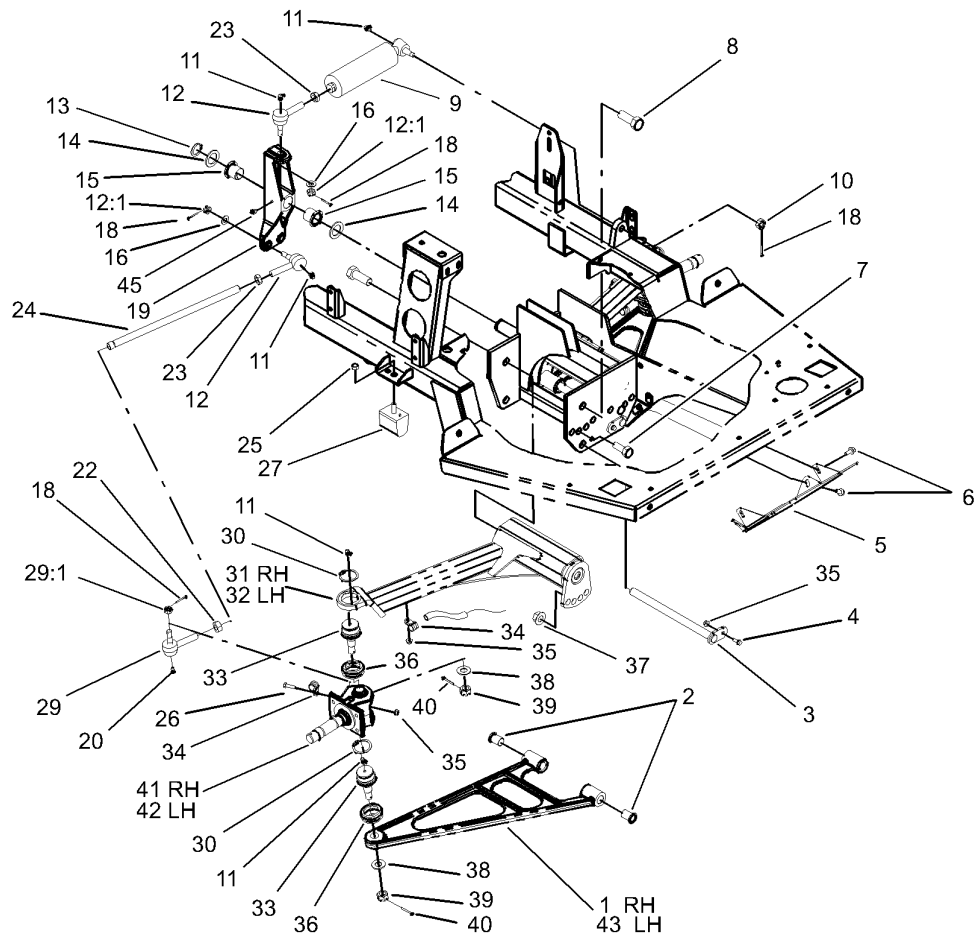


Front Suspension Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	100-6744-03	1	RH A-Arm ASM	26	321-6	2	Screw-HH
2	100-8541	4	Bushing-A-Arm	27	87-3470	2	Bumper-Axle, Rear
3	100-8544	2	Pivot Pin ASM	29	112771	2	Joint-Ball, LH
4	3234-4	2	Screw-HHF	29:1	915031	1	Nut
5	100-7060-03	1	Plate-Skid	30	32151-104	4	Ring-Retaining, External
6	3234-5	4	Screw	31	100-8414	1	RH Axle ASM
7	327-4	2	Screw-HH	32	100-8413	1	LH Axle ASM
8	328-24	4	Screw-HH	33	87-1430	4	Joint-Ball
9	100-8278	1	Cylinder-Steering	34	2412-134	4	R-Clamp
10	32136-13	1	Nut-SHH	35	32128-33	6	Nut-HF
11	302-60	8	Fitting-Grease	36	87-2420	4	Seal-Joint, Ball
12	112772	3	Joint-Ball, RH	37	32128-50	2	Nut-Flange
12:1	915031	1	Nut	38	3256-27	4	Washer-Flat
13	100-6785	1	Ring-Retaining	39	32136-2	4	Nut-SHH
14	3-6781	2	Washer-Thrust	40	3272-17	4	Pin-Cotter
15	256-318	2	Bearing-Nyliner	41	100-6738-03	1	Spindle-RH
16	3256-25	3	Washer-Flat	42	100-6739-03	1	Spindle-LH
18	3272-11	6	Pin-Cotter	43	100-6745-03	1	LH A-Arm ASM
19	100-6774-03	1	Pivot-Steering	45	302-11	1	Fitting-Lube, 45 DEG
20	302-5	2	Fitting-Grease				
22	3218-21	2	Nut-Jam				
23	3220-11	3	Nut-Jam				
24	100-8534-03	2	Tie Rod-Steering				
25	48-9520	2	Nut				

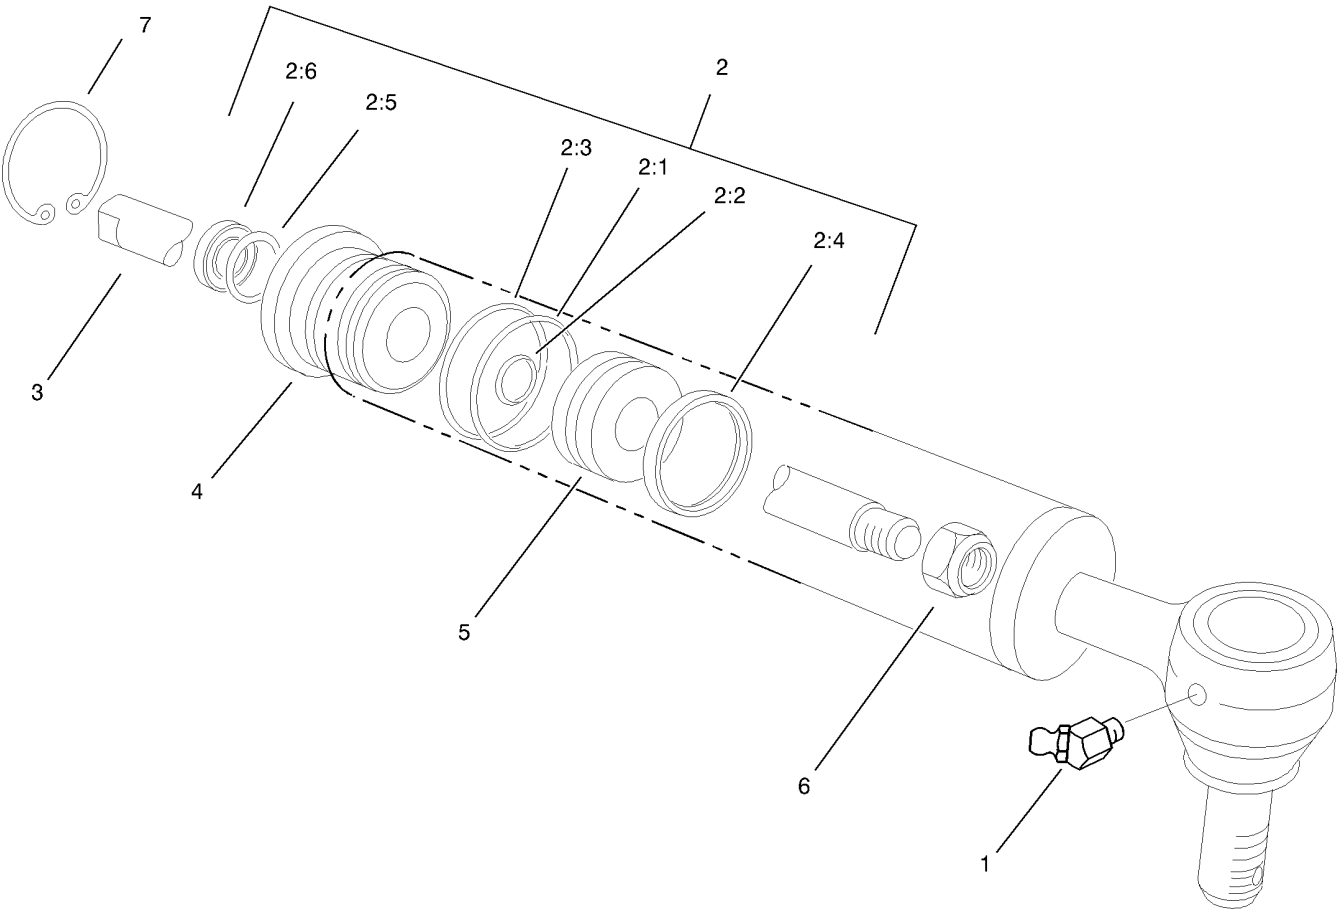 

Steering Cylinder Assembly No. 100-8278


Ref	Part No.	Qty.	Description				
1	302-60	1	Fitting-Grease				
2	107-1552	1	Seal Kit				
2:1		1	O-Ring				
2:2		1	O-Ring				
2:3		1	Seal-Back Up				
2:4		1	Seal-Psp				
2:5		1	Seal-Rod				
2:6		1	Seal-Dust				
3		1	Shaft				
4		1	Head				
5		1	Piston				
6		1	Nut				
7	94-3612	1	Ring-Retaining				

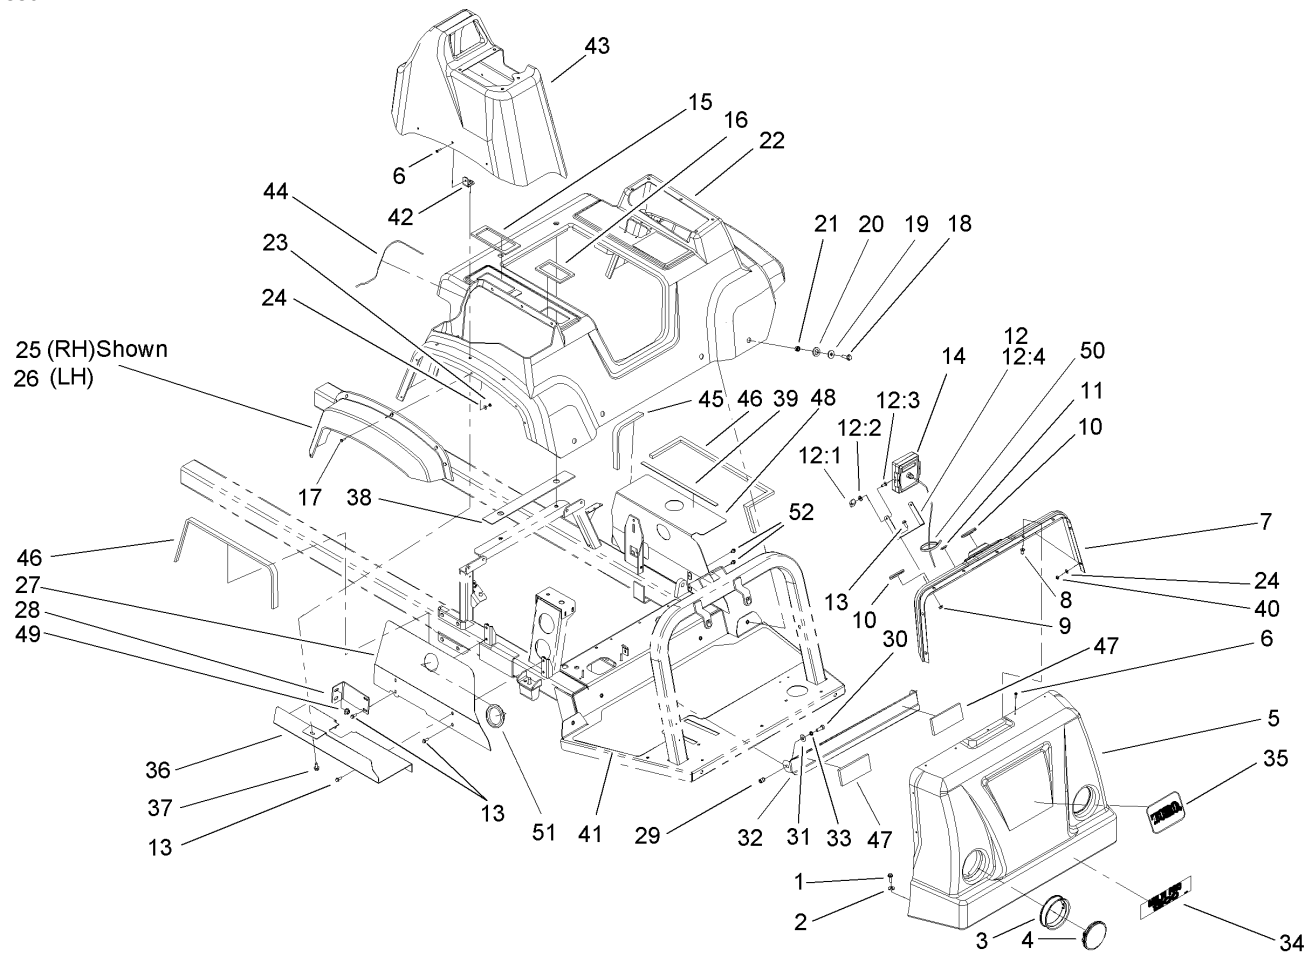 

Engine Cover Assembly


Ref	Part No.	Qty.	Description
1	3234-17	5	Screw-HHF
2	3256-3	5	Washer-Flat
3	99-7311	2	Mount-Headlight
4	99-7310	2	Headlight
5	100-8281	1	Hood-Front, Console
6	3250-25	15	Screw-PPH
7	100-6777	1	Dash Panel ASM
8	100-8450	17	Nut-Well
9	32128-33	2	Nut-HF
10	40764	2	Grommet
11	94-7290	1	Plug-Hole
12		1	Monitor Mounting Bracket Kit
12:1	99-0667	2	Knob
12:2	99-0730	2	Washer-Rubber
12:3	106-4868	2	Screw-CARR
12:4	99-0576	1	Bracket
13	3234-4	8	Screw-HHF
14	104-8990	1	Monitor-Rate
15	100-8436	1	Seal-Foam
16	100-8437	1	Seal-Foam
17	3250-13	12	Screw-PPH
18	3234-24	6	Screw-HHF
19	356308	6	Washer-Special
20	100-8468	6	Washer-Rubber

Ref	Part No.	Qty.	Description
21	100-8464	6	Spacer
22	104-8875	1	Seat Base ASM
23	3217-26	12	Nut-Hex
24	3256-49	16	Washer-Flat
25	94-7074	1	Flare-Fender, RH
26	94-7075	1	Flare-Fender, LH
27	104-8848-03	1	Panel-Shield, RH
28	100-8623	2	Bracket-Engine Cover Support, Rear
29	92-3788	2	Insert
30	323-6	2	Screw-HH
31	3256-4	2	Washer-Flat
32	100-6731-03	1	Shield-Head Light
33	3253-21	2	Washer-Lock
34	106-5129	1	Decal
35	62-5550	1	Decal
36	104-8852-03	1	Panel-Fender, Inner
37	3234-5	3	Screw
38	100-8463	1	Seal-Foam
39	100-8499	2	Seal-Foam
40	3296-21	4	Nut-Lock, NI
41	100-8622	1	Tread-Floor
42	104-8854-03	3	Console Bracket ASM
43	104-8867	1	Valve Console ASM

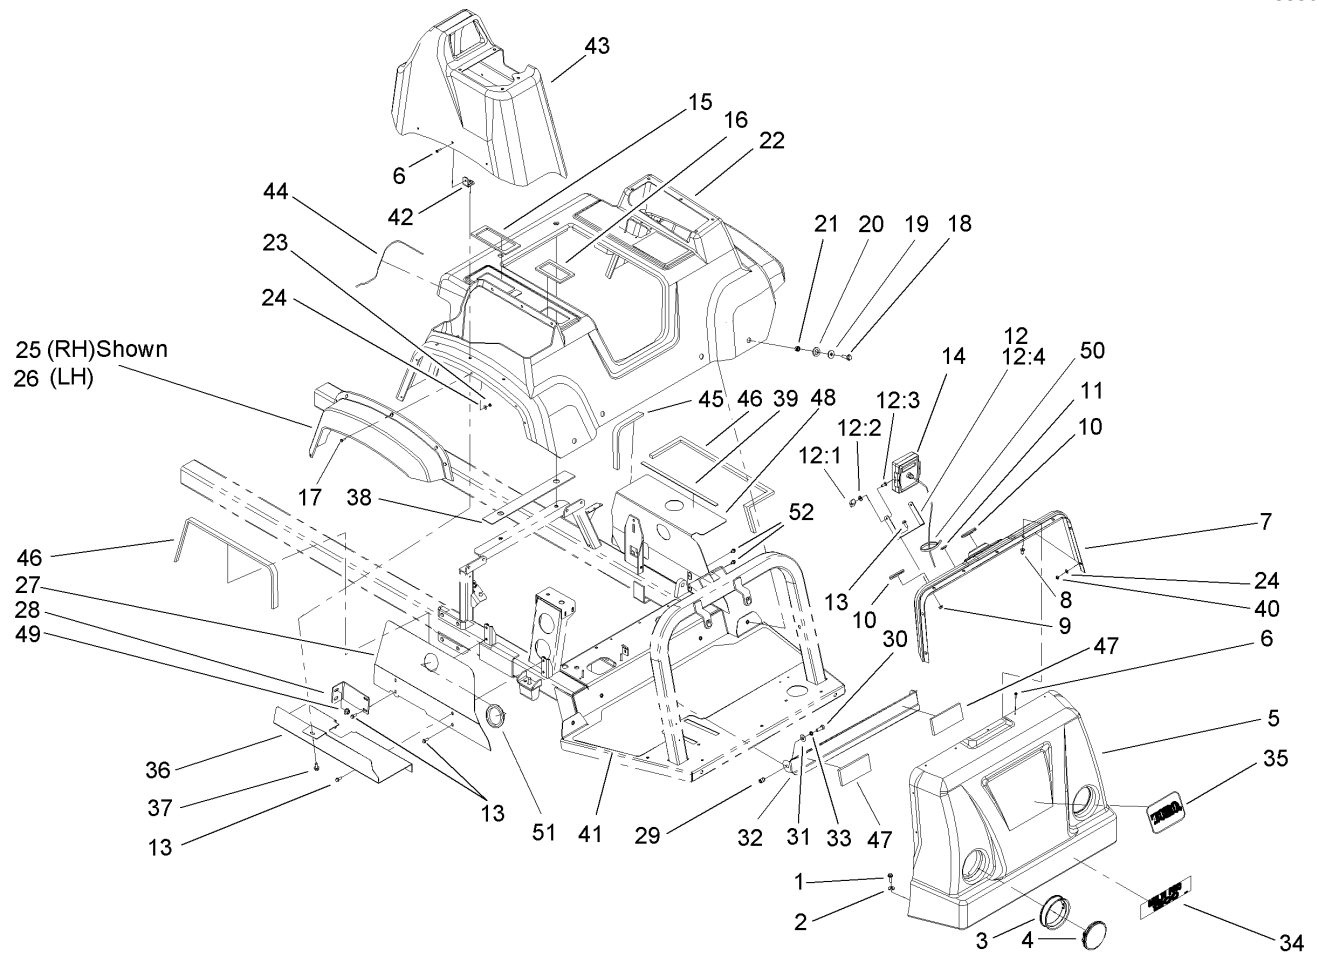 


Engine Cover Assembly (continued)

Ref	Part No.	Qty.	Description
44	104-8870	1	Trim-Edge
45	100-8444	1	Trim-Shield, Front And Rear
46	100-8423	2	Trim-Shield, Top
47	106-4872	2	Pad-Foam, Headlight
48	100-8448-03	1	Panel-Shield, LH
49	32128-43	2	Nut-Flange
50	3290-379	1	Tie-Cable
51	237-164	3	Grommet
52	3234-26	2	Screw

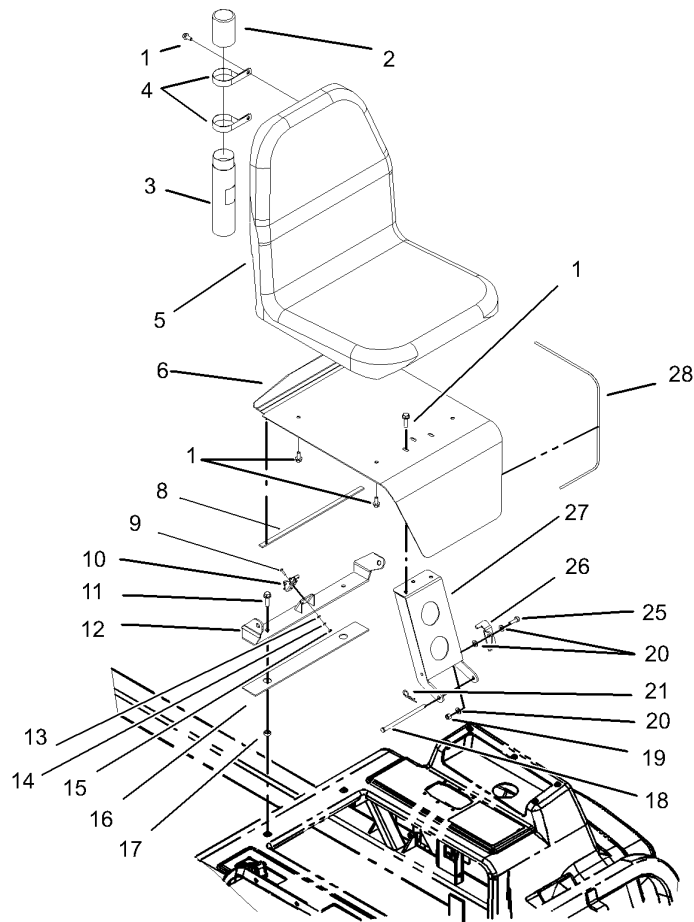 


Seat Support Assembly

Ref	Part No.	Qty.	Description				
1	3234-5	9	Screw				
2	104-7048	1	Cap-Housing				
3	104-7050	1	Housing-Manual				
4	2412-133	2	R-Clamp				
5	104-4620	1	Seat-Olympic, Toro				
6	100-8495-03	1	Panel-Mounting, Seat				
8	100-8499	1	Seal-Foam				
9	3250-4	2	Screw				
10	100-8502	1	Latch-Hinge				
11	3234-24	2	Screw-HHF				
12	100-8459-03	1	Seat Belt And Bracket ASM				
13	3256-53	2	Washer-Flat				
14	3253-15	2	Washer-Lock/sp				
15	3217-25	2	Nut-Hex				
16	100-8463	1	Seal-Foam				
17	100-8464	2	Spacer				
18	100-8501	1	Pin-Clevis				
19	3296-29	1	Nut-Lock, NI				
20	3256-23	3	Washer-Flat				
21	9335054	1	Pin-Hair				
25	322-5	1	Screw-HH				
26	100-8503-03	1	Bracket-Seat Prop				
27	100-8496-03	1	Mount-Bracket, Hinge				
28	100-8500	1	Trim-Seat				

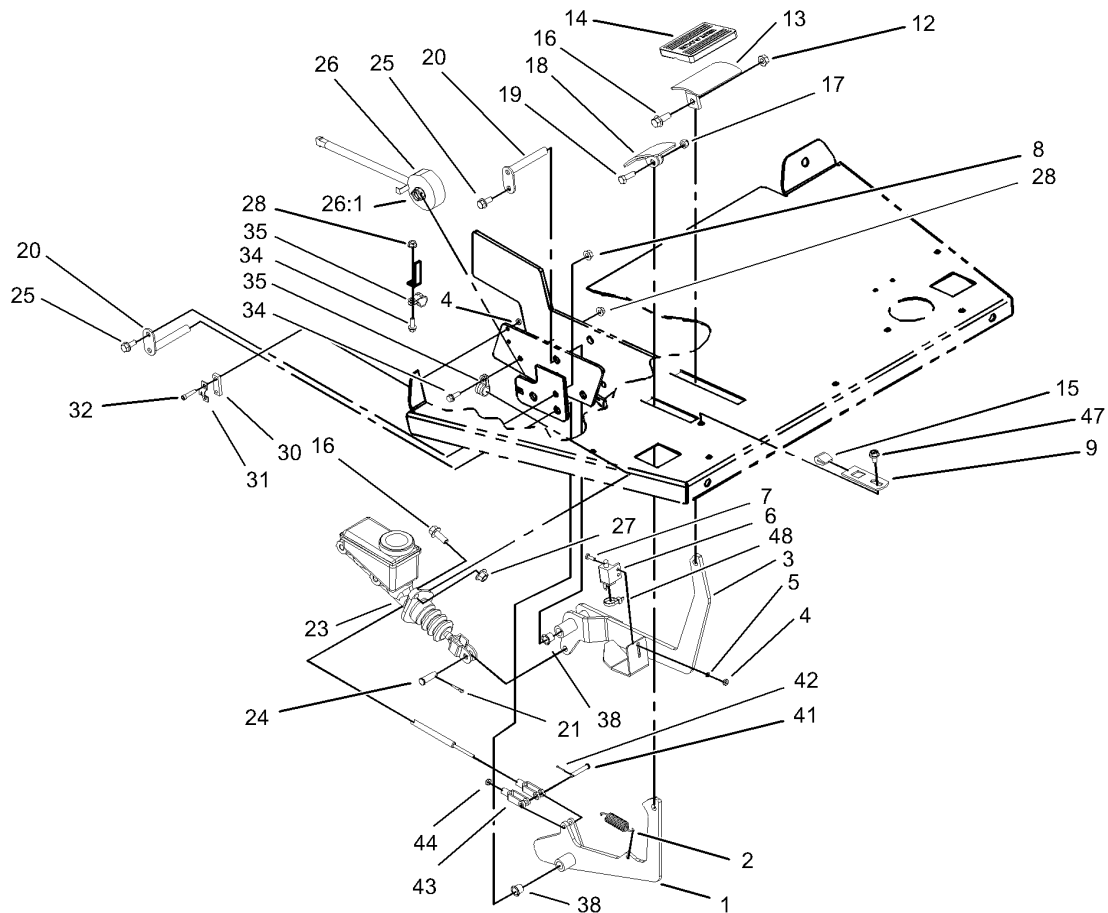 


Brake and Accelerator Pedal Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	100-8367-03	1	Accelerator-Lever	27	32128-43	2	Nut-Flange
2	67-1450	1	Spring-Idler, Deck	28	32128-33	2	Nut-HF
3	100-8553-03	1	Brake-Lever	30	100-8561	1	Plate-Spacer
4	3217-26	4	Nut-Hex	31	100-8560	1	Bracket-Throttle Cable
5	3253-17	2	Washer-Lock/sp	32	3274-81	2	Screw-HSH
6	92-0305	1	Switch	34	3234-4	2	Screw-HHF
7	3290-134	2	Screw	35	2412-134	2	R-Clamp
8	32128-20	2	Nut-HF	38	256-257	4	Bushing-Nyliner
9	104-8791-03	1	Plate-Pedal Stop	41	283-66	1	Pin-Clevis
12	32128-21	1	Nut-HF	42	3272-1	1	Pin-Cotter
13	100-8422-03	1	Bracket-Pedal	43	282-28	1	Clevis-Adjustable
14	7-3900	1	Pad-Brake	44	3219-14	1	Nut-Hex
15	100-6702	3	Stop-Lever, Pedal	47	3234-28	1	Screw-HHF
16	3234-11	3	Screw-HHF	48	3290-379	1	Tie-Cable
17	32153-3	1	Nut-Lock				
18	93-8969-03	1	Pedal				
19	322-5	1	Screw-HH				
20	100-8554	2	Pin-Pivot				
21	3272-10	1	Pin-Cotter				
23	94-3800	1	Master Cylinder ASM				
24	283-2	1	Pin-Clevis				
25	3234-5	2	Screw				
26	99-8090	1	Magnet ASM				
26:1	93-6601	1	Spring-Compression				

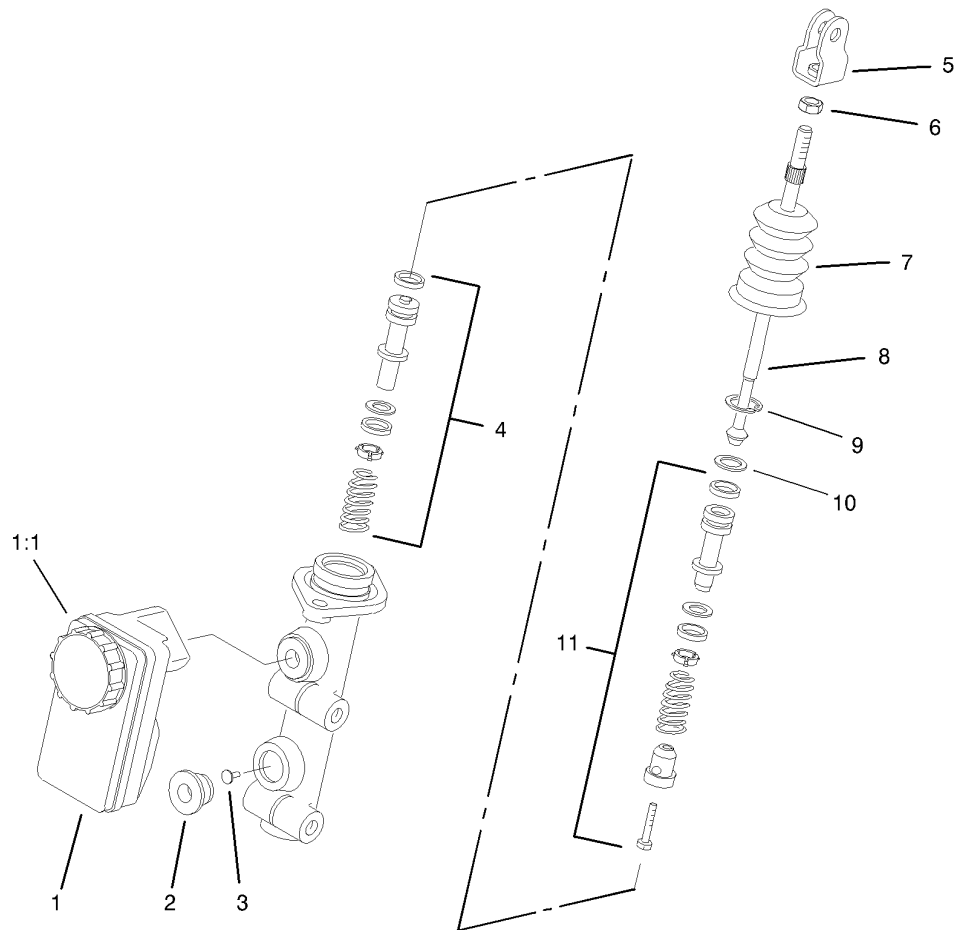 

Master Cylinder Assembly No. 94-3800


Ref	Part No.	Qty.	Description				
1	87-3040	1	Reservoir-Cylinder, Master				
1:1	92-4112	1	Cap ASM				
2	93-8971	2	Seal-Port, Flange				
3	92-4103	1	Pin-Stop				
4	92-4102	1	Secondary Piston ASM				
5	92-4110	1	Clevis				
6	21-0360	1	Nut-Hex				
7	94-5209	1	Cover-Dust				
8	94-5210	1	Rod-Push				
9	92-4109	1	Circlip				
10	92-4108	1	Retainer-Washer				
11	92-4101	1	Primary Piston ASM				

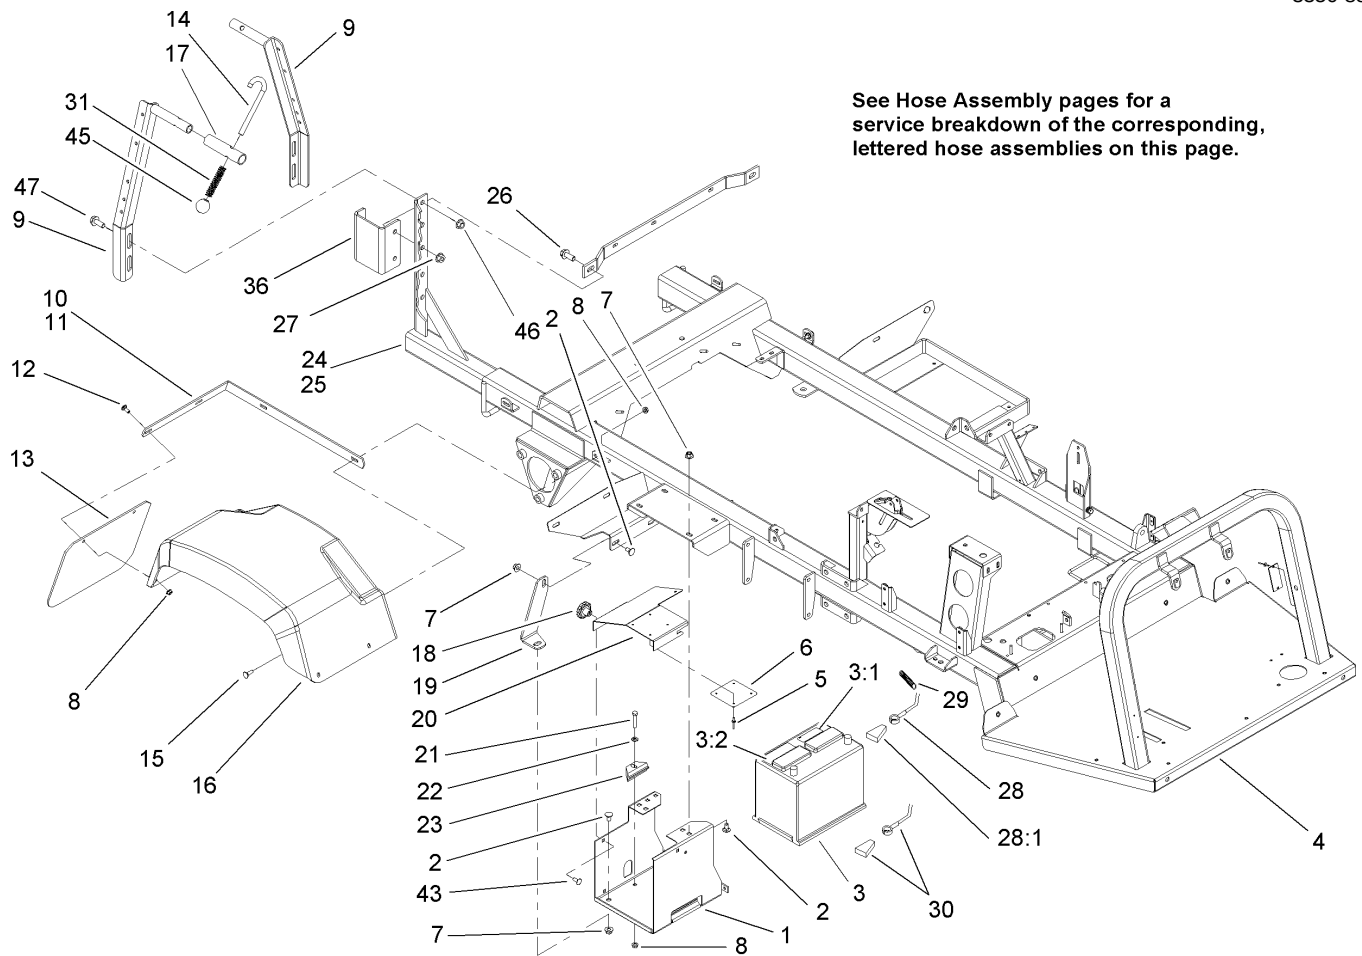 

Rear Fender and Battery Mount Assembly


Ref	Part No.	Qty.	Description
1	87-5120-03	1	Bracket-Holder, Battery
2	3231-1	4	Screw-CARR
3	55-7290	1	Battery (Dry)
3:1	26-7170	1	Decal-Battery, Wisco
3:2	26-7180	1	Decal-Battery
4	100-8339-03	1	Mainframe ASM
5	3269-27	4	Rivet-Snap
6	87-7620	1	Shield-Terminal, Battery
7	32128-43	4	Nut-Flange
8	32128-20	13	Nut-HF
9	106-5082-03	2	Hold-Boom
10	100-8246-03	1	Mount-Fender, RH
11	100-8245-03	1	Mount-Fender, LH
12	3230-1	8	Bolt-CARR
13	100-8259	2	Guard-Splash
14	92-8562	2	Hook-Restraint, Boom
15	3230-2	4	Bolt-CARR
16	93-6498	2	Fender-Rear
17	92-8561	2	Hose-Hold In
18	19-4050	2	Knob
19	100-8201-03	1	Support-Battery
20	87-5130-03	1	Cover-Battery
21	322-9	1	Screw-HH
22	3256-23	1	Washer-Flat

Ref	Part No.	Qty.	Description
23	66-2490	1	Retainer-Battery
24	106-4960	1	Boom Mount ASM LH
25	106-4961	1	Boom Mount ASM RH
26	3234-32	4	Screw-HHF
27	32128-49	6	Nut-HHF
28	99060	1	Cable-Ground
28:1	106-4915	1	Cap-Protective, Blue
29	104-8742	1	Conduit-Cable, Battery
30	106-5113	1	Cable-Battery, Positive
31	92-8563	2	Spring
36	100-8431-03	2	Bracket-Mounting, Boom
43	3230-23	2	Screw-CARR
45	92-8564	2	Knob
46	32128-23	4	Nut-HF
47	3234-32	4	Screw-HHF

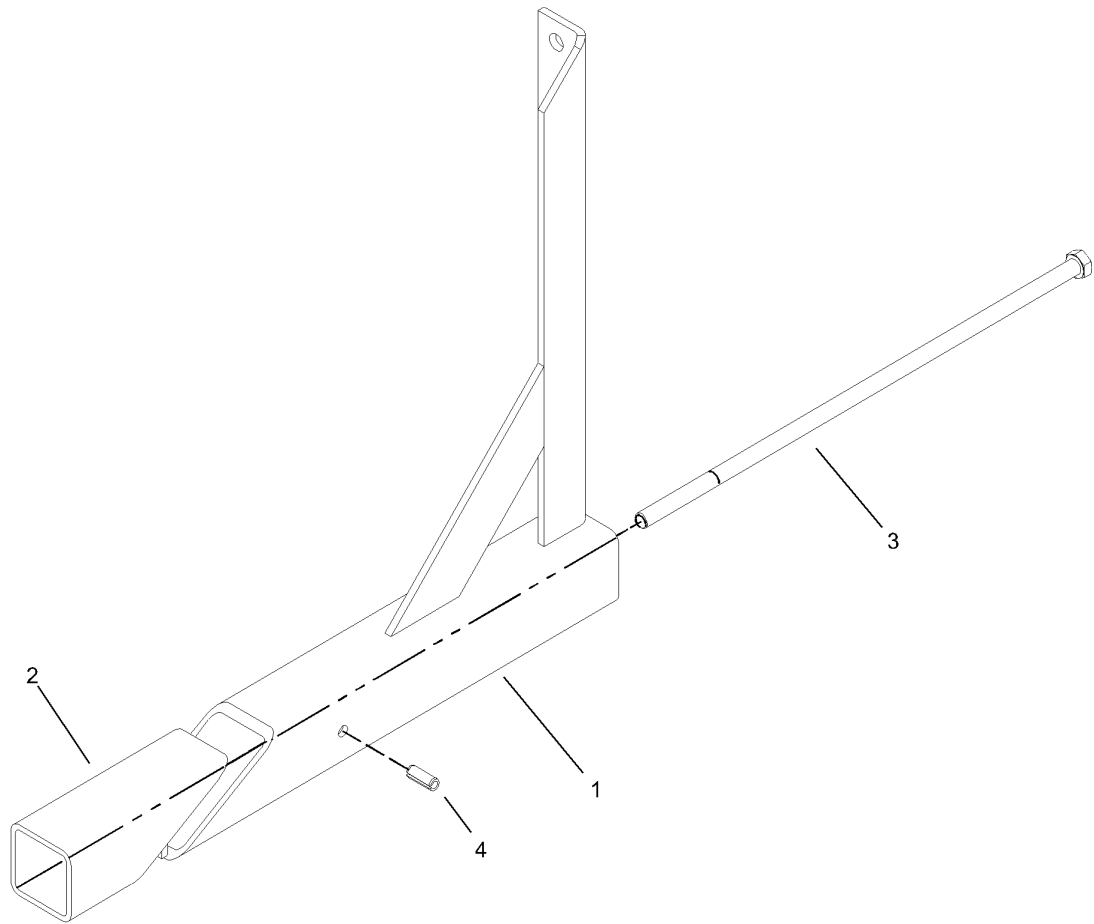 


Right Hand Boom Mount Assembly No. 106-4960

Ref	Part No.	Qty.	Description				
1	42222-03	1	RH Boom Mount ASM				
2	42223-03	1	Wedge Tube ASM				
3	42199	1	Bolt				
4	32121-41	1	Pin-Roll				
PROTOTYPE							

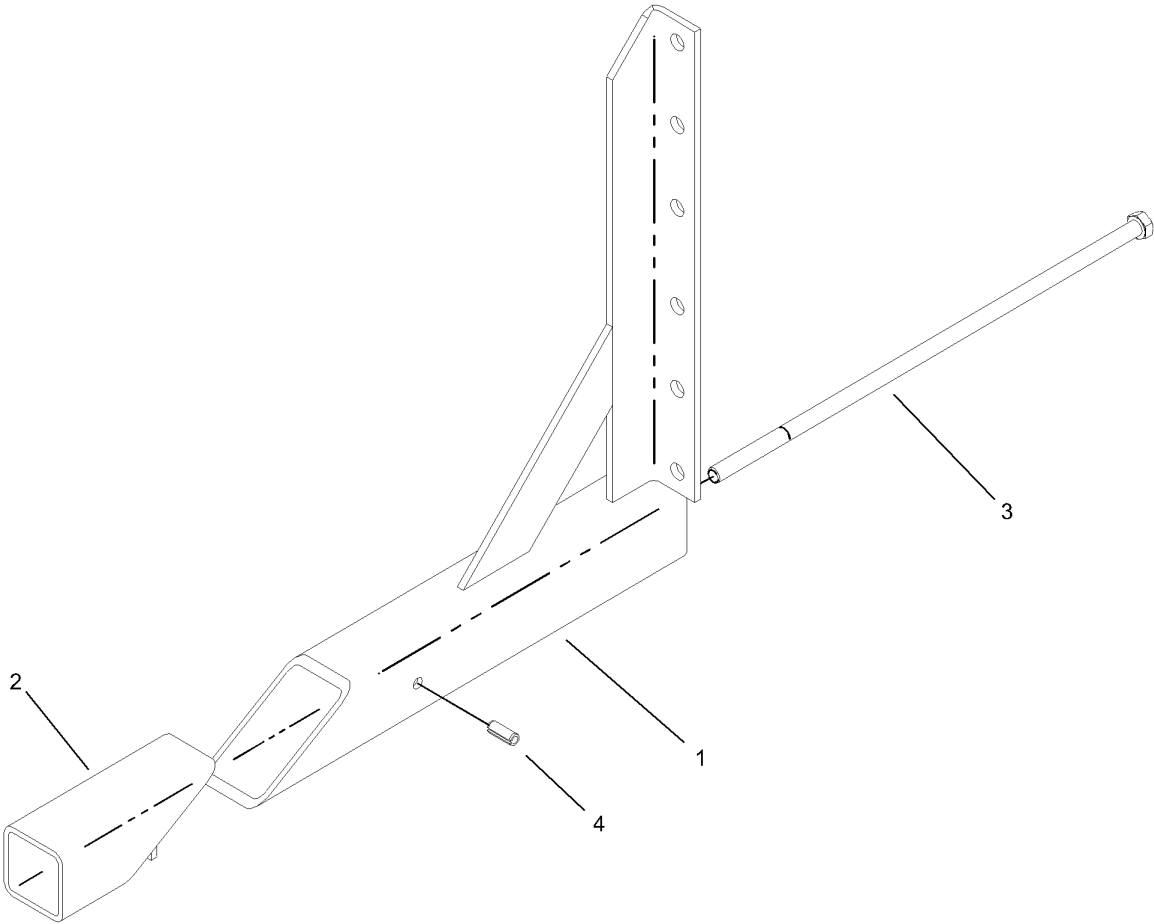 


Left Hand Boom Mount Assembly No. 106-4961

Ref	Part No.	Qty.	Description				
1	42217-03	1	LH Boom Mount ASM				
2	42223-03	1	Wedge Tube ASM				
3	42199	1	Bolt				
4	32121-41	1	Pin-Roll				
PROTOTYPE							

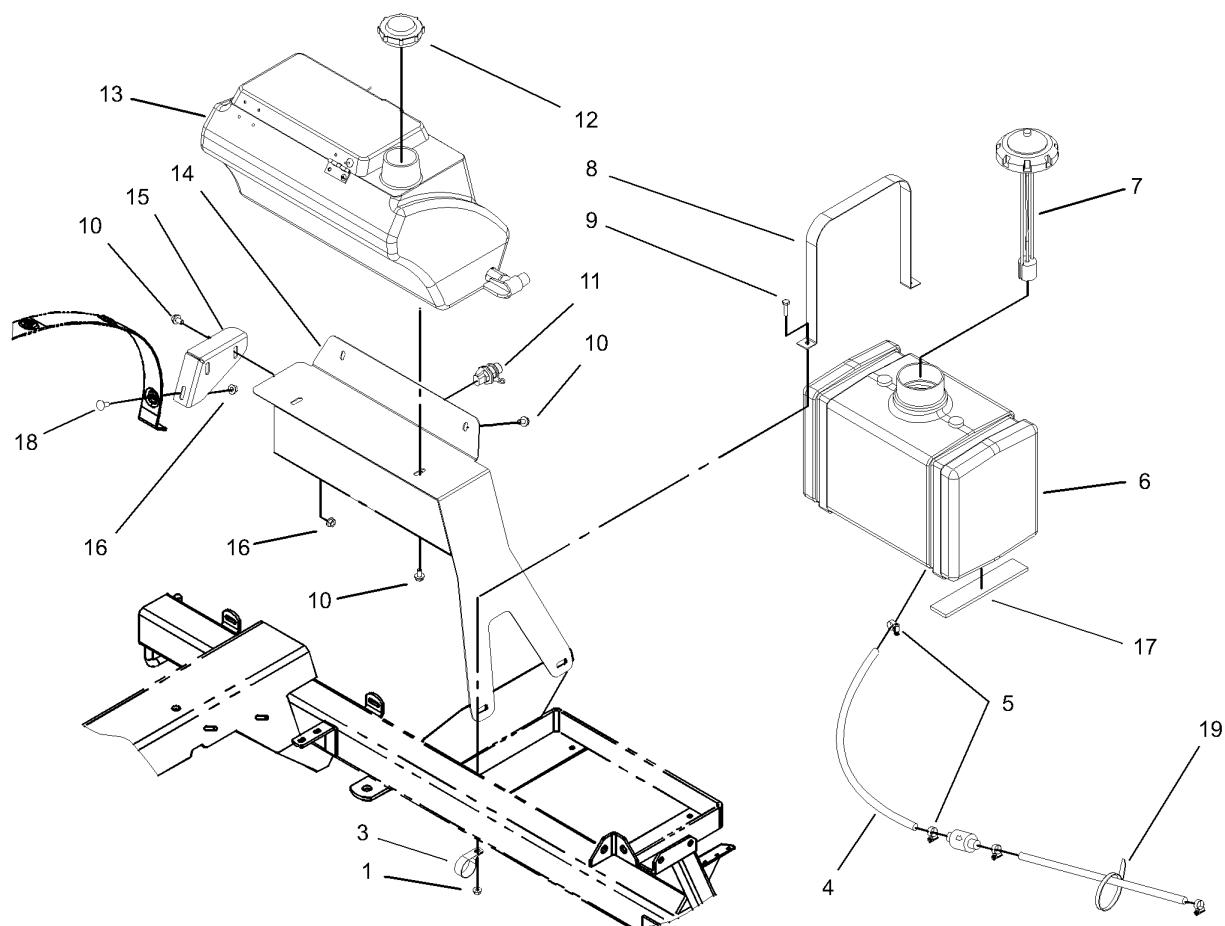 


Fresh Water Tank Assembly

Ref	Part No.	Qty.	Description				
1	32128-33	4	Nut-HF				
3	2412-74	1	R-Clamp				
4	100-8387	1	Hose-Fuel				
5	2412-108	2	Clamp-Worm				
6	100-8294	1	Tank-Fuel				
7	100-8386	1	Fuel Cap And Guage ASM				
8	106-4867-03	2	Strip-Hold Down, Gas Tank				
9	321-6	4	Screw-HH				
10	3234-28	6	Screw-HHF				
11	104-8914	1	Latch-Storage Box				
12	100-7008	1	Cap-Tank, Fresh Water				
13	100-8438	1	Fresh Water Tank ASM				
14	104-8912	1	Tank Bracket ASM				
15	100-8401-03	1	Plate-Tank Mount				
16	32128-20	3	Nut-HF				
17	100-8524	2	Foam-Strip, Gas Tank				
18	3230-1	1	Bolt-CARR				
19	3290-379	1	Tie-Cable				

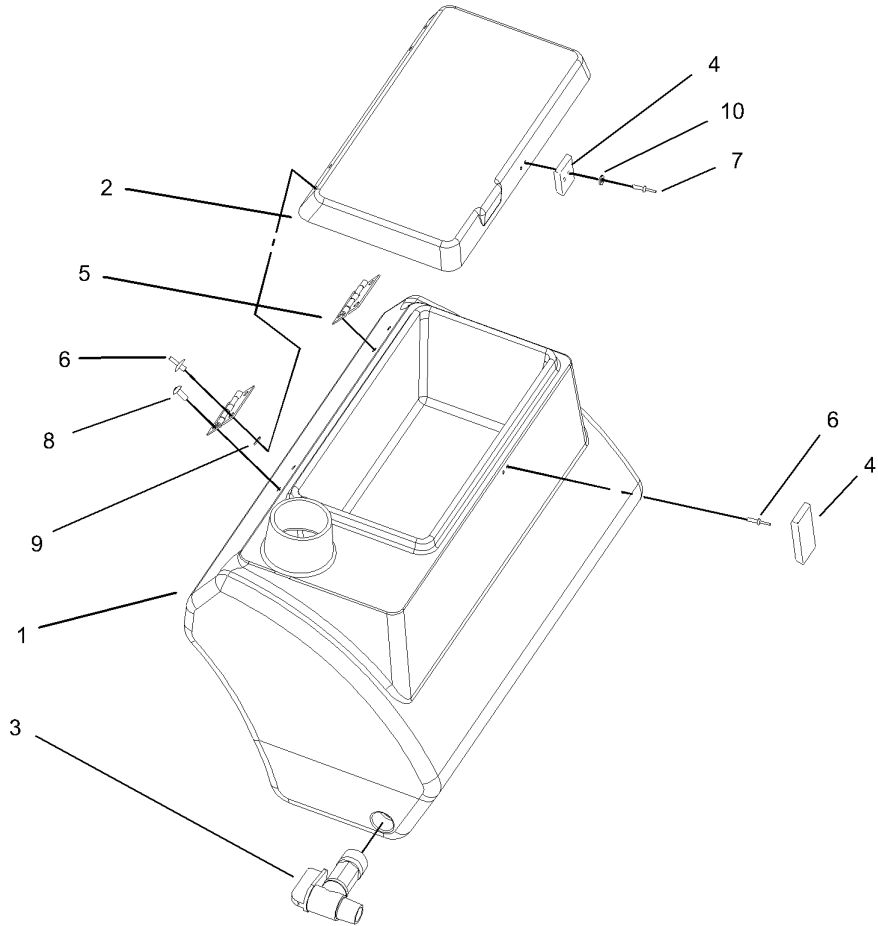 

Fresh Water Tank Assembly No. 100-8438


Ref	Part No.	Qty.	Description				
1		1	Tank-Fresh Water				
2	100-8397	1	Cover-Tank				
3	100-7011	1	Spigot-90 DEG				
4	100-7009	1	Latch-Draw				
5	100-7010	2	Hinge				
6	100-7062	4	Rivet				
7	100-7063	4	Rivet				
8	100-7064	4	Screw				
9	100-7065	4	Washer				
10	100-7066	2	Washer				

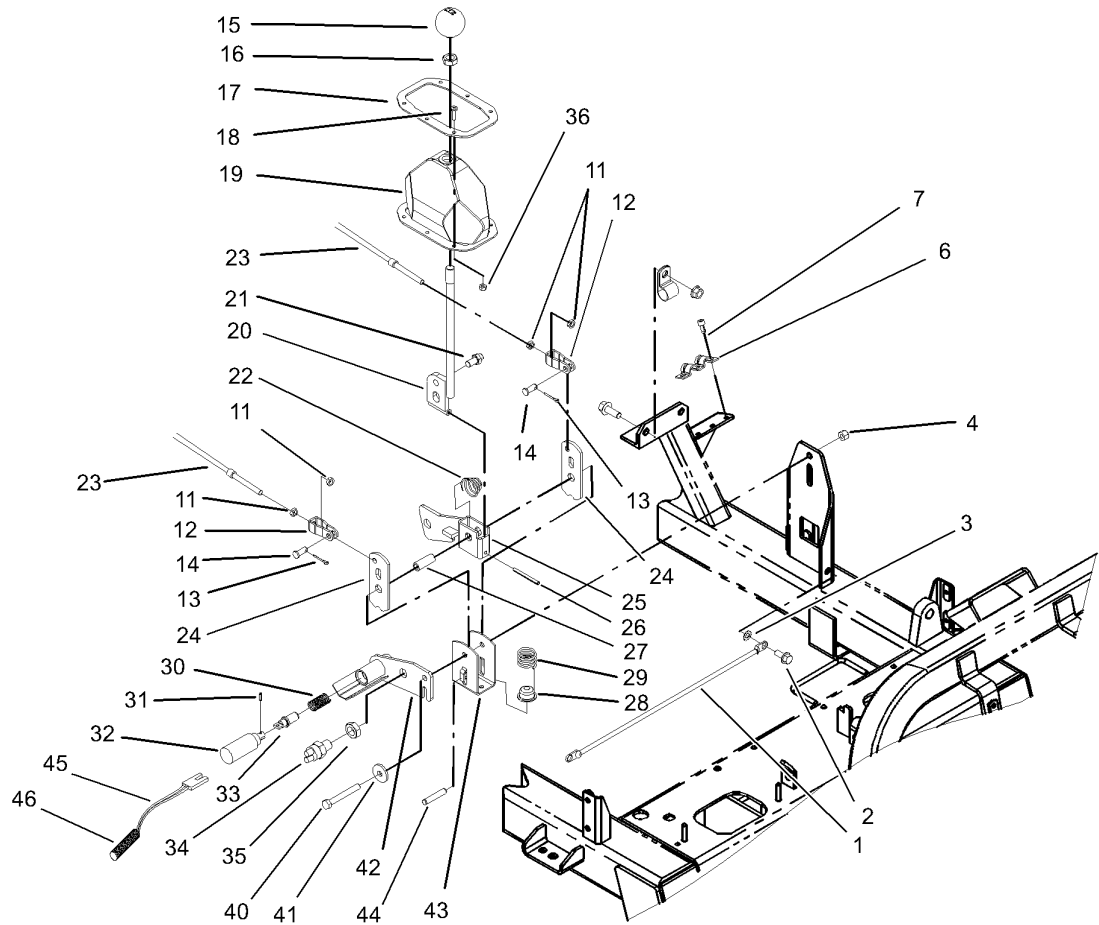 

Shifter Assembly


Ref	Part No.	Qty.	Description
1	42617	1	Cable-Ground
2	3234-5	1	Screw
3	3255-8	1	Washer-Lock
4	3296-29	1	Nut-Lock, NI
6	87-4960	1	Clamp-Cable
7	65-5220	3	Screw-Forming, Thread
11	3220-1	4	Nut-Jam
12	87-2310	2	Clevis-Cable
13	3272-6	2	Pin-Cotter
14	283-62	2	Pin-Clevis
15	87-6720	1	Knob-Shift
16	3218-18	1	Nut-Jam
17	87-3760-03	1	Plate-Boot, Shift
18	3250-13	6	Screw-PPH
19	87-8620	1	Shift Boot ASM
20	87-2040	1	Shift Lever ASM
21	87-3650	1	Pin-Shift
22	87-2900	1	Spring-Compression
23	100-8359	2	Cable-Shift, R/I
24	87-3540	2	Link-Shift
25	100-6749	1	Shifter Bracket ASM
26	32121-48	1	Pin-Spring
27	87-2520	1	Tube-Pivot
28	87-3530	1	Button-Shifter

Ref	Part No.	Qty.	Description
29	87-3660	1	Spring-Compression
30	100-6754	1	Spring-Compression
31	32121-7	1	Pin-Spring
32	100-6741	1	Solenoid
33	100-6746	1	Pin-Shift Limiter
34	83-1890	1	Switch-Ball
35	3220-11	1	Nut-Jam
36	3296-2	6	Nut-Lock
40	322-12	1	Screw-HH
41	356303	1	Washer
42	100-6747	1	Solenoid Mount ASM
43	87-3520	1	Clevis
44	3290-507	1	Pin-Dowel
45	100-6751	1	Harness-Shift Limiter
46	100-7072	1	Protector-Wire

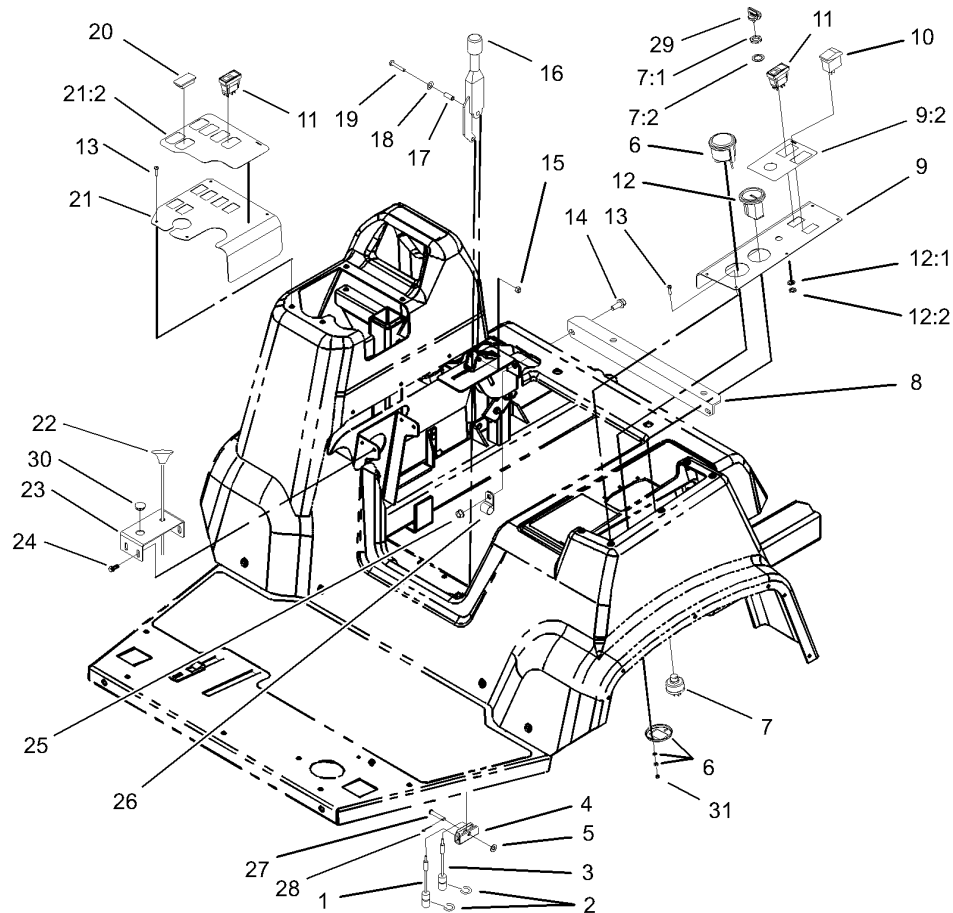 


Parking Brake and Console Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	87-8240	1	Cable-Brake	20	99-7420	5	Plug-Hole
2	32120-47	2	Ring-Retaining, External	21	104-8866	1	Spray Control Panel ASM
3	100-8261	1	Cable-Park Brake, RH	21:2	104-8749	1	Decal-Spray Control
4	87-3480	1	Bracket-Equalizer, Cable	22	41697	1	Choke-Control
5	3256-23	1	Washer-Flat	23	100-8385-03	1	Bracket-Throttle Speed
6	42610	1	Voltmeter	24	32144-10	4	Screw-HWH
7	83-0020	1	Switch-Ignition	25	32128-21	2	Nut-HF
7:1	218-461	1	Nut-HH	26	2412-81	2	Clamp-R
7:2	3254-5	1	Washer-Tooth	27	94-3829	1	Pin-Clevis
8	100-8532-03	1	Angle-Seatbox	28	3272-6	1	Pin-Cotter
9	100-8452	1	Vehicle Control Panel ASM	29	63-8360	1	Key-Ignition
9:2	100-8470	1	Decal-Controls	30	93-0830	1	Plug-Hole
10	100-8469	1	Switch-Rocker	31	32149-9	2	Nut
11	104-9007	2	Switch-Rocker				
12	66-2950	1	Gauge-Hourmeter				
12:1	3255-20	2	Washer-Lock				
12:2	3217-25	2	Nut-Hex				
13	3250-25	9	Screw-PPH				
14	3234-11	2	Screw-HHF				
15	3296-42	1	Nut-Lock, NI				
16	87-2710	1	Lever-Brake				
17	87-4710	1	Spacer-Brake, Parking				
18	3290-477	1	Washer-Curved				
19	321-9	1	Screw-HH				

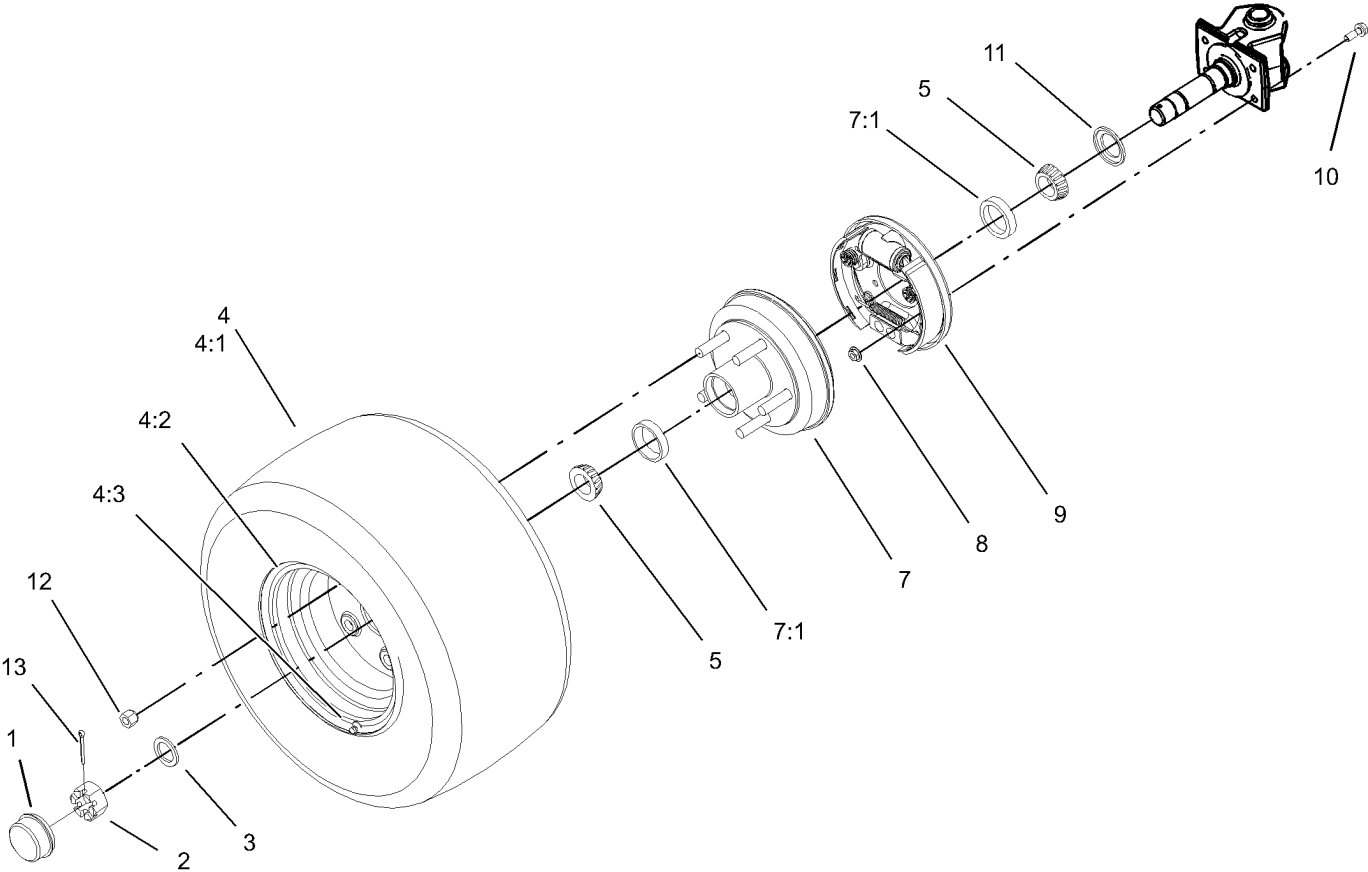 


Front Wheel Assembly

Ref	Part No.	Qty.	Description				
1	241-119	2	Cap-Dust	PROTOTYPE			
2	1-809082	2	Nut-SHH				
3	27-1850	2	Washer-Pivot				
4	93-6487	2	Front Tire And Wheel ASM				
4:1	93-6486	1	Tire				
4:2	241-121	1	Wheel ASM				
4:3	232-27	1	Stem-Valve				
5	254-92	4	Cone-Bearing, Outer				
7	100-8287	2	Hub/drum-Front				
7:1	254-72	2	Bearing-Cup, Tapered				
8	32128-28	8	Locknut				
9	100-8285	2	Front Brake ASM				
10	86-8610	8	Screw-HHF				
11	253-129	2	Seal				
12	321077	10	Nut-Wheel				
13	3272-13	2	Pin-Cotter				

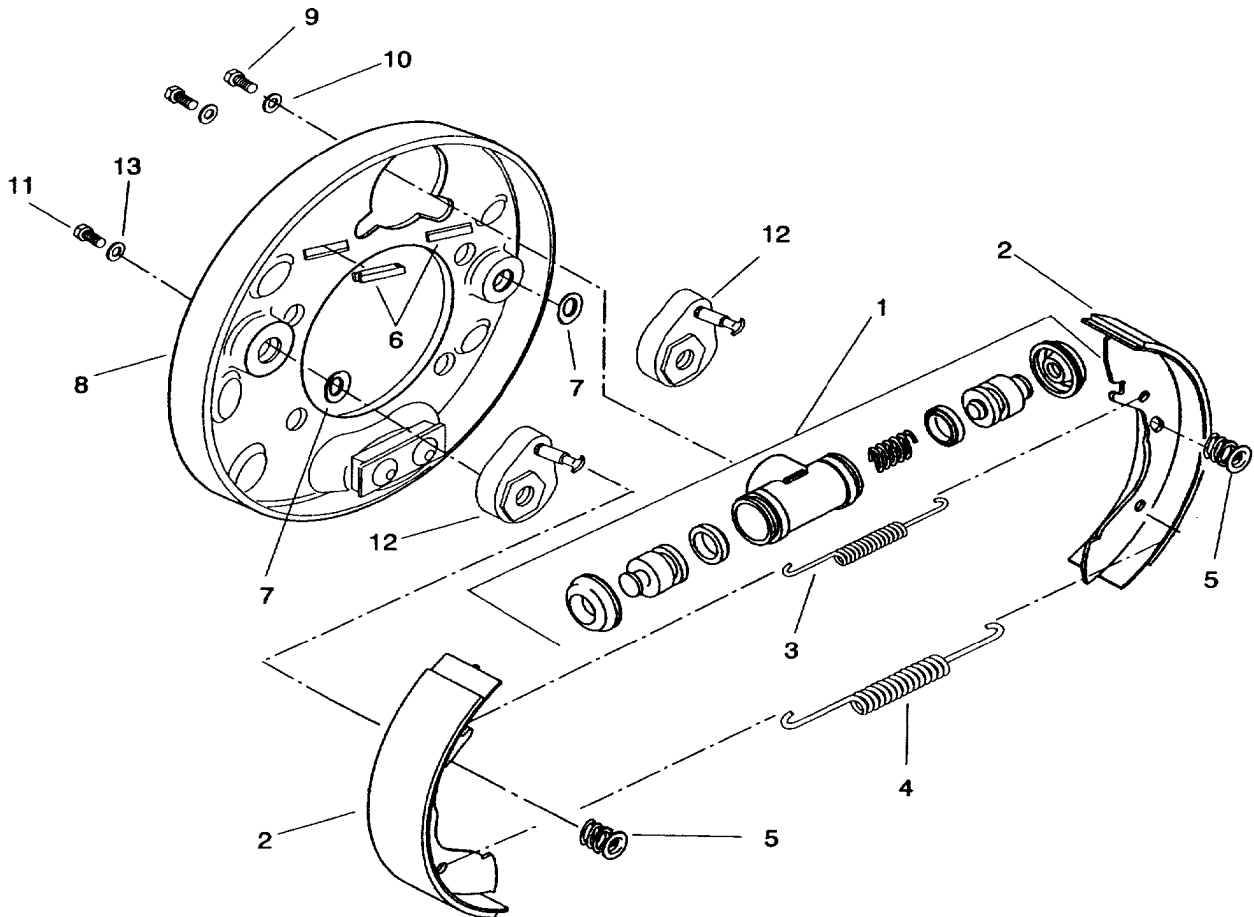 


Front Brake Assembly No. 100-8285

Ref	Part No.	Qty.	Description				
1	100-8580	1	Wheel Cylinder ASM				
2	100-8587	1	Shoe Set				
3	100-8581	1	Spring-Upper				
4	100-8582	1	Spring-Lower				
5	100-8583	2	Shoe Hold Down Spring ASM				
6	100-8584	2	Cover-Dust				
7	100-8585	2	Washer-Bellville				
8	100-8586	1	Backing Plate ASM				
9	33103-012	2	Screw-HHF				
10	3253-3	2	Washer-Lock				
11	329-2	2	Screw-HH				
12	100-8588	2	Adjuster Lever ASM				
13	3256-1	2	Washer-Flat				

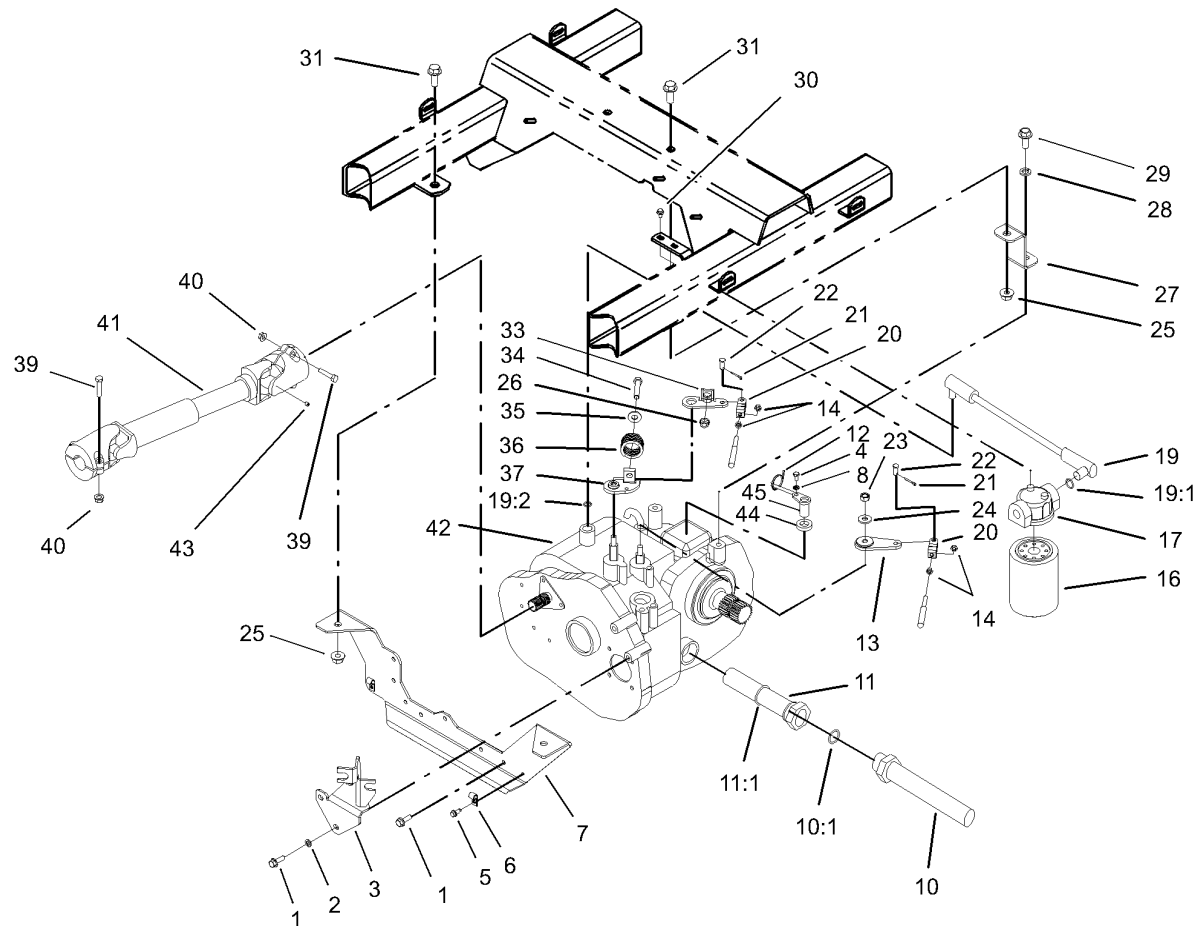 


Transaxle Installation Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	33104-025	10	Screw-HHF	24	80-6990	2	Washer-Hardened
2	3253-4	10	Washer-Lock	25	32128-49	2	Nut-HHF
3	100-8303-03	1	Mount-Cable	26	32128-21	1	Nut-HF
4	33113-012	1	Screw-HH	27	100-8220-03	2	Strap-Transaxle Mount
5	32144-10	2	Screw-HWH	28	3253-7	2	Washer-Lock
6	2412-89	2	Clamp	29	33106-030	2	Screw-HHF
7	100-8531-03	1	Transaxle-Mount	30	3234-33	2	Screw-HHF
8	48-8020	1	Washer-Spring	31	3234-32	4	Screw-HHF
10	100-8250	1	Hose-Suction	33	87-8250	1	Plate-Arm, Shift
10:1	237-81	1	O-Ring	34	323-10	1	Screw-HH
11	87-3990	1	Strainer-Transaxle	35	3256-4	1	Washer-Flat
11:1	237-123	1	O-Ring	36	87-6910	1	Spring-Compression
12	3290-379	1	Tie-Cable	37	87-7970	1	Arm-Shift
13	87-7960	1	Lever-Shift	39	322-7	4	Screw-HH
14	3220-1	4	Nut-Jam	40	3296-29	4	Nut-Lock, NI
16	54-0110	1	Filter-Oil, Transmission	41	100-8293	1	Drive Shaft-Input
17	87-8780	1	Head-Filter	42	104-9078	1	Transaxle
19	100-8254	1	Hose-Axle Return	43	3245-32	1	Screw-HS
19:1	237-79	1	O-Ring	44	92-3735	1	Oil Seal-Sensor
19:2	237-42	1	O-Ring	45	85-4350	1	Sensor-Geartooth
20	87-2310	2	Clevis-Cable				
21	3272-6	2	Pin-Cotter				
22	283-62	2	Pin-Clevis				
23	48-9520	2	Nut				

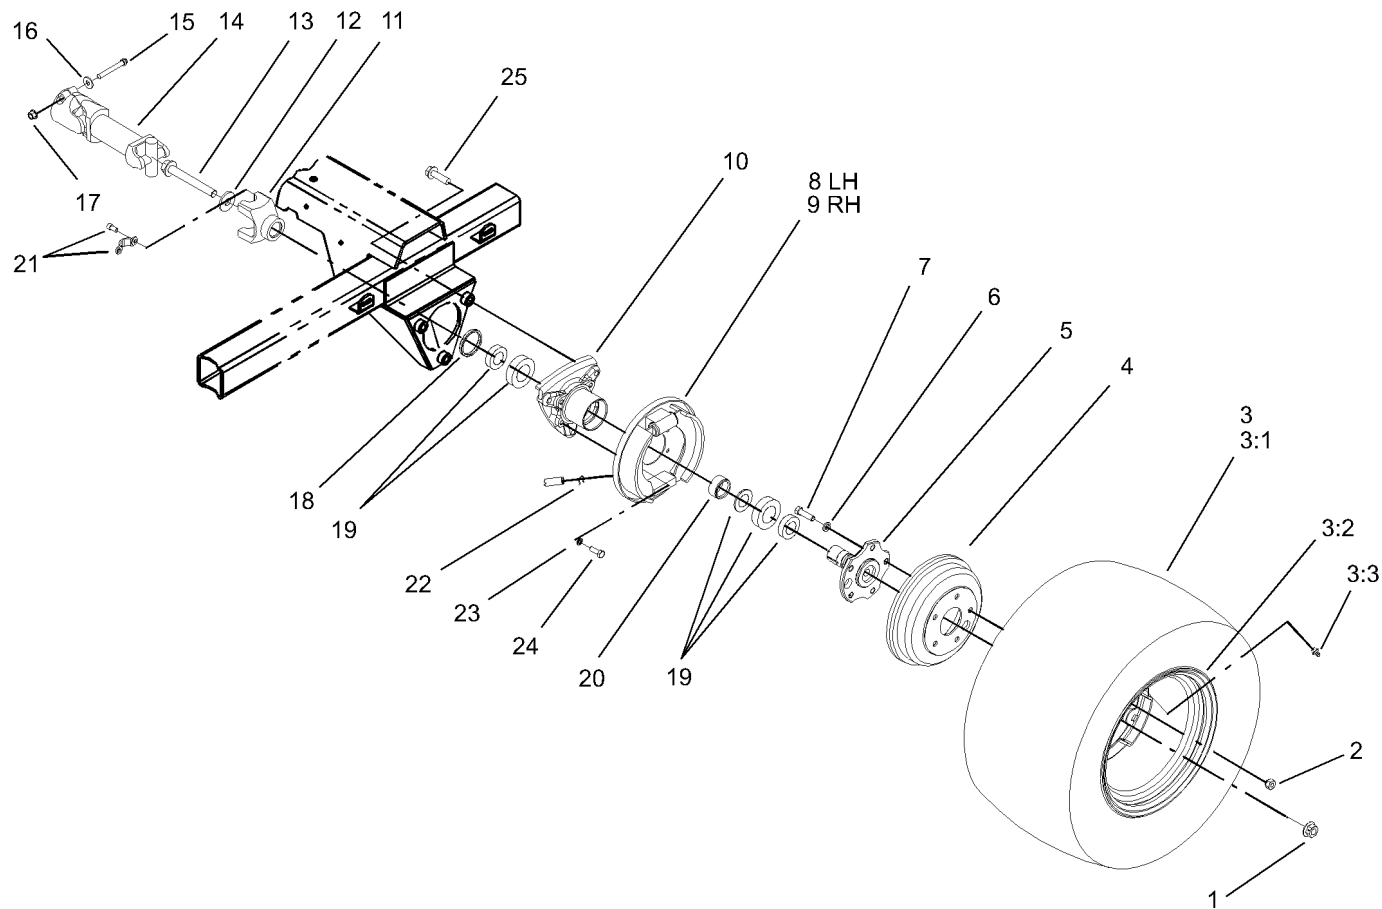 

Rear Wheel Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	105-1764	2	Nut-Flange, Side Lock	22	87-3310	2	Clip-Cable, Brake
2	321077	10	Nut-Wheel	23	3253-21	8	Washer-Lock
3	87-5370	2	Rear Tire And Wheel ASM	24	323-6	8	Screw-HH
3:1	87-6740	1	Tire-Rear	25	3234-22	6	Screw-HHF
3:2	87-6750	1	Wheel				
3:3	232-27	1	Stem-Valve				
4	93-7128	2	Drum-Brake				
5	105-1717-03	2	Axle-Stub				
6	3253-6	10	Washer-Lock				
7	87-2080	10	Bolt-Hex, TAP				
8	93-7126	1	LH Rear Brake ASM				
9	93-7125	1	RH Rear Brake ASM				
10	87-2240-03	2	Housing-Axle				
11	92-4190	2	Yoke				
12	104-9216	2	Washer-Hardened				
13	105-1763	2	Screw-Hfh				
14	98-2918	2	Driveshaft ASM				
15	98-2939	4	Screw-Cap				
16	80-6990	4	Washer-Hardened				
17	32128-36	4	Nut-HF				
18	87-3590	2	Seal-Bearing				
19	87-1970	2	Bearing				
20	87-4060	2	Spacer-Bearing, Wheel				
21	92-4189	2	Strap And Bolt Kit				

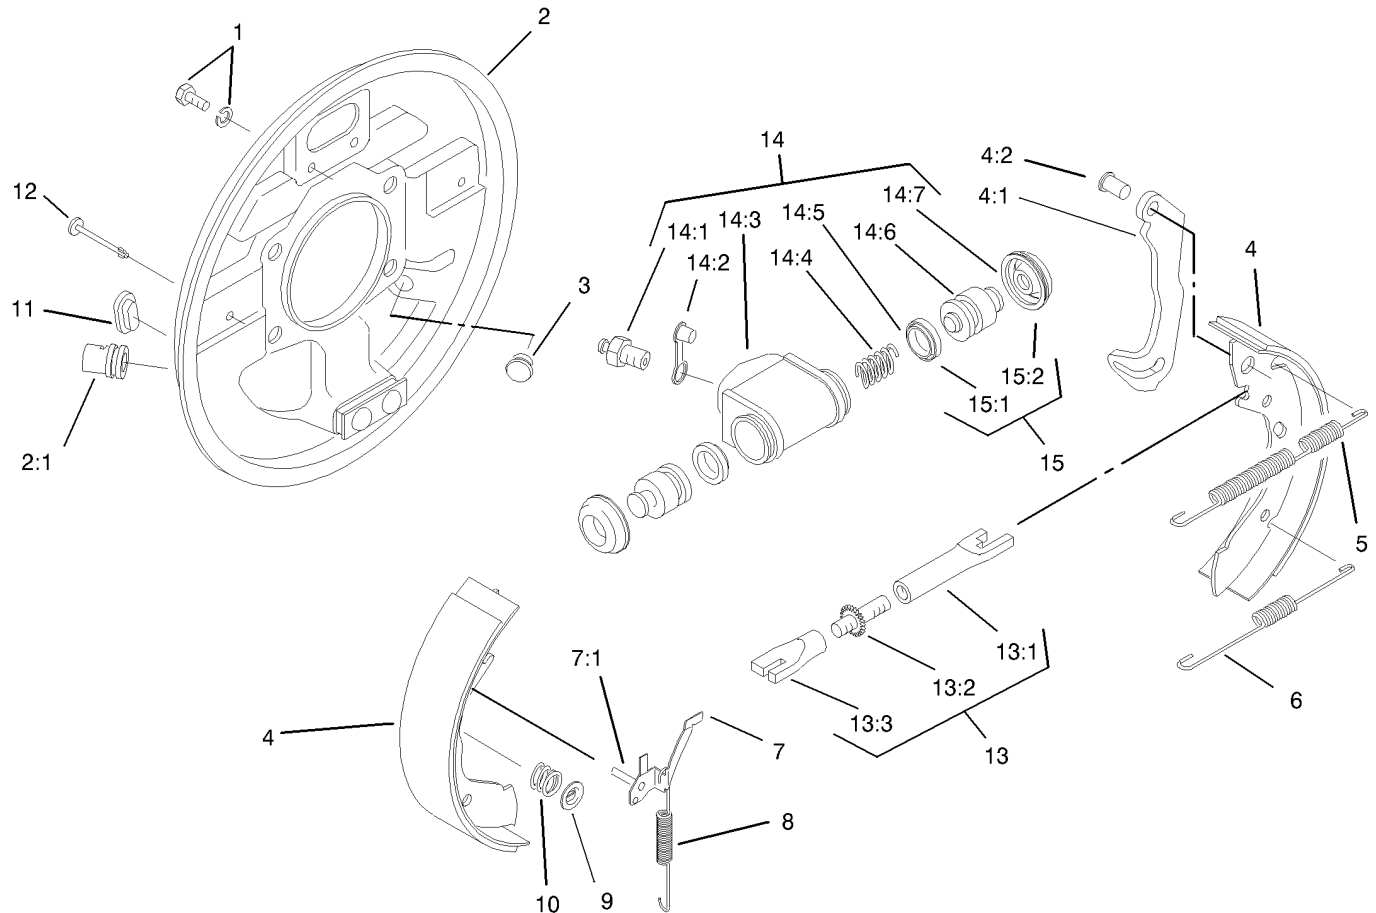 

Rear Brake Assembly No. 93-7125 (Right) and 93-7126 (Left)


Ref	Part No.	Qty.	Description
1	92-4135	2	Bolt-Set
2	92-4100	1	RH Backplate ASM
2	92-4136	1	LH Backplate ASM
2:1		1	Guide-Pipe
3	92-4146	1	Plunger ASM
4	92-4143	1	Lined Shoe Kit
4:1		1	Lever-Operating
4:2		1	Pin
5	92-4147	1	Spring-Shoe Ret, Upper LH
5	92-4148	1	Spring-Shoe Ret, Upper RH
6	92-4149	1	Spring-Shoe Ret, Lower
7	92-4124	1	RH Pawl Lever ASM
7	92-4123	1	LH Pawl Lever ASM
7:1		1	Pin-Pawl
8	92-4151	1	Spring-Adjuster, RH
8	92-4150	1	Spring-Adjuster, LH
9	92-4131	2	Washer-Hold Down, Shoe
10	92-4152	2	Spring-Hold Down, Shoe
11	92-4134	1	Plug-Inspection
12	92-4133	2	Pin-Hold Down, Shoe
13	92-4145	1	RH Adjustor ASM
13	92-4144	1	LH Adjustor ASM
13:1		1	Pushrod-Female
13:2		1	Bolt-Adjuster

Ref	Part No.	Qty.	Description
13:3		1	Sleeve-Adjuster
14	92-4141	1	RH Wheel Cylinder ASM
14	92-4140	1	LH Wheel Cylinder ASM
14:1	92-4137	1	Screw-Bleed
14:2	92-4114	1	Cap-Screw, Bleed
14:3		1	Body
14:4		1	Spring
14:5		2	Seal-L- Type
14:6		2	Piston
14:7		2	Cover-Dust
15	92-4142	1	Seal Kit
15:1		2	Seal-L- Type
15:2		2	Cover-Dust

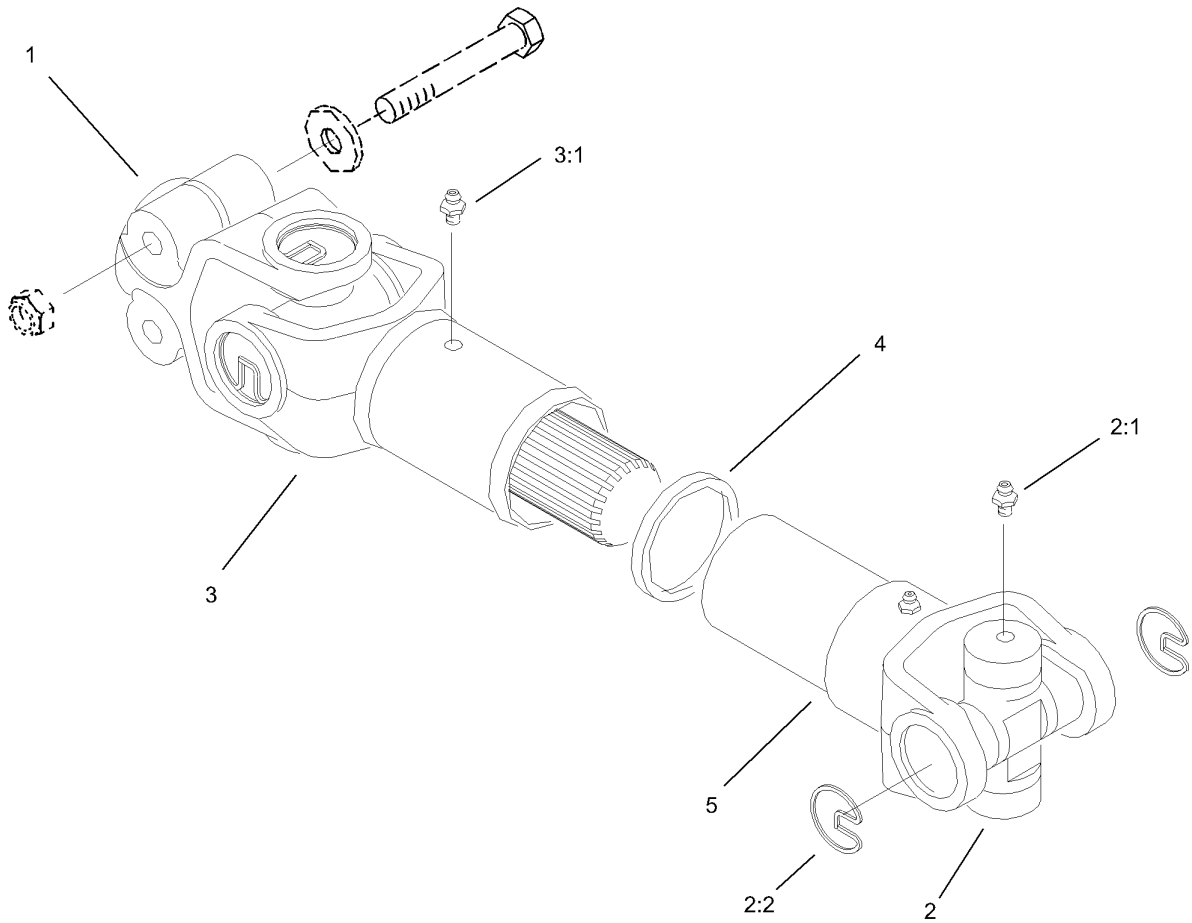 

Driveshaft Assembly No. 98-2918


Ref	Part No.	Qty.	Description				
1	98-2940	1	Yoke				
2	92-4187	2	Cross And Bearing Kit				
2:1	302-58	2	Fitting-Grease				
2:2	92-4188	2	Ring-Snap				
3	92-4179	1	Yoke-Tube, Shaft And Seal				
3:1	302-5	1	Fitting-Grease				
4	92-4180	1	Seal				
5	92-4182	1	Yoke And Hub				

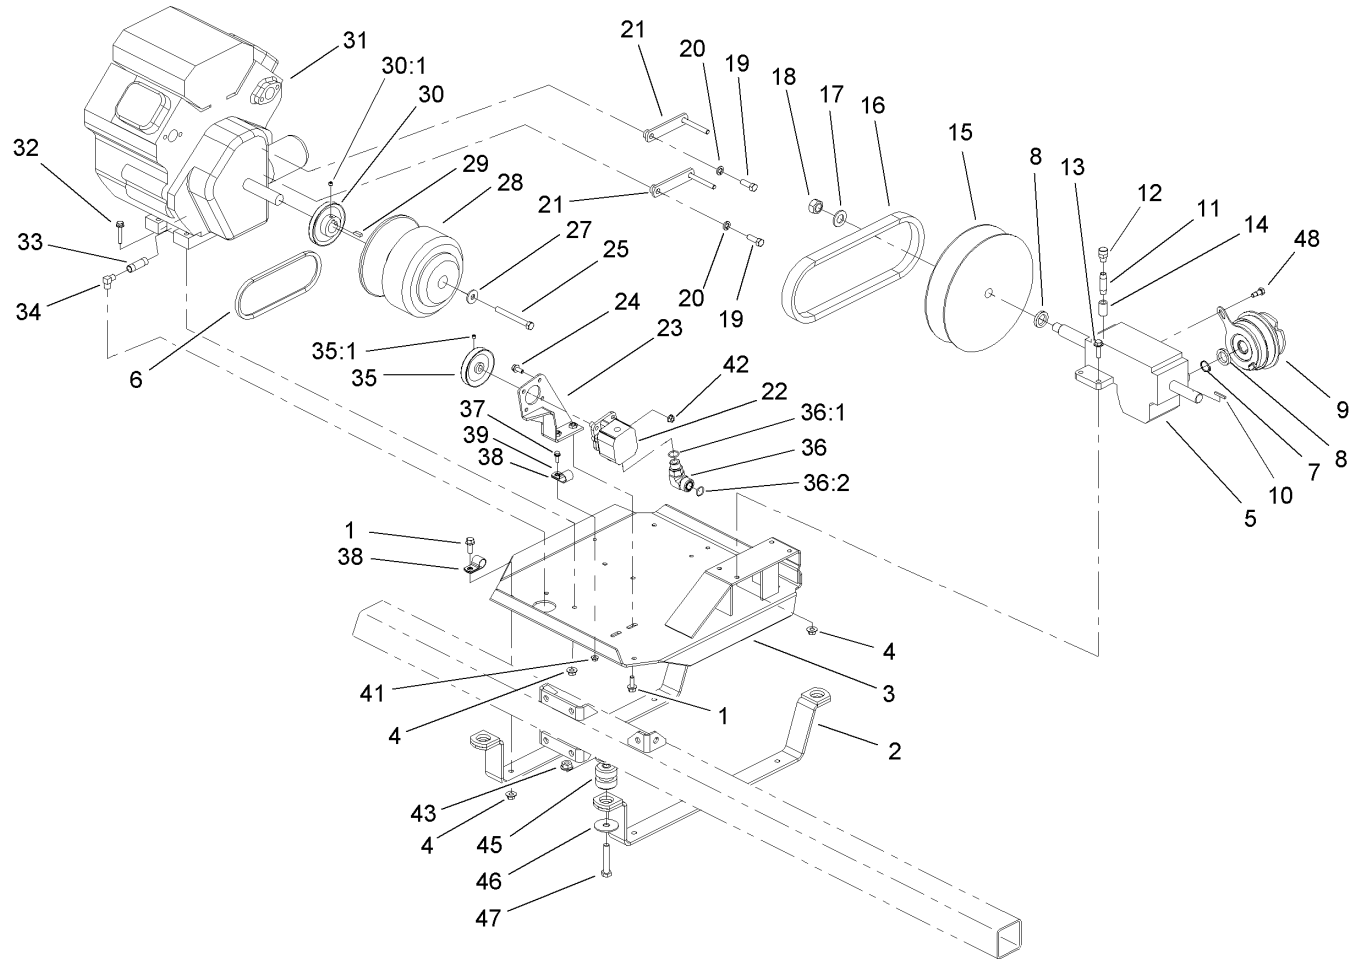 

Engine Installation Assembly


Ref	Part No.	Qty.	Description
1	3234-11	6	Screw-HHF
2	100-8377-03	2	Strap-Support, Engine
3	100-8357-03	1	Plate-Mounting, Engine
4	32128-43	12	Nut-Flange
5	99-0663	1	Gearbox-Pump Drive
6	100-8372	1	Belt-Steering
7	32151-36	1	Ring-Retaining
8	100-8390	2	Spacer
9	100-8290	1	Clutch-Electric, Pump Drive
10	92-0049	1	Key-Square
11	106-4869	1	Pipe-Coupling
12	100-6931	1	Breather
13	3234-24	4	Screw-HHF
14	104-8766	1	Nipple
15	100-8289	1	Drive Pulley ASM
16	99-0735	1	Belt-Cvt
17	3256-28	1	Washer-Flat
18	100-8486	1	Nut-Locking, LH
19	324-5	2	Screw-HH
20	3253-6	2	Washer-Lock
21	100-8373	2	Belt Guide ASM
22	100-8302	1	Pump-Steering
23	100-8368-03	1	Bracket-Pump, Steering
24	322-4	4	Screw-HH

Ref	Part No.	Qty.	Description
25	3212-16	1	Screw-HH
27	710128	1	Washer
28	100-8288	1	Clutch-Driver
29	100-8260	1	Key-Shaft
30	92-0488	1	Pulley-Pump, Power Steering
30:1	3246-2	1	Screw-Set, HSH
31	99-0819	1	Engine-Kohler, Ch20s Ps-64647
32	3234-19	4	Screw-HHF
33	92-3647	1	Nipple
34	95023	1	Elbow-90 DEG
35	100-8371	1	Pulley-Pump, Power Steering
35:1	3246-2	1	Screw-Set, HSH
36	340-16	1	Fitting-Hyd, 90
36:1	237-80	1	O-Ring
36:2	237-58	1	O-Ring
37	3234-4	1	Screw-HHF
38	2412-81	3	Clamp-R
39	3256-22	1	Washer-Flat
41	32128-33	1	Nut-HF
42	32128-20	4	Nut-HF
43	32128-49	4	Nut-HHF
45	87-4970	4	Engine Mount ASM
46	41985	4	Special-Washer
47	325-11	4	Screw-HH

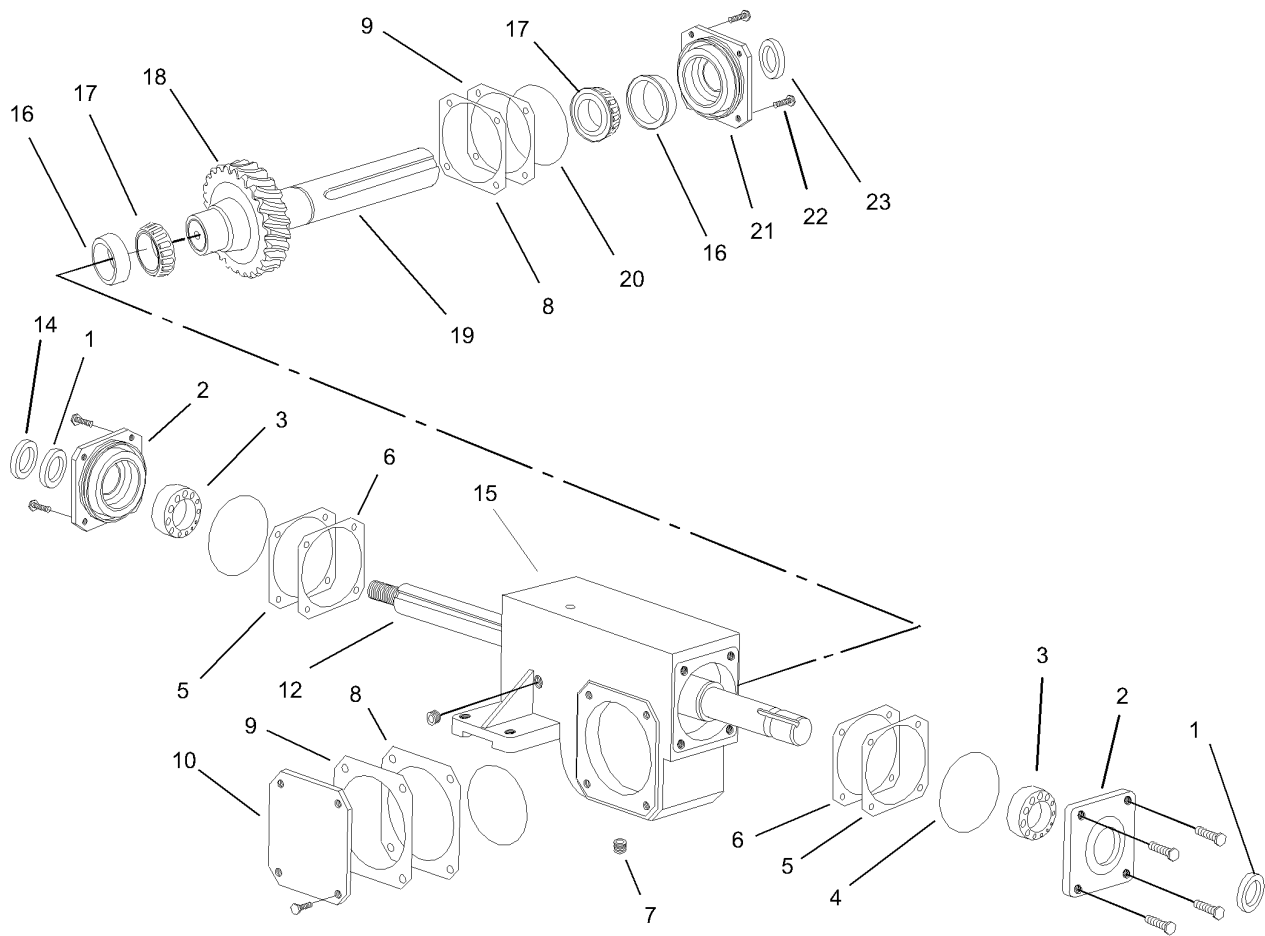 


Gearbox Assembly No. 99-0663

Ref	Part No.	Qty.	Description				
1	100-6929	2	Seal				
2	100-6930	2	Cap-Open				
3	251-348	2	Bearing-Ball				
4	100-6932	2	O-Ring				
5	100-6933	1	Shim-Red, .002				
6	100-6934	1	Shim-Blue, .005				
7	281-10	2	Plug				
8	100-6936	1	Shim-Blue, .005				
9	100-6937	1	Shim-Red, .002				
10	100-6938	1	Cap-Closed				
12	100-6940	1	Shaft-Worm				
14	100-8390	1	Spacer				
15		1	Housing-Gearbox				
16	254-72	2	Bearing-Cup, Tapered				
17	254-94	2	Bearing-Cone, Taper				
18	100-6944	1	Gear-Worm, S/1				
19	100-6946	1	Shaft-Output				
20	237-161	2	O-Ring				
21	100-6948	1	Cap-Open				
22	321-3	16	Screw-HH				
23	104-8764	1	Seal-Viton				

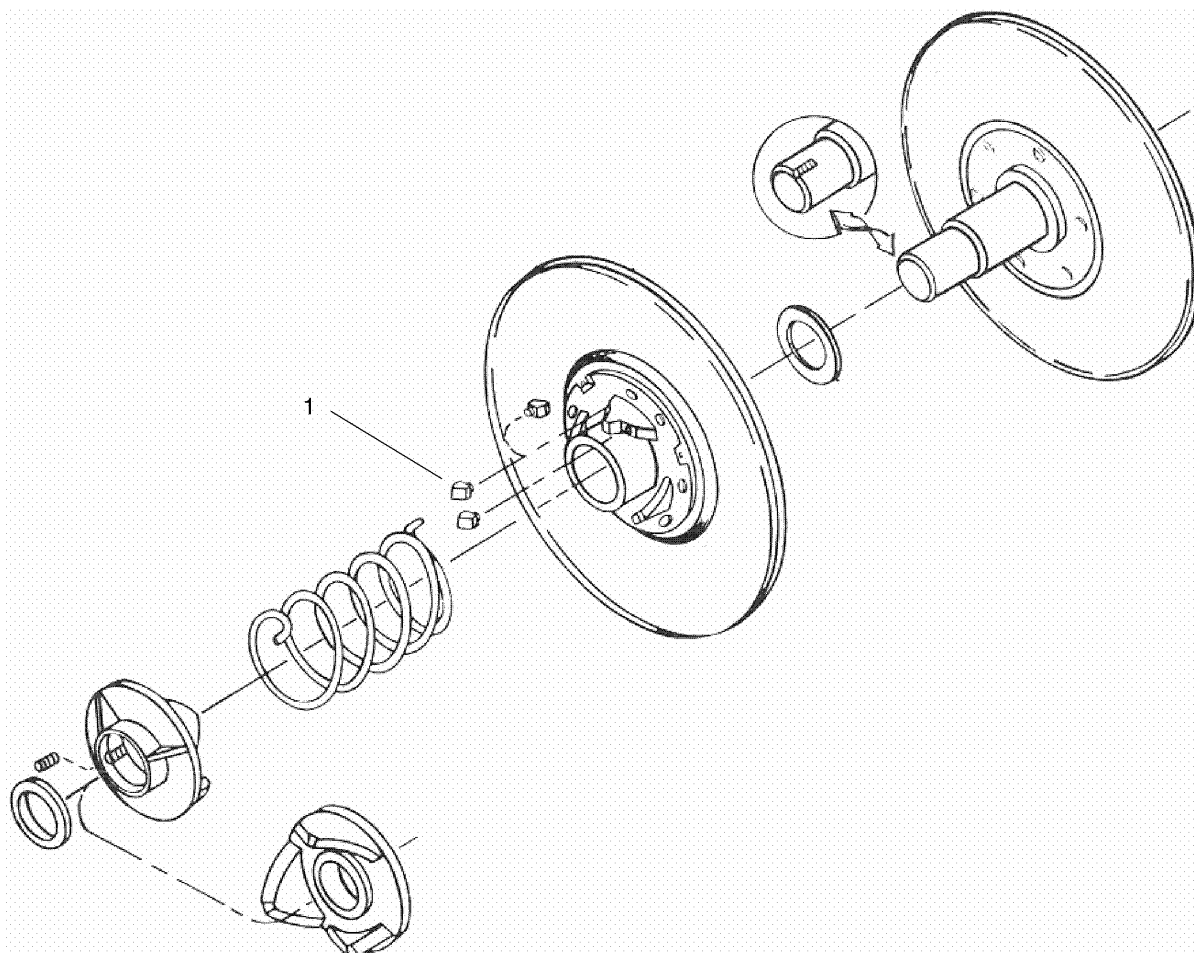 


Drive Pulley Assembly No. 100-8289

Ref	Part No.	Qty.	Description
1	104-1683	6	Button

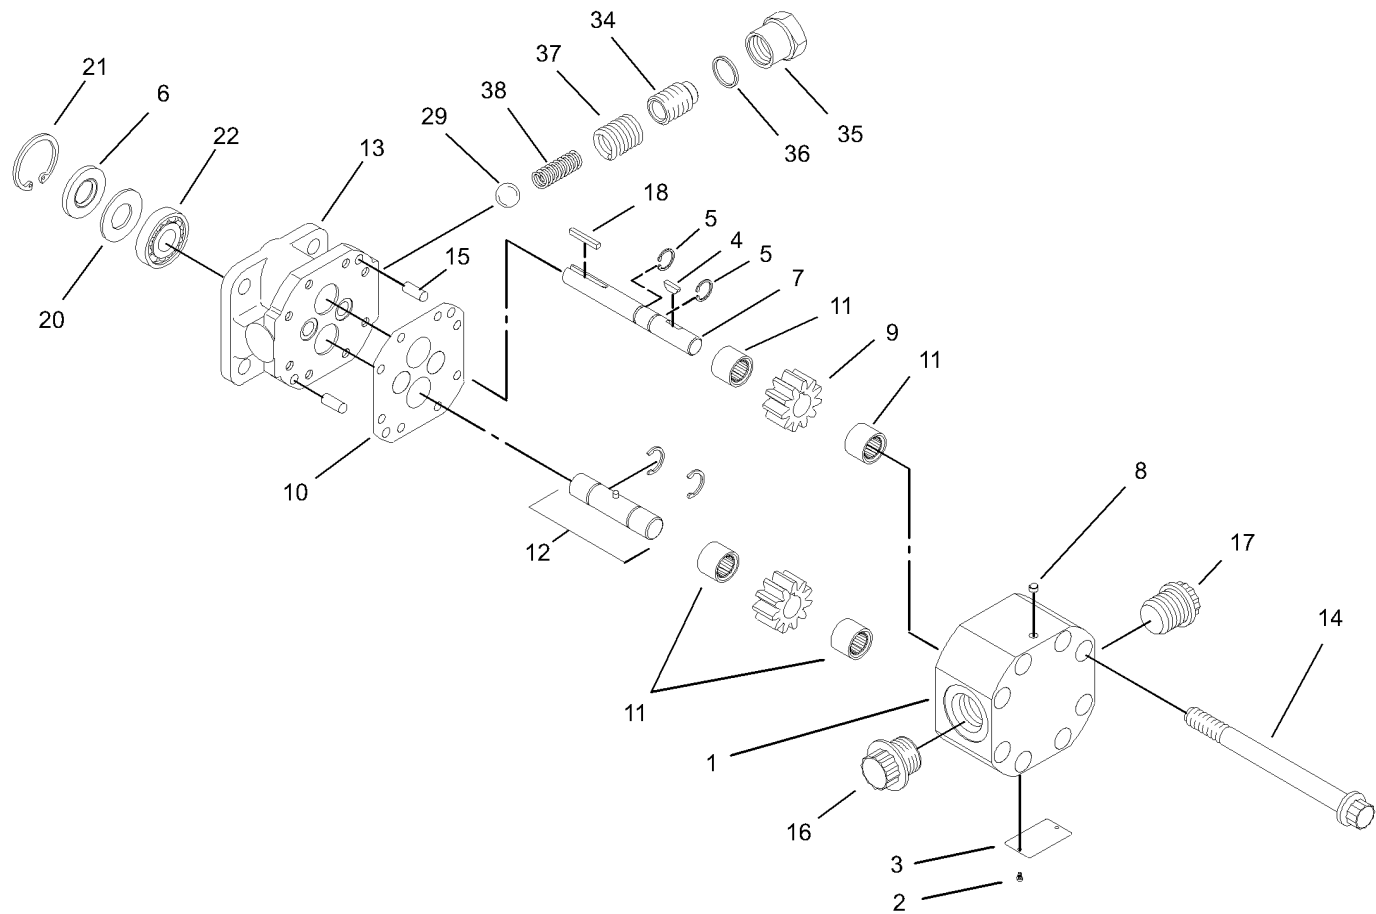 

Steering Pump Assembly No. 100-8302


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1		1	Housing	36	92-2180	1	Gasket-Copper
2		2	Screw	37	92-3870	1	Spring
3		1	Plate-Name	38	92-3871	1	Spring
4	100-8270	1	Key				
5	106-6851	2	Ring-Retaining				
6	100-8275	1	Seal				
7	106-6852	1	Shaft-Drive				
8	100-8269	1	Plug-Beta				
9	106-6853	1	Gear				
10	106-6854	1	Gasket Kit				
11	106-6855	4	Bearing-Needle				
12	106-6856	1	Shaft-Idler				
13		1	Stator				
14	100-8268	8	Screw				
15	100-8265	2	Pin-Shear				
16		1	Plug				
17		1	Plug				
18	92-3876	1	Key-Shaft				
20	92-2186	1	Spacer				
21	106-6857	1	Ring-Retaining				
22	92-2191	1	Bearing-Ball				
29	100-8273	1	Ball-Steel				
34	100-8272	1	Screw				
35	92-2184	1	Cap-Hex, Relief Valve				

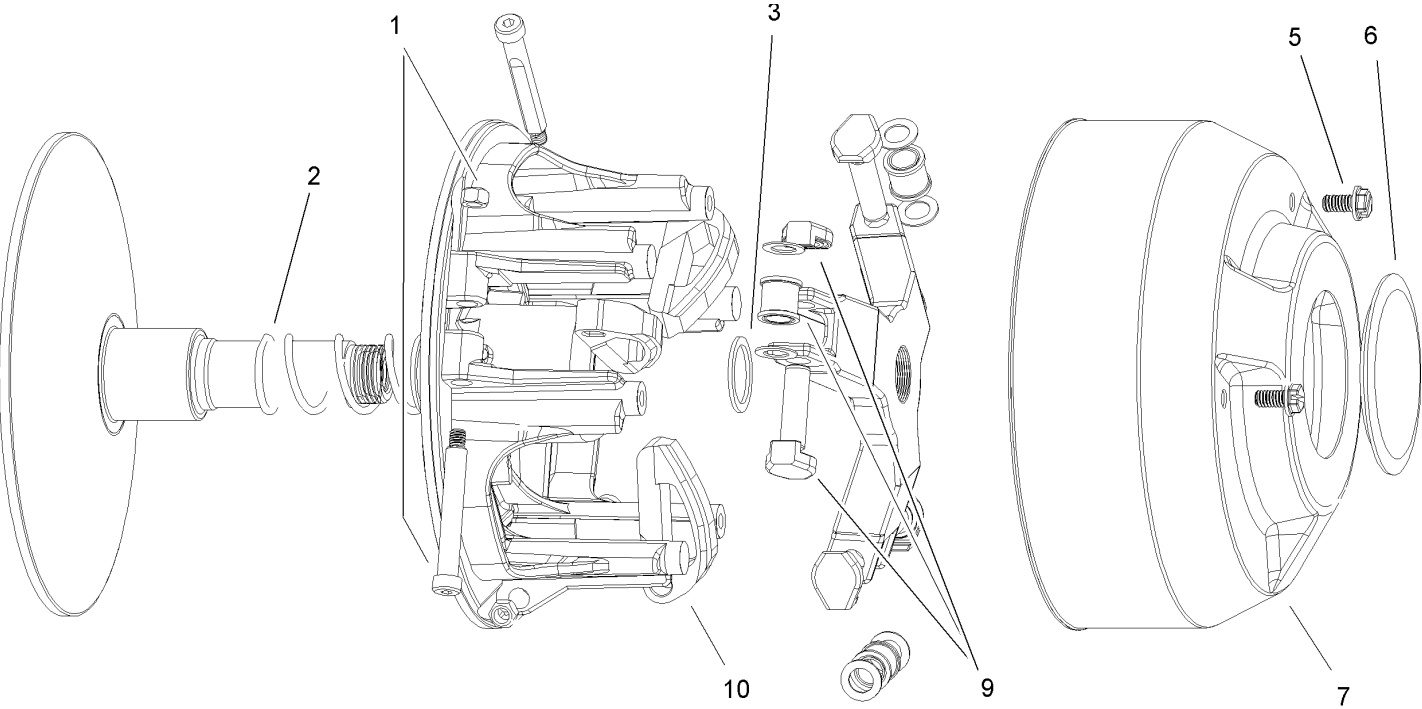 

Driver Clutch Assembly No. 100-8288


Ref	Part No.	Qty.	Description				
1	104-4256	1	Pivot Bolt And Nut Kit				
2	100-6921	1	Spring-White				
3	104-1687	1	Spacer				
5	3234-26	3	Screw				
6	104-1690	1	Cap				
7	104-1691	1	Cover				
9	104-1697	1	Spider Roller Kit				
10	100-6922	1	Arm-Cam				

 PROTOTYPE

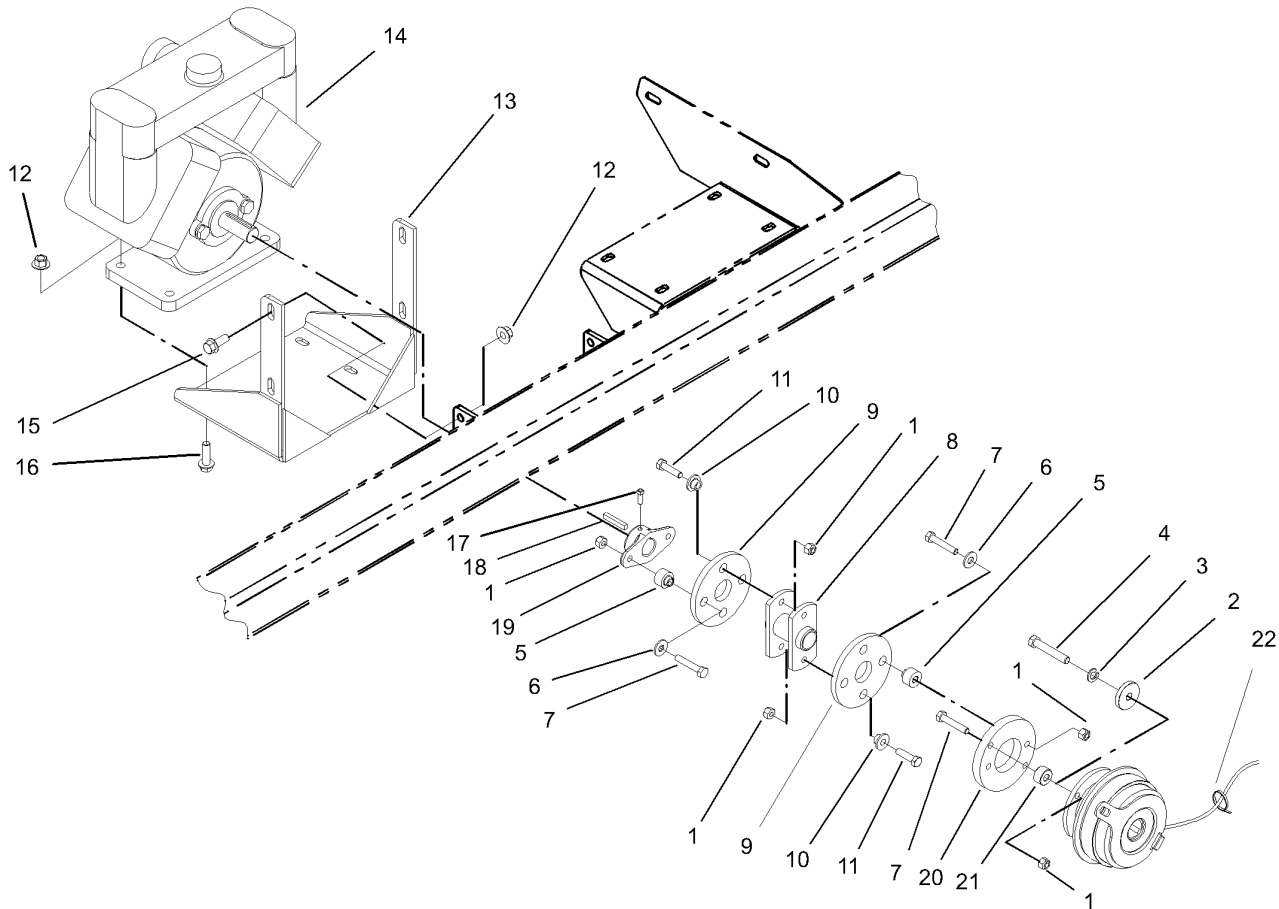


Pump Installation Assembly

Ref	Part No.	Qty.	Description				
1	3296-29	10	Nut-Lock, NI				
2	100-8391	1	Retainer-Electric Clutch				
3	3253-5	1	Washer-Lock				
4	3211-10	1	Screw-HH				
5	27-6590	4	Spacer-Coupling, Rubber				
6	3256-3	4	Washer-Flat				
7	322-9	6	Screw-HH				
8	80-6950-03	1	Coupler-Drive				
9	100-8471	2	Coupling-Rubber				
10	104-8774	4	Spacer-Coupling				
11	322-6	4	Screw-HH				
12	32128-43	8	Nut-Flange				
13	100-8477-03	1	Pump Mounting Bracket ASM				
14	106-5121	1	Pump				
15	3234-11	4	Screw-HHF				
16	3234-24	4	Screw-HHF				
17	3241-5	2	Screw-Set				
18	67-7490	1	Key-Square				
19	93-2589	1	Hub-Pump				
20	100-8435	1	Adapter-Clutch				
21	104-8763	2	Spacer				
22	3290-379	1	Tie-Cable				

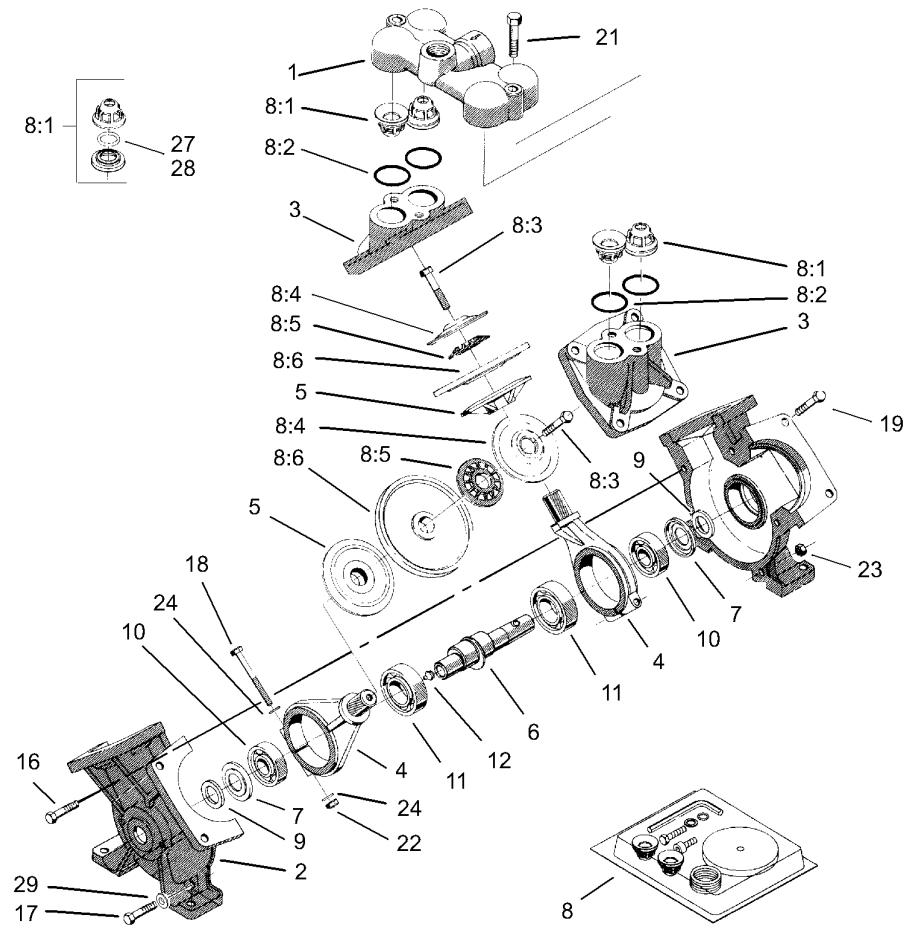 


Pump Assembly No. 106-5121

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-5139	1	Cover-Valve	23	106-5149	5	Nut
2	106-5140	2	Housing-Pump	24	100-8316	4	Washer-Lock
3	106-5141	2	Cover-Diaphragm	27	100-8336	4	O-Ring
4	106-5142	2	Rod-Connecting	28	106-5138	4	O-Ring
5	100-8314	2	Disc-Back, Diaphragm	29	106-5137	2	Washer
6	104-9052	1	Crankshaft-Keyed				
7	100-8325	2	Plate-Dust				
8	106-5150	1	Repair Kit				
8:1	100-8307	4	Valve				
8:2	100-6652	4	Gasket				
8:3	106-5147	2	Bolt				
8:4	100-8311	2	Washer				
8:5	100-8312	2	Washer-Nylon				
8:6	100-8313	2	Diaphragm				
9	99-0868	2	Felt-Seal				
10	100-8327	2	Bearing-Ball				
11	100-8329	2	Bearing-Ball				
12	99-0873	1	Fitting-Grease				
16	106-5143	3	Bolt				
17	106-5144	2	Bolt				
18	106-5145	2	Bolt				
19	106-5146	8	Bolt				
21	106-5148	2	Bolt				
22	100-8326	2	Nut-Hex				

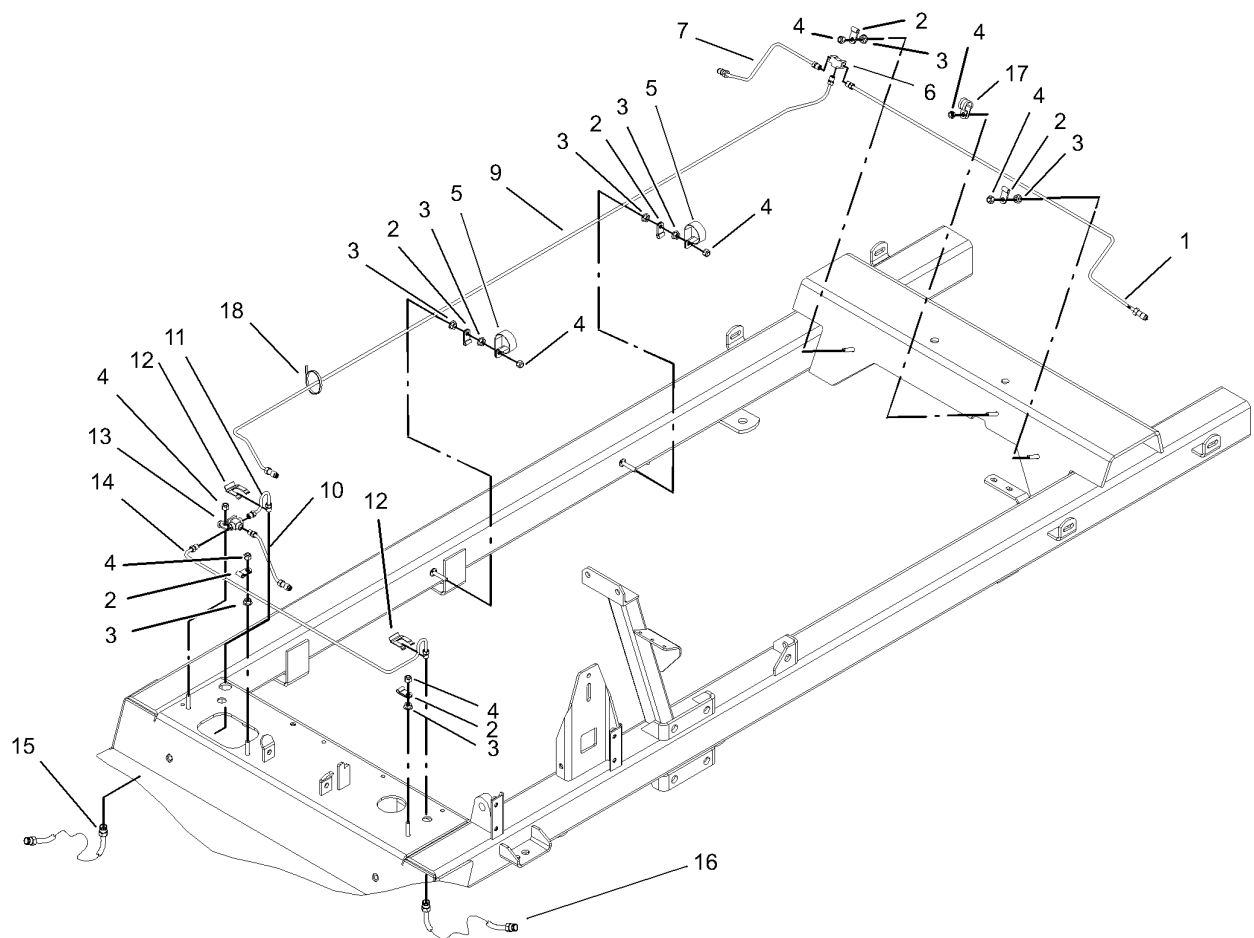 


Hydraulic Brake Line Assembly

Ref	Part No.	Qty.	Description				
1	100-8511	1	Tube-Brake, Rear LH				
2	2412-149	6	Clamp-Hose				
3	32128-33	8	Nut-HF				
4	3296-42	8	Nut-Lock, NI				
5	2412-74	2	R-Clamp				
6	98346	1	Fitting-Tee				
7	100-8510	1	Tube-Brake, Rear RH				
9	100-8509	1	Brake Tube Asm, Rear Supply				
10	100-8506	1	Brake Tube Asm, Front Supply				
11	100-8508	1	Tube-Brake, Front RH				
12	87-3580	2	Clip-Retainer				
13	87-3560	1	Tee				
14	100-8507	1	Tube-Brake, Front LH				
15	100-8420	1	Hose-Front Brake				
16	100-8467	1	Hose-Front Brake, LH				
17	2412-134	1	R-Clamp				
18	3290-379	3	Tie-Cable				

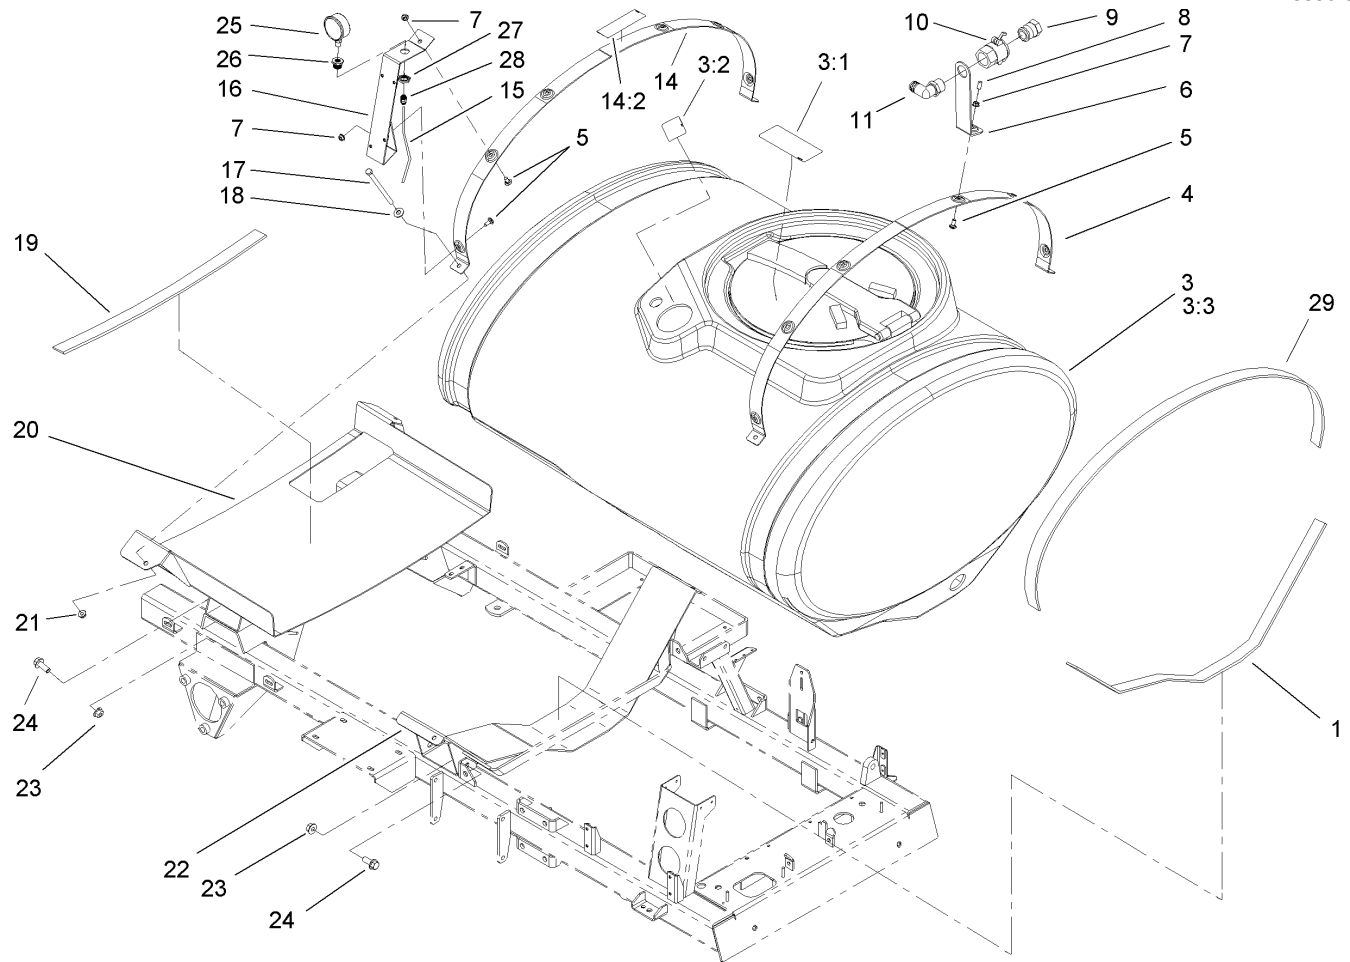 


Tank and Saddle Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	100-8573	2	Foam-Saddle, Front	24	3234-32	4	Screw-HHF
3	104-9053	1	160 Gallon Tank ASM	25	100-8576	1	Gauge-Pressure
3:1	100-6836	1	Decal-Tank Drain	26	100-8665	1	Reducer-Gauge, Pressure
3:2	93-0688	1	Decal-Warning, Chemical	27	100-8666	1	Nut-Reducer
3:3		1	160 Gallon Spray Tank ASM	28	100-8667	1	Coupler-Reducer
4	100-8575-03	1	Band-Tank	29	104-8781	2	Insulator-Tank, Strap
5	3230-1	3	Bolt-CARR				
6	100-6778-03	1	Bracket-Anti-Siphon				
7	32128-20	3	Nut-HF				
8	42452	1	Cap-Protective				
9	41316	1	Adapter-Quick				
10	100-6779	1	Coupling-Female				
11	41140	1	Elbow				
14	100-7006	1	Tank Band ASM				
14:2	87-0570	1	Decal-Electric Shock				
15	104-8989	1	Tubing-Pressure				
16	100-8479-03	1	Tee Mounting Bracket ASM				
17	100-8528	4	Screw-HH				
18	3256-4	4	Washer-Flat				
19	100-8574	3	Foam-Saddle, Right Rear				
20	100-8569-03	1	Rear-Saddle				
21	104-8301	4	Nut-Flange, NI				
22	100-8565-03	1	Front-Saddle				
23	32128-49	4	Nut-HHF				

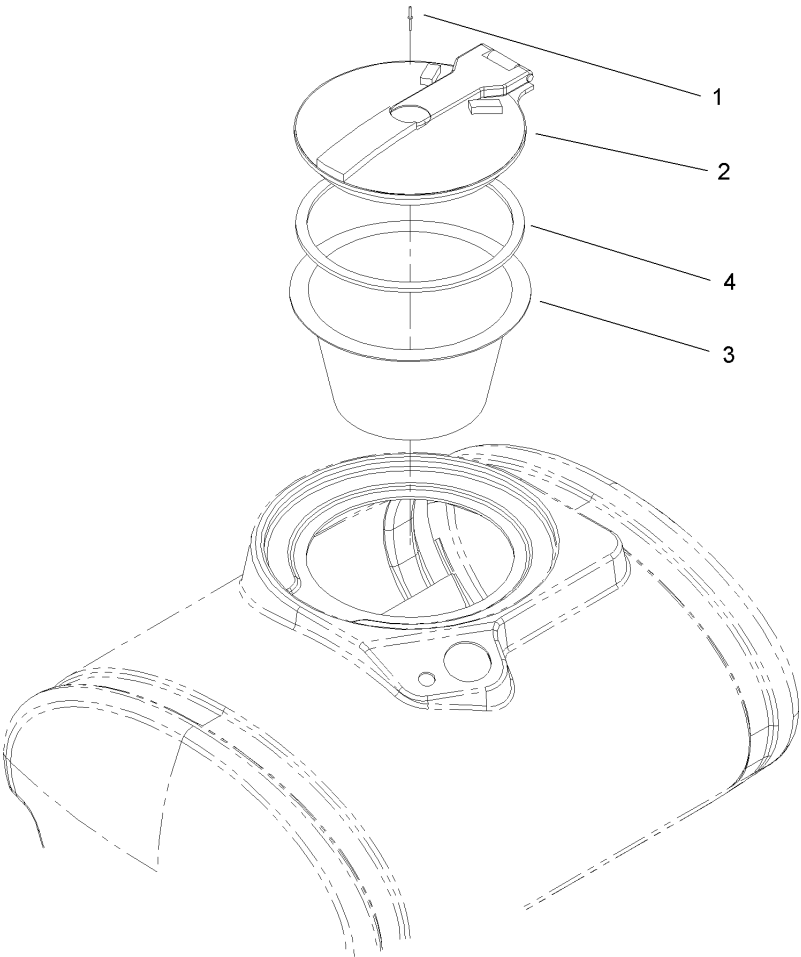 


Spray Tank Assembly No. 104-9020

Ref	Part No.	Qty.	Description				
1	93-0833	8	Rivet				
2	94-7088	1	Tank Lid ASM				
3	104-9051	1	Basket-Strainer				
4	106-4991	1	Seal-Lid				
PROTOTYPE							

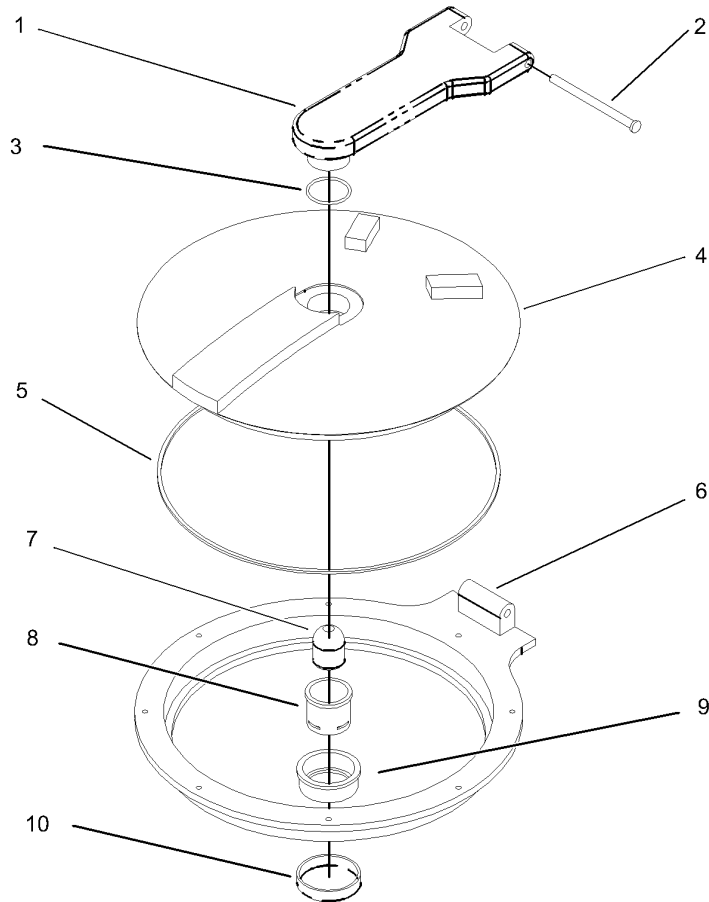 


Spray Tank Lid Assembly No. 94-7088

Ref	Part No.	Qty.	Description				
1	94-7205	1	Arm-Swivel				
2	94-7213	1	Pin-Pivot				
3	94-7206	1	O-Ring				
4	94-7207	1	Lid				
5	94-7208	1	Gasket				
6	94-7211	1	Ring				
7	94-7209	1	Plunger				
8	94-7210	1	Body				
9	94-7212	1	Nut				
10	94-7214	1	Cap				

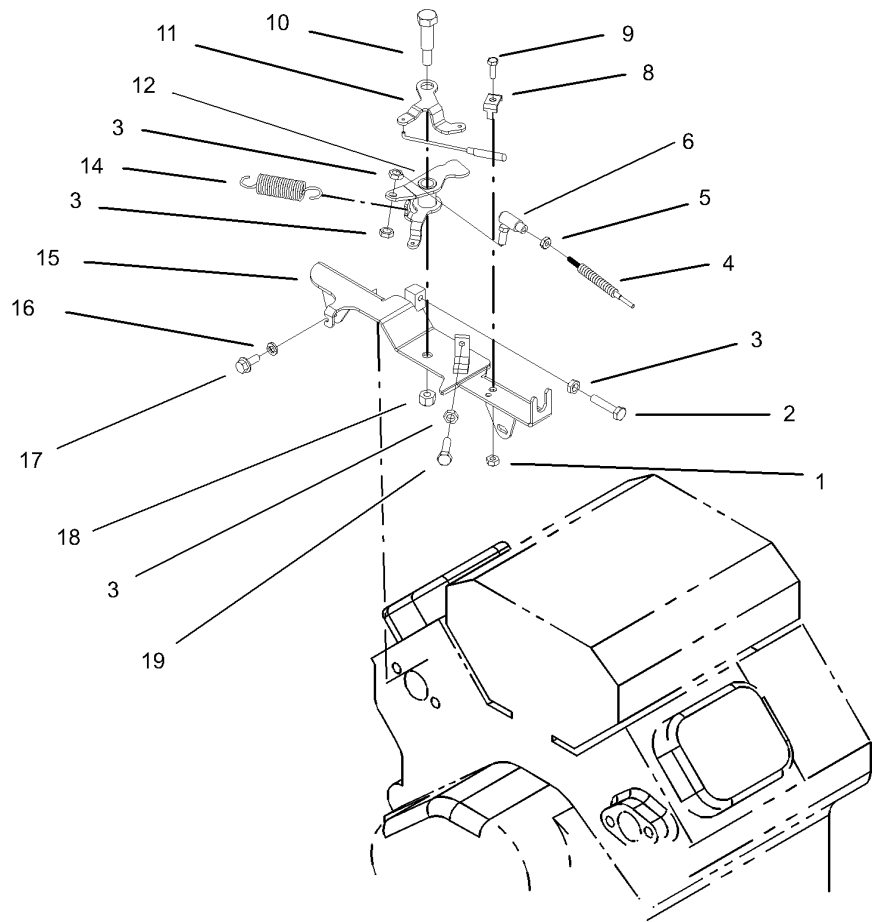 


Throttle Linkage Assembly

Ref	Part No.	Qty.	Description				
1	3296-2	1	Nut-Lock				
2	329-7	1	Screw-HH				
3	3220-1	4	Nut-Jam				
4	100-8383	1	Cable-Accelerator				
5	3219-14	1	Nut-Hex				
6	100-8559	1	Ball Joint ASM				
8	92-0477	1	Clamp-Cable				
9	3290-134	1	Screw				
10	7-0030	1	Bolt-Shoulder				
11	87-7790	1	Lever-Choke				
12	100-8558	1	Lever-Throttle				
14	67-1450	1	Spring-Idler, Deck				
15	100-8557	1	Lever-Throttle				
16	48-8020	4	Washer-Spring				
17	33103-016	4	Screw-HHF				
18	3296-29	1	Nut-Lock, NI				
19	329-6	1	Screw-HH				

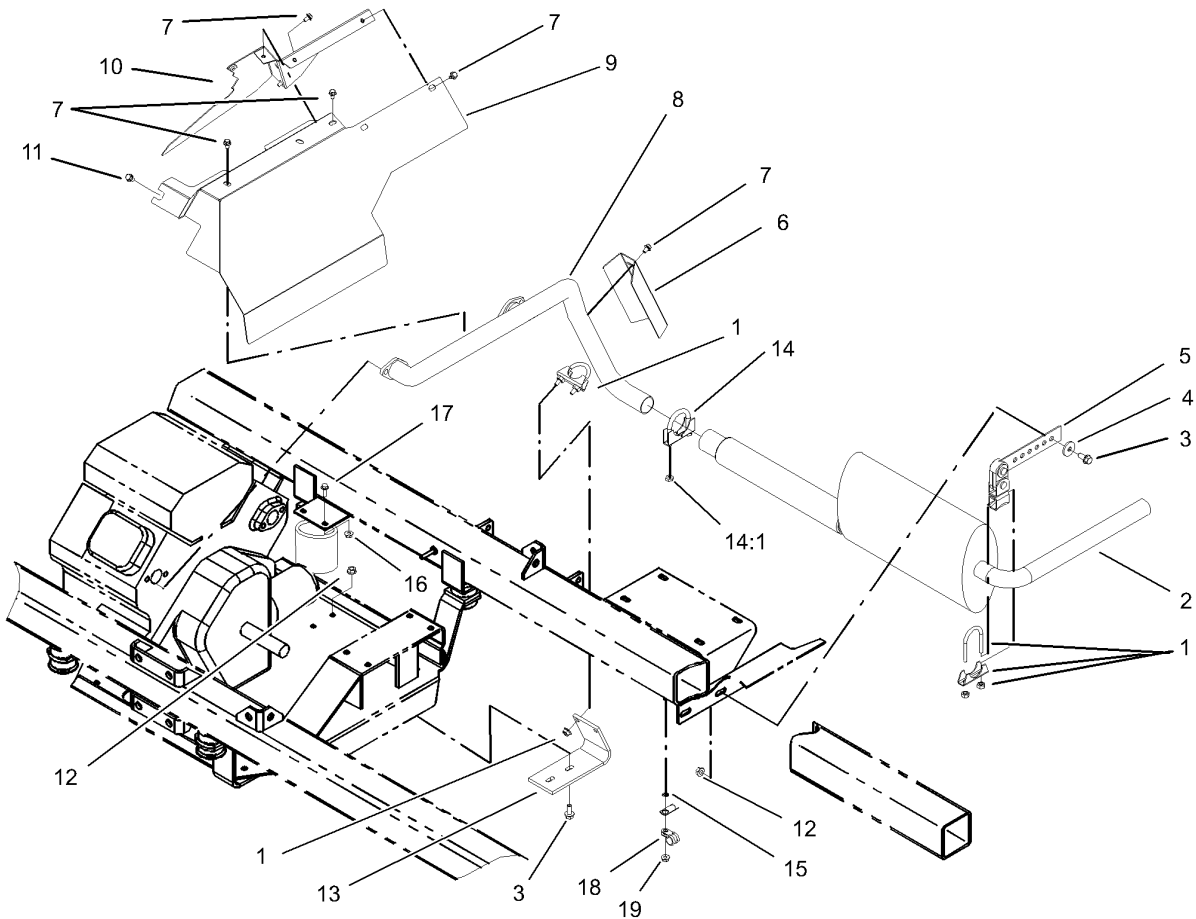 

Exhaust Assembly


Ref	Part No.	Qty.	Description				
1	2112-11	2	Clamp-Muffler	PROTOTYPE			
2	100-8292	1	Muffler Tailpipe ASM				
3	3234-5	4	Screw				
4	356303	2	Washer				
5	100-8526	1	Hanger-Muffler				
6	100-8409-03	1	Shield-Exhaust Lower				
7	3234-26	10	Screw				
8	100-8291	1	Header-Pipe ASM				
9	100-7028-03	1	Shield-Upper Heat				
10	100-7029-03	1	Shield Mid Heat/ASM				
11	33103-012	1	Screw-HHF				
12	32128-20	4	Nut-HF				
13	100-8527	1	Support Header				
14	2112-9	1	Clamp				
14:1	32128-20	2	Nut-HF				
15	3255-7	1	Washer-Lock/ext				
16	32128-33	2	Nut-HF				
17	3234-4	2	Screw-HHF				
18	2412-134	1	R-Clamp				
19	32128-33	1	Nut-HF				

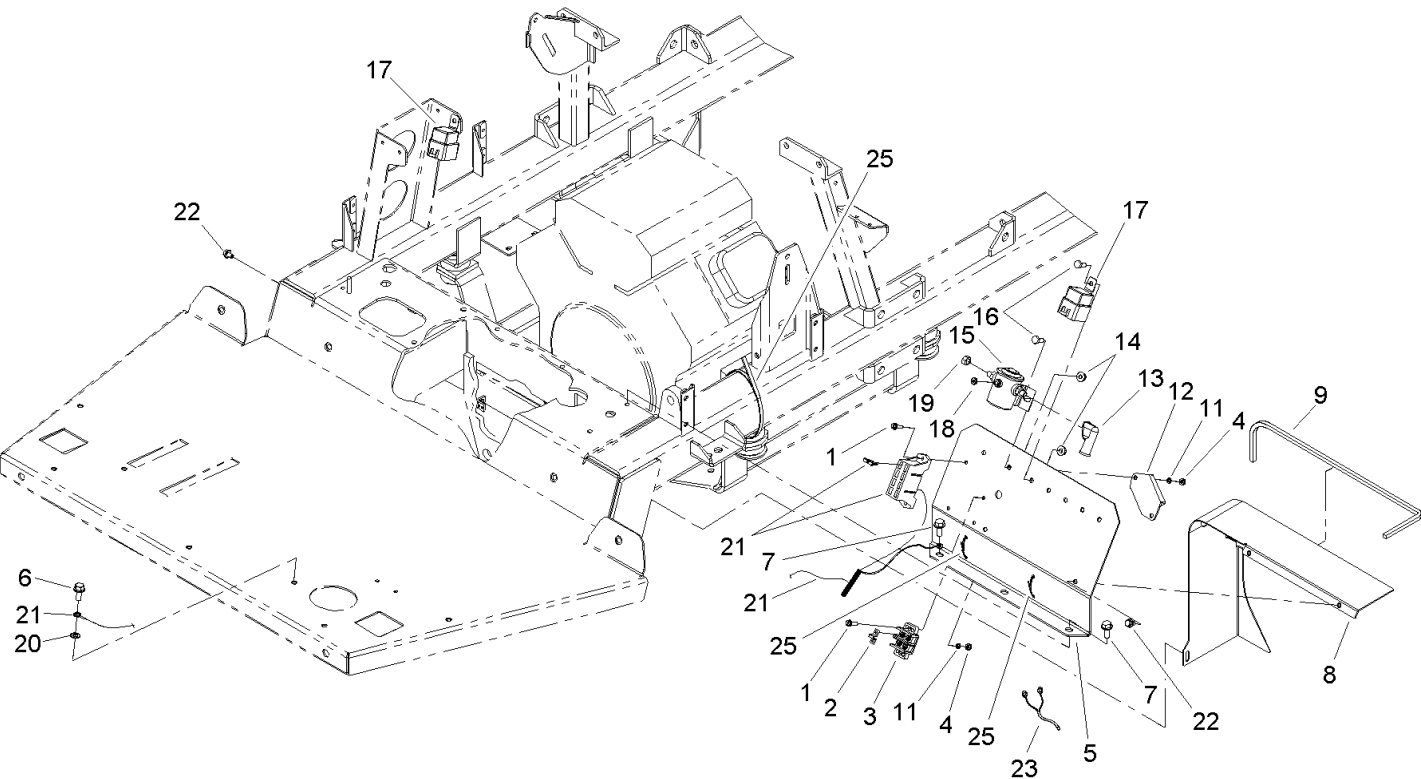 

Electrical Panel Assembly

Ref	Part No.	Qty.	Description				
1	32105-13	4	Screw-SHH				
2	42863	1	Strip-Jumper				
3	42862	1	Block-Terminal, Ground				
4	3217-26	4	Nut-Hex				
5	100-8441-03	1	Panel-Electrical				
6	3234-5	1	Screw				
7	32144-70	3	Screw-HH				
8	100-7025-03	1	Shield Front Heat ASM				
9	100-7027	1	Trim				
11	3253-17	4	Washer-Lock/sp				
12	99-3703	1	Module-Cruise				
13	92-0034	3	Boot-Terminal				
14	32128-33	4	Nut-HF				
15	94-7079	1	Solenoid-Accessory				
16	321-3	4	Screw-HH				
17	70-1480	3	Relay				
18	3219-14	1	Nut-Hex				
19	3219-2	2	Nut-Hex				
20	3255-8	2	Washer-Lock				
21	106-5114	1	Harness-Wire, Main Vehicle				
22	3234-26	3	Screw				
23	107-8601	1	Harness-Wire, Spray System				
23:1	100-4918	2	Diode				
25	3290-379	3	Tie-Cable				

 
See Hose Assembly pages for a service break-down of the corresponding, lettered hose assemblies on this page.

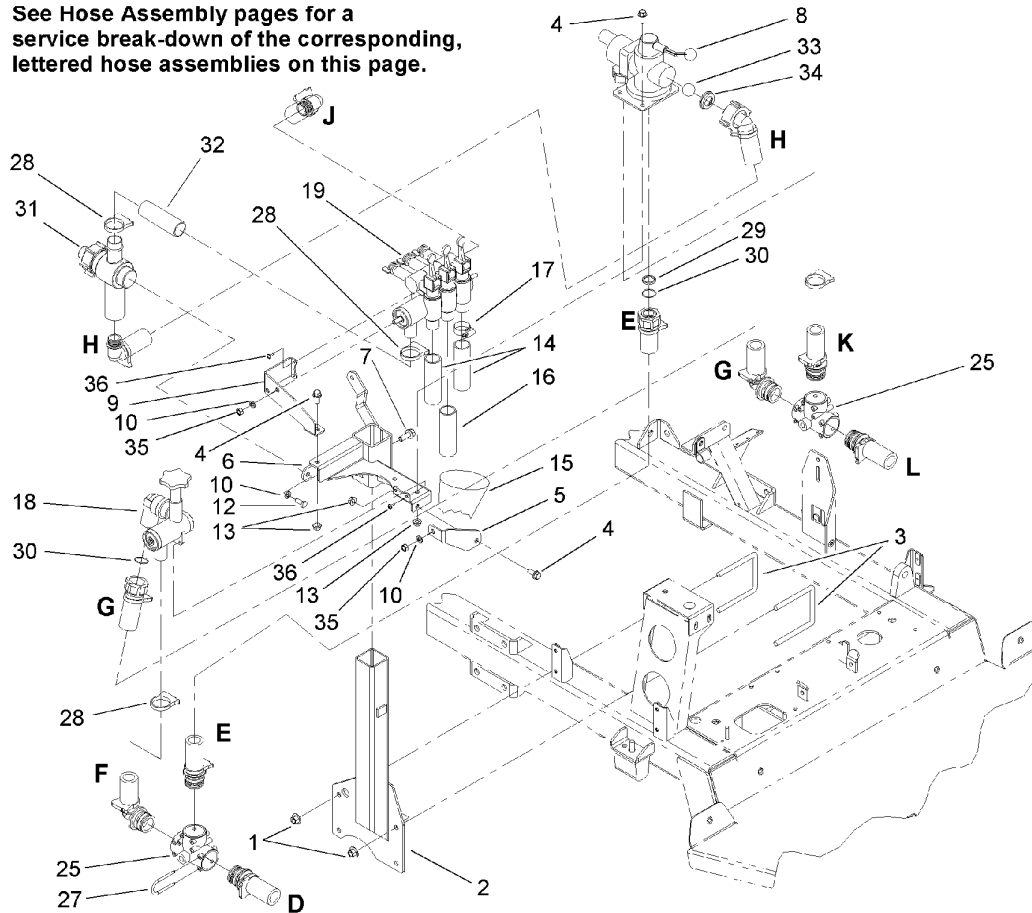

Manual Control Assembly


Ref	Part No.	Qty.	Description
1	32128-43	4	Nut-Flange
2	104-8828-03	1	Valve-Post
3	100-7067	2	U-Bolt
4	3234-5	4	Screw
5	104-8838-03	1	Bracket-Valve, Rate
6	104-8833-03	1	Mount-Valve
7	3234-11	1	Screw-HHF
8	106-4881	1	Main On/off Valve ASM
9	104-8839-03	1	Bracket-Valve, Section
10	3253-4	4	Washer-Lock
12	33114-020	1	Screw-HH
13	32128-20	4	Nut-HF
14	104-8853	2	Hose-Boom Extension
15	104-8899	2	Cover-Hose
16	31188	1	Hose-Boom Center
17	2412-129	3	Clamp-Hose
18		1	Pressure Control Valve ASM
19	106-4882	1	Boom Valve ASM
25	104-9041	2	Tee
27	100-6708	6	Fork
28	99-0782	4	Clamp-Hose
29	106-4897	1	O-Ring-Support
30	100-6655	2	Gasket
31	106-4884	1	Flow Meter ASM

Ref	Part No.	Qty.	Description
32	104-8905	1	Hose-Pressure
33	100-7000	1	Ball-Plastic
34	100-6999	1	Bushing
35	100-6894	4	Nut
36	100-6916	4	Screw-Plastic

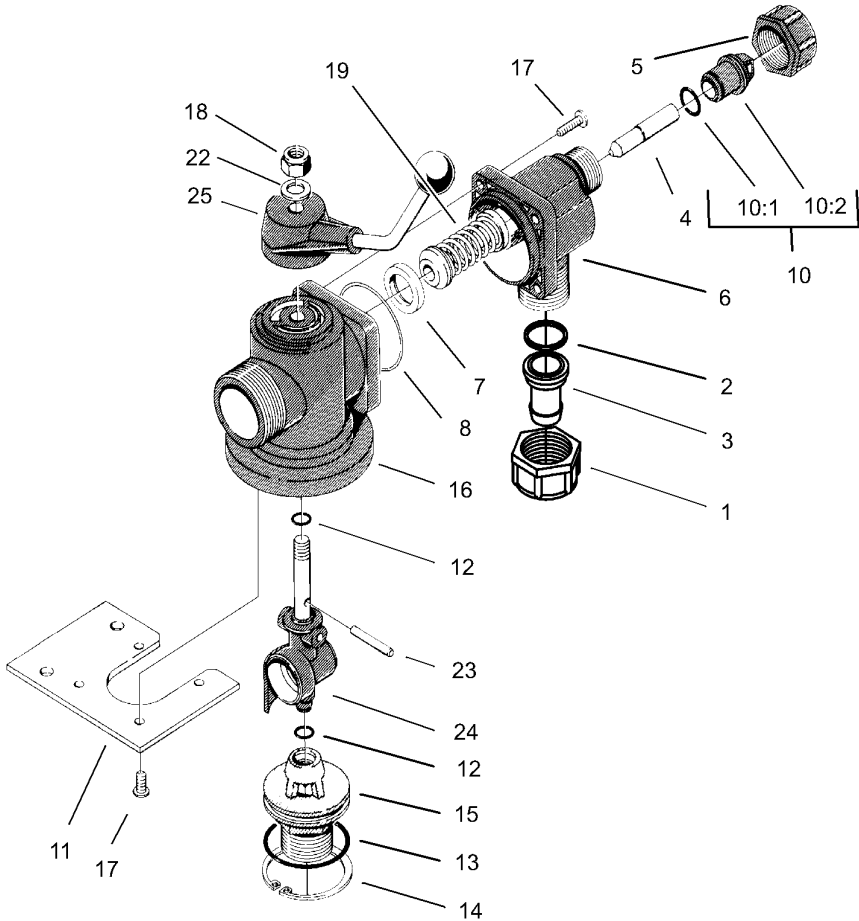 


Main On/Off Valve Assembly No. 106-4881

Ref	Part No.	Qty.	Description				
1	99-0769	1	Nut	PROTOTYPE			
2	100-6655	1	Gasket				
3	99-0781	1	Hosebarb				
4	100-6942	1	Pin				
5	99-0850	1	Nut				
6	100-6943	1	Housing-Valve, Pressure				
7	100-6945	1	Seat				
8	100-6947	1	O-Ring				
10	99-0844	1	Plug-Tube, Nozzle				
10:1	100-6645	1	O-Ring				
10:2	100-6941	1	Fitting				
11	100-6997	1	Fitting				
12	100-6641	2	O-Ring				
13	100-6993	1	O-Ring				
14	100-6994	1	Ring-Snap, Inner				
15	100-6951	1	Adapter-Valve, On/off				
16	100-6949	1	Housing-Valve, On/off (Manual)				
17	100-6916	8	Screw-Plastic				
18	48-9520	1	Nut				
19	100-7003	1	Relief Valve ASM				
22	99-0863	1	Washer				
23	100-8656	1	Pin-Expansion				
24	100-6950	1	Stem-Valve, On/off (Manual)				
25	100-7001	1	Handle				

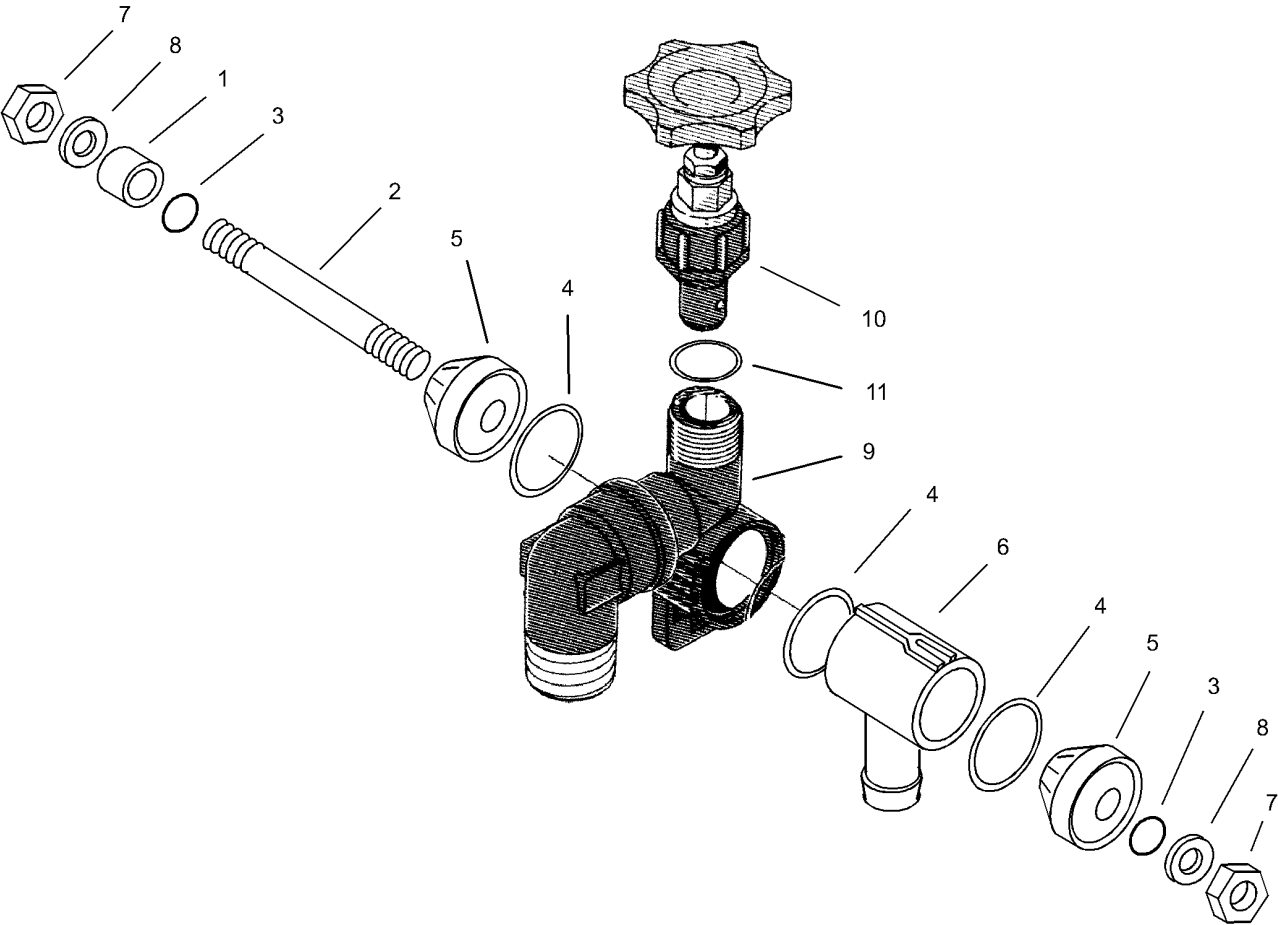 


Pressure Control Valve Assembly

Ref	Part No.	Qty.	Description				
1	100-6897	1	Bushing				
2	104-8917	1	Rod-Valve, Pressure Control				
3	100-6887	2	O-Ring				
4	100-6892	3	O-Ring				
5	100-6913	2	Cover				
6	100-6908	1	T-Piece				
7	100-6894	2	Nut				
8	100-6634	2	Washer				
9	104-8919	1	Housing-Pressure Control				
10	100-6762	1	Regulator-Pressure, Manual				
11	100-6644	1	O-Ring				

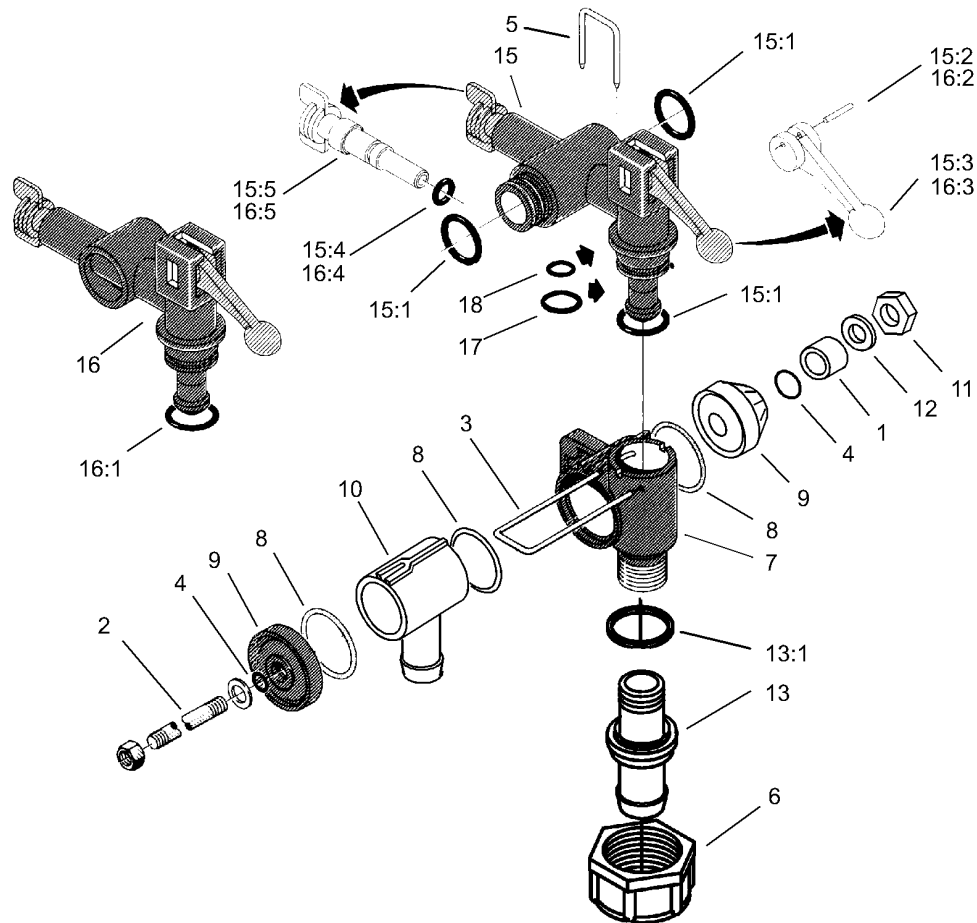 


Boom Valve Assembly No. 106-4882

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	100-6897	1	Bushing	16:4	100-6641	1	O-Ring
2	104-8916	1	Rod-Valve, Individual Boom	16:5	100-6769	1	Screw-Adjust
3	100-6758	1	Fork	17	100-6770	2	O-Ring
4	100-6887	2	O-Ring	18	100-6878	3	O-Ring
5	100-6885	3	Fork-Valve, Boom				
6	99-0850	3	Nut				
7	100-6759	3	Housing-Section Valve				
8	100-6892	5	O-Ring				
9	100-6913	2	Cover				
10	100-6908	1	T-Piece				
11	100-6894	2	Nut				
12	100-6634	2	Washer				
13	106-5112	3	Hosebarb ASM				
13:1	100-6645	1	O-Ring				
15	100-6767	2	Valve-Boom Section, Manual				
15:1	100-6882	1	O-Ring				
15:2	100-6766	1	Pin				
15:3	100-6835	1	Handle				
15:4	100-6641	1	O-Ring				
15:5	100-6769	1	Screw-Adjust				
16	100-6765	1	Valve-Boom Section, Manual				
16:1	100-6882	1	O-Ring				
16:2	100-6766	1	Pin				
16:3	100-6835	1	Handle				

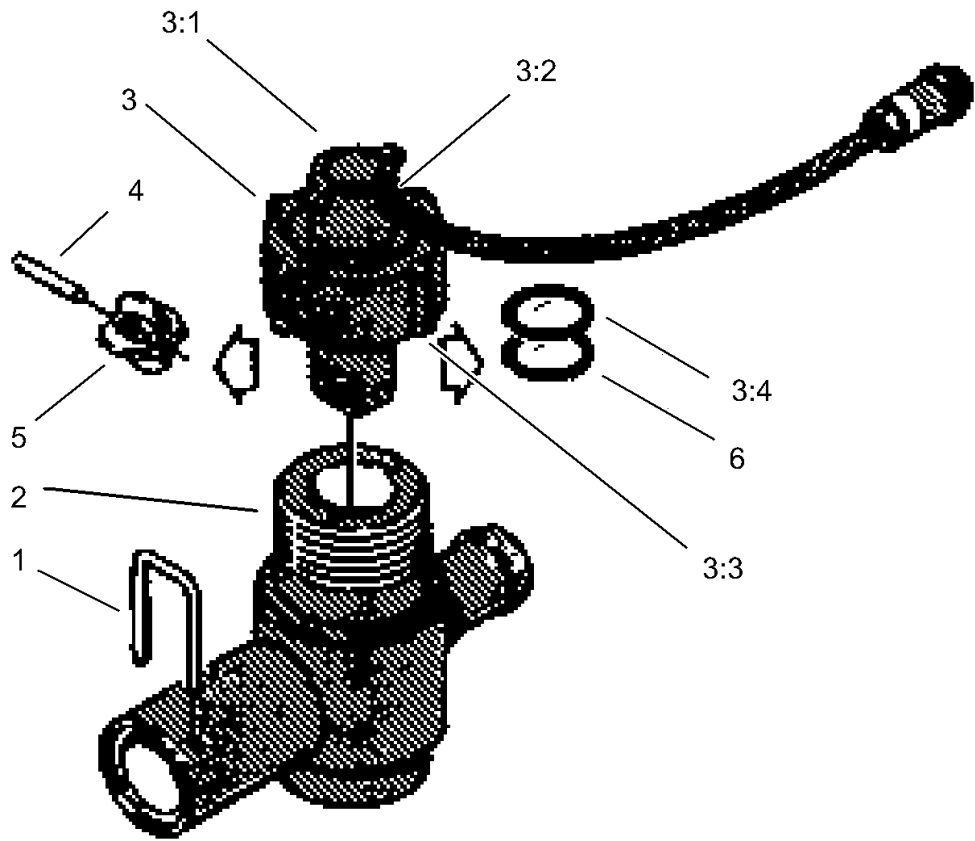 


Flow Meter Assembly No. 106-4884

Ref	Part No.	Qty.	Description				
1	100-6885	1	Fork-Valve, Boom				
2	104-8901	1	Housing-Flow Meter				
3	100-6900	1	Flow Sensor ASM				
3:1	100-6906	1	Shaft-Rotor				
3:2	100-6919	1	Meter-Flow, Rotor				
3:3	100-8678	1	Nut				
3:4	100-8653	1	O-Ring				
4	100-6906	1	Shaft-Rotor				
5	100-6919	1	Meter-Flow, Rotor				
6	100-8653	2	O-Ring				

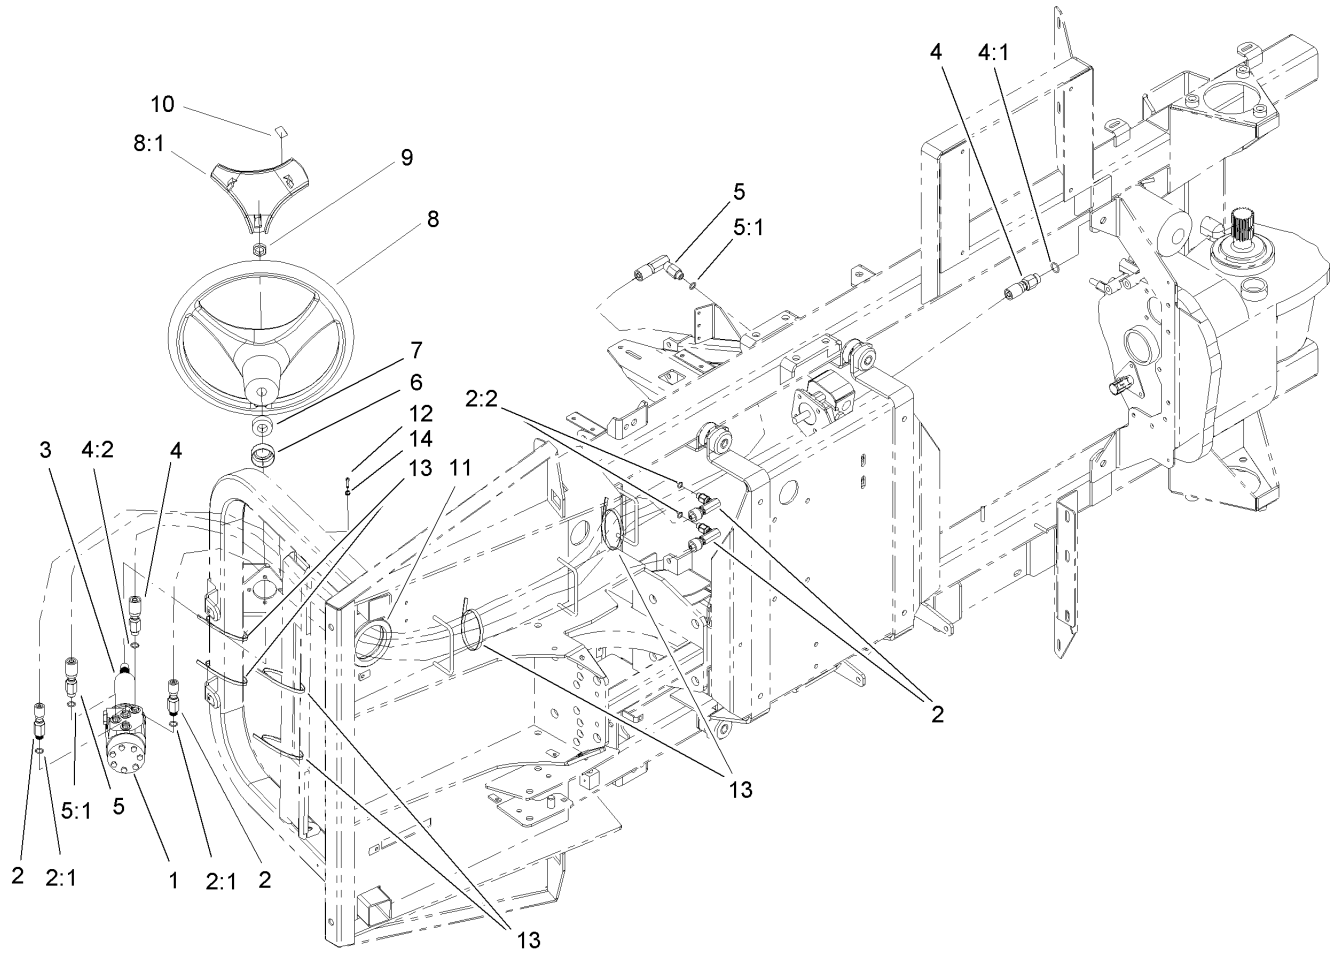 


Hydraulic Hose Routing Assembly

Ref	Part No.	Qty.	Description				
1	92-3502	1	Steering Control ASM				
2	100-8252	2	Hose ASM				
2:1	237-78	1	O-Ring				
2:2	237-42	1	O-Ring				
3	94-8792	1	Column-Steering				
4	100-8253	1	Hose ASM				
4:1	237-42	1	O-Ring				
4:2	237-79	1	O-Ring				
5	100-8251	1	Hose ASM				
5:1	237-42	2	O-Ring				
6	93-5439	1	Seal-Steering				
7	21-9260	1	Cover-Dust				
8	98-1471	1	Wheel-Steering				
8:1	98-1468	1	Cover-Wheel, Steering				
9	92-3513	1	Nut				
10	98-1459	1	Decal				
11	237-102	1	Grommet				
12	32105-9	4	Screw				
13	3290-379	6	Tie-Cable				
14	3253-18	4	Washer-Lock/sp				

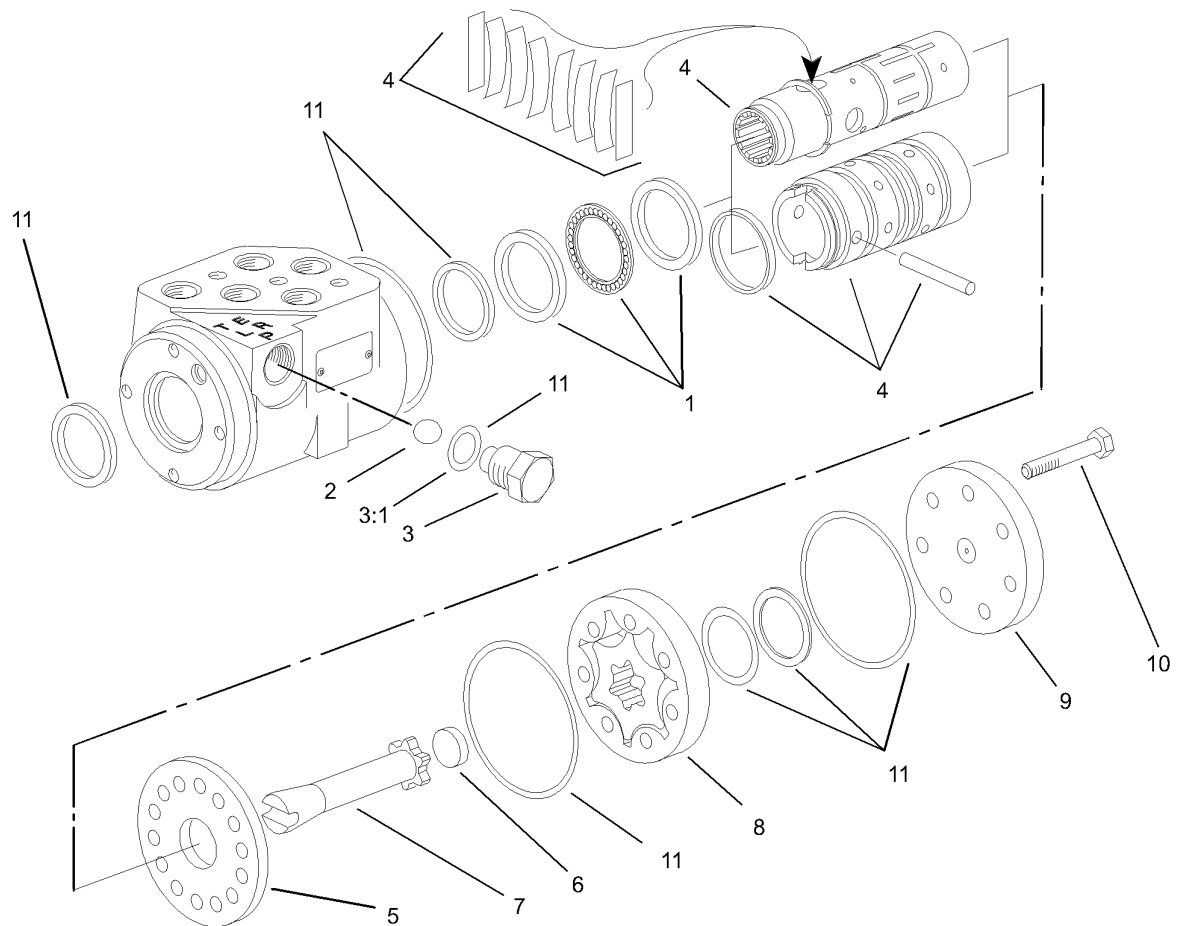 

Steering Control Assembly No. 92-3502


Ref	Part No.	Qty.	Description				
1	92-3839	1	Bearing Kit				
2	92-3842	1	Ball				
3	92-3841	1	Plug ASM				
3:1		1	O-Ring				
4	94-4095	1	Centering Spring Kit				
5	92-3843	1	Plate-Wear				
6	92-3845	1	Spacer				
7	92-3844	1	Drive				
8	92-3846	1	Gerotor				
9	92-3847	1	Cap-End				
10	92-3848	7	Capscrew				
11	92-3849	1	Seal Kit				

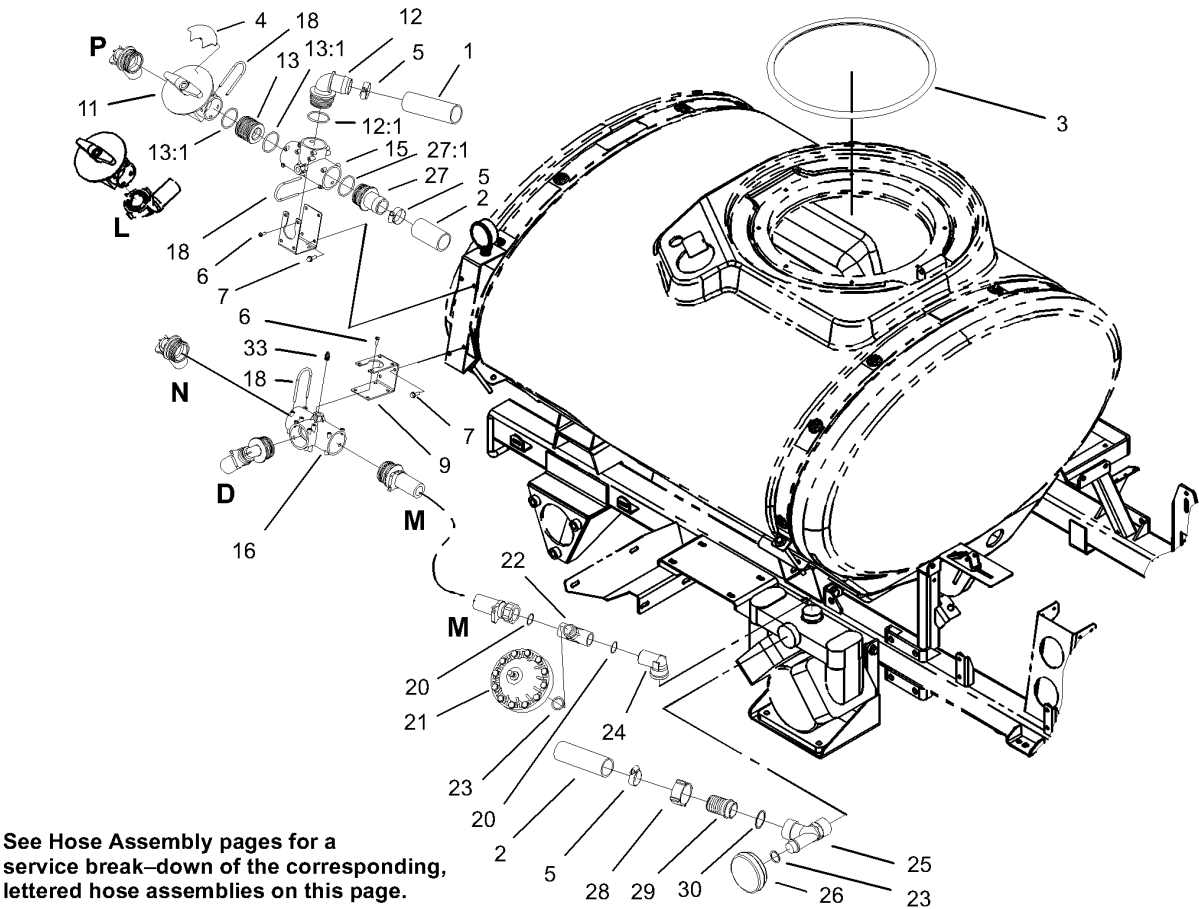 

Tank Hose Assembly


Ref	Part No.	Qty.	Description
1	100-8483	1	Hose-Suction
2	100-8484	1	Hose-Suction
3	104-9004	1	Seal-Strainer Basket
4	100-8577	1	Decal-Agitate Valve
5	41327	4	Clamp-Hose
6	32144-32	8	Screw
7	3234-4	4	Screw-HHF
9	100-8478	2	Bracket-Tee
11	100-8673	1	Agitation Valve ASM
12	106-4946	1	Hosebarb-90 DEG
12:1	100-8637	1	O-Ring
13	106-4947	1	Connector
13:1	100-8637	2	O-Ring
15	100-6704	1	Tee
16	100-8675	1	Tee-Pressure
18	100-8635	8	Fork
20	100-6655	2	Gasket
21	100-6662	1	Damper-Pressure
22	100-8699	1	Tee
23	100-6656	2	O-Ring
24	100-8698	1	Elbow
25	100-8681	1	Tee
26	100-6660	1	Suction Damper ASM
27	106-4936	1	Hosebarb

Ref	Part No.	Qty.	Description
27:1	100-8637	1	O-Ring
28	100-8678	1	Nut
29	100-8679	1	Hosebarb
30	100-8680	1	Seal
33	100-8674	1	Coupler-Tube

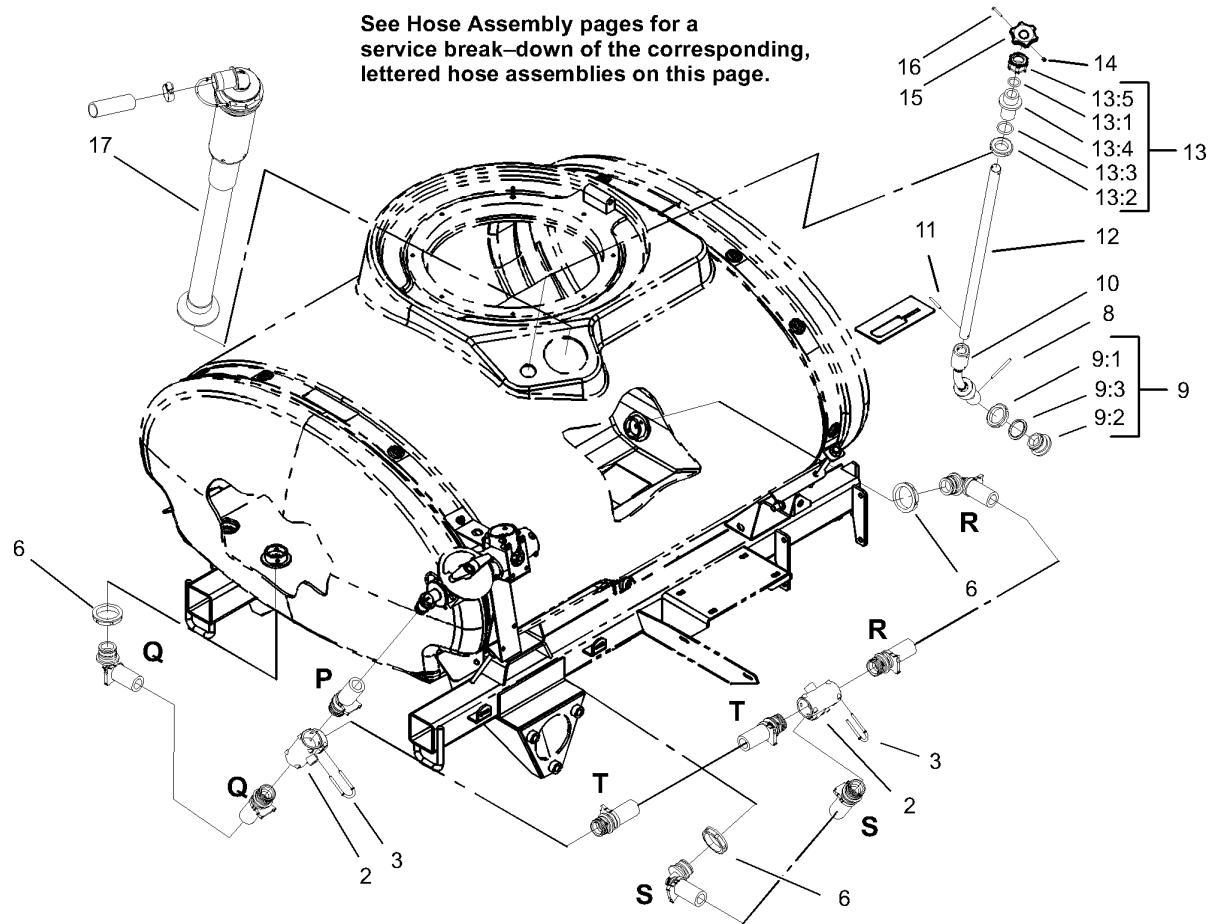 


Sprayer Component Assembly

Ref	Part No.	Qty.	Description				
2	104-9041	2	Tee				
3	100-6708	6	Fork				
6	100-6713	3	Nut-Bulkhead				
8	100-8663	1	Pin				
29		1	Lower Bulkhead Fitting ASM				
9:1	99-0761	1	Ringnut				
9:2	100-8664	1	Fitting-Bulkhead				
9:3	100-8659	1	Gasket				
210		1	Drain Screw ASM				
11	100-8661	1	Pin-Expansion				
12	106-4899	1	Tube-Control, Drain				
213		1	Upper Bulkhead Fitting ASM				
13:1	100-6643	1	O-Ring				
13:2	99-0758	1	Nut				
13:3	100-6658	1	Gasket				
13:4	106-1240	1	Bulkhead				
13:5	106-1241	1	Nut-Special				
14	104-9047	1	Nut				
15	106-4880	1	Handle-Drain				
16	104-9046	1	Bolt				
217		1	Top Mounted Suction ASM				

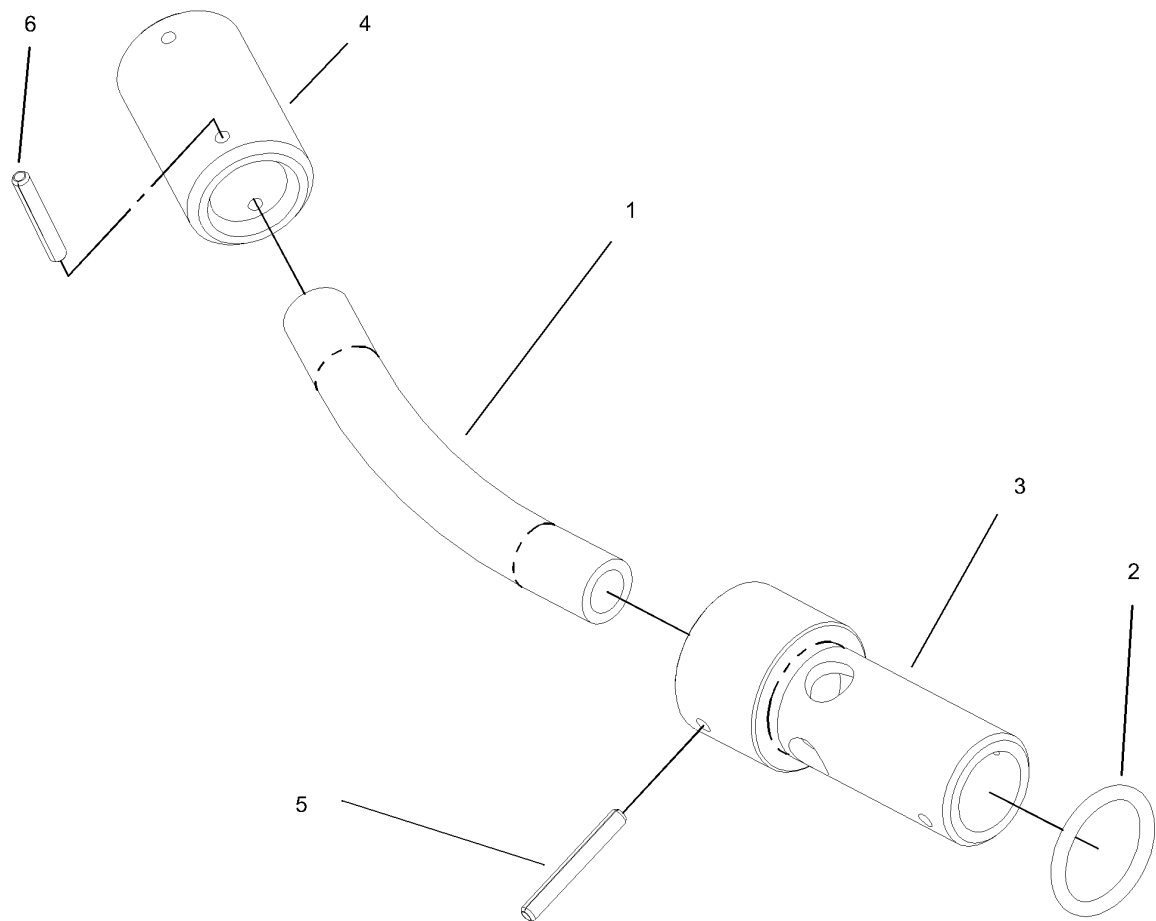 


Drain Screw Assembly

Ref	Part No.	Qty.	Description				
1	100-8658	1	Tube-Hi Flex				
2	100-6658	1	Gasket				
3	100-8662	1	Screw-Drain				
4	100-8657	1	Connector-Tube, Hose				
5	100-8660	1	Pin-Expansion				
6	100-8661	1	Pin-Expansion				

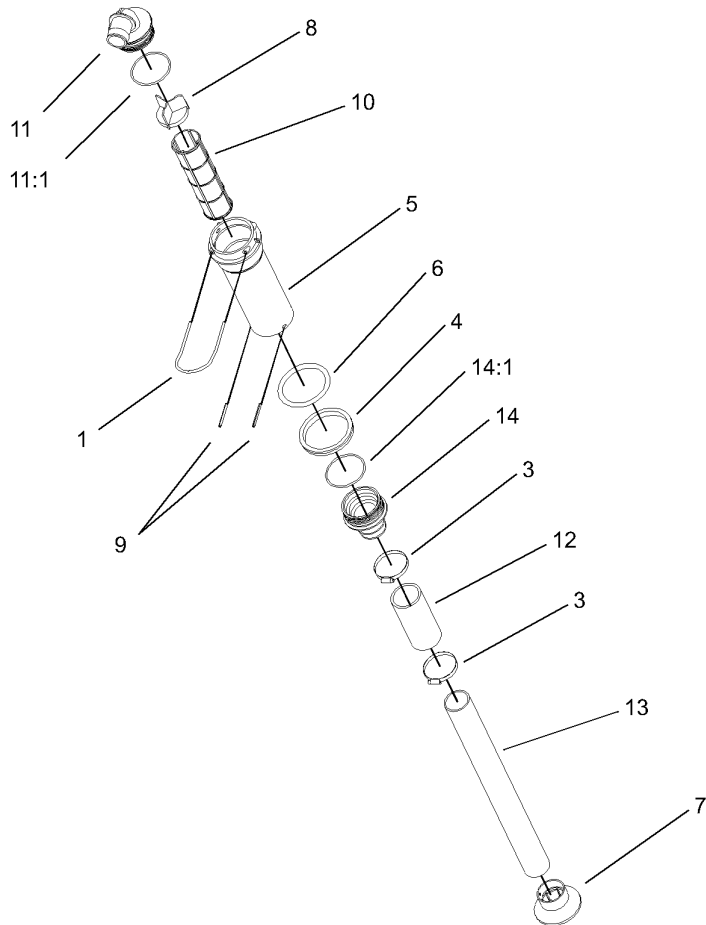 


Top Mounted Suction Assembly

Ref	Part No.	Qty.	Description				
1	100-8636	1	Fork-Special				
3	26392	2	Clamp-Hose				
4	100-8647	1	Nut-Bulkhead				
5	100-8643	1	Housing-Filter				
6	100-8646	1	Gasket-Bulkhead				
7	100-6714	1	Foot-Suction Tube				
8	100-8641	1	Vane-Screen				
9	100-8644	2	Pin-Expansion				
10	100-8642	1	Screen-Suction, Mesh 50				
11	106-4952	1	Hosebarb-90 DEG				
11:1	100-6989	1	O-Ring				
12	100-8649	1	Hose-Suction				
13	100-6990	1	Tube-Suction				
14	106-4942	1	Hosebarb-Straight				
14:1	100-8640	1	O-Ring				

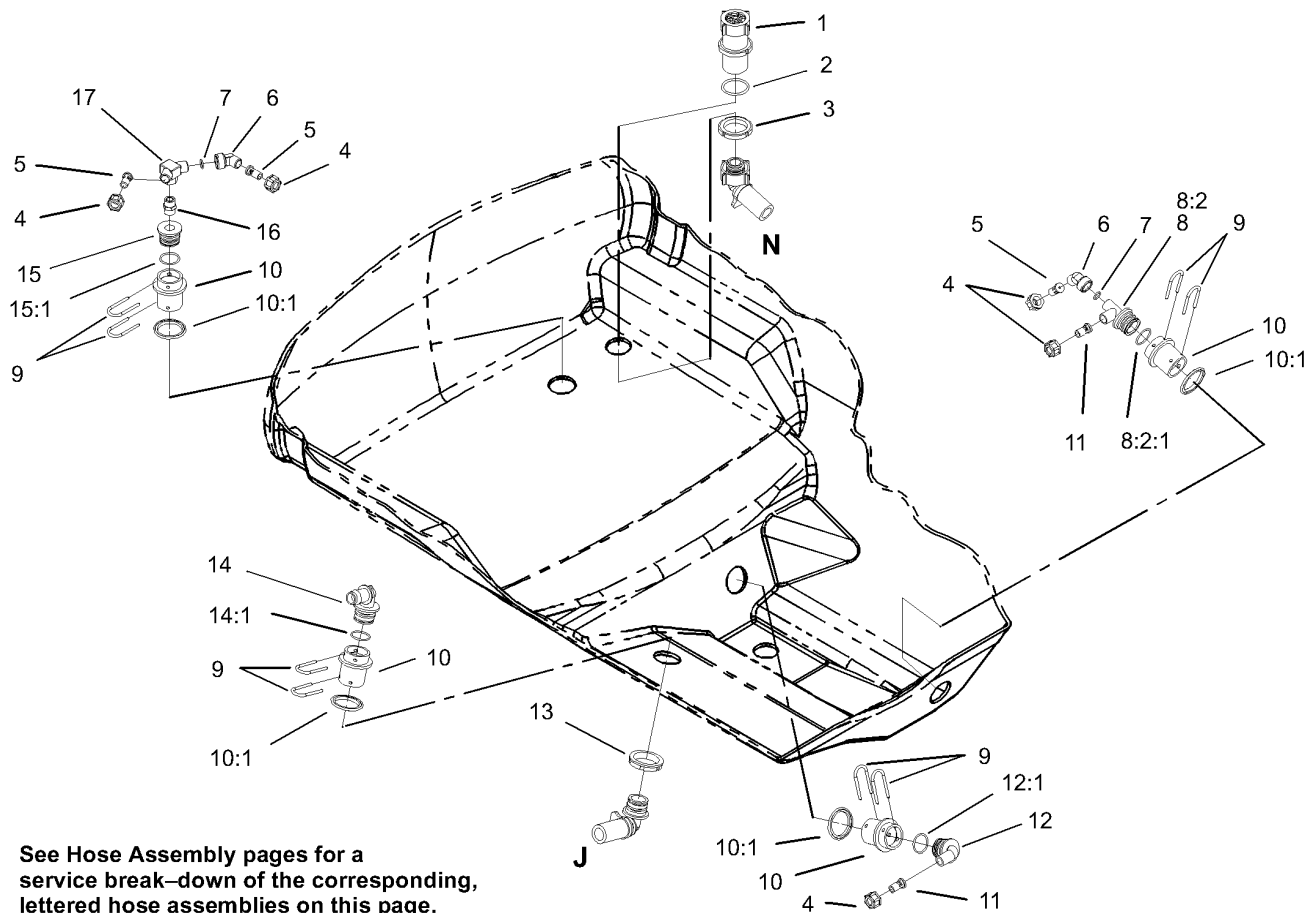 


Lower Sprayer Component Assembly

Ref	Part No.	Qty.	Description				
1	100-6820	1	Valve-Safety, 225 Psi				
2	100-6652	1	Gasket				
3	99-0761	1	Ringnut				
4	99-0766	5	Nut				
5	100-6705	3	Nozzle-Agitation				
6	99-0768	2	Elbow-60 DEG				
7	100-6653	2	O-Ring				
8	100-6707	1	Tee				
8:2		1	Adapter ASM				
8:2:1	100-6712	1	O-Ring				
9	100-6708	8	Fork				
10	106-4896	4	Fitting-Bulkhead				
10:1	100-6710	1	Gasket-Bulkhead				
11	100-6706	2	Nozzle-Agitation				
12	106-4944	1	Fitting-90 DEG				
12:1	100-6712	1	O-Ring				
13	100-6713	1	Nut-Bulkhead				
14	106-4945	1	Elbow				
14:1	100-6712	1	O-Ring				
15	106-4943	1	Adapter ASM				
15:1	100-6712	1	O-Ring				
16	100-6722	1	Nipple				
17	100-6723	1	Tee				

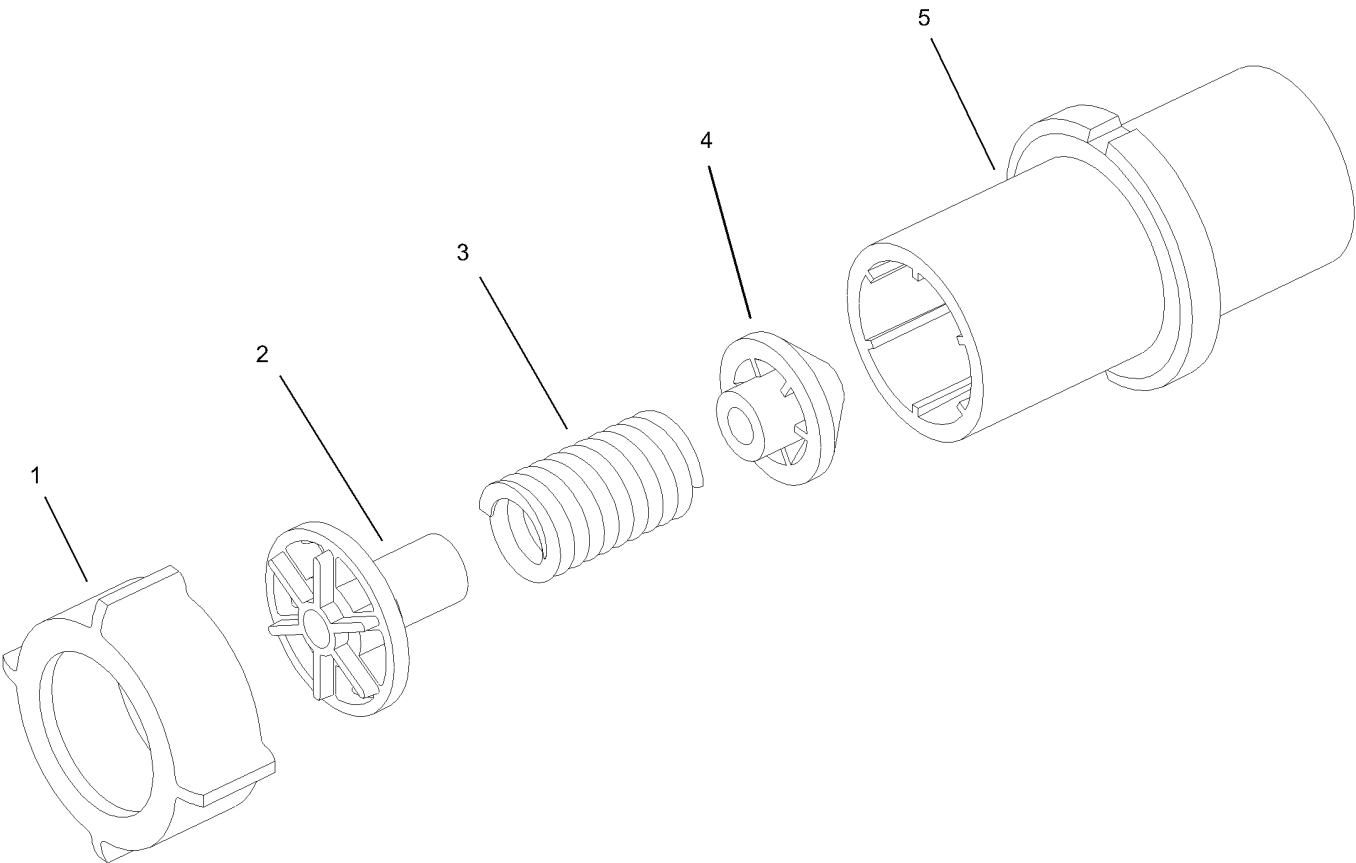 


Safety Valve Assembly No. 100-6820

Ref	Part No.	Qty.	Description				
1	100-8678	1	Nut				
2	100-6724	1	Valve-Relief, Seat				
3	100-6725	1	Spring-Relief Valve				
4	100-6726	1	Cone-Relief Valve				
5	100-6727	1	Housing-Relief Valve				
PROTOTYPE							

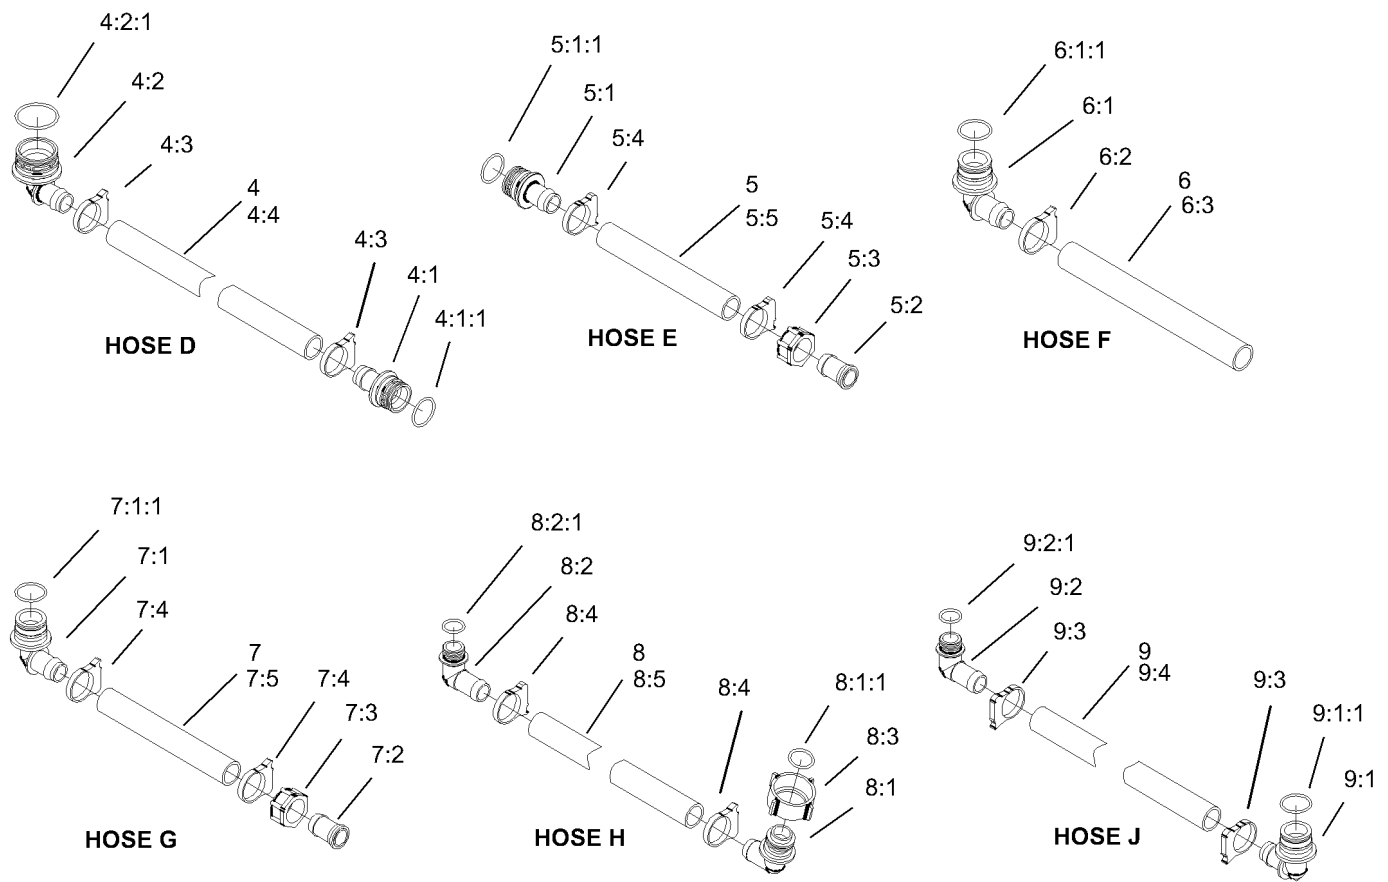 


Hose Assemblies No. 1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
24		1	Pressure Manifold Hose ASM	7:4	99-0782	2	Clamp-Hose
4:1	106-4935	1	Hosebarb ASM	7:5	104-8909	1	Hose-Bypass
4:1:1	100-6712	1	O-Ring	28		1	Flowmeter Hose ASM
4:2	106-4933	1	Hosebarb ASM	8:1	106-4949	1	Hosebarb-110 DEG
4:2:1	100-8637	1	O-Ring	8:1:1	100-6646	1	O-Ring
4:3	99-0782	2	Clamp-Hose	8:2	106-4948	1	Hose Barb ASM
4:4	104-8915	1	Hose-Pressure	8:2:1	100-6882	1	O-Ring
25		1	Main Supply Hose ASM	8:3	100-8678	1	Nut
5:1	106-4935	1	Hosebarb ASM	8:4	99-0782	2	Clamp-Hose
5:1:1	100-6712	1	O-Ring	8:5	104-8906	1	Hose-Pressure
5:2	99-0781	1	Hosebarb	29		1	Boom Bypass Hose ASM
5:3	99-0769	1	Nut	9:1	106-4945	1	Elbow
5:4	99-0782	2	Clamp-Hose	9:1:1	100-6712	1	O-Ring
5:5	104-8909	1	Hose-Bypass	9:2	106-4948	1	Hose Barb ASM
26		1	Control Supply Hose ASM	9:2:1	100-6882	1	O-Ring
6:1	106-4945	1	Elbow	9:3	99-0782	2	Clamp-Hose
6:1:1	100-6712	1	O-Ring	9:4	104-9044	1	Hose-Boom Bypass
6:2	99-0782	2	Clamp-Hose				
6:3	104-8908	1	Hose-Bypass				
27		1	Pressure Control Hose ASM				
7:1	106-4945	1	Elbow				
7:1:1	100-6712	1	O-Ring				
7:2	99-0781	1	Hosebarb				
7:3	99-0769	1	Nut				

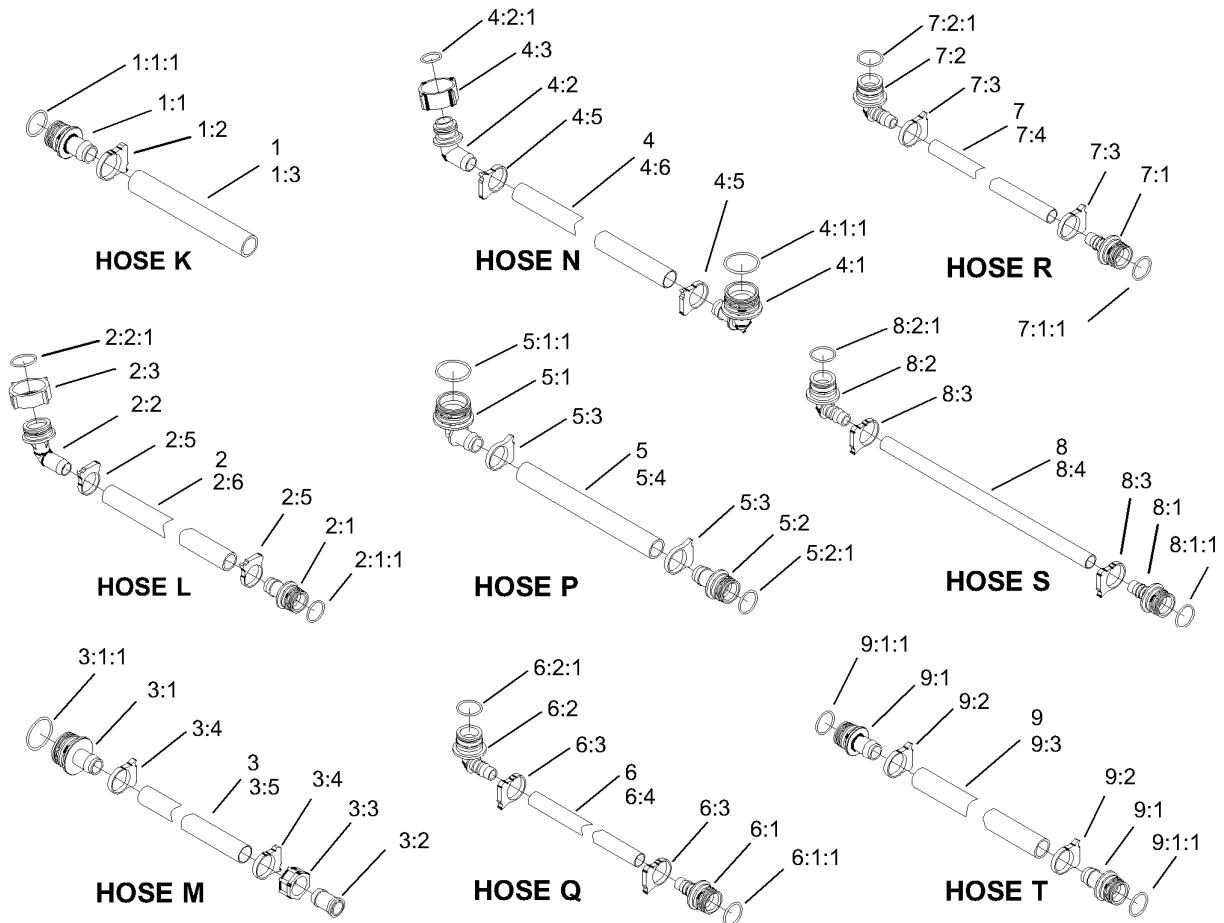 


Hose Assemblies No. 2

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
②1		1	Main On/off Bypass Hose ASM	4:2:1	100-6646	1	O-Ring
1:1	106-4935	1	Hosebarb ASM	4:3	100-8678	1	Nut
1:1:1	100-6712	1	O-Ring	4:5	99-0782	2	Clamp-Hose
1:2	99-0782	1	Clamp-Hose	4:6	104-8710	1	Hose
1:3	104-8909	1	Hose-Bypass	②5		1	Agitation Valve Hose ASM
②2		1	Agitation Valve Hose ASM	5:1	106-4933	1	Hosebarb ASM
2:1	106-4935	1	Hosebarb ASM	5:1:1	100-8637	1	O-Ring
2:1:1	100-6712	1	O-Ring	5:2	106-4935	1	Hosebarb ASM
2:2	106-4950	1	Hose Barb ASM	5:2:1	100-6712	1	O-Ring
2:2:1	100-8671	1	O-Ring	5:3	99-0782	2	Clamp-Hose
2:3	100-8669	1	Nut	5:4	104-8908	1	Hose-Bypass
2:5	99-0782	2	Clamp-Hose	②6		1	Rear Agitation Hose ASM
2:6	104-8915	1	Hose-Pressure	6:1	106-4939	1	Hosebarb-Straight
②3		1	Manifold Tee Hose ASM	6:1:1	100-6712	1	O-Ring
3:1	106-4932	1	Hosebarb-Straight	6:2	106-4940	1	Hosebarb-90 DEG
3:1:1	100-8637	1	O-Ring	6:2:1	100-6712	1	O-Ring
3:2	99-0781	1	Hosebarb	6:3	99-0755	2	Clamp-Hose
3:3	99-0769	1	Nut	6:4	104-9043	1	Hose-Rear Agitation
3:4	99-0782	2	Clamp-Hose	②7		1	Front Agitation Hose ASM
3:5	104-8712	1	Hose	7:1	106-4939	1	Hosebarb-Straight
②4		1	Relief Valve Hose ASM	7:1:1	100-6712	1	O-Ring
4:1	106-4933	1	Hosebarb ASM	7:2	106-4940	1	Hosebarb-90 DEG
4:1:1	100-8637	1	O-Ring	7:2:1	100-6712	1	O-Ring
4:2	106-4949	1	Hosebarb-110 DEG	7:3	99-0755	2	Clamp-Hose

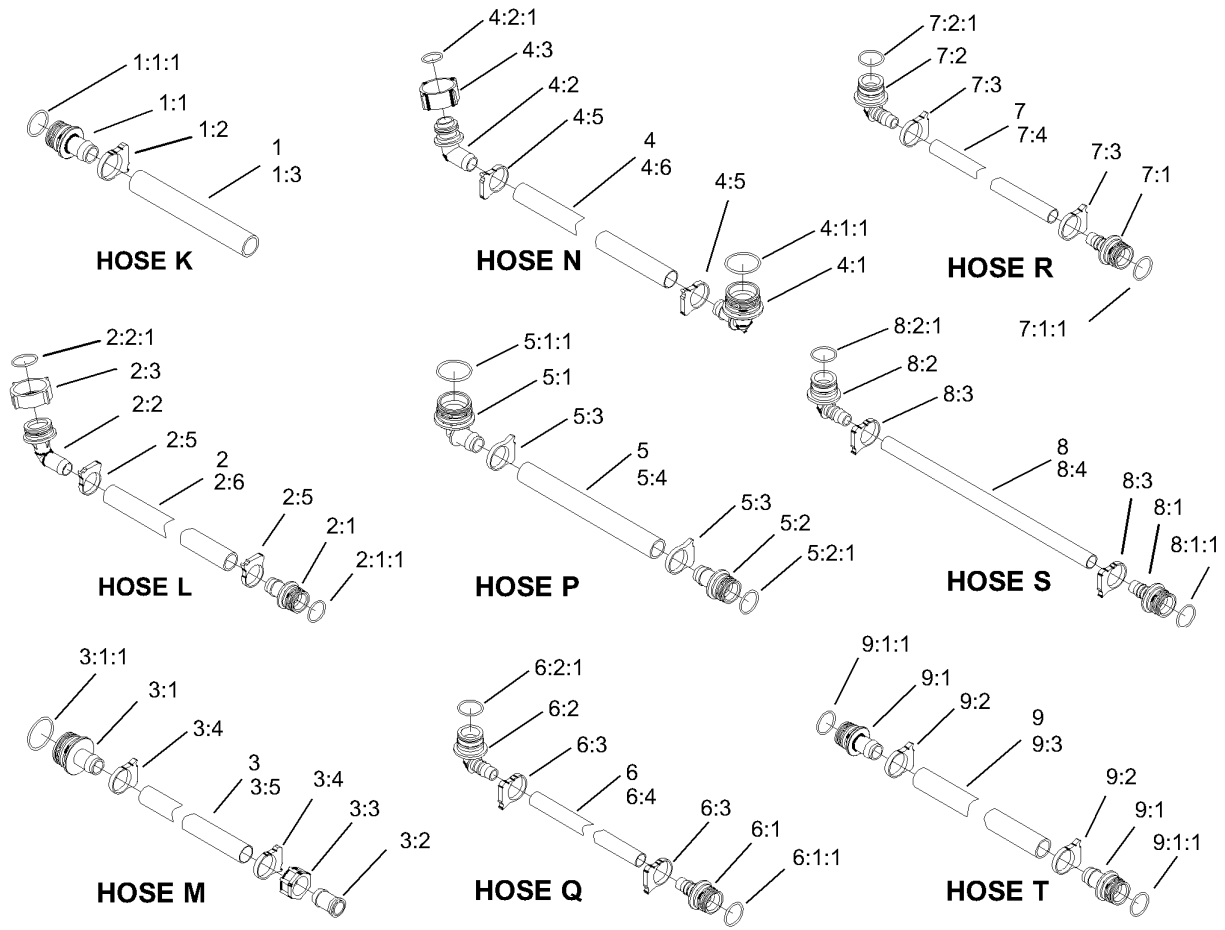 

Hose Assemblies No. 2 (continued)

Ref	Part No.	Qty.	Description				
7:4	104-8706	1	Hose				
28		1	Middle Agitation Hose ASM				
8:1	106-4939	1	Hosebarb-Straight				
8:1:1	100-6712	1	O-Ring				
8:2	106-4940	1	Hosebarb-90 DEG				
8:2:1	100-6712	1	O-Ring				
8:3	99-0755	2	Clamp-Hose				
8:4	104-8704	1	Hose				
29		1	Agitation Tee Hose ASM				
9:1	106-4935	2	Hosebarb ASM				
9:1:1	100-6712	1	O-Ring				
9:2	99-0782	2	Clamp-Hose				
9:3	104-9039	1	Hose-Agitation Tee				

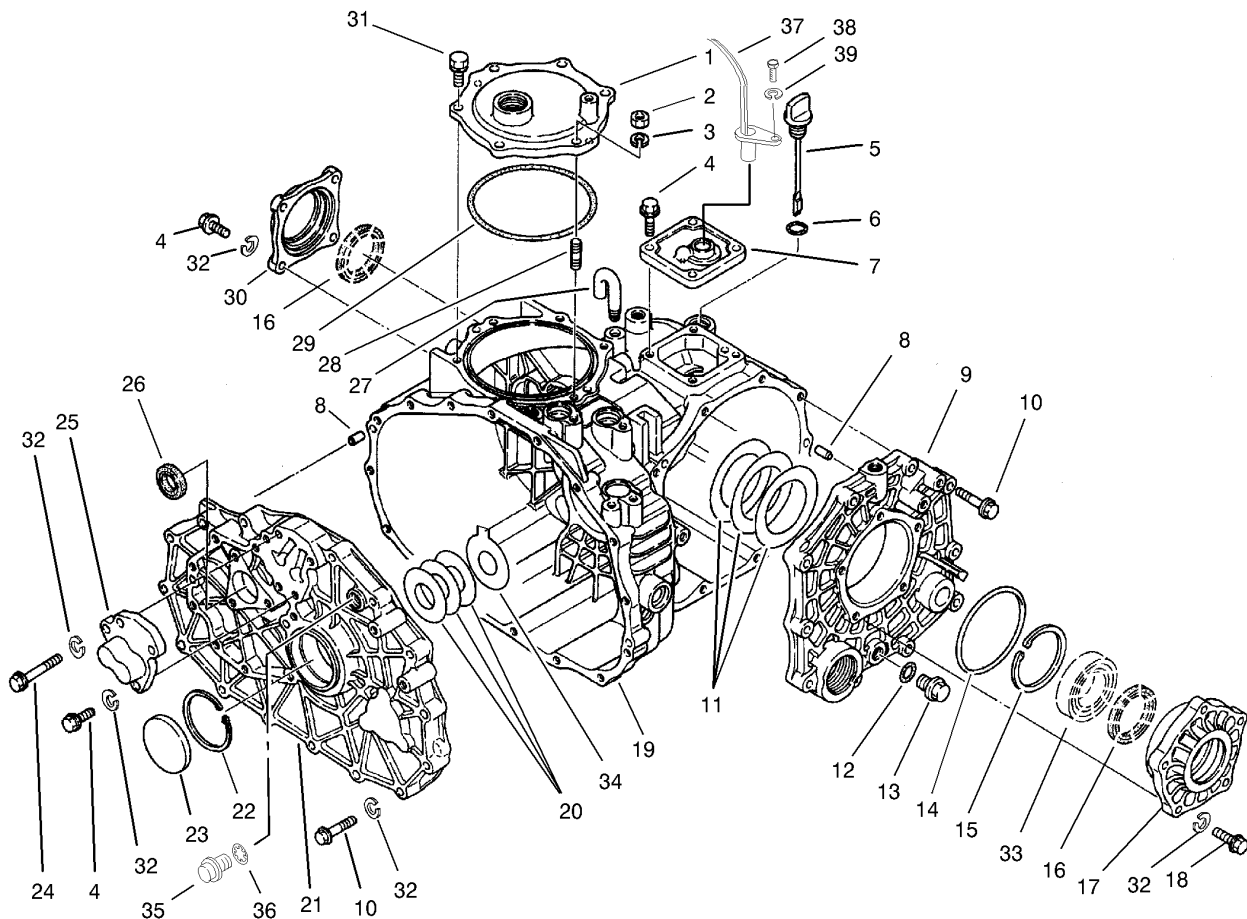 


Transaxle Case Assembly

Transaxle Assembly No. 104-9078


Ref	Part No.	Qty.	Description
1	100-8595	1	Cover-PTO
2	48-7930	1	Nut
3	92-0762	1	Washer-Spring
4	33114-025	11	Screw-HH
5	92-0662	1	Cap-Oil
6	92-0788	1	O-Ring
7	92-0810	1	Cover-Upper, Sensor
8	92-0765	4	Pin-Parallel
9	92-0653	1	Cover-Side
10	33114-040	25	Screw-HH
11	92-0809	1	Set-Shim
12	92-0787	1	O-Ring
13	92-0773	1	Plug-Drain
14	92-0789	1	O-Ring
15	92-0760	1	Ring-Snap
16	92-0793	2	Seal-Oil
17	92-0654	1	Carrier-Differential
18	48-7730	5	Bolt
19	92-0651	1	Case-Transmission
20	100-4460	1	Shim Set
21	100-4461	1	Plate-Center
22	92-0759	1	Ring-Snap
23	92-0807	1	Cap-Sealing
24	48-7560	1	Bolt-HH

Ref	Part No.	Qty.	Description
25	92-0706	1	Shaft-Fork
26	92-0791	1	Seal-Oil
27	92-0743	1	Breather-Air
28	92-0804	1	Stud
29	92-0790	1	O-Ring
30	92-0655	1	Cover-Seal, Axle
31	92-0796	5	Bolt
32	3253-4	42	Washer-Lock
33	92-0775	2	Bearing
34	100-4465	1	Shim (W/tab)
35	100-6924	1	Plug
36	100-6925	1	Packing
37	85-4350	1	Sensor-Geartooth
38	48-7610	1	Bolt
39	48-8020	1	Washer-Spring
99	100-6928	1	Bolt
99	100-8594	1	Cover-Input Shaft

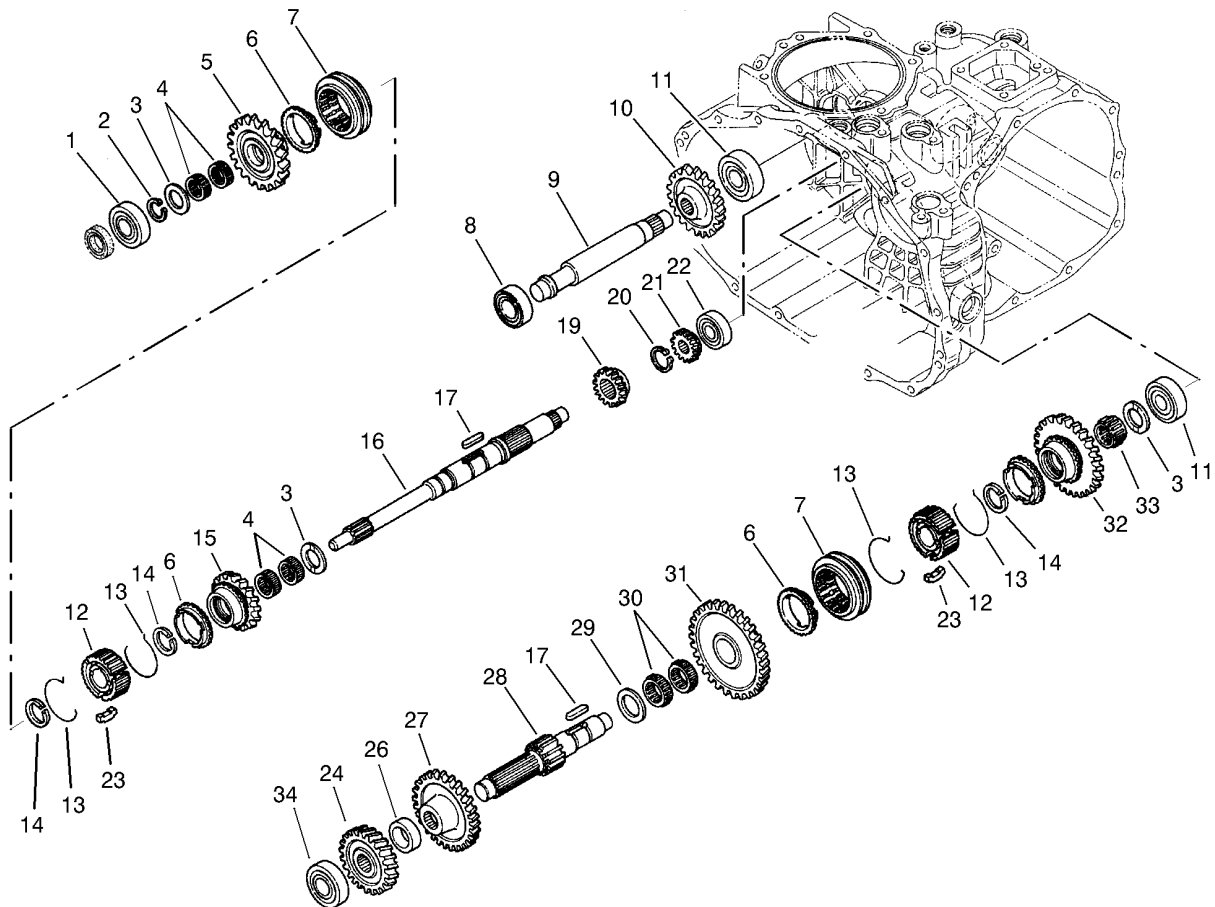 

Transaxle Gear Shaft Assembly
Transaxle Assembly No. 104-9078


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	251-8	1	Bearing-Ball	27	92-0819	1	Gear-Reduction, 40 Tooth
2	92-0753	1	Ring-Snap	28	92-0674	1	Shaft-Reduction
3	92-0740	3	Washer-Thrust	29	92-0682	1	Washer-Thrust
4	92-0781	4	Bearing-Needle	30	92-0681	2	Bearing-Needle
5	100-8597	1	Gear-Main, 36 Tooth	31	100-8599	1	Gear-Red, 25 Tooth
6	92-0667	3	Ring-Synchro	32	100-8600	1	Gear-Red, 47 Tooth
7	92-0668	2	Shifter-Synchro	33	92-0782	1	Bearing-Needle
8	251-346	2	Bearing-Ball	34	105-7985	1	Bearing
9	100-8602	1	Shaft-Idler, Rev				
10	92-0684	1	Gear-Reverse, 33 Tooth				
11	92-0778	2	Bearing				
12	92-0664	2	Hub-Synchro				
13	92-0666	4	Spring-Synchro				
14	92-0763	3	Ring-Snap				
15	100-8598	1	Gear-Main, 20 Tooth				
16	100-8596	1	Shaft-Main				
17	92-0772	2	Key				
19	92-0671	1	Gear-Main, 22 Tooth				
20	92-0754	1	Ring-Snap				
21	92-0673	1	Gear-Main, 14 Tooth				
22	92-0650	1	Bearing				
23	92-0665	6	Key-Synchro				
24	92-0676	1	Gear-Reduction, 32 Tooth				
26	100-8601	1	Collar				

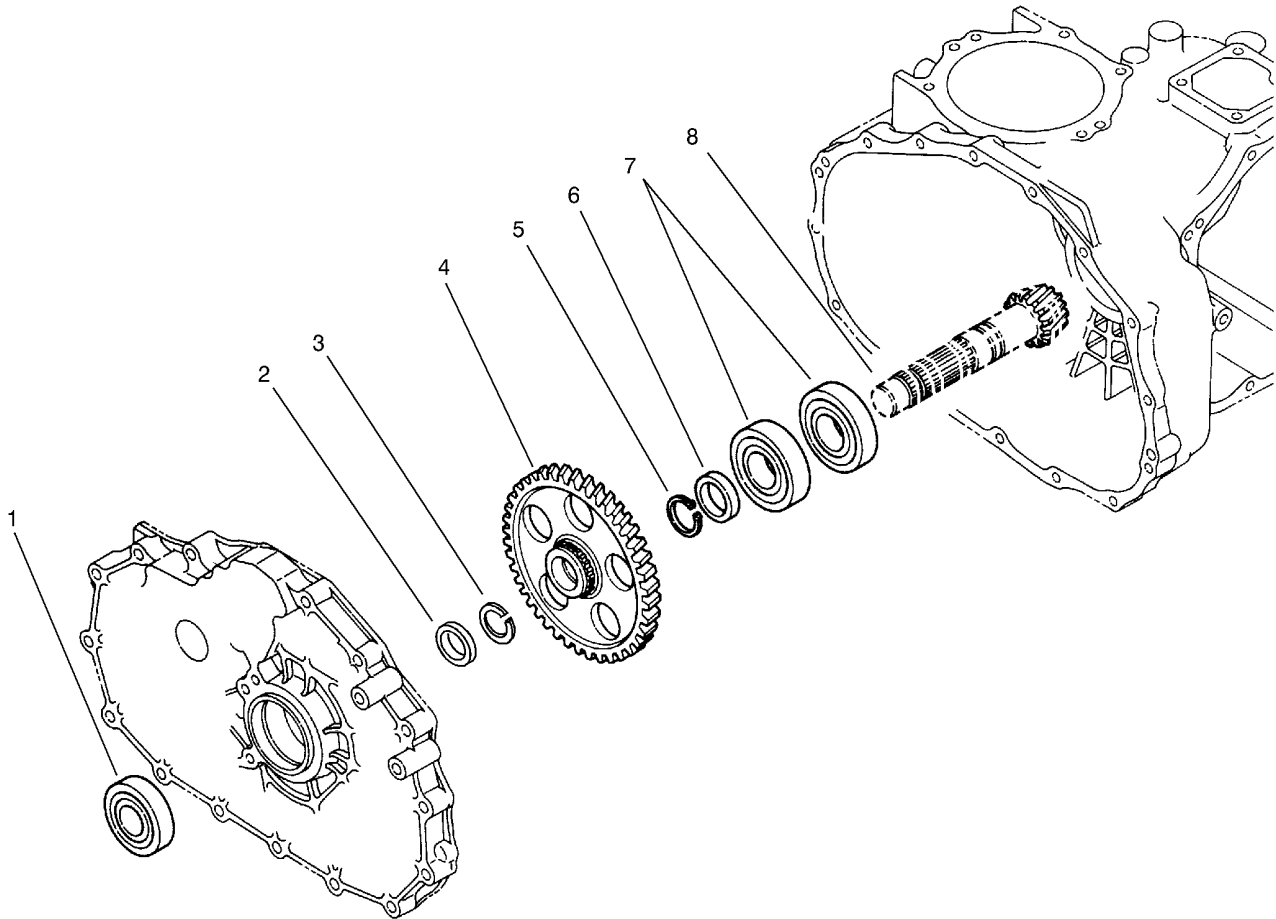 

Countershaft Assembly
Transaxle Assembly No. 104-9078


Ref	Part No.	Qty.	Description				
1	92-0712	1	Bearing-Ball				
2	92-0716	1	Collar				
3	92-0764	1	Ring-Snap				
4	100-8603	1	Gear-Count				
5	92-0755	1	Ring-Snap				
6	92-0713	1	Collar				
7	92-0714	2	Bearing				
8	92-0710	1	Gear-Ring				

 PROTOTYPE

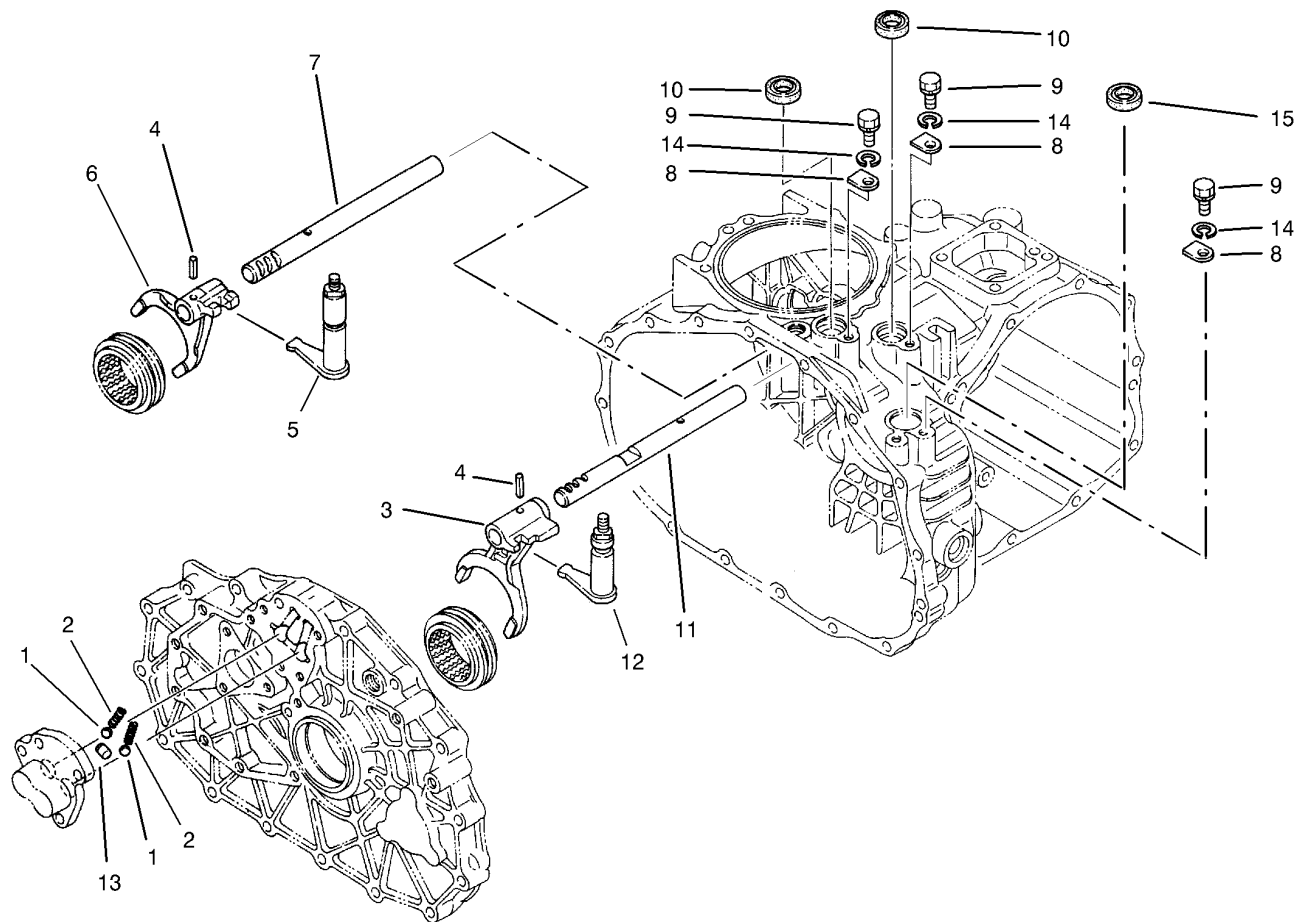

Shift Fork Assembly
Transaxle Assembly No. 104-9078


Ref	Part No.	Qty.	Description				
1	92-0785	3	Ball-Steel	PROTOTYPE			
2	92-0731	3	Spring				
3	92-0700	1	Fork-Shift				
4	92-0769	2	Pin-Roll				
5	92-0817	1	Arm-Shift				
6	92-0701	1	Fork-Shift				
7	92-0699	1	Shaft-Fork				
8	92-0732	3	Plate-Keeper				
9	33114-016	3	Screw-HH				
10	92-0729	3	Seal-Oil				
11	92-0698	1	Shaft-Fork				
12	92-0816	1	Arm-Shift				
13	92-0705	1	Lock-Spindle				
14	3253-4	3	Washer-Lock				
15	100-6927	1	Cap-Sealing				

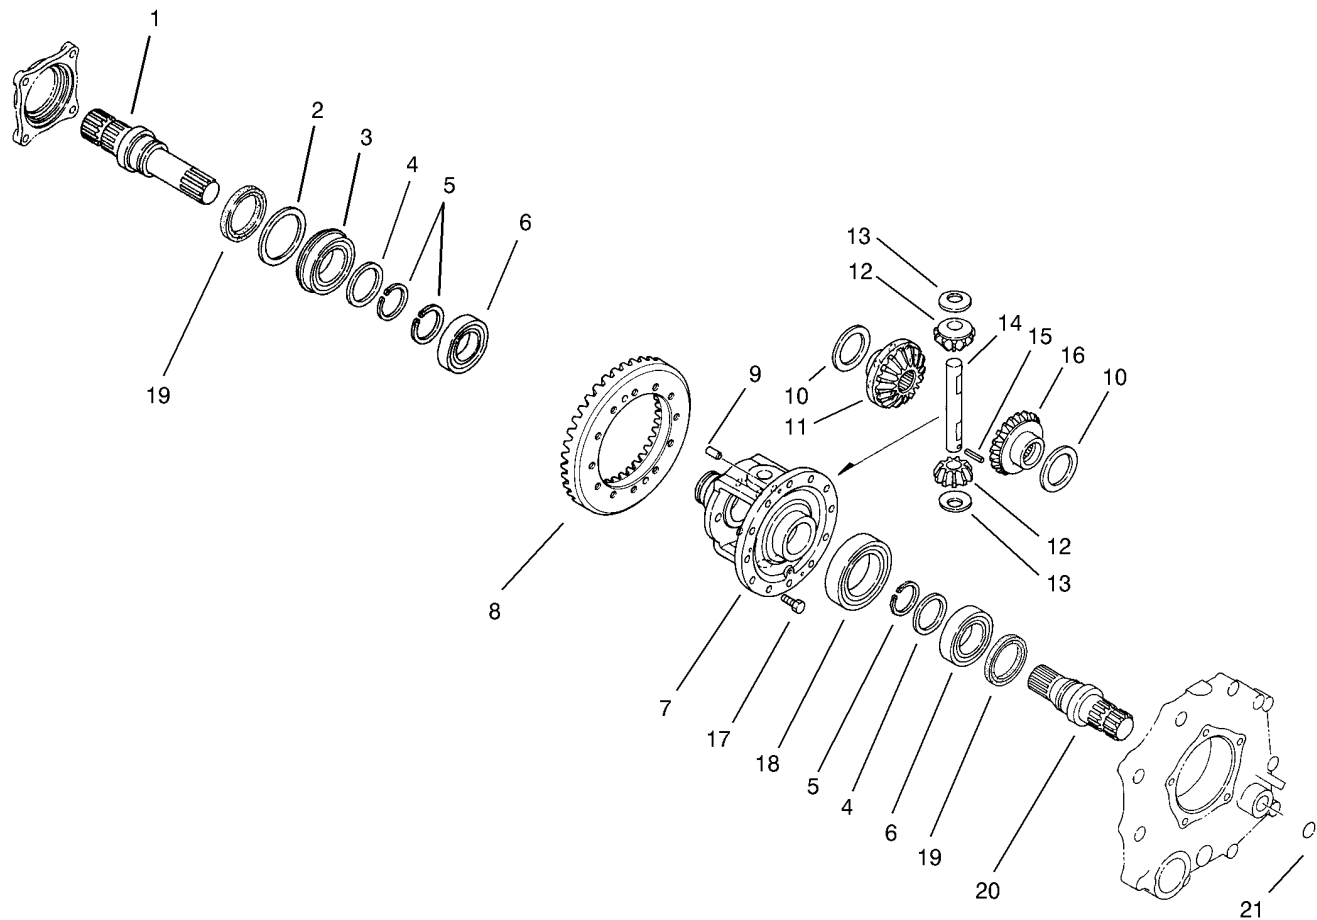 


Differential Gear Assembly
Transaxle No. 104-9078

Ref	Part No.	Qty.	Description				
1	92-0726	1	Shaft-Axle, Right				
2	92-0728	1	Washer				
3	92-0780	1	Bearing				
4	92-0727	2	Washer				
5	92-0756	3	Ring-Snap				
6	92-0775	2	Bearing				
7	92-0720	1	Case-Differential				
8	92-0710	1	Gear-Ring				
9	92-0765	2	Pin-Parallel				
10	92-0747	2	Side-Gear, Left Inner				
11	92-0746	1	Gear-Side, RH				
12	92-0748	2	Pinion-Differential				
13	92-0750	2	Washer				
14	92-0749	1	Shaft-Pinion				
15	92-0768	2	Pin-Roll, Spring				
16	92-0745	1	Gear-Side, LH				
17	92-0803	12	Bolt				
18	92-0776	1	Bearing				
19	92-0793	2	Seal-Oil				
20	92-0725	1	Shaft-Axle, Left				
21	100-6926	1	Cap-Sealing				

 
Vehicle Electrical Schematic

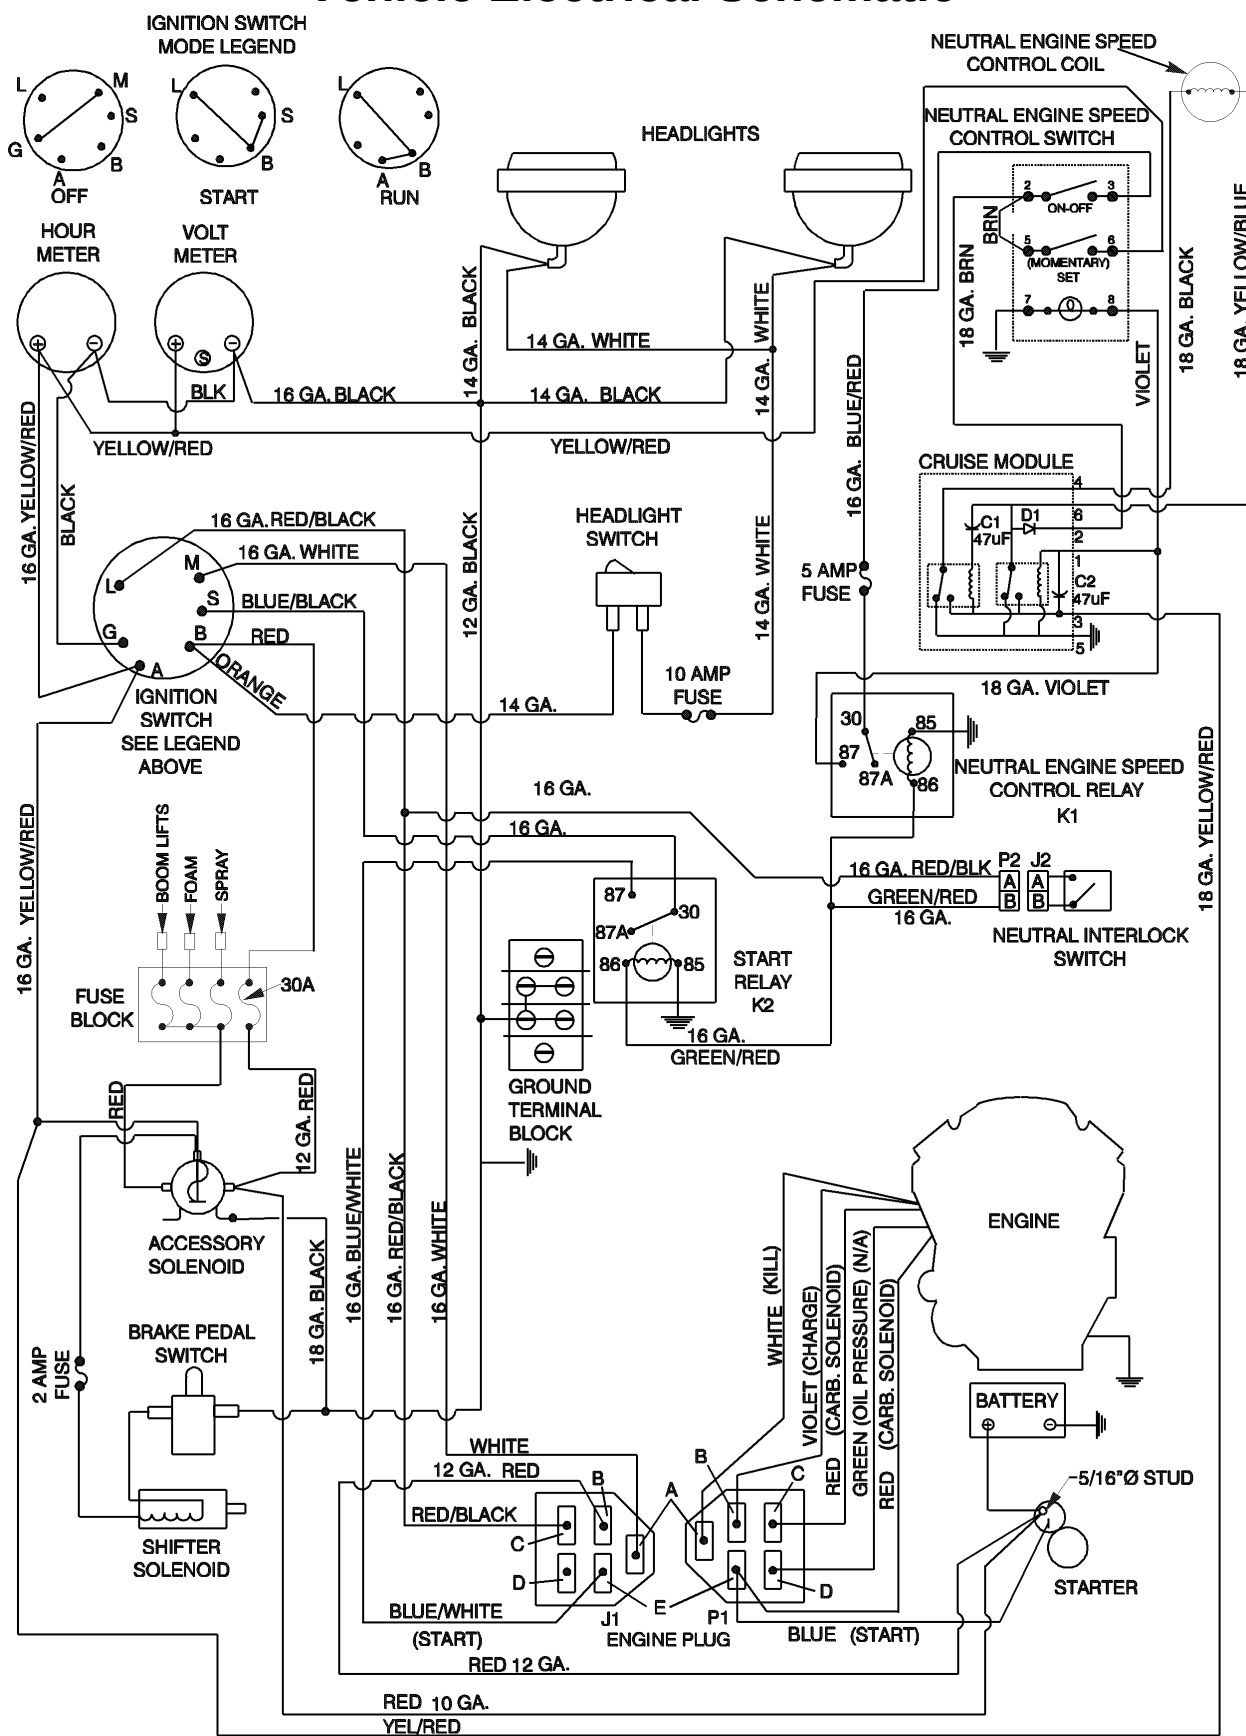


Vehicle Hydraulic System

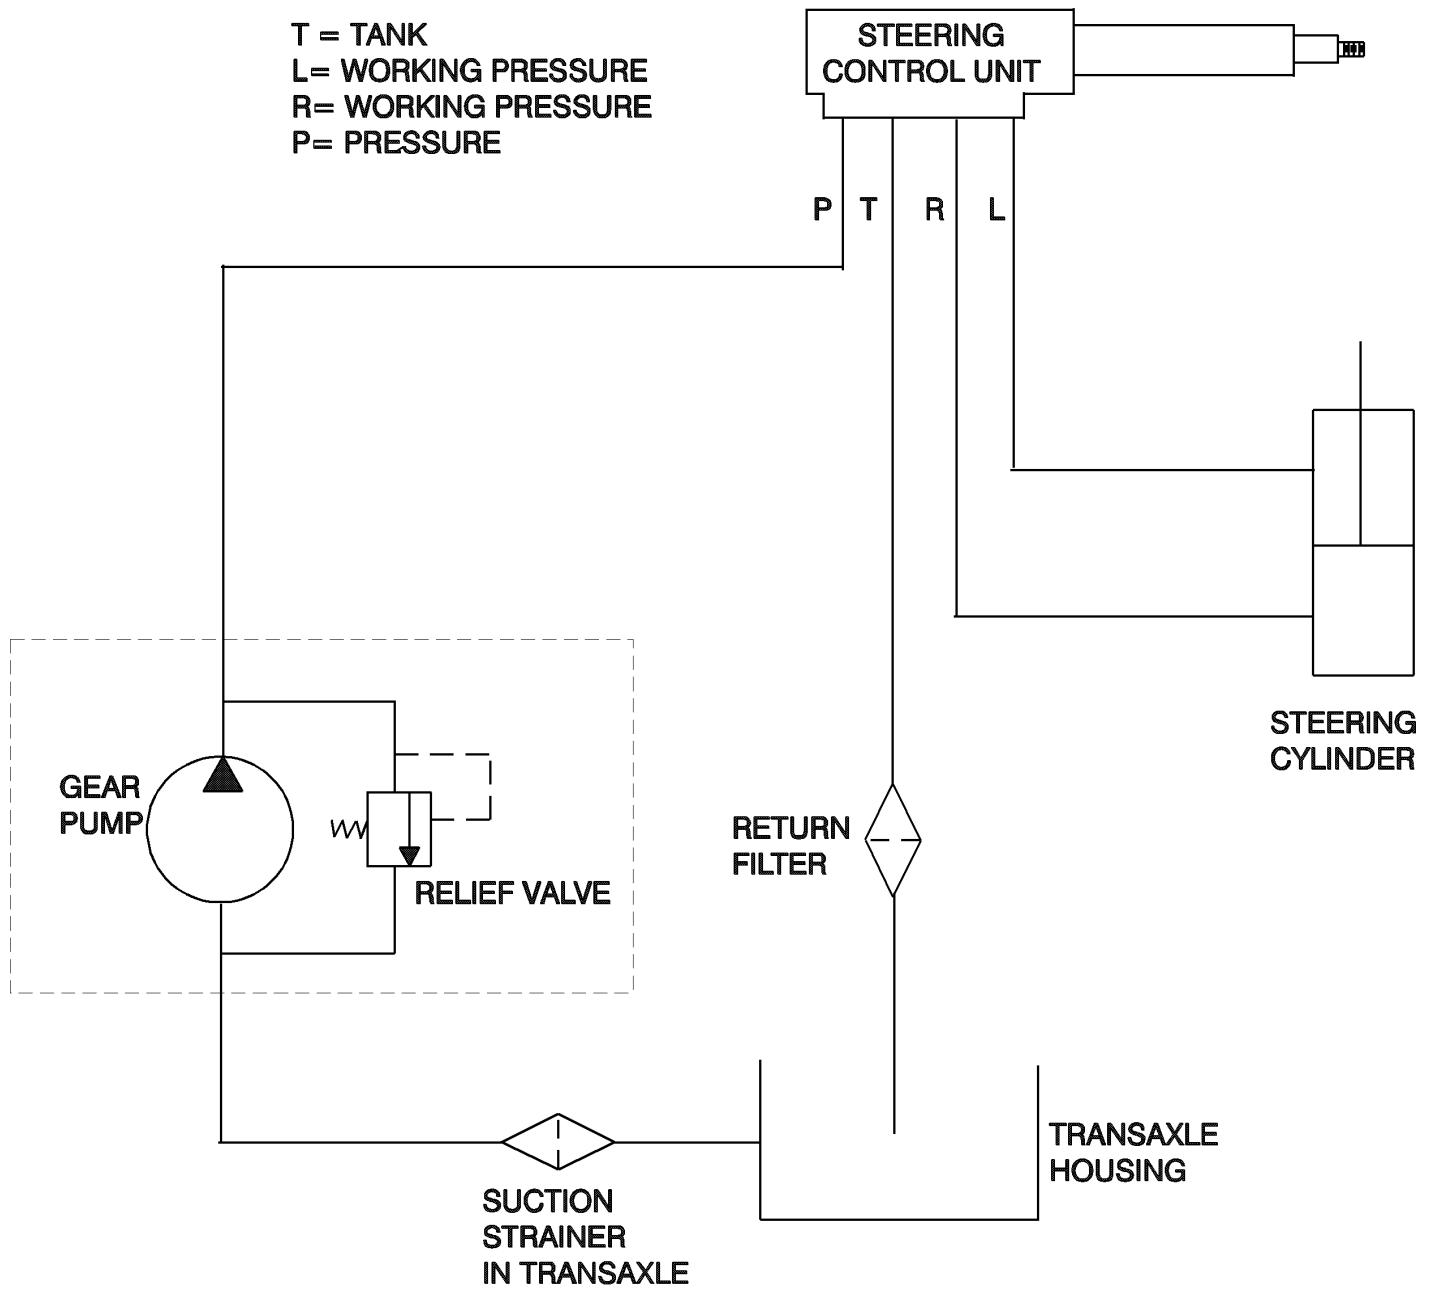 


Spray System Electrical Schematic

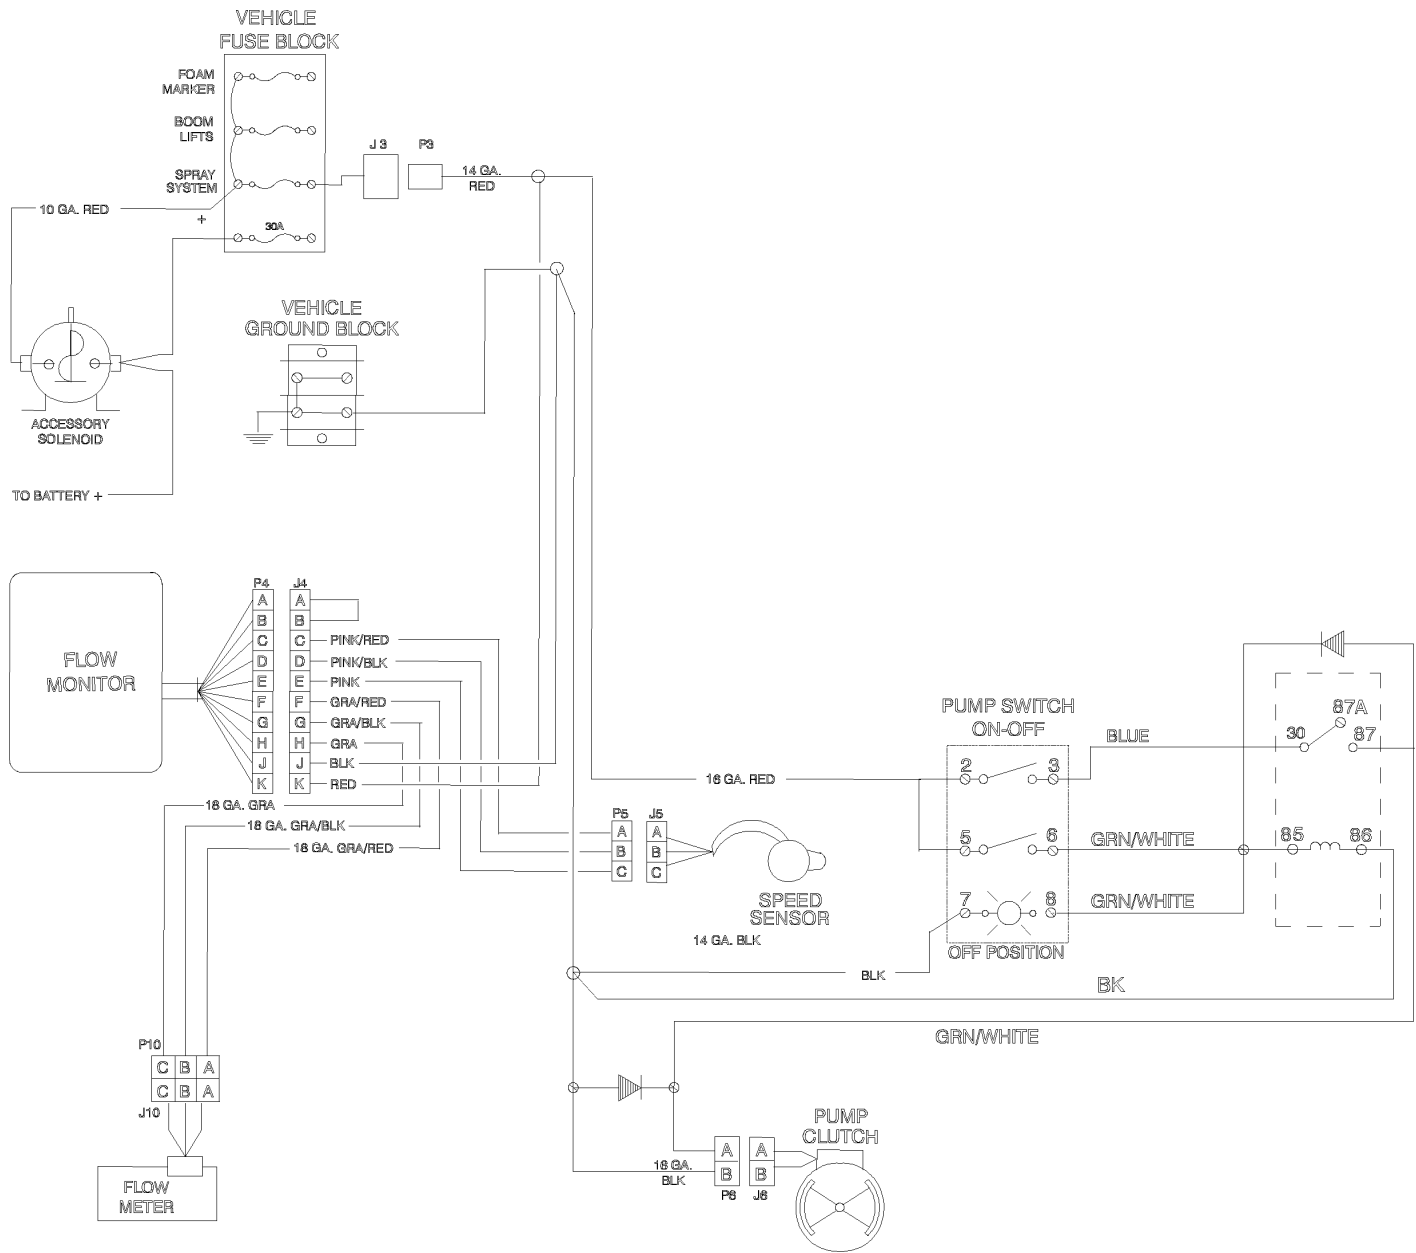 


Spray System Flow Diagram

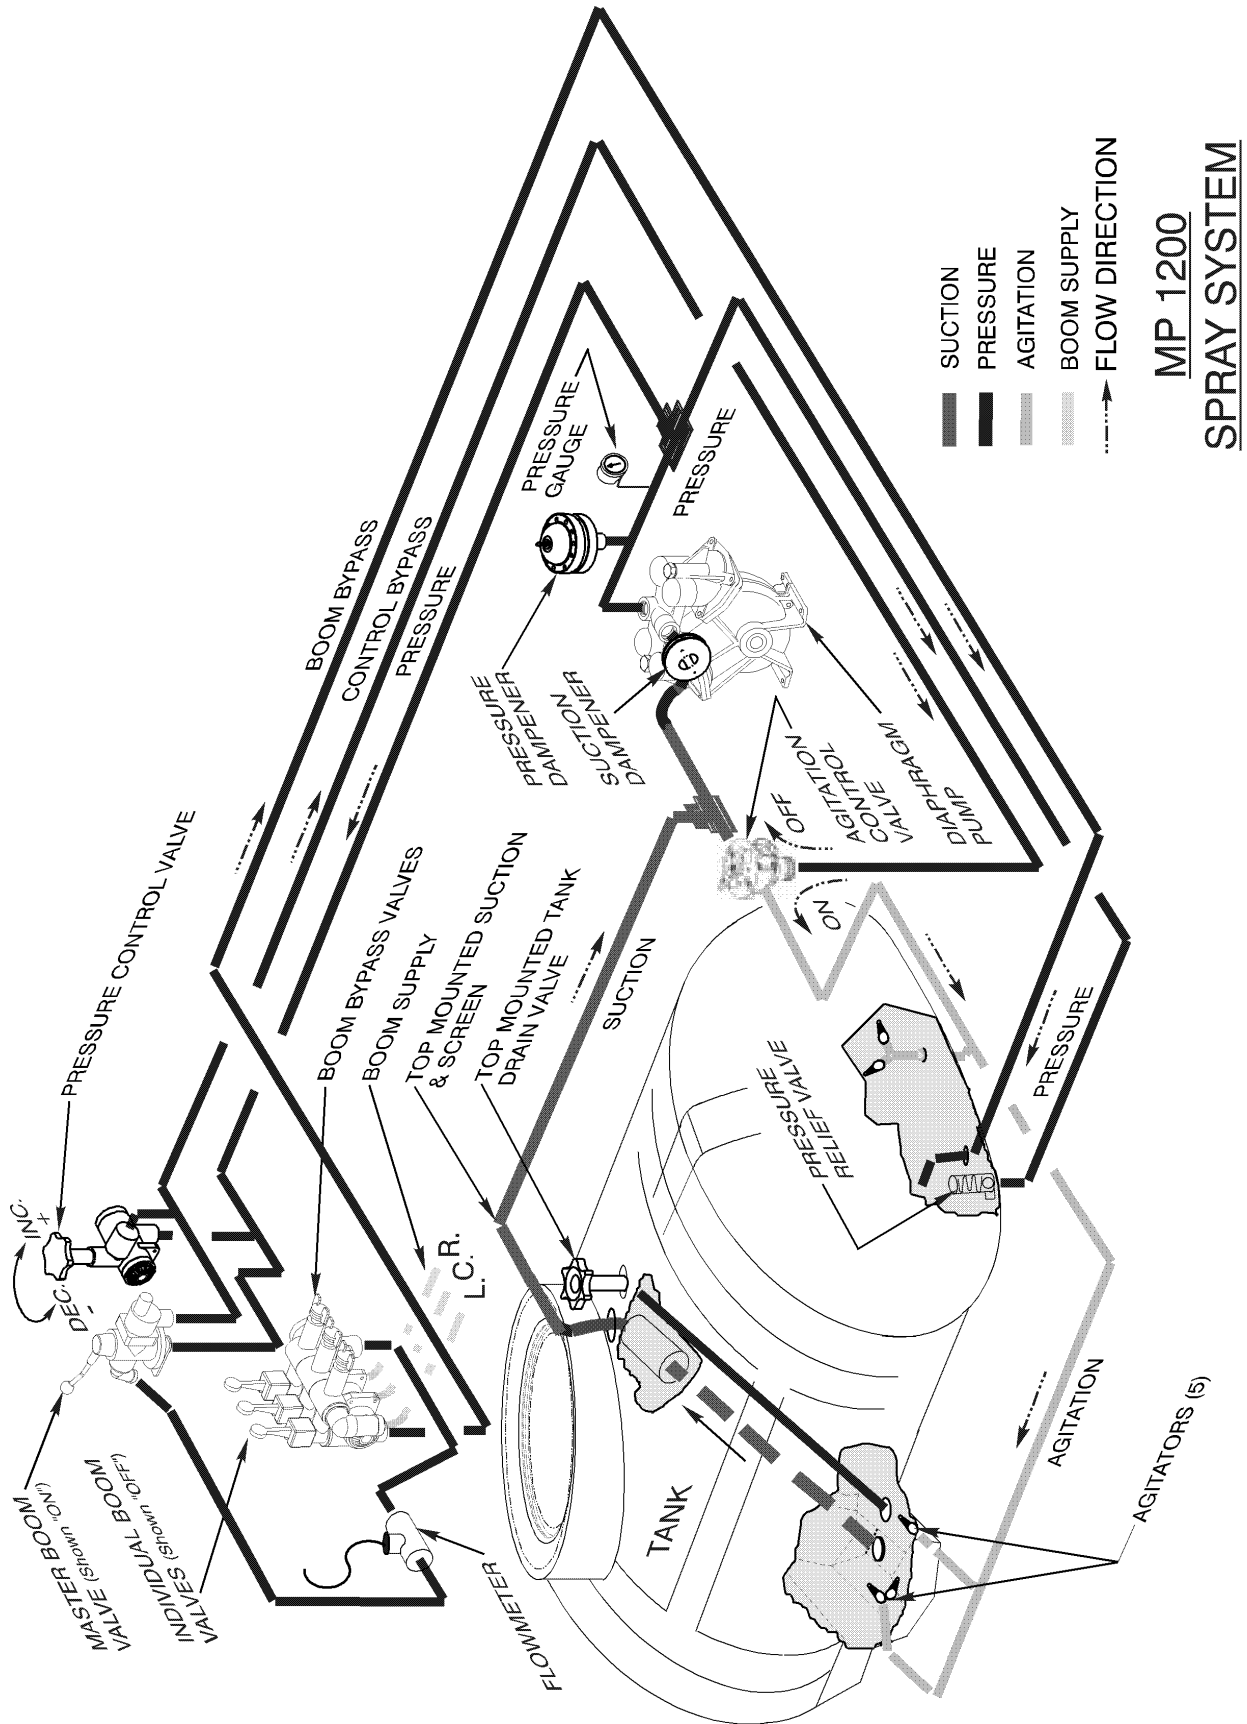 

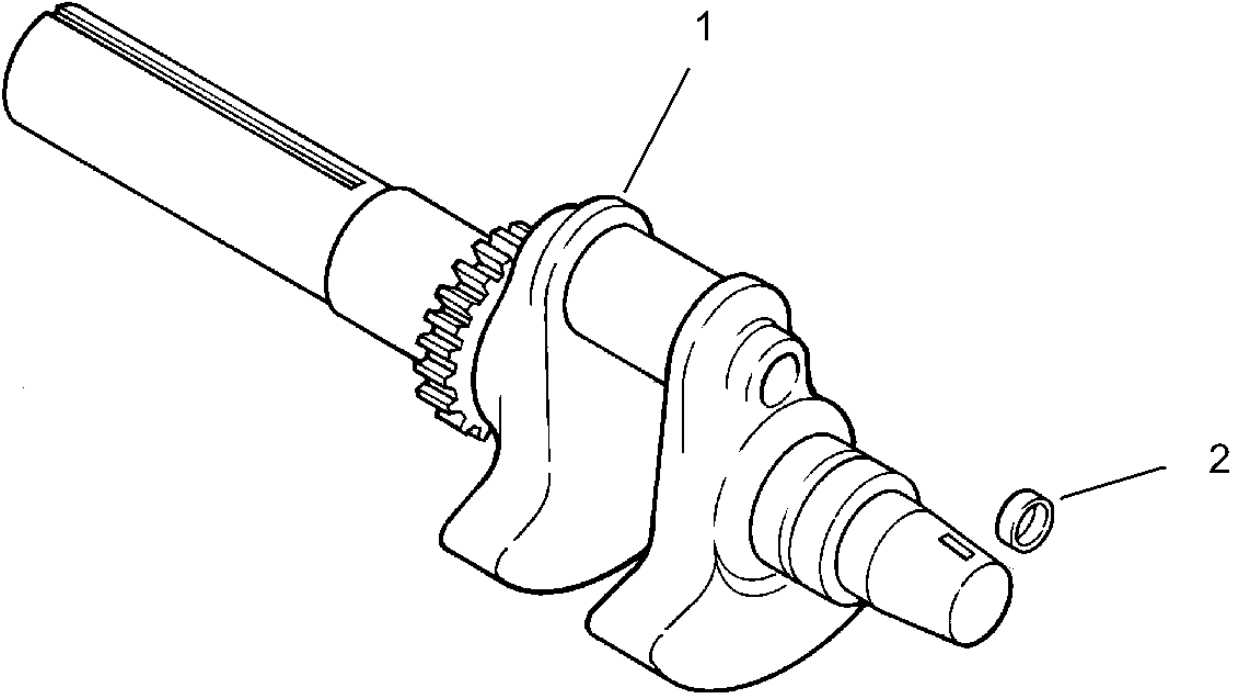 


Crankshaft Assembly
Kohler CH20S-64647

Ref	Part No.	Qty.	Description				
1	24 014 103-S	2	Crankshaft (Includes 2)				
2	52 139 09-S	1	Plug-Cup				
PROTOTYPE							

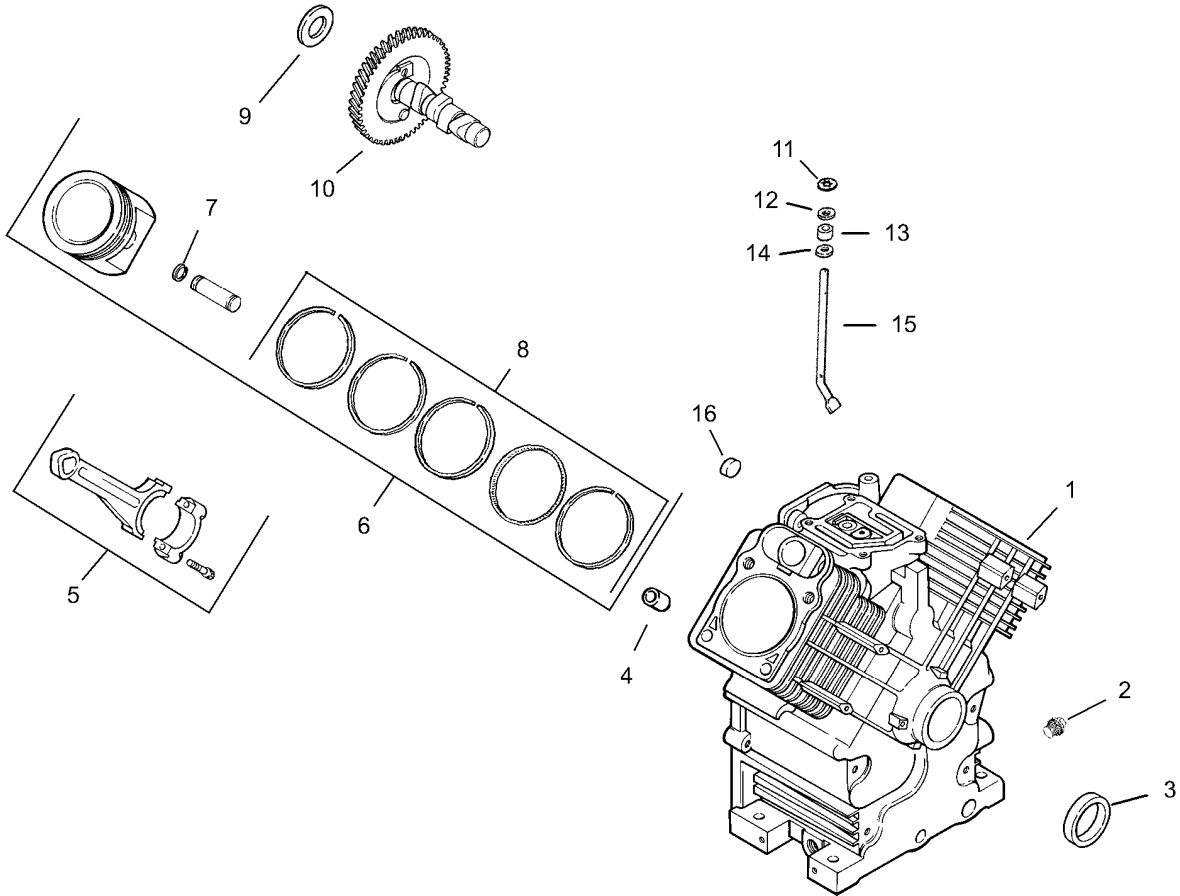 


Crankcase Assembly
Kohler CH20S-64647

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1		1	Cylinder Block (Use Miniblock 24 782 15)	❶11	24 018 09-S	1	Retainer-Ring
❶2	25 139 57-S	2	Plug-SQH	❶12	M-931010-S	1	Washer-Flat
❶3	24 032 01-S	1	Seal-Oil	❶13	28 032 09-S	1	Seal-Governor Cross
❶4	24 380 13-S	6	Pin-Locating	❶14	24 468 15-S	1	Washer
❶5	24 067 13-S	2	Rod-Connecting (Std)	❶15	24 144 33-S	1	Shaft-Governor Shaft
❶	24 067 14-S	2	Rod-Connecting (.25)	❶16	52 139 09-S	1	Plug-Cup
❶6	24 874 17-S	2	Piston W/ring Set (Std.)(Includes 7,8)				
❶	24 874 14-S	2	Piston W/ring (.08)				
❶	24 874 18-S	2	Set-Piston W/ring(.25)				
❶	24 874 19-S	2	Set-Piston W/ring(.50)				
❶7	24 018 01-S	4	Retainer-Piston Pin				
❶8	24 108 11-S	2	Ring Set (Std.)				
❶	24 108 12-S	2	Ring Set (.25)				
❶	24 108 13-S	2	Set-Ring (.50)				
❶9	12 422 09-S	0	Shim-Camshaft				
❶	12 422 13-S	0	Shim-Camshaft				
❶	12 422 07-S	0	Shim-Camshaft				
❶	12 422 08-S	0	Shim-Camshaft				
❶	12 422 10-S	0	Shim-Camshaft				
❶	12 422 11-S	0	Shim-Camshaft				
❶	12 422 12-S	0	Shim-Camshaft				
❶10	24 012 10-S	1	Camshaft				

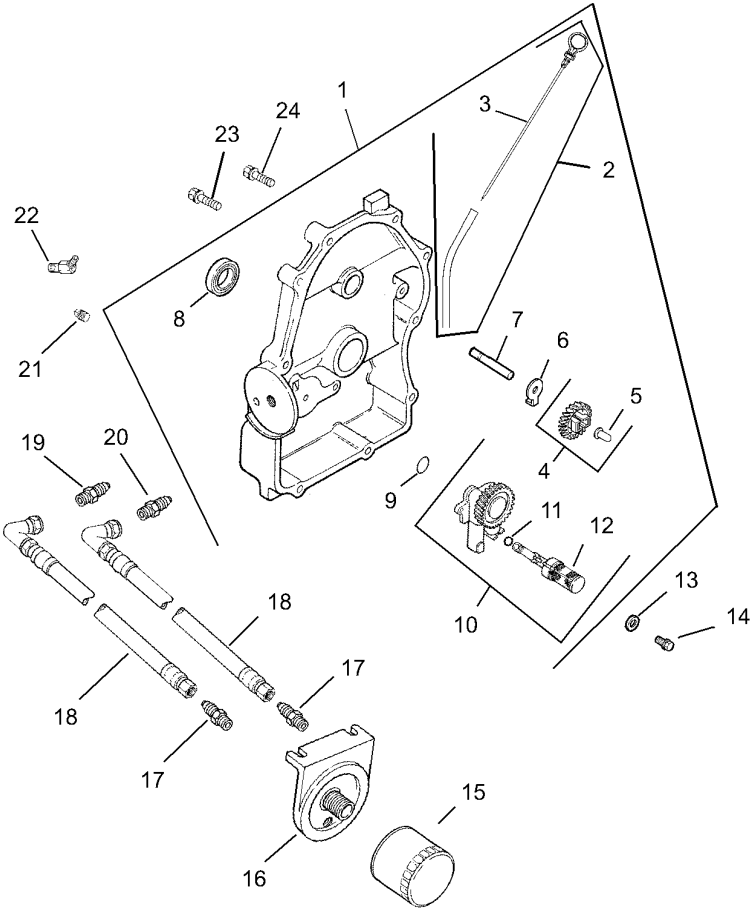 


Oil Pan / Lubrication Assembly
Kohler CH20S-64647

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	24 009 96-S	1	Plate, Closure Asm (Includes 2-12,19, 20, 22)	❶23	24 086 17-S	1	Screw-HF
❶2	24 755 121-S	3	Kit, Dipstick W/tube (Includes 3)	❶❶	25 454 03-S	2	Tie
❶3	24 038 10-S	1	Dipstick				
❶4	24 043 12-S	5	Kit, Governor Gear (Includes 5)				
❶5	12 380 01-S	1	Pin, Gvrn. Regulating				
❶6	52 448 02-S	1	Tab-Locking				
❶7	12 144 02-S	1	Shaft-Governor Gear				
❶8	52 032 08-S	1	Seal-Oil				
❶9	24 153 08-S	1	O-Ring				
❶10	24 393 37-S	1	Oil Pump Assembly (Includes 11,12)				
❶11	24 153 01-S	1	"o"ring				
❶12	24 381 04-S	1	Pick-Up-Oil				
❶13	M-631005-S	2	Washer-Flat				
❶14	M-645025-S	2	Screw-HF				
❶15	52 050 02-S	1	Filter-Oil				
❶16	25 029 01-S	1	Adapter, Remote Oil Filter				
❶17	52 155 03-S	2	Connector-Reducing				
❶18	24 326 46-S	2	Hose, Oil				
❶19	24 294 08-S	1	Fitting				
❶20	24 294 09-S	1	Fitting				
❶21	25 155 11-S	1	Connector 1/4-18 Npt,1/2-20 Sae 45ø Maleflare				
❶22	24 086 16-S	9	Screw				

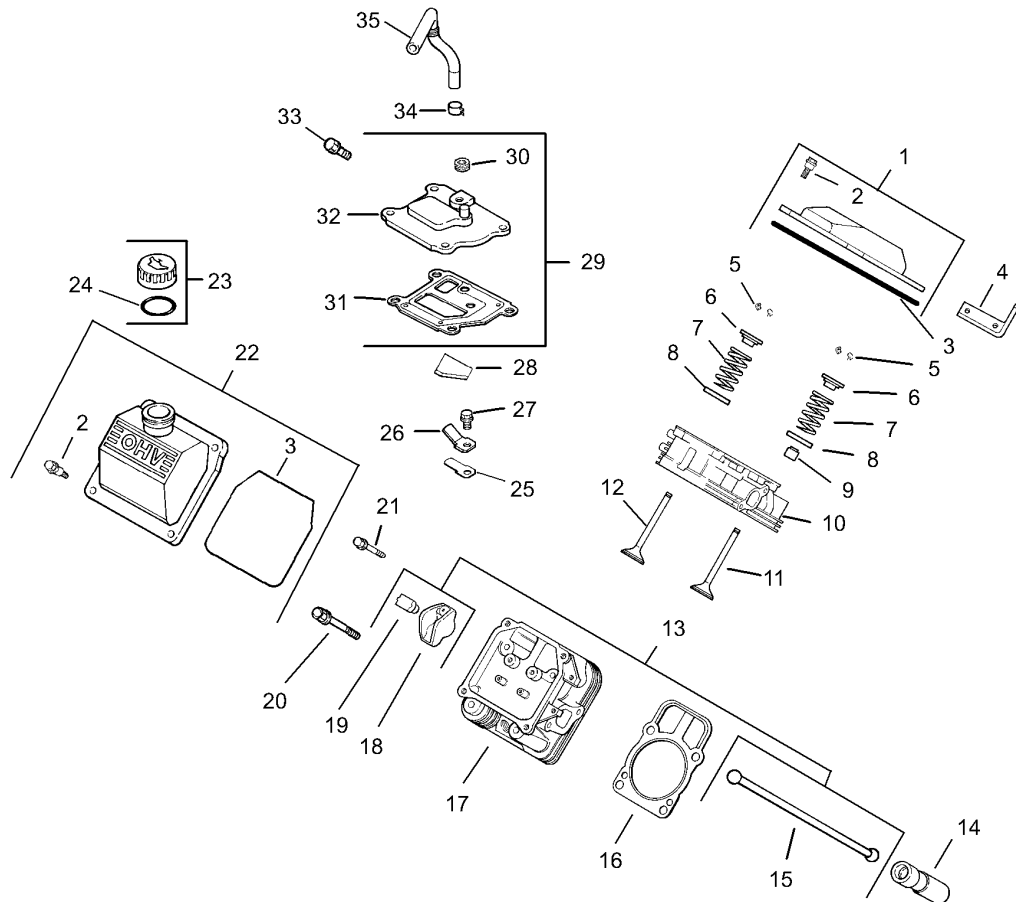 


Head / Valve / Breather Assembly Kohler CH20S-64647

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	24 755 74-S	1	Kit, Valve Cover-Plain (Includes 2,3)	❶22	24 559 03-S	1	Kit, Fuel Pump/valve Cover (Includes 2,3)
❶2	24 086 32-S	4	Screw-Shoulder	❶23	24 755 46-S	1	Kit, Oil Fill Cap (Includes 24)
❶3	24 153 23-S	1	O-Ring, Valve Cover	❶24	25 153 02-S	1	O-Ring
❶4	24 445 01-S	1	Strap-Lifting	❶25	24 402 03-S	1	Reed
❶5	12 755 03-S	4	Kit-Retainer	❶26	12 018 01-S	1	Retainer-Reed
❶6	12 173 01-S	4	Cap-Valve Spring	❶27	M-545010-S	1	Nut-HF
❶7	24 089 02-S	4	Spring-Valve	❶28	24 050 01-S	1	Filter-Breather
❶8	235011-S	4	Retainer-Spring	❶29	24 033 01-S	1	Kit, Breather (Includes 30-32)
❶9	66 032 05-S	2	Seal-Valve Stem	❶30	25 139 60-S	1	Plug-Allen Head
❶10	24 318 68-S	1	#1 Cylinder Head ASM	❶31	24 041 23-S	1	Gasket-Breather
❶11	24 017 01-S	2	Valve-Intake (Std)	❶32	24 096 86-S	1	Cover-Breather
❶	24 017 02-S	2	Valve-Intake (.25)	❶33	M-645020-S	4	Screw-HF
❶12	24 016 01-S	2	Valve-Exhaust (Std)	❶34	25 237 14-S	1	Clamp-Hose
❶	24 016 02-S	2	Valve-Exhaust (.25)	❶35	24 326 26-S	0	Hose-Breather
❶13	24 755 66-S	1	Kit, Valve Train (Includes 15,18,19)				
❶14	25 351 01-S	4	Lifter-Valve				
❶15	24 411 05-S	4	Rod-Push				
❶16	24 041 08-S	2	Gasket-Cylinder Head				
❶17	24 318 71-S	1	#2 Cylinder Head ASM				
❶18	25 186 01-S	4	Arm-Rocker				
❶19	24 599 01-S	4	Pivot-Rocker Arm				
❶22	12 086 16-S	8	Screw				
❶21	M-640034-S	4	Screw-HF				

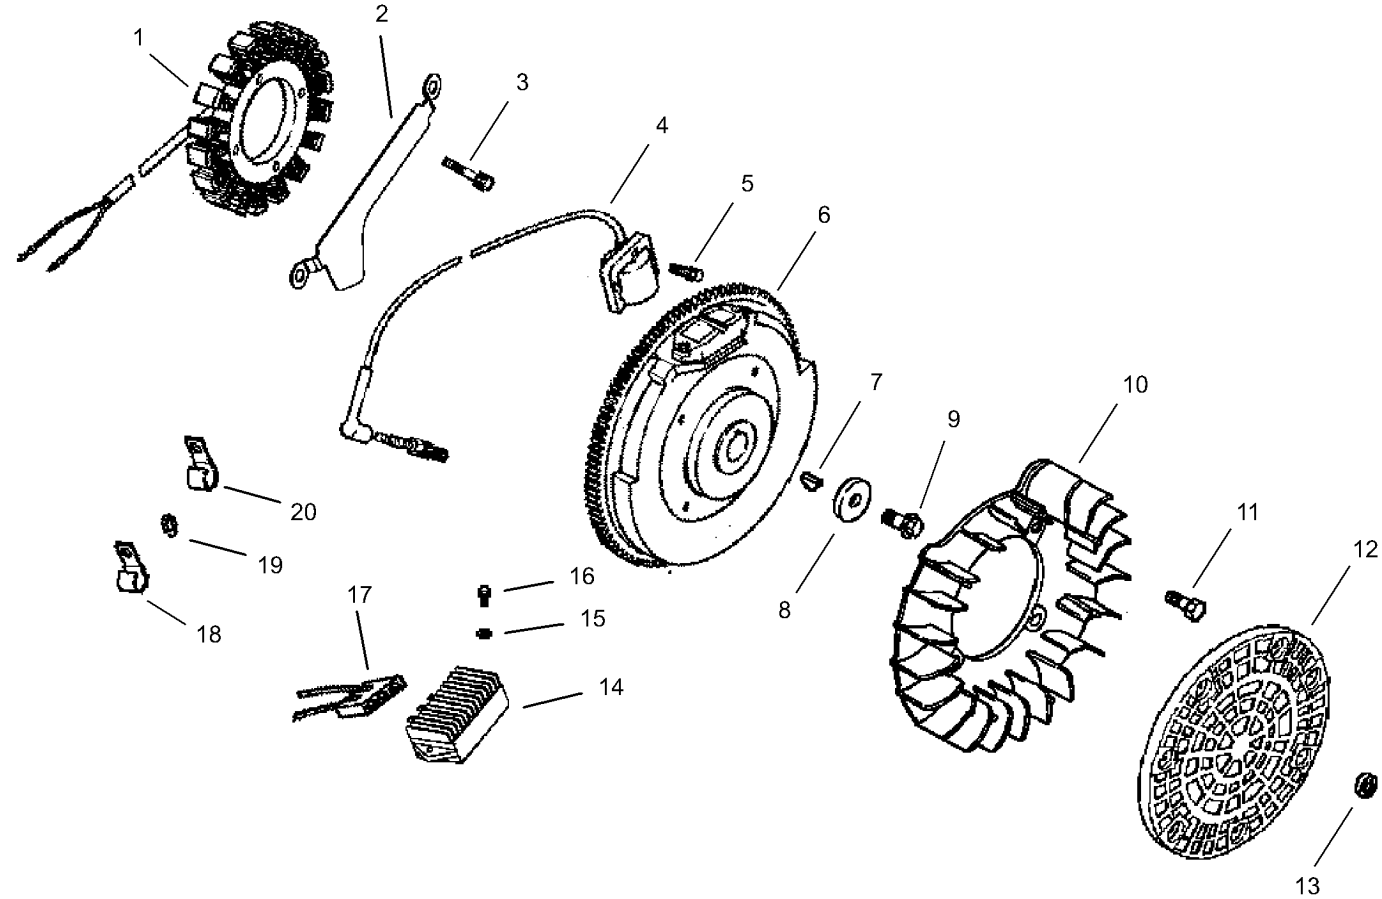 


Ignition / Electrical Assembly
Kohler CH20S-64647

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	28 085 02-S	1	Kit, Stator W/connectors (Includes 17)	❶❸	X-22-11-S	1	Washer-Lock
❶2	24 126 71-S	1	Bracket-Stator Wire	❶❹	25 454 03-S	2	Tie
❶3	M-545030-S	2	Screw-Cap, Hex				
❶4	24 584 01-S	2	Module-Ignition				
❶5	M-545020-S	4	Screw-HF				
❶6	24 025 01-S	1	Flywheel				
❶7	X-42-15-S	1	Key				
❶8	12 468 03-S	1	Washer				
❶9	12 086 14-S	1	Screw				
❶10	24 157 01-S	1	Fan				
❶11	25 086 47-S	4	Bolt-Shoulder				
❶12	24 162 03-S	1	Screen-Grass				
❶13	24 018 03-S	1	Retainer				
❶14	25 403 05-S	1	Rectifier-Regulator 25 Amp				
❶15	X-25-92-S	2	Washer				
❶16	24 086 18-S	2	Screw				
❶17	236602-S	1	Connector				
❶18	235173-S	1	Clip-Cable				
❶19	X-25-63-S	1	Washer				
❶20	48 154 02-S	1	Clip-Cable				
❶21	12 132 06-S	2	Plug-Spark				
❶❸	24 518 12-S	1	Lead-Black				
❶❹	24 176 72-S	1	Harness-Wiring				

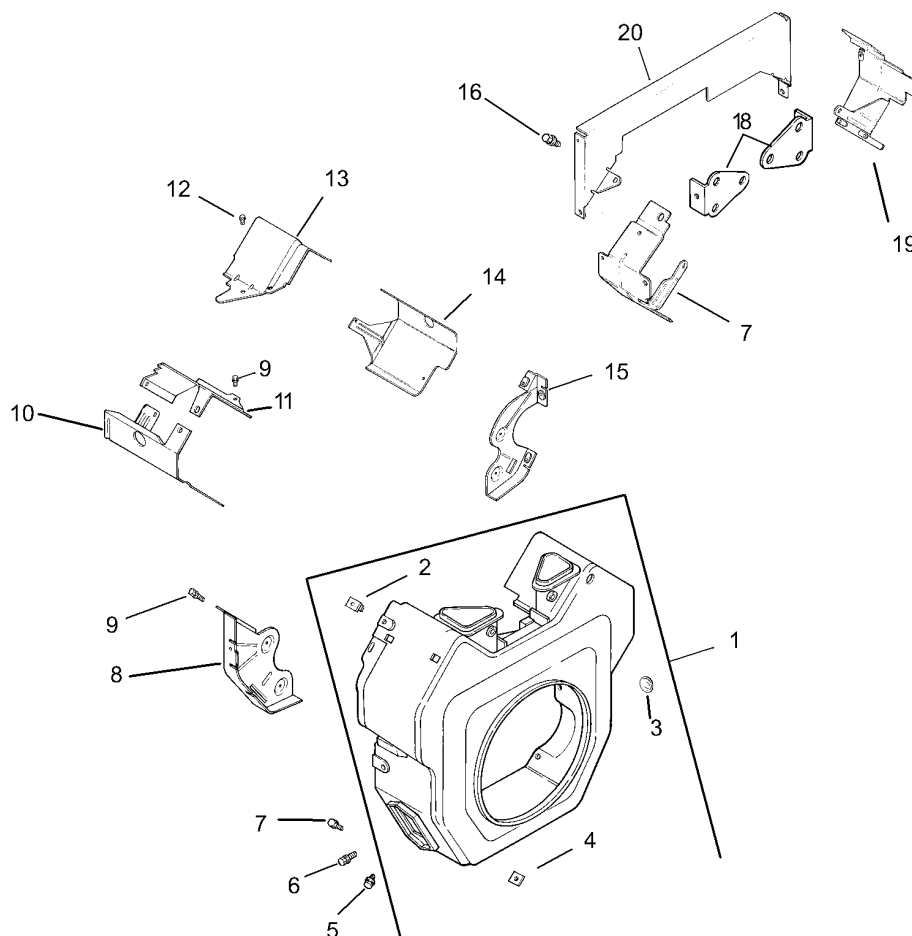 


Blower Housing and Baffle Assembly Kohler CH20S-64647

Ref	Part No.	Qty.	Description				
③1	24 027 175-S	1	Housing, Blower (Includes 2-4)				
③2	24 100 02-S	2	Nut-Plastic				
③3	25 139 16-S	1	Plug-Button				
③4	24 100 01-S	3	Nut				
③5	M-551016-S	1	Screw-HF				
③6	M-545016-S	3	Screw-HF				
③7	M-545020-S	4	Screw-HF				
③8	24 146 16-S	1	Plate-Backing, #2 Side				
③9	M-645016-S	6	Screw-HF				
③10	24 063 20-S	1	Baffle-Cylinder Barrel, #2 Side				
③11	24 063 17-S	1	Baffle-Valley #2 Side				
③12	M-545010-S	2	Nut-HF				
③13	24 063 59-S	1	Baffle-Valley, #1 Side				
③14	24 063 58-S	1	Baffle-Cylinder, #2 Side				
③15	24 146 20-S	1	Plate-Backing, #1 Side				
③16	M-639010-S	4	Screw-HF				
③17	24 063 13-S	1	Baffle-Ducted Air, #1 Side				
③18	24 126 04-S	2	Bracket-Support				
③19	24 063 12-S	1	Baffle-Ducted Air, #1 Side				
①③	24 113 12-S	1	Decal				

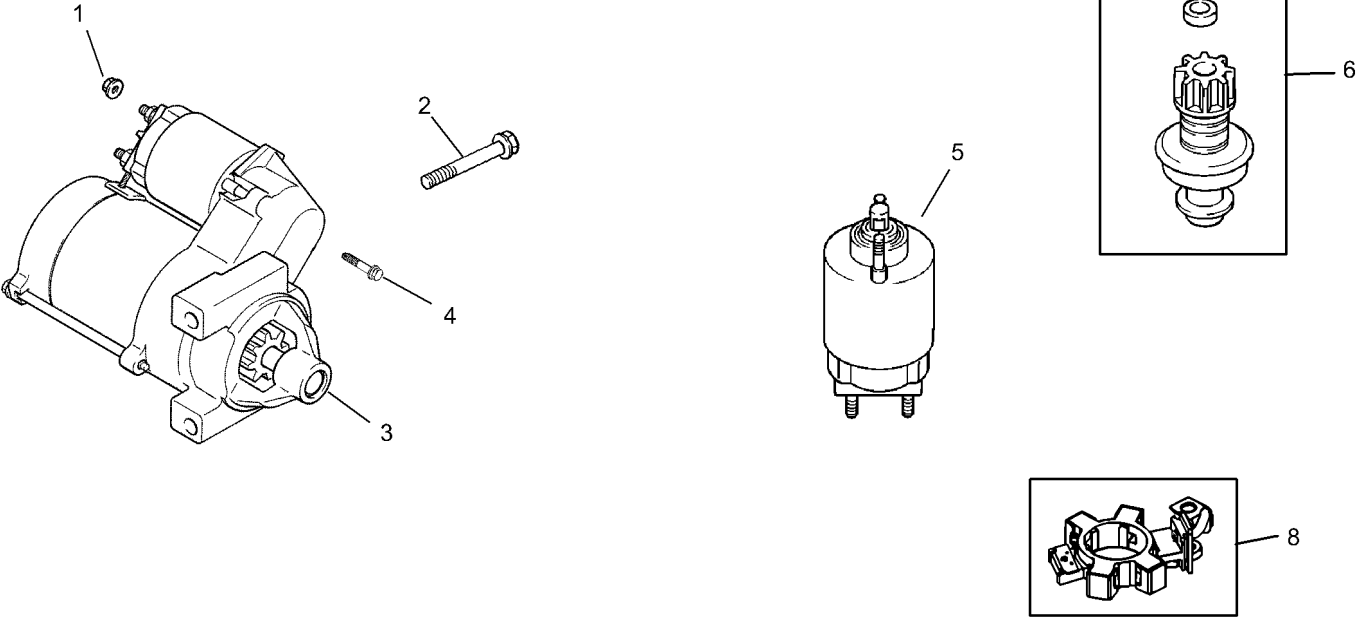 


Starting System
Kohler CH20S-64647

Ref	Part No.	Qty.	Description				
1	M-841080-S	1	Nut-HF				
2	M-839080-S	2	Screw-HF				
3	24 098 09-S	1	Starter, Solenoid Shift Asm (Includes 4-18)				
4	25 086 113-S	3	Screw-External Torx Head				
5	25 435 05-S	4	Kit, Solenoid (Includes 4)				
6	25 755 33-S	7	Kit, Pinion Drive (Includes 7)				
7	25 141 05-S	1	Ring				
8	25 221 01-S	1	Brush Kit				

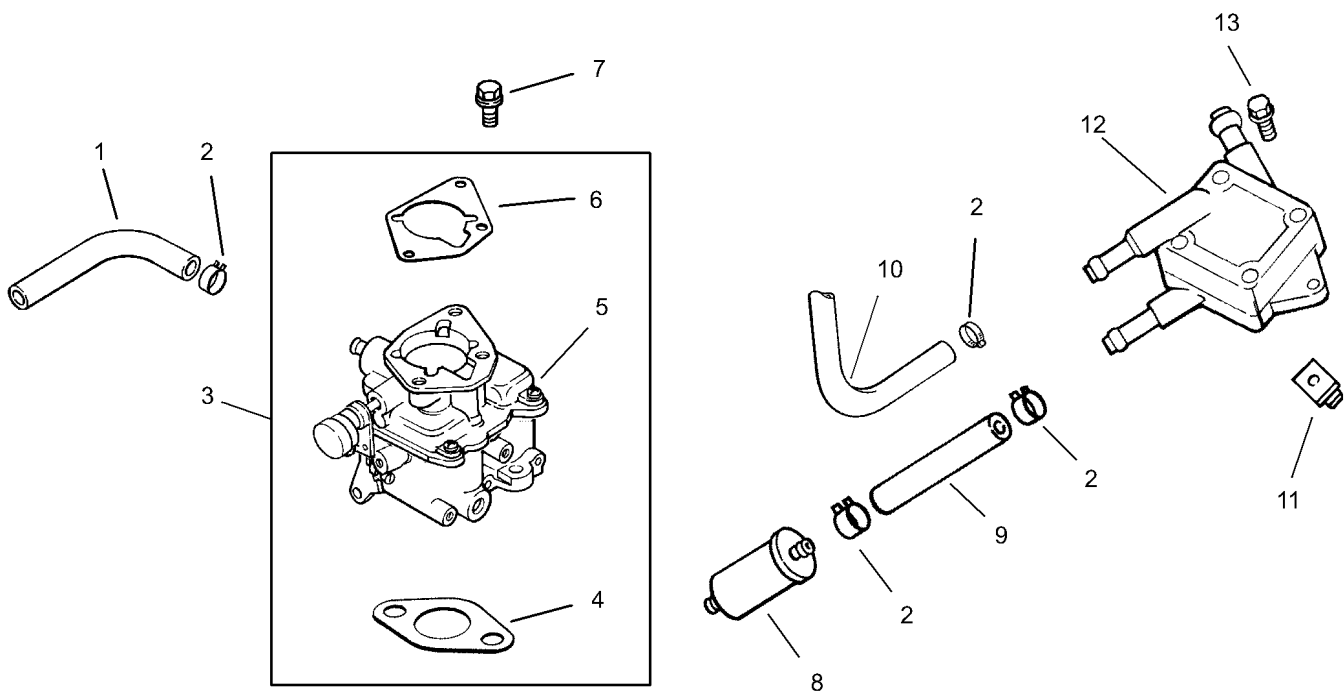 


Fuel System Assembly
Kohler CH20S-64647

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	25 353 32-S	1	Line-Fuel	1	24 757 09-S	1	Repair Kit, Accelerator Pump Diaphragm
2	25 237 14-S	6	Clamp-Hose				
3	24 853 33-S	1	Kit, Carburetor W/gasket (Includes 4-6)				
4	24 041 06-S	1	Gasket-Air Cleaner				
5		1	Carburetor Assembly (Includes 24 75701-S, 24 757 02-S, 24 757 03-S, 24 757 07-S, 24 757 08-S & 24 757 09-S)2405333 (For Information Only Not Available Separately)				
6	24 041 17-S	1	Gasket-Carburetor				
7	M-651030-S	2	Screw-HF				
8	24 050 02-S	1	Filter-Fuel				
9	25 353 15-S	1	Line-Fuel, 3-1/2"				
10	24 353 02-S	1	Line-Fuel				
11	24 100 01-S	2	Nut				
12	24 393 16-S	1	Pump-Fuel				
13	24 086 12-S	2	Screw				
1	24 755 125-S	1	High Altitude Kit W/gaskets				
1	24 757 01-S	1	Solenoid Kit				
1	24 757 02-S	1	Float Kit				
1	24 757 03-S	1	Carburetor Repair Kit				
1	24 757 07-S	1	Choke Repair Kit				
1	24 757 08-S	1	Repair Kit, Accelerator Pump Seal And Bushing				

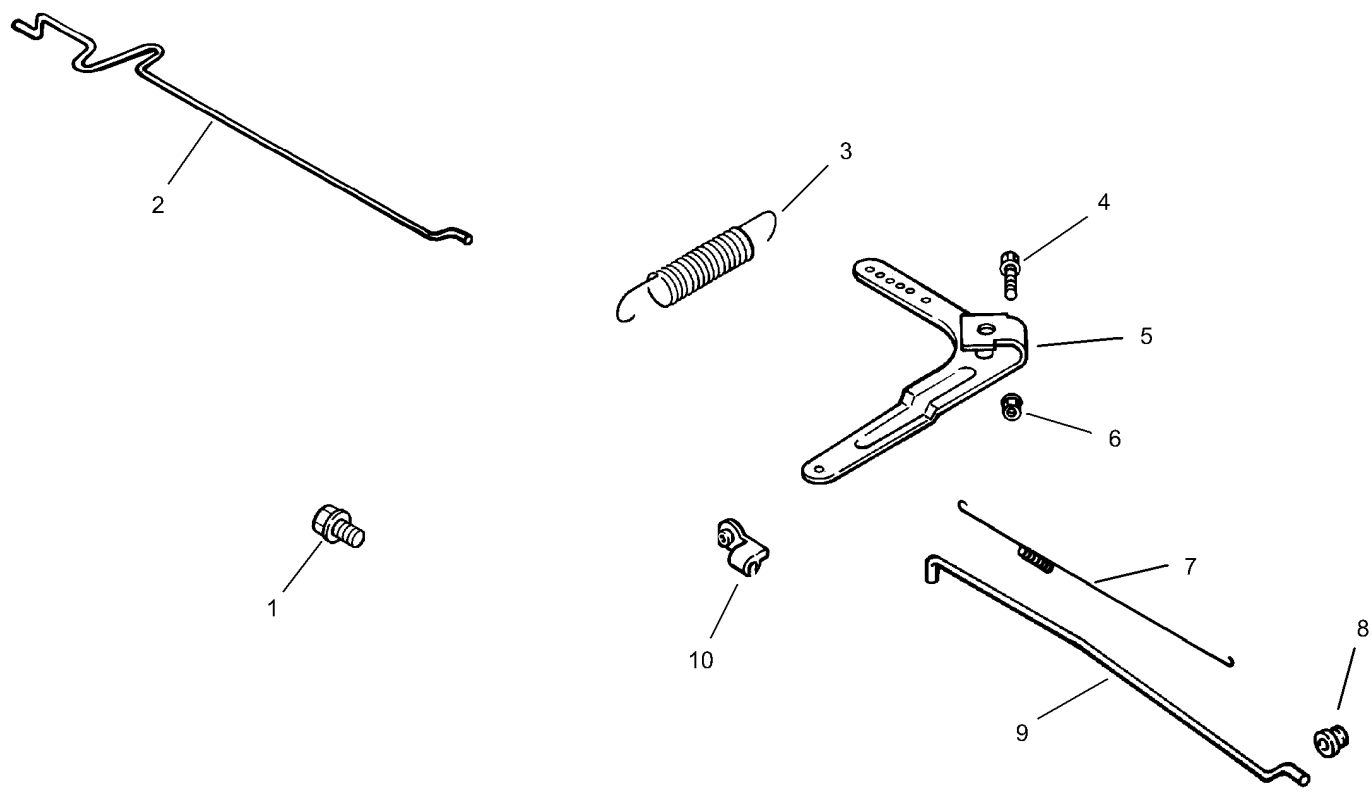 


Engine Controls
Kohler CH20S-64647

Ref	Part No.	Qty.	Description				
❶1	M-645016-S	4	Screw-HF				
❷2	24 079 21-S	1	Linkage-Choke				
❸3	24 089 15-S	1	Spring-Governor				
❹4	24 211 03-S	1	Bolt				
❺5	24 090 33-S	1	Lever-Governor				
❻6	M-641060-S	1	Nut-HF				
❼7	24 089 01-S	1	Spring-Linkage				
❽8	25 158 08-S	1	Bushing				
❾9	24 079 01-S	1	Linkage-Throttle				
❿10	25 158 11-S	1	Bushing				
1❶	25 454 03-S	1	Tie				

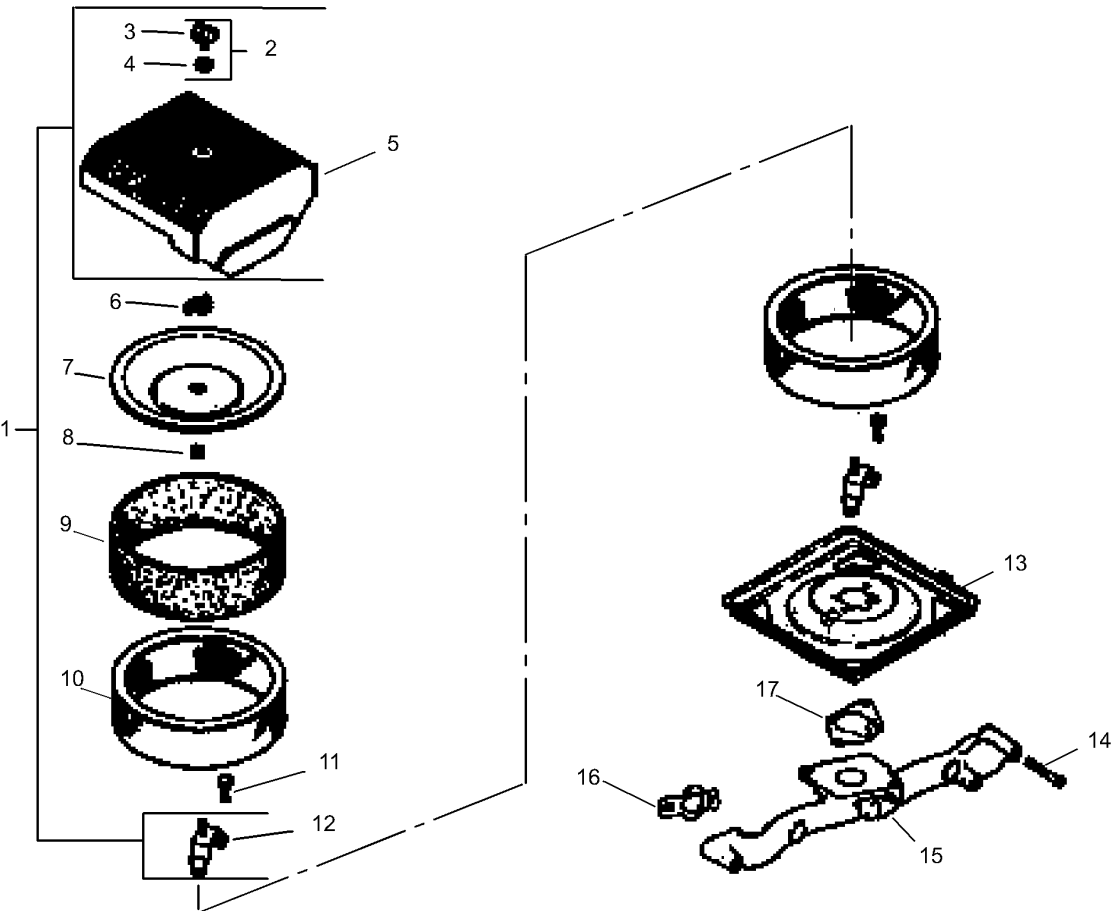 

Air Intake / Filtration Assembly
Kohler CH20S-64647

Ref	Part No.	Qty.	Description				
❶1	24 743 05-S	1	Kit, Air Cleaner Cover (Includes 2-5,12)				
❷2	54 755 01-S	1	Kit, Knob With Seal (Includes 3,4)				
❸3	25 341 03-S	1	Knob-Cover				
❹4	24 153 20-S	1	O-Ring				
❺5	24 096 67-S	1	Cover-Air Cleaner				
❻6	12 100 01-S	1	Nut-Wing				
❼7	24 096 01-S	1	Cover-Inner Air Cleaner				
❸8	24 032 03-S	1	Seal-Breather				
❹9	24 083 02-S	1	Element-Precleaner				
❺10	47 083 03-S	1	Element-Air Cleaner				
❺11	M-639016-S	3	Screw-HF				
❺12	24 126 21-S	1	Bracket-Air Cleaner				
❺13	24 094 24-S	1	Base-Air Cleaner				
❺14	25 086 84-S	4	Screw-Hfth				
❺15	24 164 14-S	1	Manifold				
❺16	24 041 01-S	2	Gasket-Intake Manifold				
❺17	24 041 06-S	1	Gasket-Air Cleaner				

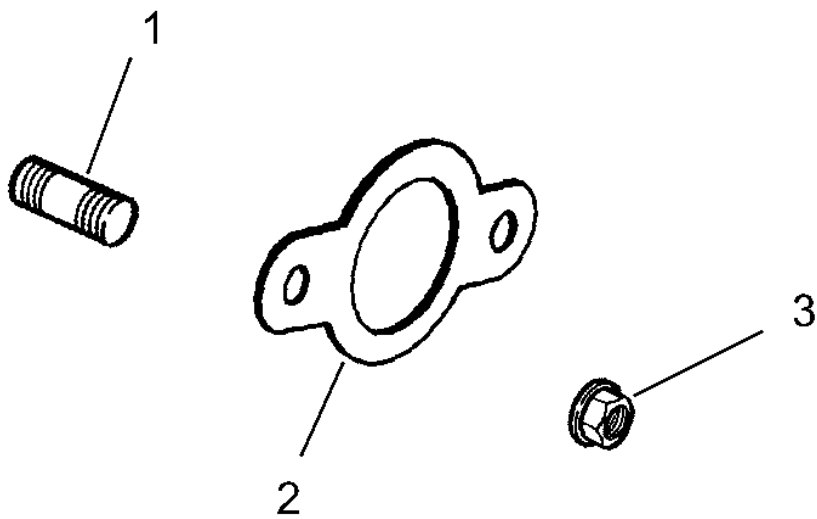 

**Exhaust Assembly
Kohler CH20S-64647**

Ref	Part No.	Qty.	Description				
1	25 072 04-S	4	Stud				
2	24 041 49-S	2	Gasket-Exhaust				
3	M-841080-S	4	Nut-HF				
1	24522295	1	Short Block ASM				
1	2478215	1	Miniblock				
1	24 755 107-S	1	Gasket Set				

PROTOTYPE

NOTES

PROTOTYPE



PROTOTYPE