



Form No. 3445-744 Rev C

Count on it.

Parts Catalog

Multi Pro® 1750 Turf Sprayer

Model No. 41188—Serial No. 409000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Roll-Over Protection System and Seat Assembly	5
Frame Assembly.	6
Rear Drive Assembly	7
Case Assembly Transaxle Assembly No. 120-7610.	9
Center Plate Assembly Transaxle Assembly No. 120-7610	10
Main Shaft Assembly Transaxle Assembly No. 120-7610	11
Reduction Shaft Assembly Transaxle Assembly No. 120-7610	12
Reverse Shaft Assembly Transaxle Assembly No. 120-7610	13
Main Shift Assembly Transaxle Assembly No. 120-7610.	14
Counter Shaft Assembly Transaxle Assembly No. 120-7610	15
Differential Gear Assembly Transaxle Assembly No. 120-7610	16
Differential Carrier Assembly Transaxle Assembly No. 120-7610	17
Differential Lock Assembly Transaxle Assembly No. 120-7610	18
Axle Shaft Assembly Transaxle Assembly No. 120-7610	19
Brake Caliper Assembly No. 127-7424.	20
Brake Hydraulic Assembly	21
Master Cylinder Assembly No. 104-6782.	22
Front Suspension Assembly	23
Hydraulic Cylinder Assembly No. 125-0720	26
Pedal Assembly	27
Parking Brake Lever and Cable Assembly	28
Control Console Mount Assembly	29
Gear Shift and Drift Lock Control Assembly	30
Shift Assembly No. 106-7887.	31
Control Console Mount Assembly	32
Hood, Dash and Headlight Assembly	33
Seat Base and Front Fender Assembly	34
Hydraulic Steering Assembly	35
Hydraulic Pump Assembly No. 121-6545.	37
Steering Valve Assembly No. 138-6100.	38
Boom Lift Hydraulic Assembly	39
Hydraulic Cylinder Assembly No. 117-0701.	40
On-Off Boom Lift Valve Assembly No. 136-2400	41
Engine Mounting Assembly	42
Pump Assembly No. 137-4231	44
Exhaust Assembly	45
Fuel Tank, Filter and Line Assembly	46
Fuel Tank Assembly No. 115-9048	47
Driveshaft Connection Assembly	48
Driveshaft Assembly No. 119-6040.	49
Clutch and Bell Housing Assembly	50
Spray Tank Assembly	51
Tank Assembly No. 121-6491	52
Spray Tank Lid Assembly No. 138-6283	53
Filter Assembly No. 130-7096	54
Spray Tank Valve Assembly	55
Flow Meter Assembly No. 138-6128.	56
Section Valve Manifold Assembly	57
On/Off Manifold Valve Kit No. 127-9803.	58
On/Off Actuator Kit No. 131-3723	59
Bypass Valve Assembly No. 127-9805.	60
Agitation Valve Assembly	61
Regulating Valve Body Assembly No. 127-9804.	62
Manifold Valve Kit No. 131-7256	63

Contents (continued)

Actuator Regulating Valve No. 131-3724 64

Pressure Filter Assembly No. 131-3791..... 65

Manifold Valve Kit No. 131-0253 66

Hose Assembly..... 67

Main Wiring Harness and Battery Assembly 69

Center Boom Mount Assembly..... 70

RH Single Body Turret Assembly No. 108-3726 72

Double Turret Body Assembly No. 108-3727 73

 
LH Single Turret Body Assembly No. 108-3725 74

Left and Right Hand Boom Pivot Assembly 75

Boom Pivot Assembly 76

Left and Right Hand Boom Assembly 77


Attachments and Accessories 78

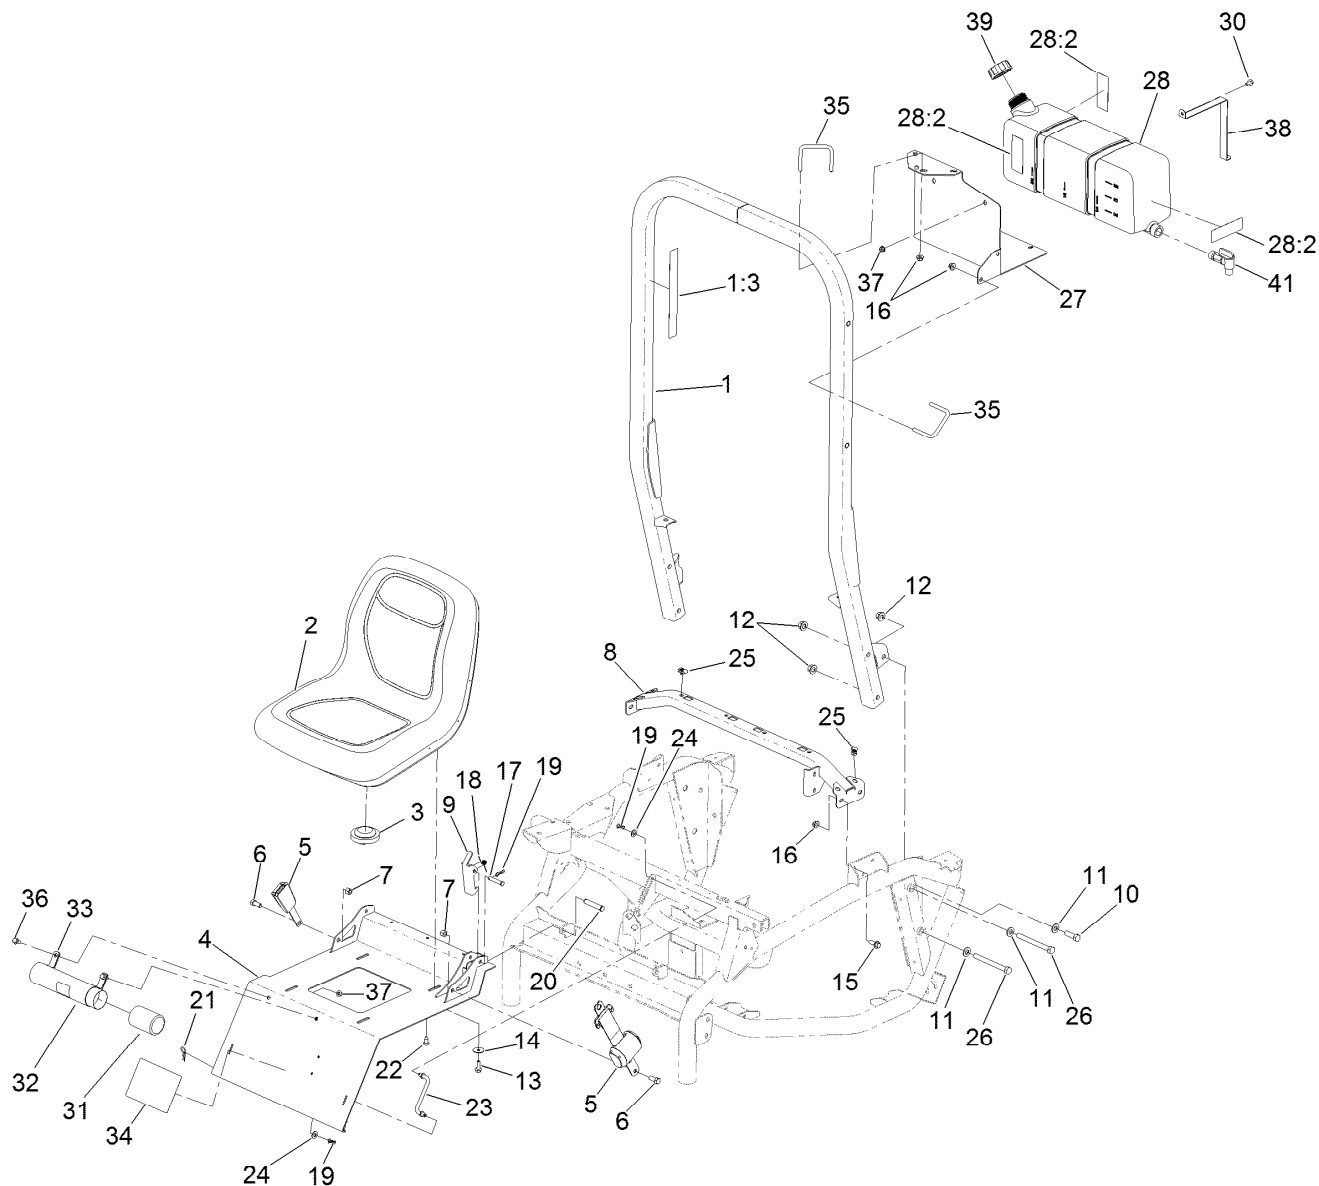

Roll-Over Protection System and Seat Assembly

Ref.	Part Number	Qty.	Description
1	127-3918	1	ROPS ASM
1:3	127-3939	1	Decal-ROPS
2	112-2923	1	Seat ASM
3	100-3524	1	Switch-Seat
4	125-0872-03	1	Plate-Seat
5	110-0413	1	Seatbelt-Retractable
6	3212-4	2	Screw-HH
7	3296-7	2	Nut-Lock
8	125-0910-03	1	Crossmember-Seat
9	125-0916	1	Latch-Seat
10	325-6	2	Screw-HH
11	3256-26	6	Washer-Flat
12	99-5107	6	Nut-HF Nylock
13	33104-025	4	Screw-HHF
14	3256-57	4	Washer-Flat
15	3234-42	4	Screw-HHF
16	104-8301	8	Nut-HF, NI
17	283-82	1	Pin-Clevis
18	104-4821	1	Spring-Torsion
19	119-1415	3	Pin-Cotter, Locking
20	100-6541	2	Pin-Clevis

Ref.	Part Number	Qty.	Description
21	3290-467	2	Pin-Hair
22	87-8460	3	Bumper-Rubber
23	125-0909	1	Rod-Prop, Seat
24	3256-24	2	Washer-Plain
25	94-2413	3	Nut-U
26	325-19	4	Screw-HH
27	131-5797-03	1	Mount-Tank, Eye Wash
28	132-7745	1	Fresh Water Tank ASM
28:2	120-0616	3	Decal-Water, Fresh
30	3234-7	4	Screw-HHF
31	104-7048	1	Cap-Housing
32	104-7050	1	Tube-Manual
33	2412-133	2	Clamp-R
34	133-0382	1	Decal-Service/Maintenance
35	119-6727	2	U-Bolt
36	3234-47	2	Screw-HHF
37	104-8300	6	Nut-HF, NI
38	132-7628-03	2	Band-Tank, Eye Wash
39	137-4291	1	Cap-Tank, Fresh Water
41	100-7011	1	Spigot-90 DEG

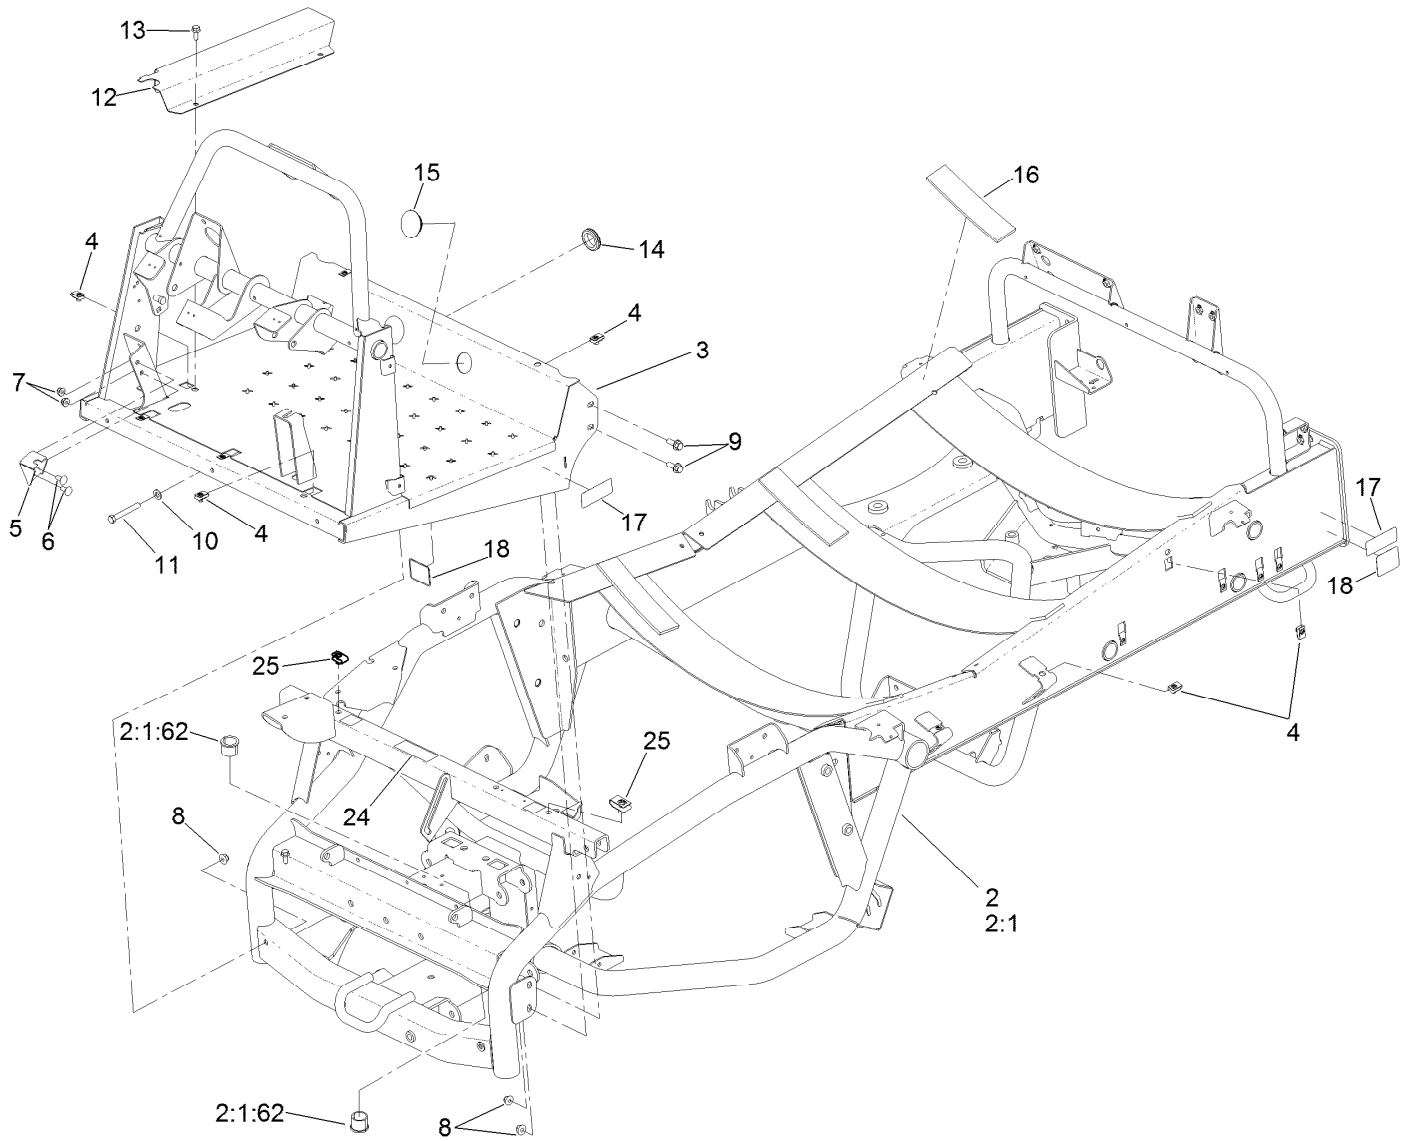


Frame Assembly

Ref.	Part Number	Qty.	Description
2	121-6501-03	1	Frame ASM
2:1		1	Frame ●
2:1:62	104-0015	2	Bushing-Flange
3	125-0812-03	1	Platform
4	94-2413	19	Nut-U
5	106-2421	1	Bracket-Mount, Cable
6	3230-23	2	Bolt-CARR
7	104-8300	2	Nut-HF, NI
8	104-8301	6	Nut-HF, NI
9	3234-42	4	Screw-HHF
10	3256-24	2	Washer-Plain


Ref.	Part Number	Qty.	Description
11	323-13	2	Screw-HH
12	125-0871-03	1	Cover-Hose
13	3234-47	2	Screw-HHF
14	240-3	2	Grommet-Rubber
15	121-3397	2	Plug-Grommet
16	125-8094	6	Pad-Tank
17	106-9206	4	Decal-Torque, Wheel
18	125-6694	3	Decal-Tie Down
24	133-8062	1	Decal-Spark Arrestor
25	115-7721	2	Nut-Clip, U

 ● Not serviced separately

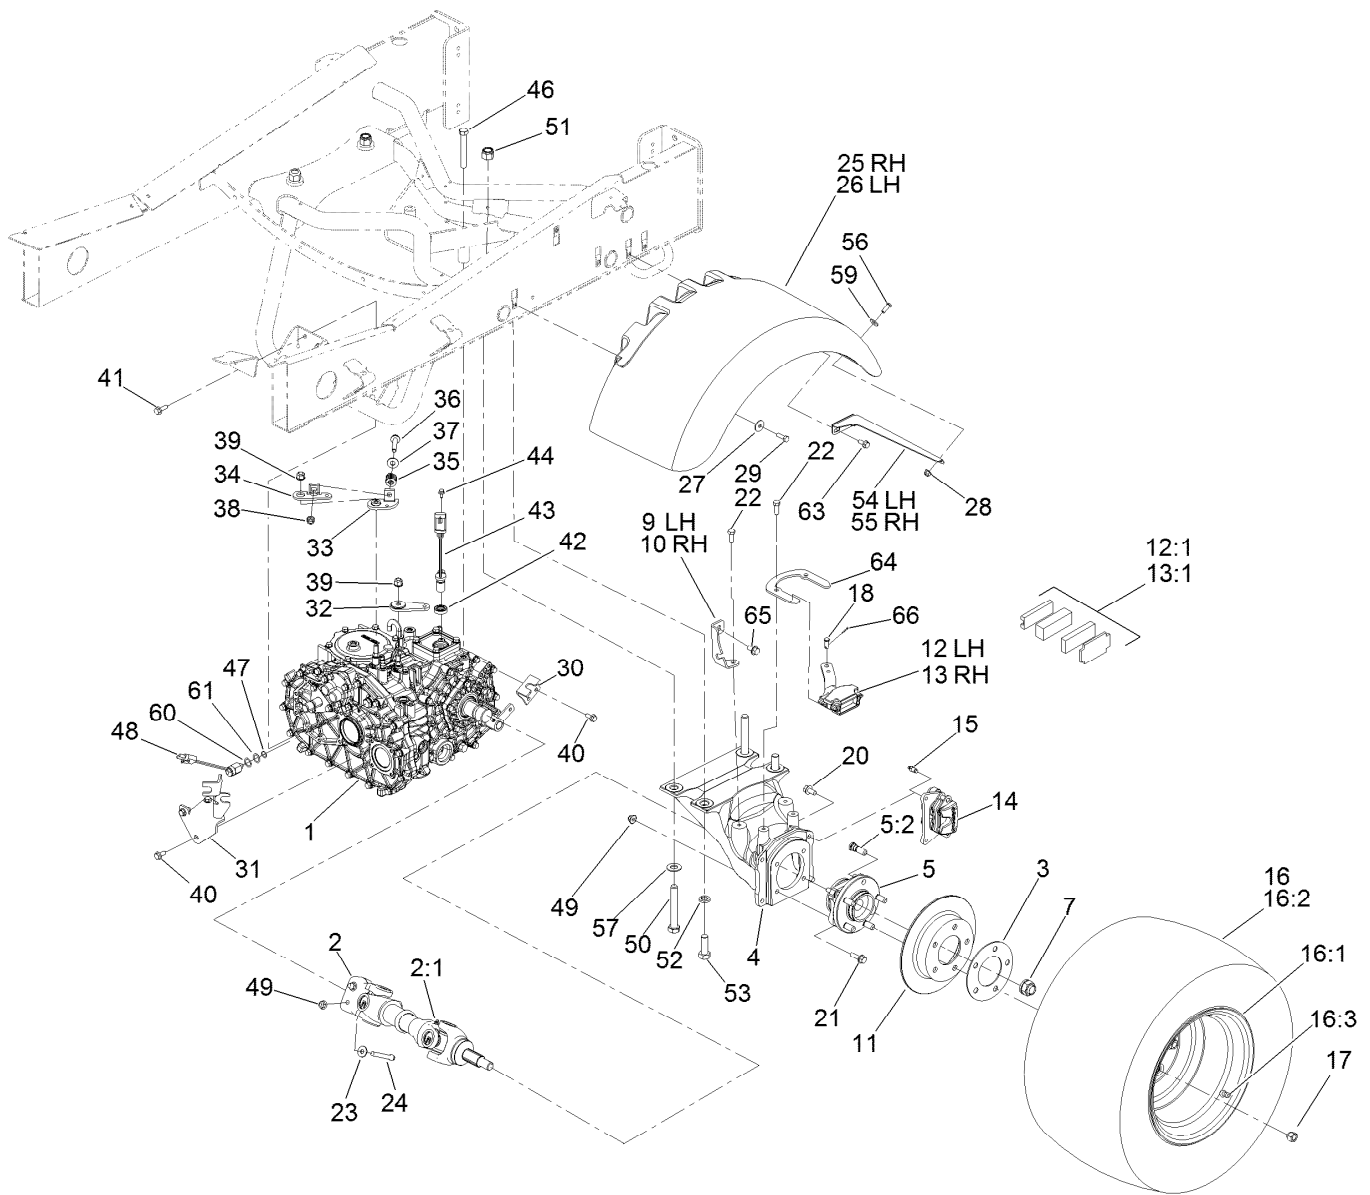

Rear Drive Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	120-7610	1	Transaxle ASM	17	242-50	10	Nut-Lug
2	138-5600	1	Driveshaft ASM	18	283-85	2	Pin-Clevis
2:1	302-5	2	Fitting-Grease	20	3234-1	4	Screw-HHF
3	144-6172-03	2	Spacer-Wheel	21	3234-24	8	Screw-HHF
4	131-4311	2	Axle-Housing	22	323-6	6	Screw-HH
5	121-9751	2	Hub-Bearing, Wheel	23	80-6990	4	Washer-Hardened
5:2	121-9752	5	Stud-Wheel	24	98-2939	4	Screw-Cap
7	115-2164	2	Nut-Spindle	25	112-6805	1	Fender-RH
9	131-4362-03	1	Bracket-Cable, LH	26	112-6806	1	Fender-LH
10	131-4346-03	1	Bracket-Cable, RH	27	3256-82	6	Washer-Flat
11	114-8351	2	Rotor-Brake	28	104-8300	2	Nut-HF, NI
12	114-8365	1	Caliper-Mechanical, LH	29	322-5	6	Screw-HH
12:1	115-7847	1	Parking Brake Pad Kit	30	87-4470	1	Bracket-Lock, Differential
13	114-8366	1	Caliper-Mechanical, RH	31	107-8749-0P	1	Bracket-Cable, Welded
13:1	115-7847	1	Parking Brake Pad Kit	32	87-7960	1	Lever-Shift
14	127-7424	2	Brake Caliper ASM	33	87-7970	1	Arm-Shift
15	119-9509	2	Screw-Bleed	34	87-8250	1	Plate-Arm, Shift
16	117-4838	2	Tire And Wheel ASM	35	87-6910	1	Spring-Compression
16:1	114-8259	1	Wheel	36	66-9302	1	Screw-HHF Lock
16:2	110-5132	1	Tire	37	3256-4	1	Washer-Flat
16:3	232-27	1	Stem-Valve	38	3290-357	1	Nut-HSF

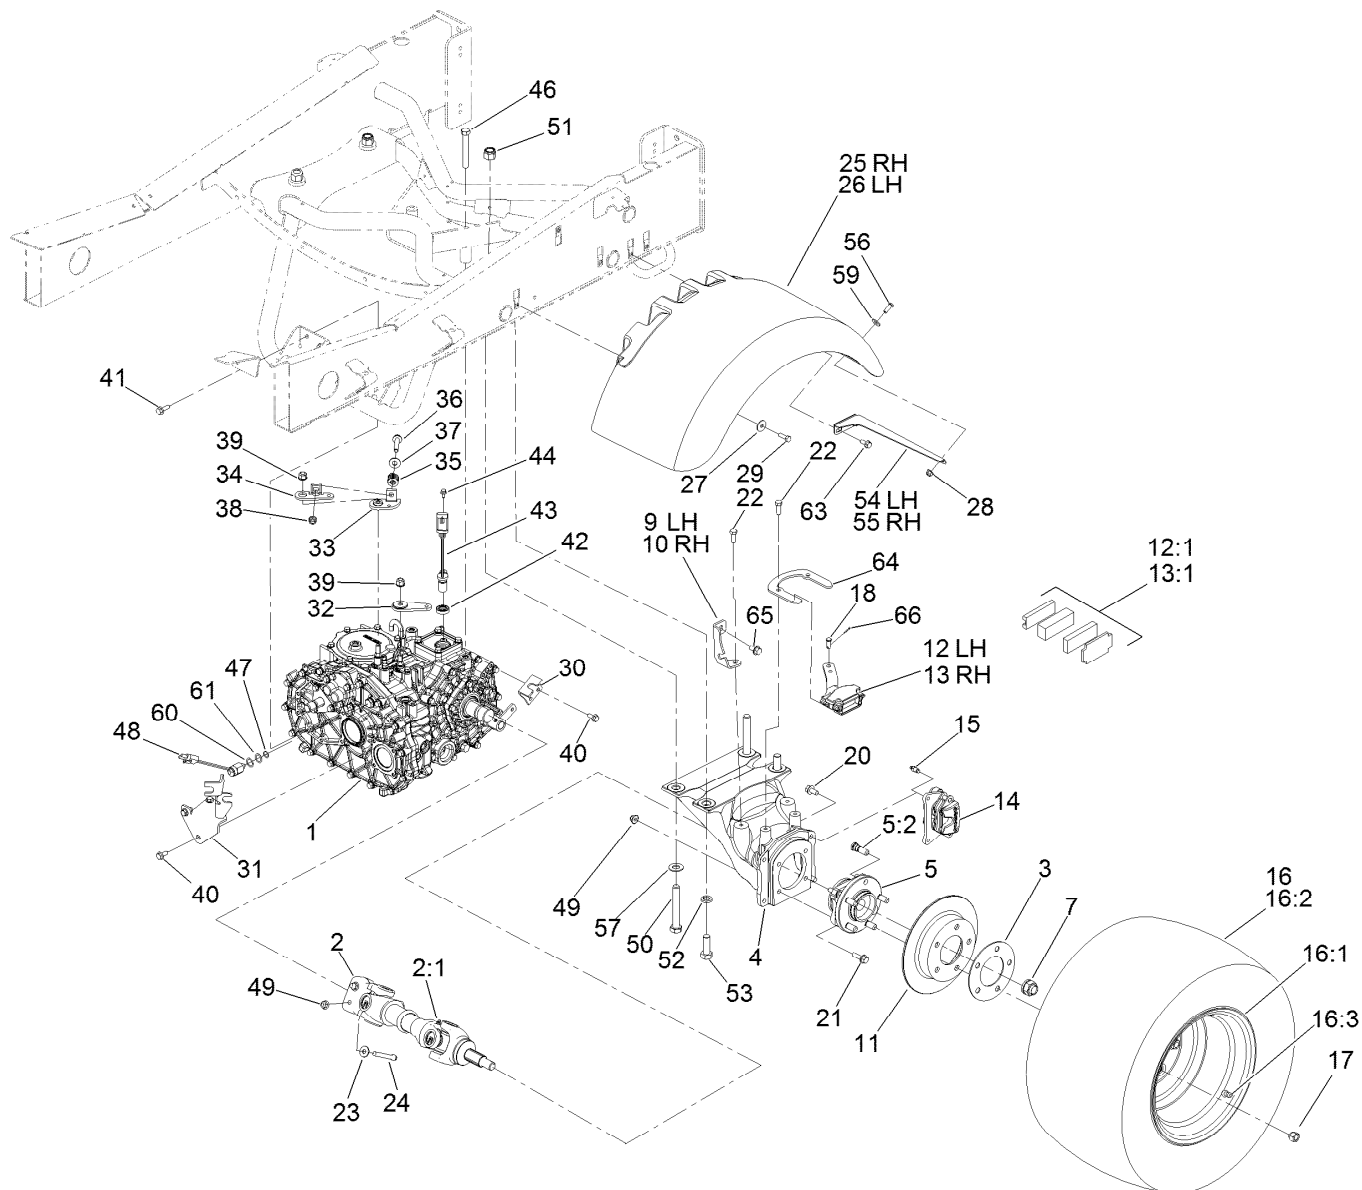 

Rear Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
39	103-9511	2	Nut-Flg
40	98-7977	5	Screw-HHF
41	33104-025	4	Screw-HHF
42	92-3735	1	Seal-Sensor, Oil
43	120-4800	1	Sensor-Geartooth
44	33103-012	1	Screw-HHF
46	33116-090	2	Screw-HH
47	237-30	1	O-Ring
48	87-6710	1	Switch-Transmission
49	104-8301	12	Nut-HF, NI
50	327-29	4	Screw-HH
51	127-3958	4	Nut-Lock, NI
52	3253-23	4	Washer-Lock


Ref.	Part Number	Qty.	Description
53	327-5	4	Screw-HH
54	125-7959-03	1	Bracket-Fender
55	125-7960-03	1	Bracket-Fender
56	3274-32	2	Screw-HSBH
57	3256-27	4	Washer-Flat
59	3256-71	2	Washer-Flat
60	125-8106	1	Shim
61	125-8107	1	Shim
63	3234-47	4	Screw-HHF
64	131-4257-0P	2	Support-Park Brake
65	110-9380	2	Screw-HWH
66	3272-6	2	Pin-Cotter

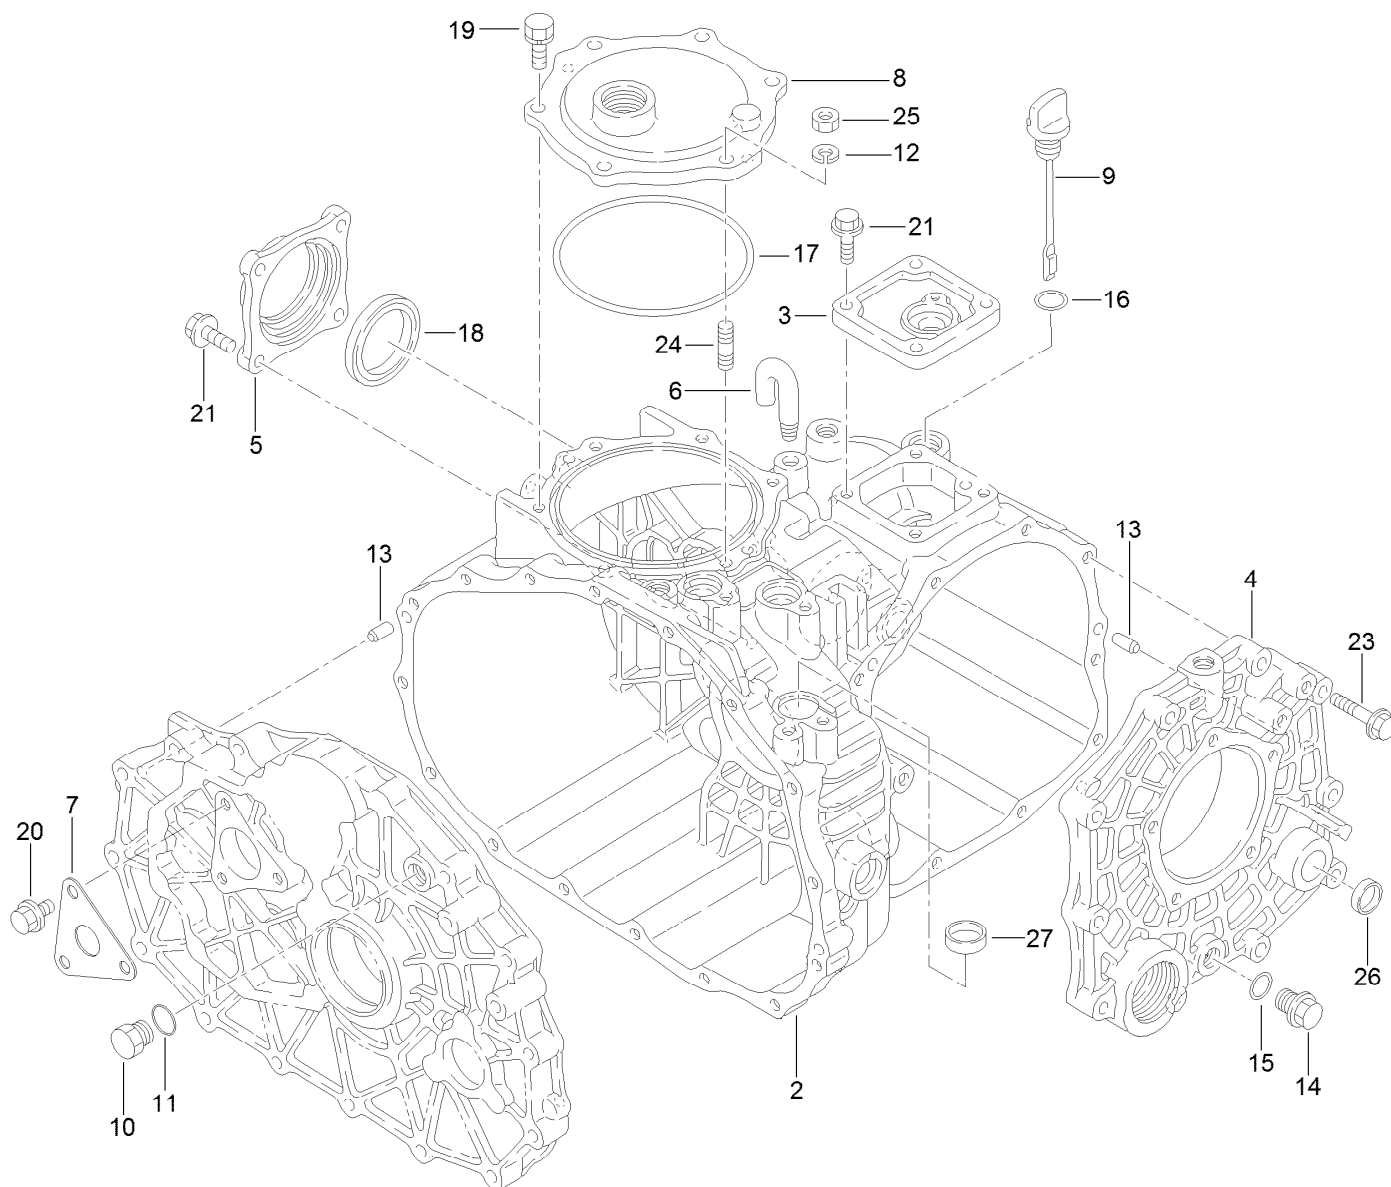 

Case Assembly Transaxle Assembly No. 120-7610


Ref.	Part Number	Qty.	Description
2	92-0651	1	Case-Transmission
3	92-3736	1	Cover ASM
4	92-0653	1	Cover-Side
5	92-0655	1	Cover-Seal, Axle
6	127-3925	1	Breather
7	100-8594	1	Cover-Shaft, Input
8	100-8595	1	Cover-PTO
9	92-0662	1	Cap-Oil
10	100-6924	1	Plug
11	100-6925	1	Packing
12	92-0762	1	Washer-Spring
13	92-0765	4	Pin-Parallel
14	92-0773	1	Plug-Drain

Ref.	Part Number	Qty.	Description
15	92-0787	1	O-Ring
16	92-0788	1	O-Ring
17	92-0790	1	O-Ring
18	92-0793	1	Seal-Oil
19	92-0796	5	Bolt
20	100-6928	3	Bolt
21	33114-025	8	Screw-HH
23	33114-040	10	Screw-HH
24	92-0804	1	Stud
25	48-7930	1	Nut
26	100-6926	1	Cap-Sealing
27	100-6927	1	Cap-Sealing

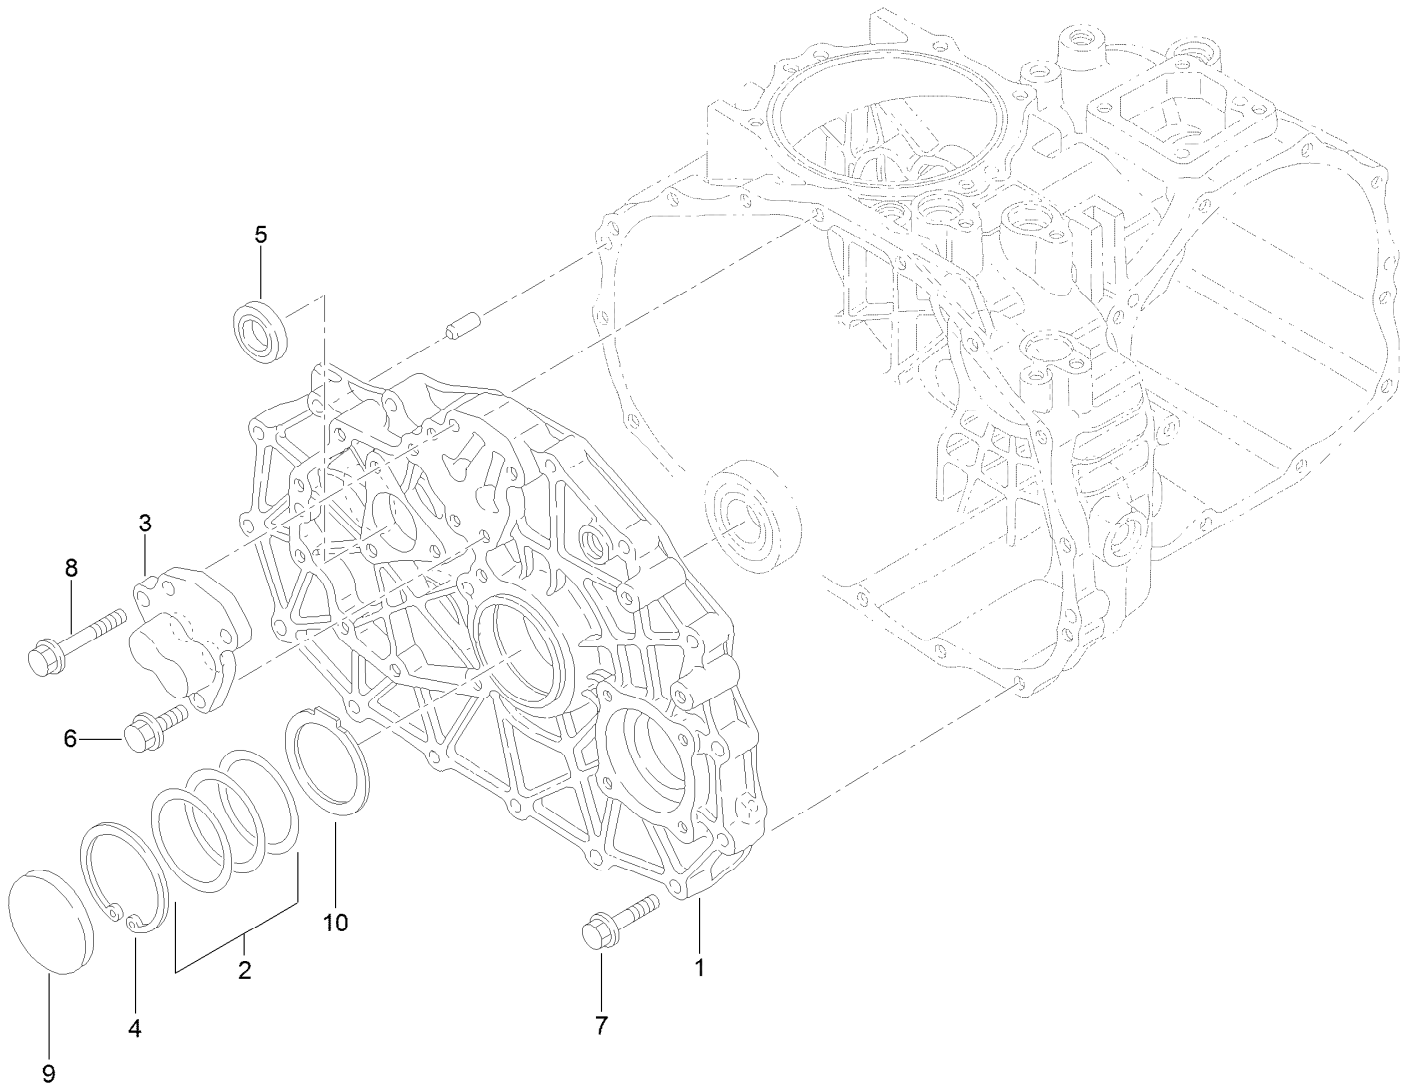 

Center Plate Assembly Transaxle Assembly No. 120-7610


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	100-4461	1	Plate-Center
2	100-4460	1	Shim-Set
3	92-0706	1	Shaft-Fork
4	92-0759	1	Ring-Snap
5	92-0791	1	Seal-Oil
6	33114-025	3	Screw-HH
7	33114-040	15	Screw-HH
8	48-7560	1	Bolt-HH
9	92-0807	1	Cap-Sealing
10	100-4465	1	Shim (W/Tab)

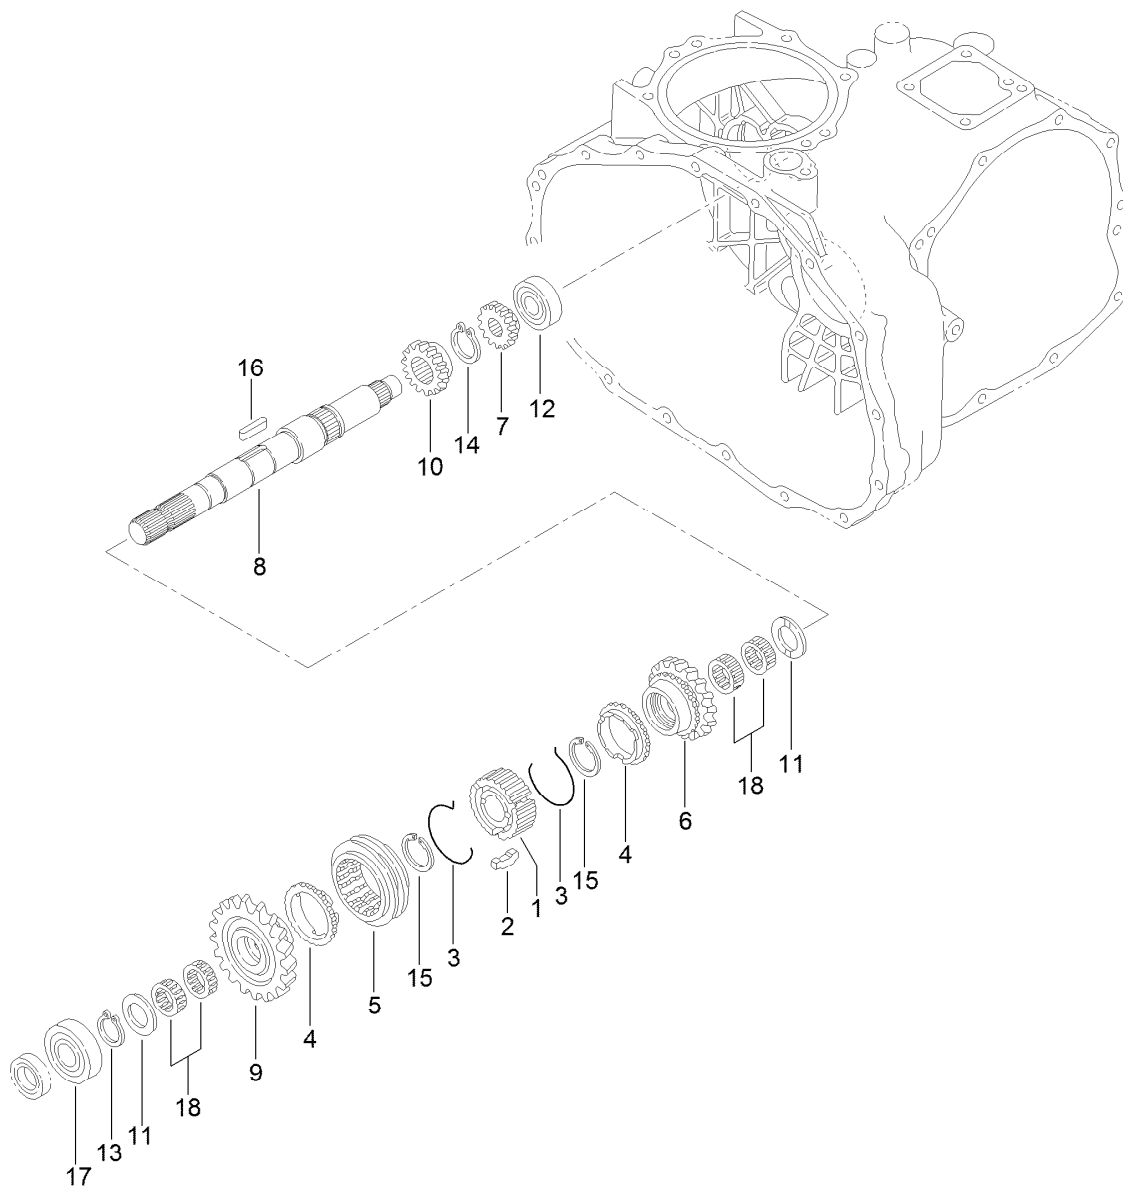

Main Shaft Assembly Transaxle Assembly No. 120-7610

Ref.	Part Number	Qty.	Description
1	92-0664	1	Hub-Synchro
2	92-0665	3	Key-Synchro
3	92-0666	2	Spring-Synchro
4	92-0667	2	Ring-Synchro
5	92-0668	1	Shifter-Synchro
6	127-3926	1	Gear-Main, 23T
7	92-0673	1	Gear-Main, 14 Tooth
8	100-8596	1	Shaft-Main
9	108-3694	1	Gear-Main, 36T


Ref.	Part Number	Qty.	Description
10	100-8598	1	Gear-Main, 20 Tooth
11	92-0740	2	Washer-Thrust
12	92-0650	1	Bearing
13	92-0753	1	Ring-Snap
14	92-0754	1	Ring-Snap
15	92-0763	2	Ring-Snap
16	92-0772	1	Key
17	251-8	1	Bearing-Ball
18	92-0781	4	Bearing-Needle

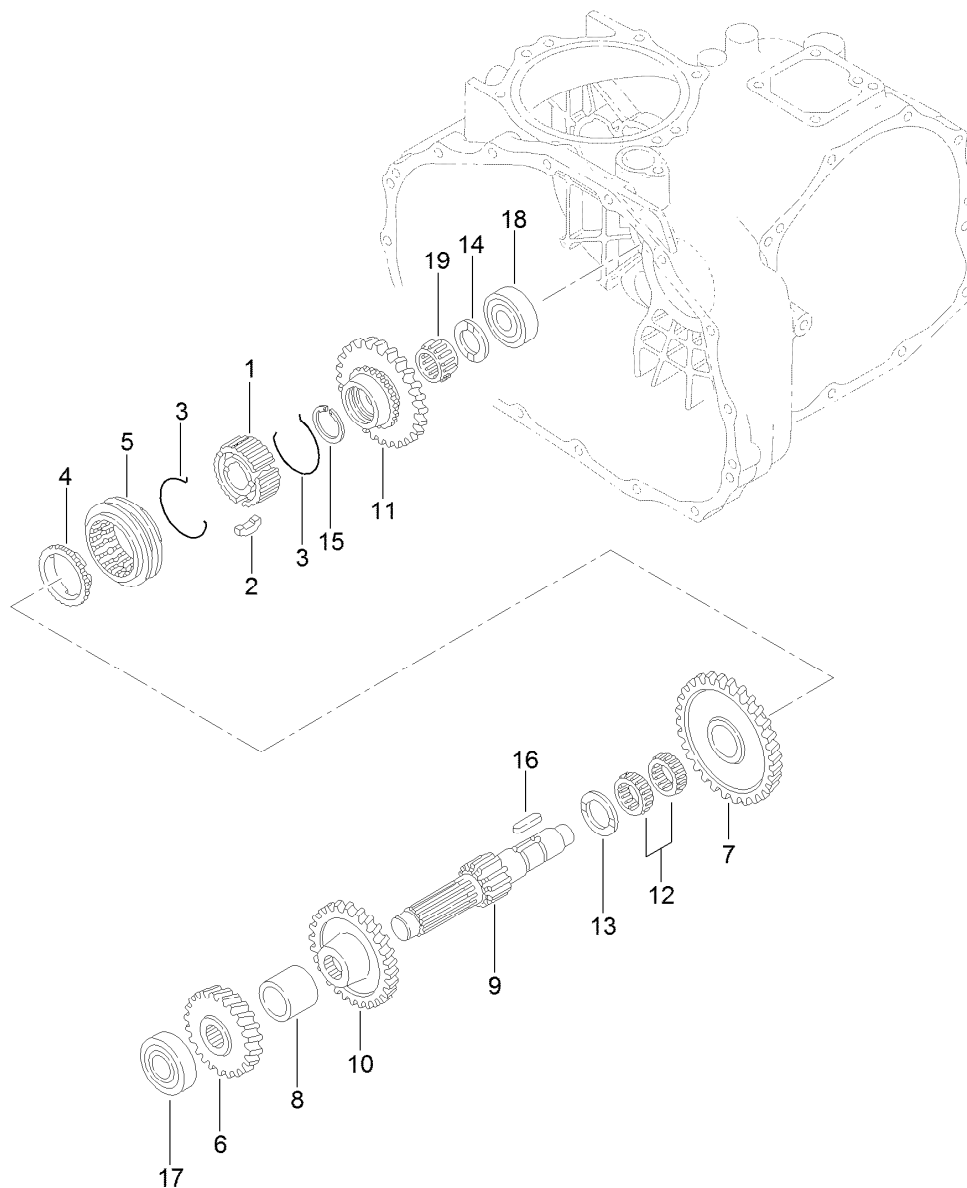 

Reduction Shaft Assembly Transaxle Assembly No. 120-7610


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	92-0664	1	Hub-Synchro
2	92-0665	3	Key-Synchro
3	92-0666	2	Spring-Synchro
4	92-0667	1	Ring-Synchro
5	92-0668	1	Shifter-Synchro
6	100-8599	1	Gear-Red, 25 Tooth
7	108-3697	1	Gear-Reduction, 47T
8	100-8601	1	Collar
9	127-3927	1	Shaft-Reduction
10	127-3928	1	Gear-Reduction, 31T

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11	92-0819	1	Gear-Reduction, 40 Tooth
12	92-0681	2	Bearing-Needle
13	92-0682	1	Washer-Thrust
14	92-0740	1	Washer-Thrust
15	92-0763	1	Ring-Snap
16	92-0772	1	Key
17	105-7985	1	Bearing
18	92-0778	1	Bearing
19	92-0782	1	Bearing-Needle

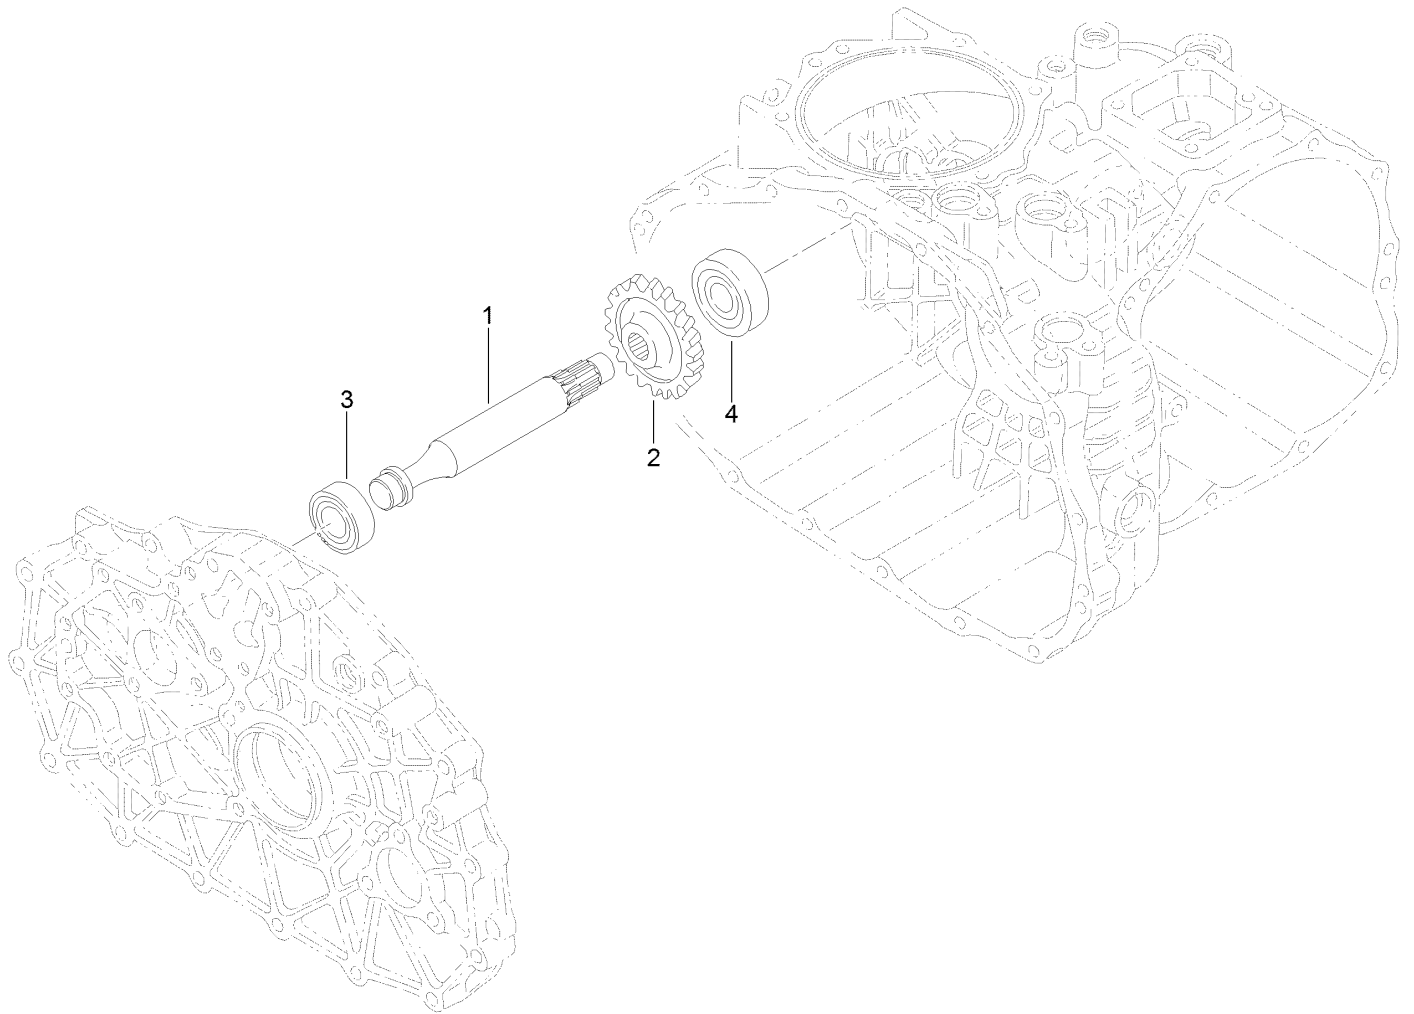 

Reverse Shaft Assembly Transaxle Assembly No. 120-7610

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	100-8602	1	Shaft-Idler, Reverse
2	92-0684	1	Gear-Reverse, 33 Tooth
3	251-346	1	Bearing-Ball
4	92-0778	1	Bearing

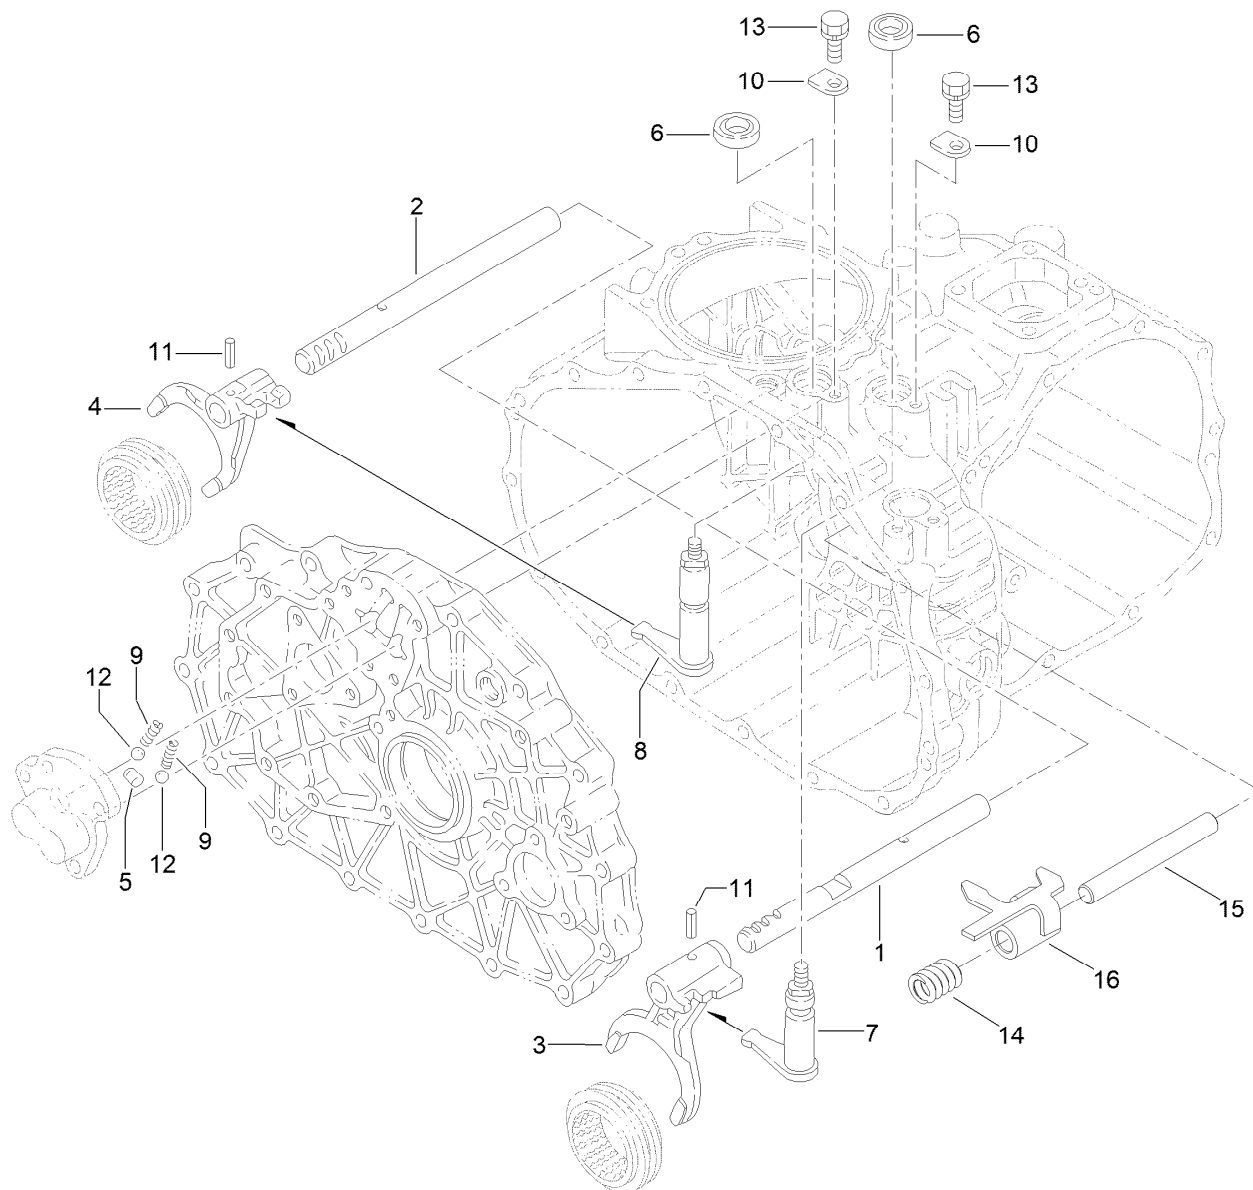


Main Shift Assembly Transaxle Assembly No. 120-7610

Ref.	Part Number	Qty.	Description
1	92-0698	1	Shaft-Fork
2	92-0699	1	Shaft-Fork
3	92-0700	1	Fork-Shift
4	92-0701	1	Fork-Shift
5	92-0705	1	Lock-Spindle
6	92-0729	2	Seal-Oil
7	127-3929	1	Arm-Shift
8	127-3930	1	Arm-Shift


Ref.	Part Number	Qty.	Description
9	92-0731	2	Spring
10	92-0732	2	Plate-Keeper
11	92-0769	2	Pin-Roll
12	92-0785	2	Ball-Steel
13	33114-016	2	Screw-HH
14	127-3931	1	Spring-Switch ●
15	127-3932	1	Shaft-Switch ●
16	127-3933	1	Plate-Switch ●

● Not illustrated

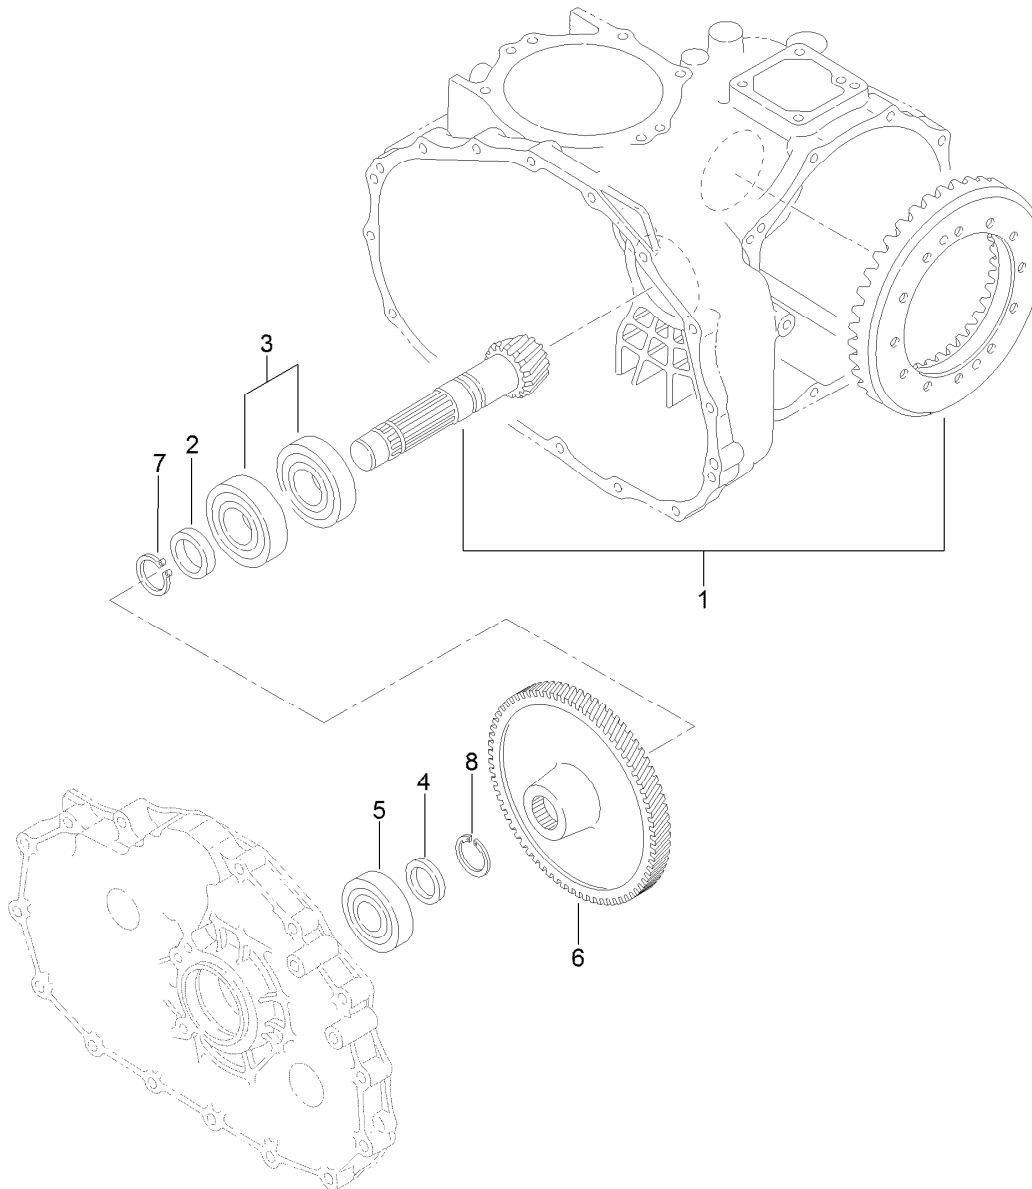


Counter Shaft Assembly Transaxle Assembly No. 120-7610

Ref.	Part Number	Qty.	Description
1	92-0710	1	Gear-Ring
2	92-0713	1	Collar
3	92-0714	2	Bearing
4	92-0716	1	Collar
5	92-0712	1	Bearing-Ball
6	100-8603	1	Gear-Count
7	92-0755	1	Ring-Snap
8	92-0764	1	Ring-Snap

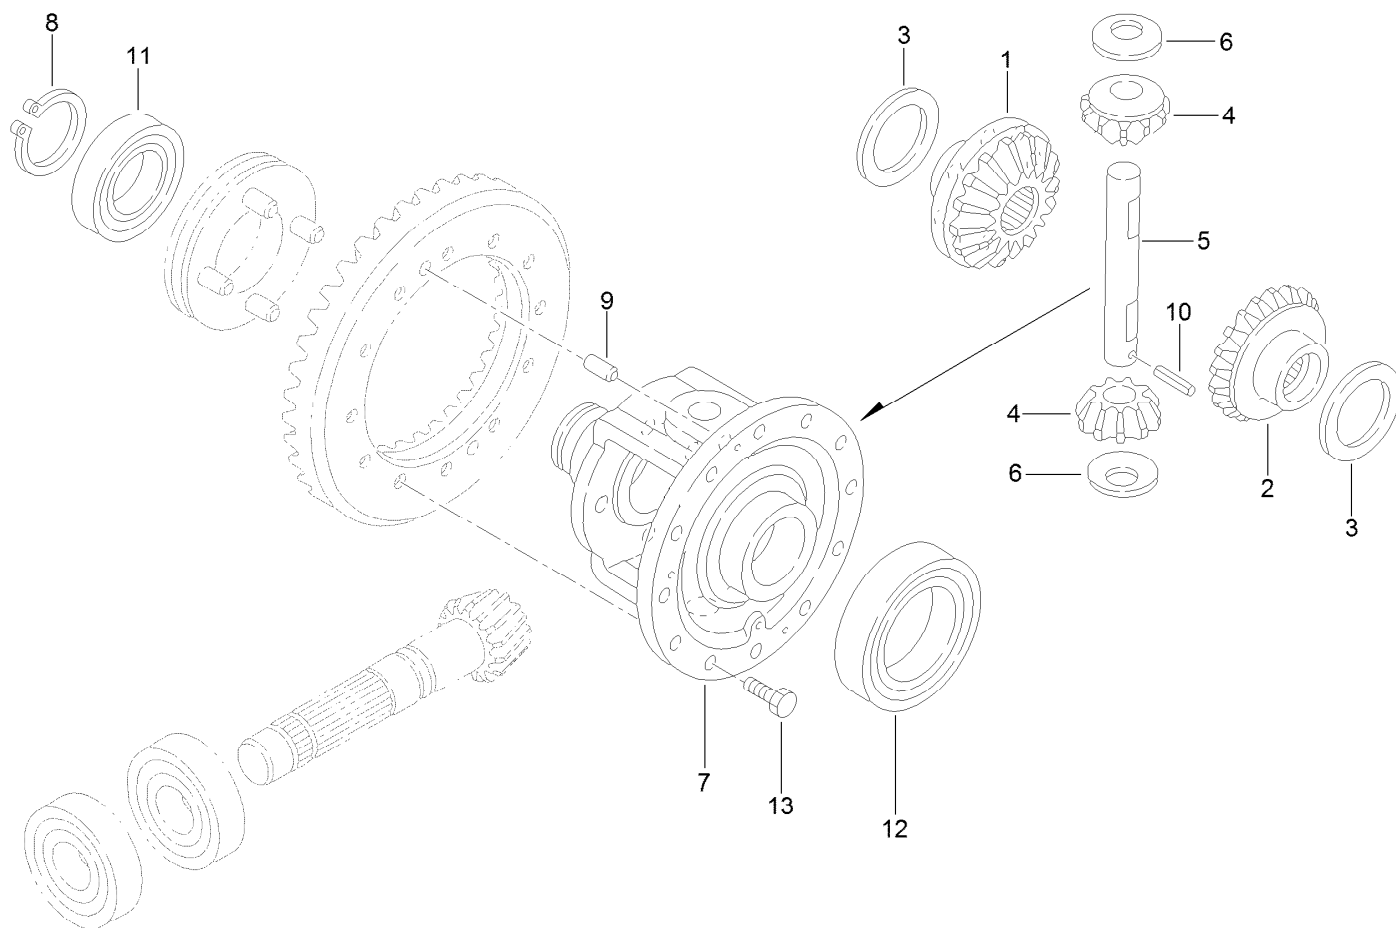


Differential Gear Assembly Transaxle Assembly No. 120-7610

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	92-0745	1	Gear-Side, LH
2	92-0746	1	Gear-Side, RH
3	92-0747	2	Side-Gear, Left Inner
4	92-0748	2	Pinion-Differential
5	92-0749	1	Shaft-Pinion
6	92-0750	2	Washer
7	92-0720	1	Case-Differential
8	92-0756	1	Ring-Snap
9	92-0765	2	Pin-Parallel
10	92-0768	1	Pin-Roll, Spring
11	92-0775	1	Bearing
12	92-0776	1	Bearing
13	92-0803	12	Bolt

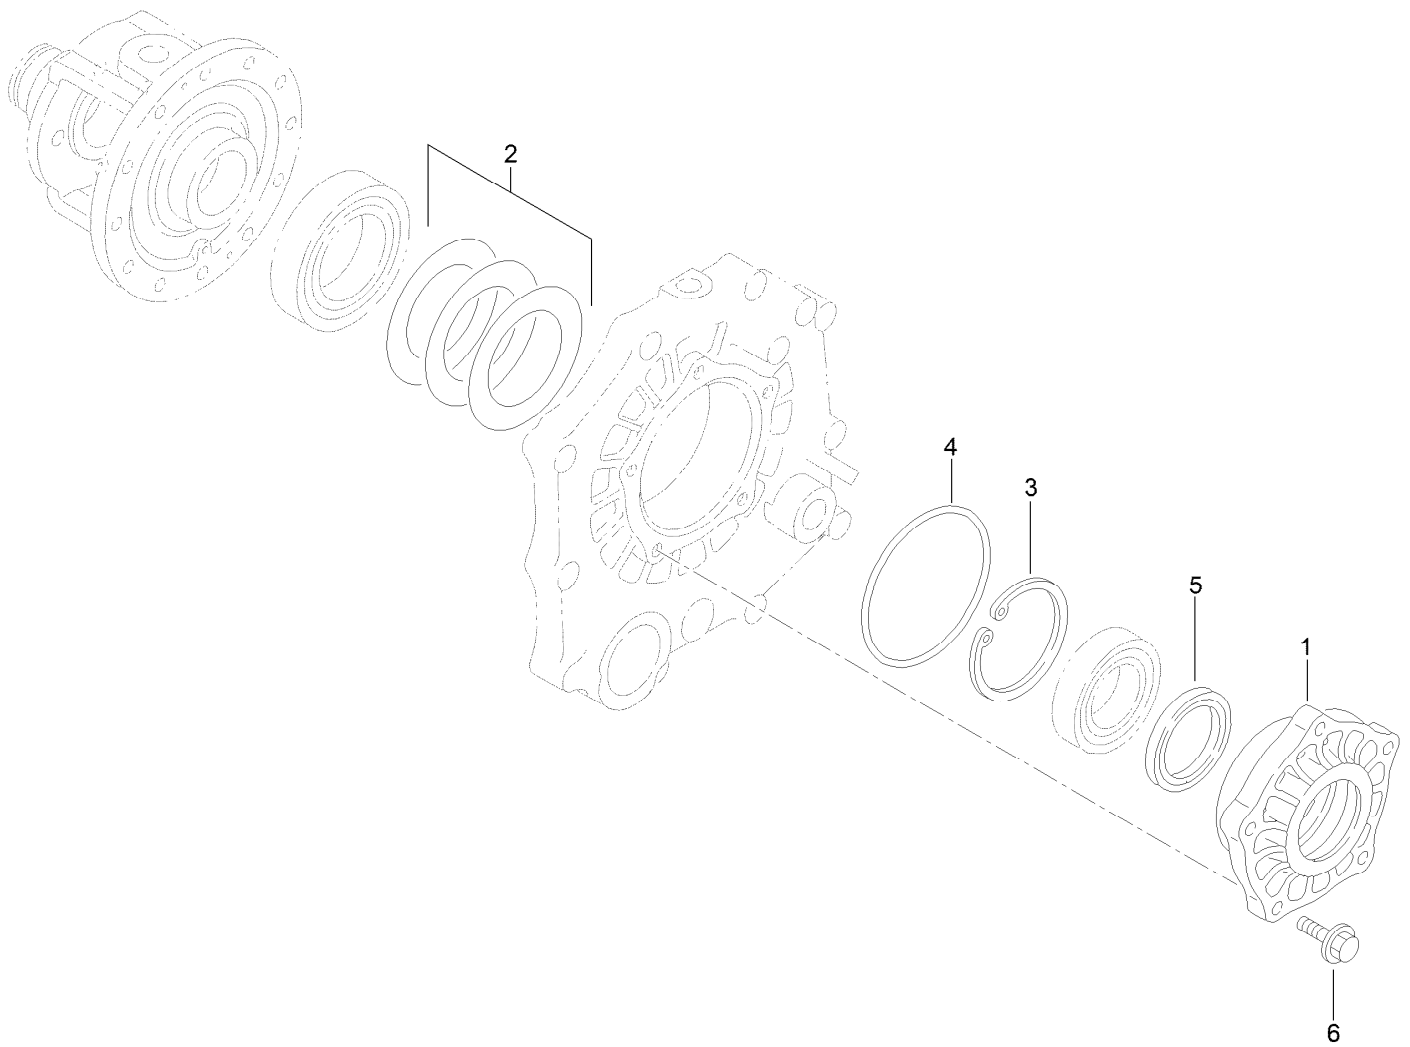


Differential Carrier Assembly Transaxle Assembly No. 120-7610

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	92-0654	1	Carrier-Differential
2	92-0809	1	Set-Shim
3	92-0760	1	Ring-Snap
4	92-0789	1	O-Ring
5	92-0793	1	Seal-Oil
6	48-7730	5	Screw-Cap, HH

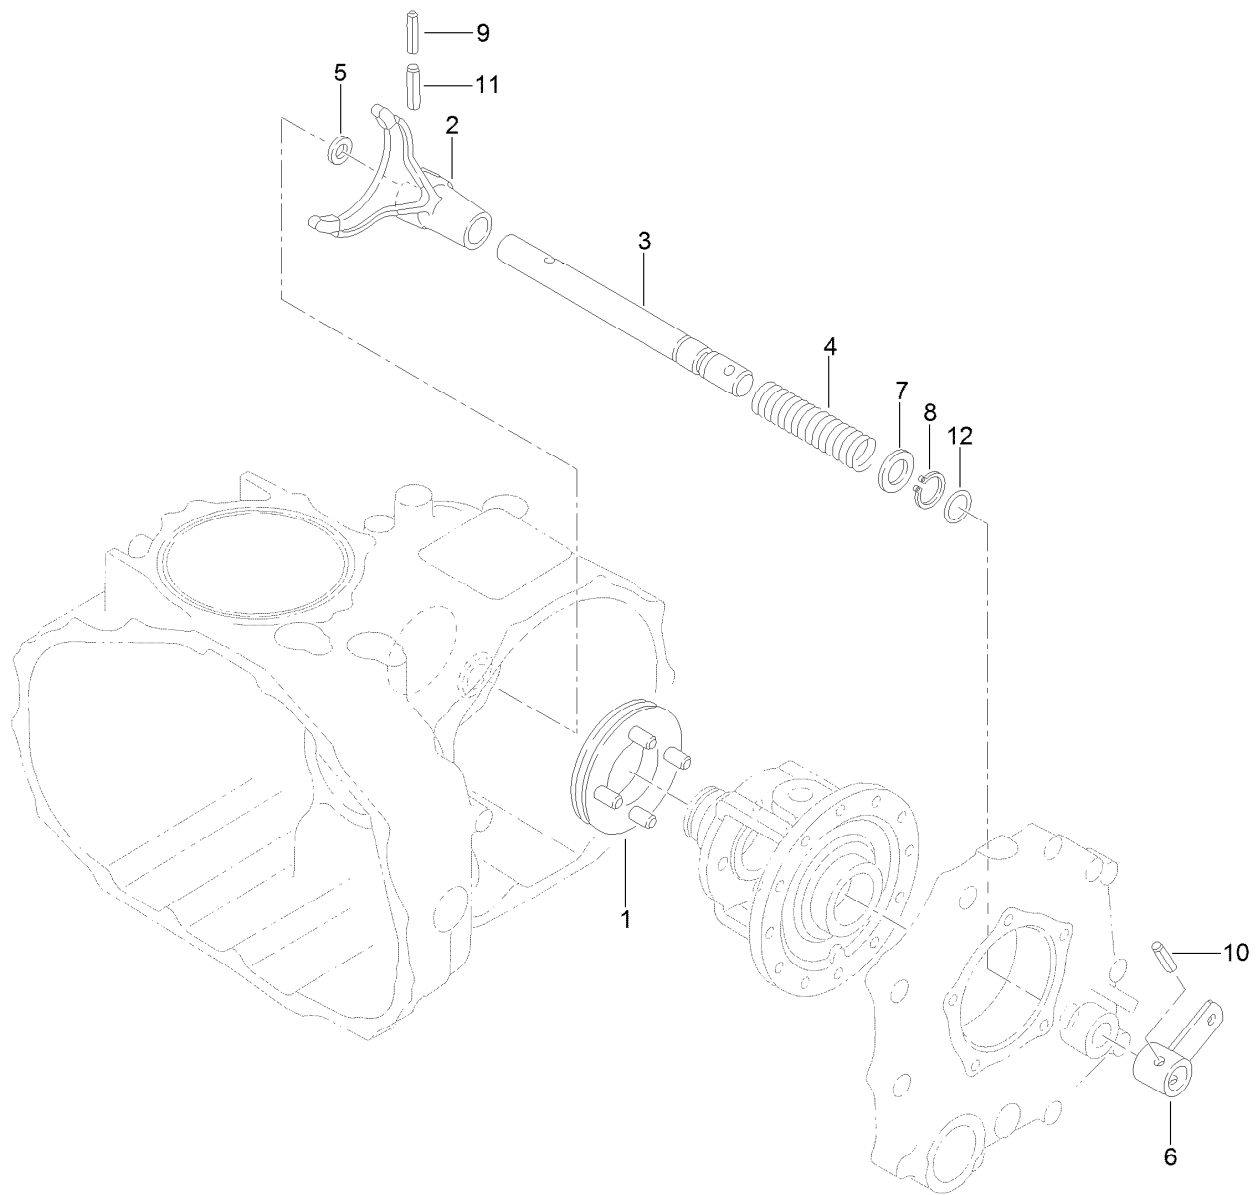


Differential Lock Assembly Transaxle Assembly No. 120-7610

Ref.	Part Number	Qty.	Description
1	92-0730	1	Slider-Differential, Lock
2	92-0721	1	Fork-Lock, Differential
3	92-0722	1	Shaft-Fork, Lock Differential
4	92-0723	1	Spring-Lock, Differential
5	92-0744	1	Washer
6	92-0724	1	Arm-Lock, Differential
7	92-0733	1	Washer
8	92-0753	1	Ring-Snap
9	92-0768	1	Pin-Roll, Spring
10	92-0770	1	Pin-Roll, Spring
11	92-0771	1	Pin-Roll, Spring
12	92-0787	1	O-Ring

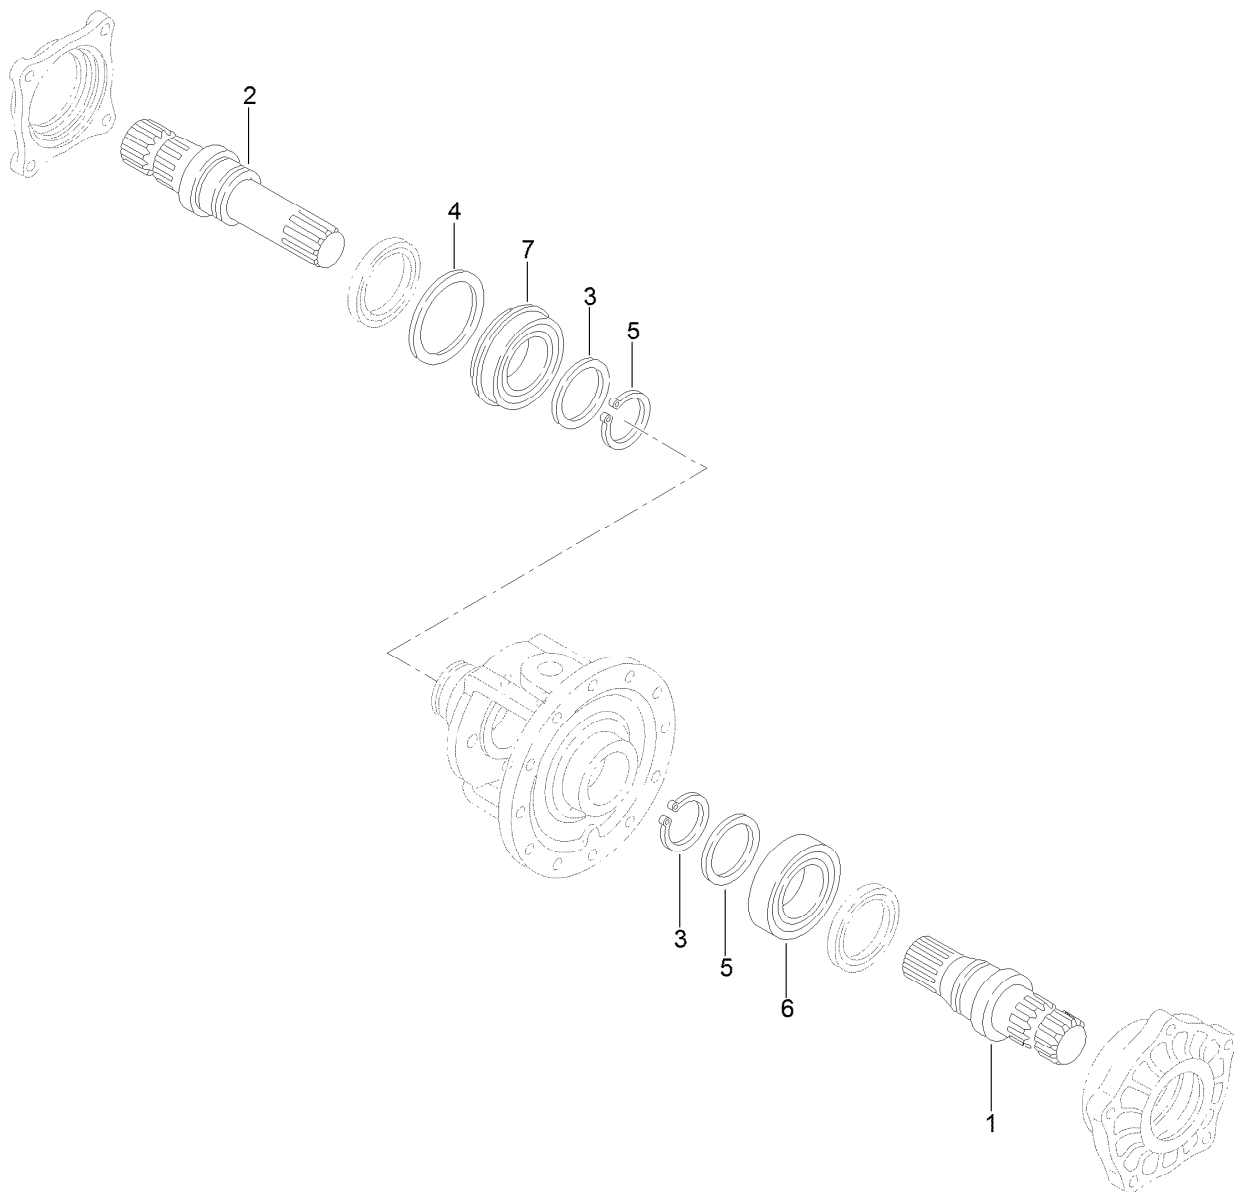


Axle Shaft Assembly Transaxle Assembly No. 120-7610

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	92-0725	1	Shaft-Axle, Left
2	92-0726	1	Shaft-Axle, Right
3	92-0727	2	Washer
4	92-0728	1	Washer
5	92-0756	2	Ring-Snap
6	92-0775	1	Bearing
7	92-0780	1	Bearing

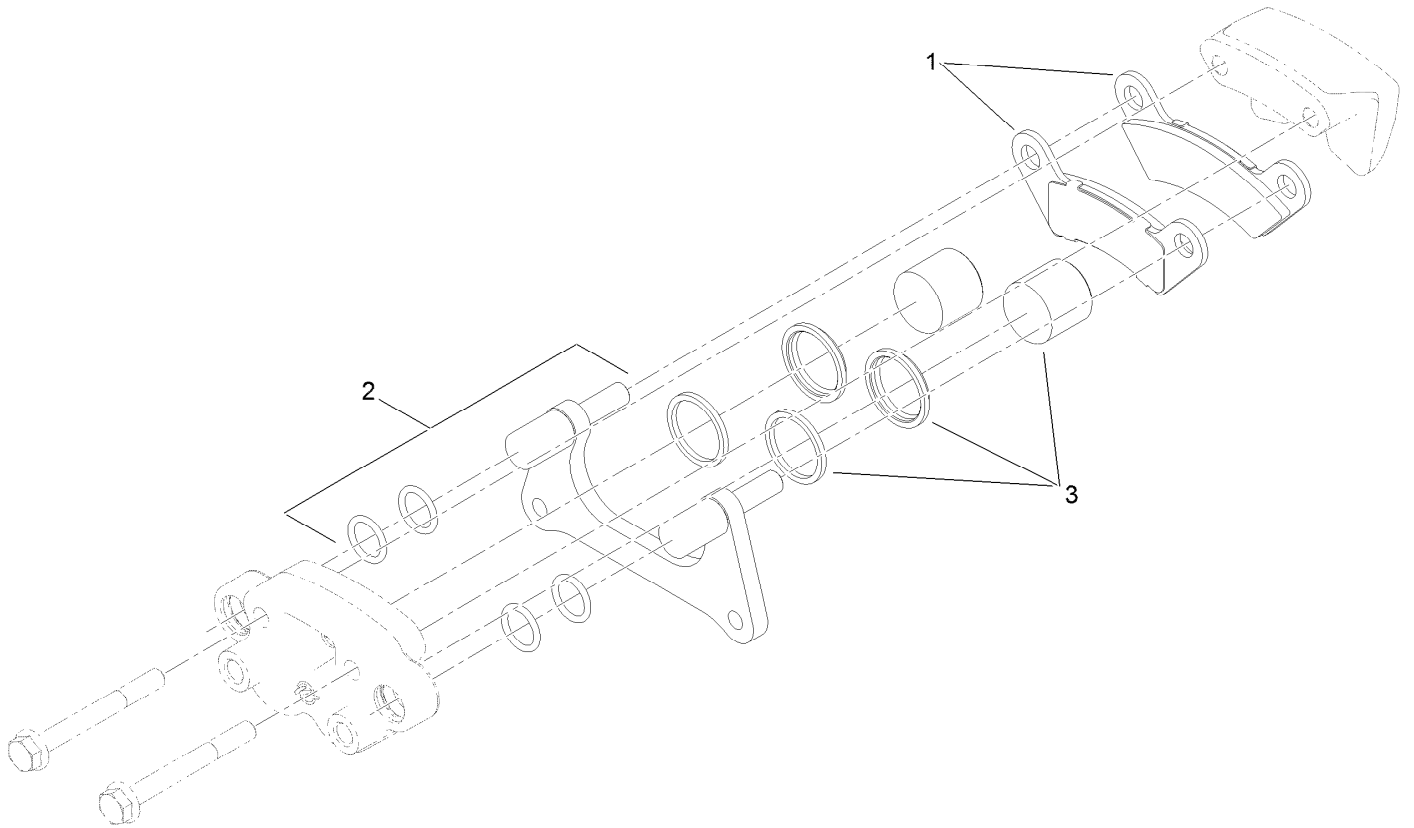 

Brake Caliper Assembly No. 127-7424


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-0628	1	Brake Pad Kit
2	119-9511	1	Bracket Kit
3	133-0614	1	Piston Kit

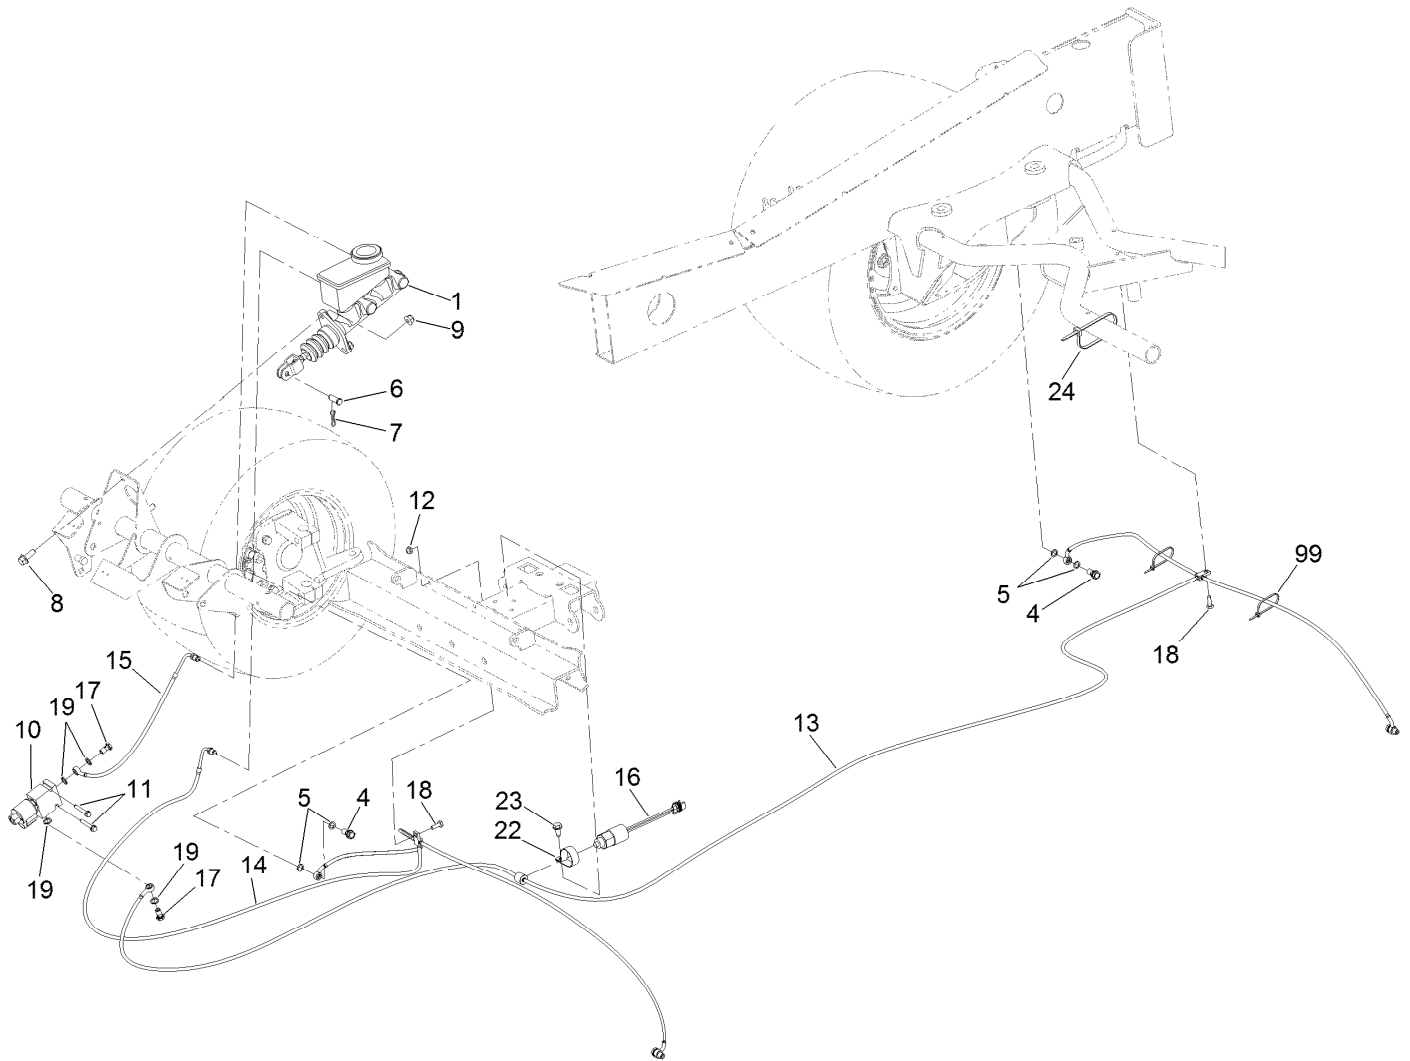 

Brake Hydraulic Assembly


Ref.	Part Number	Qty.	Description
1	104-6782	1	Master Cylinder ASM
4	120-4875	4	Bolt-Flange, Banjo
5	115-2341	8	Washer-Banjo
6	283-2	1	Pin-Clevis
7	119-1415	1	Pin-Cotter, Locking
8	3234-11	2	Screw-HHF
9	104-8301	2	Nut-HF, NI
10	125-0900	1	Valve-Brake Hold
11	94-2691	2	Screw-HWH Taptite
12	104-7201	1	Nut-HF, NI
13	125-7998	1	Line-Brake, Rear

Ref.	Part Number	Qty.	Description
14	125-7999	1	Line-Brake, Front
15	125-8000	1	Line-Brake, Solenoid
16	130-7148	1	Switch-Pressure
17	125-8005	2	Bolt-Banjo
18	321-4	2	Screw-HH
19	127-3914	4	Washer-Banjo
22	2412-74	1	R-Clamp
23	32104-32	1	Screw-HWH
24	3290-378	3	Tie-Cable
99	3290-379	6	Tie-Cable

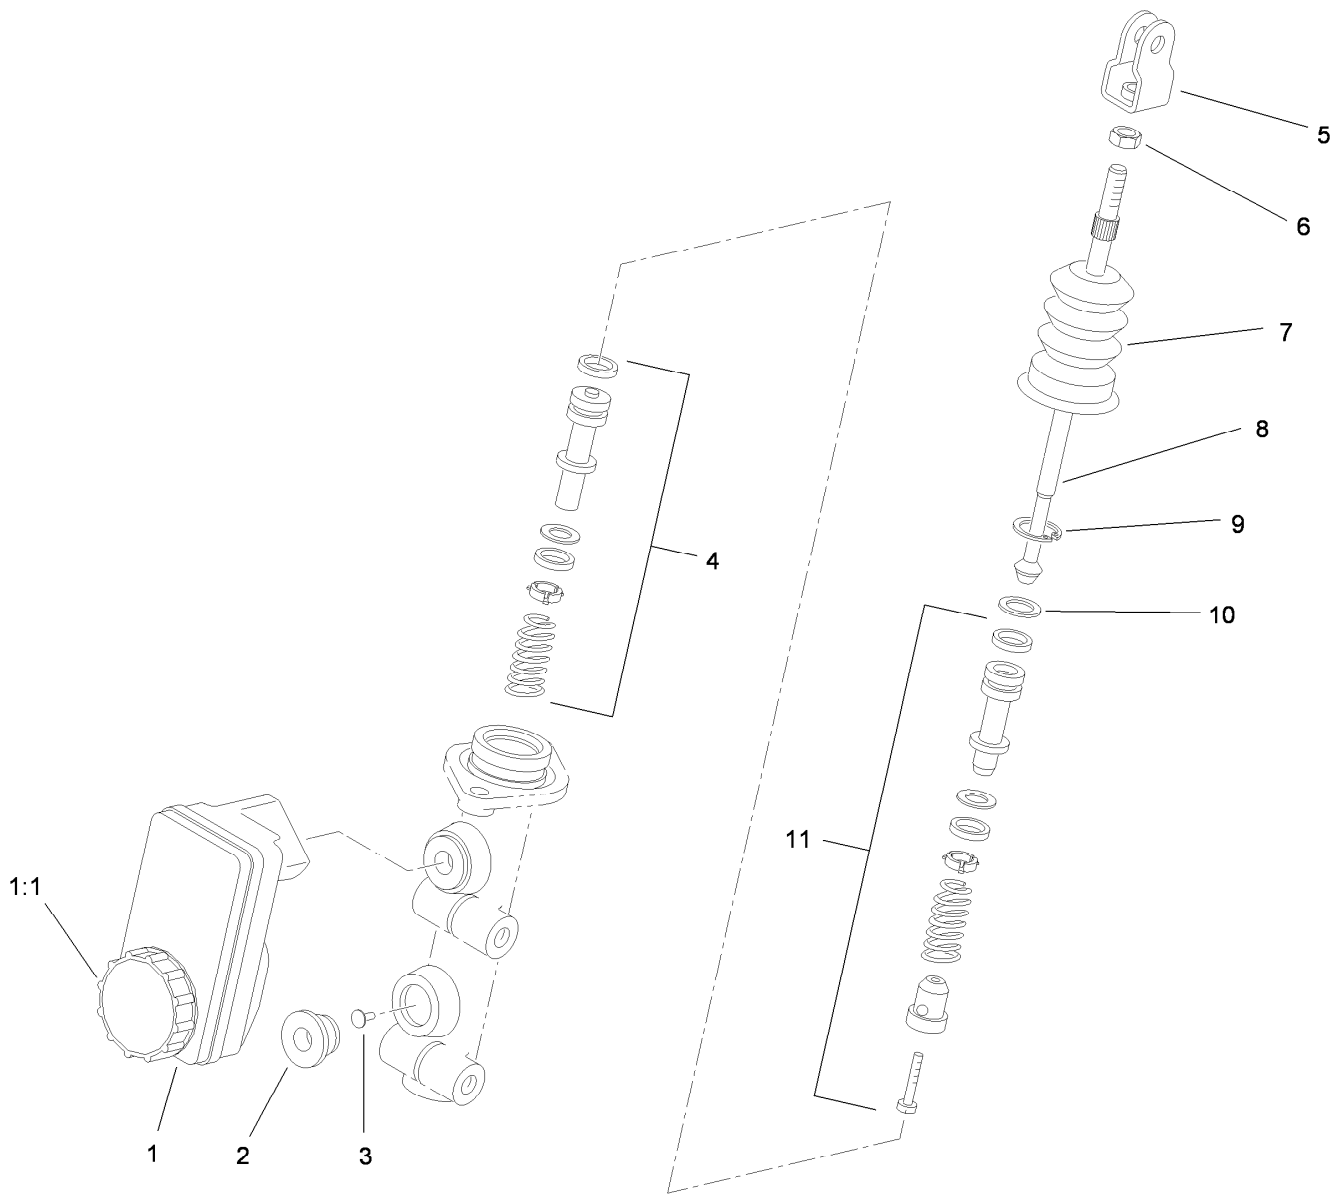

Master Cylinder Assembly No. 104-6782


Ref.	Part Number	Qty.	Description
1	104-6845	1	Reservoir ASM
1:1	92-4112	1	Cap ASM
2	93-8971	2	Seal-Port, Flange
3	92-4103	1	Pin-Stop
4	92-4102	1	Secondary Piston ASM
5	92-4110	1	Clevis
6	21-0360	1	Nut-Hex
7	94-5209	1	Cover-Dust
8	94-5210	1	Rod-Push
9	92-4109	1	Ring-Snap
10	92-4108	1	Retainer-Washer
11	92-4101	1	Primary Piston ASM

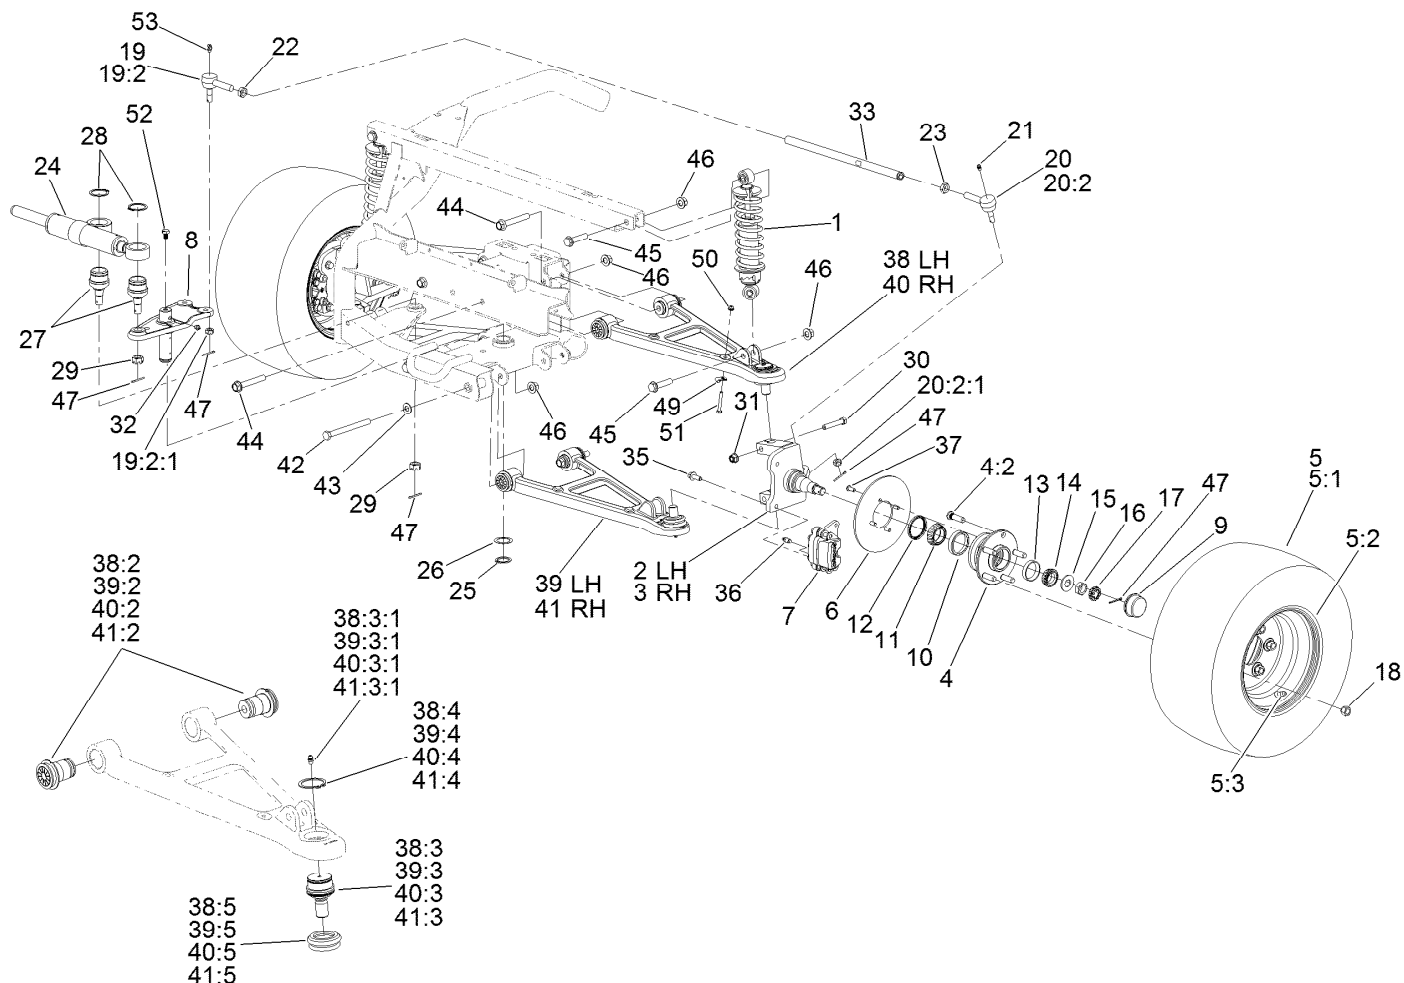 

Front Suspension Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	137-4287	2	Coil Over Shock ASM	15	93-0309	2	Washer-Tab
2	125-0730-03	1	Spindle-LH	16	3220-7	2	Nut-Jam
3	125-0723-03	1	Spindle-RH	17	93-0307	2	Nut-Lock, Retainer
4	117-8071	2	Hub ASM	18	242-50	10	Nut-Lug
4:2	10-6830	5	Stud-Type, Drive	19	112772-03	2	Joint-Ball, RH
5	125-0763	2	Tire And Wheel ASM	19:2		1	Socket-Balljoint ●
5:1	120-7639	1	Tire	19:2:1	915031	1	Nut
5:2	125-0764	1	Wheel	20	112771-03	2	Joint-Ball, LH
5:3	232-27	1	Stem-Valve	20:2		1	Socket-Balljoint ●
6	136-6295	2	Rotor-Brake	20:2:1	915031	1	Nut
7	127-7424	2	Brake Caliper ASM	21	302-5	2	Fitting-Grease
8	137-1602	1	Pitman Arm (Mach)	22	3220-11	2	Nut-Jam
9	241-119	2	Cap-Dust	23	3218-21	2	Nut-Jam LH
10	254-107	2	Cup-Bearing, Tapered	24	125-0720	1	Cylinder-Hydraulic, Steering
11	254-106	2	Cone-Bearing, Tapered	25	32151-77	1	Ring-Retaining, External
12	108-7019	2	Seal-Shaft	26	76-2980	1	Washer-Thrust
13	254-72	2	Bearing-Cup, Tapered	27	117-9875	2	Joint-Ball
14	254-94	2	Bearing-Cone, Tapered	28	32151-104	2	Ring-Retaining, External

 
● Not serviced separately

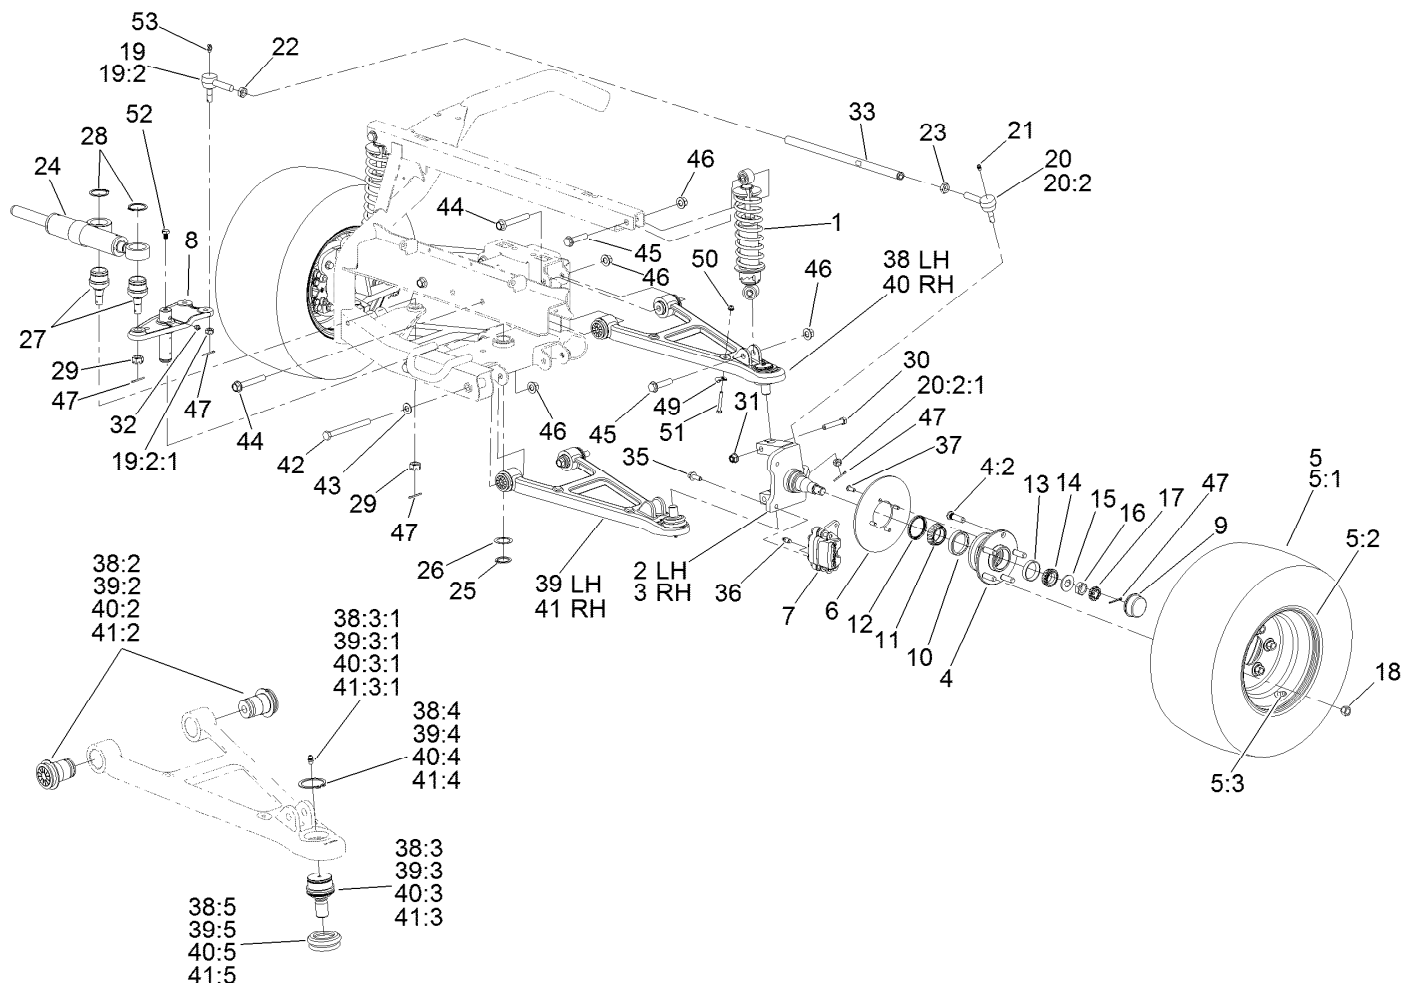

Front Suspension Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
29	32136-2	2	Nut-SHH	39:4	32151-104	1	Ring-Retaining, External
30	324-10	4	Screw-HH	39:5	87-2420	1	Seal-Joint, Ball
31	114-8417	4	Nut-HF, NI	40	125-8023	1	RH Upper Control Arm ASM
32	302-52	1	Fitting-Grease	40:2	87-1450	2	Bushing-Flange
33	115-7654	2	Tie Rod	40:3	115-2165	1	Ball Joint
35	3234-11	4	Screw-HHF	40:3:1	302-5	1	Fitting-Grease
36	119-9509	2	Screw-Bleed	40:4	32151-104	1	Ring-Retaining, External
37	3274-55	8	Screw-HSBH	40:5	87-2420	1	Seal-Joint, Ball
38	125-8021	1	LH Upper Control Arm ASM	41	125-8024	1	RH Lower Control Arm ASM
38:2	87-1450	2	Bushing-Flange	41:2	87-1450	2	Bushing-Flange
38:3	115-2165	1	Ball Joint	41:3	115-2165	1	Ball Joint
38:3:1	302-5	1	Fitting-Grease	41:3:1	302-5	1	Fitting-Grease
38:4	32151-104	1	Ring-Retaining, External	41:4	32151-104	1	Ring-Retaining, External
38:5	87-2420	1	Seal-Joint, Ball	41:5	87-2420	1	Seal-Joint, Ball
39	125-8022	1	LH Lower Control Arm ASM	42	325-22	2	Screw-HH
39:2	87-1450	2	Bushing-Flange	43	3256-26	2	Washer-Flat
39:3	115-2165	1	Ball Joint	44	114-8419	6	Screw-HHF
39:3:1	302-5	1	Fitting-Grease	45	3234-46	4	Screw-HHF

 ● Not serviced separately

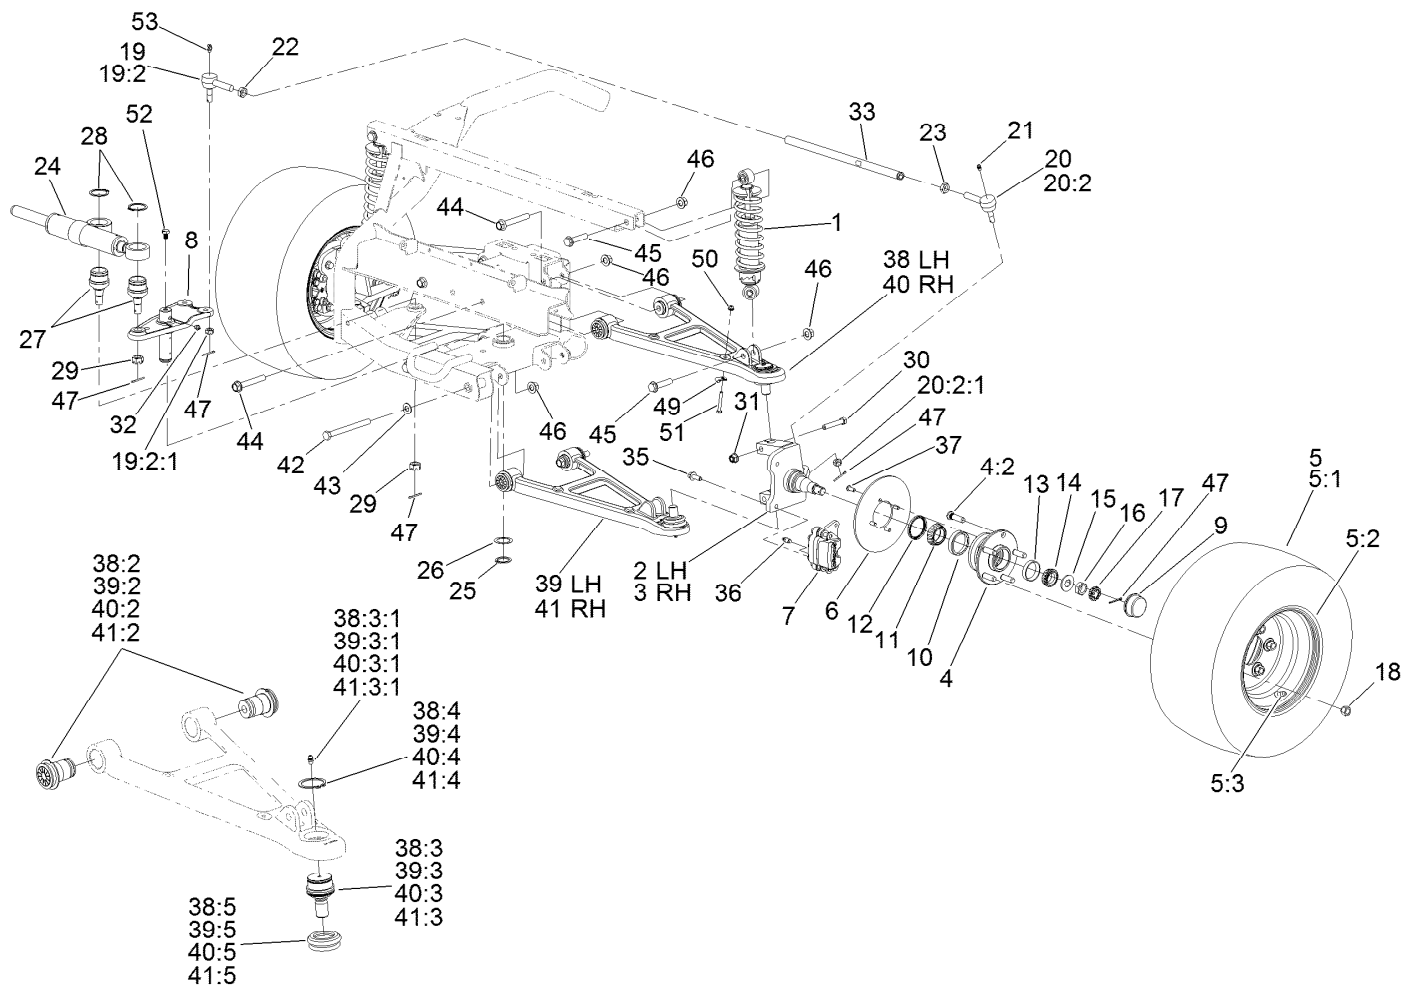


Front Suspension Assembly (continued)

Ref.	Part Number	Qty.	Description
46	99-5107	12	Nut-HF Nylock
47	3272-12	8	Pin-Cotter
49	2412-72	2	Clip-Closed, Insulated
50	104-7201	2	Nut-HF, NI


Ref.	Part Number	Qty.	Description
51	321-11	2	Screw-HH
52	302-60	2	Fitting-Grease
53	138-6279	1	Screw-Cap, HH

● Not serviced separately

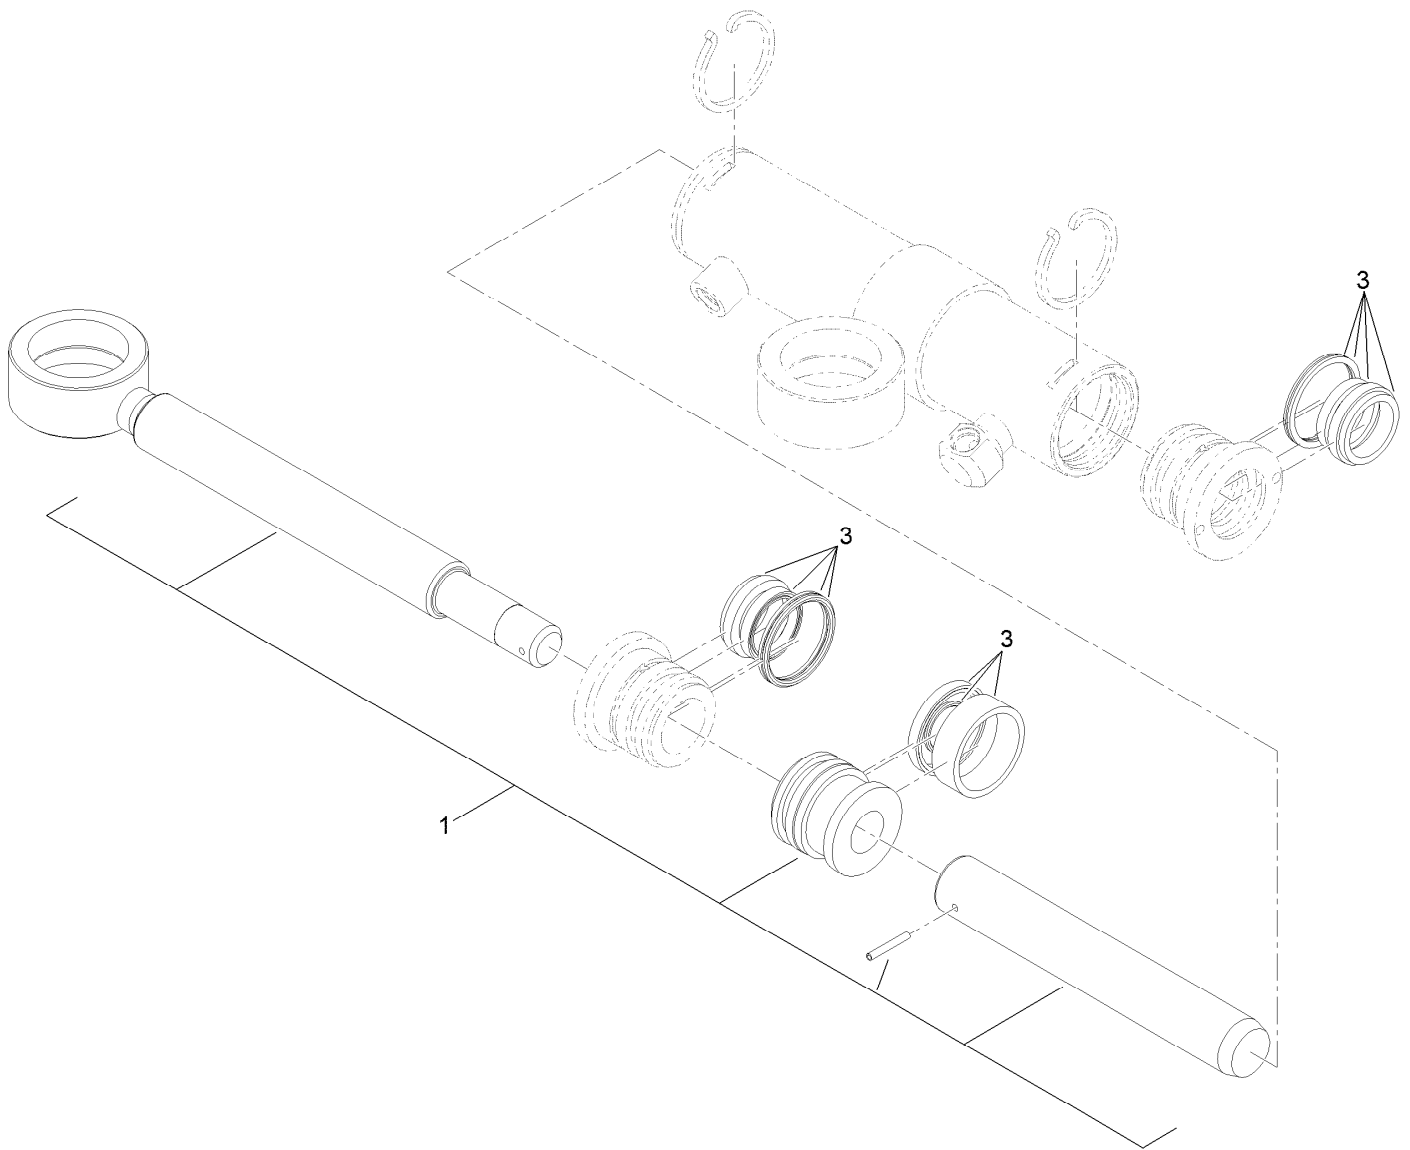

Hydraulic Cylinder Assembly No. 125-0720


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-0722	1	Rod-Cylinder
3	115-2160	1	Cylinder Repair Kit

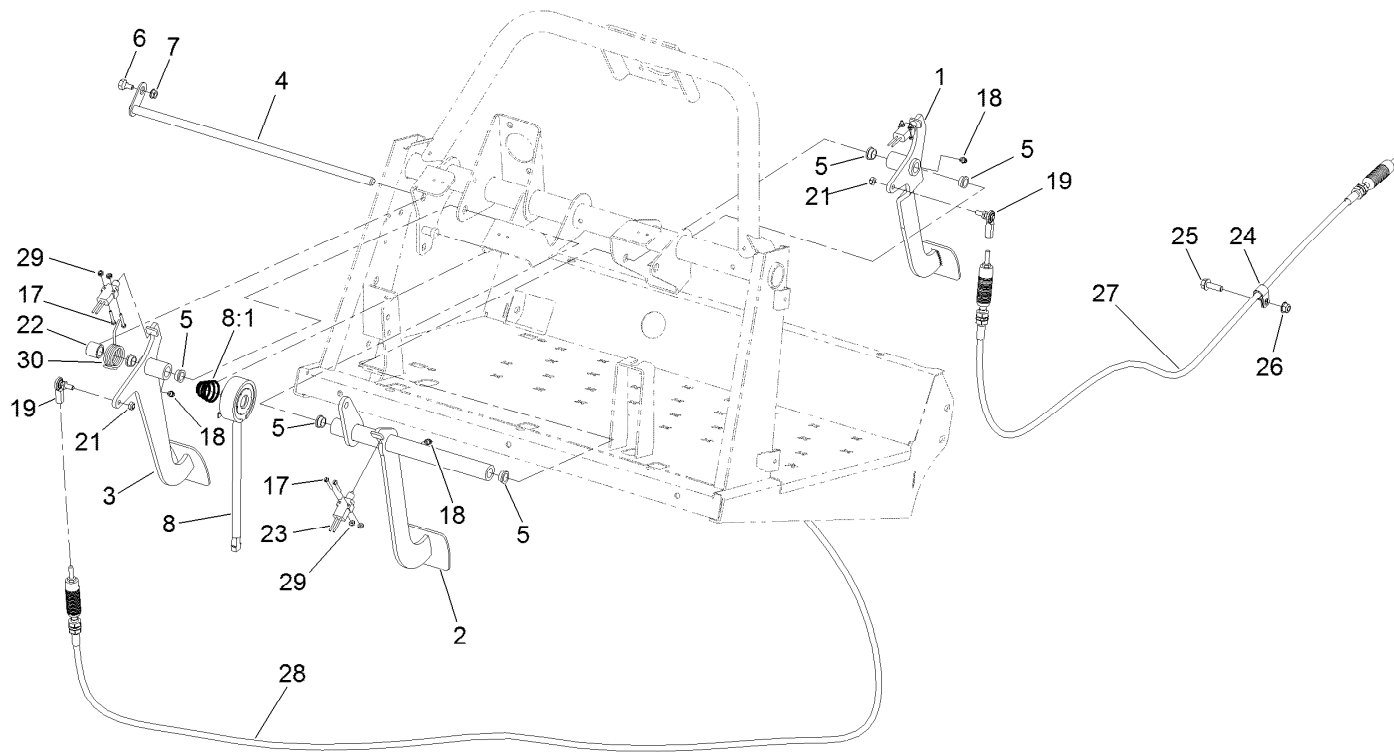 

Pedal Assembly

Ref.	Part Number	Qty.	Description
1	125-0702-03	1	Pedal
2	125-0700-03	1	Pedal
3	125-0701-03	1	Pedal
4	125-0825	1	Pivot
5	256-156	6	Bushing-Flange
6	63-3410	1	Screw-Shoulder
7	32128-33	1	Nut-HF
8	99-8090	1	Magnet ASM
8:1	93-6601	1	Spring-Compression
17	32105-9	6	Screw-HH
18	302-5	3	Fitting-Grease


Ref.	Part Number	Qty.	Description
19	110-2554	2	Rod End-Spherical
21	3296-13	2	Nut-Lock, NI
22	99-2079	1	Spacer
23	99-3410	3	Switch
24	2412-93	1	Clamp-R
25	3234-17	1	Screw-HHF
26	104-8300	1	Nut-HF, NI
27	125-0957	1	Cable-Clutch
28	125-0958	1	Cable-Accelerator
29	3296-9	6	Nut-Hex
30	130-7060	1	Spring-Torsion, LH

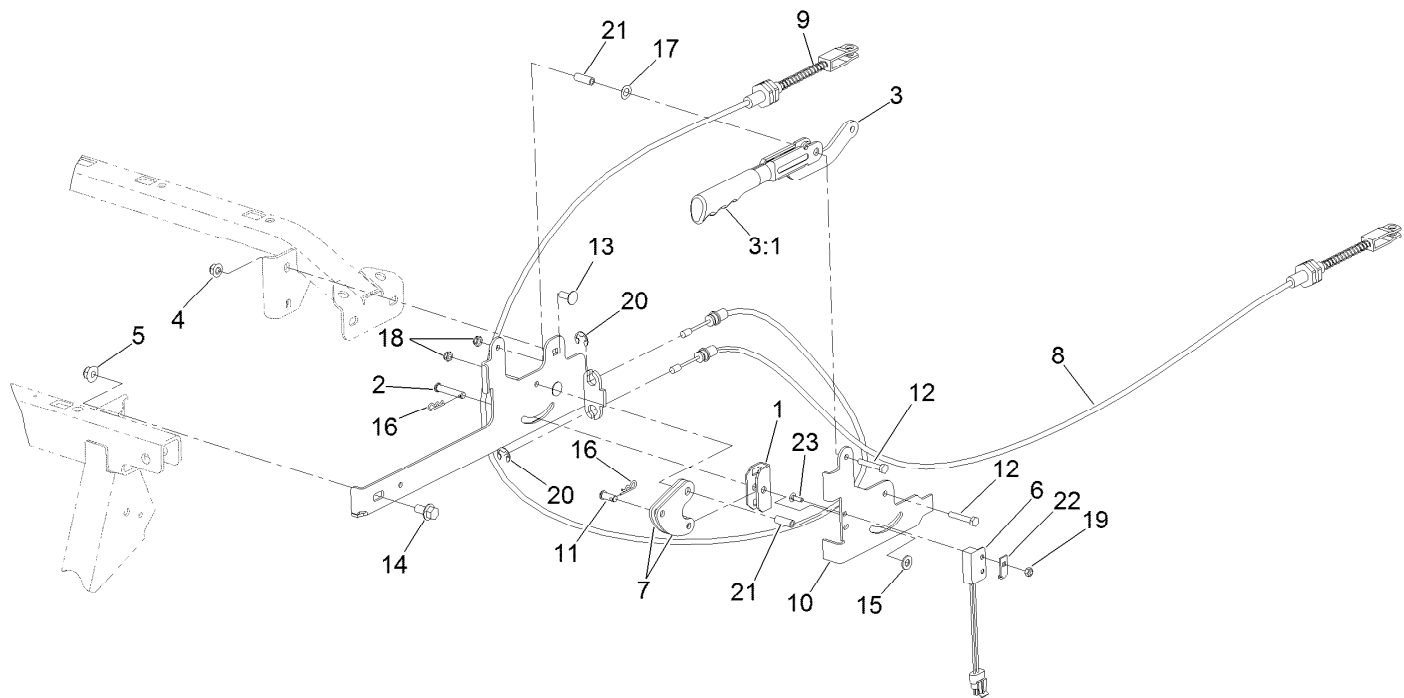

Parking Brake Lever and Cable Assembly

Ref.	Part Number	Qty.	Description
1	87-3480	1	Bracket-Equalizer, Cable
2	94-3829	1	Pin-Clevis
3	127-8863	1	Lever-Brake, Park
3:1	127-8864	1	Grip-Handle
4	104-8300	2	Nut-HF, NI
5	104-8301	1	Nut-HF, NI
6	105-0023	1	Switch-Proximity
7	106-7814	2	Bellcrank
8	136-2444	1	Cable-Parking Brake, LH
9	136-2445	1	Cable-Parking Brake, RH
10	136-2353-0P	1	Parking Brake ASM [primed]
11	283-62	1	Pin-Clevis

Ref.	Part Number	Qty.	Description
12	321-9	2	Screw-HH
13	3230-23	2	Bolt-CARR
14	3234-1	1	Screw-HHF
15	3256-23	1	Washer-Plain
16	3290-307	2	Pin-Cotter
17	3290-477	1	Washer-Curved
18	3296-56	2	Nut-Lock, NI
19	3296-2	1	Nut-Lock, NI
20	32120-47	2	Ring-Retaining, External
21	114402	2	Spacer
22	100-4872	1	Plate-Switch, Neutral
23	3229-34	1	Screw-CARR

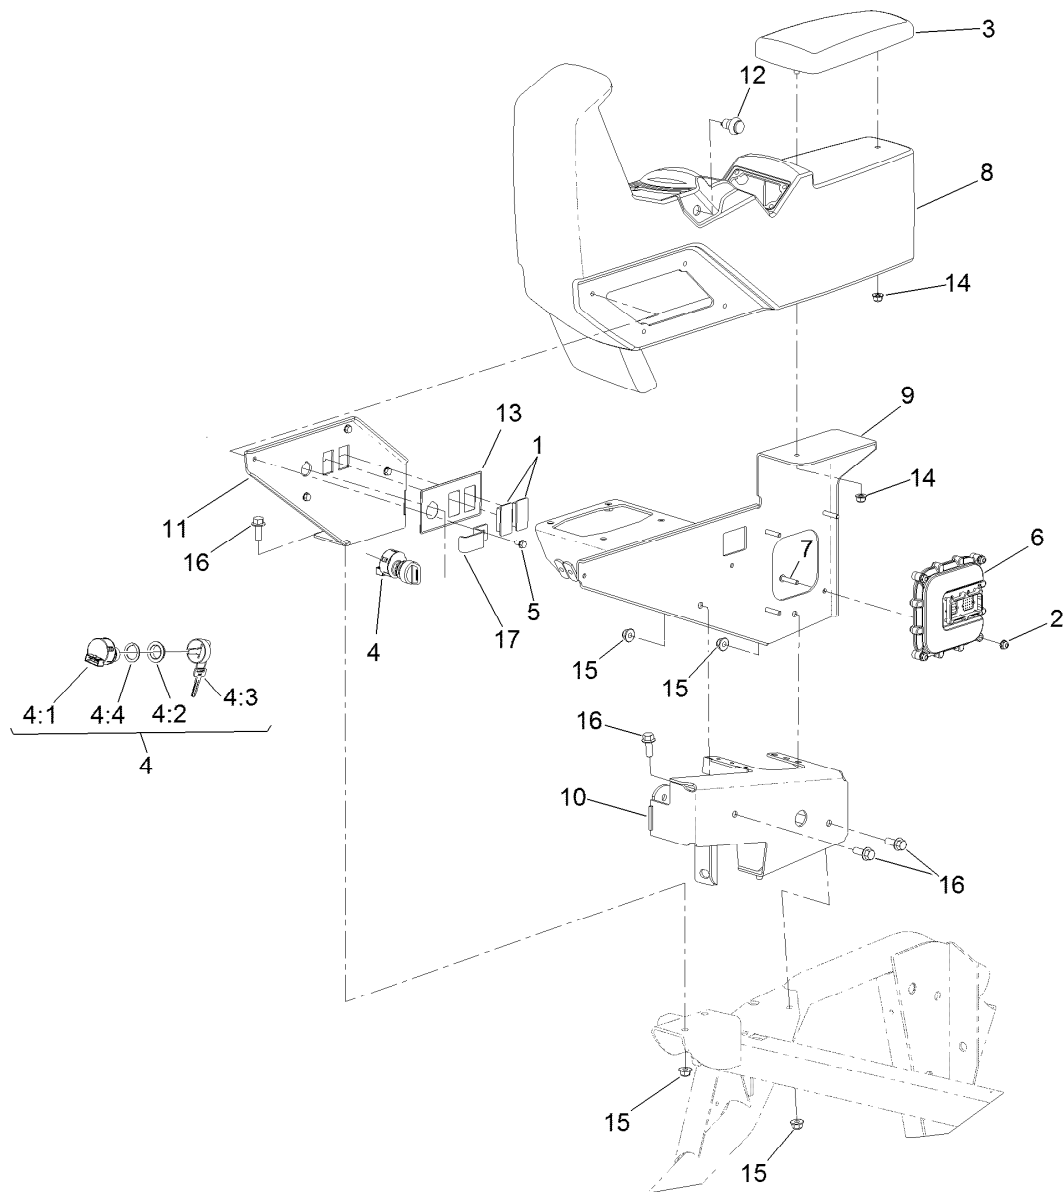 


Control Console Mount Assembly

Ref.	Part Number	Qty.	Description
1	99-7420	2	Plug-Hole
2	104-7201	4	Nut-HF, NI
3	108-7602	1	Rest-Arm
4	110-2580	1	Switch-Key, Supervisor
4:1		1	Switch-Key ●
4:2	108-8660	1	Nut-Mounting
4:3	110-5221	1	Set-Key, Supervisor
4:4	108-8659	1	Washer-Backup
5	93-6083	4	Screw-HWH
6	115-1900	1	Controller
7	120-0834	4	Screw-HSBH

Ref.	Part Number	Qty.	Description
8	125-0791	1	Console-Control, Spray
9	125-4108-0P	1	Console-Mount ASM [primed]
10	125-4188-0P	1	Shifter-Mount [primed]
11	125-4191-03	1	Console Mount ASM
12	125-7996	1	Switch-Pb, Momentary
13	125-8114	1	Decal-Control Panel
14	104-8300	2	Nut-HF, NI
15	104-8301	6	Nut-HF, NI
16	3234-11	6	Screw-HHF
17	136-2309	1	Bracket-Mount, Radio

 
● Not serviced separately

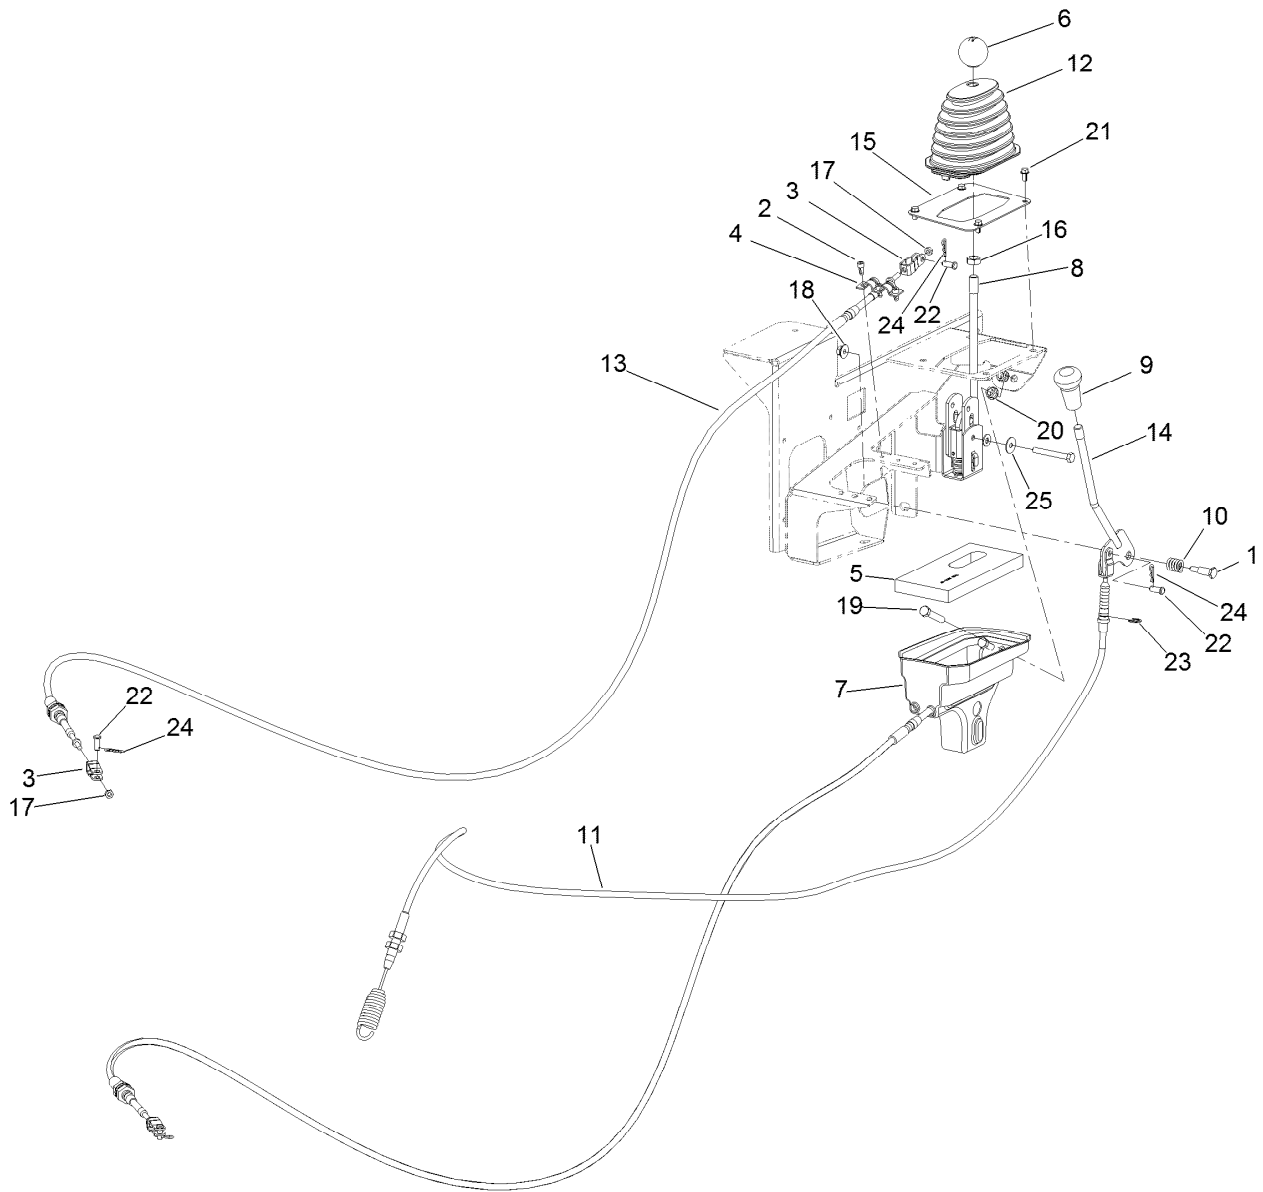

Gear Shift and Drift Lock Control Assembly


Ref.	Part Number	Qty.	Description
1	63-2650	1	Screw-Shoulder
2	65-5220	3	Screw-HSH, Thread Forming
3	87-2310	4	Clevis-Cable
4	87-4960	1	Clamp-Cable
5	87-6570	1	Seal-Boot, Lower
6	87-6720	1	Knob-Shift
7	106-2376	1	Boot-Shift, Lower
8	106-7887	1	Shift ASM
9	106-7952	1	Knob
10	136-7121	1	Spring-Compression
11	115-2287	1	Cable-Lock, Differential
12	117-8063	1	Boot-Shift

Ref.	Part Number	Qty.	Description
13	125-0880	2	Cable-Shift
14	125-0894	1	Handle-Difflock
15	125-8030-03	1	Cover-Shifter
16	3218-18	1	Nut-Jam
17	3220-1	4	Nut-Jam
18	32128-13	1	Nut-HF
19	323-10	2	Screw-HH
20	3290-357	2	Nut-HSF
21	93-6083	4	Screw-HWH
22	283-62	5	Pin-Clevis
23	32120-47	1	Ring-Retaining, External
24	3290-307	5	Pin-Cotter
25	108-4925	1	Washer

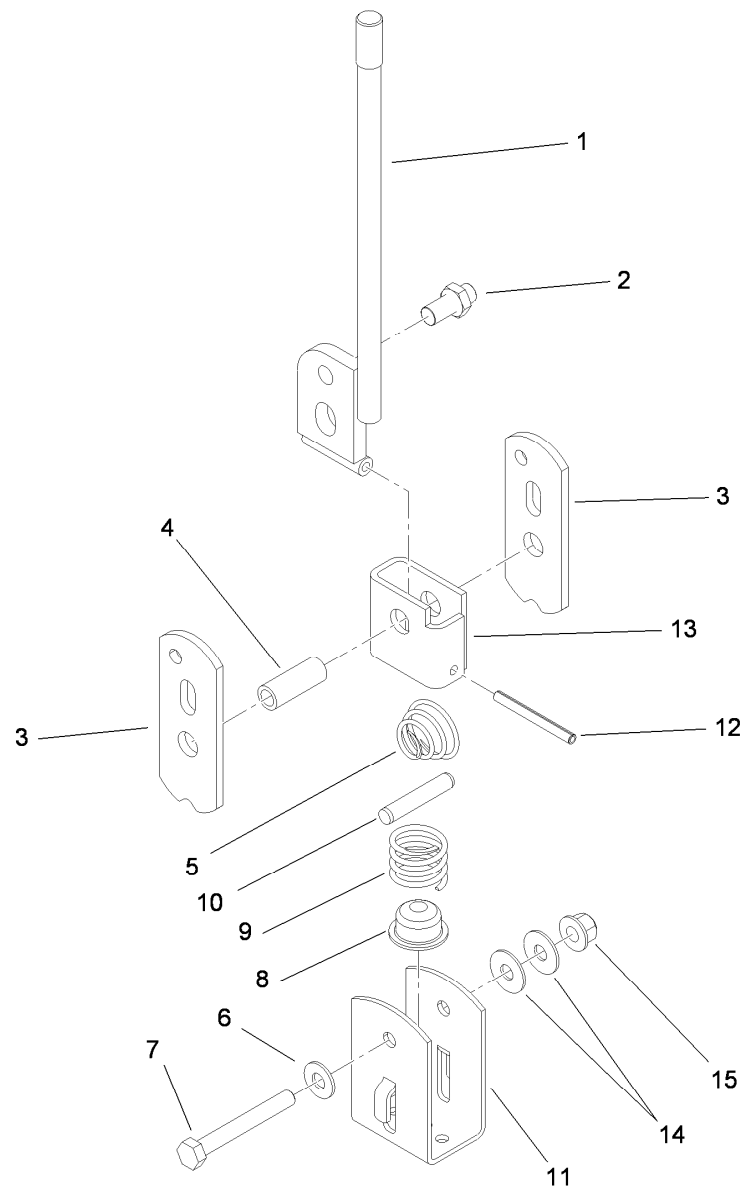 

Shift Assembly No. 106-7887


Ref.	Part Number	Qty.	Description
1	131-3469	1	Lever-Shift
2	87-3650	1	Pin-Shift
3	87-3540	2	Link-Shift
4	87-2520	1	Tube-Pivot
5	87-2900	1	Spring-Compression
6	87-8640	1	Washer-Flat
7	322-12	1	Screw-HH
8	87-3530	1	Button-Shifter
9	87-3660	1	Spring-Compression
10	3290-507	1	Pin-Dowel
11	87-3520	1	Clevis
12	32121-48	1	Pin-Spring
13	87-6040	1	Bracket-Shifter
14	3290-456	2	Washer-Belleville
15	104-8300	1	Nut-HF, NI

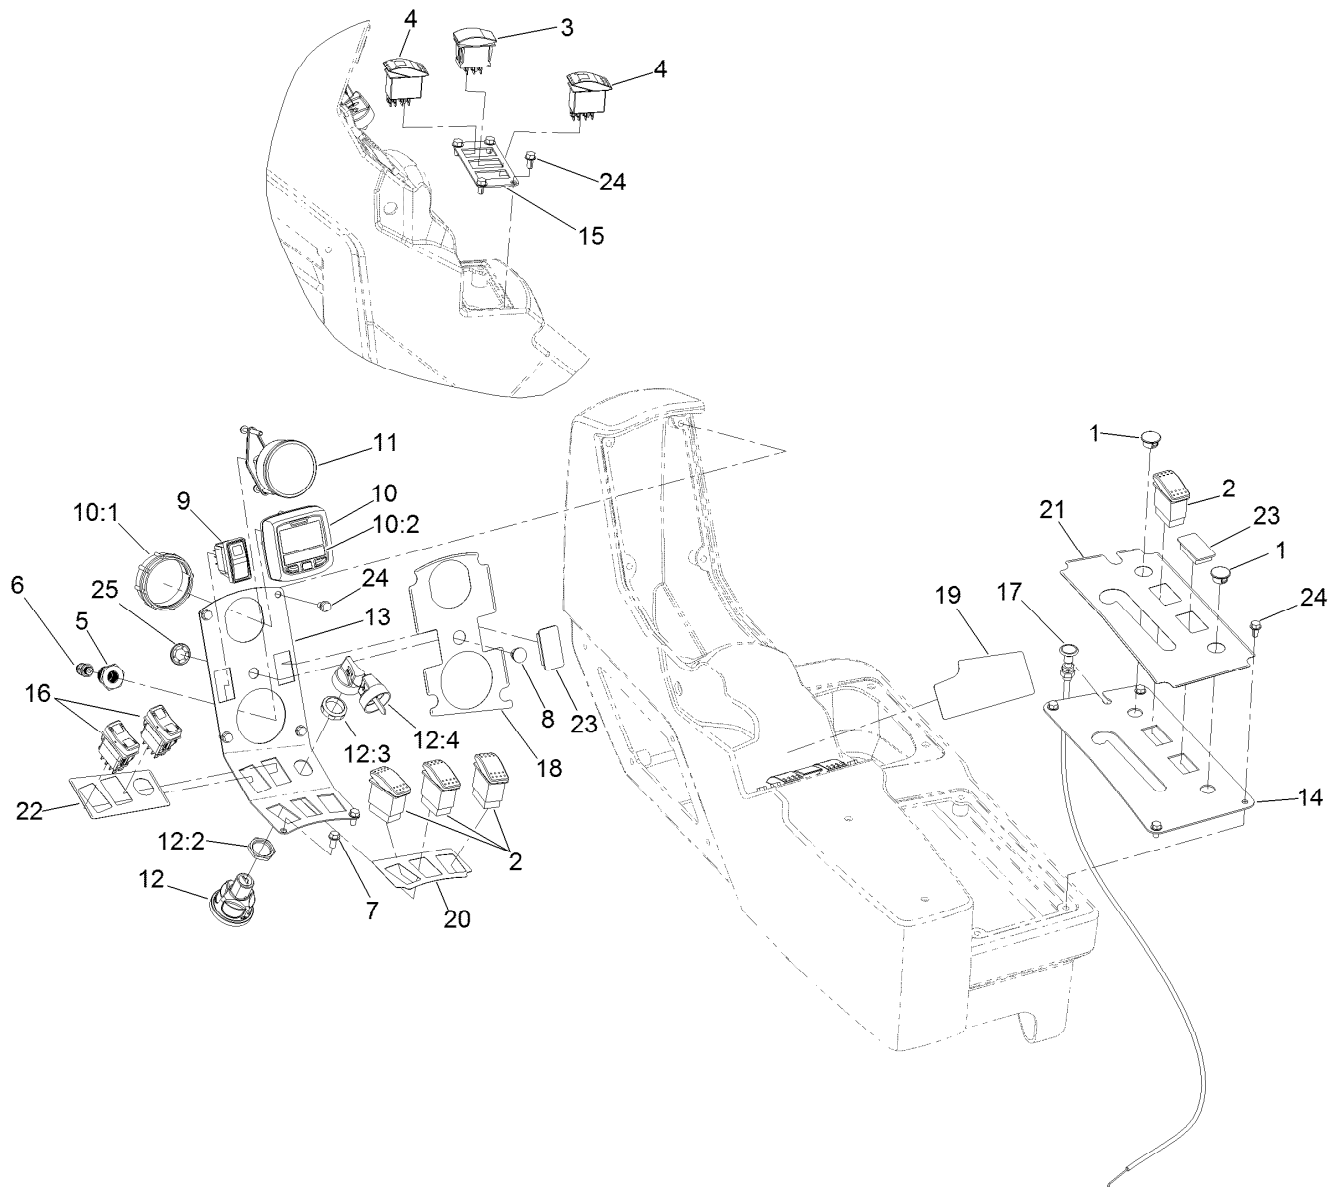 

Control Console Mount Assembly


Ref.	Part Number	Qty.	Description
1	94-5627	2	Plug-Dome
2	95-8999	4	Switch-Rocker, On-None-On
3	100-1535	1	Switch-Rocker, (On)-Off-(On)
4	100-8490	2	Switch-Rocker, On-None-On
5	100-8665	1	Reducer-Gauge, Pressure
6	100-8667	1	Coupler-Reducer
7	46-8093	1	Screw-Plastite
8	119-5329	1	Plug-Hole
9	120-0695	1	Switch-Rocker, On-Off-(On)
10	120-6310	1	LCD Display ASM Kantrak 1700
10:1	120-4630	1	Nut-Display
10:2	120-6311	1	Decal-Display
11	120-8546	1	Gauge-Pressure

Ref.	Part Number	Qty.	Description
12	121-5159	1	Switch-Ignition
12:2	121-5160	1	Nut-Hex
12:3	121-5161	1	Nut-Face
12:4	121-5162	1	Set-Key, Ignition
13	127-9733-03	1	Panel-Switches
14	125-0896-03	1	Panel-Cover
15	125-0898-03	1	Panel-Switches
16	125-0899	2	Switch-Rocker
17	125-8047	1	Choke-Control
18	125-4125	1	Decal-Control Panel, Upper
19	130-8293	1	Decal-Control Panel, Rear
20	125-4129	1	Decal-Control Panel, Spray
21	137-4289	1	Decal-Control Panel
22	125-4128	1	Decal-Switch Panel, Center
23	99-7420	2	Plug-Hole
24	93-6083	13	Screw-HWH
25	1-323142	1	Nut-Push

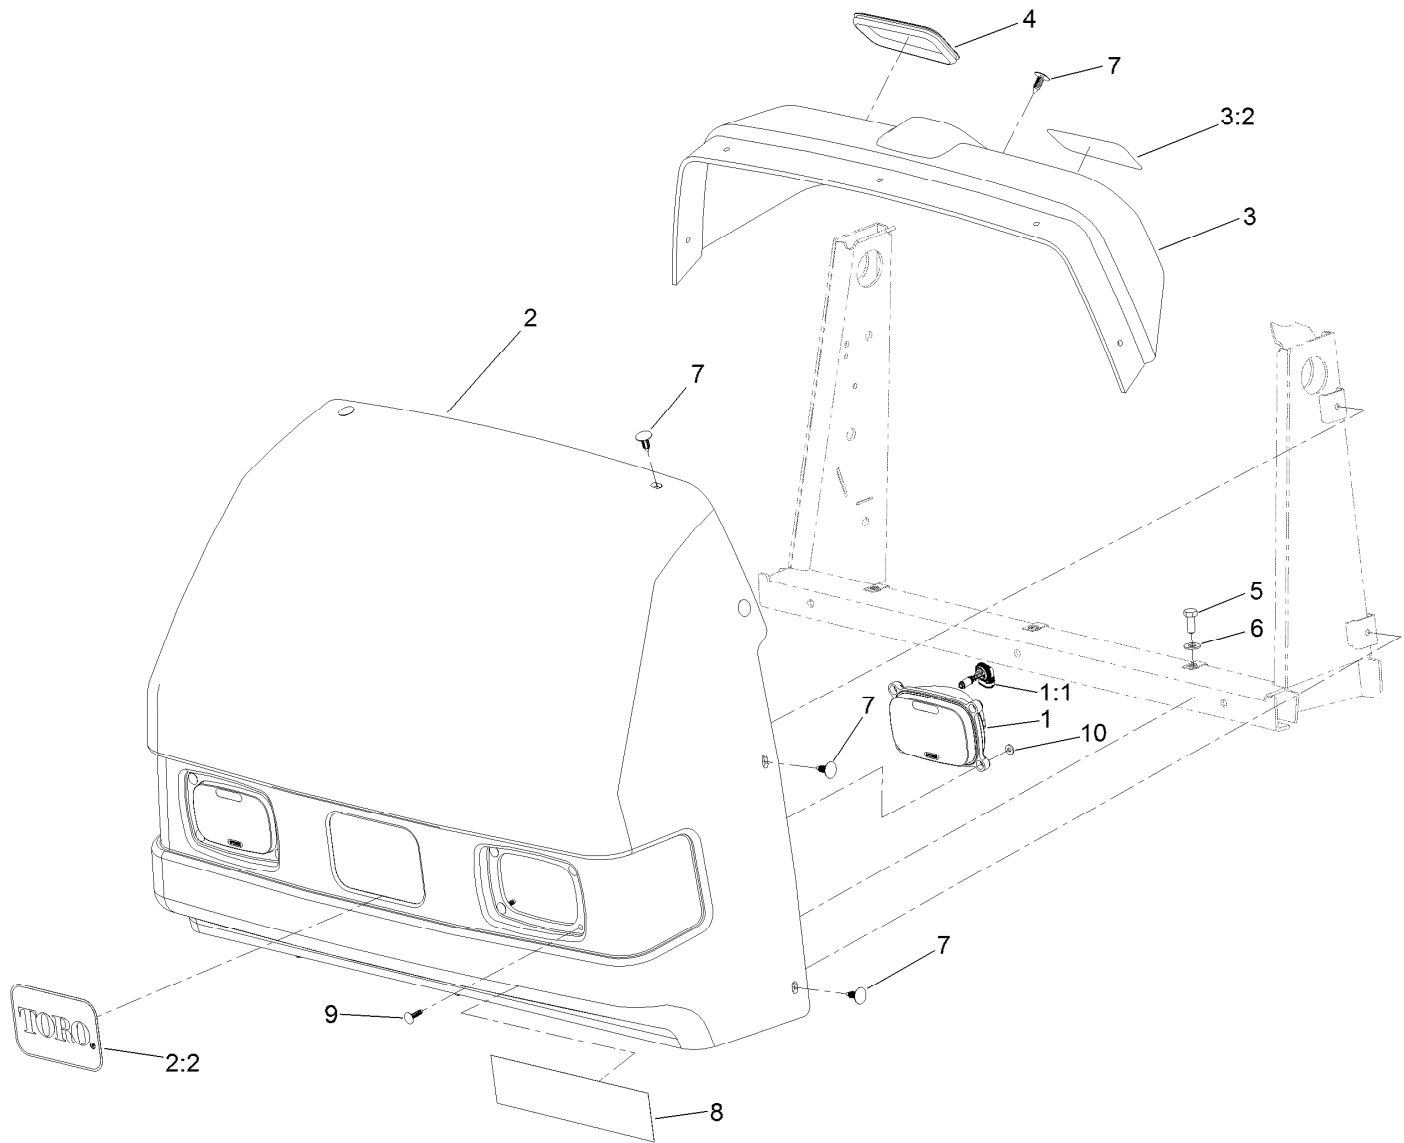

Hood, Dash and Headlight Assembly

Ref.	Part Number	Qty.	Description
1	125-0672	2	Headlight ASM
1:1	125-0673	1	Halogen-Bulb
2	127-3982	1	Hood
2:2	67-1300	1	Decal
3	125-0939	1	Dash
3:2	127-3941	1	Decal-Warning
4	125-8059	1	Cover- Reservoir, Brake
5	322-3	3	Screw-HH
6	3256-23	3	Washer-Plain
7	117-2382	10	Plug-Plastic
8	127-3944	1	Decal
9	125-8067	8	Plug-Plastic
10	3256-21	8	Washer-Flat

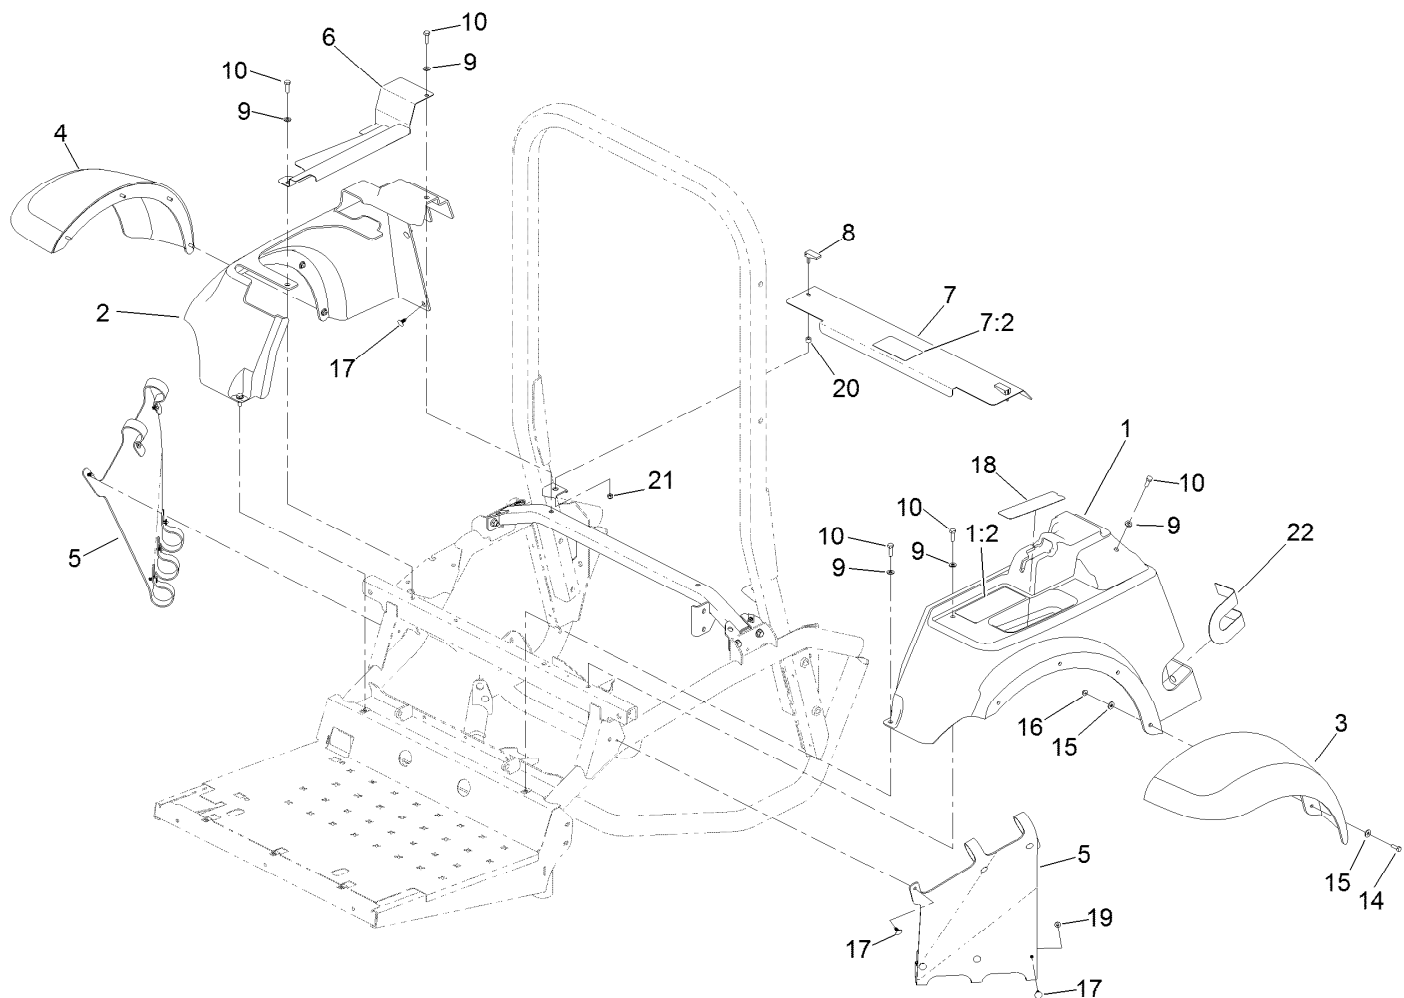

Seat Base and Front Fender Assembly


Ref.	Part Number	Qty.	Description
1	127-3980	1	LH Seatbase ASM
1:2	127-3935	1	Decal-Start-Up/Shut-Down
2	125-0803	1	Seatbase-RH
3	125-0902	1	Fender-LH
4	125-0903	1	Fender-RH
5	125-0935	2	Shroud-Fender, Inner
6	125-8088-01	1	Cover-Console, Bottom
7	127-3979	1	Cover-Engine
7:2	127-3937	1	Decal-Warning, Engine Cover
8	106-6777	2	Handle-Latch, Swell

Ref.	Part Number	Qty.	Description
9	3256-23	7	Washer-Plain
10	322-5	7	Screw-HH
14	321-5	8	Screw-HH
15	3256-2	16	Washer-Flat
16	104-7201	8	Nut-HF, NI
17	117-2382	16	Plug-Plastic
18	125-8093	1	Pad-Pocket
19	3256-16	10	Washer-Flat
20	106-6778	2	Bushing-Latch, Swell
21	1-804254	2	Nut-Lock, HH
22	131-5822	1	Guard-Rubber



Ref.	Part Number	Qty.	Description
13:2	237-30	2	O-Ring
14	340-4	1	Fitting-Straight
14:1	237-30	1	O-Ring
14:2	237-79	1	O-Ring
15	340-132	2	Fitting-Elbow, 90 DEG
15:1	237-78	1	O-Ring
15:2	237-21	1	O-Ring
16	340-127	1	Nut-Bulkhead
17	56-7973	6	Clamp-Tube
18	93-6848	1	Fitting-Elbow 45
18:1	237-79	1	O-Ring
19	2412-129	2	Clamp-Hose
20	353-987	1	Fitting-Elbow, 90
20:1	237-81	1	O-Ring
22	108-5675	2	Hydraulic Hose ASM
23	127-3987	1	Hose ASM
24	125-0952	1	Hose-Suction
25	125-0949	2	Hydraulic Hose ASM

 3445-744C

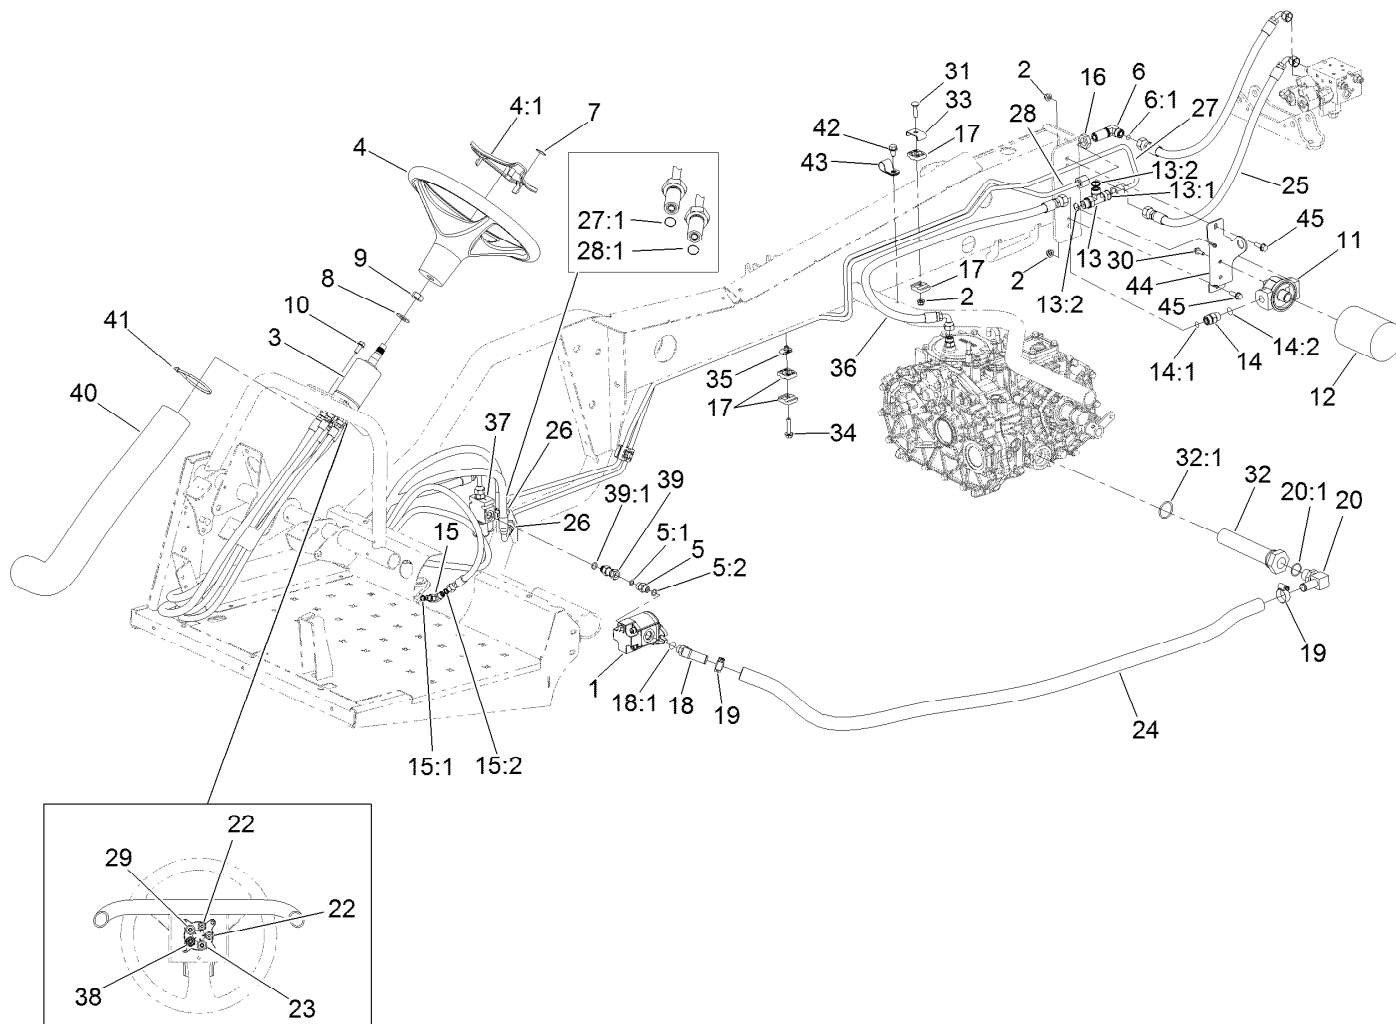


Hydraulic Steering Assembly (continued)

Ref.	Part Number	Qty.	Description
26	340-70	2	Nut-Lock
27	125-4058	1	Hydraulic Tube ASM
27:1	237-22	1	O-Ring
28	125-4059	1	Hydraulic Tube ASM
28:1	237-22	1	O-Ring
29	114-7702	1	Hose-HYD
30	3234-4	2	Screw-HHF
31	3230-3	2	Screw-CARR
32	87-3990	1	Strainer-Transaxle
32:1	237-101	1	O-Ring
33	119-1418	2	Plate-Clamp, Short
34	115-1794	1	Screw-HHF


Ref.	Part Number	Qty.	Description
35	94-2413	1	Nut-U
36	94-5961	1	Hose
37	127-3965	1	Solenoid Valve ASM
38	120-2061	1	Hose-HYD
39	104-3779	1	Connector-Swivel, Straight
39:1	237-42	1	O-Ring
40	106-6713	1	Cover-Lines, Steering
41	3290-379	4	Tie-Cable
42	32144-15	1	Screw-HHFTF
43	2412-81	1	Clamp-R
44	136-2313-03	1	Mount-Filter
45	3234-29	2	Screw-HHF

 ● Not illustrated

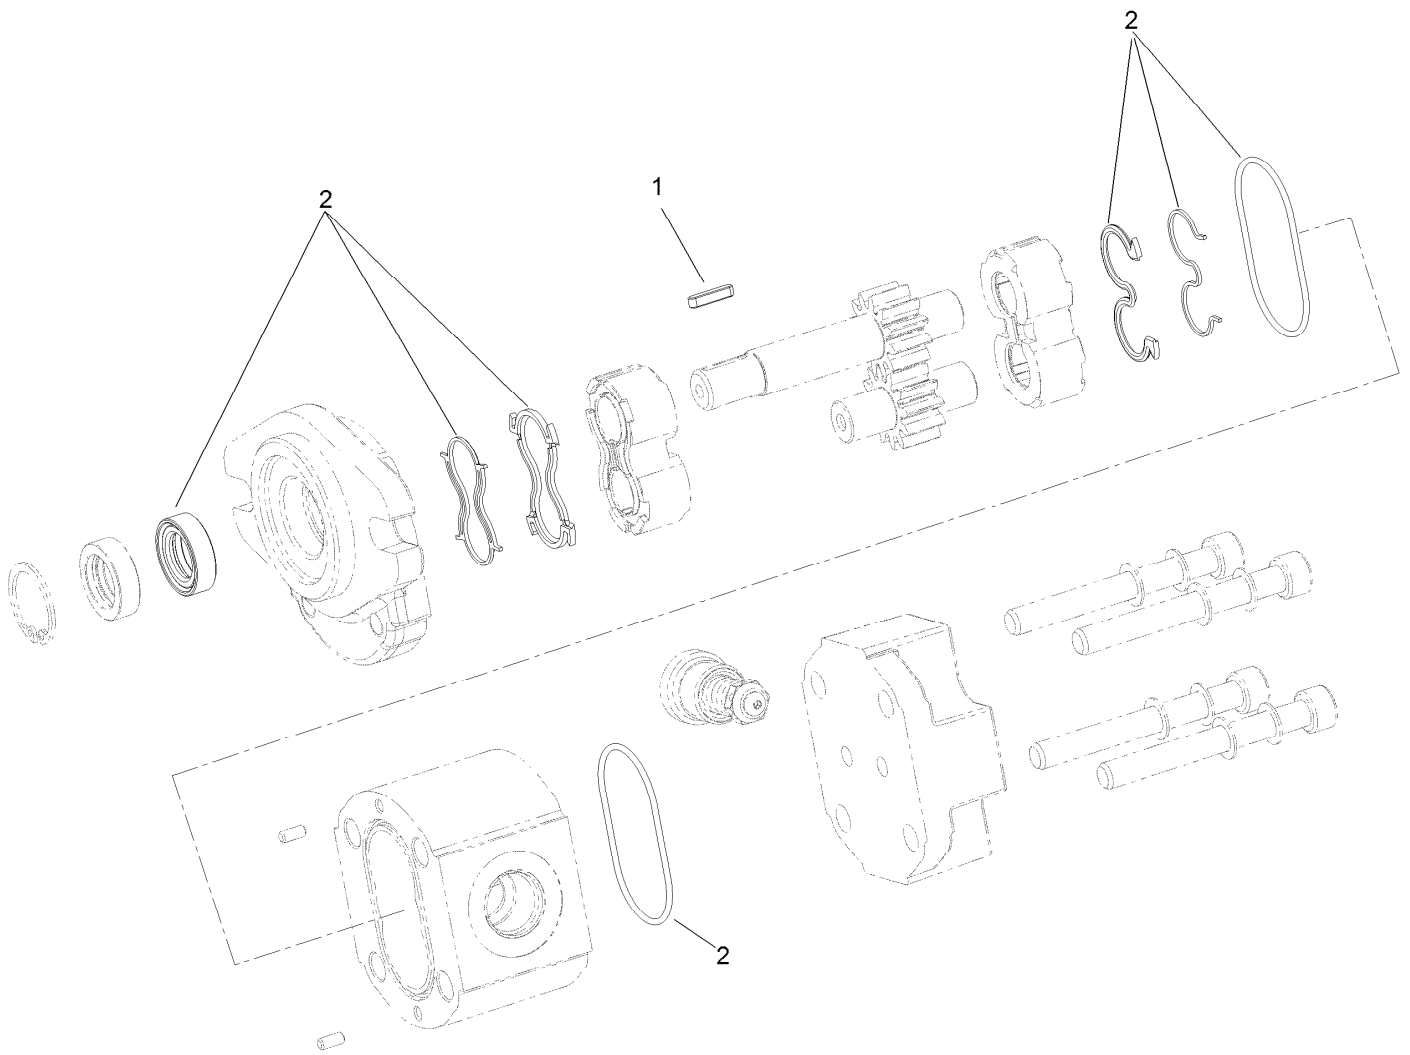

Hydraulic Pump Assembly No. 121-6545


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-8147	1	Key, Square
2	125-8148	1	Seal Kit

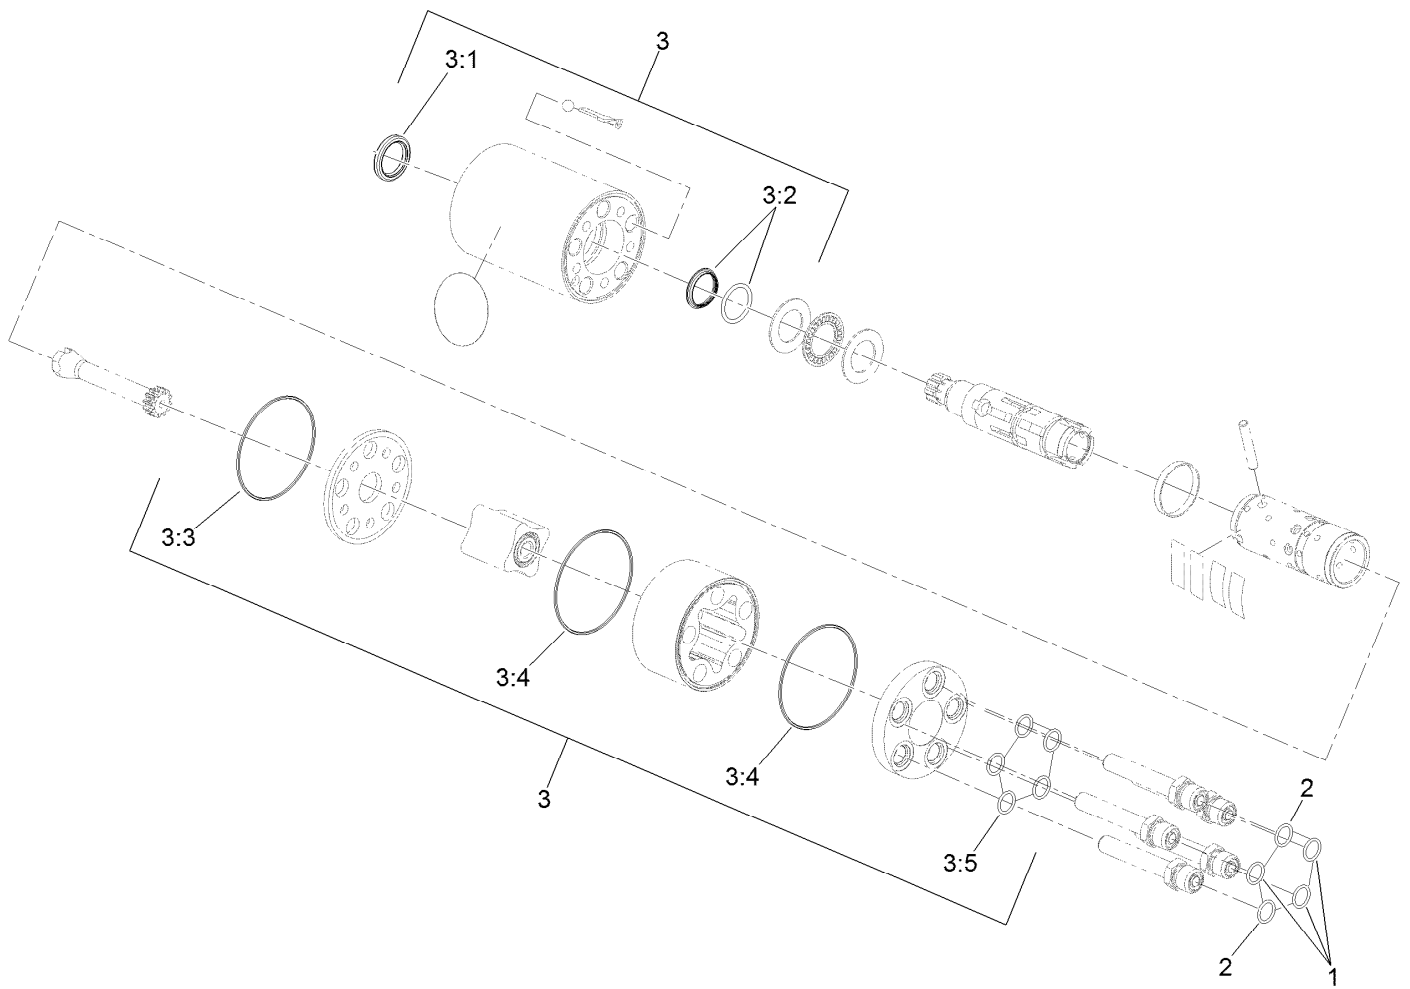 

Steering Valve Assembly No. 138-6100

Ref.	Part Number	Qty.	Description
1	237-21	3	O-Ring
2	237-22	2	O-Ring
3	106-6716	1	Seal Kit
3:1		1	Ring-Seal, Dust ●
3:2		1	Seal-Shaft ●
3:3		1	O-Ring ●
3:4		2	O-Ring ●
3:5		5	O-Ring ●


● Not serviced separately

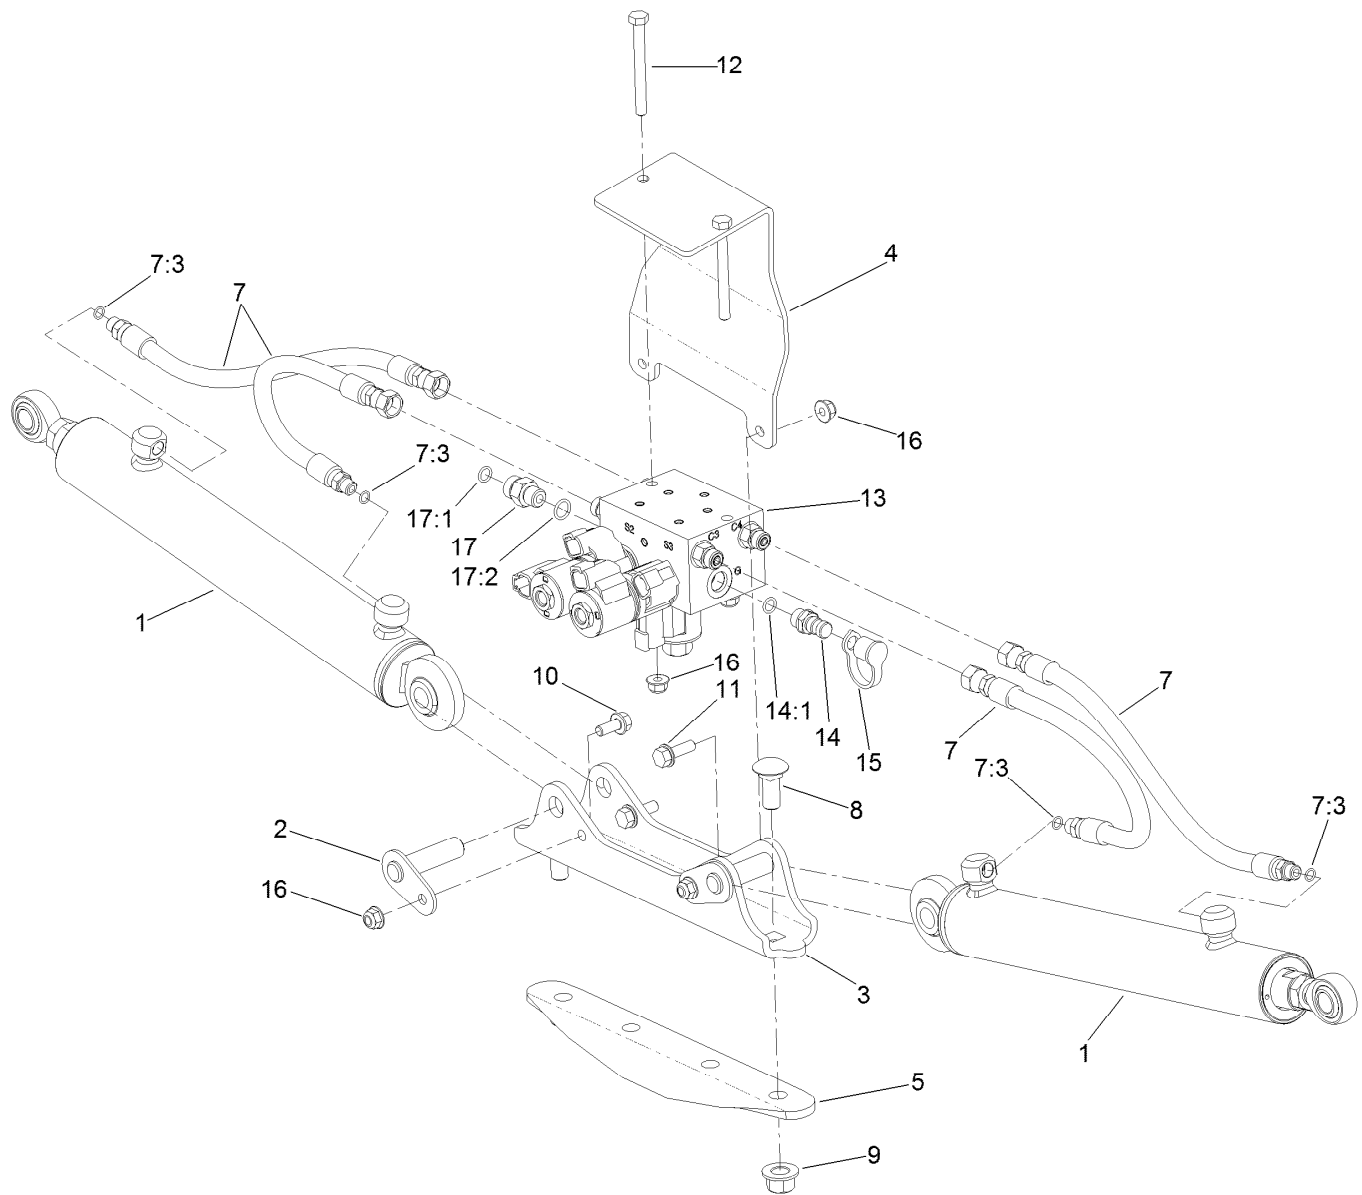

Boom Lift Hydraulic Assembly

Ref.	Part Number	Qty.	Description
1	117-0701	2	Hydraulic Cylinder ASM
2	112-7884	2	Pin-Pivot
3	119-4856-03	1	Plate-Mount, Cylinders
4	130-8201-03	1	Mount-Valve
5	131-0297-03	1	Plate-Stiffener, Boom
7	119-4859	4	Hose ASM
7:3	237-78	1	O-Ring
8	110-5067	2	Screw-CARR
9	99-5107	2	Nut-HF Nylock
10	110-5053	2	Screw-HHF

Ref.	Part Number	Qty.	Description
11	3234-29	2	Screw-HHF
12	322-14	2	Screw-HH
13	136-2400	1	On-Off Boom Lift Valve ASM
14	59-7410	1	Fitting-Diagnostic
14:1	237-42	1	O-Ring
15	354-79	1	Cap-Dust
16	104-8300	6	Nut-HF, NI
17	340-2	2	Fitting-Straight
17:1	237-22	1	O-Ring
17:2	237-42	1	O-Ring

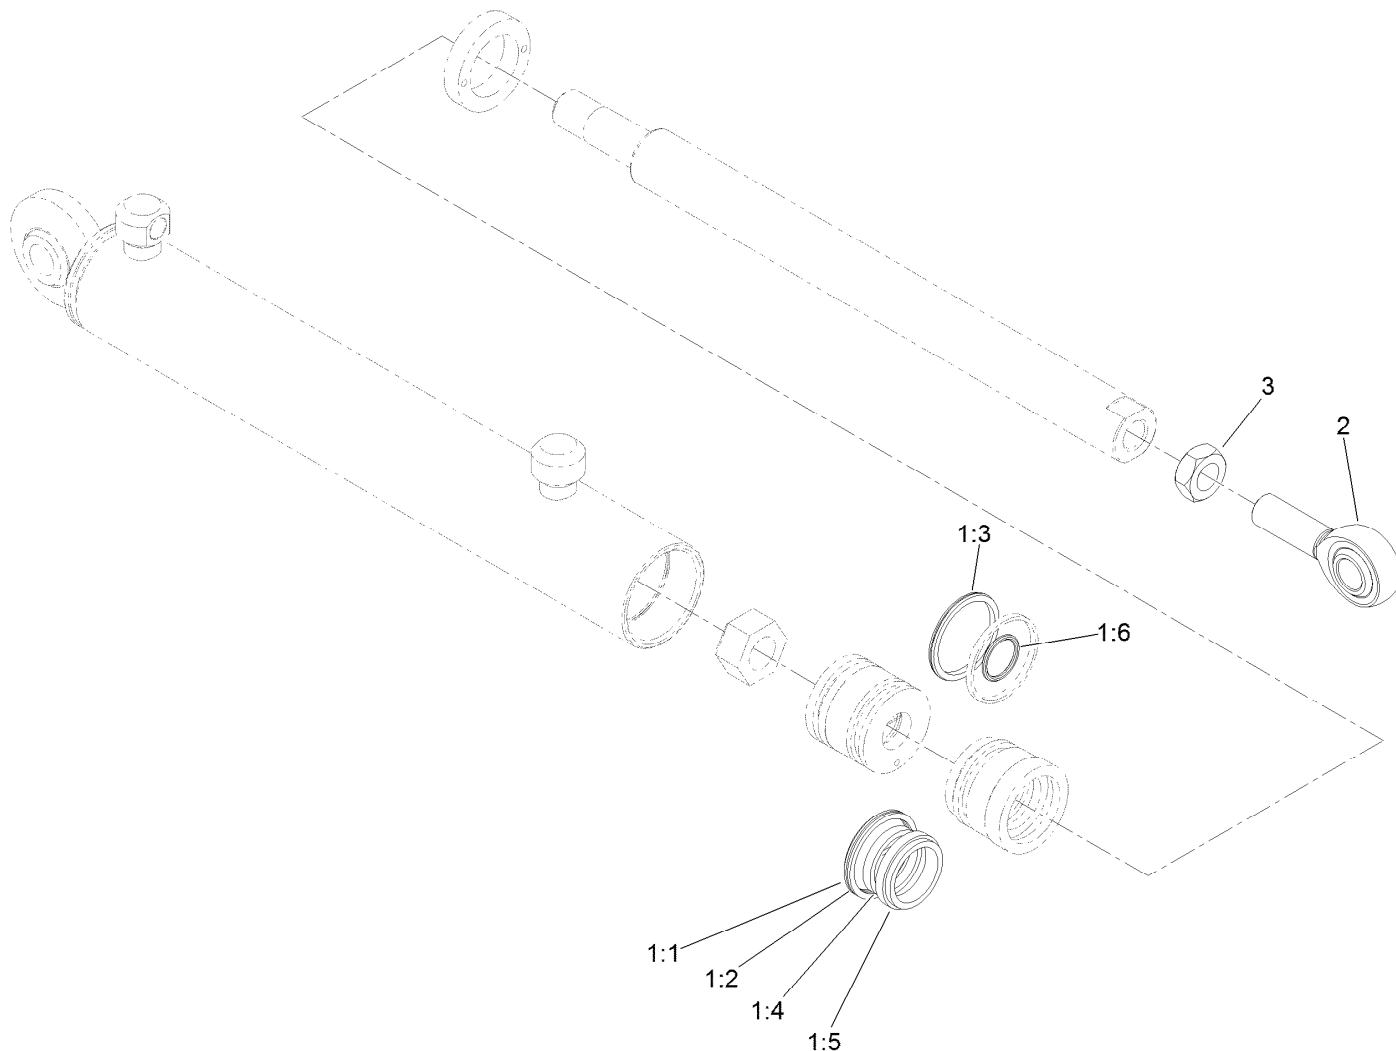


Hydraulic Cylinder Assembly No. 117-0701

Ref.	Part Number	Qty.	Description
1	119-8026	1	Seal Kit ●
1:1		1	O-Ring ■
1:2		1	Ring-Backup ■
1:3		1	Bp Seal ■
1:4		1	Bs Seal ■
1:5		1	Dust Seal ■
1:6		1	O-Ring ■
2	119-8027	1	Rod End
3	3220-6	1	Nut-Jam

● Not illustrated


■ Not serviced separately

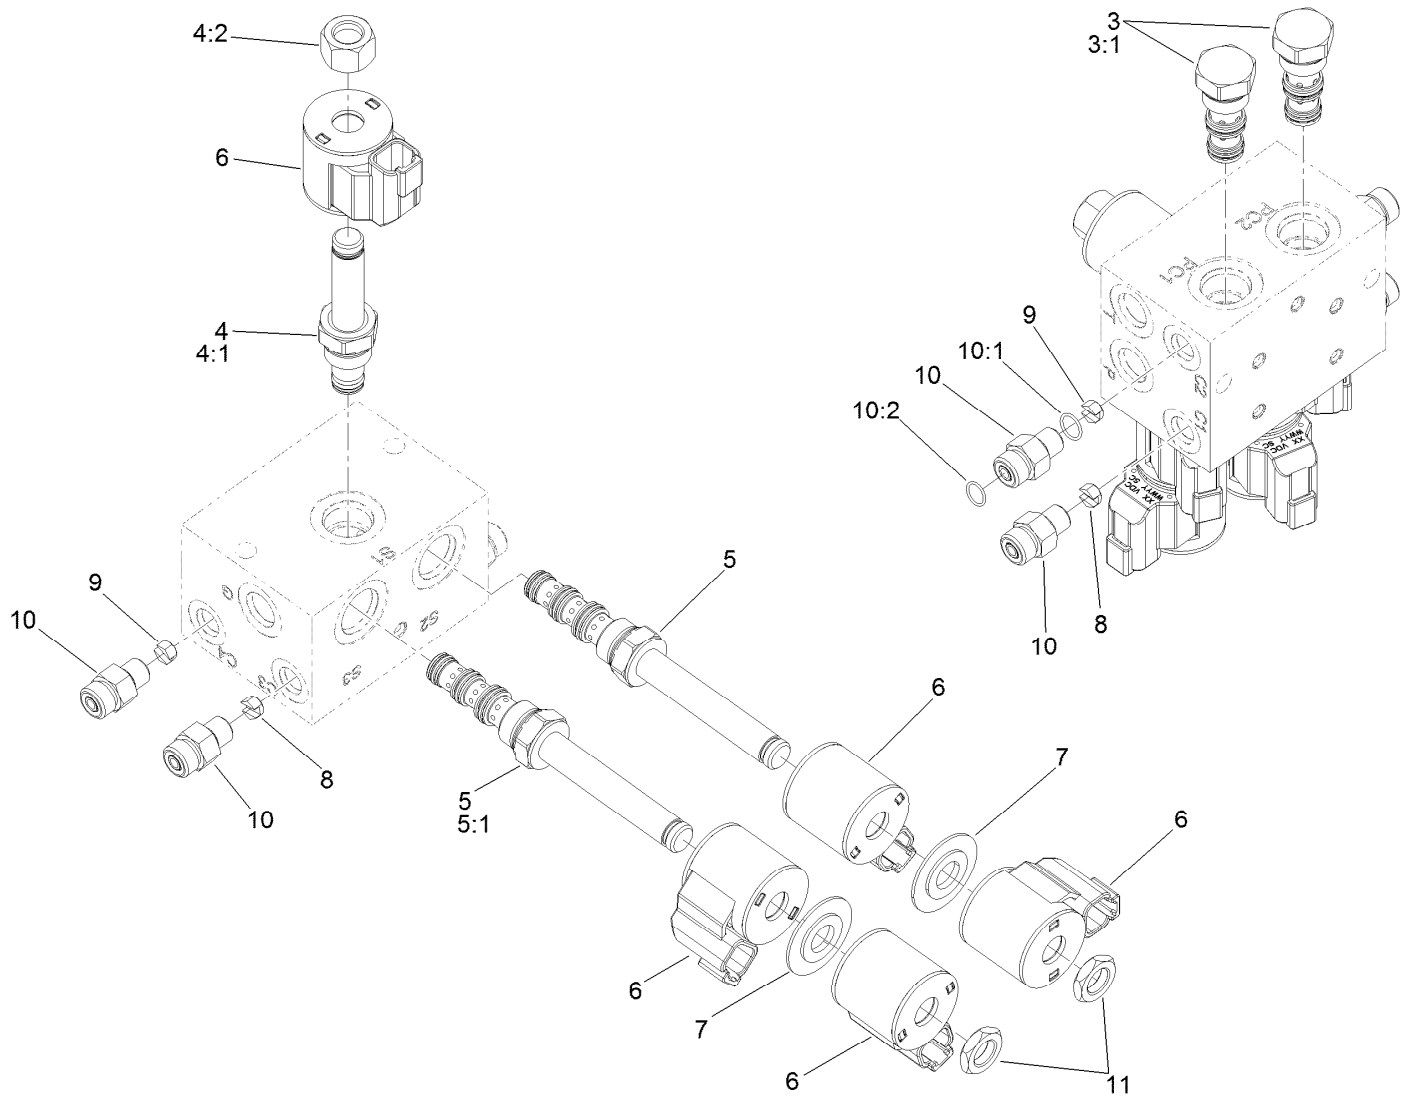

On-Off Boom Lift Valve Assembly No. 136-2400

Ref.	Part Number	Qty.	Description
3	136-2430	2	Valve-Check, Po
3:1	120-0886	1	Seal Kit
4	107-7517	1	Valve-Solenoid
4:1	105-9156	1	Seal Kit
4:2	107-7812	1	Nut-Solenoid
5	120-2587	2	Valve-Solenoid
5:1	112-6520	1	Seal Kit ●
6	119-8036	5	Coil
7	120-2586	2	Spacer-Coil
8	110-8903	2	Orifice-Control, Flow (0.055)
9	125-8849	2	Orifice-Flow Control
10	340-92	4	Fitting-Straight
10:1	237-78	1	O-Ring
10:2	237-21	1	O-Ring
11	110-2634	2	Nut-Coil


● Not illustrated

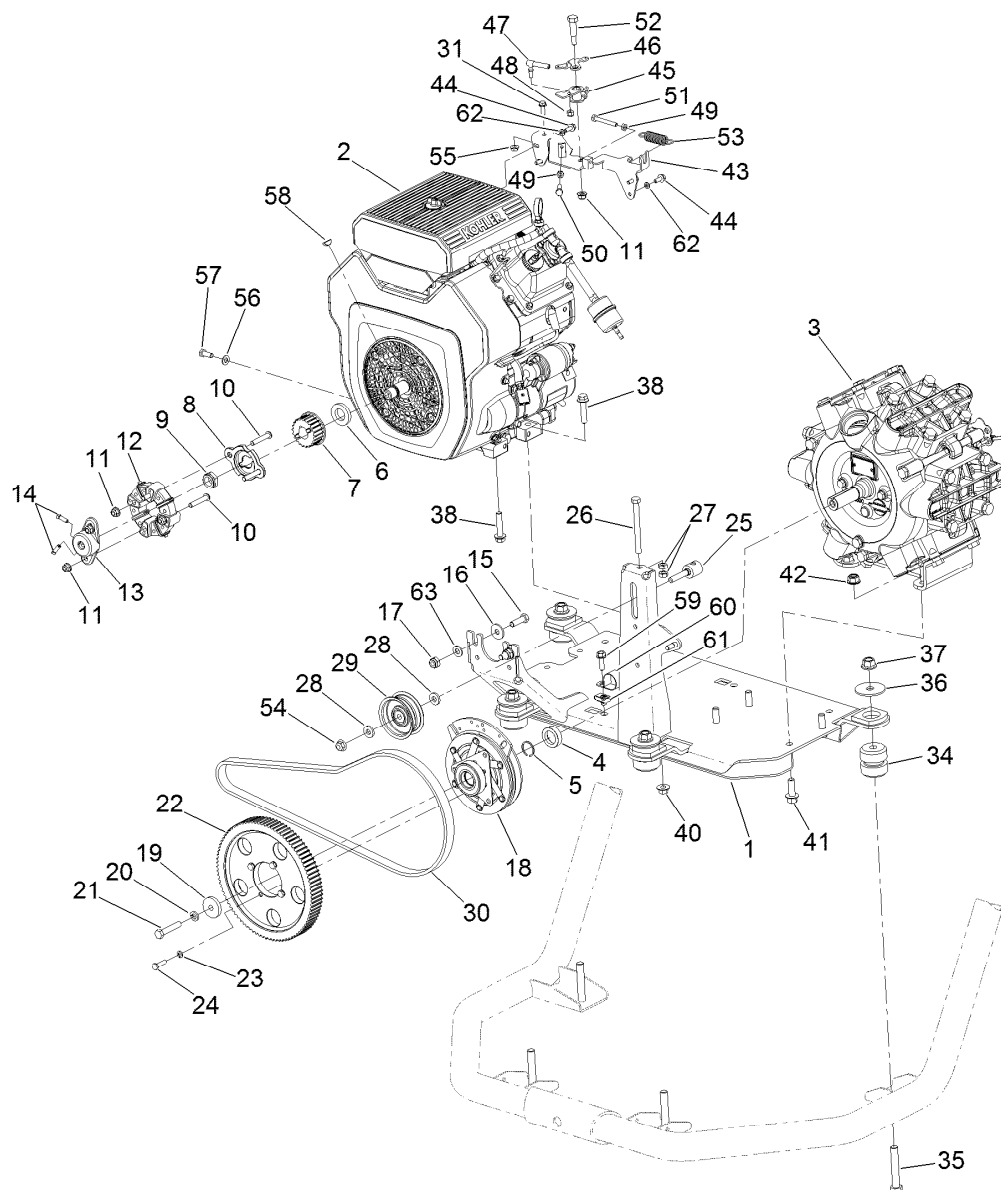

Engine Mounting Assembly

Ref.	Part Number	Qty.	Description
1	121-6511-03	1	Mount-Engine
2	164-1035	1	Engine-Rehlko ●
3	137-4231	1	Pump ASM
4	108-3301	1	Retainer-Spacer
5	108-3302	1	Ring-Snap
6	104-1105	1	Spacer-Support, Deck
7	125-8017	1	Sprocket-22 Tooth
8	125-4092	1	Adaptor-Sprocket, Flanged
9	3296-15	1	Nut-Lock, NI
10	125-7977	4	Screw-HSBH
11	104-8300	5	Nut-HF, NI
12	119-0652	1	Coupler-Rubber
13	115-2169	1	Hub-Pump
14	3241-6	2	Screw-SQH
15	323-7	2	Screw-HH
16	52-2861	2	Washer
17	3296-44	2	Nut-Lock, NI
18	120-7625	1	Clutch-Electric


Ref.	Part Number	Qty.	Description
19	125-0604	1	Spacer-Clutch
20	3253-5	1	Washer-Lock
21	3211-46	1	Screw-HH
22	125-7982	1	Sprocket-90 Tooth
23	3253-3	4	Washer-Lock
24	321-6	4	Screw-HH
25	125-0605	1	Shaft-Idler
26	107-4026	1	Screw-HH
27	3217-7	2	Nut-Hex
28	43-0940	2	Spacer
29	1-633167	1	Sheave-Idler
30	125-0765	1	Belt-Synchronous
31	115-5103	1	Screw-HHF
34	106-7865	4	Mount-Engine
35	325-12	4	Screw-HH
36	41985	4	Washer-Special
37	99-5107	4	Nut-HF Nylock
38	3234-19	4	Screw-HHF

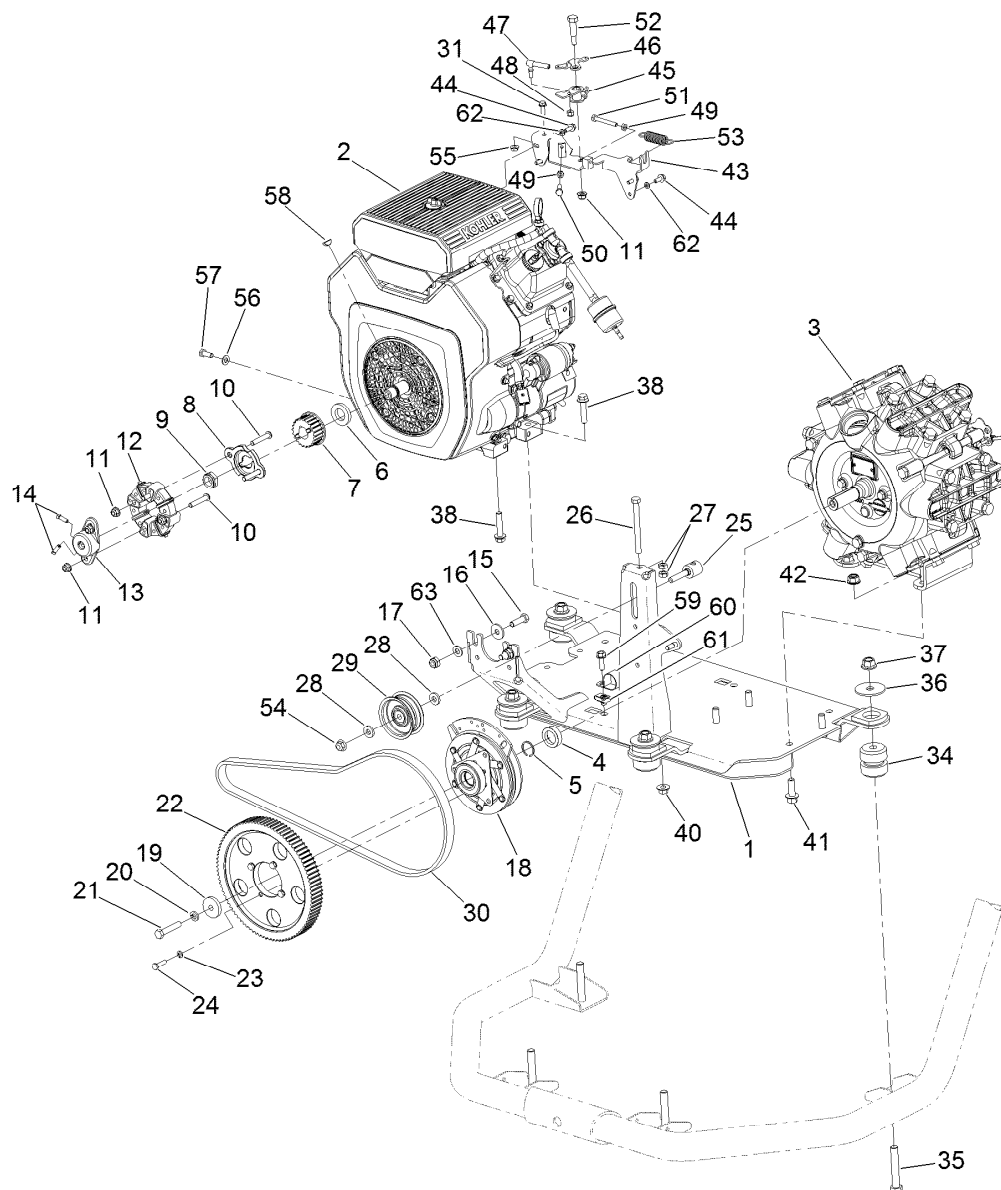 

Engine Mounting Assembly (continued)

Ref.	Part Number	Qty.	Description
40	32128-43	4	Nut-Flange
41	3234-15	4	Screw-HHF
42	114-8417	4	Nut-HF, NI
43	87-7780	1	Bracket-Throttle
44	33103-016	4	Screw-HHF
45	87-7800	1	Lever-Throttle
46	87-7790	1	Lever-Choke
47	18-1720	1	Ball Joint
48	3296-3	1	Nut-Lock
49	3220-1	2	Nut-Jam
50	329-6	1	Screw-HH
51	108-3660	1	Screw-TAP


Ref.	Part Number	Qty.	Description
52	7-0030	1	Screw-Shoulder, HH
53	67-1450	1	Spring-Idler
54	104-8301	1	Nut-HF, NI
55	32128-33	1	Nut-HF
56	3256-23	1	Washer-Plain
57	33114-020	1	Screw-HH
58	3257-5	1	Key-Woodruff
59	3234-17	1	Screw-HHF
60	2412-126	1	R-Clamp
61	115-7721	1	Nut-Clip, U
62	48-8020	4	Washer-Spring
63	3256-24	2	Washer-Plain

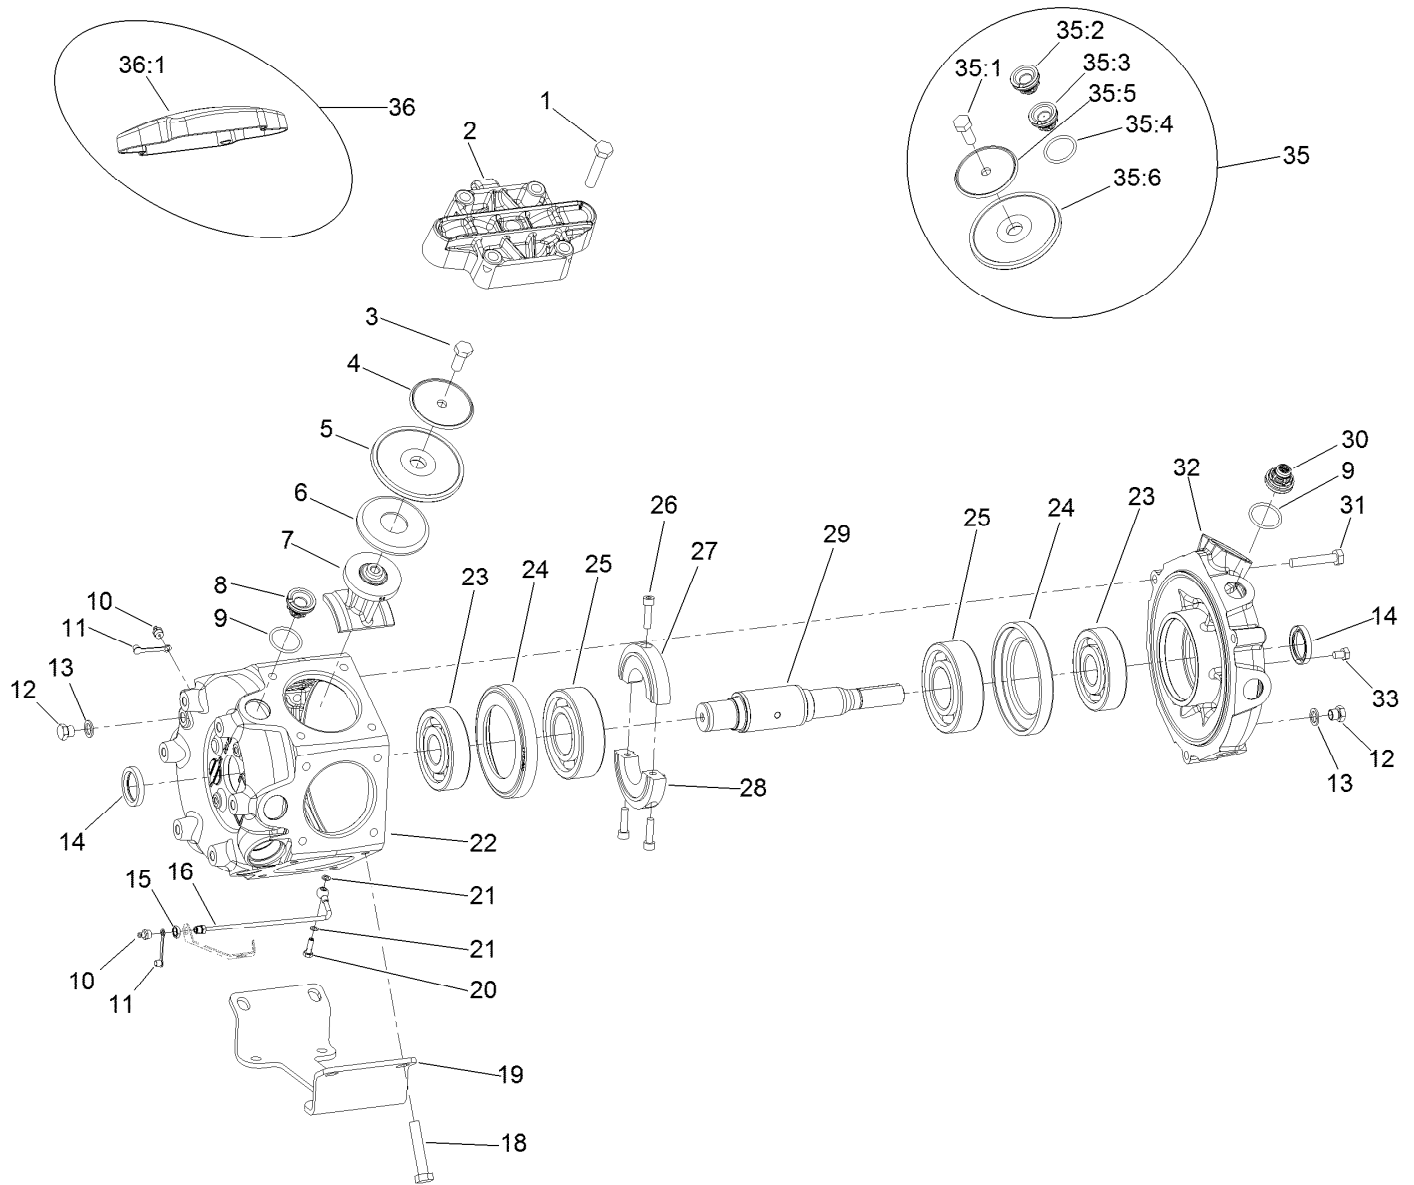 

Pump Assembly No. 137-4231

Ref.	Part Number	Qty.	Description
1	120-0773	20	Bolt-Hex
2	133-2824	6	Cover-Pump, Hardened
3	120-0777	6	Bolt-Hex
4	120-0778	6	Disc-Diaphragm
5	120-0779	6	Diaphragm
6	120-0780	6	Disc-Backing, Diaphragm
7	125-8141	6	Rod-Connectiing
8	99-0861	10	Valve-Pump
9	100-6651	12	O-Ring
10	133-2879	2	Nipple-Grease
11	133-2880	2	Cap-Grease Nipple, Yellow
12	120-0785	2	Plug
13	120-0786	2	Seal
14	120-0783	2	Seal-Oil
15	133-2878	1	Nut
16	133-2877	1	Tube-Banjo, Long
18	120-0774	4	Bolt-Hex
19	120-0787	1	Foot-Pump
20	133-2830	1	Bolt-Banjo
21	136-2251	2	Gasket
22	133-2821	1	Housing-Pump, Main


Ref.	Part Number	Qty.	Description
23	120-0788	2	Bearing-Ball
24	133-2820	2	Spacer-Metal
25	120-0791	2	Bearing-Ball
26	125-8146	3	Bolt-Allen
27	133-2828	1	Counter Weight
28	133-2829	1	Counter Weight
29	133-2826	1	Shaft - Crank
30	120-0793	2	Valve W/Hole
31	120-0794	3	Bolt-Hex
32	133-2822	1	Housing-Pump, Front
33	120-0784	4	Bolt-Hex
35	120-0796	1	Pump Kit
35:1	120-0777	6	Bolt-Hex
35:2	99-0861	10	Valve-Pump
35:3	120-0793	2	Valve W/Hole
35:4	100-6651	12	O-Ring
35:5	120-0778	6	Disc-Diaphragm
35:6	120-0779	6	Diaphragm
36	133-2898	1	Pump Head Kit
36:1	133-2824	6	Cover-Pump, Hardened

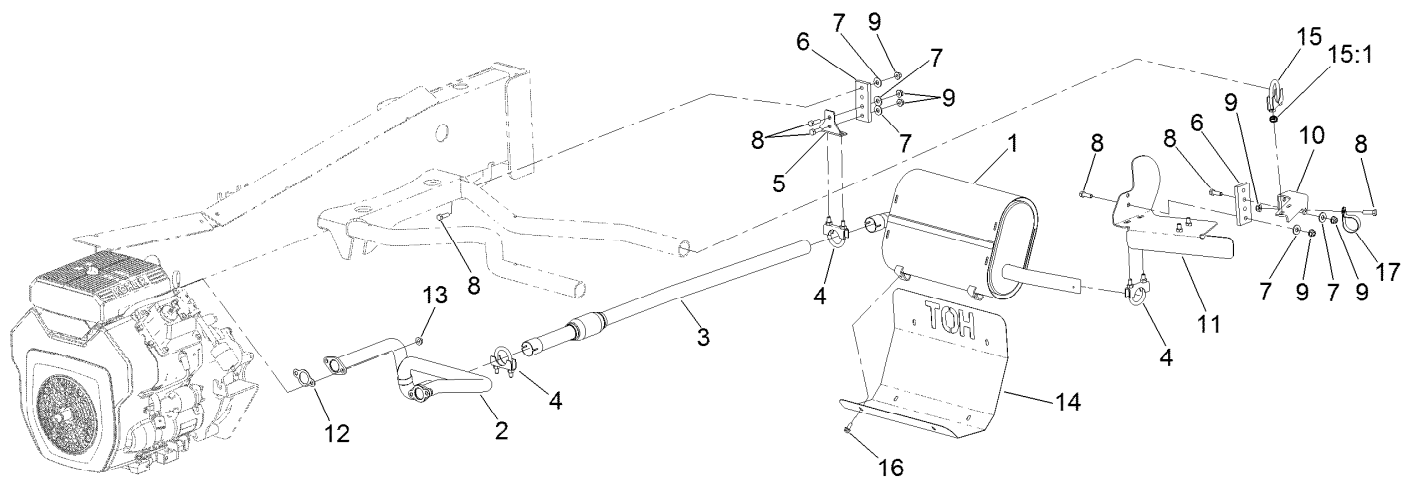

Exhaust Assembly

Ref.	Part Number	Qty.	Description
1	127-9736	1	Muffler-Venturi
2	127-9734	1	Manifold-Exhaust
3	127-9735	1	Pipe-Exhaust
4	2112-11	4	Clamp-Muffler
5	130-7101	1	Bracket-Hanger, Tailpipe
6	117-0744	2	Hanger-Muffler
7	3256-3	7	Washer-Flat
8	322-5	8	Screw-HH
9	104-8300	8	Nut-HF, NI


Ref.	Part Number	Qty.	Description
10	131-3286-03	1	Mount-Muffler
11	130-7143	1	Shield-Muffler
12	110-6697	2	Gasket-Exhaust
13	92-6780	4	Nut-HF
14	127-9787	1	Shield-Heat, Muffler
15	2112-9	1	Clamp
15:1	32128-20	2	Nut-HF
16	3234-13	6	Screw-HHF
17	2412-74	1	R-Clamp

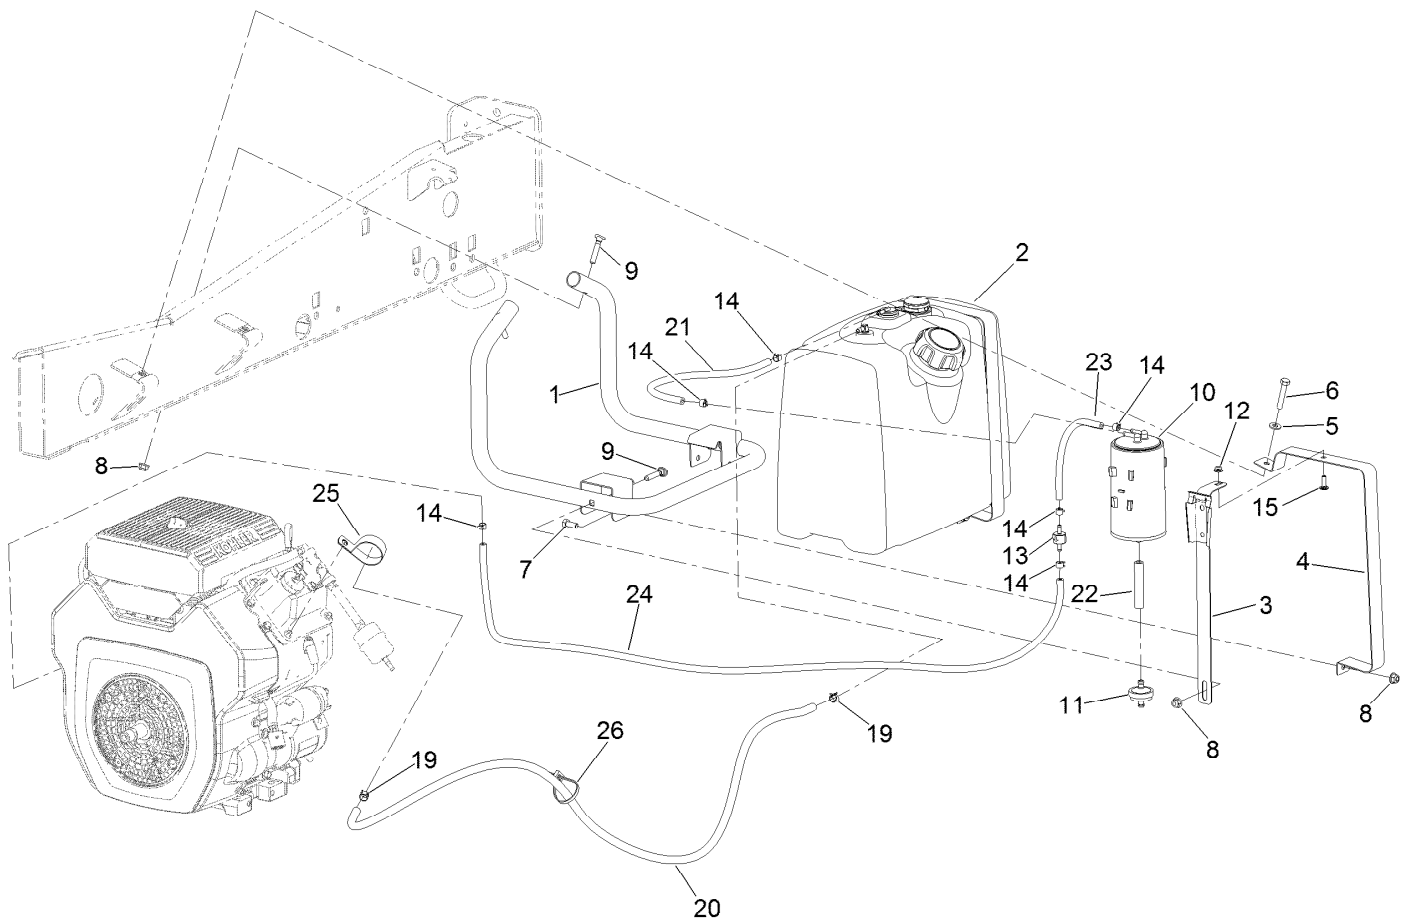 

Fuel Tank, Filter and Line Assembly


Ref.	Part Number	Qty.	Description
1	125-0850-03	1	Tube-Mount, Fuel Tank
2	115-9048	1	Fuel Tank ASM
3	125-8129-03	1	Strap-Cannister, Carbon
4	125-0853	2	Strap-Fuel Tank
5	33094-00	2	Washer-Plain
6	322-41	2	Bolt-Hex,TAP
7	322-3	2	Screw-HH
8	104-8300	5	Nut-HF, NI
9	17-9420	3	Screw-Handle
10	127-8685	1	Canister-Carbon
11	115-7854	1	Filter-Fuel, Inline
12	104-7201	1	Nut-HF, NI

Ref.	Part Number	Qty.	Description
13	133-8499	1	Valve-Check, Vacuum
14	2412-80	6	Clamp-Hose
15	1-807512	1	Bolt-CARR
19	2412-98	2	Clamp-Hose
20	110-3372	1	Hose-Fuel
21	112-7048	1	Hose-Fuel
22	110-0047	1	Hose-Fuel
23	115-7871	1	Hose-Fuel
24	119-6073	1	Hose-Fuel
25	2412-147	1	Clamp-R
26	3290-378	1	Tie-Cable

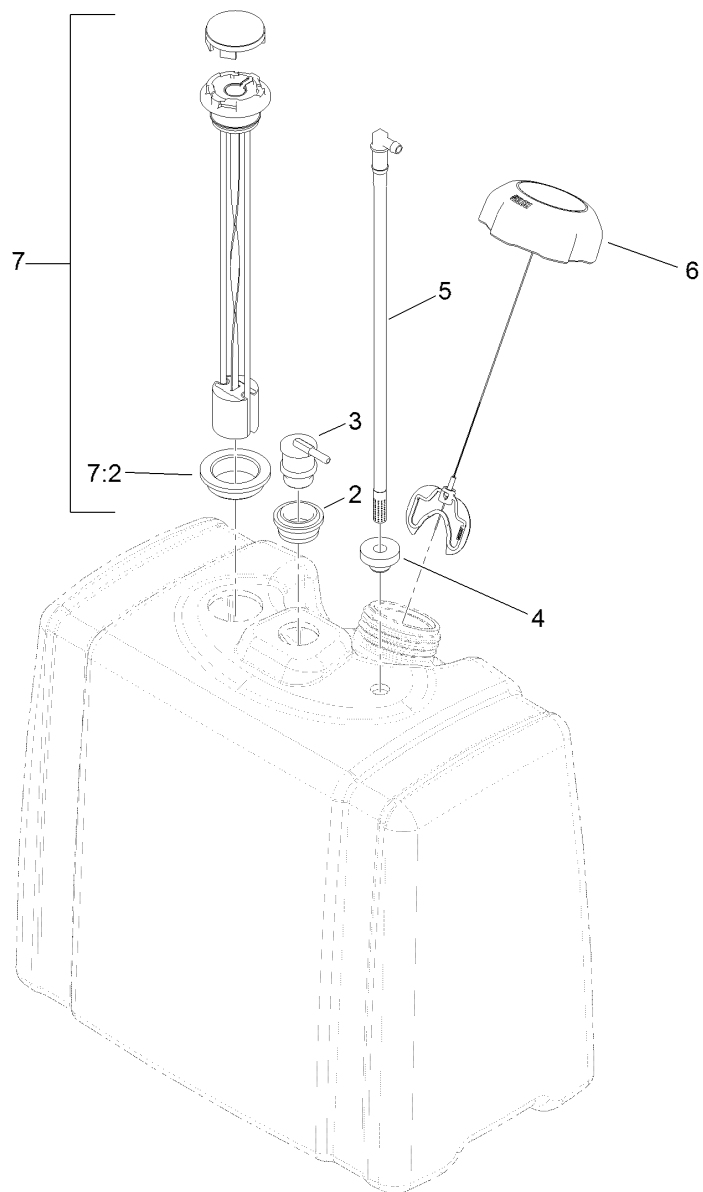


Fuel Tank Assembly No. 115-9048

Ref.	Part Number	Qty.	Description
2	114-0284	1	Grommet
3	114-0285	1	Valve-Rollover
4	46-6560	1	Bushing
5	115-9044	1	Pipe-Stand
6	137-4127	1	Cap-Fuel
7	119-0509	1	Gauge ASM
7:2	119-0508	1	Seal

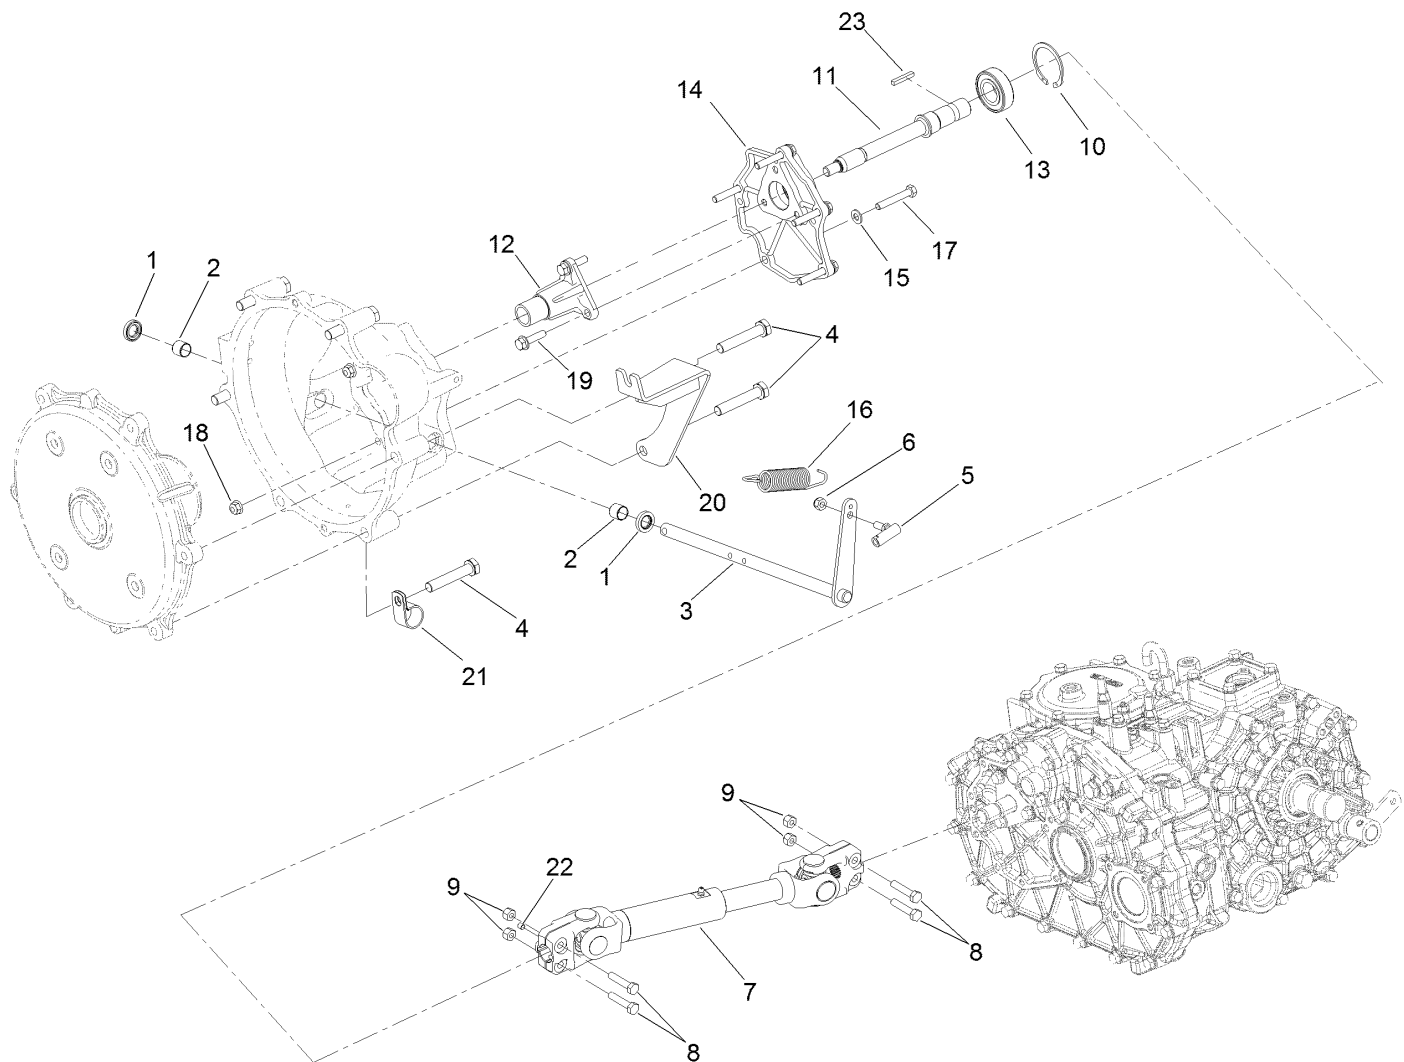 


Driveshaft Connection Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	87-1920	2	Seal-Oil	13	251-82	1	Bearing-Ball
2	87-3770	2	Bushing-Housing, Bell	14	125-0820	1	Cover-Bearing Support
3	115-2311	1	Lever-Clutch	15	3256-23	5	Washer-Plain
4	107-7983	6	Screw-HH	16	68-9950	1	Spring-Traction
5	2411-33	1	Balljoint-RH (W/Grommet)	17	322-10	5	Screw-HH
6	3296-4	1	Nut-Lock	18	104-8300	5	Nut-HF, NI
7	119-6040	1	Driveshaft ASM	19	119-4036	3	Screw-HHF
8	322-8	4	Screw-HH	20	125-8063-0P	1	Bracket ASM - Clutch Cable
9	3296-29	4	Nut-Lock, NI	21	2412-82	1	Clamp-R
10	32151-71	1	Ring-Retaining, Internal	22	3245-32	1	Screw-HSH
11	125-0797	1	Shaft-Output	23	92-0049	1	Key-Square
12	87-5320	1	Release-Guide				

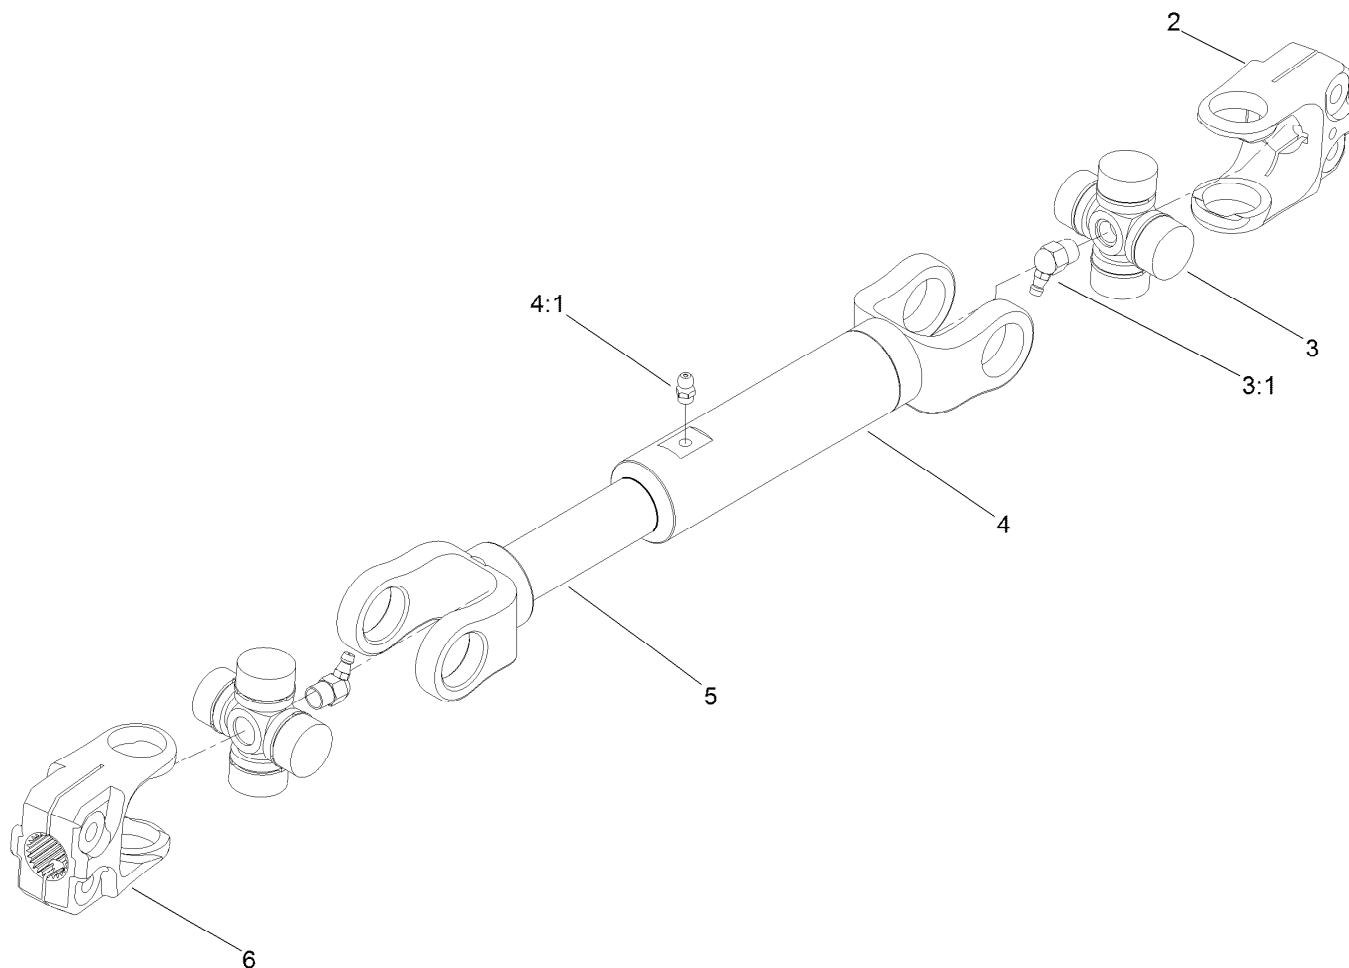

Driveshaft Assembly No. 119-6040


Ref.	Part Number	Qty.	Description
2	100-8633	1	Yoke-Keyed
3	54-9180	2	U-Joint Kit
3:1	62-3820	1	Fitting-Grease
4	110-4706	1	Tube-Yoke, Slip
4:1	302-58	1	Fitting-Straight
5	110-4705	1	Shaft-Yoke, Slip
6	100-8632	1	Yoke-Splined

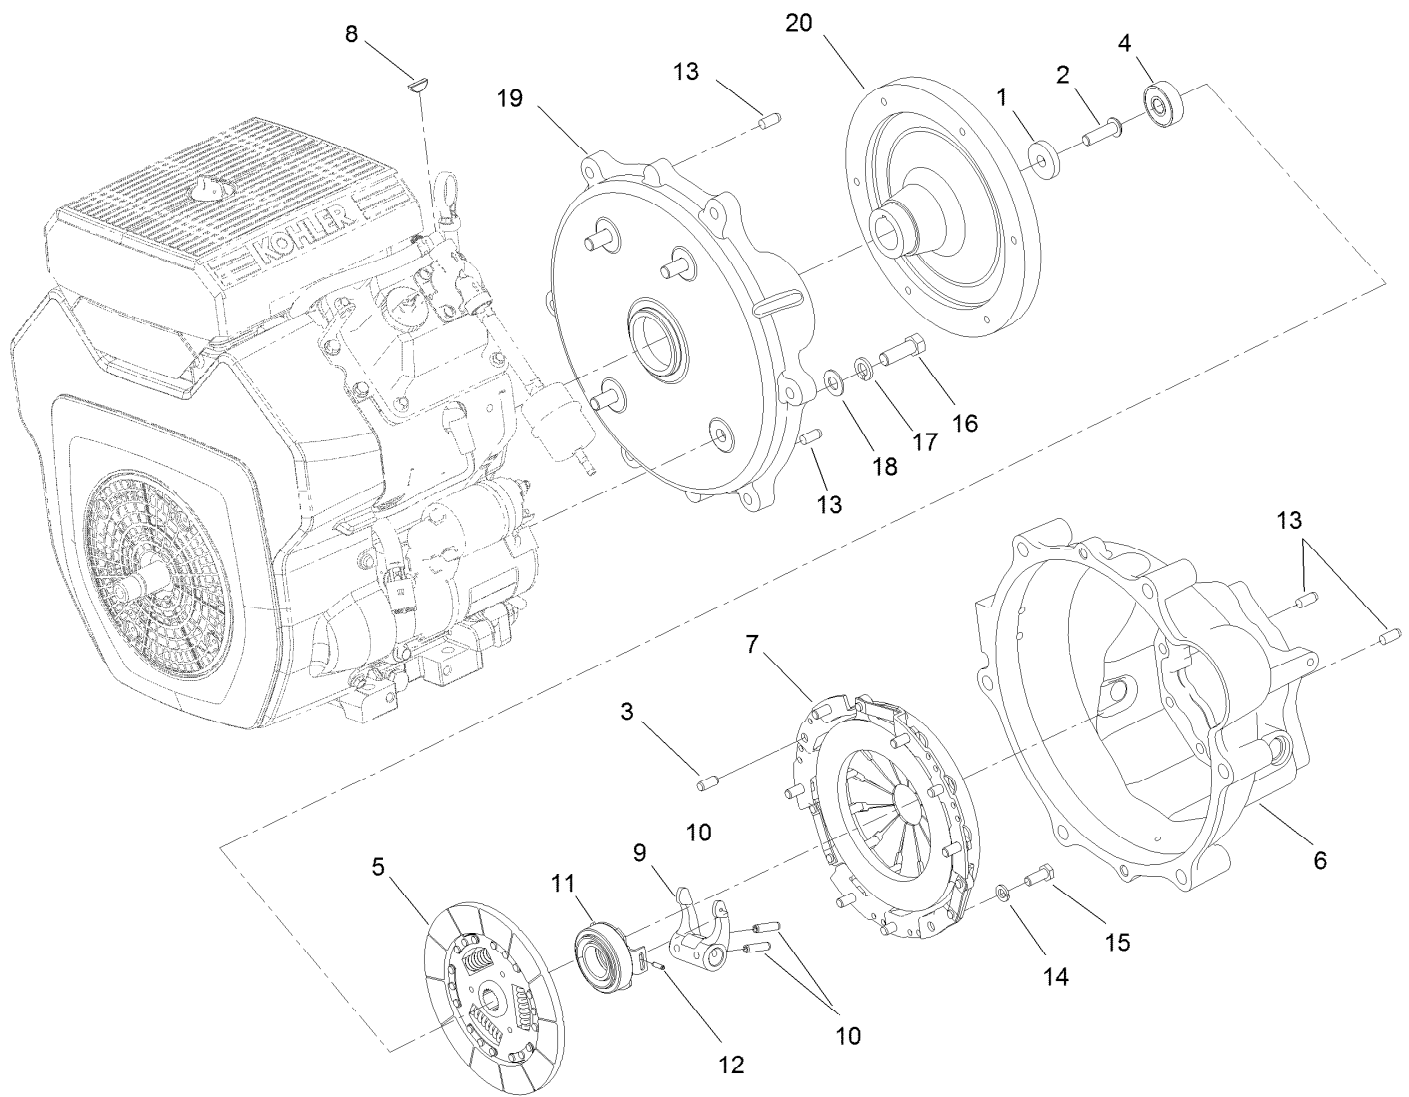 

Clutch and Bell Housing Assembly

Ref.	Part Number	Qty.	Description
1	87-6080	1	Washer
2	3274-63	1	Screw-HSBH
3	42-7160	3	Pin
4	87-6460	1	Bearing-Ball (W/Seal)
5	98-2959	1	Disc-Clutch
6	104-9249	1	Housing-Bell
7	98-2958	1	Cover-Clutch
8	3257-5	1	Key-Woodruff
9	87-5300	1	Fork-Clutch
10	32121-24	2	Pin-Spring


Ref.	Part Number	Qty.	Description
11	110-2538	1	Bearing-Release, Clutch
12	32121-7	1	Pin-Roll, Slotted
13	87-1910	4	Pin-Dowel
14	3253-4	6	Washer-Lock
15	33114-020	6	Screw-HH
16	324-5	4	Screw-HH
17	3253-6	4	Washer-Lock
18	3256-25	4	Washer-Flat
19	107-7991	1	Adapter-Clutch
20	87-6480	1	Flywheel

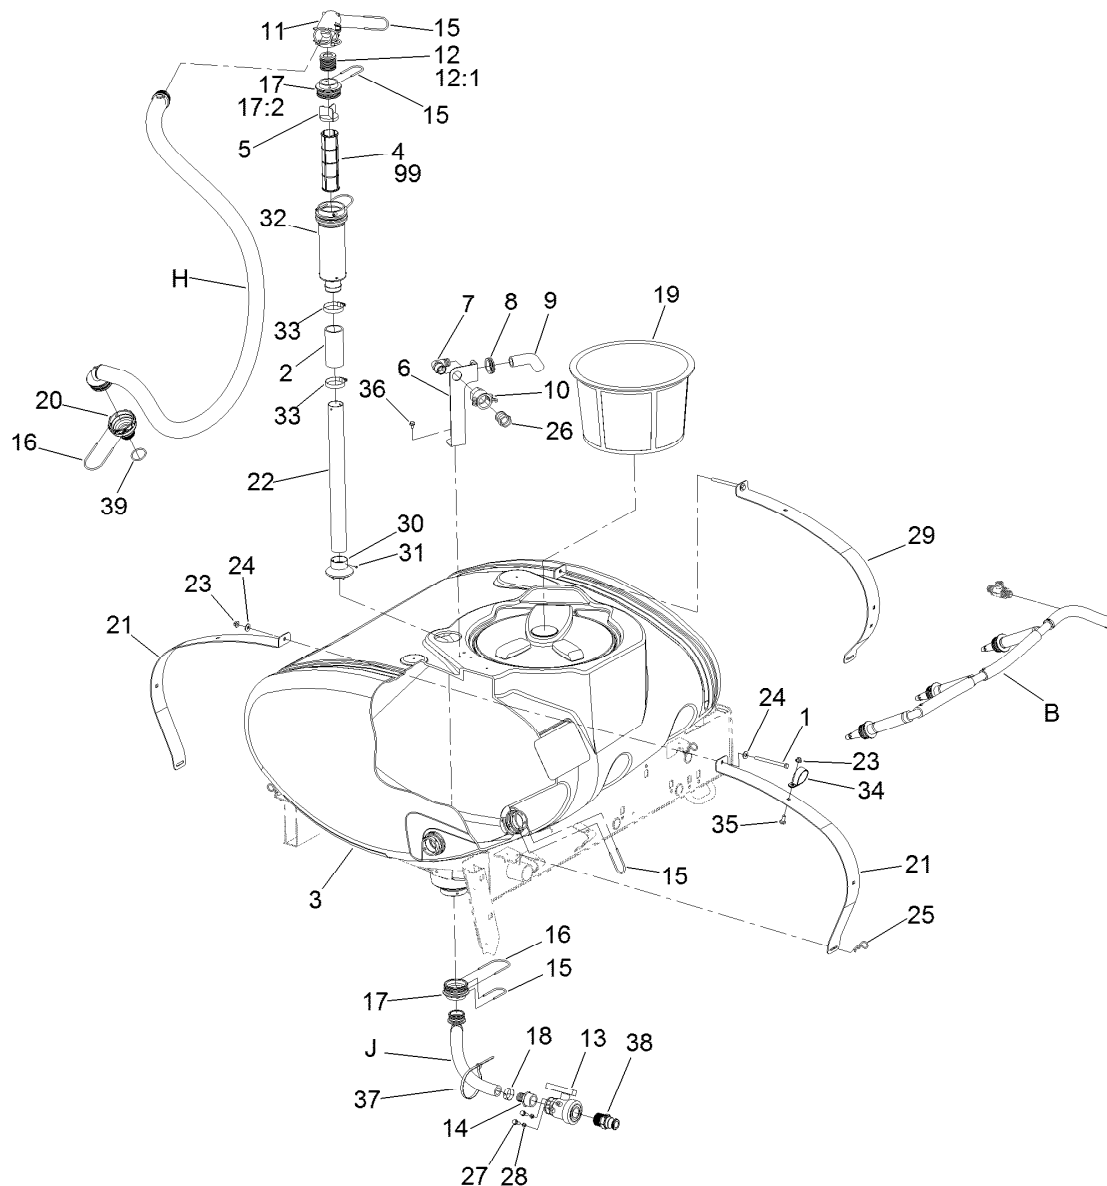 

Spray Tank Assembly

Ref.	Part Number	Qty.	Description
1	323-59	2	Bolt-Cap
2	100-8649	1	Hose-Suction
3	121-6491	1	Tank ASM
4	100-8642	1	Screen-Suction
5	100-8641	1	Vane-Screen
6	110-5082-03	1	Bracket-Anti Siphon
7	41140	1	Elbow
8	110-5090	1	Grommet
9	110-5088	1	Hose-Fill
10	100-6779	1	Coupling-Female
11	100-6704	1	Tee
12	106-4947	1	Connector
12:1	100-8637	2	O-Ring
13	108-0069	1	Valve-Ball
14	110-5224	1	Fitting-Barbed, Straight
15	100-8635	8	Fork
16	117-7996	2	Fork
17	117-7928	2	Adapter ASM
17:2	100-6989	1	O-Ring
18	2412-34	1	Clamp-Hose
19	119-9419	1	Basket-Filter


Ref.	Part Number	Qty.	Description
20	133-2883	1	Fitting
21	121-6477-03	2	Band-Tank
22	125-7997	1	Tube-Suction
23	104-8301	3	Nut-HF, NI
24	3256-4	4	Washer-Flat
25	3290-343	4	Pin-Hair
26	41316	1	Adapter-Quick
27	3234-29	2	Screw-HHF
28	3296-47	2	Nut-Lock,NI
29	125-0987-03	2	Band-Tank, Rear
30	100-6714	1	Foot-Tube, Suction
31	108-3270	1	Screw-TAP
32	130-7096	1	Filter ASM
33	2412-130	2	Clamp-Hose
34	114-9566	1	Clamp-R
35	3231-2	1	Bolt-CARR
36	3234-30	1	Screw-HHF
37	1-809066	1	Cable Tie-Plastic
38	132-7787	1	Coupler-Quick
39	133-2884	1	O-Ring
99	133-0385	2	Screen-Teejet, 50 Mesh

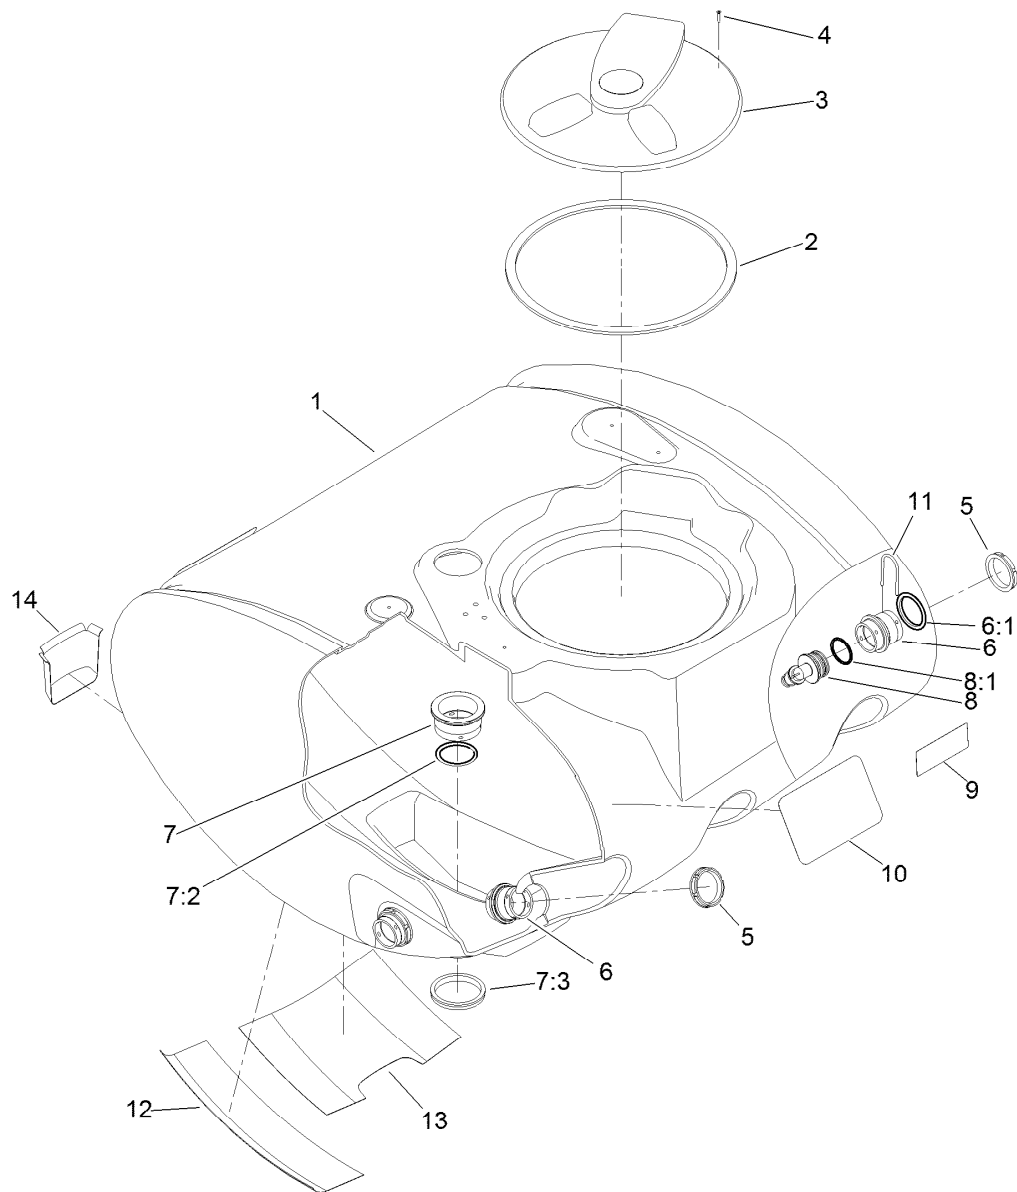 

Tank Assembly No. 121-6491


Ref.	Part Number	Qty.	Description
1	121-6490	1	Tank-175 Gallon
2	119-9378	1	Gasket-Lid, Tank
3	138-6283	1	Lid ASM - Sprayer Tank
4	107-8635	8	Screw-PFH
5	100-7051	4	Nut-Bulkhead
6	108-3358	5	Fitting-Bulkhead
6:1	107-2864	1	Gasket-Bulkhead
7	117-7851	1	Bulkhead ASM
7:2	100-8646	1	Gasket-Bulkhead

Ref.	Part Number	Qty.	Description
7:3	100-8647	1	Nut-Bulkhead
8	106-4933	2	Hosebarb ASM
8:1	100-8637	1	O-Ring
9	120-0622	1	Decal-Warning
10	121-6486	2	Decal-Tank
11	100-8635	2	Fork
12	125-7967	1	Heat Tape-Shield, Front
13	125-7968	1	Heat Tape-Shield, Side
14	125-7969	1	Heat Tape-Shield, Sump

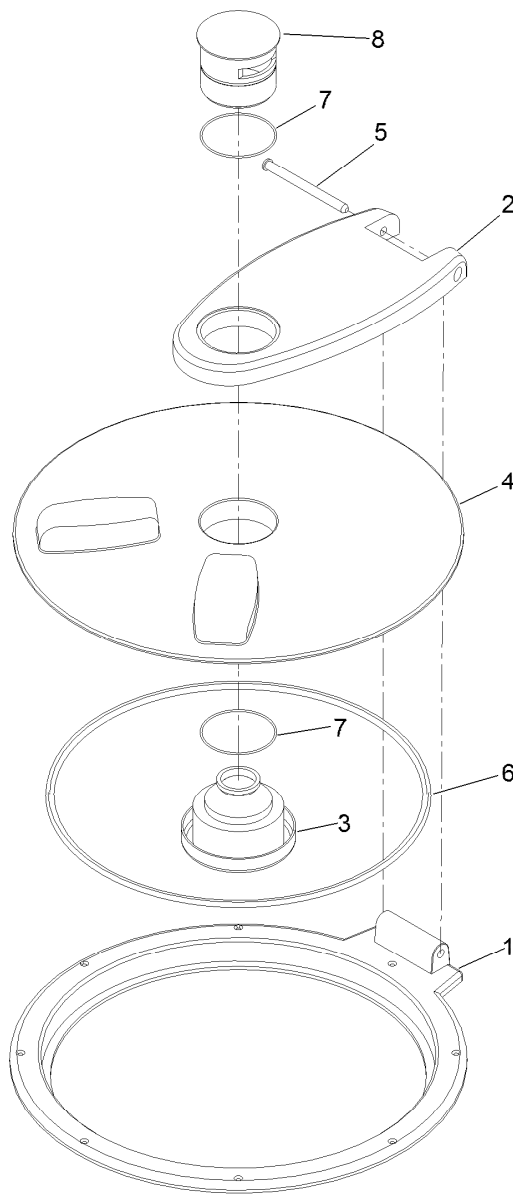 


Spray Tank Lid Assembly No. 138-6283

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-9381	1	Ring-Lid
2	119-9382	1	Arm-Lid
3	119-9383	1	Vent-Lid
4	119-9384	1	Cover-Lid
5	119-9385	1	Pin-Pivot
6	138-6281	1	Seal - Tank Lid
7	119-9386	2	O-Ring
8	119-9387	1	Cap-Lid

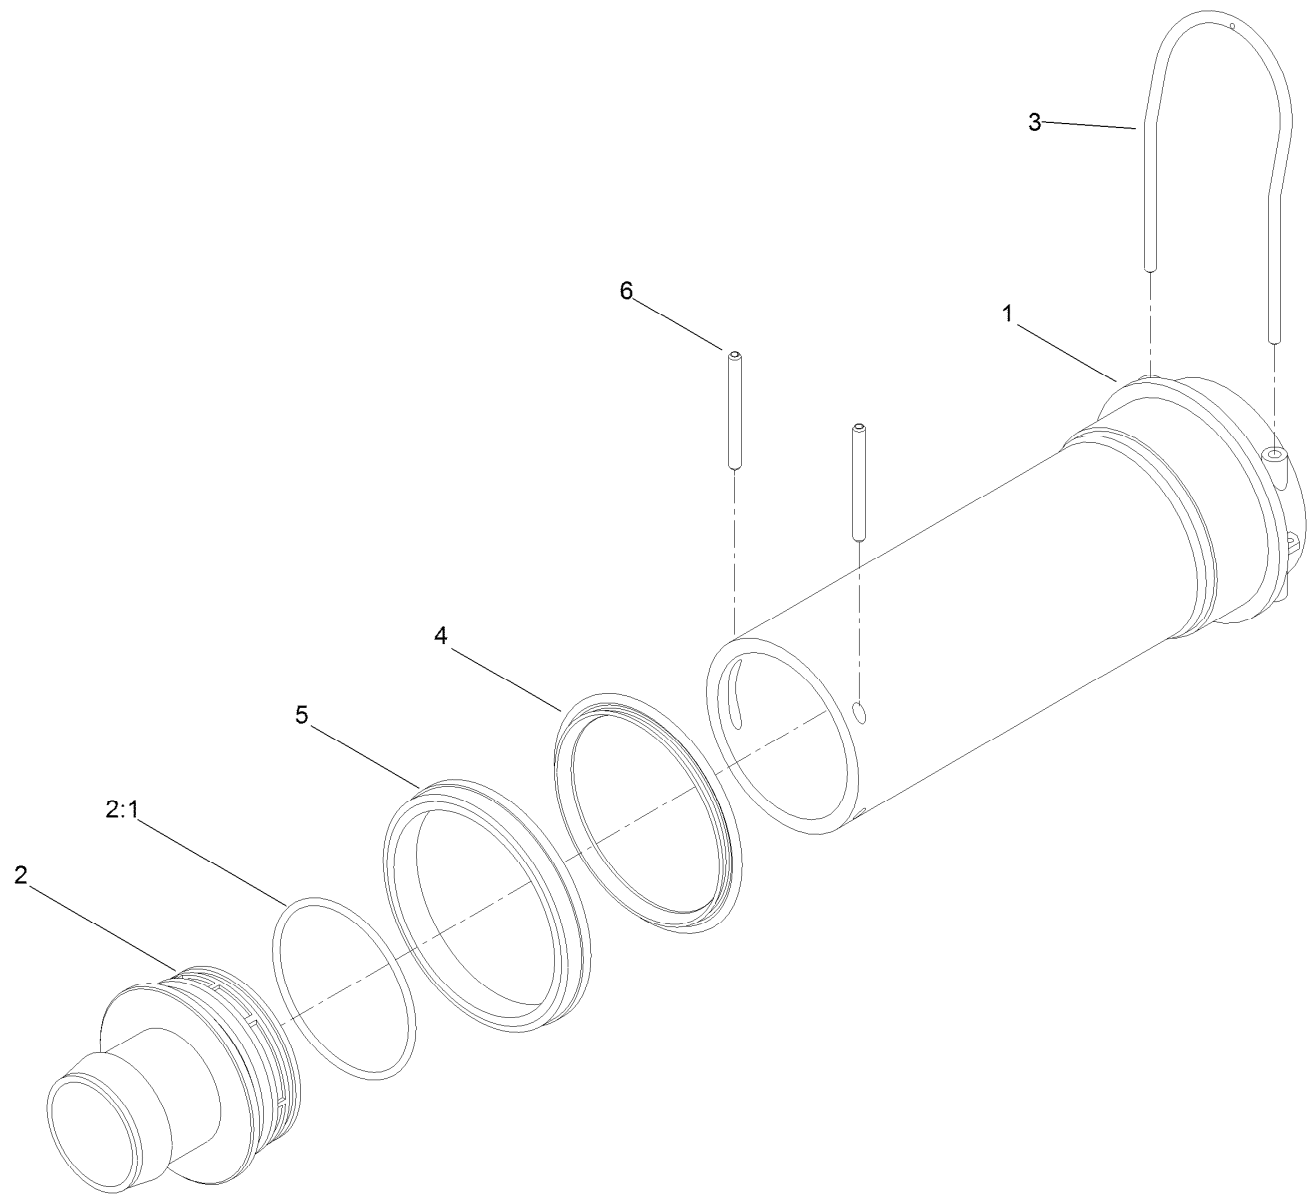 

Filter Assembly No. 130-7096

Ref.	Part Number	Qty.	Description
1	100-8643	1	Housing-Filter
2	106-4942	1	Hosebarb-Straight
2:1	100-6989	1	O-Ring
3	100-8636	1	Fork-Special
4	100-8646	1	Gasket-Bulkhead
5	100-8647	1	Nut-Bulkhead
6	100-8644	2	Pin-Expansion

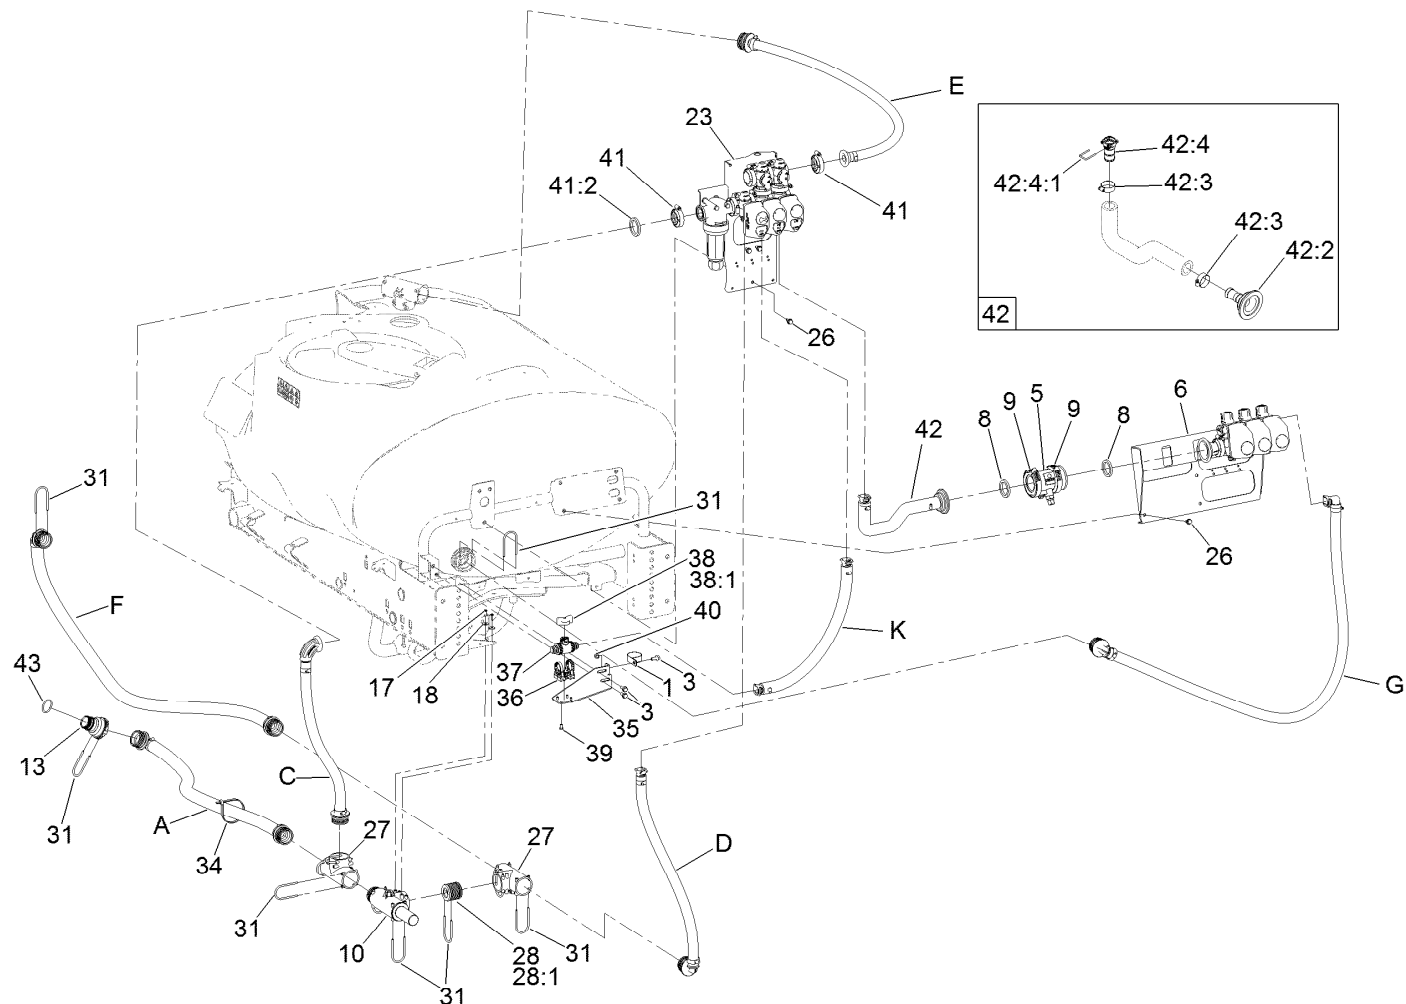 


Spray Tank Valve Assembly

Ref.	Part Number	Qty.	Description
1	2412-147	1	Clamp-R
3	3234-47	3	Screw-HHF
5	138-6128	1	Flow Meter ASM
6		1	Manifold ASM-Section Valve, Mp1750 ●
8	104-9090	2	Gasket
9	104-9089	2	Clamp-Screw, Worm
10	117-7874	1	Relief Valve ASM
13	133-2881	1	Fitting
17	32144-32	2	Screw-PPH
18	3256-61	2	Washer-Flat
23		1	Manifold ASM-Agitation, Mp1750 ●
26	32104-32	7	Screw-HWH
27	100-6704	2	Tee
28	106-4947	1	Connector
28:1	100-8637	2	O-Ring
31	100-8635	12	Fork


Ref.	Part Number	Qty.	Description
34	3334-945	3	Tie-Cable
35	132-4318-03	1	Mount-Bracket, Agitation
36	132-4302	1	Mount-Valve
37	131-0249	1	On/Off 2-Way Valve Kit
38	131-0264	1	Agitation Throttling Handle Kit
38:1	131-0263	1	Screw-Handle
39	33113-012	4	Screw-HH
40	104-8300	1	Nut-HF, NI
41	127-9829	2	Clamp/Gasket Kit
41:2	127-1145	1	Gasket-Flange
42	132-4343	1	Master Hose ASM
42:2	107-8704	1	Hosebarb
42:3	2412-34	2	Clamp-Hose
42:4	127-9806	1	Fitting Kit
42:4:1	133-0398	1	Pin-Fork
43	133-2882	1	O-Ring

 ● Not serviced separately

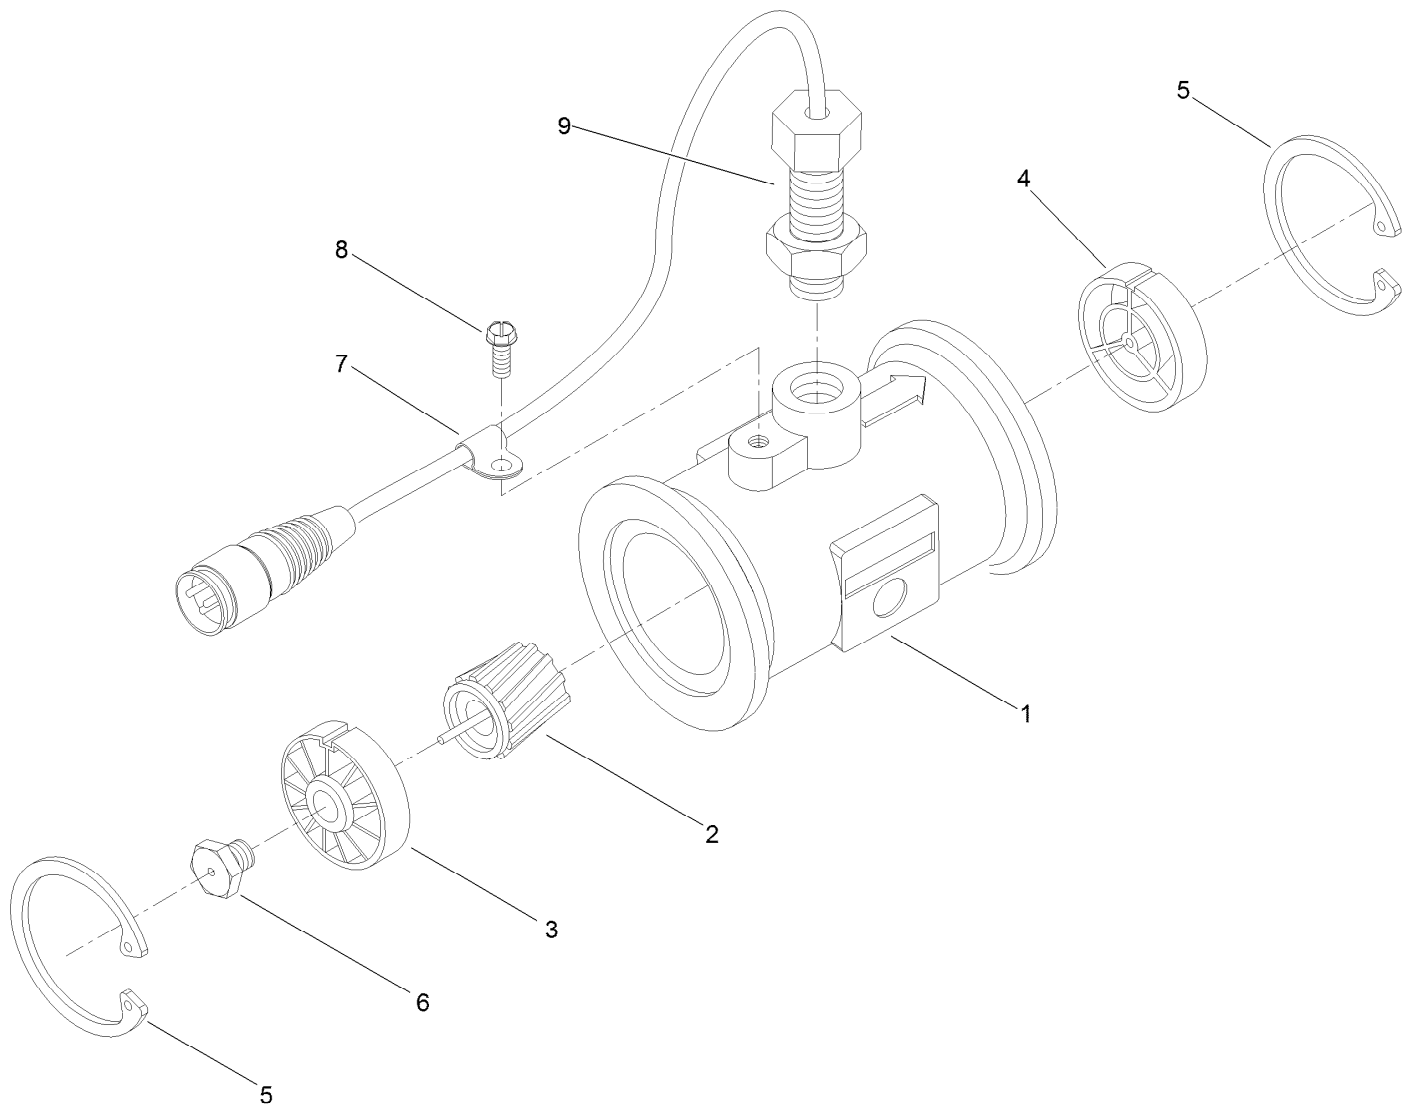


Flow Meter Assembly No. 138-6128

Ref.	Part Number	Qty.	Description
1	106-1042	1	Body-Meter, Flow
2	104-9059	1	Rotor / Magnet ASM
3	104-9060	1	Upstream Hub And Bearing ASM
4	104-9061	1	Downstream Hub ASM
5	104-9062	2	Ring-Retaining, Internal
6	42480	1	Stud-Turbine (W / Bearing)
7	104-9063	1	Clamp-Cable
8	104-9064	1	Screw-HWHTF
9	138-6129	1	Sensor-Meter, Flow

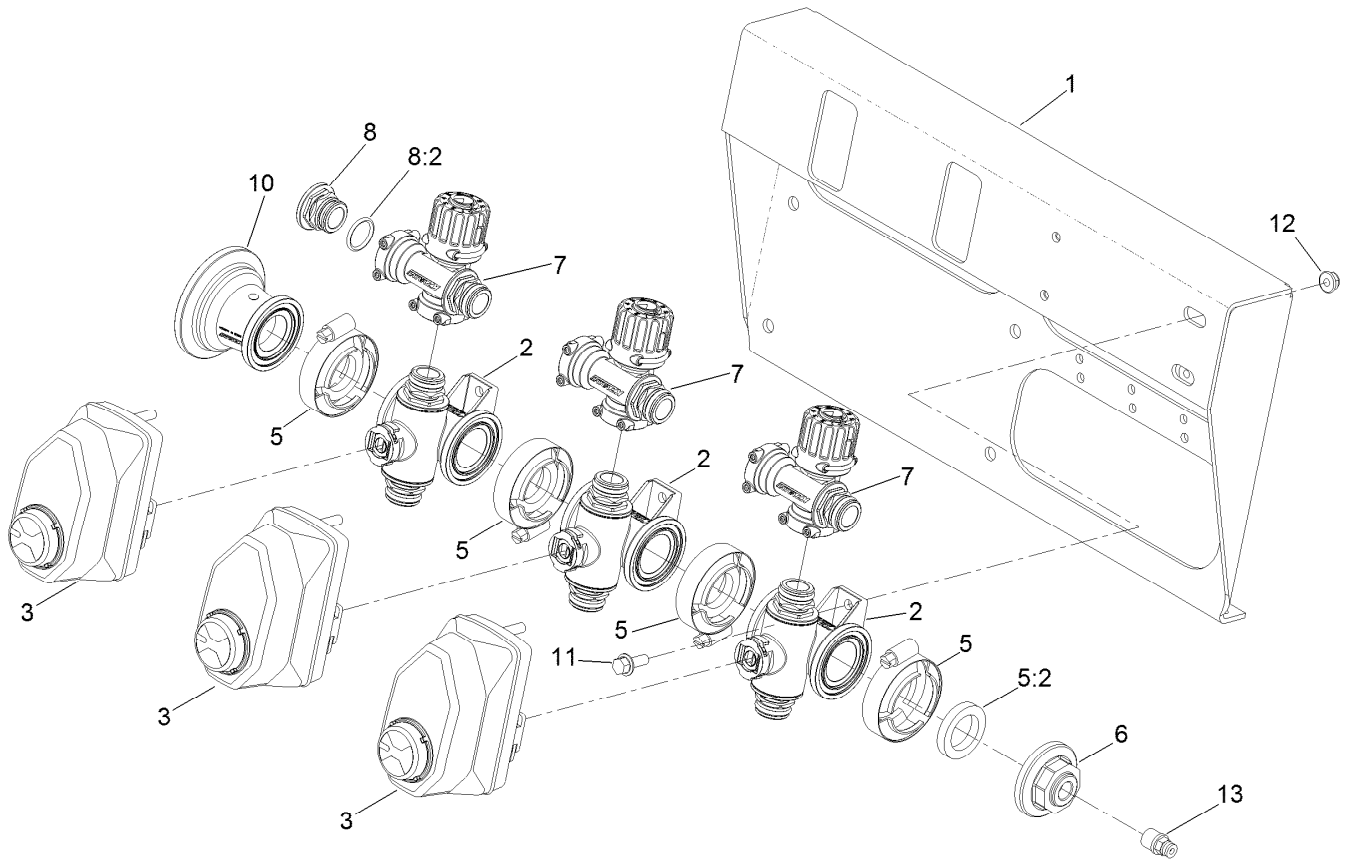 

Section Valve Manifold Assembly

Ref.	Part Number	Qty.	Description
1	131-0240	1	Mount-Valve, Boom
2	127-9803	3	On/Off Manifold Valve Kit
3	131-3723	3	Actuator On/Off Kit
5	127-9829	4	Clamp/Gasket Kit
5:2	127-1145	1	Gasket-Flange
6	127-1185	1	Fitting-Cap, Port
7	127-9805	3	Bypass Valve ASM
8	127-9810	1	Male Cap Fitting Kit
8:2	127-1187	1	O-Ring, Endcap
10	127-1144	1	Fitting-Adapter
11	3234-4	4	Screw-HHF
12	104-7201	4	Nut-HF, NI
13	131-3709	1	Coupler

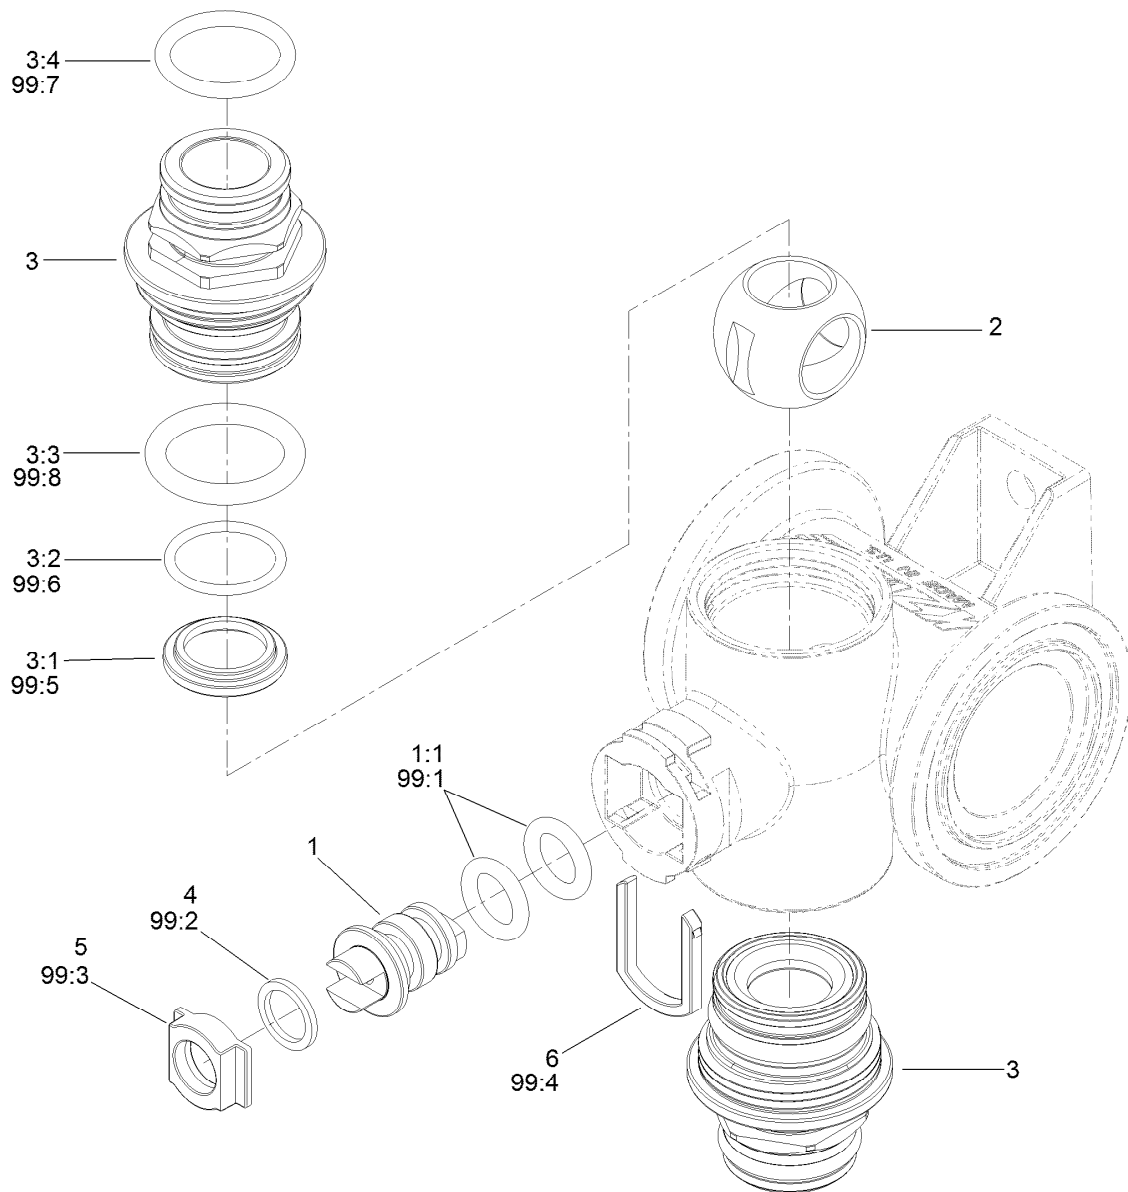 


On/Off Manifold Valve Kit No. 127-9803

Ref.	Part Number	Qty.	Description
1	130-8248	1	Vavle Stem Kit
1:1	127-1197	2	O-Ring-Stem
2	127-1194	1	Ball-Valve, 3Way
3	130-7317	2	Endcap Kit
3:1	127-1192	1	Seat-Ball
3:2	127-1188	1	O-Ring, Seat (Ball)
3:3	127-1189	1	O-Ring, Endcap
3:4	127-1187	1	O-Ring, Endcap
4	127-1196	1	Washer-Stem, Valve
5	127-1195	1	Seat-Stem, Valve


Ref.	Part Number	Qty.	Description
6	127-1190	1	Fork-Stem, Valve
99	130-7304	1	Valve Repair Kit ●
99:1	127-1197	2	O-Ring-Stem
99:2	127-1196	2	Washer-Stem, Valve
99:3	127-1195	1	Seat-Stem, Valve
99:4	127-1190	1	Fork-Stem, Valve
99:5	127-1192	2	Seat-Ball
99:6	127-1188	2	O-Ring, Seat (Ball)
99:7	127-1187	2	O-Ring, Endcap
99:8	127-1189	2	O-Ring, Endcap

 ● Not illustrated

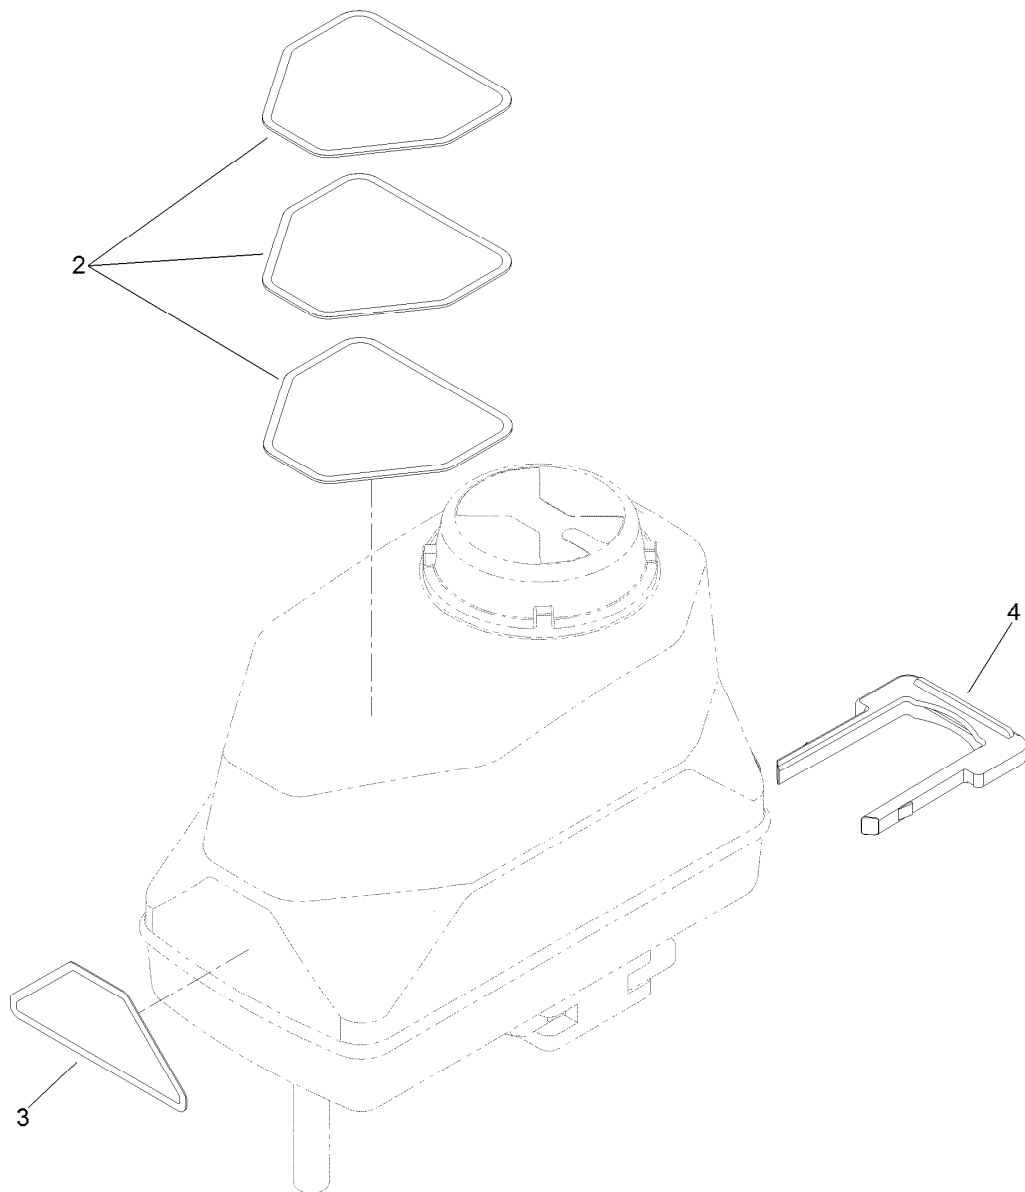


On/Off Actuator Kit No. 131-3723

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	127-6979	1	Decal-Valve, Agitation
2	127-6981	1	Decal-Valve, On/Off
2	127-6982	1	Decal-Valve, Master Boom
3	127-6976	1	Decal-Valve, Bypass Adjust
4	130-7301	1	Hairpin-Actuator

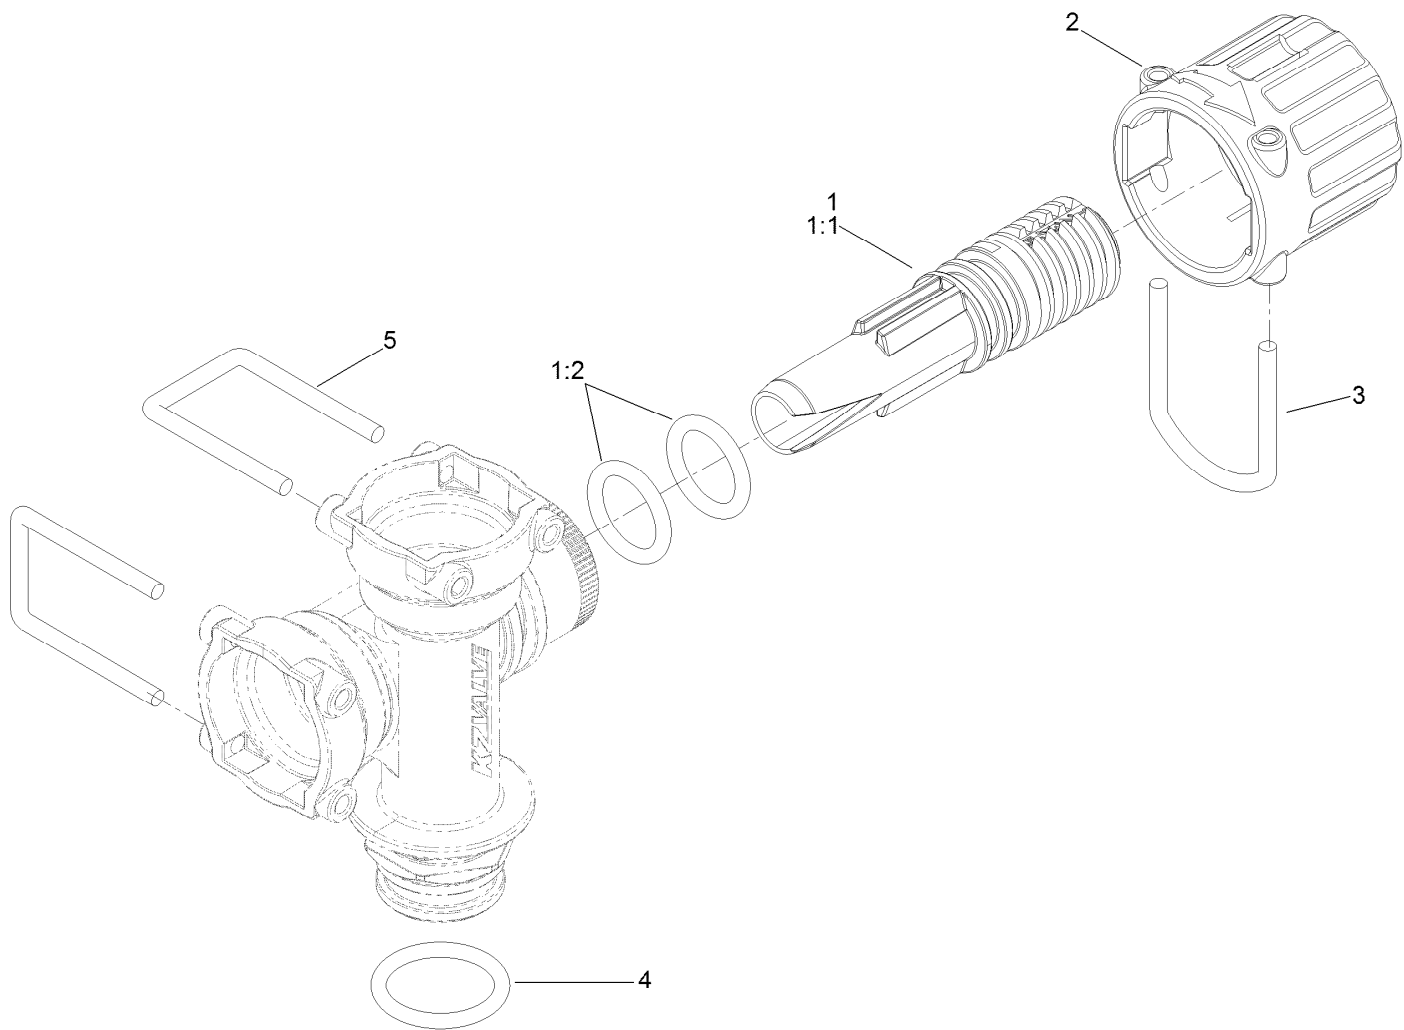 


Bypass Valve Assembly No. 127-9805

Ref.	Part Number	Qty.	Description
1	131-0298	1	Bypass Needle Kit
1:1	127-1182	1	Needle-Bypass
1:2	127-1181	2	O-ring-Bypass Needle
2	127-1180	1	Knob-Bypass
3	127-1179	1	Fork-Bypass Knob
4	127-1187	1	O-Ring, Endcap
5	133-0398	2	Pin-Fork

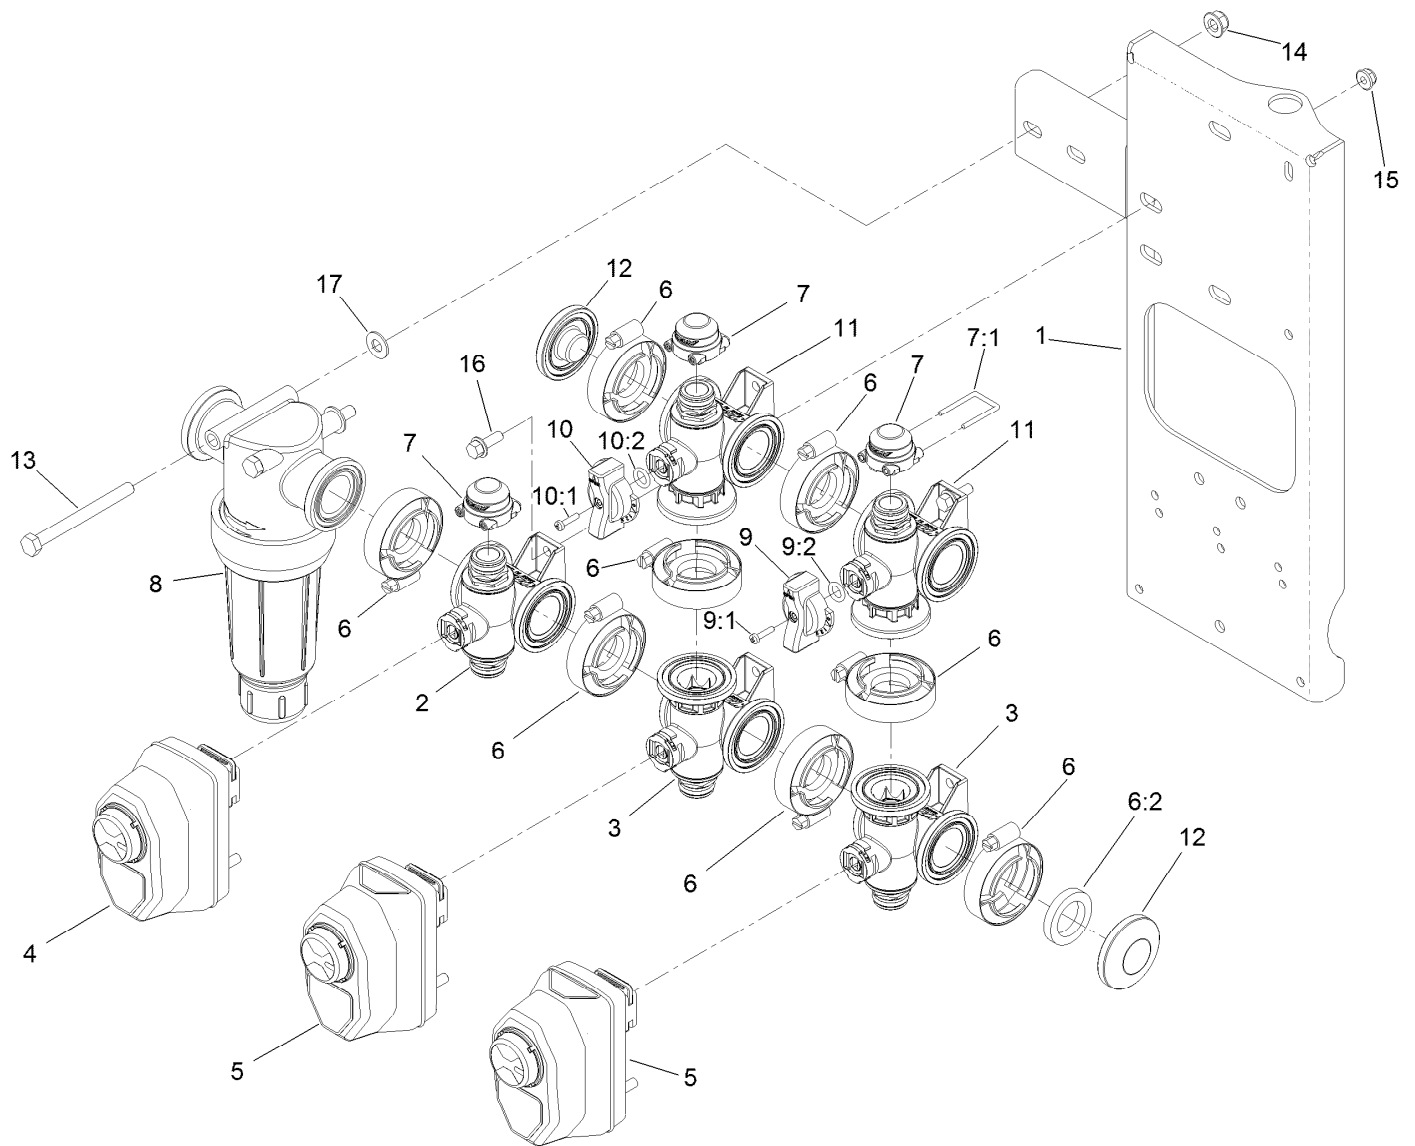 

Agitation Valve Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	137-4288	1	Mount-Valve	9:2	127-1197	1	O-Ring-Stem
2	127-9804	1	Regulating Valve Body ASM	10	131-0265	1	Agitation Regulating Handle Kit
3	131-7256	2	Manifold Valve Kit	10:1	131-0263	1	Screw-Handle
4	131-3724	1	Actuator Regulating Kit	10:2	127-1197	1	O-Ring-Stem
5	131-3723	2	Actuator On/Off Kit	11	131-0253	2	Manifold Valve Kit
6	127-9829	8	Clamp/Gasket Kit	12	127-9815	2	Fitting-Cap
6:2	127-1145	1	Gasket-Flange	13	322-22	2	Screw-HH
7	127-9811	3	Fitting-Cap, Female	14	104-8300	2	Nut-HF, NI
7:1	133-0398	1	Pin-Fork	15	104-7201	6	Nut-HF, NI
8	131-3791	1	Filter-Pressure	16	3234-4	6	Screw-HHF
9	131-0266	1	Master Regulating Handle Kit	17	107-0279	2	Washer
9:1	131-0263	1	Screw-Handle				

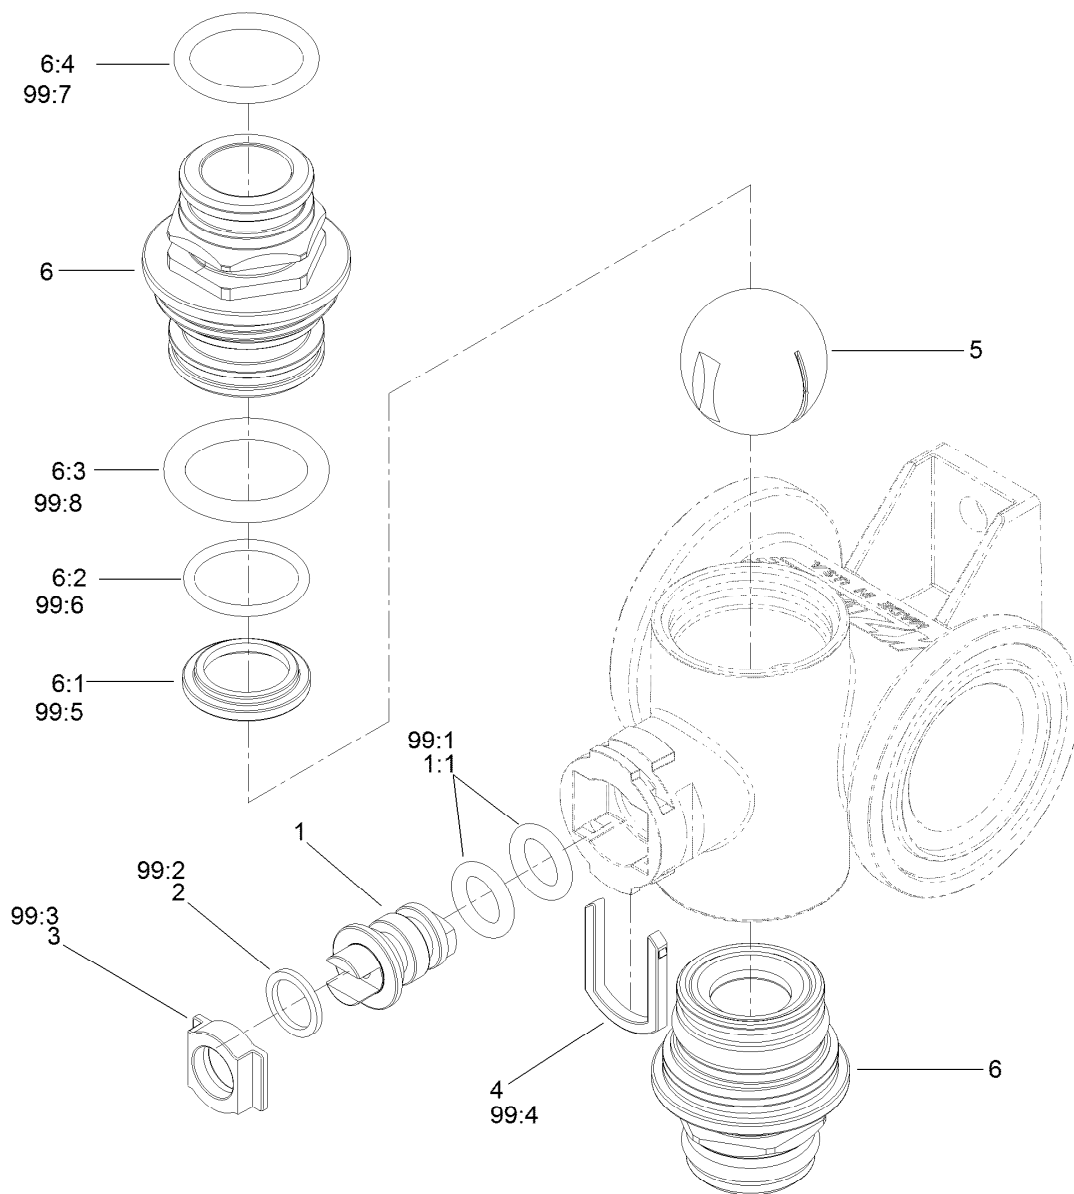 


Regulating Valve Body Assembly No. 127-9804

Ref.	Part Number	Qty.	Description
1	130-8248	1	Vavle Stem Kit
1:1	127-1197	2	O-Ring-Stem
2	127-1196	1	Washer-Stem, Valve
3	127-1195	1	Seat-Stem, Valve
4	127-1190	1	Fork-Stem, Valve
5	127-1113	1	Ball-V
6	130-7317	2	Endcap Kit
6:1	127-1192	1	Seat-Ball
6:2	127-1188	1	O-Ring, Seat (Ball)
6:3	127-1189	1	O-Ring, Endcap

Ref.	Part Number	Qty.	Description
6:4	127-1187	1	O-Ring, Endcap
99	130-7304	1	Valve Repair Kit ●
99:1	127-1197	2	O-Ring-Stem
99:2	127-1196	2	Washer-Stem, Valve
99:3	127-1195	1	Seat-Stem, Valve
99:4	127-1190	1	Fork-Stem, Valve
99:5	127-1192	2	Seat-Ball
99:6	127-1188	2	O-Ring, Seat (Ball)
99:7	127-1187	2	O-Ring, Endcap
99:8	127-1189	2	O-Ring, Endcap

 ● Not illustrated

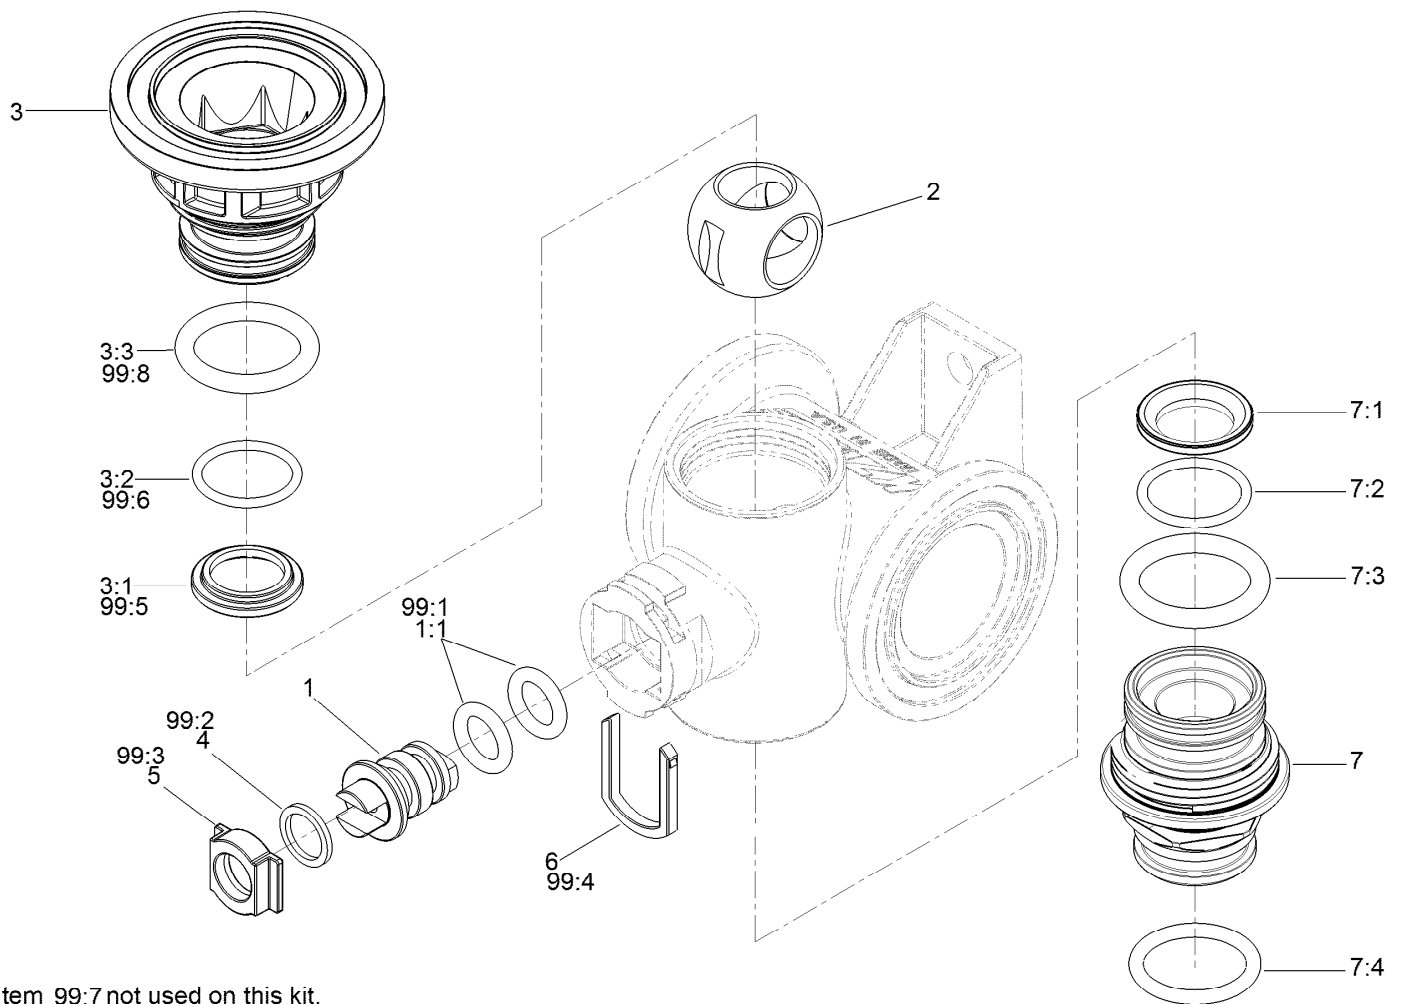


Manifold Valve Kit No. 131-7256

Ref.	Part Number	Qty.	Description
1	130-8248	1	Valve Stem Kit
1:1	127-1197	2	O-Ring-Stem
2	127-1194	1	Ball-Valve, 3Way
3	130-8249	1	Endcap Kit
3:1	127-1192	1	Seat-Ball
3:2	127-1188	1	O-Ring, Seat (Ball)
3:3	127-1189	1	O-Ring, Endcap
4	127-1196	1	Washer-Stem, Valve
5	127-1195	1	Seat-Stem, Valve
6	127-1190	1	Fork-Stem, Valve
7	130-7317	1	Endcap Kit
7:1	127-1192	1	Seat-Ball


Ref.	Part Number	Qty.	Description
7:2	127-1188	1	O-Ring, Seat (Ball)
7:3	127-1189	1	O-Ring, Endcap
7:4	127-1187	1	O-Ring, Endcap
99	130-7304	1	Valve Repair Kit ●
99:1	127-1197	2	O-Ring-Stem
99:2	127-1196	2	Washer-Stem, Valve
99:3	127-1195	1	Seat-Stem, Valve
99:4	127-1190	1	Fork-Stem, Valve
99:5	127-1192	2	Seat-Ball
99:6	127-1188	2	O-Ring, Seat (Ball)
99:7	127-1187	2	O-Ring, Endcap
99:8	127-1189	2	O-Ring, Endcap

 ● Not illustrated

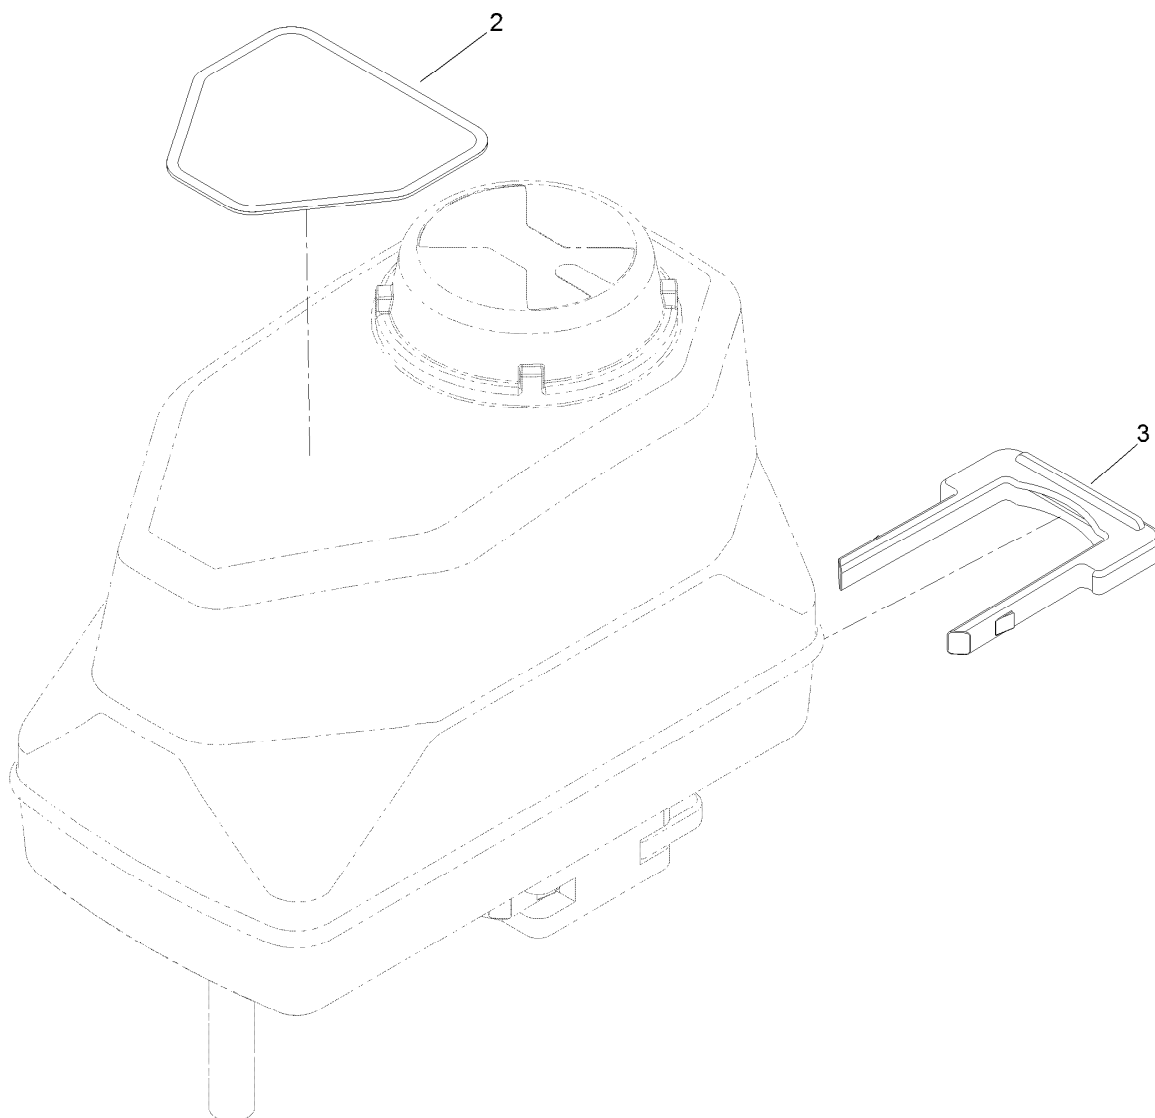


Actuator Regulating Valve No. 131-3724

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	127-6984	1	Decal-Valve, Regulating
3	130-7301	1	Hairpin-Actuator

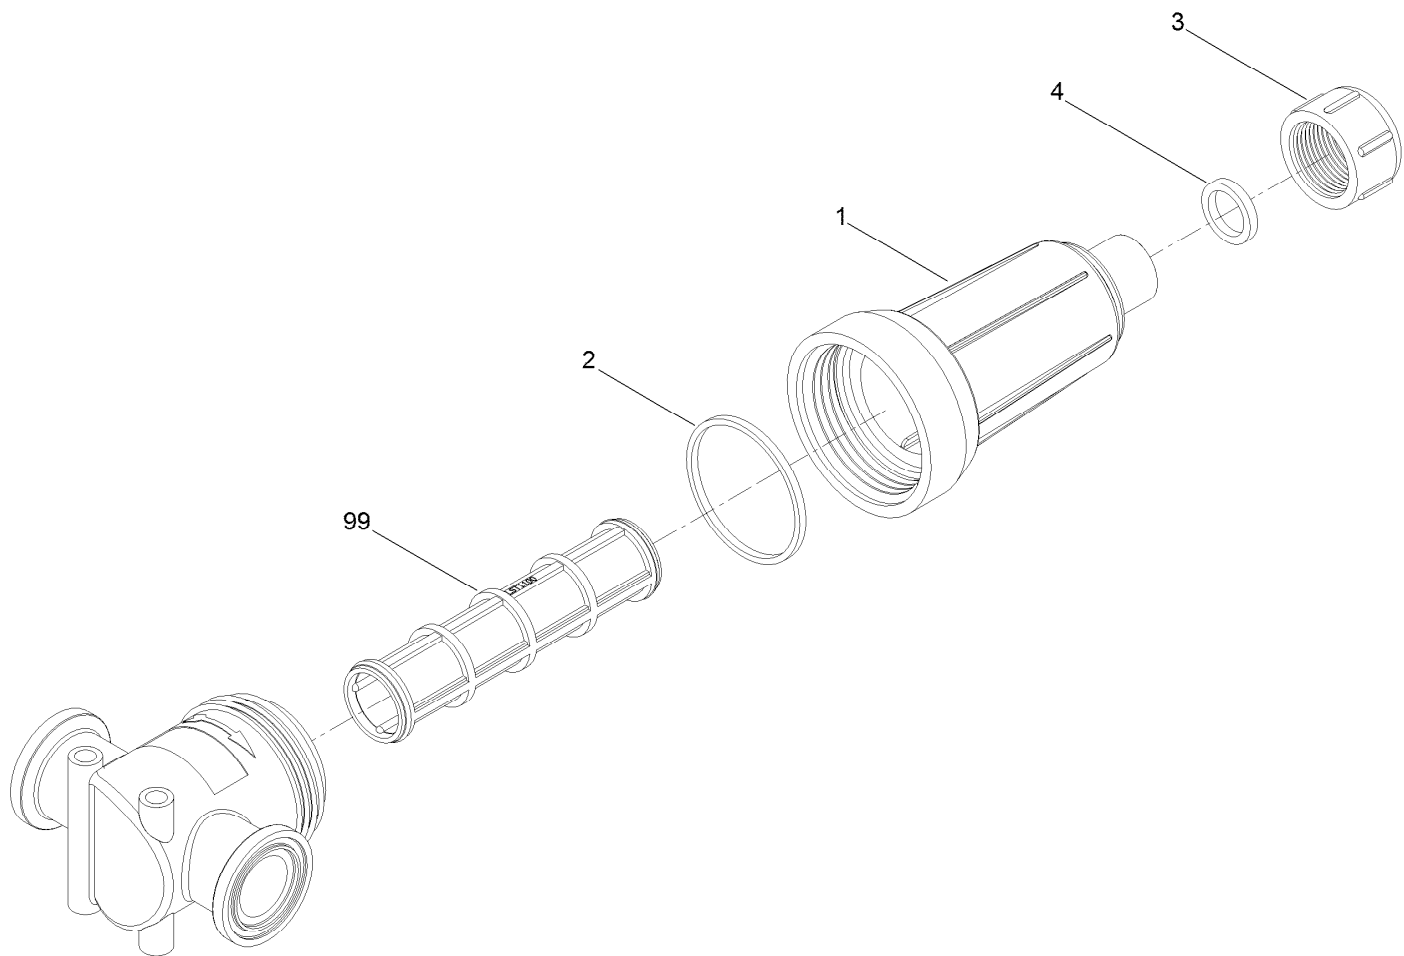 

Pressure Filter Assembly No. 131-3791

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-0397	1	Bowl-Strainer
2	136-0398	1	Rubber-Gasket
3	136-0410	1	Strainer Cap
4	136-0399	1	Rubber-Gasket
99	133-0384	1	Screen-Teejet, 30 Mesh
99	133-0385	1	Screen-Teejet, 50 Mesh
99	133-0386	1	Screen-Teejet, 80 Mesh
99	133-0387	1	Screen-Teejet, 100 Mesh

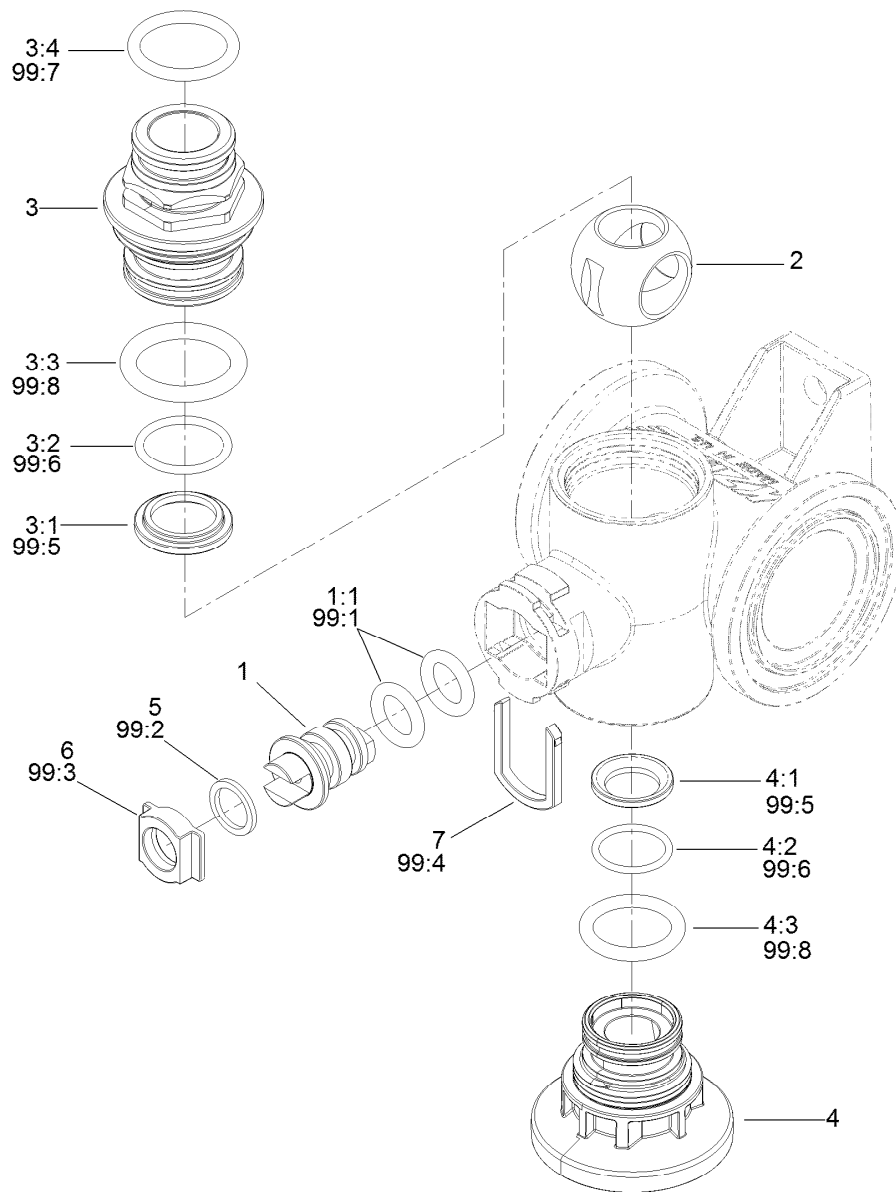 


Manifold Valve Kit No. 131-0253

Ref.	Part Number	Qty.	Description
1	130-8248	1	Vavle Stem Kit
1:1	127-1197	2	O-Ring-Stem
2	127-1113	1	Ball-V
3	130-7317	1	Endcap Kit
3:1	127-1192	1	Seat-Ball
3:2	127-1188	1	O-Ring, Seat (Ball)
3:3	127-1189	1	O-Ring, Endcap
3:4	127-1187	1	O-Ring, Endcap
4	130-8249	1	Endcap Kit
4:1	127-1192	1	Seat-Ball
4:2	127-1188	1	O-Ring, Seat (Ball)
4:3	127-1189	1	O-Ring, Endcap

Ref.	Part Number	Qty.	Description
5	127-1196	1	Washer-Stem, Valve
6	127-1195	1	Seat-Stem, Valve
7	127-1190	1	Fork-Stem, Valve
99	130-7304	1	Valve Repair Kit ●
99:1	127-1197	2	O-Ring-Stem
99:2	127-1196	2	Washer-Stem, Valve
99:3	127-1195	1	Seat-Stem, Valve
99:4	127-1190	1	Fork-Stem, Valve
99:5	127-1192	2	Seat-Ball
99:6	127-1188	2	O-Ring, Seat (Ball)
99:7	127-1187	2	O-Ring, Endcap
99:8	127-1189	2	O-Ring, Endcap

 ● Not illustrated

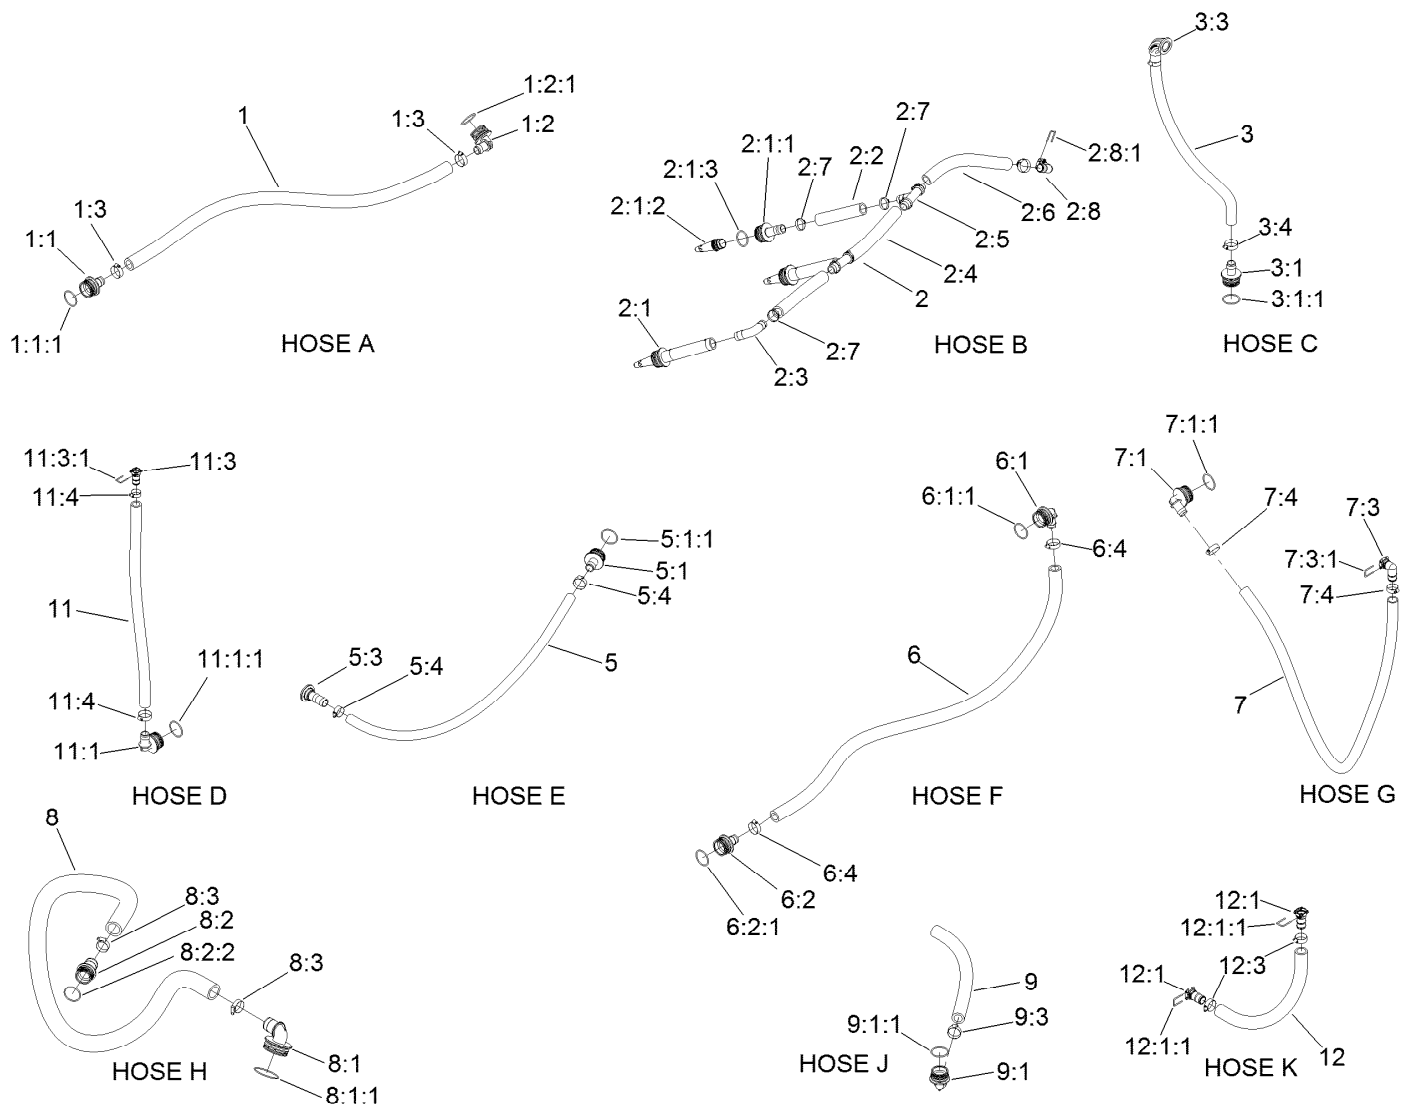


Reference **Spray Tank Assembly** page and **Spray Tank Valve Assembly** page for hose locations and orientation

Hose Assembly

Ref.	Part Number	Qty.	Description
1	121-6539	1	Main Supply Hose ASM
1:1	106-4932	1	Hosebarb-Straight
1:1:1	100-8637	1	O-Ring
1:2	106-4933	1	Hosebarb ASM
1:2:1	100-8637	1	O-Ring
1:3	2412-34	2	Clamp-Hose
2	139-3094	1	Hose-Agitation, ASM
2:1	131-3731	3	Agitation Nozzle ASM
2:1:1	131-3732	1	Fitting-Barb
2:1:2	120-8579	1	Nozzle-Agitation
2:1:3	121-4996	1	O-Ring
2:2	125-0665	3	Nozzle-Hose, Agitation
2:3	117-7867	1	Elbow-Hosebarb
2:4	125-0664	2	Tee-Hose, Agitation
2:5	117-7866	2	Tee-Hosebarb
2:6	132-4311	1	Hose-Agitation
2:7	2412-34	12	Clamp-Hose
2:8	131-0213	1	90 DEG Barb Fitting Kit
2:8:1	133-0398	1	Pin-Fork
3	132-4314	1	Hose-Supply
3:1	106-4932	1	Hosebarb-Straight

Ref.	Part Number	Qty.	Description
3:1:1	100-8637	1	O-Ring
3:3	131-0241	1	Fitting-Elb 90
3:4	2412-34	2	Clamp-Hose
5	132-4313	1	Hose Agitation, Bypass
5:1	106-4932	1	Hosebarb-Straight
5:1:1	100-8637	1	O-Ring
5:3	127-1142	1	Fitting-STR
5:4	2412-34	2	Clamp-Hose
6	125-0601	1	Regulating Hose ASM
6:1	106-4933	1	Hosebarb ASM
6:1:1	100-8637	1	O-Ring
6:2	106-4932	1	Hosebarb-Straight
6:2:1	100-8637	1	O-Ring
6:4	2412-34	2	Clamp-Hose
7	132-4315	1	Hose-Bypass
7:1	106-4933	1	Hosebarb ASM
7:1:1	100-8637	1	O-Ring
7:3	131-0213	1	90 DEG Barb Fitting Kit
7:3:1	133-0398	1	Pin-Fork
7:4	2412-34	2	Clamp-Hose
8	125-0603	1	Top Suction Hose ASM

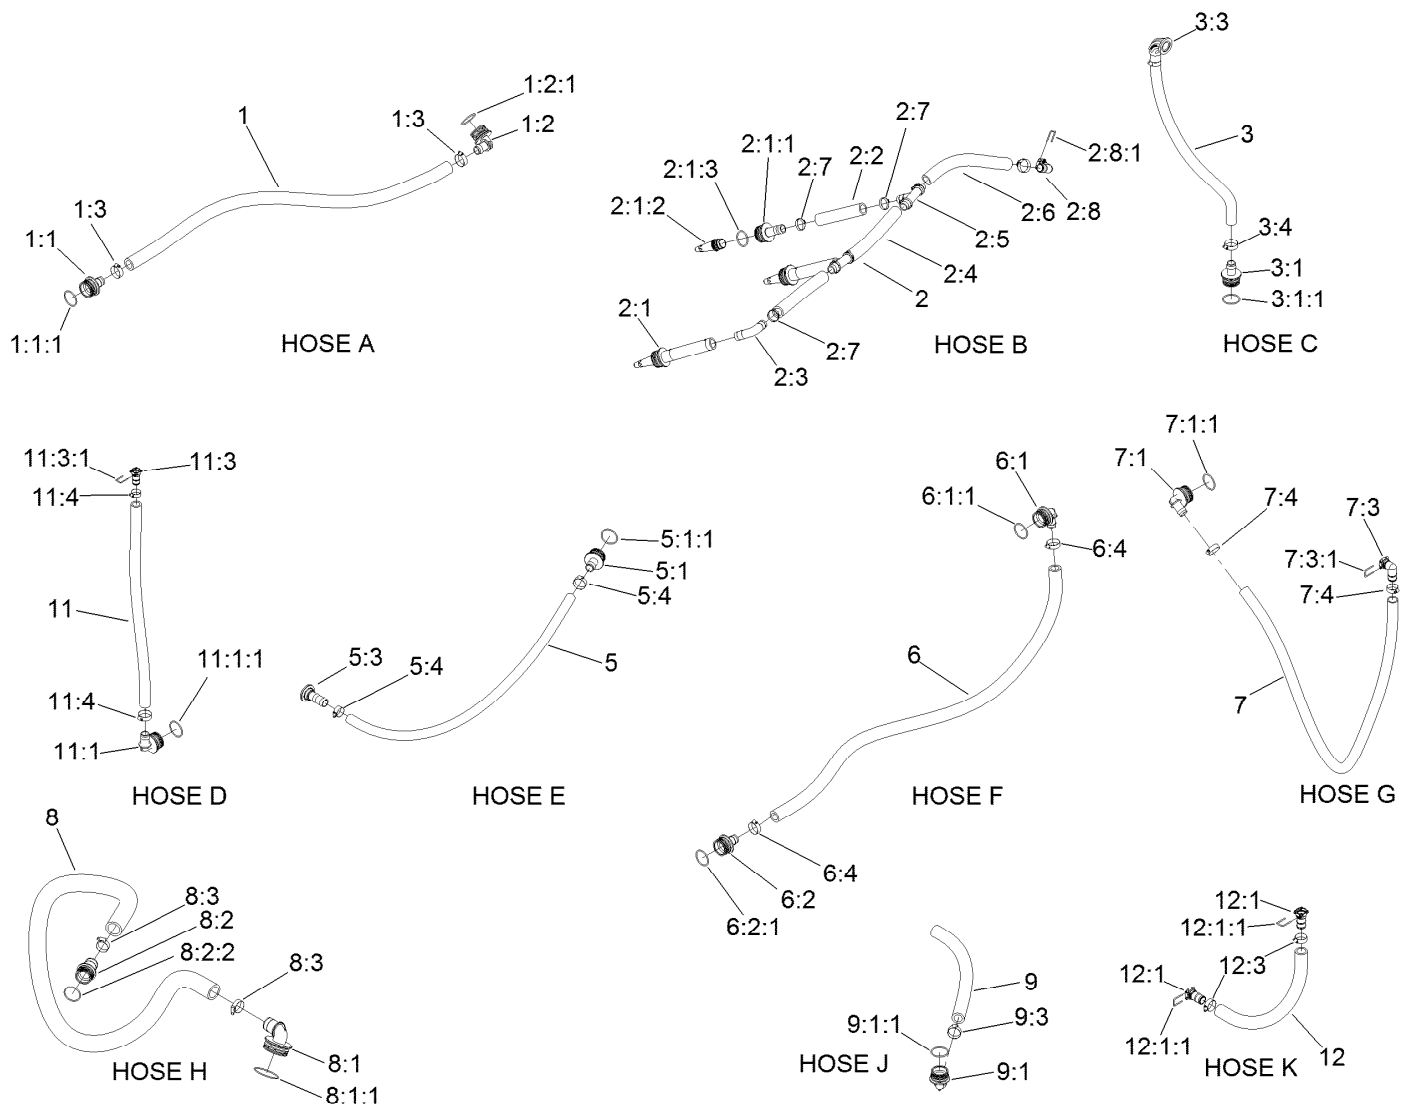 


Reference **Spray Tank Assembly** page and **Spray Tank Valve Assembly** page for hose locations and orientation

Hose Assembly (continued)


Ref.	Part Number	Qty.	Description
8:1	106-4952	1	Hosebarb-90 DEG
8:1:1	100-6989	1	O-Ring
8:2	117-7982	1	Hosebarb ASM
8:2:2	100-8637	1	O-Ring
8:3	41327	2	Clamp-Hose
9	125-0647	1	Drain Hose ASM
9:1	106-4933	1	Hosebarb ASM
9:1:1	100-8637	1	O-Ring
9:3	2412-34	1	Clamp-Hose
11	132-4316	1	Hose-Regulating

Ref.	Part Number	Qty.	Description
11:1	106-4933	1	Hosebarb ASM
11:1:1	100-8637	1	O-Ring
11:3	127-9806	1	Fitting Kit
11:3:1	133-0398	1	Pin-Fork
11:4	2412-34	2	Clamp-Hose
12	132-4319	1	Hose-Regulating
12:1	127-9806	2	Fitting Kit
12:1:1	133-0398	1	Pin-Fork
12:3	2412-34	2	Clamp-Hose

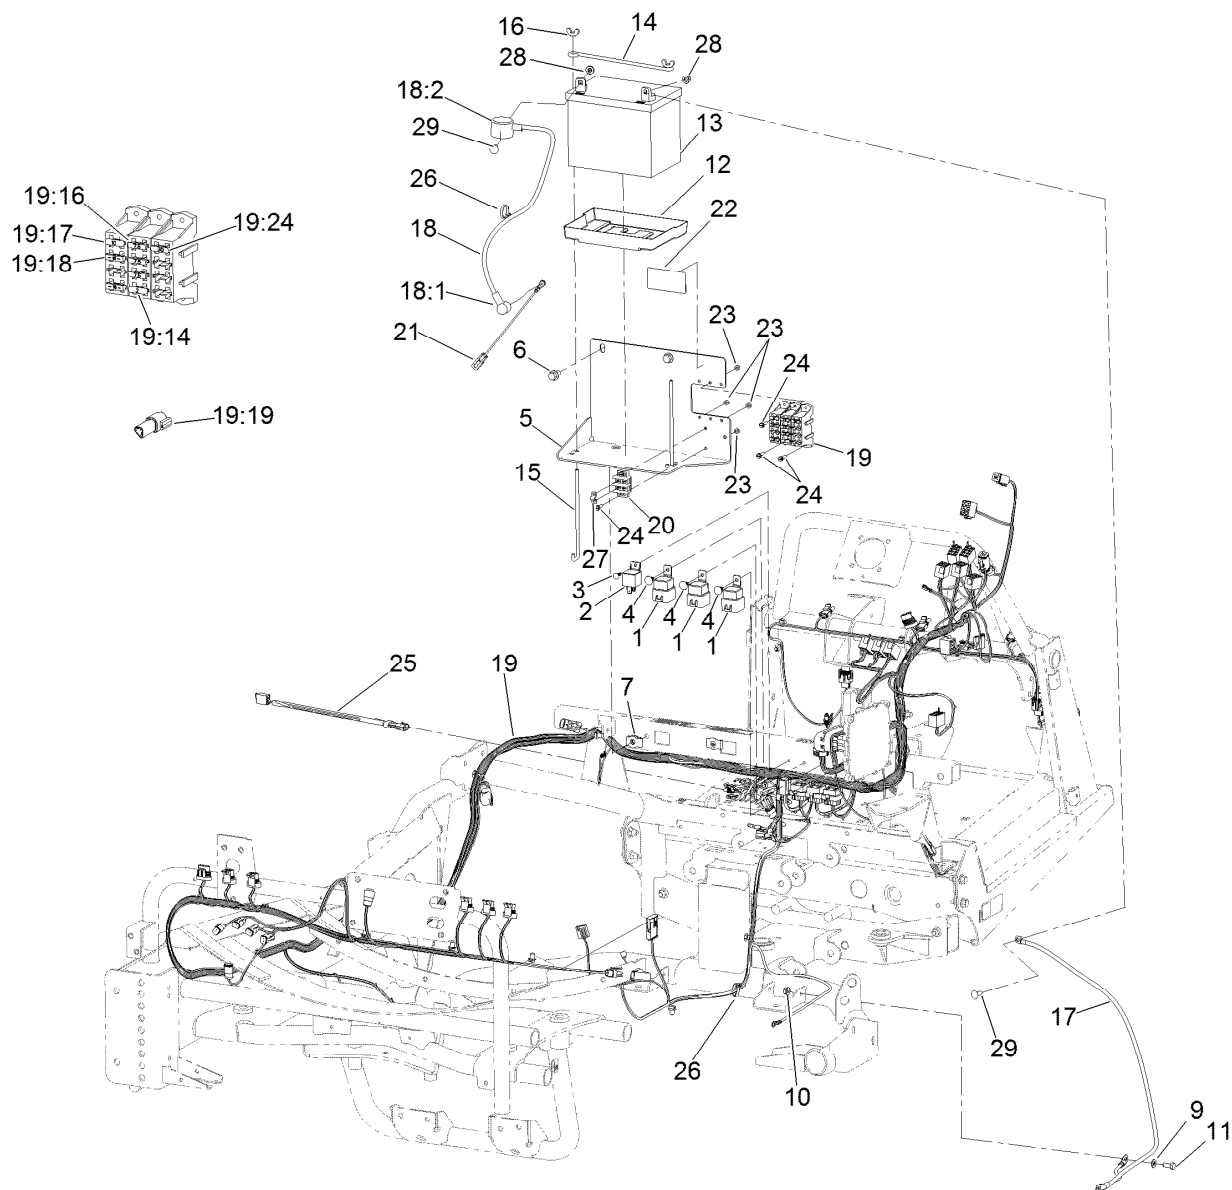 

Main Wiring Harness and Battery Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	99-7430	3	Relay-Mini	18:2	109-2407	1	Insulator-Battery
2	99-7435	1	Relay	19	122-1438	1	Harness-Wire, Mp1750
3	125-8067	1	Plug-Plastic	19:14	94-6710	1	Fuse-2 Amp
4	117-2382	3	Plug-Plastic	19:16	114241	3	Fuse-Blade, 7.5 Amp
5	125-0908-0P	1	Base - Battery	19:17	218-578	1	Fuse-Blade, 10 Amp
6	3234-1	2	Screw-HHF	19:18	109355	3	Fuse-Blade, 15 Amp
7	105-4886	2	Nut-Tinnerman	19:19	32180-043	2	Resistor-120 Ohm
9	3256-23	1	Washer-Plain	19:24	109103	1	Fuse-Blade, 30 Amp
10	32128-25	1	Nut-HF	20	42862	1	Block-Terminal, Ground
11	322-3	1	Screw-HH	21	108-9455	1	Harness-Wire, Fusible Link
12	106948	1	Tray-Battery	22	144-6007	1	Decal - Fuse Block
13	104-8162	1	Battery	23	3296-2	5	Nut-Lock, NI
14	100-6434	1	Rod-Hold Down, Battery	24	32105-13	5	Screw-HWH
15	100-6435	2	Post-Battery	25	108-8657	1	Harness-Wire, Seat
16	32103-22	2	Nut-Wing	26	3290-379	2	Tie-Cable
17	122-0137	1	Cable-Battery, Negative	27	42863	1	Strip-Jumper
18	109-7621	1	Positive Battery Cable ASM	28	104-8300	2	Nut-HF, NI
18:1	1-543393	1	Insulator-Solenoid	29	3230-1	2	Bolt-CARR

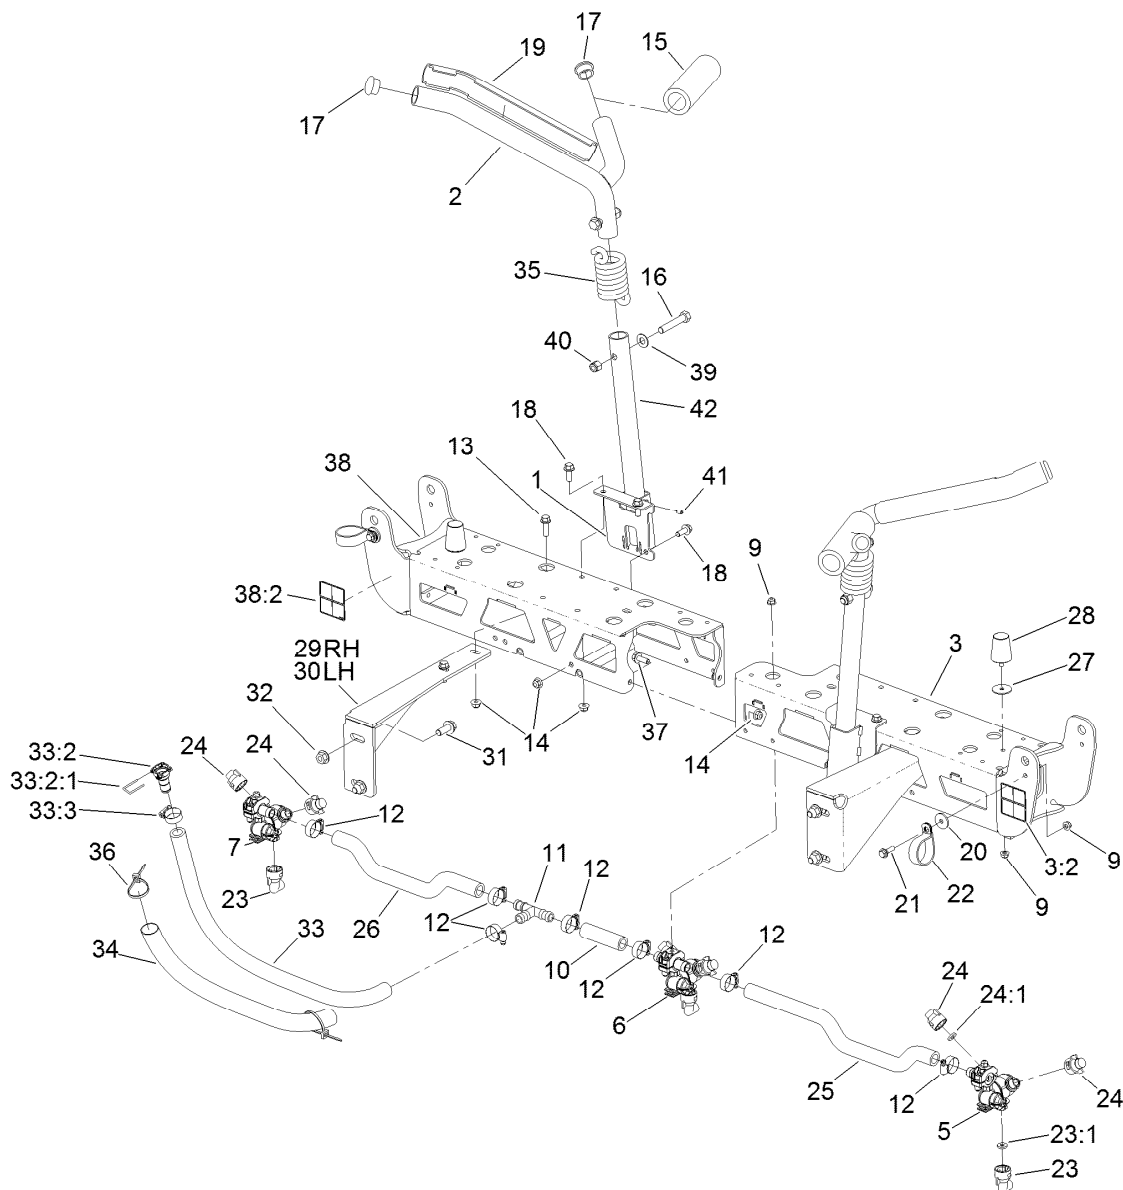 

Center Boom Mount Assembly

Ref.	Part Number	Qty.	Description
1	144-6198-03	2	Cradle-ASM, Lower [black]
2	140-7337-03	2	Cradle ASM-Upper
3	136-0381	1	Boom-LH
3:2	120-0617	2	Decal-Warning, Pinch, Crush
5	108-3725	1	LH Single Body Turret ASM
6	108-3727	1	Double Turret Body ASM
7	108-3726	1	RH Single Body Turret ASM
9	104-8300	7	Nut-HF, NI
10	108-3717	1	Hose-Boom
11	108-3439	1	Tee
12	2412-129	7	Clamp-Hose
13	110-5050	4	Screw-HHF
14	104-8301	12	Nut-HF, NI
15	108-3457	2	Spacer
16	3213-8	4	Screw-HH
17	108-3489	4	Cap-Tube
18	110-5052	6	Screw-HHF
19	108-3495	2	Cover-Slide
20	108-3743	2	Washer
21	108-3744	2	Screw-Shoulder


Ref.	Part Number	Qty.	Description
22	114-9566	2	Clamp-R
23	95-9186	3	Cap
23:1	40998	1	Seat-Gasket
24	95-9187	6	Cap-Blank
24:1	40998	1	Seat-Gasket
25	108-3735	1	Hose-Boom, Center (LH)
26	108-3718	1	Hose-Boom, Center (RH)
27	3256-68	2	Washer-Flat
28	110-5070	2	Bumper
29	130-8244-03	1	Mount-Boom, RH
30	130-8245-03	1	Mount-Boom, LH
31	110-5057	4	Capscrew-HHF
32	108-3745	4	Nut-HHF, Whiz
33	132-4323	1	Hose-Boom, Center
33:2	127-9807	1	Straight Fitting Kit
33:2:1	133-0398	1	Pin-Fork
33:3	2412-129	1	Clamp-Hose
34	127-3923	1	Conduit-Convolved
35	144-6199	2	Spring-Extension
36	3290-378	2	Tie-Cable
37	3234-42	2	Screw-HHF

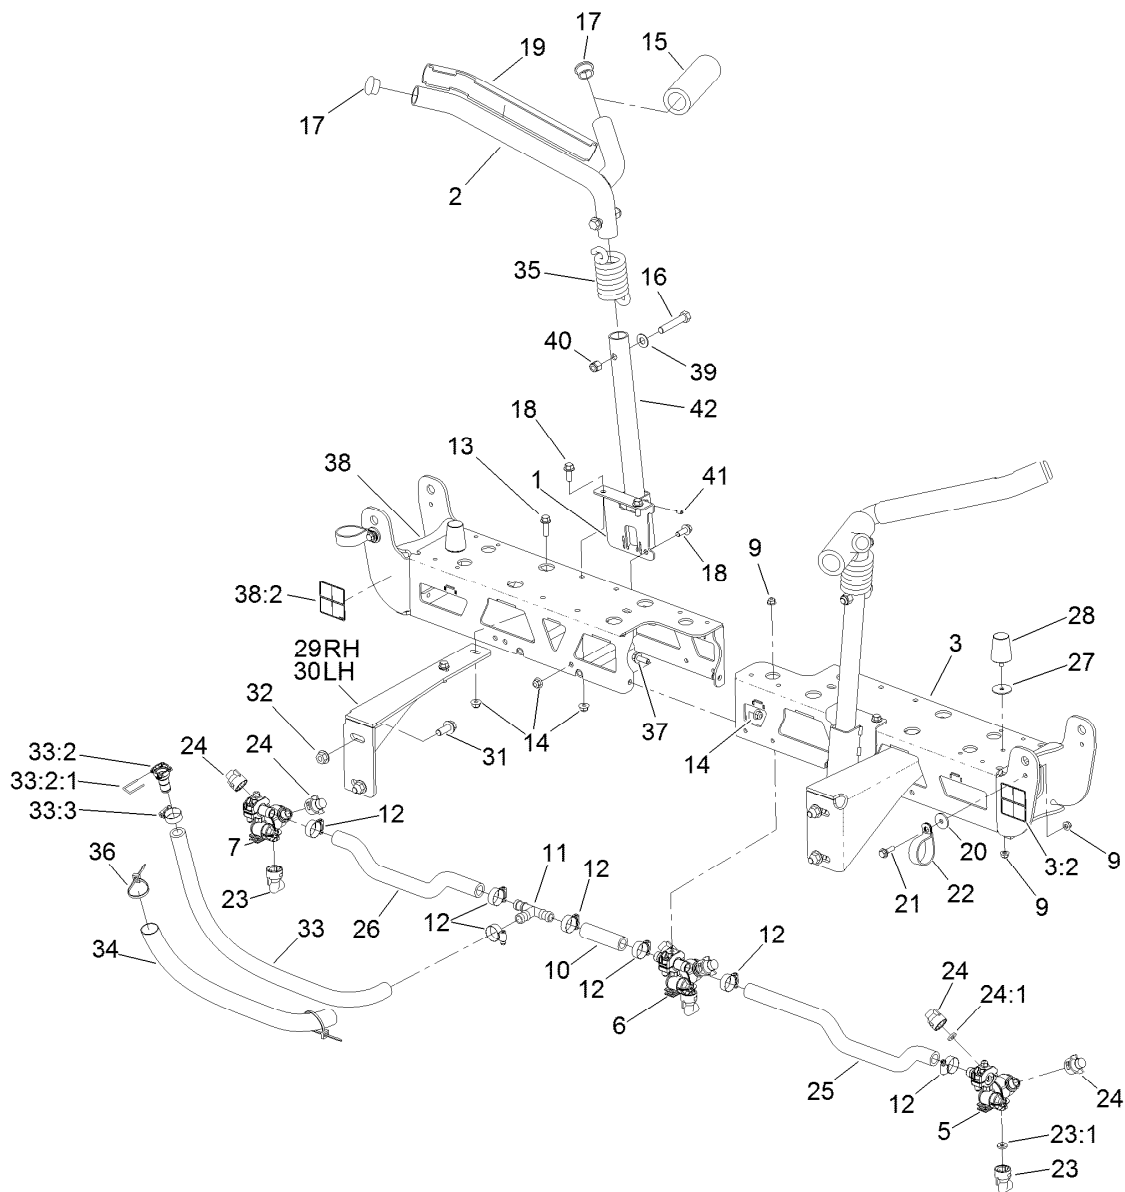 

Center Boom Mount Assembly (continued)

Ref.	Part Number	Qty.	Description
38	136-0382	1	Boom-RH
38:2	120-0617	2	Decal-Warning, Pinch, Crush
39	110-6894	4	Washer-Pivot


Ref.	Part Number	Qty.	Description
40	3296-19	4	Nut-Hex
41	3246-4	4	Screw-Set
42	144-6201-03	2	Tube-Lower Cradle

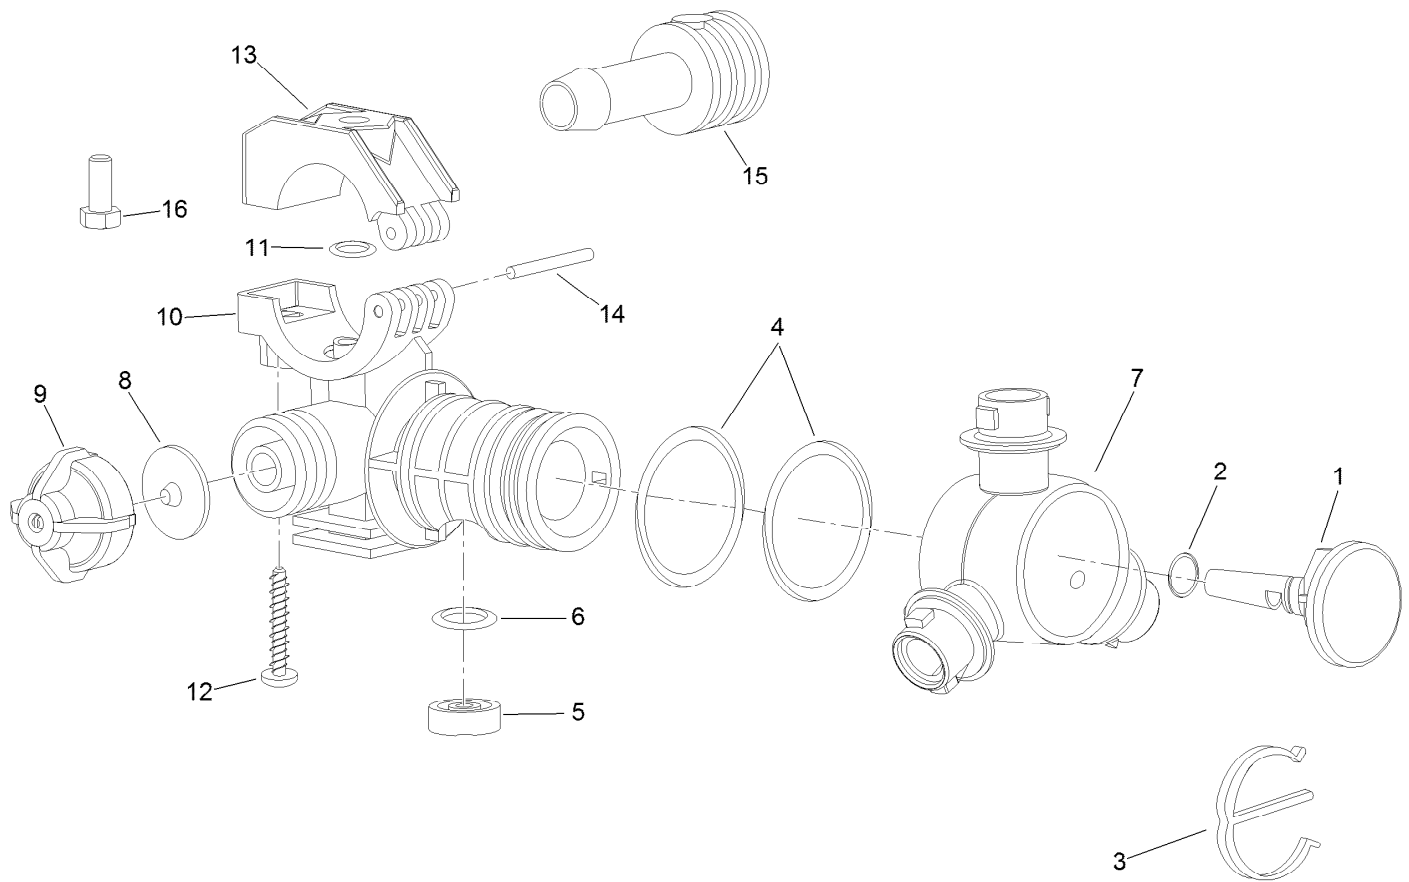 

RH Single Body Turret Assembly No. 108-3726

Ref.	Part Number	Qty.	Description
1	95-9200	1	Plug
2	95-9198	1	O-Ring
3	95-9197	1	E-Clip
4	95-9199	2	O-Ring
5	108-3264	1	Seal-Viton
6	108-3265	1	O-Ring-Viton
7	95-9196	1	Turret
8	41003	1	Diaphragm


Ref.	Part Number	Qty.	Description
9	95-9193	1	Cap-Diaphragm
10	95-9192	1	Body-Split Eyelet
11	95-9191	1	O-Ring
12	99-0811	1	Screw-Clamp
13	99-0812	1	Clamp-Upper
14	99-0814	1	Pin-Pivot
15	95-9201	1	Shank-Hose
16	322-3	1	Screw-HH

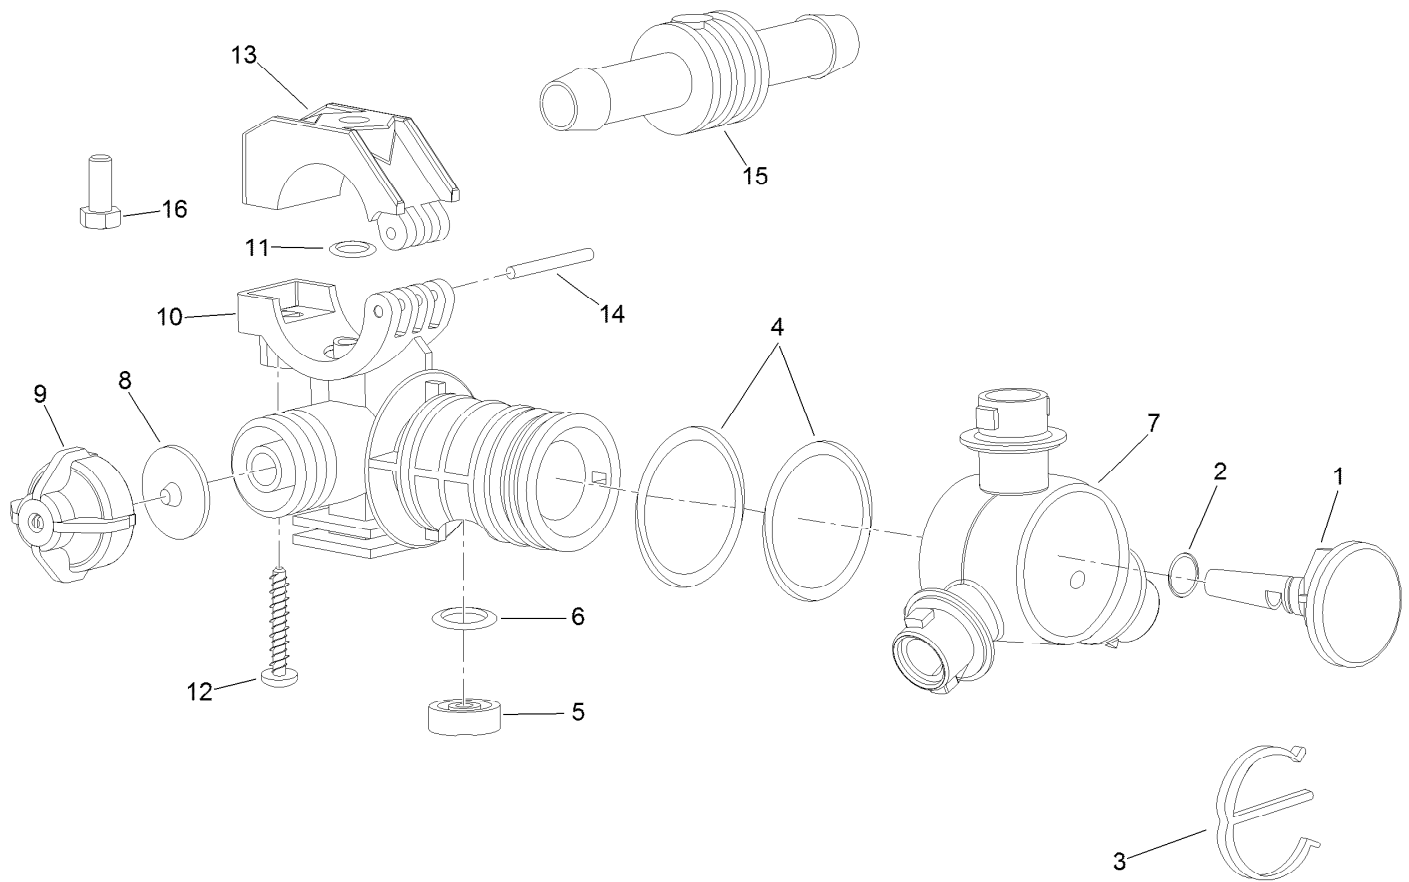 

Double Turret Body Assembly No. 108-3727

Ref.	Part Number	Qty.	Description
1	95-9200	1	Plug
2	95-9198	1	O-Ring
3	95-9197	1	E-Clip
4	95-9199	2	O-Ring
5	108-3264	1	Seal-Viton
6	108-3265	1	O-Ring-Viton
7	95-9196	1	Turret
8	41003	1	Diaphragm


Ref.	Part Number	Qty.	Description
9	95-9193	1	Cap-Diaphragm
10	95-9192	1	Body-Split Eyelet
11	95-9191	1	O-Ring
12	99-0811	1	Screw-Clamp
13	99-0812	1	Clamp-Upper
14	99-0814	1	Pin-Pivot
15	95-9202	1	Shank-Hose
16	322-3	1	Screw-HH

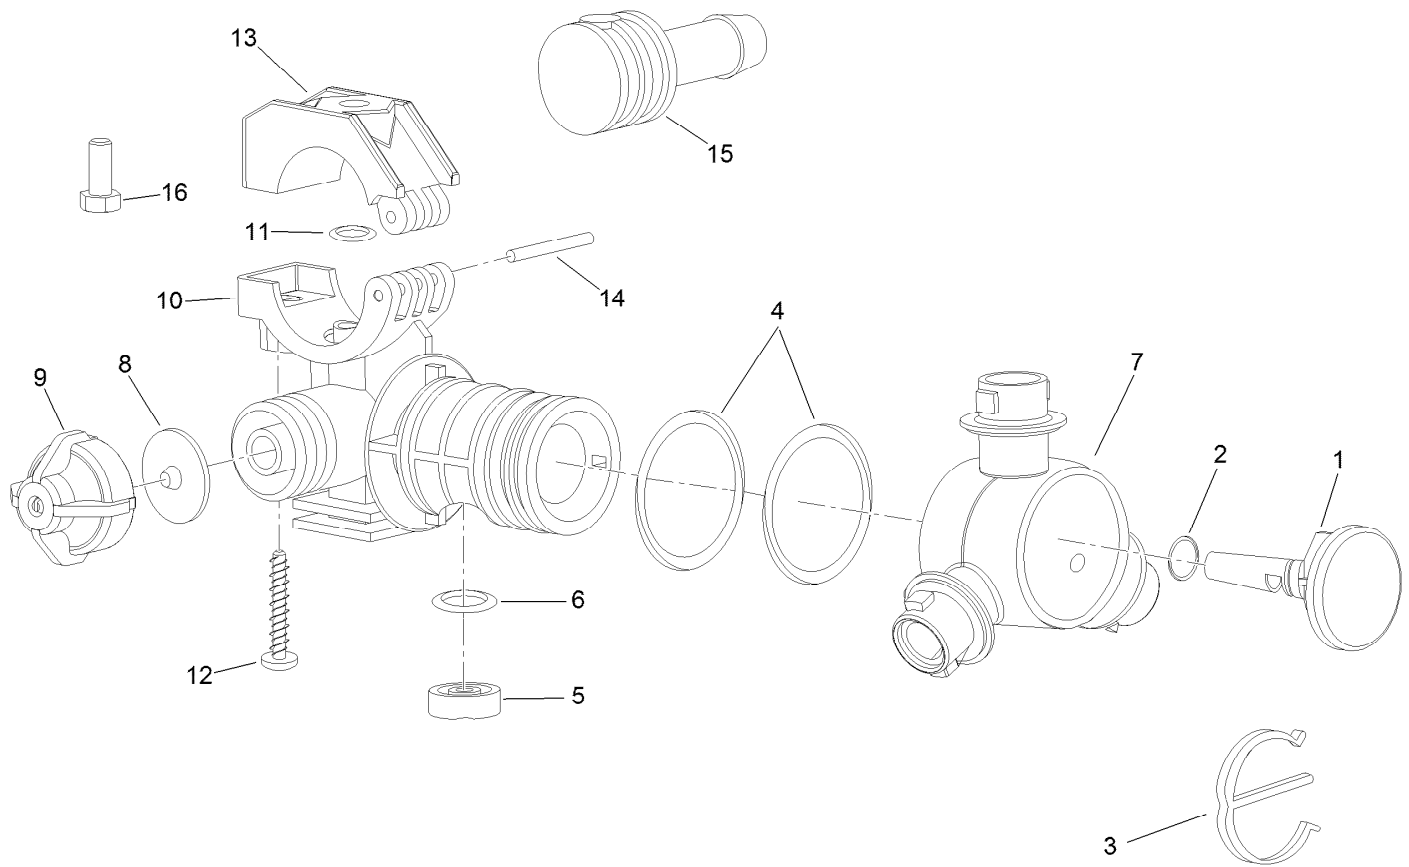 

LH Single Turret Body Assembly No. 108-3725

Ref.	Part Number	Qty.	Description
1	95-9200	1	Plug
2	95-9198	1	O-Ring
3	95-9197	1	E-Clip
4	95-9199	2	O-Ring
5	108-3264	1	Seal-Viton
6	108-3265	1	O-Ring-Viton
7	95-9196	1	Turret
8	41003	1	Diaphragm


Ref.	Part Number	Qty.	Description
9	95-9193	1	Cap-Diaphragm
10	95-9192	1	Body-Split Eyelet
11	95-9191	1	O-Ring
12	99-0811	1	Screw-Clamp
13	99-0812	1	Clamp-Upper
14	99-0814	1	Pin-Pivot
15	95-9201	1	Shank-Hose
16	322-3	1	Screw-HH

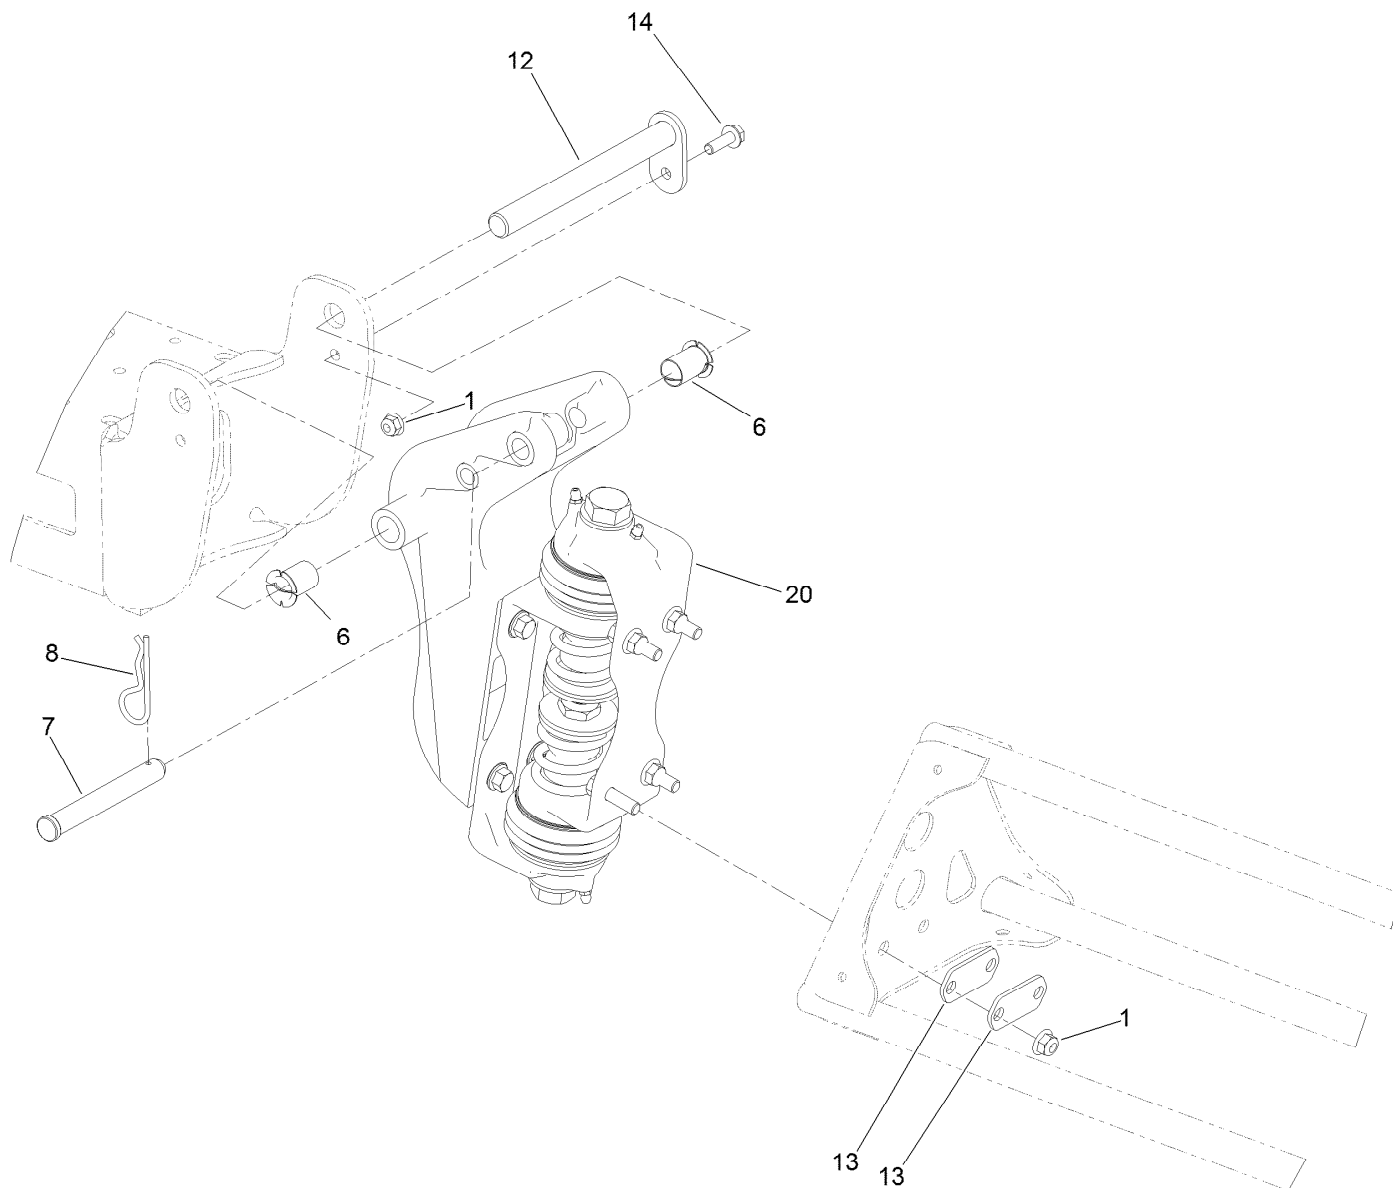 

Left and Right Hand Boom Pivot Assembly


Ref.	Part Number	Qty.	Description
1	104-8300	2	Nut-HF, NI
6	100-8541	4	Bushing-A Arm
7	108-3436	2	Pin-Clevis
8	3290-468	2	Pin-Cotter
12	108-3419	2	Pivot Pin ASM
13	108-3605	8	Plate-Backing
14	108-3748	2	Screw-HHF
20		2	Pivot Bracket Assembly ●

 ● Not serviced separately

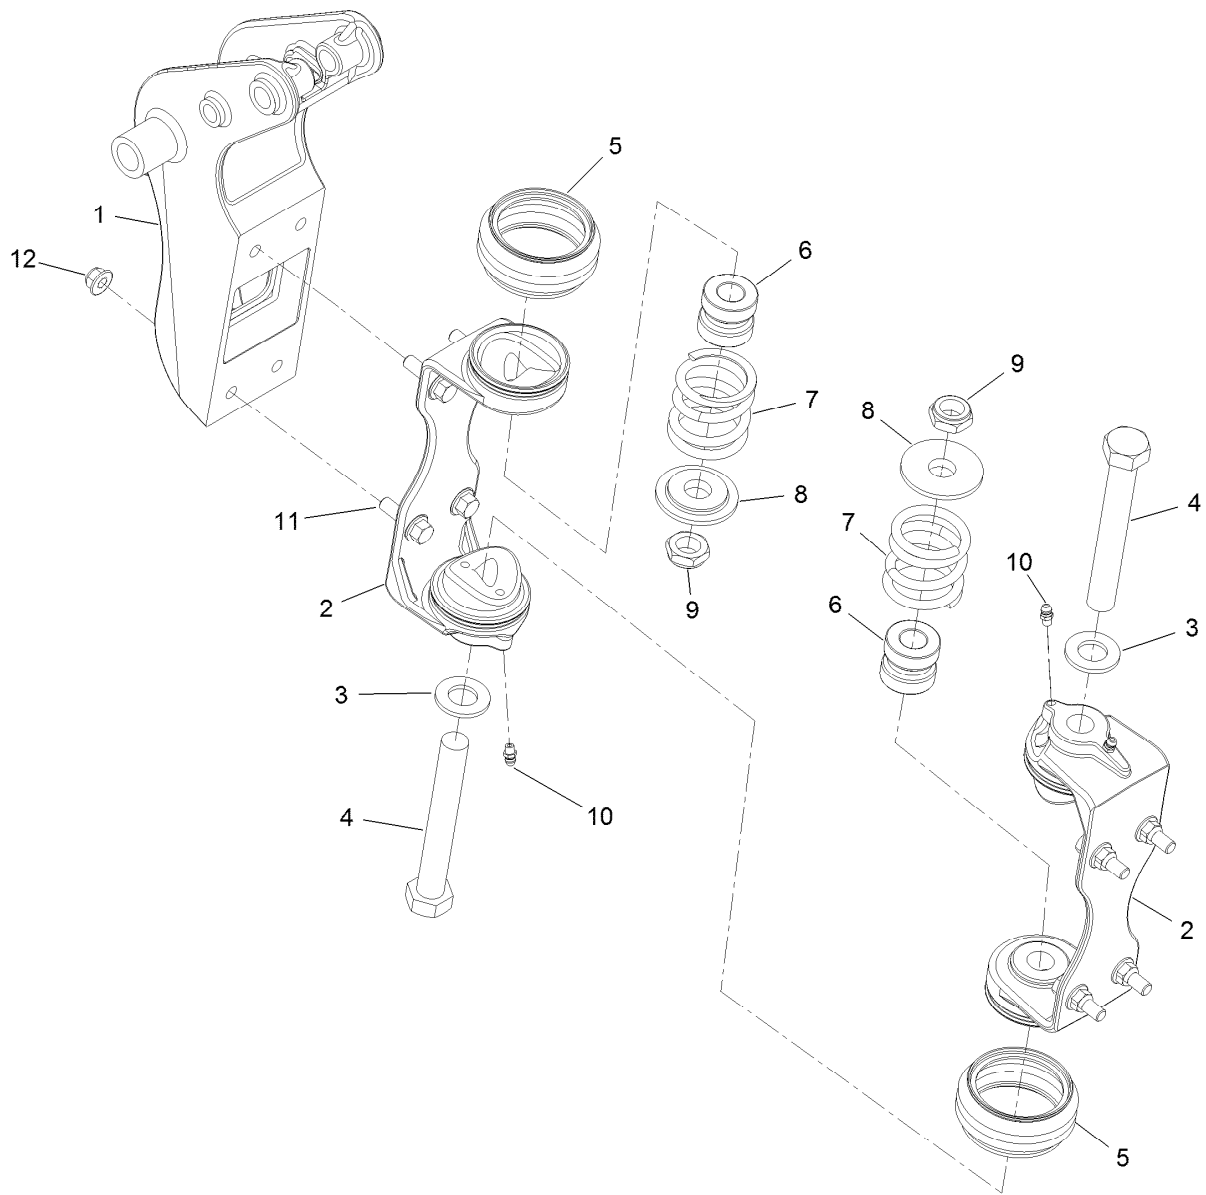

Boom Pivot Assembly

Ref.	Part Number	Qty.	Description
1	137-1673	1	Bracket-Pivot
2	137-1674	2	Hinge
3	110-5054	2	Washer-Flat
4	108-3738	2	Screw-HH
5	108-3459	2	Boot-Hinge
6	120-8541	2	Dampener-Hinge
7	108-3440	2	Spring-Breakaway, Boom
8	108-3444	2	Retainer-Spring
9	3296-15	2	Nut-Lock, NI
10	302-5	4	Fitting-Grease
11	110-5050	8	Screw-HHF
12	104-8301	8	Nut-HF, NI

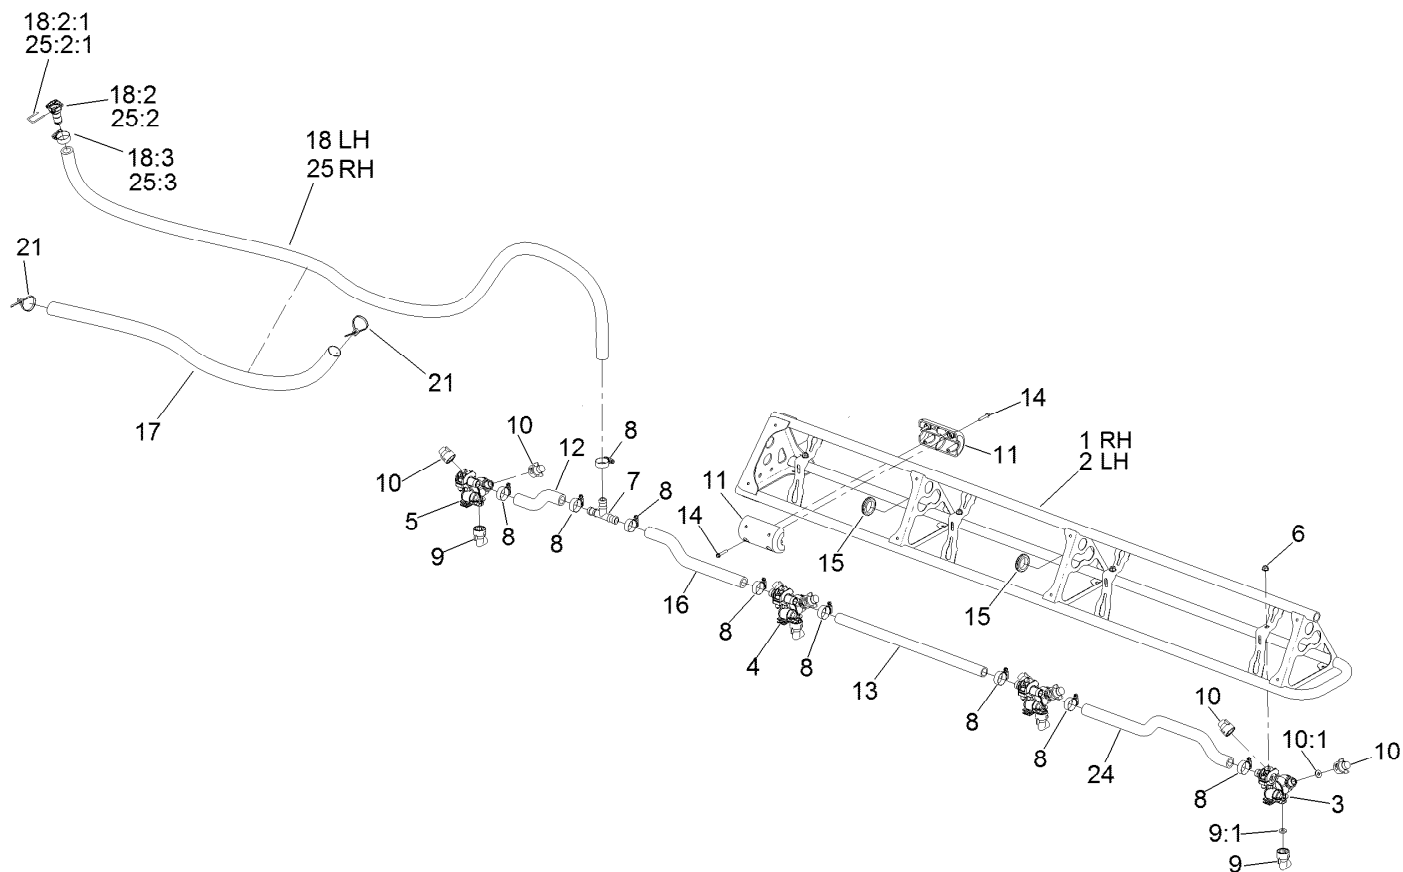 

Left and Right Hand Boom Assembly

Ref.	Part Number	Qty.	Description
1	108-3524-03	1	Boom-RH
2	108-3525-03	1	Boom-LH
3	108-3725	2	LH Single Body Turret ASM
4	108-3727	4	Double Turret Body ASM
5	108-3726	2	RH Single Body Turret ASM
6	104-8300	8	Nut-HF, NI
7	108-3439	2	Tee
8	2412-129	18	Clamp-Hose
9	95-9186	8	Cap
9:1	40998	1	Seat-Gasket
10	95-9187	16	Cap-Blank
10:1	40998	1	Seat-Gasket
11	119-9368	4	Block Slide
12	136-0437	2	Hose-Formed
13	40506	2	Hose-Jumper

Ref.	Part Number	Qty.	Description
14	119-9369	8	Screw-HHF
15	240-3	4	Grommet-Rubber
16	136-0436	2	Hose-Formed
17	107-8650	2	Conduit-Convolutd
18	132-4322	1	Hose-Boom
18:2	127-9807	1	Straight Fitting Kit
18:2:1	133-0398	1	Pin-Fork
18:3	2412-129	1	Clamp-Hose
21	3290-378	6	Tie-Cable
24	108-3735	2	Hose-Boom, Center (LH)
25	132-4324	1	Hose-Boom
25:2	127-9807	1	Straight Fitting Kit
25:2:1	133-0398	1	Pin-Fork
25:3	2412-129	1	Clamp-Hose

Attachments and Accessories

For 41188 — Multi Pro 1750 Turf Sprayer

Product Name	Model/Part
Premium ATF (Drum).....	108-1185
Premium ATF (Pail)	108-1186
Premium All Purpose Grease (Tube)	108-1190
License Plate Kit.....	120-8506
Covered Boom Spring Upgrade Kit.....	120-8508
Premium Engine Oil 10w30 (55 Gallon Drum)	121-6392
Premium Engine Oil 10w30 (5 Gallon Pail)	121-6393
Lance Suction Assembly	127-9826
Sonic Boom Finish Kit.....	130-8227
Pump Head Kit.....	133-2898
Finishing Kit, Foam Marker for Multi Pro 1750 Turf Sprayer	136-0457
Universal Sunshade	30349
Rear Work Light Kit.....	41010
Single Nozzle Kit.....	41023
Hand Spray Wand Kit	41118
EU Compliance Kit.....	41155
Pro Foam Concentrate (4 x 1 Gallon)	41157
Chemical Pre-Mix Kit	41158
Electric Hose Reel Kit	41159
Nozzalert - Mp Nozzle Flow System	41166
CE Kit	41202
Tank Clean Rinse Kit	41208
Ultra Sonic Boom Leveling Kit	41219
Foam Marker Kit	41249
Drift Reduction Boom Shroud Kit	41602
Pro-Foam.....	41607
GSM RTK Correction Modem Kit, GeoLink Precision Spray System.....	41625
X25 GeoLink Precision Spray System Kit, Serial Number 315000001 and After Multi Pro 1750 or 5800 Turf Sprayer	41630
X25 GeoLink Precision Spray System Finishing Kit, Serial Number 315000001 and After Multi Pro 1750 Turf Sprayer.....	41631
Geolink Lte Precision Spray System.....	41633
Geolink - GSM	41634
TNL Reference Antenna Kit, MR-2	41635
CL-55 CDMA Modem Kit	41638
Clutch Assembly, Right.....	41639
Geolink Finish Kit, Mp 1750	41674
Spark Arrestor Screen	94-8157

For 41188 — Multi Pro 1750 Turf Sprayer

Product Name	Model/Part
Premium ATF (Drum).....	108-1185
Premium ATF (Pail)	108-1186
Premium All Purpose Grease (Tube)	108-1190
License Plate Kit.....	120-8506

Attachments and Accessories (continued)

Covered Boom Spring Upgrade Kit.....	120-8508
Premium Engine Oil 10w30 (55 Gallon Drum)	121-6392
Premium Engine Oil 10w30 (5 Gallon Pail)	121-6393
Lance Suction Assembly	127-9826
Sonic Boom Finish Kit.....	130-8227
Pump Head Kit.....	133-2898
Finishing Kit, Foam Marker for Multi Pro 1750 Turf Sprayer	136-0457
Universal Sunshade	30349
Rear Work Light Kit.....	41010
Single Nozzle Kit.....	41023
Hand Spray Wand Kit	41118
EU Compliance Kit.....	41155
Pro Foam Concentrate (4 x 1 Gallon)	41157
Chemical Pre-Mix Kit	41158
Electric Hose Reel Kit	41159
Nozzalert - Mp Nozzle Flow System	41166
CE Kit	41202
Tank Clean Rinse Kit	41208
Ultra Sonic Boom Leveling Kit	41219
Foam Marker Kit	41249
Drift Reduction Boom Shroud Kit	41602
Pro-Foam.....	41607
GSM RTK Correction Modem Kit, GeoLink Precision Spray System.....	41625
X25 GeoLink Precision Spray System Kit, Serial Number 315000001 and After Multi Pro 1750 or 5800 Turf Sprayer	41630
X25 GeoLink Precision Spray System Finishing Kit, Serial Number 315000001 and After Multi Pro 1750 Turf Sprayer.....	41631
Geolink Lte Precision Spray System.....	41633
Geolink - GSM	41634
TNL Reference Antenna Kit, MR-2	41635
CL-55 CDMA Modem Kit	41638
Clutch Assembly, Right.....	41639
Geolink Finish Kit, Mp 1750	41674
Spark Arrestor Screen	94-8157



Count on it.