



Form No. 3415-483 Rev F

**Count on it.**

# Parts Catalog

## Multi Pro® 1750 Turf Sprayer

Model No. 41188—Serial No. 400966414 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

|                                                                         |    |
|-------------------------------------------------------------------------|----|
| Seat and Roll-Over Protection System Assembly . . . . .                 | 5  |
| Frame Assembly. . . . .                                                 | 6  |
| Rear Drive Assembly . . . . .                                           | 7  |
| Case Assembly Transaxle Assembly No. 120-7610. . . . .                  | 9  |
| Center Plate Assembly Transaxle Assembly No. 120-7610 . . . . .         | 10 |
| Main Shaft Assembly Transaxle Assembly No. 120-7610 . . . . .           | 11 |
| Reduction Shaft Assembly Transaxle Assembly No. 120-7610 . . . . .      | 12 |
| Reverse Shaft Assembly Transaxle Assembly No. 120-7610 . . . . .        | 13 |
| Main Shift Assembly Transaxle Assembly No. 120-7610. . . . .            | 14 |
| Counter Shaft Assembly Transaxle Assembly No. 120-7610 . . . . .        | 15 |
| Differential Gear Assembly Transaxle Assembly No. 120-7610 . . . . .    | 16 |
| Differential Carrier Assembly Transaxle Assembly No. 120-7610 . . . . . | 17 |
| Differential Lock Assembly Transaxle Assembly No. 120-7610 . . . . .    | 18 |
| Axle Shaft Assembly Transaxle Assembly No. 120-7610 . . . . .           | 19 |
| Driveshaft Assembly No. 114-8367. . . . .                               | 20 |
| Brake Caliper Assembly No. 127-7424. . . . .                            | 21 |
| Brake Hydraulic Assembly . . . . .                                      | 22 |
| Master Cylinder Assembly No. 104-6782. . . . .                          | 23 |
| Front Suspension Assembly . . . . .                                     | 24 |
| Coil Over Shock Assembly No. 120-7616 . . . . .                         | 27 |
| Hydraulic Cylinder Assembly No. 125-0720 . . . . .                      | 28 |
| Pedal Assembly . . . . .                                                | 29 |
| Parking Brake Lever and Cable Assembly . . . . .                        | 30 |
| Control Console Mount Assembly . . . . .                                | 31 |
| Gear Shift and Drift Lock Control Assembly . . . . .                    | 32 |
| Shift Assembly No. 106-7887. . . . .                                    | 33 |
| Control Console Assembly . . . . .                                      | 34 |
| Hood, Dash and Headlight Assembly . . . . .                             | 35 |
| Seat Base and Front Fender Assembly . . . . .                           | 36 |
| Hydraulic Steering Assembly . . . . .                                   | 37 |
| Hydraulic Pump Assembly No. 121-6545. . . . .                           | 39 |
| Steer Valve Assembly No. 117-0707. . . . .                              | 40 |
| Boom Lift Hydraulic Assembly . . . . .                                  | 41 |
| Hydraulic Cylinder Assembly No. 117-0701. . . . .                       | 42 |
| On-Off Boom Lift Valve Assembly No. 136-2400 . . . . .                  | 43 |
| Engine Mounting Assembly . . . . .                                      | 44 |
| Pump Assembly No. 132-7767 . . . . .                                    | 46 |
| Exhaust Assembly . . . . .                                              | 47 |
| Fuel System Assembly . . . . .                                          | 48 |
| Fuel Tank Assembly No. 115-9048 . . . . .                               | 49 |
| Driveshaft Connection Assembly . . . . .                                | 50 |
| Driveshaft Assembly No. 119-6040. . . . .                               | 51 |
| Clutch and Bell Housing Assembly . . . . .                              | 52 |
| Spray Tank Assembly . . . . .                                           | 53 |
| Tank Assembly No. 121-6491 . . . . .                                    | 55 |
| Spray Tank Lid Assembly No. 119-9380. . . . .                           | 56 |
| Filter Assembly No. 130-7096 . . . . .                                  | 57 |
| Spray Tank Valve Assembly . . . . .                                     | 58 |
| Valve Mount Assembly . . . . .                                          | 59 |
| On/Off Manifold Valve Kit No. 127-9803. . . . .                         | 60 |
| Bypass Valve Assembly No. 127-9805. . . . .                             | 61 |
| Agitation Manifold Assembly . . . . .                                   | 62 |
| Regulating Valve Body Assembly No. 127-9804. . . . .                    | 63 |
| Manifold Valve Kit No. 131-7256 . . . . .                               | 64 |

Contents (continued)

Flow Meter Assembly No. 106-1038..... 65

Hose Assembly..... 66

Main Wiring Harness and Battery Assembly ..... 68

Center Boom Mount Assembly..... 69

LH Single Turret Body Assembly No. 108-3725 ..... 71

 
Double Turret Body Assembly No. 108-3727 ..... 72

RH Single Body Turret Assembly No. 108-3726 ..... 73

Boom Pivot Assembly ..... 74

Left and Right Hand Boom Assembly ..... 75


Attachments and Accessories ..... 76

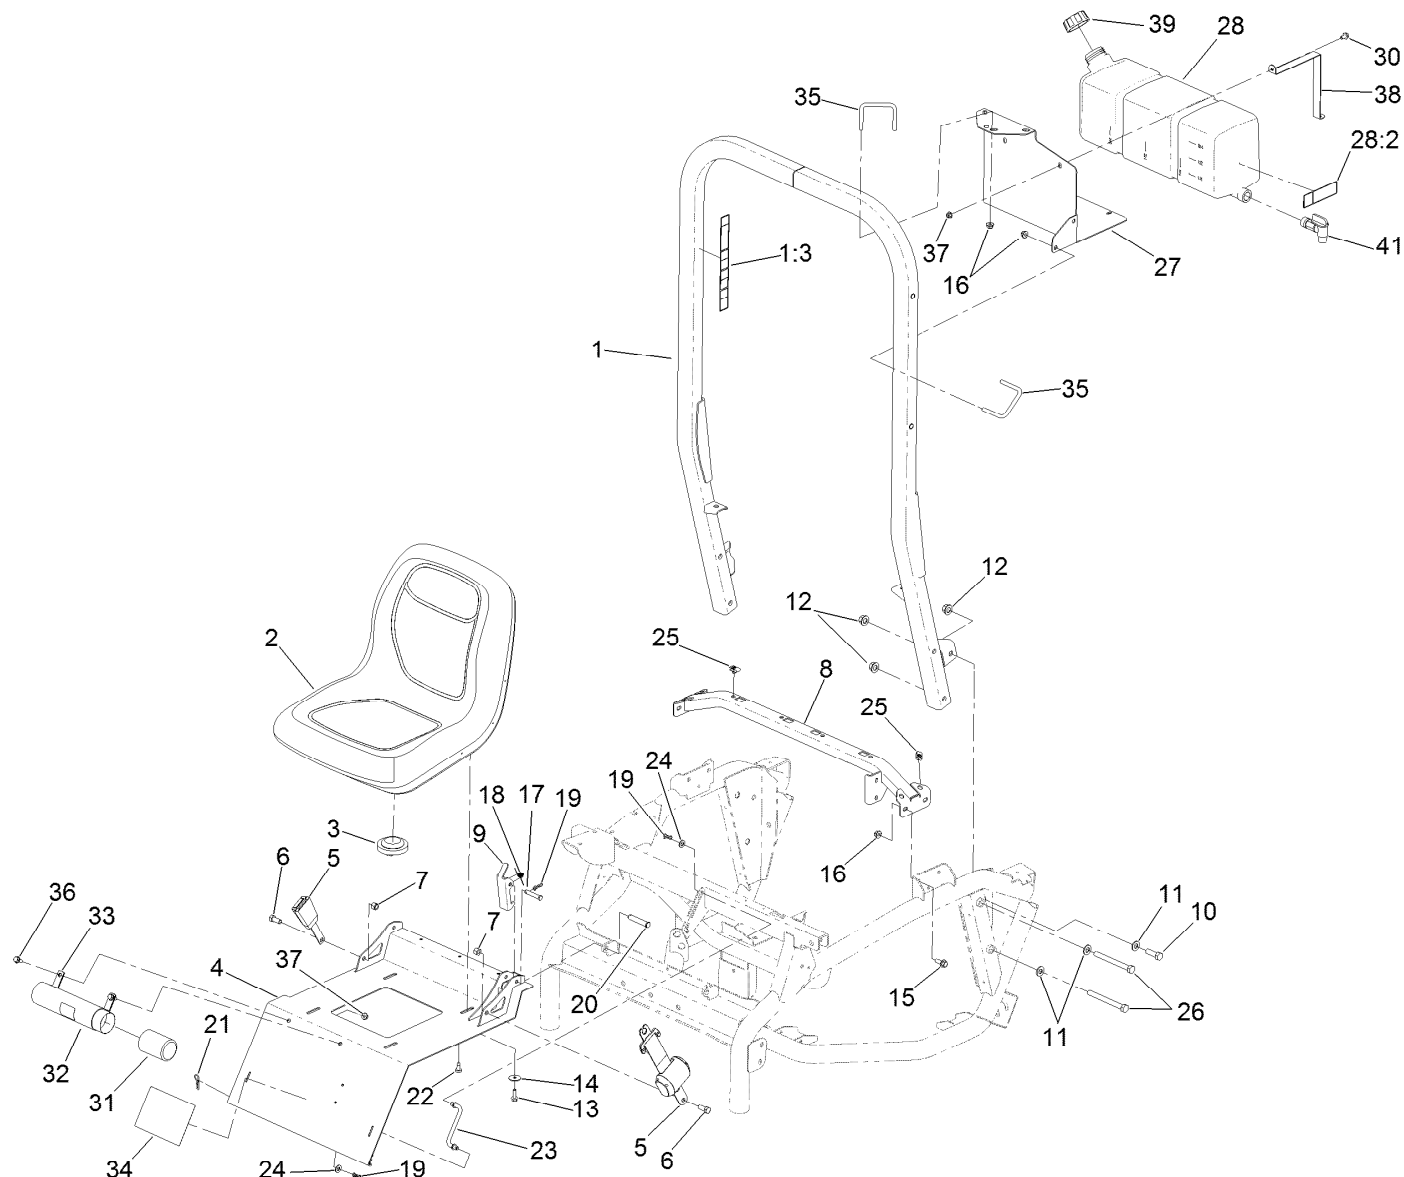

## Seat and Roll-Over Protection System Assembly

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 127-3918    | 1    | ROPS ASM             |
| 1:3  | 127-3939    | 1    | Decal-ROPS           |
| 2    | 112-2923    | 1    | Seat ASM             |
| 3    | 100-3524    | 1    | Switch-Seat          |
| 4    | 125-0872-03 | 1    | Plate-Seat           |
| 5    | 110-0413    | 1    | Seatbelt-Retractable |
| 6    | 3212-4      | 2    | Screw-HH             |
| 7    | 3296-7      | 2    | Nut-Lock             |
| 8    | 125-0910-03 | 1    | Crossmember-Seat     |
| 9    | 125-0916    | 1    | Latch-Seat           |
| 10   | 325-6       | 2    | Screw-HH             |
| 11   | 3256-26     | 6    | Washer-Flat          |
| 12   | 99-5107     | 6    | Nut-HF Nylock        |
| 13   | 33104-025   | 4    | Screw-HHF            |
| 14   | 3256-57     | 4    | Washer-Flat          |
| 15   | 3234-42     | 4    | Screw-HHF            |
| 16   | 104-8301    | 8    | Nut-HF, NI           |
| 17   | 283-82      | 1    | Pin-Clevis           |
| 18   | 104-4821    | 1    | Spring-Torsion       |
| 19   | 119-1415    | 3    | Pin-Cotter, Locking  |
| 20   | 100-6541    | 2    | Pin-Clevis           |
 
| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 21   | 3290-467    | 2    | Pin-Hair                  |
| 22   | 87-8460     | 3    | Bumper-Rubber             |
| 23   | 125-0909    | 1    | Rod-Prop, Seat            |
| 24   | 3256-24     | 2    | Washer-Plain              |
| 25   | 94-2413     | 3    | Nut-U                     |
| 26   | 325-19      | 4    | Screw-HH                  |
| 27   | 131-5797-03 | 1    | Mount-Tank, Eye Wash      |
| 28   | 132-7745    | 1    | Fresh Water Tank ASM      |
| 28:2 | 120-0616    | 3    | Decal-Water, Fresh        |
| 30   | 3234-7      | 4    | Screw-HHF                 |
| 31   | 104-7048    | 1    | Cap-Housing               |
| 32   | 104-7050    | 1    | Tube-Manual               |
| 33   | 2412-133    | 2    | Clamp-R                   |
| 34   | 133-0382    | 1    | Decal-Service/Maintenance |
| 35   | 119-6727    | 2    | U-Bolt                    |
| 36   | 3234-47     | 2    | Screw-HHF                 |
| 37   | 104-8300    | 6    | Nut-HF, NI                |
| 38   | 132-7628-03 | 2    | Band-Tank, Eye Wash       |
| 39   | 106-5052    | 1    | Cap-Water, Fresh          |
| 41   | 100-7011    | 1    | Spigot-90 DEG             |

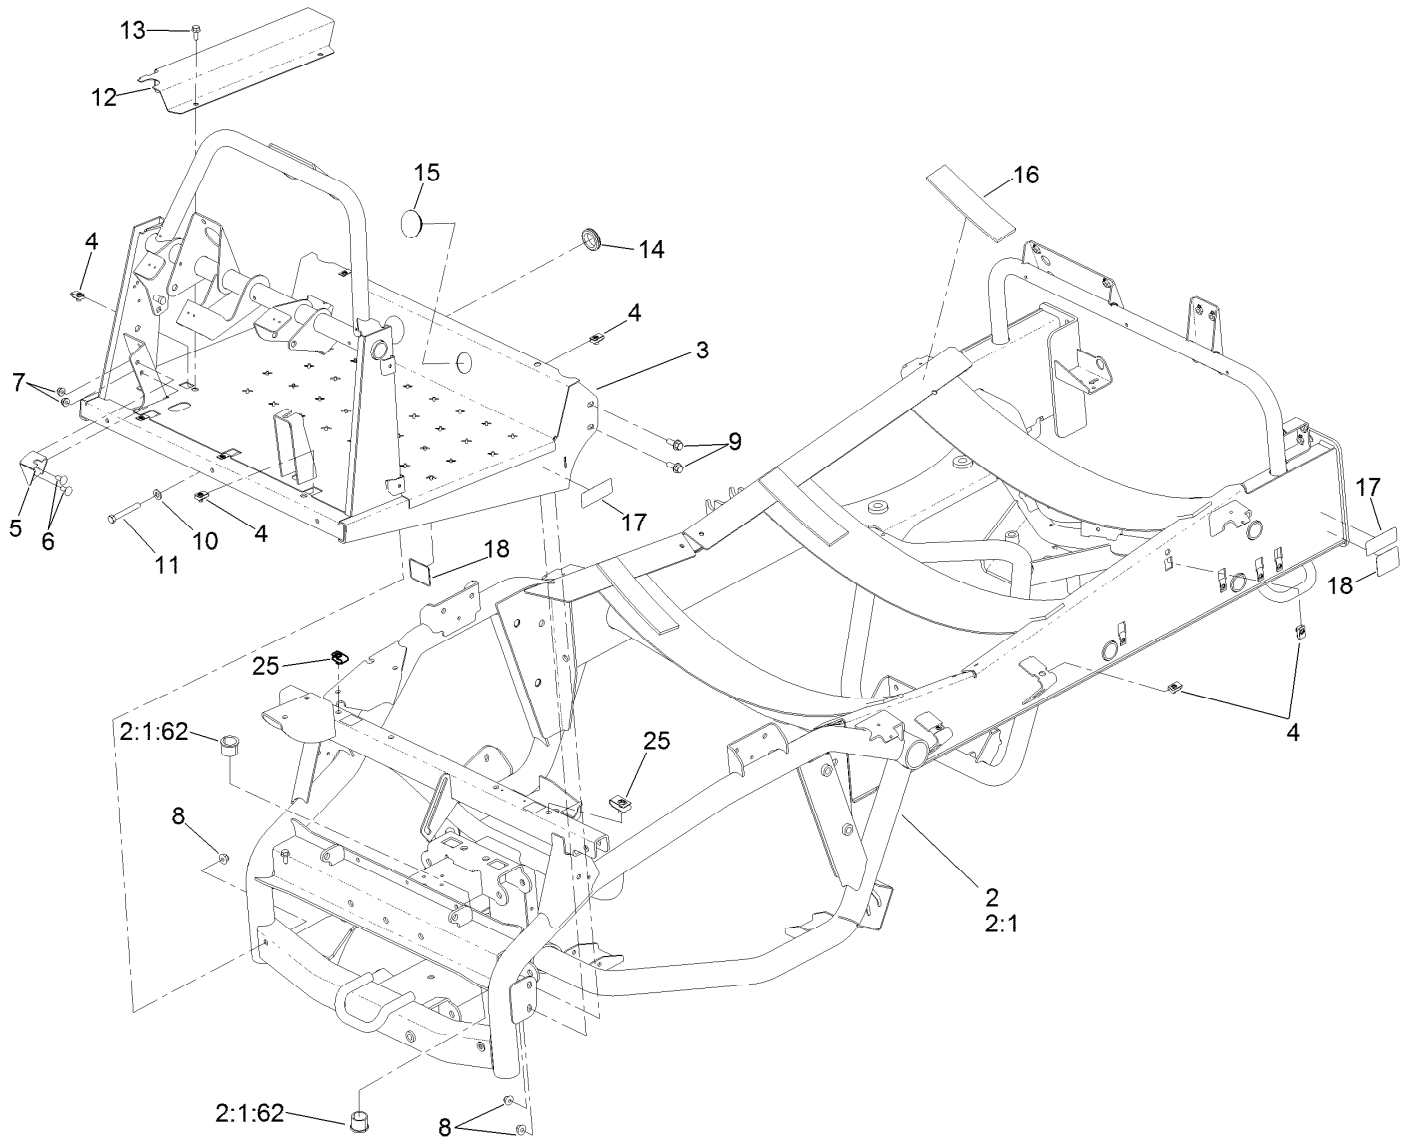


## Frame Assembly

| Ref.   | Part Number | Qty. | Description          |
|--------|-------------|------|----------------------|
| 2      | 121-6501-03 | 1    | Frame ASM            |
| 2:1    |             | 1    | Frame ●              |
| 2:1:62 | 104-0015    | 2    | Bushing-Flange       |
| 3      | 125-0812-03 | 1    | Platform             |
| 4      | 94-2413     | 19   | Nut-U                |
| 5      | 106-2421    | 1    | Bracket-Mount, Cable |
| 6      | 3230-23     | 2    | Bolt-CARR            |
| 7      | 104-8300    | 2    | Nut-HF, NI           |
| 8      | 104-8301    | 6    | Nut-HF, NI           |
| 9      | 3234-42     | 4    | Screw-HHF            |

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 10   | 3256-24     | 2    | Washer-Plain        |
| 11   | 323-13      | 2    | Screw-HH            |
| 12   | 125-0871-03 | 1    | Cover-Hose          |
| 13   | 3234-47     | 2    | Screw-HHF           |
| 14   | 240-3       | 2    | Grommet-Rubber      |
| 15   | 121-3397    | 2    | Plug-Grommet        |
| 16   | 125-8094    | 6    | Pad-Tank            |
| 17   | 106-9206    | 4    | Decal-Torque, Wheel |
| 18   | 125-6694    | 3    | Decal-Tie Down      |
| 25   | 115-7721    | 2    | Nut-Clip, U         |

 
● Not serviced separately

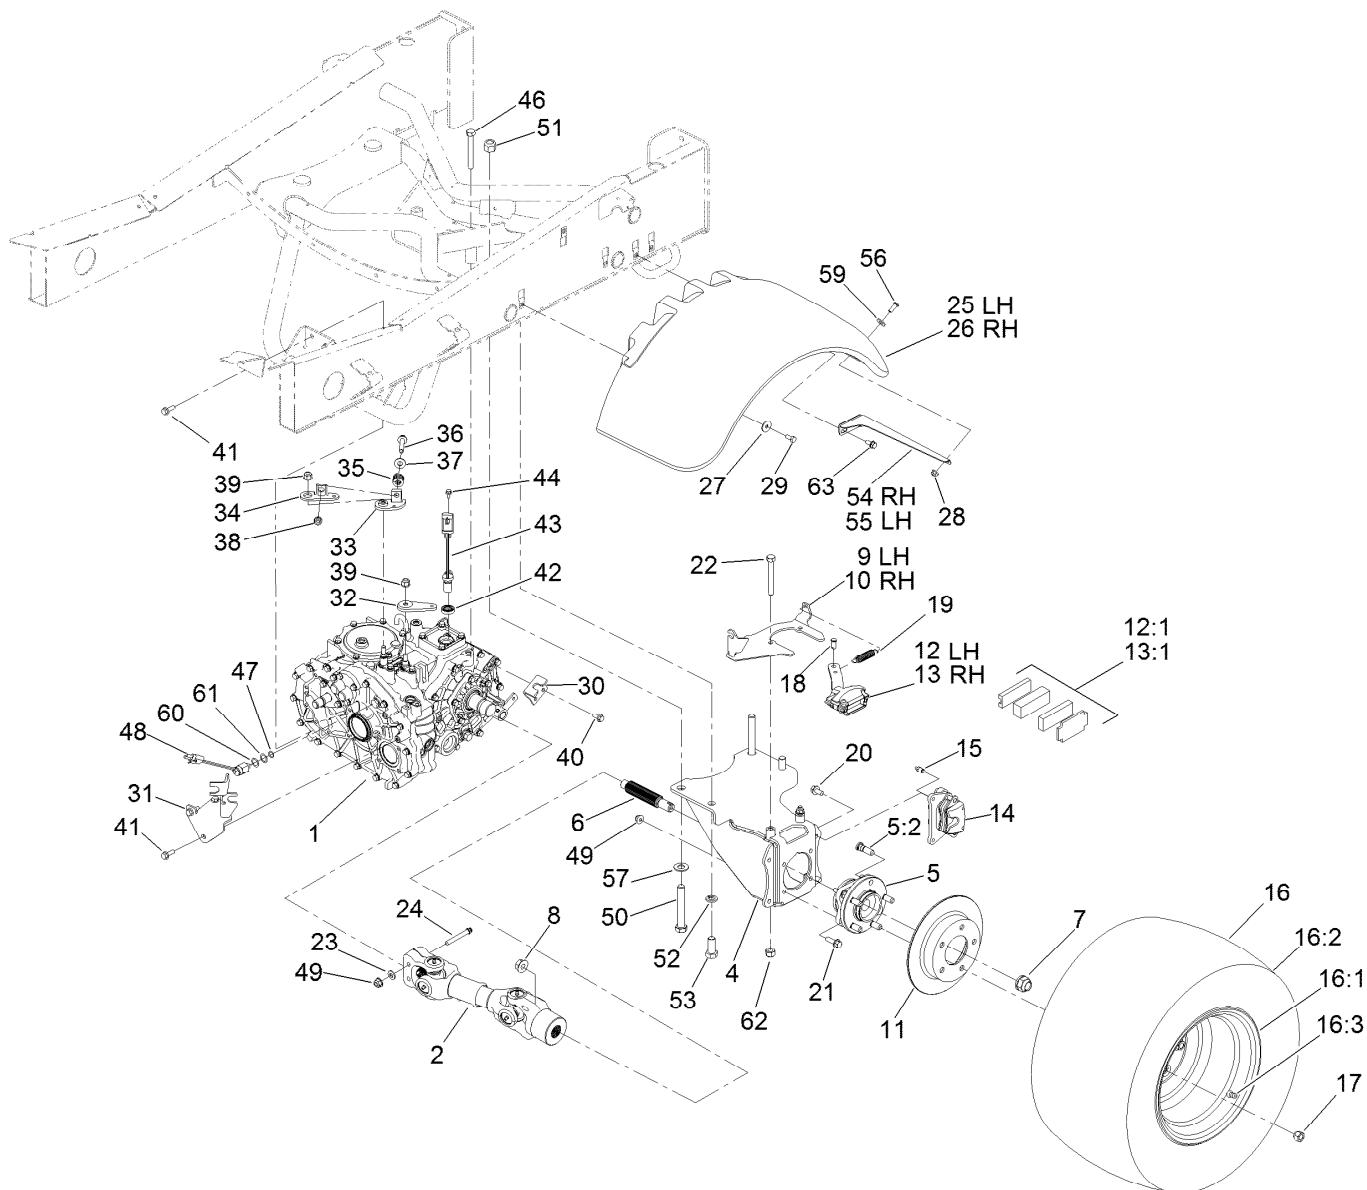

## Rear Drive Assembly

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 120-7610    | 1    | Transaxle ASM          |
| 2    | 114-8367    | 2    | Driveshaft ASM         |
| 4    | 125-0928-03 | 2    | RH Hub ASM             |
| 5    | 121-9751    | 2    | Hub-Bearing, Wheel     |
| 5:2  | 121-9752    | 5    | Stud-Wheel             |
| 6    | 115-7771    | 2    | Shaft-Splined          |
| 7    | 115-2164    | 2    | Nut-Spindle            |
| 8    | 104-0753    | 2    | Nut-Flange             |
| 9    | 115-2362-03 | 1    | Bracket-Caliper, LH    |
| 10   | 115-2359-03 | 1    | Bracket-Caliper, RH    |
| 11   | 114-8351    | 2    | Rotor-Brake            |
| 12   | 114-8365    | 1    | Caliper-Mechanical, LH |
| 12:1 | 115-7847    | 1    | Parking Brake Pad Kit  |
| 13   | 114-8366    | 1    | Caliper-Mechanical, RH |
| 13:1 | 115-7847    | 1    | Parking Brake Pad Kit  |
| 14   | 127-7424    | 2    | Brake Caliper ASM      |
| 15   | 119-9509    | 2    | Screw-Bleed            |
| 16   | 117-4838    | 2    | Tire And Wheel ASM     |
| 16:1 | 114-8259    | 1    | Wheel                  |
| 16:2 | 110-5132    | 1    | Tire                   |
| 16:3 | 232-27      | 1    | Stem-Valve             |
 
| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 17   | 242-50      | 10   | Nut-Lug                    |
| 18   | 283-85      | 2    | Pin-Clevis                 |
| 19   | 104-6415    | 2    | Spring-Return, Pedal       |
| 20   | 3234-1      | 4    | Screw-HHF                  |
| 21   | 3234-24     | 8    | Screw-HHF                  |
| 22   | 323-9       | 4    | Screw-HH                   |
| 23   | 80-6990     | 4    | Washer-Hardened            |
| 24   | 98-2939     | 4    | Screw-Cap                  |
| 25   | 112-6805    | 1    | Fender-RH                  |
| 26   | 112-6806    | 1    | Fender-LH                  |
| 27   | 3256-82     | 6    | Washer-Flat                |
| 28   | 104-8300    | 2    | Nut-HF, NI                 |
| 29   | 322-5       | 6    | Screw-HH                   |
| 30   | 87-4470     | 1    | Bracket-Lock, Differential |
| 31   | 107-8749-03 | 1    | Bracket-Cable              |
| 32   | 87-7960     | 1    | Lever-Shift                |
| 33   | 87-7970     | 1    | Arm-Shift                  |
| 34   | 87-8250     | 1    | Plate-Arm, Shift           |
| 35   | 87-6910     | 1    | Spring-Compression         |
| 36   | 66-9302     | 1    | Screw-HHF Lock             |
| 37   | 3256-4      | 1    | Washer-Flat                |

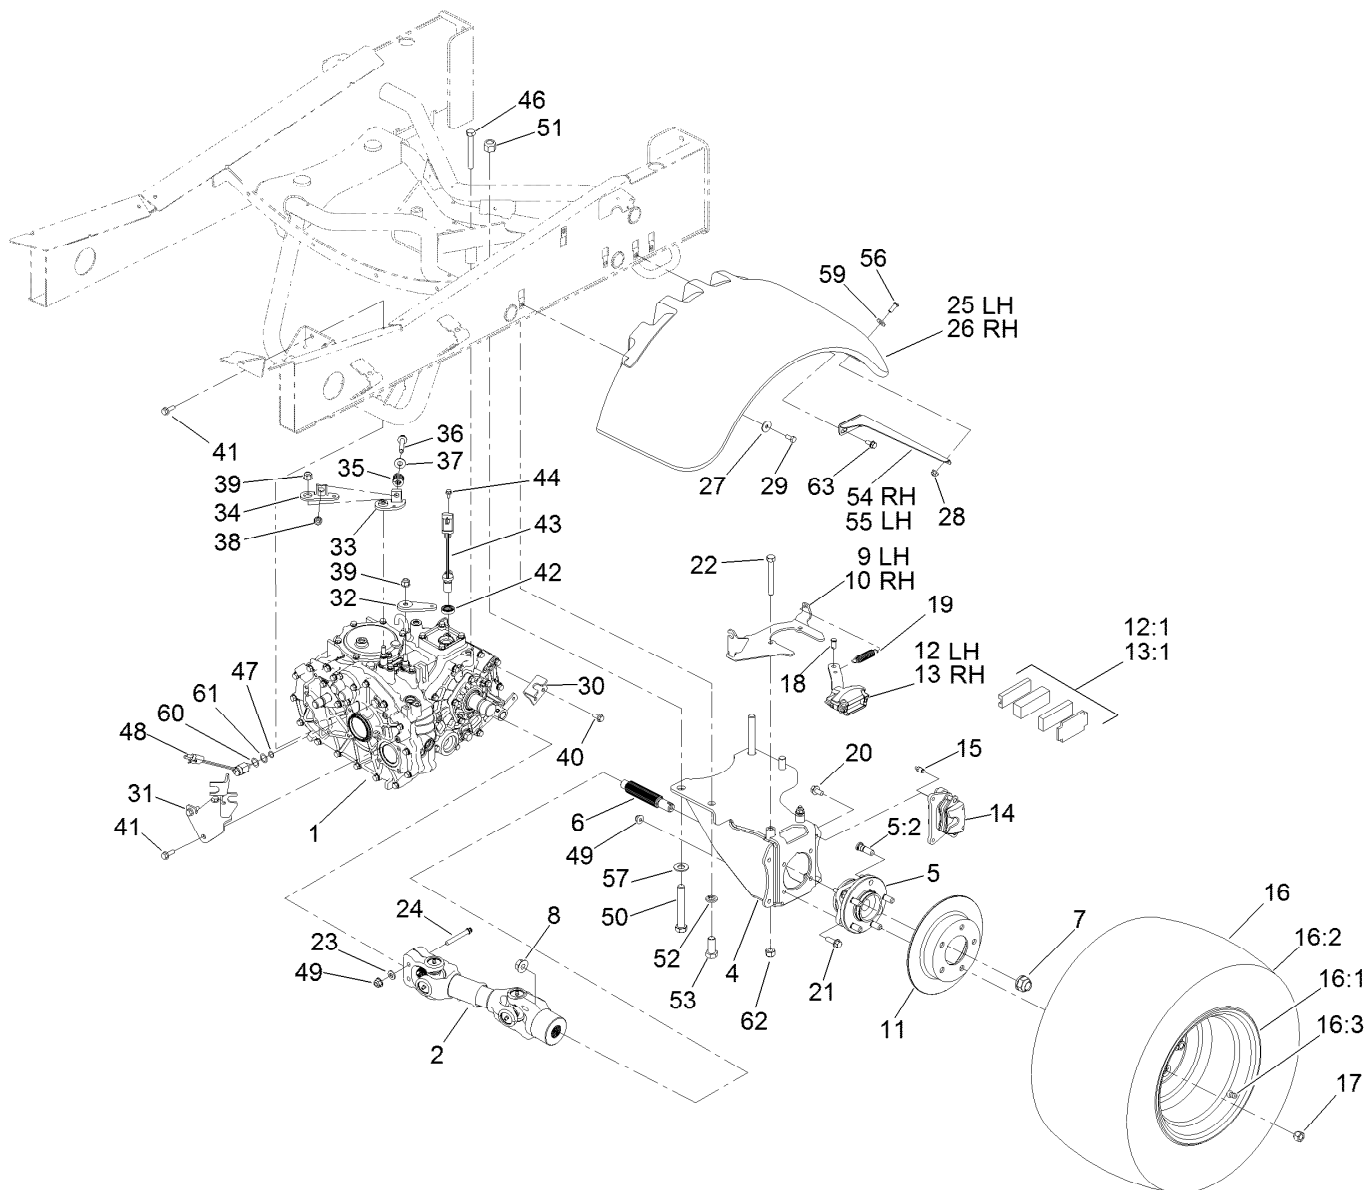


## Rear Drive Assembly (continued)

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 38   | 3290-357    | 1    | Nut-HSF             |
| 39   | 103-9511    | 2    | Nut-Flg             |
| 40   | 98-7977     | 5    | Screw-HHF           |
| 41   | 33104-025   | 4    | Screw-HHF           |
| 42   | 92-3735     | 1    | Seal-Sensor, Oil    |
| 43   | 120-4800    | 1    | Sensor-Geartooth    |
| 44   | 33103-012   | 1    | Screw-HHF           |
| 46   | 33116-090   | 2    | Screw-HH            |
| 47   | 237-30      | 1    | O-Ring              |
| 48   | 87-6710     | 1    | Switch-Transmission |
| 49   | 104-8301    | 12   | Nut-HF, NI          |
| 50   | 327-29      | 4    | Screw-HH            |
 
| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 51   | 127-3958    | 4    | Nut-Lock, NI   |
| 52   | 3253-23     | 4    | Washer-Lock    |
| 53   | 327-4       | 4    | Screw-HH       |
| 54   | 125-7959-03 | 1    | Bracket-Fender |
| 55   | 125-7960-03 | 1    | Bracket-Fender |
| 56   | 3274-32     | 2    | Screw-HSBH     |
| 57   | 3256-27     | 4    | Washer-Flat    |
| 59   | 3256-71     | 2    | Washer-Flat    |
| 60   | 125-8106    | 1    | Shim           |
| 61   | 125-8107    | 1    | Shim           |
| 62   | 97-1204     | 4    | Nut-Hex        |
| 63   | 3234-47     | 4    | Screw-HHF      |




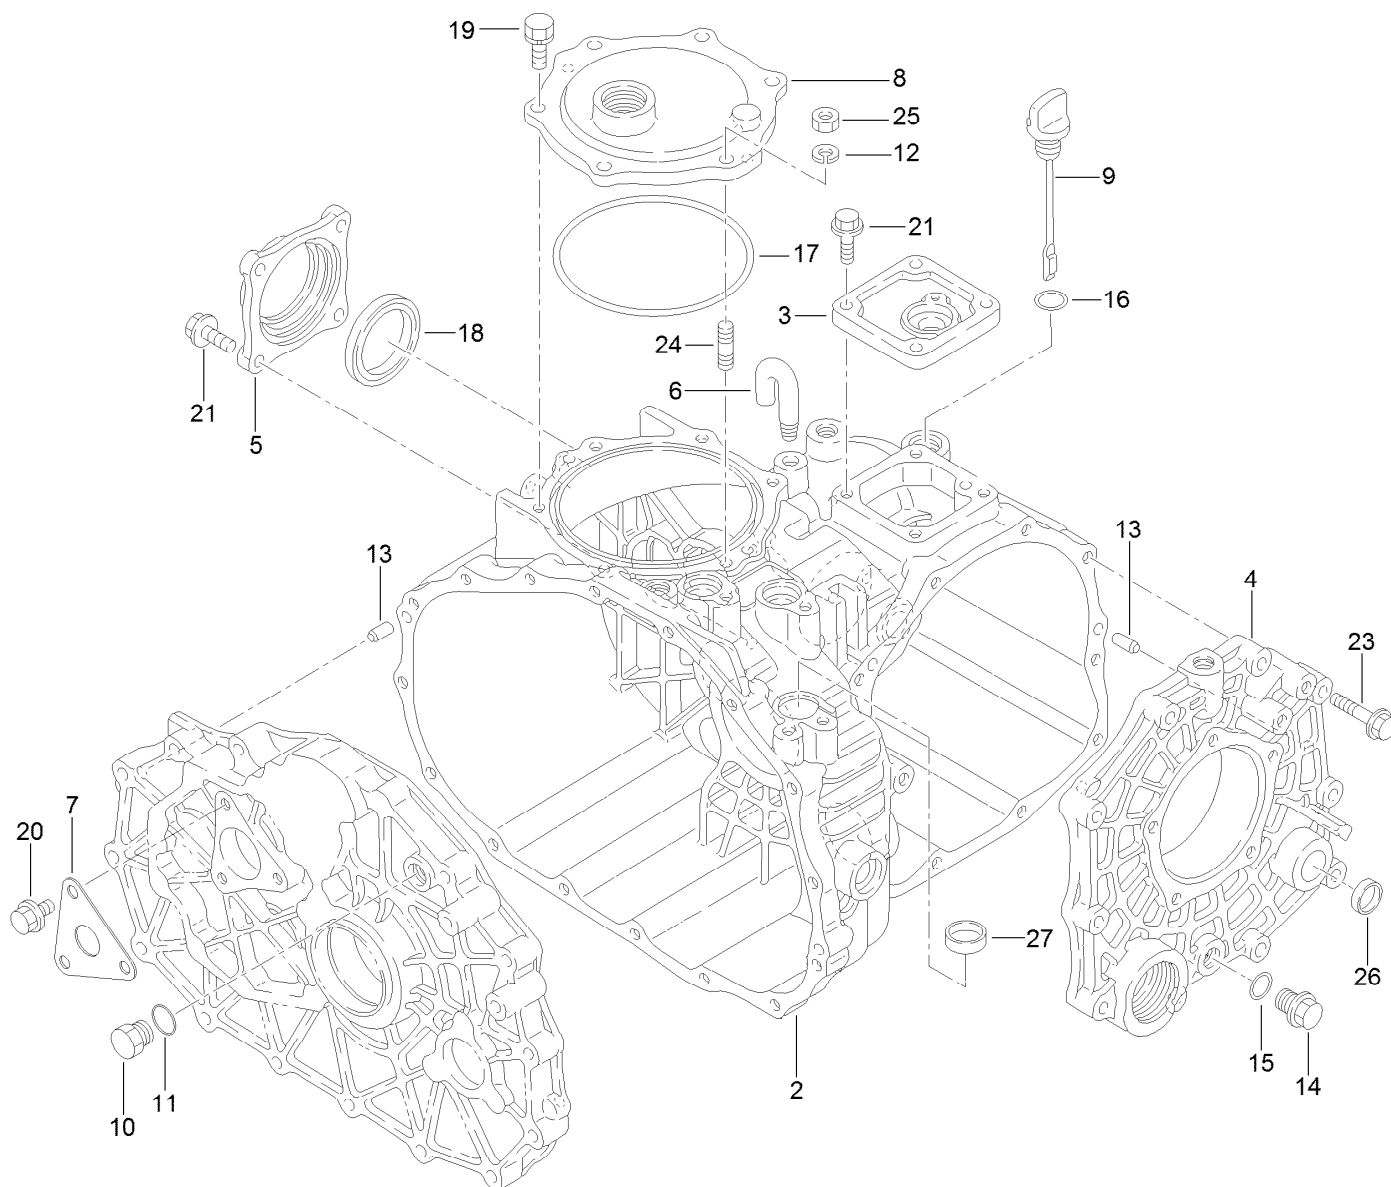

## Case Assembly Transaxle Assembly No. 120-7610


| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 2    | 92-0651     | 1    | Case-Transmission  |
| 3    | 92-3736     | 1    | Cover ASM          |
| 4    | 92-0653     | 1    | Cover-Side         |
| 5    | 92-0655     | 1    | Cover-Seal, Axle   |
| 6    | 127-3925    | 1    | Breather           |
| 7    | 100-8594    | 1    | Cover-Shaft, Input |
| 8    | 100-8595    | 1    | Cover-PTO          |
| 9    | 92-0662     | 1    | Cap-Oil            |
| 10   | 100-6924    | 1    | Plug               |
| 11   | 100-6925    | 1    | Packing            |
| 12   | 92-0762     | 1    | Washer-Spring      |
| 13   | 92-0765     | 4    | Pin-Parallel       |
| 14   | 92-0773     | 1    | Plug-Drain         |
 
| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 15   | 92-0787     | 1    | O-Ring      |
| 16   | 92-0788     | 1    | O-Ring      |
| 17   | 92-0790     | 1    | O-Ring      |
| 18   | 92-0793     | 1    | Seal-Oil    |
| 19   | 92-0796     | 5    | Bolt        |
| 20   | 100-6928    | 3    | Bolt        |
| 21   | 33114-025   | 8    | Screw-HH    |
| 23   | 33114-040   | 10   | Screw-HH    |
| 24   | 92-0804     | 1    | Stud        |
| 25   | 48-7930     | 1    | Nut         |
| 26   | 100-6926    | 1    | Cap-Sealing |
| 27   | 100-6927    | 1    | Cap-Sealing |

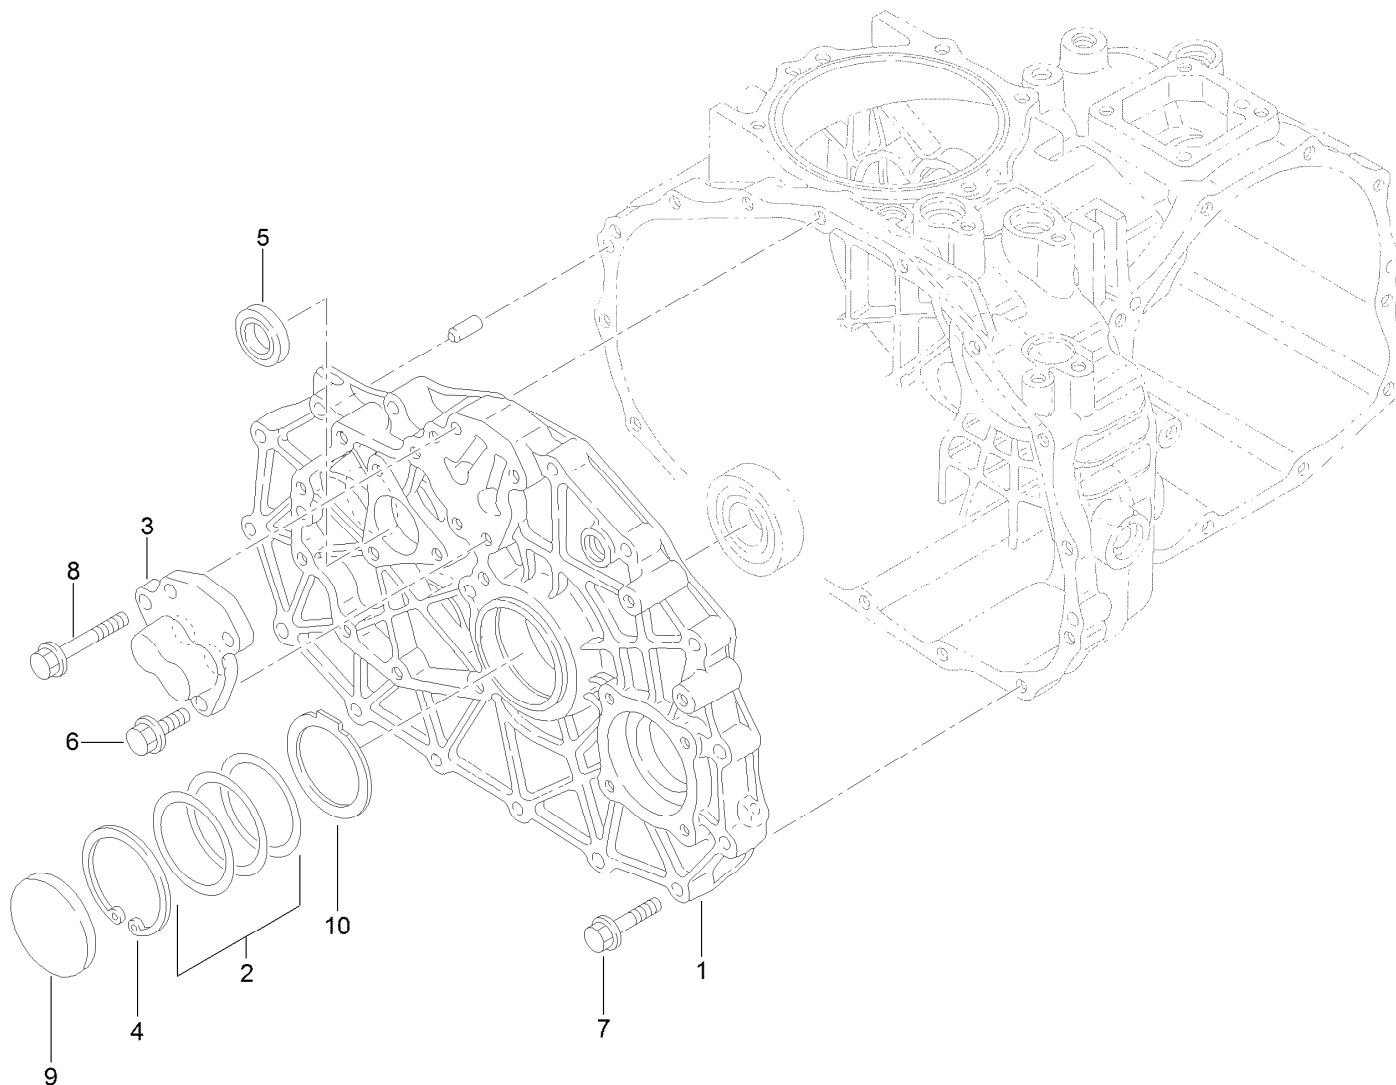

## Center Plate Assembly Transaxle Assembly No. 120-7610

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 100-4461           | 1           | Plate-Center       |
| 2           | 100-4460           | 1           | Shim-Set           |
| 3           | 92-0706            | 1           | Shaft-Fork         |
| 4           | 92-0759            | 1           | Ring-Snap          |
| 5           | 92-0791            | 1           | Seal-Oil           |
| 6           | 33114-025          | 3           | Screw-HH           |
| 7           | 33114-040          | 15          | Screw-HH           |
| 8           | 48-7560            | 1           | Bolt-HH            |
| 9           | 92-0807            | 1           | Cap-Sealing        |
| 10          | 100-4465           | 1           | Shim (W/Tab)       |

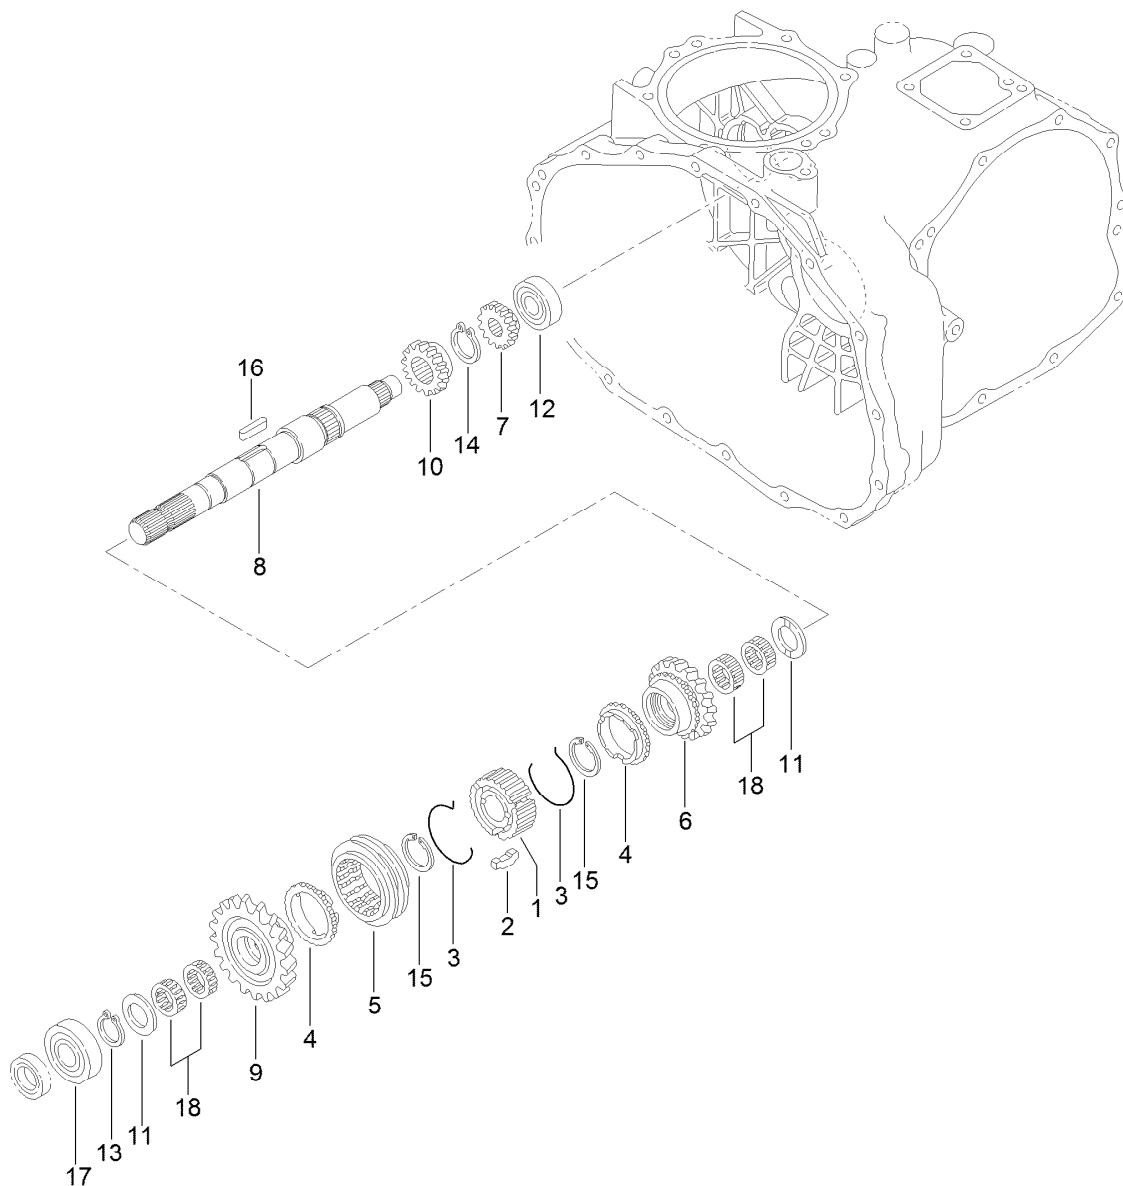

## Main Shaft Assembly Transaxle Assembly No. 120-7610

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 92-0664     | 1    | Hub-Synchro         |
| 2    | 92-0665     | 3    | Key-Synchro         |
| 3    | 92-0666     | 2    | Spring-Synchro      |
| 4    | 92-0667     | 2    | Ring-Synchro        |
| 5    | 92-0668     | 1    | Shifter-Synchro     |
| 6    | 127-3926    | 1    | Gear-Main, 23T      |
| 7    | 92-0673     | 1    | Gear-Main, 14 Tooth |
| 8    | 100-8596    | 1    | Shaft-Main          |
| 9    | 108-3694    | 1    | Gear-Main, 36T      |

 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 10   | 100-8598    | 1    | Gear-Main, 20 Tooth |
| 11   | 92-0740     | 2    | Washer-Thrust       |
| 12   | 92-0650     | 1    | Bearing             |
| 13   | 92-0753     | 1    | Ring-Snap           |
| 14   | 92-0754     | 1    | Ring-Snap           |
| 15   | 92-0763     | 2    | Ring-Snap           |
| 16   | 92-0772     | 1    | Key                 |
| 17   | 251-8       | 1    | Bearing-Ball        |
| 18   | 92-0781     | 4    | Bearing-Needle      |

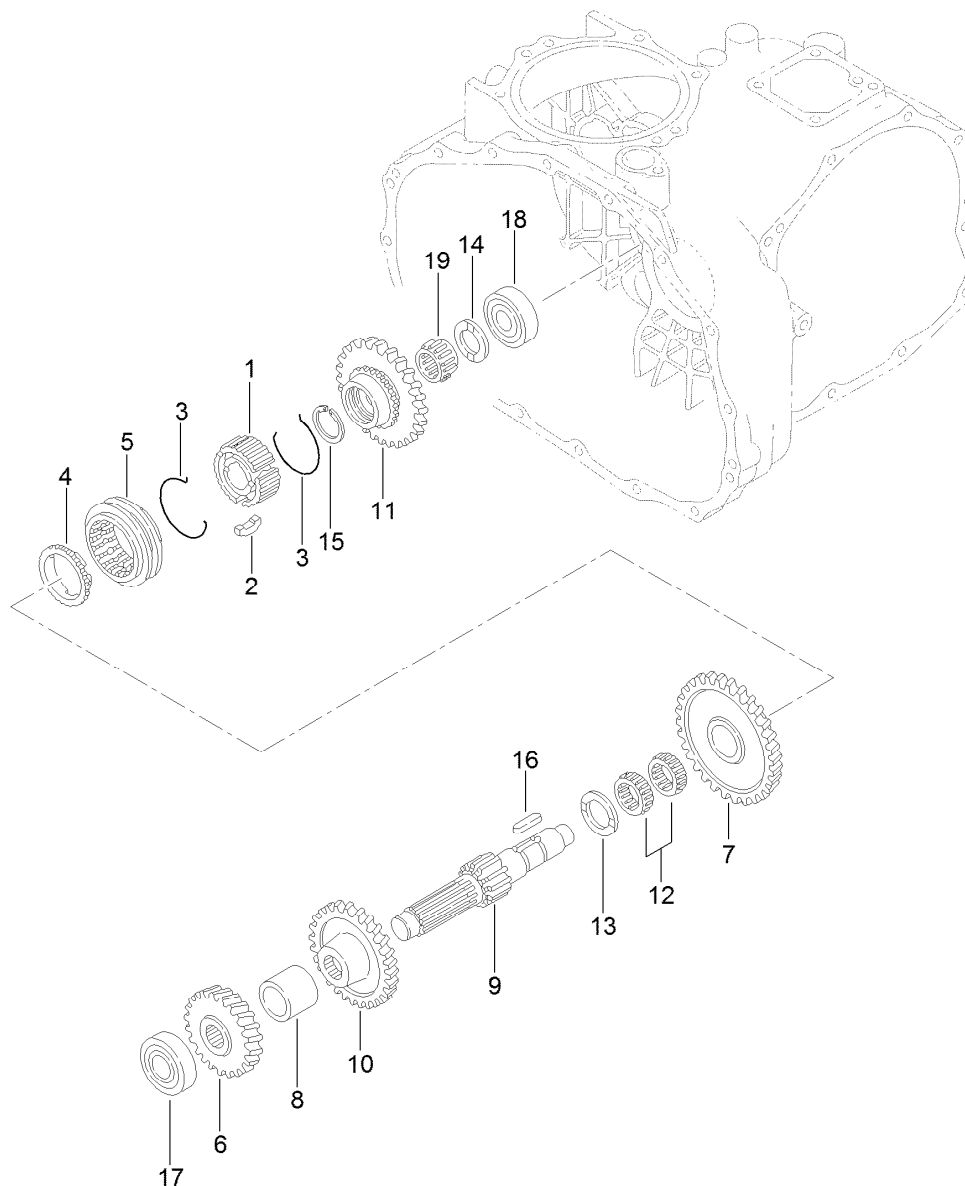

## Reduction Shaft Assembly Transaxle Assembly No. 120-7610


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 1           | 92-0664            | 1           | Hub-Synchro         |
| 2           | 92-0665            | 3           | Key-Synchro         |
| 3           | 92-0666            | 2           | Spring-Synchro      |
| 4           | 92-0667            | 1           | Ring-Synchro        |
| 5           | 92-0668            | 1           | Shifter-Synchro     |
| 6           | 100-8599           | 1           | Gear-Red, 25 Tooth  |
| 7           | 108-3697           | 1           | Gear-Reduction, 47T |
| 8           | 100-8601           | 1           | Collar              |
| 9           | 127-3927           | 1           | Shaft-Reduction     |
| 10          | 127-3928           | 1           | Gear-Reduction, 31T |
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|--------------------------|
| 11          | 92-0819            | 1           | Gear-Reduction, 40 Tooth |
| 12          | 92-0681            | 2           | Bearing-Needle           |
| 13          | 92-0682            | 1           | Washer-Thrust            |
| 14          | 92-0740            | 1           | Washer-Thrust            |
| 15          | 92-0763            | 1           | Ring-Snap                |
| 16          | 92-0772            | 1           | Key                      |
| 17          | 105-7985           | 1           | Bearing                  |
| 18          | 92-0778            | 1           | Bearing                  |
| 19          | 92-0782            | 1           | Bearing-Needle           |

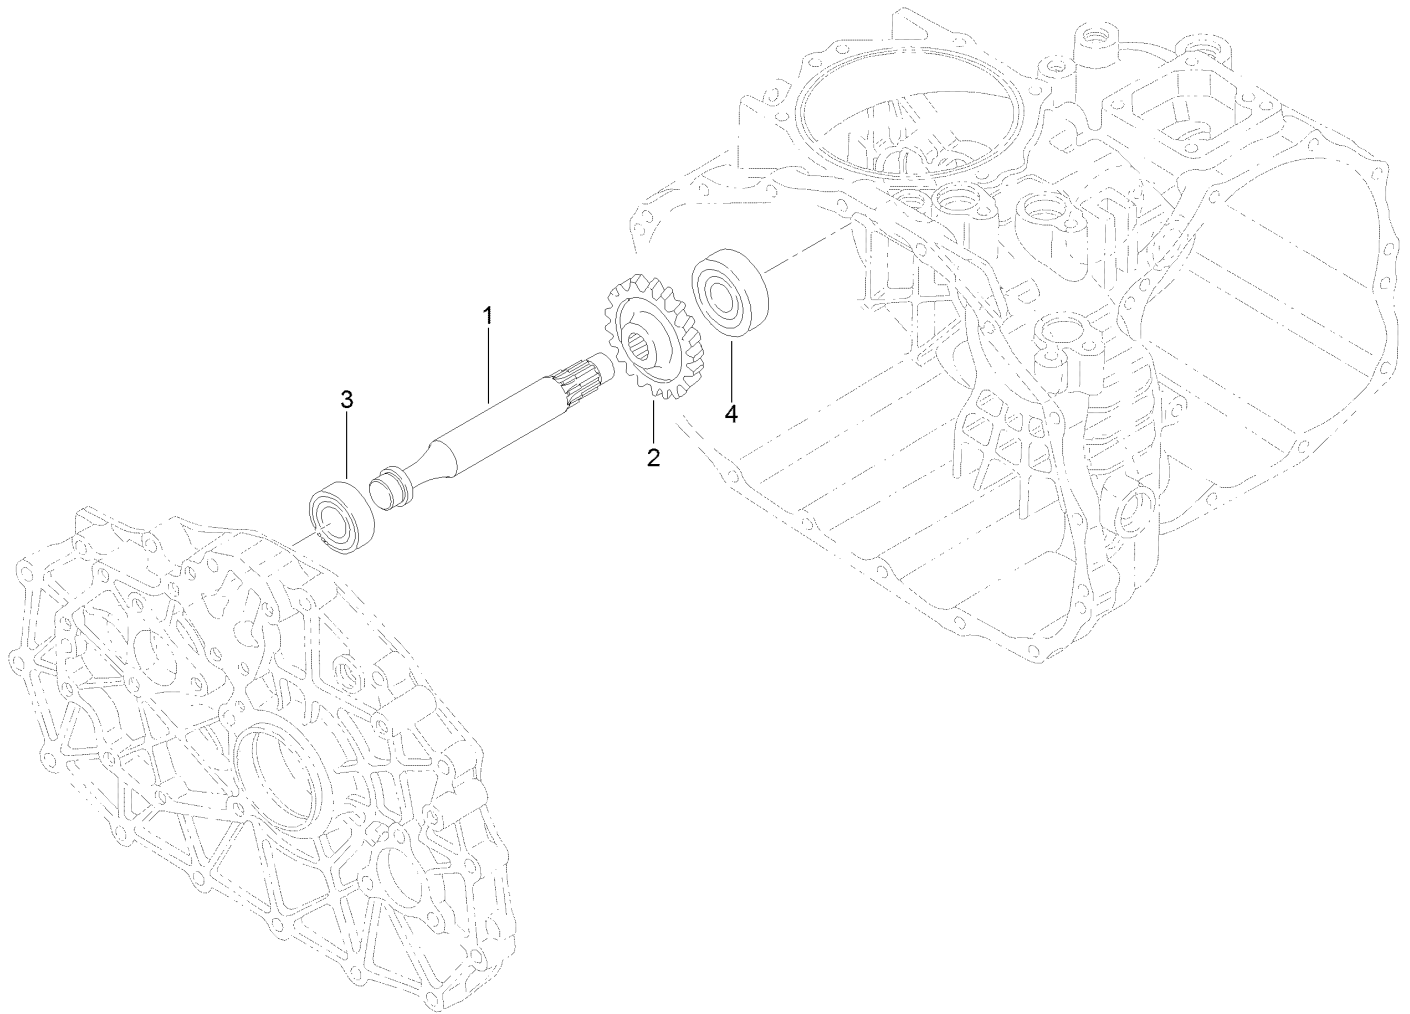

## Reverse Shaft Assembly Transaxle Assembly No. 120-7610
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|
| 1           | 100-8602           | 1           | Shaft-Idler, Reverse   |
| 2           | 92-0684            | 1           | Gear-Reverse, 33 Tooth |
| 3           | 251-346            | 1           | Bearing-Ball           |
| 4           | 92-0778            | 1           | Bearing                |

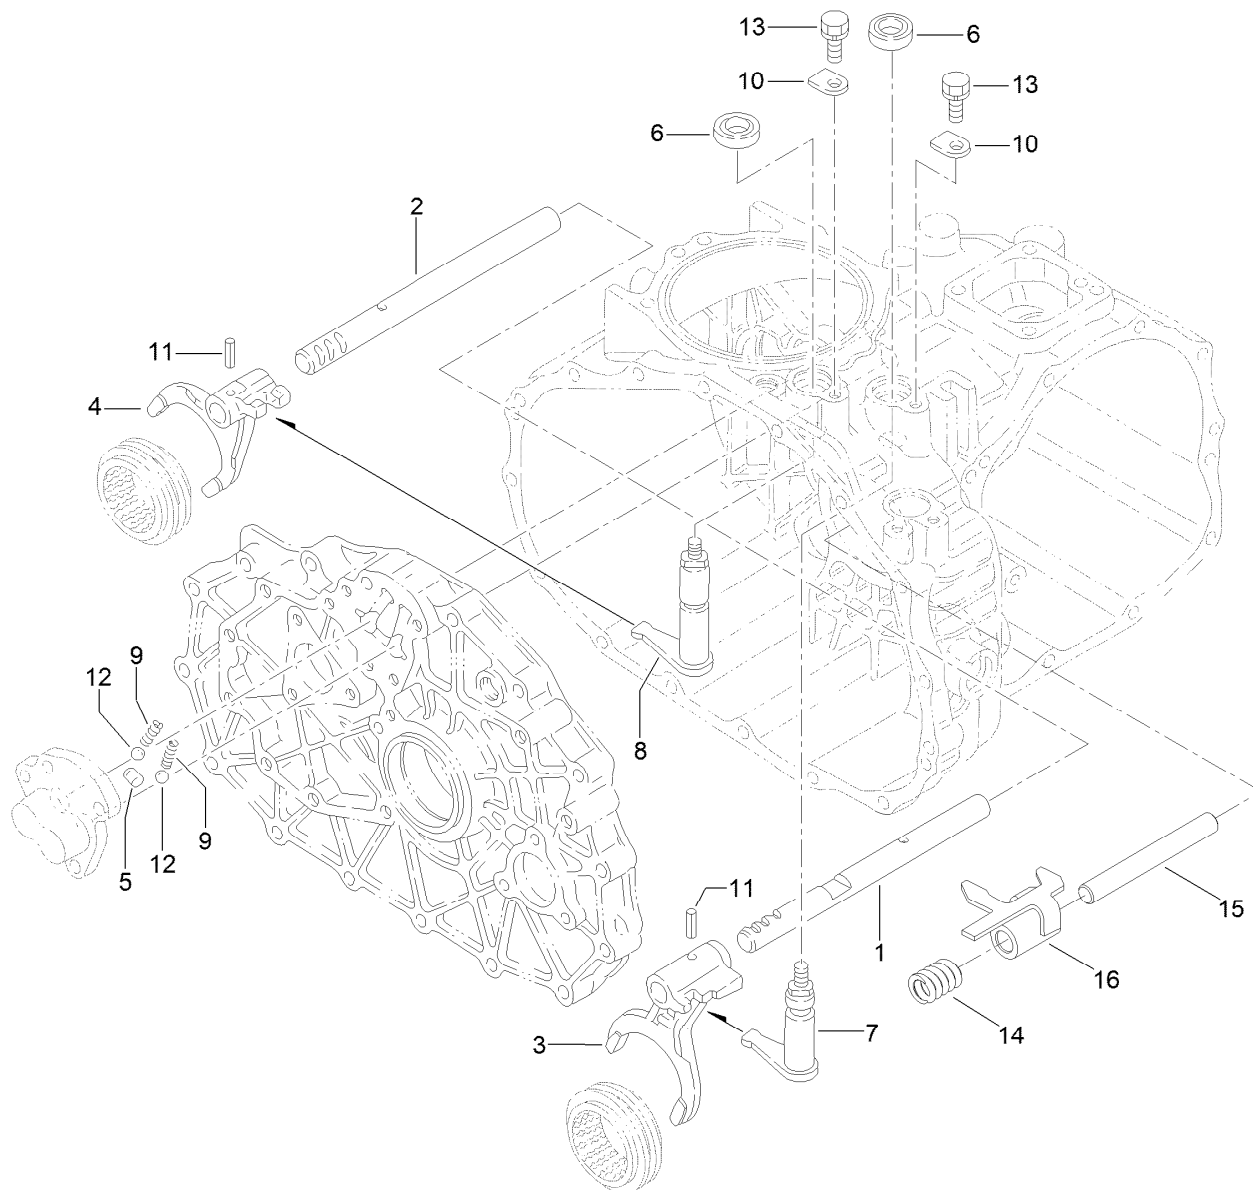


## Main Shift Assembly Transaxle Assembly No. 120-7610

| Ref. | Part Number | Qty. | Description  |
|------|-------------|------|--------------|
| 1    | 92-0698     | 1    | Shaft-Fork   |
| 2    | 92-0699     | 1    | Shaft-Fork   |
| 3    | 92-0700     | 1    | Fork-Shift   |
| 4    | 92-0701     | 1    | Fork-Shift   |
| 5    | 92-0705     | 1    | Lock-Spindle |
| 6    | 92-0729     | 2    | Seal-Oil     |
| 7    | 127-3929    | 1    | Arm-Shift    |
| 8    | 127-3930    | 1    | Arm-Shift    |


| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 9    | 92-0731     | 2    | Spring          |
| 10   | 92-0732     | 2    | Plate-Keeper    |
| 11   | 92-0769     | 2    | Pin-Roll        |
| 12   | 92-0785     | 2    | Ball-Steel      |
| 13   | 33114-016   | 2    | Screw-HH        |
| 14   | 127-3931    | 1    | Spring-Switch ● |
| 15   | 127-3932    | 1    | Shaft-Switch ●  |
| 16   | 127-3933    | 1    | Plate-Switch ●  |

 ● Not illustrated

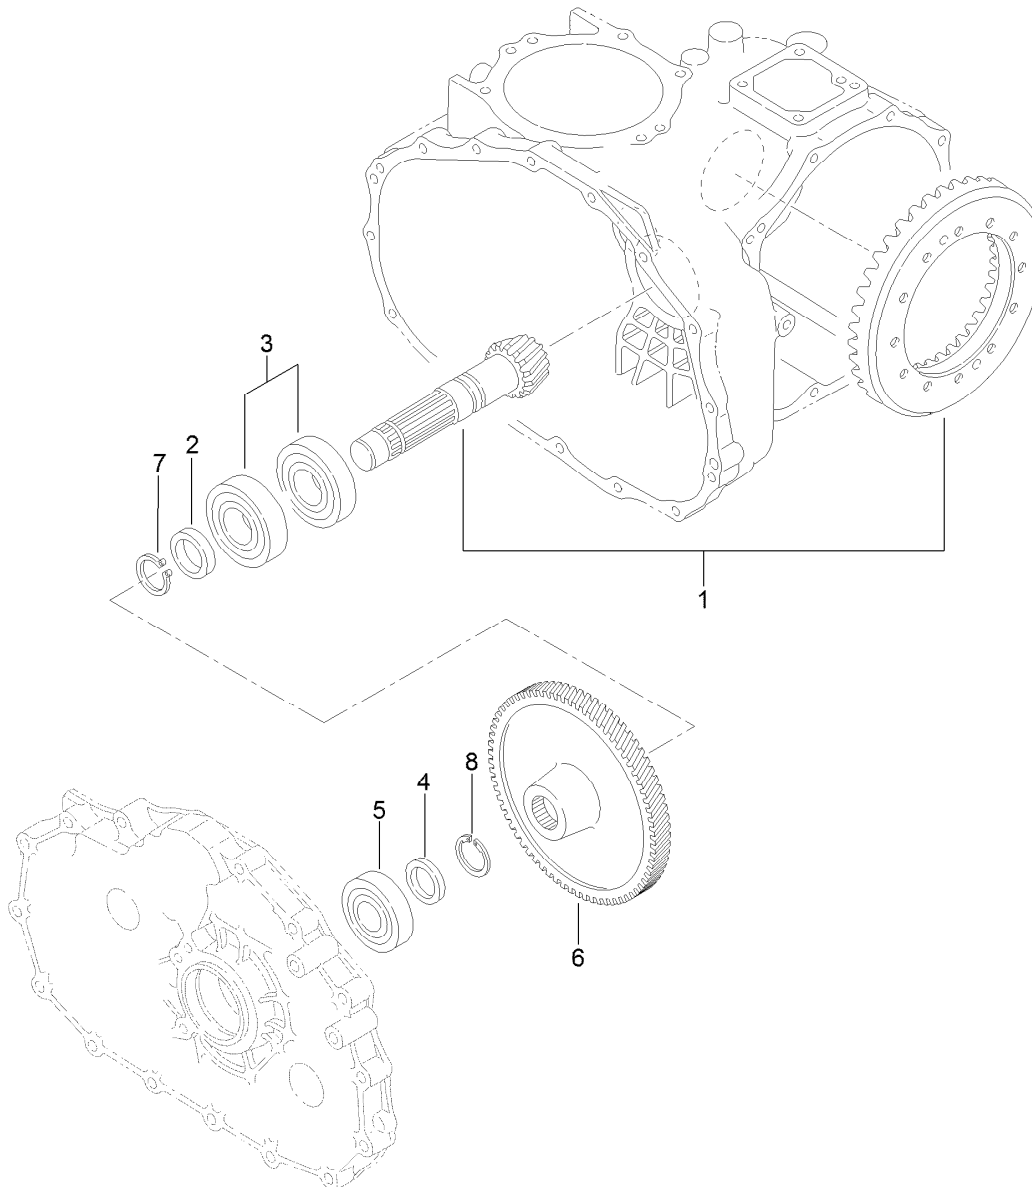

## Counter Shaft Assembly Transaxle Assembly No. 120-7610

 
| Ref. | Part Number | Qty. | Description  |
|------|-------------|------|--------------|
| 1    | 92-0710     | 1    | Gear-Ring    |
| 2    | 92-0713     | 1    | Collar       |
| 3    | 92-0714     | 2    | Bearing      |
| 4    | 92-0716     | 1    | Collar       |
| 5    | 92-0712     | 1    | Bearing-Ball |
| 6    | 100-8603    | 1    | Gear-Count   |
| 7    | 92-0755     | 1    | Ring-Snap    |
| 8    | 92-0764     | 1    | Ring-Snap    |

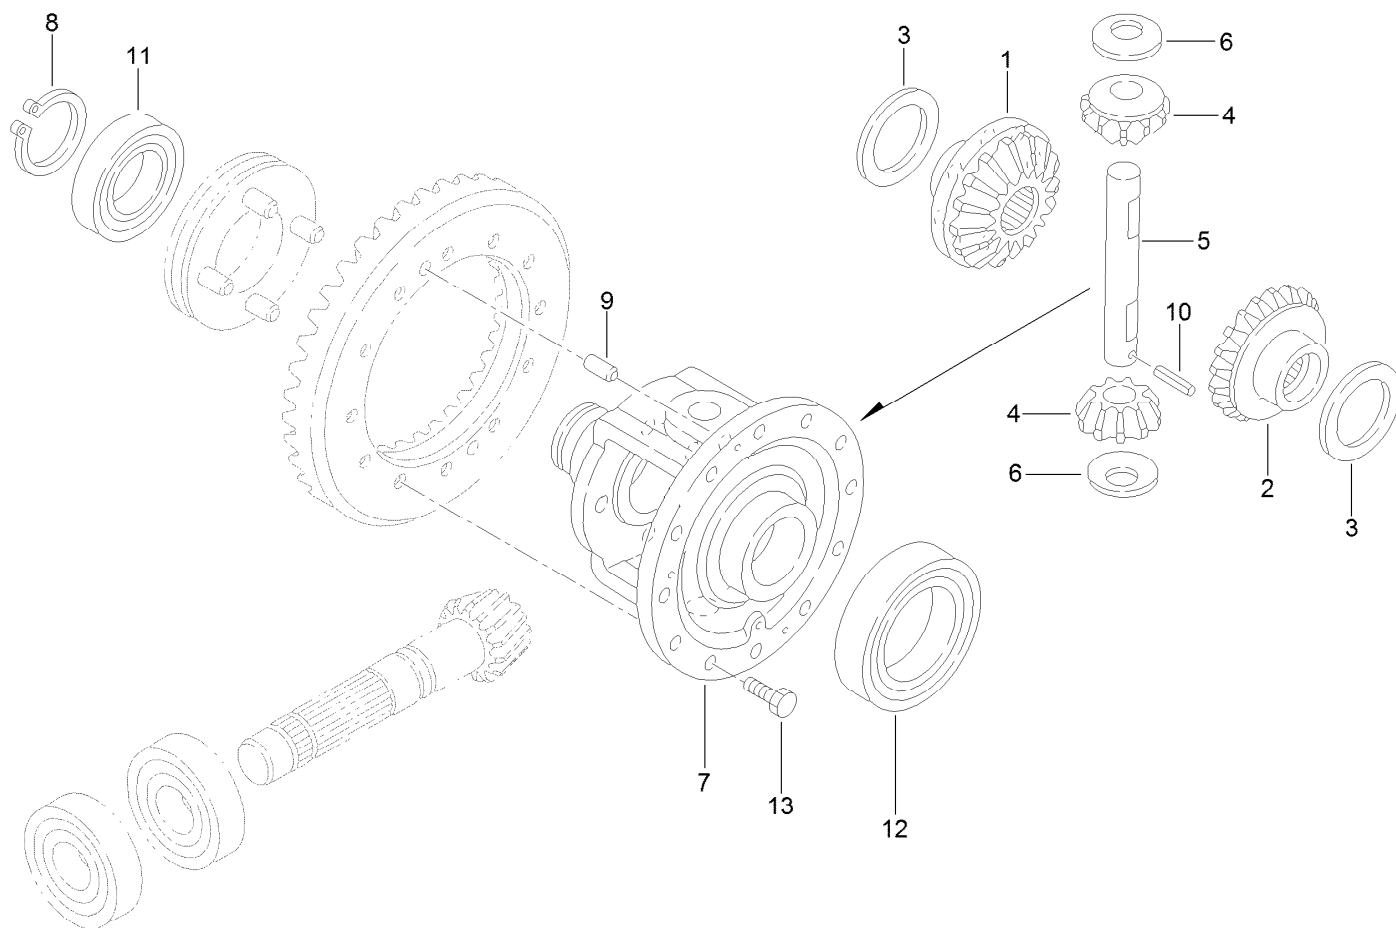

## Differential Gear Assembly Transaxle Assembly No. 120-7610

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 1           | 92-0745            | 1           | Gear-Side, LH         |
| 2           | 92-0746            | 1           | Gear-Side, RH         |
| 3           | 92-0747            | 2           | Side-Gear, Left Inner |
| 4           | 92-0748            | 2           | Pinion-Differential   |
| 5           | 92-0749            | 1           | Shaft-Pinion          |
| 6           | 92-0750            | 2           | Washer                |
| 7           | 92-0720            | 1           | Case-Differential     |
| 8           | 92-0756            | 1           | Ring-Snap             |
| 9           | 92-0765            | 2           | Pin-Parallel          |
| 10          | 92-0768            | 1           | Pin-Roll, Spring      |
| 11          | 92-0775            | 1           | Bearing               |
| 12          | 92-0776            | 1           | Bearing               |
| 13          | 92-0803            | 12          | Bolt                  |



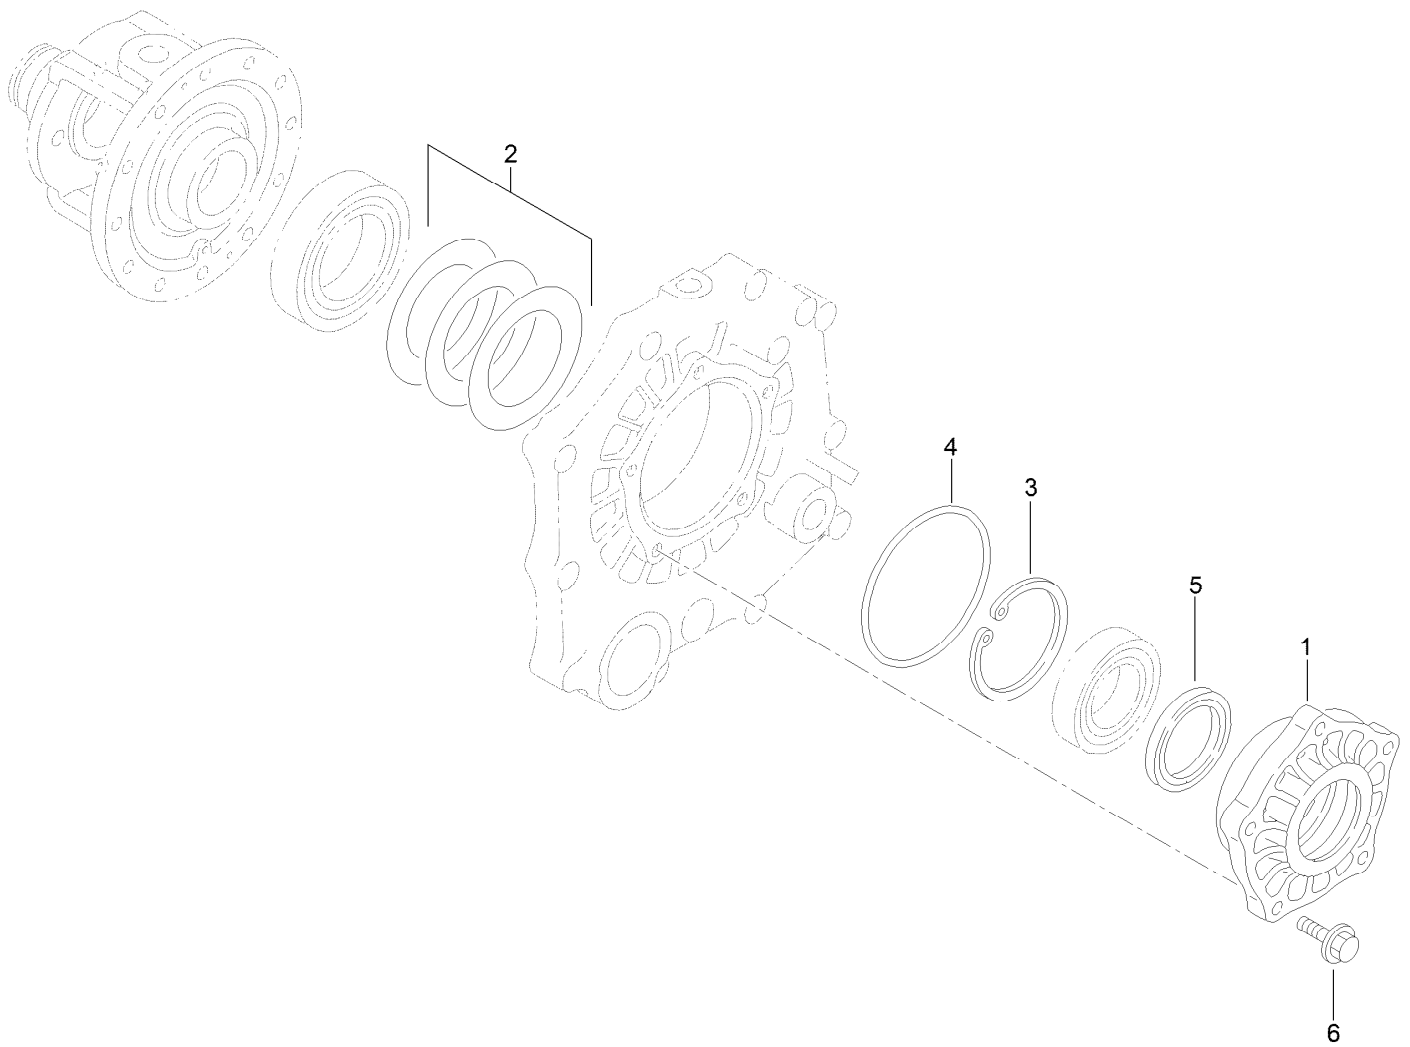


## Differential Carrier Assembly Transaxle Assembly No. 120-7610
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 1           | 92-0654            | 1           | Carrier-Differential |
| 2           | 92-0809            | 1           | Set-Shim             |
| 3           | 92-0760            | 1           | Ring-Snap            |
| 4           | 92-0789            | 1           | O-Ring               |
| 5           | 92-0793            | 1           | Seal-Oil             |
| 6           | 48-7730            | 5           | Screw-Cap, HH        |

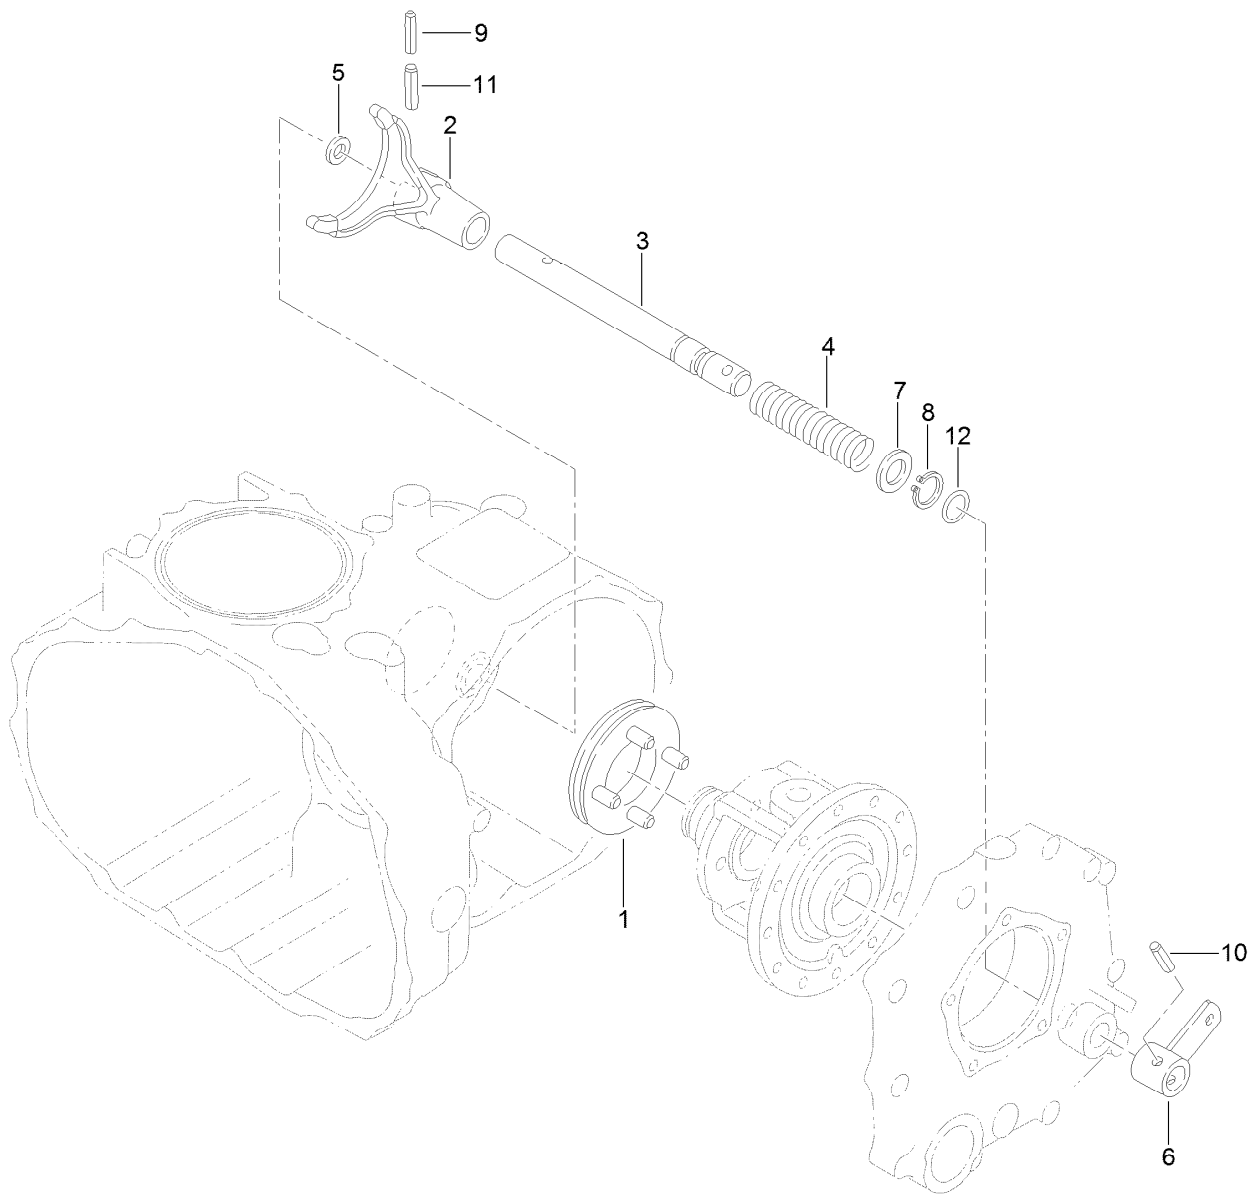


## Differential Lock Assembly Transaxle Assembly No. 120-7610
 
| Ref. | Part Number | Qty. | Description                   |
|------|-------------|------|-------------------------------|
| 1    | 92-0730     | 1    | Slider-Differential, Lock     |
| 2    | 92-0721     | 1    | Fork-Lock, Differential       |
| 3    | 92-0722     | 1    | Shaft-Fork, Lock Differential |
| 4    | 92-0723     | 1    | Spring-Lock, Differential     |
| 5    | 92-0744     | 1    | Washer                        |
| 6    | 92-0724     | 1    | Arm-Lock, Differential        |
| 7    | 92-0733     | 1    | Washer                        |
| 8    | 92-0753     | 1    | Ring-Snap                     |
| 9    | 92-0768     | 1    | Pin-Roll, Spring              |
| 10   | 92-0770     | 1    | Pin-Roll, Spring              |
| 11   | 92-0771     | 1    | Pin-Roll, Spring              |
| 12   | 92-0787     | 1    | O-Ring                        |

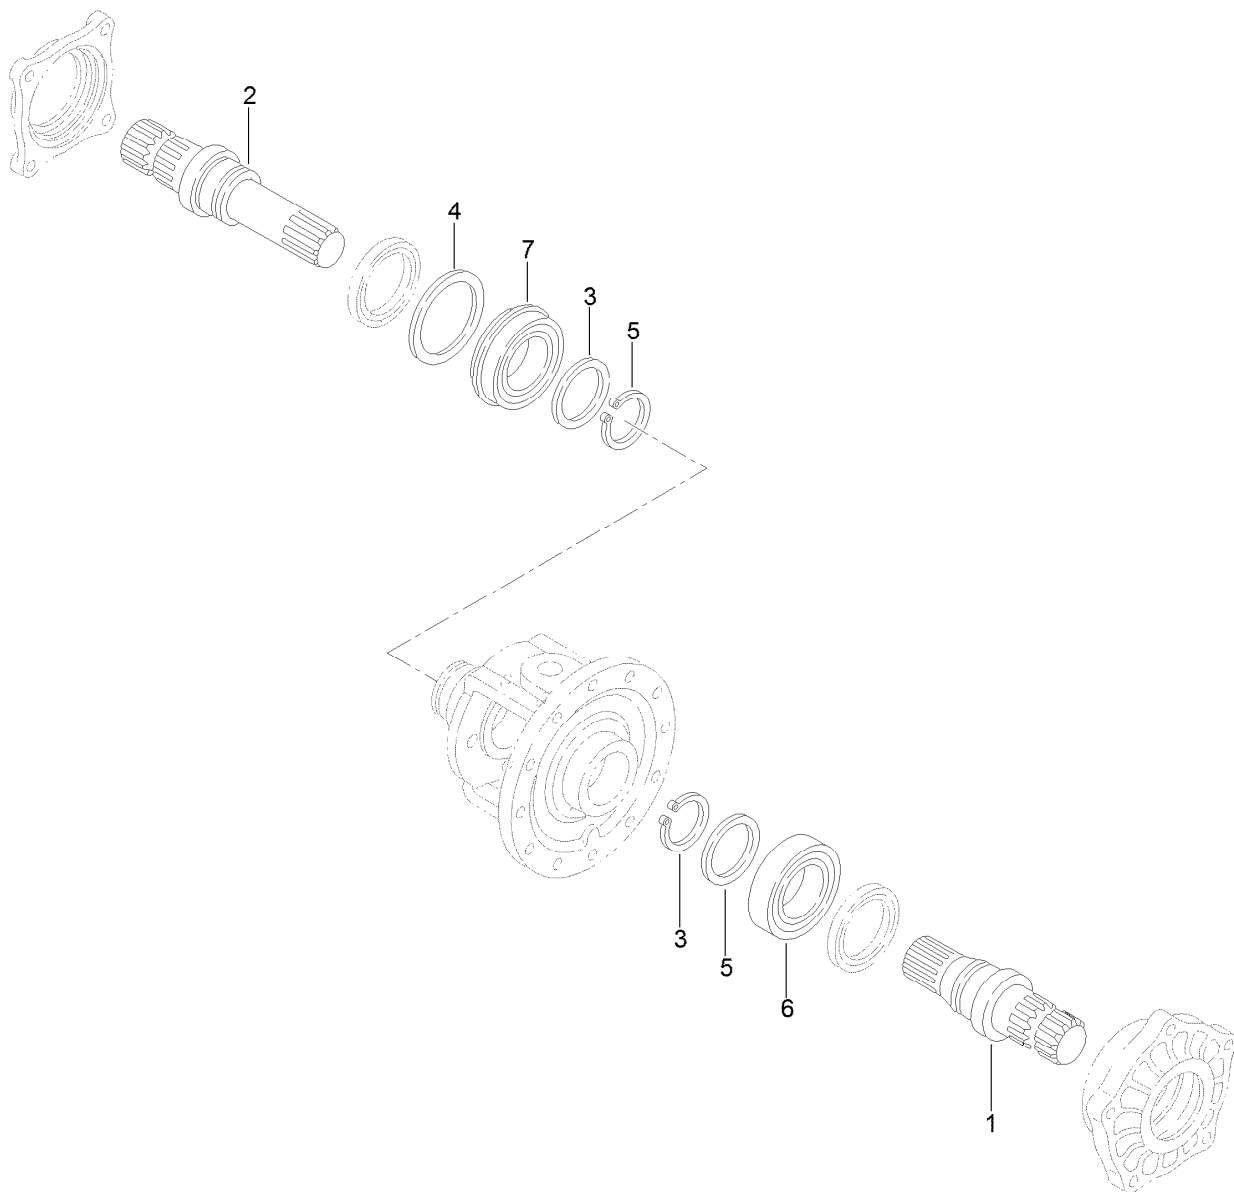


## Axle Shaft Assembly Transaxle Assembly No. 120-7610
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 92-0725            | 1           | Shaft-Axle, Left   |
| 2           | 92-0726            | 1           | Shaft-Axle, Right  |
| 3           | 92-0727            | 2           | Washer             |
| 4           | 92-0728            | 1           | Washer             |
| 5           | 92-0756            | 2           | Ring-Snap          |
| 6           | 92-0775            | 1           | Bearing            |
| 7           | 92-0780            | 1           | Bearing            |

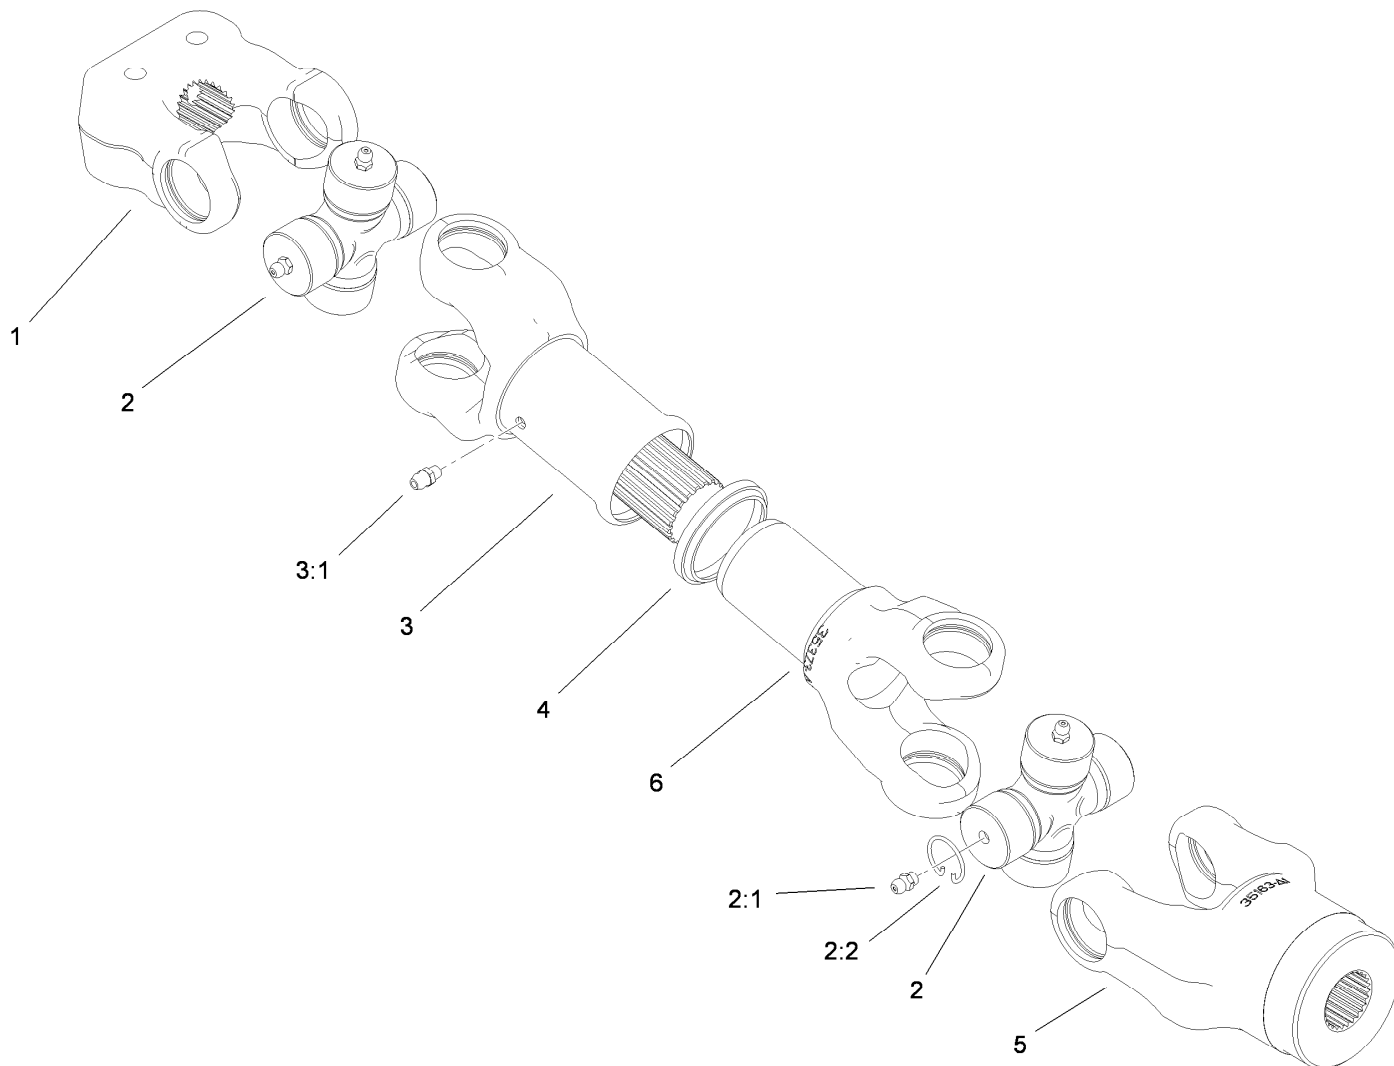


## Driveshaft Assembly No. 114-8367
 
| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 1    | 98-2940     | 1    | Yoke                      |
| 2    | 92-4187     | 2    | Cross And Bearing Kit     |
| 2:1  | 302-58      | 4    | Fitting-Straight          |
| 2:2  | 92-4188     | 4    | Ring-Snap                 |
| 3    | 92-4179     | 1    | Yoke-Tube, Shaft And Seal |
| 3:1  | 302-5       | 1    | Fitting-Grease            |
| 4    | 92-4180     | 1    | Seal                      |
| 5    | 115-2351    | 1    | Yoke                      |
| 6    | 92-4182     | 1    | Yoke-Telescoping          |

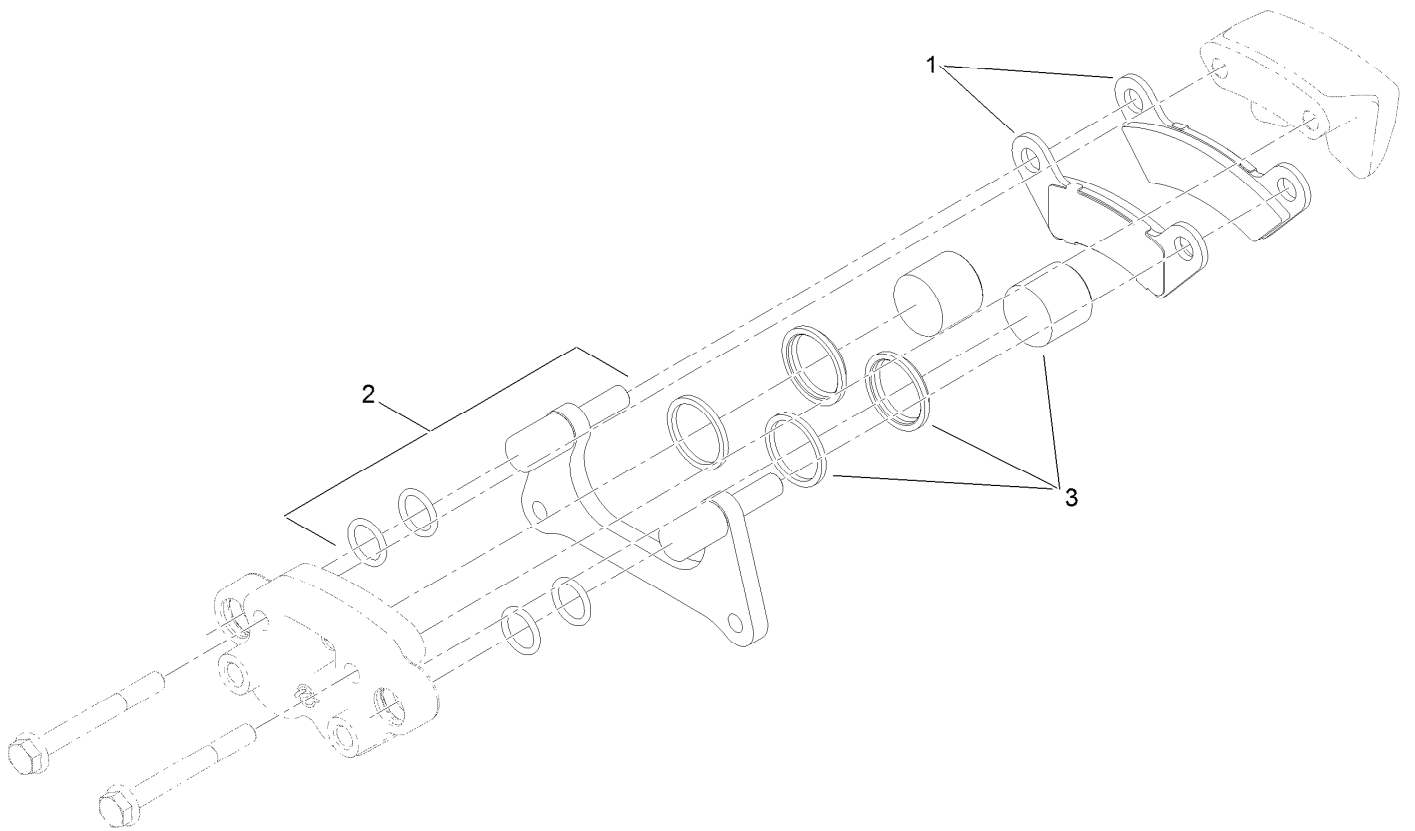

## Brake Caliper Assembly No. 127-7424

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 119-9510           | 1           | *obs* Pads-Brake   |
| 2           | 119-9511           | 1           | Bracket Kit        |
| 3           | 133-0614           | 1           | Piston Kit         |

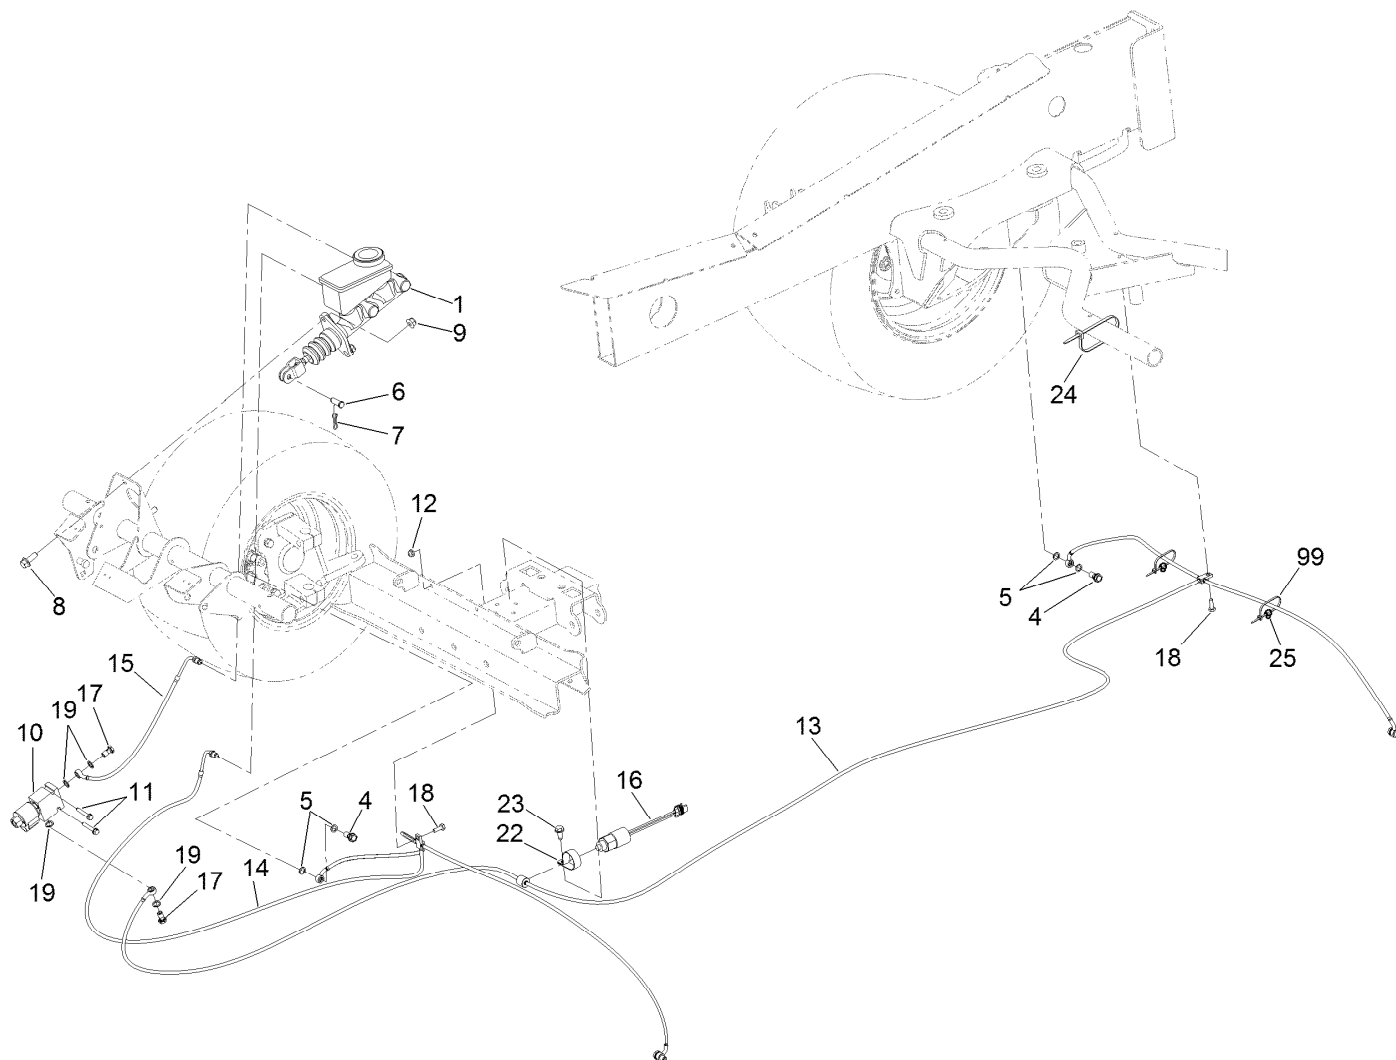

## Brake Hydraulic Assembly


| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 104-6782    | 1    | Master Cylinder ASM |
| 4    | 120-4875    | 4    | Bolt-Flange, Banjo  |
| 5    | 115-2341    | 8    | Washer-Banjo        |
| 6    | 283-2       | 1    | Pin-Clevis          |
| 7    | 119-1415    | 1    | Pin-Cotter, Locking |
| 8    | 3234-11     | 2    | Screw-HHF           |
| 9    | 104-8301    | 2    | Nut-HF, NI          |
| 10   | 125-0900    | 1    | Valve-Brake Hold    |
| 11   | 94-2691     | 2    | Screw-HWH Taptite   |
| 12   | 104-7201    | 1    | Nut-HF, NI          |
| 13   | 125-7998    | 1    | Line-Brake, Rear    |
 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 14   | 125-7999    | 1    | Line-Brake, Front    |
| 15   | 125-8000    | 1    | Line-Brake, Solenoid |
| 16   | 130-7148    | 1    | Switch-Pressure      |
| 17   | 125-8005    | 2    | Bolt-Banjo           |
| 18   | 321-4       | 2    | Screw-HH             |
| 19   | 127-3914    | 4    | Washer-Banjo         |
| 22   | 2412-74     | 1    | R-Clamp              |
| 23   | 32104-32    | 1    | Screw-HWH            |
| 24   | 3290-378    | 1    | Tie-Cable            |
| 25   | 32180-030   | 2    | Clip-Tie             |
| 99   | 3290-379    | 6    | Tie-Cable            |

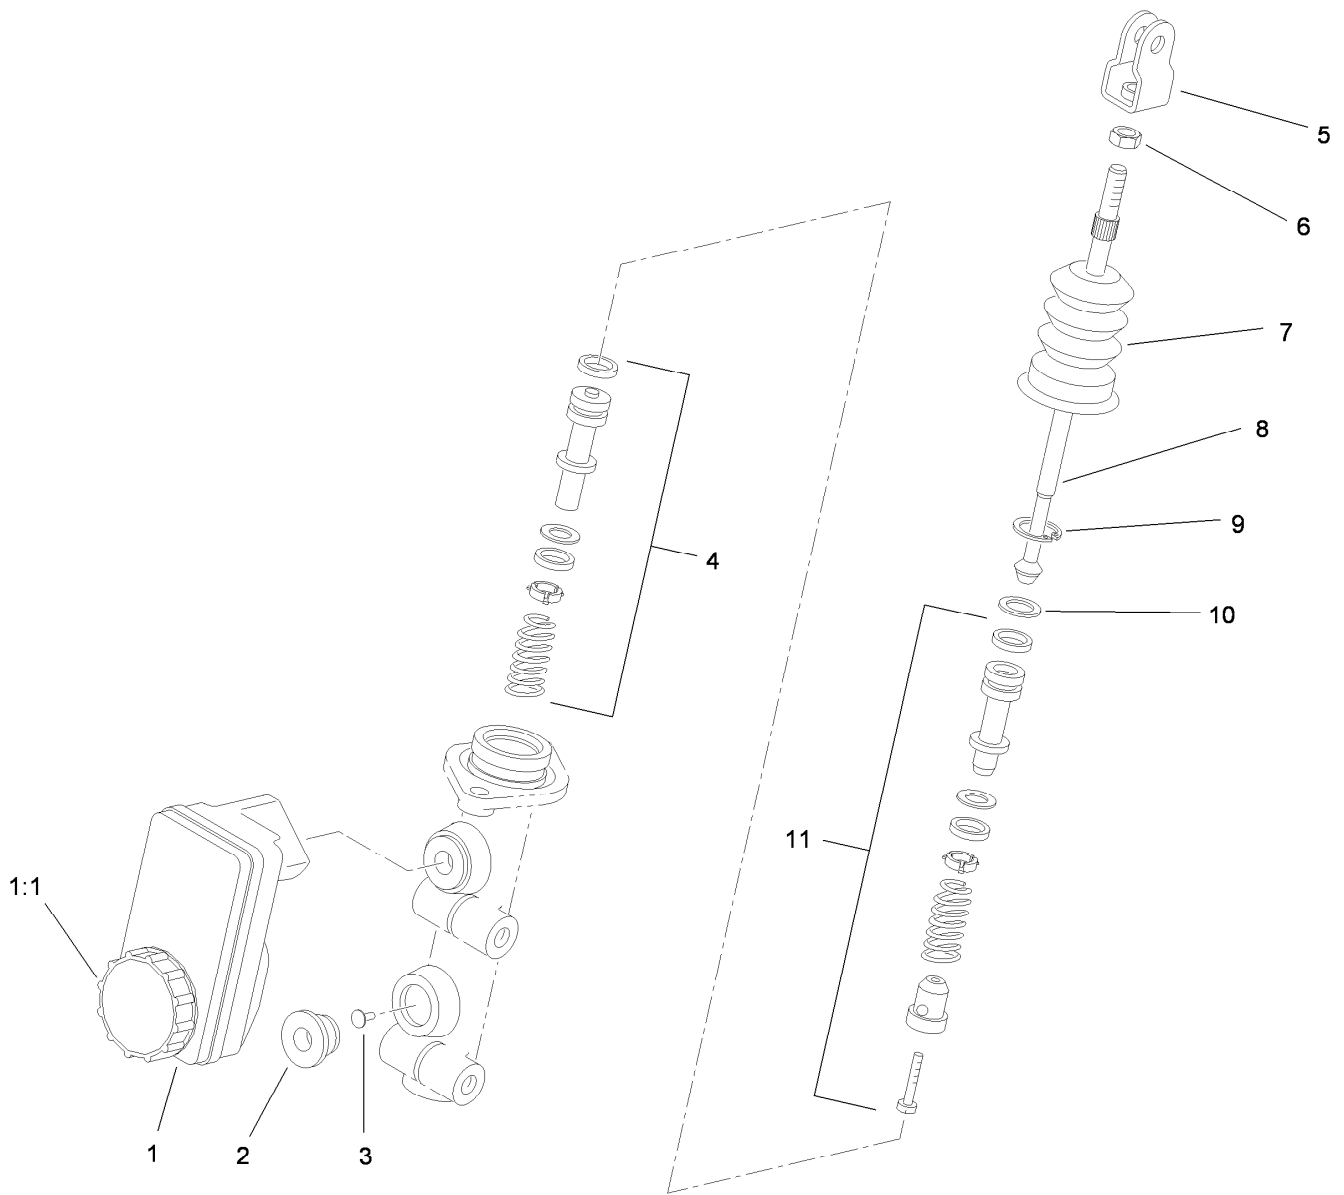

## Master Cylinder Assembly No. 104-6782
 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 104-6845    | 1    | Reservoir ASM        |
| 1:1  | 92-4112     | 1    | Cap ASM              |
| 2    | 93-8971     | 2    | Seal-Port, Flange    |
| 3    | 92-4103     | 1    | Pin-Stop             |
| 4    | 92-4102     | 1    | Secondary Piston ASM |
| 5    | 92-4110     | 1    | Clevis               |
| 6    | 21-0360     | 1    | Nut-Hex              |
| 7    | 94-5209     | 1    | Cover-Dust           |
| 8    | 94-5210     | 1    | Rod-Push             |
| 9    | 92-4109     | 1    | Ring-Snap            |
| 10   | 92-4108     | 1    | Retainer-Washer      |
| 11   | 92-4101     | 1    | Primary Piston ASM   |

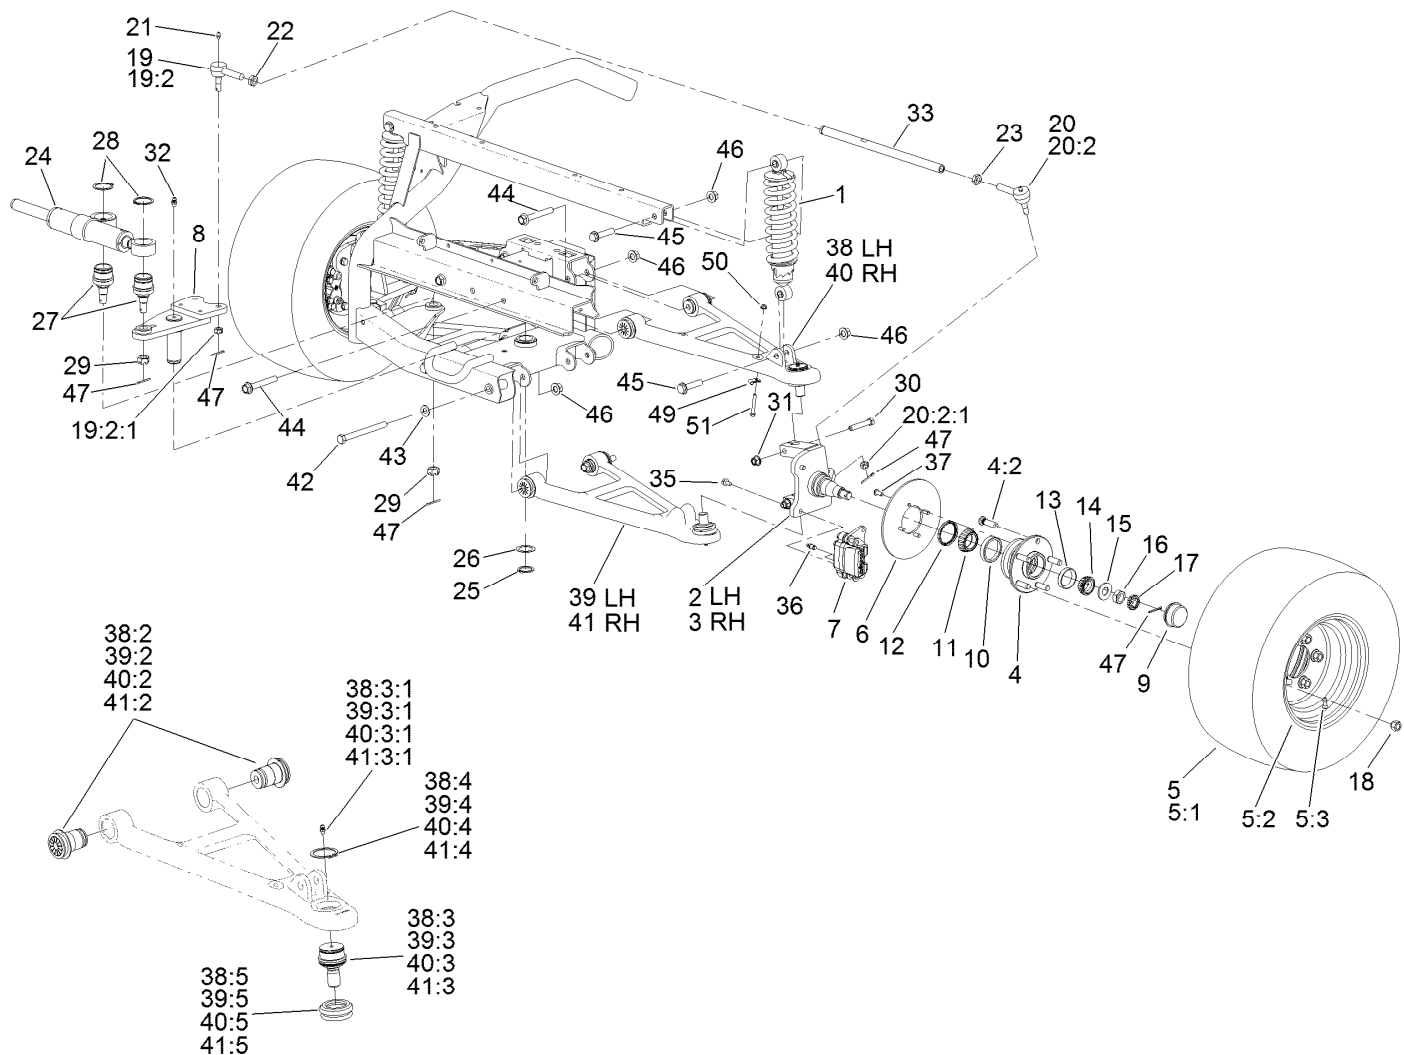


## Front Suspension Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 120-7616    | 2    | Coil Over Shock ASM   |
| 2    | 125-0730-03 | 1    | Spindle-LH            |
| 3    | 125-0723-03 | 1    | Spindle-RH            |
| 4    | 117-8071    | 2    | Hub ASM               |
| 4:2  | 10-6830     | 5    | Stud-Type, Drive      |
| 5    | 125-0763    | 2    | Tire And Wheel ASM    |
| 5:1  | 120-7639    | 1    | Tire                  |
| 5:2  | 125-0764    | 1    | Wheel                 |
| 5:3  | 232-27      | 1    | Stem-Valve            |
| 6    | 131-3460    | 2    | Rotor                 |
| 7    | 127-7424    | 2    | Brake Caliper ASM     |
| 8    | 125-0750-03 | 1    | Arm-Pitman            |
| 9    | 241-119     | 2    | Cap-Dust              |
| 10   | 254-107     | 2    | Cup-Bearing, Tapered  |
| 11   | 254-106     | 2    | Cone-Bearing, Tapered |
| 12   | 108-7019    | 2    | Seal-Shaft            |
| 13   | 254-72      | 2    | Bearing-Cup, Tapered  |
| 14   | 254-94      | 2    | Bearing-Cone, Tapered |

| Ref.   | Part Number | Qty. | Description                  |
|--------|-------------|------|------------------------------|
| 15     | 93-0309     | 2    | Washer-Tab                   |
| 16     | 3220-7      | 2    | Nut-Jam                      |
| 17     | 93-0307     | 2    | Nut-Lock, Retainer           |
| 18     | 242-50      | 10   | Nut-Lug                      |
| 19     | 112772-03   | 2    | Joint-Ball, RH               |
| 19:2   |             | 1    | Socket-Balljoint ●           |
| 19:2:1 | 915031      | 1    | Nut                          |
| 20     | 112771-03   | 2    | Joint-Ball, LH               |
| 20:2   |             | 1    | Socket-Balljoint ●           |
| 20:2:1 | 915031      | 1    | Nut                          |
| 21     | 302-5       | 4    | Fitting-Grease               |
| 22     | 3220-11     | 2    | Nut-Jam                      |
| 23     | 3218-21     | 2    | Nut-Jam LH                   |
| 24     | 125-0720    | 1    | Cylinder-Hydraulic, Steering |
| 25     | 32151-77    | 1    | Ring-Retaining, External     |
| 26     | 76-2980     | 1    | Washer-Thrust                |
| 27     | 117-9875    | 2    | Joint-Ball                   |
| 28     | 32151-104   | 2    | Ring-Retaining, External     |

 ● Not serviced separately



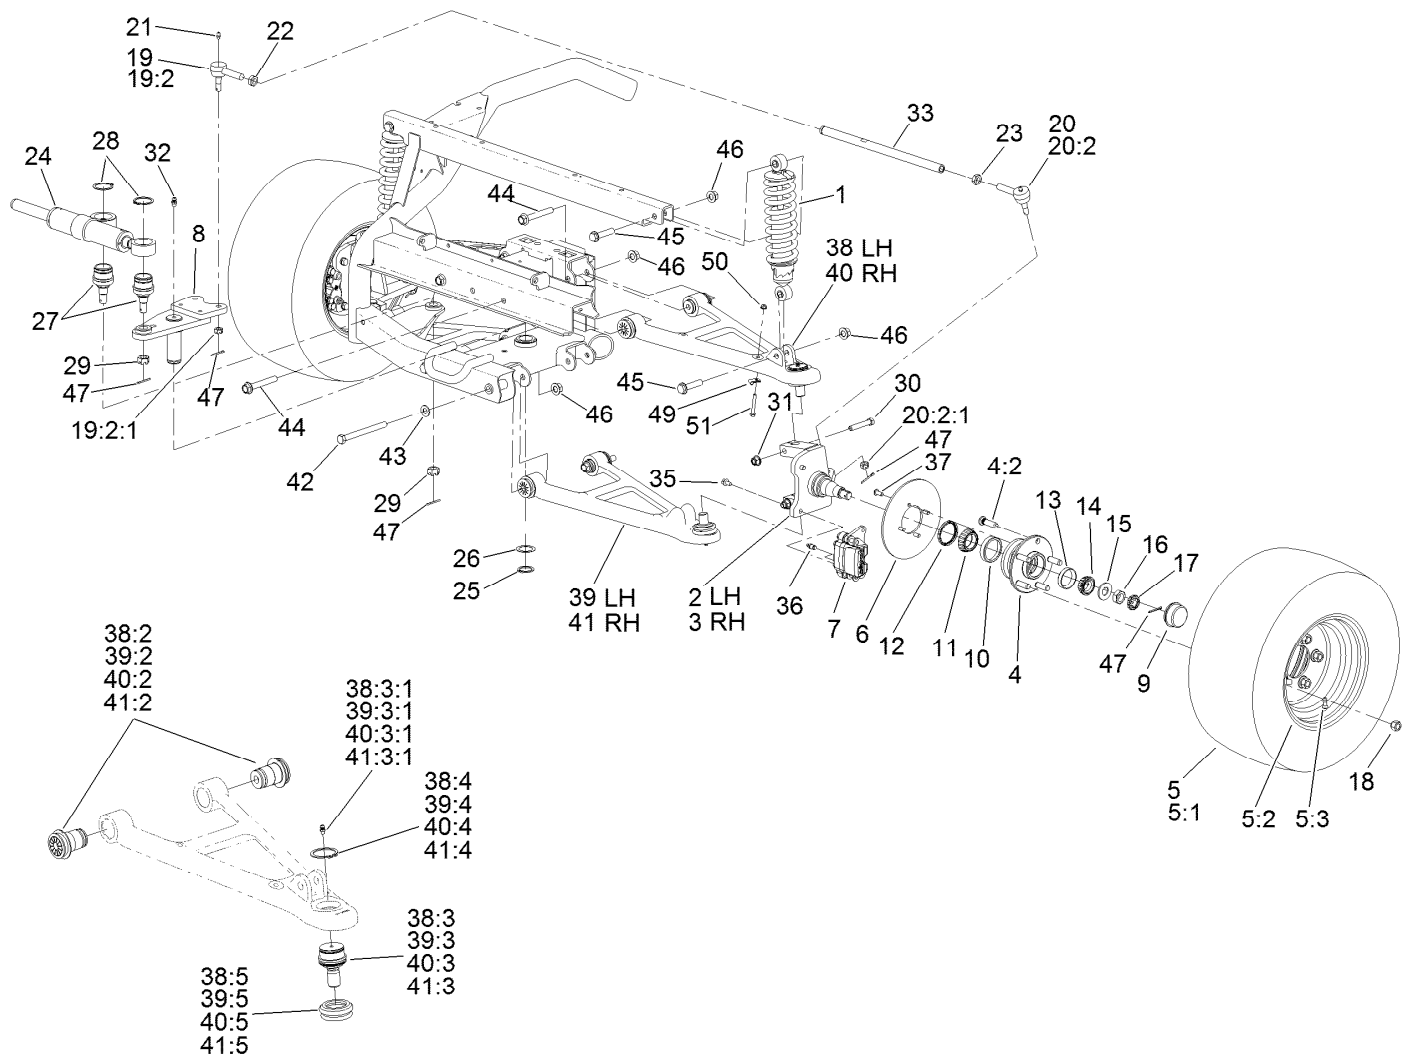

## Front Suspension Assembly (continued)

 
| Ref.   | Part Number | Qty. | Description              | Ref.   | Part Number | Qty. | Description              |
|--------|-------------|------|--------------------------|--------|-------------|------|--------------------------|
| 29     | 32136-2     | 2    | Nut-SHH                  | 39:4   | 32151-104   | 1    | Ring-Retaining, External |
| 30     | 324-10      | 4    | Screw-HH                 | 39:5   | 87-2420     | 1    | Seal-Joint, Ball         |
| 31     | 114-8417    | 4    | Nut-HF, NI               | 40     | 125-8023    | 1    | RH Upper Control Arm ASM |
| 32     | 302-52      | 1    | Fitting-Grease           | 40:2   | 87-1450     | 2    | Bushing-Flange           |
| 33     | 115-7654    | 2    | Tie Rod                  | 40:3   | 115-2165    | 1    | Ball Joint               |
| 35     | 3234-11     | 4    | Screw-HHF                | 40:3:1 | 302-5       | 1    | Fitting-Grease           |
| 36     | 119-9509    | 2    | Screw-Bleed              | 40:4   | 32151-104   | 1    | Ring-Retaining, External |
| 37     | 3274-55     | 8    | Screw-HSBH               | 40:5   | 87-2420     | 1    | Seal-Joint, Ball         |
| 38     | 125-8021    | 1    | LH Upper Control Arm ASM | 41     | 125-8024    | 1    | RH Lower Control Arm ASM |
| 38:2   | 87-1450     | 2    | Bushing-Flange           | 41:2   | 87-1450     | 2    | Bushing-Flange           |
| 38:3   | 115-2165    | 1    | Ball Joint               | 41:3   | 115-2165    | 1    | Ball Joint               |
| 38:3:1 | 302-5       | 1    | Fitting-Grease           | 41:3:1 | 302-5       | 1    | Fitting-Grease           |
| 38:4   | 32151-104   | 1    | Ring-Retaining, External | 41:4   | 32151-104   | 1    | Ring-Retaining, External |
| 38:5   | 87-2420     | 1    | Seal-Joint, Ball         | 41:5   | 87-2420     | 1    | Seal-Joint, Ball         |
| 39     | 125-8022    | 1    | LH Lower Control Arm ASM | 42     | 325-22      | 2    | Screw-HH                 |
| 39:2   | 87-1450     | 2    | Bushing-Flange           | 43     | 3256-26     | 2    | Washer-Flat              |
| 39:3   | 115-2165    | 1    | Ball Joint               | 44     | 114-8419    | 6    | Screw-HHF                |
| 39:3:1 | 302-5       | 1    | Fitting-Grease           | 45     | 3234-46     | 4    | Screw-HHF                |

● Not serviced separately



| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 50          | 104-7201           | 2           | Nut-HF, NI         |
| 51          | 321-11             | 2           | Screw-HH           |


E2

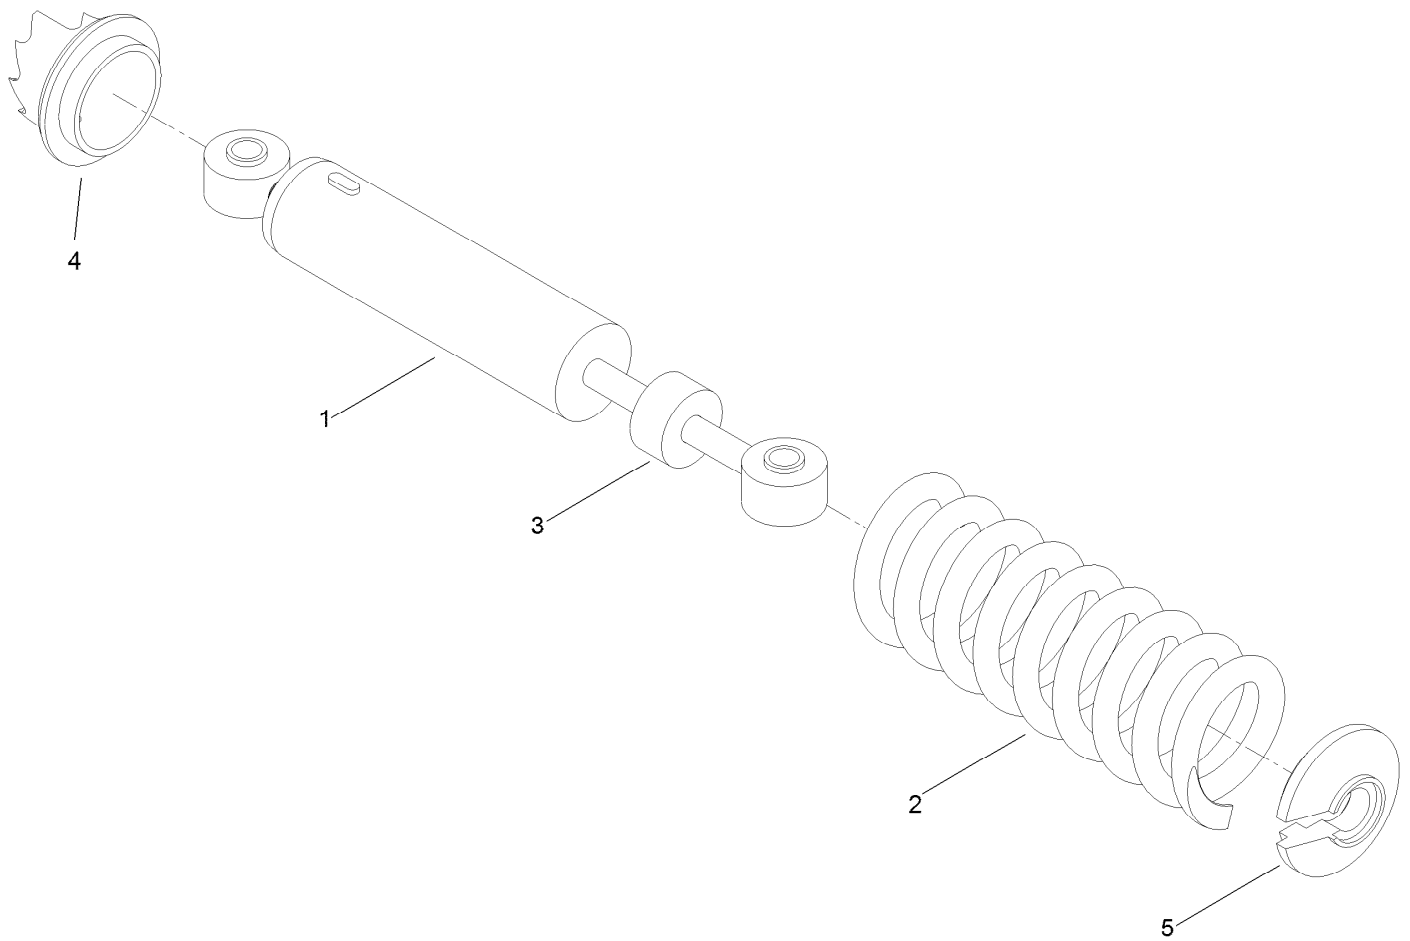

## Coil Over Shock Assembly No. 120-7616
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|
| 1           | 112-3380           | 1           | Shock                  |
| 2           | 120-7617           | 1           | Spring-400Lb           |
| 3           | 112-3384           | 1           | Bumper                 |
| 4           | 112-3382           | 1           | Adjuster-Spring, Shock |
| 5           | 112-3381           | 1           | Cap-Shock              |




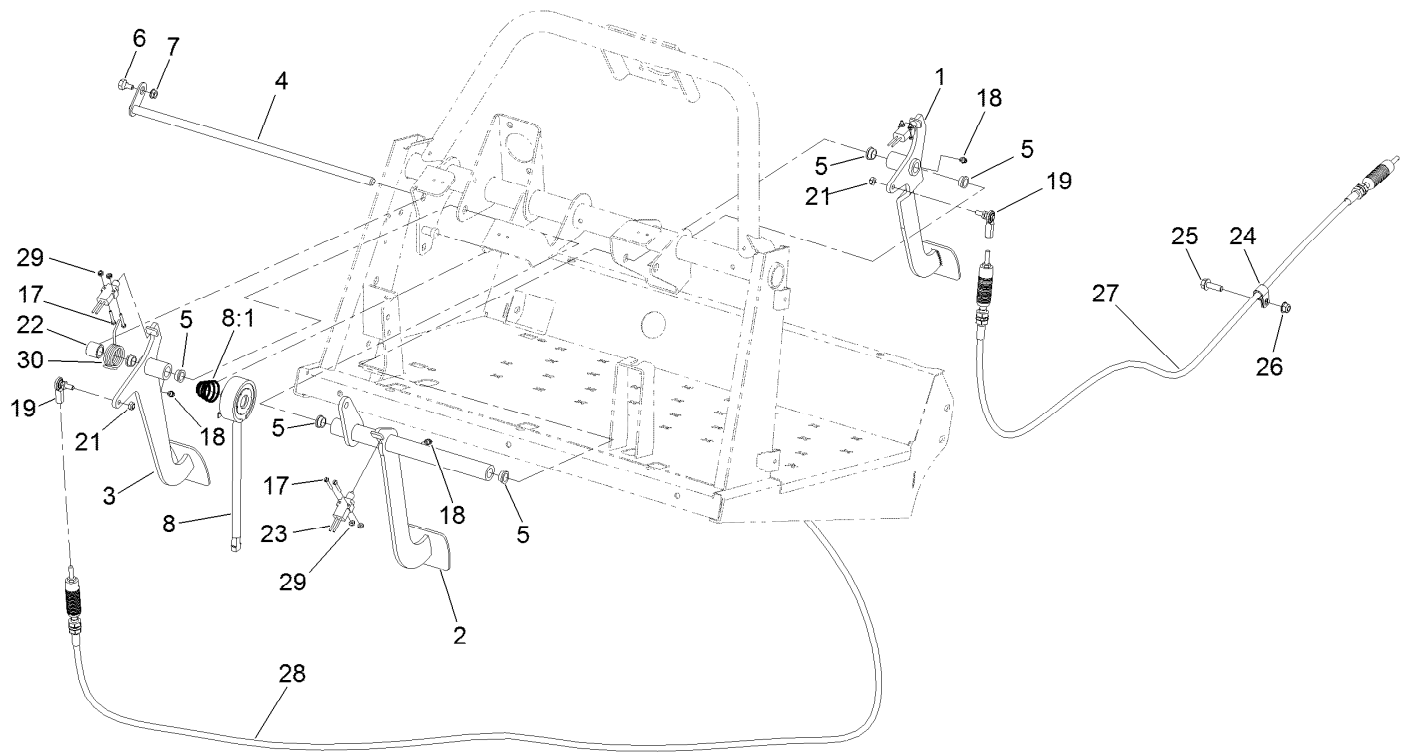

## Pedal Assembly

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 125-0702-03 | 1    | Pedal              |
| 2    | 125-0700-03 | 1    | Pedal              |
| 3    | 125-0701-03 | 1    | Pedal              |
| 4    | 125-0825    | 1    | Pivot              |
| 5    | 256-156     | 6    | Bushing-Flange     |
| 6    | 63-3410     | 1    | Screw-Shoulder     |
| 7    | 32128-33    | 1    | Nut-HF             |
| 8    | 99-8090     | 1    | Magnet ASM         |
| 8:1  | 93-6601     | 1    | Spring-Compression |
| 17   | 32105-9     | 6    | Screw-HH           |
| 18   | 302-5       | 3    | Fitting-Grease     |

 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 19   | 110-2554    | 2    | Rod End-Spherical  |
| 21   | 3296-13     | 2    | Nut-Lock, NI       |
| 22   | 99-2079     | 1    | Spacer             |
| 23   | 99-3410     | 3    | Switch             |
| 24   | 2412-93     | 1    | Clamp-R            |
| 25   | 3234-17     | 1    | Screw-HHF          |
| 26   | 104-8300    | 1    | Nut-HF, NI         |
| 27   | 125-0957    | 1    | Cable-Clutch       |
| 28   | 125-0958    | 1    | Cable-Accelerator  |
| 29   | 3296-9      | 6    | Nut-Hex            |
| 30   | 130-7060    | 1    | Spring-Torsion, LH |

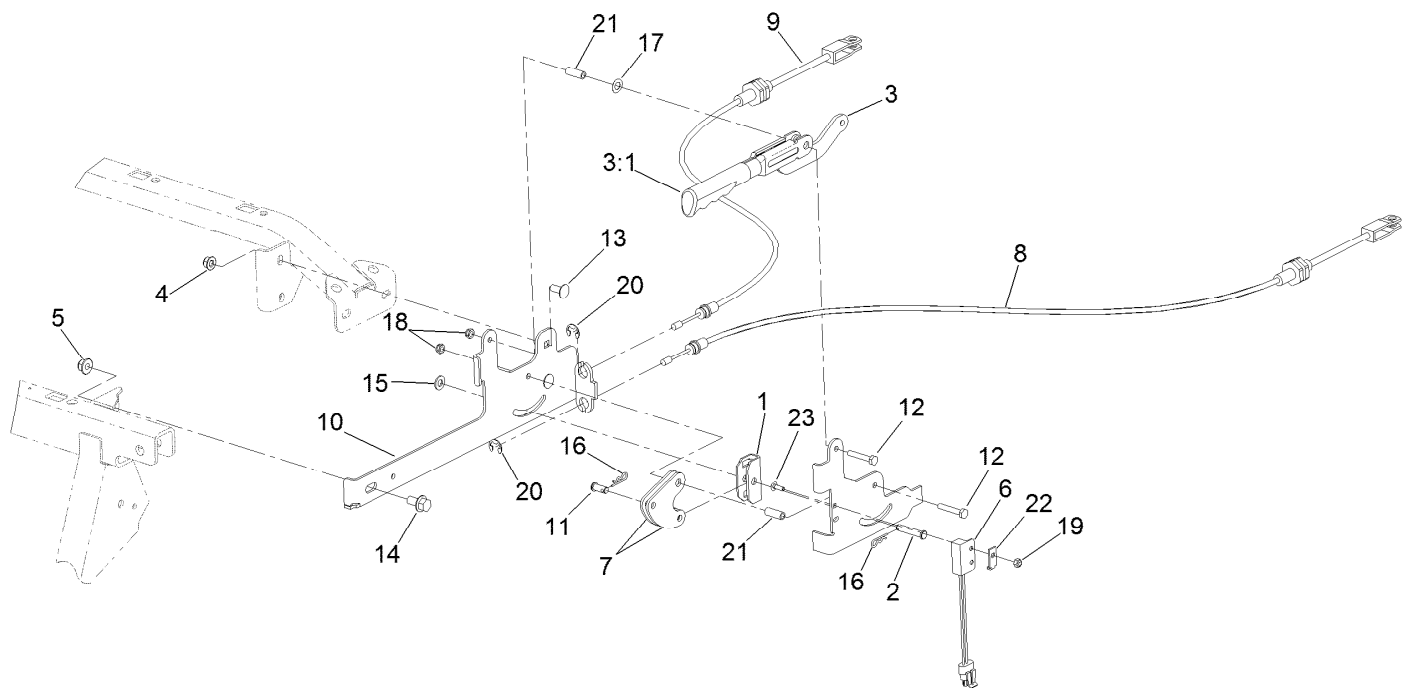

## Parking Brake Lever and Cable Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 87-3480     | 1    | Bracket-Equalizer, Cable |
| 2    | 94-3829     | 1    | Pin-Clevis               |
| 3    | 127-8863    | 1    | Lever-Brake, Park        |
| 3:1  | 127-8864    | 1    | Grip-Handle              |
| 4    | 104-8300    | 2    | Nut-HF, NI               |
| 5    | 104-8301    | 1    | Nut-HF, NI               |
| 6    | 105-0023    | 1    | Switch-Proximity         |
| 7    | 106-7814    | 2    | Bellcrank                |
| 8    | 125-0881    | 1    | Cable-Parking Brake, LH  |
| 9    | 125-0882    | 1    | Cable-Parking Brake, RH  |
| 10   | 136-2353-03 | 1    | Brake-Parking            |
| 11   | 283-62      | 1    | Pin-Clevis               |
 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 12   | 321-9       | 2    | Screw-HH                 |
| 13   | 3230-23     | 2    | Bolt-CARR                |
| 14   | 3234-1      | 1    | Screw-HHF                |
| 15   | 3256-23     | 1    | Washer-Plain             |
| 16   | 3290-307    | 2    | Pin-Cotter               |
| 17   | 3290-477    | 1    | Washer-Curved            |
| 18   | 3296-56     | 2    | Nut-Lock, NI             |
| 19   | 3296-2      | 1    | Nut-Lock, NI             |
| 20   | 32120-47    | 2    | Ring-Retaining, External |
| 21   | 114402      | 2    | Spacer                   |
| 22   | 100-4872    | 1    | Plate-Switch, Neutral    |
| 23   | 3229-34     | 1    | Screw-CARR               |

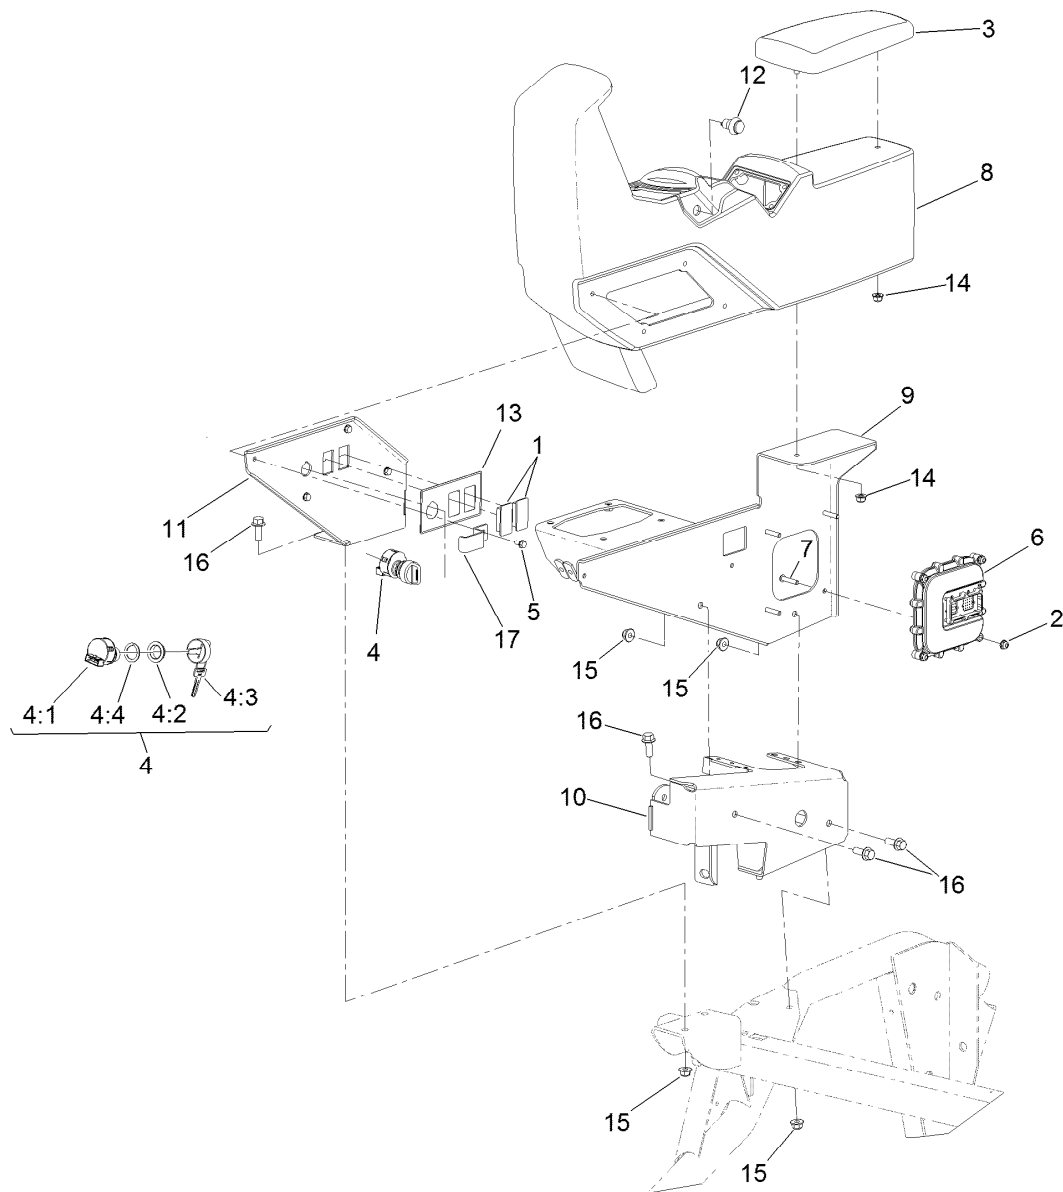


## Control Console Mount Assembly

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 99-7420     | 2    | Plug-Hole              |
| 2    | 104-7201    | 4    | Nut-HF, NI             |
| 3    | 108-7602    | 1    | Rest-Arm               |
| 4    | 110-2580    | 1    | Switch-Key, Supervisor |
| 4:1  |             | 1    | Switch-Key ●           |
| 4:2  | 108-8660    | 1    | Nut-Mounting           |
| 4:3  | 110-5221    | 1    | Set-Key, Supervisor    |
| 4:4  | 108-8659    | 1    | Washer-Backup          |
| 5    | 93-6083     | 4    | Screw-HWH              |
| 6    | 115-1900    | 1    | Controller             |
| 7    | 120-0834    | 4    | Screw-HSBH             |

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 8    | 125-0791    | 1    | Console-Control, Spray |
| 9    | 125-4108-03 | 1    | Console Mount ASM      |
| 10   | 125-4188-03 | 1    | Mount-Shifter          |
| 11   | 125-4191-03 | 1    | Console Mount ASM      |
| 12   | 125-7996    | 1    | Switch-Pb, Momentary   |
| 13   | 125-8114    | 1    | Decal-Control Panel    |
| 14   | 104-8300    | 2    | Nut-HF, NI             |
| 15   | 104-8301    | 6    | Nut-HF, NI             |
| 16   | 3234-11     | 6    | Screw-HHF              |
| 17   | 136-2309    | 1    | Bracket-Mount, Radio   |

 ● Not serviced separately

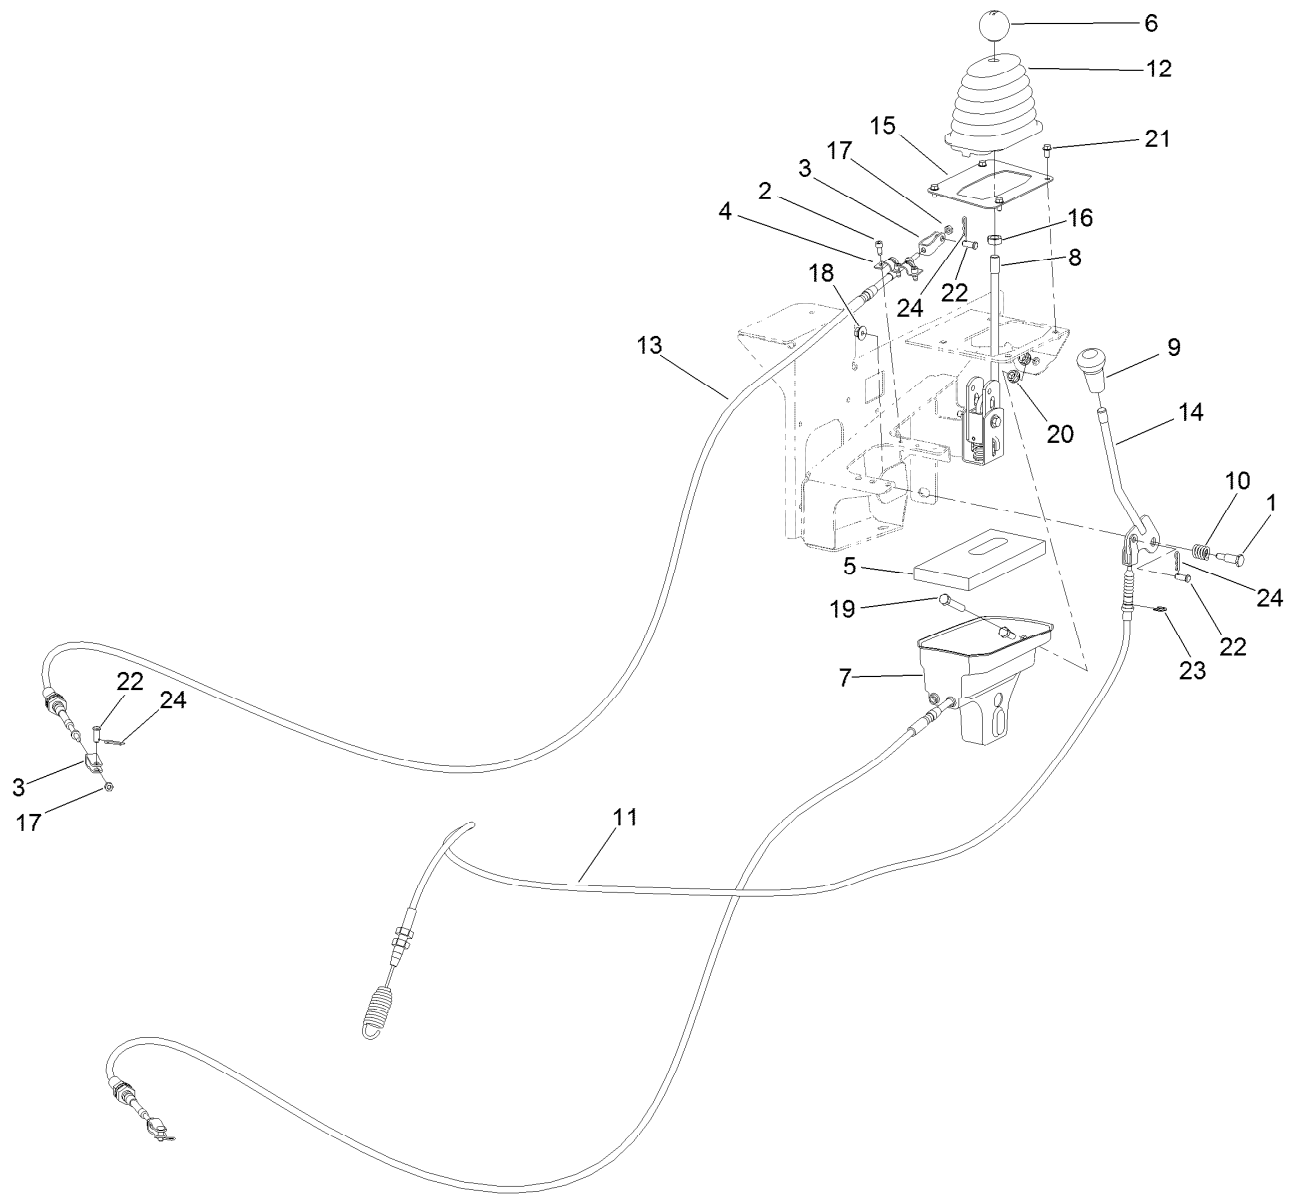


## Gear Shift and Drift Lock Control Assembly

| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 1    | 63-2650     | 1    | Screw-Shoulder            |
| 2    | 65-5220     | 3    | Screw-HSH, Thread Forming |
| 3    | 87-2310     | 4    | Clevis-Cable              |
| 4    | 87-4960     | 1    | Clamp-Cable               |
| 5    | 87-6570     | 1    | Seal-Boot, Lower          |
| 6    | 87-6720     | 1    | Knob-Shift                |
| 7    | 106-2376    | 1    | Boot-Shift, Lower         |
| 8    | 106-7887    | 1    | Shift ASM                 |
| 9    | 106-7952    | 1    | Knob                      |
| 10   | 108-7313    | 1    | Spring-Compression        |
| 11   | 115-2287    | 1    | Cable-Lock, Differential  |
| 12   | 117-8063    | 1    | Boot-Shift                |

 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 13   | 125-0880    | 2    | Cable-Shift              |
| 14   | 125-0894    | 1    | Handle-Difflock          |
| 15   | 125-8030-03 | 1    | Cover-Shifter            |
| 16   | 3218-18     | 1    | Nut-Jam                  |
| 17   | 3220-1      | 4    | Nut-Jam                  |
| 18   | 32128-13    | 1    | Nut-HF                   |
| 19   | 323-10      | 2    | Screw-HH                 |
| 20   | 3290-357    | 2    | Nut-HSF                  |
| 21   | 93-6083     | 4    | Screw-HWH                |
| 22   | 283-62      | 5    | Pin-Clevis               |
| 23   | 32120-47    | 1    | Ring-Retaining, External |
| 24   | 3290-307    | 5    | Pin-Cotter               |



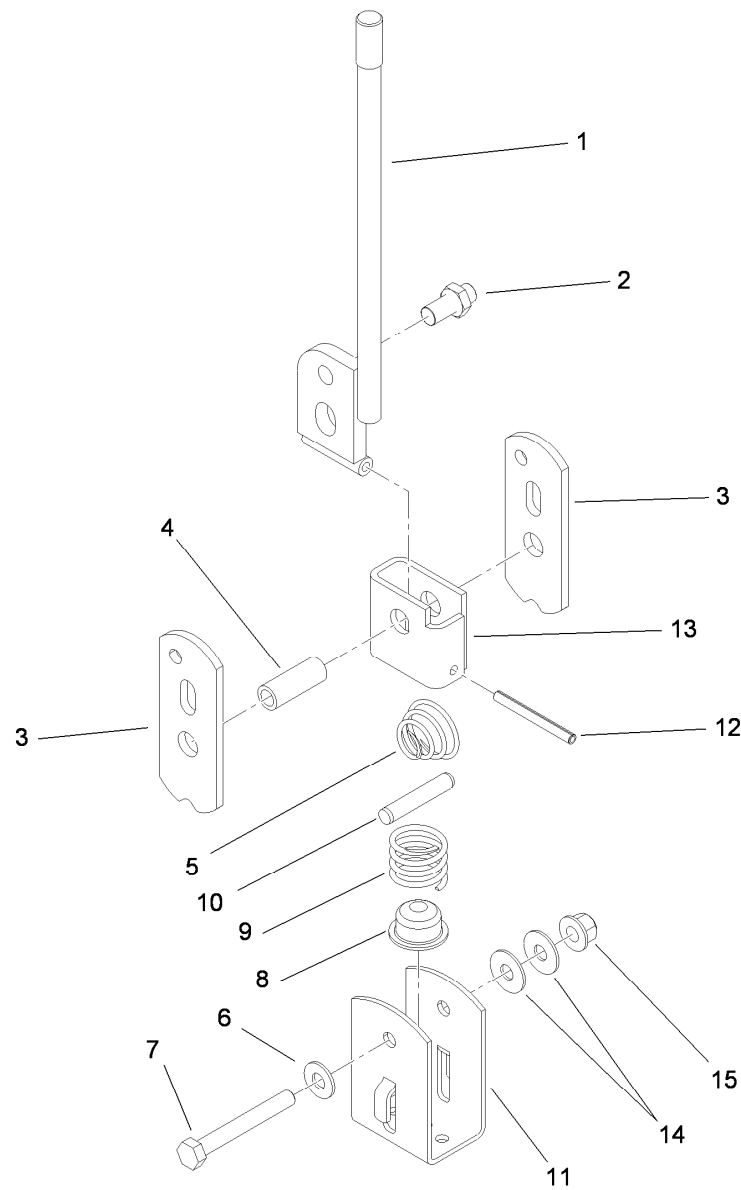

## Shift Assembly No. 106-7887

 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 131-3469    | 1    | Lever-Shift        |
| 2    | 87-3650     | 1    | Pin-Shift          |
| 3    | 87-3540     | 2    | Link-Shift         |
| 4    | 87-2520     | 1    | Tube-Pivot         |
| 5    | 87-2900     | 1    | Spring-Compression |
| 6    | 87-8640     | 1    | Washer-Flat        |
| 7    | 322-12      | 1    | Screw-HH           |
| 8    | 87-3530     | 1    | Button-Shifter     |
| 9    | 87-3660     | 1    | Spring-Compression |
| 10   | 3290-507    | 1    | Pin-Dowel          |
| 11   | 87-3520     | 1    | Clevis             |
| 12   | 32121-48    | 1    | Pin-Spring         |
| 13   | 87-6040     | 1    | Bracket-Shifter    |
| 14   | 3290-456    | 2    | Washer-Belleville  |
| 15   | 104-8300    | 1    | Nut-HF, NI         |

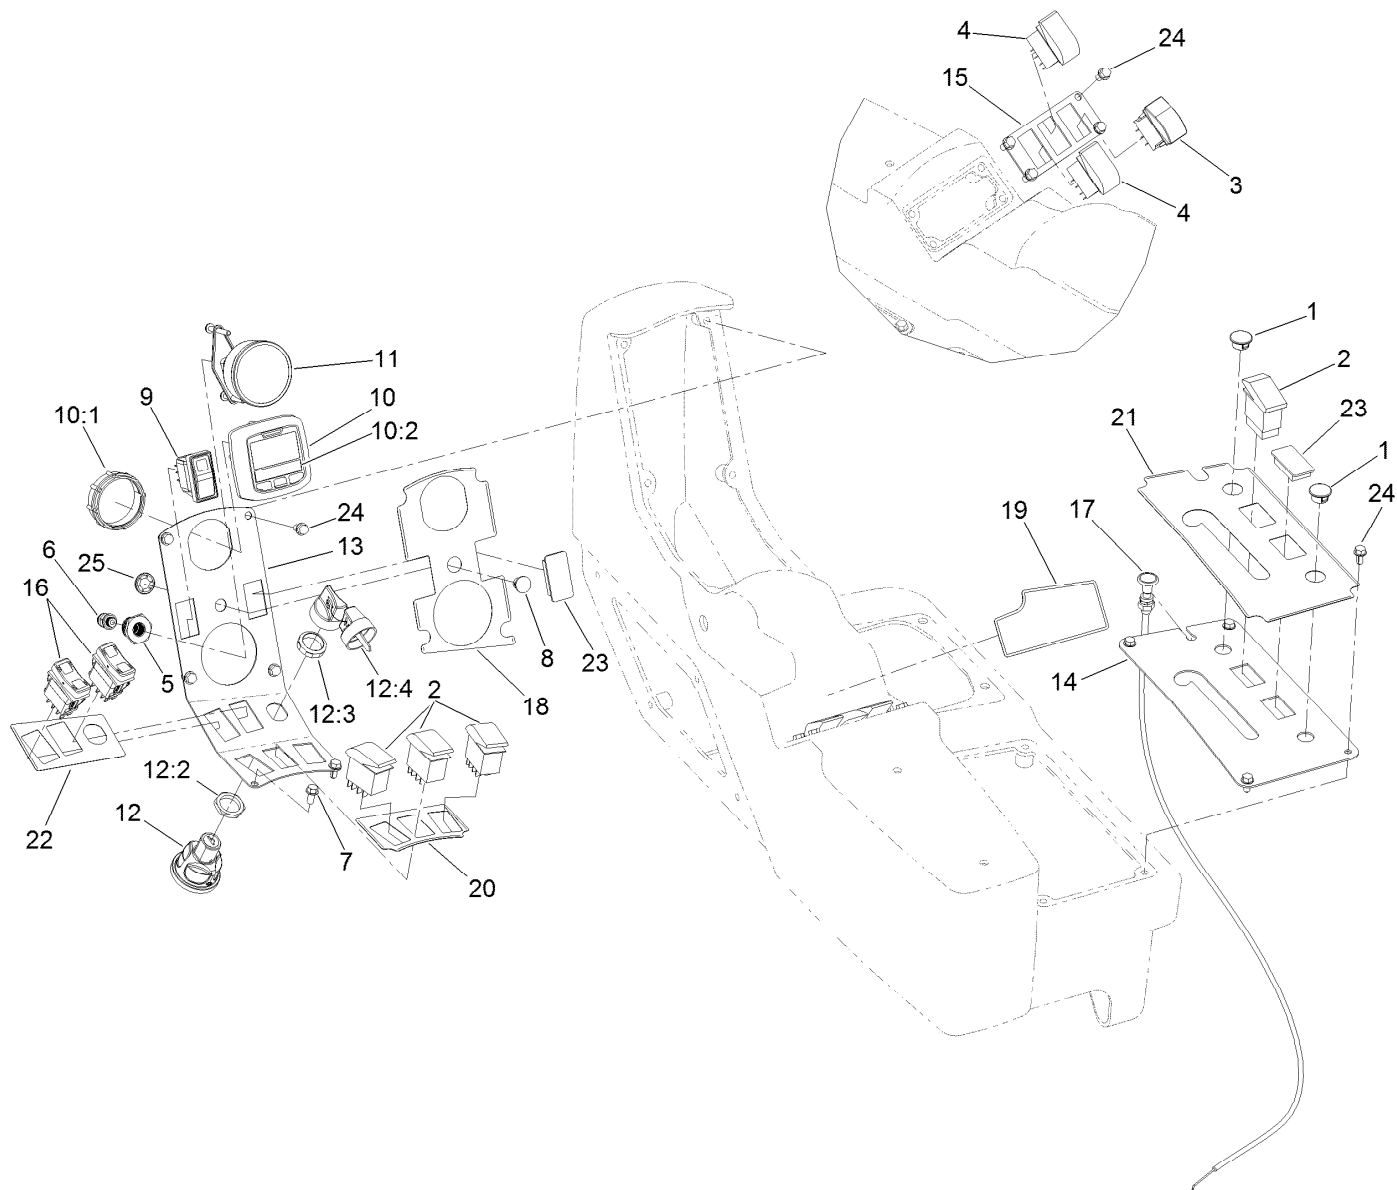

## Control Console Assembly


| Ref. | Part Number | Qty. | Description                  |
|------|-------------|------|------------------------------|
| 1    | 94-5627     | 2    | Plug-Dome                    |
| 2    | 95-8999     | 4    | Switch-Rocker, On-None-On    |
| 3    | 100-1535    | 1    | Switch-Rocker, (On)-Off-(On) |
| 4    | 100-8490    | 2    | Switch-Rocker, On-None-On    |
| 5    | 100-8665    | 1    | Reducer-Gauge, Pressure      |
| 6    | 100-8667    | 1    | Coupler-Reducer              |
| 7    | 46-8093     | 1    | Screw-Plastite               |
| 8    | 119-5329    | 1    | Plug-Hole                    |
| 9    | 120-0695    | 1    | Switch-Rocker, On-Off-(On)   |
| 10   | 120-6310    | 1    | LCD Display ASM Kantrak 1700 |
| 10:1 | 120-4630    | 1    | Nut-Display                  |
| 10:2 | 120-6311    | 1    | Decal-Display                |
| 11   | 120-8546    | 1    | Gauge-Pressure               |
 
| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 12   | 121-5159    | 1    | Switch-Ignition            |
| 12:2 | 121-5160    | 1    | Nut-Hex                    |
| 12:3 | 121-5161    | 1    | Nut-Face                   |
| 12:4 | 121-5162    | 1    | Set-Key, Ignition          |
| 13   | 127-9733-03 | 1    | Panel-Switches             |
| 14   | 125-0896-03 | 1    | Panel-Cover                |
| 15   | 125-0898-03 | 1    | Panel-Switches             |
| 16   | 125-0899    | 2    | Switch-Rocker              |
| 17   | 125-8047    | 1    | Choke-Control              |
| 18   | 125-4125    | 1    | Decal-Control Panel, Upper |
| 19   | 130-8293    | 1    | Decal-Control Panel, Rear  |
| 20   | 125-4129    | 1    | Decal-Control Panel, Spray |
| 21   | 125-8113    | 1    | Decal-Control Panel        |
| 22   | 125-4128    | 1    | Decal-Switch Panel, Center |
| 23   | 99-7420     | 2    | Plug-Hole                  |
| 24   | 93-6083     | 13   | Screw-HWH                  |
| 25   | 1-323142    | 1    | Nut-Push                   |

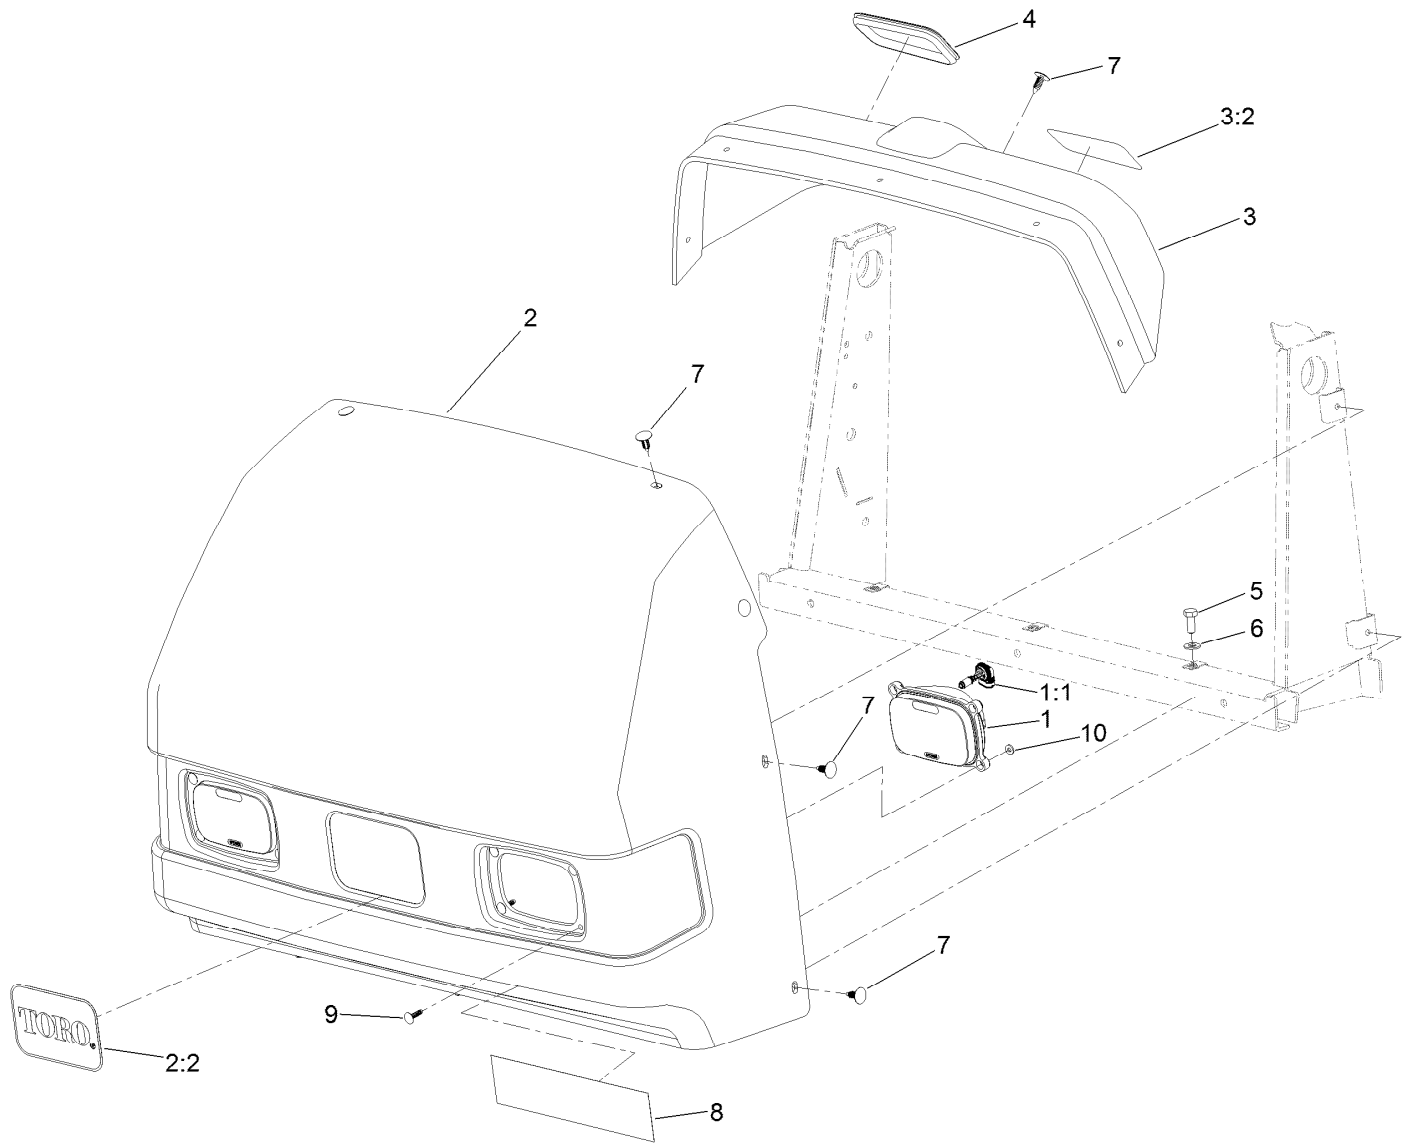

## Hood, Dash and Headlight Assembly

 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 125-0672    | 2    | Headlight ASM           |
| 1:1  | 125-0673    | 1    | Halogen-Bulb            |
| 2    | 127-3982    | 1    | Hood                    |
| 2:2  | 67-1300     | 1    | Decal                   |
| 3    | 125-0939    | 1    | Dash                    |
| 3:2  | 127-3941    | 1    | Decal-Warning           |
| 4    | 125-8059    | 1    | Cover- Reservoir, Brake |
| 5    | 322-3       | 3    | Screw-HH                |
| 6    | 3256-23     | 3    | Washer-Plain            |
| 7    | 117-2382    | 10   | Plug-Plastic            |
| 8    | 127-3944    | 1    | Decal                   |
| 9    | 125-8067    | 8    | Plug-Plastic            |
| 10   | 3256-21     | 8    | Washer-Flat             |

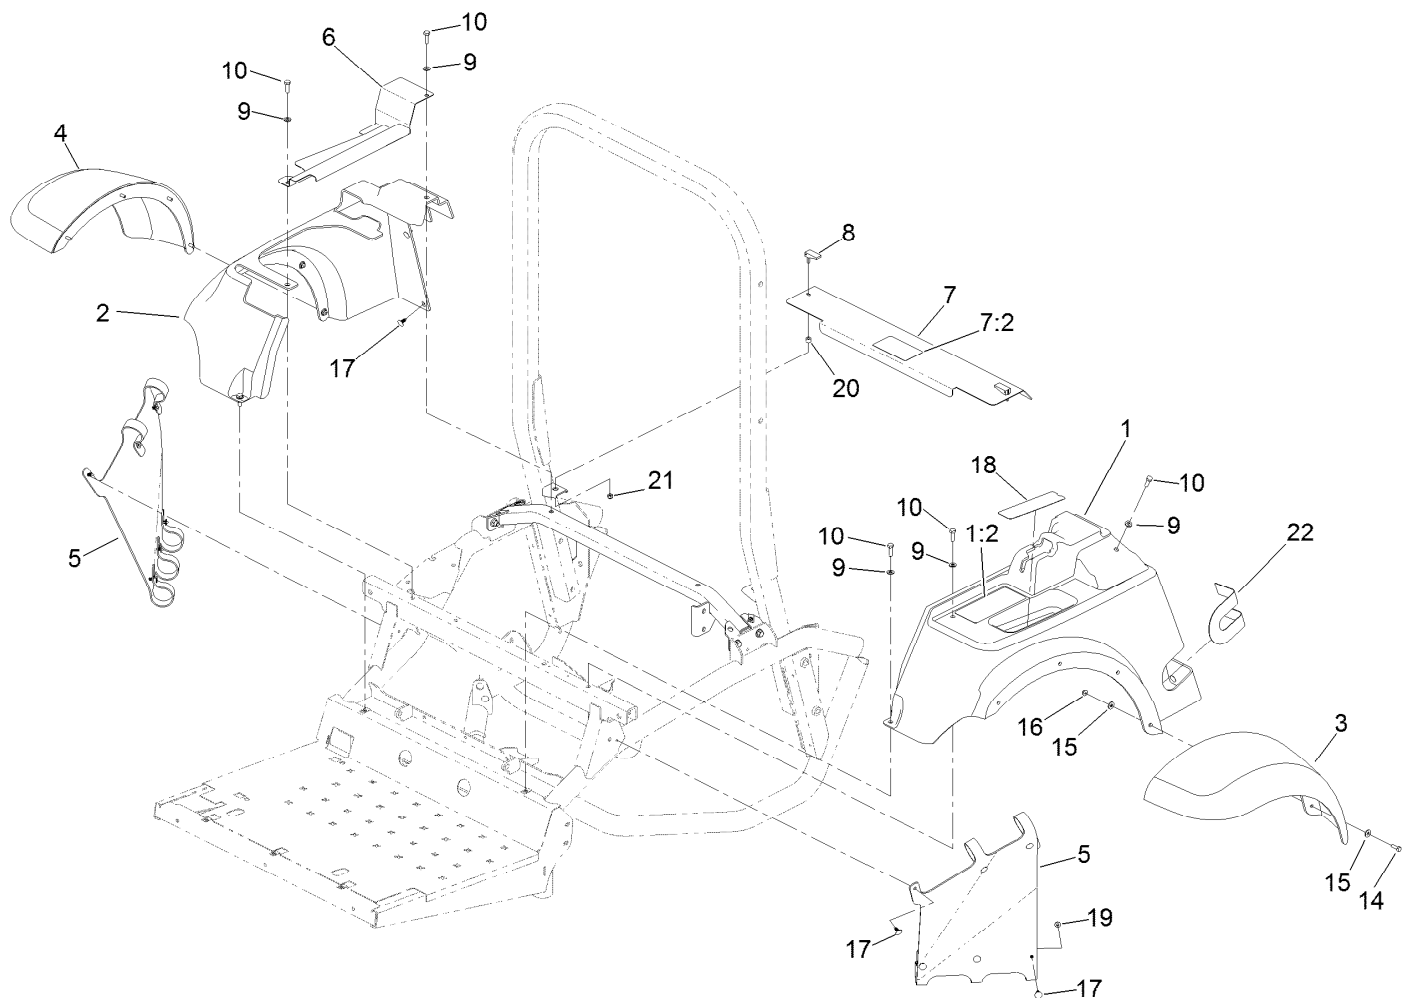

## Seat Base and Front Fender Assembly

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 1    | 127-3980    | 1    | LH Seatbase ASM             |
| 1:2  | 127-3935    | 1    | Decal-Start-Up/Shut-Down    |
| 2    | 125-0803    | 1    | Seatbase-RH                 |
| 3    | 125-0902    | 1    | Fender-LH                   |
| 4    | 125-0903    | 1    | Fender-RH                   |
| 5    | 125-0935    | 2    | Shroud-Fender, Inner        |
| 6    | 125-8088-01 | 1    | Cover-Console, Bottom       |
| 7    | 127-3979    | 1    | Cover-Engine                |
| 7:2  | 127-3937    | 1    | Decal-Warning, Engine Cover |
| 8    | 106-6777    | 2    | Handle-Latch, Swell         |

 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 9    | 3256-23     | 7    | Washer-Plain         |
| 10   | 322-5       | 7    | Screw-HH             |
| 14   | 321-5       | 8    | Screw-HH             |
| 15   | 3256-2      | 16   | Washer-Flat          |
| 16   | 104-7201    | 8    | Nut-HF, NI           |
| 17   | 117-2382    | 16   | Plug-Plastic         |
| 18   | 125-8093    | 1    | Pad-Pocket           |
| 19   | 3256-16     | 10   | Washer-Flat          |
| 20   | 106-6778    | 2    | Bushing-Latch, Swell |
| 21   | 1-804254    | 2    | Nut-Lock, HH         |
| 22   | 131-5822    | 1    | Guard-Rubber         |

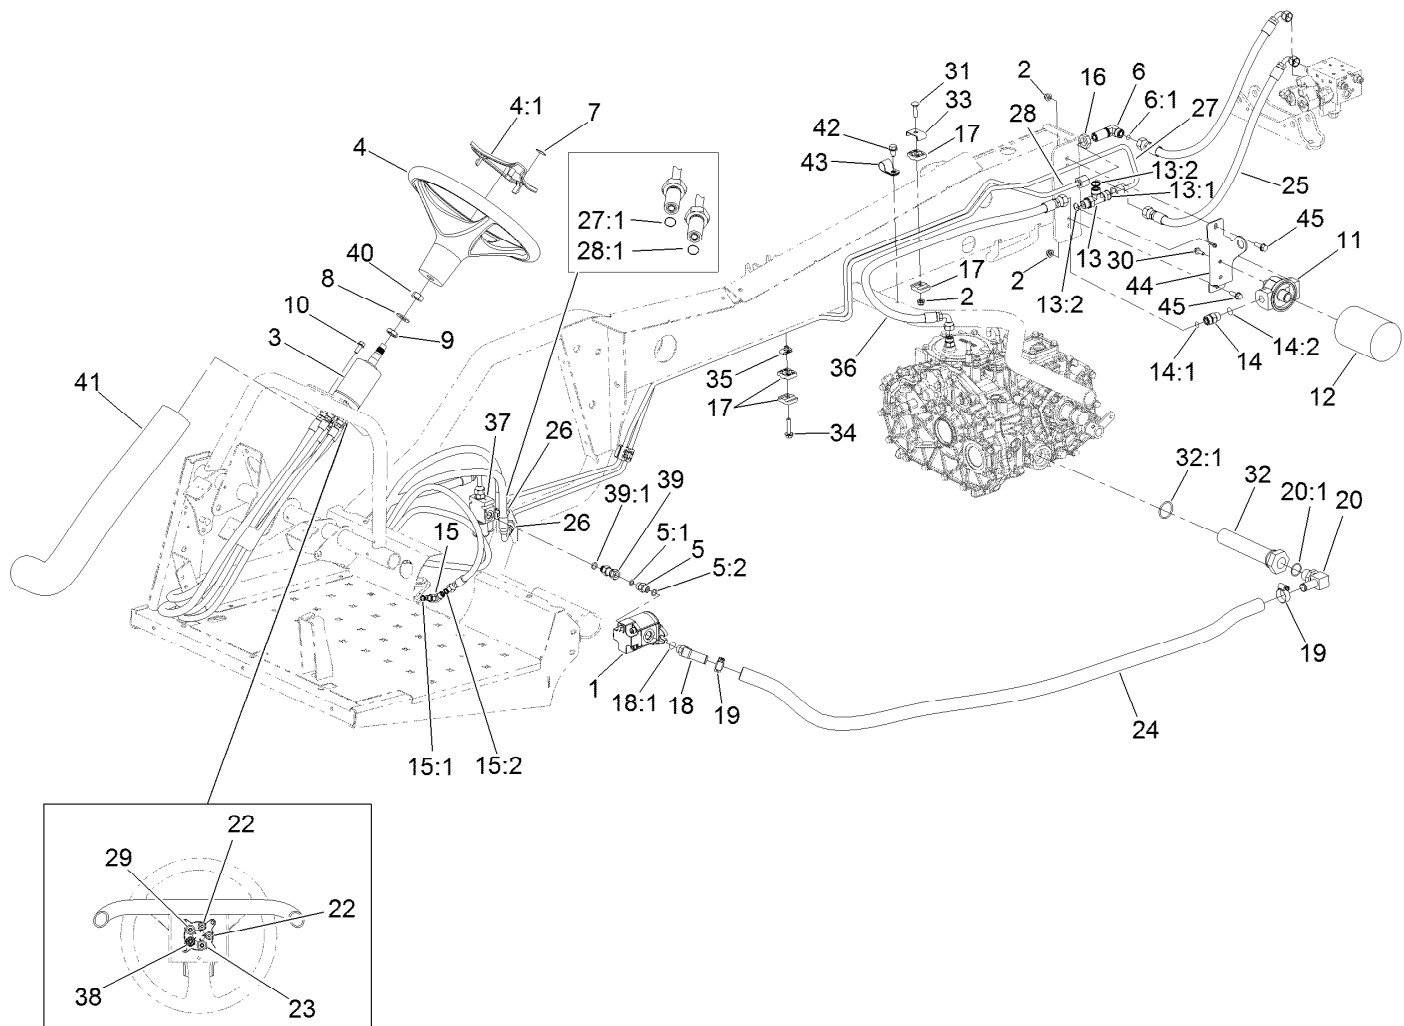

## Hydraulic Steering Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 121-6545    | 1    | HYD Pump ASM             |
| 2    | 104-8300    | 4    | Nut-HF, NI               |
| 3    | 117-0707    | 1    | Steering Valve ASM       |
| 4    | 98-1471     | 1    | Wheel-Steering           |
| 4:1  | 98-1468     | 1    | Cover-Wheel, Steering    |
| 5    | 340-2       | 3    | Fitting-Straight         |
| 5:1  | 237-22      | 1    | O-Ring                   |
| 5:2  | 237-42      | 1    | O-Ring                   |
| 6    | 93-9151     | 1    | Fitting-HYD              |
| 6:1  | 237-30      | 2    | O-Ring                   |
| 7    | 98-1459     | 1    | Decal                    |
| 8    | 3256-27     | 1    | Washer-Flat              |
| 9    | 3296-33     | 1    | Nut-Lock, NI             |
| 10   | 33104-020   | 4    | Screw-HHF                |
| 11   | 87-8780     | 1    | Head-Filter              |
| 12   | 54-0110     | 1    | Filter-Oil, Transmission |
| 13   | 340-109     | 1    | Fitting-Tee              |
| 13:1 | 237-79      | 1    | O-Ring                   |
| 13:2 | 237-30      | 2    | O-Ring                   |
| 14   | 340-4       | 1    | Fitting-Straight         |
| 14:1 | 237-30      | 1    | O-Ring                   |

 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 14:2 | 237-79      | 1    | O-Ring                |
| 15   | 340-132     | 2    | Fitting-Elbow, 90 DEG |
| 15:1 | 237-78      | 1    | O-Ring                |
| 15:2 | 237-21      | 1    | O-Ring                |
| 16   | 340-127     | 1    | Nut-Bulkhead          |
| 17   | 56-7973     | 6    | Clamp-Tube            |
| 18   | 93-6848     | 1    | Fitting-Elbow 45      |
| 18:1 | 237-79      | 1    | O-Ring                |
| 19   | 2412-129    | 2    | Clamp-Hose            |
| 20   | 353-987     | 1    | Fitting-Elbow, 90     |
| 20:1 | 237-81      | 1    | O-Ring                |
| 22   | 108-5675    | 2    | Hydraulic Hose ASM    |
| 23   | 127-3987    | 1    | Hose ASM              |
| 24   | 125-0952    | 1    | Hose-Suction          |
| 25   | 125-0949    | 2    | Hydraulic Hose ASM    |
| 26   | 340-70      | 2    | Nut-Lock              |
| 27   | 125-4058    | 1    | Hydraulic Tube ASM    |
| 27:1 | 237-22      | 1    | O-Ring                |
| 28   | 125-4059    | 1    | Hydraulic Tube ASM    |
| 28:1 | 237-22      | 1    | O-Ring                |
| 29   | 114-7702    | 1    | Hose-HYD              |

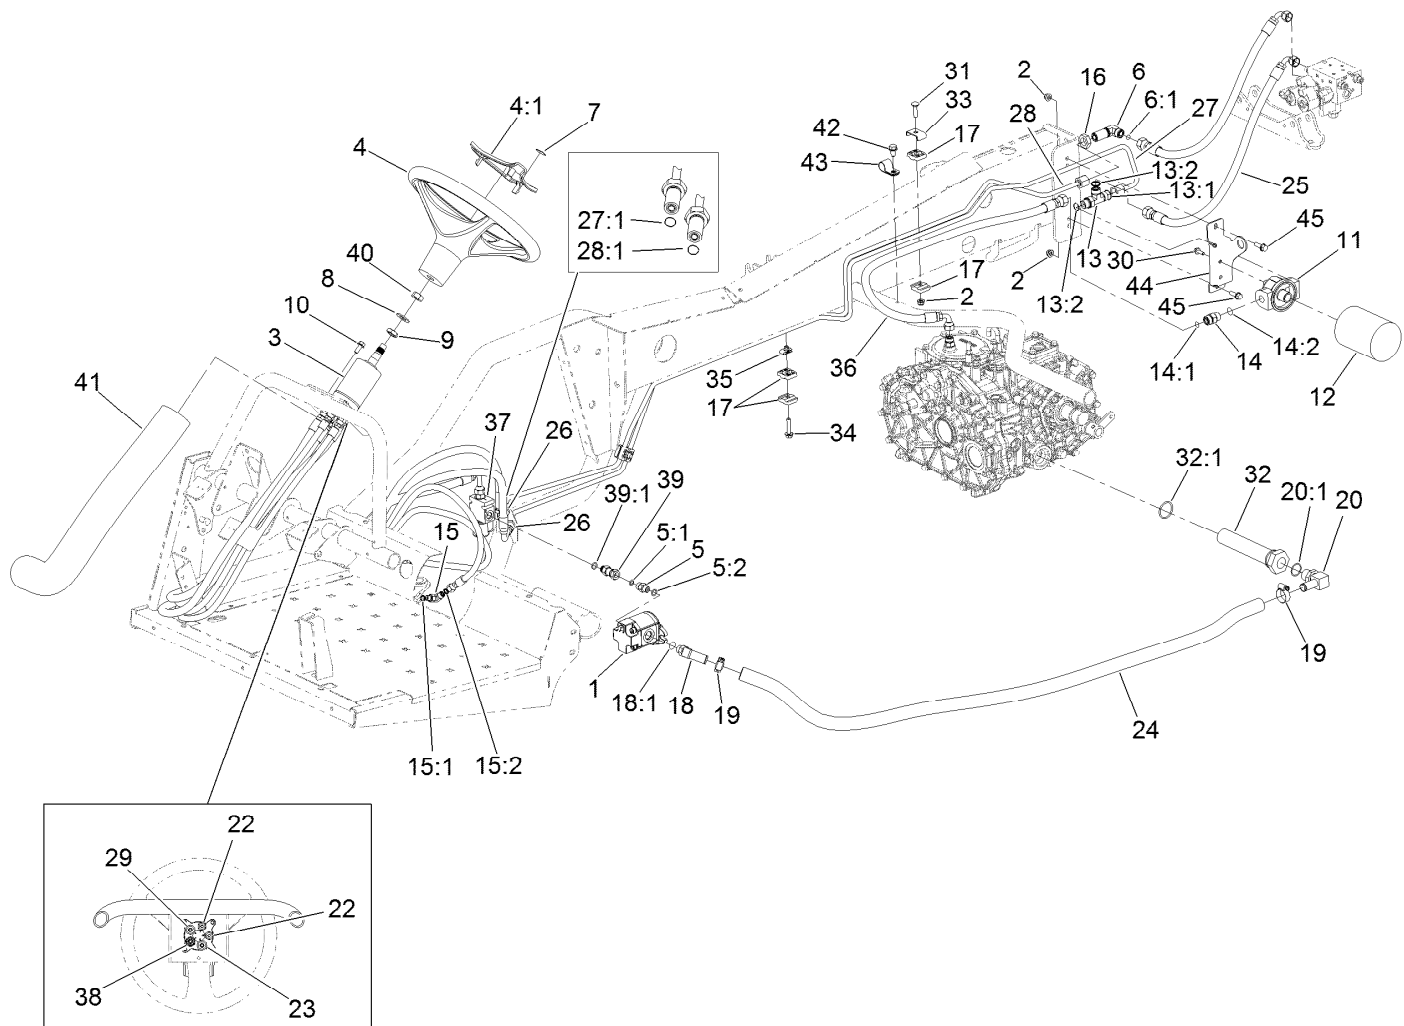

## Hydraulic Steering Assembly (continued)


| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 30   | 3234-4      | 2    | Screw-HHF          |
| 31   | 3230-3      | 2    | Screw-CARR         |
| 32   | 87-3990     | 1    | Strainer-Transaxle |
| 32:1 | 237-123     | 1    | O-Ring             |
| 33   | 119-1418    | 2    | Plate-Clamp, Short |
| 34   | 115-1794    | 1    | Screw-HHF          |
| 35   | 94-2413     | 1    | Nut-U              |
| 36   | 94-5961     | 1    | Hose               |
| 37   | 127-3965    | 1    | Soleniod Valve ASM |
 
| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 38   | 120-2061    | 1    | Hose-HYD                   |
| 39   | 104-3779    | 1    | Connector-Swivel, Straight |
| 39:1 | 237-42      | 1    | O-Ring                     |
| 40   | 106-6713    | 1    | Cover-Lines, Steering      |
| 41   | 3290-379    | 4    | Tie-Cable                  |
| 42   | 32144-15    | 1    | Screw-HHFTF                |
| 43   | 2412-81     | 1    | Clamp-R                    |
| 44   | 136-2313-03 | 1    | Mount-Filter               |
| 45   | 3234-29     | 2    | Screw-HHF                  |

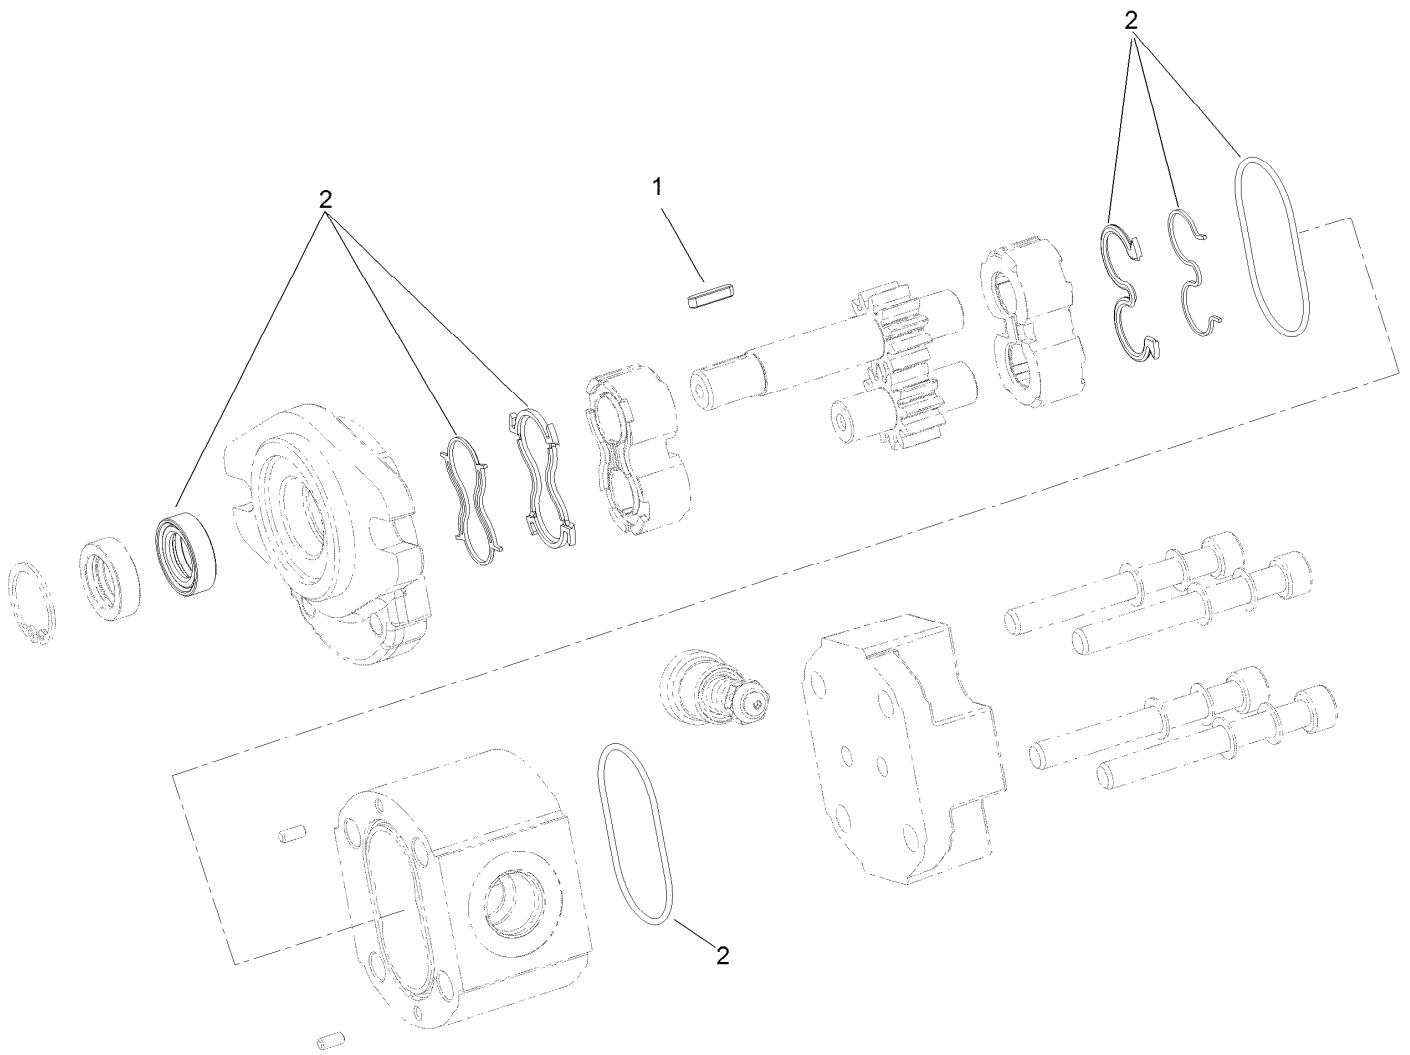

## Hydraulic Pump Assembly No. 121-6545
 
| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 1    | 125-8147    | 1    | Key, Square |
| 2    | 125-8148    | 1    | Seal Kit    |

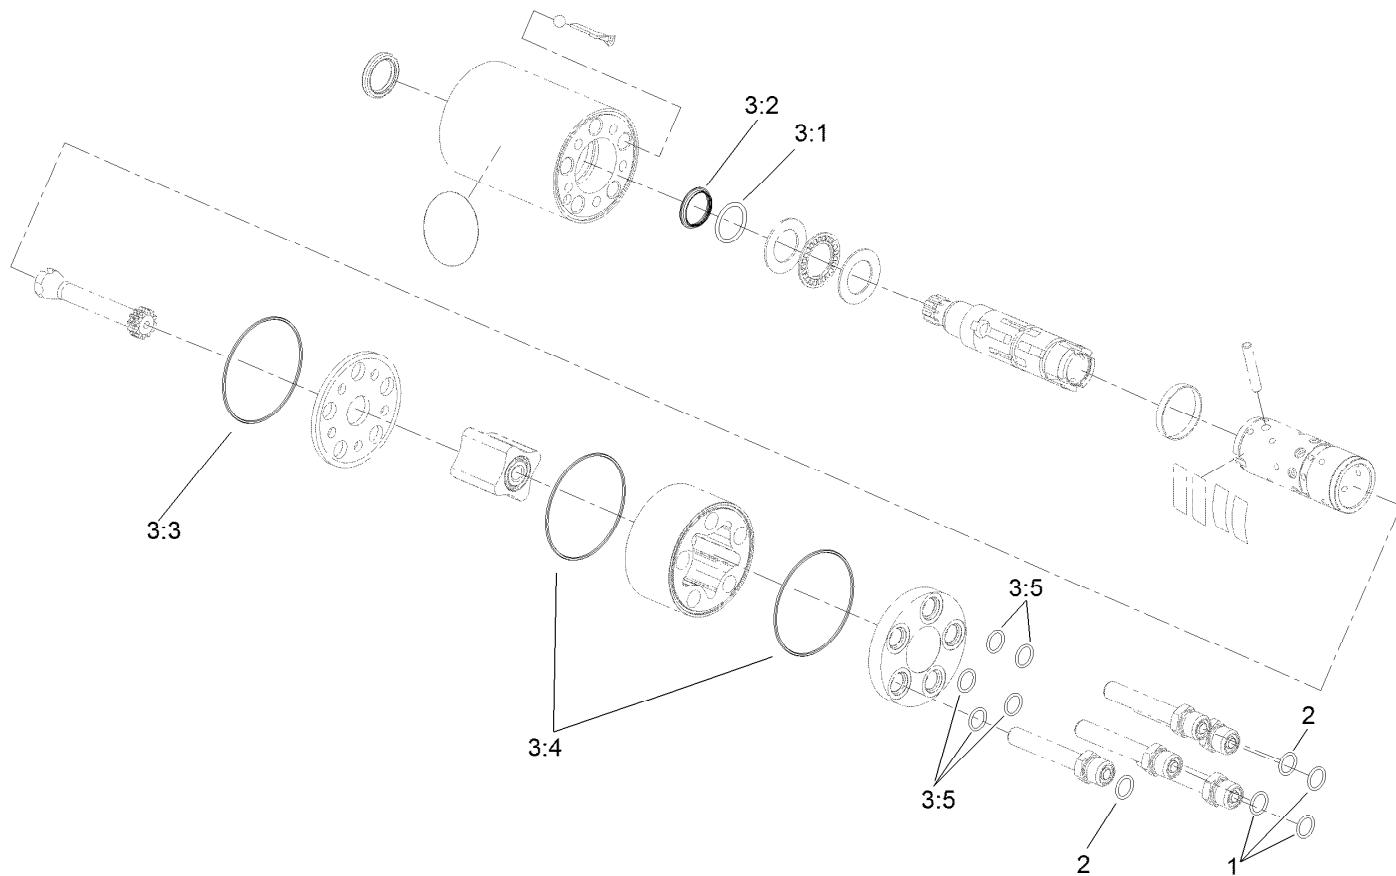


## Steer Valve Assembly No. 117-0707

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    | 237-21      | 3    | O-Ring            |
| 2    | 237-22      | 2    | O-Ring            |
| 3    | 106-6716    | 1    | Seal Kit ●        |
| 3:1  |             | 1    | Ring-Seal, Dust ■ |
| 3:2  |             | 1    | Seal-Shaft ■      |
| 3:3  |             | 1    | O-Ring ■          |
| 3:4  |             | 2    | O-Ring ■          |
| 3:5  |             | 5    | O-Ring ■          |

● Not illustrated

 ■ Not serviced separately




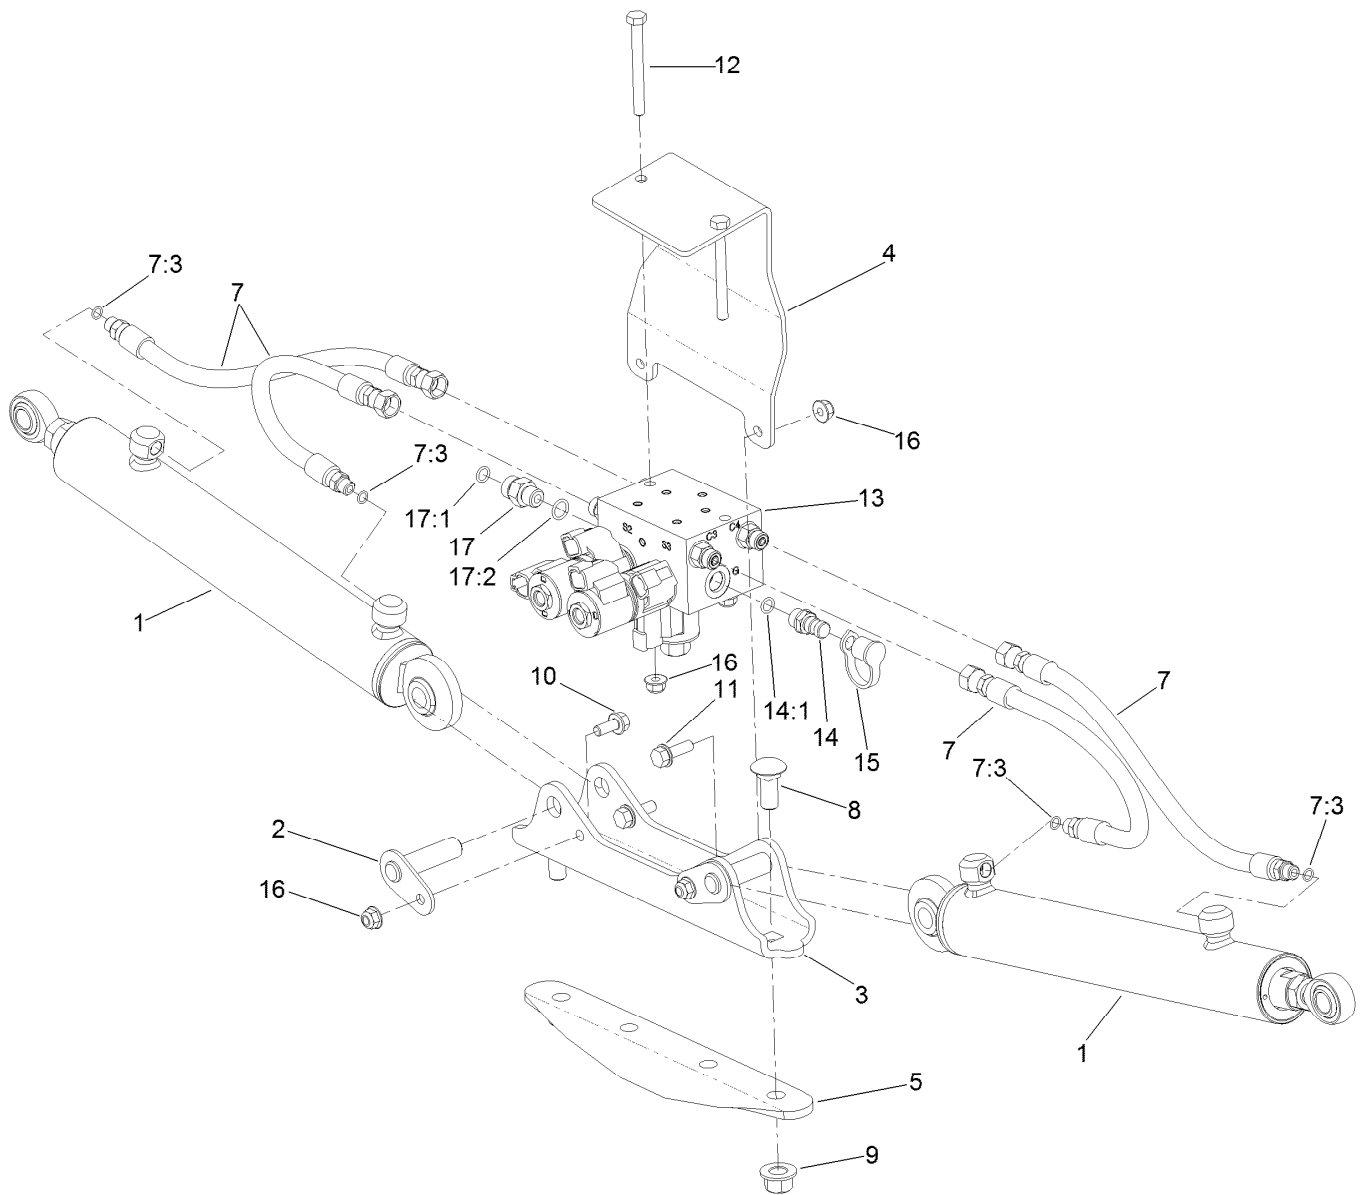

## Boom Lift Hydraulic Assembly

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 117-0701    | 2    | Hydraulic Cylinder ASM |
| 2    | 112-7884    | 2    | Pin-Pivot              |
| 3    | 119-4856-03 | 1    | Plate-Mount, Cylinders |
| 4    | 130-8201-03 | 1    | Mount-Valve            |
| 5    | 131-0297-03 | 1    | Plate-Stiffener, Boom  |
| 7    | 119-4859    | 4    | Hose ASM               |
| 7:3  | 237-78      | 1    | O-Ring                 |
| 8    | 110-5067    | 2    | Screw-CARR             |
| 9    | 99-5107     | 2    | Nut-HF Nylock          |
| 10   | 110-5053    | 2    | Screw-HHF              |
 
| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 11   | 3234-29     | 2    | Screw-HHF                  |
| 12   | 322-14      | 2    | Screw-HH                   |
| 13   | 136-2400    | 1    | On-Off Boom Lift Valve ASM |
| 14   | 59-7410     | 1    | Fitting-Diagnostic         |
| 14:1 | 237-42      | 1    | O-Ring                     |
| 15   | 354-79      | 1    | Cap-Dust                   |
| 16   | 104-8300    | 6    | Nut-HF, NI                 |
| 17   | 340-2       | 2    | Fitting-Straight           |
| 17:1 | 237-22      | 1    | O-Ring                     |
| 17:2 | 237-42      | 1    | O-Ring                     |

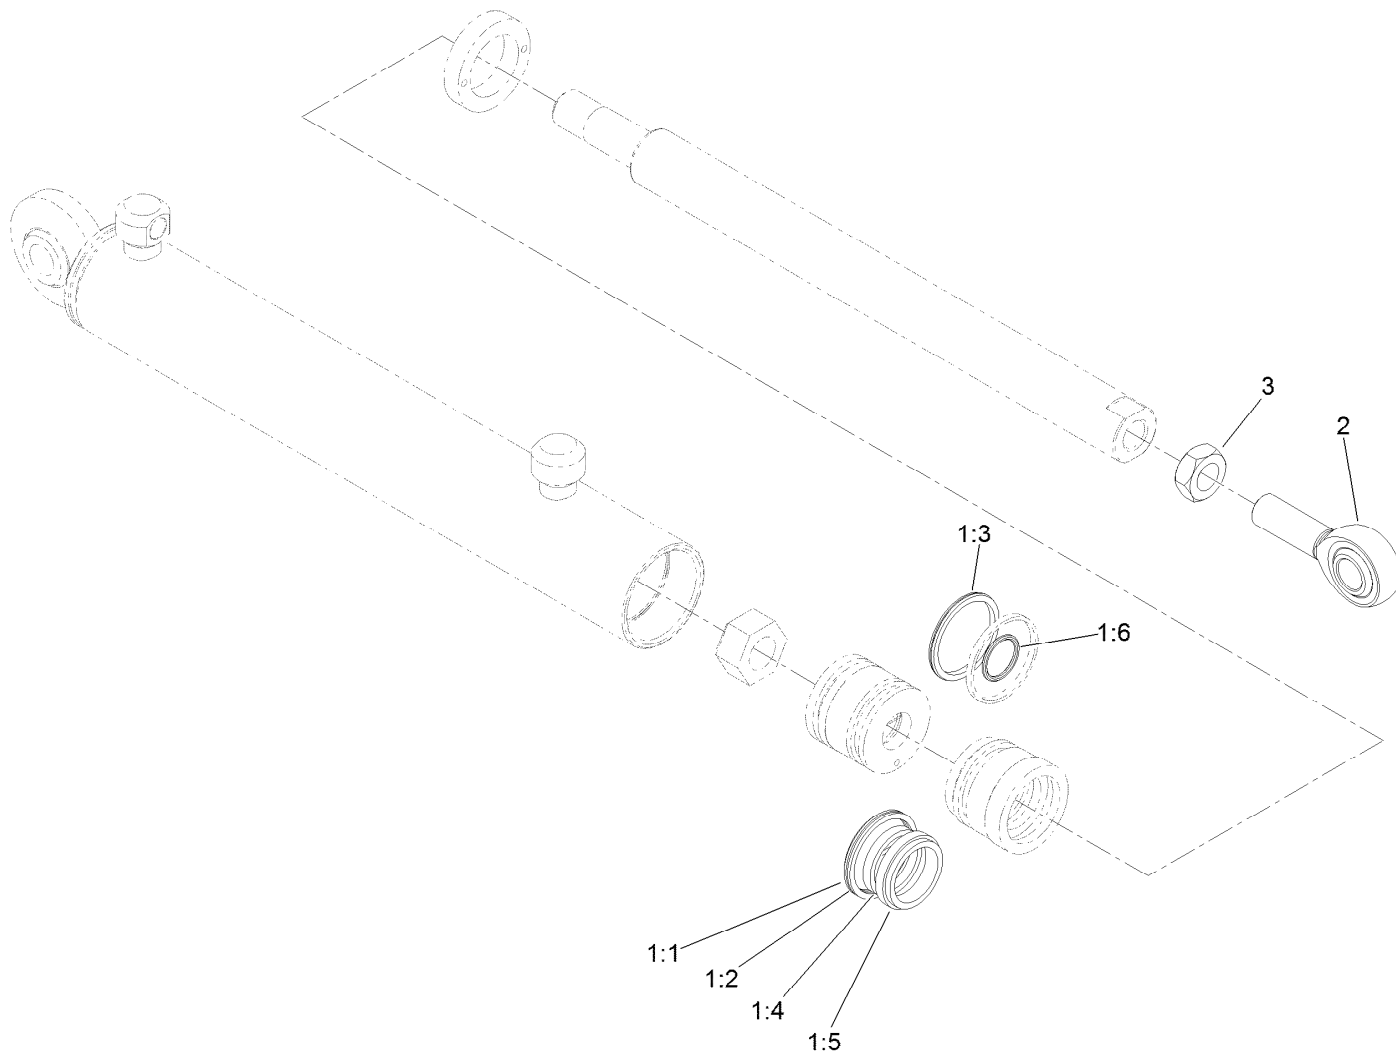


## Hydraulic Cylinder Assembly No. 117-0701

| Ref. | Part Number | Qty. | Description   |
|------|-------------|------|---------------|
| 1    | 119-8026    | 1    | Seal Kit ●    |
| 1:1  |             | 1    | O-Ring ■      |
| 1:2  |             | 1    | Ring-Backup ■ |
| 1:3  |             | 1    | Bp Seal ■     |
| 1:4  |             | 1    | Bs Seal ■     |
| 1:5  |             | 1    | Dust Seal ■   |
| 1:6  |             | 1    | O-Ring ■      |
| 2    | 119-8027    | 1    | Rod End       |
| 3    | 3220-6      | 1    | Nut-Jam       |

● Not illustrated

 
■ Not serviced separately

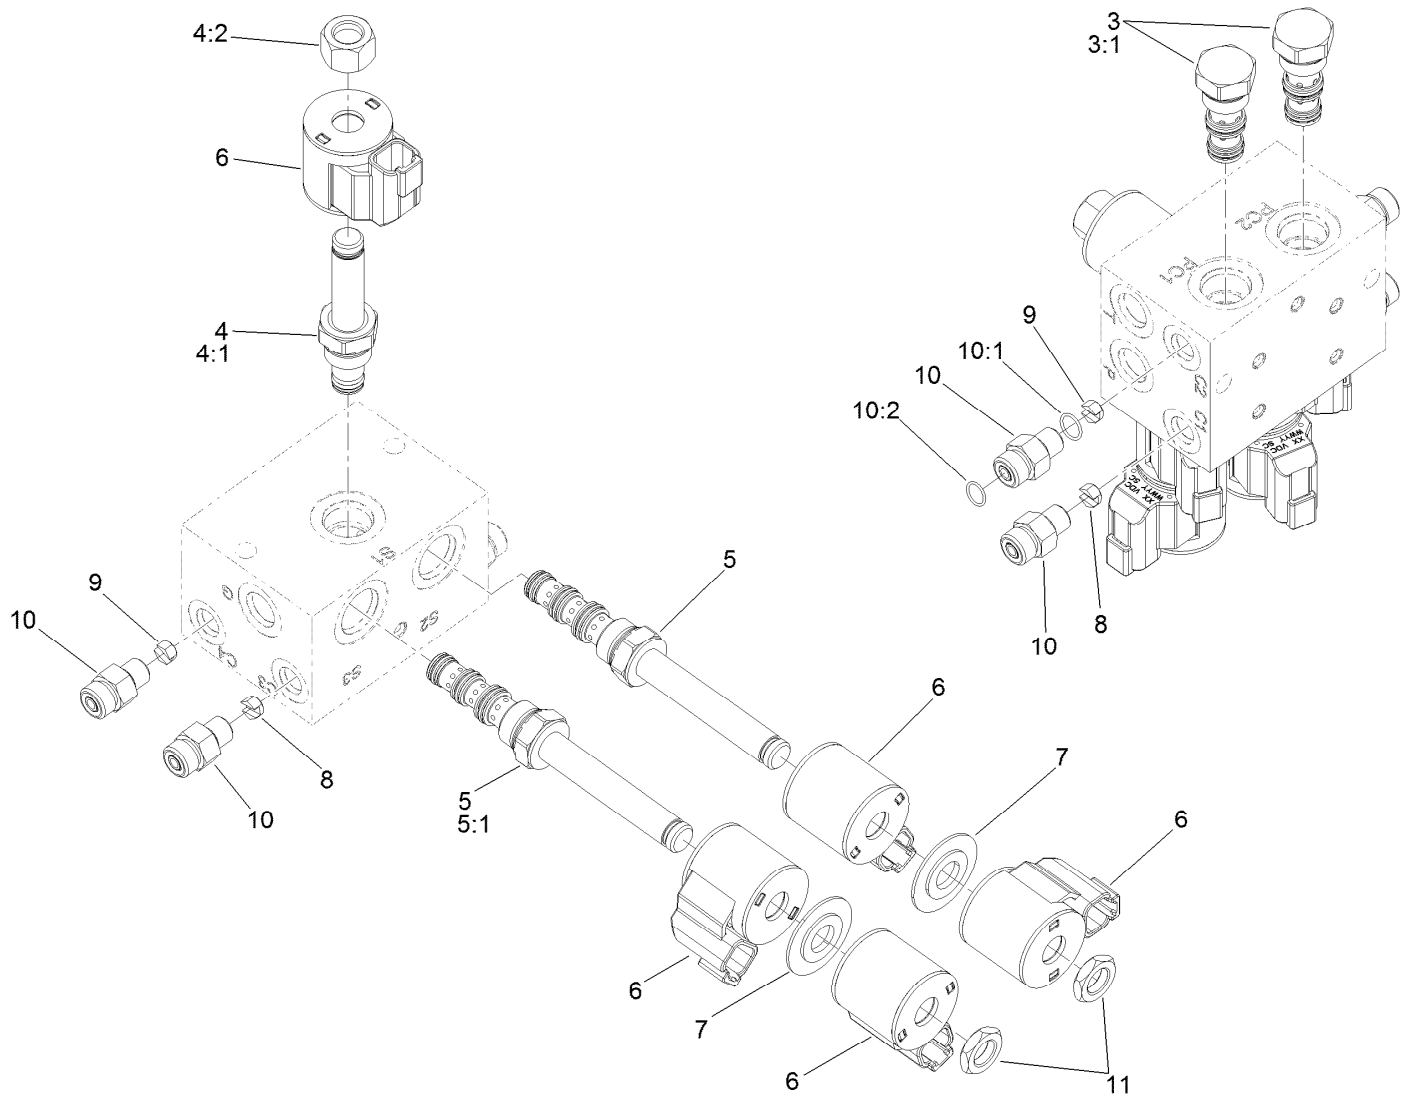

## On-Off Boom Lift Valve Assembly No. 136-2400

| Ref. | Part Number | Qty. | Description                   |
|------|-------------|------|-------------------------------|
| 3    | 136-2430    | 2    | Valve-Check, Po               |
| 3:1  | 120-0886    | 1    | Seal Kit                      |
| 4    | 107-7517    | 1    | Valve-Solenoid                |
| 4:1  | 105-9156    | 1    | Seal Kit                      |
| 4:2  | 107-7812    | 1    | Nut-Solenoid                  |
| 5    | 120-2587    | 2    | Valve-Solenoid                |
| 5:1  | 112-6520    | 1    | Seal Kit ●                    |
| 6    | 119-8036    | 5    | Coil                          |
| 7    | 120-2586    | 2    | Spacer-Coil                   |
| 8    | 110-8903    | 2    | Orifice-Control, Flow (0.055) |
| 9    | 136-2399    | 2    | Orifice-Control, Flow (0.025) |
| 10   | 340-92      | 4    | Fitting-Straight              |
| 10:1 | 237-78      | 1    | O-Ring                        |
| 10:2 | 237-21      | 1    | O-Ring                        |
| 11   | 110-2634    | 2    | Nut-Coil                      |

 ● Not illustrated

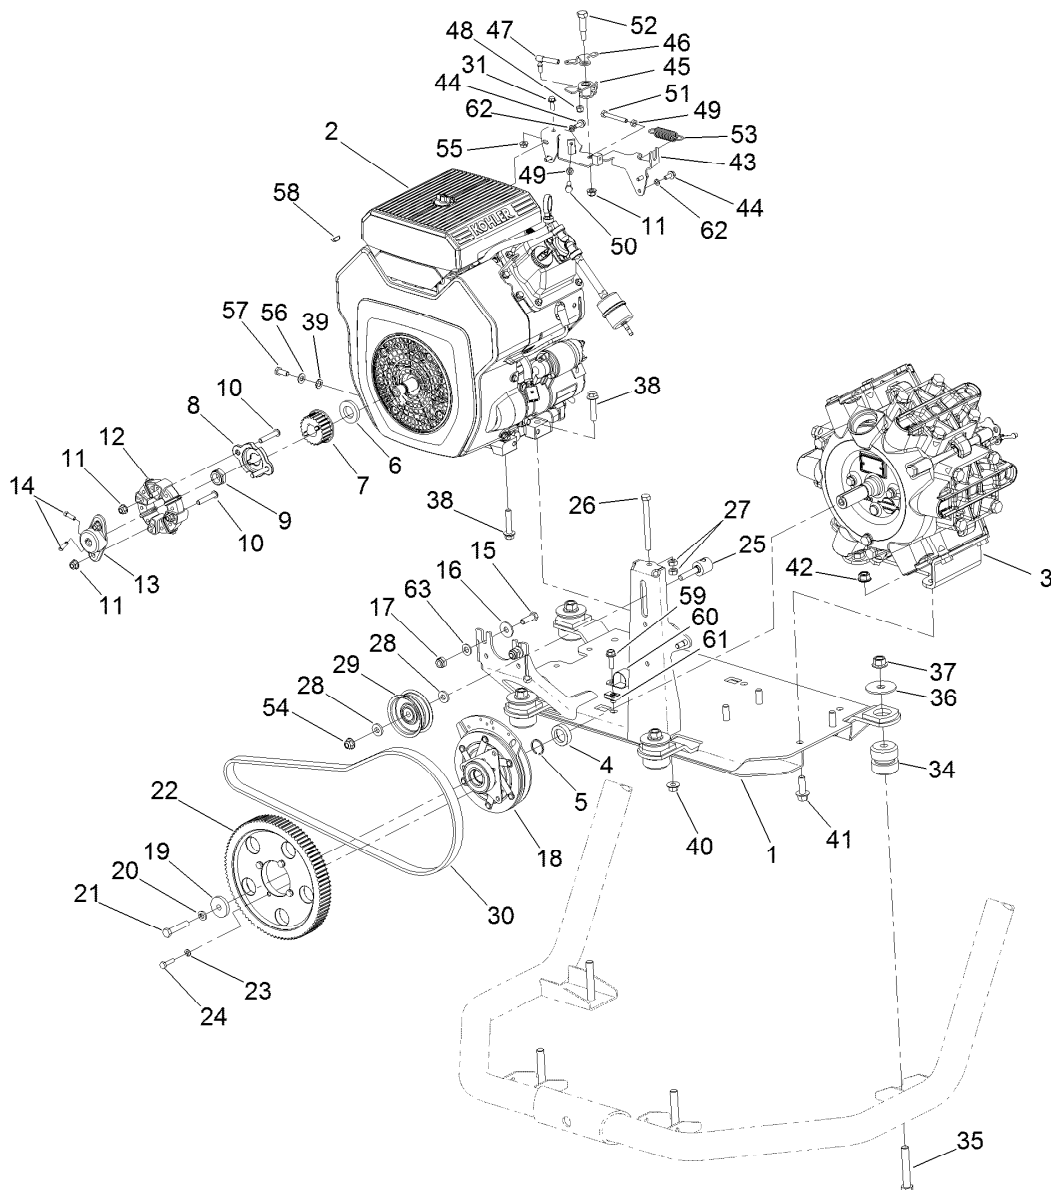


## Engine Mounting Assembly

| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 1    | 121-6511-03 | 1    | Mount-Engine              |
| 2    | 164-1035    | 1    | Engine-Rehlko ■           |
| 2:1  | 108-3847    | 1    | Filter-Oil ●              |
| 3    | 132-7767    | 1    | Pump                      |
| 4    | 108-3301    | 1    | Retainer-Spacer           |
| 5    | 108-3302    | 1    | Ring-Snap                 |
| 6    | 104-1105    | 1    | Spacer-Support, Deck      |
| 7    | 125-8017    | 1    | Sprocket-22 Tooth         |
| 8    | 125-4092    | 1    | Adaptor-Sprocket, Flanged |
| 9    | 3296-15     | 1    | Nut-Lock, NI              |
| 10   | 125-7977    | 4    | Screw-HSBH                |
| 11   | 104-8300    | 5    | Nut-HF, NI                |
| 12   | 119-0652    | 1    | Coupler-Rubber            |
| 13   | 115-2169    | 1    | Hub-Pump                  |
| 14   | 3241-6      | 2    | Screw-SQH                 |
| 15   | 323-7       | 2    | Screw-HH                  |
| 16   | 52-2861     | 2    | Washer                    |
| 17   | 3296-44     | 2    | Nut-Lock, NI              |

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 18   | 120-7625    | 1    | Clutch-Electric   |
| 19   | 125-0604    | 1    | Spacer-Clutch     |
| 20   | 3253-5      | 1    | Washer-Lock       |
| 21   | 3211-46     | 1    | Screw-HH          |
| 22   | 125-7982    | 1    | Sprocket-90 Tooth |
| 23   | 3253-3      | 4    | Washer-Lock       |
| 24   | 321-6       | 4    | Screw-HH          |
| 25   | 125-0605    | 1    | Shaft-Idler       |
| 26   | 107-4026    | 1    | Screw-HH          |
| 27   | 3217-7      | 2    | Nut-Hex           |
| 28   | 43-0940     | 2    | Spacer            |
| 29   | 1-633167    | 1    | Sheave-Idler      |
| 30   | 125-0765    | 1    | Belt-Synchronous  |
| 31   | 115-5103    | 1    | Screw-HHF         |
| 34   | 106-7865    | 4    | Mount-Engine      |
| 35   | 325-12      | 4    | Screw-HH          |
| 36   | 41985       | 4    | Washer-Special    |
| 37   | 99-5107     | 4    | Nut-HF Nylock     |

● Not illustrated

 ■ [www.engines.rehlko.com](http://www.engines.rehlko.com)

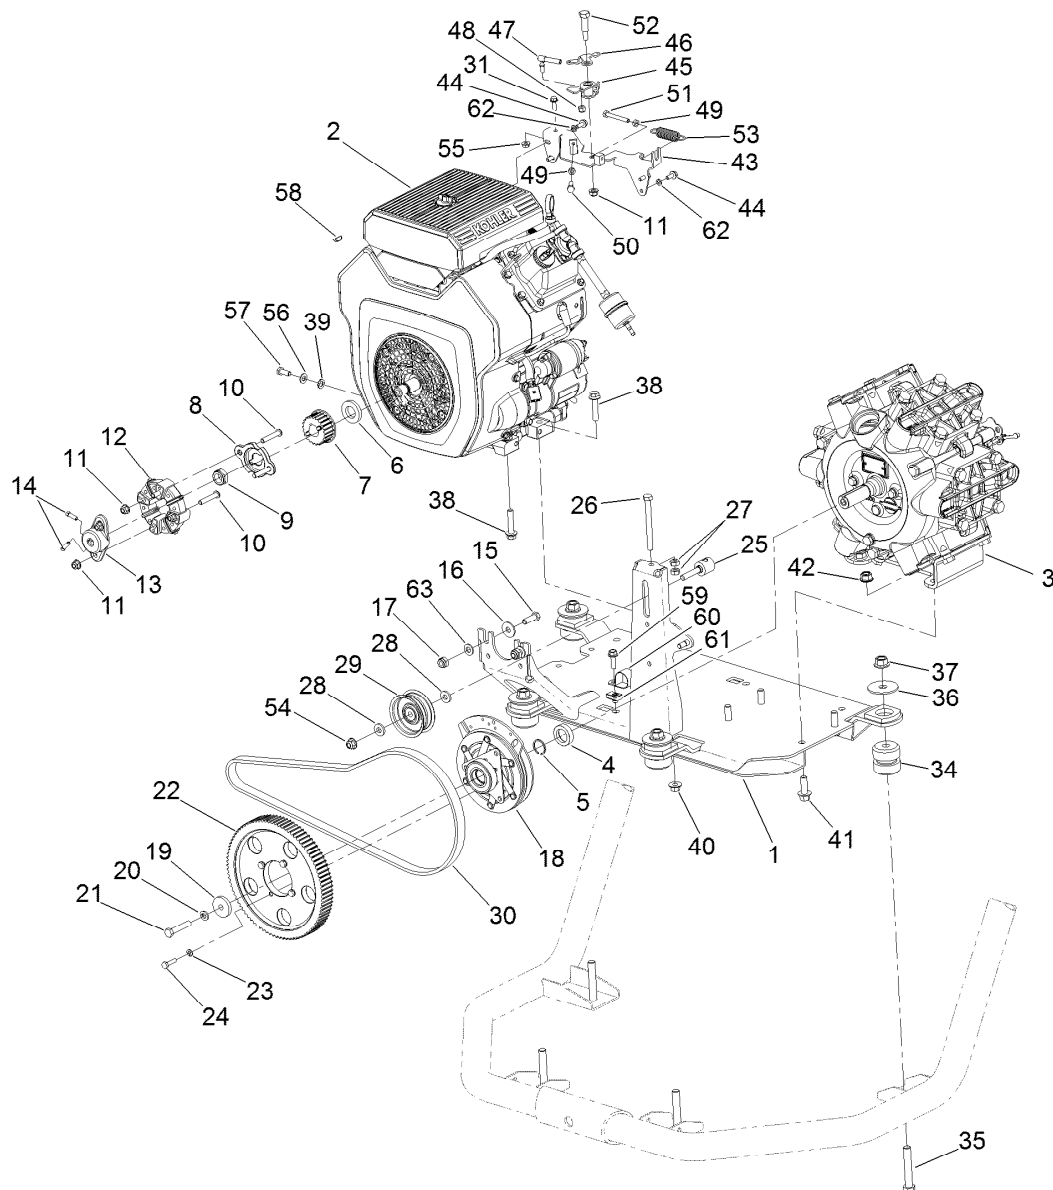


## Engine Mounting Assembly (continued)

| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 38   | 3234-19     | 4    | Screw-HHF        |
| 39   | 3255-9      | 1    | Washer-Lock      |
| 40   | 32128-43    | 4    | Nut-Flange       |
| 41   | 3234-15     | 4    | Screw-HHF        |
| 42   | 114-8417    | 4    | Nut-HF, NI       |
| 43   | 87-7780-03  | 1    | Bracket-Throttle |
| 44   | 33103-016   | 4    | Screw-HHF        |
| 45   | 87-7800     | 1    | Lever-Throttle   |
| 46   | 87-7790     | 1    | Lever-Choke      |
| 47   | 18-1720     | 1    | Ball Joint       |
| 48   | 3296-3      | 1    | Nut-Lock         |
| 49   | 3220-1      | 2    | Nut-Jam          |
| 50   | 329-6       | 1    | Screw-HH         |

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 51   | 108-3660    | 1    | Screw-TAP          |
| 52   | 7-0030      | 1    | Screw-Shoulder, HH |
| 53   | 67-1450     | 1    | Spring-Idler       |
| 54   | 104-8301    | 1    | Nut-HF, NI         |
| 55   | 32128-33    | 1    | Nut-HF             |
| 56   | 3256-23     | 1    | Washer-Plain       |
| 57   | 33114-020   | 1    | Screw-HH           |
| 58   | 3257-5      | 1    | Key-Woodruff       |
| 59   | 3234-17     | 1    | Screw-HHF          |
| 60   | 2412-126    | 1    | R-Clamp            |
| 61   | 115-7721    | 1    | Nut-Clip, U        |
| 62   | 48-8020     | 4    | Washer-Spring      |
| 63   | 3256-24     | 2    | Washer-Plain       |

● Not illustrated

 
■ [www.engines.rehiko.com](http://www.engines.rehiko.com)

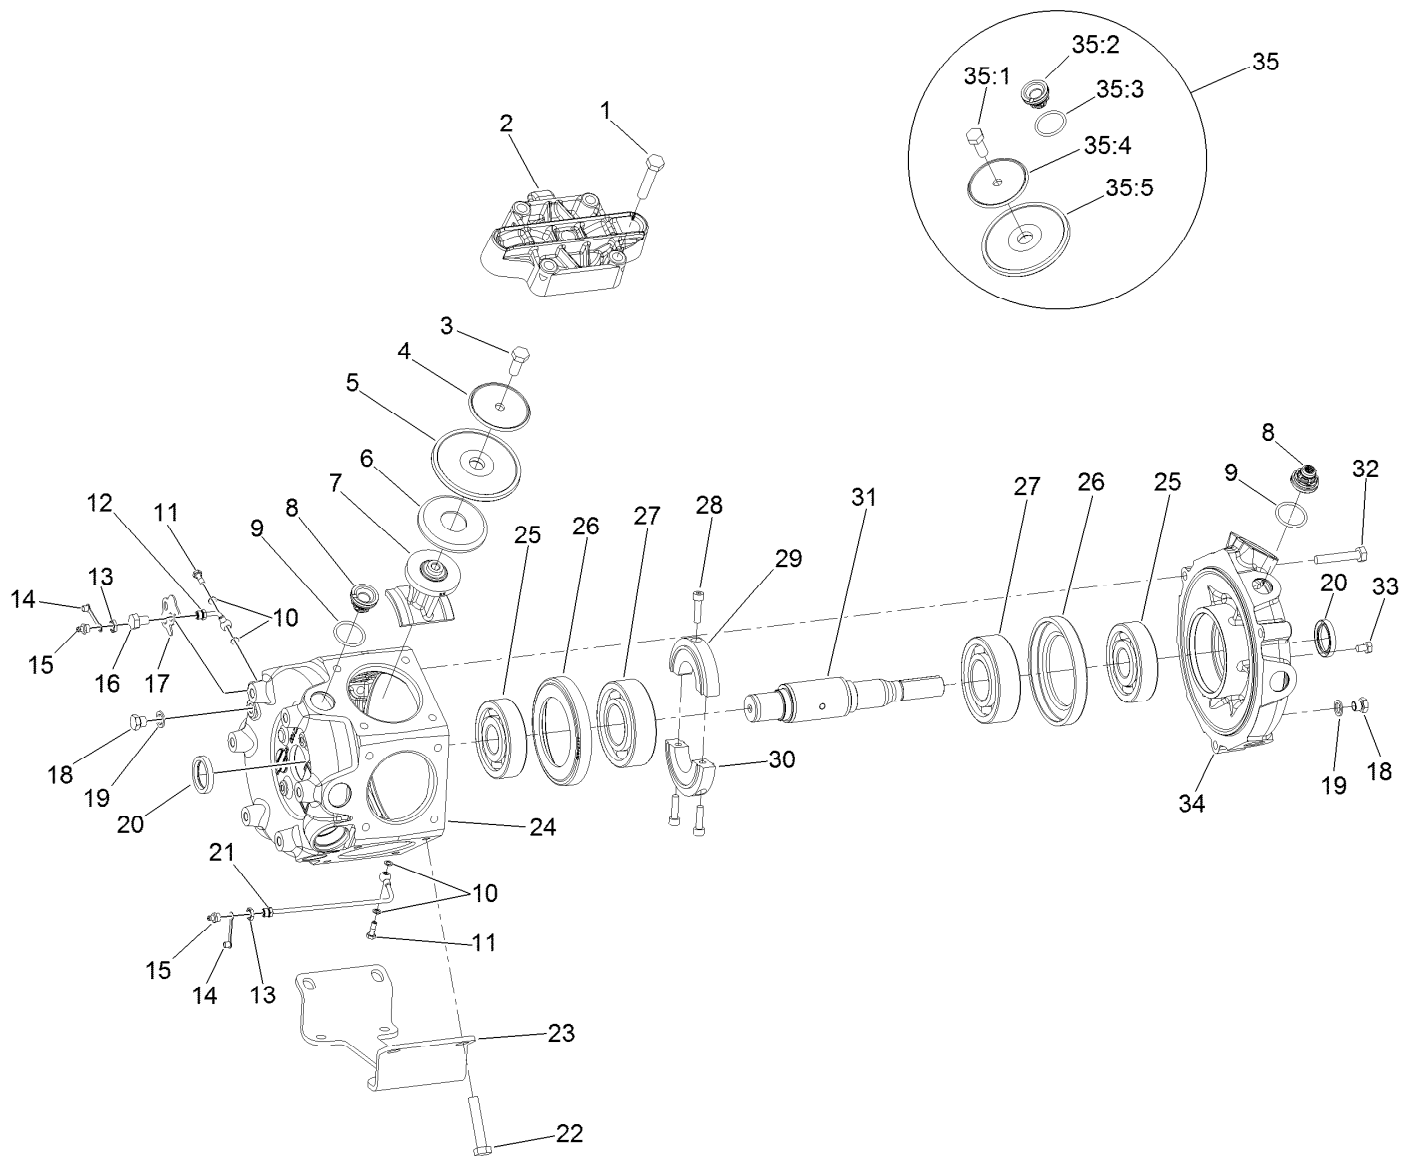

## Pump Assembly No. 132-7767

| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 1    | 120-0773    | 20   | Bolt-Hex                  |
| 2    | 133-2824    | 6    | Cover-Pump, Hardened      |
| 3    | 120-0777    | 6    | Bolt-Hex                  |
| 4    | 120-0778    | 6    | Disc-Diaphragm            |
| 5    | 120-0779    | 6    | Diaphragm                 |
| 6    | 120-0780    | 6    | Disc-Backing, Diaphragm   |
| 7    | 125-8141    | 6    | Rod-Connectiing           |
| 8    | 99-0861     | 12   | Valve-Pump                |
| 9    | 100-6651    | 12   | O-Ring                    |
| 10   | 136-2251    | 4    | Gasket                    |
| 11   | 133-2830    | 2    | Bolt-Banjo                |
| 12   | 133-2876    | 1    | Tube-Banjo, Short         |
| 13   | 133-2878    | 2    | Nut                       |
| 14   | 133-2880    | 2    | Cap-Grease Nipple, Yellow |
| 15   | 133-2879    | 2    | Nipple-Grease             |
| 16   | 136-2252    | 1    | Bolt-Hex                  |
| 17   | 133-2875    | 1    | Plate-Nipple, Grease      |
| 18   | 120-0785    | 2    | Plug                      |
| 19   | 120-0786    | 2    | Seal                      |
| 20   | 120-0783    | 2    | Seal-Oil                  |
 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 21   | 133-2877    | 1    | Tube-Banjo, Long    |
| 22   | 120-0774    | 4    | Bolt-Hex            |
| 23   | 120-0787    | 1    | Foot-Pump           |
| 24   | 133-2821    | 1    | Housing-Pump, Main  |
| 25   | 120-0788    | 2    | Bearing-Ball        |
| 26   | 133-2820    | 2    | Spacer-Metal        |
| 27   | 120-0791    | 2    | Bearing-Ball        |
| 28   | 125-8146    | 3    | Bolt-Allen          |
| 29   | 133-2828    | 1    | Counter Weight      |
| 30   | 133-2829    | 1    | Counter Weight      |
| 31   | 133-2826    | 1    | Shaft - Crank       |
| 32   | 120-0794    | 3    | Bolt-Hex            |
| 33   | 120-0784    | 4    | Bolt-Hex            |
| 34   | 133-2822    | 1    | Housing-Pump, Front |
| 35   | 133-2885    | 1    | Pump Repair Kit     |
| 35:1 | 120-0777    | 6    | Bolt-Hex            |
| 35:2 | 99-0861     | 12   | Valve-Pump          |
| 35:3 | 100-6651    | 12   | O-Ring              |
| 35:4 | 120-0778    | 6    | Disc-Diaphragm      |
| 35:5 | 120-0779    | 6    | Diaphragm           |

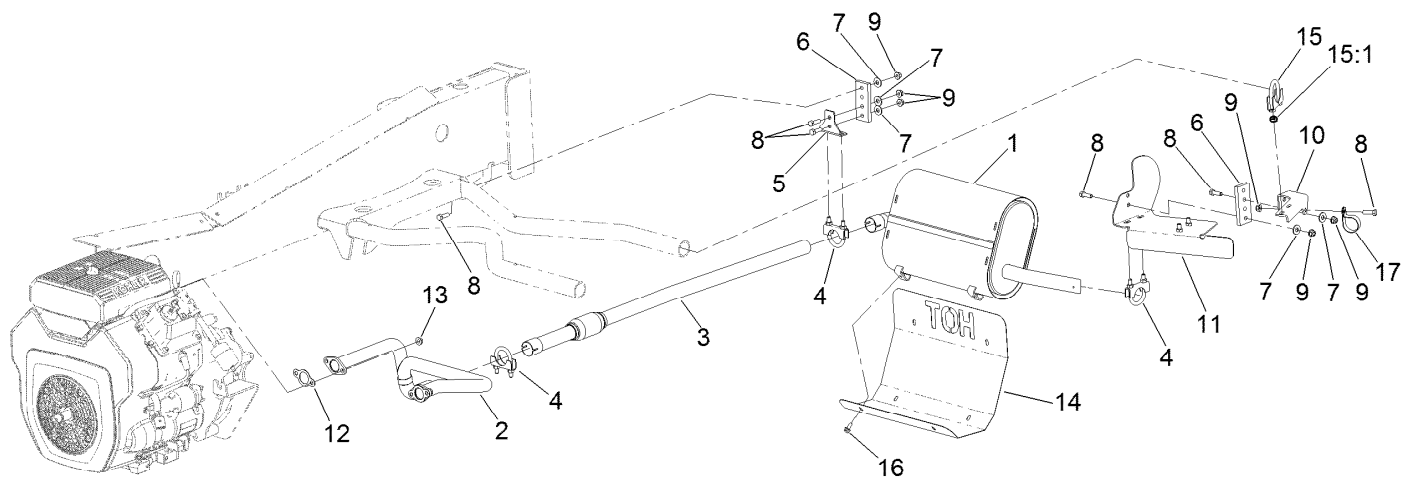


## Exhaust Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 127-9736    | 1    | Muffler-Venturi          |
| 2    | 127-9734    | 1    | Manifold-Exhaust         |
| 3    | 127-9735    | 1    | Pipe-Exhaust             |
| 4    | 2112-11     | 4    | Clamp-Muffler            |
| 5    | 130-7101    | 1    | Bracket-Hanger, Tailpipe |
| 6    | 117-0744    | 2    | Hanger-Muffler           |
| 7    | 3256-3      | 7    | Washer-Flat              |
| 8    | 322-5       | 8    | Screw-HH                 |
| 9    | 104-8300    | 8    | Nut-HF, NI               |
 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 10   | 131-3286-03 | 1    | Mount-Muffler        |
| 11   | 130-7143    | 1    | Shield-Muffler       |
| 12   | 110-6697    | 2    | Gasket-Exhaust       |
| 13   | 92-6780     | 4    | Nut-HF               |
| 14   | 127-9787    | 1    | Shield-Heat, Muffler |
| 15   | 2112-9      | 1    | Clamp                |
| 15:1 | 32128-20    | 2    | Nut-HF               |
| 16   | 3234-13     | 6    | Screw-HHF            |
| 17   | 2412-74     | 1    | R-Clamp              |






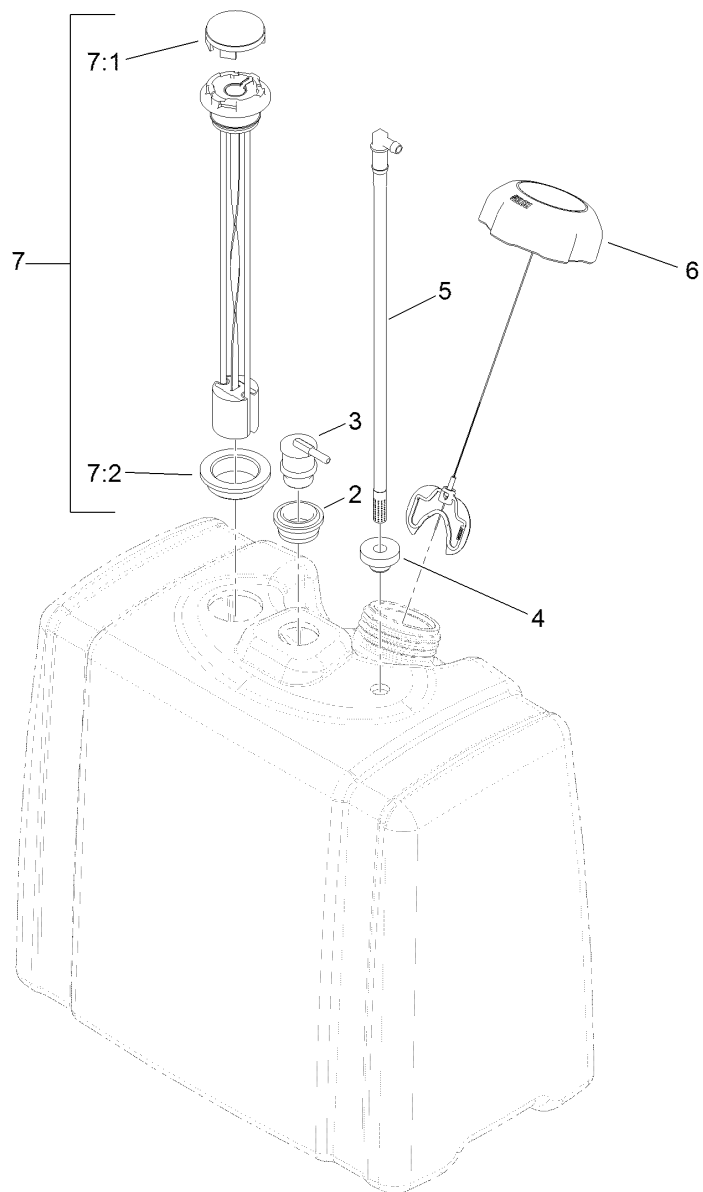

## Fuel Tank Assembly No. 115-9048

 
| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 2    | 114-0284    | 1    | Grommet        |
| 3    | 114-0285    | 1    | Valve-Rollover |
| 4    | 46-6560     | 1    | Bushing        |
| 5    | 115-9044    | 1    | Pipe-Stand     |
| 6    | 115-7788    | 1    | Cap-Fuel       |
| 7    | 119-0509    | 1    | Gauge ASM      |
| 7:1  | 117-8404    | 1    | Dial-Gauge     |
| 7:2  | 119-0508    | 1    | Seal           |

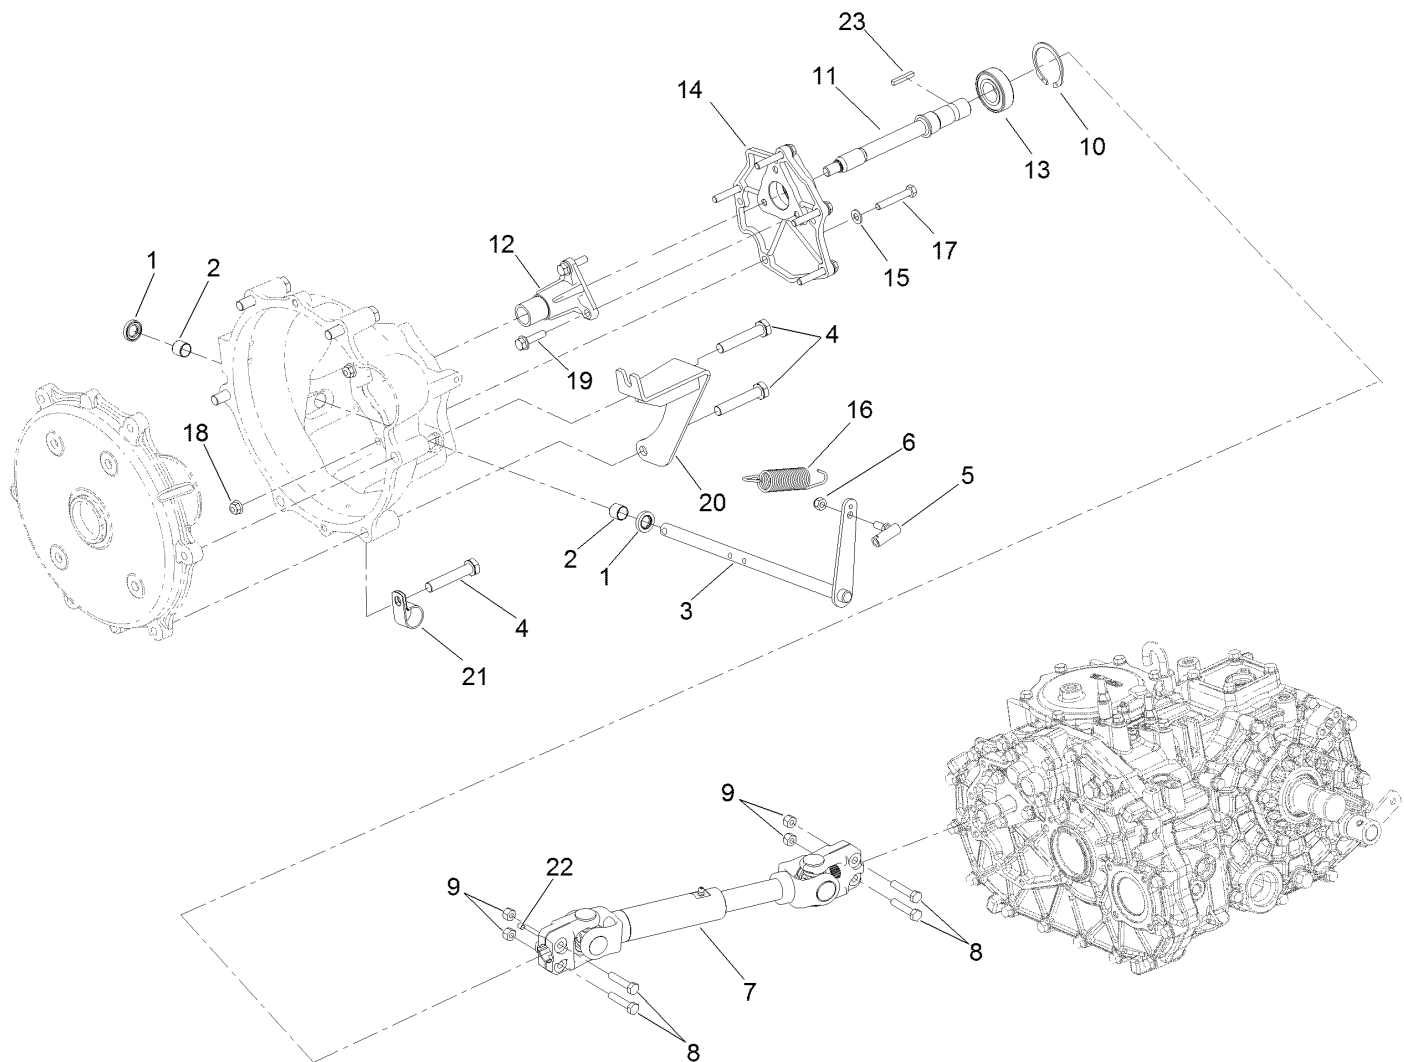

## Driveshaft Connection Assembly


| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 87-1920     | 2    | Seal-Oil                 |
| 2    | 87-3770     | 2    | Bushing-Housing, Bell    |
| 3    | 115-2311    | 1    | Lever-Clutch             |
| 4    | 107-7983    | 6    | Screw-HH                 |
| 5    | 2411-33     | 1    | Balljoint-RH (W/Grommet) |
| 6    | 3296-4      | 1    | Nut-Lock                 |
| 7    | 119-6040    | 1    | Driveshaft ASM           |
| 8    | 322-8       | 4    | Screw-HH                 |
| 9    | 3296-29     | 4    | Nut-Lock, NI             |
| 10   | 32151-71    | 1    | Ring-Retaining, Internal |
| 11   | 125-0797    | 1    | Shaft-Output             |
| 12   | 87-5320     | 1    | Release-Guide            |
 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 13   | 251-82      | 1    | Bearing-Ball          |
| 14   | 125-0820    | 1    | Cover-Bearing Support |
| 15   | 3256-23     | 5    | Washer-Plain          |
| 16   | 68-9950     | 1    | Spring-Traction       |
| 17   | 322-10      | 5    | Screw-HH              |
| 18   | 104-8300    | 5    | Nut-HF, NI            |
| 19   | 119-4036    | 3    | Screw-HHF             |
| 20   | 125-8063-03 | 1    | Bracket-Cable, Clutch |
| 21   | 2412-82     | 1    | Clamp-R               |
| 22   | 3245-32     | 1    | Screw-HSH             |
| 23   | 92-0049     | 1    | Key-Square            |

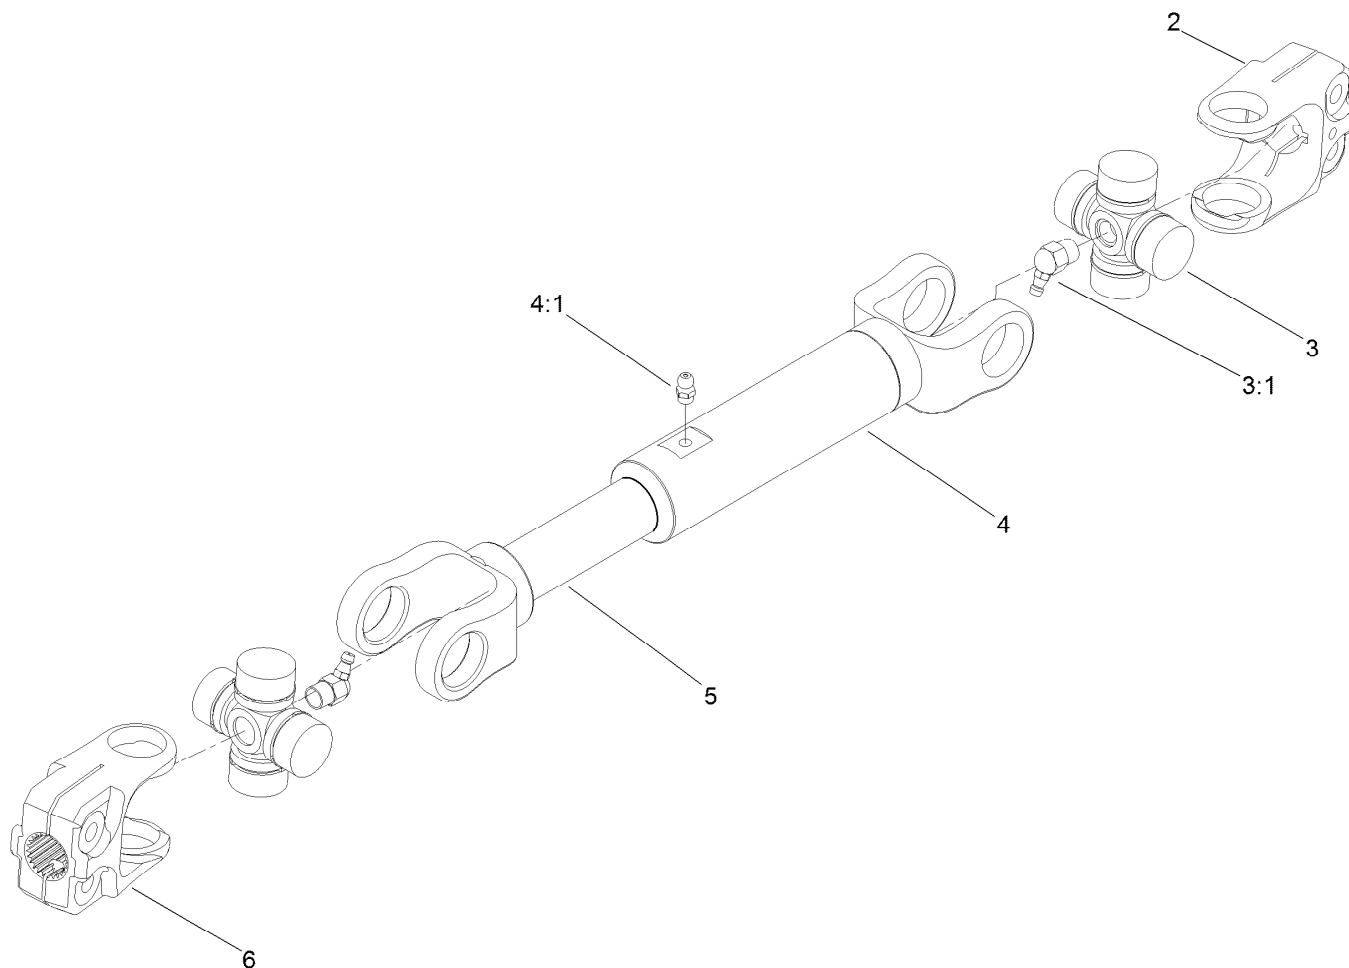

## Driveshaft Assembly No. 119-6040
 
| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 2    | 100-8633    | 1    | Yoke-Keyed       |
| 3    | 54-9180     | 2    | U-Joint Kit      |
| 3:1  | 62-3820     | 1    | Fitting-Grease   |
| 4    | 110-4706    | 1    | Tube-Yoke, Slip  |
| 4:1  | 302-58      | 1    | Fitting-Straight |
| 5    | 110-4705    | 1    | Shaft-Yoke, Slip |
| 6    | 100-8632    | 1    | Yoke-Splined     |

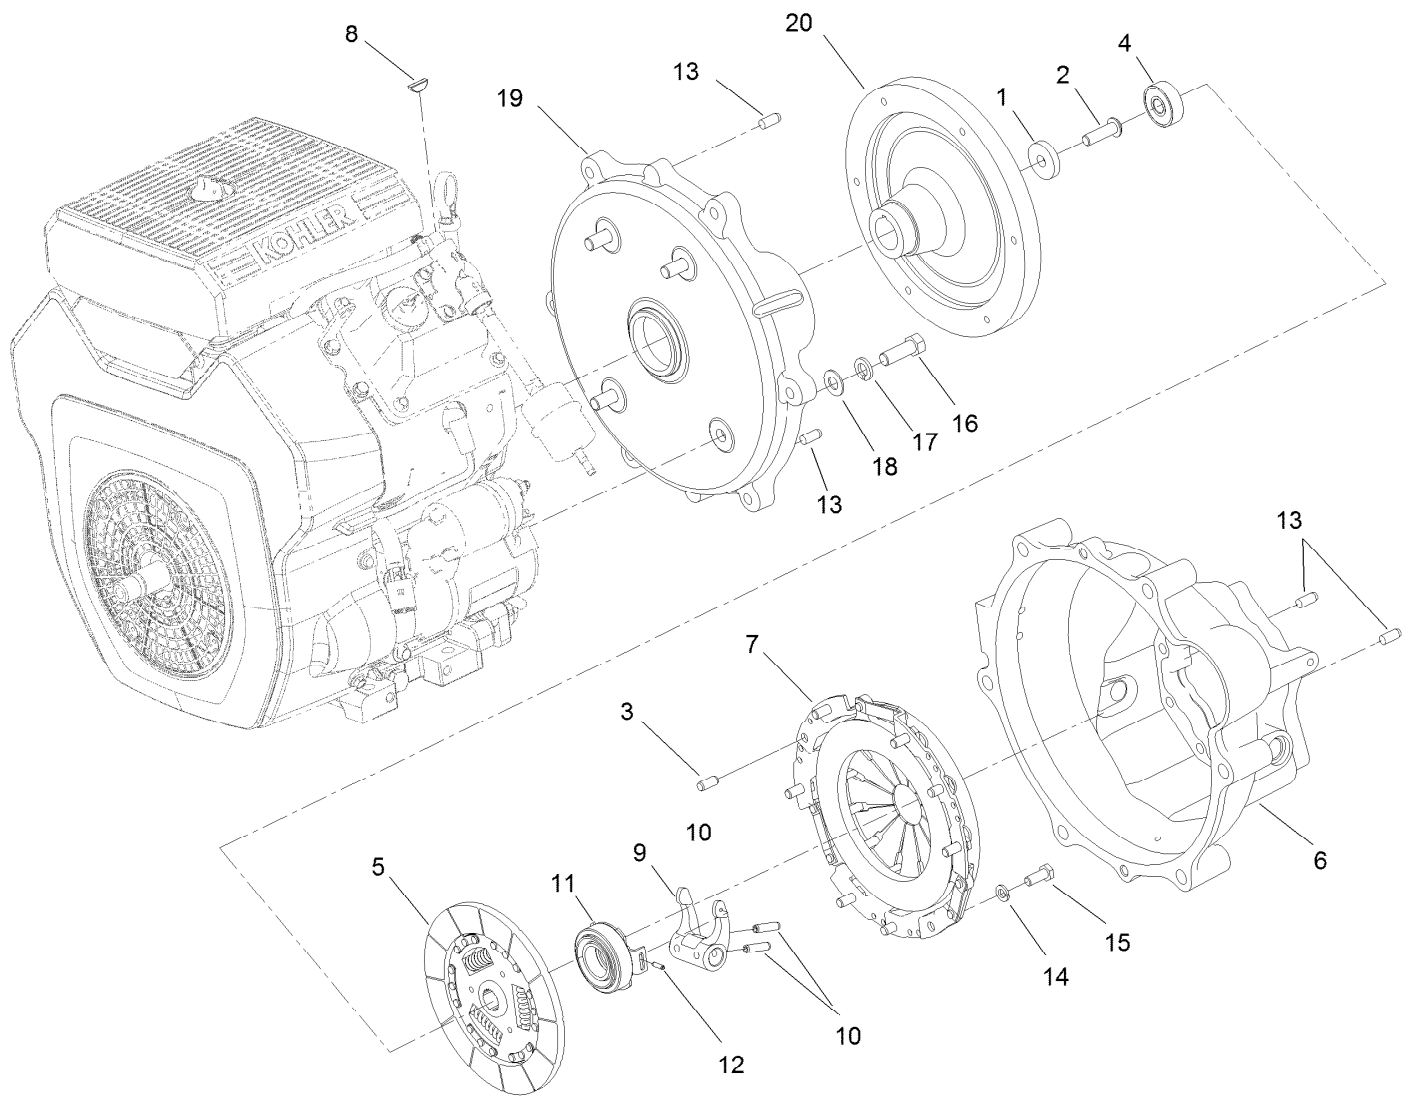

## Clutch and Bell Housing Assembly

 
| Ref. | Part Number | Qty. | Description           | Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-----------------------|------|-------------|------|-------------------------|
| 1    | 87-6080     | 1    | Washer                | 11   | 110-2538    | 1    | Bearing-Release, Clutch |
| 2    | 3274-63     | 1    | Screw-HSBH            | 12   | 32121-7     | 1    | Pin-Roll, Slotted       |
| 3    | 42-7160     | 3    | Pin                   | 13   | 87-1910     | 4    | Pin-Dowel               |
| 4    | 87-6460     | 1    | Bearing-Ball (W/Seal) | 14   | 3253-4      | 6    | Washer-Lock             |
| 5    | 98-2959     | 1    | Disc-Clutch           | 15   | 33114-020   | 6    | Screw-HH                |
| 6    | 104-9249    | 1    | Housing-Bell          | 16   | 324-5       | 4    | Screw-HH                |
| 7    | 98-2958     | 1    | Cover-Clutch          | 17   | 3253-6      | 4    | Washer-Lock             |
| 8    | 3257-5      | 1    | Key-Woodruff          | 18   | 3256-25     | 4    | Washer-Flat             |
| 9    | 87-5300     | 1    | Fork-Clutch           | 19   | 107-7991    | 1    | Adapter-Clutch          |
| 10   | 32121-24    | 2    | Pin-Spring            | 20   | 87-6480     | 1    | Flywheel                |



| <b>Ref.</b> | <b>Part Number</b> | <b>Qty.</b> | <b>Description</b> |
|-------------|--------------------|-------------|--------------------|
| 17:2        | 100-6989           | 1           | O-Ring             |
| 18          | 2412-34            | 1           | Clamp-Hose         |
| 19          | 119-9419           | 1           | Basket-Filter      |
| 20          | 133-2883           | 1           | Fitting            |
| 21          | 121-6477-03        | 2           | Band-Tank          |
| 22          | 125-7997           | 1           | Tube-Suction       |
| 23          | 104-8301           | 3           | Nut-HF, NI         |
| 24          | 3256-4             | 4           | Washer-Flat        |
| 25          | 3290-343           | 4           | Pin-Hair           |
| 26          | 41316              | 1           | Adapter-Quick      |
| 27          | 3234-29            | 2           | Screw-HHF          |
| 28          | 3296-47            | 2           | Nut-Lock,NI        |
| 29          | 125-0987-03        | 2           | Band-Tank, Rear    |
| 30          | 100-6714           | 1           | Foot-Tube, Suction |
| 31          | 108-3270           | 1           | Screw-TAP          |
| 32          | 130-7096           | 1           | Filter ASM         |
| 33          | 2412-130           | 2           | Clamp-Hose         |
| 34          | 114-9566           | 1           | Clamp-R            |

3415-483F




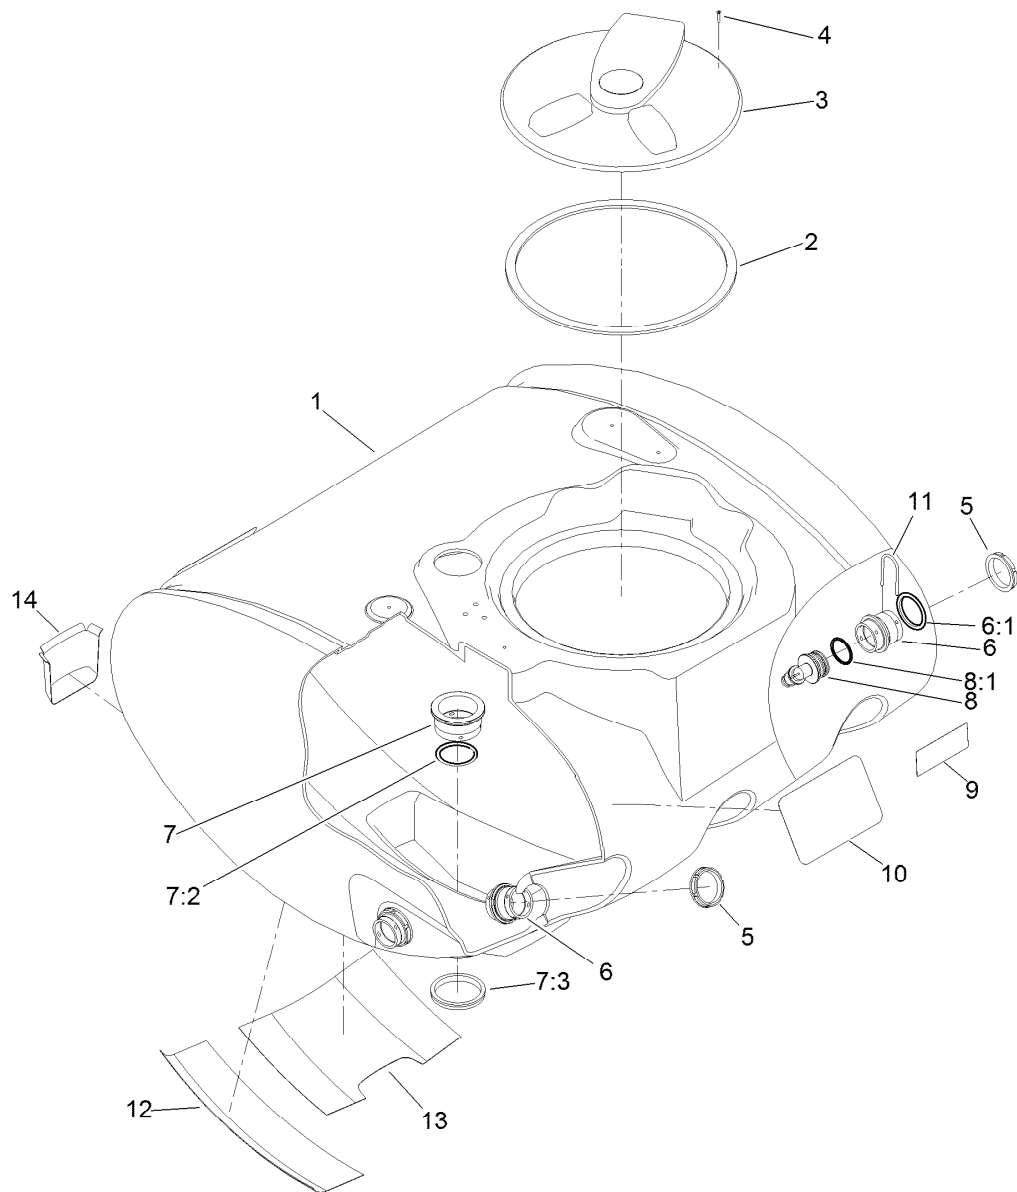

## Tank Assembly No. 121-6491

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 121-6490    | 1    | Tank-175 Gallon    |
| 2    | 119-9378    | 1    | Gasket-Lid, Tank   |
| 3    | 119-9380    | 1    | Spray Tank Lid ASM |
| 4    | 107-8635    | 8    | Screw-PFH          |
| 5    | 100-7051    | 4    | Nut-Bulkhead       |
| 6    | 108-3358    | 5    | Fitting-Bulkhead   |
| 6:1  | 107-2864    | 1    | Gasket-Bulkhead    |
| 7    | 117-7851    | 1    | Bulkhead ASM       |
| 7:2  | 100-8646    | 1    | Gasket-Bulkhead    |

 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 7:3  | 100-8647    | 1    | Nut-Bulkhead            |
| 8    | 106-4933    | 2    | Hosebarb ASM            |
| 8:1  | 100-8637    | 1    | O-Ring                  |
| 9    | 120-0622    | 1    | Decal-Warning           |
| 10   | 121-6486    | 2    | Decal-Tank              |
| 11   | 100-8635    | 2    | Fork                    |
| 12   | 125-7967    | 1    | Heat Tape-Shield, Front |
| 13   | 125-7968    | 1    | Heat Tape-Shield, Side  |
| 14   | 125-7969    | 1    | Heat Tape-Shield, Sump  |

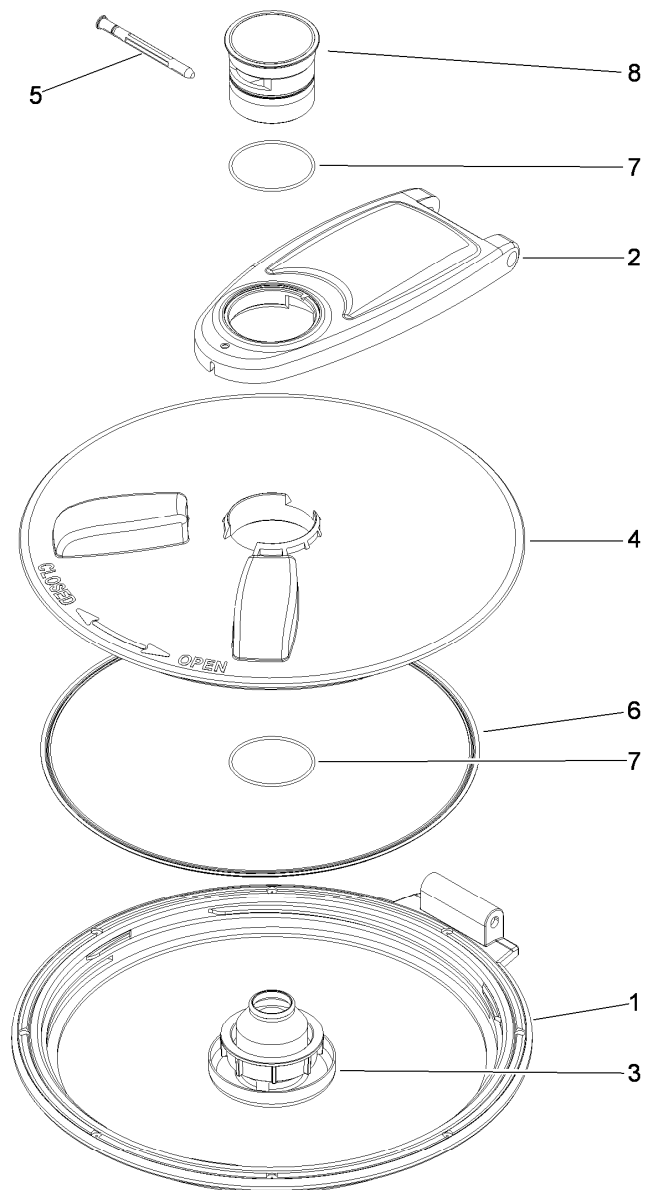

## Spray Tank Lid Assembly No. 119-9380

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 119-9381           | 1           | Ring-Lid           |
| 2           | 119-9382           | 1           | Arm-Lid            |
| 3           | 119-9383           | 1           | Vent-Lid           |
| 4           | 119-9384           | 1           | Cover-Lid          |
| 5           | 119-9385           | 1           | Pin-Pivot          |
| 6           | 106-5004           | 1           | Seal-Lid           |
| 7           | 119-9386           | 2           | O-Ring             |
| 8           | 119-9387           | 1           | Cap-Lid            |



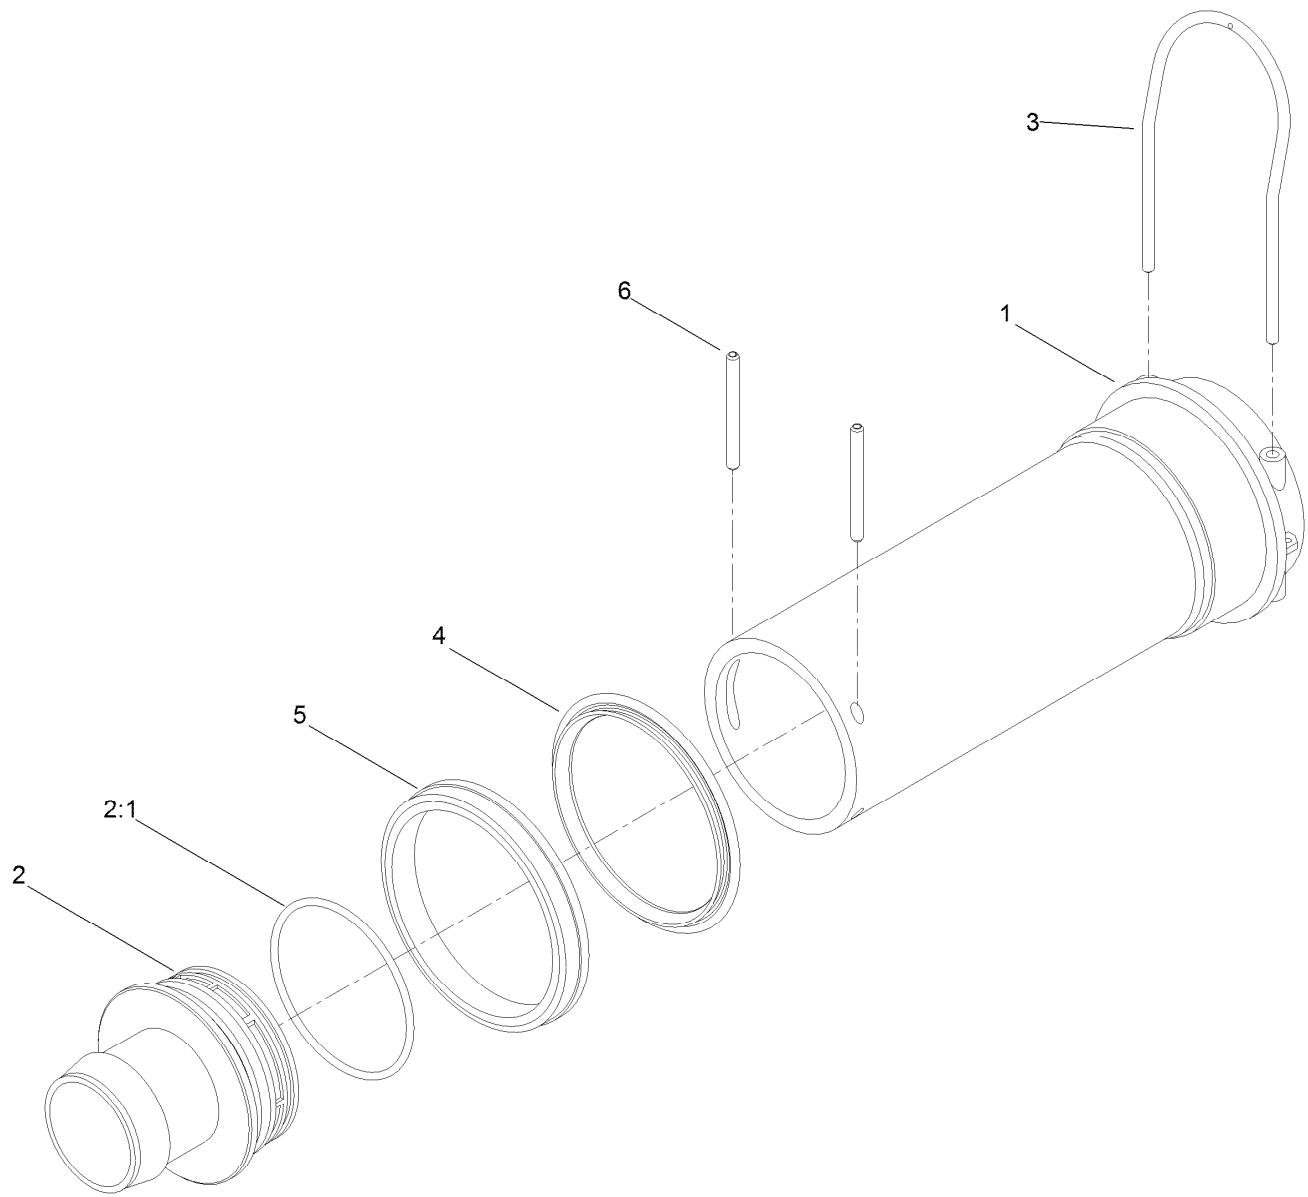

## Filter Assembly No. 130-7096

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 100-8643           | 1           | Housing-Filter     |
| 2           | 106-4942           | 1           | Hosebarb-Straight  |
| 2:1         | 100-6989           | 1           | O-Ring             |
| 3           | 100-8636           | 1           | Fork-Special       |
| 4           | 100-8646           | 1           | Gasket-Bulkhead    |
| 5           | 100-8647           | 1           | Nut-Bulkhead       |
| 6           | 100-8644           | 2           | Pin-Expansion      |

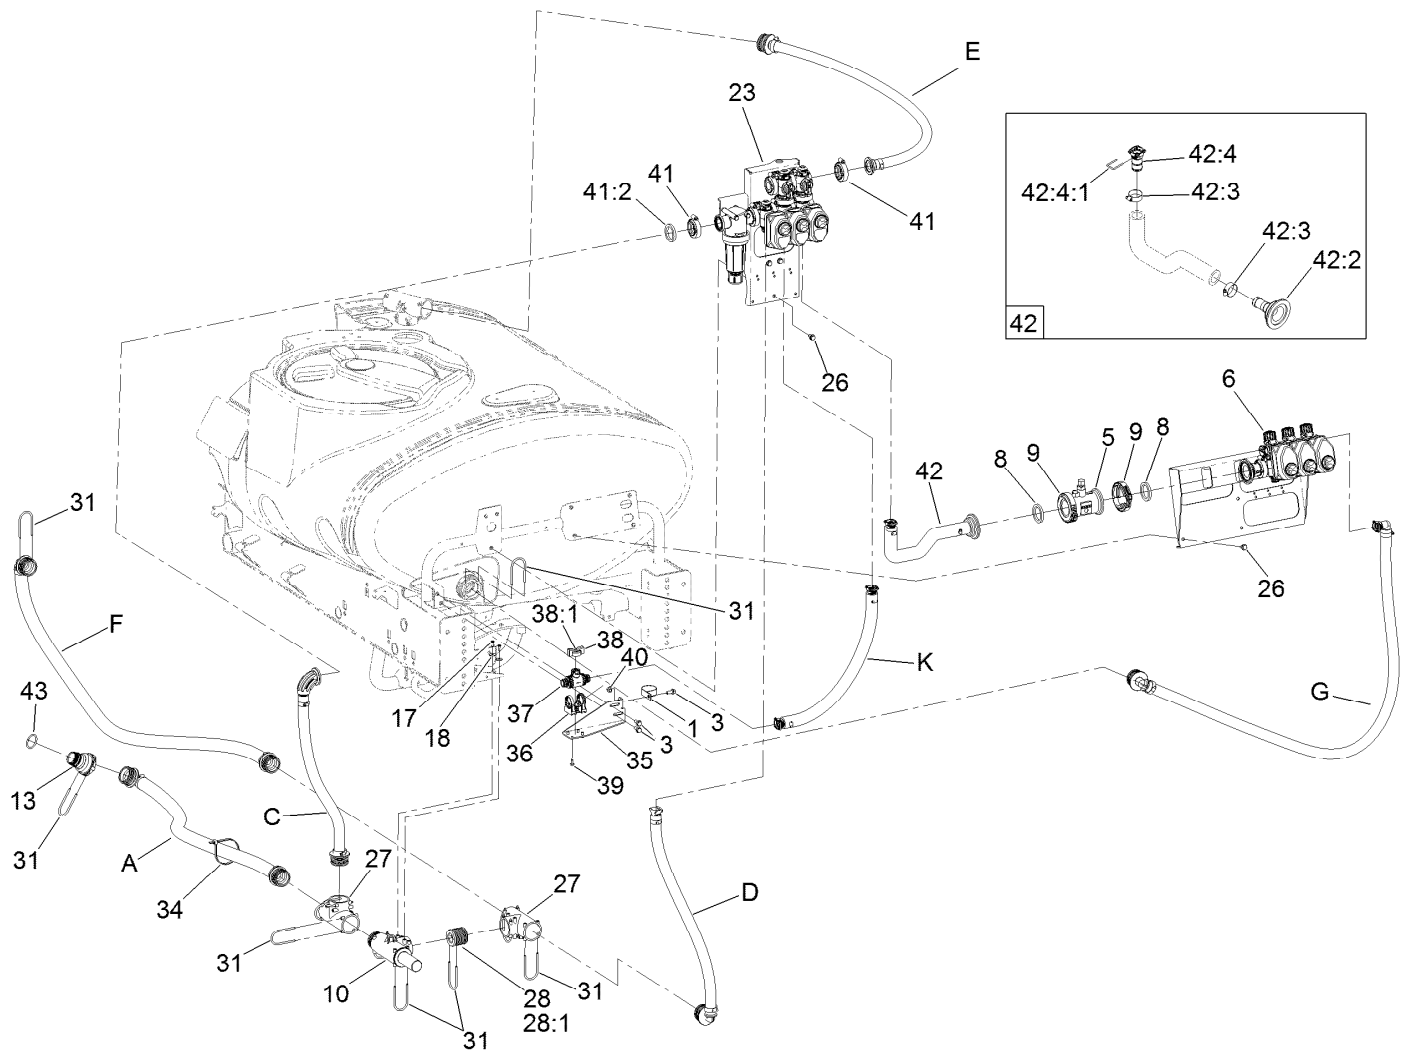

## Spray Tank Valve Assembly


| Ref. | Part Number | Qty. | Description                | Ref.   | Part Number | Qty. | Description                     |
|------|-------------|------|----------------------------|--------|-------------|------|---------------------------------|
| 1    | 2412-147    | 1    | Clamp-R                    | 34     | 3334-945    | 3    | Tie-Cable                       |
| 3    | 3234-47     | 3    | Screw-HHF                  | 35     | 132-4318-03 | 1    | Mount-Bracket, Agitation        |
| 5    | 106-1038    | 1    | Flow Meter ASM             | 36     | 132-4302    | 1    | Mount-Valve                     |
| 6    |             | 1    | Section Valve Manifold ASM | 37     | 131-0249    | 1    | On/Off 2-Way Valve Kit          |
| 8    | 104-9090    | 2    | Gasket                     | 38     | 131-0264    | 1    | Agitation Throttling Handle Kit |
| 9    | 104-9089    | 2    | Clamp-Screw, Worm          | 38:1   | 131-0263    | 1    | Screw-Handle                    |
| 10   | 117-7874    | 1    | Relief Valve ASM           | 39     | 33113-012   | 4    | Screw-HH                        |
| 13   | 133-2881    | 1    | Fitting                    | 40     | 104-8300    | 1    | Nut-HF, NI                      |
| 17   | 32144-32    | 2    | Screw-PPH                  | 41     | 127-9829    | 2    | Clamp/Gasket Kit                |
| 18   | 3256-61     | 2    | Washer-Flat                | 41:2   | 127-1145    | 1    | Gasket-Flange                   |
| 23   |             | 1    | Agitation Manifold ASM ●   | 42     | 132-4343    | 1    | Master Hose ASM                 |
| 26   | 32104-32    | 7    | Screw-HWH                  | 42:2   | 107-8704    | 1    | Hosebarb                        |
| 27   | 100-6704    | 2    | Tee                        | 42:3   | 2412-34     | 2    | Clamp-Hose                      |
| 28   | 106-4947    | 1    | Connector                  | 42:4   | 127-9806    | 1    | Fitting Kit                     |
| 28:1 | 100-8637    | 2    | O-Ring                     | 42:4:1 | 133-0398    | 1    | Pin-Fork                        |
| 31   | 100-8635    | 12   | Fork                       | 43     | 133-2882    | 1    | O-Ring                          |

 ● Not serviced separately

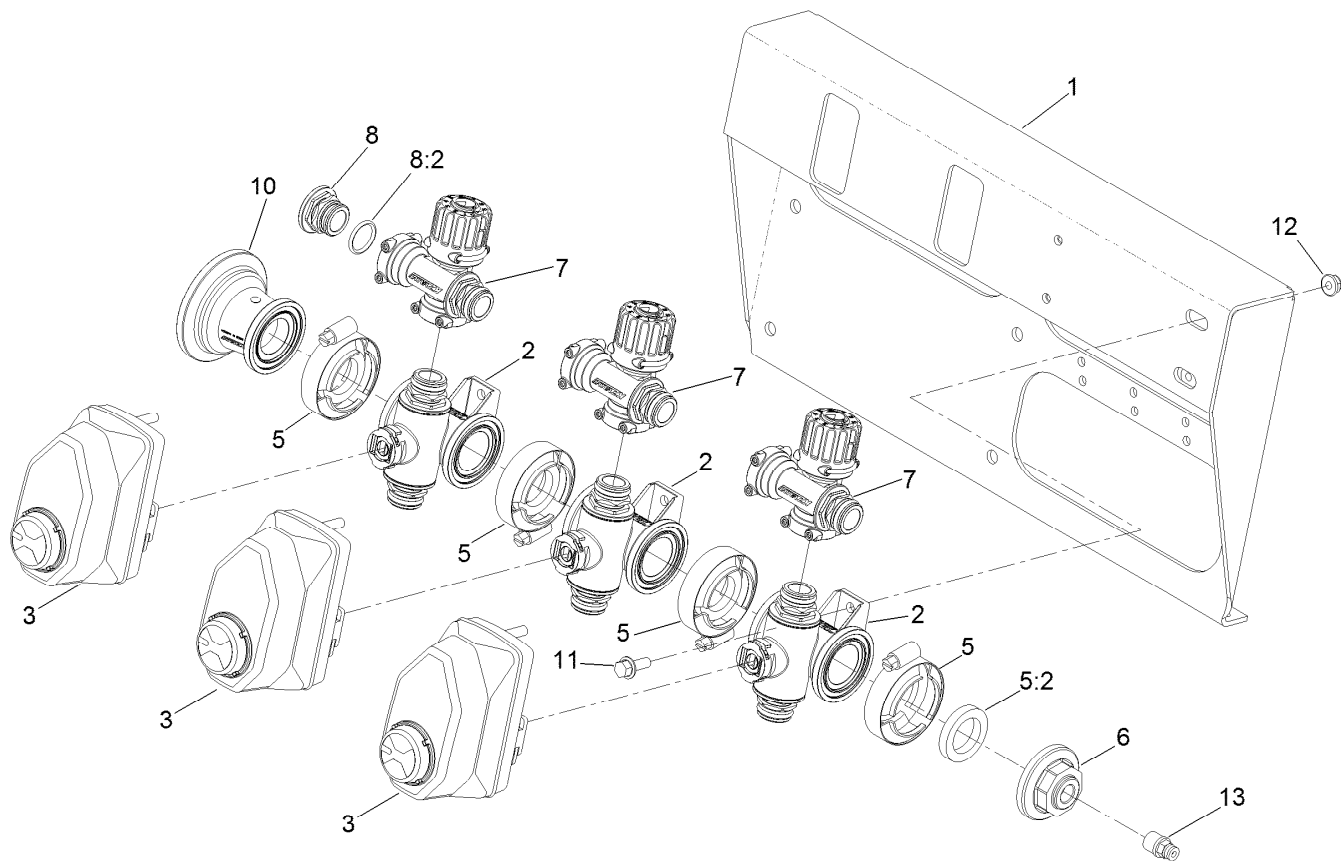

## Valve Mount Assembly
 
| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 1    | 131-0240    | 1    | Mount-Valve, Boom         |
| 2    | 127-9803    | 3    | On/Off Manifold Valve Kit |
| 3    | 131-3723    | 3    | Actuator On/Off Kit       |
| 5    | 127-9829    | 4    | Clamp/Gasket Kit          |
| 5:2  | 127-1145    | 1    | Gasket-Flange             |
| 6    | 127-1185    | 1    | Fitting-Cap, Port         |
| 7    | 127-9805    | 3    | Bypass Valve ASM          |
| 8    | 127-9810    | 1    | Male Cap Fitting Kit      |
| 8:2  | 127-1187    | 1    | O-Ring, Endcap            |
| 10   | 127-1144    | 1    | Fitting-Adapter           |
| 11   | 3234-4      | 4    | Screw-HHF                 |
| 12   | 104-7201    | 4    | Nut-HF, NI                |
| 13   | 131-3709    | 1    | Coupler                   |

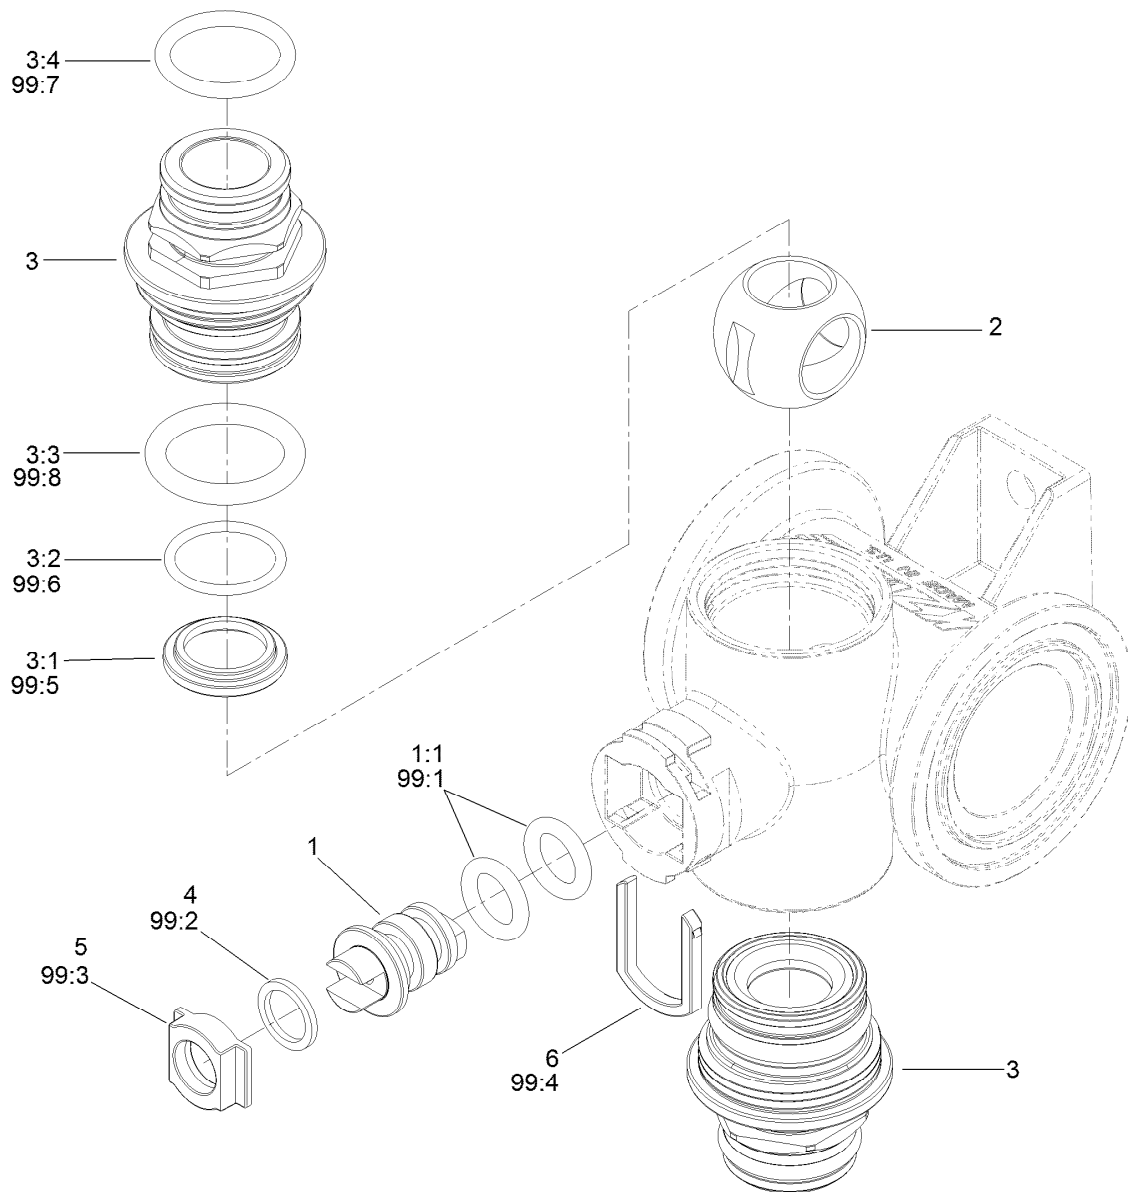


## On/Off Manifold Valve Kit No. 127-9803

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 130-8248    | 1    | Valve Stem Kit      |
| 1:1  | 127-1197    | 2    | O-Ring-Stem         |
| 2    | 127-1194    | 1    | Ball-Valve, 3Way    |
| 3    | 130-7317    | 2    | Endcap Kit          |
| 3:1  | 127-1192    | 1    | Seat-Ball           |
| 3:2  | 127-1188    | 1    | O-Ring, Seat (Ball) |
| 3:3  | 127-1189    | 1    | O-Ring, Endcap      |
| 3:4  | 127-1187    | 1    | O-Ring, Endcap      |
| 4    | 127-1196    | 1    | Washer-Stem, Valve  |
| 5    | 127-1195    | 1    | Seat-Stem, Valve    |


| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 6    | 127-1190    | 1    | Fork-Stem, Valve    |
| 99   | 130-7304    | 1    | Valve Repair Kit ●  |
| 99:1 | 127-1197    | 2    | O-Ring-Stem         |
| 99:2 | 127-1196    | 2    | Washer-Stem, Valve  |
| 99:3 | 127-1195    | 1    | Seat-Stem, Valve    |
| 99:4 | 127-1190    | 1    | Fork-Stem, Valve    |
| 99:5 | 127-1192    | 2    | Seat-Ball           |
| 99:6 | 127-1188    | 2    | O-Ring, Seat (Ball) |
| 99:7 | 127-1187    | 2    | O-Ring, Endcap      |
| 99:8 | 127-1189    | 2    | O-Ring, Endcap      |

 ● Not illustrated

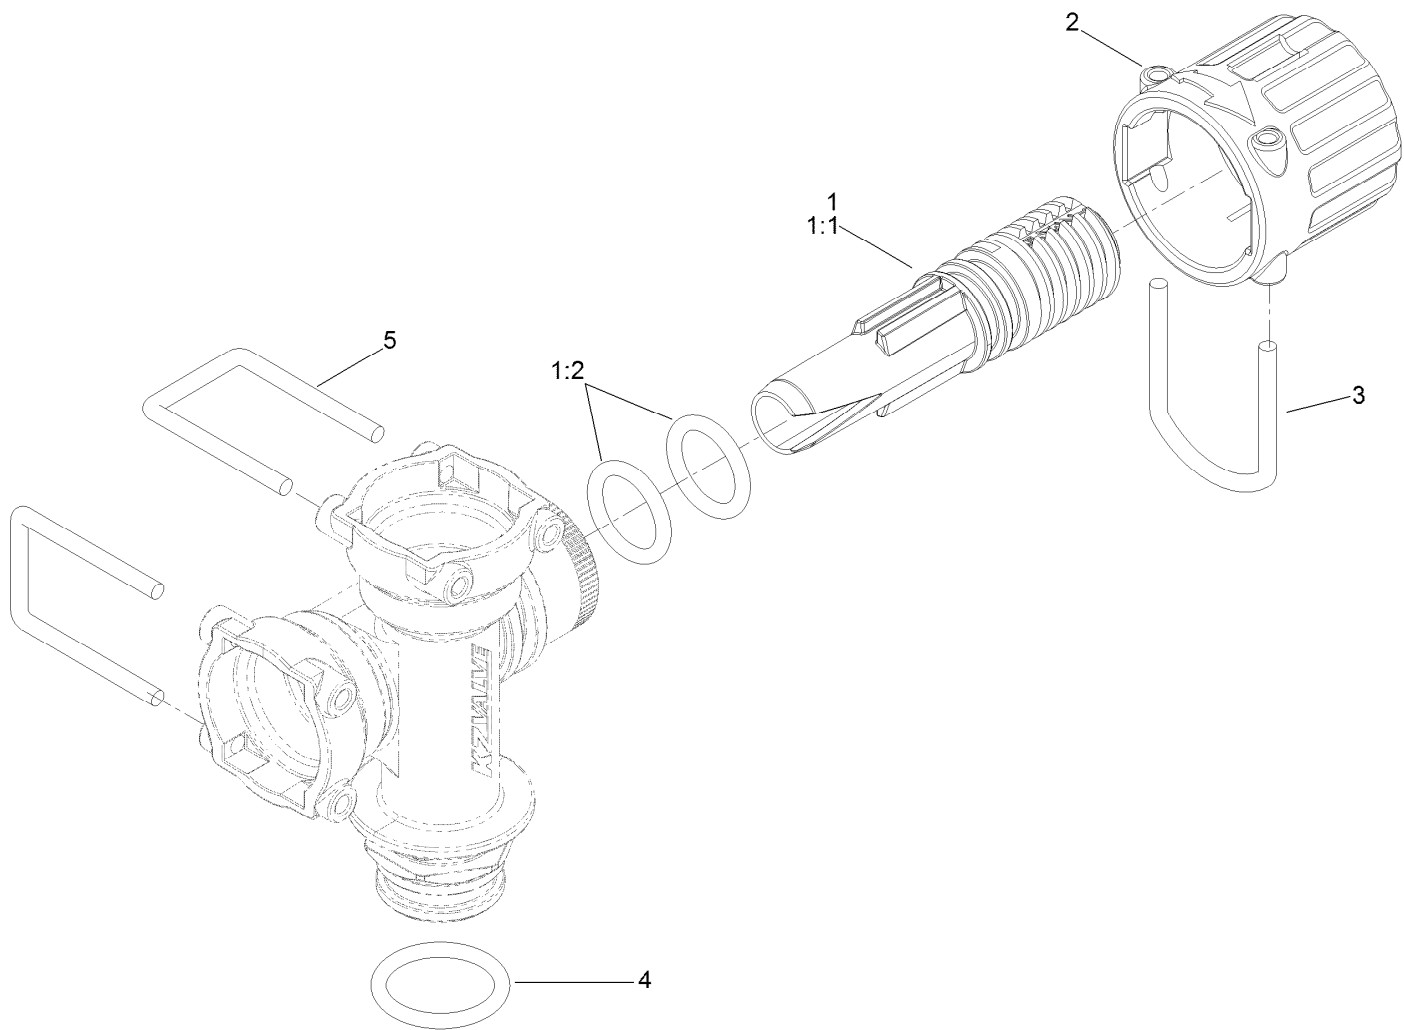

## Bypass Valve Assembly No. 127-9805

 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 131-0298    | 1    | Bypass Needle Kit   |
| 1:1  | 127-1182    | 1    | Needle-Bypass       |
| 1:2  | 127-1181    | 2    | Oring-Bypass Needle |
| 2    | 127-1180    | 1    | Knob-Bypass         |
| 3    | 127-1179    | 1    | Fork-Bypass Knob    |
| 4    | 127-1187    | 1    | O-Ring, Endcap      |
| 5    | 133-0398    | 2    | Pin-Fork            |

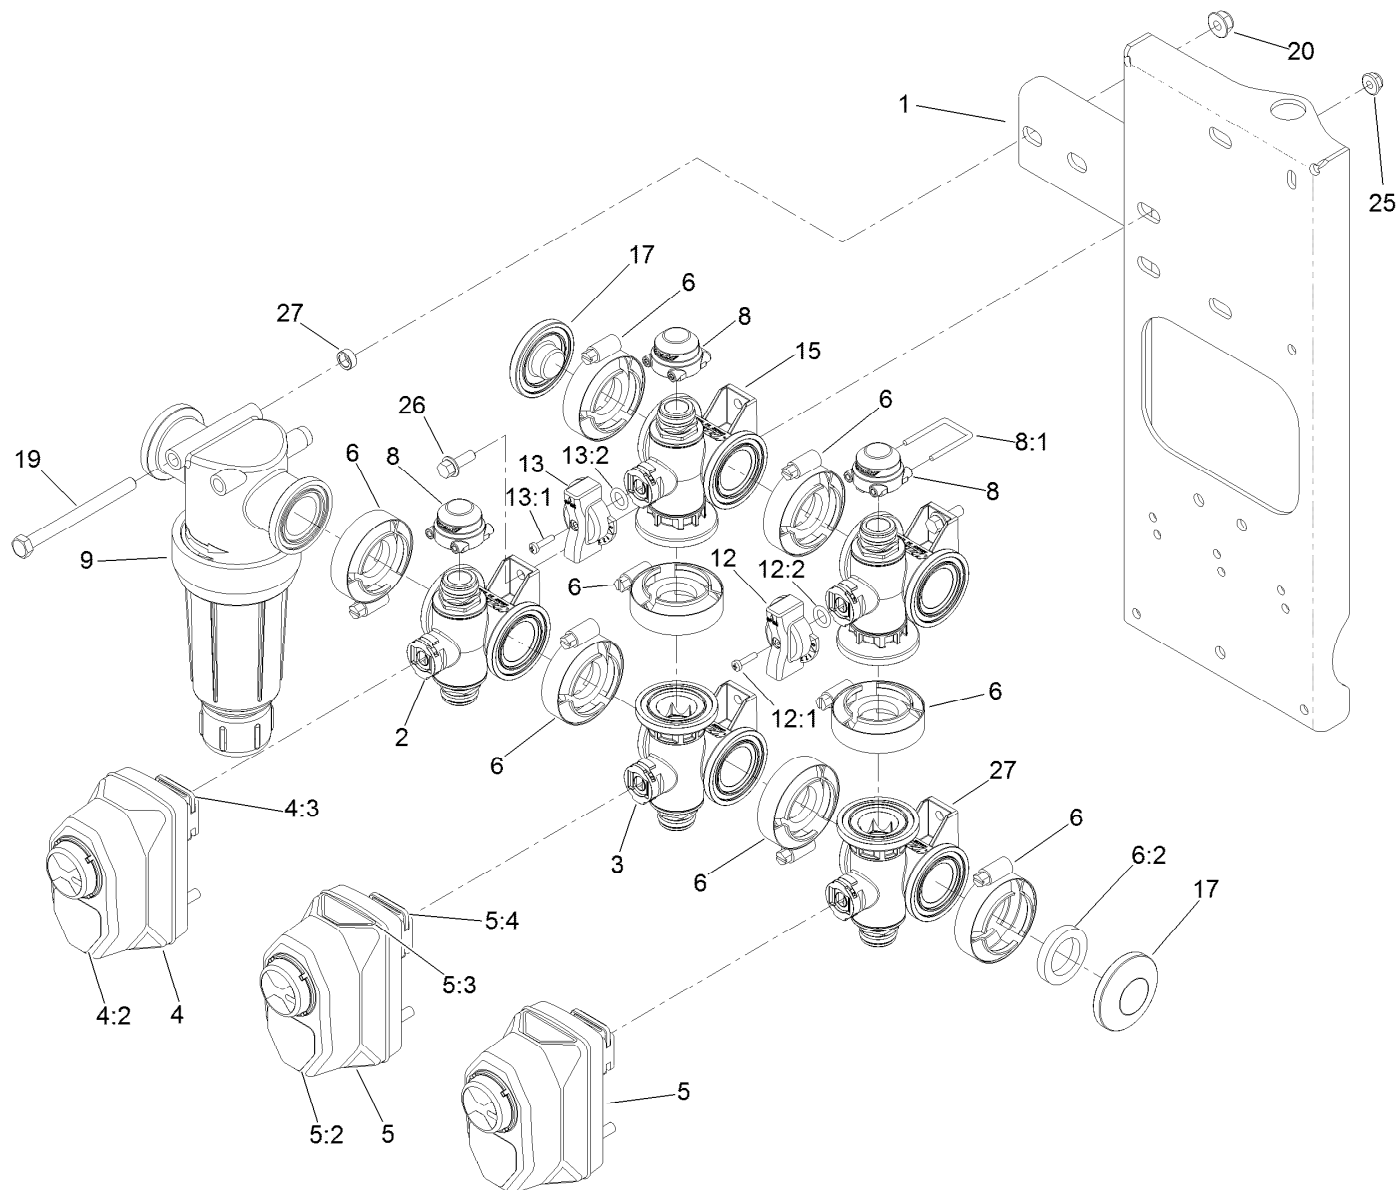

## Agitation Manifold Assembly

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 131-3708    | 1    | Mount-Valve                |
| 2    | 127-9804    | 1    | Regulating Valve Body ASM  |
| 3    | 131-7256    | 2    | Manifold Valve Kit         |
| 4    | 131-3724    | 1    | Actuator Regulating Kit    |
| 4:2  | 127-6984    | 1    | Decal-Valve, Regulating    |
| 4:3  | 130-7301    | 1    | Hairpin-Actuator           |
| 5    | 131-3723    | 2    | Actuator On/Off Kit        |
| 5:2  | 127-6979    | 1    | Decal-Valve, Agitation     |
| 5:2  | 127-6982    | 1    | Decal-Valve, Master Boom   |
| 5:2  | 127-6981    | 1    | Decal-Valve, On/Off        |
| 5:3  | 127-6976    | 1    | Decal-Valve, Bypass Adjust |
| 5:4  | 130-7301    | 1    | Hairpin-Actuator           |
| 6    | 127-9829    | 8    | Clamp/Gasket Kit           |
| 6:2  | 127-1145    | 1    | Gasket-Flange              |
| 8    | 127-9811    | 3    | Fitting-Cap, Female        |
| 8:1  | 133-0398    | 1    | Pin-Fork                   |
 
| Ref. | Part Number | Qty. | Description                     |
|------|-------------|------|---------------------------------|
| 9    | 131-3791    | 1    | Filter-Pressure                 |
| 12   | 131-0266    | 1    | Master Regulating Handle Kit    |
| 12:1 | 131-0263    | 1    | Screw-Handle                    |
| 12:2 | 127-1197    | 1    | O-Ring-Stem                     |
| 13   | 131-0265    | 1    | Agitation Regulating Handle Kit |
| 13:1 | 131-0263    | 1    | Screw-Handle                    |
| 13:2 | 127-1197    | 1    | O-Ring-Stem                     |
| 15   | 131-0253    | 2    | Manifold Valve Kit              |
| 17   | 127-9815    | 2    | Fitting-Cap                     |
| 19   | 322-23      | 2    | Screw-HH                        |
| 20   | 104-8300    | 2    | Nut-HF, NI                      |
| 25   | 104-7201    | 6    | Nut-HF, NI                      |
| 26   | 3234-4      | 6    | Screw-HHF                       |
| 27   | 133-0380    | 2    | Spacer-Filter                   |

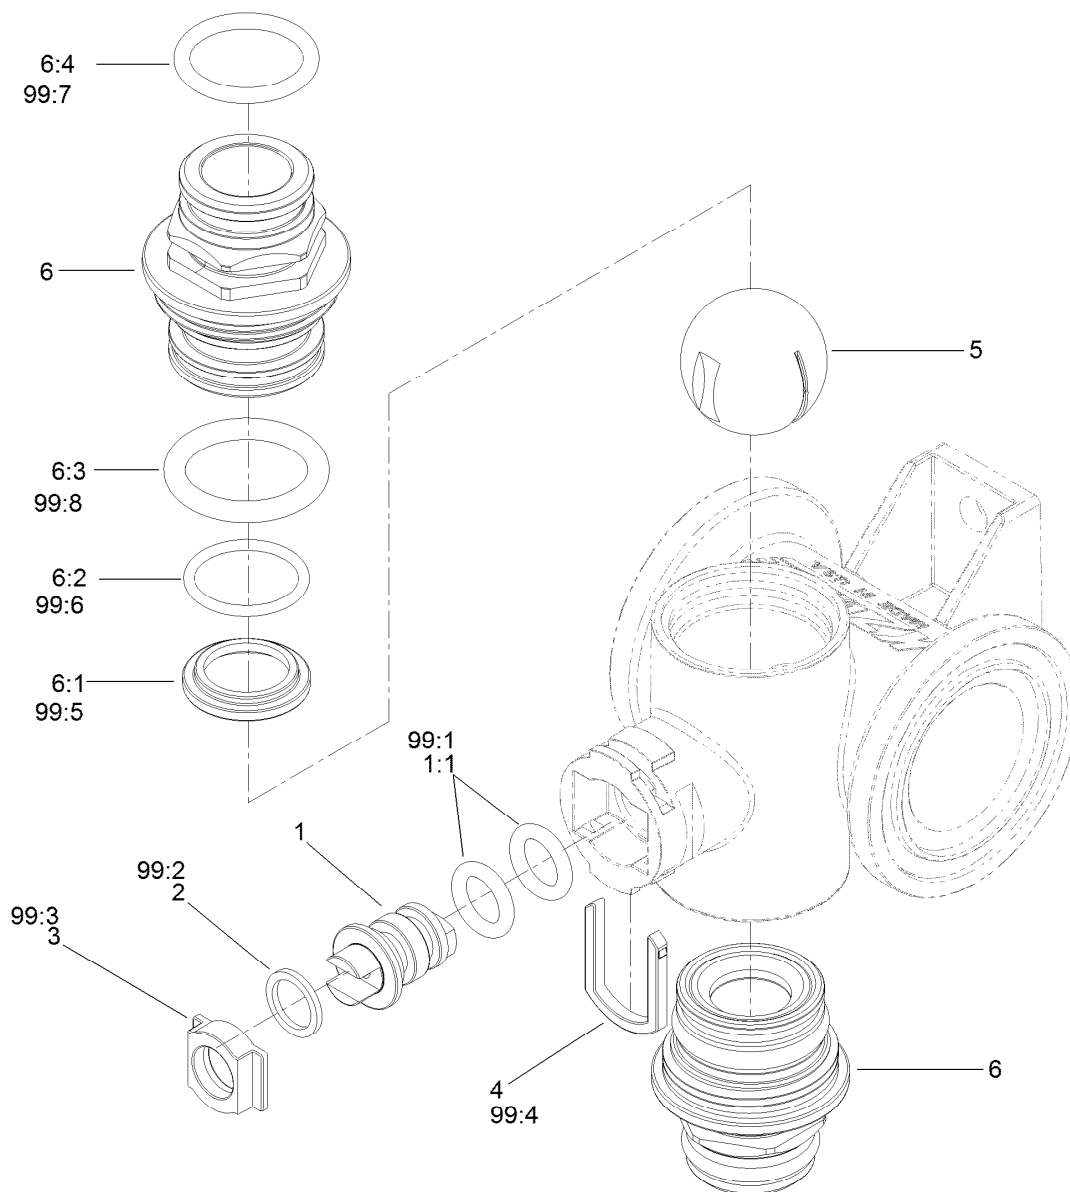


## Regulating Valve Body Assembly No. 127-9804

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 130-8248    | 1    | Vavle Stem Kit      |
| 1:1  | 127-1197    | 2    | O-Ring-Stem         |
| 2    | 127-1196    | 1    | Washer-Stem, Valve  |
| 3    | 127-1195    | 1    | Seat-Stem, Valve    |
| 4    | 127-1190    | 1    | Fork-Stem, Valve    |
| 5    | 127-1113    | 1    | Ball-V              |
| 6    | 130-7317    | 2    | Endcap Kit          |
| 6:1  | 127-1192    | 1    | Seat-Ball           |
| 6:2  | 127-1188    | 1    | O-Ring, Seat (Ball) |
| 6:3  | 127-1189    | 1    | O-Ring, Endcap      |

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 6:4  | 127-1187    | 1    | O-Ring, Endcap      |
| 99   | 130-7304    | 1    | Valve Repair Kit ●  |
| 99:1 | 127-1197    | 2    | O-Ring-Stem         |
| 99:2 | 127-1196    | 2    | Washer-Stem, Valve  |
| 99:3 | 127-1195    | 1    | Seat-Stem, Valve    |
| 99:4 | 127-1190    | 1    | Fork-Stem, Valve    |
| 99:5 | 127-1192    | 2    | Seat-Ball           |
| 99:6 | 127-1188    | 2    | O-Ring, Seat (Ball) |
| 99:7 | 127-1187    | 2    | O-Ring, Endcap      |
| 99:8 | 127-1189    | 2    | O-Ring, Endcap      |

 ● Not illustrated

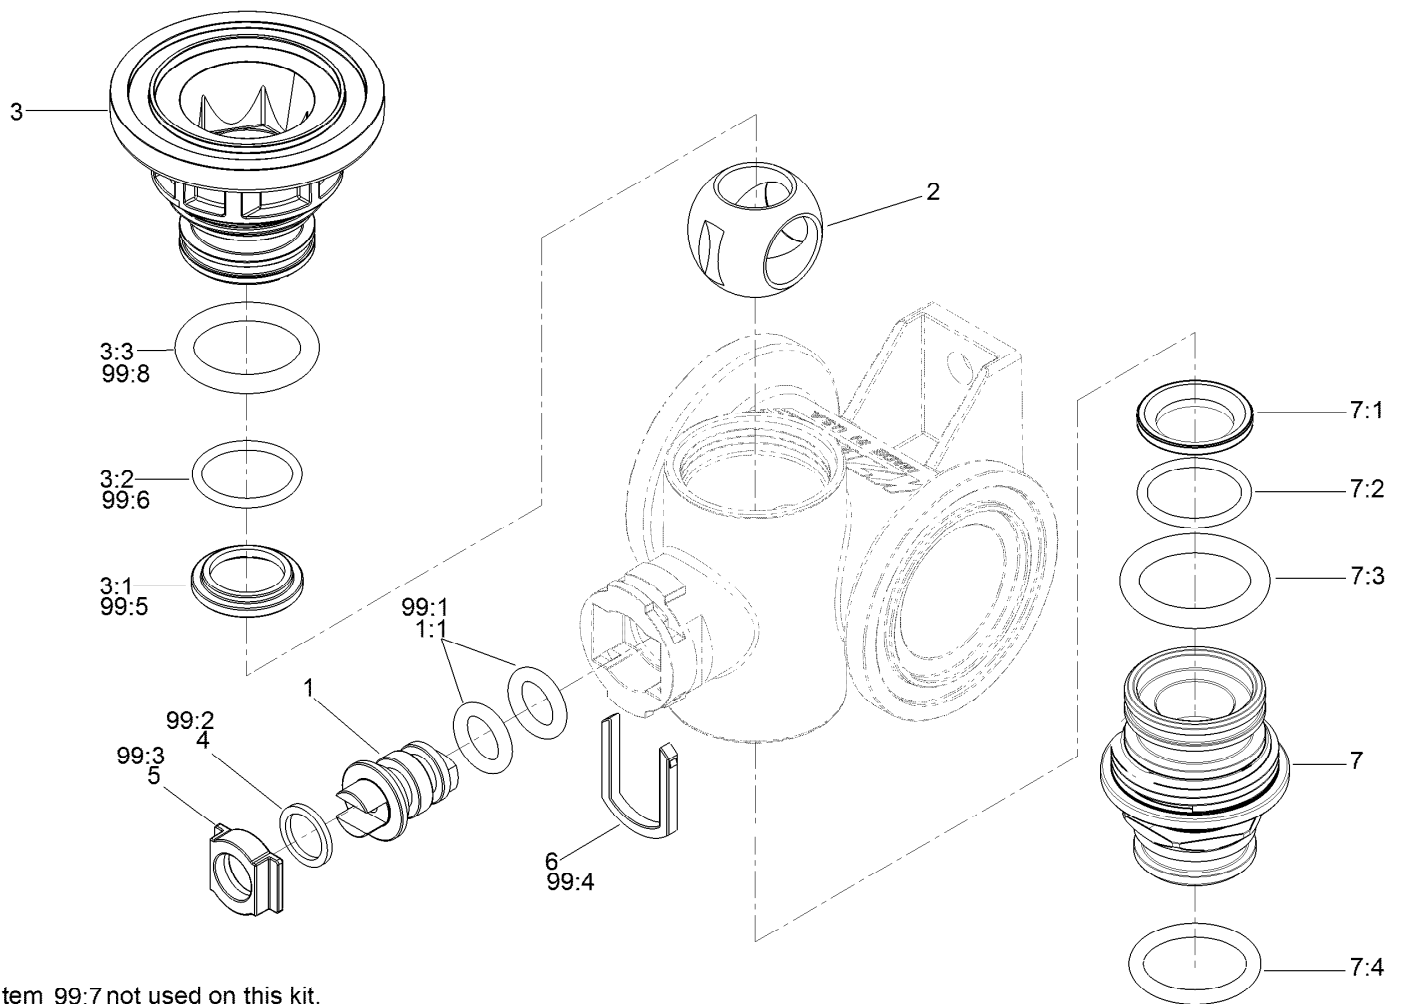


## Manifold Valve Kit No. 131-7256

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 130-8248    | 1    | Valve Stem Kit      |
| 1:1  | 127-1197    | 2    | O-Ring-Stem         |
| 2    | 127-1194    | 1    | Ball-Valve, 3Way    |
| 3    | 130-8249    | 1    | Endcap Kit          |
| 3:1  | 127-1192    | 1    | Seat-Ball           |
| 3:2  | 127-1188    | 1    | O-Ring, Seat (Ball) |
| 3:3  | 127-1189    | 1    | O-Ring, Endcap      |
| 4    | 127-1196    | 1    | Washer-Stem, Valve  |
| 5    | 127-1195    | 1    | Seat-Stem, Valve    |
| 6    | 127-1190    | 1    | Fork-Stem, Valve    |
| 7    | 130-7317    | 1    | Endcap Kit          |
| 7:1  | 127-1192    | 1    | Seat-Ball           |

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 7:2  | 127-1188    | 1    | O-Ring, Seat (Ball) |
| 7:3  | 127-1189    | 1    | O-Ring, Endcap      |
| 7:4  | 127-1187    | 1    | O-Ring, Endcap      |
| 99   | 130-7304    | 1    | Valve Repair Kit ●  |
| 99:1 | 127-1197    | 2    | O-Ring-Stem         |
| 99:2 | 127-1196    | 2    | Washer-Stem, Valve  |
| 99:3 | 127-1195    | 1    | Seat-Stem, Valve    |
| 99:4 | 127-1190    | 1    | Fork-Stem, Valve    |
| 99:5 | 127-1192    | 2    | Seat-Ball           |
| 99:6 | 127-1188    | 2    | O-Ring, Seat (Ball) |
| 99:7 | 127-1187    | 2    | O-Ring, Endcap      |
| 99:8 | 127-1189    | 2    | O-Ring, Endcap      |

 
● Not illustrated



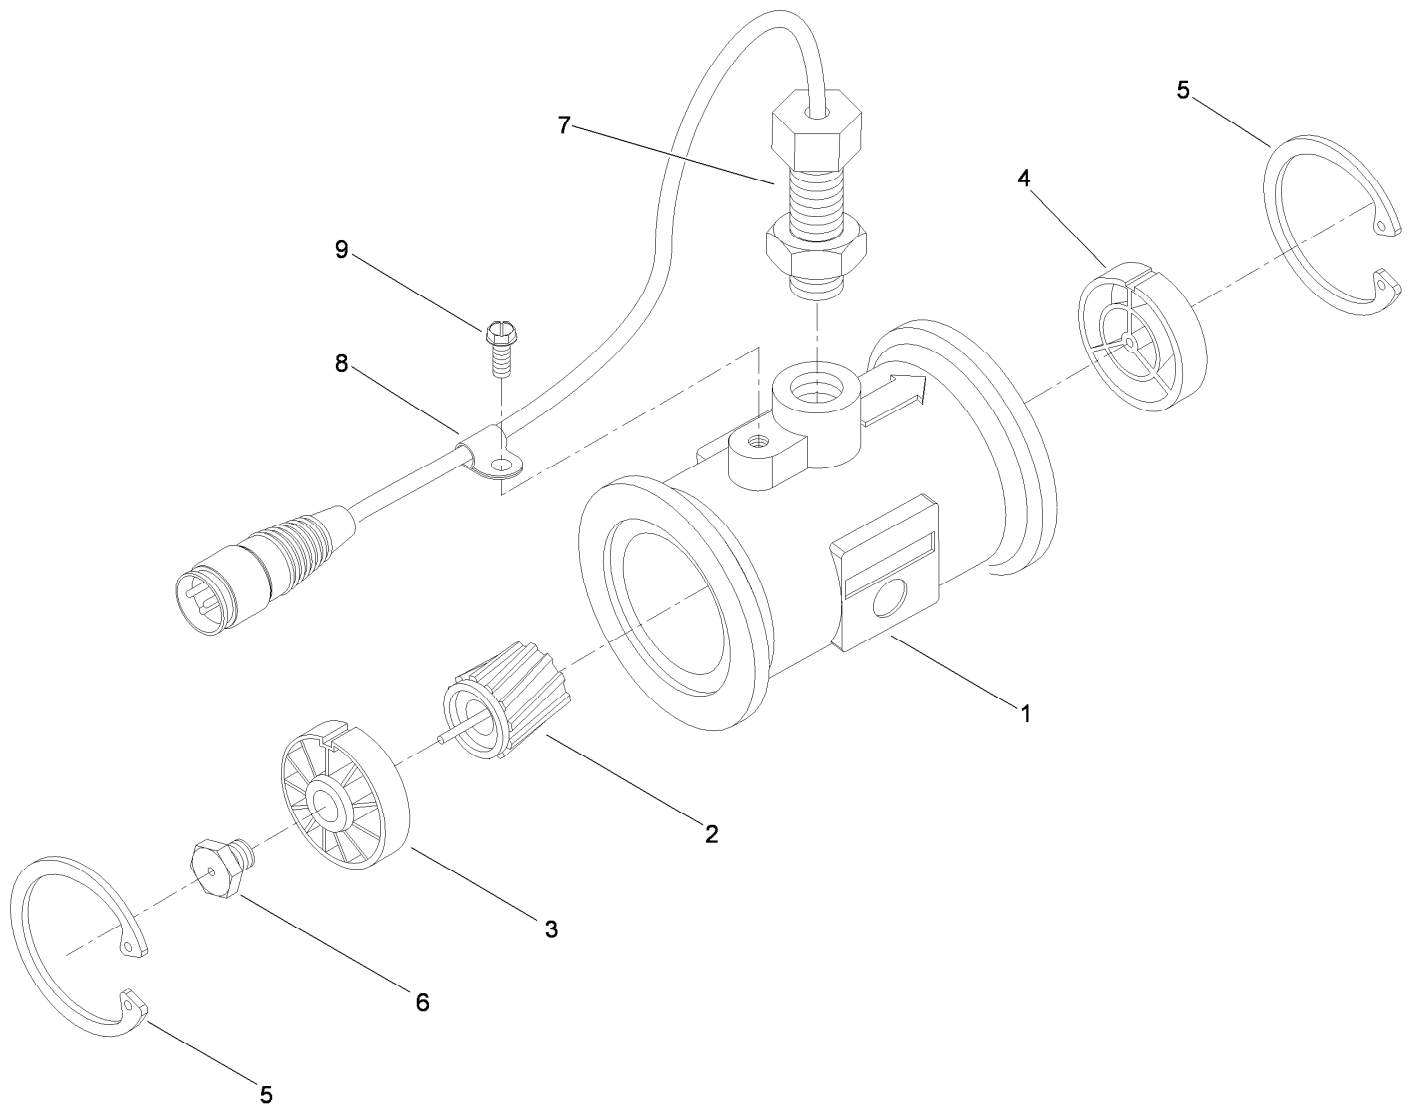

## Flow Meter Assembly No. 106-1038
 
| Ref. | Part Number | Qty. | Description                  |
|------|-------------|------|------------------------------|
| 1    | 106-1042    | 1    | Body-Meter, Flow             |
| 2    | 104-9059    | 1    | Rotor / Magnet ASM           |
| 3    | 104-9060    | 1    | Upstream Hub And Bearing ASM |
| 4    | 104-9061    | 1    | Downstream Hub ASM           |
| 5    | 104-9062    | 2    | Ring-Retaining, Internal     |
| 6    | 42480       | 1    | Stud-Turbine (W / Bearing)   |
| 7    | 104-9065    | 1    | External Sensor ASM          |
| 8    | 104-9063    | 1    | Clamp-Cable                  |
| 9    | 104-9064    | 1    | Screw-HWHTF                  |

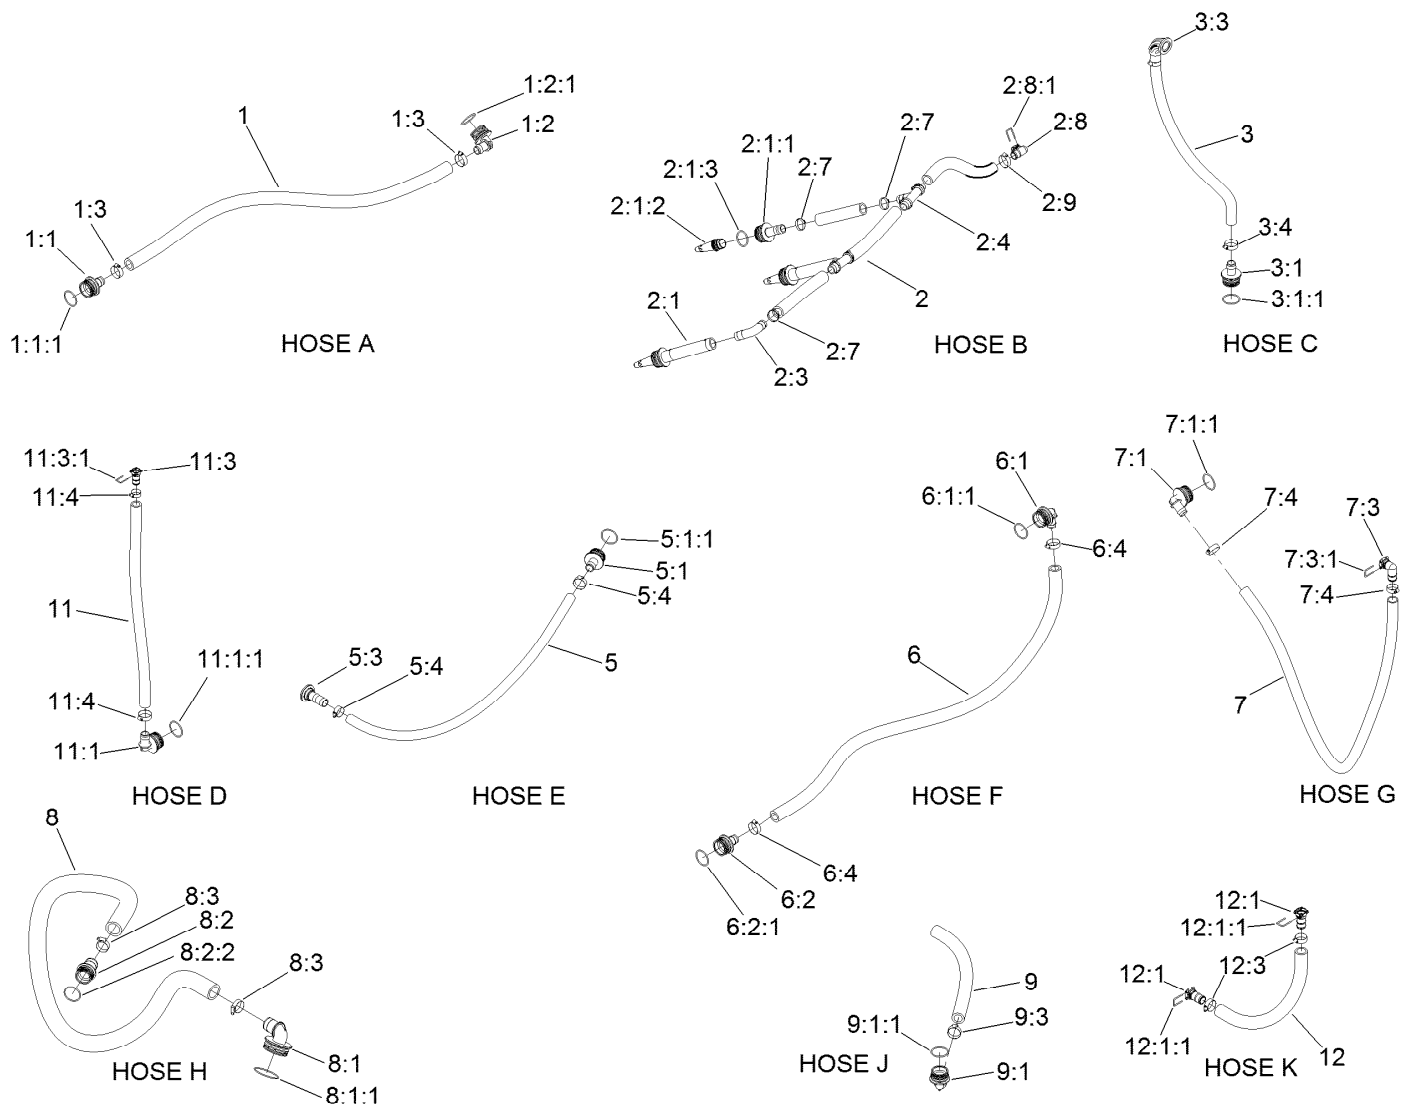


Reference **Spray Tank Assembly** page and **Spray Tank Valve Assembly** page for hose locations and orientation

## Hose Assembly
 
| Ref.  | Part Number | Qty. | Description             |
|-------|-------------|------|-------------------------|
| 1     | 121-6539    | 1    | Main Supply Hose ASM    |
| 1:1   | 106-4932    | 1    | Hosebarb-Straight       |
| 1:1:1 | 100-8637    | 1    | O-Ring                  |
| 1:2   | 106-4933    | 1    | Hosebarb ASM            |
| 1:2:1 | 100-8637    | 1    | O-Ring                  |
| 1:3   | 2412-34     | 2    | Clamp-Hose              |
| 2     | 132-4320    | 1    | Agitation Hose ASM      |
| 2:1   | 131-3731    | 3    | Agitation Nozzle ASM    |
| 2:1:1 | 131-3732    | 1    | Fitting-Barb            |
| 2:1:2 | 120-8579    | 1    | Nozzle-Agitation        |
| 2:1:3 | 121-4996    | 1    | O-Ring                  |
| 2:3   | 117-7867    | 1    | Elbow-Hosebarb          |
| 2:4   | 117-7866    | 2    | Tee-Hosebarb            |
| 2:7   | 2412-34     | 11   | Clamp-Hose              |
| 2:8   | 131-0213    | 1    | 90 DEG Barb Fitting Kit |
| 2:8:1 | 133-0398    | 1    | Pin-Fork                |
| 2:9   | 2412-34     | 1    | Clamp-Hose              |
| 3     | 132-4314    | 1    | Hose-Supply             |
| 3:1   | 106-4932    | 1    | Hosebarb-Straight       |
| 3:1:1 | 100-8637    | 1    | O-Ring                  |
| 3:3   | 131-0241    | 1    | Fitting-Elb 90          |

| Ref.  | Part Number | Qty. | Description             |
|-------|-------------|------|-------------------------|
| 3:4   | 2412-34     | 2    | Clamp-Hose              |
| 5     | 132-4313    | 1    | Hose Agitation, Bypass  |
| 5:1   | 106-4932    | 1    | Hosebarb-Straight       |
| 5:1:1 | 100-8637    | 1    | O-Ring                  |
| 5:3   | 127-1142    | 1    | Fitting-STR             |
| 5:4   | 2412-34     | 2    | Clamp-Hose              |
| 6     | 125-0601    | 1    | Regulating Hose ASM     |
| 6:1   | 106-4933    | 1    | Hosebarb ASM            |
| 6:1:1 | 100-8637    | 1    | O-Ring                  |
| 6:2   | 106-4932    | 1    | Hosebarb-Straight       |
| 6:2:1 | 100-8637    | 1    | O-Ring                  |
| 6:4   | 2412-34     | 2    | Clamp-Hose              |
| 7     | 132-4315    | 1    | Hose-Bypass             |
| 7:1   | 106-4933    | 1    | Hosebarb ASM            |
| 7:1:1 | 100-8637    | 1    | O-Ring                  |
| 7:3   | 131-0213    | 1    | 90 DEG Barb Fitting Kit |
| 7:3:1 | 133-0398    | 1    | Pin-Fork                |
| 7:4   | 2412-34     | 2    | Clamp-Hose              |
| 8     | 125-0603    | 1    | Top Suction Hose ASM    |
| 8:1   | 106-4952    | 1    | Hosebarb-90 DEG         |
| 8:1:1 | 100-6989    | 1    | O-Ring                  |

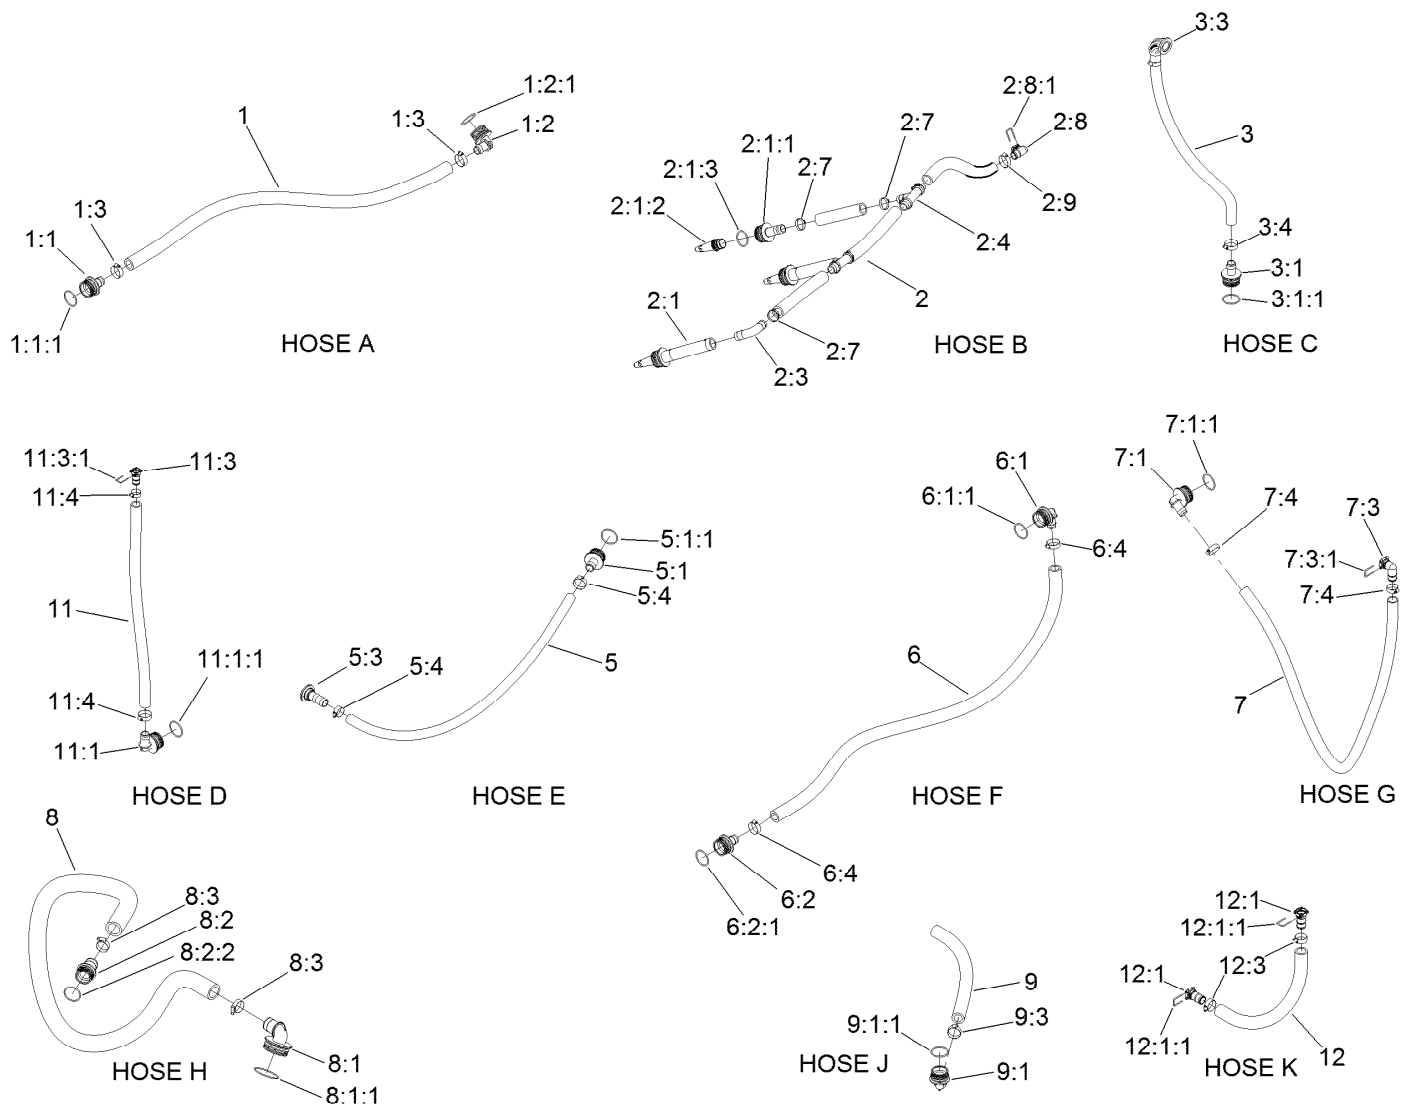


Reference **Spray Tank Assembly** page and **Spray Tank Valve Assembly** page for hose locations and orientation

## Hose Assembly (continued)

 
| Ref.  | Part Number | Qty. | Description     |
|-------|-------------|------|-----------------|
| 8:2   | 117-7982    | 1    | Hosebarb ASM    |
| 8:2:2 | 100-8637    | 1    | O-Ring          |
| 8:3   | 41327       | 2    | Clamp-Hose      |
| 9     | 125-0647    | 1    | Drain Hose ASM  |
| 9:1   | 106-4933    | 1    | Hosebarb ASM    |
| 9:1:1 | 100-8637    | 1    | O-Ring          |
| 9:3   | 2412-34     | 1    | Clamp-Hose      |
| 11    | 132-4316    | 1    | Hose-Regulating |
| 11:1  | 106-4933    | 1    | Hosebarb ASM    |

| Ref.   | Part Number | Qty. | Description     |
|--------|-------------|------|-----------------|
| 11:1:1 | 100-8637    | 1    | O-Ring          |
| 11:3   | 127-9806    | 1    | Fitting Kit     |
| 11:3:1 | 133-0398    | 1    | Pin-Fork        |
| 11:4   | 2412-34     | 2    | Clamp-Hose      |
| 12     | 132-4319    | 1    | Hose-Regulating |
| 12:1   | 127-9806    | 2    | Fitting Kit     |
| 12:1:1 | 133-0398    | 1    | Pin-Fork        |
| 12:3   | 2412-34     | 2    | Clamp-Hose      |

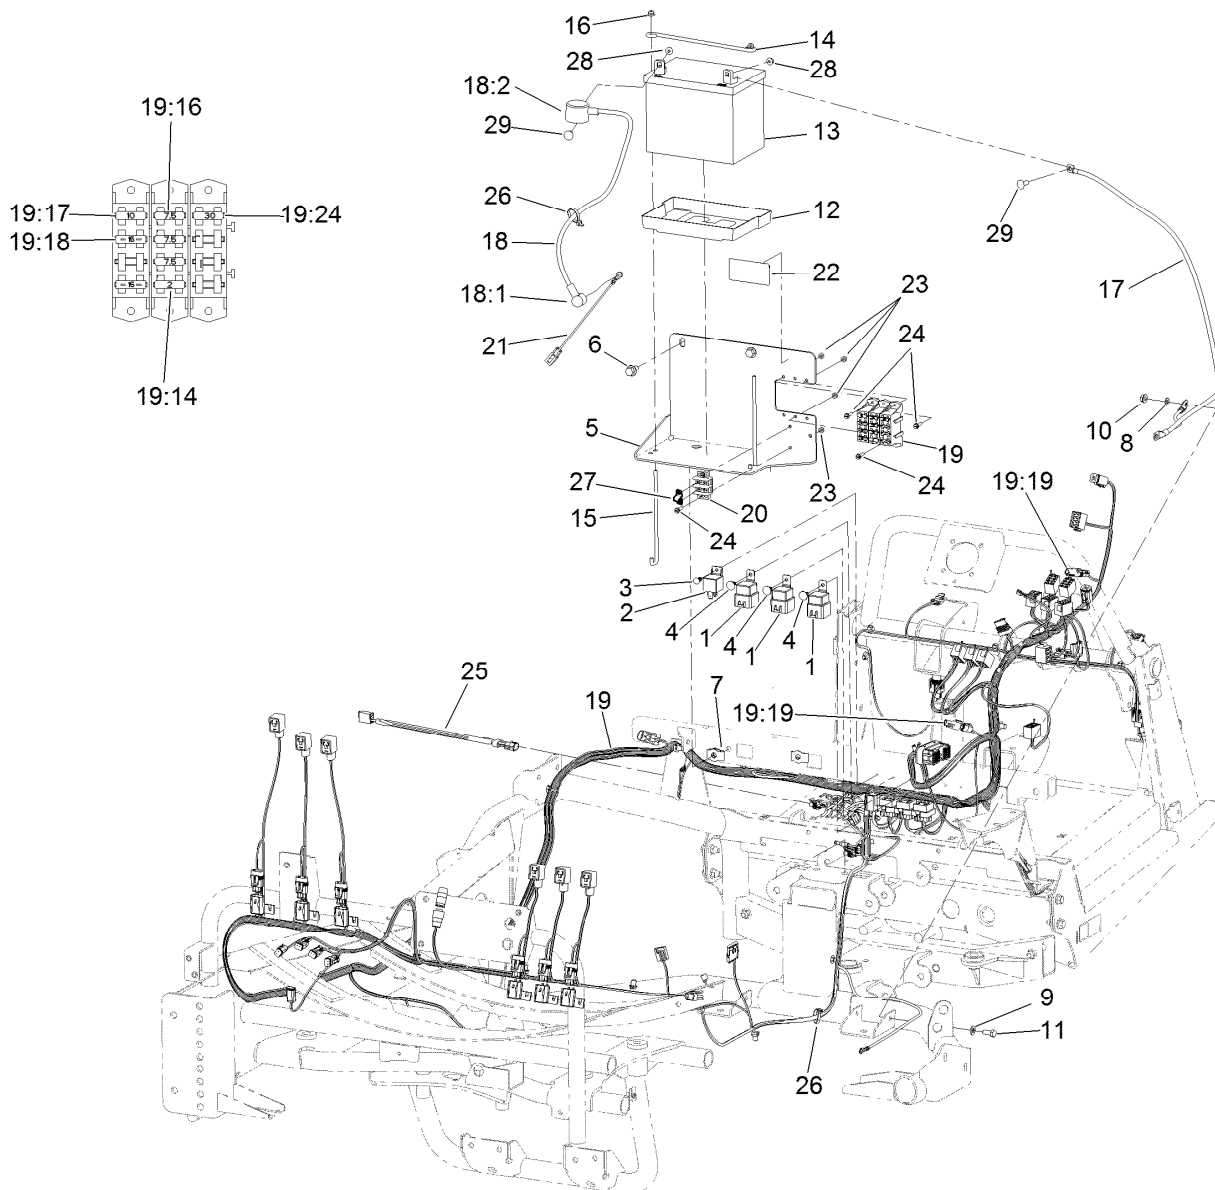

## Main Wiring Harness and Battery Assembly

 
| Ref. | Part Number | Qty. | Description                | Ref.  | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|-------|-------------|------|----------------------------|
| 1    | 99-7430     | 3    | Relay-Mini                 | 18:2  | 109-2407    | 1    | Insulator-Battery          |
| 2    | 99-7435     | 1    | Relay                      | 19    | 122-0431    | 1    | Harness-Wire               |
| 3    | 125-8067    | 1    | Plug-Plastic               | 19:14 | 94-6710     | 1    | Fuse-2 Amp                 |
| 4    | 117-2382    | 3    | Plug-Plastic               | 19:16 | 114241      | 3    | Fuse-Blade, 7.5 Amp        |
| 5    | 125-0908-03 | 1    | Base-Battery               | 19:17 | 218-578     | 1    | Fuse-Blade, 10 Amp         |
| 6    | 3234-1      | 2    | Screw-HHF                  | 19:18 | 109355      | 2    | Fuse-Blade, 15 Amp         |
| 7    | 105-4886    | 2    | Nut-Tinnerman              | 19:19 | 32180-043   | 2    | Resistor-120 Ohm           |
| 8    | 3255-8      | 1    | Washer-Lock                | 19:24 | 109103      | 1    | Fuse-Blade, 30 Amp         |
| 9    | 3256-23     | 1    | Washer-Plain               | 20    | 42862       | 1    | Block-Terminal, Ground     |
| 10   | 32128-25    | 1    | Nut-HF                     | 21    | 108-9455    | 1    | Harness-Wire, Fusible Link |
| 11   | 322-3       | 1    | Screw-HH                   | 22    | 127-3942    | 1    | Decal-Fuse Block           |
| 12   | 106948      | 1    | Tray-Battery               | 23    | 3296-2      | 5    | Nut-Lock, NI               |
| 13   | 104-8162    | 1    | Battery                    | 24    | 32105-13    | 5    | Screw-HWH                  |
| 14   | 100-6434    | 1    | Rod-Hold Down, Battery     | 25    | 108-8657    | 1    | Harness-Wire, Seat         |
| 15   | 100-6435    | 2    | Post-Battery               | 26    | 3290-379    | 2    | Tie-Cable                  |
| 16   | 119-6897    | 2    | Nut-Flange, Hex            | 27    | 42863       | 1    | Strip-Jumper               |
| 17   | 122-0137    | 1    | Cable-Battery, Negative    | 28    | 104-8300    | 2    | Nut-HF, NI                 |
| 18   | 109-7621    | 1    | Positive Battery Cable ASM | 29    | 3230-1      | 2    | Bolt-CARR                  |
| 18:1 | 1-543393    | 1    | Insulator-Solenoid         |       |             |      |                            |

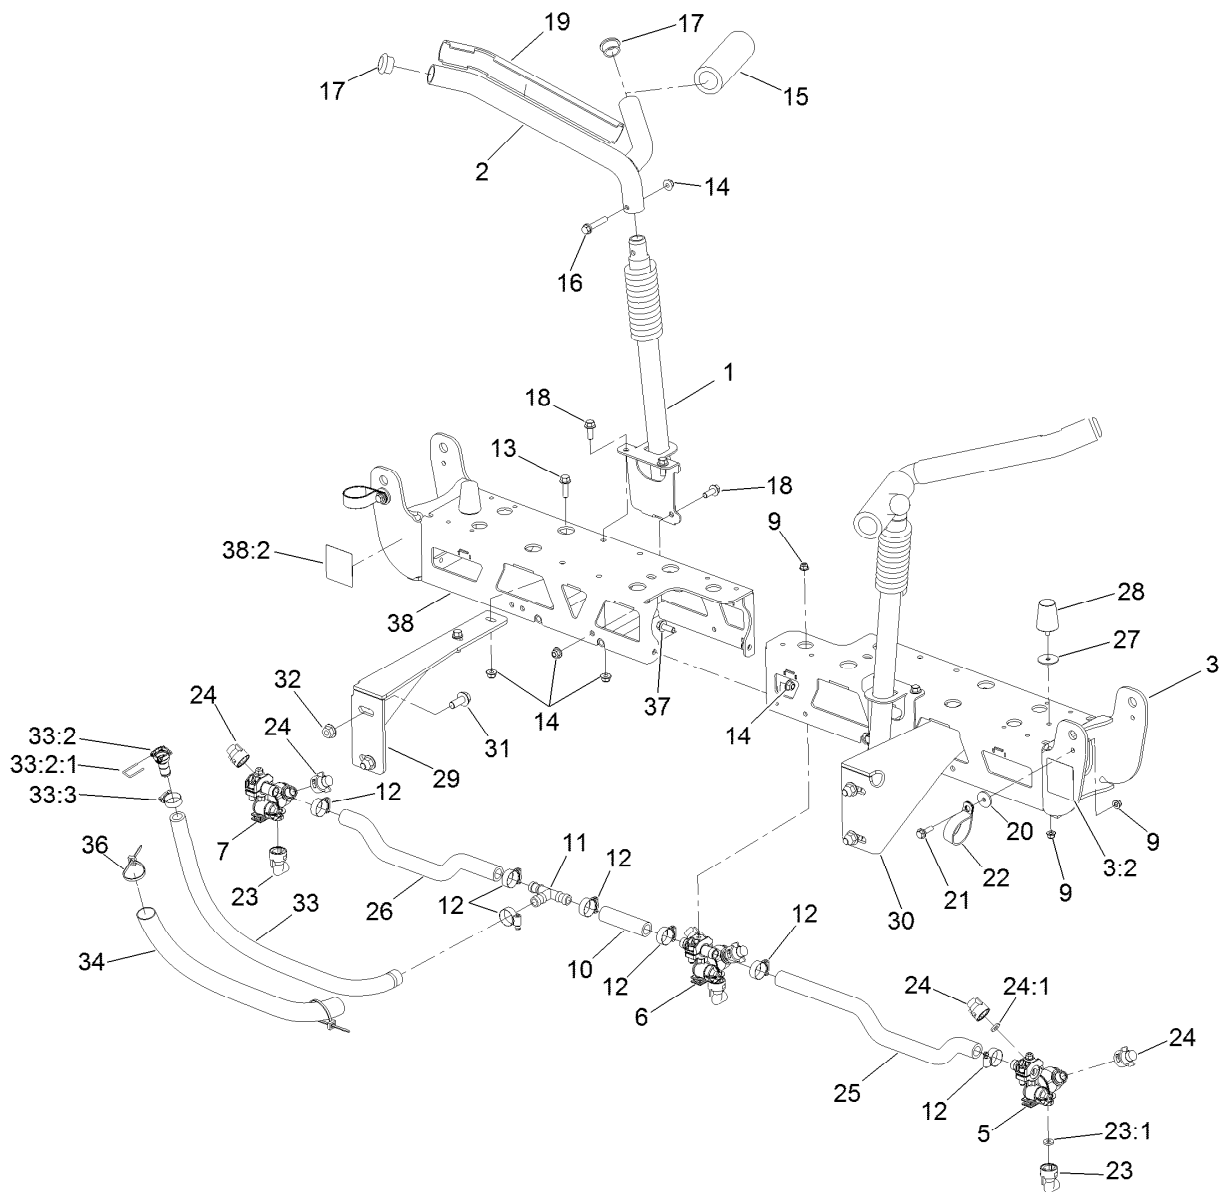

## Center Boom Mount Assembly
 
| Ref. | Part Number | Qty. | Description                 | Ref.   | Part Number | Qty. | Description            |
|------|-------------|------|-----------------------------|--------|-------------|------|------------------------|
| 1    | 130-8238-03 | 2    | Lower Cradle ASM            | 22     | 114-9566    | 2    | Clamp-R                |
| 2    | 108-3476-03 | 2    | Cradle-Upper                | 23     | 95-9186     | 3    | Cap                    |
| 3    | 136-0381    | 1    | Boom-LH                     | 23:1   | 40998       | 1    | Seat-Gasket            |
| 3:2  | 120-0617    | 2    | Decal-Warning, Pinch, Crush | 24     | 95-9187     | 6    | Cap-Blank              |
|      |             |      |                             | 24:1   | 40998       | 1    | Seat-Gasket            |
| 5    | 108-3725    | 1    | LH Single Body Turret ASM   | 25     | 108-3735    | 1    | Hose-Boom, Center (LH) |
| 6    | 108-3727    | 1    | Double Turret Body ASM      | 26     | 108-3718    | 1    | Hose-Boom, Center (RH) |
| 7    | 108-3726    | 1    | RH Single Body Turret ASM   | 27     | 3256-68     | 2    | Washer-Flat            |
| 9    | 104-8300    | 7    | Nut-HF, NI                  | 28     | 110-5070    | 2    | Bumper                 |
| 10   | 108-3717    | 1    | Hose-Boom                   | 29     | 130-8244-03 | 1    | Mount-Boom, RH         |
| 11   | 108-3439    | 1    | Tee                         | 30     | 130-8245-03 | 1    | Mount-Boom, LH         |
| 12   | 2412-129    | 7    | Clamp-Hose                  | 31     | 110-5057    | 4    | Capscrew-HHF           |
| 13   | 110-5050    | 4    | Screw-HHF                   | 32     | 108-3745    | 4    | Nut-HHF, Whiz          |
| 14   | 104-8301    | 14   | Nut-HF, NI                  | 33     | 132-4323    | 1    | Hose-Boom, Center      |
| 15   | 108-3457    | 2    | Spacer                      | 33:2   | 127-9807    | 1    | Straight Fitting Kit   |
| 16   | 108-3742    | 2    | Screw-HHF                   | 33:2:1 | 133-0398    | 1    | Pin-Fork               |
| 17   | 108-3489    | 4    | Cap-Tube                    | 33:3   | 2412-129    | 1    | Clamp-Hose             |
| 18   | 110-5052    | 6    | Screw-HHF                   | 34     | 127-3923    | 1    | Conduit-Convolutated   |
| 19   | 108-3495    | 2    | Cover-Slide                 | 36     | 3290-378    | 2    | Tie-Cable              |
| 20   | 108-3743    | 2    | Washer                      | 37     | 3234-42     | 2    | Screw-HHF              |
| 21   | 108-3744    | 2    | Screw-Shoulder              |        |             |      |                        |




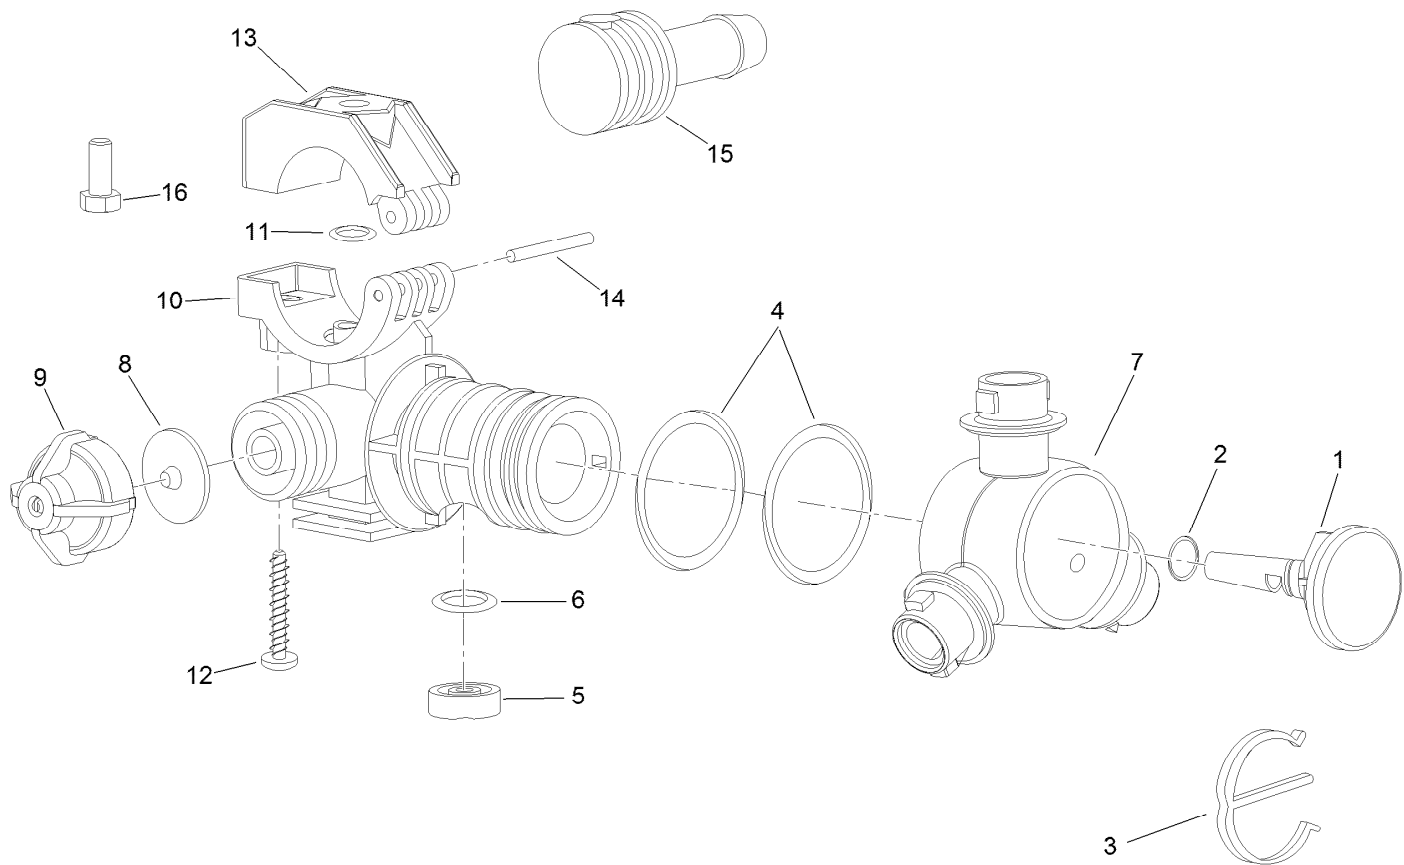

## LH Single Turret Body Assembly No. 108-3725

| Ref. | Part Number | Qty. | Description  |
|------|-------------|------|--------------|
| 1    | 95-9200     | 1    | Plug         |
| 2    | 95-9198     | 1    | O-Ring       |
| 3    | 95-9197     | 1    | E-Clip       |
| 4    | 95-9199     | 2    | O-Ring       |
| 5    | 108-3264    | 1    | Seal-Viton   |
| 6    | 108-3265    | 1    | O-Ring-Viton |
| 7    | 95-9196     | 1    | Turret       |
| 8    | 41003       | 1    | Diaphragm    |
 
| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 9    | 95-9193     | 1    | Cap-Diaphragm     |
| 10   | 95-9192     | 1    | Body-Split Eyelet |
| 11   | 95-9191     | 1    | O-Ring            |
| 12   | 99-0811     | 1    | Screw-Clamp       |
| 13   | 99-0812     | 1    | Clamp-Upper       |
| 14   | 99-0814     | 1    | Pin-Pivot         |
| 15   | 95-9201     | 1    | Shank-Hose        |
| 16   | 322-3       | 1    | Screw-HH          |

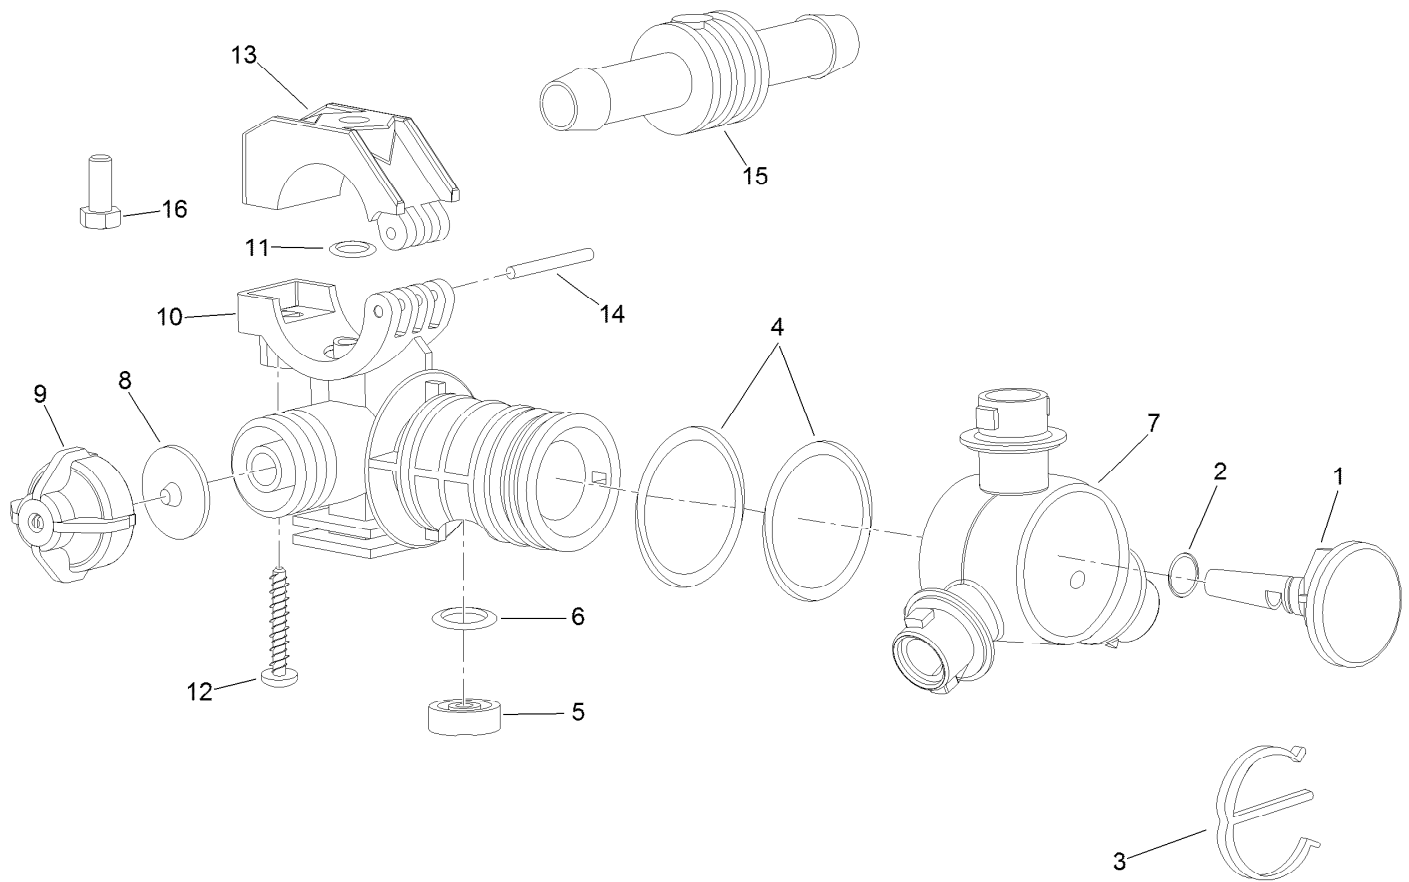


## Double Turret Body Assembly No. 108-3727

| Ref. | Part Number | Qty. | Description  |
|------|-------------|------|--------------|
| 1    | 95-9200     | 1    | Plug         |
| 2    | 95-9198     | 1    | O-Ring       |
| 3    | 95-9197     | 1    | E-Clip       |
| 4    | 95-9199     | 2    | O-Ring       |
| 5    | 108-3264    | 1    | Seal-Viton   |
| 6    | 108-3265    | 1    | O-Ring-Viton |
| 7    | 95-9196     | 1    | Turret       |
| 8    | 41003       | 1    | Diaphragm    |
 
| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 9    | 95-9193     | 1    | Cap-Diaphragm     |
| 10   | 95-9192     | 1    | Body-Split Eyelet |
| 11   | 95-9191     | 1    | O-Ring            |
| 12   | 99-0811     | 1    | Screw-Clamp       |
| 13   | 99-0812     | 1    | Clamp-Upper       |
| 14   | 99-0814     | 1    | Pin-Pivot         |
| 15   | 95-9202     | 1    | Shank-Hose        |
| 16   | 322-3       | 1    | Screw-HH          |




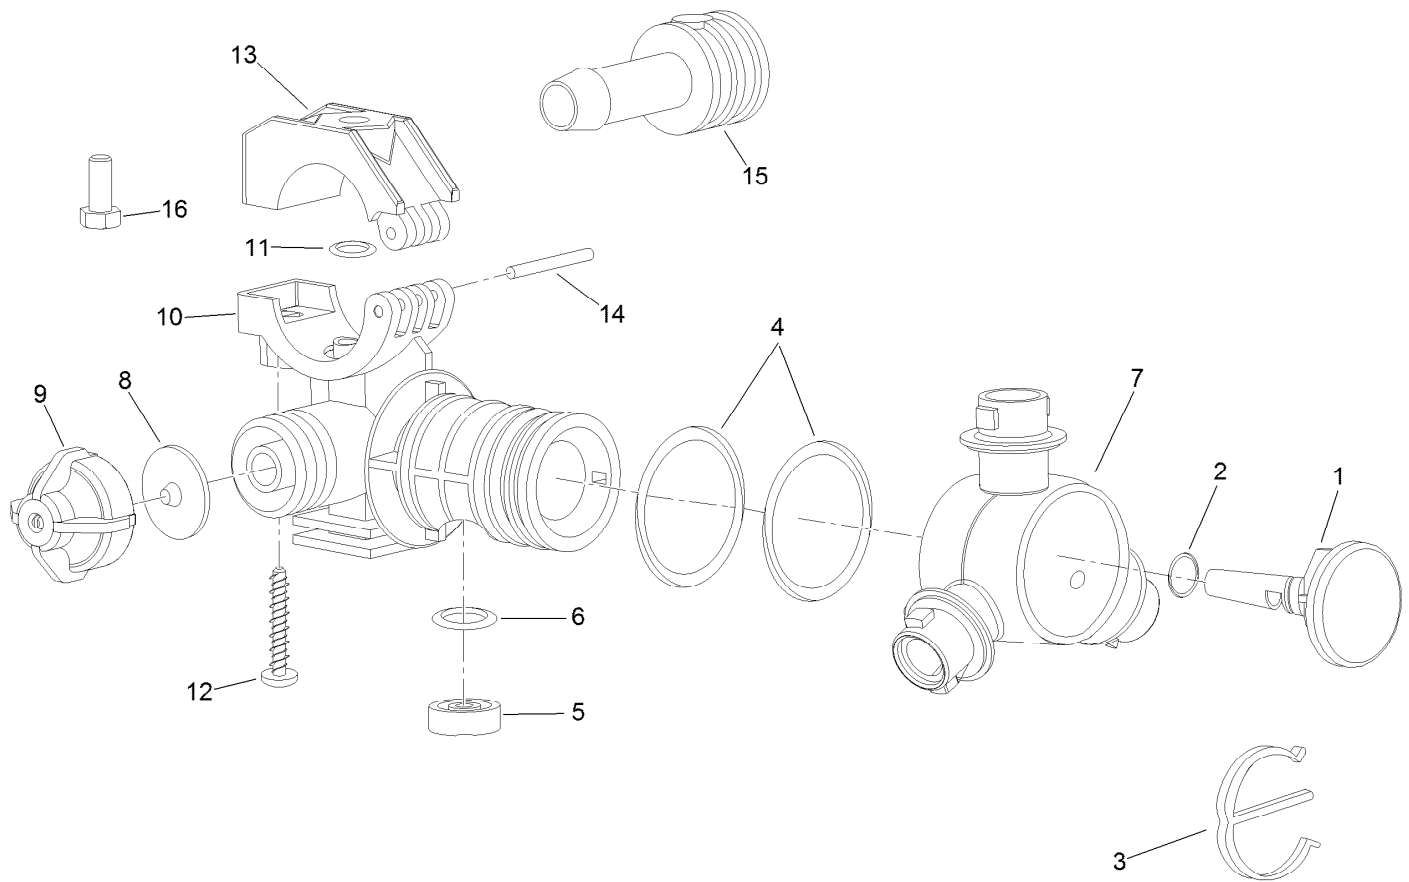

## RH Single Body Turret Assembly No. 108-3726

| Ref. | Part Number | Qty. | Description  |
|------|-------------|------|--------------|
| 1    | 95-9200     | 1    | Plug         |
| 2    | 95-9198     | 1    | O-Ring       |
| 3    | 95-9197     | 1    | E-Clip       |
| 4    | 95-9199     | 2    | O-Ring       |
| 5    | 108-3264    | 1    | Seal-Viton   |
| 6    | 108-3265    | 1    | O-Ring-Viton |
| 7    | 95-9196     | 1    | Turret       |
| 8    | 41003       | 1    | Diaphragm    |

 
| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 9    | 95-9193     | 1    | Cap-Diaphragm     |
| 10   | 95-9192     | 1    | Body-Split Eyelet |
| 11   | 95-9191     | 1    | O-Ring            |
| 12   | 99-0811     | 1    | Screw-Clamp       |
| 13   | 99-0812     | 1    | Clamp-Upper       |
| 14   | 99-0814     | 1    | Pin-Pivot         |
| 15   | 95-9201     | 1    | Shank-Hose        |
| 16   | 322-3       | 1    | Screw-HH          |

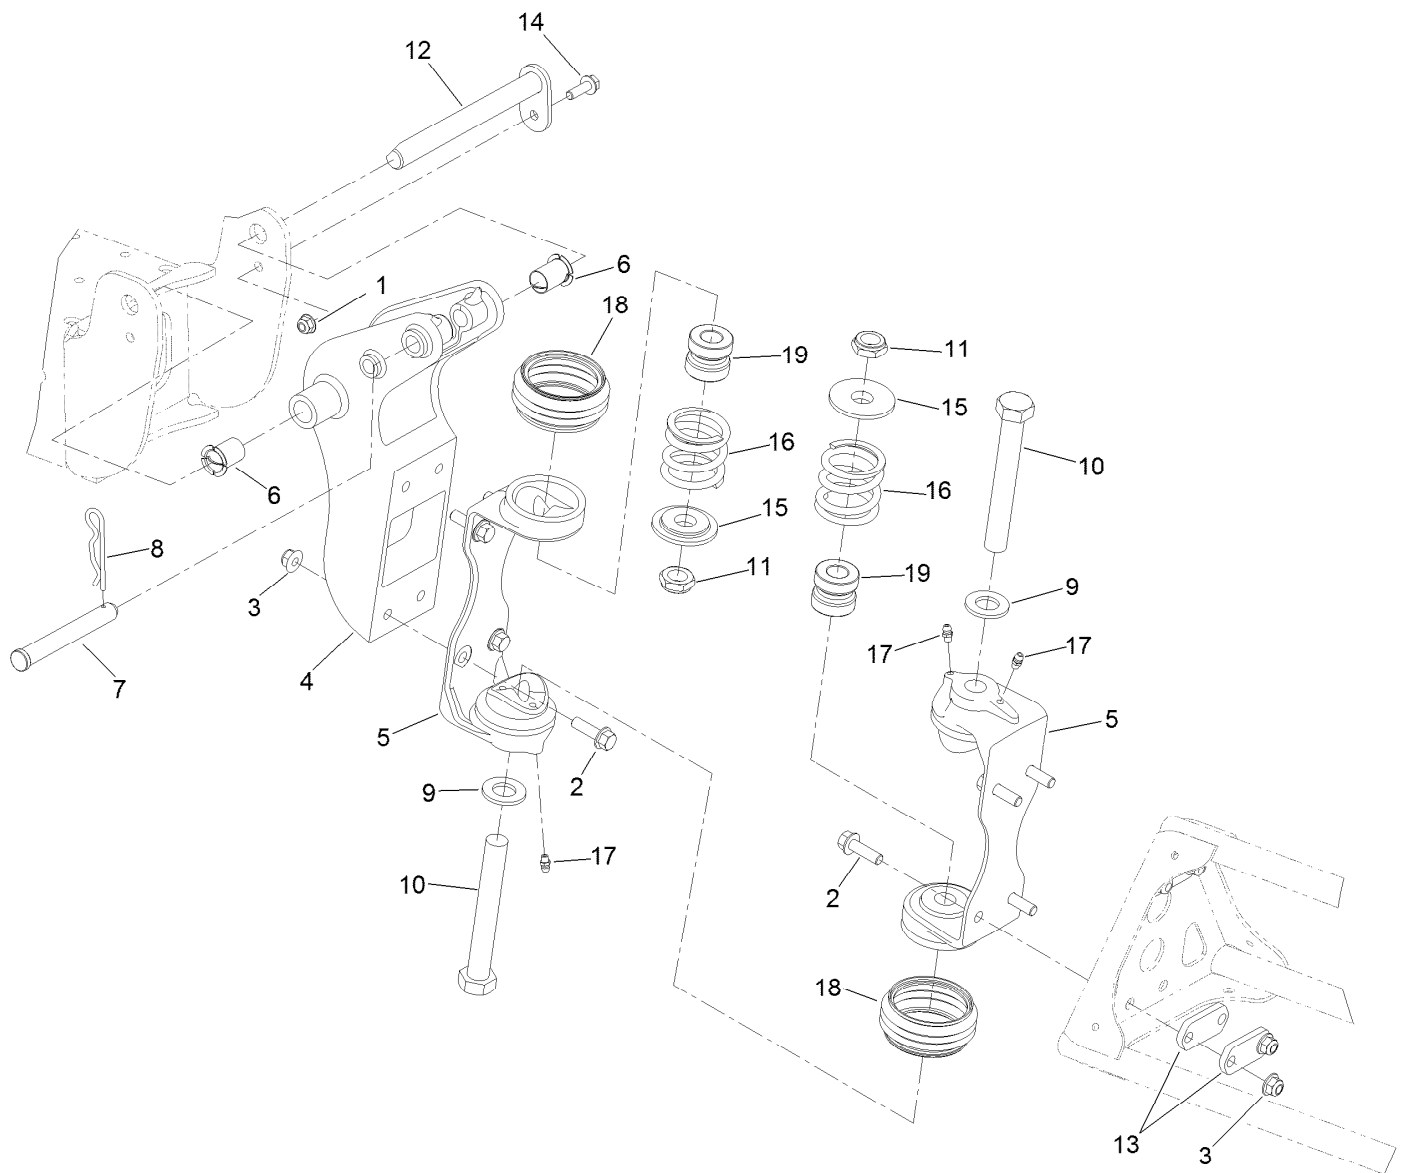

## Boom Pivot Assembly

| Ref. | Part Number | Qty. | Description   |
|------|-------------|------|---------------|
| 1    | 104-8300    | 2    | Nut-HF, NI    |
| 2    | 110-5050    | 16   | Screw-HHF     |
| 3    | 104-8301    | 16   | Nut-HF, NI    |
| 4    | 119-4993-03 | 2    | Bracket-Pivot |
| 5    | 108-3471-03 | 4    | Hinge         |
| 6    | 100-8541    | 4    | Bushing-A Arm |
| 7    | 108-3436    | 2    | Pin-Clevis    |
| 8    | 3290-468    | 2    | Pin-Cotter    |
| 9    | 110-5054    | 4    | Washer-Flat   |
| 10   | 108-3738    | 4    | Screw-HH      |
 
| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 11   | 3296-15     | 4    | Nut-Lock, NI           |
| 12   | 108-3419    | 2    | Pivot Pin ASM          |
| 13   | 108-3605    | 8    | Plate-Backing          |
| 14   | 108-3748    | 2    | Screw-HHF              |
| 15   | 108-3444    | 4    | Retainer-Spring        |
| 16   | 108-3440    | 4    | Spring-Breakaway, Boom |
| 17   | 302-5       | 8    | Fitting-Grease         |
| 18   | 108-3459    | 4    | Boot-Hinge             |
| 19   | 120-8541    | 4    | Dampener-Hinge         |

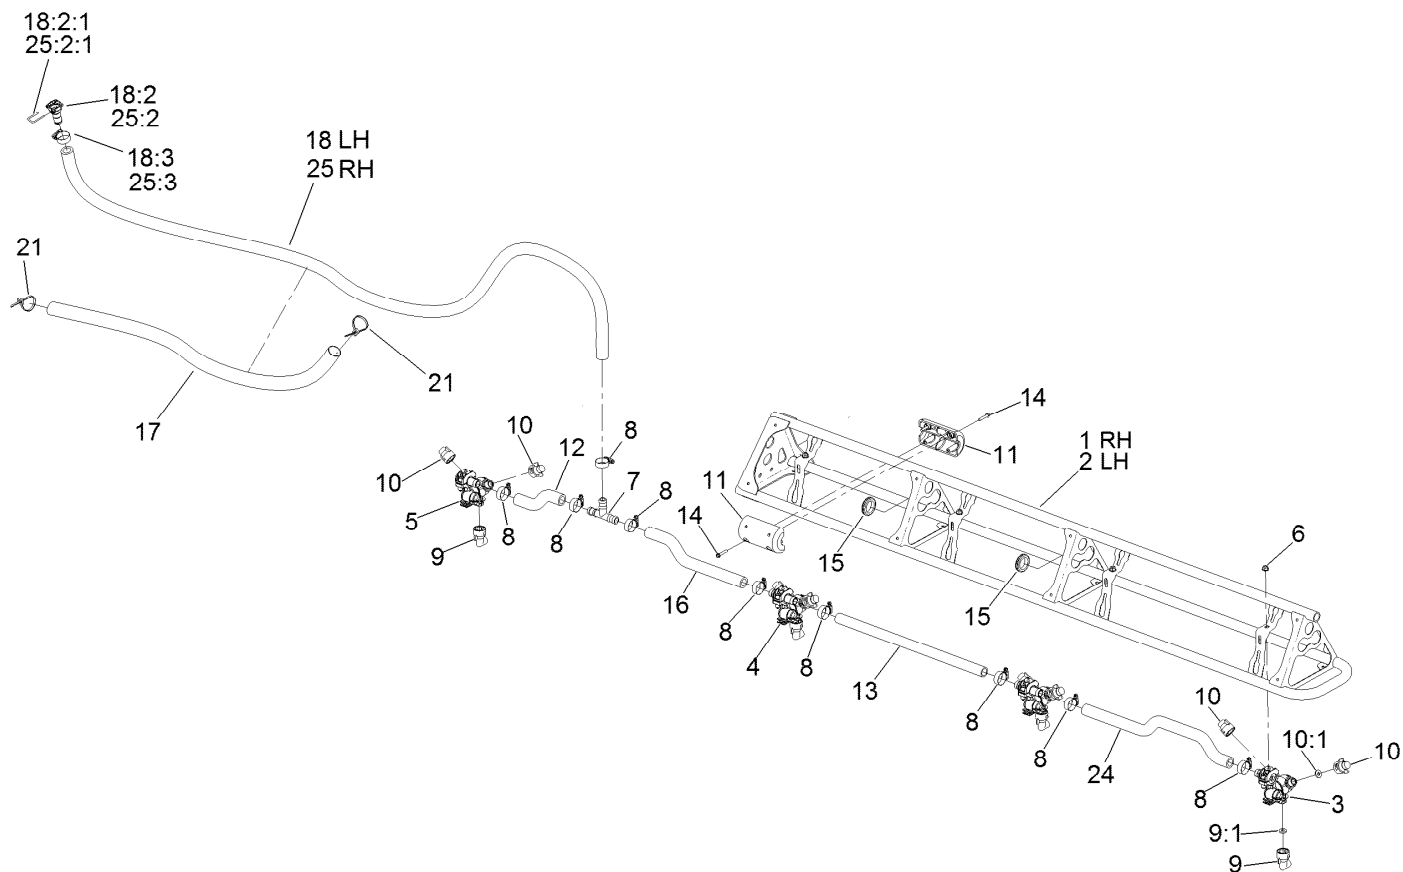

## Left and Right Hand Boom Assembly

| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 1    | 108-3524-03 | 1    | Boom-RH                   |
| 2    | 108-3525-03 | 1    | Boom-LH                   |
| 3    | 108-3725    | 2    | LH Single Body Turret ASM |
| 4    | 108-3727    | 4    | Double Turret Body ASM    |
| 5    | 108-3726    | 2    | RH Single Body Turret ASM |
| 6    | 104-8300    | 8    | Nut-HF, NI                |
| 7    | 108-3439    | 2    | Tee                       |
| 8    | 2412-129    | 18   | Clamp-Hose                |
| 9    | 95-9186     | 8    | Cap                       |
| 9:1  | 40998       | 1    | Seat-Gasket               |
| 10   | 95-9187     | 16   | Cap-Blank                 |
| 10:1 | 40998       | 1    | Seat-Gasket               |
| 11   | 119-9368    | 4    | Block Slide               |
| 12   | 136-0437    | 2    | Hose-Formed               |
| 13   | 40506       | 2    | Hose-Jumper               |

| Ref.   | Part Number | Qty. | Description            |
|--------|-------------|------|------------------------|
| 14     | 119-9369    | 8    | Screw-HHF              |
| 15     | 240-3       | 4    | Grommet-Rubber         |
| 16     | 136-0436    | 2    | Hose-Formed            |
| 17     | 107-8650    | 2    | Conduit-Convolutd      |
| 18     | 132-4322    | 2    | Hose-Boom              |
| 18:2   | 127-9807    | 1    | Straight Fitting Kit   |
| 18:2:1 | 133-0398    | 1    | Pin-Fork               |
| 18:3   | 2412-129    | 1    | Clamp-Hose             |
| 21     | 3290-378    | 6    | Tie-Cable              |
| 24     | 108-3735    | 2    | Hose-Boom, Center (LH) |
| 25     | 132-4324    | 1    | Hose-Boom              |
| 25:2   | 127-9807    | 1    | Straight Fitting Kit   |
| 25:2:1 | 133-0398    | 1    | Pin-Fork               |
| 25:3   | 2412-129    | 1    | Clamp-Hose             |

# Attachments and Accessories

## For 41188 — Multi Pro 1750 Turf Sprayer

| Product Name                                                                                                         | Model/Part |
|----------------------------------------------------------------------------------------------------------------------|------------|
| Premium ATF (Drum).....                                                                                              | 108-1185   |
| Premium ATF (Pail) .....                                                                                             | 108-1186   |
| Premium All Purpose Grease (Tube) .....                                                                              | 108-1190   |
| License Plate Kit.....                                                                                               | 120-8506   |
| Covered Boom Spring Upgrade Kit.....                                                                                 | 120-8508   |
| Premium Engine Oil 10w30 (55 Gallon Drum) .....                                                                      | 121-6392   |
| Premium Engine Oil 10w30 (5 Gallon Pail) .....                                                                       | 121-6393   |
| Lance Suction Assembly .....                                                                                         | 127-9826   |
| Sonic Boom Finish Kit.....                                                                                           | 130-8227   |
| Pump Head Kit.....                                                                                                   | 133-2898   |
| Finishing Kit, Foam Marker for Multi Pro 1750 Turf Sprayer .....                                                     | 136-0457   |
| Universal Sunshade .....                                                                                             | 30349      |
| Rear Work Light Kit.....                                                                                             | 41010      |
| Single Nozzle Kit.....                                                                                               | 41023      |
| Hand Spray Wand Kit .....                                                                                            | 41118      |
| EU Compliance Kit.....                                                                                               | 41155      |
| Pro Foam Concentrate (4 x 1 Gallon) .....                                                                            | 41157      |
| Chemical Pre-Mix Kit .....                                                                                           | 41158      |
| Electric Hose Reel Kit .....                                                                                         | 41159      |
| CE Kit .....                                                                                                         | 41202      |
| Tank Clean Rinse Kit .....                                                                                           | 41208      |
| Ultra Sonic Boom Leveling Kit .....                                                                                  | 41219      |
| Foam Marker Kit .....                                                                                                | 41249      |
| Road Light and Homologation Kit .....                                                                                | 41250      |
| Drift Reduction Boom Shroud Kit .....                                                                                | 41602      |
| Pro-Foam.....                                                                                                        | 41607      |
| CDMA RTK Correction Modem Kit, GeoLink Precision Spray System .....                                                  | 41624      |
| GSM RTK Correction Modem Kit, GeoLink Precision Spray System.....                                                    | 41625      |
| GeoLink Reference Antenna Kit .....                                                                                  | 41626      |
| X25 GeoLink Precision Spray System Kit, Serial Number 315000001 and After Multi Pro 1750 or 5800 Turf Sprayer .....  | 41630      |
| X25 GeoLink Precision Spray System Finishing Kit, Serial Number 315000001 and After Multi Pro 1750 Turf Sprayer..... | 41631      |
| Spark Arrestor Screen .....                                                                                          | 94-8157    |

**Notes:**

**Notes:**

**Notes:**



**Count on it.**