


TORO®

MODEL NO. 30113-5000001 & UP
 MODEL NO. 30125-5000001 & UP
 MODEL NO. 30136-5000001 & UP
 MODEL NO. 30144-5000001 & UP
 MODEL NO. 30152-5000001 & UP

PARTS CATALOG

110 COMMERCIAL WALK MOWER (2 Cycle)

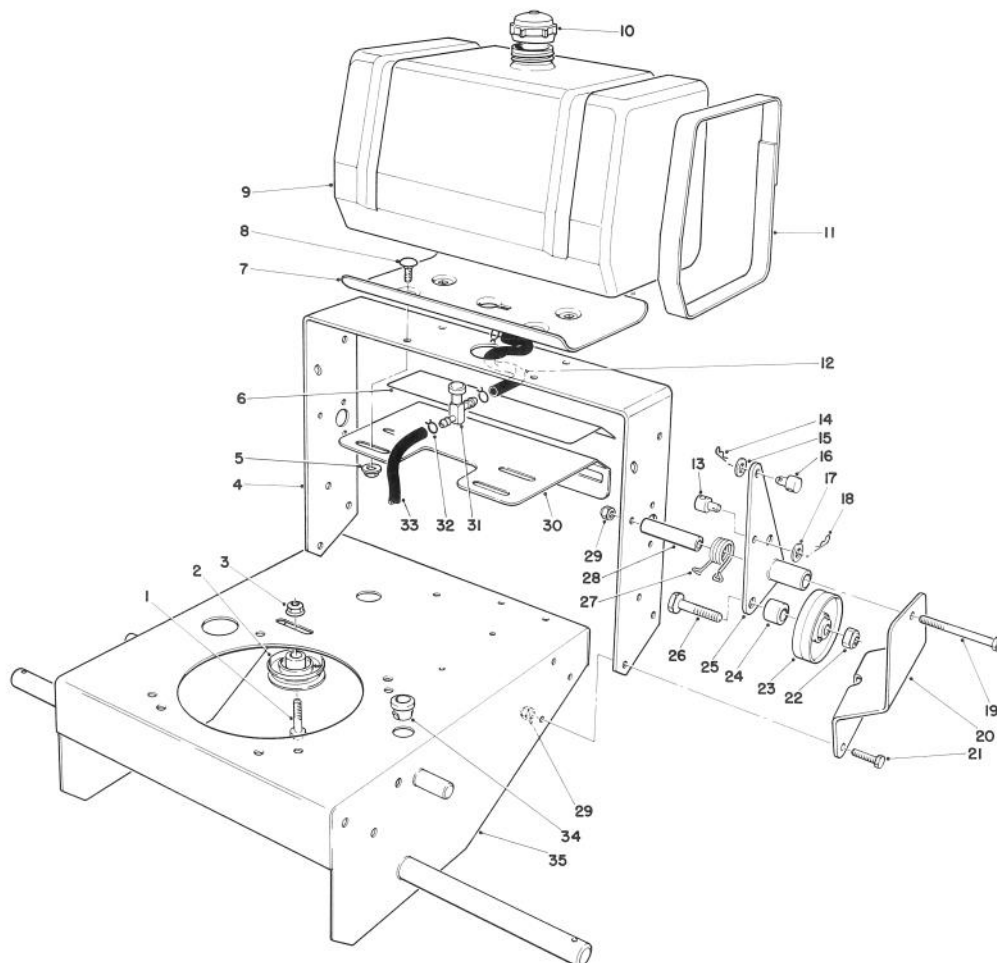


FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-9	Screw — Cap Hex Head	1
2	51-4810	Pulley — Idler	1
3	32128-21	Nut — Hex Flange	1
4	54-3170	Frame — Rear	1
5	32128-13	Nut — Lock Flange	4
6	52-2140	Decal — Ground Speed	1
7	54-3100	Plate — Fuel Tank	1
8	3230-2	Bolt — Carriage	4
9	54-2010	Tank — Fuel	1
10	10-7950	Gas Cap	1
11	54-3110	Strap — Tank, Fuel	2
12	47-2984	Hose — Gas	1
13	51-4690	Fitting — Rod	2
14	3290-307	Hairpin — Cotter	2
15	3256-23	Washer — Plain Flat	2
16	54-3080	Fitting Rod	2
17	3256-23	Washer — Plain, Flat	2
18	3290-307	Hairpin — Cotter	2
19	323-16	Screw — Cap Hex Head	2

Ref. No.	Part No.	Description	No. Used
20	51-4360	Bracket — Support L.H.	1
*	51-4350	Bracket — Support R.H.	1
21	323-6	Screw — Cap Hex Head	6
22	3296-23	Nut — Lock	2
23	51-4480	Idler Wheel	2
24	51-4490	Spacer — Idler Wheel	2
25	51-4310	Idler Bracket L.H.	1
*	51-4300	Idler Bracket R.H.	1
26	51-4450	Screw — Leveler	2
27	51-4380	Spring — Torsion L.H.	1
*	51-4370	Spring — Torsion R.H.	1
28	51-4340	Spacer — Pivot, Idler	2
29	3296-39	Nut — Lock	8
30	51-4140	Plate — Control	1
31	54-3150	Valve — Fuel	1
32	2412-33	Clamp — Fuel Line	6
33	47-2980	Hose — Gas	1
34	237-121	Snap Bushing	1
35	51-4100	Frame	1


*Not Illustrated

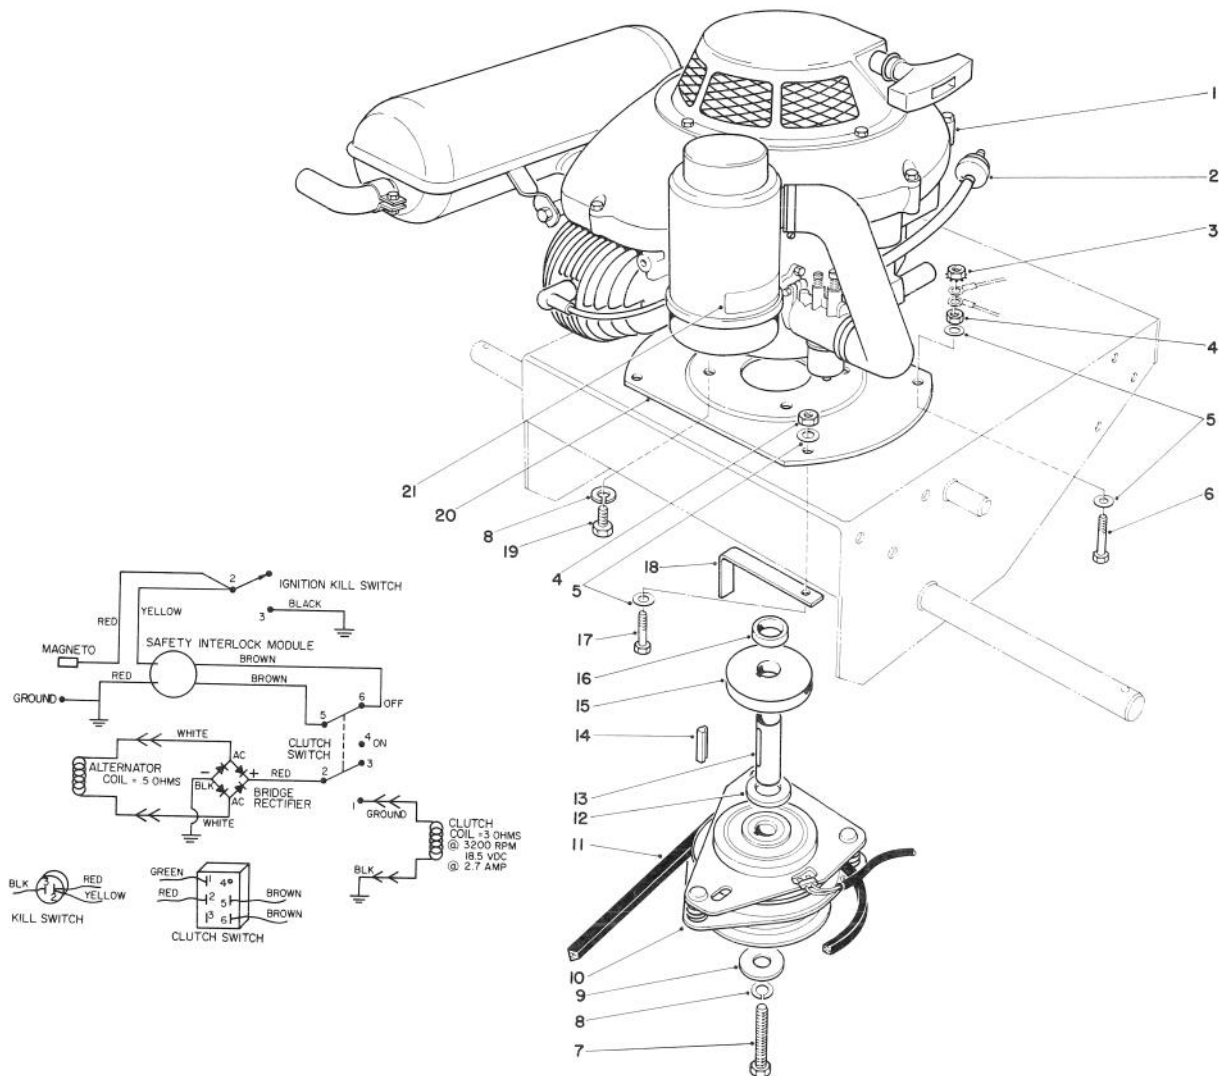

ENGINE ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	54-3130	Engine Assembly	1
2	42-5240	Fuel Filter	1
3	32149-1	Nut — Lock	1
4	32152-1	Nut — Lock	4
5	3256-23	Washer — Plain	8
6	322-16	Capscrew	1
7	54-3260	Capscrew	1
8	3253-22	Washer — Lock	5
9	44-8160	Washer — Clutch	1
10	54-3200	Clutch Brake Assembly	1
11	54-2750	V-Belt Deck Drive	1

Ref. No.	Part No.	Description	No. Used
12	51-3280	Spacer — Lower	1
13	54-2920	Adapter — Crankshaft	1
14	54-2930	Key — Crankshaft	1
15	51-4460	Pulley — Traction	1
16	54-2940	Upper Spacer	1
17	322-4	Screw — Cap Hex Head	3
18	51-4540	Retainer — Clutch	1
19	54-3250	Capscrew M10 x 30 MM	4
20	54-2910	Plate — Engine	1
21	55-7450	Decal — Air Cleaner	1

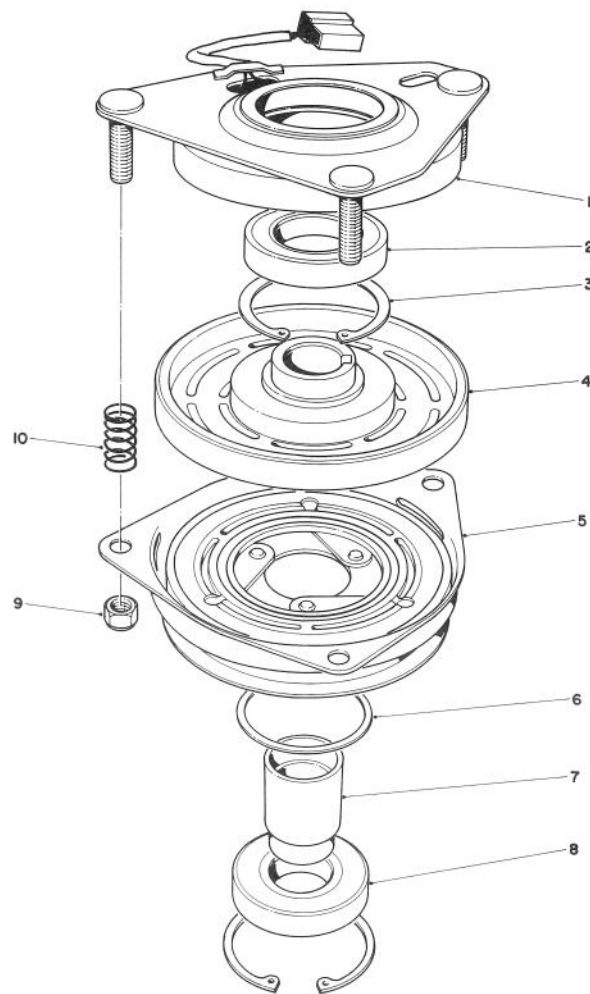

CLUTCH ASSEMBLY NO. 54-3200

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	44-8350	Field Assembly (Incl. Ref. #2 & 3)	1	6	44-8330	Spacer — Pulley Bearing	1
2	251-292	Bearing — Field	1	7	44-8340	Bearing Collar	1
3	44-8310	Retaining Ring	2	8	251-291	Bearing — Pulley	1
4	44-8360	Field Coil, Rotor & Bearing Assembly (Incl. Ref. #1)	1	9	3296-5	Locknut	3
5	55-7410	Armature & Pulley Assembly (Incl. Ref. #3, 6, 7 & 8)	1	10	44-8320	Spring	3

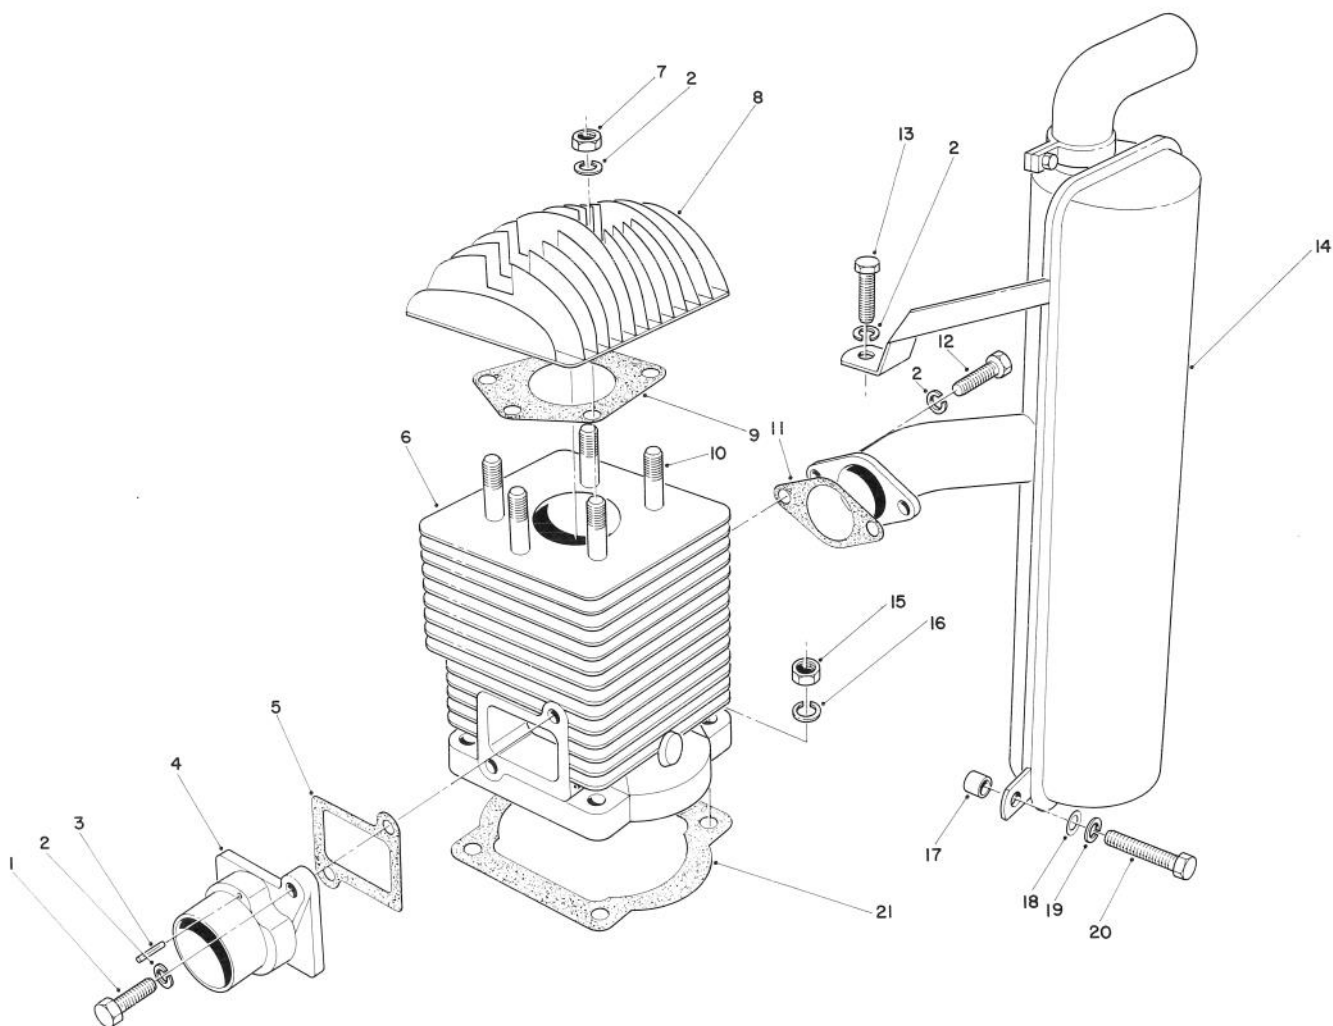


CYLINDER & MUFFLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	55-5390	Capscrew — Socket Head	2
2	55-5070	Washer — Lock	10
3	55-5370	Pin — Wrist	1
4	55-5360	Manifold — Carburetor	1
5	55-5380	Gasket	1
6	55-5270	Cylinder	1
7	55-5310	Nut	5
8	55-5290	Cylinder Head	1
9	55-5300	Gasket	1
10	55-5280	Stud	5
11	55-5430	Gasket	1
12	55-5440	Screw — Hex Head	2

Ref. No.	Part No.	Description	No. Used
13	55-5460	Screw — Hex Head	1
14	55-5410	Muffler	1
15	55-5340	Nut	4
16	55-5350	Washer — Lock	4
17	55-5420	Spacer — Tube	1
18	55-5450	Washer	1
19	55-5400	Washer — Lock	1
20	55-5320	Screw — Hex Head	1
21	55-5330	Gasket	1
*	55-5940	Short Block	1
*	55-5950	Gasket Set	1
*	55-5930	Cylinder Set	1

*Not Illustrated

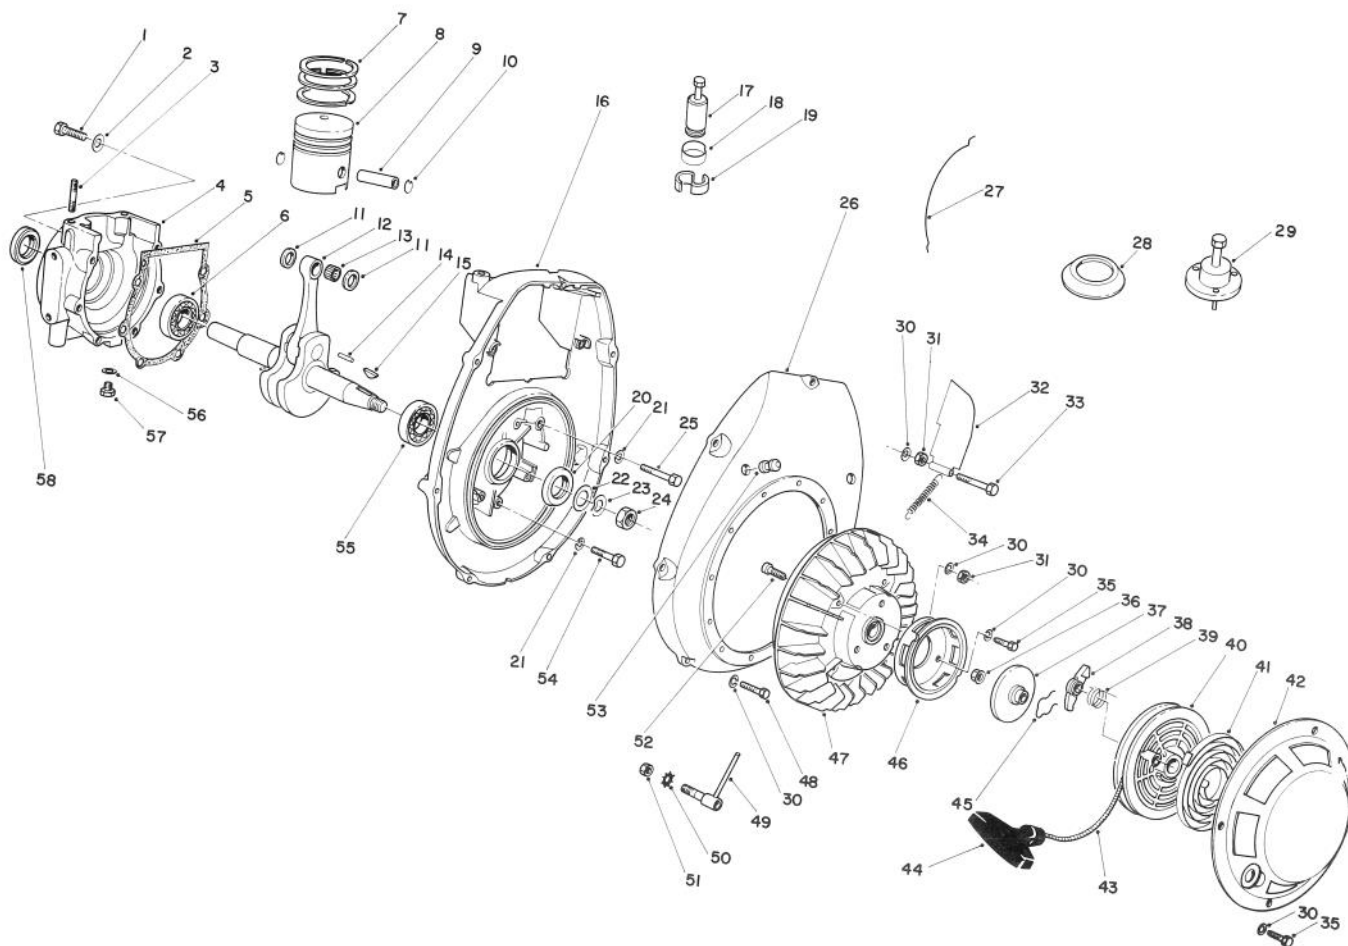


CRANKCASE & FLYWHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	55-5110	Screw — Hex Head	4
2	55-5120	Washer	4
3	55-5020	Stud	4
4	55-5010	Crankcase — PTO Side	1
5	55-5080	Gasket	1
6	55-5160	Ball Bearing	1
7	55-5240	Piston Rings	3
*	55-6470	Piston Rings	3
*	55-6480	Piston Rings	3
8	55-5230	Pistons	1
*	55-6450	Pistons	1
*	55-6460	Pistons	1
9	55-5250	Wrist Pin	1
10	55-5260	Locking Ring	2
11	55-5210	Washer	2
12	55-5130	Crankshaft Assembly	1
13	55-5180	Needle Bearing	1
14	55-5200	Needle	1
15	55-5190	Woodruff Key	1
16	55-5000	Crankcase Starter Side	1
17	55-6070	Extractor	1
18	55-6090	Retaining Ring	1

Ref. No.	Part No.	Description	No. Used
19	55-6080	Half Bushes (Pair)	1
20	55-5100	Oil Seal	1
21	55-5070	Lock Washer	12
22	55-5220	Washer	1
23	55-5150	Washer	1
24	55-5140	Nut	1
25	55-5050	Screw — Hex Head	2
26	55-5710	Fan Cover	1
27	55-5800	Control Cable	1
28	55-6110	Revolution Frequency Meter	1
29	55-6100	Puller	1
30	55-5400	Lockwasher	16
31	55-5740	Nut	5
32	55-5750	Air Vane	1
33	55-5320	Screw — Hex Head	1
34	55-5780	Spring	1
35	55-5920	Screw — Hex Head	7
36	55-5890	Nut	1
37	55-5880	Brake — Disc	1
38	55-5840	Pawl	1
39	55-5870	Spring	1
40	55-5830	Rope Pulley	1

*Not Illustrated

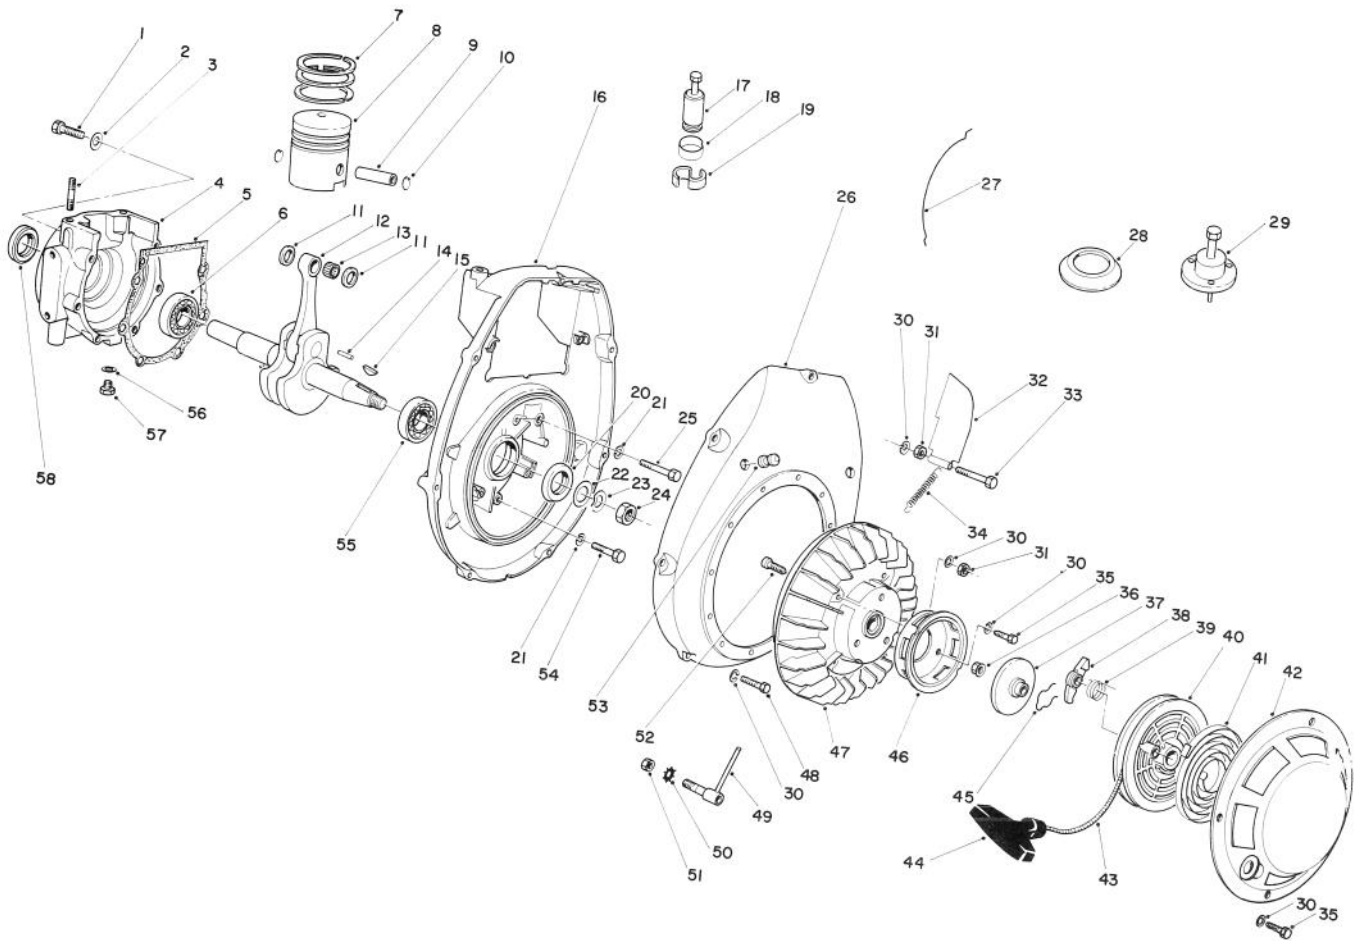


CRANKCASE & FLYWHEEL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
41	55-5850	Recoil Spring	1
42	55-5820	Starter Housing	1
43	55-5900	Rope (Incl. Ref. #44)	1
44		Handle	1
45	55-5860	Spring	1
46	55-5910	Carrier	1
47	55-5700	Fan Wheel	1
48	55-5720	Screw — Hex Head	7
49	55-5760	Adjusting Lever	1
50	55-5790	Star Washer	1

Ref. No.	Part No.	Description	No. Used
51	55-5770	Nut	1
52	55-5730	Capscrew	4
53	55-6700	Plug	2
54	55-5060	Screw — Hex Head	4
55	55-5170	Ball Bearing	1
56	55-5040	Gasket Ring	1
57	55-5030	Screw — Hex Head	1
58	55-5090	Oil Seal	1
*	55-5810	Recoil Starter Assembly	1

*Not Illustrated

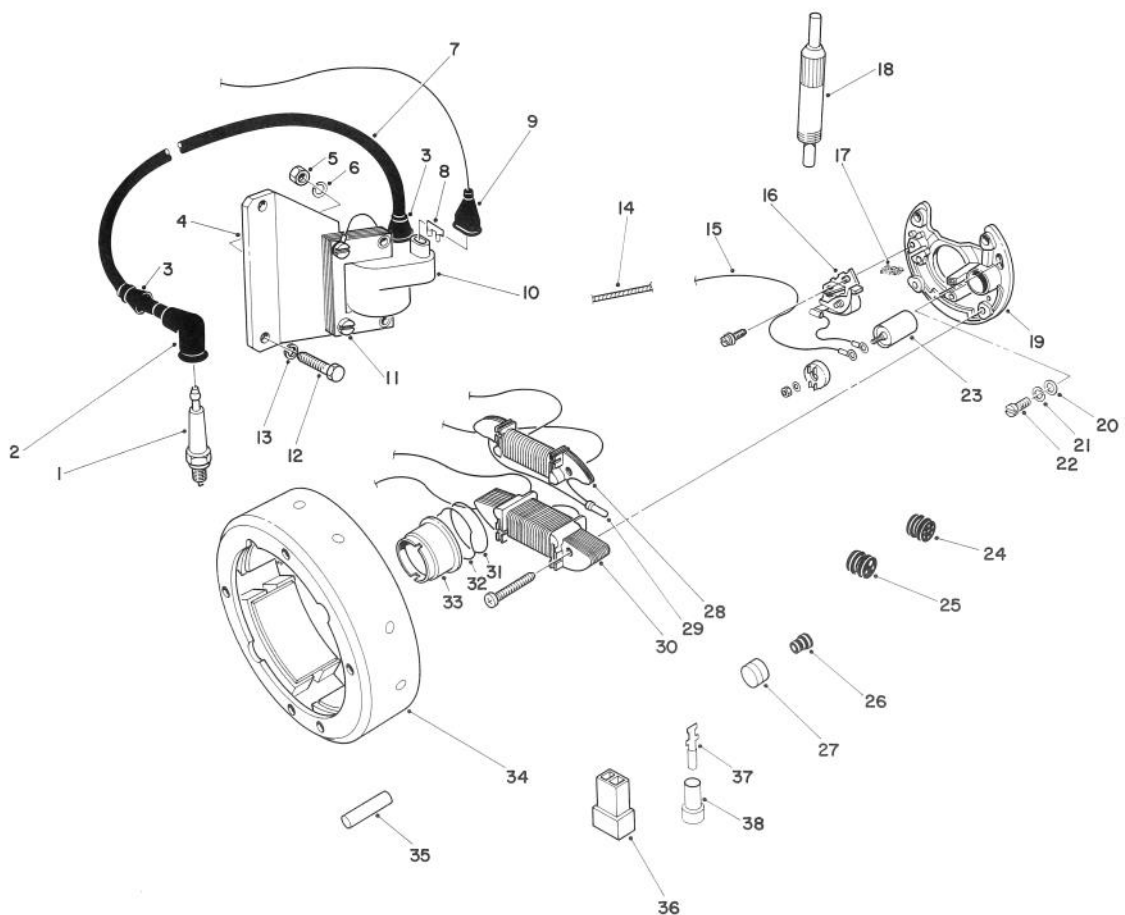


MAGNETIC FLYWHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	55-6430	Spark Plug	1
2	55-6420	Spark Plug Cap	1
3	55-6230	Rubber Socket	1
4	55-6620	Bracket	1
5	55-6630	Nut	2
6	55-6290	Lock Washer	2
7	55-6220	Ignition Cable	1
8	55-6590	Spade Connector	1
9	55-6570	Cap	1
10	55-6170	Ignition Coil	1
*	55-6180	Ignition Coil	1
11	55-6350	Socket Cap Screw	2
12	55-6270	Screw — Hex Head	2
13	55-5400	Lockwasher	2
14	55-6610	Spiral Band	1
15	55-6600	Wire	1
16	55-6190	Ignition Points	1
17	55-6310	Lubricating Wick	1
18	55-6490	Timing Gauge	1
19	55-6140	Armature Plate Assembly	1

Ref. No.	Part No.	Description	No. Used
20	55-6360	Washer	3
21	55-6290	Lock Washer	3
22	55-6350	Socket — Capscrew	3
23	55-6200	Condenser	1
24	55-6540	Grommet	1
25	55-6550	Grommet	1
26	55-6380	Grommet	1
27	55-6370	Cap	1
28	55-6530	Generator Coil	1
29	55-6580	Connector	1
30	55-6520	Lighting Coil	1
31	55-6340	Washer	1
32	55-6330	Locking Ring	1
33	55-6320	Cam	1
34	55-6130	Magnetic Flywheel	1
35	55-6560	Sleeve	1
36	55-6650	Amp Connector	1
37	55-6660	Pin	3
38	55-6640	Amp Connector	1
*	55-6120	Flywheel & Magneto Assembly	1


*Not Illustrated

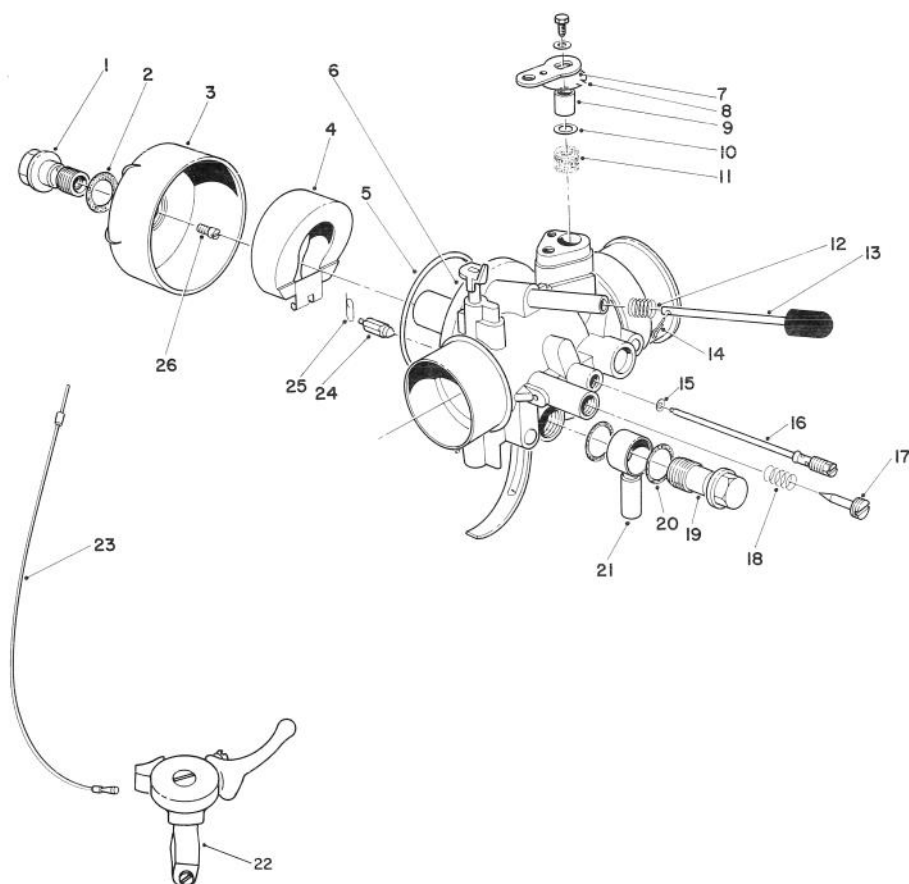

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	55-5600	Jet Holder	1
2	55-5590	Gasket Ring	1
3	55-5960	Float Chamber	1
4	55-5580	Float	1
5	55-5560	Gasket Ring	1
6	55-5470	Carburetor Assy. — Complete	1
7	55-5630	Lever — Butterfly	1
8	55-5540	Hair Pin Spring	1
9	55-5490	Spacer — Tube	1
10	55-5500	Gasket Ring	1
11	55-5510	Packing Sleeve	1
12	55-5670	Spring	1
13	55-5650	Tickler	1

Ref. No.	Part No.	Description	No. Used
14	55-5680	Split Pin	1
15	55-5570	Gasket Ring	1
16	55-5610	Idling Jet	1
17	55-5480	Air Control Screw	1
18	55-5660	Spring	1
19	55-5520	Screw — Female	1
20	55-5530	Gasket Ring	1
21	55-5690	Banjo Connection	1
22	55-6050	Lever — Gas	1
23	55-6060	Bowden Cable	1
24	55-5550	Float Needle	1
25	55-5640	Clamping Spring	1
26	55-5620	Main Jet	1

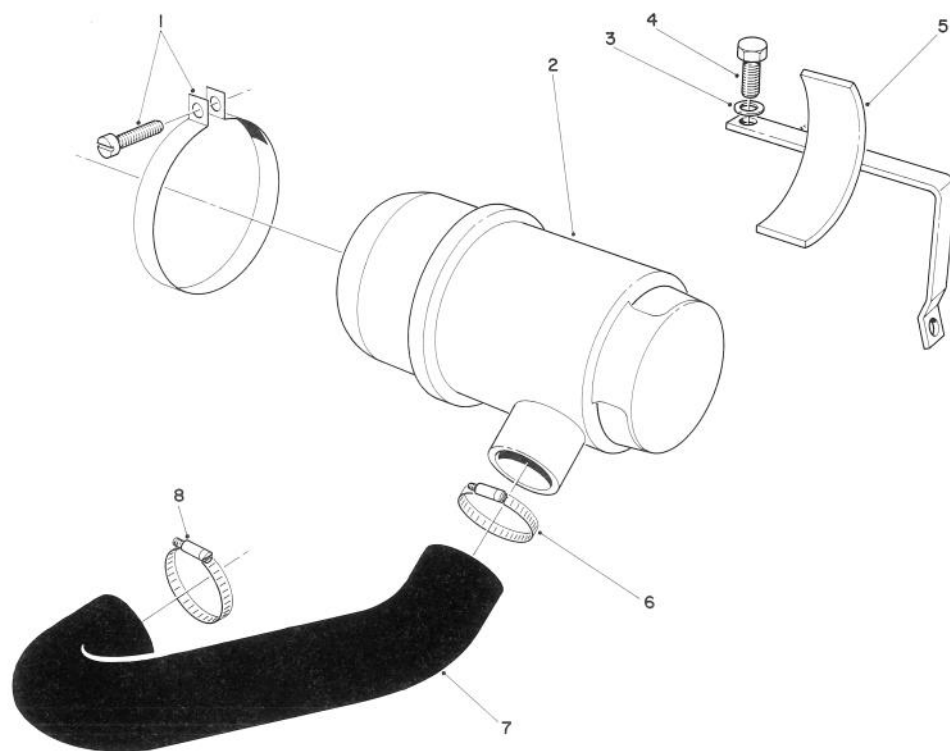


AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	55-5980	Tension Clamp	1
2	55-6030	Oil Bath Air Filter	1
3	55-5070	Lockwasher	2
4	55-6020	Screw — Hex Head	2
5	55-5970	Support	1
6	55-6000	Clamp — Tension	1

Ref. No.	Part No.	Description	No. Used
7	55-6040	Hose	1
8	55-6010	Clamp — Tension	1
*	55-6670	Filter Cartridge	1
*	55-6680	Gasket	1
*	55-6690	Oil Pan	1

*Not Illustrated

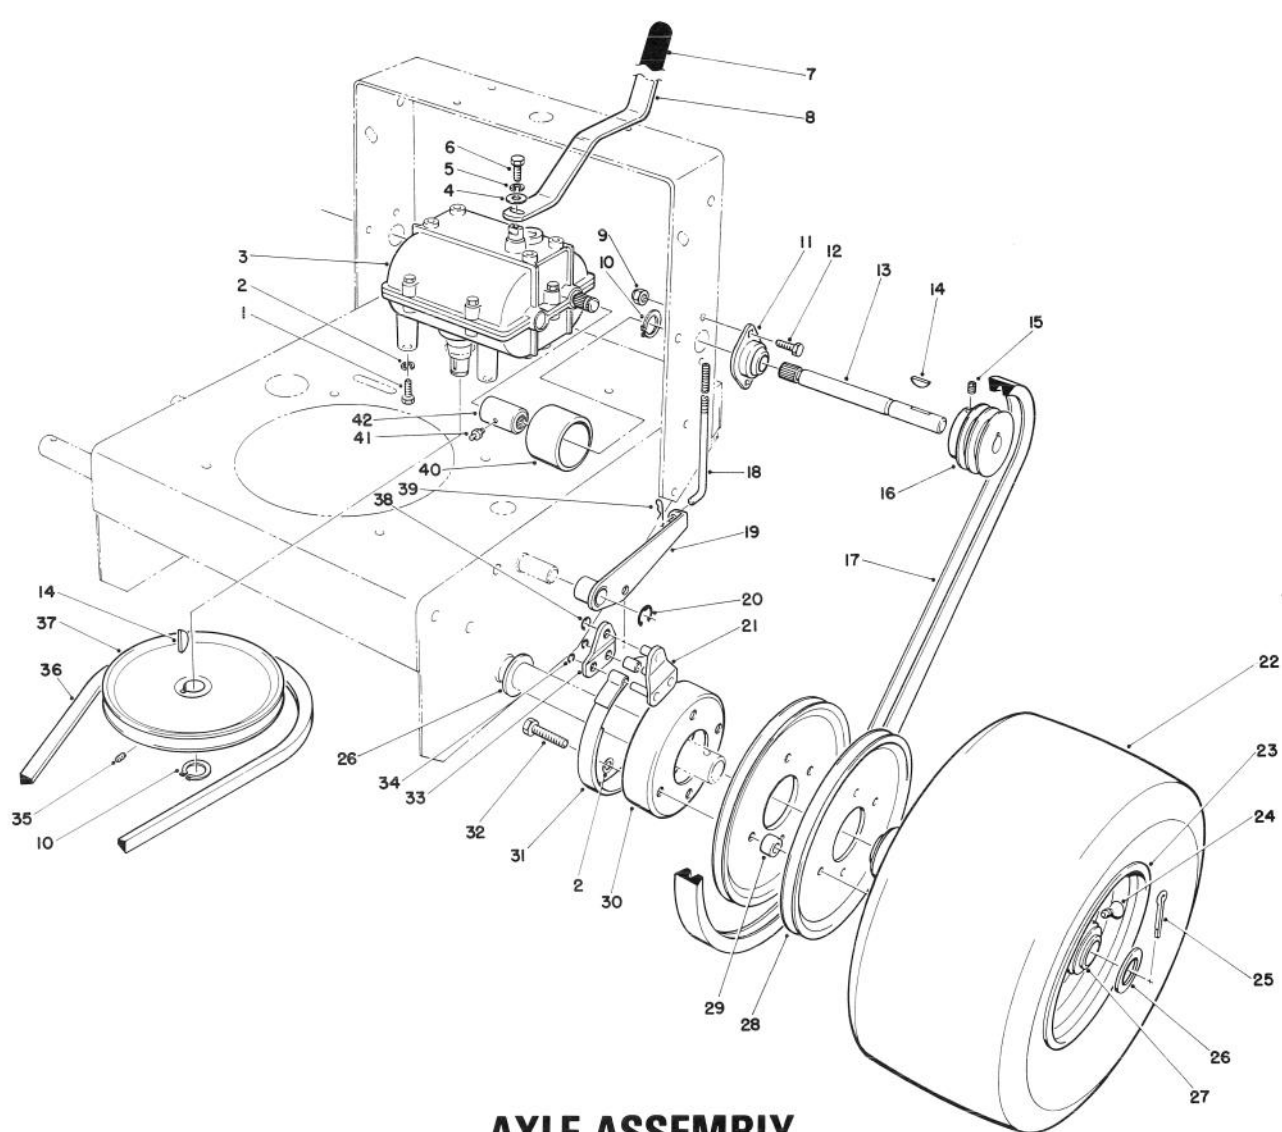


AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322-2	Capscrew	4
2	3253-4	Washer — Lock	12
3	51-4090	Transmission	1
4	7-5461	Spacer	1
5	3253-3	Washer — Lock	1
6	329-4	Screw — Cap Hex Head	1
7	47-1970	Grip — Engagement	1
8	51-4150	Lever — Shift	1
9	3296-42	Nut — Lock	4
10	32120-64	Retaining Ring	3
11	51-4270	Bearing — Shaft Extension	2
12	321-4	Capscrew — Hex Head	4
13	51-4240	Shaft — Extension R.H.	1
*	51-4250	Shaft — Extension L.H.	1
14	3257-5	Woodruff Key	2
15	3246-6	Screw — Set Socket Head	2
16	51-4280	Pulley Drive	2
17	51-4290	Belt — Drive	2
18	51-4580	Rod — Brake	2
19	51-4610	Brake Arm L.H.	1
*	51-4600	Brake Arm R.H.	1
20	32151-40	Retaining Ring	2

Ref. No.	Part No.	Description	No. Used
21	51-4650	Brake Link	2
22	231-111	Tire	2
23	242-73	Rim	2
24	232-27	Valve Stem	2
25	3272-30	Cotter Pin	2
26	51-4230	Washer — Wheel	4
27	251-299	Bearing	2
28	51-4160	Pulley — Wheel	4
29	51-4170	Spacer — Pulley	8
30	51-4180	Drum — Brake	2
31	51-4700	Brake Band Assembly	2
32	322-7	Screw — Cap Hex Head	8
33	51-4660	Plate — Link, Brake	2
34	32151-72	Retaining Ring	4
35	3245-1	Screw — Set Socket Head	1
36	26-9670	Belt — Traction	1
37	51-4190	Pulley — Driven	1
38	32151-56	Retaining Ring	2
39	3290-307	Hairpin — Cotter	2
40	51-4220	Guard — Coupler	2
41	302-58	Fitting — Grease	2
42	51-4260	Coupler	2


*Not Illustrated

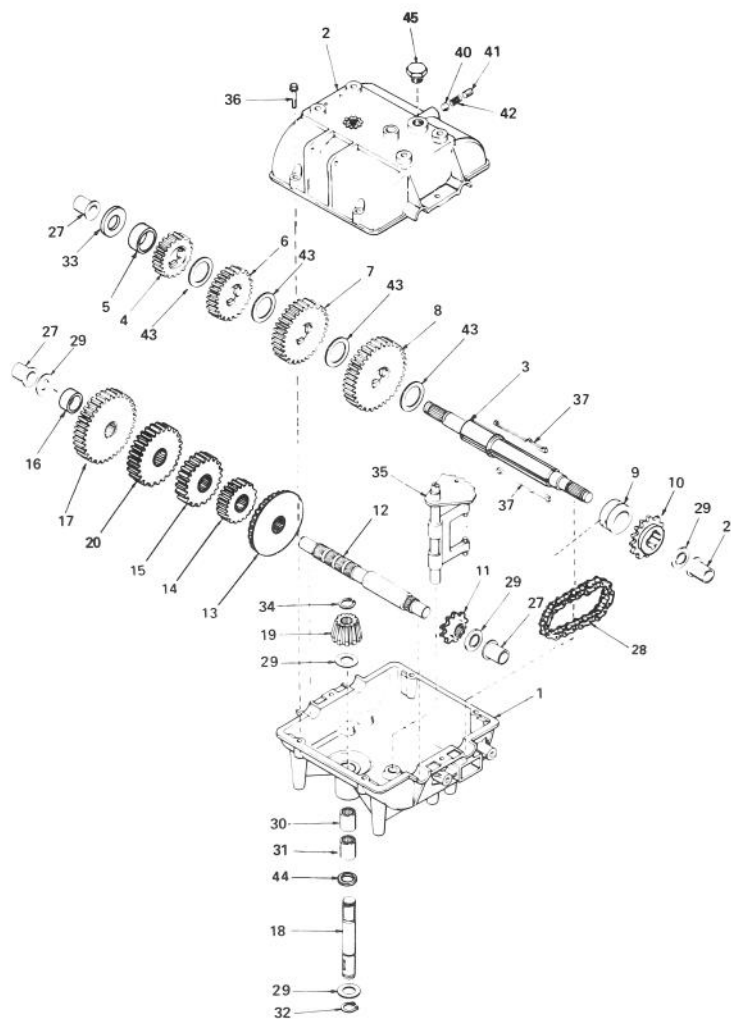

PEERLESS TRANSMISSION MODEL NO. 787

Ref. No.	Part No.	Description	No. Used
1	770061	Case — Transmission	1
2	772083	Cover — Transmission	1
3	776217	Shaft — Output & Brake	1
4	778123A	Gear — Spur (25 teeth)	1
5	786072	Spacer (1 1/8" O.D. x 1 1/8" I.D. x 3/8" thick)	1
6	778124A	Gear — Spur (30 teeth)	1
7	778125	Gear — Spur (35 teeth)	1
8	778146A	Gear — Spur (37 teeth)	1
9	784266	Collar — Shift	1
10	786083	Sprocket (18 teeth)	1
11	786082	Sprocket (9 teeth)	1
12	776134	Shaft — Counter	1
13	778154	Gear — Bevel (42 teeth)	1
14	778145	Gear — Spur (12 teeth)	1
15	778151	Gear — Spur (15 teeth)	1
16	786071	Spacer (1 1/8" O.D. x 3/4" I.D. x 3/8" thick)	1
17	778127A	Gear — Spur (25 teeth)	1
18	776135	Shaft — Input	1


Ref. No.	Part No.	Description	No. Used
19	778153	Bevel Pinion — Input	1
20	778126A	Gear — Spur (20 teeth)	1
27	780105A	Bushing — Flanged	1
28	786081	Chain — Roller (No. 41 chain, 24 links)	1
29	780072	Race — Thrust	1
30	780086	Bearing — Needle	1
31	780142	Bearing — Needle	1
32	792035	Ring — Retaining	1
33	780139	Washer	1
34	788040	Ring — Retaining	1
35	784267	Rod & Fork Assembly — Shift	1
36	792073	Screw — Hex Head	1
37	792089A	Key	1
40	792077	Ball — Steel, 5/16"	1
41	792078	Screw — Set	1
42	792079	Spring	1
43	780108	Washer — Thrust	1
44	792001	"O" Ring	1
45	792074	Plug	1

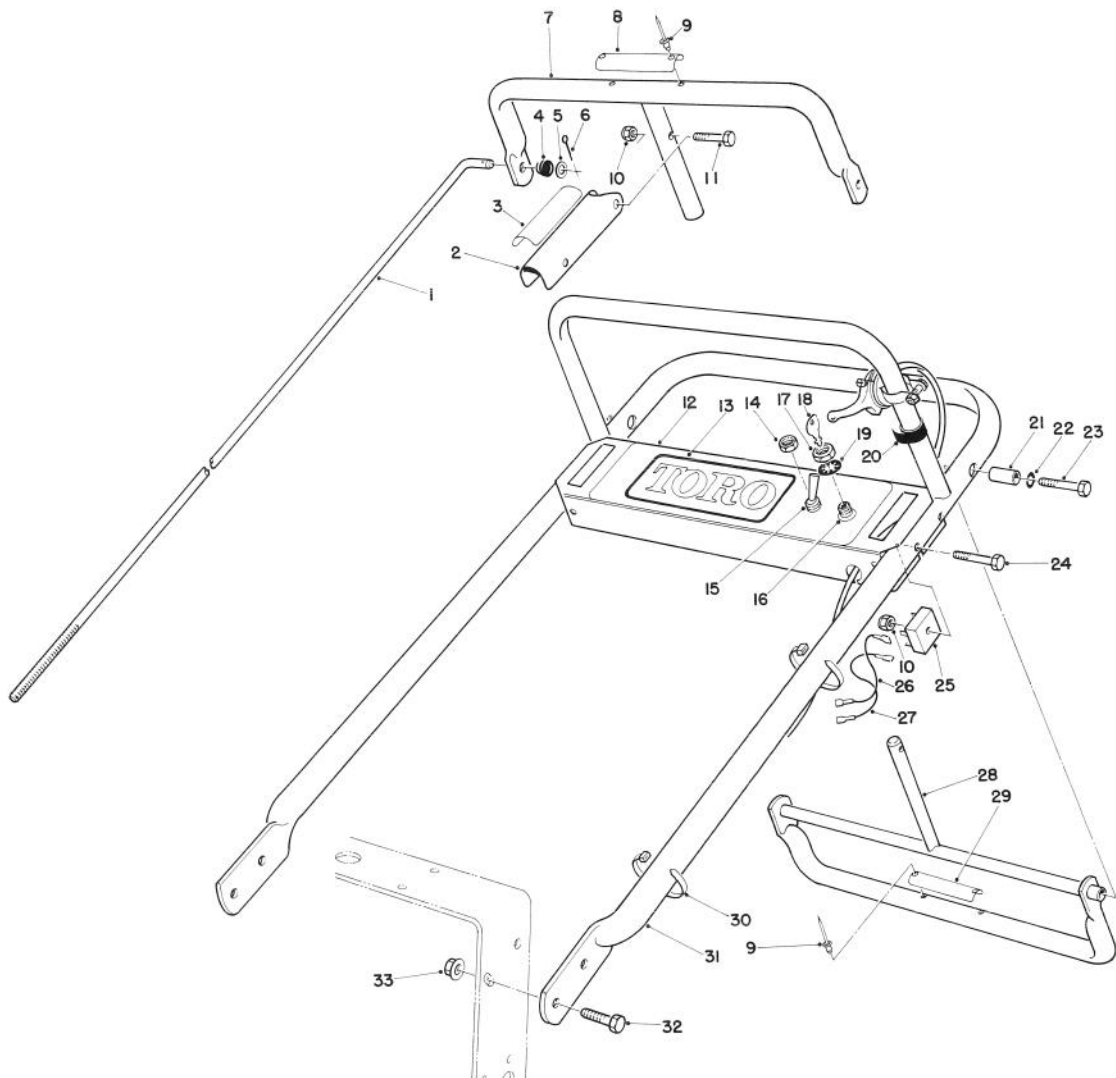

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	54-3070	Rod — Control	2
2	51-4850	Lever — Parking Brake	1
3	52-2010	Decal — Parking Brake	1
4	237-141	Rubber Grommet	2
5	3256-23	Washer — Plain, Flat	2
6	3272-4	Cotter Pin	2
7	51-4730	Control Bar	1
8	54-2740	Decal — Control Bar	1
9	3290-54	Pop Rivet	4
10	3296-2	Nut — Lock	5
11	32105-1	Screw — Machine, Hex Head	1
12	54-2860	Panel — Control	1
13	54-2780	Decal — JLO Panel	1
14	218-500	Nut	1
15	37-2610	Switch (Clutch)	1
16	29-5560	On-Off Switch	1
17	218-461	Nut — Hex	1


Ref. No.	Part No.	Description	No. Used
18	218-412	Key	2
19	3254-5	Lockwasher	1
20	54-3280	Shim — Throttle Control	1
21	51-4790	Spacer — Pivot	2
22	3253-21	Washer — Lock	2
23	323-10	Screw — Cap Hex Head	2
24	32105-14	Screw — Machine Hex Head	4
25	37-7600	Bridge Rectifier	1
26	54-3010	Wire Harness	1
27	54-7930	Wire Assembly (Bridge Rectifier to Clutch Switch)	1
28	51-4760	Control Pivot	1
29	52-2120	Decal — Reverse Handle	1
30	3290-379	Cable Tie	2
31	51-4550	Upper Handle	1
32	3234-11	Screw — Cap Hex Head	4
33	32128-21	Nut — Hex Flange	4

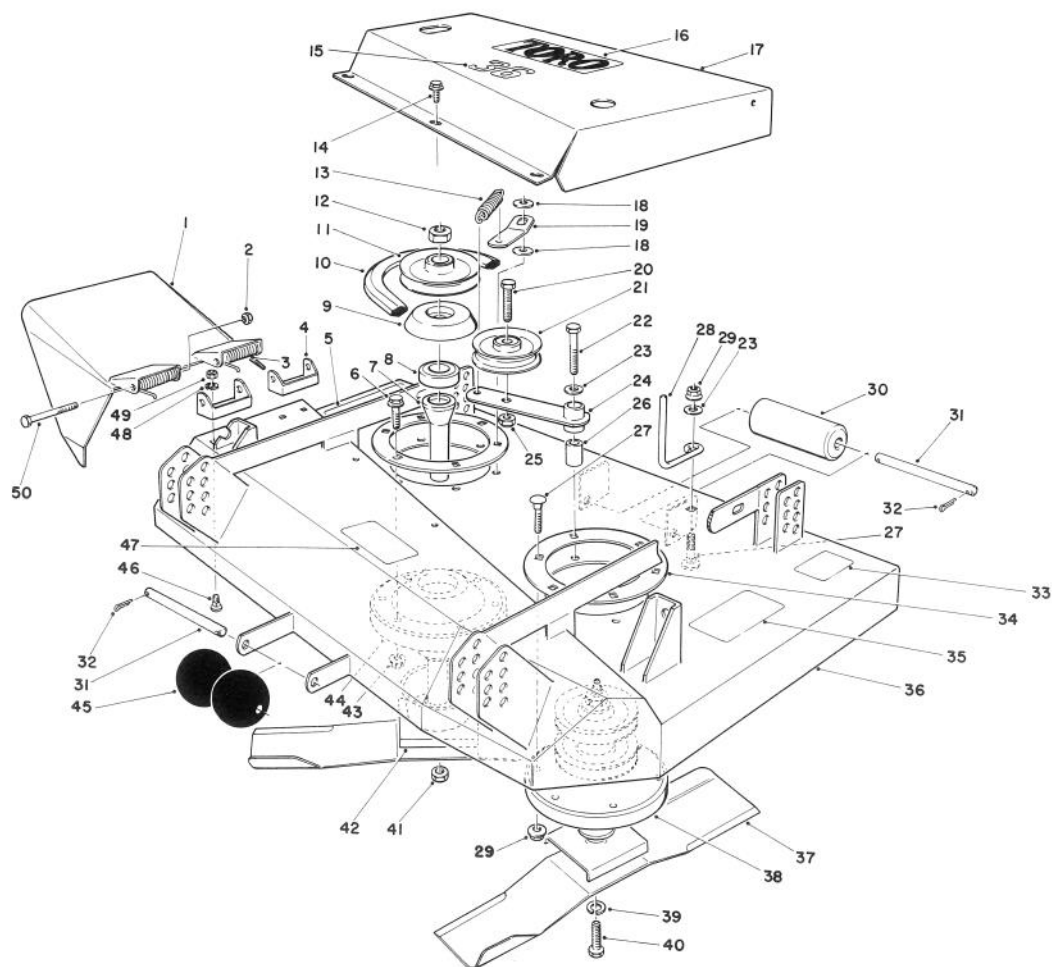

36" CUTTING DECK MODEL NO. 30136

Ref. No.	Part No.	Description	No. Used
1	51-3670	Deflector — Grass	1
2	3296-5	Locknut	2
3	40-6230	Spring — Torsion	2
4	29-5590	Pivot Bracket — Deflector	2
5	26-7980	Decal — Caution	1
6	3234-17	Screw — Hex Head Flange	6
7	40-6320	Spacer — with Grease Shield	1
8	40-6340	Bearing	1
9	39-7690	Dust Cover	1
10	51-3530	Belt — Deck Drive	1
11	51-3520	Pulley	1
12	32146-19	Nut — Lock	1
13	51-3650	Spring — Idler	1
14	46-8560	Screw — Self Tapping	6
15	51-3730	Decal — 36"	1
16	43-5120	Decal — Toro	1
17	51-3690	Cover — Deck	1
18	3256-2	Washer	2
19	51-3880	Plate — Spring Support	1
20	3211-5	Capscrew — Hex Head	1
21	51-3660	Idler — Flat	1
22	323-11	Capscrew — Hex Head	1
23	3256-24	Washer — Flat	4
24	51-3610	Idler Arm	1
25	3296-5	Locknut	1


Ref. No.	Part No.	Description	No. Used
26	51-3640	Sleeve — Pivot Idler	1
27	3231-22	Carriage Bolt	7
28	52-4780	Rod — Belt	2
29	32128-21	Locknut — Flange	8
30	36-1740	Roller — Deck	1
31	40-6400	Shaft — Roller	2
32	3272-11	Cotter Pin	4
33	42-6860	Decal — Height of Cut	1
34	27-7680	Ring Deck Support	2
35	26-7970	Decal — Caution	1
36	51-3310	Deck	1
37	40-3760	Blade	2
38	54-7780	Spindle Assembly Drive	1
39	3253-23	Lockwasher	1
40	51-4060	Screw — Blade Bolt	1
41	32146-19	Nut — Lock	1
42	40-6310	Shaft & Saddle	1
43	32128-20	Nut — Flange	6
44	51-3510	Spindle Assembly — Front	1
45	29-4820	Roller — Deck	2
46	3230-20	Carriage Bolt	4
47	26-7960	Decal — Caution	1
48	3253-4	Lockwasher	4
49	3217-6	Hex — Nut	4
50	3211-15	Capscrew	2

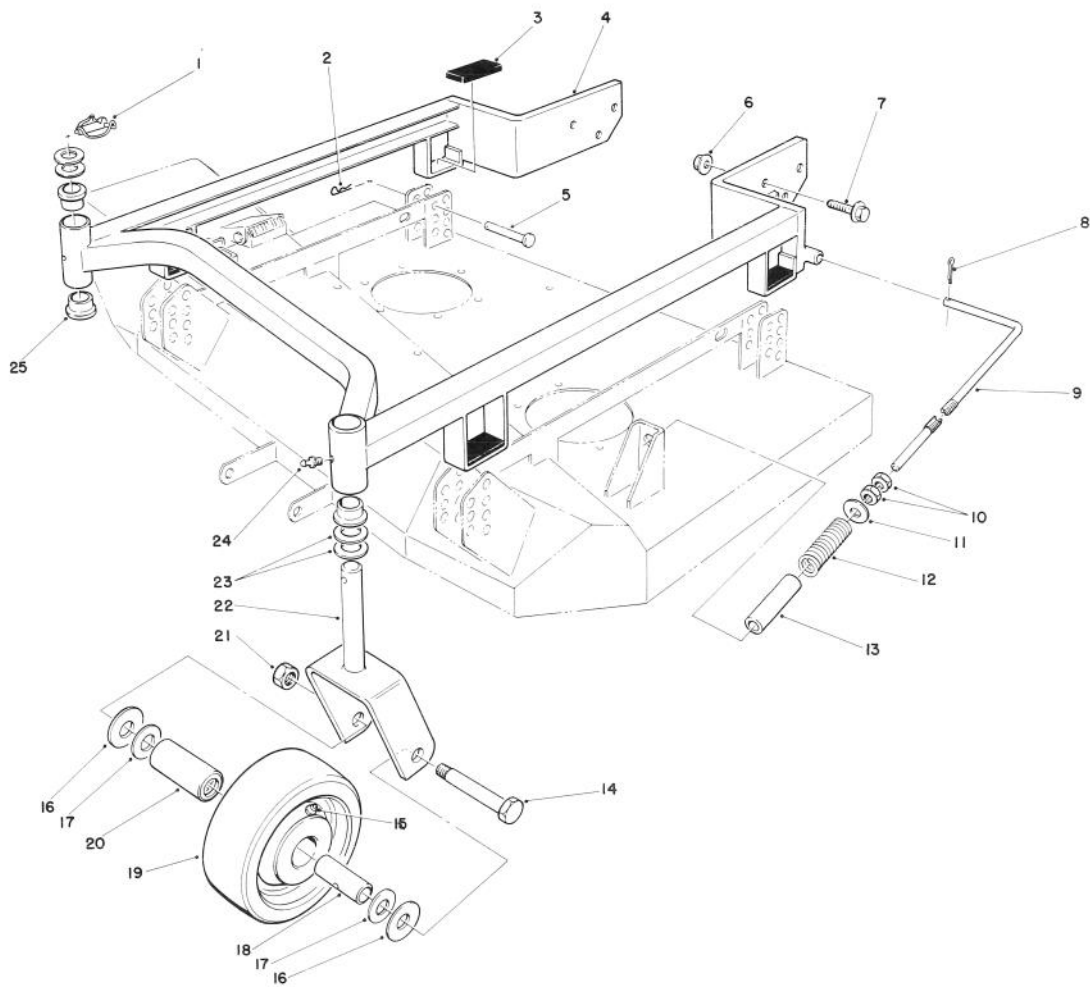

36" CARRIER FRAME MODEL NO. 30136


Ref. No.	Part No.	Description	No. Used
1	3290-384	Lynch Pin	2
2	3290-355	Pin — Hair	4
3	51-3720	Cushion — Rubber	4
4	51-3740	Frame — Carrier (Incl. Ref. #25)	1
5	283-55	Pin — Clevis	1
6	32128-27	Locknut — Flange	6
7	3234-6	Screw — Hex Flange	6
8	3272-7	Pin — Cotter	2
9	51-3490	Shaft — Adjusting	2
10	3218-5	Nut — Jam	4
11	51-3500	Washer	2
12	47-0960	Spring — Compression	2

Ref. No.	Part No.	Description	No. Used
13	51-3480	Sleeve — Tube	2
14	323-38	Screw — Cap Hex Head	2
15	302-55	Grease Fitting	2
16	27-1170	Thrust Washer	4
17	27-1180	Bearing Retainer	4
18	27-1200	Spanner Bushing	2
19	27-1190	Wheel	2
20	27-1210	Roller Bearing	2
21	32146-20	Locknut	2
22	40-0370	Castor Fork — Front	2
23	3-6781	Washer — Thrust	8
24	302-5	Fitting — Grease	2
25	28-9290	Bushing — Special	4

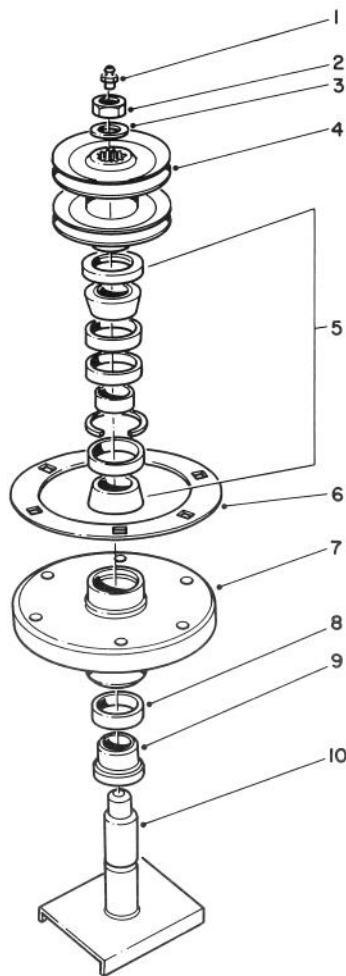

DRIVE SPINDLE NO. 54-7780
(Cutting Units Model No. 30136 & 30152)


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	302-2	Fitting — Grease	1	6	27-7680	Ring — Deck Support	1
2	32146-20	Nut — Hex Jam	1	7	27-0880	Spindle Housing	1
3	7-4150	Washer	1	8	253-139	Seal — Wave	2
4	54-2980	Pulley Assembly	1	9	27-0950	Spacer — Spindle Bearing	1
5	46-8530	Bearing Assembly	1	10	51-3550	Spindle Shaft	1

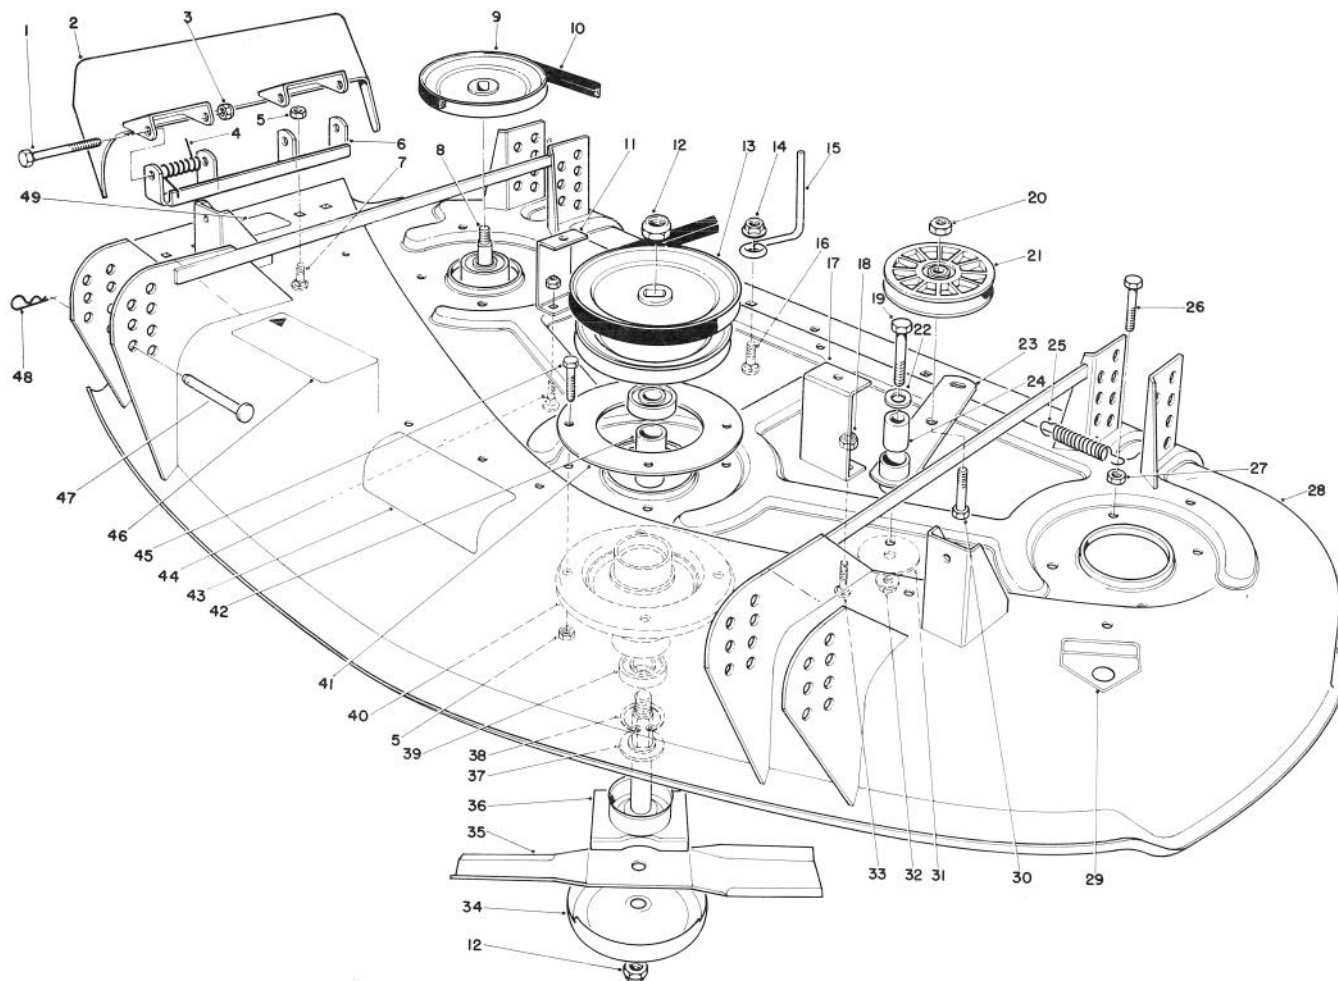

44" CUTTING DECK MODEL NO. 30144

Ref. No.	Part No.	Description	No. Used
1	3211-15	Screw — Cap Hex Head	2
2	54-2660	Grass Deflector	1
3	3296-5	Nut — Lock	2
4	40-6230	Spring — Torsion	2
5	32152-1	Nut — Lock	16
6	55-8320	Bracket — Pivot	1
7	3230-20	Bolt — Carriage	4
8	47-0091	Spindle Shaft	2
9	54-2370	Pulley — Spindle	2
10	27-1160	Belt — Deck Drive	1
11	54-3230	Cover — Bracket R.H.	1
12	17-0980	Nut — Special	6
13	54-2890	Pulley	1
14	32128-13	Nut — Lock	2
15	52-4780	Rod — Belt	2
16	3230-2	Bolt — Carriage	2
17	54-3240	Cover Bracket	1
18	3296-42	Nut — Lock	4
19	323-10	Capscrew — Hex Head	1
20	3296-5	Nut — Lock	1
21	52-4580	Pulley — Idler	1
22	3256-24	Washer	1
23	54-2710	Idler Arm	1
24	51-3640	Sleeve — Idler Pivot	1
25	54-2730	Spring — Extension	1


Ref. No.	Part No.	Description	No. Used
26	322-6	Screw — Cap Hex Head	1
27	3218-2	Nut — Hex Jam	1
28	54-2900	Housing	1
29	43-8480	Decal — Danger	1
30	3211-8	Capscrew — Hex Head	1
31	20-9530	Washer	1
32	32128-21	Nut — Lock, Flange	1
33	3229-3	Bolt — Carriage	2
34	7-3522	Anti-Scalp Cup	3
35	54-0010	Blade	3
36	47-0092	Spindle — Shaft	1
37	47-0100	Spacer — Spindle	3
38	32120-11	Retaining Ring — Internal	3
39	251-297	Bearing	6
40	54-0160	Spindle Tube	3
41	55-8280	Support Ring	2
42	54-0210	Spacer — Bearing	3
43	42-6860	Decal — Height of Cut	1
44	3229-1	Bolt — Carriage	2
45	322-4	Screw — Cap Hex Head	11
46	42-6430	Decal — Warning	1
47	283-55	Pin — Clevis	4
48	3290-355	Pin — Hair	4
49	26-7970	Decal — Caution	1

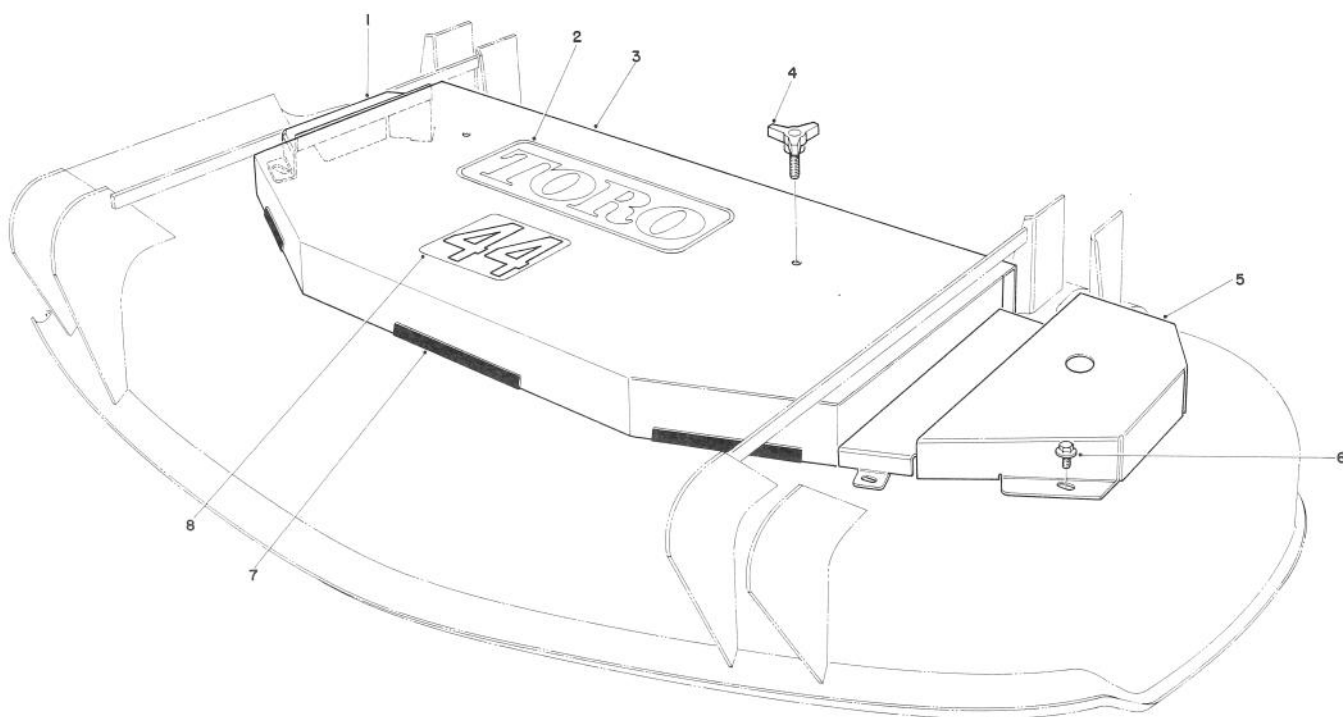

44" CUTTING DECK MODEL NO. 30144

Ref. No.	Part No.	Description	No. Used
1	54-2250	Cover — Deck R.H.	1
2	43-5120	Decal — Toro	1
3	54-3190	Cover — Deck, Center	1
4	27-4571	Adjustment Handle	2


Ref. No.	Part No.	Description	No. Used
5	54-2220	Cover — Deck L.H.	1
6	46-8560	Screw — Self Tapping	5
7	29-0641	Jiffy Trim	5
8	54-2760	Decal — 44"	1

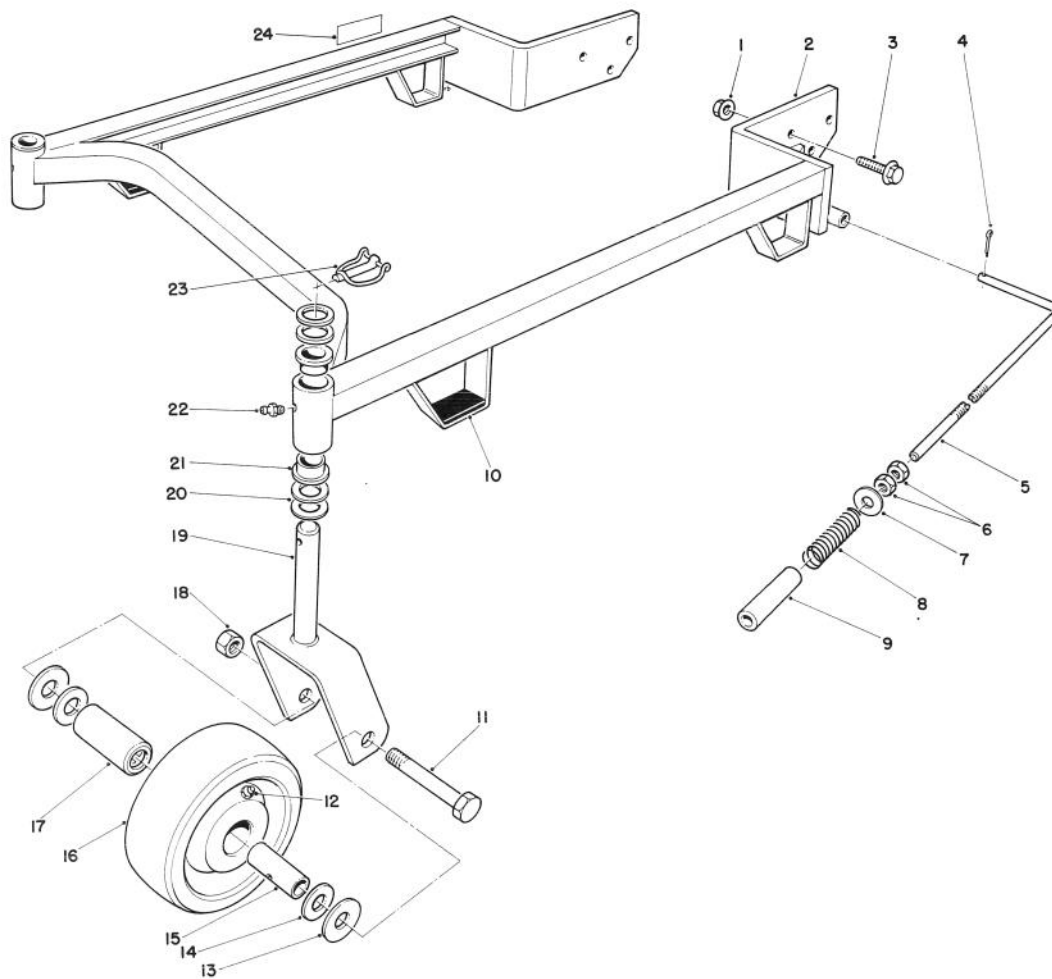

44" CARRIER FRAME MODEL NO. 30144

Ref. No.	Part No.	Description	No. Used
1	32128-27	Nut — Lock	6
2	54-2800	Suspension Frame (Incl. Ref. #21)	1
3	3234-6	Screw — Flange Hex Head	6
4	3272-7	Pin — Cotter	2
5	51-3490	Shaft — Adjusting	2
6	3218-5	Nut — Hex Jam	4
7	51-3500	Washer	2
8	47-0960	Spring — Compression	2
9	51-3480	Sleeve — Tube	2
10	54-2700	Cushion — Rubber	2
11	3216-15	Screw — Cap Hex Head	2
12	302-55	Grease Fitting	2


Ref. No.	Part No.	Description	No. Used
13	27-1170	Thrust Washer	4
14	27-1180	Bearing Retainer	4
15	27-1200	Spanner Bushing	2
16	27-1190	Wheel	2
17	27-1210	Roller Bearing	2
18	32146-20	Nut — Lock	2
19	40-0370	Castor Fork	2
20	3-6781	Washer — Thrust	8
21	28-9290	Bushing — Special	4
22	302-5	Grease Fitting	2
23	3290-384	Pin — Lynch	2
24	26-7980	Decal — Caution	1

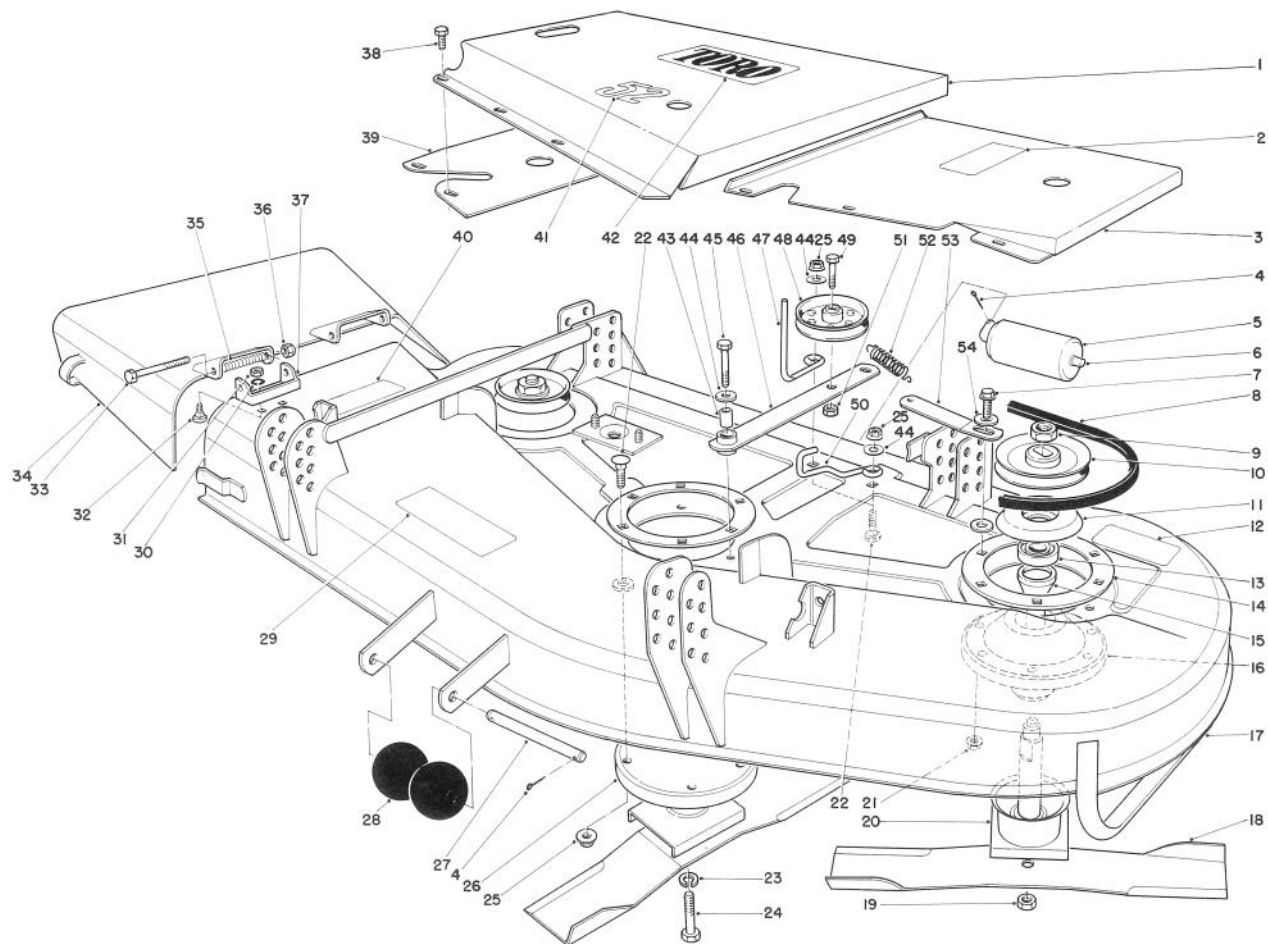

52" CUTTING DECK MODEL NO. 30152

Ref. No.	Part No.	Description	No. Used
1	51-3930	Cover — Center	1
2	42-6860	Decal — Height of Cut	1
3	51-3910	Cover — Left	1
4	3272-11	Pin — Cotter	4
5	36-1740	Roller — Deck	2
6	40-0340	Shaft — Roller	2
7	3234-17	Screw — Hex Flange Head	12
8	27-1160	Belt — Deck Drive	1
9	32146-19	Nut — Lock	2
10	51-3520	Pulley	2
11	39-7690	Cover — Dust	2
12	26-7970	Decal — Caution	1
13	40-6340	Bearing	2
14	27-7680	Ring — Deck Support	3
15	40-6320	Spacer/Grease Shield	2
16	51-3510	Spindle Assembly	2
17	51-3850	Deck Assembly	1
18	40-3760	Blade	3
19	32146-19	Nut — Lock	2
20	40-6310	Shaft & Saddle Assembly	2
21	32128-12	Nut — Flange	12
22	3231-22	Bolt — Carriage	8
23	3253-23	Washer — Lock	1
24	51-4060	Bolt — Blade	1
25	32128-21	Nut — Flange Lock	9
26	54-7780	Drive Spindle Assembly	1
27	40-6400	Shaft — Roller	1


Ref. No.	Part No.	Description	No. Used
28	29-4820	Roller — Deck	2
29	26-7960	Decal — Caution	1
30	3253-4	Washer — Lock	4
31	3217-6	Nut — Lock	4
32	3230-20	Bolt — Carriage	4
33	3211-15	Screw — Hex Head	2
34	40-6200	Deflector — Grass	1
35	40-6230	Spring — Torsion	2
36	3296-5	Nut — Lock	2
37	29-5590	Bracket — Pivot	2
38	46-8560	Screw — Self Tapping	13
39	51-3890	Cover — Right	1
40	26-7980	Decal — Caution	1
41	51-3960	Decal — 52	1
42	43-5120	Decal — Toro	1
43	51-3640	Sleeve — Idler Pivot	1
44	3256-24	Washer — Flat	5
45	323-11	Screw — Hex Head	1
46	51-3610	Arm — Idler	1
47	52-4780	Rod — Belt	2
48	52-4580	Pulley — Idler	1
49	3211-8	Screw — Hex Head	1
50	52-4770	Guide — Belt	1
51	3296-5	Nut — Lock	1
52	51-3650	Spring — Idler	1
53	51-3870	Plate — Spring Support	1
54	3256-2	Washer	2

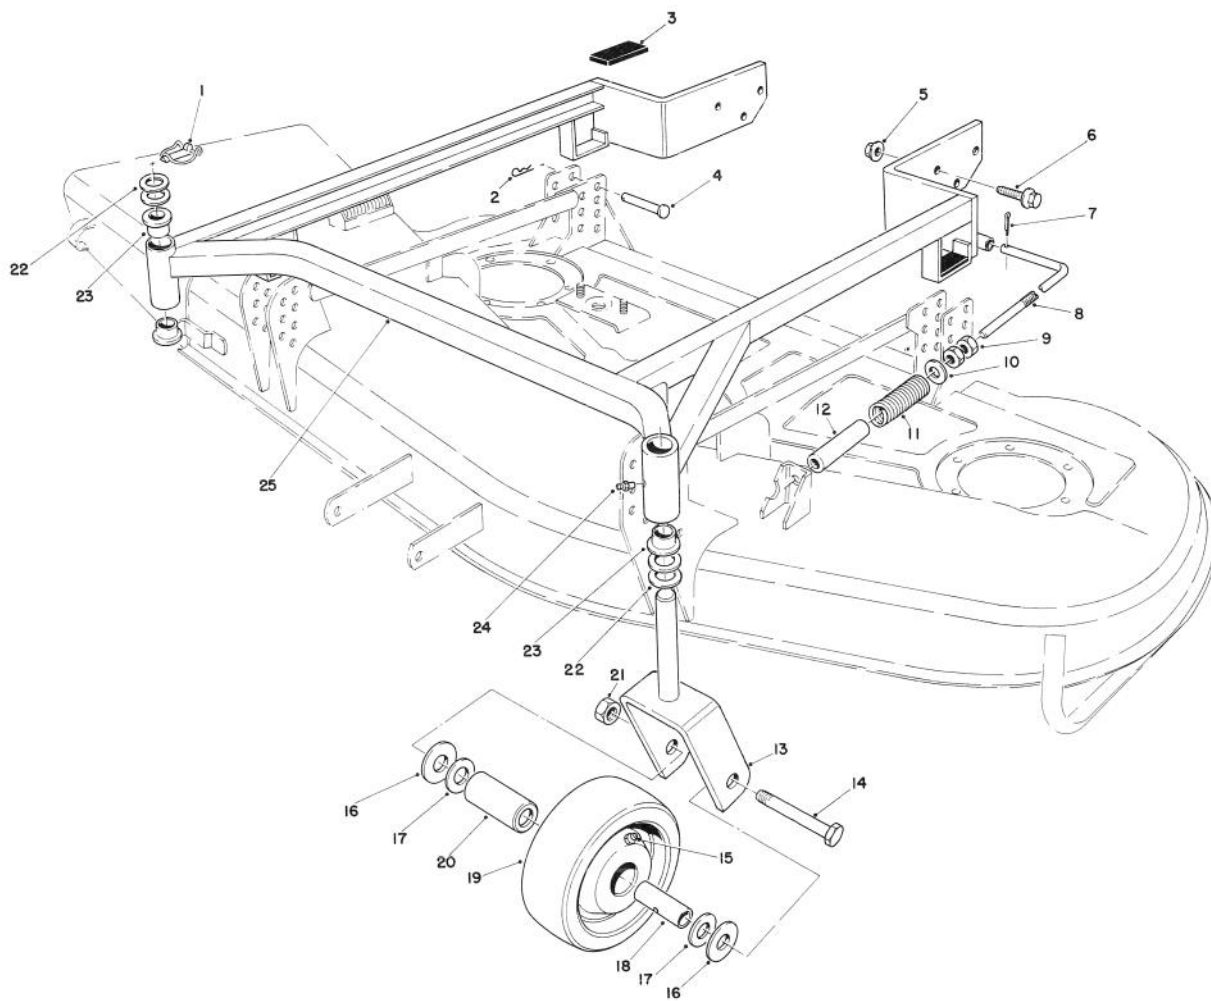

52" CARRIER FRAME MODEL NO. 30152

Ref. No.	Part No.	Description	No. Used
1	3290-384	Pin — Lynch	2
2	3290-355	Pin — Hair	4
3	51-3720	Cushion — Rubber	4
4	283-55	Pin — Clevis	4
5	32128-27	Locknut	6
6	3234-6	Screw — Hex Flange	6
7	3272-7	Pin — Cotter	2
8	51-3490	Shaft — Adjusting	2
9	3218-5	Nut — Jam	4
10	51-3500	Washer	2
11	47-0960	Spring — Compression	2
12	51-3480	Sleeve — Tube	2
13	40-0370	Castor — Fork	2

Ref. No.	Part No.	Description	No. Used
14	323-38	Screw — Cap Hex Head	2
15	302-55	Grease Fitting	2
16	27-1170	Thrust Washer	4
17	27-1180	Bearing Retainer	4
18	27-1200	Spanner Bushing	2
19	27-1190	Wheel	2
20	27-1210	Roller Bearing	2
21	32146-20	Locknut	2
22	3-6781	Washer — Thrust	8
23	28-9290	Bushing — Special	4
24	302-5	Grease Fitting	2
25	51-3970	Frame — Carrier (Incl. Ref. #23)	1

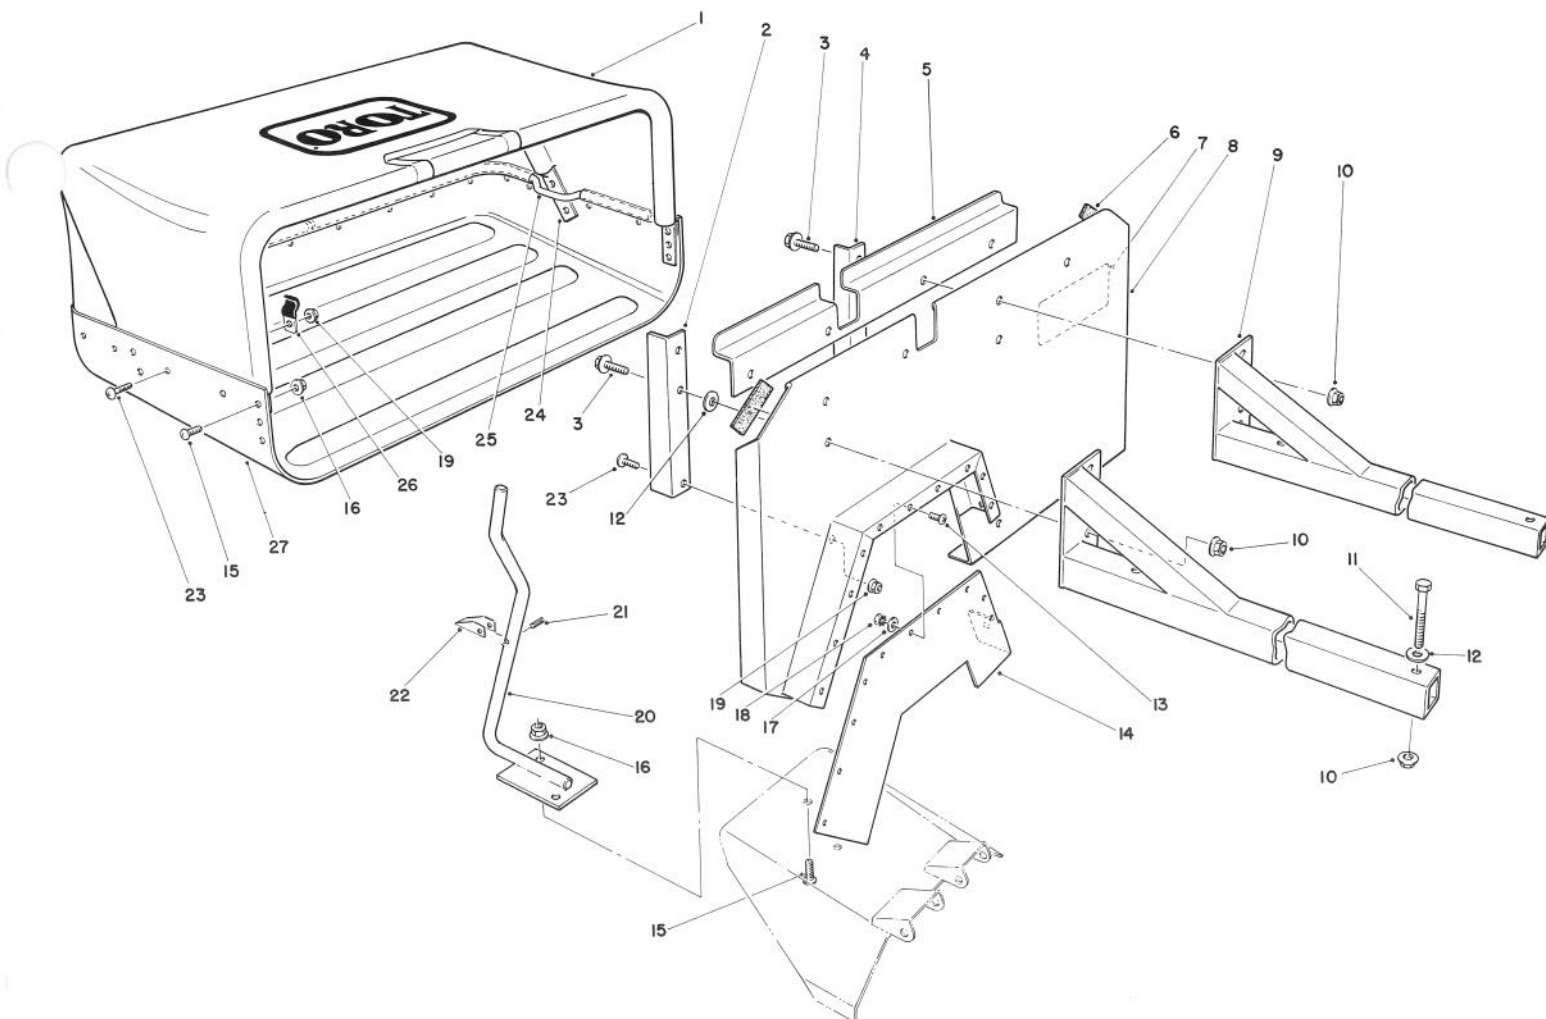

36" SIDE DISCHARGE BAGGING KIT NO. 30125 (Optional)

Ref. No.	Part No.	Description	No. Used
1	52-5280	Bag — Cloth	1
2	52-5310	Support — Panel R.H.	1
3	3234-11	Screw — Hex Flange Head	6
4	52-5320	Support — Panel L.H.	1
5	52-5290	Support — Bag Attachment	1
6	52-5260	Pad — Rubber	2
7	52-5370	Decal — Danger	1
8	52-5220	Back Panel	1
9	52-5170	Beam Mount	2
10	3290-357	Nut — Flange Lock	10
11	323-11	Screw — Hex Head	4
12	3256-4	Washer — Flat	6
13	32104-122	Screw — Machine	11
14	52-5250	Extension — Rubber	1

Ref. No.	Part No.	Description	No. Used
15	32122-14	Screw — Machine	12
16	32128-20	Nut — Flange Lock	12
17	3256-49	Washer — Flat	11
18	32149-7	Nut	11
19	32128-10	Nut — Flange Lock	18
20	52-5340	Rod — Lockup	1
21	32121-16	Pin — Roll	1
22	52-5300	Latch — Lockup	1
23	32122-42	Screw — Machine	18
24	52-5270	Tube — Bag Support	2
25	52-5330	Rod — Cloth	2
26	2412-90	Clip	16
27	52-4620	Tray — Grass Bag	1

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The 110 Commercial Walk Mower has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on the top left rear corner of frame. In any correspondence concerning the 110 Commercial Walk Mower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial number of the 110 Commercial Walk Mower.
2. Part number, description, and quantity of part(s) desired.

Note: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

The Toro Promise

A ONE YEAR LIMITED WARRANTY

The Toro Company promises to repair your TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Commercial Products 1 Year

The costs of parts and labor are included, but the customer pays the transportation costs on walk rotary mowers.

If you feel your TORO product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact your Authorized TORO Distributor or Commercial Dealer (the Yellow Pages of your telephone directory is a good reference source).
2. The TORO Distributor or Commercial Dealer will advise you on the arrangements that can be made to inspect and repair your product.
3. The TORO Distributor or Commercial Dealer will inspect the product and advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without an extra charge to you.

If for any reason you are dissatisfied with the distributor's analysis of the defect or the service performed, you may contact us.

Write:

TORO Commercial Products Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Distributor or Commercial Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This Warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper condition is the responsibility of the owner.

All warranty repairs reimbursable under the Toro Promise must be performed by an Authorized TORO Commercial Dealer or Distributor using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Distributor or Commercial Dealer are not reimbursable under the Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]