



Count on it.

Form No. 3474-837 Rev B

Parts Catalog

Field Pro® 6040

Model No. 08839—Serial No. 417500000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

 
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Front Frame Assembly	4
Caster Wheel Assembly	6
Caster Wheel Assembly No. 133-4723.....	8
Main Frame Assembly.....	10
Wheel Assembly No. 147-6605.....	12
Control Panel Assembly	14
Control Panel Assembly No. 147-3703SP	16
Top Cover Assembly	18
Speed Control and Parking Brake Assembly	20
LH Control Handle Assembly No. 144-4601	22
LH Control Rod Assembly No. 144-4582	24
RH Control Rod Assembly No. 144-4581.....	26
Brake Bellcrank W/Bushing Assembly No. 144-4587.....	28
Hydraulic Tank Assembly	30
Hydraulic Tank Assembly No. 145-7444SP	32
Hydraulic Drive Assembly.....	34
RH Hydraulic Motor Assembly No. 126-8133	36
5 Stud Wheel Hub Kit Assembly No. 135-5333.....	38
LH Hydraulic Motor Assembly No. 126-8134.....	40
LH Hydraulic Motor Assembly No. 144-7595.....	42
RH Hydraulic Pump Assembly No. 144-7320	44
Hydraulic Gear Pump Assembly No. 144-7596.....	46
Hydraulic Control Assembly	48
Oil Cooler Assembly	50
Hydraulic Lift Circuit Plumbing Assembly	52
Hydraulic Cylinder Assembly No. 145-4233	54
Hydraulic Lift Cylinder Assembly No. 115-5647	56
Electrical Assembly	58
Wire Harness Assembly No. 122-4226.....	60
Telematics Gateway Assembly	62
Engine, Belt and Muffler Assembly	64
Tensioner Assembly.....	66
Fuel Tank Assembly.....	68
Fuel Tank Assembly No. 145-7445SP	70
Engine Air Cleaner and Fuel System Assembly	72
Air Cleaner Assembly No. 117-9989.....	74
Rear Frame Assembly.....	76
Rear Attachment Mount Assembly	78
Attachments and Accessories	80


Front Frame Assembly

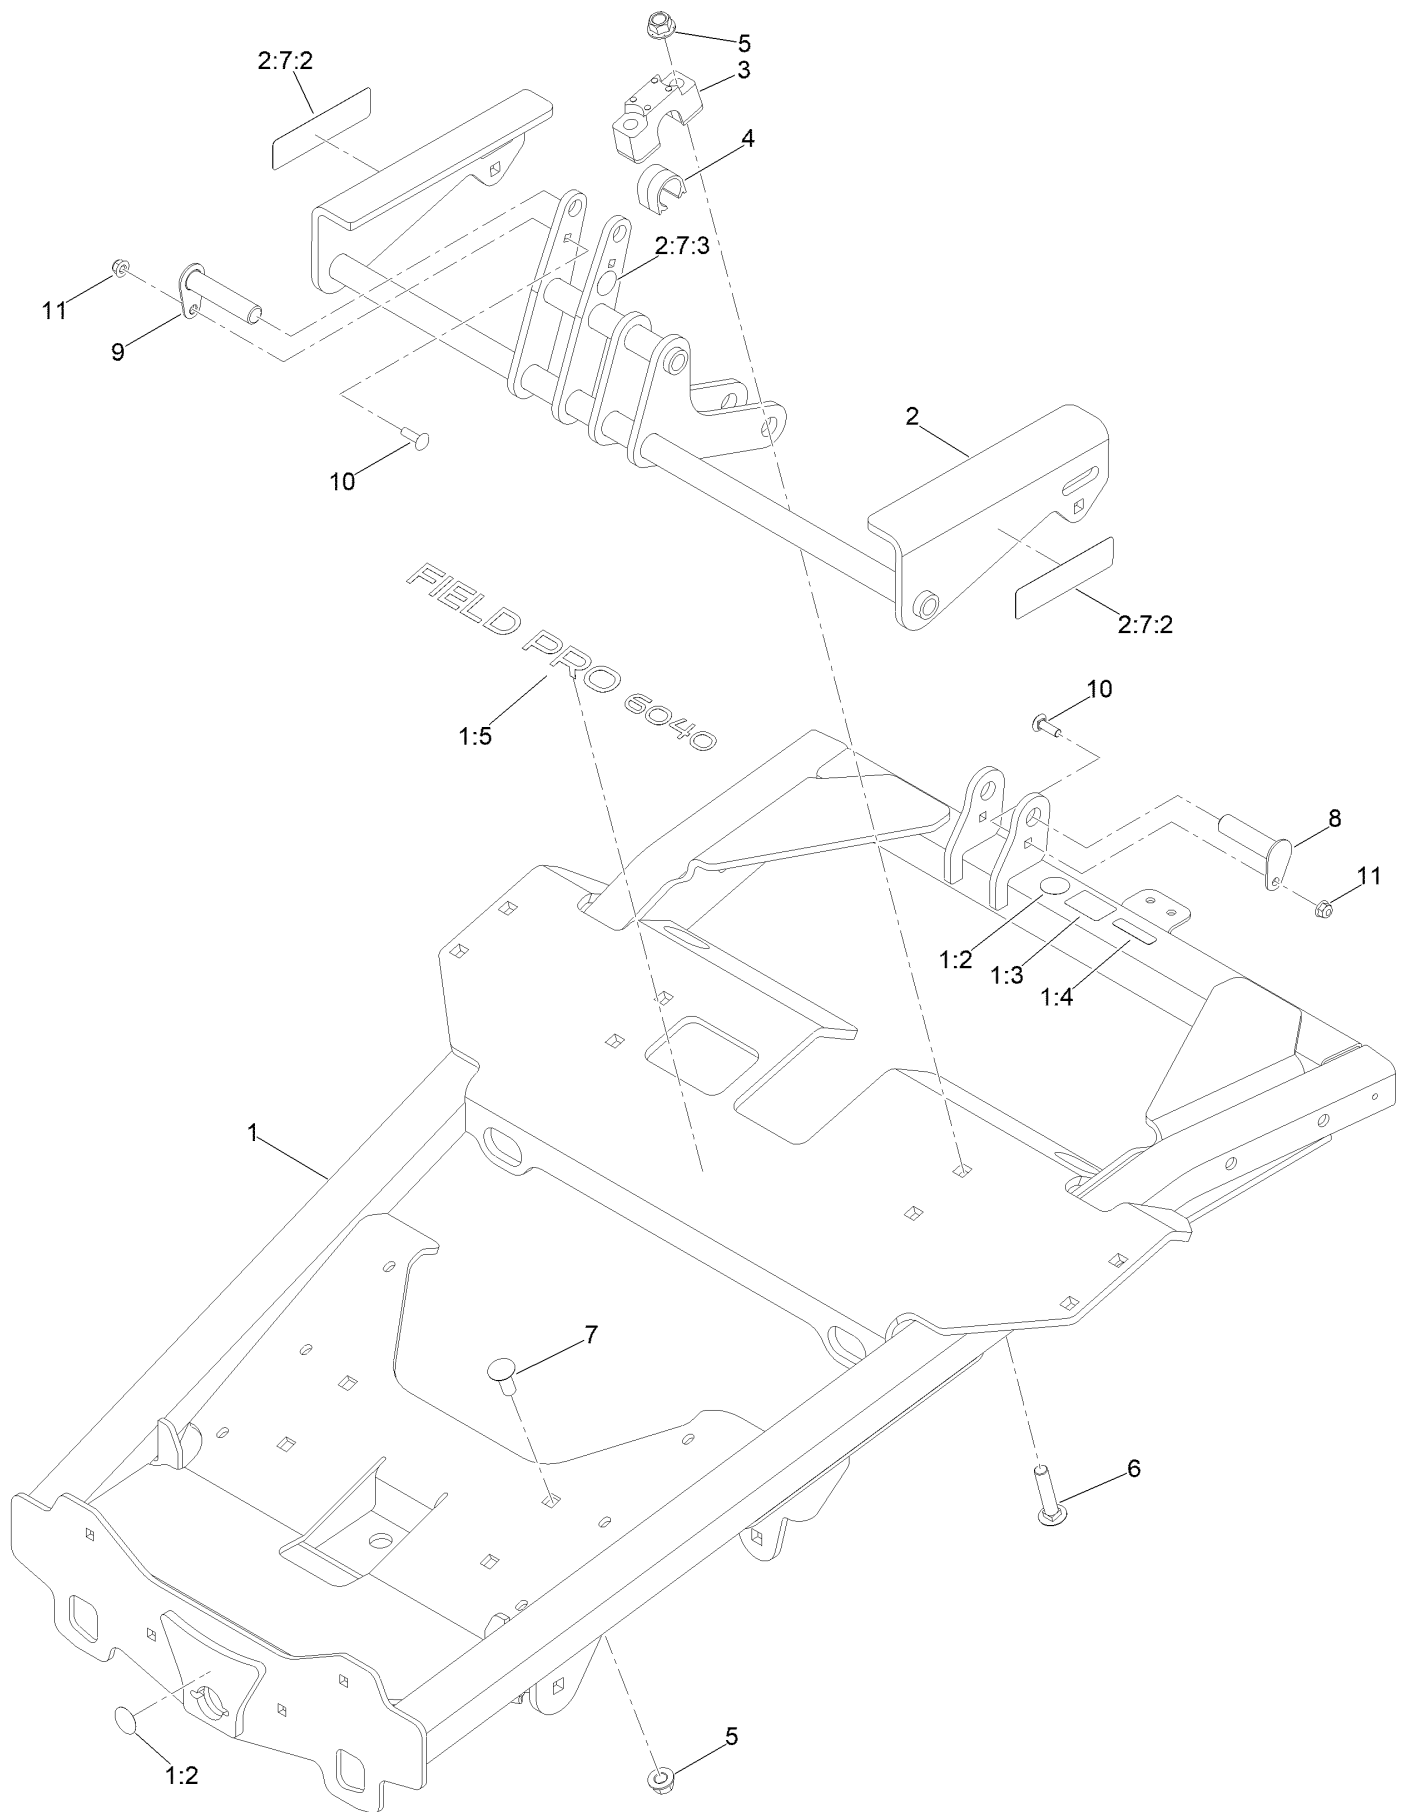

Front Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-1655	1	Front Frame ASM W/Decals	4	109-9410	4	Bearing-Cross Shaft, Front
1:2	58-6520	2	Decal-Grease	5	99-5107	12	Nut-HF Nylock
1:3	106-5517	1	Decal-Warning	6	116-1700	8	Bolt-CARR
1:4	120-9570	1	Decal-Warning	7	3233-26	4	Screw-CARR,Shortneck
1:5	145-7410	1	Decal - Fieldpro 6040	8	140-6323	1	Pin
2	145-7446SP	1	Lift Arm ASM W/Decals	9	147-3617	1	Pin-Mounting
2:7:2	145-1774	2	Decal-Stored Energy Attachment	10	3230-22	2	Screw-CARR
2:7:3	58-6520	1	Decal-Grease	11	104-8300	2	Nut-HF, NI
3	109-9409	4	Support-Bearing, Cross Shaft (Front)				

 
Caster Wheel Assembly

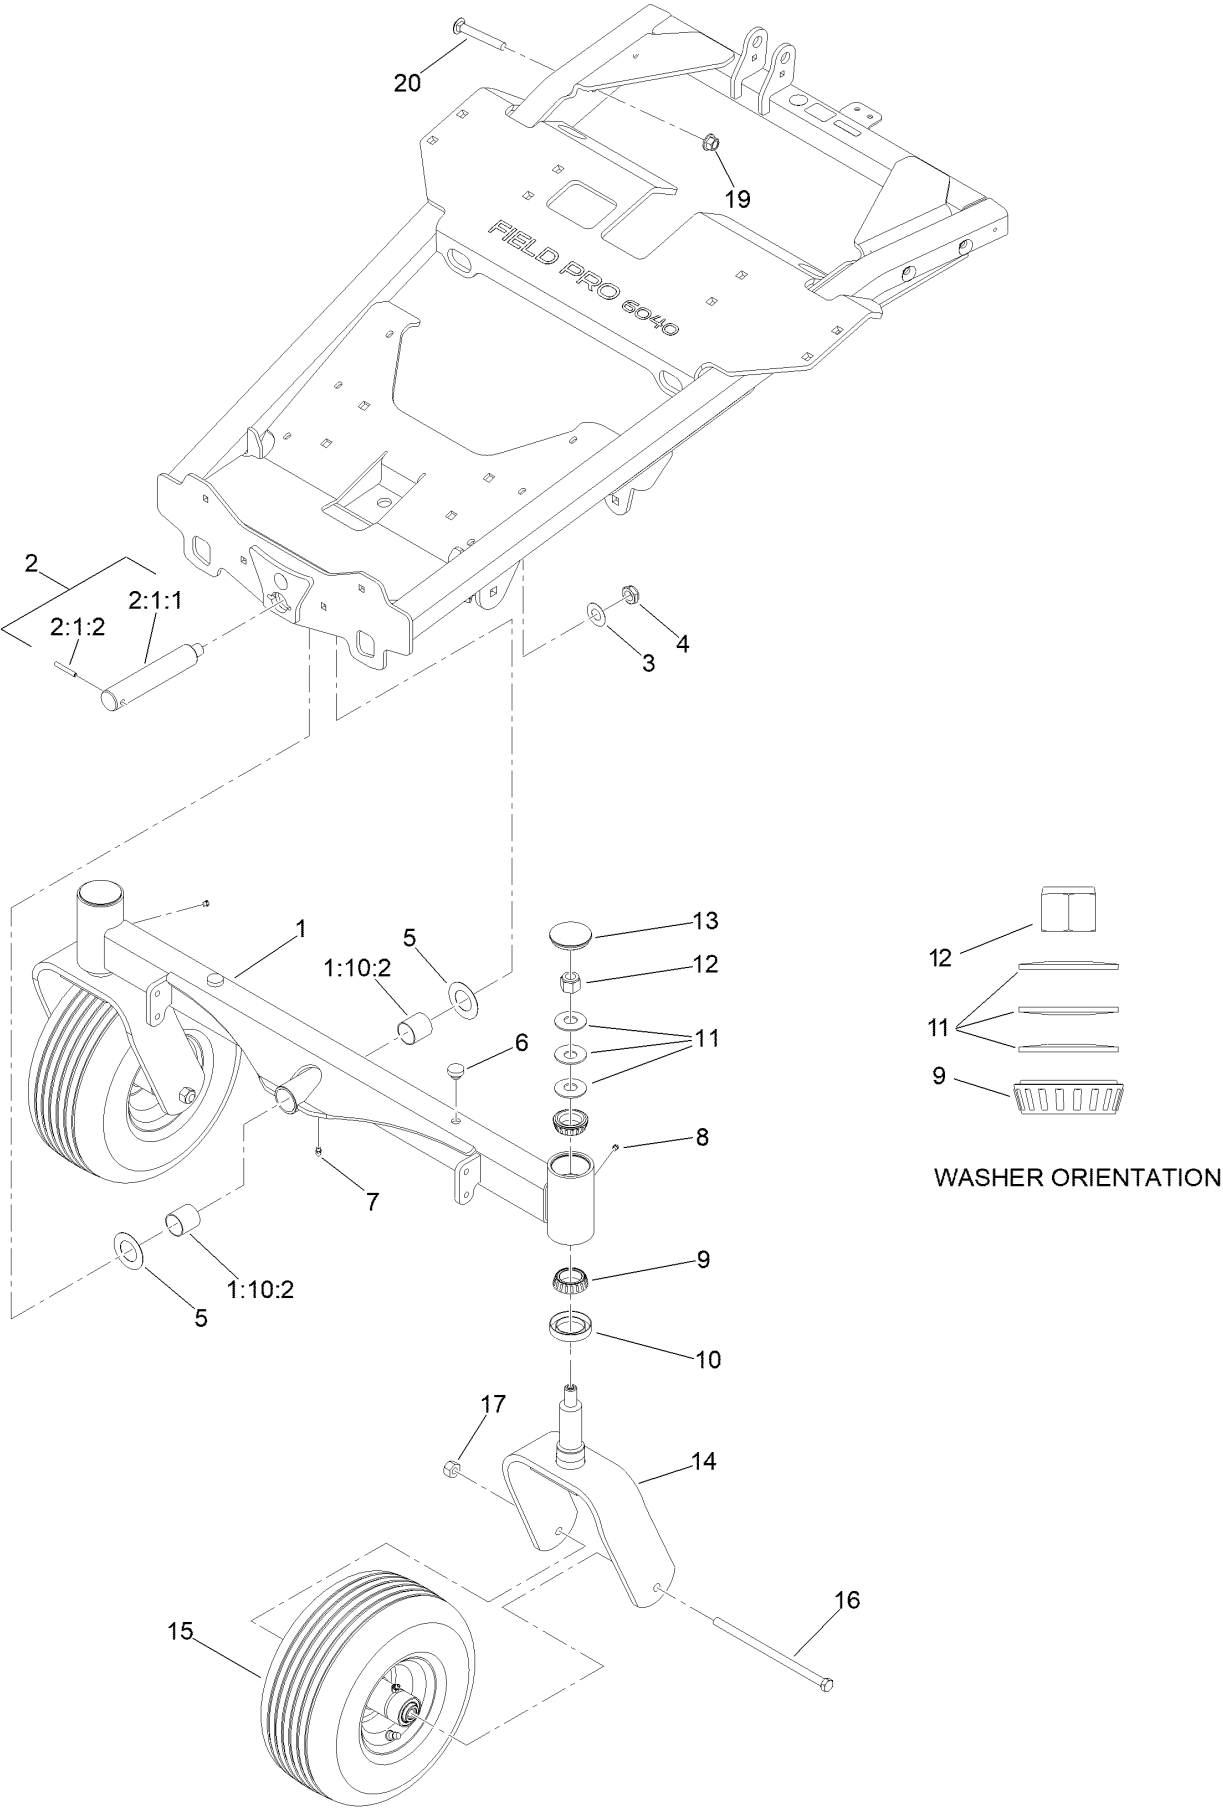

Caster Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-1816SP	1	Axle ASM W/Bushings	9	254-106	4	Cone-Bearing, Tapered
1:10:2	99-6964	2	Bushing-Axle	10	69-2980	2	Seal
2	145-1838-03	1	Axle Pivot Pin ASM	11	108-9957	6	Washer-Belleville
2:1:1	145-1839	1	Pin-Axle Pivot	12	3296-51	2	Nut-Lock, NI
2:1:2	32121-32	1	Pin-Roll	13	108-9950	2	Cap-Grease
3	71-4540	1	Washer-Thrust	14	145-1830-01	2	Fork-Castor
4	3296-15	1	Nut-Lock, NI	15	133-4723	2	Caster Wheel ASM
5	99-8432	2	Washer-Thrust	16	325-39	2	Screw-HH
6	140-3460	2	Bumper-Rubber	17	3296-25	2	Nut-Lock, NI
7	302-5	1	Fitting-Grease	19	99-5107	4	Nut-HF Nylock
8	1-811010	2	Plug	20	3233-10	4	Screw-CARR

 Caster Wheel Assembly No. 133-4723

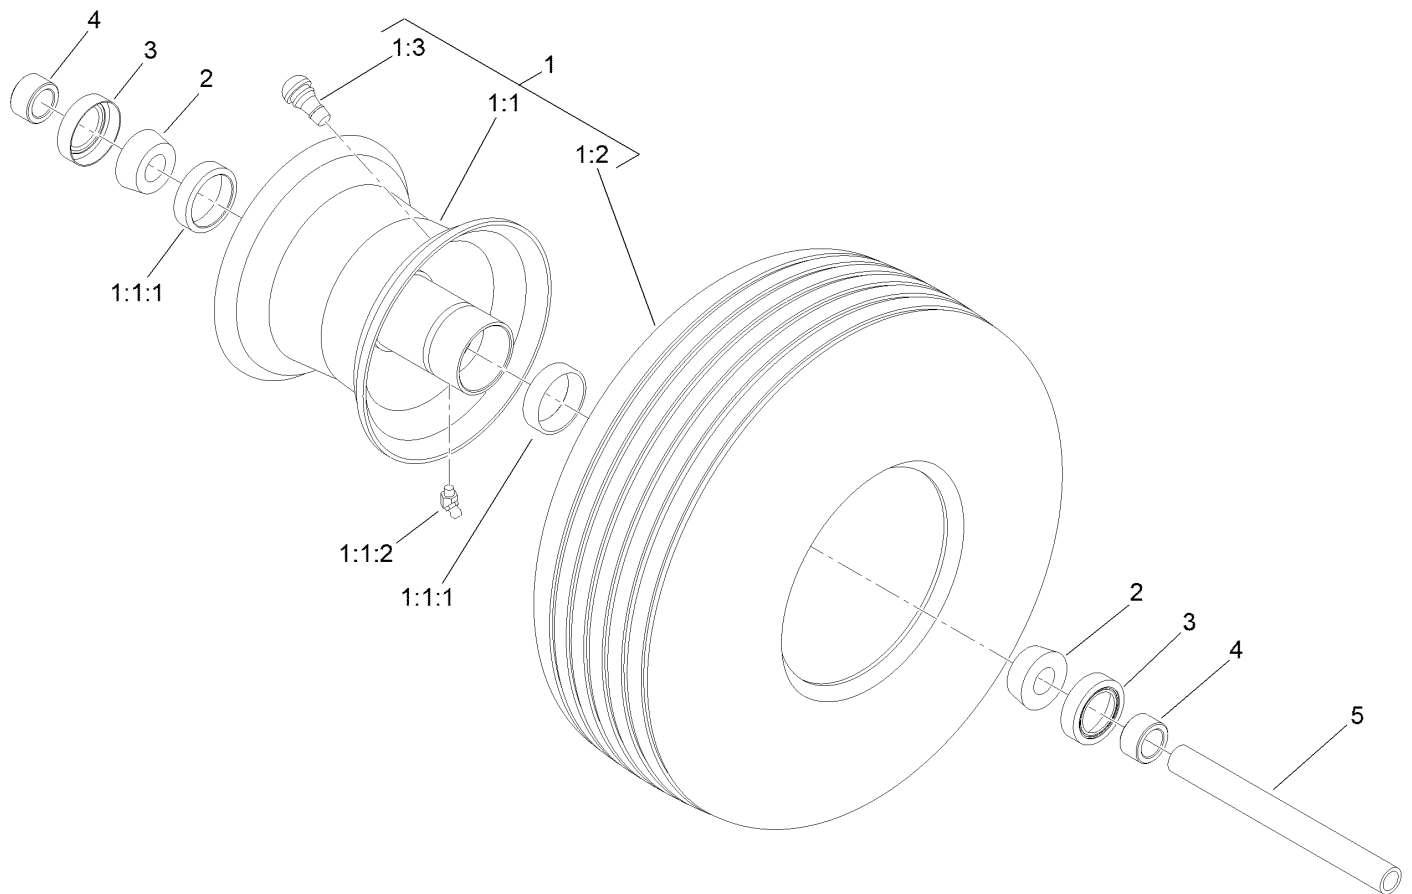


Caster Wheel Assembly No. 133-4723 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-4730	1	Tire And Wheel ASM
1:1	133-4725	1	Wheel
1:1:1	1-633584	2	Bearing-Cup
1:1:2	302-11	1	Fitting-Lube, 45 DEG
1:2	133-4724	1	Tire

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1:3	5108	1	Valve
2	1-633585	2	Bearing-Cone, Taper
3	1-633580	2	Seal-Bearing
4	1-633581	2	Spacer-Bearing
5	138-1933	1	Spacer, Front Caster

 Main Frame Assembly

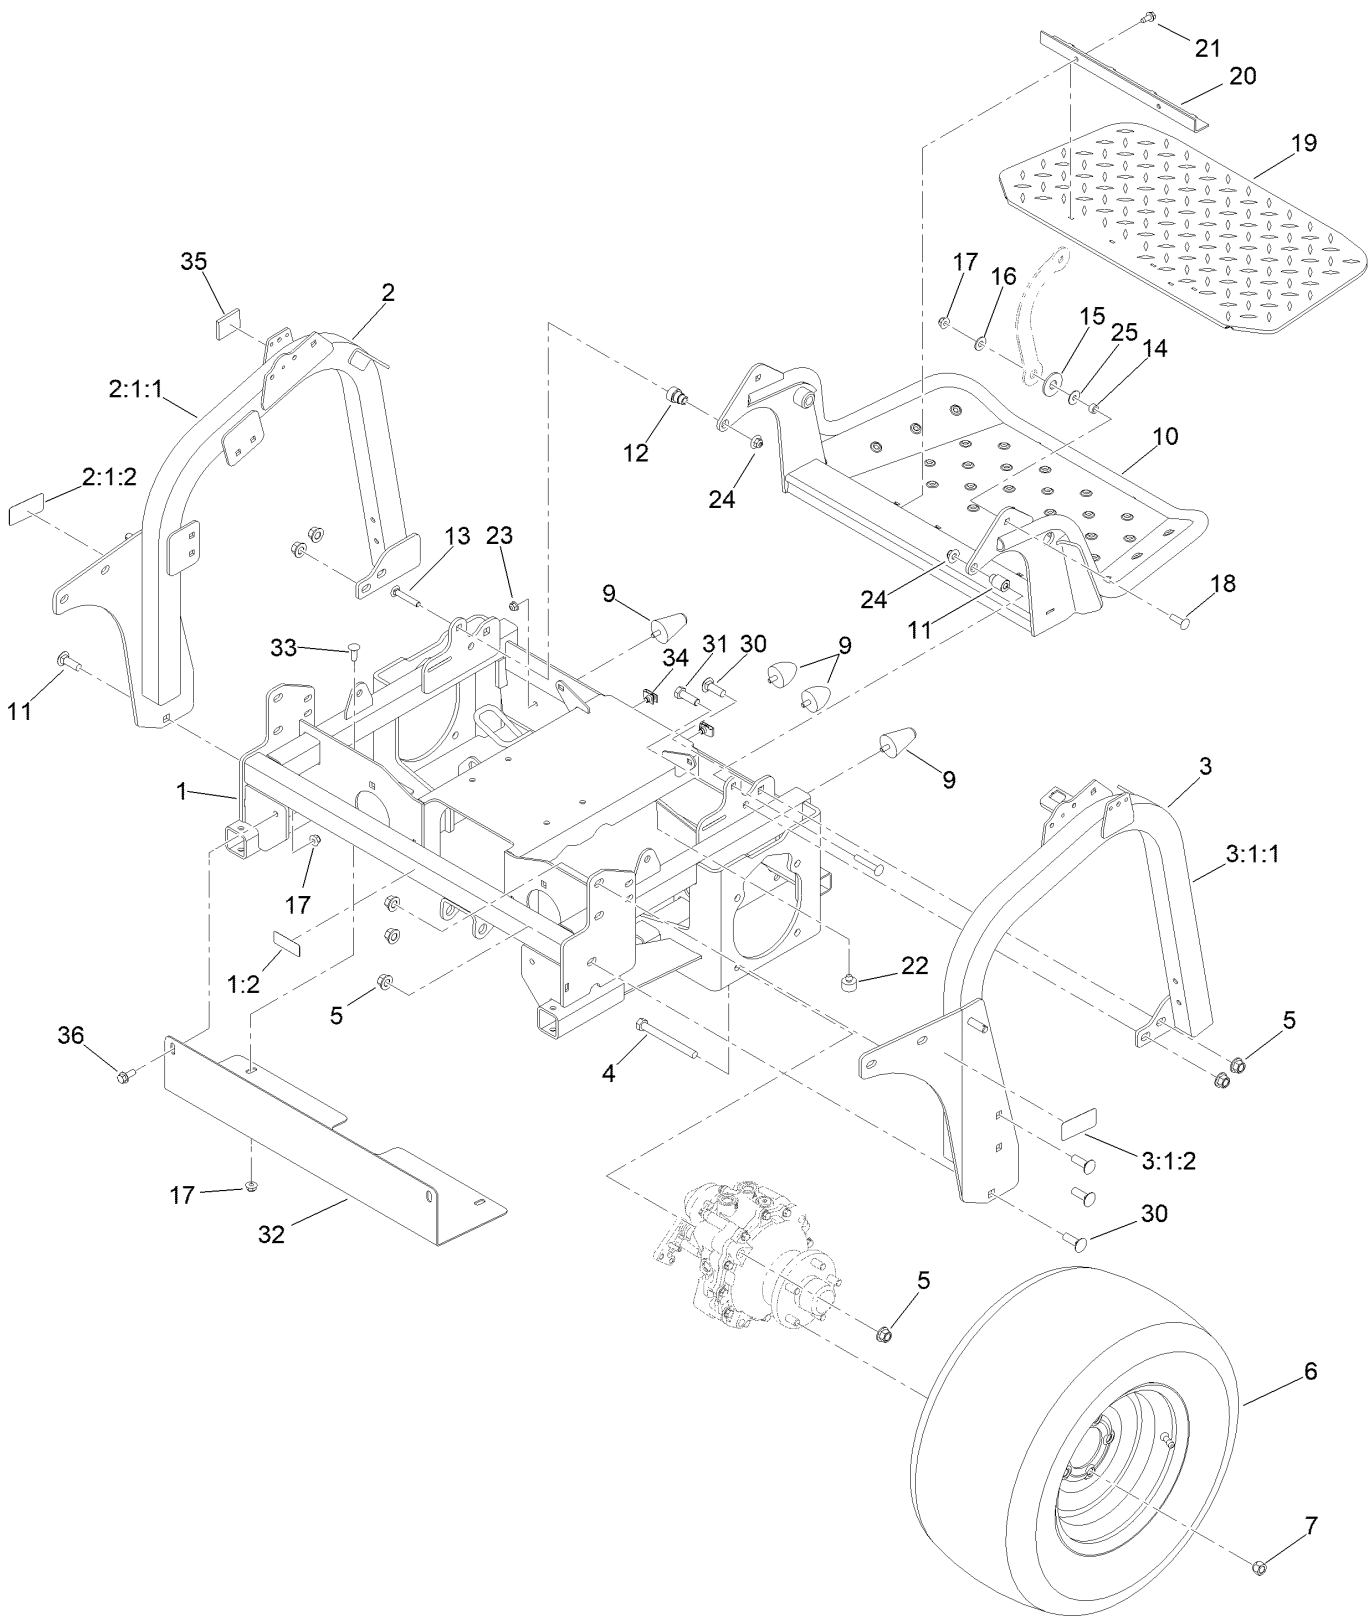


Main Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-3709	1	Main Frame ASM W/Decal	15	114-0463	2	Washer-Friction, Composite
1:2	132-1316	1	Decal-Danger, Belt	16	3256-4	2	Washer-Flat
2	145-7448SP	1	RH Frame ASM W/Decals	17	104-8301	6	Nut-HF, NI
2:1:1		1	Frame-RH ●	18	3231-28	2	Screw-CARR
2:1:2	138-4107	1	Decal-Hazard, Pinch	19	126-7157	1	Mat-Platform
3	163-1654SP	1	LH Frame ASM W/Decals	20	114-1920-03	1	Clamp-Shield
3:1:1		1	Frame-Side, LH ●	21	32144-70	2	Screw-HWHTF
3:1:2	138-4107	1	Decal-Hazard, Pinch	22	120-7893	1	Bumper-Grommet
4	325-19	8	Screw-HH	23	104-8300	4	Nut-HF, NI
5	99-5107	18	Nut-HF Nylock	24	109-6658	2	Nut-Flange, NI
6	147-6605	2	Wheel ASM	25	119-4150	2	Washer-Flat
7	139-2564	10	Nut-Lug	30	3233-2	8	Screw-CARR
9	114-1926	4	Bumper-Rubber	31	325-6	2	Screw-HH
10	161-6796-03SP	1	Platform ASM-Black	32	145-7408SP	1	Bracket-Shield, Belt
11	144-7613	1	Bushing-Flanged	33	3231-22	2	Screw-CARR
12	147-3306	1	Bushing-Flanged	34	115-7721	2	Nut-Clip, U
13	3231-40	2	Bolt-CARR	35	147-3336	1	Seal-Foam
14	111044	2	Spacer	36	3234-42	2	Screw-HHF

● Not serviced separately

 
Wheel Assembly No. 147-6605

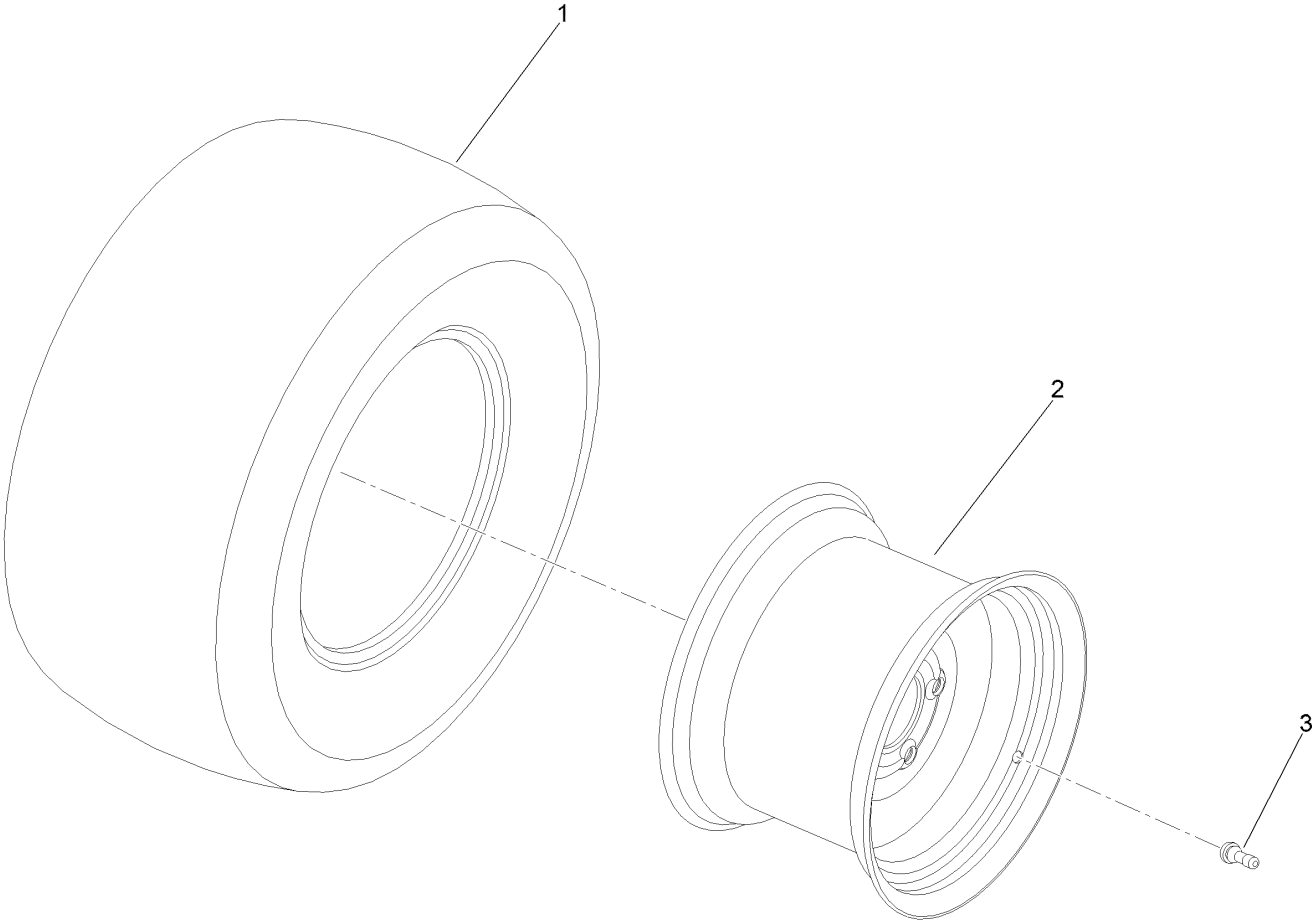

Wheel Assembly No. 147-6605 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-6607	1	Tire 24 X 12 -12
2	147-6606	1	Rim
3	232-27	1	Stem-Valve

 
Control Panel Assembly

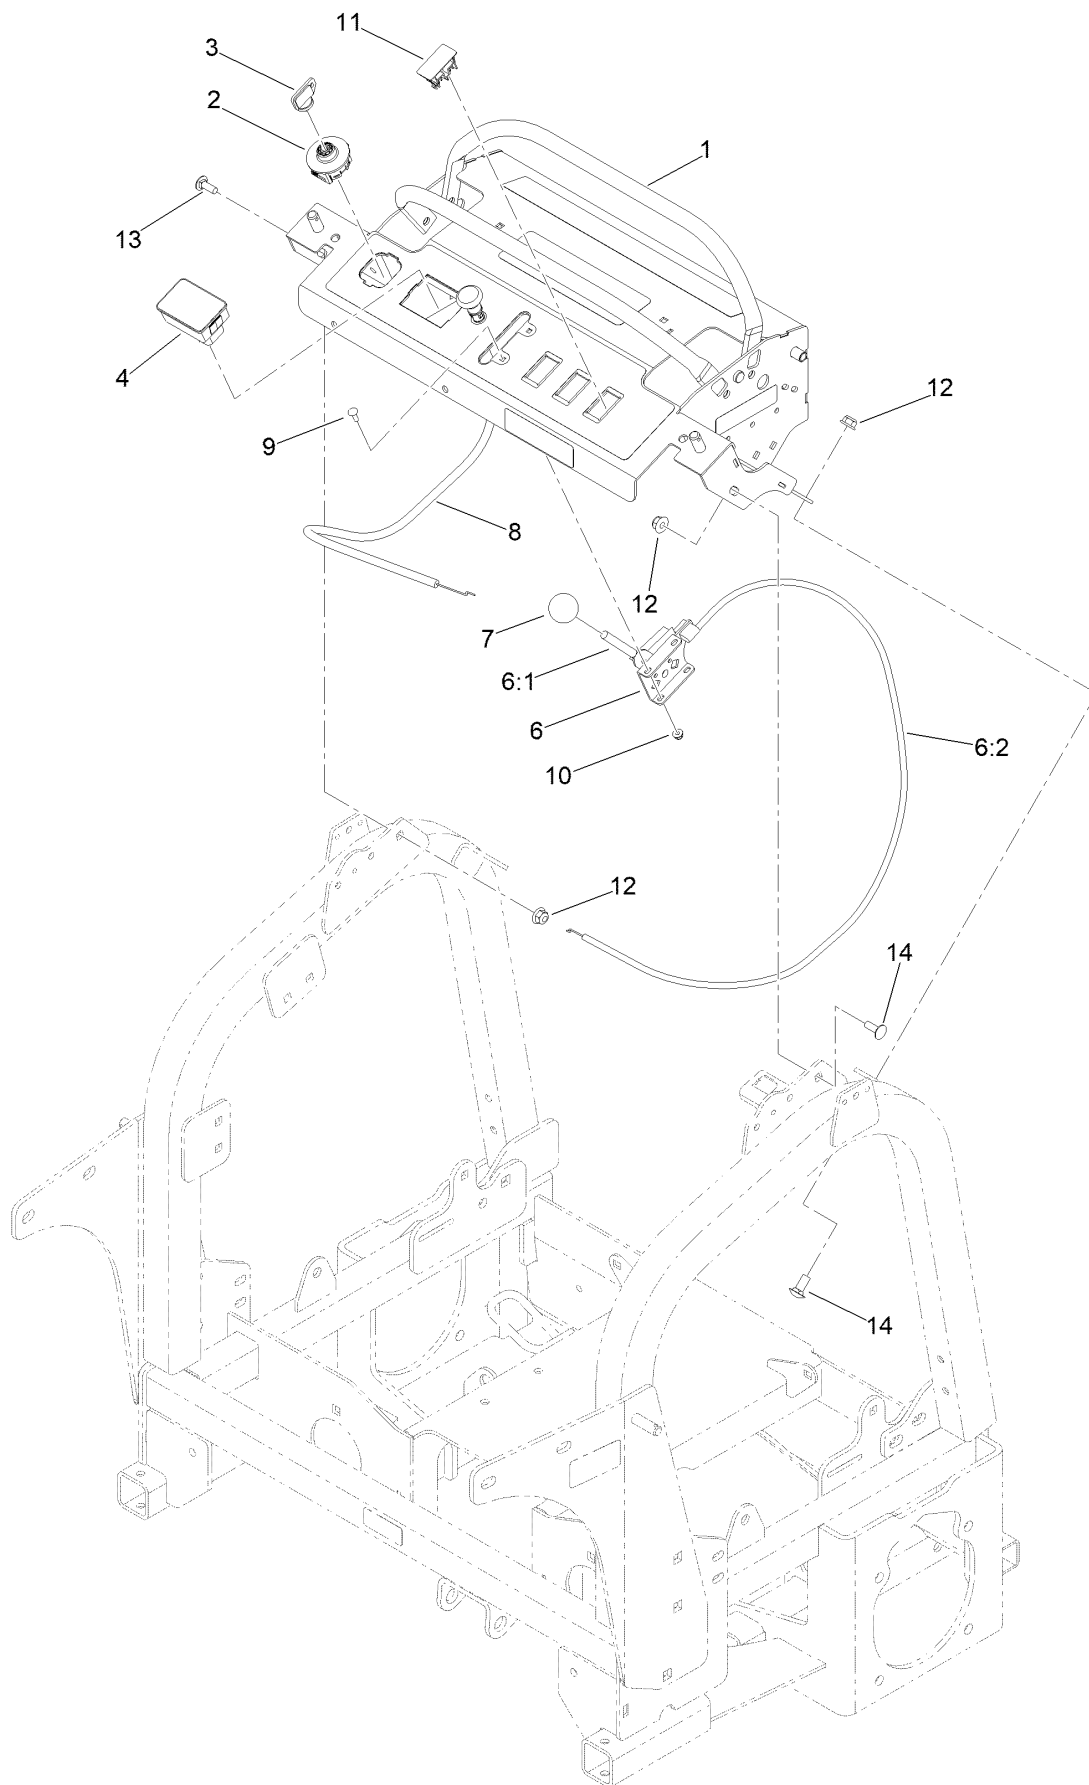

Control Panel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-3703SP	1	Control Panel ASM W/Decals	7	233-42	1	Knob
2	137-4101	1	Switch-Ignition	8	132-9035	1	Cable-Choke
3	63-8360	1	Key-Ignition	9	1-807533	2	Bolt-CARR
4	163-1681	1	Module ASM	10	120-4578	2	Nut-HF
6	115-2755	1	Control-Throttle ASM	11	119-7791	3	Plug-Hole
6:1	112-2334	1	Lever-Throttle	12	104-8301	4	Nut-HF, NI
6:2	115-3867	1	Cable-Throttle	13	3230-10	2	Bolt-CARR
				14	3231-27	2	Screw-CARR

 Control Panel Assembly No. 147-3703SP

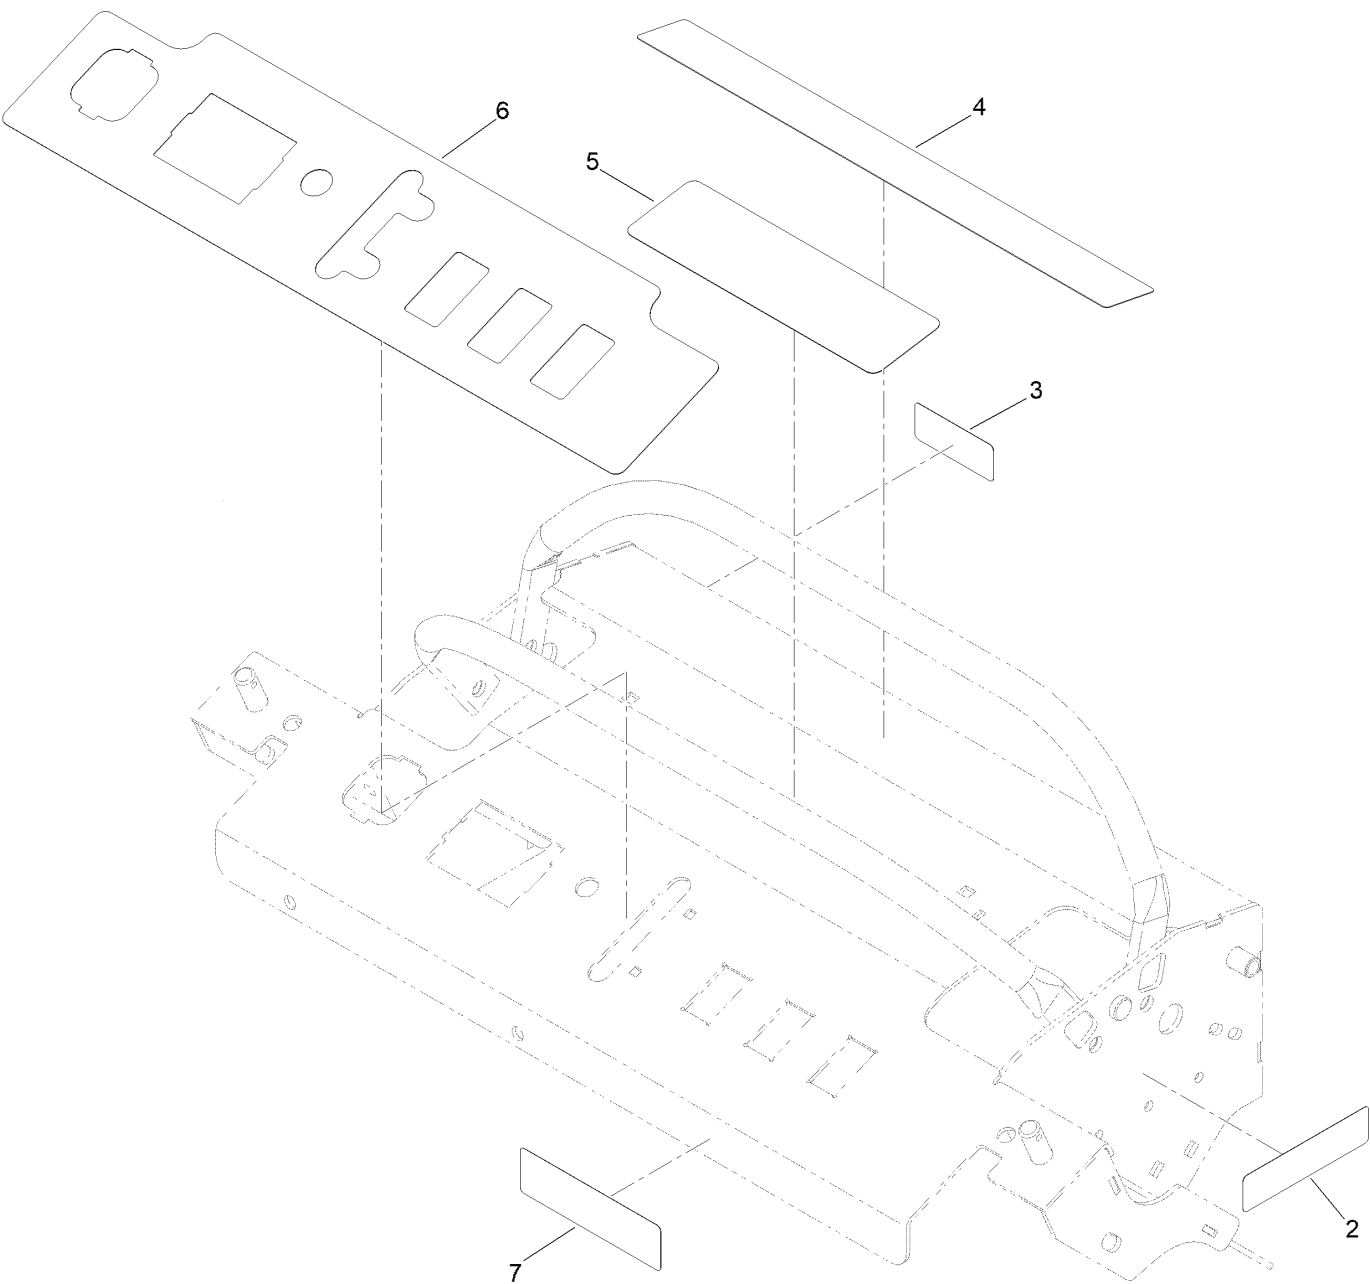


Control Panel Assembly No. 147-3703SP (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	133-8062	1	Decal-Spark Arrestor
3	145-1775	1	Decal-Fuse
4	145-1772	1	Decal-Warning

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	145-1765	1	Decal-Controls
6	145-1764	1	Decal-Panel, Control
7	115-4855	1	Decal-Caution

 
Top Cover Assembly

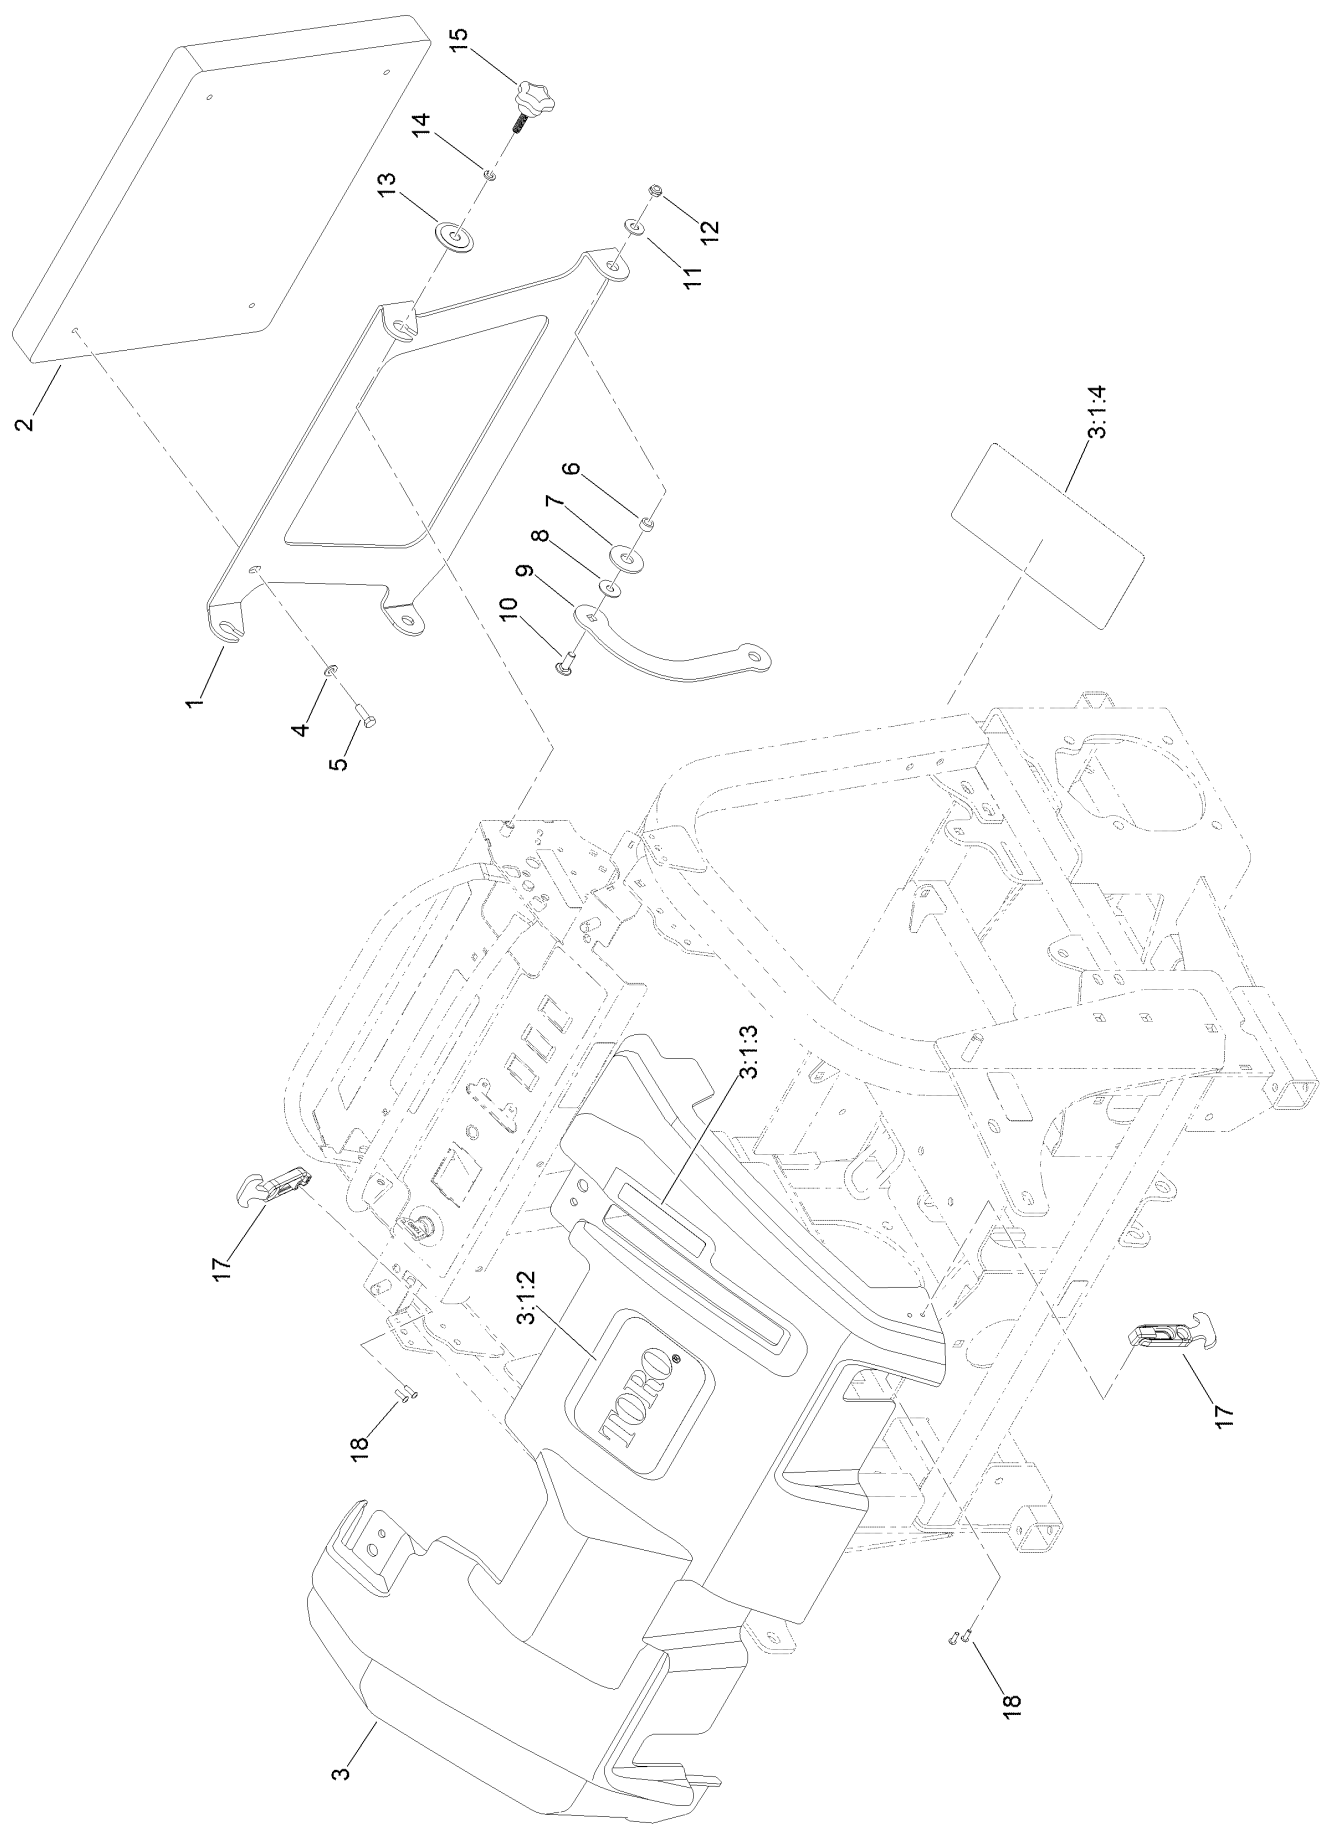

Top Cover Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-8499-03	1	Hinge-Pad	8	119-4150	2	Washer-Flat
2	117-9739	1	Pad-Cushion	9	144-4470-03	2	Link-Platform
3	145-7443SP	1	Cover Top ASM W/Decals	10	3231-22	2	Screw-CARR
3:1:2	104-7213	1	Decal	11	3256-4	2	Washer-Flat
3:1:3	139-6224	1	Decal-Brake, Parking	12	3296-59	2	Nut-Lock, NI
3:1:4	147-6696	1	Decal-Service	13	116-2886	2	Slide-Bushing
4	3256-23	4	Washer-Plain	14	3253-4	2	Washer-Lock
5	121-7999	4	Screw-HH, Patch	15	139-2401	2	Knob
6	111044	2	Spacer	17	103-4080	4	Latch-Rubber
7	114-0463	2	Washer-Friction, Composite	18	3274-39	8	Screw-HSBH

 
Speed Control and Parking Brake Assembly

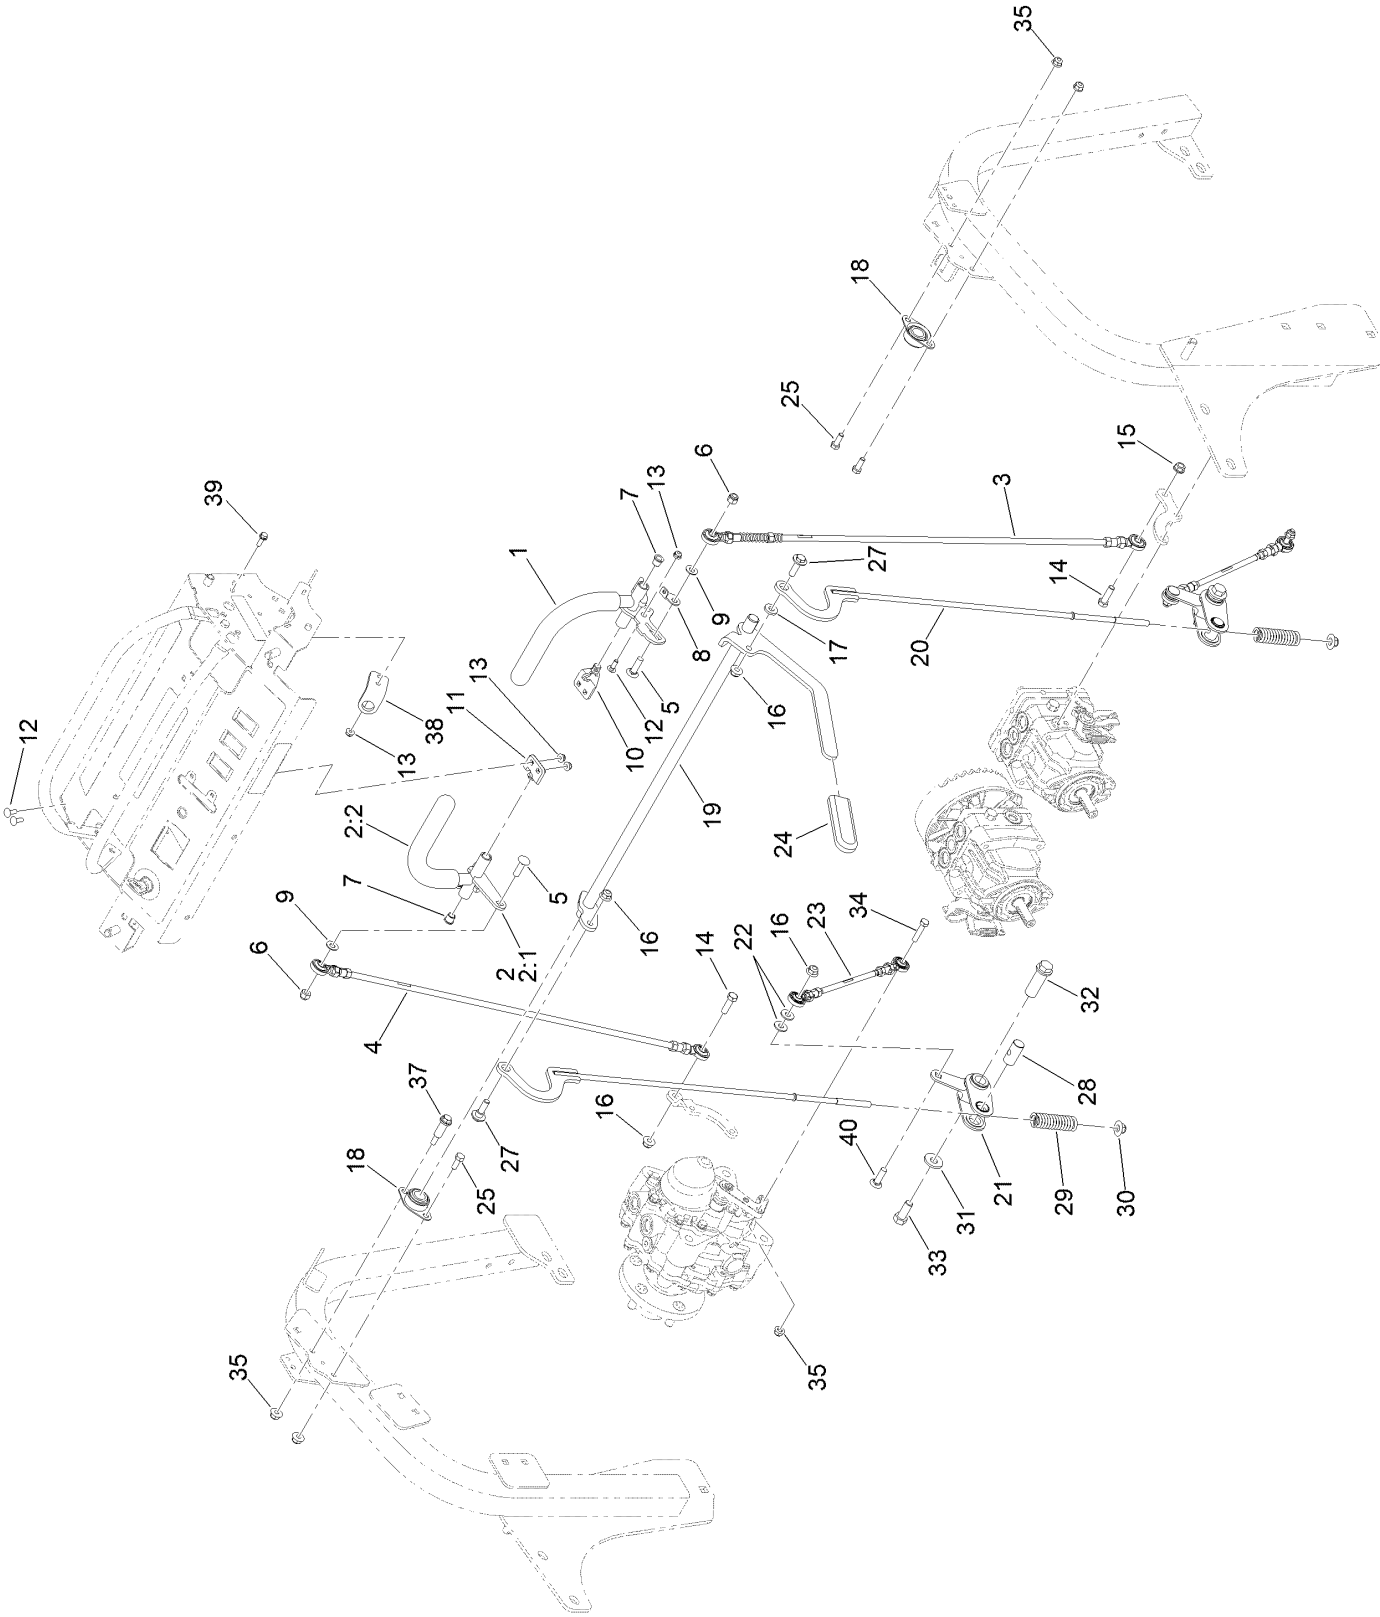

Speed Control and Parking Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-4601	1	LH Control Handle ASM	19	163-1660-03	1	Lever-Brake, Parking
2	144-4598	1	RH Control Handle ASM	20	144-4590	2	Link
2:1	144-4597-03	1	Control-Motion, RH	21	144-4587	2	Bellcrank-Brake W/Bushing
2:2	119-0222	1	Grip	22	3256-3	4	Washer-Flat
3	144-4582	1	LH Control Rod ASM	23	144-4536	2	Turnbuckle ASM
4	144-4581	1	RH Control Rod ASM	24	1-633268	1	Grip-Lever
5	3231-28	2	Screw-CARR	25	322-4	3	Screw-HH
6	3296-39	2	Nut-Lock, NI	27	614672	2	Screw-Shoulder, HWH
7	103-9928	2	Bearing	28	1-633144	2	Pin-Trunion
8	132-7538	1	Bracket-Adjustment, Speed	29	109-2230	2	Spring-Compression
9	132-4593	2	Washer	30	109-6658	2	Nut-Flange, NI
10	120-3288	1	Tab-Pivot, LH	31	1-513435	2	Washer-Spring
11	120-3287	1	Tab-Pivot, RH	32	109-5891	2	Hub-Threaded
12	3229-1	4	Screw-CARR	33	325-5	2	Screw-HH
13	104-7201	8	Nut-HF, NI	34	322-7	2	Screw-HH
14	323-7	2	Screw-HH	35	104-8300	6	Nut-HF, NI
15	3290-357	1	Nut-HSF	37	127-1509	1	Screw-Shoulder
16	104-8301	5	Nut-HF, NI	38	144-7543-03	1	Bracket-Switch
17	71-9310	1	Spacer	39	115-5103	4	Screw-HHF
18	1-633102	2	Bearing-Flange, Side	40	3231-26	2	Screw-CARR

 LH Control Handle Assembly No. 144-4601

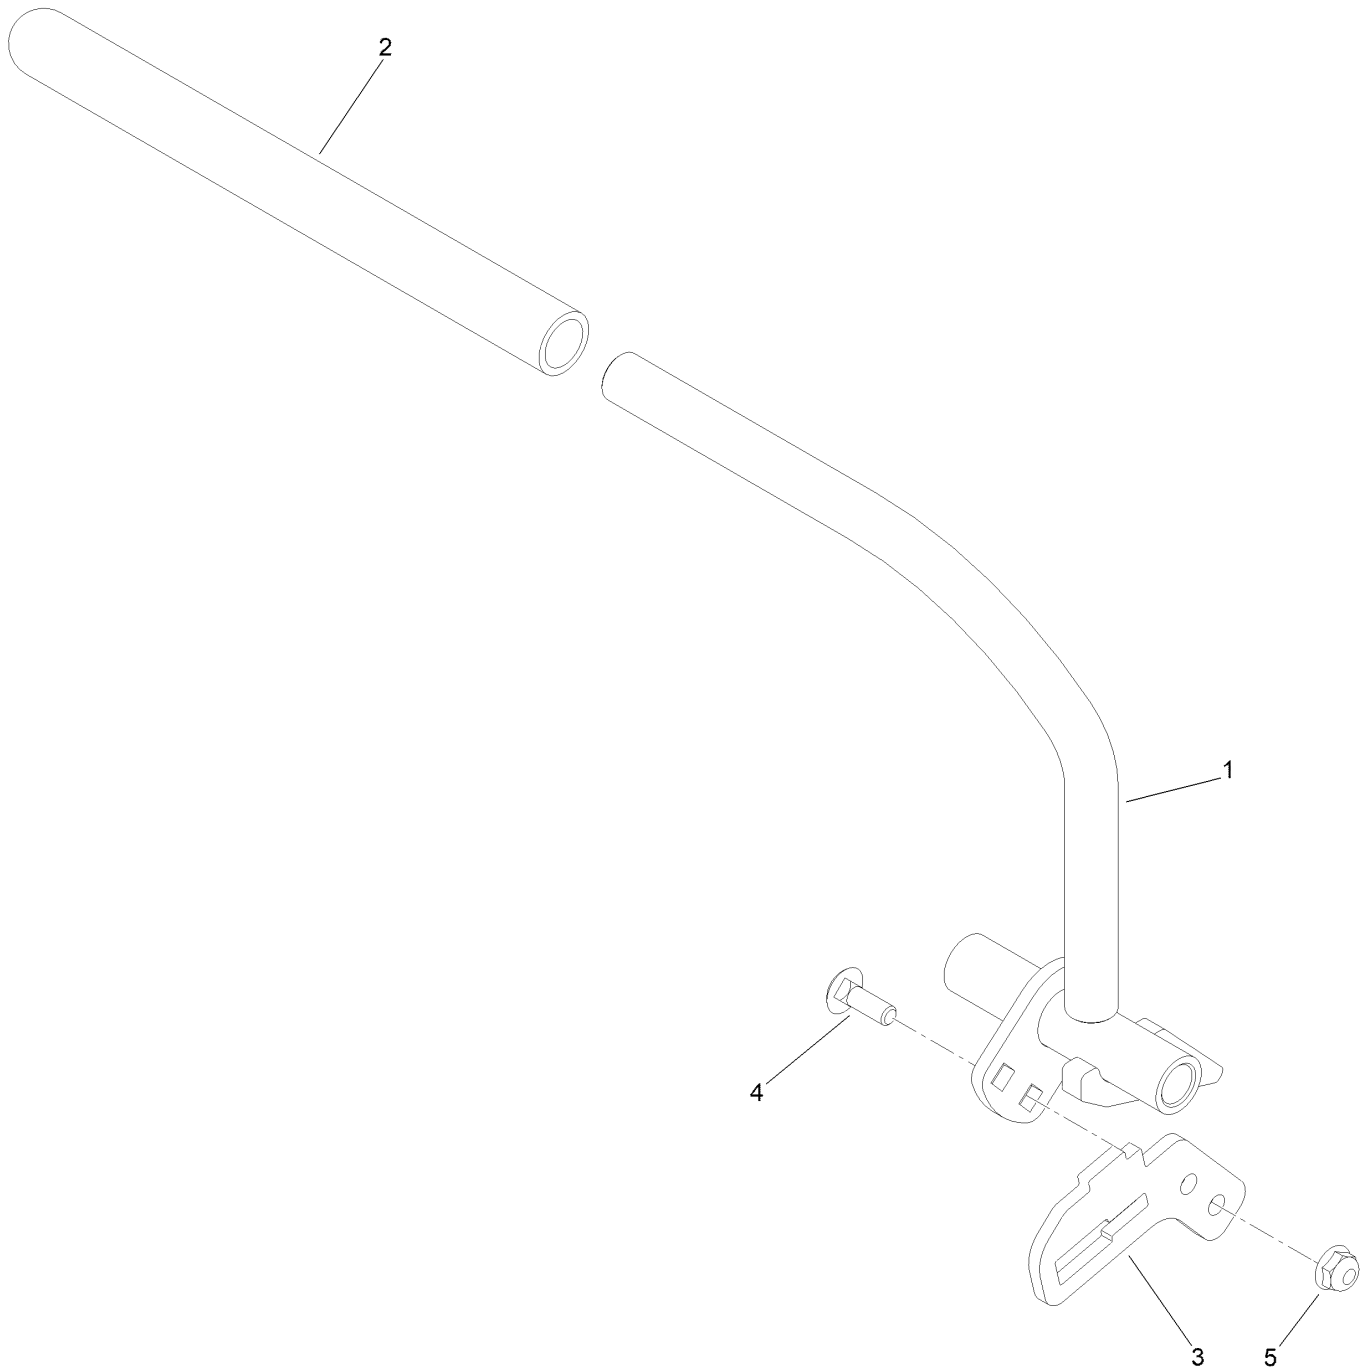


LH Control Handle Assembly No. 144-4601 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-4600-03	1	Control-Motion, LH
2	119-0222	1	Grip
3	144-4599	1	Plate-Rod, Control

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	3229-1	2	Screw-CARR
5	104-7201	2	Nut-HF, NI

 LH Control Rod Assembly No. 144-4582

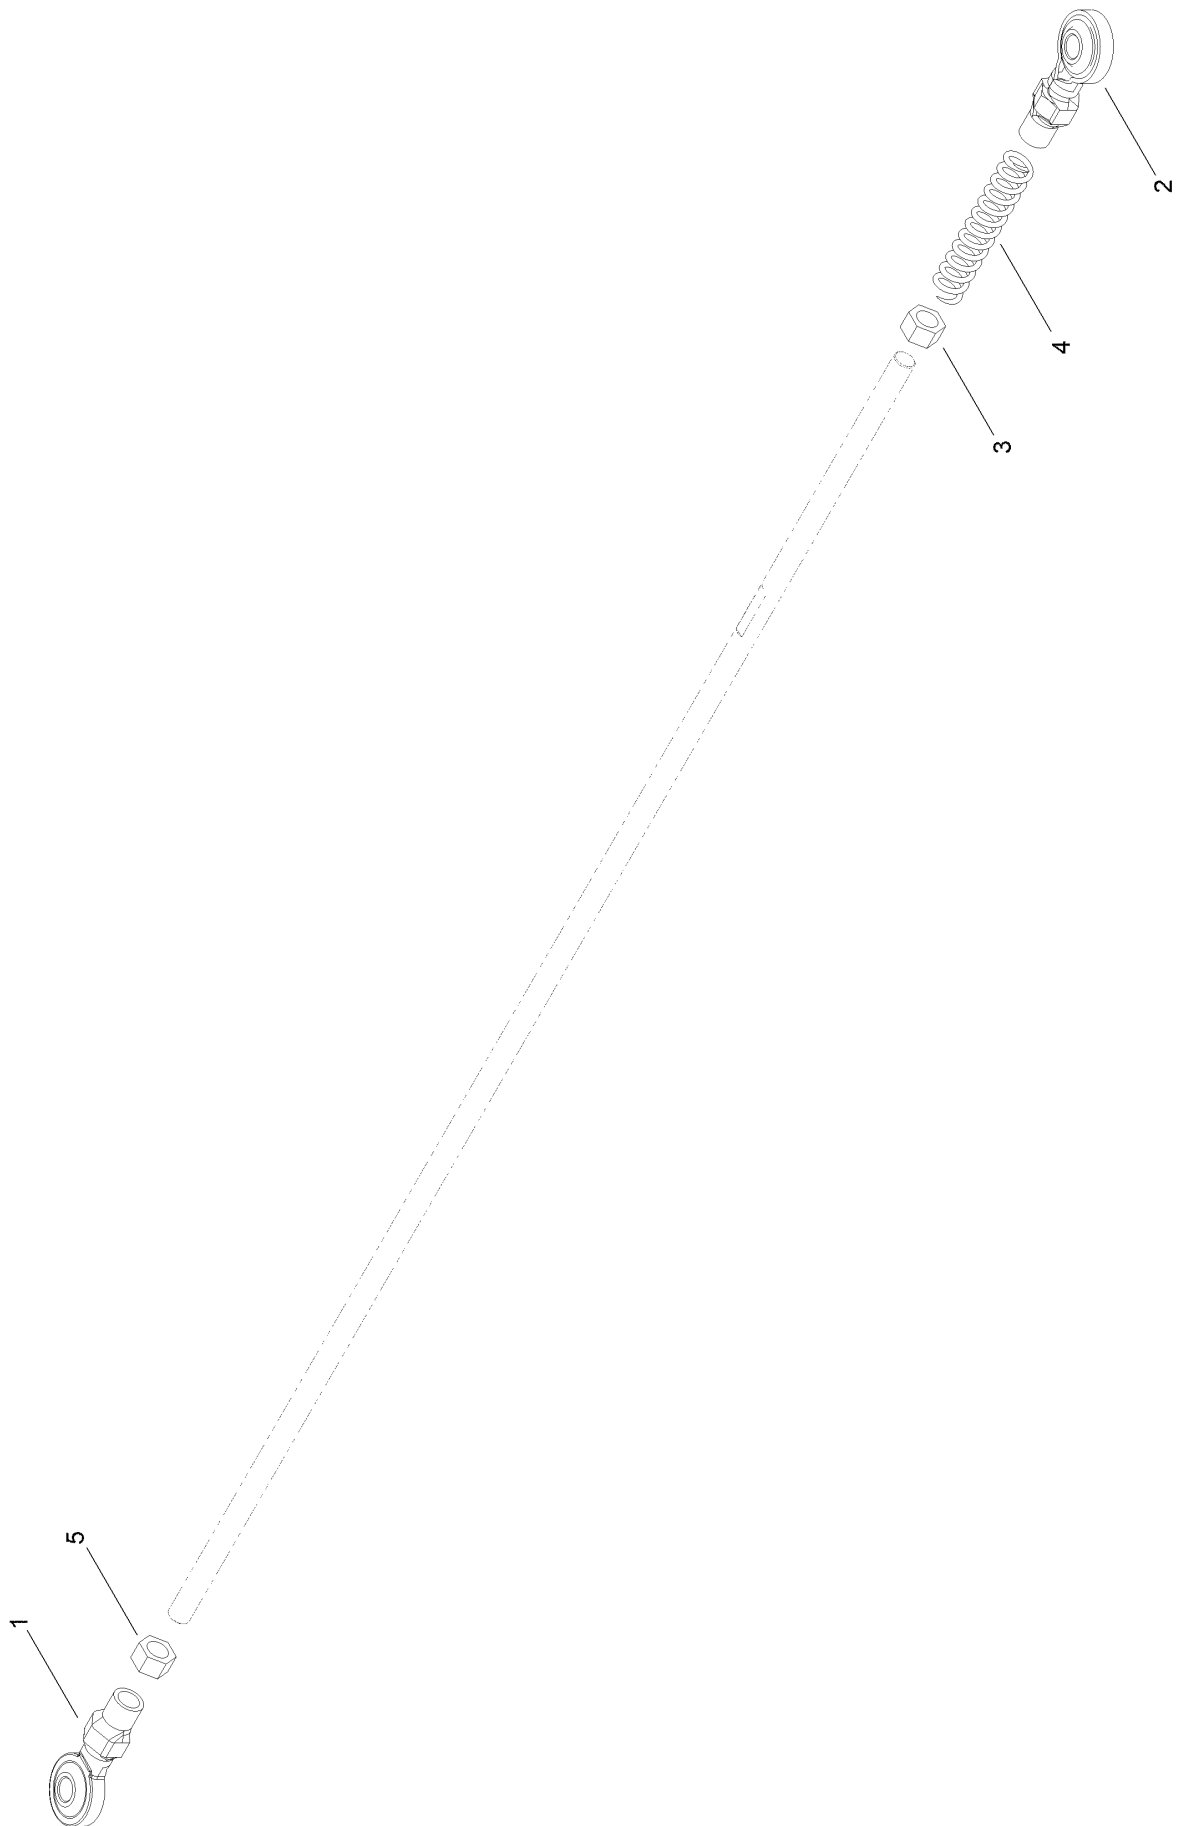


LH Control Rod Assembly No. 144-4582 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-4647	1	Ball Joint-LH
2	138-4648	1	Ball Joint-RH
3	3219-3	1	Nut-Hex

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	1-603807	1	Spring-Return, Neutral
5	3219-20	1	Nut-Hex, LH

 RH Control Rod Assembly No. 144-4581

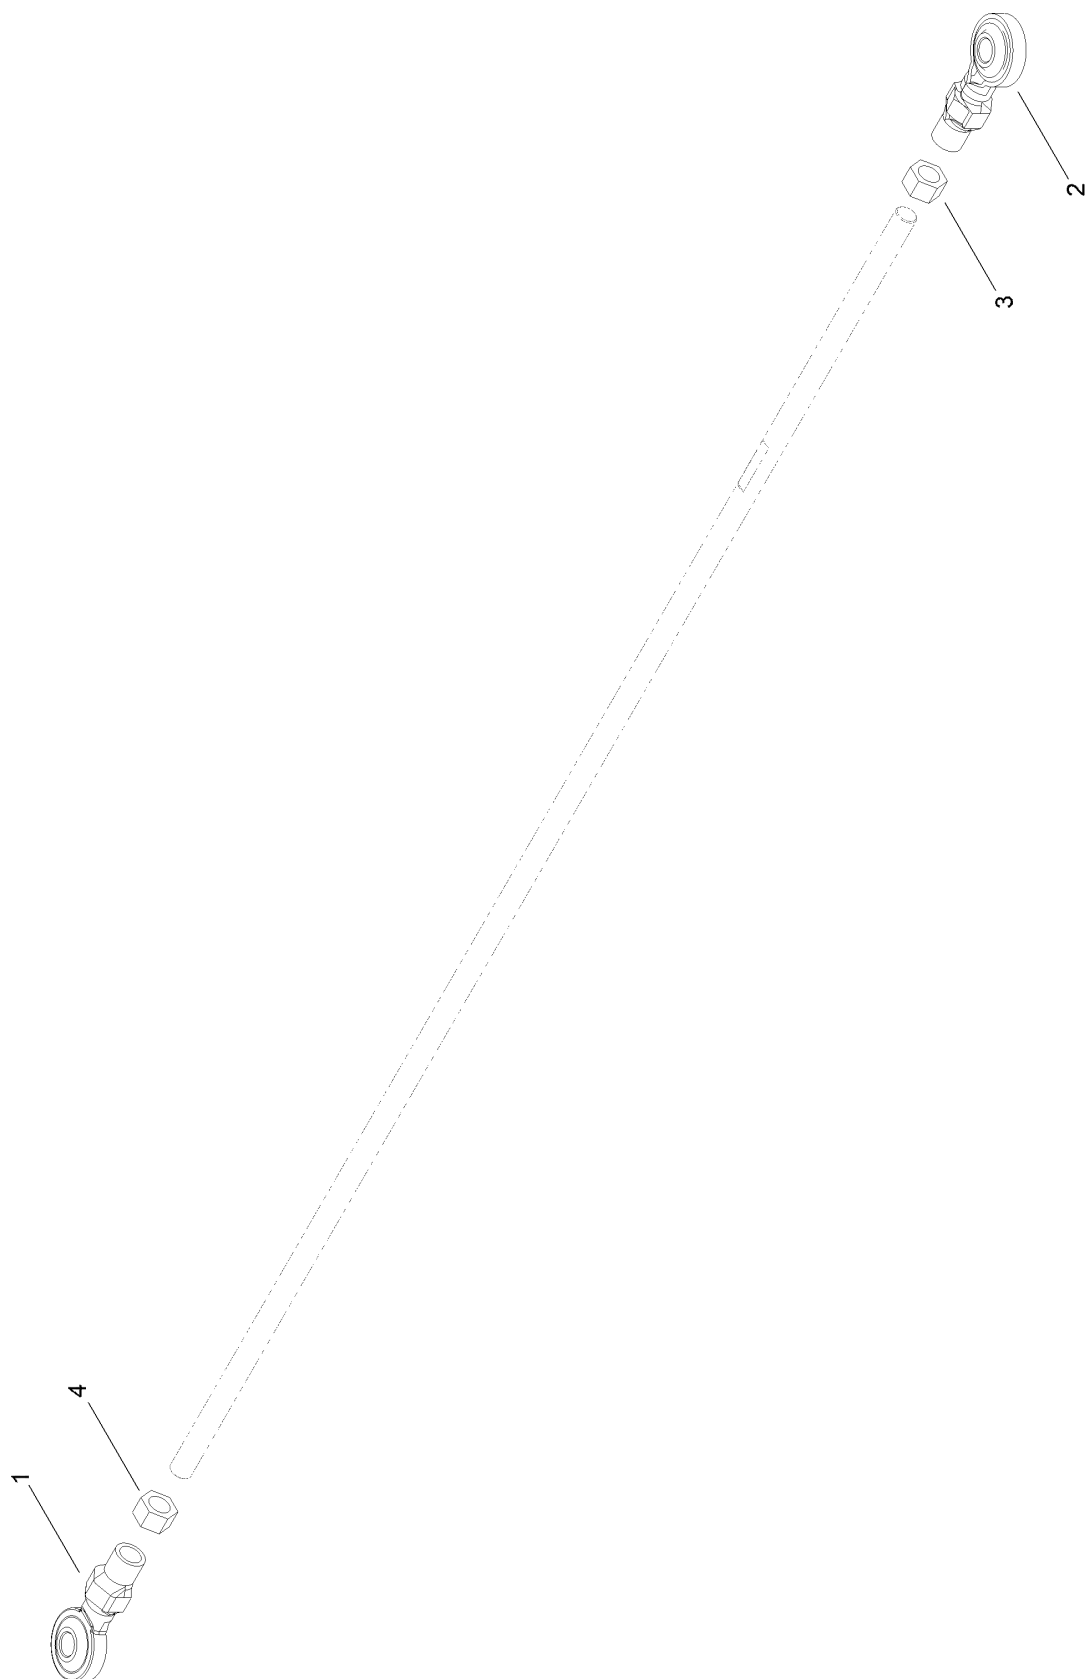


RH Control Rod Assembly No. 144-4581 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-4647	1	Ball Joint-LH
2	138-4648	1	Ball Joint-RH

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	3219-3	1	Nut-Hex
4	3219-20	1	Nut-Hex, LH

 
Brake Bellcrank W/Bushing Assembly No. 144-4587

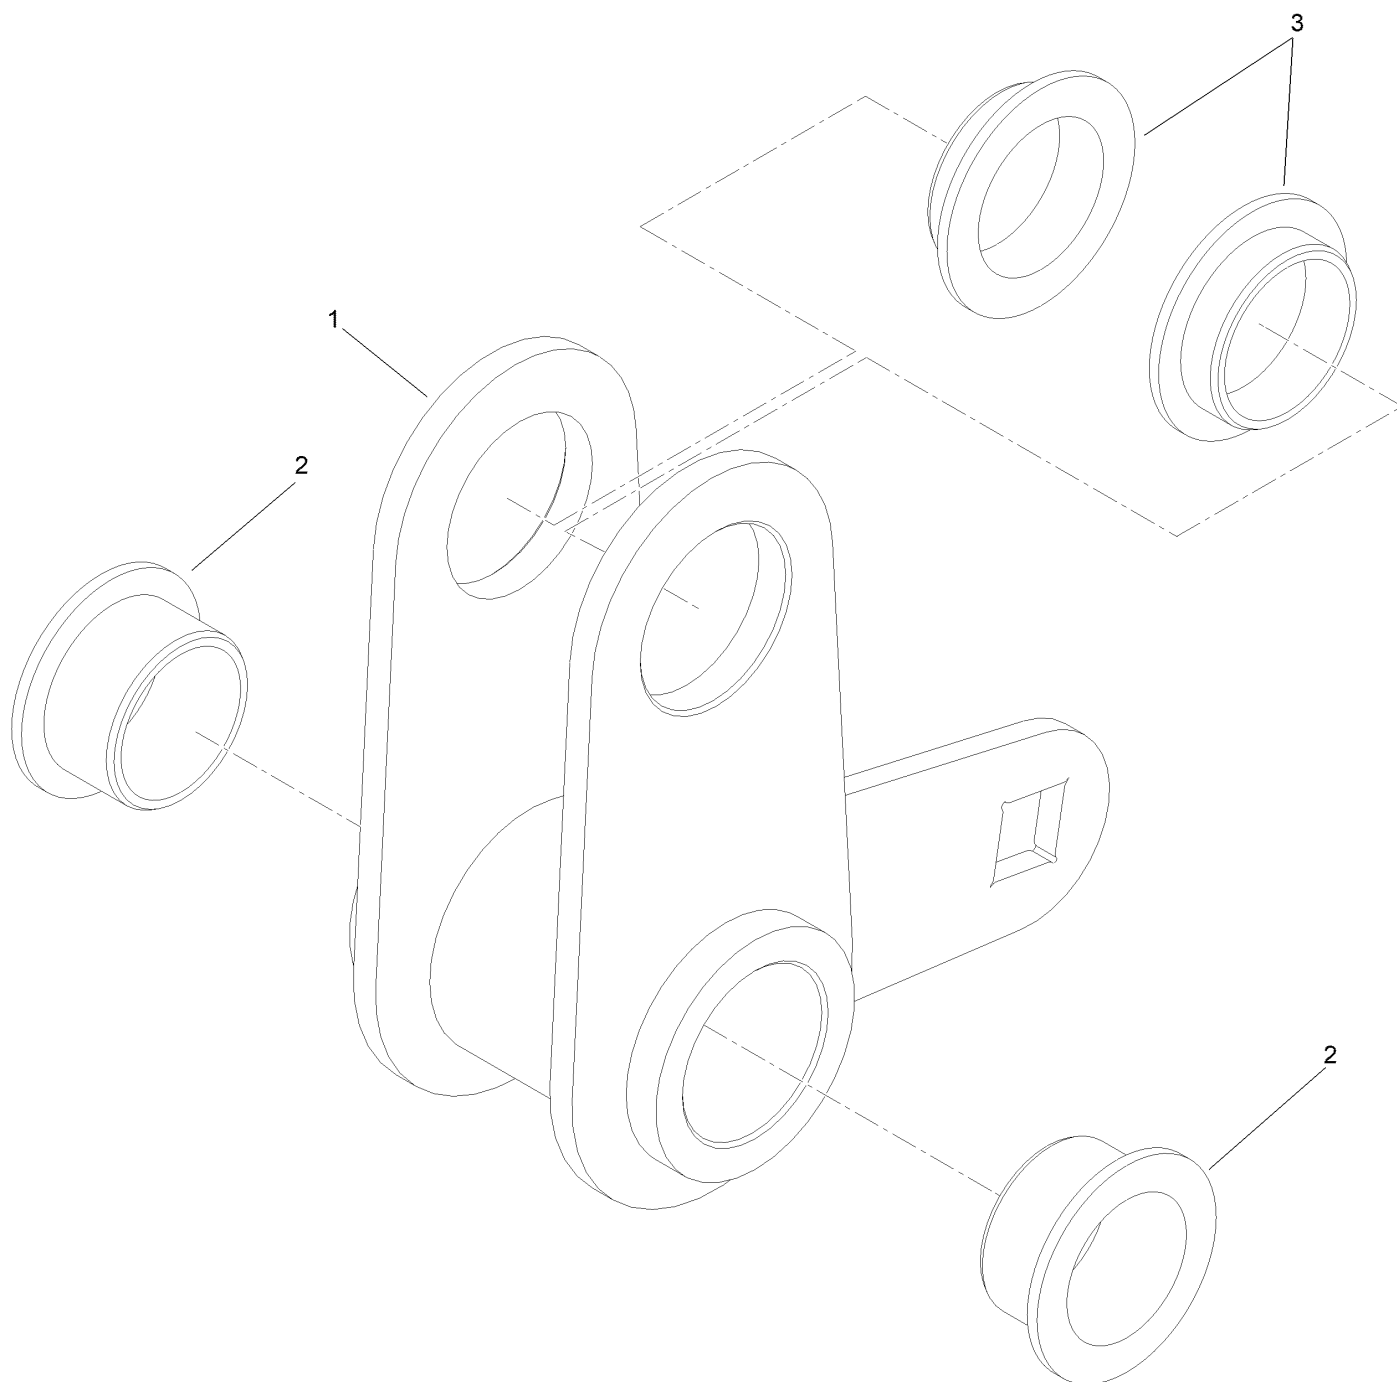

Brake Bellcrank W/Bushing Assembly No. 144-4587 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-6332	1	Bellcrank-Brake
2	109-8054	2	Bushing-Flange
3	135-2840	2	Bushing-Flange

 
Hydraulic Tank Assembly

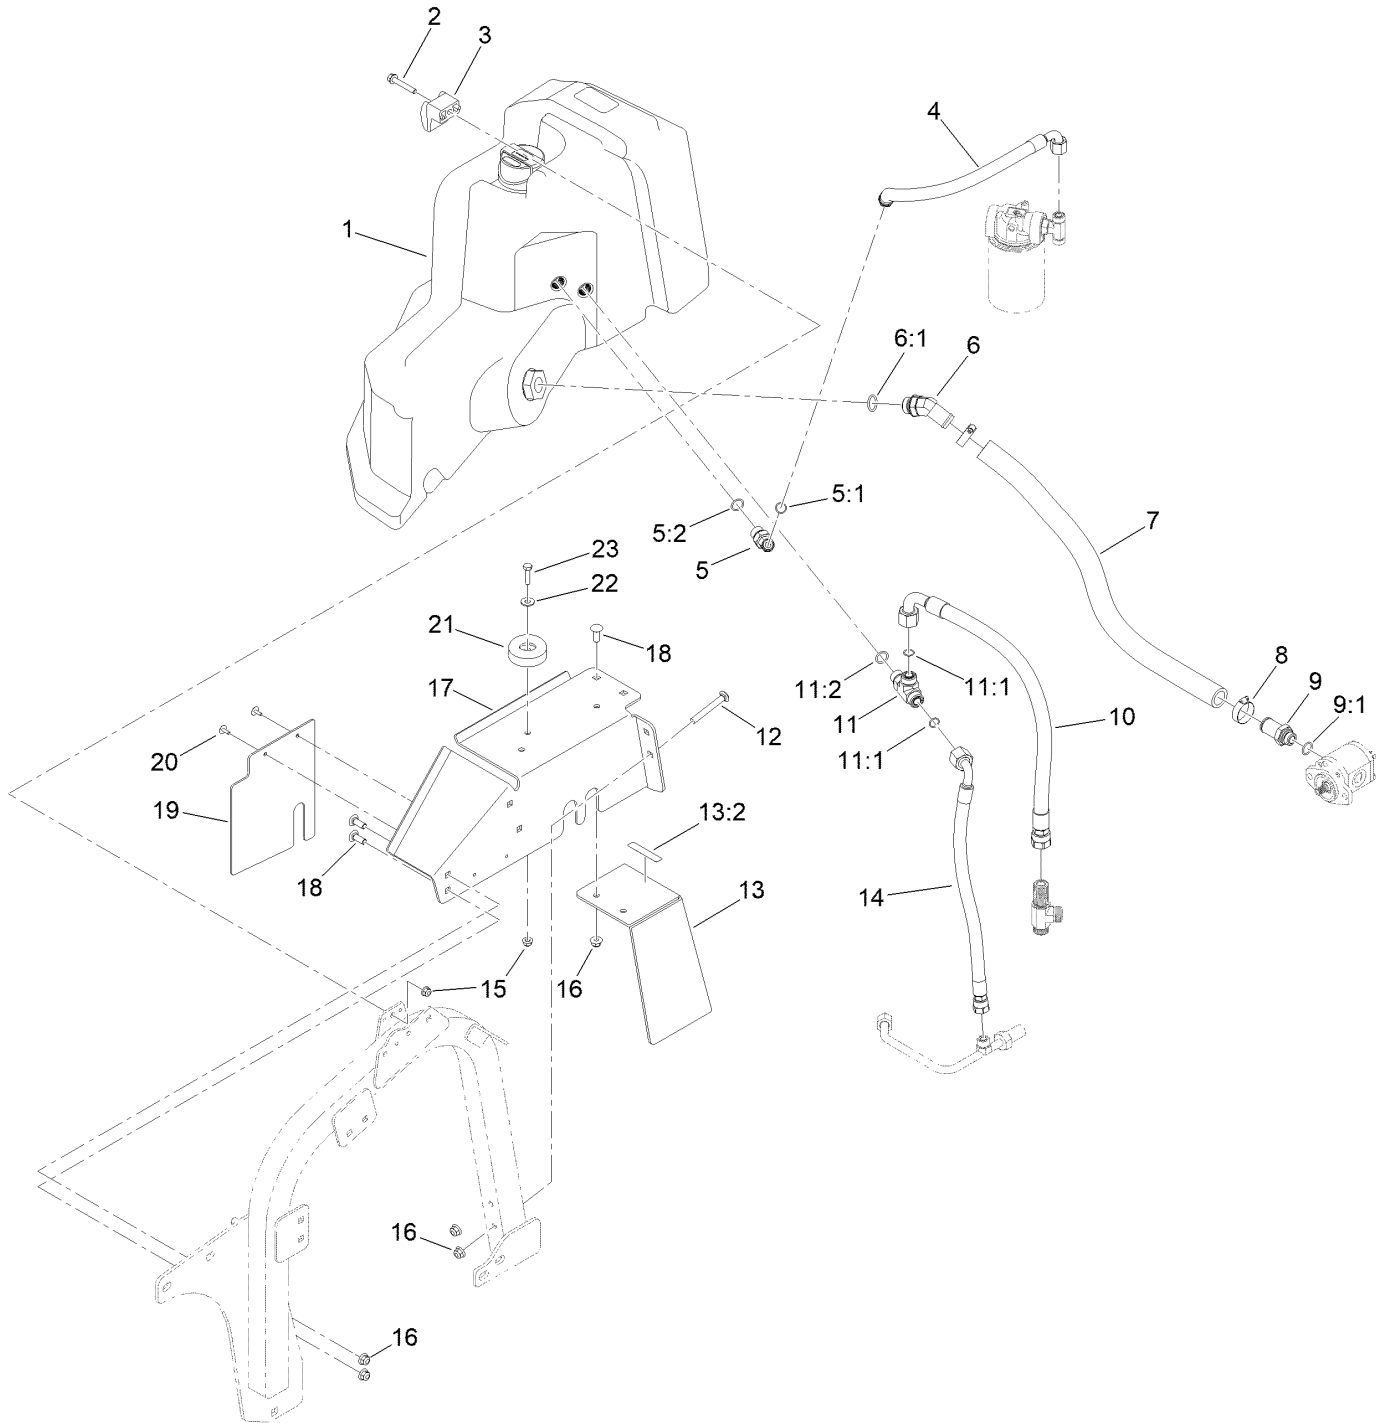

Hydraulic Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-7444SP	1	Hydro Tank ASM	11:2	237-80	1	O-Ring
2	142-6275	1	Screw-HHF	12	3231-42	2	Screw-CARR
3	107-4543	1	Clamp	13	147-3714	1	RH Fender ASM W/Decal
4	147-3327	1	Hydraulic Hose ASM	13:2	135-0328	1	Decal-Torque, Wheel Nut
5	340-14	1	Fitting-HYD, 45 DEG	14	144-7290	1	Hydraulic Hose ASM
5:1	237-65	1	O-Ring	15	104-8300	2	Nut-HF, NI
5:2	237-80	1	O-Ring	16	104-8301	6	Nut-HF, NI
6	144-7172	1	Fitting-Elbow-45	17	144-7689-03	1	Bracket-Tank Mount, Hydraulic
6:1	237-81	1	O-Ring	18	3231-22	4	Screw-CARR
7	144-7287	1	Hose-Suction	19	147-3305	1	Flap-Cover, Side
8	2412-34	2	Clamp-Hose	20	3269-20	2	Rivet-Pop
9	131-0573	1	Fitting-STR	21	108-1605	1	Bumper-Recess
9:1	237-80	1	O-Ring	22	3256-3	1	Washer-Flat
10	144-7296	1	Hydraulic Hose ASM	23	322-6	1	Screw-HH
11	340-22	1	Fitting-Tee				
11:1	237-65	2	O-Ring				

 Hydraulic Tank Assembly No. 145-7444SP

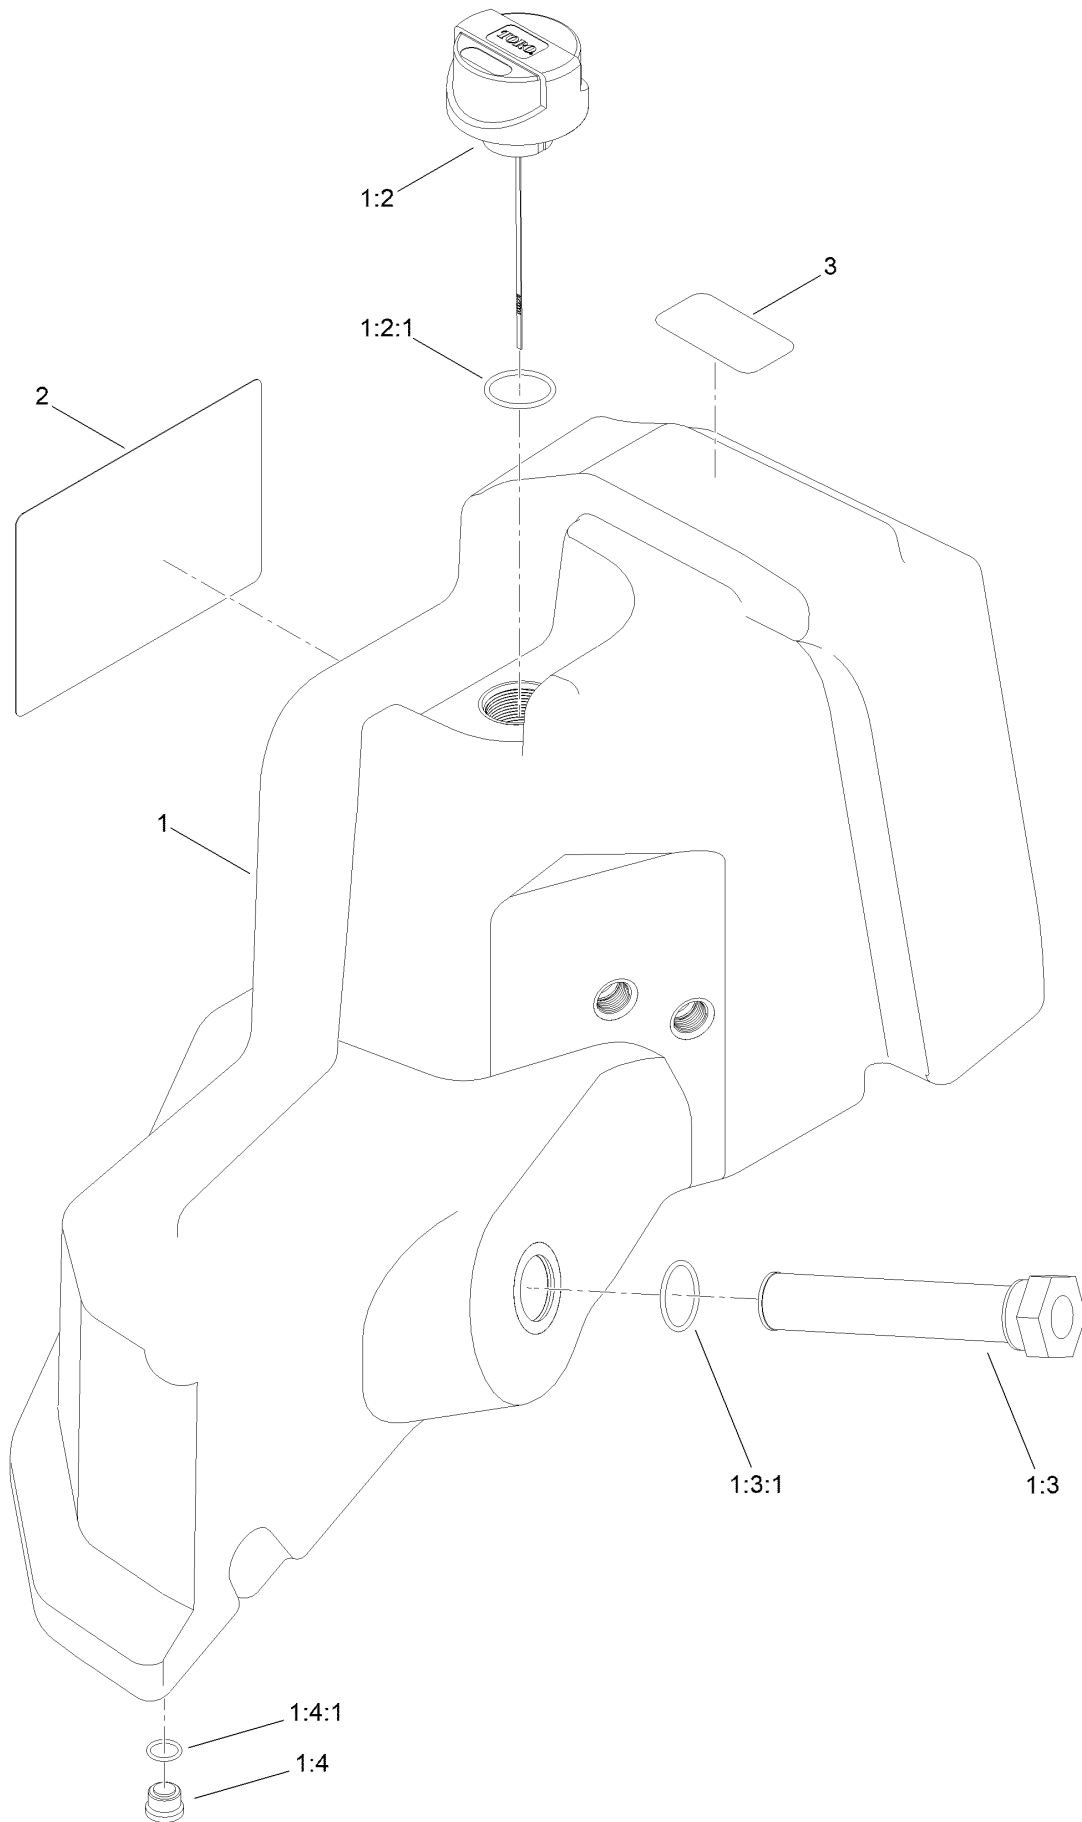


Hydraulic Tank Assembly No. 145-7444SP (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-7444	1	Hydro Tank ASM W/Decals
1:2	117-0193	1	Cap-Hydraulic, Vented Breather
1:2:1	237-101	1	O-Ring
1:3	147-6678	1	Strainer-Hydraulic

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1:3:1	237-101	1	O-Ring
1:4	133-7659	1	Plug ASM W/Magnet
1:4:1	237-79	1	O-Ring
2	145-1776	1	Decal-Field Pro 6040
3	125-8483	1	Decal-HYD Fluid

 
Hydraulic Drive Assembly

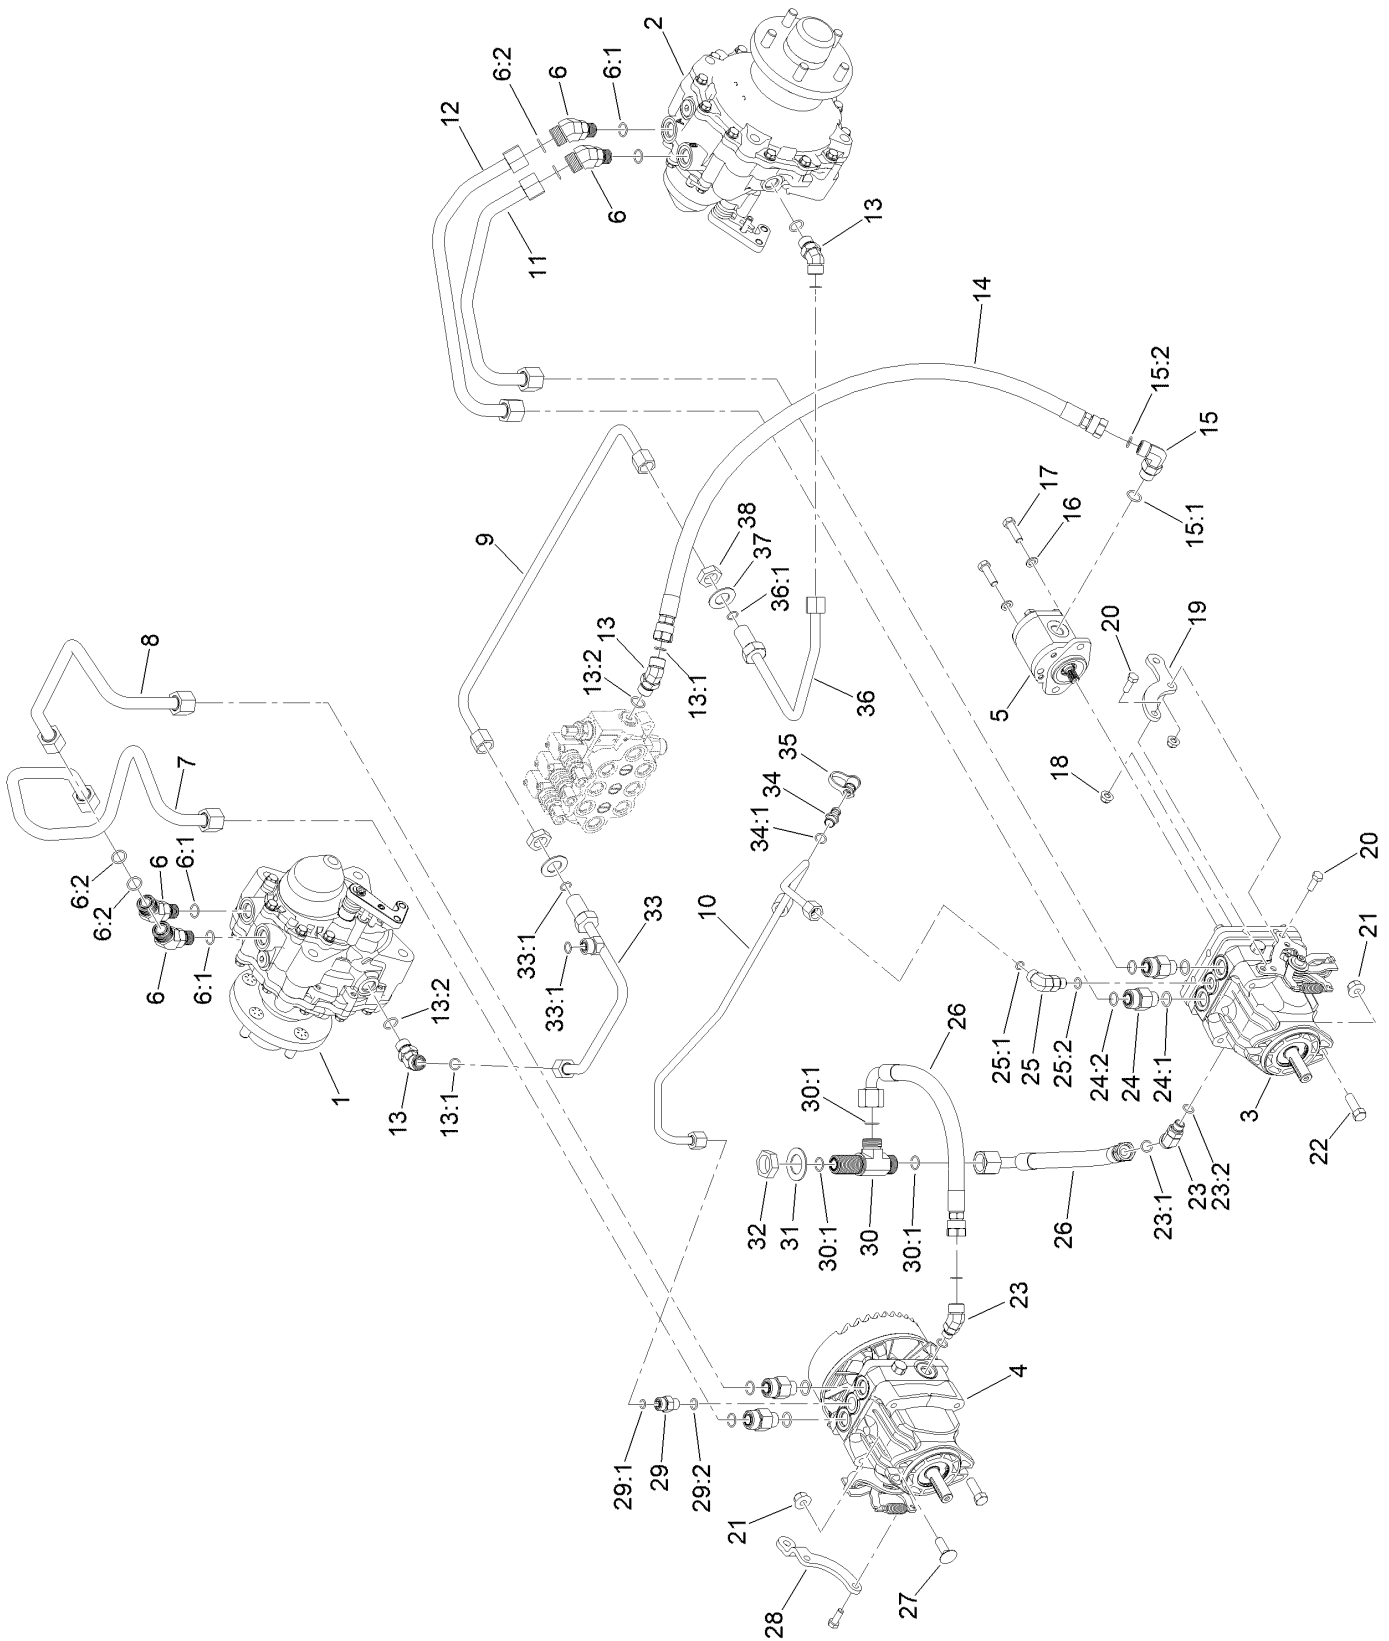

Hydraulic Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-8133	1	Motor-HYD, RH	23	340-96	2	Adapter
2	126-8134	1	Motor-HYD, LH	23:1	237-30	1	O-Ring
3	144-7595	1	Pump-Hydro, LH 16Cc	23:2	237-42	1	O-Ring
4	144-7320	1	Pump-Hydro RH 16Cc W/ Fan	24	340-155	4	Fitting-Straight
5	144-7596	1	HYD Gear Pump ASM	24:1	237-79	1	O-Ring
6	340-55	4	Fitting-HYD, 45 DEG	24:2	237-151	1	O-Ring
6:1	237-79	1	O-Ring	25	340-77	1	Fitting-Elbow, 90 DEG
6:2	237-65	1	O-Ring	25:1	237-22	1	O-Ring
7	147-6662	1	Hydraulic Tube ASM	25:2	237-42	1	O-Ring
8	144-4548	1	Hydraulic Tube ASM	26	144-7286	2	Hydraulic Hose ASM
9	144-7284	1	Hydraulic Tube ASM	27	3232-2	2	Screw-CARR
10	145-2637	1	Hydraulic Tube ASM	28	145-7413	1	Arm-Pump, RH
11	144-4546	1	Hydraulic Tube ASM	29	340-2	1	Fitting-Straight
12	147-6692	1	Hydraulic Tube ASM	29:1	237-22	1	O-Ring
13	340-101	2	Fitting-HYD, 45 DEG	29:2	237-42	1	O-Ring
13:1	237-30	1	O-Ring	30	94-5350	1	Fitting-Tee
13:2	237-79	1	O-Ring	30:1	237-65	3	O-Ring
14	145-2638	1	Hydraulic Hose ASM	31	69-9010	1	Washer
15	340-98	1	Fitting-Elbow, 90 DEG	32	340-74	1	Nut-Lock, Bulkhead
15:1	237-79	1	O-Ring	33	145-2639	1	Hydraulic Tube ASM
15:2	237-30	1	O-Ring	33:1	237-30	2	O-Ring
16	106-5592	2	Spacer-Brake, Parking	34	59-7410	1	Fitting-Diagnostic
17	323-7	2	Screw-HH	34:1	237-42	1	O-Ring
18	104-8300	4	Nut-HF, NI	35	354-79	1	Cap-Dust
19	144-4602	1	Lever, Pump	36	144-4542	1	Hydraulic Tube ASM
20	322-4	4	Screw-HH	36:1	237-30	1	O-Ring
21	114-8417	4	Nut-HF, NI	37	69-8930	2	Washer
22	324-5	4	Screw-HH	38	340-127	2	Nut-Bulkhead

 RH Hydraulic Motor Assembly No. 126-8133

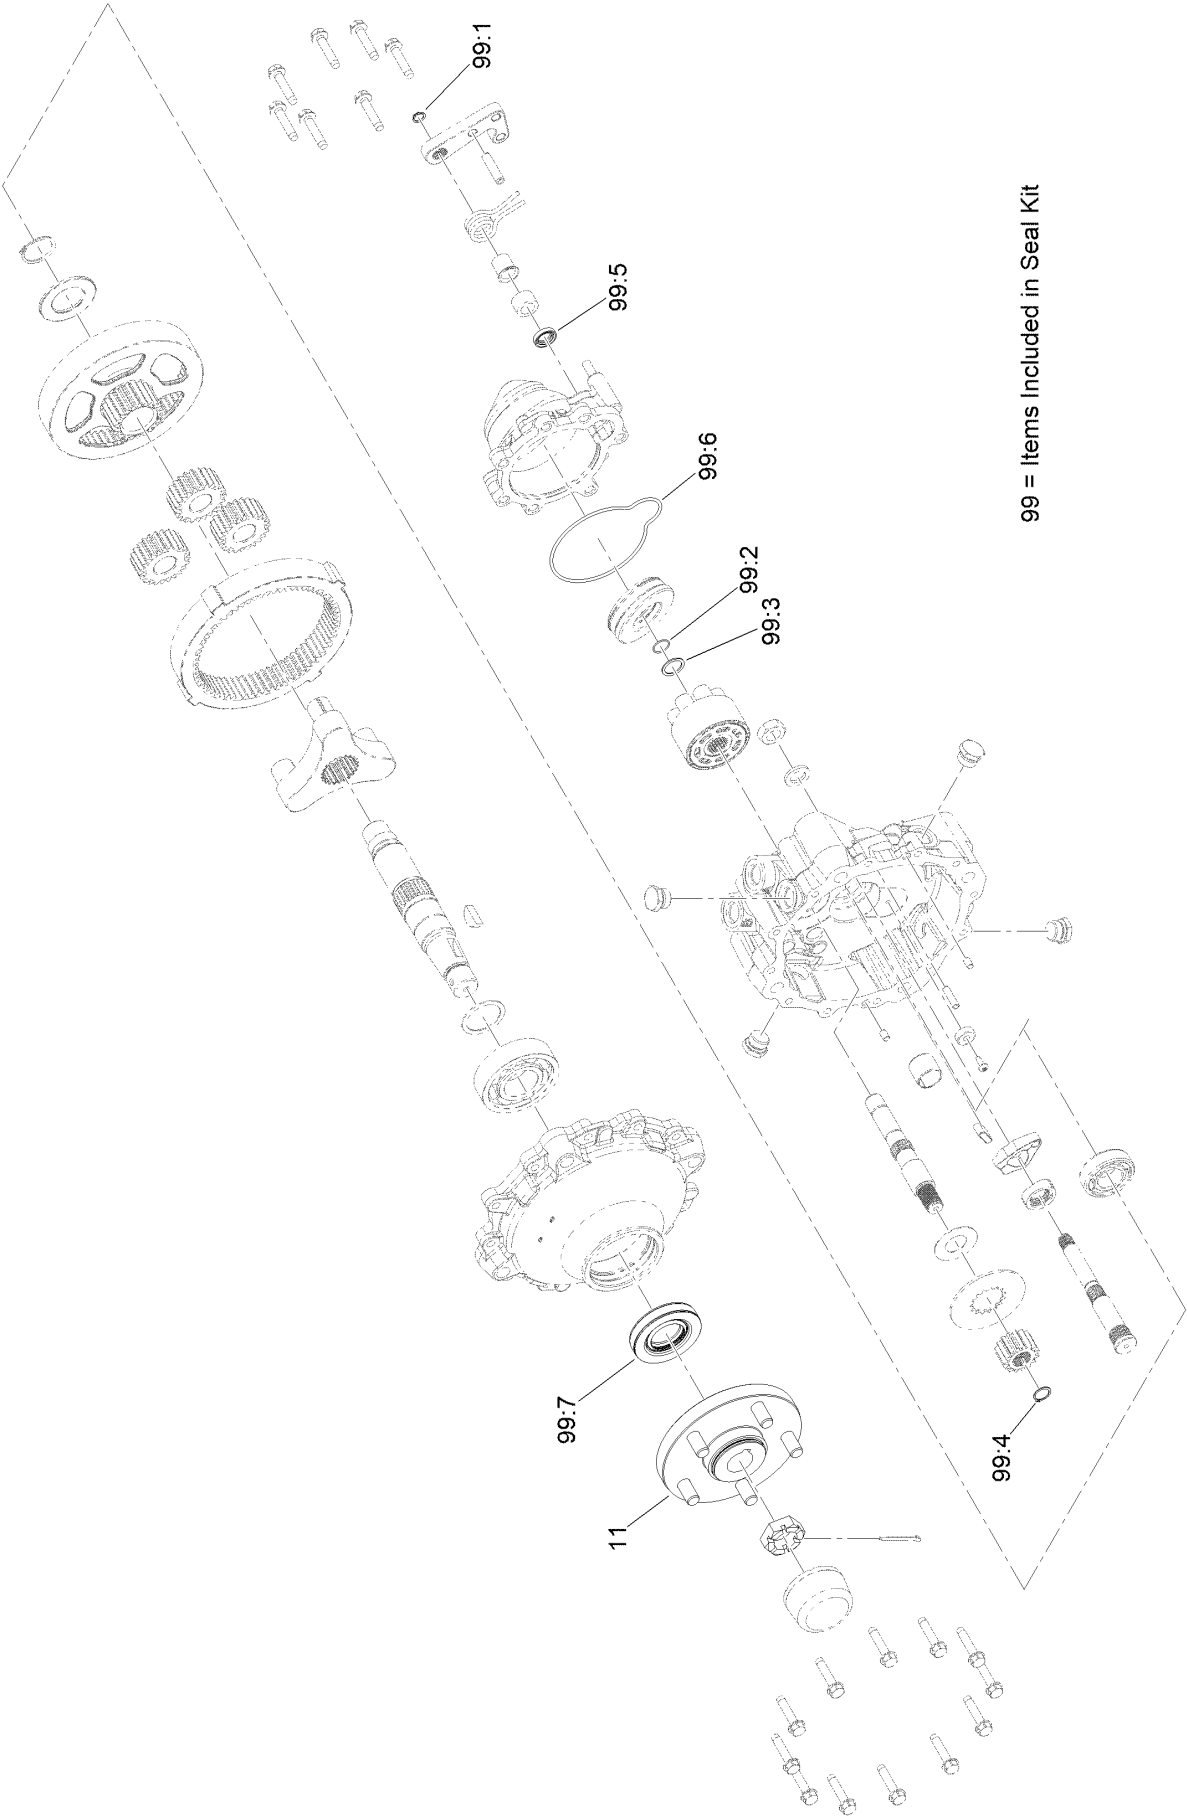


RH Hydraulic Motor Assembly No. 126-8133 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11	135-5333	1	5 Stud Wheel Hub Kit
99	126-0315	1	Seal Kit
99:1	161-0915	1	Retainer Ring
99:2	104-5307	1	Ring-Retaining
99:3	161-0916	1	Washer

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
99:4	104-5340	1	Ring-Retaining
99:5	145-3637	1	Seal, Brake
99:6	161-0917	1	O-Ring, Round
99:7	161-0942	1	Seal, Axle

 
5 Stud Wheel Hub Kit Assembly No. 135-5333

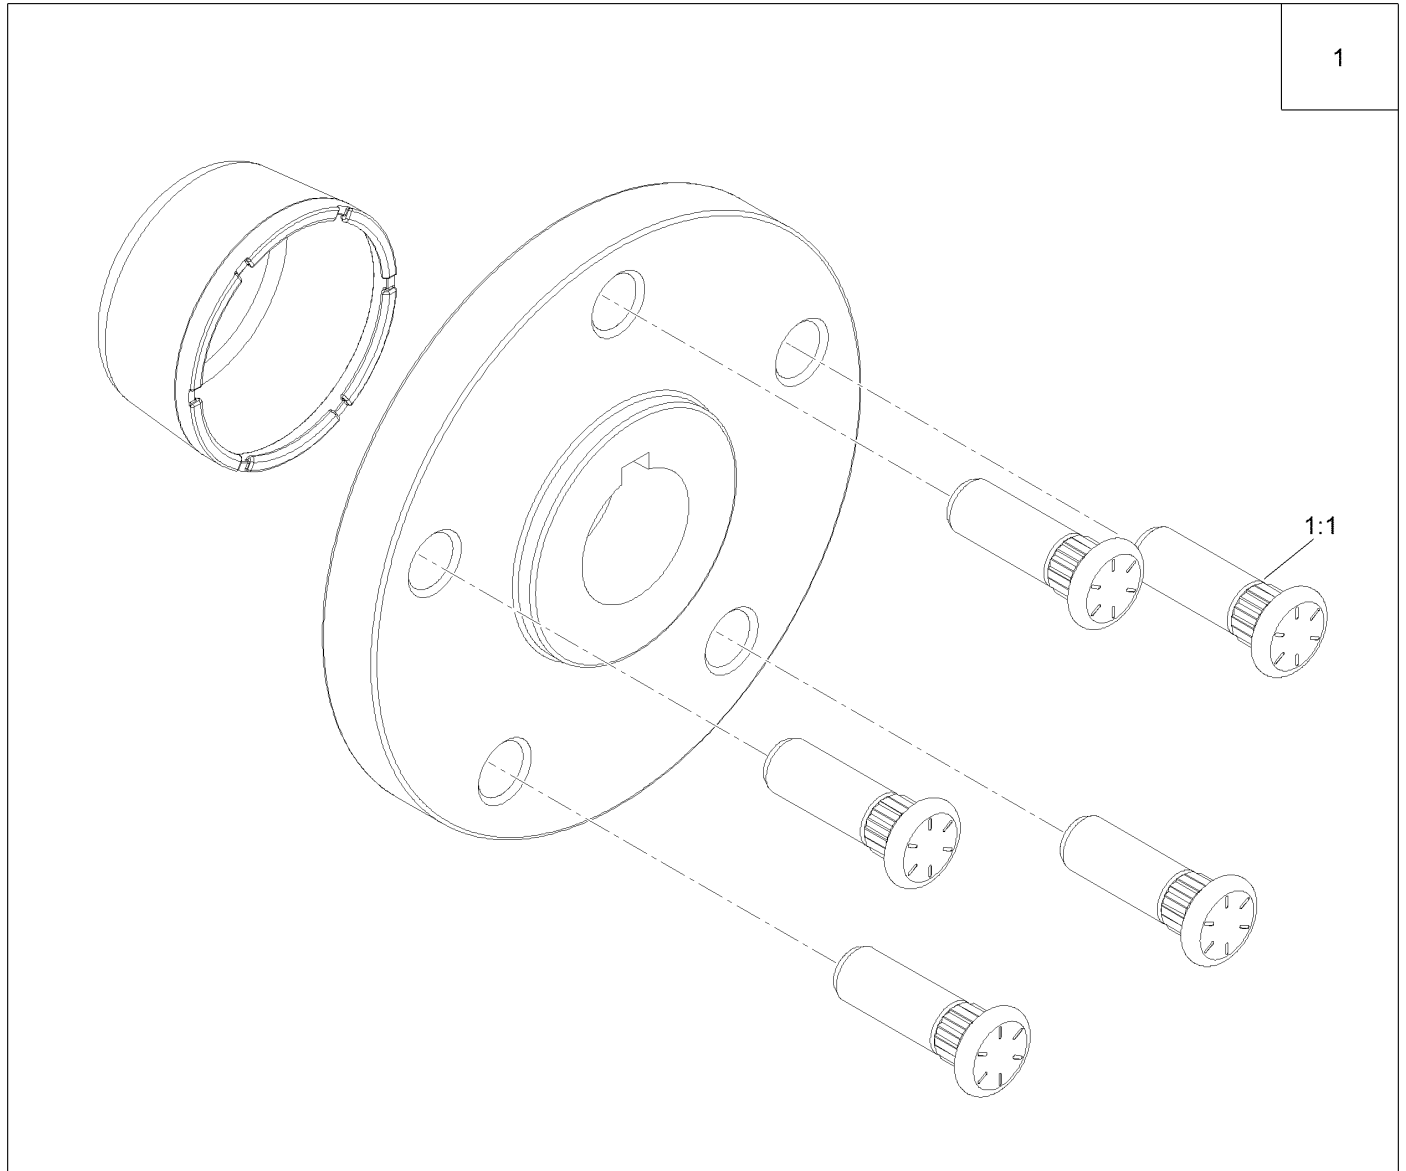

5 Stud Wheel Hub Kit Assembly No. 135-5333 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-5332	1	Wheel Hub ASM
1:1	135-7526	5	Stud-Wheel

 LH Hydraulic Motor Assembly No. 126-8134

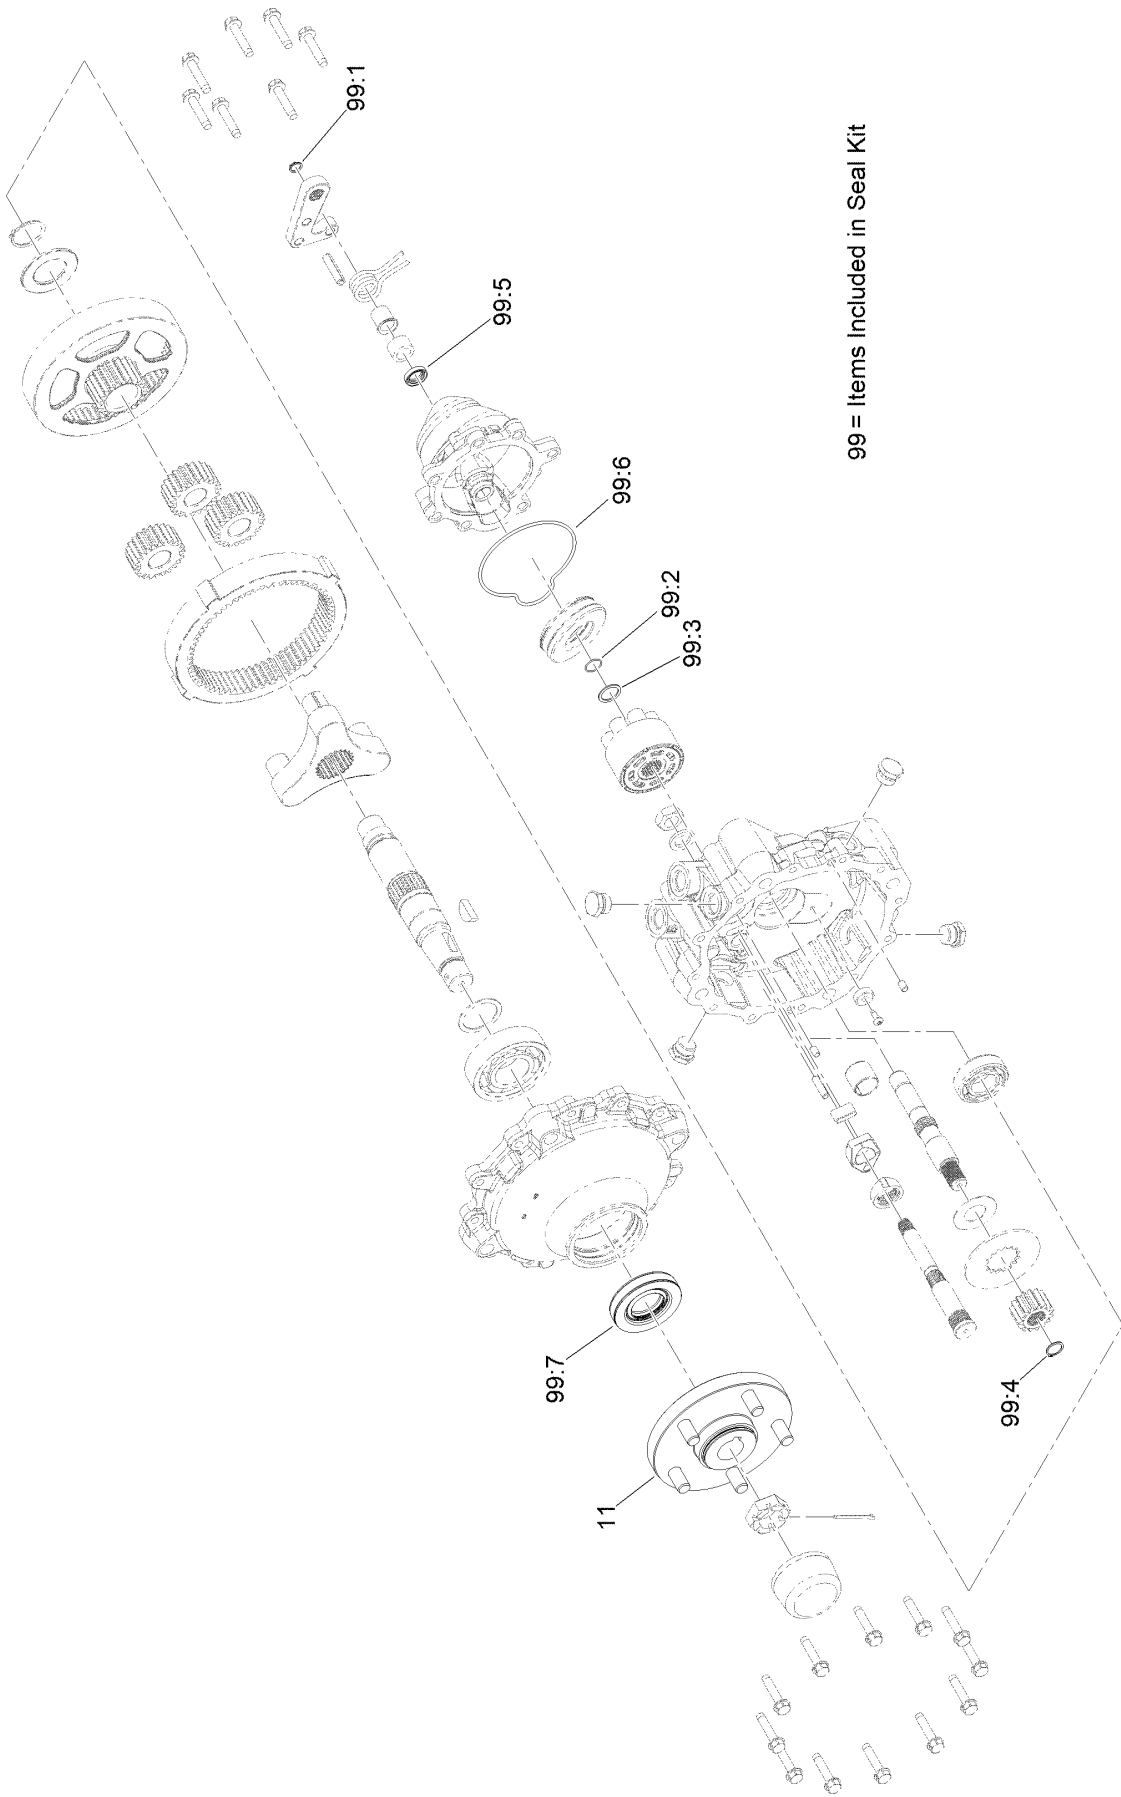


LH Hydraulic Motor Assembly No. 126-8134 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11	135-5333	1	5 Stud Wheel Hub Kit
99	126-0315	1	Seal Kit
99:1	161-0915	1	Retainer Ring
99:2	104-5307	1	Ring-Retaining
99:3	161-0916	1	Washer

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
99:4	104-5340	1	Ring-Retaining
99:5	145-3637	1	Seal, Brake
99:6	161-0917	1	O-Ring, Round
99:7	161-0942	1	Seal, Axle

 LH Hydraulic Motor Assembly No. 144-7595

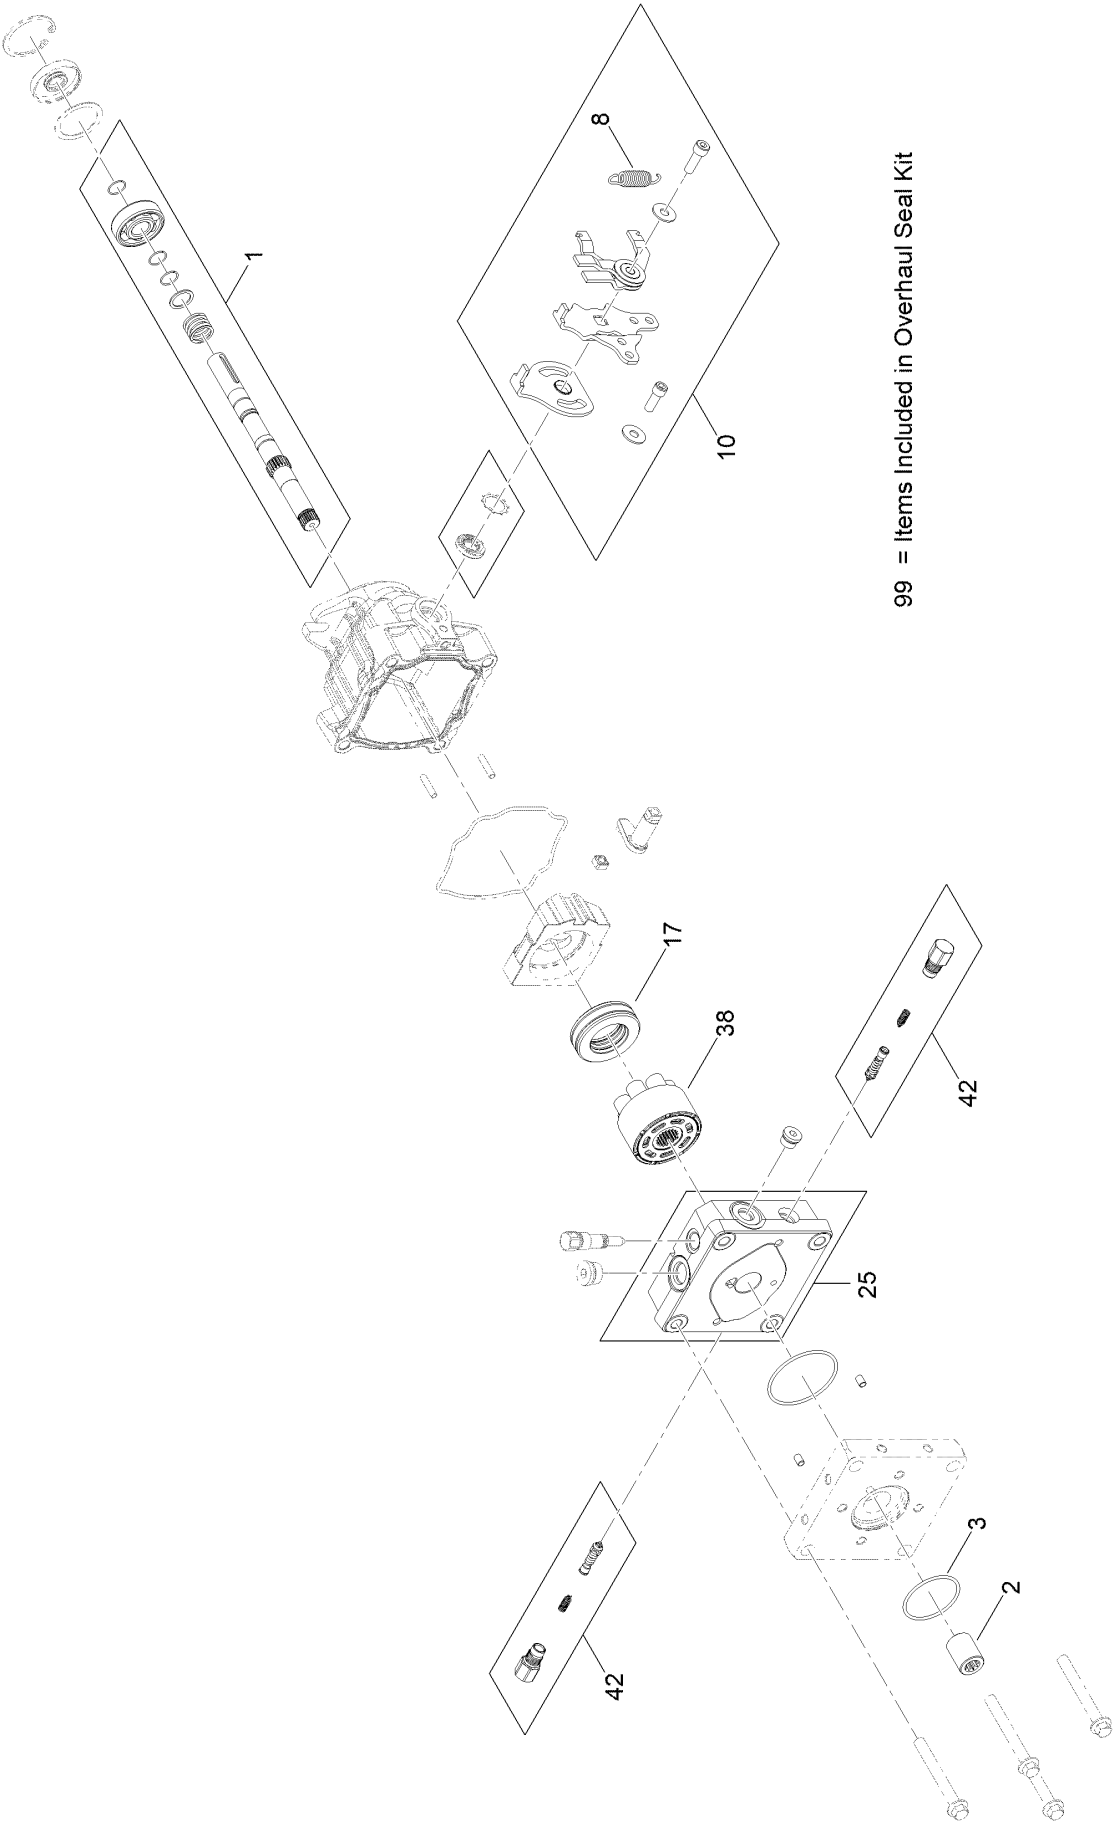


99 = Items Included in Overhaul Seal Kit

LH Hydraulic Motor Assembly No. 144-7595 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-0904	1	Input Shaft
2	108-6843	1	Coupling
3	161-9699	1	O-Ring
8	125-4684	1	Spring-Extension
10	161-0902	1	Rtn Kit

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
17	161-0900	1	Thrust Bearing
25	161-0903	1	End Cap Kit
38	120-1092	1	Cylinder Block Kit
42	131-4753	1	Shock Valve Kit
99	112-4150	1	Overhaul Seal Kit

 
RH Hydraulic Pump Assembly No. 144-7320

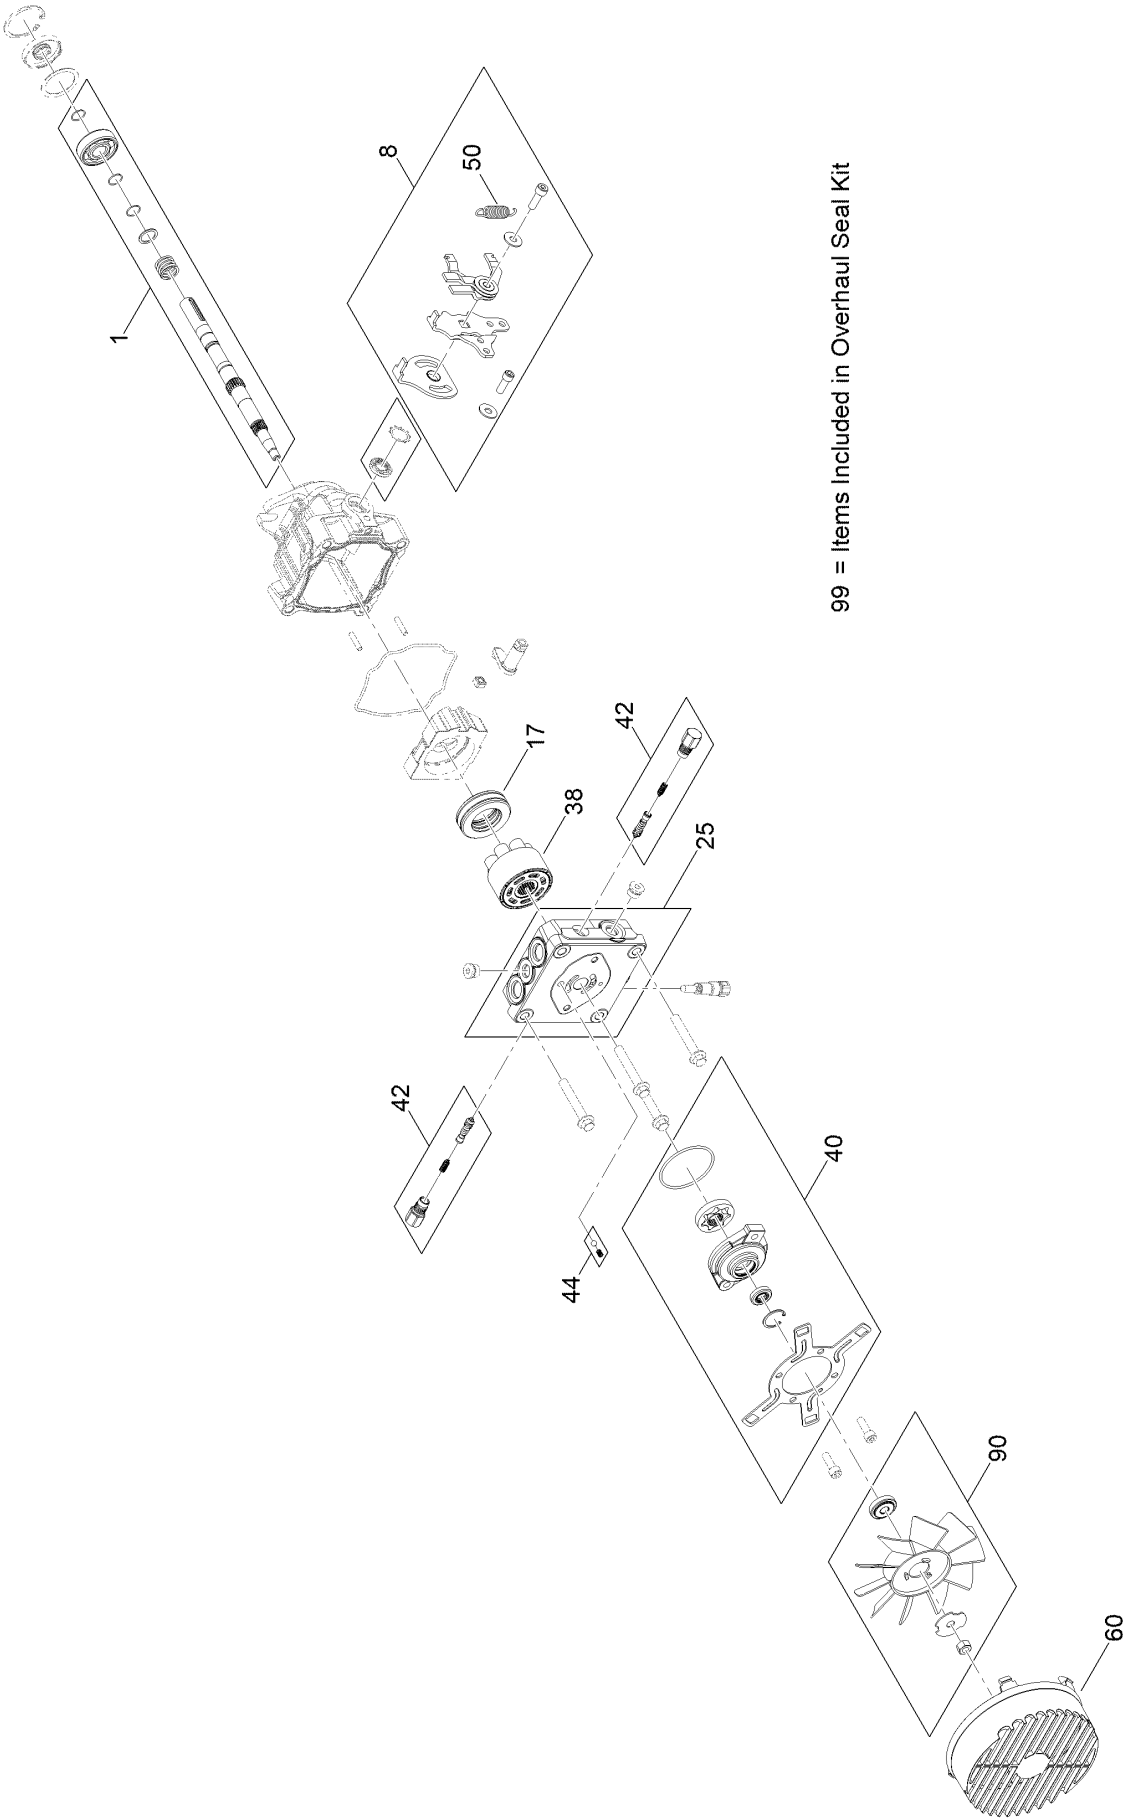

RH Hydraulic Pump Assembly No. 144-7320 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	109-2863	1	Bearing, Input Shaft Pr	42	131-4753	1	Shock Valve Kit
8	161-0902	1	Rtn Kit	44	136-6150	1	Charge Relief Kit
17	161-0900	1	Thrust Bearing	50	125-4684	1	Spring-Extension
25	161-0901	1	End Cap Kit	60	103-7489	1	Guard, Pw Pump Fan
38	120-1092	1	Cylinder Block Kit	90	135-9175	1	Hydro Pump Fan
40	138-4625	1	Charge Pump Kit	99	109-2866	1	Pr Overhaul Seal Kit

 Hydraulic Gear Pump Assembly No. 144-7596

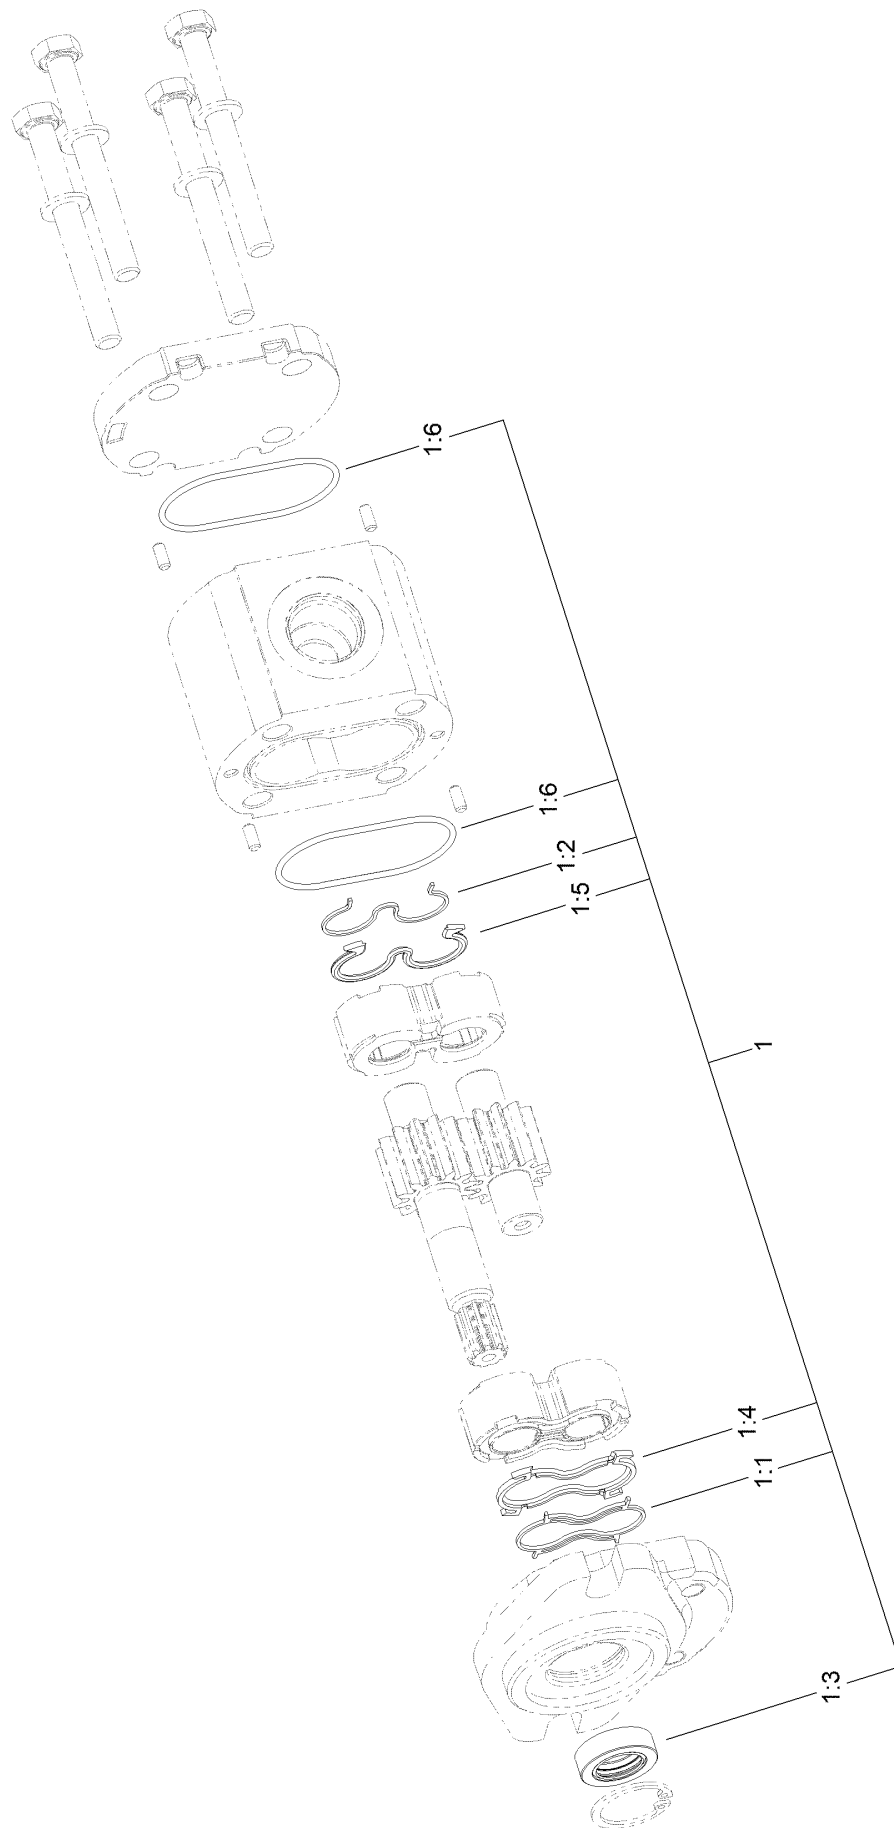


Hydraulic Gear Pump Assembly No. 144-7596 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-0199	1	Seal Kit
1:1		1	Seal-Anti Extrusion ●
1:2		1	Seal-Anti Extrusion ●
1:3		1	Seal-Shaft ●

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1:4		1	Seal-Upper ●
1:5		1	Seal ●
1:6		2	O-Ring ●

● Not serviced separately

 
Hydraulic Control Assembly

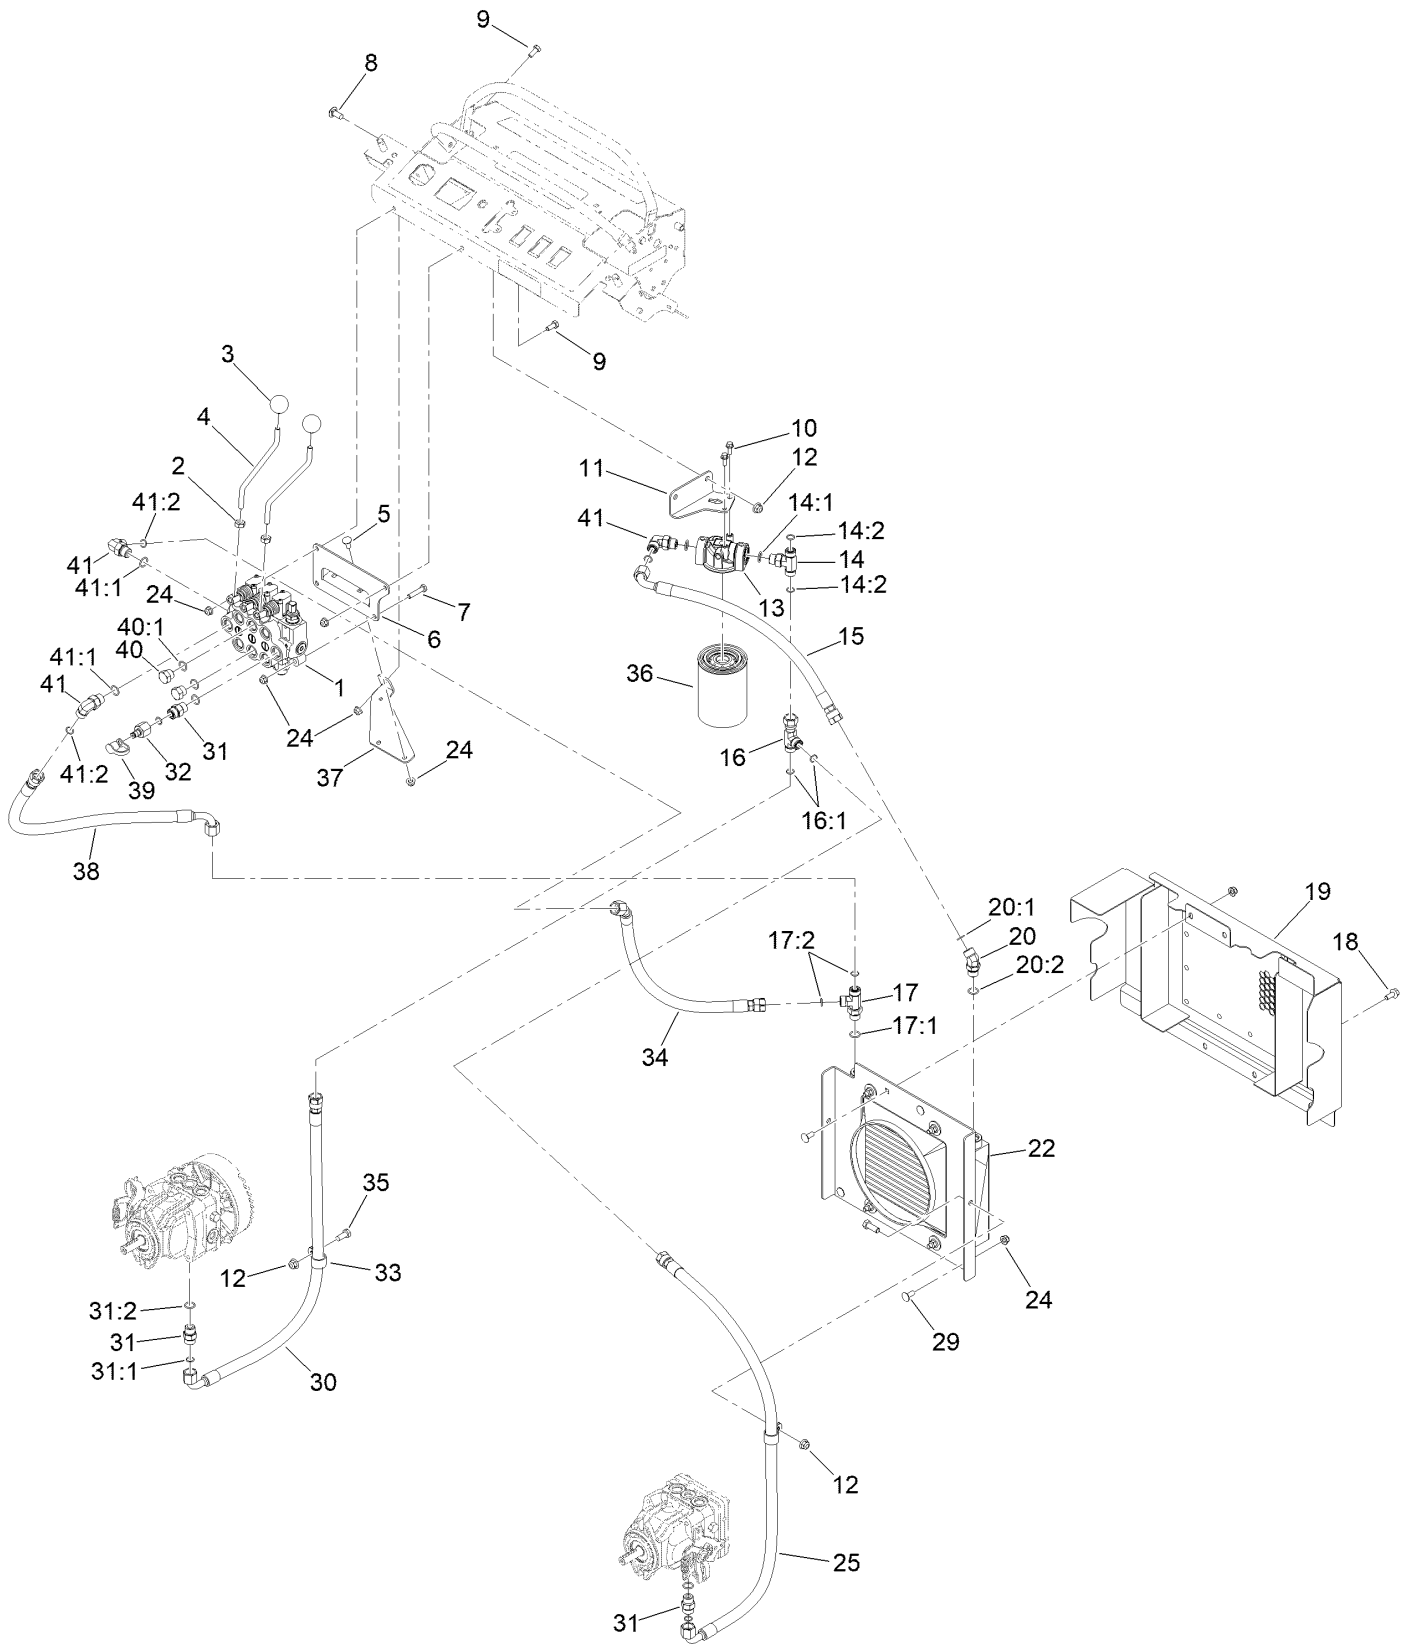

Hydraulic Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-7304	1	Valve-Control	20:1	237-30	1	O-Ring
2	33015-00	2	Nut-Hex	20:2	237-79	1	O-Ring
3	144-7313	2	Knob-Ball	22	147-6667	1	Oil Cooler ASM
4	144-7311	2	Handle-Valve, Control	24	104-8300	11	Nut-HF, NI
5	137-3061	2	Bolt-CARR	25	144-7317	1	Hydraulic Hose ASM
6	144-7629-03	1	Bracket-Mount, Joystick	29	3230-23	4	Bolt-CARR
7	120-2779	3	Screw-HH	30	144-7300	1	Hydraulic Hose ASM
8	3231-27	2	Screw-CARR	31	340-4	3	Fitting-Straight
9	137-3052	2	Screw-HH	31:1	237-30	1	O-Ring
10	3234-4	2	Screw-HHF	31:2	237-79	1	O-Ring
11	144-7295-01	1	Bracket-Filter	32	100-5616	1	Fitting
12	104-8301	4	Nut-HF, NI	33	2412-39	2	Clamp-R
13	87-8780	1	Head-Filter	34	144-7632	1	Hydraulic Hose ASM
14	340-157	1	Fitting-HYD, Tee	35	323-6	2	Screw-HH
14:1	237-79	1	O-Ring	36	86-3010	1	Filter-Oil
14:2	237-30	2	O-Ring	37	144-7630-03	1	Bracket-Support, Joystick
15	144-7301	1	Hydraulic Hose ASM	38	144-7637	1	Hydraulic Hose ASM
16	340-104	1	Fitting-Tee	39	354-79	1	Cap-Dust
16:1	237-30	2	O-Ring	40	353-550	2	Plug-HYD, HH
17	340-109	1	Fitting-Tee	40:1	237-79	1	O-Ring
17:1	237-79	1	O-Ring	41	340-98	3	Fitting-Elbow, 90 DEG
17:2	237-30	2	O-Ring	41:1	237-79	1	O-Ring
18	3234-47	2	Screw-HHF	41:2	237-30	1	O-Ring
19	147-6650-03	1	Firewall				
20	340-101	1	Fitting-HYD, 45 DEG				

 
Oil Cooler Assembly

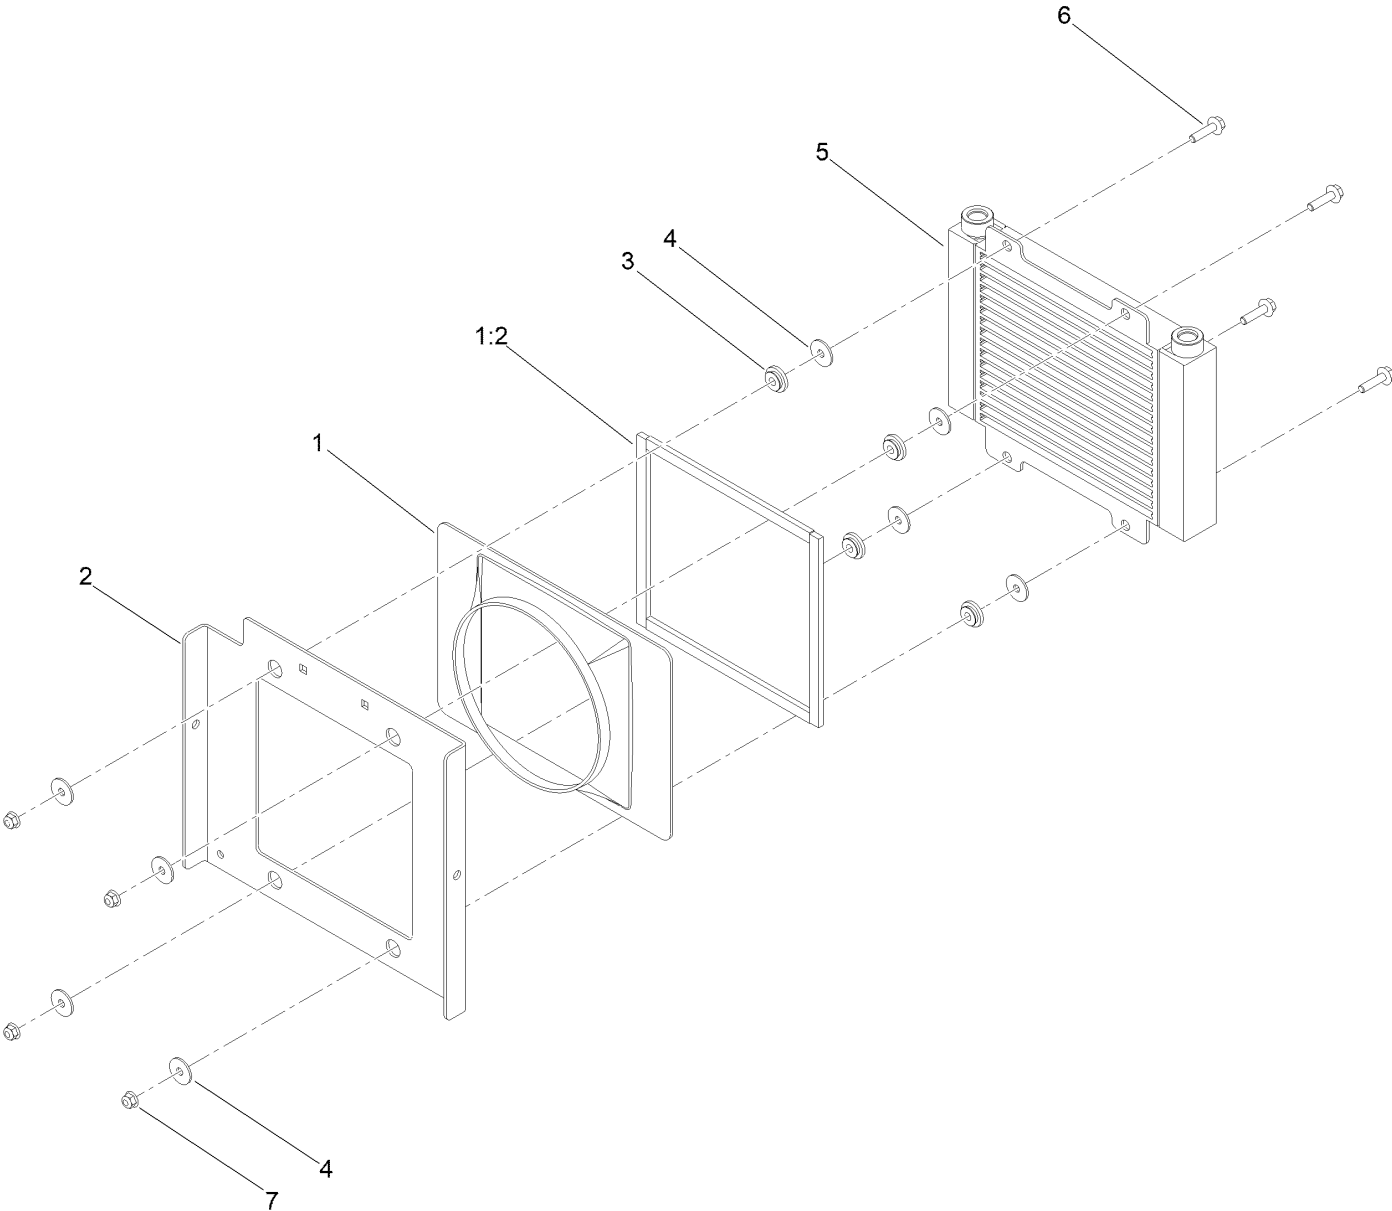

Oil Cooler Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-6669	1	Shroud ASM W/Seals	4	5-4460	8	Washer-Pivot
1:2	147-3314	4	Seal-Foam	5	147-6648	1	Cooler-Oil
2	147-6666-03	1	Bracket-Shroud	6	132-3837	4	Screw-HHF
3	147-6663	4	Mount	7	104-8300	4	Nut-HF, NI

 
Hydraulic Lift Circuit Plumbing Assembly

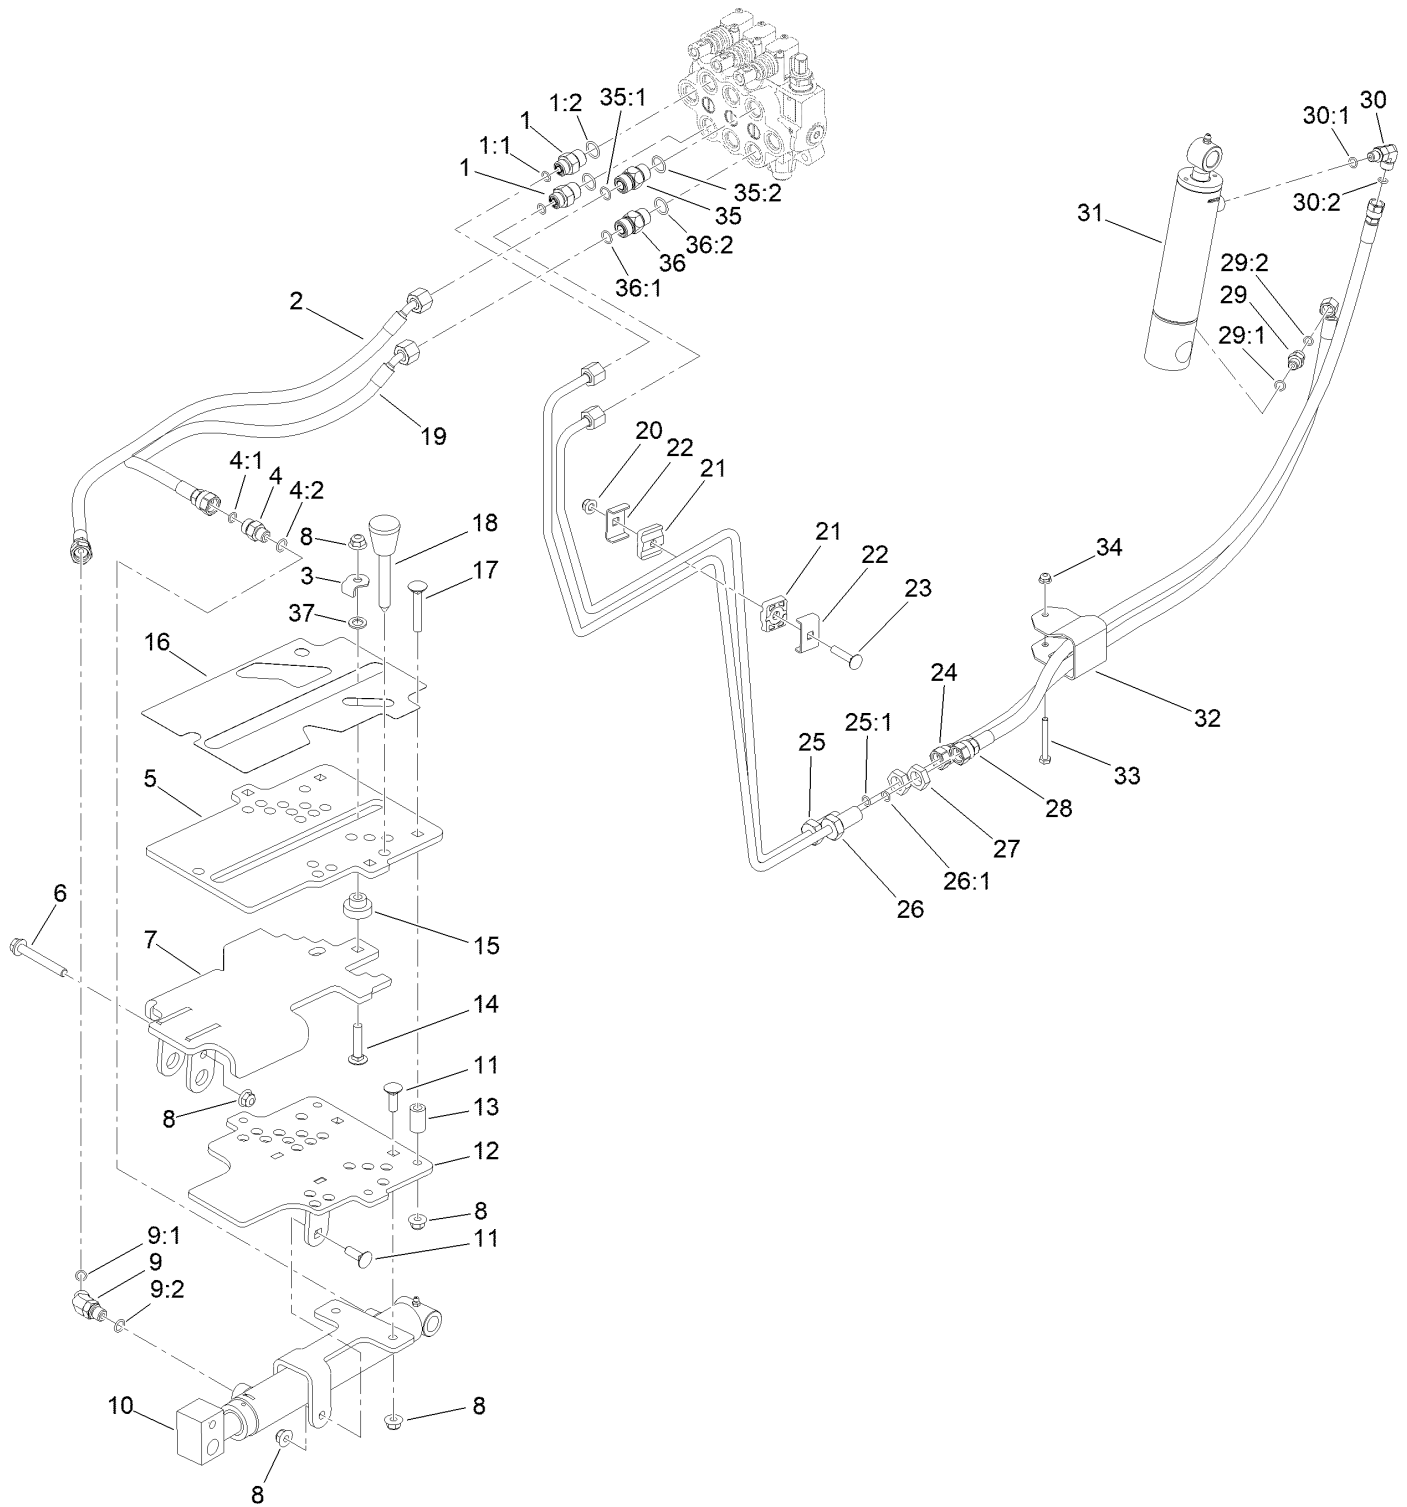

Hydraulic Lift Circuit Plumbing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-3321	2	Fitting-Straight	22	119-1418	2	Plate-Clamp, Short
1:1	237-22	1	O-Ring	23	3230-4	1	Screw-CARR
1:2	237-79	1	O-Ring	24	145-2627	1	Hydraulic Hose ASM
2	147-3328	1	Hydraulic Hose ASM	25	144-7310	1	Hydraulic Tube ASM
3	145-7412	1	Bracket-Indicator	25:1	237-22	1	O-Ring
4	340-2	1	Fitting-Straight	26	144-7309	1	Hydraulic Tube ASM
4:1	237-22	1	O-Ring	26:1	237-22	1	O-Ring
4:2	237-42	1	O-Ring	27	340-70	2	Nut-Lock
5	145-4226-03	1	Plate-Gauge, Depth	28	145-2626	1	Hydraulic Hose ASM
6	133-9682	1	Screw-Hfh	29	340-92	1	Fitting-Straight
7	145-4238-03	1	Stop-Depth	29:1	237-78	1	O-Ring
8	104-8301	10	Nut-HF, NI	29:2	237-21	1	O-Ring
9	340-87	1	Fitting-Elbow, 45 DEG	30	340-132	1	Fitting-Elbow, 90 DEG
9:1	237-22	1	O-Ring	30:1	237-78	1	O-Ring
9:2	237-42	1	O-Ring	30:2	237-21	1	O-Ring
10	145-4233	1	Cylinder-Lift	31	115-5647	1	HYD Lift Cylinder ASM
11	139-2590	4	Screw-CARR	32	147-3313-03	1	Guide-Hose
12	145-4223-03	1	Gauge-Depth	33	321-16	1	Screw-HH
13	93-6981	4	Spacer	34	104-7201	1	Nut-HF, NI
14	3231-5	1	Screw-CARR	35	147-3319	1	Fitting-Straight
15	145-7419	1	Bushing-Delrin	35:1	237-30	1	O-Ring
16	145-7379	1	Decal - Depth, Gauge	35:2	237-79	1	O-Ring
17	3231-7	4	Screw-CARR	36	147-3320	1	Fitting-Straight
18	126-5401	2	Pin-HOC	36:1	237-30	1	O-Ring
19	147-3329	1	Hydraulic Hose ASM	36:2	237-79	1	O-Ring
20	104-8300	1	Nut-HF, NI	37	106-5592	1	Spacer-Brake, Parking
21	56-7973	2	Clamp-Tube				

 Hydraulic Cylinder Assembly No. 145-4233

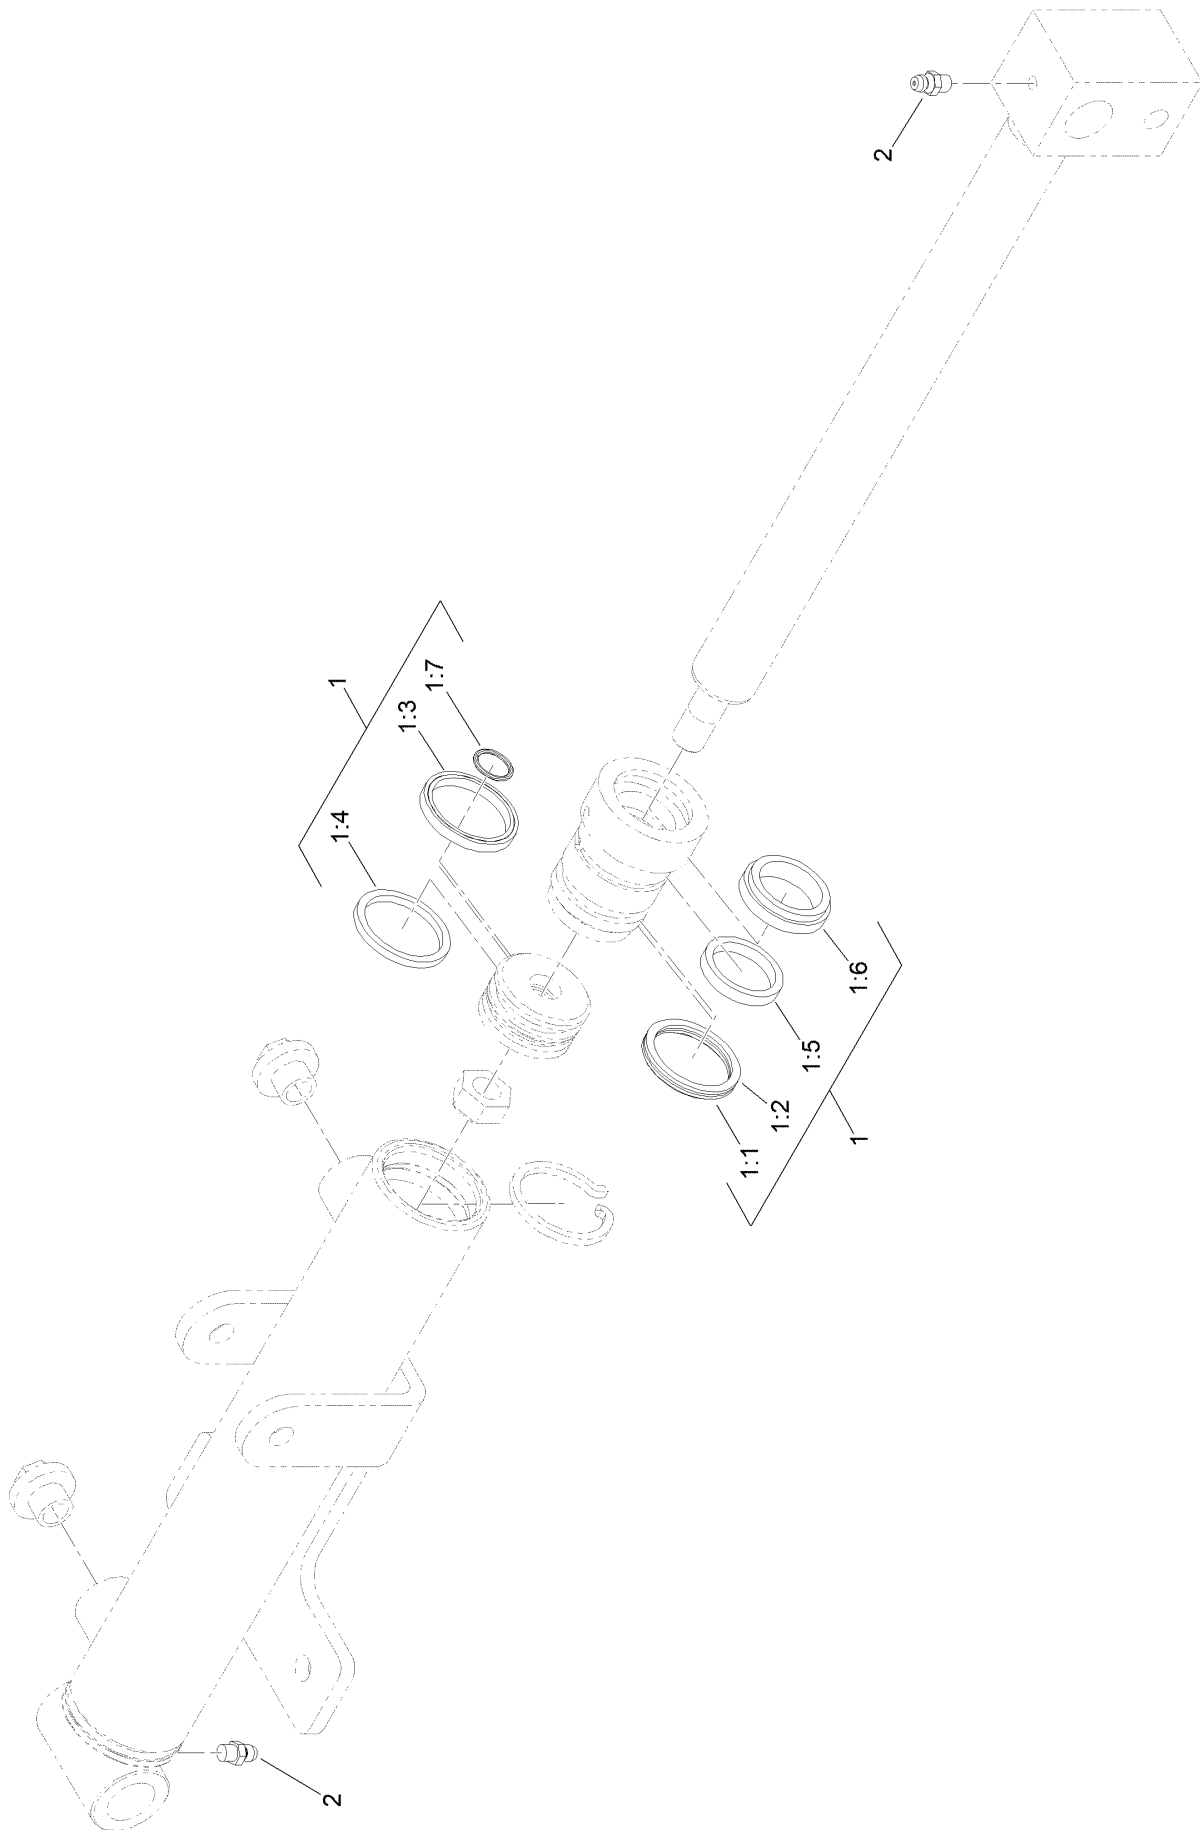

Hydraulic Cylinder Assembly No. 145-4233 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-7318	1	Cylinder Repair Kit
1:1		1	O-Ring ●
1:2		1	Backup ●
1:3		1	Psp Seal ●
1:4		1	Wear Ring-Ht ●

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1:5		1	Bt Seal ●
1:6		1	Dust Seal ●
1:7		1	O-Ring ●
2	302-5	2	Fitting-Grease

● Not serviced separately


Hydraulic Lift Cylinder Assembly No. 115-5647 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	108-4597	1	Seal Kit
6:1		1	O-Ring ●
6:2		1	O-Ring ●
6:3		1	Ring-Back Up ●

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6:4	302-5	1	Seal-Psp ●
6:5		1	Seal-Rod ●
6:6		1	Seal-Dust ●
8		1	Fitting-Grease

● Not serviced separately

 
Electrical Assembly

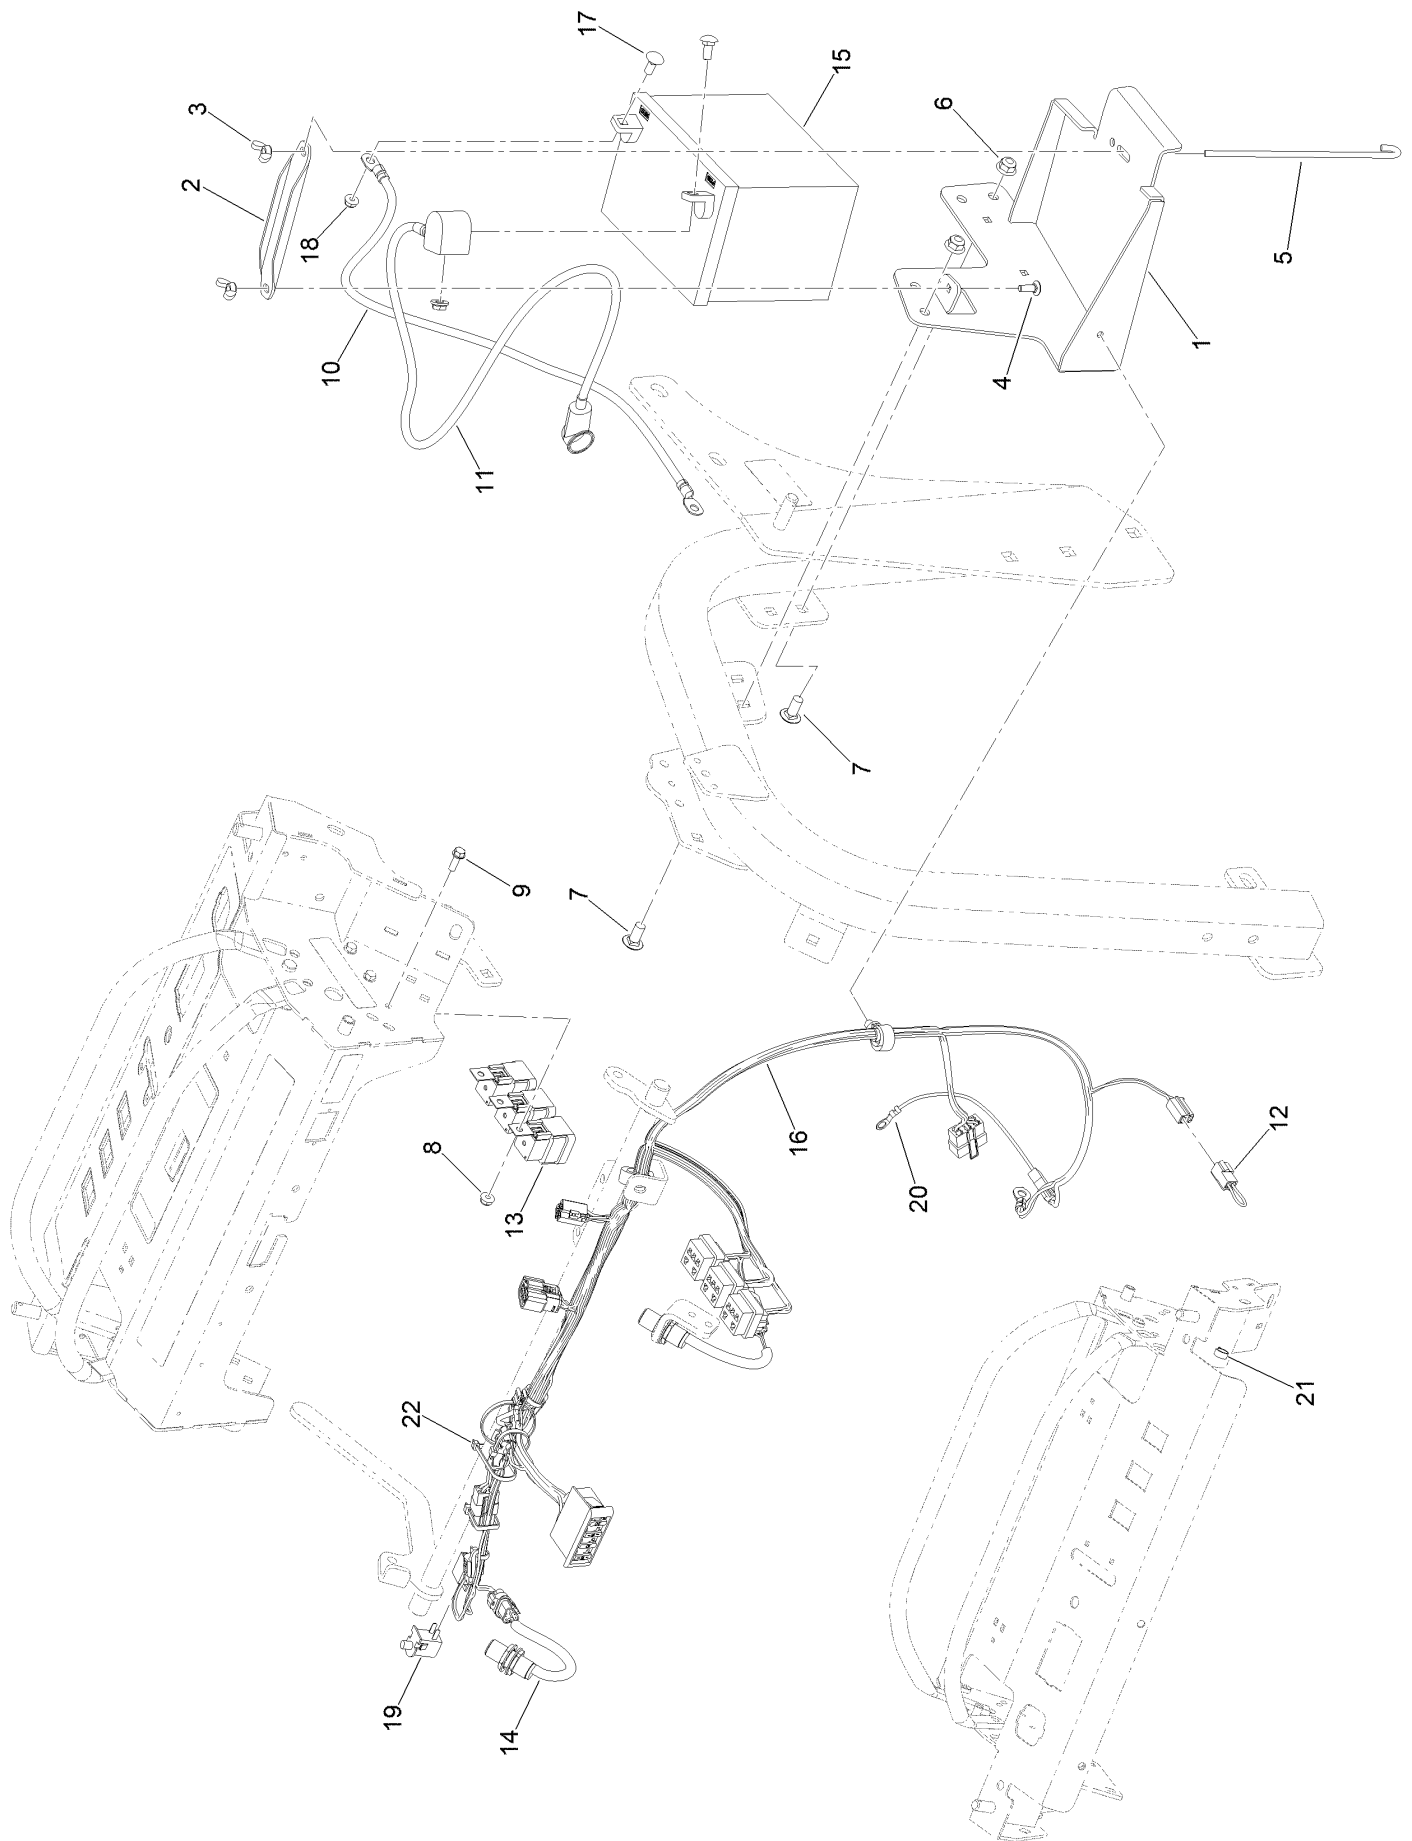

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-7692-03	1	Bracket-Mount, Battery	12	122-2452	1	Harness Wire, Jumper
2	144-7169-03	1	Bracket, Tie-Down	13	99-7430	3	Relay-Mini
3	32103-22	2	Nut-Wing	14	139-7238	2	Sensor-Proximity, N.O.
4	1-807512	1	Bolt-CARR	15	104-4657	1	Battery - Wet, 12V, 350 CCA
5	1-633651	1	Bolt-Holddown	16	122-4226	1	Harness-Wire, Main
6	104-8301	4	Nut-HF, NI	17	3230-1	2	Bolt-CARR
7	3231-27	4	Screw-CARR	18	32128-20	2	Nut-HF
8	104-7201	3	Nut-HF, NI	19	82-2190	1	Switch-Bail
9	32105-15	3	Screw-HWH	20	108-9455	1	Harness-Wire, Fusible Link
10	106-8946	1	Cable-Battery, Negative	21	32180-149	1	Tie-Button Head
11	106-8945	1	Cable-Battery, Positive	22	3290-378	1	Tie-Cable

 Wire Harness Assembly No. 122-4226

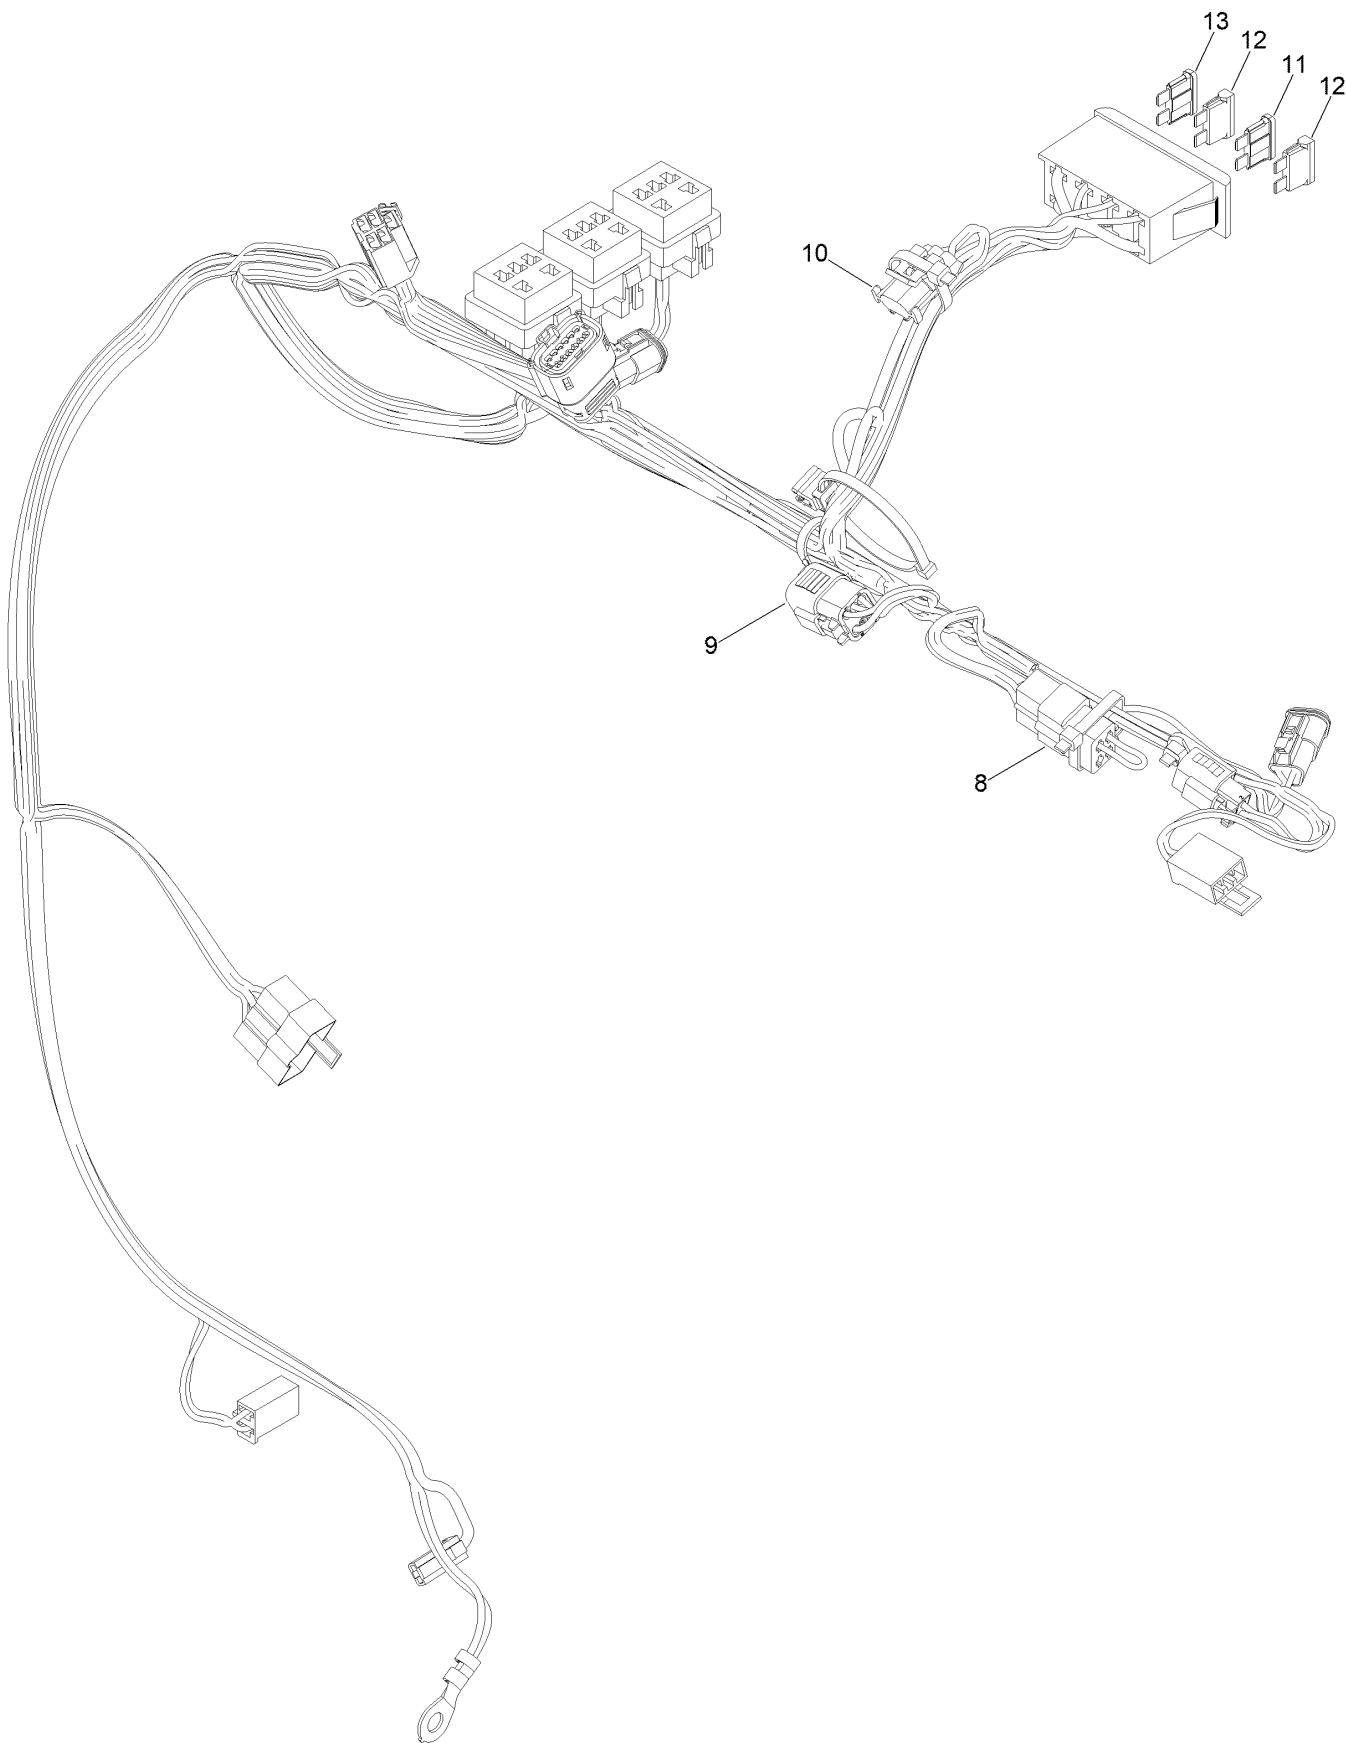


Wire Harness Assembly No. 122-4226 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
8	32180-091	1	Cap-Dust, 2 Way
9	32180-156	1	Cap-Plug, 6 Way
10	32180-056	1	Cap

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11	218-578	1	Fuse-Blade, 10 Amp
12	109355	2	Fuse-Blade, 15 Amp
13	109101	1	Fuse-Blade, 20 Amp

 
Telematics Gateway Assembly

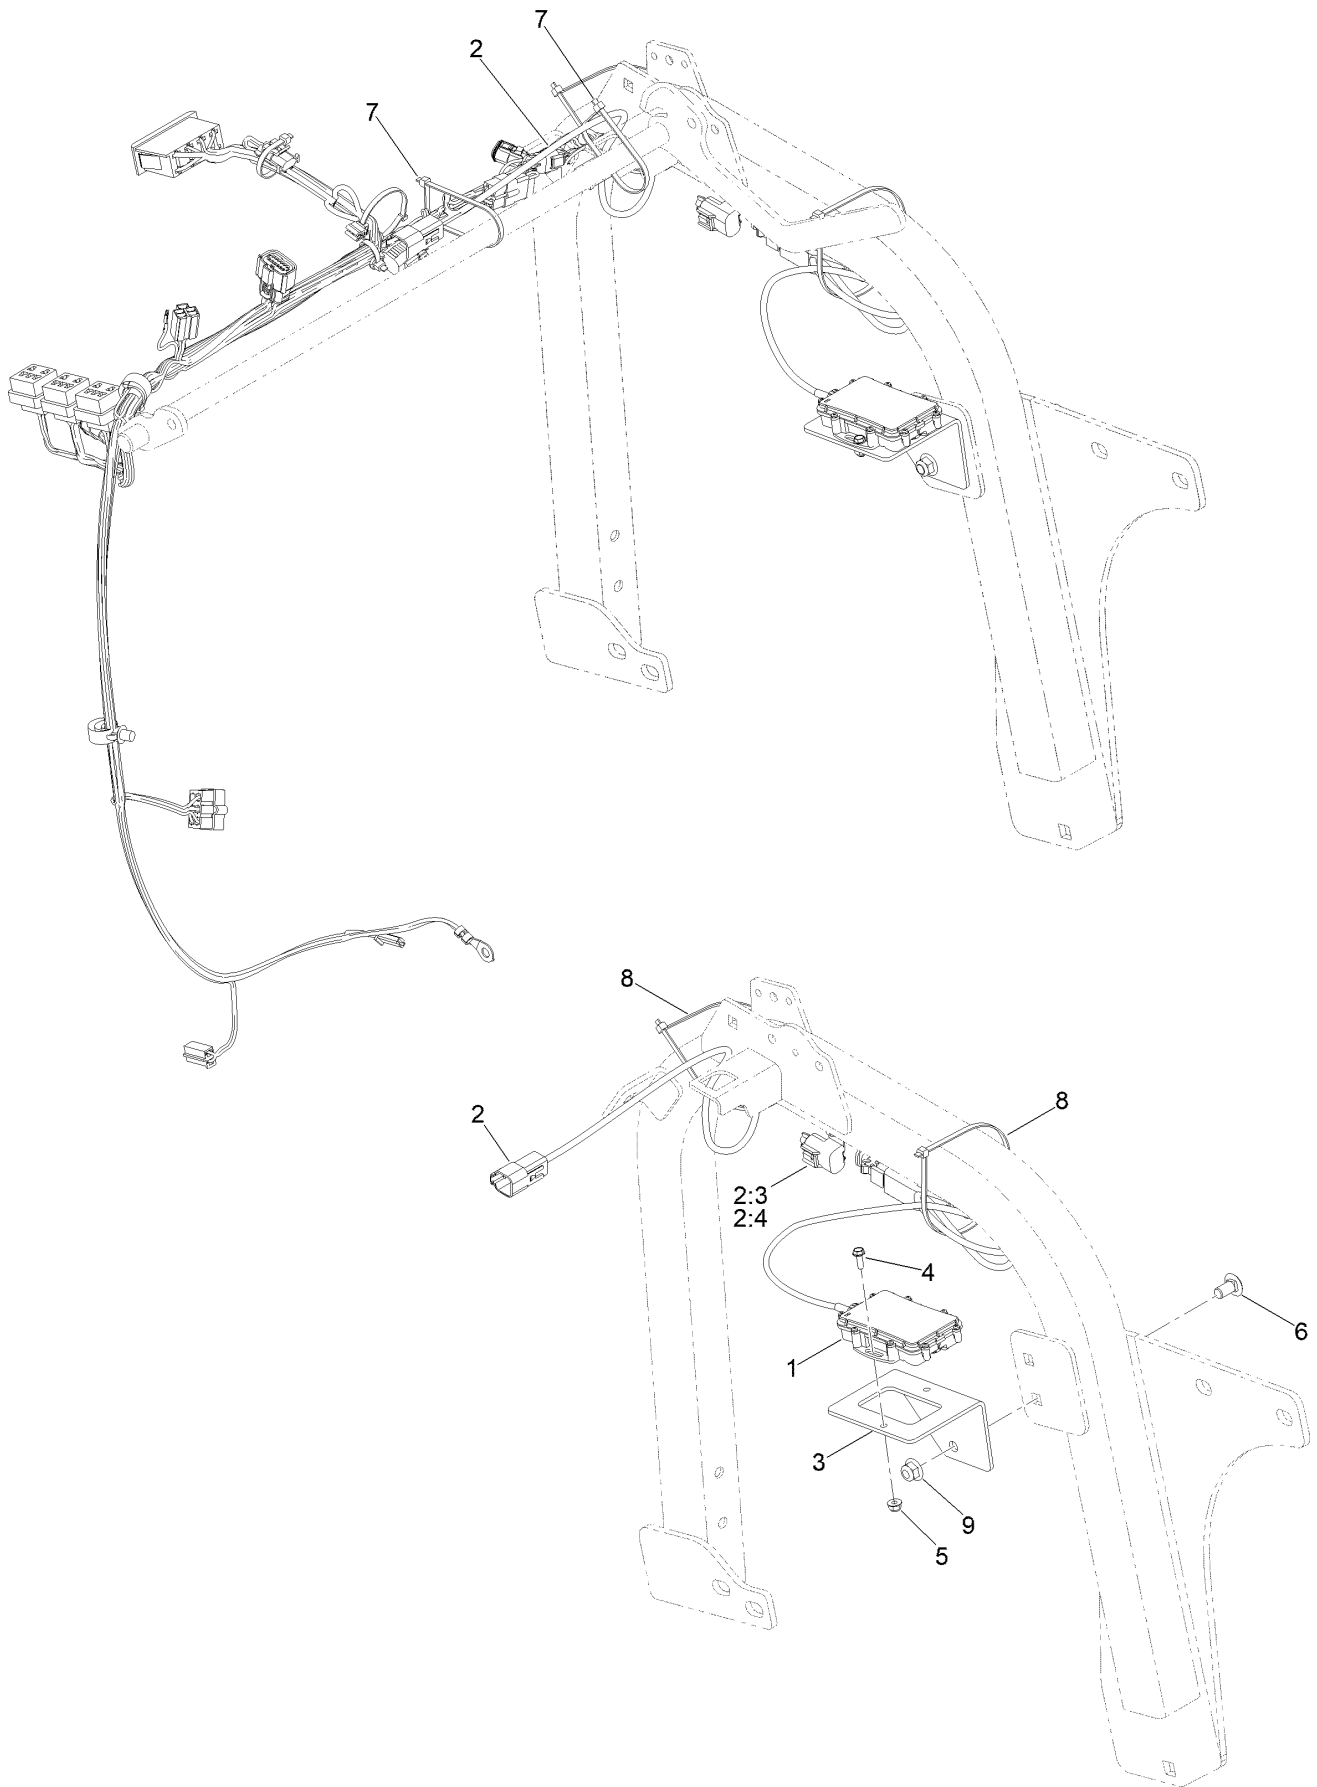

Telematics Gateway Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	122-3876	1	Gateway-Telematics Lite	5	138-0719	2	Nut-HF
2	122-2160	1	Harness-Wire	6	3231-21	2	Screw-CARR
2:3	121-8861	1	Fuse-Mini Blade, 2 Amp	7	3290-378	2	Tie-Cable
2:4	32180-101	1	Cover-Fuse, Single	8	3290-379	2	Tie-Cable
3	163-1623-03	1	Bracket-Telematic	9	104-8301	2	Nut-HF, NI
4	137-3030	2	Screw-HWH				

 
Engine, Belt and Muffler Assembly

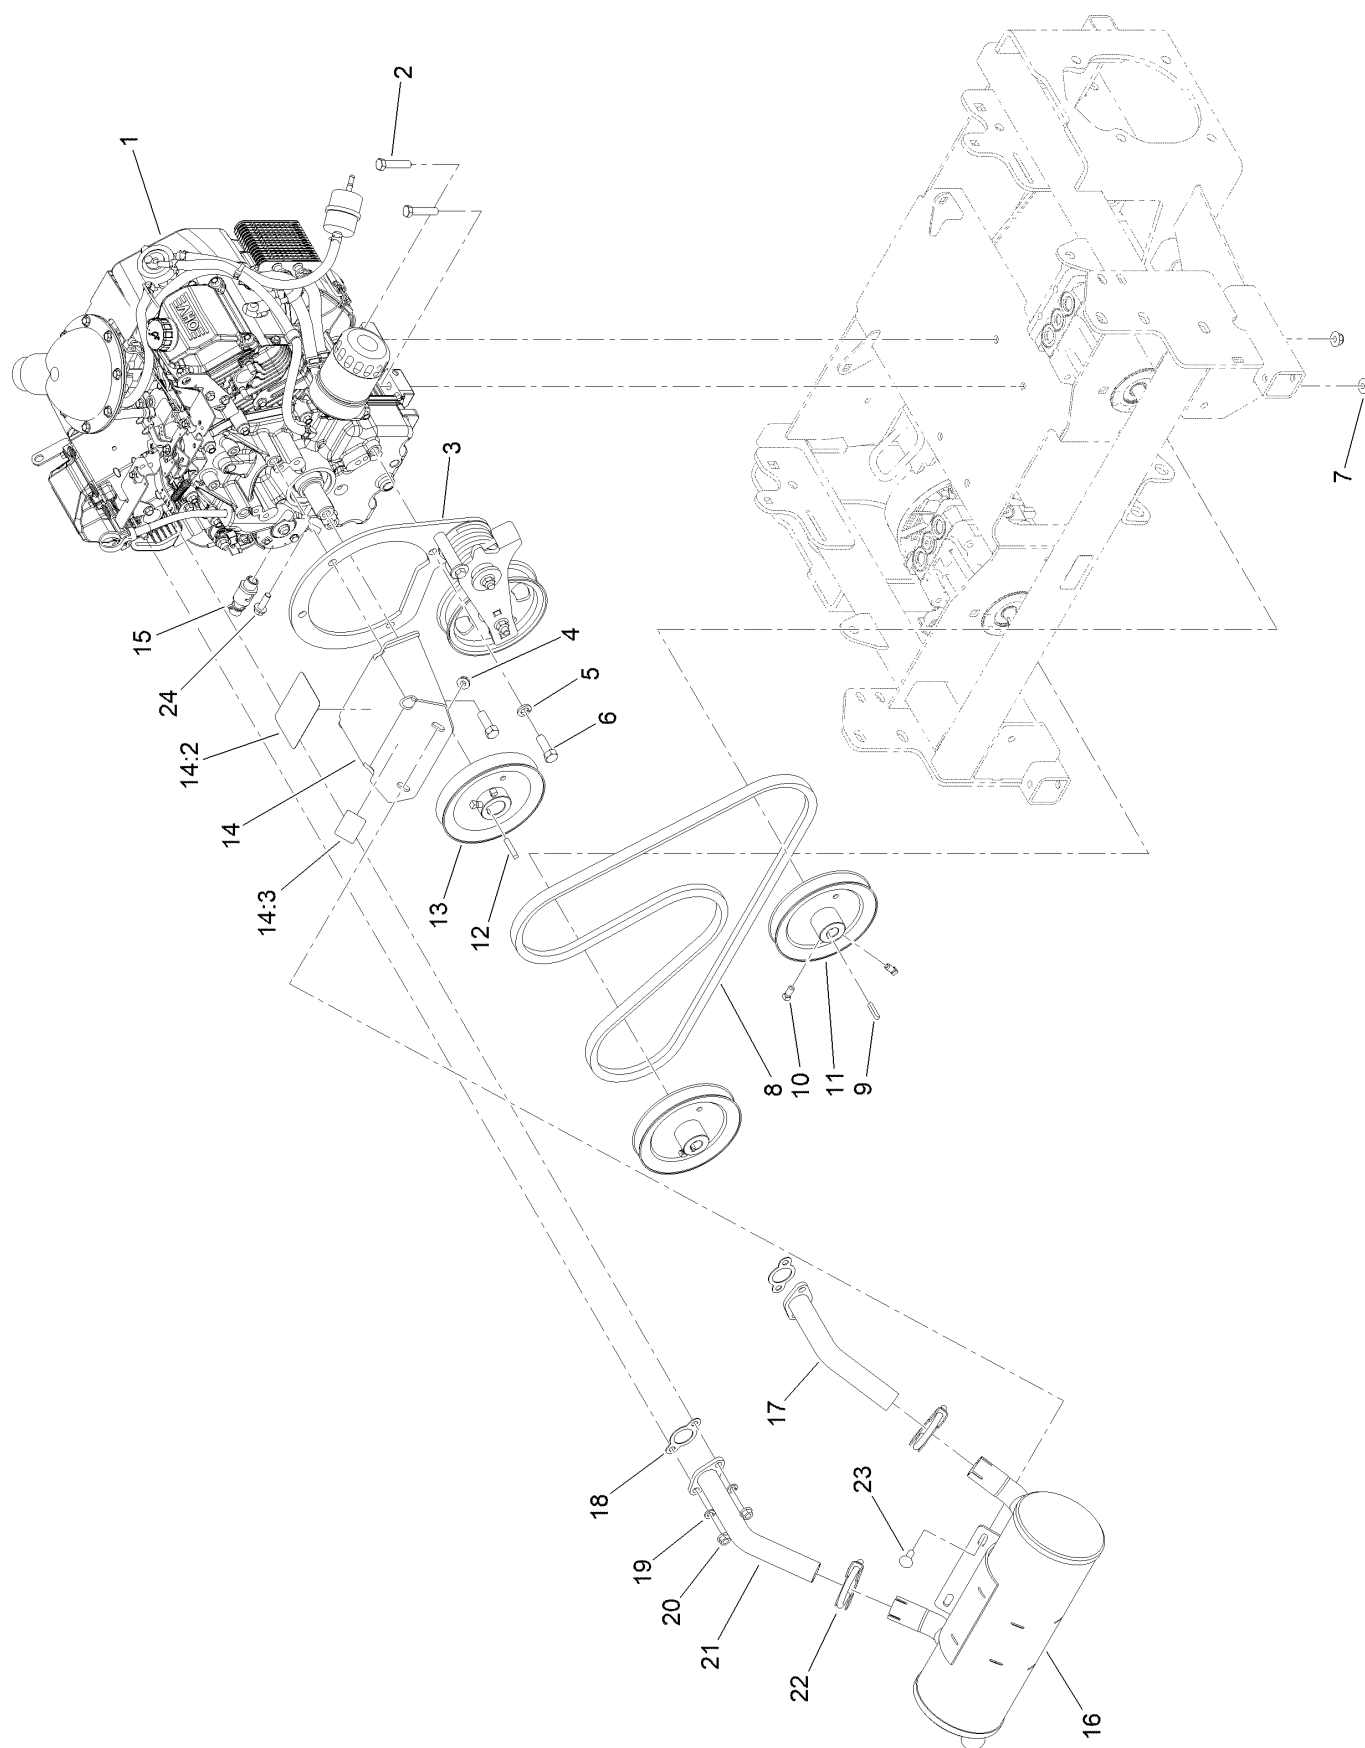

Engine, Belt and Muffler Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-8075	1	Engine-Kohler, Ch740-3136	14:2	145-1763	1	Decal-Belt Routing
2	323-9	4	Screw-HH	14:3	106-5517	1	Decal-Warning
3	144-4613	1	Tensioner ASM	15	120-4321	1	Valve-Drain, Oil
4	32128-35	2	Nut-HF	16	145-4161	1	Muffler
5	3253-6	2	Washer-Lock	17	145-4157	1	Header-Muffler, LH
6	324-5	4	Screw-HH	18	110-6697	2	Gasket-Exhaust
7	104-8301	4	Nut-HF, NI	19	3253-4	4	Washer-Lock
8	110-6973	1	Belt-V	20	33004-00	4	Nut-HF
9	135-7971	2	Key	21	145-4158	1	Header-Muffler, RH
10	1-803022	6	Screw-Set	22	2112-11	2	Clamp-Muffler
11	144-4642	2	Pulley-Driven	23	3234-47	2	Screw-HHF
12	13-2840	1	Key-Square	24	138-0690	1	Screw-HHF,Patch
13	144-4643	1	Pulley, Drive				
14	147-3715	1	Muffler Bracket ASM W/Decals				

 
Tensioner Assembly

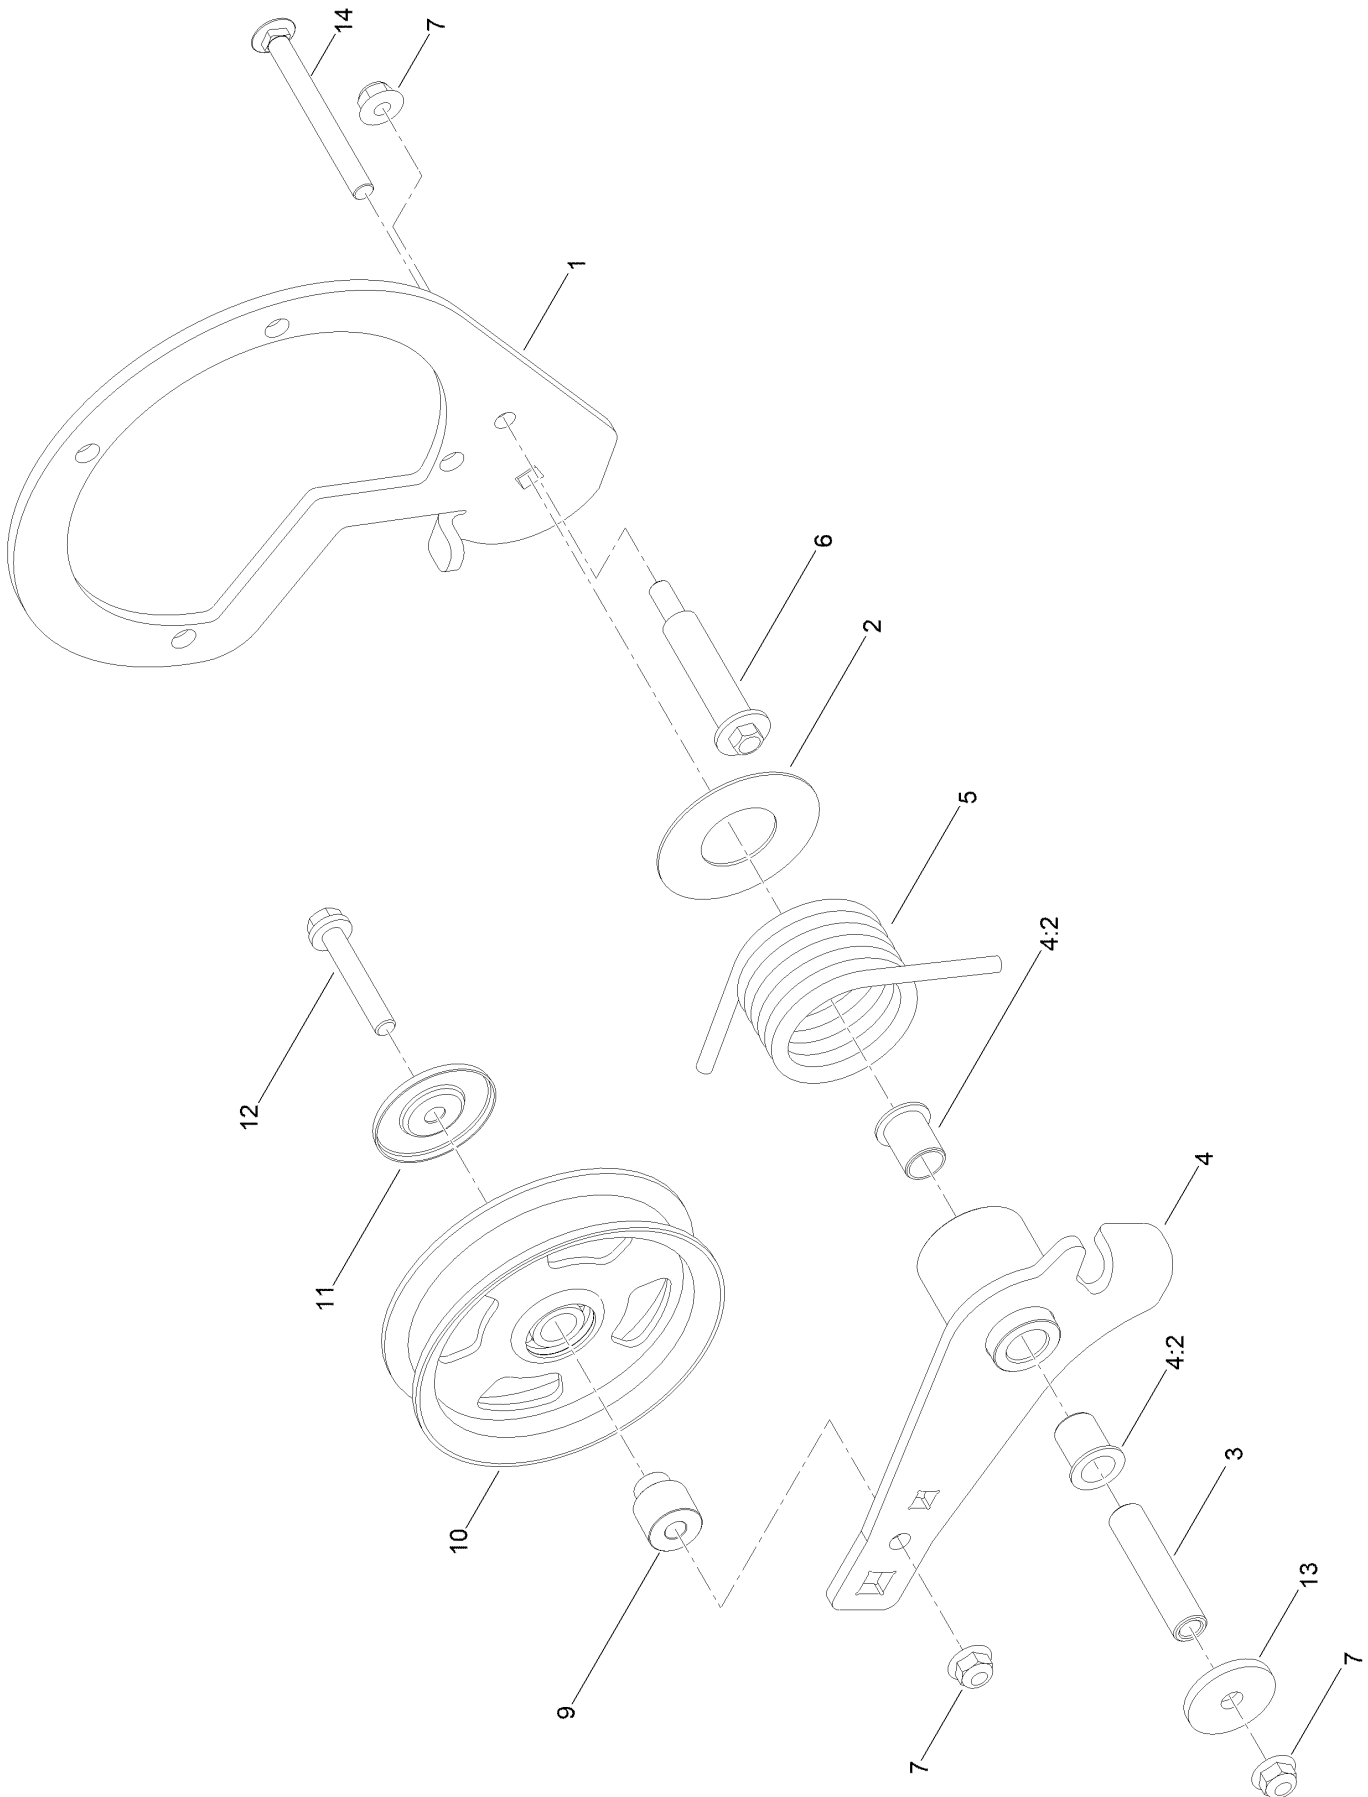

Tensioner Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-4612-03	1	Plate-Mount, Tensioner	7	104-8301	3	Nut-HF, NI
2	108-1926	1	Washer	9	126-7684	1	Bushing-Idler
3	144-4608	1	Spacer	10	136-5405	1	Pulley-Idler, Flat
4	144-4611	1	Idler Arm ASM	11	126-8043	1	Shield-Dust
4:2	138-2573	2	Bushing-Flange	12	100-2592	1	Screw-HHF
5	108-1921	1	Spring-Torsion	13	5-1720	1	Washer
6	112-3977	1	Bolt-Shoulder	14	3231-24	1	Screw-CARR

 
Fuel Tank Assembly

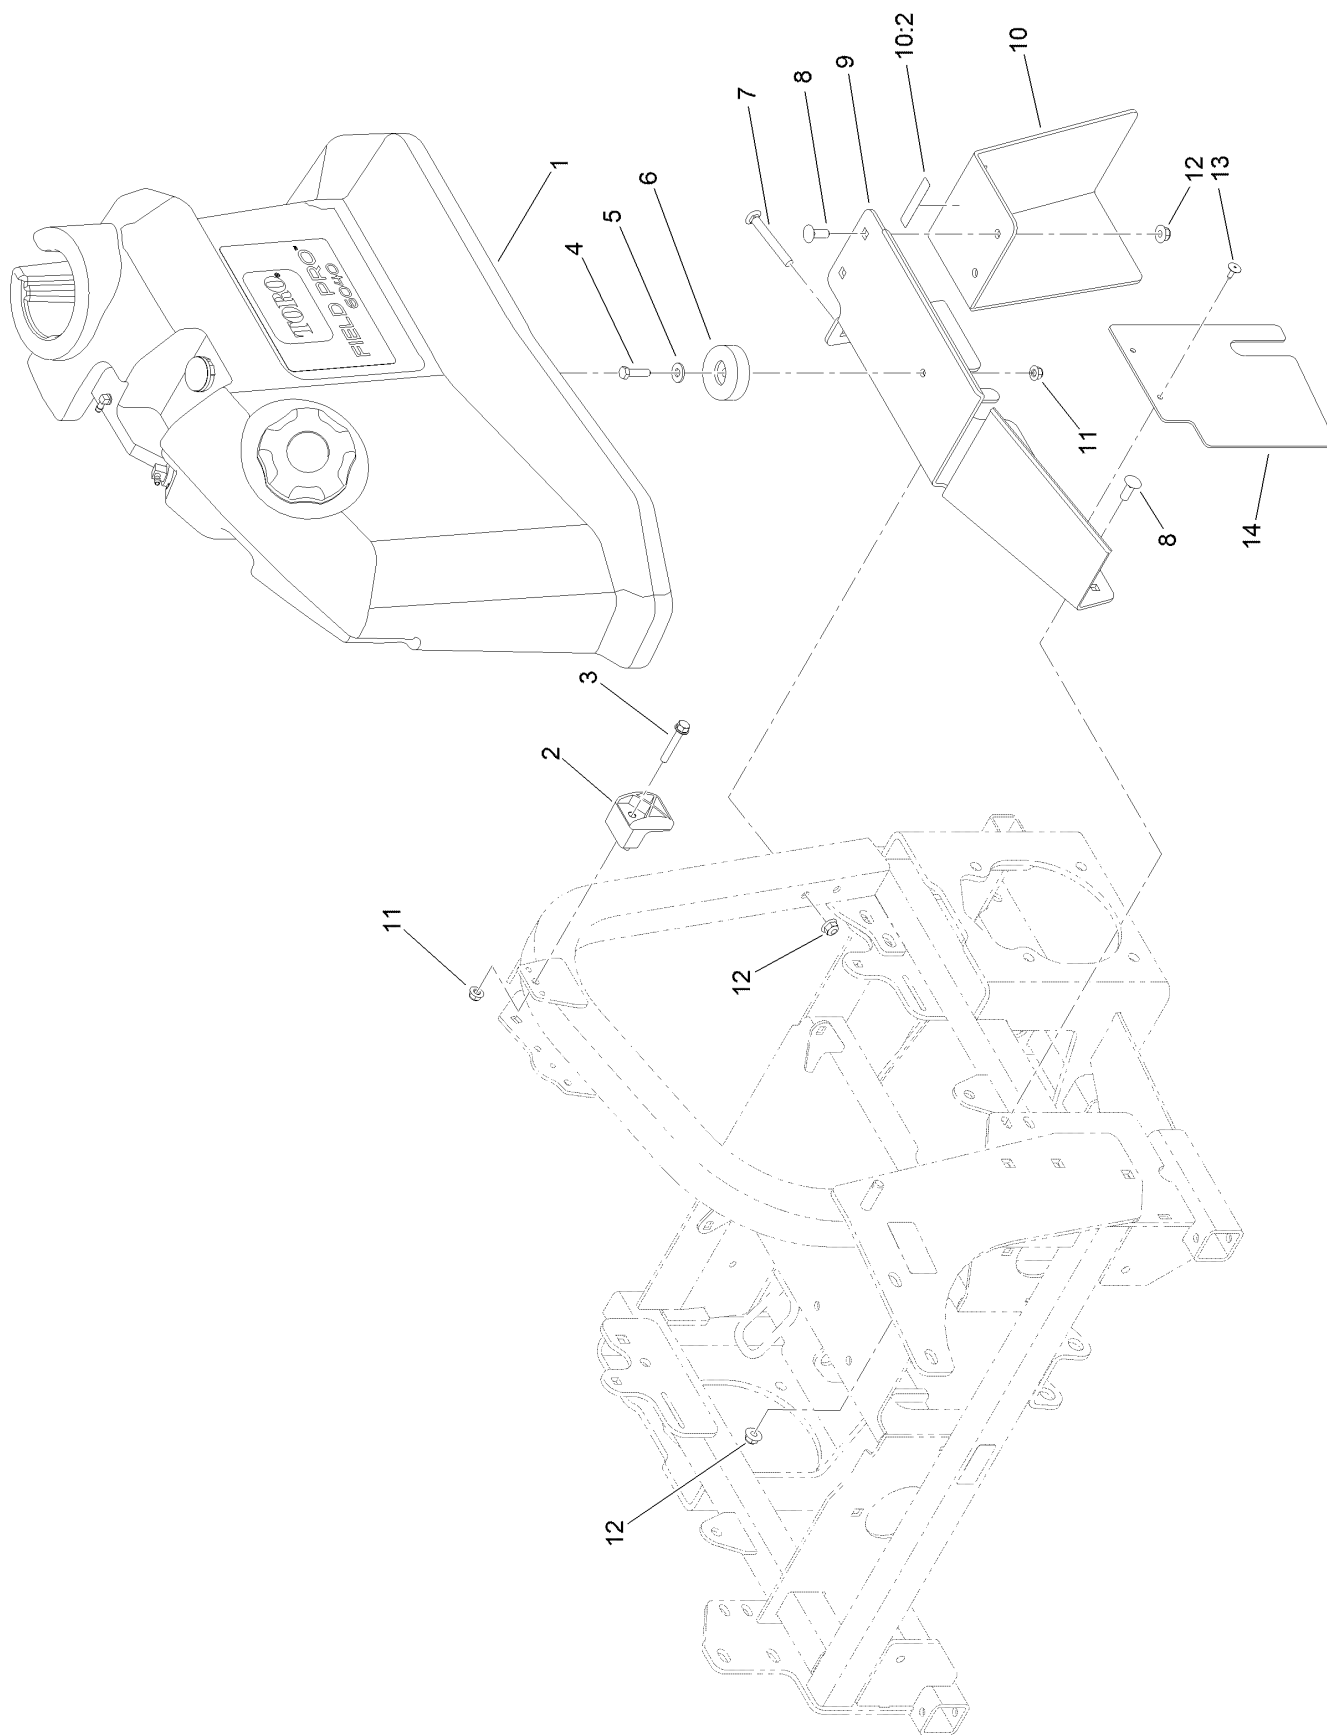

Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-7445SP	1	Fuel Tank ASM W/Decal	9	144-7685-03	1	Bracket-Fuel Tank Mount, Lower
2	107-4543	1	Clamp	10	147-3713	1	LH Fender ASM W/Decal
3	142-6275	1	Screw-HHF	10:2	135-0328	1	Decal-Torque, Wheel Nut
4	322-6	1	Screw-HH	11	104-8300	2	Nut-HF, NI
5	3256-3	1	Washer-Flat	12	104-8301	6	Nut-HF, NI
6	108-1605	1	Bumper-Recess	13	3269-20	2	Rivet-Pop
7	3231-42	2	Screw-CARR	14	147-3305	1	Flap-Cover, Side
8	3231-22	4	Screw-CARR				

 Fuel Tank Assembly No. 145-7445SP

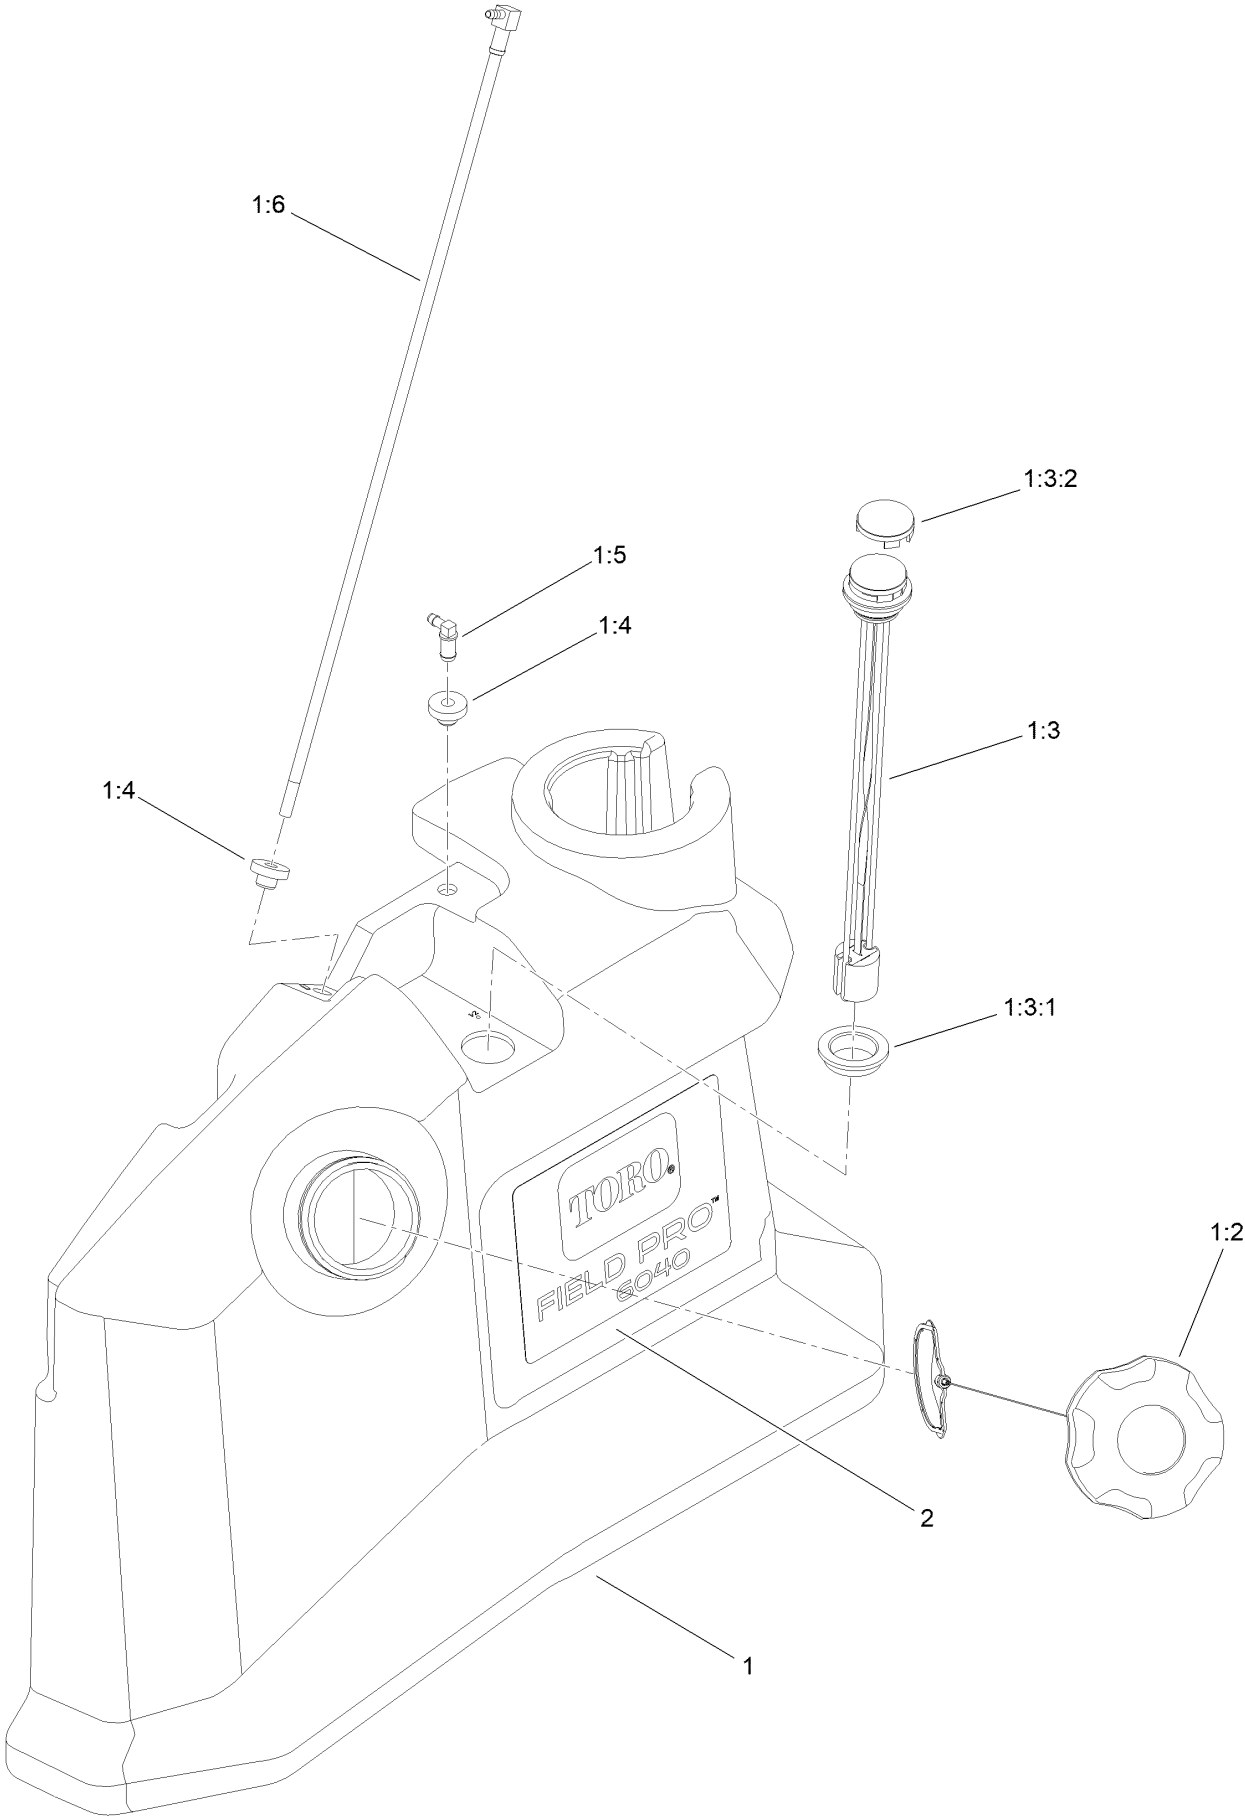


Fuel Tank Assembly No. 145-7445SP (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Fuel Tank ASM ●
1:2	135-4801	1	Cap-Fuel, Ratcheting
1:3	145-7439	1	Gauge-Fuel
1:3:1	119-0508	1	Seal
1:3:2	117-8404	1	Dial-Gauge

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1:4	46-6560	2	Bushing
1:5	117-7400	1	Fitting-Plastic
1:6	145-4220	1	Fuel Tube ASM
2	145-1776	1	Decal-Field Pro 6040

● Not serviced separately

 
Engine Air Cleaner and Fuel System Assembly

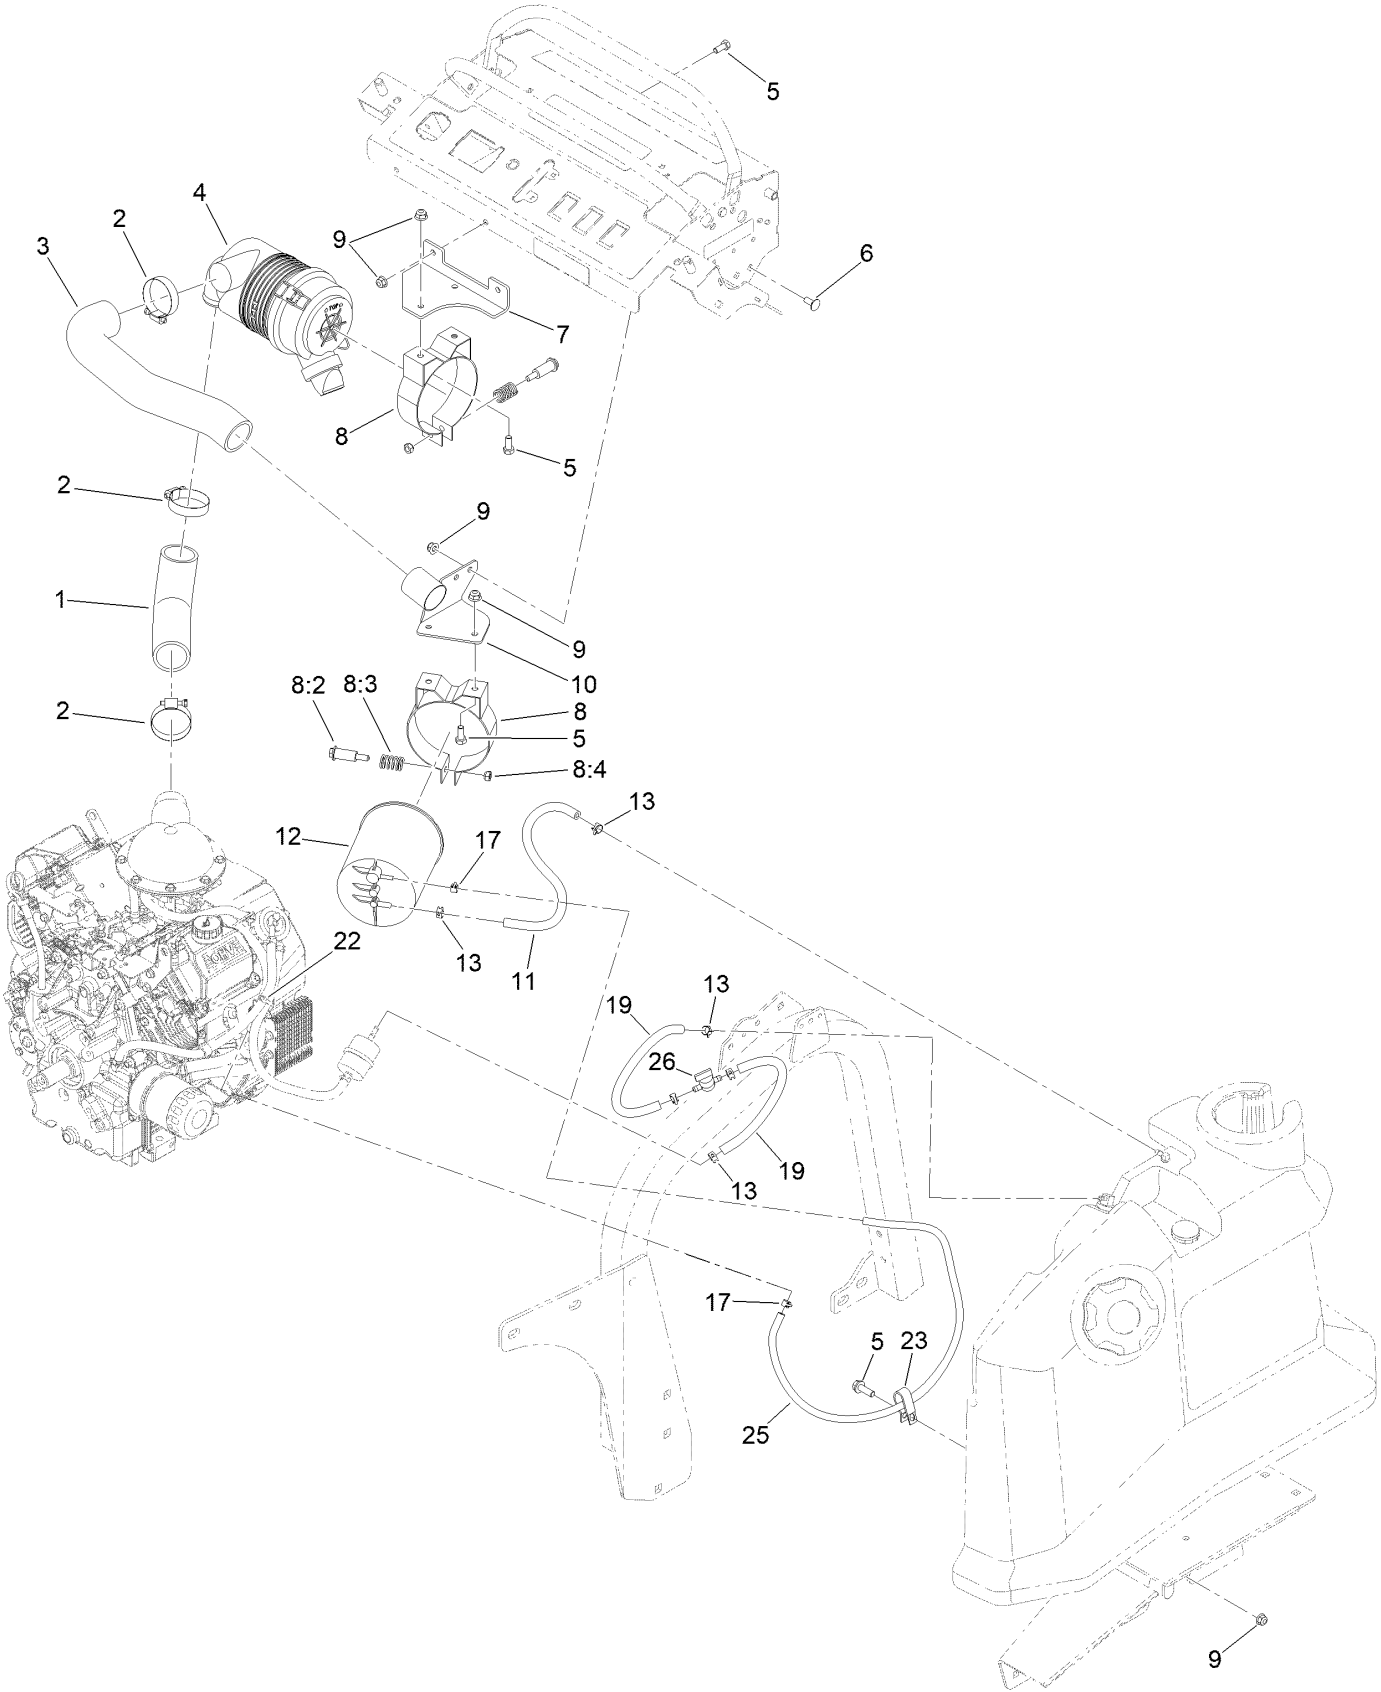

Engine Air Cleaner and Fuel System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-7168	1	Hose-Intake, Air	9	104-8300	7	Nut-HF, NI
2	2412-92	3	Clamp-Hose	10	147-3317-01	1	Carb Canister Mount ASM
3	147-3312	1	Hose-Inlet ASM	11	110-4895	1	Hose-Fuel
4	117-9989	1	Air Cleaner ASM	12	116-1442	1	Canister-Carbon, 1200Cc
5	322-3	7	Screw-HH	13	2412-98	6	Clamp-Hose
6	3230-23	2	Bolt-CARR	17	2412-146	2	Clamp-Hose
7	144-7167-03	1	Bracket-Mount, Air-Filter	19	110-3447	2	Hose-Fuel
8	93-2191	2	Air Cleaner Mounting Band ASM	22	3290-378	1	Tie-Cable
8:2	94-3653	1	Bolt	23	92-5753	1	Clamp-Hose
8:3	94-3654	1	Spring	25	140-4956	1	Hose-Fuel
8:4	33024-00	1	Nut-Lock, NI	26	1-603770	1	Valve-Fuel

 Air Cleaner Assembly No. 117-9989

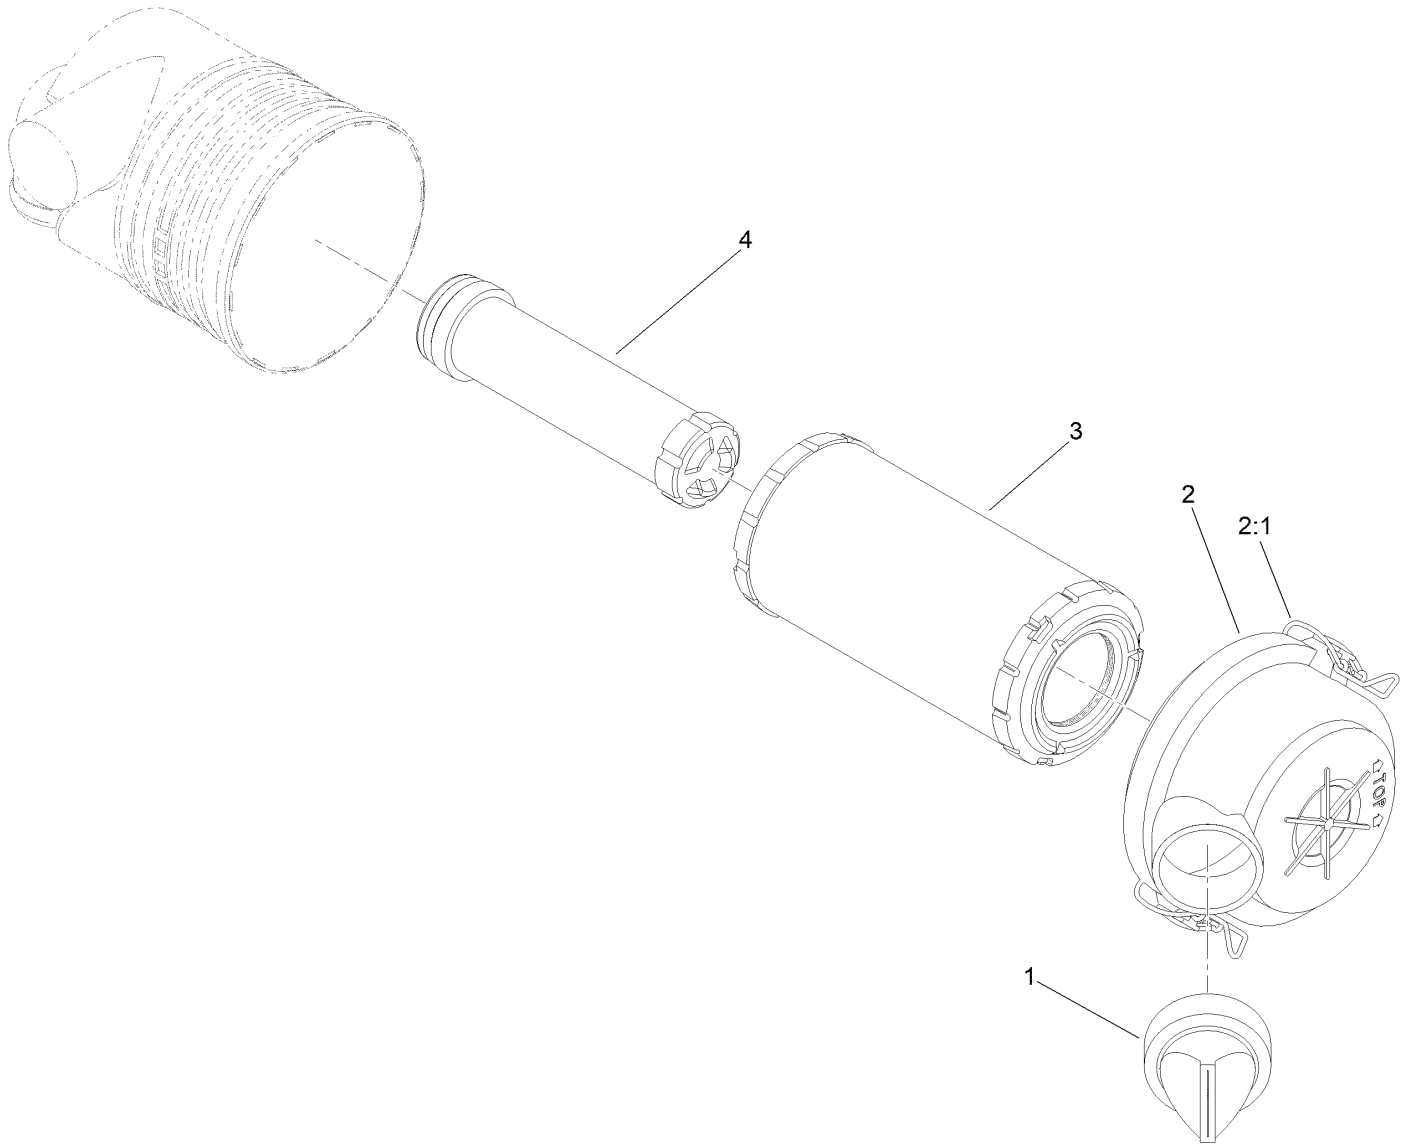


Air Cleaner Assembly No. 117-9989 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	87-9400	1	Valve-Vacuator
2	94-3652	1	Cover ASM
2:1	1-643283	2	Latch-Cleaner, Air

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	108-3811	1	Filter-Air V-Twin HD
4	98-2982	1	Filter-Element, Safety

 
Rear Frame Assembly

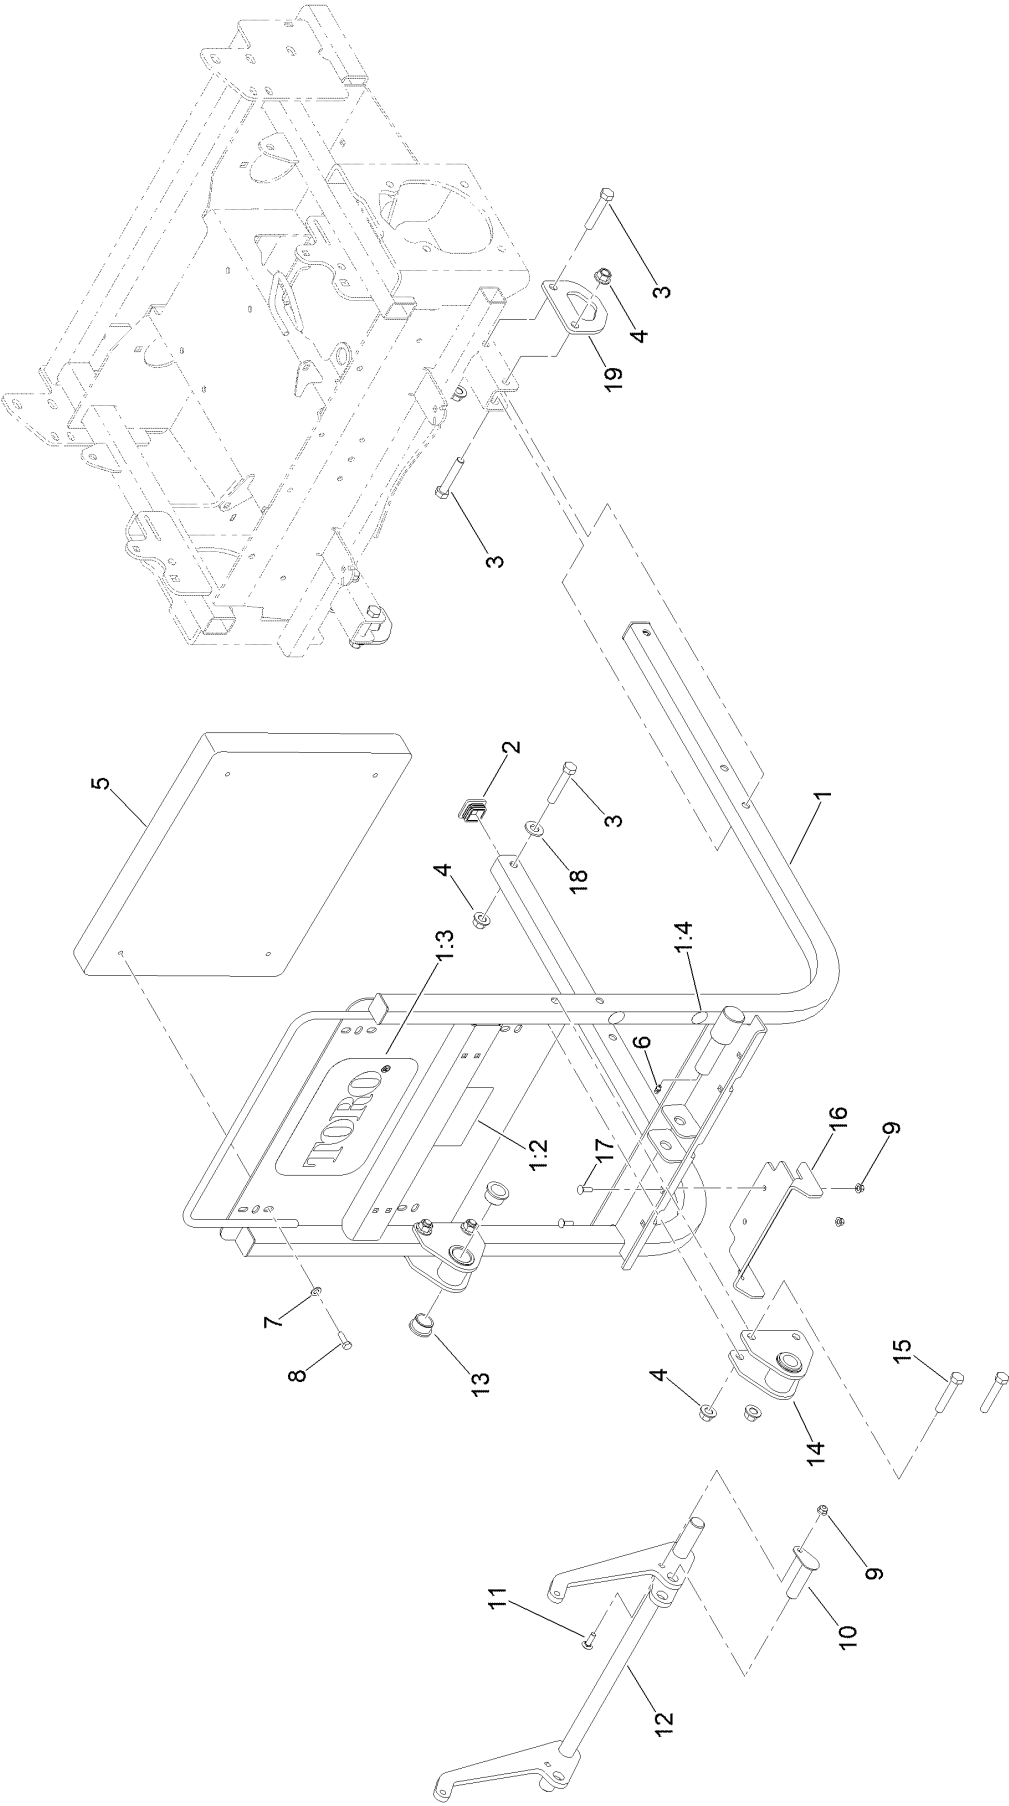

Rear Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-3708	1	Rear Frame ASM W/Decals	9	104-8300	3	Nut-HF, NI
1:2	145-1777	1	Decal-Danger, Bystanders	10	140-6323	1	Pin
1:3	67-7310	1	Decal	11	3230-22	1	Screw-CARR
1:4	58-6520	1	Decal-Grease	12	145-4178-03	1	Lift-Shaft
2	145-1811	4	Plug, Square	13	256-132	4	Bushing-Flange
3	325-11	6	Screw-HH	14	145-4175-03	2	Hub-Lift
4	99-5107	10	Nut-HF Nylock	15	325-11	4	Screw-HH
5	117-9739	1	Pad-Cushion	16	163-1609-03	1	Bracket-Lift, Extra
6	302-5	1	Fitting-Grease	17	3230-2	2	Bolt-CARR
7	3256-23	4	Washer-Plain	18	107-3395	2	Washer-Hardened
8	121-7999	4	Screw-HH, Patch	19	147-3750-03	2	Plate-Tie Down

 Rear Attachment Mount Assembly

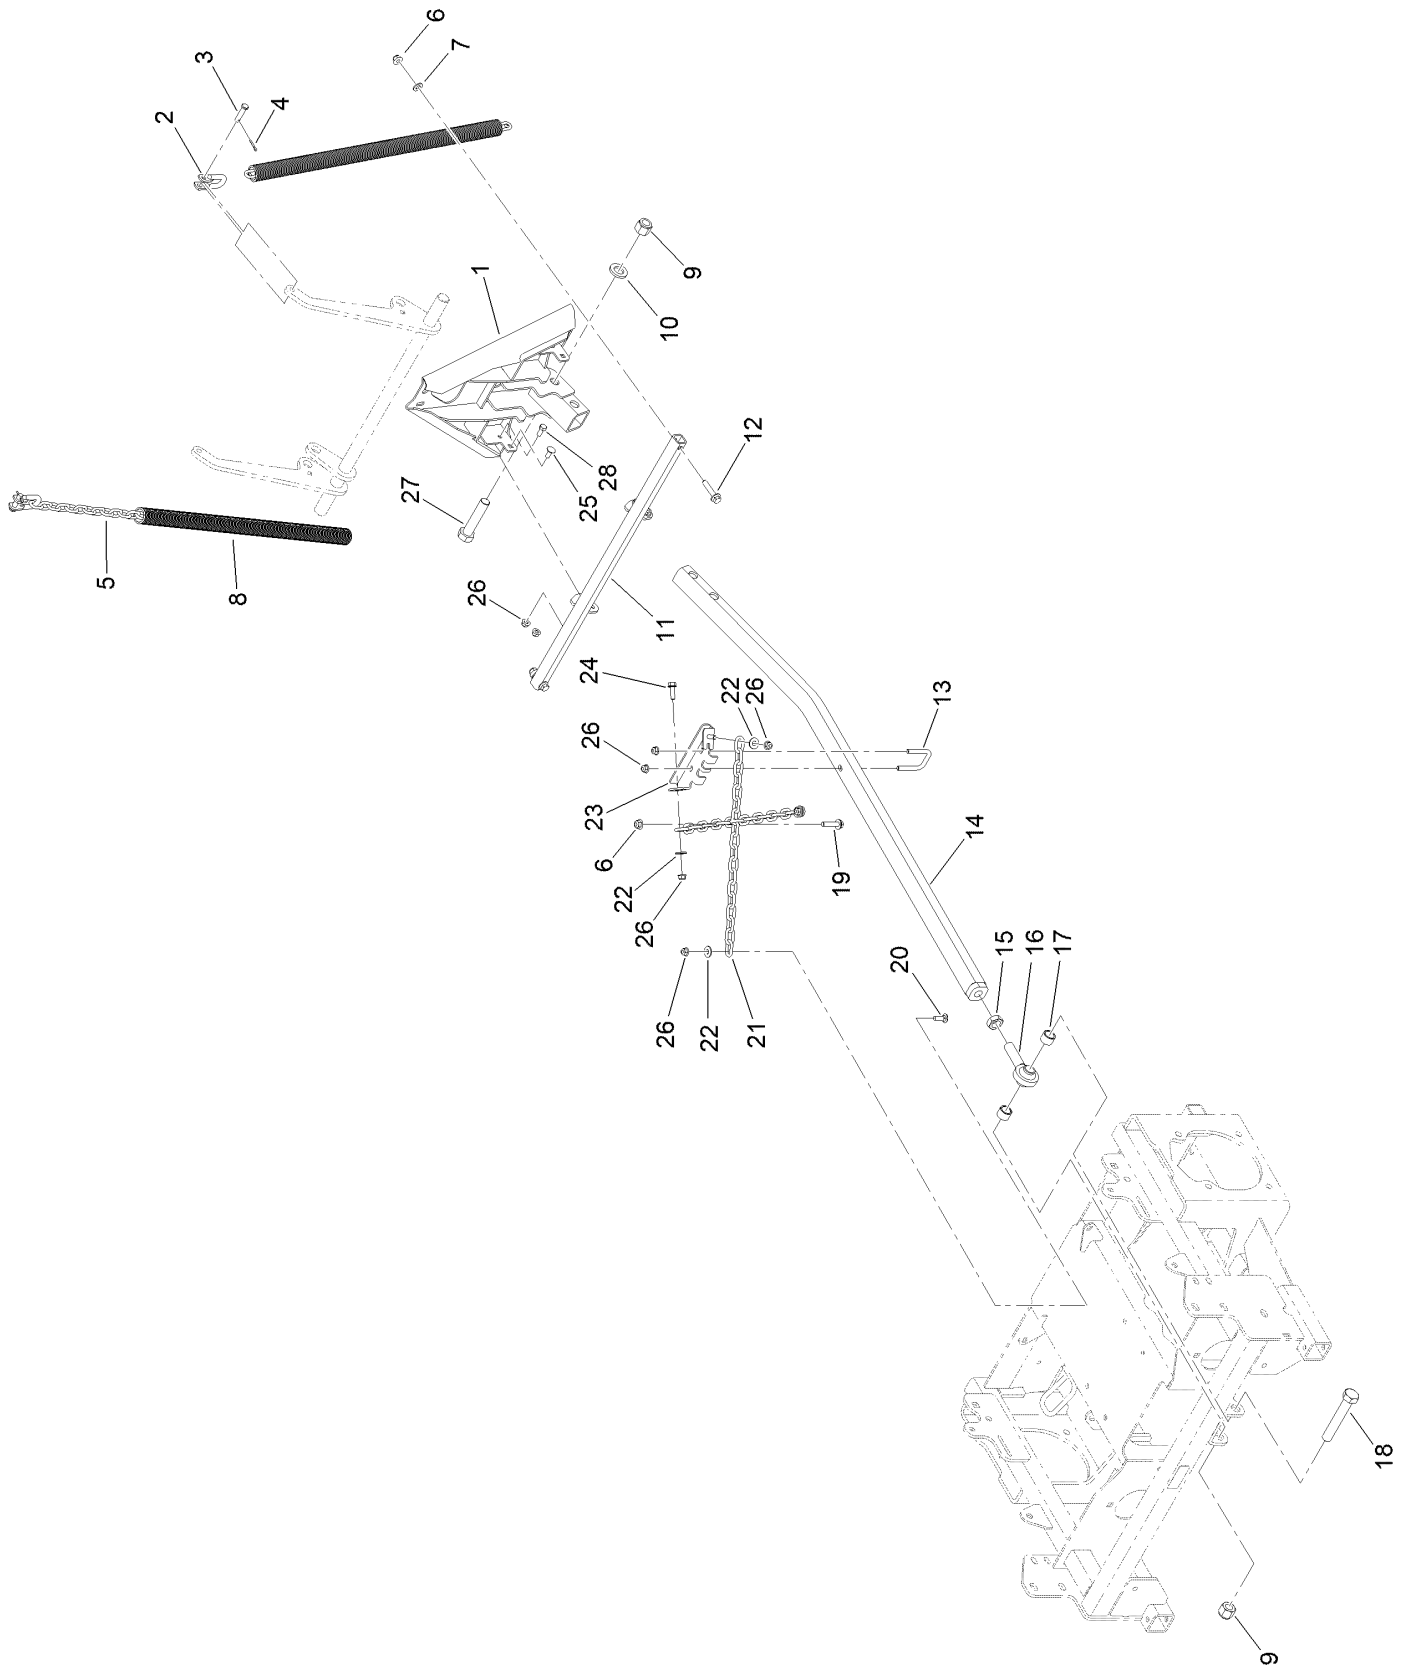

Rear Attachment Mount Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-7662-03	1	Adapter
2	5-2942	2	Shackle
3	283-10	2	Pin-Clevis
4	3272-10	2	Pin-Cotter
5	145-7421	2	Chain-Proof 25 Link
6	104-8301	3	Nut-HF, NI
7	3256-24	2	Washer-Plain
8	145-7422	2	Sleeve-Chain
9	3296-51	2	Nut-Lock, NI
10	105-4551	1	Washer-Flat
11	145-1809-03	1	Bar-Lift
12	140-4808	2	Screw-HHF
13	301950	1	U-Bolt-Square
14	144-7660-03	1	Bar-Draw

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
15	3220-7	1	Nut-Jam
16	127-4139	1	Bearing-End, Rod
17	127-4138	2	Spacer
18	328-8	1	Screw-HH
19	3234-18	1	Screw-HHF
20	3230-2	2	Bolt-CARR
21	125-5127	2	Chain-Proof, 18 Link
22	3256-3	4	Washer-Flat
23	125-6476-03	1	Bracket-Stop, Tow
24	3234-29	2	Screw-HHF
25	3230-23	2	Bolt-CARR
26	104-8300	10	Nut-HF, NI
27	328-5	1	Screw-HH
28	322-3	2	Screw-HH

Attachments and Accessories

For 08839 — Field Pro 6040

Product Name	Model/Part
Carbide Tine Toolbar	08846
Mid-Mount Tool Carrier	08854
Box Blade Accessory Tool Holder Kit	08861
Planer Blade Kit	08862
Field Edger	08863
Root Cutter	08864
Laser Level Installation Kit	08865
Weight Mount Kit	08869
Weeder Tine Toolbar	08900
Box Blade Extension Kit (LH and RH)	08901
Field Roller	08902
Segmented Wide Rear Broom	08903
Draw Bar Hitch Kit	08904
Rear Storage and Tool Holder Kit	08905
Work Lights	08906
Premium Transmission/Hydraulic Tractor Fluid (55 Gallon Drum)	108-1183
Premium Transmission/Hydraulic Tractor Fluid (5 Gallon Pail)	108-1184
Premium All Purpose Grease (Tube)	108-1190
Premium Engine Oil 10w30 (55 Gallon Drum)	121-6392
Premium Engine Oil 10w30 (5 Gallon Pail)	121-6393
Wireless Hourmeter Kit	147-6630
Exhaust Silencer Screen	93-9911

Notes:

Notes:

Notes:



Count on it.