



Count on it.

Form No. 3479-318 Rev A

Parts Catalog

Workman® LTX EFI Utility Vehicle

Model No. 07424—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.


Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents


Front Frame and Suspension Assembly	4
Left Hand Spindle Assembly No. 163-9475	5
Right Hand Spindle Assembly No. 163-9476	6
Floor Plate and Rear Suspension Mount Assembly	7
Rear Frame and Suspension Assembly	8
Frame Mount and Rear Shock/Spring Assembly	9
Brake Assembly	10
Master Cylinder Assembly No. 104-6782	11
Brake Caliper Assembly No. 161-1890	12
Steering Assembly	13
Pedal and Control Assembly	14
Hood and Fender Assembly	16
Dash Assembly	17
Seatbase Assembly	18
Engine Assembly	19
Starter Generator Assembly No. 131-8444	20
Secondary Clutch Assembly No. 119-6011	21
Primary Clutch Assembly No. 138-0095	22
Transaxle Assembly	23
Transaxle Assembly No. 131-3486	24
Battery Assembly	26
Electrical Assembly	28
Fuel System Assembly	30
Attachments and Accessories	32

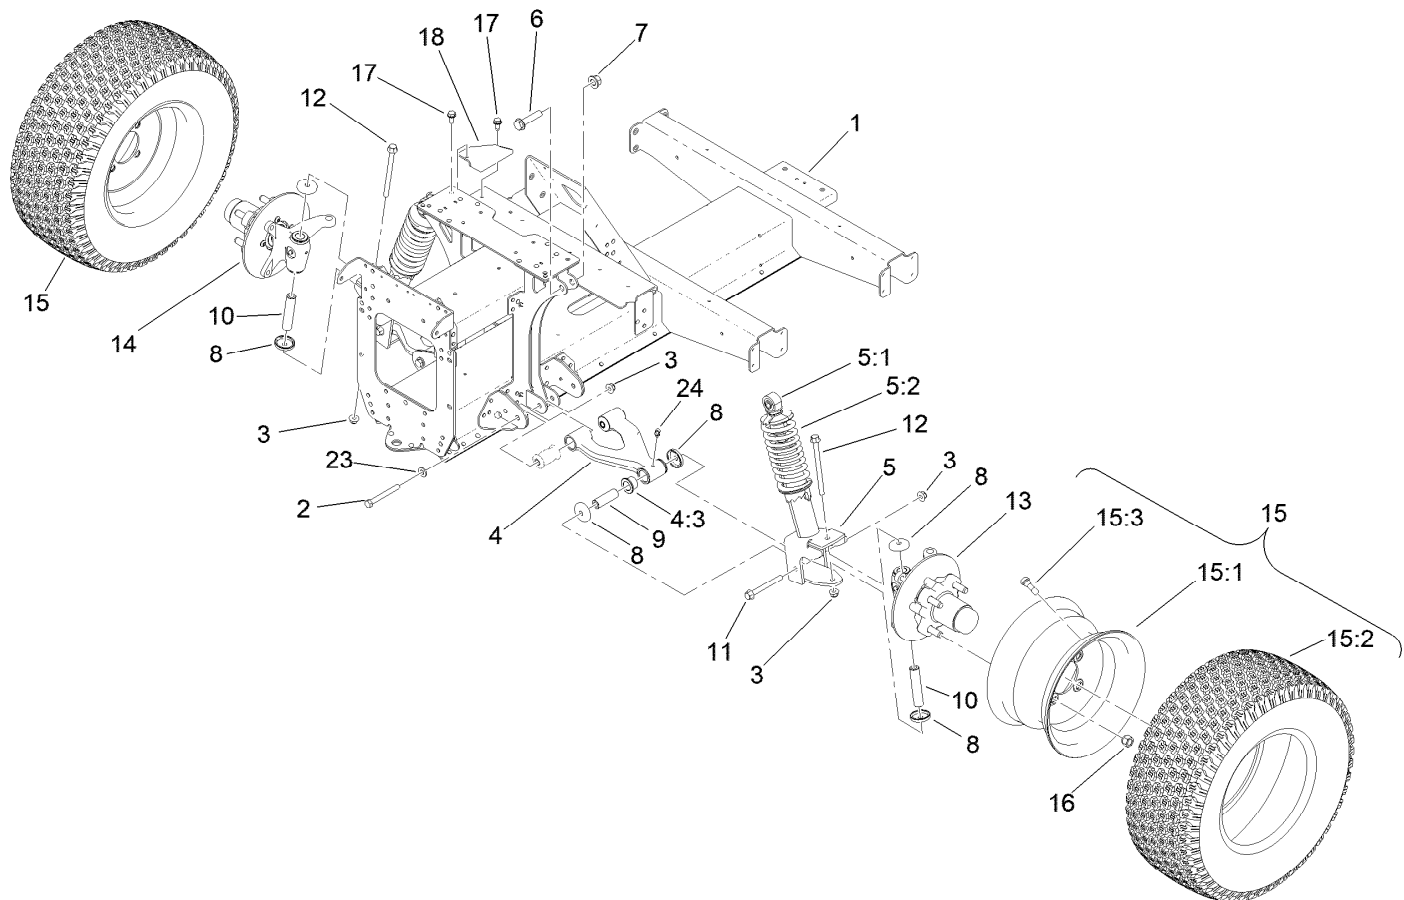

Front Frame and Suspension Assembly


Ref.	Part Number	Qty.	Description
1	161-5490-03	1	Front Frame ASM [black]
2	112-7161	4	Screw-HH
3	139-3380	8	Nut-HF
4	163-9444	2	Control Arm ASM
4:3	147-3983	2	Bushing-Flange
5	139-4484	2	Strut ASM, 250 Lb (16.33" EXT Length)
5:1	131-8574	1	Isolator-Shock
5:2	137-6719	1	Spring-Compression, 250Lb
6	3234-46	2	Screw-HHF
7	139-1689	2	Nut-HF
8	140-9793	8	Pin Seal
9	144-5634	2	Sleeve-Outer
10	161-2048	2	Sleeve-Kingpin

Ref.	Part Number	Qty.	Description
11	139-3370	2	Screw-HF
12	139-3350	2	Screw-HF
13	163-9475	1	LH Spindle ASM
14	163-9476	1	RH Spindle ASM
15	147-2761	2	Wheel And Tire ASM
15:1	147-2762	1	Wheel
15:2	139-4475	1	Tire-20 X 8.00-10
15:3	232-27	1	Stem-Valve
16	139-2564	8	Nut-Lug
17	32144-70	2	Screw-HWHTF
18	131-8339-03	1	Reinforcement-Tower
23	100-4852	4	Washer-Hardened
24	302-60	2	Fitting-Grease

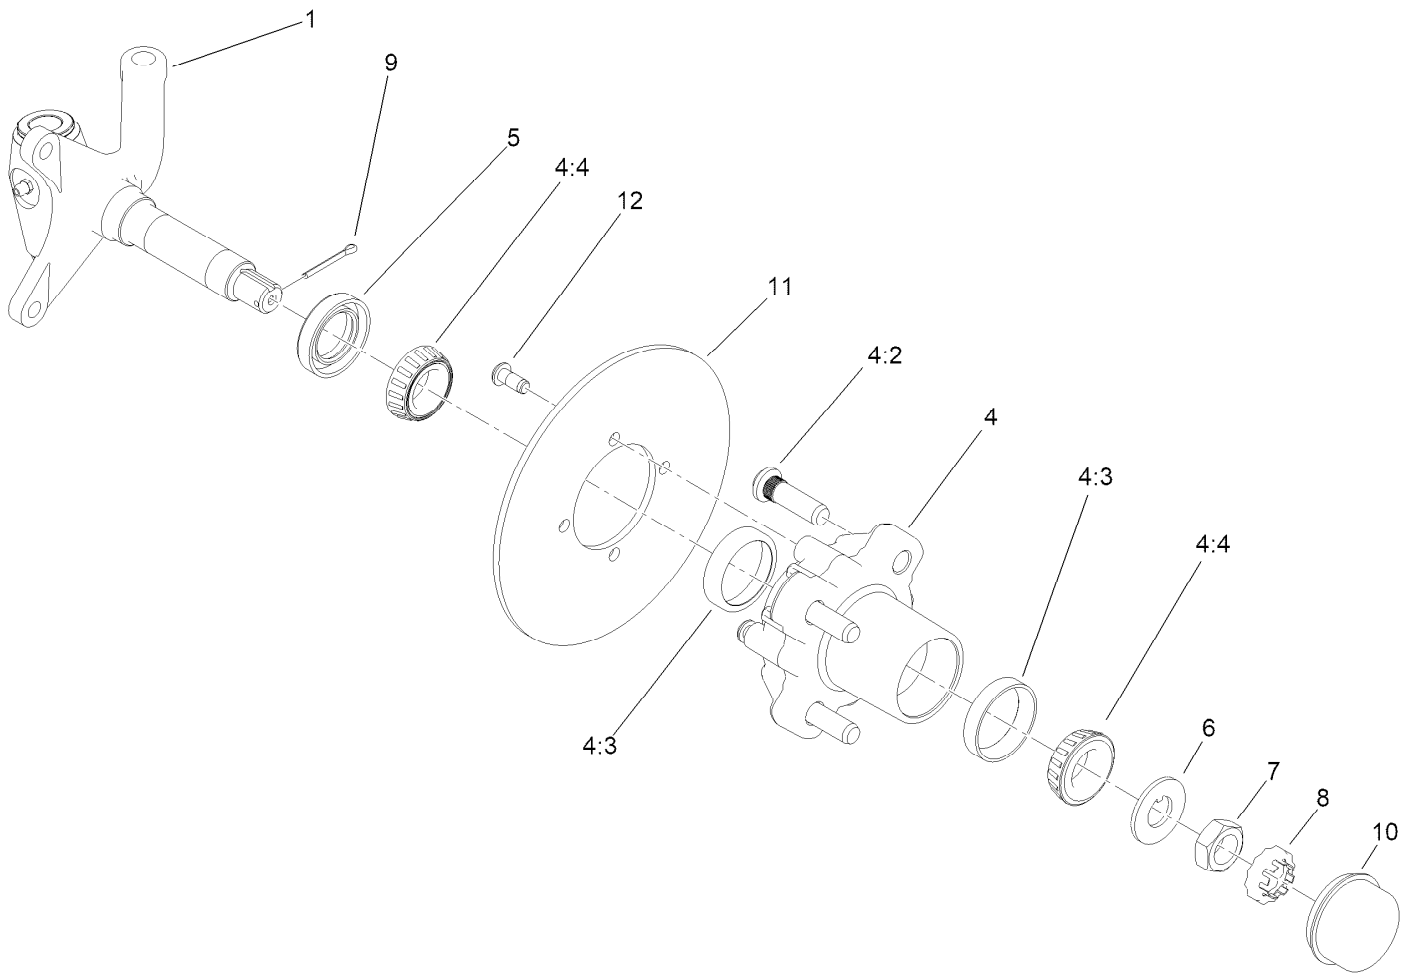


Left Hand Spindle Assembly No. 163-9475

Ref.	Part Number	Qty.	Description
1	163-9471	1	Spindle ASM LH
4	144-5470	1	Front Hub ASM
4:2	10-6830	4	Stud-Type, Drive
4:3	254-72	2	Bearing-Cup, Tapered
4:4	254-94	2	Bearing-Cone, Tapered
5	112-1690	1	Seal-Oil
6	93-0309	1	Washer-Tab
7	3220-7	1	Nut-Jam
8	93-0307	1	Nut-Lock, Retainer
9	3272-12	1	Pin-Cotter
10	241-119	1	Cap-Dust
11	139-4474	1	Rotor-Brake
12	121-9671	4	Screw-HSBH, Patch

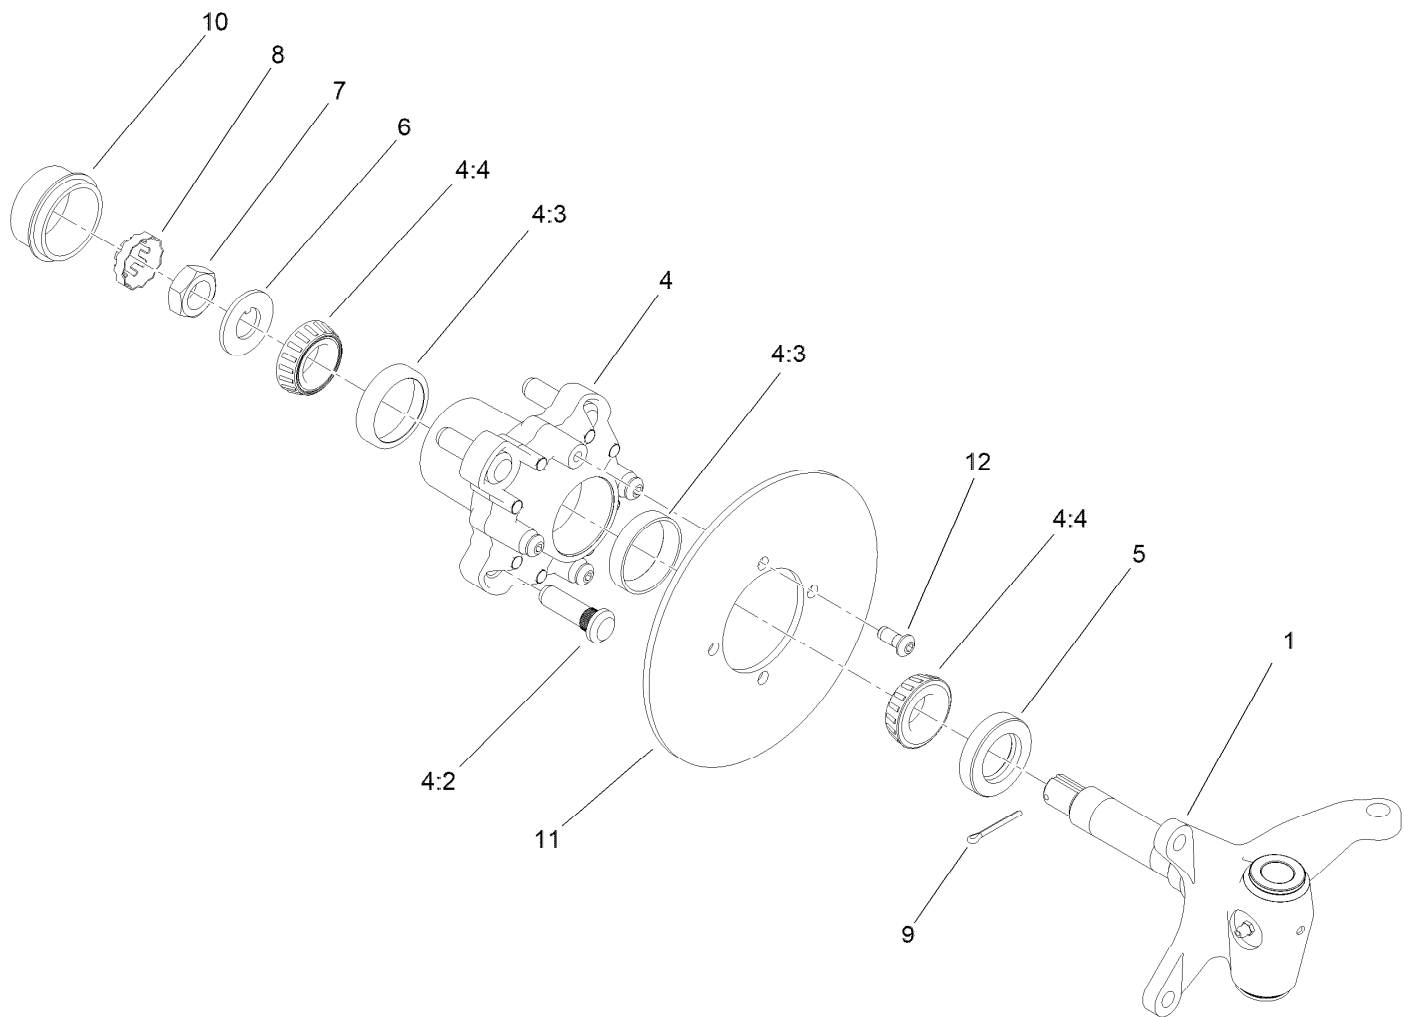

Right Hand Spindle Assembly No. 163-9476


Ref.	Part Number	Qty.	Description
1	163-9472	1	Spindle ASM RH
4	144-5470	1	Front Hub ASM
4:2	10-6830	4	Stud-Type, Drive
4:3	254-72	2	Bearing-Cup, Tapered
4:4	254-94	2	Bearing-Cone, Tapered
5	112-1690	1	Seal-Oil
6	93-0309	1	Washer-Tab
7	3220-7	1	Nut-Jam
8	93-0307	1	Nut-Lock, Retainer
9	3272-12	1	Pin-Cotter
10	241-119	1	Cap-Dust
11	139-4474	1	Rotor-Brake
12	121-9671	4	Screw-HSBH, Patch

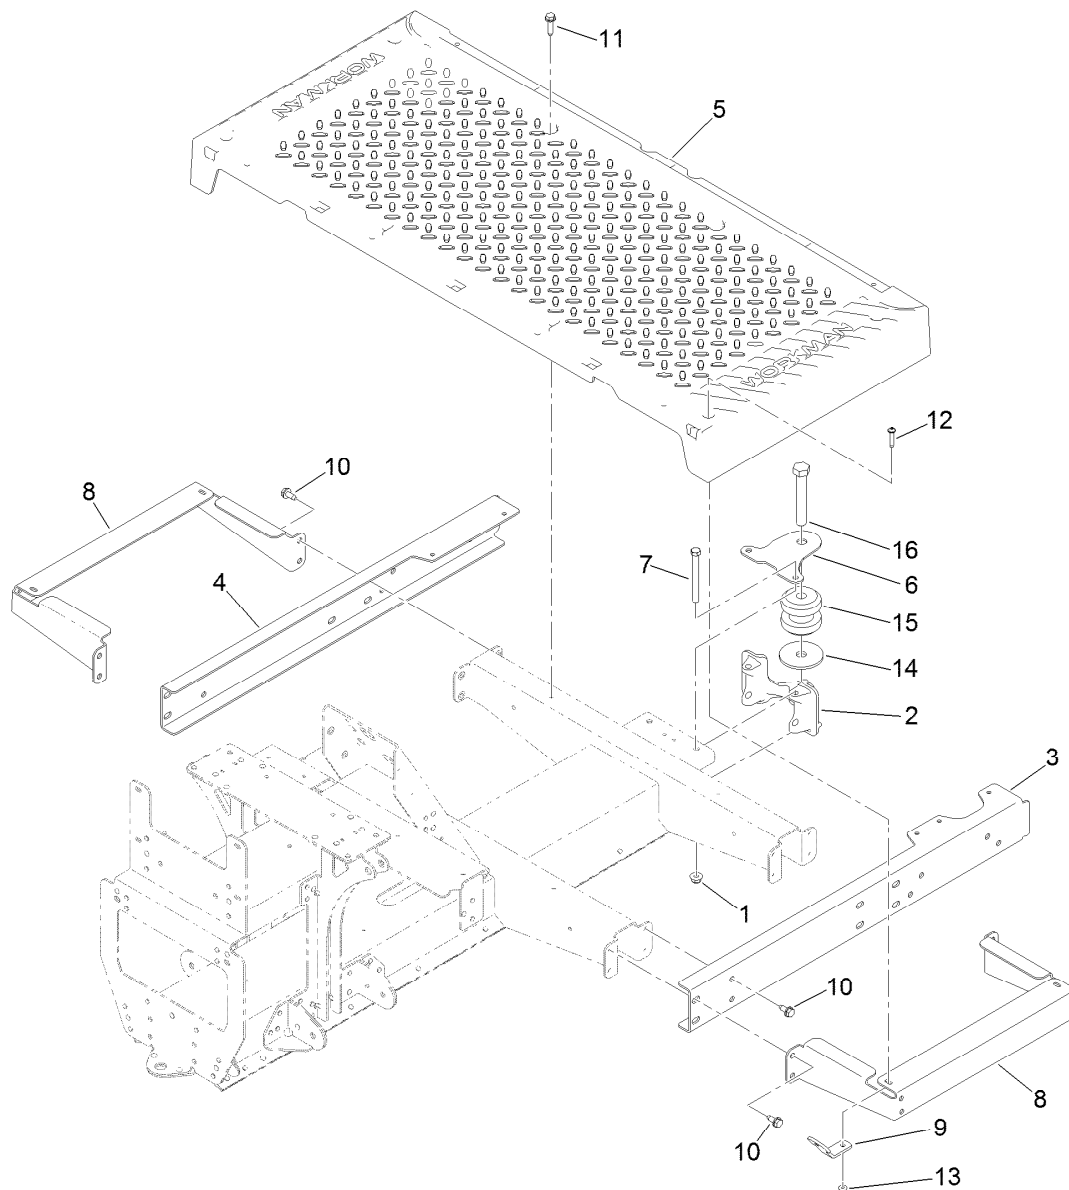

Floor Plate and Rear Suspension Mount Assembly

Ref.	Part Number	Qty.	Description
1	119-4042	2	Nut-HF, NI
2	131-8466	1	Mount-Suspension, Rear
3	127-7820-03	1	Channel-Frame, Front (LH)
4	127-7821-03	1	Channel-Frame, Front (RH)
5	127-7829	1	Plate-Floor
6	131-8597	1	Plate-Gimbal, Upper
7	323-42	2	Screw-HH
8	127-7837-03	2	Bracket-Support, Floor Plate


Ref.	Part Number	Qty.	Description
9	127-7832	2	Bracket-Angle
10	32144-70	16	Screw-HWHTF
11	32144-49	4	Screw-HWHTF
12	132-6777	4	Screw-Twh Thd Roll
13	104-7201	4	Nut-HF, NI
14	110-4549	1	Washer-Snubbing
15	131-8480	1	Isolator
16	104-5877	1	Screw-HH

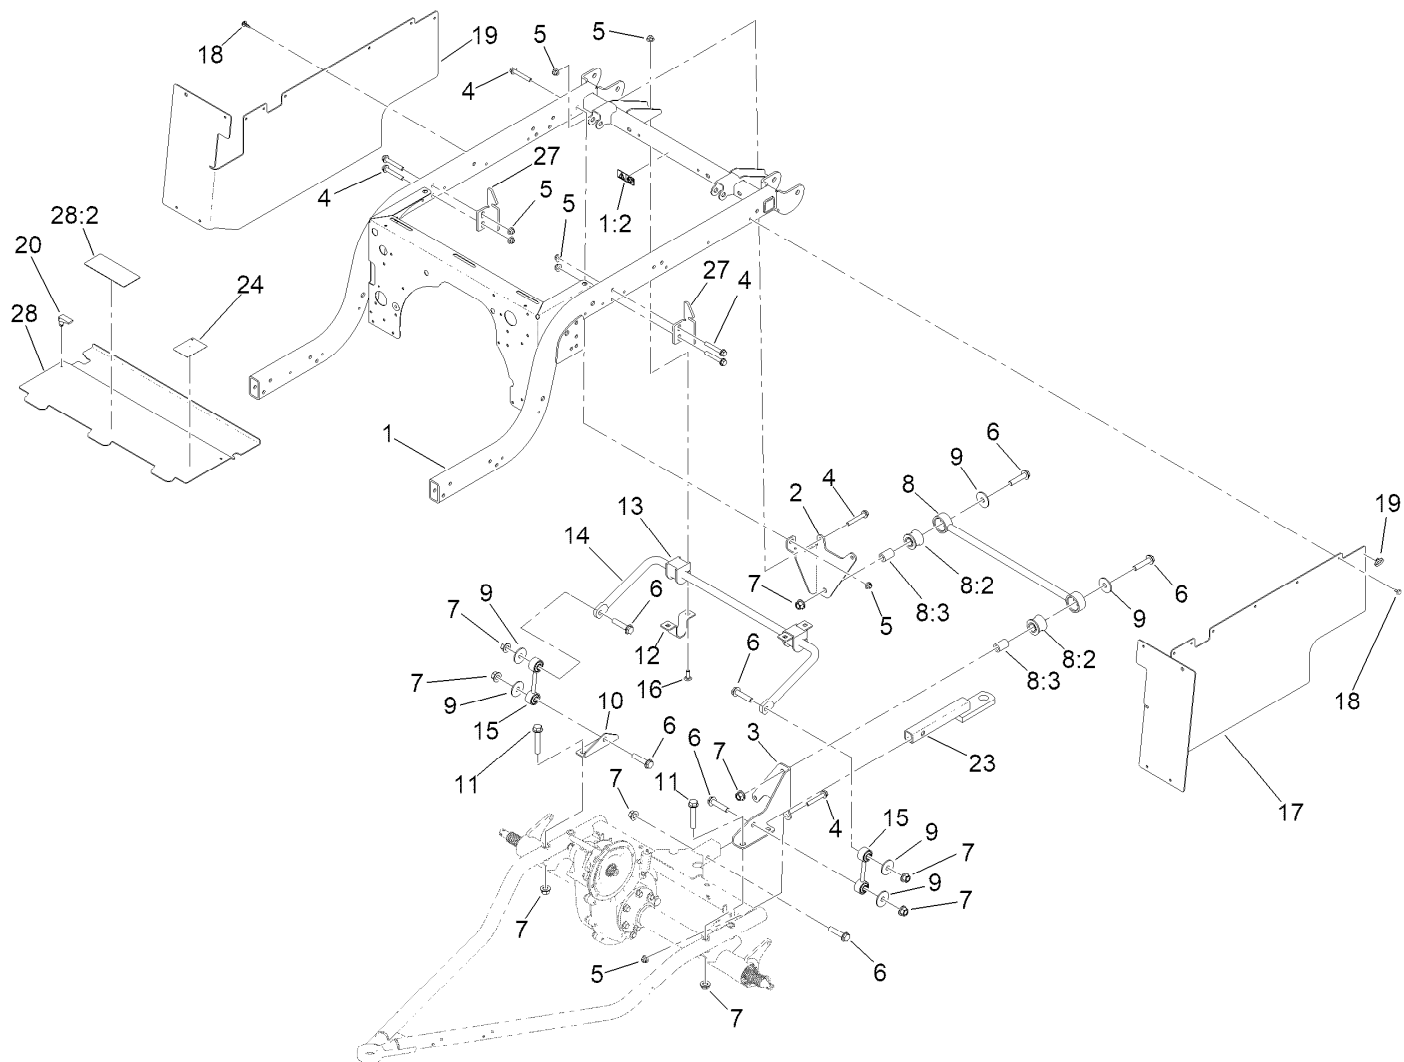

Rear Frame and Suspension Assembly


Ref.	Part Number	Qty.	Description
1	163-3902	1	Rear Frame ASM
1:2	115-2047	1	Decal-Surface, Hot
2	139-4647-03	1	Bracket-Stabilizer Bar
3	127-7411-03	1	Bracket-Bar, Stabilizer
4	3234-39	9	Screw-HHF
5	119-4042	13	Nut-HF, NI
6	3234-46	7	Screw-HHF
7	139-1689	11	Nut-HF
8	109-5013	1	Panhard Rod ASM
8:2	109-5009	2	Bushing-Suspension, Rubber
8:3	109-5010	2	Spacer
9	86-1990	6	Washer
10	131-8315	1	Bracket-Link, Sway Bar
11	3234-40	4	Screw-HF

Ref.	Part Number	Qty.	Description
12	139-4644	2	Clamp, Anti-Sway Bar
13	87-3910	2	Bushing-Rubber
14	131-8310-03	1	Bar-Sway, Anti
15	131-8394	2	Link-Bar, Sway
16	3231-22	4	Screw-CARR
17	163-3740	2	Panel-Side
18	125-9622	20	Rivet-Blind
19	3290-378	2	Tie-Cable
20	74-5950	2	Latch-Swell
23	137-6741	1	Ball Mount ASM
24	163-9453	1	Decal-Ltx EFI
27	127-7428-03	2	Striker-Latch, Bed
28	140-4573	1	Extended Panel-Cover
28:2	99-7345	1	Decal-Warning

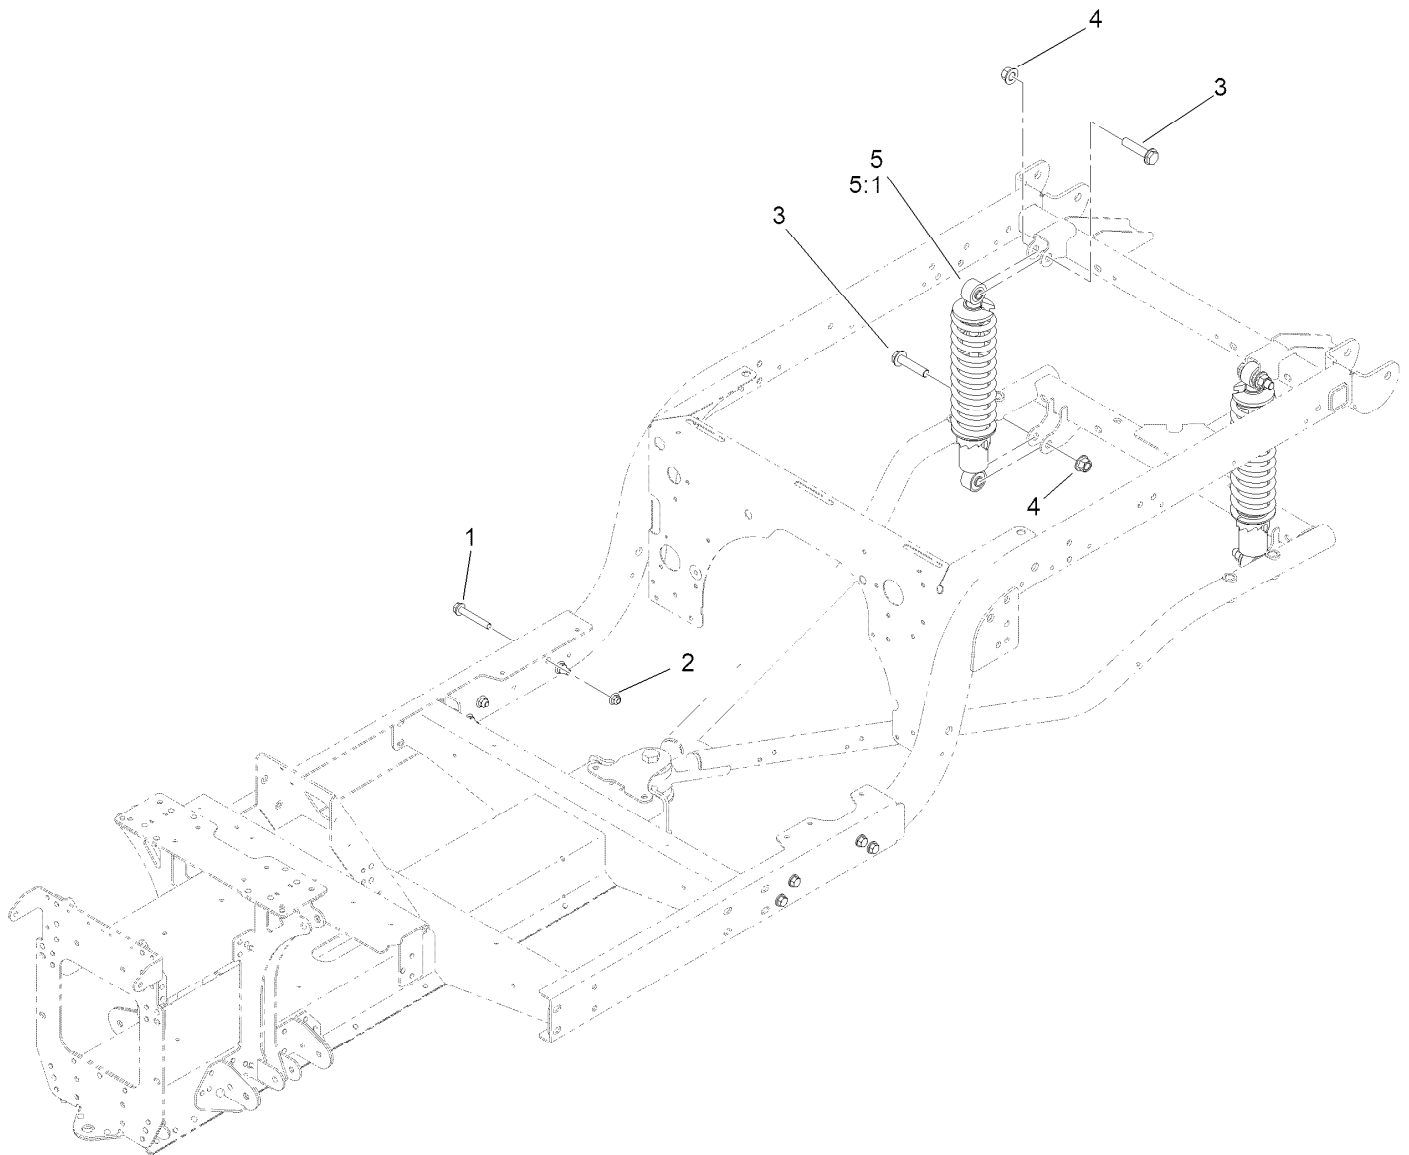

Frame Mount and Rear Shock/Spring Assembly

Ref.	Part Number	Qty.	Description
1	3234-39	8	Screw-HHF
2	119-4042	8	Nut-HF, NI
3	3234-46	4	Screw-HHF
4	139-1689	4	Nut-HF
5	139-4607	2	Shock/Spring ASM
5:1	131-8574	2	Isolator-Shock

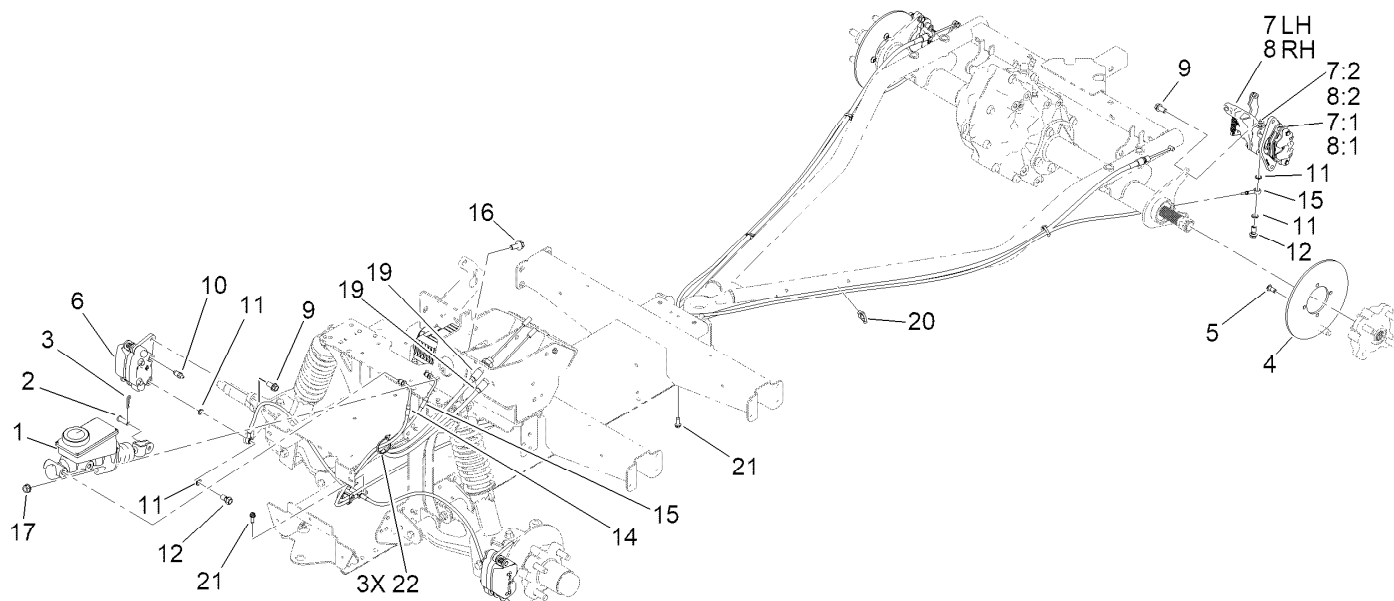


Brake Assembly

Ref.	Part Number	Qty.	Description
1	104-6782	1	Master Cylinder ASM
2	283-2	1	Pin-Clevis
3	1-806003	1	Pin-Cotter
4	139-4474	2	Rotor-Brake
5	121-9671	8	Screw-HSBH,Patch
6	161-1890	2	Brake Caliper ASM
7	140-2585	1	Brake Caliper ASM, LH
7:1	140-2595	1	Brake Pad Service Kit (Rear, Qty 4)
7:2	119-9509	1	Screw-Bleed
7:3	136-6328	2	Spring-Rattle, Anti ●
8	140-2590	1	Brake Caliper ASM, RH
8:1	140-2595	1	Brake Pad Service Kit (Rear, Qty 4)


Ref.	Part Number	Qty.	Description
8:2	119-9509	1	Screw-Bleed
8:3	136-6328	2	Spring-Rattle, Anti ●
9	144-5550	8	Screw-Spl
10	119-9509	2	Screw-Bleed
11	115-2341	8	Washer-Banjo
12	120-4875	4	Bolt-Flange, Banjo
14	161-5416	1	Brake Line ASM, Front
15	163-5056	1	Rear Brake Line ASM
16	3234-11	2	Screw-HHF
17	3290-357	2	Nut-HSF
19	161-5299	2	Cable-Brake, Parking
20	32180-030	4	Clip-Tie
21	49-2040	2	Screw-HWHTF
22	3290-378	3	Tie-Cable

● Not illustrated

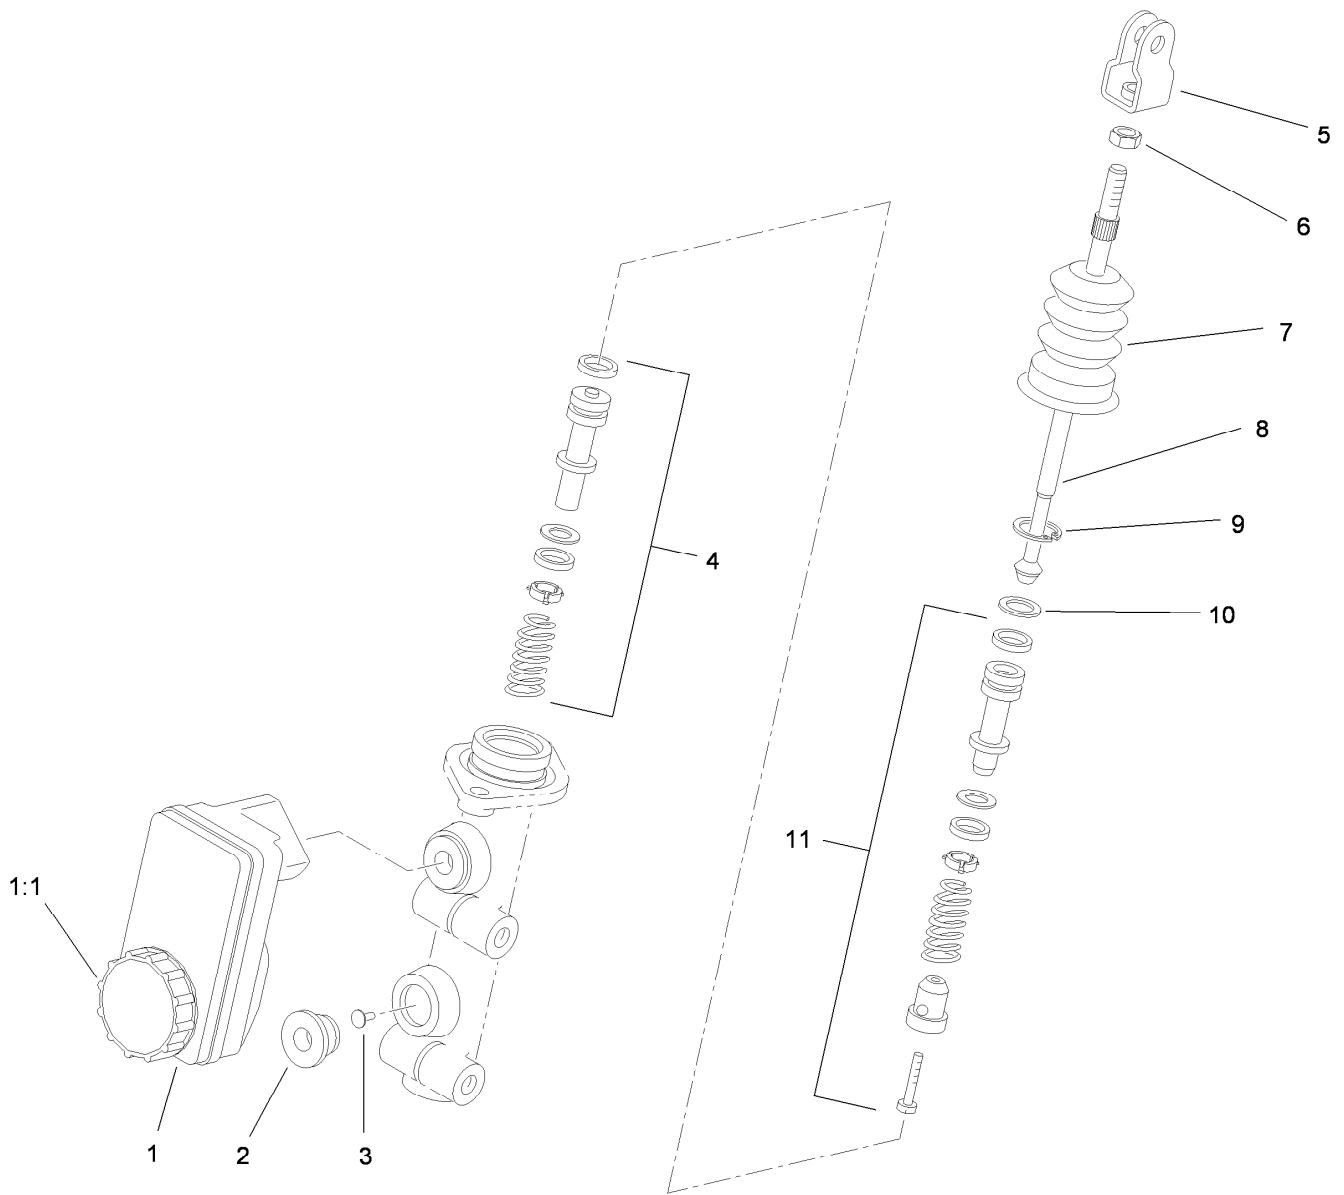


Master Cylinder Assembly No. 104-6782

Ref.	Part Number	Qty.	Description
1	104-6845	1	Reservoir ASM
1:1	92-4112	1	Cap ASM
2	93-8971	2	Seal-Port, Flange
3	92-4103	1	Pin-Stop
4	92-4102	1	Secondary Piston ASM
5	92-4110	1	Clevis
6	21-0360	1	Nut-Hex
7	94-5209	1	Cover-Dust
8	94-5210	1	Rod-Push
9	92-4109	1	Ring-Snap
10	92-4108	1	Retainer-Washer
11	92-4101	1	Primary Piston ASM

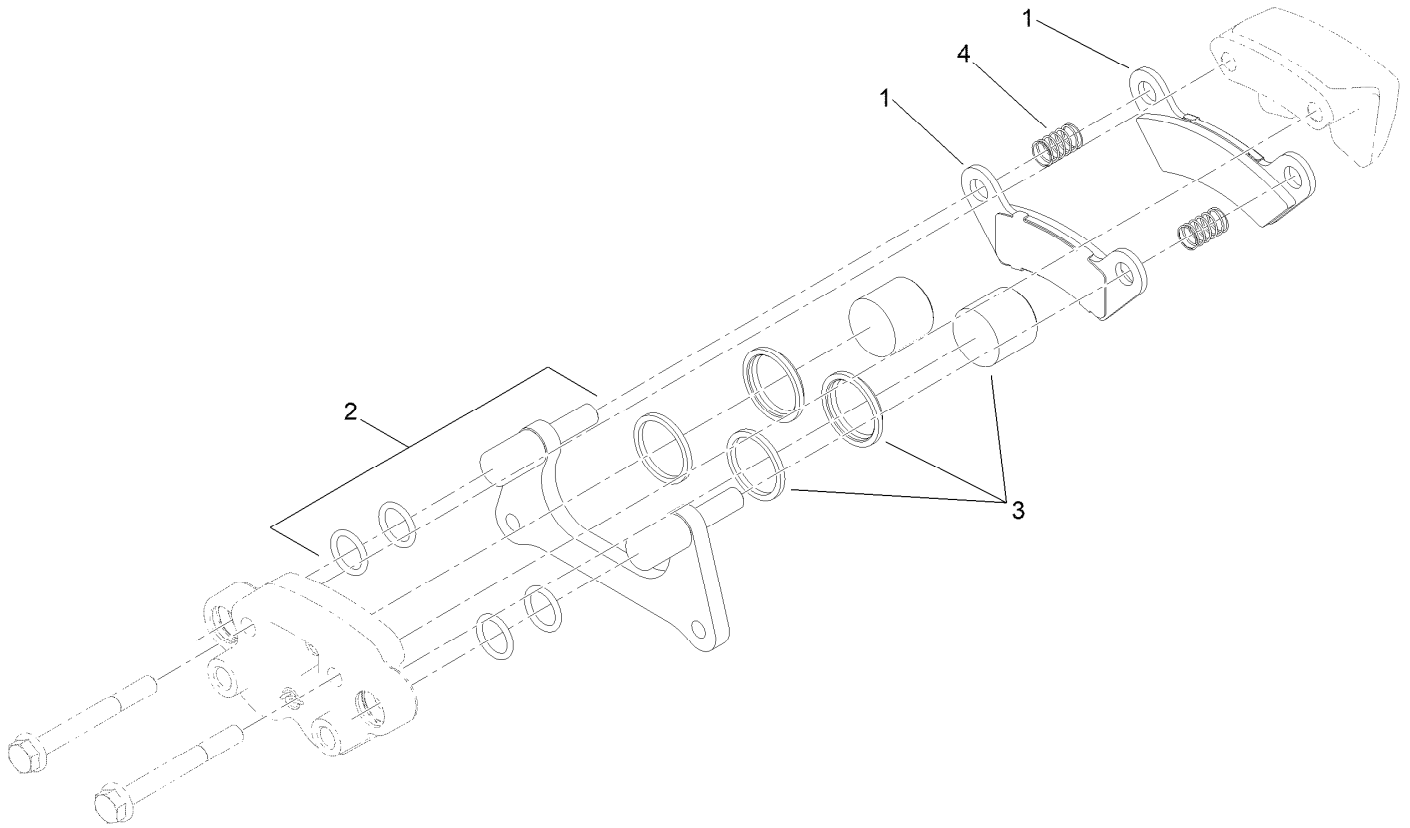

Brake Caliper Assembly No. 161-1890


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-2580	1	Brake Pad Service Kit (Front, Qty 4)
2	119-9511	1	Bracket Kit
3	133-0614	1	Piston Kit
4	161-1889	2	Spring-Compression, Service

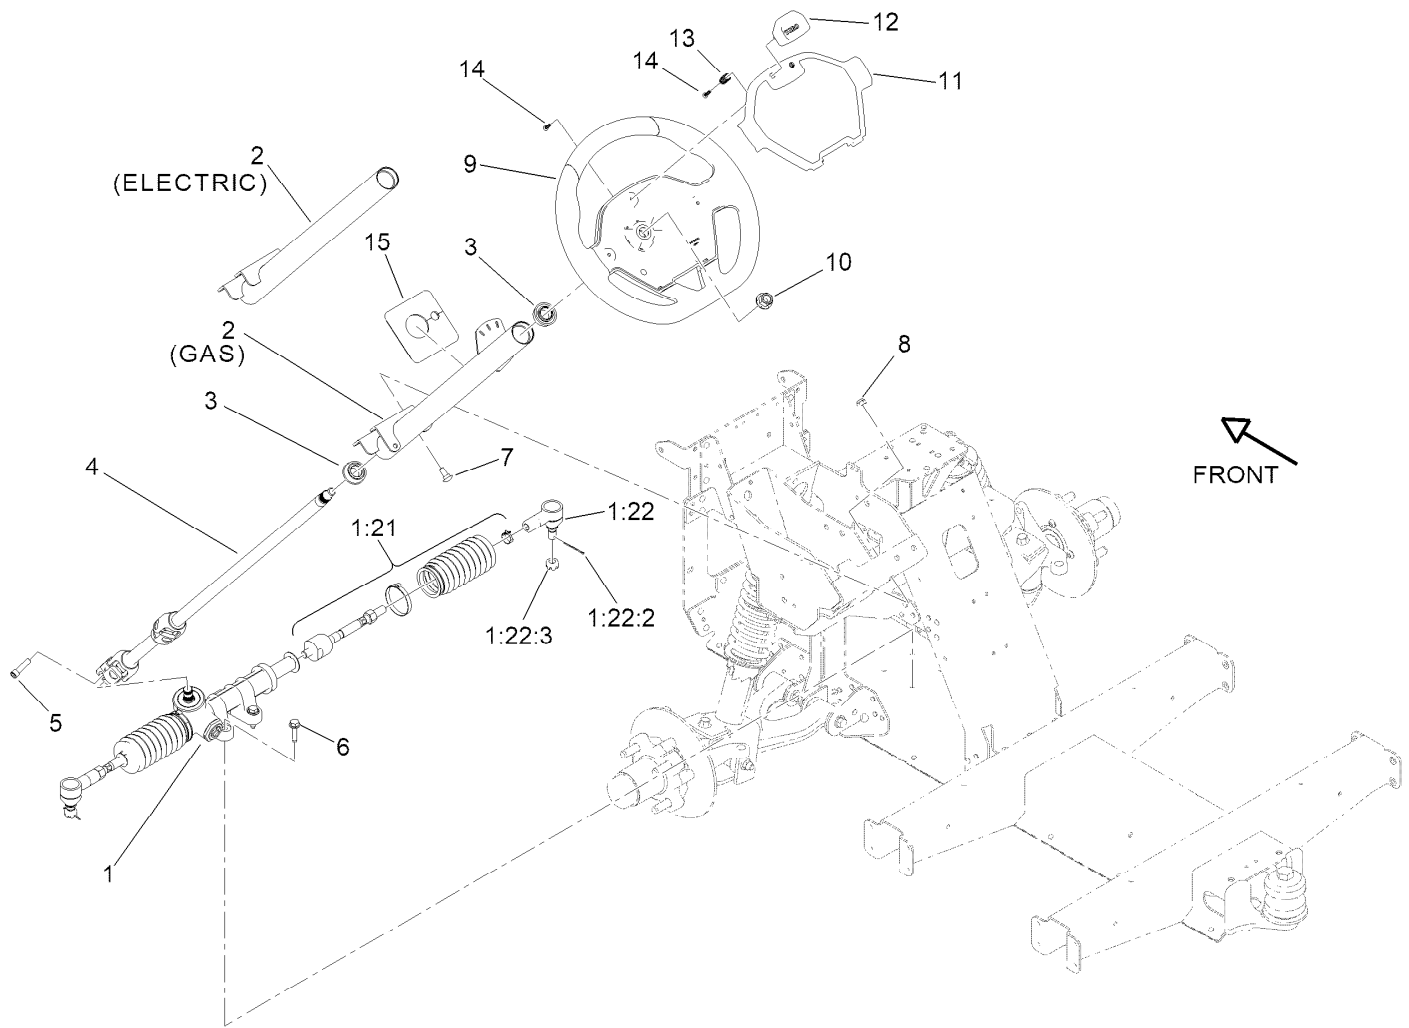

Steering Assembly

Ref.	Part Number	Qty.	Description
1	138-0114	1	Steering Rack ASM
1:21	140-4591	1	Kit-Tie Rod ASM, Gtx
1:22	140-4592	1	Kit-Rod End ASM
1:22:2	3272-42	1	Pin-Cotter
1:22:3	140-2493	1	Nut-Hex, Slotted
2	147-8007	1	Steering Column ASM, Gtx
3	112-3262	2	Bearing
4	145-2050	1	Steering Shaft ASM
5	145-7145	1	Screw-HSH,Lock
6	32144-49	4	Screw-HWHTF


Ref.	Part Number	Qty.	Description
7	3230-1	4	Bolt-CARR
8	119-4041	4	Nut-HF
9	144-5570	1	Steering Wheel ASM
10	139-1689	1	Nut-HF
11	144-5567	1	Cover-Wheel, Steering
12	144-5566	1	Clip-Wheel, Steering
13	144-5537	2	Spring-Compression
14	94-4496	5	Screw-PPH
15	140-9903	1	Grommet-Column, Steering

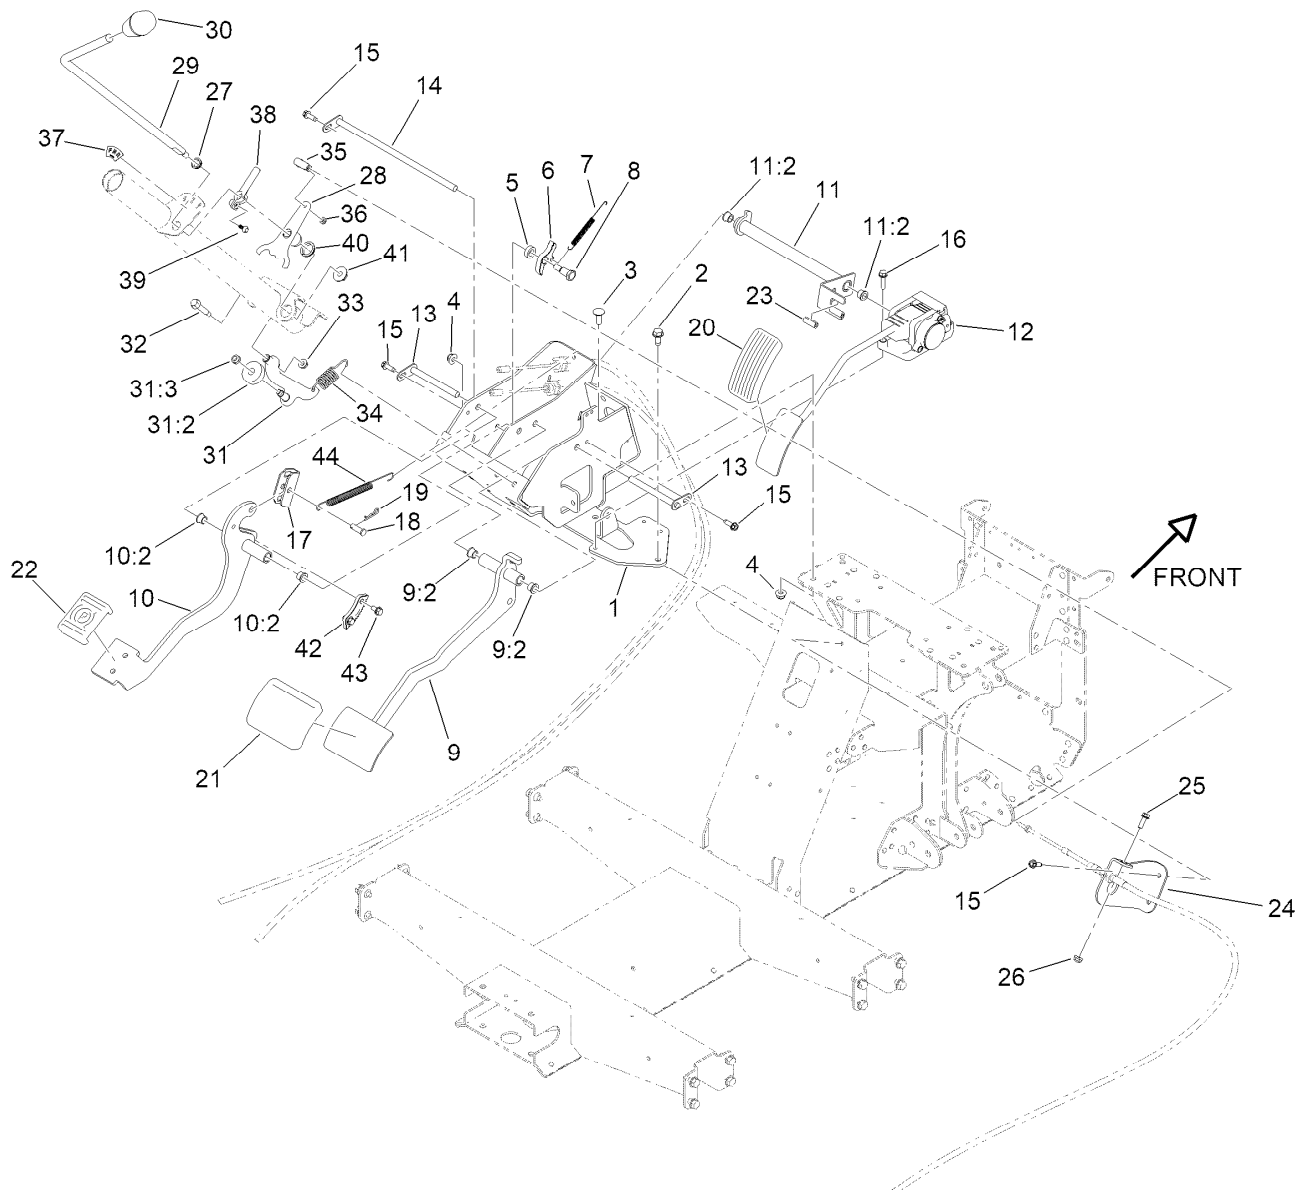

Pedal and Control Assembly

Ref.	Part Number	Qty.	Description
1	161-5480-03	1	Pedal Box Mount ASM [black]
2	32144-70	4	Screw-HWHTF
3	3230-10	1	Bolt-CARR
4	119-4041	2	Nut-HF
5	256-276	1	Spacer-Nylon
6	140-9703	1	Pawl-Parking
7	140-9858	1	Spring-Extension
8	144-5458	1	Screw-Shoulder
9	161-5486	1	Brake Pedal ASM
9:2	256-116	2	Bushing-Flange
10	147-8016	1	Parking Pedal ASM
10:2	256-116	2	Bushing-Flange
11	161-5495	1	Trip Pivot ASM
11:2	256-116	2	Bushing-Flange
12	161-5485	1	Throttle-Electronic
13	131-8459	2	Shaft-Pivot
14	161-5492	1	Flag Pin ASM
15	49-2040	5	Screw-HWHTF
16	32144-86	3	Screw-HWHTF
17	87-3480	1	Bracket-Equalizer, Cable


Ref.	Part Number	Qty.	Description
18	1-808280	1	Pin-Clevis
19	1-806003	1	Pin-Cotter
20	140-4572	1	Pedal Pad-Throttle
21	161-5253	1	Footpad-Pedal
22	144-5551	1	Pad-Parking Brake
23	161-5494	2	Trim-Edge
24	161-5279-03	1	Bracket-Mount, Shift Cable
25	115-5103	1	Screw-HHF
26	104-7201	1	Nut-HF, NI
27	110-3318	1	Bushing-Snap
28	144-5438	1	Shift Arm
29	144-5439	1	Shaft-Shift
30	131-8473	1	Knob-Tapered
31	138-6432	1	Detent Arm Assembly
31:2	145-2095	1	Bushing-Detent, Shift
31:3	3296-47	1	Nut-Lock, NI
32	116-6876	1	Screw-Shoulder
33	32128-33	1	Nut-HF
34	131-8419	1	Spring-Extension
35	2411-38	1	Joint-Ball
36	3296-27	1	Nut-Lock, NI

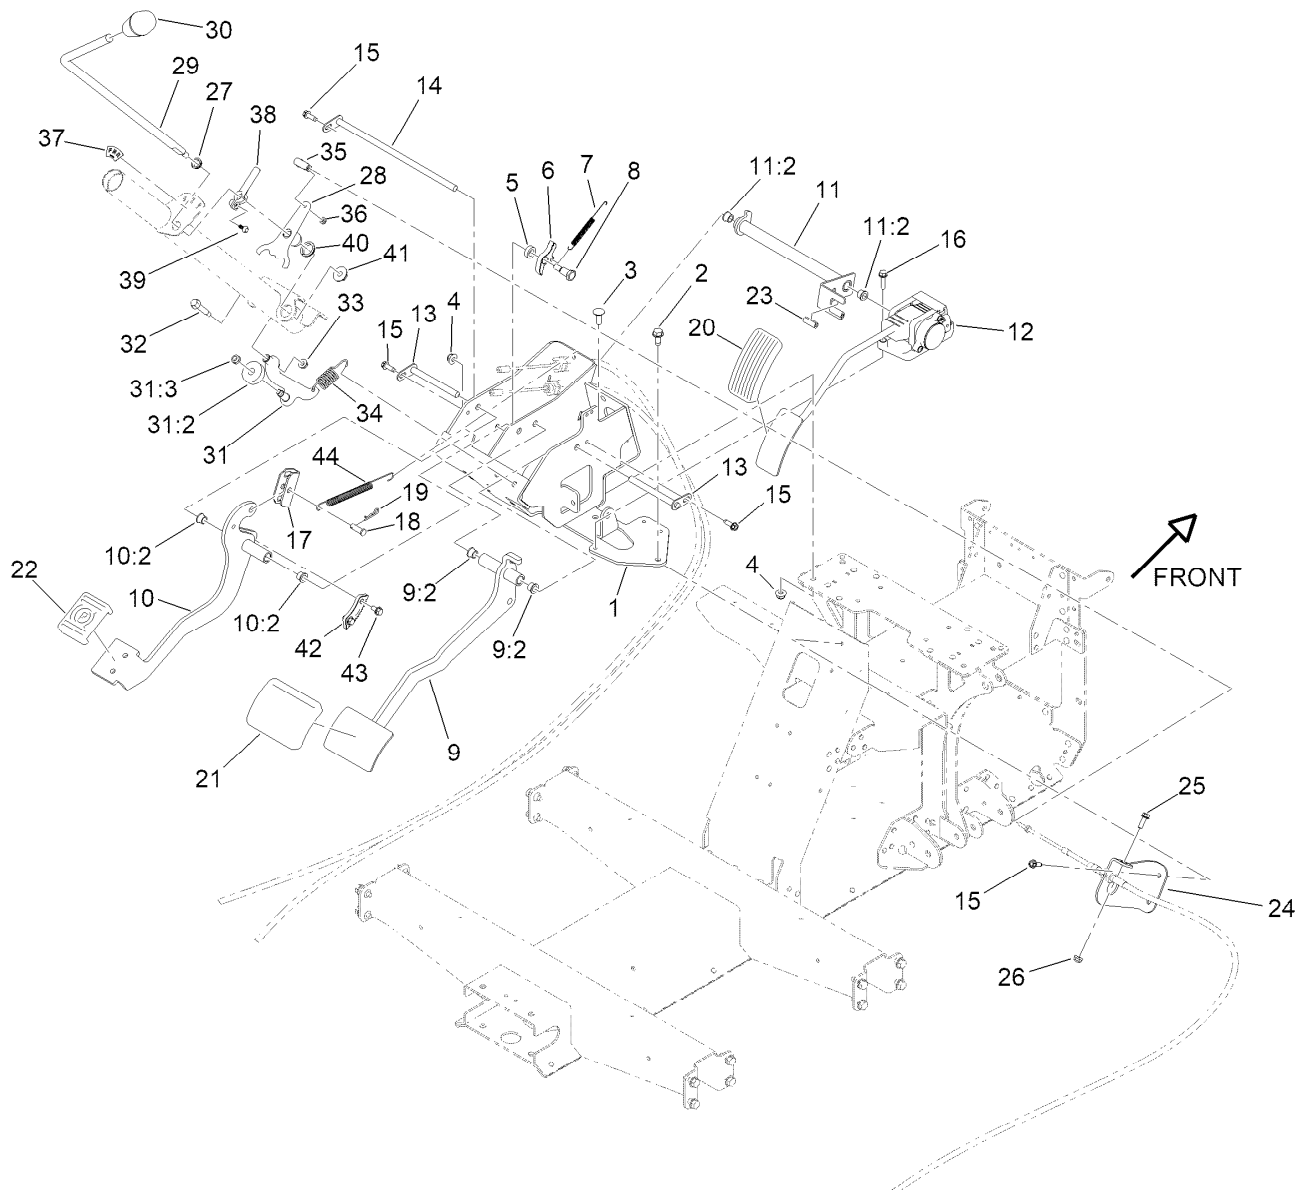

Pedal and Control Assembly (continued)


Ref.	Part Number	Qty.	Description
37	131-8463	1	Decal-Shift
38	163-3905	1	Indicator-Gear
39	121-9605	1	Screw-HWH
40	114-8893	1	Bushing-Clip

Ref.	Part Number	Qty.	Description
41	32128-30	1	Nut-HF
42	163-4966	1	Plate-Ratcheting
43	119-1065	2	Screw-Lock,HF
44	163-4978	1	Spring-Extension

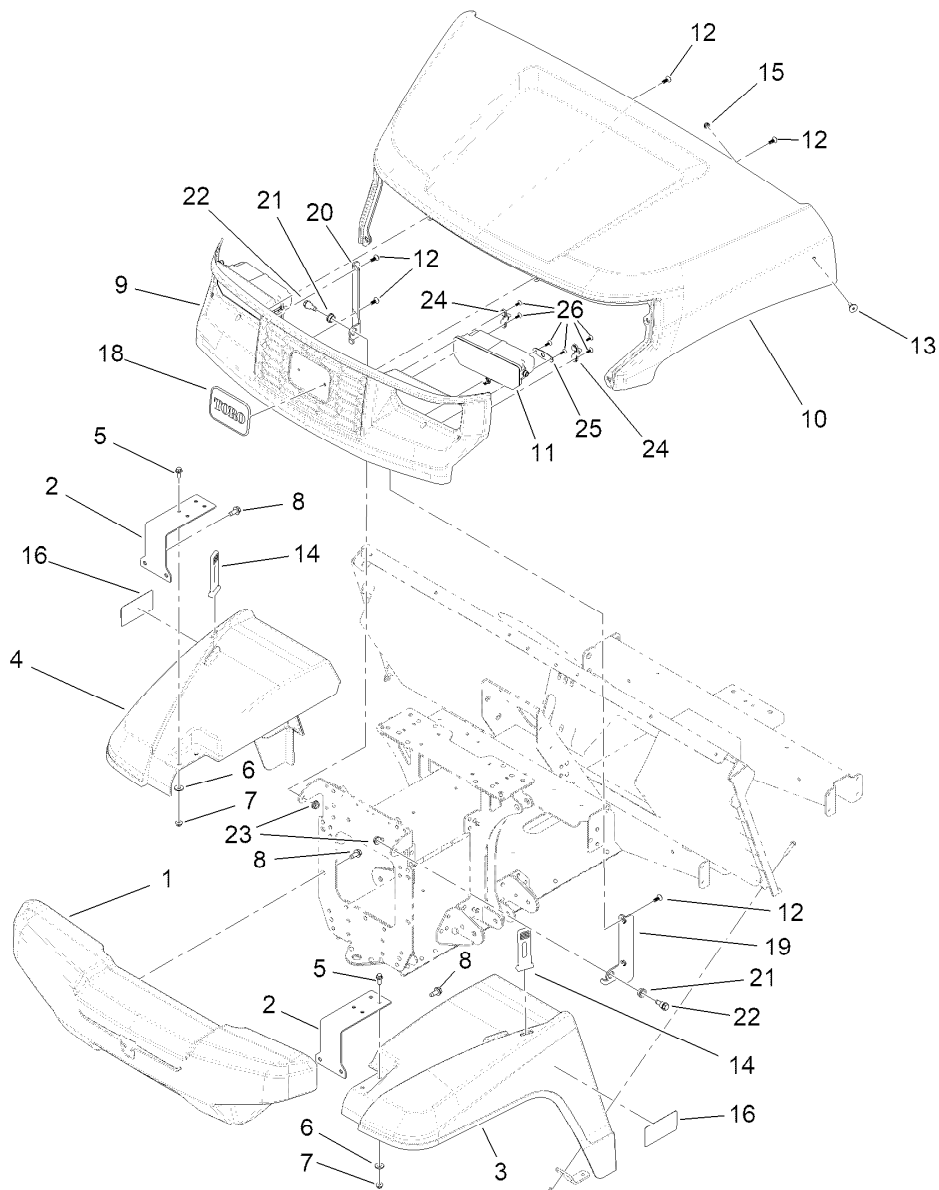

Hood and Fender Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	163-5190	1	Bumper-Front, Armor	14	131-8402	2	Strap-Down, Hold
2	163-5101-03	2	Bracket-Fender	15	3296-56	2	Nut-Lock, NI
3	127-7771	1	Fender-Front, LH	16	163-9450	2	Emblem-Ltx, EFI
4	127-7772	1	Fender-Front, RH	18	144-2294	1	Emblem-Toro
5	3234-33	4	Screw-HHF	19	164-4547-03	1	Bracket-Pivot, LH
6	3256-2	4	Washer-Flat	20	164-4548-03	1	Bracket-Pivot, RH
7	104-7201	4	Nut-HF, NI	21	256-156	2	Bushing-Flange
8	32144-70	8	Screw-HWHTF	22	115-1958	2	Bolt-Shoulder
9	163-5185	1	Grille-Front, Ltx	23	32128-20	2	Nut-HF
10	163-5195	1	Hood-Ltx	24	163-5172	4	Retainer-Headlight, Ltx
11	163-5102	2	Headlight ASM	25	163-5182	2	Plate-Headlight Adjuster
12	138-5775	10	Screw-Delta Point	26	139-3430	12	Screw-Bhf
13	136-7182	2	Screw-Countersunk, Oval				

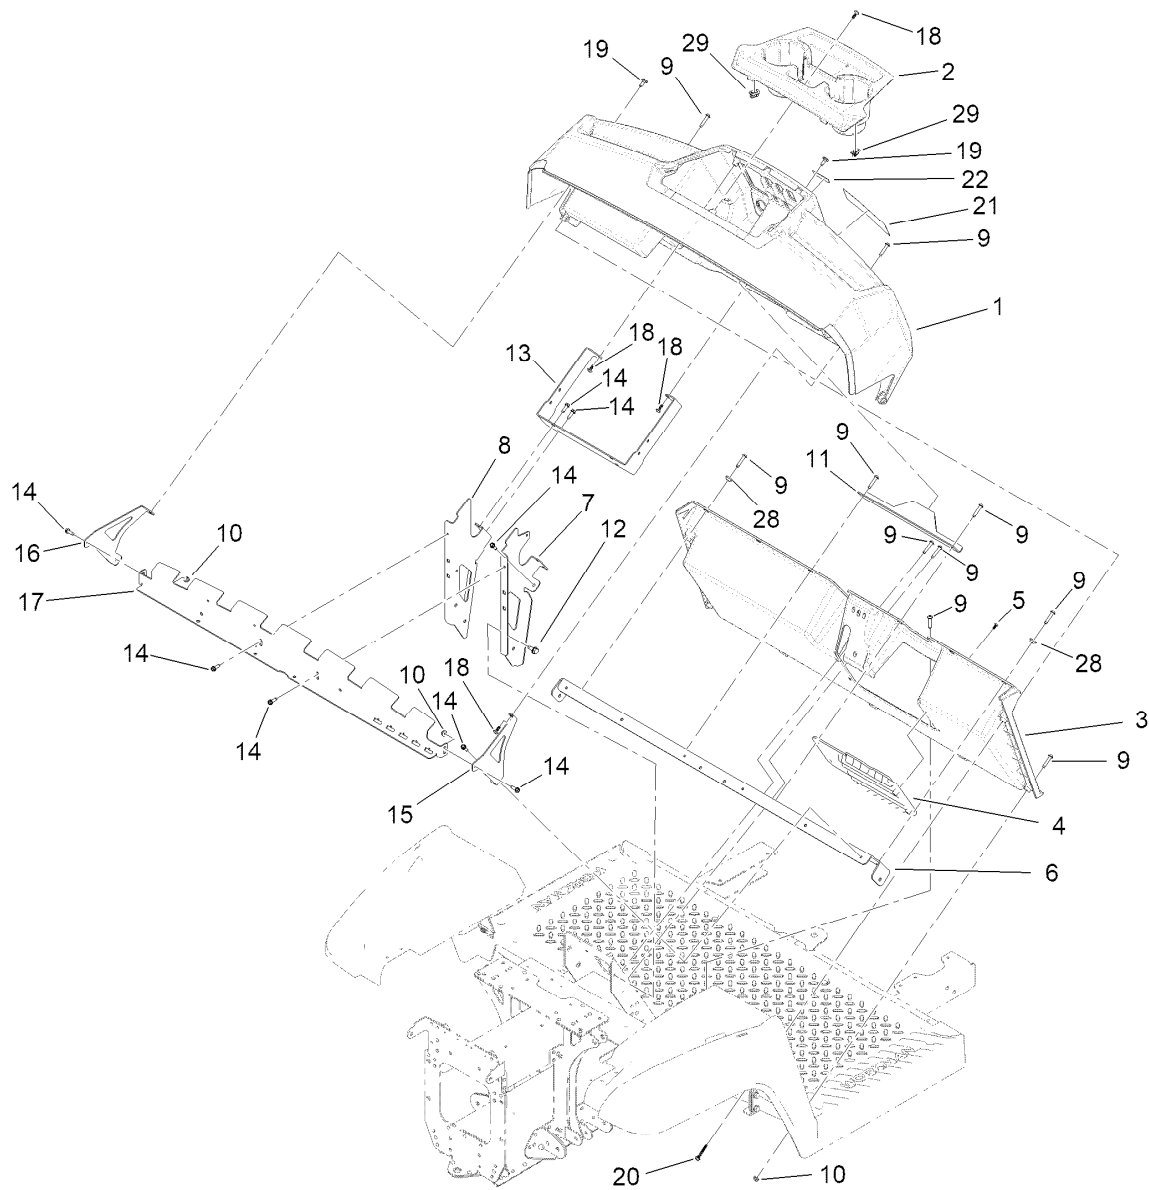

Dash Assembly

Ref.	Part Number	Qty.	Description
1	163-5088	1	Dash
2	163-5091	1	Cupholder
3	161-5491	1	Footboard-Trim
4	163-5106	1	Cover-Footboard
5	107-7461	2	Screw-Plastite
6	163-9455-03	1	Bracket-Dash, Support
7	163-5089-03	1	Bracket-Dash, LH
8	163-5090-03	1	Bracket-Dash, RH
9	132-6777	14	Screw-Twh Thd Roll
10	104-7201	4	Nut-HF, NI
11	163-5093-03	1	Bracket-Dash, Lower
12	32144-70	4	Screw-HWHTF


Ref.	Part Number	Qty.	Description
13	163-5092-03	1	Bracket-Dash, Upper
14	49-2040	12	Screw-HWHTF
15	163-5094-03	1	Bracket-Dash, Driver
16	163-5095-03	1	Bracket-Dash, Pass
17	163-5096-03	1	Support-Dash
18	138-5775	4	Screw-Delta Point
19	120-7950	2	Screw-Torx
20	137-3012	2	Screw-Plastite, HWH
21	163-9306	1	Decal-Operation, Gas
22	163-9302	1	Decal-Ignition, Gas
28	163-5097	2	Spacer-Plastic
29	140-9908	2	Clip-Trim

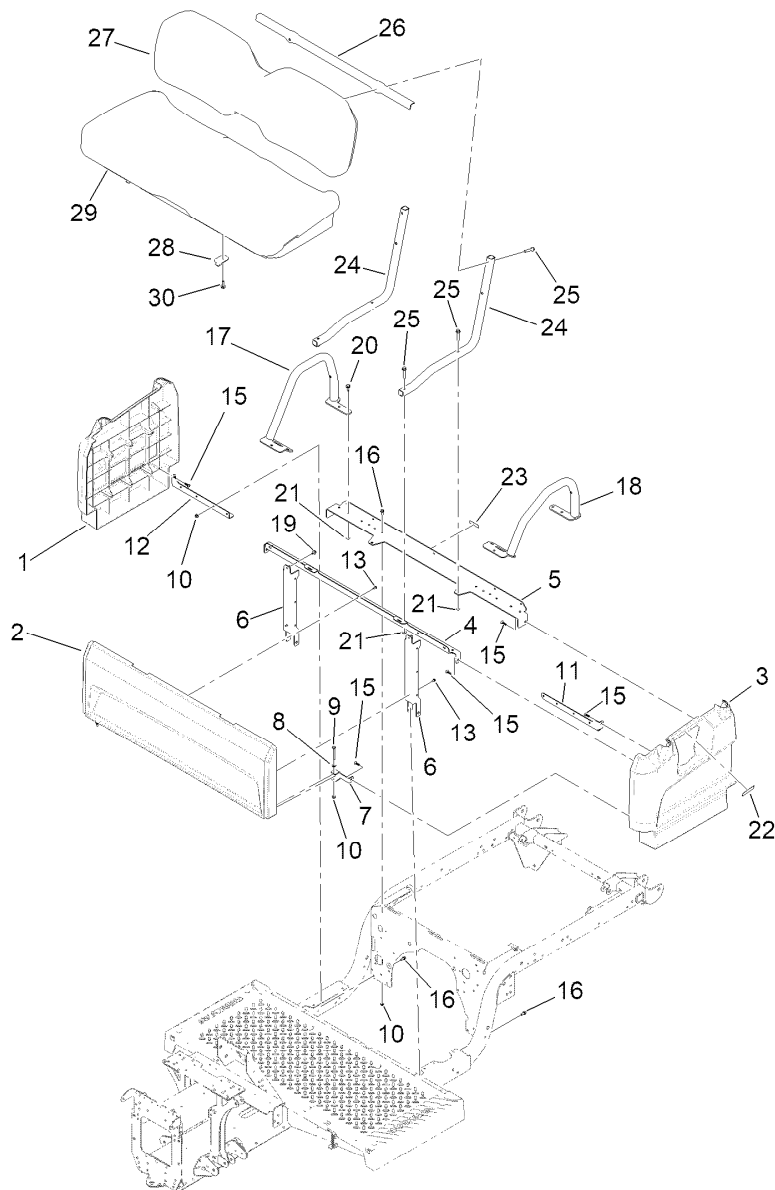

Seatbase Assembly

Ref.	Part Number	Qty.	Description
1	163-9459	1	Panel-Seatbase, RH
2	133-7188	1	Panel-Base, Seat
3	163-9460	1	Panel-Seatbase, LH
4	163-3765-03	1	Support-Front, Seat
5	163-5086-03	1	Support-Rear, Seat
6	127-7841-03	2	Channel-Support, Seat
7	127-7844-03	2	Clamp-Plate, Floor
8	3256-22	2	Washer-Flat
9	321-18	2	Screw-HH
10	104-7201	8	Nut-HF, NI
11	163-9430-03	1	Bracket-Support, LH
12	127-7843-03	1	Bracket-Support, Side (RH)
13	112-6349	5	Screw-HWH
15	120-2349	8	Screw
16	3234-33	6	Screw-HHF


Ref.	Part Number	Qty.	Description
17	145-2075-05	1	Hip Restraint ASM, RH
18	145-2070-05	1	Hip Restraint ASM, LH
19	46-6810	2	Screw And Washer ASM
20	32144-70	6	Screw-HWHTF
21	119-4041	10	Nut-HF
22	131-8410	1	Decal-Danger, Fuel
23	120-9570	1	Decal-Warning
24	163-5087-05	2	Tube-Seat
25	145-7105	8	Screw-HHF
26	163-5058-05	1	Stiffener-Seat, Back
27	163-3763	1	Seat Backrest ASM
28	140-0812	2	Bracket-Hinge, Seat
29	163-3762	1	Seat Bottom ASM
30	115-5142	2	Screw-HHF, Patch

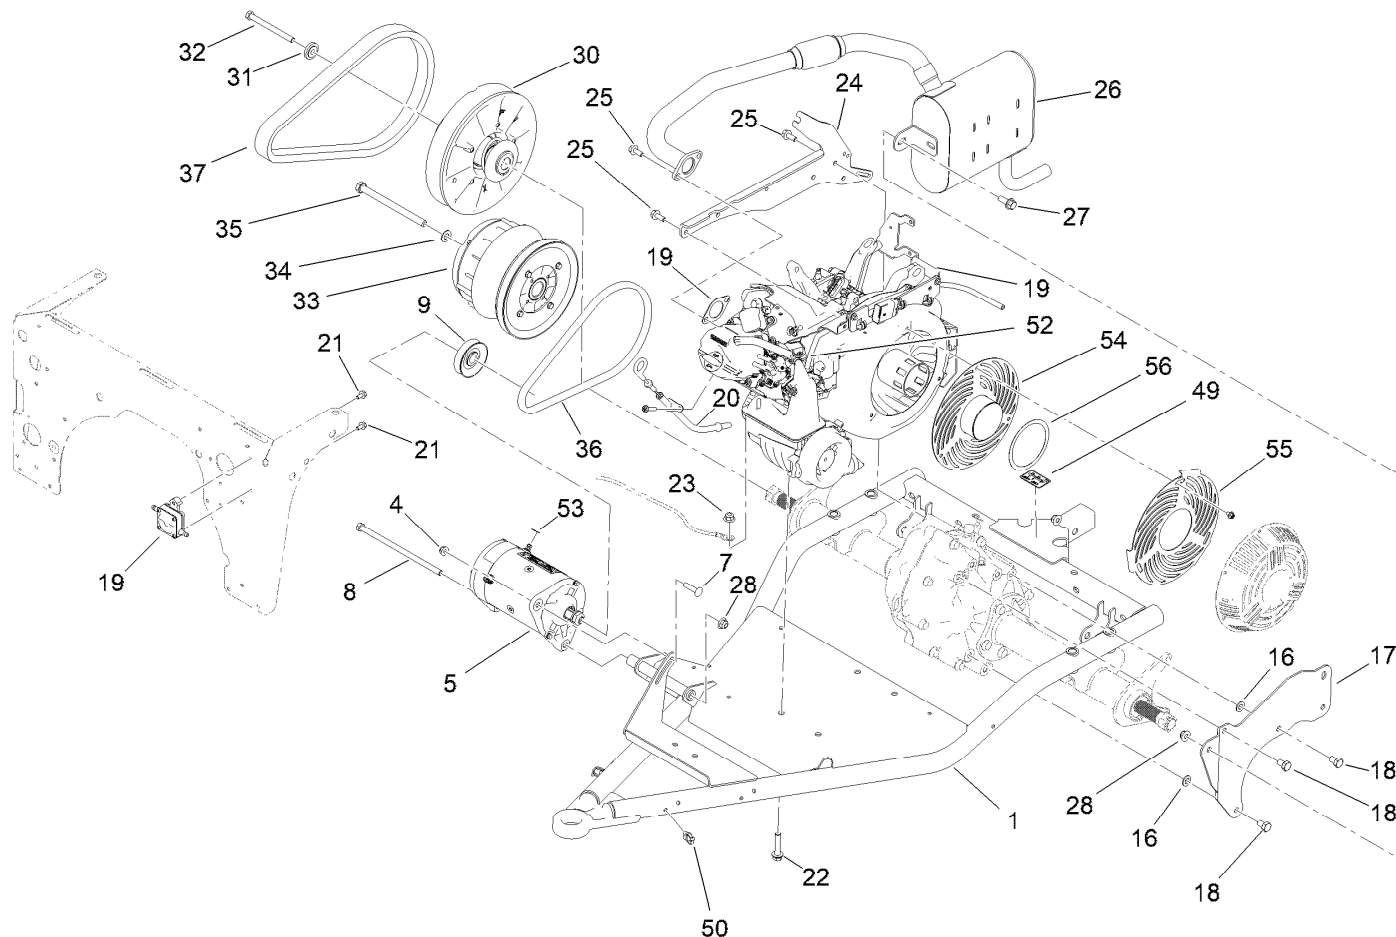

Engine Assembly

Ref.	Part Number	Qty.	Description
1	163-3715-03	1	Swingarm ASM [black]
4	119-4041	1	Nut-HF
5	131-8444	1	Starter/Generator ASM
7	112-6950	1	Screw-CARR
8	323-30	1	Screw-HH
9	140-9821	1	Pulley-Drive
16	33095-00	2	Washer-Flat
17	164-4536	1	Bracket-Muffler
18	70-8470	3	Screw-HH
19	163-3707	1	Engine-Briggs
20	163-3728	1	Dipstick Tube ASM
21	33103-012	2	Screw-HHF
22	140-4808	4	Screw-HHF
23	139-3380	4	Nut-HF
24	147-3900	1	Plate-Spanner
25	139-3392	7	Screw-Lock
26	164-4540	1	Exhaust ASM


Ref.	Part Number	Qty.	Description
27	3234-42	3	Screw-HHF
28	119-4042	4	Nut-HF, NI
30	119-6011	1	Secondary Clutch ASM
31	104-6563	1	Washer-Stepped
32	119-0723	1	Screw-HH, Lock
33	138-0095	1	Primary Clutch ASM
34	3256-25	1	Washer-Flat
35	131-8521	1	Screw-HH
36	113105	1	Belt-V
37	131-8567	1	Belt-Variable
49	137-9984	1	Decal-Load, Towing
50	32180-030	2	Clip-Tie
52	3290-378	3	Tie-Cable
53	32180-535	1	Terminal-Tab
54	163-9498	1	Inner Shroud ASM
55	163-9493	1	Shroud-Outer
56	164-4535	1	Decal-Wear

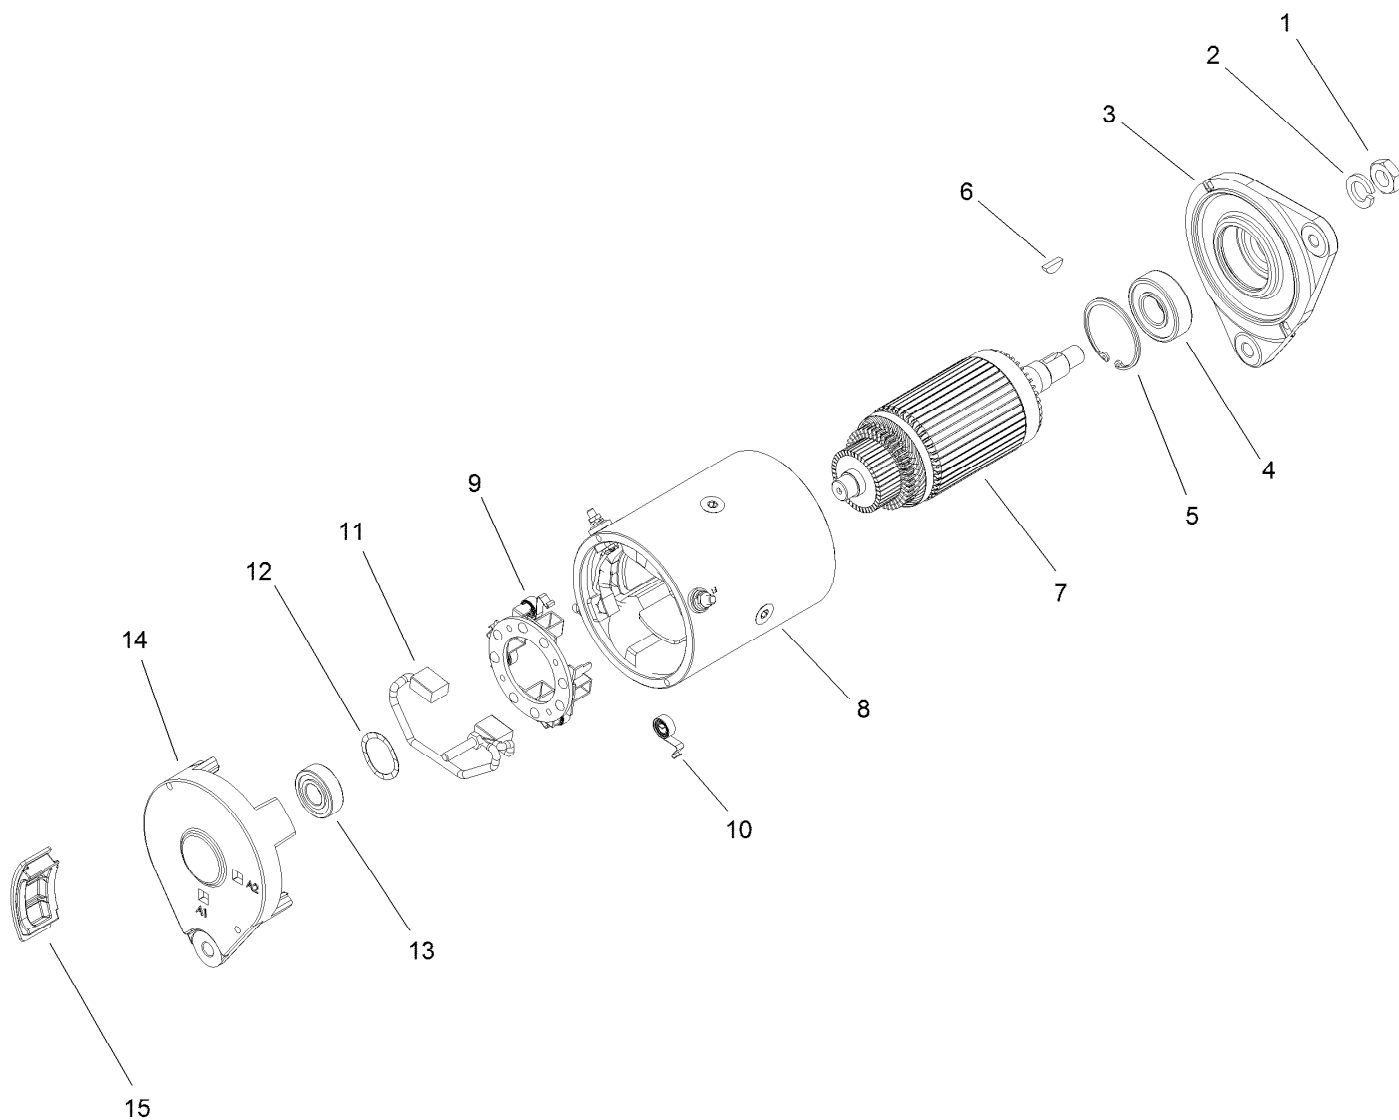

Starter Generator Assembly No. 131-8444


Ref.	Part Number	Qty.	Description
1	119-9651	1	Nut
2	119-9652	1	Washer-Lock
3	133-0599	1	Head-Drive End
4	119-9655	1	Bearing
5	119-9656	1	Ring-Retaining
6	119-9657	1	Key-Woodruff
7	119-9658	1	Armature ASM
8		1	Frame And Field Assembly ●
9	119-9661	1	Brush Box ASM
10	119-9660	4	Spring-Brush
11	119-9659	1	Brush Lead And Terminal Service Kit
12	119-9662	1	Washer-Wave
13	119-9663	1	Bearing
14		1	Head-End, Cummutator ●
15	133-0600	4	Plug-Rubber

● Not serviced separately

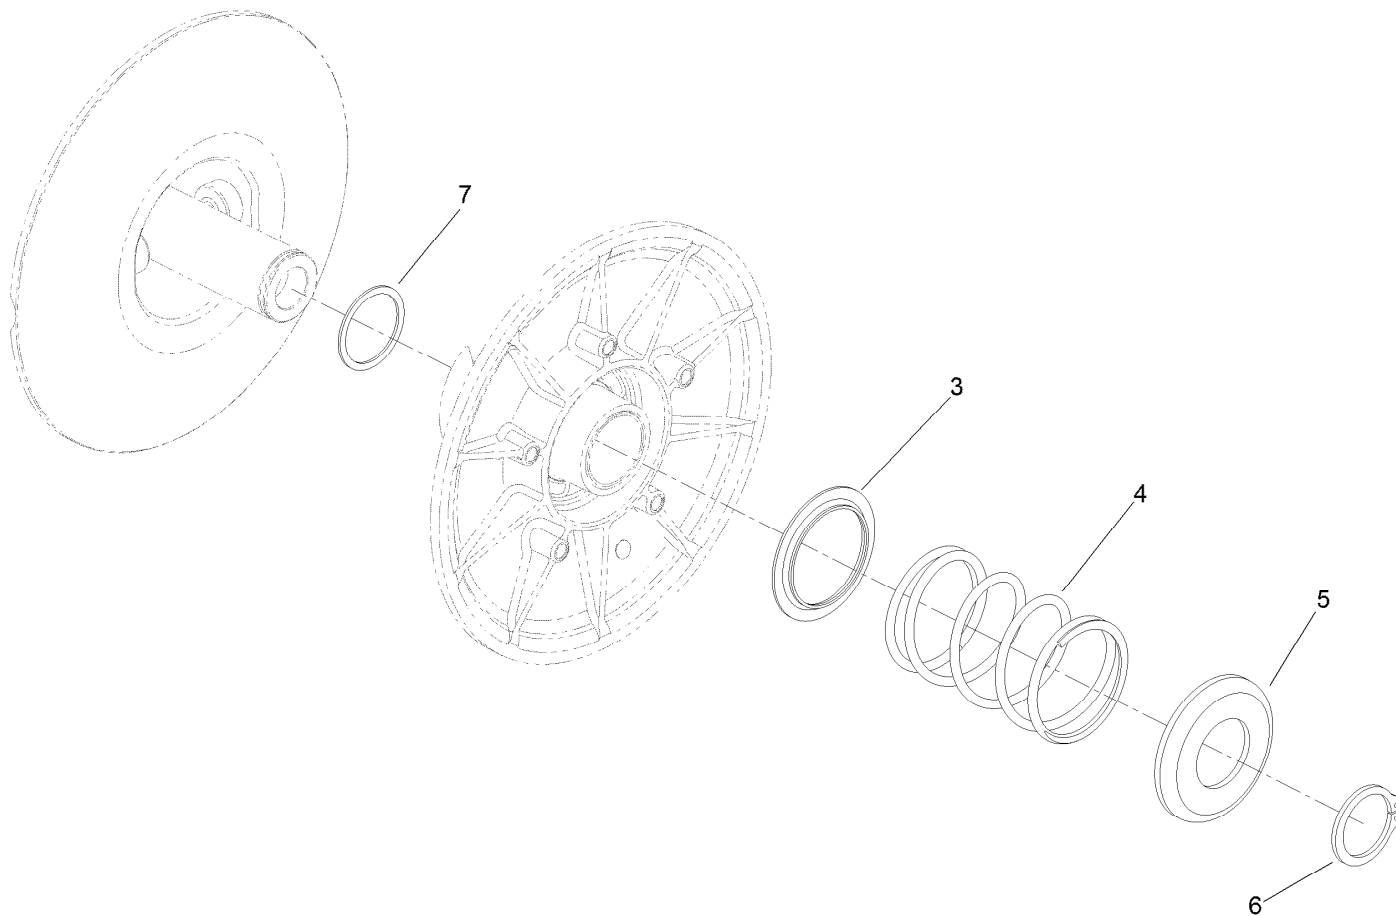


Secondary Clutch Assembly No. 119-6011

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	119-0809	1	Cup-Spring Retainer, Inner
4	119-9360	1	Spring-Compression, Black/Almond
5	119-0810	1	Cup-Spring Retainer, Outer
6	119-0811	1	Ring-Retaining
7	119-6018	1	Shim-Thrust

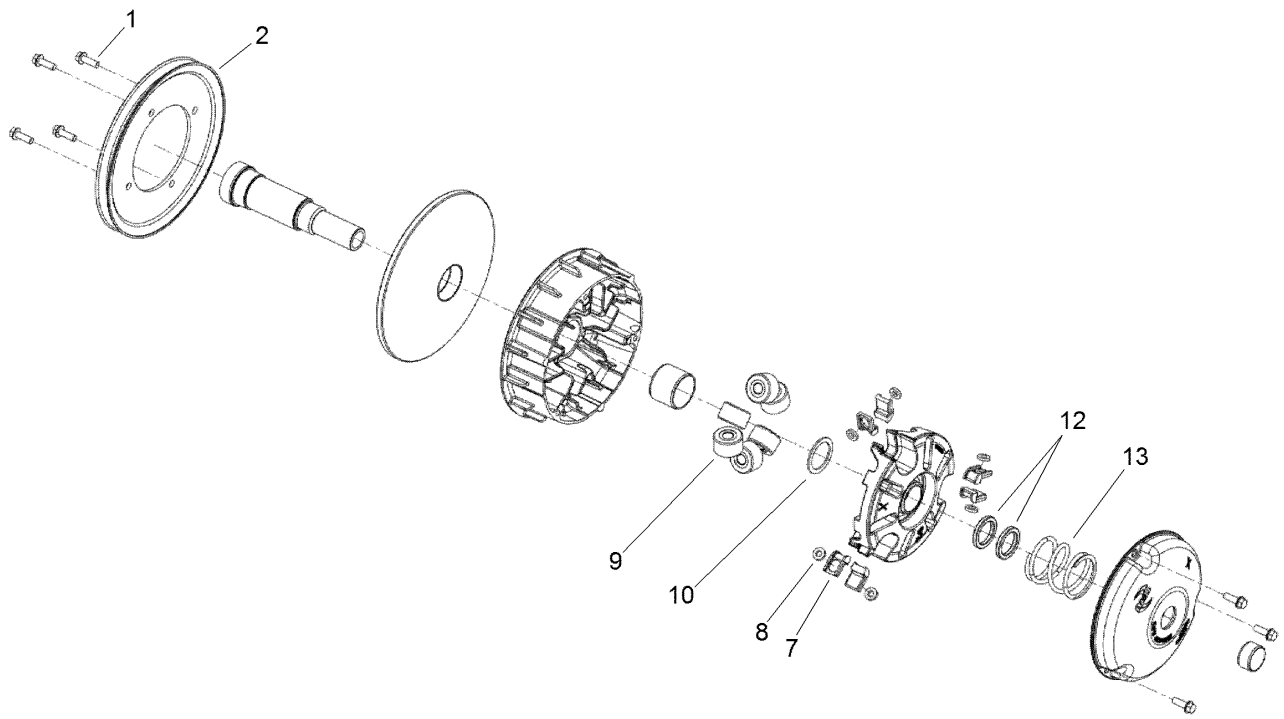

Primary Clutch Assembly No. 138-0095

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	49-2040	7	Screw-HWHTF
2	119-0813	1	Pulley-Primary
7	127-8689	6	Button-Primary, Torque
8	127-8690	6	Plug-Button, Torque
9	119-0804	6	Weight-Roller
10	119-0812	1	Shim-Spider
12	119-0807	2	Shim-Limiter
13	119-9532	1	Spring-Red/White

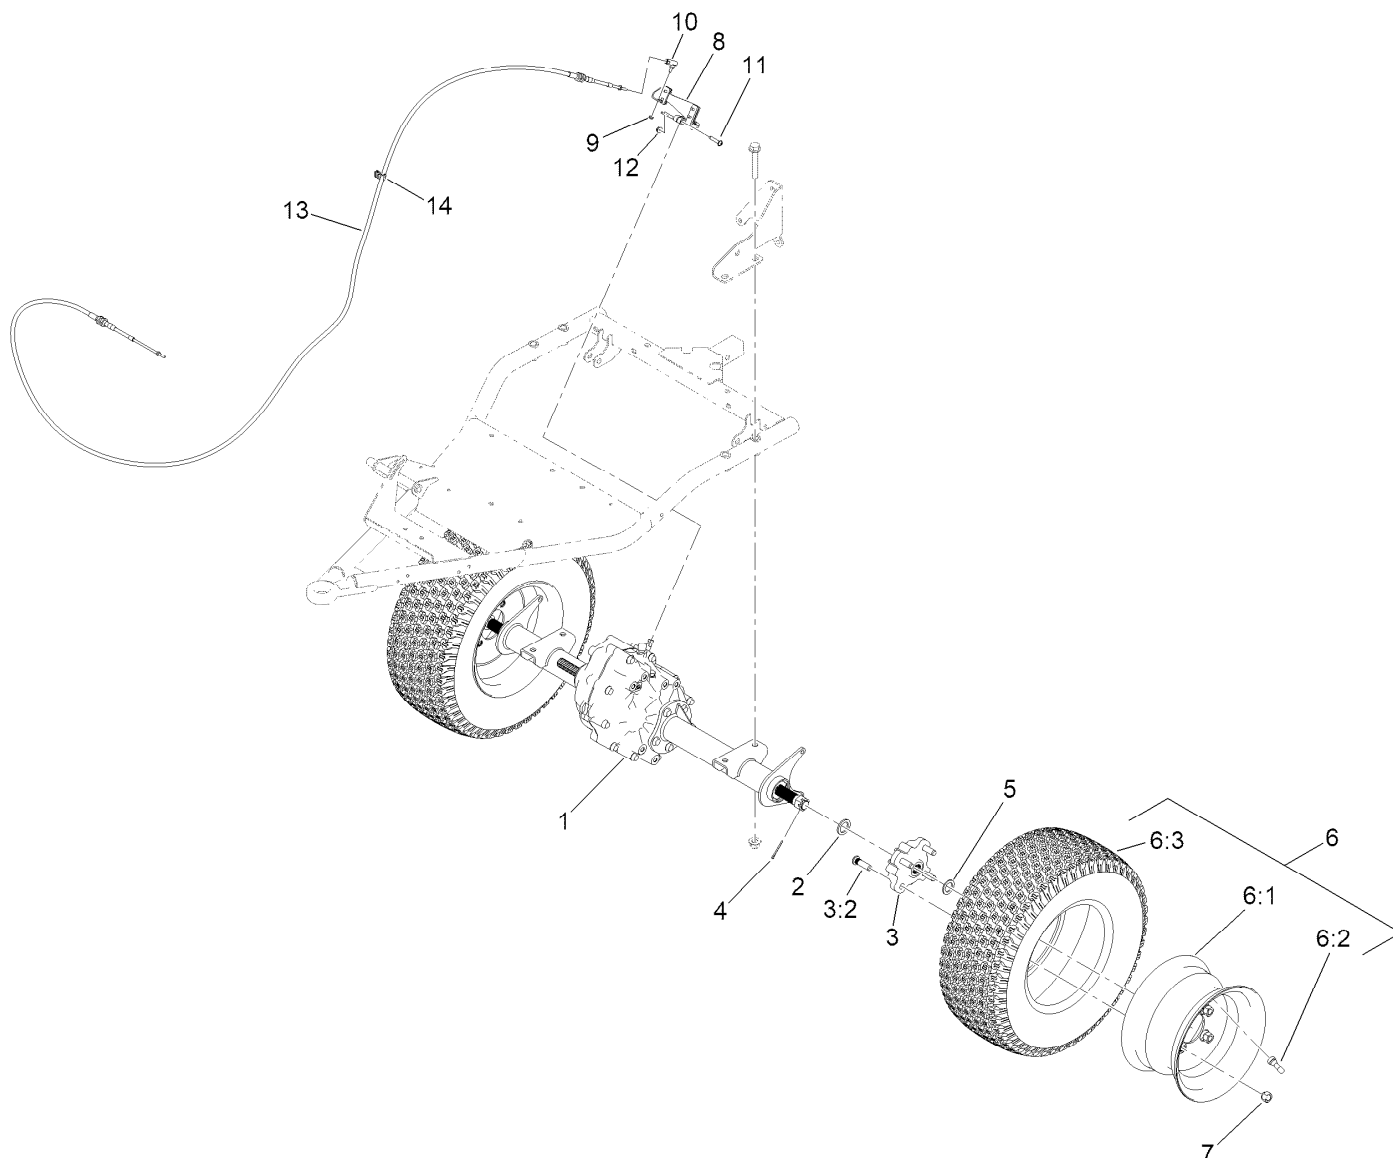


Transaxle Assembly

Ref.	Part Number	Qty.	Description
1	131-3486	1	Transaxle
2	131-8570	2	Spacer-Hardened
3	140-9951	2	Rear Hub ASM
3:2	10-6830	4	Stud-Type, Drive
4	1-806800	2	Pin-Cotter
5	3-7898	2	Washer-Thrust
6	147-2761	2	Wheel And Tire ASM
6:1	147-2762	1	Wheel
6:2	139-4475	1	Tire-20 X 8.00-10
6:3	232-27	1	Stem-Valve

Ref.	Part Number	Qty.	Description
7	139-2564	8	Nut-Lug
8	133-7260-03	1	Arm-Shift
9	3296-27	1	Nut-Lock, NI
10	2411-38	1	Joint-Ball
11	132-6777	1	Screw-Twh Thd Roll
12	104-7201	1	Nut-HF, NI
13	127-8897	1	Cable-Shift
14	32180-225	1	Clip-Edge, Top-Perpendicular


Transaxle Assembly No. 131-3486

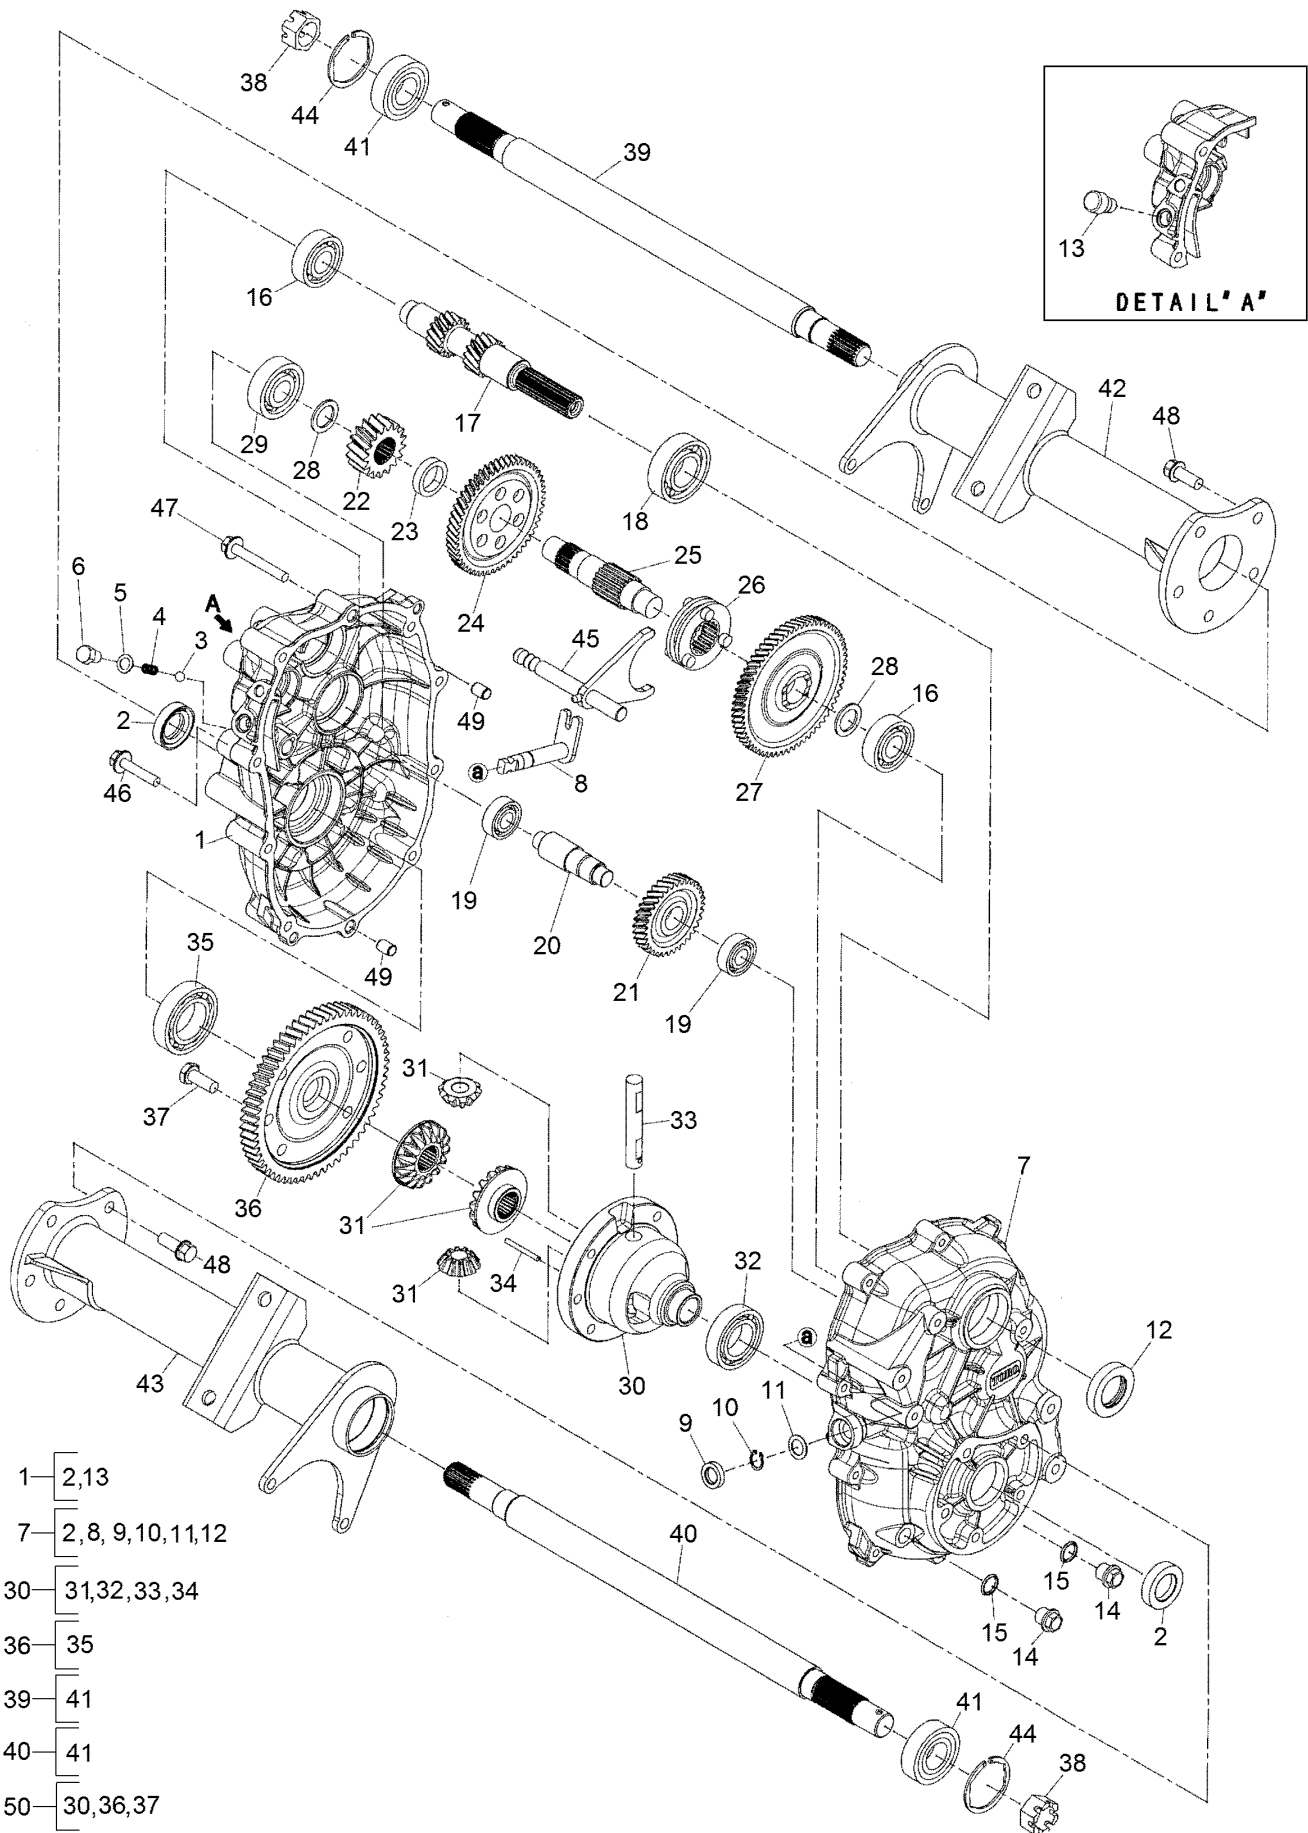

Transaxle Assembly No. 131-3486 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-2400	1	Case-LH	26	133-2419	1	Clutch-Pin
2	133-2401	2	Seal-Oil	27	133-2420	1	Gear
3	104-1660	1	Ball-Steel	28	133-2421	2	Spacer
4	104-1661	1	Spring	29	133-2422	1	Bearing-Ball
5	104-1662	1	Gasket	30	133-2423	1	Case-Differential
6	163-9434	1	Bolt M10	31	133-2424	1	Set-Gear, Differential
7	133-2402	1	Case-RH	32	133-2425	1	Bearing-Ball
8	133-2403	1	Shaft-Select	33	104-1644	1	Shaft-Differential
9	133-2446	1	Seal-Oil	34	104-1645	1	Pin
10	133-2404	1	Ring-Snap	35	133-2426	1	Bearing-Ball
11	133-2405	1	Spacer	36	133-2427	1	Gear
12	104-1607	1	Seal-Oil	37	104-1649	6	Bolt
13	133-2406	1	Breather-Air	38	133-2428	2	Nut-Castle
14	133-2407	2	Plug-Drain, Oil	39	133-2429	1	Shaft-Axle, LH
15	133-2408	2	Gasket	40	133-2430	1	Shaft-Axle, RH
16	133-2409	2	Bearing-Ball	41	133-2431	2	Bearing-Ball
17	133-2410	1	Shaft-Input	42	133-2432	1	Case-Axle, LH
18	133-2411	1	Bearing-Ball	43	133-2433	1	Case-Axle, RH
19	133-2412	2	Bearing-Ball	44	133-2434	2	Ring-Snap
20	133-2413	1	Shaft-Counter	45	133-2435	1	Shaft-Shift
21	133-2414	1	Gear	46	133-2436	1	Bolt-Flange
22	133-2415	1	Gear	47	133-2437	9	Bolt-Flange
23	133-2416	1	Collar	48	133-2438	10	Bolt-Flange
24	133-2417	1	Gear	49	133-2439	2	Pipe-Knock
25	133-2418	1	Shaft-Center	50	133-2440	1	Differential ASM


Battery Assembly

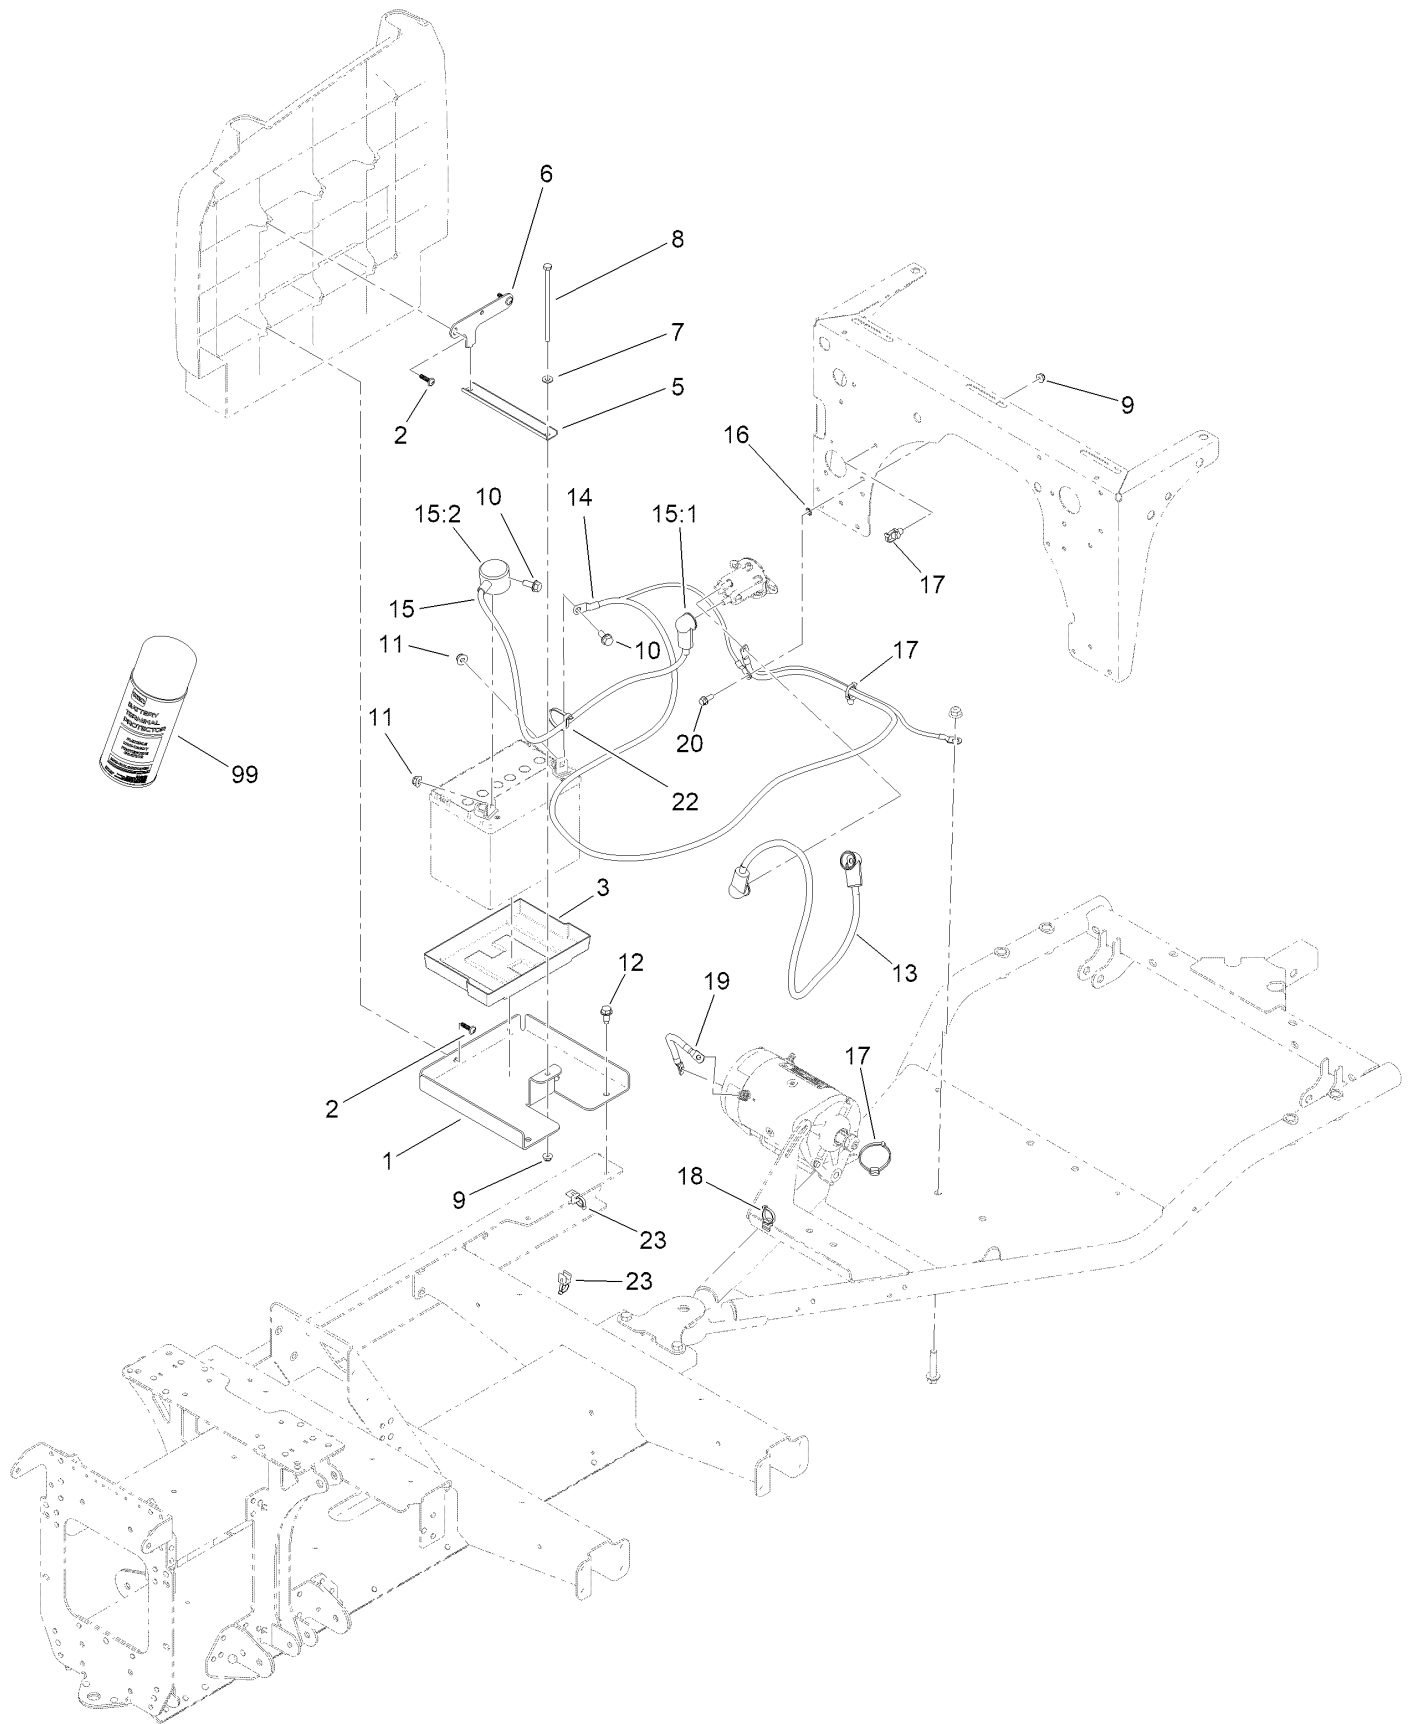

Battery Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-7810-03	1	Base-Battery	15	109-7621	1	Positive Battery Cable ASM
2	120-2349	4	Screw	15:1	1-543393	1	Insulator-Solenoid
3	106948	1	Tray-Battery	15:2	109-2407	1	Insulator-Battery
5	127-7816-03	1	Channel-Clamp, Battery	16	3255-7	1	Washer-Lock/EXT
6	127-7814-03	1	Plate-Clamp, Battery	17	32180-030	3	Clip-Tie
7	3256-22	1	Washer-Flat	18	32180-225	1	Clip-Edge, Top-Perpendicular
8	321-47	1	Screw-HH	19	163-3721	1	Cable-Battery, Bk
9	104-7201	2	Nut-HF, NI	20	3234-33	1	Screw-HHF
10	3234-5	2	Screw-HHF	22	3290-378	1	Tie-Cable
11	119-4041	2	Nut-HF	23	32180-082	2	Clip-Edge W/Tie, Perpendicular
12	32144-70	2	Screw-HWHTF				
13	163-3903	1	Battery-Cable, Positive ASM	99	107-0392	1	Protection-Terminal, Aerosol
14	163-3904	1	Battery-Cable, Negative ASM				


Electrical Assembly

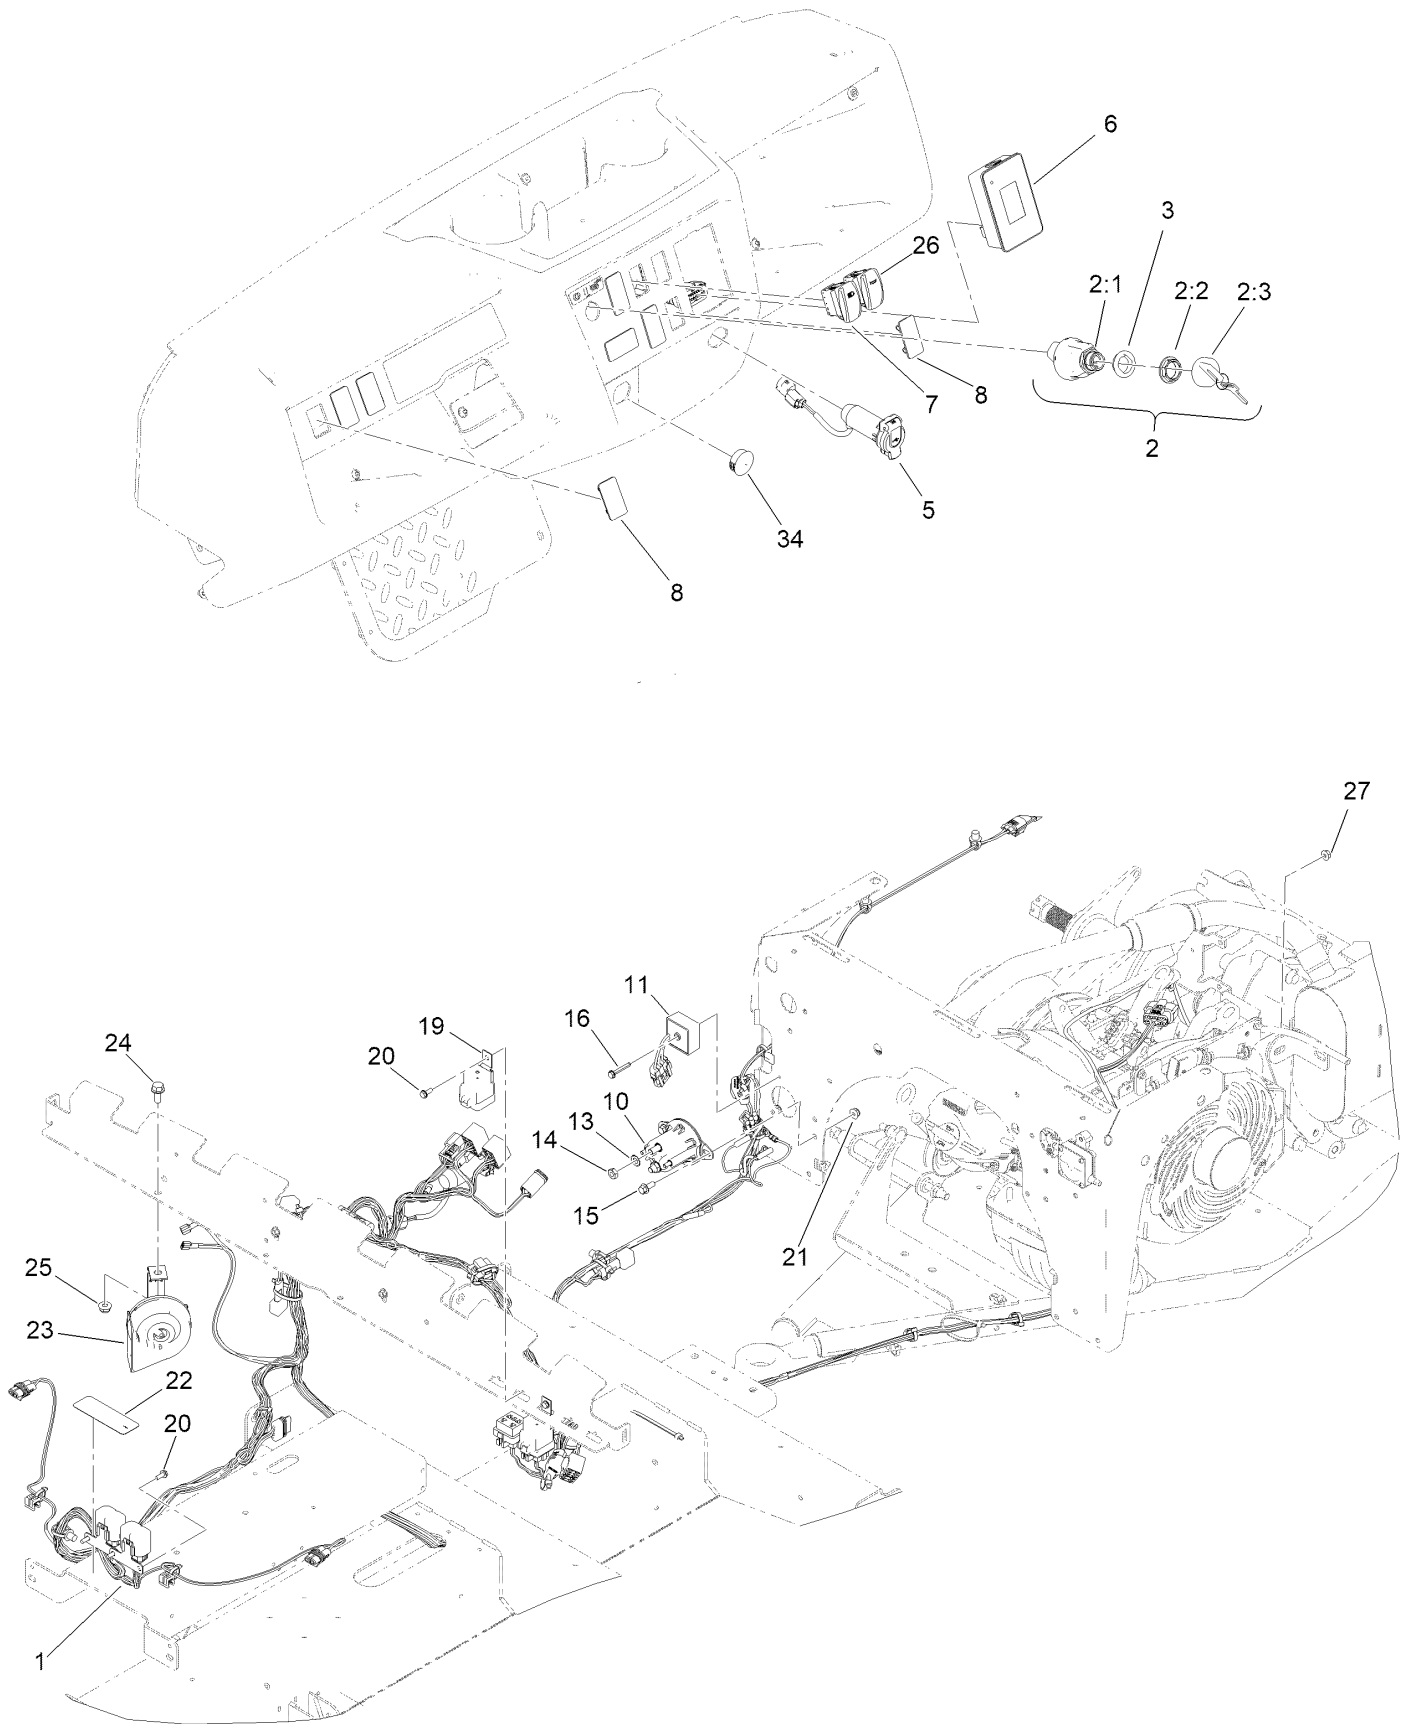

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	122-4157	1	Harness-Wire, Ltx, EFI	14	3220-2	2	Nut-Hex Jam
2	122-2513	1	Switch-Ignition, Suns	15	3234-33	2	Screw-HHF
2:1	121-5160	1	Nut-Hex	16	100-4352	1	Screw-HWH
2:2	122-2704	1	Nut-Face, M22 (Plastic)	19	99-7430	2	Relay-Mini
2:3	121-5162	1	Set-Key, Ignition	20	32144-1	5	Screw-Taptite
3	145-7110	1	Adapter-Switch, Key	21	104-7201	2	Nut-HF, NI
5	163-9341	1	Socket-USB	22	163-9490	1	Decal-Fuse Block, EFI
6	122-2152	1	Controller, Tdm-1601	23	110-2594	1	Horn
7	144-2405	1	Switch-Rocker, On-None-On	24	3234-5	1	Screw-HHF
8	99-7420	7	Plug-Hole	25	119-4041	1	Nut-HF
10	114-3315	1	Solenoid	26	144-2415	1	Switch-Rocker, (On)-None-Off
11	119-9492	1	Regulator-Voltage	27	33003-00	1	Nut-HF
13	3255-8	2	Washer-Lock	34	145-2160	1	Plug-Panel

Fuel System Assembly

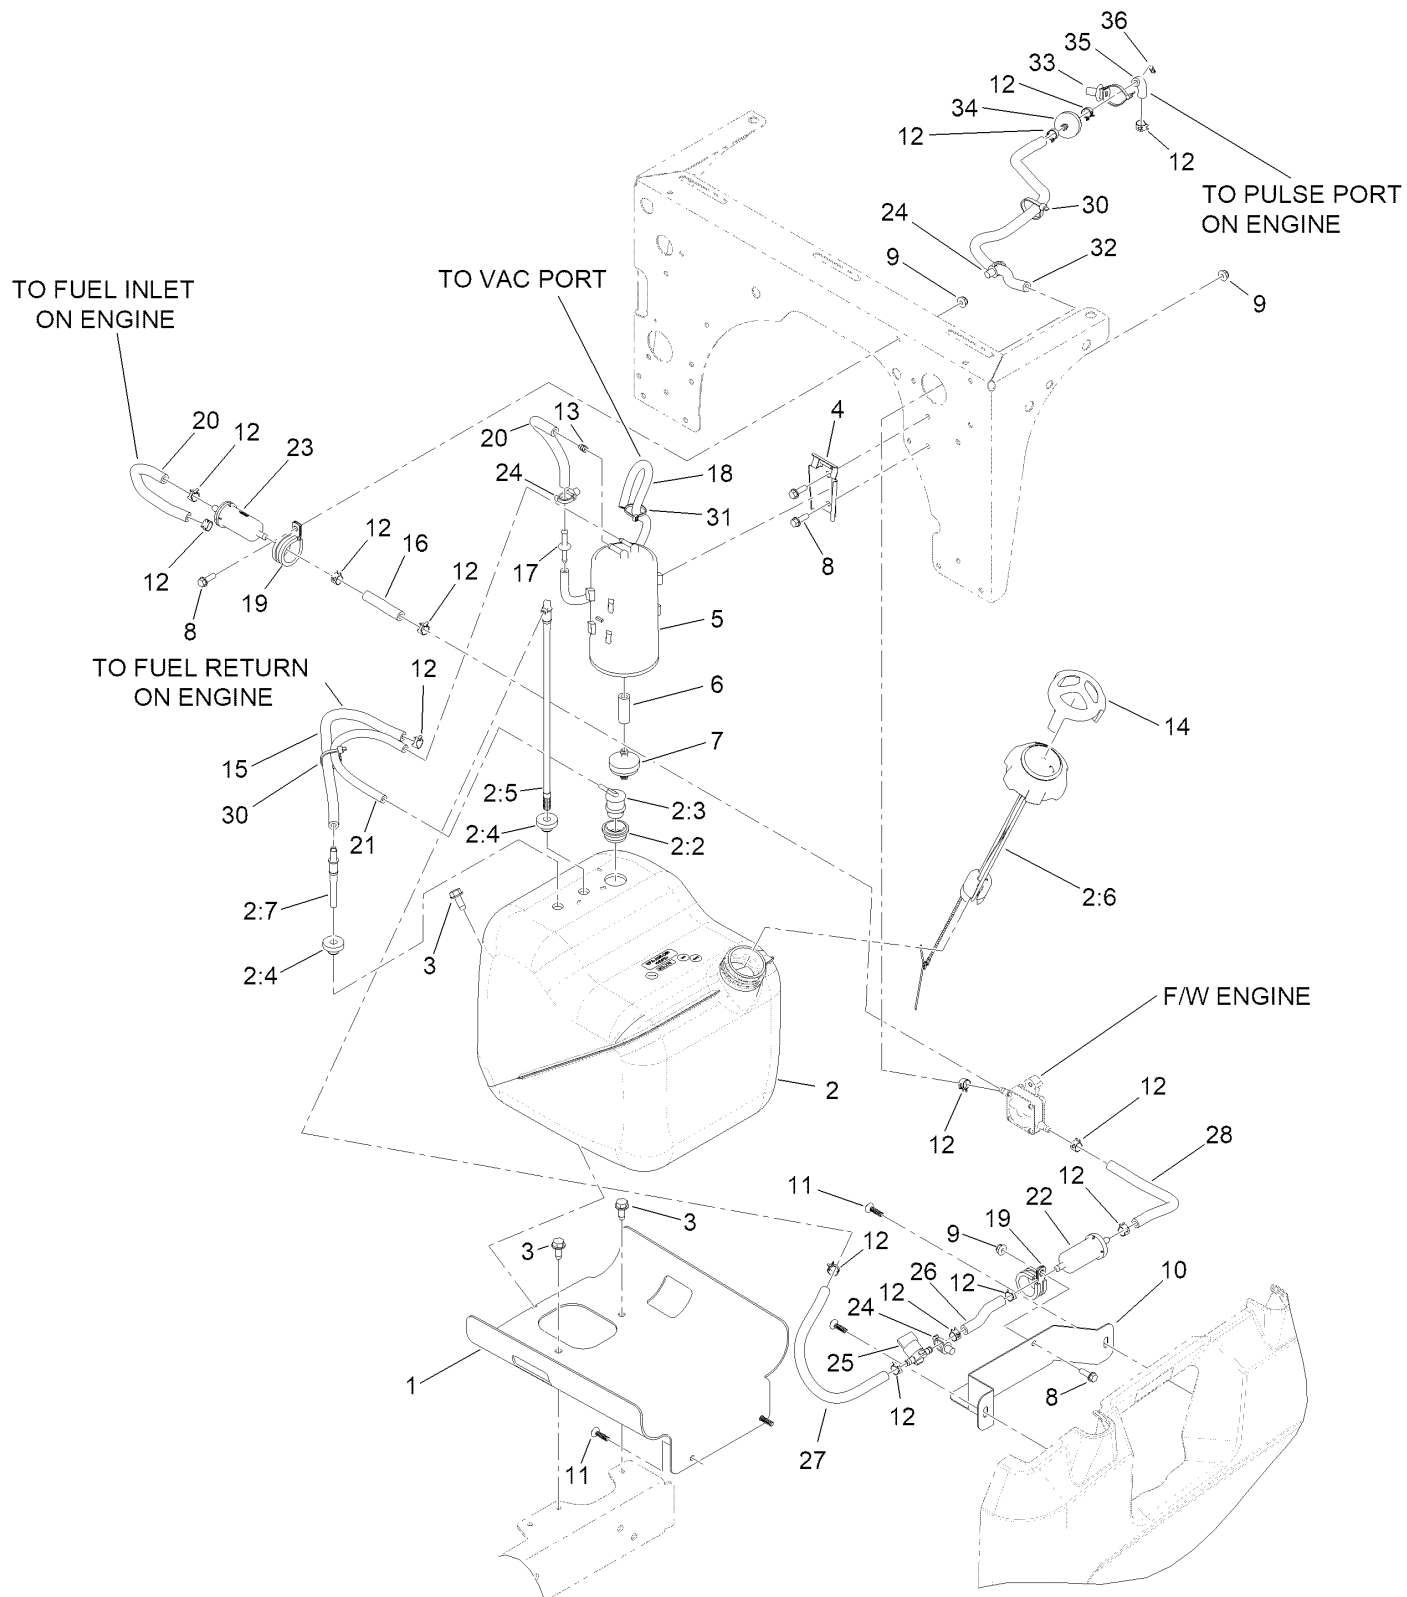

Fuel System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-7739-03	1	Mount-Tank, Fuel	16	109-0304	1	Hose-Fuel
2	163-3701	1	Fuel Tank ASM	17	117-5399	1	Adaptor-Orifice
2:2	114-0284	1	Grommet	18	135-3950	1	Hose-Fuel
2:3	114-0285	1	Valve-Rollover	19	120-2037	2	R-Clamp
2:4	46-6560	2	Bushing	20	109-0303	2	Hose-Fuel
2:5	115-9044	1	Pipe-Stand	21	163-3713	1	Hose-Fuel
2:6	131-8357	1	Cap-Gauge	22	145-7283	1	Filter-Fuel, 30 Micron
2:7	145-7285	1	Fitting-Return, Fuel	23	145-7282	1	Filter-Fuel, 10 Micron
3	32144-70	3	Screw-HWHTF	24	32180-030	3	Clip-Tie
4	114-0292	1	Bracket-Canister, Carbon	25	1-603770	1	Valve-Fuel
5	127-8685	1	Canister-Carbon	26	144-5368	1	Hose-Fuel
6	106-5317	1	Hose-Fuel	27	120-4370	1	Hose-Fuel
7	115-7854	1	Filter-Fuel, Inline	28	109-0293	1	Hose-Fuel
8	32105-15	4	Screw-HWH	30	3290-378	3	Tie-Cable
9	104-7201	4	Nut-HF, NI	31	1-303287	1	Tie-Cable
10	163-3704-05	1	Bracket-Tank,Fuel	32	110-5701	1	Hose-Fuel
11	120-2349	4	Screw	33	32180-031	1	Clip-Tree (W/Tie)
12	2412-98	16	Clamp-Hose	34	56-6360	1	Filter-Fuel
13	120-2038	1	Cartridge-Valve, Check	35	163-5059	1	Hose-Pulse (.212 X 2.00, J200, LP)
14	147-2833	1	Cover-Fuel Cap	36	164-4545	1	Baffle-Pulse
15	110-3255	1	Hose-Fuel				

Attachments and Accessories

For 07424 — Workman LTX EFI Utility Vehicle

Product Name	Model/Part
Trash Can Mounting Kit	07028
Bed Rack Kit.....	07031
Cargo Bed Kit	07046
Extension Kit.....	07049
Cab Kit.....	07142
12V Electric Lift Kit.....	07144
Door Kit.....	07150
12V Electric Bed Lift Kit	07167
Canopy W/ ROPS.....	07169
Rear Attachment Receiver, Workman GTX Series Utility Vehicle with Steel Cargo Bed	07186
Canopy Mount Kit, Workman GTX Utility Vehicle with Extended Flatbed	07199
Secondary Rear Receiver, Workman GTX	07285
Windshield and Wiper Kit, Workman GTX Utility Vehicle.....	07407
Lift Kit.....	07414
Seat Kit - Workman LTX.....	07426
Brush Guard - Workman LTX.....	07427
Armature Assembly-L Pin	07428
LTX Ball Cage ROPS Certified.....	07429
Workman LTX - Front Hitch W/Brush Guard	07431
Steel Cargo Bed Base	07450
Steel Cargo Bed Solid Sides Kit.....	07451
Workman GTX 2-Person Canopy	07921
Folding Windshield Kit, Workman GTX Utility Vehicle with Canopy.....	07923
Center Bed Racking - GTX	08147
Side Bed Racking, Workman UTX/MDX/GTX.....	08148
Tire-20 8.00-10	116-7333
Shim-Limiter	119-0807
Exterior Mirror Kit.....	130-5448
Interior Mirror Kit.....	130-5449
Beacon Kit	130-5484
Work Light Kit	130-5485
Windshield Washer Fluid Kit, 2015 and after Workman MD/HD Series Utility Vehicle	130-5615
Tire/Wheel Asm	131-8319
Wide Angle Mirror Kit, Utility Vehicle with Canopy.....	133-1009
Wide Angle Mirror Kit.....	133-1038
Class 1 Draw Bar Kit.....	133-3095
Door Mount Mirror Kit.....	136-1997
Small Bedrack Mount Grip Kit.....	136-6311
Large Bedrack Mount Grip Kit.....	136-6312
Universal Wireless Hourmeter Kit.....	144-2436
Lithium Homologation Kit.....	163-9390
12v Power Point Kit, Workman LTX or LTX Lithium Utility Vehicle	163-9395
Reverse Alarm Kit, Workman GTX Utility Vehicle.....	163-9396
Ram Ball Mount Kit	163-9494
Brake and Signal Light Kit, Workman LTX Utility Vehicle.....	163-9495

Attachments and Accessories (continued)

Cab Mount Kit, Workman LTX Utility Vehicle 164-4541

Seat Conversion Kit 164-4550

Tire 94-5236

Notes:

Notes:



Count on it.