



Count on it.

Parts Catalog

Workman® LTX
EFI Extended Utility Vehicle

Model No. 07424EX—Serial No. 40000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.


Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents


Front Frame and Suspension Assembly	4
Left Hand Spindle Assembly No. 163-9475	5
Right Hand Spindle Assembly No. 163-9476	6
Floor Plates and Rear Suspension Mount Assembly	7
Rear Frame and Suspension Assembly	8
Frame Mount and Rear Shock/Spring Assembly	9
Brake Assembly	10
Master Cylinder Assembly No. 104-6782	11
Brake Caliper Assembly No. 161-1890	12
Steering Assembly	13
Pedal and Control Assembly	14
Hood and Fender Assembly	16
Dash Assembly	17
Seatbase Assembly	18
Engine Assembly	19
Starter Generator Assembly No. 131-8444	20
Secondary Clutch Assembly No. 119-6011	21
Primary Clutch Assembly No. 138-0095	22
Transaxle Assembly	23
Transaxle Assembly No. 131-3486	24
Battery Assembly	26
Electrical Assembly	28
Fuel System Assembly	30
Attachments and Accessories	32

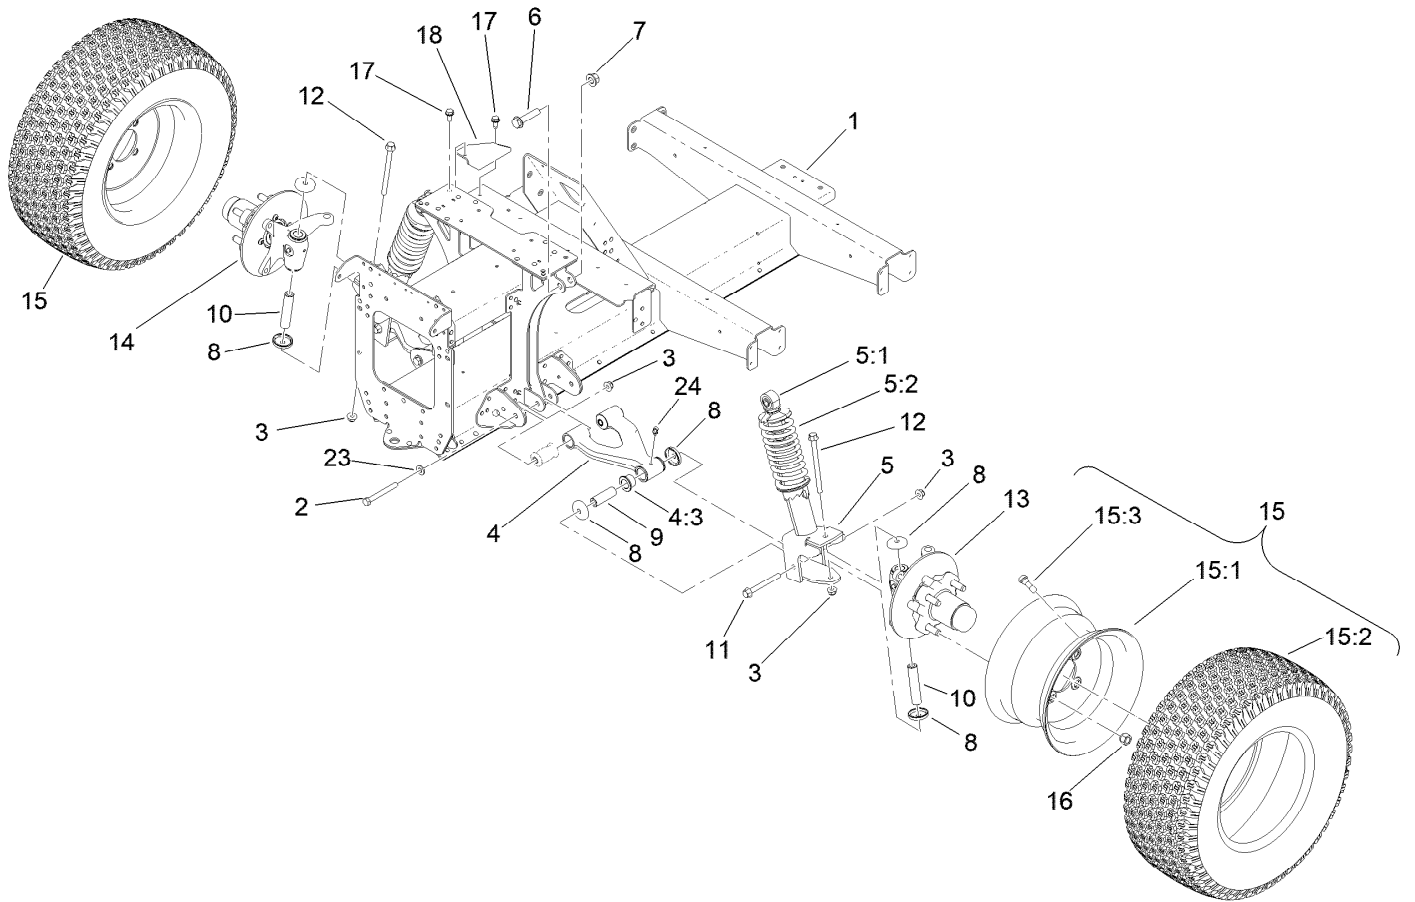

Front Frame and Suspension Assembly


Ref.	Part Number	Qty.	Description
1	161-5490-03	1	Front Frame ASM [black]
2	112-7161	4	Screw-HH
3	139-3380	8	Nut-HF
4	163-9444	2	Control Arm ASM
4:3	147-3983	2	Bushing-Flange
5	139-4484	2	Strut ASM, 250 Lb (16.33" EXT Length)
5:1	131-8574	1	Isolator-Shock
5:2	137-6719	1	Spring-Compression, 250Lb
6	3234-46	2	Screw-HHF
7	139-1689	2	Nut-HF
8	140-9793	8	Pin Seal
9	144-5634	2	Sleeve-Outer
10	161-2048	2	Sleeve-Kingpin

Ref.	Part Number	Qty.	Description
11	139-3370	2	Screw-HF
12	139-3350	2	Screw-HF
13	163-9475	1	LH Spindle ASM
14	163-9476	1	RH Spindle ASM
15	147-2761	2	Wheel And Tire ASM
15:1	147-2762	1	Wheel
15:2	139-4475	1	Tire-20 X 8.00-10
15:3	232-27	1	Stem-Valve
16	139-2564	8	Nut-Lug
17	32144-70	2	Screw-HWHTF
18	131-8339-03	1	Reinforcement-Tower
23	100-4852	4	Washer-Hardened
24	302-60	2	Fitting-Grease

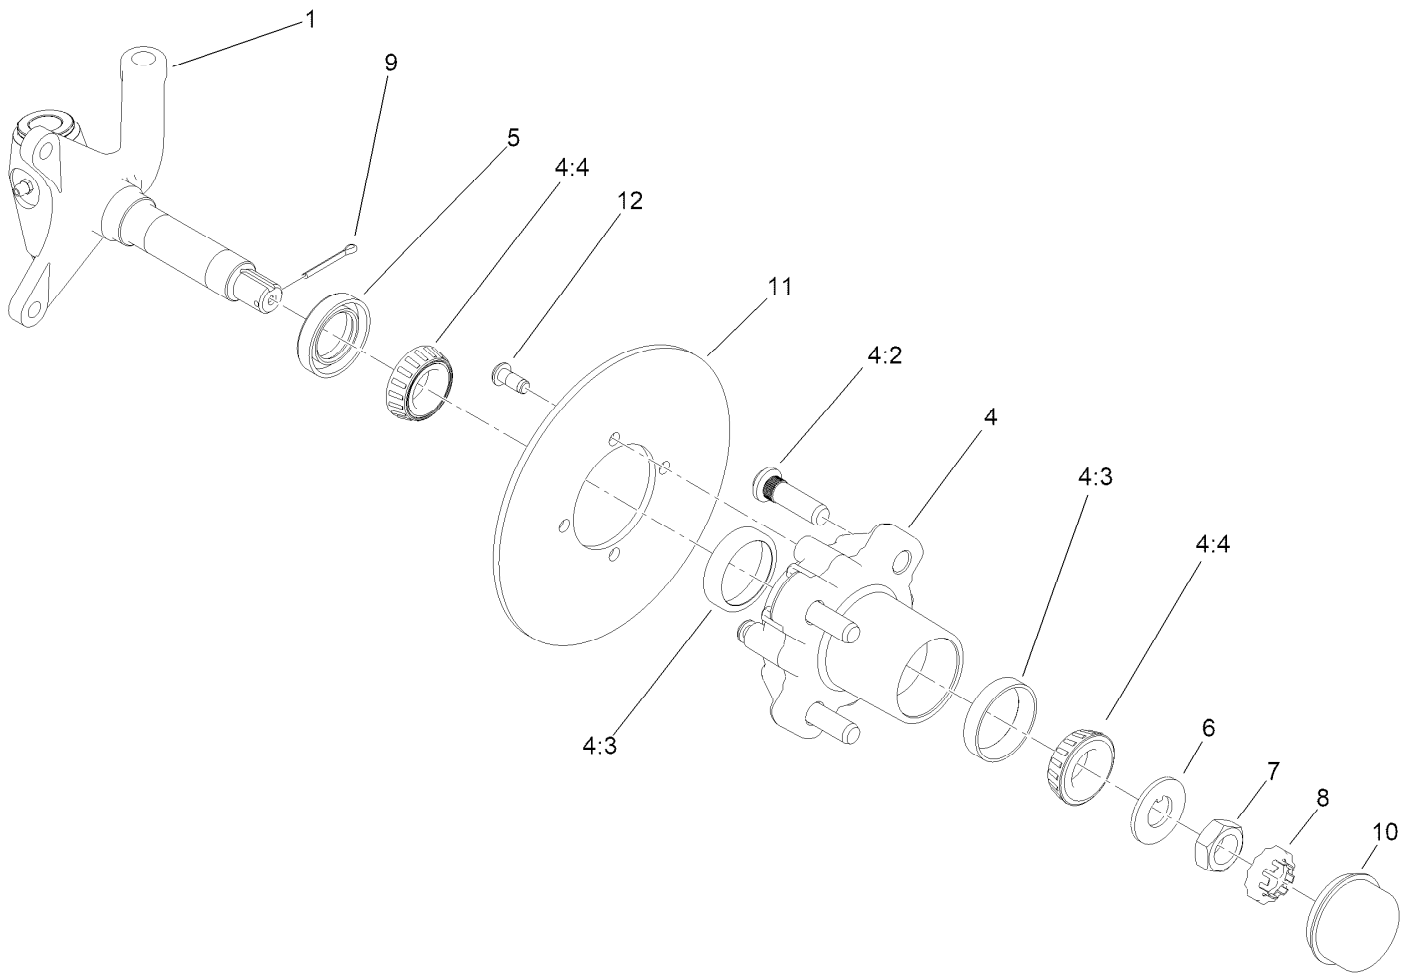


Left Hand Spindle Assembly No. 163-9475

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-9471	1	Spindle ASM LH
4	144-5470	1	Front Hub ASM
4:2	10-6830	4	Stud-Type, Drive
4:3	254-72	2	Bearing-Cup, Tapered
4:4	254-94	2	Bearing-Cone, Tapered
5	112-1690	1	Seal-Oil
6	93-0309	1	Washer-Tab
7	3220-7	1	Nut-Jam
8	93-0307	1	Nut-Lock, Retainer
9	3272-12	1	Pin-Cotter
10	241-119	1	Cap-Dust
11	139-4474	1	Rotor-Brake
12	121-9671	4	Screw-HSBH, Patch

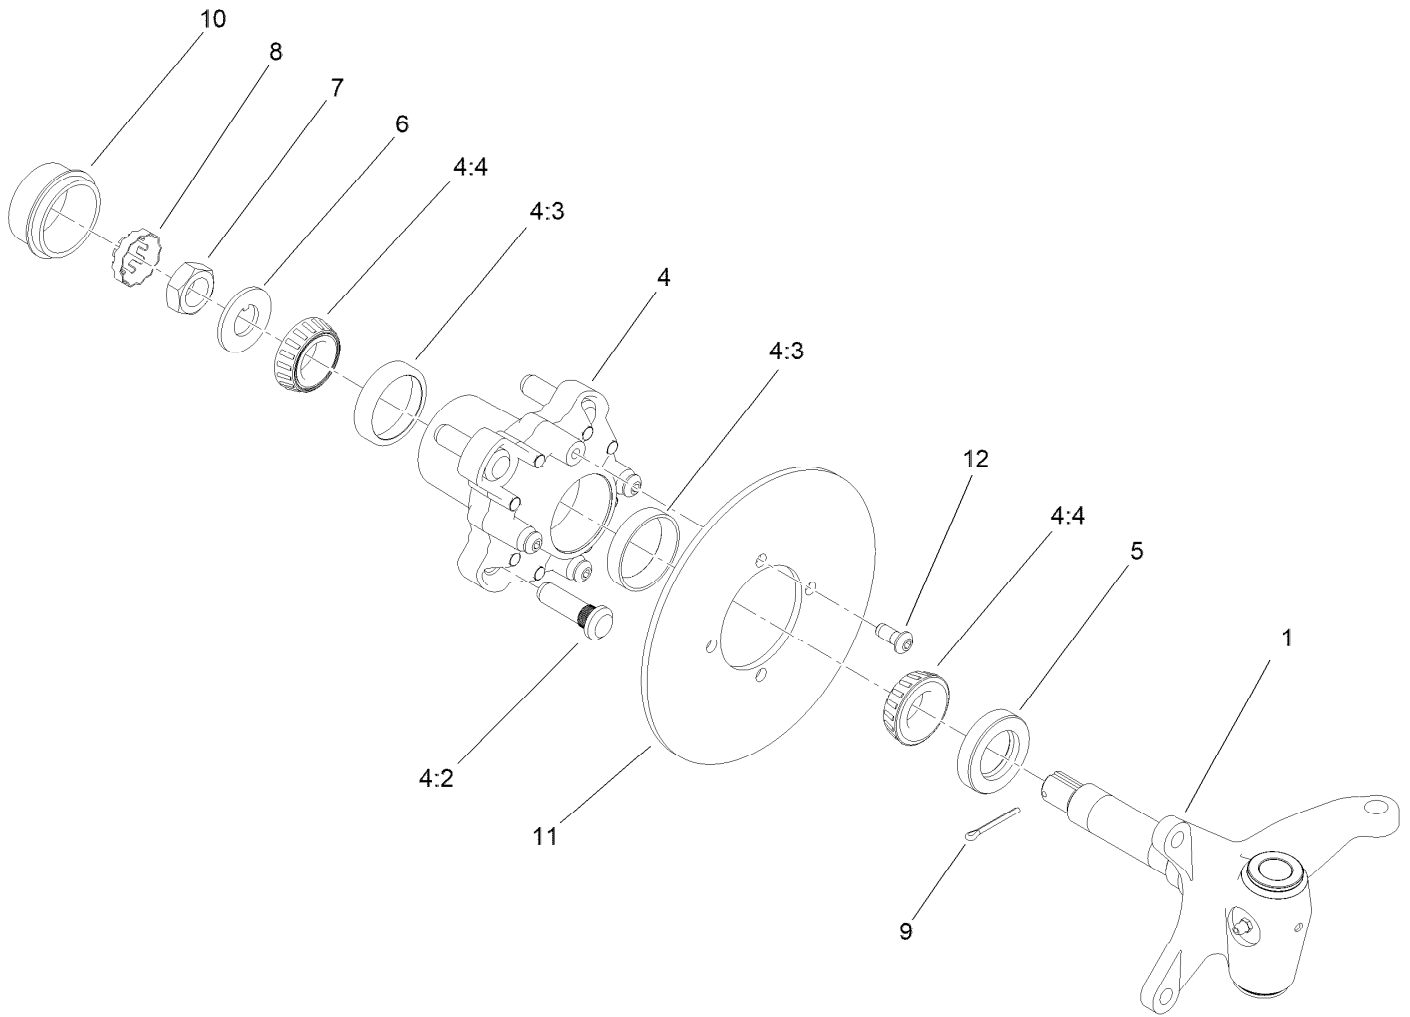


Right Hand Spindle Assembly No. 163-9476

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-9472	1	Spindle ASM RH
4	144-5470	1	Front Hub ASM
4:2	10-6830	4	Stud-Type, Drive
4:3	254-72	2	Bearing-Cup, Tapered
4:4	254-94	2	Bearing-Cone, Tapered
5	112-1690	1	Seal-Oil
6	93-0309	1	Washer-Tab
7	3220-7	1	Nut-Jam
8	93-0307	1	Nut-Lock, Retainer
9	3272-12	1	Pin-Cotter
10	241-119	1	Cap-Dust
11	139-4474	1	Rotor-Brake
12	121-9671	4	Screw-HSBH, Patch

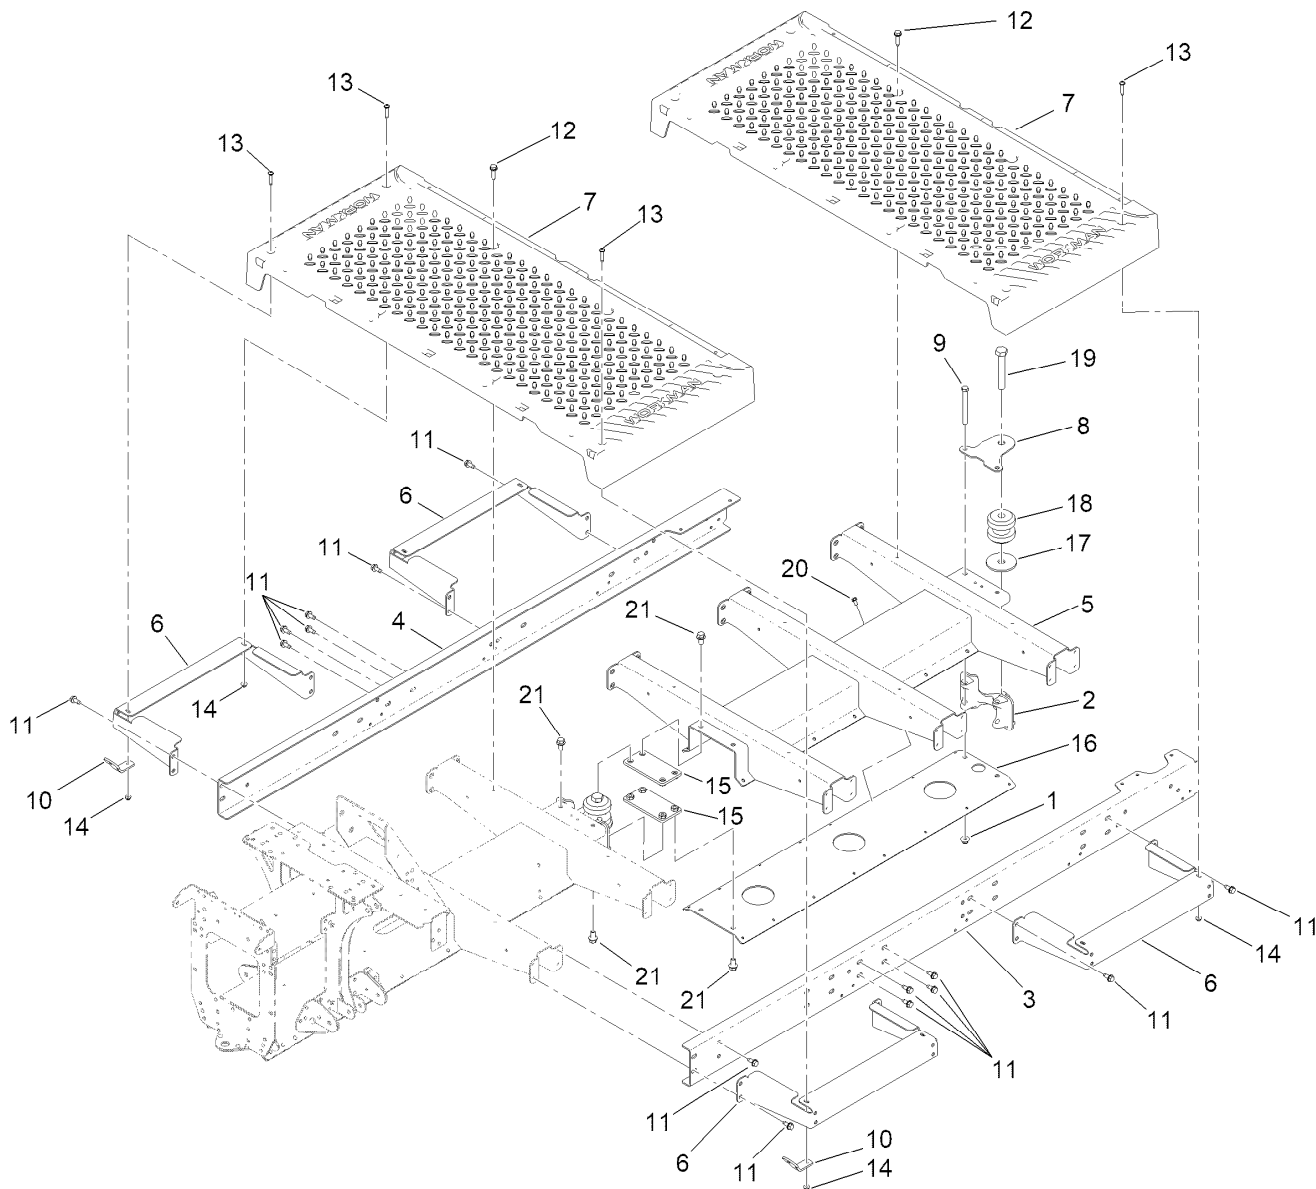


Floor Plates and Rear Suspension Mount Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	119-4042	2	Nut-HF, NI	12	32144-49	8	Screw-HWHTF
2	131-8466	1	Mount-Suspension, Rear	13	132-6777	8	Screw-Twh Thd Roll
3	127-7823-03	1	Channel-Extended, LH	14	104-7201	8	Nut-HF, NI
4	127-7824-03	1	Channel-Extended, RH	15	131-8424	2	Plate-Connection
5	127-7828-03	1	Channel-Extension	16	127-7827-03	1	Plate-Channel, Extension
6	127-7837-03	4	Bracket-Support, Floor Plate	17	110-4549	1	Washer-Snubbing
7	127-7829	2	Plate-Floor	18	131-8480	1	Isolator
8	131-8597	1	Plate-Gimbal, Upper	19	104-5877	1	Screw-HH
9	323-42	2	Screw-HH	20	32144-4	16	Screw-HWH
10	127-7832	2	Bracket-Angle	21	3234-1	8	Screw-HHF
11	32144-70	40	Screw-HWHTF				

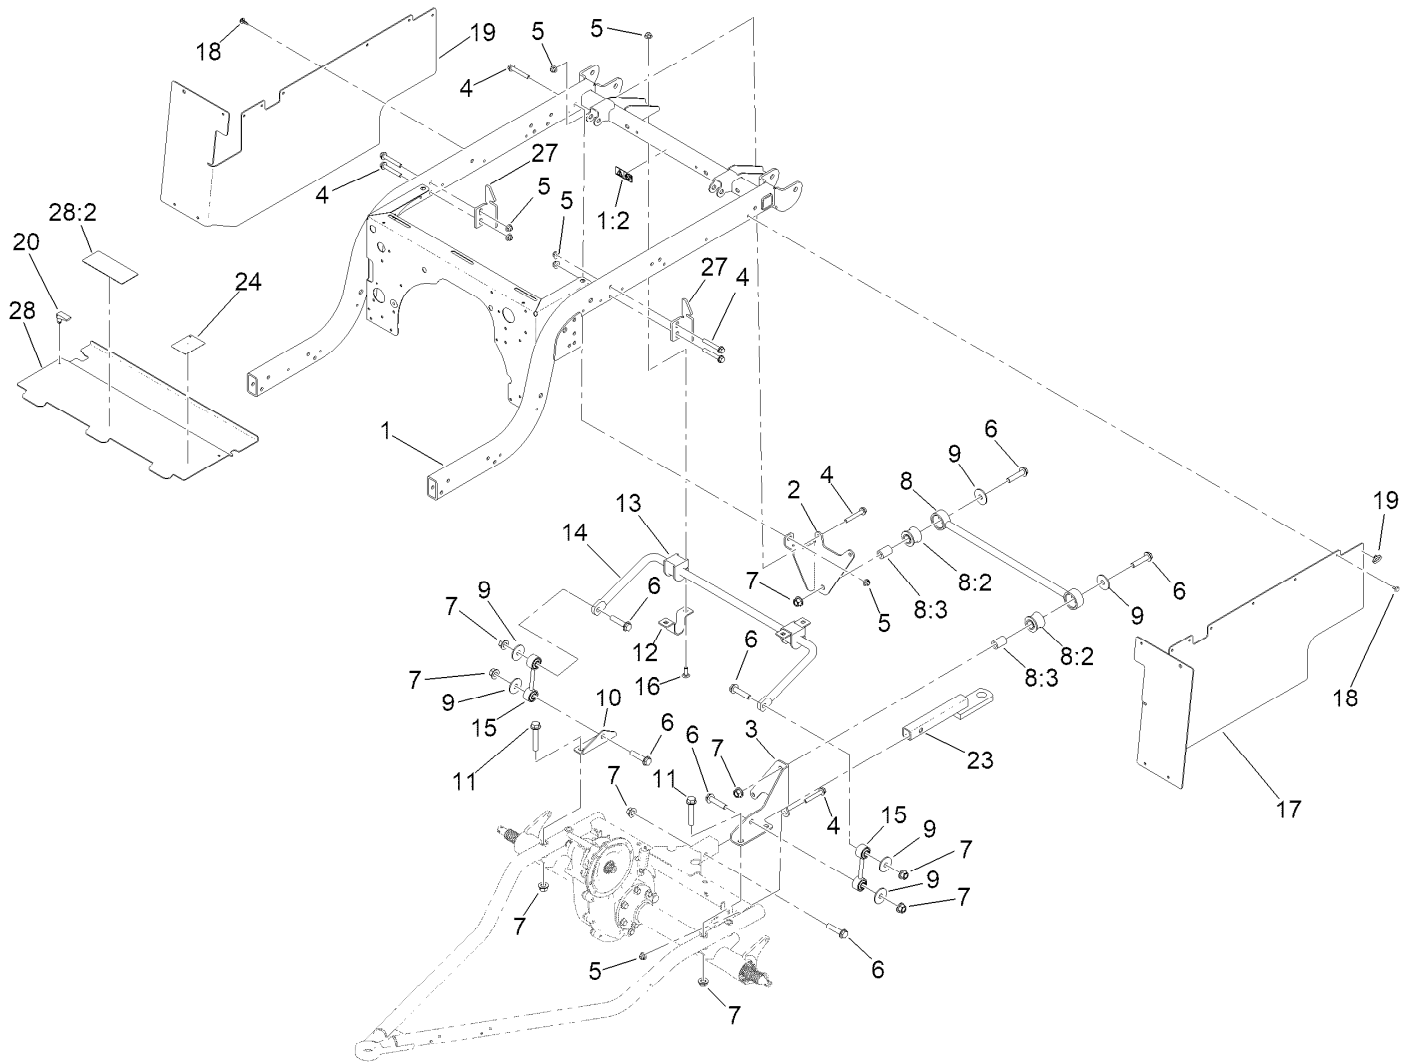


Rear Frame and Suspension Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-3902	1	Rear Frame ASM	12	139-4644	2	Clamp, Anti-Sway Bar
1:2	115-2047	1	Decal-Surface, Hot	13	87-3910	2	Bushing-Rubber
2	139-4647-03	1	Bracket-Stabilizer Bar	14	131-8310-03	1	Bar-Sway, Anti
3	127-7411-03	1	Bracket-Bar, Stabilizer	15	131-8394	2	Link-Bar, Sway
4	3234-39	9	Screw-HHF	16	3231-22	4	Screw-CARR
5	119-4042	13	Nut-HF, NI	17	163-3740	2	Panel-Side
6	3234-46	7	Screw-HHF	18	125-9622	20	Rivet-Blind
7	139-1689	11	Nut-HF	19	3290-378	2	Tie-Cable
8	109-5013	1	Panhard Rod ASM	20	74-5950	2	Latch-Swell
8:2	109-5009	2	Bushing-Suspension, Rubber	23	137-6741	1	Ball Mount ASM
8:3	109-5010	2	Spacer	24	163-9453	1	Decal-Ltx EFI
9	86-1990	6	Washer	27	127-7428-03	2	Striker-Latch, Bed
10	131-8315	1	Bracket-Link, Sway Bar	28	140-4573	1	Extended Panel-Cover
11	3234-40	4	Screw-HF	28:2	99-7345	1	Decal-Warning

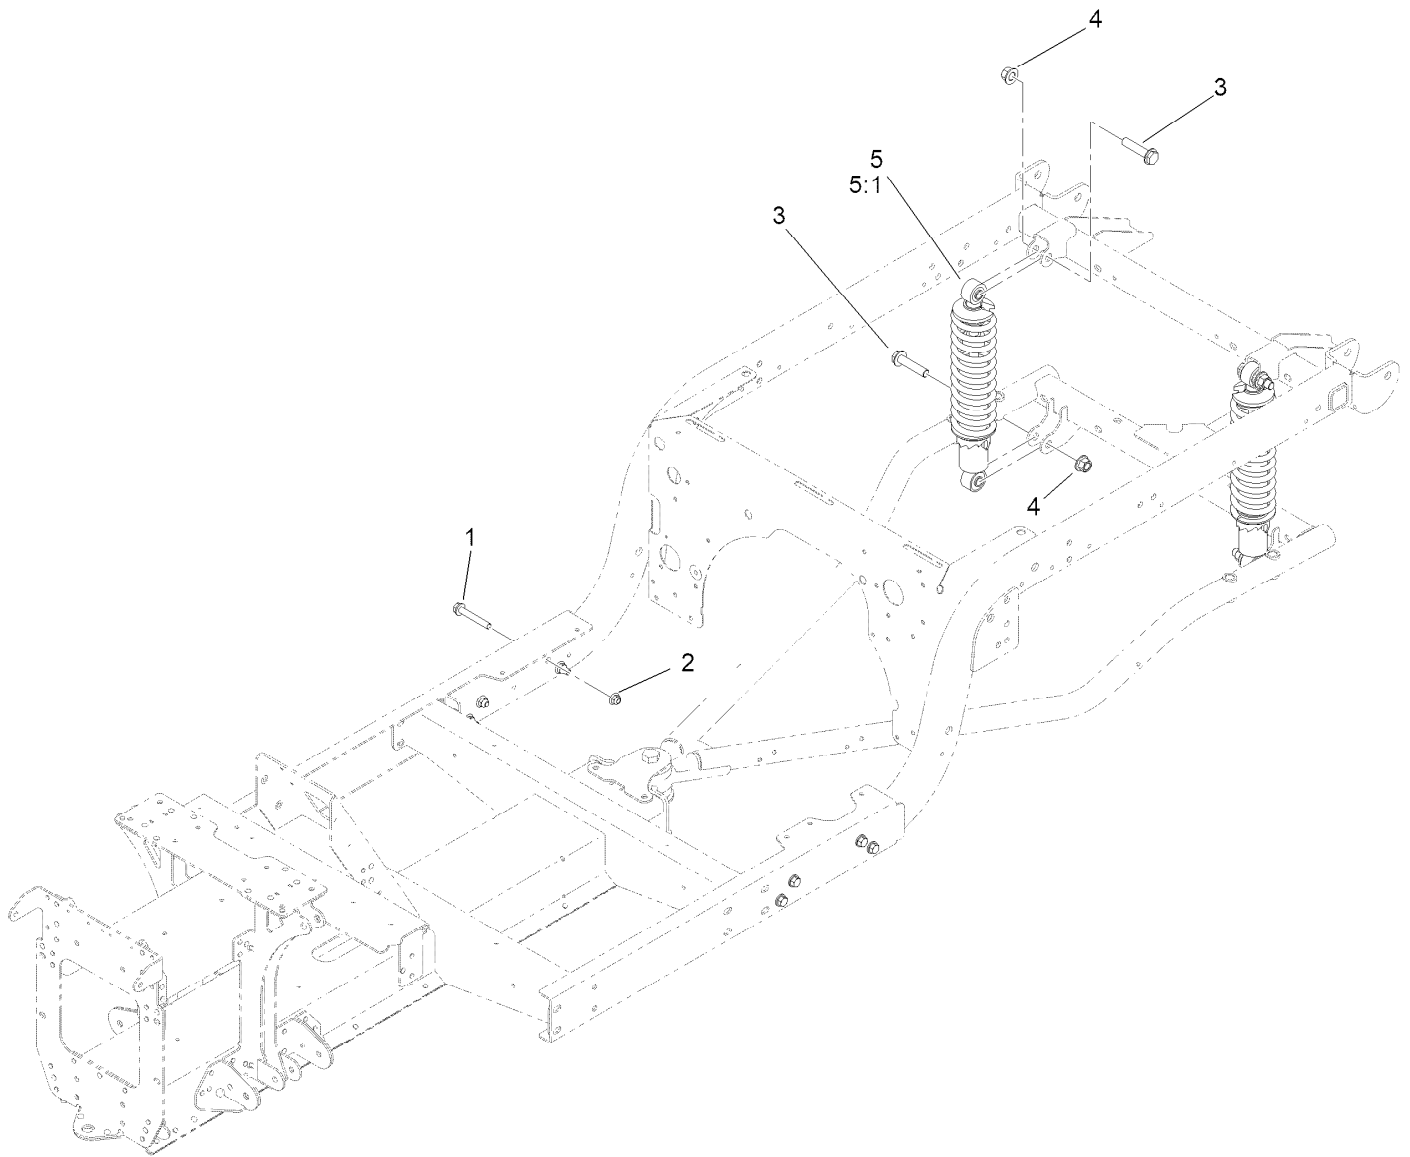

Frame Mount and Rear Shock/Spring Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3234-39	8	Screw-HHF
2	119-4042	8	Nut-HF, NI
3	3234-46	4	Screw-HHF
4	139-1689	4	Nut-HF
5	139-4607	2	Shock/Spring ASM
5:1	131-8574	2	Isolator-Shock

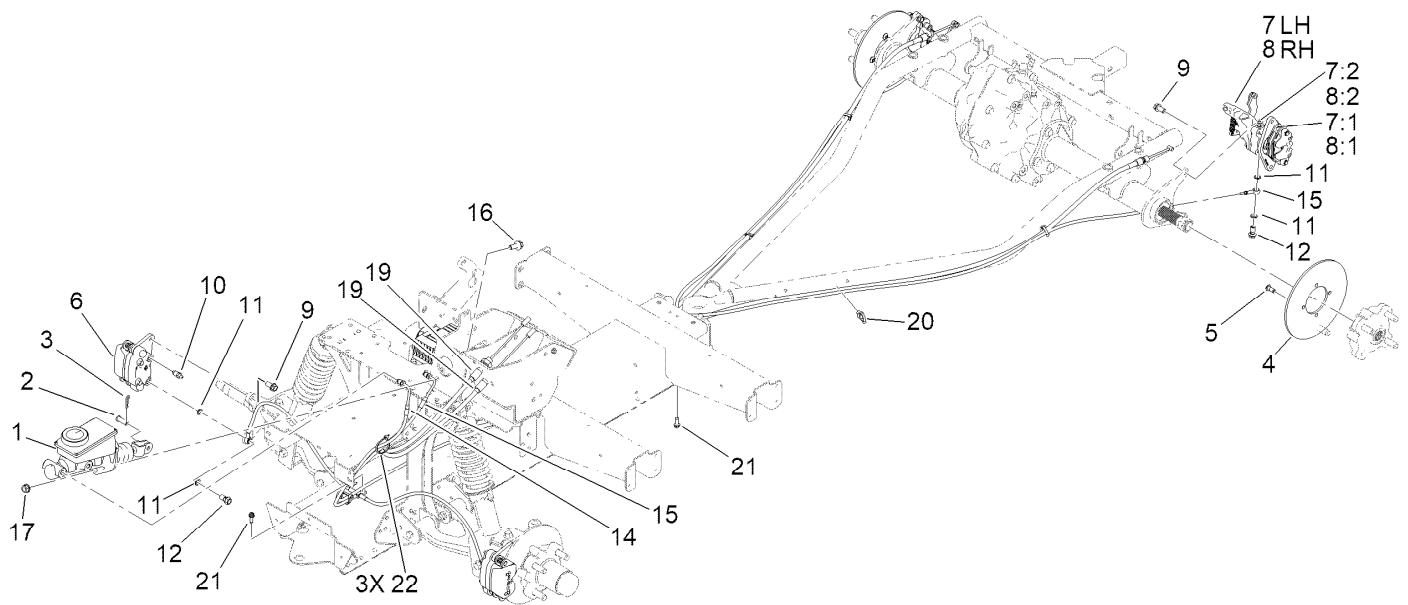

Brake Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	104-6782	1	Master Cylinder ASM	8:2	119-9509	1	Screw-Bleed
2	283-2	1	Pin-Clevis	8:3	136-6328	2	Spring-Rattle, Anti ●
3	1-806003	1	Pin-Cotter	9	144-5550	8	Screw-Spl
4	139-4474	2	Rotor-Brake	10	119-9509	2	Screw-Bleed
5	121-9671	8	Screw-HSBH,Patch	11	115-2341	8	Washer-Banjo
6	161-1890	2	Brake Caliper ASM	12	120-4875	4	Bolt-Flange, Banjo
7	140-2585	1	Brake Caliper ASM, LH	14	161-5416	1	Brake Line ASM, Front
7:1	140-2595	1	Brake Pad Service Kit (Rear, Qty 4)	15	163-5056	1	Rear Brake Line ASM
7:2	119-9509	1	Screw-Bleed	16	3234-11	2	Screw-HHF
7:3	136-6328	2	Spring-Rattle, Anti ●	17	3290-357	2	Nut-HSF
8	140-2590	1	Brake Caliper ASM, RH	19	161-5419	2	Cable-Brake, Parking
8:1	140-2595	1	Brake Pad Service Kit (Rear, Qty 4)	20	32180-030	4	Clip-Tie
				21	49-2040	2	Screw-HWHTF
				22	3290-378	3	Tie-Cable

● Not illustrated

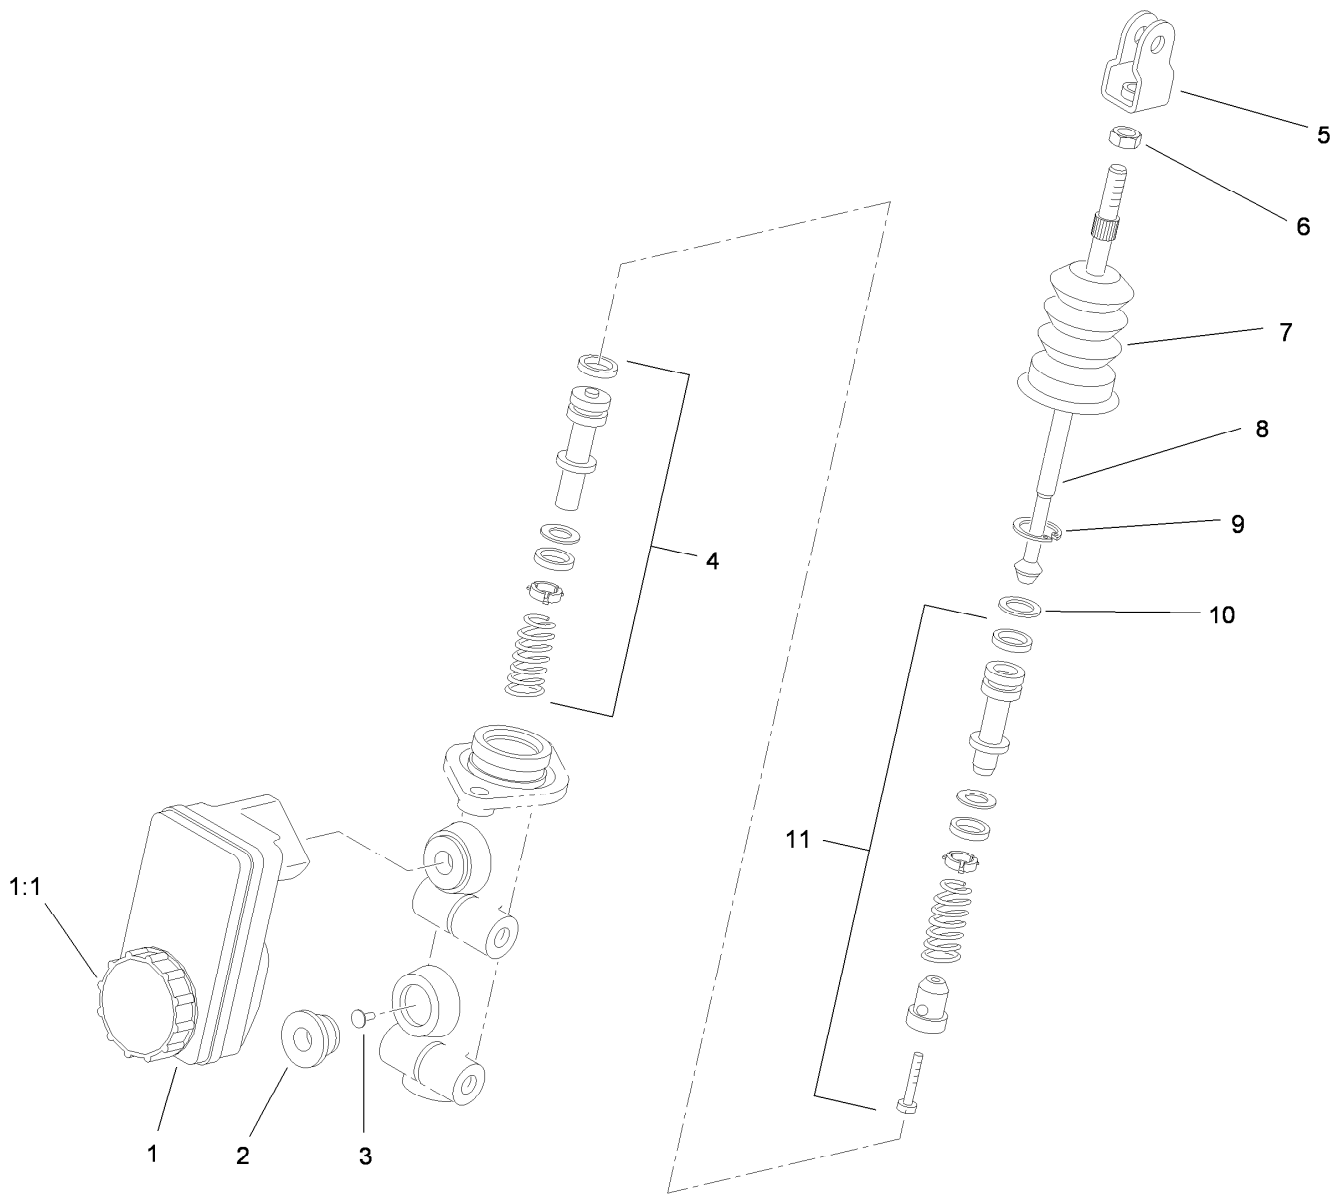


Master Cylinder Assembly No. 104-6782

Ref.	Part Number	Qty.	Description
1	104-6845	1	Reservoir ASM
1:1	92-4112	1	Cap ASM
2	93-8971	2	Seal-Port, Flange
3	92-4103	1	Pin-Stop
4	92-4102	1	Secondary Piston ASM
5	92-4110	1	Clevis
6	21-0360	1	Nut-Hex
7	94-5209	1	Cover-Dust
8	94-5210	1	Rod-Push
9	92-4109	1	Ring-Snap
10	92-4108	1	Retainer-Washer
11	92-4101	1	Primary Piston ASM

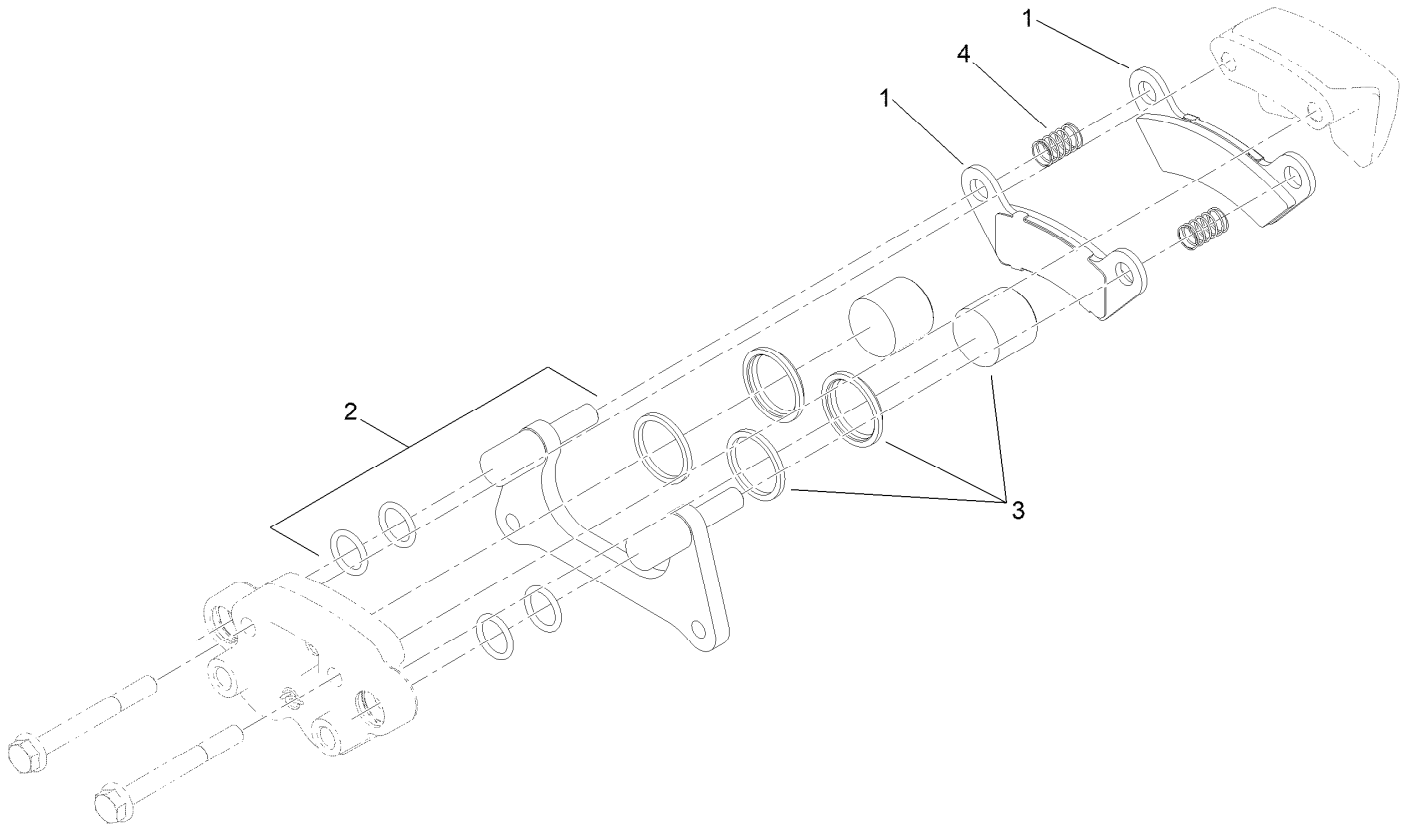

Brake Caliper Assembly No. 161-1890


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-2580	1	Brake Pad Service Kit (Front, Qty 4)
2	119-9511	1	Bracket Kit
3	133-0614	1	Piston Kit
4	161-1889	2	Spring-Compression, Service

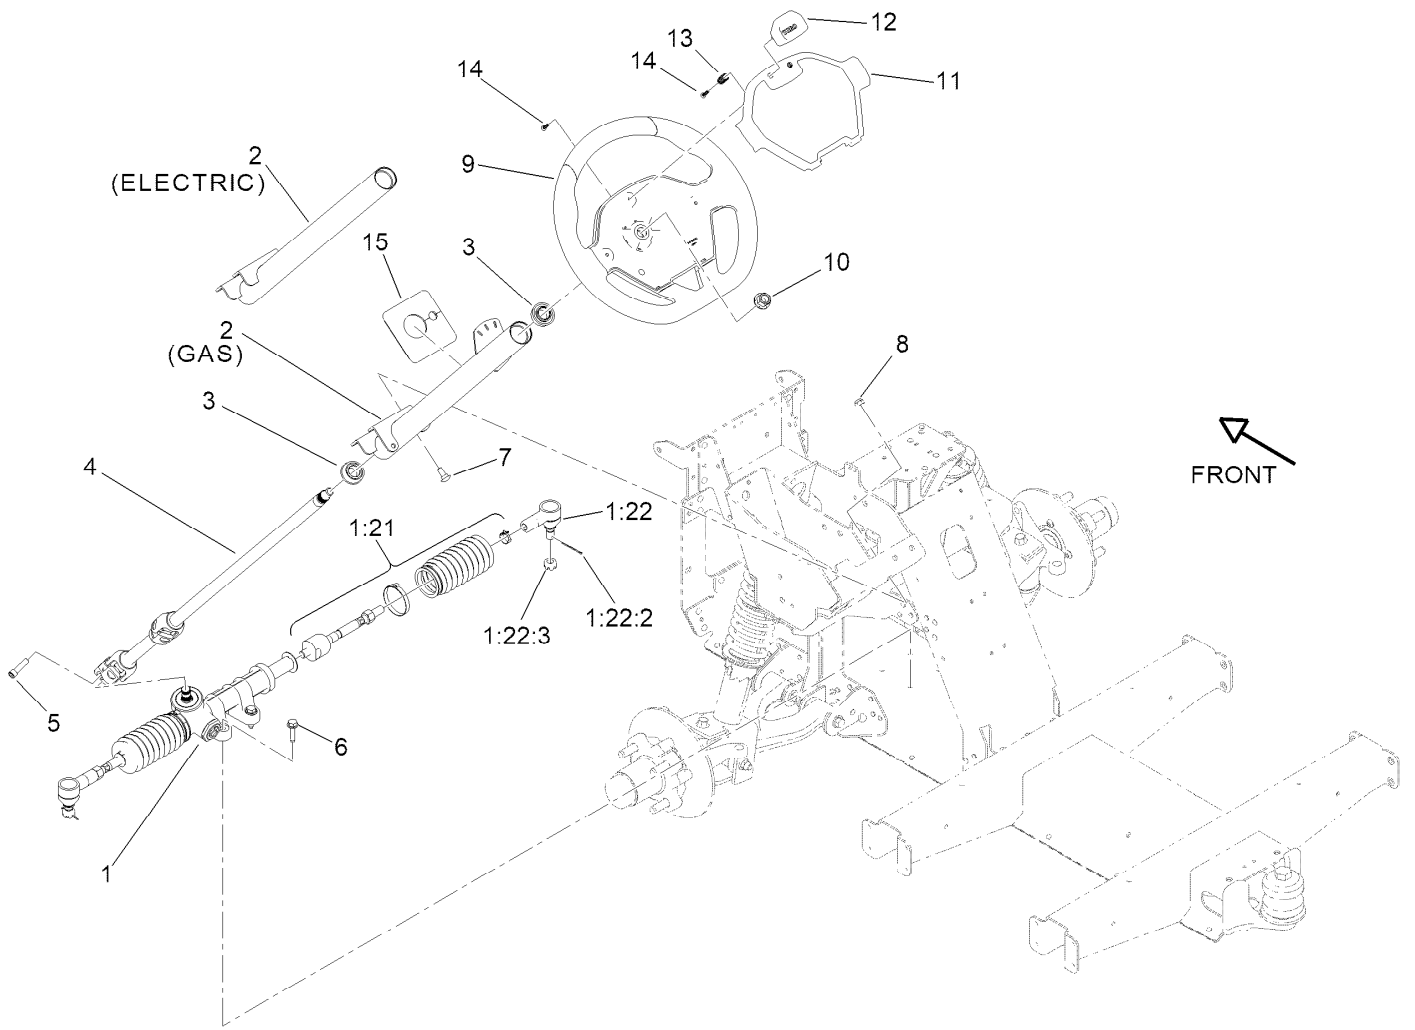

Steering Assembly


Ref.	Part Number	Qty.	Description
1	138-0114	1	Steering Rack ASM
1:21	140-4591	1	Kit-Tie Rod ASM, Gtx
1:22	140-4592	1	Kit-Rod End ASM
1:22:2	3272-42	1	Pin-Cotter
1:22:3	140-2493	1	Nut-Hex, Slotted
2	147-8007	1	Steering Column ASM, Gtx
3	112-3262	2	Bearing
4	145-2050	1	Steering Shaft ASM
5	145-7145	1	Screw-HSH,Lock
6	32144-49	4	Screw-HWHTF

Ref.	Part Number	Qty.	Description
7	3230-1	4	Bolt-CARR
8	119-4041	4	Nut-HF
9	144-5570	1	Steering Wheel ASM
10	139-1689	1	Nut-HF
11	144-5567	1	Cover-Wheel, Steering
12	144-5566	1	Clip-Wheel, Steering
13	144-5537	2	Spring-Compression
14	94-4496	5	Screw-PPH
15	140-9903	1	Grommet-Column, Steering

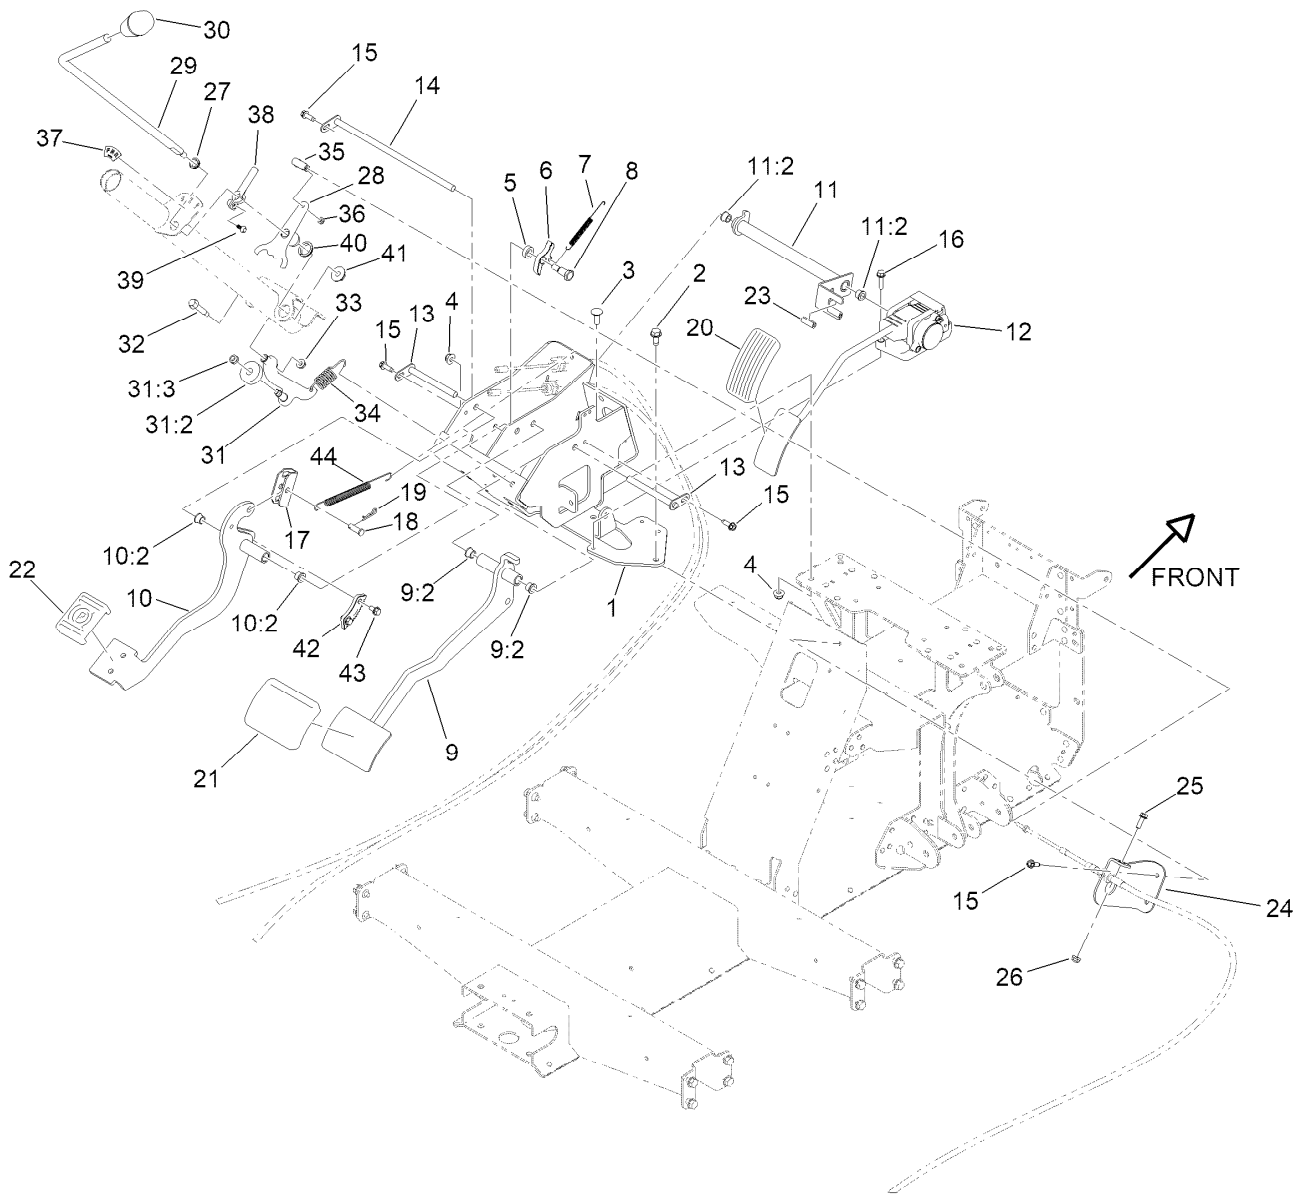


Pedal and Control Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	161-5480-03	1	Pedal Box Mount ASM [black]	18	1-808280	1	Pin-Clevis
2	32144-70	4	Screw-HWHTF	19	1-806003	1	Pin-Cotter
3	3230-10	1	Bolt-CARR	20	140-4572	1	Pedal Pad-Throttle
4	119-4041	2	Nut-HF	21	161-5253	1	Footpad-Pedal
5	256-276	1	Spacer-Nylon	22	144-5551	1	Pad-Parking Brake
6	140-9703	1	Pawl-Parking	23	161-5494	2	Trim-Edge
7	140-9858	1	Spring-Extension	24	161-5279-03	1	Bracket-Mount, Shift Cable
8	144-5458	1	Screw-Shoulder	25	115-5103	1	Screw-HHF
9	161-5486	1	Brake Pedal ASM	26	104-7201	1	Nut-HF, NI
9:2	256-116	2	Bushing-Flange	27	110-3318	1	Bushing-Snap
10	147-8016	1	Parking Pedal ASM	28	144-5438	1	Shift Arm
10:2	256-116	2	Bushing-Flange	29	144-5439	1	Shaft-Shift
11	161-5495	1	Trip Pivot ASM	30	131-8473	1	Knob-Tapered
11:2	256-116	2	Bushing-Flange	31	138-6432	1	Detent Arm Assembly
12	161-5485	1	Throttle-Electronic	31:2	145-2095	1	Bushing-Detent, Shift
13	131-8459	2	Shaft-Pivot	31:3	3296-47	1	Nut-Lock, NI
14	161-5492	1	Flag Pin ASM	32	116-6876	1	Screw-Shoulder
15	49-2040	5	Screw-HWHTF	33	32128-33	1	Nut-HF
16	32144-86	3	Screw-HWHTF	34	131-8419	1	Spring-Extension
17	87-3480	1	Bracket-Equalizer, Cable	35	2411-38	1	Joint-Ball
				36	3296-27	1	Nut-Lock, NI

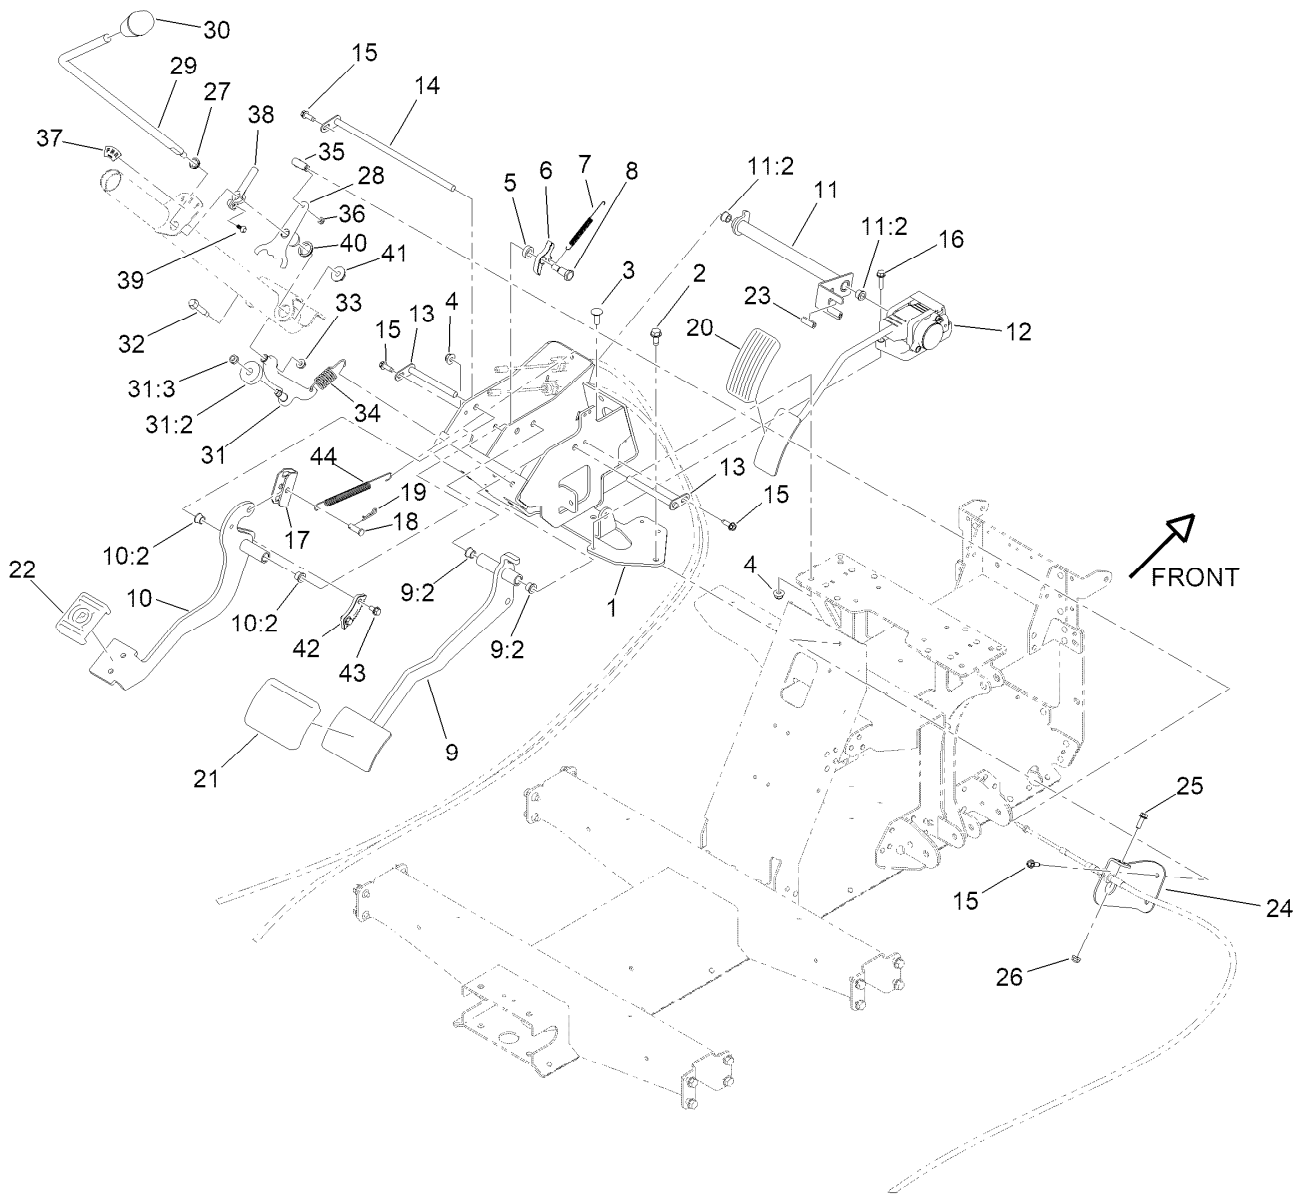


Pedal and Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
37	131-8463	1	Decal-Shift	41	32128-30	1	Nut-HF
38	163-3905	1	Indicator-Gear	42	163-4966	1	Plate-Ratcheting
39	121-9605	1	Screw-HWH	43	119-1065	2	Screw-Lock, HF
40	114-8893	1	Bushing-Clip	44	163-4978	1	Spring-Extension

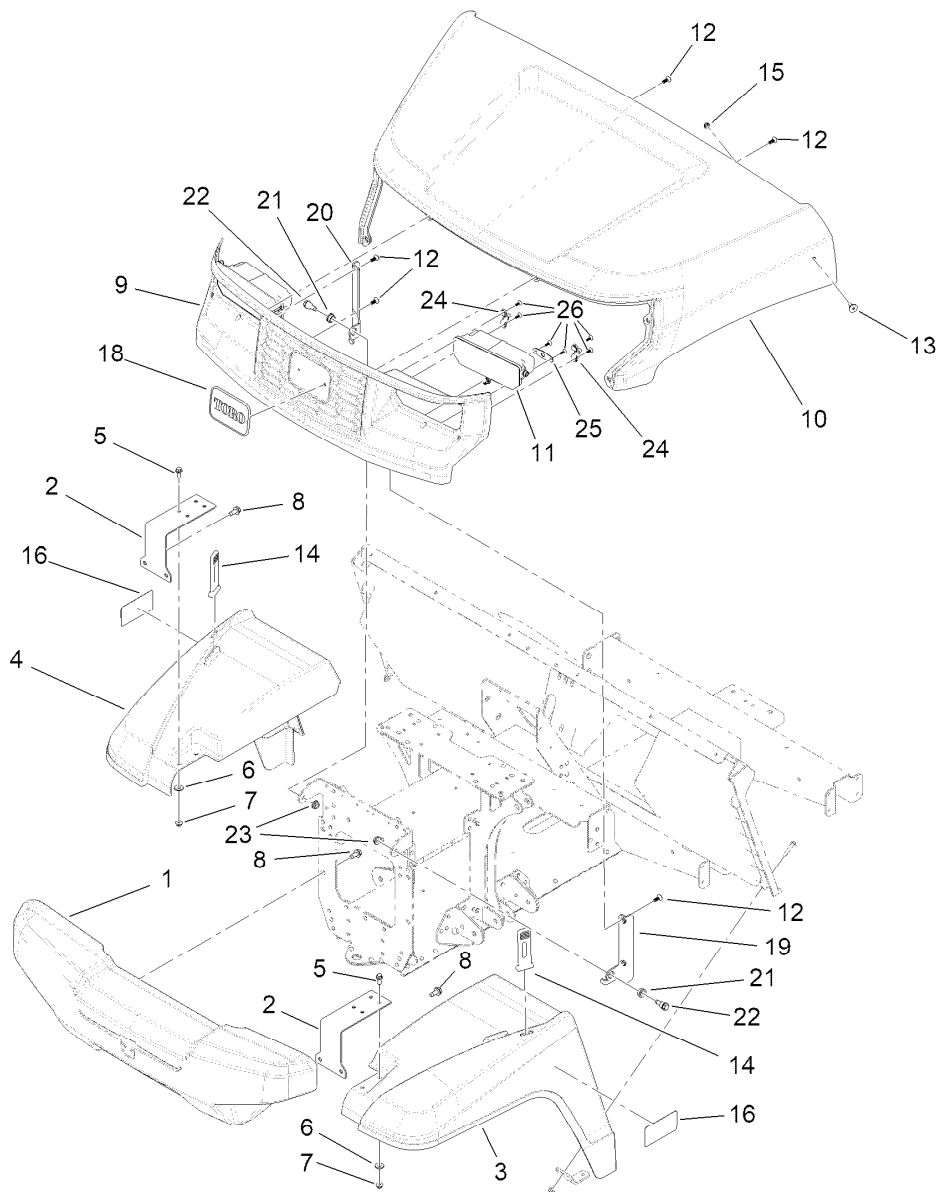


Hood and Fender Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-5190	1	Bumper-Front, Armor	14	131-8402	2	Strap-Down, Hold
2	163-5101-03	2	Bracket-Fender	15	3296-56	2	Nut-Lock, NI
3	127-7771	1	Fender-Front, LH	16	163-9450	2	Emblem-Ltx, EFI
4	127-7772	1	Fender-Front, RH	18	144-2294	1	Emblem-Toro
5	3234-33	4	Screw-HHF	19	164-4547-03	1	Bracket-Pivot, LH
6	3256-2	4	Washer-Flat	20	164-4548-03	1	Bracket-Pivot, RH
7	104-7201	4	Nut-HF, NI	21	256-156	2	Bushing-Flange
8	32144-70	8	Screw-HWHTF	22	115-1958	2	Bolt-Shoulder
9	163-5185	1	Grille-Front, Ltx	23	32128-20	2	Nut-HF
10	163-5195	1	Hood-Ltx	24	163-5172	4	Retainer-Headlight, Ltx
11	163-5102	2	Headlight ASM	25	163-5182	2	Plate-Headlight Adjuster
12	138-5775	10	Screw-Delta Point	26	139-3430	12	Screw-Bhf
13	136-7182	2	Screw-Countersunk, Oval				

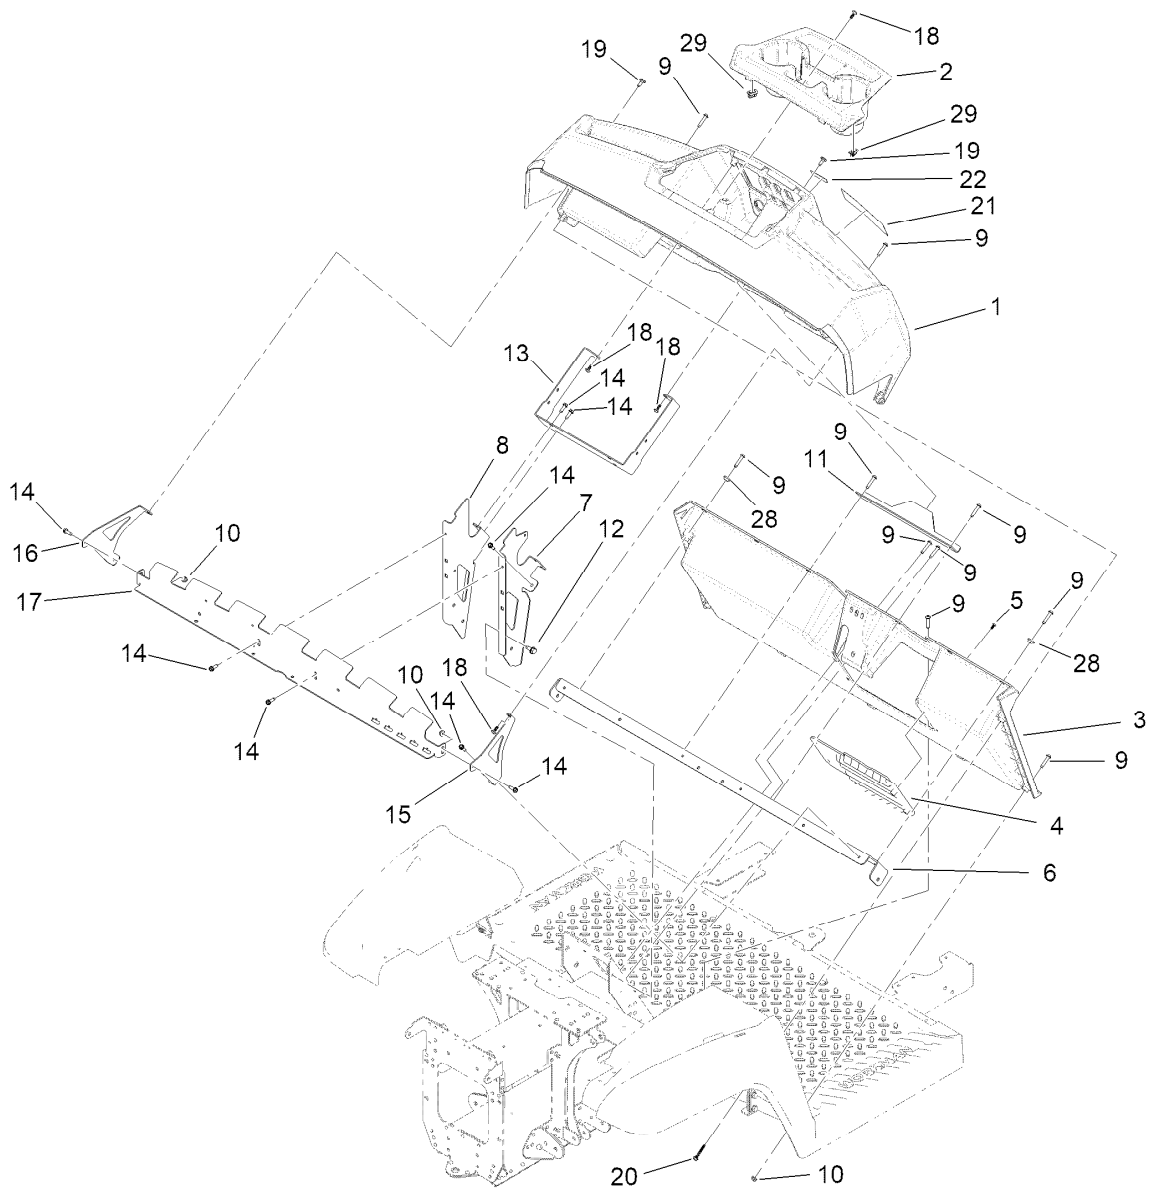


Dash Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-5088	1	Dash	13	163-5092-03	1	Bracket-Dash, Upper
2	163-5091	1	Cupholder	14	49-2040	12	Screw-HWHTF
3	161-5491	1	Footboard-Trim	15	163-5094-03	1	Bracket-Dash, Driver
4	163-5106	1	Cover-Footboard	16	163-5095-03	1	Bracket-Dash, Pass
5	107-7461	2	Screw-Plastite	17	163-5096-03	1	Support-Dash
6	163-9455-03	1	Bracket-Dash, Support	18	138-5775	4	Screw-Delta Point
7	163-5089-03	1	Bracket-Dash, LH	19	120-7950	2	Screw-Torx
8	163-5090-03	1	Bracket-Dash, RH	20	137-3012	2	Screw-Plastite, HWH
9	132-6777	14	Screw-Twh Thd Roll	21	163-9306	1	Decal-Operation, Gas
10	104-7201	4	Nut-HF, NI	22	163-9302	1	Decal-Ignition, Gas
11	163-5093-03	1	Bracket-Dash, Lower	28	163-5097	2	Spacer-Plastic
12	32144-70	4	Screw-HWHTF	29	140-9908	2	Clip-Trim

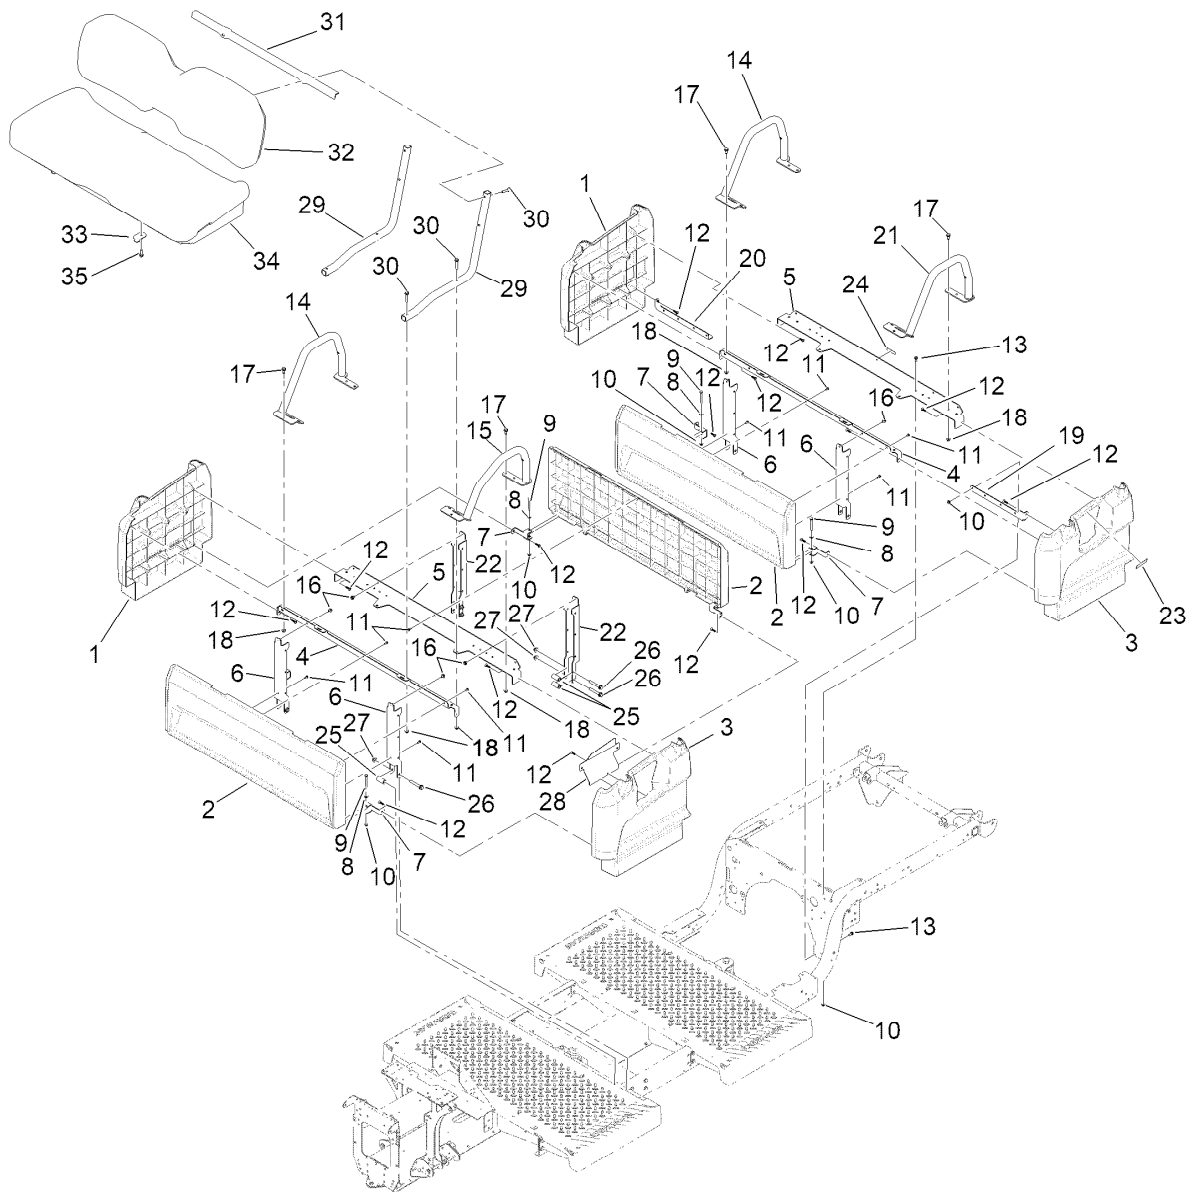


Seatbase Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	163-9459	2	Panel-Seatbase, RH	19	163-9430-03	1	Bracket-Support, LH
2	133-7188	3	Panel-Base, Seat	20	127-7843-03	1	Bracket-Support, Side (RH)
3	163-9460	2	Panel-Seatbase, LH	21	147-3613-05	1	Restraint-Hip, LH
4	163-3765-03	2	Support-Front, Seat	22	131-8355-03	2	Channel-Support, Seat
5	163-5086-03	2	Support-Rear, Seat	23	131-8410	1	Decal-Danger, Fuel
6	127-7841-03	4	Channel-Support, Seat	24	120-9570	1	Decal-Warning
7	127-7844-03	6	Clamp-Plate, Floor	25	131-8452	6	Spacer
8	3256-22	6	Washer-Flat	26	3234-39	6	Screw-HHF
9	321-18	6	Screw-HH	27	119-4042	6	Nut-HF, NI
10	104-7201	12	Nut-HF, NI	28	131-8525-05	1	Cover-Opening
11	112-6349	13	Screw-HWH	29	163-5087-05	2	Tube-Seat
12	120-2349	19	Screw	30	145-7105	8	Screw-HHF
13	3234-33	6	Screw-HHF	31	163-5058-05	1	Stiffener-Seat, Back
14	145-2075-05	2	Hip Restraint ASM, RH	32	163-3763	1	Seat Backrest ASM
15	145-2070-05	1	Hip Restraint ASM, LH	33	140-0812	2	Bracket-Hinge, Seat
16	46-6810	6	Screw And Washer ASM	34	163-3762	1	Seat Bottom ASM
17	32144-70	12	Screw-HWHTF	35	115-5142	2	Screw-HHF, Patch
18	119-4041	16	Nut-HF				

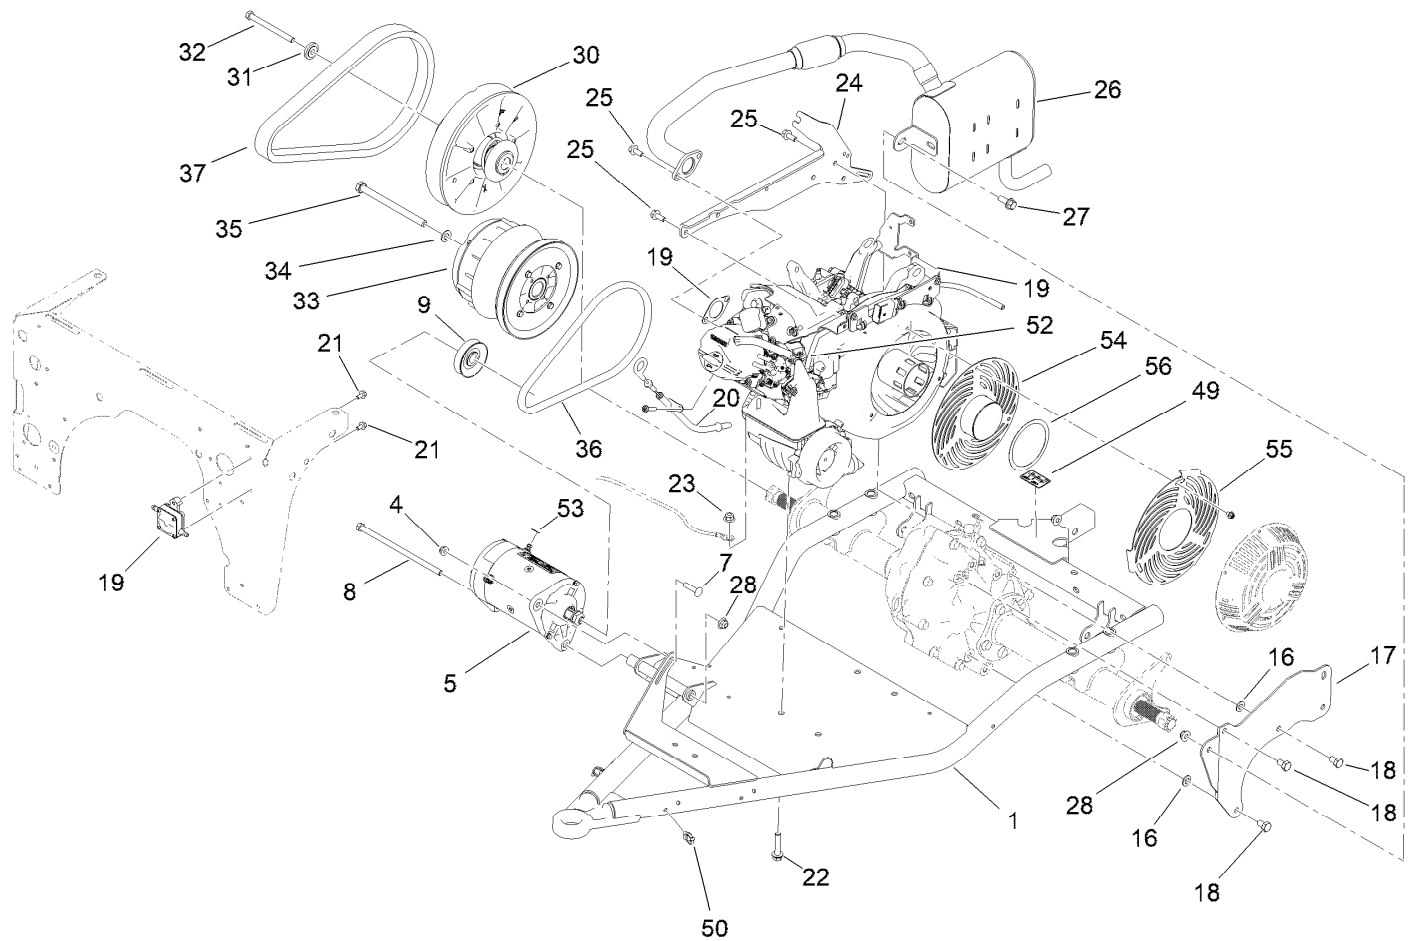

Engine Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	163-3715-03	1	Swingarm ASM [black]	27	3234-42	3	Screw-HHF
4	119-4041	1	Nut-HF	28	119-4042	4	Nut-HF, NI
5	131-8444	1	Starter/Generator ASM	30	119-6011	1	Secondary Clutch ASM
7	112-6950	1	Screw-CARR	31	104-6563	1	Washer-Stepped
8	323-30	1	Screw-HH	32	119-0723	1	Screw-HH, Lock
9	140-9821	1	Pulley-Drive	33	138-0095	1	Primary Clutch ASM
16	33095-00	2	Washer-Flat	34	3256-25	1	Washer-Flat
17	164-4536	1	Bracket-Muffler	35	131-8521	1	Screw-HH
18	70-8470	3	Screw-HH	36	113105	1	Belt-V
19	163-3707	1	Engine-Briggs	37	131-8567	1	Belt-Variable
20	163-3728	1	Dipstick Tube ASM	49	137-9984	1	Decal-Load, Towing
21	33103-012	2	Screw-HHF	50	32180-030	2	Clip-Tie
22	140-4808	4	Screw-HHF	52	3290-378	3	Tie-Cable
23	139-3380	4	Nut-HF	53	32180-535	1	Terminal-Tab
24	147-3900	1	Plate-Spanner	54	163-9498	1	Inner Shroud ASM
25	139-3392	7	Screw-Lock	55	163-9493	1	Shroud-Outer
26	164-4540	1	Exhaust ASM	56	164-4535	1	Decal-Wear

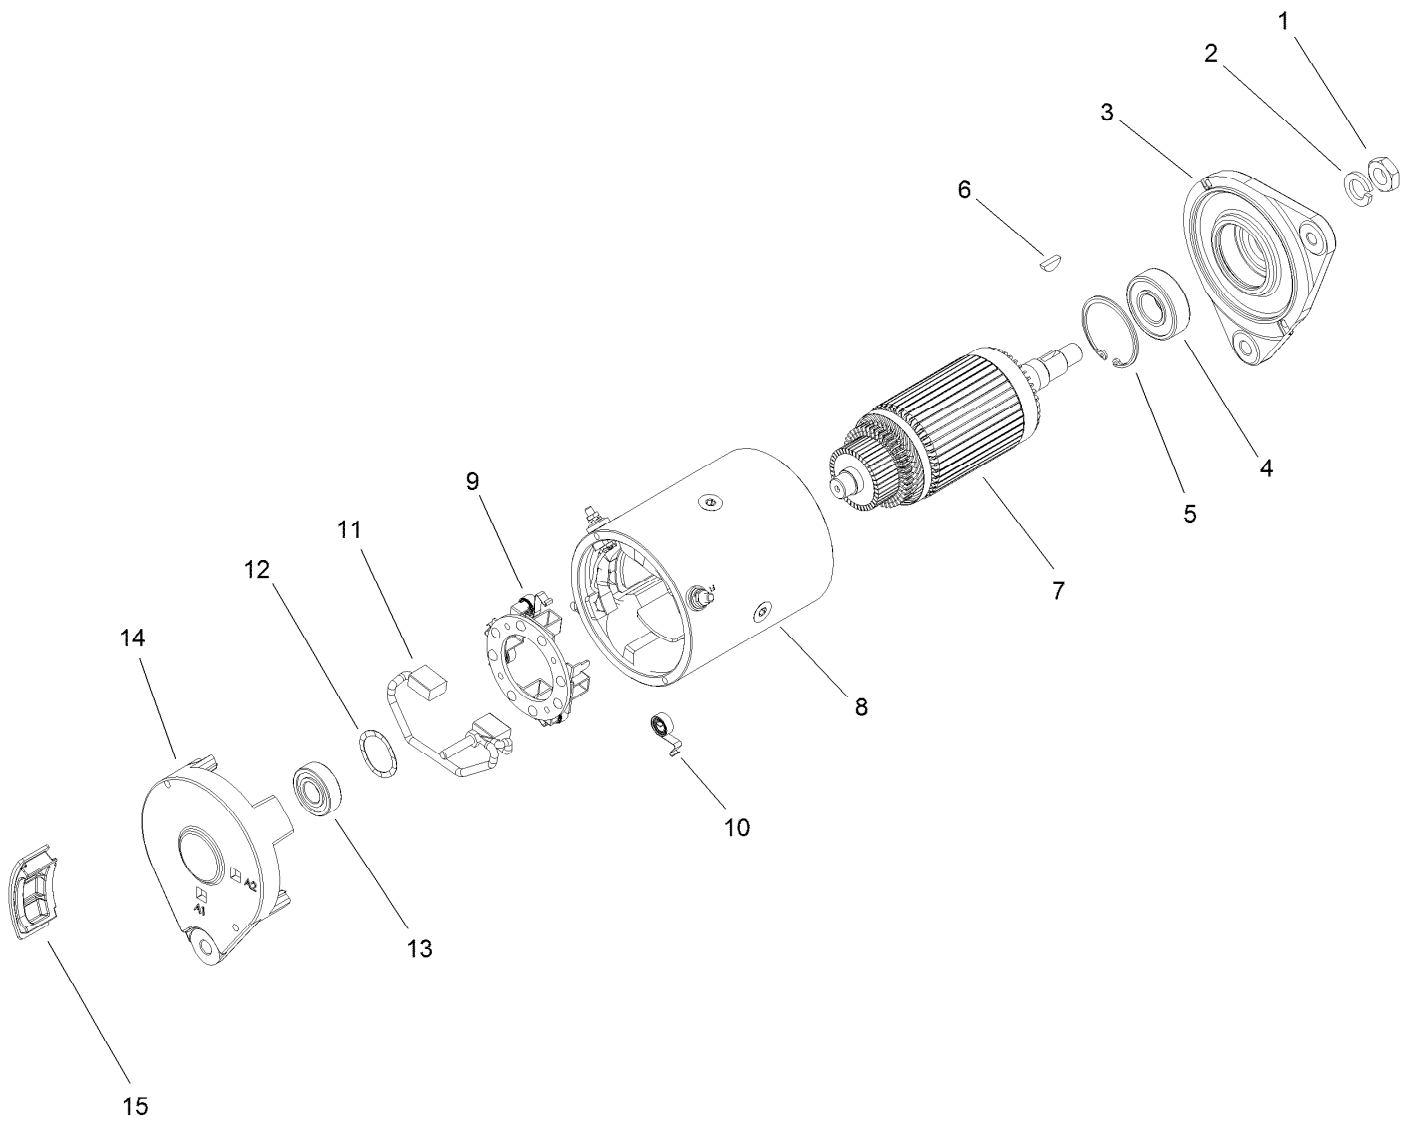

Starter Generator Assembly No. 131-8444


Ref.	Part Number	Qty.	Description
1	119-9651	1	Nut
2	119-9652	1	Washer-Lock
3	133-0599	1	Head-Drive End
4	119-9655	1	Bearing
5	119-9656	1	Ring-Retaining
6	119-9657	1	Key-Woodruff
7	119-9658	1	Armature ASM
8		1	Frame And Field Assembly ●
9	119-9661	1	Brush Box ASM
10	119-9660	4	Spring-Brush
11	119-9659	1	Brush Lead And Terminal Service Kit
12	119-9662	1	Washer-Wave
13	119-9663	1	Bearing
14		1	Head-End, Cummutator ●
15	133-0600	4	Plug-Rubber

● Not serviced separately

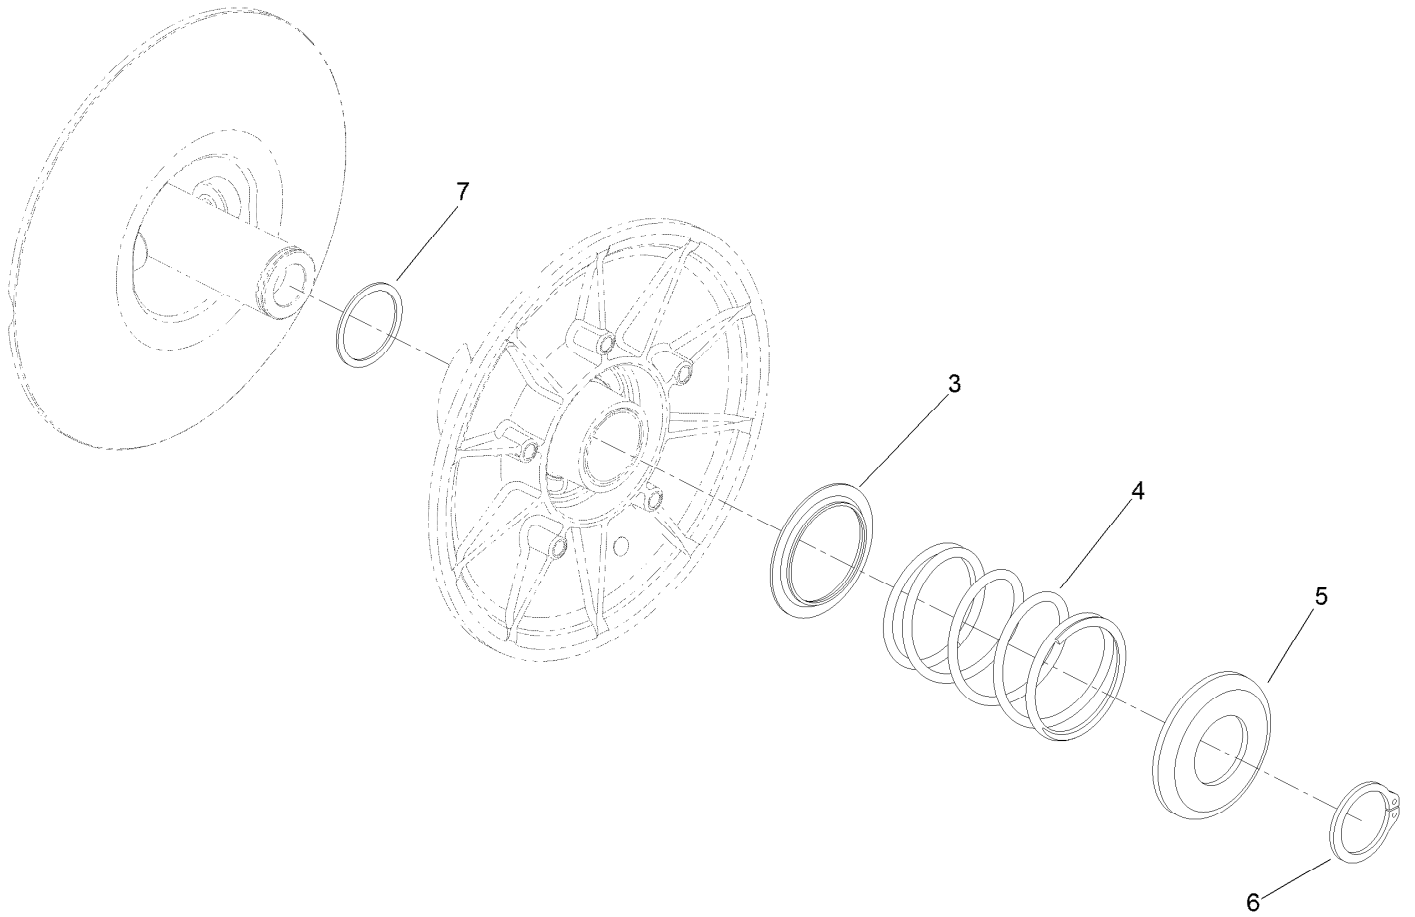


Secondary Clutch Assembly No. 119-6011

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	119-0809	1	Cup-Spring Retainer, Inner
4	119-9360	1	Spring-Compression, Black/Almond
5	119-0810	1	Cup-Spring Retainer, Outer
6	119-0811	1	Ring-Retaining
7	119-6018	1	Shim-Thrust

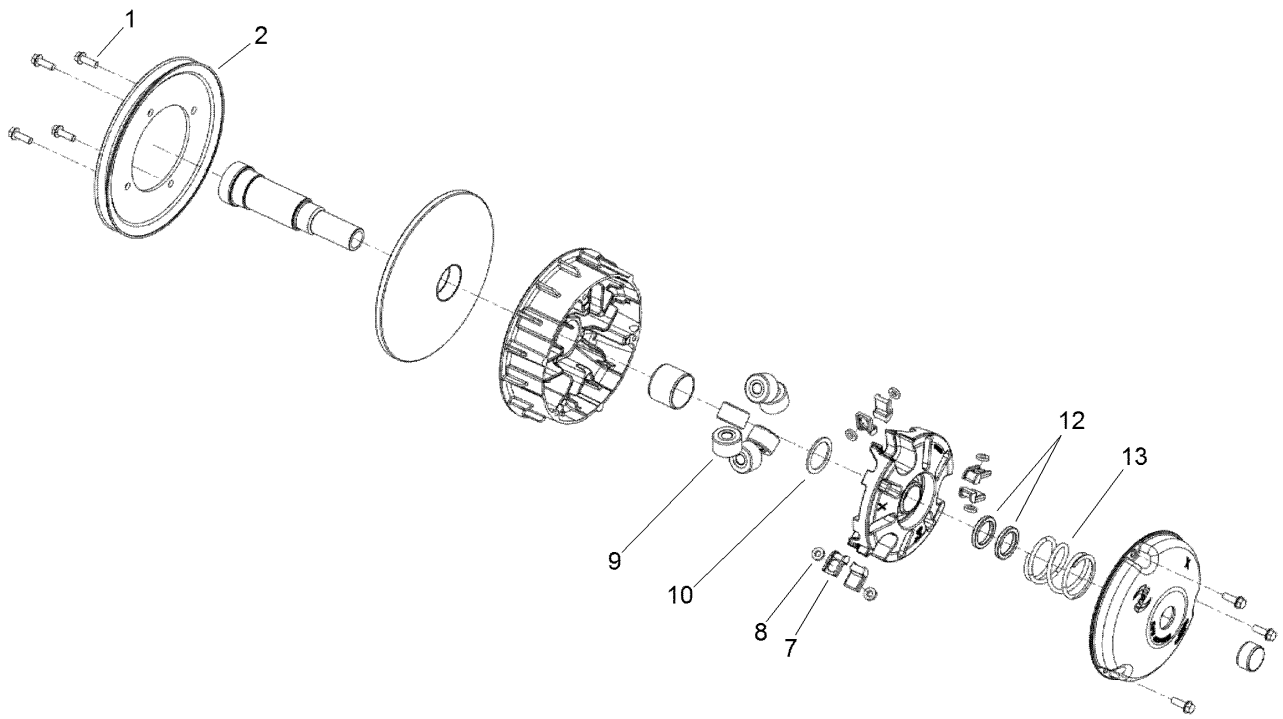

Primary Clutch Assembly No. 138-0095


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	49-2040	7	Screw-HWHTF
2	119-0813	1	Pulley-Primary
7	127-8689	6	Button-Primary, Torque
8	127-8690	6	Plug-Button, Torque
9	119-0804	6	Weight-Roller
10	119-0812	1	Shim-Spider
12	119-0807	2	Shim-Limiter
13	119-9532	1	Spring-Red/White

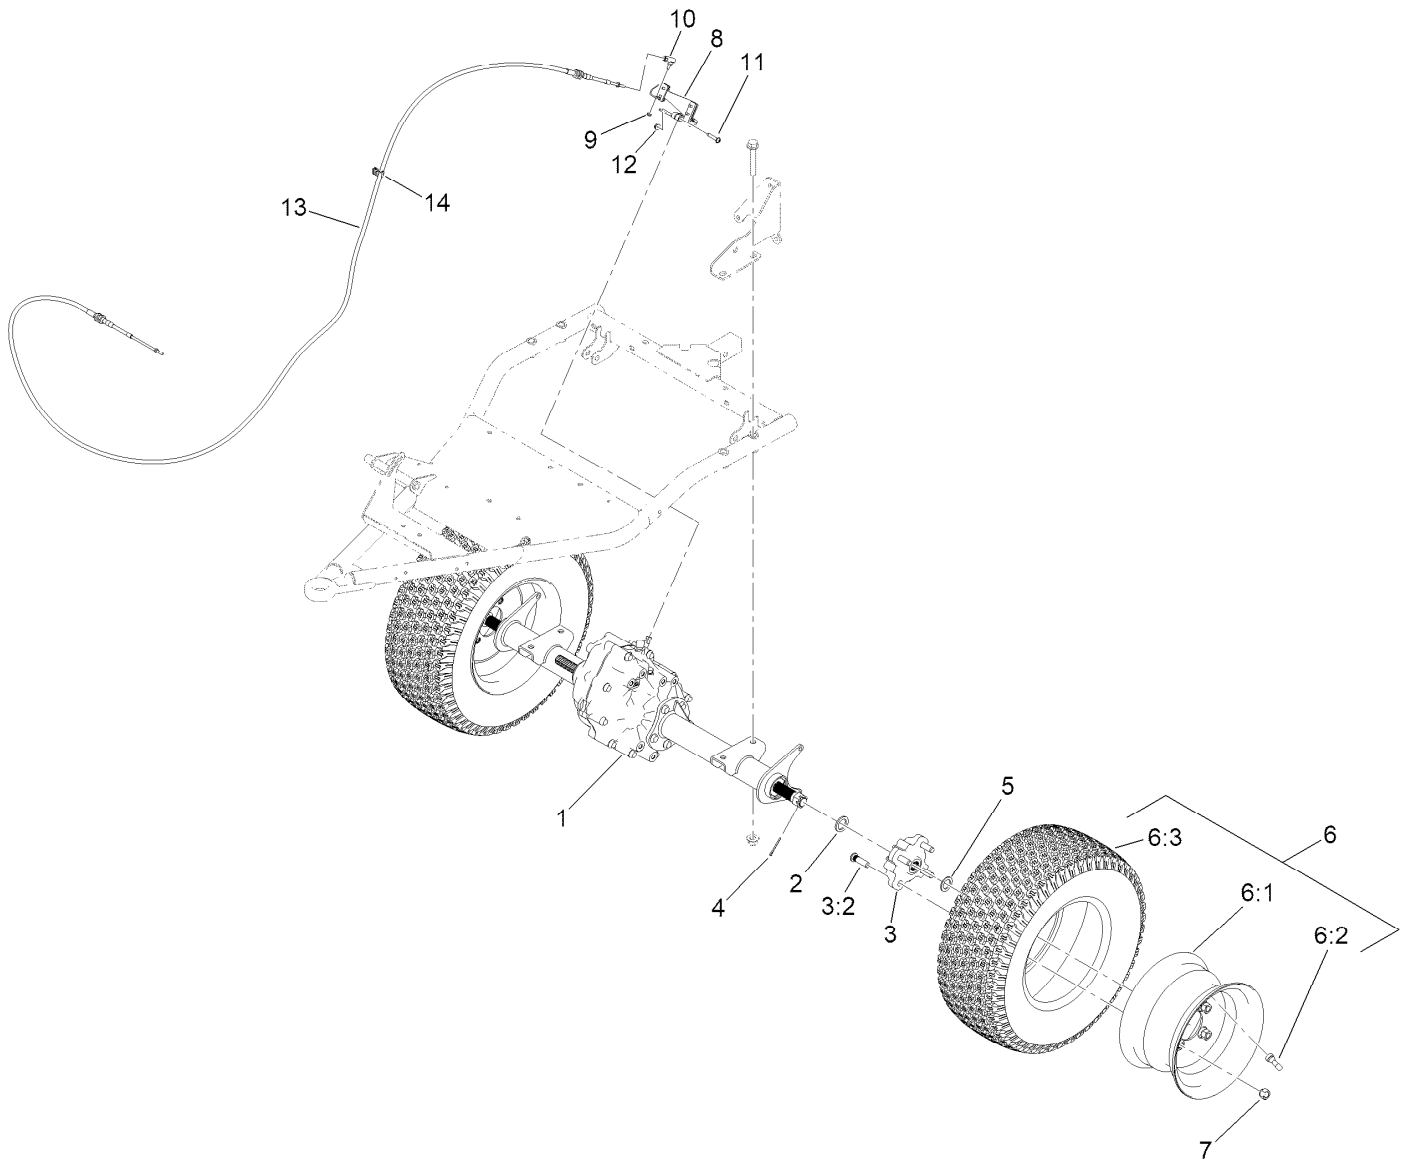

Transaxle Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	131-3486	1	Transaxle	7	139-2564	8	Nut-Lug
2	131-8570	2	Spacer-Hardened	8	133-7260-03	1	Arm-Shift
3	140-9951	2	Rear Hub ASM	9	3296-27	1	Nut-Lock, NI
3:2	10-6830	4	Stud-Type, Drive	10	2411-38	1	Joint-Ball
4	1-806800	2	Pin-Cotter	11	132-6777	1	Screw-Twh Thd Roll
5	3-7898	2	Washer-Thrust	12	104-7201	1	Nut-HF, NI
6	147-2761	2	Wheel And Tire ASM	13	131-8400	1	Cable-Shift
6:1	147-2762	1	Wheel	14	32180-225	1	Clip-Edge, Top-Perpendicular
6:2	139-4475	1	Tire-20 X 8.00-10				
6:3	232-27	1	Stem-Valve				


Transaxle Assembly No. 131-3486

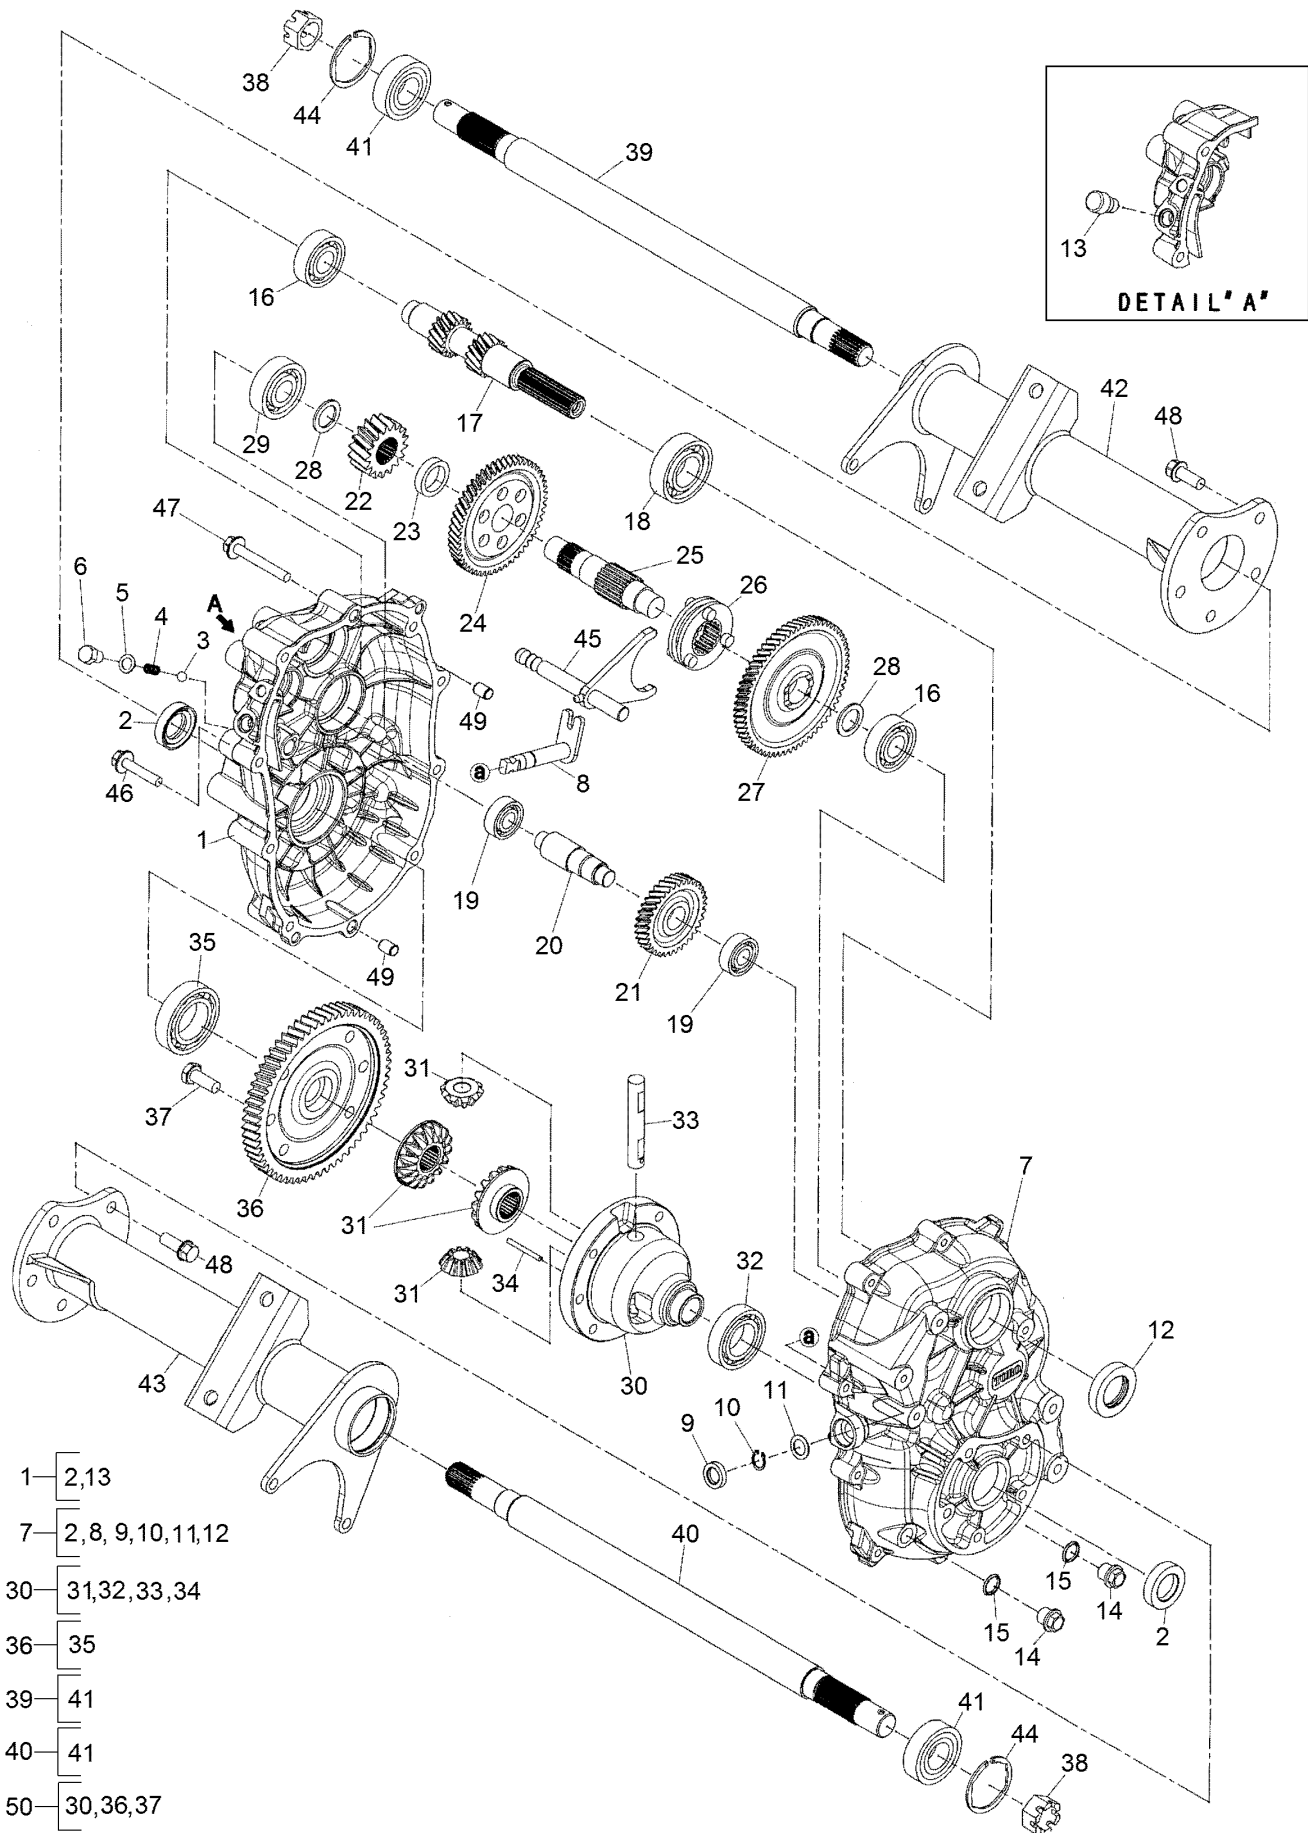

Transaxle Assembly No. 131-3486 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-2400	1	Case-LH	26	133-2419	1	Clutch-Pin
2	133-2401	2	Seal-Oil	27	133-2420	1	Gear
3	104-1660	1	Ball-Steel	28	133-2421	2	Spacer
4	104-1661	1	Spring	29	133-2422	1	Bearing-Ball
5	104-1662	1	Gasket	30	133-2423	1	Case-Differential
6	163-9434	1	Bolt M10	31	133-2424	1	Set-Gear, Differential
7	133-2402	1	Case-RH	32	133-2425	1	Bearing-Ball
8	133-2403	1	Shaft-Select	33	104-1644	1	Shaft-Differential
9	133-2446	1	Seal-Oil	34	104-1645	1	Pin
10	133-2404	1	Ring-Snap	35	133-2426	1	Bearing-Ball
11	133-2405	1	Spacer	36	133-2427	1	Gear
12	104-1607	1	Seal-Oil	37	104-1649	6	Bolt
13	133-2406	1	Breather-Air	38	133-2428	2	Nut-Castle
14	133-2407	2	Plug-Drain, Oil	39	133-2429	1	Shaft-Axle, LH
15	133-2408	2	Gasket	40	133-2430	1	Shaft-Axle, RH
16	133-2409	2	Bearing-Ball	41	133-2431	2	Bearing-Ball
17	133-2410	1	Shaft-Input	42	133-2432	1	Case-Axle, LH
18	133-2411	1	Bearing-Ball	43	133-2433	1	Case-Axle, RH
19	133-2412	2	Bearing-Ball	44	133-2434	2	Ring-Snap
20	133-2413	1	Shaft-Counter	45	133-2435	1	Shaft-Shift
21	133-2414	1	Gear	46	133-2436	1	Bolt-Flange
22	133-2415	1	Gear	47	133-2437	9	Bolt-Flange
23	133-2416	1	Collar	48	133-2438	10	Bolt-Flange
24	133-2417	1	Gear	49	133-2439	2	Pipe-Knock
25	133-2418	1	Shaft-Center	50	133-2440	1	Differential ASM


Battery Assembly

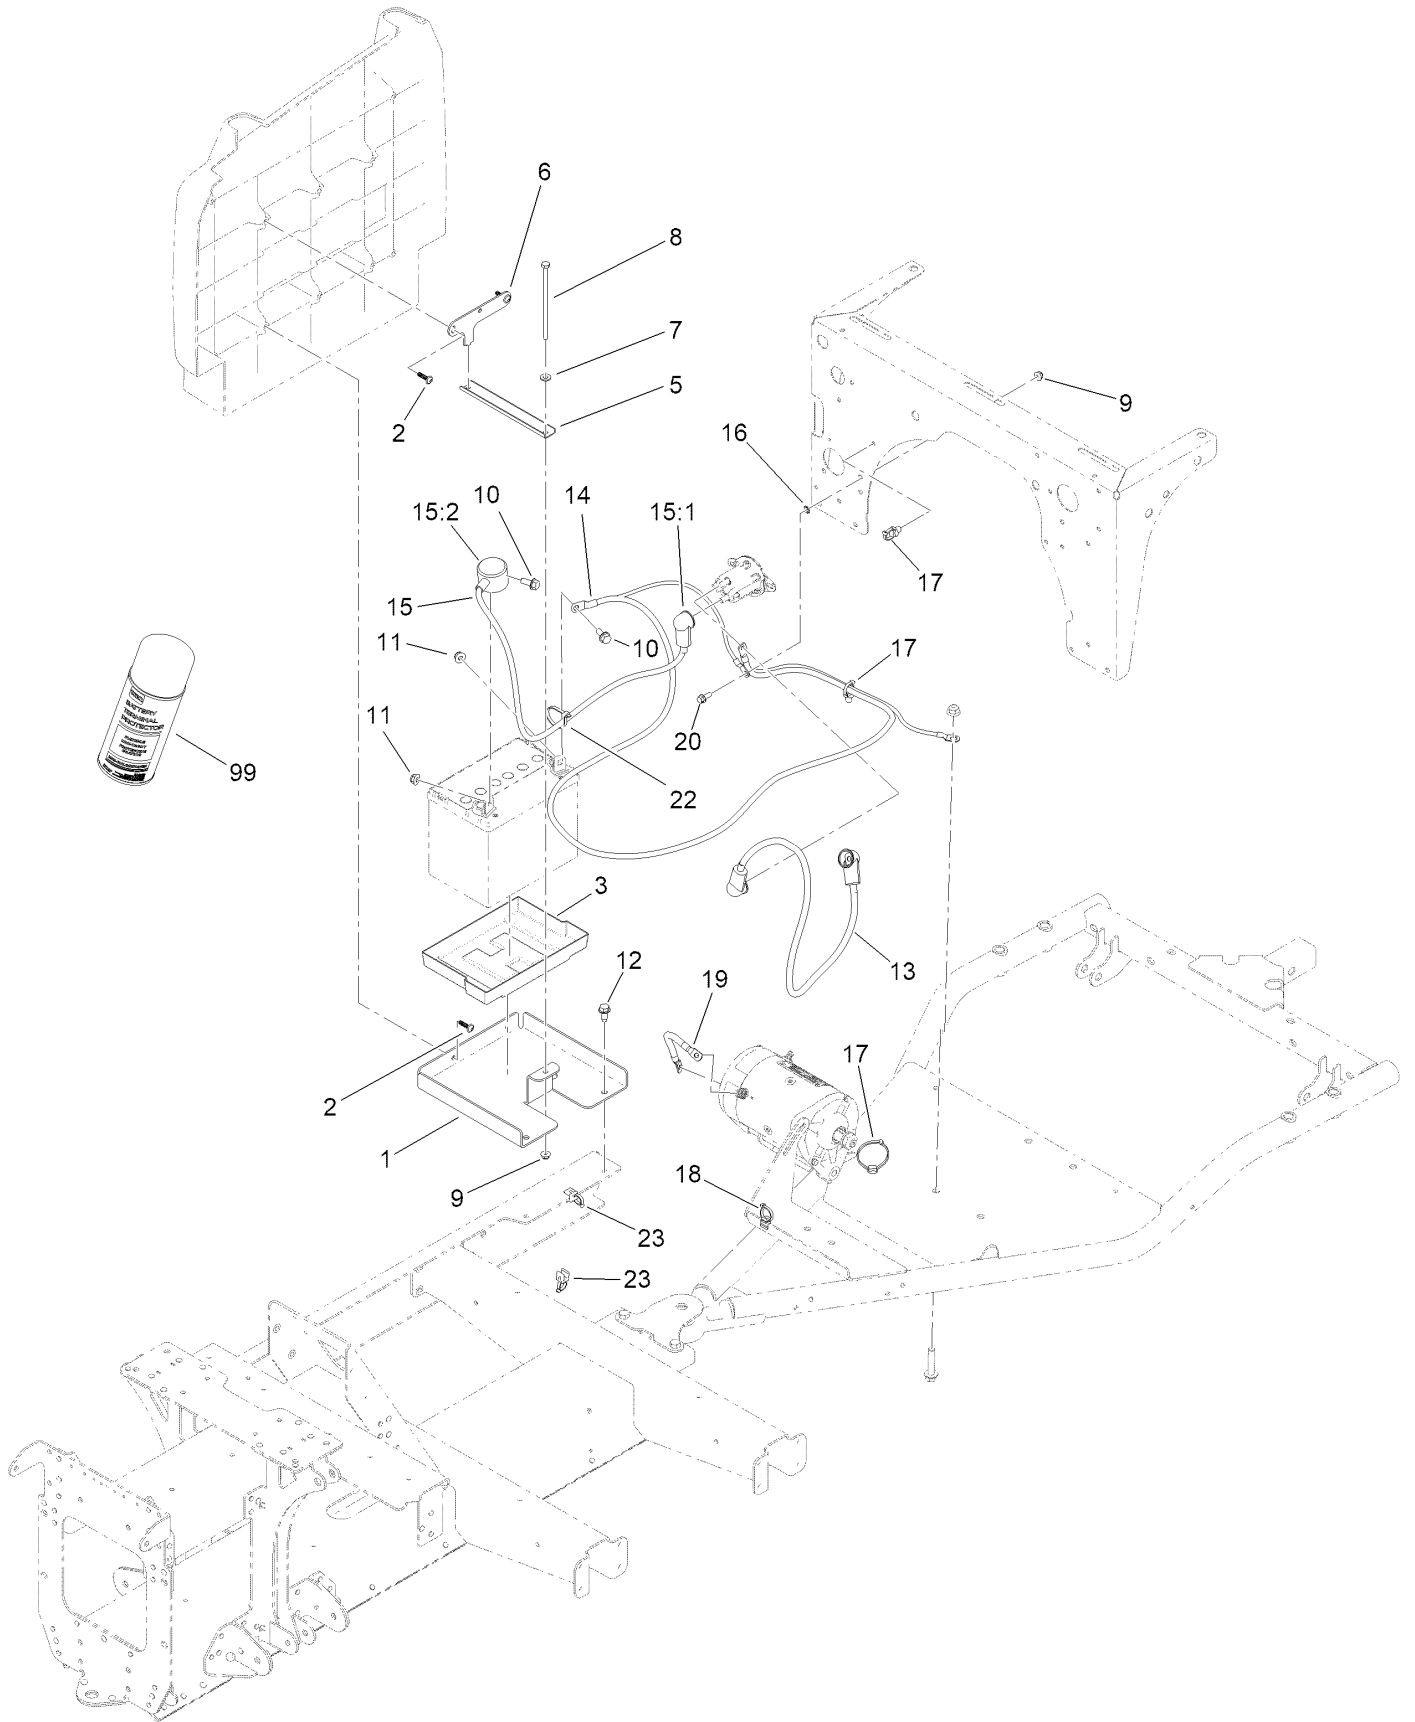

Battery Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-7810-03	1	Base-Battery	15	109-7621	1	Positive Battery Cable ASM
2	120-2349	4	Screw	15:1	1-543393	1	Insulator-Solenoid
3	106948	1	Tray-Battery	15:2	109-2407	1	Insulator-Battery
5	127-7816-03	1	Channel-Clamp, Battery	16	3255-7	1	Washer-Lock/EXT
6	127-7814-03	1	Plate-Clamp, Battery	17	32180-030	3	Clip-Tie
7	3256-22	1	Washer-Flat	18	32180-225	1	Clip-Edge, Top-Perpendicular
8	321-47	1	Screw-HH	19	163-3721	1	Cable-Battery, Bk
9	104-7201	2	Nut-HF, NI	20	3234-33	1	Screw-HHF
10	3234-5	2	Screw-HHF	22	3290-378	1	Tie-Cable
11	119-4041	2	Nut-HF	23	32180-082	2	Clip-Edge W/Tie, Perpendicular
12	32144-70	2	Screw-HWHTF	99	107-0392	1	Protection-Terminal, Aerosol
13	163-3903	1	Battery-Cable, Positive ASM				
14	163-3904	1	Battery-Cable, Negative ASM				

Electrical Assembly

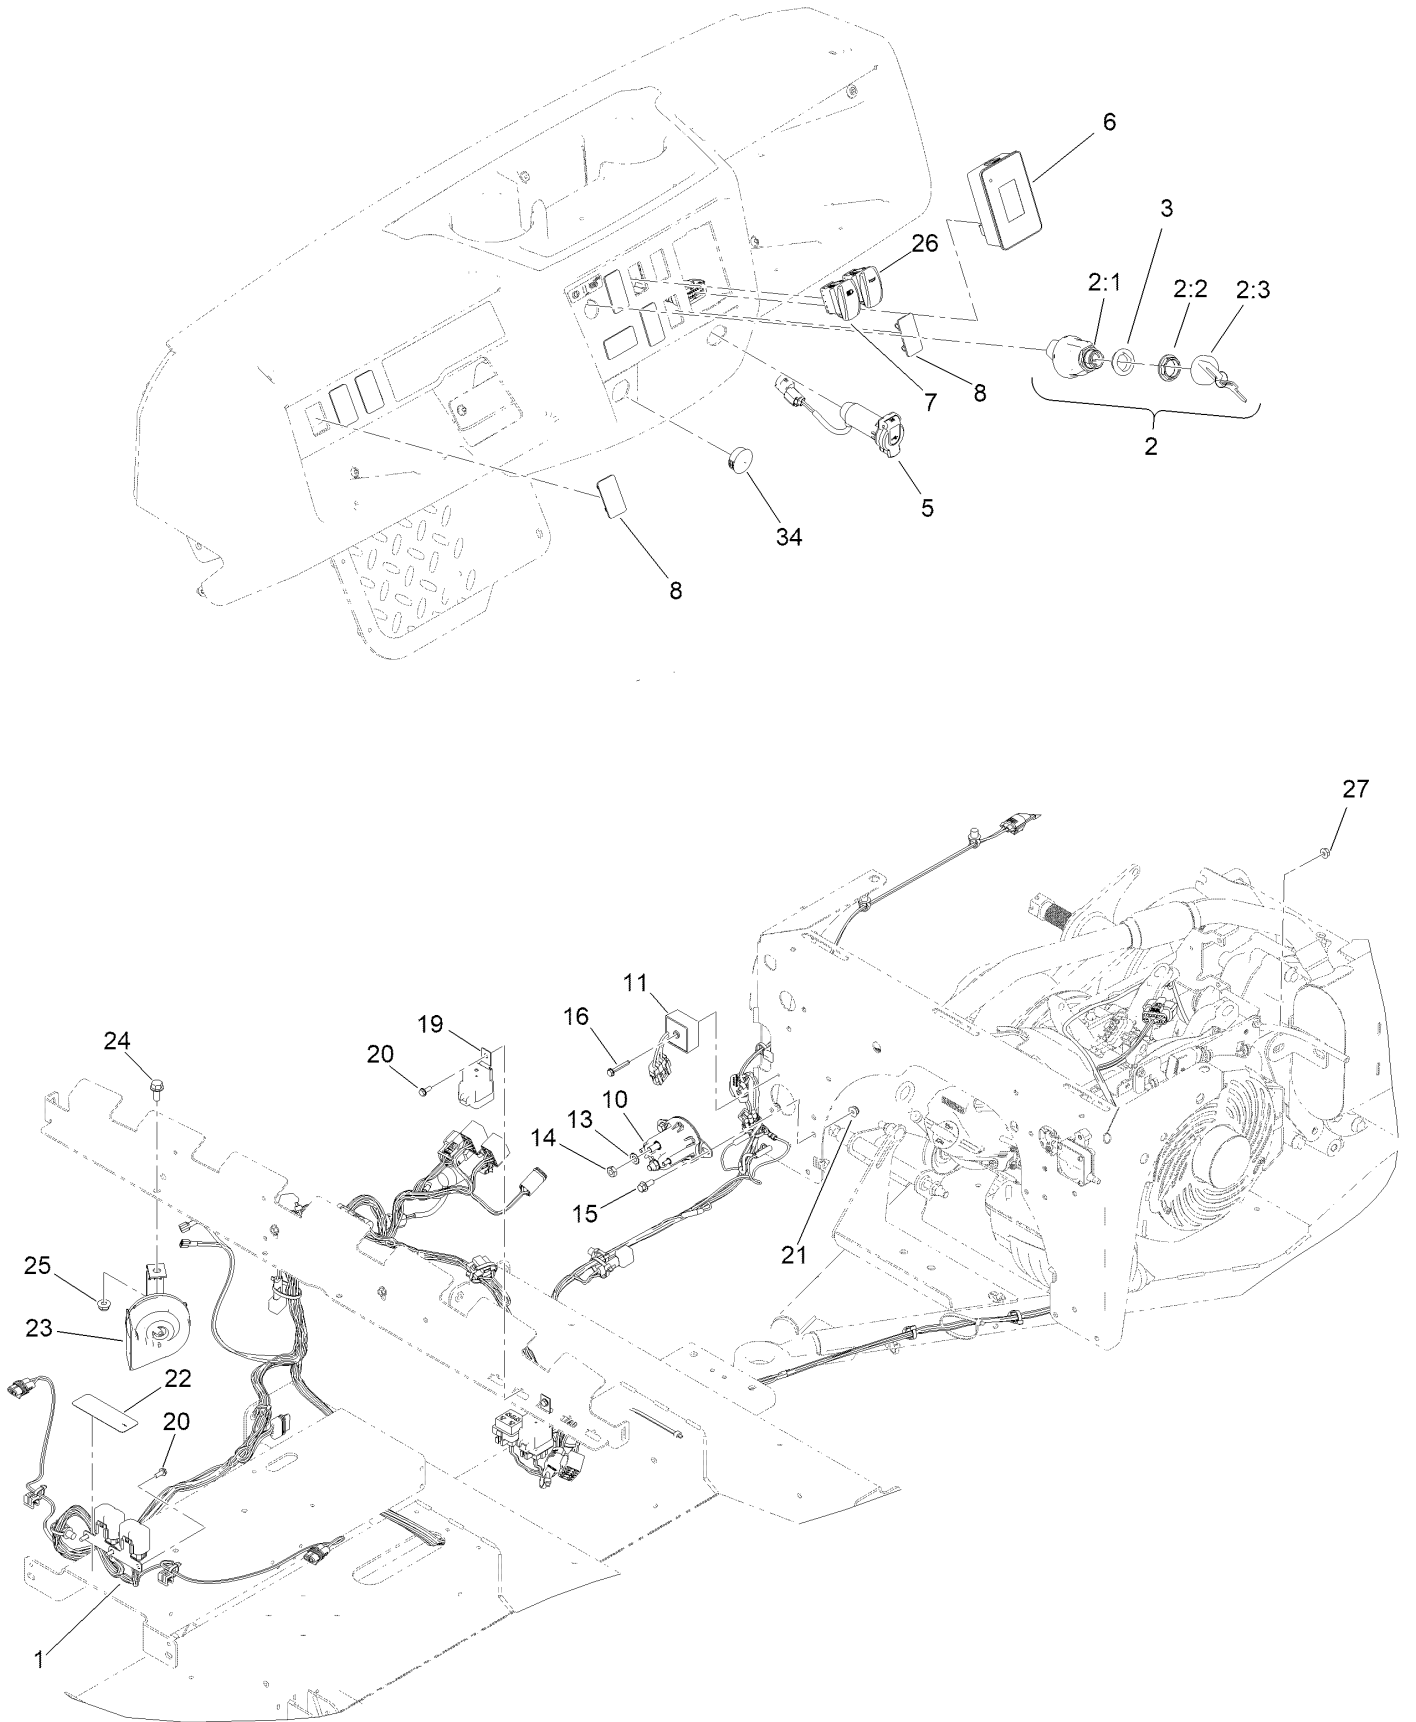

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	122-4157	1	Harness-Wire, Ltx, EFI	14	3220-2	2	Nut-Hex Jam
2	122-2513	1	Switch-Ignition, Suns	15	3234-33	2	Screw-HHF
2:1	121-5160	1	Nut-Hex	16	100-4352	1	Screw-HWH
2:2	122-2704	1	Nut-Face, M22 (Plastic)	19	99-7430	2	Relay-Mini
2:3	121-5162	1	Set-Key, Ignition	20	32144-1	5	Screw-Taptite
3	145-7110	1	Adapter-Switch, Key	21	104-7201	2	Nut-HF, NI
5	163-9341	1	Socket-USB	22	163-9490	1	Decal-Fuse Block, EFI
6	122-2152	1	Controller, Tdm-1601	23	110-2594	1	Horn
7	144-2405	1	Switch-Rocker, On-None-On	24	3234-5	1	Screw-HHF
8	99-7420	7	Plug-Hole	25	119-4041	1	Nut-HF
10	114-3315	1	Solenoid	26	144-2415	1	Switch-Rocker, (On)-None-Off
11	119-9492	1	Regulator-Voltage	27	33003-00	1	Nut-HF
13	3255-8	2	Washer-Lock	34	145-2160	1	Plug-Panel

Fuel System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-7739-03	1	Mount-Tank, Fuel	16	109-0304	1	Hose-Fuel
2	163-3701	1	Fuel Tank ASM	17	117-5399	1	Adaptor-Orifice
2:2	114-0284	1	Grommet	18	135-3950	1	Hose-Fuel
2:3	114-0285	1	Valve-Rollover	19	120-2037	2	R-Clamp
2:4	46-6560	2	Bushing	20	109-0303	2	Hose-Fuel
2:5	115-9044	1	Pipe-Stand	21	163-3713	1	Hose-Fuel
2:6	131-8357	1	Cap-Gauge	22	145-7283	1	Filter-Fuel, 30 Micron
2:7	145-7285	1	Fitting-Return, Fuel	23	145-7282	1	Filter-Fuel, 10 Micron
3	32144-70	3	Screw-HWHTF	24	32180-030	3	Clip-Tie
4	114-0292	1	Bracket-Canister, Carbon	25	1-603770	1	Valve-Fuel
5	127-8685	1	Canister-Carbon	26	144-5368	1	Hose-Fuel
6	106-5317	1	Hose-Fuel	27	120-4370	1	Hose-Fuel
7	115-7854	1	Filter-Fuel, Inline	28	109-0293	1	Hose-Fuel
8	32105-15	4	Screw-HWH	30	3290-378	3	Tie-Cable
9	104-7201	4	Nut-HF, NI	31	1-303287	1	Tie-Cable
10	163-3704-05	1	Bracket-Tank,Fuel	32	110-5701	1	Hose-Fuel
11	120-2349	4	Screw	33	32180-031	1	Clip-Tree (W/Tie)
12	2412-98	16	Clamp-Hose	34	56-6360	1	Filter-Fuel
13	120-2038	1	Cartridge-Valve, Check	35	163-5059	1	Hose-Pulse (.212 X 2.00, J200, LP)
14	147-2833	1	Cover-Fuel Cap	36	164-4545	1	Baffle-Pulse
15	110-3255	1	Hose-Fuel				

Attachments and Accessories

For 07424EX — Workman LTX EFI Extended Utility Vehicle

Product Name	Model/Part
Trash Can Mounting Kit	07028
Bed Rack Kit.....	07031
Cargo Bed Kit	07046
Cab Kit.....	07142
12V Electric Lift Kit.....	07144
Extended Bed Kit.....	07149
Door Kit.....	07150
12V Electric Bed Lift Kit	07167
Canopy W/ ROPS.....	07169
Steel Bed Side Kit.....	07180
Rear Attachment Receiver, Workman GTX Series Utility Vehicle with Steel Cargo Bed	07186
Canopy Mount Kit, Workman GTX Utility Vehicle with Extended Flatbed	07199
Secondary Rear Receiver, Workman GTX	07285
Windshield and Wiper Kit, Workman GTX Utility Vehicle.....	07407
Seat Kit - Workman LTX.....	07426
Brush Guard - Workman LTX.....	07427
Armature Assembly-L Pin	07428
LTX Ball Cage ROPS Certified.....	07429
Workman LTX - Front Hitch W/Brush Guard	07431
Steel Cargo Bed Base	07450
Steel Cargo Bed Solid Sides Kit.....	07451
Workman GTX 2-Person Canopy	07921
Workman GTX 4-Person Canopy	07922
Folding Windshield Kit, Workman GTX Utility Vehicle with Canopy	07923
Center Bed Racking - GTX	08147
Side Bed Racking, Workman UTX/MDX/GTX.....	08148
Tire-20 8.00-10	116-7333
Shim-Limiter	119-0807
Exterior Mirror Kit.....	130-5448
Interior Mirror Kit.....	130-5449
Beacon Kit	130-5484
Work Light Kit	130-5485
Windshield Washer Fluid Kit, 2015 and after Workman MD/HD Series Utility Vehicle.....	130-5615
Tire/Wheel Asm	131-8319
Wide Angle Mirror Kit, Utility Vehicle with Canopy.....	133-1009
Wide Angle Mirror Kit.....	133-1038
Class 1 Draw Bar Kit.....	133-3095
Cab Mount Kit, Workman GTX Utility Vehicle with Extended Flatbed	133-7198
Door Mount Mirror Kit.....	136-1997
Small Bedrack Mount Grip Kit.....	136-6311
Large Bedrack Mount Grip Kit.....	136-6312
Universal Wireless Hourmeter Kit	144-2436
Lithium Homologation Kit.....	163-9390
12v Power Point Kit, Workman LTX or LTX Lithium Utility Vehicle	163-9395
Reverse Alarm Kit, Workman GTX Utility Vehicle.....	163-9396

Attachments and Accessories (continued)

Ram Ball Mount Kit	163-9494
Brake and Signal Light Kit, Workman LTX Utility Vehicle	163-9495
Cab Mount Kit, Workman LTX Utility Vehicle	164-4541
Seat Conversion Kit	164-4550
Tire	94-5236

Notes:

Notes:



Count on it.