



Count on it.

Form No. 3479-323 Rev A

Parts Catalog

Workman® LTX

Lithium Extended Utility Vehicle

Model No. 07425EX—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Front Frame and Suspension Assembly 4

Left Hand Spindle Assembly No. 163-9475 5

Right Hand Spindle Assembly No. 163-9476 6

Floor Plates and Rear Suspension Mount Assembly 7

Rear Frame and Suspension Assembly 8

Frame Mount and Rear Shock/Spring Assembly 9

Brake Assembly 10

Master Cylinder Assembly No. 104-6782 11

Brake Caliper Assembly No. 161-1890 12

Steering Assembly 13

Pedal and Control Assembly 14

Hood and Fender Assembly 15

Dash Assembly 16

Seat Base Assembly 17

Battery Assembly 18

Rear Wheel and Transaxle Assembly 19

Transaxle Assembly No. 161-5295 20


Electric Motor Assembly No. 137-6936 21

Onboard Charger Assembly 22

Inverter Assembly 23

Controller/Converter and Horn Assembly 24


Attachments and Accessories 25

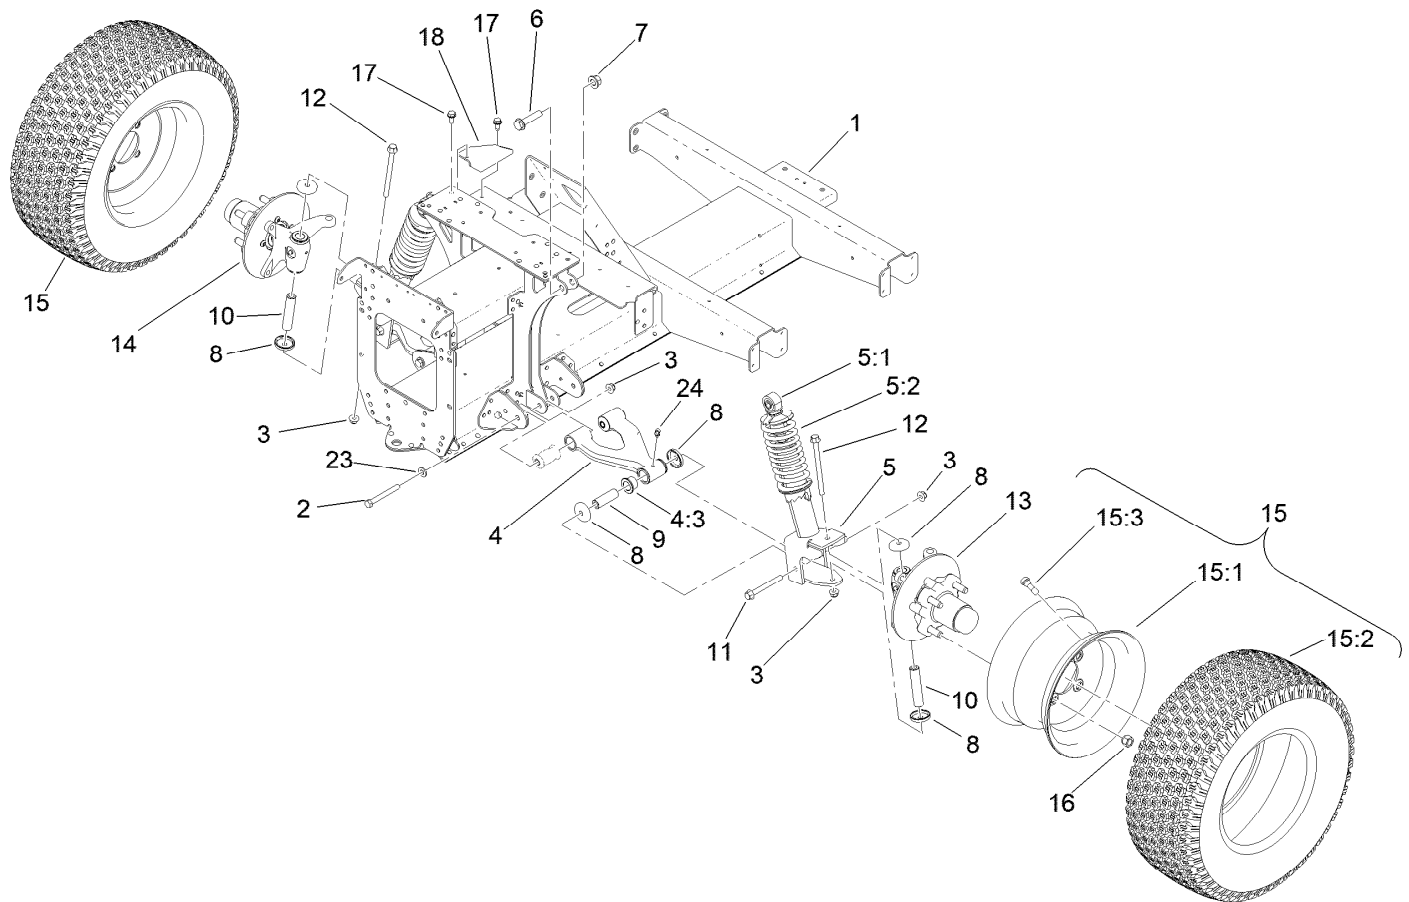

Front Frame and Suspension Assembly


Ref.	Part Number	Qty.	Description
1	161-5490-03	1	Front Frame ASM [black]
2	112-7161	4	Screw-HH
3	139-3380	8	Nut-HF
4	163-9444	2	Control Arm ASM
4:3	147-3983	2	Bushing-Flange
5	139-4484	2	Strut ASM, 250 Lb (16.33" EXT Length)
5:1	131-8574	1	Isolator-Shock
5:2	137-6719	1	Spring-Compression, 250Lb
6	3234-46	2	Screw-HHF
7	139-1689	2	Nut-HF
8	140-9793	8	Pin Seal
9	144-5634	2	Sleeve-Outer
10	161-2048	2	Sleeve-Kingpin

Ref.	Part Number	Qty.	Description
11	139-3370	2	Screw-HF
12	139-3350	2	Screw-HF
13	163-9475	1	LH Spindle ASM
14	163-9476	1	RH Spindle ASM
15	147-2761	2	Wheel And Tire ASM
15:1	147-2762	1	Wheel
15:2	139-4475	1	Tire-20 X 8.00-10
15:3	232-27	1	Stem-Valve
16	139-2564	8	Nut-Lug
17	32144-70	2	Screw-HWHTF
18	131-8339-03	1	Reinforcement-Tower
23	100-4852	4	Washer-Hardened
24	302-40	2	Fitting-Grease, 90 DEG

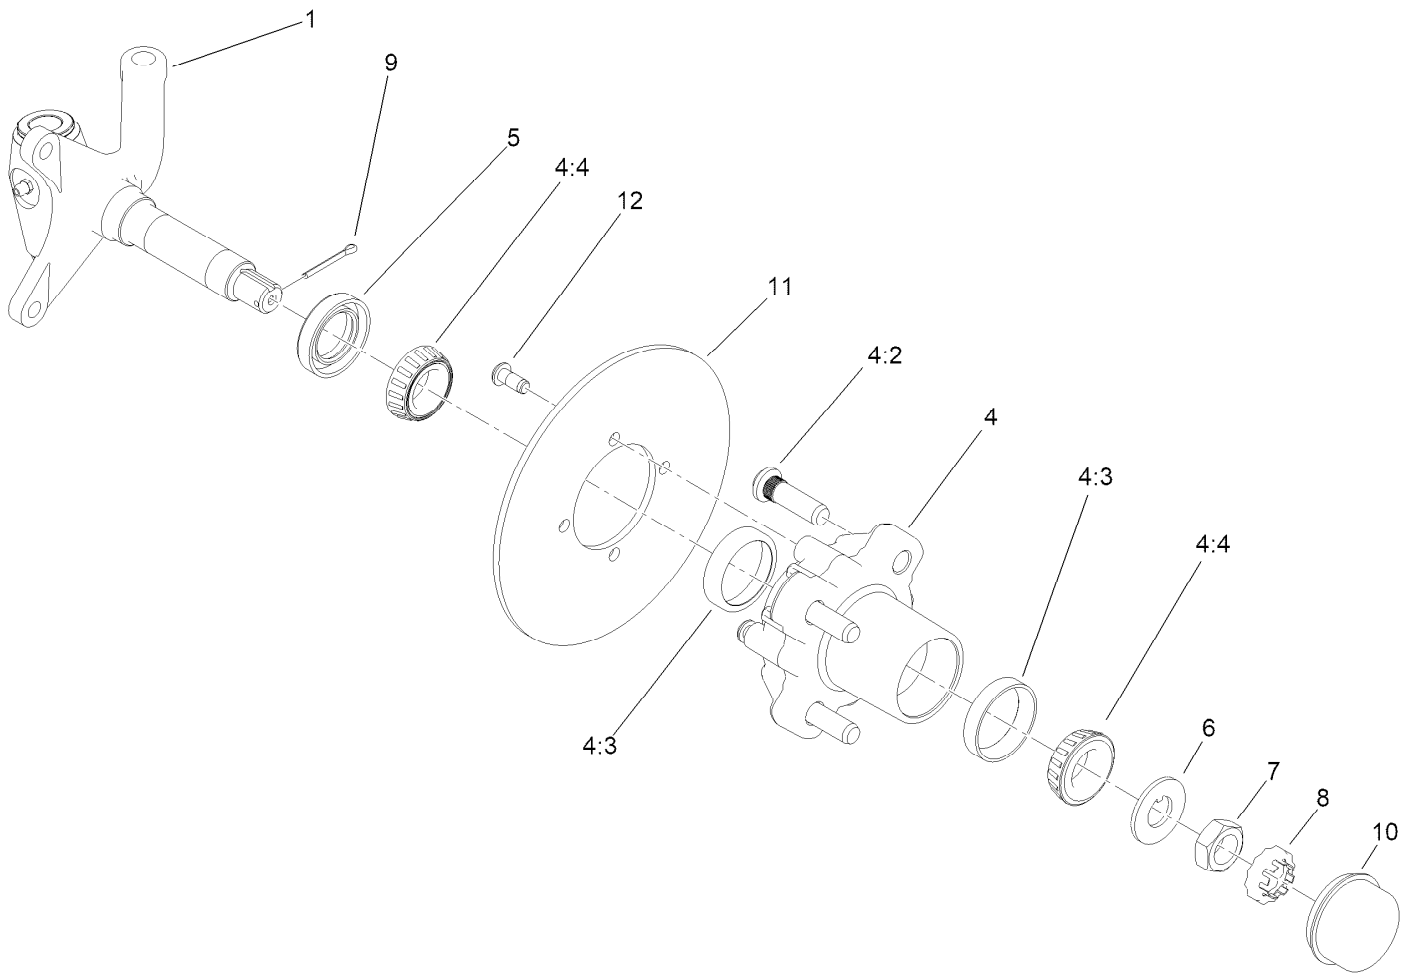


Left Hand Spindle Assembly No. 163-9475

Ref.	Part Number	Qty.	Description
1	163-9471	1	Spindle ASM LH
4	144-5470	1	Front Hub ASM
4:2	10-6830	4	Stud-Type, Drive
4:3	254-72	2	Bearing-Cup, Tapered
4:4	254-94	2	Bearing-Cone, Tapered
5	112-1690	1	Seal-Oil
6	93-0309	1	Washer-Tab
7	3220-7	1	Nut-Jam
8	93-0307	1	Nut-Lock, Retainer
9	3272-12	1	Pin-Cotter
10	241-119	1	Cap-Dust
11	139-4474	1	Rotor-Brake
12	121-9671	4	Screw-HSBH, Patch

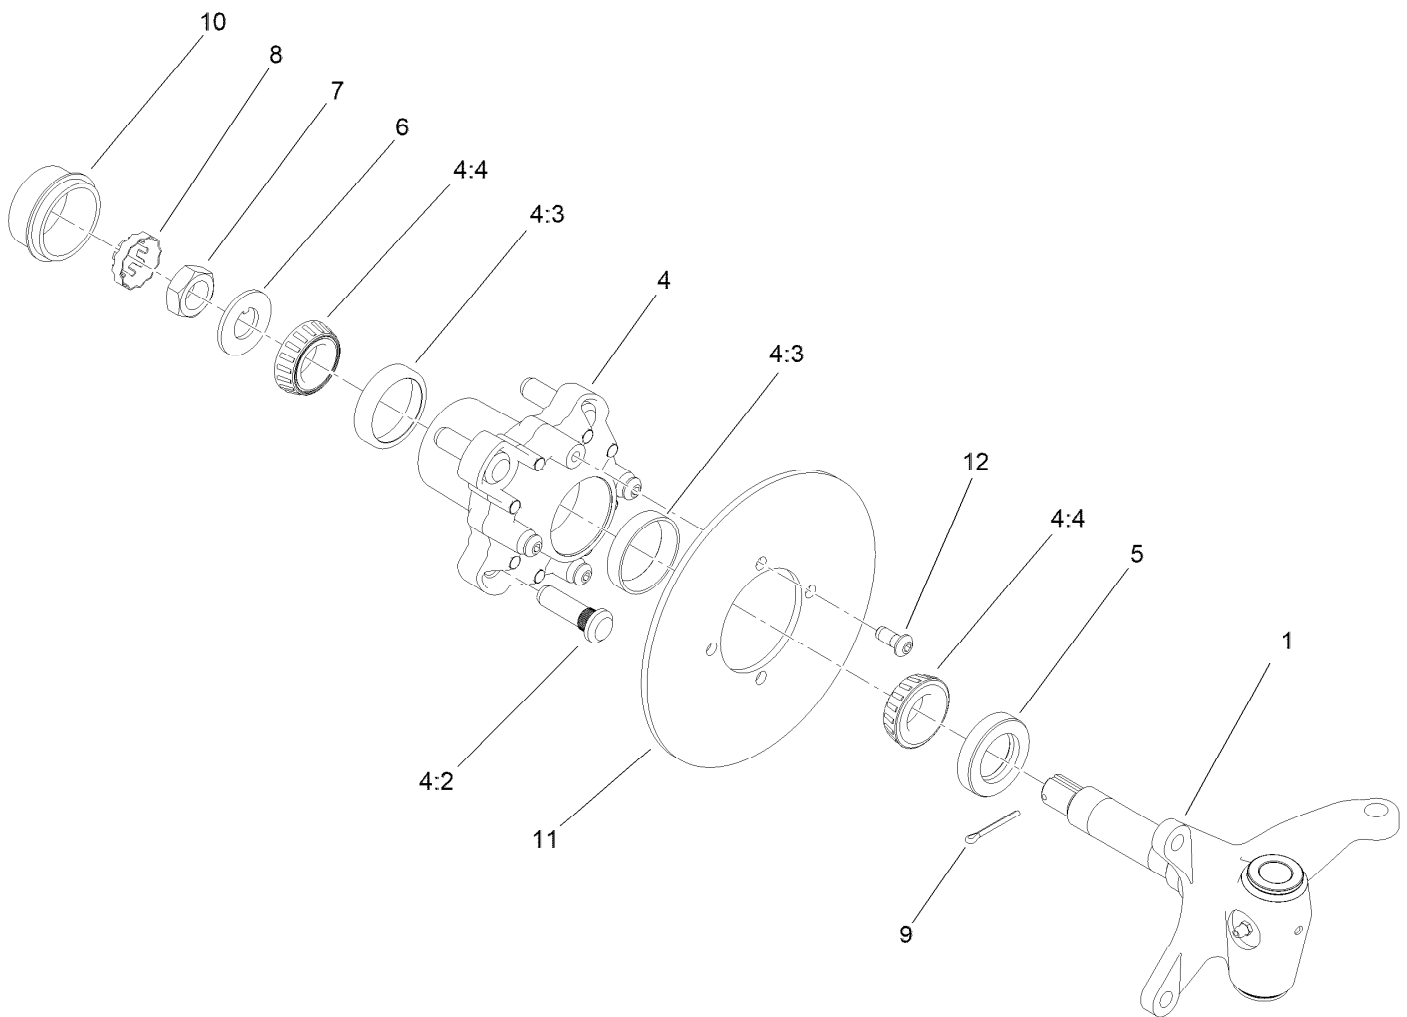

Right Hand Spindle Assembly No. 163-9476


Ref.	Part Number	Qty.	Description
1	163-9472	1	Spindle ASM RH
4	144-5470	1	Front Hub ASM
4:2	10-6830	4	Stud-Type, Drive
4:3	254-72	2	Bearing-Cup, Tapered
4:4	254-94	2	Bearing-Cone, Tapered
5	112-1690	1	Seal-Oil
6	93-0309	1	Washer-Tab
7	3220-7	1	Nut-Jam
8	93-0307	1	Nut-Lock, Retainer
9	3272-12	1	Pin-Cotter
10	241-119	1	Cap-Dust
11	139-4474	1	Rotor-Brake
12	121-9671	4	Screw-HSBH, Patch

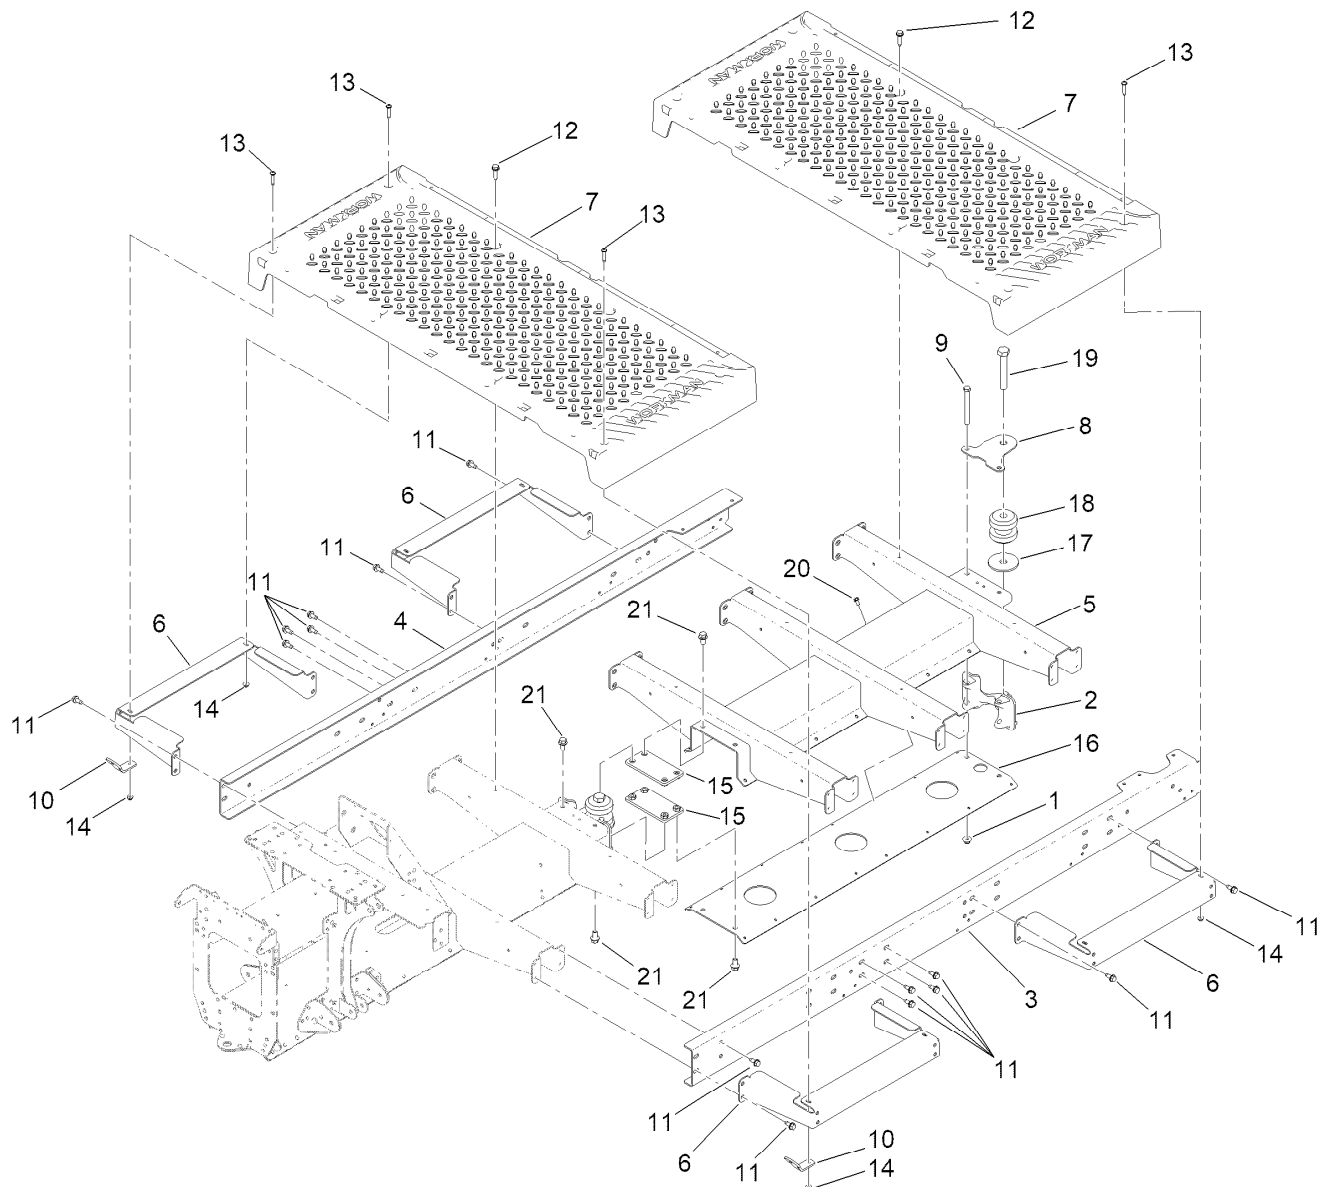

Floor Plates and Rear Suspension Mount Assembly

Ref.	Part Number	Qty.	Description
1	119-4042	2	Nut-HF, NI
2	131-8466	1	Mount-Suspension, Rear
3	127-7823-03	1	Channel-Extended, LH
4	127-7824-03	1	Channel-Extended, RH
5	127-7828-03	1	Channel-Extension
6	127-7837-03	4	Bracket-Support, Floor Plate
7	127-7829	2	Plate-Floor
8	131-8597	1	Plate-Gimbal, Upper
9	323-42	2	Screw-HH
10	127-7832	2	Bracket-Angle
11	32144-70	40	Screw-HWHTF


Ref.	Part Number	Qty.	Description
12	32144-49	8	Screw-HWHTF
13	132-6777	8	Screw-Twh Thd Roll
14	104-7201	8	Nut-HF, NI
15	131-8424	2	Plate-Connection
16	127-7827-03	1	Plate-Channel, Extension
17	110-4549	1	Washer-Snubbing
18	131-8480	1	Isolator
19	104-5877	1	Screw-HH
20	32144-4	16	Screw-HWH
21	3234-1	8	Screw-HHF

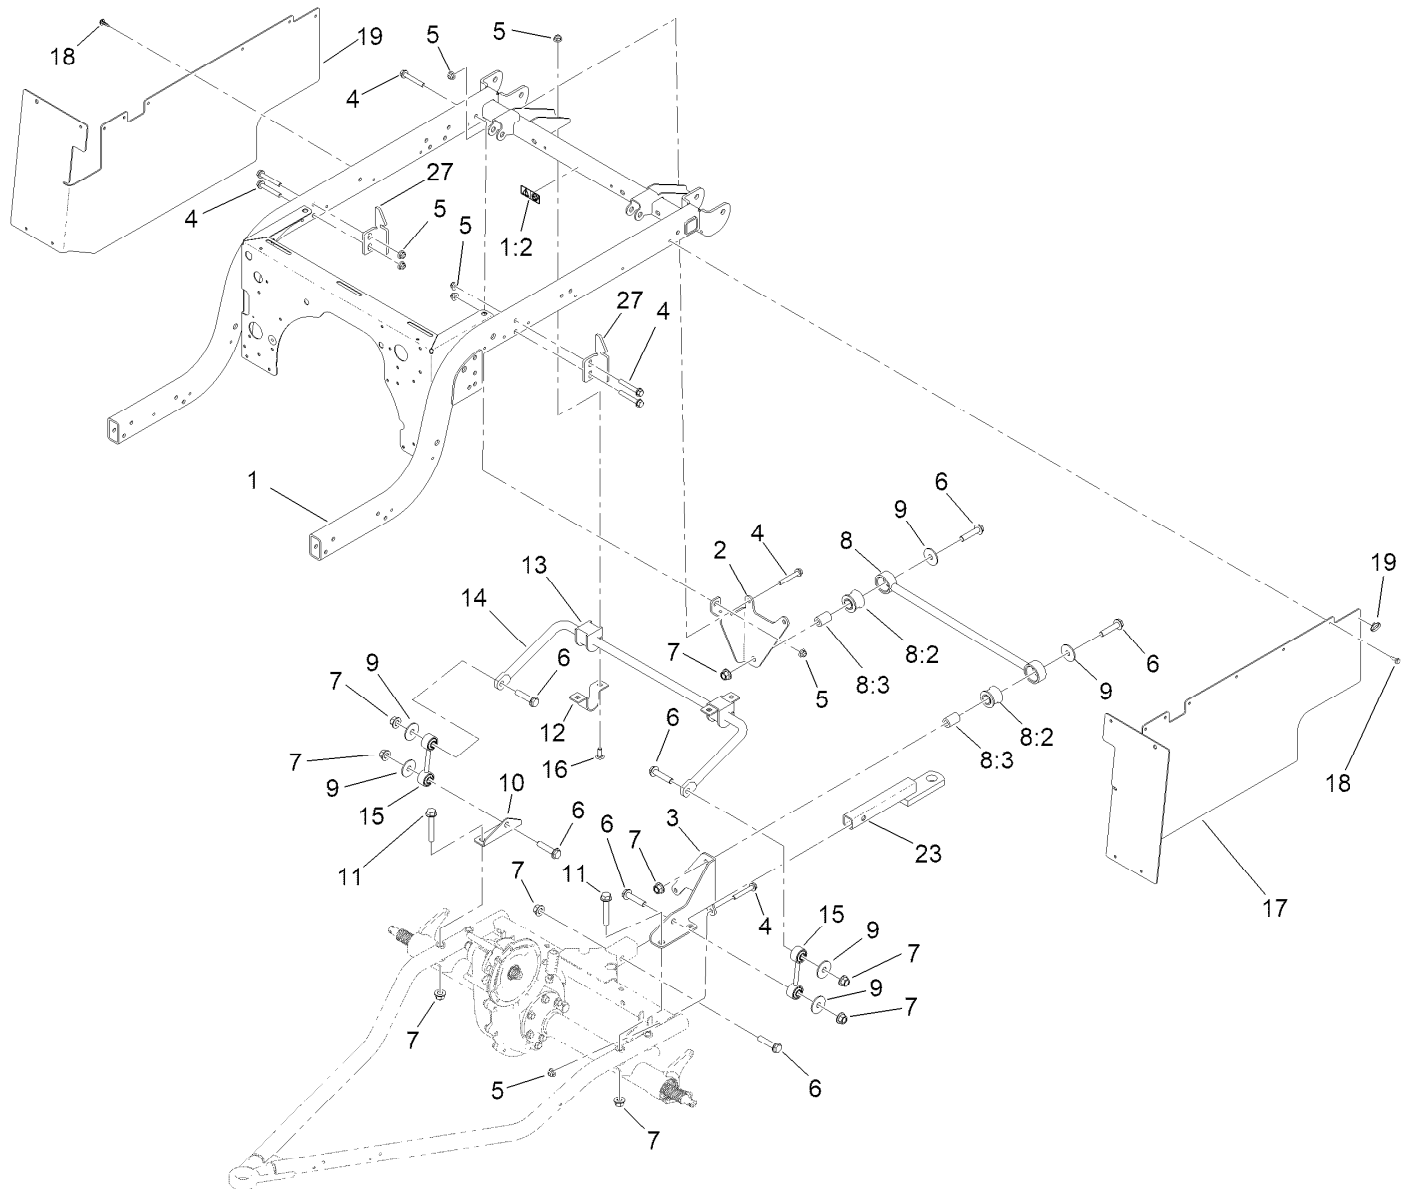

Rear Frame and Suspension Assembly


Ref.	Part Number	Qty.	Description
1	163-3902	1	Rear Frame ASM
1:2	115-2047	1	Decal-Surface, Hot
2	139-4647-03	1	Bracket-Stabilizer Bar
3	127-7411-03	1	Bracket-Bar, Stabilizer
4	3234-39	9	Screw-HHF
5	119-4042	13	Nut-HF, NI
6	3234-46	7	Screw-HHF
7	139-1689	11	Nut-HF
8	109-5013	1	Panhard Rod ASM
8:2	109-5009	2	Bushing-Suspension, Rubber
8:3	109-5010	2	Spacer
9	86-1990	6	Washer

Ref.	Part Number	Qty.	Description
10	131-8315	1	Bracket-Link, Sway Bar
11	3234-40	4	Screw-HF
12	139-4644	2	Clamp, Anti-Sway Bar
13	87-3910	2	Bushing-Rubber
14	131-8310-03	1	Bar-Sway, Anti
15	131-8394	2	Link-Bar, Sway
16	3231-22	4	Screw-CARR
17	163-3740	2	Panel-Side
18	125-9622	20	Rivet-Blind
19	3290-378	2	Tie-Cable
23	137-6741	1	Ball Mount ASM
27	127-7428-03	2	Striker-Latch, Bed

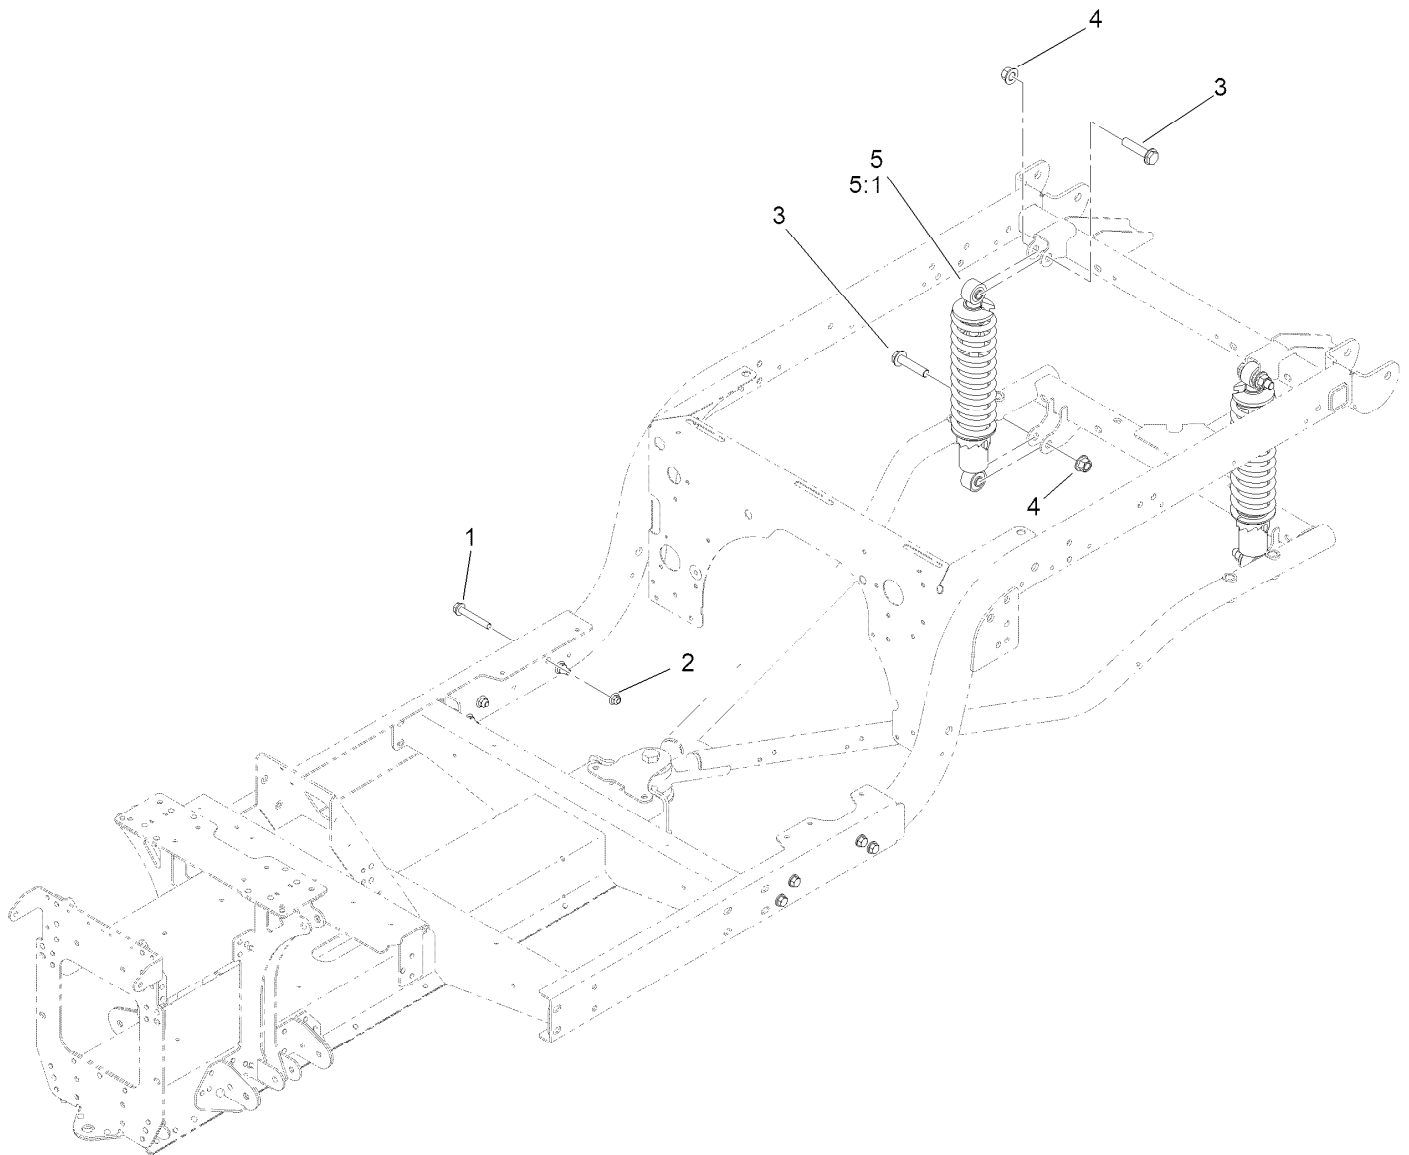

Frame Mount and Rear Shock/Spring Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3234-39	8	Screw-HHF
2	119-4042	8	Nut-HF, NI
3	3234-46	4	Screw-HHF
4	139-1689	4	Nut-HF
5	139-4607	2	Shock/Spring ASM
5:1	131-8574	2	Isolator-Shock

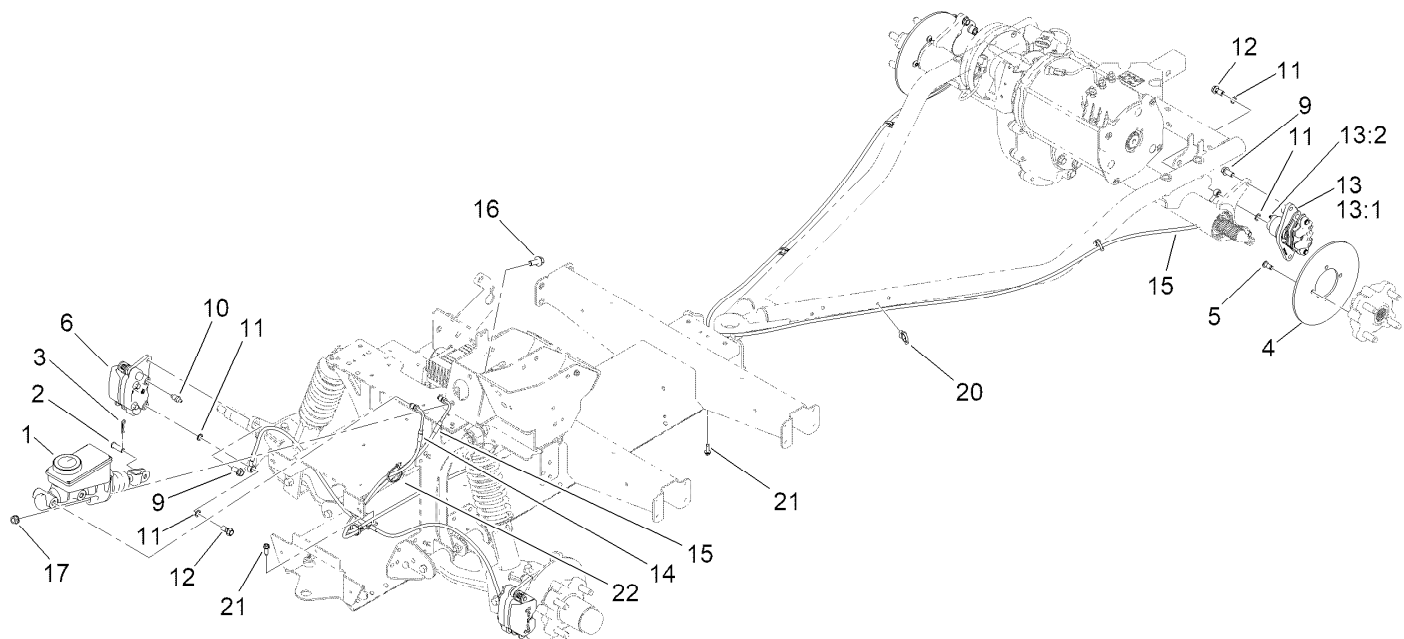


Brake Assembly

Ref.	Part Number	Qty.	Description
1	104-6782	1	Master Cylinder ASM
2	283-2	1	Pin-Clevis
3	1-806003	1	Pin-Cotter
4	139-4474	2	Rotor-Brake
5	121-9671	8	Screw-HSBH,Patch
6	161-1890	2	Brake Caliper ASM
9	144-5550	8	Screw-Spl
10	119-9509	2	Screw-Bleed
11	115-2341	8	Washer-Banjo
12	120-4875	4	Bolt-Flange, Banjo
13	145-7159	2	Brake Caliper ASM


Ref.	Part Number	Qty.	Description
13:1	140-2595	1	Brake Pad Service Kit (Rear, Qty 4)
13:2	145-7149	1	Fitting-Bleed Screw
13:3	136-6328	2	Spring-Rattle, Anti ●
14	161-5416	1	Brake Line ASM, Front
15	163-5056	1	Rear Brake Line ASM
16	3234-11	2	Screw-HHF
17	3290-357	2	Nut-HSF
20	32180-030	4	Clip-Tie
21	49-2040	2	Screw-HWHTF
22	3290-378	3	Tie-Cable

● Not illustrated

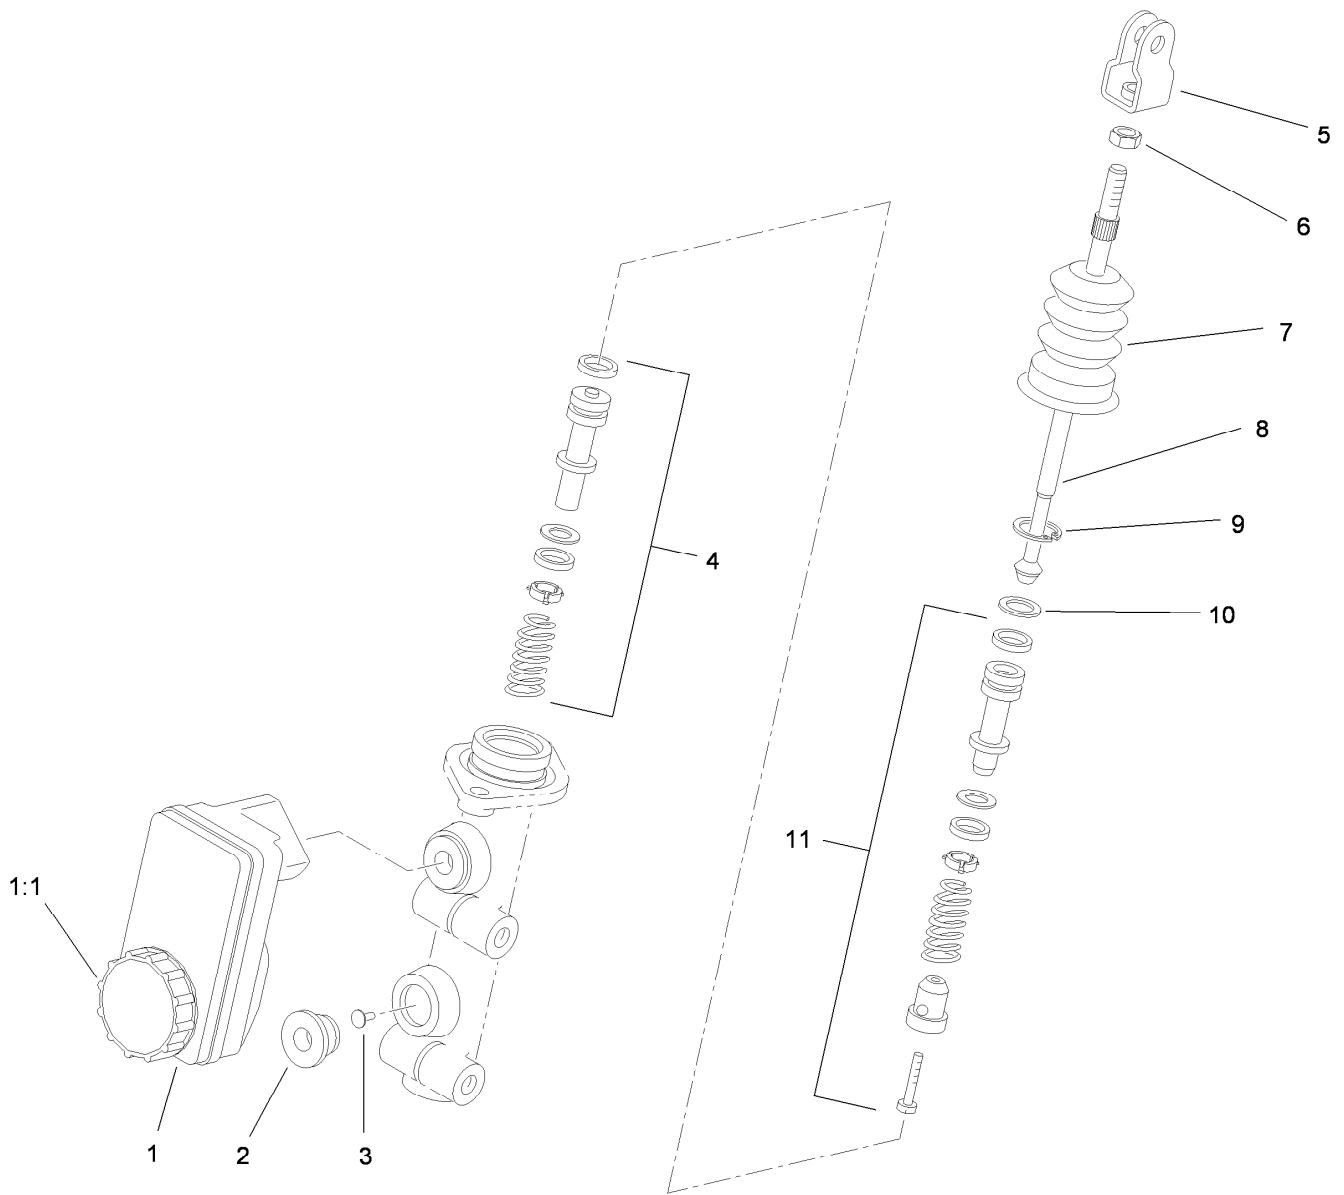


Master Cylinder Assembly No. 104-6782

Ref.	Part Number	Qty.	Description
1	104-6845	1	Reservoir ASM
1:1	92-4112	1	Cap ASM
2	93-8971	2	Seal-Port, Flange
3	92-4103	1	Pin-Stop
4	92-4102	1	Secondary Piston ASM
5	92-4110	1	Clevis
6	21-0360	1	Nut-Hex
7	94-5209	1	Cover-Dust
8	94-5210	1	Rod-Push
9	92-4109	1	Ring-Snap
10	92-4108	1	Retainer-Washer
11	92-4101	1	Primary Piston ASM

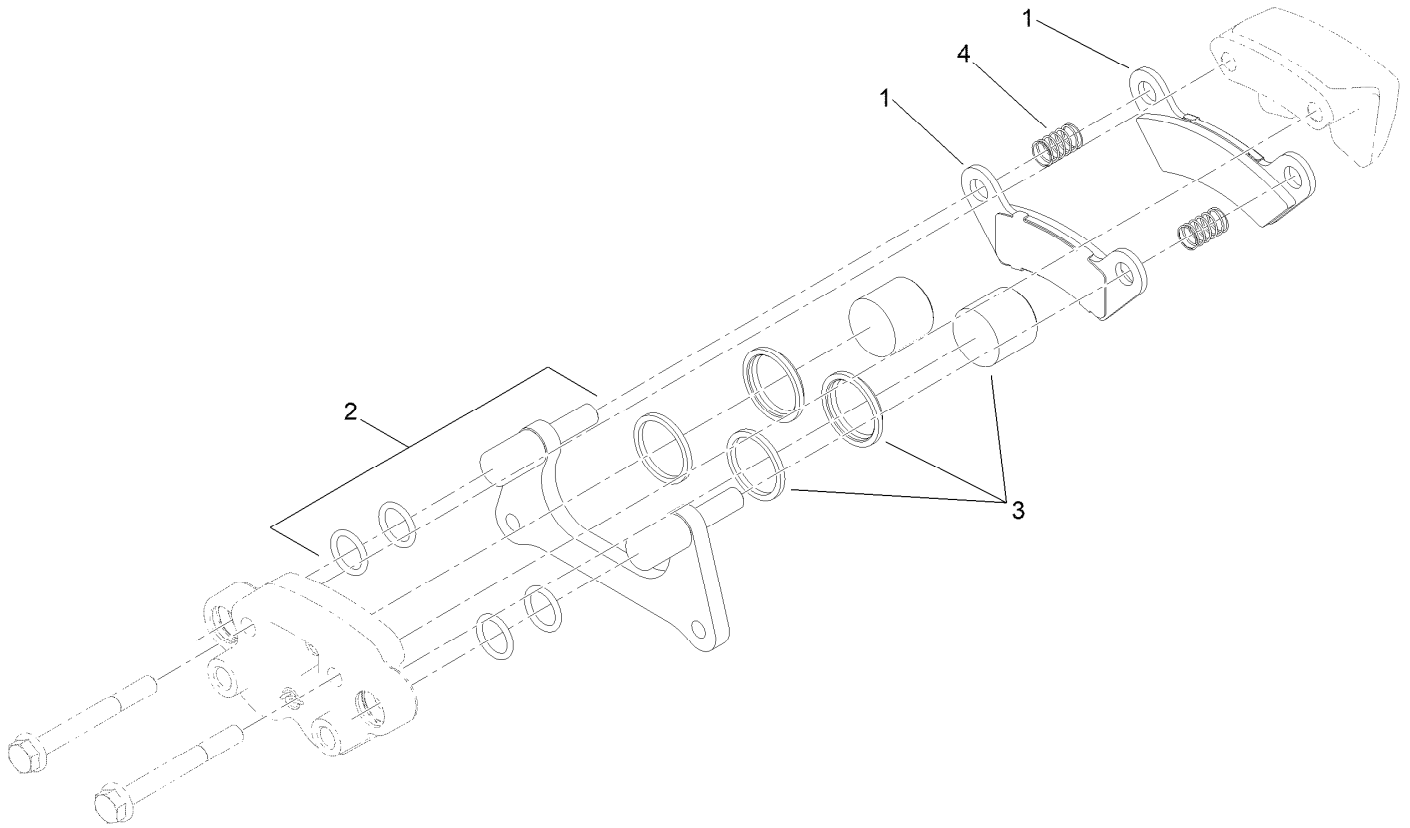

Brake Caliper Assembly No. 161-1890


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-2580	1	Brake Pad Service Kit (Front, Qty 4)
2	119-9511	1	Bracket Kit
3	133-0614	1	Piston Kit
4	161-1889	2	Spring-Compression, Service

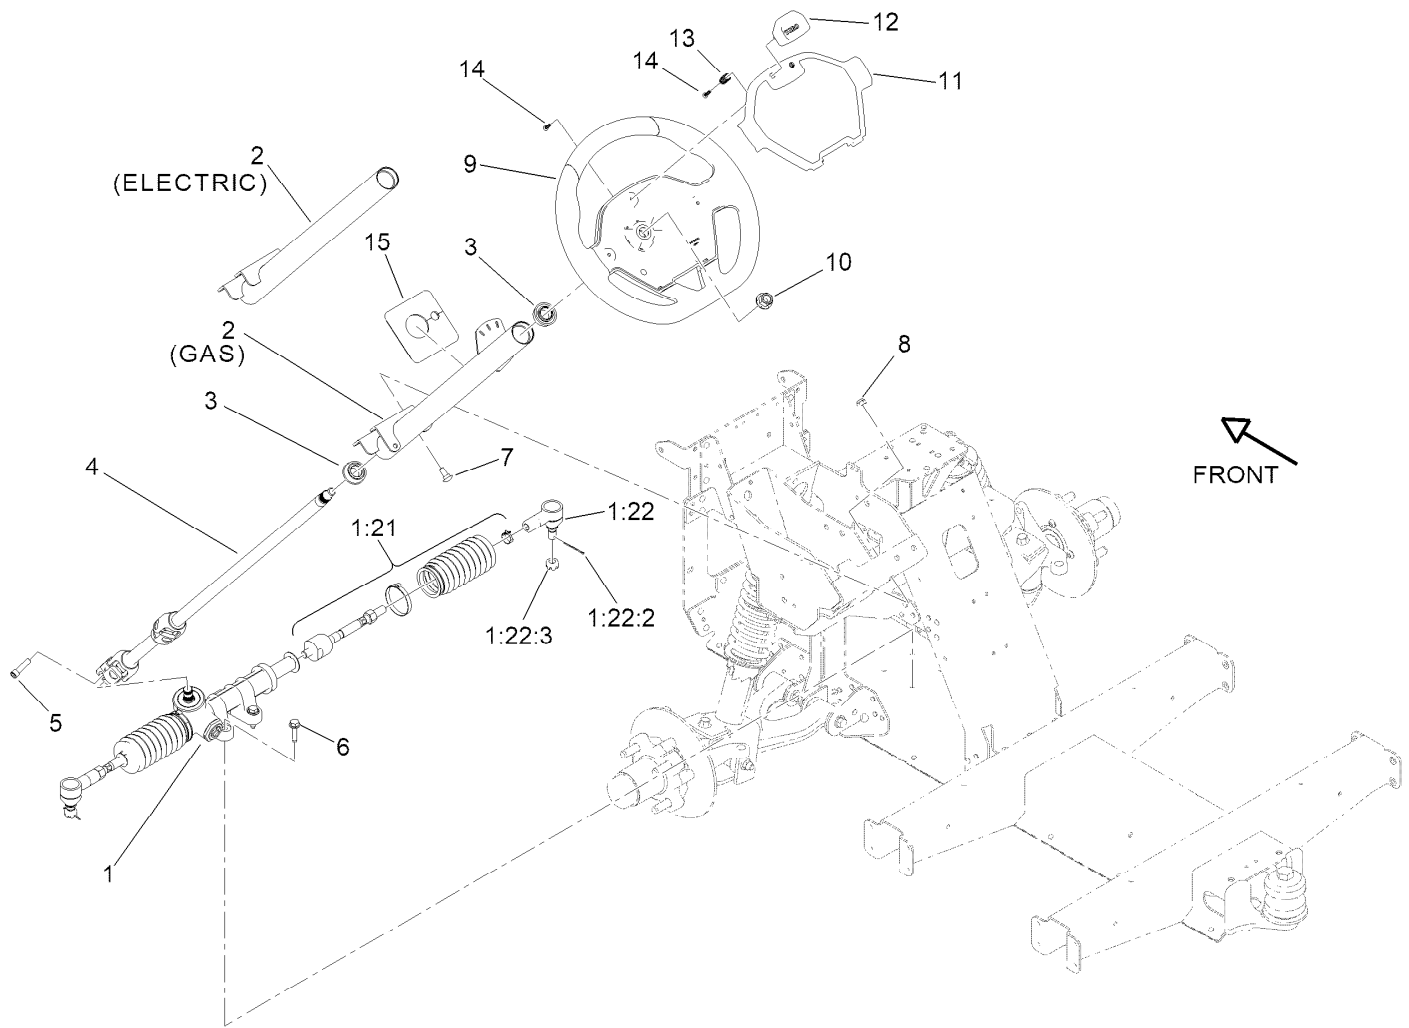

Steering Assembly


Ref.	Part Number	Qty.	Description
1	138-0114	1	Steering Rack ASM
1:21	140-4591	1	Kit-Tie Rod ASM, Gtx
1:22	140-4592	1	Kit-Rod End ASM
1:22:2	3272-42	1	Pin-Cotter
1:22:3	140-2493	1	Nut-Hex, Slotted
2	145-2056	1	Steering Column ASM, Gtx Electric
3	112-3262	2	Bearing
4	145-2050	1	Steering Shaft ASM
5	145-7145	1	Screw-HSH,Lock

Ref.	Part Number	Qty.	Description
6	32144-49	4	Screw-HWHTF
7	3230-1	4	Bolt-CARR
8	119-4041	4	Nut-HF
9	144-5570	1	Steering Wheel ASM
10	139-1689	1	Nut-HF
11	144-5567	1	Cover-Wheel, Steering
12	144-5566	1	Clip-Wheel, Steering
13	144-5537	2	Spring-Compression
14	94-4496	5	Screw-PPH
15	144-5505	1	Grommet-Column, Steering

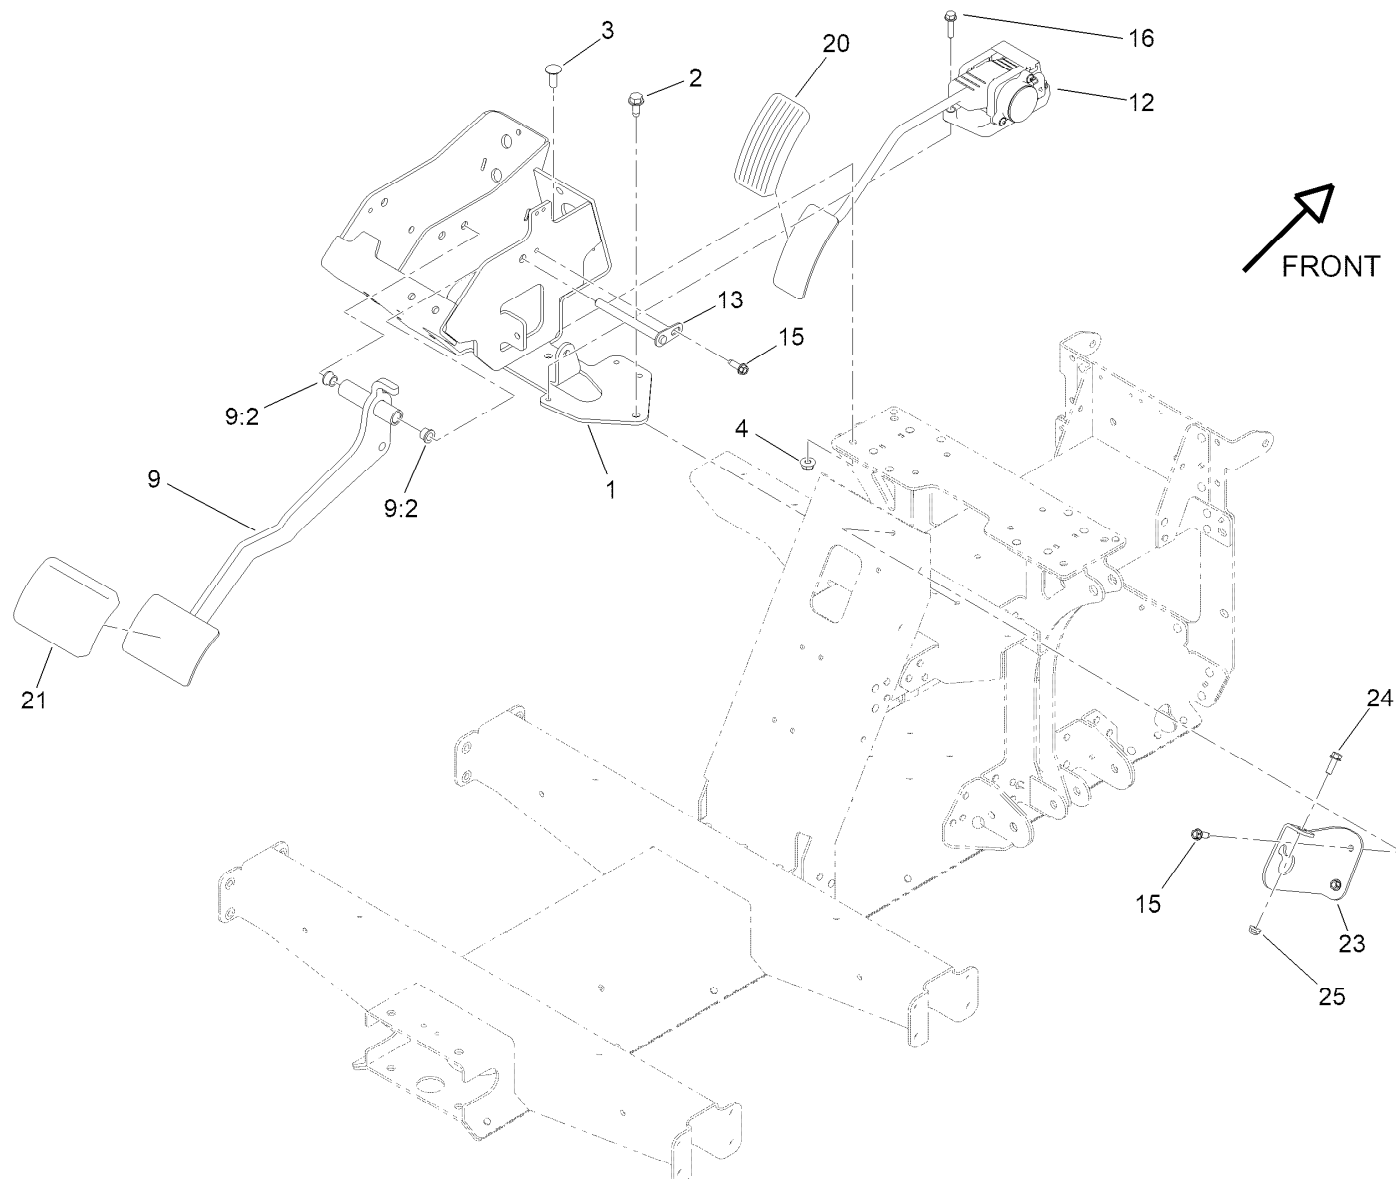

Pedal and Control Assembly


Ref.	Part Number	Qty.	Description
1	161-5480-03	1	Pedal Box Mount ASM [black]
2	32144-70	4	Screw-HWHTF
3	3230-10	1	Bolt-CARR
4	119-4041	1	Nut-HF
9	161-5486	1	Brake Pedal ASM
9:2	256-116	2	Bushing-Flange
12	161-5485	1	Throttle-Electronic
13	131-8459	1	Shaft-Pivot
15	49-2040	3	Screw-HWHTF
16	32144-86	3	Screw-HWHTF
20	140-4572	1	Pedal Pad-Throttle
21	161-5253	1	Footpad-Pedal
23	161-5279-03	1	Bracket-Mount, Shift Cable
24	115-5103	1	Screw-HHF
25	104-7201	1	Nut-HF, NI

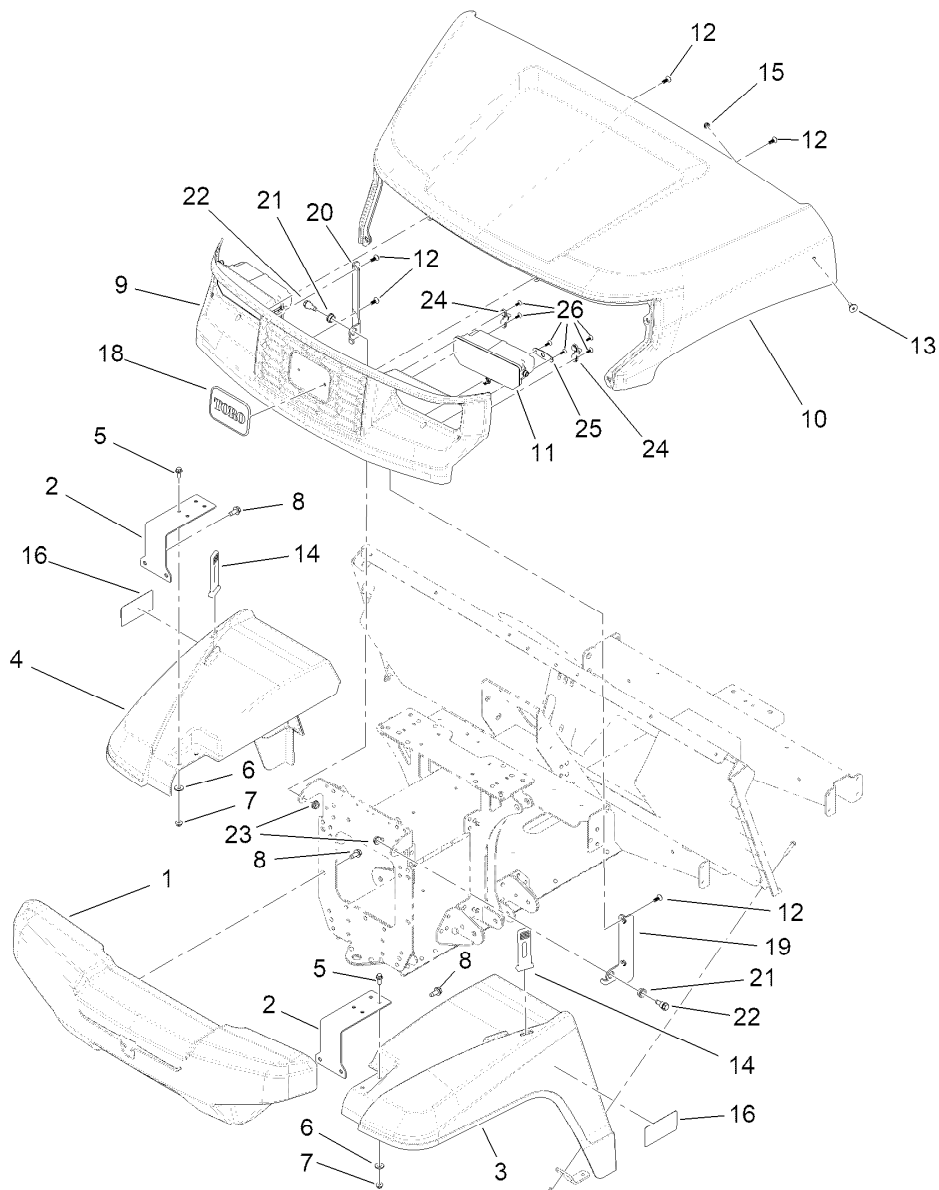

Hood and Fender Assembly

Ref.	Part Number	Qty.	Description
1	163-5190	1	Bumper-Front, Armor
2	163-5101-03	2	Bracket-Fender
3	127-7771	1	Fender-Front, LH
4	127-7772	1	Fender-Front, RH
5	3234-33	4	Screw-HHF
6	3256-2	4	Washer-Flat
7	104-7201	4	Nut-HF, NI
8	32144-70	8	Screw-HWHTF
9	163-5185	1	Grille-Front, Ltx
10	163-5195	1	Hood-Ltx
11	163-5102	2	Headlight ASM
12	138-5775	10	Screw-Delta Point
13	136-7182	2	Screw-Countersunk, Oval


Ref.	Part Number	Qty.	Description
14	131-8402	2	Strap-Down, Hold
15	3296-56	2	Nut-Lock, NI
16	163-9449	2	Emblem-Ltx, Lithium
18	144-2294	1	Emblem-Toro
19	163-5155-03	1	Bracket-Pivot, Hood [black]
20	163-5175-03	1	Bracket-Pivot, Hood [black]
21	256-156	2	Bushing-Flange
22	115-1958	2	Bolt-Shoulder
23	32128-20	2	Nut-HF
24	163-5172	4	Retainer-Headlight, Ltx
25	163-5182	2	Plate-Headlight Adjuster
26	139-3430	12	Screw-Bhf

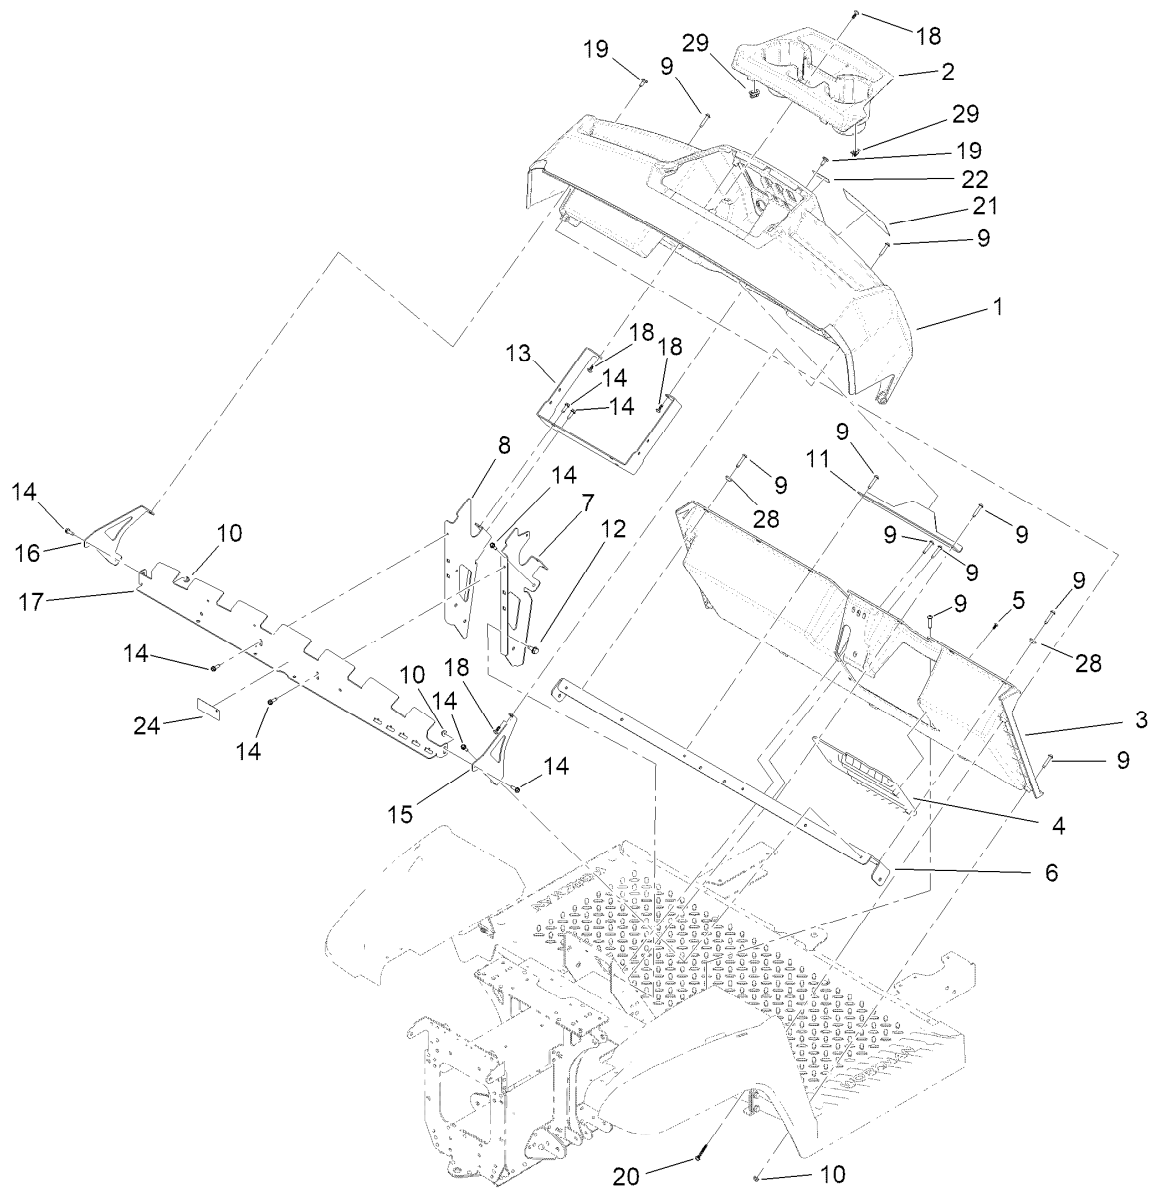

Dash Assembly

Ref.	Part Number	Qty.	Description
1	163-5088	1	Dash
2	163-5091	1	Cupholder
3	161-5491	1	Footboard-Trim
4	127-7847	1	Cover-Footboard
5	107-7461	2	Screw-Plastite
6	163-9455-03	1	Bracket-Dash, Support
7	163-5089-03	1	Bracket-Dash, LH
8	163-5090-03	1	Bracket-Dash, RH
9	132-6777	14	Screw-Twh Thd Roll
10	104-7201	4	Nut-HF, NI
11	163-5093-03	1	Bracket-Dash, Lower
12	32144-70	4	Screw-HWHTF
13	163-5092-03	1	Bracket-Dash, Upper


Ref.	Part Number	Qty.	Description
14	49-2040	12	Screw-HWHTF
15	163-5094-03	1	Bracket-Dash, Driver
16	163-5095-03	1	Bracket-Dash, Pass
17	163-5096-03	1	Support-Dash
18	138-5775	4	Screw-Delta Point
19	120-7950	2	Screw-Torx
20	137-3012	2	Screw-Plastite, HWH
21	163-9304	1	Decal-Operation, Li
22	163-9303	1	Decal-Ignition, Li
24	163-9454	1	Decal-Ltx Li Service
28	163-5097	2	Spacer-Plastic
29	140-9908	2	Clip-Trim

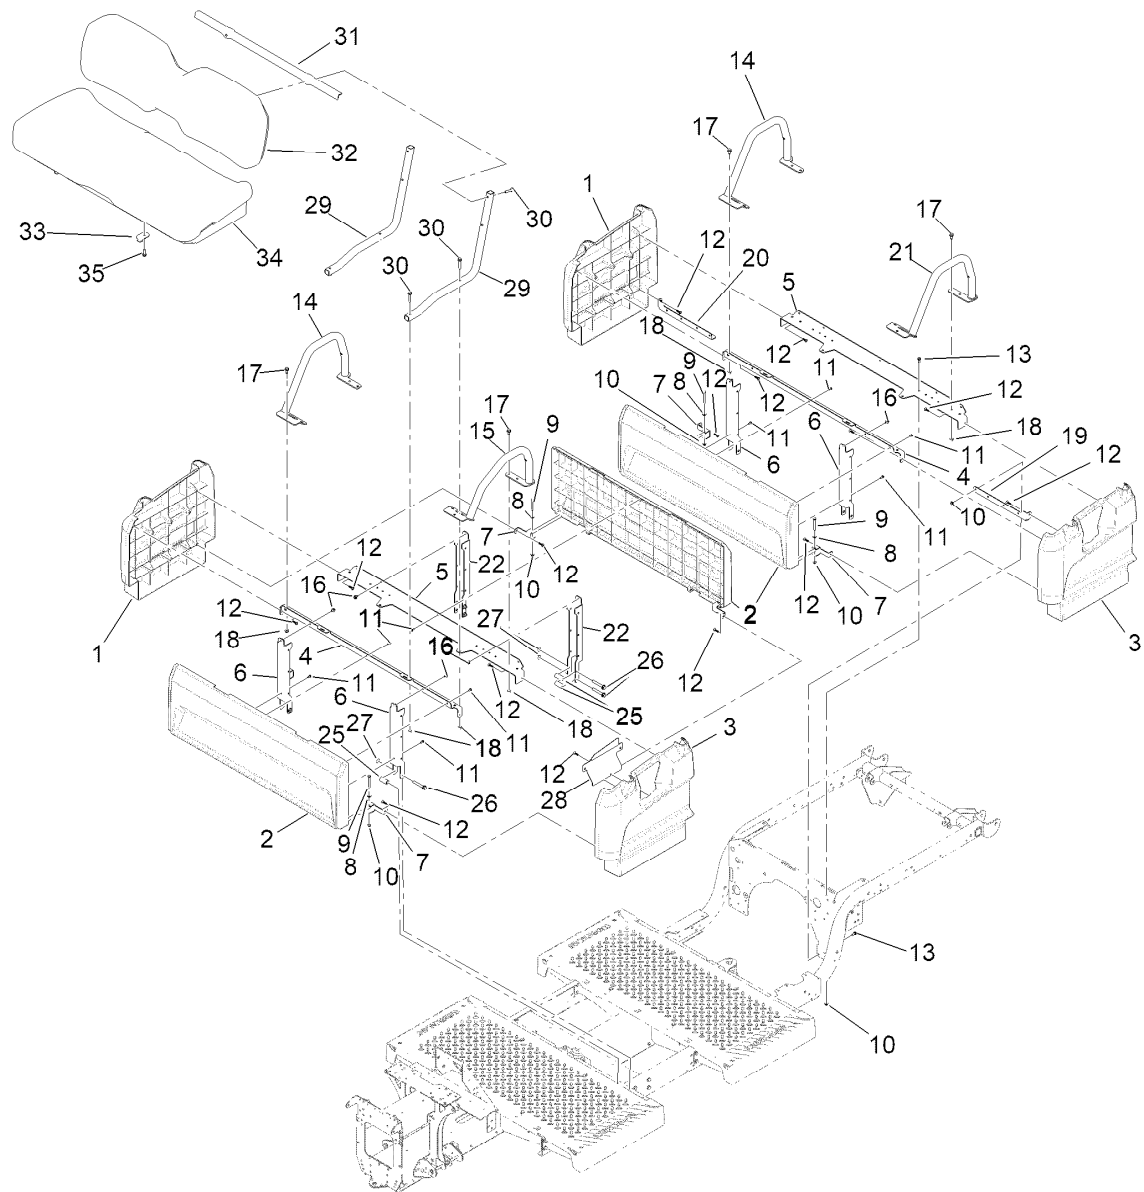

Seat Base Assembly

Ref.	Part Number	Qty.	Description
1	163-9459	2	Panel-Seatbase, RH
2	133-7188	3	Panel-Base, Seat
3	163-9460	2	Panel-Seatbase, LH
4	163-3765-03	2	Support-Front, Seat
5	163-5086-03	2	Support-Rear, Seat
6	127-7841-03	4	Channel-Support, Seat
7	127-7844-03	6	Clamp-Plate, Floor
8	3256-22	6	Washer-Flat
9	321-18	6	Screw-HH
10	104-7201	12	Nut-HF, NI
11	112-6349	13	Screw-HWH
12	120-2349	19	Screw
13	3234-33	6	Screw-HHF
14	145-2075-05	2	Hip Restraint ASM, RH
15	145-2070-05	1	Hip Restraint ASM, LH
16	46-6810	6	Screw And Washer ASM
17	32144-70	12	Screw-HWHTF


Ref.	Part Number	Qty.	Description
18	119-4041	16	Nut-HF
19	163-9430-03	1	Bracket-Support, LH
20	127-7843-03	1	Bracket-Support, Side (RH)
21	147-3613-05	1	Restraint-Hip, LH
22	131-8355-03	2	Channel-Support, Seat
25	131-8452	6	Spacer
26	3234-39	6	Screw-HHF
27	119-4042	6	Nut-HF, NI
28	131-8525-05	1	Cover-Opening
29	163-5087-05	2	Tube-Seat
30	145-7105	8	Screw-HHF
31	163-5058-05	1	Stiffener-Seat, Back
32	163-3763	1	Seat Backrest ASM
33	140-0812	2	Bracket-Hinge, Seat
34	163-3762	1	Seat Bottom ASM
35	115-5142	2	Screw-HHF, Patch

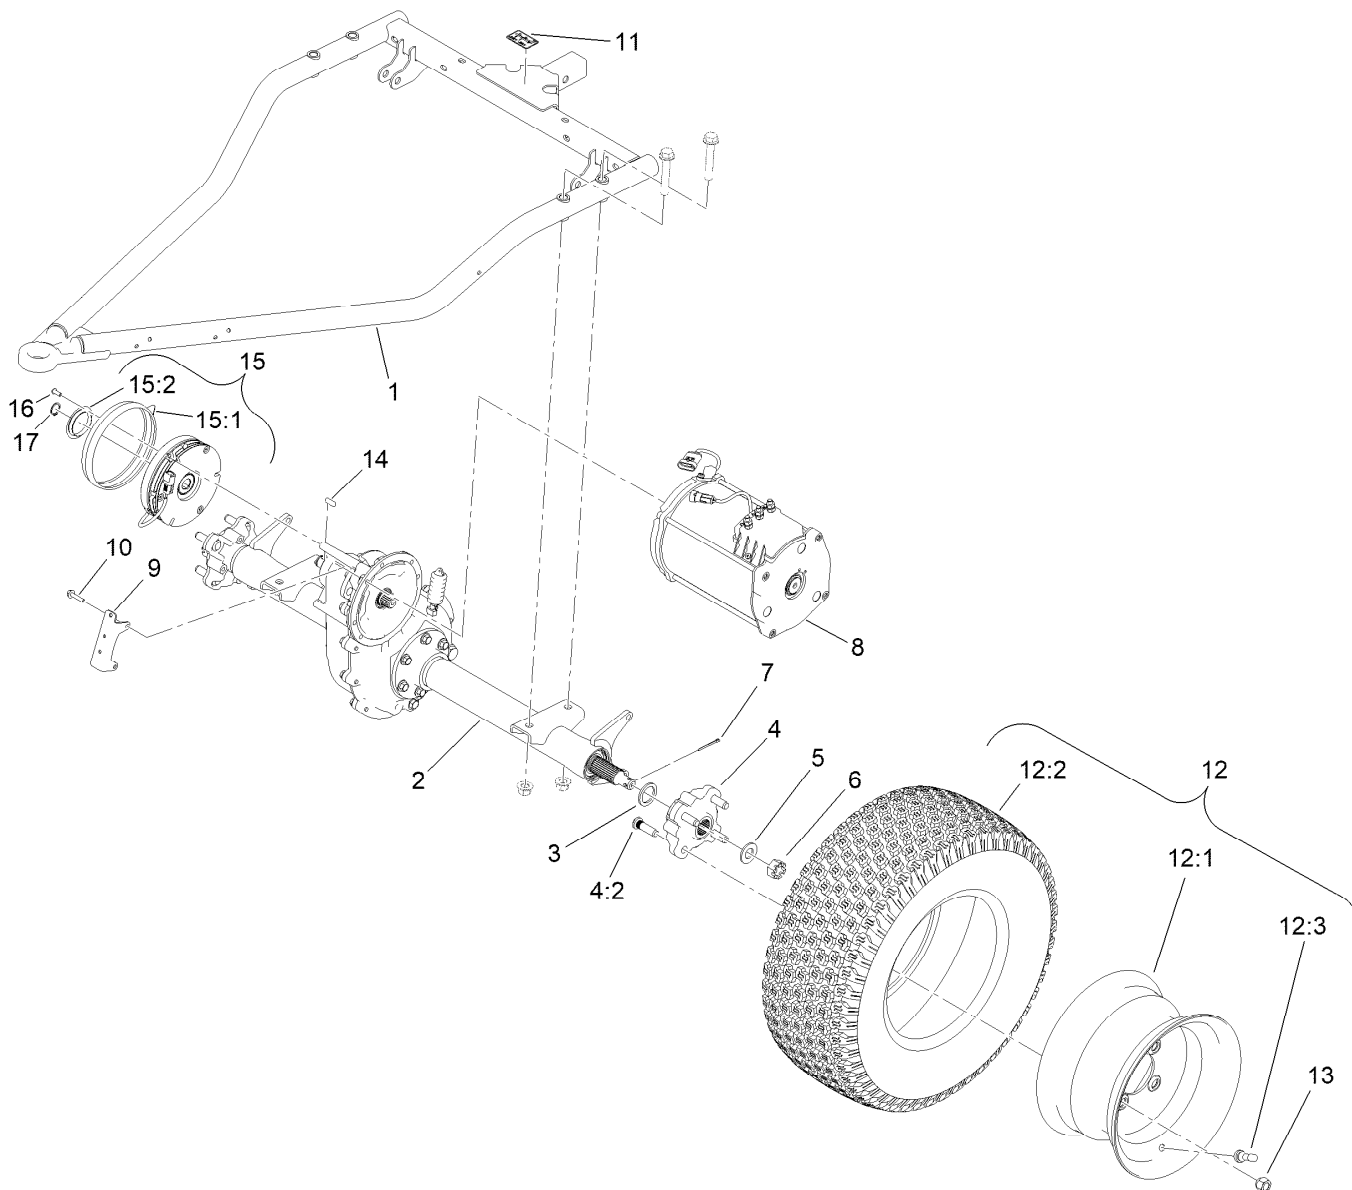

Rear Wheel and Transaxle Assembly


Ref.	Part Number	Qty.	Description
1	140-2568-03	1	Gtx-E Swing Arm ASM [black]
2	161-5295	1	Axle ASM, Electric
3	144-2444	2	Spacer-Hardened
4	145-7151	2	Rear Hub ASM
4:2	10-6830	4	Stud-Type, Drive
5	92-5836	2	Washer
6	32136-5	2	Nut-Hex, Slotted
7	1-806800	2	Pin-Cotter
8	137-6936	1	Motor-AC
9	145-8038	1	Bracket-Cable
10	33103-030	6	Screw-HHF

Ref.	Part Number	Qty.	Description
11	137-9984	1	Decal-Load, Towing
12	147-2761	2	Wheel And Tire ASM
12:1	147-2762	1	Wheel
12:2	139-4475	1	Tire-20 X 8.00-10
12:3	232-27	1	Stem-Valve
13	139-2564	8	Nut-Lug
14	145-7163	1	Key-Square
15	145-7061	1	Brake-Electric
15:1	145-7184	1	Dust Cover
15:2	145-7186	1	End Cap
16	145-7164	3	Screw-HSBH
17	32120-15	1	Ring-Snap, EXT

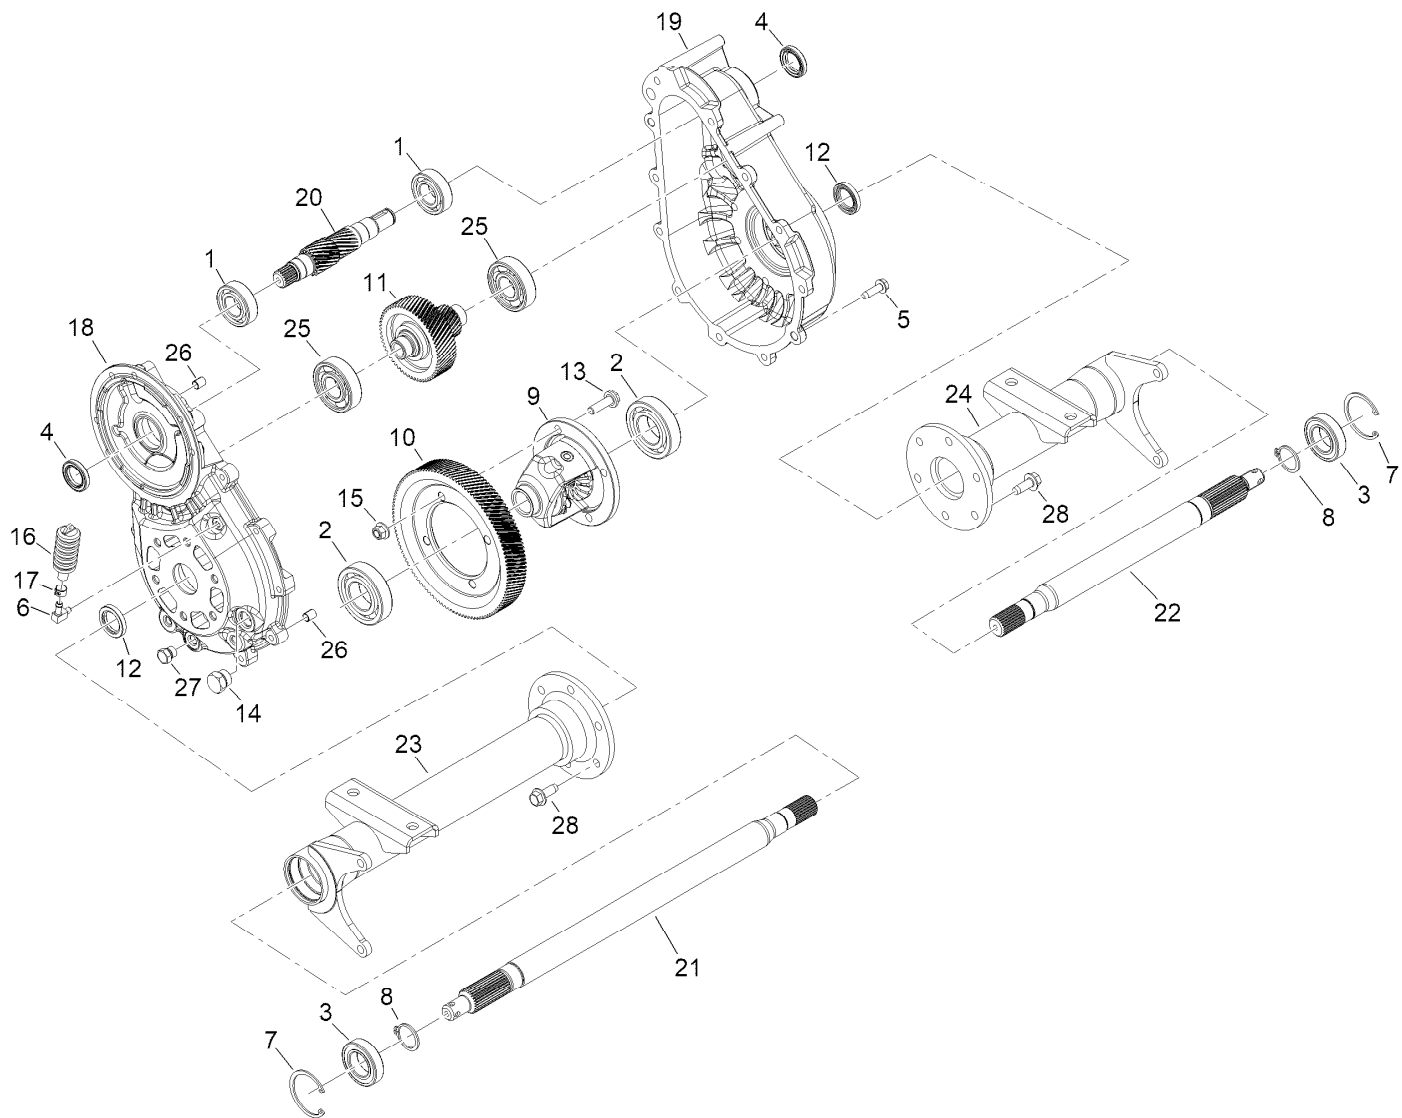


Transaxle Assembly No. 161-5295

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	145-7286	2	Bearing, Ball, Single Row, 6205	12	145-7293	2	Seal, Oil, 25 MM Shaft, 1.499 Bore
2	145-7287	2	Bearing, Ball, Single Row, 6207	13	133-2462	4	Bolt-HHF
3	147-4094	2	Bearing, Ball, Single Row, 6006-2Rs, Sealed	14	145-7319	1	Plug, Hex Head, 3/4-16 Strt Thr, O-Ring
4	145-7289	2	Seal, Oil, .945 Shaft, 1.499 Bore	15	133-2463	4	Nut-Lock
5	147-4095	12	Screw, Hex Head, 5/16-18, Thread Forming	16	145-7294	1	Vent, Bellows
6	147-4096	1	Tube, Vent	17	145-7295	1	Clamp, Hose
7	147-4098	2	Ring, Retaining, Internal, 55MM Bore	18	161-1800	1	Housing, Motor Side
8	163-3718	2	Ring-Retaining, External, 30MM Shaft	19	161-1801	1	Housing, Cover, E-Brake
9	147-4099	1	Assembly, Differential Case, Heavy Duty	20	145-7298	1	Shaft, Input, 18T
10	145-7291	1	Gear, Helical, Output, Finish, 116T	21	163-9448	1	Shaft-Axle
11	145-7292	1	Assembly, Shaft And Gear, Intermediate	22	161-2043	1	Shaft-Axle
				23	163-9447	1	Tube Assembly, LH
				24	163-9446	1	Tube Assembly, RH
				25	145-7299	2	Bearing, Ball, Single Row, 6305
				26	145-7301	2	Bushing, Dowel, .313 X .500
				27	145-7302	1	Drain Plug, Magnetic, O-Ring, 1/2-20
				28	161-1806	12	Screw, Flange Head, 3/8-16 X 1.00

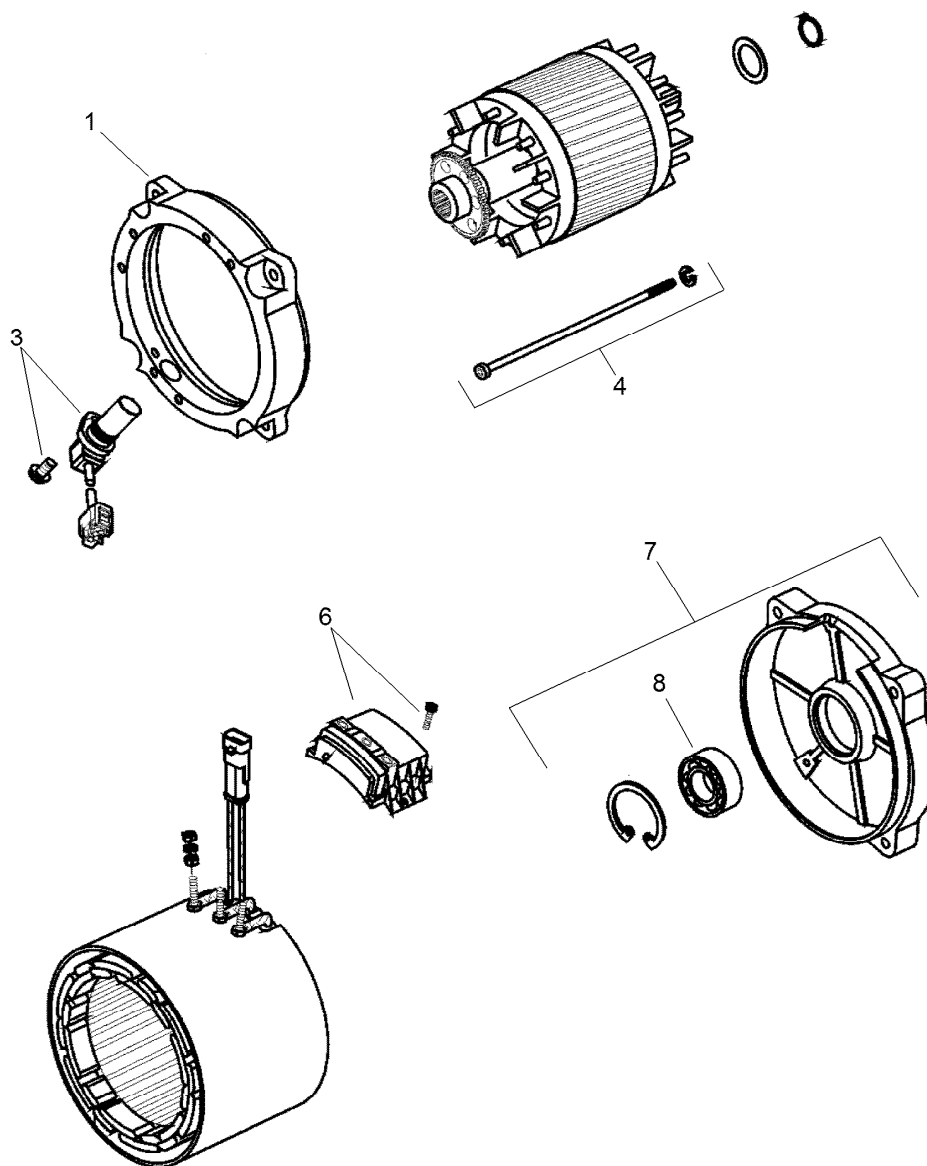

Electric Motor Assembly No. 137-6936

Ref.	Part Number	Qty.	Description
1	132-4924	1	Bracket-End, Drive
3	132-4925	1	Sensor
4	132-4926	1	Screw
6	132-4927	1	Plate-Connection
7	132-4928	1	Bracket-End, Rear
8	132-4929	1	Bearing

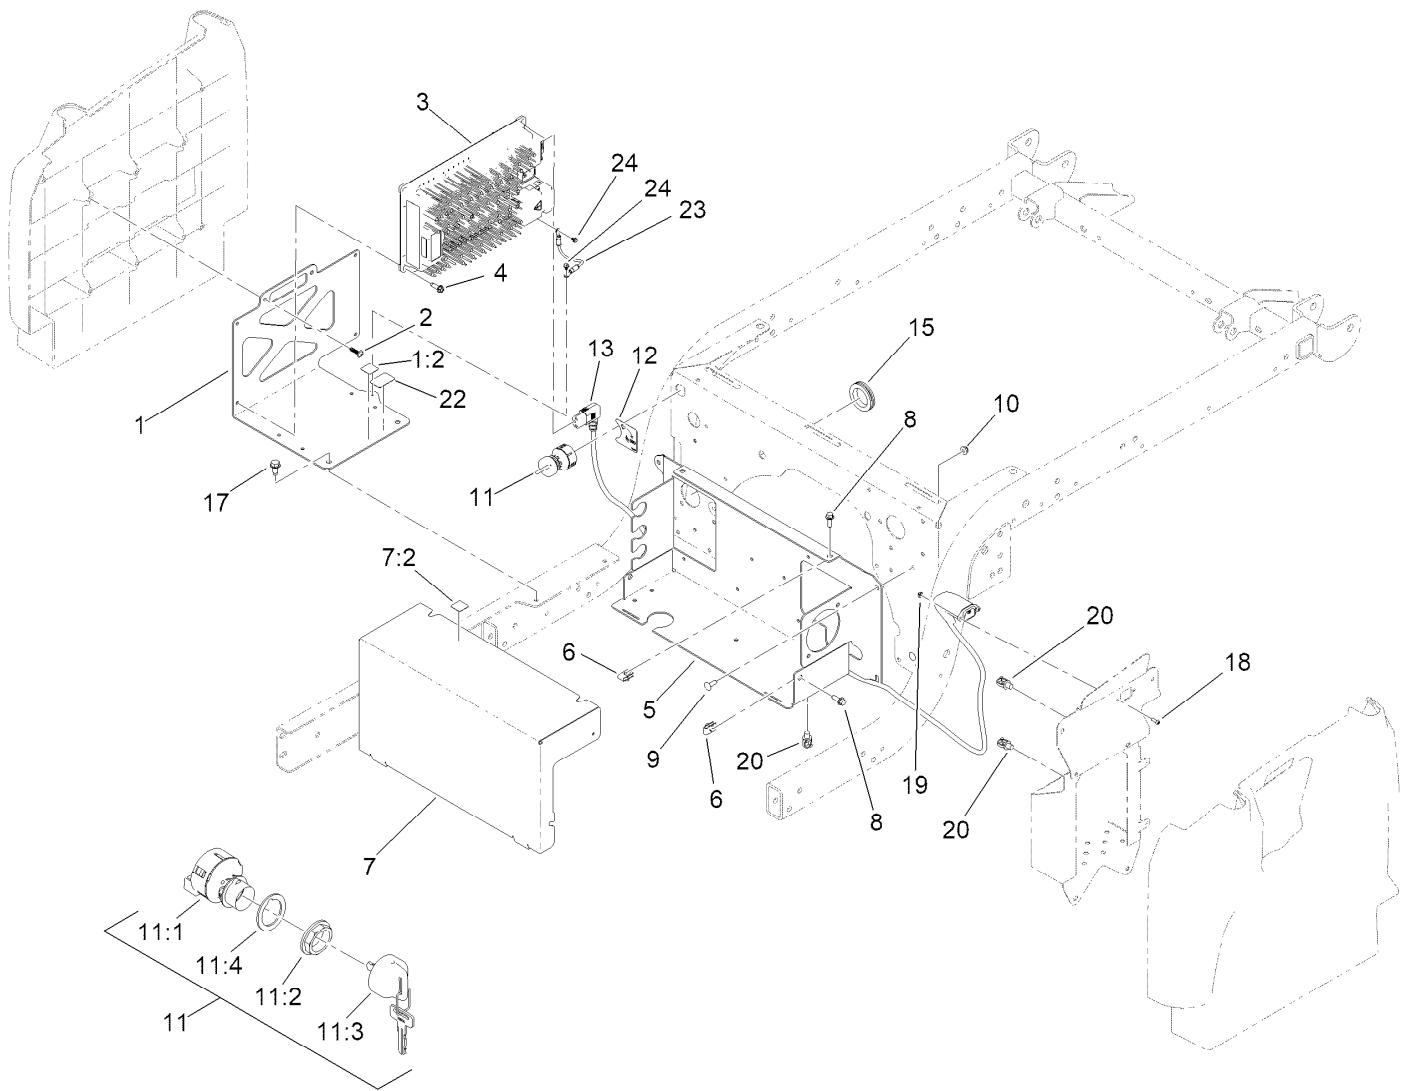


Onboard Charger Assembly

Ref.	Part Number	Qty.	Description
1	147-8213	1	Bracket-Charger
1:2	145-7345	1	Decal-Voltage, High
2	120-2349	2	Screw
3	144-5475	1	Charger-Onboard, 900W
3:1	140-2494	1	Charger Kit-Service ●
4	49-2040	4	Screw-HWHTF
5	163-9456-03	1	Bracket-Electrical
6	107069	4	Clip
7	147-8214	1	Cover-Front
7:2	145-7345	1	Decal-Voltage, High
8	120-9678	4	Screw-HHF
9	1-807512	4	Bolt-CARR
10	104-7201	4	Nut-HF, NI
11	110-2580	1	Switch-Key, Supervisor
11:1		1	Switch-Key ■

Ref.	Part Number	Qty.	Description
11:2	108-8660	1	Nut-Mounting
11:3	110-5221	1	Set-Key, Supervisor
11:4	108-8659	1	Washer-Backup
12	131-8527	1	Decal-Mode
13	140-4628	1	Cordset W/Filter
15	240-7	1	Grommet-Rubber
17	32144-70	2	Screw-HWHTF
18	3250-26	2	Screw-PPH
19	3296-54	2	Nut-Lock
20	32180-030	5	Clip-Tie
22	147-8205	1	Decal-Fuse 60V
23	122-2792	1	Harness-Wire, Charger Bonding
24	161-1826	2	Screw-Ground

● Not illustrated


■ Not serviced separately

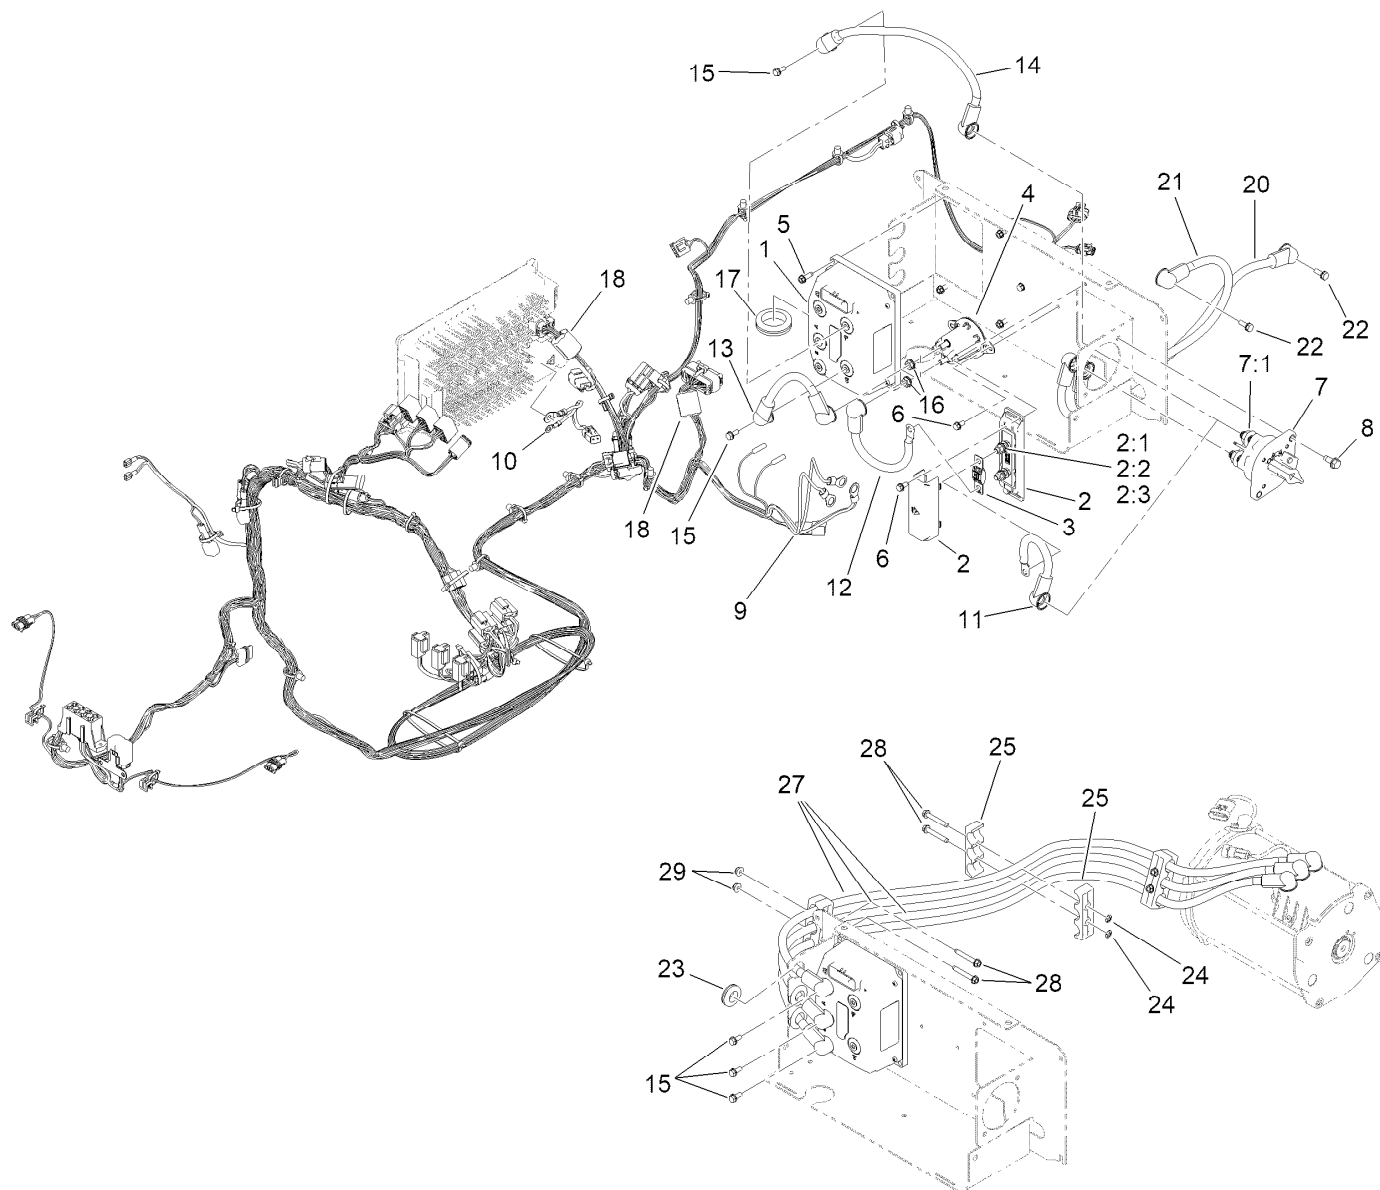

Inverter Assembly

Ref.	Part Number	Qty.	Description
1	145-5050	1	Inv/Ctrlr-48V,185Arms
2	161-6249	1	Holder-Fuse
2:1	136-8682	4	Washer-Lock
2:2	3256-74	8	Washer-Flat
2:3	117-4059	4	Nut-Hex
3	122-2561	1	Fuse-200A
4	122-2616	1	Contactora-Powerseal
5	49-2040	4	Screw-HWHTF
6	32144-4	4	Screw-HWH
7	122-0603	1	Switch-Disconnect
7:1	33006-00	1	Nut-HF
8	32144-70	2	Screw-HWHTF
9	122-3872	1	Harness-Wire, Main
10	122-2375	1	Harness-Wire, Charger Power Interface
11	147-8223	1	Cable-Battery,Rd ASM
12	147-8224	1	Cable-Battery,Rd ASM

Ref.	Part Number	Qty.	Description
13	147-8225	1	Cable-Battery,Rd ASM
14	147-8226	1	Cable-Battery,Bk ASM
15	145-5782	5	Screw-Sems
16	107-0380	2	Nut-HF
17	110-5090	1	Grommet
18	147-8183	2	Ferrite, Snap-On
20	147-8221	1	Cable-Battery,Rd ASM
21	147-8222	1	Cable-Battery,Bk ASM
22	145-5783	2	Screw-Sems
23	240-6	3	Grommet-Rubber
24	32115-15	2	Nut-Push
25	145-7166	6	Clamp-Cable
27	145-8045	3	Cable-Battery,Rd ASM
28	92-1616	6	Screw-HWHTF
29	104-7201	2	Nut-HF, NI

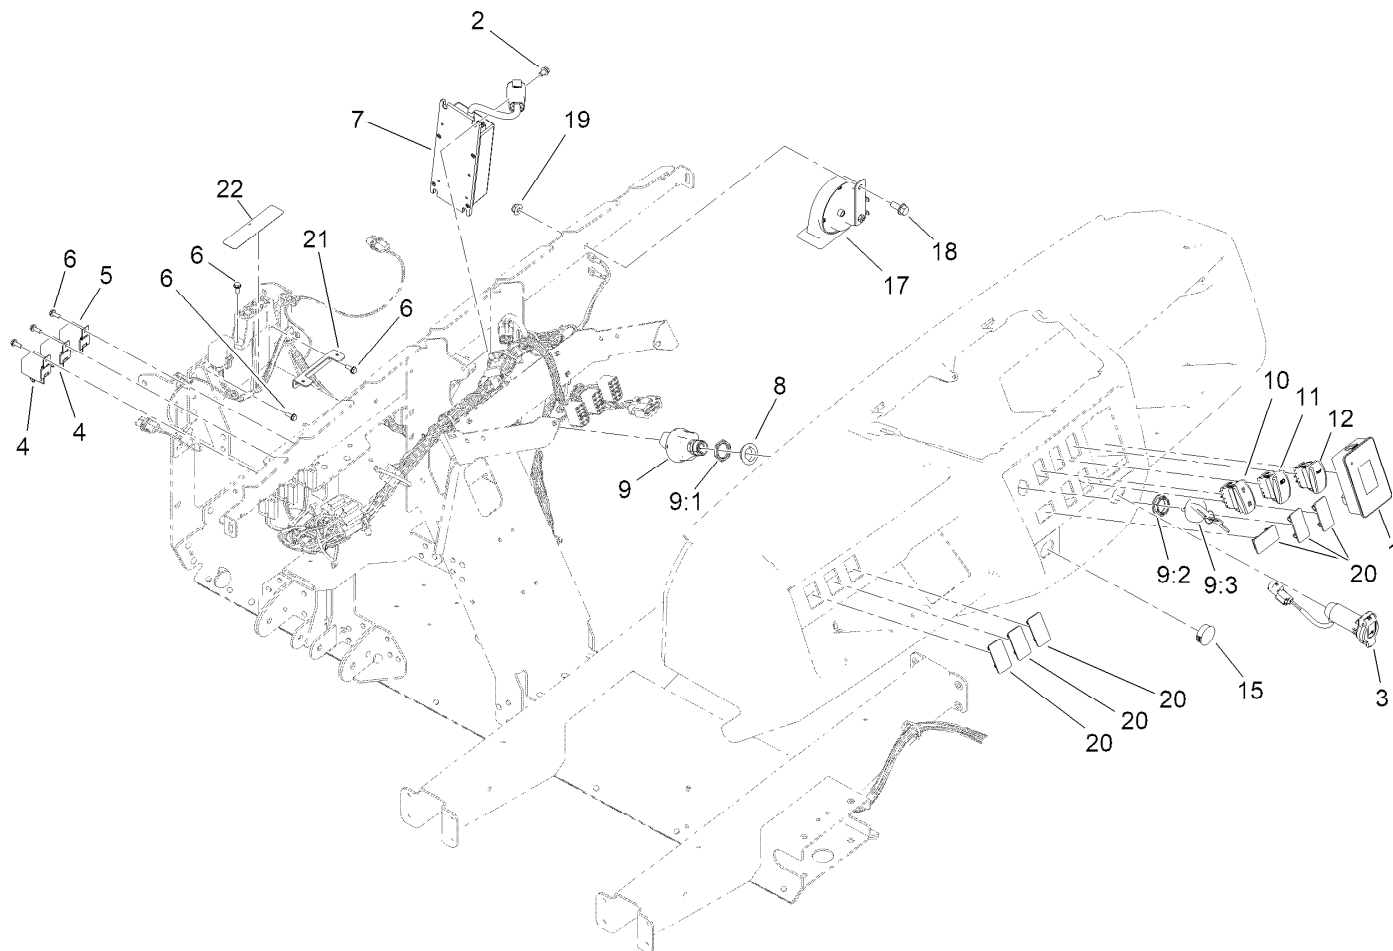

Controller/Converter and Horn Assembly

Ref.	Part Number	Qty.	Description
1	122-2152	1	Controller, Tdm-1601
2	99-8445	2	Screw-HWH
3	163-9341	1	Socket-USB
4	122-2401	2	Relay, 48V Coil, 50A At 48V
5	122-3199	1	Relay - Dg57CM
6	32144-1	9	Screw-Taptite
7	144-6975	1	Converter DC-DC
8	145-7110	1	Adapter-Switch, Key
9	122-2513	1	Switch-Ignition, Suns
9:1	121-5160	1	Nut-Hex
9:2	122-2704	1	Nut-Face, M22 (Plastic)
9:3	121-5162	1	Set-Key, Ignition
10	122-2654	1	Switch-Rocker, On-None-On

Ref.	Part Number	Qty.	Description
11	144-2405	1	Switch-Rocker, On-None-On
12	144-2415	1	Switch-Rocker, (On)-None-Off
13	107-0382	1	Powercord-AC, Europe ●
13	107-0383	1	Powercord-AC, U.K. ●
13	163-3725	1	Powercord-AC, Us ●
15	145-2160	1	Plug-Panel
17	107-0358	1	Horn
18	3234-5	1	Screw-HHF
19	119-4041	1	Nut-HF
20	99-7420	6	Plug-Hole
21	145-8046	1	Bracket-Fuse Block
22	147-8184	1	Decal-Fuse Block 12V/60V

● Not illustrated

Attachments and Accessories

For 07425EX — Workman LTX Lithium Extended Utility Vehicle

Product Name	Model/Part
Trash Can Mounting Kit	07028
Bed Rack Kit.....	07031
Cargo Bed Kit	07046
Cab Kit.....	07142
Extended Bed Kit	07149
Door Kit.....	07150
Canopy W/ ROPS.....	07169
Workman GTX 60v Electric Lift Kit.....	07170
Steel Bed Side Kit.....	07180
Rear Attachment Receiver, Workman GTX Series Utility Vehicle with Steel Cargo Bed	07186
Canopy Mount Kit, Workman GTX Utility Vehicle with Extended Flatbed	07199
Steel Cargo Bed Base	07450
Steel Cargo Bed Solid Sides Kit.....	07451
Workman GTX 2-Person Canopy	07921
Workman GTX 4-Person Canopy	07922
Folding Windshield Kit, Workman GTX Utility Vehicle with Canopy	07923
Center Bed Racking - GTX	08147
Side Bed Racking, Workman UTX/MDX/GTX.....	08148
Powercord-AC, Europe.....	107-0382
Powercord-AC, U.K.	107-0383
Tire-20 8.00-10	116-7333
Exterior Mirror Kit.....	130-5448
Interior Mirror Kit.....	130-5449
Beacon Kit	130-5484
Work Light Kit	130-5485
Windshield Washer Fluid Kit, 2015 and after Workman MD/HD Series Utility Vehicle	130-5615
Tire/Wheel Asm	131-8319
Reverse Alarm Kit.....	131-8549
Wide Angle Mirror Kit, Utility Vehicle with Canopy.....	133-1009
Wide Angle Mirror Kit.....	133-1038
Cab Mount Kit, Workman GTX Utility Vehicle with Extended Flatbed	133-7198
Door Mount Mirror Kit.....	136-1997
Small Bedrack Mount Grip Kit.....	136-6311
Large Bedrack Mount Grip Kit.....	136-6312
Universal Wireless Hourmeter Kit	144-2436
Battery ASM	145-5385
Kit - Power Converter.....	147-8181
Energy Expansion Kit	147-8220
Ram Ball Mount Kit	163-9494
Tire	94-5236

Notes:

Notes:



Count on it.