



Count on it.

Parts Catalog

**Workman® UTX
2 Passenger Utility Vehicle**

Model No. 08100—Serial No. 418000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.


Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents


Frame and ROPS Assembly	4
Front Suspension Assembly	6
Front Control Arm Assembly No. 145-7771	7
Rear Suspension and Subframe Assembly	8
Pedals and Controls Assembly	10
Steering Assembly	11
Brake Assembly	12
Master Cylinder Assembly No. 104-6782	13
Brake Caliper Assembly No. 127-7424	14
Hood and Front Fender Assembly	15
Dash Assembly	16
Seat Base Assembly	17
Cargo Bed Assembly	18
Cargo Bed Kit Assembly	19
Electrical Assembly	20
Battery Assembly	22
Engine Drivetrain and Exhaust Assembly	23
Engine, Transaxle and Clutch Assembly	24
Transaxle Assembly No. 140-2611	25
Secondary Clutch Assembly No. 147-8173	26
Primary Clutch Assembly No. 147-8172	27
Front Differential and Driveshaft Assembly	28
Front Differentail Assembly No. 140-4752	29
Intermediate Driveshaft Assembly No. 140-4771	31
Driveshaft Assembly No. 140-2647	32
Cooling System Assembly	33
Radiator Assembly No. 161-5206	34
Fuel System Assembly	35
Air Cleaner Assembly	36
Air Cleaner Assembly No. 106-5277	37
Hose Intake Assembly No. 145-2118	38
Cylinder Block Assembly	39
Crankshaft and Piston Assembly	40
Camshaft and Rocker Arm Assembly	41
Cylinder Head Assembly	42
Timing Cover Assembly	43
Intake Manifold Assembly	44
Exhaust Manifold Assembly	45
Oil Pan Assembly	46
Oil Pump Assembly	47
Water Pump Assembly	48
Starter Assembly	49
Alternator Assembly	50
Rear Plate Assembly	51
Ignition Assembly	52
Throttle Body Assembly	53
Coolant Plug Assembly	54
Coolant Inlet Assembly	55
Electrical Assembly	56
Flywheel Assembly	57
Attachments and Accessories	58

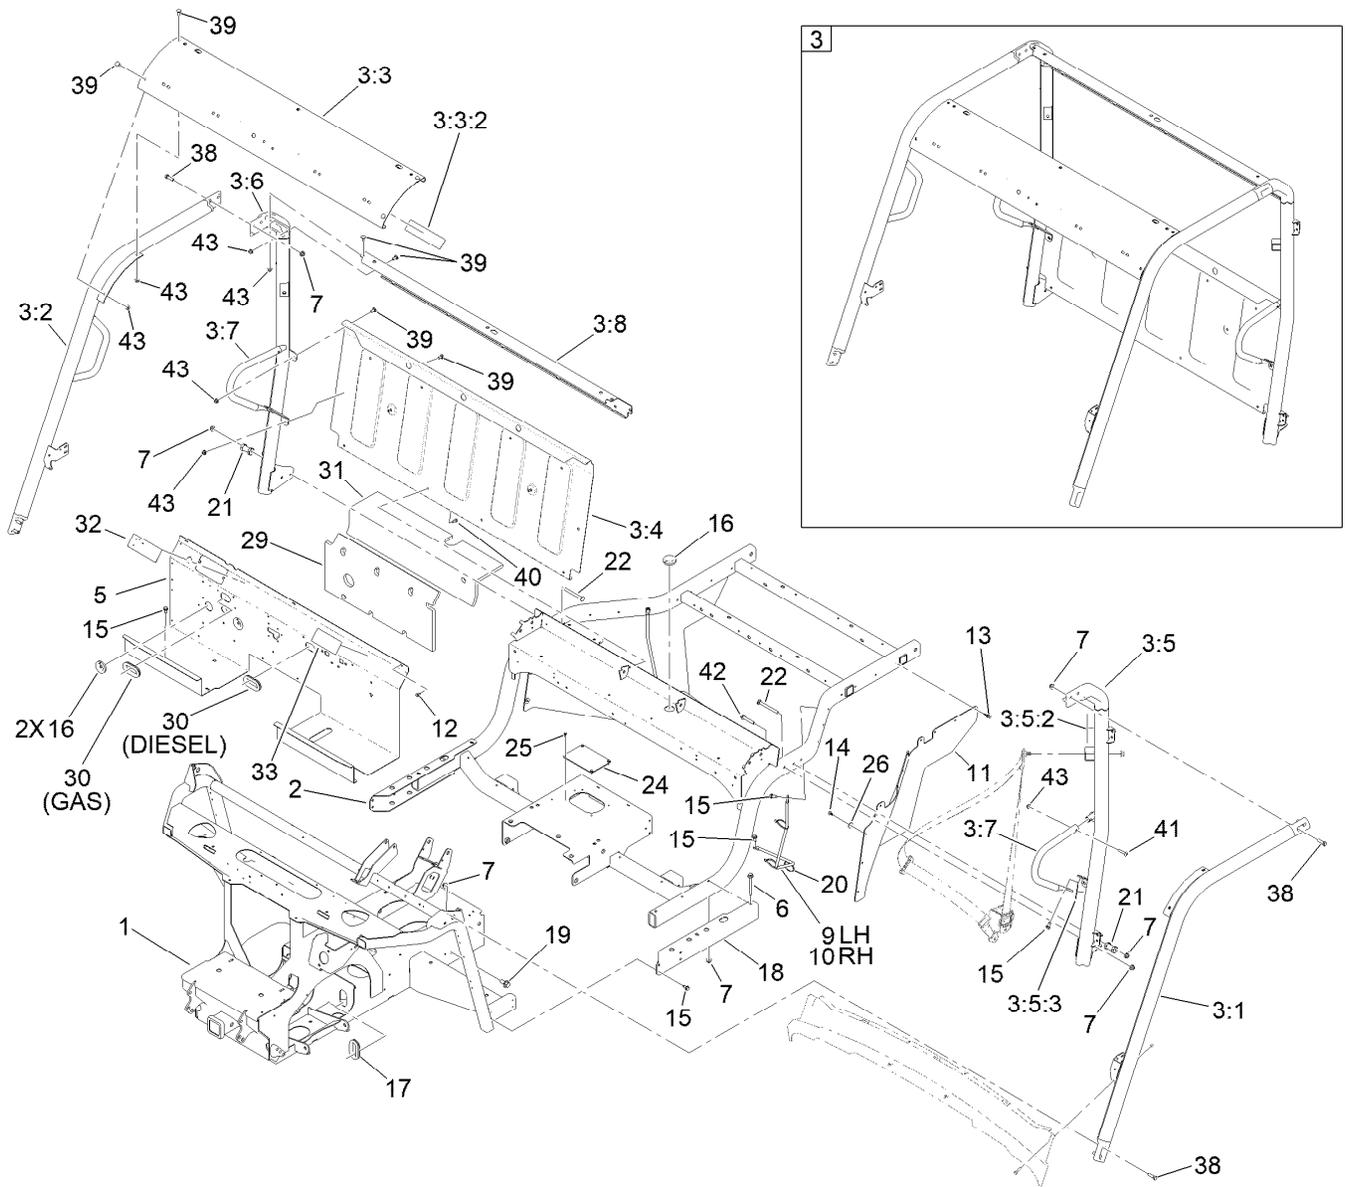

Frame and ROPS Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	147-8107	1	Front Frame ASM (2 Passenger)	9	139-3432	1	Support-Skirt, LH Side
2	147-8106	1	Rear Frame ASM	10	139-3433	1	Support-Skirt, RH Side
3		1	Standard ROPS Kit ●	11	147-2825	2	Skirt-Side
3:1	137-2737	1	Front ROPS ASM-LH	12	32144-4	3	Screw-HWH
3:2	137-2738	1	Front ROPS ASM-RH	13	125-9622	16	Rivet-Blind
3:3	140-2583	1	ROPS Front Crosslink ASM	14	138-5775	6	Screw-Delta Point
3:3:2	144-1143	1	Decal-Utx, Safety	15	32144-70	20	Screw-HWHTF
3:4	138-9438	1	Panel-Back, Seat	16	163-4938	3	Grommet
3:5	140-2597	1	LH ROPS Rear Tube ASM	17	240-12	1	Grommet-Rubber
3:5:2	145-2215	1	Decal-ROPS Safety, Utx	18	161-5385-0P	2	Rail-Frame
3:5:3	144-2267	1	Decal-Compliance, ROPS	19	3234-6	7	Screw-HHF
3:6	137-2726	1	ROPS Rear Tube ASM-RH	20	3290-378	6	Tie-Cable
3:7	138-5787	2	Tube-Restraint, Shoulder	21	140-4775	2	Pin-Latch
3:8	137-6892	1	Crosslink-Rear, ROPS	22	3231-37	2	Screw-CARR
5	163-4936-03	1	Panel-Underseat	24	144-2245	1	Cover-Access
6	116-4701	4	Screw-HHF	25	139-1692	4	Screw-PTH
7	104-8301	16	Nut-HF, NI	26	3256-67	6	Washer
				29	145-7990	1	Foam-Barrier, Heat


● Not serviced separately

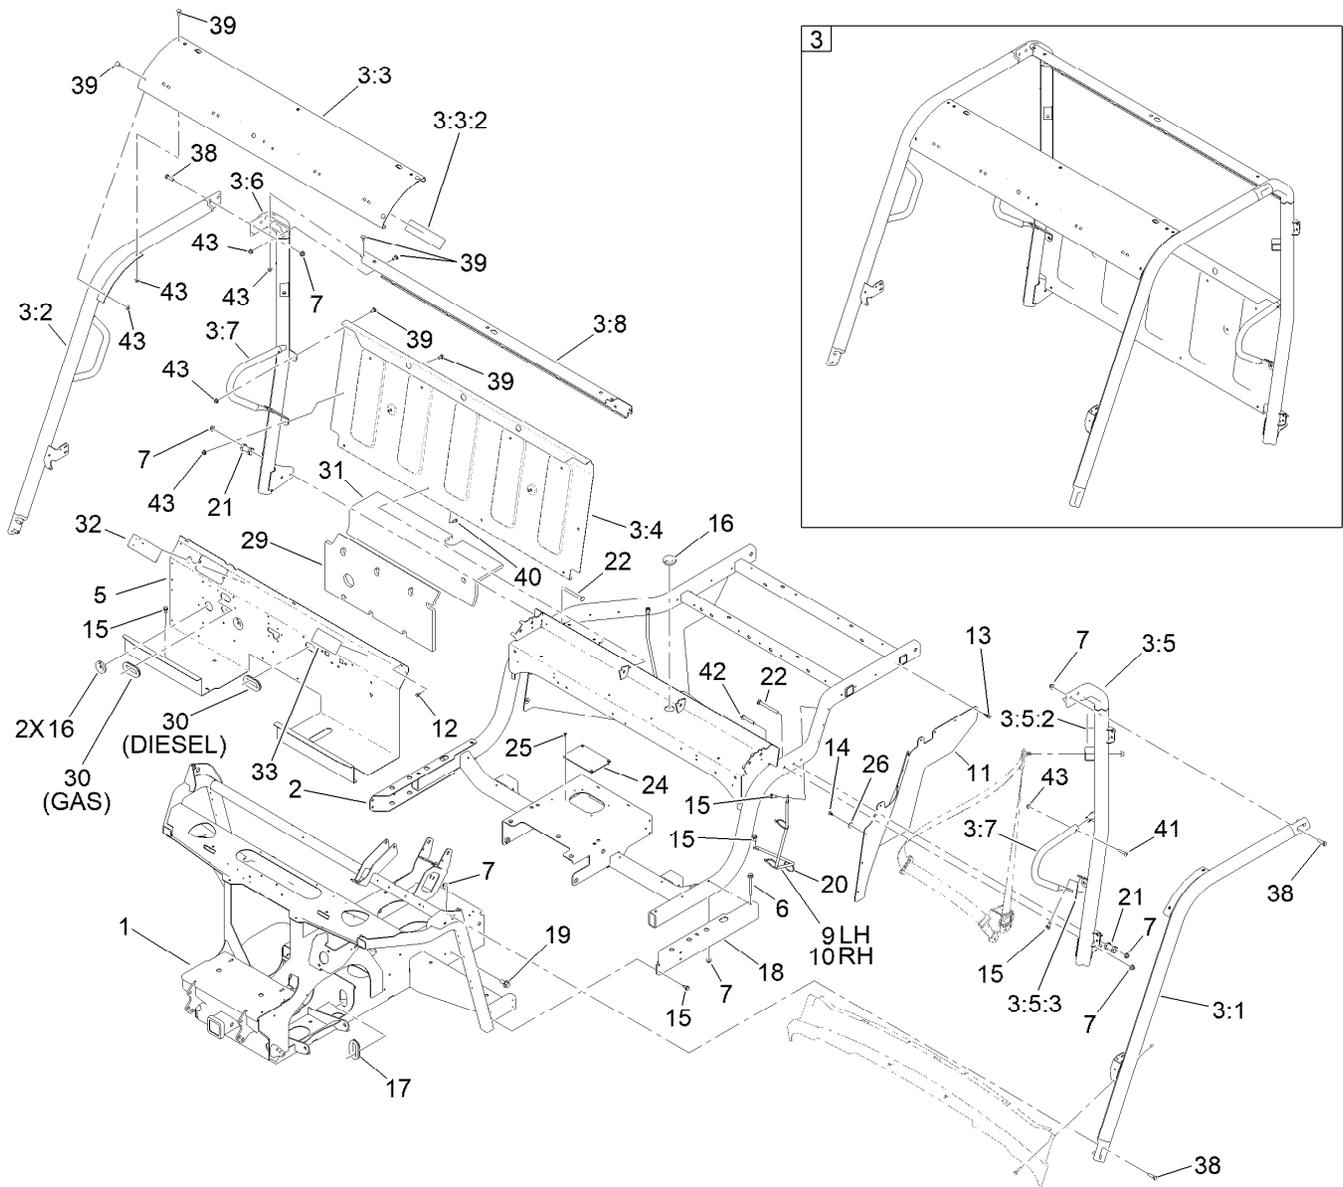

Frame and ROPS Assembly (continued)


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
30	110-5090	1	Grommet	39	144-2265	12	Bolt-CARR
31	145-7998	1	Foam-Barrier, Heat	40	49-2040	4	Screw-HWHTF
32	161-5445	1	Decal-Fuse, Vehicle	41	126-7439	2	Screw-Torx
33	161-5435	1	Decal- Maintenance, Gas	42	144-2409	2	Screw-HHF
38	144-2258	8	Screw-HH	43	119-4041	14	Nut-HF

● Not serviced separately

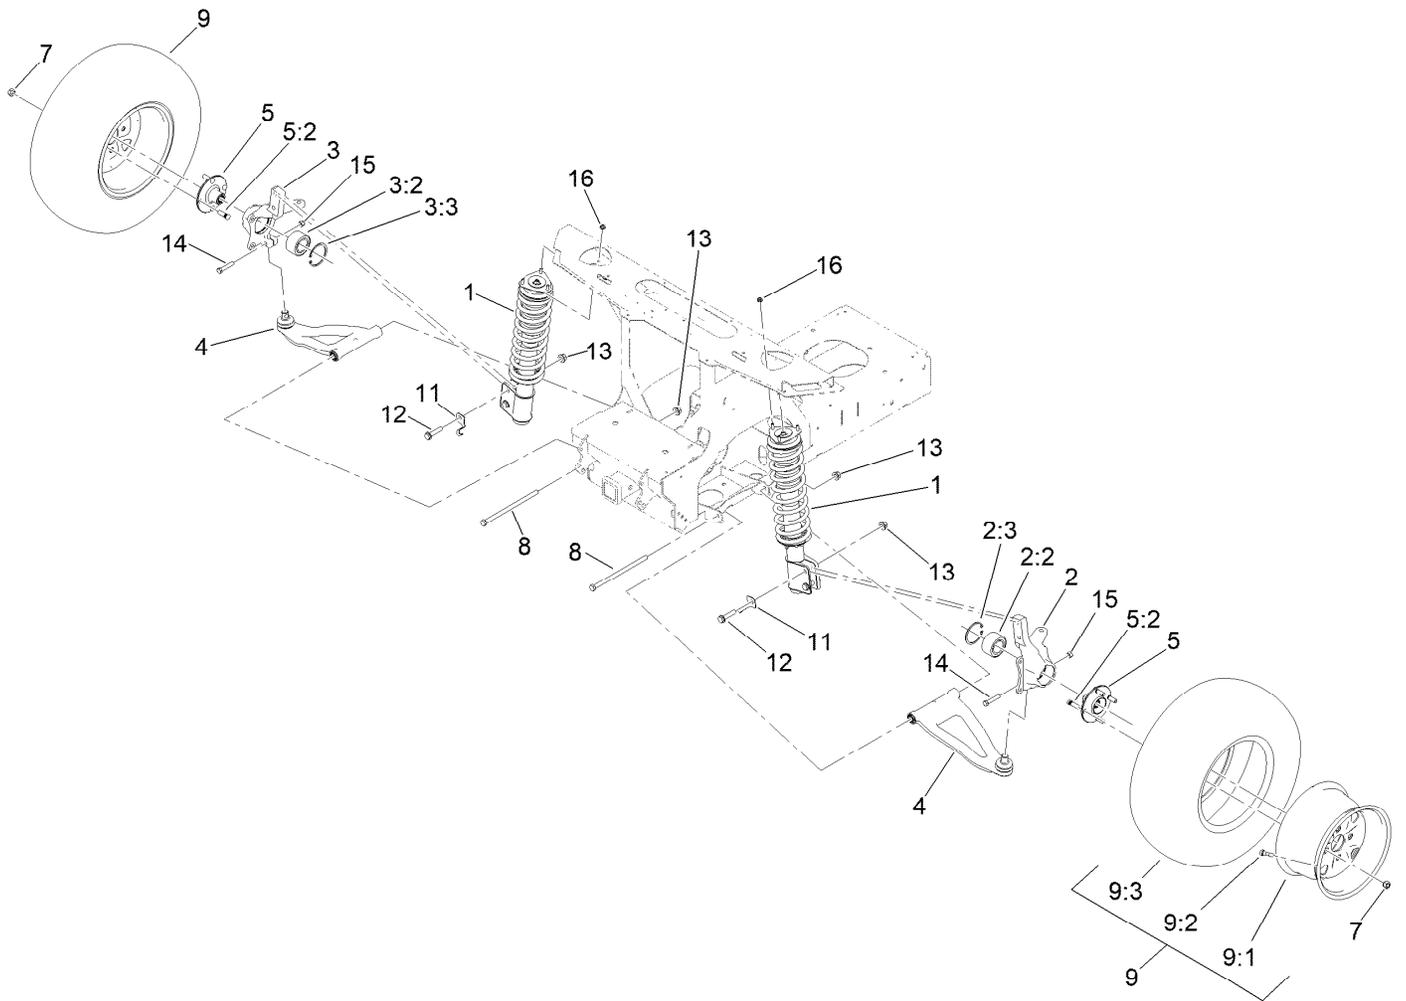


Front Suspension Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	147-2706	2	Strut ASM	8	325-39	2	Screw-HH
2	138-9319	1	Knuckle ASM-Front, LH	9	136-9419	2	Tire/Wheel ASM
2:2	133-7272	1	Bearing-Ball	9:1	136-9418	1	Wheel-12X7-12
2:3	144-2207	1	Ring-Retaining	9:2	232-27	1	Stem-Valve
3	138-9320	1	Knuckle ASM-Front, RH	9:3	137-2689	1	Tire
3:2	133-7272	1	Bearing-Ball	11	137-6766	2	Bracket-Hose, Brake
3:3	144-2207	1	Ring-Retaining	12	3234-46	4	Screw-HHF
4	145-7771	2	Control Arm ASM-Front	13	99-5107	6	Nut-HF Nylock
5	137-6754	2	Hub ASM	14	115-2398	2	Bolt-HH
5:2	137-6760	4	Stud-Wheel	15	3296-48	2	Nut-Hex
7	139-2564	8	Nut-Lug	16	112-2844	6	Nut-HF

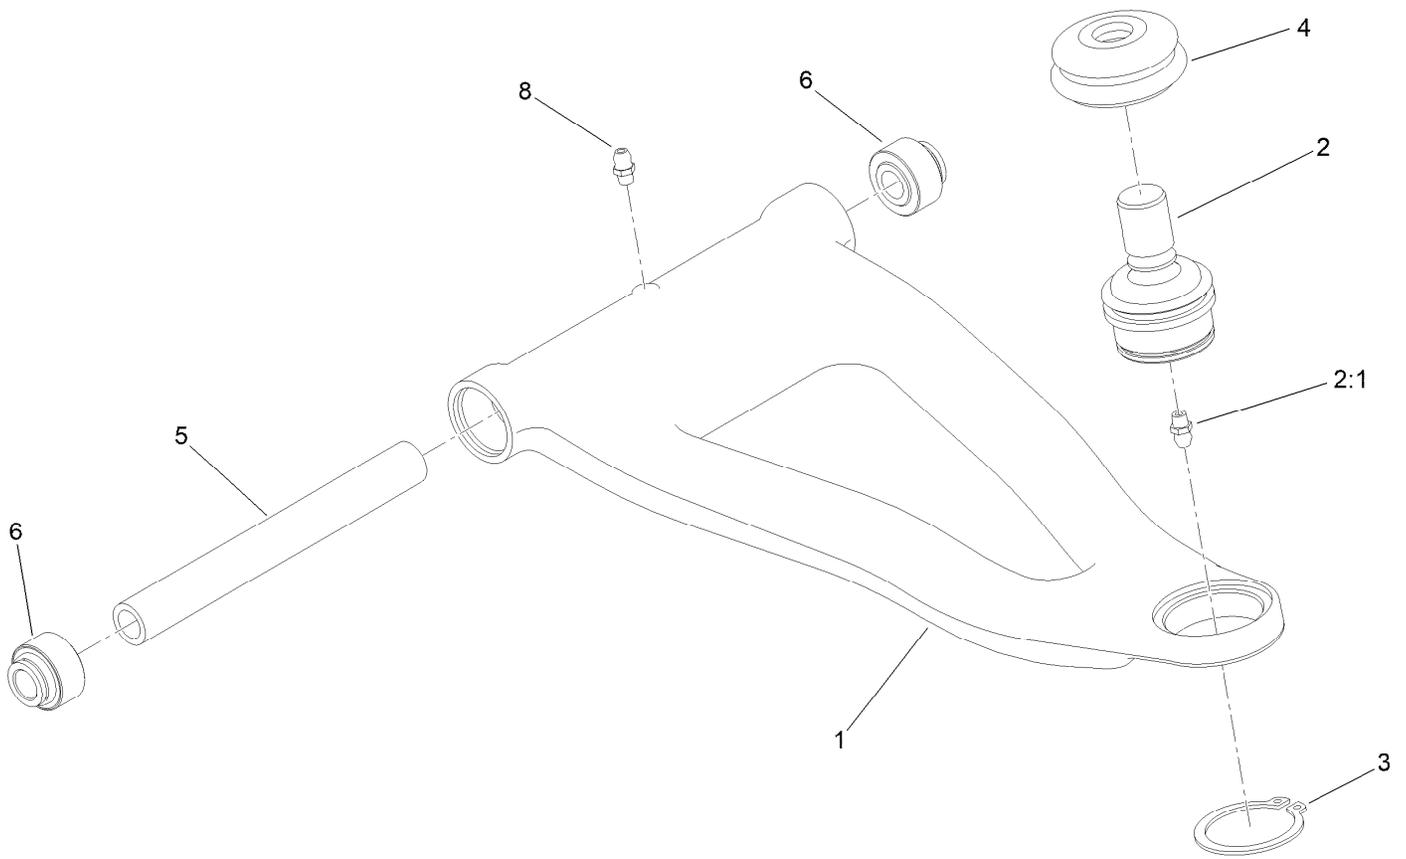


Front Control Arm Assembly No. 145-7771

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-7762	1	Control Arm-Front
2	115-2165	1	Ball Joint
2:1	302-5	1	Fitting-Grease
3	32151-104	1	Ring-Retaining, External
4	87-2420	1	Seal-Joint, Ball
5	145-7757	1	Spacer
6	145-7756	2	Bushing-Ball
8	302-60	1	Fitting-Grease

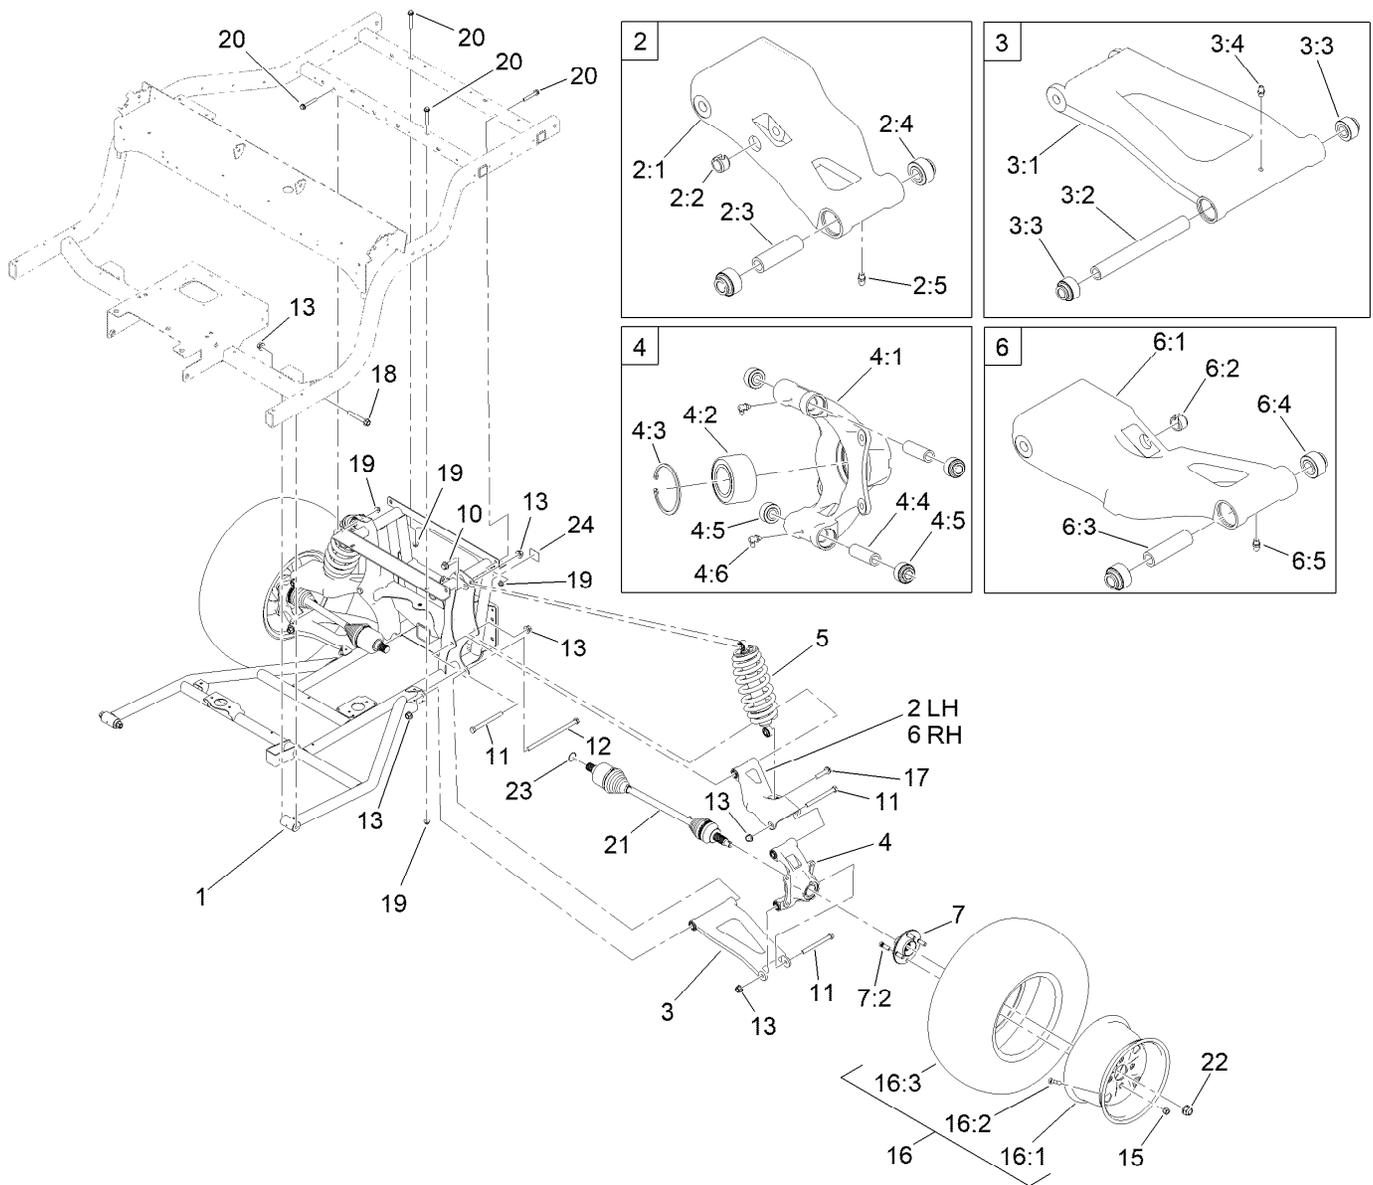

Rear Suspension and Subframe Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	147-8109	1	Engine Cradle ASM	6	145-7774	1	Control Arm ASM-Rear, RH Upper
2	145-7775	1	Control Arm ASM-Rear, LH Upper	6:1	145-7766	1	Control Arm-Rear Up, RH
2:1	145-7765	1	Control Arm-Rear Up, LH	6:2	137-2659	1	Bushing-Tension
2:2	137-2659	1	Bushing-Tension	6:3	145-7770	1	Spacer
2:3	145-7770	1	Spacer	6:4	145-7756	2	Bushing-Ball
2:4	145-7756	2	Bushing-Ball	6:5	302-5	1	Fitting-Grease
2:5	302-5	1	Fitting-Grease	7	137-6754	2	Hub ASM
3	145-7772	2	Control Arm ASM-Rear	7:2	137-6760	4	Stud-Wheel
3:1	145-7763	1	Control Arm-Rear, Lower	10	3234-27	2	Screw-HHF
3:2	145-7757	1	Spacer	11	325-22	6	Screw-HH
3:3	145-7756	2	Bushing-Ball	12	325-39	2	Screw-HH
3:4	302-5	1	Fitting-Grease	13	99-5107	12	Nut-HF Nylock
4	145-7773	2	Knuckle ASM-Rear	15	139-2564	8	Nut-Lug
4:1	145-7764	1	Knuckle-Rear	16	136-9420	2	Tire/Wheel ASM
4:2	133-7272	1	Bearing-Ball	16:1	136-9418	1	Wheel-12X7-12
4:3	144-2207	1	Ring-Retaining	16:2	232-27	1	Stem-Valve
4:4	145-7770	2	Spacer	16:3	137-2690	1	Tire
4:5	145-7756	4	Bushing-Ball	17	3234-46	2	Screw-HHF
4:6	302-60	2	Fitting-Grease	18	114-8419	2	Screw-HHF
5	145-7758	2	Shock/Spring ASM	19	104-8301	8	Nut-HF, NI

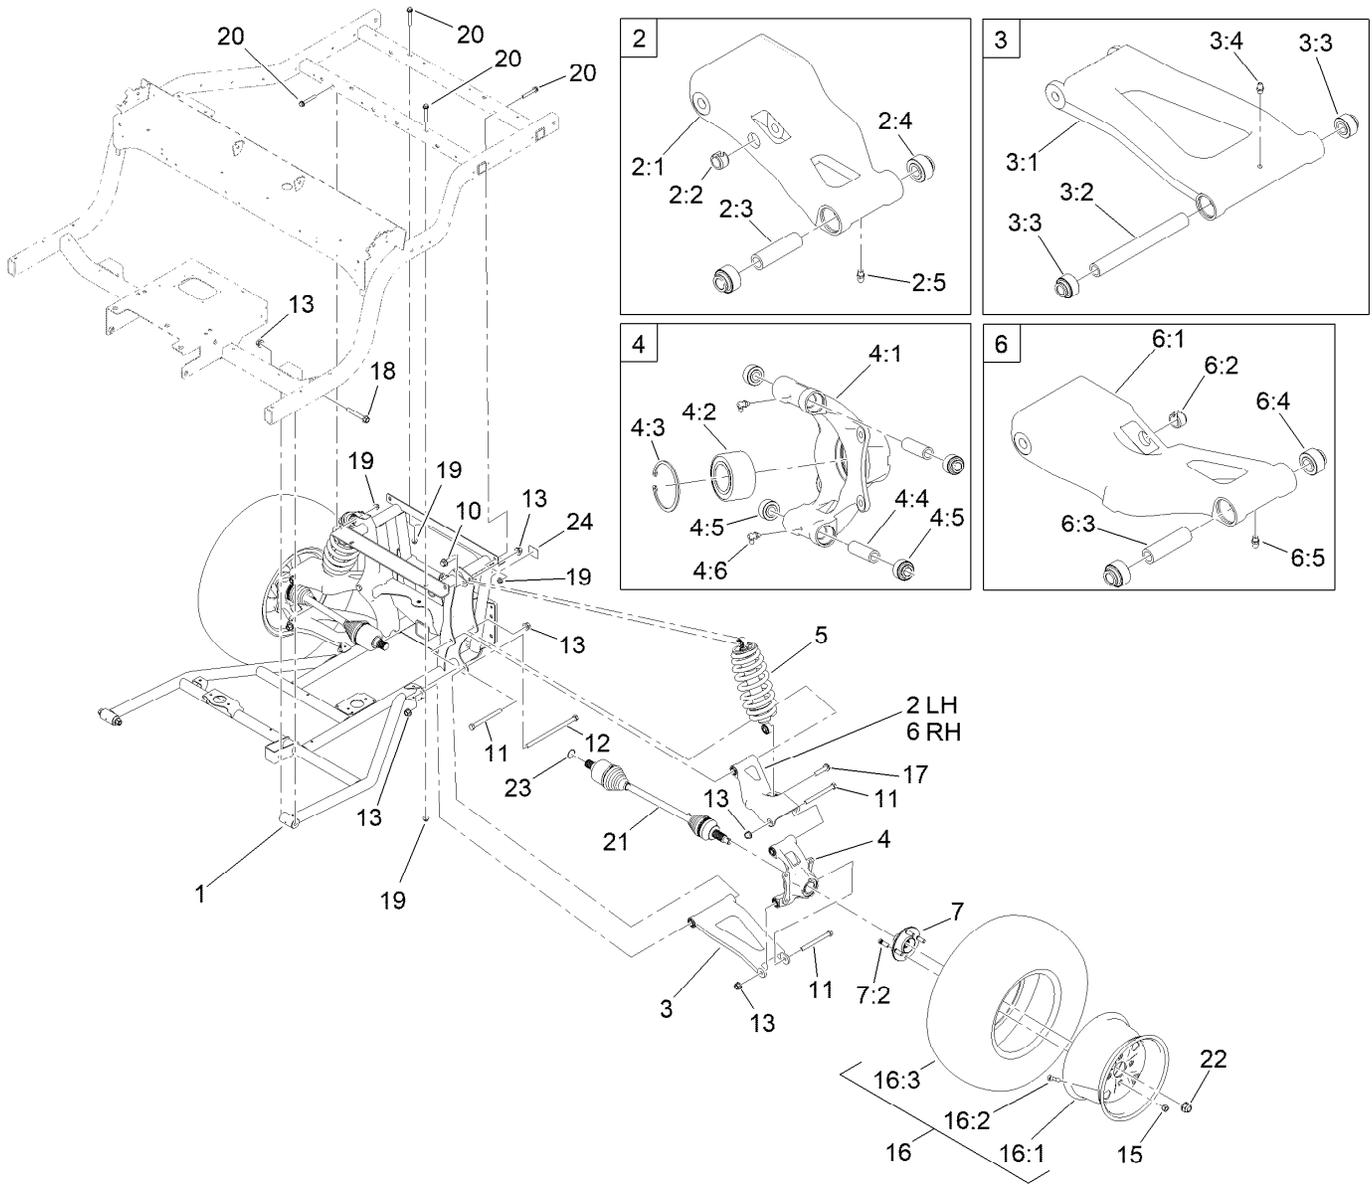

Rear Suspension and Subframe Assembly (continued)

Ref.	Part Number	Qty.	Description
20	3234-39	8	Screw-HHF
21	140-2608	2	Cv Axle ASM
22	115-2164	2	Nut-Spindle


Ref.	Part Number	Qty.	Description
23	119-1156	2	O-Ring
24	145-2205	1	Decal-Load, Towing

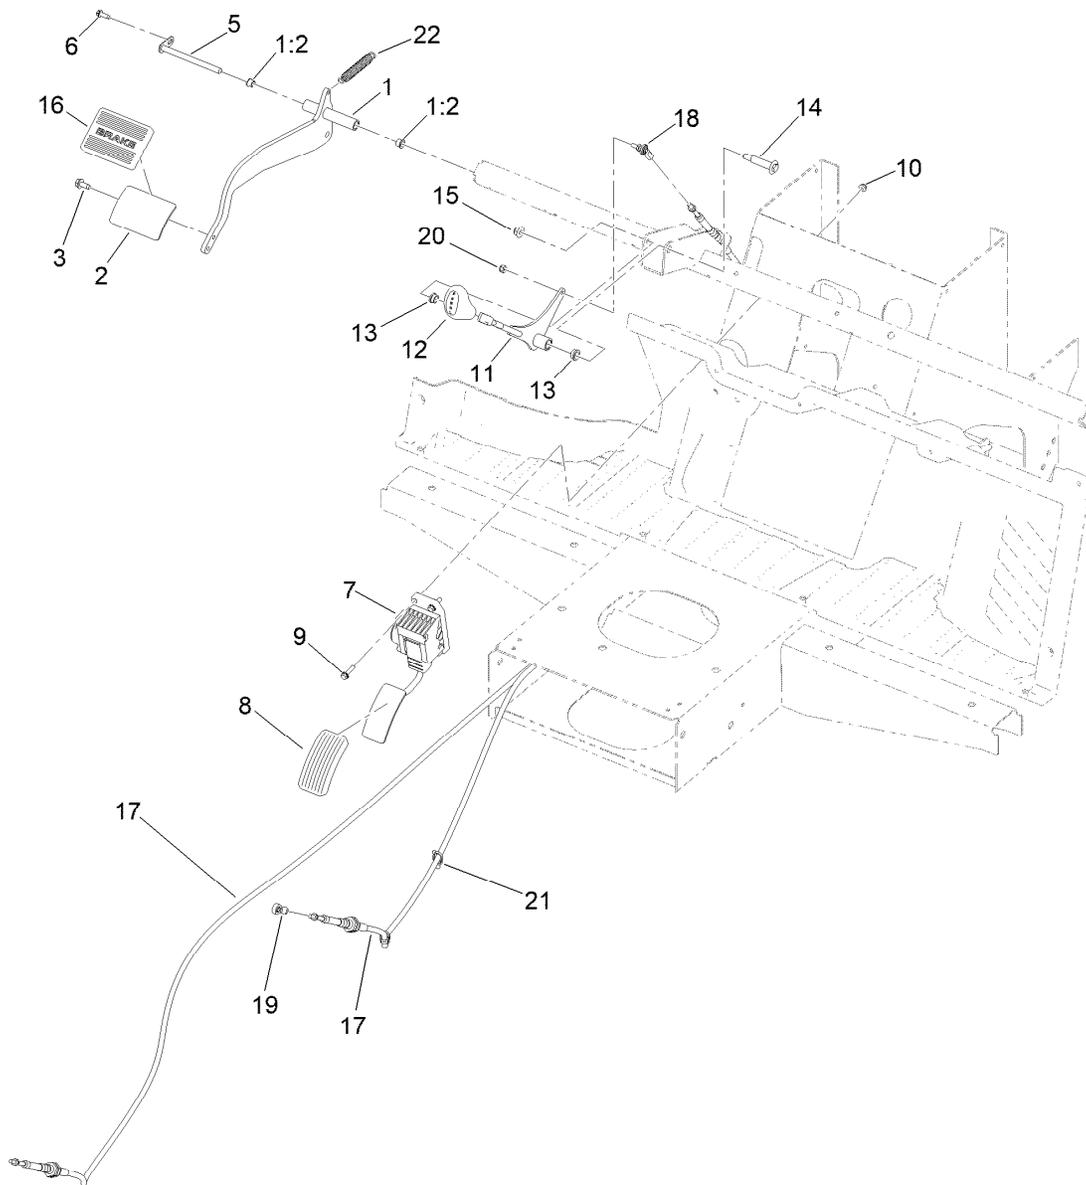

Pedals and Controls Assembly


Ref.	Part Number	Qty.	Description
1	163-4935	1	Brake Pedal ASM
1:2	256-116	2	Bushing-Flange
2	161-5256	1	Brake Pedal Pad ASM [black]
3	32144-70	2	Screw-HWHTF
5	136-9306	1	Pivot Shaft ASM
6	49-2040	1	Screw-HWHTF
7	144-2740	1	Pedal ASM-Accelerator
8	140-4572	1	Pedal Pad-Throttle
9	120-4654	3	Screw-HHF
10	104-7201	3	Nut-HF, NI
11	161-5472	1	Shifter ASM

Ref.	Part Number	Qty.	Description
12	139-4655	1	Knob-Shifter
13	256-156	2	Bushing-Flange
14	92-1057	1	Bolt-Shoulder
15	104-8301	1	Nut-HF, NI
16	161-5253	1	Footpad-Pedal
17	140-2649	1	Cable-Shift
18	110-2554	1	Rod End-Spherical
19	147-2705	1	Rod End-Spherical
20	3296-3	1	Nut-Lock
21	32180-030	2	Clip-Tie
22	132-6915	1	Spring-Extension

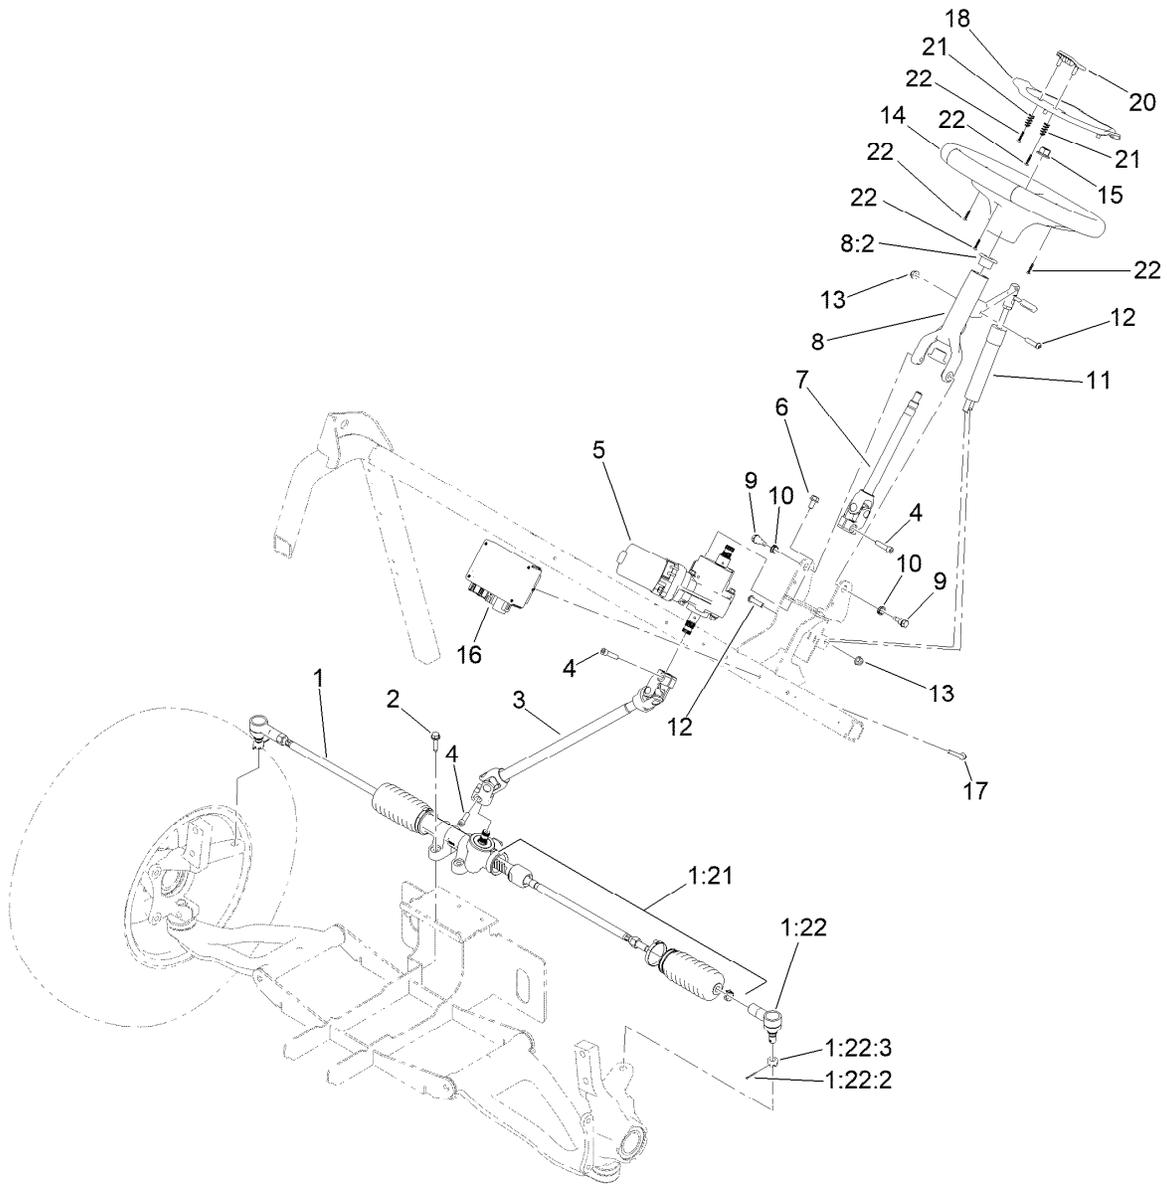


Steering Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	138-9322	1	Steering Rack ASM	9	115-1958	2	Bolt-Shoulder
1:21	140-4823	1	Kit-Tie Rod ASM, Utx	10	256-156	2	Bushing-Flange
1:22	140-4592	1	Kit-Rod End ASM	11	137-2827	1	Spring-Gas, Adjustable Stop
1:22:2	3272-42	1	Pin-Cotter	12	3290-511	2	Screw-HSBH
1:22:3	140-2493	1	Nut-Hex, Slotted	13	130-6655	2	Nut-Flange, NI
2	32144-49	4	Screw-HWHTF	14	144-5570	1	Steering Wheel ASM
3	138-3347	1	Steering Shaft ASM	15	99-5107	1	Nut-HF Nylock
4	163-5065	3	Screw-HSH,Lock	16	138-3349	1	Controller-Power Steering
5	138-3348	1	Motor-Power Steering	17	33103-050	2	Screw-HHF
6	33104-016	3	Screw-HHF	18	144-5567	1	Cover-Wheel, Steering
7	138-3344	1	Upper Steering Shaft ASM	20	144-5566	1	Clip-Wheel, Steering
8	139-4439	1	Tilt Steering Column ASM	21	144-5537	2	Spring-Compression
8:2	133-0594	2	Bushing-Flange	22	94-4496	5	Screw-PPH

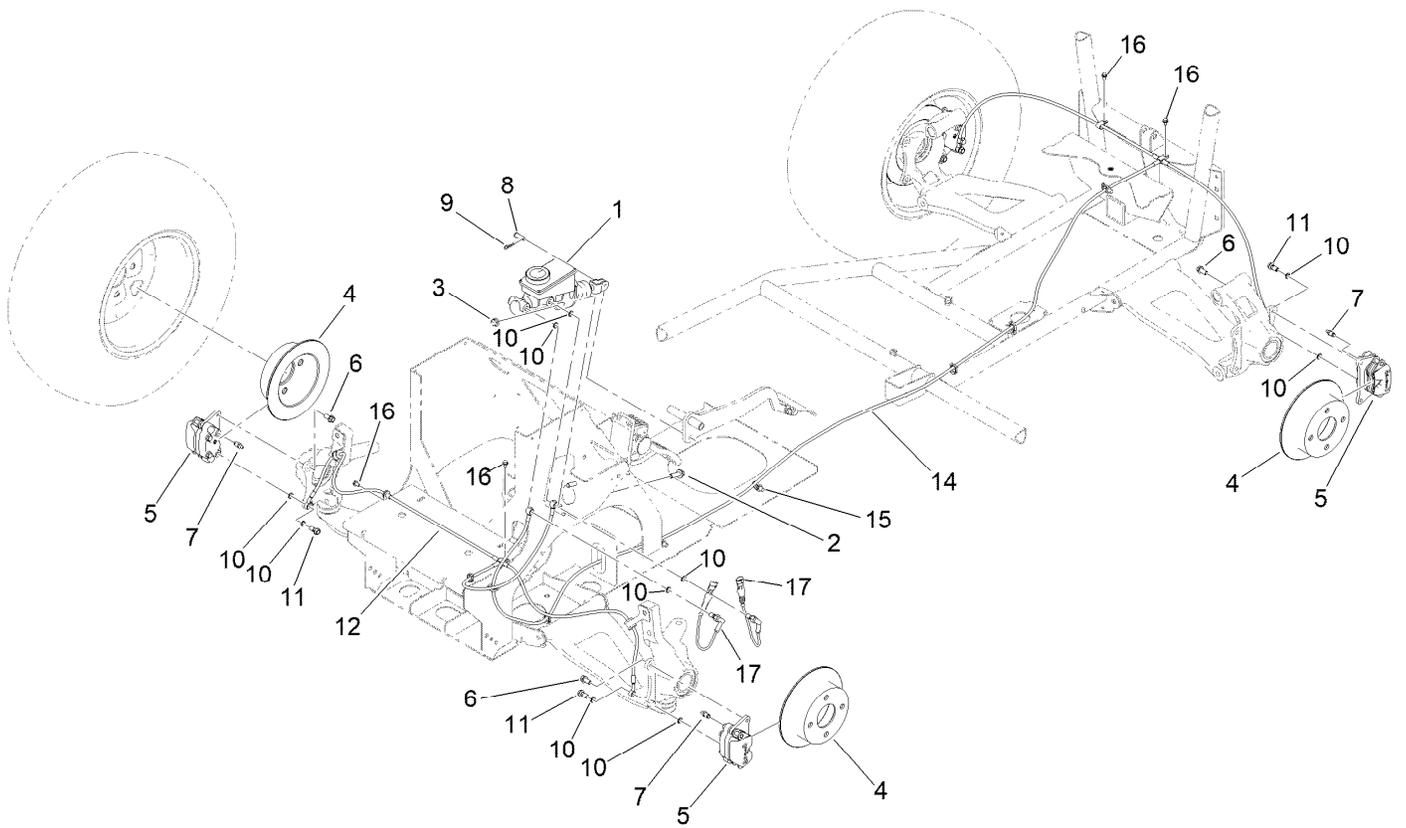


Brake Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-6782	1	Master Cylinder ASM	9	1-806003	1	Pin-Cotter
2	119-4061	2	Screw-HHF	10	115-2341	12	Washer-Banjo
3	104-8301	2	Nut-HF, NI	11	120-4875	4	Bolt-Flange, Banjo
4	133-7273	4	Rotor-Brake	12	137-6768	1	Hose ASM-Brake, Front
5	127-7424	4	Brake Caliper ASM	14	137-6769	1	Hose ASM-Brake, Rear
6	144-5550	8	Screw-Spl	15	32180-030	8	Clip-Tie
7	119-9509	4	Screw-Bleed	16	32144-4	4	Screw-HWH
8	283-2	1	Pin-Clevis	17	144-2227	2	Switch-Brake, Pressure

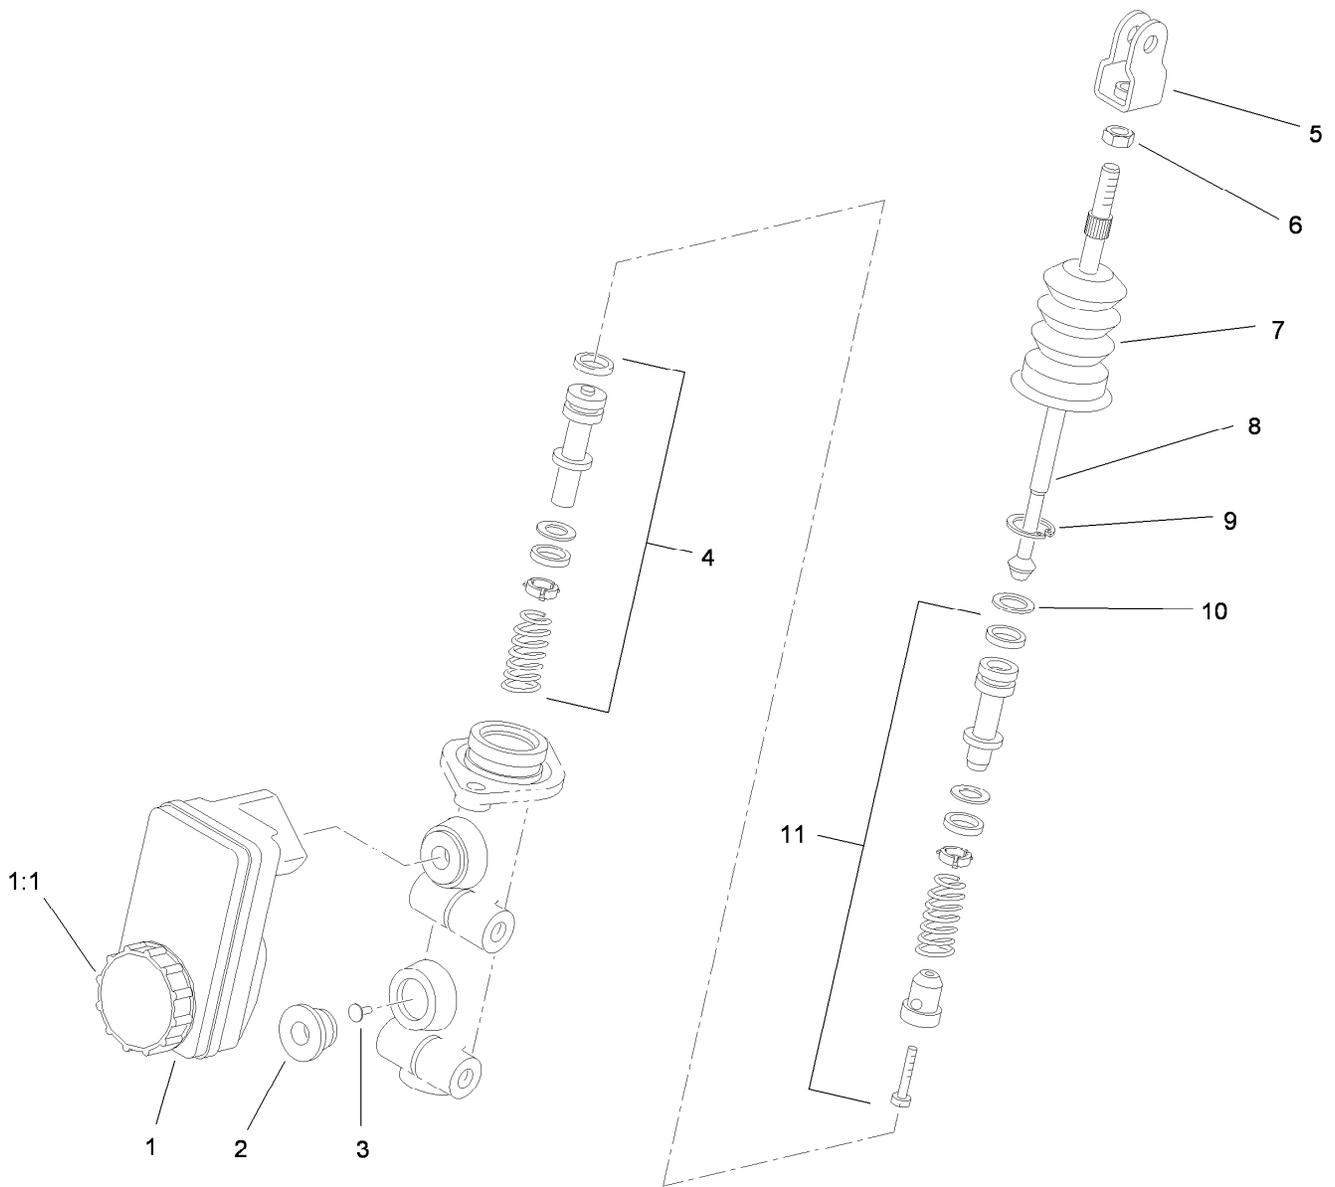


Master Cylinder Assembly No. 104-6782

Ref.	Part Number	Qty.	Description
1	104-6845	1	Reservoir ASM
1:1	92-4112	1	Cap ASM
2	93-8971	2	Seal-Port, Flange
3	92-4103	1	Pin-Stop
4	92-4102	1	Secondary Piston ASM
5	92-4110	1	Clevis
6	21-0360	1	Nut-Hex
7	94-5209	1	Cover-Dust
8	94-5210	1	Rod-Push
9	92-4109	1	Ring-Snap
10	92-4108	1	Retainer-Washer
11	92-4101	1	Primary Piston ASM

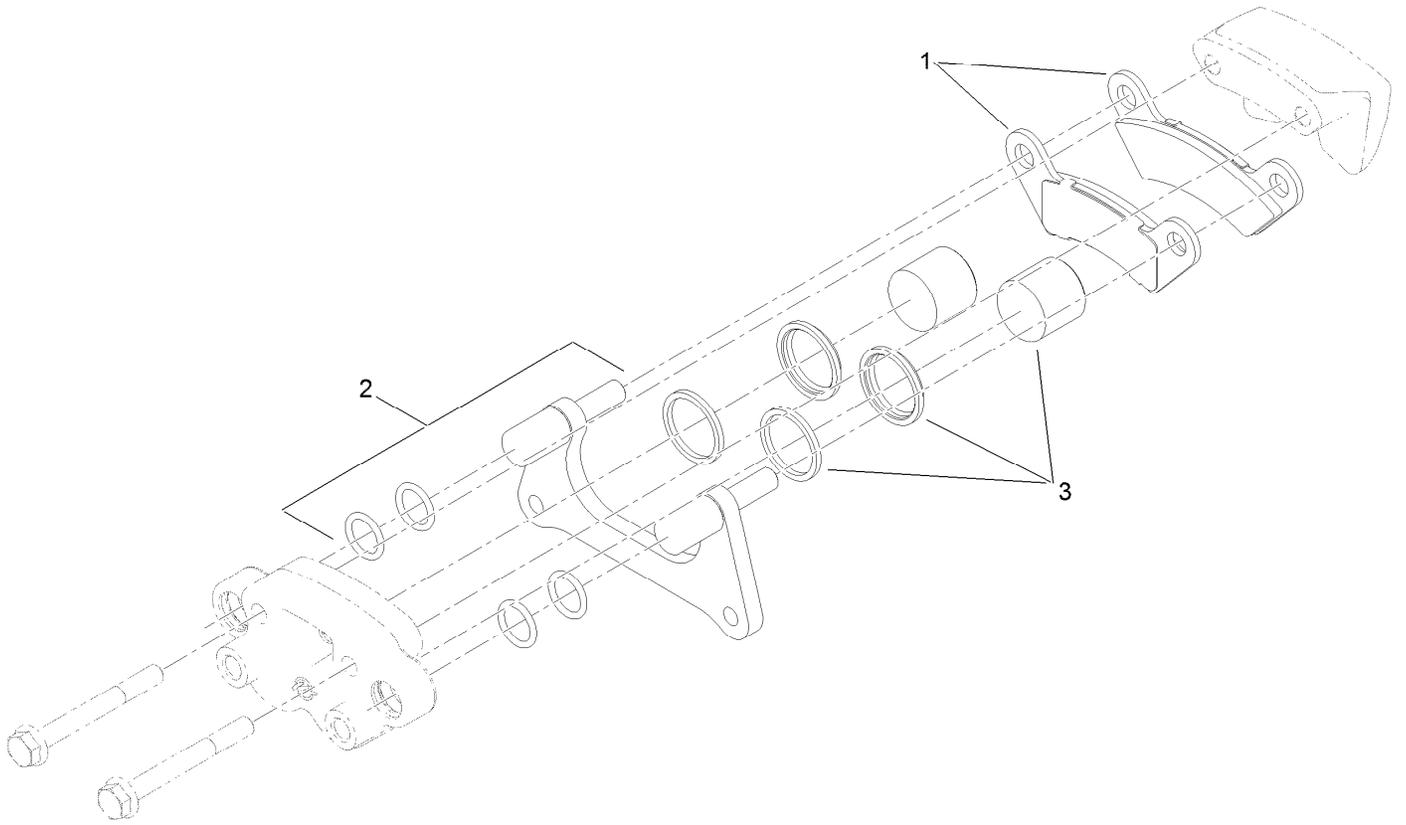


Brake Caliper Assembly No. 127-7424

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-2580	1	Brake Pad Service Kit (Front, Qty 4)
2	119-9511	1	Bracket Kit
3	133-0614	1	Piston Kit

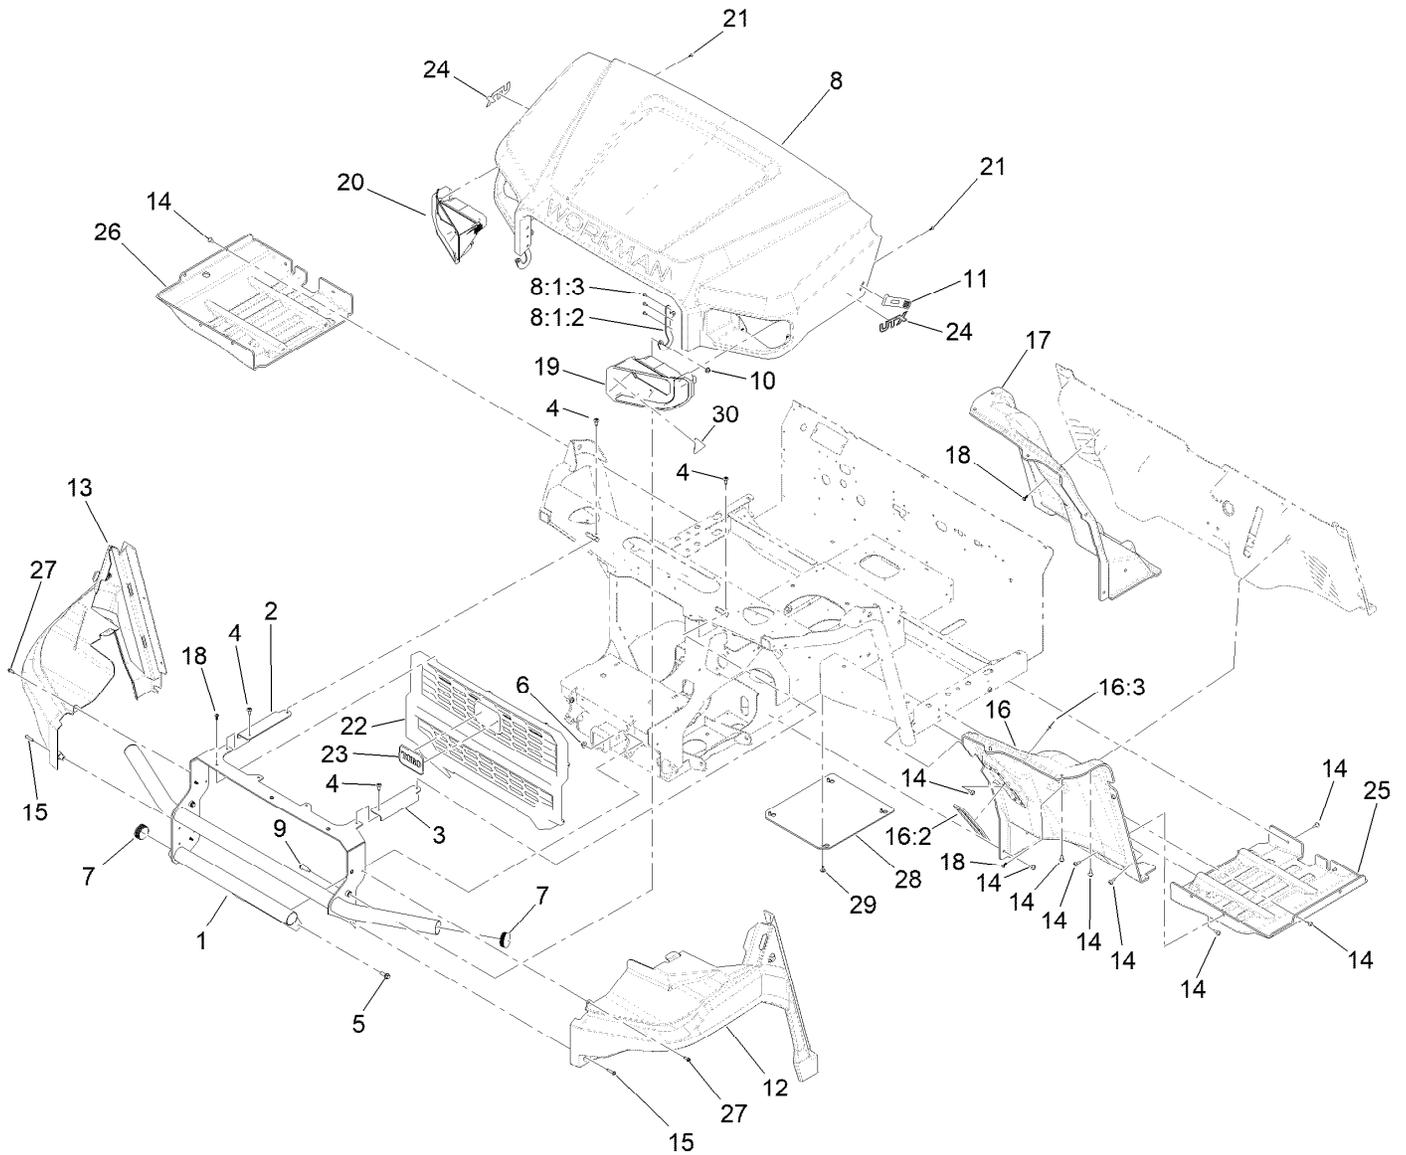


Hood and Front Fender Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	136-9540	1	UTV Bumper ASM	16	161-5471	1	Fender ASM-Inner, LH
2	144-2423-05	1	Bracket-Mount, Utx Bumper [blk-Txt]	16:2	161-5383	1	Plate-Reinforcement, Fender
3	144-2421-05	1	Bracket-Mount, Utx Bumper [blk-Txt]	16:3	3269-24	6	Rivet
4	138-9753	4	Screw	17	161-5306	1	Fender-Inner, RH
5	3234-42	2	Screw-HHF	18	138-5775	9	Screw-Delta Point
6	104-8301	2	Nut-HF, NI	19	138-5778	1	Headlight ASM, LH
7	137-6827	4	Plug-Plastic	20	138-5779	1	Headlight ASM, RH
8	137-6820SP	1	UTV Hood ASM	21	139-3430	8	Screw-Bhf
8:1:2	137-6817	2	Bracket-Pivot, Hood	22	140-4646	1	Grill-Utx
8:1:3	114439	6	Rivet-Blind	23	144-2294	1	Emblem-Toro
9	136-7192	2	Bolt-Shoulder, HHF	24	144-1145	2	Decal-Utx, Emblem
10	104-8300	2	Nut-HF, NI	25	161-5307	1	Plate-Skid, LH
11	137-6856	2	Strap-Hood	26	161-5308	1	Plate-Skid, RH
12	137-2816SP	1	Fender-Front, LH	27	49-2040	2	Screw-HWHTF
13	137-2817SP	1	Fender-Front, RH	28	163-4942	1	Plate-Cover, Center
14	119-4012	30	Screw-HWHTF	29	126-6266	4	Screw-Tph
15	132-6777	2	Screw-Twh Thd Roll	30	161-5222	2	Decal-Reflector, Fender

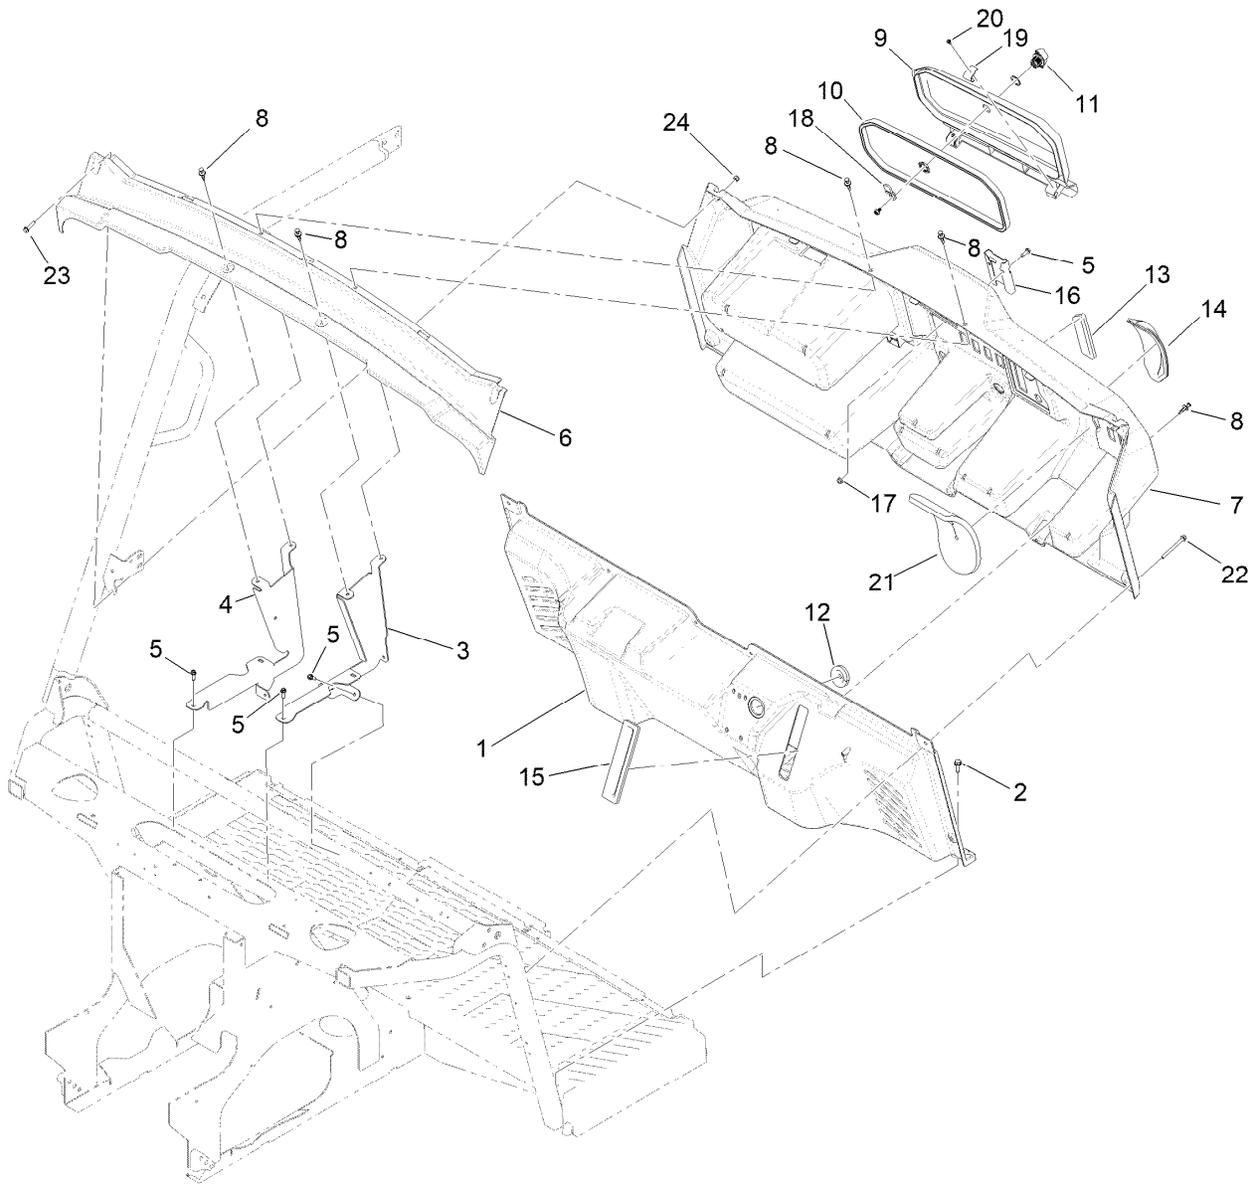


Dash Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-2749SP	1	Footboard	14	161-5261	1	Grommet-Steering Column
2	701243	4	Screw-Thd Roll, HWH	15	161-5262	1	Grommet-Brake Pedal
3	145-2174-03	1	Bracket-Dash, LH	16	139-3449-05	1	Bracket-Mount, Radio
4	145-2178-03	1	Bracket-Dash, RH	17	104-7201	4	Nut-HF, NI
5	49-2040	8	Screw-HWHTF	18	140-4680	1	Cam-Latch, Quarter Turn
6	138-0041SP	1	Panel-Windshield, Dash	19	145-0840	2	Bracket-Glove Box
7	138-0040SP	1	Dash	20	32144-42	2	Screw-Thd Form, HWH
8	125-9622	8	Rivet-Blind	21	147-2822	1	Seal-Foam, Steering Column
9	138-0039SP	1	Door-Glove Box	22	138-3653	2	Screw-HHF
10	139-3462	1	Seal-Door, Glove Box	23	32144-86	2	Screw-HWHTF
11	140-4679	1	Latch-Quarter Turn	24	3296-73	2	Nut-Lock, NI
12	163-4938	1	Grommet				
13	161-5260	1	Grommet-Shifter				

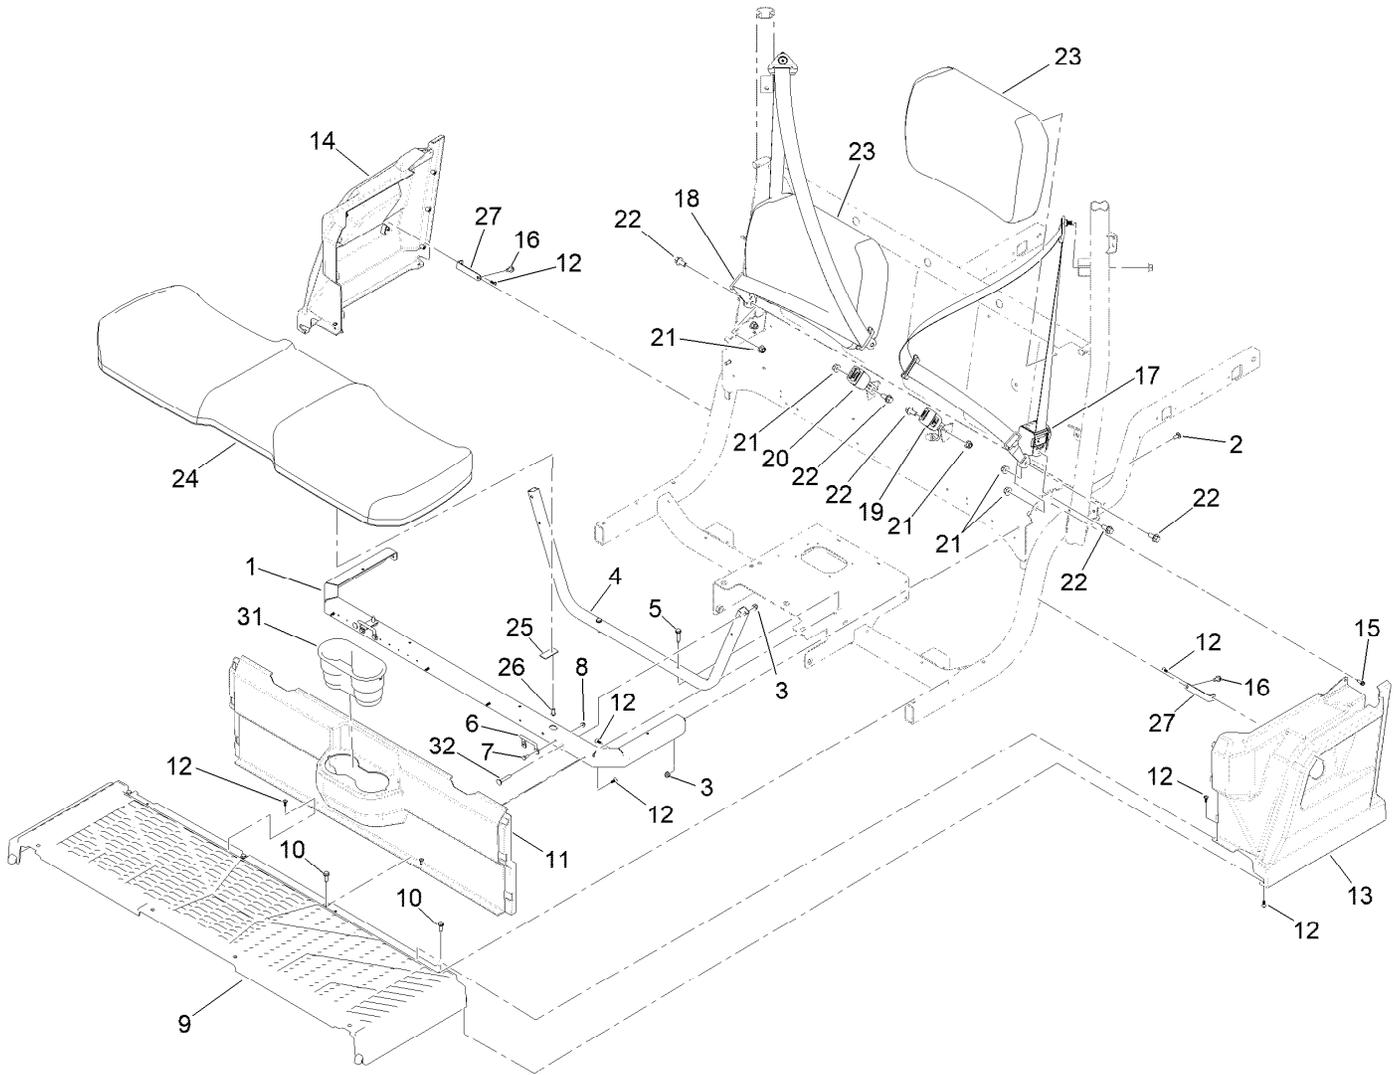

Seat Base Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-6896-03	1	Frame-Seat, Bottom	16	32144-70	2	Screw-HWHTF
2	3230-23	2	Bolt-CARR	17	140-2676	1	Retractor-Seat Belt, LH
3	119-4041	4	Nut-HF	18	140-2677	1	Retractor-Seat Belt, RH
4	137-2746-0P	1	Tube-Support, Seat	19	140-2678	1	Buckle-Seat Belt, W/Switch
5	32144-57	2	Screw-Thd Roll	20	140-2679	1	Buckle-Seat Belt
6	137-6888	2	Wire-Hinge	21	144-2269	8	Nut-Nylk, HF
7	321-3	4	Screw-HH	22	144-2289	6	Screw-HHF
8	104-7201	4	Nut-HF, NI	23	145-2211	2	Seat Backrest ASM
9	137-6874SP	1	Plate-Floor	24	145-2207	1	Bench Seat Bottom ASM
10	701243	4	Screw-Thd Roll, HWH	25	145-7954	2	Bracket-Hinge, Seat
11	137-6875SP	1	Panel-Seat Base	26	3274-55	2	Screw-HSBH
12	138-5775	14	Screw-Delta Point	27	138-9411	2	Support-Panel-Side
13	137-2813SP	1	Panel-Seat Base, LH	31	139-3454	1	Cup Holder
14	137-2814SP	1	Panel-Seat Base, RH	32	3230-5	2	Bolt-CARR
15	49-2040	8	Screw-HWHTF				

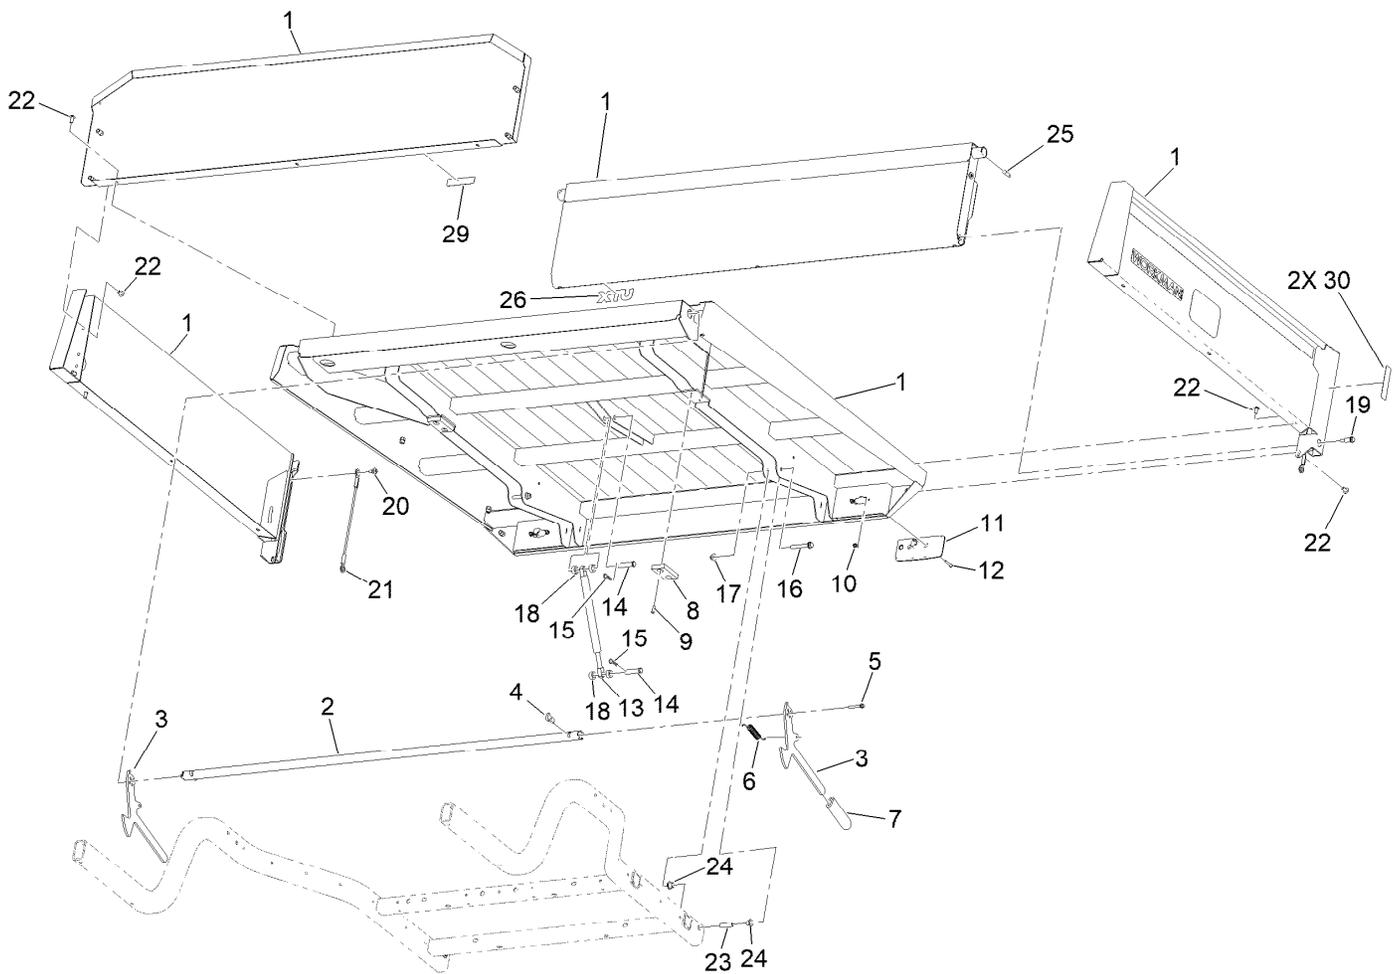

Cargo Bed Assembly





Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1		1	Cargo Bed Kit ●	15	3290-467	2	Pin-Hair
2	139-4421-03	1	Tube-Latch	16	3234-39	2	Screw-HHF
3	147-2709	2	Latch-Bed	17	104-8301	2	Nut-HF, NI
4	139-4422	2	Plate-Threaded	18	66-6500	4	Spacer-Wheel
5	147-2746	2	Screw-HHF,Lock	19	147-2747	2	Screw-Shoulder,HHF,Lock
6	140-2663	2	Spring-Extension	20	120-9471	4	Bolt-Shoulder
7	1-633268	2	Grip-Lever	21	130-5726	2	Lanyard
8	93-9719	2	Block-Wear	22	138-9753	15	Screw
9	3274-69	4	Screw-HSBH	23	144-2211	2	Sleeve-Pivot, Bed
10	120-4578	4	Nut-HF	24	125-5239	4	Bushing-Flange
11	139-2071	2	Light-Rear Tail/Stop/Turn	25	133-7146	2	Plug-Tailgate, Anti-Rattle
12	3250-52	4	Screw-PPH	26	144-1145	1	Decal-Utx, Emblem
13	139-4417	1	Spring-Gas	29	144-1144	1	Decal-Cargo Bed Safety
14	283-5	2	Pin-Clevis	30	161-5428	2	Decal-Reflector, Rear

● Not serviced separately

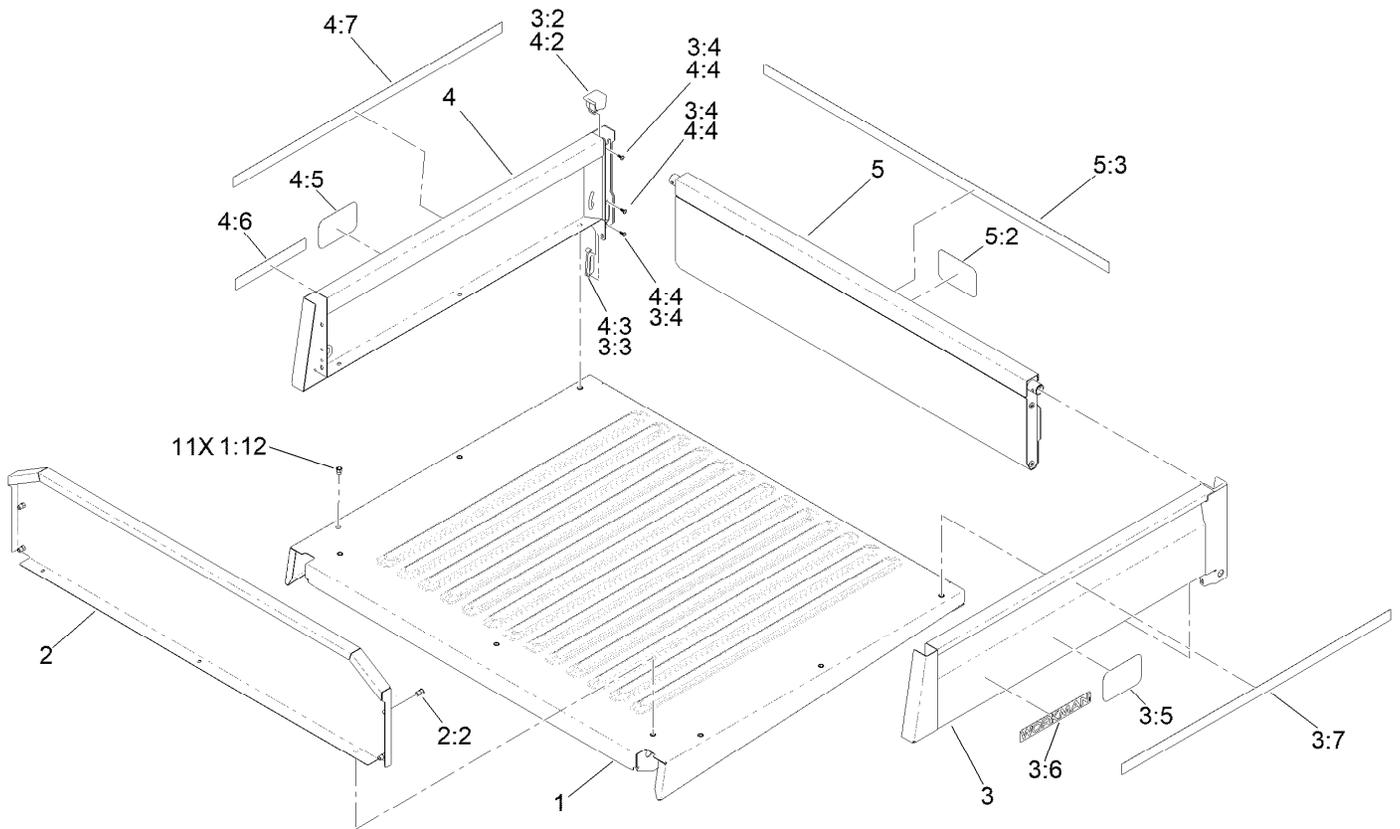





Cargo Bed Kit Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2750	1	Flat Bed ASM	4	147-8104	1	Bed Side ASM, RH
1:12	138-2899	15	Nut-Clinch	4:2	140-2690	1	Retainer-Tailgate
2	140-4675	1	Panel ASM-Front, Bed	4:3	139-4690	1	Bushing-Tailgate
2:2	138-2899	4	Nut-Clinch	4:4	138-5775	3	Screw-Delta Point
3	147-8103	1	Bed Side ASM, LH	4:5	105-1217	1	Decal
3:2	140-2690	1	Retainer-Tailgate	4:6	140-4835	1	Decal-Workman, Gray
3:3	139-4690	1	Bushing-Tailgate	4:7	144-2277	1	Decal-Red Stripe, 43"
3:4	138-5775	3	Screw-Delta Point	5	147-8102	1	Tailgate ASM
3:5	105-1217	1	Decal	5:2	105-1217	1	Decal
3:6	140-4835	1	Decal-Workman, Gray	5:3	144-2281	1	Decal-Red Stripe, 55.25"
3:7	144-2277	1	Decal-Red Stripe, 43"				

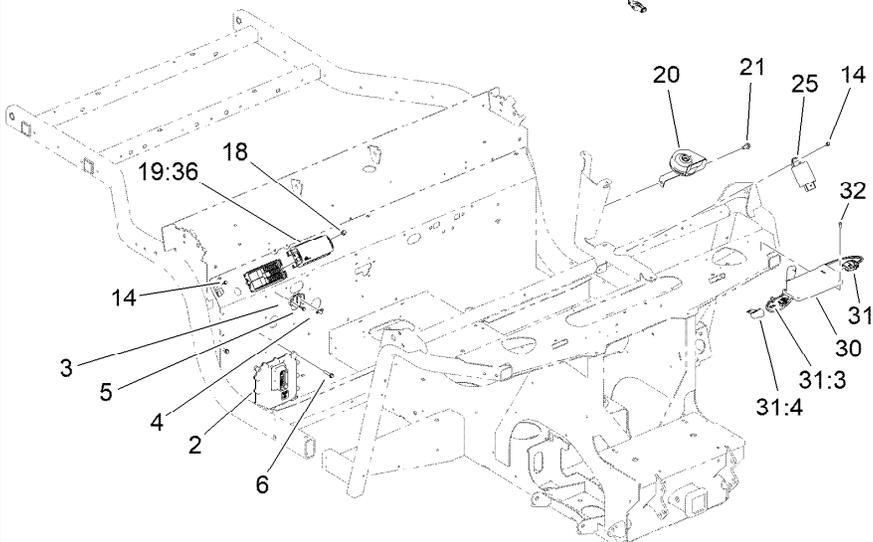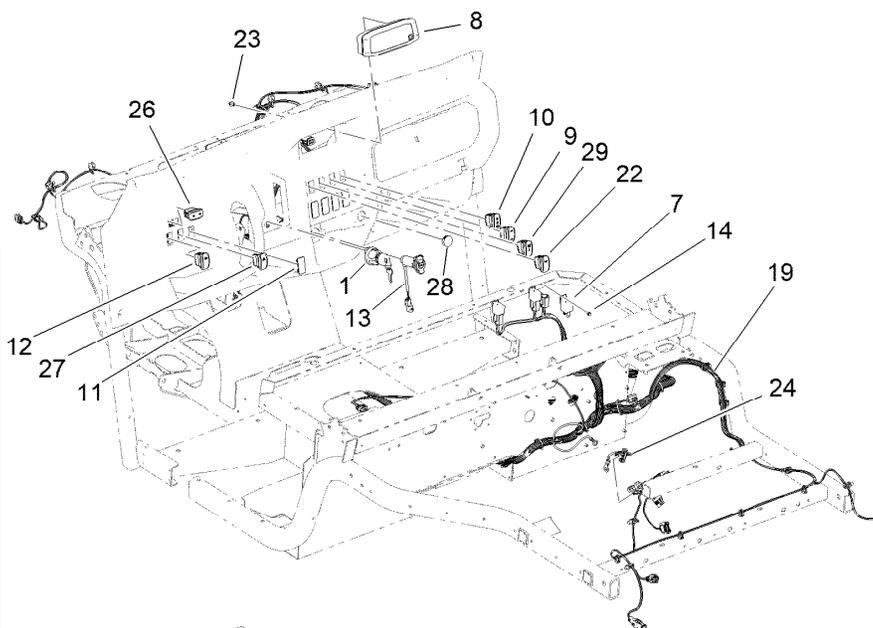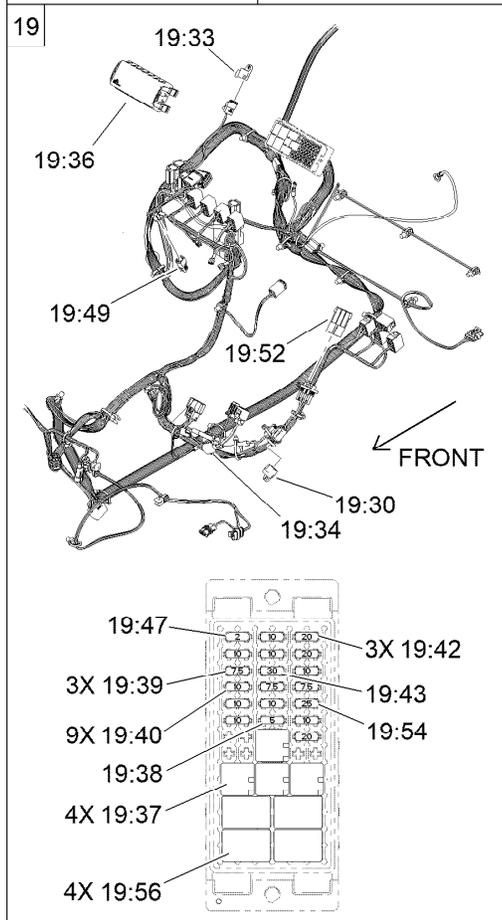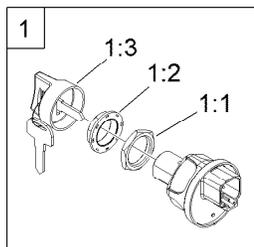

Electrical Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	122-3614	1	Switch-Ignition	19	122-2315	1	Harness-Wire, Utx Gas 2 Passenger
1:1	121-5160	1	Nut-Hex	19:30	32180-156	1	Cap-Plug, 6 Way
1:2	122-2704	1	Nut-Face, M22 (Plastic)	19:33	32180-089	1	Cap-Plug, 3 Way
1:3	121-5162	1	Set-Key, Ignition	19:34	100-4918	1	Diode
2	127-2770	1	Controller	19:36	32180-393	1	Cover-Chief, Bric
3	42862	1	Block-Terminal, Ground	19:37	126-3991	4	Relay-Micro
4	42863	1	Strip-Jumper	19:38	121-8864	1	Fuse-Mini Blade, 5 Amp
5	100-4351	2	Screw-HWH	19:39	121-8865	3	Fuse-Mini Blade, 7.5 Amp
6	32144-110	4	Screw-HWH	19:40	121-8866	9	Fuse-Mini Blade, 10 Amp
7	99-7435	3	Relay	19:42	121-8868	3	Fuse-Mini Blade, 20 Amp
8	147-8095	1	Cluster-Instrument	19:43	121-8870	1	Fuse-Mini Blade, 30 Amp
9	144-2440	1	Switch-Rocker, On-None-On	19:47	121-8861	1	Fuse-Mini Blade, 2 Amp
10	144-2445	1	Switch-Rocker, On-On-On	19:49	32180-282	1	Conn, Res, 120 Ohm
11	99-7420	5	Plug-Hole	19:52	32160-128	1	Connector-Mp280, 3M (Sealed)
12	144-2405	1	Switch-Rocker, On-None-On	19:54	121-8869	1	Fuse-Mini Blade, 25 Amp
13	139-3420	1	Port-USB	19:56	126-6157	4	Relay-Micro 280, Spdt
14	32144-112	5	Screw-HWH	20	139-4557	1	Horn-ASM
18	33103-012	2	Screw-HHF	21	32144-70	1	Screw-HWHTF

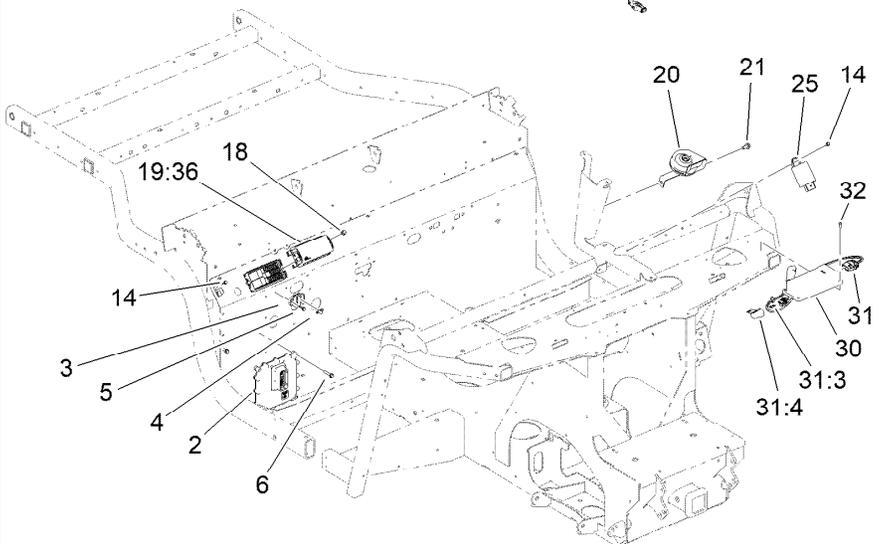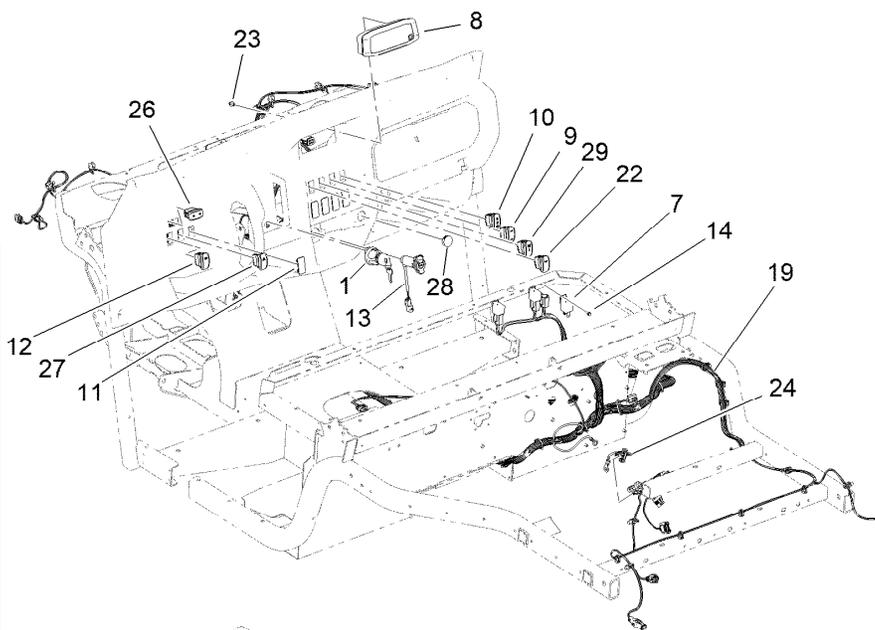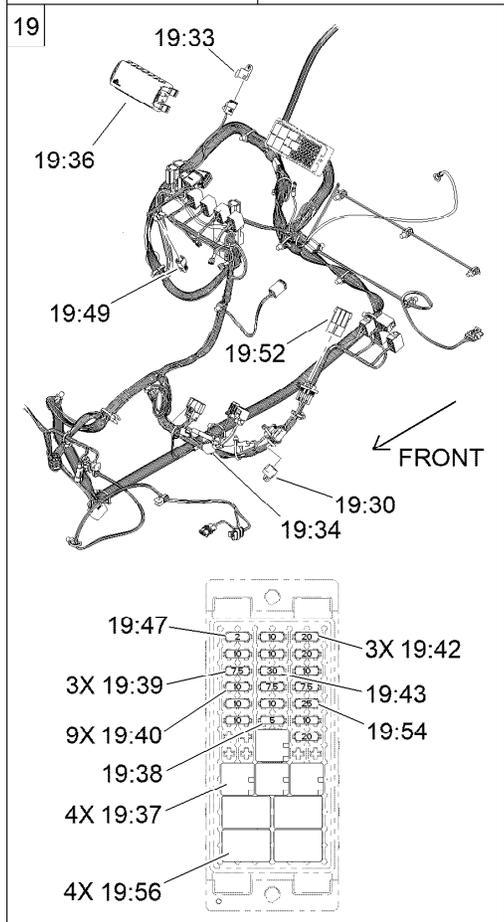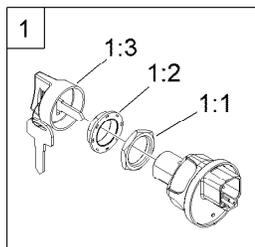

Electrical Assembly (continued)


Ref.	Part Number	Qty.	Description
22	144-2415	1	Switch-Rocker, (On)-None-Off
23	3234-13	2	Screw-HHF
24	99-3441	1	Harness-Wire, Fusible Link
25	139-2080	1	Flasher-Dual Rate
26	144-2425	1	Switch-Rocker, On-Off-On
27	144-2400	1	Switch-Rocker, On-None-On

Ref.	Part Number	Qty.	Description
28	145-2160	1	Plug-Panel
29	145-2200	1	Switch-Rocker, (On)-On-Off
30	161-9001	1	Gateway-Telematics
31	122-2160	1	Harness-Wire
31:3	121-8861	1	Fuse-Mini Blade, 2 Amp
31:4	32180-101	1	Cover-Fuse, Single
32	32144-32	4	Screw-PPH

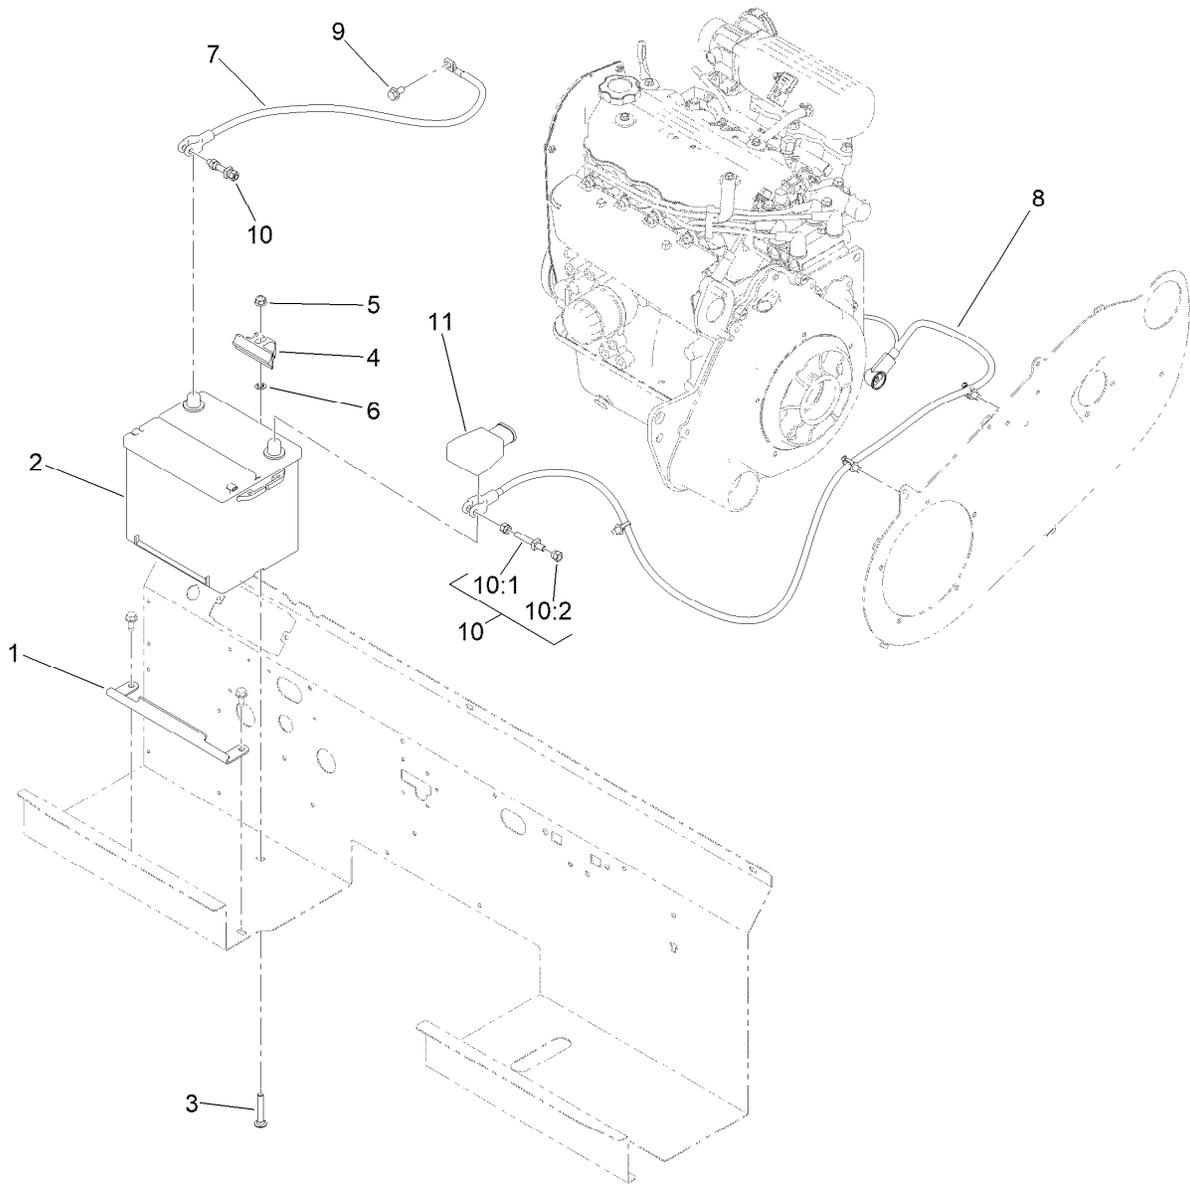

Battery Assembly


Ref.	Part Number	Qty.	Description
1	147-8051	1	Hold Down-Battery
2	106-5187	1	Battery- Dry, 12V, 525 CCA
3	3230-6	1	Bolt-CARR
4	138-6335	1	Retainer-Battery
5	119-4041	1	Nut-HF
6	109-5667	1	Nut-Push
7	122-1781	1	Cable-Battery, Bk ASM
8	122-1780	1	Cable-Battery, Rd ASM
9	33104-016	1	Screw-HHF
10	112-9921	2	Bolt ASM
10:1	32180-107	1	Bolt-Clamp, Battery
10:2	32180-108	2	Nut-Hex Shoulder
11	32180-110	1	Insulator-Lead Cast

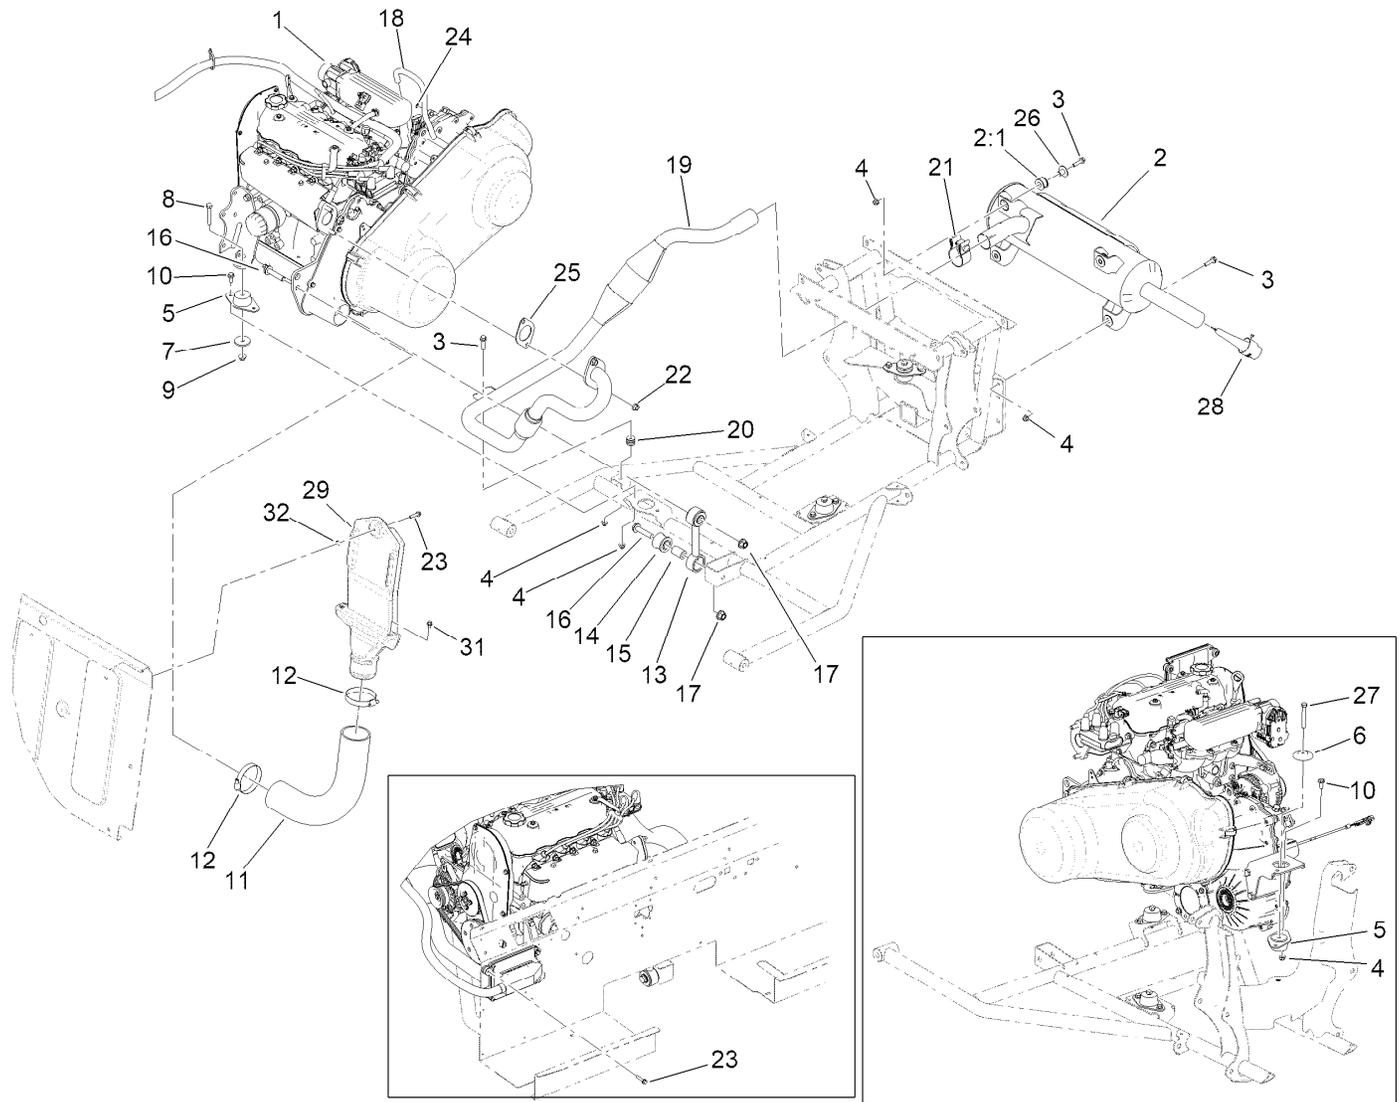

Engine Drivetrain and Exhaust Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1		1	Engine/Drivetrain ASM ●	16	3234-46	2	Screw-HHF
2	138-9335	1	Muffler ASM (With Mounts)	17	99-5107	2	Nut-HF Nylock
2:1	138-9300	4	Isolator-Mount, Muffler	18	110-4110	1	Hose-Fuel
3	3234-36	5	Screw-HHF	19	140-2617	1	Pipe-Exhaust
4	104-8300	11	Nut-HF, NI	20	131-5945	1	Isolator-Engine
5	139-0856	3	Mount-Engine	21	144-2413	1	Clamp-Manifold (1.87" DIA)
6	138-6462	1	Support-Isolator	22	136-8683	2	Nut-Lock
7	80-8560	2	Washer-Hardened	23	32144-110	5	Screw-HWH
8	323-11	2	Screw-HH	24	32151-86	1	E-Ring
9	104-8301	2	Nut-HF, NI	25	145-2119	1	Gasket-Exhaust
10	3234-47	6	Screw-HHF	26	138-9301	4	Mount-Top Hat, Muffler
11	147-2704	1	Duct-Inlet, Cvt	27	323-12	1	Screw-HH
12	2412-125	2	Clamp-Hose	28	144-2433	1	Arrester- Spark, 1.75"
13	140-4685	1	Link Rod ASM	29	147-2700	1	Hood-Cvt Intake
14	140-4697	2	Bushing, Rubber	31	3234-26	2	Screw-HHF
15	109-5010	2	Spacer	32	1-803037	1	Nut-Retaining

● Not serviced separately

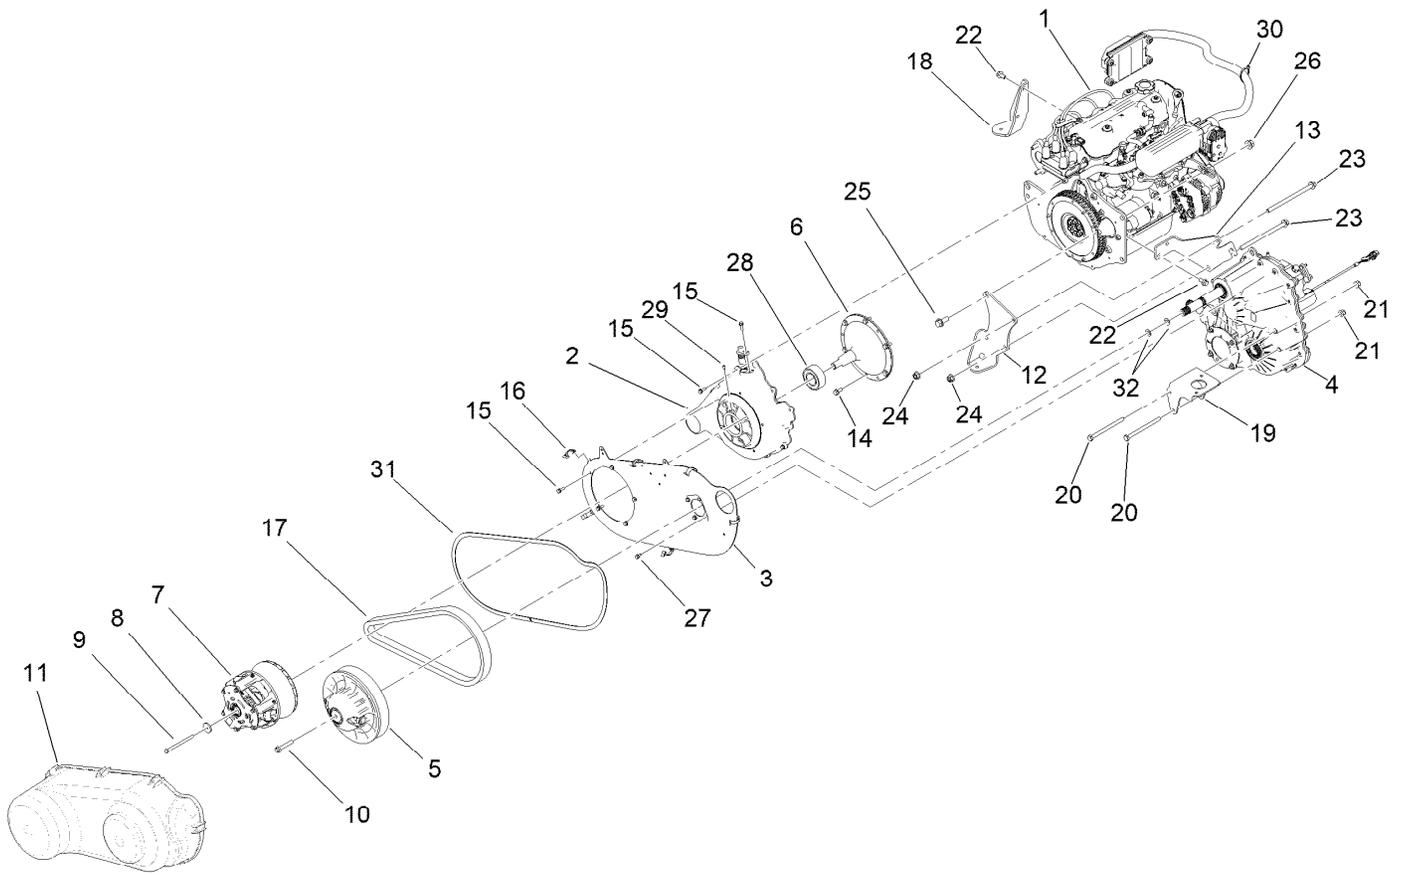

Engine, Transaxle and Clutch Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-2216	1	Engine (Gas, 40 HP)	18	147-8093	1	PSI Front Engine Mount ASM
2	145-2143	1	Housing-Flywheel, Gas	19	140-2624-0P	1	Bracket-Drivetrain, Rear
3	161-5254	1	Plate-Spanner	20	33115-140	2	Screw-HH
4	140-2611	1	Transaxle ASM	21	103-9511	2	Nut-Flg
5	147-8173	1	Clutch-Secondary	22	120-4839	4	Screw-HHF
6	145-2145	1	Adapter-Clutch	23	140-2689	2	Screw-HH
7	147-8172	1	Clutch-Primary	24	114-8417	2	Nut-HF, NI
8	104-6550	1	Washer-Clutch	25	3234-38	2	Screw-HHF
9	99-7201	1	Screw-HH	26	99-5107	2	Nut-HF Nylock
10	140-4777	1	Screw-HHF	27	104-2628	4	Screw
11	140-2603	1	Enclosure-Cvt	28	145-2146	1	Bearing-Ball
12	147-8071	1	Bracket-Transmission, LH	29	133-1717	1	Screw-Set
13	145-7785-0P	1	Bracket-Trans, RH (Gas)	30	3290-378	1	Tie-Cable
14	33104-020	6	Screw-HHF	31	145-7799	1	Gasket-Cover, Cvt
15	110-3986	14	Screw	32	36-4780	2	Washer-Plain
16	140-4669	6	Clip-Spring				
17	145-7789	1	Belt-Variable				

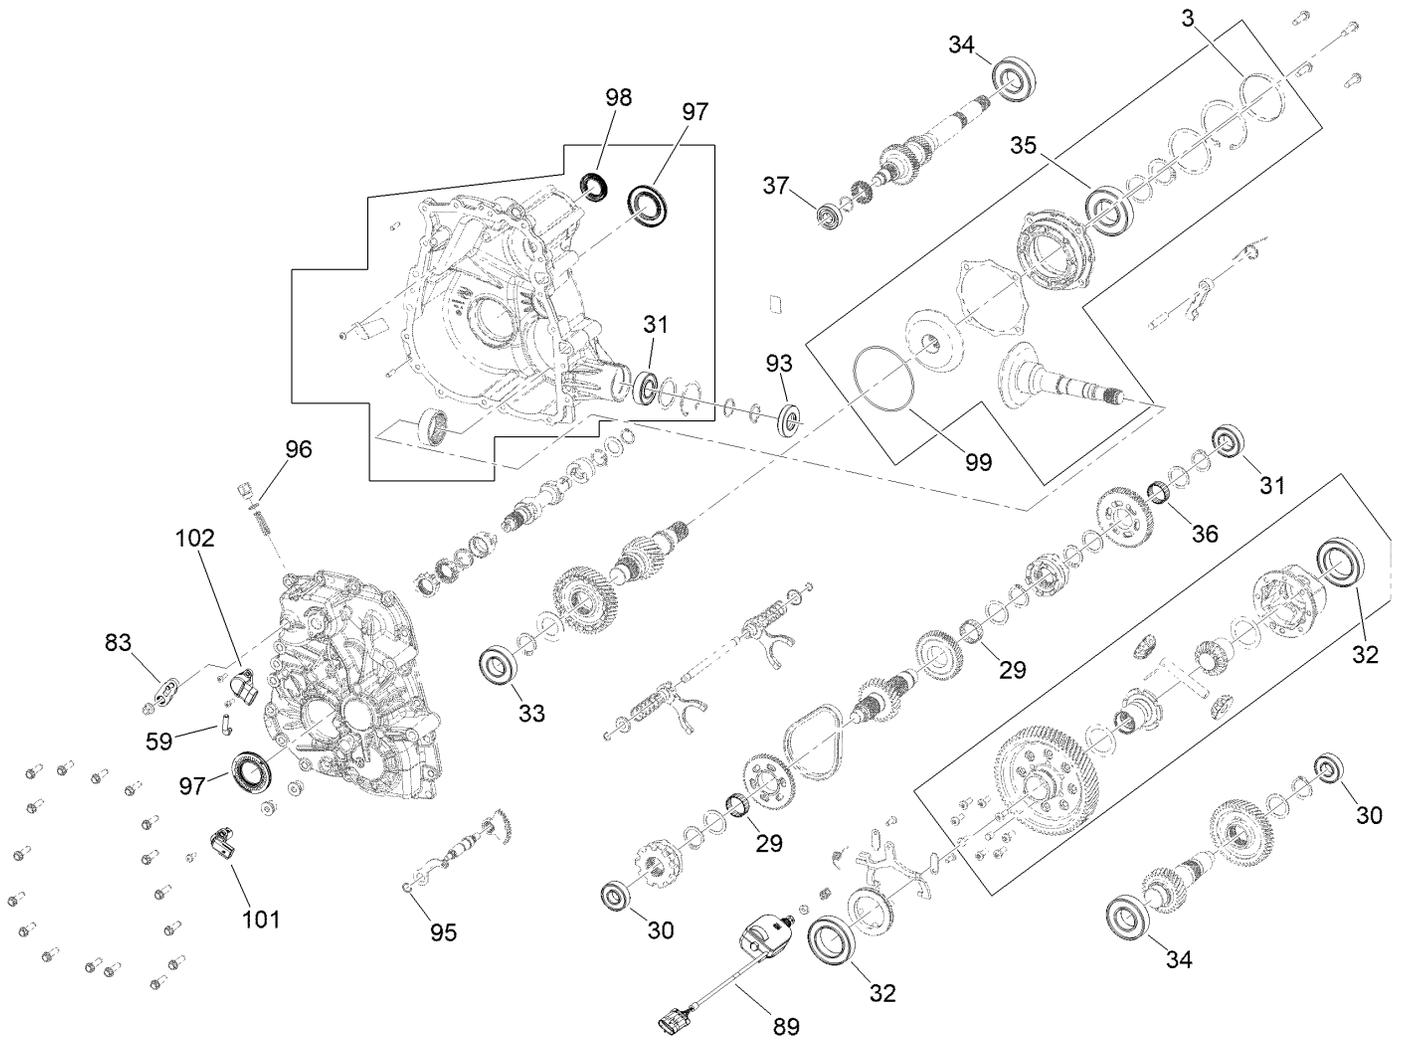

Transaxle Assembly No. 140-2611


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
3	145-2030	1	Plug-Expansion 80MM X 10MM	95	145-2043	1	O-Ring
29	130-4616	2	Bearing-Needle	96	145-2044	1	O-Ring, 0.530 ID X .082 Wide
30	145-2031	2	Bearing, Ball 6204 C3	97	145-2045	2	Seal, Triple Lip, Viton, 40 X 70 X 7
31	145-2032	2	Bearing, Ball 6205 C3	98	145-2046	1	Seal, Triple Lip, 1.180 X 1.8520 X 0.315
32	130-4666	2	Bearing-Ball	99	145-2047	1	O-Ring, Nitrile
33	145-2033	1	Bearing, Ball 6206 C3	101	145-2039	1	Sensor,Speed, Transaxle
34	145-2034	2	Bearing, Ball 6207 C3	102	145-2040	1	Sensor, Assembly, Rotary Position
35	145-2035	1	Bearing, Ball 6208 C3	103	145-2048	1	Toro Premium Synthetic Transaxle Fluid ●
36	130-4618	1	Bearing-Needle				
37	145-2036	1	Bearing, Ball 6203 C3				
59	145-2037	1	Tube,Vent, 90-1/4" Hose				
83	145-2038	1	Subassembly, Bellcrank				
89	145-2041	1	Shift Actuator, 2 Position				
93	145-2042	1	Seal, Triple Lip, 0.984 X 2.047 X 0.394				

● Not illustrated

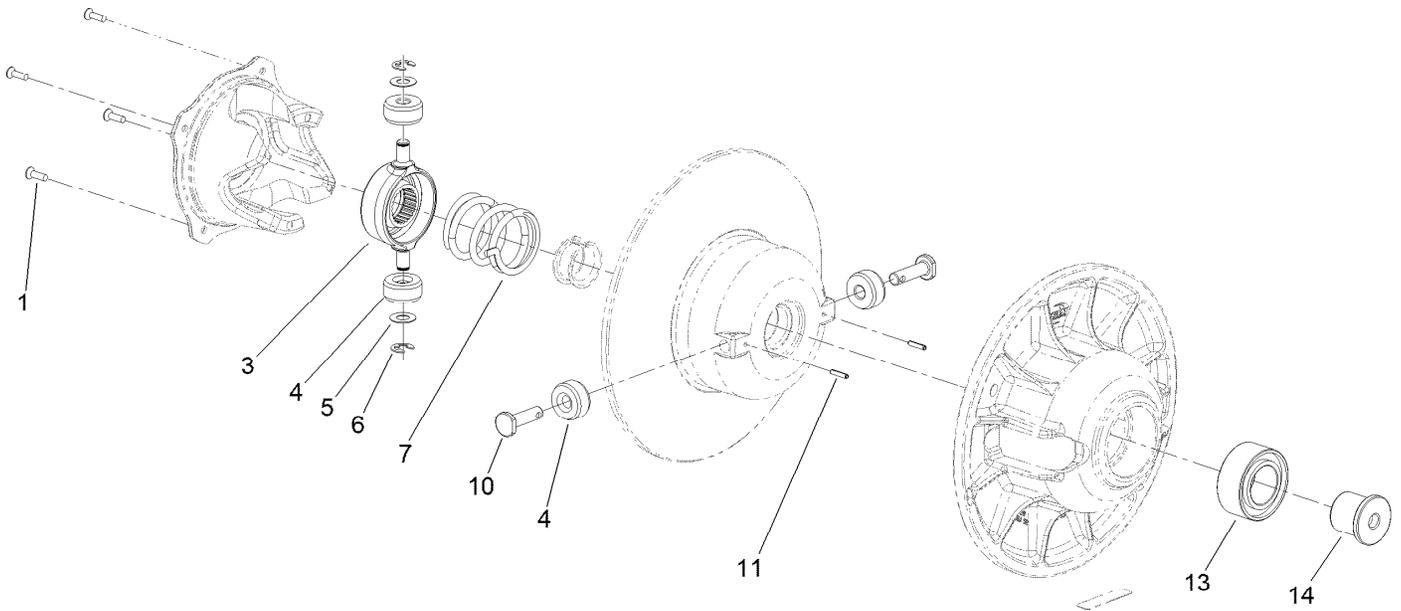


Secondary Clutch Assembly No. 147-8173

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-2104	4	Screw, Machine Torx Sfch 10-32 X .625
3	145-2025	1	Spider 9.5 25T Mach
4	145-2026	4	Roller-Clutch 1.135 X .550
5	130-4059	2	Washer-Thrust
6	130-4058	2	E-Ring
7	145-2027	1	Spring-Comp 2.00 OD Secondary 175-320
10	130-4063	2	Pin-Roller
11	130-4065	2	Pin-Spring, Slotted
13	145-2028	1	Bearing-Ball
14	147-8180	1	Sleeve-Shoulder

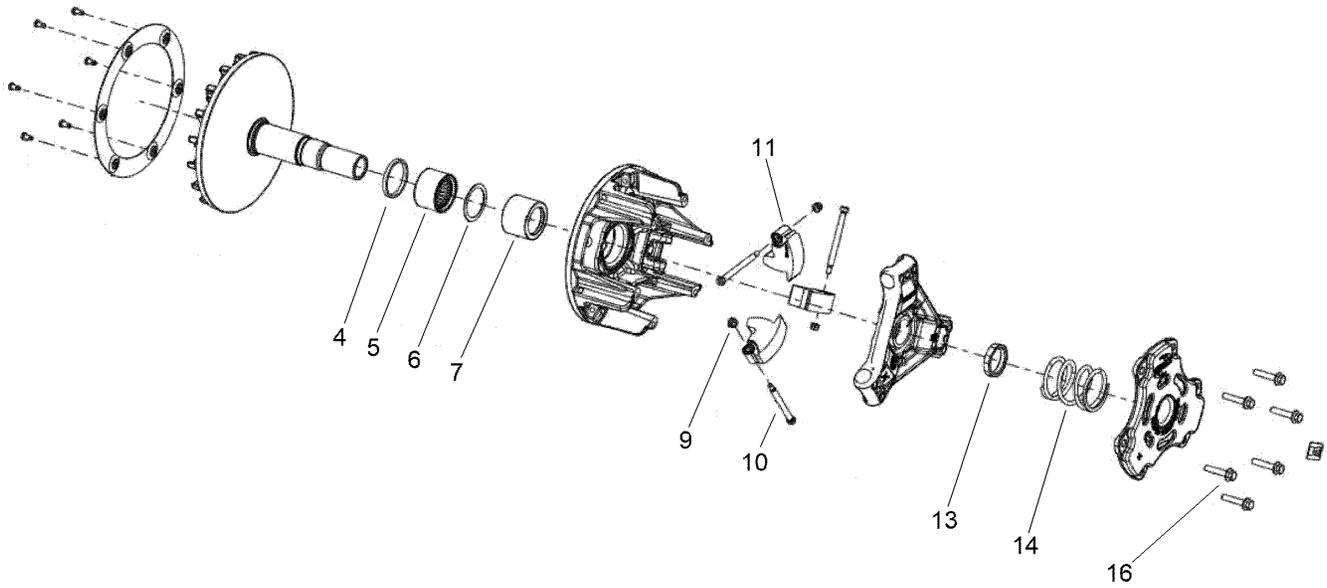

Primary Clutch Assembly No. 147-8172


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	145-2018	1	Washer-Thrust
5	147-8178	1	Subassembly, Idler Primary
6	130-4069	1	Washer-Thrust
7	147-8177	1	Cap-Idler Sleeve
9	145-2103	3	Nut, Lock Hex 10-24 Flexloc
10	119-6016	3	Screw-Shoulder
11	145-2021	3	Weight-Clutch M17-198
13	161-5255	1	Nut-Jam
14	145-2022	1	Spring-Compression 2.00 OD Primary 70-13
16	145-2024	6	Screw-Hex Flange 1/4-20 X 1.25

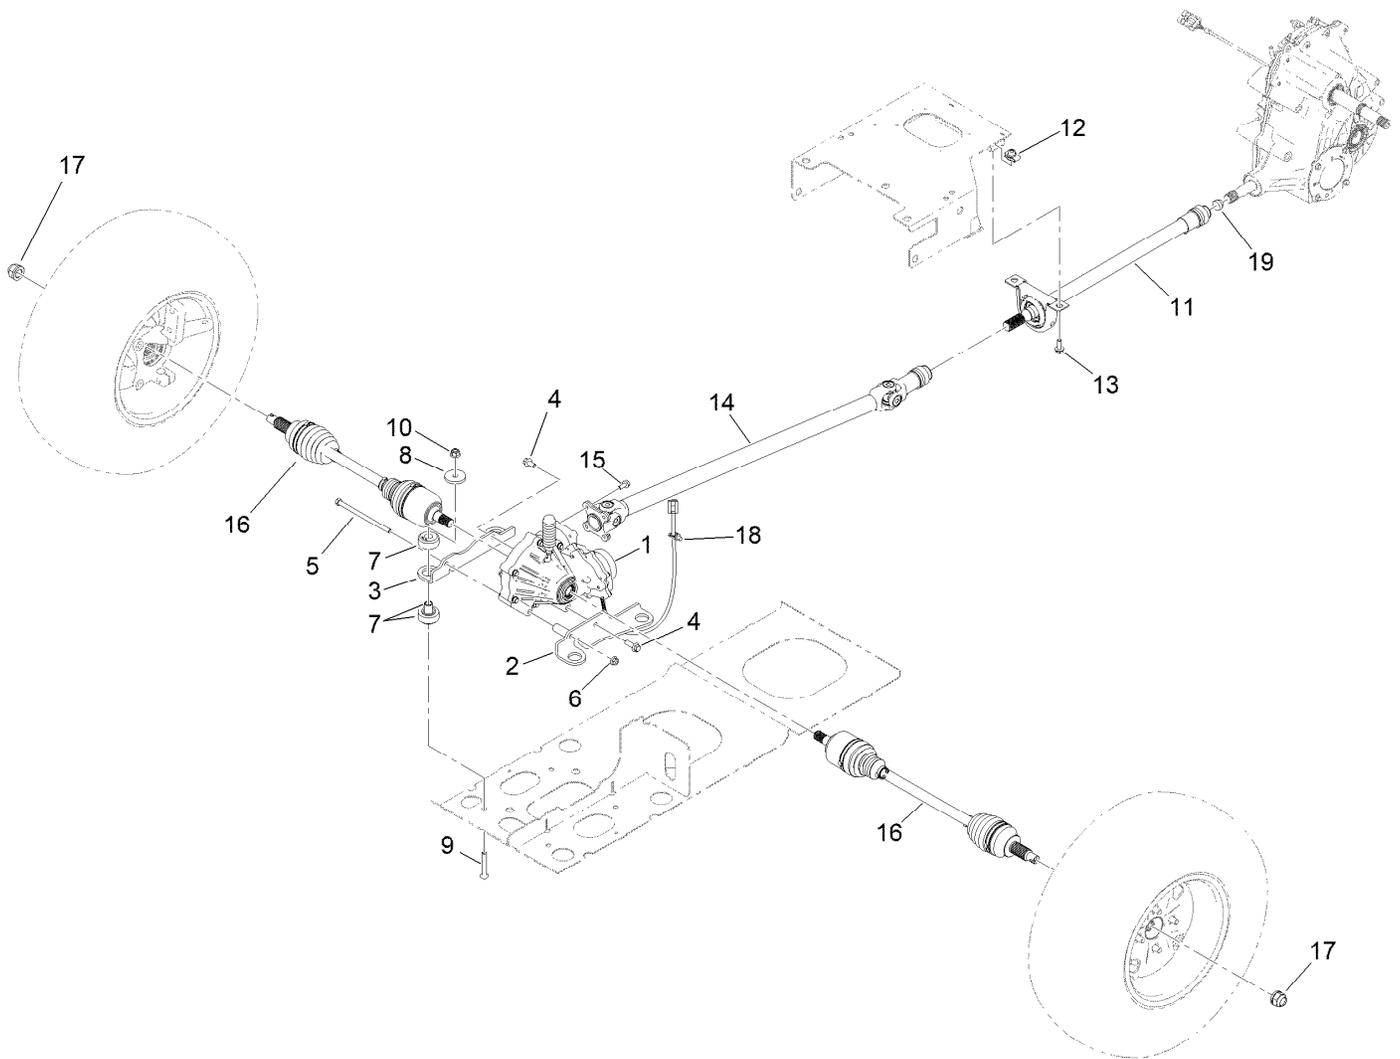

Front Differential and Driveshaft Assembly

Ref.	Part Number	Qty.	Description
1	140-4752	1	Differential-Front
2	147-8083	1	Mount ASM-Differential, LH
3	161-5242	1	Mount-Differential, RH
4	145-7778	2	Screw-HHF
5	323-26	1	Screw-HH
6	104-8301	1	Nut-HF, NI
7	147-2708	4	Mount-Isolator
8	109-6919	4	Washer-Plain
9	144-2215	4	Screw-Bht
10	114-8417	4	Nut-HF, NI


Ref.	Part Number	Qty.	Description
11	140-4771	1	Driveshaft ASM-Intermediate
12	105-4886	2	Nut-Tinnerman
13	3234-42	2	Screw-HHF
14	140-2647	1	Driveshaft ASM
15	139-3392	4	Screw-Lock
16	140-2644	2	Cv Axle ASM, Front
17	115-2164	2	Nut-Spindle
18	32180-030	1	Clip-Tie
19	145-7787	1	Bumper-Drive Shaft

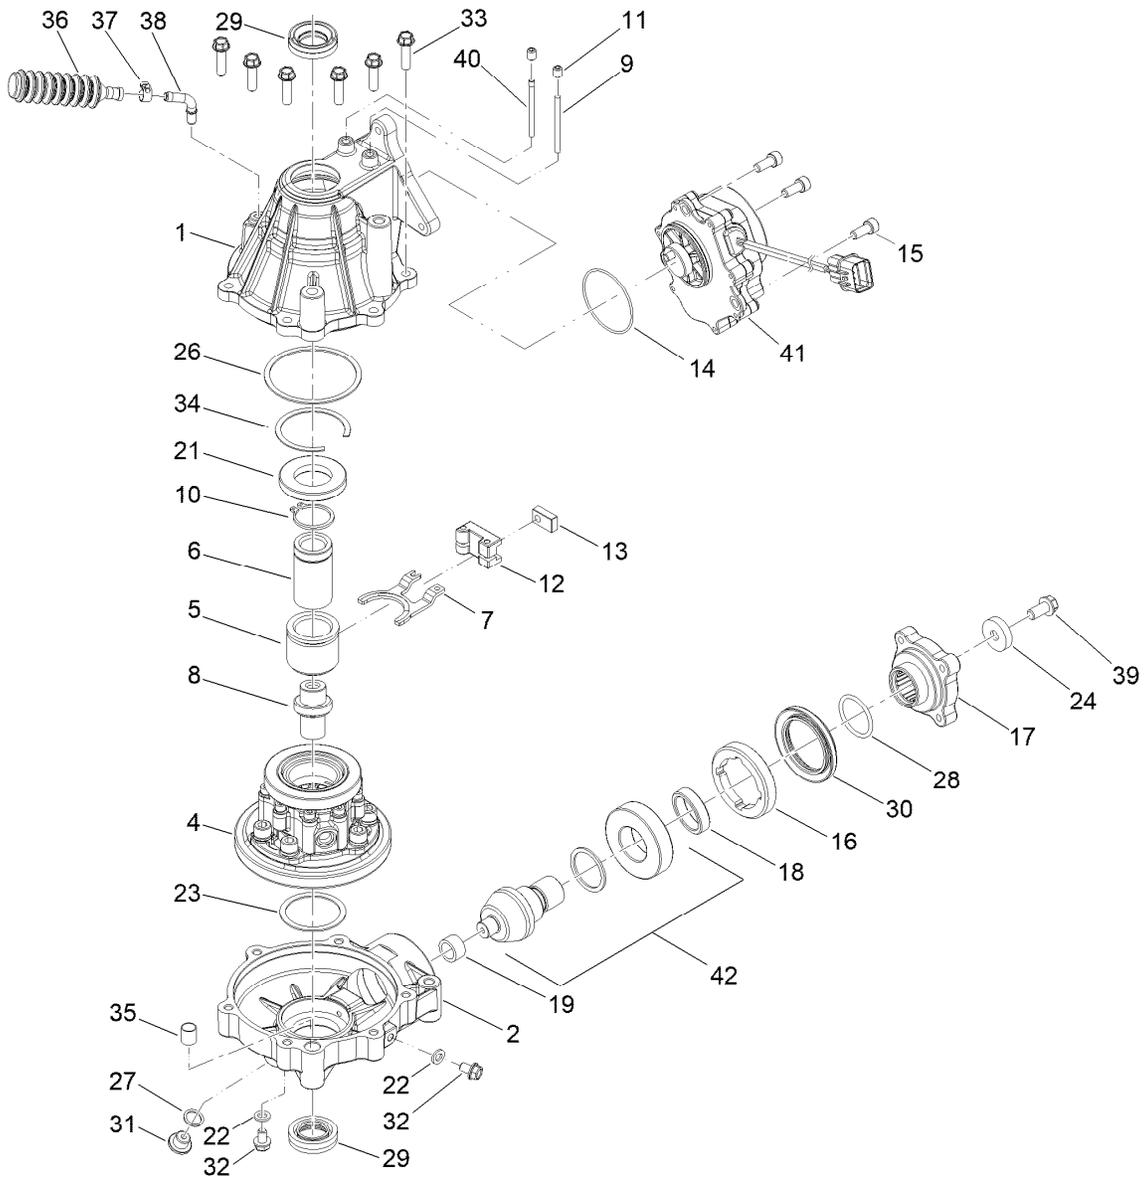

Front Differential Assembly No. 140-4752


Ref.	Part Number	Qty.	Description
1	145-7895	1	Cover
2	145-7896	1	Housing
4	145-7898	1	Planet Carrier Sub-ASM
5	145-7899	1	Clutch
6	145-7900	1	Support Ring
7	145-7901	1	Fork
8	145-7902	1	Gear A
9	145-7903	1	Pin, 5 X 62L
10	145-7904	1	Retaining Ring, External 34
11	145-7905	2	Bolt, M10 X 10L
12	145-7906	1	Slider A
13	145-7907	1	Slider B
14	145-7908	1	O-Ring, 62 I.D. X 2 Wide
15	145-7909	3	Screw, Socket Head, M8X20L
16	145-7910	1	Nut, M74
17	145-7911	1	Flange
18	145-7912	1	Bushing
19	145-7913	1	Needle Bearing, Hk1612
21	145-7915	1	Ball Bearing, 16007
22	145-7916	2	Washer, 8.2 X 16 X 2T

Ref.	Part Number	Qty.	Description
23	145-7917	1	Shim, 50.5 X 61
24	145-7918	1	Lock Washer
26	145-7920	1	Shim, 79 X 89
27	145-7921	1	Washer, 14.5 X 22 X 1T
28	145-7922	1	O-Ring, P26
29	145-7923	2	Seal, 25 X 45 X 7T X 11T
30	145-7924	1	Seal, 40 X 75 X 8T X 12T
31	145-7925	1	Plug, M14 X 9.5L
32	145-7926	2	Screw, Hex Head, M8 X Pi.25 X 12L
33	145-7927	6	Screw, Hex Head, M8 X P1.25 X 30L
34	145-7928	1	Retaining Ring, Internal 62
35	145-7929	1	Location Pin
36	145-7930	1	Breathing Tube
37	145-7931	1	Ring
38	145-7932	1	Tube, Vent, 90 DEG
39	145-7933	1	Screw, Hex Head, M10 X P1.25 X 20L
40	145-7934	1	Pin, 5 X 4.63 X 62L

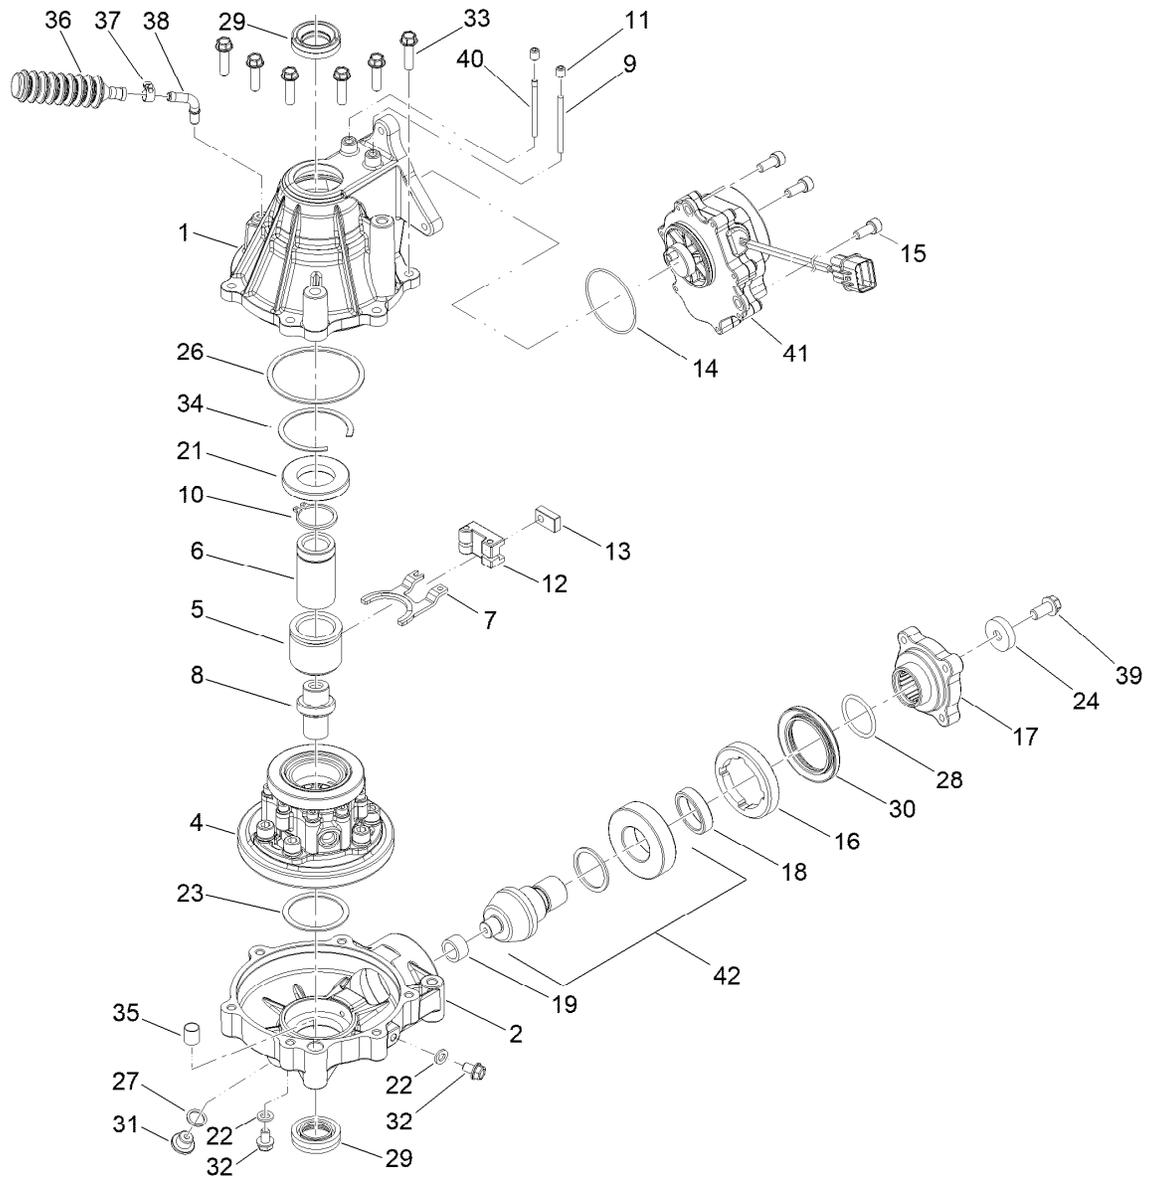


Front Differential Assembly No. 140-4752 (continued)

Ref.	Part Number	Qty.	Description
41	145-7935	1	Actuator
42	163-4939	1	Pinion Service ASM

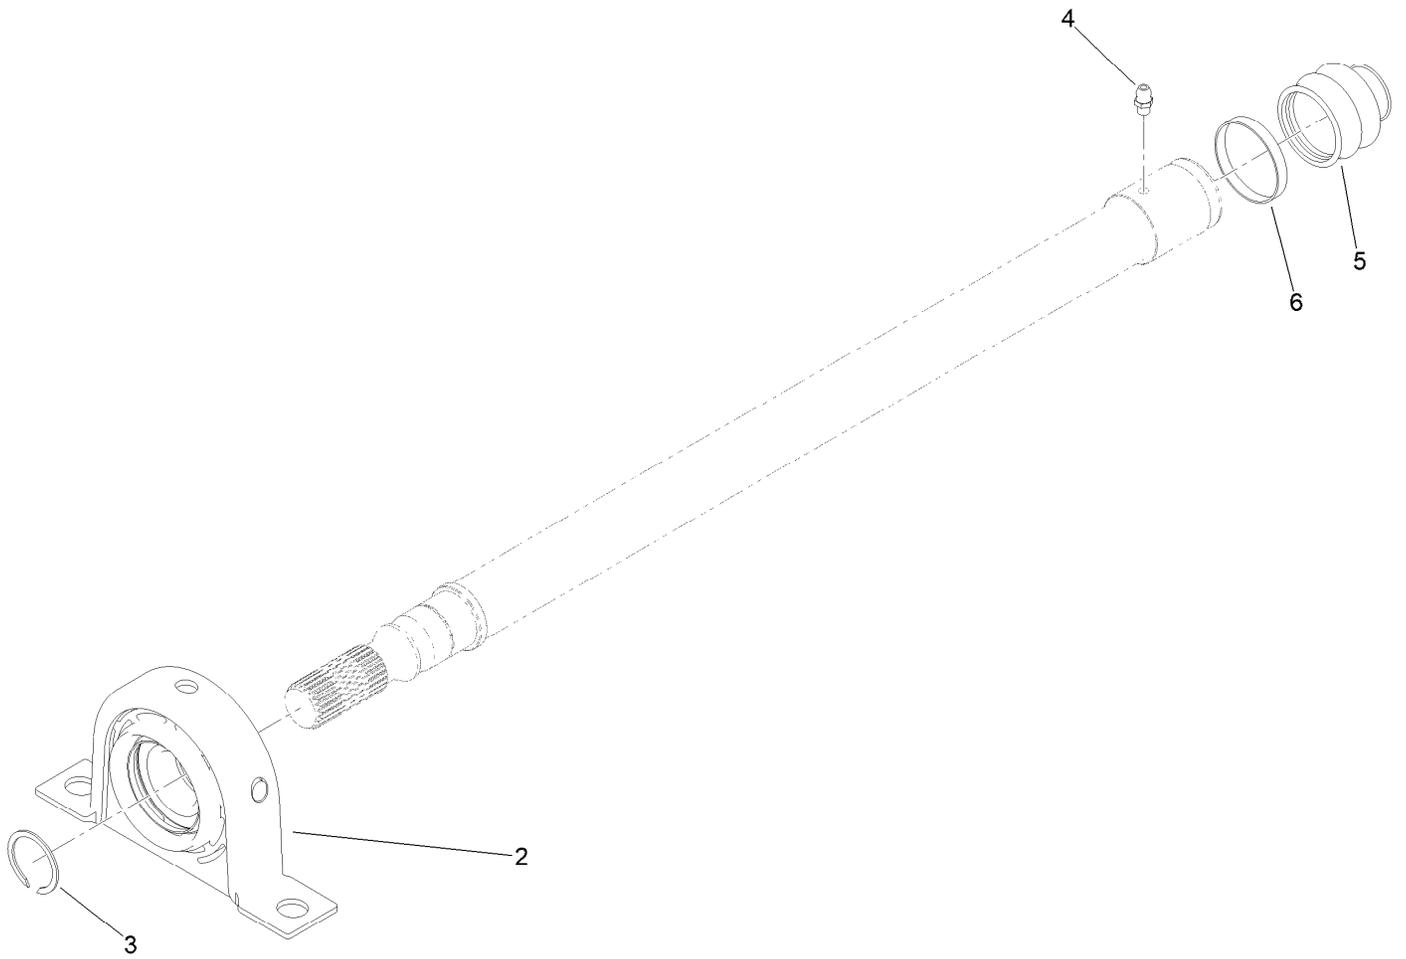


Intermediate Driveshaft Assembly No. 140-4771

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	139-4442	1	Bearing-Hanger
3	144-2208	1	Retainer-Bearing
4	302-5	1	Fitting-Grease
5	140-4772	1	Boot-Joint, Slip
6	140-4760	1	Band

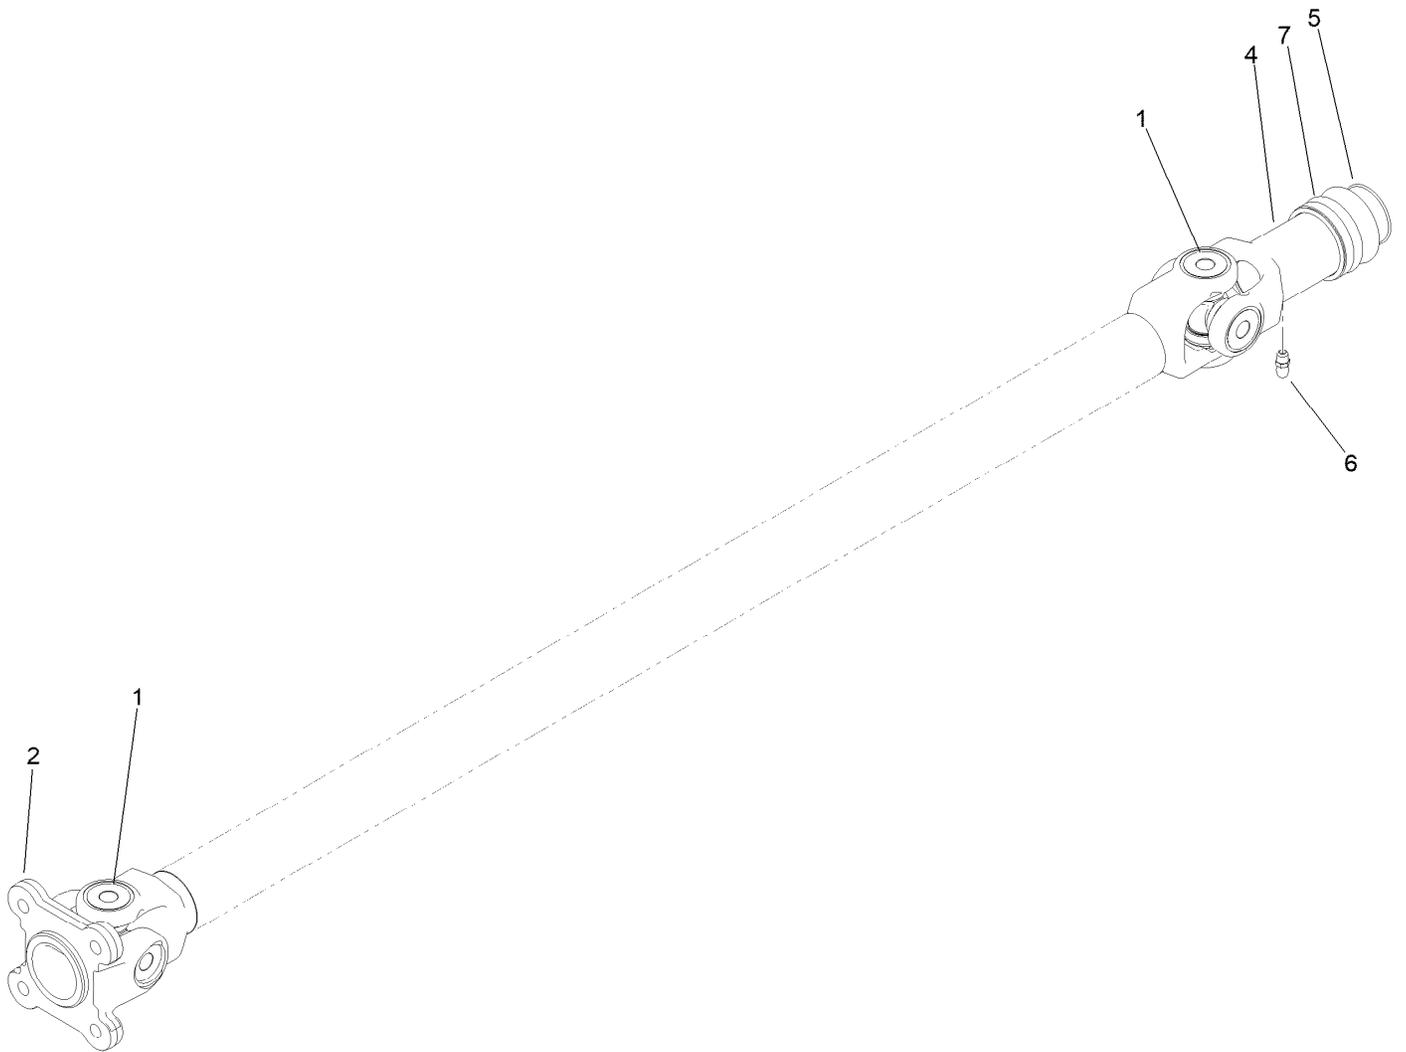


Driveshaft Assembly No. 140-2647

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-9162	2	U-Joint Kit
2	138-9178	1	Yoke-Flange
4	140-4753	1	Yoke-Slip, Female
5	140-4754	1	Boot-Joint, Slip
6	110-4755	1	Fitting-Grease
7	140-4760	1	Band

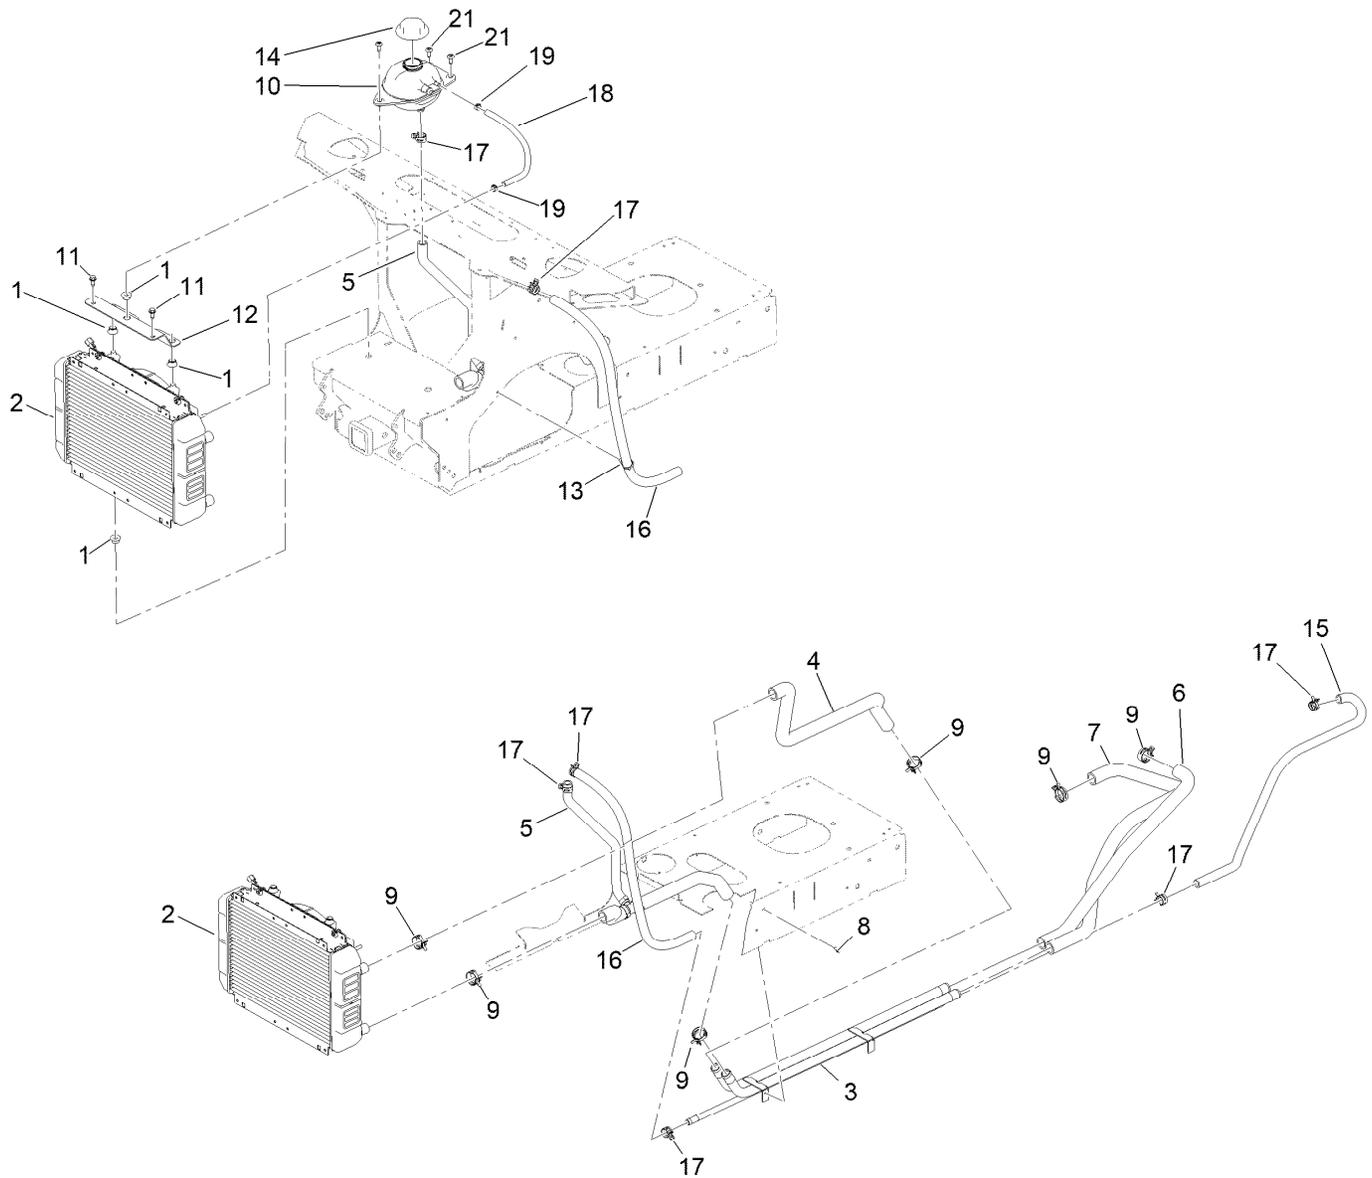


Cooling System Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-6828	4	Bushing-Flange	12	147-8056-05	1	Bracket-Mount, Radiator
2	161-5206	1	Radiator ASM	13	32180-030	2	Clip-Tie
3	137-2681	1	Tube ASM-Coolant	14	161-5218	1	Ratcheting Coolant Cap ASM
4	140-2628	1	Hose-Radiator, Upper	15	144-2220	1	Hose-Coolant, Minor
5	140-4751	1	Hose ASM-Coolant	16	140-4757	1	Hose-Coolant
6	140-2634	1	Hose-Coolant, Upper	17	144-2248	5	Clamp-Sc Band
7	144-2242	1	Hose-Coolant, Lower	18	120-5019	1	Hose-Coolant
8	32144-4	2	Screw-HWH	19	92-2379	2	Clamp-Hose
9	144-2246	8	Clamp-Sc Band	21	138-9753	3	Screw
10	147-8086	1	Coolant Tank ASM				
11	32144-70	2	Screw-HWHTF				

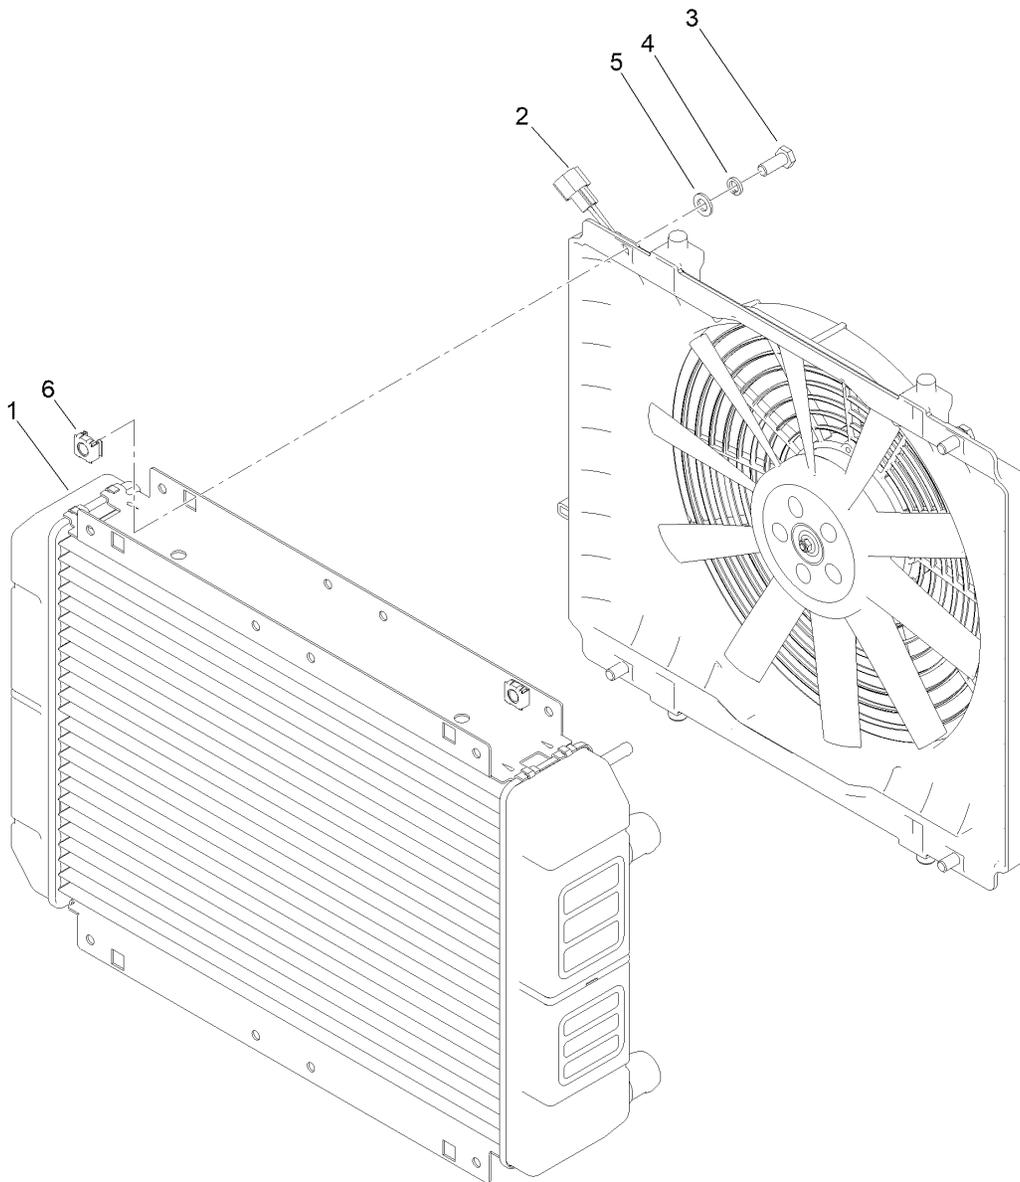

Radiator Assembly No. 161-5206


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-5219	1	Radiator
2	161-5239	1	Fan Shroud ASM
3	33114-020	4	Screw-HH
4	03469	4	Washer-Spring
5	115-7370	4	Washer-Plain
6	161-5247	4	Nut-Square, Caged

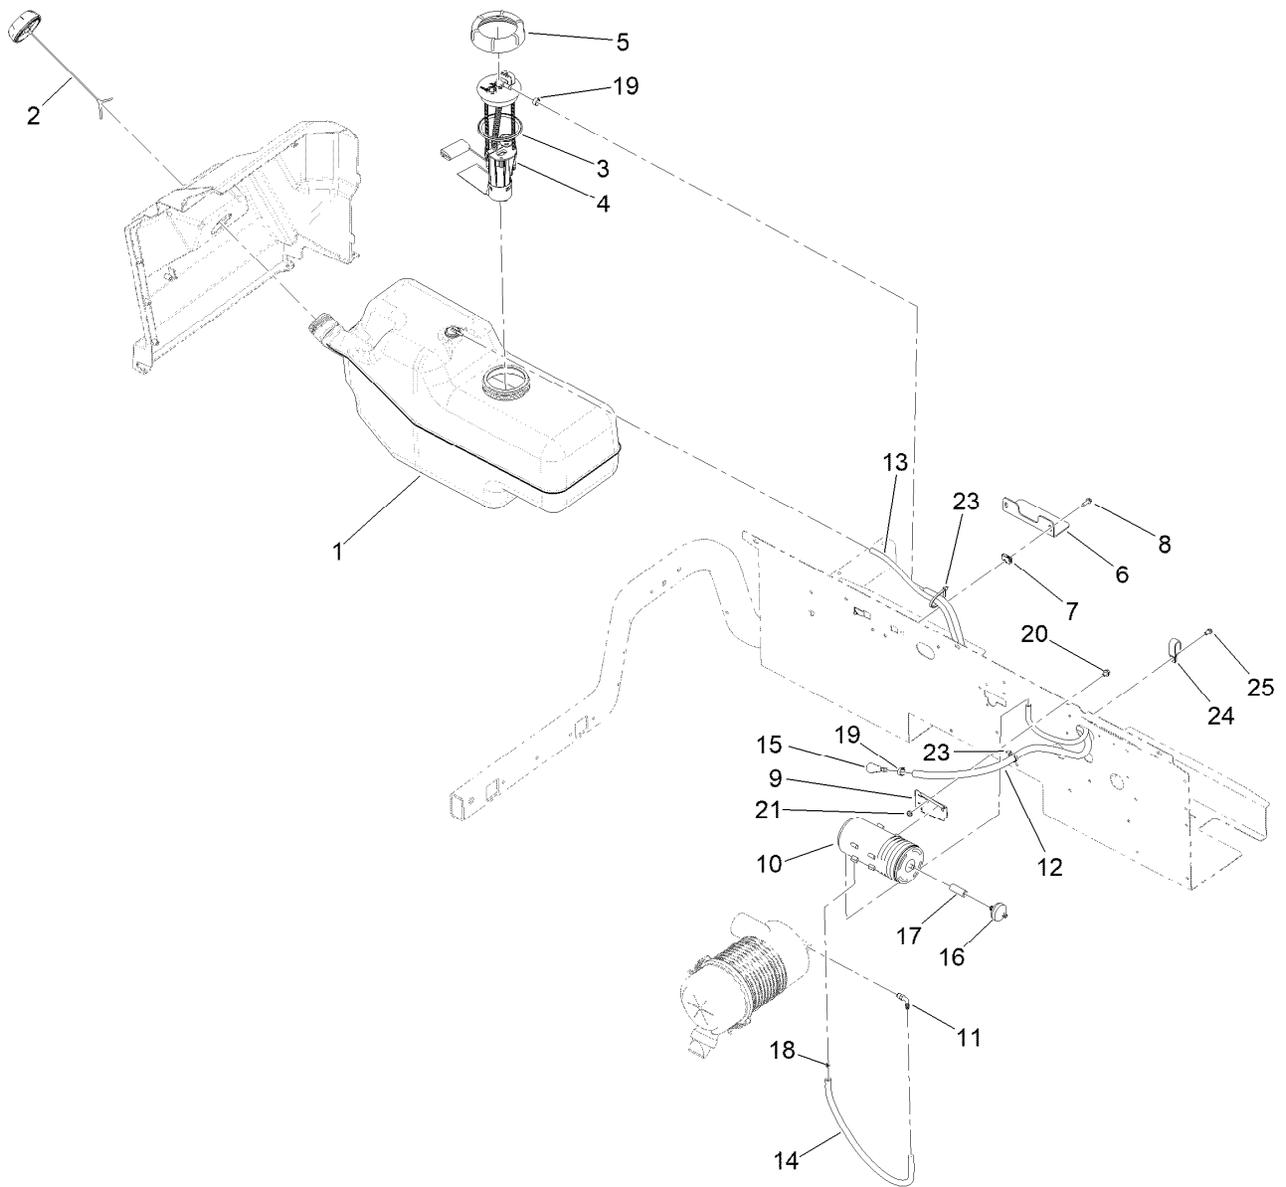

Fuel System Assembly


Ref.	Part Number	Qty.	Description
1	137-2711	1	Fuel Tank ASM (8 Gallon Gas)
2	126-1789	1	Cap-Fuel, Ratcheting
3	138-9333	1	Gasket-Fuel Sender
4	138-9330	1	Fuel Pump ASM
5	138-9332	1	Cap-Fuel Sender
6	163-4937	1	Bracket-Mount, Fuel Tank (Mty)
7	107069	2	Clip
8	49-2040	2	Screw-HWHTF
9	114-0292	1	Bracket-Canister, Carbon
10	117-1221	1	Canister-Carbon, 800Cc
11	94-7222	1	Barb-Hose

Ref.	Part Number	Qty.	Description
12	144-2247	1	Hose-Fuel
13	119-3517	1	Hose-Fuel
14	109-0298	1	Line-Fuel
15	125-2921	1	Fitting-Fuel
16	115-7854	1	Filter-Fuel, Inline
17	106-5317	1	Hose-Fuel
18	120-2038	1	Cartridge-Valve, Check
19	92-2379	2	Clamp-Hose
20	3234-26	2	Screw-HHF
21	3296-56	2	Nut-Lock, NI
23	3290-378	3	Tie-Cable
24	92-5753	2	Clamp-Hose
25	32144-4	2	Screw-HWH

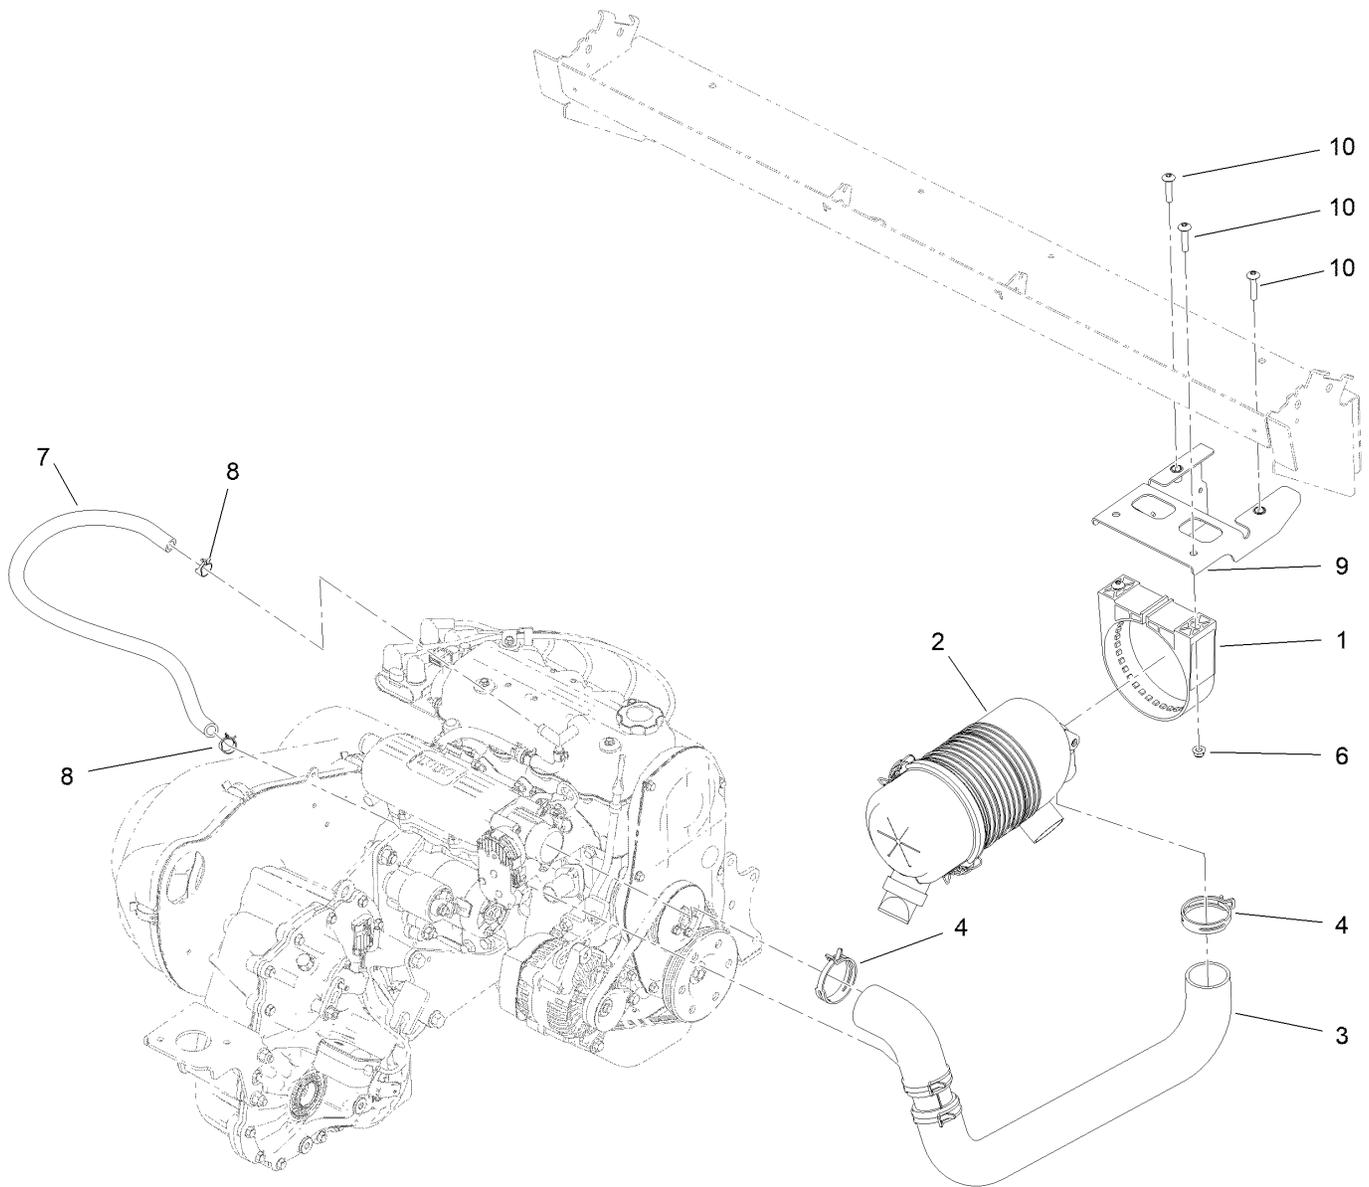


Air Cleaner Assembly

Ref.	Part Number	Qty.	Description
1	98-4525	1	Bracket-Cleaner, Air
2	106-5277	1	Air Cleaner ASM
3	145-2118	1	Hose ASM-Intake
4	144-2200	2	Clamp-Sc Band
6	119-4041	2	Nut-HF
7	127-1777	1	Hose-Fuel
8	2412-143	2	Clamp-Hose
9	147-8105	1	Air Cleaner Bracket ASM
10	126-7439	4	Screw-Torx

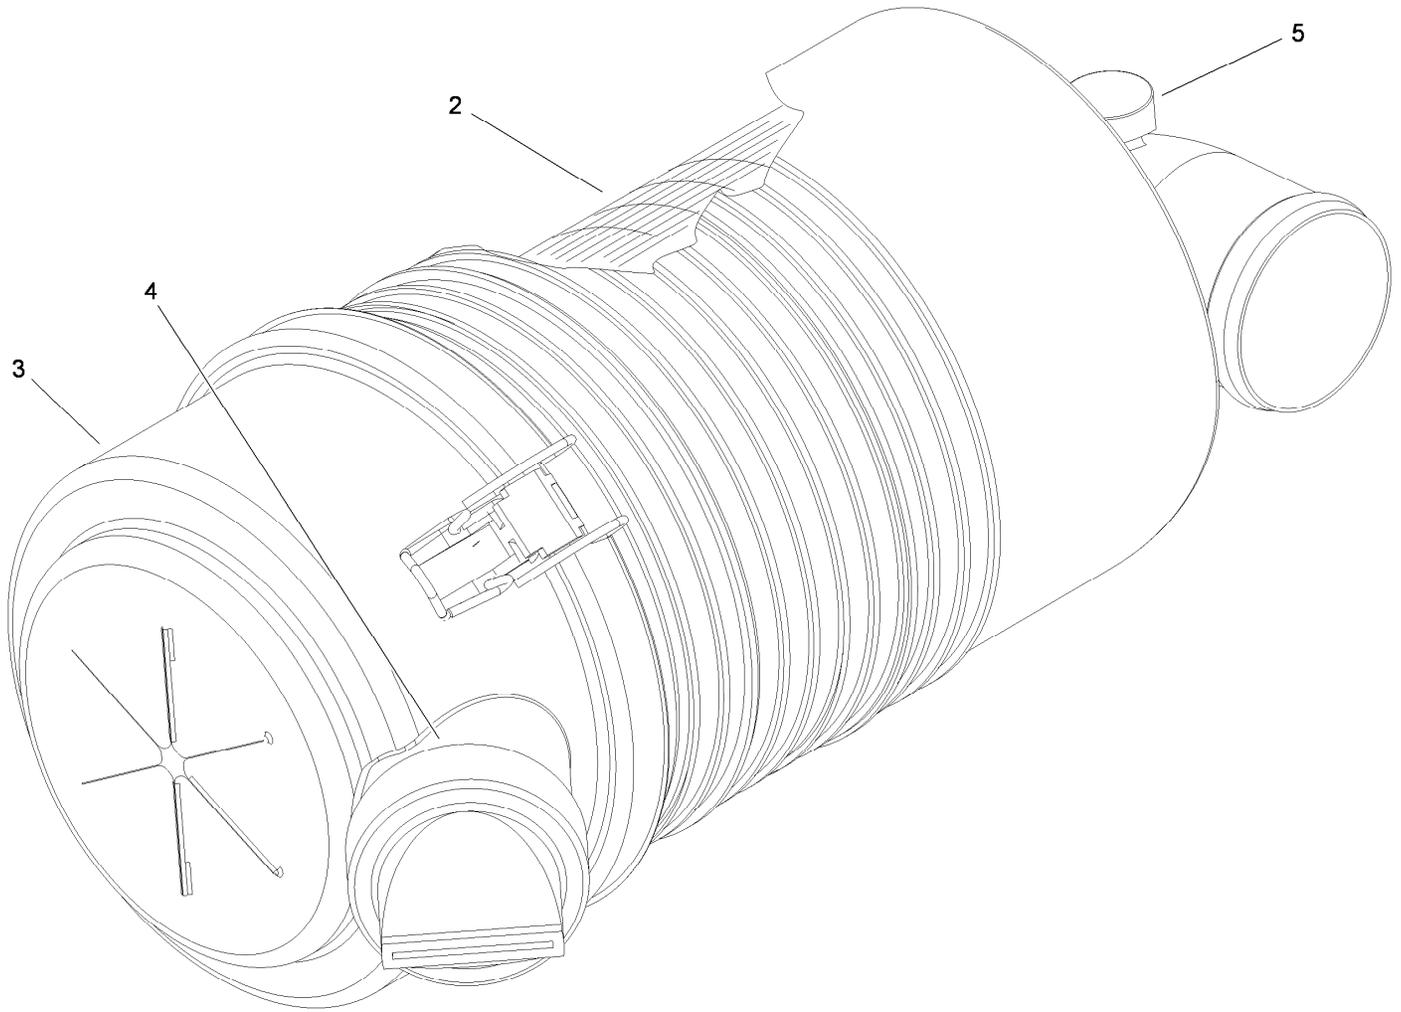


Air Cleaner Assembly No. 106-5277

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	108-3810	1	Filter-Air
3	98-9771	1	Cover ASM
4	87-9400	1	Valve-Vacuator
5	285-17	1	Plug-Pipe

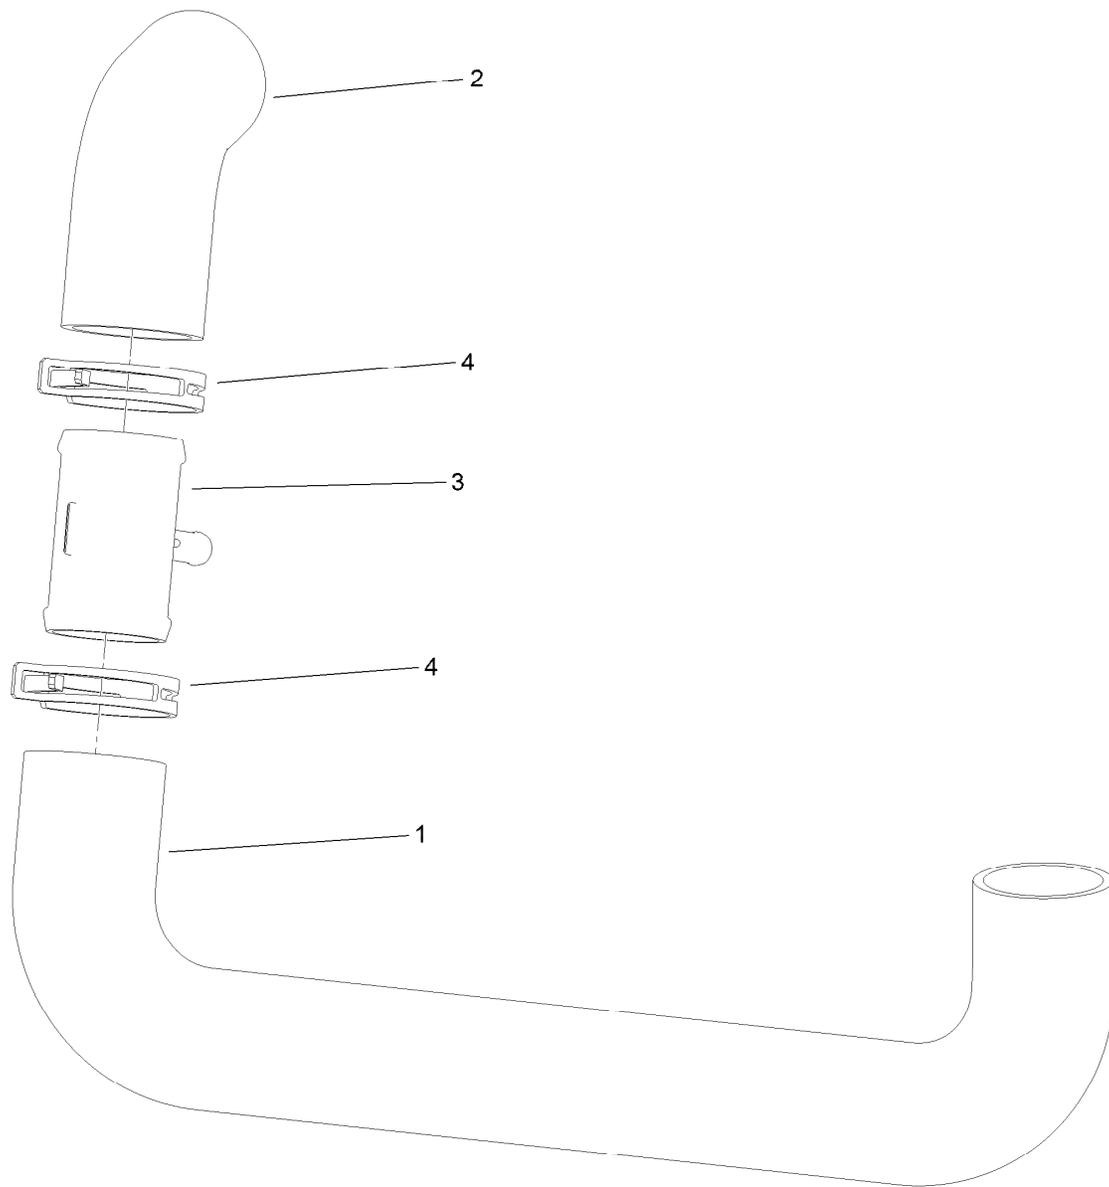


Hose Intake Assembly No. 145-2118

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-2116	1	Hose-Air Intake, A
2	145-2117	1	Hose-Air Intake, B
3	145-2112	1	Fitting-Tee
4	144-2200	2	Clamp-Sc Band

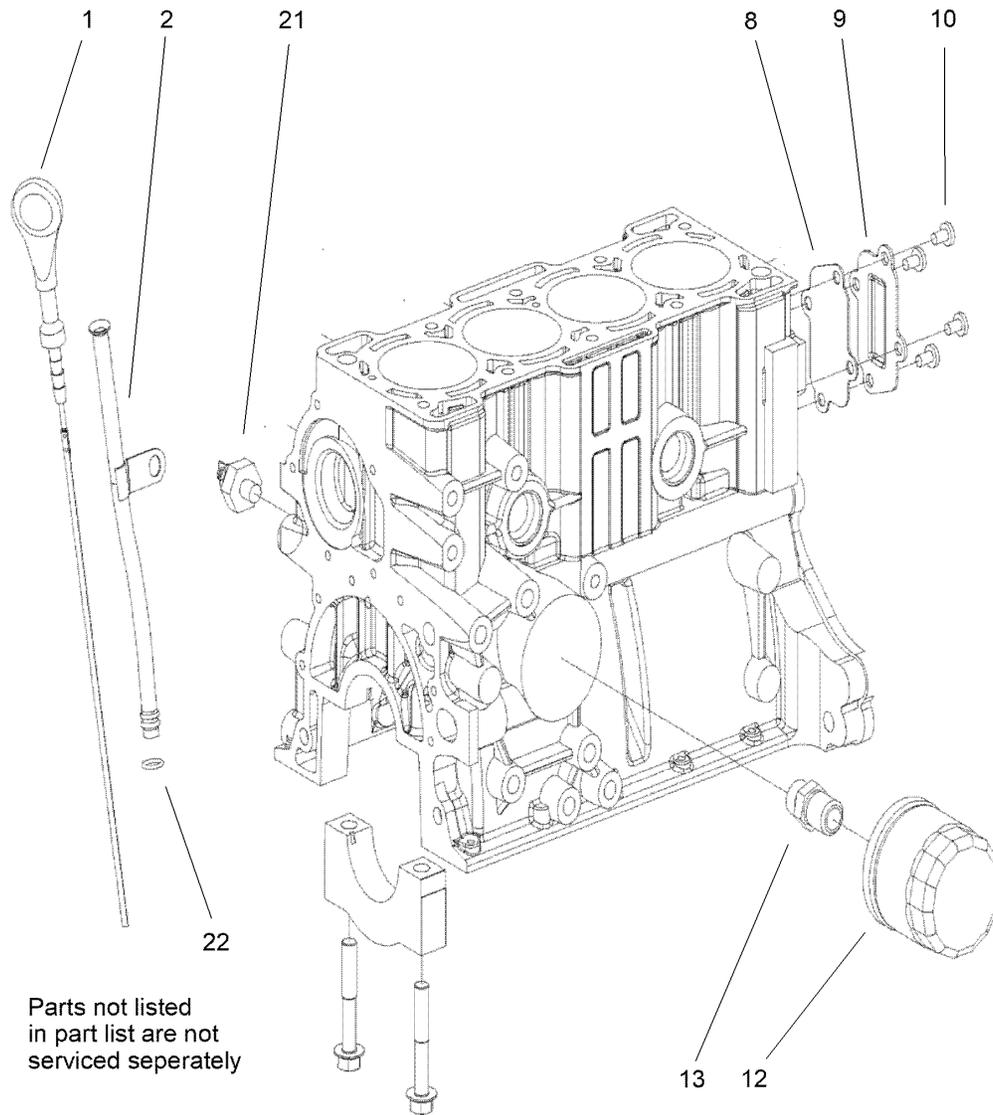


Cylinder Block Assembly

Ref.	Part Number	Qty.	Description
1	145-7937	1	Dip Stick, Oil
2	145-7938	1	Tube, Dipstick
8	145-7939	1	Gasket, Water Sealing Cover
9	145-7940	1	Cover, Water Sealing
10	145-7941	4	Bolt
12	145-7942	1	Filter, Oil
13	145-7943	1	Fitting, Oil Filter
21	145-7944	1	Switch, Oil Pressure
22	145-7945	1	Seal, Dipstick Tube

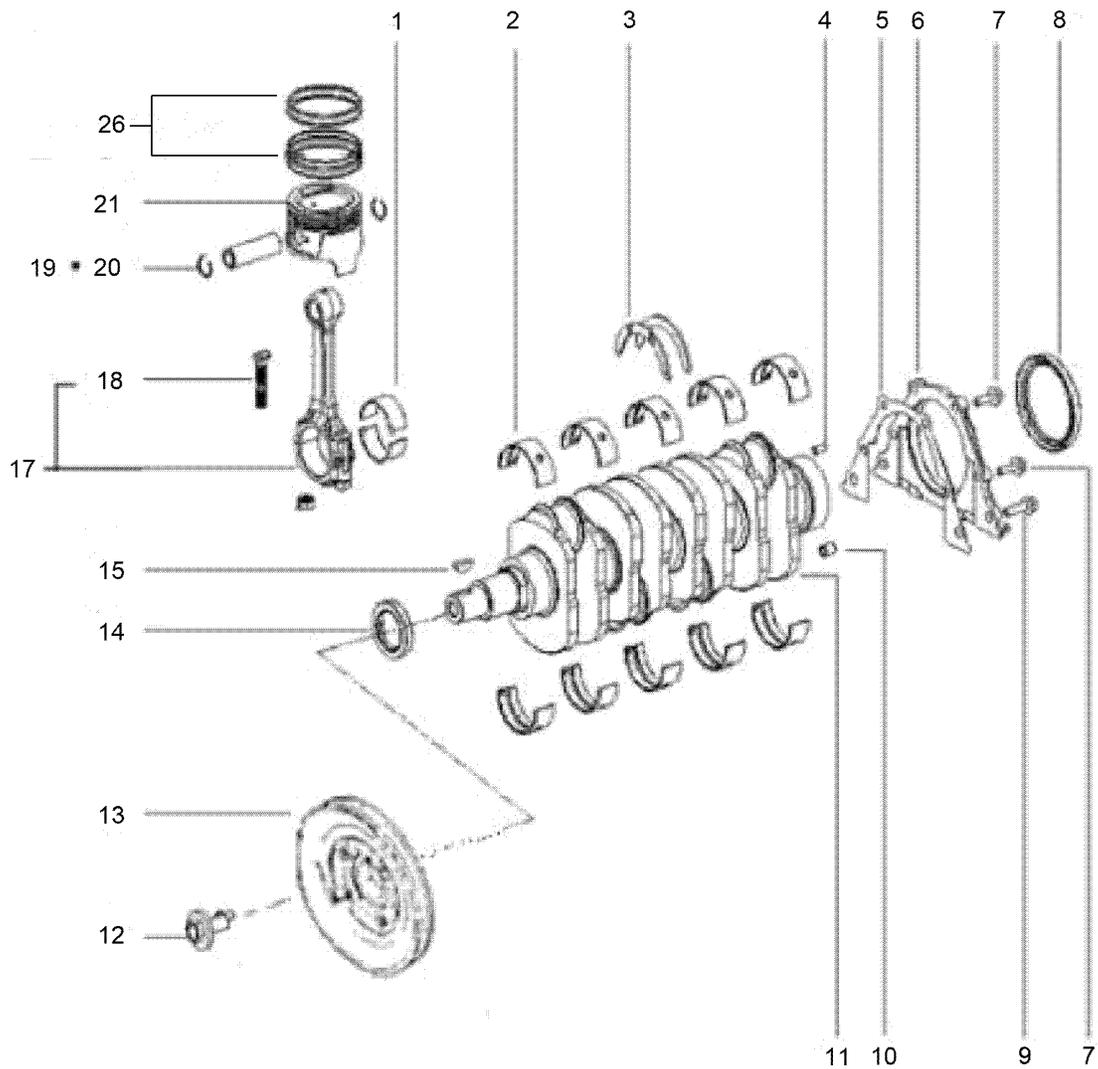


Crankshaft and Piston Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-7947	1	Bearing, Connecting Rod	12	147-2557	1	Bolt, Crankshaft Pulley
2	145-7946	1	Bearing, Main (Set Of 10)	13	147-2558	1	Pulley, Crankshaft
3	145-7948	1	Bearing, Thrust	14	147-2559	2	Seal-Oil (Front)
4	145-7949	1	Pin, Locating	15	147-2560	2	Key, Woodruff
5	147-2550	1	Gasket, Oil Seal Housing	17	147-2561	4	Connecting Rod
6	147-2551	1	Housing, Oil Seal	18	147-2562	8	Bolt-Rod, Connecting
7	147-2552	4	Bolt, Oil Seal Housing	19	147-2563	8	Clip, Piston Pin
8	147-2553	1	Seal, Oil (Rear)	20	147-2564	4	Pin, Piston
9	147-2554	2	Bolt, Oil Seal Housing	21	147-2565	4	Piston
10	147-2555	3	Bushing	26	147-2566	4	Piston Ring Set - Complete
11	147-2556	1	Crankshaft				

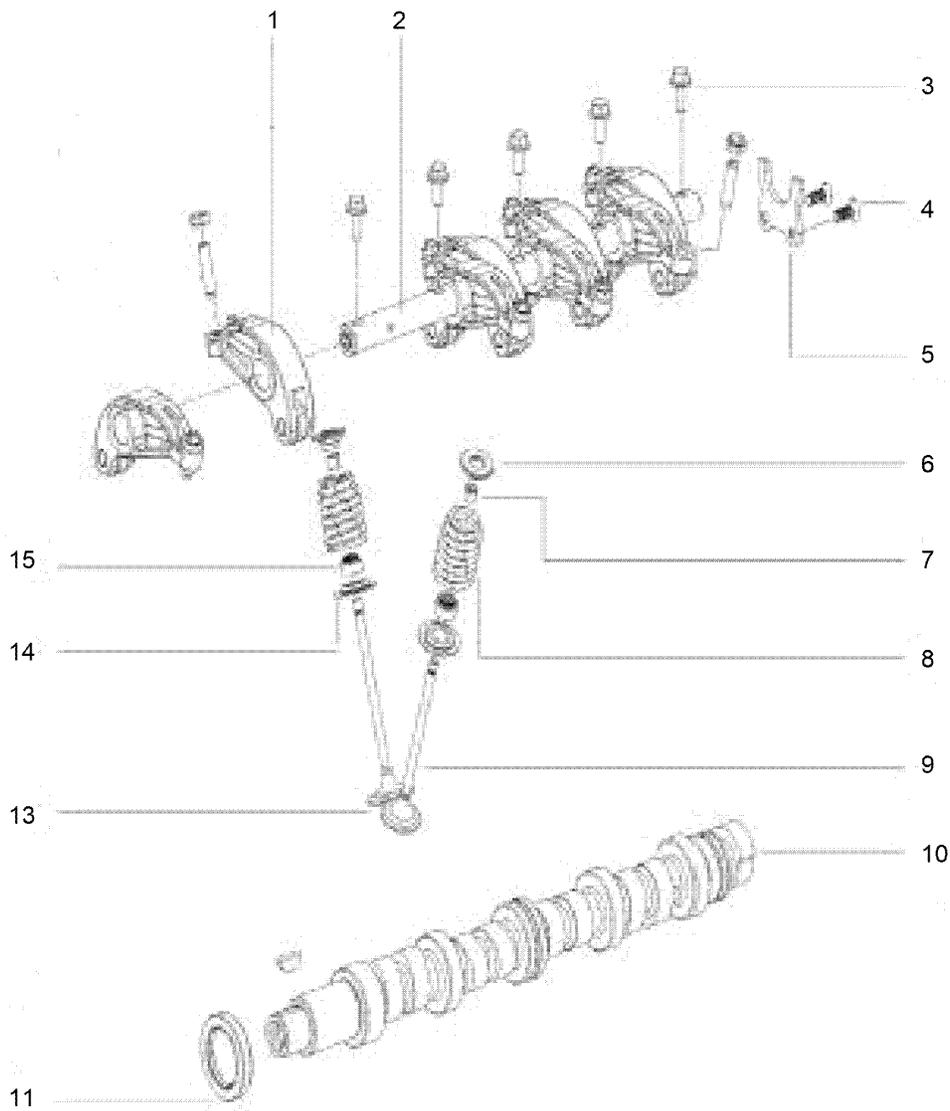


Camshaft and Rocker Arm Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2567	8	Arm, Rocker
2	147-2568	1	Shaft, Rocker Arm
3	147-2569	5	Bolt
4	147-2570	2	Bolt
5	147-2571	1	Plate, Camshaft Thrust
6	147-2572	8	Seat, Valve Spring
7	147-2573	16	Rotaton, Valve
8	147-2574	8	Valve, Spring
9	147-2575	4	Valve, Exhaust
10	147-2576	1	Camshaft
11	147-2577	1	Seal, Camshaft
13	147-2578	4	Valve, Intake
14	147-2580	8	Seat, Valve Spring
15	147-2579	8	Seal, Valve Stem

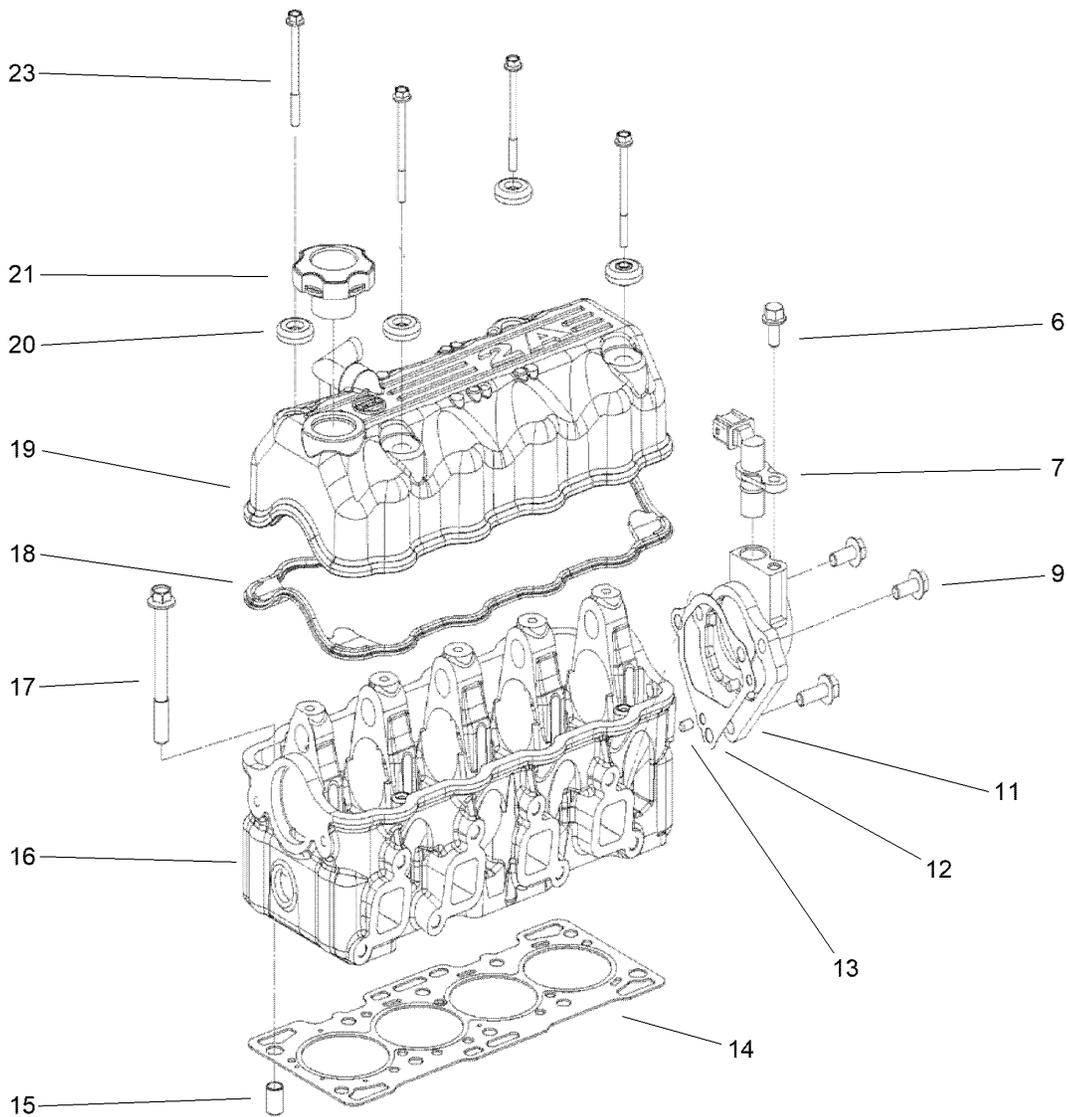


Cylinder Head Assembly

Ref.	Part Number	Qty.	Description
6	147-2581	1	Bolt
7	147-2582	1	Sensor, Camshaft
9	147-2583	4	Bolt, Intake Manifold
11	147-2584	1	Housing, Camshaft Sensor
12	147-2585	1	Gasket, Camshaft Sensor Housing
13	147-2586	2	Pin, Locating
14	147-2587	1	Gasket, Cylinder Head
15	147-2588	4	Pin, Locating
16	147-2589	1	Head, Cylinder
17	147-2590	10	Bolt, Cylinder Head
18	147-2591	1	Gasket, Rocker Cover
19	147-2592	1	Cover, Rocker
20	147-2593	4	Spacer
21	147-2594	1	Cap, Oil
23	147-2595	4	Bolt, Rocker Cover

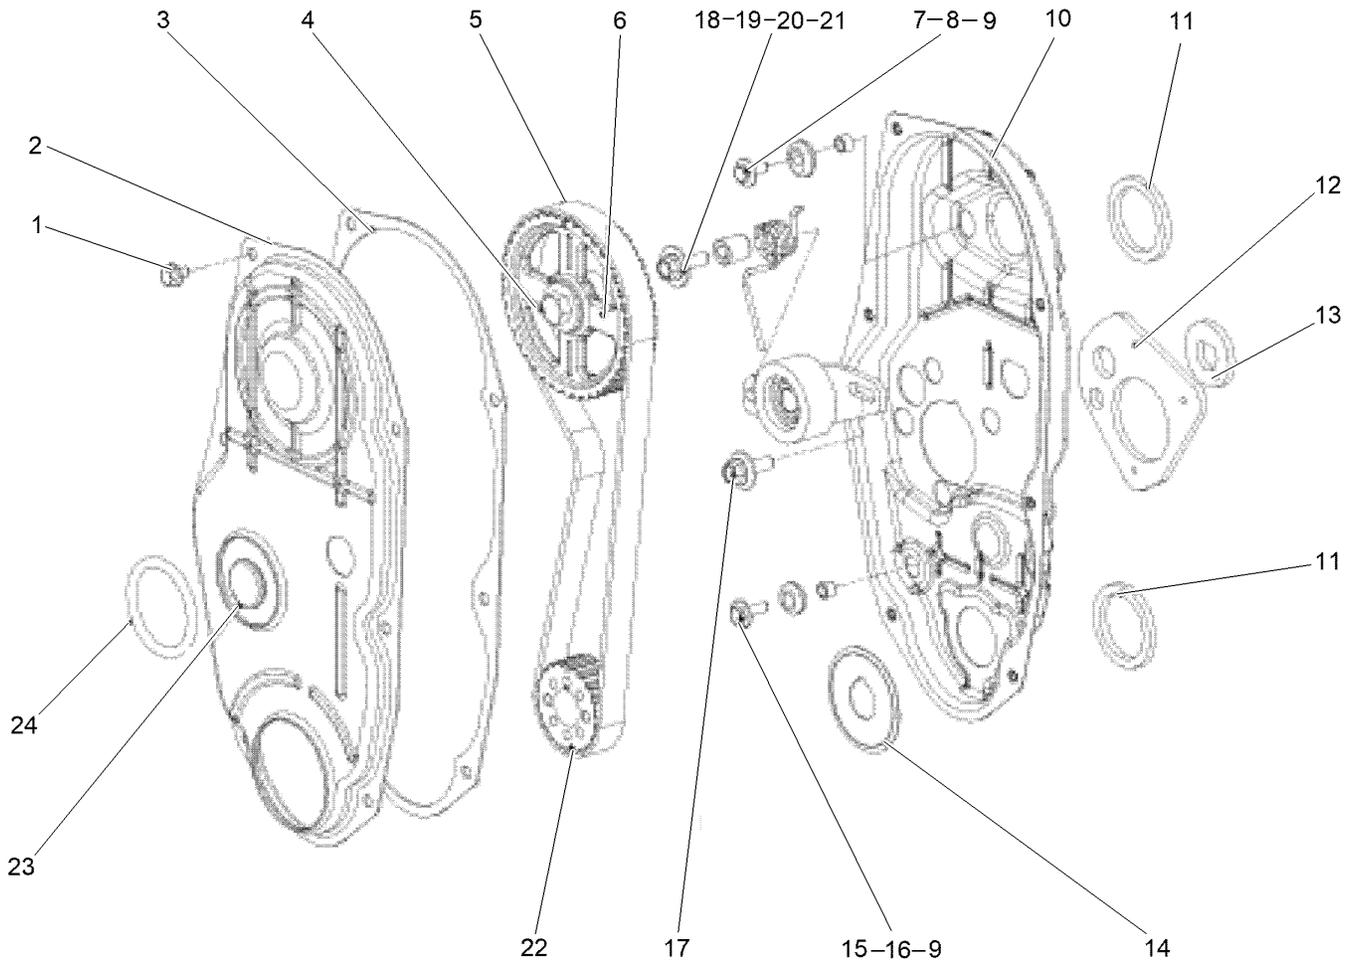


Timing Cover Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2596	6	Bolt	14	147-2609	1	Cover
2	147-2597	1	Front Cover	15	147-2610	2	Bolt, Front Cover
3	147-2598	1	Gasket, Front Cover	16	147-2611	2	Gasket, Rear Cover
4	147-2599	1	Bolt	17	147-2612	1	Bolt-Tensioner (Incls Washer)
5	147-2600	1	Belt, Timing (90 Teeth)	18	147-2613	1	Bolt, Tensioner
6	147-2601	1	Sprocket, Camshaft	19	147-2614	1	Bushing, Torsion Spring
7	147-2602	2	Bolt, Front Cover	20	147-2615	1	Spring, Torsion
8	147-2603	2	Washer	21	147-2616	1	Tensioner
9	147-2604	4	Spacer	22	147-2617	1	Sprocket, Crankshaft
10	147-2605	1	Rear Cover	23	147-2618	1	Cover
11	147-2606	2	Seal, Oil Cover	24	147-2619	1	Seal, Front Cover
12	147-2607	1	Gasket-Cover				
13	147-2608	1	Washer				

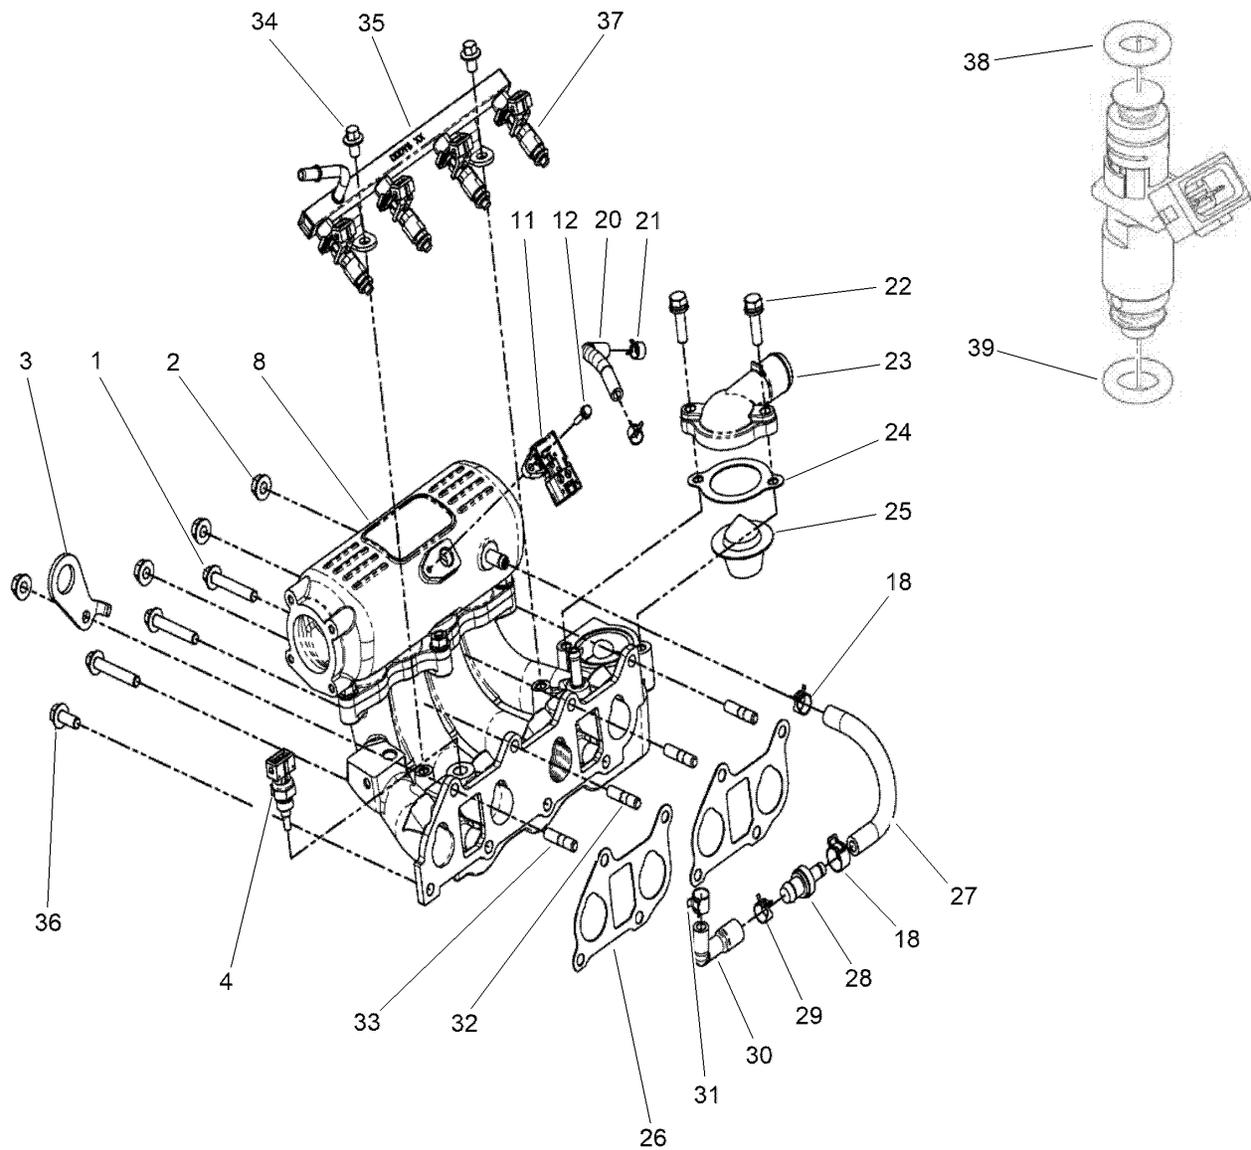


Intake Manifold Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2620	3	Bolt, Intake Manifold	26	147-2634	2	Gasket, Intake Manifold
2	147-2621	4	Nut, Intake Manifold	27	147-2635	1	Hose, Pvc Vent
3	147-2622	1	Lifting Eye	28	147-2636	1	Pcv
4	147-2623	1	Sensor, Water Temp	29	147-2637	1	Clamp
8	147-2624	1	Manifold, Intake	30	147-2638	1	Hose, Pcv
11	147-2625	1	Sensor, Air	31	147-2639	1	Clamp
12	147-2626	1	Bolt	32	147-2640	3	Stud, Intake Manifold
18	147-2627	2	Clamp	33	147-2641	1	Stud, Exhaust Manifold
20	147-2628	1	Hose, Coolant	34	147-2642	2	Bolt, Fuel Rail
21	147-2629	2	Clamp	35	147-2643	1	Rail, Fuel
22	147-2630	2	Bolt	36	147-2583	1	Bolt, Intake Manifold
23	147-2631	1	Outlet, Water	37	145-7936	4	Injector W/Clip
24	147-2632	1	Gasket, Thermostat Cover	38	163-5077	4	O-Ring
25	147-2633	1	Thermostat	39	163-5078	4	O-Ring

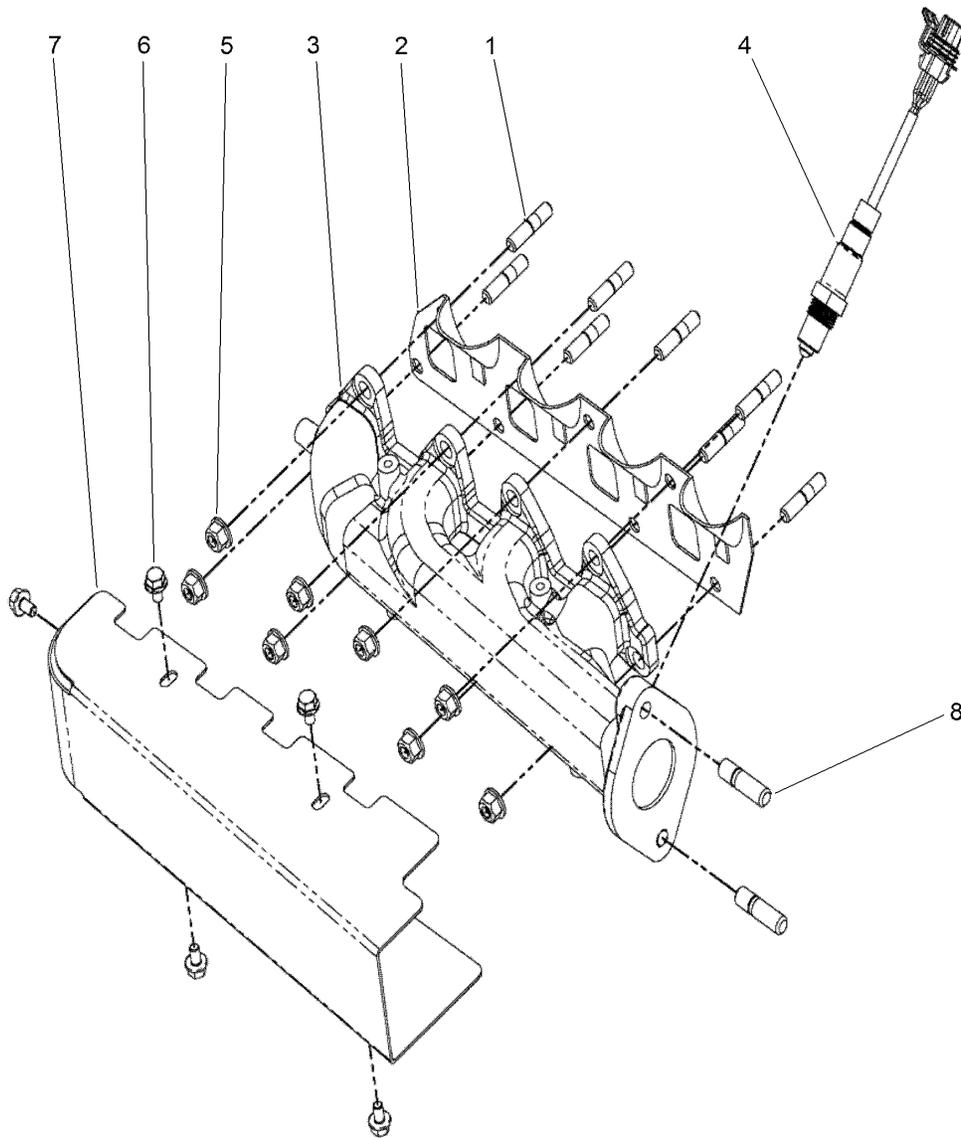


Exhaust Manifold Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2644	8	Stud
2	147-2645	1	Gasket, Exhaust Manifold
3	147-2646	1	Manifold, Exhaust
4	147-2647	1	Sensor, O2
5	147-2648	8	Nut
6	147-2649	5	Screw
7	147-2650	1	Shield, Exhaust
8	147-2651	2	Stud

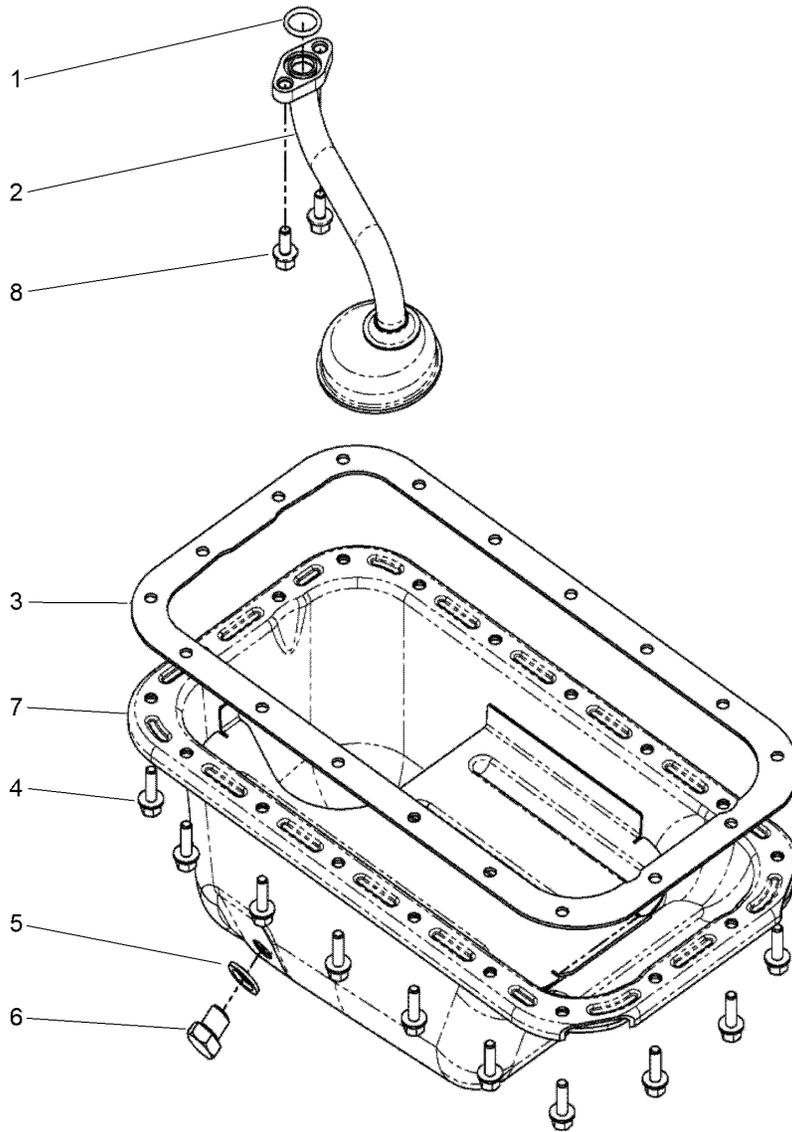


Oil Pan Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2652	1	Seal, Oil Strainer
2	147-2653	1	Tube, Oil Pick Up
3	147-2654	1	Gasket, Oil Pan
4	147-2569	18	Bolt
5	147-2655	1	Seal, Drain Plug
6	147-2656	1	Plug, Drain
7	147-2657	1	Pan, Oil
8	147-2658	2	Bolt

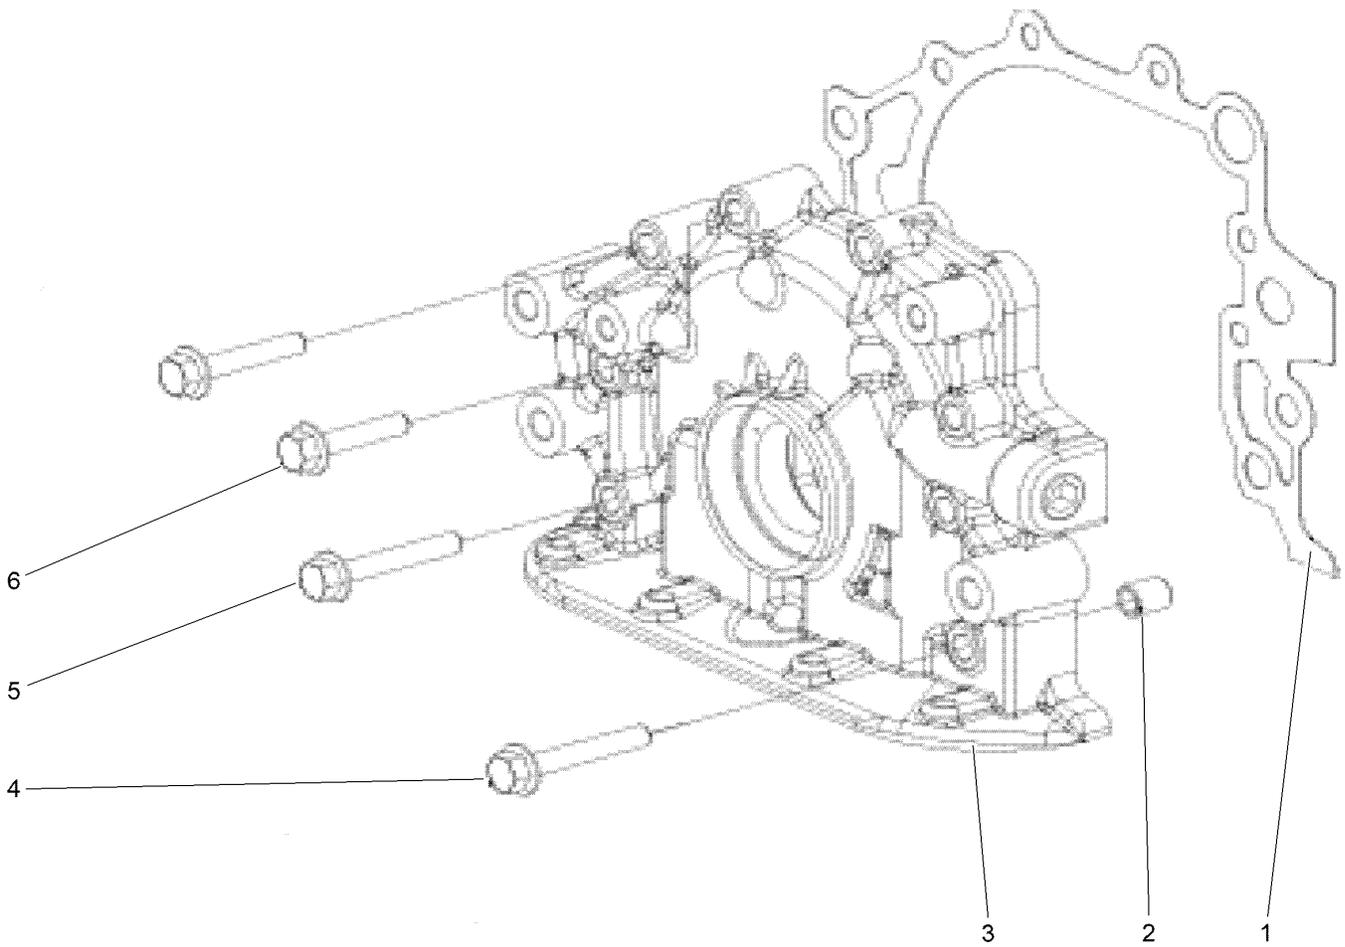


Oil Pump Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2659	1	Gasket, Oil Pump
2	147-2555	4	Bushing
3	147-2660	1	Pump, Oil
4	147-2661	3	Bolt
5	147-2662	3	Bolt
6	147-2663	5	Bolt, Oil Pump

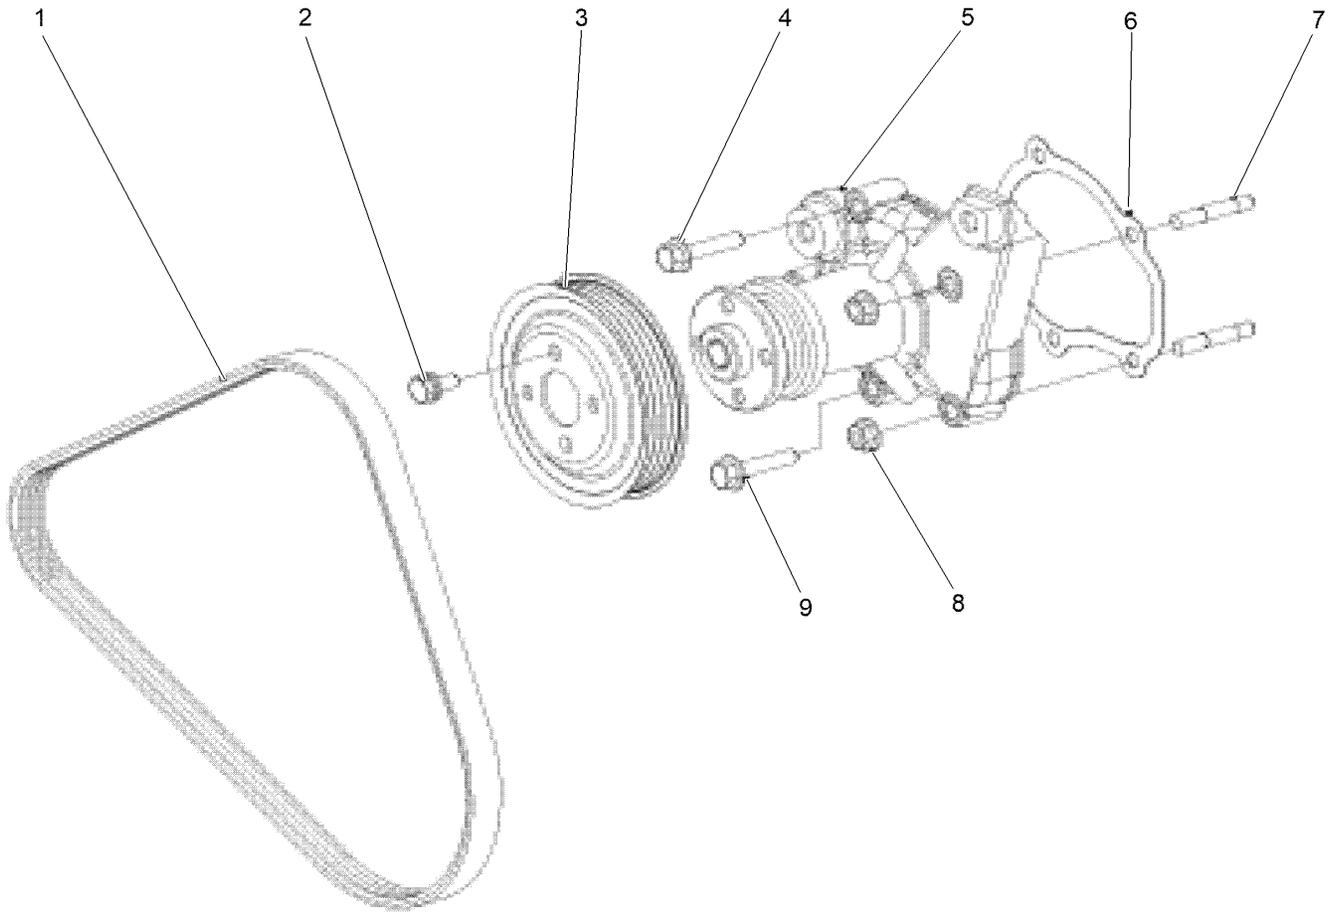


Water Pump Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2664	1	Belt
2	147-2665	4	Bolt
3	147-2666	1	Pulley, Water Pump
4	147-2661	1	Bolt
5	147-2667	1	Pump, Water
6	147-2668	1	Gasket, Water Pump
7	147-2669	2	Stud, Water Pump
8	147-2670	2	Nut
9	147-2662	1	Bolt

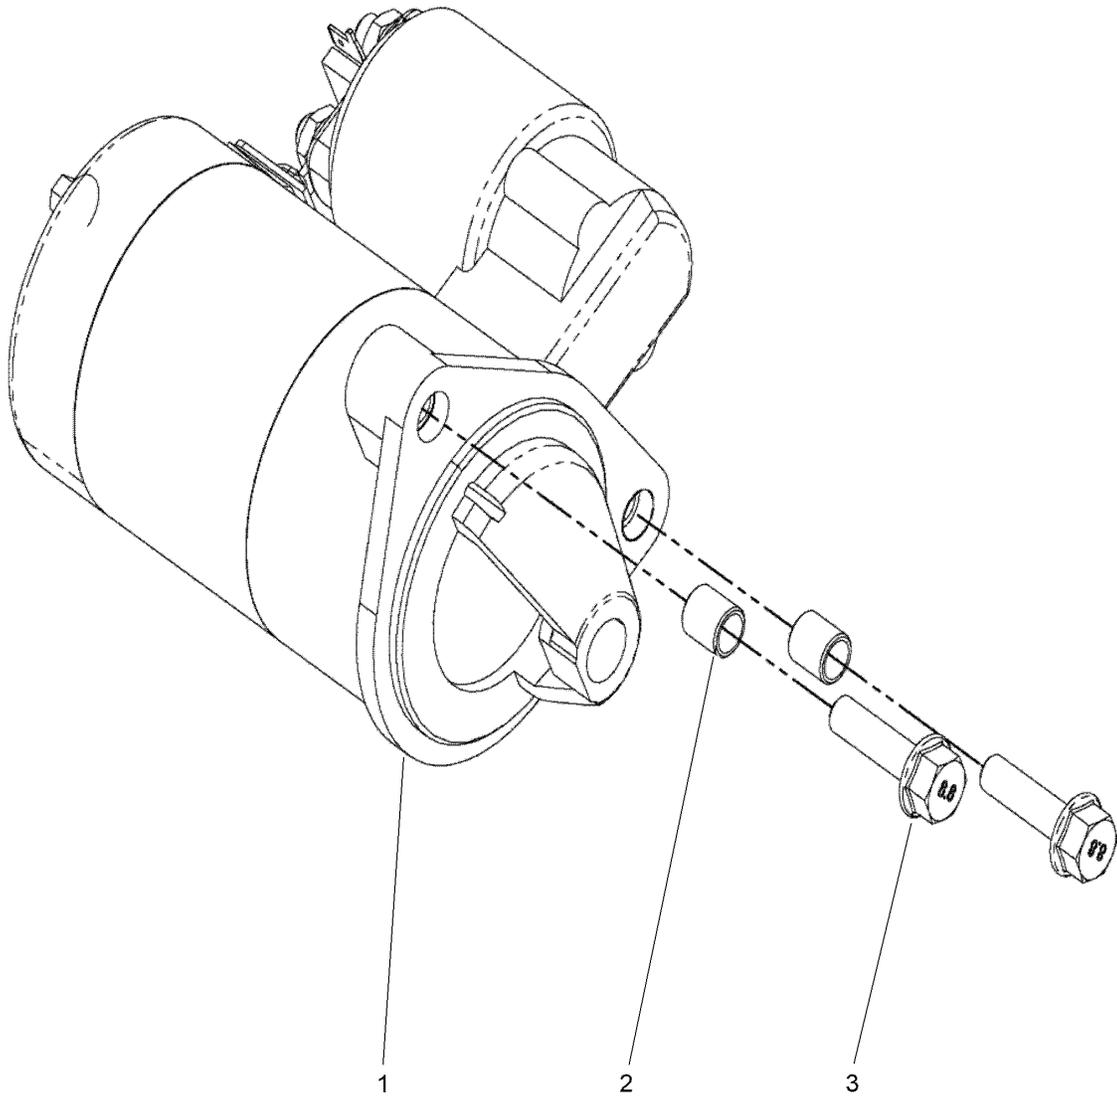


Starter Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2671	1	Starter
2	147-2672	2	Dowel
3	147-2673	2	Bolt

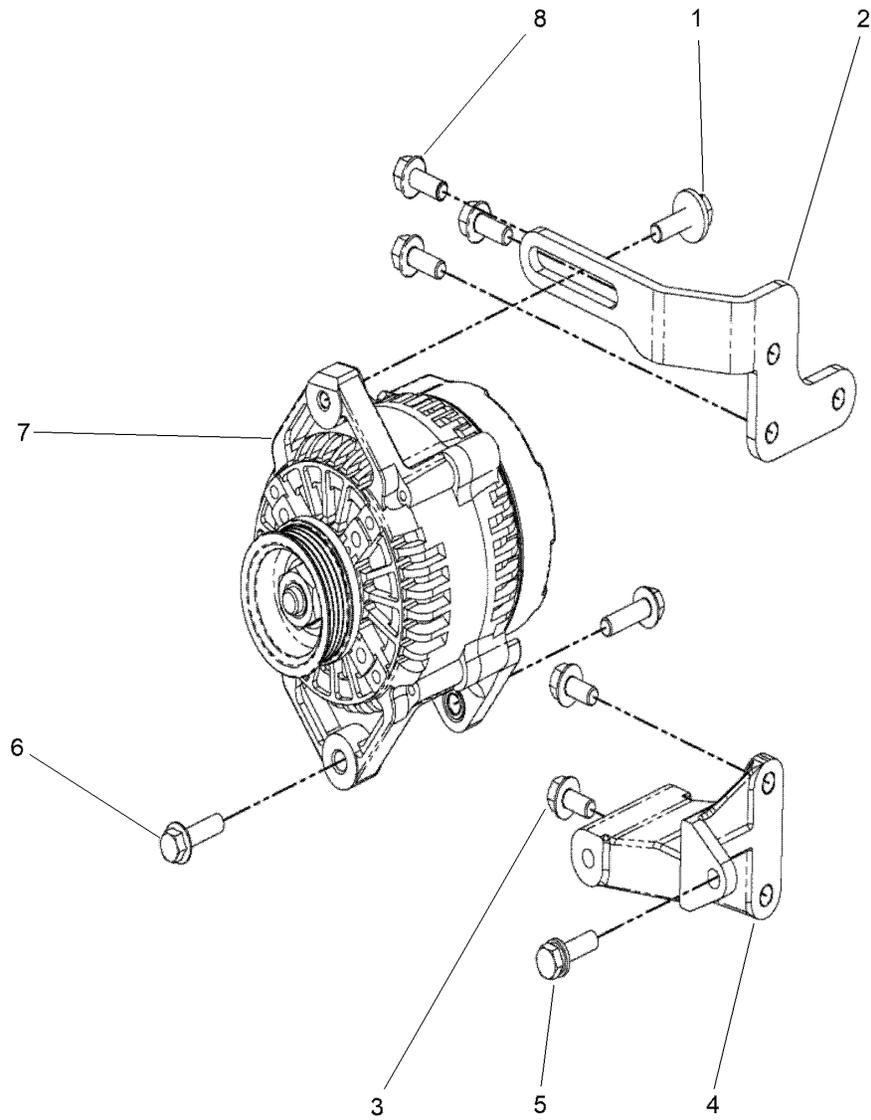


Alternator Assembly

Ref.	Part Number	Qty.	Description
1	147-2674	1	Bolt, Alternator
2	147-2675	1	Bracket, Alternator
3	147-2676	2	Bolt, Alt Support
4	147-2677	1	Support, Alternator
5	147-2678	1	Bolt, Alt Support
6	147-2679	1	Bolt
7	147-2680	1	Alternator
8	147-2681	3	Bolt

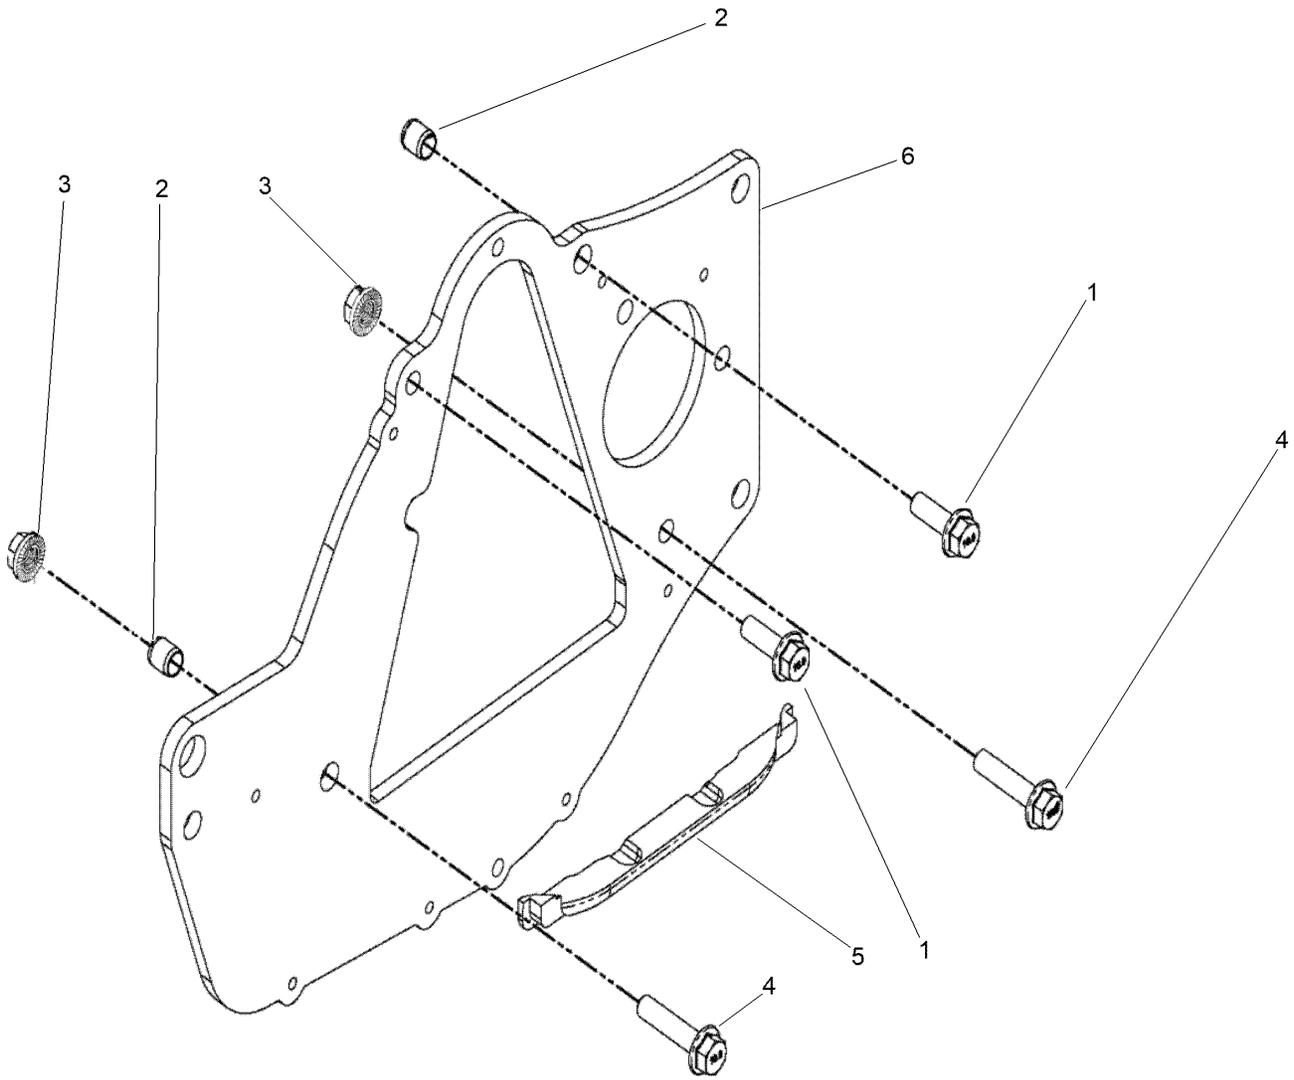


Rear Plate Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2682	2	Bolt
2	147-2683	2	Spacer
3	147-2684	2	Nut
4	147-2685	2	Bolt
5	145-2003	1	Seal-Plate, Rear
6	144-2201	1	Plate-Engine

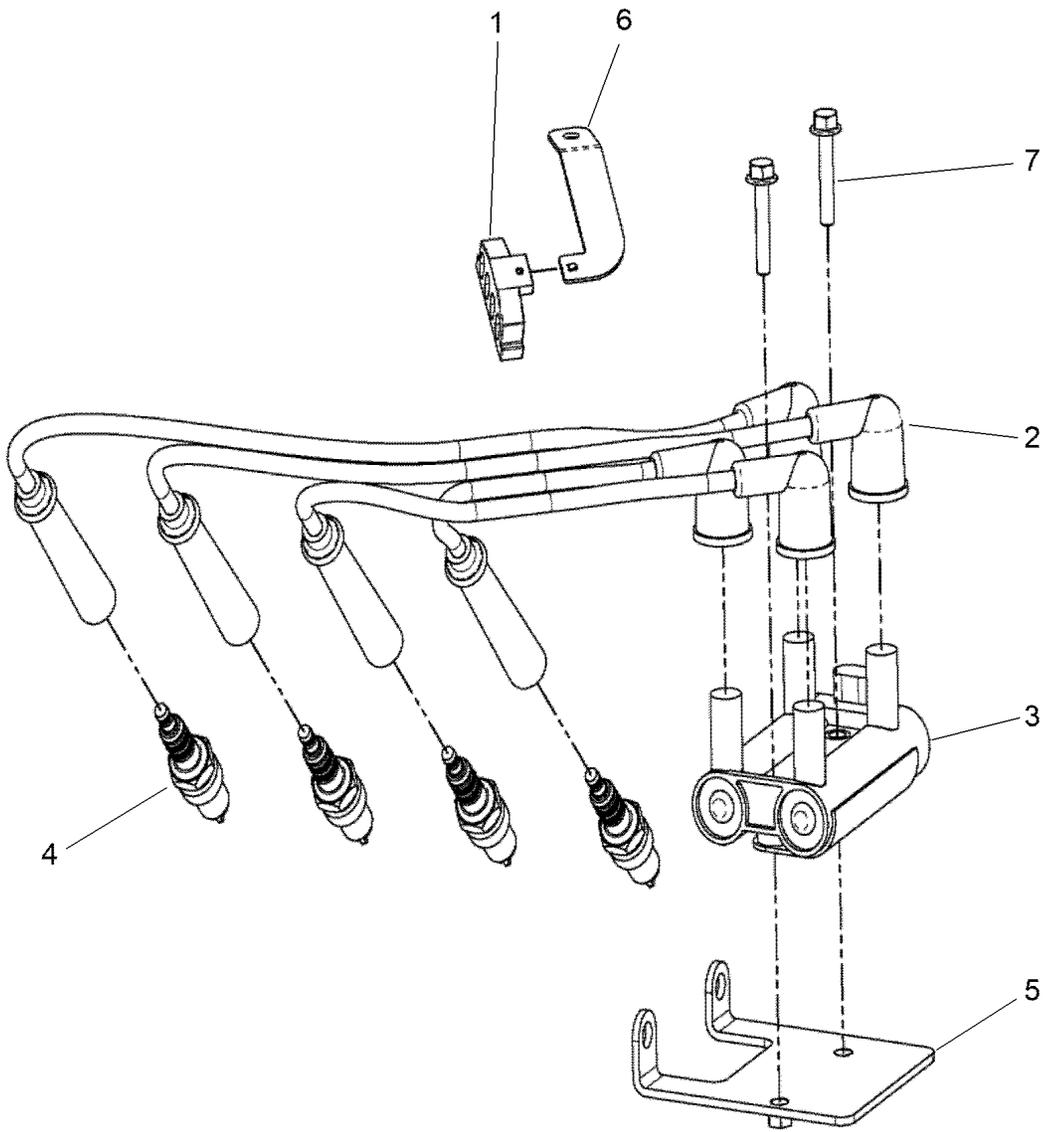


Ignition Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2688	1	Retainer, Wire#4
2	147-2689	1	Wires, Spark Plug
3	147-2690	1	Coil, Ignition
4	145-2128	4	Spark Plug
5	147-2691	1	Bracket, Coil Rear
6	147-2692	1	Bracket, Ignition Wires
7	147-2693	2	Bolt

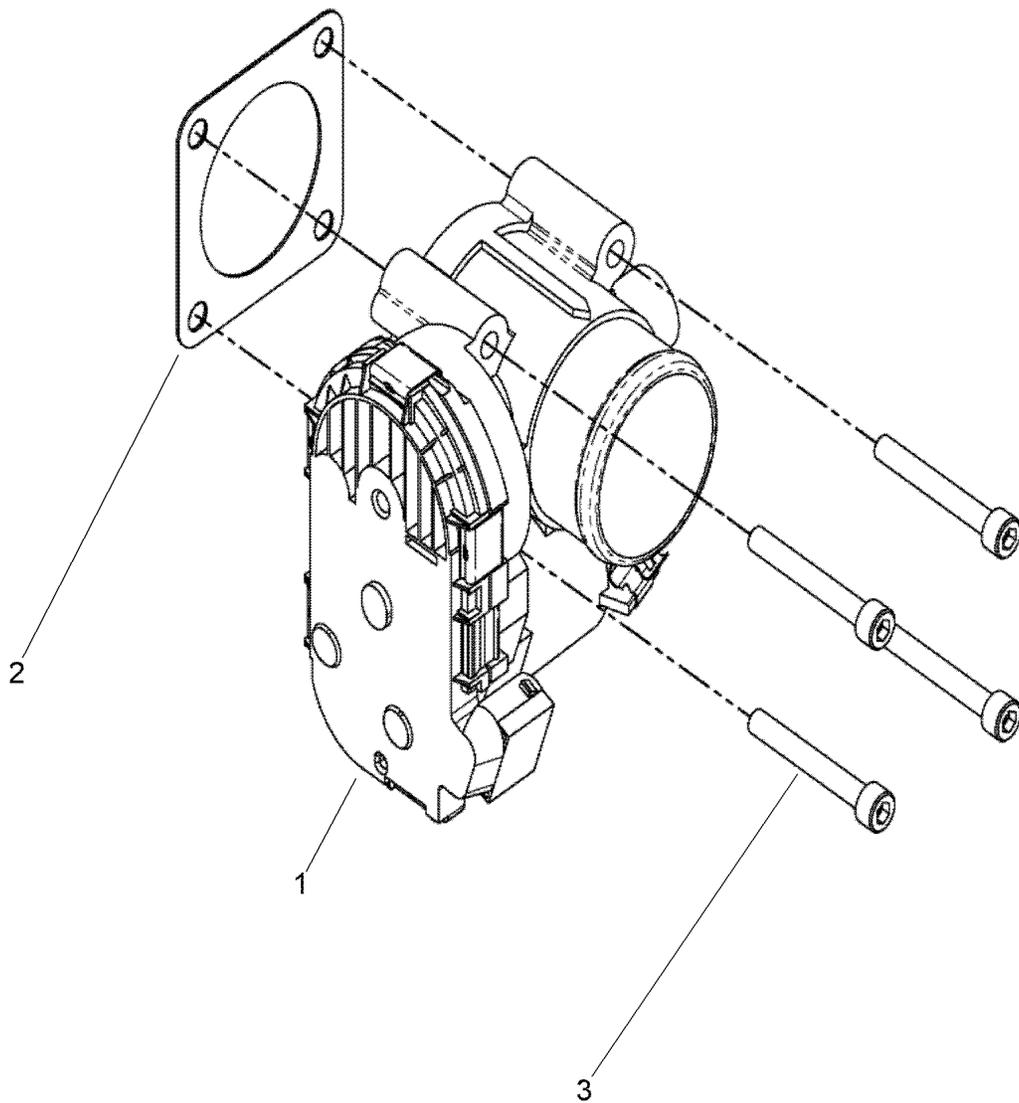


Throttle Body Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2694	1	Body, Throttle
2	147-2695	1	Gasket
3	147-2696	4	Screw

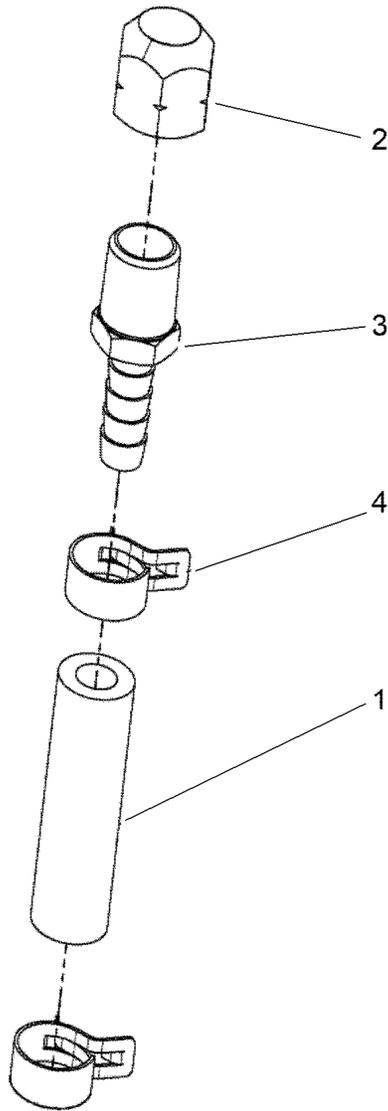


Coolant Plug Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-2697	1	Hose, Heater (2 Inches)
2	147-2698	1	Fitting
3	147-2699	1	Fitting
4	145-2660	2	Clamp, Tension

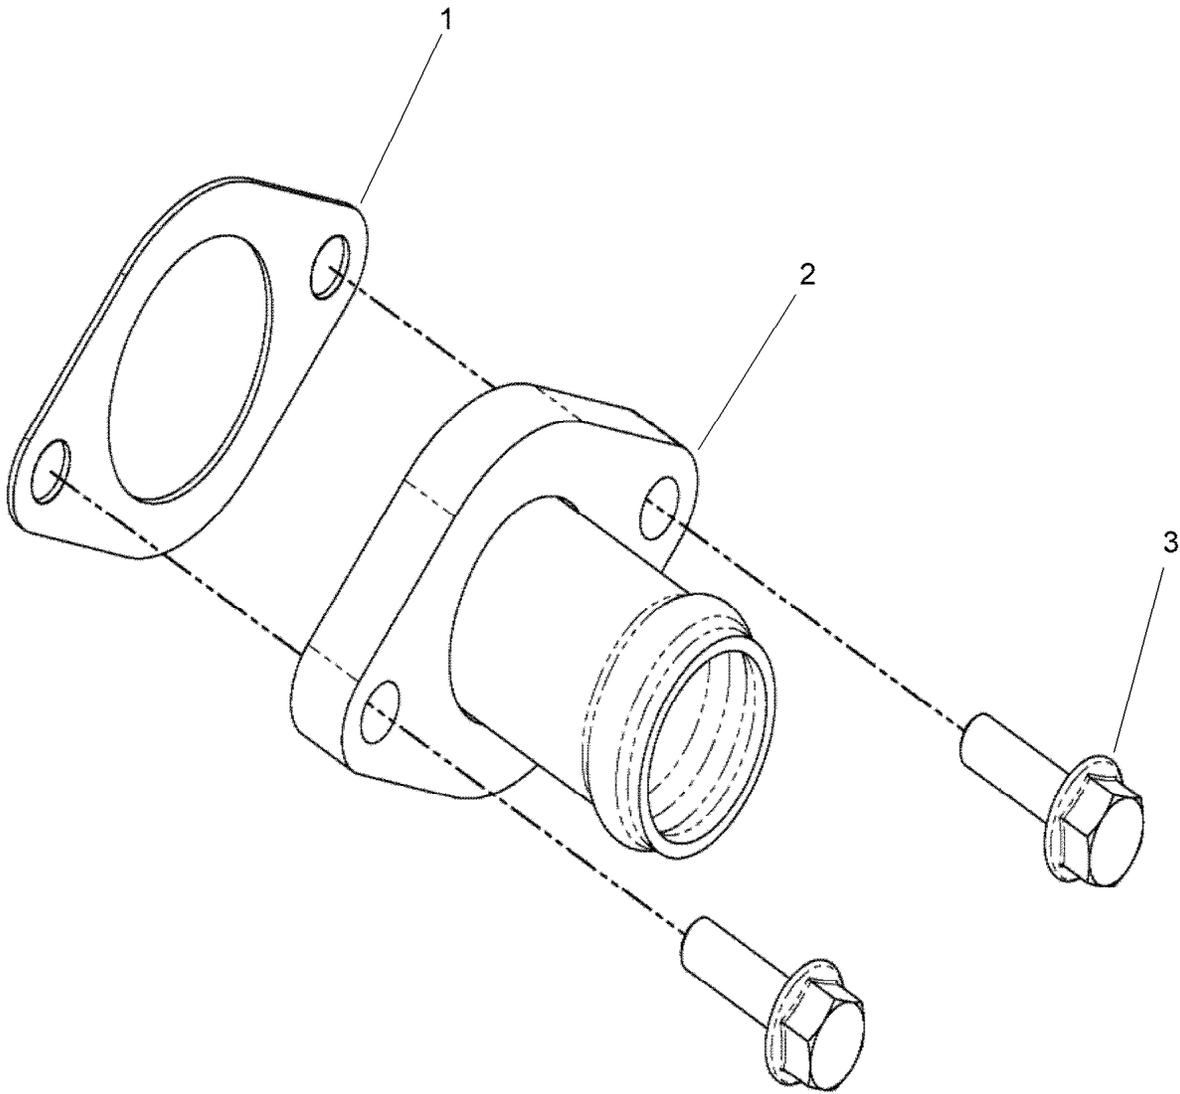


Coolant Inlet Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-2661	1	Gasket, Water Inlet
2	145-2662	1	Inlet, Coolant Straight
3	145-2663	2	Bolt, Flange

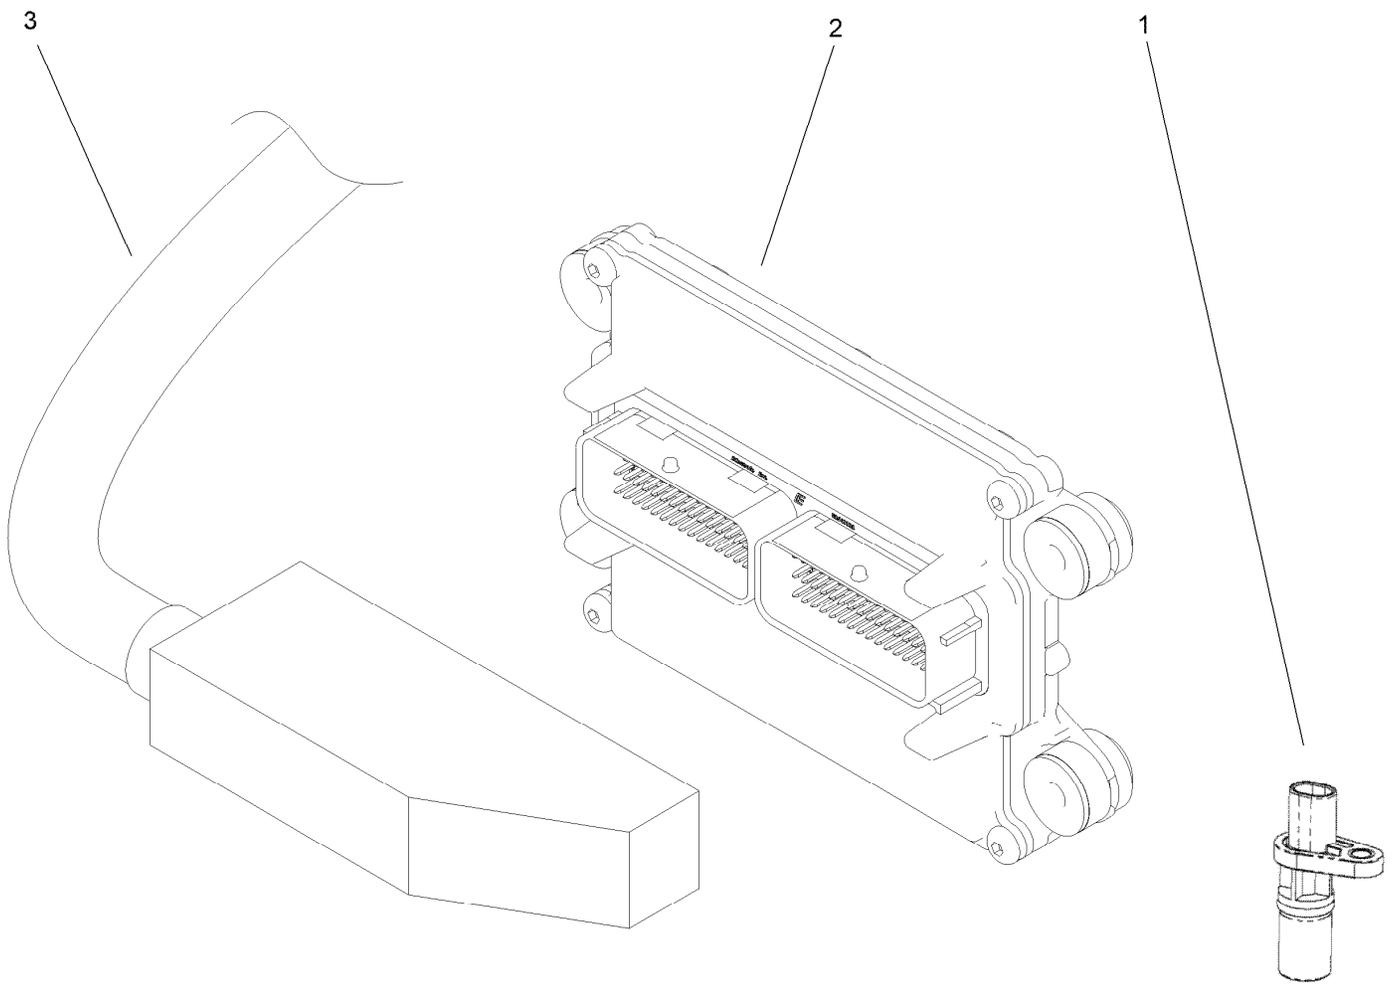

Electrical Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-2010	1	Sensor-Position, Crankshaft
2	144-2232	1	Ecu
3	145-2666	1	Harness

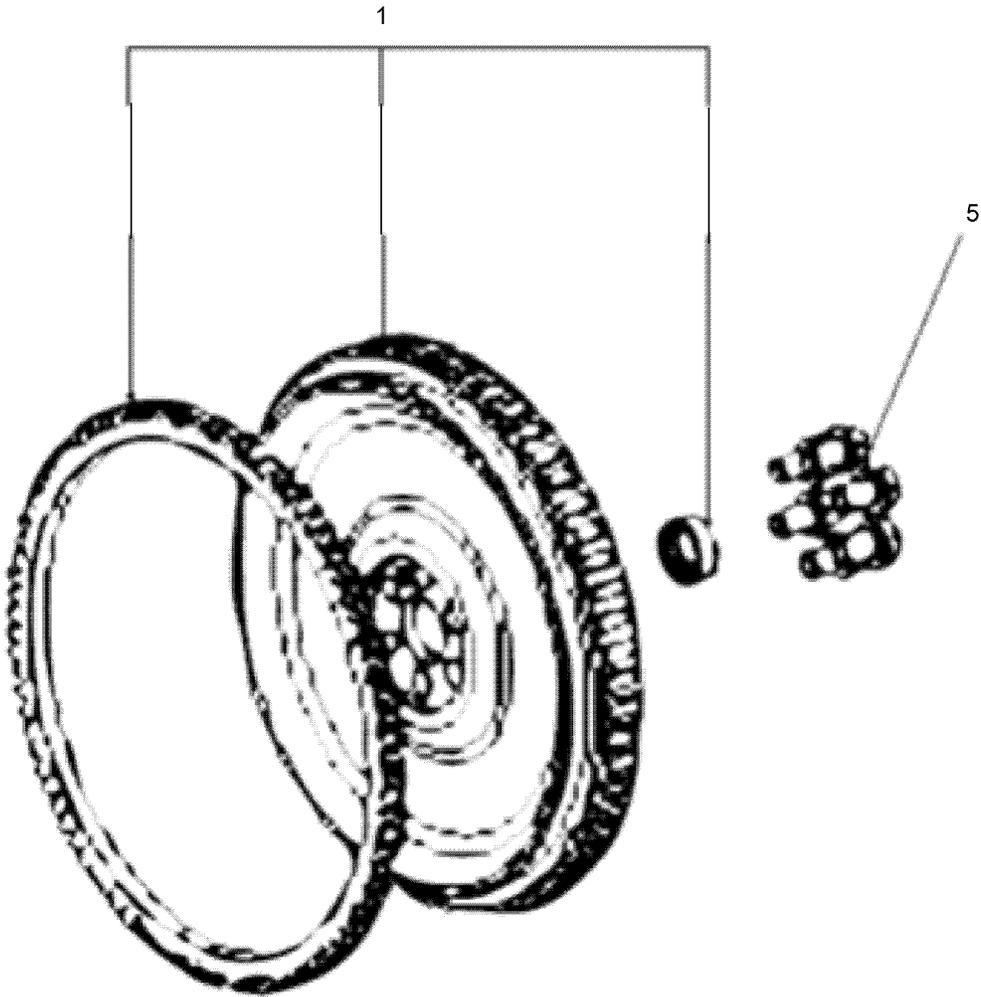

Flywheel Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-4948	1	Flywheel Assy
5	163-4949	6	Bolt, Flywheel

Attachments and Accessories

For 08100 — Workman UTX 2 Passenger Utility Vehicle

Product Name	Model/Part
Canopy-Standard	08110
Glass Windshield and Wiper	08112
Polycarbonate Windshield	08113
Polycarbonate Doors - Standard.....	08114
Polycarbonate Rear Windshield	08116
Half Doors - Standard/Front (WM UTX)	08117
Half Doors - Crew/Rear (WM UTX).....	08118
Heater Only (WM UTX).....	08120
HVAC - Gas (WM UTX)	08122
HVAC - Crew Hose Kit (WM UTX).....	08124
Overhead Console and Wire Harness	08130
Work Lights.....	08131
Beacon	08132
Electric Bed Lift.....	08134
Homologation Kit, WM UTX.....	08135
Supervisor Key	08136
Side View Mirror Kit	08140
Rear View Mirror Kit.....	08141
Center Bed Racking, Workman UTX/MDX	08142
Under Seat Storage	08143
27in Alloy Wheels and Tires.....	08144
Draw Bar.....	08146
Side Bed Racking, Workman UTX/MDX/GTX.....	08148
Reverse Alarm Kit.....	131-8549
Mount-Ball	133-7116
Small Bedrack Mount Grip Kit.....	136-6311
Large Bedrack Mount Grip Kit.....	136-6312
Wrench-Adjuster, Spring.....	139-4678
Puller-Clutch, UTX.....	140-4672
Universal Wireless Hourmeter Kit.....	144-2436
Universal 12V Power Point Kit	144-2438
Spark Arrester Kit	144-2443

Notes:



Count on it.