



NEW HOLLAND ..

MY16 Yard Tractor

Model No. 725055006 - T04MA0001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

 
AR.	as required	HYD.	hydraulic
ASM.	assembly	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PTH.	phillips truss head
HF.	hex flange	PTO.	power take off
HH.	hex head	RH.	right hand
HHF.	hex head flange	SFH.	slotted fillister head
HHFTF.	hex head flange thread forming	SHH.	slotted hex head
HJ.	hex jam	SHWH.	slotted hex washer head
HLH.	hex lag head	SPH.	slotted pan head
HOC.	height-of-cut	SQH.	square head
HS.	hex	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HSH.	hex socket head	TTH.	torx truss head
HWH.	hex washer head	WH.	wing head
HWHTF.	hex washer head thread forming		

Footnotes

- | | | | |
|---|---|---|-------------------------|
| ❶ | Not illustrated | ❷ | Not serviced separately |
| ❸ | Obtain parts from your local Kohler dealer. | | |

Contents


Description	Page	Description	Page
Hood and Grill Assembly	 3	Crankcase Assembly Kohler Model No. CV460S-26518	 27
Hydro Drive Assembly	 4	Oil Pan/Lubrication Assembly Kohler Model No. CV460S-26518	 28
Front Axle and Front Hitch Assembly	 5	Head/Valve/Breather Assembly Kohler Model No. VS460S-26518	 29
Single Cylinder Engine, Muffler and PTO Assembly	 6	Ignition/Electrical Assembly Kohler Model No. CV460S-26518	 30
Battery Assembly	 7	Blower Housing Assembly Kohler Model No. CV460S-26518	 31
Fuel Tank Assembly	 8	Starter Assembly Kohler Model No. CV460S-26518	 32
Lower Steering Wheel and Tilt Assembly	 9	Fuel System Assembly Kohler Model No. CV460S-26518	 33
Steering Wheel and Tilt Assembly	 10	Engine Control Assembly Kohler Model No. CV460S-26518	 34
Hoodstand and Firewall Assembly	 11	Air Intake/Filtration Assembly Kohler Model No. CV460S-26518	 35
Manual Lift Lever Assembly	 12	Exhaust Assembly Kohler Model No. CV460S-26518	 36
Electrical Lift Assembly	 13		
Brake Assembly	 14		
Hydro Control Assembly	 15		
Frame Assembly	 16		
Hydro Transaxle Assembly	 17		
Fan Assembly	 18		
Differential Gear Assembly	 19		
RH Housing Assembly	 20		
Cylinder Block Assembly	 21		
Fender and Footrest Assembly	 22		
Seat Assembly	 23		
Dash Assembly	 24		
Rear Wheel Assembly	 25		
Crankshaft Assembly Kohler Model No. CV460S-26518	 26		

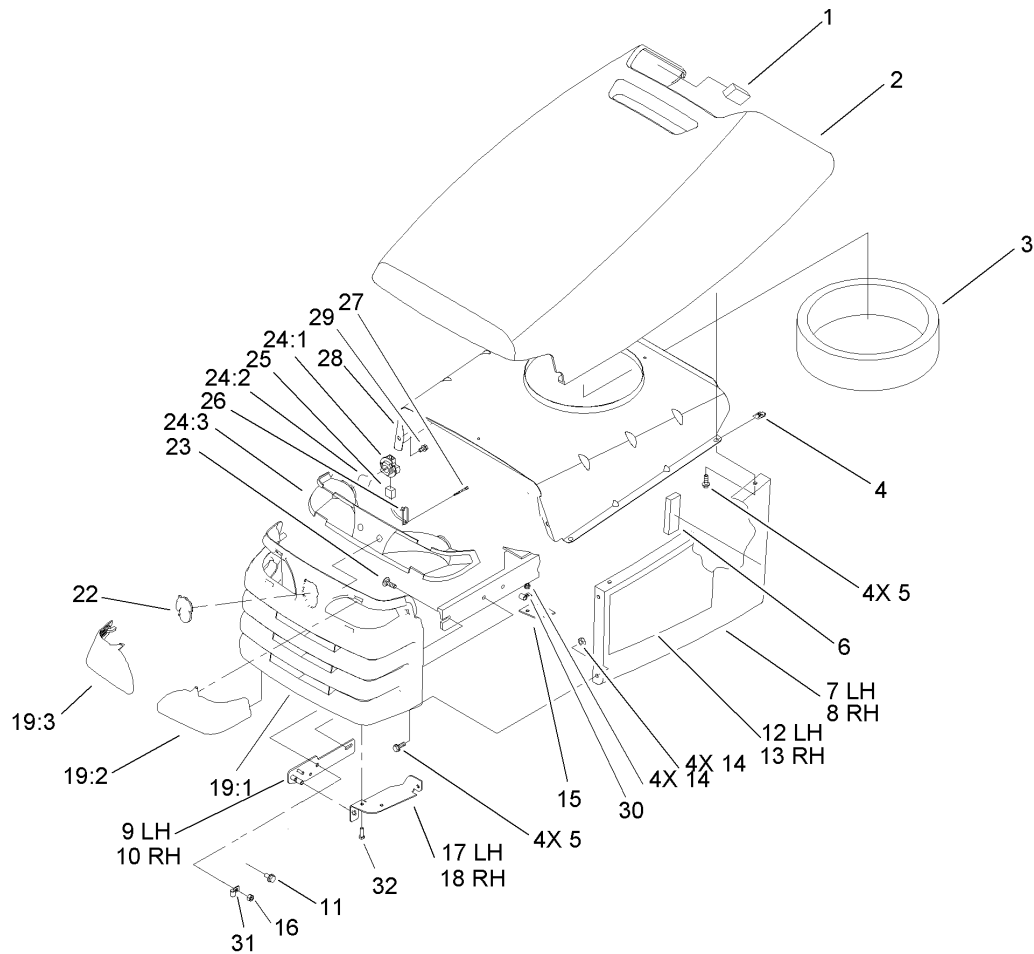

Hood and Grill Assembly


Ref	Part No.	Qty.	Description
1	94-1980	2	Foam-Hood
2	104-5050	1	Hood-Top
3	92-7076	1	Seal-Air Inlet, Twin
4	92-7006	4	Nut
5	32105-15	8	Screw
6	92-7148	2	Foam - Sidepanel
7	107-3681	1	Side Panel-Lh, Xt New Nh
❶8	107-3682	1	Side Panel-Rh, New Nh
9	106-5673-03	1	Bracket-Hinge, LH
❶10	106-5672-03	1	Bracket-Hinge, RH
11	32144-14	2	Screw-HWH
12	107-3686	1	Decal-My16, Ls Panel (Nh)
❶13	107-3687	1	Decal-My16, Rs Panel (Nh)
14	32128-10	8	Nut-Lock, HHF
15	106-5676-03	2	Hinge-Hood
16	3296-29	2	Nut-Lock, NI
17	106-5680-03	1	Bracket-Hood, Hinge, LH
❶18	106-5682-03	1	Bracket-Hood, Hinge, RH
❶19		1	Asm, Nh Grille
19:1	106-5699	1	Grille-Nh Xt
19:2	106-5693	1	Lens-Lh, Xt
19:3	106-5692	1	Lens-Rh, Xt
22	107-7338	1	Emblem - Logo
23	3230-16	2	Screw-CARR

Ref	Part No.	Qty.	Description
❶24	106-9870	1	Reflector And Lamp ASM
24:1	116262	2	Socket-Headlight
24:2	7228	2	Bulb
24:3	106-9869	1	Reflector
25	106-9890	1	Harness-Wire, Headlights
26	614249	2	Strap-Tie
27	94-6961	2	Screw
28	92-6914-03	1	Baffle-Hood, Upper
29	46-8093	2	Screw-Plastite
30	2412-89	1	Clamp
31	98-2390	1	Clamp - R
32	321-5	4	Screw-HH

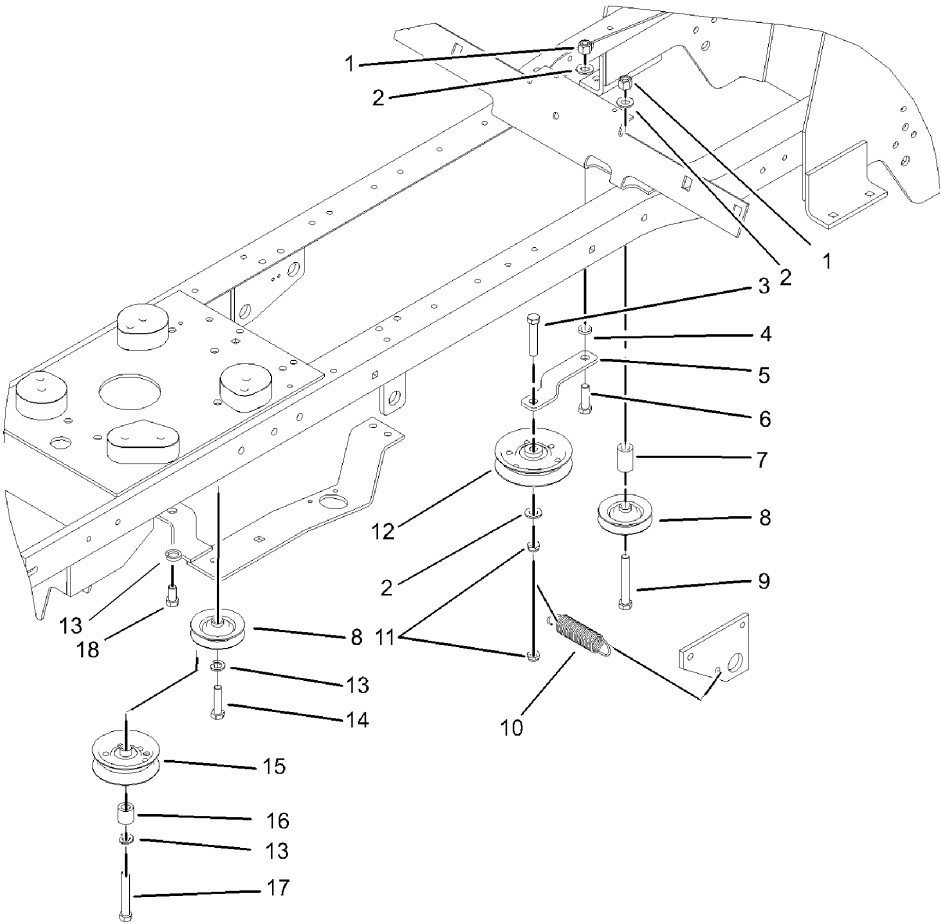 

Hydro Drive Assembly


Ref	Part No.	Qty.	Description				
1	3296-39	2	Nut-Lock, NI				
2	3256-24	3	Washer-Flat				
3	323-10	1	Screw-HH				
4	106-5597	1	Spacer-Idler, Traction				
5	106-5566-03	1	Bracket-Idler				
6	323-7	1	Screw-HH				
7	106-5565	1	Spacer-Idler				
8	93-0320	2	Pulley - Idler, *b				
9	323-13	1	Screw-HH				
10	106-5598	1	Spring-Extension				
11	3296-59	2	Nut-Lock, NI				
12	92-7101	1	Pulley-Flat Idler				
13	3253-5	3	Washer-Lock				
14	323-8	1	Screw-HH				
15	92-7104	1	Pulley-Idler				
16	106-5574	1	Spacer-Mounting, Steering				
17	323-12	1	Screw-HH				
18	323-4	1	Screw-HH				

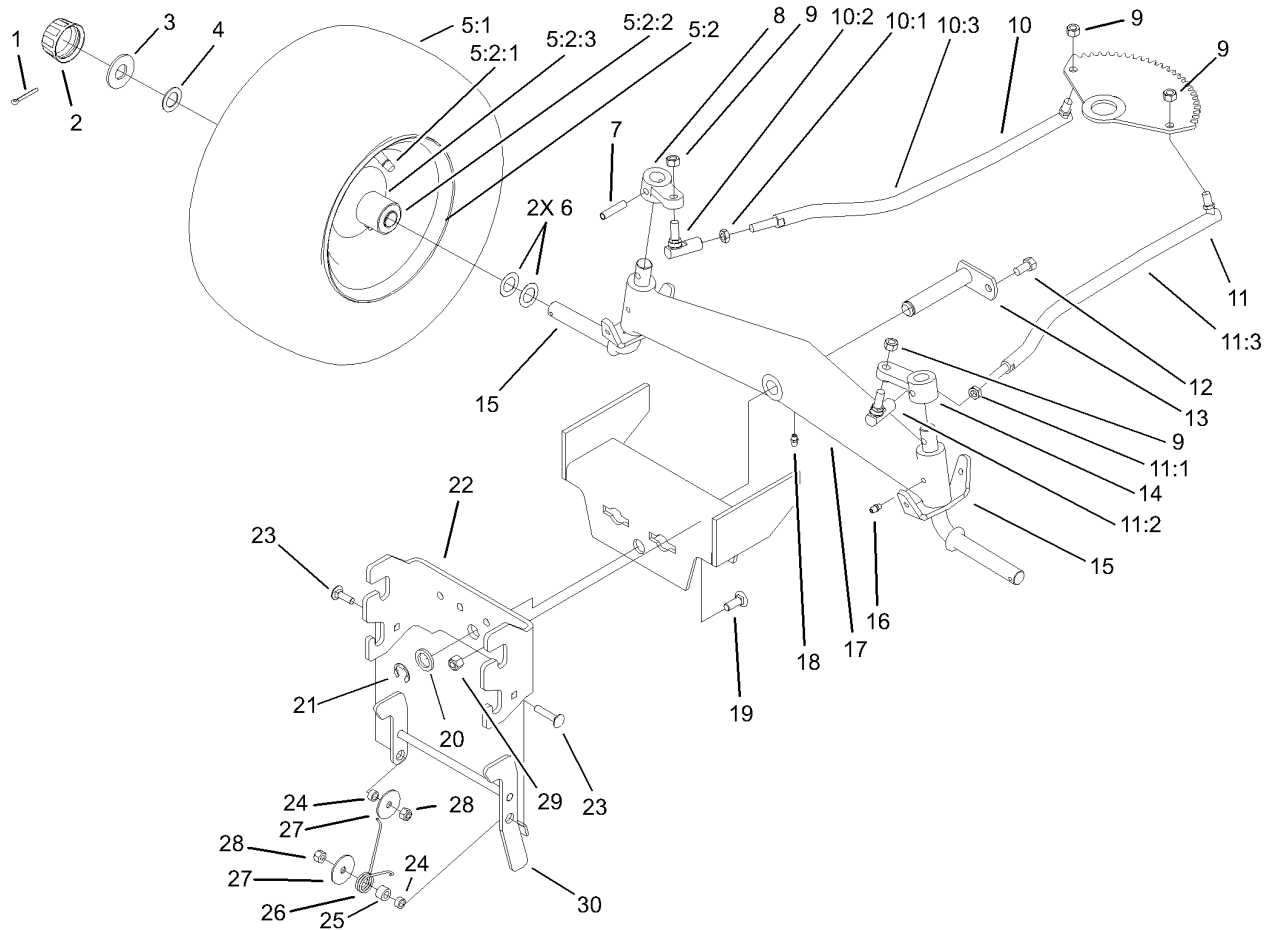 

Front Axle and Front Hitch Assembly


Ref	Part No.	Qty.	Description
1	3272-17	2	Pin-Cotter
2	61-9780	2	Cap-Hub
3	28-2480	2	Washer
4	1278	2	Washer
5		2	Front Wheel & Tire ASM
5:1	99-2336	1	Tire
5:2	93-9804	1	Wheel W/zerk ASM
5:2:1	5108	1	Valve
5:2:2	110513	2	Rim ASM
5:2:3	109500	1	Zerk-Grease
5:99	105293	1	Tube-Inner
6	5210	4	Washer-Shim
7	933270	2	Pin
8	78-1950-03	1	Arm-Front Spindle
9	9150026	4	Nut
10	92-6883	1	Linkage-Steering, RH
10:1	9150854	1	Nut-Jam
10:2	78-2920	1	Ball-Joint
10:3	78-5801	1	Ball Link ASM
11	92-6884	1	Linkage-Steering, LH
11:1	9150854	1	Nut-Jam
11:2	78-2920	1	Ball-Joint
11:3	78-5811	1	Ball Link ASM
12	9267154	1	Screw

Ref	Part No.	Qty.	Description
13	92-7057-03	1	Pin-Axle
14	78-1940-03	1	Arm-Front Spindle
15	78-2601-03	2	Spindle
16	302-5	2	Fitting-Grease
17	78-7960-03	1	Axle-Front
18	302-11	1	Fitting-Lube, 45 DEG
19	3231-25	4	Screw-CARR
20	9202324	1	Washer
21	5618	1	E-Ring
22	106-4044-03	1	Hitch-Front
23	3230-5	2	Screw-CARR
24	92-6998	2	Spacer-Yoke, Right
25	107-3677	1	Spacer-Tube
26	106-4048	1	Spring-Torsion
27	3256-68	2	Washer-Flat
28	3296-29	2	Nut-Lock, NI
29	3296-39	4	Nut-Lock, NI
30	106-5637-03	1	Latch ASM

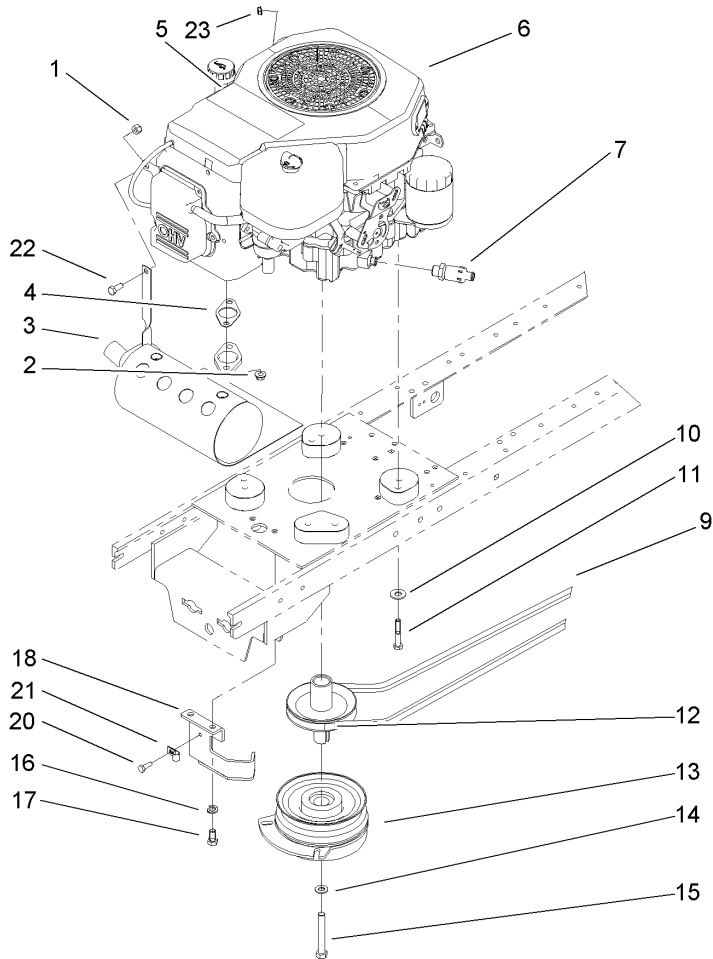 


Single Cylinder Engine, Muffler and PTO Assembly

Ref	Part No.	Qty.	Description				
1	3296-29	1	Nut-Lock, NI				
2	92-6780	2	Nut-HF				
3	106-5670	1	Muffler-Kohler Xt				
4	92-6716	1	Gasket-Exhaust				
5	92-6767	1	Label-16 Hp				
6		1	Engine-Kohler 16 Hp Model No. Cv460s-26518				
7	92-6877	1	Valve-Drain, Oil				
9	106-5813	1	V Belt-Traction				
10	3253-4	4	Washer-Lock				
11	33114-050	4	Screw-HH				
12	106-5665	1	Pulley-Engine				
13	106-4099	1	Clutch-Xt				
14	3256-25	1	Washer-Flat				
15	3212-19	1	Screw-HH				
16	3253-5	2	Washer-Lock				
17	323-4	2	Screw-HH				
18	107-3662-03	1	PTO Stop ASM (Welded)				
20	32144-4	1	Screw-HWH				
21	2412-89	1	Clamp				
22	322-3	1	Screw-HH				
23	32149-2	1	Nut				

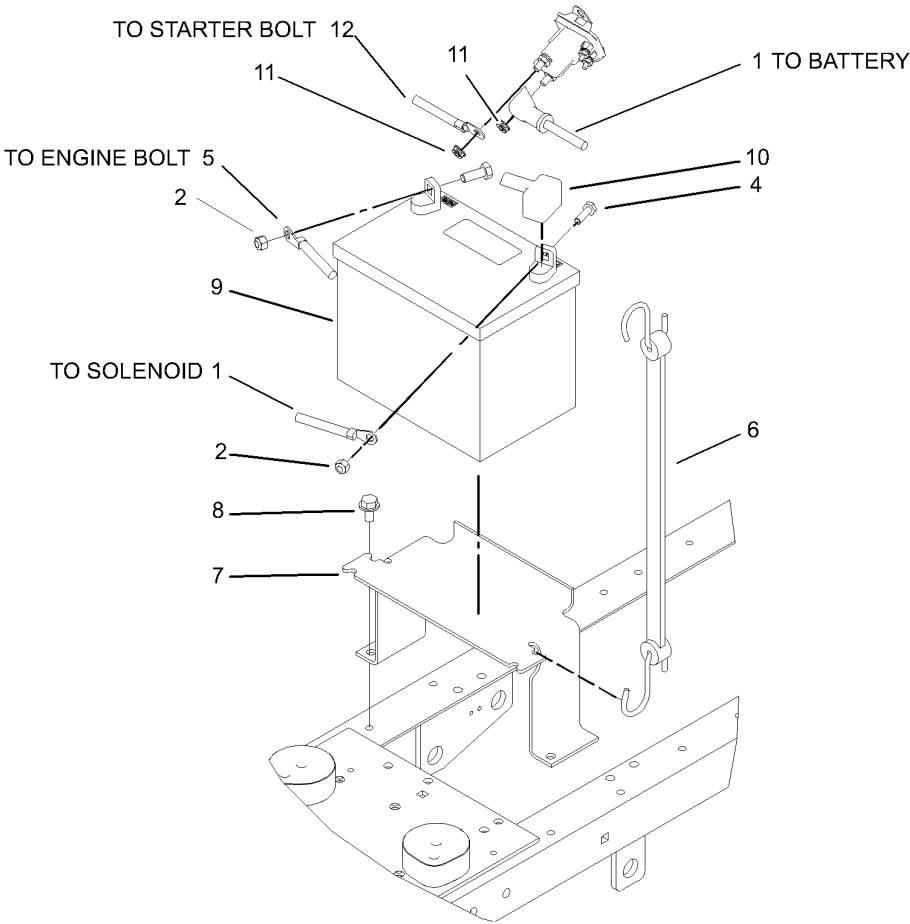 


Battery Assembly

Ref	Part No.	Qty.	Description				
1	106-8268	1	Cable-Battery, Red				
2	3296-29	2	Nut-Lock, NI				
4	322-4	2	Screw-HH				
5	105-0836	1	Cable-Battery, Black				
6	104-2467	1	Hold-Down, Battery				
7	104-0812-03	1	Bracket-Battery				
8	32144-14	2	Screw-HWH				
9	104-2491	1	Battery				
10	28-8080	1	Boot-Terminal				
11	32149-2	2	Nut				
12	106-8269	1	Cable-Battery, Red				

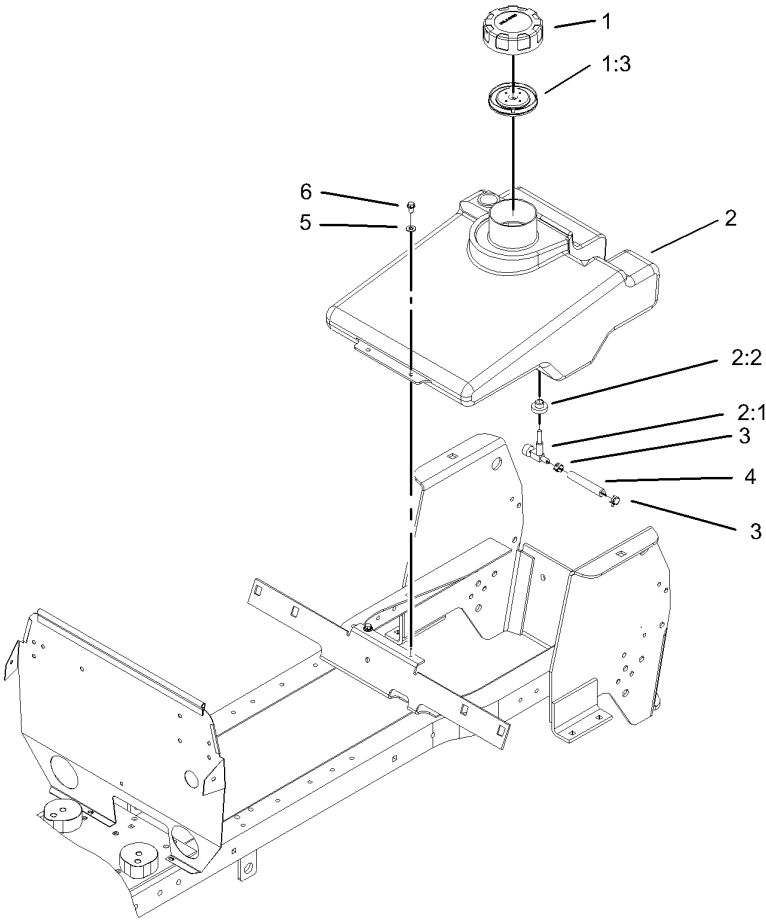 


Fuel Tank Assembly

Ref	Part No.	Qty.	Description				
1	88-3980	1	Gas Cap ASM				
1:3	88-4010	1	Gasket-Cap, Gas				
2	94-6928	1	Tank - Gas				
2:1	104048	1	Valve-Fuel				
2:2	104047	1	Bushing				
3	2412-98	2	Clamp				
4	106-9876	1	Hose-Fuel Line, Xt				
5	3256-22	2	Washer-Flat				
6	32144-4	2	Screw-HWH				

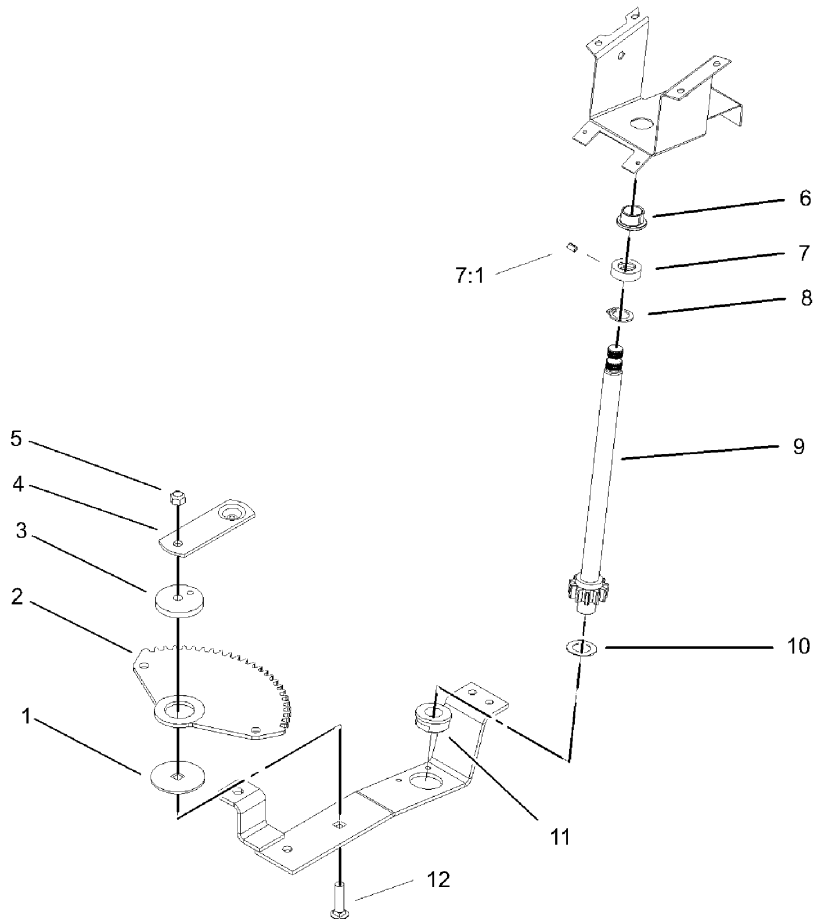 


Lower Steering Wheel and Tilt Assembly

Ref	Part No.	Qty.	Description				
1	111419	1	Washer-Bearing				
2	106-8262	1	Sector-Gear				
3	111418	1	Bushing				
4	78-9150-03	1	Plate				
5	108881	1	Nut				
6	109189	1	Bearing-Flanged				
7	111383	1	Collar				
7:1	3245-32	1	Screw-HS				
8	111646	1	Ring-Retaining				
9	92-6702	1	Shaft-Lower Steering				
10	1278	1	Washer				
11	110391	1	Bearing-Wheel				
12	3231-4	1	Screw-CARR				

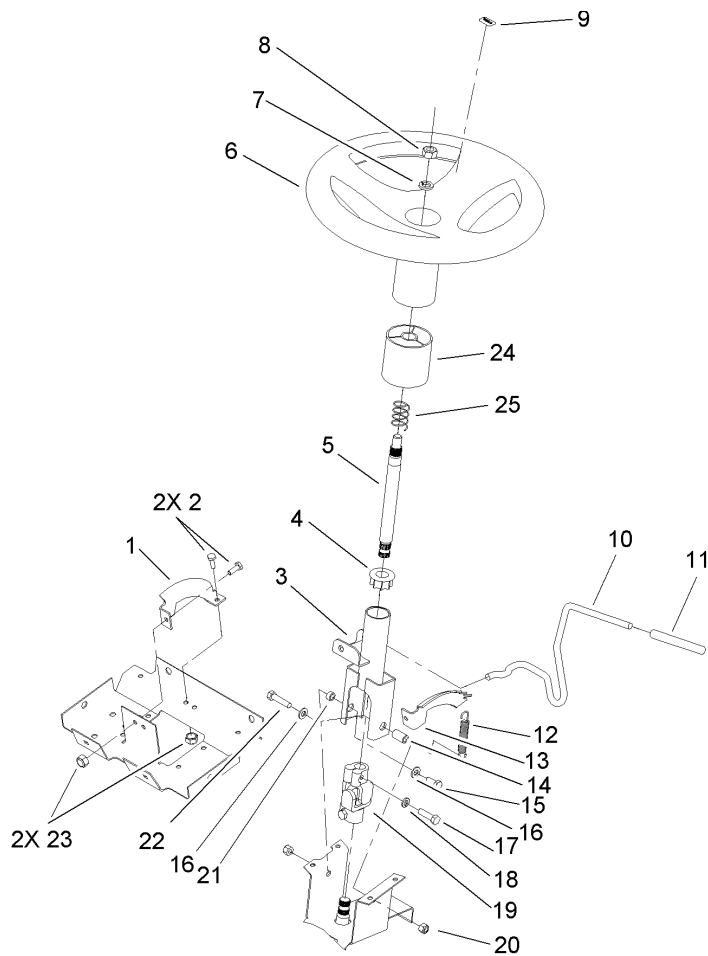 


Steering Wheel and Tilt Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	92-6777-03	1	Bracket - Support Column	25	92-6981	1	Spring - Compression
2	321-4	4	Screw-HH				
3	93-1148-03	1	Column				
4	93-1146	1	Bushing-Upper, Steering				
5	94-2873	1	Shaft - Long Steering				
6	94-3502	1	Wheel-Steering				
7	3253-7	1	Washer-Lock				
8	3217-9	1	Nut-Hex				
9	92-7059	1	Logo-New Holland				
10	92-6971	1	Lever - Tilt				
11	92-6798	1	Cap-Rod, Tilt				
12	93-1357	1	Spring - Extension, Steering				
13	92-6776	1	Bracket - Detent				
14	92-6999	1	Spacer-Yoke				
15	322-3	1	Screw-HH				
16	3256-23	2	Washer-Flat				
17	33114-030	2	Screw-HH				
18	3253-4	2	Washer-Lock				
19	92-6717	1	U Joint - Steering				
20	3296-29	2	Nut-Lock, NI				
21	92-6998	1	Spacer-Yoke, Right				
22	322-17	1	Screw-HH				
23	3296-8	4	Nut-Lock, NI				
24	92-6983	1	Tube-Steering				

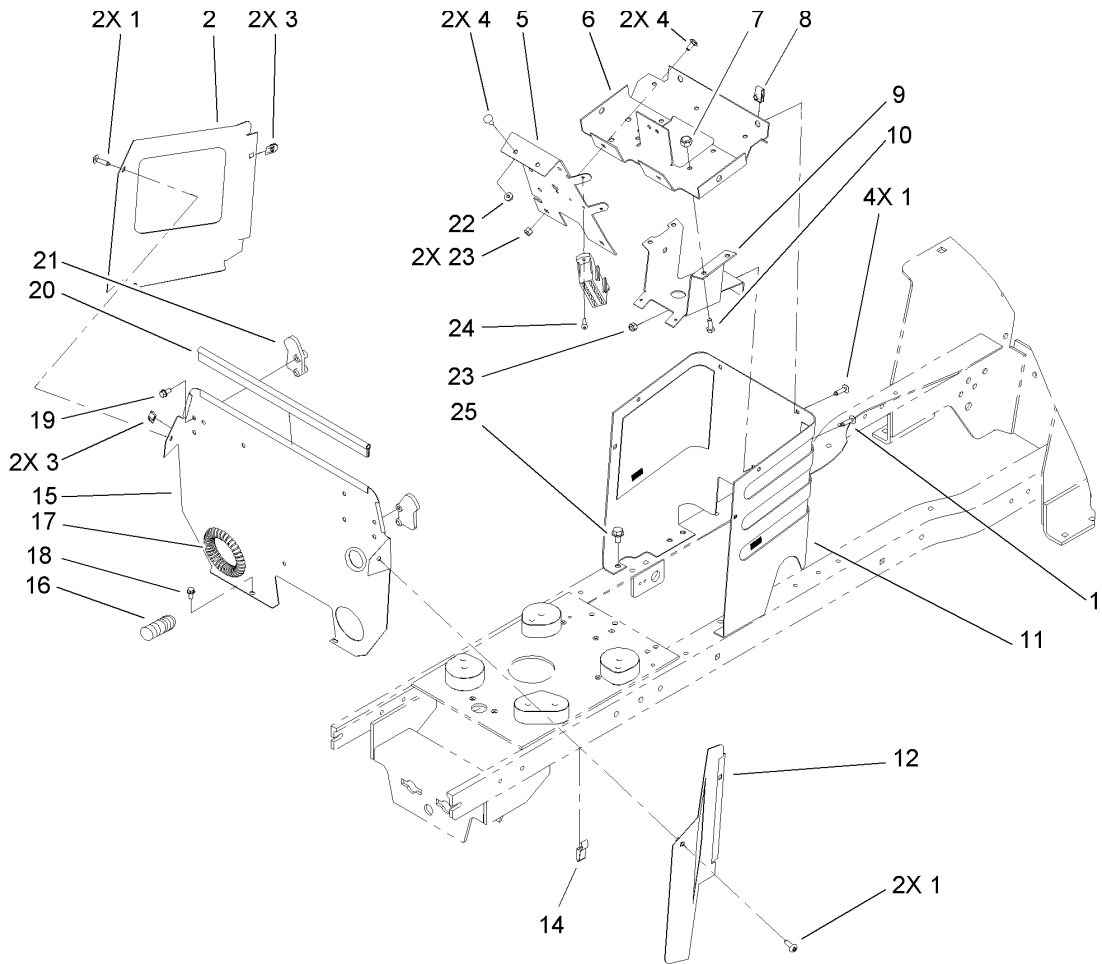 


Hoodstand and Firewall Assembly

Ref	Part No.	Qty.	Description				
1	92-7020	9	Screw-HH				
2	92-6937-03	1	Cover-RH Side				
3	92-7006	4	Nut				
4	3229-11	4	Screw-CARR				
5	106-8246-03	1	Panel-Support, Dash				
6	92-6859-03	1	Support - Dash				
7	3296-8	4	Nut-Lock, NI				
8	107069	4	Clip				
9	92-6778-03	1	Bracket-Lower Column				
10	321-4	4	Screw-HH				
11	106-5570-03	1	Hoodstnd Wa				
12	92-6936-03	1	Cover-LH Side				
14	212-93	1	Clamp-Casing				
15	104-0818-03	1	Firewall				
16	106-4146	1	Harness-Wire, 416xt				
17	24-7924	2	Cover-Drive Shaft				
18	32144-4	2	Screw-HWH				
19	46-8093	2	Screw-Plastite				
20	93-1131	1	Trim-Seal Firewall				
21	92-6960	2	Latch - Hood				
22	32149-2	2	Nut				
23	3296-42	3	Nut-Lock, NI				
24	32144-8	2	Screw-HH				
25	32144-14	2	Screw-HWH				

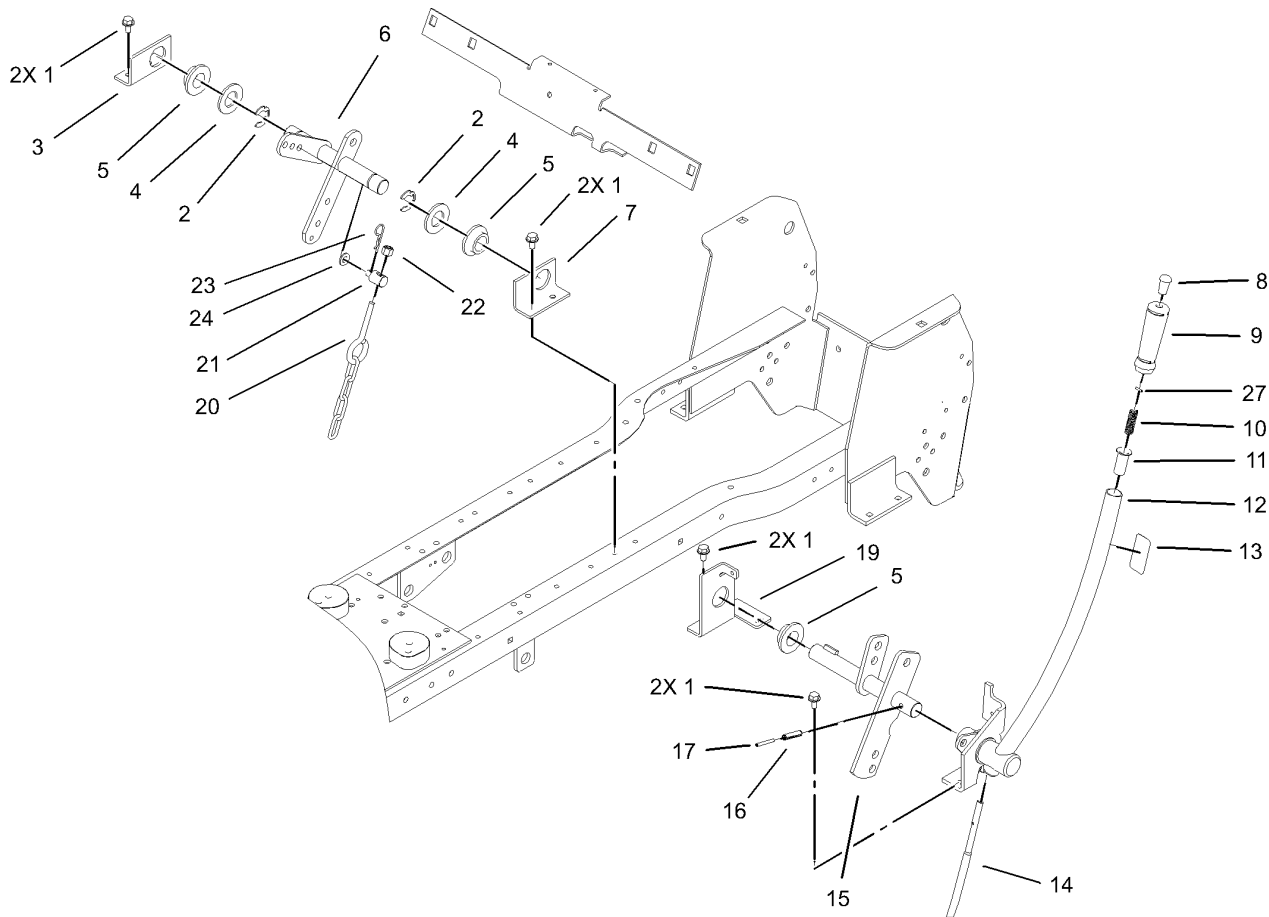 


Manual Lift Lever Assembly

Ref	Part No.	Qty.	Description				
1	32144-14	8	Screw-HWH				
2	32151-91	2	Ring-Retaining				
3	106-5650-03	1	Bracket-Pivot Linkage, RH				
4	3256-62	2	Washer-Flat				
5	106269	3	Bearing-Flange				
6	106-5660-03	1	Lift Lever ASM				
7	106-5652-03	1	Bracket-Pivot Linkage, LH				
8	92-6711	1	Tip - Rod				
9	92-6710	1	Grip-Handle				
10	3624	1	Spring-Compression				
11	8130	1	Retainer-Spring				
12	106-5663	1	Lift Lever Asm,				
13	112168	1	Decal-Lift				
14	92-6977-03	1	Rod - Lift Lever				
15	106-5656-03	1	Lift Arm ASM				
16	32121-25	1	Pin-Roll				
17	32121-103	1	Pin-Spring				
19	106-4073-03	1	Bracket-Pivot, Lift				
20	106522	1	Chain-Lift				
21	79-2790	1	Trunnion				
22	3296-39	1	Nut-Lock, NI				
23	9335054	1	Pin-Hair				
24	3256-24	1	Washer-Flat				
27	933148	1	Pin-Spirol				

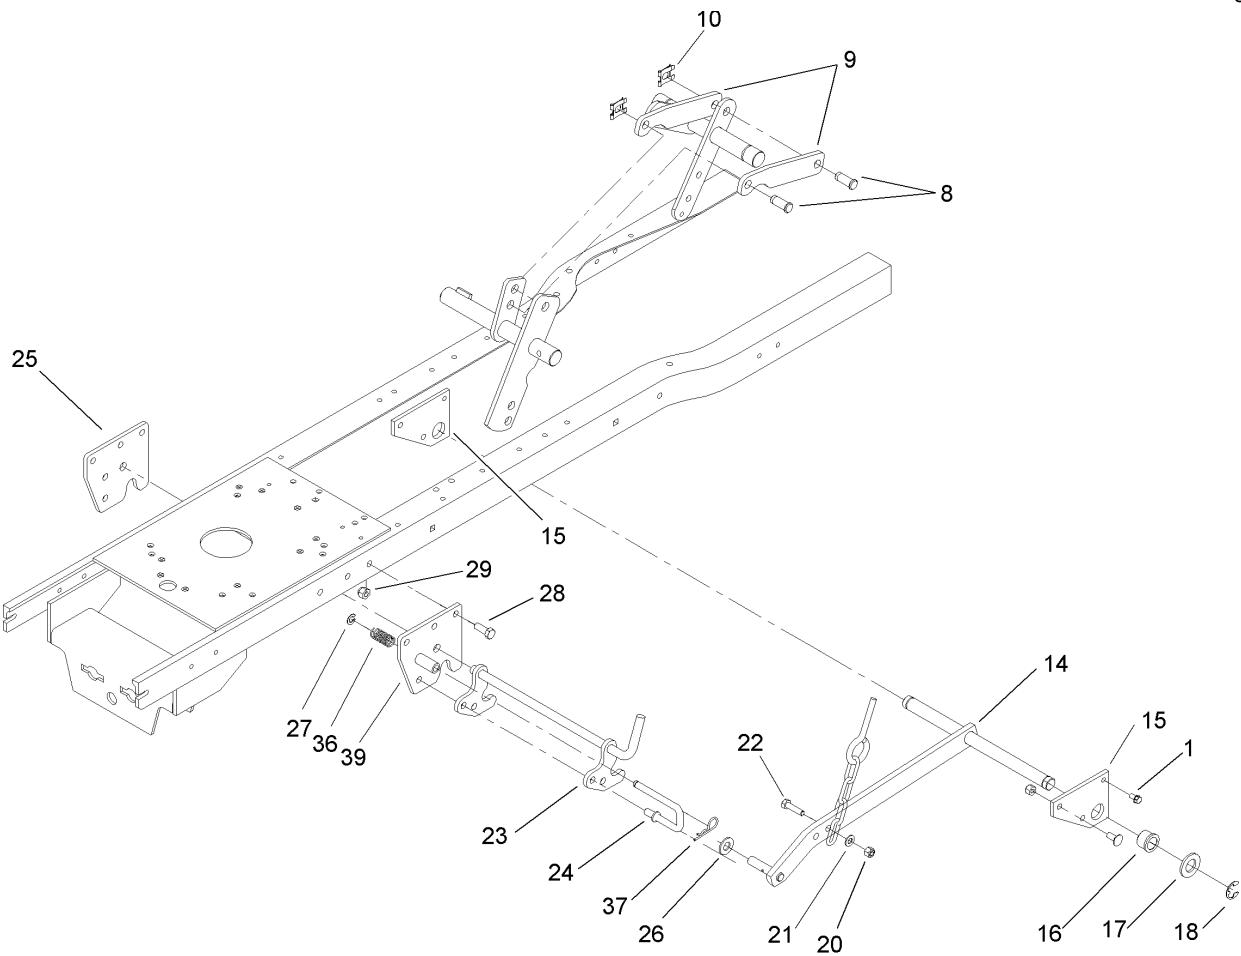 


Electrical Lift Assembly

Ref	Part No.	Qty.	Description				
1	32144-14	2	Screw-HWH				
8	98-1639	2	Pin-Clevis				
9	106-5691-03	2	Strap-Link, Lift				
10	95-4064	2	Clip-Pin				
14	106-4065-03	1	Lift Bar ASM				
15	106-4066	2	Plate-Lift, Rear				
16	98-1636	2	Bushing - Flange				
17	3256-28	2	Washer-Flat				
18	32151-48	2	E-Ring				
20	3296-29	1	Nut-Lock, NI				
21	3256-23	1	Washer-Flat				
22	322-6	1	Screw-HH				
23	106-4091	1	Midhitch Latch ASM				
24	107-3663	1	Rod-Catch				
25	106-4060	1	Plate-Hitch				
26	3256-26	1	Washer-Flat				
27	105797	1	Ring-Retaining				
28	323-46	6	Screw-HH				
29	3296-39	6	Nut-Lock, NI				
36	101853	1	Spring-Compression				
37	9335054	1	Pin-Hair				
39	107-3665	1	Midhitch ASM				

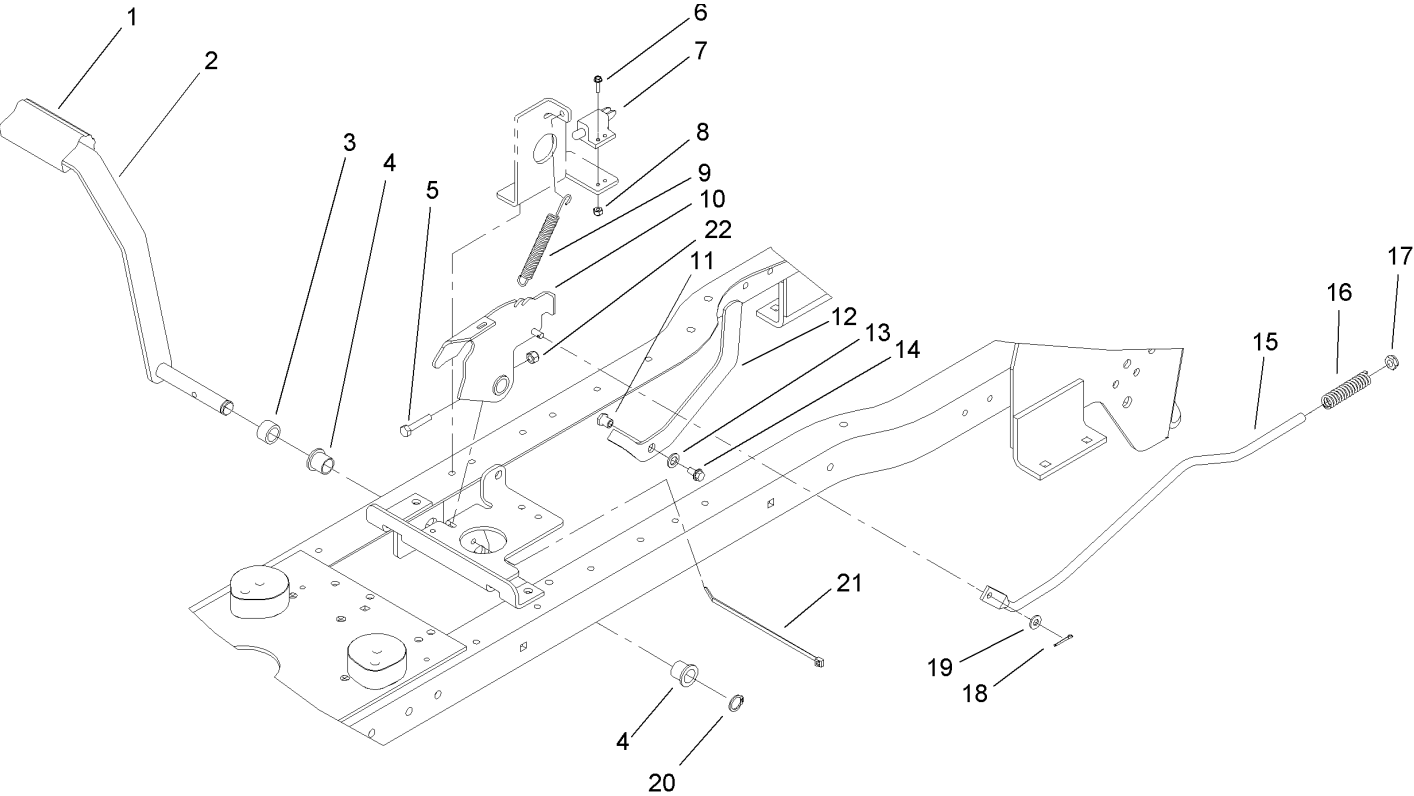 

Brake Assembly


Ref	Part No.	Qty.	Description				
1	65-2920	1	Pad-Pedal				
2	106-4068-03	1	Brake Pedal ASM				
3	92-6982	1	Spacer - Brake				
4	256-90	2	Bushing-Flange				
5	321-13	1	Screw-HH				
6	3290-392	2	Screw-HHF				
7	95-1653	1	Switch-Pole, Single				
8	3296-1	2	Nut-Lock, NI				
9	93-0540	1	Spring - Extension				
10	106-4069	1	Brake ASM				
11	47-4990	1	Post-Linkage Mounting				
12	106-4075	1	Lever, Brake-Parking				
13	106-5592	1	Spacer-Brake, Parking				
14	3234-13	1	Screw-HHF				
15	106-5621	1	Rod-Brake				
16	104-0837	1	Spring-Compression				
17	3296-5	1	Nut-Lock, NI				
18	3272-6	1	Pin-Cotter				
19	3256-22	1	Washer-Flat				
20	32151-62	1	Ring-Retaining				
21	614249	1	Strap-Tie				
22	3296-42	1	Nut-Lock, NI				

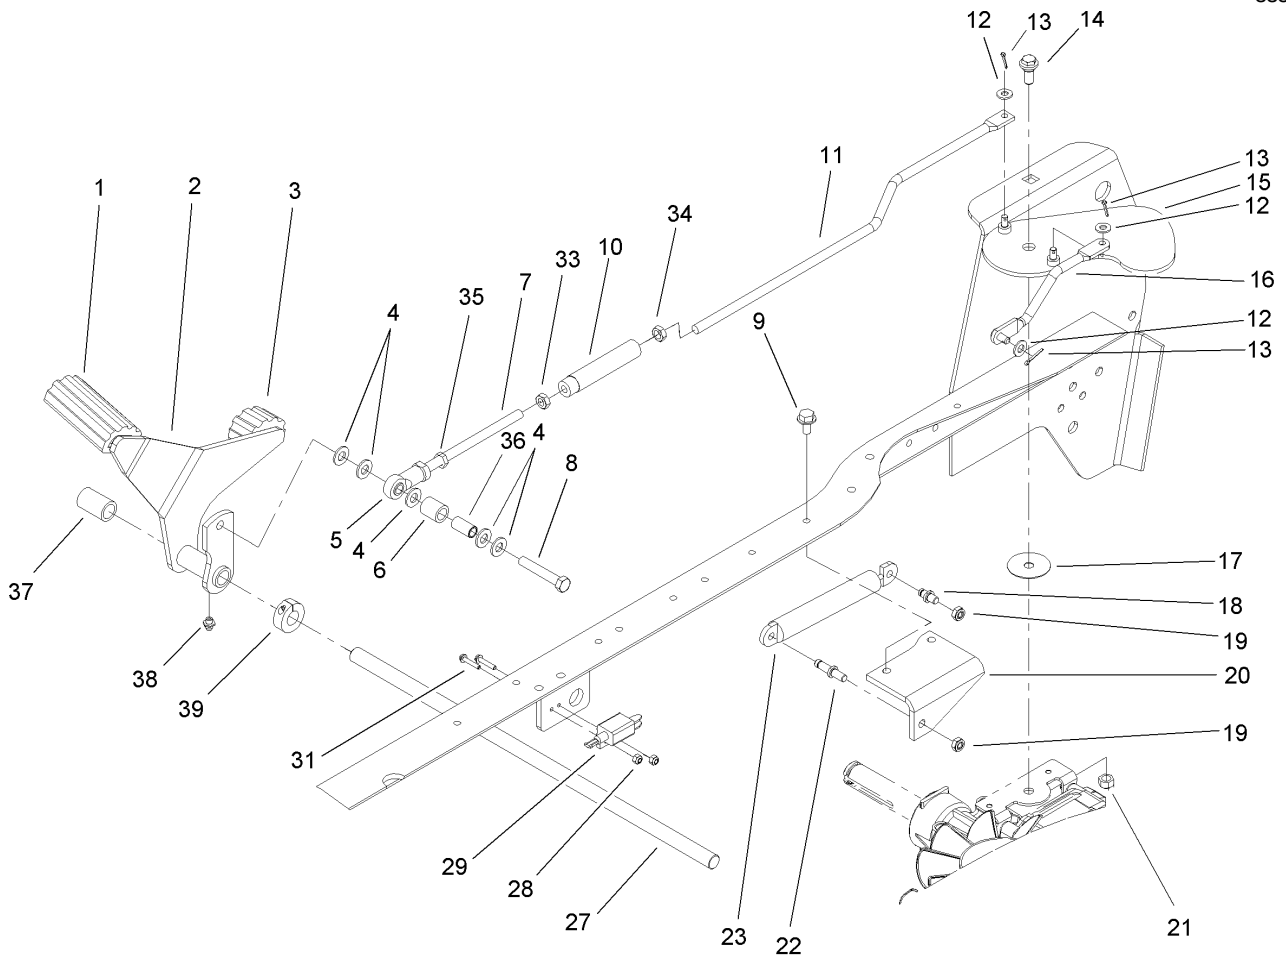 

Hydro Control Assembly


Ref	Part No.	Qty.	Description
1	107-9211	1	Pad-Pedal Forward
2	107-3676-03	1	Hydro Pedal ASM
3	107-9212	1	Pad-Pedal Reverse
4	3256-24	5	Washer-Flat
5	92-7008	1	End-Rod, Female
6	106-9939	1	Spacer-Interlock
7	107-3674	1	Rod-Hydro, Front
8	323-11	1	Screw-HH
9	32144-14	1	Screw-HWH
10	95-1504	1	Turnbuckle
11	107-3679	1	Rod-Hydro, Rear
12	3256-23	3	Washer-Flat
13	3272-6	3	Pin-Cotter
14	94-7582	1	Bolt - Shoulder
15	106-5579	1	Cruise Plate ASM
16	106-5577	1	Bell Crank Rod ASM
17	94-7575	1	Spacer - Cruise
18	100-6056	1	Arm-Control, Pin Damper
19	3296-20	2	Nut-Lock, NI
20	106-8247-03	1	Bracket-Damper
21	108881	1	Nut
22	100-6057	1	Pin-Damper Bracket
23	100-8732	1	Damper-Gas
27	94-4944	1	Shaft - Pedal Pivot

Ref	Part No.	Qty.	Description
28	3296-1	2	Nut-Lock, NI
29	106-4145	1	Switch-Adjustable, Nc
31	32105-29	2	Screw-SHWH
33	3220-3	1	Nut-Jam
34	106-8248	1	Nut-Jam, Hex LH
35	3218-3	1	Nut-Jam
36	76-1920	1	Sleeve-Bearing
37	92-6966	1	Spacer
38	302-26	1	Fitting-Grease
39	107-8453	1	Collar-Locking

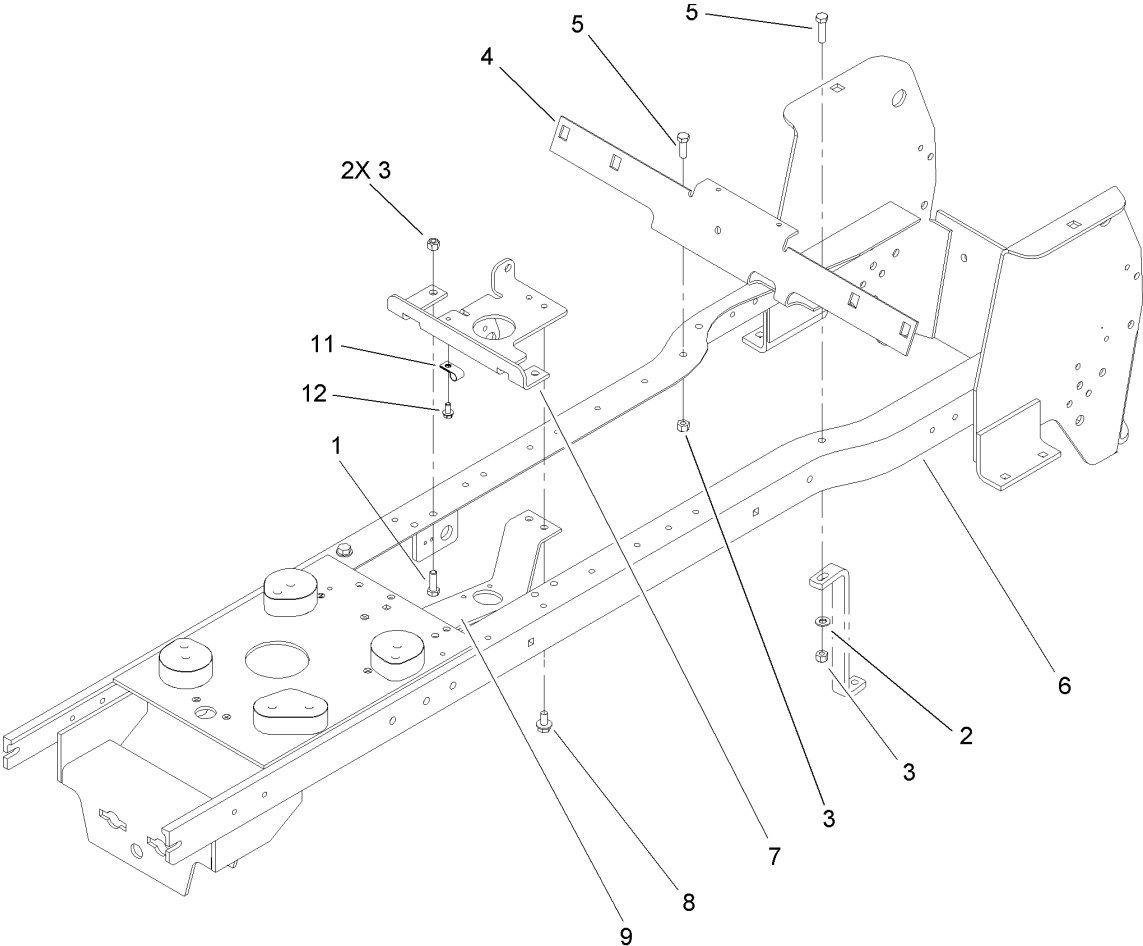 


Frame Assembly

Ref	Part No.	Qty.	Description				
1	322-5	2	Screw-HH				
2	3256-23	1	Washer-Flat				
3	3296-29	4	Nut-Lock, NI				
4	106-5564-03	1	Support-Fender				
5	322-6	2	Screw-HH				
6	107-8451-03	1	Frame ASM				
7	106-4074-03	1	Bracket-Support, Steering				
8	32144-14	2	Screw-HWH				
9	106-5573-03	1	Steering Bracket ASM				
11	2412-89	1	Clamp				
12	32144-4	1	Screw-HWH				

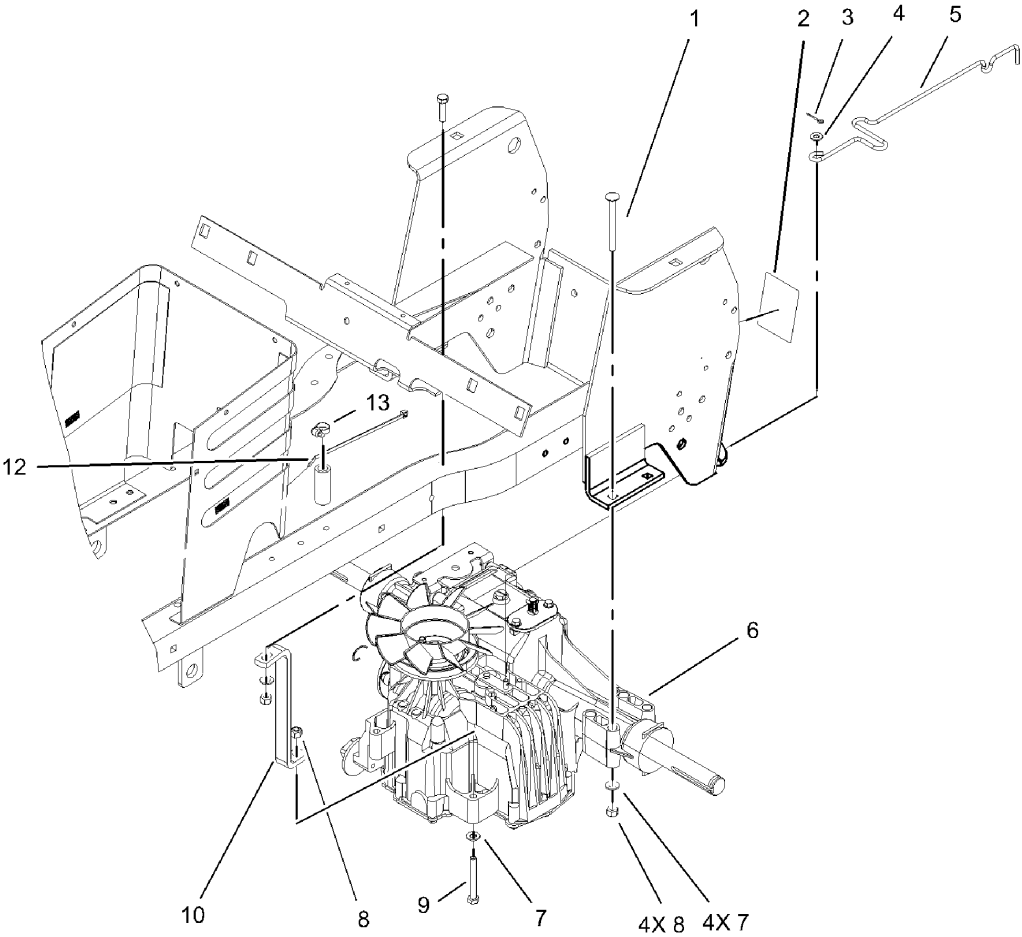 

Hydro Transaxle Assembly


Ref	Part No.	Qty.	Description				
1	3230-11	4	Screw-CARR				
2	92-6726	1	Decal - Hydro Valve				
3	3272-2	1	Pin-Cotter				
4	3256-22	1	Washer-Flat				
5	104-5037	1	Rod-Bypass				
6	104-4310	1	Transaxle-Hydrostatic				
7	3256-23	5	Washer-Flat				
8	3296-29	5	Nut-Lock, NI				
9	322-11	1	Screw-HH				
10	100-1343-03	1	Strap-Torque				
12	614249	1	Strap-Tie				
13	2412-119	1	Clamp-Worm				

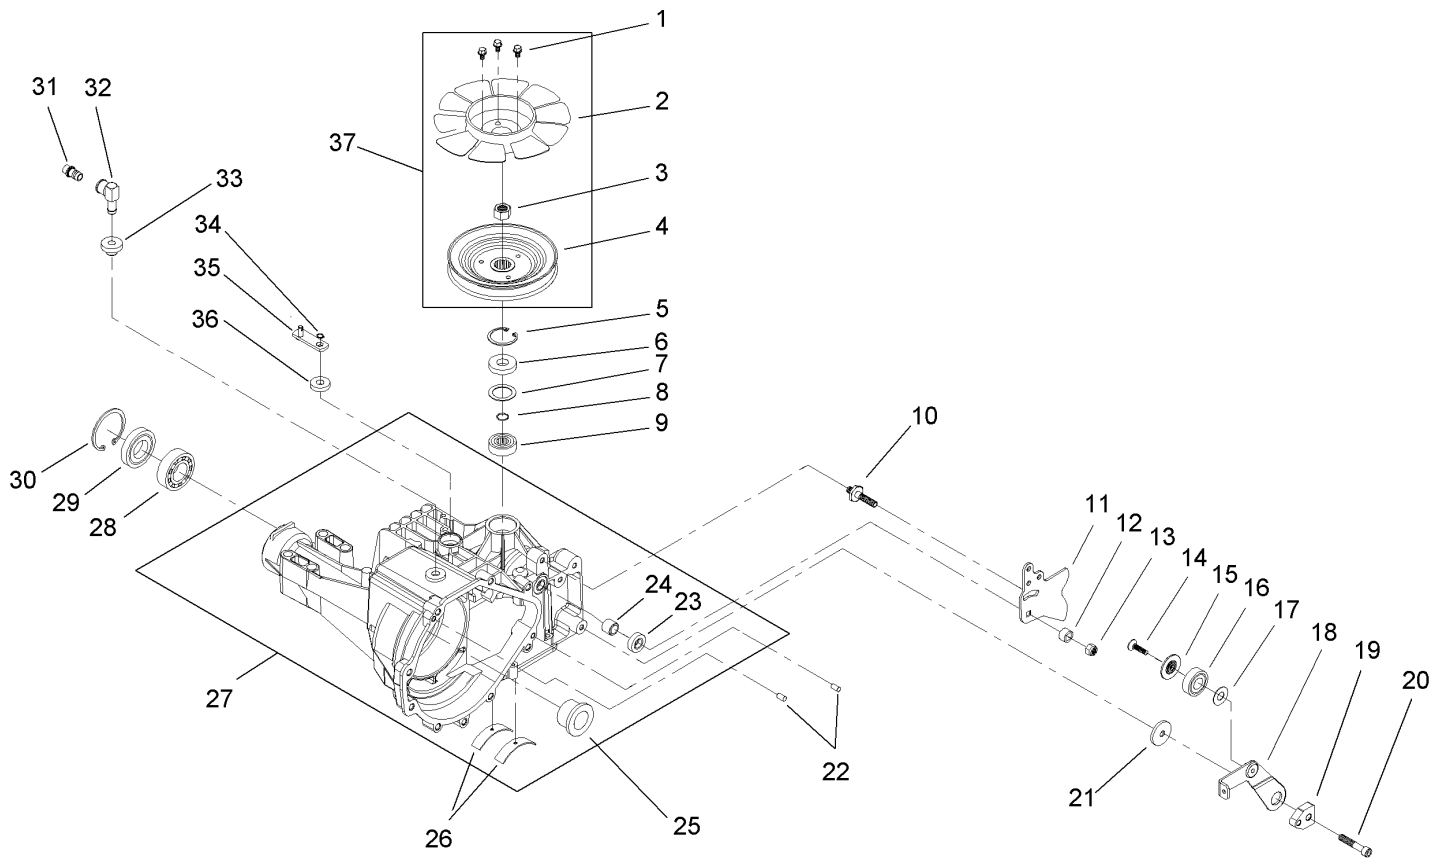 

Fan Assembly


Ref	Part No.	Qty.	Description
1	104-2164	3	Screw
2	104-2162	1	Fan
3	104-2168	1	Nut-Hex
4	104-2161	1	Pulley
5	94-1903	1	Ring-Retaining
6	92-6543	1	Seal-Lip
7	104-2104	1	Spacer
8	94-1902	1	Ring-Wire, Retaining
9	94-1904	1	Bearing-Shaft, Ball
10	104-2116	1	Stud
11	100-6093	1	Arm-Control
12	104-2163	1	Spacer-Trunnion
13	104-2159	1	Nut-Hex Lock
14	104-2158	1	Screw-Countersunk
15	104-2157	1	Spacer-Locating
16	104-2156	1	Bearing
17	94-1933	1	Washer
18	104-2114	1	Arm-Return
19	104-2119	1	Puck-Adjusting
20	104-2155	1	Screw
21	104-2154	1	Washer
22	104-2170	2	Pin
23	92-6544	1	Seal-Lip
24	104-2113	1	Bushing-Trunnion

Ref	Part No.	Qty.	Description
25	104-2139	2	Bearing-Flange
26	94-1905	2	Bearing - Cradle
27	104-2101	1	Main Housing ASM
28	104-2143	2	Bearing-Ball
29	104-2144	2	Seal
30	104-2169	2	Ring-Retaining
31	93-3817	1	Fitting-Vent
32	104-2166	1	Fitting
33	104-2165	1	Bushing-Rubber
34	936109	1	Ring-Retaining
35	104-2117	1	Arm-Bypass
36	92-6545	1	Seal-Lip
37	104-2190	1	Kit-Fan/pulley

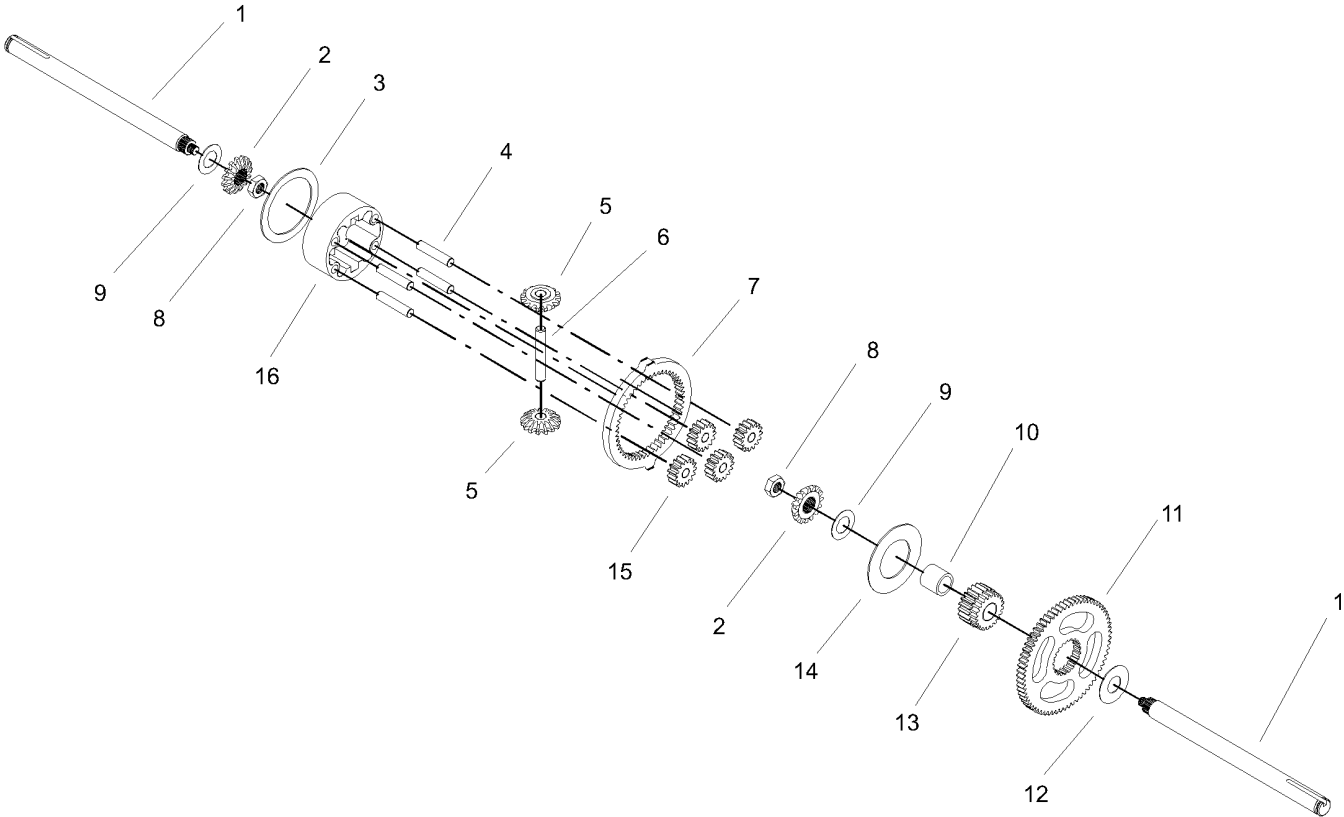 

Differential Gear Assembly


Ref	Part No.	Qty.	Description				
1	104-2145	2	Shaft-Axle				
2	104-2135	2	Gear-Miter				
3	104-2138	1	Plate-Thrust				
4	104-2128	4	Pin-Carrier				
5	104-2136	2	Gear-Miter				
6	104-2137	1	Shaft				
7	104-2133	1	Gear-Ring, 51t				
8	104-2142	2	Nut-HJ				
9	104-2140	2	Washer				
10	104-2160	1	Bearing-Sleeve				
11	104-2130	1	Gear-Spur, 67t				
12	104-2141	1	Washer				
13	104-2131	1	Gear-Sun, 21t				
14	104-2132	1	Plate-Thrust, Planet				
15	104-2129	4	Gear-Planet, 15t				
16	104-2134	1	Carrier-Planetary				

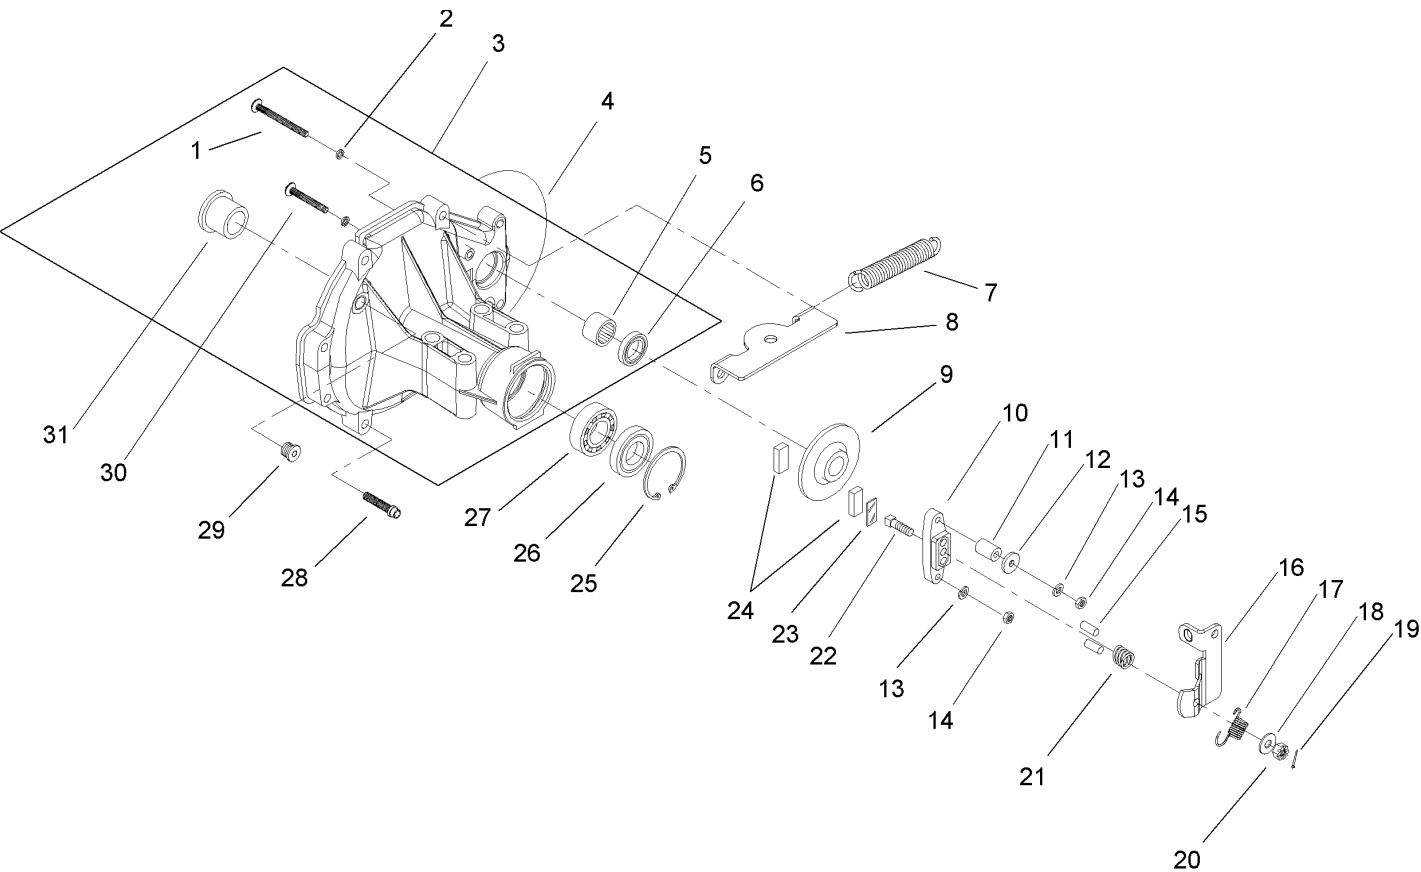 

RH Housing Assembly


Ref	Part No.	Qty.	Description
1	104-2182	1	Bolt
2	104-2191	4	O-Ring
3	104-2102	1	RH Housing ASM
4	104-2147	1	Sealant
5	104-2149	1	Bearing-Needle
6	104-2152	1	Seal-Lip
7	104-2118	1	Spring-Return
8	100-1349	1	Bracket-Bell Crank
9	104-2153	1	Disk-Brake
10	104-2173	1	Yoke-Brake
11	104-2180	1	Spacer
12	104-2183	1	Washer
13	104-2177	2	Washer-Lock
14	104-2178	2	Nut
15	104-2176	2	Pin-Brake
16	104-0841	1	Arm-Brake
17	104-2184	1	Spring-Arm, Brake
18	5-4460	1	Washer-Pivot
19	3272-7	1	Pin-Cotter
20	93-3807	1	Nut-Castle
21	104-2188	1	Spring-Brake, Anti Drag
22	104-2174	1	Bolt-SQH
23	104-2181	1	Puck-Plate
24	104-2171	2	Puck-Brake

Ref	Part No.	Qty.	Description
25	104-2169	2	Ring-Retaining
26	104-2144	2	Seal
27	104-2143	2	Bearing-Ball
28	104-2148	9	Screw-TTH
29	104-2189	1	Plug-Thread, Straight
30	104-2172	1	Bolt
31	104-2139	2	Bearing-Flange

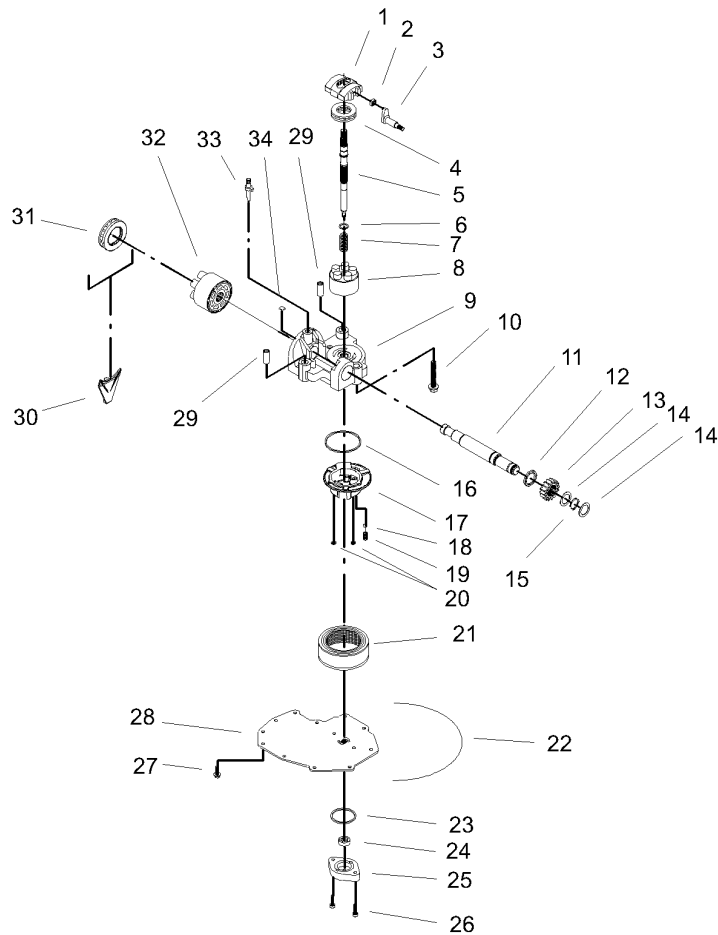 

Cylinder Block Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	94-1907	1	Swashplate-Variable	25	104-2124	1	Gerotor Cover
2	94-1910	1	Guide-Slot	26	104-2111	2	Capscrew
3	104-2112	1	Trunnion ASM	27	104-2120	11	Screw
4	94-6922	1	Bearing-Thrust	28	104-2121	1	Cover-Lower
5	104-2105	1	Shaft-Input	29	94-1927	2	Pin
6	94-1937	1	Washer-Block, Thrust	30	104-2127	1	Retainer-Motor Bearing
7	94-1936	1	Spring-Block	31	94-6923	1	Bearing-Thrust
8	104-2106	1	Cylinder Block ASM	32	94-1913	1	Cylinder Block ASM
9	104-2103	1	Kit-Center Section	33	94-1914	1	Actuator-Bypass
10	94-6926	3	Bolt	34	94-6925	1	Plate-Bypass
11	104-2107	1	Shaft-Output				
12	104-2109	1	Spacer				
13	104-2110	1	Gear-Pinion, 16t				
14	104-2150	2	Washer				
15	104-2151	1	Ring-Retaining				
16	104-2185	1	O-Ring				
17	104-2156	1	Bearing				
18	104-2187	1	Ball				
19	104-2186	1	Spring-Relief				
20	104-2191	4	O-Ring				
21	104-2125	1	Filter				
22	104-2147	1	Sealant				
23	104-2123	1	O-Ring				
24	104-2122	1	Gerotor ASM				

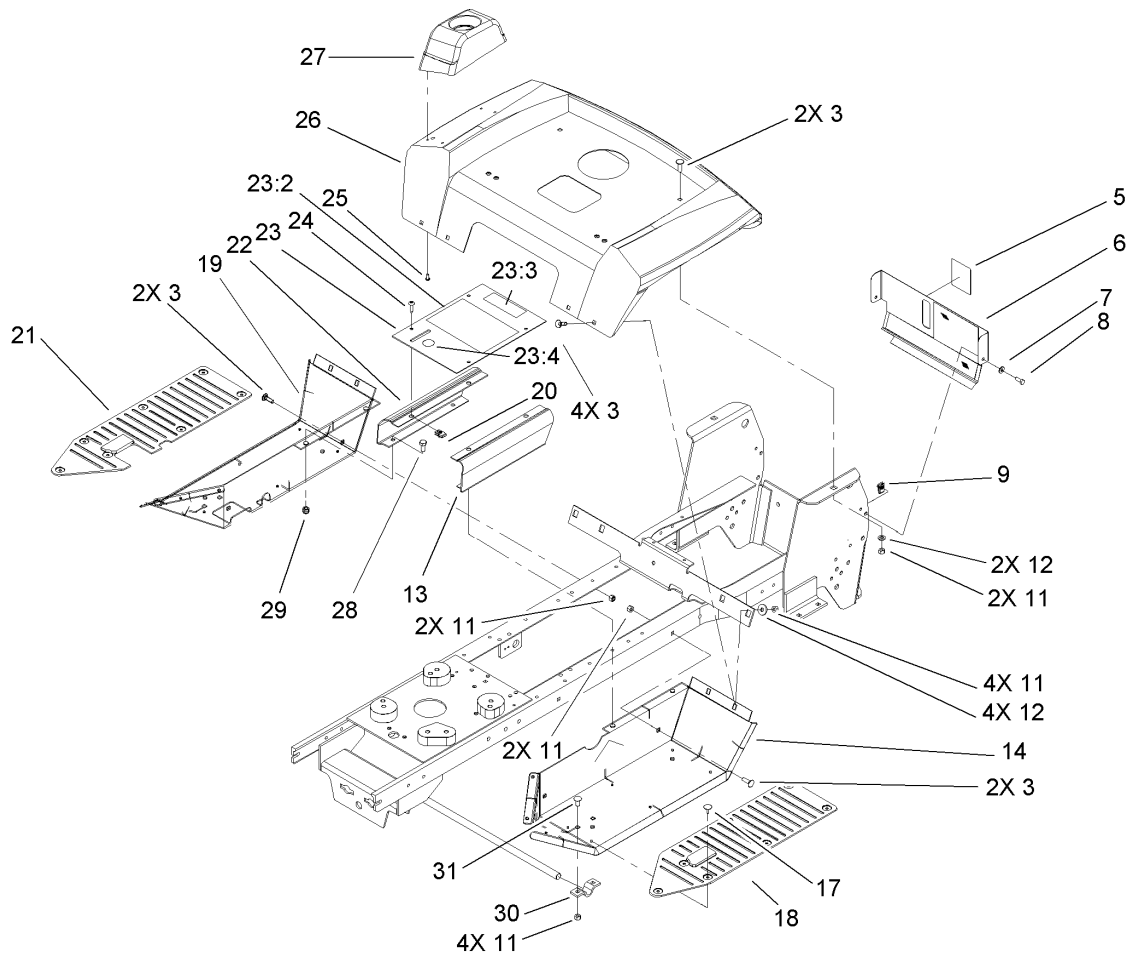 

Fender and Footrest Assembly


Ref	Part No.	Qty.	Description
3	3230-31	10	Screw-CARR
5	92-6727	1	Decal-Fuel Level
6	99-6765-03	1	Rear Panel ASM
7	3256-22	2	Washer-Flat
8	321-4	2	Screw-HH
9	609900	2	Nut-Speed
11	3296-29	14	Nut-Lock, NI
12	94-2869	6	Washer
13	106-5594-04	1	Channel-Saddle, LH
14	92-6746-04	1	Footrest-LH
17	3290-479	14	Fastener-Panel
18	92-6688	1	Foot Mat-LH
19	92-6747-04	1	Footrest-RH
20	107069	4	Clip
21	92-6687	1	Foot Mat-RH
22	106-5593-04	1	Channel-Saddle, RH
23	107-9203	1	Plate-Saddle, Nh Decal ASM
23:2	93-0302	1	Decal - Danger
23:3	94-1863	1	Decal - Instruction
23:4	107-8495	1	Decal-Parking Brake, New Holland (Ce)
24	92-7020	4	Screw-HH
25	32144-20	4	Screw-Thread Forming
26	106-5583-04	1	Fender ASM

Ref	Part No.	Qty.	Description
27	104-0838	1	Holder-Cup
28	323-4	4	Screw-HH
29	3296-39	4	Nut-Lock, NI
30	106288	2	Clamp
31	3230-1	4	Bolt-CARR

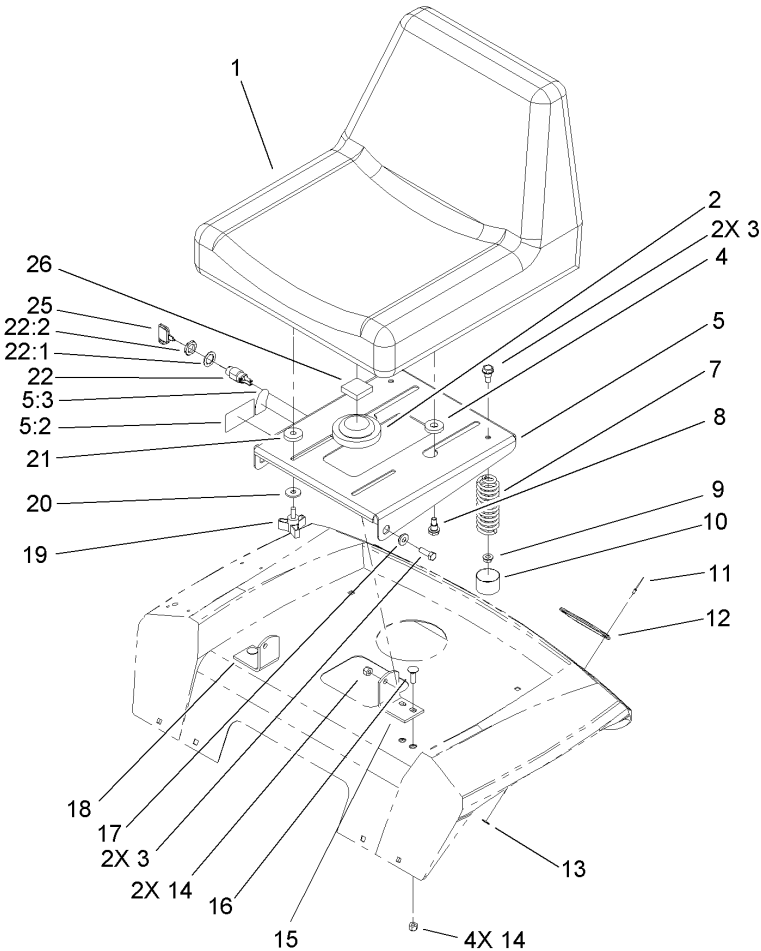 

Seat Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	107-9202	1	Seat-High Back	22:2	218-461	1	Nut-HH
2	100-3524	1	Switch-Seat	25	700918	1	Key
3	322-5	4	Screw-HH	26	104-2488	1	Foam-Switch, Seat
4	92-6750	2	Spacer-Nylon				
5	104-5029	1	Support Seat ASM				
5:2	99-2985	1	Danger-Decal				
5:3	99-8894	1	Decal-Nmir Switch				
7	92-7054	2	Spring-Compression				
8	92-6986	2	Bolt-Shoulder				
9	32128-25	2	Nut-HF				
10	701178	2	Cap-Protector				
11	3290-282	4	Rivet-Pop				
12	106557	2	Reflector-Stick On				
13	3256-49	4	Washer-Flat				
14	3296-29	6	Nut-Lock, NI				
15	79-0950-03	1	Bracket-Pivot, RH				
16	3230-31	4	Screw-CARR				
17	105503	2	Bushing				
18	79-0970-03	1	Bracket-Pivot LH				
19	700806	2	Knob				
20	94-2869	2	Washer				
21	109989	2	Spacer-Nylon				
22	46-5780	1	Switch-Starter				
22:1	3254-5	1	Washer-Tooth				

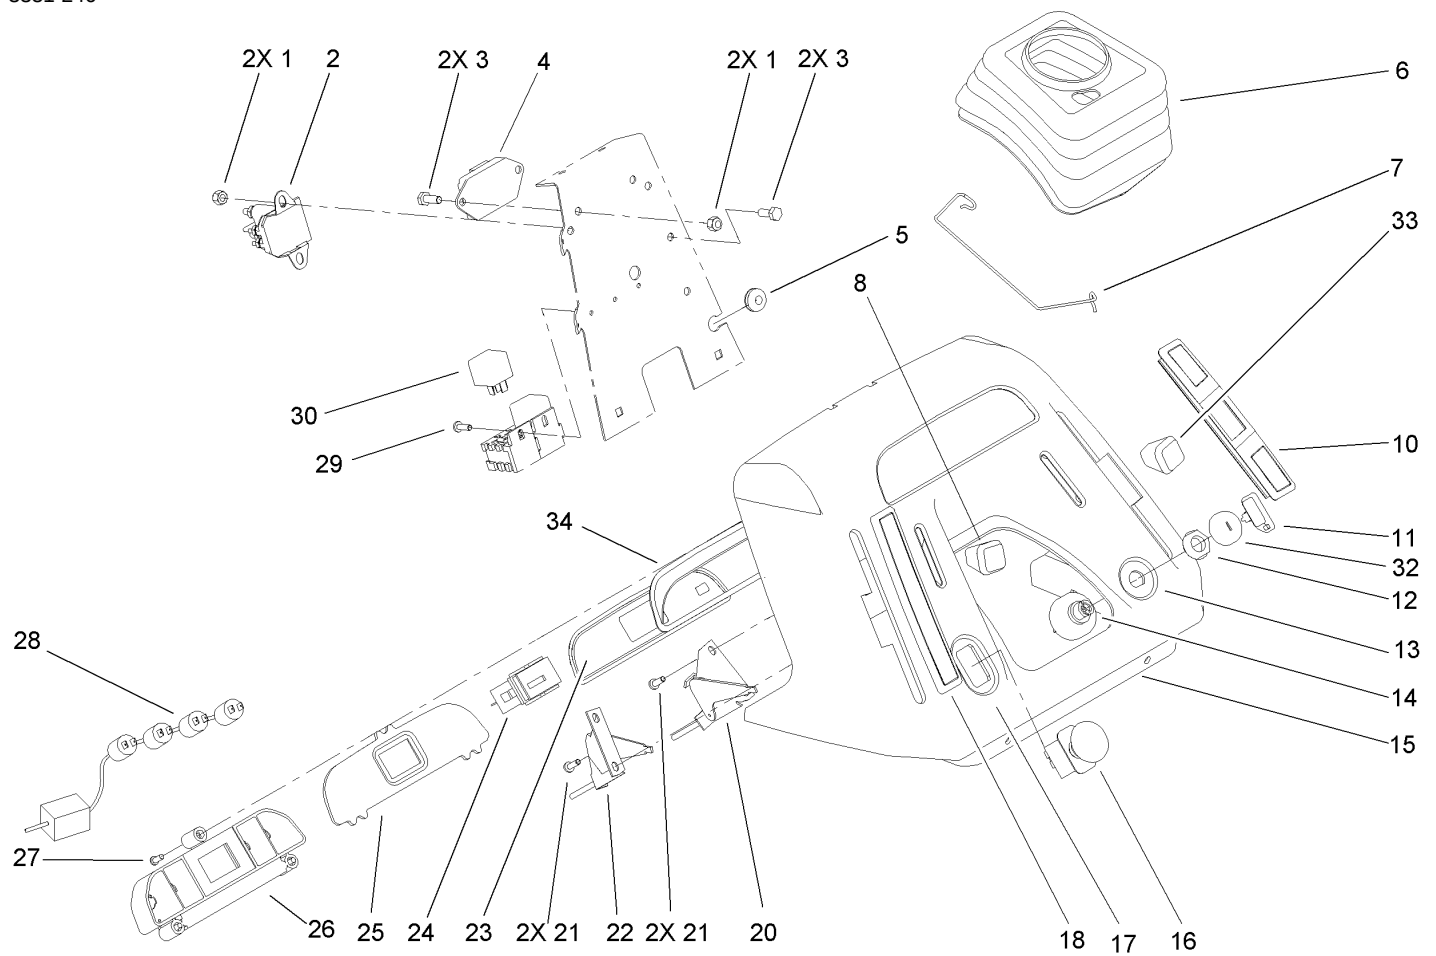 

Dash Assembly


Ref	Part No.	Qty.	Description
1	3296-42	4	Nut-Lock, NI
2	106-8245	1	Solenoid
3	321-4	4	Screw-HH
4	99-3701	1	Module-Clutch
5	237-141	1	Grommet-Rubber
6	92-6680	1	Boot-Steering
7	94-2966	1	Clip - Boot
8	66-0120	1	Knob
10	92-6796	1	Cover - Slot RH
11	700918	1	Key
12	700919	1	Nut
13	92-6739	1	Decal-Throt/ign
14	92-6785	1	Switch-Ignition
15	94-1894	1	Dash
16	93-9999	1	Switch - PTO
17	92-6738	1	Decal-Choke/pto
18	92-6797	1	Cover - Slot, LH
20	92-6782	1	Control-Throttle
21	32144-32	4	Screw
22	92-6781	1	Control-Choke
23	107-9215	1	Decal-Dash Lens,nh
24	94-4208	1	Hourmeter
25	92-6705	1	Lens - Dash
26	92-6732	1	Housing - Indicator Light

Ref	Part No.	Qty.	Description
27	94-6961	3	Screw
28	99-8066	1	Harness-Lamp
29	32144-8	2	Screw-HH
30	98-7249	2	Relay
32	700960	1	Bezel
33	92-6755	1	Knob - Throttle
34	92-6915	1	Shade - Lens

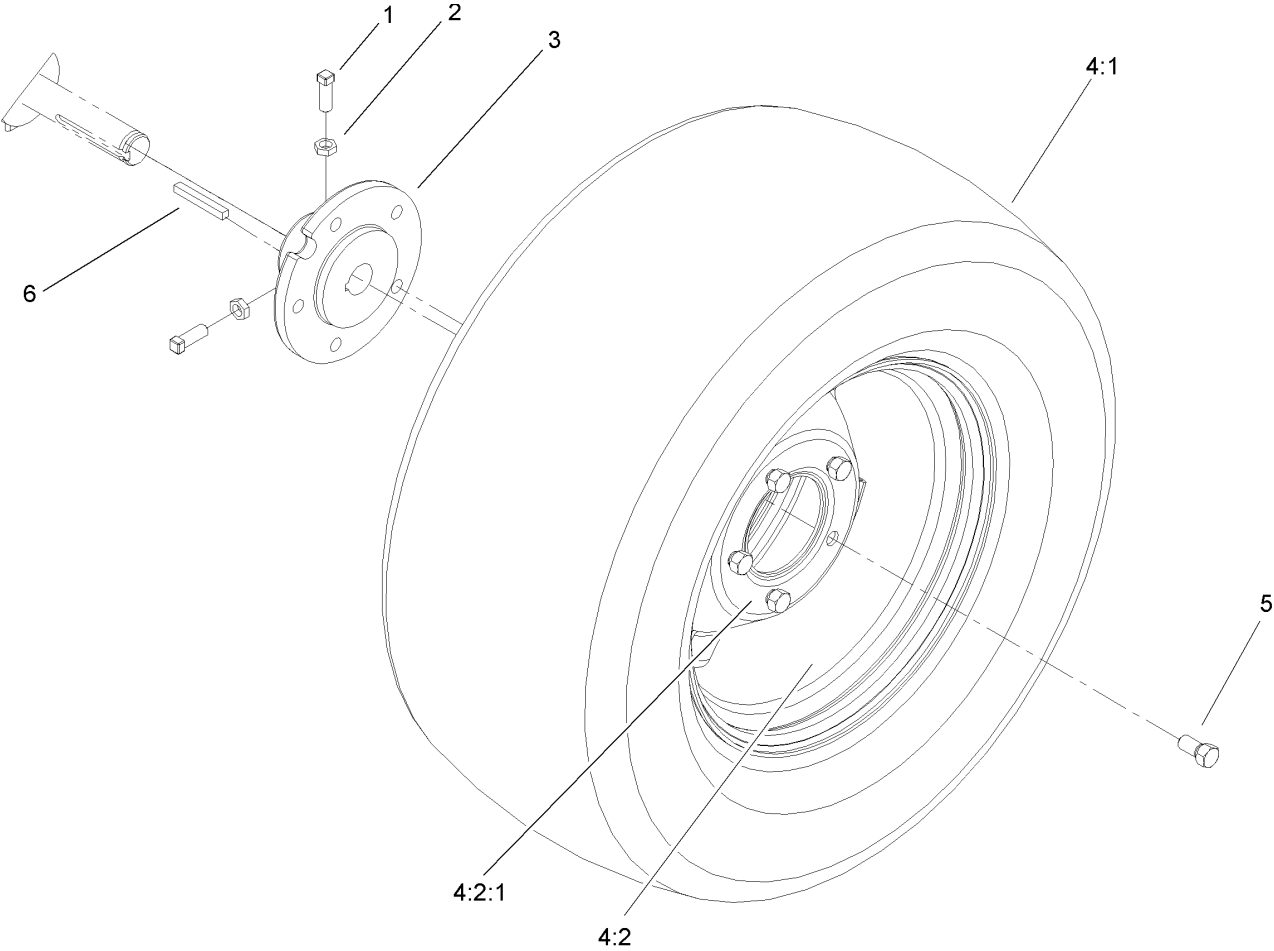 

Rear Wheel Assembly


Ref	Part No.	Qty.	Description				
1	3243-5	4	Screw-Set				
2	3218-3	4	Nut-Jam				
3	93-3659-03	2	Hub-Wheel				
1 2 4		2	Rear Wheel & Tire ASM				
4:1	99-2334	1	Tire				
4:2	92-6757	1	Rim ASM				
4:2:1	5108	1	Valve				
1 4:99	7007	1	Tube-Inner				
5	83-2720	10	Bolt-Lug				
6	5-1336	2	Key-Square				

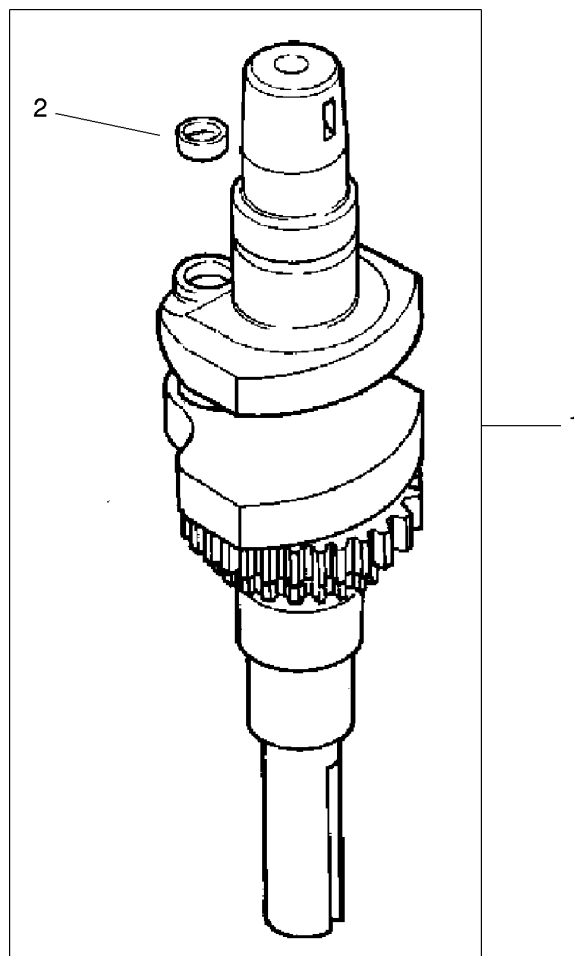 

Crankshaft Assembly

Kohler Model No. CV460S-26518


Ref	Part No.	Qty.	Description
③1	12 014 67-S	1	Crankshaft (Includes 2)
③2	25 139 27-S	1	Plug, Cup

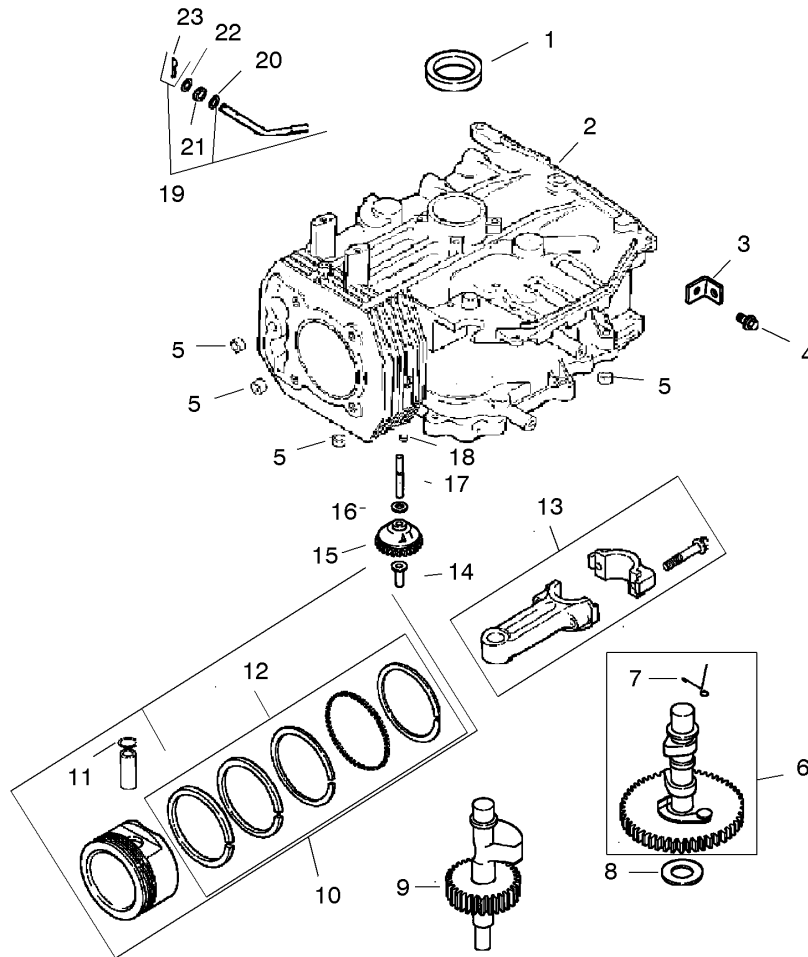 

Crankcase Assembly


Kohler Model No. CV460S-26518

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	12 032 03-S	1	Seal, Front Oil	13	12 067 11-S	1	Connecting Rod (Std.)
2		1	Crankcase (Use: Short Block Or Miniblock)	14	12 067 12-S	1	Connecting Rod (.25)
3	12 445 02-S	1	Strap, Lifting	15	12 380 01-S	1	Pin, Governor Regulating
4	M-839025-S	1	Screw, Hex. Flange M8x1.25x25	16	12 043 05-S	1	Gear, Governor
5	24 380 13-S	4	Pin, Locating	17	M-631005-S	1	Washer, Plain 6 Mm
6	12 010 31-S	1	Camshaft ASM (Includes 7)	18	12 144 02-S	1	Shaft, Governor Gear
7	12 089 31-S	1	Spring, Actuating	19	52 139 09-S	1	Plug, Cup
8	12 422 08-S	1	Shim, Camshaft - Blue	20	12 755 64-S	1	Kit, Governor Cross Shaft W/clip (Includes 23)
9	12 422 09-S	1	Shim, Camshaft - Red	21	X-25-102-S	1	Washer, Plain 1/4
10	12 422 10-S	1	Shim, Camshaft - Yellow	22	12 032 01-S	1	Seal, Governor Cross Shaft
11	12 422 11-S	1	Shim, Camshaft - Green	23	M-631015-S	1	Washer, Plain 6 Mm
12	12 422 12-S	1	Shim, Camshaft - Gray		12 154 05-S	1	Clip, Hitch Pin
13	12 422 13-S	1	Shim, Camshaft - Black				
14	12 422 07-S	1	Shim, Camshaft - White				
15	12 144 28-S	1	Shaft, Balance				
16	12 874 01-S	1	Piston W/ring Set (Std.) (Includes 11, 12)				
17	12 874 10-S	1	Piston W/ring Set (.08)				
18	12 874 02-S	1	Piston W/ring Set (.25)				
19	12 874 03-S	1	Piston W/ring Set (.50)				
20	12 018 02-S	2	Retainer, Piston Pin				
21	12 108 01-S	1	Ring Set (Std. & .08)				
22	12 108 02-S	1	Ring Set (.25)				

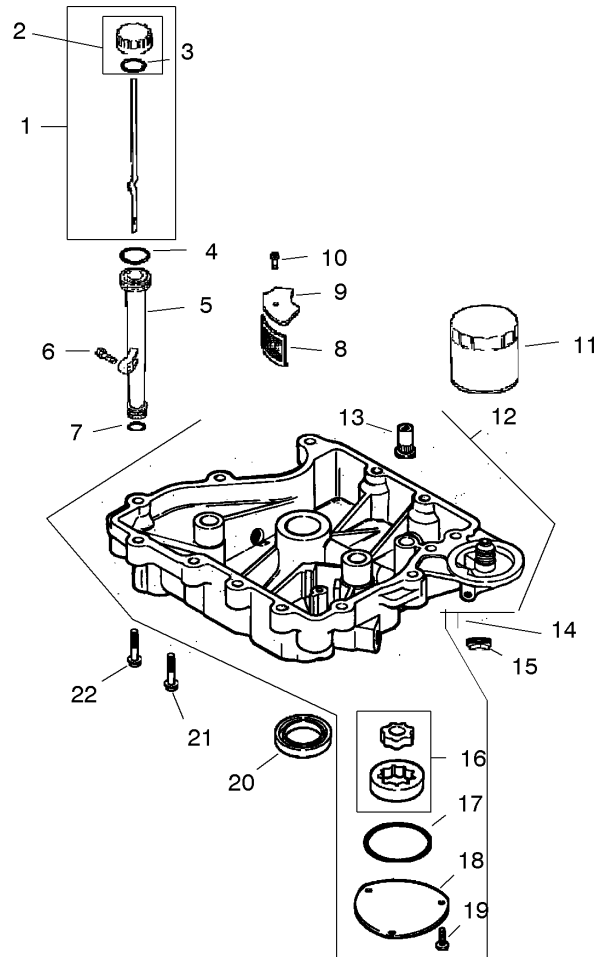 

Oil Pan/Lubrication Assembly **Kohler Model No. CV460S-26518**


Ref	Part No.	Qty.	Description				
❶1	12 038 01-S	1	Dipstick ASM (Includes 2, 3)				
❷2	25 755 13-S	1	Kit, Oil Fill Cap (Includes 3)				
❸3	25 153 02-S	1	O-Ring				
❹4	12 153 02-S	1	O-Ring, Upper Oil Fill Tube				
❺5	12 123 04-S	1	Tube, Oil Fill				
❻6	M-645025-S	1	Screw, Hex. Flange M6x1.0x25				
❼7	12 153 01-S	1	O-Ring, Lower Oil Fill Tube				
❽8	25 162 07-S	1	Screen, Oil Pickup				
❾9	12 096 03-S	1	Cover, Oil Pickup Screen				
❿10	M-545016-S	1	Screw, Hex. Flange M5x0.8x16				
⓫11	12 050 01-S	1	Filter, Oil				
⓬12	12 199 50-S	1	Pan Asm, Oil (Includes 13, 16-19)				
⓭13	25 462 09-S	1	Valve, Oil Pressure Relief				
⓮14	25 139 52-S	1	Plug, Sq. Hd. 1/8				
⓯15	25 139 57-S	2	Plug, Sq. Hd. Solid 3/8				
⓰16	12 393 01-S	1	Pump Asm, Oil				
⓱17	12 153 06-S	1	O-Ring, Oil Pump Cover				
⓲18	12 096 34-S	1	Cover, Oil Pump				
⓳19	M-545016-S	3	Screw, Hex. Flange M5x0.8x16				
⓴20	12 032 03-S	1	Seal, Front Oil				
⓵21	24 086 16-S	11	Screw, Hex. Flange M8x1.25x45				
⓶22	24 086 17-S	1	Screw, Hex. Flange M8x1.25x45				

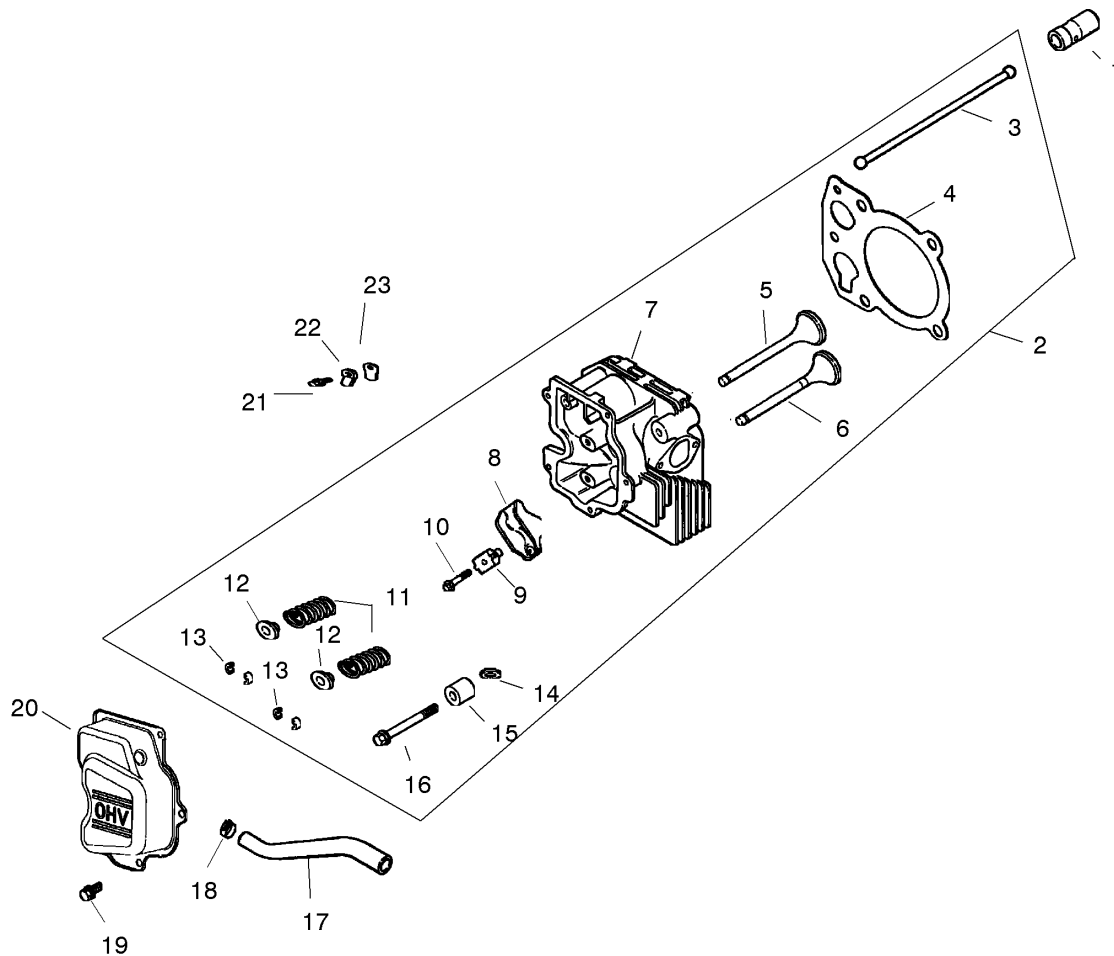 

Head/Valve/Breather Assembly Kohler Model No. VS460S-26518


Ref	Part No.	Qty.	Description
❶	25 351 01-S	2	Lifter, Valve
❷	12 755 97-S	1	Kit, Cylinder Head (Includes 3-17, Carburetor Gasket (2), Air Cleaner Base Gasket, Exhaust Manifold Gasket)
❸	12 411 05-S	2	Rod, Push
❹	12 041 08-S	1	Gasket, Cylinder Head
❺	12 017 01-S	1	Valve, Intake (Std.)
❻	12 016 01-S	1	Valve, Exhaust (Std.)
❼	12 318 50-S	1	Cylinder Head
❽	25 186 01-S	2	Arm, Rocker
❾	12 599 03-S	2	Pivot, Rocker Arm
❿	M-640034-S	2	Screw, Hex. Flange M6x1.0x34
⓫	12 089 34-S	2	Spring, Valve
⓬	12 173 01-S	2	Cap, Valve Spring
⓭	12 755 03-S	2	Kit, Retainer
⓮	12 468 05-S	1	Washer, Plain 13/32
⓯	12 112 13-S	1	Spacer, Head Bolt Exhaust Port
⓰	20 086 02-S	5	Screw, Hex. Flange M10x1.5x81
⓱	12 326 18-S	1	Hose, Breather
⓲	25 237 14-S	1	Clamp, Hose
⓳	M-645016-S	5	Screw, Hex. Flange M6x1.0x16
⓴	12 096 47-S	1	Cover, Valve
⓵	M-545010-S	1	Screw, Hex. Flange M5x0.8x10
⓶	12 018 01-S	1	Retainer, Breather Reed

Ref	Part No.	Qty.	Description
❸❸	12 402 02-S	1	Reed, Breather
❶❶	12 017 02-S	1	Valve, Intake (.25)
❶❶	12 016 02-S	1	Valve, Exhaust (.25)
❶❶	12 041 01-S	2	Gasket, Carburetor (2)
❶❶	12 041 02-S	1	Gasket, Air Cleaner
❶❶	12 041 03-S	1	Gasket, Exhaust Manifold

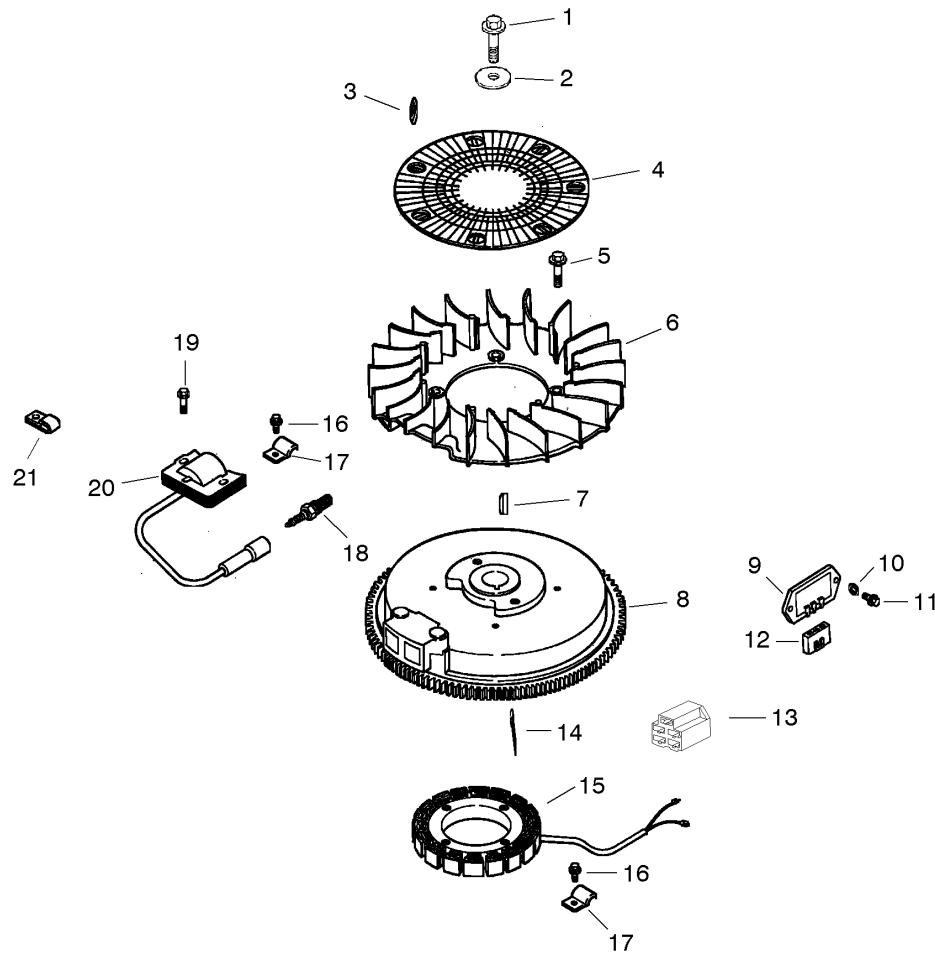 


Ignition/Electrical Assembly Kohler Model No. CV460S-26518

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶	12 086 14-S	1	Screw, Hex. Flange M10x1.5x46	❶❸	12 518 01-S	1	Lead, White (19in - 18 Gauge - Fully Insulated push On Tab And Uninsulated Push On Tab Terminals)
❷	12 468 03-S	1	Washer, Plain 3/8in	❶❸	24 518 12-S	1	Lead, Black (6in - 12 Gauge - Insulated Grip Barrel Eyelet Terminals)
❸	24 018 03-S	3	Retainer, Grass Screen	❶❸	25 518 05-S	1	Lead, Black (5in - 14 Gauge - Uninsulated Push On Tab Terminals)
❹	24 162 03-S	1	Screen, Grass				
❺	25 086 47-S	4	Bolt, Shoulder M6x1.0x16				
❻	12 157 06-S	1	Fan				
❼	X-42-15-S	1	Key				
❽	12 025 15-S	1	Flywheel				
❾	41 403 09-S	1	Rectifier-Regulator				
❿	X-22-11-S	2	Washer, Lock 1/4				
⓫	12 086 42-S	2	Screw, Hex. Flange M6x1.0x16				
⓬	236602-S	1	Connector Rectifier-Regulator (3 Contact)				
⓭	48 155 01-S	1	Connector (5 Contact)				
⓮	M-548025-S	2	Screw, Hex. Cap M5x0.8x25				
⓯	237878-S	1	Kit, Stator (Includes Terminal 25 452 01-S)				
⓰	M-545010-S	2	Screw, Hex. Flange M5x0.8x10				
⓱	X-728-1-S	2	Clip				
⓲	12 132 02-S	1	Spark Plug				
⓳	M-545020-S	2	Screw, Hex. Flange M5x0.8x20				
⓴	12 584 04-S	1	Module, Ignition				
⓵	12 154 07-S	2	Clip				
❶❸	25 452 01-S	2	Terminal				

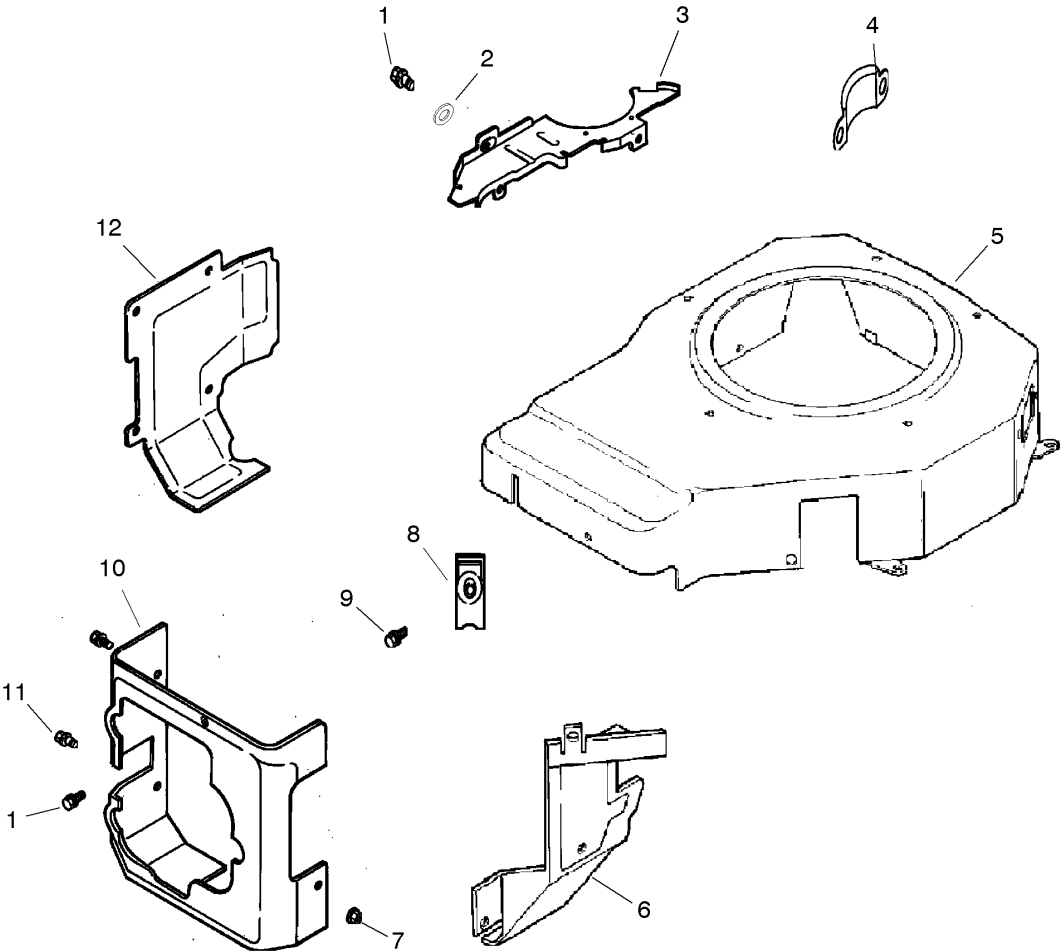 

Blower Housing Assembly
Kohler Model No. CV460S-26518


Ref	Part No.	Qty.	Description				
1	M-545010-S	6	Screw, Hex. Flange M5x0.8x10				
2	24 468 10-S	1	Washer, Plain 1/4				
3	12 146 07-S	1	Plate, Blower Housing				
4	24 096 05-S	1	Cover, Pinion				
5	12 027 55-S	1	Housing, Blower				
6	12 063 18-S	1	Baffle, Intake Side				
7	M-541050-S	1	Nut, Hex. Flange M5x0.8				
8	25 154 02-S	3	Clip, Mounting				
9	M-645016-S	2	Screw, Hex. Flange M6x1.0x16				
10	12 063 20-S	1	Baffle, Cylinder Head				
11	12 086 37-S	3	Screw, Captive Washer M5x0.8x20				
12	12 063 19-S	1	Baffle, Cylinder				

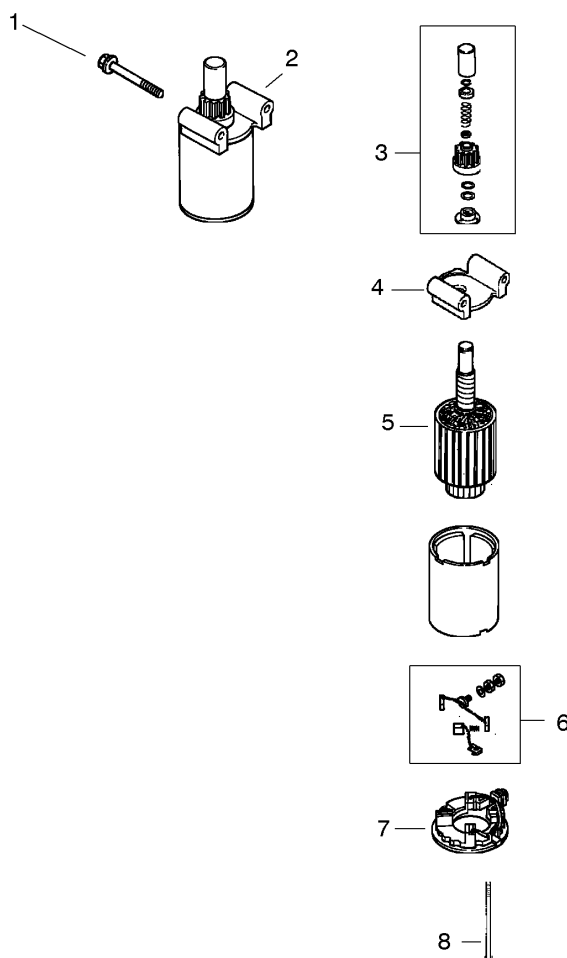 

Starter Assembly


Kohler Model No. CV460S-26518

Ref	Part No.	Qty.	Description				
③1	M-839070-S	2	Screw, Hex. Flange M8x1.25x70				
③2	12 098 22-S	1	Starter ASM (Includes 3-8)				
③3	12 755 53-S	1	Kit, Drive				
③4	12 227 19-S	1	Cap, Drive End				
③5	12 170 05-S	1	Armature				
③6	12 221 01-S	1	Brush ASM				
③7	12 227 13-S	1	Commutator, End Cap				
③8	12 211 01-S	2	Bolt, Thru				

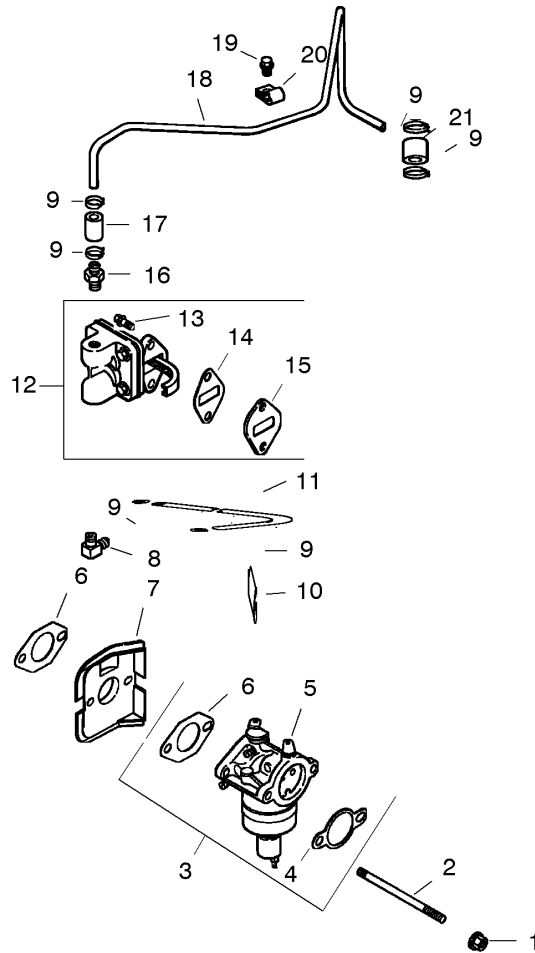 


Fuel System Assembly Kohler Model No. Cv460S-26518

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶	M-641060-S	2	Nut, Hex. Flange M6x1.0	❷	M-629116-S	2	Stud M6x1.0x116 (2)
❸	12 853 131-S	1	Kit, Carburetor W/gaskets (Includes 4, 5, 6 [qty. 1], Terminal 25 452 20-S, & Tie 12 454 03-S)	❹	12 041 02-S	1	Gasket, Air Cleaner
❺	12 053 131	1	Carburetor ASM	❻	12 041 01-S	2	Gasket, Carburetor (2)
❻		0	(For Information Only Not Available Separately) (Service With Kits: 12 757 02-S, 1275703-S, 12 757 33- S, & 12 757 37-S)	❼	12 265 06-S	1	Deflector, Heat
❽	12 041 01-S	2	Gasket, Carburetor (2)	❽	25 155 02-S	1	Connector, 90(Hose
❾	12 265 06-S	1	Deflector, Heat	❾	25 237 14-S	6	Clamp, Hose
❿	25 155 02-S	1	Connector, 90(Hose	❿	25 050 07-S	1	Filter, Fuel
⓫	25 237 14-S	6	Clamp, Hose	⓫	25 353 02-S	1	Line, Fuel 3in
⓬	25 050 07-S	1	Filter, Fuel	⓬	12 559 01-S	1	Kit, Fuel Pump (Includes 13-15)
⓭	25 353 02-S	1	Line, Fuel 3in	⓭	M-645020-S	2	Screw, Hex. Flange M6.1.0x20
⓮	12 559 01-S	1	Kit, Fuel Pump (Includes 13-15)	⓮	25 041 09-S	2	Gasket, Fuel Pump
⓯	M-645020-S	2	Screw, Hex. Flange M6.1.0x20	⓯	12 112 05-S	1	Spacer, Fuel Pump
⓰	25 041 09-S	2	Gasket, Fuel Pump	⓰	25 326 03-S	1	Connector, Straight Hose
⓱	12 112 05-S	1	Spacer, Fuel Pump	⓱	12 353 01-S	1	Line, Fuel 1-1/4in
⓲	25 326 03-S	1	Connector, Straight Hose	⓲	12 123 19-S	1	Line, Fuel - Metal
⓳	12 353 01-S	1	Line, Fuel 1-1/4in	⓳	M-545010-S	1	Screw, Hex. Flange M5x0.8x10
⓴	12 123 19-S	1	Line, Fuel - Metal				
⓵	M-545010-S	1	Screw, Hex. Flange M5x0.8x10	❷	12 154 01-S	1	Clamp, Fuel Line
				❸	41 353 18-S	1	Line Fuel 2-1/2in
				❹	12 757 02-S	1	Kit, Float
				❺	12 757 03-S	1	Kit, Carburetor Repair
				❻	12 757 33-S	1	Kit, Solenoid Repair
				❼	12 757 37-S	1	Kit, Bowl Replacement
				❽	12 518 24-S	1	Lead, Red (20" - 18 Gauge - Insulated Socket And Uninsulated Push On Tab Terminals)
				❹	12 454 03-S	3	Tie, Wire
				❹*	M-561010-S	1	Screw, Thread Forming M5x0.8x10
				❹*	X-22-11-S	1	Washer, Lock 1/4

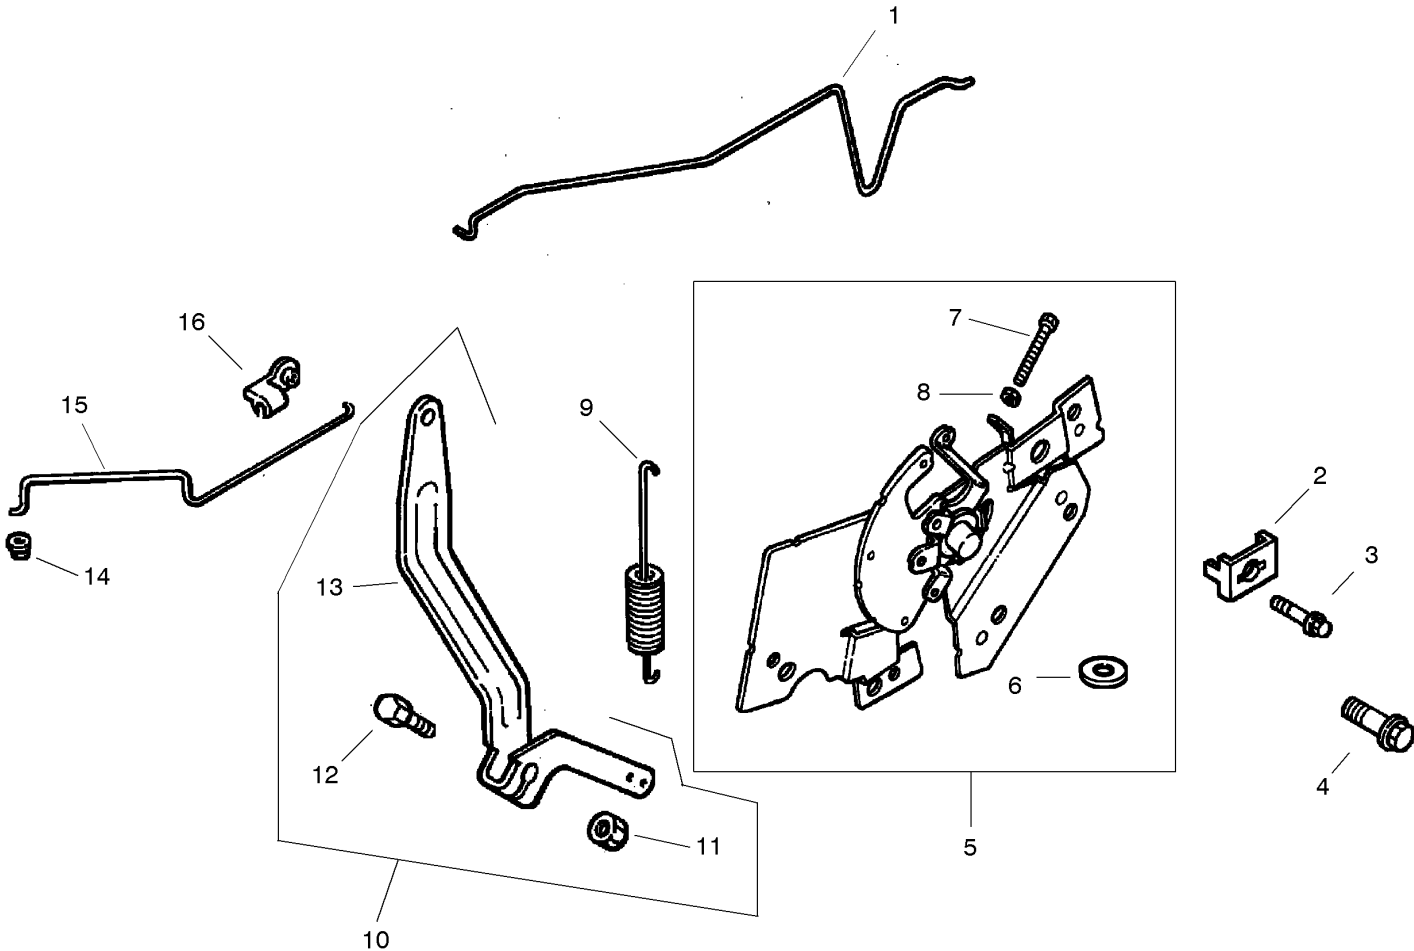 


Engine Control Assembly
Kohler Model No. CV460S-26518

Ref	Part No.	Qty.	Description				
❶1	12 079 11-S	1	Linkage, Choke				
❷2	12 237 01-S	2	Clamp, Cable				
❸3	M-545016-S	2	Screw, Hex. Flange M5x0.8x16				
❹4	M-664020-S	2	Screw, Lobed Socket M6x1.0x20				
❺5	12 536 02-S	1	Control, Speed ASM (Includes 6-8)				
❻6	230293-S	1	Spacer, Shim (.005)				
❼7	M-401030-S	1	Screw, Hex. Flange M4x0.7x30				
❽8	M-446030-S	1	Nut, Hex. M4x0.7				
❾9	52 089 07-S	1	Spring, Governor				
❿10	12 755 83-S	1	Kit, Governor Lever (Includes 11-13)				
⓫11	12 100 07-S	1	Nut, Hex. Flange M6x1.0				
⓫12	52 211 04-S	1	Screw, Hex. Flange M6x1.0x25				
⓫13	12 090 28-S	1	Lever, Governor				
⓫14	25 158 08-S	1	Bushing, Linkage Retaining				
⓫15	12 079 10-S	1	Linkage, Throttle				
⓫16	25 158 11-S	1	Bushing, Linkage Retaining				

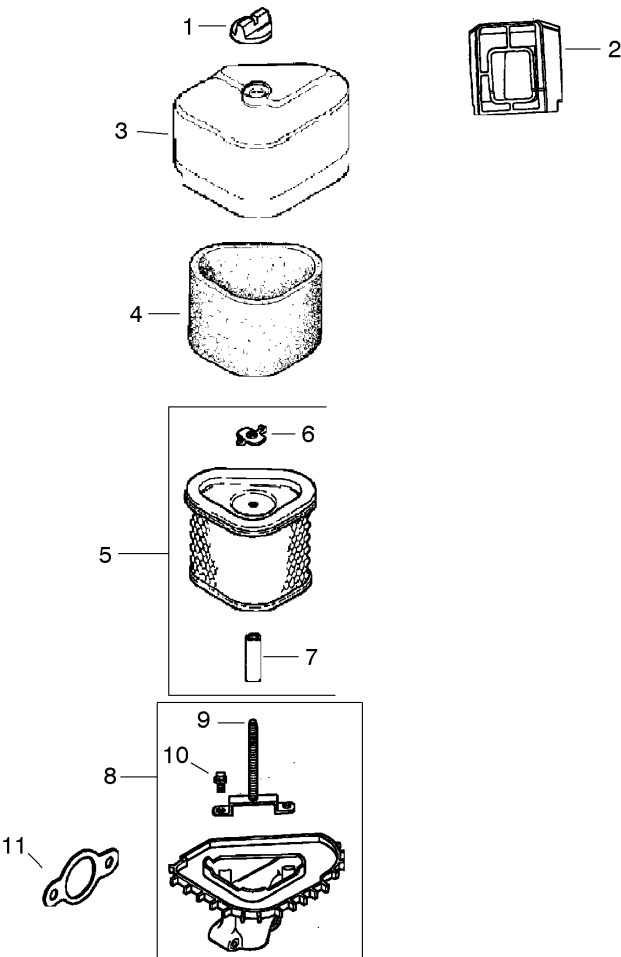 

Air Intake/Filtration Assembly
Kohler Model No. CV460S-26518

Ref	Part No.	Qty.	Description				
❶1	25 341 03-S	1	Knob, Air Cleaner Cover				
❷2	12 281 02-S	1	Duct, Air				
❸3	12 096 44-S	1	Cover, Air Cleaner				
❹4	12 083 12-S	1	Precleaner				
❺5	12 083 10-S	1	Element, Air Cleaner (Includes 6,7)				
❻6	12 100 01-S	1	Wing Nut				
❼7	12 032 11-S	1	Seal				
❽8	12 094 14-S	1	Base, Air Cleaner (Includes 9,10)				
❾9	12 072 04-S	1	Stud M6x1.0x79				
❿10	12 086 01-S	2	Screw, #10 Hi-Lo Thread Forming				
⓫11	12 041 02-S	1	Gasket, Air Cleaner				
⓬❸	12 113 04-S	1	Decal, Air Cleaner				

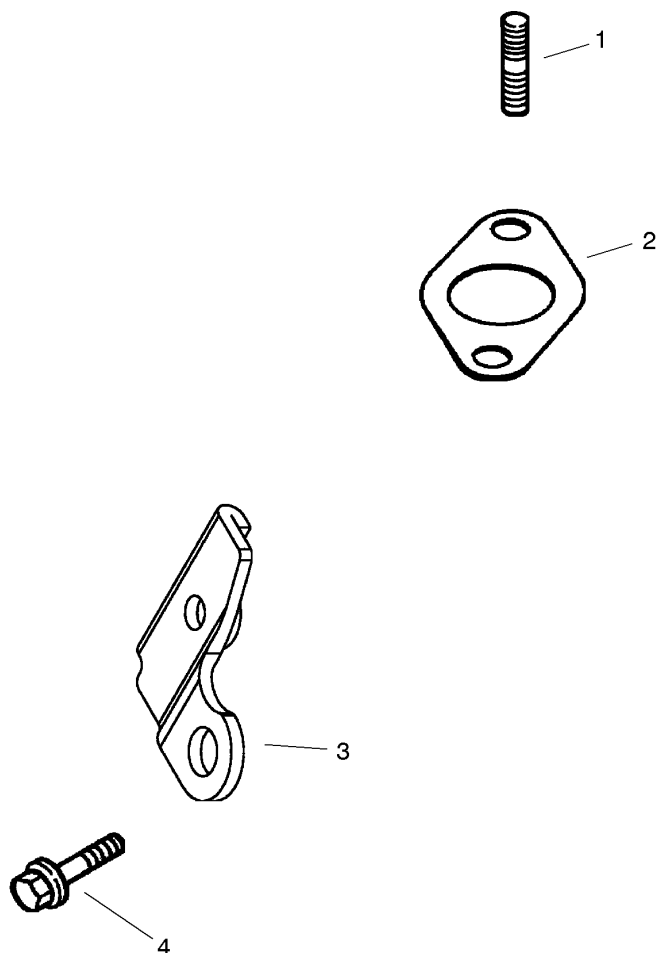 

Exhaust Assembly

Kohler Model No. CV460S-26518

Ref	Part No.	Qty.	Description				
③1	25 072 04-S	2	Stud M8x1.25x33				
③2	12 041 03-S	2	Gasket, Exhaust Manifold				
③3	12 126 87-S	1	Bracket, Lifting Strap				
③4	M-645020-S	1	Screw, Hex. Flange M6.1.0x20				
①③	12 522 54	1	Short Block				
①③	12 755 93-S	1	Gasket Set				

NOTES

NOTES

NOTES

