



44in Two-Stage Snowthrower XT Series Garden Tractors

Model No. 79482 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.	as required	HYD.	hydraulic
ASM.	assembly	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PTH.	phillips truss head
HF.	hex flange	PTO.	power take off
HH.	hex head	RH.	right hand
HHF.	hex head flange	SFH.	slotted fillister head
HHFTF.	hex head flange thread forming	SHH.	slotted hex head
HJ.	hex jam	SHWH.	slotted hex washer head
HLH.	hex lag head	SPH.	slotted pan head
HOC.	height-of-cut	SQH.	square head
HS.	hex	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HS.	hex socket head	TTH.	torx truss head
HWH.	hex washer head	WH.	wing head
HWHTF.	hex washer head thread forming		

Contents


Description	Page
Auger Housing and Chute Assembly	 3
Frame and Drive Assembly	 4
Gear Case Assembly	 5
Chute Control and Pulley Box Assembly	 6

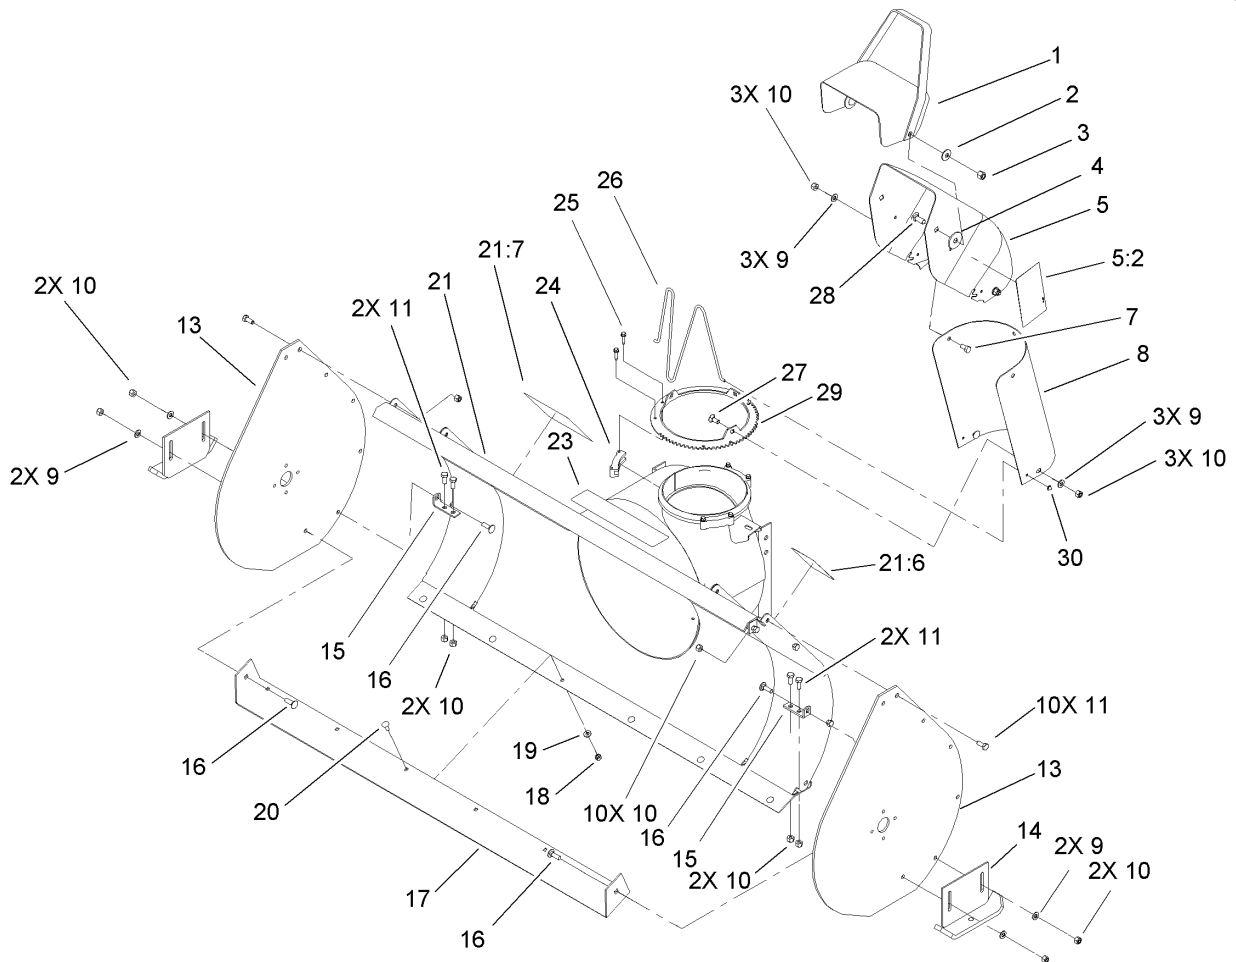

Auger Housing and Chute Assembly


Ref	Part No.	Qty.	Description
1	11-7120-01	1	Deflector
2	3290-340	2	Washer-Belleville
3	3296-39	2	Nut-Lock, NI
4	20-4320	2	Washer-Rubber
5	94-1832	1	Chute
5:2	94-8079	2	Decal-Danger
7	322-2	3	Screw-HH
8	26-1110-01	1	Extender-Chute, Upper
9	3256-23	10	Washer-Flat
10	3296-29	24	Nut-Lock, NI
11	322-3	14	Screw-HH
13	57-3510-01	2	Plate-Side
14	78-0800-01	2	Support-Skid
15	99-2304-01	2	Bracket-Support, Blade
16	3230-2	4	Bolt-CARR
17	99-2303-01	1	Blade-Scraper
18	3296-42	6	Nut-Lock, NI
19	3256-22	6	Washer-Flat
20	3229-25	6	Screw-CARR
21	92-6334	1	Auger Hsg/decal ASM
21:6	63-2380	2	Decal-Danger
21:7	92-8652	1	Decal-Warning
23	106-5838	1	Decal-Workhorse
24	25-5450	3	Retainer-Chute

Ref	Part No.	Qty.	Description
25	27-0220	6	Screw-Special
26	12-2040	1	Wire-Chute
27	3230-1	3	Bolt-CARR
28	3231-2	2	Screw-CARR
29	25-5290-01	1	Ring-Swivel, Chute
30	3290-326	2	Nut-Push

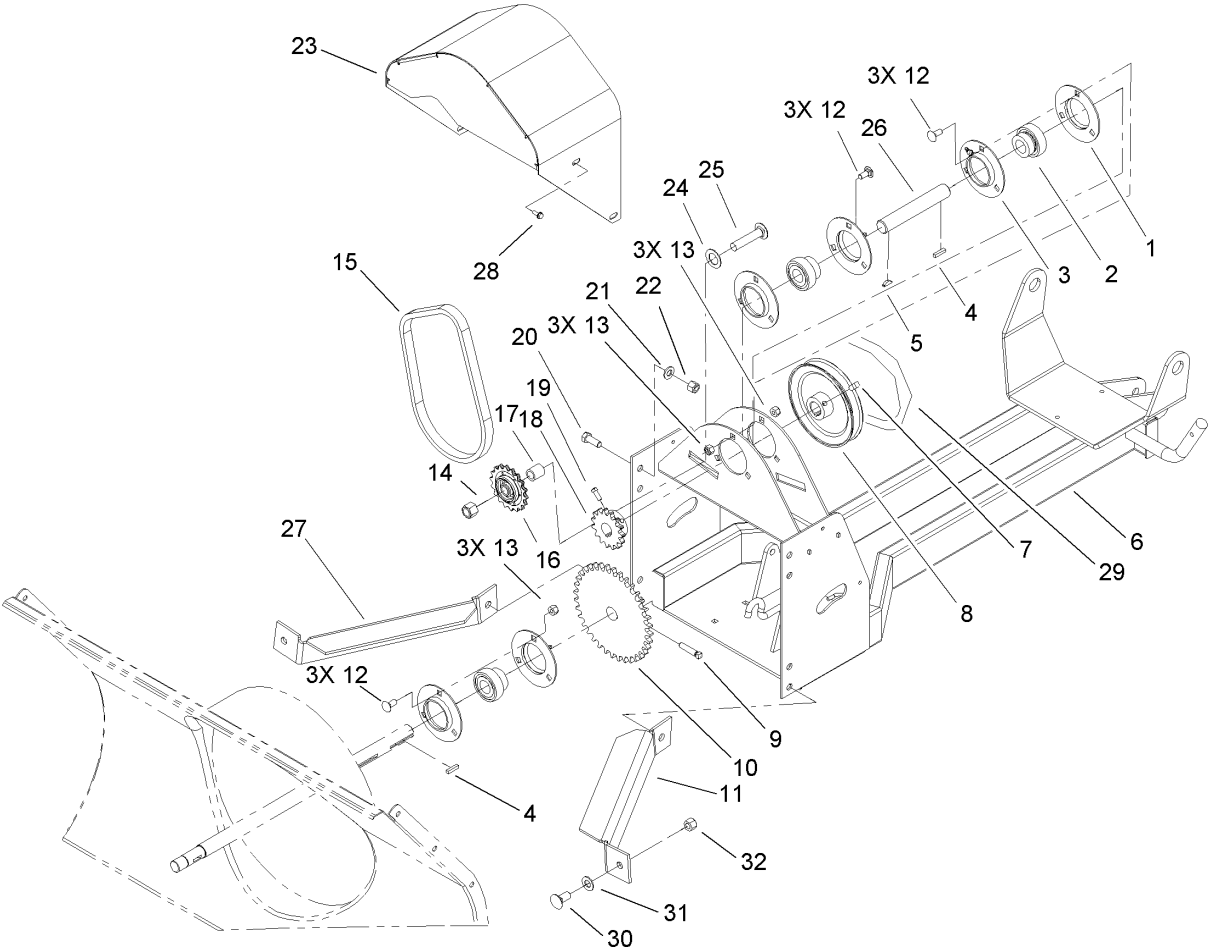

Frame and Drive Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	110568	3	Flange	25	3233-27	1	Screw-CARR
2	110569	3	Bearing And Collar	26	106-9923	1	Shaft-Jack
3	119020	3	Flange-Relube	27	117224-03	1	Brace-Housing RH
4	6366	2	Key	28	32144-1	4	Screw-Taptite
5	937221	1	Key-Hi Pro	29	107-8486	1	V-Belt
6	106-8203-03	1	Frame ASM	30	3232-1	2	Screw-CARR
7	3242-2	2	Screw-SQH	31	3256-27	2	Washer-Flat
8	92-5769	1	Pulley - Gear Box	32	3296-48	2	Nut-Lock, NI
9	909546	2	Screw-SQH Set				
10	95-3867	1	Sprocket - 38 Tooth				
11	117223-03	1	Brace-Housing LH				
12	3230-1	9	Bolt-CARR				
13	3296-29	9	Nut-Lock, NI				
14	3296-23	1	Nut-Lock, NI				
15	107-3650	1	Chain-Drive				
16	93-1614	1	Sprocket-Idler				
17	107-3678	1	Spacer-Idler				
18	117338	1	Sprocket-15 T				
19	3241-5	2	Screw-Set				
20	323-6	8	Screw-HH				
21	3256-24	8	Washer-Flat				
22	3296-39	8	Nut-Lock, NI				
23	106-9934-03	1	Belt Cover ASM				
24	1278	1	Washer				

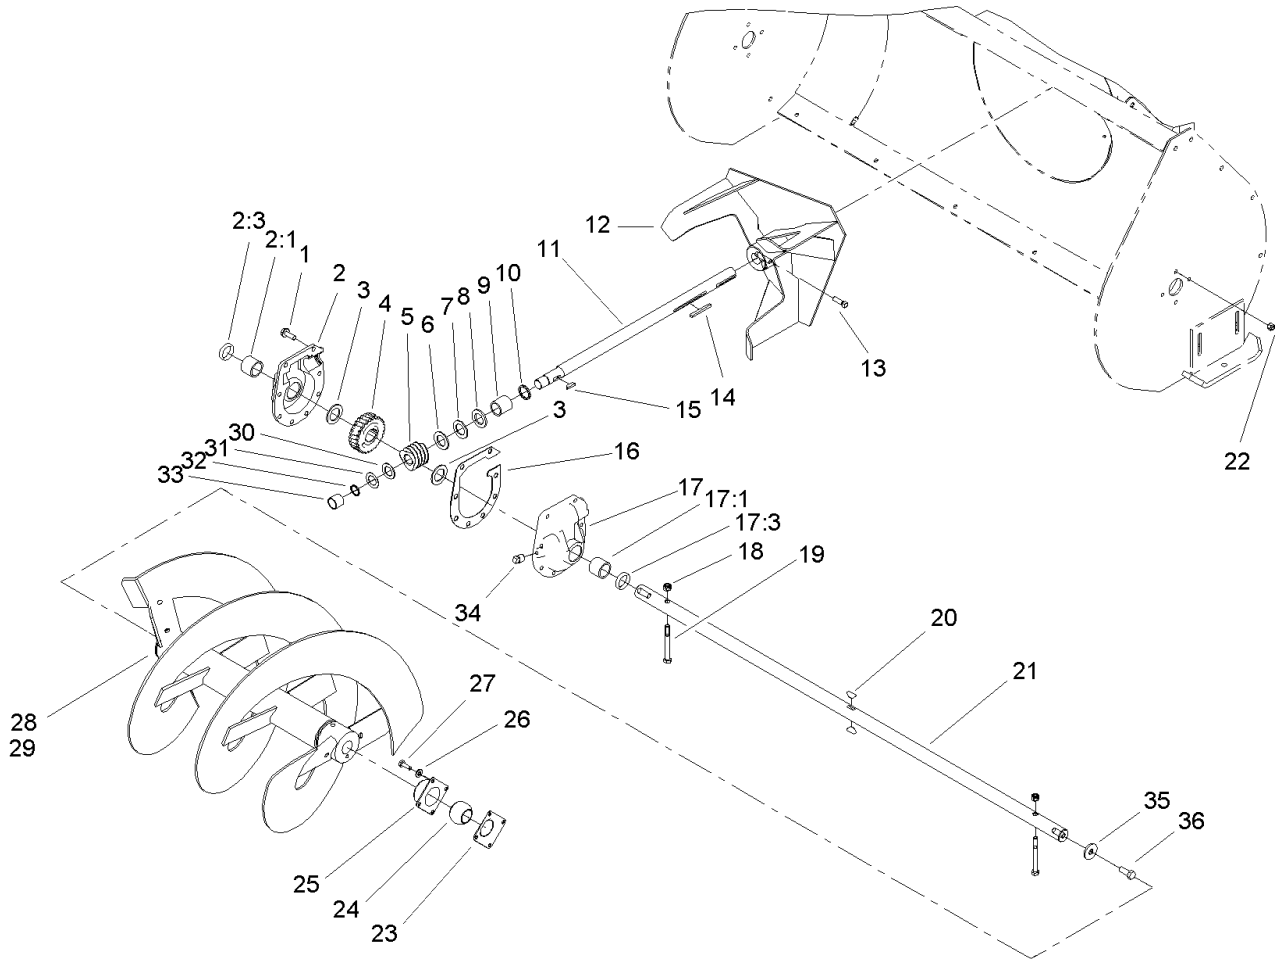

Gear Case Assembly

Ref	Part No.	Qty.	Description
1	32144-41	8	Screw-Taptite
2	37-8850	1	RH Gear Case ASM
2:1	256-237	1	Bushing
2:3	7-0045	1	Seal-Oil
3	252-71	2	Washer-Thrust
4	5-7180	1	Gear-Worm 27t
5	5-7170	1	Gear
6	252-77	1	Thrust-Washer
7	252-76	1	Bearing-Thrust
8	252-78	1	Bearing-Thrust
9	20-3210	1	Bushing-Special
10	237-87	1	Ring-Quad
11	19-8540	1	Shaft-Impeller
12	19-8890-01	1	Impeller
13	3242-6	2	Screw-Set, SQH
14	6-8590	1	Key
15	3257-23	1	Key-Woodruff
16	105-1404	1	Gasket-Gear Box
17	37-8860	1	LH Gear Case ASM
17:1	256-237	1	Bushing
17:3	7-0045	1	Seal-Oil
18	3296-29	2	Nut-Lock, NI
19	322-14	2	Screw-HH
20	3257-33	2	Key-Woodruff

Ref	Part No.	Qty.	Description
21	57-3500	1	Shaft-Auger
22	3296-42	8	Nut-Lock, NI
23	20-1000	2	Bearing-Flange, Rear
24	20-0980	2	Bearing
25	20-0990	2	Bearing-Flange, Front
26	3256-22	8	Washer-Flat
27	321-4	8	Screw-HH
28	57-3300-01	1	Auger, RH
29	57-3370-01	1	Auger, LH
30	3-8664	1	Washer-Thrust
31	5210	1	Washer-Shim
32	32120-72	1	Ring-Snap
33	256-32	1	Bushing
34	281-1	1	Plug-Pipe, SQH
35	2844	2	Washer
36	3235-22	2	Screw-HH Lock

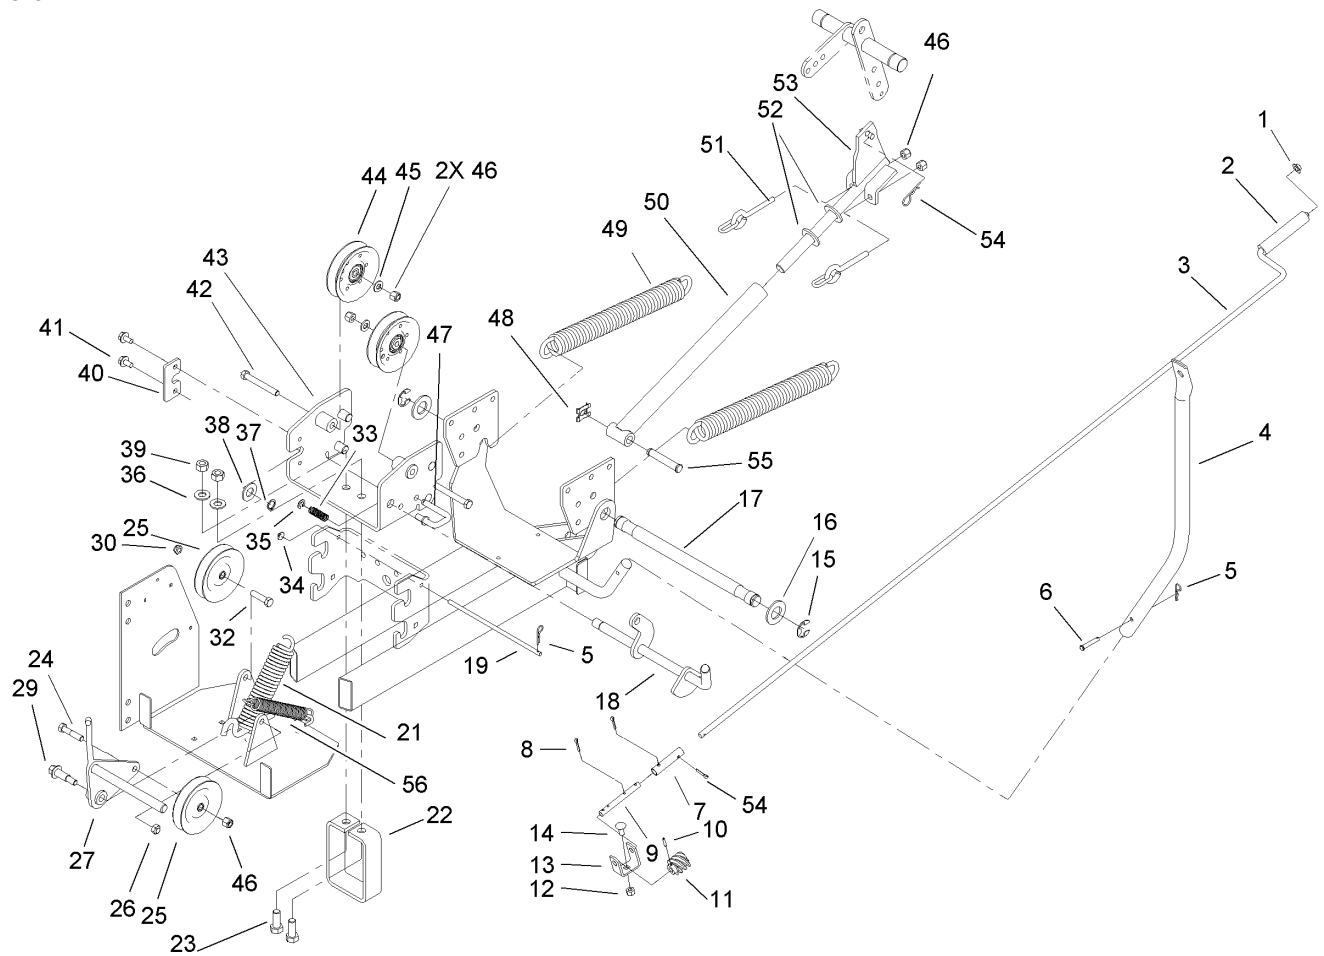

Chute Control and Pulley Box Assembly

Ref	Part No.	Qty.	Description
1	3290-320	1	Retainer-Push On
2	40-8230	1	Grip-Chute Control
3	106-9947	1	Rod-Chute
4	95-3864-03	1	Tube - Crank Support
5	9335044	2	Pin-Hair
6	283-66	1	Pin-Clevis
7	117538	1	Coupling
8	3272-10	3	Pin-Cotter
9	117529	1	Rod-Lower Chute Cont
10	32121-50	1	Pin-Spring
11	8-8600	1	Gear-Worm, Chute
12	3296-29	1	Nut-Lock, NI
13	49-6720-03	1	Bracket-Gear ,worm
14	3230-1	1	Bolt-CARR
15	32151-103	2	Ring-Snap
16	3256-29	2	Washer-Flat
17	106-9926	1	Shaft-Pivot
18	106-8218	1	Spring Lever ASM
19	106-9922	1	Rod-Stop
21	4629	1	Spring
22	106-8217-03	1	Plate-Guide
23	325-5	2	Screw-HH
24	323-9	1	Screw-HH
25	95-7668	2	Pulley-V, Idler

Ref	Part No.	Qty.	Description
26	108881	1	Nut
27	106-9928	1	Belt Tension ASM
29	62-1330	1	Bolt-Shoulder
30	3296-59	1	Nut-Lock, NI
32	323-8	1	Screw-HH
33	8616	1	Spring
34	3290-337	1	Nut-Speed
35	105797	1	Ring-Retaining
36	3256-26	2	Washer-Flat
37	32151-62	1	Ring-Retaining
38	3256-27	1	Washer-Flat
39	3217-9	2	Nut-Hex
40	106-8222	1	Plate-Keeper
41	32144-14	2	Screw-HWH
42	323-14	2	Screw-HH
43	106-8214-03	1	Pulleybox
44	116859	2	Pulley-Flat Idler
45	3256-24	2	Washer-Flat
46	3296-39	5	Nut-Lock, NI
47	106-4095	1	Rod-Catch, Midhitch
48	95-4064	1	Clip-Pin
49	106-9945	2	Spring-Extension
50	106-9931-03	1	Rod-Lift
51	107-8465	2	Lift Chain ASM

