



53cm Heavy-Duty Recycler®/Rear Bagger Lawnmower

Model No. 22167TE - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

 
AR.	as required	HYD.	hydraulic
ASM.	assembly	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PTH.	phillips truss head
HF.	hex flange	PTO.	power take off
HH.	hex head	RH.	right hand
HHF.	hex head flange	SFH.	slotted fillister head
HHFTF.	hex head flange thread forming	SHH.	slotted hex head
HJ.	hex jam	SHWH.	slotted hex washer head
HLH.	hex lag head	SPH.	slotted pan head
HOC.	height-of-cut	SQH.	square head
HS.	hex	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HSH.	hex socket head	TTH.	torx truss head
HWH.	hex washer head	WH.	wing head
HWHTF.	hex washer head thread forming		

Footnotes

- | | | | |
|---|-------------------------|---|-------------------------|
| ❶ | Not illustrated | ❷ | Not serviced |
| ❸ | Not serviced separately | ❹ | Obtain Parts From Honda |


Contents

Description	Page	Description	Page
Housing Assembly No. 98-7142	 3	Recoil Starter Assembly Honda GXV160K1 A1T	 17
Housing and Discharge Assembly	 4	Fan Cover Assembly Honda GXV160K1 A1T	 18
Wheel and Tire Assembly Part No. 53-7720	 6	Carburetor Assembly Honda GXV160K1 A1T	 19
Gear Case Assembly No. 74-1861	 7	Air Cleaner Assembly Honda GXV160K1 A1T	 20
Engine Assembly	 8	Muffler Assembly Honda GXV160K1 A1T	 21
Handle Assembly	 9	Flywheel Assembly Honda GXV160K1 A1T	 22
Rear Wheel & Tire Assembly No. 74-1720	 10	Control Assembly Honda GXV160K1 A1T	 23
Rear Wheel and Axle Assembly	 11	Label Assembly and Gasket Kits Honda GXV160K1 A1T	 24
Grass Bag Assembly No. 99-2535	 12		
Cylinder Head Assembly Honda GXV160K1 A1T	 13		
Cylinder Barrel Assembly Honda GXV160K1 A1T	 14		
Crankshaft and Piston Assembly Honda GXV160K1 A1T	 15		
Camshaft Assembly Honda GXV160K1 A1T	 16		

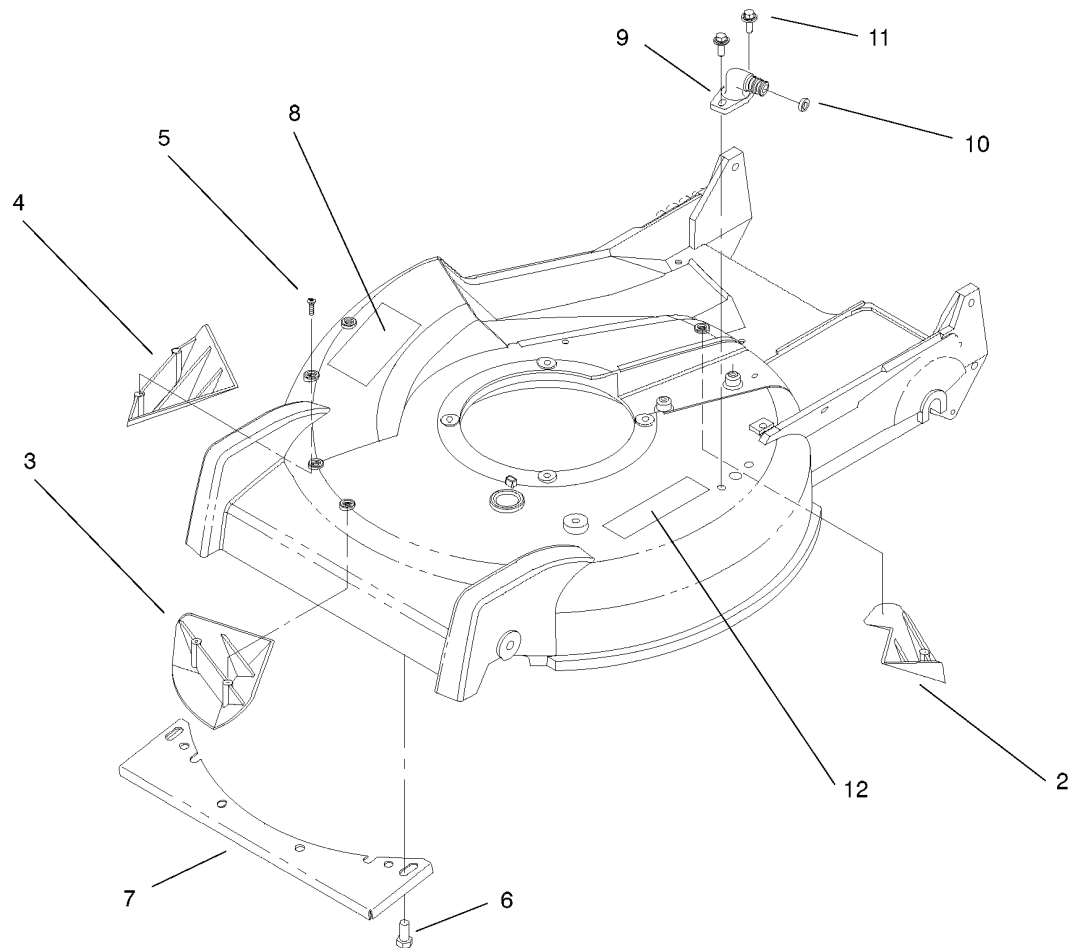

Housing Assembly No. 98-7142

Ref	Part No.	Qty.	Description				
2	92-1750	1	Kicker-Rear				
3	92-1720	1	Kicker-Front				
4	92-1730	1	Kicker-RH				
5	32144-111	6	Screw-PPH				
6	32144-70	4	Screw-HH				
7	46-5400-03	1	Shield				
8	93-6654	1	Decal-Danger Covers				
9	95-2747	1	Fitting-Washout				
10	46-6290	1	O-Ring				
11	46-6811	2	Screw-HWH				
12	93-6657	1	Decal-Danger				

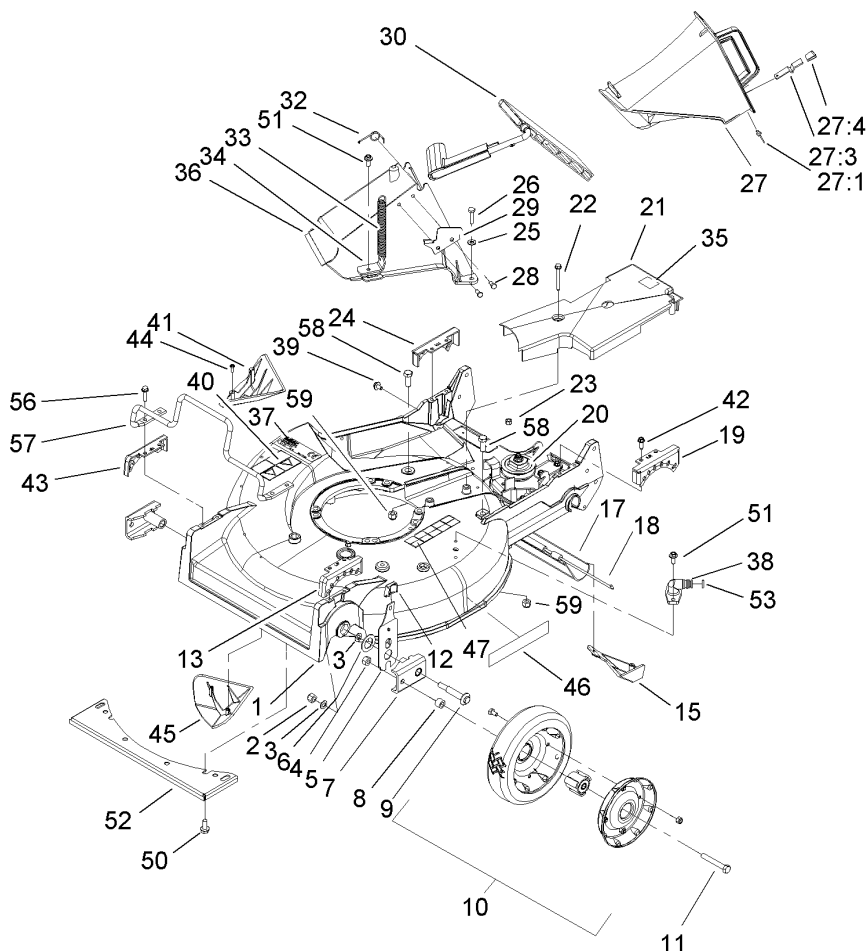 


Housing and Discharge Assembly

Ref	Part No.	Qty.	Description
1	98-7142	1	Housing - Service
2	3296-6	2	Nut-Lock, NI
3	40-1940	4	Washer
4	32152-2	2	Nut-Hex
5	66-7560	2	Front Spring Arm ASM
6	257-3	2	Washer-Thrust
7	61-8300	2	Arm-Pivot, Front
8	52-2480	2	Spacer-Wheel
9	27-6232	2	Bolt-Wheel
10	53-7720	2	Wheel And Tire ASM
11	323-12	2	Screw-HH
12	25-7740	2	Knob-Arm
13	49-8760	1	Quadrant-Front, LH
15	92-1750	1	Kicker-Rear
17	44-0580	1	Shield-Trailing
18	33-3208	1	Rod-Shield
19	49-8740	1	Quadrant-Rear, LH
20	74-1861	1	Gear Case ASM
21	74-1770	1	Cover-Belt
22	37-7260	2	Screw-HH
23	3296-42	2	Nut-Lock, NI
24	49-8750	1	Quadrant-Rear, RH
25	3256-22	2	Washer-Flat
26	321-7	2	Screw-HH


Ref	Part No.	Qty.	Description
27	77-0502	1	Discharge Plug ASM
27:1	3295-35	1	Rivet-Head, Flat
27:3	76-4640	1	Latch-Plug, Discharge
27:4	76-4650	1	Grip-Latch
28	46-8090	2	Screw-Plastite
29	93-3154	1	Latch-Plate
30	93-7351	1	Discharge Door ASM
32	80-3770	1	Retainer-Door
33	76-4660	1	Spring-Door
34	71-9350	1	Bracket-Spring
35	93-6664	1	Decal-Grease
36	82-9151	1	Tunnel-Discharge
37	107-4094	1	Decal- Ce Model/serial, 22167te
38	95-2747	1	Fitting-Washout
39	46-6810	1	Screw And Washer ASM
40	93-6654	1	Decal-Danger Covers
41	92-1730	1	Kicker-RH
42	49-2040	4	Screw-Tapping
43	49-8770	1	Quadrant-Front, RH
44	32144-111	6	Screw-PPH
45	92-1720	1	Kicker-Front
46	106-0689	1	Decal
47	93-6657	1	Decal-Danger
50	32144-70	4	Screw-HH

 5

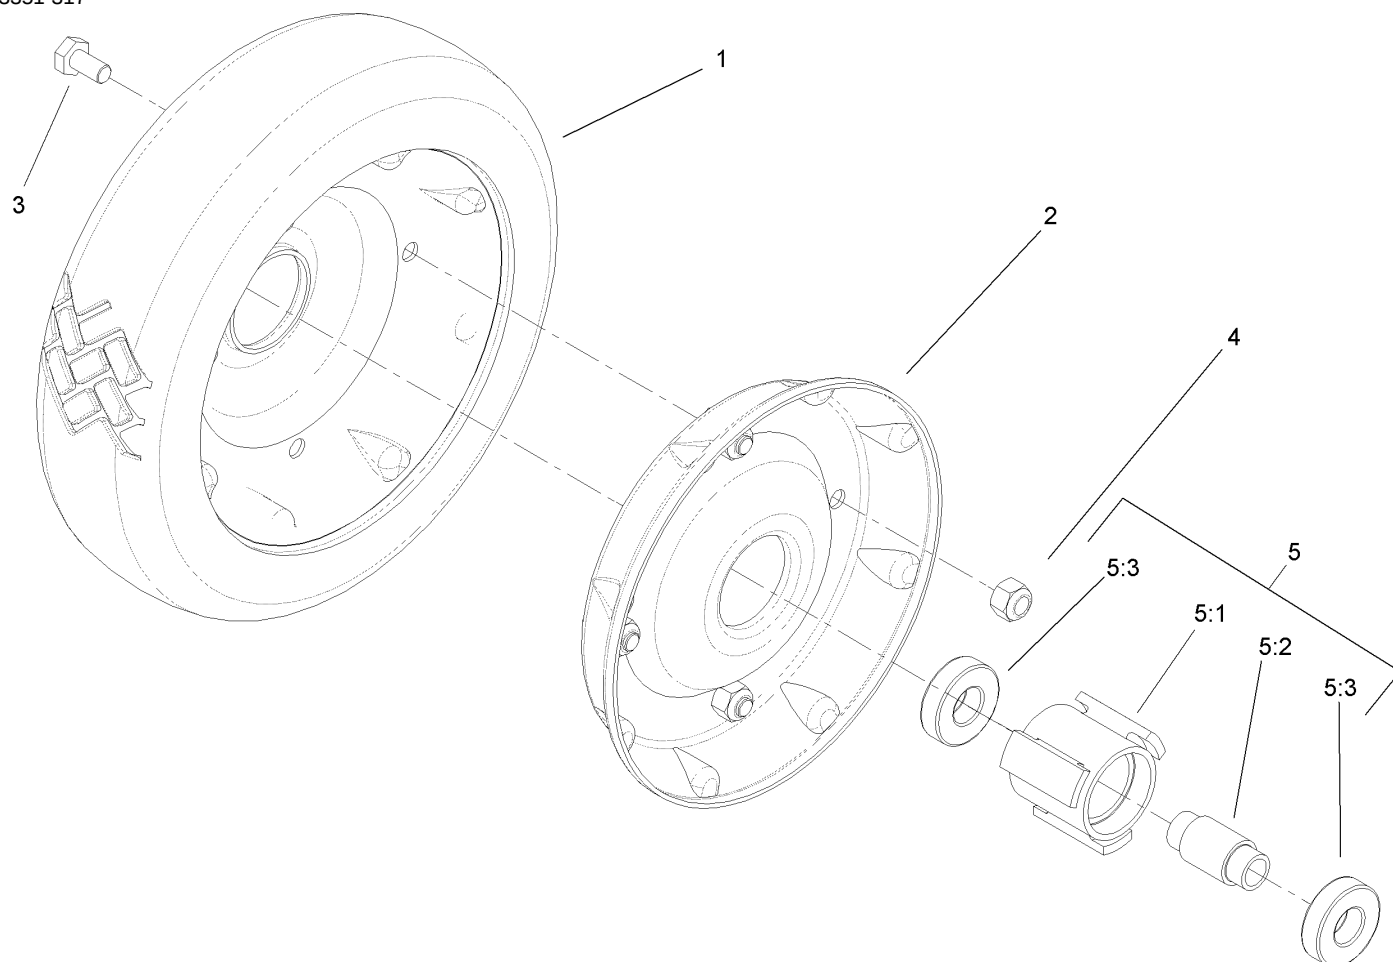

Wheel and Tire Assembly Part No. 53-7720


Ref	Part No.	Qty.	Description
1	53-7740	1	Tire
2	53-7780-06	2	Plate-Wheel, Half
3	321-2	4	Screw-HH
4	3296-42	4	Nut-Lock, NI
5		1	Hub And Bearing ASM
5:1	52-2410	1	Hub-Bearing
5:2	52-2440	1	Spacer-Bearing
5:3	52-2450	2	Bearing-Wheel

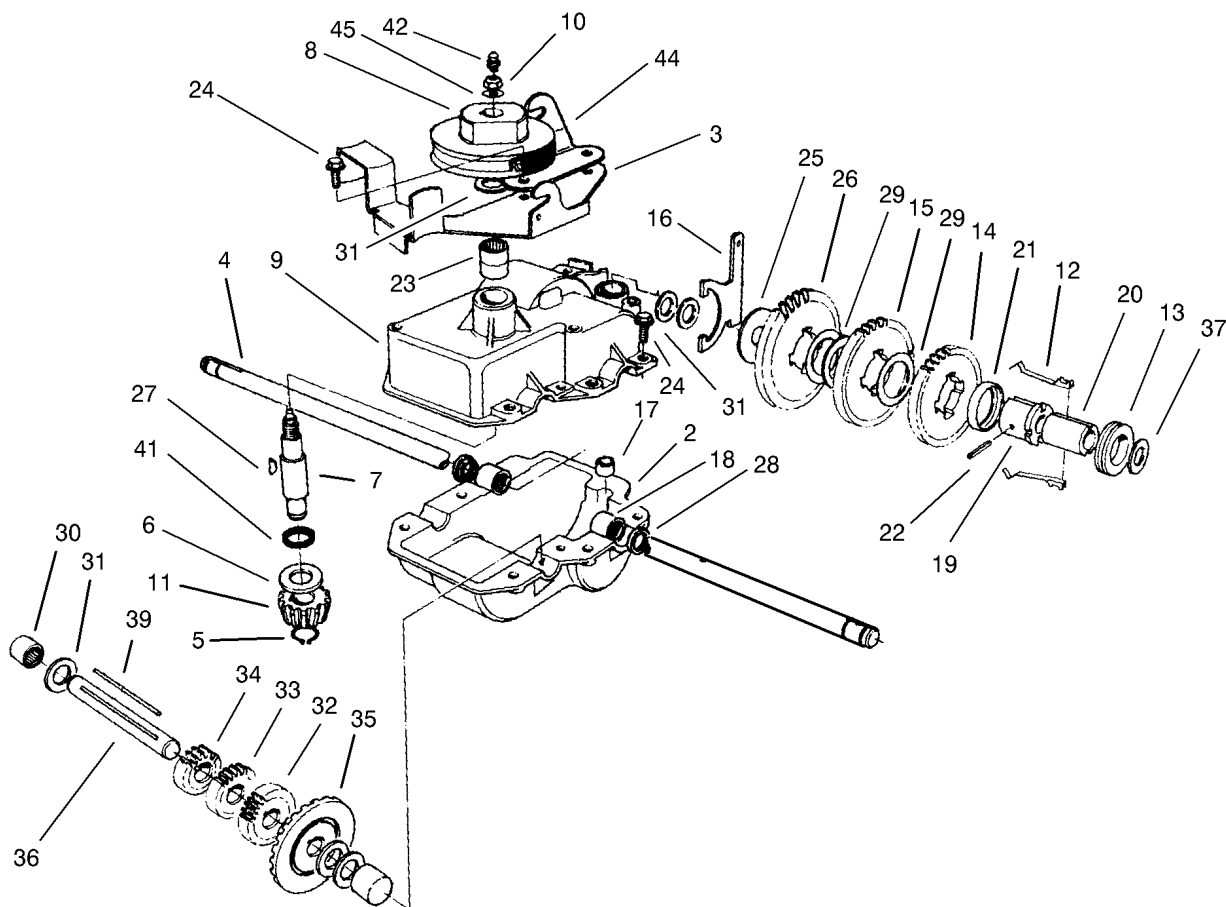 

Gear Case Assembly No. 74-1861


Ref	Part No.	Qty.	Description
2	74-1920	1	Case-Gear, Lower
3	49-8461-03	1	Bracket-Guide, Belt
4	74-1890	1	Shaft-Output
5	32151-57	1	Ring-Retaining
6	47-2910	1	Washer-Thrust
7	13-5149	1	Shaft-Input
8	39-6740	1	Pulley
9	13-9739	1	Case-Gear, Upper
10	3296-5	1	Nut-Lock, NI
11	39-6660	1	Pinion-Bevel
12	29-9330	2	Key-Shift
13	29-9340	1	Collar-Shift
14	42-4740	1	Gear-38 Tooth
15	29-9271	1	Gear-42 Tooth
16	60-8870	1	Yoke-Shift
17	29-9570	1	Bushing-Yoke
18	47-6730	2	Seal-Oil
19	55-8010	1	Sleeve-Gear
20	39-6720	1	Sleeve
21	55-8020	1	Retainer-Key
22	3285-19	1	Pin-Groove
23	47-7270	2	Bearing
24	49-2040	6	Screw-Tapping
25	29-9690	1	Washer

Ref	Part No.	Qty.	Description
26	46-3560	1	Gear
27	3257-1	2	Key-Woodruff
28	48-2060	2	Bearing-Roller
29	36-4770	3	Washer
30	252-103	2	Bearing-Closed
31	36-4792	4	Washer-Thrust
32	39-6650	1	Gear-18t
33	46-3550	1	Gear-14t
34	46-3540	1	Gear-12t
35	74-1760	1	Gear-Bevel
36	53-7950	1	Shaft-Intermediate
37	36-4780	3	Washer
39	39-7842	1	Key
41	47-7260	1	Seal
42	302-63	1	Zerk
44	74-1750-03	1	Brake-Engage, Traction
45	3256-45	1	Washer-Flat

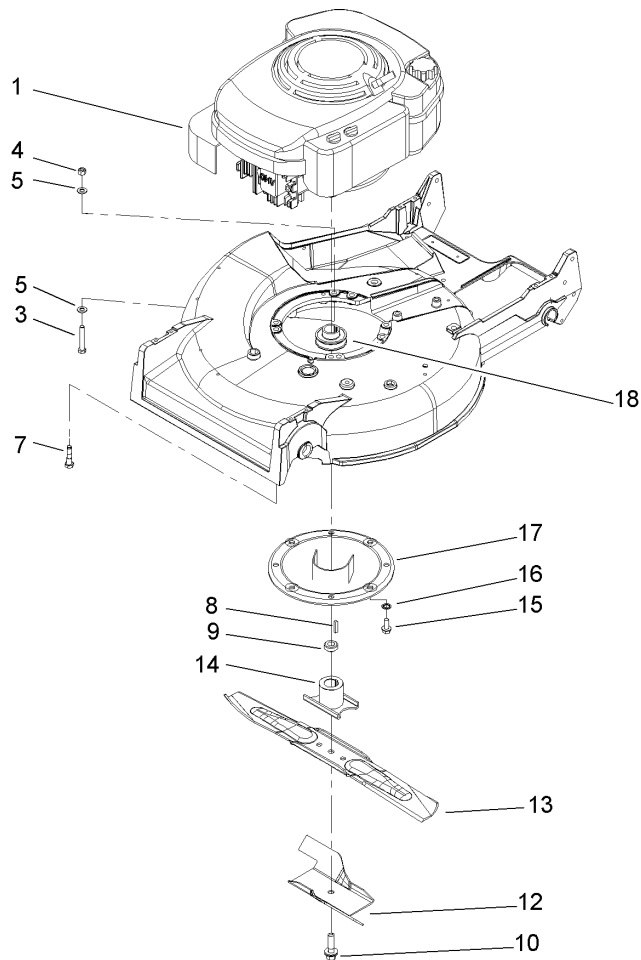 


Engine Assembly

Ref	Part No.	Qty.	Description				
1	103-3380	1	Engine-Honda, Gxv 160k1a1t				
3	322-10	1	Screw-HH				
4	3296-29	1	Nut-Lock, NI				
5	3256-23	2	Washer-Flat				
7	103-2678	3	Screw-Shoulder				
8	5-1077	1	Key-Square				
9	103-3795	1	Spacer-Retainer, Blade				
10	105-8579	1	Bolt-Blade				
12	92-1599-03	1	Stiffener-Blade				
13	91-2256-03	1	Blade				
14	52-2170	1	Retainer-Blade				
15	32144-70	3	Screw-HH				
16	3254-6	3	Washer-Lock, Internal				
17	65-5860	1	Protector-Crankshaft				
18	46-7910	1	Pulley-Driver				

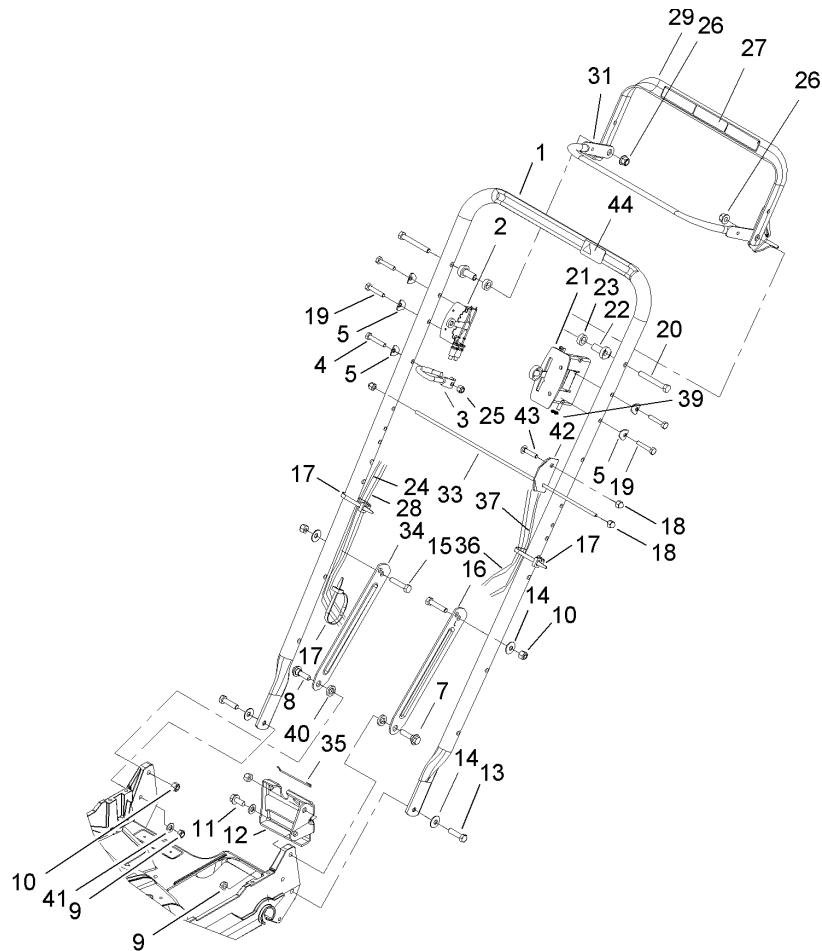 


Handle Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	99-2545-03	1	Handle-Proline	26	3296-58	2	Nut-Lock NI
2	99-2544	1	Control-Shift	27	94-6046	1	Decal - Operation
3	46-8081	1	Guide-Rope	28	99-2543	1	Cable-Shift
4	321-9	1	Screw-HH	29	94-4371-03	1	Traction Bail
5	3-7501	5	Washer	31	94-4370-03	1	Brake Bail
7	27-7210	1	Screw-Shoulder	33	48-2810	1	Rod-Support, Bag
8	3-3287	2	Spacer-Latch, Handle	34	100-3297-03	1	Latch-Handle, RH
9	3296-47	2	Nut-Lock, NI	35	46-7030	1	Retainer-Cable
10	3296-29	4	Nut-Lock, NI	36	74-1791	1	Cable-Traction
11	32144-70	1	Screw-HH	37	106-0888	1	Throttle Cable ASM
12	74-1741	1	Bracket-Adjustment, Traction	39	32151-86	4	E-Ring
13	322-6	2	Screw-HH	40	27-7211	1	Screw-Shoulder
14	3290-456	4	Washer-Belleville	41	3256-23	2	Washer-Flat
15	322-7	2	Screw-HH	42	104-1326	1	Plate-Aligning, Bag
16	100-3298-03	1	Latch-Handle, LH	43	3229-3	1	Screw-CARR
17	3290-378	3	Tie-Cable	44	98-4387	1	Decal-Protection, Ear
18	32111-7	3	Nut-Cap				
19	321-13	4	Screw-HH				
20	322-12	2	Screw-HH				
21	103-5296	1	Control-Throttle				
22	49-1631	2	Spacer-Support				
23	256-276	2	Spacer-Nylon				
24	107-4081	1	Cable-Brake				
25	3296-42	1	Nut-Lock, NI				

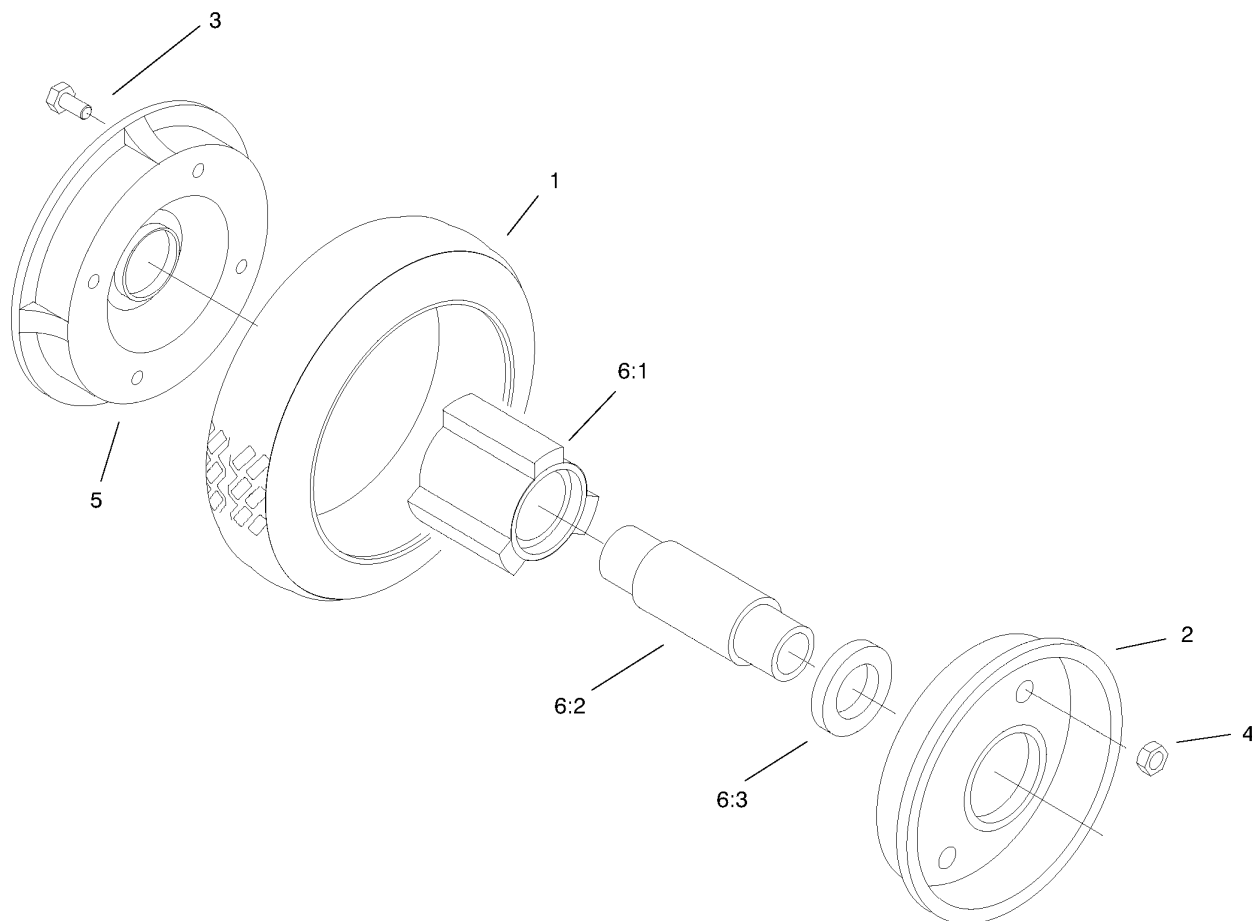 

Rear Wheel & Tire Assembly No. 74-1720


Ref	Part No.	Qty.	Description				
1	53-7740	1	Tire				
2	53-7780-06	1	Plate-Wheel, Half				
3	321-2	4	Screw-HH				
4	3296-42	4	Nut-Lock, NI				
5	92-4957-06	1	Wheel Half/gear ASM				
②6		1	Hub And Bearing ASM				
6:1	52-2410	1	Hub-Bearing				
6:2	52-2440	1	Spacer-Bearing				
6:3	52-2450	2	Bearing-Wheel				

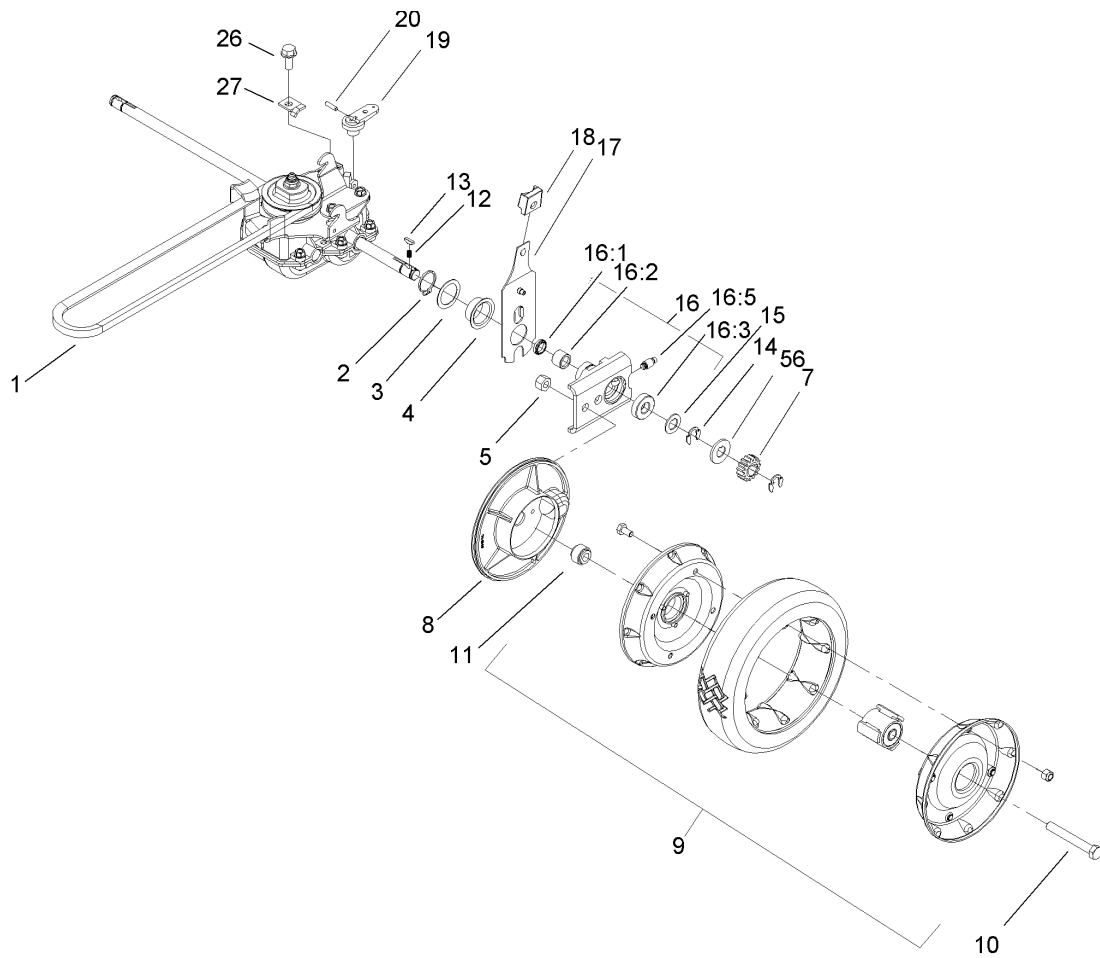 

Rear Wheel and Axle Assembly


Ref	Part No.	Qty.	Description
1	36-8070	1	V-Belt
2	32151-36	2	Ring-Retaining
3	74-1810	2	Washer
4	48-2170	2	Cap-End
5	32152-2	2	Nut-Hex
7	39-9160	2	Gear-Pinion
8	74-1640	2	Cover-Wheel
9	74-1720	2	Wheel And Tire ASM
10	323-13	2	Screw-HH
11	74-1650	2	Spacer-Cover, Wheel
12	39-9650	2	Spring-Compression
13	612066	2	Key
14	32151-68	4	Ring-Retaining
15	49-7700	2	Washer-Thrust, Outer
16	74-1851	2	Pivot Arm ASM
16:1	47-6730	1	Seal-Oil
16:2	48-2060	1	Bearing-Roller
16:3	52-2450	1	Bearing-Wheel
16:5	92-6316	1	Zerk
17	66-7561	2	Rear Spring Arm ASM
18	25-7740	2	Knob-Arm
19	29-9560	1	Lever-Shift
20	32121-99	1	Pin-Coil
26	32144-70	1	Screw-HH

Ref	Part No.	Qty.	Description
27	62-3720	1	Clamp-Cable
56	62-3830	2	Washer-Thrust, Outer

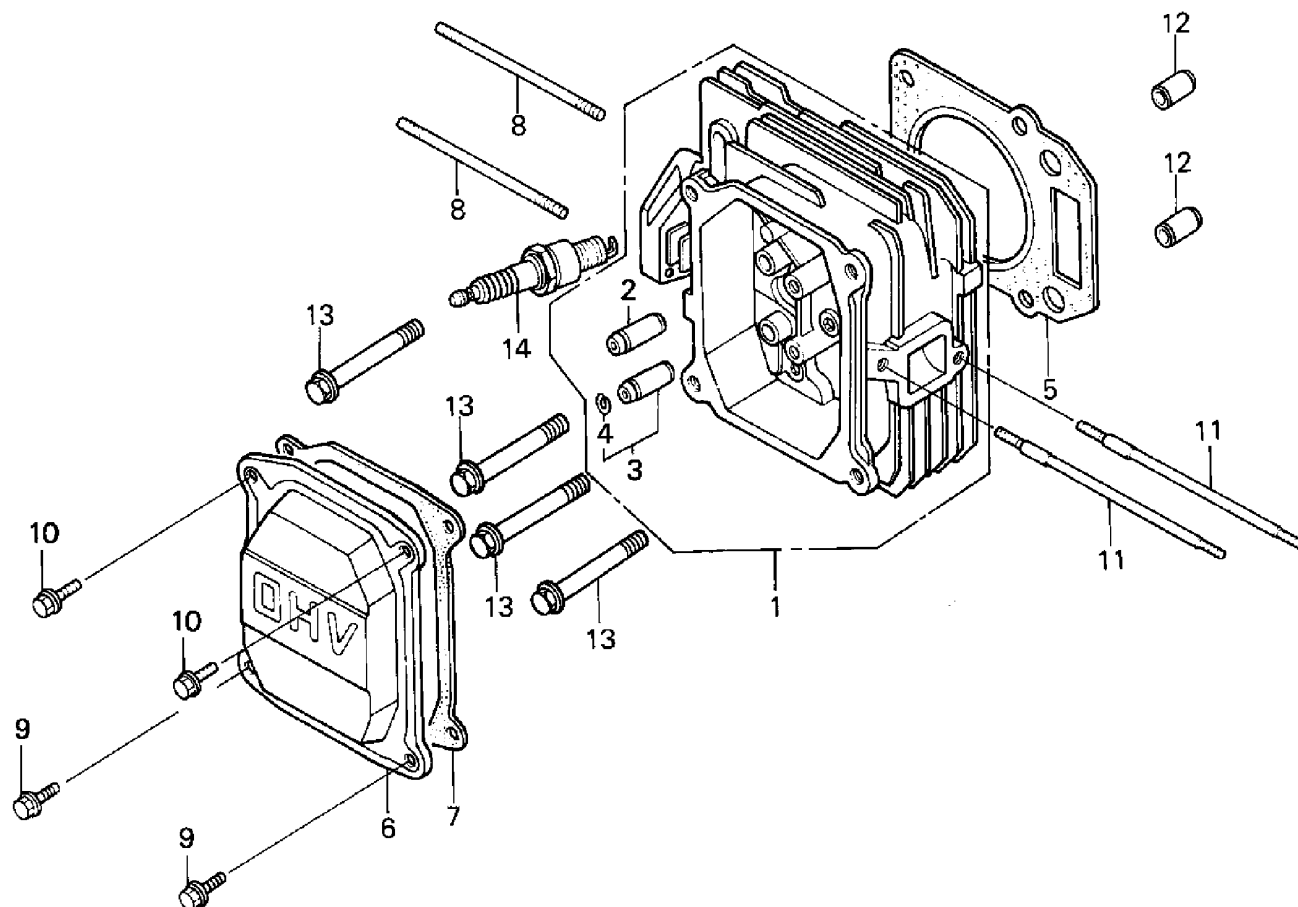 

Cylinder Head Assembly Honda GXV160K1 A1T


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
④1	12200-ZE7-010	1	Head-Cylinder	①④	98079-55846	1	Spark Plug (Bpr5es)(Ngk)
④2	12204-ZE1-306	1	Guide-Valve	①④	98079-55855	1	Spark Plug (W16epu)(Denso)
④3	12205-ZE1-315	1	Guide-Valve	①④	98079-56846	1	Plug-Spark
④4	12216-ZE5-300	1	Clip-Valve, Guide	①④	98079-56855	1	Spark Plug (W20epu)(Denso)
④5	12251-ZE7-000	1	Gasket-Cylinder, Head				
④6	12311-ZG9-800	1	Cover-Head				
④7	12391-ZE7-T00	1	Gasket-Cylinder Head Cover				
④8	90048-ZC3-000	2	Bolt-Stud				
④9	90013-883-000	2	Bolt-Flange				
④10	90013-883-000	2	Bolt-Flange				
④11	90043-ZE6-000	2	Bolt-Stud				
④12	94301-10160	2	Pin-Dowel				
④13	95701-08050-00	4	Bolt-Flange				
④14	98079-54846	1	Spark Plug (Bpr4es)(Ngk)				
①④	98079-54855	1	Spark Plug (W14epu)(Denso)				

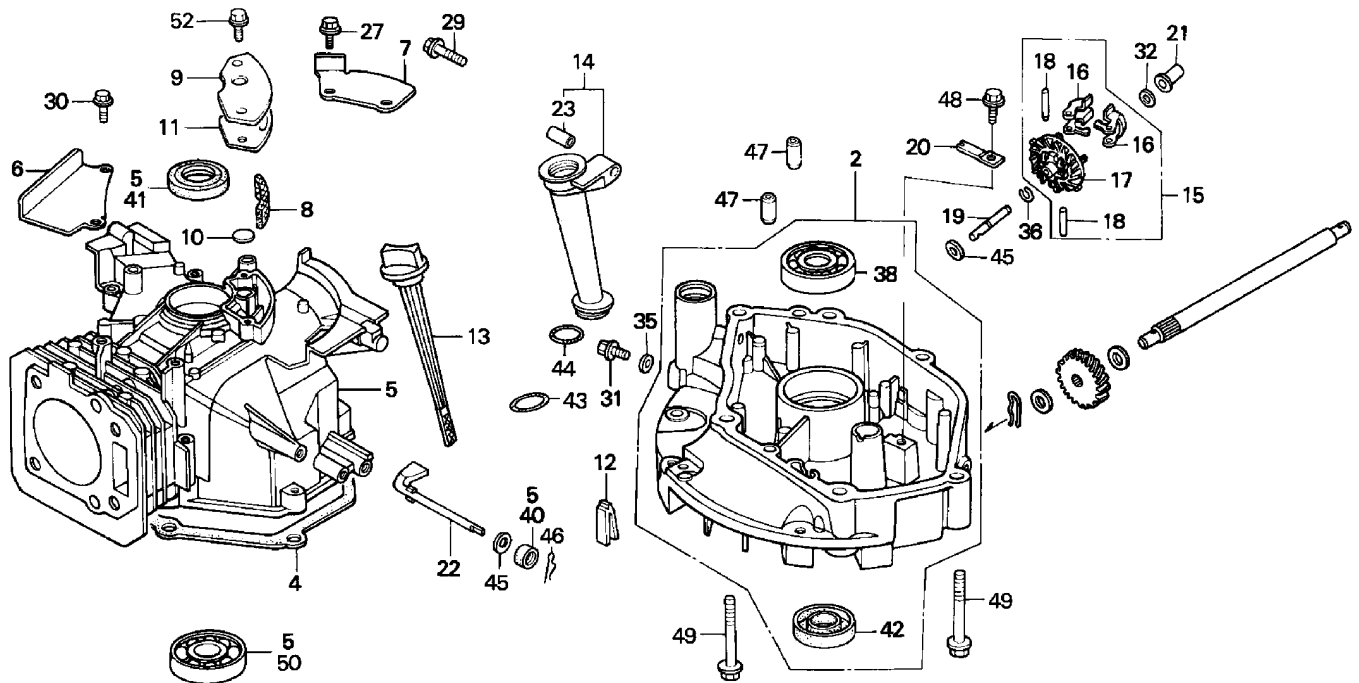 

Cylinder Barrel Assembly Honda GXV160K1 A1T


Ref	Part No.	Qty.	Description
④2	11300-ZE7-W00	1	Oil Pan Assembly
④4	11381-ZE7-M10	1	Gasket-Pan, Oil
④5	12000-ZE7-405	1	Cylinder Assembly
④6	12125-ZE7-000	1	Plate-Guide
④7	12126-ZE7-W00	1	Plate A-Guide
④8	12367-883-003	1	Filter-Breather
④9	12370-ZE7-000	1	Cover-Breather
④10	12372-ZE7-000	1	Breather-Valve
④11	12373-ZE7-000	1	Gasket-Breather, Cover
④12	15355-ZE7-000	1	Rubber-Oil, Return
④13	15620-ZE6-810	1	Dipstick-Oil
④14	15630-ZE6-810	1	Extension-Oil, Filler
④15	16510-ZE6-000	1	Governor Assembly

Ref	Part No.	Qty.	Description
④16	16511-ZE1-000	2	Weight-Governor
④17	16512-ZE6-000	2	Holder-Governor, Weight
④18	16513-ZE1-000	2	Pin-Governor Weight
④19	16515-ZE6-010	1	Shaft-Governor, Holder
④20	16525-ZE6-010	1	Plate-Governor Shaft Holder
④21	16531-ZE1-000	1	Slider-Governor
④22	16541-ZE7-000	1	Shaft-Governor, Arm
④23	17240-ZE6-000	1	Collar-Extension
④27	90013-883-000	2	Bolt-Flange
④29	90017-883-000	1	Bolt-Flange (6x32)
④30	90022-888-010	2	Bolt-Flange
④31	90131-ZE1-000	1	Bolt-Drain Plug
④32	90451-ZE1-000	1	Washer-Thrust

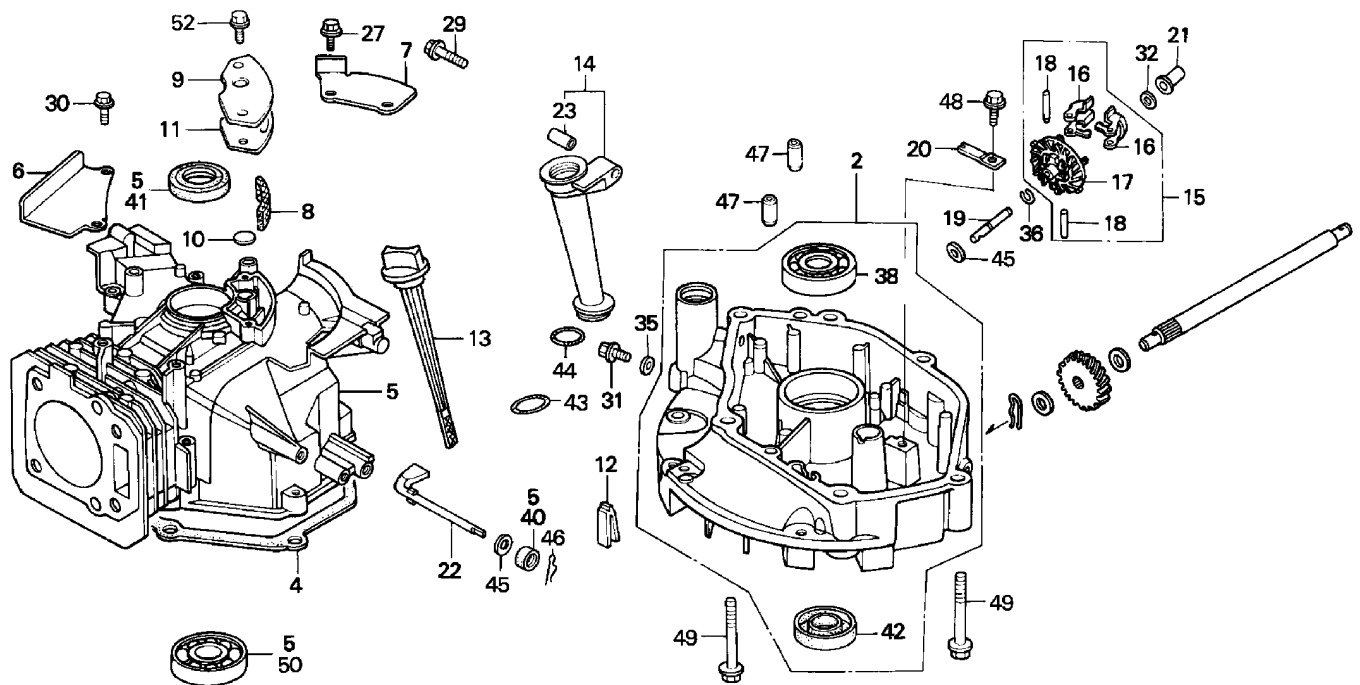 


Cylinder Barrel Assembly Honda GXV160K1 A1T (continued)

Ref	Part No.	Qty.	Description				
④35	90601-ZE1-000	1	Washer-Plug, Drain (10.2mm)				
④36	30602-ZE1-000	1	Clip-Governor Holder				
④40	91231-891-003	1	Seal-Oil (6x11x4)				
④41	91201-ZG9-U71	1	Seal-Oil (25x38x7)				
①④	91252-888-003	1	Seal-Oil (25x38x7)(Arai)				
④42	91252-894-004	1	Seal-Oil (25.4x40x7)				
④43	91301-ZE9-003	1	O-Ring (22.5x2.2)				
④44	91301-805-000	1	O-Ring (26x2.7)				
④45	94101-06800	2	Washer-Plain				
④46	94251-08000	1	Pin-Lock				
④47	94301-08140	2	Pin A-Dowel (8x14)				
④48	95701-06012-08	1	Bolt-Flange (6x12)				
④49	95701-08050-00	6	Bolt-Flange				
④50	96100-62050-00	1	Bearing-Ball, Radial (6025)				
④52	90014-952-000	2	Bolt-Flange				

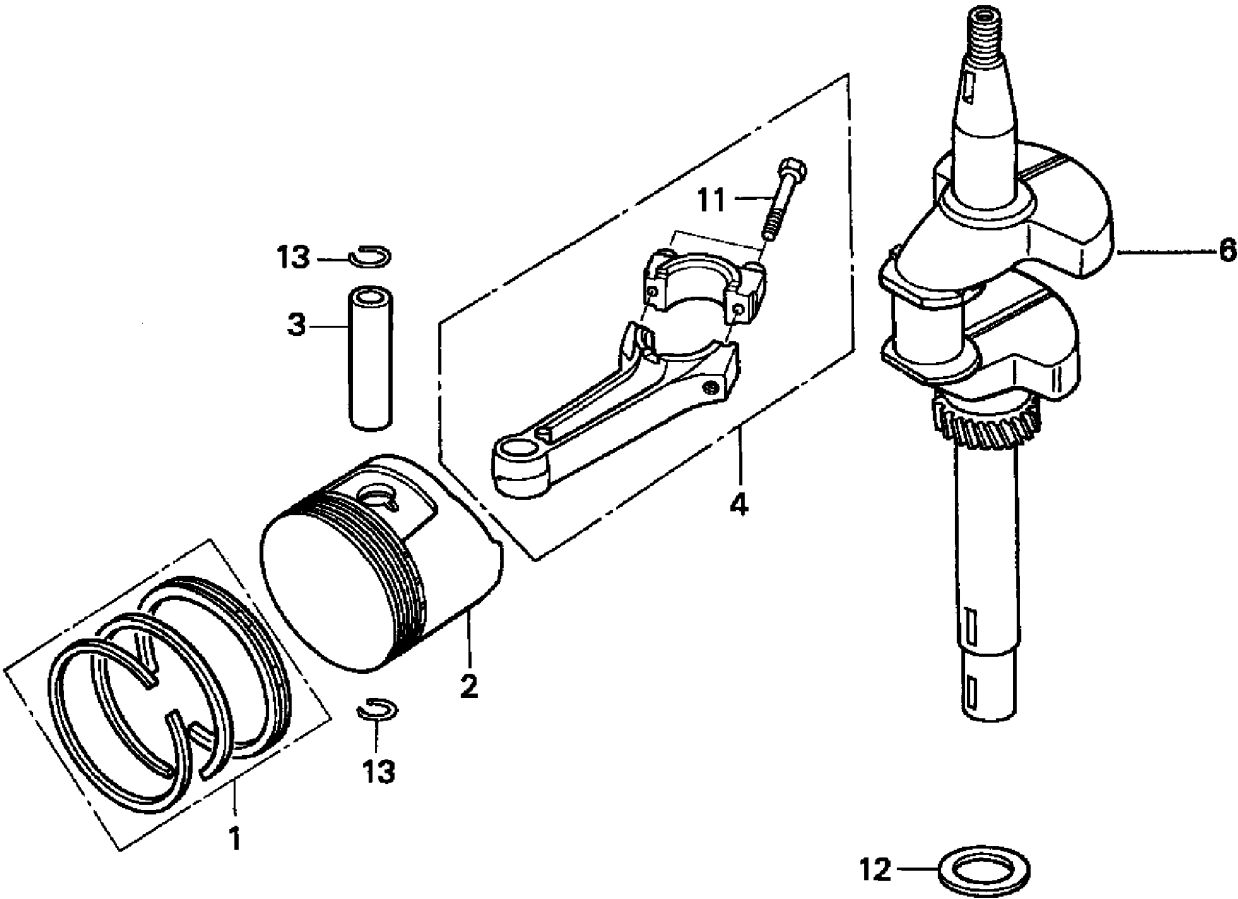 


Crankshaft and Piston Assembly
Honda GXV160K1 A1T

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	13010-ZF1-023	1	Ring Set-piston(Std)	12	90401-ZE7-W00	1	Washer-Thrust (25.6mm)
1 4	13011-ZF1-023	1	Ring Set-piston(Os 0.25)	13	90551-ZE1-000	2	Clip-Piston, Pin (18mm)
1 4	13012-ZF1-023	1	Ring Set-Piston (Os 0.50)				
1 4	13013-ZF1-023	1	Ring Set-Piston (0.75)				
2	13101-ZE7-010	1	Piston (Std)				
1 4	13102-ZE7-010	1	Piston (Os 0.25)				
1 4	13103-ZE7-010	1	Piston (Os 0.50)				
1 4	13104-ZE7-010	1	Piston (0.75)				
3	13111-ZE1-000	1	Pin-Piston				
4	13200-ZE7-000	1	Connecting Rod Assembly				
1 4	13200-ZE7-305	1	Connecting Rod Assembly				
6	13310-ZE7-010	1	Crankshaft (N1 Type)				
11	90001-ZE1-000	2	Bolt-Connecting Rod				

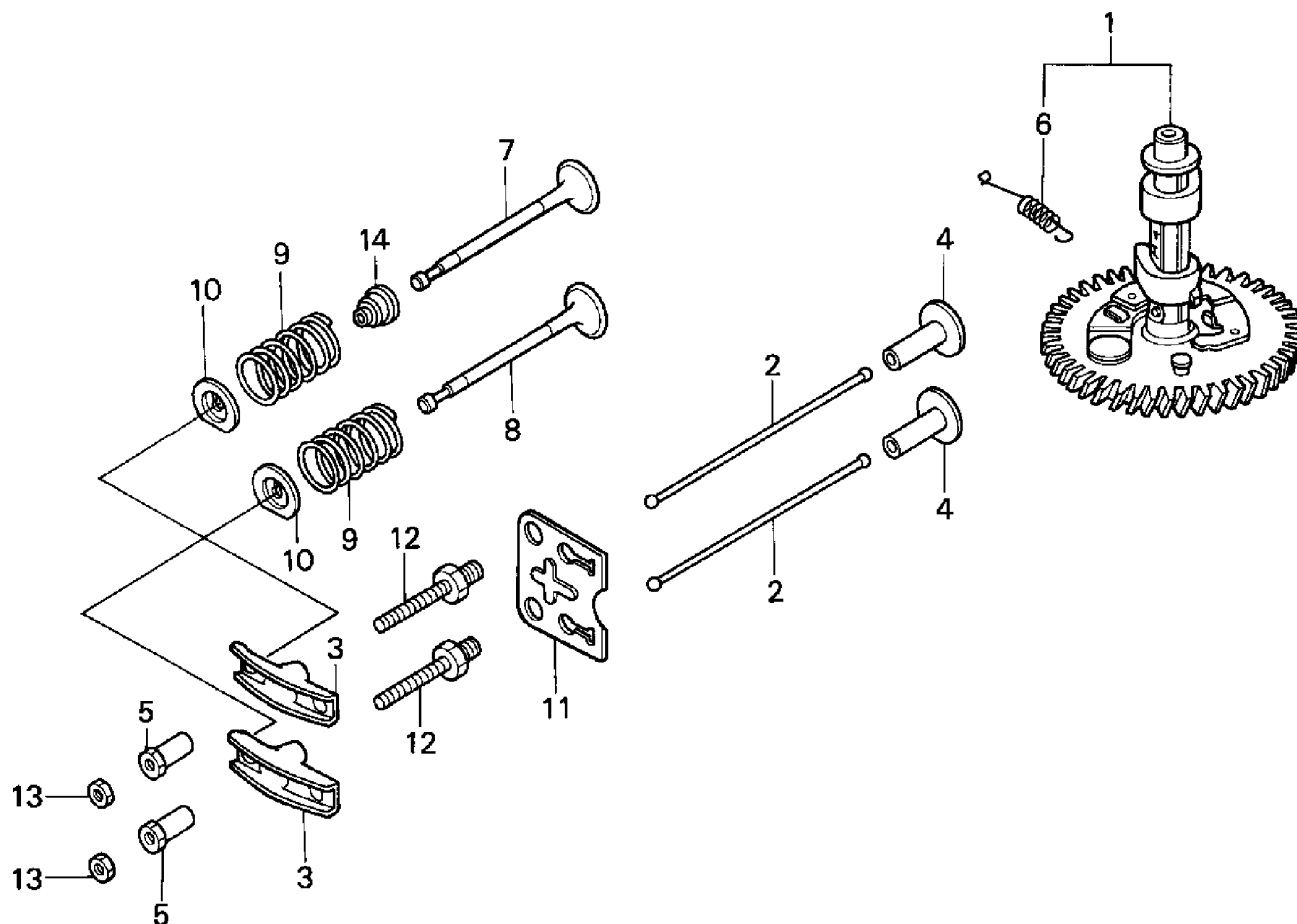 


Camshaft Assembly Honda GXV160K1 A1T

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
❶1	14100-ZE7-000	1	Camshaft Assembly	❶14	12209-ZE6-003	1	Seal-Valve, Stem
❶2	144100-ZE1-010	2	Rod-Push				
❶3	14431-ZE1-000	2	Valve-Rocker, Arm				
❶4	14441-ZE1-010	2	Lifter-Valve				
❶5	14451-ZE1-013	2	Pivot-Rocker, Arm				
❶6	14568-ZE1-000	1	Spring-Weight, Return				
❶7	14711-ZF1-000	1	Valve-Intake				
❶8	14721-ZE7-000	1	Valve-Exhaust				
❶9	14751-ZE1-000	2	Spring-Valve				
❶10	14771-ZE1-000	2	Retainer-Intake Valve Spring				
❶11	14791-ZE1-010	1	Plate-Push Rod Guide				
❶12	90012-ZE0-010	2	Bolt-Pivot (8mm)				
❶13	90206-ZE1-000	2	Nut-Pivot, Adjust				

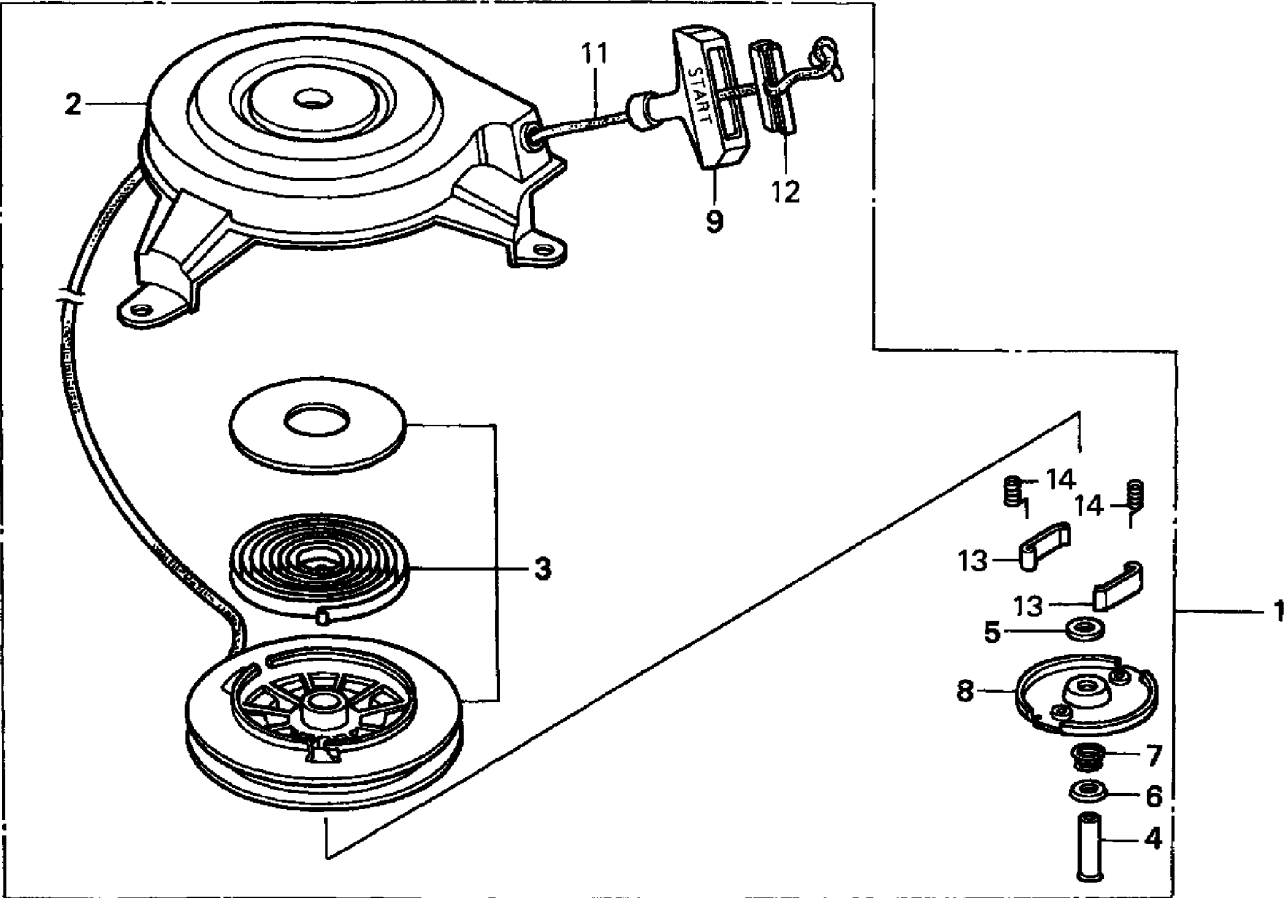 


Recoil Starter Assembly
Honda GXV160K1 A1T

Ref	Part No.	Qty.	Description				
❶	28400-ZG9-803	1	Recoil Starter Assembly				
❷	28402-ZG9-802	1	Housing Assembly				
❸	28415-ZG9-802	1	Pulley And Spring Assembly				
❹	28419-ZG9-802	1	Pin-Center				
❺	28431-ZG9-802	1	Plate A-Friction				
❻	28432-ZG9-802	1	Plate-Friction				
❼	28441-ZG9-802	1	Spring-Friction				
❽	28444-ZG9-802	1	Retainer				
❾	28461-ZE6-T02	1	Handle				
❾❶	28462-ZG9-802	1	Rope-Recoil, Starter				
❾❷	28463-ZE6-T02	1	Handle-Reinforcement				
❾❸	28485-ZE6-T02	2	Ratchet-Starter				
❾❹	28486-ZE6-T02	2	Spring-Dog				

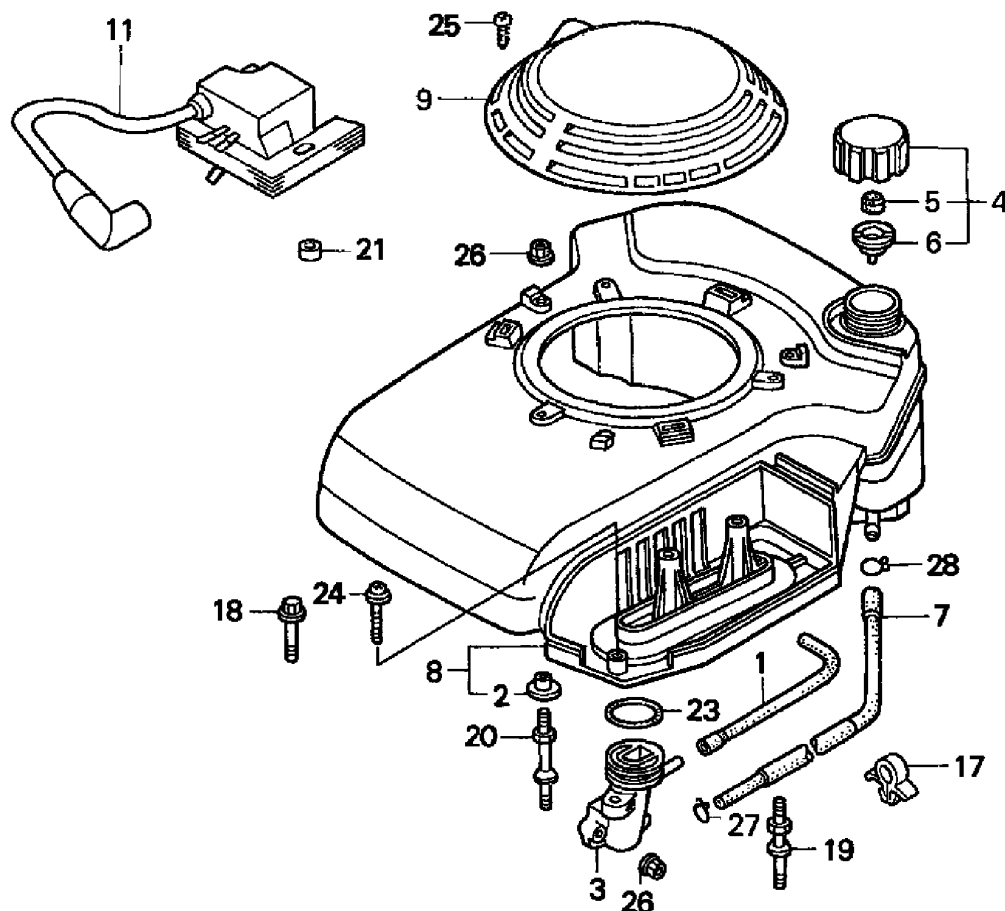 

Fan Cover Assembly Honda GXV160K1 A1T


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
④1	15721-ZE7-000	1	Tube-Breather	④17	46392-SC2-003	1	Clamp-Brake, Pipe
④2	17216-PE2-003	3	Collar-Air, Cleaner	④18	90015-883-000	1	Bolt-Flange (6x28)
④3	17410-ZE7-W00	1	Elbow-Air, Cleaner	④19	90041-ZE7-W10	2	Bolt-Stud
④4	17620-ZE7-000	1	Fuel Tank Cap Assembly	④20	90042-ZE7-W00	1	Bolt-Stud (Ign Coil)
④5	17622-888-010	1	Sponge-Fuel Cap Breather	④21	90402-ZE7-W00	2	Collar-Special
④6	17624-ZE7-000	1	Gasket-Fuel, Cap	④23	91301-ZG9-800	1	O-Ring (33.3x3.5)
④7	17700-ZE7-W00	1	Tube-Fuel Tank Assembly	④24	93891-06035-10	1	Washer-Screw (6x35)
④8	19610-ZE7-W11ZA	1	Cover-Fan (Black)	④25	93913-24580	1	Screw-Tapping (4x20)
①④	19610-ZE7-W11ZB	1	Cover-Fan (Bright Red)	④26	94050-06000	5	Nut-Flange
④9	19615-ZG9-801ZA	1	Hood-Fan, Cover *Nh1* (Black)	④27	95002-02080	1	Clip-Tube
①④	19615-ZG9-801ZB	1	Hood-Fan, Cover *r8* (Bright Red)	④28	95002-02100	1	Clip-Tube
④11	30500-ZG9-801	1	Ignition Coil Assembly	①④	95002-50000	1	Clip-Tube
①④16	36103-ZE1-000	1	Stop Switch Wire Holder				

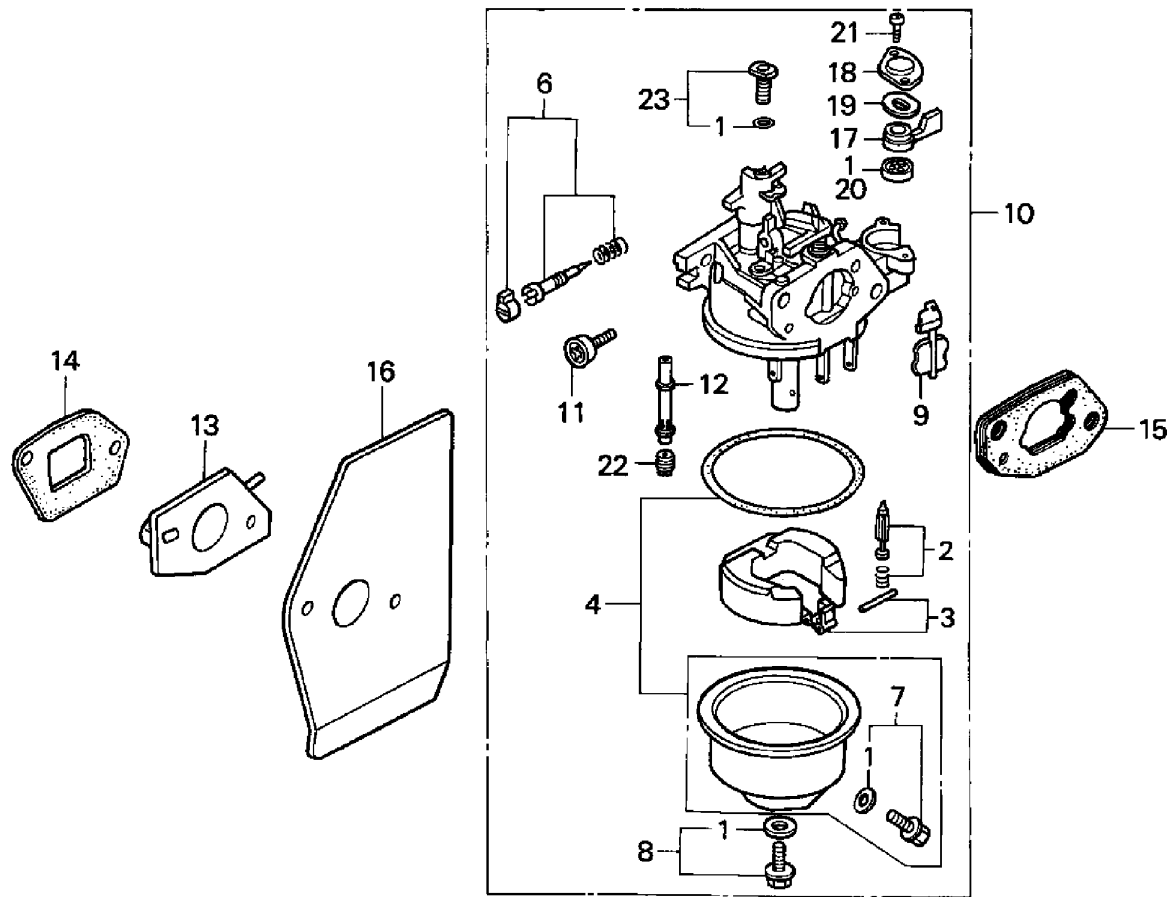 

Carburetor Assembly
Honda GXV160K1 A1T

Ref	Part No.	Qty.	Description
❶1	16010-ZE0-025	1	Gasket, Set
❷2	16011-ZE0-005	1	Float-Valve, Set
❸3	16013-ZE0-005	1	Float Set
❹4	16015-ZE0-831	1	Chamber, Set-Float
❺6	16016-ZH7-W01	1	Screw-Set
❻7	16024-ZE1-811	1	Screw-Set, Drain
❼8	16028-ZE0-005	1	Screw-Set
❽9	16045-ZE7-005	1	Choke Set
❿10	16100-ZE7-W21	1	Carburetor Assembly
❶❶11	16124-ZE0-005	1	Screw-Throttle, Stop
❶❷12	16166-ZE7-W10	1	Nozzle-Main
❶❸13	16211-ZE7-000	1	Insulator-Carburetor
❶❹14	16212-ZE7-M10	1	Gasket-Insulator


Ref	Part No.	Qty.	Description
❶❺15	16220-ZE6-010	1	Spacer-Carburetor
❶❻16	16221-ZE7-M11	1	Gasket-Carburetor
❶❼17	16953-ZE1-406	1	Lever-valve(Engine Serial Number Up To Be66c A)
❶❶❶18	16953-ZE1-811	1	Lever-valve(Engine Serial Number Up To Be66c A)
❶❶❶19	16953-ZE1-812	1	Lever-valve(Engine Serial Number From Be66c B)
❶❷❶20	16954-ZE1-811	1	Plate-Lever, Setting(Engine Serial Number Up To Be66c A)
❶❶❶21	16954-ZE1-812	1	Plate-Lever, Setting(Engine Serial Number From Be66c B)
❶❸❶22	16956-ZE1-811	1	Spring-Valve, Lever
❶❹❶23	16957-ZE1-812	1	Gasket-Valve
❶❶❶24	93500-03006	2	Screw-Pan (3x6)(Engine Serial Number From Be66c B)
❶❶❶25	93500-03008	2	Screw-Pan (3x8)(Engine Serial Number Up To Be66c A)
❶❷❶26	99101-ZH8-0600	1	Jet- Main (No.60)
❶❶❶27	99101-ZH8-0620	1	Jet-Main (No.62)

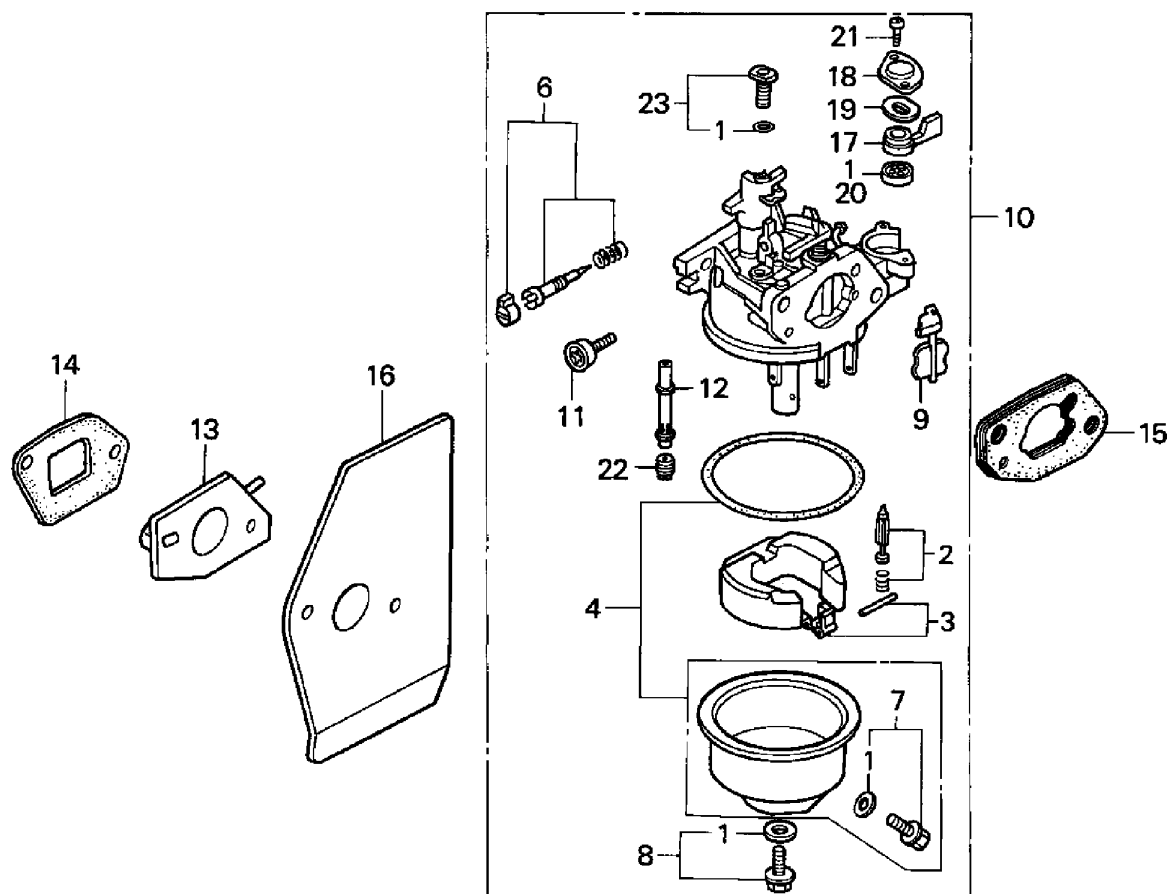 

Carburetor Assembly

Honda GXV160K1 A1T (continued)


Ref	Part No.	Qty.	Description				
1 4	99101-ZH8-0650	1	Jet-Main (No.65)				
4 23	99204-ZE0-0350	1	Jet Set-Pilot (No.35)				

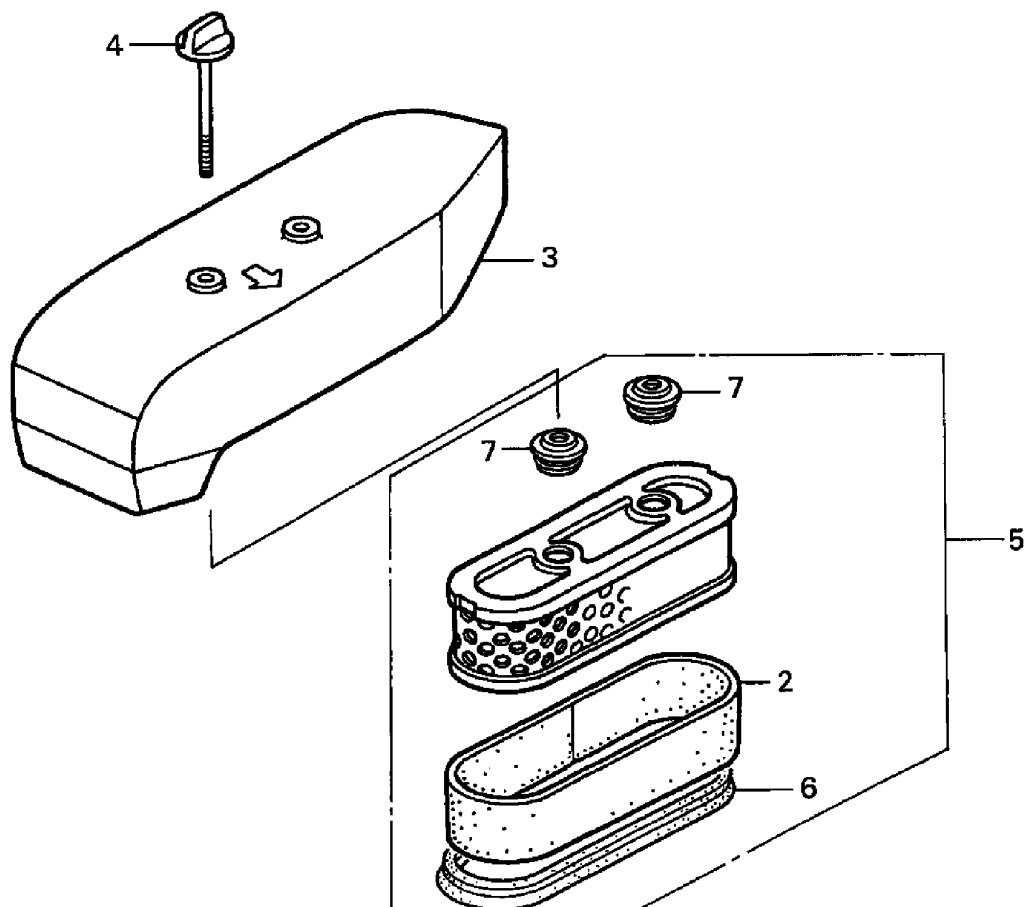 

Air Cleaner Assembly


Honda GXV160K1 A1T

Ref	Part No.	Qty.	Description				
④2	17218-ZE7-W02	1	Filter (Outer)				
④3	17231-ZE7-W00ZA	1	Cover-Air, Cleaner (Black)				
④4	90004-ZE7-W00	2	Bolt-Air, Cleaner (6x73)				
④5	17211-ZE7-W03	1	Element-Air, Cleaner				
④6	17217-ZE7-W00	1	Gasket-Element				
④7	17232-ZE7-W00	2	Grommet-Air, Cleaner				

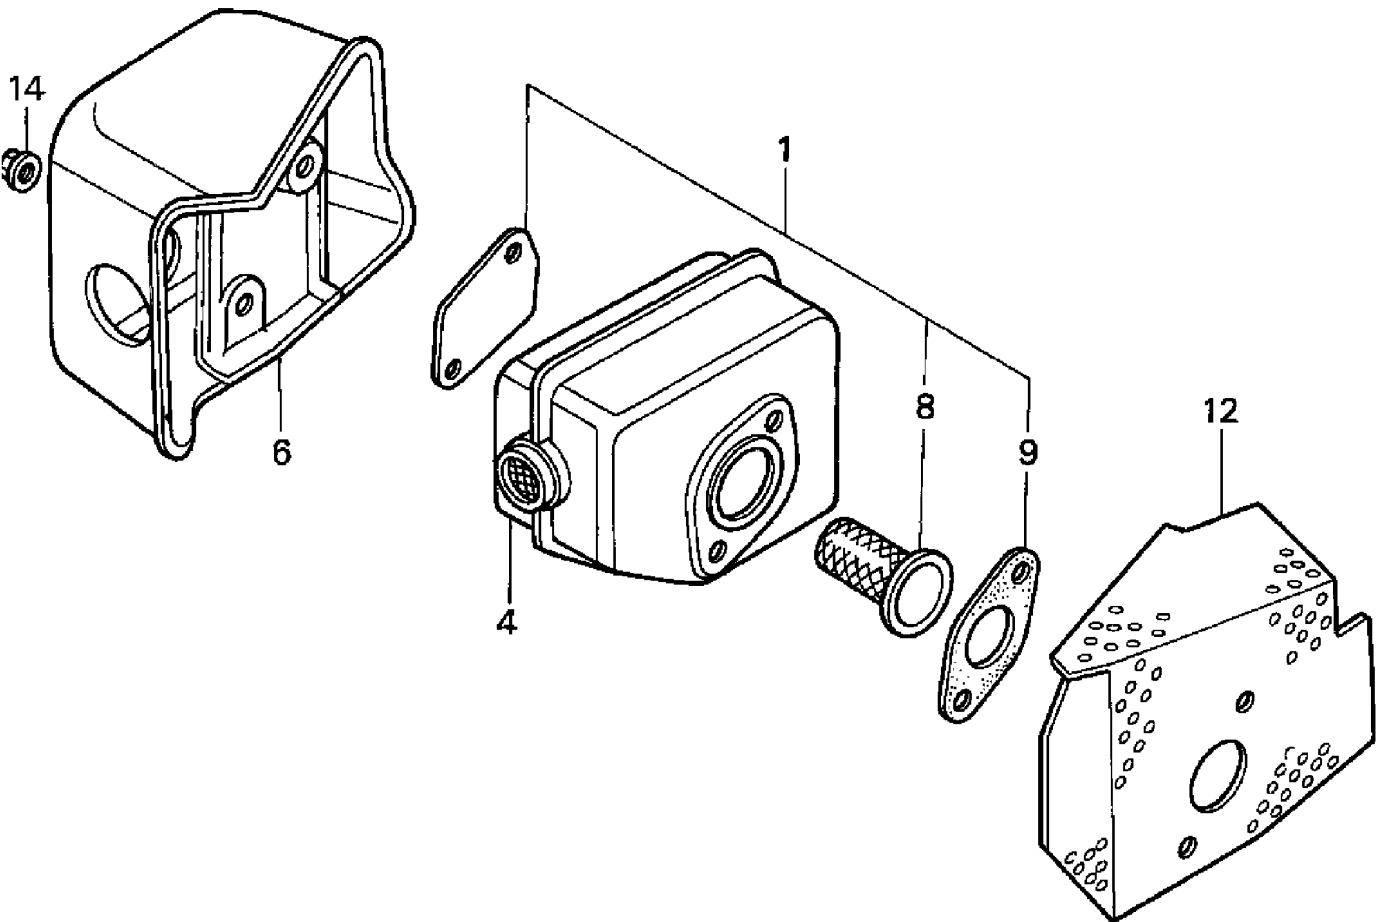 

Muffler Assembly
Honda GXV160K1 A1T


Ref	Part No.	Qty.	Description				
1	06180-ZE6-820	1	Arrester-Spark				
4	18310-ZG9-J01	1	Muffler				
6	18320-ZG9-M01	1	Protector-Muffler				
8	06180-888-505	1	Arrester Kit-Spark				
14	06180-888-810	1	Arrester Kit-Spark				
9	18381-ZE6-820	1	Gasket-Muffler				
12	18381-ZG9-M00	1	Gasket-Muffler				
14	90343-ZE6-000	2	Nut-Self, Lock (6mm)				

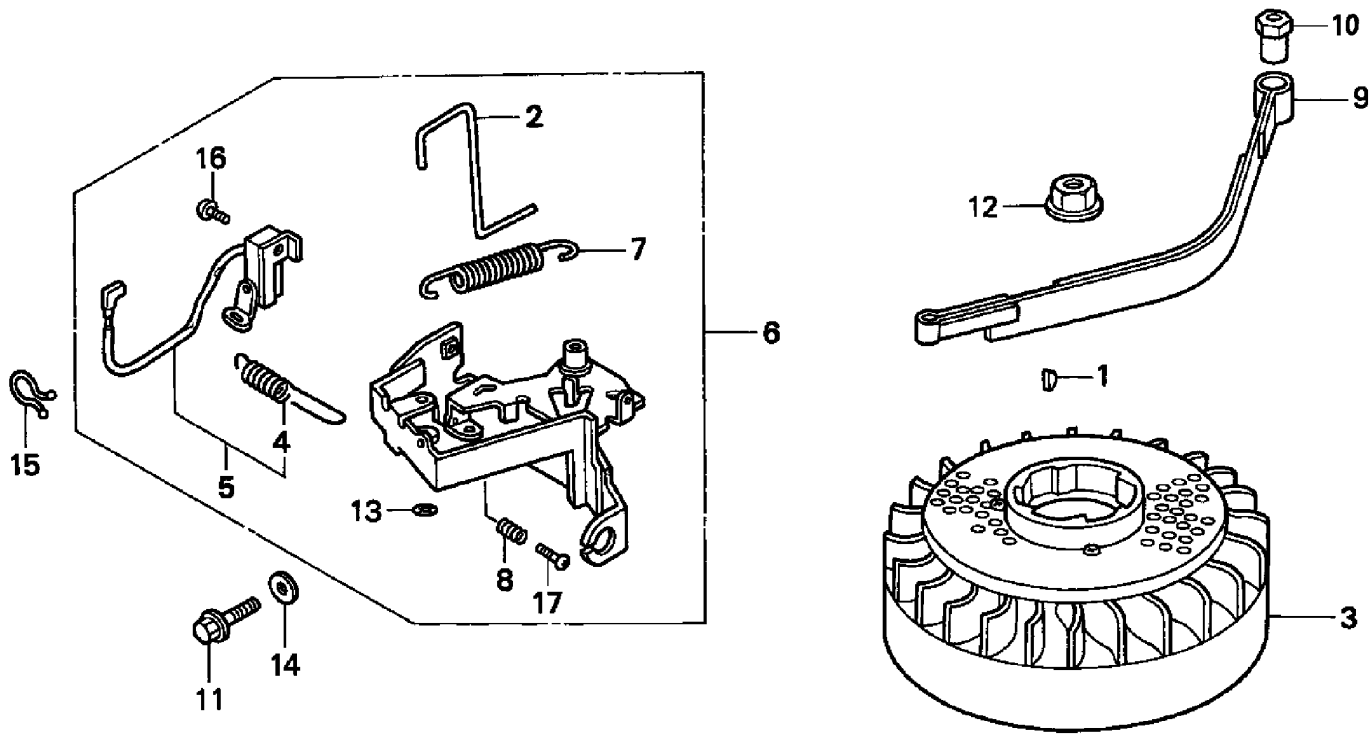 

Flywheel Assembly
Honda GXV160K1 A1T


Ref	Part No.	Qty.	Description
❶1	13331-357-000	1	Key-Special Woodruff
❷2	16566-ZE7-W00	1	Rod-Governor Arm, Return
❸3	31105-ZE7-W00	1	Flywheel Assembly
❹4	35129-ZG9-800	1	Spring-Switch, Control
❺5	36100-ZE7-W01	1	Switch Assembly Engine Stop
❻6	75101-ZE7-W00	1	Brake Lever Assembly
❼7	75113-ZG9-800	1	Spring-Brake, Lever
❽8	75114-ZG9-800	1	Spring-Brake, Adjusting
❾9	75120-ZG9-305	1	Brake
❿10	75123-ZG9-800	1	Collar-Brake, Shaft
⓫11	90014-952-000	1	Bolt-Flange
⓬12	90201-878-003	1	Nut-Special
⓭13	90310-ZB7-701	1	Nut-Push (2.6)

Ref	Part No.	Qty.	Description
❶14	90461-357-000	1	Washer-Sealing (6.5x12)
❷15	90630-ZE7-W01	1	Clip-Purse, Lock
❸16	93500-04008-0A	1	Screw-Pan (4x8)
❹17	93500-05012-0A	1	Screw-Pan (5x12)

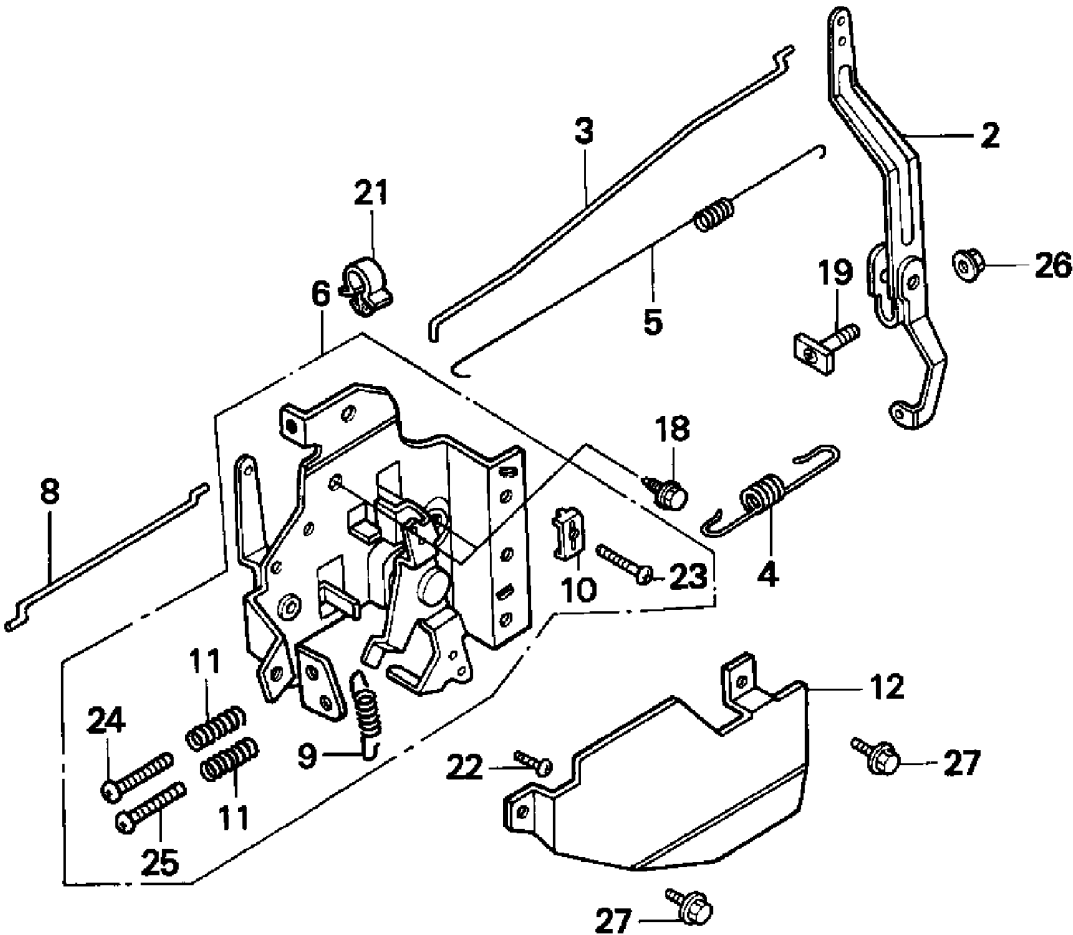 

Control Assembly
Honda GXV160K1 A1T

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
④2	16551-ZE7-000	1	Arm-Governor	④22	93500-04008-0A	1	Screw-Pan (4x8)
④3	16555-ZE7-000	1	Rod-Governor	④23	93500-05016-0A	1	Screw-Pan (5x16)
④4	16561-ZE7-020	1	Spring-Governor (Std)	④24	93500-05020-0A	1	Screw-Pan (5x20)
④5	16562-ZE6-000	1	Spring-Throttle, Return	④25	93500-05028-0A	1	Screw-Pan (5x28)
④6	16570-ZE7-020	1	Control Assembly	④26	94050-06000	1	Nut-Flange
④8	16573-ZE7-000	1	Rod-Choke	④27	95701-06010-00	1	Bolt-Flange (6x10)
④9	16576-ZE7-300	1	Spring-Lever				
④10	16576-891-000	1	Holder-Cable				
④11	16584-883-300	2	Spring-Control, Adjusting				
④12	16585-ZE7-000	1	Protector-Control				
④18	90013-883-000	2	Bolt-Flange				
④19	90015-ZE5-010	1	Bolt-Governor Arm				
④21	90659-680-013	1	Clip-Wire, Harness				

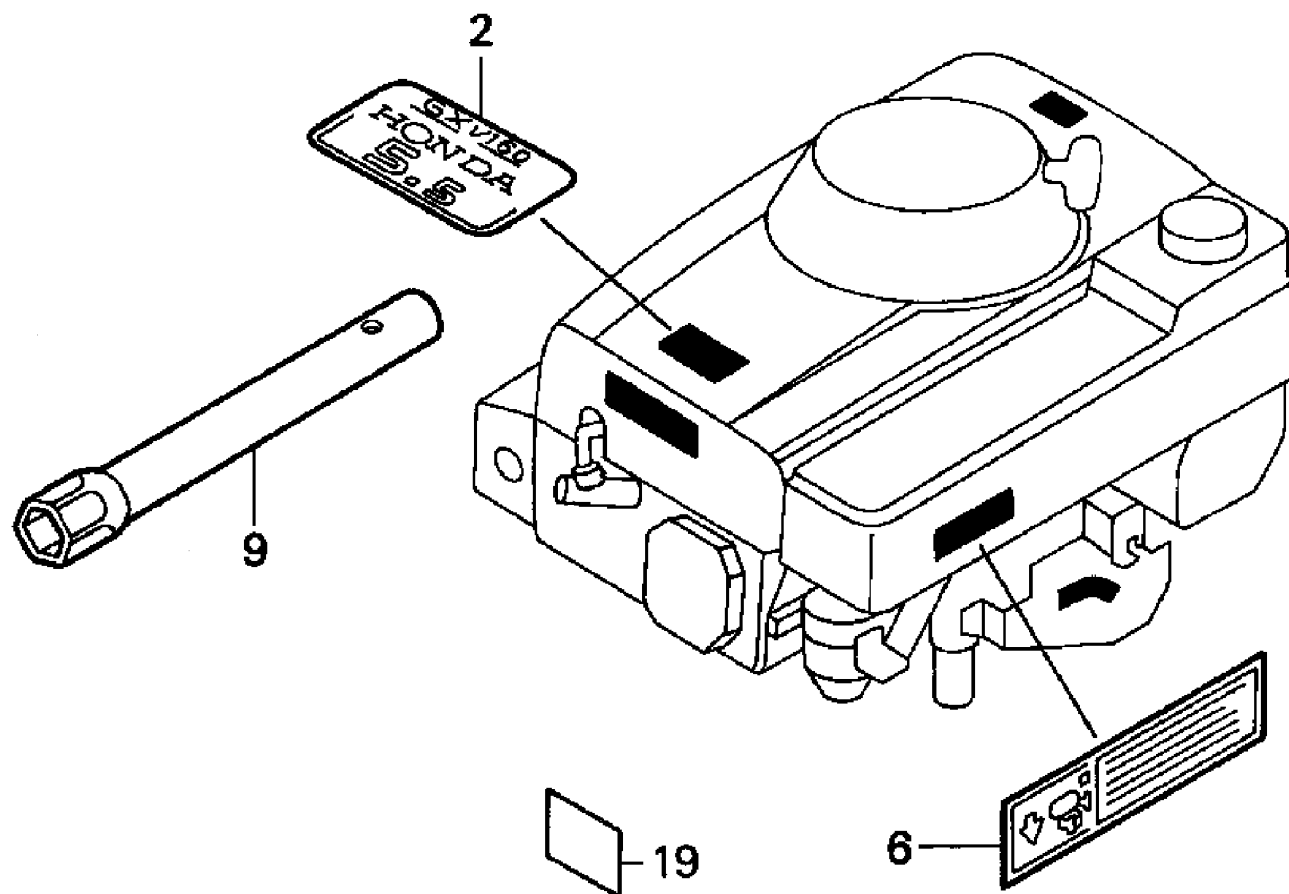 

Label Assembly and Gasket Kits

Honda GXV160K1 A1T

Ref	Part No.	Qty.	Description				
42	87101-ZE7-W12	1	Mark, Emblem (5.5)(Es)engine S/n Up To 6154807				
1 4	87101-ZE7-W30	1	Mark, Emblem (5.5)(Ah)engine S/n From6154808				
46	87531-ZG9-800	1	Mark, Honda				
49	99004-21003	1	Wrench-Box (P21)				
419	87601-ZE7-W30	1	Mark, Type (A12)				
1 4	061A1-ZE7-801	1	Gasket Kit				
1 4	06111-ZE7-406	1	Gasket Kit				

NOTES

