



**Count on it.**

**Parts Catalog**

**Titan® Max 60in Zero Turn  
Riding Mower**

Model No. 76606—Serial No. 418850000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Frame Assembly.....	4
ROPS Assembly No. 164-0228.....	6
Transaxle Assembly.....	8
LH Hydro Assembly No. 161-6352.....	10
RH Hydro Assembly No. 161-6353.....	12
Styling Pod Assembly.....	14
Fuel Assembly.....	16
Seat Pan Assembly.....	18
Seat Assembly No. 163-6014.....	20
Motion Control Assembly.....	22
Caster Wheel Assembly.....	24
Wheel and Tire Assembly.....	26
Electrical Assembly.....	28
Decklift Assembly.....	30
Engine and Muffler Assembly.....	32
60 Inch Deck Assembly.....	34
Decal Assembly No. 161-9768SP.....	36
Idler Arm Assembly No. 161-6406.....	38
Attachments and Accessories.....	40


# Frame Assembly

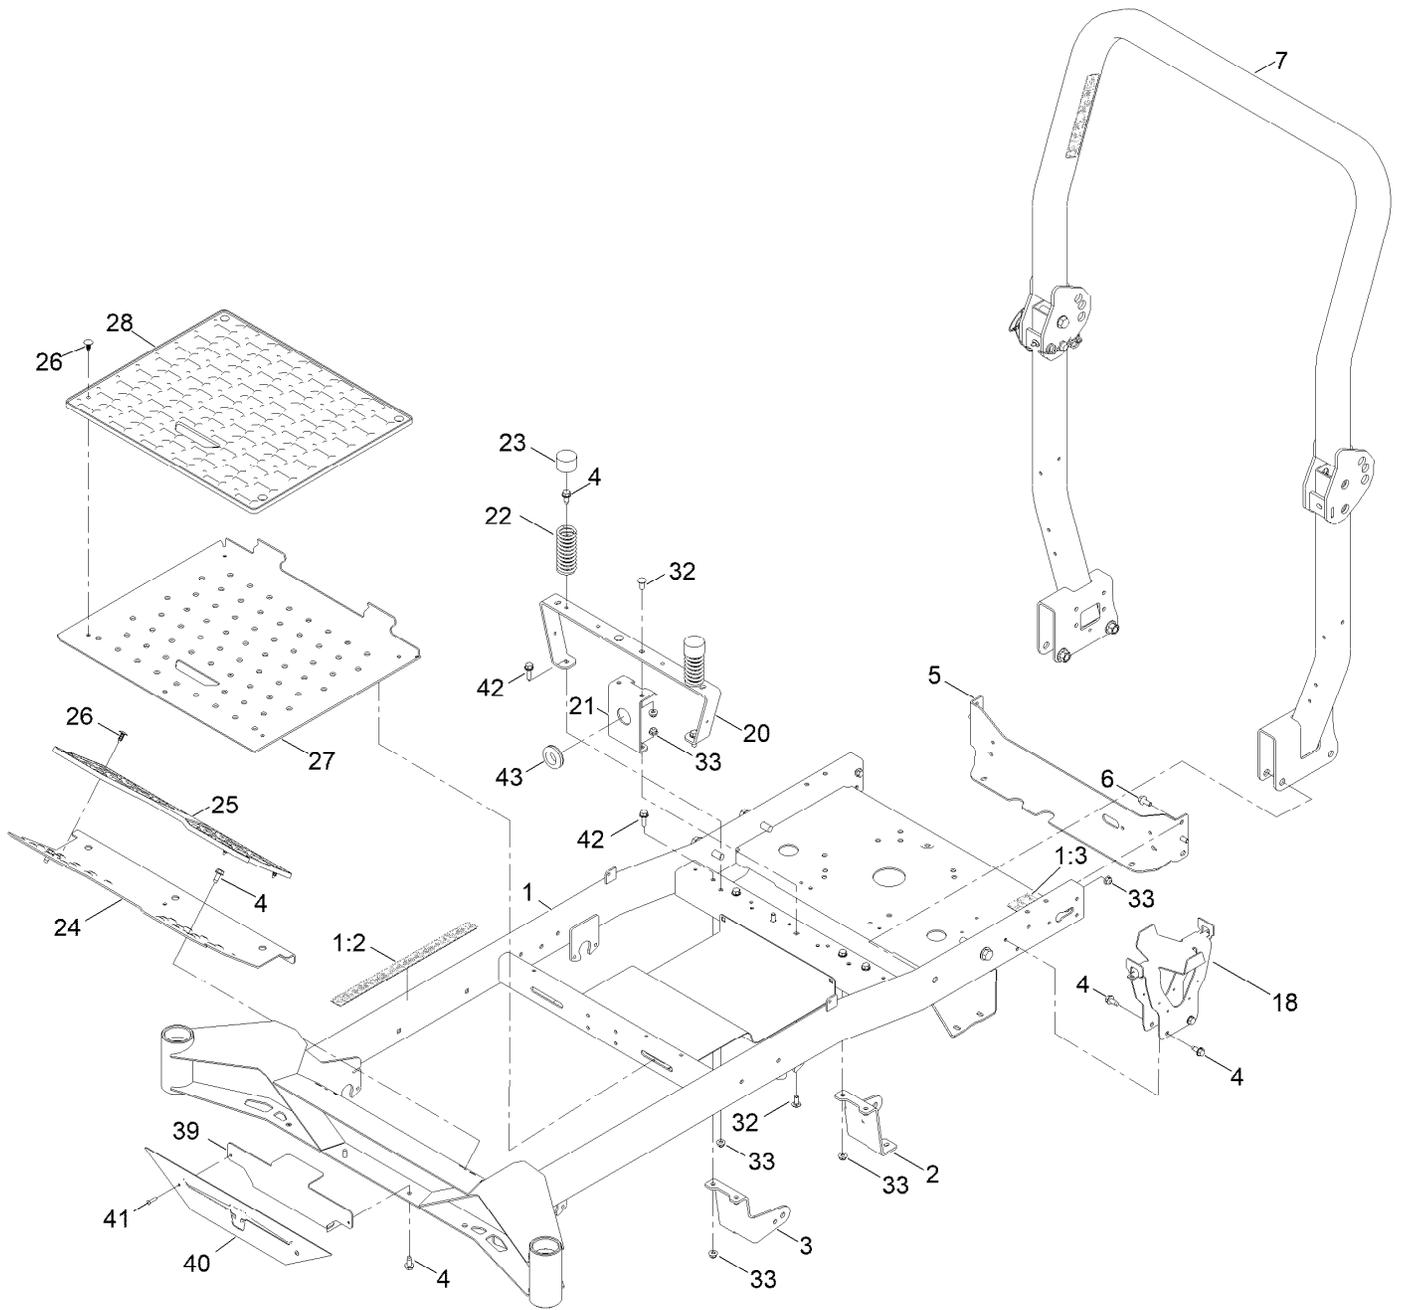

## Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-2385	1	Frame W/Decals ASM	23	701178	2	Cap-Protector
1:2	161-6647	1	Decal-Warning	24	145-6369-01	1	Pan-Floor
1:3	161-6207	1	Decal-Bypass	25	147-7611	1	Floor Mat - Titan
2	161-6506-01	1	Mount-Drive, LH	26	117-2382	8	Plug-Plastic
3	161-6507-01	1	Mount-Drive, RH	27	145-6370-01	1	Pan-Floor
4	32144-70	10	Screw-HWHTF	28	147-7609	1	Floor Mat
5	163-3137-03	1	Plate-Mount, Rear	32	137-3061	4	Bolt-CARR
6	139-2598	4	Screw-HHF	33	119-4041	14	Nut-HF
7	164-0228	1	ASM-ROPS	39	147-2878-01	1	Plate-Backer
18	161-6314-03	1	Tray-Battery	40	147-2879-03	1	Logo-Plate-Front
20	161-6318-03	1	Support-Seat	41	130-8451	2	Rivet-Trifold
21	161-9738	1	Bracket-Latch, Frame (Mty/Btv)	42	139-2596	6	Screw-HHF
22	138-2548	2	Spring-Compression	43	108-3723	1	Grommet

# ROPS Assembly No. 164-0228

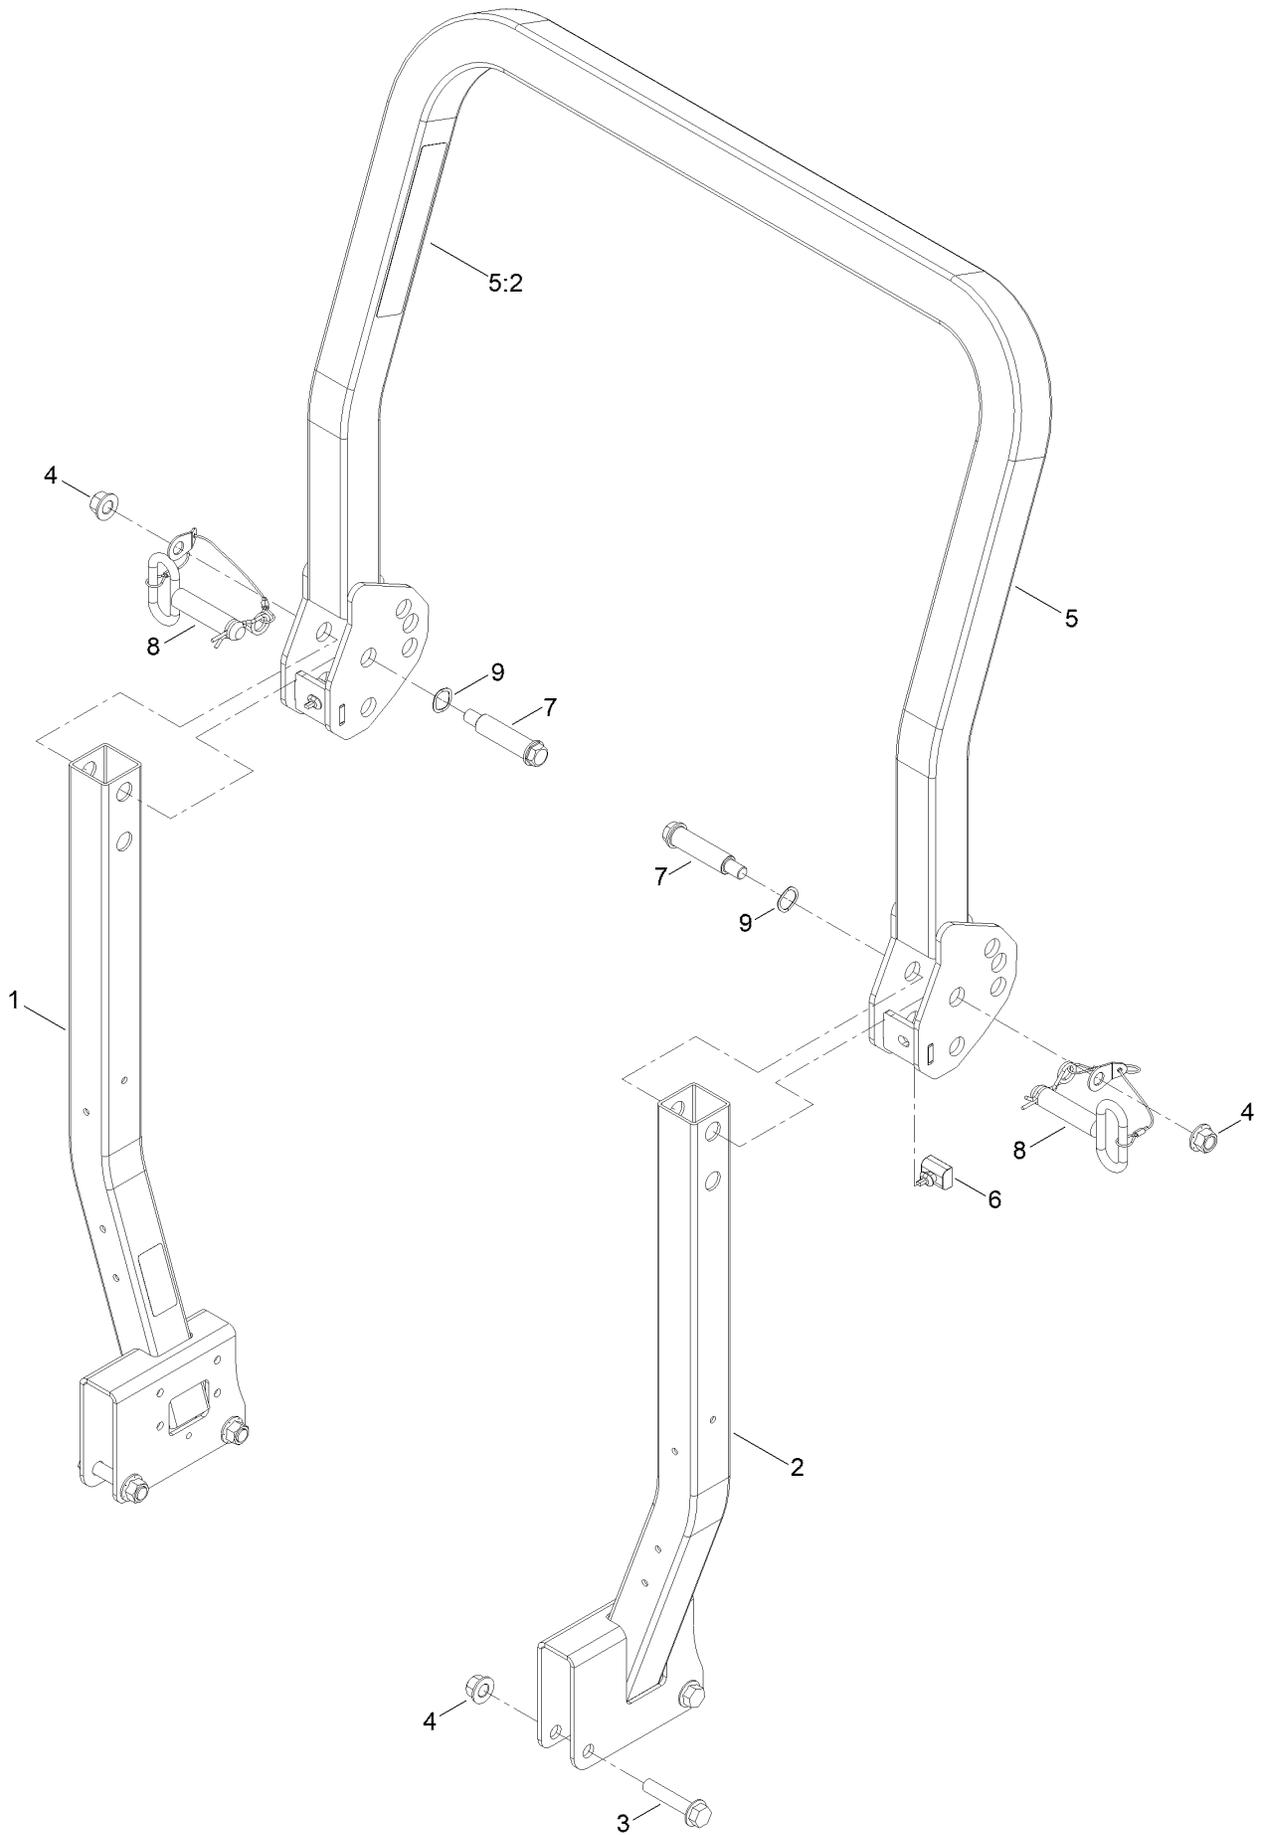


# ROPS Assembly No. 164-0228 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	RH ROPS ASM [black] ●	5:2	107-3069	1	Decal-Warning
2		1	LH ROPS ASM [black] ●	6	109-5337	2	Bumper-ROPS
3	127-7444	4	Screw-HHF	7	161-4505	2	Bolt-Shoulder
4	139-1689	6	Nut-HF	8	161-4477	2	ROPS Pin ASM
5		1	Tube-ROPS, Upper ASM ●	9	119-4164	2	Washer-Wave

● Not serviced separately

# Transaxle Assembly

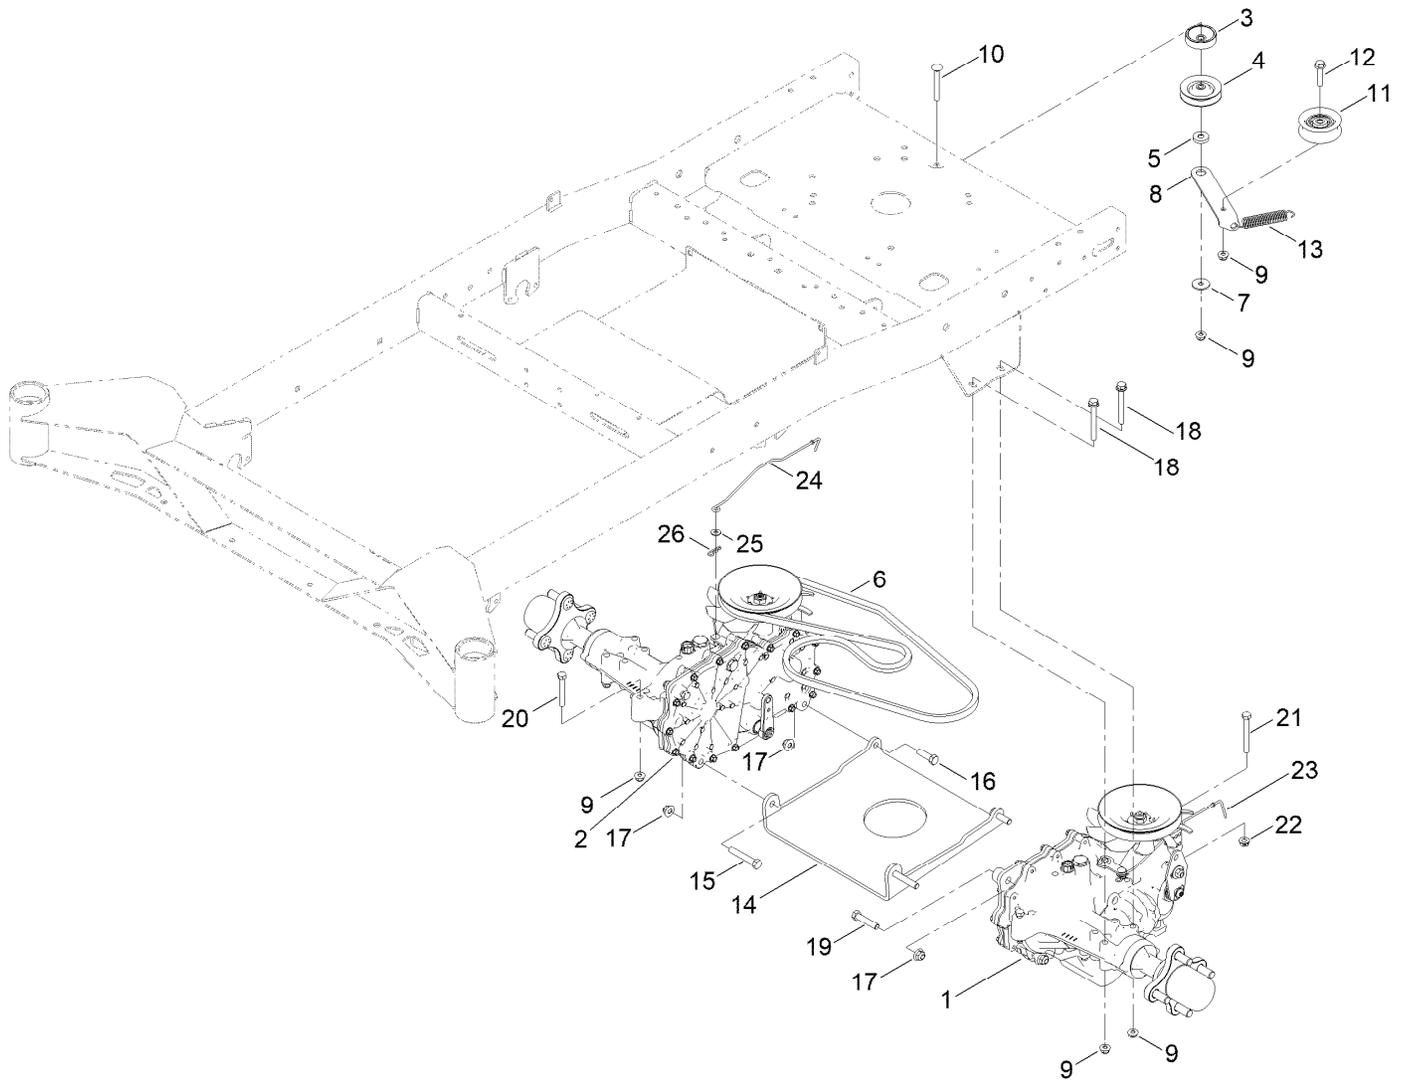

## Transaxle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-6352	1	LH Hydro Transaxle ASM	14	161-9754-03	1	Plate-Hydro
2	161-6353	1	RH Hydro Transaxle ASM	15	139-2589	2	Screw-HH
3	138-9809	1	Spacer	16	136-8684	2	Screw-HH
4	68-0030	1	Idler	17	119-4042	6	Nut-HF, NI
5	138-7277	1	Spacer-Arm, Idler	18	138-7590	4	Screw-HHF
6	145-6363	1	V-Belt (A Sec 66.30 EI)	19	139-2602	2	Screw-HH
7	5-4460	1	Washer-Pivot	20	322-11	2	Screw-HH
8	147-2925	1	Arm-Idler	21	145-6388	2	Screw-HH Spcl
9	119-4041	8	Nut-HF	22	139-2574	2	Nut-HF
10	139-2588	1	Screw-CARR	23	147-2987	1	Rod-Bypass, LH
11	138-7597	1	Pulley-Idler, Flat	24	147-2986	1	Rod-Bypass, RH
12	140-5024	1	Screw-HHF	25	119-8952	2	Washer-Spcl
13	137-7040	1	Spring-Return, Pedal	26	137-3083	2	Pin-Hair

# LH Hydro Assembly No. 161-6352


**Items Not Shown**

14 Oil, 20W50

13 Sealant

200 Seal Kit

Parts Included in 200 Seal Kit:  
10,30,31,33,35,41,56,57,71,103,  
130,157.

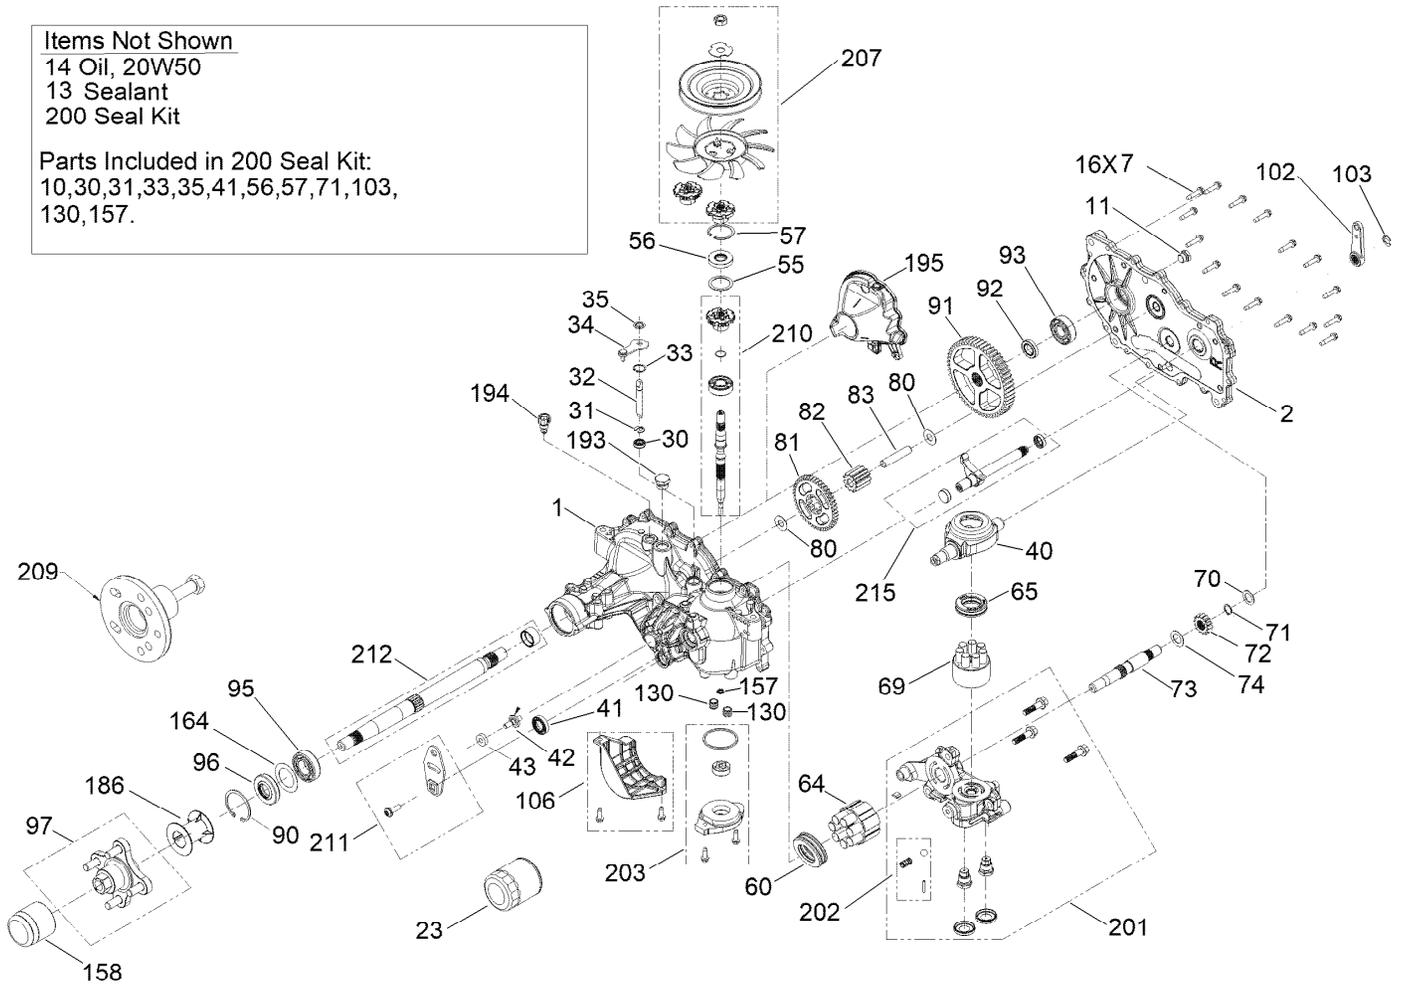

## LH Hydro Assembly No. 161-6352 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-8345	1	RH Main Housing Kit	81	114-1692	1	Gear-45T
2	140-8349	1	RH Side Cover Kit	82	120-7974	1	Gear-11T
7	117-5359	1	Screw-HHF	90	104-2169	1	Ring-Retaining
11	135-1140	1	Plug-Straight	91	114-1694	1	Gear-54T
13	104-2147	1	Sealant, Silicone - Non-Flammable	92	120-7975	1	Spacer
23	109-3321	1	Element-Oil Filter, HYD	93	135-1361	1	Bearing-Ball
30	139-7497	1	Seal-Lip	95	130-8477	1	Bearing-Ball
31	106-8677	1	Ring-Retaining, External	96	104-2144	1	Seal
32	114-1685	1	Rod-Bypass	97	116-3872	1	Hub-Offset
33	106-8679	1	Ring-Retaining, Internal	102	125-0021	1	Handle-Brake
34	112-9852	1	Arm-Bypass	103	131-0906	1	Ring-Retaining, EXT
35	106-8681	1	Ring-Retaining, External	106	139-7499	1	Filter Guard Kit
40	104-5304	1	Swashplate-Trunnion	130	126-3251	1	Tube-Charge
41	104-5313	1	Seal-Lip	157	126-1930	1	Gerotor Seal Kit
42	104-2116	1	Stud	158	116-6214	1	Cap-Axle, Long
43	112-9853	1	Puck-Friction	164	121-5745	1	Spacer
55	104-5308	1	Spacer	186	116-6213	1	Tube-Axle
57	104-5309	1	Ring-Retaining	193	140-8343	1	Plug
60	112-4154	1	Bearing-Thrust	194	140-8356	1	Breather Fitting ASM
64	139-4074	1	Cylinder Block ASM Kit	195	140-8357	1	RH Internal Expansion Tank ASM
65	94-6922	1	Bearing-Thrust	200	140-8351	1	Seal Kit
69	110-8561	1	Pump Block ASM	202	114-8464	1	Charge Relief Kit
70	104-5339	1	Washer-Flat	203	114-8465	1	Charge Kit
71	104-5340	1	Ring-Retaining	207	135-7343	1	Fan And Pulley Kit
72	131-0905	1	Gear-14T	209	114-8467	1	Puller-Hub, 4 Bolt
73	114-1691	1	Shaft-Motor	210	139-7502	1	Input Shaft Kit
74	104-5360	1	Washer	211	117-5362	1	Control Arm Kit
80	94-1933	1	Washer	215	140-8352	1	Inboard Kit

# RH Hydro Assembly No. 161-6353


**Items Not Shown**

14 Oil, 20W50

13 Sealant

200 Seal Kit


Parts Included in 200 Seal Kit:  
10,30,31,33,35,41,56,57,71,103,  
130,157.

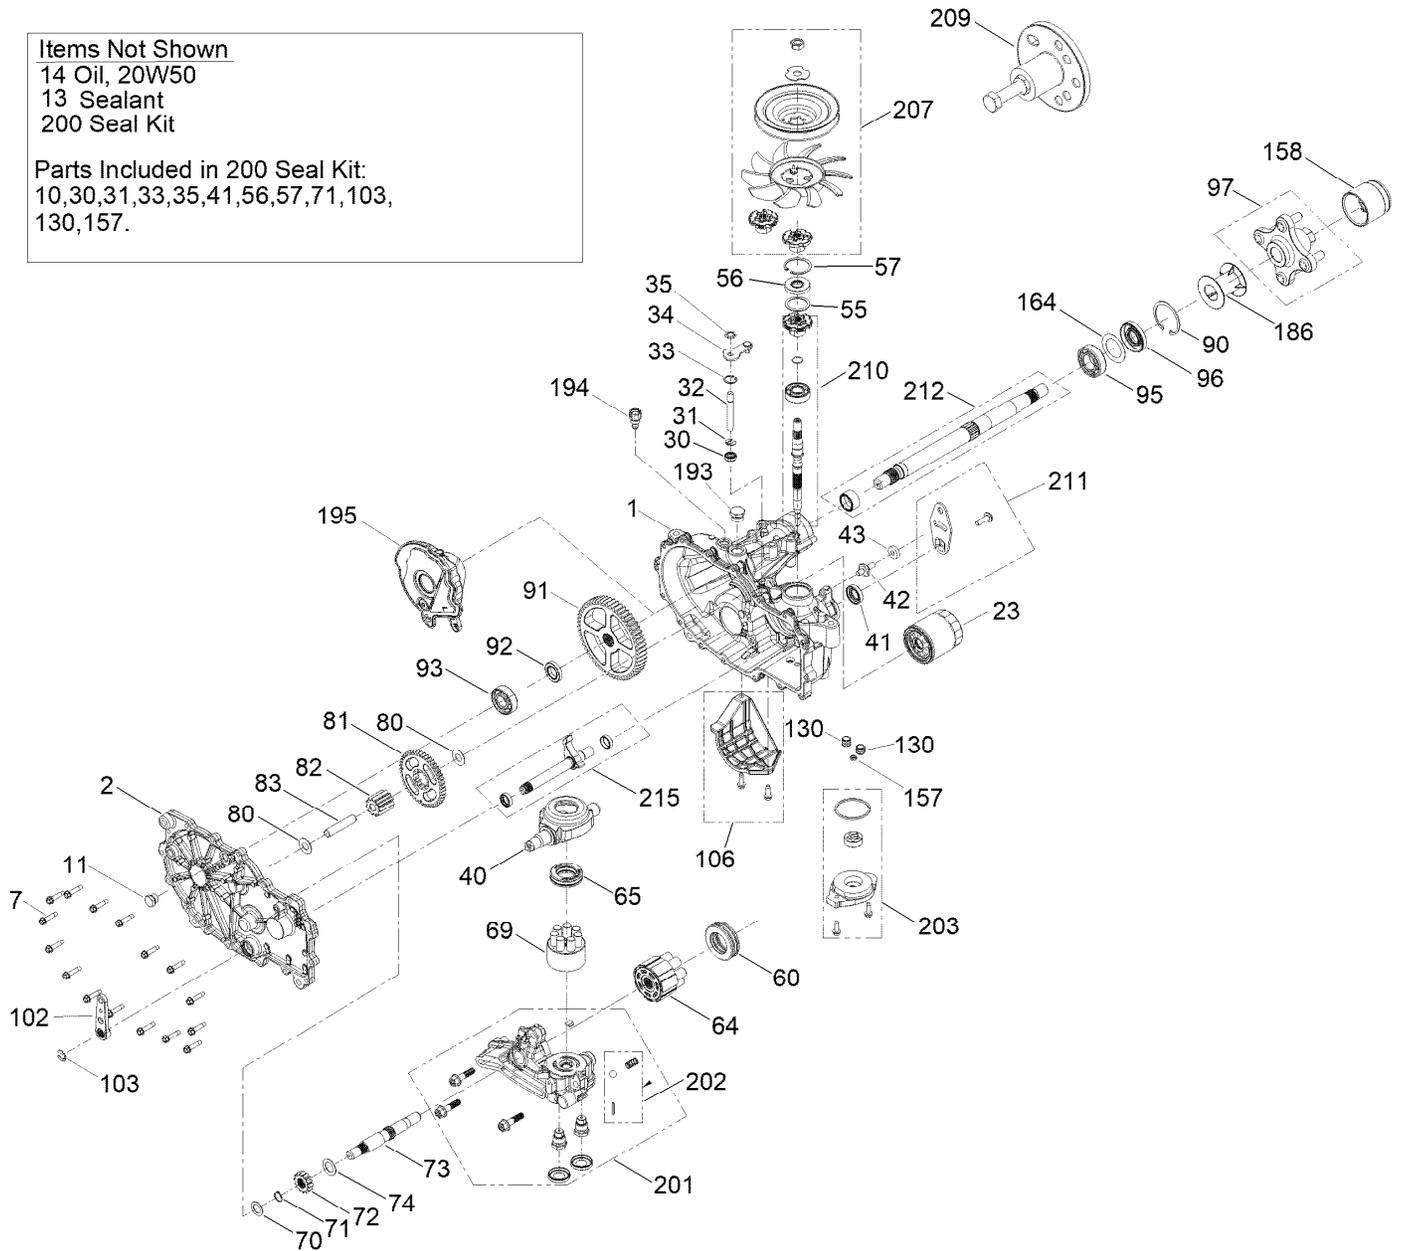

## RH Hydro Assembly No. 161-6353 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-8347	1	LH Main Housing Kit	81	114-1692	1	Gear-45T
2	140-8350	1	LH Side Cover Kit	82	120-7974	1	Gear-11T
7	117-5359	1	Screw-HHF	90	104-2169	1	Ring-Retaining
11	135-1140	1	Plug-Straight	91	114-1694	1	Gear-54T
13	104-2147	1	Sealant, Silicone - Non-Flammable	92	120-7975	1	Spacer
23	109-3321	1	Element-Oil Filter, HYD	93	135-1361	1	Bearing-Ball
30	139-7497	1	Seal-Lip	95	130-8477	1	Bearing-Ball
31	106-8677	1	Ring-Retaining, External	96	104-2144	1	Seal
32	114-1685	1	Rod-Bypass	97	116-3872	1	Hub-Offset
33	106-8679	1	Ring-Retaining, Internal	102	125-0021	1	Handle-Brake
34	107-2490	1	Arm-Bypass	103	131-0906	1	Ring-Retaining, EXT
35	106-8681	1	Ring-Retaining, External	106	139-7498	1	Filter Guard Kit
40	104-5304	1	Swashplate-Trunnion	130	126-3251	1	Tube-Charge
41	104-5313	1	Seal-Lip	157	126-1930	1	Gerotor Seal Kit
42	104-2116	1	Stud	158	116-6214	1	Cap-Axle, Long
43	112-9853	1	Puck-Friction	164	121-5745	1	Spacer
55	104-5308	1	Spacer	186	116-6213	1	Tube-Axle
57	104-5309	1	Ring-Retaining	193	140-8343	1	Plug
60	112-4154	1	Bearing-Thrust	194	140-8356	1	Breather Fitting ASM
64	139-4074	1	Cylinder Block ASM Kit	195	140-8358	1	LH Internal Expansion Tank ASM
65	94-6922	1	Bearing-Thrust	200	140-8351	1	Seal Kit
69	110-8561	1	Pump Block ASM	202	114-8464	1	Charge Relief Kit
70	104-5339	1	Washer-Flat	203	114-8465	1	Charge Kit
71	104-5340	1	Ring-Retaining	207	135-7343	1	Fan And Pulley Kit
72	131-0905	1	Gear-14T	209	114-8467	1	Puller-Hub, 4 Bolt
73	114-1691	1	Shaft-Motor	210	139-7502	1	Input Shaft Kit
74	104-5360	1	Washer	211	117-5362	1	Control Arm Kit
80	94-1933	1	Washer	215	140-8353	1	Inboard Kit


# Styling Pod Assembly

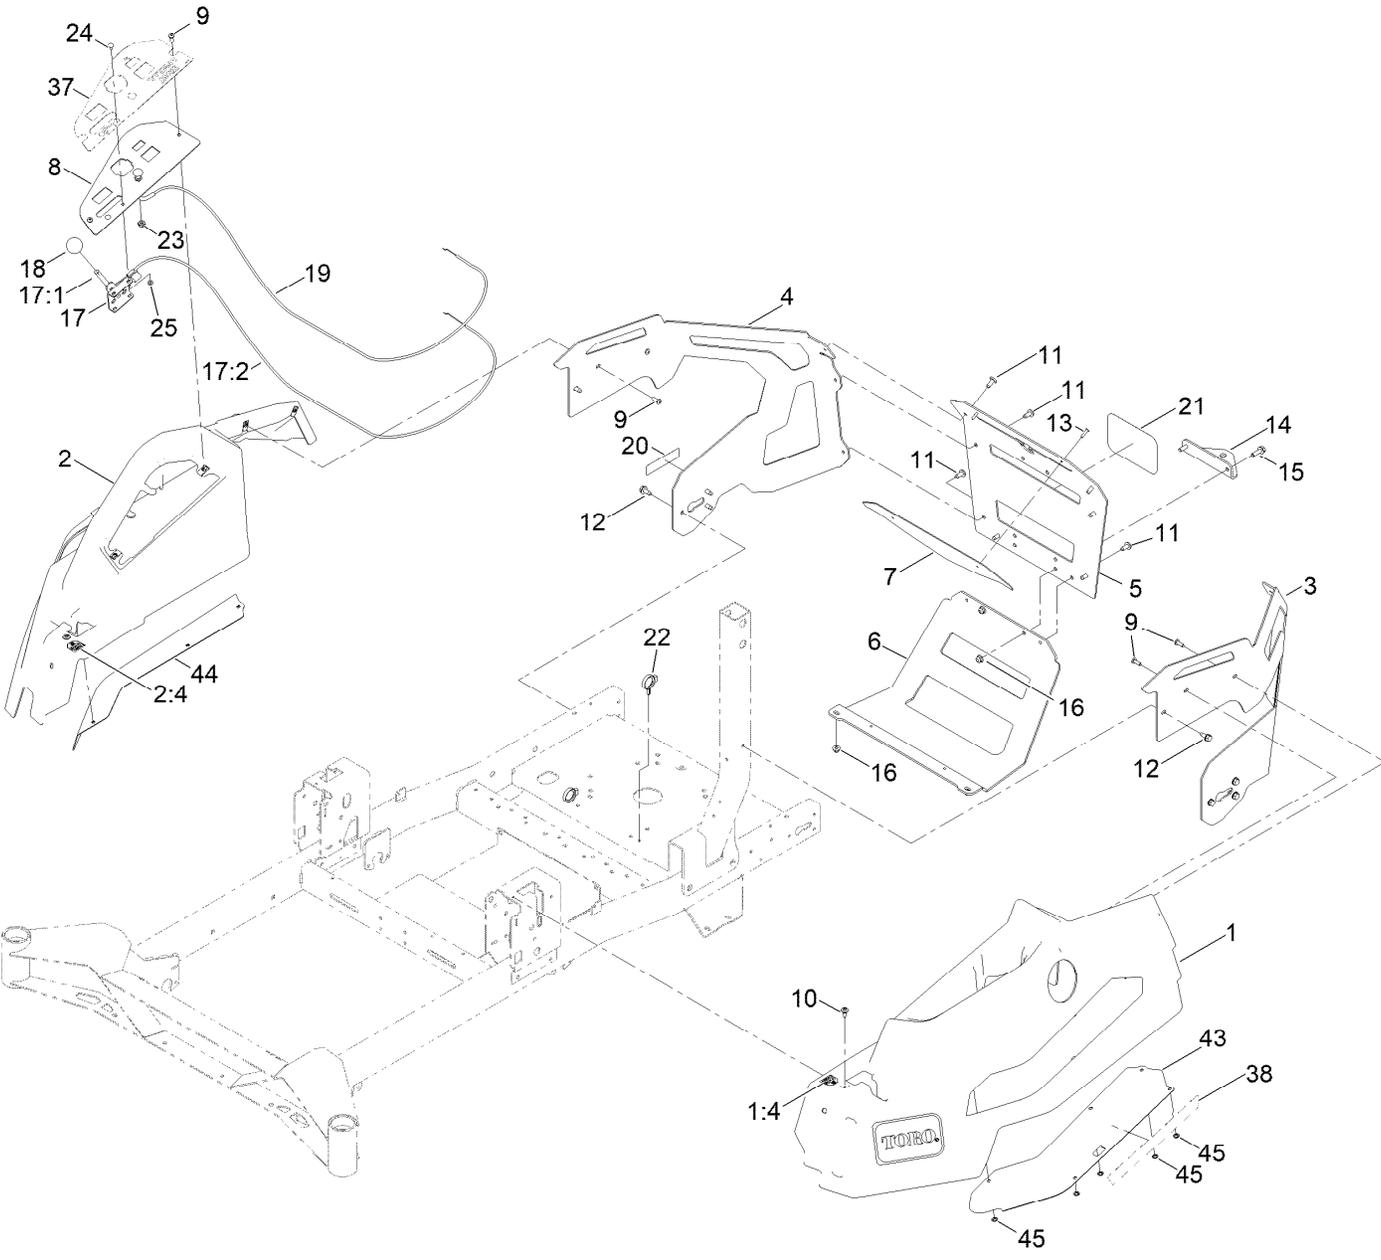

## Styling Pod Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-6389	1	Titan Max LH Pod ASM	16	119-4041	4	Nut-HF
1:4	139-2395	1	Decal-Control Lever, LH	17	110-5727	1	Throttle Control ASM
2	161-6390	1	Titan Max RH Pod ASM	17:1	112-2334	1	Lever-Throttle
2:4	139-2394	1	Decal-Control Lever, RH	17:2	110-5728	1	Cable-Throttle
3	161-6315-01	1	Guard-Engine, LH	18	1-603175	1	Knob-Ball
4	161-6316-01	1	Guard-Engine, RH	19	144-2647	1	Cable-Choke Control
5	147-2998-03	1	Guard-Engine	20	142-5864	1	Decal-Spark Arrester
6	147-3000-03	1	Guard-Muffler	21	99-4693	1	Decal
7	147-2999-01	1	Plate-Backer	22	104-2490	2	Clamp-Hose
8	161-6203-03	1	Panel-Control	23	3220-3	1	Nut-HJ
9	138-0689	6	Screw-PH	24	135-1929	2	Bolt-CARR
10	120-7950	2	Screw-Torx	25	3296-2	2	Nut-Lock, NI
11	138-9753	8	Screw	37	161-9793	1	Decal-Panel, Control
12	32144-70	8	Screw-HWHTF	38	161-9794	2	Decal-Titan Max
13	130-8451	2	Rivet-Trifold	43	161-6293-01	1	Plate-Pod, LH
14	117-1232-03	1	Bracket-Hitch	44	161-6294-01	1	Plate-Pod, RH
15	139-2596	2	Screw-HHF	45	32112-6	10	Nut-Push


# Fuel Assembly

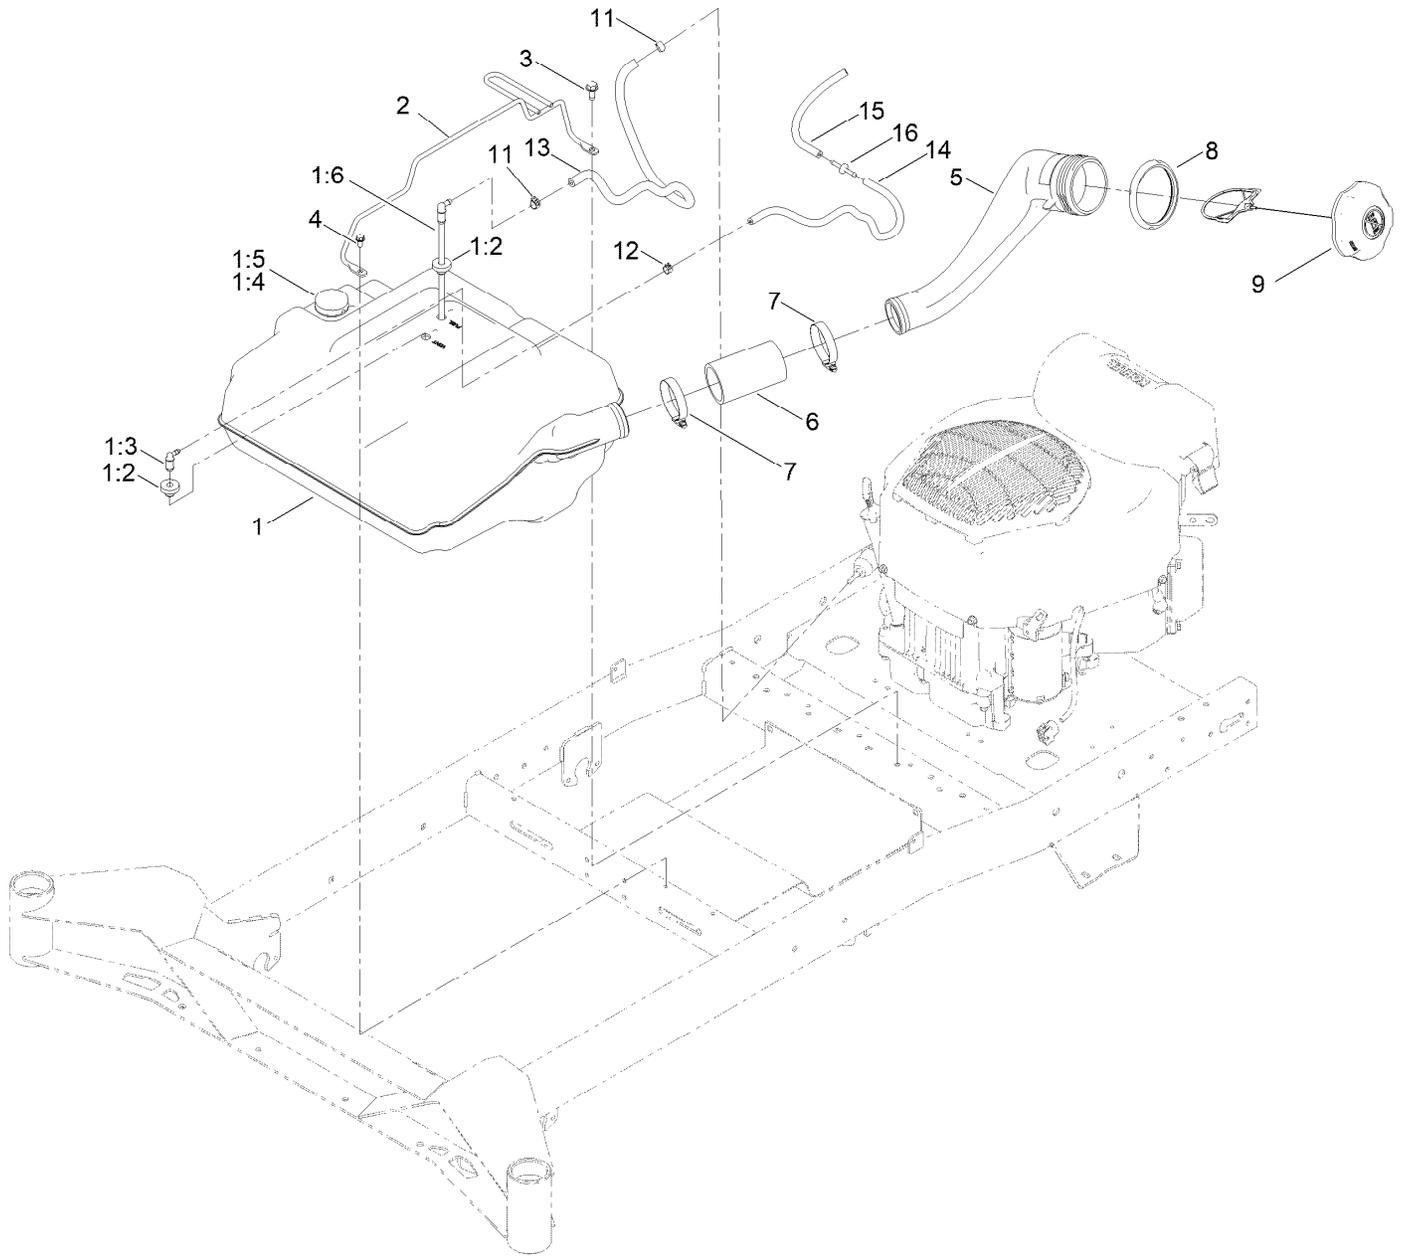

## Fuel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-6234	1	Tank ASM-Fuel	6	145-4698	1	Hose-Filler, Fuel
1:2	46-6560	2	Bushing	7	2412-130	2	Clamp-Hose
1:3	161-6609	1	Fitting-Elbow 90	8	147-7712	1	Ring-Retaining
1:4	133-9269	1	Grommet-Fuel	9	163-5914	1	Cap Fuel, Ratcheting
1:5	161-6415	1	Remote Gauge ASM	11	2412-98	2	Clamp-Hose
1:6	161-6317	1	Fitting - Pickup, Fuel	12	2412-80	1	Clamp-Hose
2	161-6494	1	Hold Down ASM	13	110-1872	1	Hose-Fuel
3	32144-70	1	Screw-HWHTF	14	143-2545	1	Hose-Fuel
4	32144-4	1	Screw-HWH	15	121-3003	1	Hose-Fuel
5	161-6235	1	Neck-Filler, Fuel	16	144-1983	1	Adapter Orifice


# Seat Pan Assembly

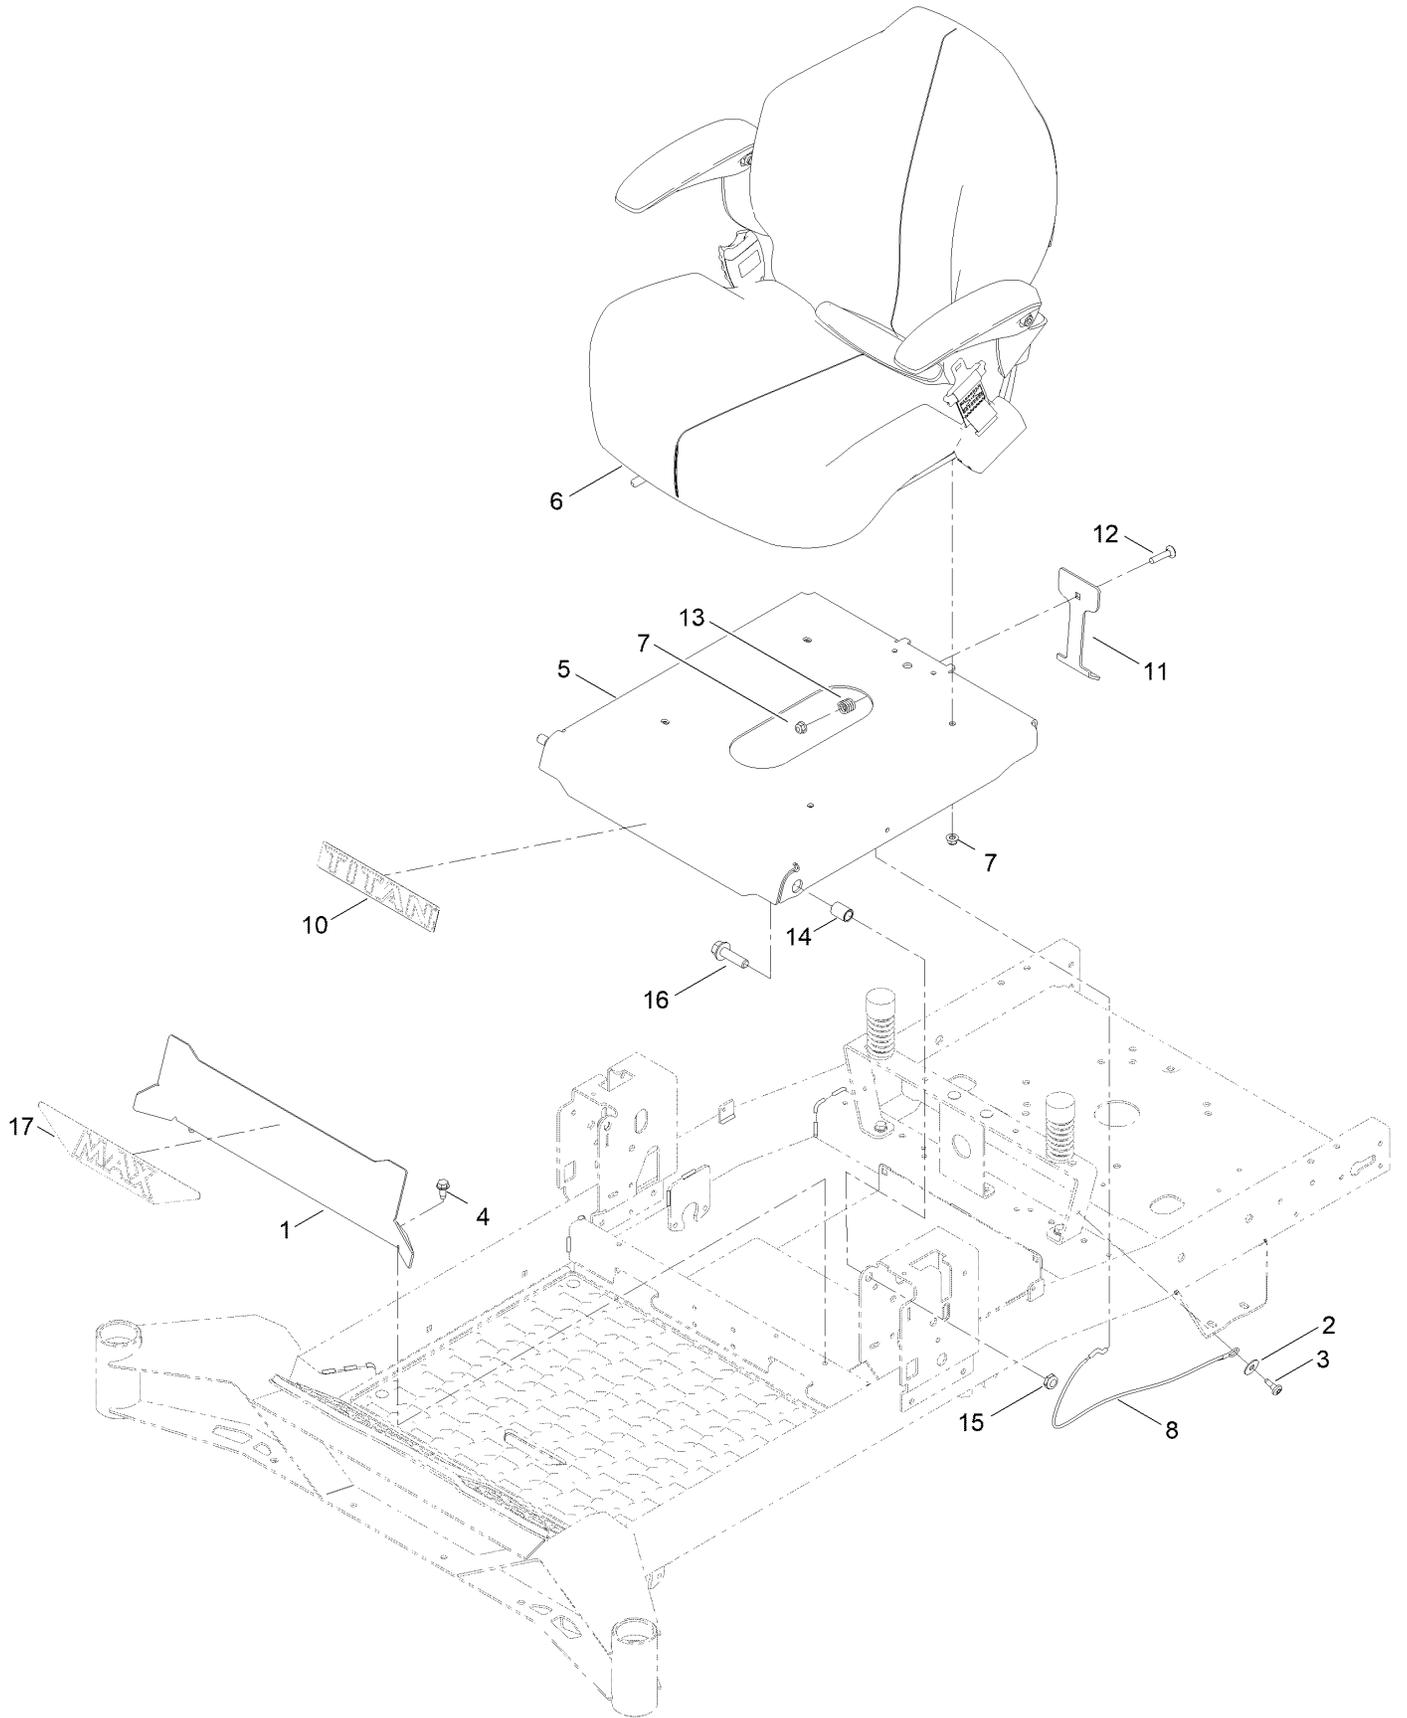

## Seat Pan Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-5170-05	1	Plate-Kick	10	161-6624	1	Decal-Titan
2	147-5287	1	Washer-Flat	11	161-9731	1	Bracket-Latch, Seat (Mty)
3	135-2015	1	Screw-Shoulder	12	3230-4	1	Screw-CARR
4	32144-70	2	Screw-HWHTF	13	107-3017	1	Spring-Compression
5	161-9730-05	1	Pan-Seat	14	161-9735	2	Bushing-Pivot, Seat
6	163-6014	1	Seat ASM	15	3296-45	2	Nut-Hex
7	104-8300	5	Nut-HF, NI	16	130-6481	2	Screw-HHF
8	139-2398	1	Cable-Lanyard	17	161-6284	1	Decal- Tc Havoc

# Seat Assembly No. 163-6014

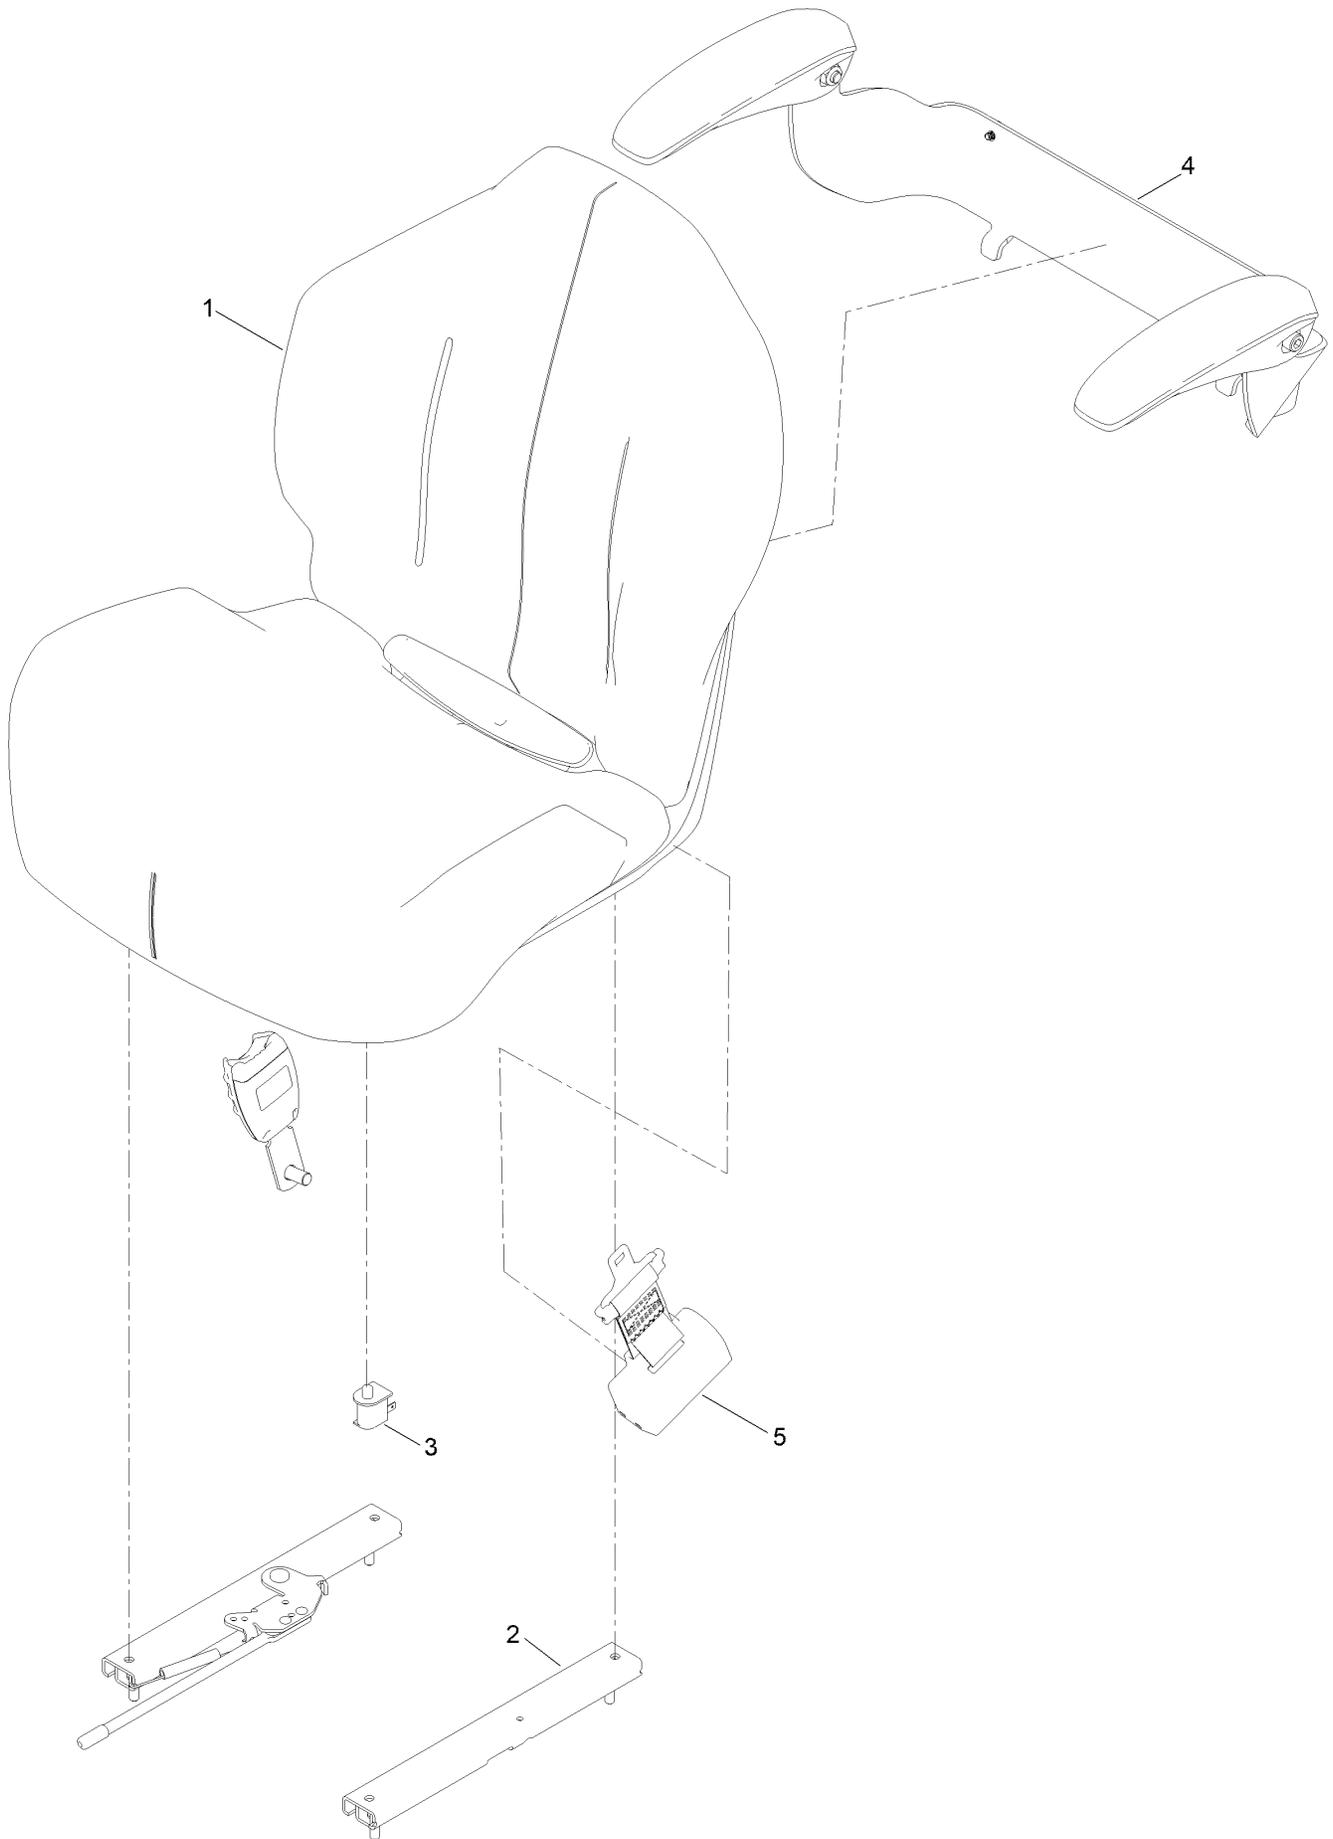


## Seat Assembly No. 163-6014 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-6013	1	Seat ASM	4	161-4567	1	Kit-Arm Rest
2	161-4566	1	Kit-Adjuster	5	109-9805	1	Seat Belt Kit
3	82-2190	1	Switch-Bail	99	163-6015	1	Cover-Seat ●

● Not illustrated


# Motion Control Assembly

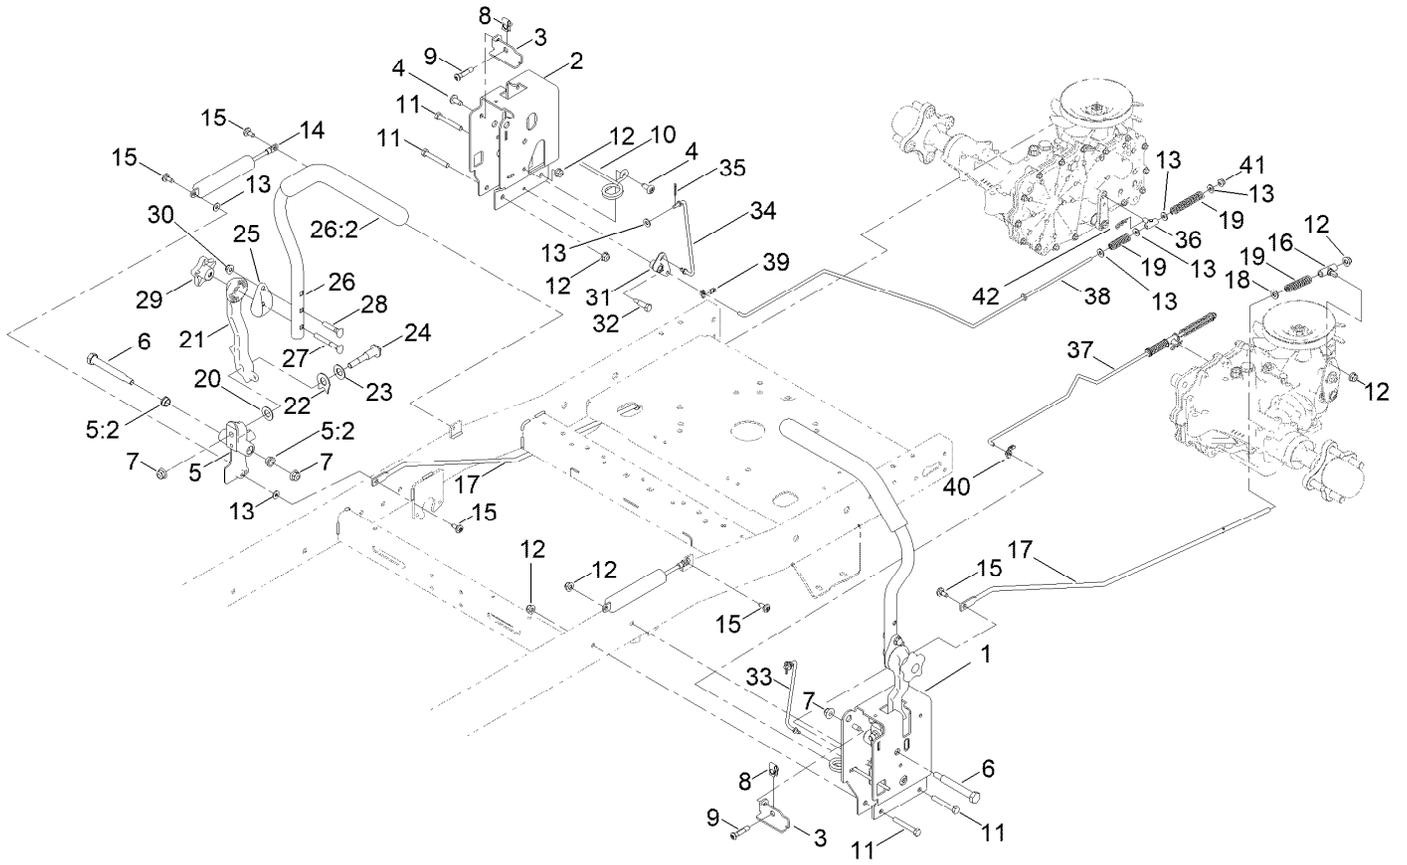

## Motion Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-5941-03	1	Control Box - LH	22	142-8478	2	Spacer, Anti-Rotation
2	163-5942-03	1	Control Box - RH	23	119-8925	2	Washer-Belleville
3	147-7580-03	2	Adjustment Plate-Control Box	24	117-1198	2	Bolt-Pivot
4	138-9753	4	Screw	25	147-5192-05	2	Disc-Adjustment Handle, 32 Teeth
5	145-4648	2	Pivot Arm ASM	26	145-6327	2	Handle-Control,
5:2	256-156	2	Bushing-Flange	26:2	147-3029	1	Grip
6	115-5099	2	Bolt-Pivot	27	145-6366	2	Screw-Handle
7	104-8301	4	Nut-HF, NI	28	137-3008	2	Screw-Handle
8	112-3306	2	Nut	29	117-5976	2	Knob-Handle
9	126-4299	2	Screw-HSBH	30	138-8401	2	Nut-HF
10	145-6253	2	Spring-Torsion	31	161-6420	2	Bellcrank
11	322-11	4	Screw-HH	32	145-6364	2	Bolt-Shoulder
12	104-8300	8	Nut-HF, NI	33	145-4607	1	Link-Brake, LH
13	119-8952	14	Washer-Spcl	34	145-6238	1	Link-Brake, RH
14	161-6514	2	Damper - Non Cavitating	35	120-9716	2	Pin-Cotter
15	120-7950	6	Screw-Torx	36	119-8857	2	Mount-Pivot
16	138-7218	2	Mount-Rod, Hydro	37	145-0408	1	Rod-Brake LH
17	161-9725	2	Rod-Hydro	38	145-0407	1	Rod-Brake, RH
18	120-9683	2	Washer-Plain	39	144-1815	1	Clip-Rod, RH (7R, 1/4In)
19	138-7252	6	Spring-Compression	40	144-1816	1	Clip-Rod, LH (7L, 1/4In)
20	120-2273	2	Washer-Flat	41	119-4040	2	Nut-HF, NI
21	147-5191-05	2	Arm-Control, 32 Teeth	42	137-3083	2	Pin-Hair


# Caster Wheel Assembly

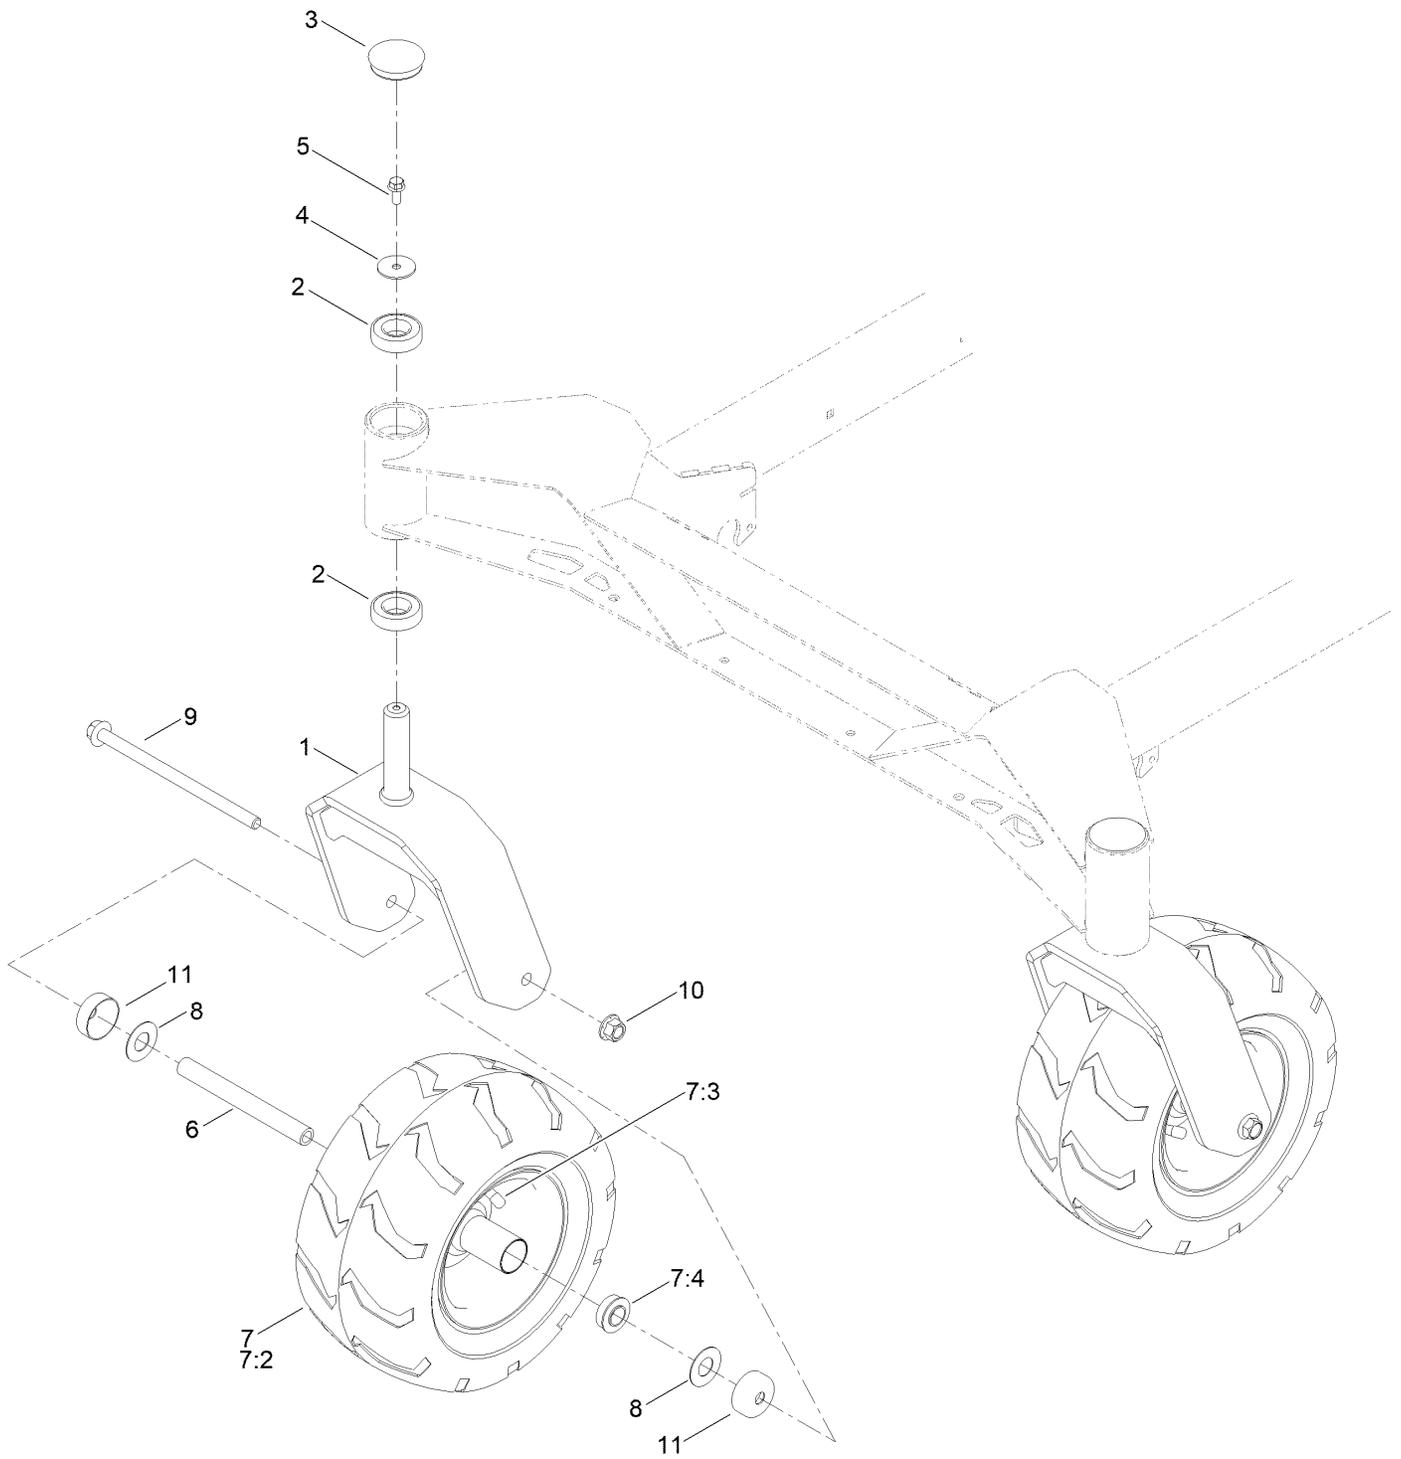

## Caster Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-6375-01	2	Castor Fork [red]	7:2	147-7648	1	Tire 13X6.5-6, Treaded
2	109-3678	4	Bearing-Ball	7:3	232-27	1	Stem-Valve
3	144-0375	2	Cap, Grease	7:4	147-7652	2	Bearing
4	115-1151	2	Washer-Flat	8	136-5590	4	Washer
5	100-1668	2	Screw-HHF	9	139-2559	2	Screw-HHF
6	133-4487	2	Spanner-Wheel	10	139-1689	2	Nut-HF
7	147-7647	2	Tire And Wheel ASM	11	138-7208	4	Guard-Seal


# Wheel and Tire Assembly

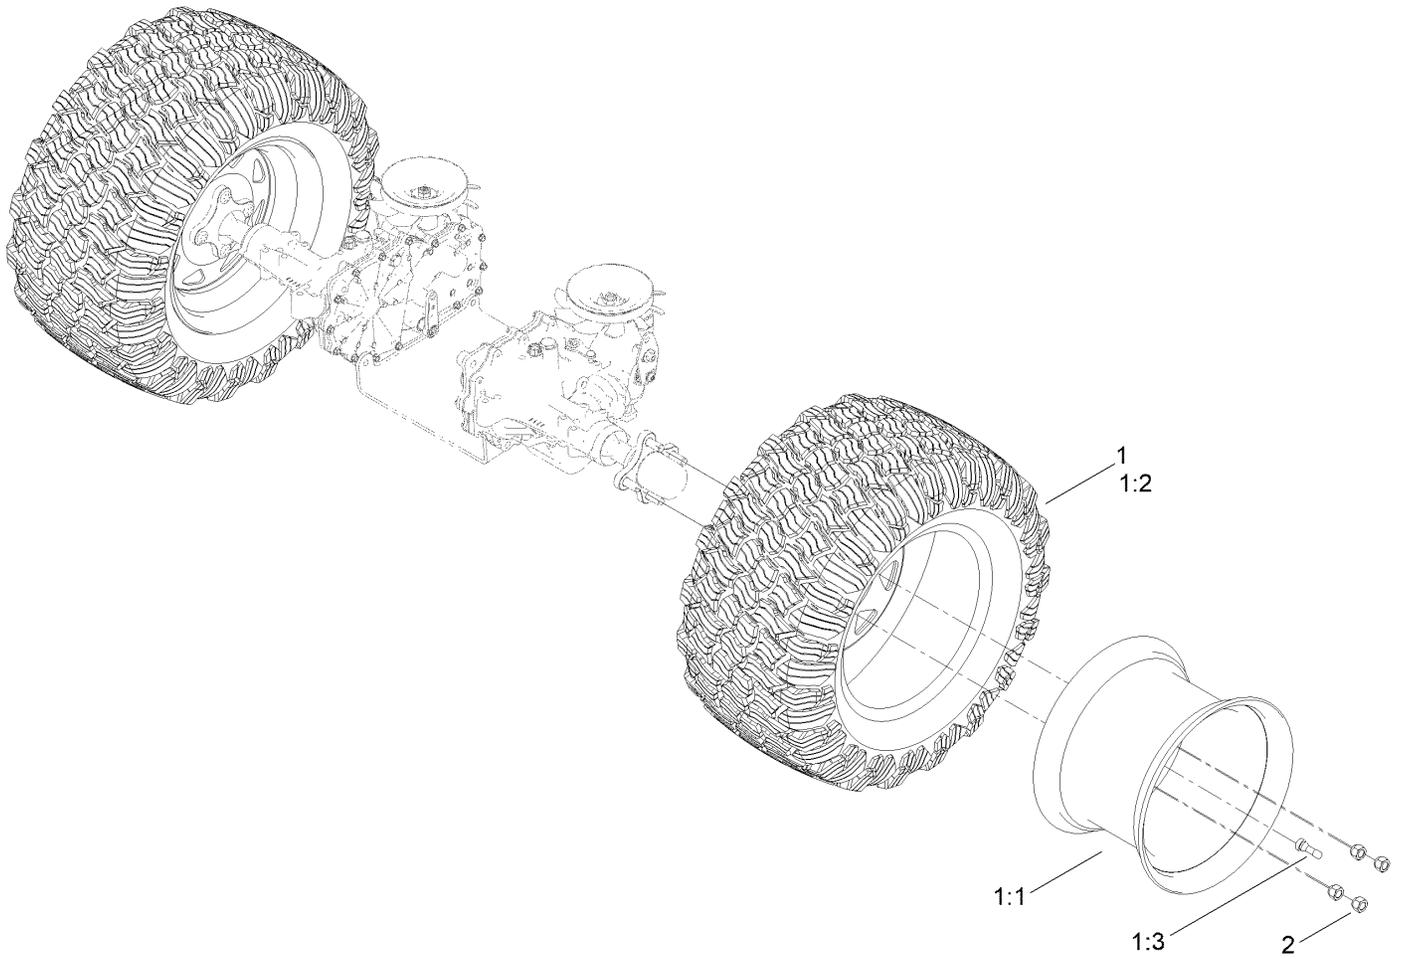

## Wheel and Tire Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-9726	2	Wheel And Tire ASM	1:3	232-27	1	Stem-Valve
1:1	140-7969	1	Wheel	2	139-2564	8	Nut-Lug
1:2	161-9727	1	Tire				


# Electrical Assembly

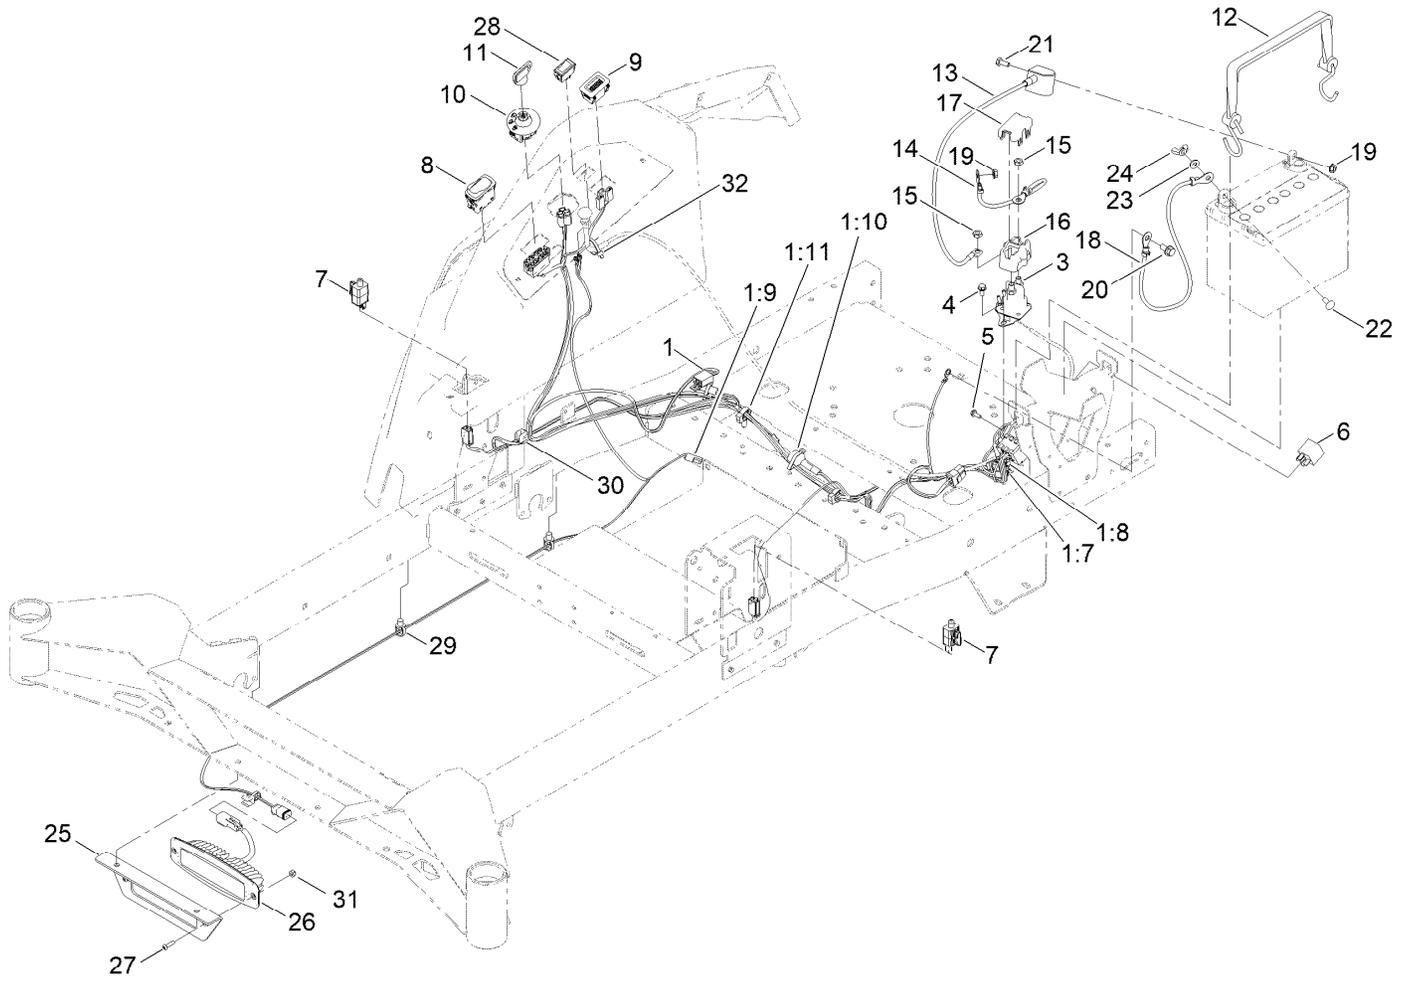

## Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-6382	1	Harness-Wire, Main	16	140-2080	1	Cover-Solenoid
1:7	109355	1	Fuse-Blade, 15 Amp	17	140-2081	1	Cap-Solenoid
1:8	109102	1	Fuse-Blade, 25 Amp	18	119-8899	1	Cable-Battery, Black
1:9	32160-029	1	Connector-Molded, 1F,1M	19	139-2575	2	Nut-HF
1:10	100-4918	1	Diode	20	139-2593	1	Screw-HHF
1:11	32180-047	3	Clip-Tubing, Harness	21	137-3041	1	Screw-HH
3	117-1197	1	Solenoid	22	137-3053	1	Screw-CARR
4	32144-4	2	Screw-HWH	23	119-8952	1	Washer-Spcl
5	139-1713	1	Screw-Thd Roll	24	32103-22	1	Nut-Wing
6	1-643275	1	Relay	25	163-2331-03	1	Bracket-Mounting, Light
7	110-6765	2	Switch	26	139-8089	1	Light - Flush Mount
8	139-6368	1	Switch-Rocker, On-None-On	27	104-2408	2	Screw-HSBH
9	139-6404	1	Hour Meter	28	92-8875	1	Switch-Rocker
10	137-4100	1	Switch-Ignition	29	161-9748	1	Harness-Wire, Light Harness
11	63-8360	1	Key-Ignition	30	32180-082	1	Clip-Edge W/Tie, Perpendicular
12	139-2381	1	Strap-Rubber	31	3296-2	2	Nut-Lock, NI
13	147-2941	1	Cable-Battery,Red	32	3290-378	1	Tie-Cable
14	121-0711	1	Cable-Battery, Positive				
15	139-2580	2	Nut-HJ				


# Decklift Assembly

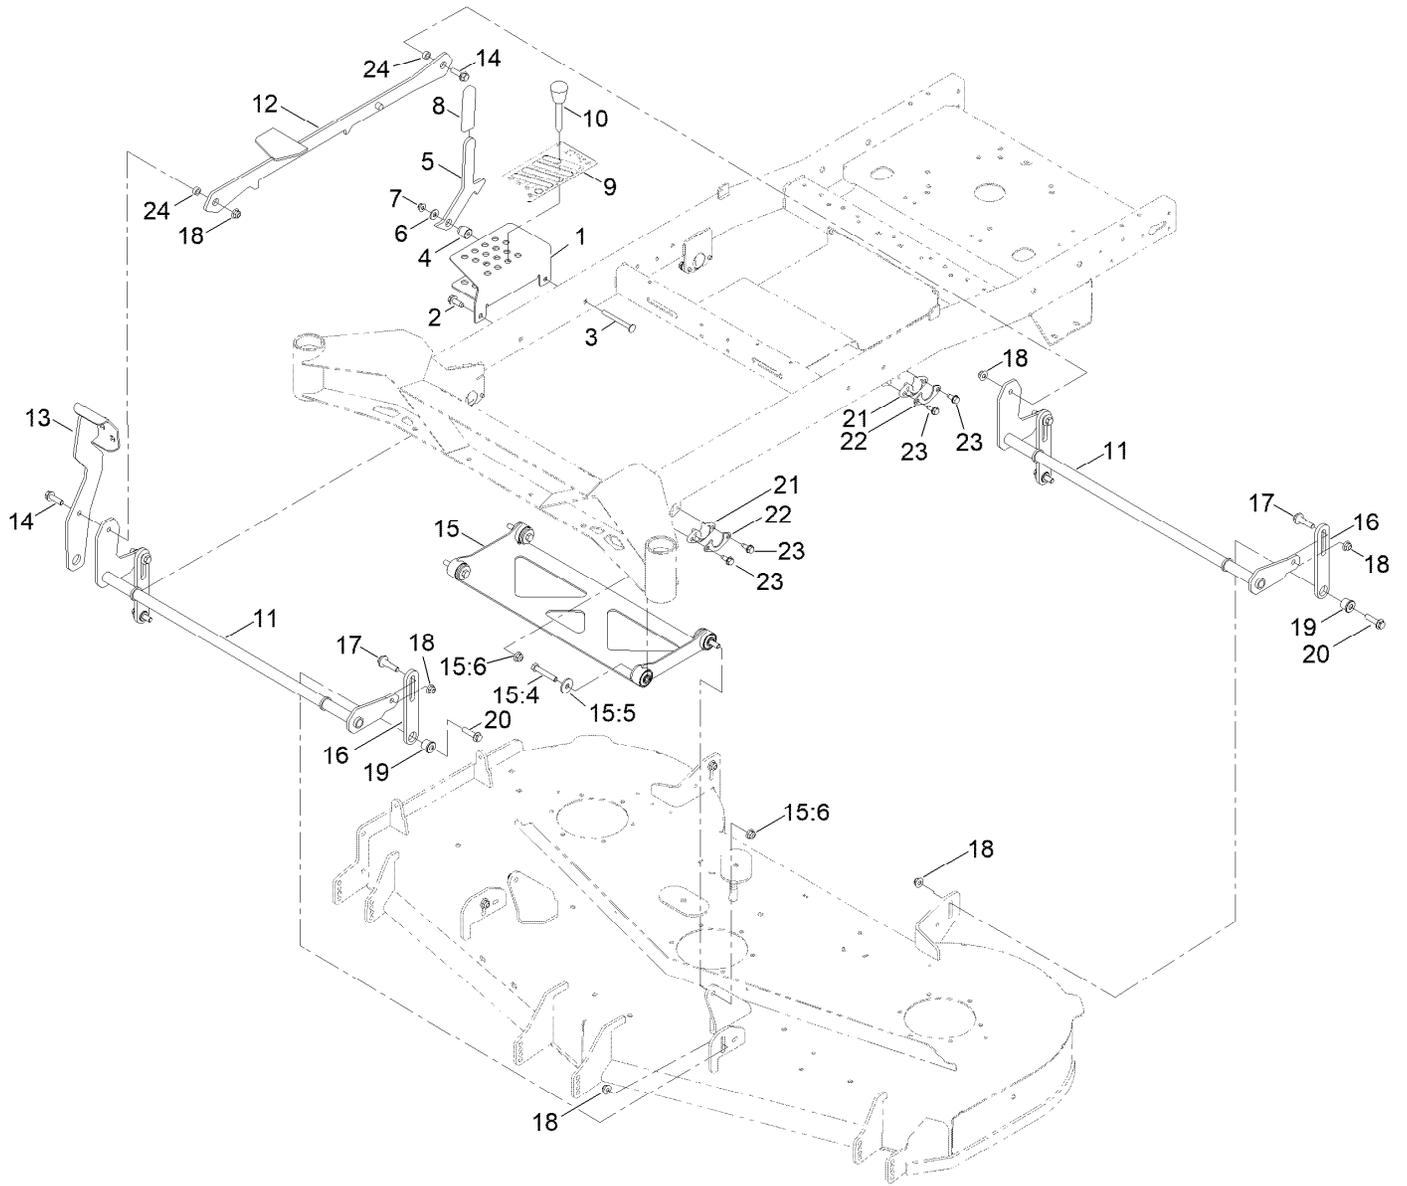

## Decklift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-6260-01	1	Bracket-HOC	15	161-6214	1	Deck Strut ASM
2	139-2428	1	Screw-HWH	15:4	323-11	4	Screw-HH
3	138-0741	1	Screw-CARR	15:5	2844	4	Washer
4	145-6282	1	Spacer-Stepped	15:6	104-8301	4	Nut-HF, NI
5	145-6279	1	Plate-Transport Lock	16	163-2370-01	4	Link-HOC
6	137-3082	1	Washer-Plain	17	130-0742	4	Bolt-Shoulder
7	119-4041	1	Nut-HF	18	119-4042	10	Nut-HF, NI
8	140-0413	1	Grip-Handle	19	161-9819	4	Bushing-Deck Lift
9	147-2867	1	Decal-HOC	20	3234-18	4	Screw-HHF
10	140-2146	1	HOC Pin ASM	21	139-5872	4	Bearing-Flange
11	161-4632-01	2	Pivot ASM-Decklift [red]	22	138-7204	4	Gusset-Deck Lift
12	145-6262-01	1	Link ASM-HOC [red]	23	32144-70	8	Screw-HWHTF
13	145-6278-01	1	Pedal ASM [red]	24	140-2093	2	Spacer
14	119-4061	2	Screw-HHF				

# Engine and Muffler Assembly

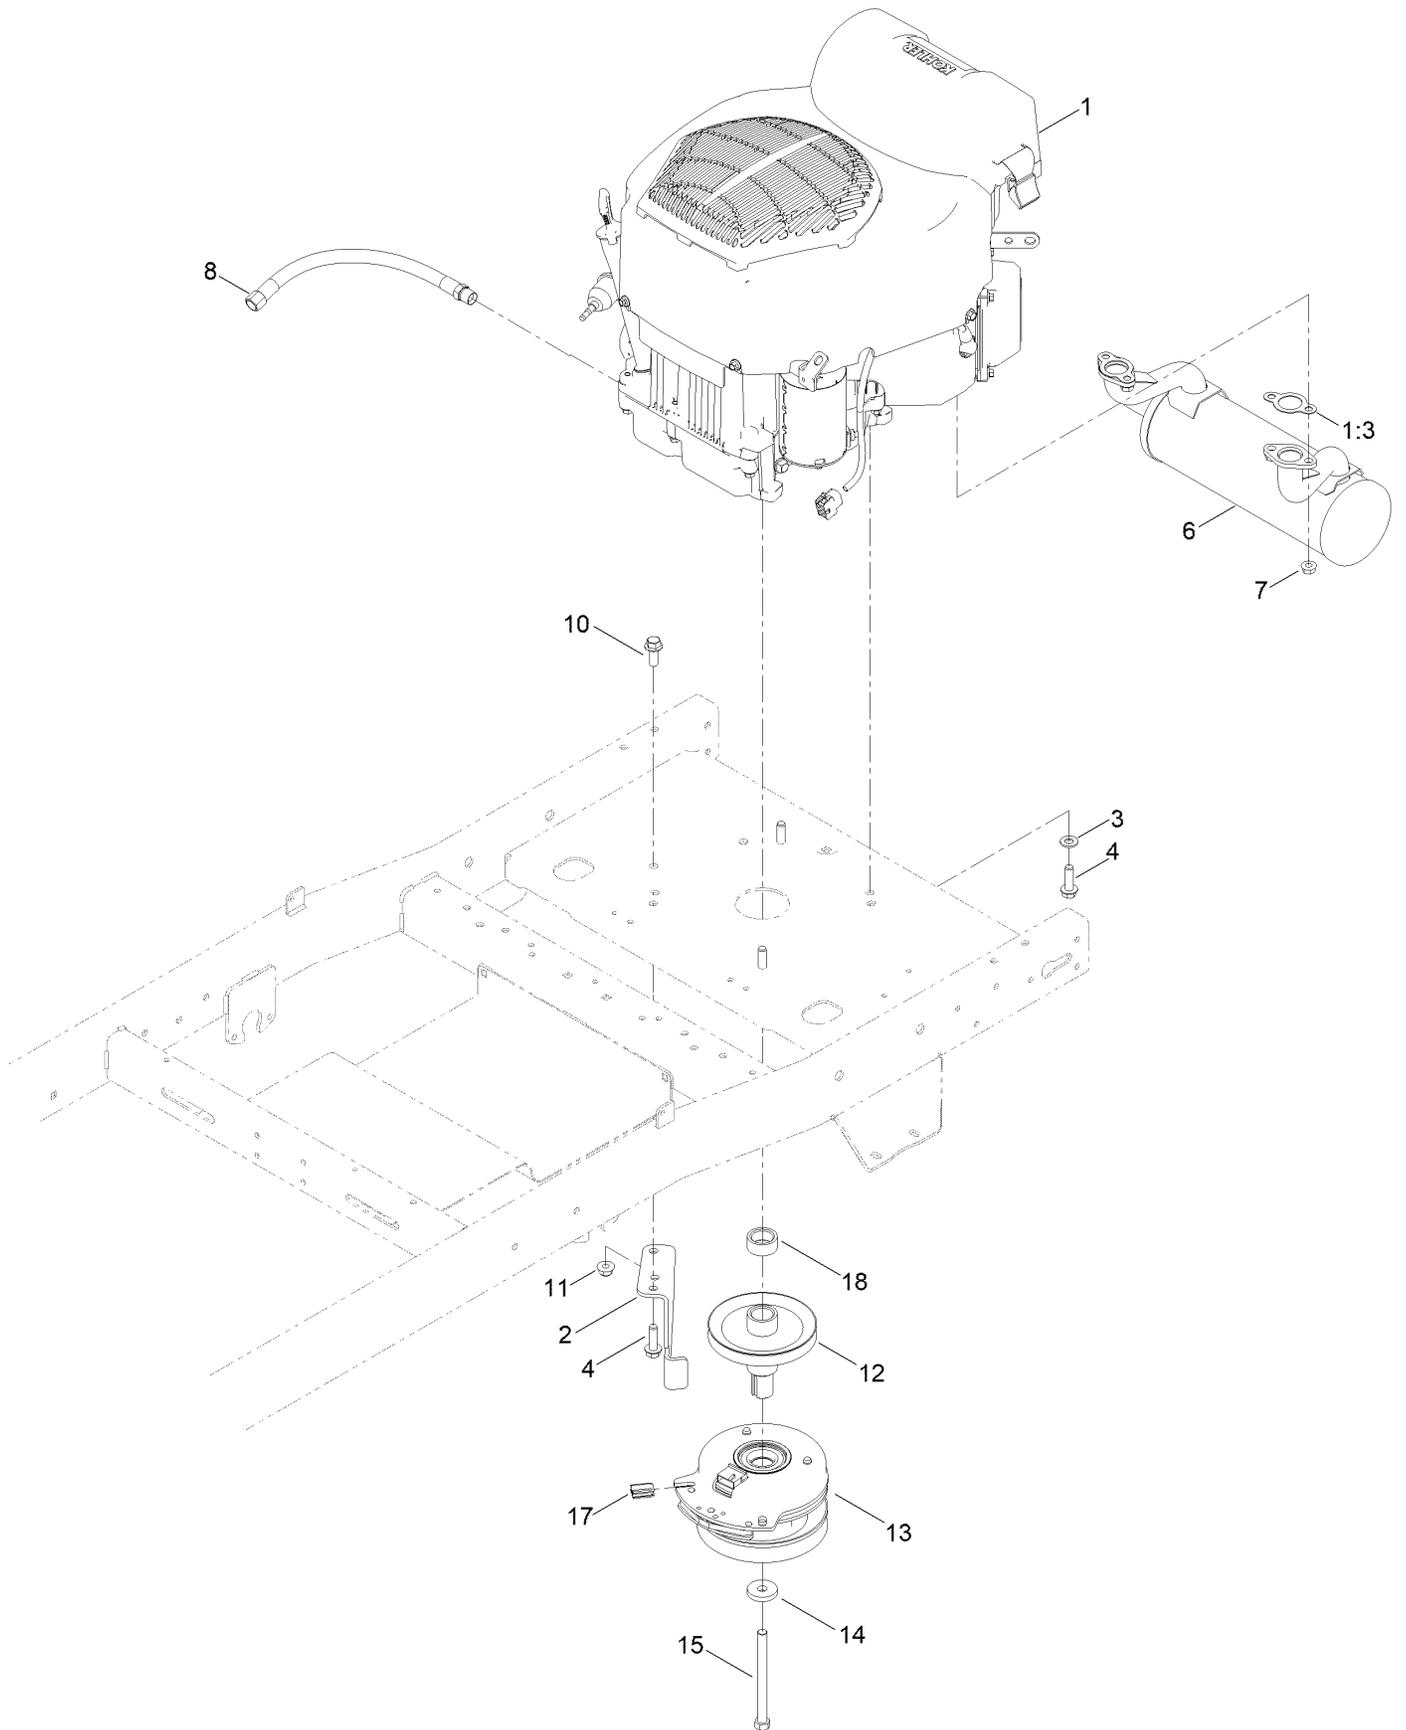


## Engine and Muffler Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Engine-Kohler, Kt726-3015 ■▲	8	117-1261	1	Hose-Drain, Oil
1:3	110-6697	1	Gasket-Exhaust	10	3234-42	1	Screw-HHF
1:4	281-1	1	Plug-Pipe, Sq HD ●	11	104-8301	1	Nut-HF, NI
2	137-7000	1	Stop-Clutch (Wide)	12	138-9831	1	Pulley-Engine
3	3256-24	3	Washer-Plain	13	127-3410	1	Clutch-PTO
4	32144-109	4	Screw-Thd	14	112843	1	Washer
6	126-4359	1	Muffler-Kohler Aes	15	3212-19	1	Screw-HH
7	33004-00	4	Nut-HF	17	120-2217	1	Isolator-Clutch
				18	146-0538	1	Spacer-Engine Pulley

● Not illustrated  
▲ Obtain parts from [www.kohlerplus.com](http://www.kohlerplus.com)

■ Not serviced separately


# 60 Inch Deck Assembly

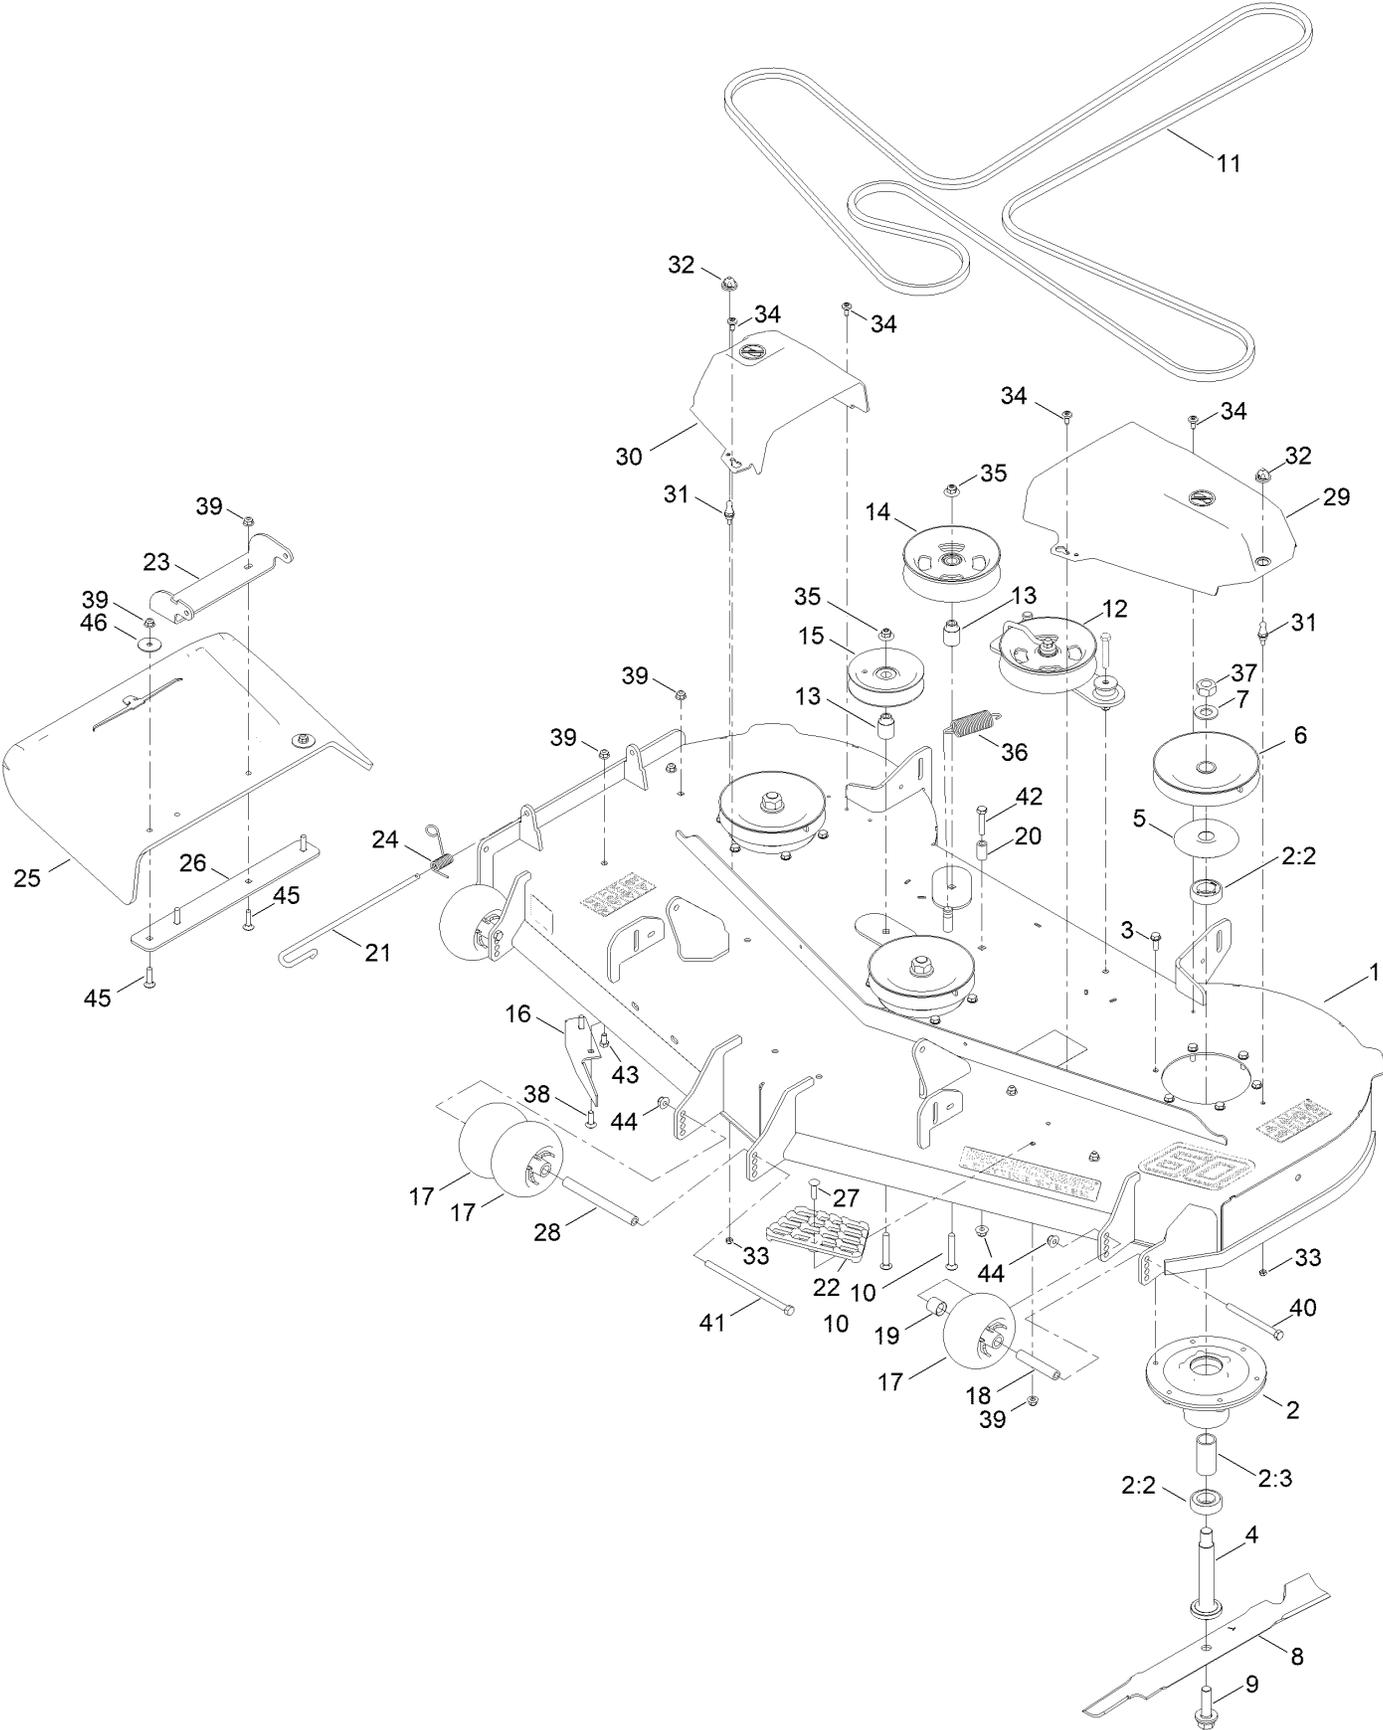

## 60 Inch Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-9768SP	1	ASM-Deck W/Decals	23	114-1648-03	1	Bracket-Deflector, Upper
2	139-2357	3	Spindle ASM	24	138-7232	1	Spring-Torsion
2:2	116-0720	2	Bearing-Ball	25	147-3015	1	Deflector - Molded
2:3	138-7220	1	Spacer-Bearing	26	115-5048-03	1	Plate-Deflector
3	32144-41	18	Screw-Taptite	27	139-1702	1	Bolt-Carriage
4	115-2642	3	Shaft-Spindle	28	98-5967	1	Spacer-Wheel
5	138-7221	3	Shield-Bearing	29	147-2854	1	Cover-Belt, LH
6	147-7674	3	Pulley	30	147-2853	1	Cover-Belt, RH
7	7-4150	3	Washer	31	147-2872	2	Stud-Ball
8	115-9649-03	3	Blade-Hi Flow	32	147-2871	2	Grommet-Ball
9	145-0412	3	Screw-Blade	33	115-7373	2	Nut-Lock
10	3231-31	2	Screw-CARR	34	120-7950	4	Screw-Torx
11	135-5776	1	Belt,V-B X 186.00"	35	109-6658	2	Nut-Flange, NI
12	161-6406	1	Idler Arm ASM	36	139-3616	1	Spring - Extension
13	161-6398	2	Bushing-Idler, Fixed	37	3219-7	3	Nut-Hex
14	132-9425	1	Pulley-Idler, Flat	38	3230-22	2	Screw-CARR
15	132-4718	1	Pulley-Idler, Flat	39	104-8300	10	Nut-HF, NI
16	119-3388-03	1	Baffle-Cutoff	40	323-23	2	Screw-HH
17	1-603299	4	Roller-Scalp, Anti	41	108-5388	1	Screw-HH
18	138-7229	2	Tube-Spanner	42	323-9	1	Screw-HH
19	104-0892	2	Spacer-Axle, Rear	43	322-2	3	Screw-HH
20	138-7230	1	Spacer-Fender	44	104-8301	4	Nut-HF, NI
21	138-7231	1	Pin-Chute	45	3230-3	4	Screw-CARR
22	126-4781-03	1	Step-Deck	46	3256-68	2	Washer-Flat

# Decal Assembly No. 161-9768SP

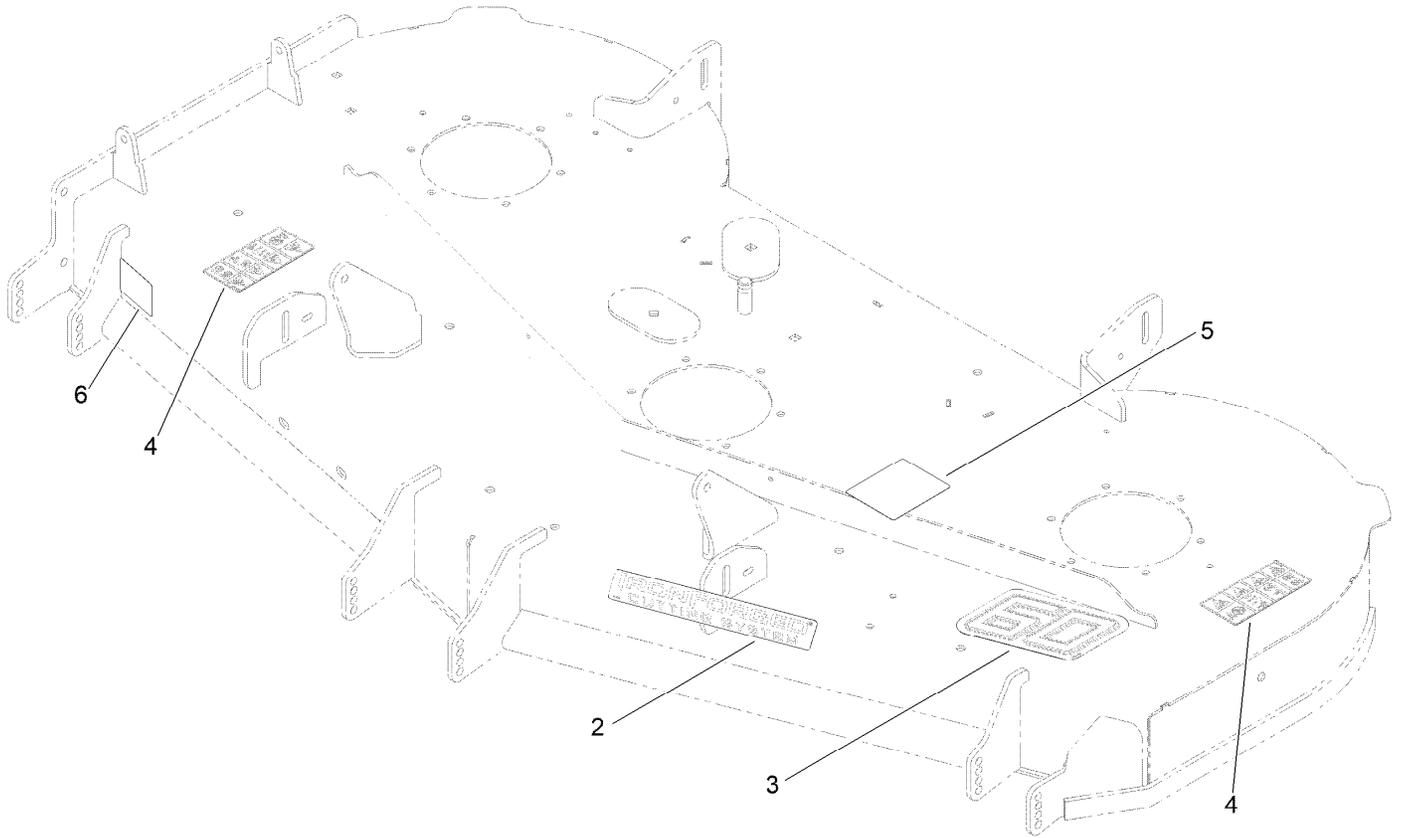


# Decal Assembly No. 161-9768SP (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	147-7567	1	Decal - Iron Forged
3	147-7570	1	Decal - Deck 60
4	161-6620	2	Decal-Danger, Deck

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	117-1194	1	Decal-Routing, Belt
6	130-0765	1	Decal-Scalp, Anti

# Idler Arm Assembly No. 161-6406

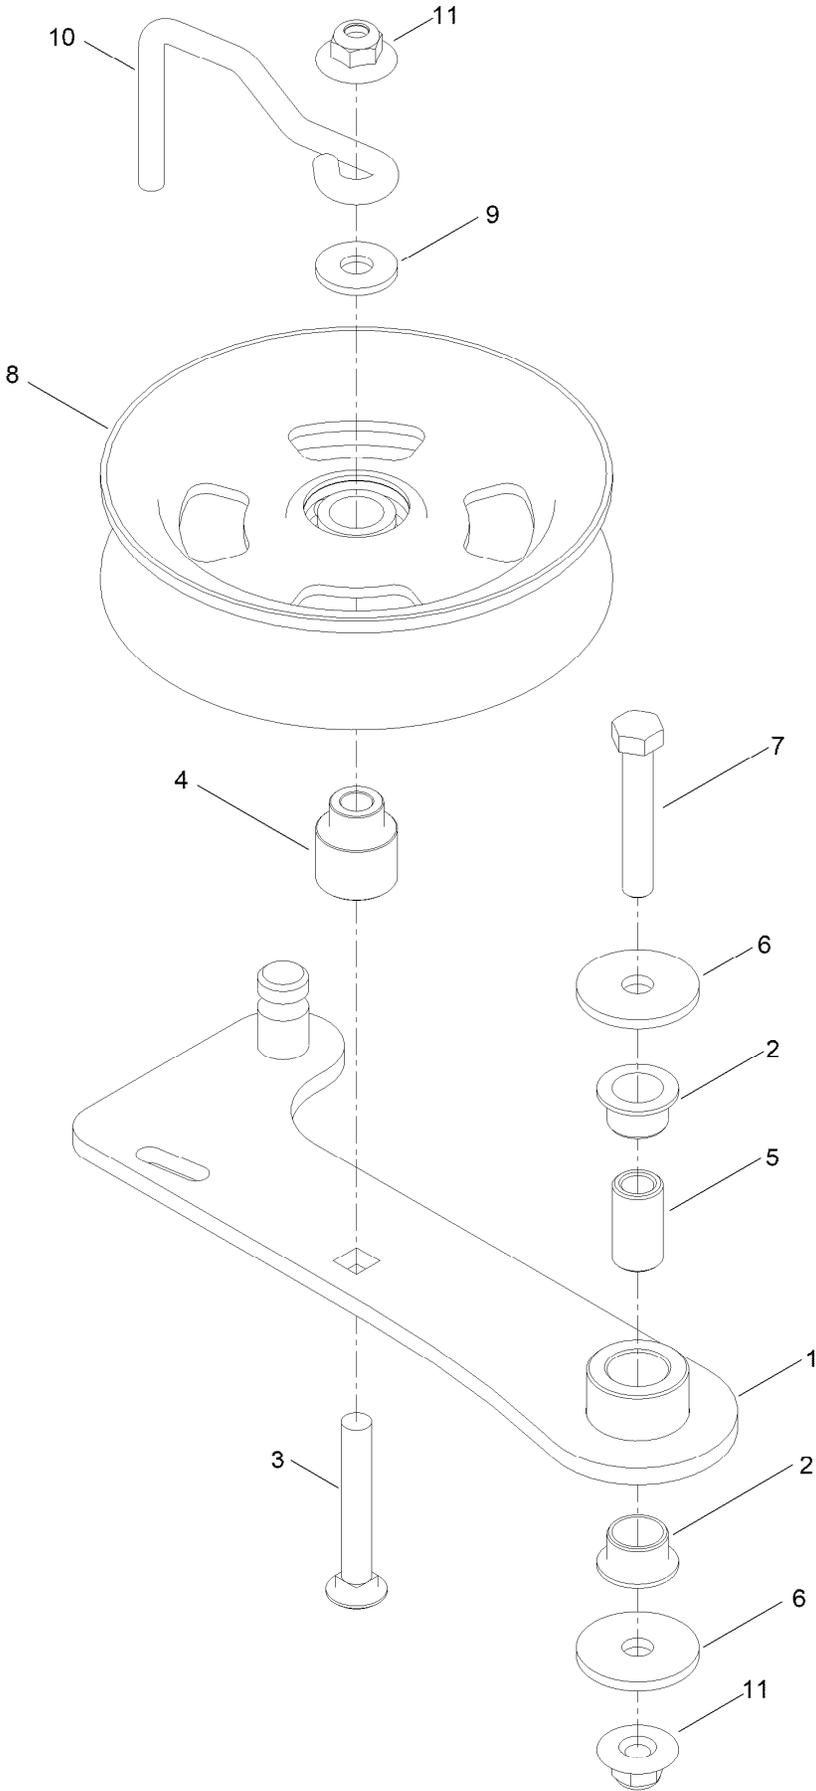

## Idler Arm Assembly No. 161-6406 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-6407	1	Idler Arm ASM	7	323-11	1	Screw-HH
2	108-2973	2	Bushing-Flange	8	132-9425	1	Pulley-Idler, Flat
3	3231-31	1	Screw-CARR	9	80-6990	1	Washer-Hardened
4	126-7684	1	Bushing-Idler	10	161-6411	1	Guide-Belt, Idler
5	161-6410	1	Bushing-Pivot, Idler	11	109-6658	2	Nut-Flange, NI
6	1-213069	2	Washer				

# Attachments and Accessories

## For 76606 — Titan Max 60in Zero Turn Riding Mower

<b>Product Name</b>	<b>Model/Part</b>
Hypr-Oil 500 (quart) .....	114-4713
Hypr-Oil 500 (gallon).....	114-4714
Hypr-Oil 500-5 (5 gallon).....	114-4715
Blade-Hi Flow, 20.5in .....	115-9649-03P
Toro Hydro Kit.....	121-3783
Jack Kit.....	127-6666
Fuel Stabilizer .05 oz .....	130-2393
4-Cycle Fuel, Snow And Lawn 32oz Can .....	131-3823
Toro Premium Fuel Treatment 12oz Bottle.....	131-6572
60in Recycler Kit.....	136-7490
Oil-30/10W-30 Synthetic (Quart).....	138-6053
Suspension Seat .....	139-3626
HD Bagger Cover Kit .....	140-5036
Leaf Bagging Enhancement Kit .....	140-5122
Hardtop Sun Canopy .....	144-3719
Flat Free Caster Wheel Kit.....	145-0489
Kit-Striping, 54/60in .....	147-8781
Mount, Jack Titan .....	147-8824
10W30 4-Cycle Engine Oil (32oz Bottle).....	38280
Toro 4-Cycle SAE 30 Oil (32oz Bottle) .....	38903
Toro Deluxe Rider Cover.....	490-7319
Powered Bagger, Titan Models ROHS.....	79348

**Notes:**

**Notes:**

**Notes:**



**Count on it.**