

LAWN-BOY®

SilverPro Series® Lawnmower

Model No. 10324C - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	 3	Engine Assembly	 9
Gear Case Assembly No. 104-7672	 4	Short Block Assembly No. 95-7636	 11
Engine And Blade Assembly	 5	Carburetor Assembly No. 98-7042	 12
Gear Case and Wheel Assembly	 6	Recoil Assembly No. 95-1781	 13
Handle Assembly	 7		
Rear Grass Bag Assembly	 8		

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
CARR. carriage	NI. nylon insert
DEG. degrees	PPH. phillips pan head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power take off
HF. hex flange	RH. right hand
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HS. hex	STD. standard
HSBH. hex socket button head	TAP. self tapping
HSFH. hex socket flat head	TTH. torx truss head
HSH. hex socket head	WH. wing head
HWH. hex washer head	
HWHTF. hex washer head thread forming	
HYD. hydraulic	

Footnotes

❶ Not illustrated


❷ Not serviced separately

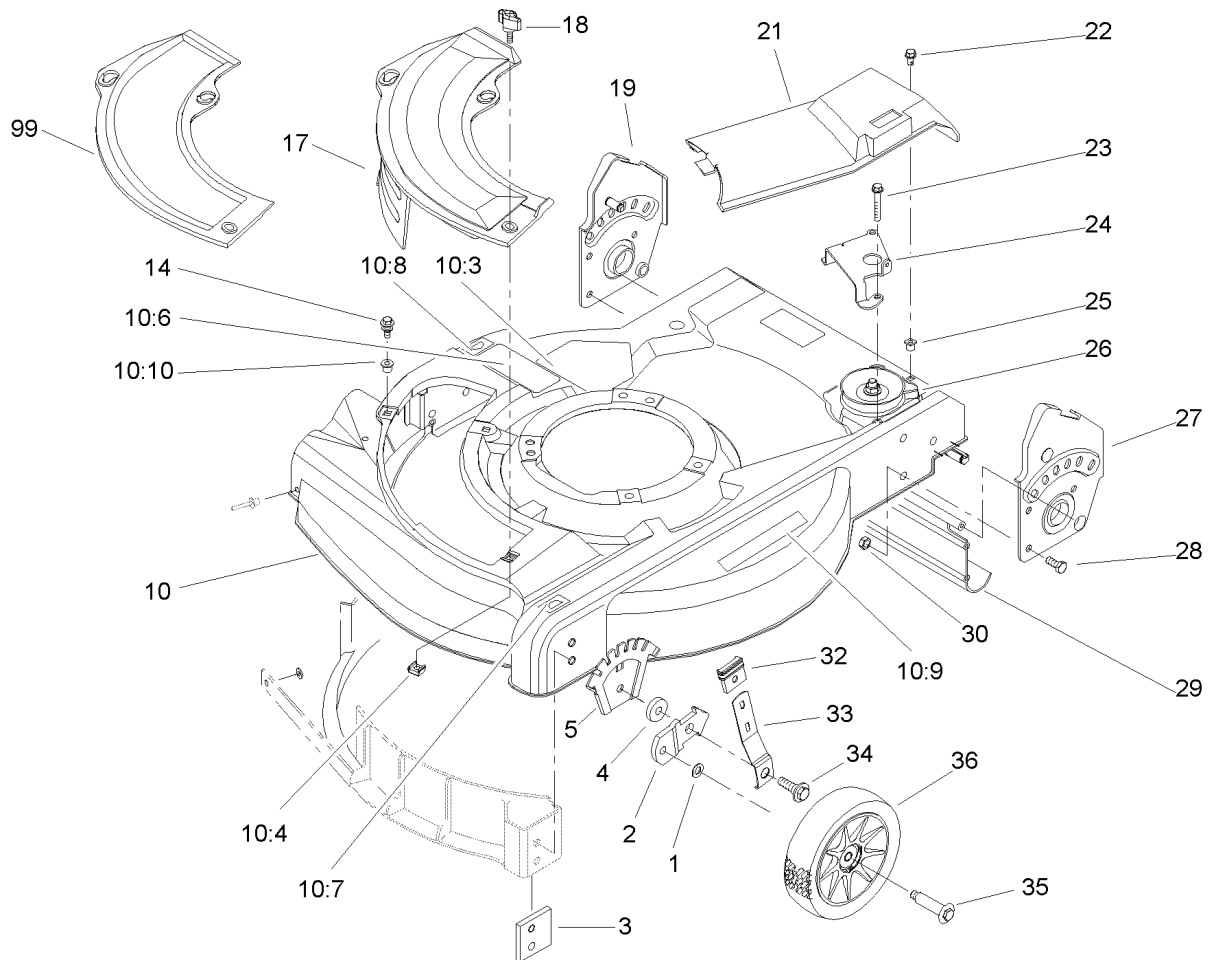

Housing Assembly

Ref	Part No.	Qty.	Description
1	40-1940	2	Washer
2	95-7403-03	2	Bracket-Height Adjustment, Wheel
3	92-7731	2	Plate-Baffle
4	92-4890	2	Washer-Wheel
5	92-4881-03	2	Plate-Height, Adjustment
10	104-7639	1	Housing
10:3	56-6270	1	Decal-Danger
10:4	613765	1	Nut-Cage
10:6	104-7629	1	Decal-Warning
10:7	104-7616	1	Decal-Hoc, LH
10:8	104-7617	1	Decal-Hoc, RH
10:9	104-7627	1	Decal-Warning
10:10	94-1610	2	Nut-Clip
14	614677	2	Screw-Sems
17	92-8630	1	Plate-Mulch
18	98-8332	1	Knob
19	105-8602	1	RH Bracket ASM
21	95-7413	1	Cover-Drive
22	92-9665	1	Screw-Thread Cut
23	65-5221	2	Screw-HWHTF
24	95-1732-03	1	Guide-Transmission
25	605120	1	Nut-Clip
26	104-7672	1	Gear Case ASM
27	105-8604	1	LH Bracket ASM


Ref	Part No.	Qty.	Description
28	322-3	6	Screw-HH
29	92-8647	1	Shield-Trailing
30	3296-29	6	Nut-Lock, NI
32	92-1008	2	Knob-Lever, Height Adjustment
33	614687	2	Arm-Front Spring
34	614672	2	Bolt-Shoulder
35	92-1099	2	Bolt-Shoulder
36	684776	2	Wheel And Tire ASM
99	95-7052	1	Plate-Opening, Chute

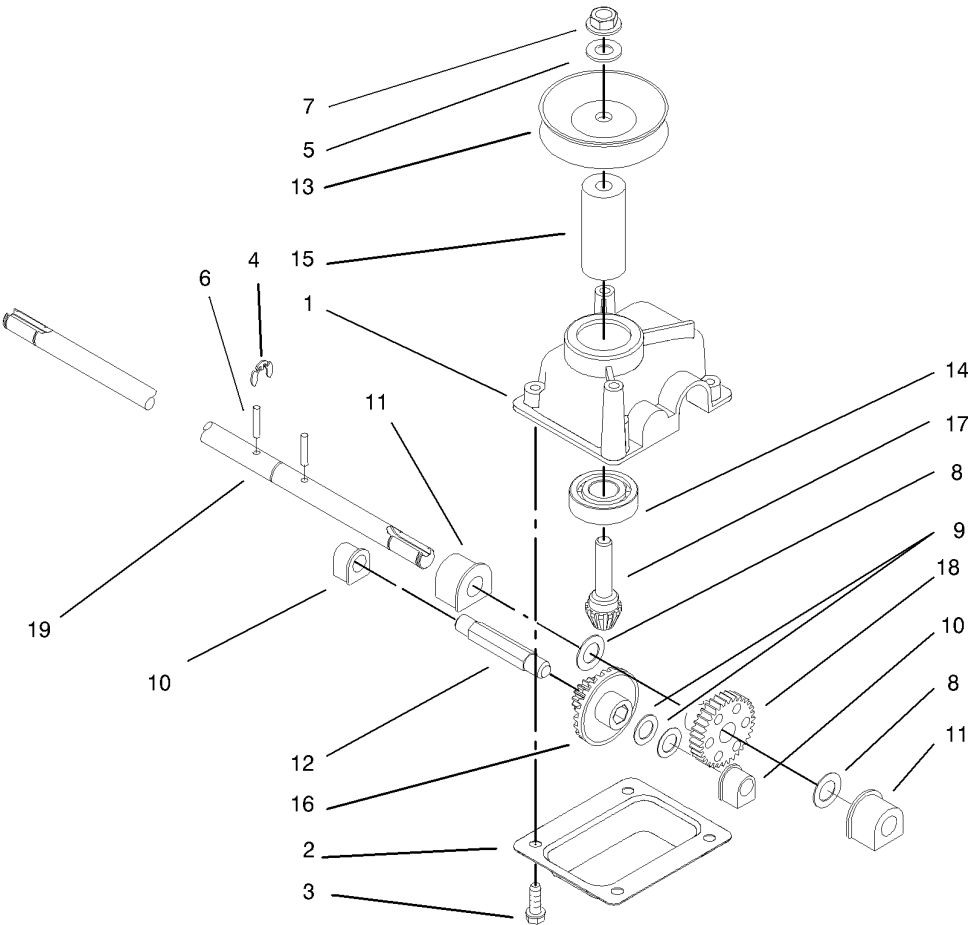

Gear Case Assembly No. 104-7672


Ref	Part No.	Qty.	Description				
1	104-7619	1	Case-Gear				
2	614668-03	1	Cover-Case, Gear				
3	32144-4	4	Screw-HWH				
4	32151-68	1	Ring-Retaining				
5	3256-24	1	Washer-Flat				
6	3285-19	2	Pin-Groove				
7	3296-5	1	Nut-Lock, NI				
8	36-4780	2	Washer				
9	36-4791	2	Washer-Thrust				
10	60-8750	2	Bushing				
11	60-8850	2	Bushing				
12	614696	1	Shaft-Intermediate				
13	614669	2	Half-Pulley				
14	100-1048	1	Bearing-Ball				
15	95-5550	1	Spacer-Pulley				
16	104-7668	1	Gear-15t Spur, 37t Bevel				
17	104-7669	1	Gear-Pinion, bevel				
18	614596	1	Gear				
19	104-7670	1	Shaft-Output				



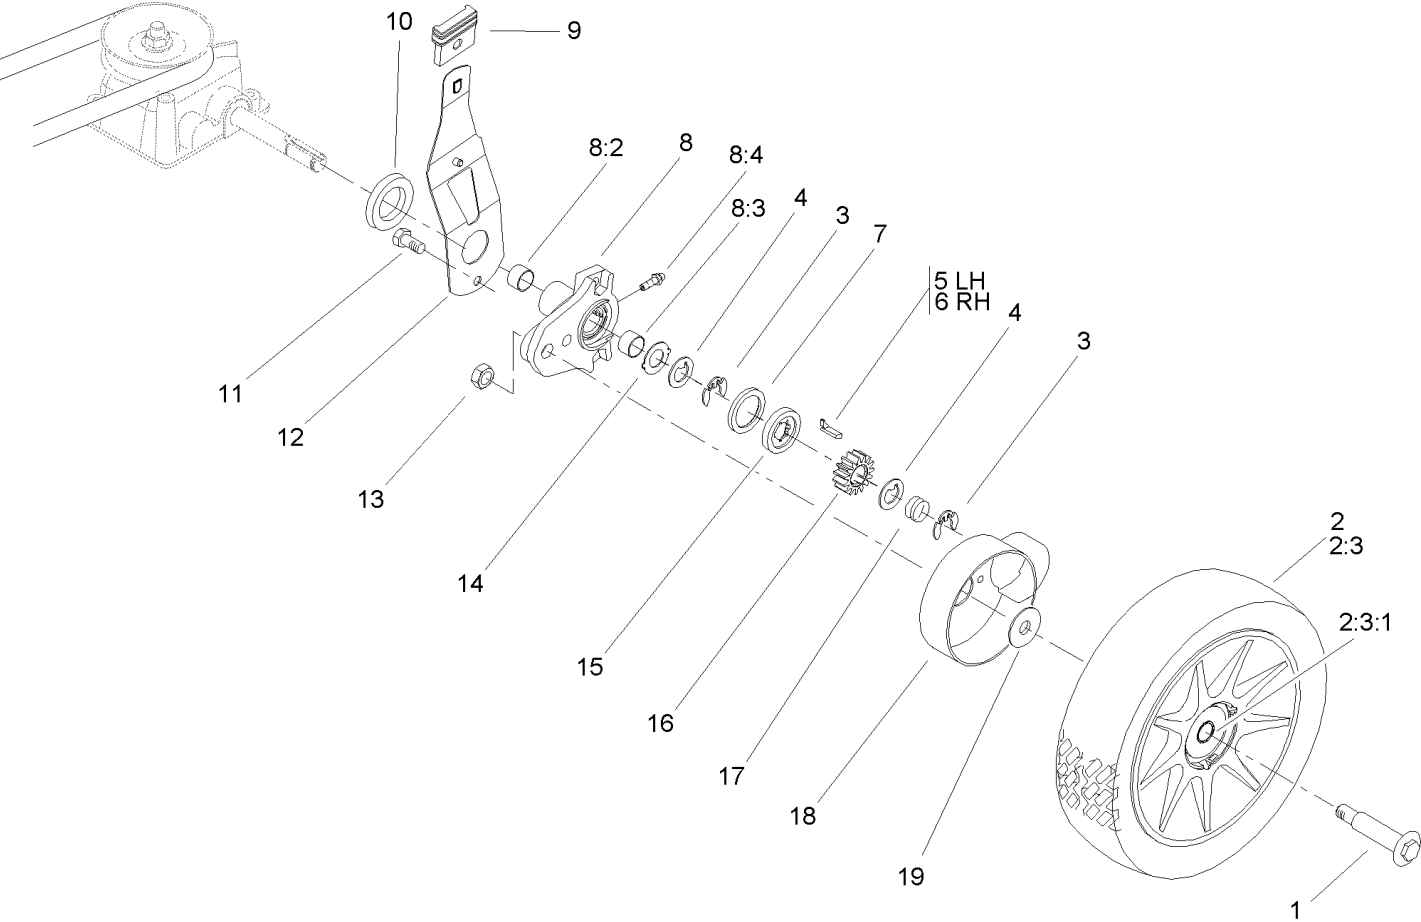


Gear Case and Wheel Assembly

Ref	Part No.	Qty.	Description				
1	92-1057	2	Bolt-Shoulder				
2	92-1042	2	Wheel And Tire ASM				
2:3		1	Wheel ASM				
2:3:1	27-6250	2	Bushing				
3	65-2720	4	Klipring-Locking				
4	65-4740	4	Washer-Thrust, Keyed				
5	66-6050	1	Key-Rocking, LH				
6	66-6040	1	Key-Rocking, RH				
7	65-4710	2	Ring-Friction				
8	92-7746	2	Rear Height Adjustment Arm ASM				
8:2	70-9760	1	Bushing				
8:3	47-2900	1	Bushing				
8:4	302-56	1	Fitting-Grease				
9	92-1008	2	Knob-Lever, Height Adjustment				
10	614447	2	Spacer-Axle Shaft				
11	32144-85	2	Screw-HWH				
12	92-1004	2	Rear Spring Arm ASM				
13	603773	2	Nut				
14	65-4730	2	Washer-Arm, Pivot				
15	65-4760	2	Washer-Clutch				
16	65-4750	2	Gear-Pinion				
17	65-4720	2	Spring-Compression				
18	94-1609	2	Cover-Wheel				
19	614426	2	Washer-Stepped				

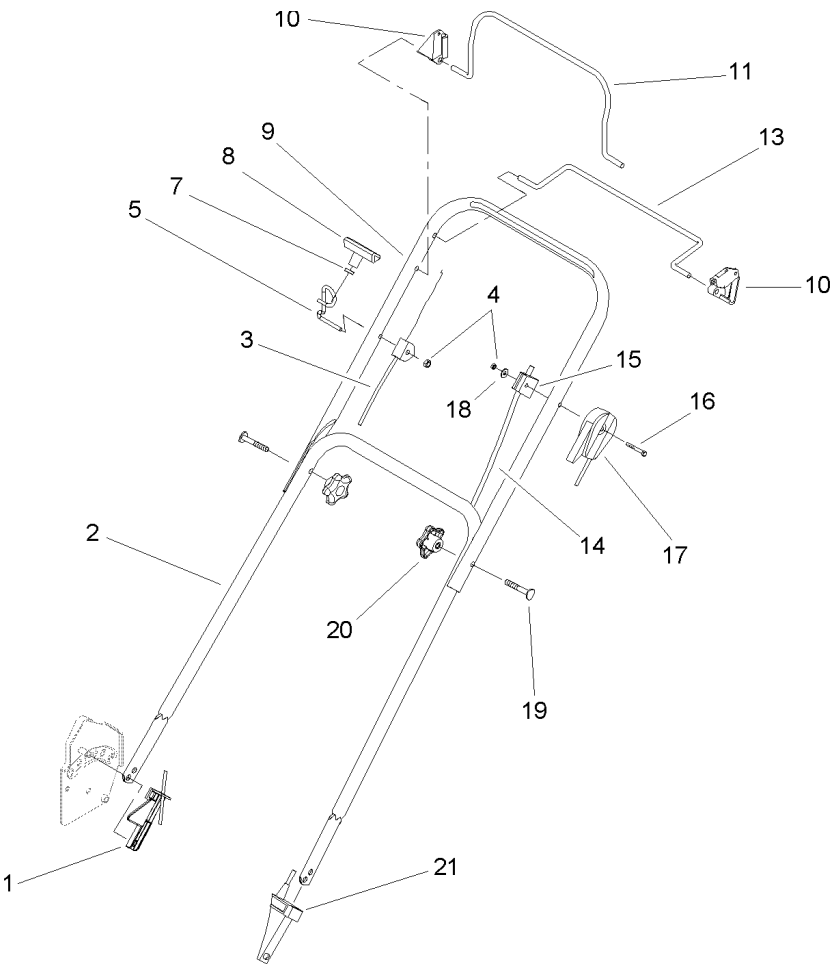


Handle Assembly

Ref	Part No.	Qty.	Description				
1	104-1013	1	Guard-Cable				
2	614643-05	1	Handle-Lower				
3	100-5983	1	Cable-Brake				
4	3296-73	2	Nut-Lock, NI				
5	106-8330	1	Guide-Rope				
7	612824	1	Clip-Starter				
8	612825	1	Handle-Start				
9	100-2888-05	1	Handle-Upper				
10	107-0757	2	Stop-Pivot				
11	93-4184-03	1	Bail-Brake				
13	92-1001-03	1	Bail-Control				
14	100-5990	1	Cable-Ground Speed				
15	92-7729	1	Anchor-Cable, Upper				
16	321-55	1	Screw-HH				
17	100-5987	1	Throttle Control ASM				
18	3256-1	1	Washer-Flat				
19	614697	2	Screw				
20	106-4161	2	Knob-Handle				
21	93-7380	1	Anchor-Cable				

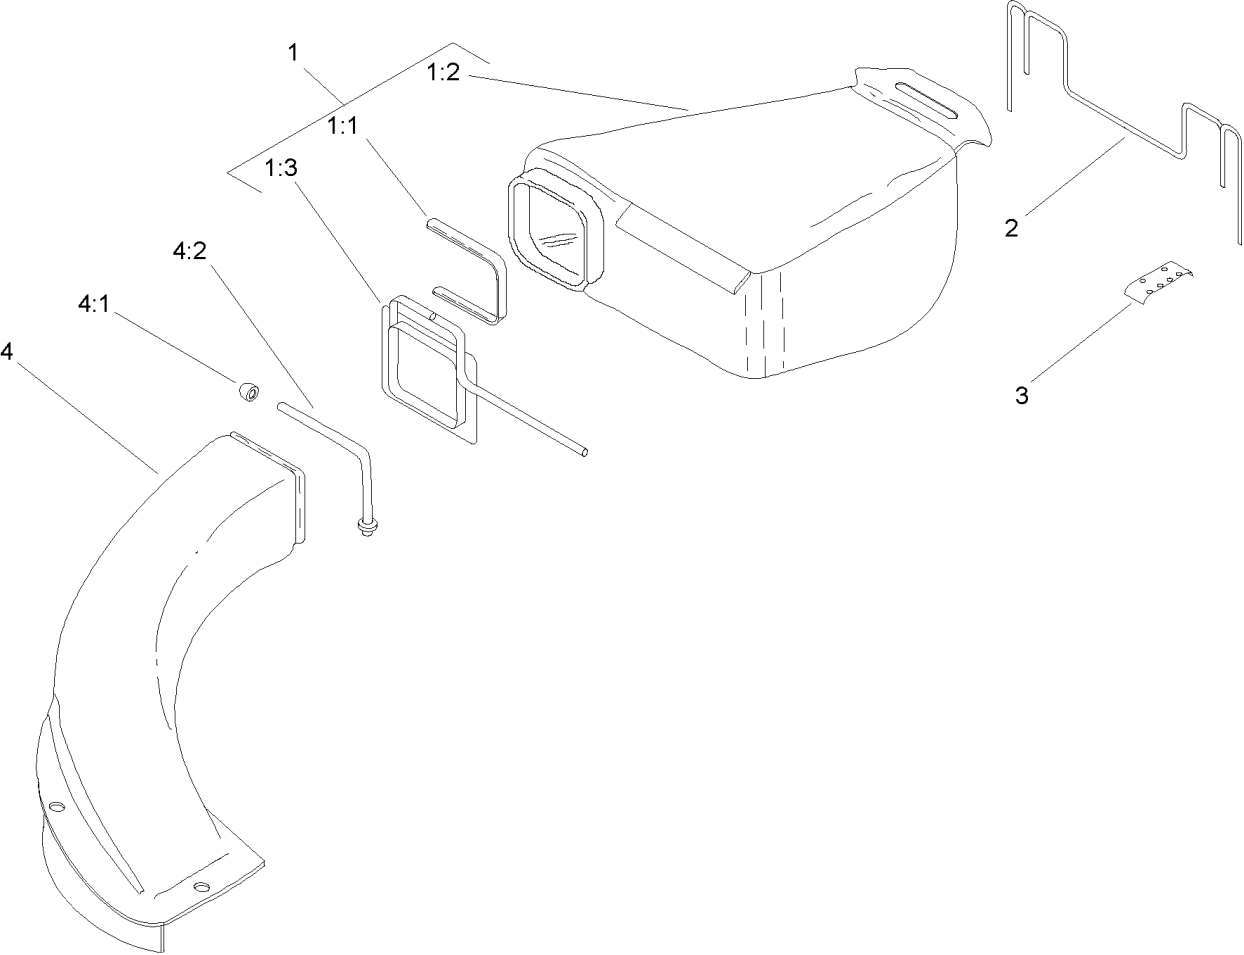


Rear Grass Bag Assembly

Ref	Part No.	Qty.	Description				
❶ 1	100-6361	1	Bag And Adapter ASM				
1:1	614700	1	Strap-Tie				
1:2	100-6362	1	Replacement Bag ASM				
1:3	684727-03	1	Adapter				
2	613455	1	Hanger-Wire				
3	613462-03	2	Clamp-Hanger				
4	684729	1	Chute And Support ASM				
4:1	614589	1	Nut-Cap				
4:2	614591	1	Support-Chute				

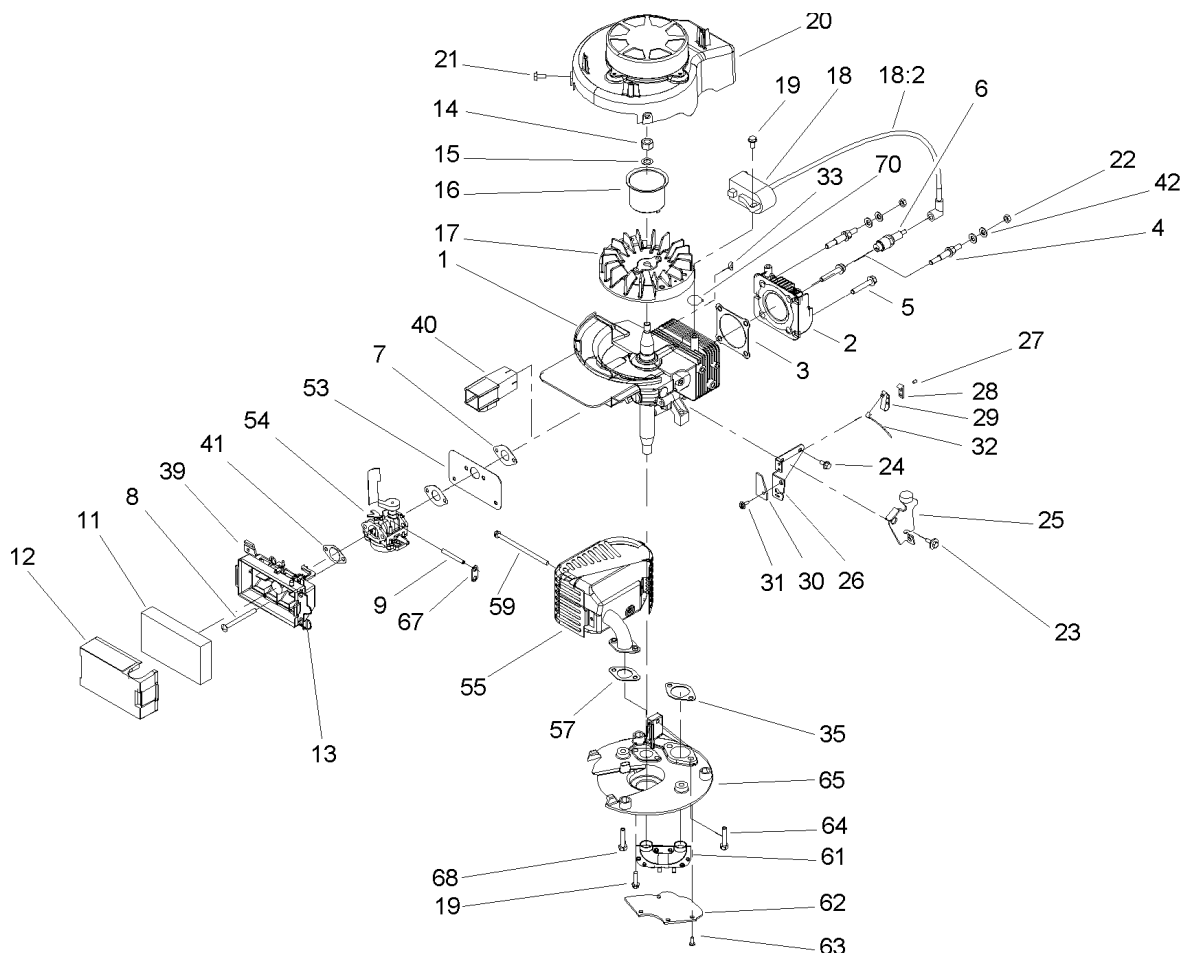


Engine Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	95-7636	1	Short Block ASM	25	93-4312	1	Plate-Brake
2	94-5776	1	Head-Cylinder	26	84-7820	1	Plate-Brake
3	94-5778	1	Gasket-Head	27	3290-459	2	Rivet-Plastic
4	94-5779	2	Stud	28	92-2925	1	Strap-Insulation
5	94-5780	2	Screw-HWH	29	60-9010	1	Strap-Ground
6	50-1170	1	Spark Plug	30	100-2929	1	Stop-Strap, Ground
7	94-5795	2	Gasket-Intake	31	12-5450	1	Screw
8	612507	2	Screw	32	98-7037	1	Lead Wire-Switch, Brake
9	95-1861	1	Hose-Primer	33	607199	1	Key
11	95-5574	1	Filter-Air	35	95-1778	1	Gasket-Exhaust
12	95-5577	1	Cover-Filter, Air	39	95-5588	1	Air Base ASM
13	610383	1	Retainer-Cover, Filter	40	95-5578	1	Tunnel-Inlet
14	130743	1	Nut	41	95-7613	1	Gasket-Filter
15	3253-6	1	Washer-Lock	42	3290-456	4	Washer-Belleville
16	95-1786	1	Cup-Starter	51	609790	1	Sealer-Loctite 50cc
17	95-1866	1	Flywheel	53	98-1388	1	Shield-Carb
18	99-2911	1	Module-Ignition	54	98-7042	1	Carburetor ASM
18:2	99-6719	1	Lead-Tension, High	55	100-9514	1	Muffler And Guard
19	613208	4	Screw	57	98-1392	1	Gasket
20	95-1868	1	Shroud-Recoil	59	611228	1	Bolt-Console
21	700094	2	Screw-HH	61	98-1557	1	Pipe-Transfer
22	146501	2	Nut	62	98-1591	1	Cover-Muffler
23	95-1870	1	Screw-Shoulder	63	3234-13	4	Screw-HHF
24	95-1871	1	Screw-HWH	64	322-17	2	Screw-HH

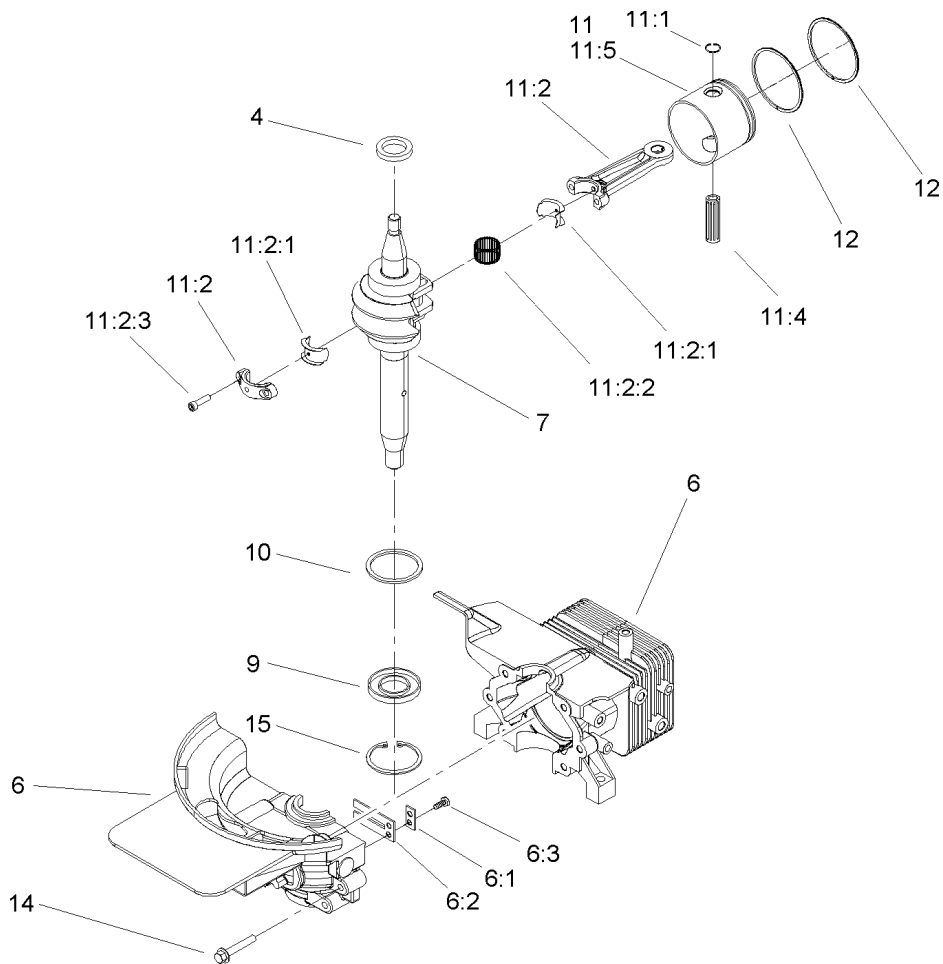


Short Block Assembly No. 95-7636

Ref	Part No.	Qty.	Description				
❶2	609790	1	Sealer-Loctite 50cc				
❶2	610372	1	Sealer-Loctite 6cc				
4	611396	1	Seal-Oil				
6	95-7631	1	Cylinder And Crankcase ASM				
6:1	602587	1	Plate-Backup, Reed				
6:2	602588	1	Reed-Carburetor				
6:3	612872	2	Screw-HH				
7	99-2920	1	Crankshaft And Bearing ASM				
9	94-5764	1	Seal-Oil				
10	94-5765	1	Ring-Retaining, Ext.				
❷11		1	Piston And Connecting Rod ASM				
11:1	303712	2	Ring-Retaining				
11:2	95-7629	1	Connecting Rod ASM				
11:2:1	677982	1	Liner ASM				
11:2:2	683911	1	Bearing-Needle				
11:2:3	611393	2	Screw-HSH				
11:4	94-5774	1	Pin-Wrist				
11:5	100-2916	1	Piston And Rings ASM				
12	100-2917	1	Set-Ring				
14	94-5781	6	Screw-HHF				
15	32151-75	1	Ring-Retaining				

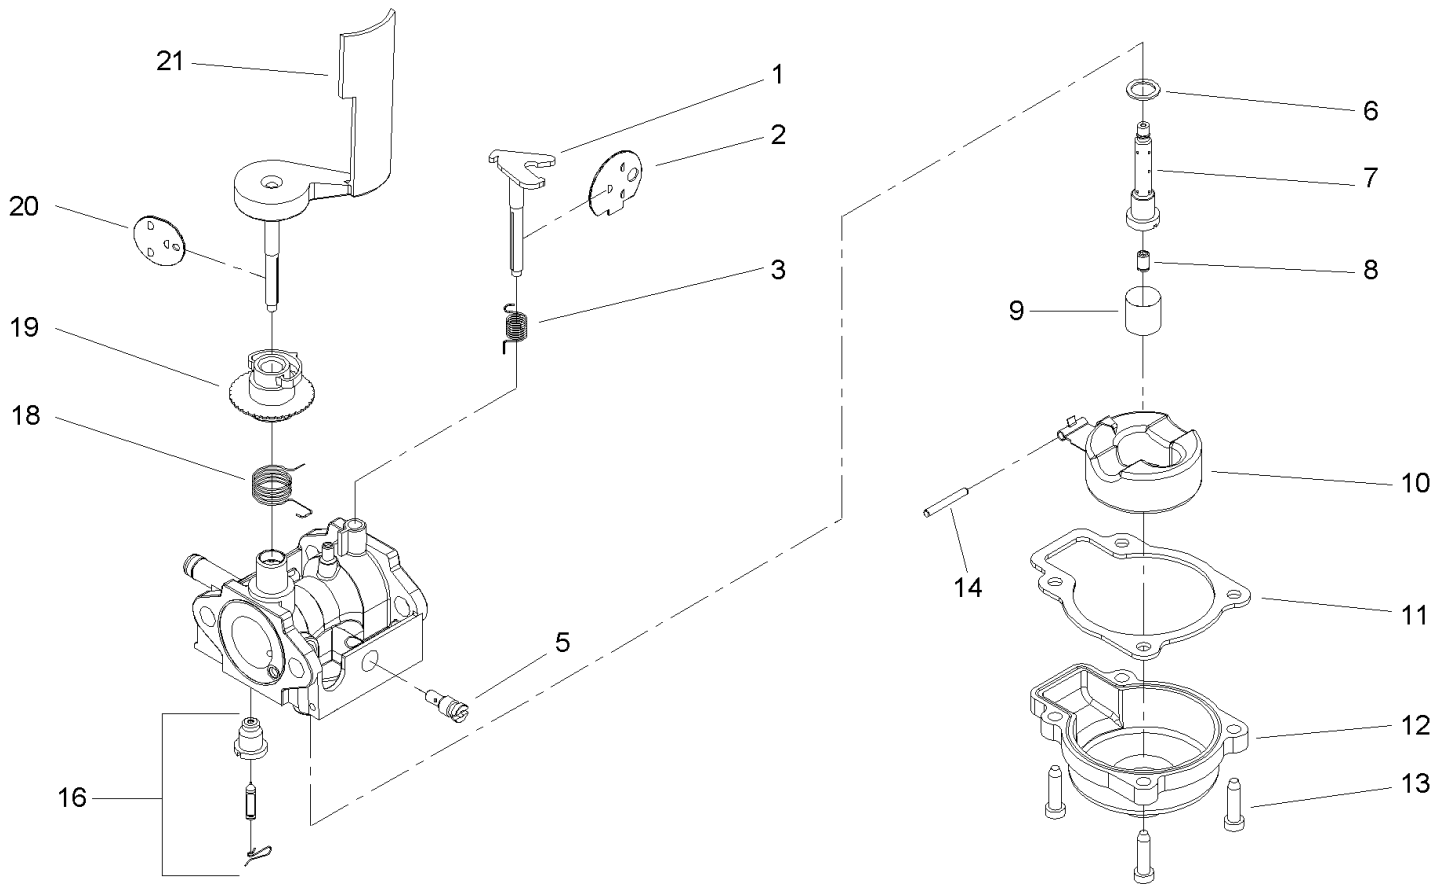

Carburetor Assembly No. 98-7042

Ref	Part No.	Qty.	Description				
1	95-5581	1	Shaft-Choke				
2	94-5788	1	Disc-Choke				
3	95-5583	1	Spring-Choke				
5	98-7041	1	Pilot-Jet 37.5				
6	612383	1	Washer				
7	98-7001	1	Nozzle				
8	98-1357	1	Jet-Main				
9	94-5787	1	Filter-Fuel				
10	95-1899	1	Float And Arm ASM				
11	98-1362	1	Gasket				
12	92-9691	1	Chamber-Float				
13	608850	4	Screw-HH				
14	92-6389	1	Pin-Straight				
16	92-9697	1	Valve/seat-Float				
18	98-7011	1	Spring-Throttle				
19	610834	1	Collar-Adjust, Airvane				
20	104-4431	1	Throttle-Disc				
21	104-4430	1	Airvane And Shaft ASM				

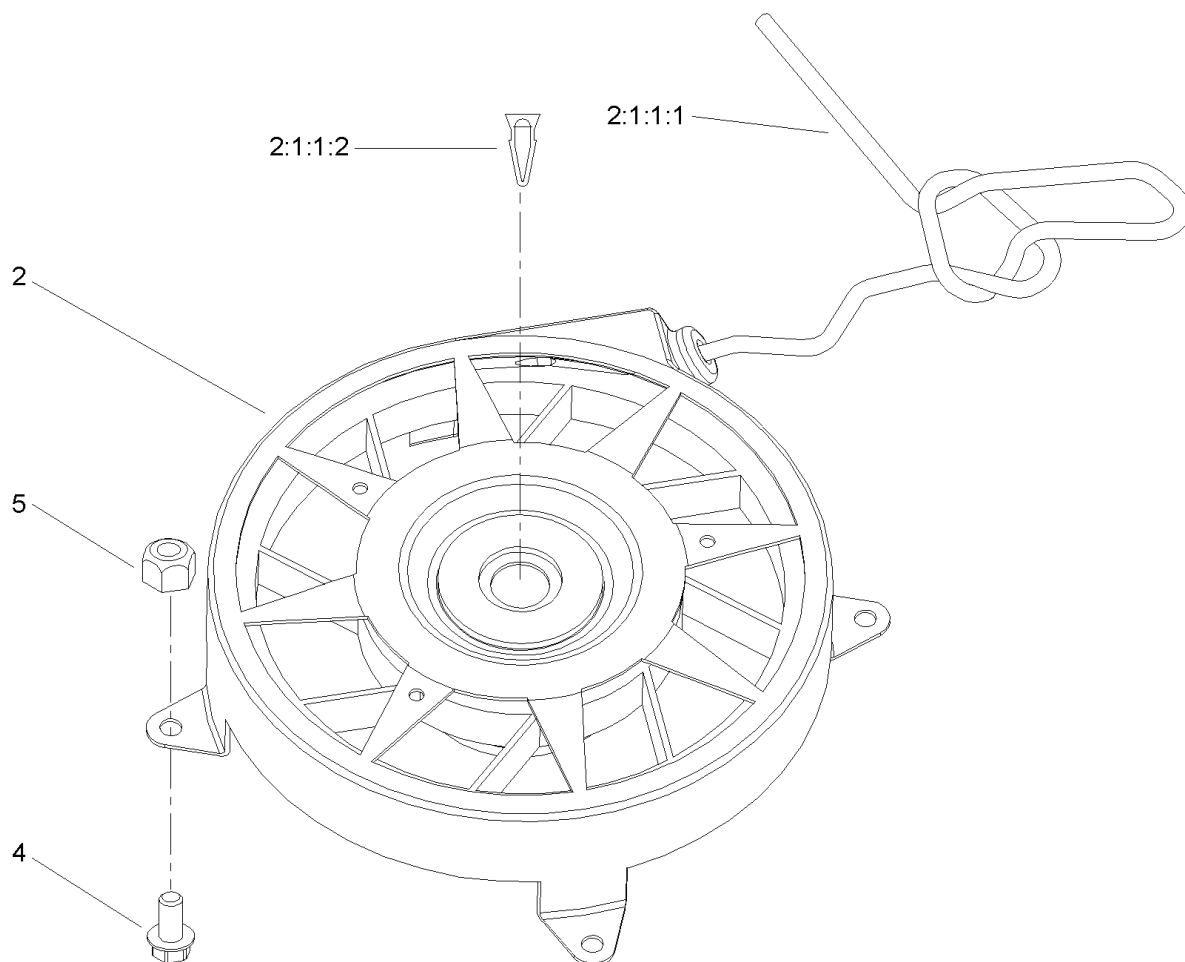

Recoil Assembly No. 95-1781

Ref	Part No.	Qty.	Description
2	99-6713	1	Recoil ASM
2:1		1	Recoil And Decal ASM
2:1:1		1	Recoil
2:1:1:1	613773	1	Rope-Recoil
2:1:1:2	100-9540	1	Retainer And Clip ASM
4	3290-321	4	Screw-HWH
5	3296-2	4	Nut-Lock

NOTES

NOTES

LAWN-BOY®