



Greensmaster® 500

Model No. 04130 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Transmission Case Assembly	 3	Guard and Bedknife Assembly	 17
Clutch Shaft Assembly	 4	Bearing Housing Assembly for Roller Assembly No. 39-9590	 18
Drum Assembly	 5	Real and Bearing Assembly No. 4-2219	 19
Engine Component Assembly	 6	Special Tools	 20
Handle Installation Assembly	 7	Crankcase Assembly	 21
Handle Assembly	 8	Camshaft and Valve Assembly	 22
Roller Assembly No. 88-8900	 9	Ignition Assembly	 23
Basket and Yoke Assembly	 10	Governor Assembly	 24
Transmission Assembly	 11	Carburetor Assembly	 25
Clutch Shaft Assembly	 12	Air Cleaner and Muffler Assembly	 26
Differential Case and Shaft Assembly	 13	Fuel Tank Assembly	 27
Cutting Unit Frame Assembly	 14	Engine Decals	 28
Bedknife, Reel, and Roller Assembly	 16		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HYD. hydraulic
ASM. assembly	INC. incorporated
CARR. carriage	LH. left hand
DEG. degrees	NI. nylon insert
FH. flat head	NPTF. national pipe thread fine
GA. gauge	PPH. phillips pan head
HF. hex flange	PRH. phillips round head
HH. hex head	PTH. phillips truss head
HHE. hex head flange	PTO. power take off
HHFTF. hex head flange thread forming	RH. right hand
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HS. hex	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HSH. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head
	WH. wing head


Footnotes

- ❶ Not illustrated
- ❷ Not serviced separately
- ❸ Obtain these items directly from OTC 2013 4th St. Owatonna, MN 55060 1-800-533-0492 (in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.

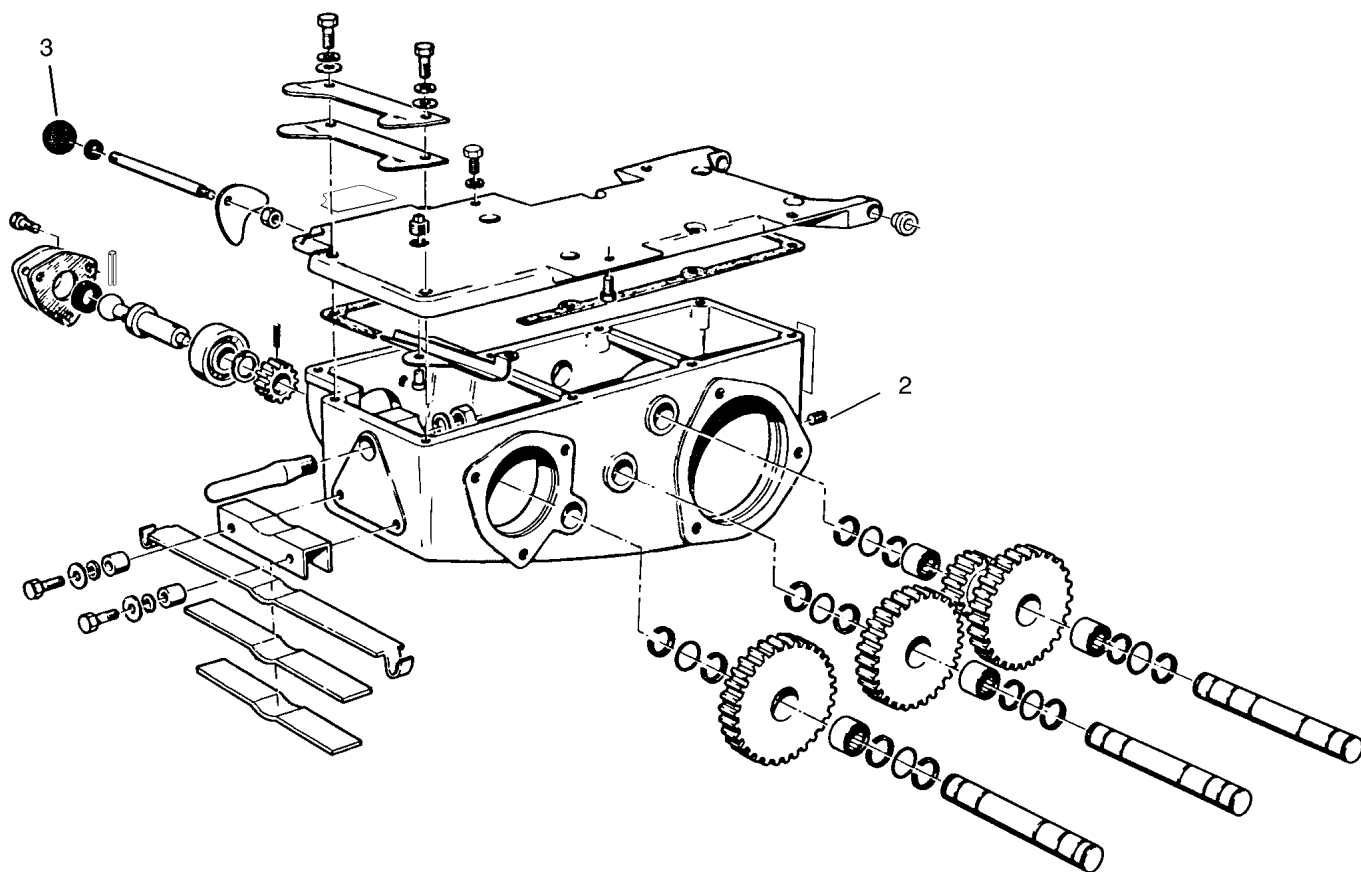


Transmission Case Assembly

Ref	Part No.	Qty.	Description
2	281-1	1	Plug-Pipe, SQH
3	3-0631	1	Ball-Grip

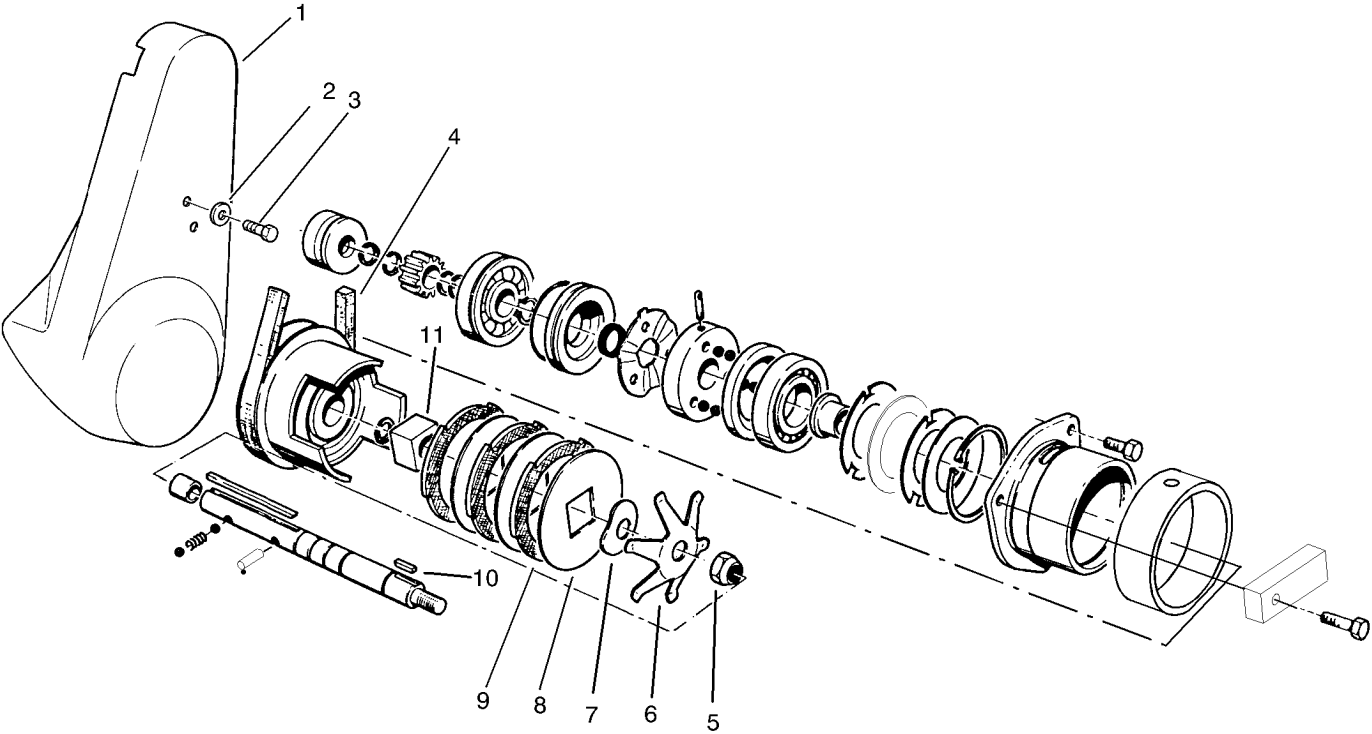

Clutch Shaft Assembly


Ref	Part No.	Qty.	Description				
1	88-8740	1	Guard-Belt				
2	3253-3	2	Washer-Lock				
3	32144-10	2	Screw-HWH				
4	95-1811	1	V-Belt				
5	3296-6	1	Nut-Lock				
6	3-0478	1	Spring-Clutch				
7	3290-211	1	Washer-Spring				
8	3-0477	3	Plate-Clutch				
9	99-5902	3	Disc-Clutch				
10	3-6801	1	Key				
11	3-0472	1	Driver-Clutch				

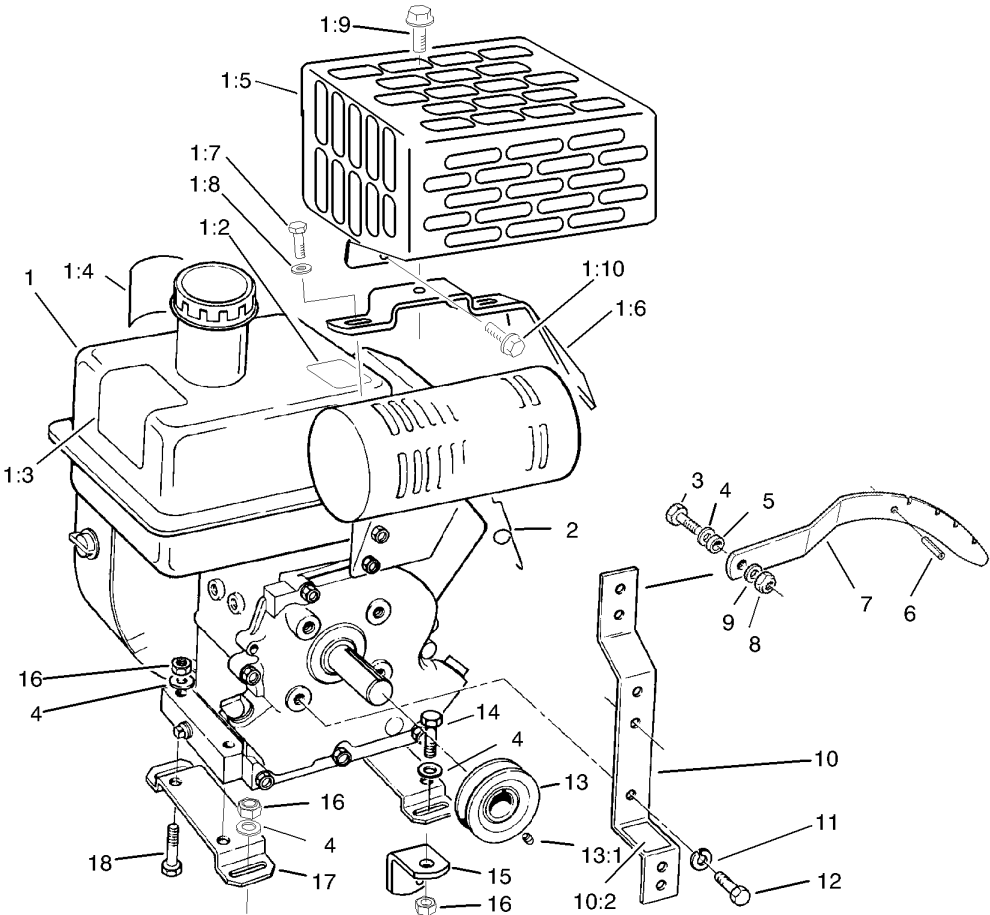

Engine Component Assembly


Ref	Part No.	Qty.	Description
1	108-3157	1	Engine ASM
1:2	105-5309	1	Decal-Surface, Hot
1:2	83-2560	1	Decal-Surface, Hot
1:3	92-4813	1	Decal-Danger
1:3	93-7348	1	Decal-Danger
1:4	93-9886	1	Decal-Fuel
1:5	98-3432-03	1	Guard-Muffler
1:6	98-3421	1	Bracket-Guard, Muffler
1:7	33113-012	2	Screw-HH
1:8	3256-22	2	Washer-Flat
1:9	46-6810	1	Screw And Washer ASM
2	88-8690	1	Wire-Throttle
3	322-16	1	Screw-HH
4	3256-23	9	Washer-Flat
5	88-9080	1	Spacer
6	32121-11	1	Pin-Roll
7	88-8680	1	Handle
8	3296-47	1	Nut-Lock, NI
9	3-3287	1	Spacer-Latch, Handle
10	95-7283	1	Bracket-Pivot
10:2	93-9356	1	Decal-Warning, Belt
11	3253-31	2	Washer-Lock/sp
12	33114-020	2	Screw-HH
13	244-58	1	Pulley

Ref	Part No.	Qty.	Description
13:1	3245-32	1	Screw-HS
14	322-5	4	Screw-HH
15	95-7280	1	Bracket-Spring
16	32153-3	8	Nut-Lock, Side
17	88-8650-01	2	Mount-Motor
18	322-17	4	Screw-HH

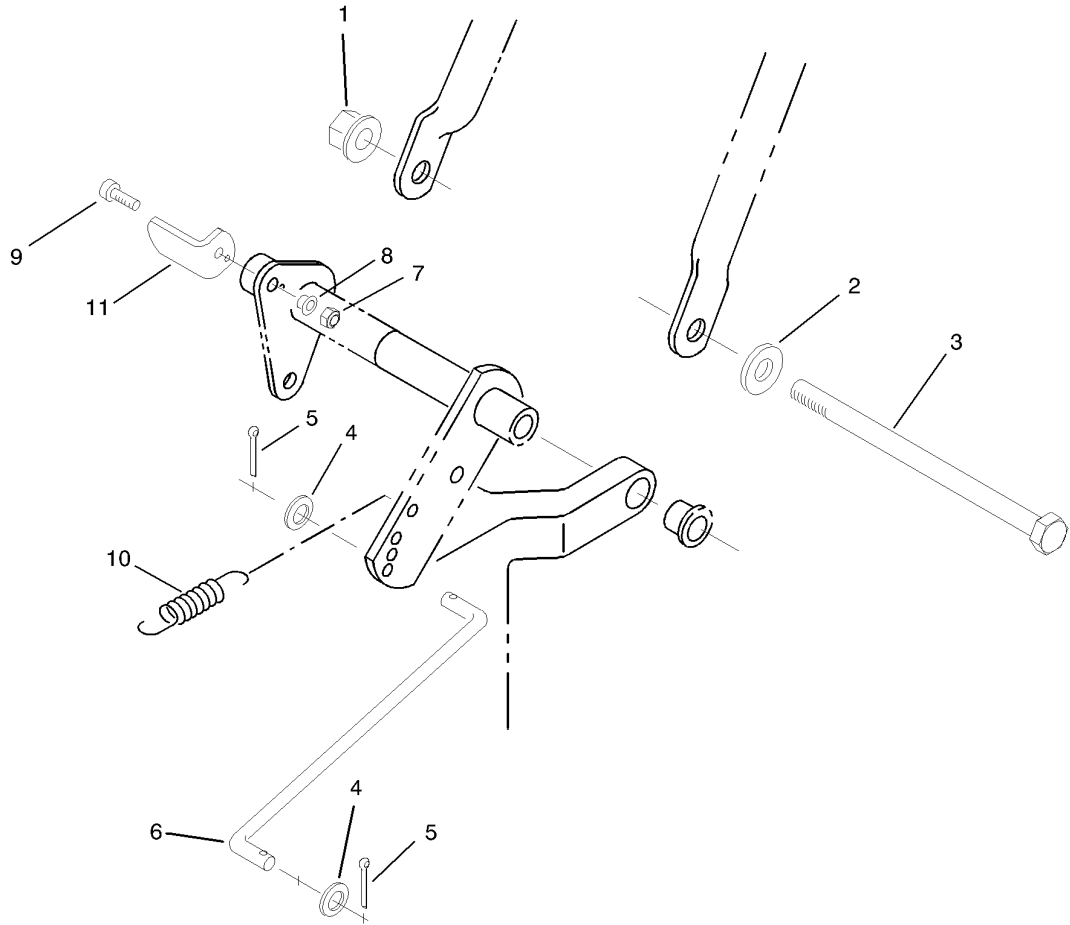

Handle Installation Assembly

Ref	Part No.	Qty.	Description				
1	32128-19	1	Nut-HF				
2	3256-24	1	Washer-Flat				
3	323-30	1	Screw-HH				
4	3256-14	2	Washer-Flat				
5	3272-1	2	Pin-Cotter				
6	98-3433	1	Rod-Clutch				
7	3296-1	1	Nut-Lock				
8	3-0526	1	Retainer				
9	3250-17	1	Screw-PPH				
10	71-5470-03	1	Spring-Brake				
11	98-3437	1	Stop-Throttle				

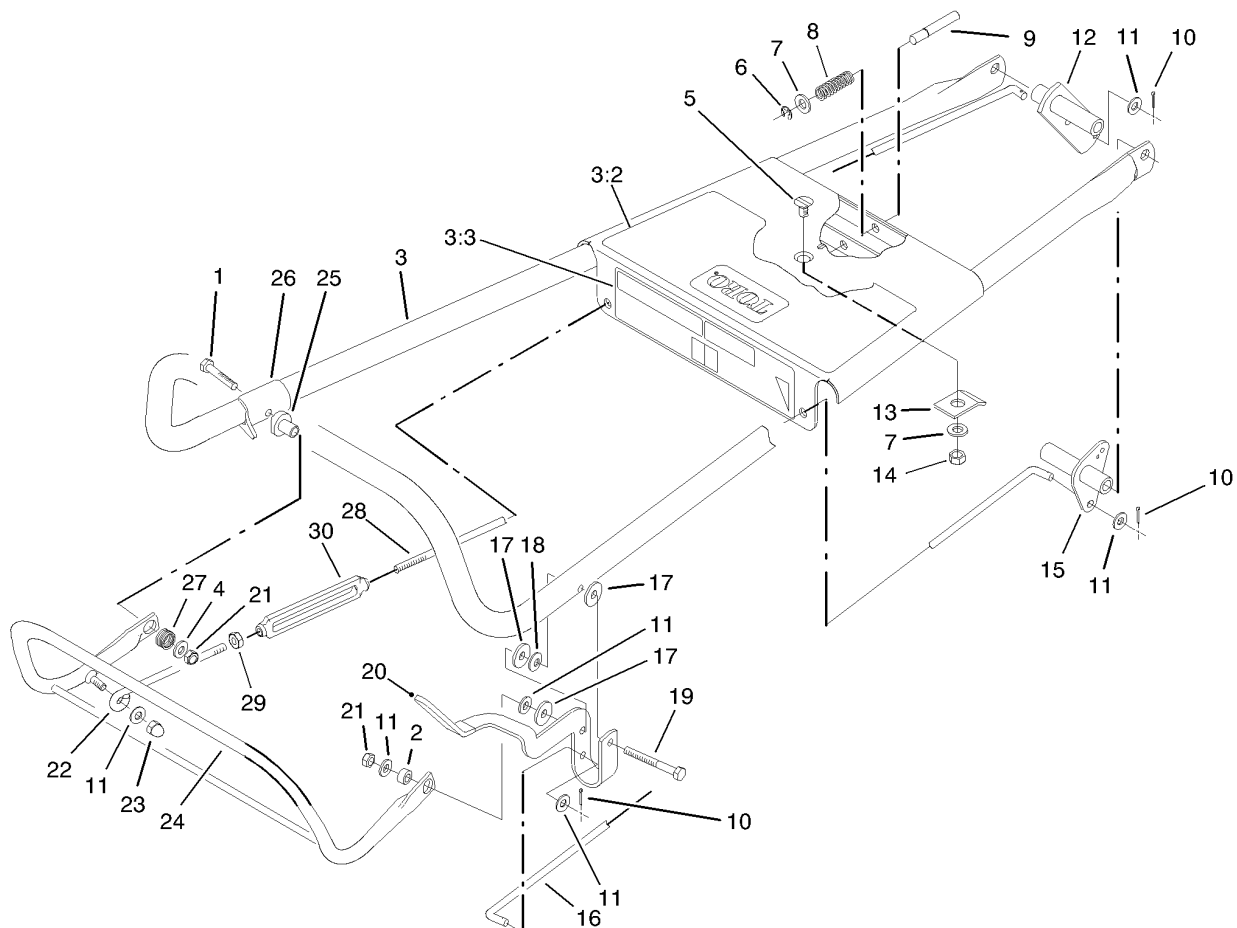


Handle Assembly

Ref	Part No.	Qty.	Description
1	321-15	1	Screw-HH
2	98-3425	1	Spacer
3	99-2302	1	Handle ASM
3:2	95-7266	1	Decal-Handle
3:3	95-7298	1	Decal-Control
4	3256-67	1	Washer-Flat
5	57-4910	1	Screw-Special
6	32120-35	1	E-Ring
7	3256-23	2	Washer-Flat
8	5-0776	1	Spring
9	5-0765	1	Pin
10	3272-1	3	Pin-Cotter
11	3256-22	6	Washer-Flat
12	98-3401-01	1	Clutch-Bellcrank
13	98-3403	1	Tab
14	3296-47	1	Nut-Lock, NI
15	98-3405-01	1	Crank-Throttle
16	3-3422	1	Rod-Control
17	66-2921	3	Washer-Friction
18	3290-436	1	Washer-Belleville
19	321-14	1	Screw-HH
20	98-3408	1	Lever-Throttle
21	3296-56	2	Nut-Lock, NI
22	99-3711	1	Rod-Clutch Control, Upper

Ref	Part No.	Qty.	Description
23	32111-14	1	Nut-Cap
24	98-3415-03	1	Bail ASM
25	49-1631	1	Spacer-Support
26	99-8073	1	Latch
27	85-6750	1	Spring-Control
28	99-3712	1	Rod-Clutch Control, Lower
29	3217-5	1	Nut-Hex
30	99-8080	1	Body-Turnbuckle




9

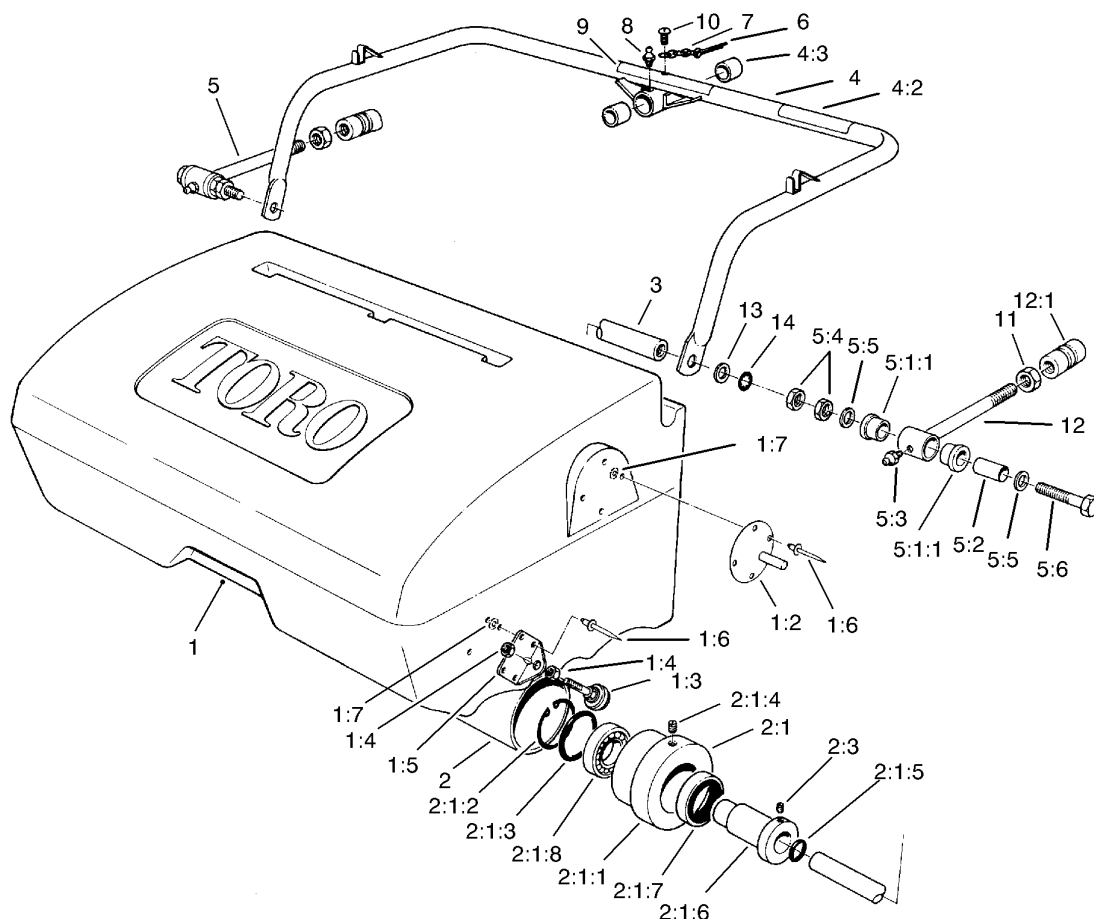

Basket and Yoke Assembly

Ref	Part No.	Qty.	Description
1	88-8770	1	Grass Basket ASM
1:2	88-8910	2	Pivot
1:3	32141-36	2	Screw-Adjustment, Level
1:4	3218-2	4	Nut-Jam
1:5	5-3464	2	Bracket-Adjusting
1:6	3269-4	16	Rivet-Pop
1:7	3256-51	16	Washer-Flat
2	5-1382	1	Front Roller ASM
2:1		2	Bearing/housing ASM
2:1:1	5-1384	1	Housing-Bearing
2:1:2	32151-13	1	Ring-Retaining
2:1:3	237-68	1	O-Ring
2:1:4	285-17	1	Plug-Pipe
2:1:5	237-69	1	O-Ring
2:1:6	11-3050	1	Sleeve
2:1:7	253-118	1	Seal-Oil
2:1:8	251-205	1	Bearing-Ball
2:3	3245-35	2	Screw-HS
3	5-1390	1	Roller-Shaft, Yoke
4	99-4264	1	Yoke ASM
4:2	93-6688	1	Decal-Danger, Europe
4:3	3-2156	2	Bushing
5	3-4510	2	Pull Arm ASM
5:1		1	Pull Arm And Bushing ASM


Ref	Part No.	Qty.	Description
5:1:1	3-1506	2	Bushing
5:2	3-3436	1	Sleeve
5:3	302-5	1	Fitting-Grease, Straight
5:4	3220-3	2	Nut-Jam
5:5	3256-24	2	Washer-Flat
5:6	8-5770	1	Capscrew-Special
6	3272-50	1	Pin-Cotter
7	3-0696	1	Yoke-Chain
8	302-5	1	Fitting-Grease, Straight
9	3-1828-01	1	Plate-Wear
10	32104-81	1	Screw-Head, Pan
11	3220-3	2	Nut-Jam
12	99-1460	2	Ball Joint Receiver ASM
12:1	99-1461	1	Sleeve-Joint, Ball
13	3256-24	2	Washer-Flat
14	3254-6	2	Washer-Lock, Internal

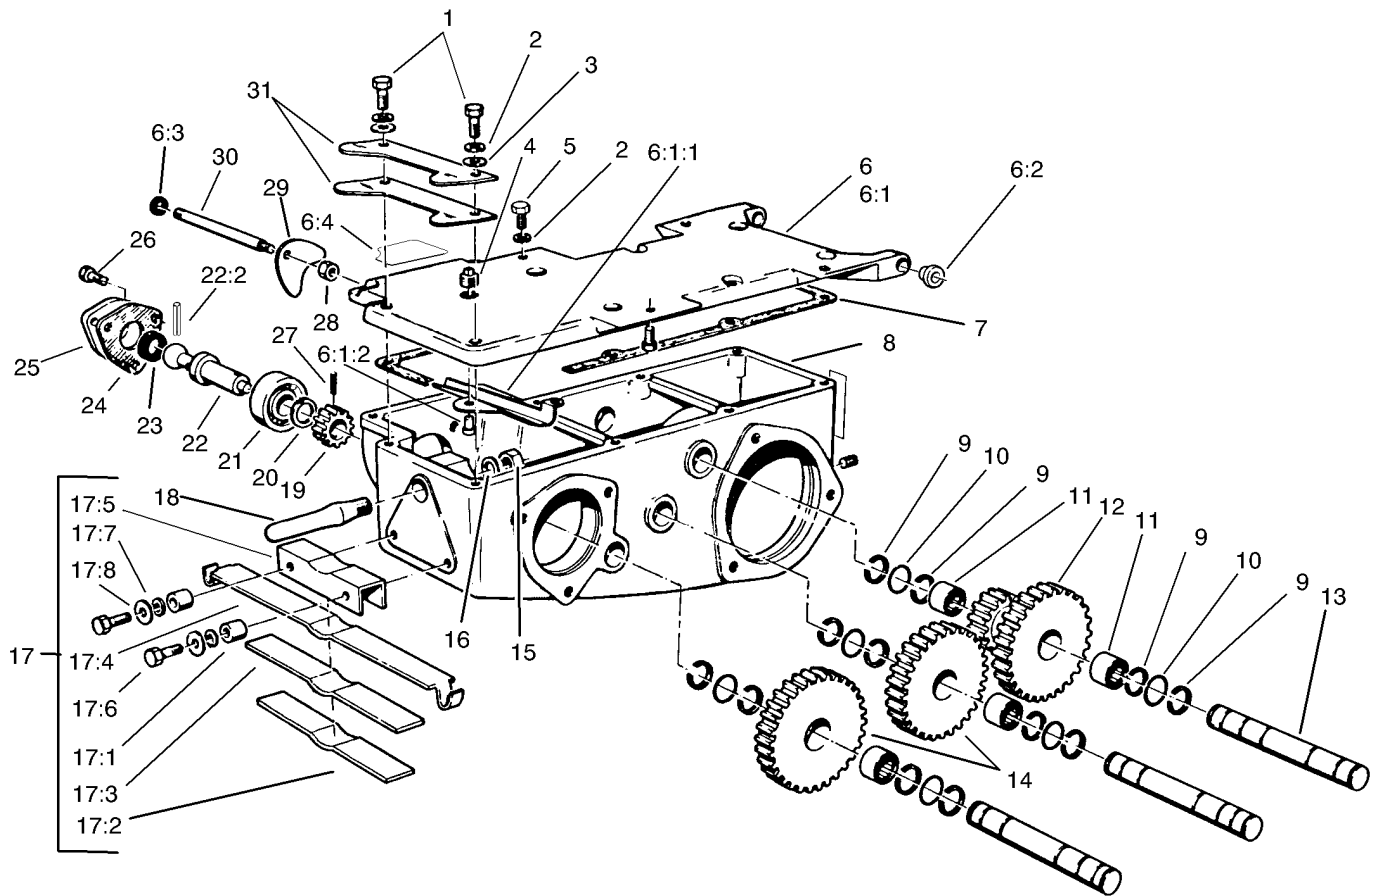

Transmission Assembly


Ref	Part No.	Qty.	Description
1	321-11	2	Screw-HH
2	3253-3	10	Washer-Lock
3	3256-2	2	Washer-Flat
4	281-3	1	Plug-Pipe, SQH
5	321-8	8	Screw-HH
6	98-3412	1	Cover ASM
6:1		1	Cover ASM
6:1:1	3-1716	1	Pan-Drip, Oil
6:1:2	3295-2	2	Rivet-Tubular
6:2	3-1776	2	Bushing
6:3	253-88	1	Seal-Oil
6:4	95-7271	1	Decal-Clutch
7	3-0485	1	Gasket-Transmission
8	3-4371	1	Case ASM
9	32120-63	12	Ring-Snap
10	237-22	6	O-Ring
11	252-49	4	Bearing-Needle
12	3-0457	1	Gear-Intermediate
13	3-0455	3	Shaft-Idler
14	3-0456	2	Gear-Idler
15	3296-28	1	Nut-Lock, NI
16	3256-26	1	Washer-Flat
17		1	Lift Spring ASM
17:1	3-2074	2	Spacer

Ref	Part No.	Qty.	Description
17:2	3-2075	1	Leaf-Lower
17:3	99-6899	1	Leaf-Center
17:4	92-4995	1	Leaf-Main
17:5	92-4992	1	Bracket-Spring, Lift
17:6	322-8	2	Screw-HH
17:7	3254-2	2	Washer-Lock, Int
17:8	3256-23	2	Washer-Flat
18	95-1810	1	Pivot-Yoke
19	3-0592	1	Clutch-Reel, Male
20	3-4494	1	Washer-Thrust
21	251-163	1	Bearing-Ball
22	2-4779	1	Universal Driver And Pin ASM
22:2	32121-25	1	Pin-Roll
23	253-59	1	Seal-Oil
24	3-2072	1	Seal-Bearing
25	95-1807	1	Cover-Bearing
26	32140-40	3	Screw-HH
27	32121-4	1	Pin-Roll, Slotted
28	32152-5	1	Nut-Lock, Cone
29	3-0488	1	Fork-Shift
30	3-0486	1	Rod-Clutch, Reel
31	3-1830	2	Spring-Flat

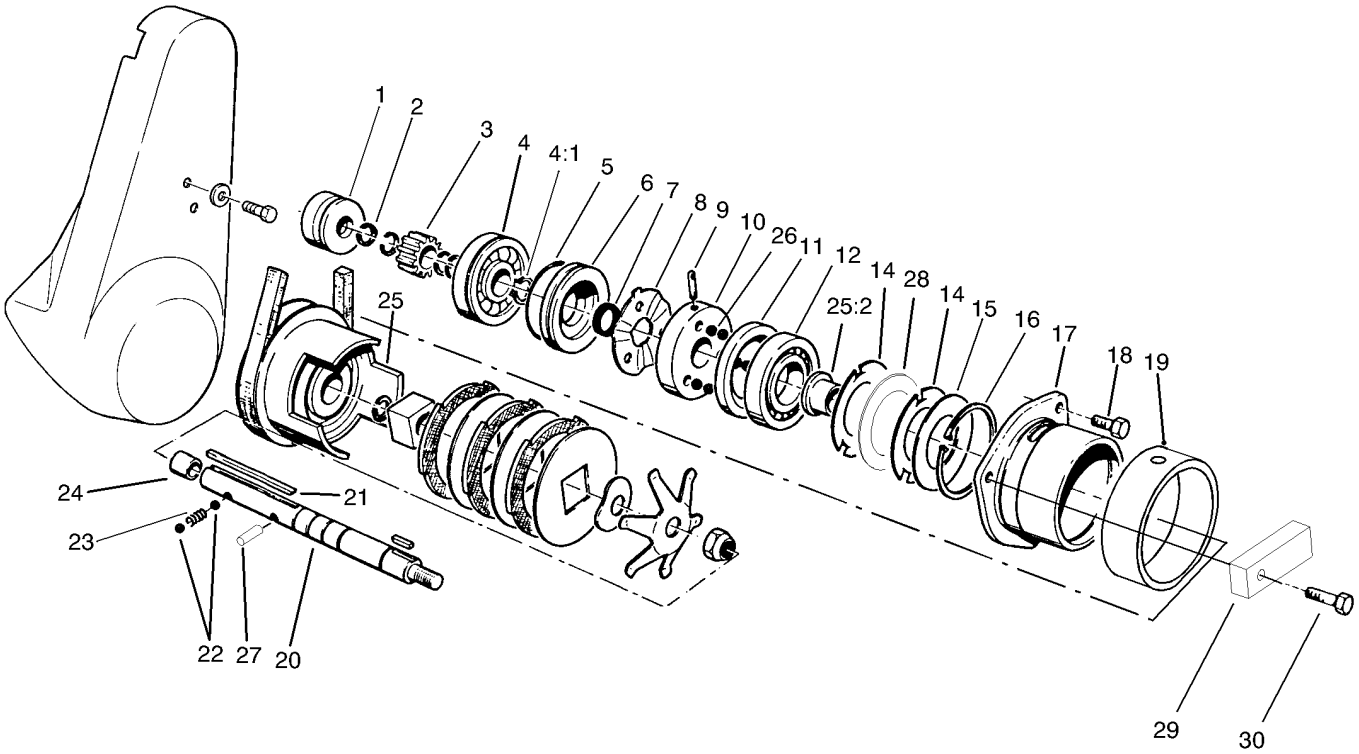


Clutch Shaft Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	3-0465	1	Clutch-Female	25	105-5368	1	Pulley ASM
2	32120-64	5	Ring-Snap, External	25:2	3-4066	1	Bushing
3	88-8700	1	Gear-Pinion	26	255-8	6	Ball-Steel
4	251-139	1	Bearing-Ball	27	32121-45	1	Pin-Spring
4:1	251-149	1	Ring-Snap	28	88-9030	1	Washer-Special
5	237-38	1	O-Ring	29	100-3396	1	Stop-Clutch Lever
6	3-1545	1	Spacer-Clutch	30	321-8	1	Screw-HH
7	253-83	1	Seal-Oil				
8	98-3410	1	Cam-Clutch				
9	95-6082	1	Pin-Clutch				
10	3-0470	1	Actuator-Clutch				
11	3-0471	1	Plate-Backing, Clutch				
12	251-140	1	Bearing-Ball				
14	3290-264	2	Washer-Wave				
15	3-0481	1	Washer-Clutch				
16	32120-65	1	Ring-Snap				
17	5-1423	1	Housing-Clutch				
18	3274-15	2	Screw-HSH				
19	98-3400	1	Sleeve-Clutch				
20	95-7293	1	Shaft-Clutch				
21	88-8730	1	Key-Clutch Shaft				
22	255-5	2	Ball-Steel				
23	3-0460	1	Spring-Detent				
24	256-112	1	Bushing				

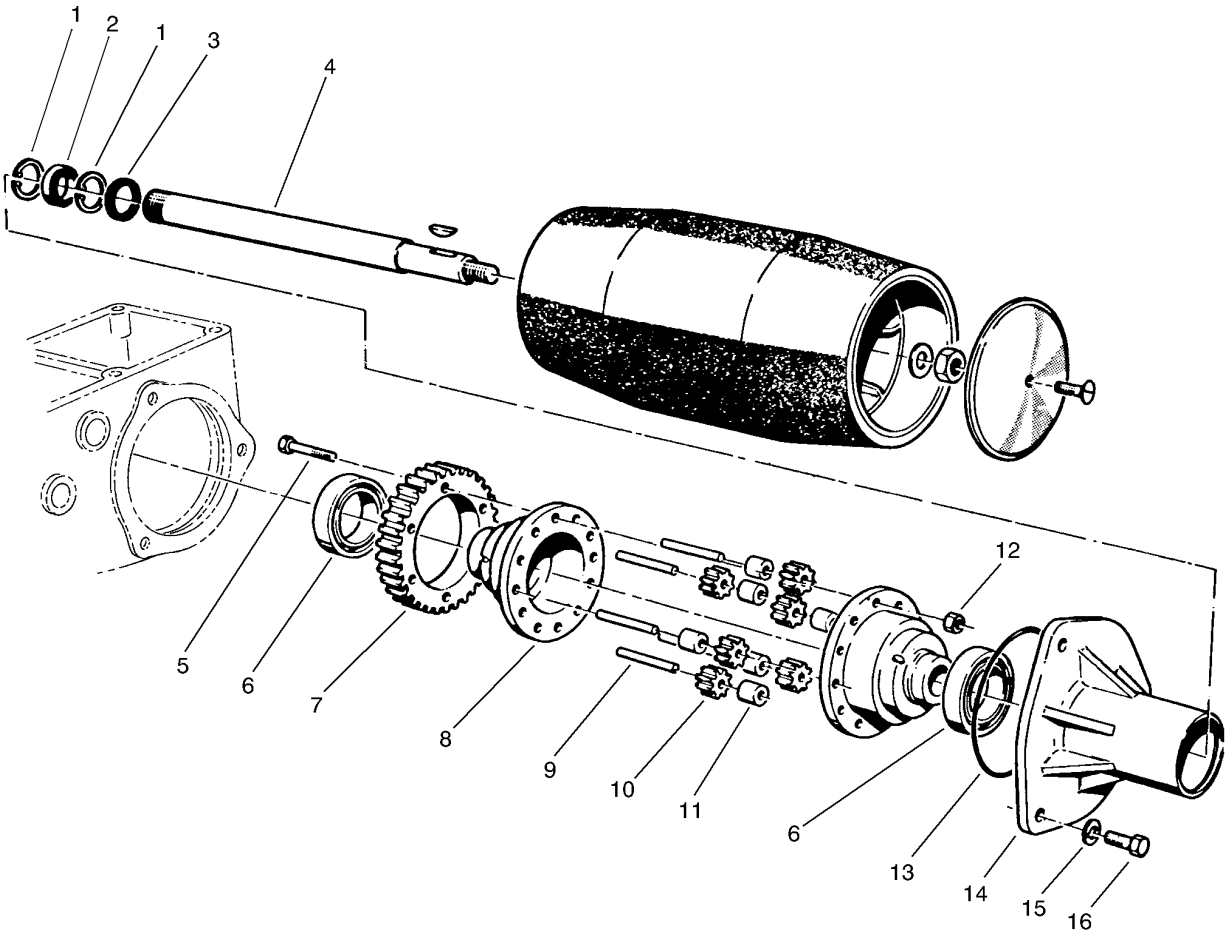

Differential Case and Shaft Assembly


Ref	Part No.	Qty.	Description				
1	32120-62	4	Ring-Retaining				
2	251-137	2	Bearing-Ball				
3	253-82	2	Seal-Oil				
4	105-5381	2	Axle				
5	3273-23	6	Screw-HS				
6	251-138	2	Bearing-Ball				
7	3-0454	1	Gear-Ring				
8	3-0450	2	Case-Differential				
9	3-0452	6	Shaft-Gear, Differential				
10	105-5380	6	Gear-Differential				
11	3-0453	6	Spacer-Gear, Differential				
12	3296-27	6	Nut-Lock NI				
13	237-33	2	O-Ring				
14	3-0596	2	Housing-Axle				
15	3253-4	6	Washer-Lock				
16	322-4	6	Screw-HH				

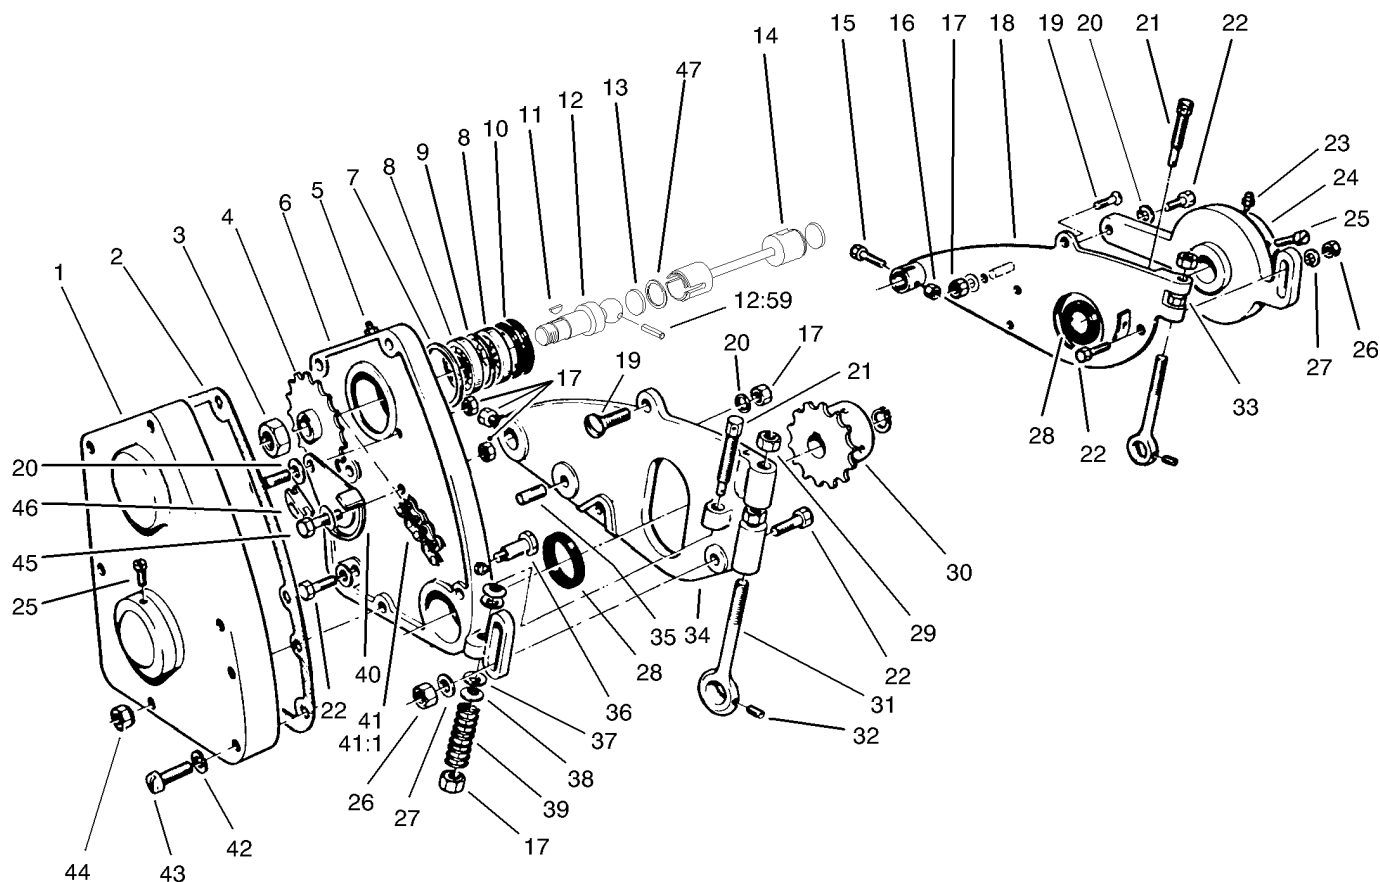

Cutting Unit Frame Assembly


Ref	Part No.	Qty.	Description
1	3-2964-01	1	Cover-Drive, Reel
2	92-4991	1	Gasket-Cover, Reel
3	3296-33	1	Nut-Lock, NI
4	88-8930	1	Sprocket
5	302-5	1	Fitting-Grease, Straight
6	3-5786-01	1	Bracket-Reel, RH
7	32120-42	1	Ring-Retaining
8	251-6	2	Bearing-Ball
9	3-3428	1	Washer
10	253-59	2	Seal-Oil
11	3-2804	1	Key-Woodruff
12	2-0039	1	Universal Driver ASM
12:59	32121-25	1	Pin-Roll
13	3-1852	2	Pad
14	3-0584-01	1	Universal Shaft ASM
15	321-9	2	Screw-HH
16	32153-4	2	Nut-Lock
17	3296-13	6	Nut-Lock NI
18	3-5783-01	1	Plate-Side, LH
19	3290-141	6	Screw-HSFH
20	3256-22	4	Washer-Flat
21	3-5793	2	Screw-Adjustment, Reel
22	329-13	4	Screw-HH
23	302-14	2	Vent

Ref	Part No.	Qty.	Description
24	3-6524-01	1	Bracket-Reel
25	3274-26	2	Screw-HSH
26	3296-3	2	Nut-Lock
27	3-5792	2	Washer
28	99-4268	2	Seal-Oil
29	3296-45	2	Nut-Lock, NI
30	3-5802	1	Sprocket-Reel
31	3-5785	2	Screw-Adjustment, Roller
32	3245-7	2	Screw-HS
33	3217-9	2	Nut-Hex
34	3-5784-01	1	Plate-Side, RH
35	3-5797	2	Spacer
36	95-1826	2	Bolt-Special
37	3-0566	4	Washer-Concave
38	3-0565	4	Washer-Convex
39	3-5787	2	Spring-Compression
40	3-0463	1	Idler Arm-Chain
41	88-8920	1	Chain-Roller
41:1	2710-31	1	Link-Connecting #35
42	3253-17	5	Washer-Lock / Sp
43	32105-5	5	Screw
44	3-3554	2	Nut-Special
45	329-3	2	Screw-HH
46	3-0554	1	Shoe-Idler, Chain

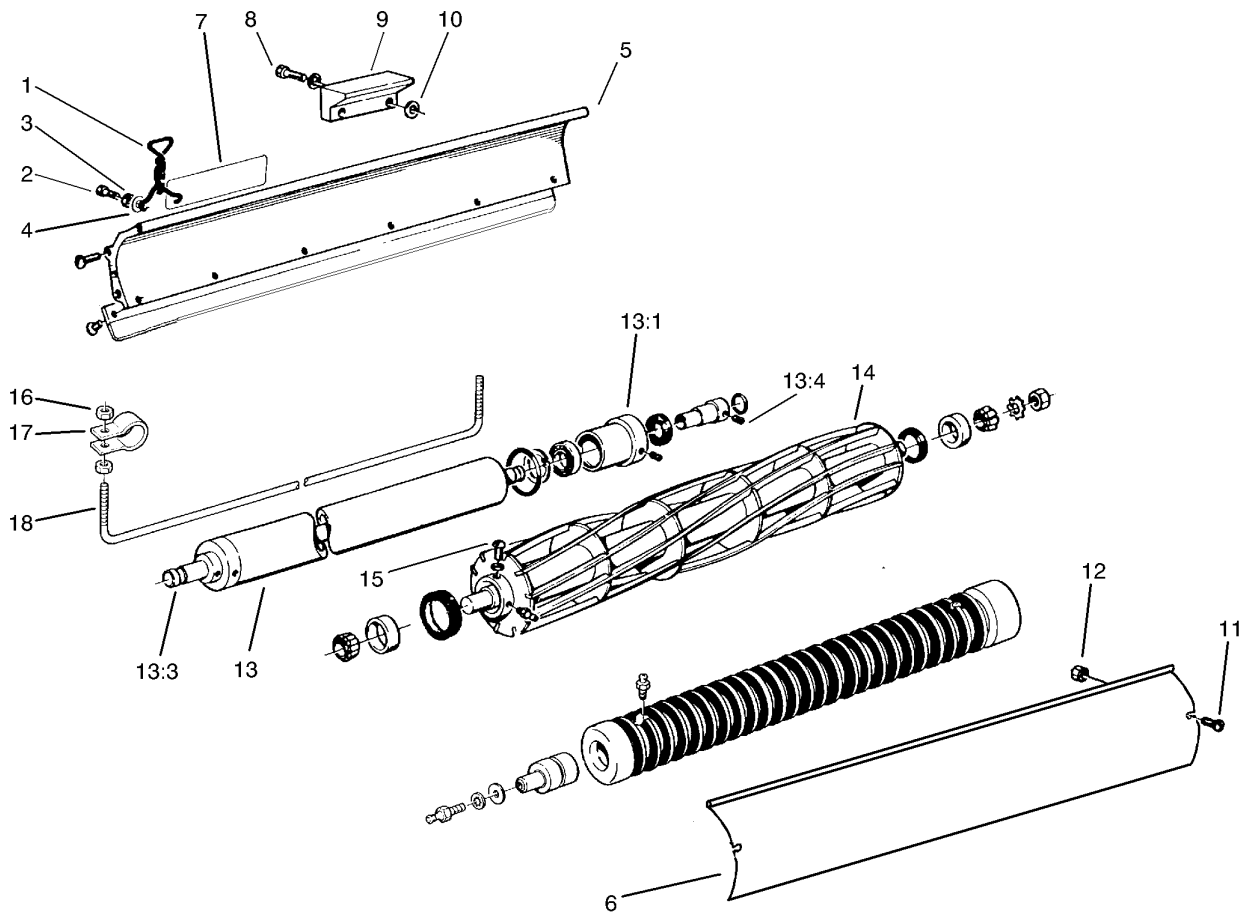


Bedknife, Reel, and Roller Assembly

Ref	Part No.	Qty.	Description				
1	92-4994	2	Chain-Lift, Reel				
2	321-2	4	Screw-HH				
3	3253-3	6	Washer-Lock				
4	3-0988	2	Bail-Lift				
5		1	Guard And Bedknife ASM				
6	3-2057-01	1	Grass Shield ASM				
7	93-6688	1	Decal-Danger, Europe				
8	321-8	2	Screw-HH				
9	3-4981-01	1	Weight				
10	3256-22	4	Washer-Flat				
11	3258-61	2	Screw				
12	3296-13	2	Nut-Lock NI				
13	39-9590	1	Roller ASM				
13:1		2	Bearing/housing ASM				
13:3	5-1422	1	Shaft-Roller, Rear				
13:4	3245-35	2	Screw-HS				
14	4-2219	1	Reel ASM				
15	3274-29	4	Screw-HSFH				
16	32149-2	4	Nut-Keps				
17	88-9010	2	Bracket-Scraper				
18	88-9020	1	Rod-Scraper				

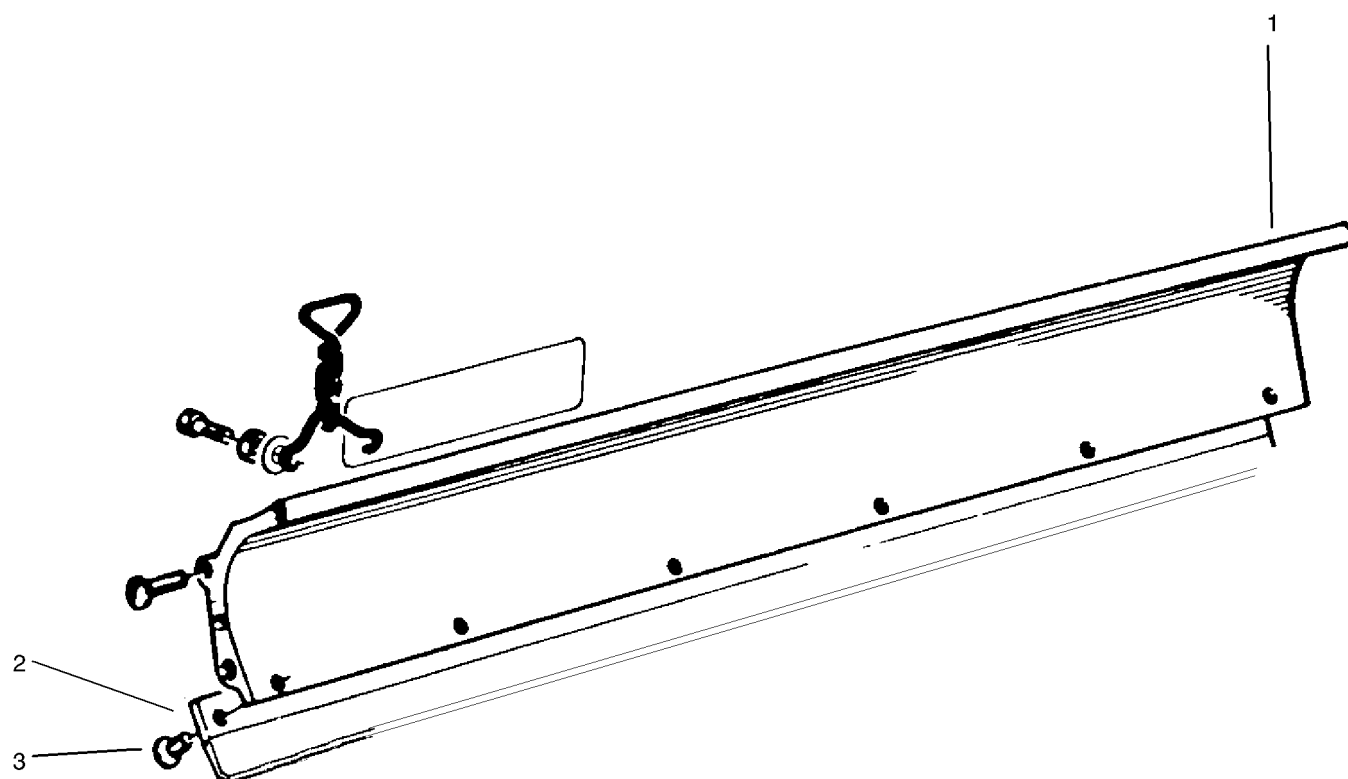


Guard and Bedknife Assembly

Ref	Part No.	Qty.	Description
1	3-0601-01	1	Guard
2	88-8990	1	Bedknife-Machined
2	88-9000	1	Bedknife-Tournament
2	95-3147	1	Bedknife-Micro Cut
3	57-4910	6	Screw-Special

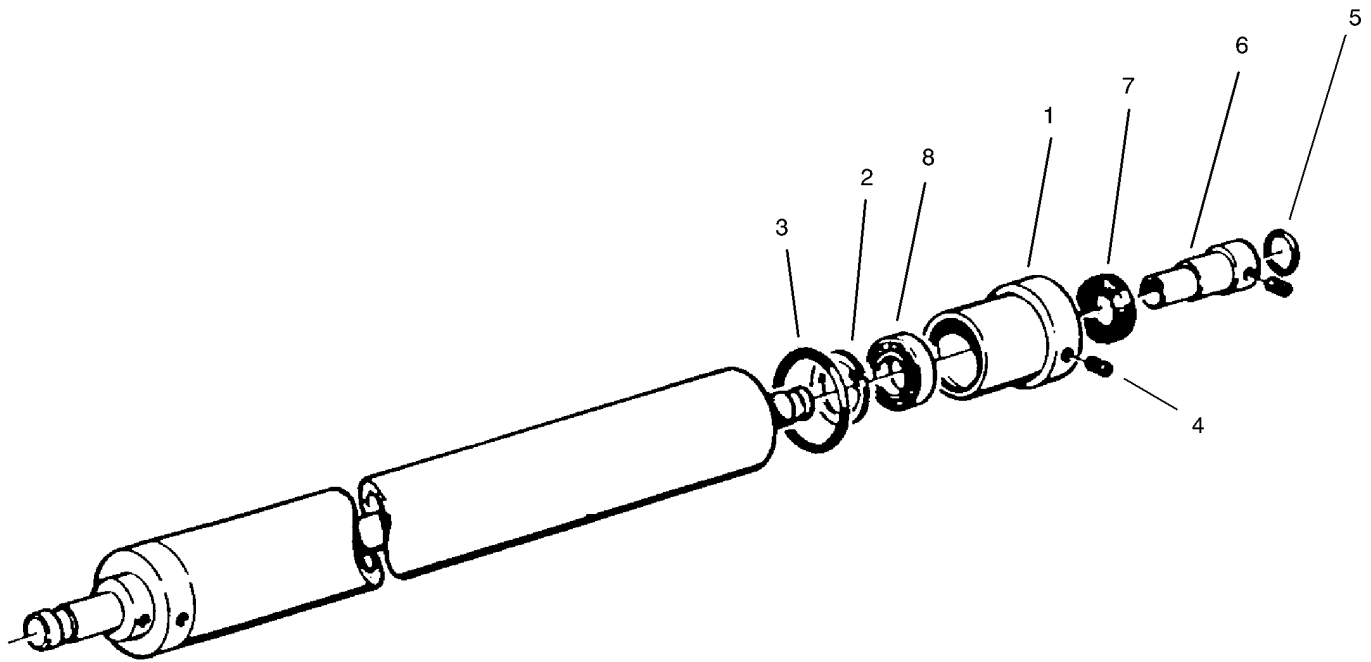




Bearing Housing Assembly for Roller Assembly No. 39-9590

Ref	Part No.	Qty.	Description				
1	5-1384	1	Housing-Bearing				
2	32151-13	1	Ring-Retaining				
3	237-68	1	O-Ring				
4	285-17	1	Plug-Pipe				
5	237-69	1	O-Ring				
6	11-3050	1	Sleeve				
7	253-118	1	Seal-Oil				
8	251-205	1	Bearing-Ball				

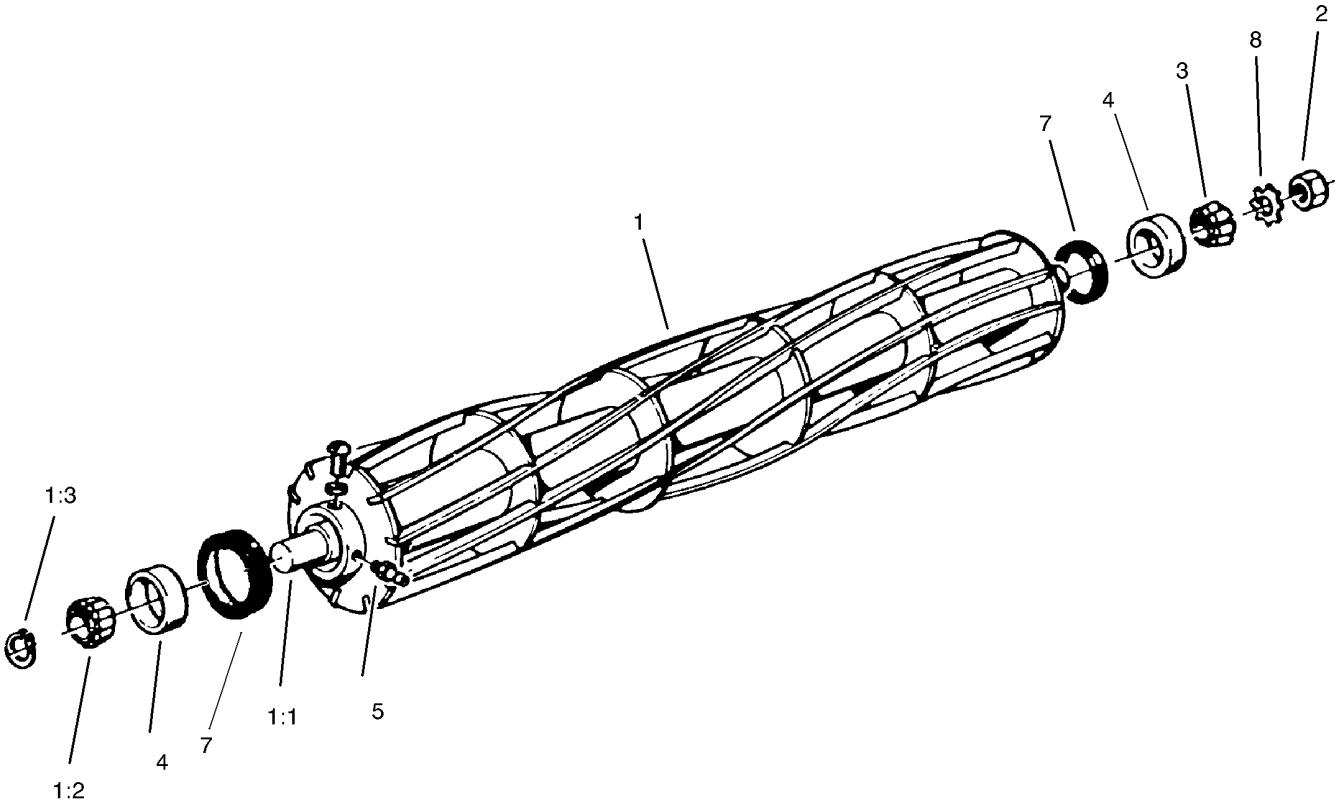


Real and Bearing Assembly No. 4-2219

Ref	Part No.	Qty.	Description				
1		1	Reel Shaft ASM				
1:1	5-1393	1	Shaft-Reel				
1:3	32151-12	1	Ring-Retaining				
1:2	254-68	1	Cone-Bearing, Roller				
2	254-86	1	Locknut				
3	254-68	1	Cone-Bearing, Roller				
4	254-67	2	Cup-Bearing, Roller				
5	302-5	2	Fitting-Grease, Straight				
7	253-120	2	Seal-Oil				
8	254-87	1	Washer-Lock				

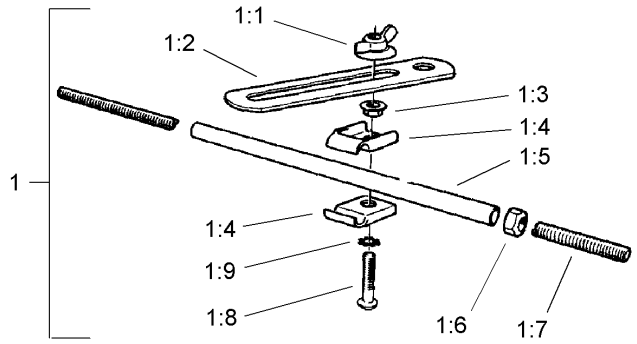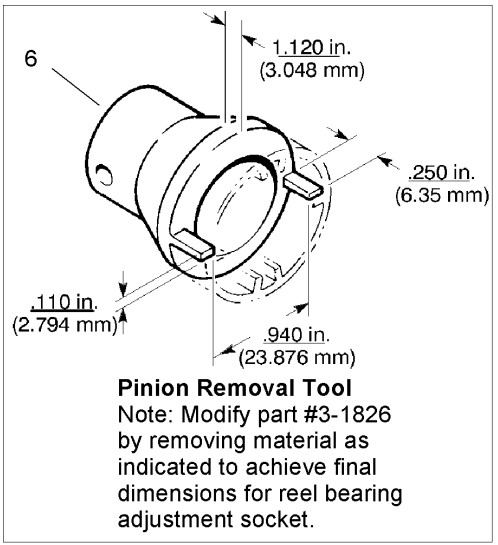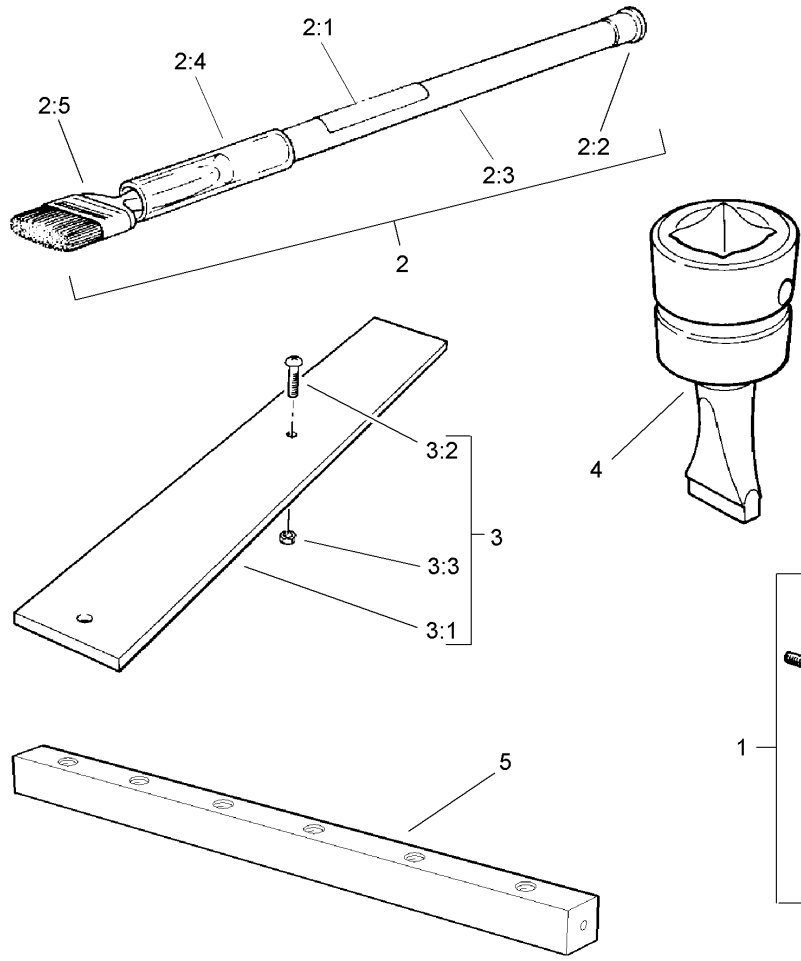


Special Tools

Ref	Part No.	Qty.	Description				
❶1	TOR200120	1	Alignment Tool Assembly				
❷1:1		1	Nut-Wing				
❷1:2		1	Bracket-Alignment				
1:3	32128-20	1	Nut-HF				
1:4	3-6657	2	Clip-Skid				
❷1:5		1	Tube				
1:6	3219-2	1	Nut-Hex				
❷1:7		1	Rod				
1:8	32122-35	1	Screw-Head, Truss				
1:9	3255-8	1	Washer-Lock				
❸2	TOR299100	1	Backlapping Brush Assembly				
2:1	12-9140	1	Decal				
2:2	2410-18	1	Plug				
2:3	29-9080	1	Handle				
2:4	29-9090	1	Hose-Handle				
2:5	36-4310	1	Brush				
❹3	TOR138199	1	Guage Bar Assembly				
3:1	65-8320	1	Bar-Height Of Cut				
3:2	32122-2	1	Screw-Head, Round				
3:3	3219-14	1	Nut-Hex				
❺4	TOR510880	1	Tool-Bedknife Screw				
❻5	TOR31397	1	Bar-Grinding, Bed Knife				
❻6	TOR31826	1	Socket-Adjustment, Reel Bearing				

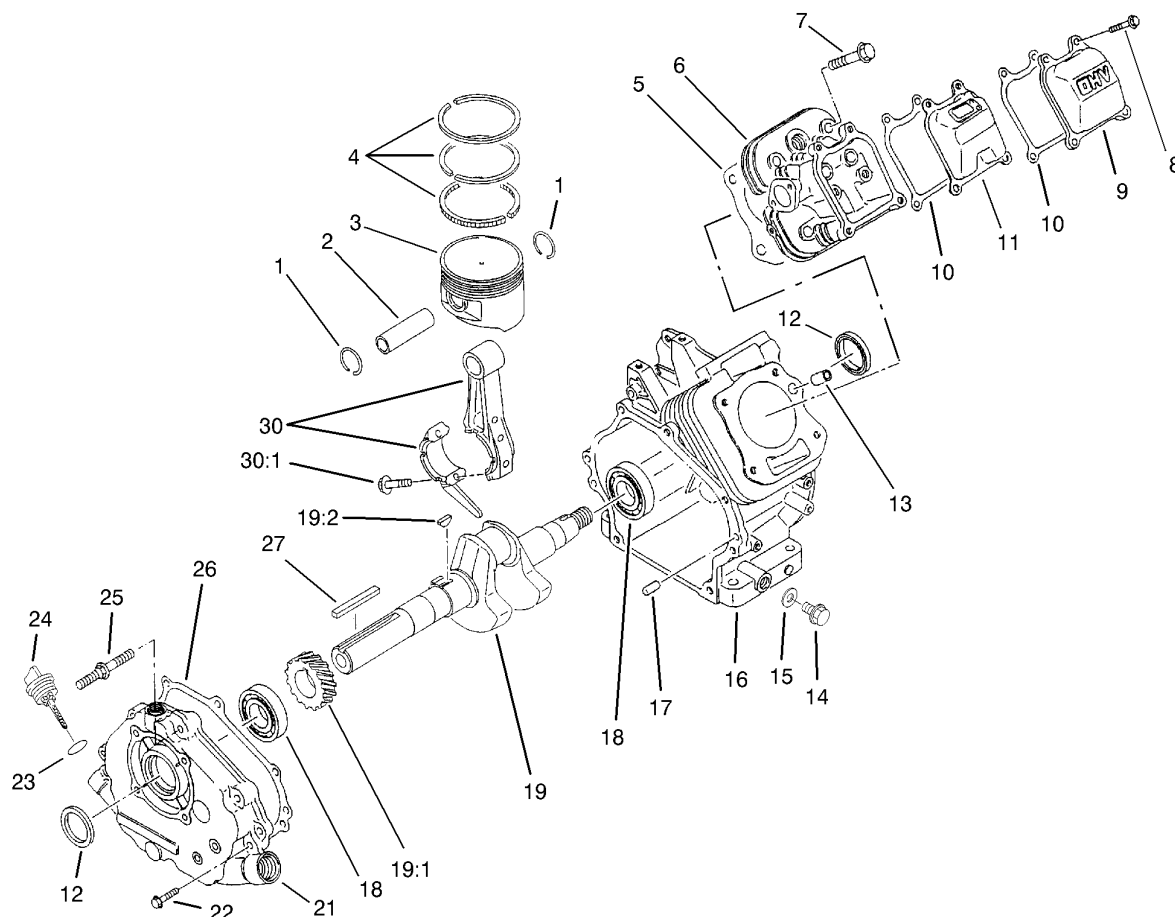


Crankcase Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	93-8500	2	Ring-Retaining	22	93-8521	7	Bolt-Flanged
2	93-8501	1	Pin-Piston	23	94-9041	2	O-Ring
3	93-8502	1	Piston	24	93-8523	2	Cap-Filter, Oil
3	94-6836	1	Piston-0.5 O/s	25	93-8524	1	Stud
4	93-8503	1	Set-Ring, Piston	26	93-8525	1	Gasket-Crankcase
4	94-6837	1	Set-Ring, Piston (.05mm)	27	93-8526	1	Key
5	93-8504	1	Gasket-Head	30	93-8528	1	Connecting Rod ASM
6	93-8505	1	Head-Cylinder	30:1	93-8527	2	Bolt-Rod
7	93-8506	4	Bolt-Flanged				
8	94-6838	4	Bolt-Flanged				
9	93-8508	1	Case-Rocker				
10	93-8509	2	Gasket-Rocker				
11	93-8510	1	Breather				
12	93-8511	2	Seal-Oil				
13	93-8512	2	Pin				
14	93-8513	2	Plug-Drain				
15	93-8514	2	Gasket-Plug, Drain				
16	93-8515	1	Crankcase				
17	93-8516	2	Pin				
18	93-8517	2	Bearing-Ball				
19	93-8696	1	Crankshaft ASM				
19:1	94-9043	1	Gear-Helical				
19:2	93-8526	1	Key				
21	93-8697	1	Cover-Crankcase				

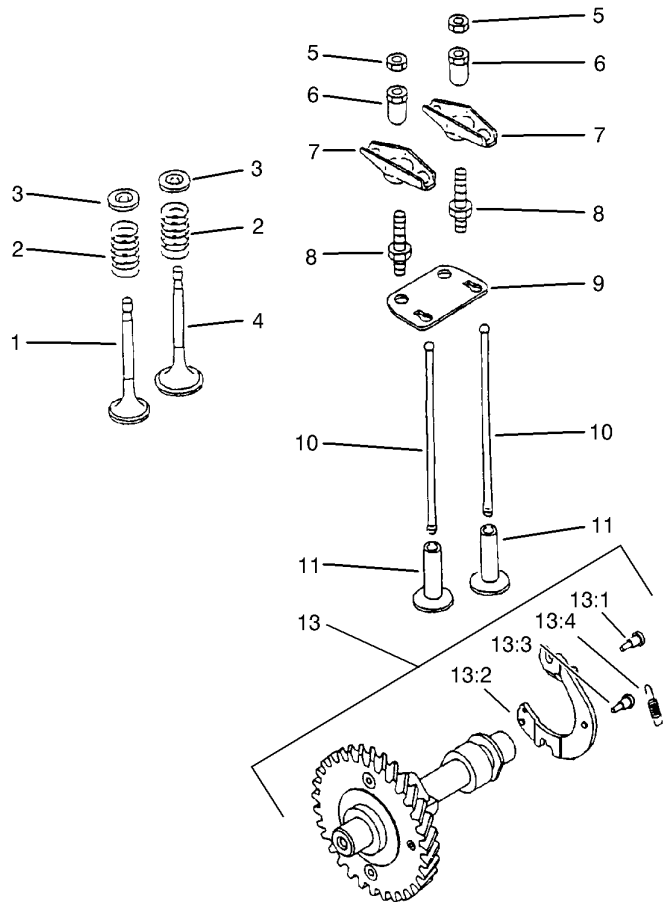

Camshaft and Valve Assembly


Ref	Part No.	Qty.	Description				
1	93-8529	1	Valve-Exhaust				
2	93-8530	2	Spring-Valve				
3	93-8531	2	Retainer-Spring				
4	93-8532	1	Valve-Intake				
5	93-8533	2	Nut				
6	93-8534	2	Nut				
7	93-8535	2	Arm-Rocker				
8	93-8536	2	Bolt				
9	93-8537	1	Guide				
10	93-8538	2	Rod-Push				
11	93-8539	2	Tappet				
13	93-8699	1	Camshaft ASM				
13:1	93-8540	2	Pin				
13:2	93-8543	1	Decompressor				
13:3	93-8542	1	Pin				
13:4	93-8541	1	Spring				

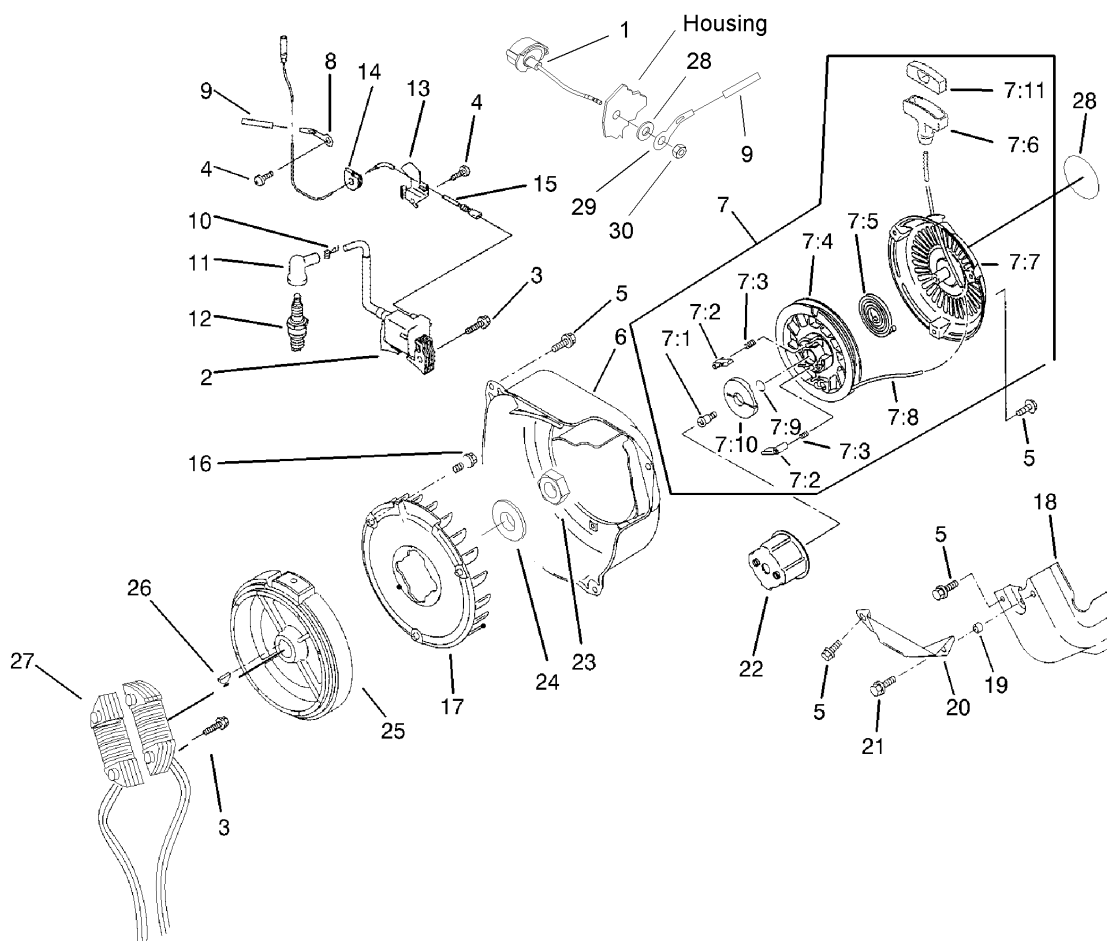

Ignition Assembly

Ref	Part No.	Qty.	Description
1	107-7606	1	Sealed Switch ASM
2	94-9031	1	Ignition Coil ASM
3	93-8548	6	Bolt-Flanged
4	93-8549	1	Screw
5	93-8550	10	Bolt-Flanged
6	107-7607	1	Housing-Fan
7	93-8552	1	Recoil Starter ASM
7:1	93-8553	1	Screw
7:2	93-8554	2	Pawl-Recoil
7:3	93-8555	2	Spring-Return
7:4	93-8556	1	Reel-Recoil
7:5	93-8557	1	Spring
7:6	94-9045	1	Grip-Starter, Recoil
7:7	94-9046	1	Case-Recoil
7:8	93-8560	1	Rope
7:9	93-8561	1	Ring-Retaining
7:10	93-8562	1	Guide-Pawl
7:11	94-9044	1	Cap-Grip
8	94-9039	1	Clamp
9	94-9040	2	Tube
10	94-9049	1	Spring-Terminal
11	93-8585	1	Cap-Plug, Spark
12	93-8584	1	Spark Plug
13	93-8583	1	Clamp


Ref	Part No.	Qty.	Description
14	107-7608	1	Grommet
15	94-9038	1	Wire-Lead
16	94-6840	3	Bolt-Flanged
17	93-8572	1	Fan
18	93-8563	1	Shroud-Engine
19	93-8564	1	Collar
20	93-8565	1	Shroud-Engine
21	93-8566	1	Bolt-Flanged
22	93-8567	1	Pulley-Recoil
23	93-8568	1	Nut
24	93-8569	1	Washer
25	99-6237	1	Flywheel ASM
26	93-8571	1	Key
27	99-4267	1	Coil-Lighting
28	33094-00	1	Washer-Flat
29	107-7609	1	Clamp
30	33014-00	1	Nut-Hex

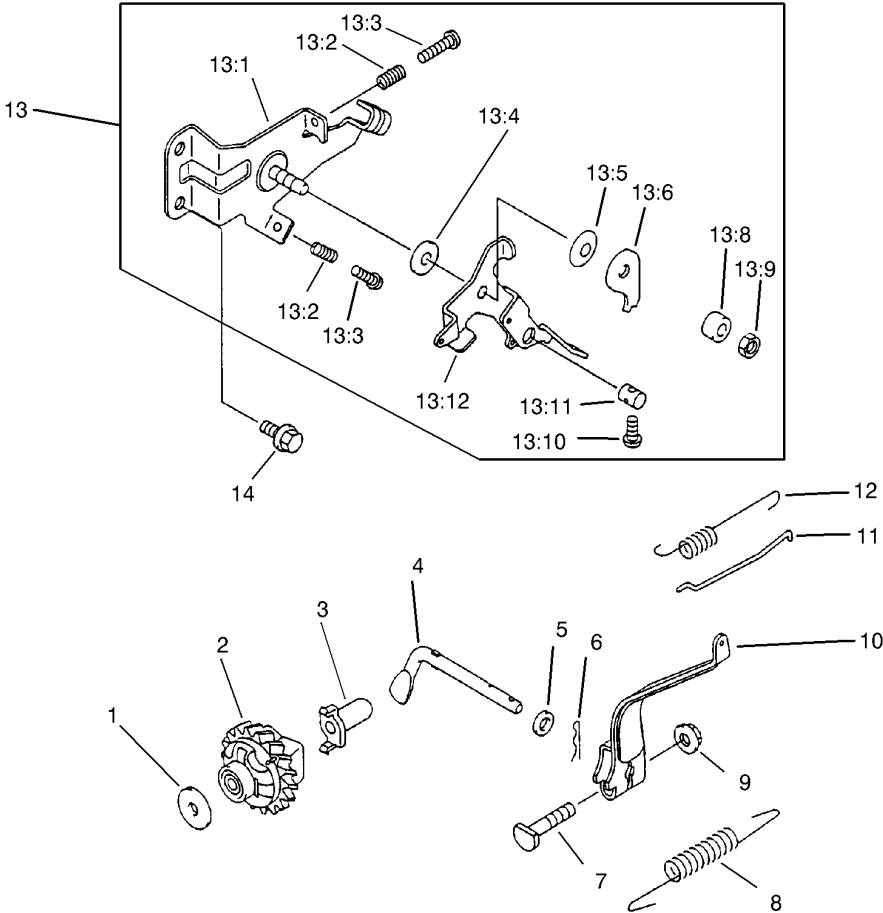

Governor Assembly

Ref	Part No.	Qty.	Description
1	94-6842	1	Washer
2	94-6841	1	Governor ASM
3	93-8610	1	Sleeve
4	93-8609	1	Arm-Pivot
5	93-8608	1	Washer
6	93-8607	1	Pin-Snap
7	93-8606	1	Bolt
8	94-9030	1	Spring-Governor
9	93-8631	1	Nut
10	93-8603	1	Arm-Governor
11	93-8602	1	Rod-Governor
12	93-8601	1	Spring
13	93-8599	1	Control ASM
13:1	93-8587	1	Bracket
13:2	93-8588	2	Spring
13:3	93-8589	2	Bolt
13:4	93-8590	1	Washer
13:5	93-8591	1	Spring
13:6	93-8592	1	Plate
13:8	93-8594	1	Spacer
13:9	93-8595	1	Nut
13:10	93-8596	1	Screw-Head, Pan
13:11	93-8597	1	Nut
13:12	93-8598	1	Lever


Ref	Part No.	Qty.	Description
14	93-8600	2	Bolt-Flanged

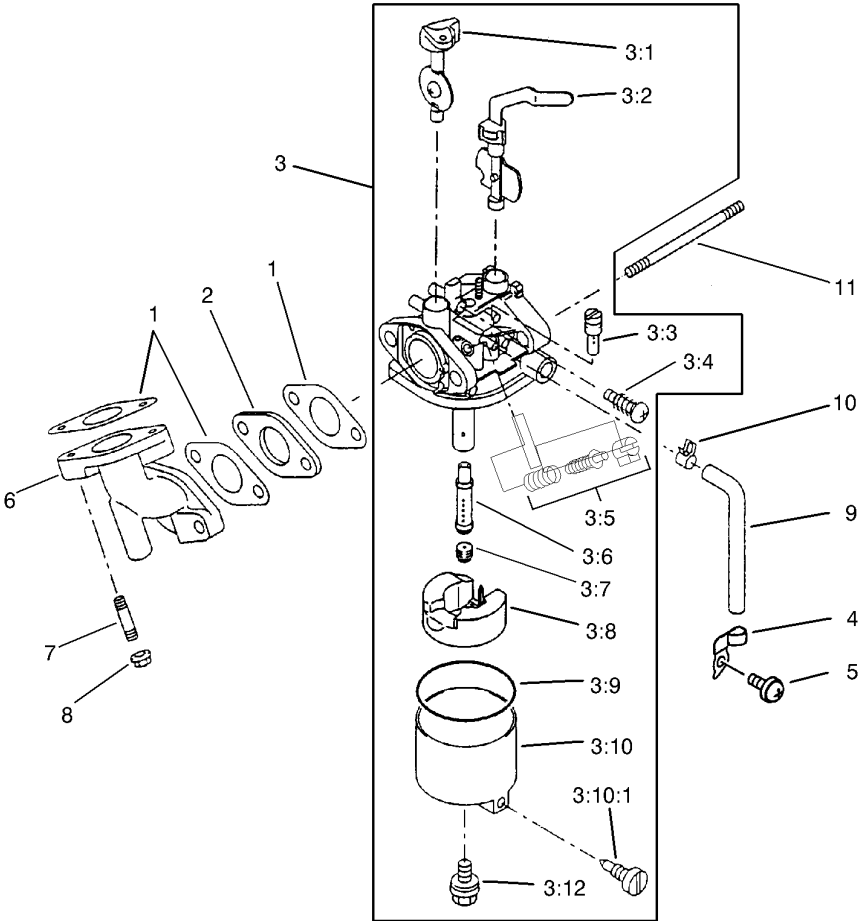

Carburetor Assembly


Ref	Part No.	Qty.	Description
1	93-8613	3	Gasket
2	94-9048	1	Insulator
3	94-9032	1	Carburetor ASM
3:1	94-9033	1	Throttle Valve ASM
3:2	93-8617	1	Valve-Choke
3:3	94-9037	1	Jet-Pilot, #40
3:4	93-8619	1	Screw ASM
3:5	94-9034	1	Limiter
3:6	94-9035	1	Nozzle-Main
3:7	94-9036	1	Jet-Main, #65
3:7	98-8736	1	Jet-Main, #60 High Alt
3:7	98-8735	1	Jet-Main, #62 High Alt
3:8	94-6844	1	Float ASM
3:9	93-8624	1	Gasket
3:10	93-8625	1	Float Chamber ASM
3:10:1	93-8626	1	Screw ASM
3:12	93-8627	1	Bolt
4	94-6846	1	Clamp
5	94-6845	1	Screw
6	93-8633	1	Pipe-Intake
7	93-8632	2	Bolt-Stud
8	93-8631	2	Nut
9	93-8630	1	Tube
10	93-8629	1	Clamp

Ref	Part No.	Qty.	Description
11	93-8628	1	Bolt-Stud

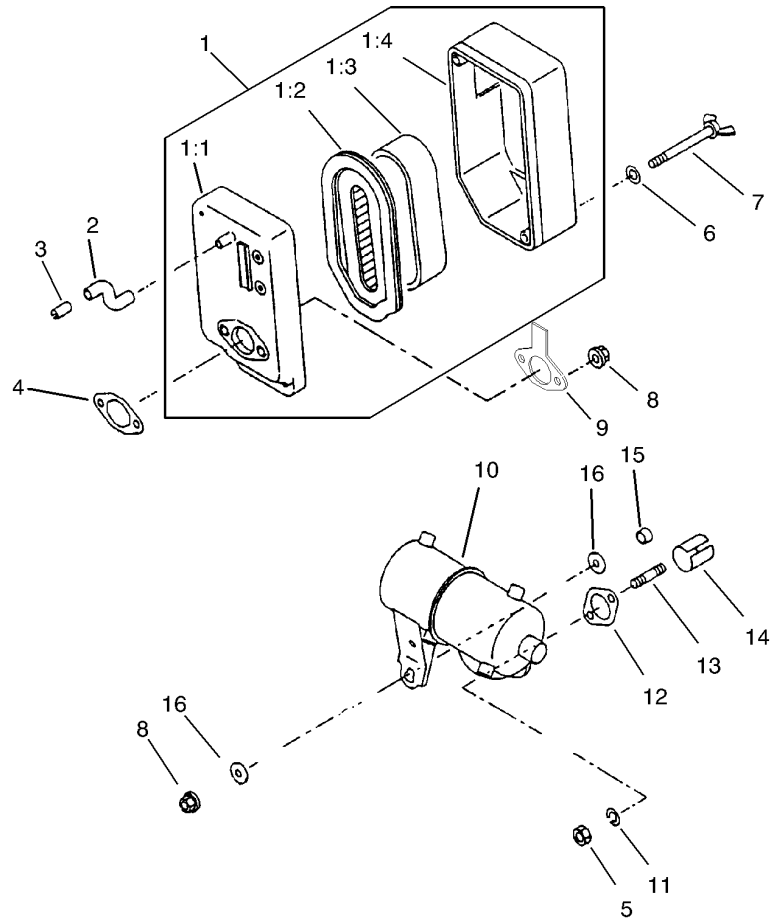

Air Cleaner and Muffler Assembly


Ref	Part No.	Qty.	Description				
1	93-8634	1	Air Filter ASM				
1:1	93-8635	1	Case Filter ASM				
1:2	93-8636	1	Element-Filter, Air				
1:3	93-8637	1	Element-Filter, Air				
1:4	93-8638	1	Cap-Filter, Air				
2	93-8659	1	Tube				
3	93-8658	1	Pipe				
4	93-8657	1	Gasket-Filter, Air				
5	93-8656	2	Nut-Hex				
6	93-8639	2	Washer				
7	93-8640	2	Bolt				
8	93-8631	3	Nut				
9	93-8642	1	Plate-Filter, Air				
10	98-3427	1	Muffler				
11	93-8655	2	Washer-Spring				
12	93-8654	1	Gasket-Muffler				
13	94-6848	2	Bolt-Stud				
14	93-8652	1	Pipe-Exhaust				
15	93-8651	1	Collar				
16	93-8650	2	Washer				

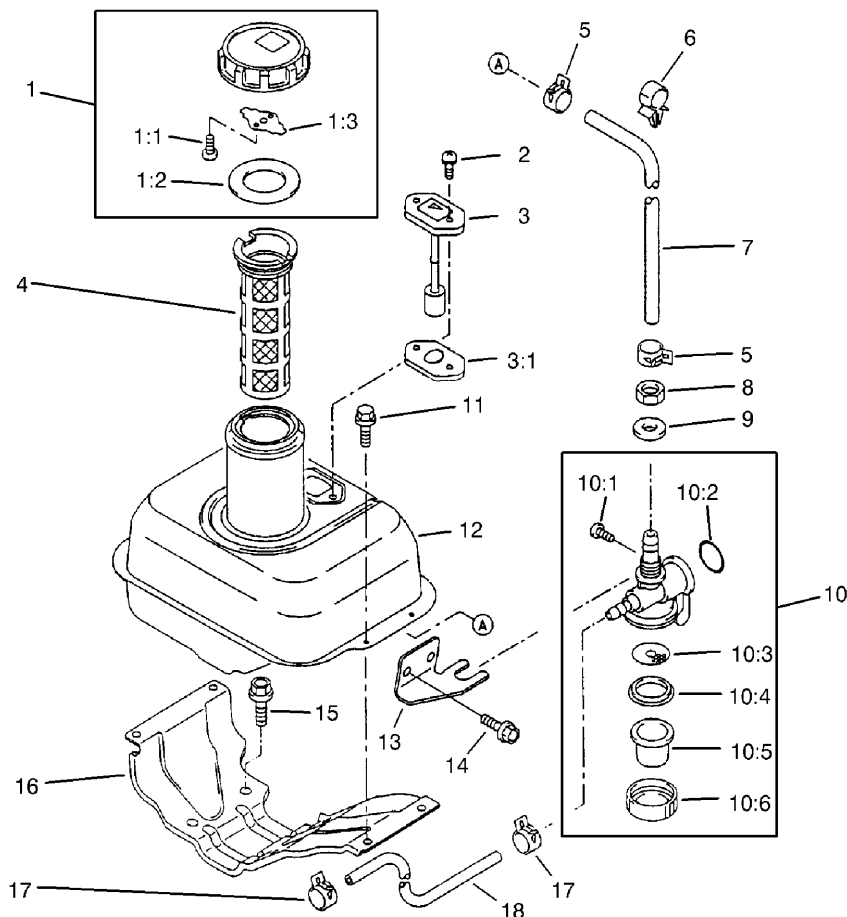

Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	93-8660	1	Fuel Cap ASM
1:1	93-8661	2	Screw
1:2	93-8662	1	Gasket
1:3	93-8663	1	Spring
2	93-8686	2	Screw
3	93-8685	1	Gauge-Fuel
3:1	104-2384	1	Gasket-Gauge, Fuel
4	94-6826	1	Filter-Fuel
5	93-8664	2	Clamp
6	93-8665	1	Clamp
7	93-8666	1	Tube
8	94-9042	1	Nut
9	93-8668	1	Washer
10	93-8669	1	TAP ASM
10:1	93-8670	1	Screw
10:2	93-8671	1	O-Ring
10:3	94-6849	1	Filter-TAP
10:4	93-8673	1	Gasket
10:5	93-8674	1	Cup-TAP
10:6	93-8675	1	Nut
11	94-6838	4	Bolt-Flanged
12	104-2382	1	Tank-Fuel
13	93-8681	1	Bracket
14	93-8680	2	Bolt-Flanged

Ref	Part No.	Qty.	Description
15	94-6825	4	Bolt-Flanged
16	104-2383	1	Bracket-Tank
17	93-8676	2	Clamp
18	93-8677	1	Tube

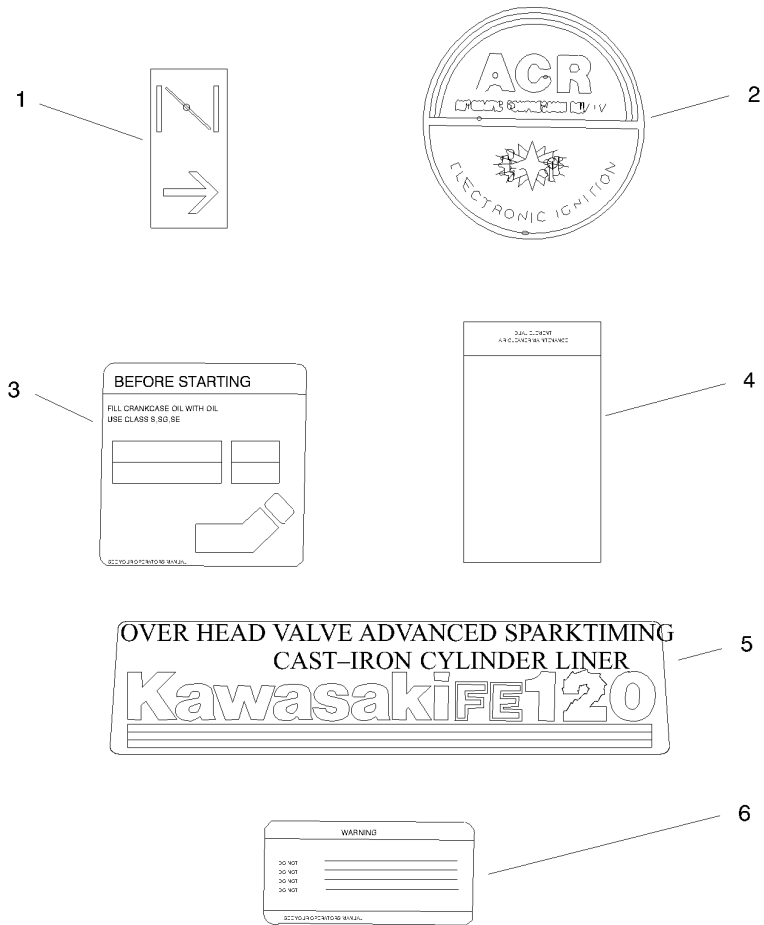

Engine Decals

Ref	Part No.	Qty.	Description				
1	93-8687	1	Decal-Choke				
2	94-9027	1	Label-Recoil				
3	93-8689	1	Decal-Instructions				
4	93-8690	1	Decal-Maintenance				
5	94-9028	1	Label-Kawasaki				
6	93-8692	1	Decal-Warning				

Attachments and Accessories

For 04130 - Greensmaster 500

Product Name	Model/Part
Light Kit	04058
11-Blade Reel Mower	04215
Wiehle Roller Kit, Rear Cutting Unit	100-1556
Brush Kit	22949
Sectional Roller Kit	4-7319
Skid Kit	47299
Full Roller Kit	47309
Bedknife	88-8990
Bedknife-Micro Cut	95-3147
Spark Arrester Kit	98-3426
Jet-Main, #62 High Altitude	98-8735
Jet-Main, #60 High Altitude	98-8736

NOTES

NOTES

