



Conversion Kit Z200 to Z500 DFS Bagger

Model No. 107-7650

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR.	as required	HYD.	hydraulic
ASM.	assembly	INC.	incorporated
CARR.	carriage	LH.	left hand
DEG.	degrees	NI.	nylon insert
FH.	flat head	PPH.	phillips pan head
GA.	gauge	PTH.	phillips truss head
HF.	hex flange	PTO.	power take off
HH.	hex head	RH.	right hand
HHF.	hex head flange	SFH.	slotted fillister head
HHFTF.	hex head flange thread forming	SHH.	slotted hex head
HJ.	hex jam	SHWH.	slotted hex washer head
HLH.	hex lag head	SPH.	slotted pan head
HOC.	height-of-cut	SQH.	square head
HS.	hex	SRH.	slotted round head
HSBH.	hex socket button head	STD.	standard
HSFH.	hex socket flat head	TAP.	self tapping
HSH.	hex socket head	TTH.	torx truss head
HWH.	hex washer head	WH.	wing head
HWHTF.	hex washer head thread forming		

Footnotes

- ❶ Not illustrated
- ❷ For Liquid Cooled Models only.

Contents


Description	Page
Handle Assembly 3
Tube and Counterweight Assembly 4

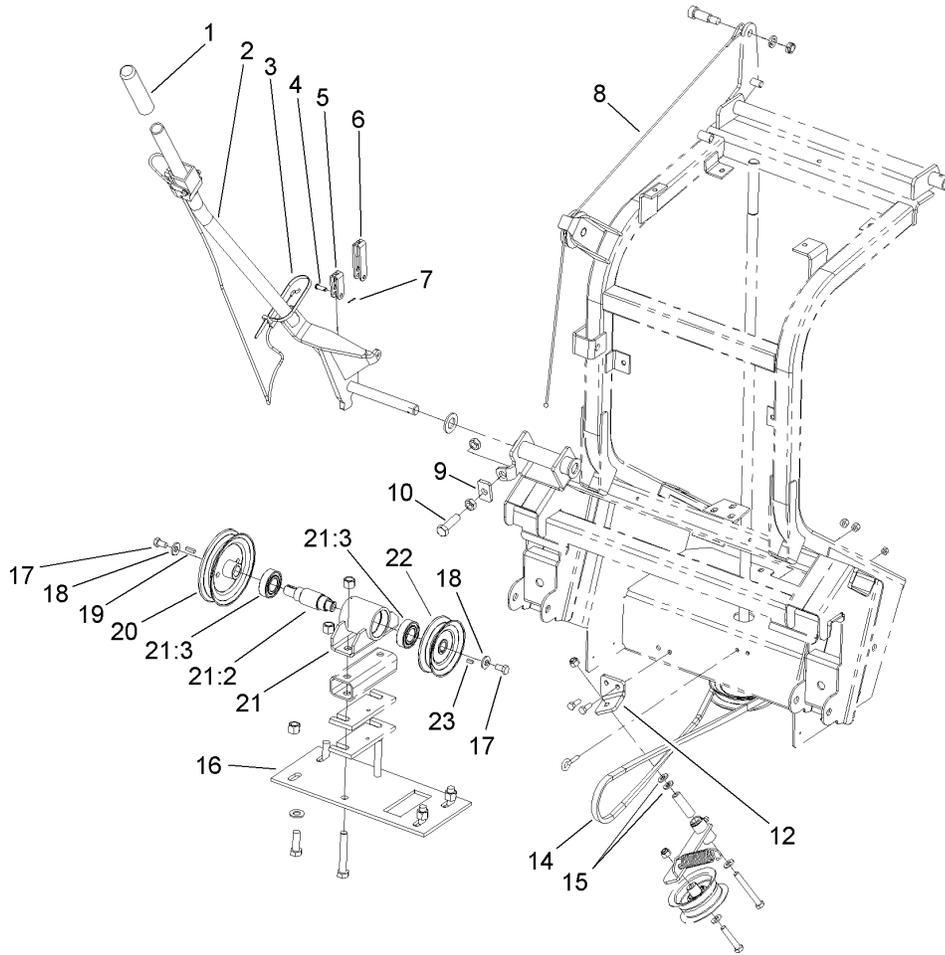

Handle Assembly

Ref	Part No.	Qty.	Description
1	104-9838	1	Grip-Foam
2	106-8955-03	1	Dump Arm ASM
3	3290-378	2	Tie-Cable
4	9321204	1	Pin-Clevis
5	108145	1	Clevis-Short
6	108143	1	Clevis-Long
7	3272-1	1	Pin-Cotter
8	107-3078	1	Cable
9	107-3091	1	Plate-Stop
10	325-7	1	Screw-HH
11	107-3082	1	Template-Idler Mount
12	107-7698-03	1	Bracket, Idler Mount
13	107-1771	1	Template-Spring Mount
14	107-1753	1	V-Belt
15	3256-24	2	Washer-Flat
16	107-1774-03	1	Plate-Support
17	323-34	2	Screw-HH
18	98-5975	2	Washer-Belleville
19	10-8040	1	Key-Square
20	107-1772	1	Pulley-Driven
21	107-1752	1	Housing ASM
21:2	107-1751	1	Shaft-Pulley, Driven
21:3	104-6325	2	Bearing
22	105-7782	1	Pulley-Driven

Ref	Part No.	Qty.	Description
23	107-1778	1	Key-Square

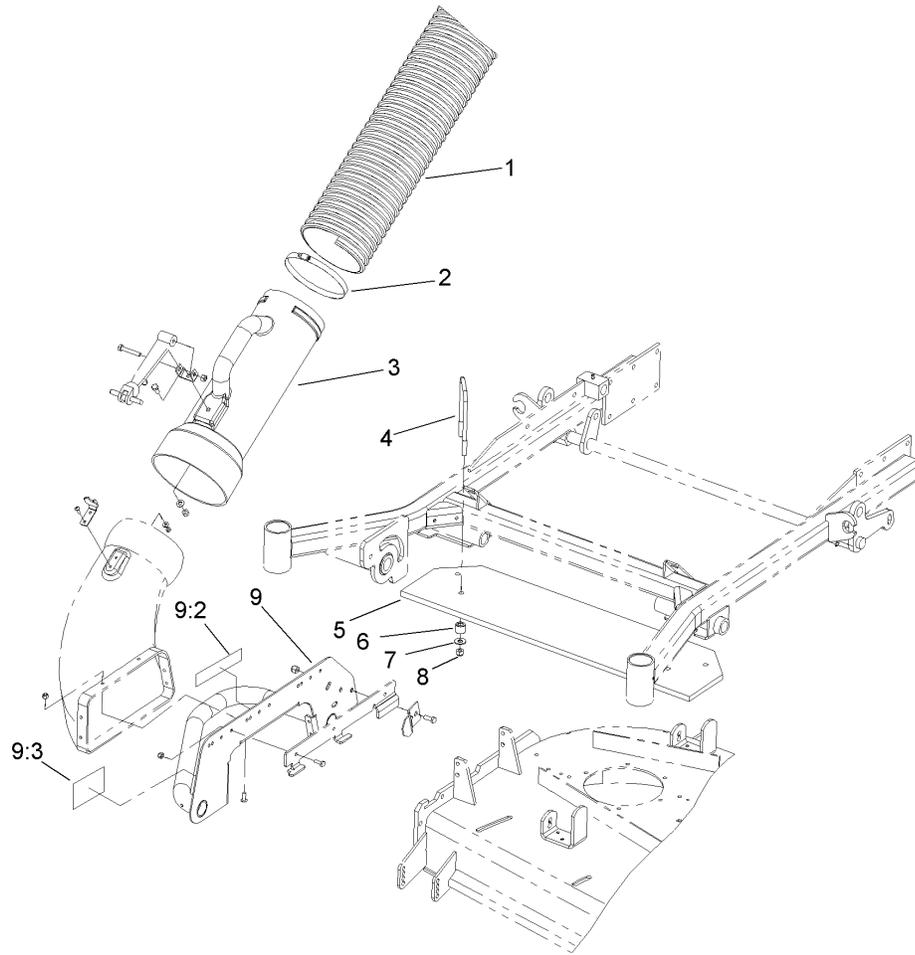

Tube and Counterweight Assembly

Ref	Part No.	Qty.	Description
1	106-9748	1	Hose-Flexible
2	102528	1	Clamp
3	105-7793	1	Tube-Handle
4	100-2339	2	U-Bolt
5	107-9854-01	1	Bar-Weight
6	100-7123	4	Spacer-Bedbar
7	3256-4	4	Washer-Flat
8	3296-39	4	Nut-Lock, NI
9	107-1770	1	Mouting Plate ASM
9:2	104-8569	1	Decal-Warning
9:3	106-3339	1	Decal-Warning

--	--	--	--

NOTES

NOTES

NOTES

