



Backlap/Reel Speed Kit Greensmaster® 3150/3200/3250-D

Model No. 04498

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


| | | | |
|-------------|--------------------------------|------------|-------------------------|
| AR. | as required | HYD. | hydraulic |
| ASM. | assembly | INC. | incorporated |
| CARR. | carriage | LH. | left hand |
| DEG. | degrees | NI. | nylon insert |
| FH. | flat head | PPH. | phillips pan head |
| GA. | gauge | PTH. | phillips truss head |
| HF. | hex flange | PTO. | power take off |
| HH. | hex head | RH. | right hand |
| HHF. | hex head flange | SFH. | slotted fillister head |
| HHFTF. | hex head flange thread forming | SHH. | slotted hex head |
| HJ. | hex jam | SHWH. | slotted hex washer head |
| HLH. | hex lag head | SPH. | slotted pan head |
| HOC. | height-of-cut | SQH. | square head |
| HS. | hex | SRH. | slotted round head |
| HSBH. | hex socket button head | STD. | standard |
| HSFH. | hex socket flat head | TAP. | self tapping |
| HSH. | hex socket head | TTH. | torx truss head |
| HWH. | hex washer head | WH. | wing head |
| HWHTF. | hex washer head thread forming | | |

Footnotes

- ❶ Not illustrated
- ❷ See following pages
- ❸ Not serviced separately

Contents


| Description | Page |
|--|---------|
| Greensmaster 3250 Backlap Kit Assembly | 3 |
| Greensmaster 3150 Backlap Kit Assembly | 4 |
| Valve Kit Assembly | 5 |
| Backlap Brush Assembly No. 29-9100 | 6 |

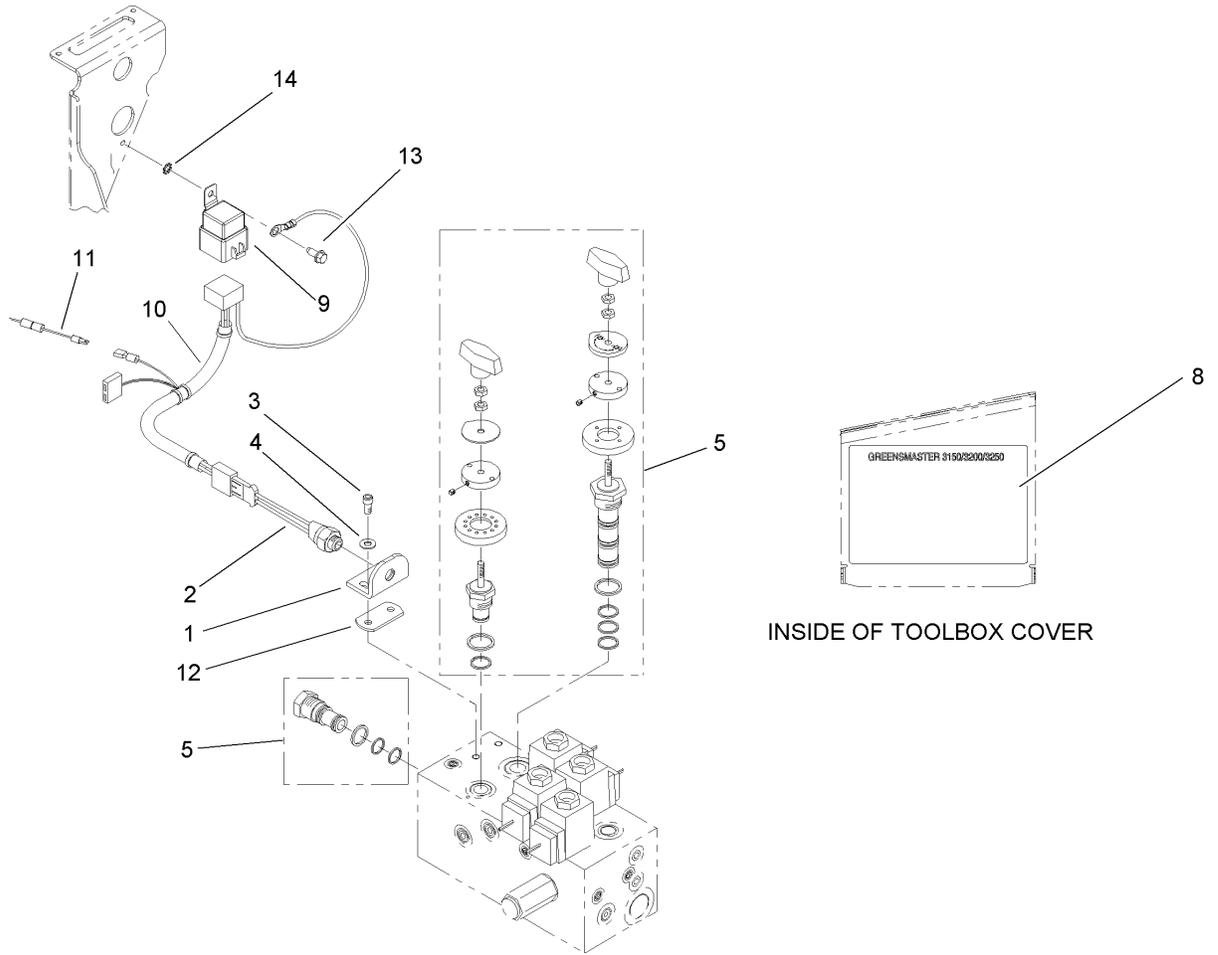

Greensmaster 3150 Backlap Kit Assembly

| Ref | Part No. | Qty. | Description |
|-----|----------|------|----------------------------|
| 1 | 94-1357 | 1 | Bracket-Backlap |
| 2 | 72-4320 | 1 | Switch-Ball, N.o. |
| 3 | 3274-15 | 2 | Screw-HSH |
| 4 | 3256-22 | 2 | Washer-Flat |
| 5 | 107-2585 | 1 | Valve Kit |
| 7 | 29-9100 | 1 | Brush And Handle ASM |
| 8 | 105-8324 | 1 | Decal-Backlap Instructions |
| 9 | 70-1480 | 1 | Relay |
| 10 | 95-2905 | 1 | Backlap Harness Kit |
| 11 | 95-2906 | 1 | Wire-Jumper |
| 12 | 107-2572 | 1 | Plate-Spacer |
| 13 | 32144-10 | 1 | Screw-HWH |
| 14 | 3255-7 | 1 | Washer-Lock |

| | | | |
|--|--|--|--|
| | | | |
|--|--|--|--|

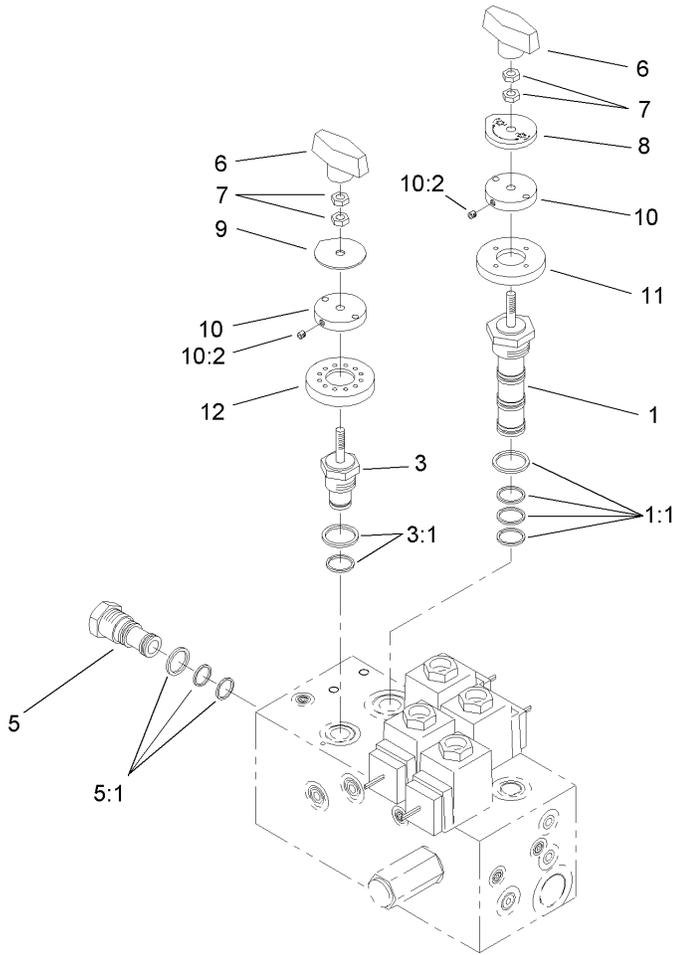

Valve Kit Assembly

| Ref | Part No. | Qty. | Description |
|------|----------|------|------------------------|
| 1 | 94-3657 | 1 | Spool ASM |
| 1:1 | 106-1091 | 1 | Seal Kit |
| 3 | 94-8175 | 1 | Control-Flow, Rotary |
| 3:1 | 106-1090 | 1 | Seal Kit |
| 5 | 95-5634 | 1 | Cartridge-Logic, Spool |
| 5:1 | 95-5641 | 1 | Seal Kit |
| 6 | 94-5020 | 2 | Knob ASM |
| 7 | 3218-1 | 4 | Nut-Jam |
| 8 | 99-3543 | 1 | Plate-Indicator |
| 9 | 94-5026 | 1 | Plate-Indicator |
| 10 | 107-2596 | 2 | Plate-Detent |
| 10:2 | 3245-36 | 1 | Screw-HSH |
| 11 | 94-5021 | 1 | Plate-Locating |
| 12 | 94-5025 | 1 | Plate-Locating |

| | | | |
|--|--|--|--|
| | | | |
|--|--|--|--|

NOTES

