

## Backlap/Reel Speed Kit Greensmaster® 3150/3200/3250-D

Model No. 04498

### **Parts Catalog**

### **Ordering Replacement Parts**

To order replacement parts, please supply the part number, the quantity, and the description of each part desired

### **Understanding Reference Numbers**

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### **Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

### **Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2003 All Rights Reserved

## **Part Description Abbreviations**

Part descriptions in this catalog may include the following abbreviations.

HYD hydraulic
INCincorporated
LH left hand
NI nylon insert
PPH phillips pan head
PTH phillips truss head
PTO power take off
RH right hand
SFH slotted fillister head
SHH slotted hex head
SHWH slotted hex washer head
SPH slotted pan head
SQHsquare head
SRH slotted round head
STD standard
TAP self tapping
TTH torx truss head
WHwing head

### **Footnotes**

Not illustrated


See following pages

### **Contents**

Description	Page
Greensmaster 3250 Backlap Kit Assembly	3
Greensmaster 3150 Backlap Kit Assembly	4
Valve Kit Assembly	5
Backlap Brush Assembly No. 29-9100	6

Not serviced separately


3351-345

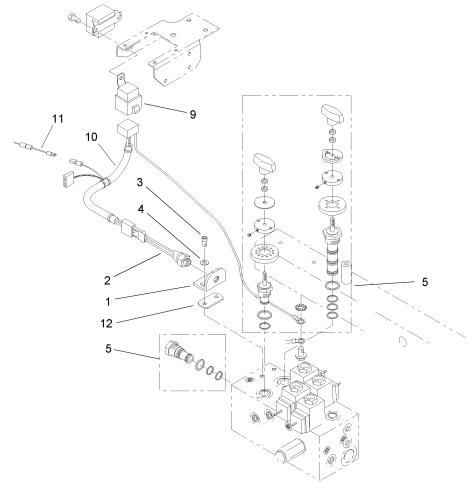

# Greensmaster 3250 Backlap Kit Assembly

Ref	Part No.	Qty.	Description	
1	94-1357	1	Bracket-Backlap	
2	72-4320	1	Switch-Ball, N.o.	
3	3274-15	2	Screw-HSH	
4	3256-22	2	Washer-Flat	
<b>26</b> 5		1	Valve Kit	
<b>06</b> 7	29-9100	1	Brush And Handle ASM	
9	70-1480	1	Relay	
10	95-2905	1	Backlap Harness Kit	
11	95-2906	1	Wire-Jumper	
12	107-2572	1	Plate-Spacer	


3351-345

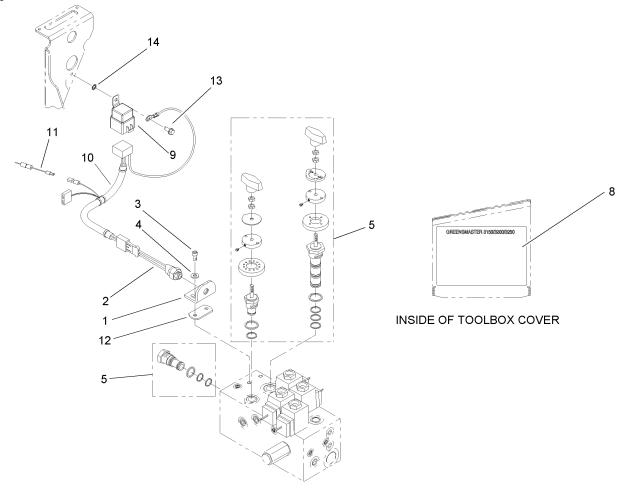

## **Greensmaster 3150 Backlap Kit Assembly**

Ref	Part No.	Qty.	Description
1	94-1357	1	Bracket-Backlap
2	72-4320	1	Switch-Ball, N.o.
3	3274-15	2	Screw-HSH
4	3256-22	2	Washer-Flat
<b>6</b> 5	107-2585	1	Valve Kit
<b>0 6</b> 7	29-9100	1	Brush And Handle ASM
8	105-8324	1	Decal-Backlap Instructions
9	70-1480	1	Relay
10	95-2905	1	Backlap Harness Kit
11	95-2906	1	Wire-Jumper
12	107-2572	1	Plate-Spacer
13	32144-10	1	Screw-HWH
14	3255-7	1	Washer-Lock


A1 3351-345

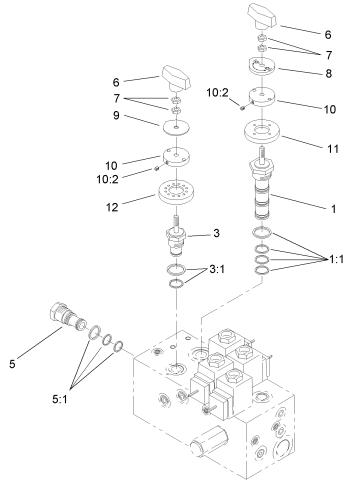

# Valve Kit Assembly

Ref	Part No.	Qty.	Description
1	94-3657	1	Spool ASM
1:1	106-1091	1	Seal Kit
3	94-8175	1	Control-Flow, Rotary
3:1	106-1090	1	Seal Kit
5	95-5634	1	Cartridge-Logic, Spool
5:1	95-5641	1	Seal Kit
6	94-5020	2	Knob ASM
7	3218-1	4	Nut-Jam
8	99-3543	1	Plate-Indicator
9	94-5026	1	Plate-Indicator
10	107-2596	2	Plate-Detent
10:2	3245-36	1	Screw-HSH
11	94-5021	1	Plate-Locating
12	94-5025	1	Plate-Locating

3351-345 A2

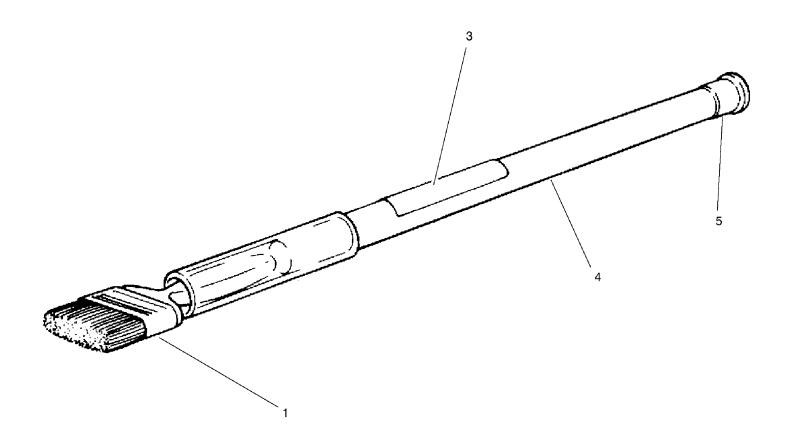

# Backlap Brush Assembly No. 29-9100

Ref	Part No.	Qty.	Description
1	36-4310	1	Brush
3	12-9140	1	Decal-Body, Front
4	29-9080		Handle
5	2410-18	1	Cap-Plastic
i			

## **NOTES**

