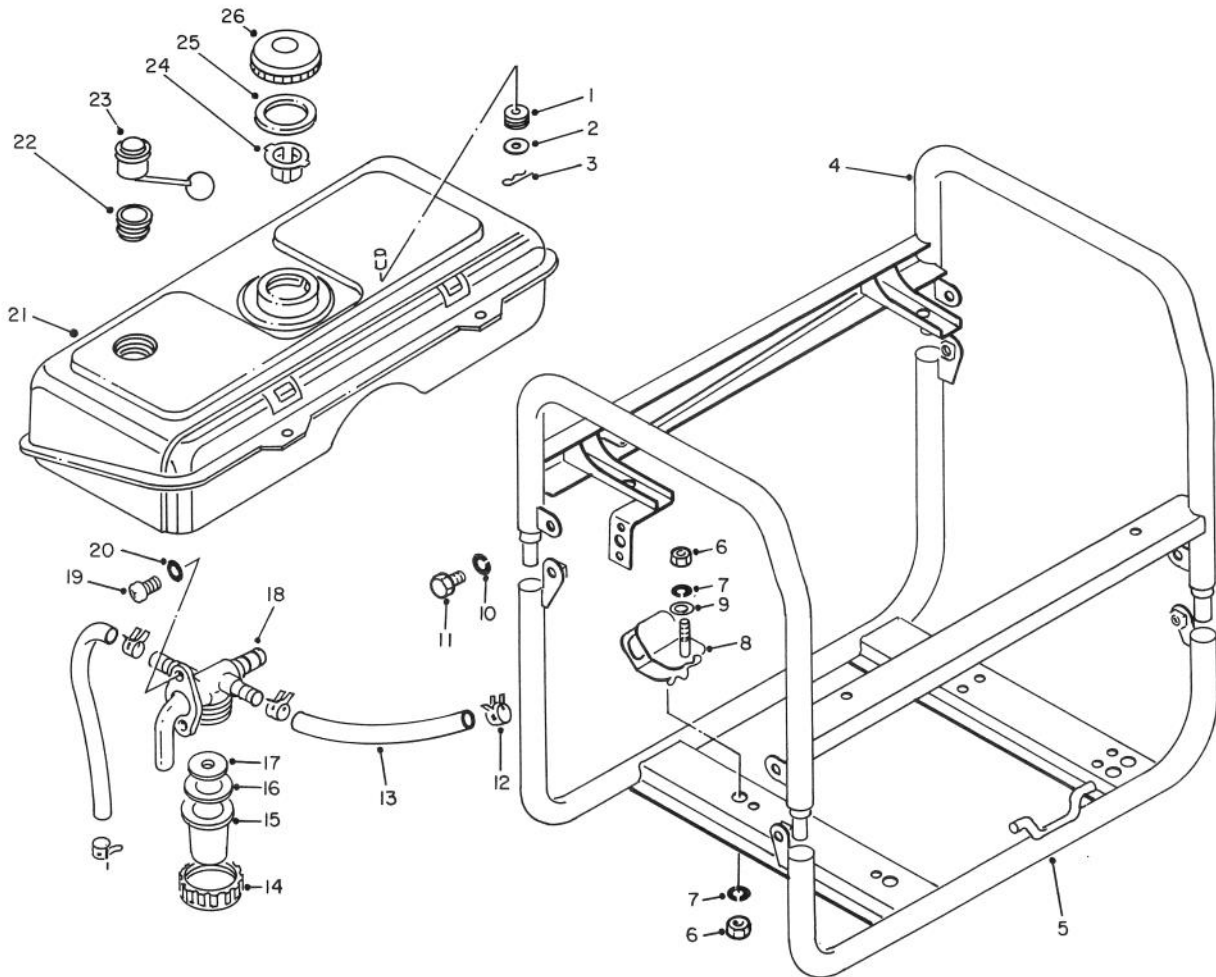


TORO®


MODEL NO. 62025-5000001 & UP

**PARTS
CATALOG****T2500 GENERATOR****FUEL TANK & FRAME ASSEMBLY**

Ref. No.	Part No.	Description	No. Used
1	50-0890	Cushion	4
2	50-0760	Washer	4
3	50-0970	Clip	4
4	55-0670	Frame — Upper	1
5	55-0680	Frame — Lower	1
6	81-0900	Nut	8
7	81-1120	Washer — Lock	8
8	55-2980	Mounting Engine	1
9	50-4700	Washer	4
10	50-5700	Washer — Lock	4
11	50-0050	Bolt	4
12	50-0990	Clip	4
13	50-0930	Hose	2
14	50-3760	Cap	1
15	50-3780	Cup	1

Ref. No.	Part No.	Description	No. Used
16	50-3770	Gasket	1
17	50-3750	Filter	1
18	50-3740	Fuel Cock Assembly (Incl. Ref. #14-17)	1
19	50-0240	Screw	2
20	81-1420	Washer — Lock	2
21	55-2970	Tank — Fuel	1
22	50-3850	Gasket	1
23	50-5430	Gauge Assembly Fuel (Incl. Ref. #22)	1
24	50-3810	Filter	1
25	53-1420	Gasket	1
26	50-3700	Cap (Incl. Ref. #25)	1
*	50-1230	Tool	1


*Not Illustrated

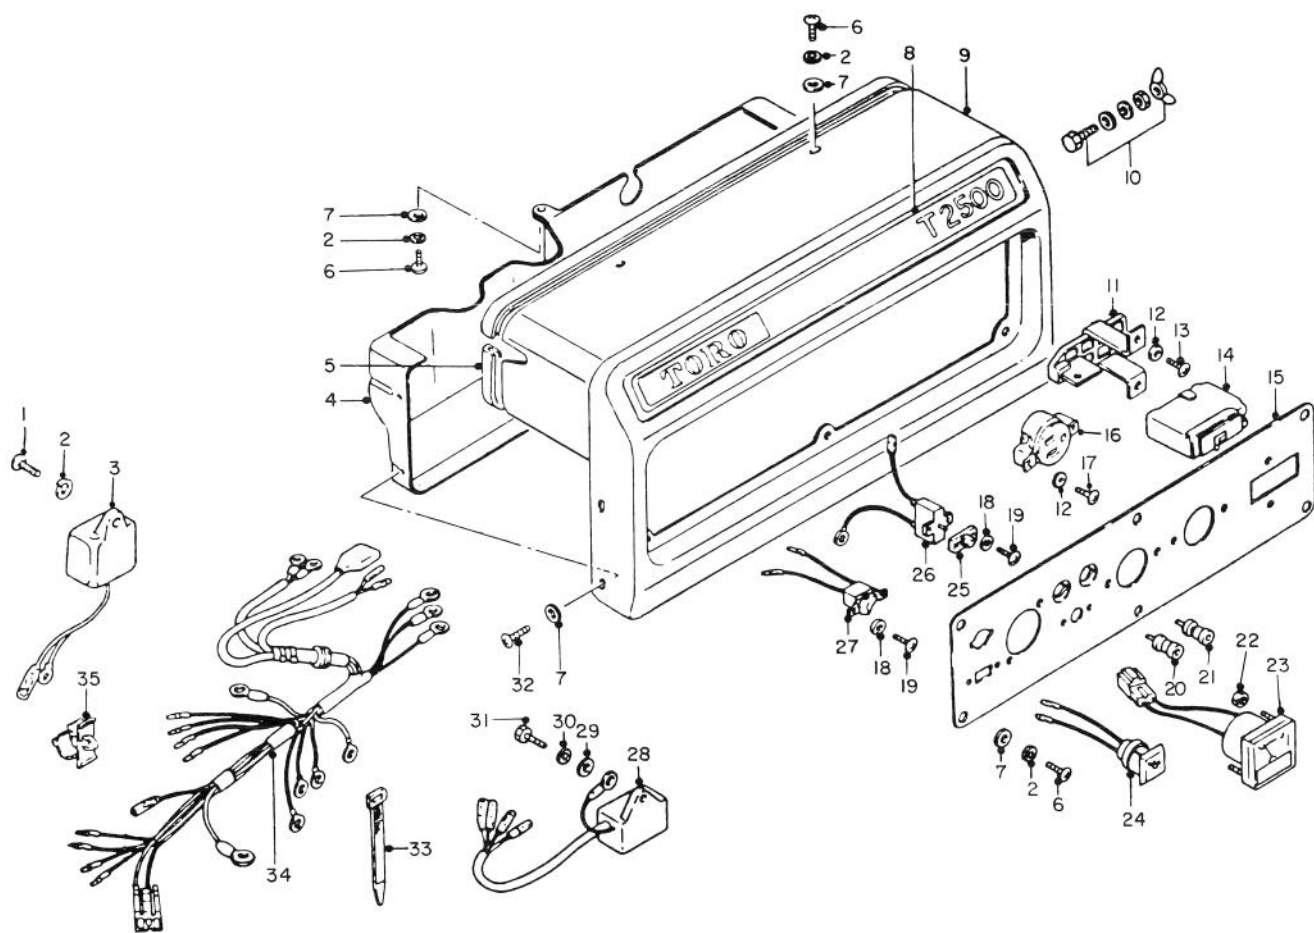

CONTROL PANEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-0270	Screw	2
2	81-1380	Washer — Lock	14
3	55-0740	X STR Mag. Unit	1
4	55-0710	Panel — Rear	1
5	50-5590	Seal — Panel	3
6	50-0280	Screw	12
7	50-0610	Washer	16
8	55-3090	Emblem — Toro T2500	1
9	55-0700	Panel — Control	1
10	50-4530	Terminal — Ground	1
11	50-4380	Holder — Breaker	1
12	55-0540	Washer	6
13	55-0790	Screw	2
14	55-3110	Circuit Breaker (21A)	1
15	55-3080	Plate — Panel	1
16	55-3120	Receptacle	2
17	53-1080	Screw	4
18	55-3100	Washer	4

Ref. No.	Part No.	Description	No. Used
19	50-6760	Screw	4
20	55-0560	Terminal — Minus	1
21	55-0550	Terminal — Plus	1
22	50-0490	Nut	2
23	50-3470	Meter — Voltage (150V)	1
24	55-0500	Lamp — Oil Level Alarm	1
25	50-8720	Cap	1
26	50-8700	Circuit Breaker DC	1
27	50-4350	Switch — Engine	1
28	50-3550	Oil Alarm Unit	1
29	50-0620	Washer	1
30	81-1450	Washer — Lock	1
31	50-0020	Bolt	1
32	55-0470	Screw	4
33	50-1100	Clamp	3
34	55-3130	Harness — Control	1
35	55-0580	Clamp	1

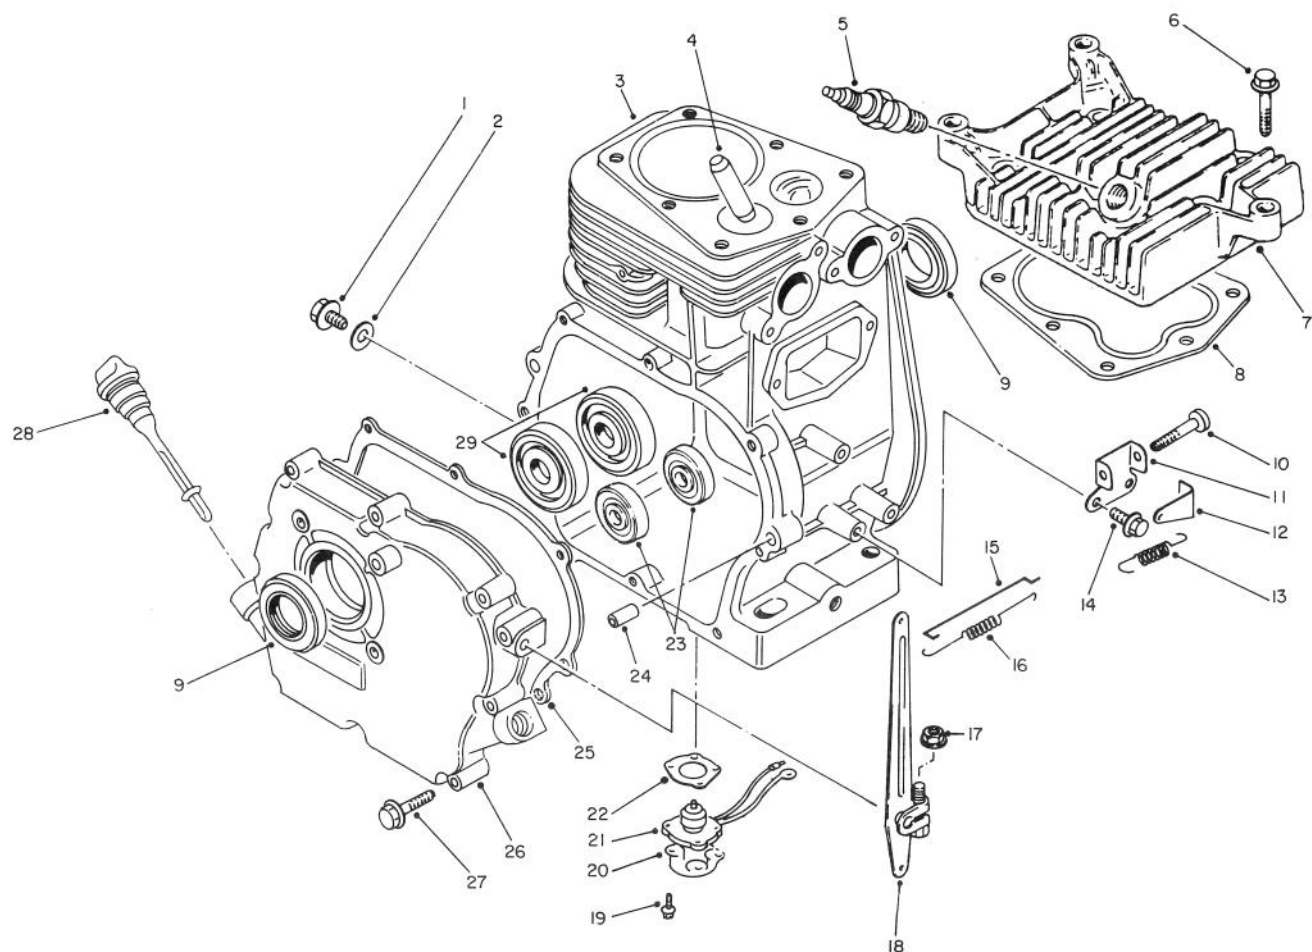


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	53-0970	Drain Plug	1
2	55-2800	Gasket	1
3	50-4830	Cylinder	1
4	50-4850	Valve Guide	2
5	50-1160	Spark Plug	1
6	50-4670	Bolt	7
7	50-4800	Cylinder Head	1
8	50-4810	Gasket	1
9	50-4720	Oil Seal	1
10	50-0680	Screw	1
11	50-3260	Bracket — Governor Spring	1
12	50-3210	Hook — Spring	1
13	50-1150	Spring	1
14	50-0170	Bolt	2
15	55-2820	Rod — Carburetor	1

Ref. No.	Part No.	Description	No. Used
16	50-4750	Spring	1
17	50-7180	Nut	1
18	55-2810	Control Lever	1
19	81-1300	Bolt	4
20	50-3540	Plate — Lead Wire	1
21	55-0030	Sensor — Oil Level	1
22	50-3520	Gasket	1
23	50-0820	Bearing	2
24	50-0450	Pin	2
25	50-4870	Gasket	1
26	50-4860	Cover — Crankcase Side	1
27	81-0550	Bolt	8
28	50-4880	Gauge — Oil Level	1
29	50-4680	Bearing	2
*	55-2830	Gasket Set	1

*Not Illustrated

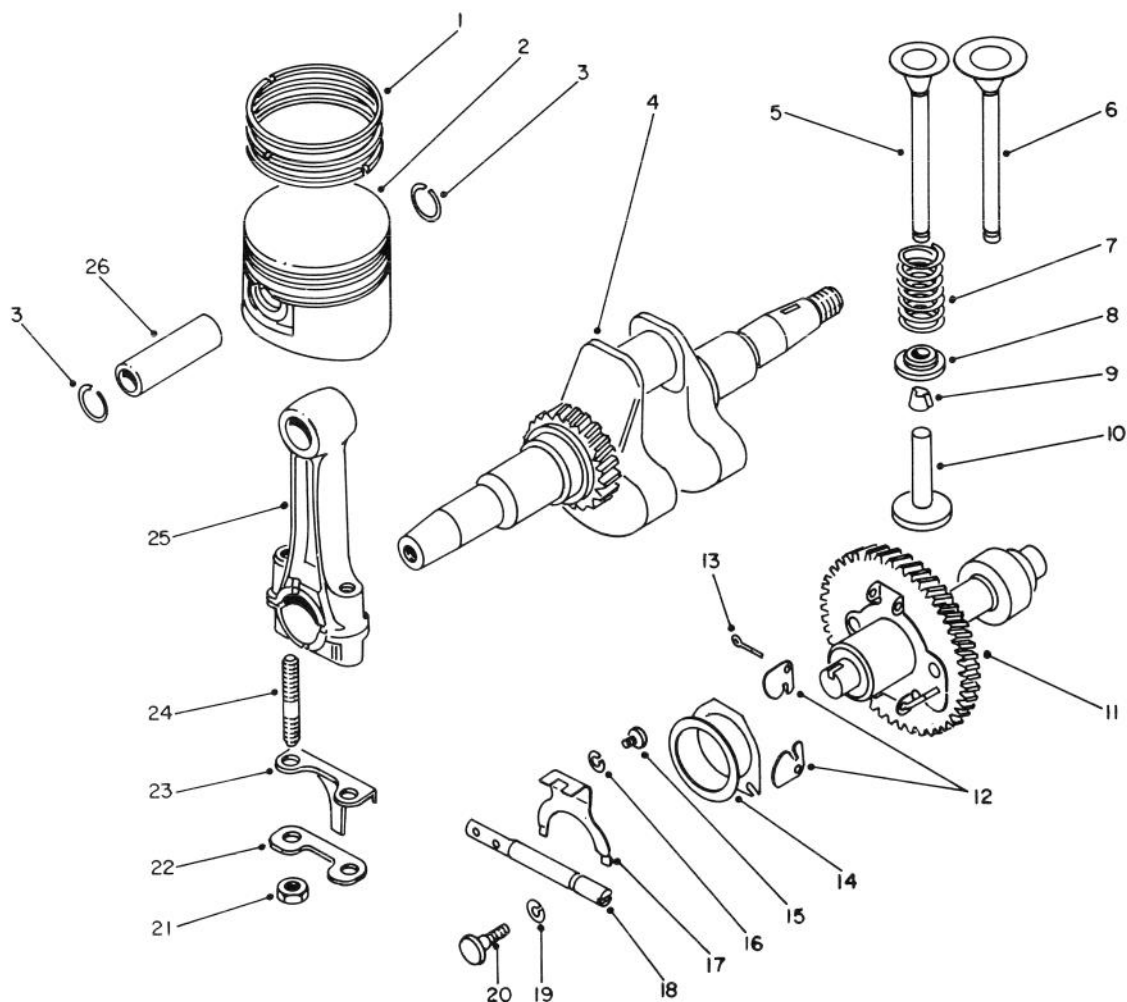


CRANKSHAFT & CAMSHAFT

Ref. No.	Part No.	Description	No. Used
1	50-4980	Ring Set (Std.)	1
*	55-0610	Ring Set (OS:0.25) (Optional)	1
*	55-0620	Ring Set (OS:0.5) (Optional)	1
2	50-4940	Piston (Std.)	1
*	55-0630	Piston (OS:0.25) (Optional)	1
*	55-0640	Piston (OS:0.5) (Optional)	1
3	50-4740	Circlip	2
4	50-5060	Crankshaft	1
5	50-5120	Valve — Exhaust	1
6	50-5110	Valve — Intake	1
7	50-5130	Spring	2
8	50-2140	Spring Retainer	2
9	50-2160	Cotter — Valve	2
10	50-5080	Tappet (L:45.78)	0-2
*	50-5090	Tappet (L:45.71)	0-2
*	50-5100	Tappet (L:45.85)	0-2
11	50-5910	Camshaft	1

Ref. No.	Part No.	Description	No. Used
12	50-3070	Arm	16
13	50-6680	Cotter Pin	2
14	50-3110	Spacer — Governor	1
15	50-0210	Screw	2
16	50-0560	Lockwasher	2
17	50-5260	Shifter Plate	1
18	50-5250	Shaft — Throttle Return	1
19	50-0770	Gasket	1
20	50-0740	Screw	1
21	81-0900	Nut	2
22	50-5040	Lock Plate	1
23	50-5050	Splash Plate	1
24	50-4710	Stud Bolt	2
25	50-5030	Connecting Rod (Incl. Ref. #21-24)	1
26	50-5020	Pin	1


*Not Illustrated

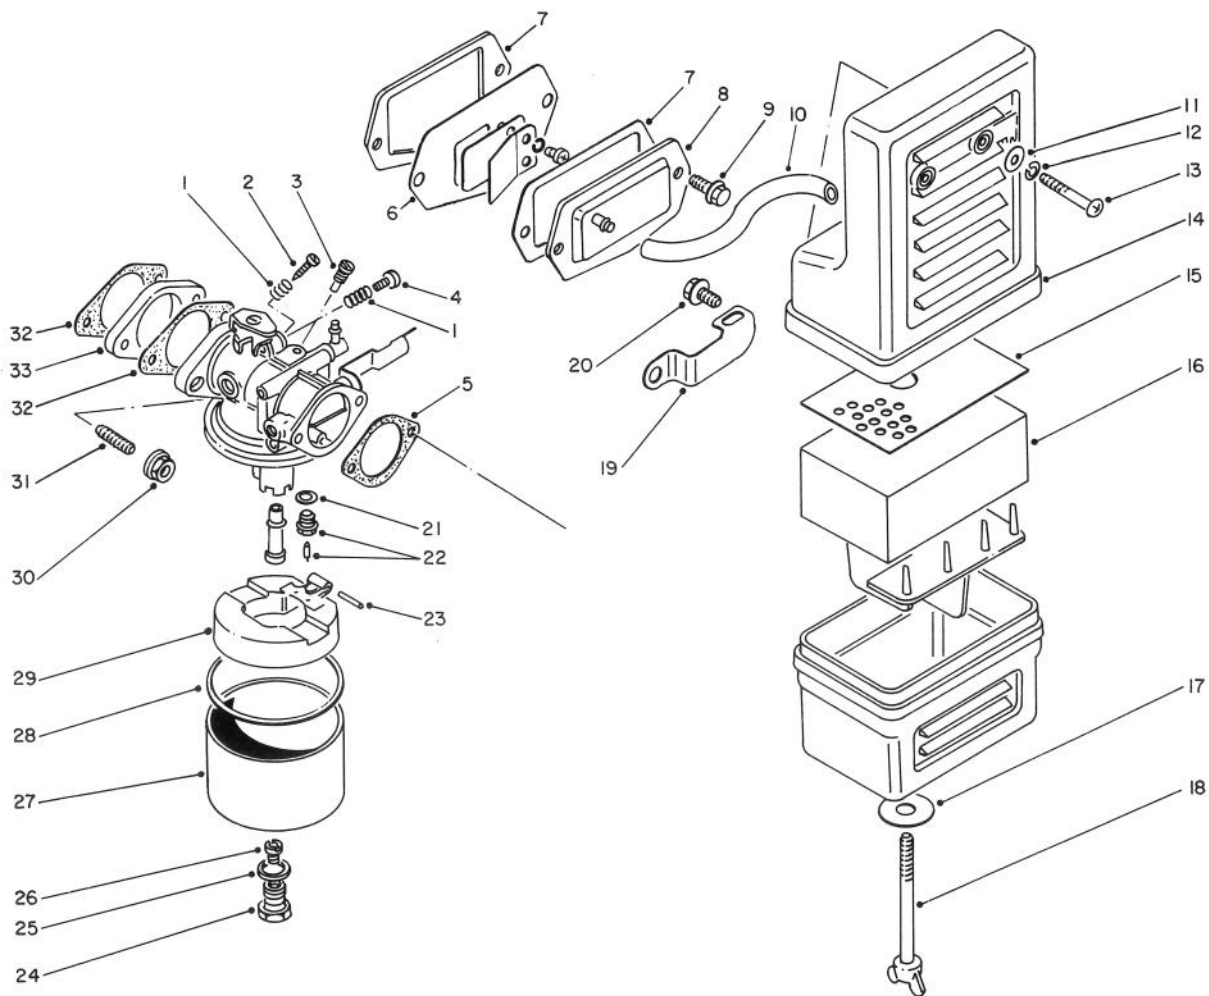

AIR CLEANER & CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-2330	Spring	2
2	50-2360	Adjuster	1
3	50-4780	Jet — Pilot (45)	1
4	50-0250	Screw — Throttle Stop	1
5	50-2530	Gasket — Air Cleaner	1
6	50-4930	Reed Valve Assembly	1
7	50-4920	Gasket	2
8	50-4910	Cap — Breather	1
9	81-1300	Bolt	2
10	55-0110	Hose	1
11	50-0610	Washer	2
12	81-1380	Washer — Lock	2
13	50-0330	Screw	2
14	50-5720	Air Cleaner Assembly (Incl. Ref. #15-18)	1
15	50-2490	Holder	1
16	50-2470	Filter	1
17	50-2570	Washer	1


Ref. No.	Part No.	Description	No. Used
18	50-2550	Wing Bolt	1
19	50-5160	Bracket — Air Cleaner	1
20	50-0170	Bolt	2
21	50-2400	Gasket	1
22	50-2390	Needle Valve	1
23	50-2310	Pin	1
24	50-2370	Bolt	1
25	55-2860	Gasket	1
26	50-4760	Jet — Main (82.5)	1
27	55-2840	Carburetor Assembly (Incl. Ref. #1-4, 21-26 & 28-29)	1
28	50-2290	Gasket	1
29	55-0130	Float	1
30	50-7180	Nut	2
31	50-0080	Stud Bolt	2
32	50-2180	Gasket	2
33	50-2200	Insulator	1

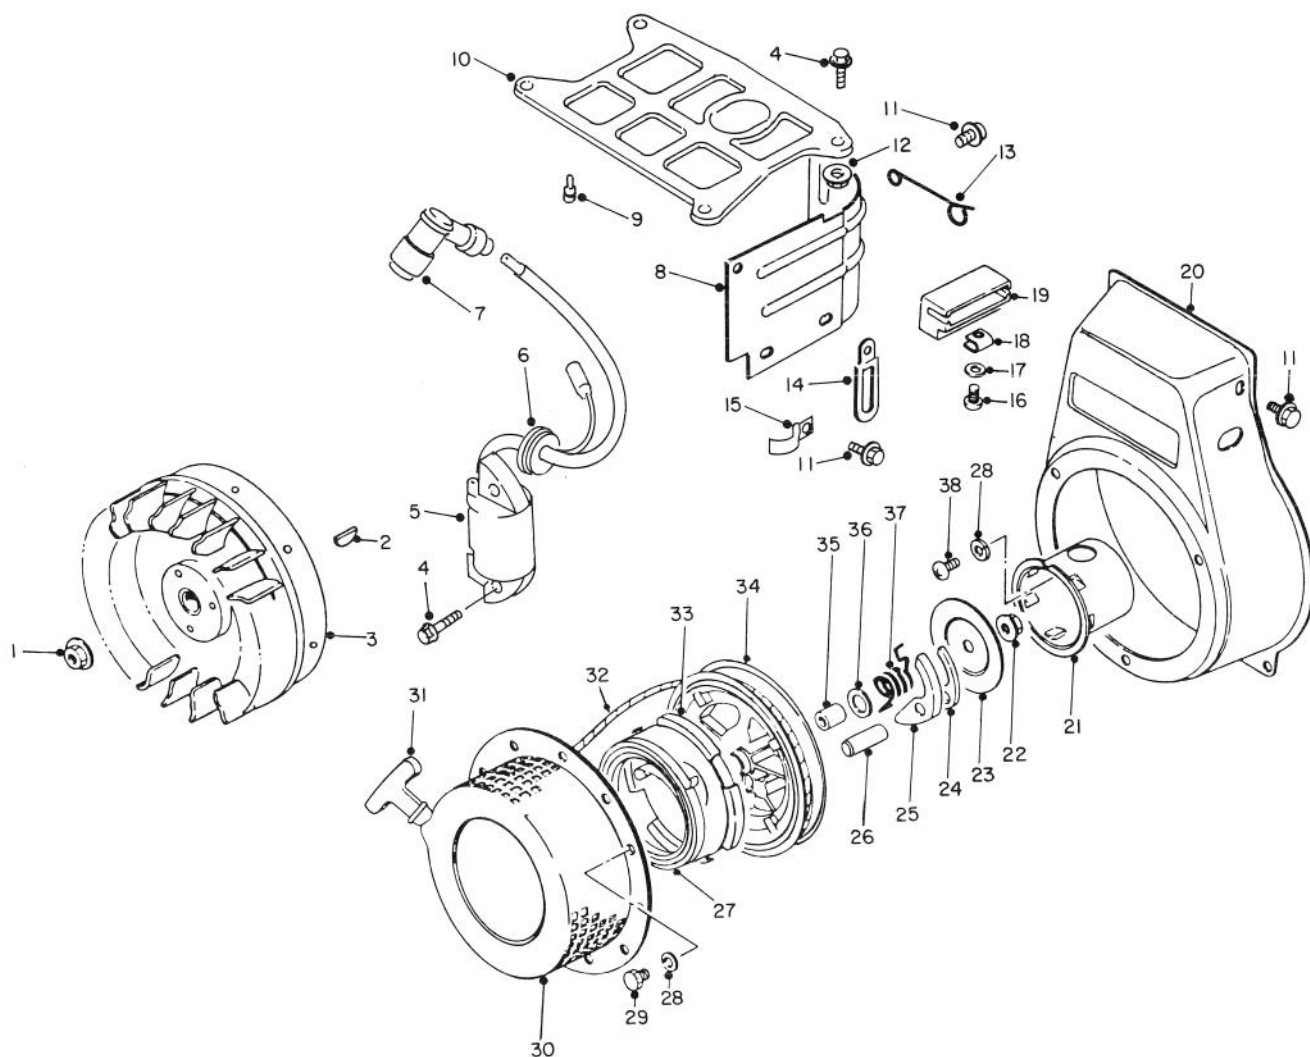

REWIND STARTER & MAGNETO ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-0540	Nut	1
2	50-0640	Key	1
3	50-3360	Rotor	1
4	81-0530	Bolt	6
5	55-0660	Stator	1
6	50-5310	Grommet	1
7	50-3450	Cap — Spark Plug	1
8	50-5230	Cowling Side	1
9	50-4730	Cushion — Cowling	1
10	50-5240	Cowling — Upper	1
11	50-0170	Bolt	10
12	50-7180	Nut	4
13	50-1030	Clamp	1
14	81-1480	Clamp	1
15	50-5710	Clamp	1
16	81-1410	Screw	1
17	50-0600	Washer	1
18	55-0240	Nut	1
19	55-0230	Holder — Lead Connector	1
20	50-5220	Cover — Cooling Fan	1


Ref. No.	Part No.	Description	No. Used
21	55-0200	Pulley — Starter	1
22	50-7470	Nut	1
23	55-2950	Plate — Friction	1
24	55-2930	Ratchet	1
25	55-0170	Ratchet	1
26	55-0180	Pin	1
27	55-2890	Spring — Spiral	1
28	81-1450	Washer — Lock	6
29	50-0650	Bolt	3
30	55-0160	Starter Assembly Recoil (Incl. Ref. #22-29 & 31-37)	1
31	55-2880	Grip Assembly (Incl. Ref. #32)	1
32		Grip	1
33	55-0190	Case — Spring	1
34	55-2900	Reel	1
35	55-2920	Spacer	1
36	55-2940	Washer	1
37	55-2910	Spring — Friction	1
38	50-0380	Screw	3

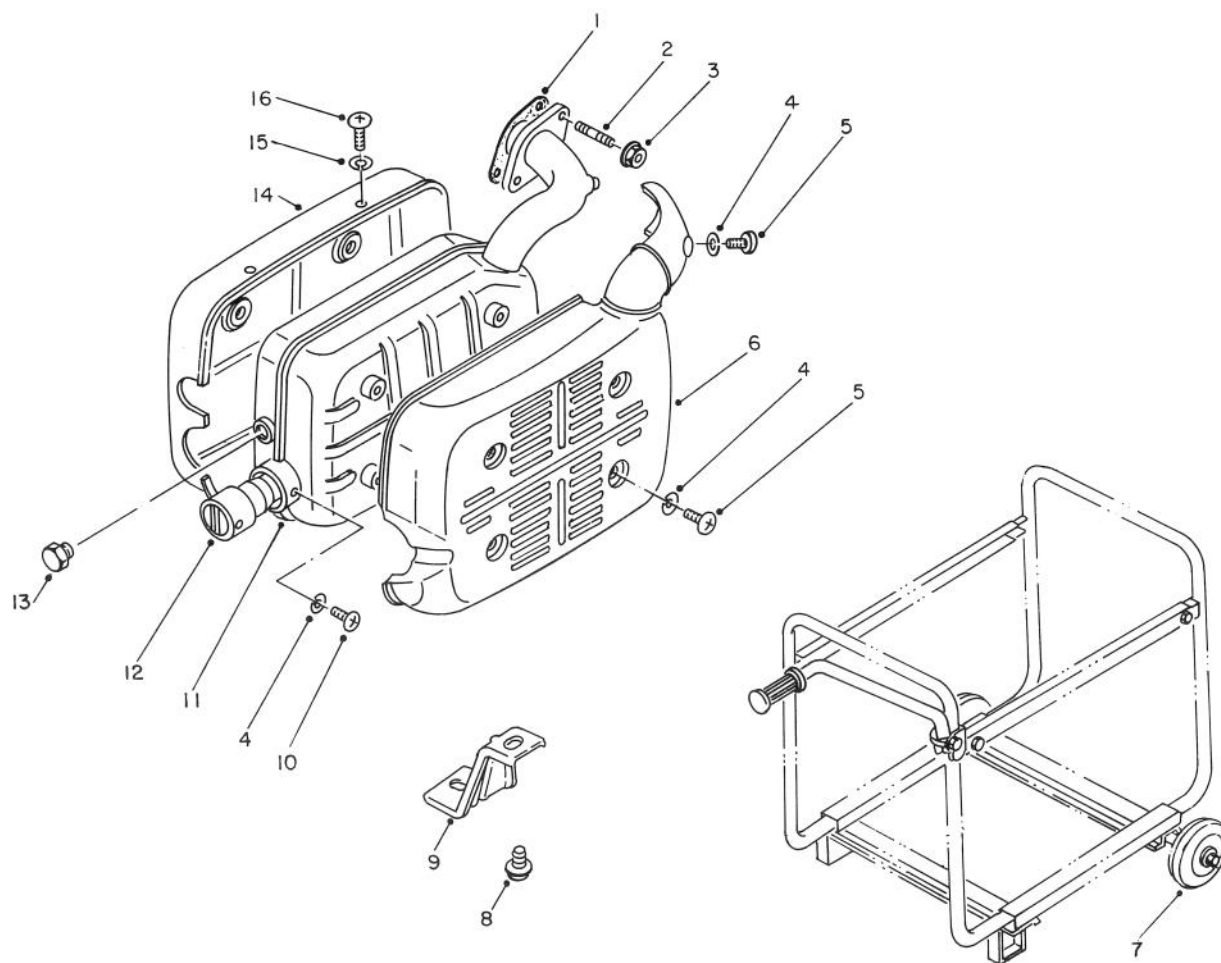

MUFFLER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	50-5170	Gasket	1
2	50-0100	Stud Bolt	2
3	50-0530	Nut	2
4	81-1450	Washer — Lock	10
5	81-1140	Screw	9
6	50-5210	Cover — Front	1
7	50-3660	Wheel Assembly (Optional)	1
8	50-7260	Bolt	1

Ref. No.	Part No.	Description	No. Used
9	55-2870	Bracket — Muffler	1
10	50-0350	Screw	1
11	50-5180	Muffler	1
12	50-2700	Clean Out Tube	1
13	50-2640	Drain Plug	1
14	50-2690	Cover — Rear	1
15	81-1420	Washer — Lock	3
16	50-0230	Screw	3

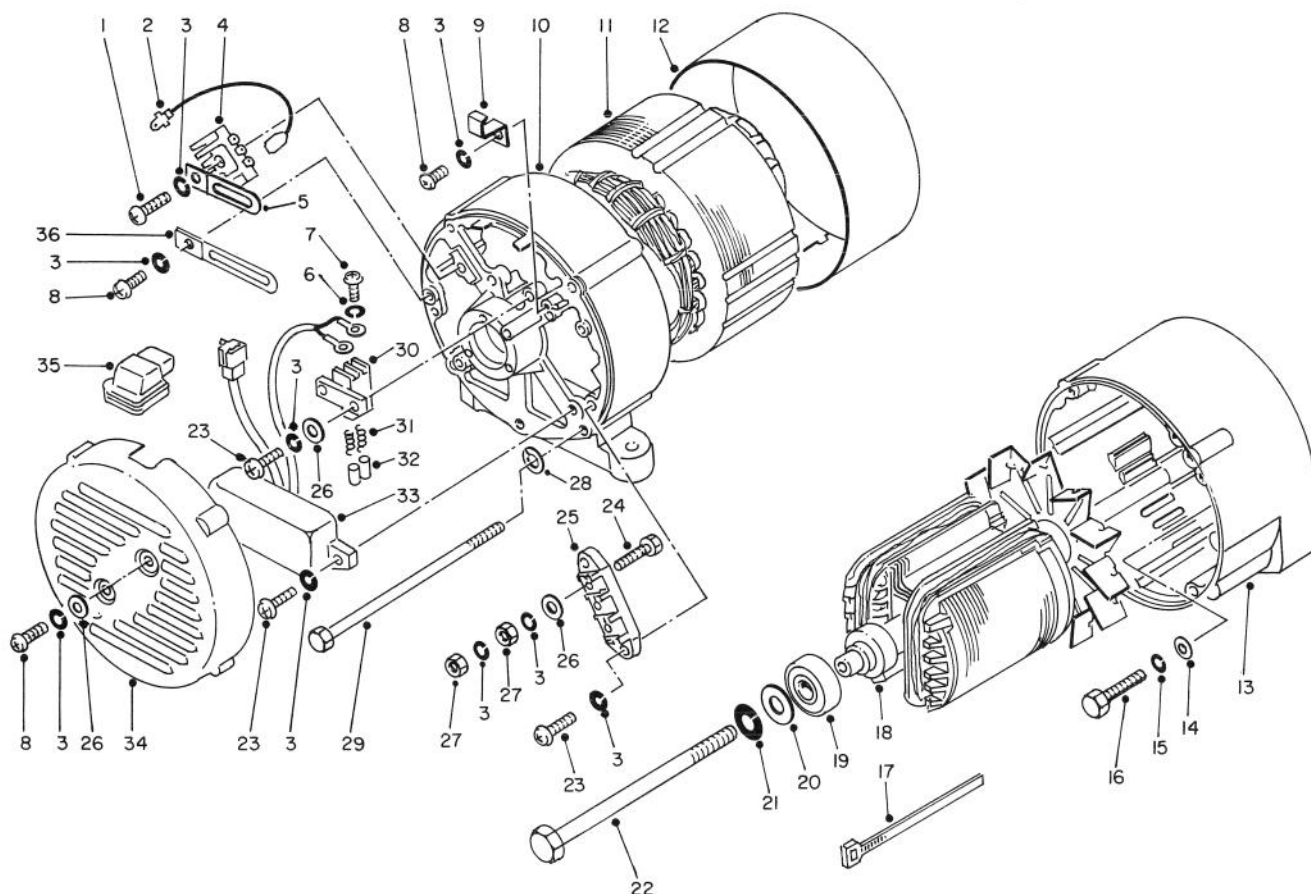

GENERATOR

Ref. No.	Part No.	Description	No. Used
1	50-0310	Screw	1
2	55-1030	Fusible Link	1
3	81-1380	Washer — Lock	15
4	55-0910	Rectifier	1
5	55-3070	Clamp	1
6	81-1420	Washer — Lock	2
7	81-1410	Screw	2
8	50-0280	Screw	5
9	55-0960	Clamp	1
10	55-0860	Housing — Rear	1
11	55-3000	Stator (120V)	1
12	55-3010	Cover — Stator Core	1
13	55-0840	Housing — Front	1
14	50-4700	Washer	4
15	81-1120	Washer — Lock	4
16	50-0070	Bolt	4
17	55-1020	Clamp	2
18	55-3050	Rotor	1
19	55-1010	Bearing	1
20	55-0990	Washer	1

Ref. No.	Part No.	Description	No. Used
21	55-1000	washer — Lock	1
22	55-3060	Bolt — Rotor	1
23	50-0300	Screw	6
24	50-4650	Bolt	3
25	55-0880	Terminal Assembly (Incl. Ref. #3, 24-27)	1
26	50-0610	Washer	7
27	50-5690	Nut	6
28	81-1450	Washer — Lock	4
29	55-3020	Bolt — Stator	4
30	55-0920	Brush Assembly (Incl. Ref. #6, 7 & 32-33)	1
31	55-0930	Spring	2
32	55-0940	Brush	2
33	55-0900	Regulator — Voltage	1
34	55-0870	Cover — Rear	1
35	55-0950	Grommet	1
36	50-1070	Clamp	1
*	55-2990	Generator Assembly (120V)	1

*Not Illustrated