



Count on it.

Form No. 3481-369 Rev A

Parts Catalog

Dingo® TXL 2000

Tool Carrier

Model No. 22530—Serial No. 420800000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

 
Contents

Frame Assembly	6
Frame Assembly No. 163-8897	8
RH Fuel Tank Assembly No. 133-6814	10
LH Fuel Tank Assembly No. 133-6991	12
Track Mount Assembly	14
LH Track Assembly	16
Track Drive Assembly	18
RH Track Assembly	20
Engine and Air Cleaner Assembly	22
Air Cleaner Assembly No. 99-5410	24
Engine Mount and Air Intake Hose Assembly	26
Fuel Pump and Water Separator Assembly	28
Fuel Filter and Hose Assembly	30
Radiator and Fan Assembly	32
Radiator Hose Assembly	34
Lift Valve and Pump Assembly	36
Spool Lock Loader Valve Assembly No. 161-9450	38
Gear Pump Assembly No. 133-0281	40
Auxiliary Hydraulic Assembly	42
Auxiliary Manifold Assembly No. 136-4872	44
Tandem Pump Assembly	46
Control Console Assembly	48
Loader Arm Assembly	50
Upper Loader Arm Assembly No. 138-4730	52
Lower Loader Arm Assembly No. 138-4731	54
Hydraulic Cylinder Assembly No. 139-5719	56
Hydraulic Cylinder Assembly No. 139-5718	58
Qtach Assembly No. 132-8468	60
Hydraulic Cylinder Assembly No. 161-6930	62
Platform Assembly	64
Hood and Access Panel Assembly	66
Electrical Assembly	68
Main Wire Harness Assembly No. 122-3967	70
Crankcase Assembly	72
Oil Pan Assembly	74
Oil Dipstick and Guide Assembly	76
Oil Pump Assembly	78
Cylinder Head Assembly	80
Inlet and Exhaust Manifold Assembly	82
Rocker Arm Assembly	84
Cylinder Head Cover Assembly	86
Gear Case Assembly	88
Oil Filter Cartridge Assembly	90
Main Bearing Case Assembly	92
Piston and Crankshaft Assembly	94
Cam Shaft and Idle Gear Assembly	96
Flywheel Assembly	98
Fuel Pump (Mechanical) Assembly	100
Fuel Camshaft Assembly	102
Supply Pump Assembly	104
Fuel Filter Assembly	106
Separator Assembly	108
Injector and Glow Plug Assembly	110
Injection Pipe Assembly	112

Contents (continued)

Fuel Pump (Electrical) Assembly	114
Common Rail Assembly	116
Alternator and Pulley Assembly	118
Alternator Components Assembly	120
Starter Installation Assembly	122
Starter (Component Parts) Assembly	124
Oil Switch and Thermometer Assembly	126
Injector Harness Assembly	128
Wire Harness Assembly	130
Wire Harness Bracket Assembly	132
Water Flange and Thermostat Assembly	134
Water Pipe Assembly	136
Water Pump Assembly	138
Inlet Manifold Assembly	140
Inlet Hose Assembly	142
Exhaust Manifold Assembly	144
Exhaust Gas Recirculation Assembly	146
Exhaust Gas Recirculation Cooler Assembly	148
Turbo Charger Assembly	150
Diesel Oxidation Catalyst Muffler Assembly	152
Diesel Oxidation Catalyst Muffler Bracket Assembly	154
Oil Separator Assembly	156
Oil Separator (Component Parts) Assembly	158
Oil Pipe (Turbo Charger) Assembly	160
Oil Cooler Assembly	162
Electronic Control Unit Assembly	164
Miscellaneous Engine Parts	166
Operator Manual	168
Attachments and Accessories	170


Frame Assembly

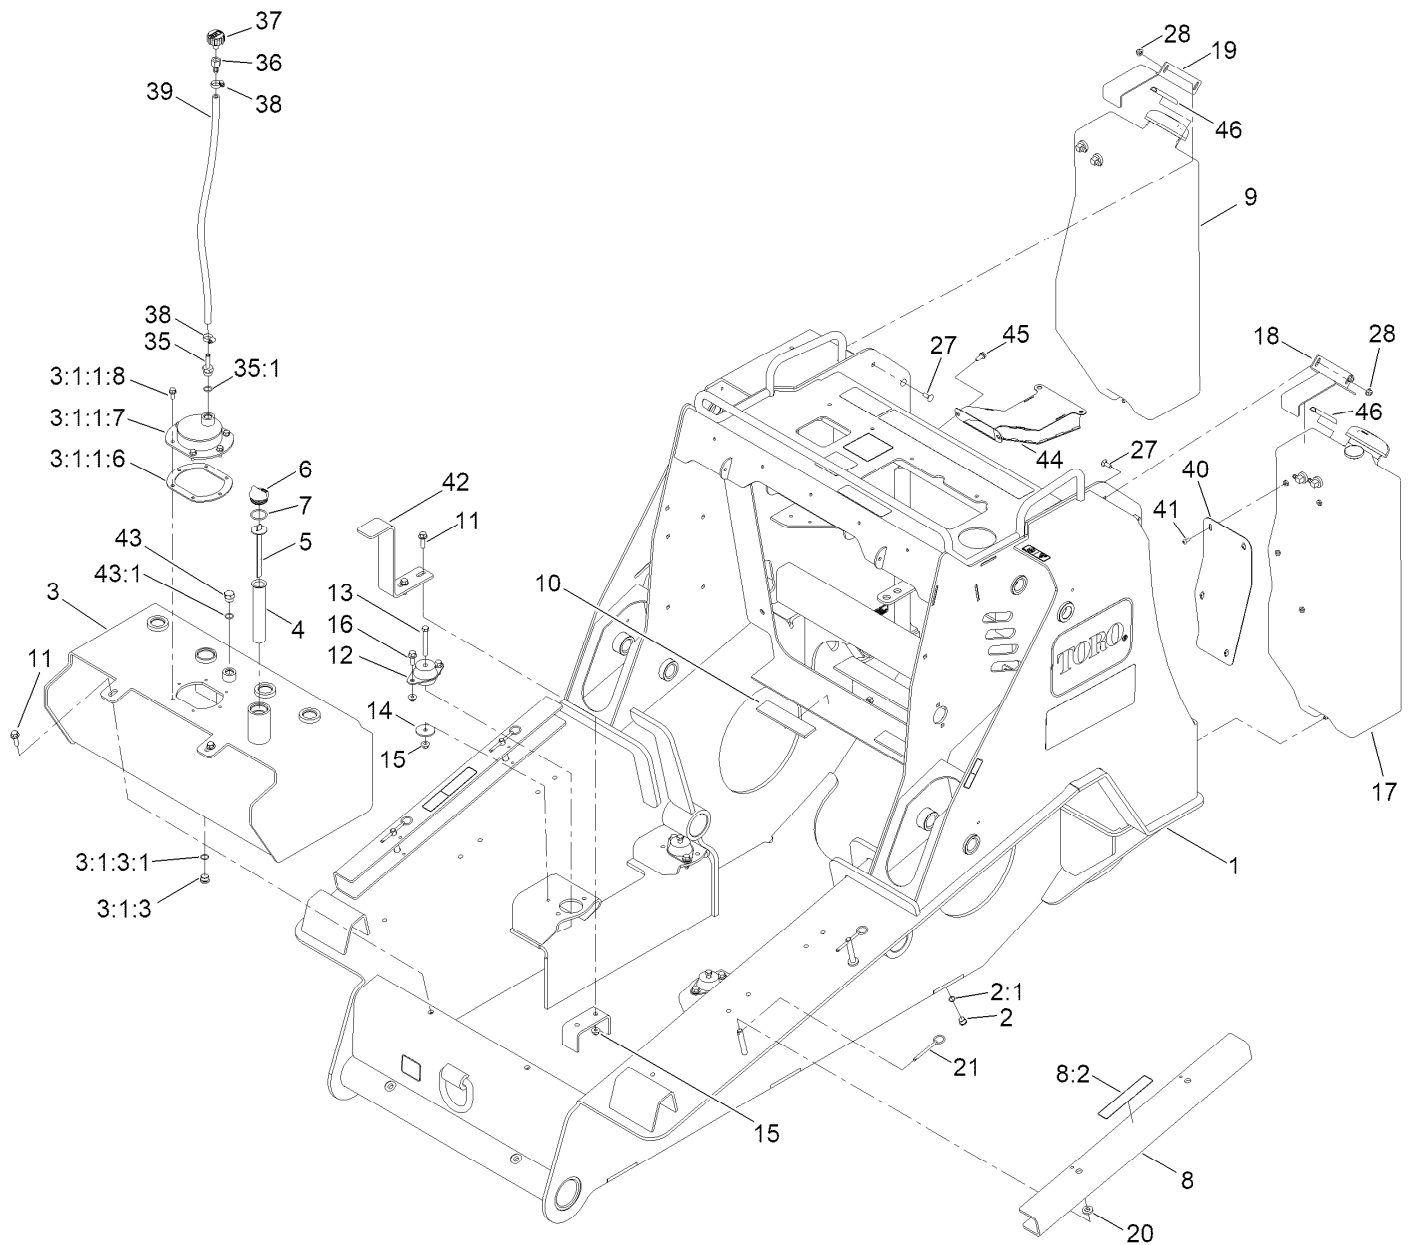

Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-8897	1	Frame ASM	16	3234-11	8	Screw-HHF
2	353-989	1	Plug-Hex, Hollow	17	133-6991	1	LH Fuel Tank ASM
2:1	237-42	1	O-Ring	18	137-0379-03	1	Bracket-Tank LH
3	131-9336-03	1	HYD Tank ASM	19	137-0380-03	1	Bracket-Tank RH
3:1:1:6	107-3557	1	Gasket-Cover, Access	20	83-1470	4	Washer-Neoprene
3:1:1:7	138-2342-03	1	Cover-Access	21	136-6125	4	Pin-Ring
3:1:1:8	98-9940	6	Screw-HHF	27	3230-16	4	Screw-CARR
3:1:3	353-988	1	Plug-Hex	28	119-4041	4	Nut-HF
3:1:3:1	237-79	1	O-Ring	35	115-2231	1	Fitting-STR
4	61-2790	1	Filter-Screen	35:1	237-79	1	O-Ring
5	130-7686	1	Dipstick	36	354-94	1	Fitting-Female, Barbed
6	93-7498	1	Plug-Plastic	37	68-6150	1	Breather
7	237-101	1	O-Ring	38	2412-36	2	Clamp-Hose
8	138-4724	2	Arm-Locking	39	114-0832	1	Hose-Fuel
8:2	115-4858	2	Decal-Danger	40	138-4721-03	1	Plate-Guard, Tank
9	133-6814	1	RH Fuel Tank ASM	41	3274-31	4	Screw-HSBH
10	112-2401	2	Pad-Rubber	42	138-2337-03	1	Strap-Hold Down
11	3234-24	4	Screw-HHF	43	353-550	1	Plug-HYD, HH
12	136-4885	4	Mount-Engine	43:1	237-79	1	O-Ring
13	323-14	4	Screw-HH	44	138-2382-03	1	Intake Chute ASM
14	139-1726	4	Washer-Rebound	45	32104-32	4	Screw-HWH
15	119-4042	14	Nut-HF, NI	46	138-2449	2	Seal-Bulb

 Frame Assembly No. 163-8897

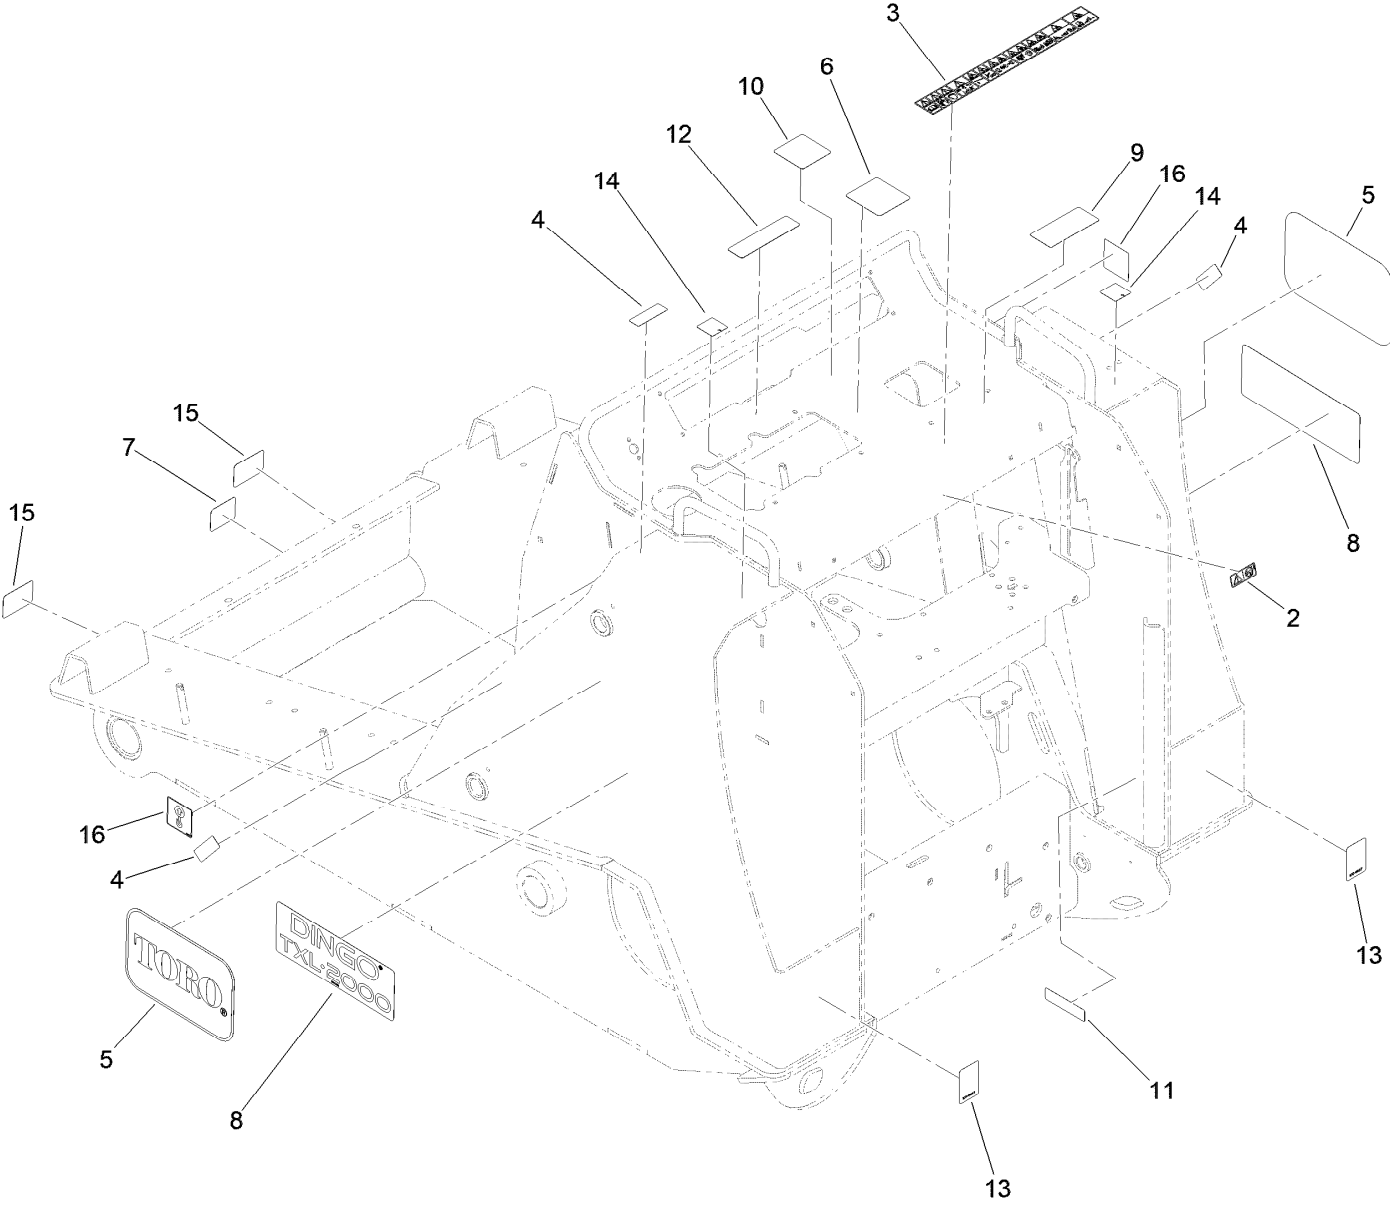


Frame Assembly No. 163-8897 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	115-2047	1	Decal-Surface, Hot
3	145-0637	1	Decal-Safety
4	120-0625	3	Decal-Warning
5	164-1472	2	Decal-Toro Logo, 10.96X7.26Rnr
6	161-9448	1	Decal-Controls
7	125-6694	1	Decal-Tie Down
8	137-5418	2	Decal
9	139-1162	1	Decal-Safety

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-4729	1	Decal-Controls, Loader
11	133-8062	1	Decal-Spark Arrestor
12	136-4863	1	Decal-Arm,Raised
13	100-4627	2	Reflector
14	163-5287	2	Decal, No Smoking/Diesel Fuel
15	125-6139	2	Decal-Lift/Tie Down
16	125-4967	2	Decal-Lift Here

RH Fuel Tank Assembly No. 133-6814

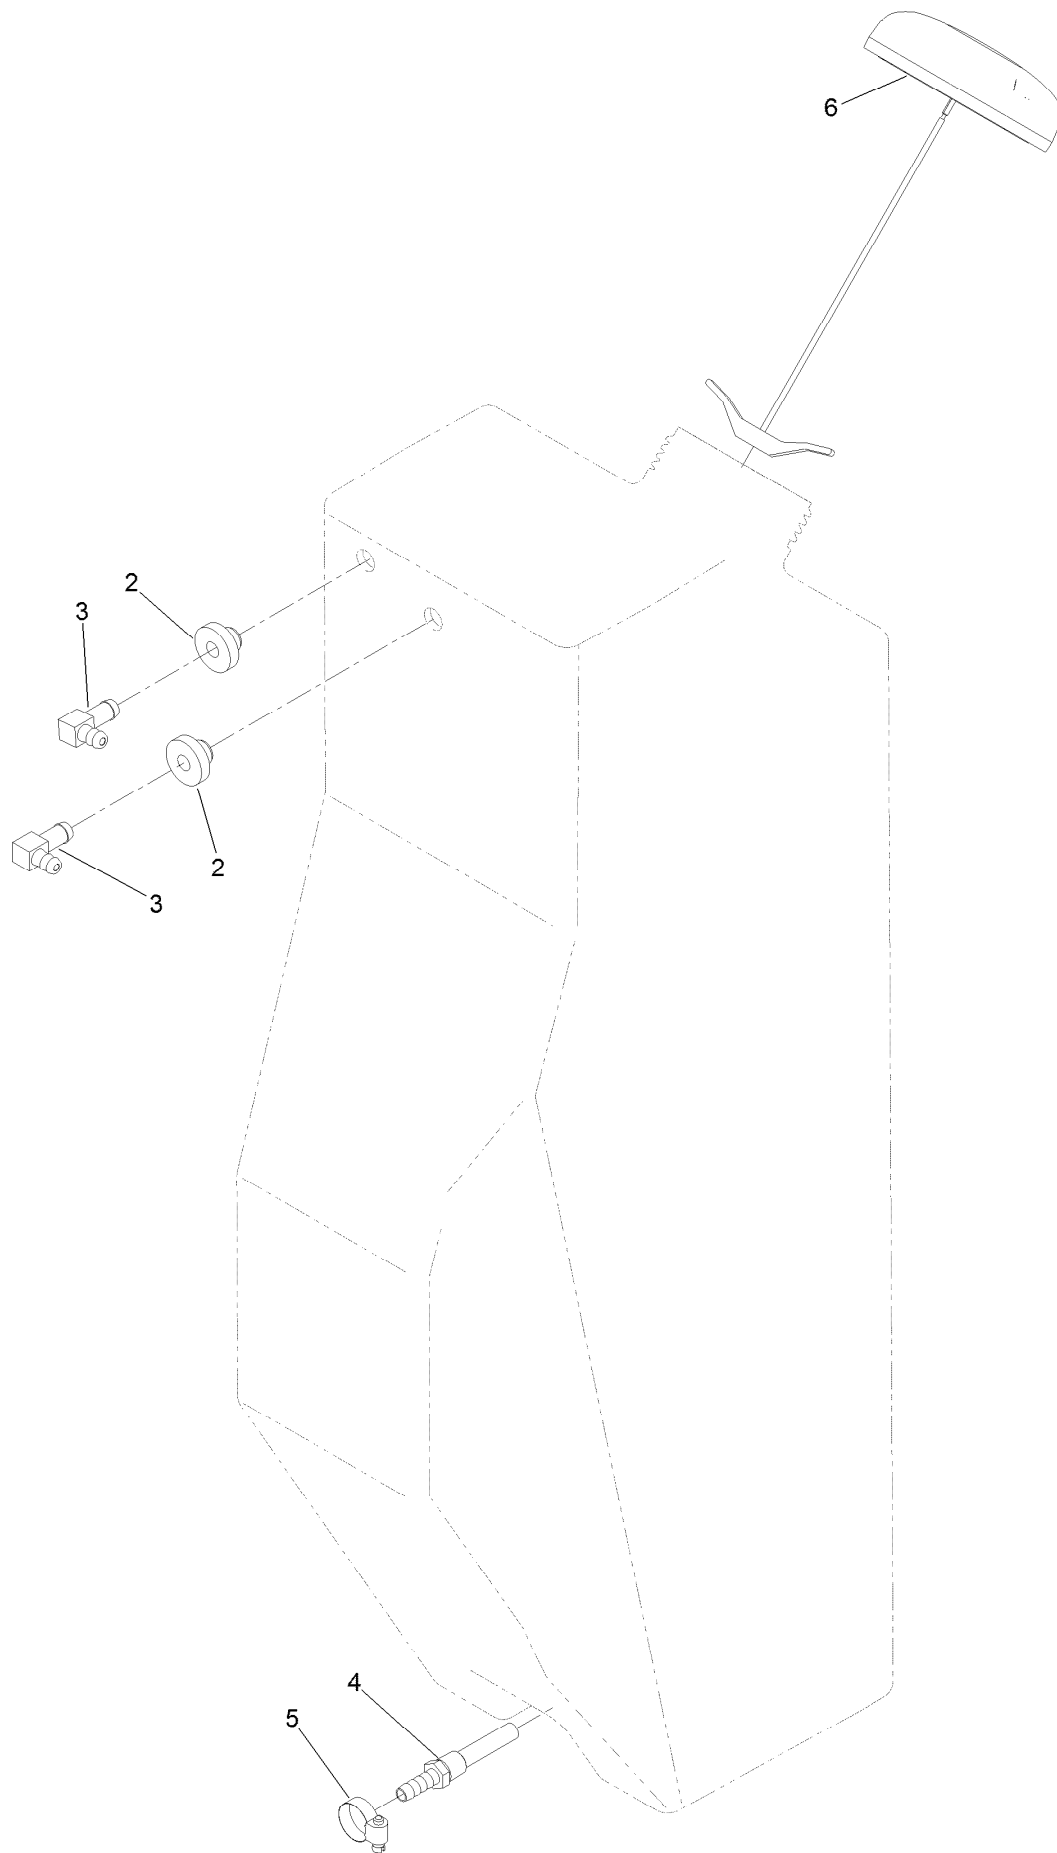


RH Fuel Tank Assembly No. 133-6814 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	46-6560	2	Bushing
3	46-6550	2	Fitting-Elbow, 90 DEG
4	112-6374	1	Fitting-Strainer

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	2412-36	1	Clamp-Hose
6	136-4865	1	Cap-Fuel

 LH Fuel Tank Assembly No. 133-6991

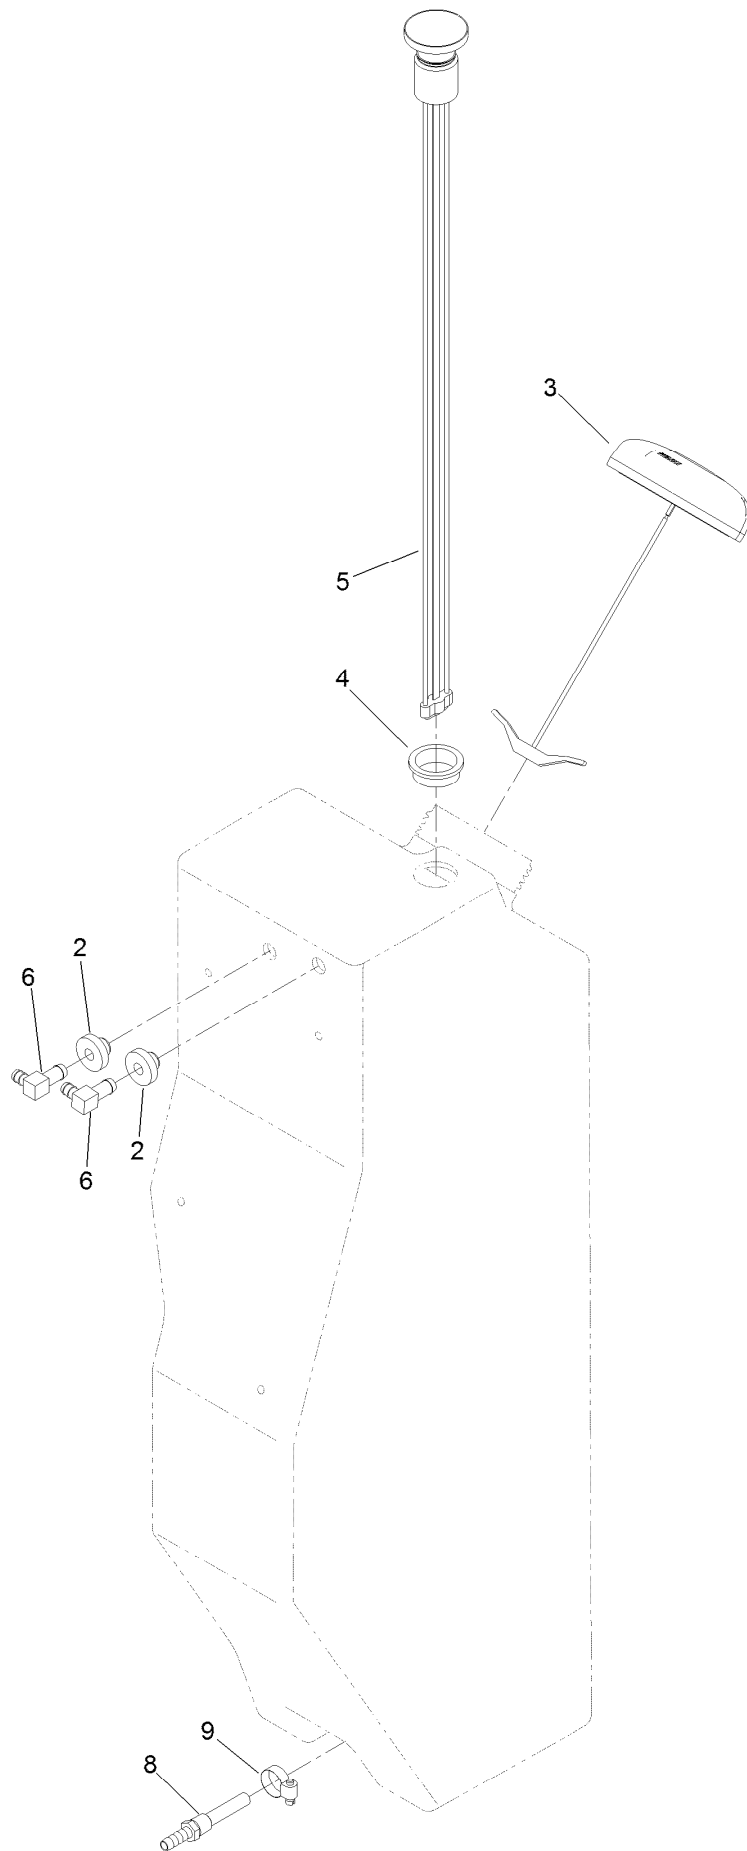


LH Fuel Tank Assembly No. 133-6991 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	46-6560	2	Bushing
3	136-4865	1	Cap-Fuel
4	95-8972	1	Grommet
5	133-6992	1	Gauge-Level, Fuel

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	46-6550	2	Fitting-Elbow, 90 DEG
8	112-6374	1	Fitting-Strainer
9	2412-36	1	Clamp-Hose

 Track Mount Assembly

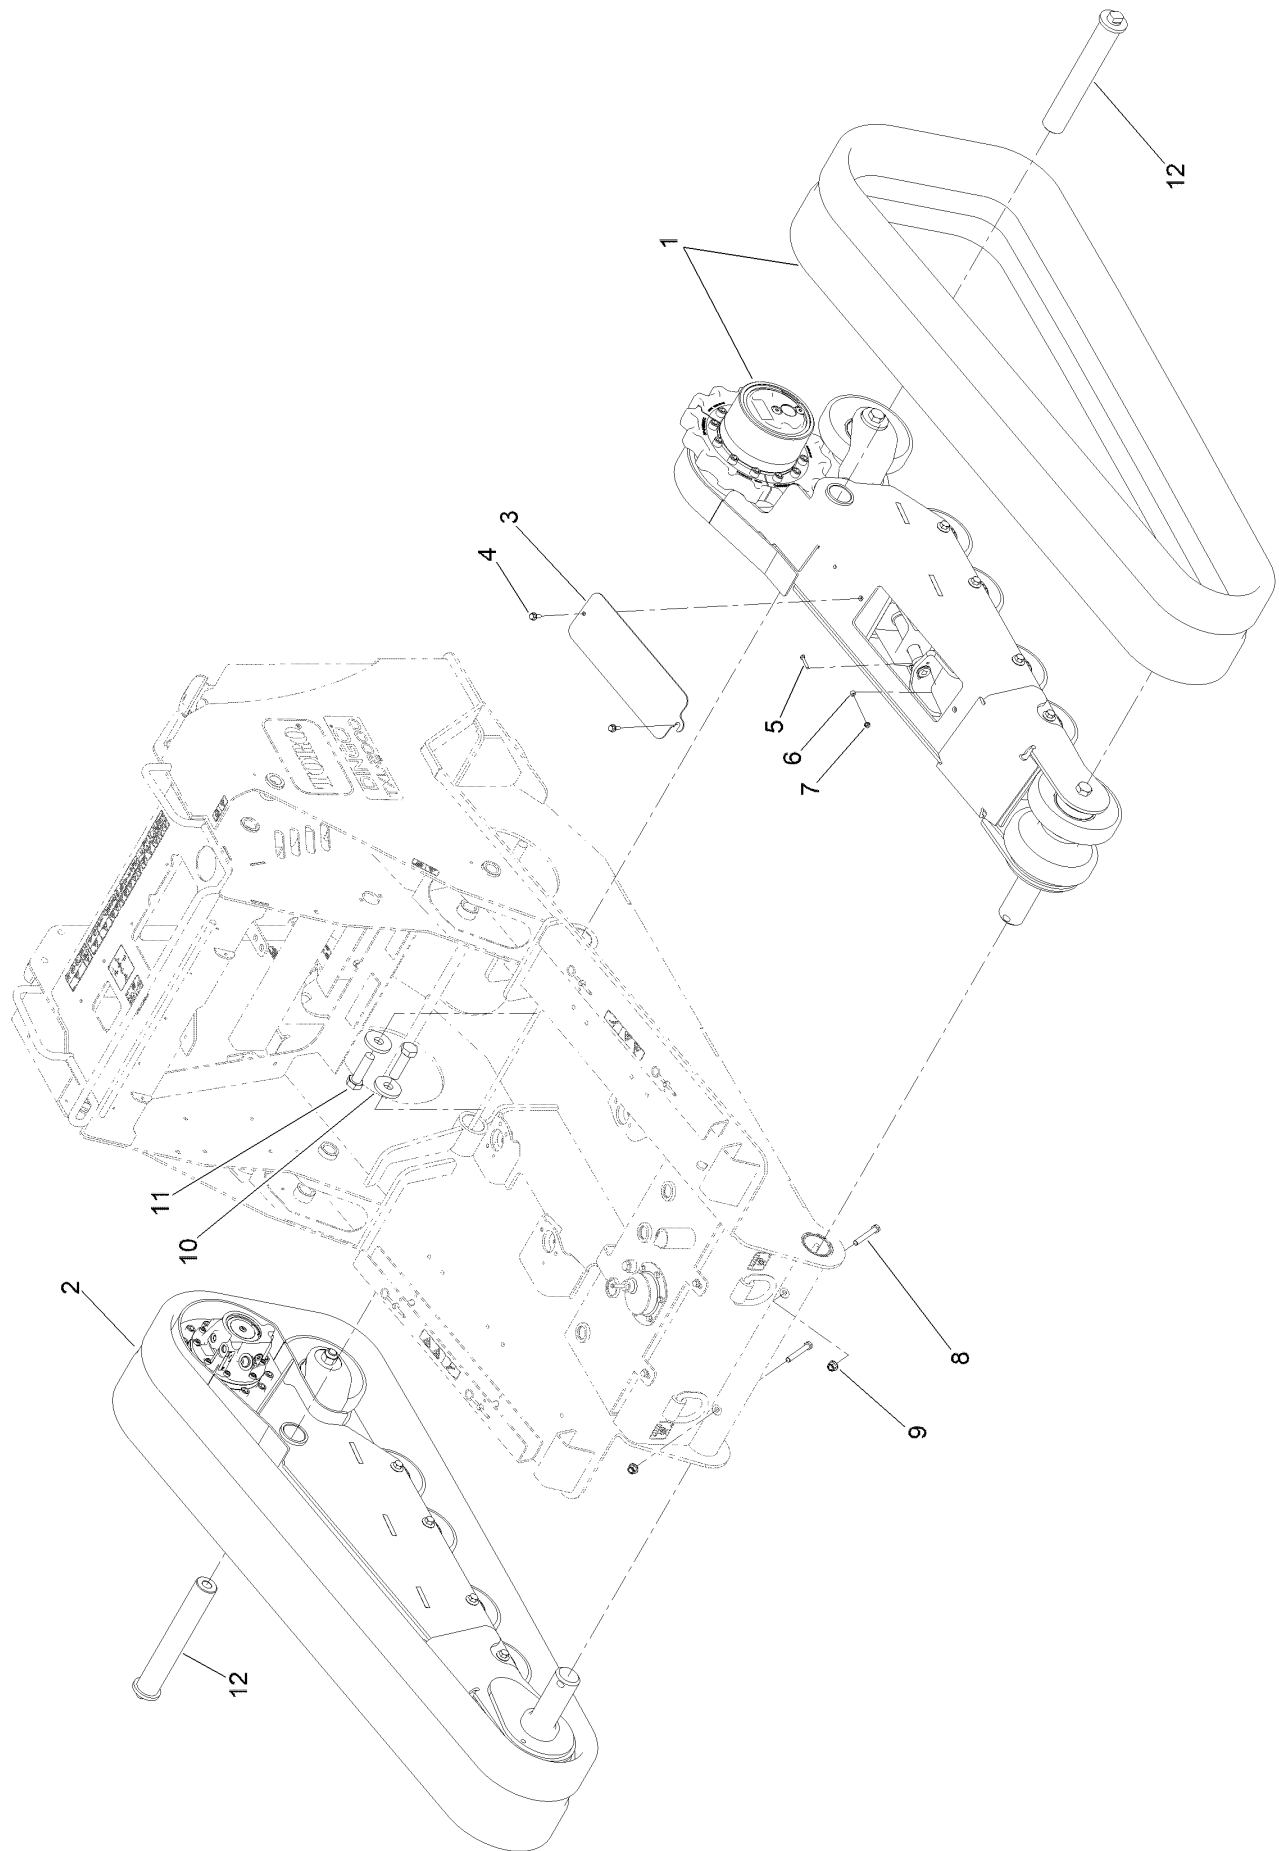


Track Mount Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Track ASM, LH ●	7	32128-32	2	Nut-HHF
2		1	Track ASM, RH ●	8	116-3114	2	Bolt-TAP
3	137-0513-03	2	Cover	9	139-1689	2	Nut-HF
4	3234-42	4	Screw-HHF	10	133-0287	2	Washer-Wheel
5	321-9	2	Screw-HH	11	AU426-1656	2	Screw-Cap, HH
6	98-4799	2	Spacer	12	138-2308	2	Shaft-Mount, Rear

● Not serviced separately

 LH Track Assembly

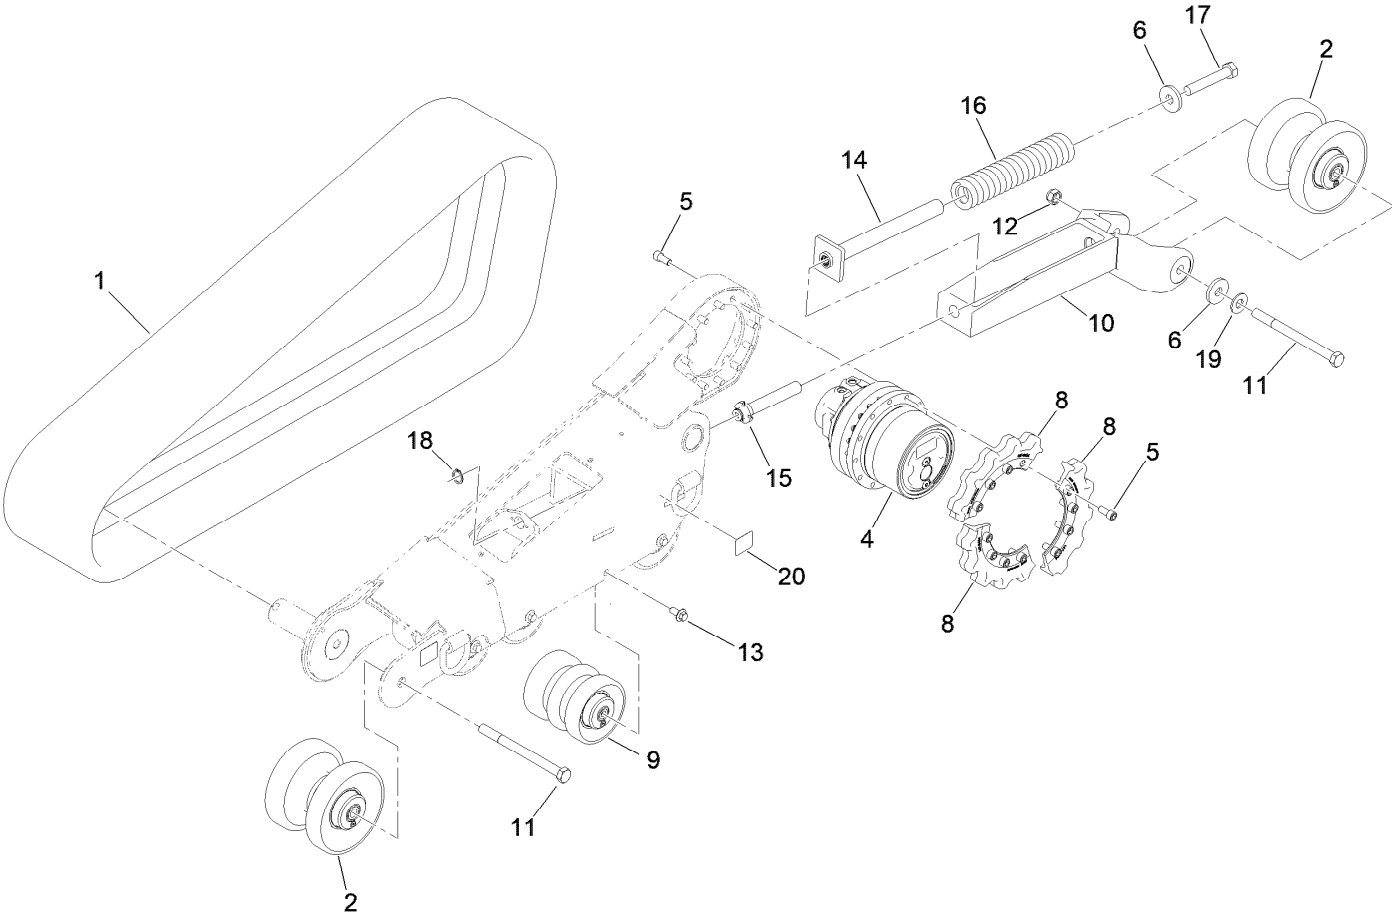


LH Track Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-4869	1	Track-Mert,	12	136-4832	1	Nut-Hex
2	137-0505	2	Front Wheel ASM	13	138-4699	8	Screw-HHF
4		1	Drive-Track ●	14	147-9122	1	Spring Catch
5	114-3041	24	Screw-HSH	15	147-9150	1	Screw-Tensioner
6	133-0287	2	Washer-Wheel	16	136-4834	1	Spring-Compression
8	147-9154	3	Sprocket Segment	17	139-4839	1	Bolt-TAP
9	137-0485	4	Road Wheel ASM	18	32151-77	1	Ring-Retaining, External
10	138-2261	1	Tensioner ASM	19	115-0722	1	Washer-Plain
11	136-4831	2	Bolt-HH	20	125-6694	2	Decal-Tie Down

● Not serviced separately

 
Track Drive Assembly

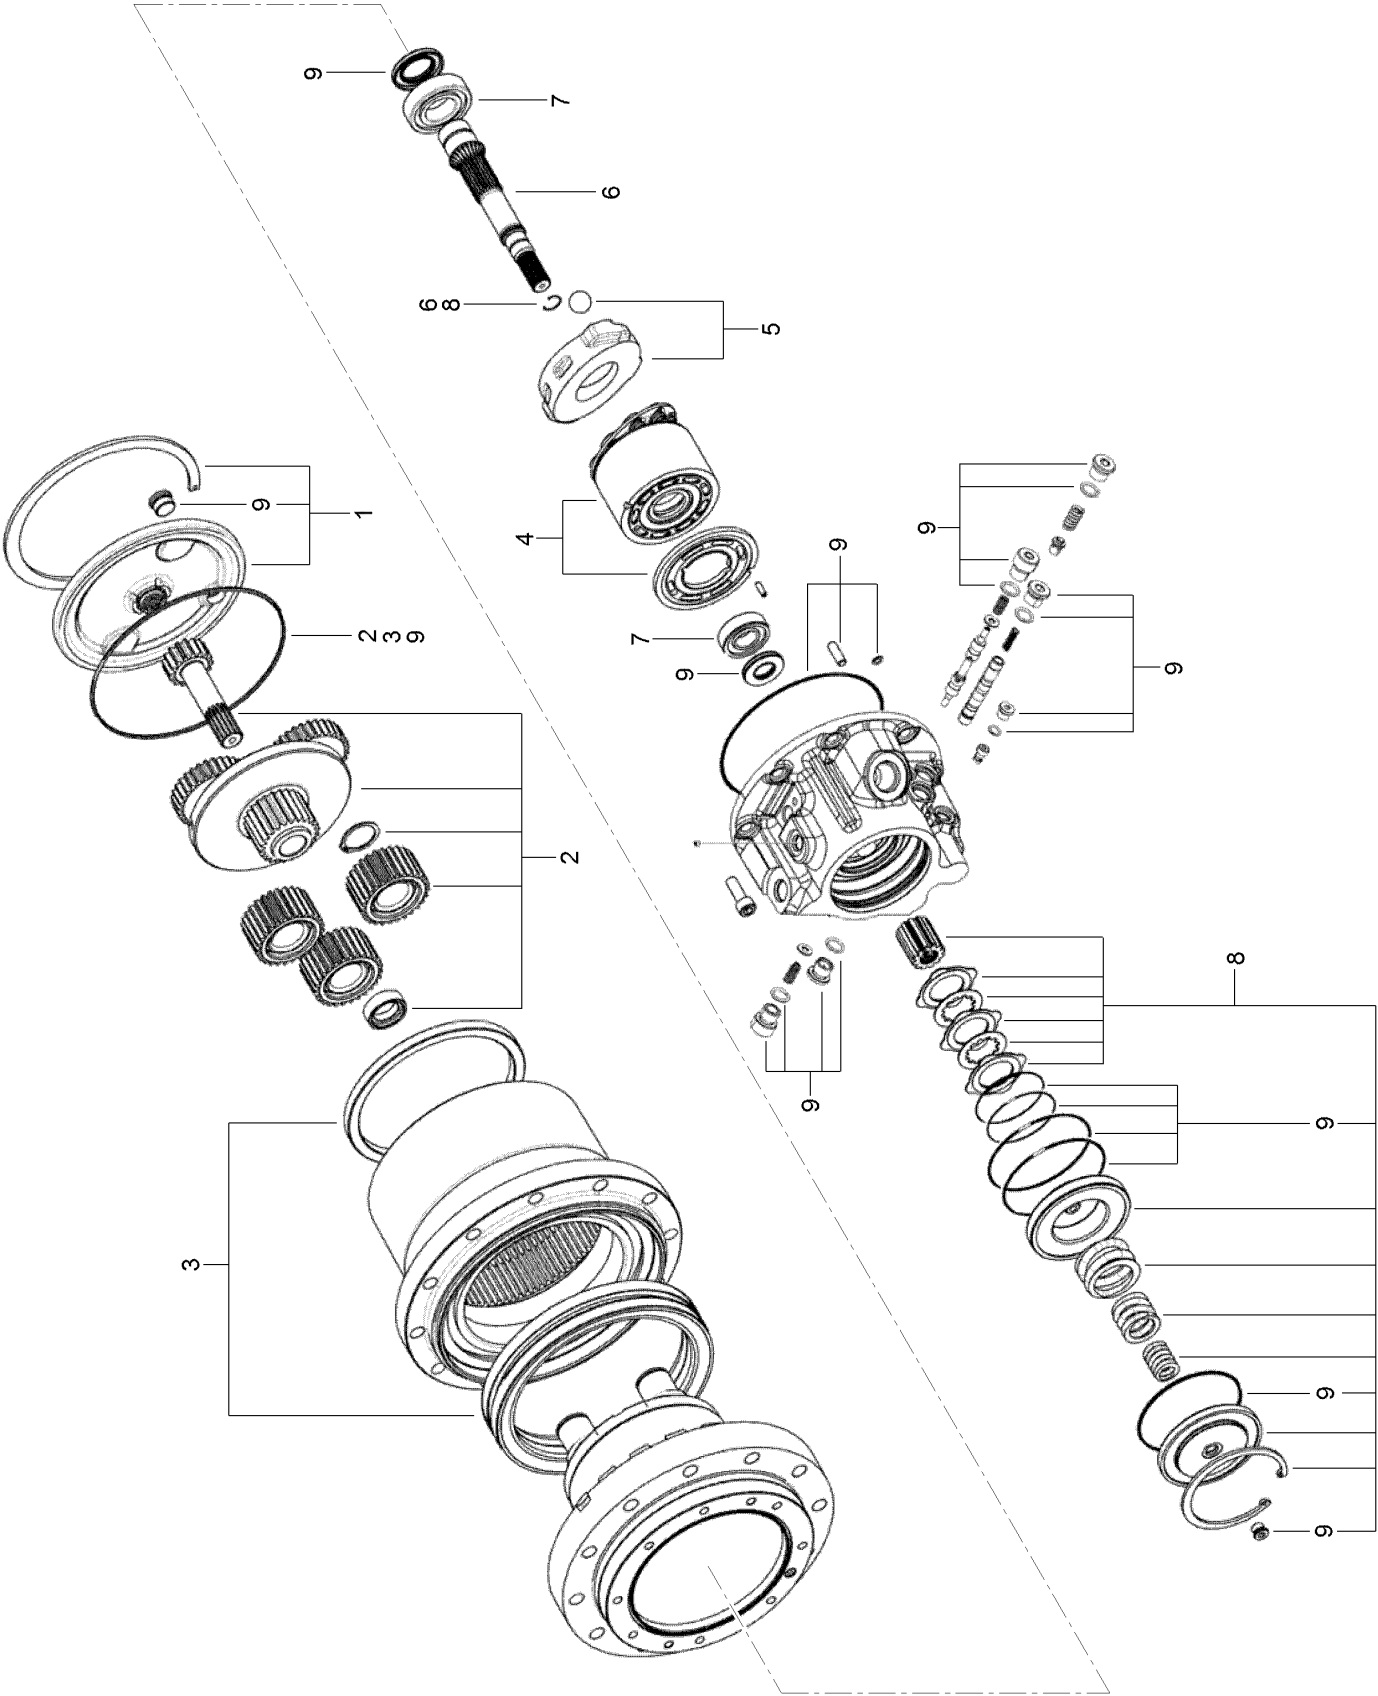

Track Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	139-4861	1	Cover ASM	6	139-4866	1	Motor Shaft ASM
2	139-4862	1	Reduction ASM	7	139-4867	1	Bearings Kit
3	139-4863	1	Seal Kit	8	139-4868	1	Parking Brake Kit
4	139-4864	1	Cylinder Block ASM	9	139-4869	1	Seal Kit
5	139-4865	1	Swashplate Kit				

 RH Track Assembly

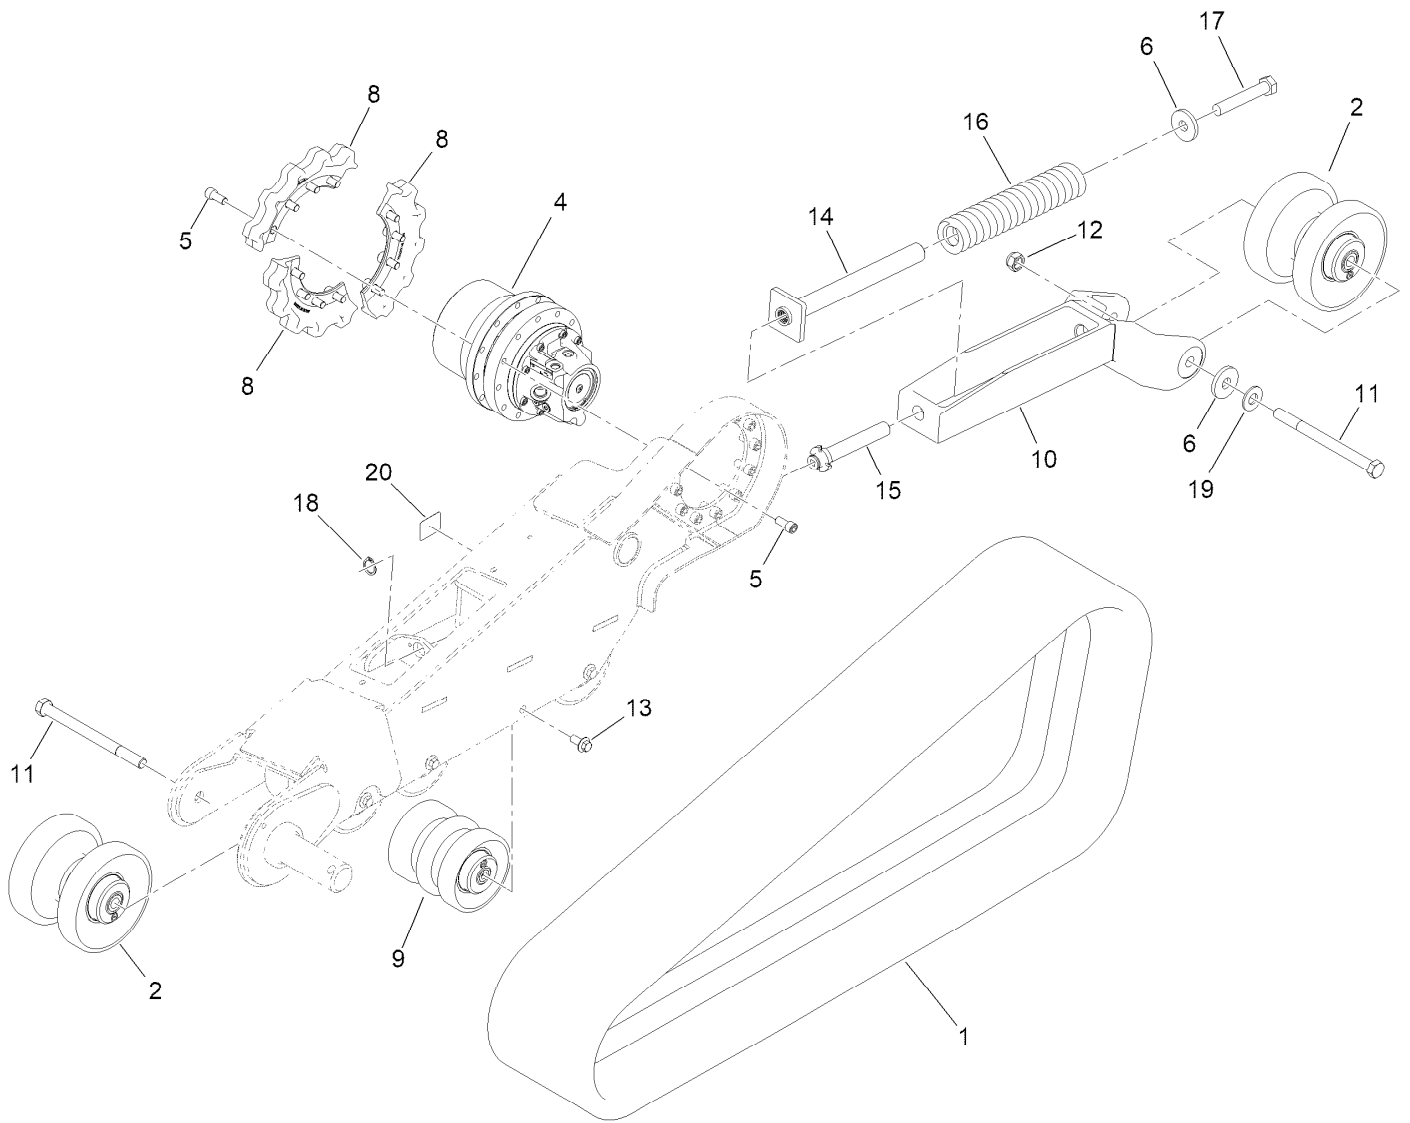


RH Track Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-4869	1	Track-Mert,	12	136-4832	1	Nut-Hex
2	137-0505	2	Front Wheel ASM	13	138-4699	8	Screw-HHF
4		1	Drive-Track ●	14	147-9122	1	Spring Catch
5	114-3041	24	Screw-HSH	15	147-9150	1	Screw-Tensioner
6	133-0287	2	Washer-Wheel	16	136-4834	1	Spring-Compression
8	147-9154	3	Sprocket Segment	17	139-4839	1	Bolt-TAP
9	137-0485	4	Road Wheel ASM	18	32151-77	1	Ring-Retaining, External
10	138-2261	1	Tensioner ASM	19	115-0722	1	Washer-Plain
11	136-4831	2	Bolt-HH	20	125-6694	2	Decal-Tie Down

● Not serviced separately

 Engine and Air Cleaner Assembly

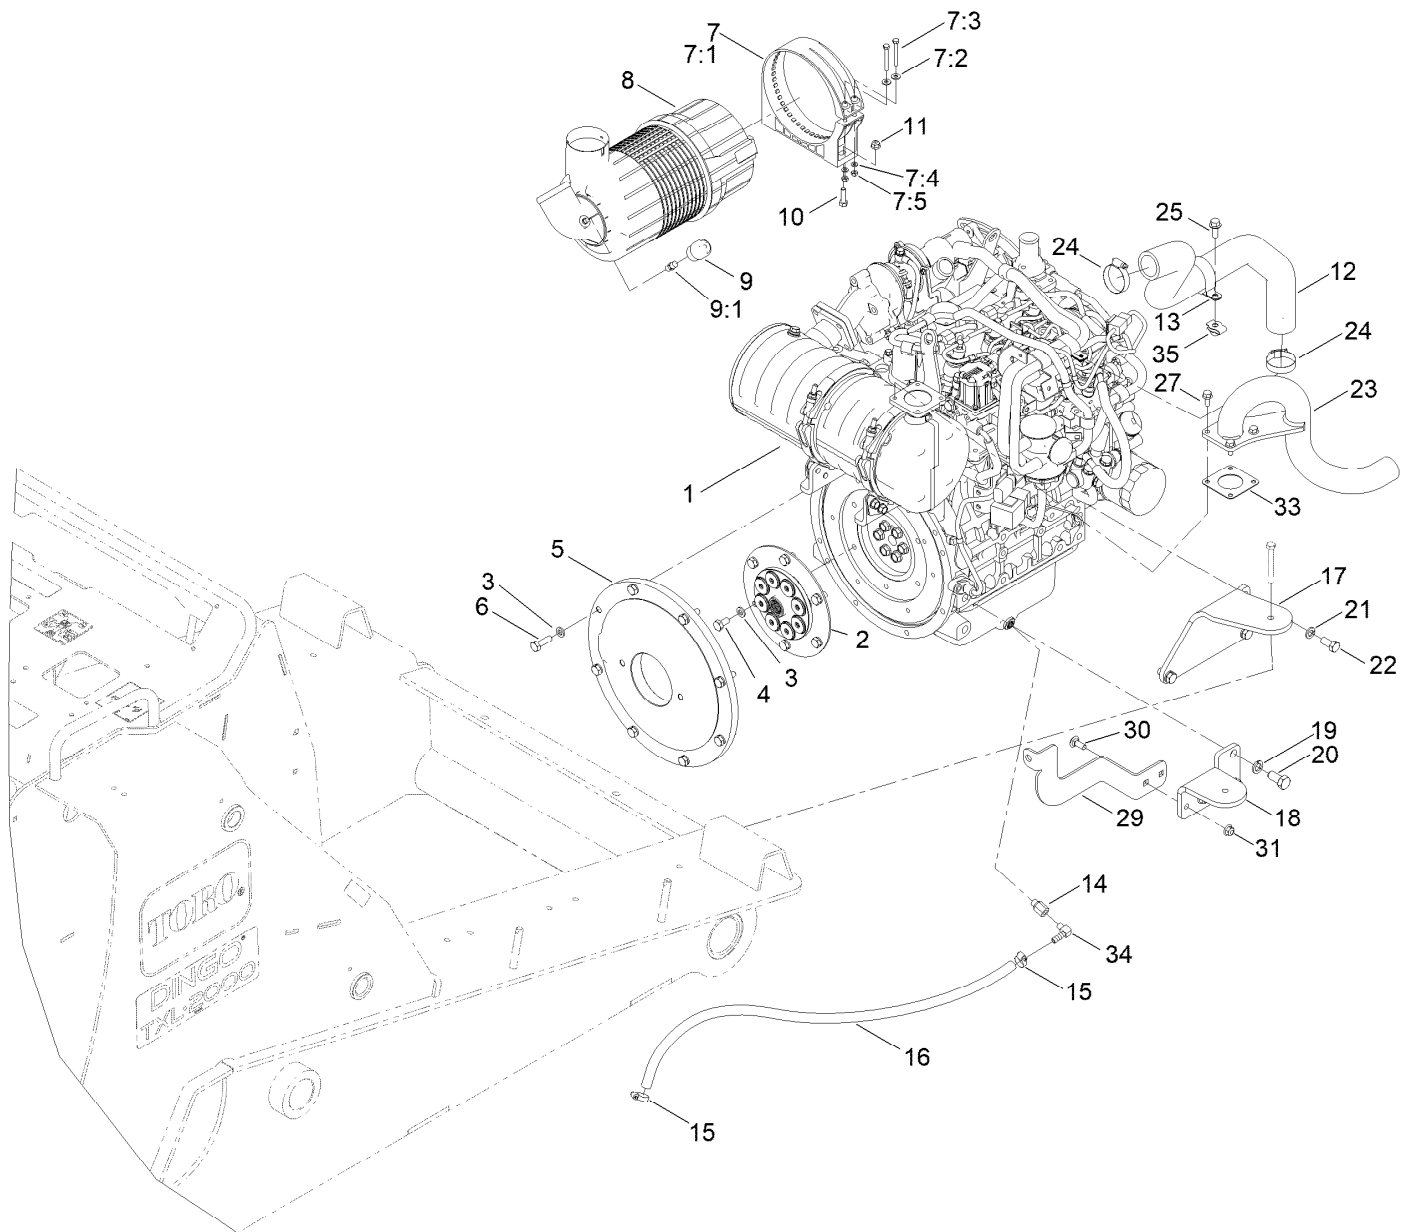


Engine and Air Cleaner Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-4779	1	Engine-Kubota
2	138-4700	1	Coupler-Spring, Flywheel
3	107-1413	14	Washer-Hardened
4	99-5130	6	Screw-HH
5	132-6120-0P	1	Plate-Flywheel
6	117-5663	8	Screw-HH
7	99-5414	1	Strap-Cleaner, Air
7:1	108-1512	2	Spring
7:2	3256-22	2	Washer-Flat
7:3	33113-050	2	Screw-HH
7:4	33093-00	2	Washer-Flat
7:5	33023-00	2	Nut-Lock
8	99-5410	1	Air Cleaner ASM
9	104-3563	1	Indicator
9:1	94-1416	1	Adapter-Indicator
10	322-16	2	Screw-HH
11	119-4041	2	Nut-HF
12	139-1172	1	Hose-Air, Cooler
13	115-9469	1	Clamp-R

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
14	136-4867	1	Adapter-Drain
15	2412-36	2	Clamp-Hose
16	133-1621	1	Hose-Drain
17	133-6962-03	1	Mount-Engine
18	133-6964-03	1	Mount-Engine
19	43-5950	2	Washer-Lock, Spring
20	43-3210	2	Screw-HH
21	48-8070	3	Washer-Lock
22	AU514-842	3	Screw-HH
23	133-6973	1	Pipe-Exhaust
24	2412-3	2	Clamp-Hose
25	3234-11	1	Screw-HHF
27	33104-020	4	Screw-HHF
29	138-2331-03	1	Bracket-Pump, RH
30	3231-2	2	Bolt-CARR
31	119-4042	2	Nut-HF, NI
33	100-9333	1	Gasket-Muffler
34	99-7230	1	Fitting-90 DEG
35	105-4886	1	Nut-Tinnerman

 Air Cleaner Assembly No. 99-5410

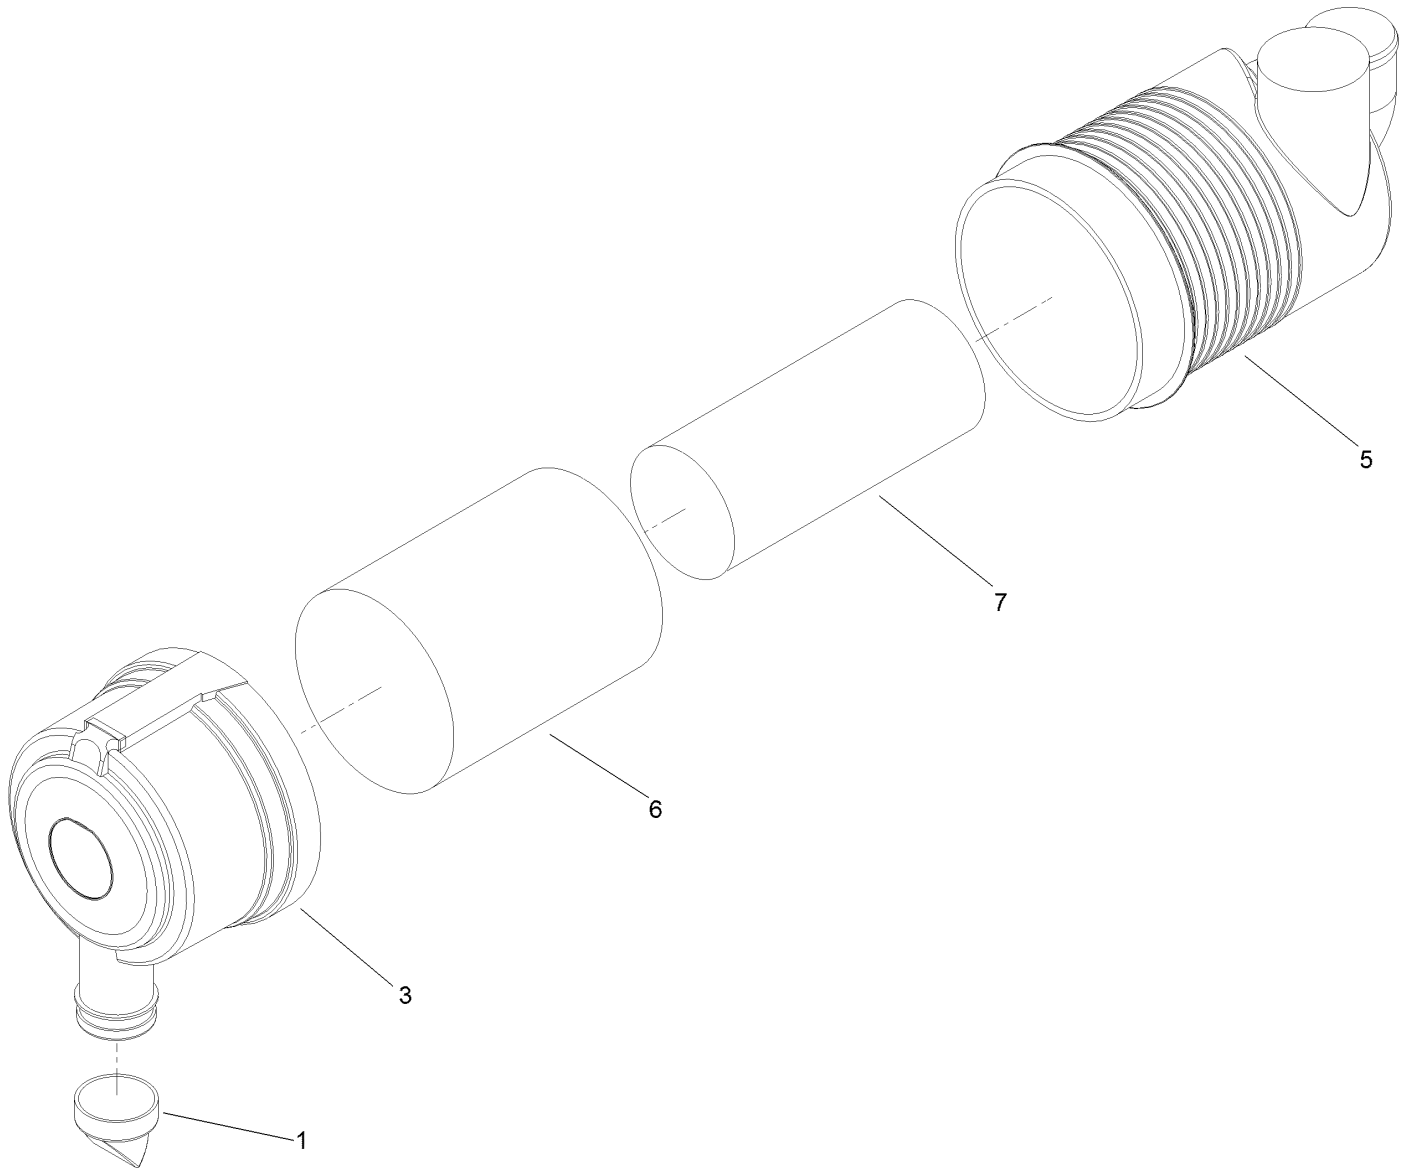


Air Cleaner Assembly No. 99-5410 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-4258	1	Valve-Vacuator	6	108-3814	1	Filter-Air
3	104-4259	1	Cover	7	108-3816	1	Filter-Air
5		1	Body ASM ●				

● Not serviced separately


Engine Mount and Air Intake Hose Assembly

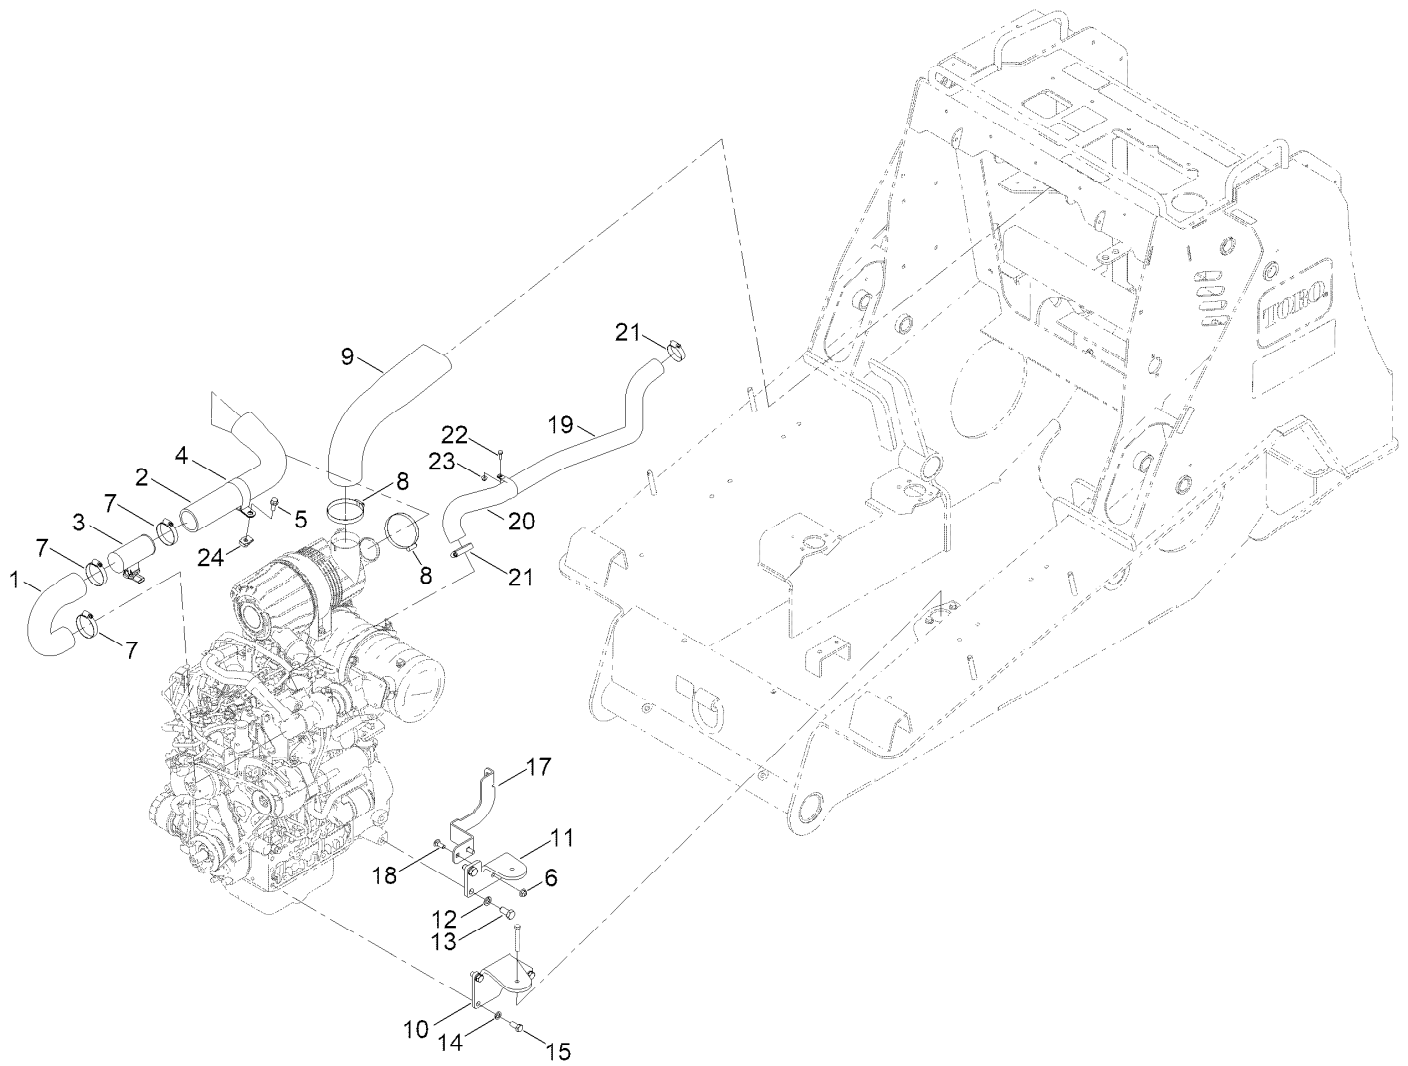

Engine Mount and Air Intake Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-1622	1	Hose-Intake	13	43-3210	2	Screw-HH
2	137-0050	1	Hose-Intake, Air	14	48-8070	3	Washer-Lock
3	136-4741	1	Sensor	15	AU514-842	3	Screw-HH
4	2412-102	1	Clamp-R	17	138-2332-03	1	Bracket-Pump, LH
5	3234-11	1	Screw-HHF	18	3231-2	2	Bolt-CARR
6	119-4042	2	Nut-HF, NI	19	137-0140	1	Hose-Air, Cooler
7	2412-42	3	Clamp-Hose	20	2412-148	1	Clamp-R
8	2412-110	2	Clamp-Band/Screw	21	2412-3	2	Clamp-Hose
9	133-1689	1	Hose-Intake	22	321-4	1	Screw-HH
10	133-6967-03	1	Mount-Engine	23	104-7201	1	Nut-HF, NI
11	133-6968-03	1	Mount-Engine	24	105-4886	1	Nut-Tinnerman
12	43-5950	2	Washer-Lock, Spring				

 
Fuel Pump and Water Seperator Assembly

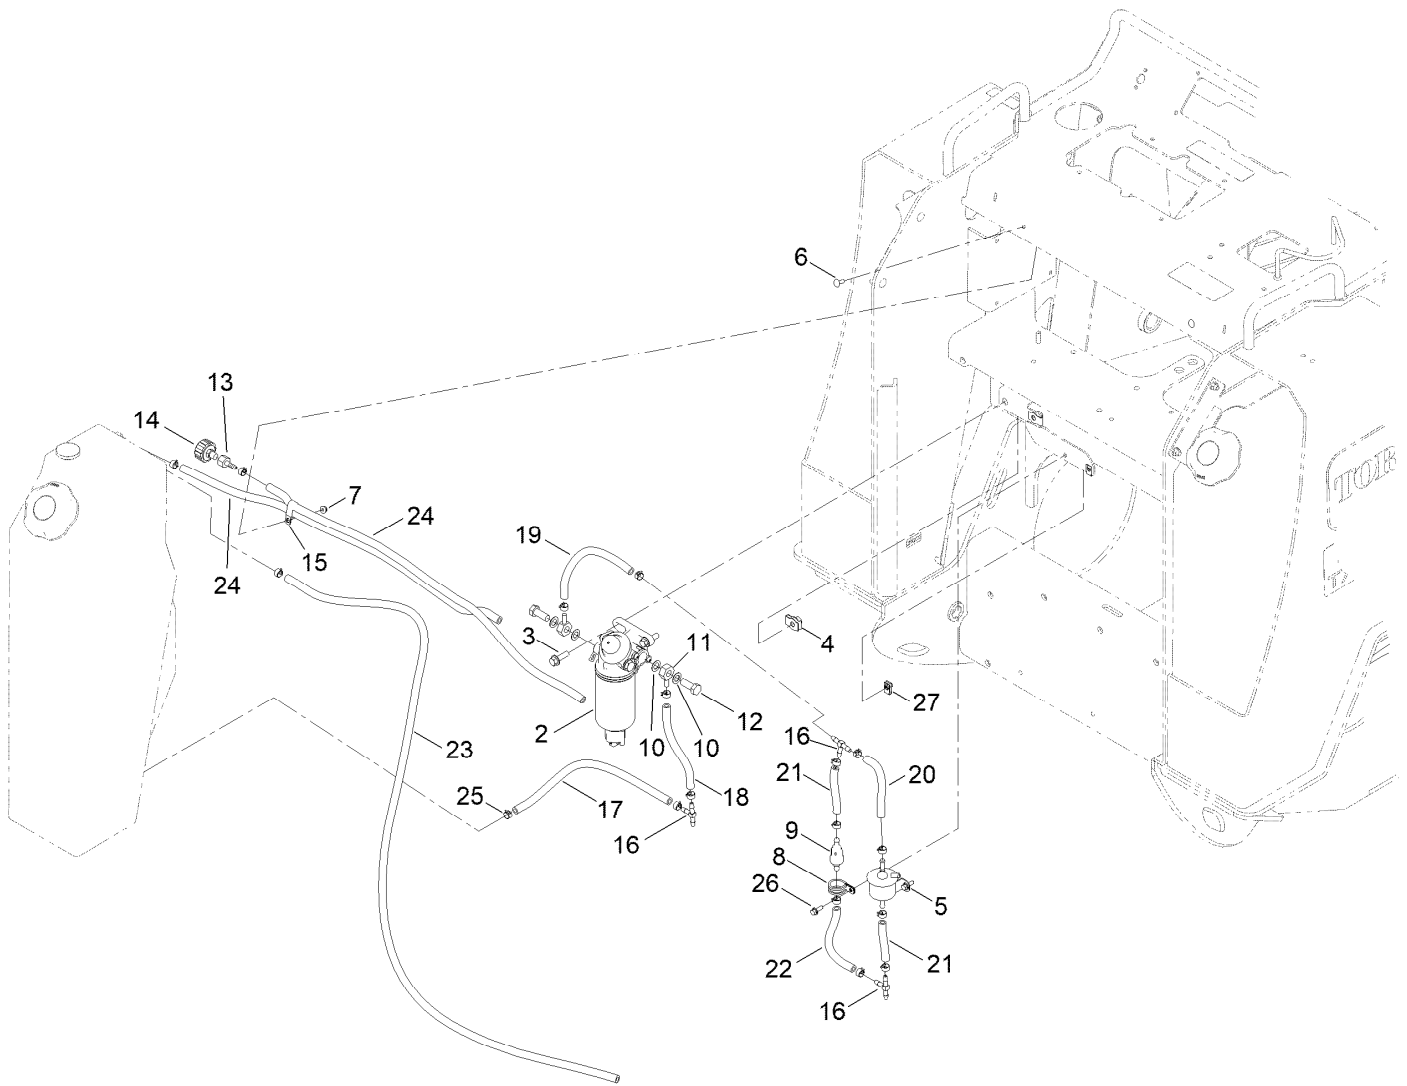

Fuel Pump and Water Seperator Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	136-4734	1	Filter-Seperator, Water	15	119-8153	1	Clamp-R, Double Tube
3	3234-24	2	Screw-HHF	16	99-5005	3	Fitting-Tee, Barbed
4	105-4886	2	Nut-Tinnerman	17	110-4113	1	Hose-Fuel
5	139-9642	1	Assy Pump,Fuel	18	110-4124	1	Hose-Fuel
6	3229-1	1	Screw-CARR	19	136-6098	1	Hose-Fuel
7	104-7201	1	Nut-HF, NI	20	109-0310	1	Hose-Fuel
8	132-7590	1	R-Clamp	21	136-6097	2	Hose-Fuel
9	136-4735	1	Valve-Bypass	22	108-3280	1	Hose-Fuel
10	137-0067	4	O-Ring	23	138-4715	1	Hose-Fuel
11	137-0065	2	Adapter-Fuel	24	136-6096	2	Hose-Fuel
12	137-0066	2	Bolt-Joint	25	92-2379	20	Clamp-Hose
13	354-95	1	Fitting-Straight	26	3234-4	2	Screw-HHF
14	68-6150	1	Breather	27	107069	2	Clip

 Fuel Filter and Hose Assembly

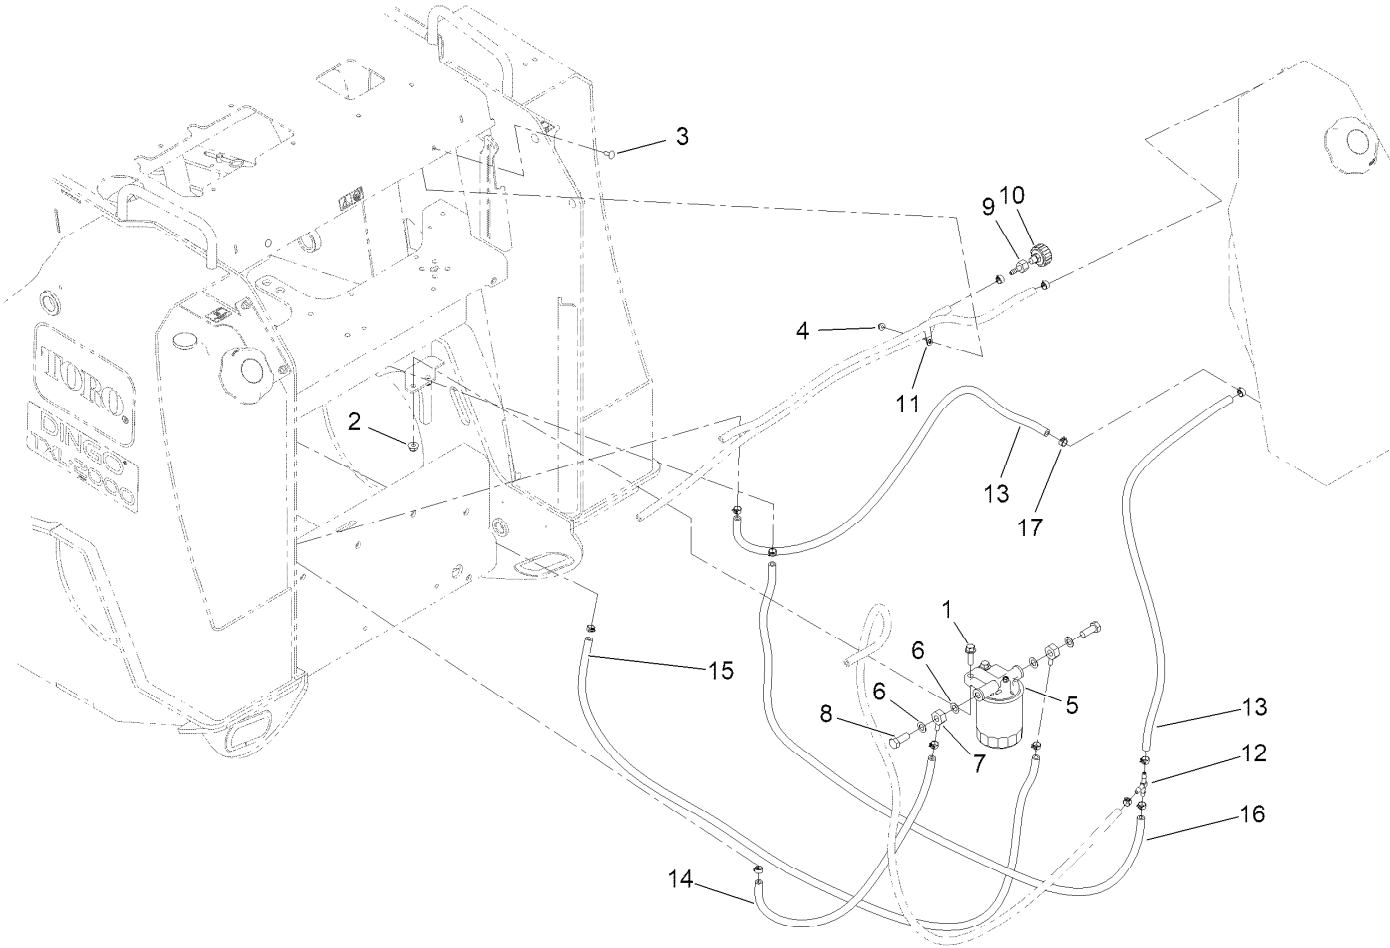


Fuel Filter and Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3234-24	2	Screw-HHF
2	119-4042	2	Nut-HF, NI
3	3229-1	1	Screw-CARR
4	104-7201	1	Nut-HF, NI
5	136-4733	1	Filter-Fuel
6	137-0067	4	O-Ring
7	137-0065	2	Adapter-Fuel
8	137-0066	2	Bolt-Joint
9	354-95	1	Fitting-Straight

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	68-6150	1	Breather
11	119-8153	1	Clamp-R, Double Tube
12	99-5005	1	Fitting-Tee, Barbed
13	136-6099	2	Hose-Fuel
14	114-8206	1	Hose-Fuel
15	132-1330	1	Hose-Fuel
16	138-4714	1	Hose-Fuel
17	92-2379	10	Clamp-Hose


Radiator and Fan Assembly

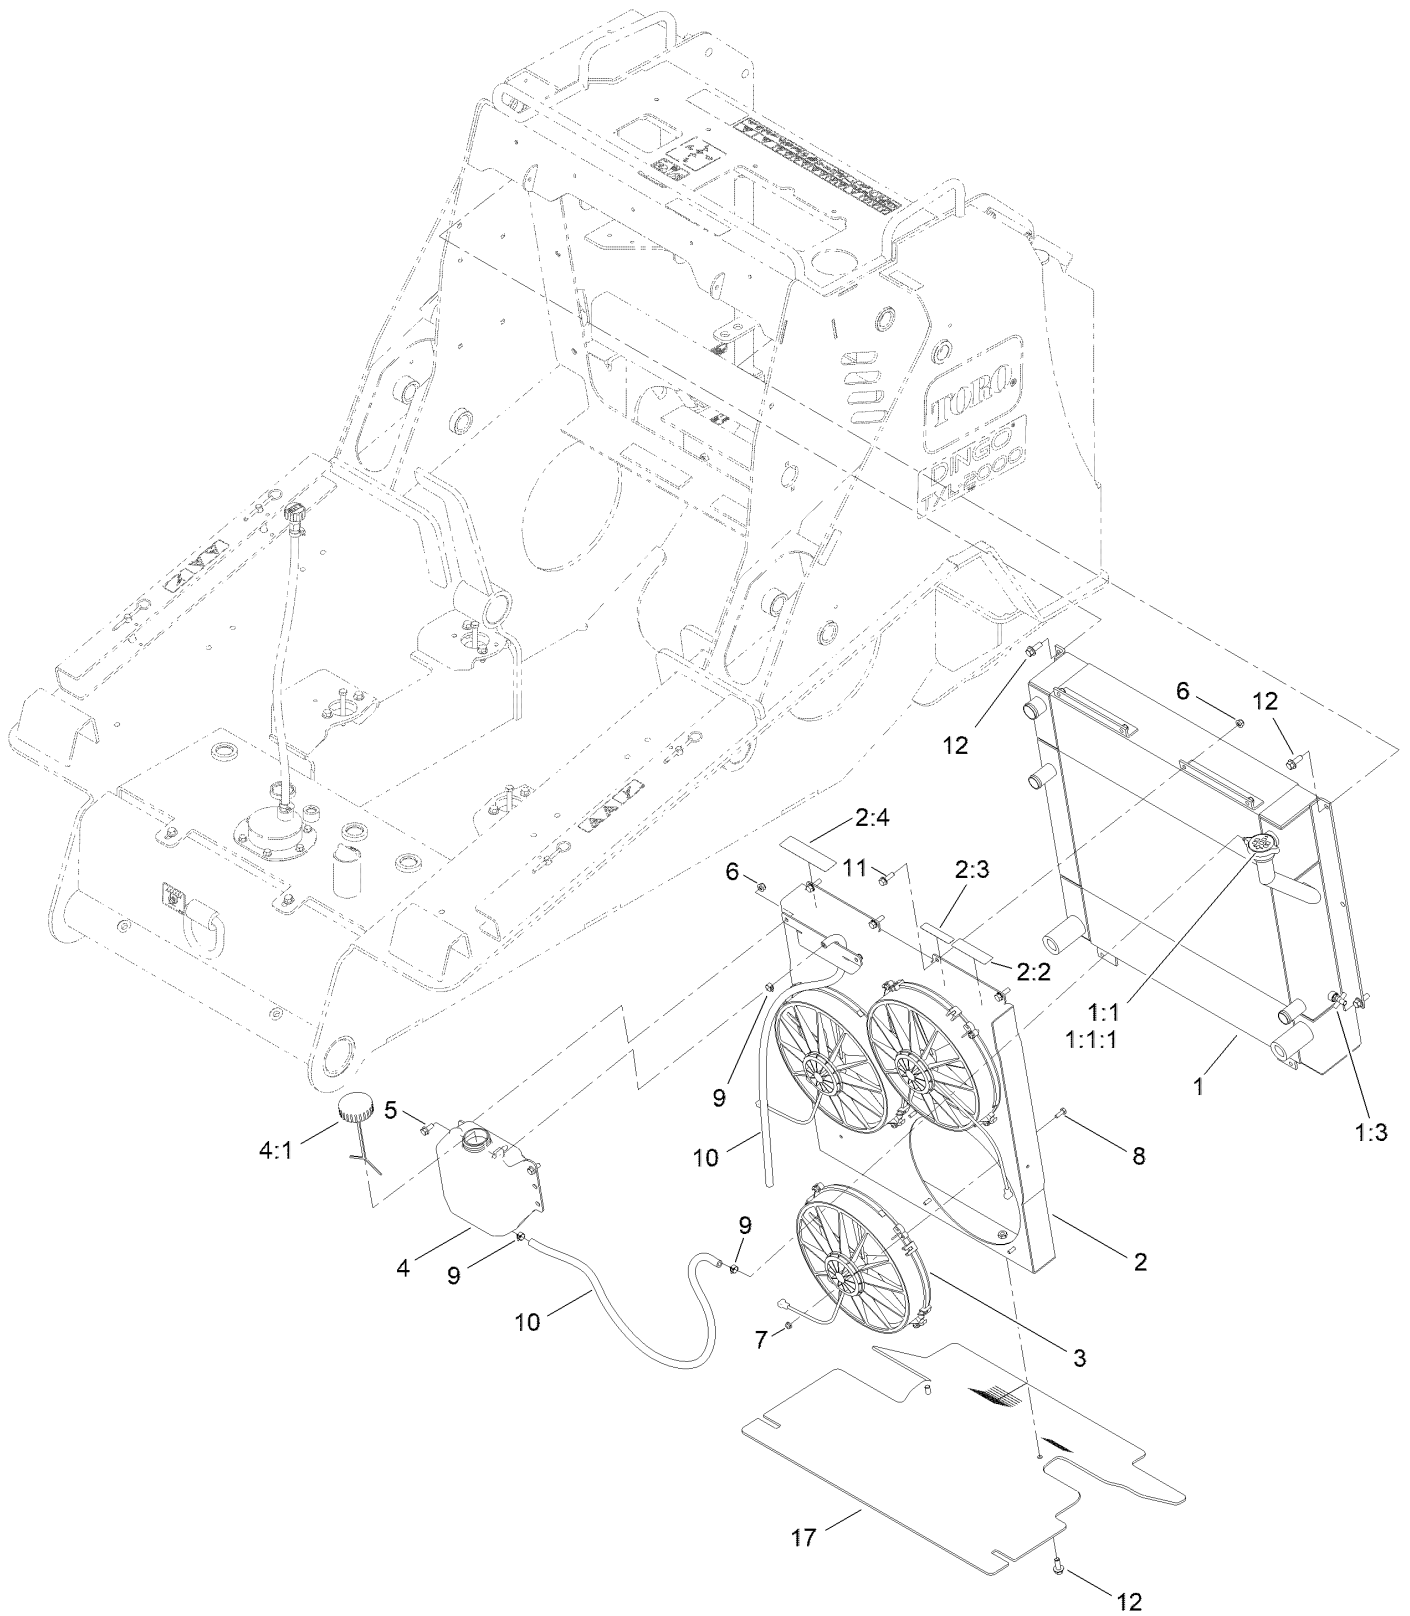

Radiation and Fan Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-4705	1	Radiator/Cooler ASM	4:1	87-7050	1	Cap-Reservoir
1:1	115-7766	1	Cap-Radiator	5	3234-47	2	Screw-HHF
1:1:1	106-6755	1	Decal-Cap, Radiator	6	119-4041	8	Nut-HF
1:3	304-46	2	Draincock	7	104-7201	12	Nut-HF, NI
2	138-4727	1	Cooler Shroud ASM	8	321-4	12	Screw-HH
2:2	115-4865	1	Decal-Fill, Radiator	9	92-2379	3	Clamp-Hose
2:3	93-6681	1	Decal-Warning, Fan	10	136-6096	2	Hose-Fuel
2:4	93-7814	1	Decal-Danger	11	3234-29	6	Screw-HHF
3	1-633831	3	Fan	12	3234-42	6	Screw-HHF
4	144-6219	1	Reservoir-Coolant ASM	17	139-5713	1	Baffle-Rubber

 Radiator Hose Assembly

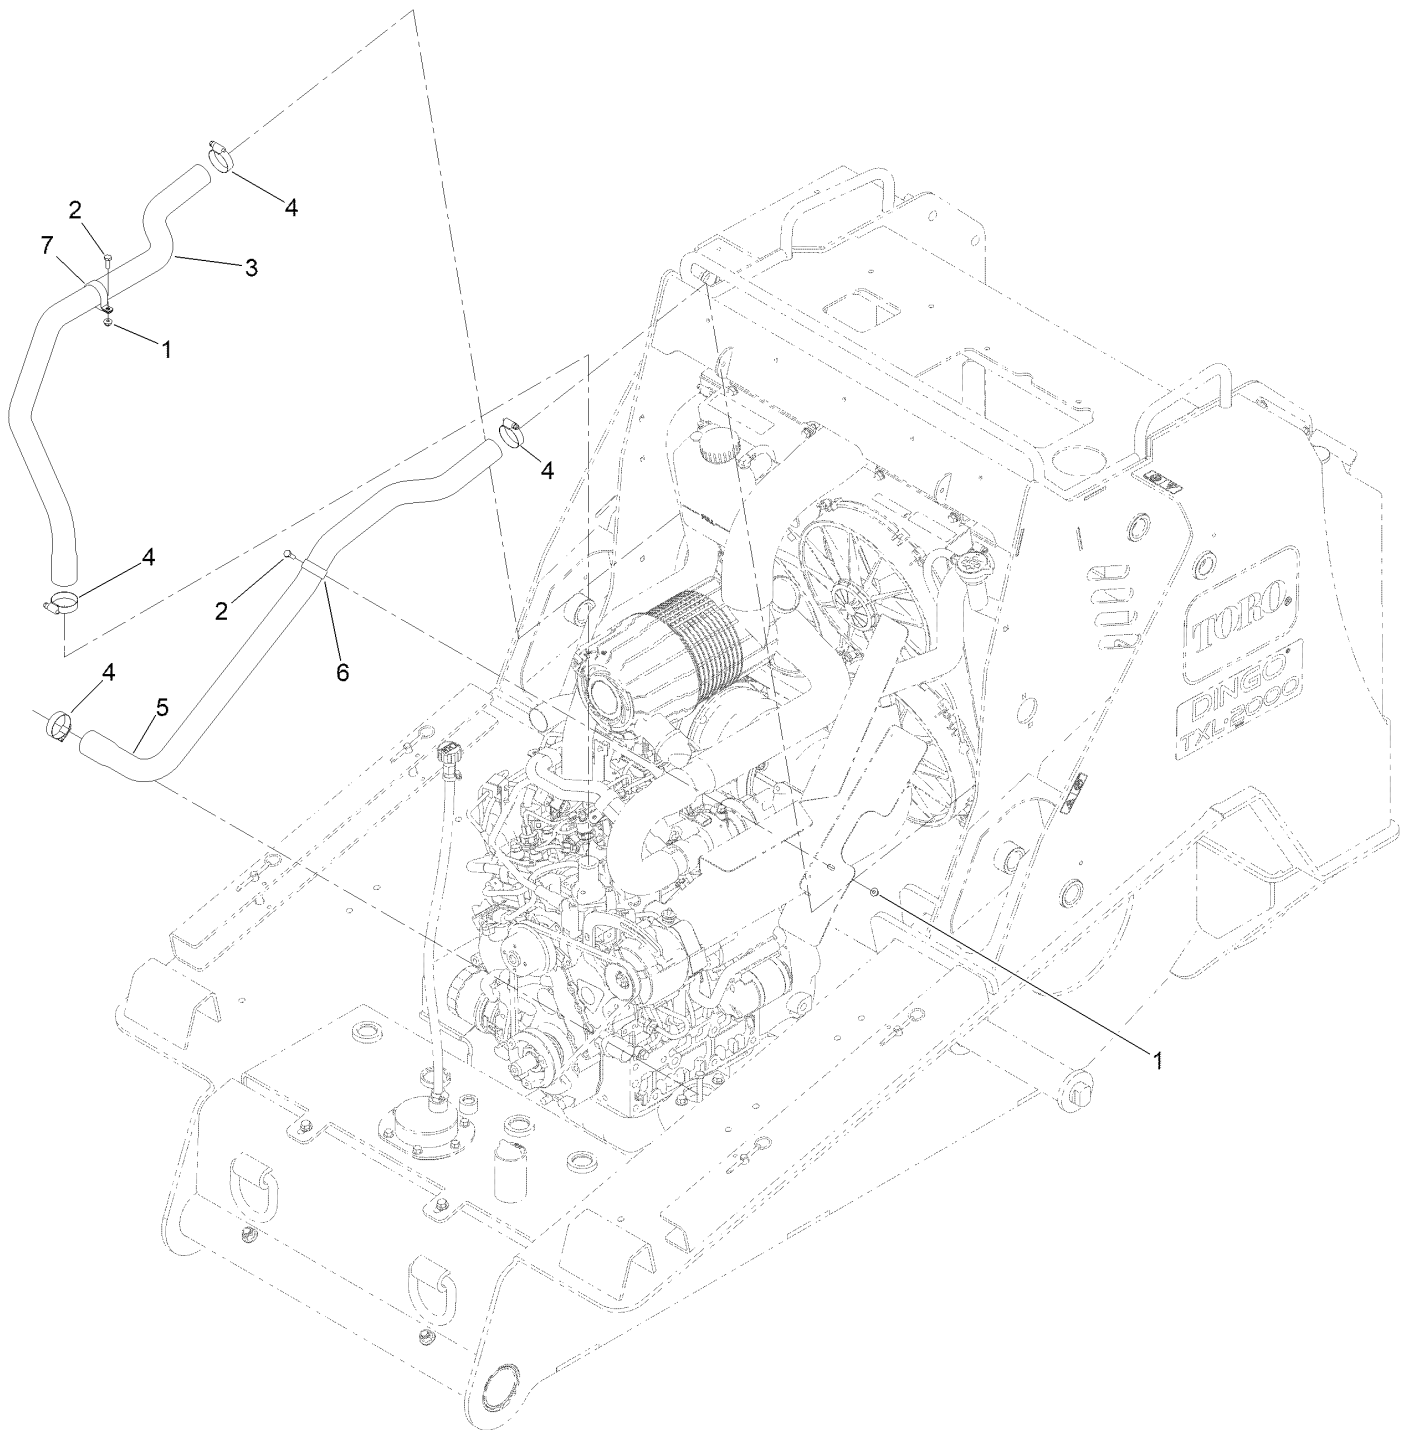


Radiator Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-7201	1	Nut-HF, NI
2	3234-4	1	Screw-HHF
3	133-1691	1	Hose-Radiator, Upper
4	2412-3	4	Clamp-Hose

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	138-4744	1	Hose-Radiator, Lower
6	137-0147	1	Clamp-R
7	2412-147	1	Clamp-R

 Lift Valve and Pump Assembly

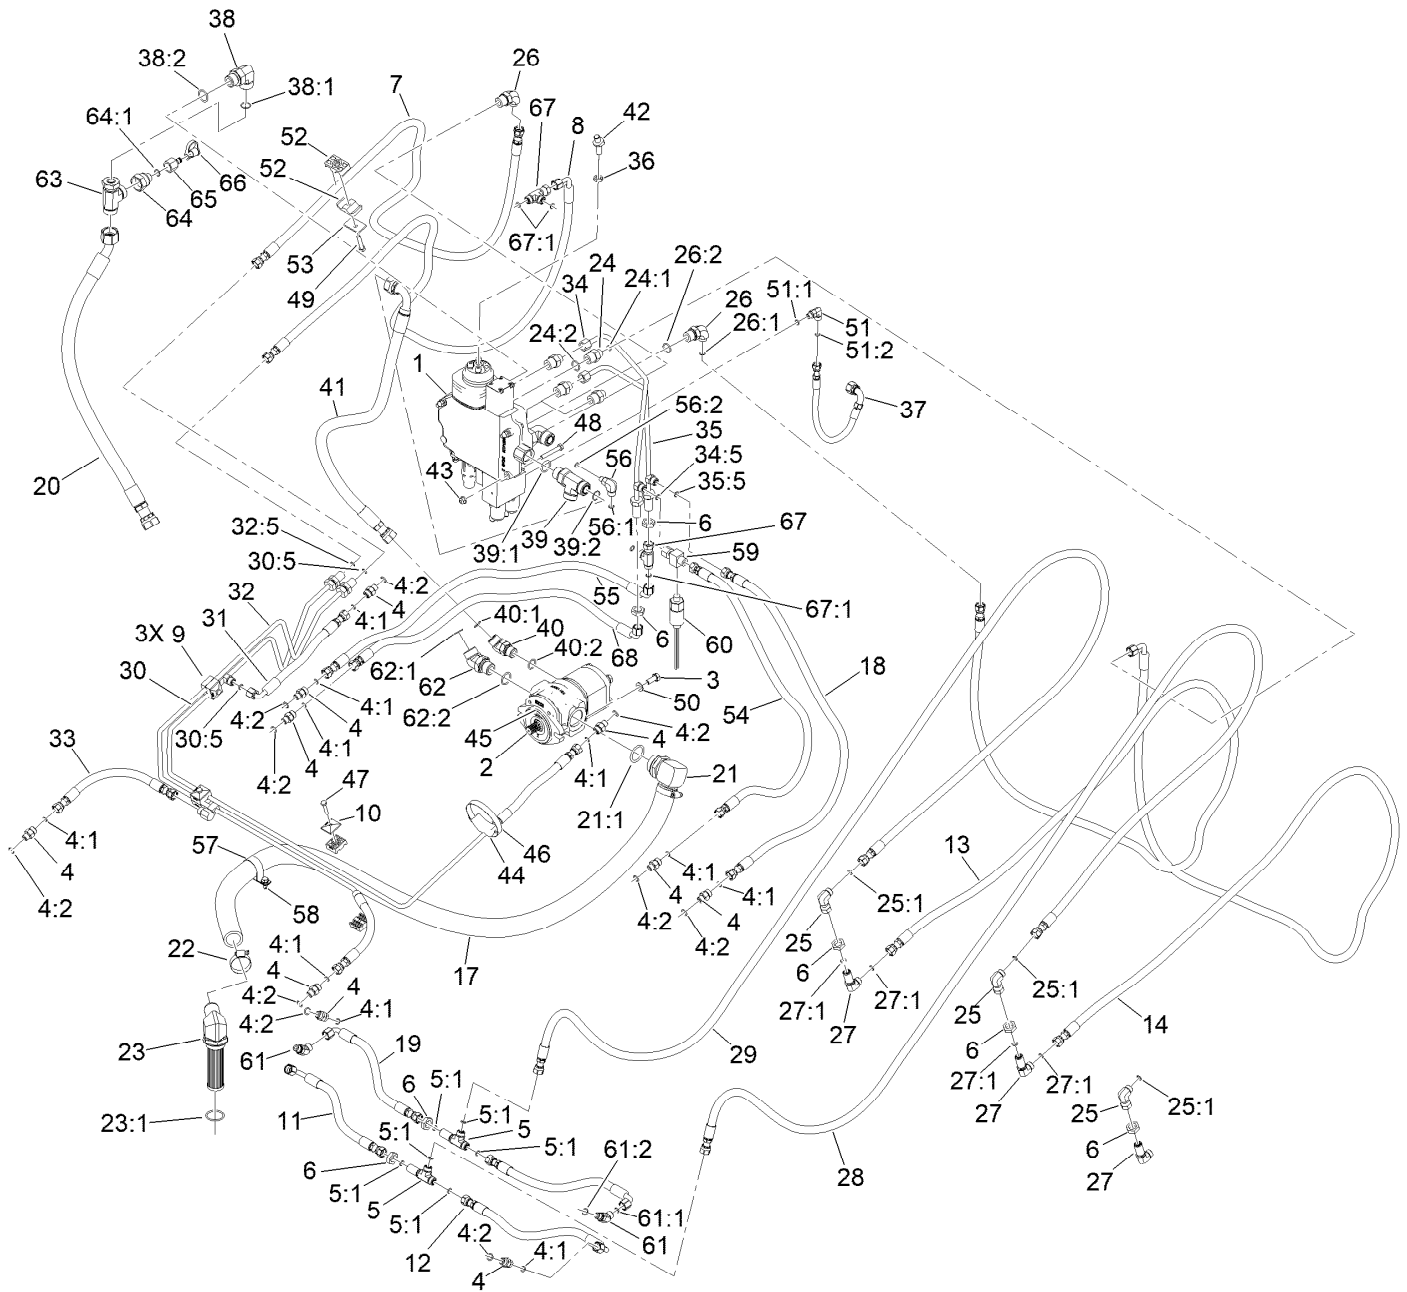


Lift Valve and Pump Assembly (continued)

Ref.	Part Number	Qty.	Description
1	161-9450	1	Valve-Loader, Spool Lock
2	133-0281	1	Gear Pump ASM
3	33115-025	2	Screw-HH
4	340-2	10	Fitting-Straight
4:1	237-22	1	O-Ring
4:2	237-42	1	O-Ring
5	340-68	2	Fitting-Tee, Bulkhead
5:1	237-22	3	O-Ring
6	340-70	9	Nut-Lock
7	133-9356	1	HYD Hose ASM
8	133-9357	1	HYD Hose ASM
9	137-5275	3	Clamp-Hose
10	127-8424	3	Plate-Clamp, Retainer
11	139-1150	1	HYD Hose ASM
12	139-1151	1	HYD Hose ASM
13	133-1629	1	HYD Hose ASM
14	133-1630	1	HYD Hose ASM
17	133-9377	1	Hose
18	133-9372	1	HYD Hose ASM
19	139-1152	2	HYD Hose ASM
20	139-1204	1	HYD Hose ASM
21	92-7526	1	Fitting-HYD 90 Spcl
21:1	237-101	1	O-Ring
22	164-1404	2	Clamp-Hose, Lined(1.13-1.56 DIA SS)
23	145-0622	1	Strainer Fitting ASM
23:1	237-101	1	O-Ring
24	340-141	4	Fitting-STR
24:1	237-22	1	O-Ring
24:2	237-80	1	O-Ring
25	340-159	3	Elbow-90
25:1	237-22	2	O-Ring
26	340-130	2	Fitting-Elbow 90
26:1	237-22	1	O-Ring
26:2	237-80	1	O-Ring
27	340-154	3	Union-Bulkhead
27:1	237-22	2	O-Ring
28	133-9412	1	HYD Hose ASM
29	133-9413	1	HYD Hose ASM
30	137-0143	1	HYD Tube ASM
30:5	237-22	2	O-Ring
31	133-1619	1	HYD Hose ASM
32	137-0142	1	HYD Tube ASM
32:5	237-22	2	O-Ring
33	133-1617	1	HYD Hose ASM
34	136-6080	1	HYD Tube ASM
34:5	237-22	2	O-Ring
35	136-6081	1	HYD Tube ASM
35:5	237-22	2	O-Ring
36	51-2070	1	Nut

Ref.	Part Number	Qty.	Description
37	137-0117	1	HYD Hose ASM
38	340-142	2	Fitting-Elbow, 90 DEG
38:1	237-58	1	O-Ring
38:2	237-81	1	O-Ring
39	340-148	1	Fitting-Tee
39:1	237-81	1	O-Ring
39:2	237-58	2	O-Ring
40	340-14	1	Fitting-HYD, 45 DEG
40:1	237-65	1	O-Ring
40:2	237-80	1	O-Ring
41	138-0233	1	HYD Hose ASM
42	138-2343	1	Shaft-Control
43	119-4041	3	Nut-HF
44	137-0146	1	Block-Hardline
45	237-161	1	O-Ring
46	2412-110	1	Clamp-Band/Screw
47	321-13	3	Screw-HH
48	322-11	3	Screw-HH
49	322-8	1	Screw-HH
50	33095-00	2	Washer-Flat
51	340-132	1	Fitting-Elbow, 90 DEG
51:1	237-78	1	O-Ring
51:2	237-21	1	O-Ring
52	56-7971	2	Clamp-Tube
53	69-9760	1	Plate-Cover
54	140-6003	1	HYD Hose ASM
55	138-4701	1	HYD Hose ASM
56	340-97	1	Fitting-Elbow, 90 DEG
56:1	237-22	1	O-Ring
56:2	237-78	1	O-Ring
57	2412-147	1	Clamp-R
58	32104-32	1	Screw-HWH
59	95-5658	1	Fitting-HYD, Special
59:1	237-22	1	O-Ring ●
60	139-4848	1	Switch-Pressure,
61	340-87	2	Fitting-Elbow, 45 DEG
61:1	237-22	1	O-Ring
61:2	237-42	1	O-Ring
62	100-5530	1	Fitting-45 DEG
62:1	237-58	1	O-Ring
62:2	237-81	1	O-Ring
63	ST50975	1	Fitting-HYD
64	95-3513	1	Fitting-Straight
64:1	237-30	1	O-Ring
65	100-5616	1	Fitting
66	354-79	1	Cap-Dust
67	340-115	2	Fitting-Tee
67:1	237-22	2	O-Ring
68	140-6004	1	HYD Hose ASM

● Not illustrated

Spool Lock Loader Valve Assembly No. 161-9450

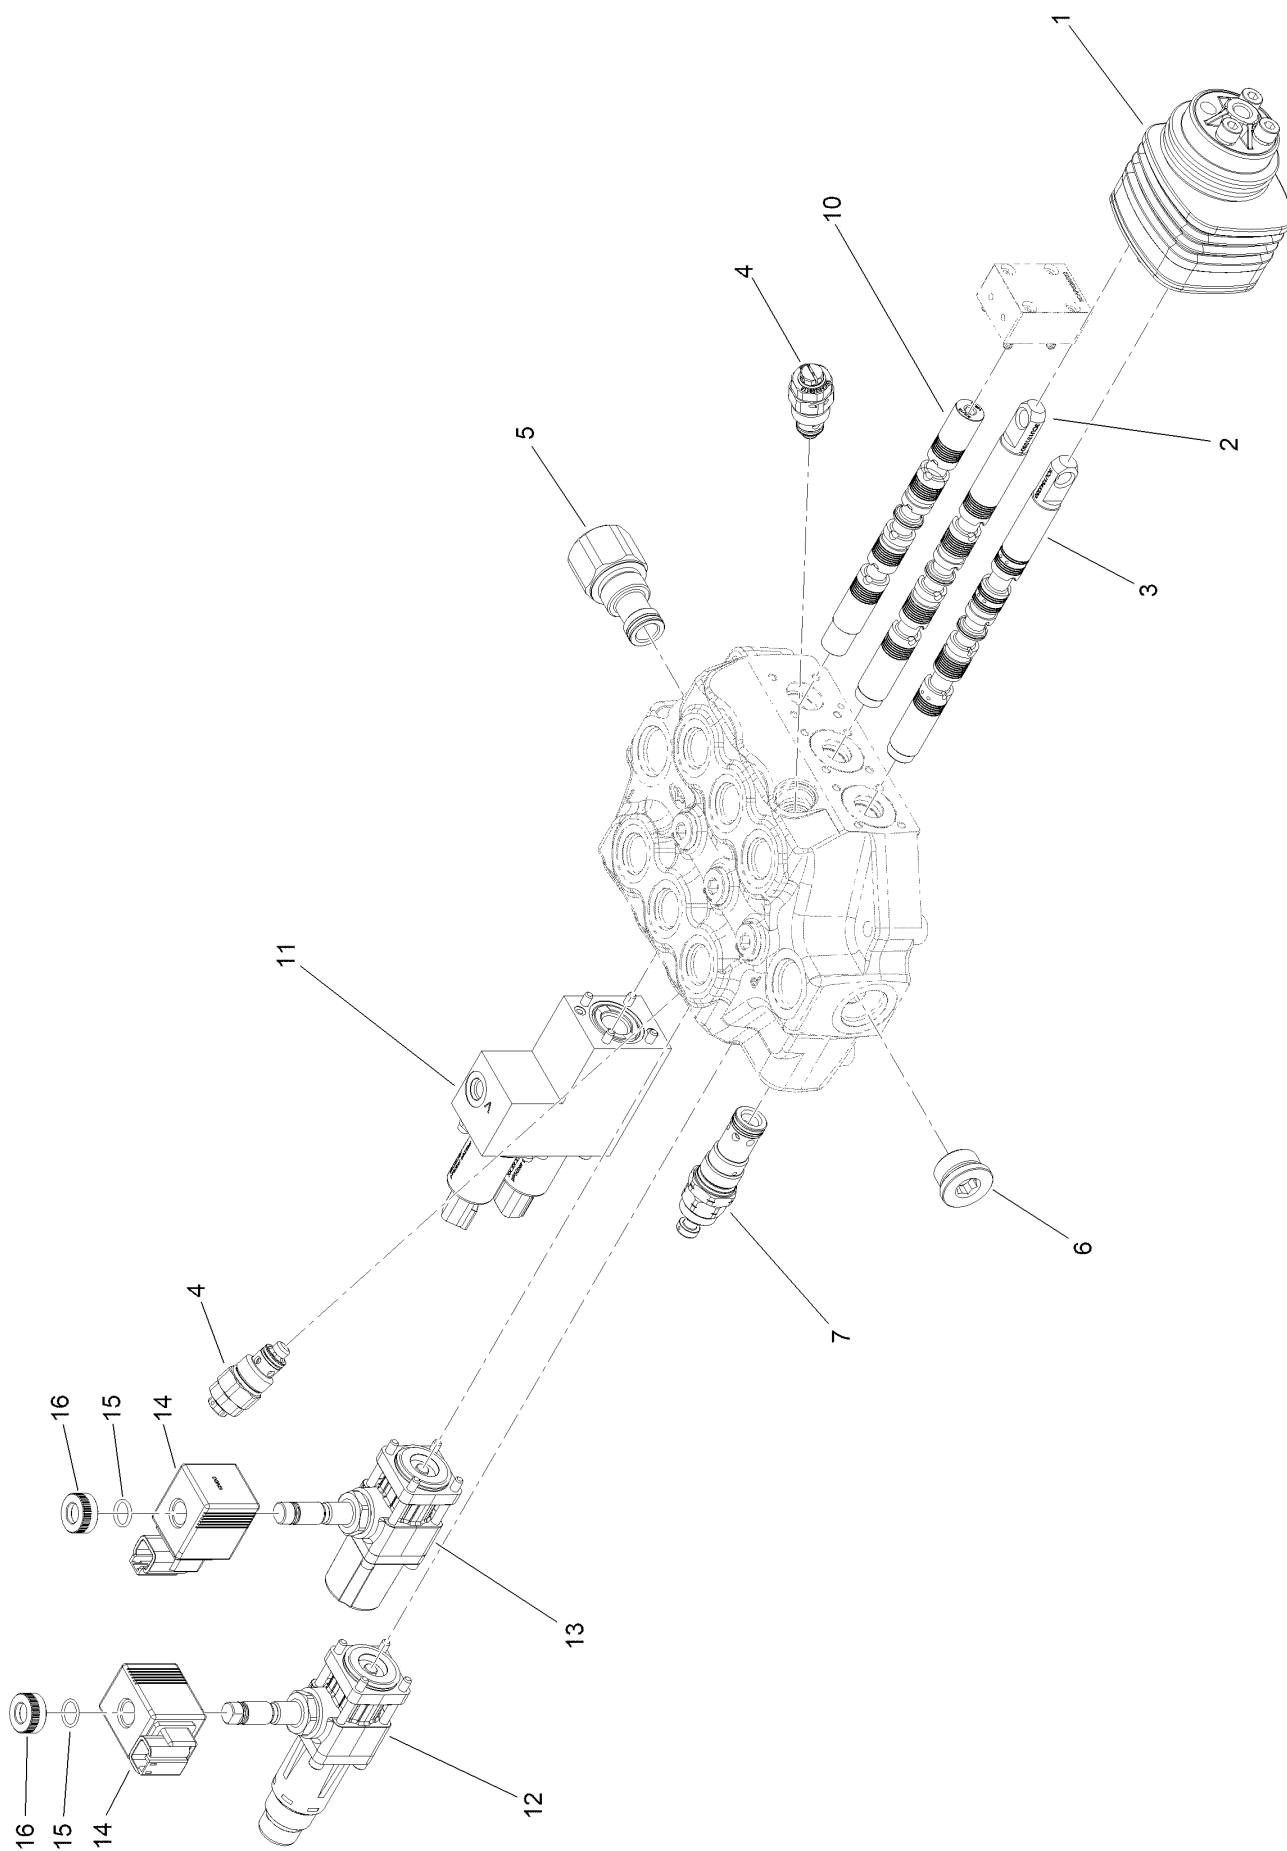


Spool Lock Loader Valve Assembly No. 161-9450 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	139-1219	1	Cover Kit
2	139-1221	1	Valve-Spool
3	139-1222	1	Valve-Spool
4	139-1223	2	Cartridge-Relief
5	139-1224	1	Joint-SAE12
6	139-1225	1	Plug-SAE12
7	139-1226	1	Valve Kit

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-1229	1	Valve-Spool
11	139-1230	1	Command Kit
12	163-8703	1	Spool Lock ASM
13	163-8704	1	Spool Lock ASM
14	163-8705	2	Solenoid, 12V
15	163-8706	2	O-Ring
16	163-8707	2	Nut



Gear Pump Assembly No. 133-0281

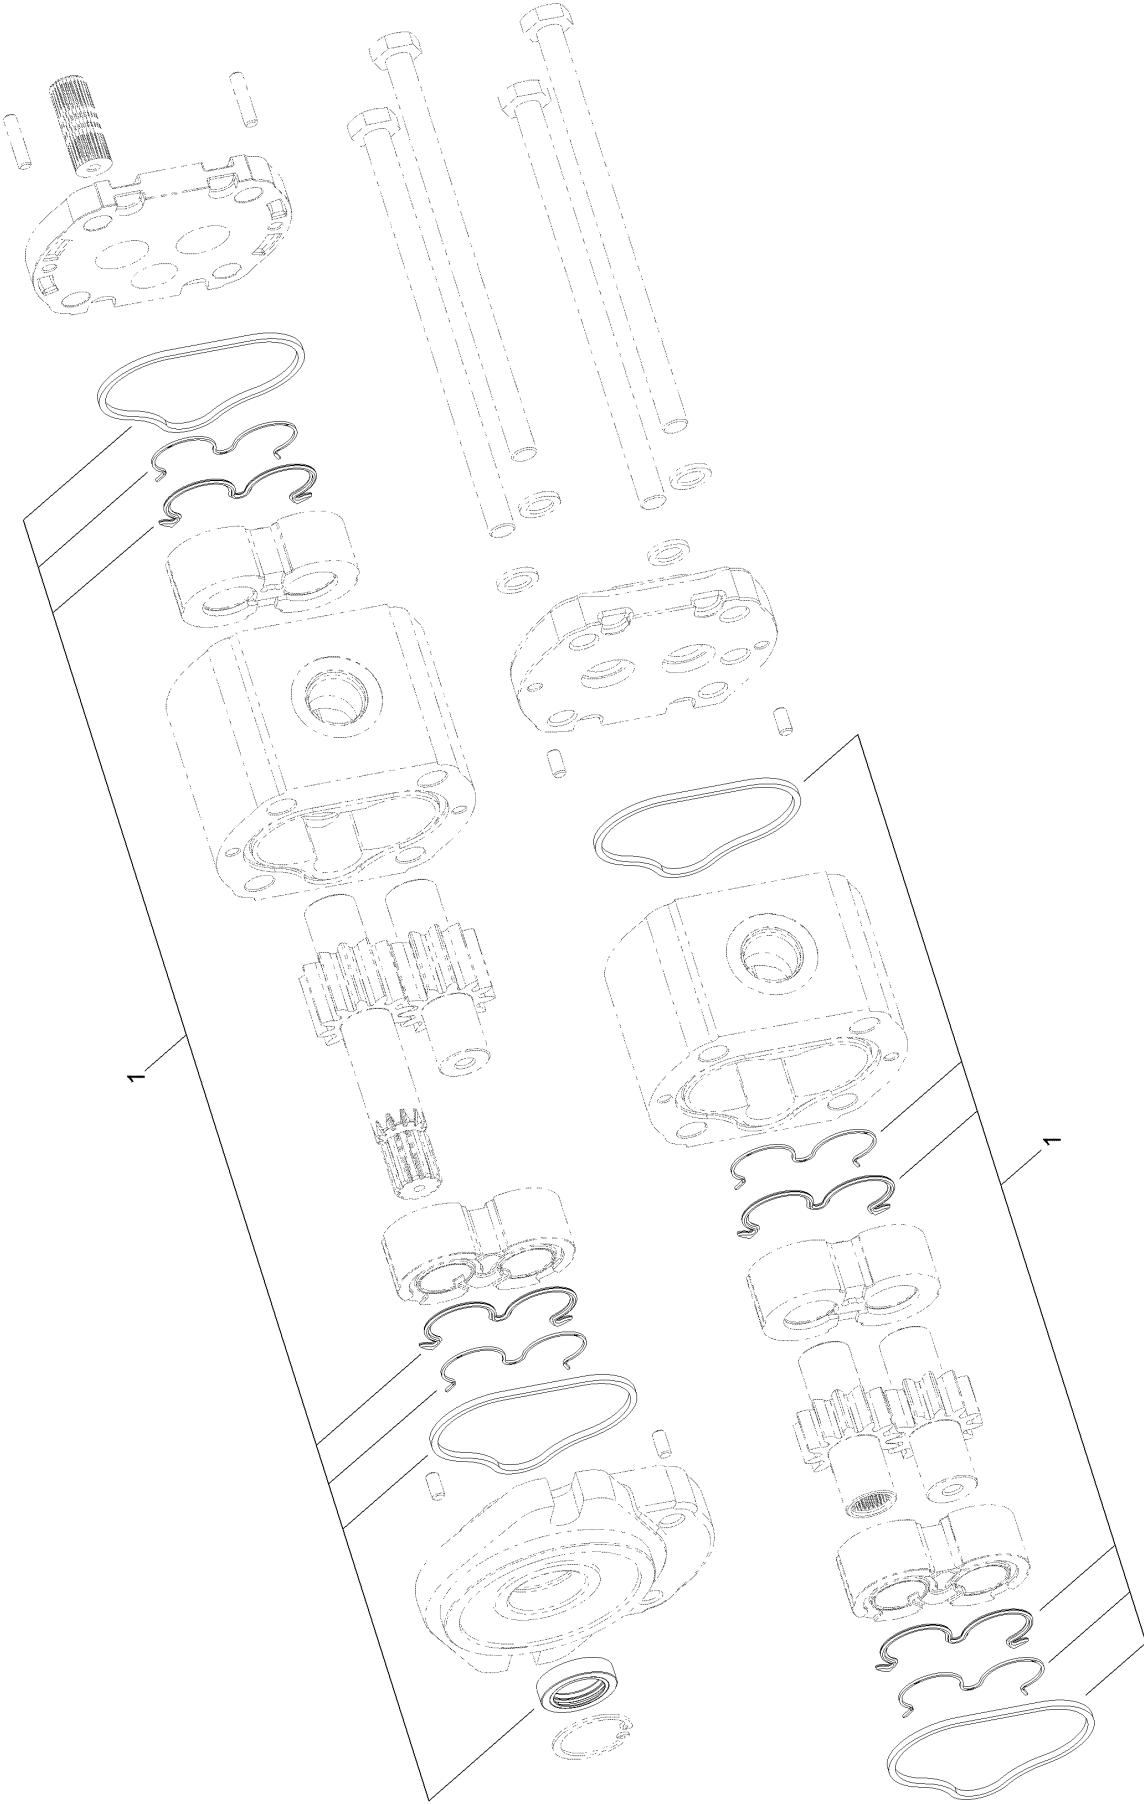

Gear Pump Assembly No. 133-0281 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	139-1211	1	Seal Kit

 
Auxiliary Hydraulic Assembly

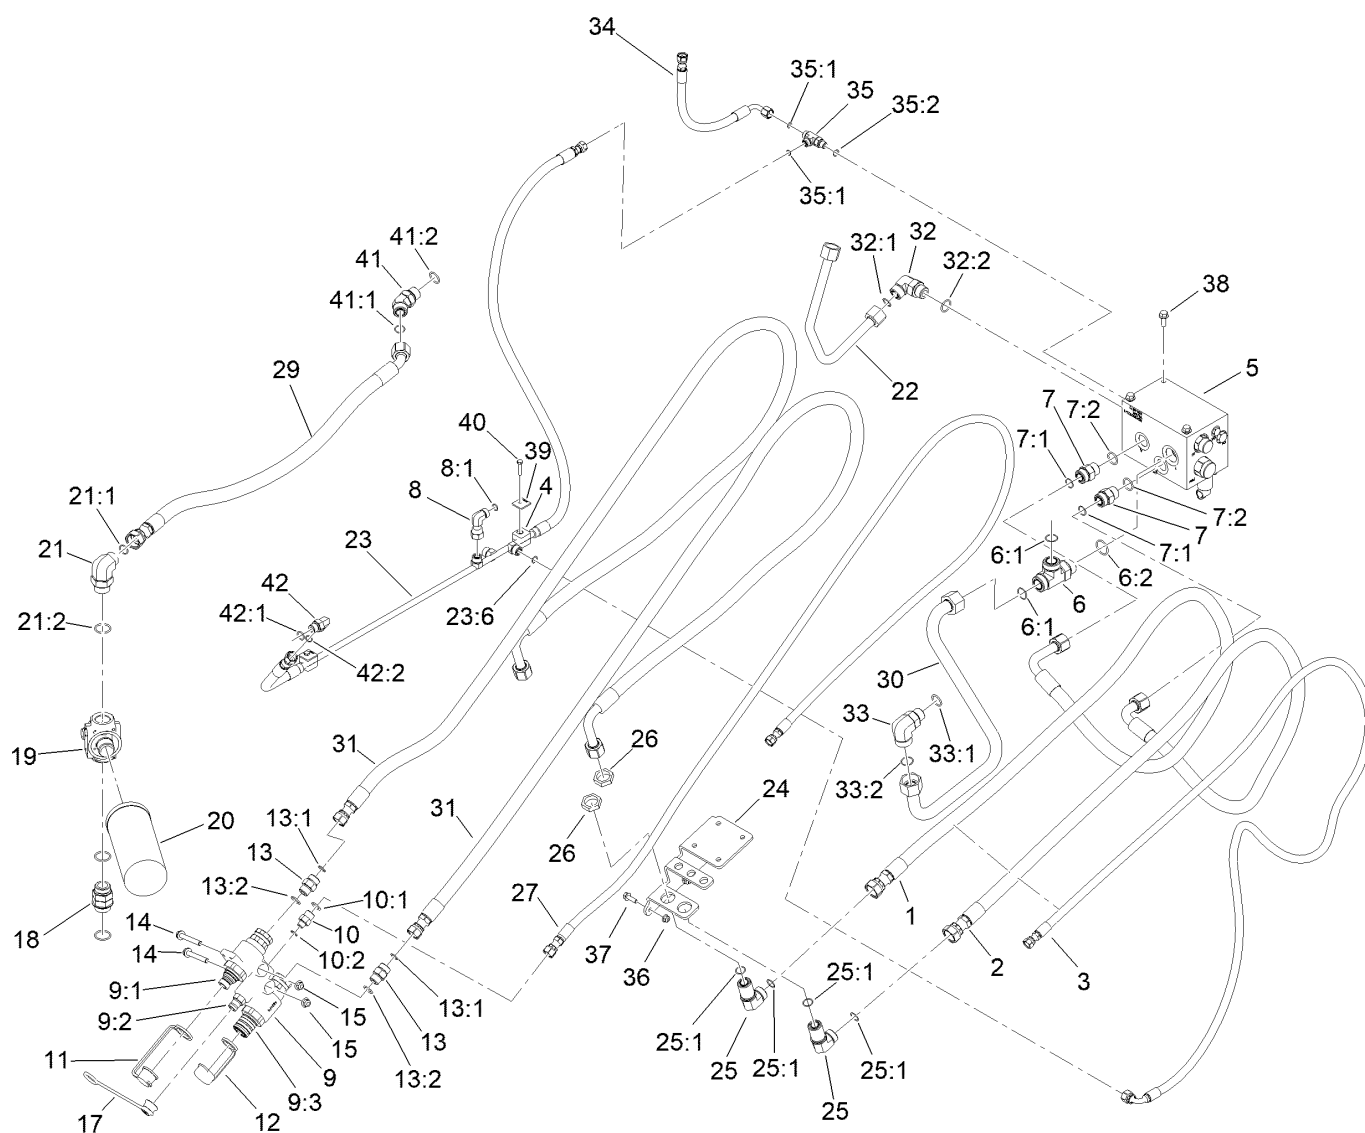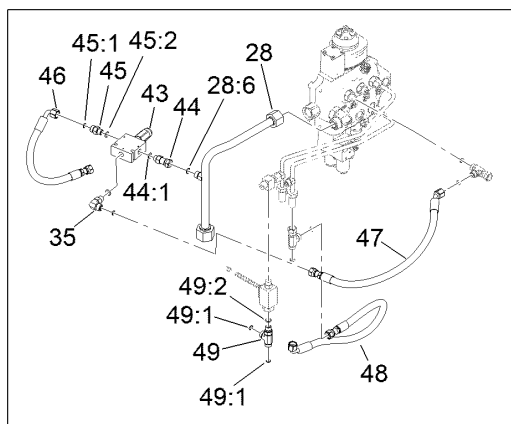

Auxiliary Hydraulic Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-1631	1	HYD Hose ASM	28	137-0123	1	HYD Tube ASM
2	133-1632	1	HYD Hose ASM	28:6	237-22	1	O-Ring
3	133-9354	1	HYD Hose ASM	29	133-9391	1	HYD Hose ASM
4	138-4696	2	Clamp-Tube	30	136-6079	1	Hydraulic Tube ASM
5	136-4872	1	Aux Manifold ASM	31	145-4386	2	HYD Hose ASM
6	104-3795	1	Fitting-Tee	32	340-142	1	Fitting-Elbow, 90 DEG
6:1	340-65	2	O-Ring	32:1	237-58	1	O-Ring
6:2	237-146	1	O-Ring	32:2	237-81	1	O-Ring
7	340-9	2	Fitting-STR	33	104-3796	1	Fitting-Elbow 90
7:1	237-58	1	O-Ring	33:1	237-81	1	O-Ring
7:2	237-81	1	O-Ring	33:2	340-65	1	O-Ring
8	94-6031	1	Elbow-90	34	138-0169	1	HYD Hose ASM
8:1	237-30	1	O-Ring	35	340-77	1	Fitting-Elbow, 90 DEG
9	150-2410	1	Manifold-Qdc	35	340-86	1	Fitting-Tee
9:1	150-3702	1	Kit-Male Coupler, 1/2"	35:1	237-22	1	O-Ring
9:2	150-3703	1	Kit-Male Coupler, 3/8"	35:1	237-22	2	O-Ring
9:3	150-3704	1	Kit-Female Coupler, 1/2"	35:2	237-42	1	O-Ring
10	340-5	1	Fitting-Straight	35:2	237-42	1	O-Ring
10:1	237-42	1	O-Ring	36	119-4041	3	Nut-HF
10:2	237-30	1	O-Ring	37	3234-29	3	Screw-HHF
11	100-8815	1	Cap-Dust, Nipple	38	3234-11	3	Screw-HHF
12	100-8816	1	Cap-Dust, Coupler	39	137-0128	2	Plate-Clamp, Tube
13	340-7	2	Fitting-Straight	40	321-8	2	Screw-HH
13:1	237-65	1	O-Ring	41	100-5530	1	Fitting-45 DEG
13:2	237-80	1	O-Ring	41:1	237-58	1	O-Ring
14	133-9682	2	Screw-Hfh	41:2	237-81	1	O-Ring
15	119-4042	2	Nut-HF, NI	42	340-98	1	Fitting-Elbow, 90 DEG
17	131-6069	1	Cap-Dust, Nipple	42:1	237-79	1	O-Ring
18	133-9400	1	Fitting-Straight	42:2	237-30	1	O-Ring
19	121-1577	1	Head-Filter	43	139-4856	1	Valve-Sequence
20	94-2621	1	Element-Filter	44	104-3779	1	Connector-Swivel, Straight
21	340-15	1	Fitting-Elbow 90	44:1	237-42	1	O-Ring
21:1	237-58	1	O-Ring	45	114-7783	1	Fitting-Straight
21:2	237-146	1	O-Ring	45:1	237-22	1	O-Ring
22	137-0124	1	HYD Tube ASM	45:2	237-42	1	O-Ring
23	137-0125	1	HYD Tube ASM	46	104-2240	1	Hose ASM
23:6	237-30	3	O-Ring	47	98-7416	1	Hose-HYD
24	133-9408-03	1	Mount-Carrier	48	120-6572	1	Hose-HYD
25	133-9407	2	Fitting-Elbow 90	49	340-86	1	Fitting-Tee
25:1	237-58	2	O-Ring	49:1	237-22	2	O-Ring
26	340-126	2	Nut-Bulkhead	49:2	237-42	1	O-Ring
27	145-4387	1	HYD Hose ASM				


Auxiliary Manifold Assembly No. 136-4872

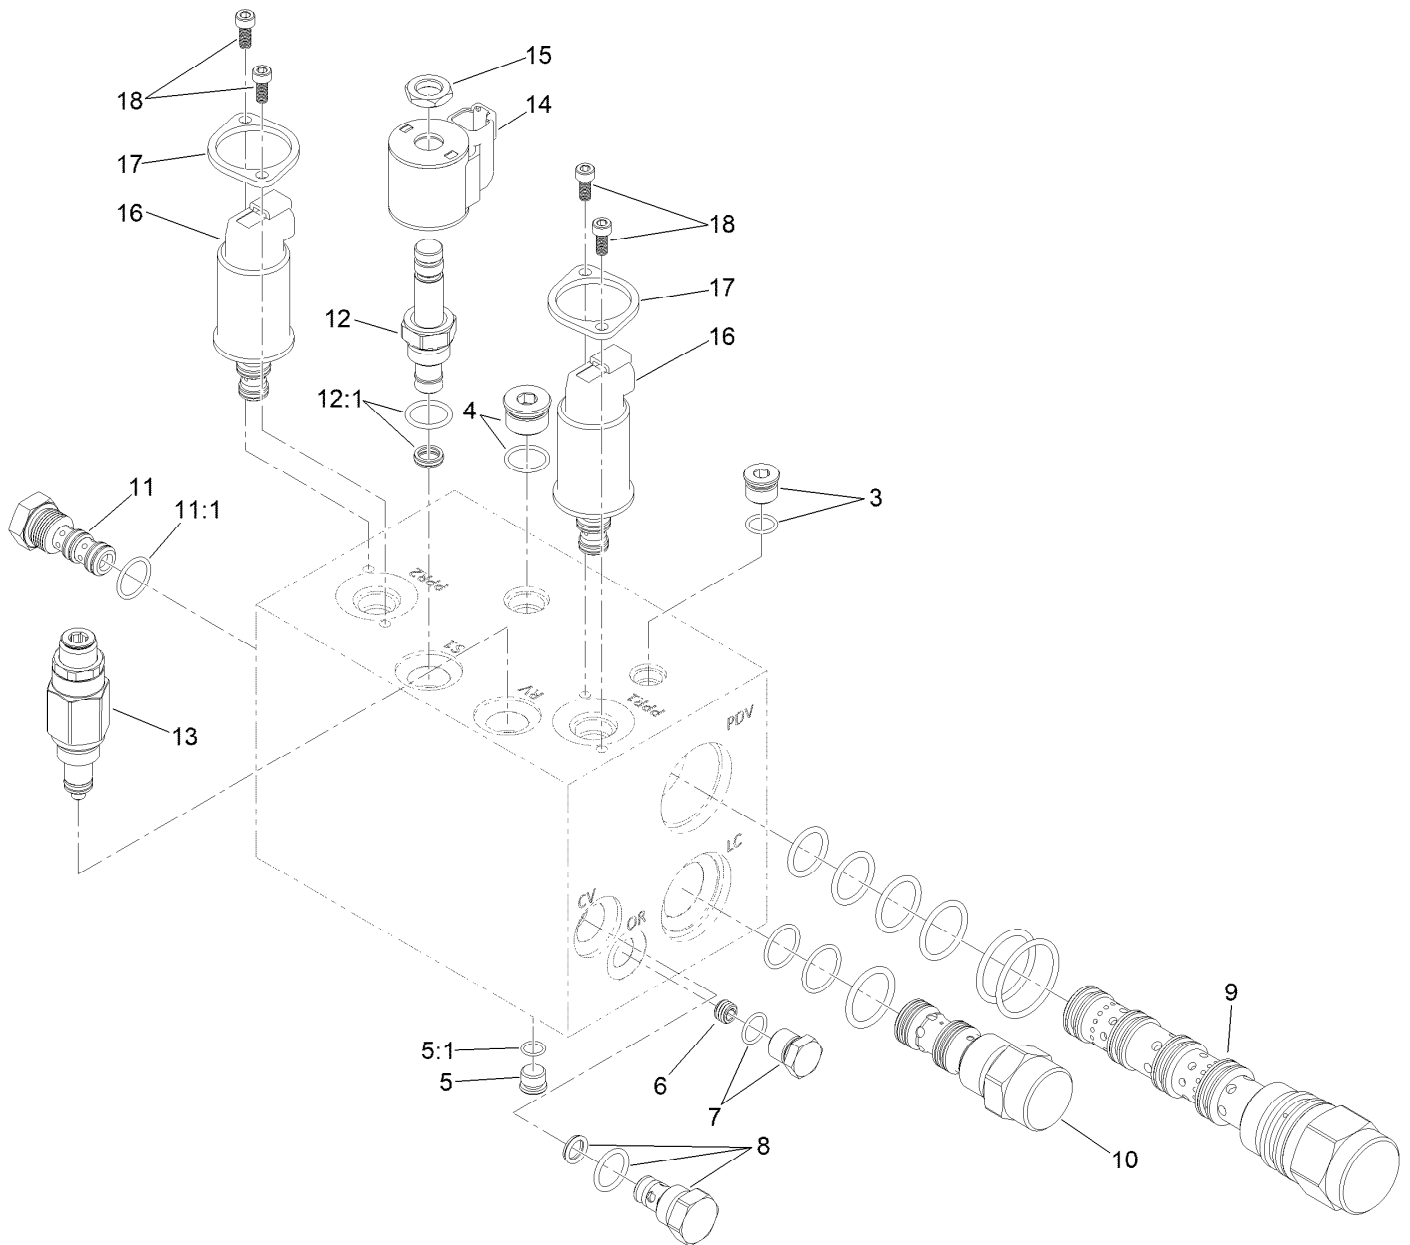

Auxiliary Manifold Assembly No. 136-4872 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	112-9213	1	Plug	11:1	110-8773	1	Seal Kit
4	106-1027	1	Plug	12	120-6562	1	Valve-Solenoid
5	353-990	1	Plug ASM	12:1	105-9156	1	Seal Kit
5:1	237-78	1	O-Ring	13	147-2453	1	Valve-Relief
6	139-4832	1	Orifice-.035	14	112-0197	1	E Coil-12V DC
7	353-509	1	Plug	15	110-2634	1	Nut-Coil
8	139-4833	1	Valve-Check,	16	139-1218	2	Valve-Prop Press
9	139-1214	1	Valve-Proportional, Directional				Reducing/Relieving
10	139-4834	1	Cartridge-Logic,	17	138-3825	2	Plate-Mounting, Standard
11	131-6506	1	Shuttle-Load	18	138-3827	4	Screw

 
Tandem Pump Assembly

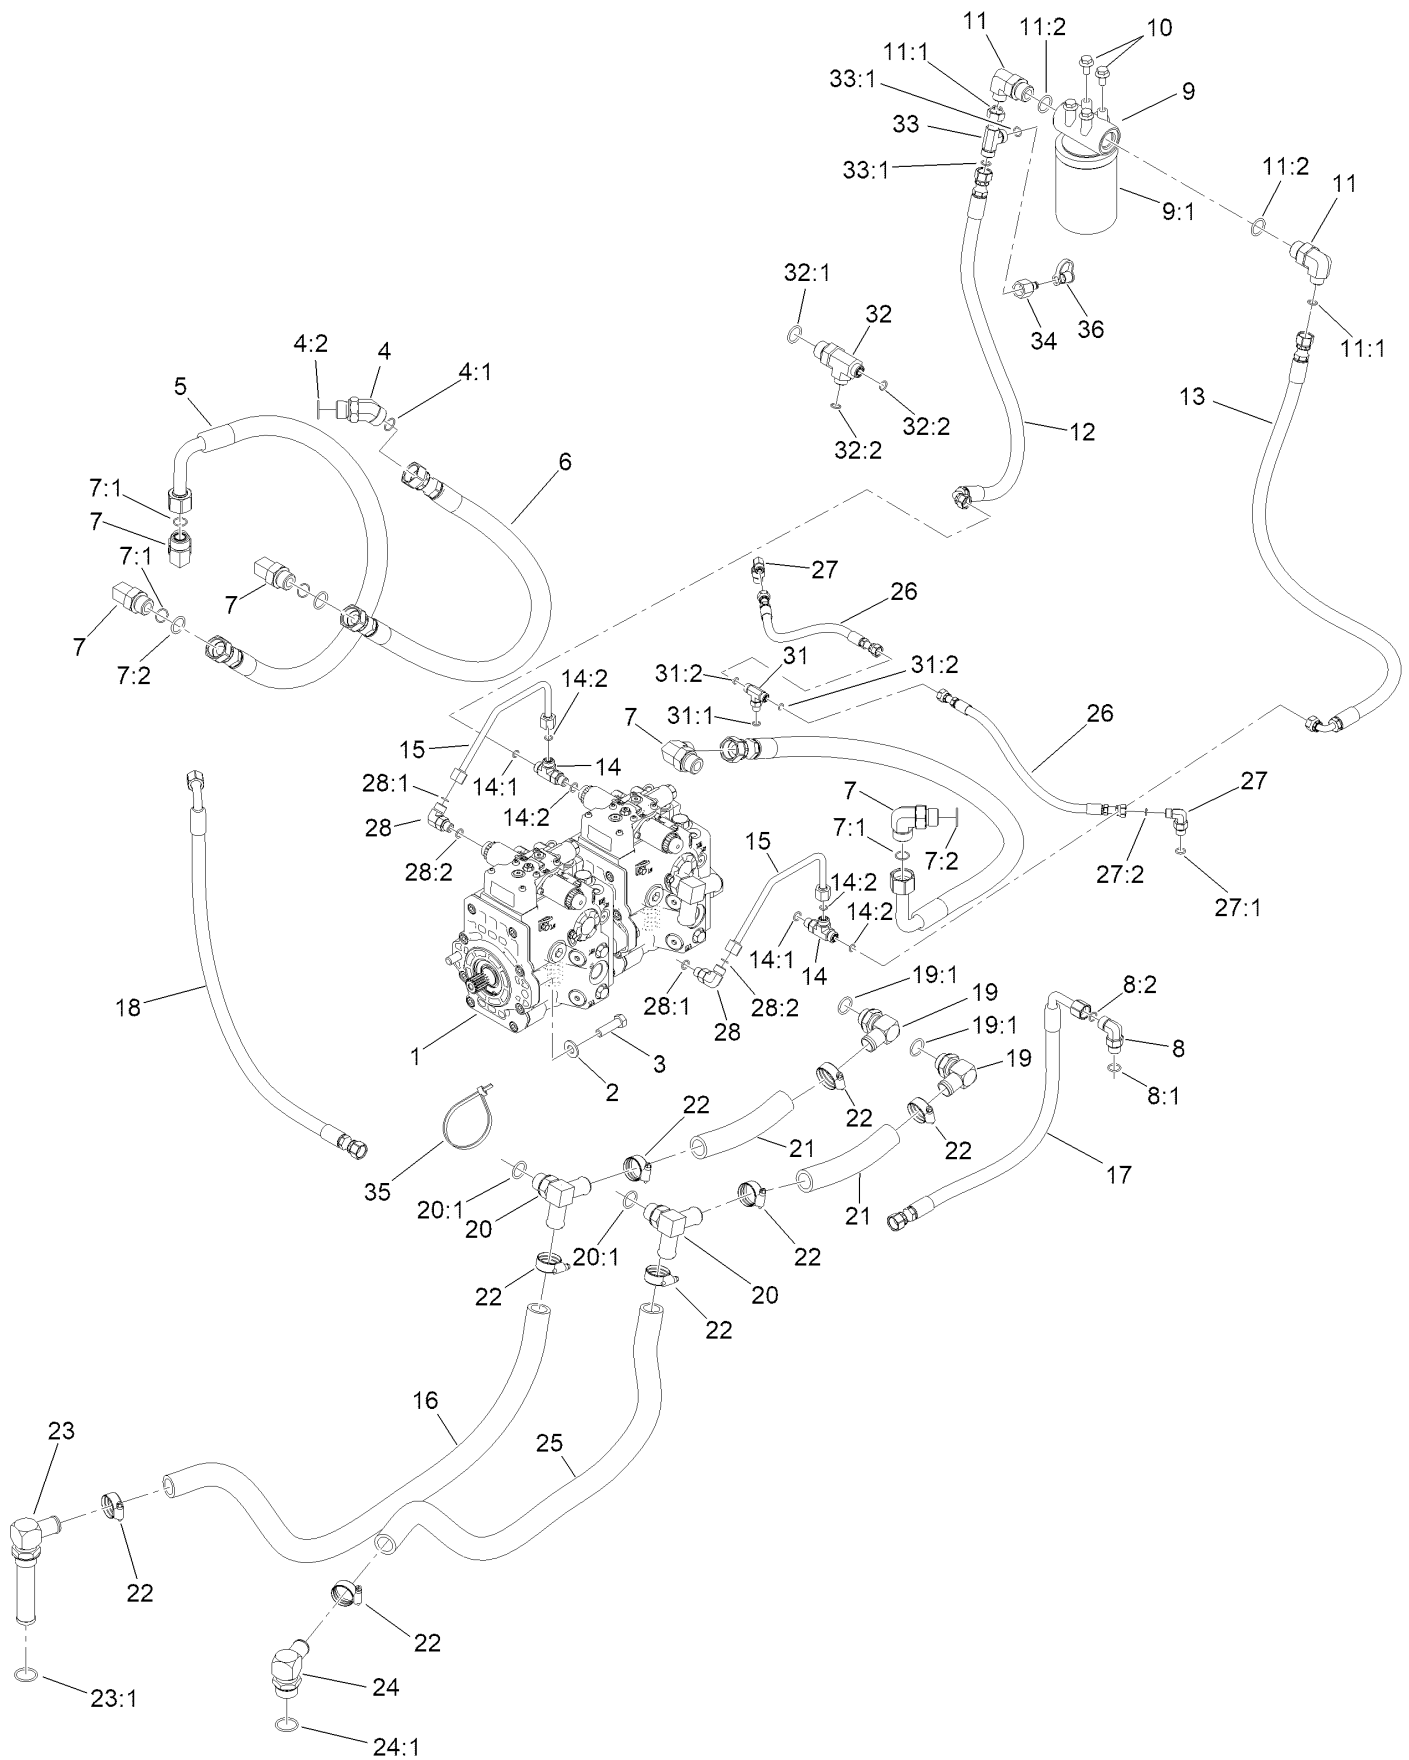

Tandem Pump Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	164-3578	1	HYD Pump ASM	19:1	237-81	1	O-Ring
2	87-7270	2	Washer-Thrust	20	AU375462A1	2	Connector
3	164-3569	2	Screw-HH	20:1	237-81	1	O-Ring
4	100-5530	2	Fitting-45 DEG	21	137-0078	2	Hose
4:1	237-58	1	O-Ring	22	164-1404	8	Clamp-Hose, Lined(1.13-1.56 DIA SS)
4:2	237-81	1	O-Ring	23	105-0204	1	Strainer Fitting ASM
5	133-9374	2	HYD Hose ASM	23:1	237-146	1	O-Ring
6	133-9373	2	HYD Hose ASM	24	23-8910	1	Stem-Barb-90
7	340-142	6	Fitting-Elbow, 90 DEG	24:1	237-146	1	O-Ring
7:1	237-58	1	O-Ring	25	133-9399	1	Hose
7:2	237-81	1	O-Ring	26	139-5722	2	HYD Hose ASM
8	340-98	2	Fitting-Elbow, 90 DEG	27	340-82	2	Fitting-Elbow, 90 DEG
8:1	237-79	1	O-Ring	27:1	237-42	1	O-Ring
8:2	237-30	1	O-Ring	27:2	237-21	1	O-Ring
9	93-2242	1	Oil Filter ASM	28	340-77	2	Fitting-Elbow, 90 DEG
9:1	75-1310	1	Filter-HYD	28:1	237-22	1	O-Ring
10	33105-020	4	Screw-HHF	28:2	237-42	1	O-Ring
11	340-131	1	Fitting-HYD, 90 DEG	31	340-125	1	Fitting-Tee
11:1	237-30	1	O-Ring	31:1	237-21	2	O-Ring
11:2	237-81	1	O-Ring	31:2	237-78	1	O-Ring
12	139-1184	1	HYD Hose ASM	32	117-0676	1	Fitting-Tee
13	133-9385	1	HYD Hose ASM	32:1	237-30	2	O-Ring
14	340-86	2	Fitting-Tee	32:2	237-81	1	O-Ring
14:1	237-22	2	O-Ring	33	340-104	1	Fitting-Tee
14:2	237-42	1	O-Ring	33:1	237-30	2	O-Ring
15	133-9389	2	HYD Tube ASM	34	100-5616	1	Fitting
16	133-9392	1	Hose	35	3334-945	1	Tie-Cable
17	133-9379	1	HYD Hose ASM	36	354-79	1	Cap-Dust
18	133-9381	1	HYD Hose ASM				
19	100-4202	2	Fitting-90				

 
Control Console Assembly

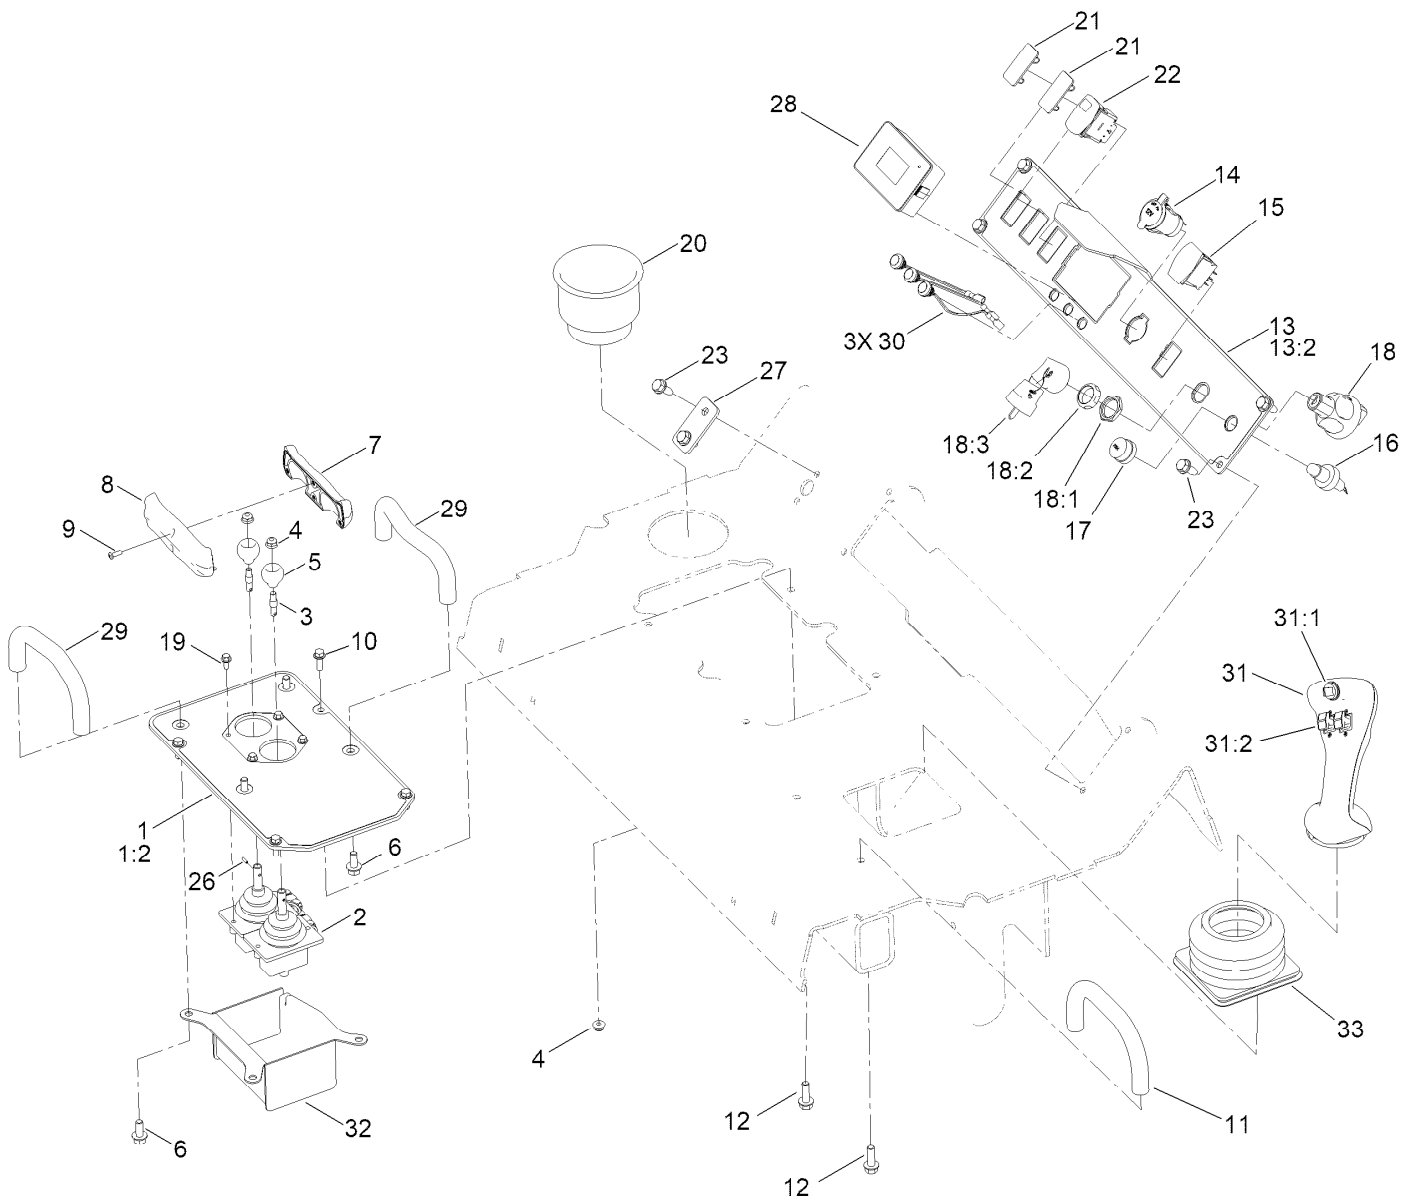

Control Console Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-4729	1	Plate-Controls, Traction	18	161-4693	1	Switch-Ignition
1:2	137-5420	1	Decal-Traction	18:1	121-5160	1	Nut-Hex
2	136-4784	2	Lever-Control	18:2	122-2704	1	Nut-Face, M22 (Plastic)
3	137-0431	2	Shaft-Handle	18:3	121-5162	1	Set-Key, Ignition
4	104-7201	6	Nut-HF, NI	19	120-4579	4	Screw-HHF
5	130-7723	2	Ball-Traction	20	AU8EO24121	1	Cup-Holder
6	3234-5	4	Screw-HHF	21	99-7420	2	Plug-Hole
7	139-1166	1	Handle-Front	22	122-3953	1	Switch-Rocker, (On)-Off-(On)
8	139-1167	1	Handle-Rear	23	32104-32	6	Screw-HWH
9	94-6961	4	Screw	26	137-0432	2	Pin-Roll
10	115-5103	4	Screw-HHF	27	137-0439-01	1	Plate-Blank
11	112-2620	1	Bar-Reference	28	122-1201	1	Module-Display
12	3234-17	2	Screw-HHF	29	138-4693	2	Bar-Reference
13	139-5745	1	Plate-Controls, Main	30	136-9678	3	Cable Assy-Pushbutton
13:2	161-9443	1	Decal-Console	31	139-4853	1	Handle-Joystick,
14	126-6499	1	Port-Power, 12V	31:1	163-4296	1	Switch-Rocker
15	100-1535	1	Switch-Rocker, (On)-Off-(On)	31:2	163-4297	2	Switch-Slider
16	112-3324	1	Switch-Horn	32	138-2294-03	1	Cover-Valve [black]
17	112-3313	1	Nut-Weatherproof	33	140-1662	1	Boot

 
Loader Arm Assembly

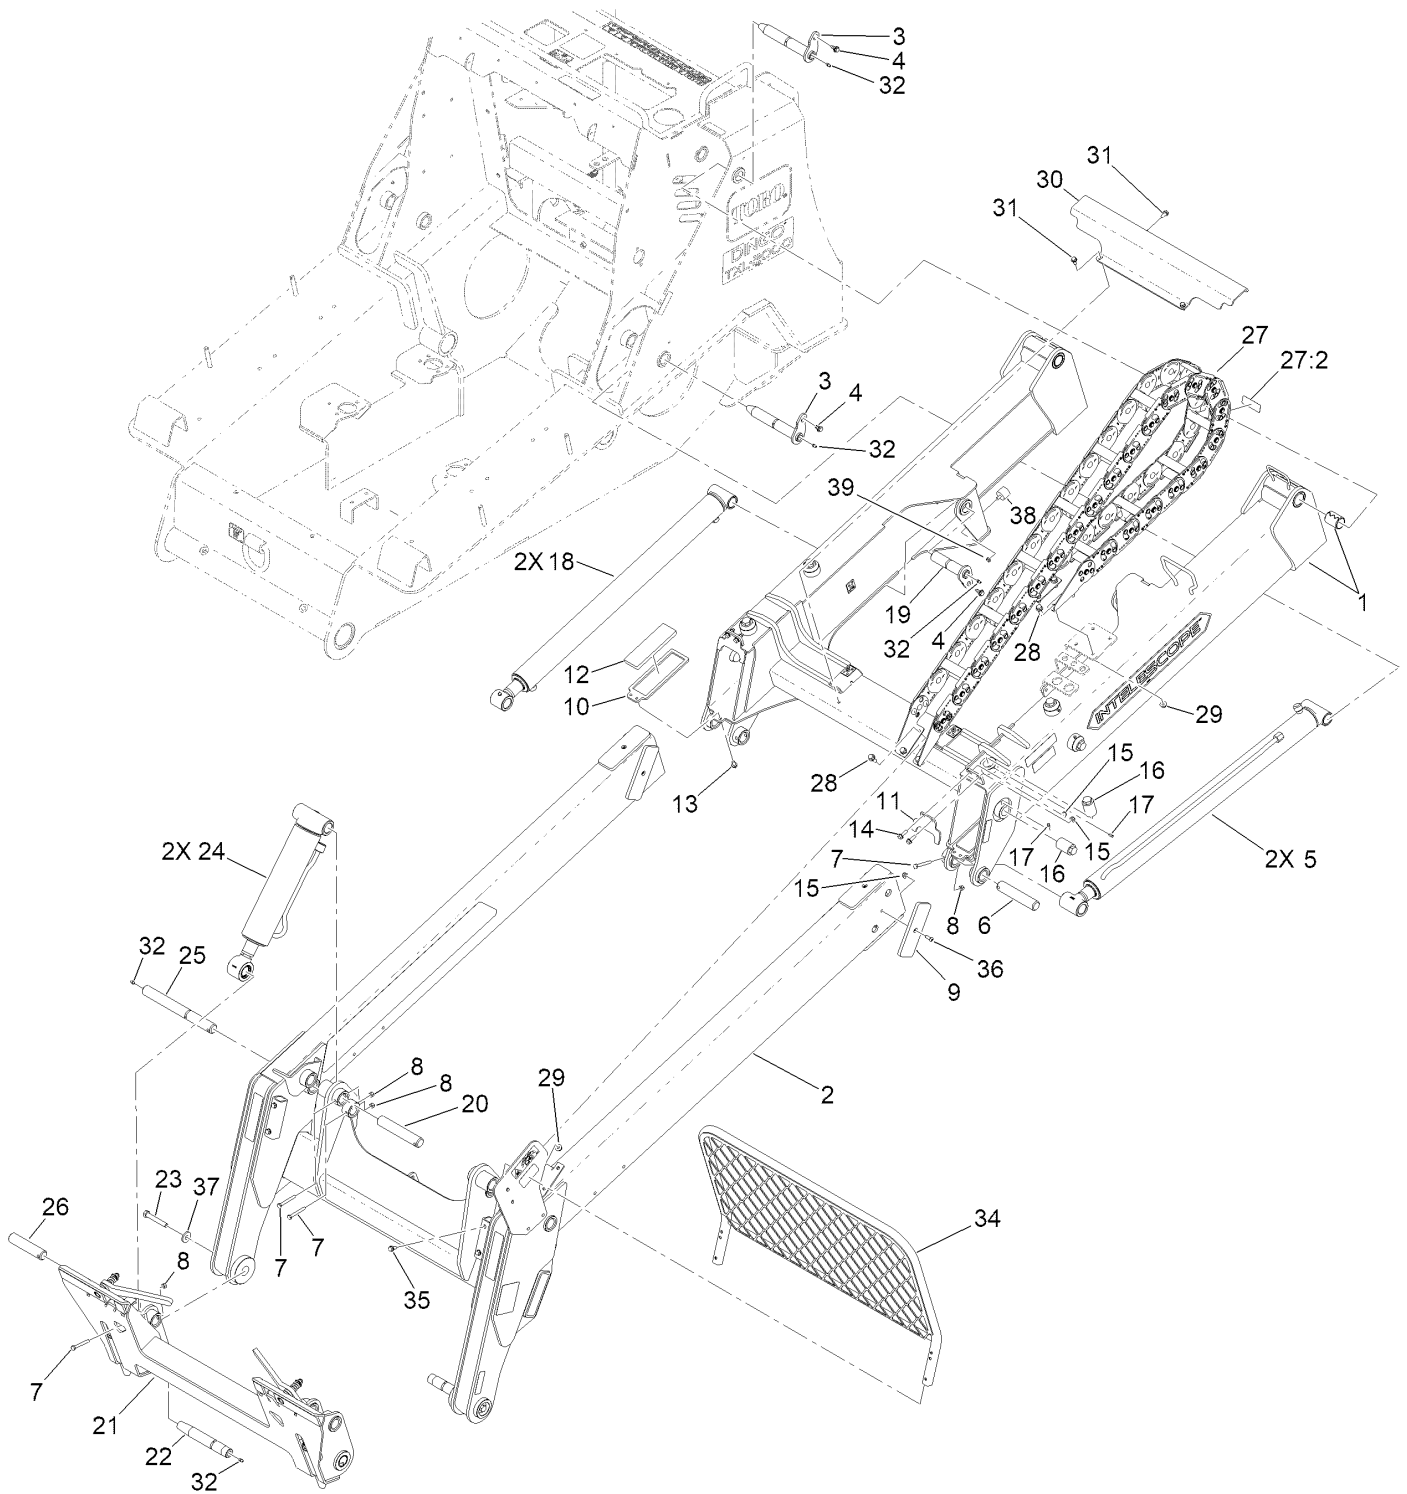

Loader Arm Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-4730	1	Upper Loader Arm ASM	21	132-8468	1	Qtach ASM
2	138-4731	1	Lower Loader Arm ASM	22	139-5731	2	Pin-Link, Taper
3	137-0132	4	Pivot Pin ASM	23	112-7264	2	Screw-HH
4	99-5105	6	Screw-Shoulder	24	161-6930	2	CYL-HYD
5	139-5718	2	CYL-HYD	25	132-8445	2	Pin-Link
6	139-7121	2	Pin-Link	26	139-5739	2	Pin-Link
7	322-12	8	Screw-HH	27	138-4733	1	Carrier-Hose
8	3296-29	8	Nut-Lock, NI	27:2	120-0625	1	Decal-Warning
9	137-5443	8	Strip-Slide, Snap	28	3234-11	8	Screw-HHF
10	137-0096-03	2	Retainer-Pad	29	119-4042	8	Nut-HF, NI
11	132-1681-03	2	Retainer-Wear,Pad,Left	30	137-0137-03	1	Plate-Guard
12	132-8480	2	Strip-Slide,Lower	31	32104-32	4	Screw-HWH
13	32144-14	4	Screw-HWHTF	32	302-5	10	Fitting-Grease
14	3234-29	4	Screw-HHF	34	139-1195-03	1	Screen-Debris
15	119-4041	12	Nut-HF	35	3234-5	4	Screw-HHF
16	132-8479	8	Screw-Slide, Adjustment	36	3274-32	8	Screw-HSBH
17	126-3824	8	Screw-Set, SQH	37	110-6147	2	Washer-Flat
18	139-5719	2	CYL-HYD	38	137-4803	2	Bumper-Rubber
19	137-0134	2	Flag Pin ASM	39	3296-47	2	Nut-Lock,NI
20	132-8429	2	Pin-Link				

 Upper Loader Arm Assembly No. 138-4730

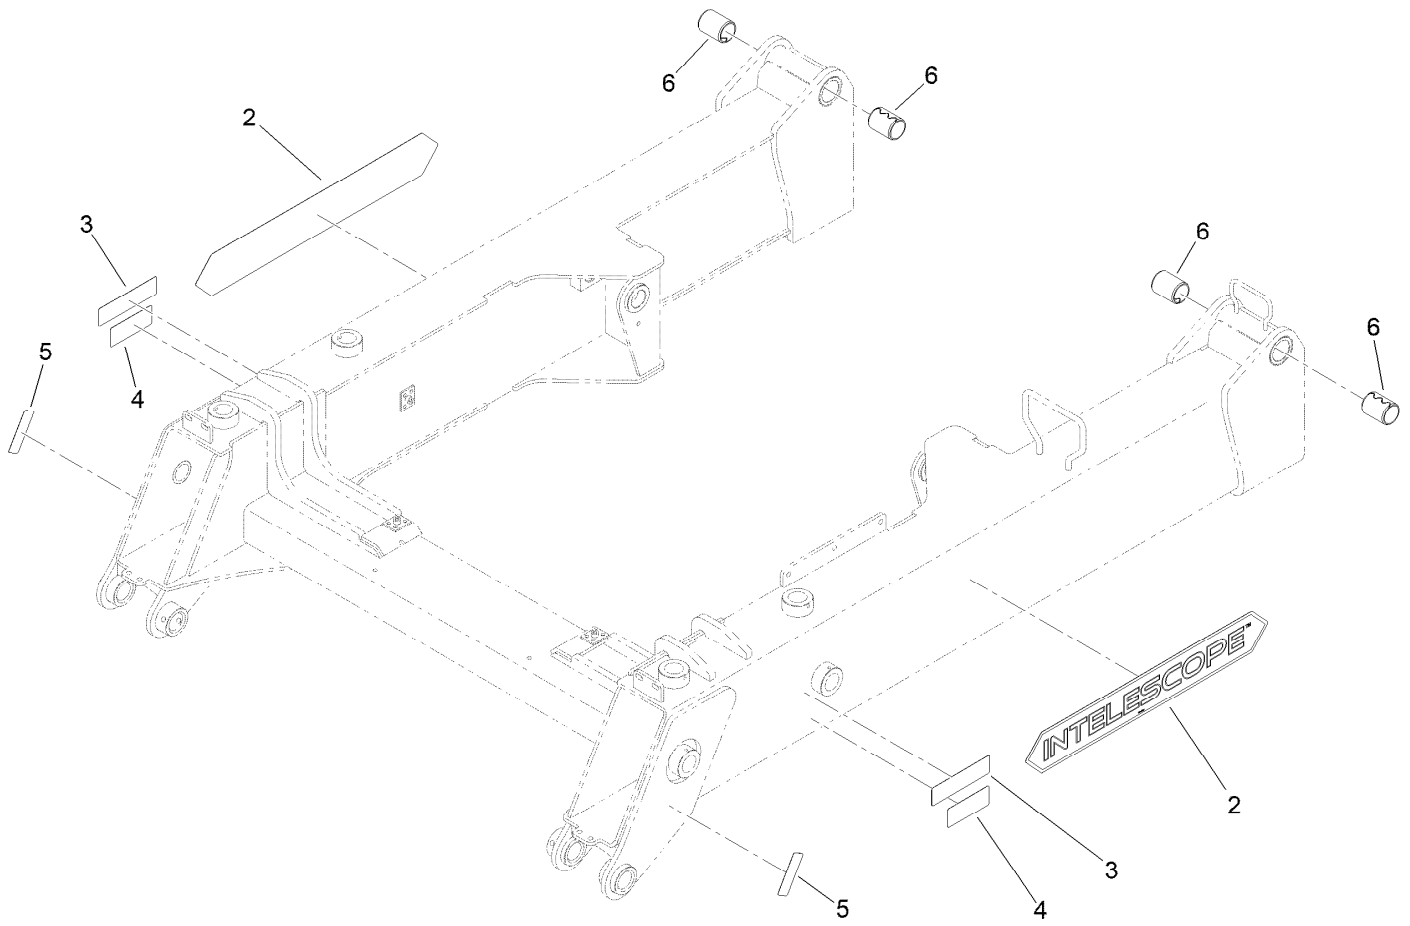


Upper Loader Arm Assembly No. 138-4730 (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	164-1433	2	Decal-Intelescope, Red
3	139-1158	2	Decal-Warning
4	139-1159	2	Decal-Warning

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	120-0625	2	Decal-Warning
6	137-0126	4	Bushing-Spring

 Lower Loader Arm Assembly No. 138-4731

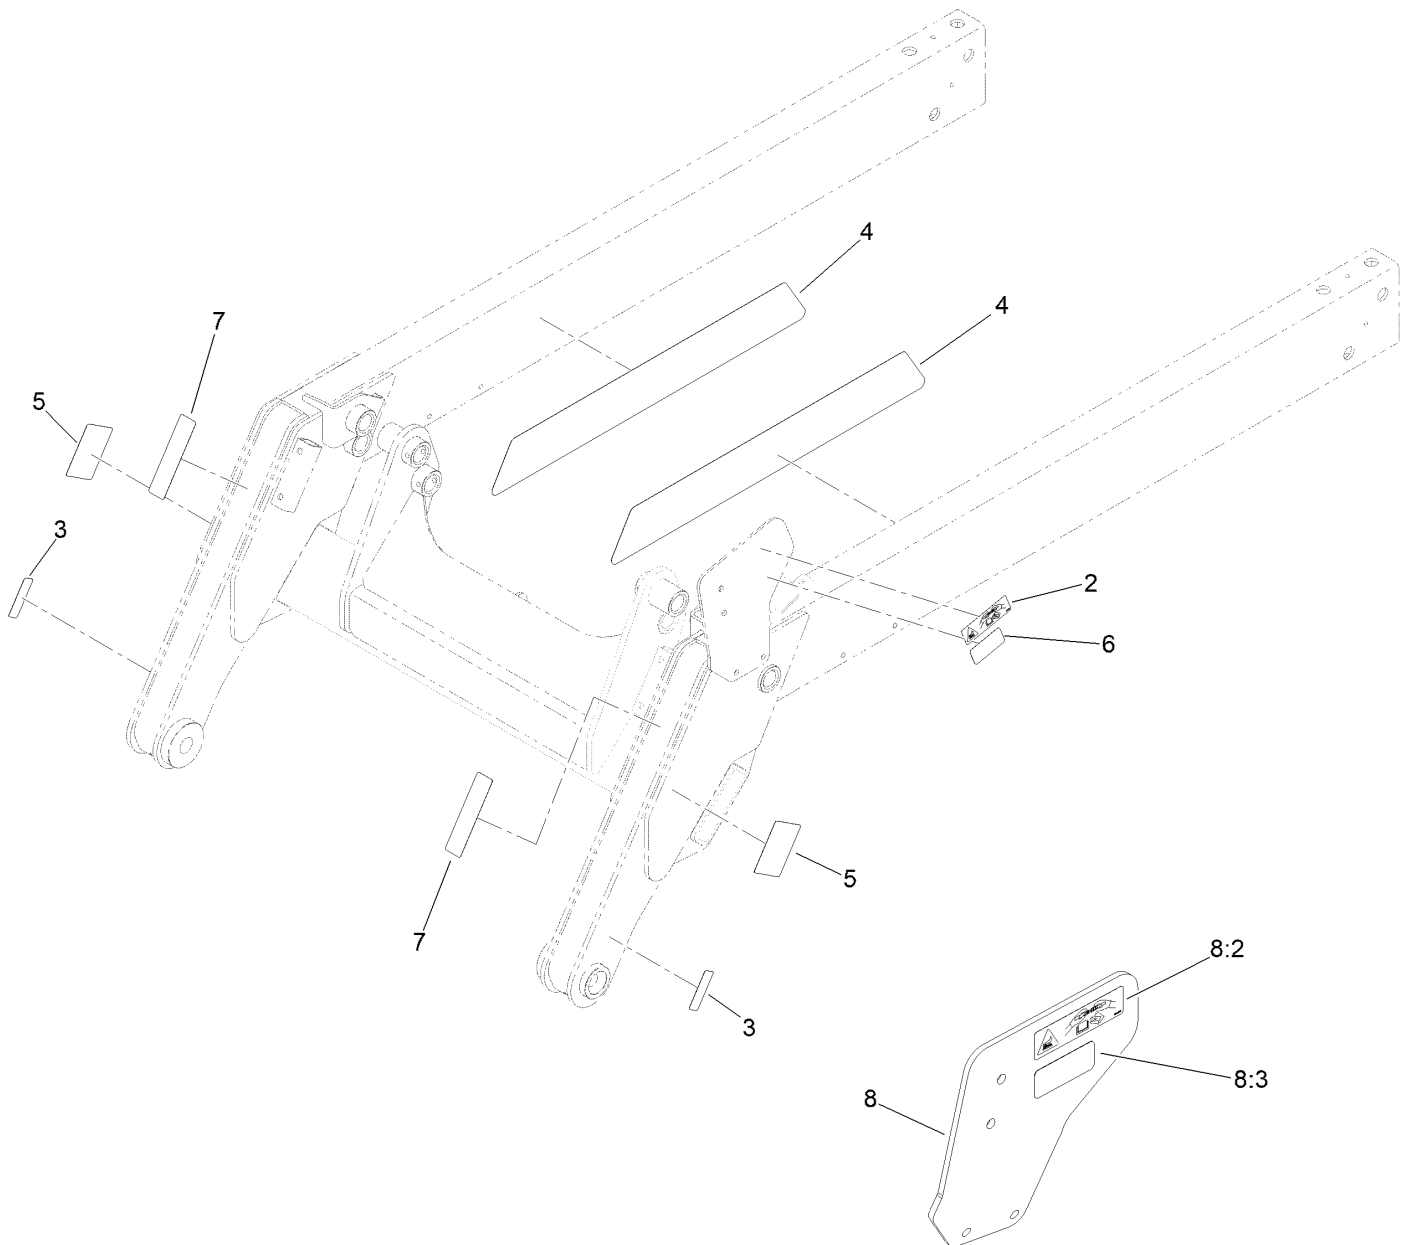

USE 161-7172 FOR MODEL YEAR 2021 AND UP (S/N 406500000 AND UP)

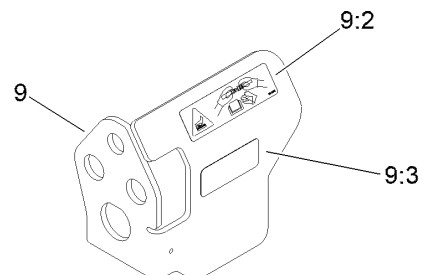 


USE 161-7173 FOR MODEL YEAR 2017-2020 (S/N 400000000 THRU 406499999)

Lower Loader Arm Assembly No. 138-4731 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	115-4855	1	Decal-Caution	8	161-7172	1	Plate-Mount Qc
3	120-0625	2	Decal-Warning	8:2	115-4855	1	Decal-Caution
4	137-5409	2	Decal-Extension	8:3	139-1173	1	Decal-Warning
5	139-1164	2	Decal-Warning	9	161-7173	1	Mount-Plate Qd
6	139-1173	1	Decal-Warning	9:2	115-4855	1	Decal-Caution
7	131-9290	2	Tape-Reflective	9:3	139-1173	1	Decal-Warning

 
Hydraulic Cylinder Assembly No. 139-5719

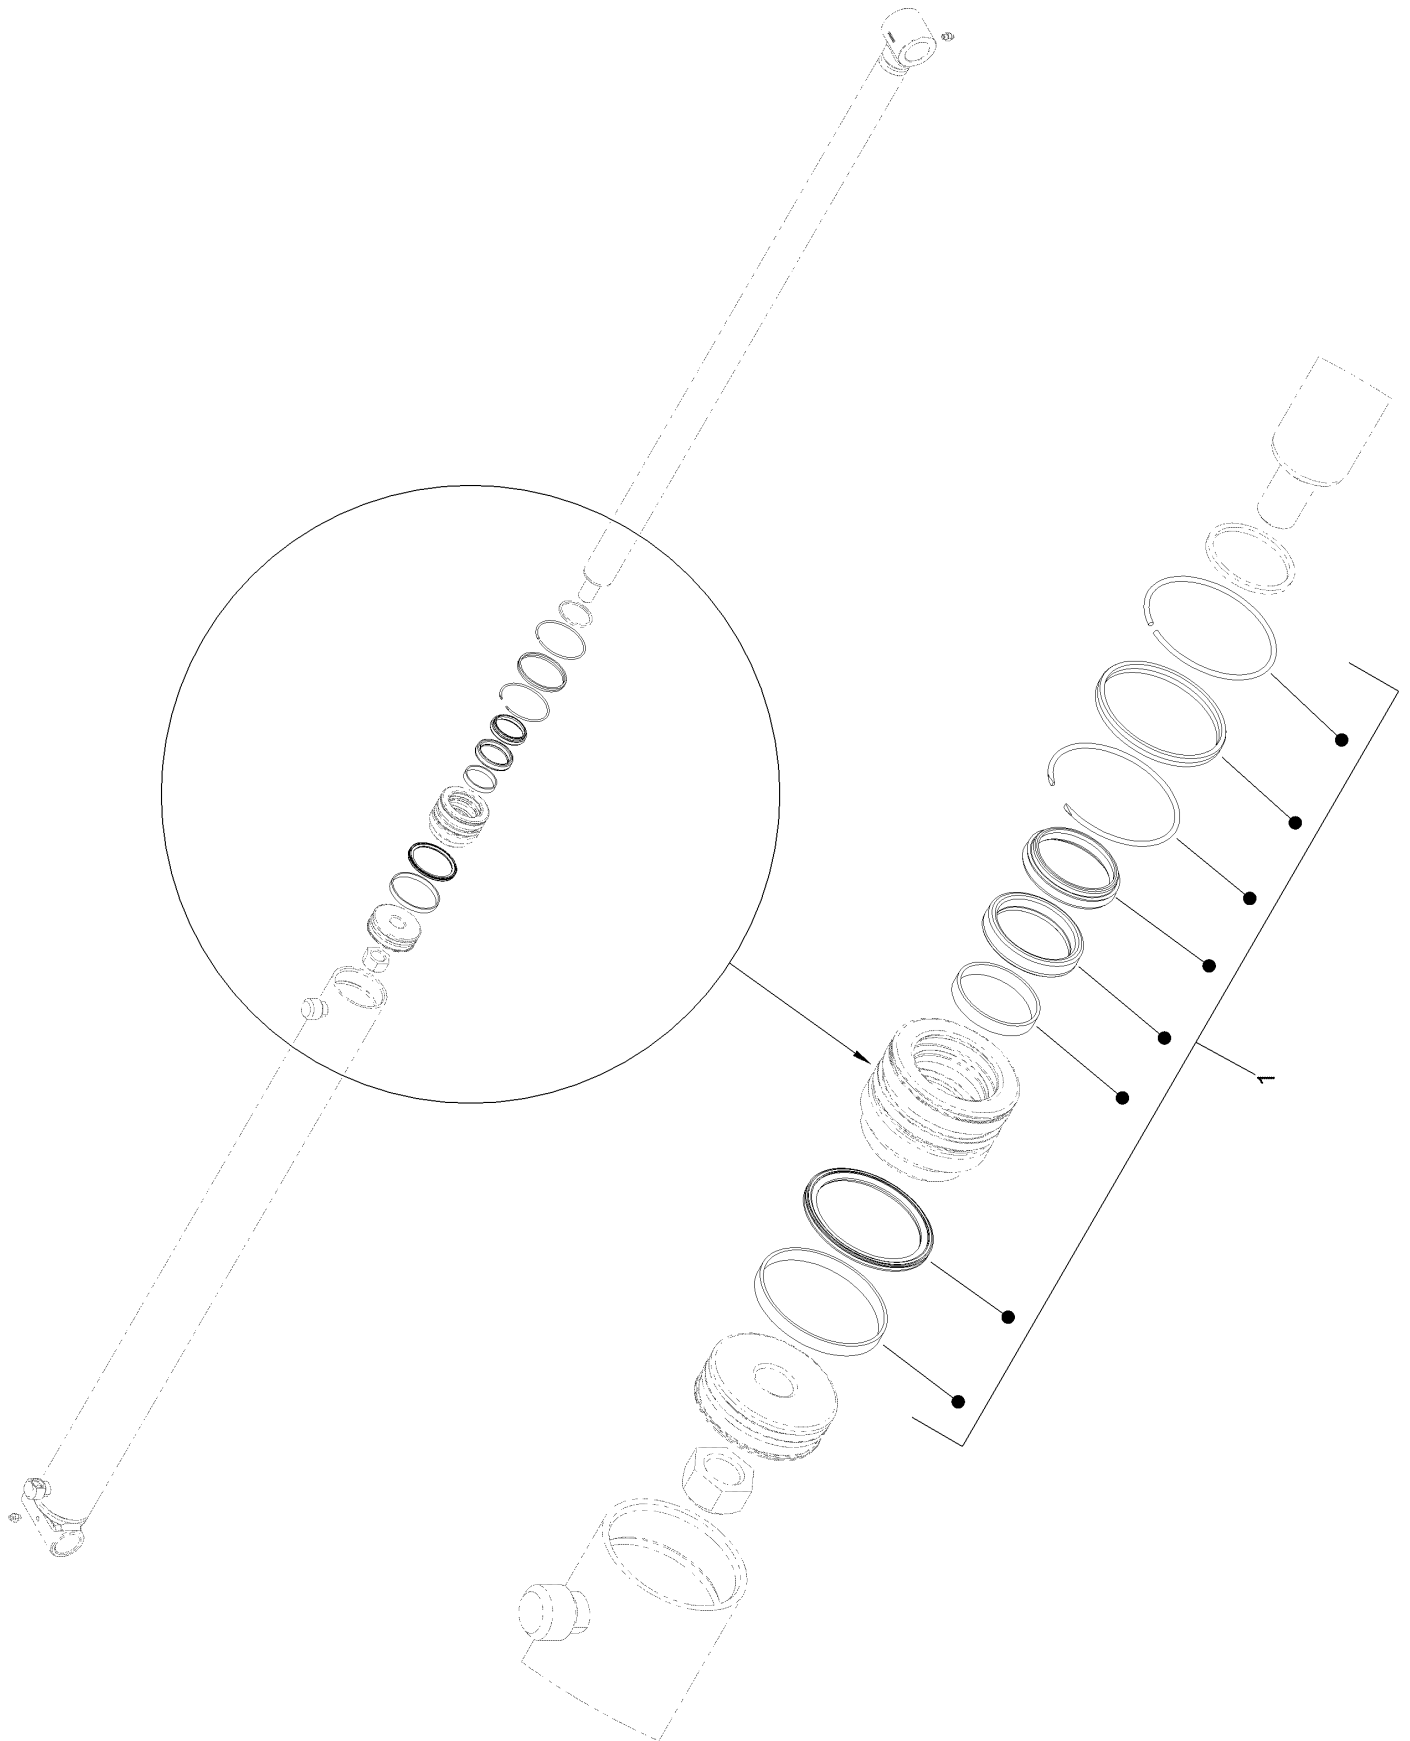

Hydraulic Cylinder Assembly No. 139-5719 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-8749	1	Hydraulic Cylinder Seal Kit

 
Hydraulic Cylinder Assembly No. 139-5718

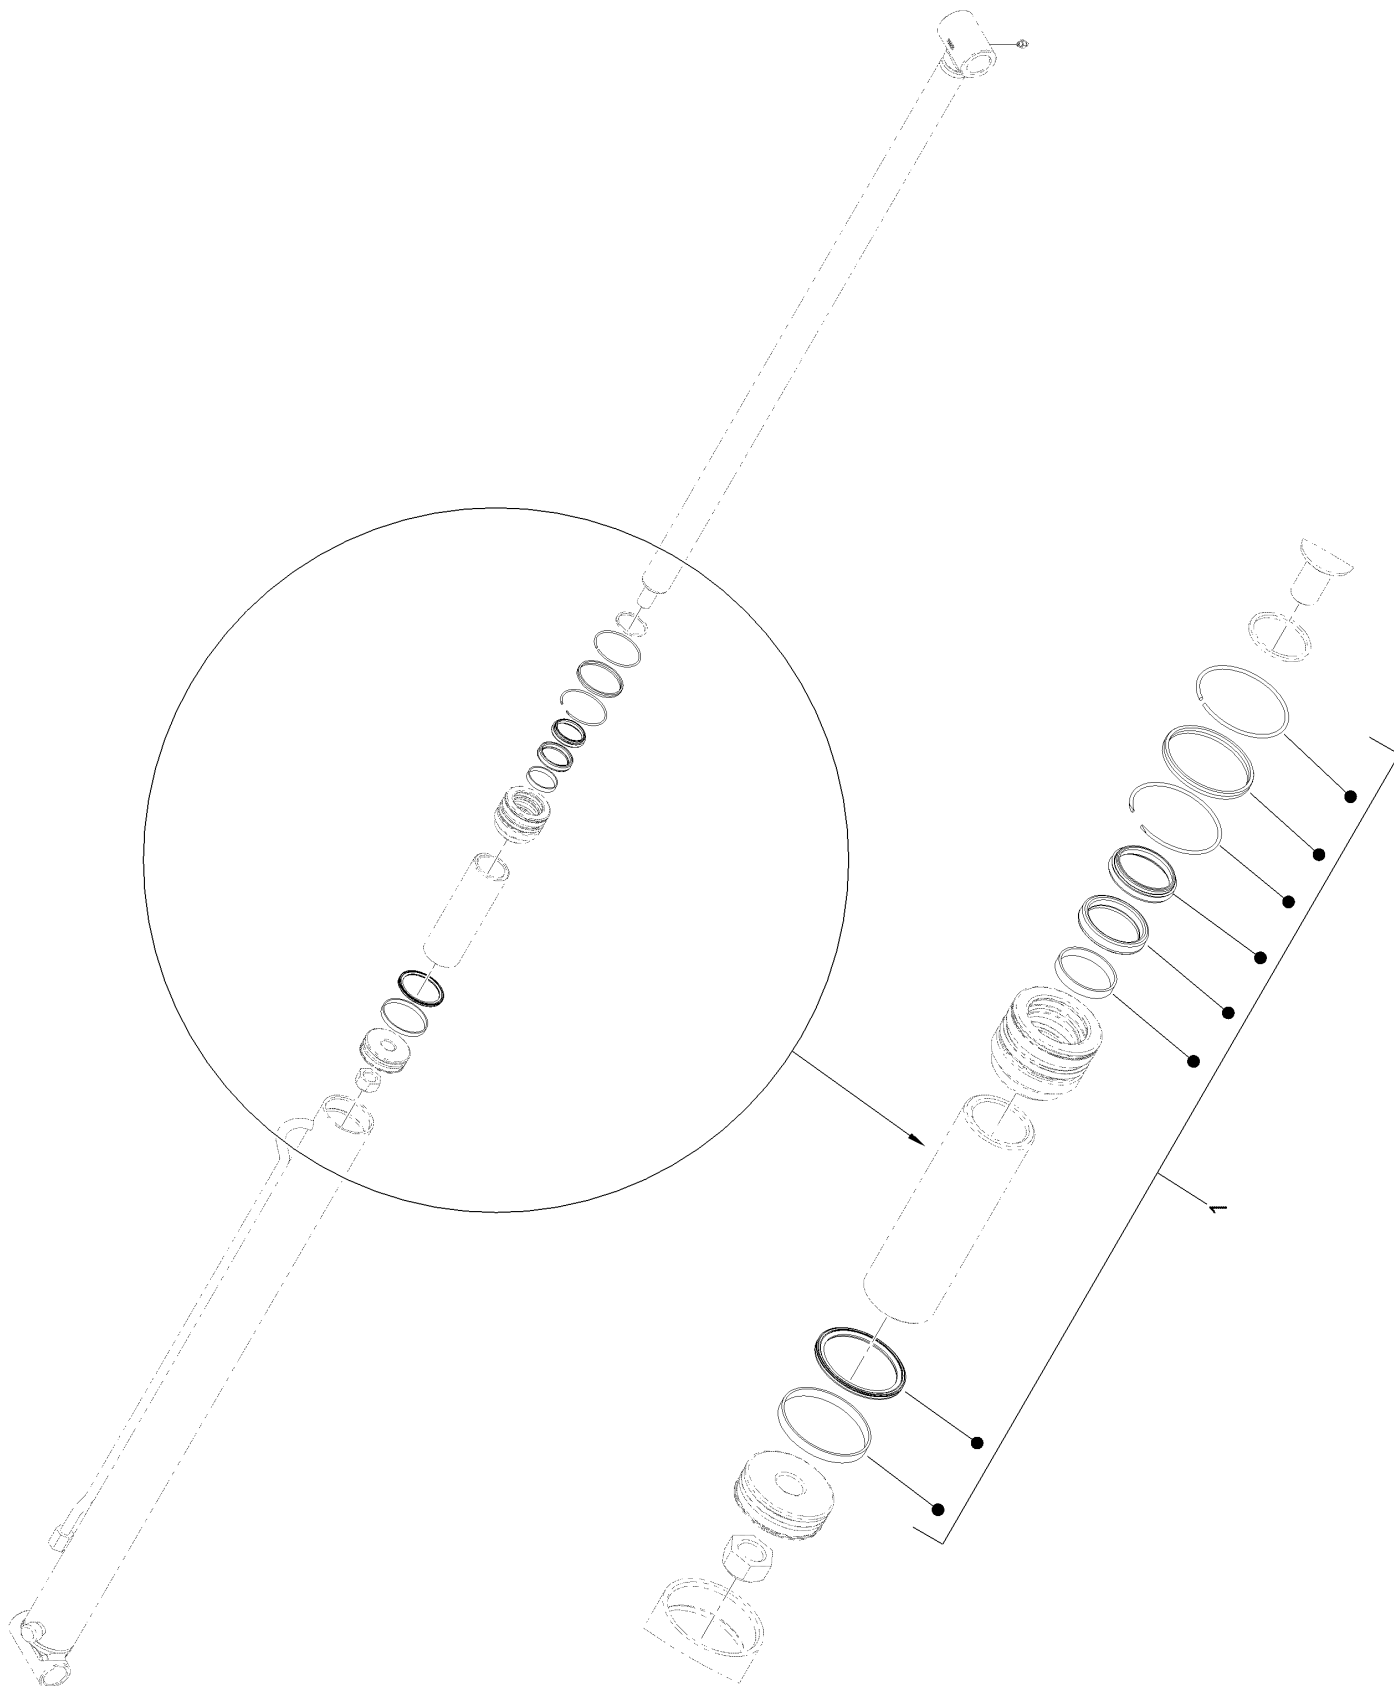

Hydraulic Cylinder Assembly No. 139-5718 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-8749	1	Hydraulic Cylinder Seal Kit

 Qtach Assembly No. 132-8468

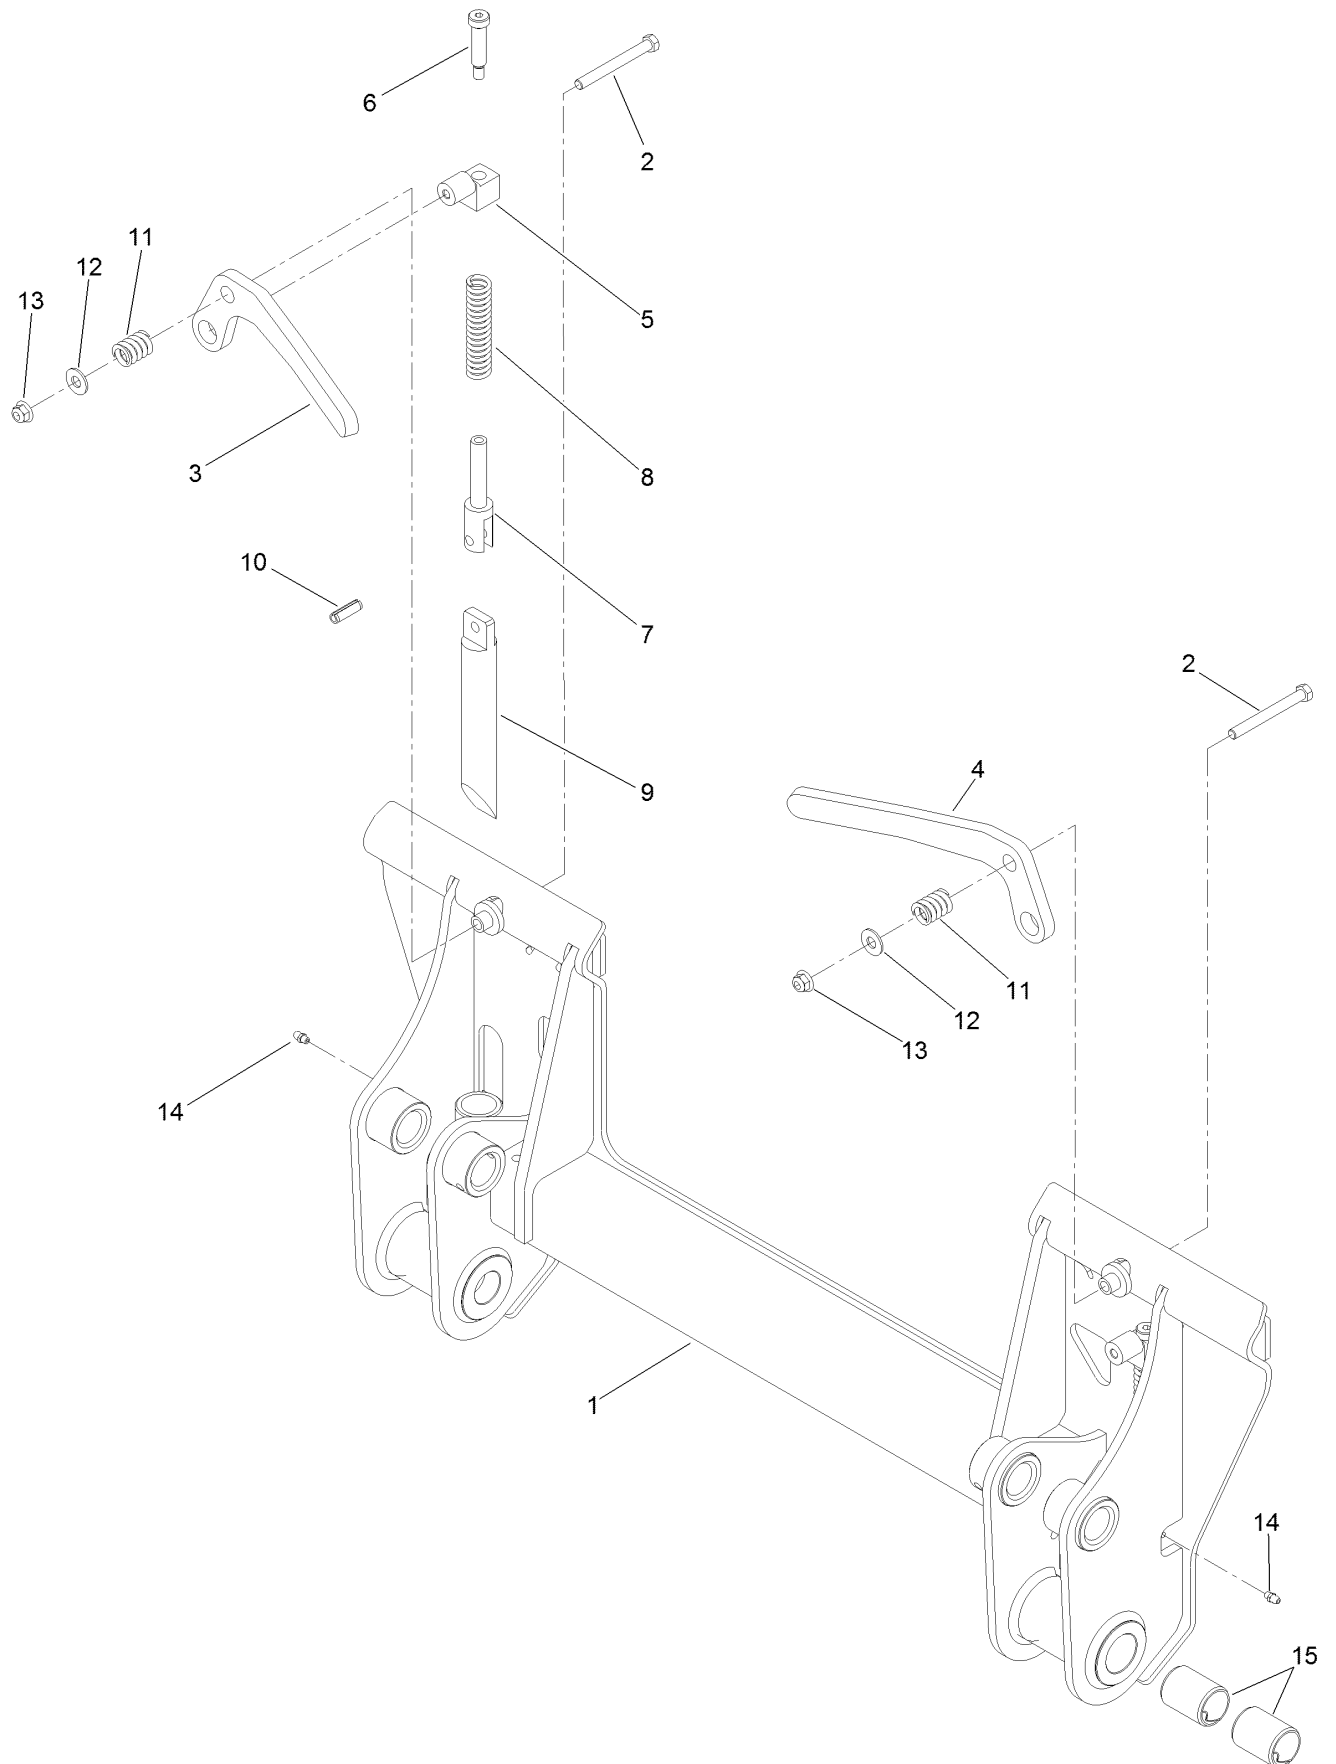


Qtach Assembly No. 132-8468 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-8459-03	1	Mount-Qtach
2	323-15	2	Screw-HH
3	132-8460-03	1	Handle-Left
4	132-8461-03	1	Handle-Right
5	133-9419	2	Block-Stop
6	1-809062	2	Screw
7	132-8462	2	Link-Handle
8	1-633454	2	Spring-Brake

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
9	132-8467	2	Pin-Qtach
10	32121-42	2	Pin-Roll
11	95-0772	2	Spring-Compression
12	3256-4	2	Washer-Flat
13	119-4042	2	Nut-HF, NI
14	302-5	2	Fitting-Grease
15	137-0126	4	Bushing-Spring

 Hydraulic Cylinder Assembly No. 161-6930

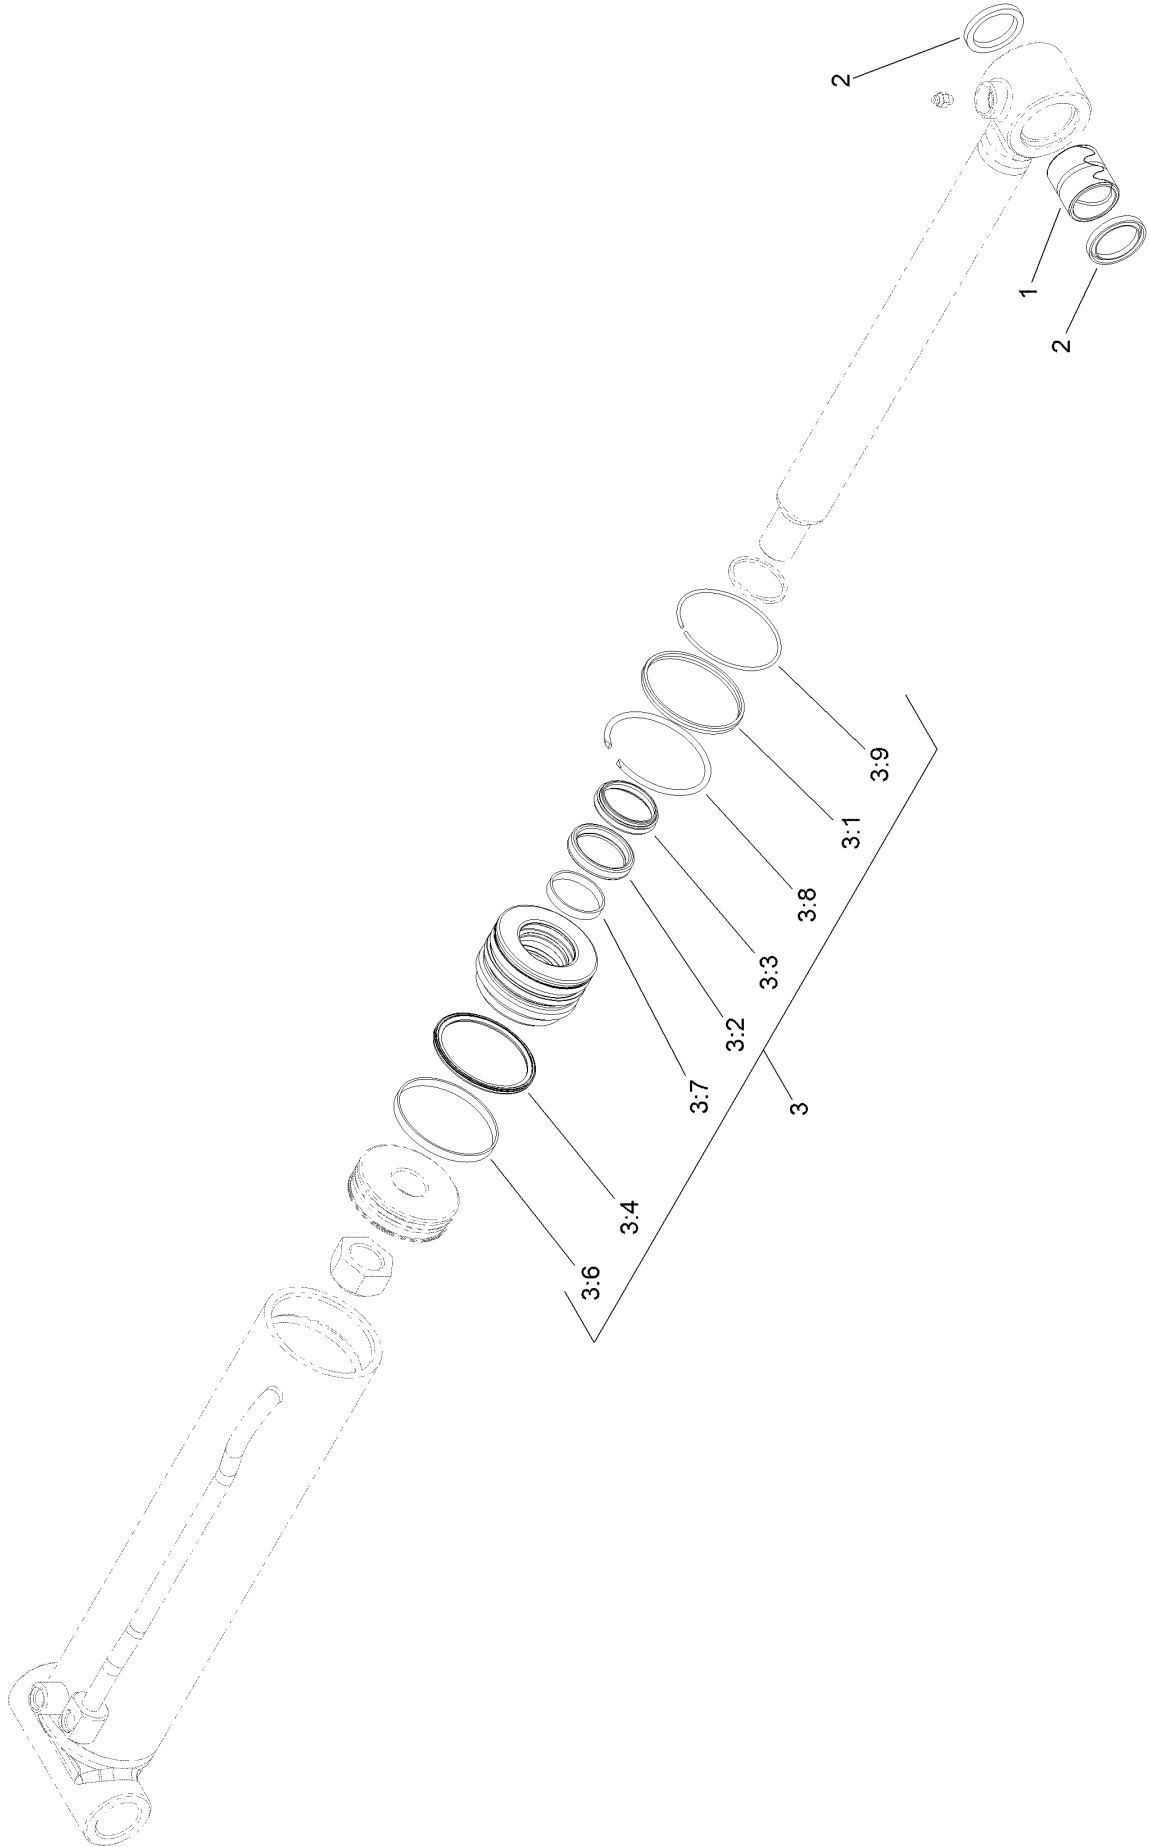


Hydraulic Cylinder Assembly No. 161-6930 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-6941	1	Bushing-Spring
2	163-5252	2	Seal-Shaft, Oil
3	137-5209	1	Seal Repair Kit
3:1		1	Seal-Dual ●
3:2		1	Seal-Rod ●
3:3		1	Wiper-Rod ●

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3:4		1	Seal-Piston ●
3:6		1	Ring-Wear, Piston ●
3:7		1	Ring-Wear, Rod ●
3:8		1	Ring-Retaining, Internal ●
3:9		1	Ring-Retaining, External ●

● Not serviced separately

 
Platform Assembly

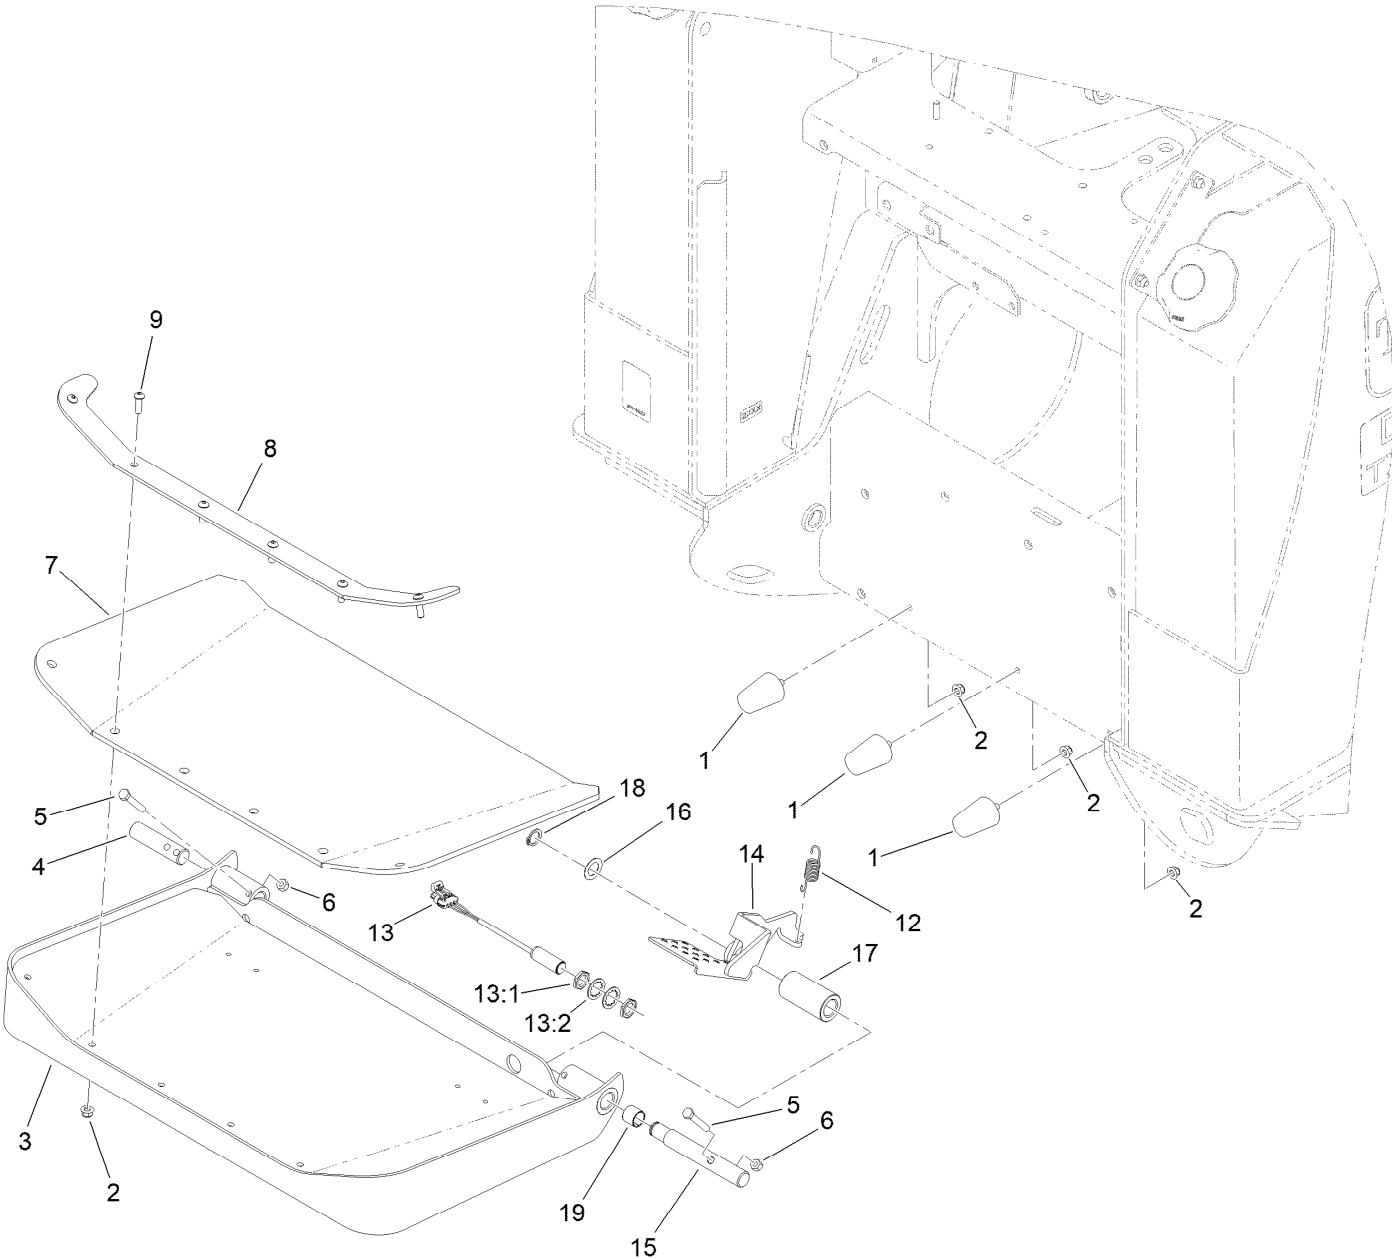

Platform Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	110-5070	3	Bumper	13	115-5300	1	Sensor, Proximity Sensor
2	119-4041	9	Nut-HF				ASM
3	138-4672-03	1	Platform	13:1	117-3207	2	Nut-Hex
4	125-3749	1	Pin-Cylinder	13:2	117-3208	2	Washer-Lock, Internal Tooth
5	322-10	2	Screw-HH	14	144-0735-03	1	Pedal ASM, [black]
6	3296-29	2	Nut-Lock, NI	15	144-0794	1	Pin-Pivot
7	161-7296	1	Pad-Platform	16	9202574	1	Washer-Flat
8	138-4677-03	1	Bracket-Clamp, Platform	17	144-0737	1	Spacer
9	3290-511	6	Screw-HSBH	18	32120-93	1	Ring-Retaining
12	137-6189	1	Spring-Extension	19	94-9609	1	Bushing-Straight

 
Hood and Access Panel Assembly

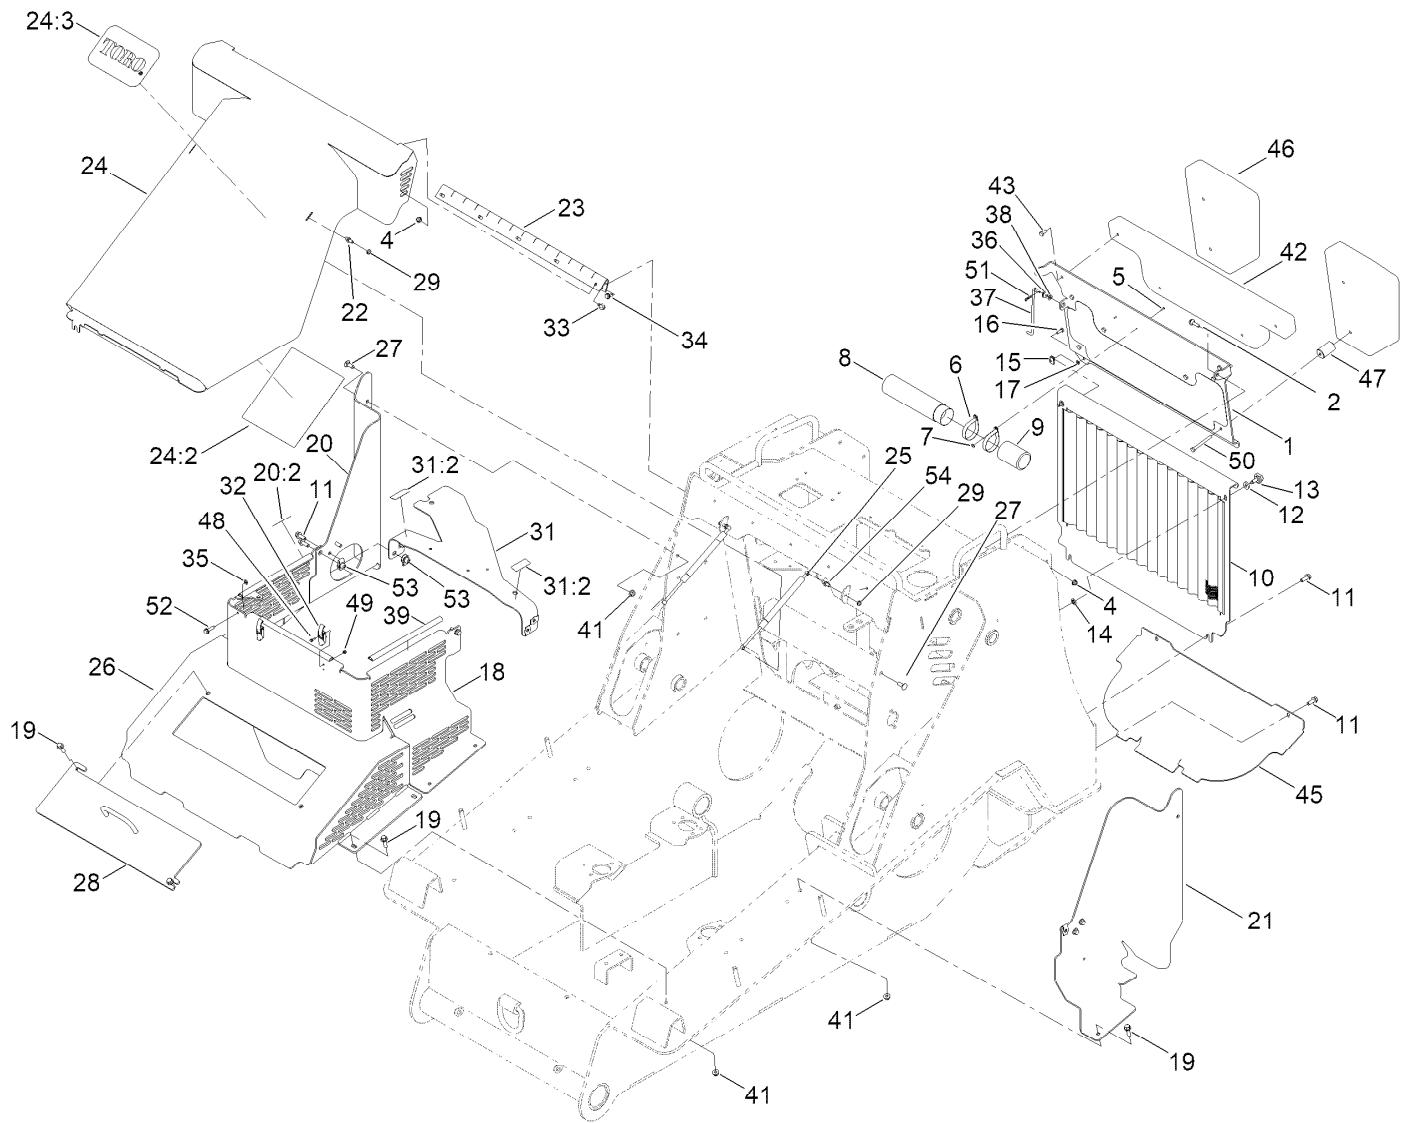

Hood and Access Panel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-4854-03	1	Panel-Rear	26	138-2409-03	1	Front Cover ASM
2	108-3744	2	Screw-Shoulder	27	3231-2	2	Bolt-CARR
4	119-4041	7	Nut-HF	28	137-0440-03	1	Cover Plate ASM
5	3269-17	2	Rivet-Pop	29	3296-47	4	Nut-Lock,NI
6	2412-120	2	Clamp-R	31	140-4456	1	Bracket-Air Cleaner
7	3269-10	2	Washer-Back	31:2	115-2047	2	Decal-Surface, Hot
8	104-7050	1	Tube-Manual	32	105-3912	2	Latch-Draw
9	104-7048	1	Cap-Housing	33	3234-5	5	Screw-HHF
10	133-9353-03	1	Cover-Rear	34	32104-32	5	Screw-HWH
11	3234-11	10	Screw-HHF	35	109-5667	1	Nut-Push
12	106-0565	2	Washer-Rubber	36	237-141	1	Grommet-Rubber
13	95-9648	2	Knob	37	137-5350	1	Rod-Prop
14	107-3154	2	Nut-Push	38	3256-22	1	Washer-Flat
15	107069	1	Clip	39	137-0393	3	Liner-Foam
16	321-4	1	Screw-HH	41	119-4042	12	Nut-HF, NI
17	1-803037	1	Nut-Retaining	42	137-0405	1	Cushion-Pad
18	139-7063-03	1	Grill-Panel	43	322-3	4	Screw-HH
19	3234-24	12	Screw-HHF	45	132-8485-01	1	Cover-Access, Bottom
20	140-4455	1	Cover-Grille, RH	46	137-0536	2	Pad-Rear
20:2	115-2047	1	Decal-Surface, Hot	47	138-2318	4	Spacer-Pad
21	139-7065-03	1	Panel-Side, LH	48	112-3169	4	Screw-HHF, Serrated
22	103-5752	2	Stud-Ball	49	3296-1	4	Nut-Lock
23	137-0378	1	Hinge-Piano	50	322-14	4	Screw-HH
24	138-4736	1	Hood ASM	51	3290-307	1	Pin-Cotter
24:2	137-5419	1	Decal-Service	52	32144-49	1	Screw-HWHTF
24:3	130-2885	1	Decal	53	105-4886	6	Nut-Tinnerman
25	114-5532	2	Cylinder-Gas	54	145-4951	2	Stud-Ball

 
Electrical Assembly

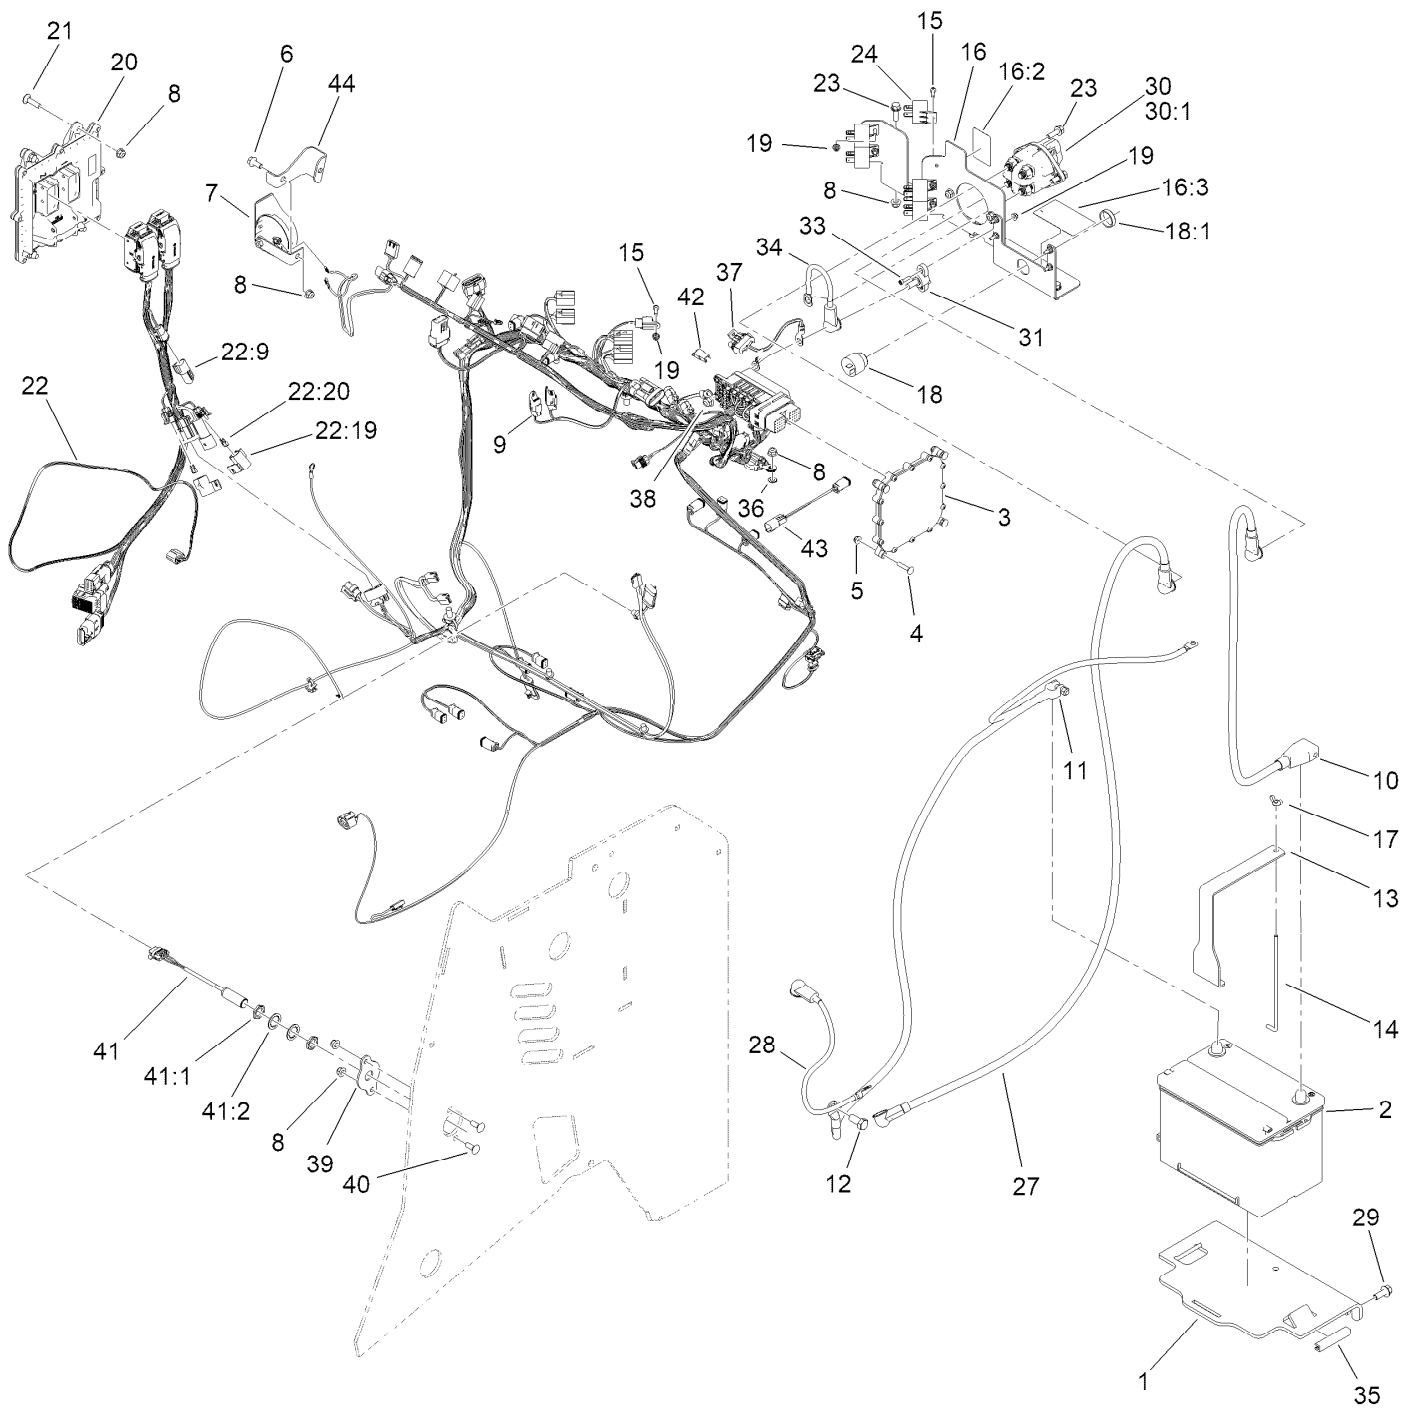

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-0374-03	1	Bracket-Battery	22:9	32180-043	1	Resistor-120 Ohm
2	106-5190	1	Battery, 660 CCA W/O Electrolyte	22:19	32180-101	2	Cover-Fuse, Single
3	127-2770	1	Controller	22:20	121-8864	2	Fuse-Mini Blade, 5 Amp
4	3229-3	4	Screw-CARR	23	3234-29	5	Screw-HHF
5	104-7201	4	Nut-HF, NI	24	99-7435	6	Relay
6	3234-47	1	Screw-HHF	27	136-4754	1	Cable-Battery, Positive
7	116749	1	Horn	28	136-4816	1	Cable-Battery, Positive
8	119-4041	13	Nut-HF	29	3234-11	3	Screw-HHF
9	122-3967	1	Harness-Wire, Main	30	122-0603	1	Switch-Disconnect
10	136-6090	1	Cable-Battery, Positive	30:1	33006-00	1	Nut-HF
11	136-6091	1	Cable-Battery, Negative	31	110-8822	1	Block-Junction
12	AU514-842	1	Screw-HH	33	3274-14	2	Screw-HSH
13	133-9422-03	1	Plate-Hold, Battery	34	137-0525	1	Cable-Battery, Positive
14	130-5220	1	Rod-Hold Down, Battery	35	70-2041	2	Trim - Edge
15	3290-126	9	Screw-HWH	36	3255-8	1	Washer-Lock
16	161-7282	1	Bracket-Components, Electrical	37	122-0084	1	Harness-Wire, Fusible Link
16:2	137-7164	1	Decal-Power, Battery	38	119-4042	1	Nut-HF, NI
16:3	161-7273	1	Decal - Fuses	39	138-4709	1	Plate-Mount, Sensor
17	1-803038	1	Wingnut	40	3230-16	2	Screw-CARR
18	80-9330	1	Audio Alarm ASM	41	115-5300	1	Sensor, Proximity Sensor ASM
18:1	104-5107	1	Nut-Plastic, Knurled	41:1	117-3207	2	Nut-Hex
19	120-4578	11	Nut-HF	41:2	117-3208	2	Washer-Lock, Internal Tooth
20	136-4739	1	Ecu-Engine	42	136-4862	1	Harness-Wire, Fusible Link
21	3230-3	4	Screw-CARR	43	136-4868	1	Harness-Wire, Aux Jumper
22	122-2173	1	Harness-Wire,	44	163-5267-0P	1	Bracket-Horn

 
Main Wire Harness Assembly No. 122-3967

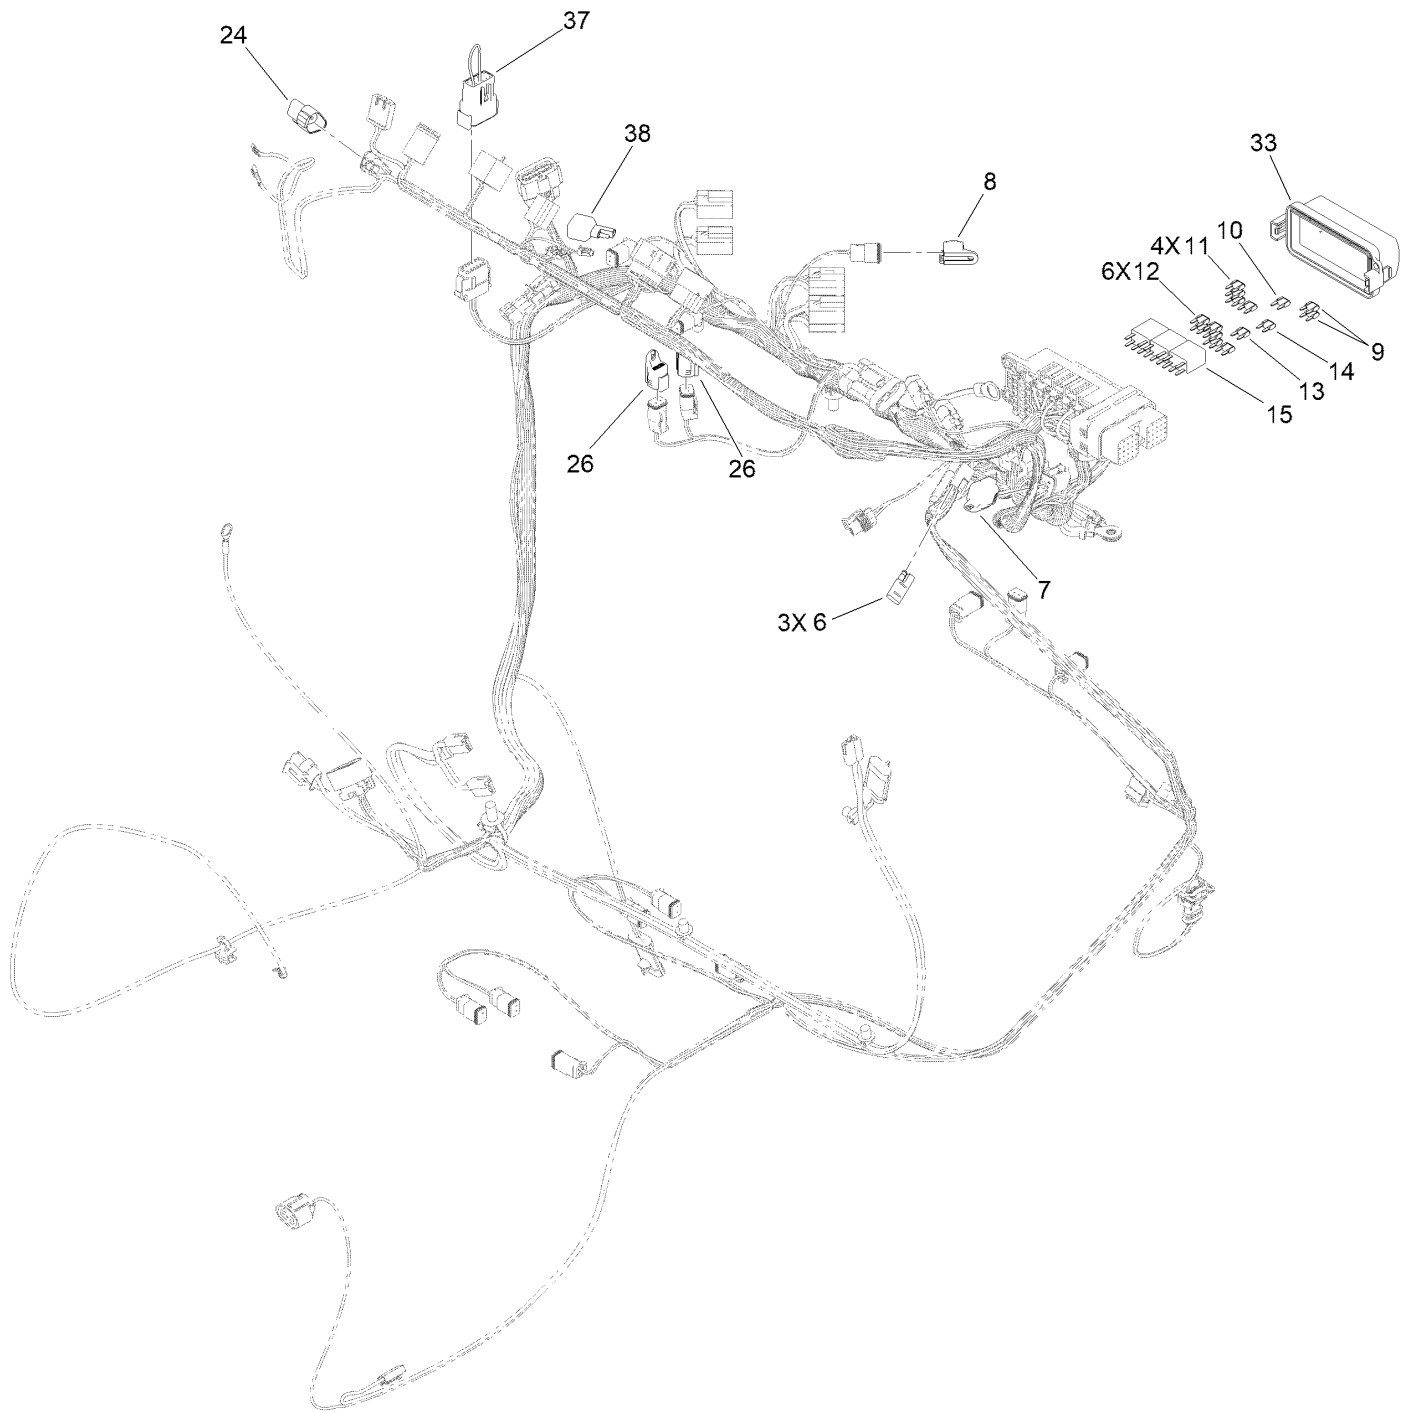

Main Wire Harness Assembly No. 122-3967 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	116-0053	3	Cap-Plug	14	121-8869	1	Fuse-Mini Blade, 25 Amp
7	32180-156	1	Cap-Plug, 6 Way	15	122-0368	3	Relay-280 ISO
8	32180-089	1	Cap-Plug, 3 Way	24	32180-043	1	Resistor-120 Ohm
9	121-8861	2	Fuse-Mini Blade, 2 Amp	26	32180-091	2	Cap-Dust, 2 Way
10	121-8864	1	Fuse-Mini Blade, 5 Amp	33	32180-229	1	Cover-Littelfuse, Pdm 60F
11	121-8865	4	Fuse-Mini Blade, 7.5 Amp	37	122-3975	1	Harness-Wire, Jumper
12	121-8866	6	Fuse-Mini Blade, 10 Amp	38	100-4918	1	Diode
13	121-8868	1	Fuse-Mini Blade, 20 Amp				

 
Crankcase Assembly

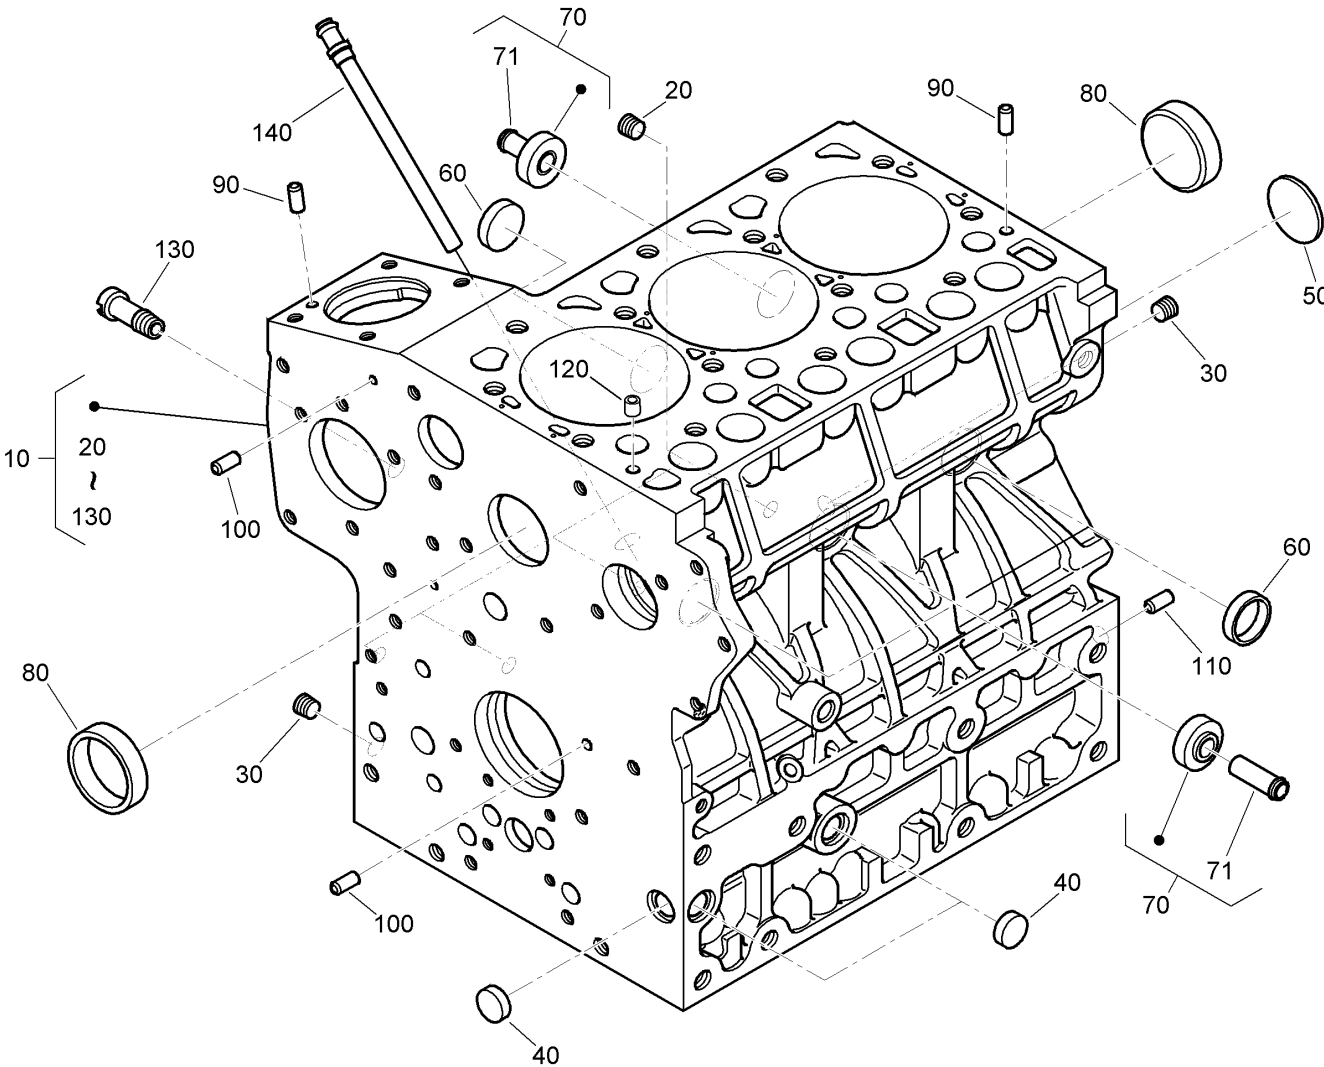

Crankcase Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9772	1	Crankcase	80	98-7501	2	Cap-Sealing
20	98-7487	4	Plug	90	98-7503	2	Pin-Straight
30	98-7488	2	Plug	100	98-7504	2	Pin-Straight
40	98-7489	3	Plug	110	98-7505	1	Pin-Straight
50	98-9668	1	Plug-Expansion	120	98-7506	1	Pin-Pipe
60	98-7500	3	Cap-Sealing	130	100-9153	1	Pipe-Return, Water
70	139-4711	2	Pipe	140	139-9729	1	Pipe-Return, Oil
71	139-9578	2	Pipe-Return, Water				

 
Oil Pan Assembly

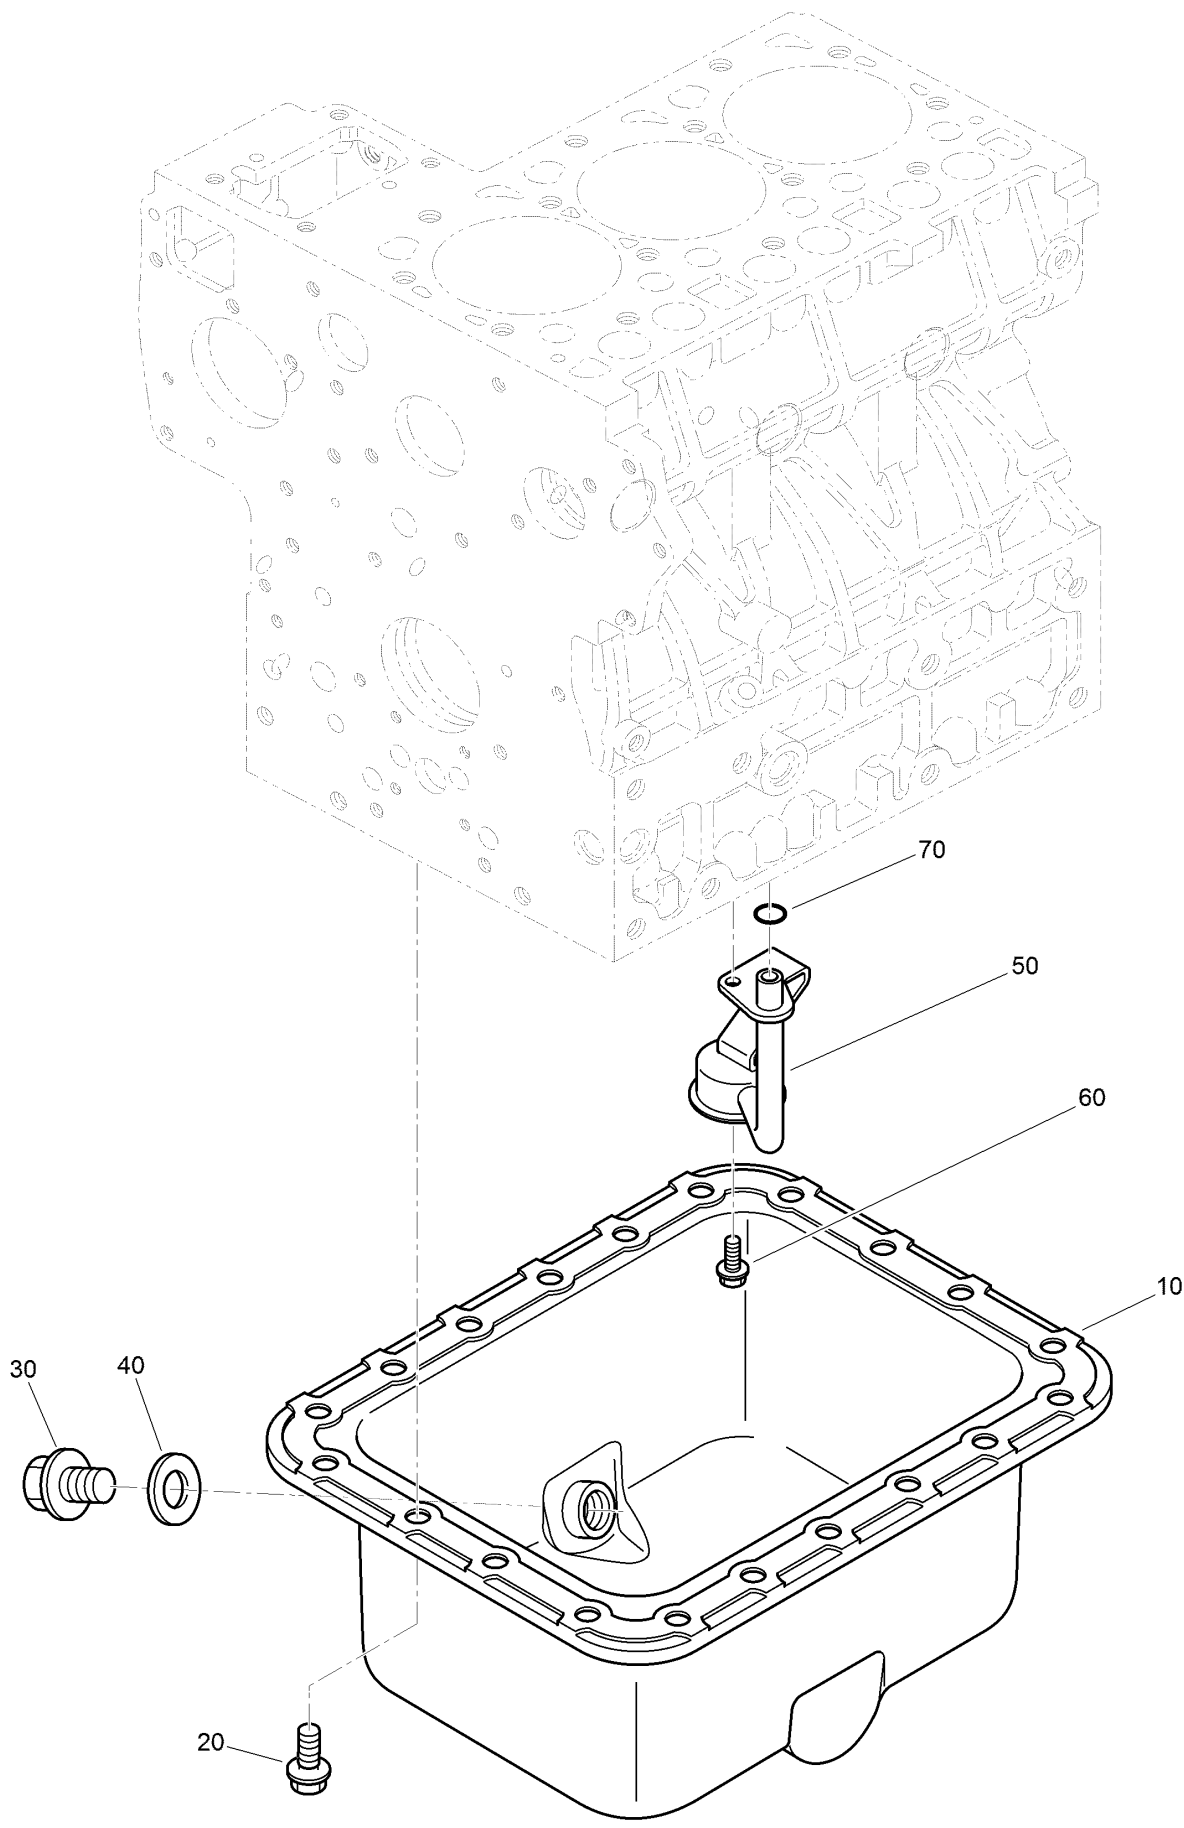

Oil Pan Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-4713	1	Pan-Oil	50	139-9658	1	Filter-Oil
20	139-9663	20	Bolt-Flange	60	115-8504	1	Bolt-Flange
30	114-8151	1	Plug-Drain	70	108-7054	1	O-Ring
40	AU87421317	1	Washer-Seal				

 
Oil Dipstick and Guide Assembly

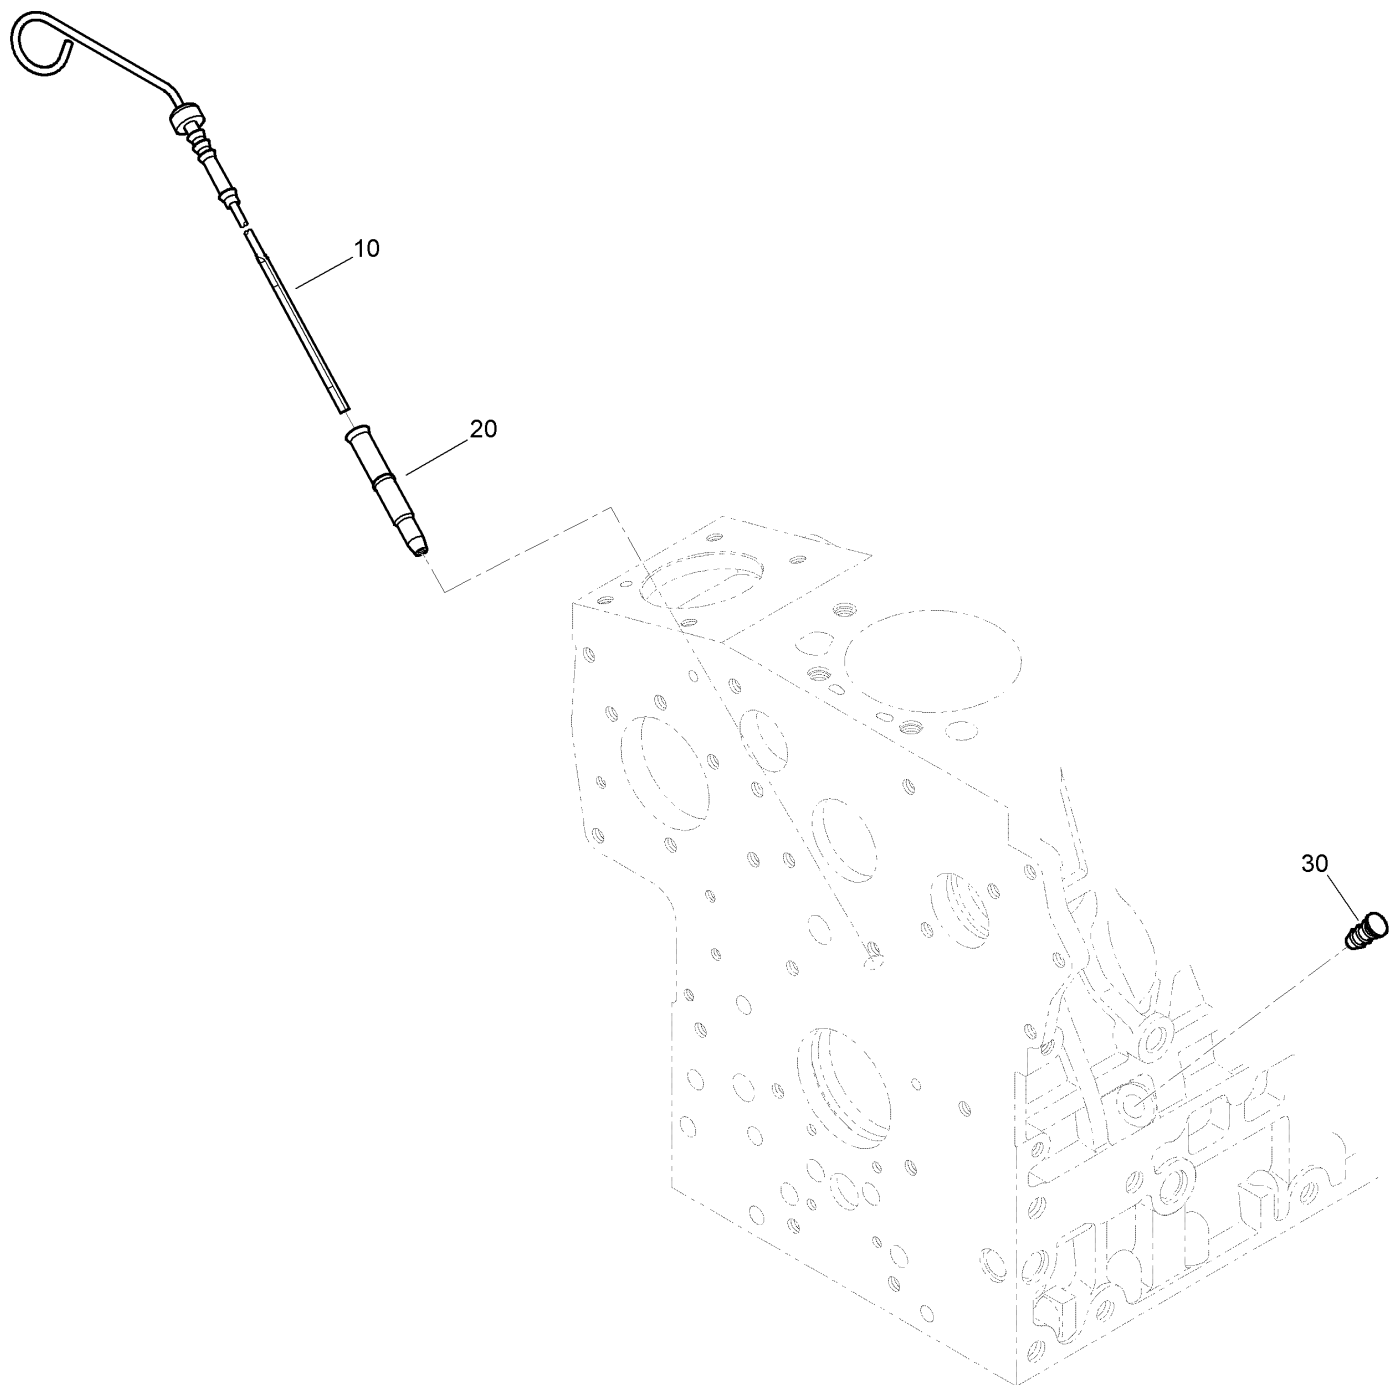

Oil Dipstick and Guide Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	130-1565	1	Gauge-Oil, Engine
20	105-4580	1	Guide-Gauge, Oil
30	139-9638	1	Plug-Gauge, Oil

 Oil Pump Assembly

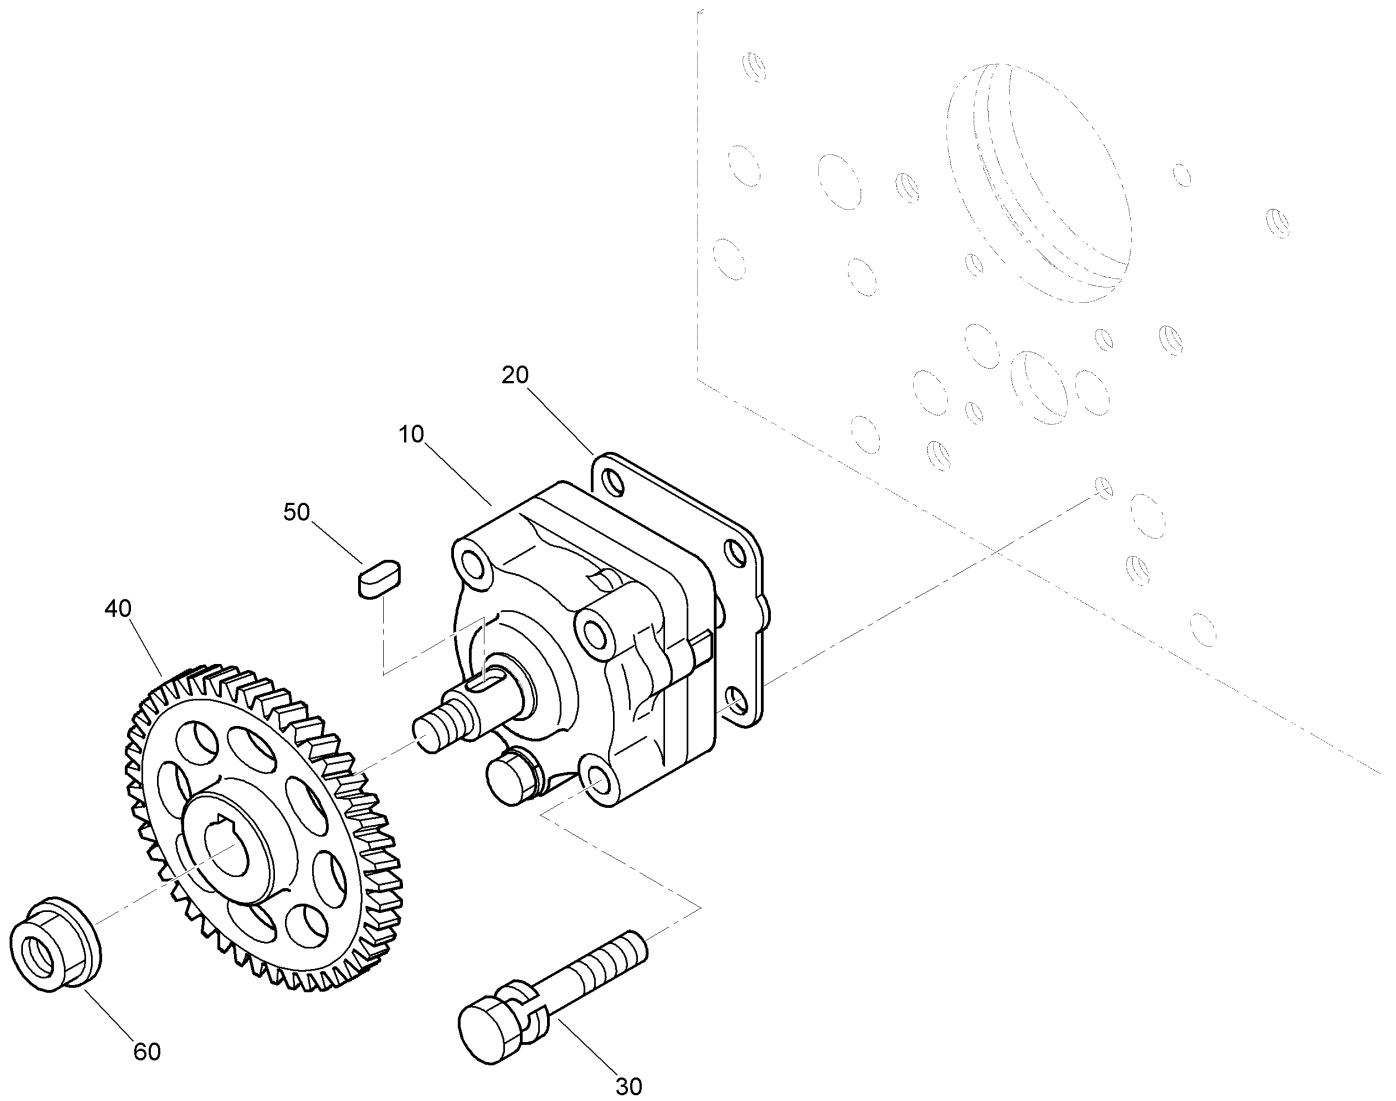


Oil Pump Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9628	1	Oil-Pump
20	139-9596	1	Gasket-Pump, Oil
30	125-9063	4	Bolt-Sems

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
40	130-1453	1	Gear-Drive, Oil Pump
50	98-7517	1	Key-Feather
60	139-9528	1	Nut

 
Cylinder Head Assembly

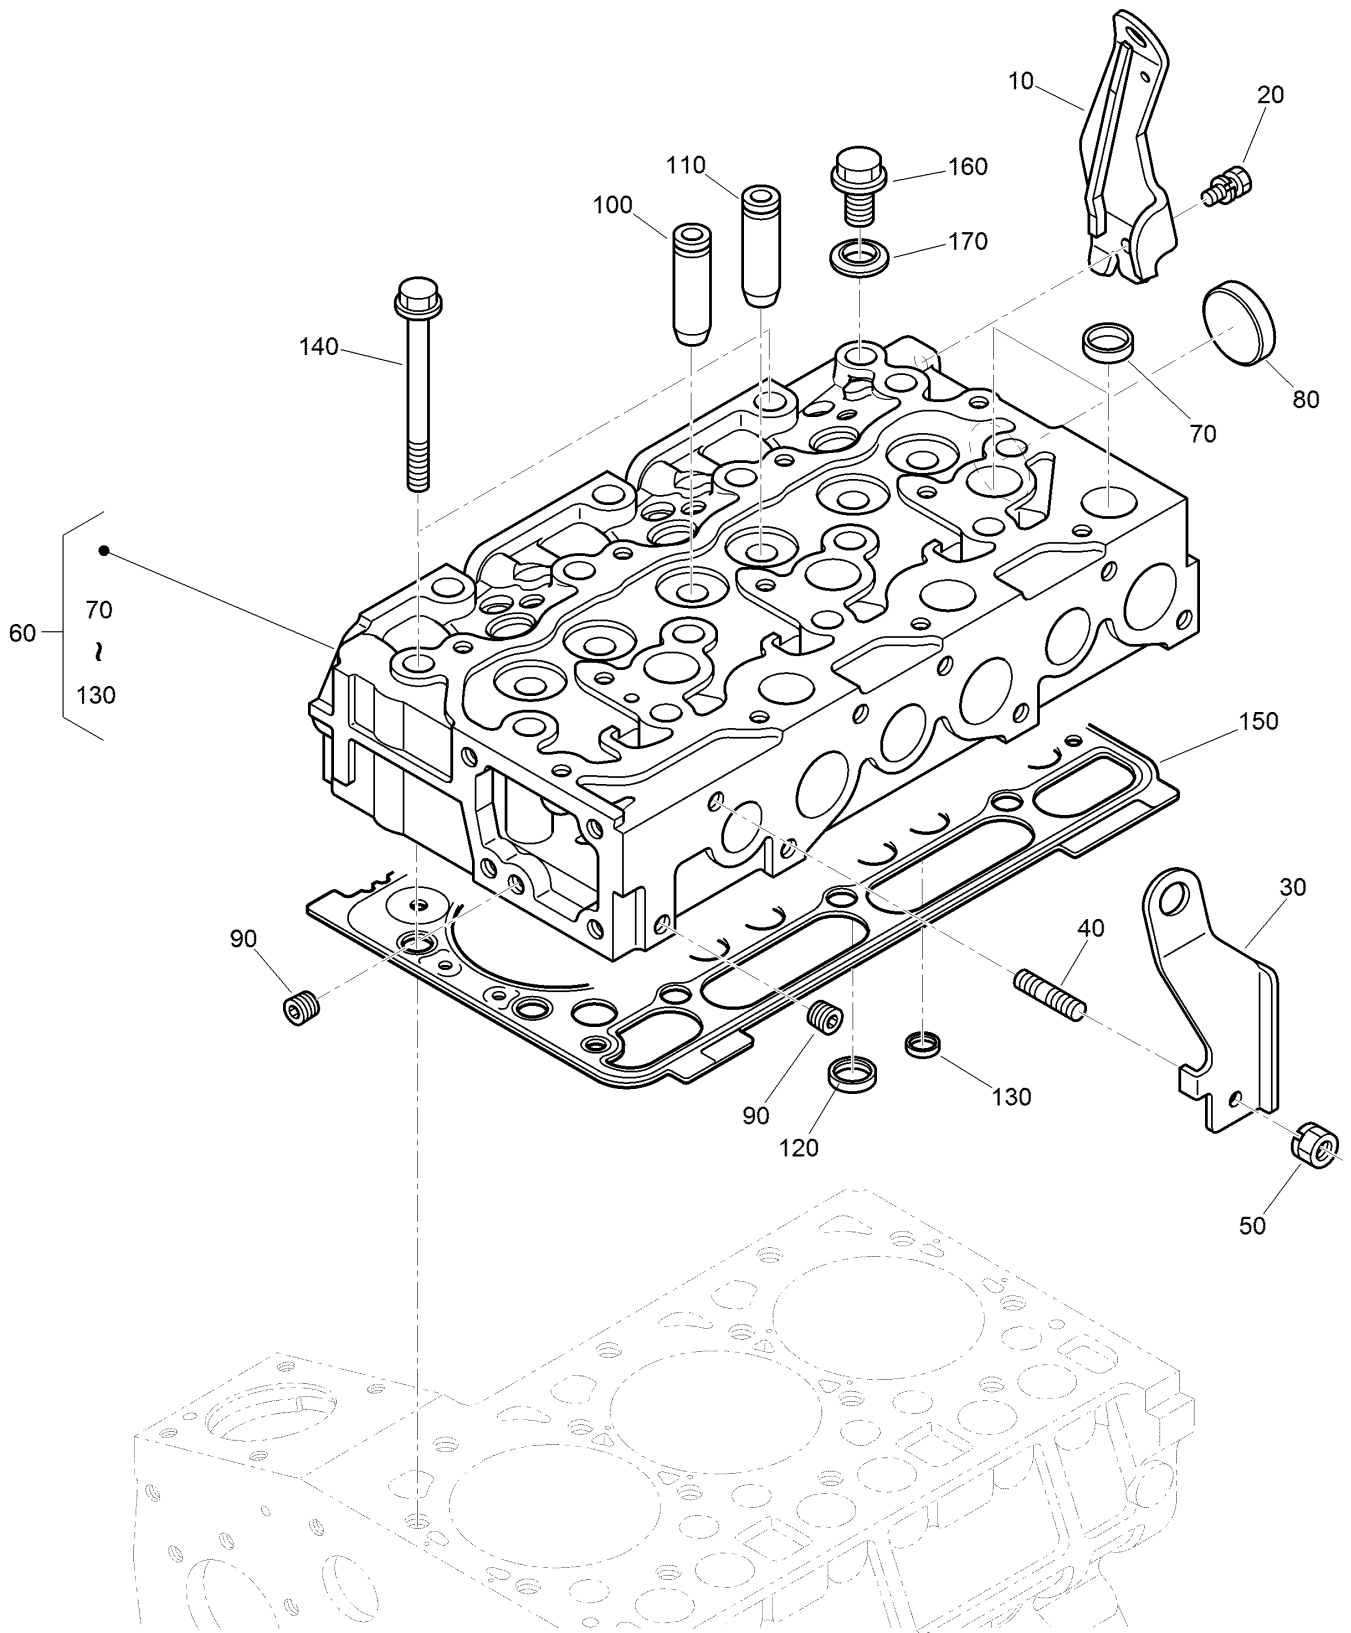

Cylinder Head Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-4705	1	Hook-Engine, Rear	120	139-9562	3	Seat-Valve, Inlet
20	98-7526	1	Bolt	130	139-9561	3	Seat-Valve, Exhaust
30	139-9756	1	Hook-Engine, Front	140	139-9580	14	Bolt-Head, Cylinder
40	139-9531	1	Bolt-Stud	150	139-9645	1	Gasket-Head, Cylinder
50	100-9288	1	Nut	150	139-9644	1	Gasket-Head, Cylinder
60	139-9777	1	Head-Cylinder	150	139-9646	1	Gasket-Head, Cylinder
70	139-9522	9	Plug-Cup	150	139-9647	1	Gasket-Head, Cylinder
80	139-9523	1	Cap-Sealing	150	139-9648	1	Gasket-Head, Cylinder
90	98-9687	2	Plug	160	98-7762	1	Plug
100	139-9665	3	Guide-Valve, Inlet	170	99-7590	2	Washer-Seal
110	139-9626	3	Guide-Valve, Exhaust				

 
Inlet and Exhaust Manifold Assembly

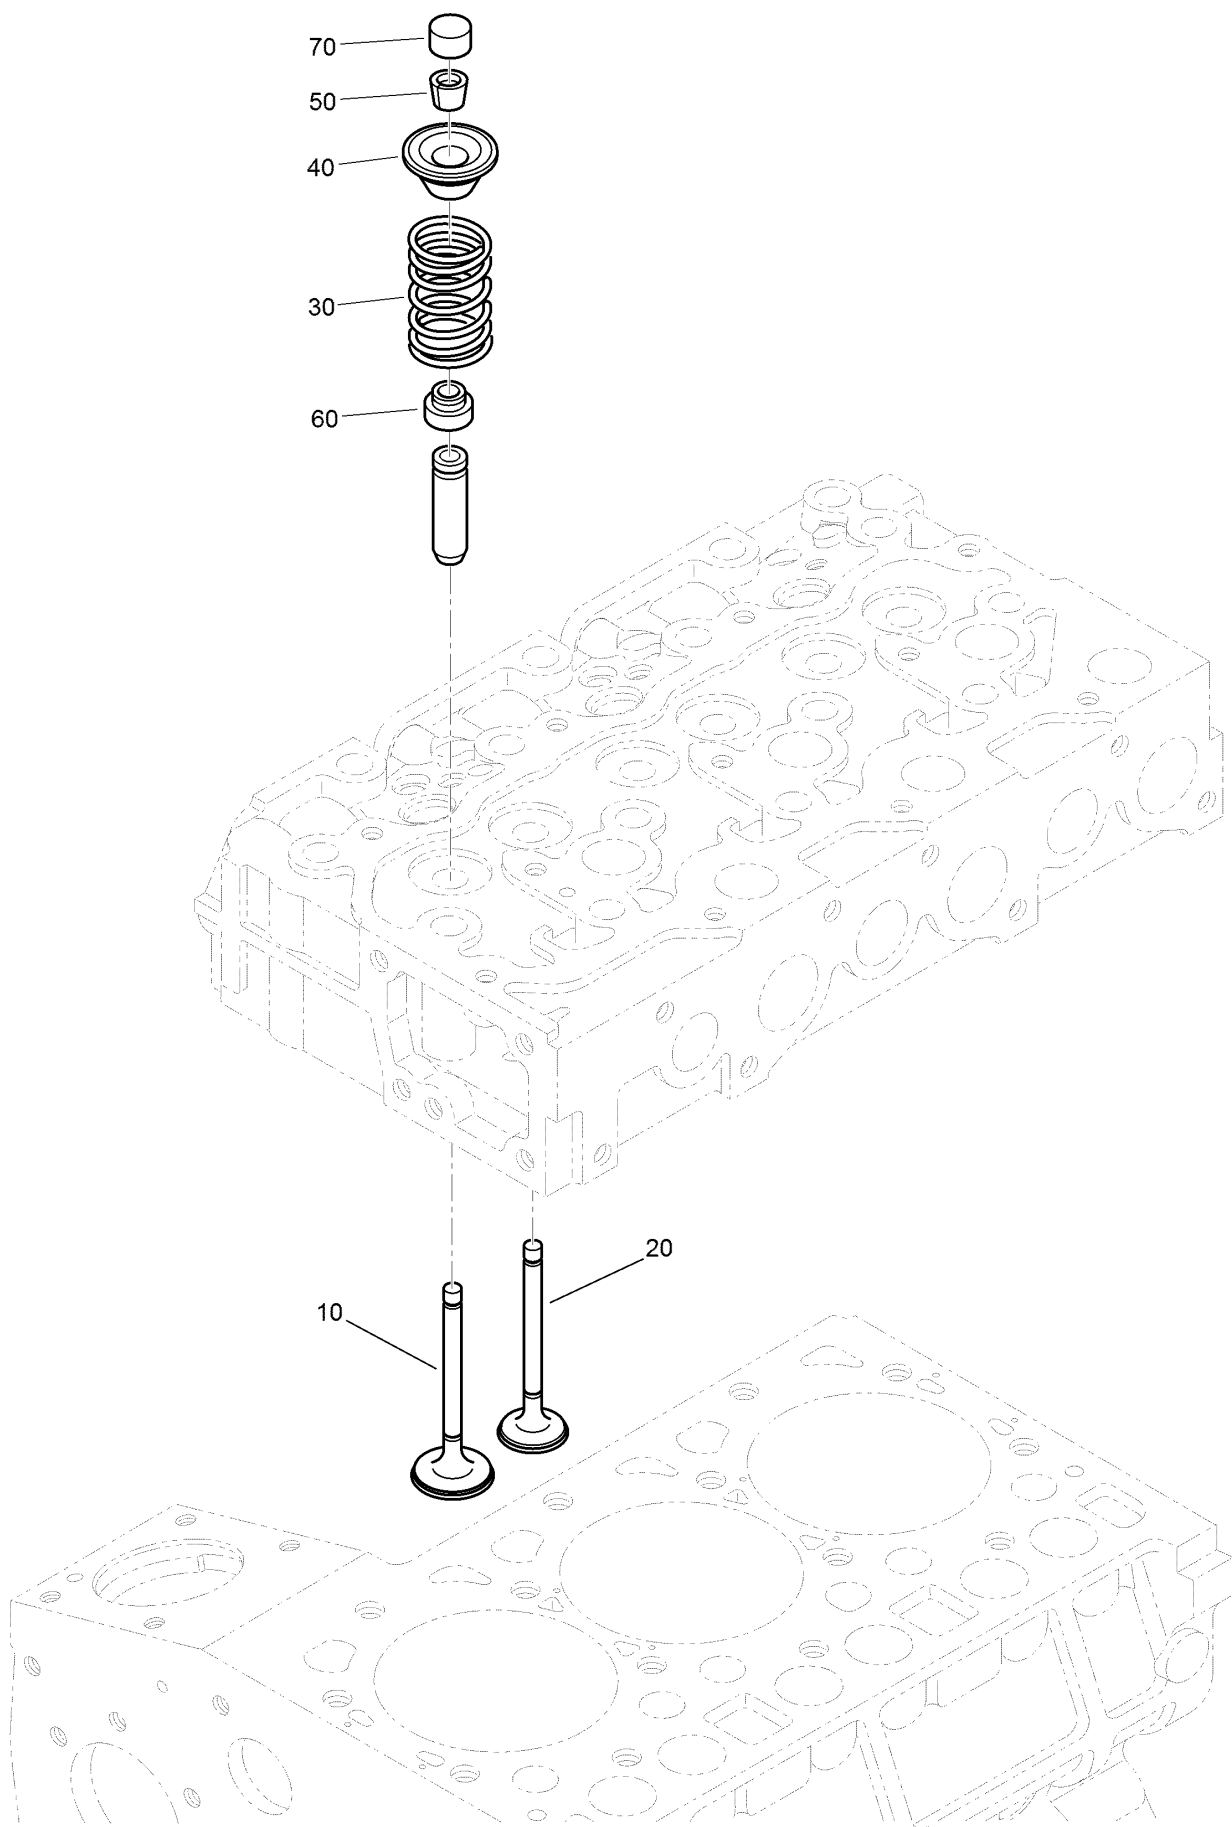

Inlet and Exhaust Manifold Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9660	3	Valve-Inlet	50	139-9525	6	Collet-Valve, Spring
20	139-9661	3	Valve-Exhaust	60	139-9524	6	Seal-Stem, Valve
30	130-1450	6	Spring-Valve	70	130-1451	6	Cap-Valve
40	98-7794	6	Retainer-Spring, Valve				

 
Rocker Arm Assembly

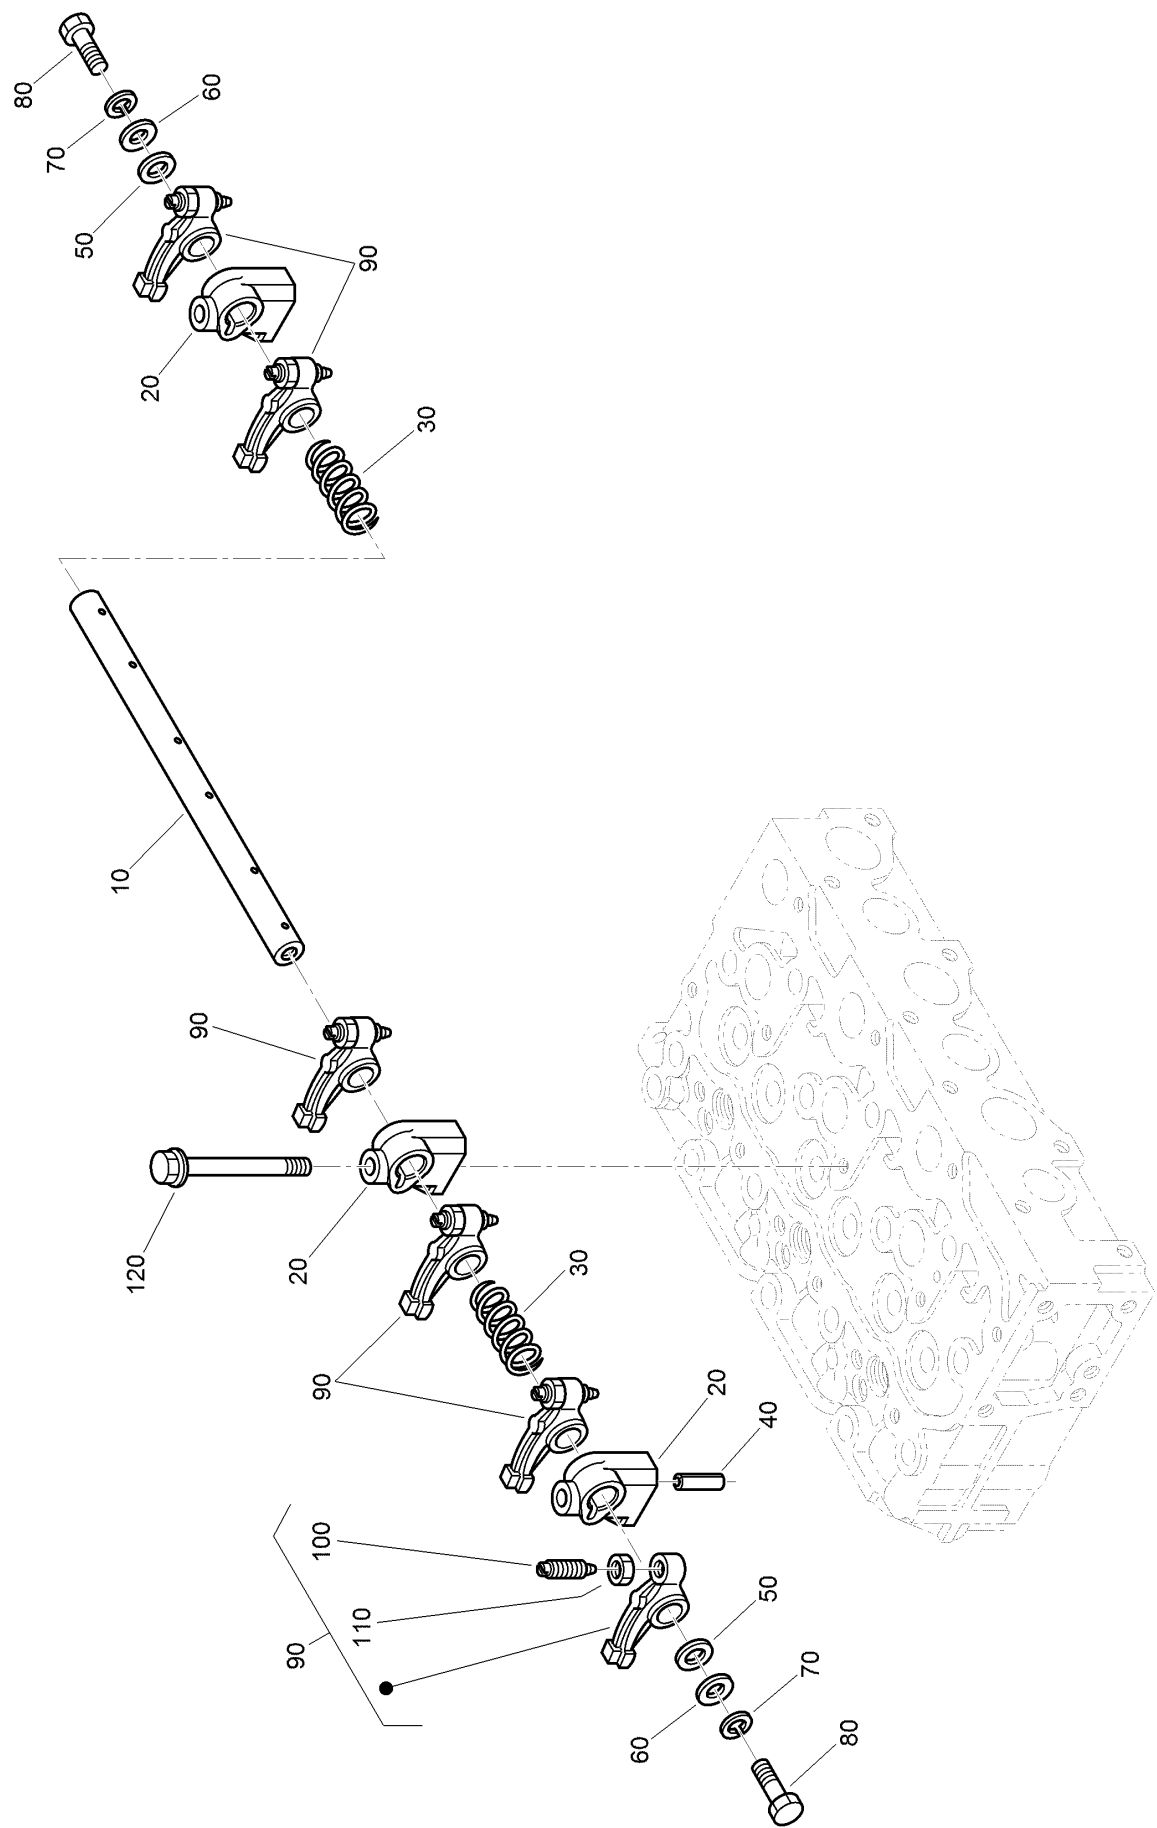

Rocker Arm Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9592	1	Shaft-Arm, Rocker	70	131-9579	2	Washer-Spring, Lock
20	139-9526	3	Bracket-Arm, Rocker	80	98-7884	2	Bolt
30	98-7807	2	Spring-Arm, Rocker	90	98-7809	6	Rocker Arm ASM
40	98-7805	1	Pin-Spring	100	130-1452	6	Screw-Adjusting
50	98-7806	2	Washer	110	98-7811	6	Nut
60	120-5832	2	Washer-Plain	120	108-7091	3	Bolt-Flange

 
Cylinder Head Cover Assembly

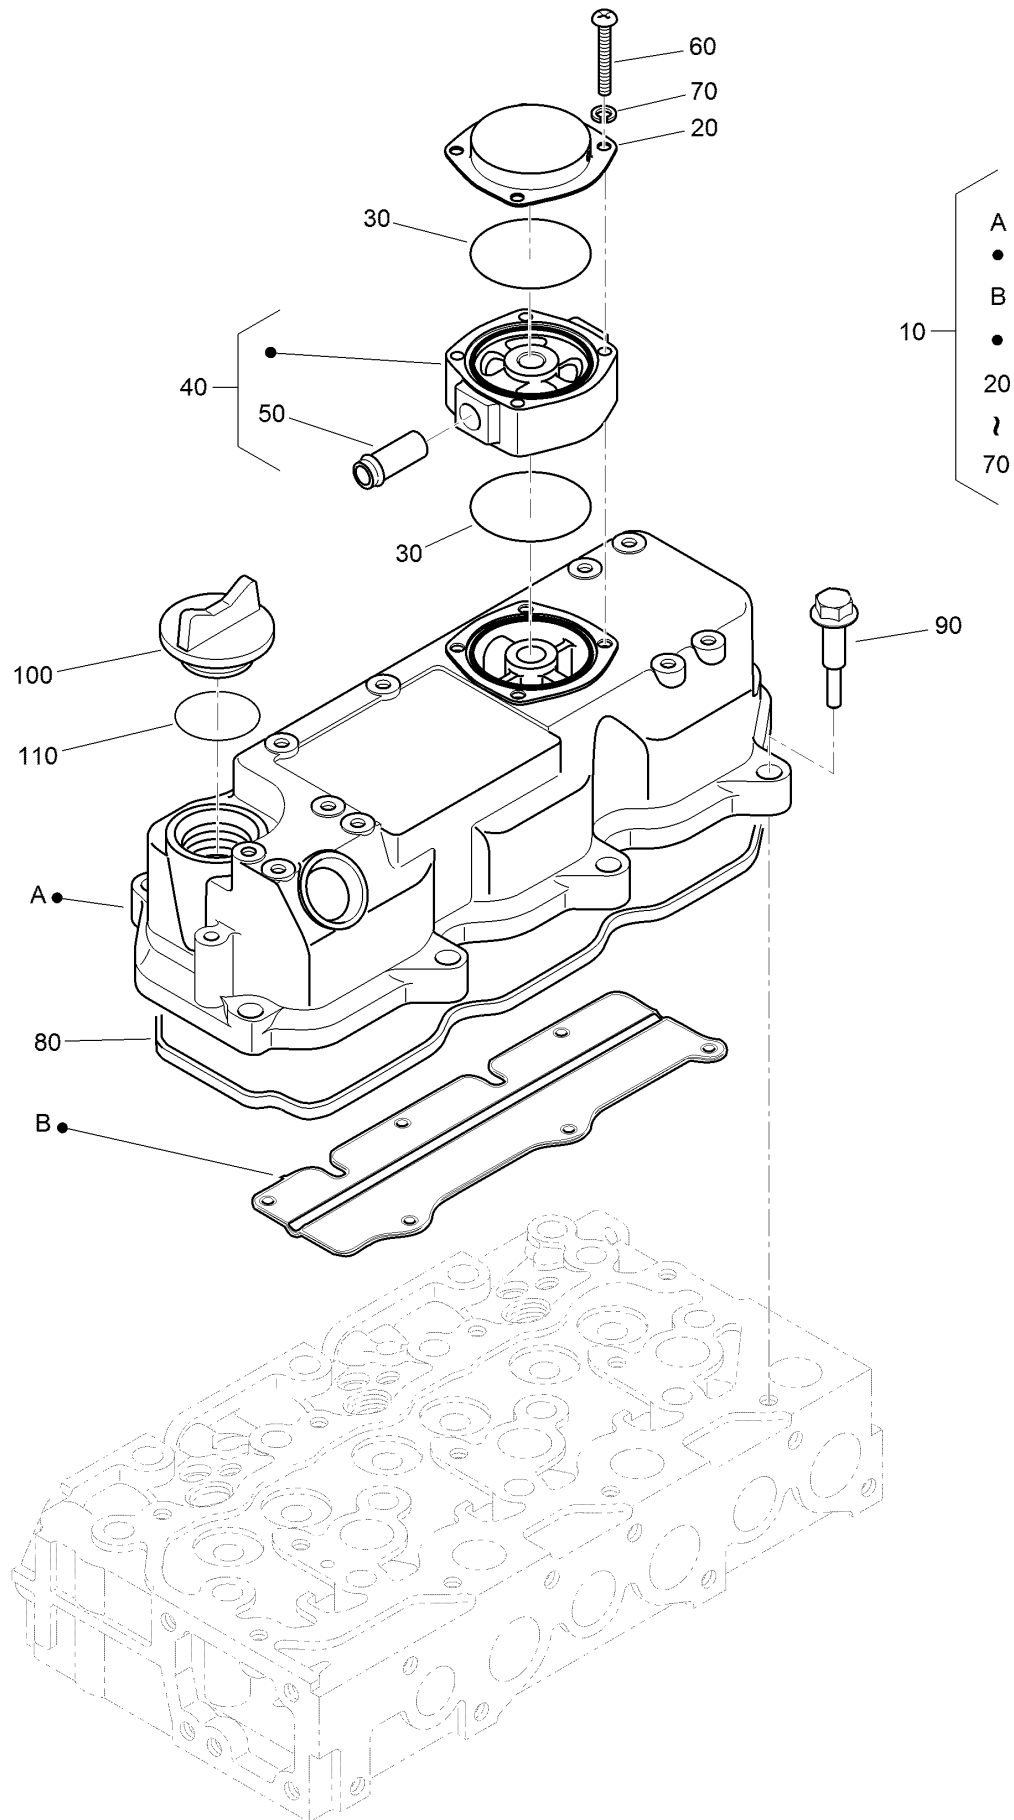

Cylinder Head Cover Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9761	1	Head Cover ASM	70	127-0408	4	Washer-Lock, Spring
20	139-9643	1	Cover-Breather	80	139-9593	1	Gasket-Cover, Head
30	108-7061	2	O Ring-Breather	90	108-7063	8	Bolt
40	139-9747	1	Spacer-Breather	100	98-9449	1	Plug-Filler, Oil
50	139-9578	1	Pipe-Return, Water	110	108-7064	1	O-Ring
60	139-9508	4	Screw-Phillips, Pan Head				

 
Gear Case Assembly

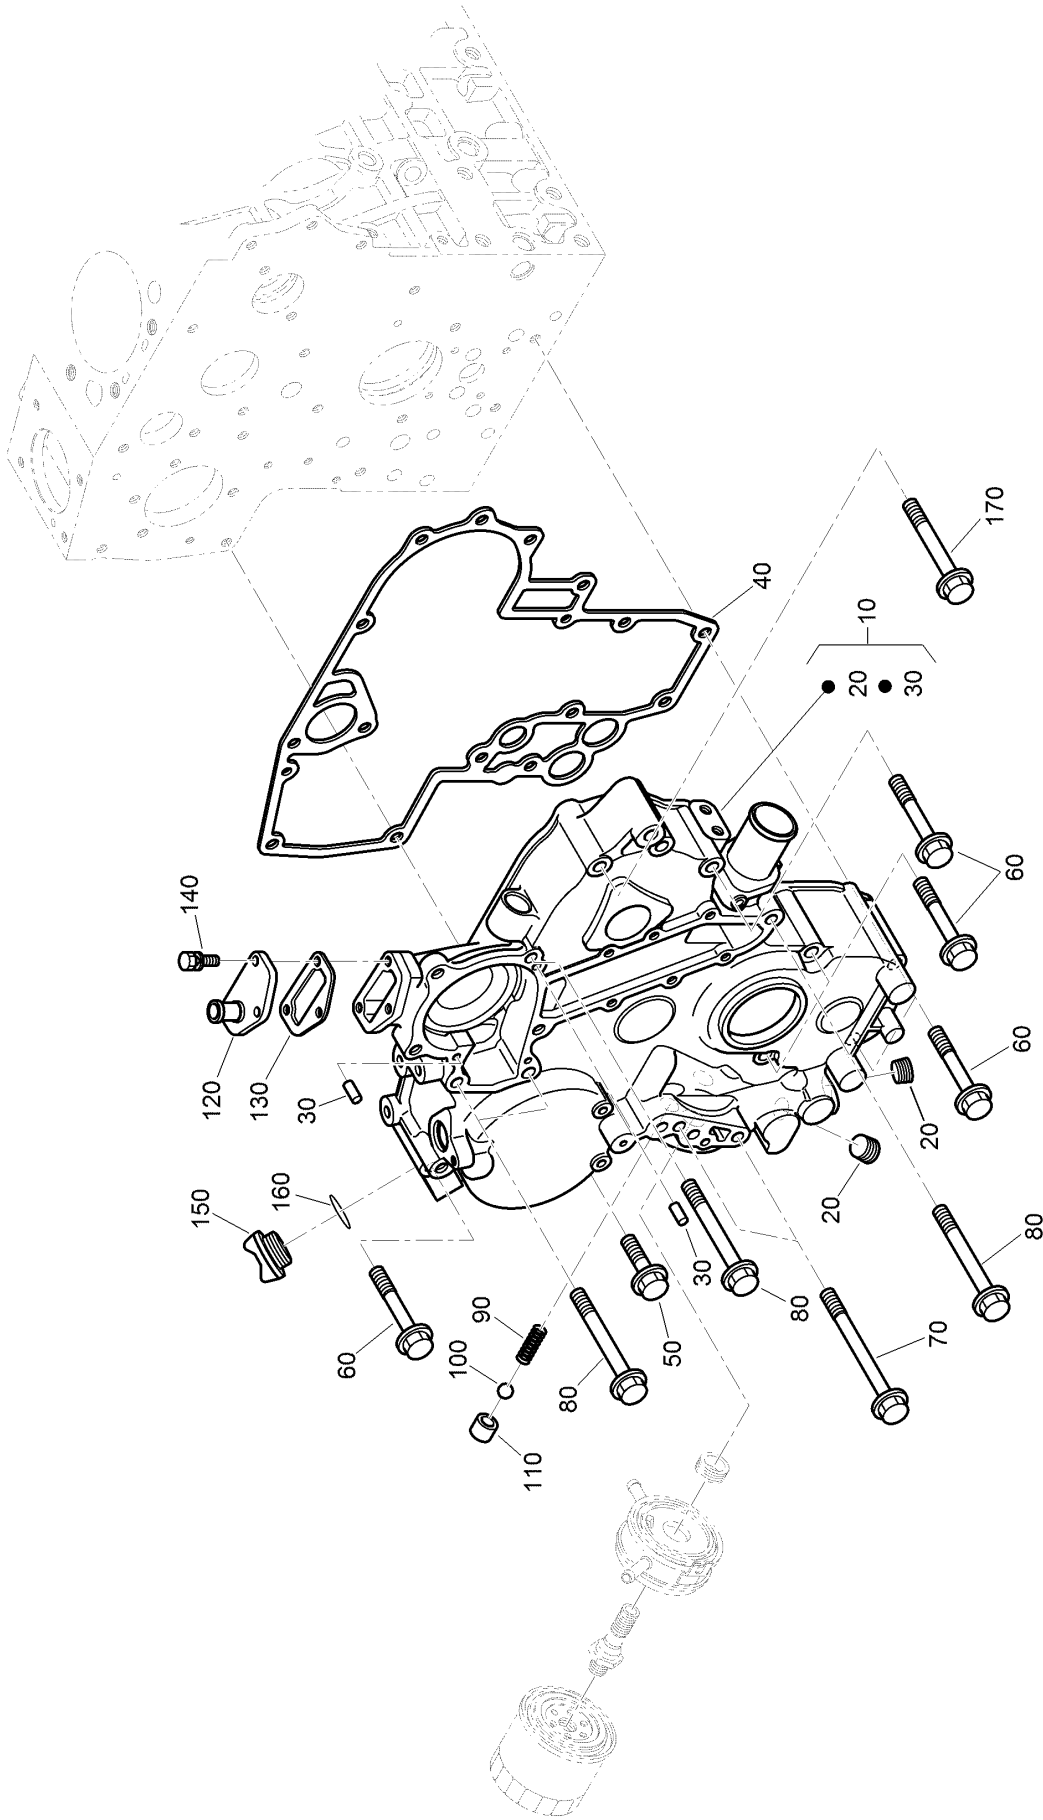

Gear Case Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9629	1	Case-Gear	100	139-9533	1	Seat-Valve
20	127-0425	2	Plug	110	98-7565	1	Ball
30	98-7504	2	Pin-Straight	120	139-9534	1	Flange-Return, Water
40	139-9727	1	Gasket-Case, Gear	130	139-9598	1	Gasket-Flange, Return
50	108-7085	1	Bolt-Flange	140	98-7568	3	Bolt
60	139-9602	6	Bolt-Sems	150	98-9449	1	Plug-Filler, Oil
70	139-9654	2	Bolt-Sems	160	108-7064	1	O-Ring
80	115-8520	4	Bolt-Flange	170	139-9543	1	Bolt-Hex
90	139-9529	1	Spring				

 
Oil Filter Cartridge Assembly

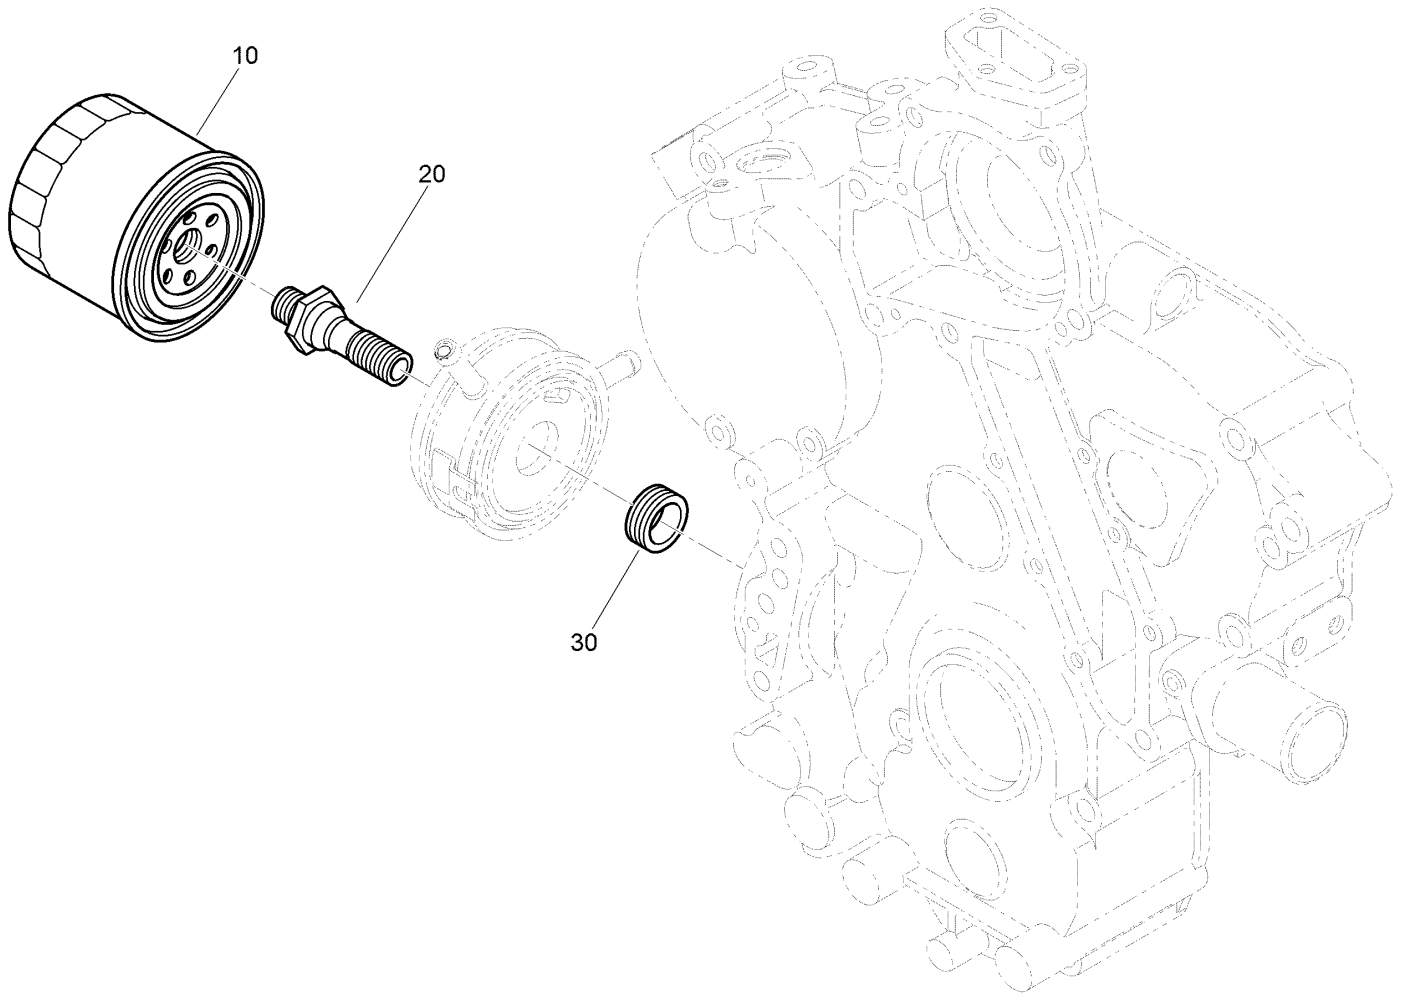

Oil Filter Cartridge Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	104-5169	1	Filter-Oil
20	139-9641	1	Connector
30	139-9668	1	Collar

 
Main Bearing Case Assembly

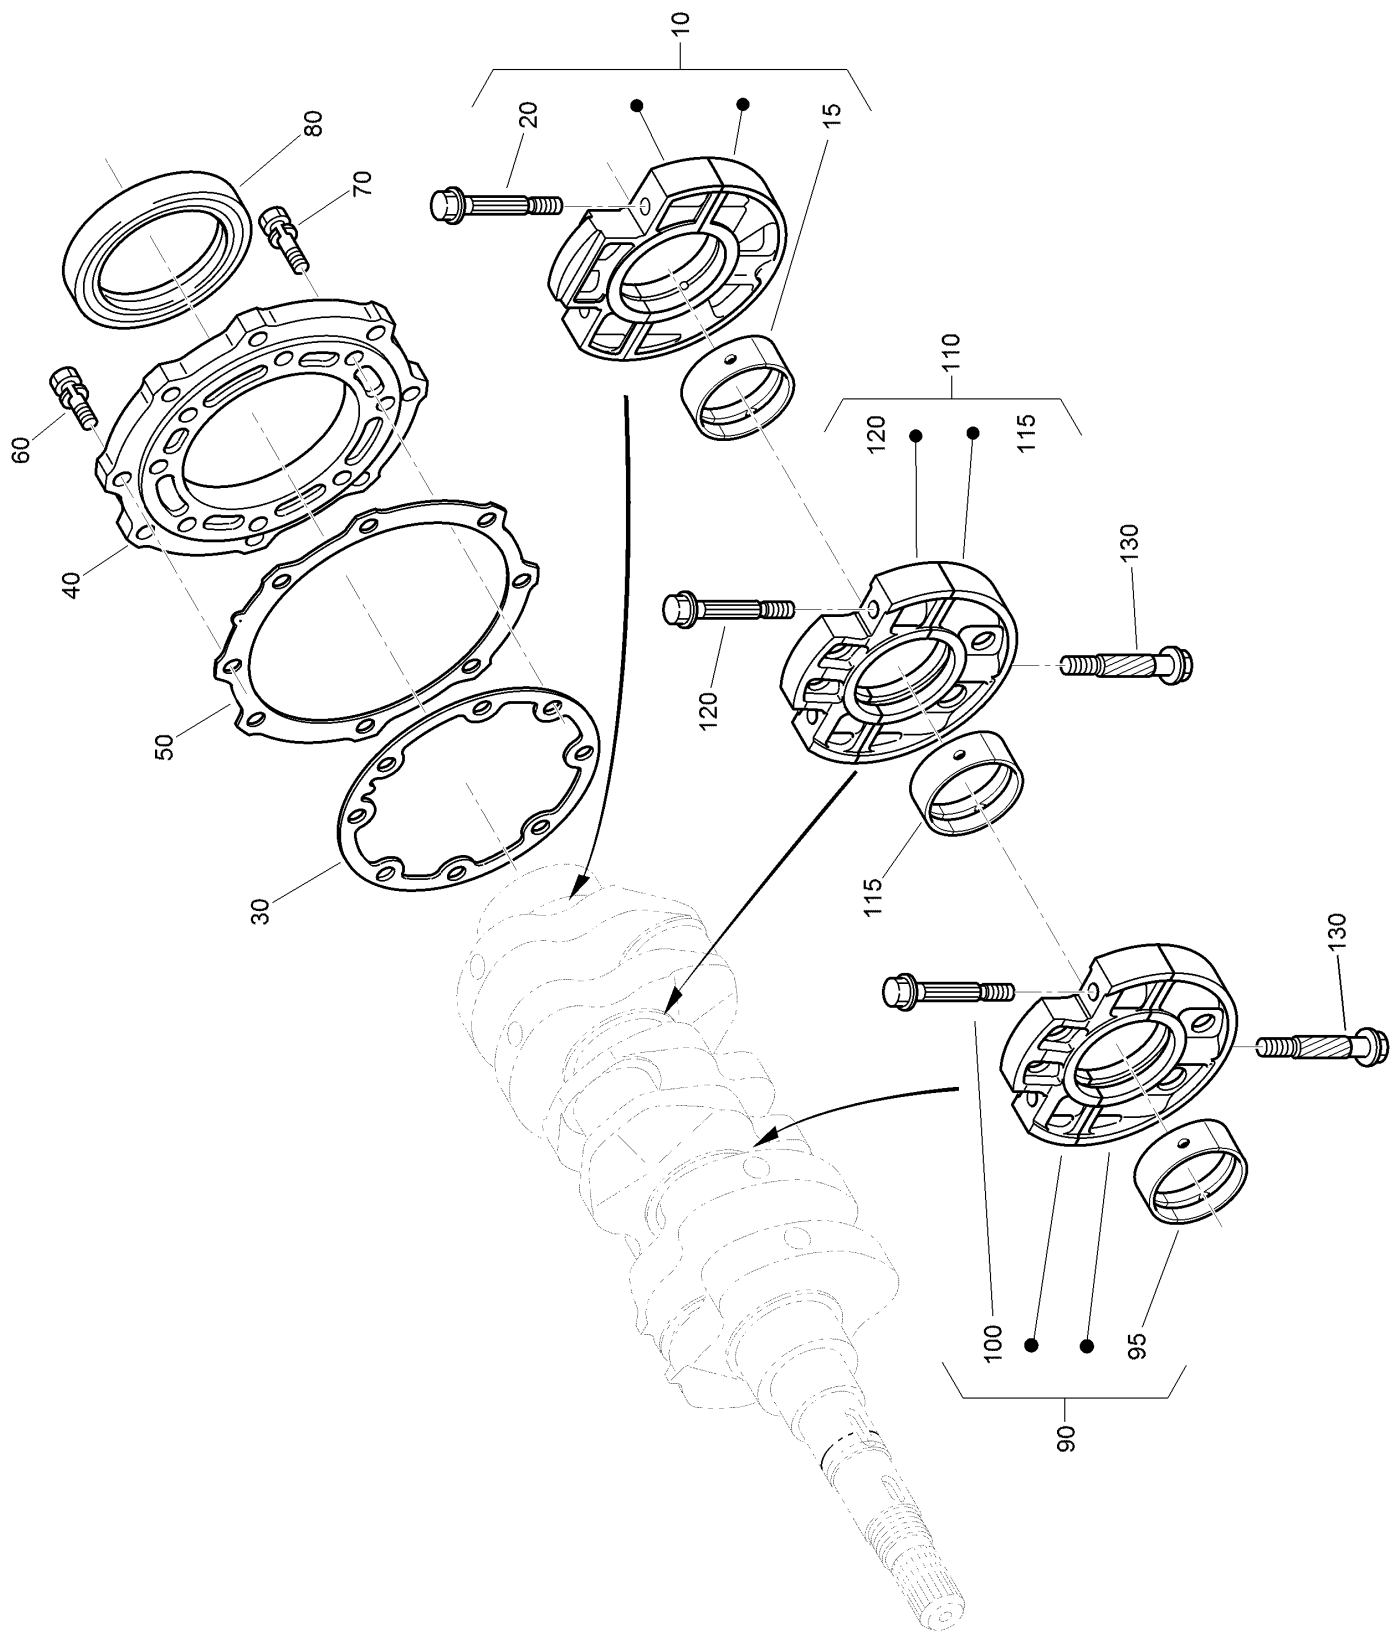

Main Bearing Case Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9610	1	Wheel Bearing Case ASM	80	139-9542	1	Seal-Oil
10	139-9798	3	Piston (05)	90	139-9606	1	Case-Bearing, Main
15	139-9614	1	Metal-Crankshaft	95	139-9614	1	Metal-Crankshaft
15	108-7068	1	Metal-Crankshaft (-0.20MM)	95	108-7068	1	Metal-Crankshaft (-0.20MM)
15	108-7069	1	Metal-Crankshaft (-0.40MM)	95	108-7069	1	Metal-Crankshaft (-0.40MM)
20	108-7066	2	Bolt-Case, Bearing	100	108-7066	2	Bolt-Case, Bearing
30	98-7435	1	Gasket-Case, Bearing	110	139-9607	1	Main Bearing Case ASM
40	139-9659	1	Cover-Case, Bearing	115	139-9614	1	Metal-Crankshaft
50	98-7437	1	Gasket-Case Cover, Bearing	115	108-7068	1	Metal-Crankshaft (-0.20MM)
60	98-7438	8	Bolt	115	108-7069	1	Metal-Crankshaft (-0.40MM)
70	98-7439	8	Bolt	120	108-7066	2	Bolt-Case, Bearing
				130	98-7444	2	Bolt-Case, Bearing

 
Piston and Crankshaft Assembly

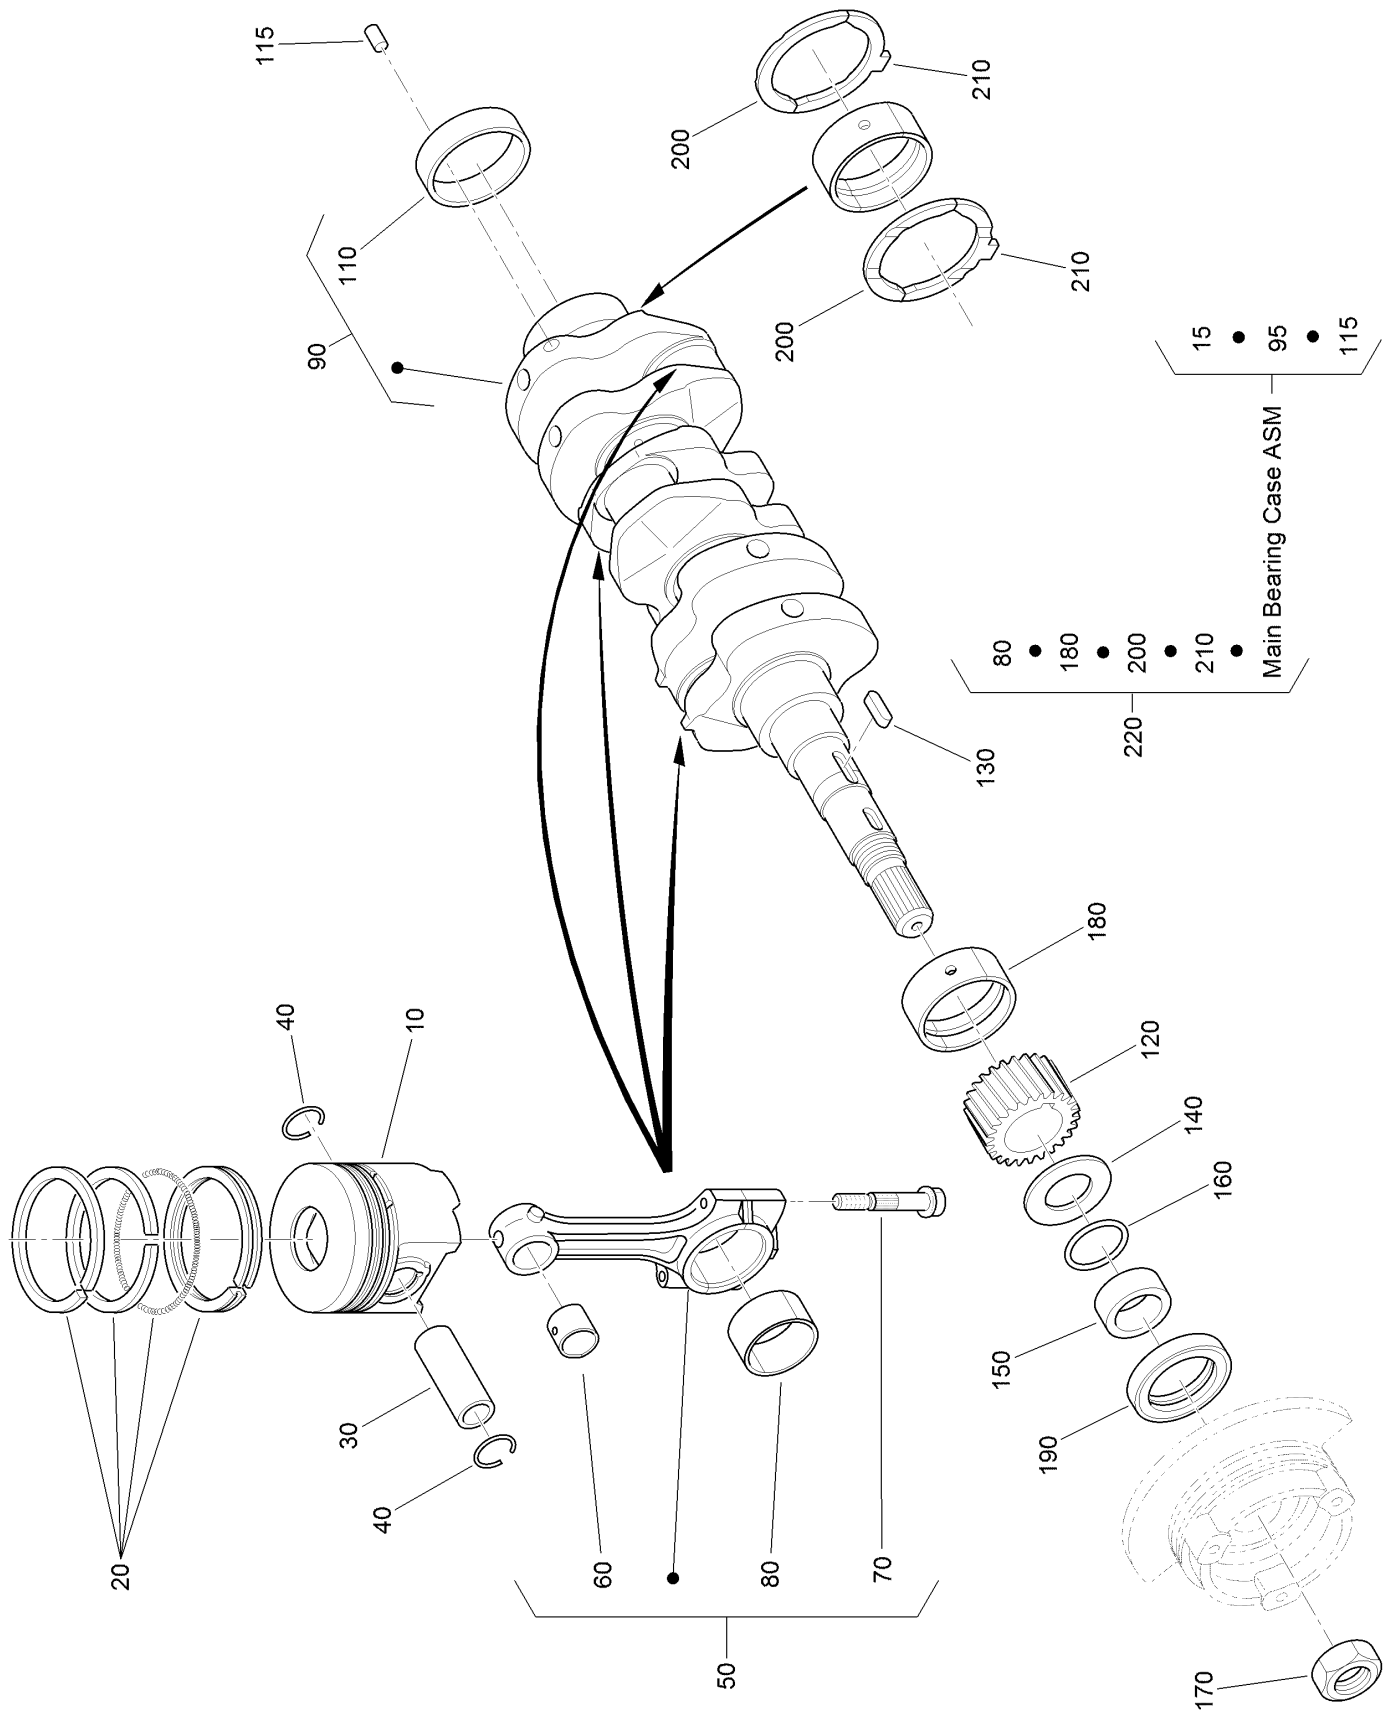

Piston and Crankshaft Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9799	3	Piston (05)	150	98-7477	1	Collar-Crankshaft
20	139-9674	3	Piston Ring ASM	160	98-7478	1	O-Ring
20	139-9675	3	Piston Ring ASM	170	98-7479	1	Nut-Crankshaft
30	139-9594	3	Pin-Piston	180	139-9613	1	Metal-Crankshaft
40	139-9634	6	Circlip-Internal	180	108-7076	1	Metal-Crankshaft (-0.20MM)
50	130-1470	3	Connecting Rod ASM	180	108-7077	1	Metal-Crankshaft (-0.40MM)
60	139-9676	3	Bushing-Pin, Piston	190	139-4709	1	Seal-Oil
70	139-9694	6	Bolt-Rod, Connecting	200	139-9615	2	Metal-Side
80	139-9575	3	Metal-Crankpin	200	108-7079	2	Metal-Side (+0.20MM)
80	139-9576	3	Metal-Crankpin (02)	200	108-7080	2	Metal-Side (+0.40MM)
80	139-9577	3	Metal-Crankpin (04)	210	139-9616	2	Metal-Side
90	139-9653	1	Crankshaft	210	108-7082	2	Metal-Side (+0.20MM)
110	98-7474	1	Sleeve-Crankshaft	210	108-7083	2	Metal-Side (+0.40MM)
115	139-9595	1	Pin-Straight	220	139-9655	1	Engine Metal Kit
120	139-4712	1	Gear-Crankshaft	220	108-7076	1	Metal-Crankshaft (-0.20MM)
130	115-8552	1	Key-Feather	220	139-9656	1	Engine Metal Kit
140	98-7476	1	Slinger-Oil				

 
Cam Shaft and Idle Gear Assembly

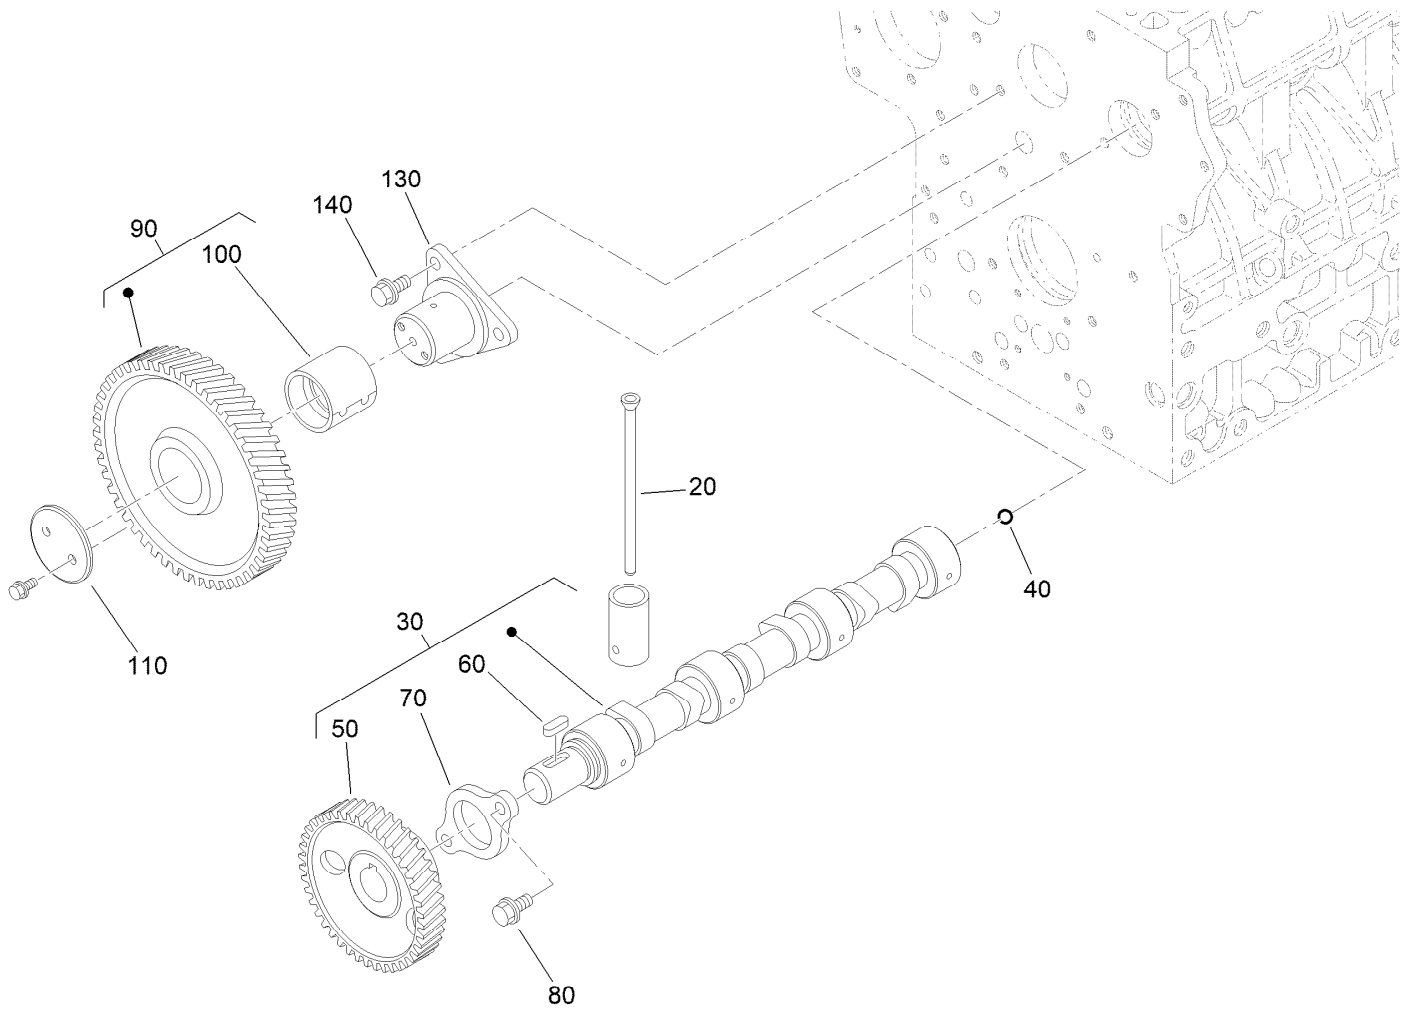

Cam Shaft and Idle Gear Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
20	139-9611	6	Rod-Push	80	130-1159	2	Bolt-Flange
30	139-9652	1	Camshaft ASM	90	139-4710	1	Gear-Idle
40	110-3729	1	Ball	100	130-1559	1	Bushing-Gear, Idle
50	139-9612	1	Gear-Camshaft	110	130-1556	1	Collar-Gear, Idle
60	98-7451	1	Key-Feather	130	130-1332	1	Shaft-Gear, Idle
70	139-9527	1	Stopper-Camshaft	140	130-1159	3	Bolt-Flange

 
Flywheel Assembly

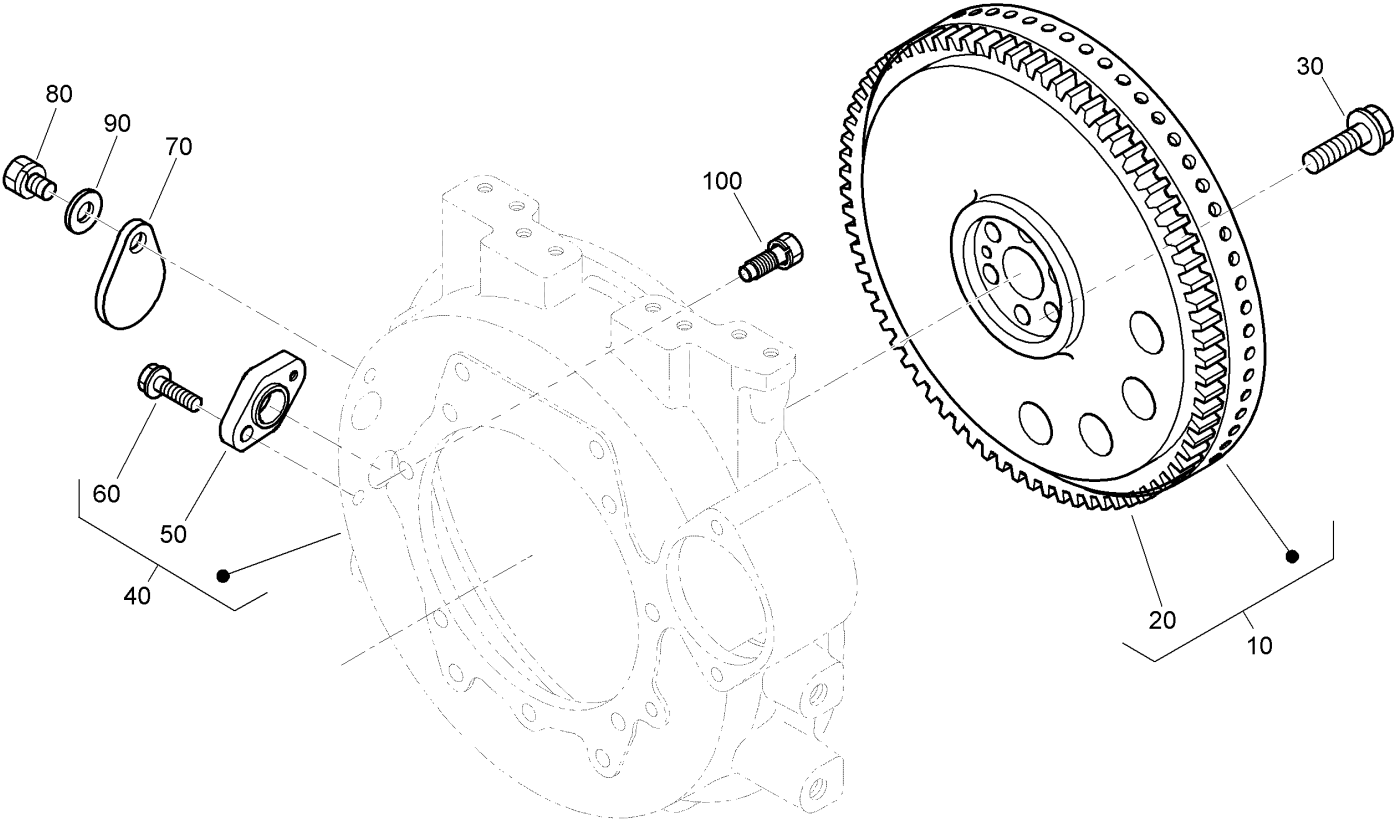

Flywheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9763	1	Flywheel	60	115-8583	1	Bolt-Flange
20	139-9597	1	Gear-Ring	70	100-2177	1	Cover
30	139-9671	6	Bolt-Flywheel	80	98-7884	1	Bolt
40	139-9728	1	Housing-Flywheel	90	131-9579	1	Washer-Spring, Lock
50	139-9743	1	Bracket-Sensor	100	139-9541	11	Bolt

 Fuel Pump (Mechanical) Assembly

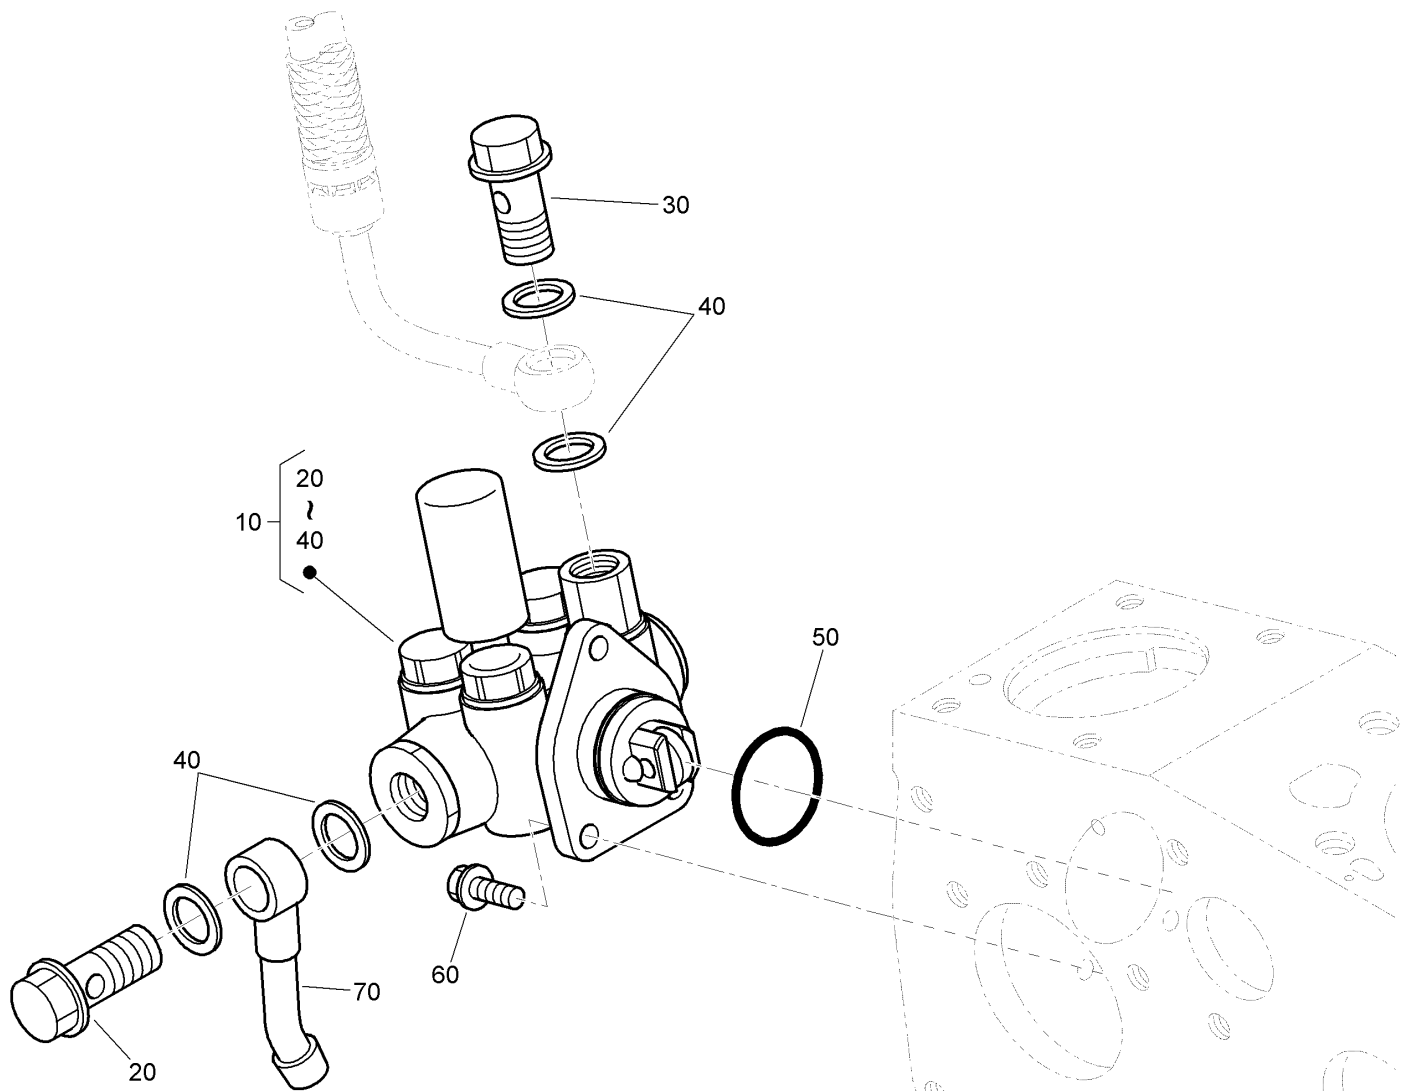


Fuel Pump (Mechanical) Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9740	1	Fuel Pump ASM
20	139-9723	1	Bolt-Joint
30	139-9724	1	Bolt-Joint
40	139-9705	4	Gasket-Joint, Pipe

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
50	139-9581	1	O-Ring
60	127-0403	3	Bolt-Flange
70	139-9530	1	Pipe

 
Fuel Camshaft Assembly

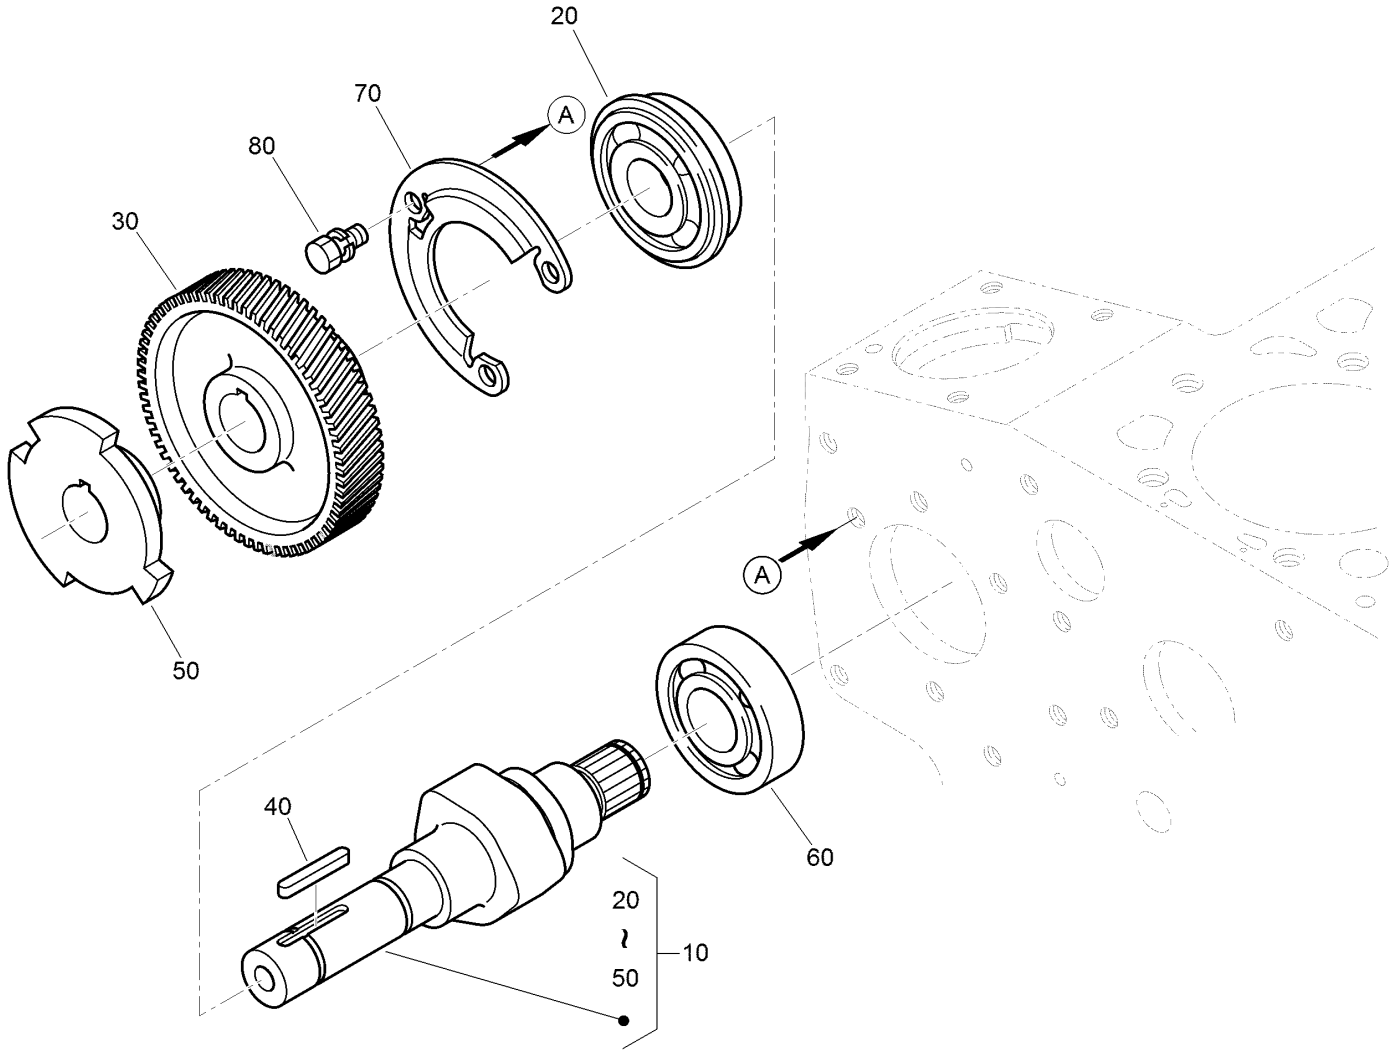

Fuel Camshaft Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9762	1	Fuel Camshaft ASM	50	139-9732	1	Wheel
20	139-9677	1	Bearing-Ball	60	139-9664	1	Bearing-Ball
30	139-9708	1	Gear	70	139-9701	1	Stopper-Camshaft, Fuel
40	139-9513	1	Key-Feather	80	AU126123A1	3	Bolt

 
Supply Pump Assembly

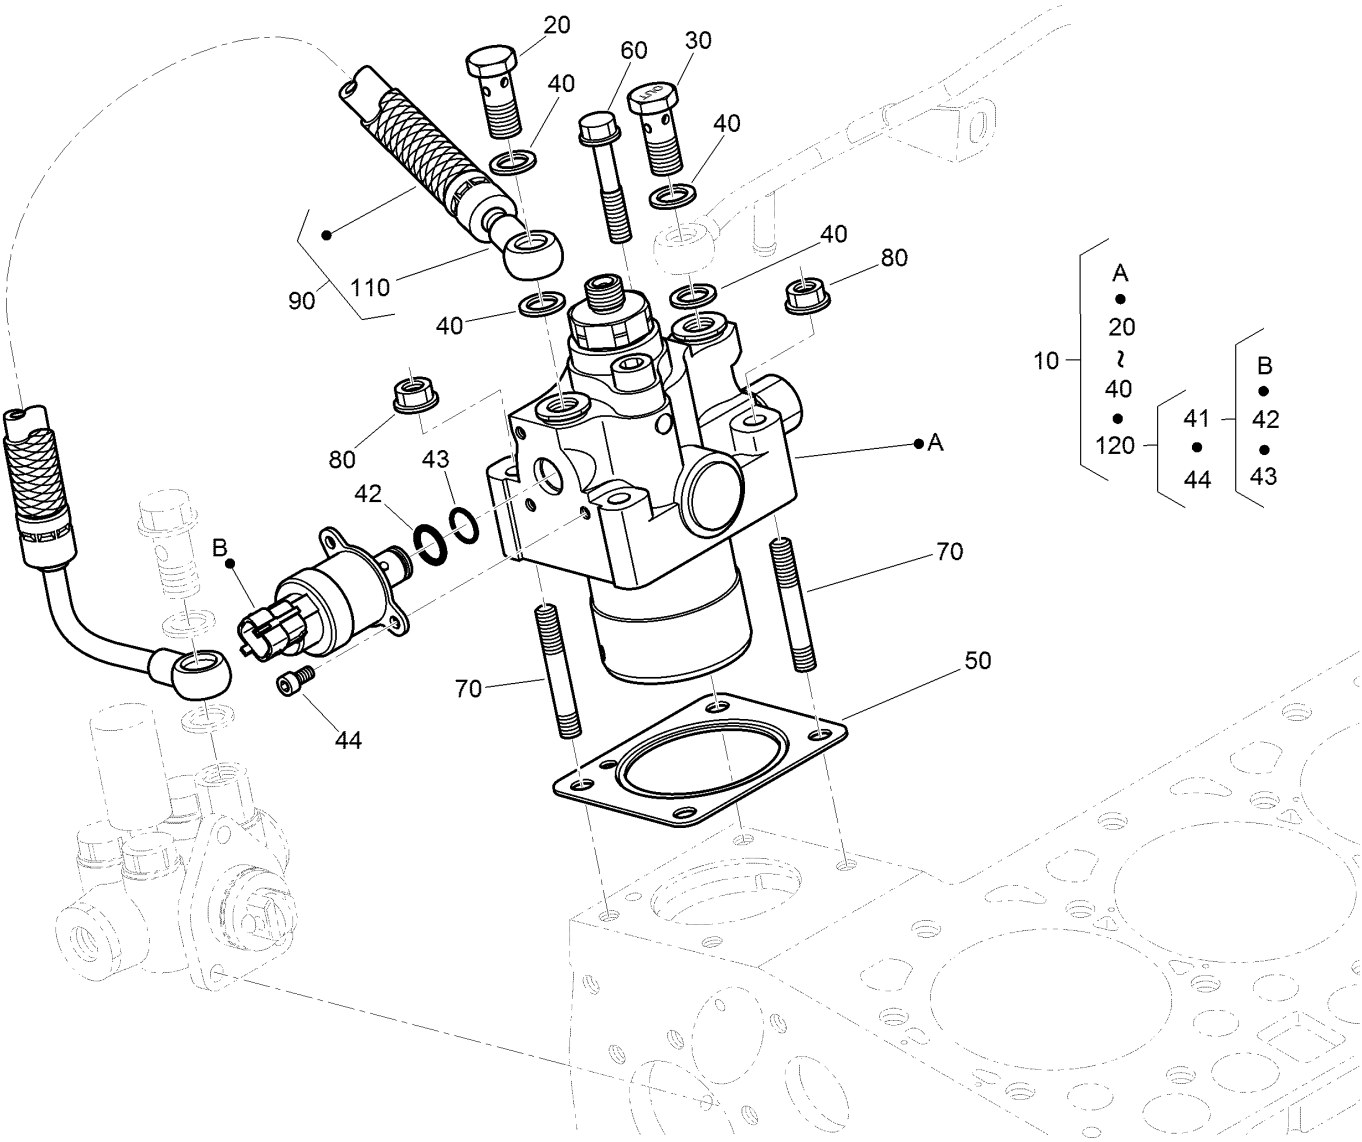

Supply Pump Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9738	1	Supply Pump ASM	50	139-9709	1	Gasket-Pump
20	139-9721	1	Bolt-Joint	60	139-9717	2	Bolt-Flange
30	139-9722	1	Bolt-Joint	70	139-9719	2	Stud
40	139-9707	4	Gasket	80	112-2492	2	Nut-Flange
41	139-9739	1	Valve ASM	90	139-4707	1	Fuel Hose ASM
42	139-9725	1	O-Ring (Scv 1)	110	139-9632	1	Fuel Hose
43	139-9726	1	O-Ring (Scv 2)	120	139-9745	1	Valve Kit
44	139-9718	3	Bolt				

 Fuel Filter Assembly

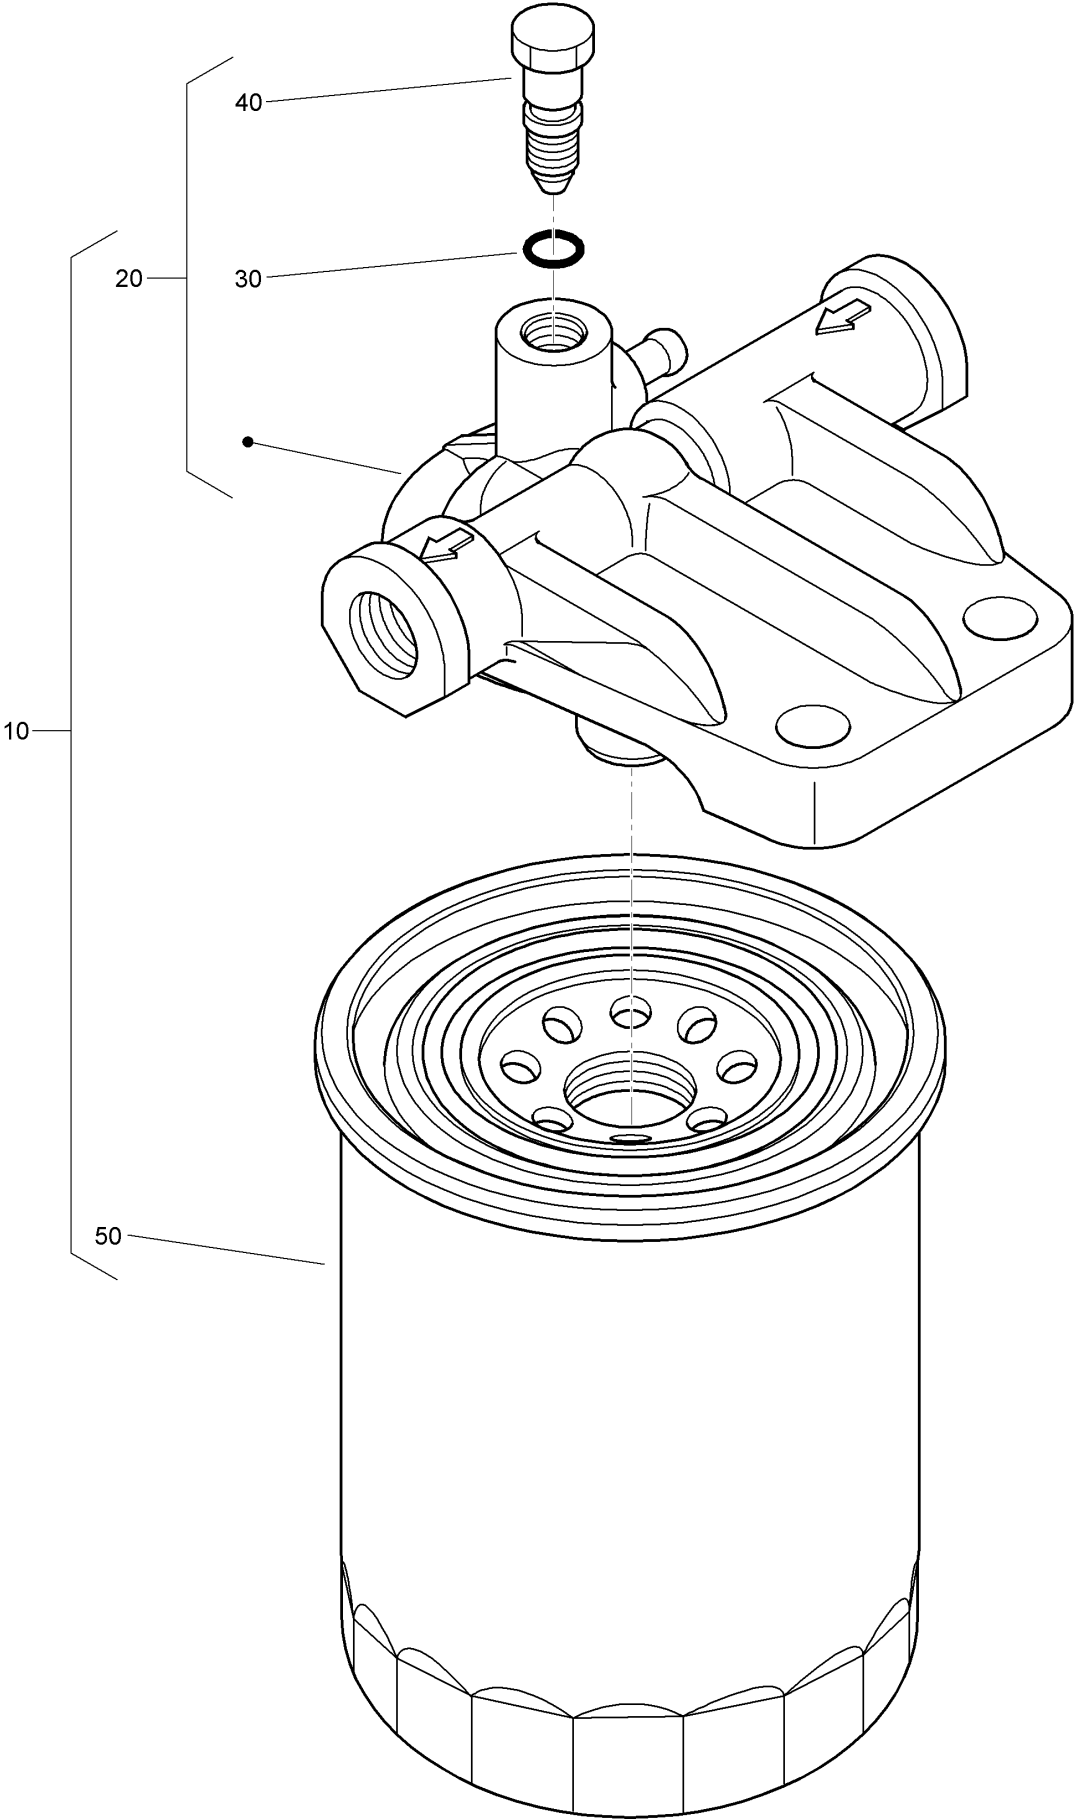


Fuel Filter Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	136-4733	1	Filter-Fuel
20	139-9703	1	Base-Filter
30	139-9706	1	O-Ring

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
40	139-4720	1	Plug
50	136-4891	1	Cartridge-Filter, Fuel

 
Separator Assembly

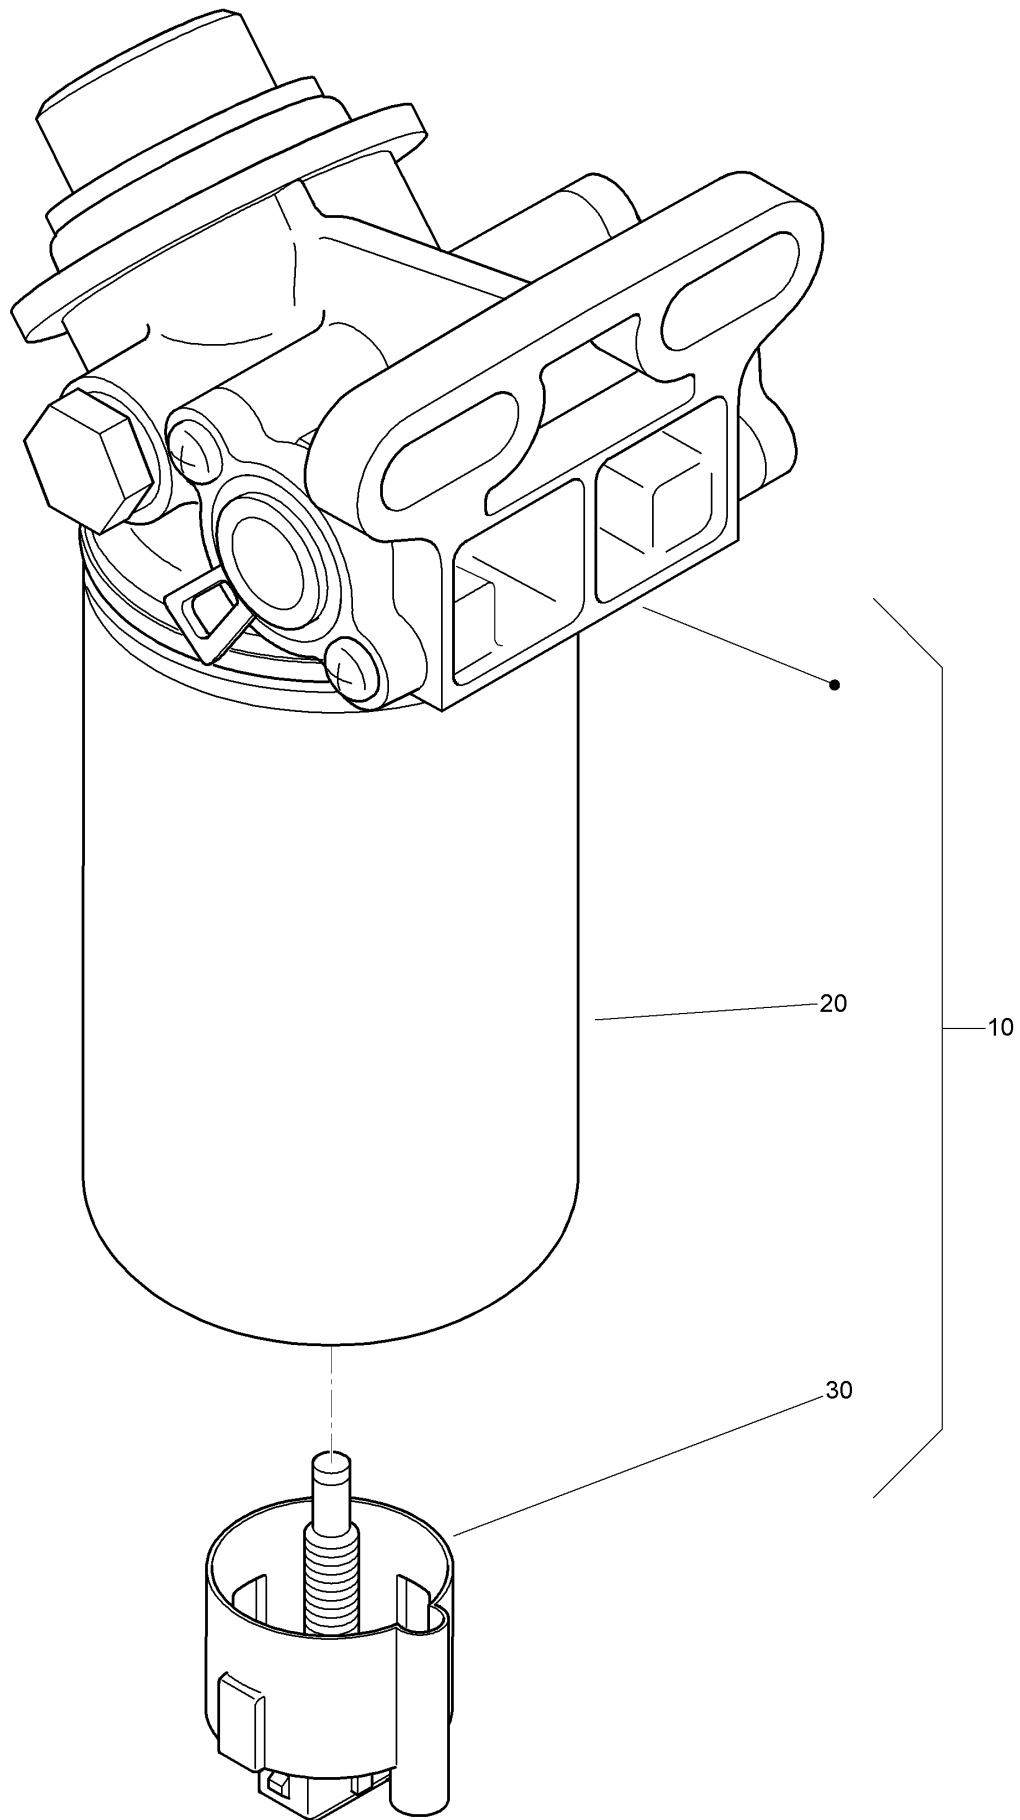

Separator Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	136-4734	1	Filter-Seperator, Water
20	136-4892	1	Filter-Separator
30	139-9684	1	Switch ASM

 Injector and Glow Plug Assembly

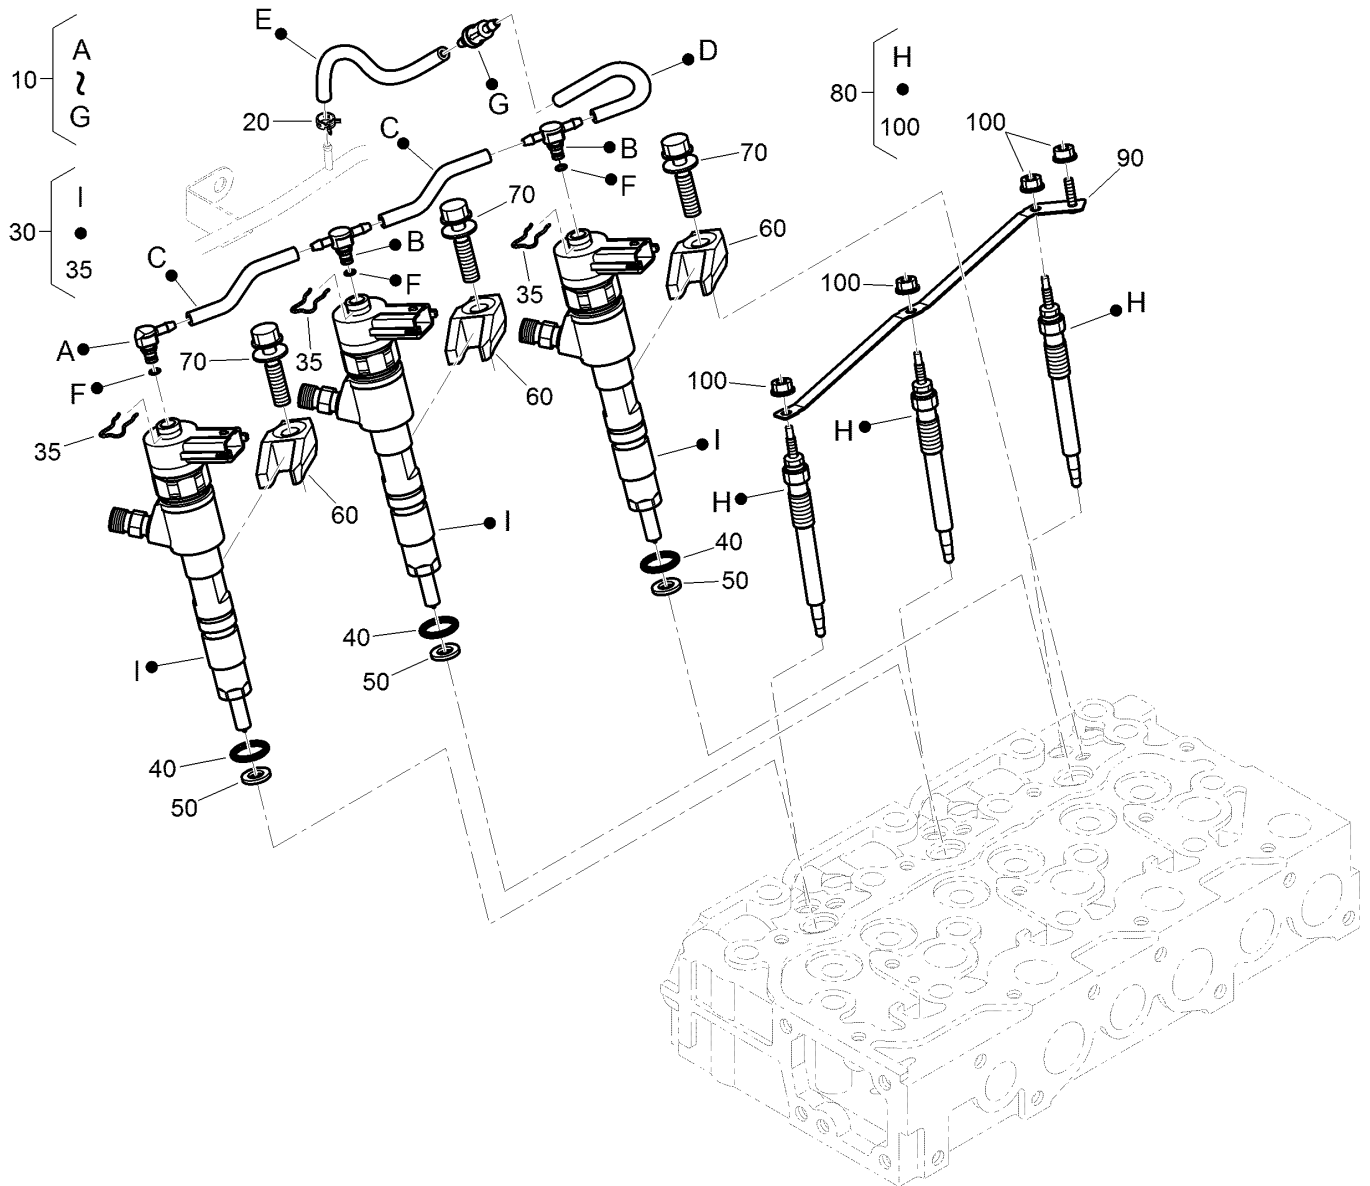


Injector and Glow Plug Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9764	1	Over Flow Tube ASM
20	139-9514	1	Clamp-Hose
30	139-4700	3	Injector ASM
35	139-9702	3	Clamp
40	139-9712	3	O-Ring
50	139-9651	3	Packing

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
60	139-9710	3	Clamp
70	139-9711	3	Bolt ASM
80	139-9662	3	Plug-Glow
90	139-9769	1	Cord-Plug, Glow
100	99-8377	4	Nut-Flange

 
Injection Pipe Assembly

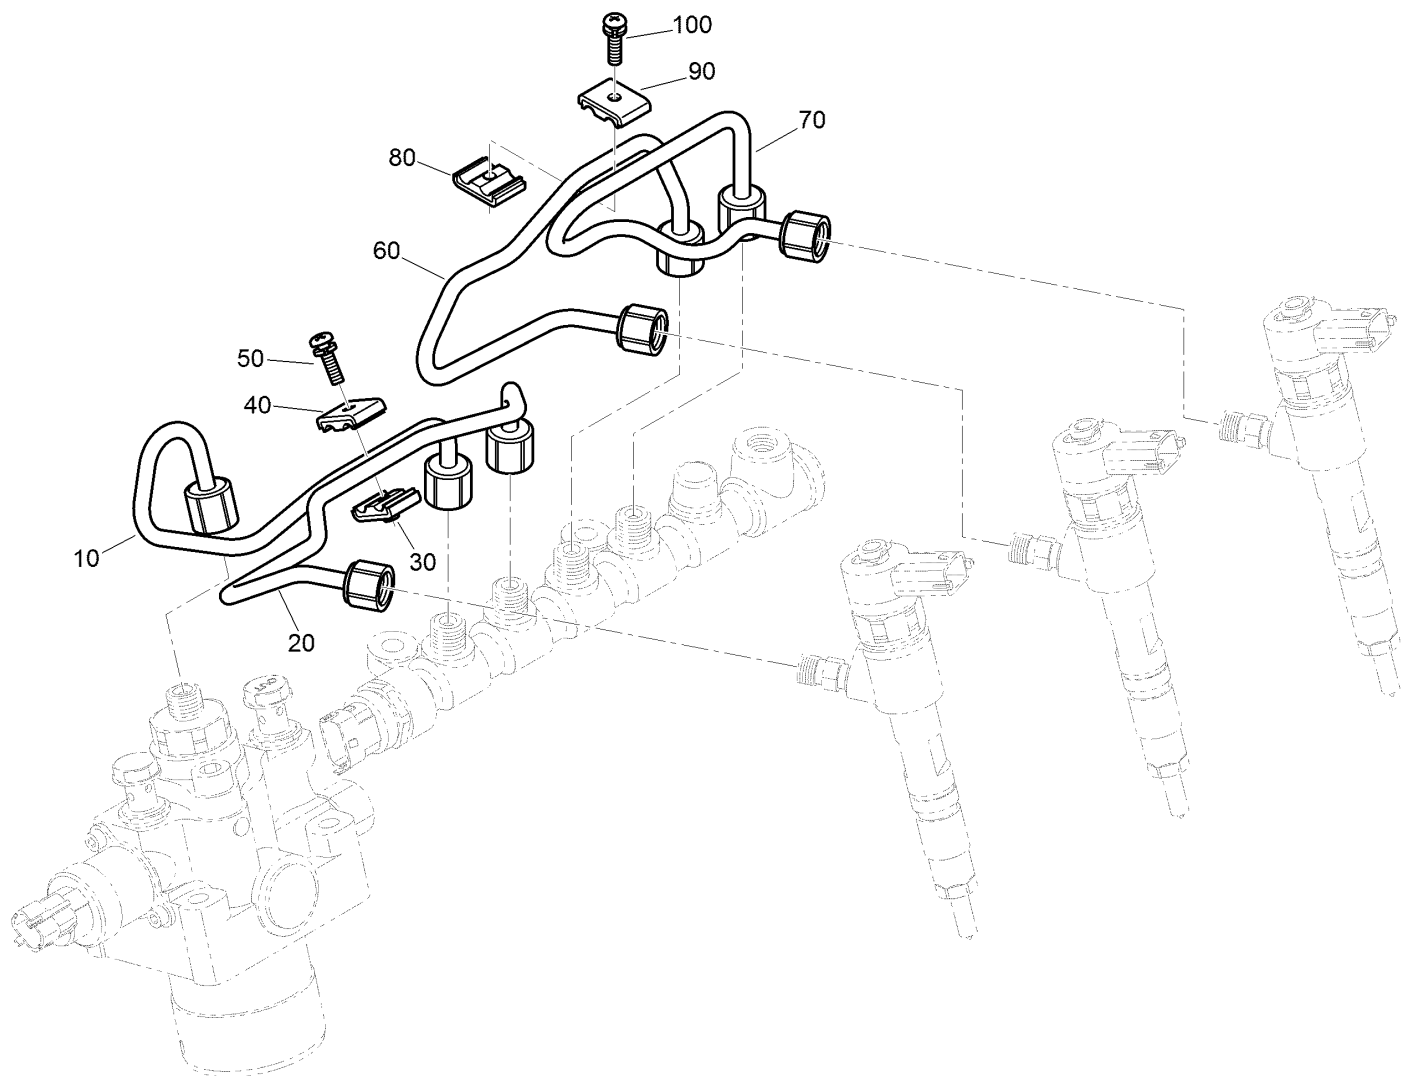

Injection Pipe Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9741	1	Pipe	60	139-9714	1	Pipe-Injection
20	139-9713	1	Pipe-Injection	70	139-9715	1	Pipe-Injection
30	139-9535	1	Clamp-Pipe	80	139-9535	1	Clamp-Pipe
40	139-9536	1	Clamp-Pipe	90	139-9536	1	Clamp-Pipe
50	98-7684	1	Screw (W/Washer)	100	98-7684	1	Screw (W/Washer)

 
Fuel Pump (Electrical) Assembly

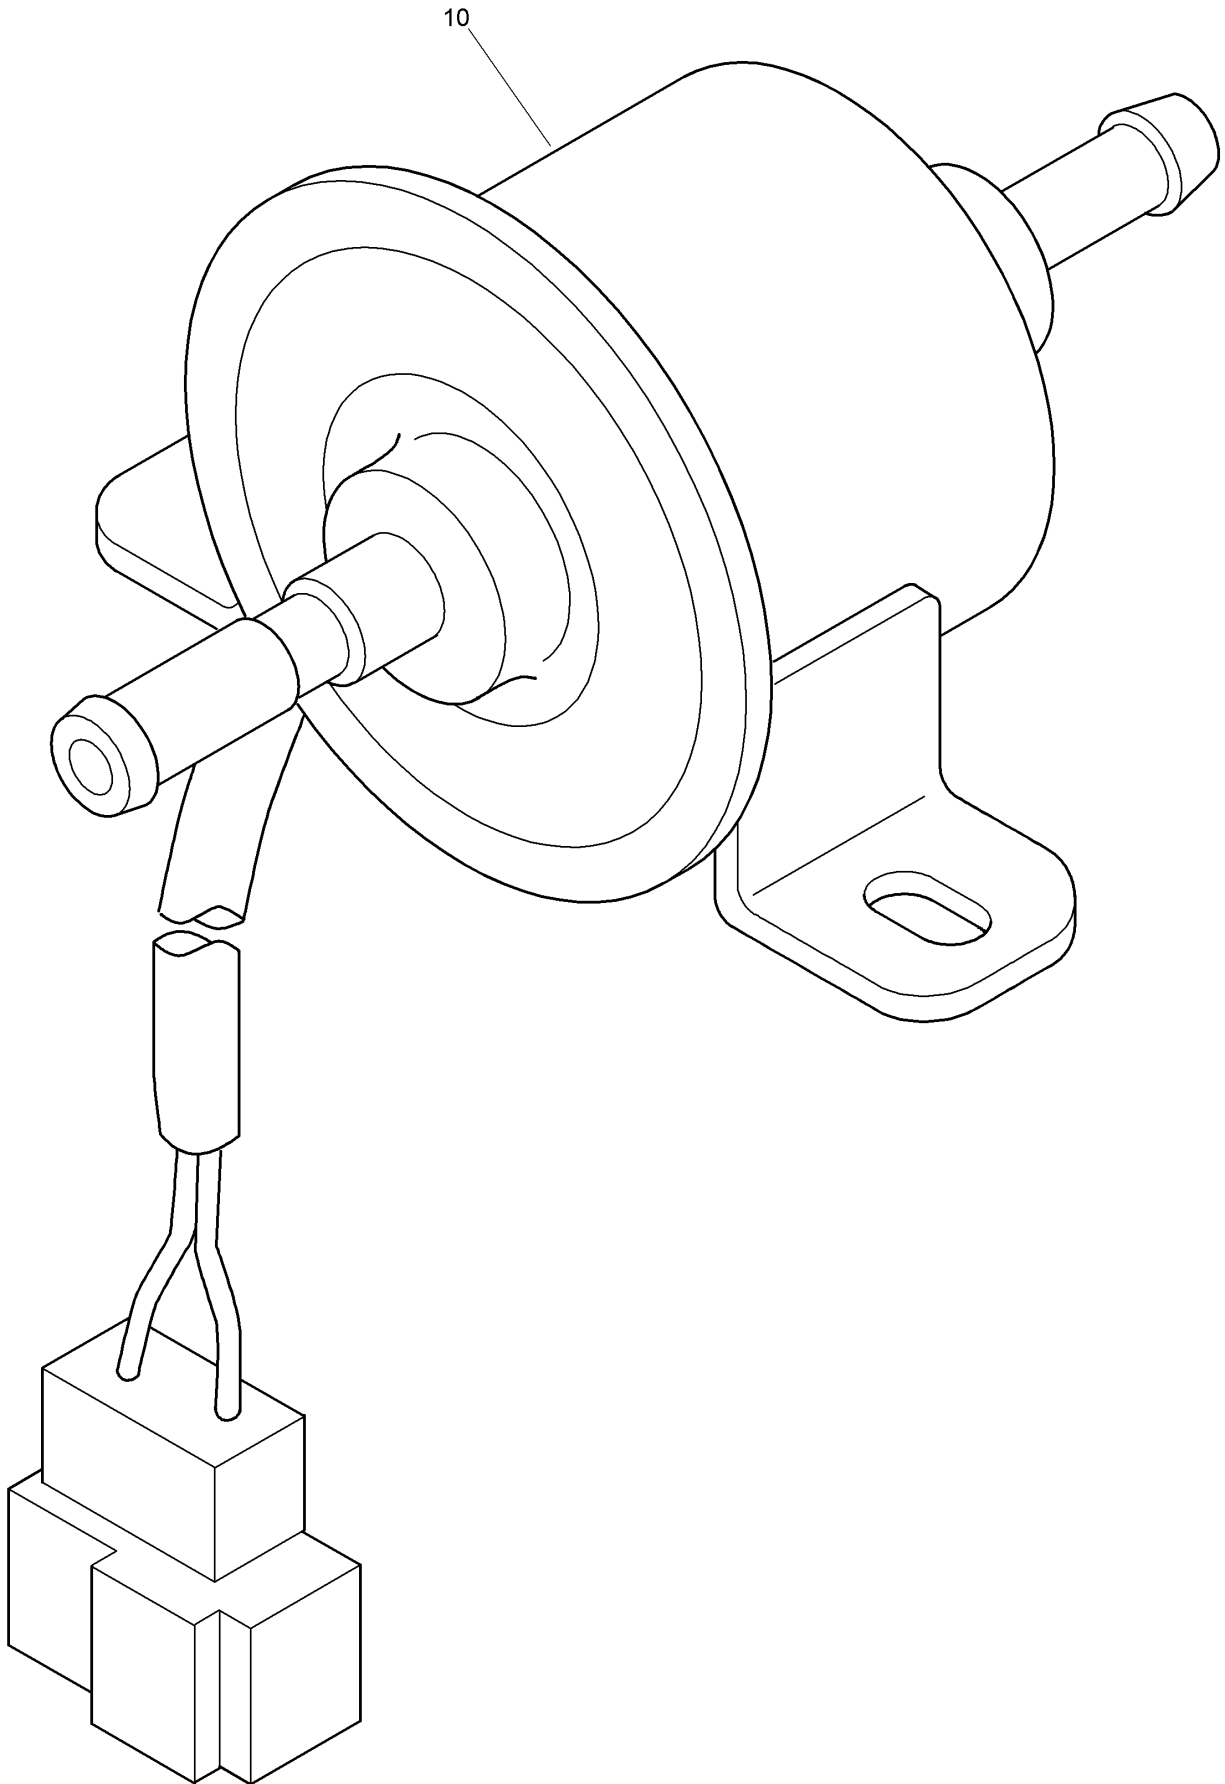

Fuel Pump (Electrical) Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	136-4736	1	Pump-Fuel

 Common Rail Assembly

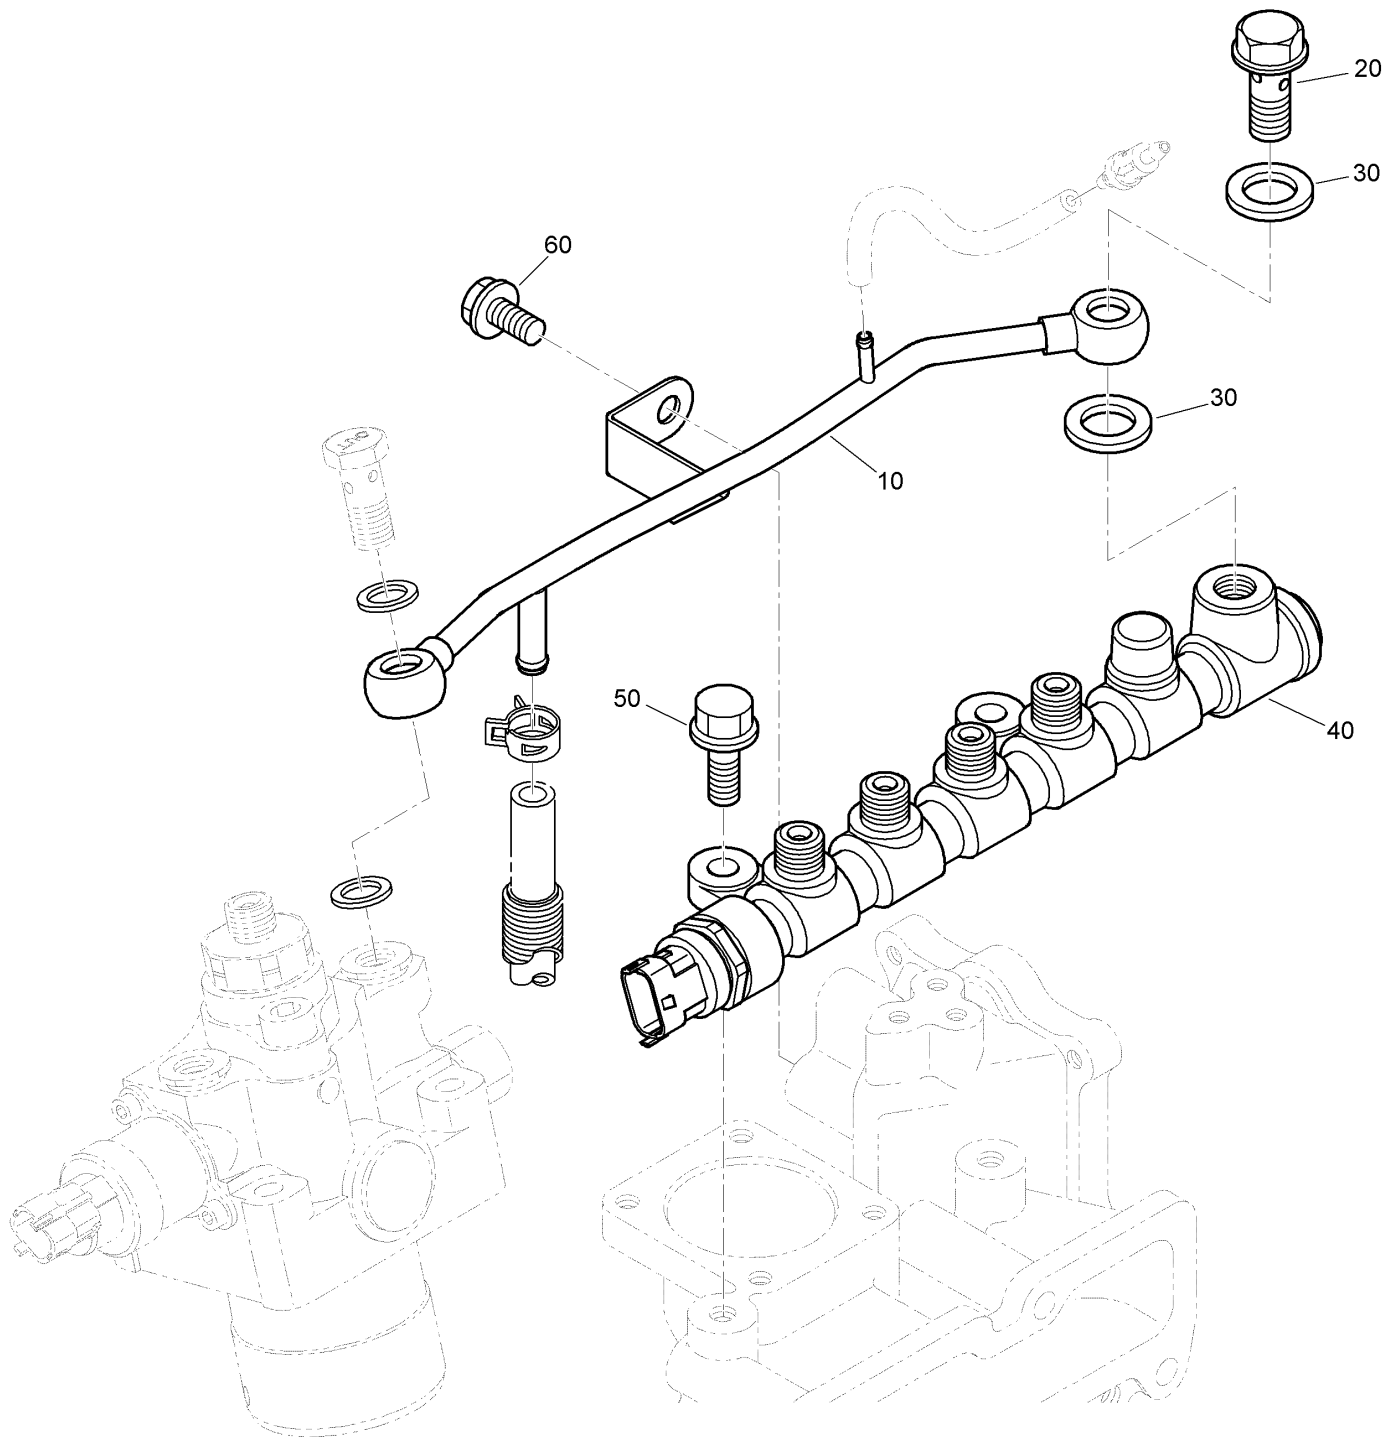


Common Rail Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9765	1	Pipe-Over Flow, Water
20	139-9720	1	Bolt-Joint
30	139-9707	2	Gasket

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
40	139-9766	1	Rail ASM
50	139-9502	2	Bolt-Flange
60	130-1159	1	Bolt-Flange

 Alternator and Pulley Assembly

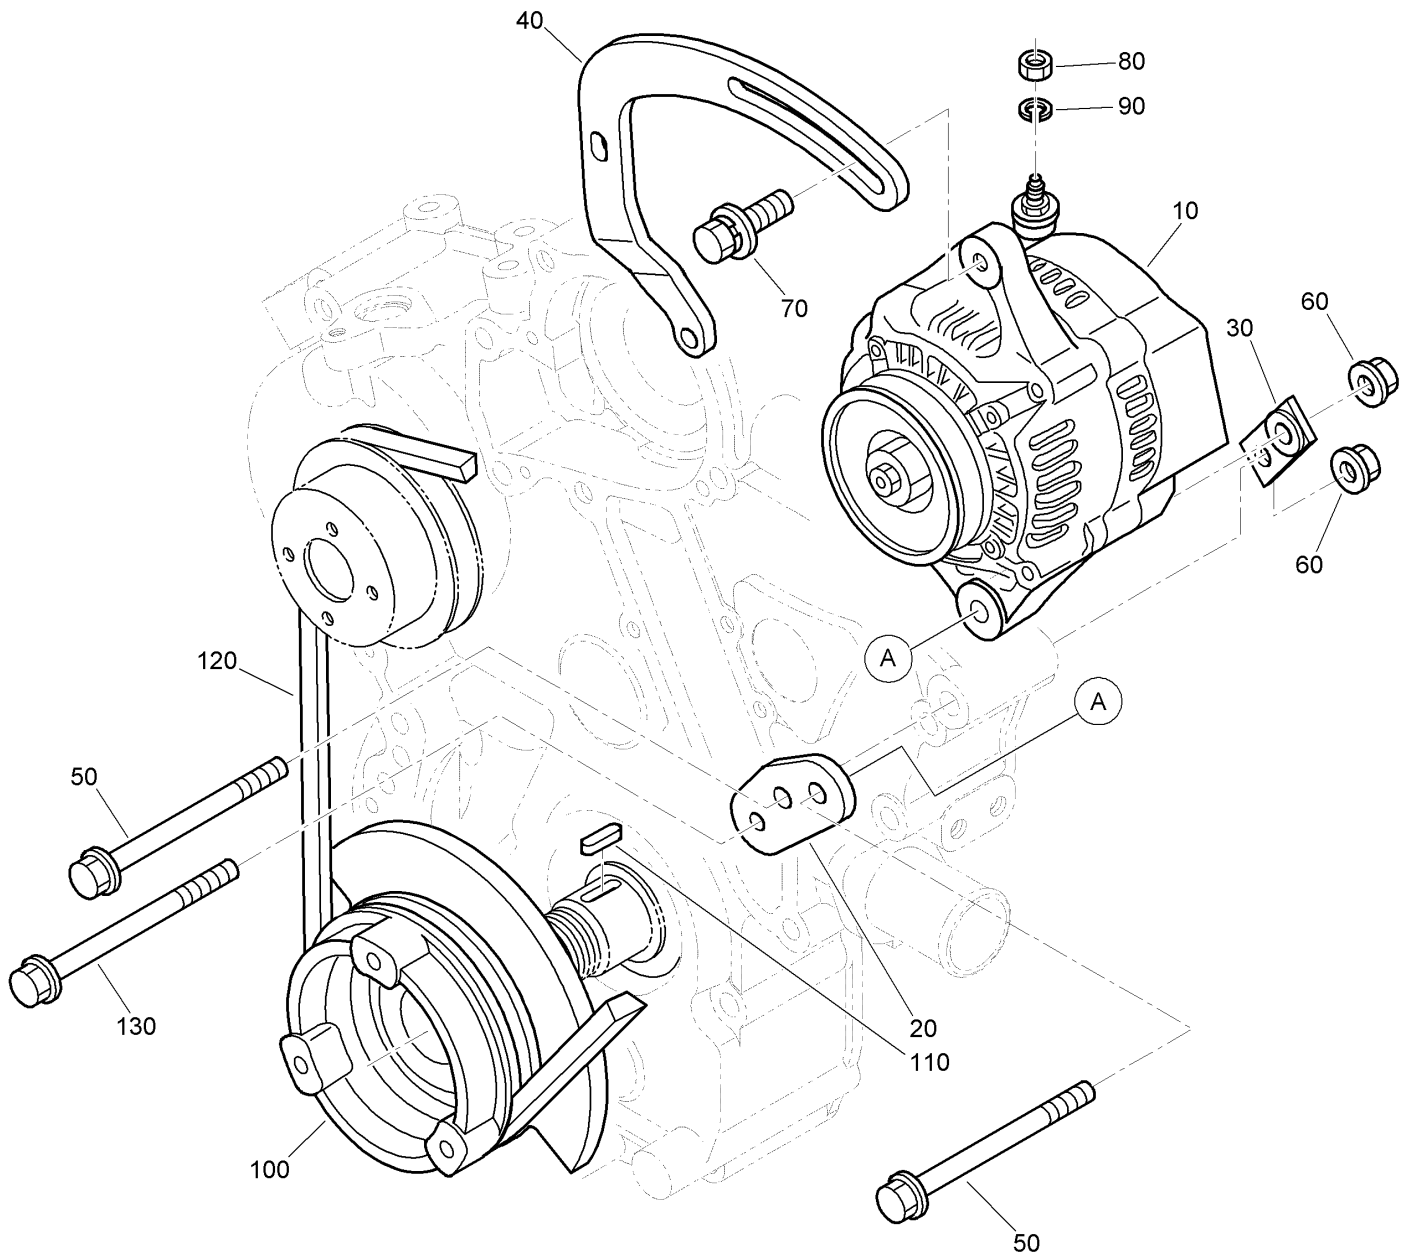


Alternator and Pulley Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9582	1	Alternator ASM
20	139-9630	1	Support-Alternator
30	139-9683	1	Stay-Alternator
40	139-9631	1	Stay-Dynamo
50	139-9506	2	Bolt-Flange
60	120-5822	2	Nut-Flange
70	108-7088	1	Bolt

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
80	98-7572	1	Nut
90	98-7699	1	Washer-Spring
100	139-9657	1	Pulley-Drive, Fan
110	98-7451	1	Key-Feather
120	139-9635	1	Belt-Fan
130	139-9504	1	Bolt-Flange

 
Alternator Components Assembly

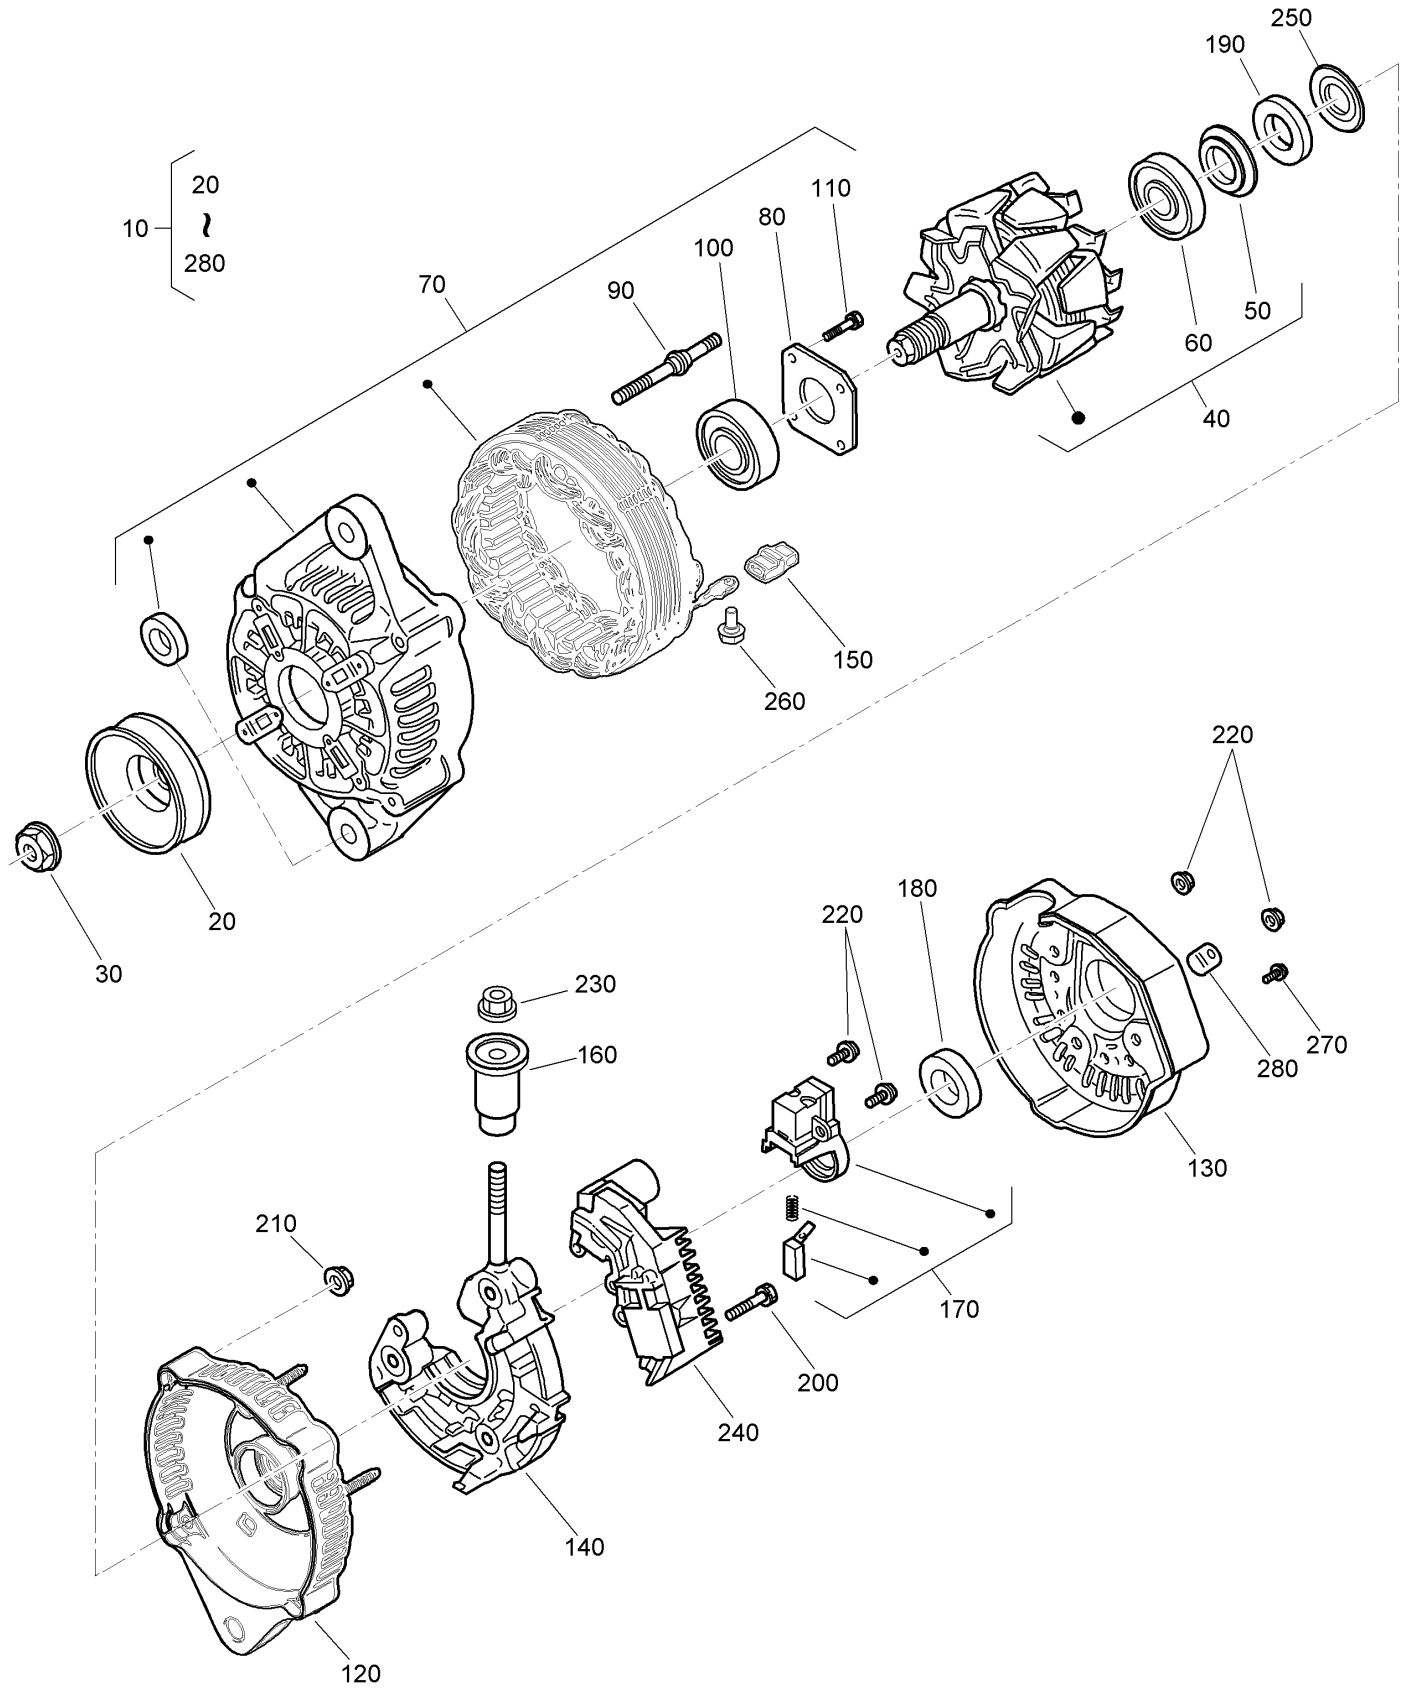

Alternator Components Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9582	1	Alternator ASM	150	139-9552	4	Bushing-Insulation
20	139-9584	1	Pulley-Alternator	160	139-9588	1	Bushing-Insulation
30	139-9545	1	Nut	170	139-9547	1	Holder-Brush
40	139-9585	1	Rotor ASM	180	139-9548	1	Ring-Seal
50	139-9537	1	Cover-Bearing	190	139-9549	1	Ring-Seal
60	139-4715	1	Bearing-Ball	200	139-9556	2	Screw-Head, Round
70	139-9583	1	Drive End Frame ASM	210	139-9538	7	Nut
80	139-9550	1	Plate-Retainer	220	139-9539	3	Screw-Head, Round
90	139-9544	4	Bolt-Through	230	139-9555	1	Nut
100	139-9551	1	Bearing-Ball	240	139-9589	1	Regulator ASM
110	139-9557	4	Bolt	250	139-9554	1	Washer
120	139-9546	1	Frame-End	260	139-9558	4	Screw-Head, Round
130	139-9586	1	Cover-End, Rear	270	139-9559	1	Screw-Head, Round
140	139-9587	1	Rectifier ASM	280	139-9553	1	Plate-Terminal

 Starter Installation Assembly

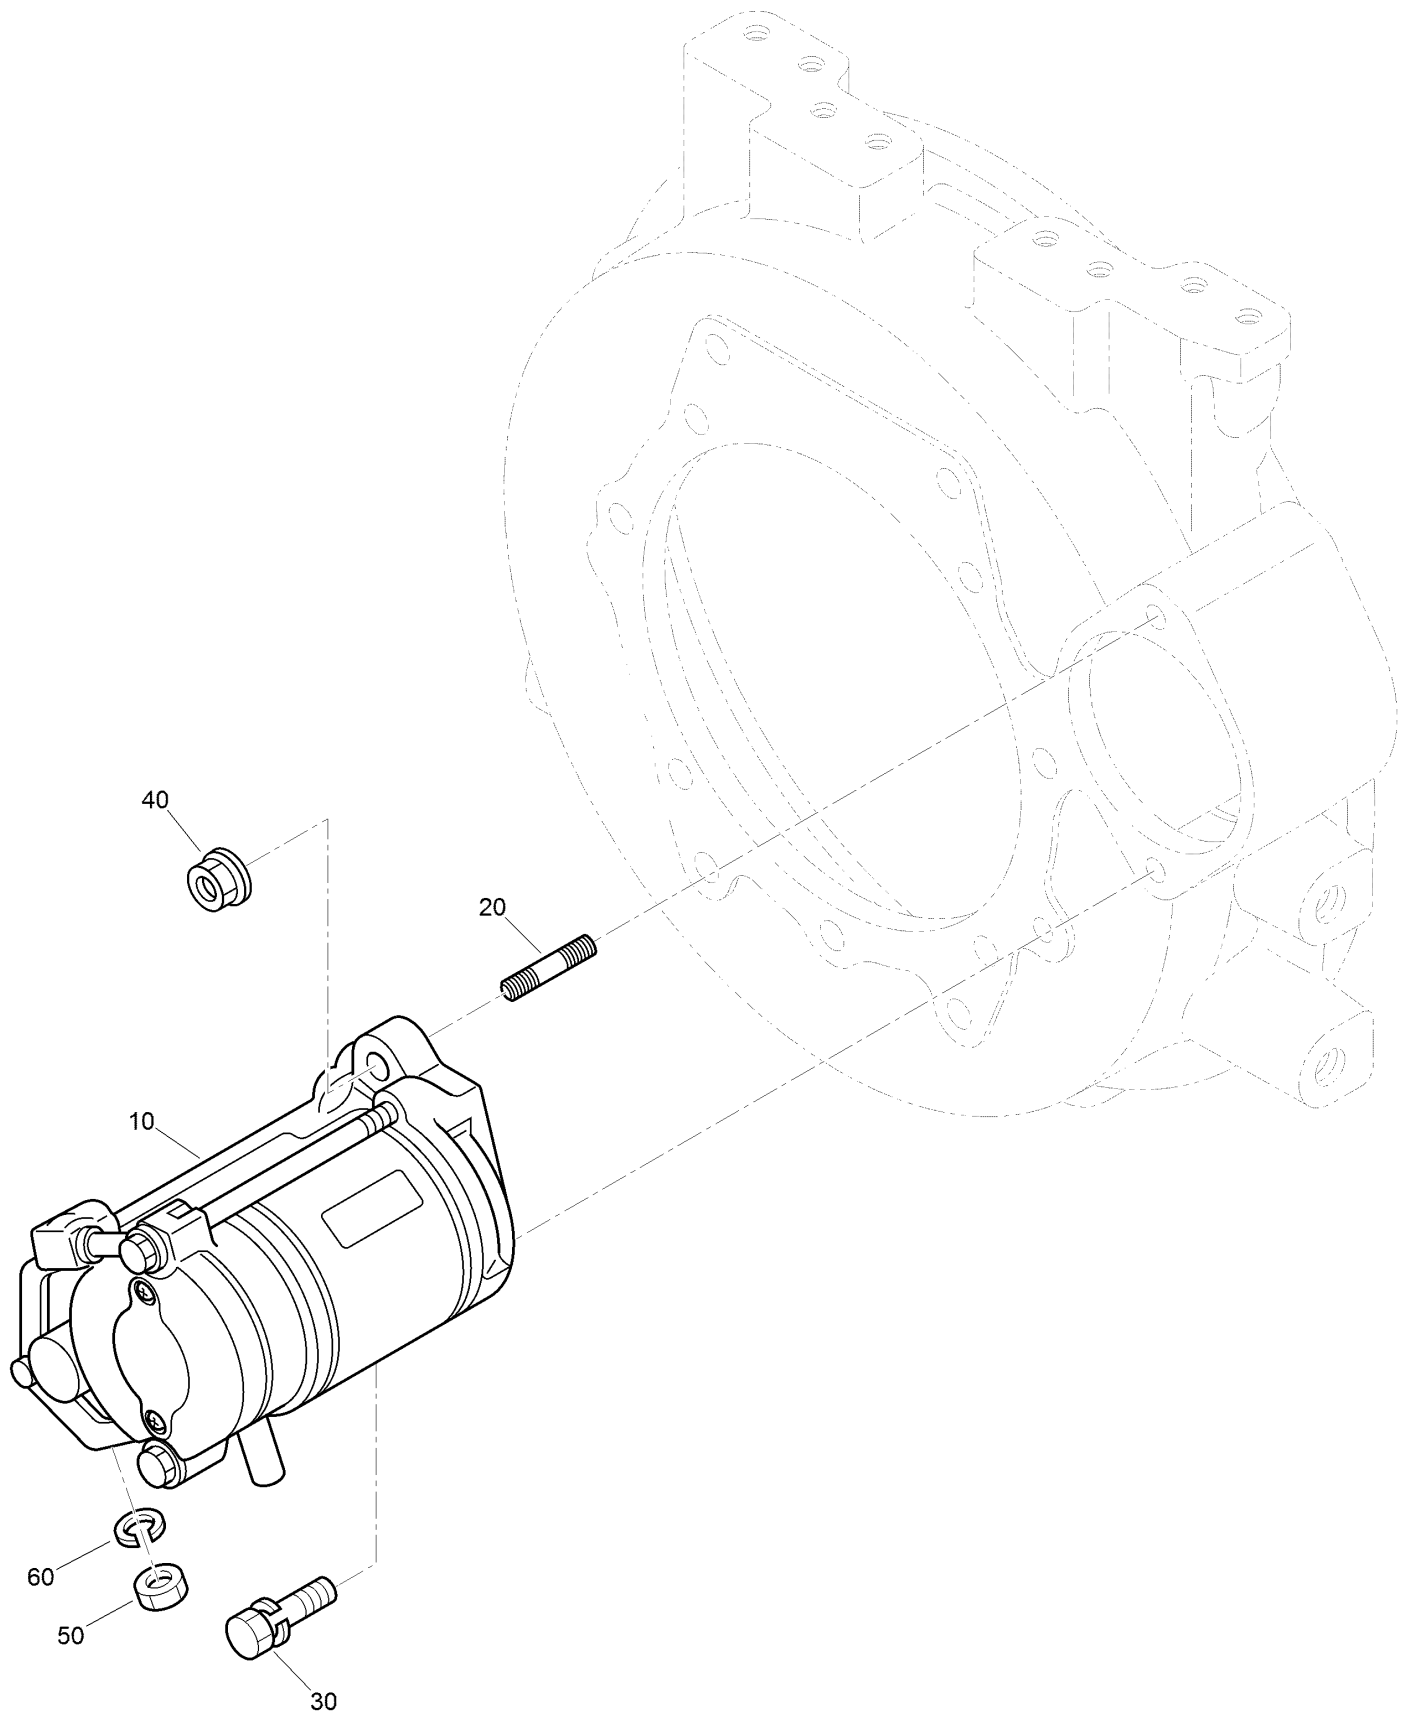


Starter Installation Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	130-1306	1	Starter ASM
20	139-9501	1	Bolt-Stud
30	98-7736	1	Bolt

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
40	120-5822	1	Nut-Flange
50	98-7739	1	Nut
60	131-9579	1	Washer-Spring, Lock

 
Starter (Component Parts) Assembly

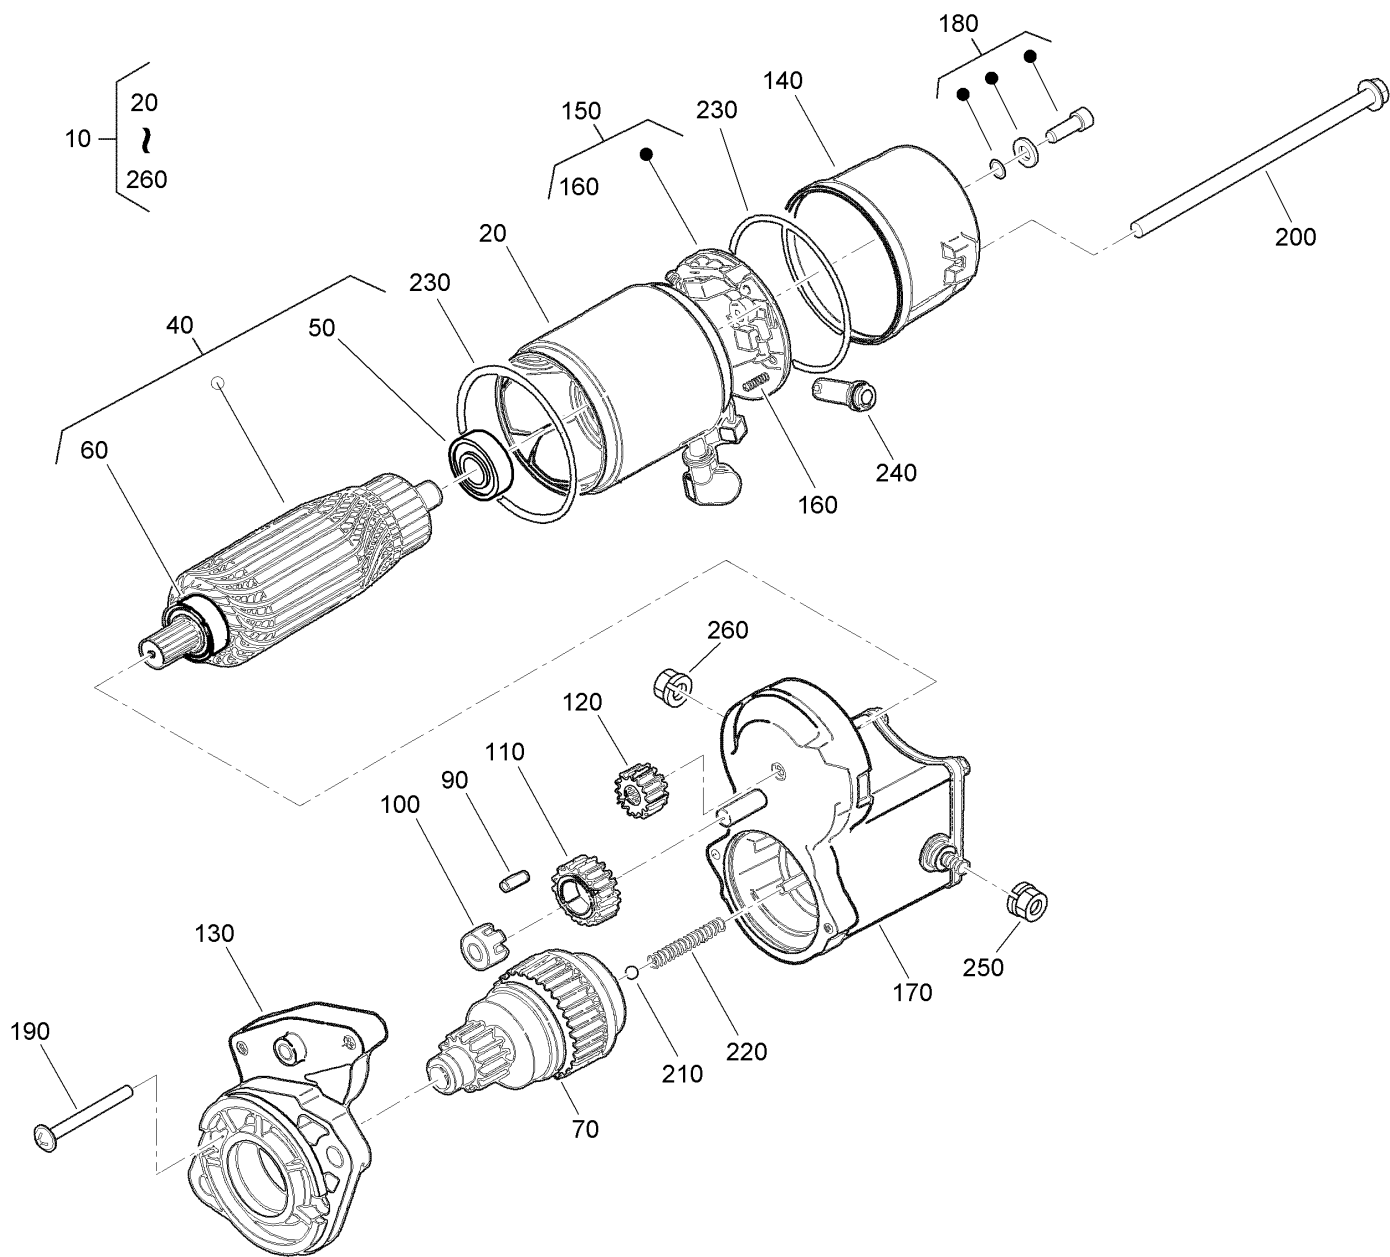

Starter (Component Parts) Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	130-1306	1	Starter ASM	150	139-9571	1	Holder-Brush
20	139-9566	1	Yoke	160	139-9567	4	Spring
40	139-9565	1	Armature	170	130-1307	1	Magnetic Switch ASM
50	139-9572	1	Bearing	180	139-9573	2	Screw
60	139-9520	1	Bearing	190	139-9574	2	Screw
70	139-9564	1	Clutch-Running, Over	200	139-9570	2	Bolt-Through
90	98-7753	5	Roller	210	98-7755	1	Ball
100	139-9517	1	Retainer	220	139-9518	1	Spring
110	139-9519	1	Gear	230	139-9532	2	O-Ring
120	139-9569	1	Gear	240	139-9540	1	Pipe-Drain
130	139-9563	1	Frame-End, Drive	250	139-9521	1	Nut-Hexagon
140	139-9568	1	Frame-End	260	99-8376	1	Nut-Hex

 
Oil Switch and Thermometer Assembly

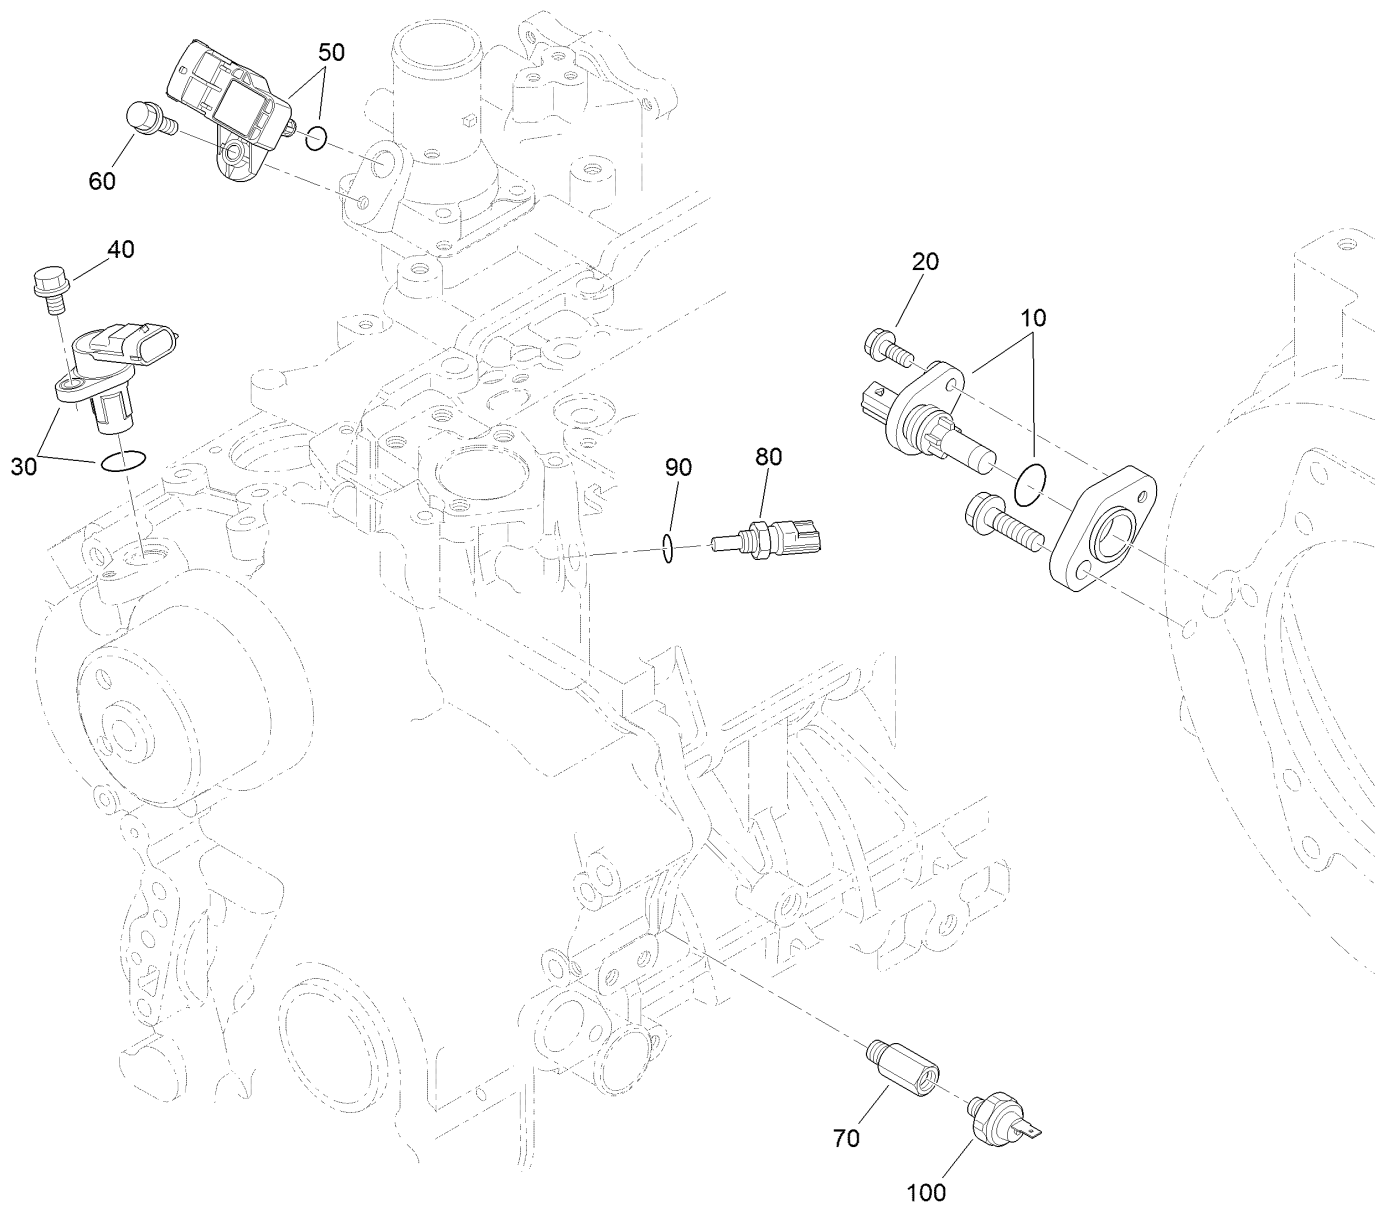

Oil Switch and Thermometer Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9716	1	Sensor	60	108-2873	1	Bolt-Flange
20	127-0403	1	Bolt-Flange	70	139-9685	1	Adapter-Switch, Oil
30	139-9742	1	Sensor	80	139-4717	1	Sensor-Temperature, Water
40	127-0403	1	Bolt-Flange	90	139-9512	1	O-Ring
50	139-9752	1	Sensor-Boost	100	139-4719	1	Switch-Oil

 
Injector Harness Assembly

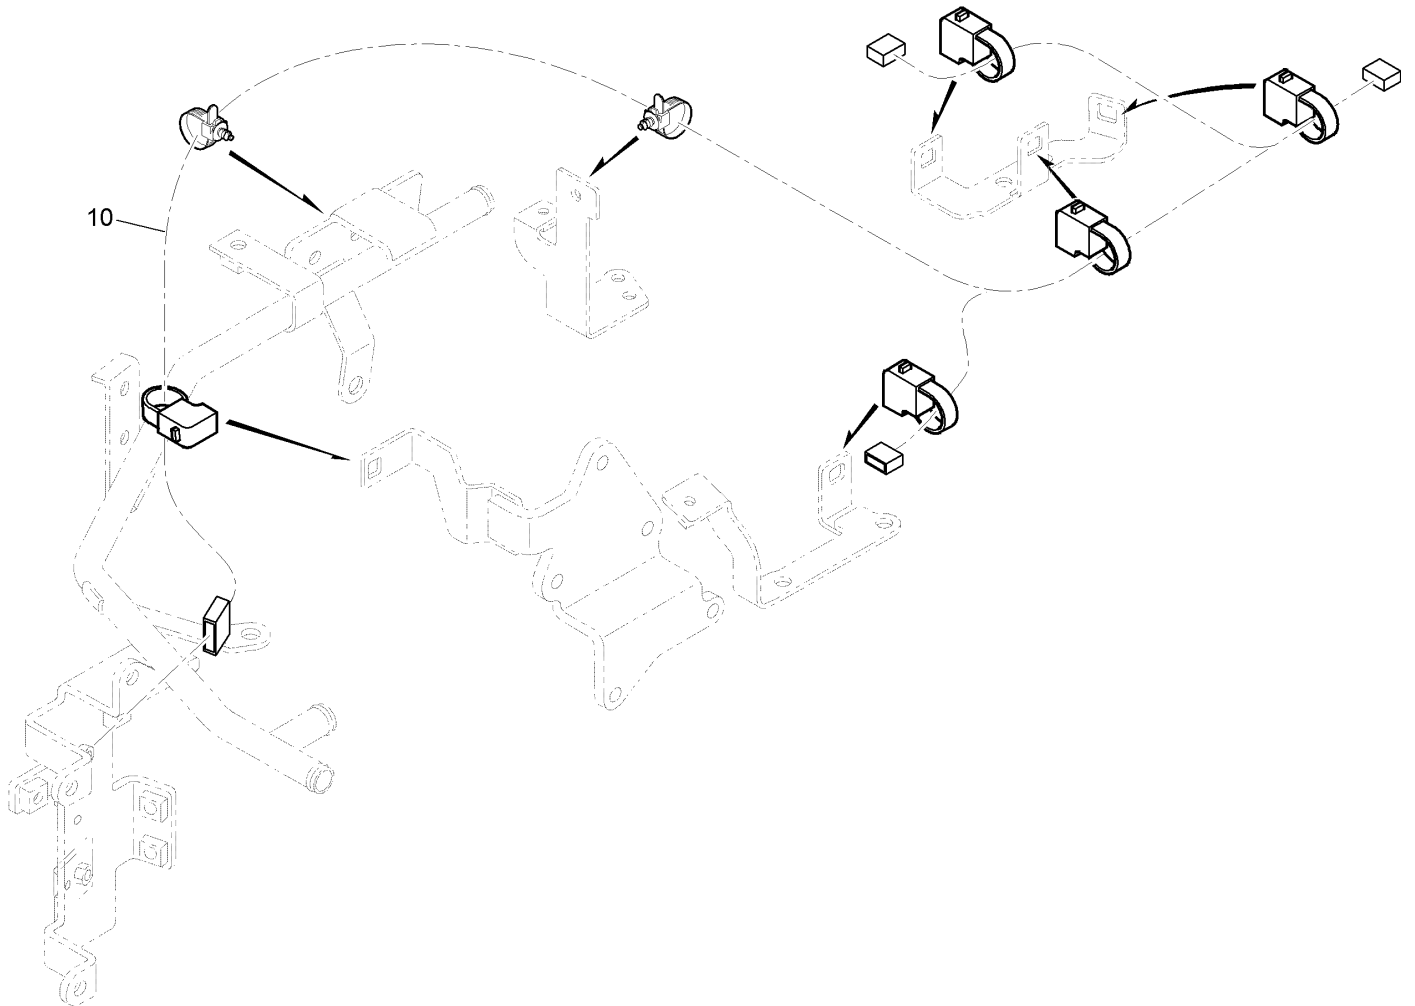

Injector Harness Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9767	1	Wire Harness ASM

 
Wire Harness Assembly

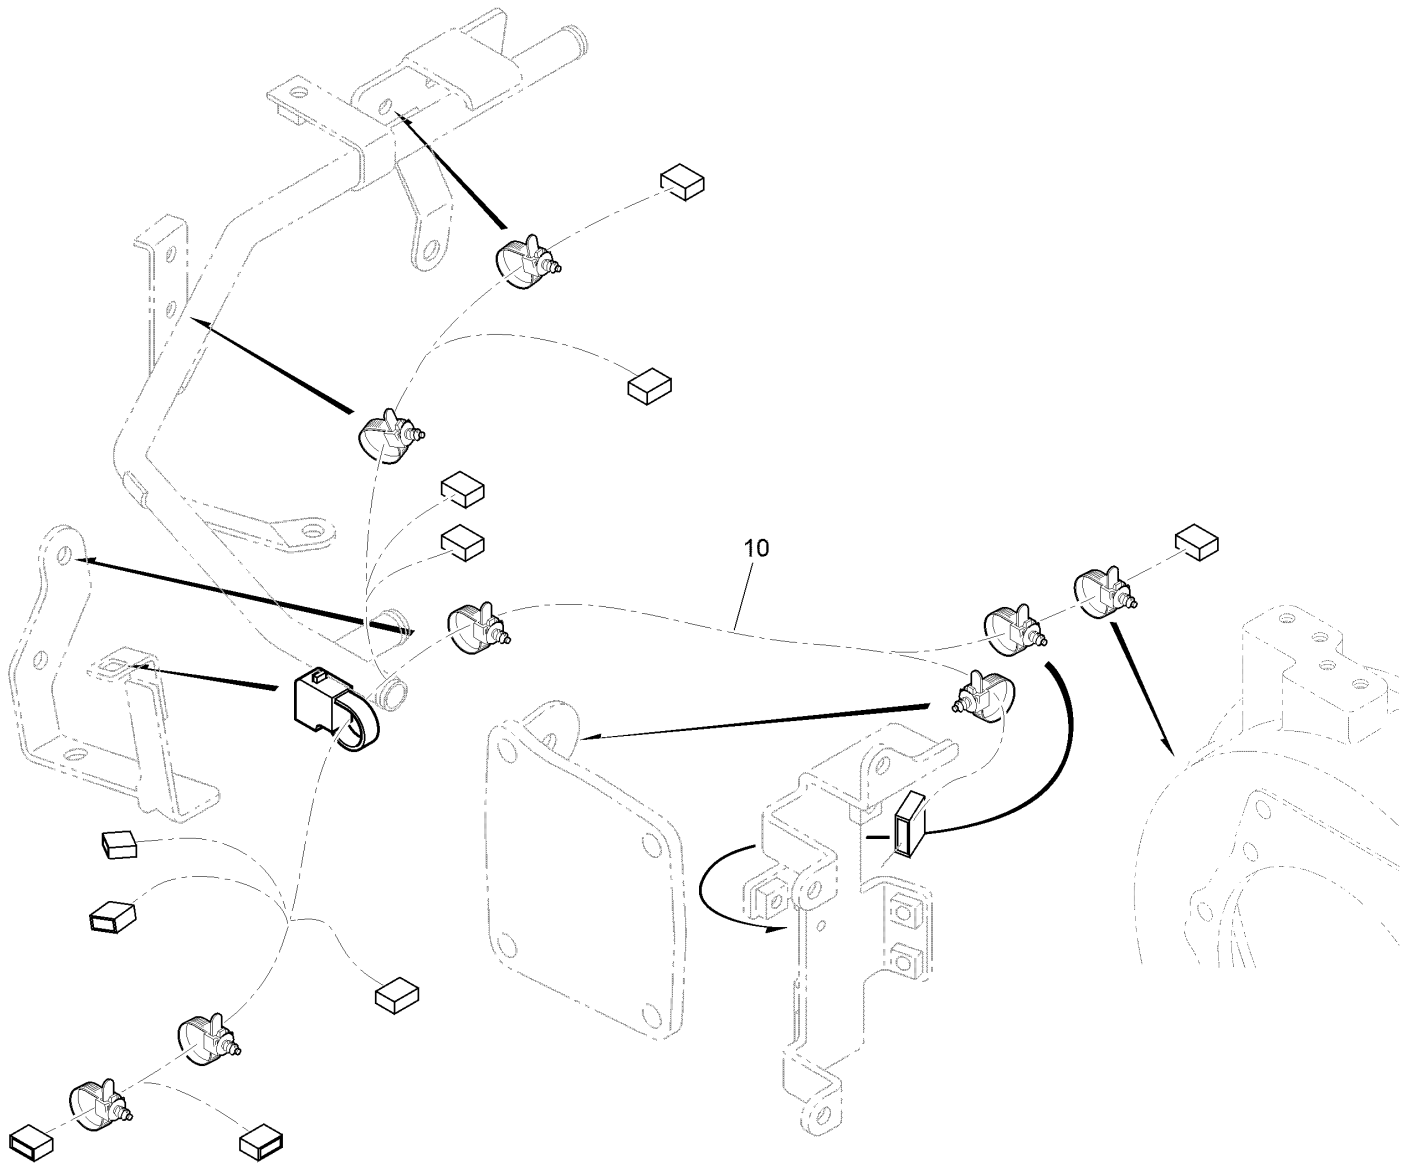

Wire Harness Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9790	1	Engine Wire Harness ASM

 
Wire Harness Bracket Assembly

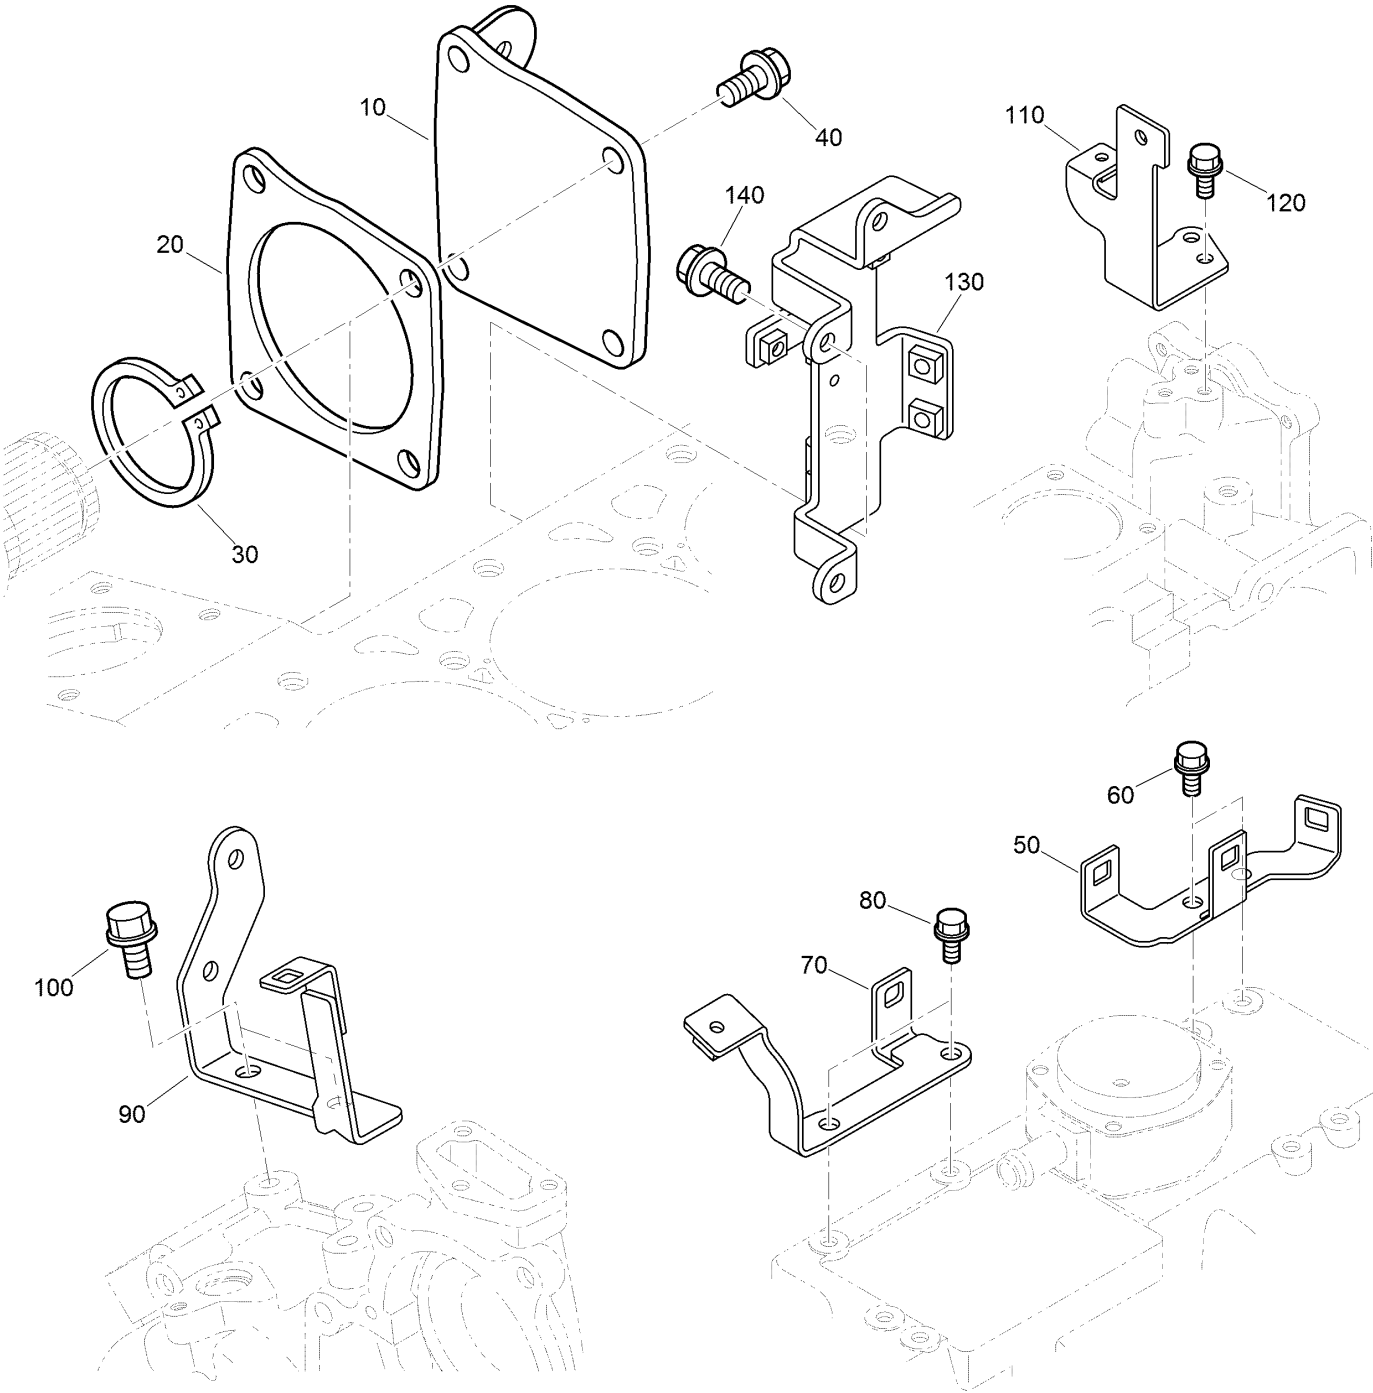

Wire Harness Bracket Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9731	1	Cover-Camshaft, Fuel	80	139-9505	2	Bolt-Flange
20	139-9637	1	Gasket	90	139-4702	1	Bracket (Wh 3)
30	120-5194	1	Circlip-External	100	130-1159	2	Bolt-Flange
40	130-1159	4	Bolt-Flange	110	139-9792	1	Bracket (Wh 4)
50	139-9791	1	Bracket-Harness	120	139-9505	2	Bolt-Flange
60	139-9505	2	Bolt-Flange	130	139-9768	1	Bracket-Connector
70	139-4701	1	Bracket (Wh 2)	140	130-1159	3	Bolt-Flange

 
Water Flange and Thermostat Assembly

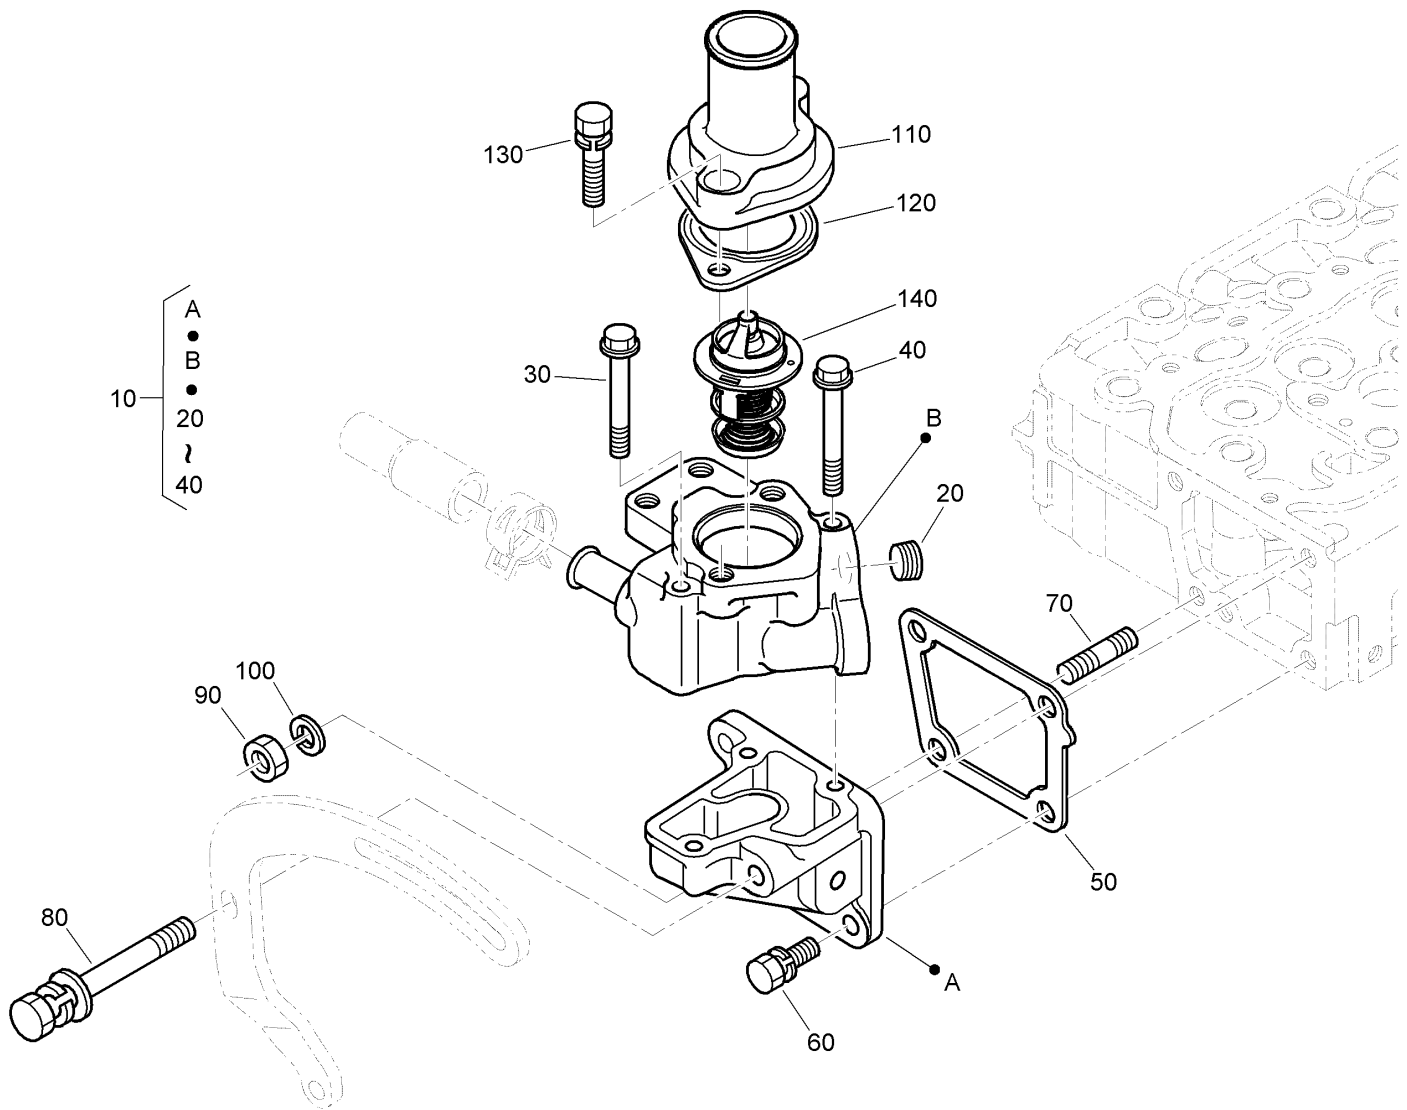

Water Flange and Thermostat Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	130-1347	1	Water Flange ASM	80	139-9601	1	Bolt
20	139-9603	1	Plug	90	98-7534	1	Nut
30	105-2875	2	Bolt-Flange	100	131-9579	1	Washer-Spring, Lock
40	107-0117	1	Bolt-Flange	110	98-7775	1	Cover-Thermostat
50	105-2876	1	Gasket-Flange, Water	120	105-3748	1	Gasket-Thermostat
60	98-9359	2	Bolt	130	98-7777	2	Bolt
70	100-1558	1	Stud-Manifold, Exhaust	140	139-9678	1	Thermostat ASM

 
Water Pipe Assembly

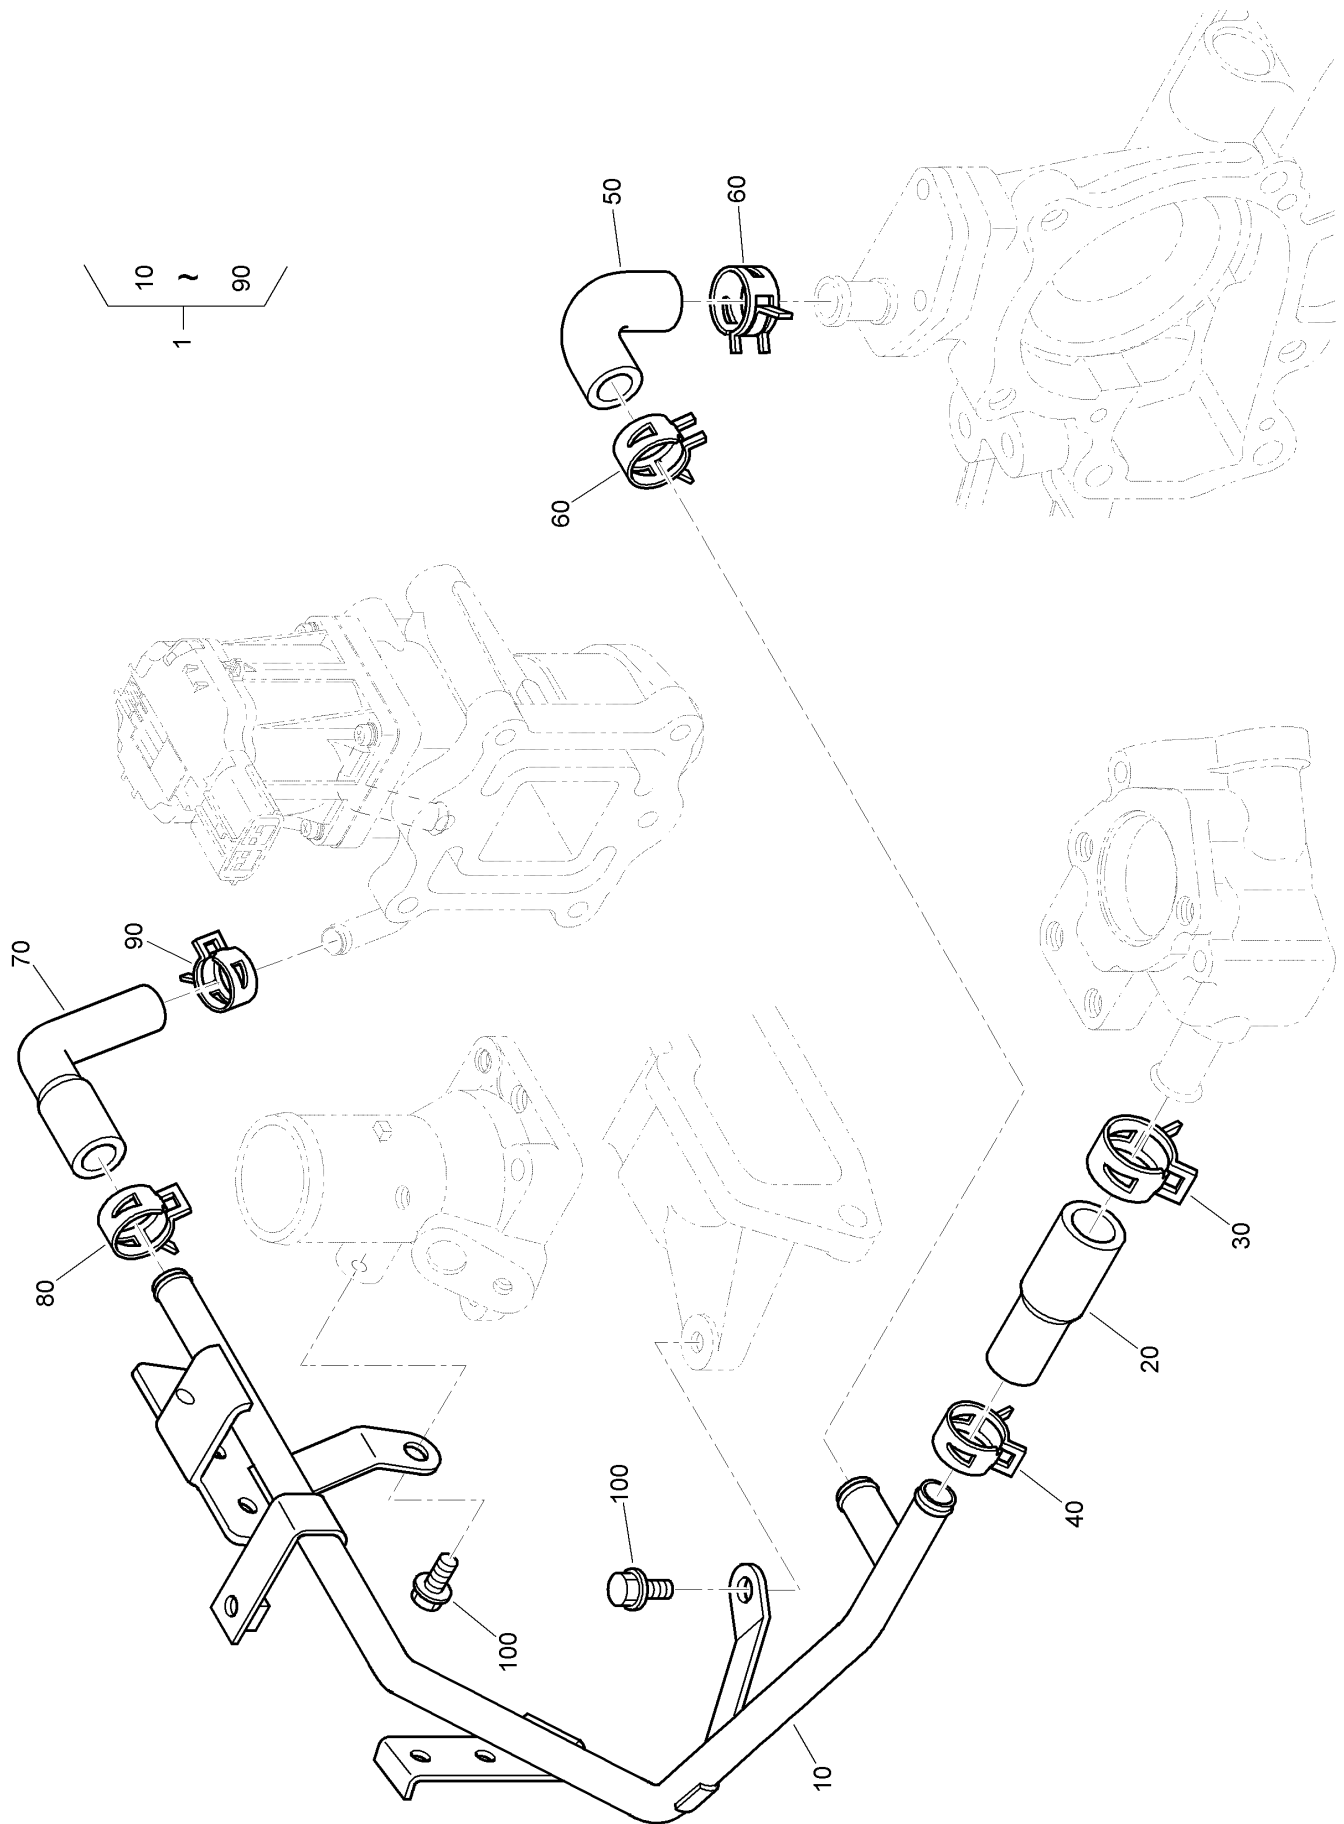

Water Pipe Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	139-9795	1	Water Return Pipe ASM	60	105-2879	2	Clamp-Hose
10	139-4704	1	Pipe-Return, Water 2	70	139-9771	1	Hose
20	139-9754	1	Hose-Return, Water 2-1	80	115-8524	1	Clamp-Hose
30	139-9591	1	Clamp-Hose	90	139-9515	1	Clamp-Hose
40	115-8524	1	Clamp-Hose	100	100-1774	2	Bolt-Flange
50	139-9755	1	Hose-Return, Water 2-2				

 
Water Pump Assembly

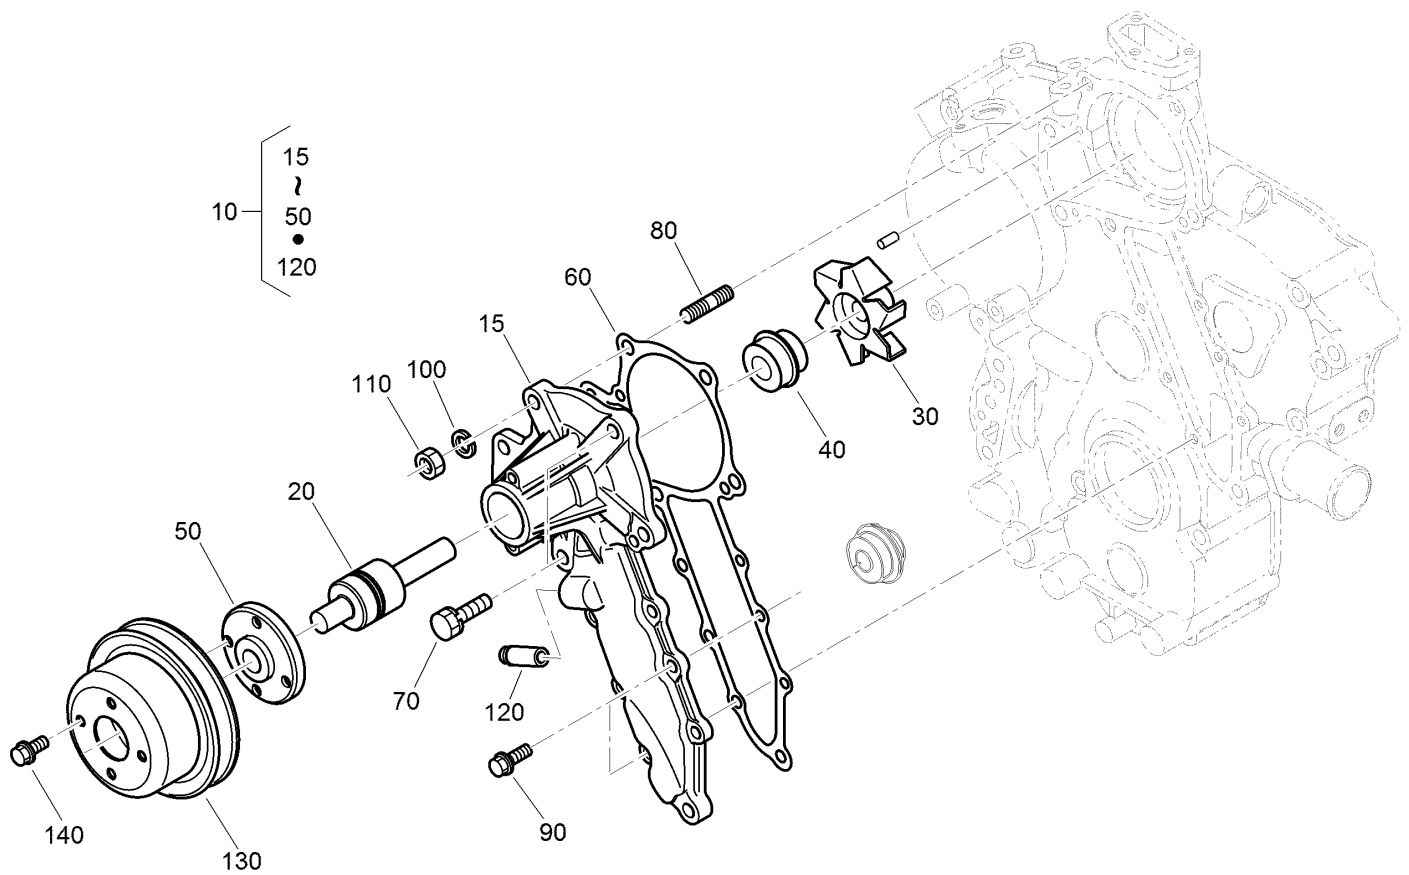

Water Pump Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9636	1	Water Pump ASM	80	108-7090	1	Stud
15	130-1421	1	Body-Pump, Water	90	127-0403	6	Bolt-Flange
20	139-9560	1	Bearing	100	131-9579	1	Washer-Spring, Lock
30	139-9599	1	Impeller	110	98-7534	1	Nut
40	139-9640	1	Mechanical Seal ASM	120	98-9580	1	Pipe-Return, Water
50	108-7089	1	Flange-Shaft, Water Pump	130	139-9579	1	Pulley-Fan
60	139-9605	1	Gasket-Pump, Water	140	100-1774	4	Bolt-Flange
70	98-7439	2	Bolt				

 
Inlet Manifold Assembly

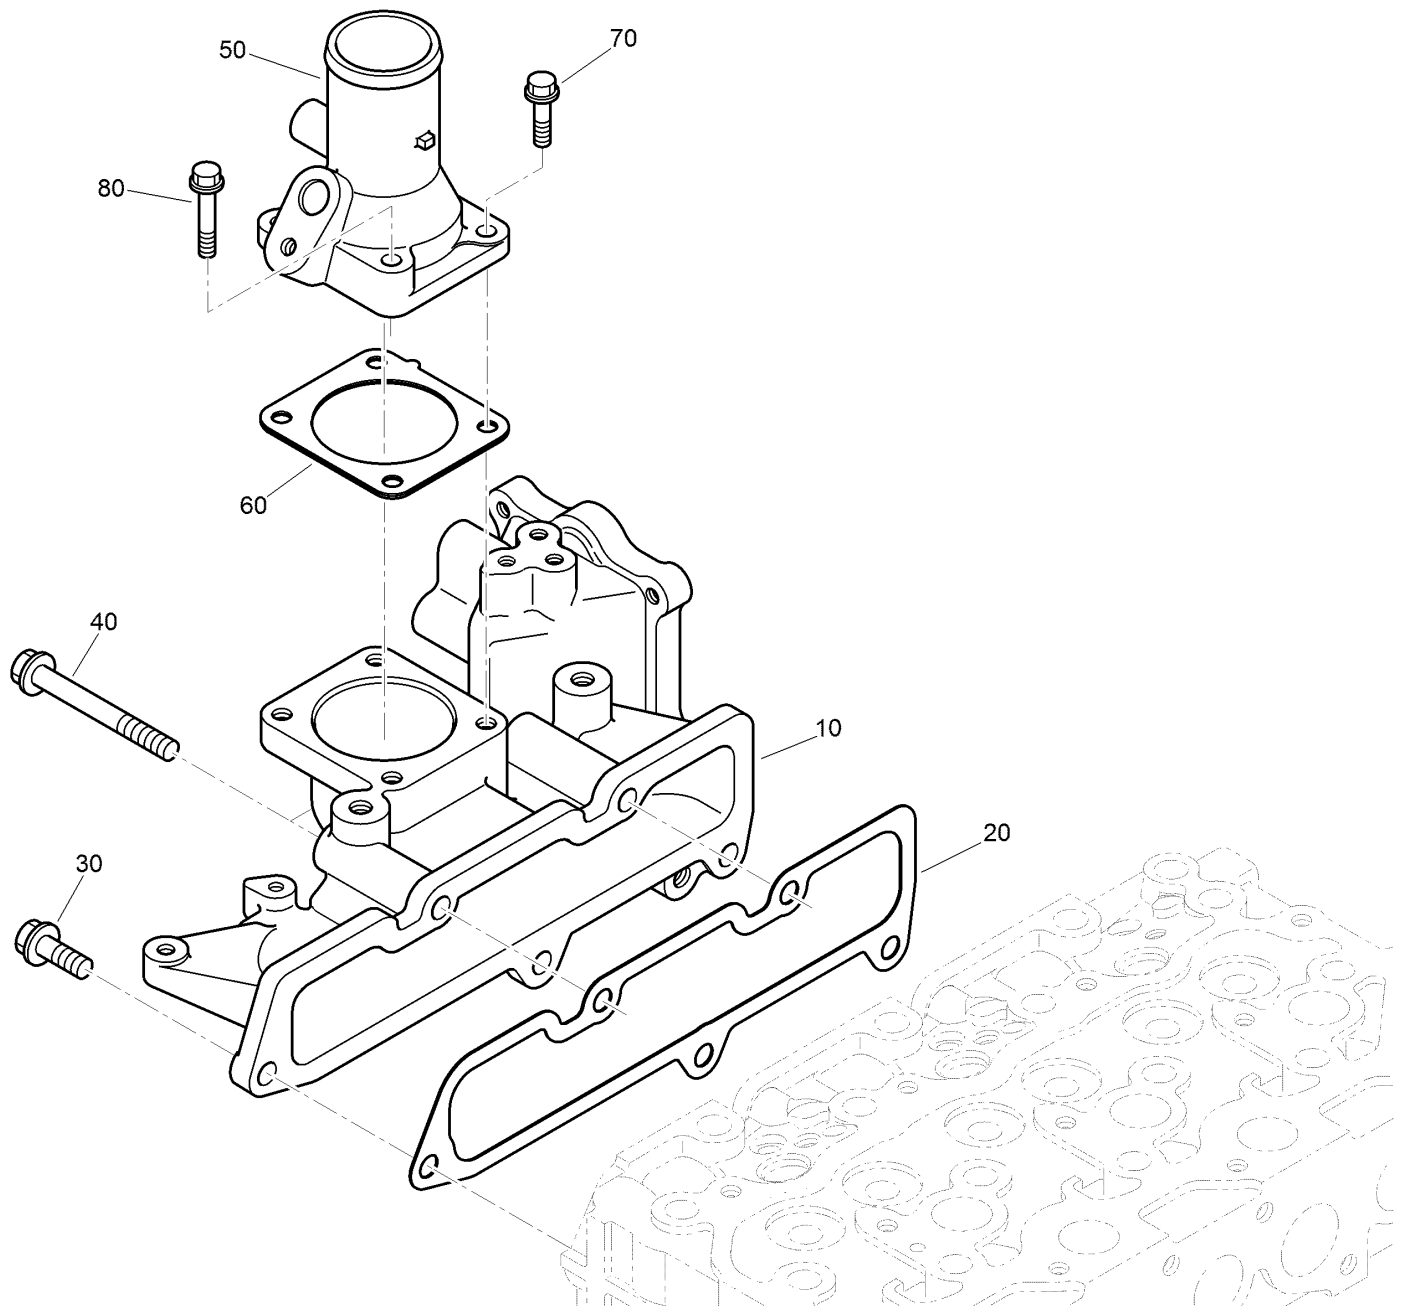

Inlet Manifold Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9758	1	Manifold-Inlet	50	139-9749	1	Flange-Inlet
20	139-9759	1	Gasket-Manifold, Inlet	60	139-9700	1	Gasket-Flange, Inlet
30	115-8583	3	Bolt-Flange	70	108-2873	3	Bolt-Flange
40	139-9503	2	Bolt-Flange	80	127-0404	1	Bolt-Flange

 
Inlet Hose Assembly

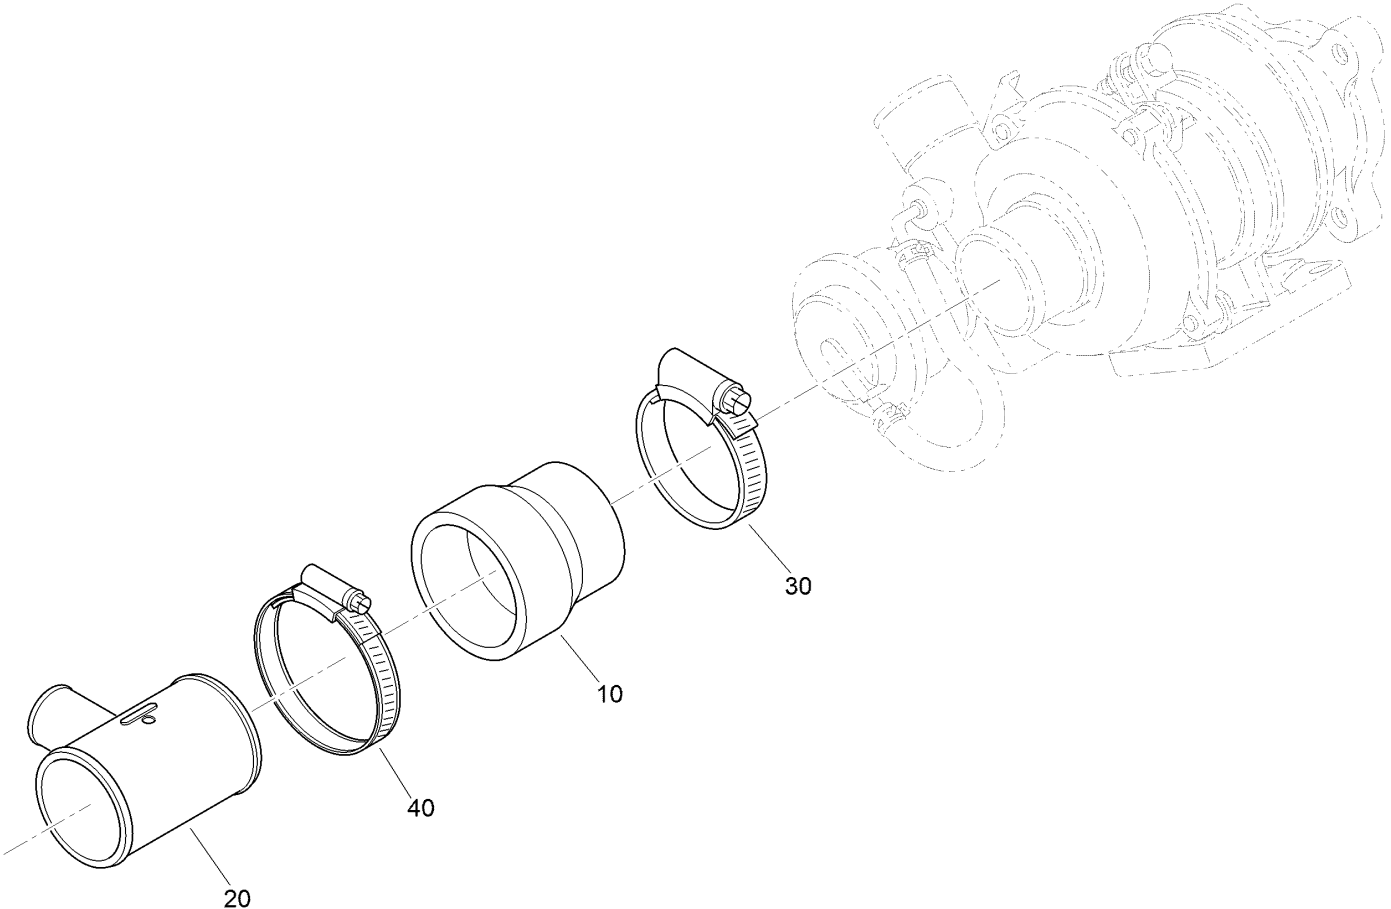

Inlet Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9746	1	Tube-Inlet, Turbo	30	139-4716	1	Clamp
20	139-9649	1	Pipe-Breather	40	139-4718	1	Clamp-Hose

 Exhaust Manifold Assembly

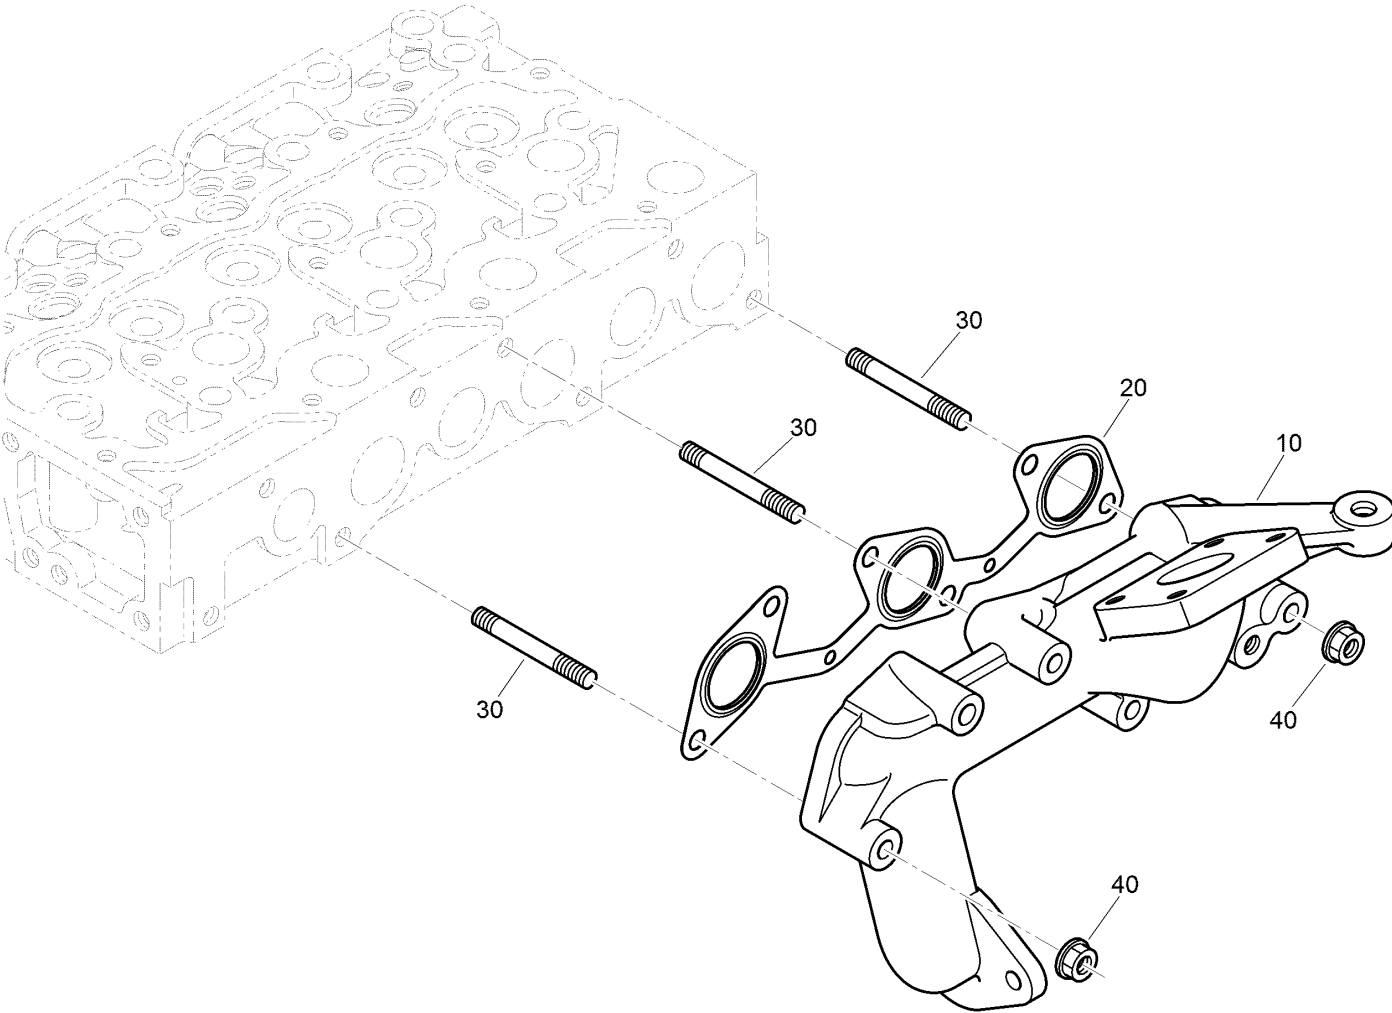


Exhaust Manifold Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9773	1	Manifold-Exhaust
20	139-9760	1	Gasket-Manifold, Exhaust

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
30	139-9744	6	Stud
40	139-9691	6	Nut-Flange

 
Exhaust Gas Recirculation Assembly

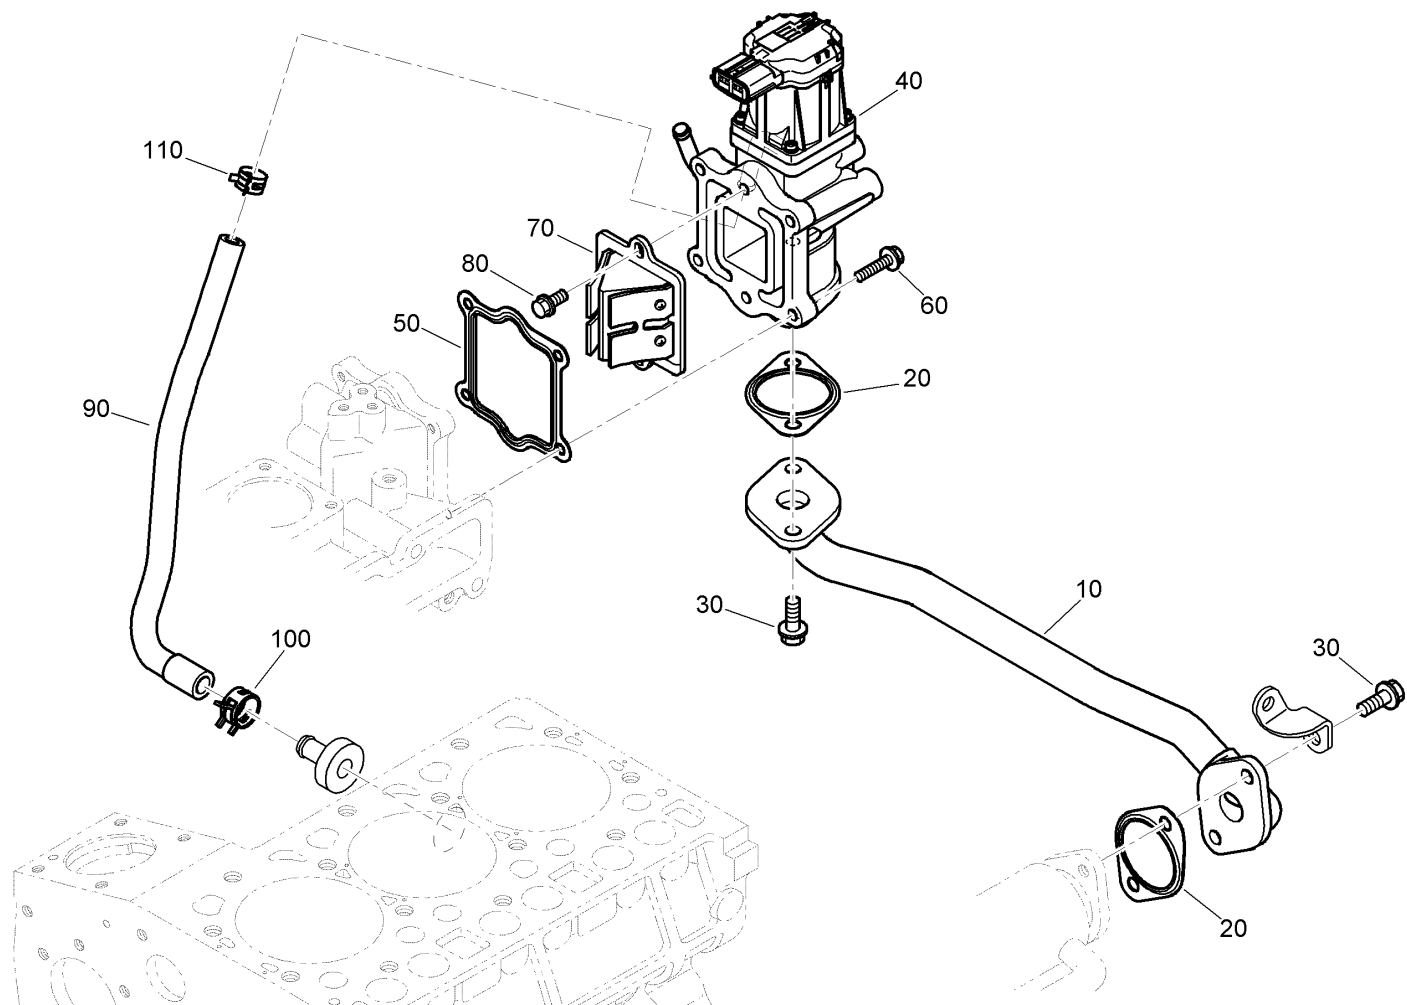

Exhaust Gas Recirculation Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9785	1	Pipe-E G R	70	139-9692	1	Valve-Lead
20	139-9751	2	Gasket-Cooler, E G R	80	100-1774	2	Bolt-Flange
30	115-8583	4	Bolt-Flange	90	139-9770	1	Hose
40	139-9789	1	E G R Valve ASM	100	105-2879	1	Clamp-Hose
50	139-9750	1	Gasket-Valve, E G R	110	139-9515	1	Clamp-Hose
60	105-3789	4	Bolt				

 
Exhaust Gas Recirculation Cooler Assembly

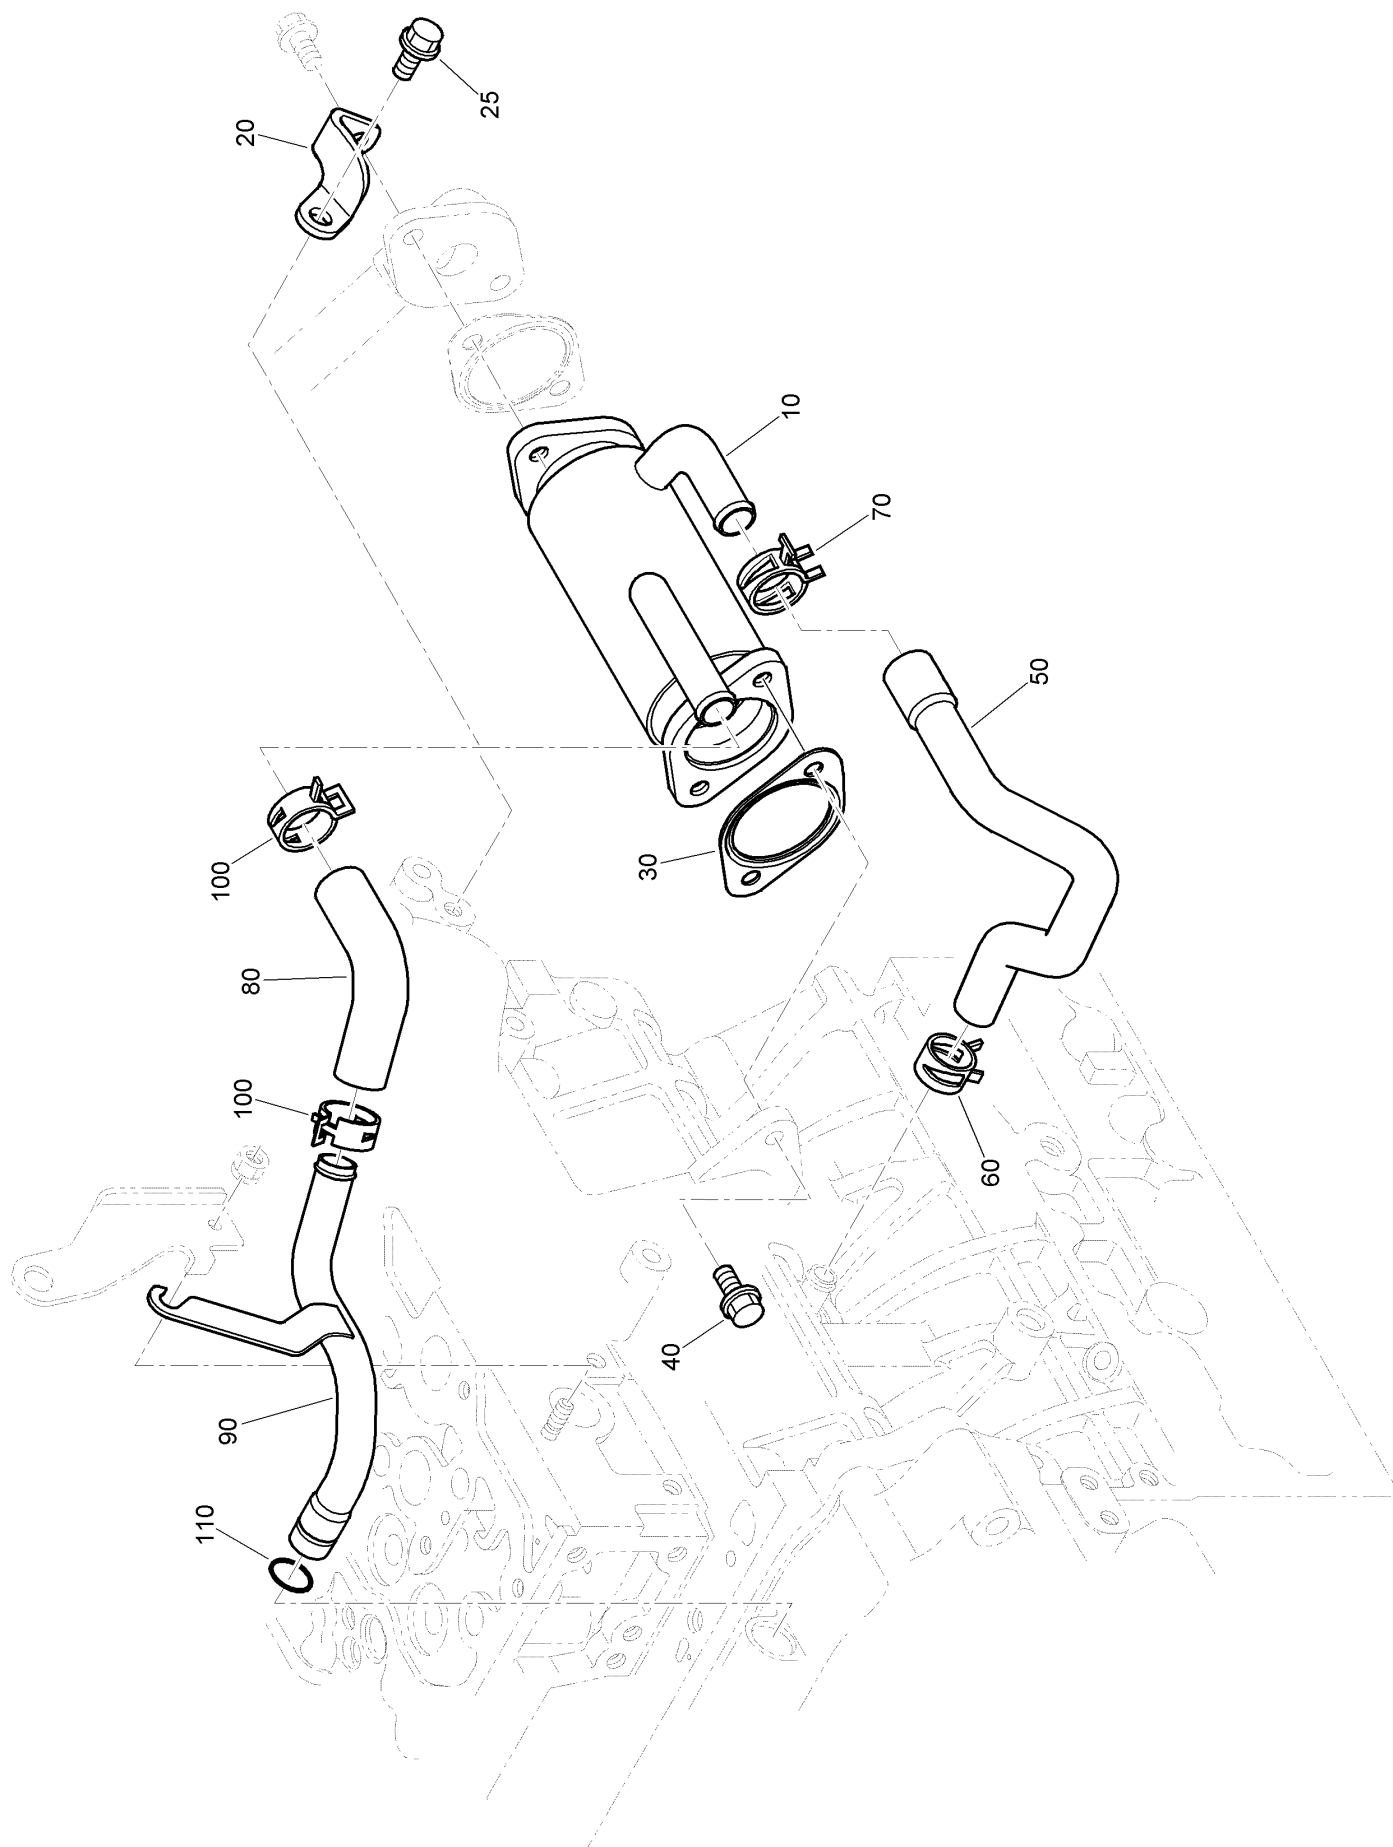

Exhaust Gas Recirculation Cooler Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9793	1	Cooler-E G R	60	105-2879	1	Clamp-Hose
20	139-9794	1	Stay-Cooler, E G R	70	98-9714	1	Clamp-Hose
25	130-1159	1	Bolt-Flange	80	139-4703	1	Hose-E G R C2
30	139-9751	1	Gasket-Cooler, E G R	90	139-9753	1	Pipe-E G R, C2
40	115-8583	2	Bolt-Flange	100	139-9591	2	Clamp-Hose
50	139-9686	1	Hose-E G R, C1	110	139-9511	1	O-Ring

 Turbo Charger Assembly

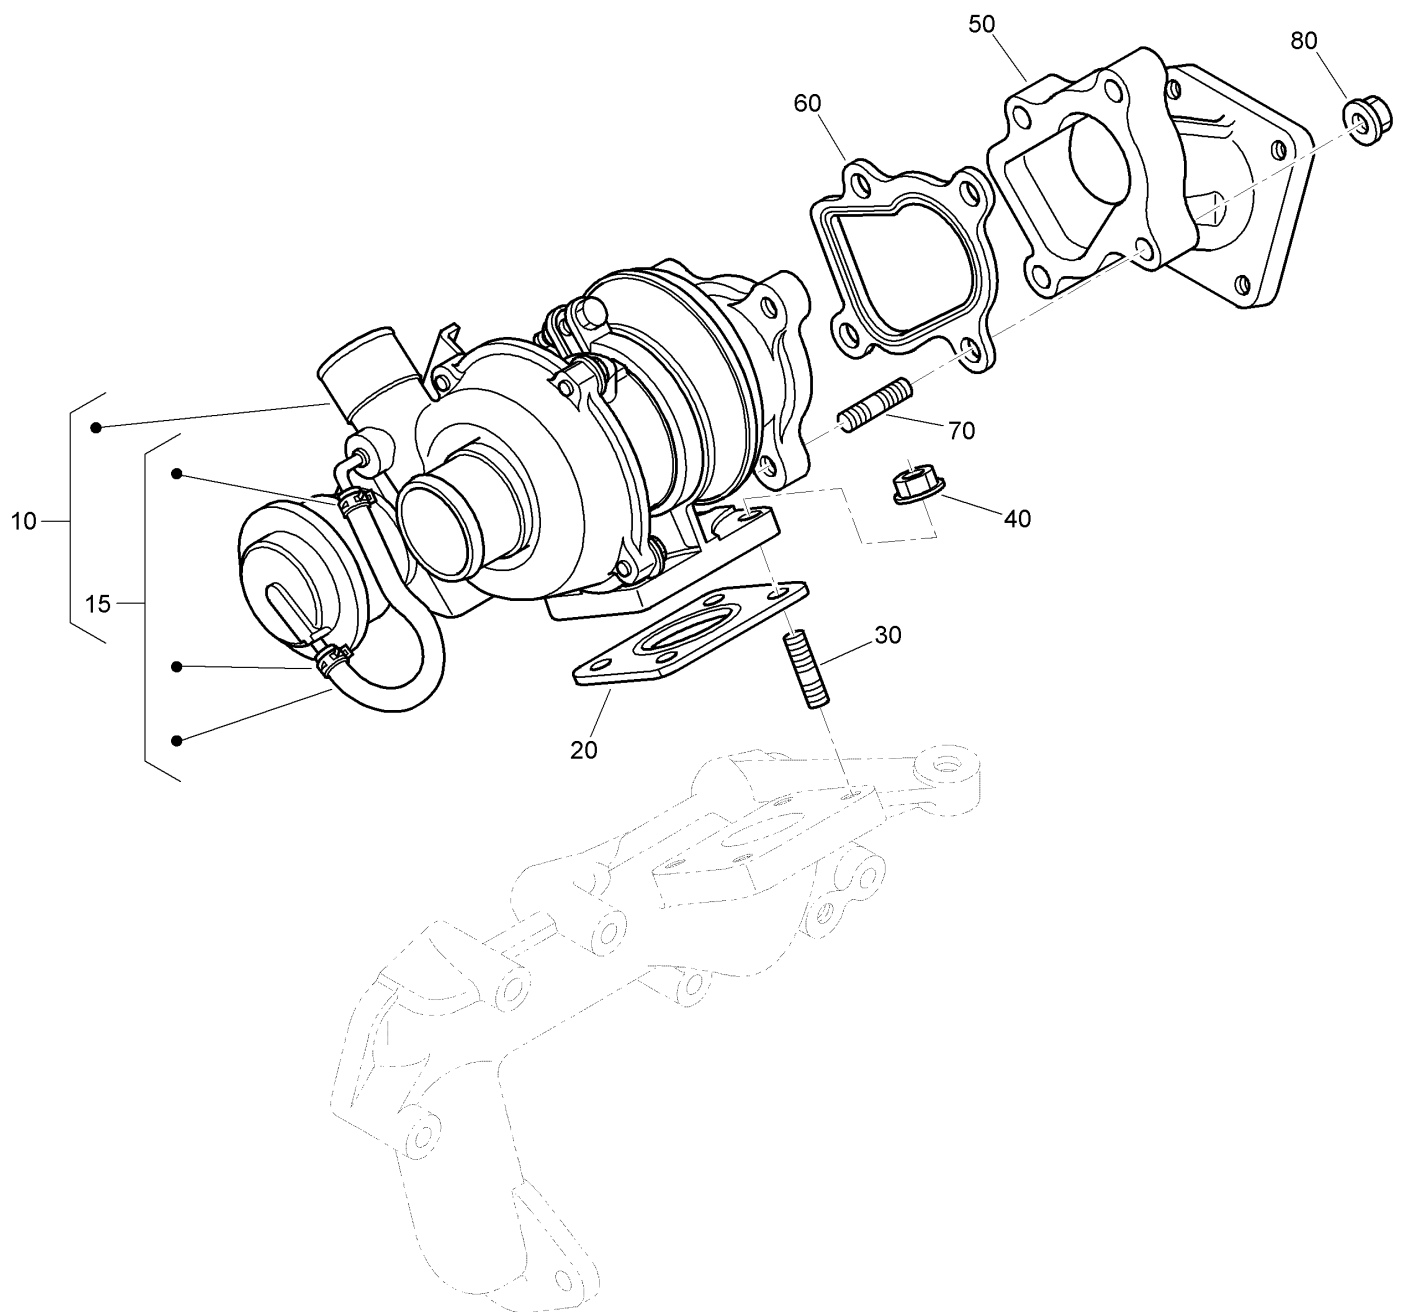


Turbo Charger Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9784	1	Turbo Charger ASM
15	139-9673	1	Hose ASM
20	100-9314	1	Gasket
30	139-9689	4	Bolt-Stud
40	139-9691	4	Nut-Flange

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
50	139-9783	1	Flange-Muffler
60	139-9693	1	Gasket-Flange, Muffler
70	139-9625	4	Stud
80	139-9691	4	Nut-Flange

 Diesel Oxidation Catalyst Muffler Assembly

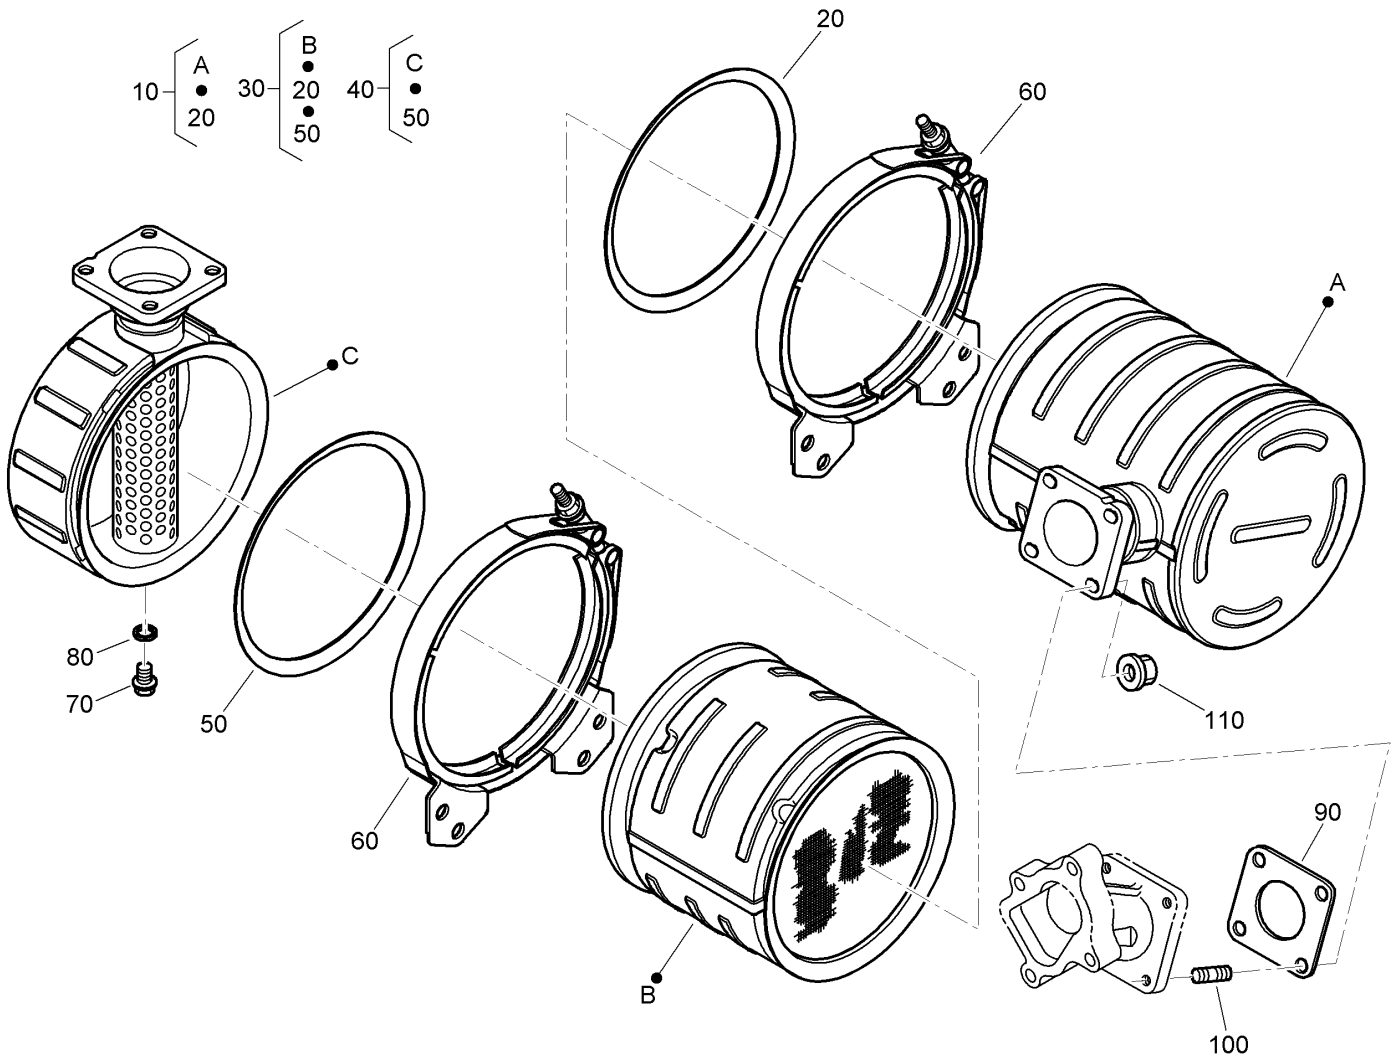


Diesel Oxidation Catalyst Muffler Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9797	1	Doc1 Catalyst Kit
20	139-9733	2	Gasket-D P F
30	139-4721	1	Doc2 Catalyst Kit
40	139-9698	1	Body Kit
50	139-9733	1	Gasket-D P F
60	139-4706	2	Bracket-V Band, D P F

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
70	100-1774	1	Bolt-Flange
80	98-7654	1	Gasket
90	100-9333	1	Gasket-Muffler
100	139-9690	4	Bolt-Stud
110	139-9691	4	Nut-Flange

 Diesel Oxidation Catalyst Muffler Bracket Assembly

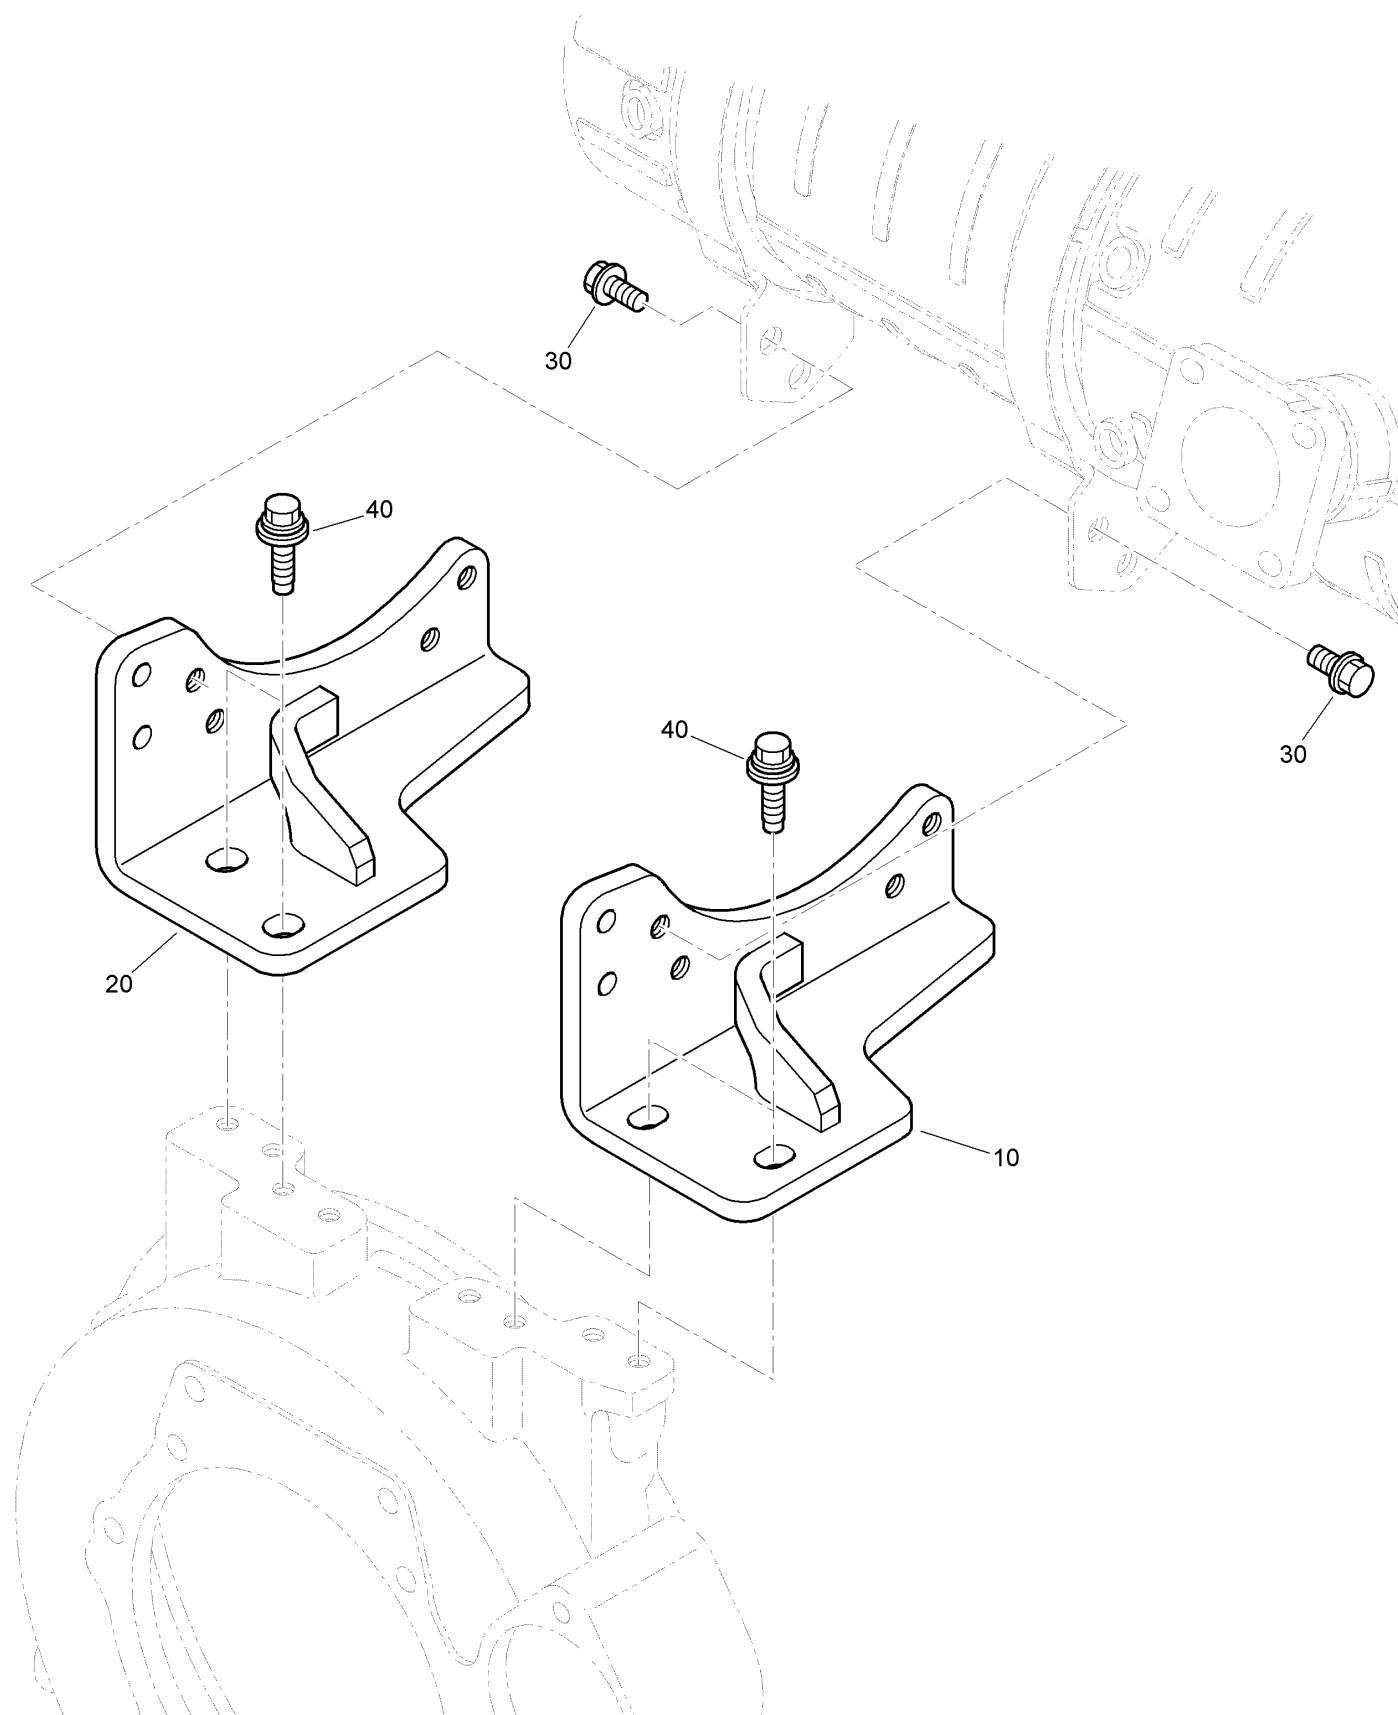


Diesel Oxidation Catalyst Muffler Bracket Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9734	1	Bracket-D P F 1
20	139-9735	1	Bracket-D P F 2

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
30	127-0406	8	Bolt-Flange
40	139-4714	4	Bolt

 
Oil Separator Assembly

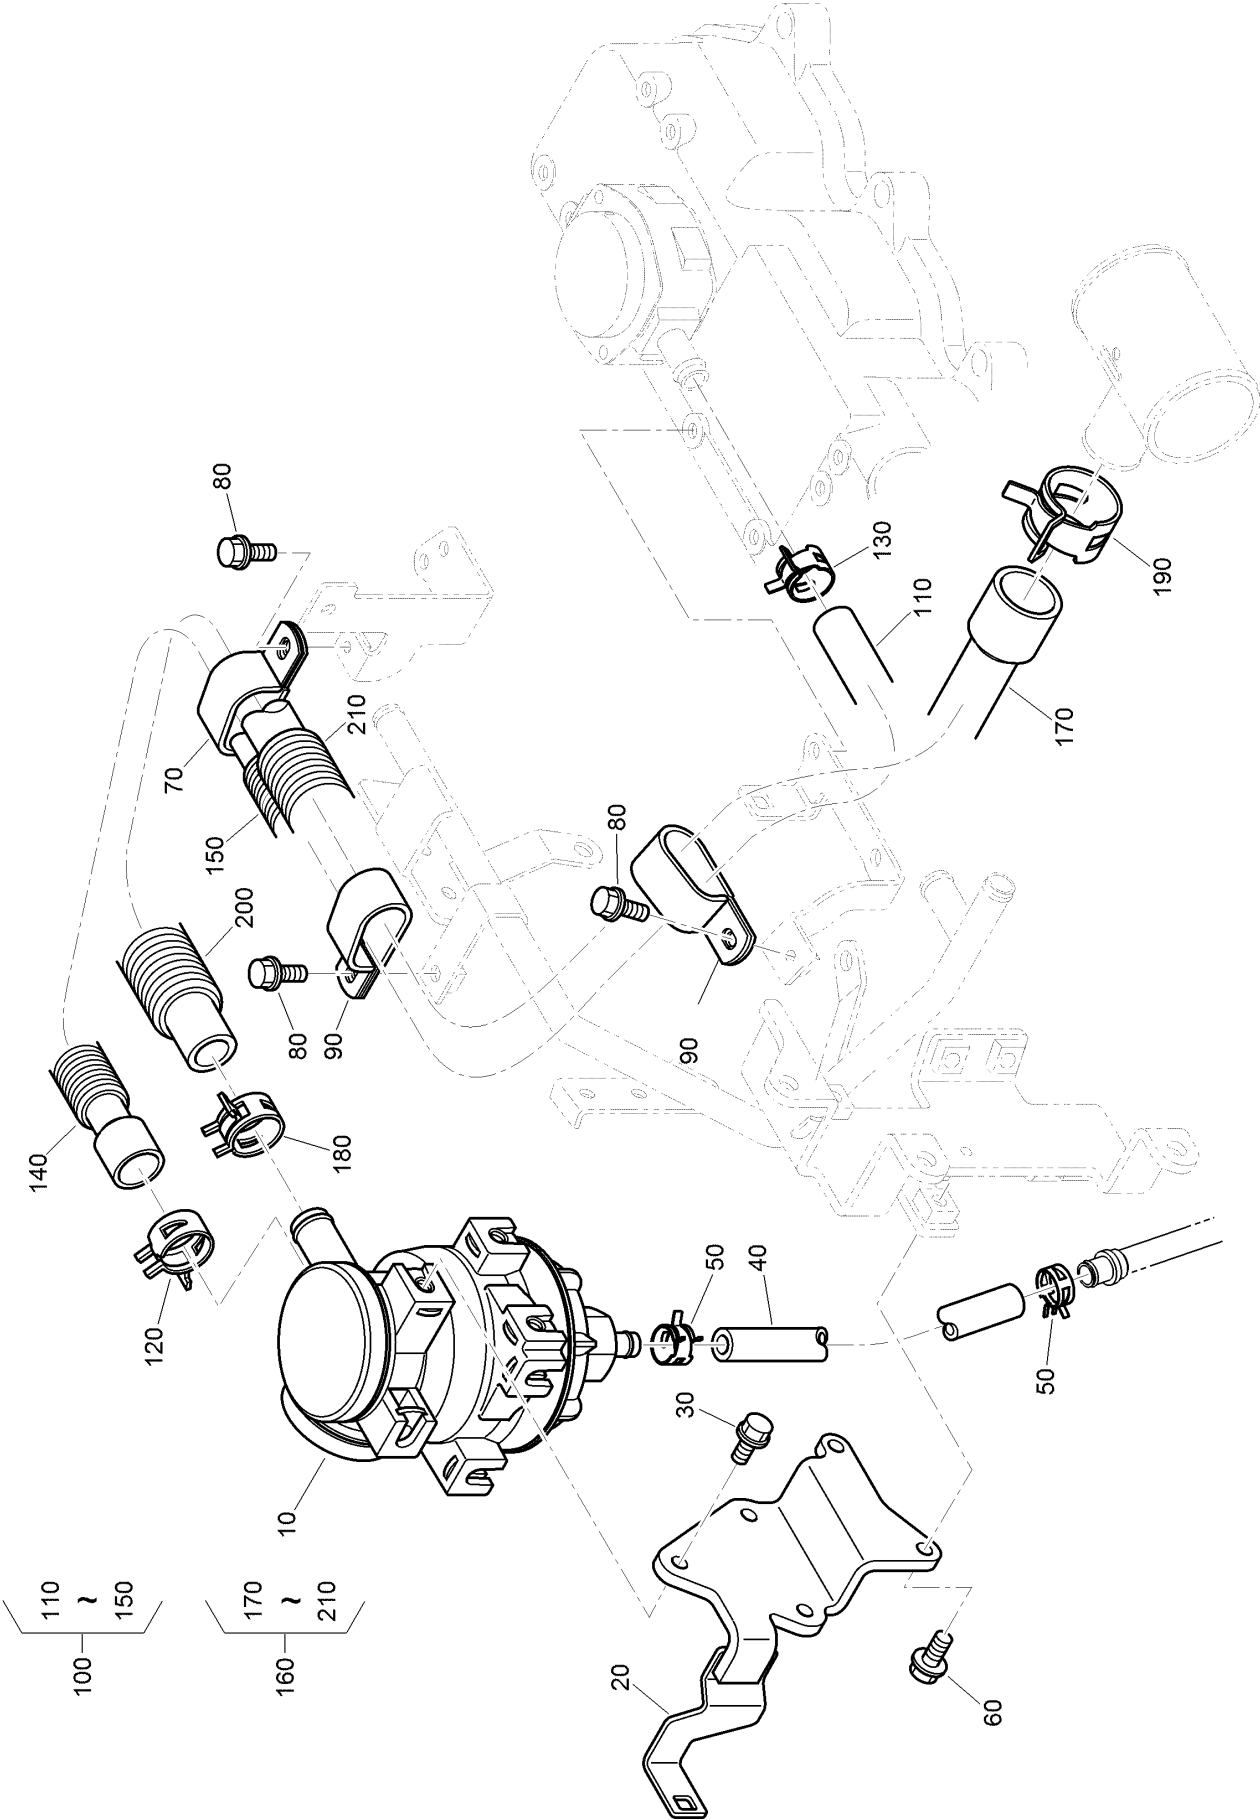

Oil Separator Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9695	1	Separator ASM	120	98-9714	1	Clamp-Hose
20	139-9780	1	Bracket-Separator	130	115-8524	1	Clamp-Hose
30	127-0403	3	Bolt-Flange	140	139-9650	1	Tube-Pipe
40	139-9757	1	Tube-Return, Oil	150	139-9786	1	Tube-Corrugate
50	139-9515	2	Clamp-Hose	160	139-9779	1	Breather 2 Tube ASM
60	127-0403	2	Bolt-Flange	170	139-9782	1	Tube-Breather 2
70	139-9748	1	Clamp-Hose	180	98-9714	1	Clamp-Hose
80	100-1774	3	Bolt-Flange	190	139-9516	1	Clamp-Hose
90	139-4708	2	Clamp-Hose	200	139-9787	1	Tube-Corrugate
100	139-9778	1	Breather 1 Tube ASM	210	139-9788	1	Tube-Corrugate
110	139-9781	1	Tube-Breather 1				

 
Oil Separator (Component Parts) Assembly

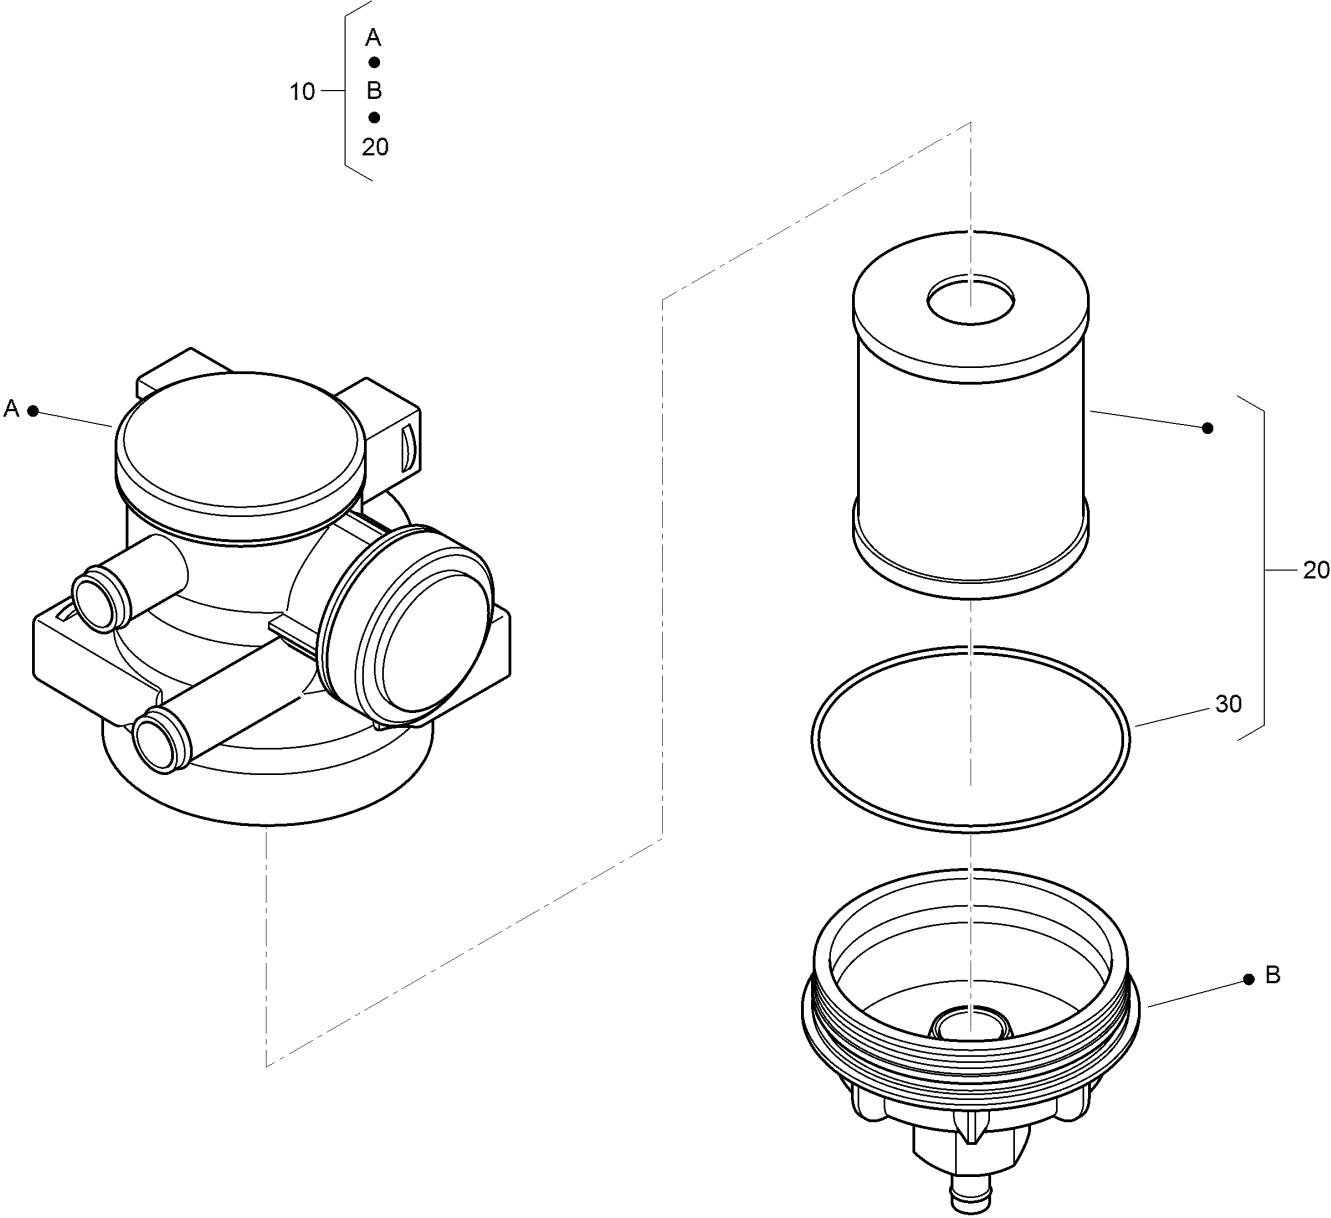

Oil Separator (Component Parts) Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9695	1	Separator ASM
20	139-9697	1	Element Kit
30	139-9696	1	O-Ring

 
Oil Pipe (Turbo Charger) Assembly

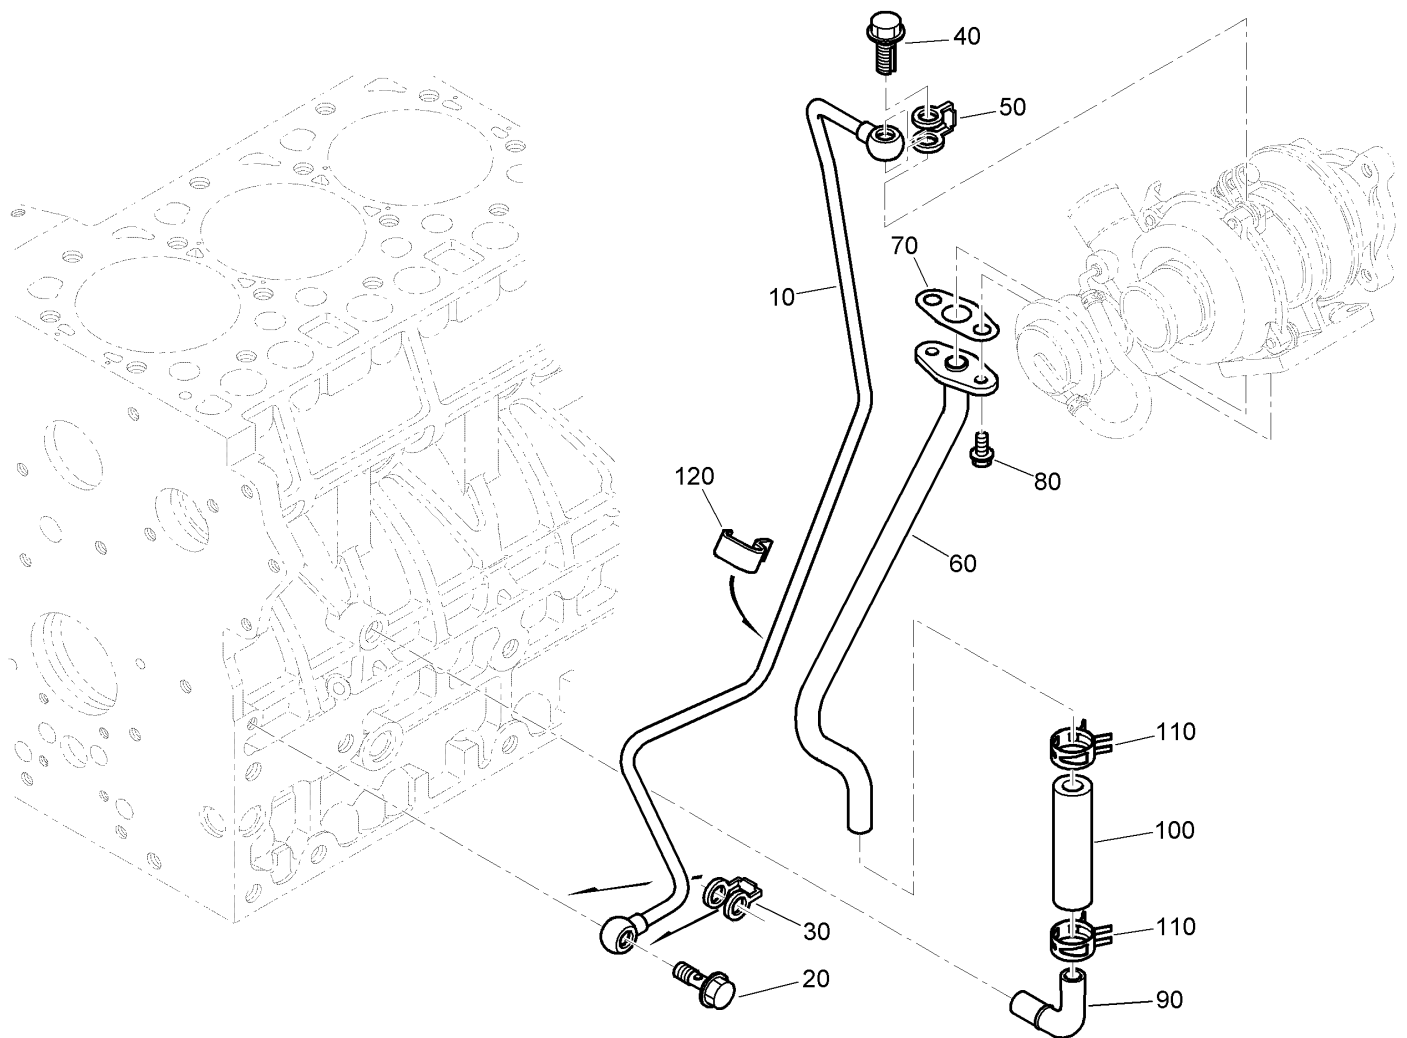

Oil Pipe (Turbo Charger) Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9774	1	Pipe	70	139-9627	1	Gasket-Pipe, Oil
20	130-1564	1	Bolt-Connect	80	100-1774	2	Bolt-Flange
30	139-9639	1	Gasket	90	100-9323	1	Pipe-Oil
40	139-9679	1	Bolt-Joint, Eye	100	139-9680	1	Tube-Oil
50	130-1423	1	Gasket	110	98-9714	2	Clamp-Hose
60	139-9775	1	Pipe-Oil 2	120	139-9776	1	Clamp-Pipe

 
Oil Cooler Assembly

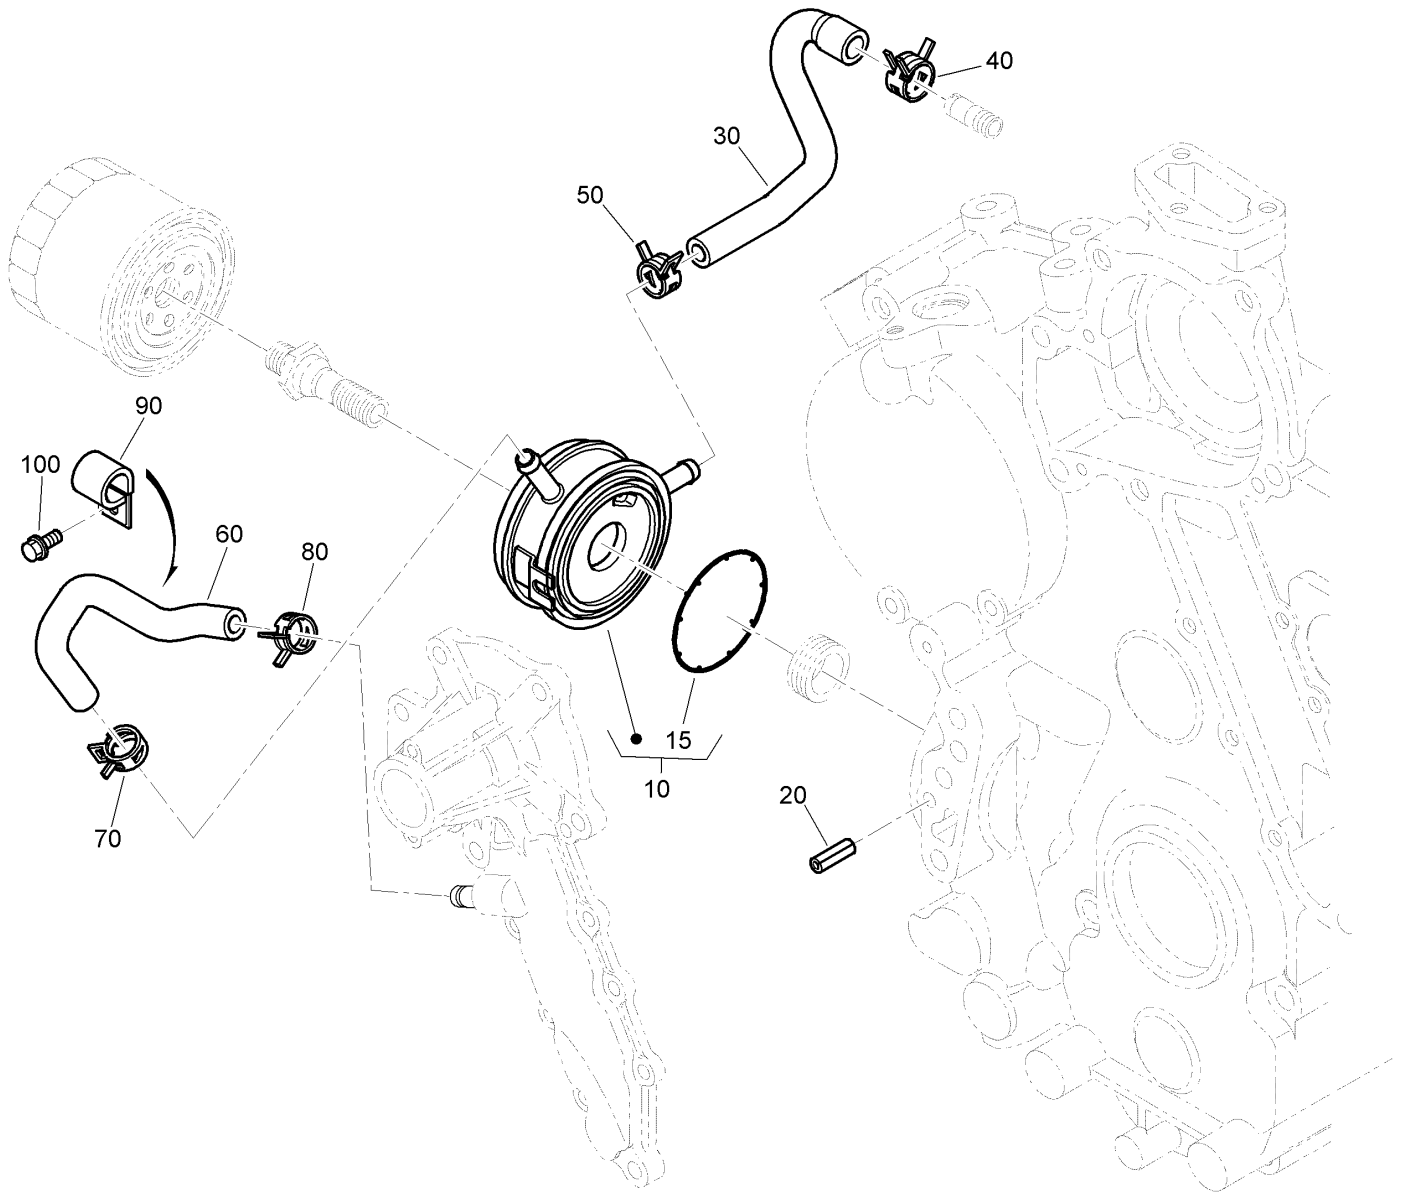

Oil Cooler Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9666	1	Oil Cooler ASM	60	139-9736	1	Hose-Cooler, Oil
15	139-9667	1	Packing	70	98-9579	1	Band-Pipe
20	130-1169	1	Pin-Roller	80	98-9579	1	Band-Pipe
30	139-9604	1	Hose-Cooler, Oil	90	139-9737	1	Clamp
40	105-2879	1	Clamp-Hose	100	100-1774	1	Bolt-Flange
50	98-9579	1	Band-Pipe				

 
Electronic Control Unit Assembly

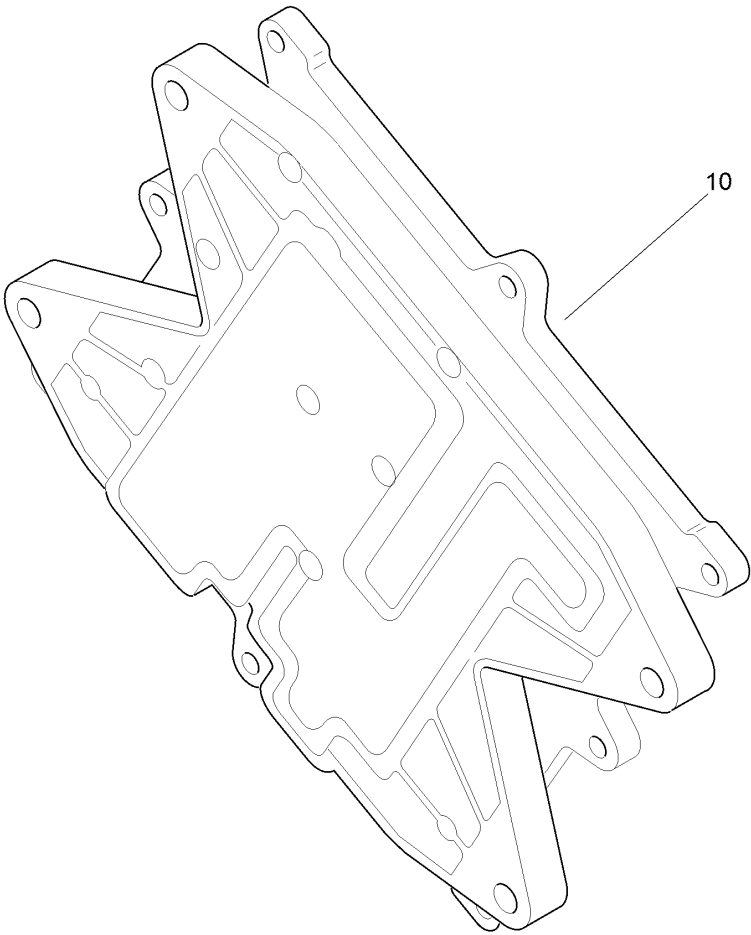

Electronic Control Unit Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9681	1	E C U ASM

 
Miscellaneous Engine Parts

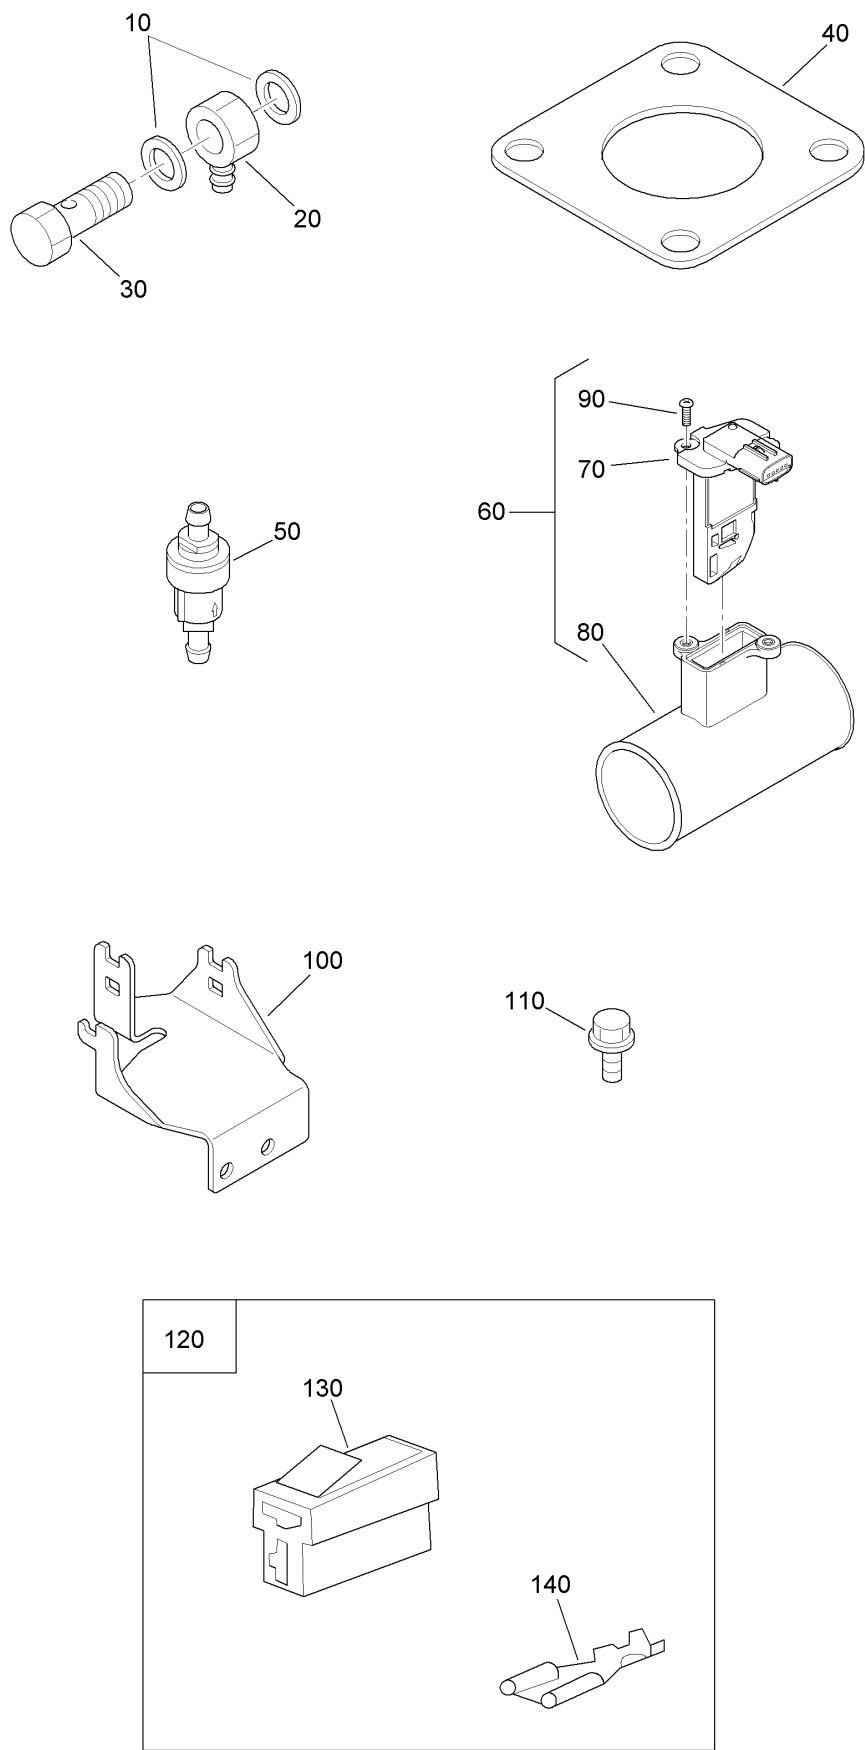

Miscellaneous Engine Parts (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	137-0067	8	O-Ring	80	139-9730	1	Pipe-Flow, Air
20	137-0065	4	Adapter-Fuel	90	139-9507	2	Screw-Phillips, Pan Head
30	137-0066	4	Bolt-Joint	100	139-9633	1	Bracket
40	100-9333	1	Gasket-Muffler	110	130-1159	2	Bolt-Flange
50	139-9669	1	Valve-Check, Fuel	120	98-9699	2	Terminal
60	136-4741	1	Sensor	130	139-9590	1	Coupler ASM
70	139-9688	1	Sensor-Flow, Air	140	98-9698	1	Connector

 Operator Manual

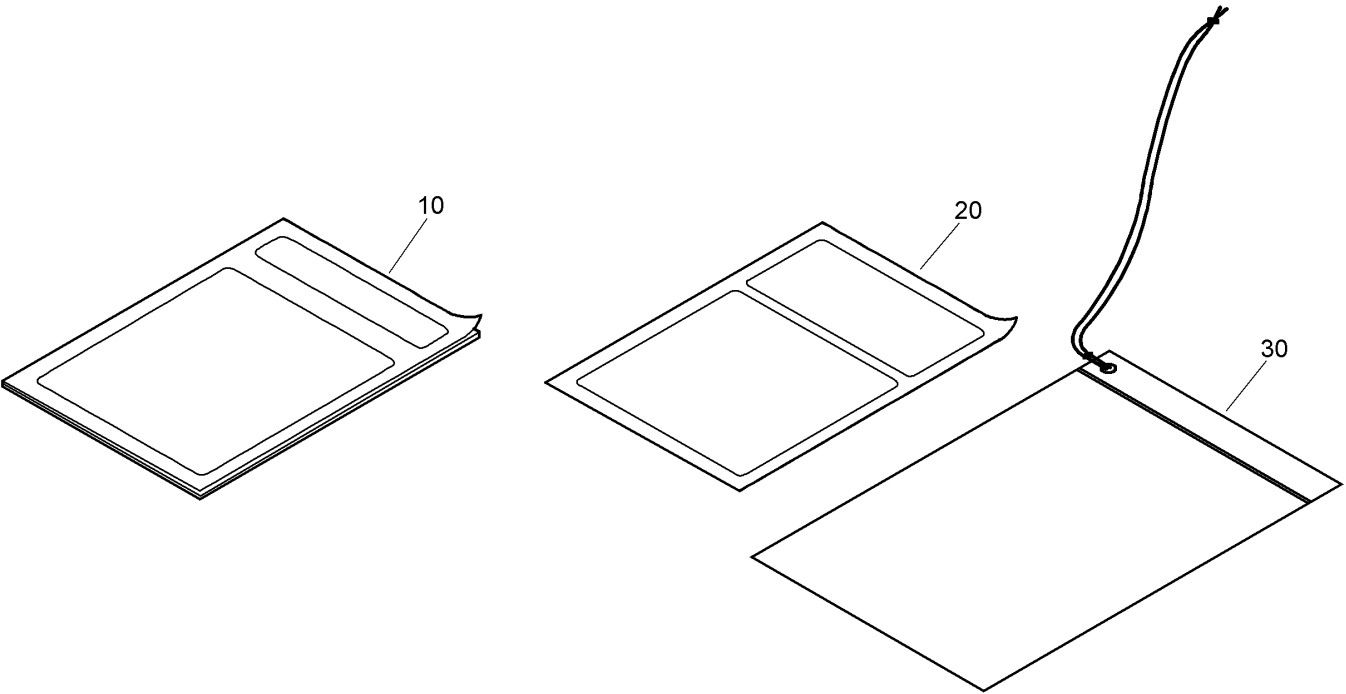

Operator Manual (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
10	139-9699	1	Manual-Operator
20	139-9682	1	Manual-Instruction
30	139-9687	1	Bag-Plastic

Attachments and Accessories

For 22530 — Dingo TXL 2000 Tool Carrier

Product Name	Model/Part
Premium Engine Oil 10w30 (55 Gallon Drum)	121-6392
Premium Engine Oil 10w30 (5 Gallon Pail)	121-6393
Premium Engine Oil 15w40 (55 Gallon Drum)	121-6394
Premium Engine Oil 15w40 (5 Gallon Pail)	121-6395
SIDE ASM #2 - WOOD	121-9395
Locking Fuel Cap	126-4107
PX Hydraulic Fluid (5 Gal)	133-8086
PX Hydraulic Fluid (55 Gal).....	133-8087
Green Ultra-Low Sulfur Diesel Fuel Cap	136-4866
Track-Mert	136-4869
Light Kit.....	136-4890
1000 Hour Filter Kit.....	136-4897
50 Hour Filter Kit.....	136-4898
400 Hour Filter Kit.....	136-4899
PX Hydraulic Fluid-4 Pack (Gallon).....	138-9460
Telescoping Auxiliary Wire Harness Kit.....	139-1186
Grapple.....	22535
High Volume Bucket with Edge.....	22546
Standard Bucket with Edge.....	22547
Grading Bucket.....	22548
Adjustable Forks.....	22549
Standard Bucket without Edge.....	22576

Notes:



Count on it.