



Form No. 3481-505 Rev A

Count on it.

Parts Catalog

Power Max® Heavy Duty 824 Snowthrower

Model No. 39960—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Main Frame Assembly 4

Auger Drive Assembly 6

Gearbox Assembly 8

Auger Gearcase Assembly No. 136-6615 10

Engine Assembly 12

Chute Assembly 14

Quickstick Assembly 16

Handle and Control Assembly 18

Drive Assembly 20

Decal Assembly 22

Fuel System and Carburetor Assembly 24

Intake and Exhaust Assembly 26

Ignition and Electrical Assembly 28

Crankcase Assembly 30

 
Governor Assembly 32

Piston and Head Assembly 34

Blower Housing and Shrouds Assembly 36

Attachments and Accessories 38


Main Frame Assembly

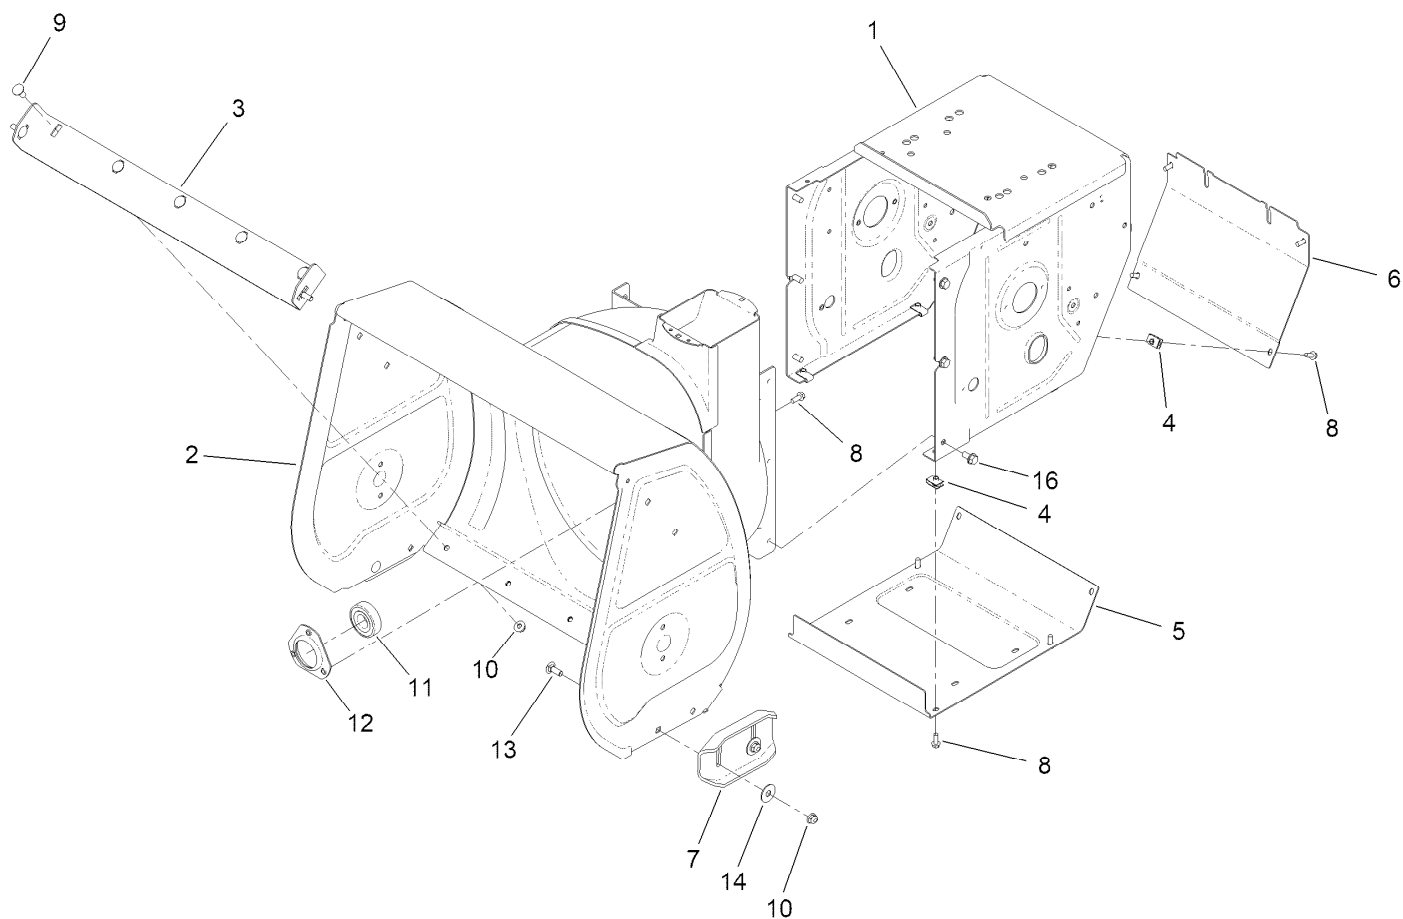

Main Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-6639-01	1	Frame-Traction	8	32144-85	11	Screw-HWH Thd Form
2	164-5443	1	Auger Housing ASM (W/Decal 24")	9	137-3061	5	Bolt-CARR
3	136-6608-01	1	Blade-Scraper, 24"	10	119-4041	9	Nut-HF
4	107069	8	Clip	11	136-6571	1	Bearing-Ball
5	163-6262-01	1	Cover-Bottom	12	136-6573	1	Retainer-Bearing
6	136-6651-01	1	Cover-Rear	13	137-3059	4	Bolt-CARR
7	106-4588-01	2	Skid	14	119-4150	4	Washer-Flat
				16	32144-14	6	Screw-HWHTF

 
Auger Drive Assembly

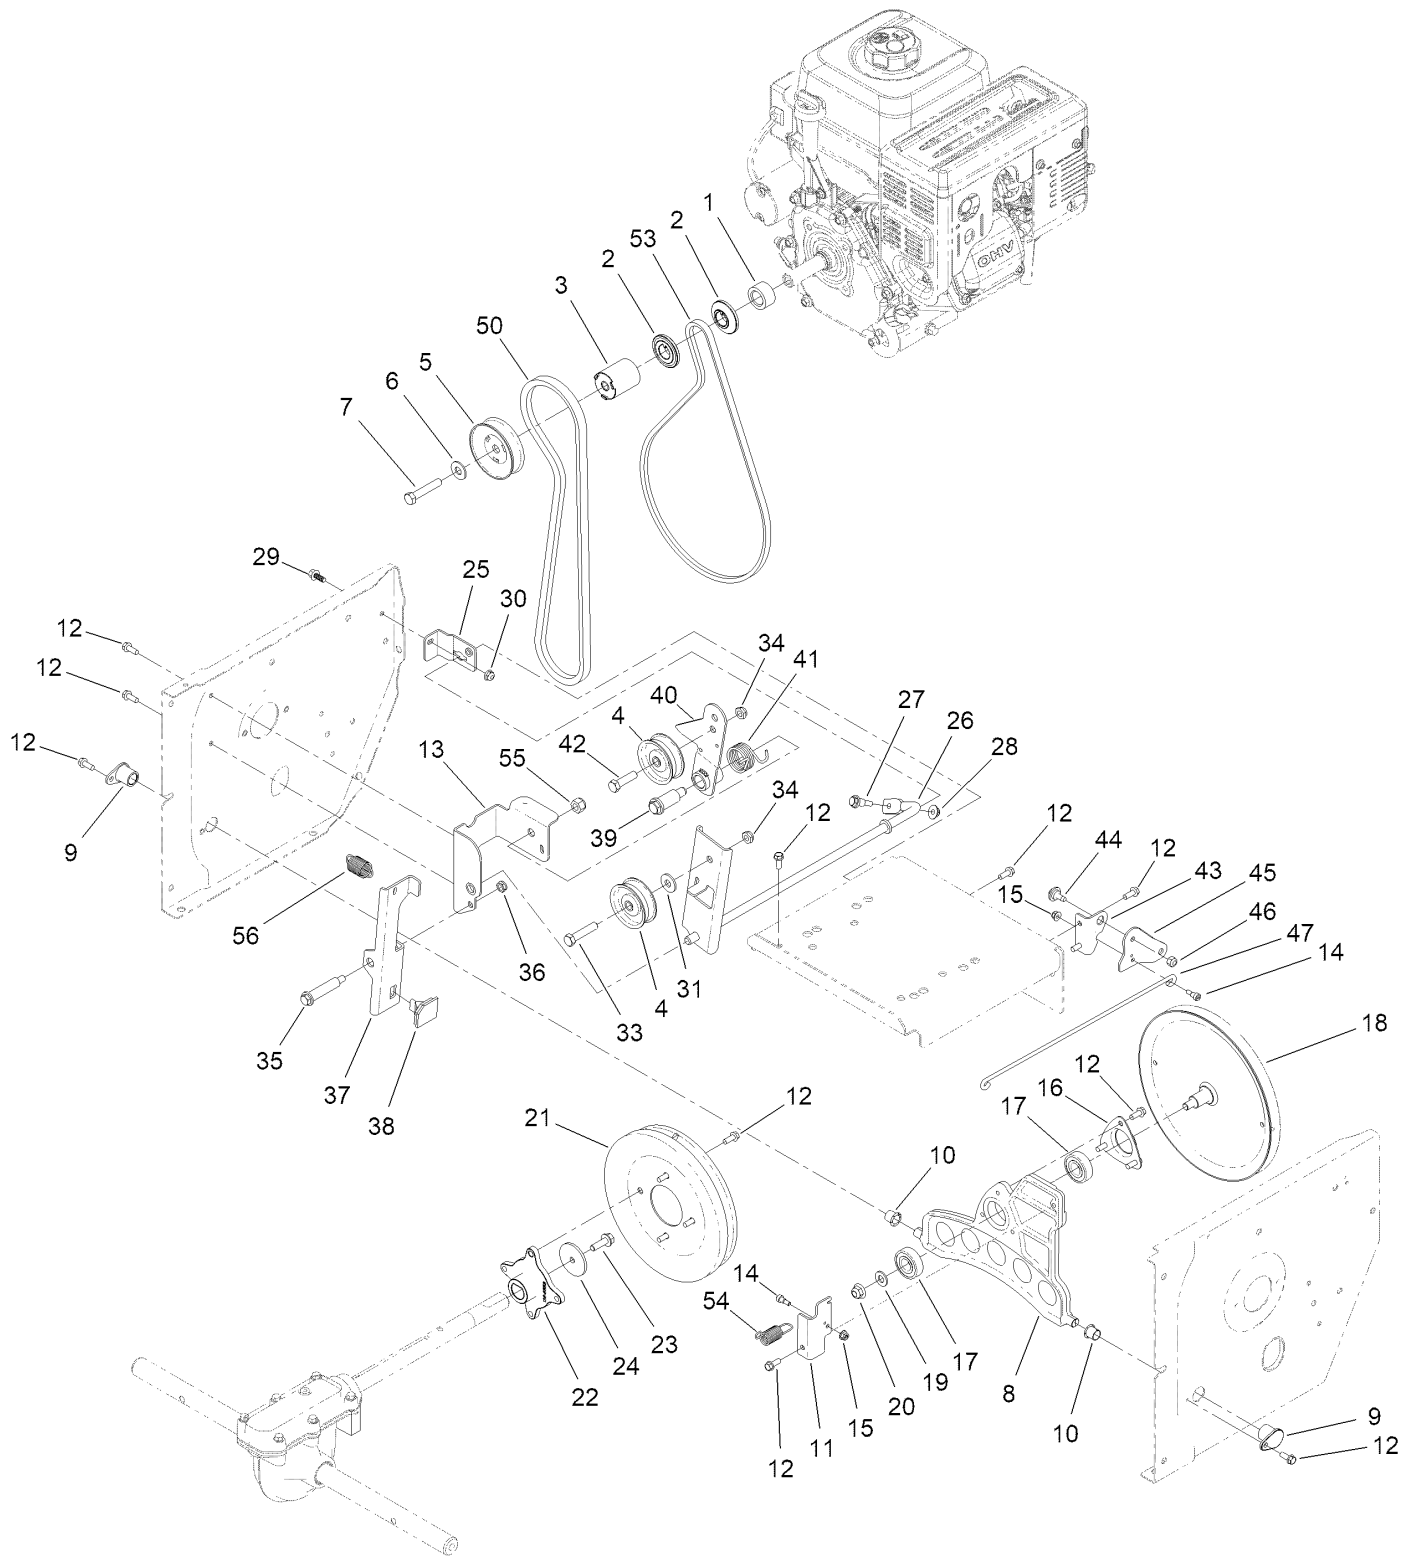

Auger Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-1242	1	Spacer	27	104-0858	1	Bolt-Shoulder
2	145-4142	2	Sheave-Traction	28	137-3016	1	Nut-HF
3	144-1241	1	Spacer-Pulley	29	137-3111	1	Screw-HHF
4	3-4244	2	Pulley-Idler	30	137-3005	1	Nut-HF
5	137-6179	1	Pulley-Impeller	31	139-2632	1	Washer-Hardened
6	137-3078	1	Washer-Plain	33	138-0722	1	Screw-HH
7	120-2302	1	Screw-HH, Patch	34	121-4600	2	Nut-Hex
8	136-6689	1	Plate-Friction, Wheel	35	136-7199	1	Bolt-Shoulder
9	120-7156	2	Bushing-Plate, Traction	36	137-3089	1	Nut-Hex
10	256-257	2	Bushing-Nyliner	37	136-6527	1	Brake Arm
11	145-4141	1	Bkt-Traction Plate	38	66-8060	1	Pad-Brake
12	32144-85	16	Screw-HWH Thd Form	39	136-7116	1	Bolt-Shoulder
13	136-8671-03	1	Bracket-Brake, Clutch	40	136-7186	1	Arm-Idler, Traction
14	94-9422	2	Screw-Shoulder	41	120-3060	1	Spring-Torsion
15	138-0719	2	Nut-HF	42	137-3065	1	Screw-HH
16	136-7124	1	Retainer-Bearing	43	136-6654	1	Bracket-Bellcrank
17	38-7820	2	Bearing-Ball	44	92-9698	1	Screw-Shoulder
18	163-6257	1	Traction Pulley ASM	45	144-1622	1	Bellcrank-Drive
19	115-1166	1	Washer-Plain	46	137-3094	1	Nut-Hex
20	119-4042	1	Nut-HF, NI	47	144-1613	1	Link-Traction, HD
21	138-0717	1	Pulley-Impeller	50	161-5972	1	Belt-V
22	136-6558	1	Hub-Pulley	53	145-4143	1	Belt 3L
23	115-5142	1	Screw-HHF, Patch	54	137-6189	1	Spring-Extension
24	137-3121	1	Washer-Plain	55	137-3095	1	Nut-Hex
25	136-8654-03	1	Bracket-Clutch, Impeller	56	147-9465	1	Spring-Extension
26	145-0670	1	Arm-Clutch, Impeller				

 
Gearbox Assembly

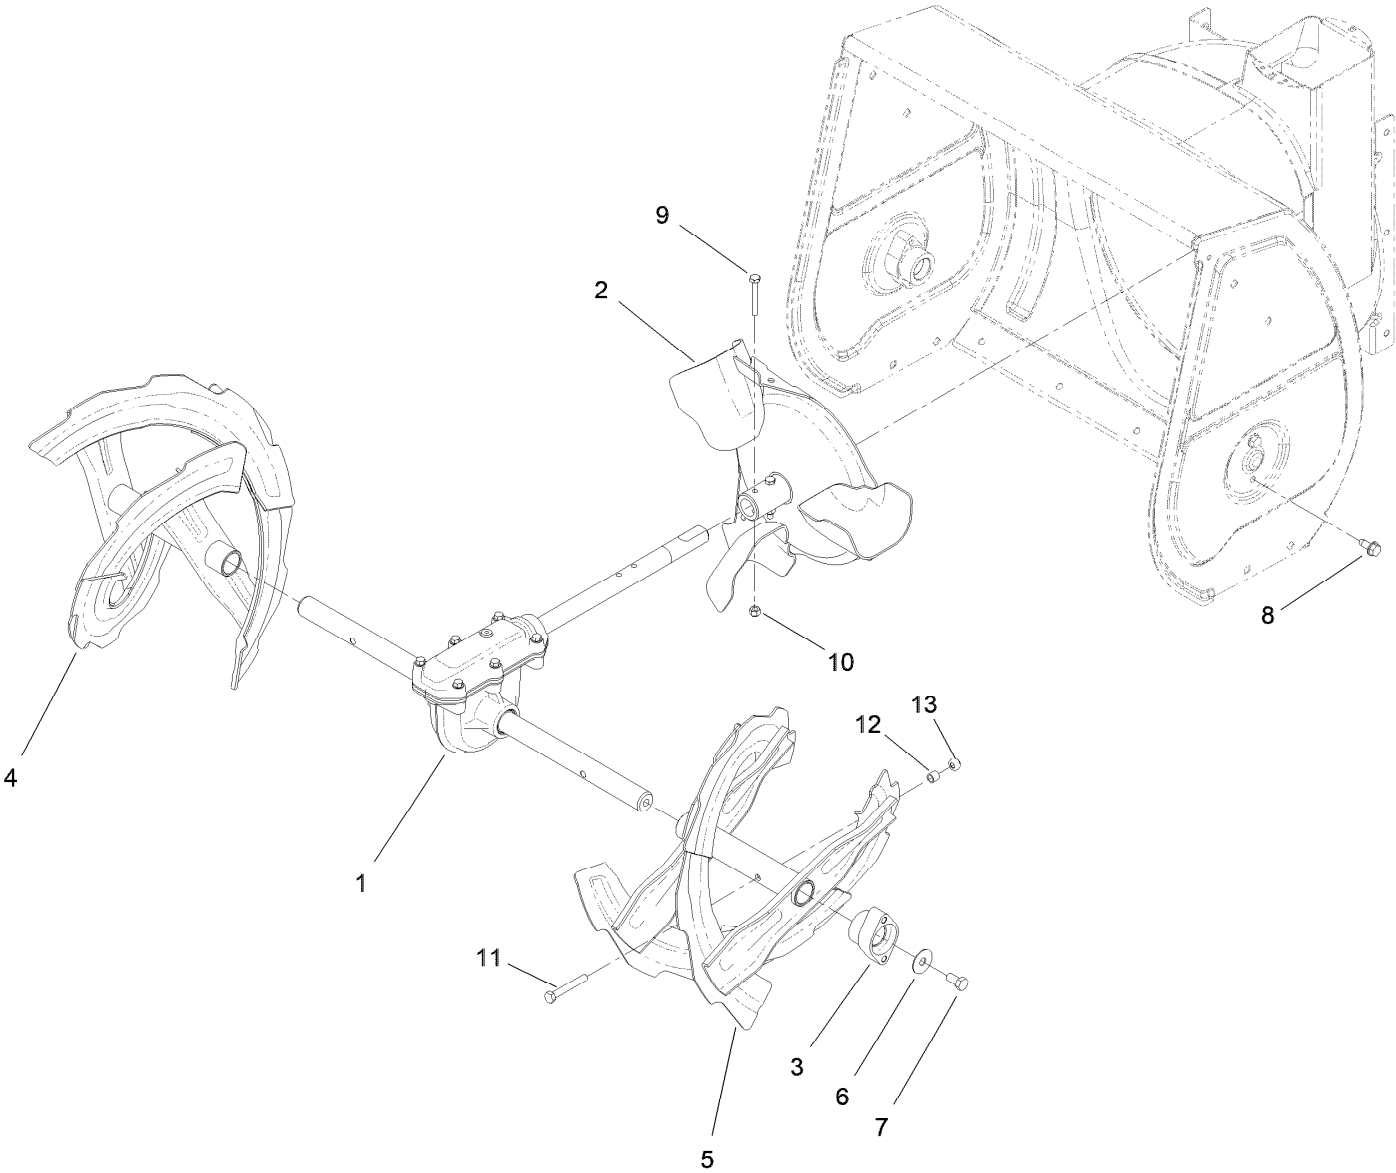

Gearbox Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-6615	1	Auger Gearcase As (24 In)	8	32144-70	4	Screw-HWHTF
2	136-6570-03	1	Impeller	9	137-3032	2	Screw-HH
3	106-4570	2	Bearing-Augur	10	137-3088	2	Nut-Hex
4	145-4101-03	1	Auger-RH, 24" [black]	11	120-9738	2	Screw-HH
5	145-4100-03	1	Auger-LH, 24" [black]	12	136-7148	2	Spacer-Grommet
6	3-0750	2	Washer	13	119-4038	2	Nut-Hex
7	137-3066	2	Screw-HH				

 
Auger Gearcase Assembly No. 136-6615

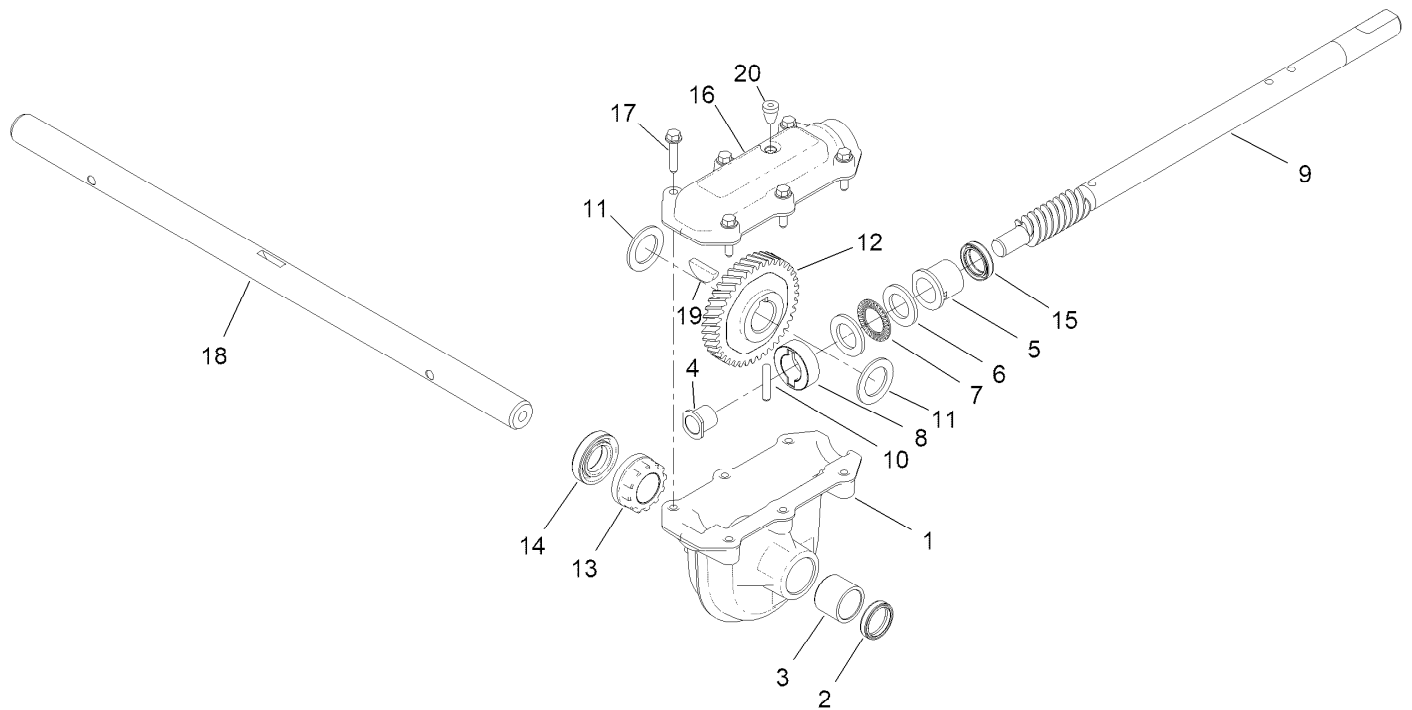

Auger Gearcase Assembly No. 136-6615 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-6547	1	Gearbox-Lower (Mach)	11	252-71	2	Washer-Thrust
2	137-6173	1	Seal-Oil	12	138-0696	1	Gear-Helical
3	112-6635	1	Bushing-Sleeve	13	136-6553	1	Bushing-Auger Output
4	136-6556	1	Bushing-Impeller Shaft, Front	14	136-6554	1	Seal-Oil
5	37-6560	1	Bushing-Input	15	137-6174	1	Seal-Oil
6	252-78	2	Washer-Thrust	16	136-6546	1	Cover-Gearcase
7	252-76	1	Bearing-Thrust	17	108-4862	6	Screw-HWH Thd Roll
8	136-6555	1	Collar-Thrust	18	136-6618	1	Shaft-Auger, 24
9	137-6175	1	Shaft-Impeller	19	3257-10	1	Key-Woodruff
10	107-8899	1	Pin-Dowel	20	138-3629	1	Plug-Oil

 
Engine Assembly

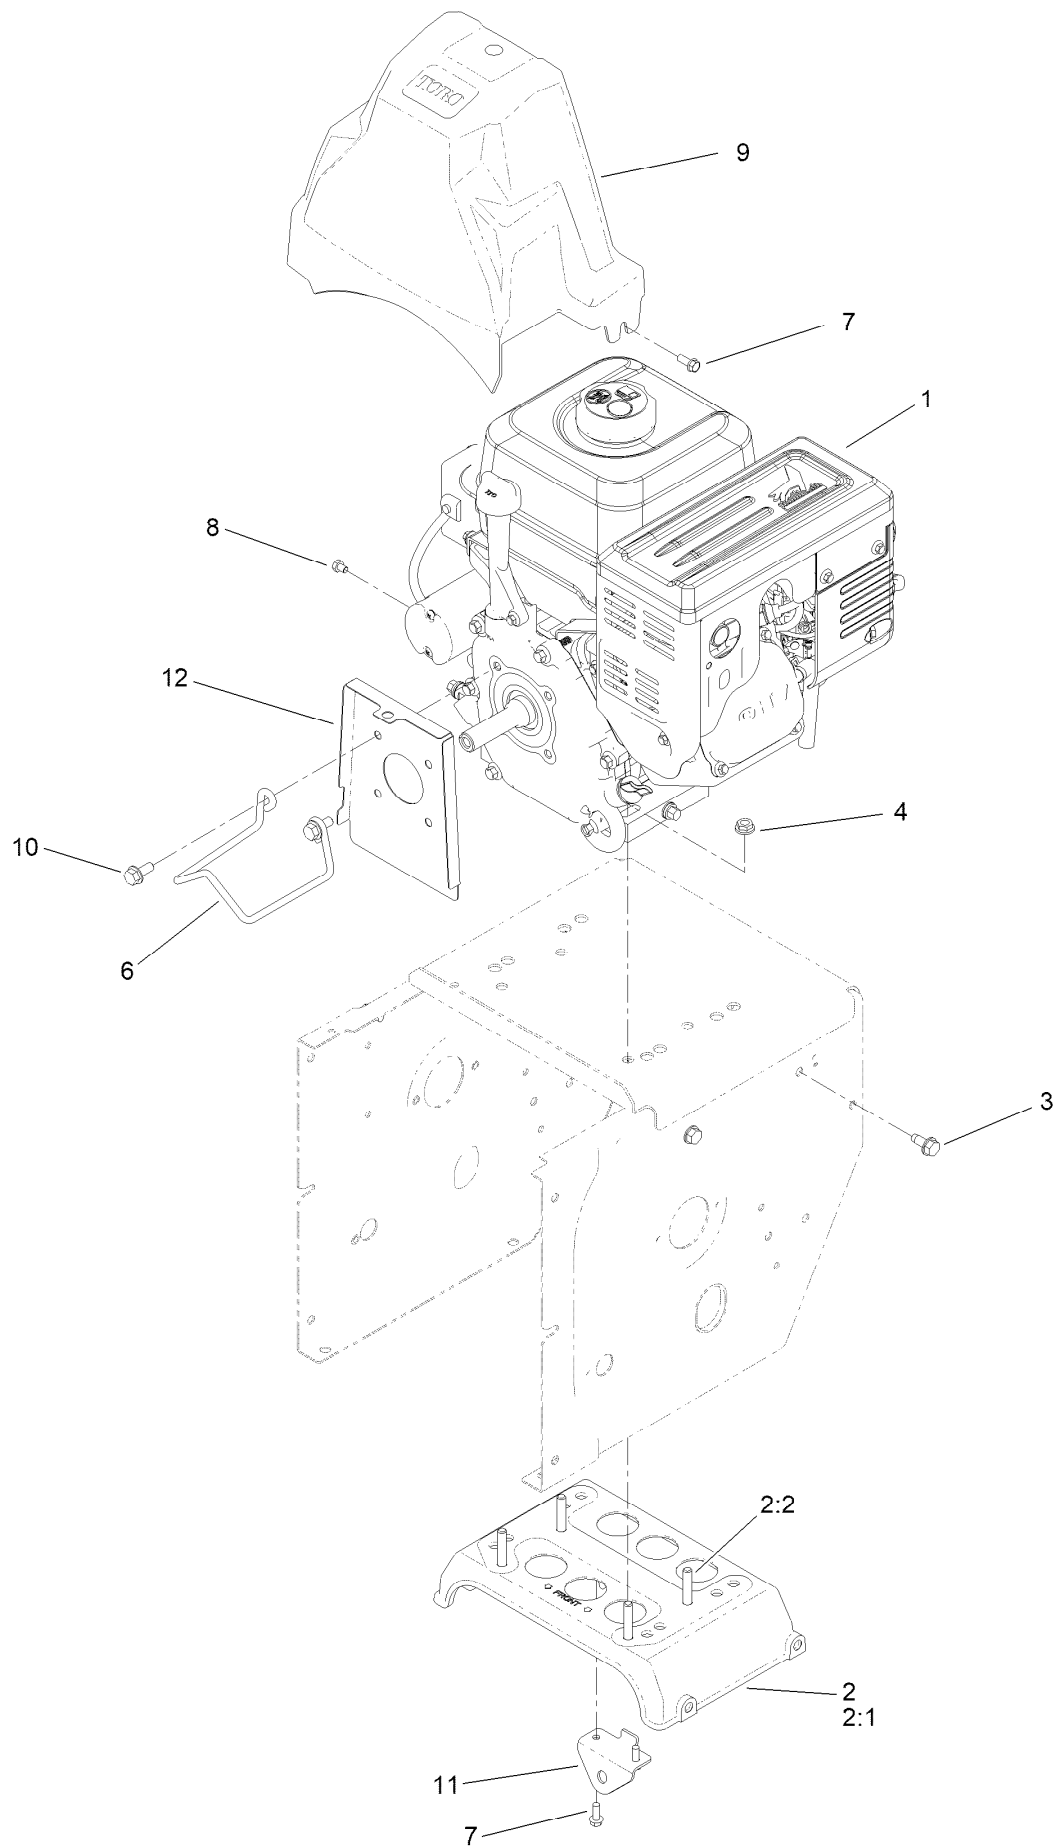

Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-7057	1	Engine-G250Fds-1	6	144-2816	1	Guide-Belt
2	144-1625	1	Engine Plate ASM (G250)	7	32144-85	4	Screw-HWH Thd Form
2:1	144-1626	1	Plate-Engine	8	121-4615	1	Screw-HH
2:2	136-7178	4	Stud-Press 95/16-18 X 1.625)	9	138-0731	1	Belt Cover, No Light
3	32144-70	4	Screw-HWHTF	10	138-0690	2	Screw-HHF,Patch
4	137-3039	4	Nut-HF	11	136-6644-03	1	Bracket-Control, Traction
				12	140-7945-03	1	Cover-Crank

 Chute Assembly

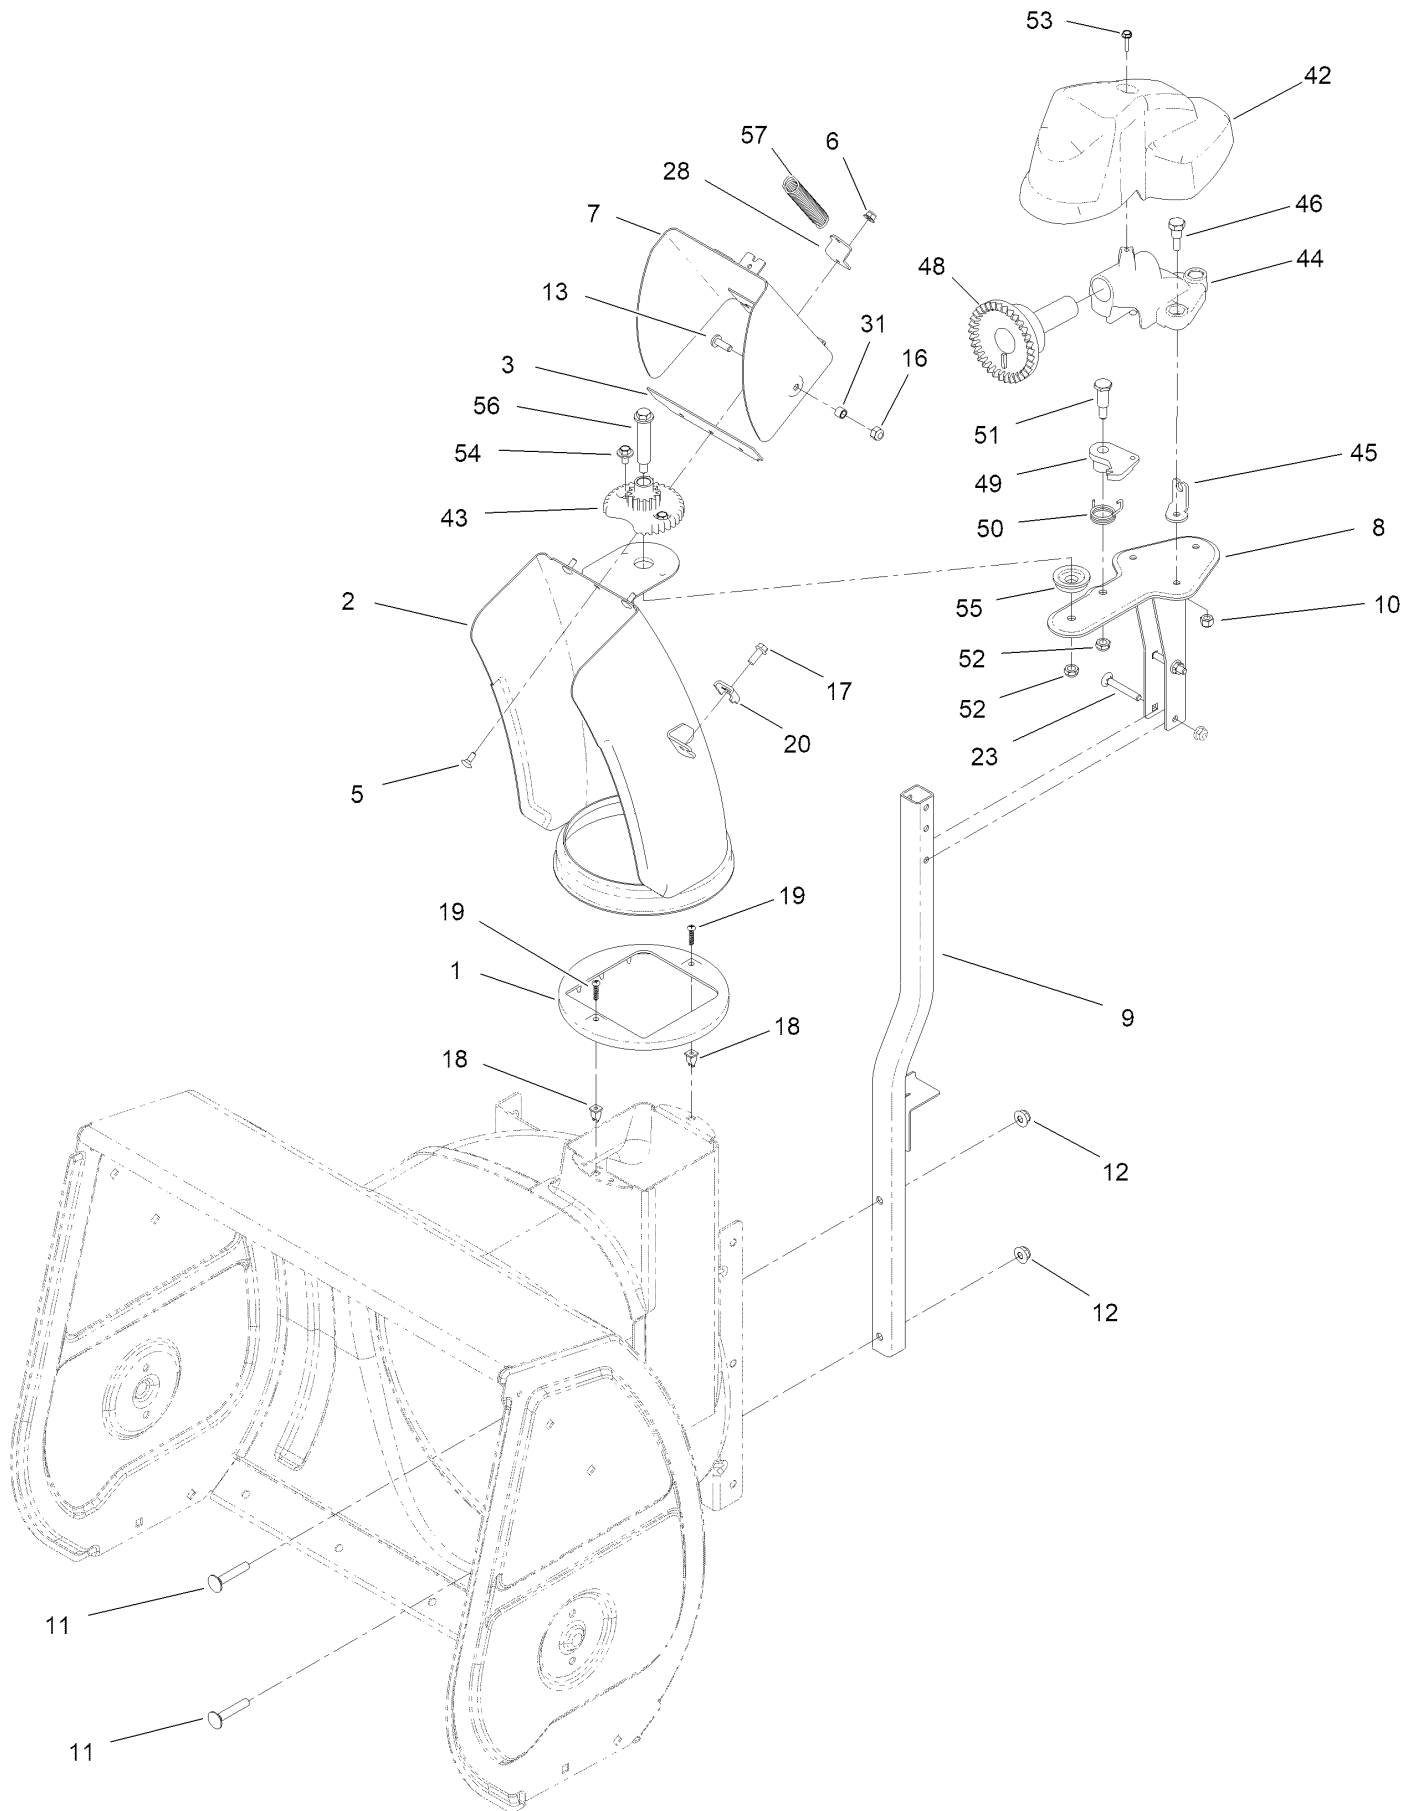


Chute Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-6515	1	Guide-Chute	23	120-9698	2	Bolt-CARR
2	144-1246-01	1	Chute-Lower ASM [red]	28	138-3612-01	1	Bracket-Spring
3	138-3671	1	Gasket-Deflector	31	138-3678	1	Spacer
5	135-1929	3	Bolt-CARR	37	321-3	2	Screw-HH ●
6	138-0719	3	Nut-HF	42	136-6672	1	Cover-Gear, Face
7	164-5442	1	Deflector-W/Decal	43	106-4472	1	Gear-Chute
8	145-0691-03	1	Support-Chute Weld ASM, Upper	44	136-6517	1	Mount-Gear, Face
9	144-1647-03	1	Support-Chute Weld ASM, Lower	45	136-6676	1	Anchor-Cable
10	137-3088	3	Nut-Hex	46	136-7197	3	Screw-Shoulder
11	137-3063	2	Bolt-Car	48	106-4471	1	Gear-Face
12	119-4041	2	Nut-HF	49	136-6525	1	Latch-Chute
13	138-0689	1	Screw-PH	50	108-7315	1	Spring-Torsion
16	137-3094	1	Nut-Hex	51	137-3103	1	Screw-Shoulder, HH
17	32144-85	1	Screw-HWH Thd Form	52	137-3089	1	Nut-Hex
18	136-6586	2	Grommet-Screw	53	137-3110	1	Screw-Plastite, HWH
19	94-4496	2	Screw-PPH	54	46-6810	2	Screw And Washer ASM
20	136-7191	1	Clamp-Cable	55	106-4422	1	Spacer-Chute
				56	136-7199	1	Bolt-Shoulder
				57	138-8493	1	Spring-Chute, Upper

● Not illustrated

 
Quickstick Assembly

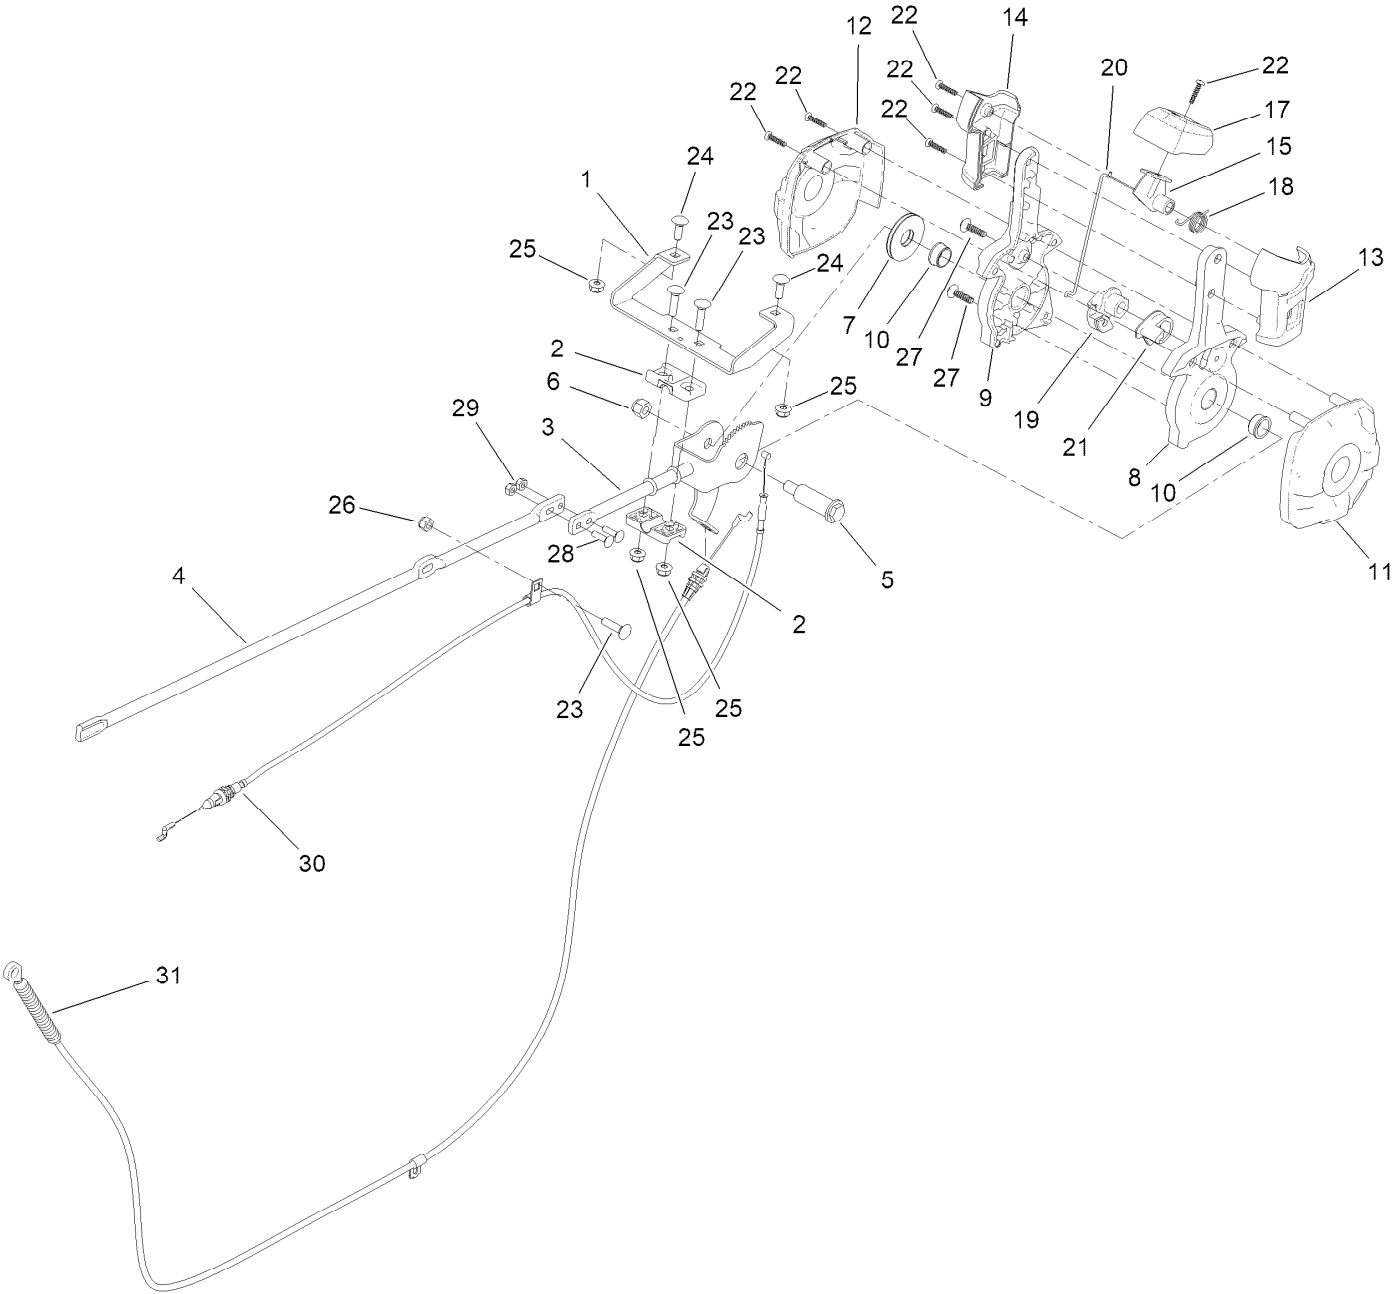

Quickstick Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	164-2796-03	1	Bracket-Dash, Qs	17	164-4900	1	Cap-Lever
2	105-9987	2	Support-Rod	18	105-9982	1	Spring-Torsion
3	164-4911	1	ASM-Control, Chute Rod	19	105-9988	1	Lever-Cable, Deflector
4	164-4910	1	Rod-Chute-Gear	20	138-0688	1	Link-Latch
5	138-0659	1	Screw-Shoulder, HWH	21	106-7310	1	Pawl-Latch
6	137-3087	1	Nut-Hex	22	94-4496	6	Screw-PPH
7	138-0744	1	Washer-Friction, Composite	23	137-3056	3	Bolt-CARR
8	161-1195	1	Handle-LH	24	137-3053	2	Screw-CARR
9	161-1194	1	Handle-RH	25	119-4040	4	Nut-HF, NI
10	126-6199	2	Bushing	26	137-3094	1	Nut-Hex
11	161-1199	1	Cover-LH	27	120-2349	2	Screw
12	161-1198	1	Cover-RH	28	139-2629	2	Screw-CARR
13	161-1196	1	Grip-LH	29	137-3085	2	Nut-Hex
14	161-1197	1	Grip-RH	30	139-9903	1	Cable-Release, Chute
15	137-6238	1	Trigger-Latch	31	164-2791	1	Cable-Deflector Control

 
Handle and Control Assembly

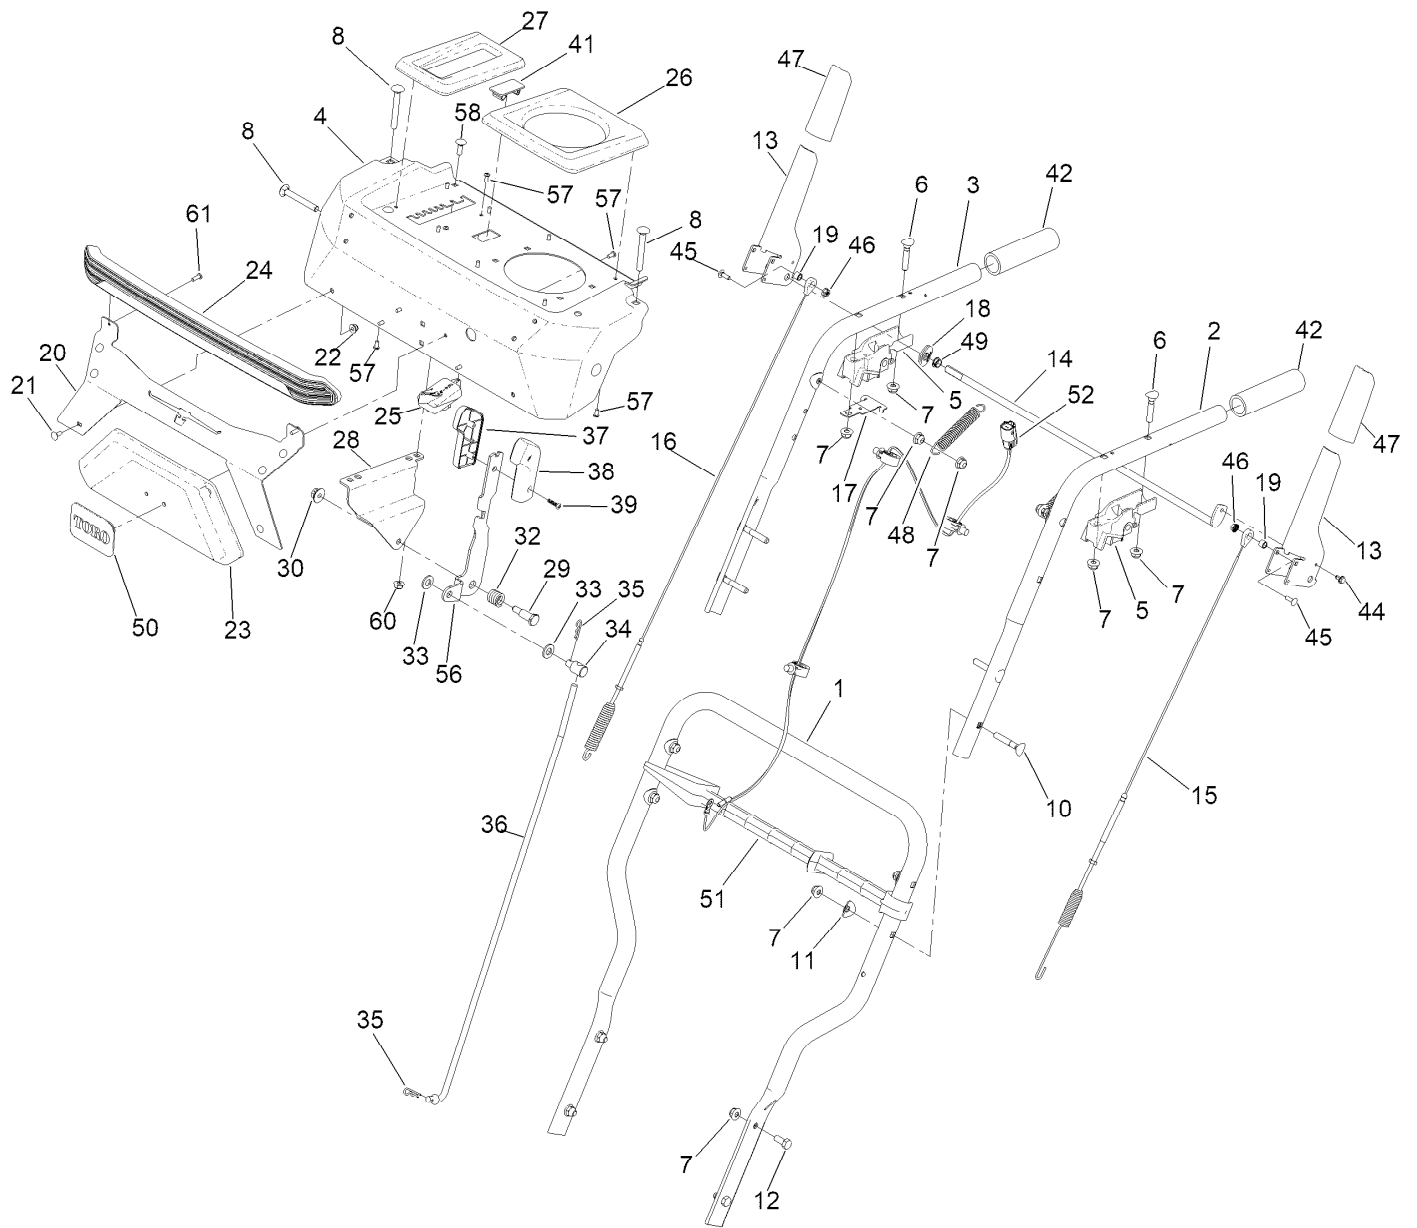

Handle and Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-0275-03	1	Handle-Lower	29	137-3103	1	Screw-Shoulder, HH
2	161-5780-03	1	Handle-Upper, LH	30	137-3038	1	Nut-HF
3	161-5781-03	1	Handle-Upper, RH	32	136-7121	1	Spring-Compression
4	163-6250-01	1	Control Panel	33	115-1166	2	Washer-Plain
5	145-4149	2	Block, Hand Controls	34	136-7193	1	Trunnion-Rod
6	137-3008	2	Screw-Handle	35	137-3083	2	Pin-Hair
7	138-8401	16	Nut-HF	36	137-6225	1	Rod-Shift
8	164-5422	4	Screw-CARR	37	164-4906	1	Knob-Shift, RH
10	137-3107	4	Screw-Handle	38	164-4907	1	Knob-Shift, LH
11	137-3009	6	Washer-Cup	39	94-4496	2	Screw-PPH
12	137-3052	4	Screw-HH	41	99-7420	1	Plug-Hole
13	163-0268-03	2	Lever-Snow	42	161-5998	2	Grip-Handle
14	163-0272	1	Rod-Pivot	44	104-2065	1	Screw-HWH
15	145-4130	1	Cable-Traction	45	137-9471	2	Screw-CARR
16	145-4131	1	Cable-Auger	46	118-1721	2	Nut,Hex Flange,10-24,Sst, Rie2006
17	163-0299	1	Latch-Lockout	47	161-1173	2	Grip-Lever
18	164-0556	1	Cam	48	138-8493	2	Spring-Chute, Upper
19	138-3678	2	Spacer	49	5979	1	Bushing-Nyliner
20	163-6207-03	1	HD Front Panel	50	164-2753	1	Logo, Toro
21	135-1929	6	Bolt-CARR	51	110-3408	1	Stick-Cleanout
22	138-0719	6	Nut-HF	52	164-2745	1	Harness-Wire, LED
23	163-6204	1	Nameplate-Housing	56	137-6231-03	1	Selector-Speed
24	164-2710	1	Lightbar-Light	57	105-9437	14	Screw-PPH
25	164-2711	1	Lightbar-Box	58	137-3053	2	Screw-CARR
26	164-2785	1	Qs-Plate	60	119-4040	2	Nut-HF, NI
27	164-2707	1	Trim, Speed Control	61	94-6961	2	Screw
28	163-0265-03	1	Bracket-Traction				

 
Drive Assembly

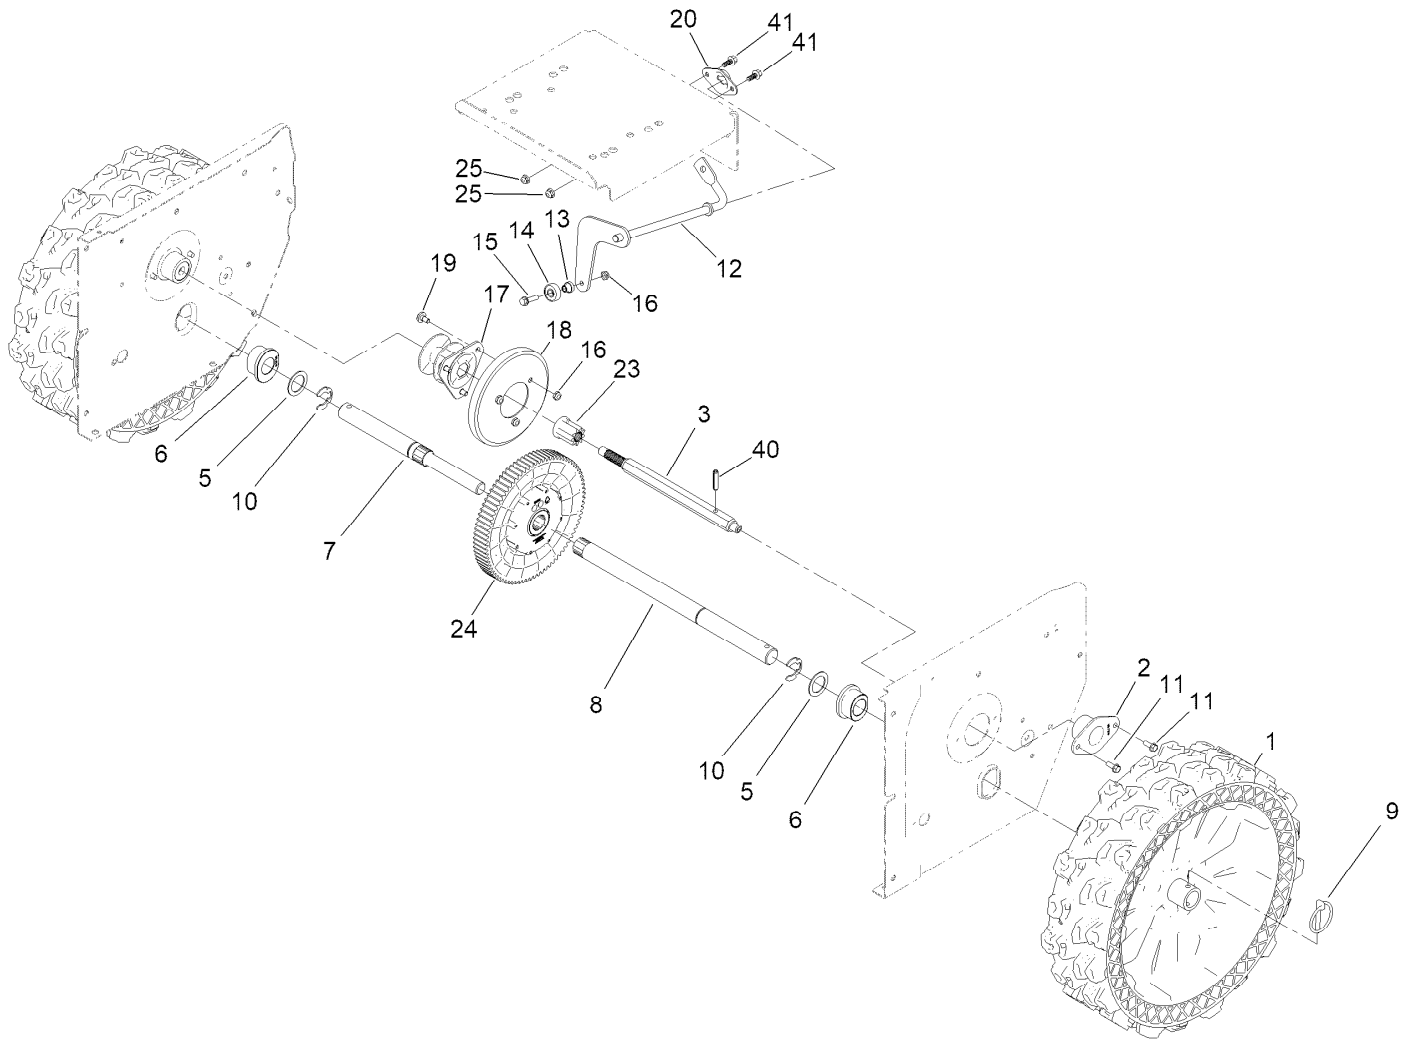

Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-4145	2	16" Airless Snow Tire	14	121-6835	1	Bearing-Ball
2	108-7319	2	Retainer-Bearing	15	32144-86	1	Screw-HWHTF
3	163-6259	1	Shaft-Hex, HD	16	137-3091	4	Nut-Hex
5	138-0725	2	Washer-Thrust	17	119-7630	1	Trunnion
6	136-6641	2	Bushing-Axle	18	119-1567	1	Wheel-Friction
7	140-3711	1	Axle-Rt, HD	19	137-6246	3	Screw-Shoulder
8	140-3736	1	Axle -Lt, HD	20	136-6647-03	1	Retainer-Rod, Shift
9	138-3642	2	Pin-Klik	23	163-6261	1	Gear-Pinion 9 Tooth
10	32151-91	2	Ring-Retaining	24	163-6260	1	Transmission-Gt, Di200
11	32144-85	4	Screw-HWH Thd Form	25	137-3005	2	Nut-HF
12	137-6162-03	1	Rod-Shift	40	32121-9	1	Pin-Roll, Slotted
13	119-7684	1	Spacer-Plate, Shift	41	137-3111	2	Screw-HHF

 
Decal Assembly

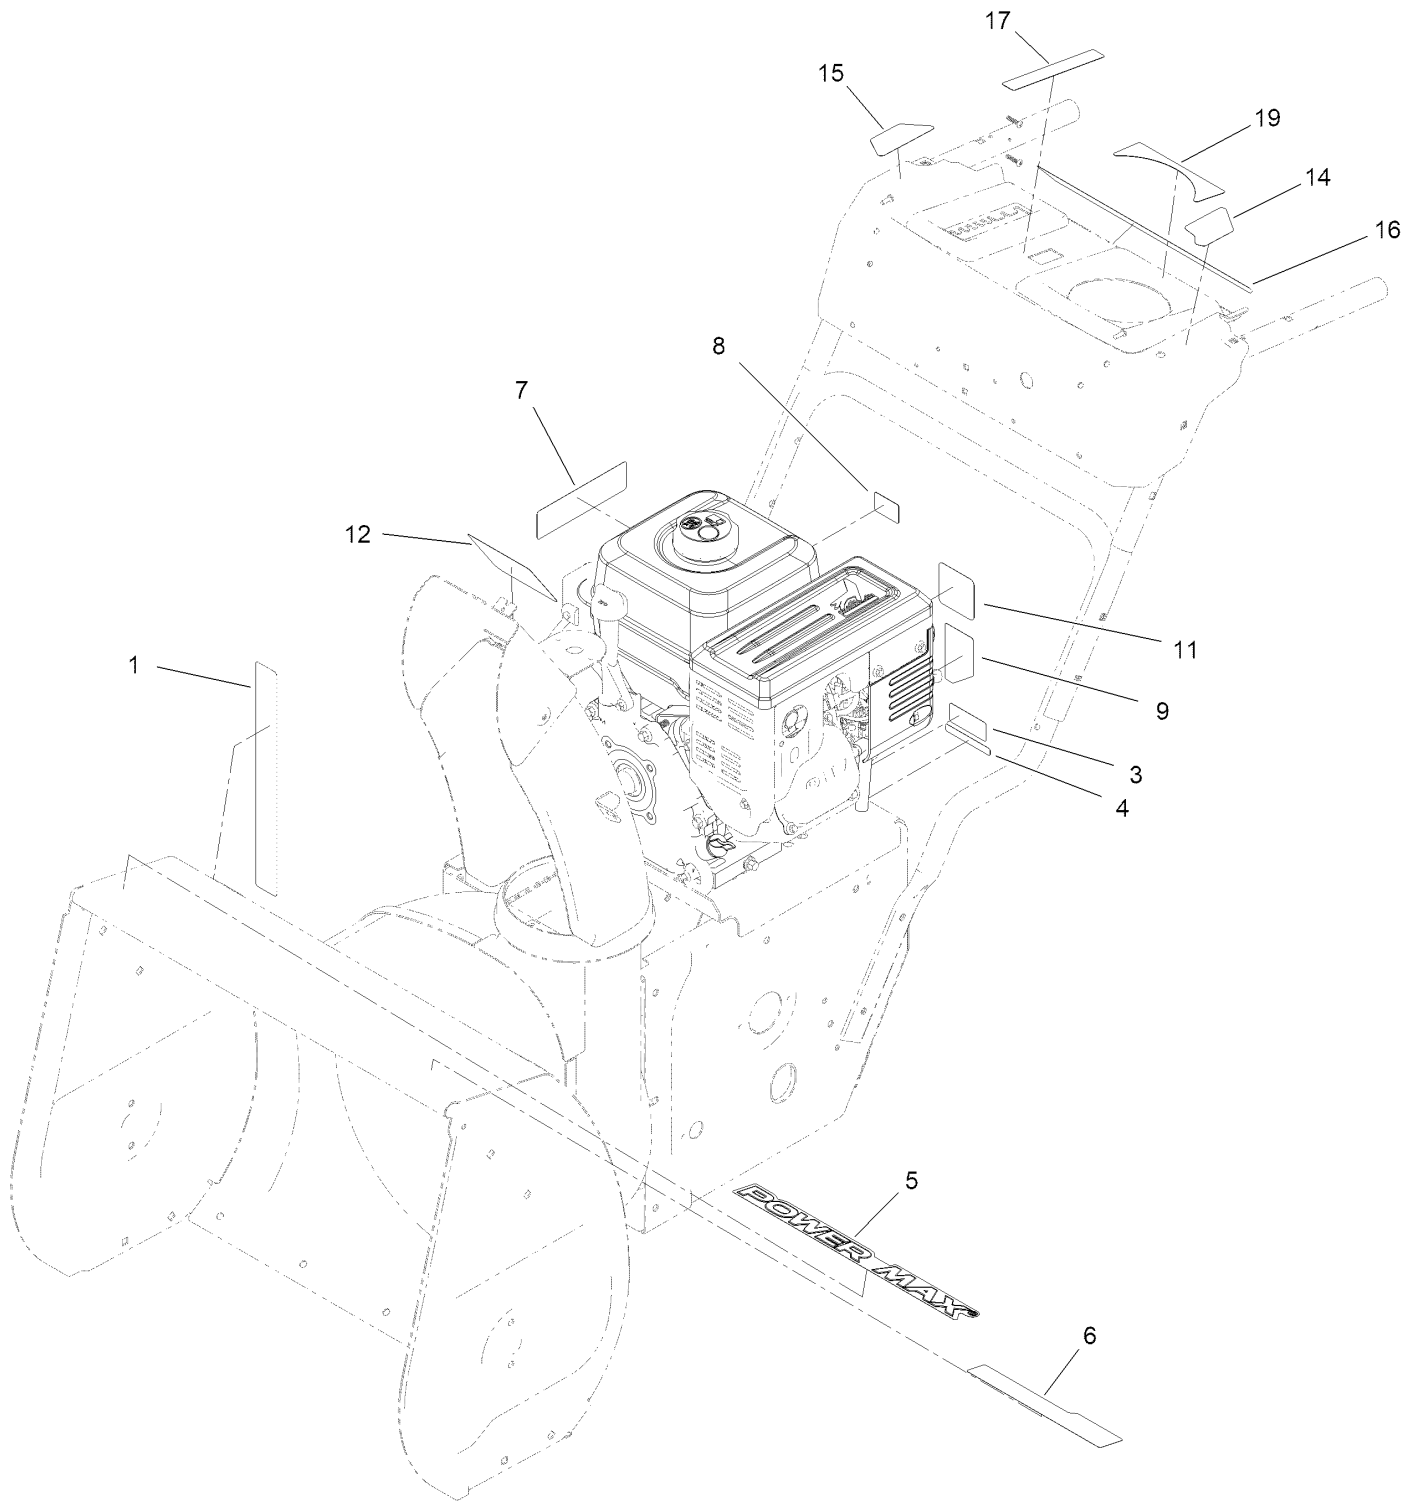

Decal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	164-2713	1	Decal-Safety	9	120-9805	1	Decal-Control, Engine
3	121-5684	1	Decal-Location, Service Dealer	11	131-5912	1	Decal-Recoil, G250
4	133-8061	1	Decal-Warning	12	137-6198	1	Decal-Danger
5	164-2720	1	Decal-Power Max	14	164-2715	1	Decal-Drive
6	164-5403	1	Decal-Heavy Duty 24	15	164-2714	1	Decal-Auger
7	161-6034	1	Decal - 252Cc Ohv	16	164-5400	1	Decal-Power Max, HD 24
8	125-1102	1	Decal-Throttle	17	164-2717	1	Decal-Throttle
				19	164-2716	1	Decal-Quick Stick

 Fuel System and Carburetor Assembly

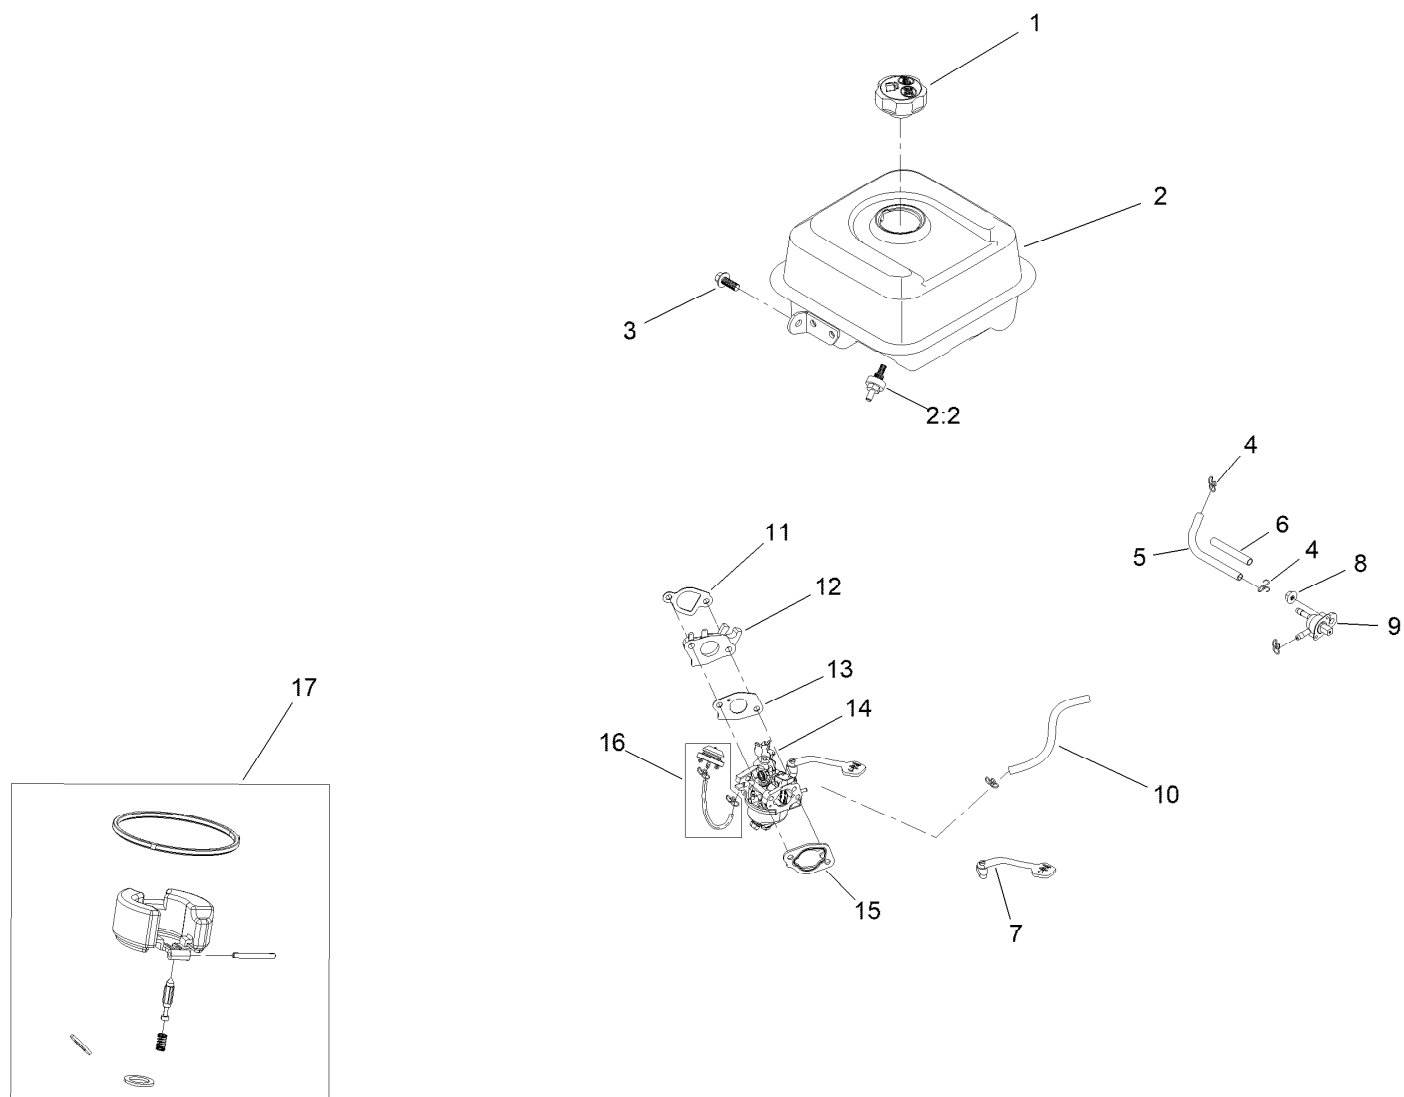


Fuel System and Carburetor Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-9823	1	Cap-Fuel	10	147-7086	1	Hose-Fuel
2	133-1553	1	Fuel Tank And Filter ASM	11	133-1531	1	Gasket-Carburetor
2:2	127-9065	1	Filter-Fuel	12	133-1532	1	Insulator-Carburetor
3	121-0294	1	Screw-HHF	13	133-1533	1	Gasket-Carburetor
4	147-7077	4	Clip-Hose	14	133-1534	1	Carburetor ASM
5	147-7087	1	Hose-Fuel	15	121-0080	1	Gasket-Carburetor
6	147-7088	1	Sleeve-Abrasion	16	127-9079	1	Primer Kit
7	147-7096	1	Lever-Choke	17	127-9395	1	Internal Carb Service Kit
8	120-4236	1	Nut-Flange	99	133-9937	1	High Altitude Kit ●
9	127-9117	1	Valve-Fuel				

● Not illustrated

 Intake and Exhaust Assembly

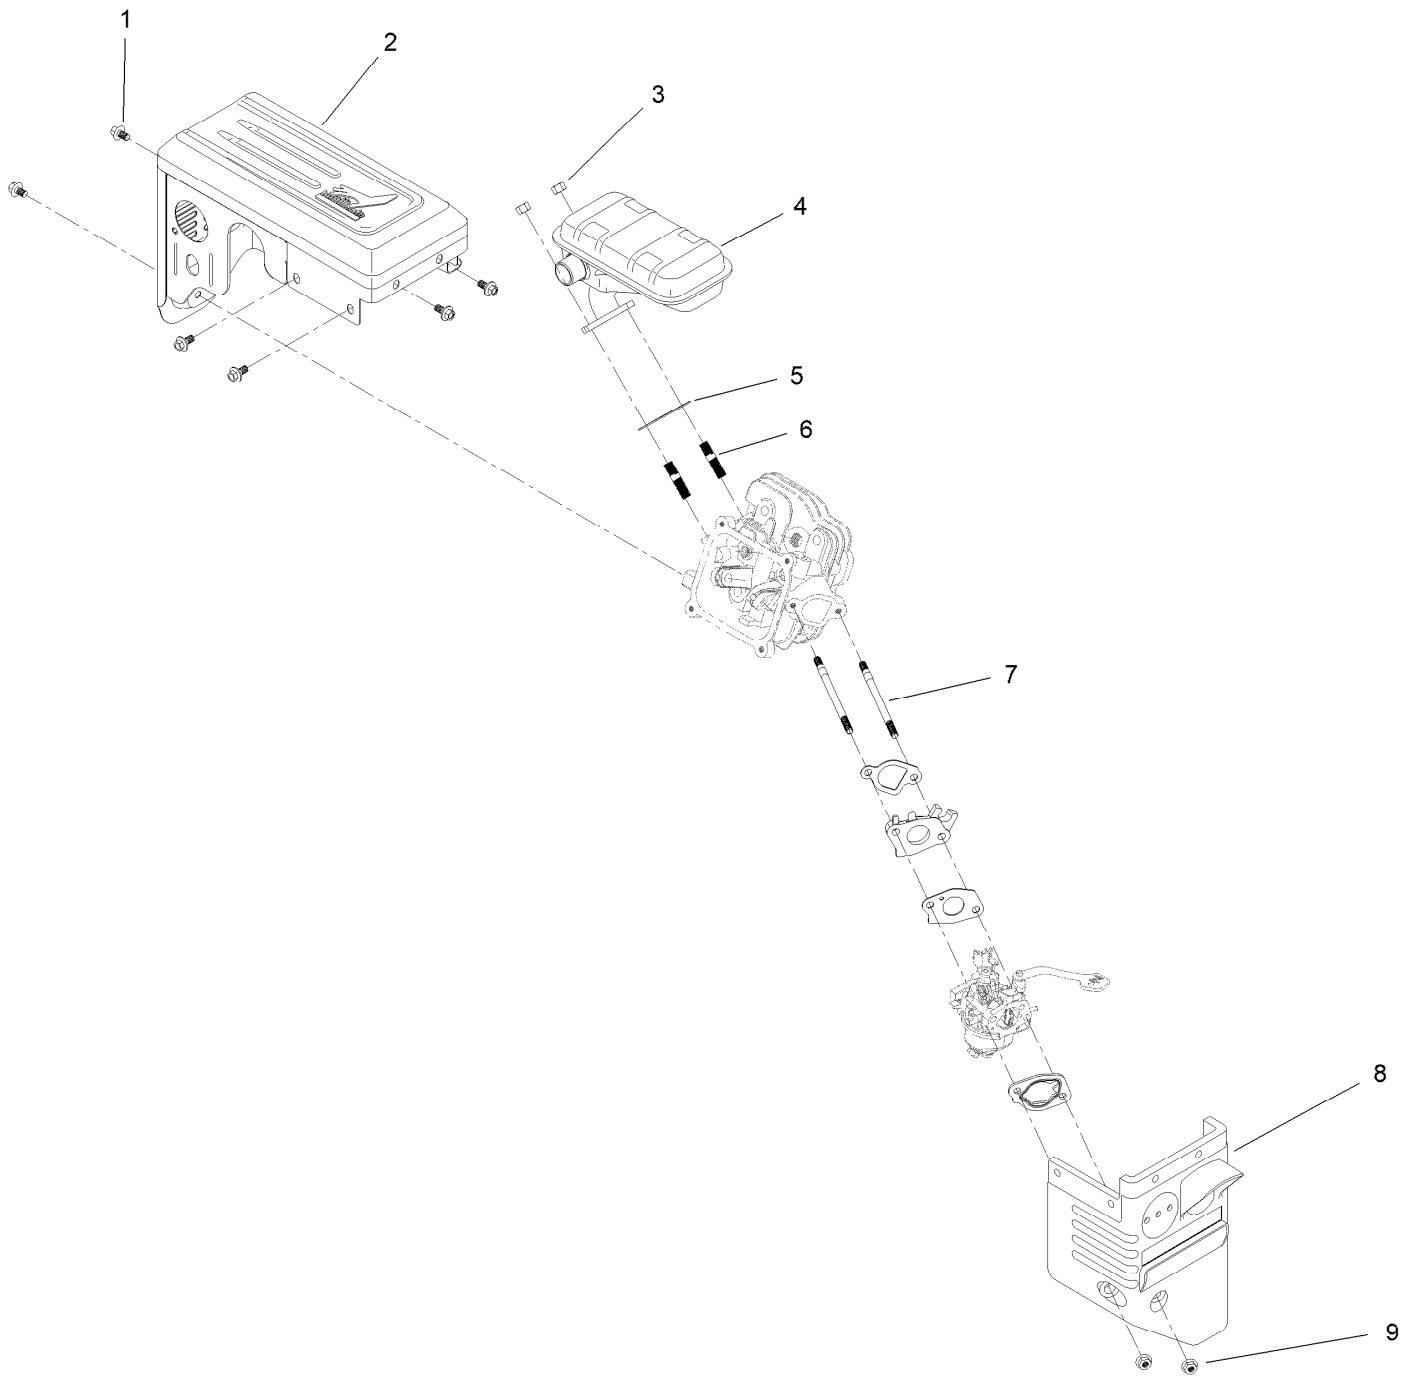


Intake and Exhaust Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-0294	6	Screw-HHF
2	127-9491	1	Muffler Cover ASM
3	121-0199	2	Nut-HH
4	127-9490	1	Muffler ASM
5	133-1539	1	Gasket-Exhaust

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	121-0464	2	Stud-Exhaust
7	121-4112	2	Stud-Intake
8	127-9112	1	Box-Heater
9	121-0308	2	Nut-Flange

 
Ignition and Electrical Assembly

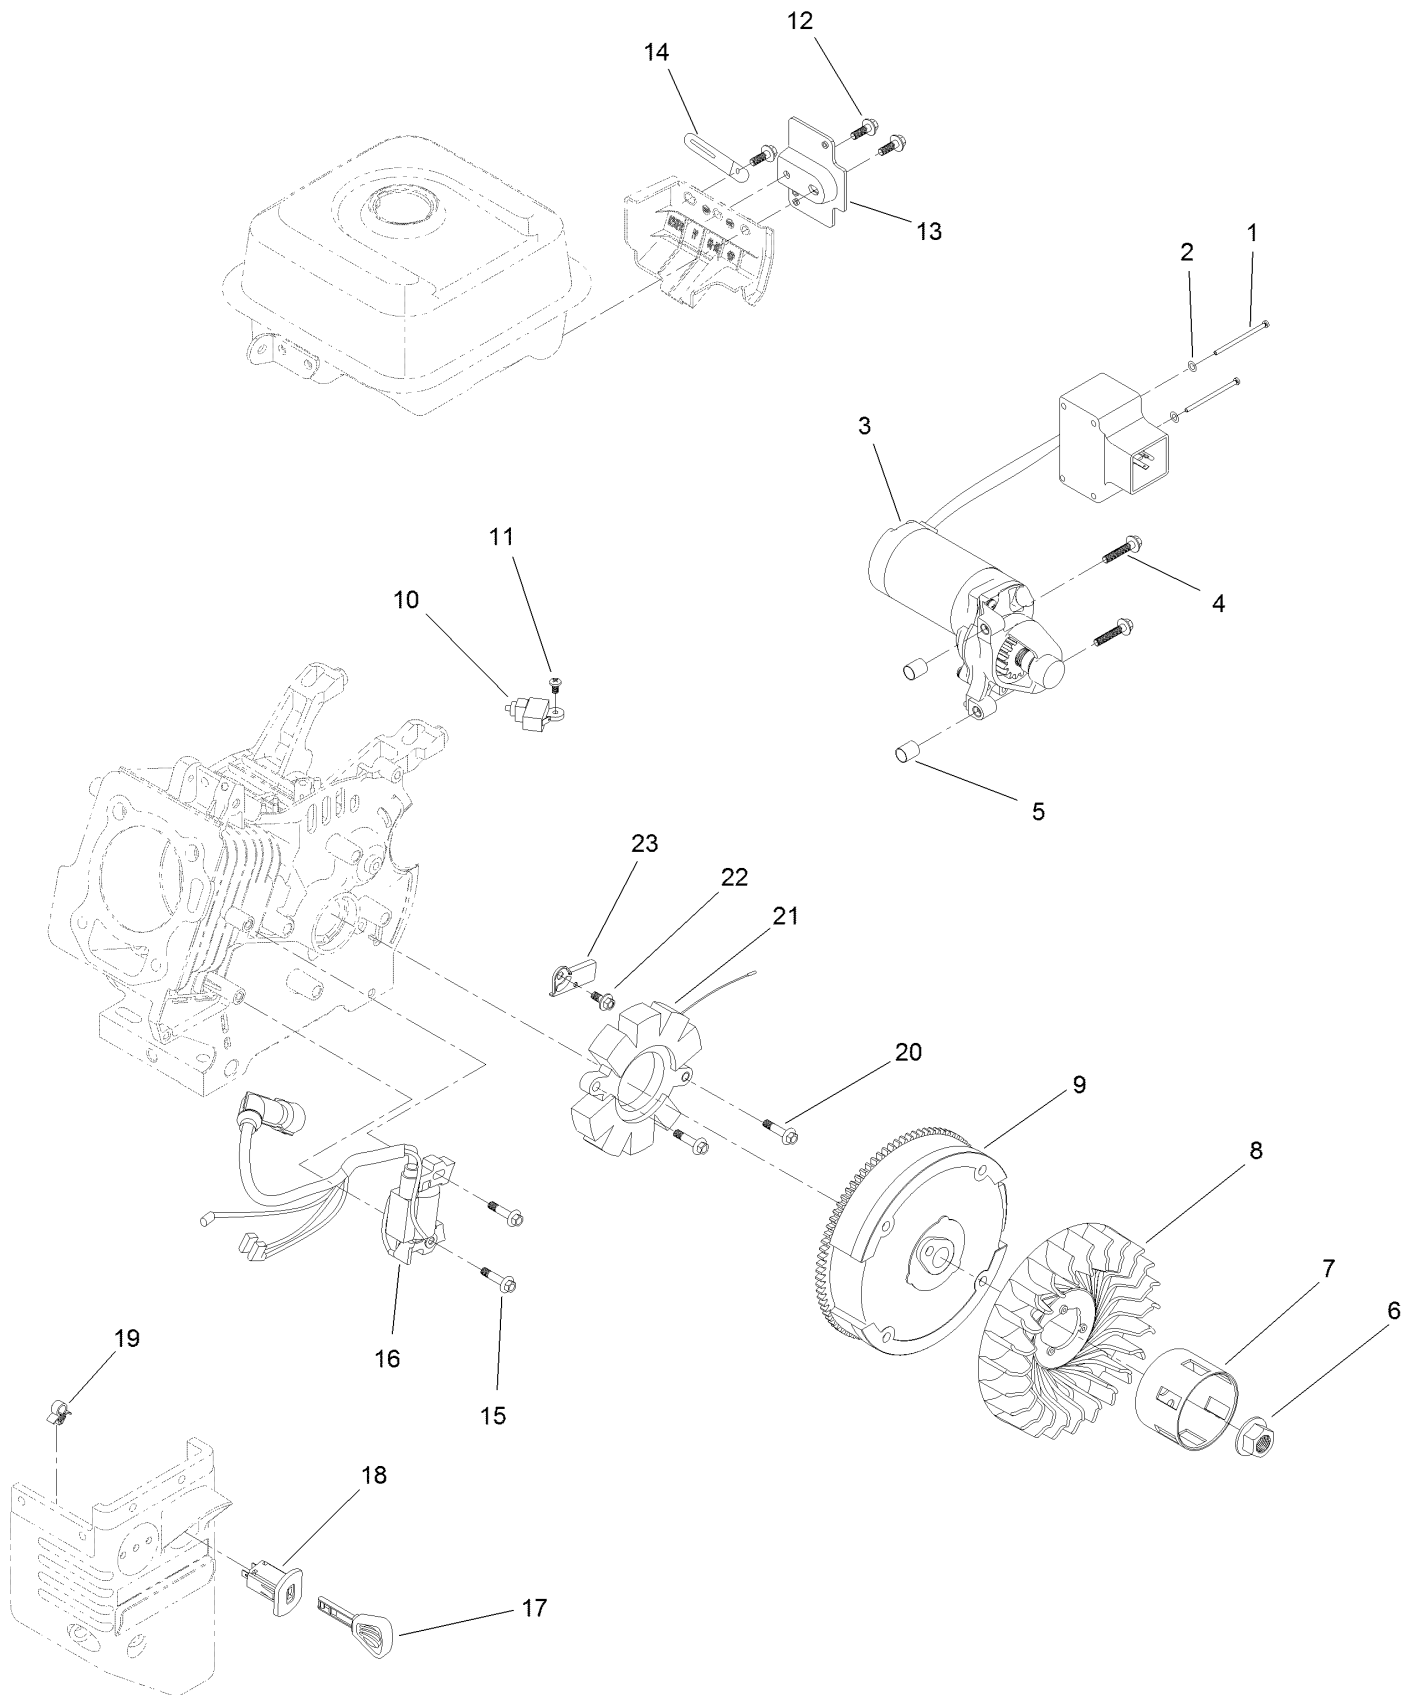

Ignition and Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-0306	2	Screw-Bhp	13	133-1554	1	Bracket-Switchbox, Starter
2	121-0312	2	Washer-Plain	14	121-0017	1	Clip-Harness, Wire
3	144-0988	1	Motor-Starter	15	121-0097	2	Screw-HHF
4	133-1546	2	Screw-Flange	16	133-9996	1	Ignition Coil ASM
5	121-0055	2	Pin-Dowel	17	117-7728	1	Key
6	121-0047	1	Nut-Flange	18	121-0283	1	Switch-Key
7	133-1527	1	Cup-Starter	19	121-0326	1	Clip
8	133-1526	1	Fan-Cooling	20	121-0196	2	Screw-HHF
9	127-9484	1	Flywheel ASM	21	127-9485	1	Alternator
10	121-0284	1	Switch-Kill, Engine	22	121-0116	1	Screw-HHF
11	120-4461	1	Screw-PPH	23	127-9486	1	Clamp-Wire, Charge
12	127-9123	3	Screw-HHF				

 
Crankcase Assembly

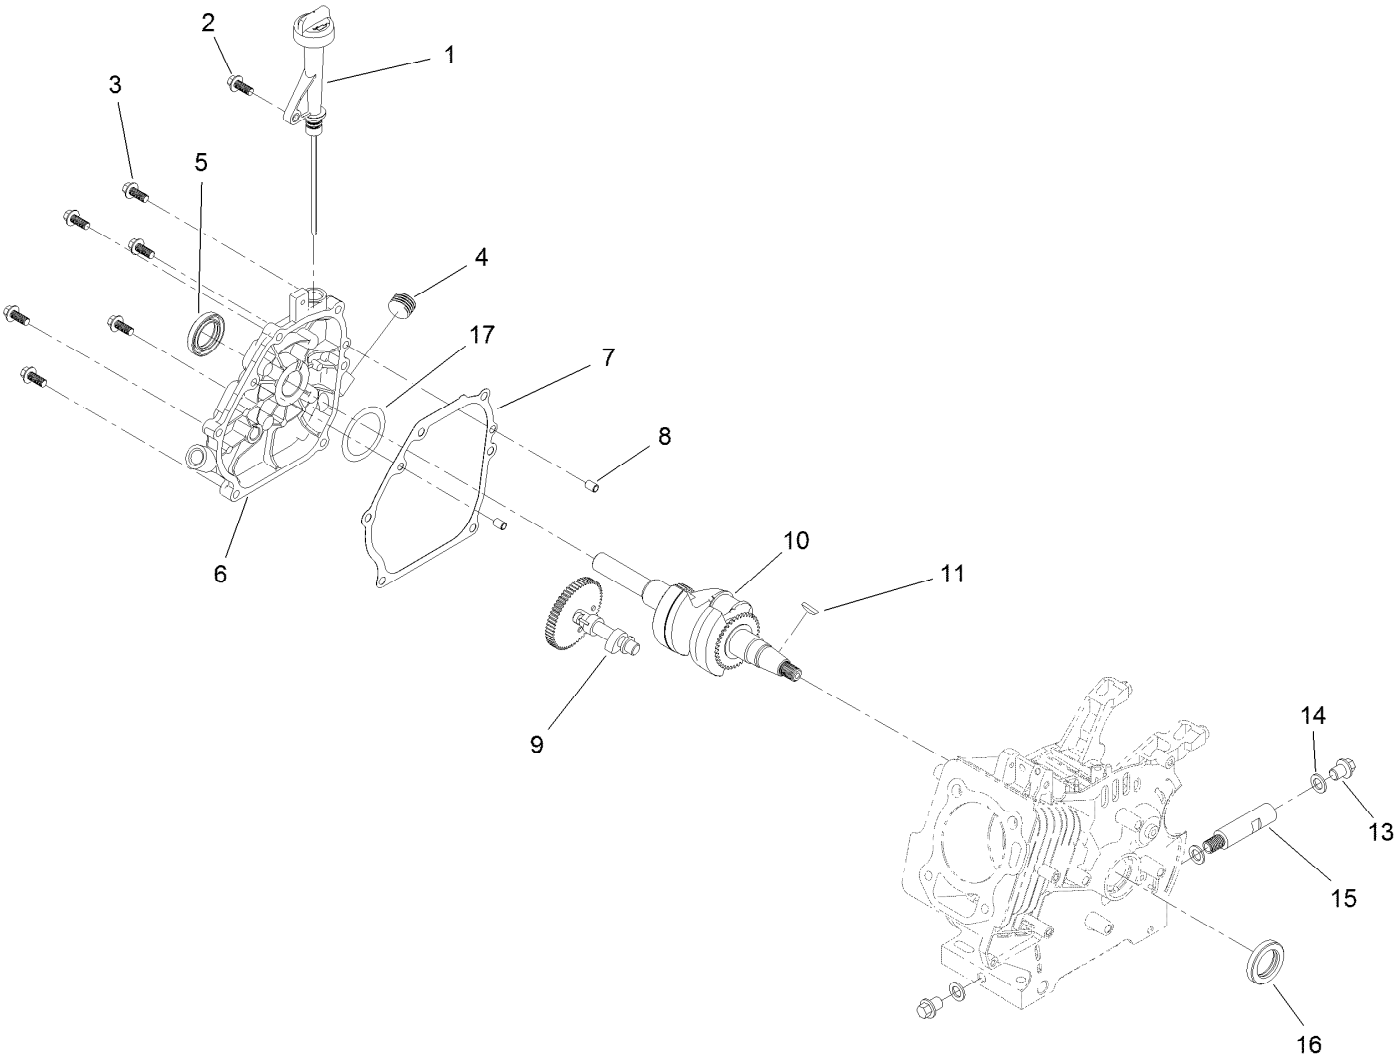

Crankcase Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	139-0734	1	Oil Fill ASM	9	133-9991	1	Camshaft ASM
2	127-9123	1	Screw-HHF	10	127-9495	1	Crankshaft
3	121-4114	6	Screw-HHF	11	120-4320	1	Key-Woodruff
4	133-9805	1	Plug-Drain	13	121-0030	2	Screw-HHF
5	133-1516	1	Seal-Oil	14	121-0048	3	Washer-Plain
6	133-9865	1	Cover-Crankcase	15	127-9104	1	Tube-Drain, Oil
7	127-9493	1	Gasket-Cover, Crankcase	16	133-9864	1	Seal-Oil
8	121-0054	2	Pin-Dowel	17	133-9863	1	Washer-Thrust

 
Governor Assembly

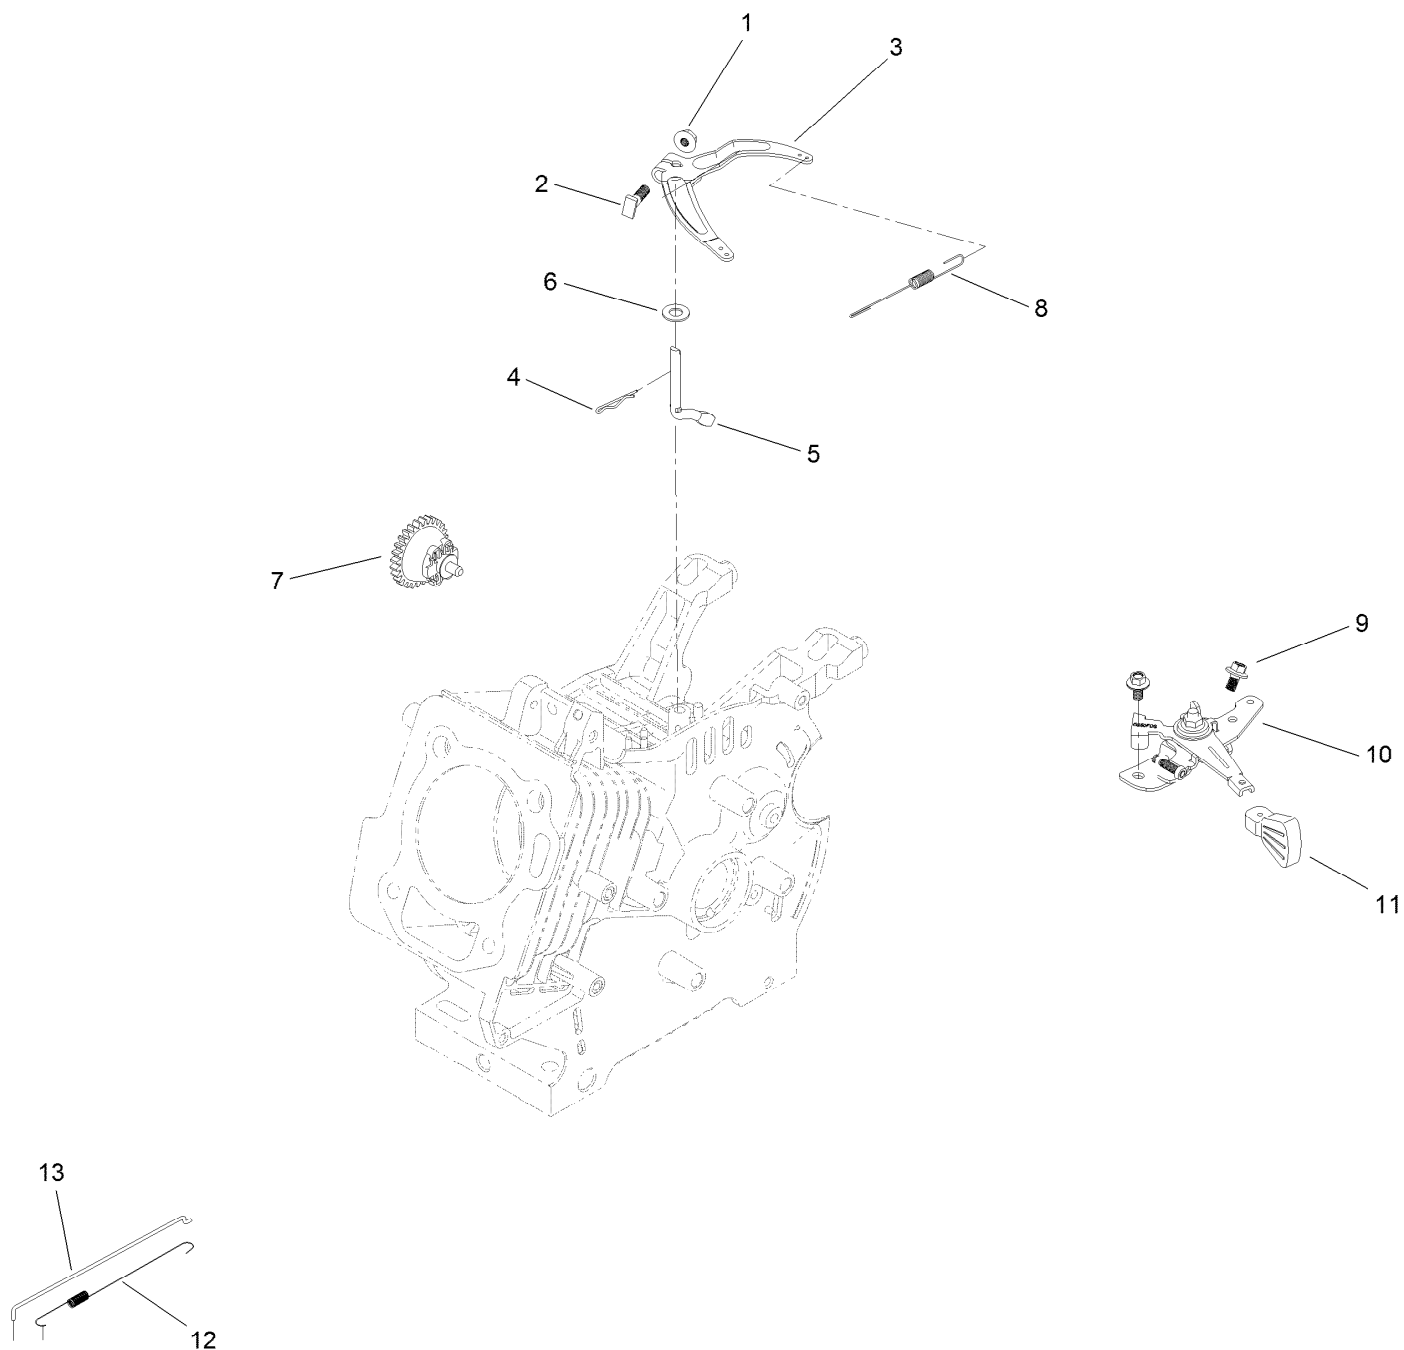

Governor Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-4236	1	Nut-Flange	8	127-9483	1	Spring-Governor
2	120-4238	1	Bolt-Arm, Governor	9	121-0116	2	Screw-HHF
3	127-9482	1	Arm-Governor	10	133-1555	1	Throttle Control ASM
4	120-4256	1	Pin-Hair	11	121-0269	1	Knob-Control, Throttle
5	133-9995	1	Shaft-Governor	12	133-1536	1	Spring-Return, Throttle
6	121-0498	1	Washer-Plain	13	133-1535	1	Rod-Governor
7	133-9994	1	Governor Gear ASM				

 
Piston and Head Assembly

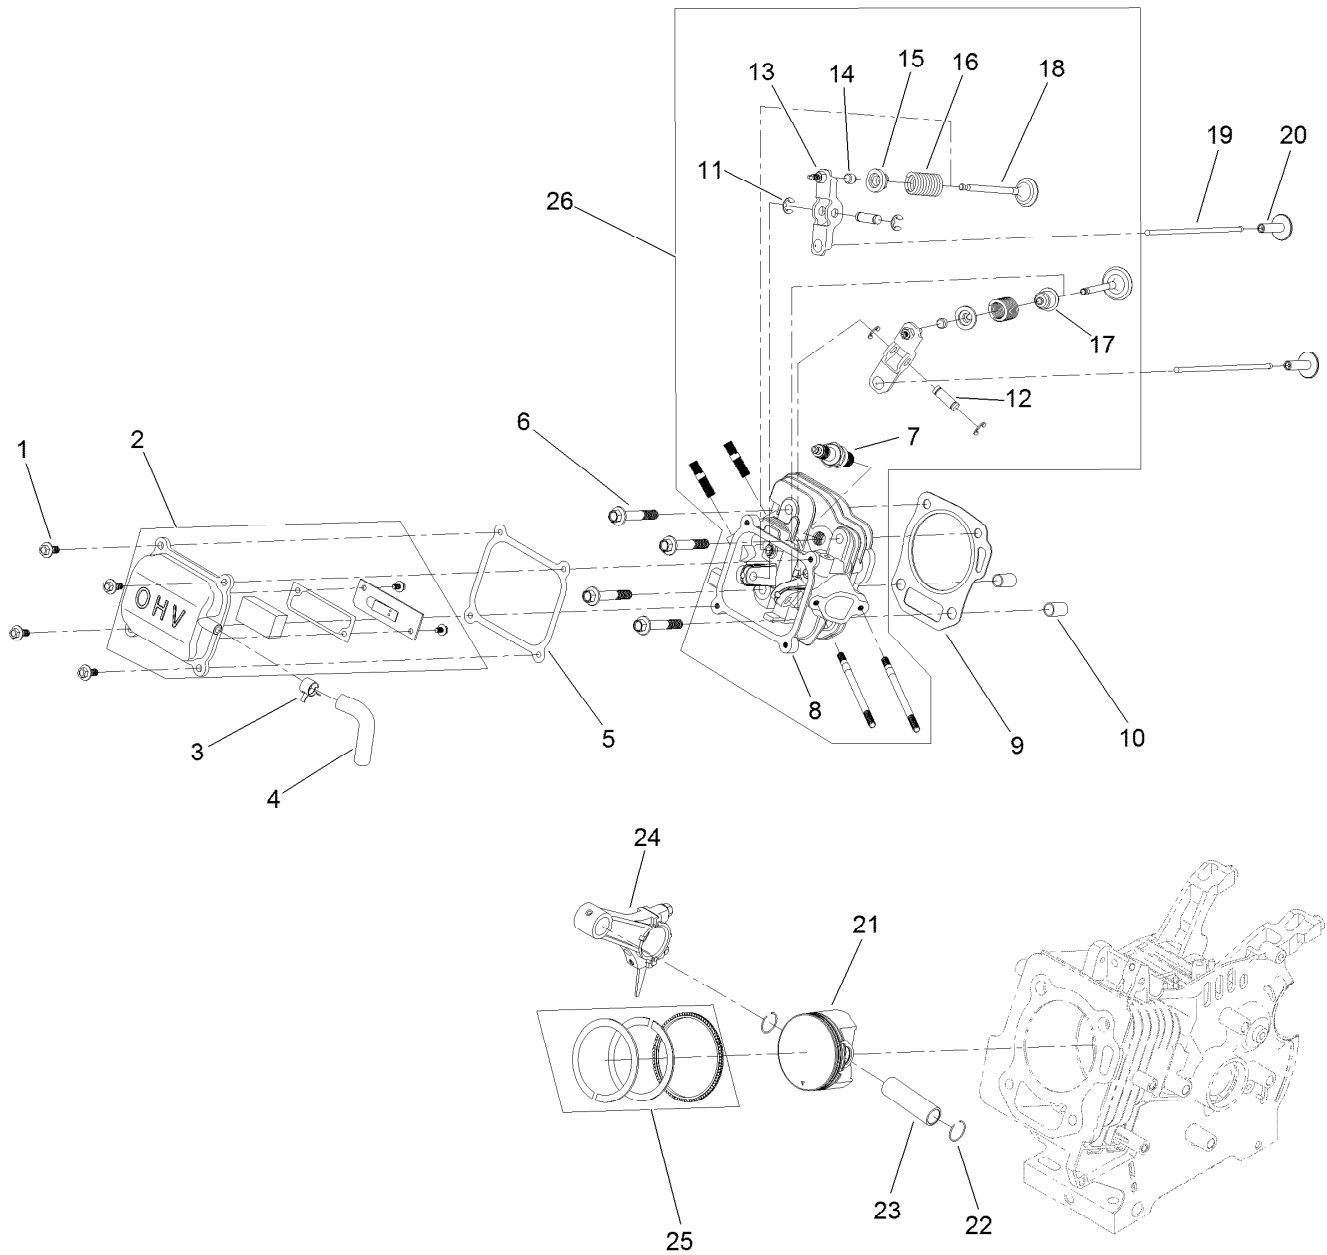

Piston and Head Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-4454	4	Screw-HHF	14	121-4116	2	Rotator-Valve
2	133-1500	1	Valve Cover ASM	15	121-4117	2	Retainer-Spring, Valve
3	133-1558	1	Clamp-Hose	16	127-9014	2	Spring-Valve
4	133-9990	1	Tube-Breather	17	121-4202	1	Seal-Stem, Valve
5	133-1507	1	Gasket-Cover, Valve	18	133-1515	1	Set-Valve
6	133-1508	4	Screw-Flange	19	133-1514	2	Rod-Push
7	81-3250	1	Spark Plug	20	127-9015	2	Tappet-Valve
8	133-1509	1	Head-Cylinder	21	133-1522	1	Piston
9	133-1510	1	Gasket-Head	22	121-0313	2	Clip-Pin, Piston
10	120-4200	2	Pin-Dowel	23	121-4128	1	Pin-Piston
11	133-1511	4	E-Clip	24	121-4123	1	Connecting Rod ASM
12	133-1512	2	Pin-Arm, Rocker	25	133-1521	1	Set-Ring, Piston
13	133-1513	2	Rocker Arm ASM	26	133-9867	1	Complete Head ASM

 Blower Housing and Shrouds Assembly

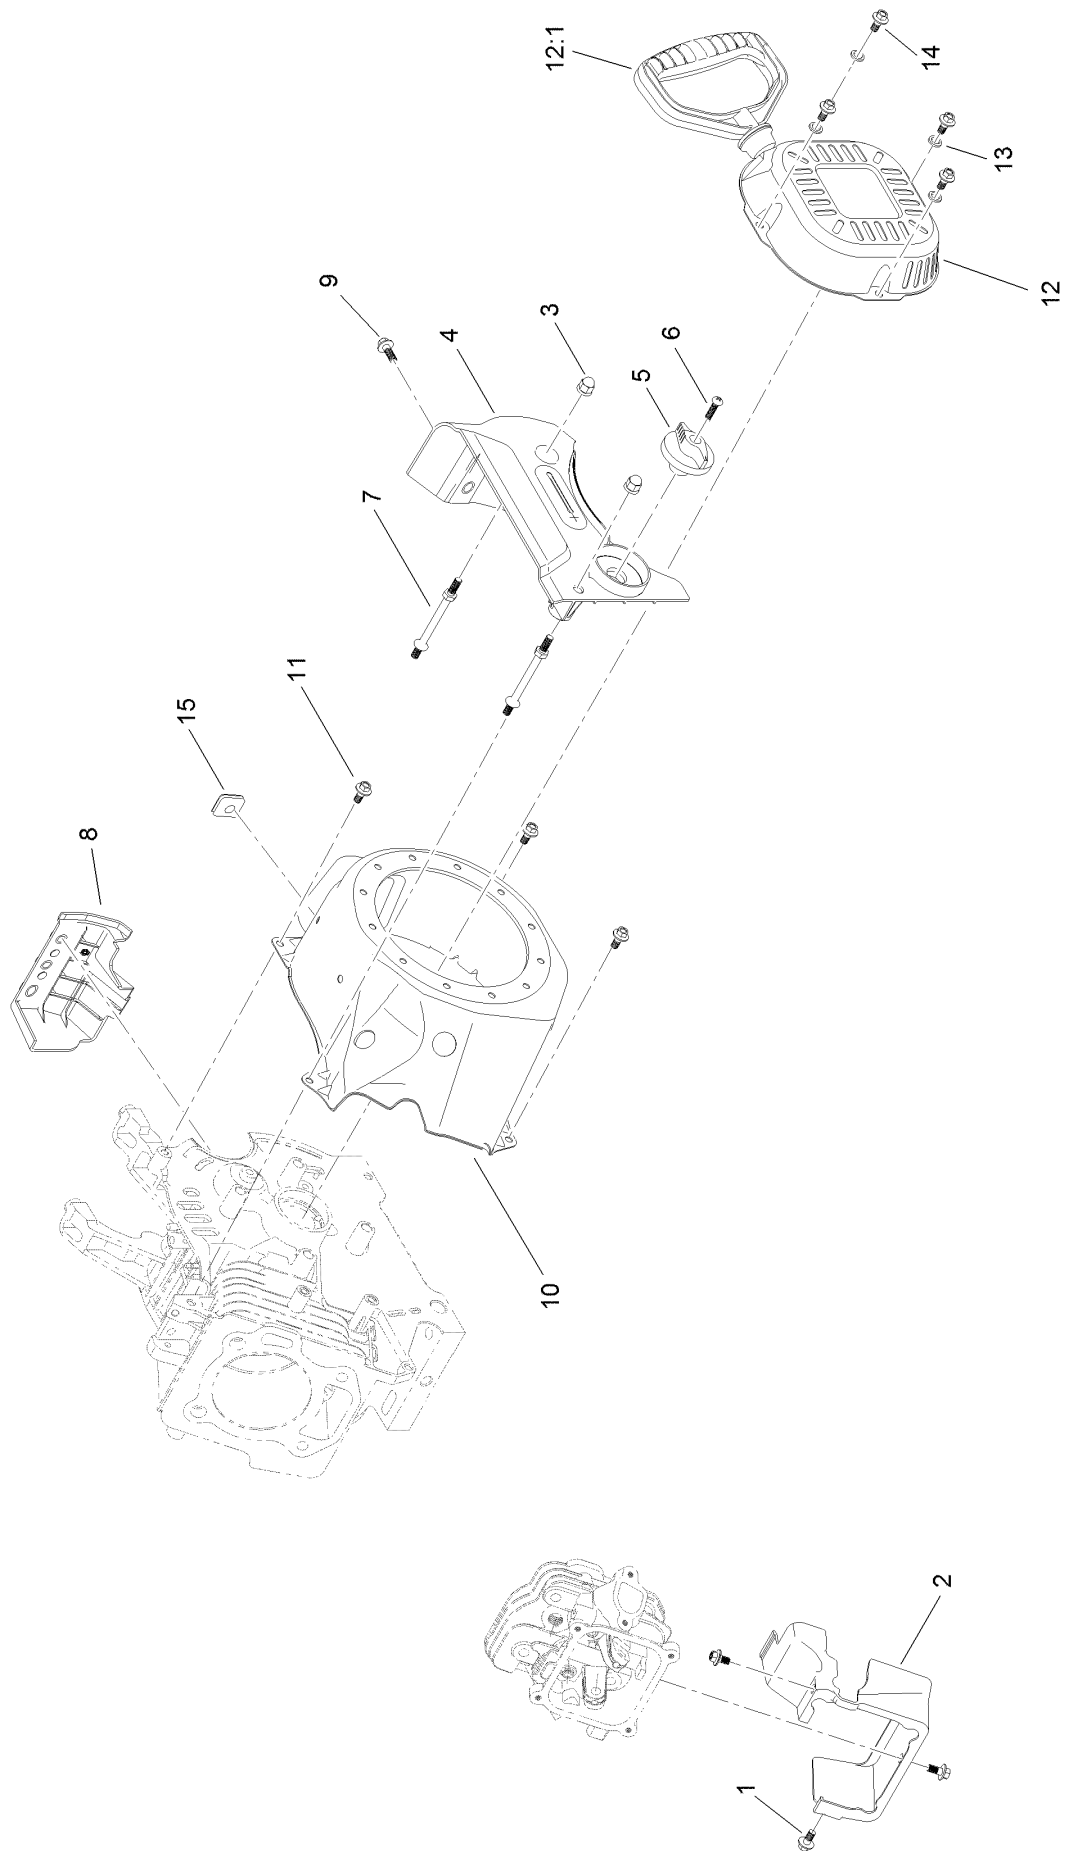

Blower Housing and Shrouds Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-0116	3	Screw-HHF	9	127-9123	1	Screw-HHF
2	133-1530	1	Shroud-Head	10	133-1528	1	Shroud-Flywheel
3	127-9383	2	Nut-Acorn	11	121-0294	3	Screw-HHF
4	133-1557	1	Panel-Control, Front	12	127-9487	1	Recoil ASM
5	121-0268	1	Knob-Valve, Fuel	12:1	121-0287	1	Handle-Recoil
6	121-0305	1	Screw-Bhp	13	127-9380	4	Washer-Plain
7	127-9110	2	Stud-Mount	14	127-9031	4	Screw-HHF
8	133-1543	1	Panel-Side, Engine	15	133-1548	1	Grommet-Rubber

Attachments and Accessories

For 39960 — Power Max Heavy Duty 824 Snowthrower

Product Name	Model/Part
High-Altitude Kit	121-4241
Heavy-Duty Skid Kit.....	125-1104
Snow Cab Kit	127-5960
Heated Grip Kit	131-6460
Engine Maintenance Kit.....	138-0704
Kit Red Heated Grips	144-1603
Non-Marking Skid Kit	38211
Drift Breaker Kit	38213
Tire Chain Kit, 16in Tires	38215
Toro Snow Oil 0W30 Synthetic 20-Ounce Bottle	38913
Power Max HD Covers (2019)	490-7415

Notes:



Count on it.