



Form No. 3481-759 Rev A

**Count on it.**

# Parts Catalog

## **Titan® MR4800 Zero Turn Riding Mower**

**Model No. 76440TA—Serial No. 420324453 and Up**



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Frame Assembly..... 4

Deck Lift Assembly..... 6

Caster Fork and Wheel Assembly..... 8

Hydraulic Drive Assembly..... 10

LH Hydro Transmission Assembly No. 147-2860..... 12

RH Hydro Transmission Assembly No. 147-2861..... 14

Parking Brake Assembly..... 16

Rear Wheel Assembly..... 18

Motion Control Assembly..... 20

Engine and Muffler Assembly..... 22

Fuel System Assembly..... 24

Fuel Tank Assembly No. 161-6588..... 26

Electrical Assembly..... 28

Deck Assembly..... 30

Deck Decal Assembly No. 147-8749..... 32


Model Specific Decal Assembly..... 34

Seat Pan Assembly..... 36

Clutch Assembly..... 38

Attachments and Accessories..... 40


# Frame Assembly

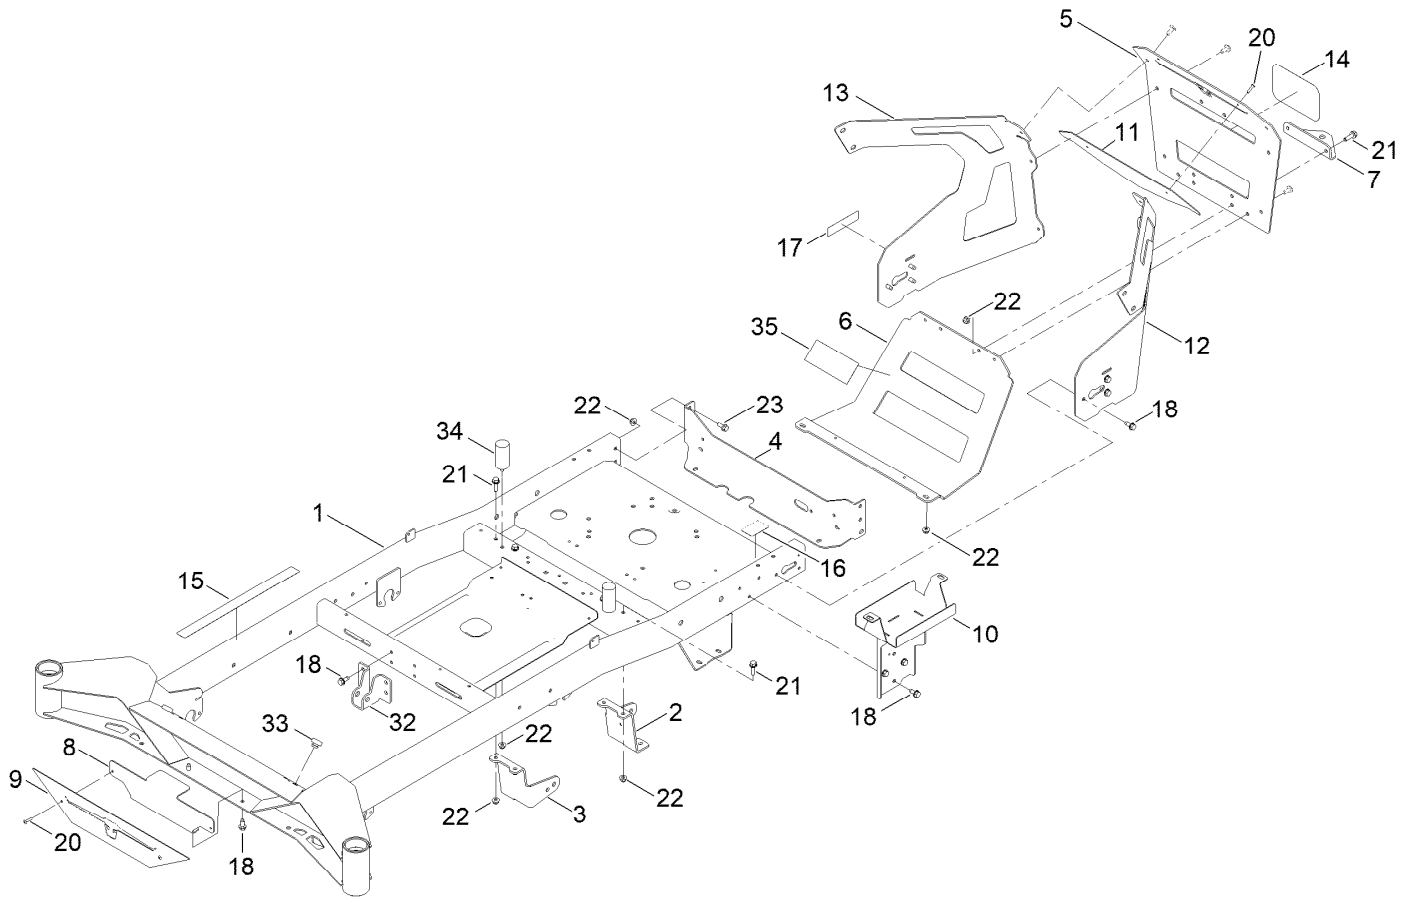

## Frame Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>             |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|--------------------------------|
| 1           | 161-6608           | 1           | Service ASM-Frame, Titan | 15          | 144-5288           | 1           | Decal-Warning                  |
| 2           | 161-6506-01        | 1           | Mount-Drive, LH          | 16          | 161-6207           | 1           | Decal-Bypass                   |
| 3           | 161-6507-01        | 1           | Mount-Drive, RH          | 17          | 142-5864           | 1           | Decal-Spark Arrester           |
| 4           | 163-3137-03        | 1           | Plate-Mount, Rear        | 18          | 32144-70           | 23          | Screw-HWHTF                    |
| 5           | 147-2998-03        | 1           | Guard-Engine             | 20          | 130-8451           | 4           | Rivet-Trifold                  |
| 6           | 163-6003-03        | 1           | Guard-Muffler            | 21          | 139-2596           | 6           | Screw-HHF                      |
| 7           | 117-1232-03        | 1           | Bracket-Hitch            | 22          | 119-4041           | 14          | Nut-HF                         |
| 8           | 147-2878-01        | 1           | Plate-Backer             | 23          | 139-2598           | 4           | Screw-HHF                      |
| 9           | 147-2879-03        | 1           | Logo-Plate-Front         | 32          | 145-6323-01        | 1           | Bracket-Mount Damper,<br>Lower |
| 10          | 145-6283-01        | 1           | Wa-Battery Mount         | 33          | 140-3460           | 2           | Bumper-Rubber                  |
| 11          | 147-2999-01        | 1           | Plate-Backer             | 34          | 145-6310           | 2           | Bumper-Rubber                  |
| 12          | 147-2996-01        | 1           | Guard-Engine LH          | 35          | 161-6260           | 1           | Tape-Heat                      |
| 13          | 147-2997-01        | 1           | Guard-Engine-RH          |             |                    |             |                                |
| 14          | 99-4693            | 1           | Decal                    |             |                    |             |                                |


# Deck Lift Assembly

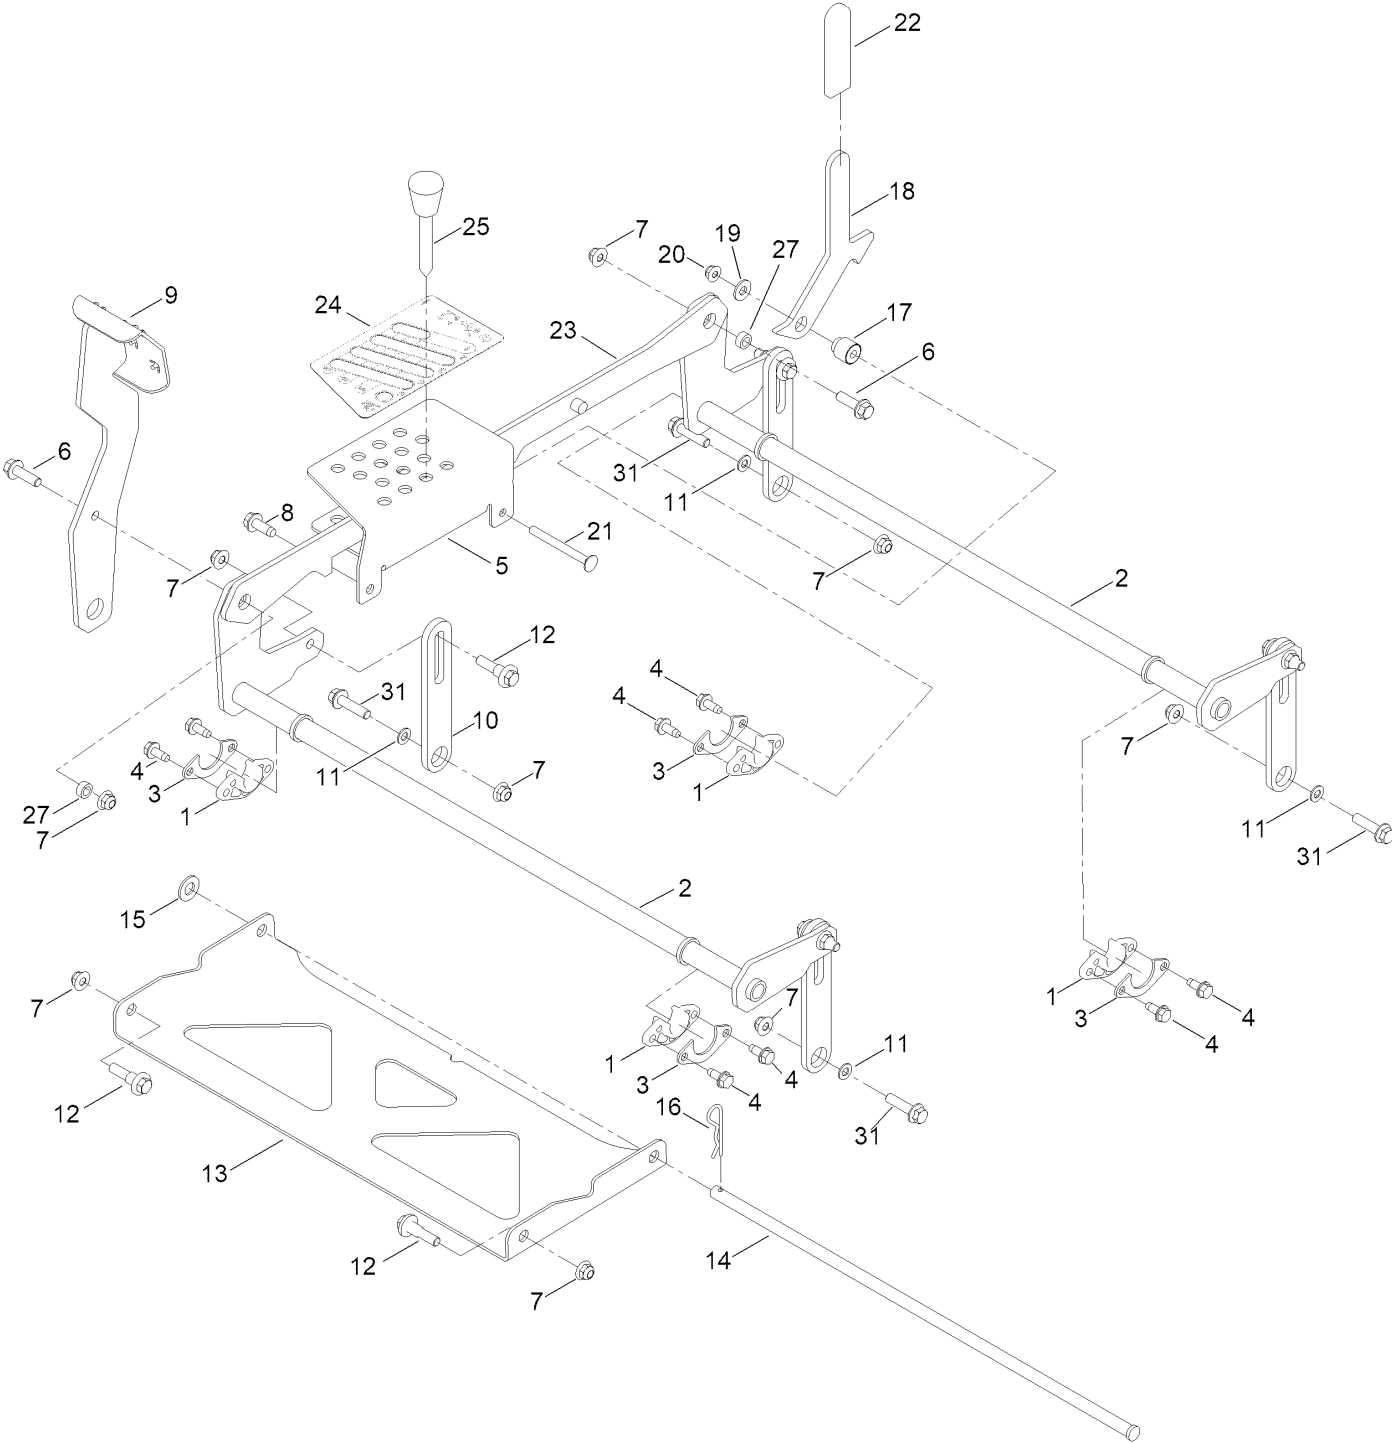

## Deck Lift Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|----------------------|
| 1           | 139-5872           | 4           | Bearing-Flange           | 15          | 139-2611           | 1           | Washer-Flat          |
| 2           | 161-4632-01        | 2           | Pivot ASM-Decklift [red] | 16          | 139-2562           | 1           | Pin-Hair             |
| 3           | 138-7204           | 4           | Gusset-Deck Lift         | 17          | 145-6282           | 1           | Spacer-Stepped       |
| 4           | 32144-70           | 8           | Screw-HWHTF              | 18          | 145-6279           | 1           | Plate-Transport Lock |
| 5           | 163-5960-01        | 1           | Bracket-HOC [red]        | 19          | 137-3082           | 1           | Washer-Plain         |
| 6           | 119-4061           | 2           | Screw-HHF                | 20          | 119-4041           | 1           | Nut-HF               |
| 7           | 119-4042           | 12          | Nut-HF, NI               | 21          | 138-0741           | 1           | Screw-CARR           |
| 8           | 139-2428           | 1           | Screw-HWH                | 22          | 140-0413           | 1           | Grip-Handle          |
| 9           | 145-6278-01        | 1           | Pedal ASM [red]          | 23          | 145-6262-01        | 1           | Link ASM-HOC [red]   |
| 10          | 161-4635-01        | 4           | Link-HOC                 | 24          | 147-2867           | 1           | Decal-HOC            |
| 11          | 138-7207           | 4           | Spacer-Hub, Blower       | 25          | 140-2146           | 1           | HOC Pin ASM          |
| 12          | 130-0742           | 6           | Bolt-Shoulder            | 27          | 140-2093           | 2           | Spacer               |
| 13          | 145-6248-03        | 1           | Pan-Deck Pivot           | 31          | 139-2553           | 4           | Screw-HHF            |
| 14          | 145-6288           | 1           | Pin-Deck                 |             |                    |             |                      |

# Caster Fork and Wheel Assembly

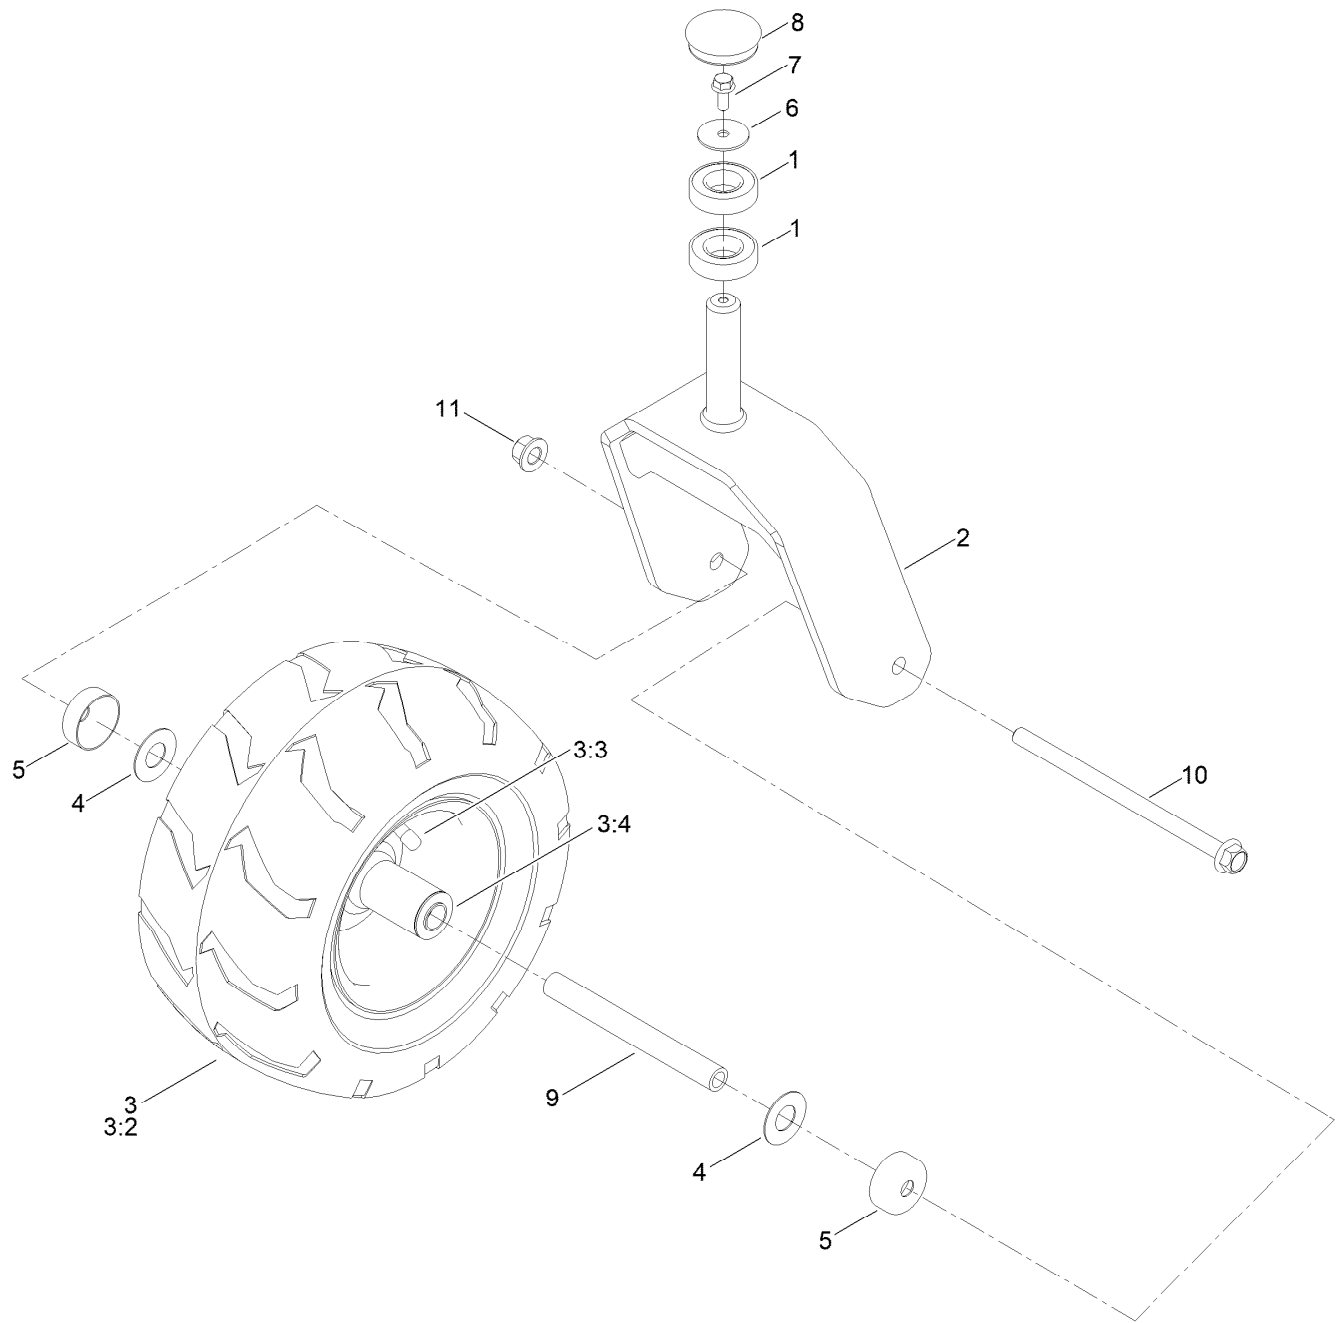


## Caster Fork and Wheel Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|
| 1           | 109-3678           | 4           | Bearing-Ball           |
| 2           | 145-6375-01        | 2           | Castor Fork [red]      |
| 3           | 147-7647           | 2           | Tire And Wheel ASM     |
| 3:2         | 147-7648           | 1           | Tire 13X6.5-6, Treaded |
| 3:3         | 232-27             | 1           | Stem-Valve             |
| 3:4         | 147-7652           | 2           | Bearing                |
| 4           | 136-5590           | 4           | Washer                 |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 5           | 138-7208           | 4           | Guard-Seal         |
| 6           | 115-1151           | 2           | Washer-Flat        |
| 7           | 100-1668           | 2           | Screw-HHF          |
| 8           | 144-0375           | 2           | Cap-Grease         |
| 9           | 133-4487           | 2           | Spanner-Wheel      |
| 10          | 147-2939           | 2           | Screw-HHF          |
| 11          | 139-1689           | 2           | Nut-HF             |

# Hydraulic Drive Assembly

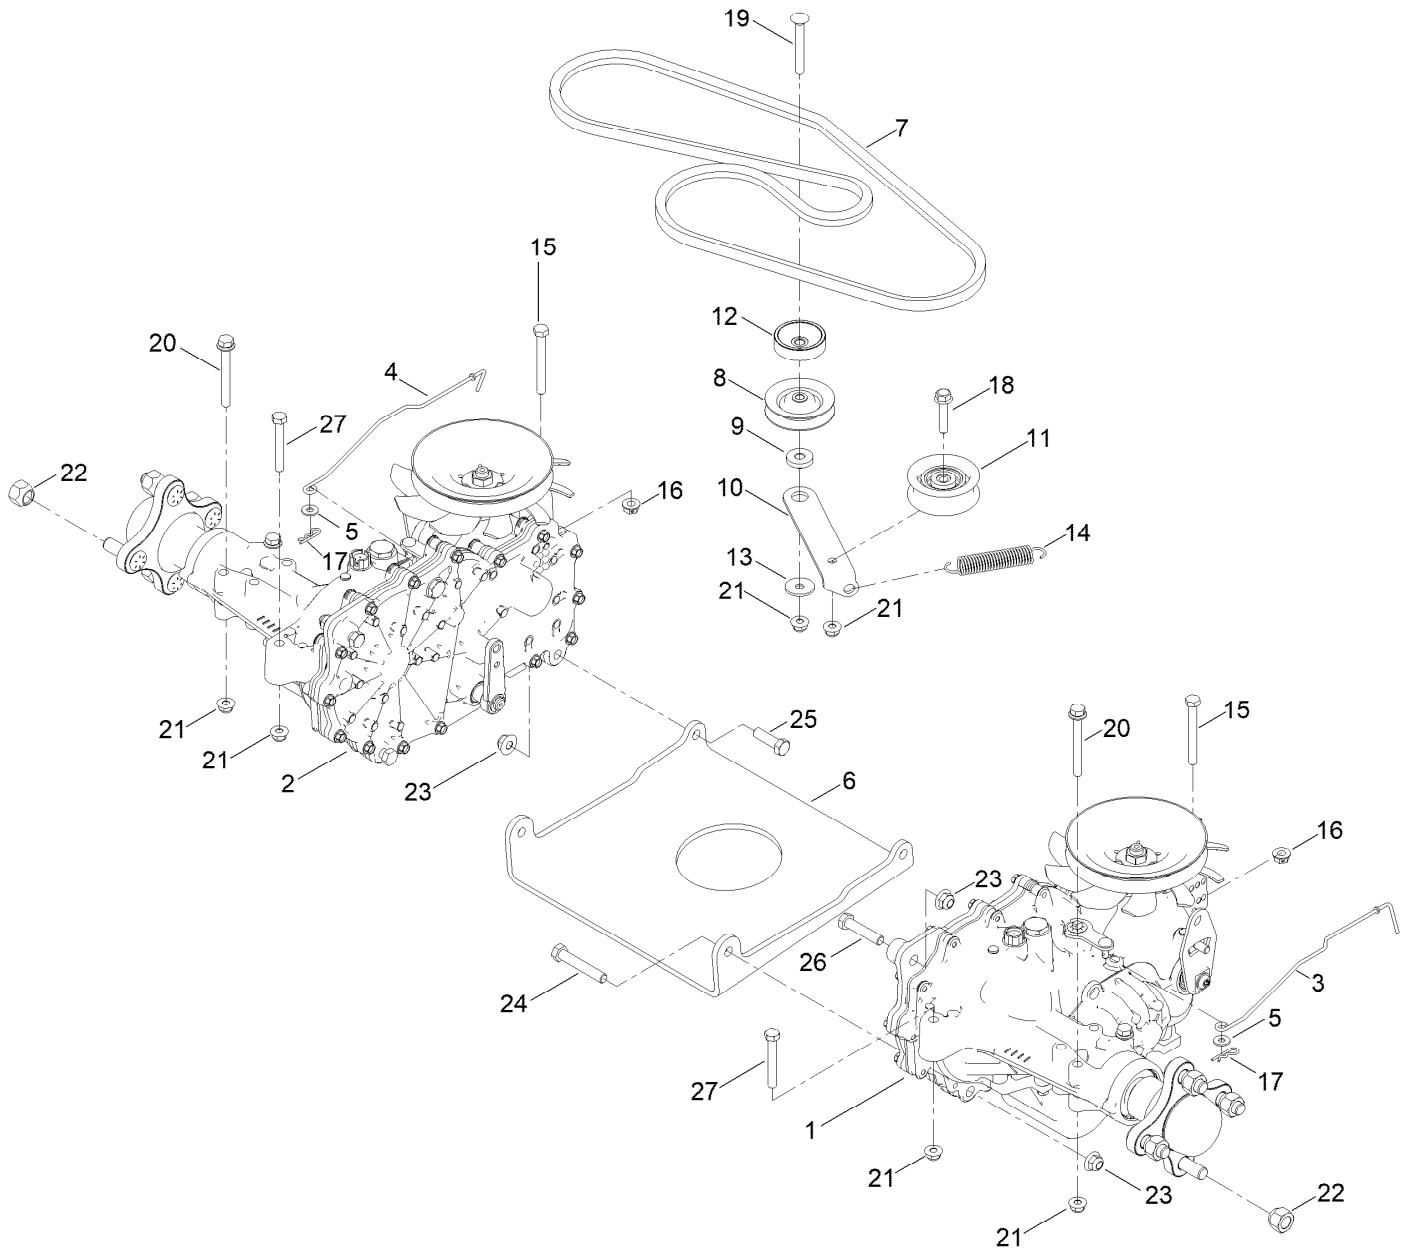

## Hydraulic Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>           | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|------------------------------|-------------|--------------------|-------------|----------------------|
| 1           | 147-2860           | 1           | LH Hydro Transmission<br>ASM | 14          | 137-7040           | 1           | Spring-Return, Pedal |
| 2           | 147-2861           | 1           | RH Hydro Transmission<br>ASM | 15          | 145-6388           | 2           | Screw-HH Spcl        |
| 3           | 147-2987           | 1           | Rod-Bypass, LH               | 16          | 139-2574           | 2           | Nut-HF               |
| 4           | 147-2986           | 1           | Rod-Bypass, RH               | 17          | 3290-307           | 2           | Pin-Cotter           |
| 5           | 119-8952           | 2           | Washer-Spcl                  | 18          | 115-1794           | 1           | Screw-HHF            |
| 6           | 161-9754-03        | 1           | Plate-Hydro                  | 19          | 3230-8             | 1           | Screw-CARR           |
| 7           | 145-6363           | 1           | V-Belt (A Sec 66.30 EI)      | 20          | 138-7590           | 4           | Screw-HHF            |
| 8           | 68-0030            | 1           | Idler                        | 21          | 119-4041           | 8           | Nut-HF               |
| 9           | 138-7277           | 1           | Spacer-Arm, Idler            | 22          | 139-2564           | 8           | Nut-Lug              |
| 10          | 147-2925           | 1           | Arm-Idler                    | 23          | 119-4042           | 6           | Nut-HF, NI           |
| 11          | 138-7597           | 1           | Pulley-Idler, Flat           | 24          | 323-11             | 2           | Screw-HH             |
| 12          | 138-9809           | 1           | Spacer                       | 25          | 323-7              | 2           | Screw-HH             |
| 13          | 5-4460             | 1           | Washer-Pivot                 | 26          | 323-9              | 2           | Screw-HH             |
|             |                    |             |                              | 27          | 322-11             | 2           | Screw-HH             |

This diagram is an exploded view of a mechanical assembly, showing various components and their assembly sequence. The parts are numbered as follows:


- 1: Main engine block
- 2: Piston and connecting rod assembly
- 3: Flywheel
- 4: Crankshaft
- 5: Camshaft
- 6: Valve train components
- 7: Bolts and fasteners
- 8: Timing belt/pulley system
- 9: Oil pan
- 10: Water pump
- 11: Timing cover
- 12: Belt drive components
- 13: Fan and pulley assembly
- 14: Water pump housing
- 15: Timing cover housing
- 16: Oil pan housing
- 17: Water pump housing housing
- 18: Timing cover housing housing
- 19: Oil pan housing housing
- 20: Water pump housing housing
- 21: Timing cover housing housing
- 22: Oil pan housing housing
- 23: Water pump housing housing
- 24: Timing cover housing housing
- 25: Oil pan housing housing
- 26: Water pump housing housing
- 27: Timing cover housing housing
- 28: Oil pan housing housing
- 29: Water pump housing housing
- 30: Timing cover housing housing
- 31: Oil pan housing housing
- 32: Water pump housing housing
- 33: Timing cover housing housing
- 34: Oil pan housing housing
- 35: Water pump housing housing
- 36: Timing cover housing housing
- 37: Oil pan housing housing
- 38: Water pump housing housing
- 39: Timing cover housing housing
- 40: Oil pan housing housing
- 41: Water pump housing housing
- 42: Timing cover housing housing
- 43: Oil pan housing housing
- 44: Water pump housing housing
- 45: Timing cover housing housing
- 46: Oil pan housing housing
- 47: Water pump housing housing
- 48: Timing cover housing housing
- 49: Oil pan housing housing
- 50: Water pump housing housing
- 51: Timing cover housing housing
- 52: Oil pan housing housing
- 53: Water pump housing housing
- 54: Timing cover housing housing
- 55: Oil pan housing housing
- 56: Water pump housing housing
- 57: Timing cover housing housing
- 58: Oil pan housing housing
- 59: Water pump housing housing
- 60: Timing cover housing housing
- 61: Oil pan housing housing
- 62: Water pump housing housing
- 63: Timing cover housing housing
- 64: Oil pan housing housing
- 65: Water pump housing housing
- 66: Timing cover housing housing
- 67: Oil pan housing housing
- 68: Water pump housing housing
- 69: Timing cover housing housing
- 70: Oil pan housing housing
- 71: Water pump housing housing
- 72: Timing cover housing housing
- 73: Oil pan housing housing
- 74: Water pump housing housing
- 75: Timing cover housing housing
- 76: Oil pan housing housing
- 77: Water pump housing housing
- 78: Timing cover housing housing
- 79: Oil pan housing housing
- 80: Water pump housing housing
- 81: Timing cover housing housing
- 82: Oil pan housing housing
- 83: Water pump housing housing
- 84: Timing cover housing housing
- 85: Oil pan housing housing
- 86: Water pump housing housing
- 87: Timing cover housing housing
- 88: Oil pan housing housing
- 89: Water pump housing housing
- 90: Timing cover housing housing
- 91: Oil pan housing housing
- 92: Water pump housing housing
- 93: Timing cover housing housing
- 94: Oil pan housing housing
- 95: Water pump housing housing
- 96: Timing cover housing housing
- 97: Oil pan housing housing
- 98: Water pump housing housing
- 99: Timing cover housing housing
- 100: Oil pan housing housing
- 101: Water pump housing housing
- 102: Timing cover housing housing
- 103: Oil pan housing housing
- 104: Water pump housing housing
- 105: Timing cover housing housing
- 106: Oil pan housing housing
- 107: Water pump housing housing
- 108: Timing cover housing housing
- 109: Oil pan housing housing
- 110: Water pump housing housing
- 111: Timing cover housing housing
- 112: Oil pan housing housing
- 113: Water pump housing housing
- 114: Timing cover housing housing
- 115: Oil pan housing housing
- 116: Water pump housing housing
- 117: Timing cover housing housing
- 118: Oil pan housing housing
- 119: Water pump housing housing
- 120: Timing cover housing housing
- 121: Oil pan housing housing
- 122: Water pump housing housing
- 123: Timing cover housing housing
- 124: Oil pan housing housing
- 125: Water pump housing housing
- 126: Timing cover housing housing
- 127: Oil pan housing housing
- 128: Water pump housing housing
- 129: Timing cover housing housing
- 130: Oil pan housing housing
- 131: Water pump housing housing
- 132: Timing cover housing housing
- 133: Oil pan housing housing
- 134: Water pump housing housing
- 135: Timing cover housing housing
- 136: Oil pan housing housing
- 137: Water pump housing housing
- 138: Timing cover housing housing
- 139: Oil pan housing housing
- 140: Water pump housing housing
- 141: Timing cover housing housing
- 142: Oil pan housing housing
- 143: Water pump housing housing
- 144: Timing cover housing housing
- 145: Oil pan housing housing
- 146: Water pump housing housing
- 147: Timing cover housing housing
- 148: Oil pan housing housing
- 149: Water pump housing housing
- 150: Timing cover housing housing
- 151: Oil pan housing housing
- 152: Water pump housing housing
- 153: Timing cover housing housing
- 154: Oil pan housing housing
- 155: Water pump housing housing
- 156: Timing cover housing housing
- 157: Oil pan housing housing
- 158: Water pump housing housing
- 159: Timing cover housing housing
- 160: Oil pan housing housing
- 161: Water pump housing housing
- 162: Timing cover housing housing
- 163: Oil pan housing housing
- 164: Water pump housing housing
- 165: Timing cover housing housing
- 166: Oil pan housing housing
- 167: Water pump housing housing
- 168: Timing cover housing housing
- 169: Oil pan housing housing
- 170: Water pump housing housing
- 171: Timing cover housing housing
- 172: Oil pan housing housing
- 173: Water pump housing housing
- 174: Timing cover housing housing
- 175: Oil pan housing housing
- 176: Water pump housing housing
- 177: Timing cover housing housing
- 178: Oil pan housing housing
- 179: Water pump housing housing
- 180: Timing cover housing housing
- 181: Oil pan housing housing
- 182: Water pump housing housing
- 183: Timing cover housing housing
- 184: Oil pan housing housing
- 185: Water pump housing housing
- 186: Timing cover housing housing
- 187: Oil pan housing housing
- 188: Water pump housing housing
- 189: Timing cover housing housing
- 190: Oil pan housing housing
- 191: Water pump housing housing
- 192: Timing cover housing housing
- 193: Oil pan housing housing
- 194: Water pump housing housing
- 195: Timing cover housing housing
- 196: Oil pan housing housing
- 197: Water pump housing housing
- 198: Timing cover housing housing
- 199: Oil pan housing housing
- 200: Water pump housing housing
- 201: Timing cover housing housing
- 202: Oil pan housing housing
- 203: Water pump housing housing
- 204: Timing cover housing housing
- 205: Oil pan housing housing
- 206: Water pump housing housing
- 207: Timing cover housing housing
- 208: Oil pan housing housing
- 209: Water pump housing housing
- 210: Timing cover housing housing
- 211: Oil pan housing housing
- 212: Water pump housing housing
- 213: Timing cover housing housing
- 214: Oil pan housing housing
- 215: Water pump housing housing
- 216: Timing cover housing housing
- 217: Oil pan housing housing
- 218: Water pump housing housing
- 219: Timing cover housing housing
- 220: Oil pan housing housing
- 221: Water pump housing housing
- 222: Timing cover housing housing
- 223: Oil pan housing housing
- 224: Water pump housing housing
- 225: Timing cover housing housing
- 226: Oil pan housing housing
- 227: Water pump housing housing
- 228: Timing cover housing housing
- 229: Oil pan housing housing
- 230: Water pump housing housing
- 231: Timing cover housing housing
- 232: Oil pan housing housing
- 233: Water pump housing housing
- 234: Timing cover housing housing
- 235: Oil pan housing housing
- 236: Water pump housing housing
- 237: Timing cover housing housing
- 238: Oil pan housing housing
- 239: Water pump housing housing
- 240: Timing cover housing housing
- 241: Oil pan housing housing
- 242: Water pump housing housing
- 243: Timing cover housing housing
- 244: Oil pan housing housing
- 245: Water pump housing housing
- 246: Timing cover housing housing
- 247: Oil pan housing housing
- 248: Water pump housing housing
- 249: Timing cover housing housing
- 250: Oil pan housing housing

The legend indicates that parts 30, 31, 33, 35, 41, 56, 57, 71, 103, 130, 157, and 200 are common to multiple sub-assemblies.

# LH Hydro Transmission Assembly No. 147-2860 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|-----------------------------------|
| 1           | 140-8345           | 1           | RH Main Housing Kit      | 83          | 104-5329           | 1           | Pin-Jackshaft                     |
| 2           | 140-8349           | 1           | RH Side Cover Kit        | 90          | 104-2169           | 1           | Ring-Retaining                    |
| 7           | 117-5359           | 16          | Screw-HHF                | 91          | 114-1694           | 1           | Gear-54T                          |
| 11          | 135-1140           | 1           | Plug-Straight            | 92          | 120-7975           | 1           | Spacer                            |
| 23          | 109-3321           | 1           | Element-Oil Filter, HYD  | 93          | 135-1361           | 1           | Bearing-Ball                      |
| 30          | 139-7497           | 1           | Seal-Lip                 | 95          | 130-8477           | 1           | Bearing-Ball                      |
| 31          | 106-8677           | 1           | Ring-Retaining, External | 96          | 104-2144           | 1           | Seal                              |
| 32          | 114-1685           | 1           | Rod-Bypass               | 97          | 109-5939           | 1           | Hub Kit                           |
| 33          | 106-8679           | 1           | Ring-Retaining, Internal | 102         | 125-0021           | 1           | Handle-Brake                      |
| 34          | 112-9852           | 1           | Arm-Bypass               | 103         | 131-0906           | 1           | Ring-Retaining, EXT               |
| 35          | 106-8681           | 1           | Ring-Retaining, External | 106         | 139-7499           | 1           | Filter Guard Kit                  |
| 40          | 104-5304           | 1           | Swashplate-Trunnion      | 130         | 126-3251           | 2           | Tube-Charge                       |
| 41          | 104-5313           | 1           | Seal-Lip                 | 156         | 115-5057           | 1           | Cover-Nut, Axle                   |
| 42          | 104-2116           | 1           | Stud                     | 157         | 126-1930           | 1           | Gerotor Seal Kit                  |
| 43          | 112-9853           | 1           | Puck-Friction            | 164         | 121-5745           | 1           | Spacer                            |
| 55          | 104-5308           | 1           | Spacer                   | 193         | 140-8343           | 1           | Plug                              |
| 56          | 104-5310           | 1           | Seal-Lip                 | 194         | 140-8356           | 1           | Breather Fitting ASM              |
| 57          | 104-5309           | 1           | Ring-Retaining           | 195         | 140-8357           | 1           | RH Internal Expansion Tank<br>ASM |
| 60          | 112-4154           | 1           | Bearing-Thrust           | 200         | 140-8351           | 1           | Seal Kit                          |
| 64          | 139-4074           | 1           | Cylinder Block ASM Kit   | 201         | 147-2906           | 1           | Kit, Center Section, LH<br>Charge |
| 65          | 94-6922            | 1           | Bearing-Thrust           | 202         | 114-8464           | 1           | Charge Relief Kit                 |
| 69          | 110-8561           | 1           | Pump Block ASM           | 203         | 114-8465           | 1           | Charge Kit                        |
| 70          | 104-5339           | 1           | Washer-Flat              | 207         | 135-7343           | 1           | Fan And Pulley Kit                |
| 71          | 104-5340           | 1           | Ring-Retaining           | 209         | 114-8467           | 1           | Puller-Hub, 4 Bolt                |
| 72          | 114-1690           | 1           | Gear-14T                 | 210         | 139-7502           | 1           | Input Shaft Kit                   |
| 73          | 114-1691           | 1           | Shaft-Motor              | 211         | 117-5362           | 1           | Control Arm Kit                   |
| 74          | 104-5360           | 1           | Washer                   | 212         | 114-8470           | 1           | Axle Shaft Kit                    |
| 80          | 94-1933            | 2           | Washer                   | 215         | 140-8352           | 1           | Inboard Kit                       |
| 81          | 114-1692           | 1           | Gear-45T                 |             |                    |             |                                   |
| 82          | 114-1693           | 1           | Gear-11T                 |             |                    |             |                                   |


RH Hydro Transmission Assembly No. 147-2861

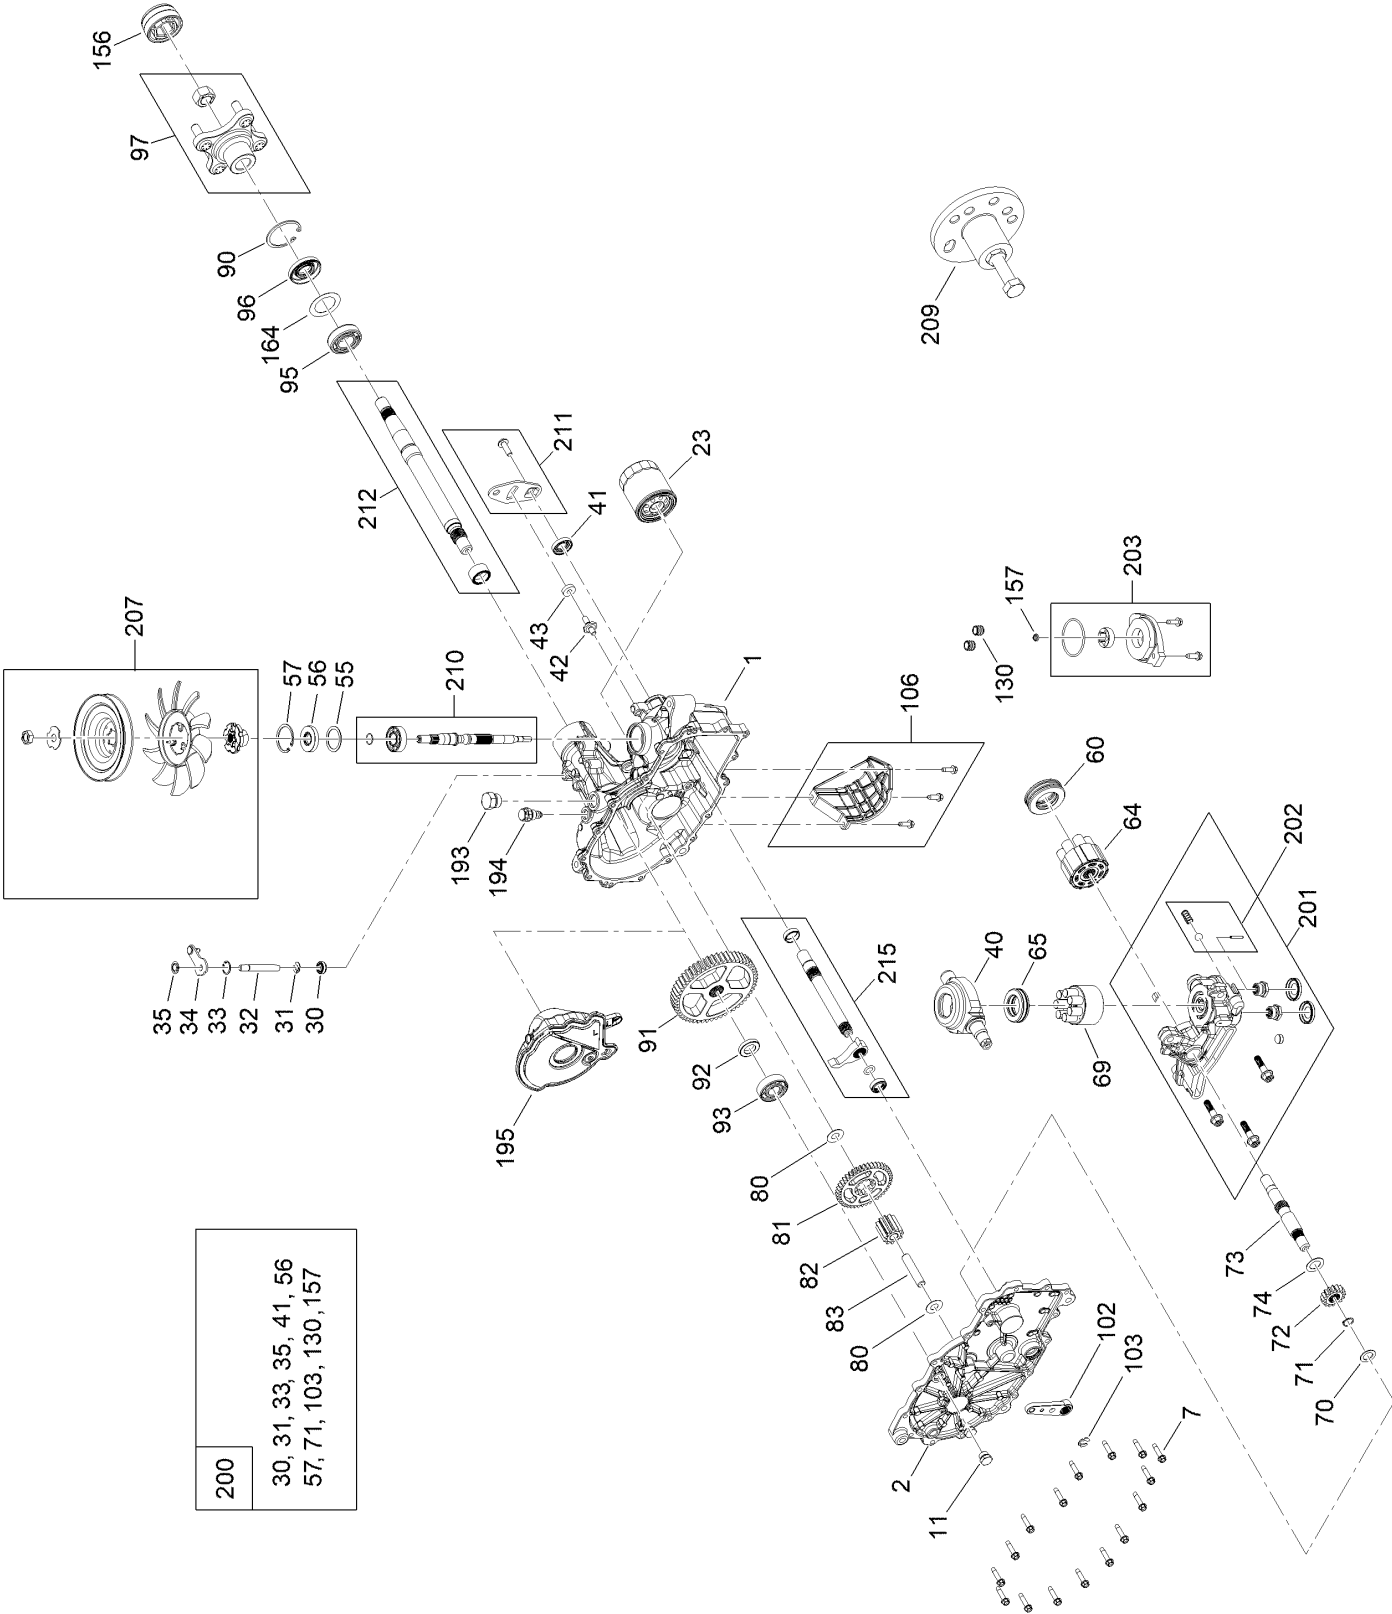

# RH Hydro Transmission Assembly No. 147-2861 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|-----------------------------------|
| 1           | 140-8347           | 1           | LH Main Housing Kit      | 83          | 104-5329           | 1           | Pin-Jackshaft                     |
| 2           | 140-8350           | 1           | LH Side Cover Kit        | 90          | 104-2169           | 1           | Ring-Retaining                    |
| 7           | 117-5359           | 16          | Screw-HHF                | 91          | 114-1694           | 1           | Gear-54T                          |
| 11          | 135-1140           | 1           | Plug-Straight            | 92          | 120-7975           | 1           | Spacer                            |
| 23          | 109-3321           | 1           | Element-Oil Filter, HYD  | 93          | 135-1361           | 1           | Bearing-Ball                      |
| 30          | 139-7497           | 1           | Seal-Lip                 | 95          | 130-8477           | 1           | Bearing-Ball                      |
| 31          | 106-8677           | 1           | Ring-Retaining, External | 96          | 104-2144           | 1           | Seal                              |
| 32          | 114-1685           | 1           | Rod-Bypass               | 97          | 109-5939           | 1           | Hub Kit                           |
| 33          | 106-8679           | 1           | Ring-Retaining, Internal | 102         | 125-0021           | 1           | Handle-Brake                      |
| 34          | 107-2490           | 1           | Arm-Bypass               | 103         | 131-0906           | 1           | Ring-Retaining, EXT               |
| 35          | 106-8681           | 1           | Ring-Retaining, External | 106         | 139-7498           | 1           | Filter Guard Kit                  |
| 40          | 104-5304           | 1           | Swashplate-Trunnion      | 130         | 126-3251           | 2           | Tube-Charge                       |
| 41          | 104-5313           | 1           | Seal-Lip                 | 156         | 115-5057           | 1           | Cover-Nut, Axle                   |
| 42          | 104-2116           | 1           | Stud                     | 157         | 126-1930           | 1           | Gerotor Seal Kit                  |
| 43          | 112-9853           | 1           | Puck-Friction            | 164         | 121-5745           | 1           | Spacer                            |
| 55          | 104-5308           | 1           | Spacer                   | 193         | 140-8343           | 1           | Plug                              |
| 56          | 104-5310           | 1           | Seal-Lip                 | 194         | 140-8356           | 1           | Breather Fitting ASM              |
| 57          | 104-5309           | 1           | Ring-Retaining           | 195         | 140-8358           | 1           | LH Internal Expansion Tank<br>ASM |
| 60          | 112-4154           | 1           | Bearing-Thrust           | 200         | 140-8351           | 1           | Seal Kit                          |
| 64          | 139-4074           | 1           | Cylinder Block ASM Kit   | 201         | 147-2907           | 1           | Kit, Center Section, RH<br>Charge |
| 65          | 94-6922            | 1           | Bearing-Thrust           | 202         | 114-8464           | 1           | Charge Relief Kit                 |
| 69          | 110-8561           | 1           | Pump Block ASM           | 203         | 114-8465           | 1           | Charge Kit                        |
| 70          | 104-5339           | 1           | Washer-Flat              | 207         | 135-7343           | 1           | Fan And Pulley Kit                |
| 71          | 104-5340           | 1           | Ring-Retaining           | 209         | 114-8467           | 1           | Puller-Hub, 4 Bolt                |
| 72          | 114-1690           | 1           | Gear-14T                 | 210         | 139-7502           | 1           | Input Shaft Kit                   |
| 73          | 114-1691           | 1           | Shaft-Motor              | 211         | 117-5362           | 1           | Control Arm Kit                   |
| 74          | 104-5360           | 1           | Washer                   | 212         | 114-8470           | 1           | Axle Shaft Kit                    |
| 80          | 94-1933            | 2           | Washer                   | 215         | 140-8353           | 1           | Inboard Kit                       |
| 81          | 114-1692           | 1           | Gear-45T                 |             |                    |             |                                   |
| 82          | 114-1693           | 1           | Gear-11T                 |             |                    |             |                                   |

# Parking Brake Assembly

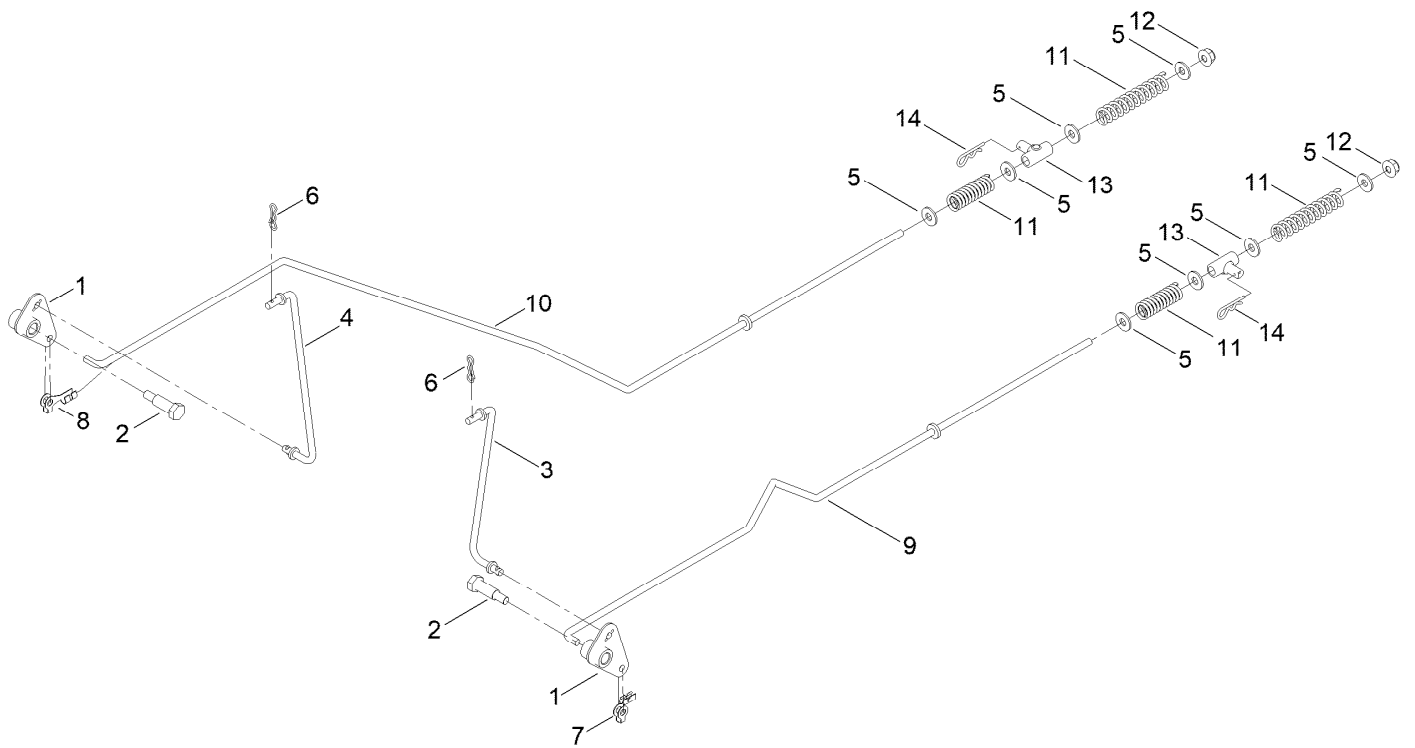

## Parking Brake Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|--------------------------|
| 1           | 161-6420           | 2           | Bellcrank                | 8           | 144-1815           | 1           | Clip-Rod, RH (7R, 1/4In) |
| 2           | 145-6364           | 2           | Bolt-Shoulder            | 9           | 145-0408           | 1           | Rod-Brake LH             |
| 3           | 145-4607           | 1           | Link-Brake, LH           | 10          | 145-0407           | 1           | Rod-Brake, RH            |
| 4           | 145-6238           | 1           | Link-Brake, RH           | 11          | 138-7252           | 4           | Spring-Compression       |
| 5           | 119-8952           | 8           | Washer-Spcl              | 12          | 119-4040           | 2           | Nut-HF, NI               |
| 6           | 119-1414           | 2           | Pin-Cotter, Locking      | 13          | 161-6635           | 2           | Mount-Pivot              |
| 7           | 144-1816           | 1           | Clip-Rod, LH (7L, 1/4In) | 14          | 137-3083           | 2           | Pin-Hair                 |


Rear Wheel Assembly



## Rear Wheel Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 145-6393           | 2           | Tire ASM-22X11-10 Nos2.4 | 1:2         | 147-5177           | 1           | Tire               |
| 1:1         | 147-5178           | 1           | Rim                      | 1:3         | 232-27             | 1           | Stem-Valve         |

# Motion Control Assembly

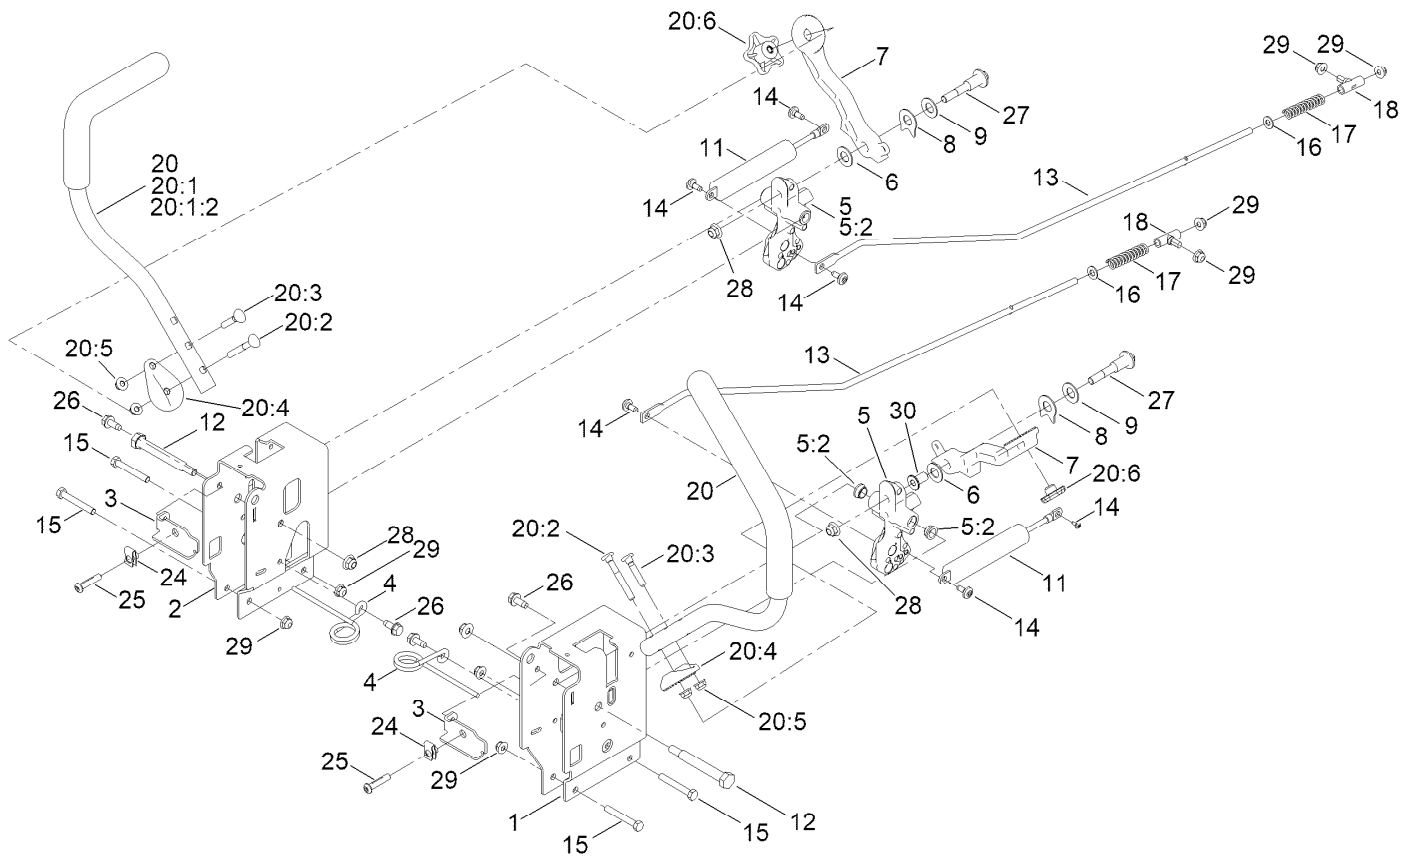


## Motion Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>           | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>               |
|-------------|--------------------|-------------|------------------------------|-------------|--------------------|-------------|----------------------------------|
| 1           | 163-5941-03        | 1           | Control Box - LH             | 18          | 138-7218           | 2           | Mount-Rod, Hydro                 |
| 2           | 163-5942-03        | 1           | Control Box - RH             | 20          | 161-6523           | 2           | Handle-Control, ASM              |
| 3           | 163-3189           | 2           | Adjustment Plate-Control Box | 20:1        |                    | 1           | Handle-Control, ●                |
| 4           | 145-6253           | 2           | Spring-Torsion               | 20:1:2      | 147-3029           | 1           | Grip                             |
| 5           | 164-3311           | 2           | Pivot Arm ASM                | 20:2        | 145-6366           | 1           | Screw-Handle                     |
| 5:2         | 163-3186           | 2           | Bushing-Flange               | 20:3        | 137-3008           | 1           | Screw-Handle                     |
| 6           | 163-7396           | 4           | Washer-Friction              | 20:4        | 147-5192-05        | 1           | Disc-Adjustment Handle, 32 Teeth |
| 7           | 147-5191-05        | 2           | Arm-Control, 32 Teeth        | 20:5        | 138-8401           | 2           | Nut-HF                           |
| 8           | 142-8478           | 2           | Spacer, Anti-Rotation        | 20:6        | 117-5976           | 1           | Knob-Handle                      |
| 9           | 119-8925           | 2           | Washer-Belleville            | 24          | 112-3306           | 2           | Nut                              |
| 11          | 161-6514           | 2           | Damper-Non Cavitating        | 25          | 126-4299           | 2           | Screw-HSBH                       |
| 12          | 115-5099           | 2           | Bolt-Pivot                   | 26          | 32144-70           | 4           | Screw-HWHTF                      |
| 13          | 161-9725           | 2           | Rod-Hydro                    | 27          | 133-9682           | 2           | Screw-Hfh                        |
| 14          | 120-7950           | 6           | Screw-Torx                   | 28          | 119-4042           | 4           | Nut-HF, NI                       |
| 15          | 322-11             | 4           | Screw-HH                     | 29          | 119-4041           | 8           | Nut-HF                           |
| 16          | 120-9683           | 2           | Washer-Plain                 | 30          | 163-2335           | 2           | Spacer-Pivot                     |
| 17          | 138-7252           | 2           | Spring-Compression           |             |                    |             |                                  |

● Not serviced separately

# Engine and Muffler Assembly

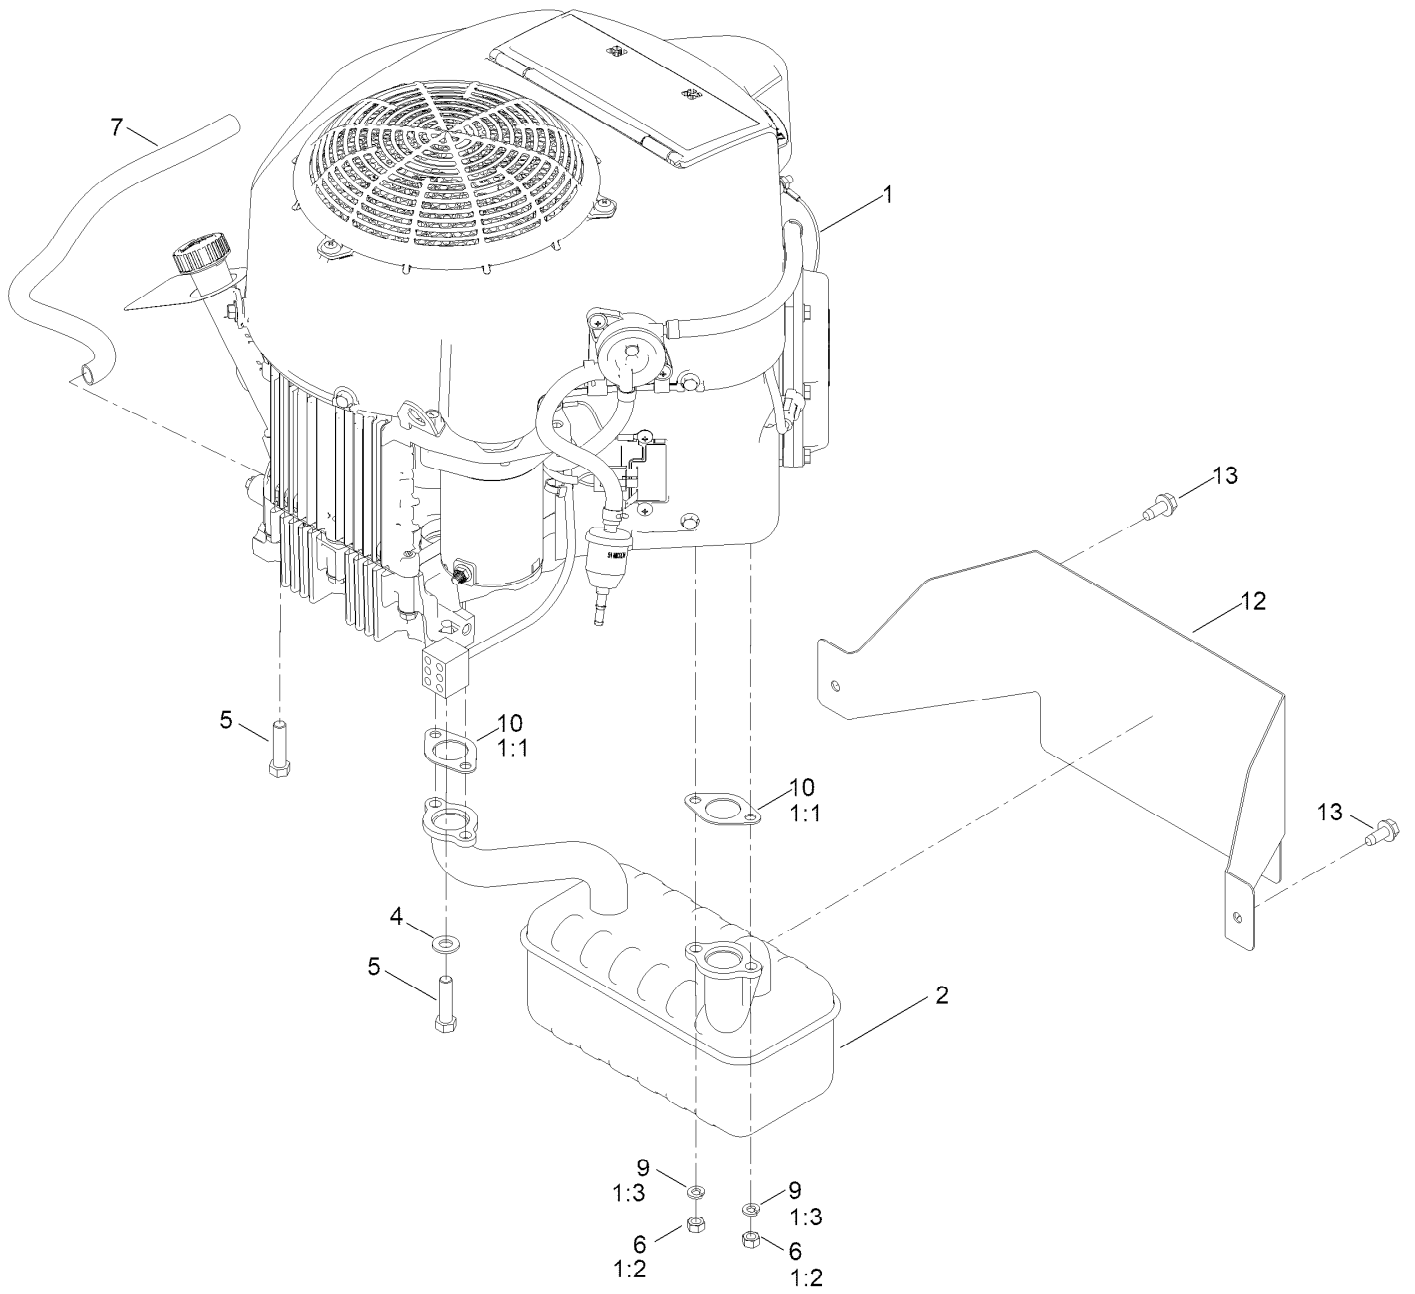

## Engine and Muffler Assembly (continued)


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                  |
|-------------|--------------------|-------------|-------------------------------------|
| 1           |                    | 1           | Engine-Kawasaki,<br>Fr730V-S09-R ●■ |
| 1:1         | 1-653313           | 2           | Gasket-Exhaust                      |
| 1:2         | 114-3549           | 4           | Nut                                 |
| 1:3         | 114-3550           | 4           | Washer-Lock                         |
| 2           | 139-5867           | 1           | Muffler                             |
| 4           | 3256-24            | 3           | Washer-Plain                        |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 5           | 323-50             | 4           | Bolt-HH               |
| 6           | 114-3549           | 4           | Nut                   |
| 7           | 106-7022           | 1           | Tube-Drain, Oil       |
| 9           | 114-3550           | 4           | Washer-Lock           |
| 10          | 1-653313           | 2           | Gasket-Exhaust        |
| 12          | 161-6649-03        | 1           | Heat Shield - Muffler |
| 13          | 32144-70           | 2           | Screw-HWHTF           |

● Not serviced separately

■ Obtain parts from [www.kawpower.com](http://www.kawpower.com)


# Fuel System Assembly

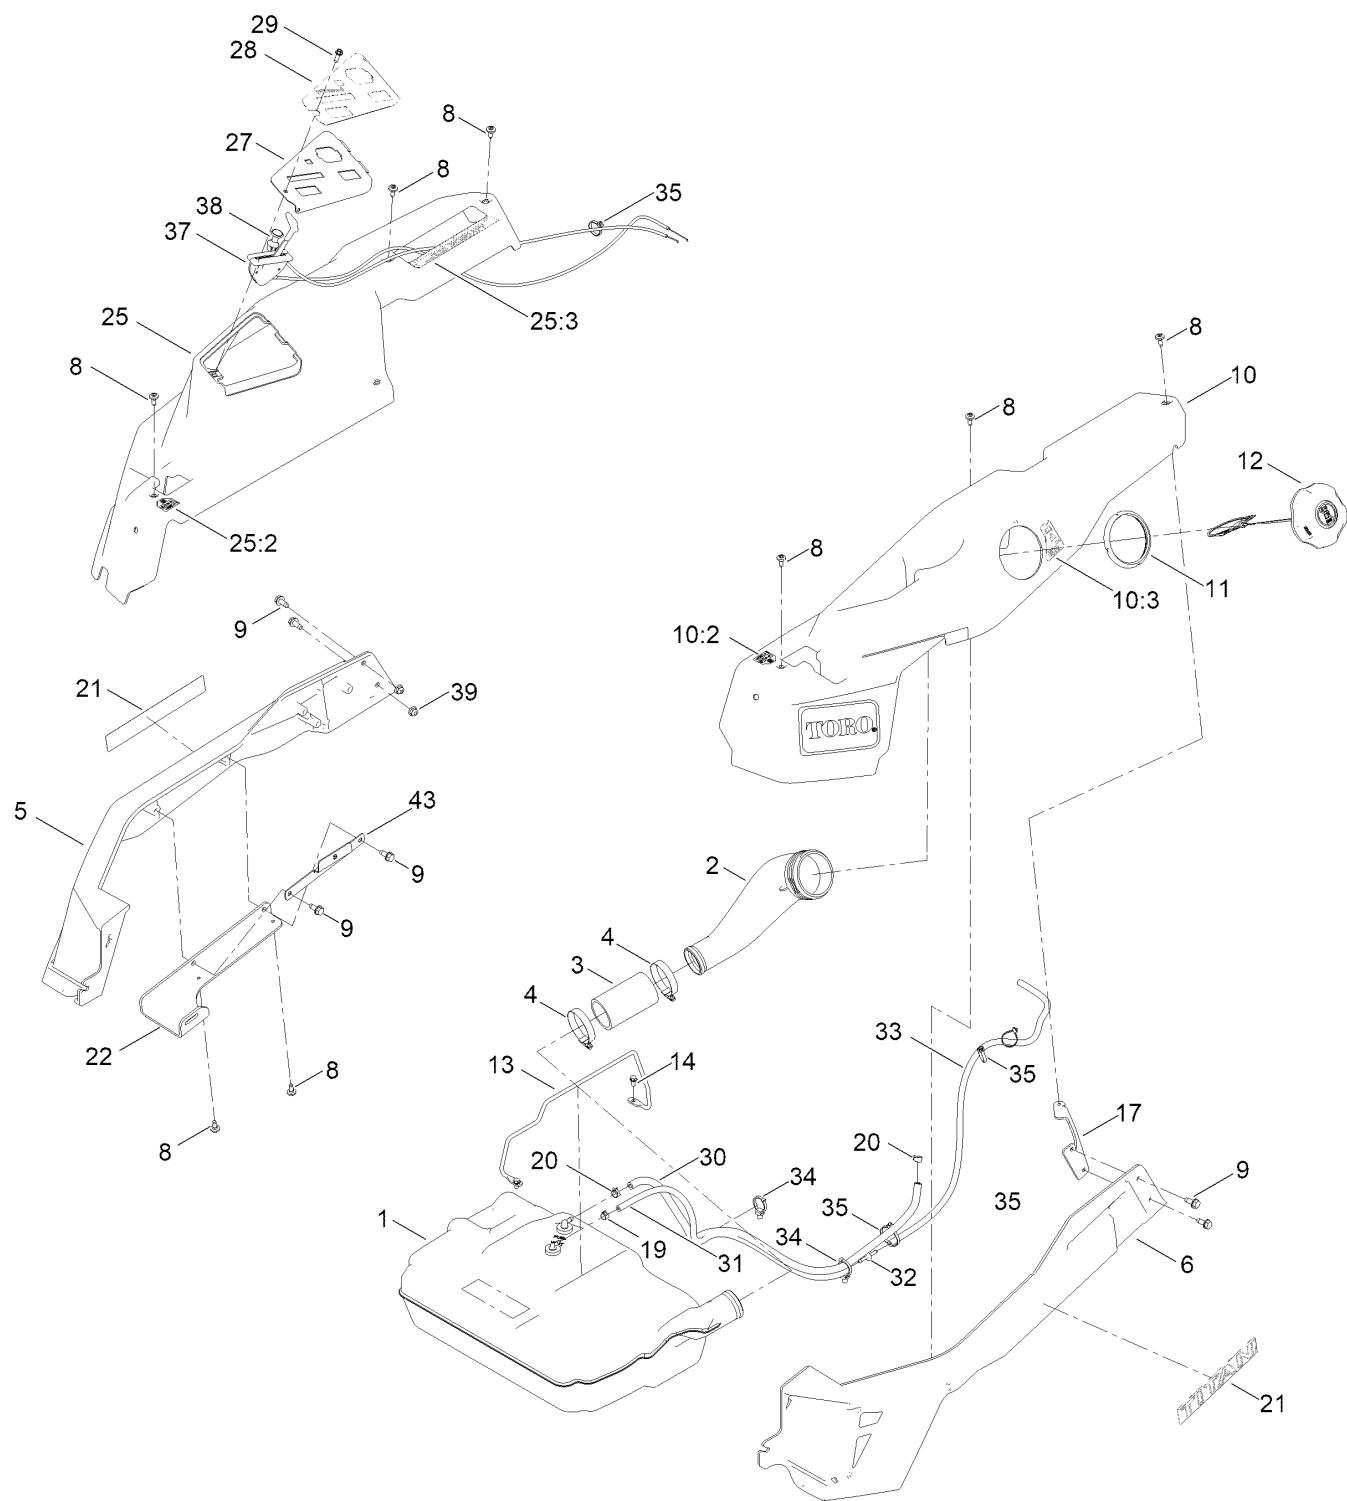

## Fuel System Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 161-6588           | 1           | Fuel Tank ASM           | 22          | 147-5173-03        | 1           | Bracket-Mr Spring          |
| 2           | 147-2852           | 1           | Neck-Filler, Fuel       | 25          | 147-8744           | 1           | Pod ASM - RH , Mr          |
| 3           | 145-4698           | 1           | Hose-Filler, Fuel       |             |                    |             | W/Decals                   |
| 4           | 2412-130           | 2           | Clamp-Hose              | 25:2        | 139-2394           | 1           | Decal-Control Lever, RH    |
| 5           | 147-2973-01        | 1           | Cast-Tube, RH           | 25:3        | 147-7574           | 1           | Decal - Myride             |
| 6           | 147-2972-01        | 1           | Cast-Tube, LH           | 27          | 147-2990-03        | 1           | Panel-Control              |
| 8           | 120-7950           | 10          | Screw-Torx              | 28          | 147-7571           | 1           | Decal - Control Panel      |
| 9           | 32144-70           | 4           | Screw-HWHTF             | 29          | 49-2040            | 1           | Screw-HWHTF                |
| 10          | 147-8741           | 1           | Pod ASM - LH W/Decals   | 30          | 109-0284           | 1           | Hose-Fuel                  |
| 10:2        | 139-2395           | 1           | Decal-Control Lever, LH | 31          | 121-0780           | 1           | Hose-Fuel                  |
| 10:3        | 147-2399           | 1           | Decal-Fuel Fill         | 32          | 144-1983           | 1           | Adapter Orifice            |
| 11          | 147-7712           | 1           | Ring-Retaining          | 33          | 108-6344           | 1           | Hose-Fuel                  |
| 12          | 163-5914           | 1           | Cap Fuel, Ratcheting    | 34          | 32180-030          | 2           | Clip-Tie                   |
| 13          | 147-5176           | 1           | Rod-Hold Down           | 35          | 614249             | 4           | Tie-Cable                  |
| 14          | 32144-4            | 2           | Screw-HWH               | 37          | 147-7697           | 1           | Cable-Throttle             |
| 17          | 147-2976-03        | 1           | Bracket-Rear Pod, LH    | 38          | 147-2902           | 1           | Cable-Choke                |
| 19          | 2412-80            | 1           | Clamp-Hose              | 39          | 119-4041           | 2           | Nut-HF                     |
| 20          | 2412-98            | 2           | Clamp-Hose              | 43          | 161-4611-03        | 1           | Bracket- Alignment, Pod RH |
| 21          | 147-7566           | 2           | Decal-Titan             |             |                    |             | Mr                         |

# Fuel Tank Assembly No. 161-6588

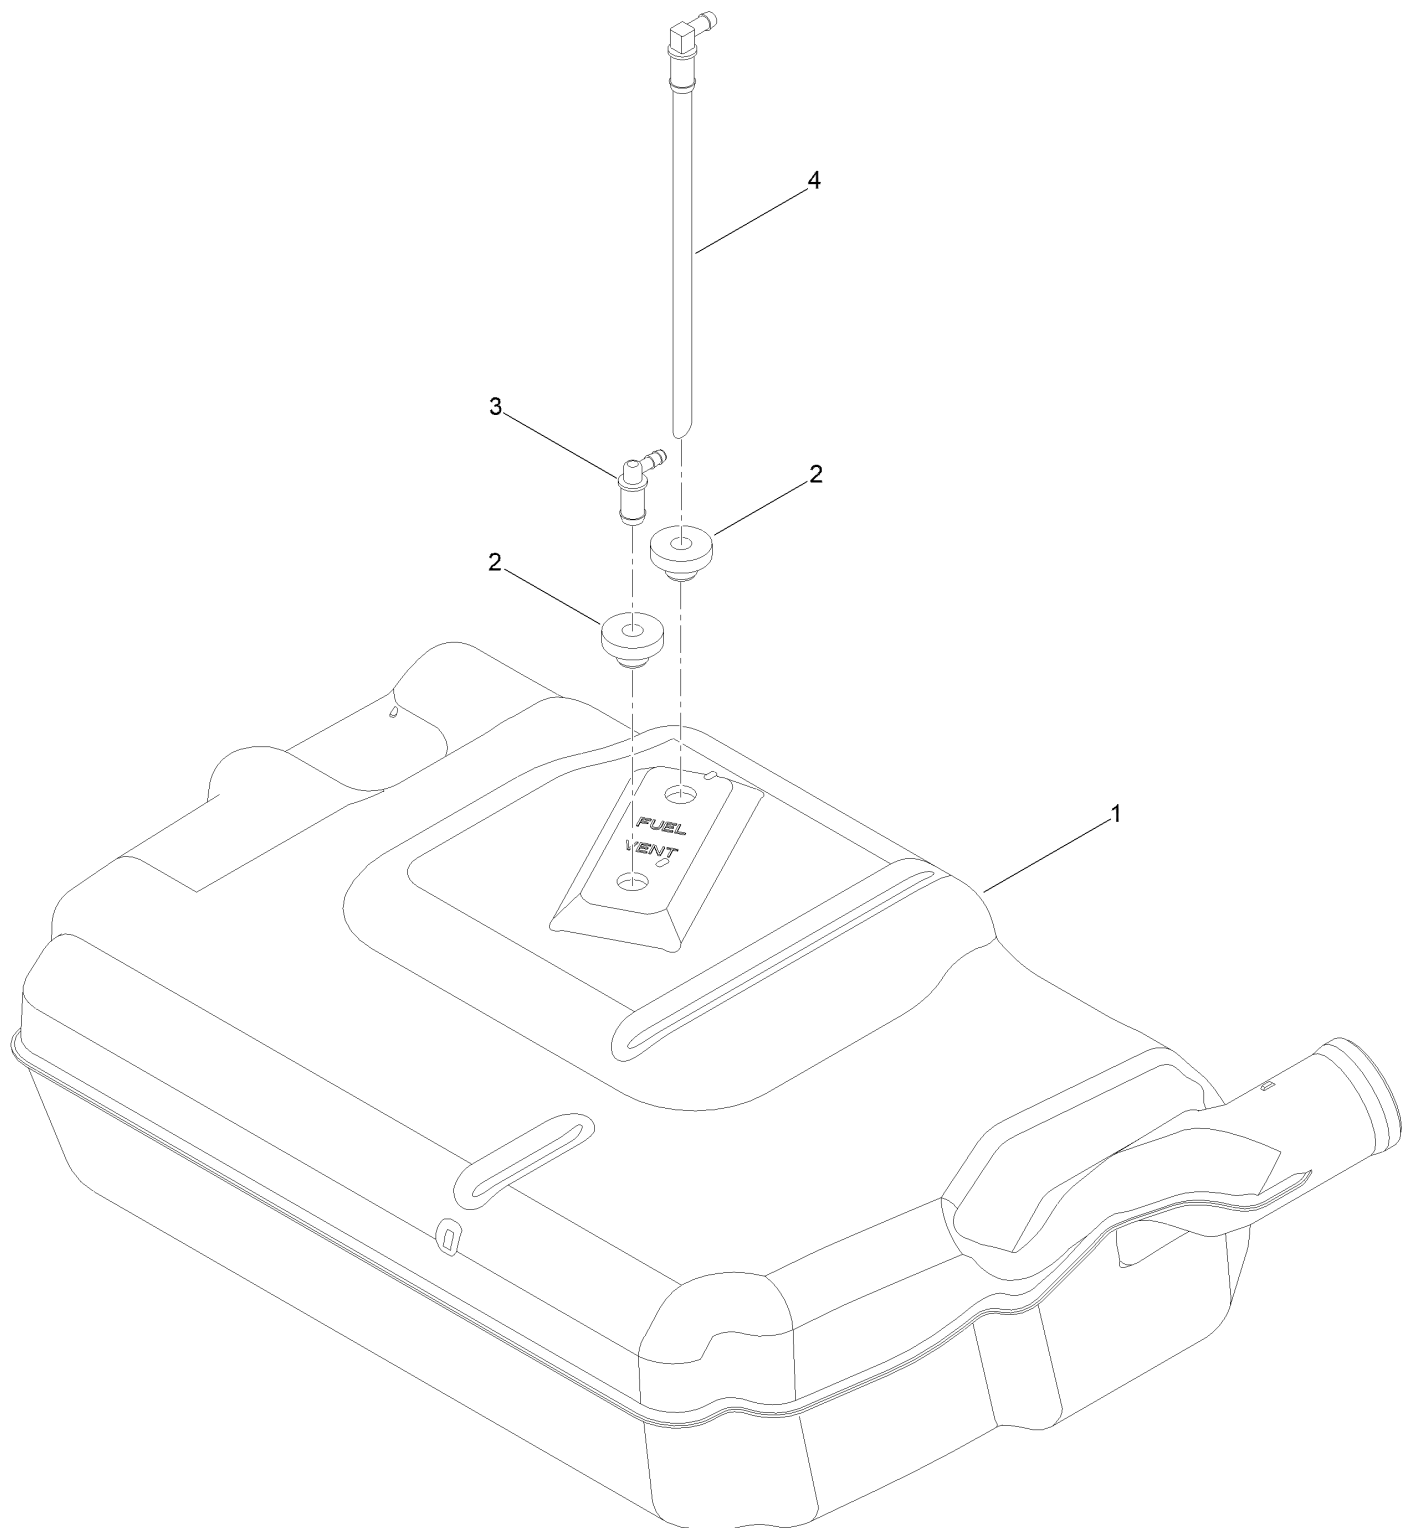


## Fuel Tank Assembly No. 161-6588 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           |                    | 1           | Tank-Fuel ●        |
| 2           | 46-6560            | 2           | Bushing            |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 3           | 161-6609           | 1           | Fitting-Elbow 90     |
| 4           | 147-2934           | 1           | Fitting-Pickup, Fuel |

● Not serviced separately

# Electrical Assembly

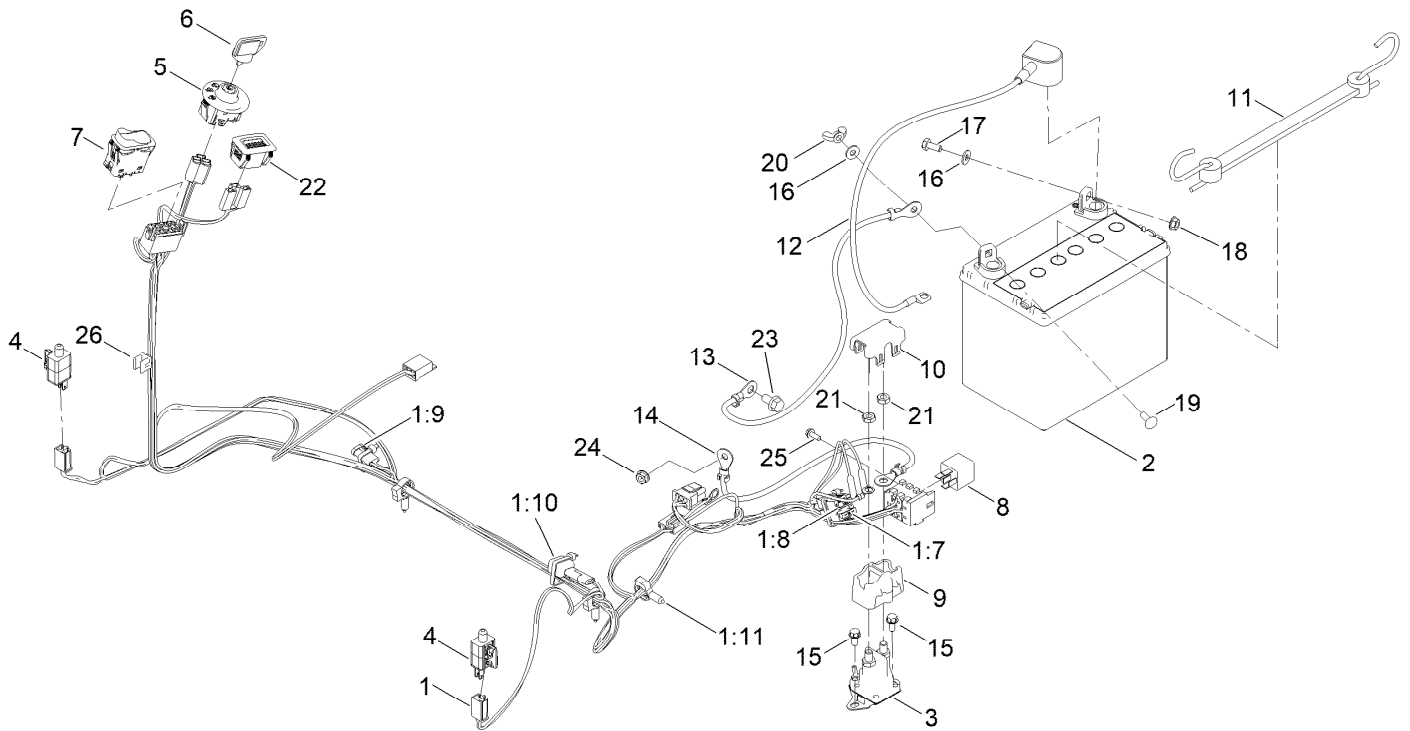


## Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>               | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>                |
|-------------|--------------------|-------------|----------------------------------|-------------|--------------------|-------------|-----------------------------------|
| 1           | 145-6382           | 1           | Harness-Wire, Main               | 11          | 104-2466           | 1           | Holddown-Battery                  |
| 1:7         | 109355             | 1           | Fuse-Blade, 15 Amp               | 12          | 147-2941           | 1           | Cable-Battery,Red                 |
| 1:8         | 109102             | 1           | Fuse-Blade, 25 Amp               | 13          | 119-8899           | 1           | Cable-Battery, Black              |
| 1:9         | 32160-029          | 1           | Connector-Molded, 1F,1M          | 14          | 121-0711           | 1           | Cable-Battery, Positive           |
| 1:10        | 100-4918           | 1           | Diode                            | 15          | 32144-4            | 2           | Screw-HWH                         |
| 1:11        | 32180-047          | 3           | Clip-Tubing, Harness             | 16          | 119-8952           | 2           | Washer-Spcl                       |
| 2           |                    | 1           | Battery- Wet, 12V, 300 CCA<br>●■ | 17          | 137-3041           | 1           | Screw-HH                          |
| 3           | 117-1197           | 1           | Solenoid                         | 18          | 139-2575           | 1           | Nut-HF                            |
| 4           | 110-6765           | 2           | Switch                           | 19          | 137-3053           | 1           | Screw-CARR                        |
| 5           | 137-4100           | 1           | Switch-Ignition                  | 20          | 32103-22           | 1           | Nut-Wing                          |
| 6           | 63-8360            | 1           | Key-Ignition                     | 21          | 139-2580           | 2           | Nut-HJ                            |
| 7           | 139-6368           | 1           | Switch-Rocker,<br>On-None-On     | 22          | 139-6404           | 1           | Hour Meter                        |
| 8           | 1-643275           | 1           | Relay                            | 23          | 33104-016          | 1           | Screw-HHF                         |
| 9           | 140-2080           | 1           | Cover-Solenoid                   | 24          | 32128-33           | 1           | Nut-HF                            |
| 10          | 140-2081           | 1           | Cap-Solenoid                     | 25          | 139-1713           | 1           | Screw-Thd Roll                    |
|             |                    |             |                                  | 26          | 32180-082          | 1           | Clip-Edge W/Tie,<br>Perpendicular |

● Obtain locally.

■ Not serviced separately


# Deck Assembly

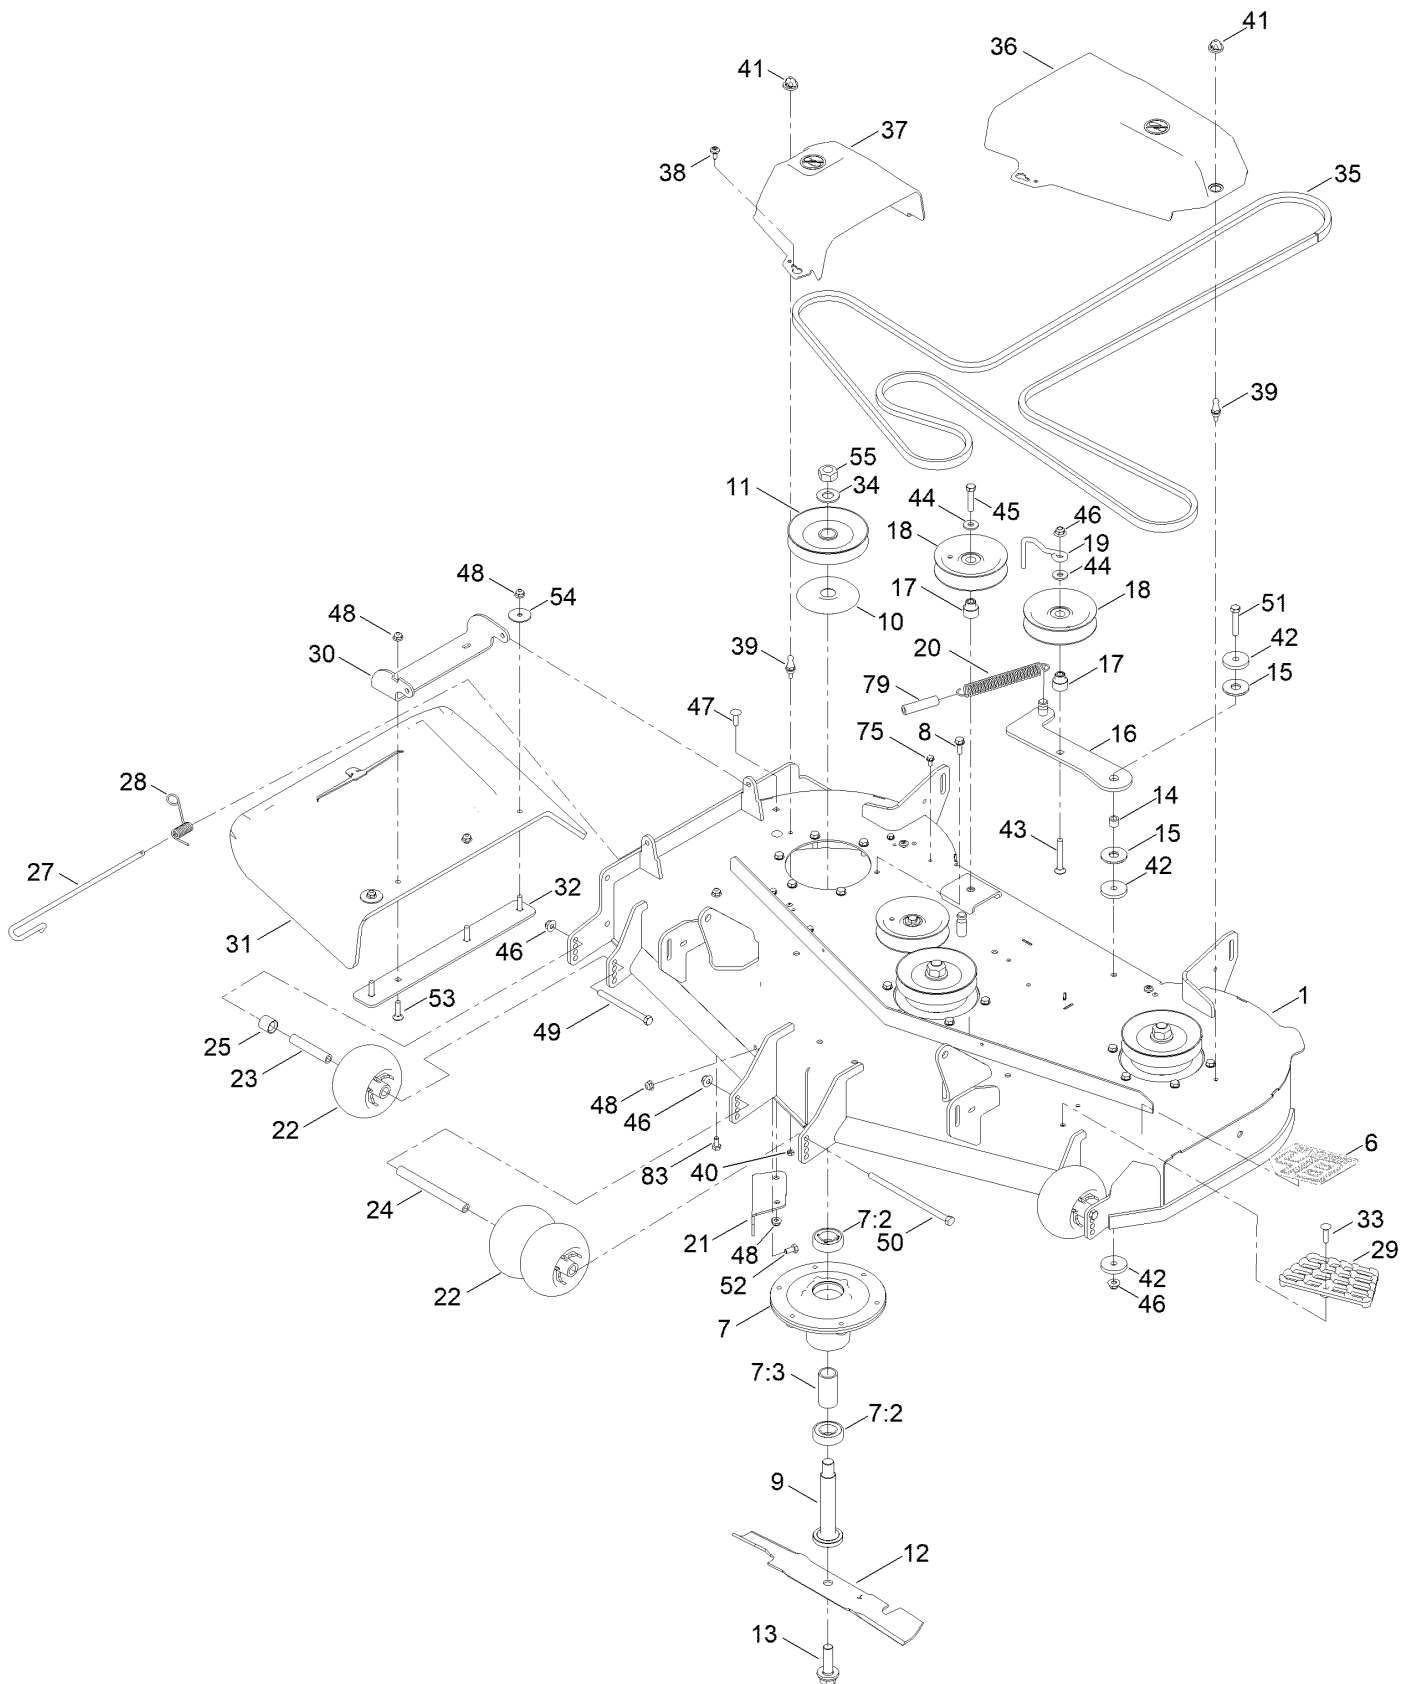

## Deck Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 147-8749           | 1           | 48 In Deck & Decal ASM     | 32          | 115-5048-03        | 1           | Plate-Deflector    |
| 6           | 147-7568           | 1           | Decal - Deck 48            | 33          | 139-1702           | 1           | Bolt-Carriage      |
| 7           | 139-2357           | 3           | Spindle ASM                | 34          | 7-4150             | 3           | Washer             |
| 7:2         | 116-0720           | 2           | Bearing-Ball               | 35          | 133-1166           | 1           | V-Belt             |
| 7:3         | 138-7220           | 1           | Spacer-Bearing             | 36          | 147-2854           | 1           | Cover-Belt, LH     |
| 8           | 32144-41           | 18          | Screw-Taptite              | 37          | 147-2853           | 1           | Cover-Belt, RH     |
| 9           | 115-2642           | 3           | Shaft-Spindle              | 38          | 120-7950           | 4           | Screw-Torx         |
| 10          | 138-7221           | 3           | Shield-Bearing             | 39          | 147-2872           | 2           | Stud-Ball          |
| 11          | 147-7673           | 3           | Pulley                     | 40          | 115-7373           | 2           | Nut-Lock           |
| 12          | 117-7277-03        | 3           | Blade-Hi Flo, 16.50 Inch   | 41          | 147-2871           | 2           | Grommet-Ball       |
| 13          | 145-0412           | 3           | Screw-Blade                | 42          | 110-9981           | 3           | Washer-Plain       |
| 14          | 138-7225           | 1           | Spacer                     | 43          | 3231-31            | 1           | Screw-CARR         |
| 15          | 114-0463           | 2           | Washer-Friction, Composite | 44          | 80-6990            | 3           | Washer-Hardened    |
| 16          | 145-7038           | 1           | Idler Arm ASM              | 45          | 323-9              | 2           | Screw-HH           |
| 17          | 138-7227           | 3           | Bushing-Idler              | 46          | 119-4042           | 5           | Nut-HF, NI         |
| 18          | 132-4718           | 3           | Pulley-Idler, Flat         | 47          | 3230-22            | 2           | Screw-CARR         |
| 19          | 136-5615           | 1           | Guide-Belt, Idler          | 48          | 119-4041           | 9           | Nut-HF             |
| 20          | 138-7228           | 1           | Spring-Extension           | 49          | 323-23             | 2           | Screw-HH           |
| 21          | 117-7418-03        | 1           | Baffle-Cutoff              | 50          | 108-5388           | 1           | Screw-HH           |
| 22          | 1-603299           | 4           | Roller-Scalp, Anti         | 51          | 323-10             | 1           | Screw-HH           |
| 23          | 138-7229           | 2           | Tube-Spanner               | 52          | 139-2585           | 1           | Screw-HH           |
| 24          | 98-5967            | 1           | Spacer-Wheel               | 53          | 3230-3             | 4           | Screw-CARR         |
| 25          | 104-0892           | 2           | Spacer-Axle, Rear          | 54          | 3256-68            | 2           | Washer-Flat        |
| 27          | 138-7231           | 1           | Pin-Chute                  | 55          | 3219-7             | 3           | Nut-Hex            |
| 28          | 138-7232           | 1           | Spring-Torsion             | 75          | 32144-4            | 4           | Screw-HWH          |
| 29          | 126-4781-03        | 1           | Step-Deck                  | 79          | 99-7375            | 1           | Hose-Breather      |
| 30          | 114-1648-03        | 1           | Bracket-Deflector, Upper   | 83          | 322-2              | 1           | Screw-HH           |
| 31          | 147-3015           | 1           | Deflector - Molded         |             |                    |             |                    |


Deck Decal Assembly No. 147-8749

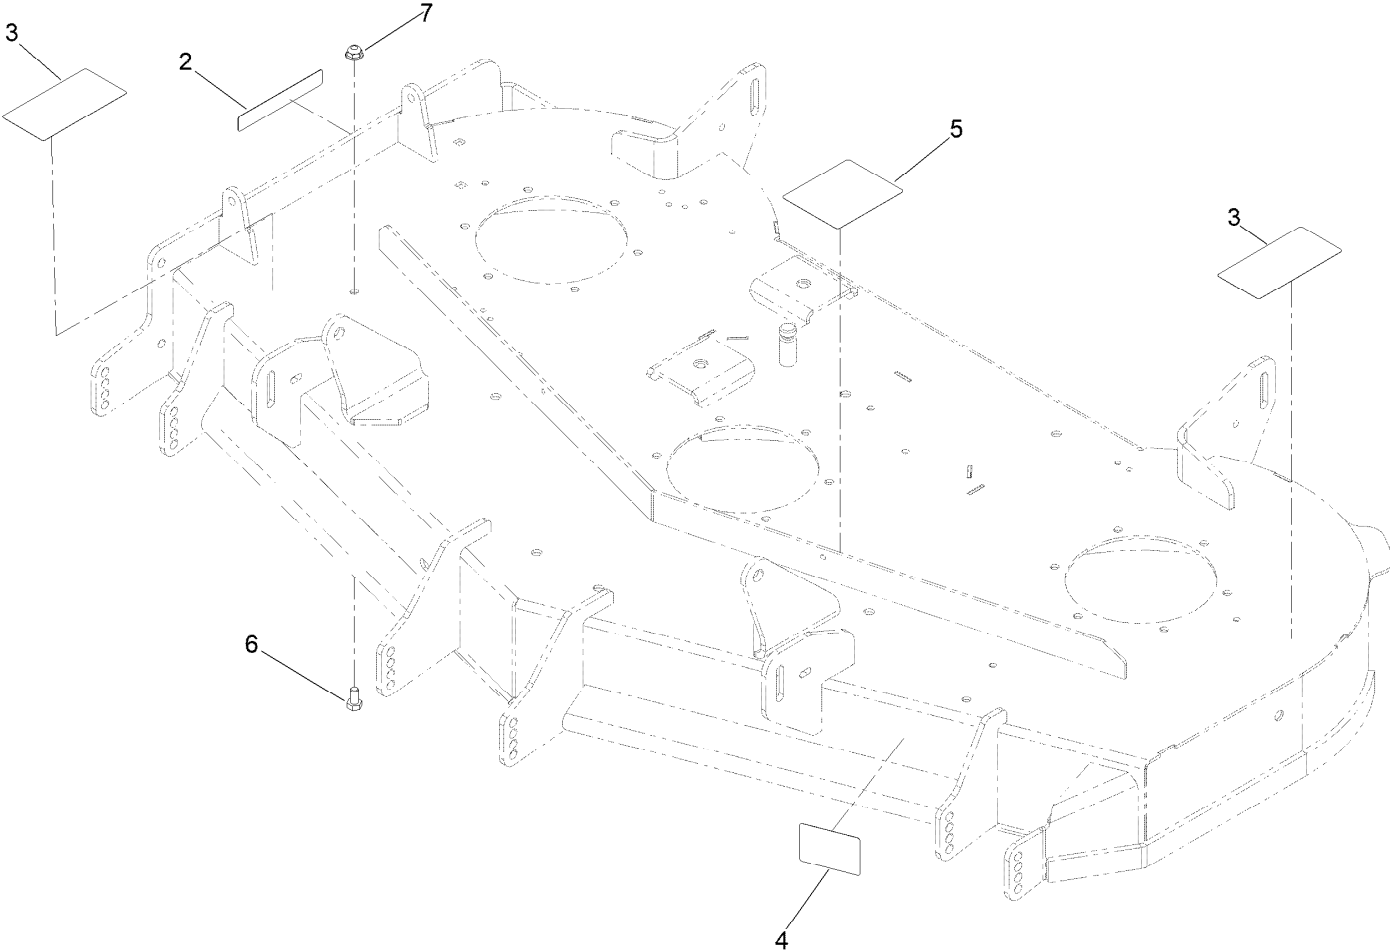

## Deck Decal Assembly No. 147-8749 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|---------------------|
| 2           | 130-0731           | 1           | Decal-Danger       | 5           | 117-1194           | 1           | Decal-Routing, Belt |
| 3           | 132-0872           | 2           | Decal-Danger, Deck | 6           | 139-2585           | 1           | Screw-HH            |
| 4           | 130-0765           | 1           | Decal-Scalp, Anti  | 7           | 119-4041           | 1           | Nut-HF              |


## Model Specific Decal Assembly

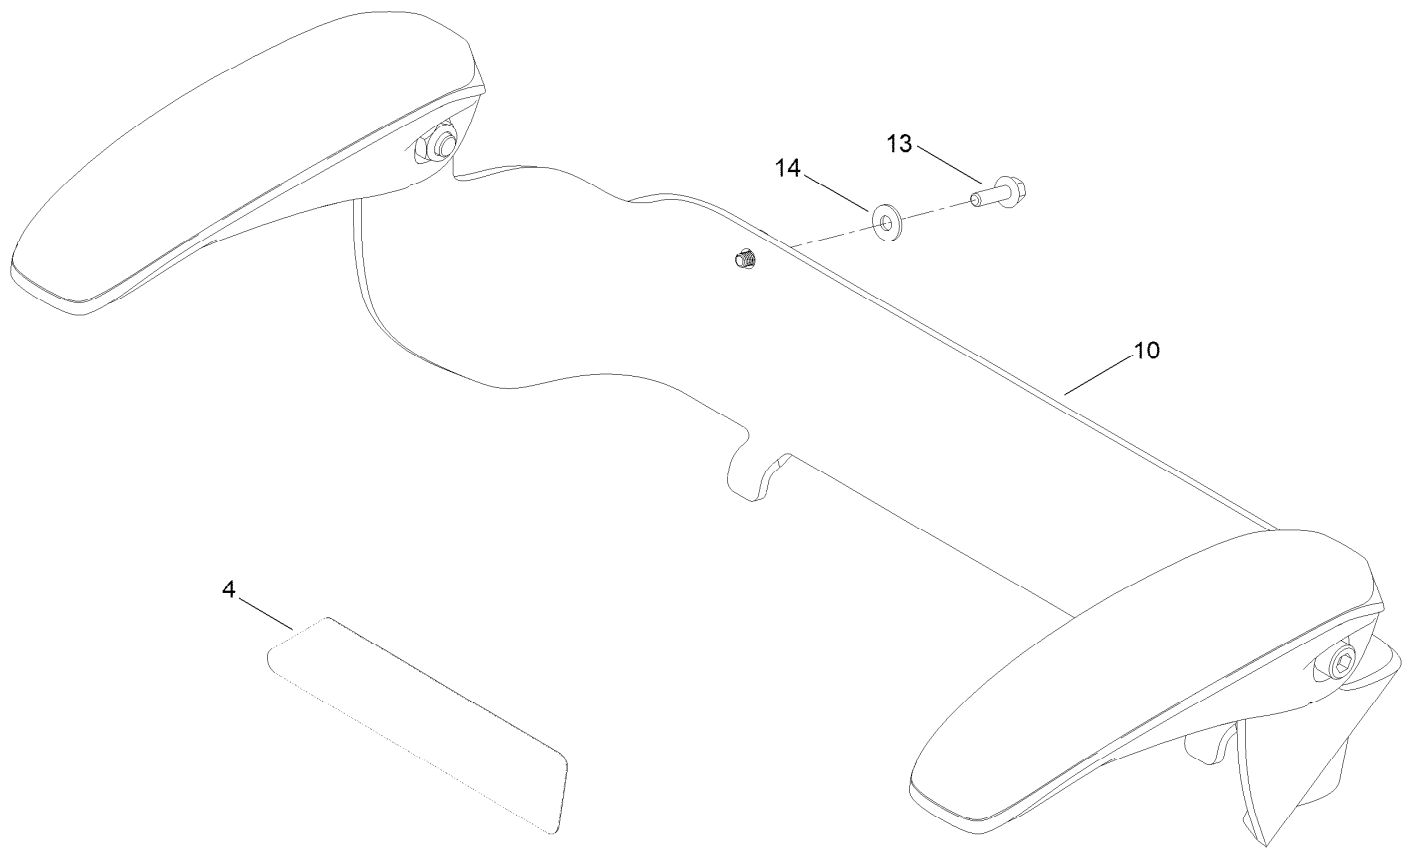

## Model Specific Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 4           | 161-4555           | 1           | Decal Mr4800       | 13          | 120-9641           | 2           | Screw-HHF          |
| 10          | 161-4567           | 1           | Kit-Arm Rest       | 14          | 119-8952           | 2           | Washer-Spcl        |


# Seat Pan Assembly

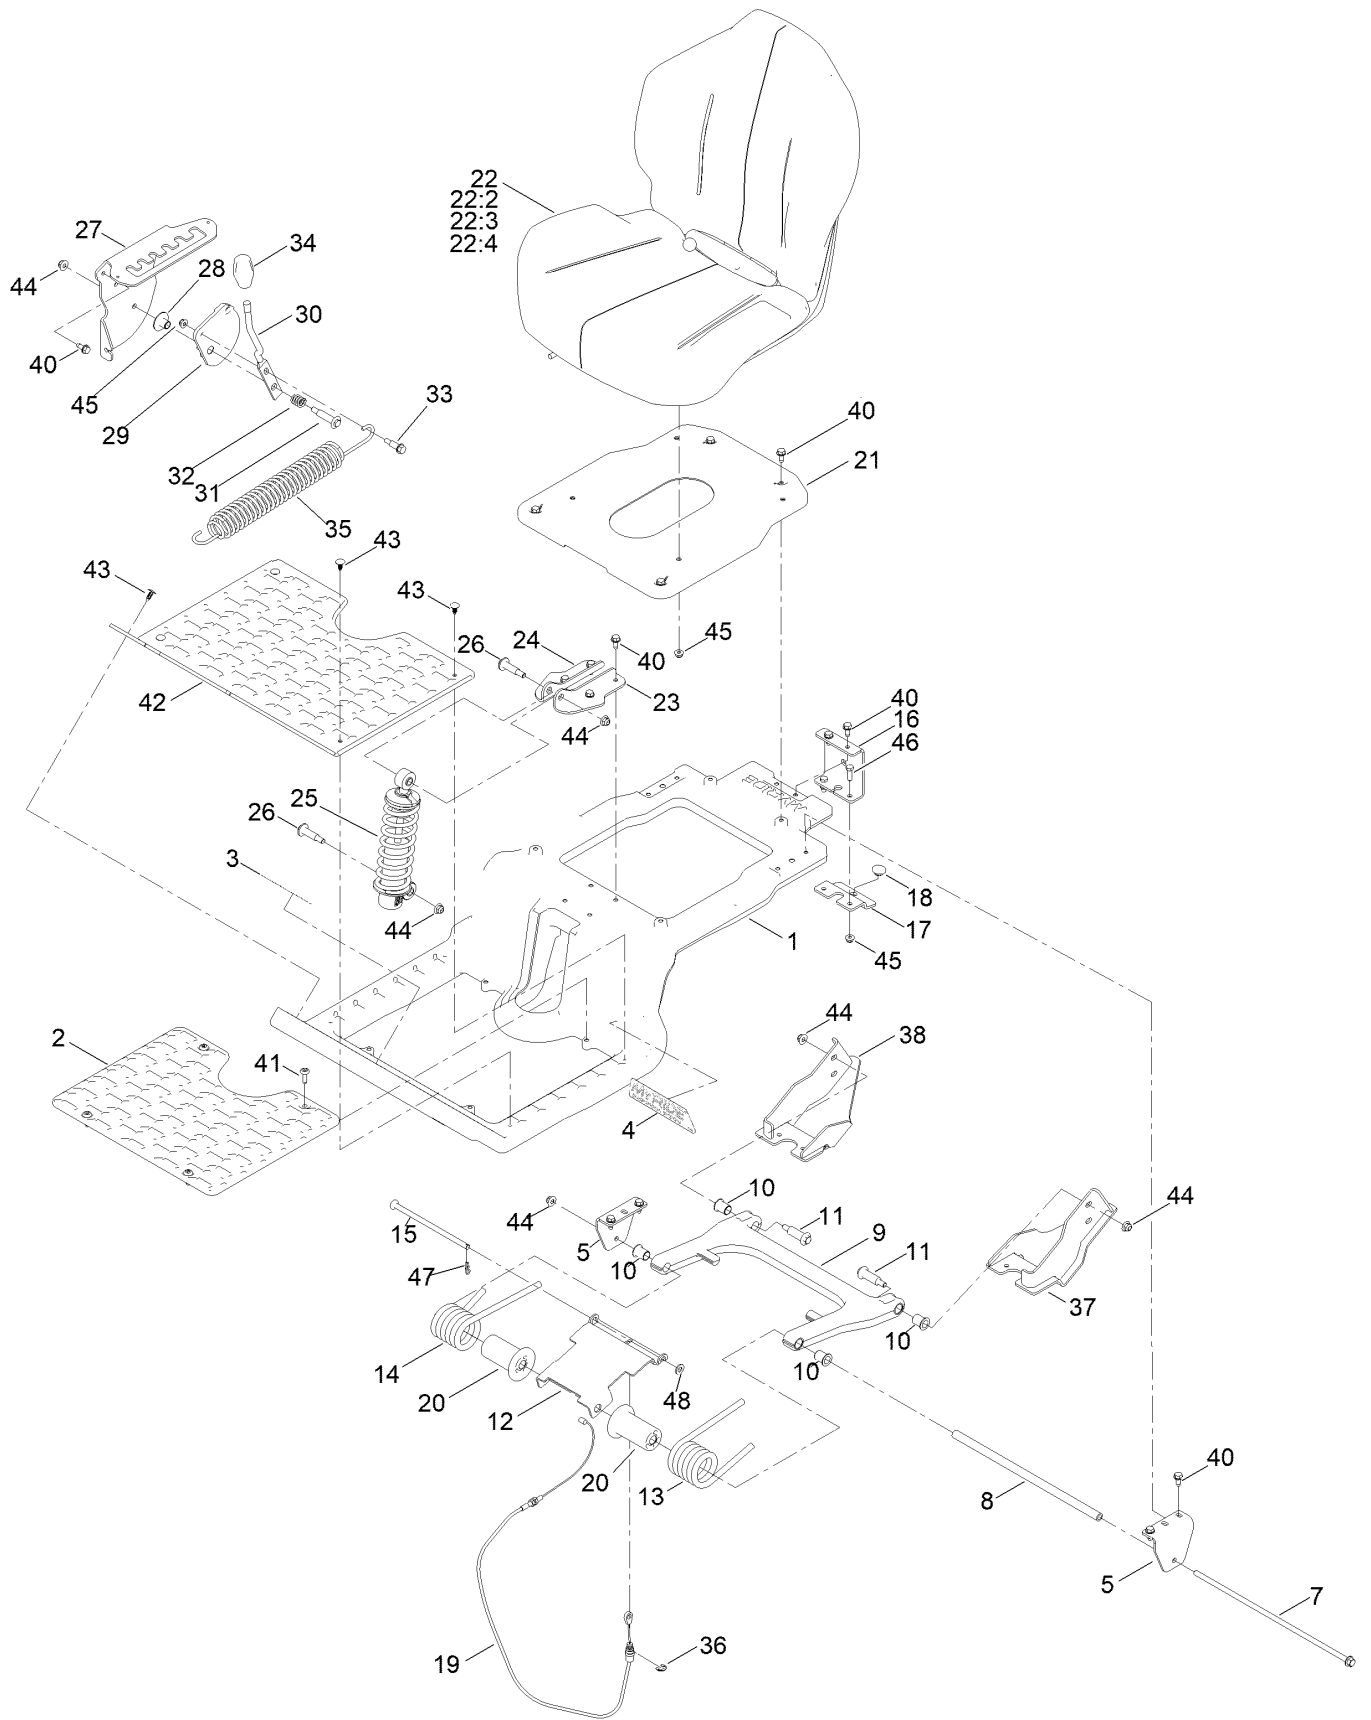

## Seat Pan Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>              | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>              |
|-------------|--------------------|-------------|---------------------------------|-------------|--------------------|-------------|---------------------------------|
| 1           | 145-6394-05        | 1           | Platform, Myride                | 24          | 133-9319-03        | 1           | Bracket-Shock Mount, Upper (RH) |
| 2           | 145-6395-05        | 1           | Platform, Myride                | 25          | 139-2427           | 1           | Shock/Spring ASM                |
| 3           | 147-7662           | 1           | Decal - Myride                  | 26          | 136-7198           | 2           | Bolt-Shoulder                   |
| 4           | 147-7575           | 1           | Decal - Myride                  | 27          | 145-6309-01        | 1           | Bracket-Mr Gate                 |
| 5           | 138-7517           | 2           | Bracket-Mount, Swing Arm        | 28          | 139-5800           | 1           | Bushing - Flange                |
| 7           | 138-7548           | 1           | Screw-HHF                       | 29          | 147-5171           | 1           | Pulley-Cam                      |
| 8           | 138-7549           | 1           | Tube-Spacer                     | 30          | 147-5172           | 1           | Lever-Adjustment, Threaded      |
| 9           | 145-6312           | 1           | Arm-Swing                       | 31          | 92-1057            | 1           | Bolt-Shoulder                   |
| 10          | 138-2573           | 4           | Bushing-Flange                  | 32          | 139-5858           | 1           | Spring-Compression              |
| 11          | 138-2547           | 2           | Bolt-Shoulder                   | 33          | 140-3759           | 1           | Bolt-Shoulder,HHF               |
| 12          | 138-7566-03        | 1           | Plate-Adjuster                  | 34          | 147-8715           | 1           | Knob-Mr                         |
| 13          | 137-1983           | 1           | Spring-Torsion, LH              | 35          | 138-9848           | 1           | Spring-Extension                |
| 14          | 137-7018           | 1           | Spring-Torsion, RH              | 36          | 32120-47           | 1           | Ring-Retaining, External        |
| 15          | 138-9813           | 1           | Rod-Adjustment                  | 37          | 147-8721-03        | 1           | Mount-Mr Swing Arm, LH          |
| 16          | 138-9788           | 1           | Bracket-Cable                   | 38          | 147-8722-03        | 1           | Mount-Mr Swing Arm, RH          |
| 17          | 139-2361-03        | 1           | Bracket Lower                   | 40          | 32144-70           | 17          | Screw-HWHTF                     |
| 18          | 135-0505           | 1           | Bumper-Seat                     | 41          | 147-7606           | 4           | Screw-Spcl                      |
| 19          | 147-7713           | 1           | Cable-Adjustment, Myride        | 42          | 147-7724           | 1           | Floor Mat                       |
| 20          | 138-9776           | 2           | Retainer-Spring                 | 43          | 117-2382           | 6           | Plug-Plastic                    |
| 21          | 147-7690-03        | 1           | Pan-Seat [black]                | 44          | 119-4042           | 6           | Nut-HF, NI                      |
| 22          | 163-6012           | 1           | Seat ASM - Milsco Cs180D        | 45          | 119-4041           | 7           | Nut-HF                          |
| 22:2        | 161-4566           | 1           | Kit-Adjuster                    | 46          | 139-1716           | 2           | Screw-HH                        |
| 22:3        | 82-2190            | 1           | Switch-Bail                     | 47          | 137-3083           | 1           | Pin-Hair                        |
| 22:4        | 163-6015           | 1           | Cover-Seat                      | 48          | 115-1166           | 1           | Washer-Plain                    |
| 23          | 133-9318-03        | 1           | Bracket-Shock Mount, Upper (LH) |             |                    |             |                                 |

# Clutch Assembly

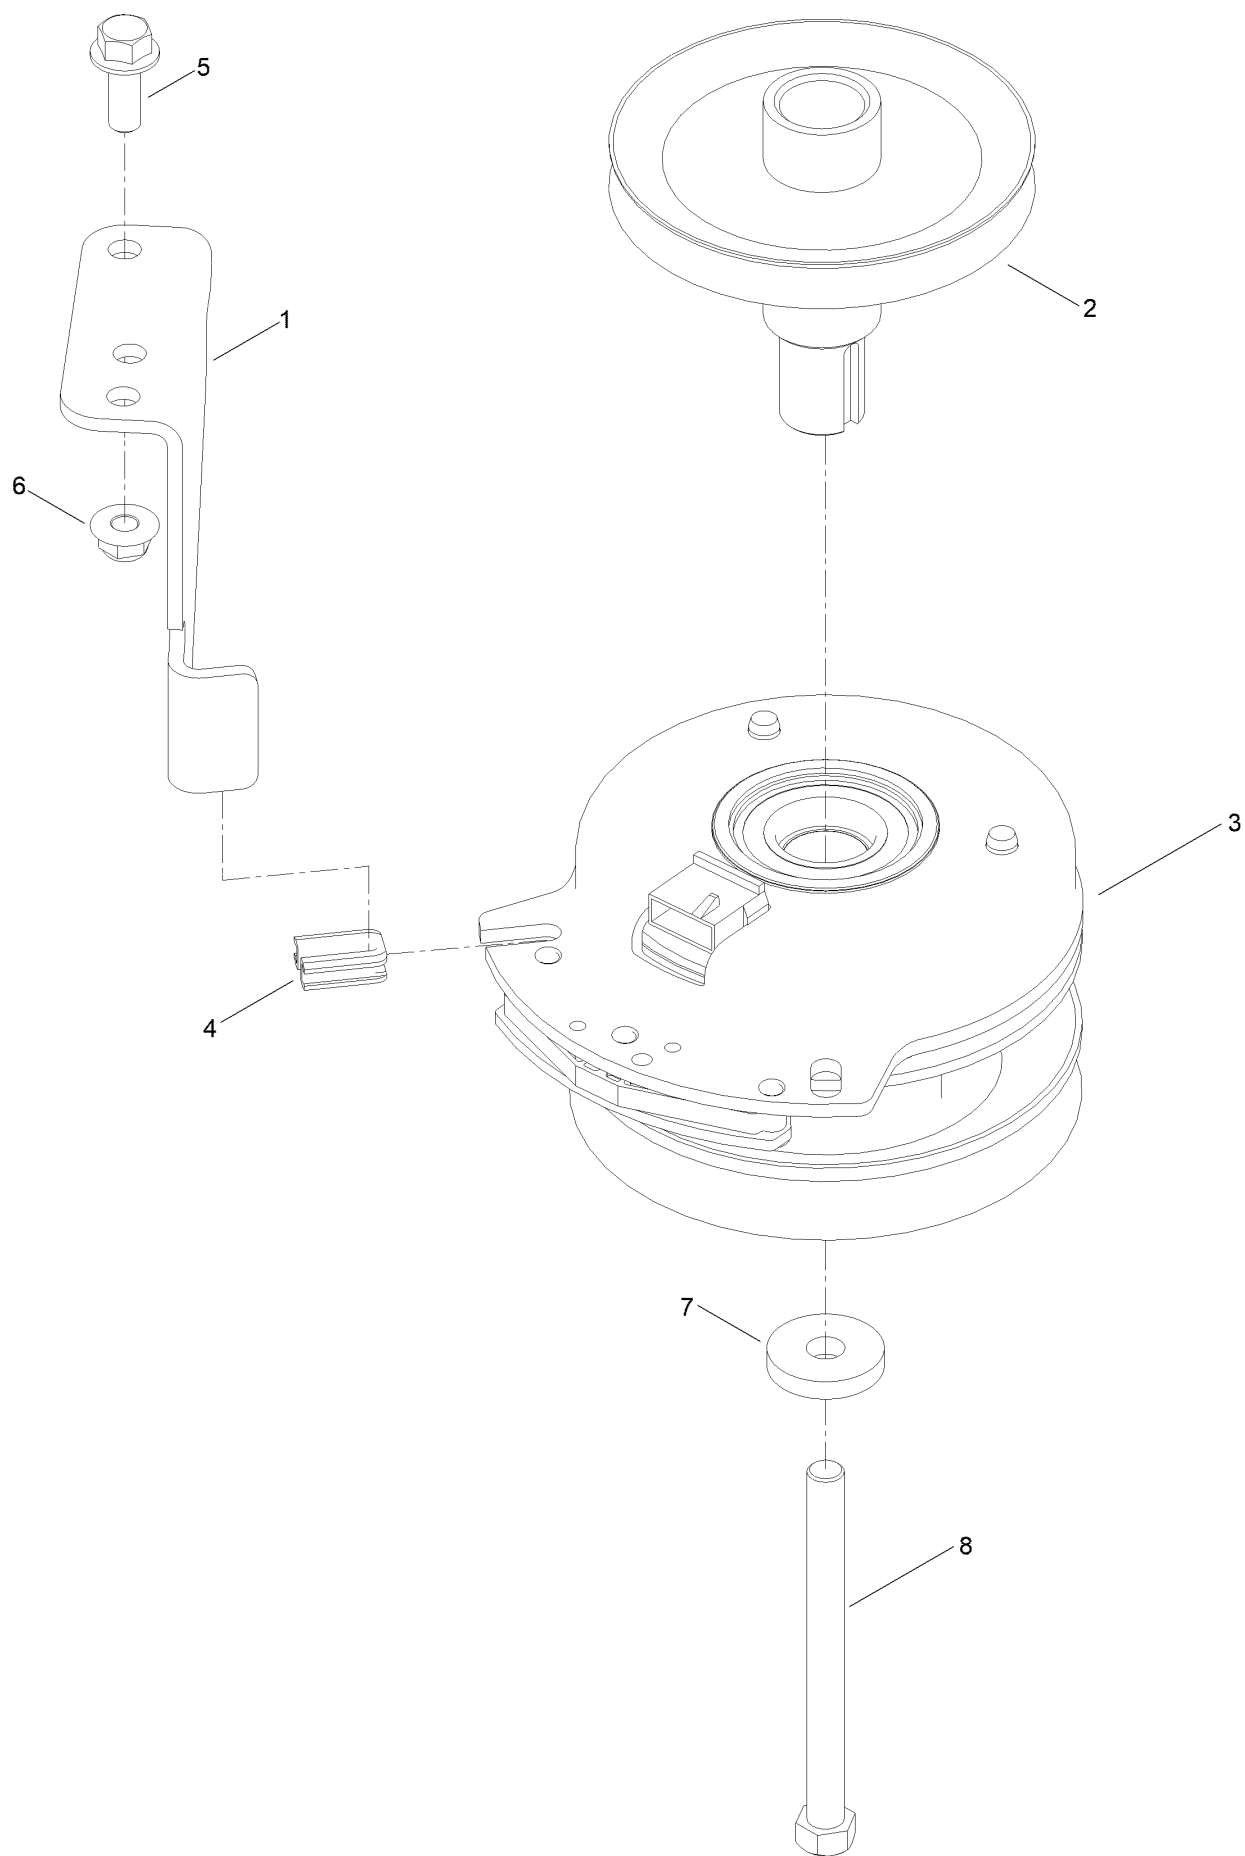

## Clutch Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 137-7000           | 1           | Stop-Clutch (Wide) | 5           | 3234-42            | 1           | Screw-HHF          |
| 2           | 138-9831           | 1           | Pulley-Engine      | 6           | 119-4042           | 1           | Nut-HF, NI         |
| 3           | 127-3410           | 1           | Clutch-PTO         | 7           | 112843             | 1           | Washer             |
| 4           | 120-2217           | 1           | Isolator-Clutch    | 8           | 3212-19            | 1           | Screw-HH           |

# Attachments and Accessories

## For 76440TA — Titan MR4800 Zero Turn Riding Mower

| Product Name                                 | Model/Part |
|----------------------------------------------|------------|
| Powered Bagger, Titan Models ROHS.....       | 79348      |
| 48in Mulch Kit .....                         | 148-1279   |
| Bagging Enhancement Kit 48in.....            | 140-5121   |
| 48/54/60 Striping Kit .....                  | 148-1367   |
| ROPS Kit .....                               | 79487      |
| Assist Bar Kit .....                         | 161-4450   |
| Heavy Duty Spring Kit.....                   | 161-4525   |
| Kit-Arm Rest .....                           | 161-4567   |
| Led Light Kit.....                           | 147-8757   |
| Slope Sensor Kit.....                        | 79489      |
| Jack Kit .....                               | 127-6666   |
| Oil-30/10W-30 Synthetic (Quart).....         | 138-6053   |
| 4-Cycle Fuel, Snow And Lawn 32oz Can .....   | 131-3823   |
| Fuel Stabilizer .05 oz .....                 | 130-2393   |
| Toro Premium Fuel Treatment 12oz Bottle..... | 131-6572   |
| 10W30 4-Cycle Engine Oil (32oz Bottle).....  | 38280      |
| Toro 4-Cycle SAE 30 Oil (32oz Bottle) .....  | 38903      |
| HYPR-OIL 500 (quart) .....                   | 114-4713   |
| Mount, Jack Titan .....                      | 147-8824   |
| Hydro Service Kit .....                      | 144-5347   |
| Flat Free Caster Wheel Kit.....              | 145-0489   |
| HD Bagger Cover Kit .....                    | 140-5036   |
| Toro Deluxe Rider Cover.....                 | 490-7319   |

**Notes:**

**Notes:**

**Notes:**



**Count on it.**