


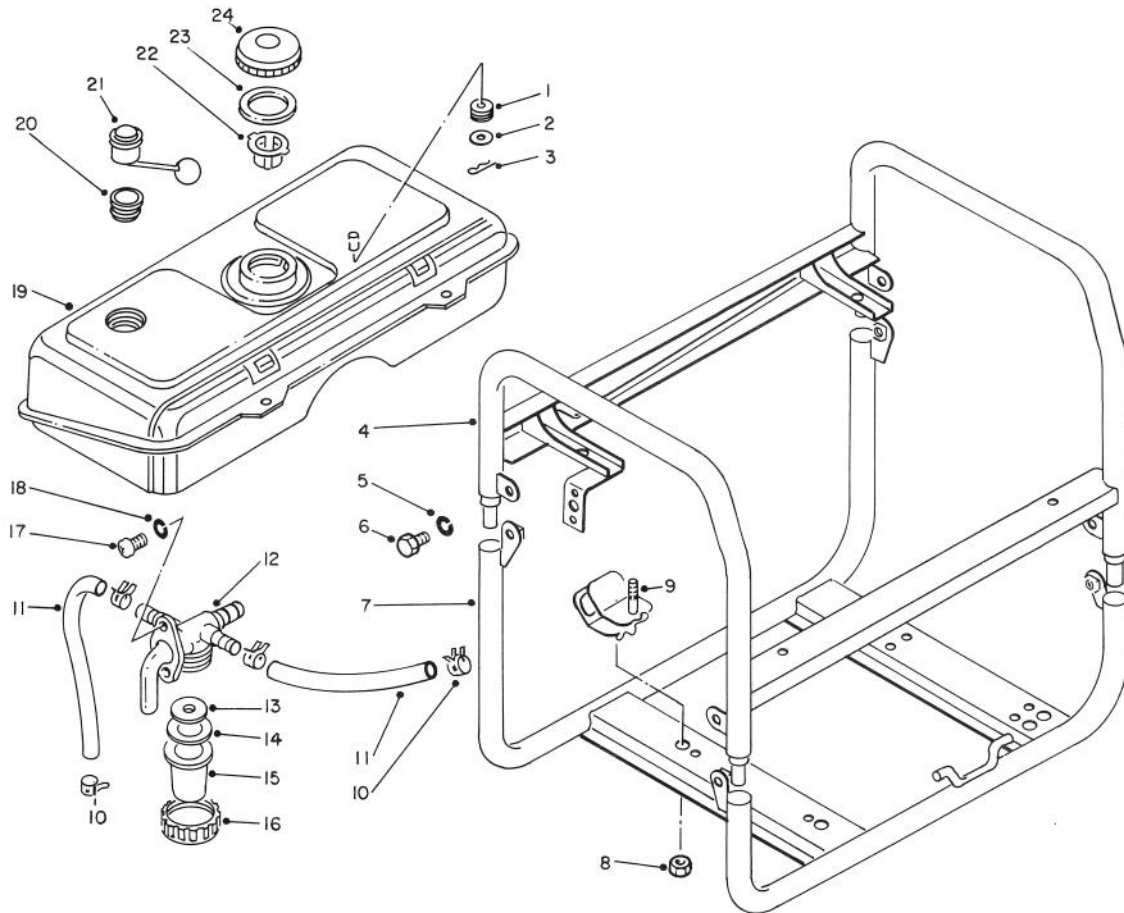


MODEL NO. 62018-5000001 &amp; UP

**PARTS  
CATALOG**
**T 1800 GENERATOR**

**FUEL TANK & FRAME ASSEMBLY**

| Ref. No. | Part No. | Description                              | No. Used |
|----------|----------|------------------------------------------|----------|
| 1        | 50-0890  | Cushion                                  | 4        |
| 2        | 50-0760  | Washer                                   | 4        |
| 3        | 50-0970  | Clip                                     | 4        |
| 4        | 55-0270  | Frame — Upper                            | 1        |
| 5        | 81-1120  | Washer — Lock                            | 4        |
| 6        | 50-0050  | Bolt                                     | 4        |
| 7        | 55-0280  | Frame — Lower                            | 1        |
| 8        | 50-0530  | Nut                                      | 8        |
| 9        | 55-0290  | Mount — Engine                           | 4        |
| 10       | 50-0990  | Clip                                     | 4        |
| 11       | 50-0930  | Hose — Fuel                              | 2        |
| 12       | 50-3740  | Cock Assembly — Fuel (Incl. Ref. #13-16) | 1        |
| 13       | 50-3750  | Filter                                   | 1        |

| Ref. No. | Part No. | Description                            | No. Used |
|----------|----------|----------------------------------------|----------|
| 14       | 50-3770  | Gasket                                 | 1        |
| 15       | 50-3780  | Cup                                    | 1        |
| 16       | 50-3760  | Cap                                    | 1        |
| 17       | 50-0240  | Screw                                  | 2        |
| 18       | 81-1420  | Washer — Lock                          | 2        |
| 19       | 55-0250  | Tank — Fuel                            | 1        |
| 20       | 50-3850  | Gasket                                 | 1        |
| 21       | 50-3830  | Gauge Assembly — Fuel (Incl. Ref. #20) | 1        |
| 22       | 55-0260  | Filter                                 | 1        |
| 23       | 53-1420  | Gasket                                 | 1        |
| 24       | 50-3700  | Cap (Incl. Ref. #23)                   | 1        |
| *        | 50-1230  | Tool Assembly                          | 1        |

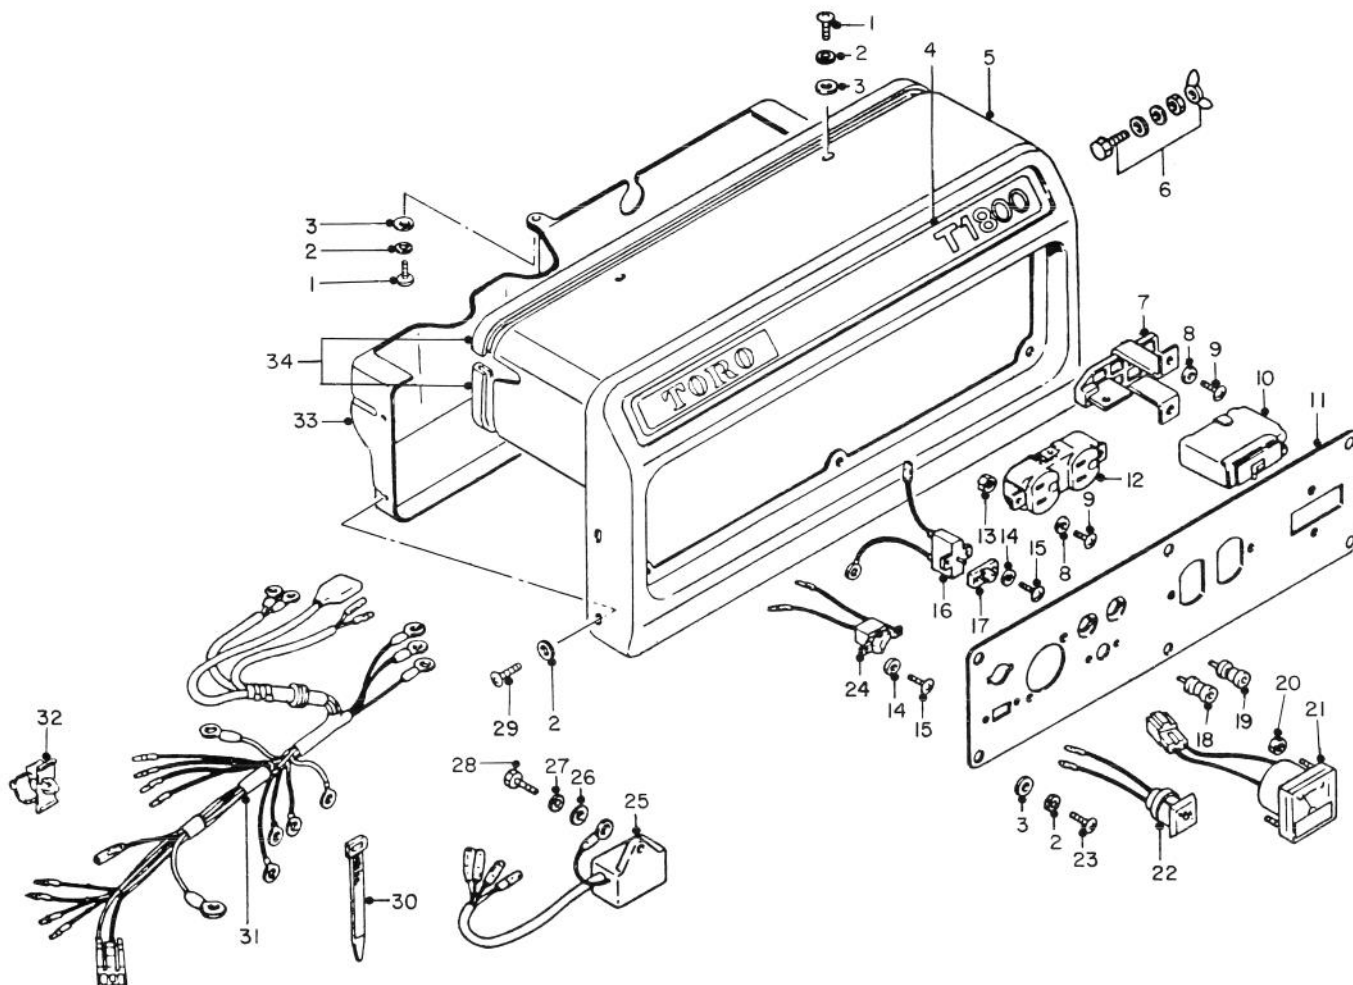
\*Not Illustrated



## CONTROL PANEL ASSEMBLY

| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| 1        | 50-0280  | Screw                | 6        |
| 2        | 81-1380  | Washer — Lock        | 16       |
| 3        | 50-0610  | Washer               | 12       |
| 4        | 55-0490  | Emblem — Toro T1800  | 1        |
| 5        | 55-0450  | Panel — Control      | 1        |
| 6        | 50-4530  | Terminal — Ground    | 1        |
| 7        | 50-4380  | Holder — Breaker     | 1        |
| 8        | 55-0540  | Washer               | 4        |
| 9        | 53-1080  | Screw                | 4        |
| 10       | 55-0520  | Circuit Breaker      | 1        |
| 11       | 55-0480  | Plate — Panel        | 1        |
| 12       | 50-4490  | Receptacle           | 1        |
| 13       | 50-0500  | Nut                  | 2        |
| 14       | 50-6750  | Washer               | 4        |
| 15       | 50-6760  | Screw                | 4        |
| 16       | 50-8700  | Circuit Breaker D.C. | 1        |
| 17       | 50-8720  | Cap                  | 1        |

| Ref. No. | Part No. | Description            | No. Used |
|----------|----------|------------------------|----------|
| 18       | 55-0560  | Terminal — Minus       | 1        |
| 19       | 55-0550  | Terminal — Plus        | 1        |
| 20       | 50-0490  | Nut                    | 2        |
| 21       | 50-3470  | Meter — Voltage (150V) | 1        |
| 22       | 55-0500  | Lamp — Oil Lever Alarm | 1        |
| 23       | 50-0270  | Screw                  | 6        |
| 24       | 50-4350  | Switch — Engine        | 1        |
| 25       | 50-3550  | Unit — Oil Level Alarm | 1        |
| 26       | 50-0620  | Washer                 | 1        |
| 27       | 81-1450  | Washer — Lock          | 1        |
| 28       | 50-0020  | Bolt                   | 1        |
| 29       | 55-0470  | Screw                  | 4        |
| 30       | 50-1100  | Clamp                  | 3        |
| 31       | 55-0570  | Harness — Control      | 1        |
| 32       | 55-0580  | Clamp                  | 1        |
| 33       | 55-0460  | Panel — Rear           | 1        |
| 34       | 50-4300  | Seal — Panel           | 2        |

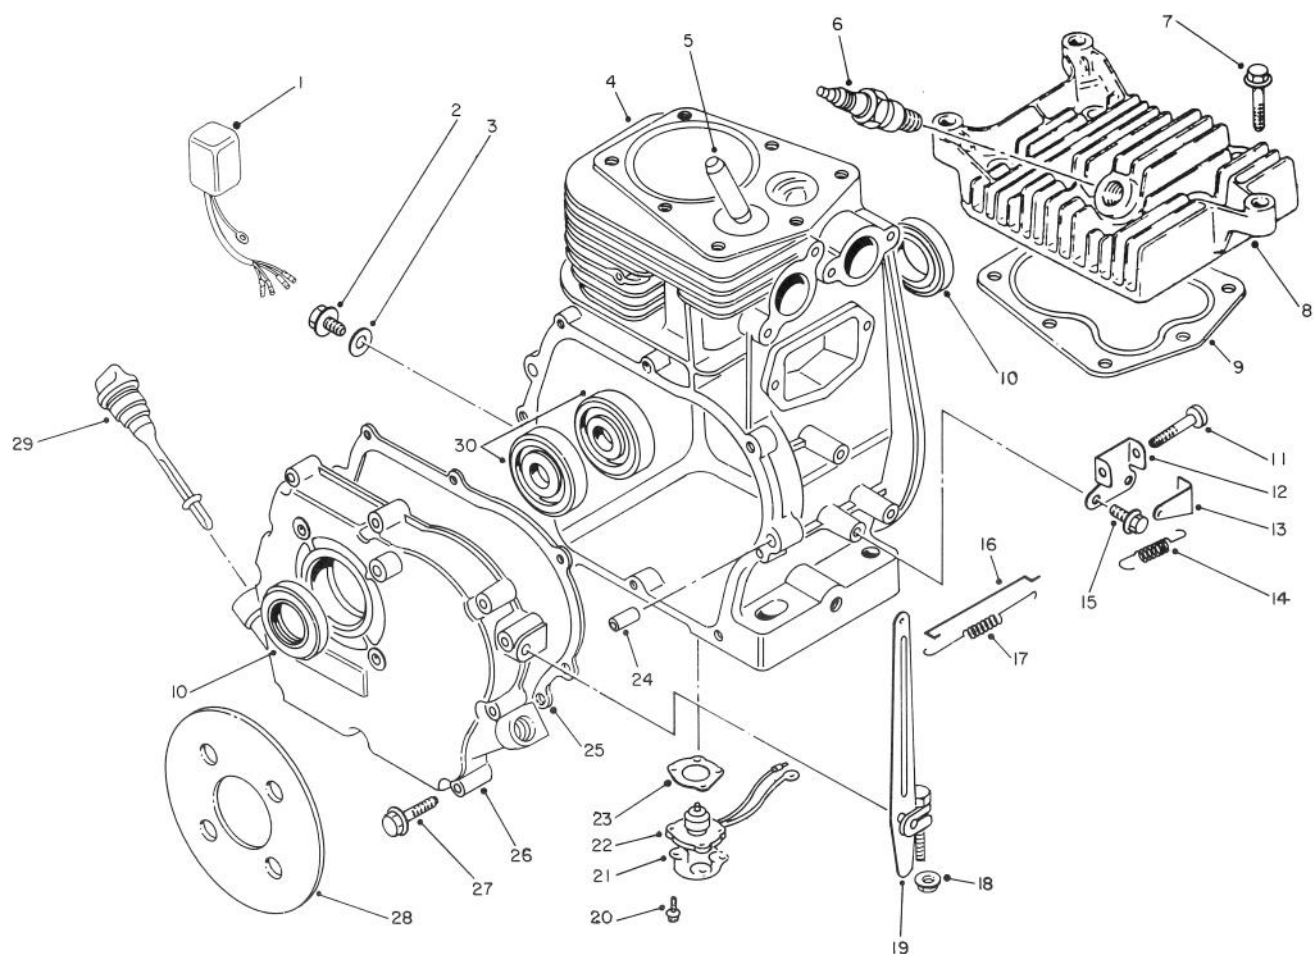


## ENGINE ASSEMBLY

| Ref. No. | Part No. | Description               | No. Used |
|----------|----------|---------------------------|----------|
| 1        | 50-3550  | Unit — Oil Level Alarm    | 1        |
| 2        | 53-0970  | Plug — Drain              | 1        |
| 3        | 50-0800  | Gasket                    | 1        |
| 4        | 55-1200  | Cylinder                  | 1        |
| 5        | 50-6110  | Guide — Valve             | 2        |
| 6        | 50-1160  | Spark Plug (NGK, BP-5HS)  | 1        |
| 7        | 50-0190  | Bolt                      | 7        |
| 8        | 50-1250  | Cylinder Head             | 1        |
| 9        | 50-1280  | Gasket                    | 1        |
| 10       | 50-0870  | Oil Seal                  | 2        |
| 11       | 50-0680  | Screw                     | 1        |
| 12       | 50-3260  | Bracket — Governor Spring | 1        |
| 13       | 50-3210  | Hook — Spring             | 1        |
| 14       | 50-1150  | Spring                    | 1        |
| 15       | 50-1340  | Bolt                      | 2        |
| 16       | 50-3280  | Rod — Carburetor          | 1        |

| Ref. No. | Part No. | Description            | No. Used |
|----------|----------|------------------------|----------|
| 17       | 50-1130  | Spring                 | 1        |
| 18       | 50-7180  | Nut                    | 1        |
| 19       | 55-0050  | Lever — Control        | 1        |
| 20       | 50-6190  | Bolt                   | 4        |
| 21       | 50-3540  | Plate — Lead Wire      | 1        |
| 22       | 55-0030  | Sensor — Oil Level     | 1        |
| 23       | 50-3520  | Gasket                 | 1        |
| 24       | 81-0520  | Pin                    | 2        |
| 25       | 55-0020  | Gasket — Crankcase     | 1        |
| 26       | 55-0040  | Cover — Crankcase Side | 1        |
| 27       | 81-0550  | Bolt                   | 8        |
| 28       | 50-3970  | Seat — Joint           | 1        |
| 29       | 53-0120  | Gauge — Oil Level      | 1        |
| 30       | 53-0960  | Bearing                | 2        |
| *        | 55-0060  | Gasket Set (Optional)  | 1        |

\*Not Illustrated

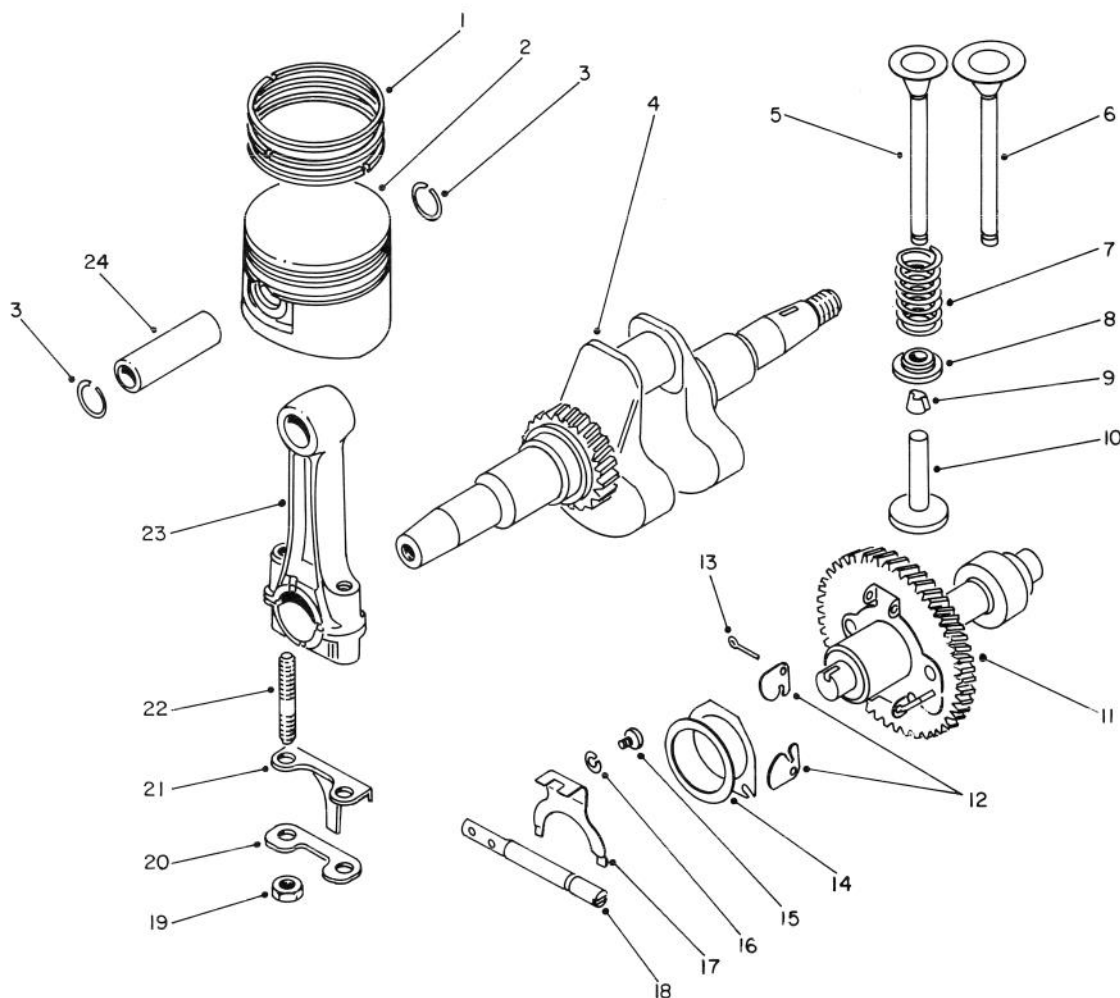


## CRANKCASE & CAM SHAFT ASSEMBLY

| Ref. No. | Part No. | Description                 | No. Used |
|----------|----------|-----------------------------|----------|
| 1        | 50-1710  | Ring Set — Piston Std.      | 1        |
| *        | 50-1720  | Ring Set — Piston (OS:0.25) | 1        |
| *        | 50-1730  | Ring Set — Piston (OS:0.5)  | 1        |
| 2        | 50-1620  | Piston Std.                 | 1        |
| *        | 50-1630  | Piston (OS:0.25)            | 1        |
| *        | 50-1640  | Piston (OS:0.5)             | 1        |
| 3        | 50-0960  | Circlip                     | 2        |
| 4        | 55-0090  | Crankshaft                  | 1        |
| 5        | 50-2090  | Valve — Exhaust             | 1        |
| 6        | 50-2060  | Valve — Intake              | 1        |
| 7        | 50-2120  | Spring — Valve              | 2        |
| 8        | 50-2140  | Retainer — Spring           | 2        |
| 9        | 50-2160  | Cotter — Valve              | 2        |
| 10       | 50-1970  | Tappet (L:40.26)            | 2        |
| *        | 50-1980  | Tappet (L:40.19)            | 2        |
| *        | 50-1990  | Tappet (L:40.33)            | 2        |
| 11       | 50-1940  | Cam Shaft                   | 1        |

| Ref. No. | Part No. | Description                                   | No. Used |
|----------|----------|-----------------------------------------------|----------|
| 12       | 50-3070  | Arm                                           | 14       |
| 13       | 50-0430  | Cotter Pin                                    | 2        |
| 14       | 50-3110  | Spacer — Governor                             | 1        |
| 15       | 50-0220  | Screw                                         | 2        |
| 16       | 50-0590  | Washer                                        | 2        |
| 17       | 50-3150  | Plate — Shifter                               | 1        |
| 18       | 50-3130  | Shaft — Throttle Return                       | 1        |
| 19       | 50-0510  | Nut                                           | 2        |
| 20       | 50-1890  | Plate — Lock                                  | 1        |
| 21       | 55-0080  | Plate — Splash                                | 1        |
| 22       | 50-0670  | Stud Bolt                                     | 2        |
| 23       | 50-1820  | Rod — Connecting (Incl. Ref. #19-22)          | 1        |
| *        | 55-0070  | Rod — Connecting (US:0.5) (Incl. Ref. #19-22) | 1        |
| 24       | 50-1800  | Pin — Piston                                  | 1        |


\*Not Illustrated

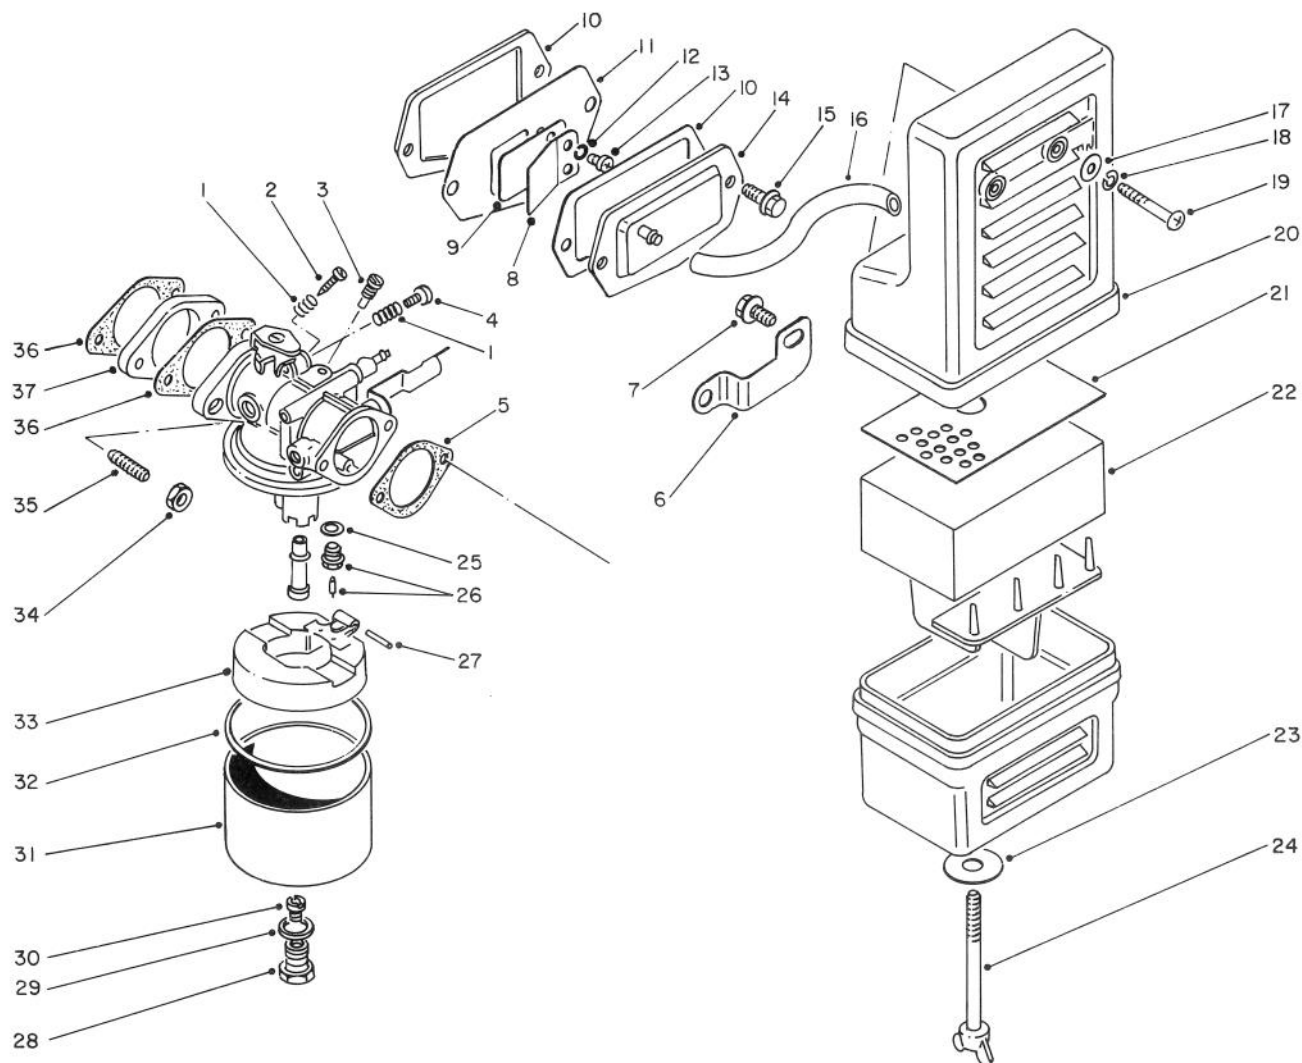

## AIR CLEANER & CARBURETOR ASSEMBLY

| Ref. No. | Part No. | Description                            | No. Used |
|----------|----------|----------------------------------------|----------|
| 1        | 50-2330  | Spring                                 | 2        |
| 2        | 50-2360  | Adjuster                               | 1        |
| 3        | 50-1220  | Jet — Pilot                            | 1        |
| 4        | 50-0250  | Screw — Throttle Stop                  | 1        |
| 5        | 50-2530  | Gasket — Air Cleaner                   | 1        |
| 6        | 50-2510  | Bracket — Air Cleaner                  | 1        |
| 7        | 53-1340  | Bolt                                   | 2        |
| 8        | 53-1150  | Stopper                                | 1        |
| 9        | 53-1140  | Reed Valve                             | 1        |
| 10       | 50-1540  | Gasket                                 | 2        |
| 11       | 50-1560  | Reed Valve Assembly (Incl. Ref. #8-10) | 1        |
| 12       | 50-0560  | Washer — Lock                          | 2        |
| 13       | 50-0210  | Screw                                  | 2        |
| 14       | 50-1520  | Cap — Breather                         | 1        |
| 15       | 55-0100  | Bolt                                   | 2        |
| 16       | 55-0110  | Pipe — Air Breather                    | 1        |
| 17       | 50-0610  | Washer                                 | 2        |
| 18       | 81-1380  | Washer — Lock                          | 2        |
| 19       | 50-0330  | Screw                                  | 2        |


| Ref. No. | Part No. | Description                                      | No. Used |
|----------|----------|--------------------------------------------------|----------|
| 20       | 50-2410  | Cleaner — Air                                    | 1        |
| 21       | 50-2490  | Holder                                           | 1        |
| 22       | 50-2470  | Filter                                           | 1        |
| 23       | 50-2570  | Washer                                           | 1        |
| 24       | 50-2550  | Bolt — Wing                                      | 1        |
| 25       | 50-2400  | Gasket                                           | 1        |
| 26       | 50-2390  | Valve — Needle                                   | 1        |
| 27       | 50-2310  | Pin                                              | 1        |
| 28       | 50-2370  | Bolt                                             | 1        |
| 29       | 50-2380  | Gasket                                           | 1        |
| 30       | 55-0140  | Jet — Main                                       | 1        |
| 31       | 55-0120  | Carburetor Assembly (Incl. Ref. #25-30, 32 & 33) | 1        |
| 32       | 50-2290  | Gasket                                           | 1        |
| 33       | 55-0130  | Float                                            | 1        |
| 34       | 50-7180  | Nut                                              | 2        |
| 35       | 50-0080  | Stud Bolt                                        | 2        |
| 36       | 50-2180  | Gasket — Carburetor                              | 2        |
| 37       | 50-2200  | Insulator                                        | 1        |

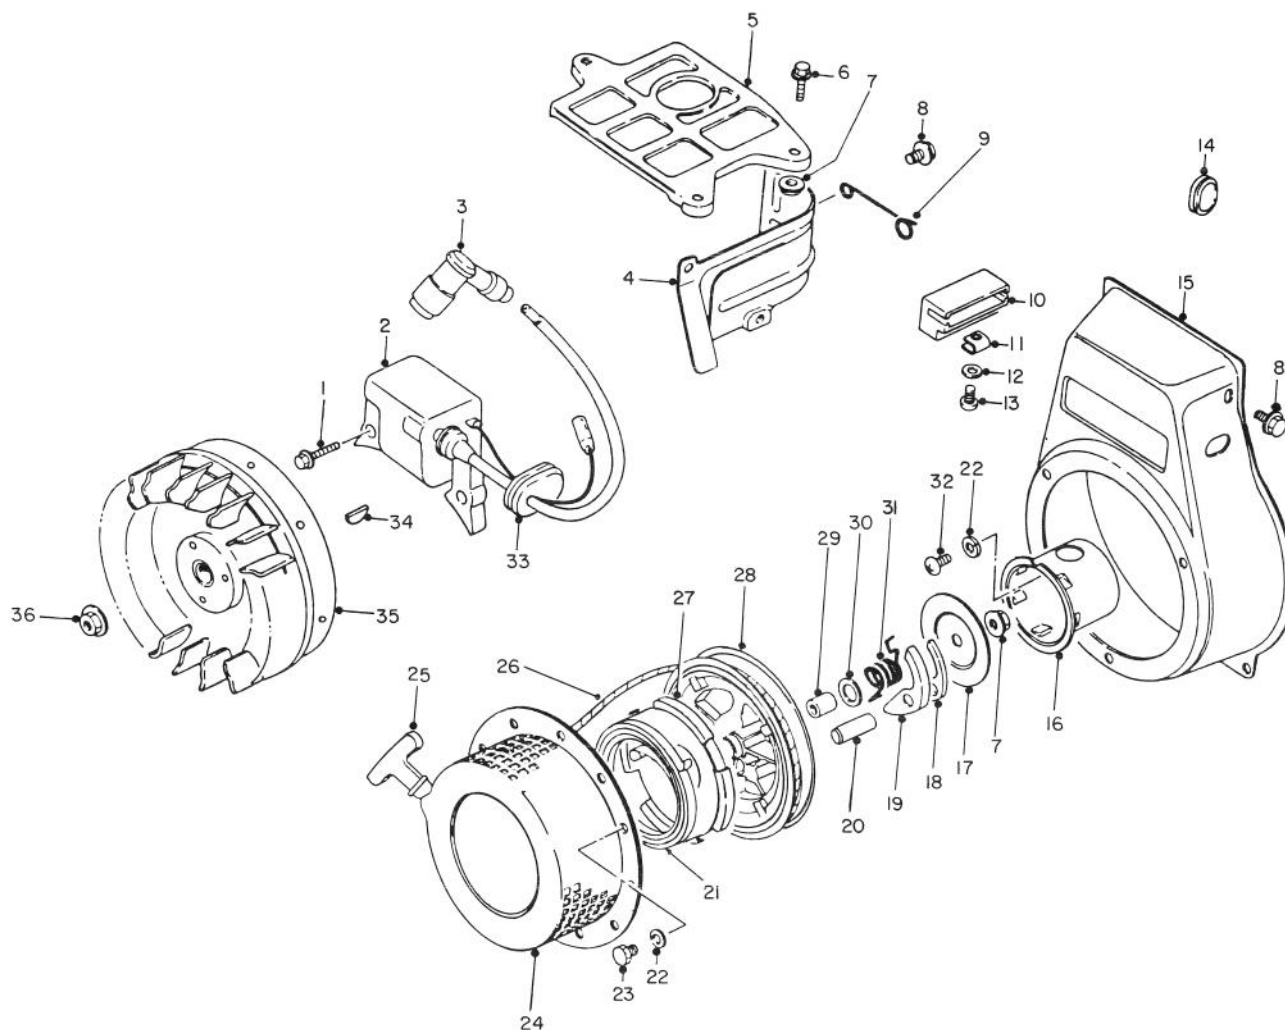

## REWIND STARTER & MAGNETO ASSEMBLY

| Ref. No. | Part No. | Description                   | No. Used |
|----------|----------|-------------------------------|----------|
| 1        | 50-6230  | Bolt                          | 2        |
| 2        | 53-1360  | Coil — Primary                | 1        |
| 3        | 50-3450  | Cap — Spark Plug              | 1        |
| 4        | 50-2770  | Cowling — Side                | 1        |
| 5        | 50-2800  | Cowling — Upper               | 1        |
| 6        | 81-0530  | Bolt                          | 3        |
| 7        | 50-7180  | Nut                           | 4        |
| 8        | 53-1340  | Bolt                          | 6        |
| 9        | 50-1030  | Clamp                         | 1        |
| 10       | 55-0230  | Holder — Lead Connector       | 1        |
| 11       | 55-0240  | Nut                           | 1        |
| 12       | 50-0600  | Washer                        | 1        |
| 13       | 81-1410  | Screw                         | 1        |
| 14       | 55-0220  | Plug — High Tension Cord Hole | 1        |
| 15       | 55-0210  | Cover — Cooling Fan           | 1        |
| 16       | 55-0200  | Pulley — Starter              | 1        |
| 17       | 50-2920  | Plate                         | 1        |
| 18       | 50-2880  | Ratchet                       | 1        |
| 19       | 55-0170  | Ratchet                       | 1        |


| Ref. No. | Part No. | Description                                                 | No. Used |
|----------|----------|-------------------------------------------------------------|----------|
| 20       | 55-0180  | Pin                                                         | 1        |
| 21       | 50-2900  | Spring                                                      | 1        |
| 22       | 81-1450  | Washer — Lock                                               | 6        |
| 23       | 50-0650  | Bolt                                                        | 3        |
| 24       | 55-0160  | Starter Assembly — Recoil<br>(Incl. Ref. #7, 17-23 & 25-31) | 1        |
| 25       | 50-2990  | Grip Assembly (Incl. Ref. #26)                              | 1        |
| 26       |          | Rope                                                        | 1        |
| 27       | 55-0190  | Case — Spring                                               | 1        |
| 28       | 50-2860  | Reel                                                        | 1        |
| 29       | 50-2970  | Cover                                                       | 1        |
| 30       | 50-2980  | Slide Plate                                                 | 1        |
| 31       | 50-2940  | Spring                                                      | 1        |
| 32       | 50-0380  | Screw                                                       | 3        |
| 33       | 53-1370  | Grommet                                                     | 1        |
| 34       | 50-0640  | Key                                                         | 1        |
| 35       | 53-1350  | Flywheel                                                    | 1        |
| 36       | 50-7880  | Nut                                                         | 1        |

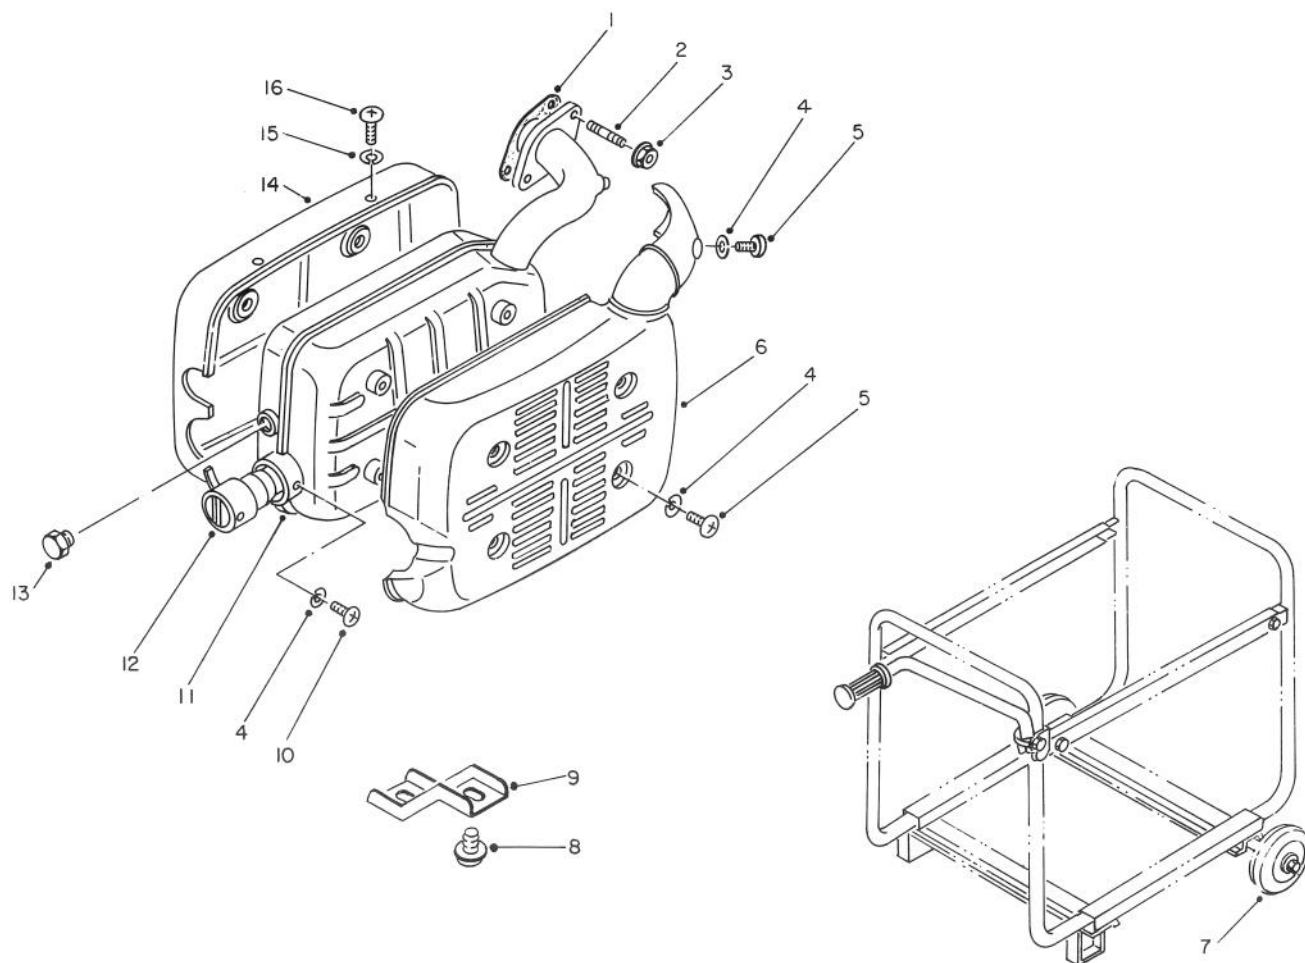

## MUFFLER ASSEMBLY

| Ref. No. | Part No. | Description               | No. Used |
|----------|----------|---------------------------|----------|
| 1        | 50-2590  | Gasket — Exhaust          | 1        |
| 2        | 50-0100  | Stud Bolt                 | 2        |
| 3        | 50-0530  | Nut                       | 2        |
| 4        | 81-1450  | Washer — Lock             | 10       |
| 5        | 81-1140  | Screw                     | 9        |
| 6        | 50-2660  | Cover — Front             | 1        |
| 7        | 50-3660  | Wheel Assembly (Optional) | 2        |
| 8        | 50-7260  | Bolt                      | 1        |

| Ref. No. | Part No. | Description      | No. Used |
|----------|----------|------------------|----------|
| 9        | 55-0150  | Bracket          | 1        |
| 10       | 50-0350  | Screw            | 1        |
| 11       | 50-2630  | Muffler          | 1        |
| 12       | 50-2700  | Tube — Clean Out | 1        |
| 13       | 50-2640  | Plug — Drain     | 2        |
| 14       | 50-2690  | Cover — Rear     | 1        |
| 15       | 81-1420  | Washer — Lock    | 3        |
| 16       | 50-0230  | Screw            | 3        |

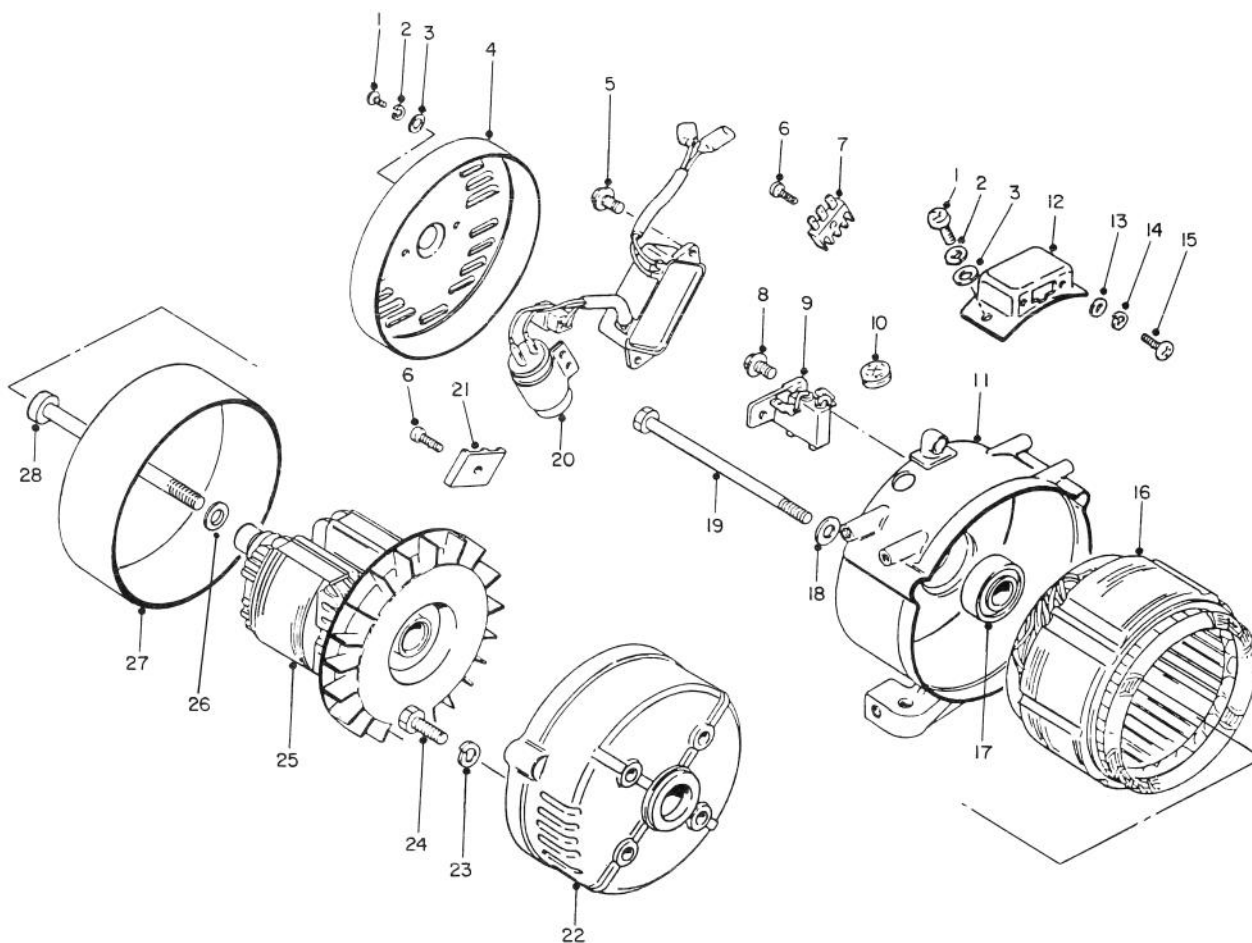

## GENERATOR ASSEMBLY

| Ref. No. | Part No. | Description     | No. Used |
|----------|----------|-----------------|----------|
| 1        | 55-0280  | Screw           | 4        |
| 2        | 81-1380  | Washer — Lock   | 4        |
| 3        | 50-0610  | Washer          | 4        |
| 4        | 55-0380  | Cover — Rear    | 1        |
| 5        | 55-0370  | Bolt            | 2        |
| 6        | 50-0300  | Screw           | 2        |
| 7        | 50-8980  | Diode           | 1        |
| 8        | 55-0350  | Bolt            | 1        |
| 9        | 55-0340  | Holder — Brush  | 1        |
| 10       | 55-0420  | Grommet         | 1        |
| 11       | 55-0310  | Bracket — Rear  | 1        |
| 12       | 55-0410  | Cover — Coupler | 1        |
| 13       | 50-0590  | Washer          | 2        |
| 14       | 50-0560  | Washer — Lock   | 2        |
| 15       | 50-0220  | Screw           | 2        |

| Ref. No. | Part No. | Description                                | No. Used |
|----------|----------|--------------------------------------------|----------|
| 16       | 55-0430  | Stator (120V)                              | 1        |
| 17       | 50-9070  | Bearing                                    | 1        |
| 18       | 81-1450  | Washer                                     | 3        |
| 19       | 55-0400  | Bolt                                       | 3        |
| 20       | 55-0360  | Regulator — Voltage                        | 1        |
| 21       | 55-0390  | Terminal                                   | 1        |
| 22       | 55-0440  | Bracket — Front                            | 1        |
| 23       | 50-5730  | Washer — Lock                              | 4        |
| 24       | 50-0070  | Bolt                                       | 4        |
| 25       | 55-0320  | Rotor                                      | 1        |
| 26       | 50-9010  | Washer                                     | 1        |
| 27       | 55-0300  | Generator Assembly (Incl. Ref. #1-26 & 28) | 1        |
| 28       | 55-3480  | Bolt                                       | 1        |