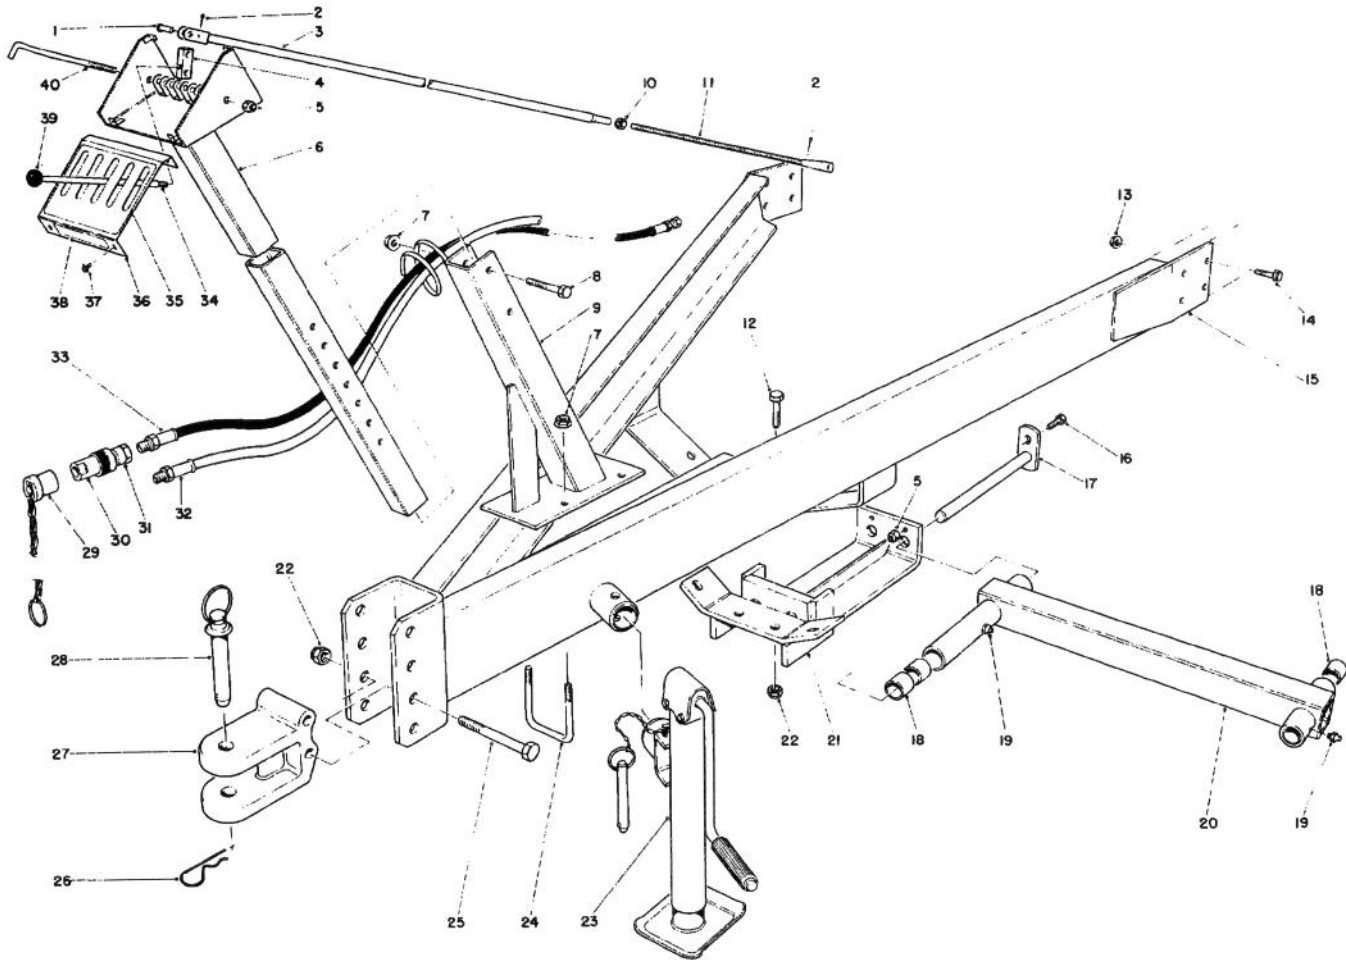



TORO®

MODEL NO. 33457 — 60001 & UP

**PARTS
CATALOG****REELMASTER TRANSPORT FRAME****CONTROL TOWER & LINKAGE ASSEMBLY**

Ref. No.	Part No.	Description	No. Used
1	283-6	Pin — Clevis	5
2	3272-31	Pin — Cotter	10
3	47-3880	Control Linkage	5
4	47-3620	Lever — Pivot Block	5
5	3296-29	Nut — Lock	3
6	47-3680	Upper Control Tower	1
7	3290-357	Nut — Flanged	6
8	323-13	Screw — Cap Hex Hd.	2
9	47-3380	Control Tower — Lower	1
10	3217-8	Nut — Hex	5
11	47-3630	Rod — Control Linkage	5
12	327-6	Screw — Cap Hex Hd.	4
13	32128-23	Nut — Flange	8
14	325-6	Screw — Cap Hex Hd.	8
15	55-7380	Tongue	1
16	322-6	Screw — Cap Hex Hd.	2
17	26-8250	Pin — Lift Arm	2
18	3-0348	Bushing	12
19	302-5	Grease Fitting	4
20	47-3250	Lift Arm #2 & 3 Cutting Unit (Incl. Ref. #18)	2

Ref. No.	Part No.	Description	No. Used
21	26-8160	Lift Arm Support	1
22	3296-24	Nut — Lock	6
23	55-7180	Jack Assembly	1
24	47-3460	U-Bolt	2
25	327-23	Screw — Cap Hex Hd.	2
26	3290-343	Hair Pin Cotter	1
27	47-3550	Clevis Hitch	1
28	13-6200	Pin — Pointed (Incl. Ref. #26)	1
29	49-8180	Dust Cap	2
30	353-819	Body — Hydraulic Quick Coupler	2
31	353-820	Tip — Hydraulic Quick Coupler	2
32	52-5990	Hose — Hydraulic (Orange)	1
33	52-5991	Hose — Hydraulic (Black)	1
34	47-3810	Lever — Valve	5
35	47-5600	Decal — Operation	1
36	47-3820	Cover — Control Column	1
37	3234-13	Screw — Cap, Hex Hd.	4
38	47-3770	Decal — Operator's Manual	1
39	3-0631	Knob	5
40	47-3450	Pin — Pivot	1

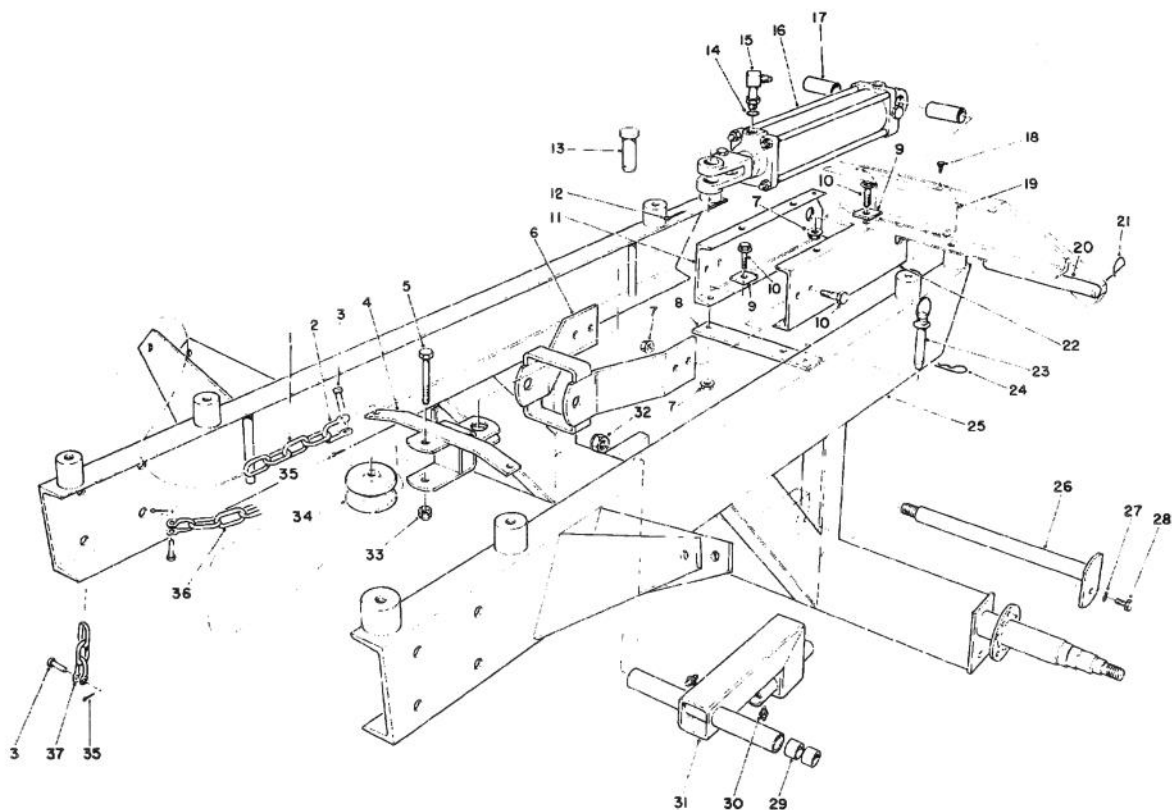


MAIN FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	47-3650	Chain — Lift No. 2 & 3 Cutting Units	2
2	8-0280	Shackle	2
3	283-10	Pin — Clevis	5
4	51-0850	Pulley Support	1
5	325-17	Screw — Cap Hex. Hd.	1
6	47-3930	Lockup Bracket	1
7	32128-23	Nut — Flange	10
8	47-3640	Rest — Cylinder	1
9	3290-216	Washer — Taper	10
10	325-6	Screw — Cap Hex Hd.	10
11	47-3870	Channel R.H.	1
12	3272-13	Pin — Cotter	1
13	26-8590	Pin — Cylinder	1
14	237-79	O-Ring	2
15	353-537	Elbow — Male (Incl. Ref. #14)	2
16	47-3720	Hydraulic Cylinder	1
17	20-4390	Tube — Spacer	2
18	32104-17	Screw — Self Tapping Hex Hd.	4
19	42-3550	Cover — Cylinder Mounts	1
20	3-0144	Shaft	1

Ref. No.	Part No.	Description	No. Used
21	5-3126	Pin — Spring	2
22	47-3860	Channel L.H.	1
23	13-6200	Pin — Pointed (Incl. Ref. #24)	1
24	3290-343	Hair Pin Cotter	1
25	47-3010	Frame — Trailer	1
26	37-2760	Bail — Lift Pin	1
27	3253-4	Washer — Lock	1
28	322-3	Screw — Cap Hex Hd.	1
29	3-0348	Bushing	6
30	302-5	Grease Fitting	2
31	47-3230	Lift Arm (Incl. Ref. #29)	1
32	3296-50	Nut — Lock	1
33	3296-23	Nut — Lock	1
34	3-2196	Sheave	1
35	3272-10	Pin — Cotter	5
36	47-3660	Chain — Lift No. 1 Cutting Unit	1
37	5-2942	Shackle Long	3
*	52-3500	Replacement Spindle Kit	1


*Not Illustrated

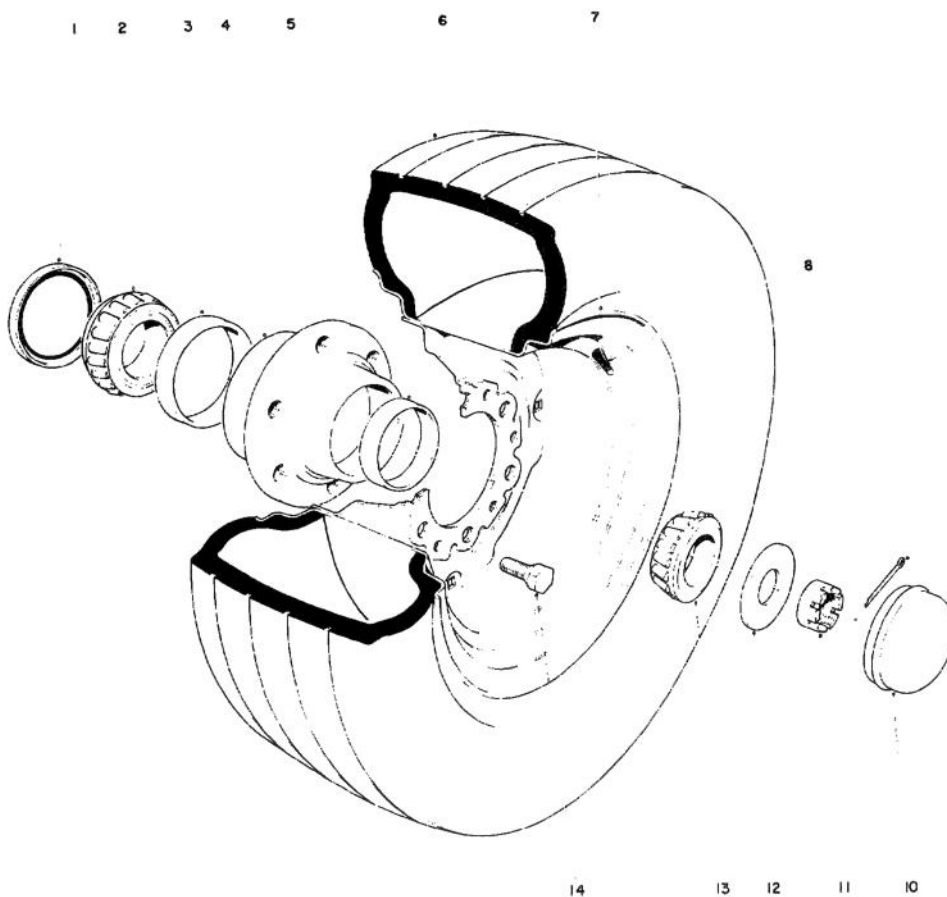

WHEEL & TIRE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	253-144	Seal — Grease	2
2	254-103	Bearing — Cone, Inner	2
3	254-104	Bearing — Cup	2
4	217-110	Hub (Incl. Ref. #3 & 5)	2
5	254-61	Bearing Cup	2
6	56-7960	Tire	2
7	217-109	Wheel	2


Ref. No.	Part No.	Description	No. Used
8	232-27	Valve Stem	2
9	3272-19	Cotter Key	2
10	217-111	Cap — Hub	2
11	32136-1	Nut — Slotted	2
12	47-2540	Washer	2
13	254-62	Bearing — Cone Outer	2
14	217-103	Bolt — Wheel	12

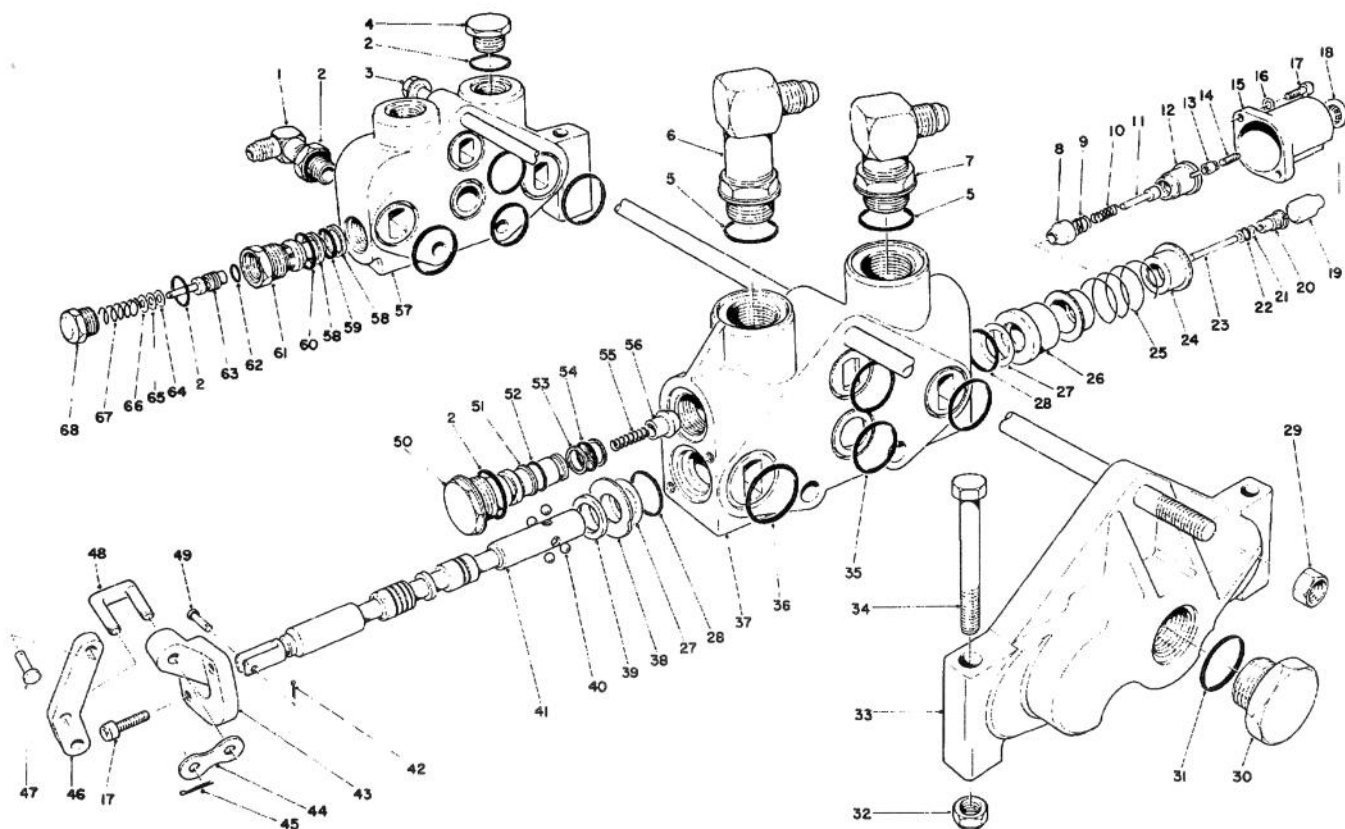

HYDRAULIC VALVE ASSEMBLY NO. 47-3980

Ref. No.	Part No.	Description	No. Used
1	353-426	Elbow - 90° (Incl. Ref. #2)	2
2	237-80	"O"-Ring	8
3	44-7612	Bolt - Hex Washer Hd.	3
4	353-721	Plug Assy. (Incl. Ref. #2)	2
5	237-79	O-Ring	10
6	38-5540	Elbow-Male 90° (Incl. Ref. #5)	3
7	353-537	Elbow - Male (Incl. Ref. #5)	7
8	353-816	Follower - Ball	1
9	353-815	Spring - Compression	1
10	353-814	Spring - Compression	1
11	353-807	Guide - Spring	1
12	353-809	Collar - Spool	1
13	353-810	Nut - Lock Special	1
14	353-811	Screw - Set Hex	1
15	353-813	Bonnet	1
16	353-805	Plate - Bearing	2
17	52-5900	Screw Socket Hd.	4
18	353-812	Plug - Button, Flush Hd.	1
19	353-818	Plunger - Knockout	1
20	353-804	Guide - Piston	1
21	353-803	Ring - Back Up	2
22	353-802	Seal - "O" Ring	1
23	353-801	Roller - Needle	1

Ref. No.	Part No.	Description	No. Used
24	353-808	Collar - Spring	2
25	47-5800	Spring - Compression	1
26	353-817	Sleeve - Detent	1
27		Washer - Backup	2
28	353-570	Seal - "O" Ring Spool	2
29	3219-3	Nut - Hex	3
30	353-799	Conversion Plug Assembly (Incl. Ref. #31)	1
31	353-800	Seal - "O" Ring	1
32	3296-29	Nut - Lock	3
33	353-798	Plate - Cover, Right	1
34	322-13	Screw - Cap Hex Hd.	3
35		O-Ring Valve Body	16
36		O-Ring Valve Body	16
37		Housing - Valve	1
*	47-3970	Section - Valve, 1 Spool (Incl. Ref. #2, 8-28, 37, 38-41 43 & 50-56)	5
38		Plate - Seal Retainer	1
39	353-318	Seal - Wiper	1
40	52-5880	Ball - Stainless Steel	4
41		Spool - 4 Way, KO	1
42	353-321	Pin - Cotter	5

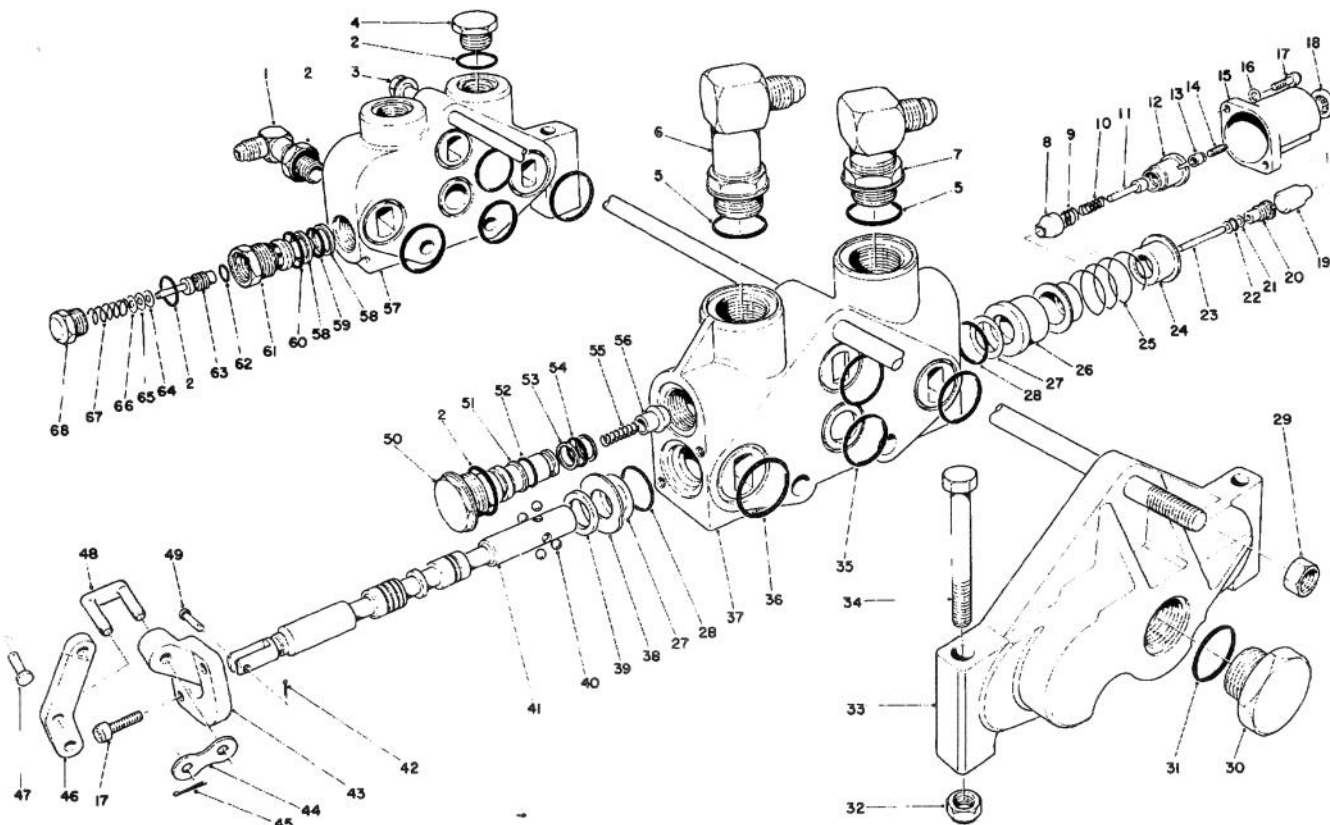


HYDRAULIC VALVE ASSEMBLY NO. 47-3980 (Continued)

Ref. No.	Part No.	Description	No. Used
43	353-324	Bracket — Handle	1
44	52-2920	Plate — Link	1
45	3272-1	Pin — Cotter	10
46	52-5670	Lever — Control (Incl. Ref. #47)	5
47	283-30	Pin — Clevis	5
48	53-4720	Link — Connecting	5
49	353-322	Pin	2
50	44-7660	Plug — Check	2
51	353-306	Washer — Back Up	2
52	353-305	Seal — "O" Ring	2
53	353-303	Seal — Back Up	4
54	353-302	Seal — "O" Ring	2
55	353-304	Spring — Poppet	2
56	353-301	Lift Check Poppet	2
57	44-7621	Plate V20 L.E. Cover	1
58	353-759	Seal — Back Up	2
59	353-758	Seal — "O" Ring	1
60	353-331	Seal — "O" Ring	1

Ref. No.	Part No.	Description	No. Used
61	353-760	Body "WH" Relief	1
62	353-392	Seal — Relief Poppet	1
63	353-531	Poppet — Relief Assy. (Incl. Ref. #62)	1
64	353-328	Washer — Shim .040	A/R
65	353-329	Washer — Shim .020	A/R
66	353-330	Washer — Shim .010	A/R
67	46-2380	Spring — Relief	1
68	353-334	Cap — Relief	1
*	353-835	Sectional Seal Kit (Incl. Ref. #35 & 36)	1
*	353-481	Plug — Load Check Assy. (Incl. Ref. #2, 50-54)	2
*	353-515	Spool Seal Kit (Incl. Ref. #27-28 & 38)	2
*	47-3970	Valve Section Assy. (Incl. Ref. #2-4, 8-31, 33, 35-41, 43, 50-68)	1

*Not Illustrated


Note: Quantities indicated are for one valve section.

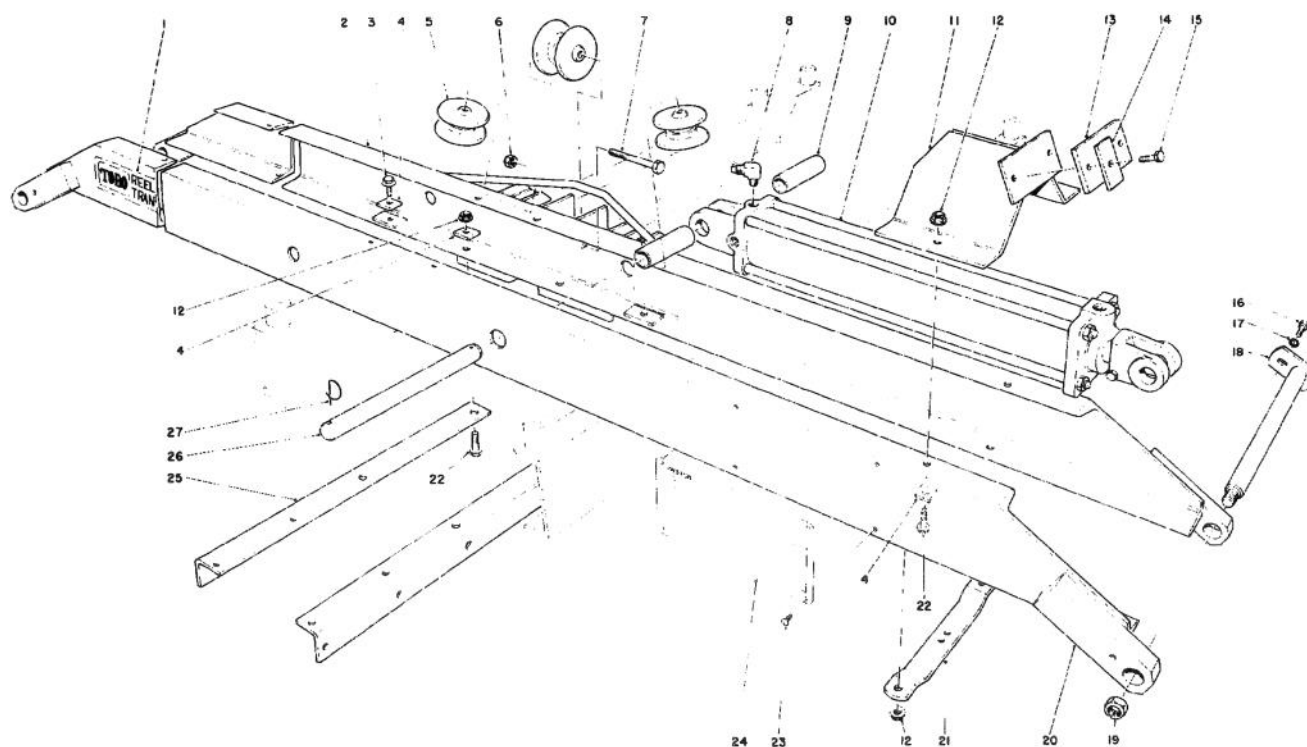

FRONT CROSS CHANNEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	47-3990	Decal — Toro	1
2	47-3570	Cross Channel Front — Rear	1
3	3234-22	Screw — Cap Hex Hd.	4
4	3290-216	Washer — Taper	16
5	3-2196	Sheave	3
6	3296-23	Nut — Lock	3
7	325-14	Capscrew	3
8	47-3840	Elbow .094 Orifice	4
9	20-4390	Tube Spacer	4
10	22-7530	Hydraulic Cylinder — 12"	2
11	11-5630	Stop Arm	2
12	32128-23	Nut — Flange	12
13	11-4590	Pad — Bumper	2
14	11-5270	Washer — Bumper	4


Ref. No.	Part No.	Description	No. Used
15	322-6	Screw — Cap Hex Hd.	4
16	322-3	Screw — Cap Hex Hd.	2
17	3253-4	Washer — Lock	2
18	37-2760	Bail — Lift Pin	2
19	3296-50	Nut — Lock	2
20	47-3560	Cross Channel Front	1
21	37-2910	Rest — Cylinder	2
22	325-6	Screw — Cap Hex. Hd.	12
23	3259-2	Screw — Rd. Hd.	4
24	47-3900	Plate — Information	1
25	47-3470	Support — Valve	2
26	3-0144	Shaft	2
27	5-3126	Pin Spring	4

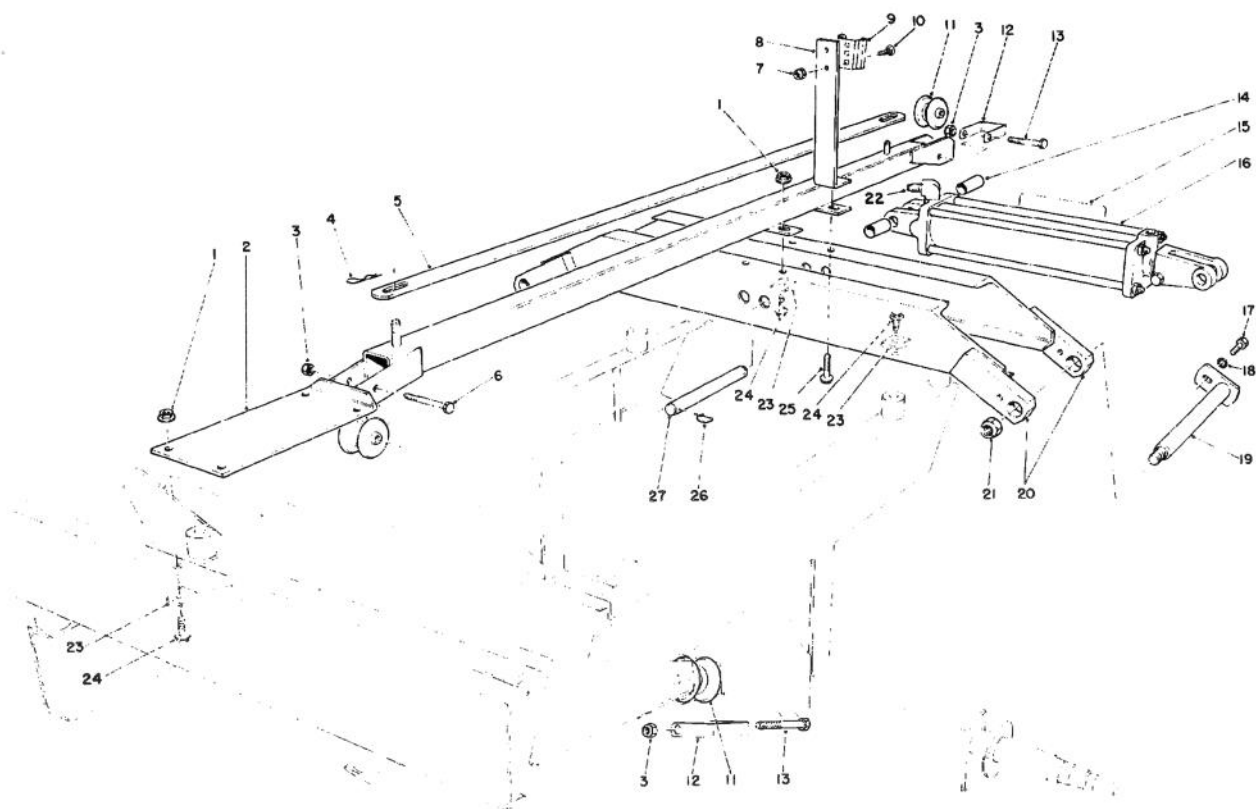

REAR CROSS CHANNEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32128-23	Nut — Flange	8
2	47-3500	Channel Brace	1
3	3296-23	Nut — Lock	4
4	3290-355	Hairpin — Cotter	4
5	47-3800	Strap — Locking	2
6	325-14	Capscrew	1
7	3296-29	Nut — Lock	2
8	47-3480	Bracket — Slow Moving Vehicle	1
9	38-6200	Socket — Slow Moving Vehicle Emblem	1
10	3230-20	Bolt — Carriage	2
11	3-2196	Sheave	4
12	3-0136	Keeper — Chain	3
13	325-18	Screw — Cap Hex Hd.	3

Ref. No.	Part No.	Description	No. Used
14	20-4390	Tube — Spacer	4
15	47-3990	Decal — Toro	1
16	22-7520	Hydraulic Cylinder 10"	2
17	322-3	Screw — Cap Hex Hd.	2
18	3253-4	Washer — Lock	2
19	37-2760	Bail — Lift Pin	2
20	8-1280	Rear Cross Channel	2
21	3296-50	Nut — Lock	2
22	47-3840	Elbow .094 Orifice	4
23	3290-216	Washer — Taper	12
24	325-6	Screw — Cap Hex. Hd.	11
25	3234-22	Screw — Cap Hex. Hd.	1
26	5-3126	Pin — Spring	4
27	3-0144	Shaft	2

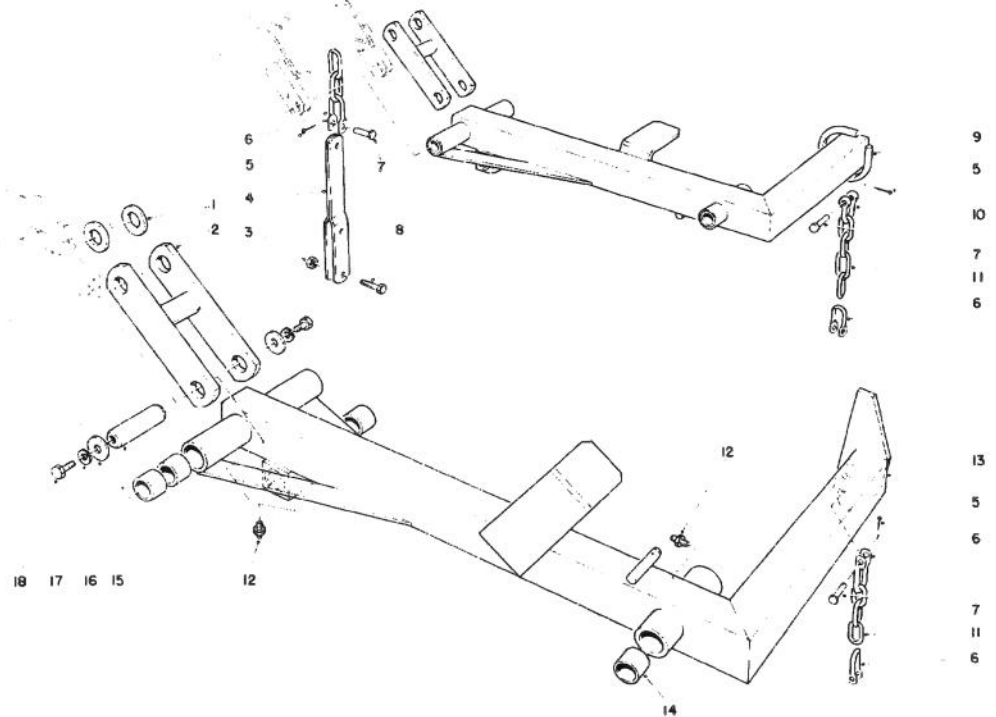


LIFTARM ASSEMBLIES NO. 4-7

Ref. No.	Part No.	Description	No. Used
1	3256-30	Washer — Plain	8
2	23-2610	Link	4
3	32153-2	Nut — Lock	1
4	47-3430	Lift Bracket	1
5	3272-10	Cotter Pin	9
6	5-2942	Shackle — Long	7
7	283-10	Pin Clevis	9
8	323-8	Capscrew	1
9	47-3280	Short Arm No. 4 Cutting Unit (Incl. Ref. #14)	1
*	47-3270	Short Arm No. 5 Cutting Unit (Incl. Ref. #14)	1

Ref. No.	Part No.	Description	No. Used
10	8-0280	Shackle	2
11	3-4636	Chain — Lift Bail	4
12	302-5	Grease Fitting	12
13	47-3590	Long Arm No. 6 Cutting Unit (Incl. Ref. #14)	1
*	47-3600	Long Arm No. 7 Cutting Unit (Incl. Ref. #14)	1
14	3-0348	Bushing	32
15	3-0128	Shaft	8
16	5-1720	Washer	16
17	3253-5	Washer — Lock	16
18	3211-4	Screw — Cap Hex Hd.	16

*Not Illustrated

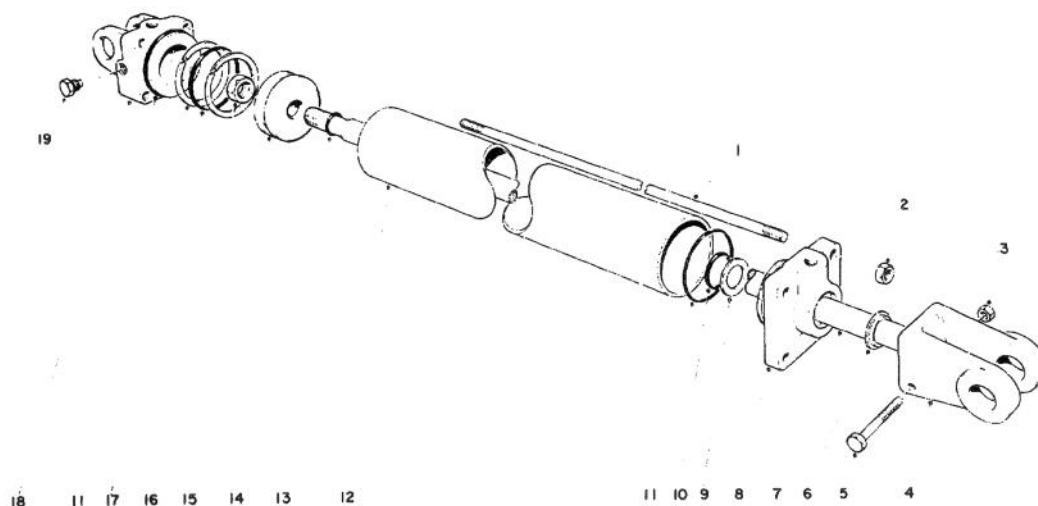


HYDRAULIC CYLINDERS—10"(22-7520), 12"(22-7530) & 14"(47-3720)

Ref. No.	Part No.	Description	No. Used
1	22-8670	Tie Rod 10" (Incl. Ref. #2)	4
*	22-8710	Tie Rod 12" (Incl. Ref. #2)	4
*	47-2660	Tie Rod 14" (Incl. Ref. #2)	4
2	3217-9	Nut	4
3	32146-5	Locknut	1
4	22-8680	Clevis Assembly	1
5	322-11	Capscrew	1
6	22-8660	Wiper Ring Seal 10" & 12"	1
*	47-5630	Wiper Ring Seal 14"	1
7	22-8610	Piston Rod 10"	1
*	22-8690	Piston Rod 12"	1
*	47-2690	Piston Rod 14"	1
8	22-8630	Head 10" & 12"	1
*	47-2670	Head 14"	1
9	22-8650	Back-Up Washer 10" & 12"	1
*	47-2290	Back-Up Washer 14"	1
10	22-8640	"O" Ring Seal 10" & 12"	1
*	47-2280	U-Cup Seal 14"	1

Ref. No.	Part No.	Description	No. Used
11	22-8550	O-Ring Seal 10" & 12"	2
*	47-2270	O-Ring Seal 14"	2
12	22-8620	Barrel 10"	1
*	22-8700	Barrel 12"	1
*	47-2680	Barrel 14"	1
13	22-8600	O-ring Seal	1
14	22-8590	Piston	1
15	22-8560	Locknut	1
16	22-8570	"O" Ring Seal	1
17	22-8580	Back Up Washer	2
18	22-8540	Butt — End Cap 10" & 12"	1
*	47-2700	Butt — End Cap 14"	1
*	22-8720	Seal Kit (Incl. Ref. #6, 9-11, 13 & 16-17) 10" & 12"	1
*	47-3730	Seal Kit (Incl. Ref. #6, 9-11, 13 & 16-17) 14"	1
19	281-2	Plug 10" & 12"	1
*	353-497	Plug 14"	1

*Not Illustrated

Note: Quantities indicated are for one cylinder.

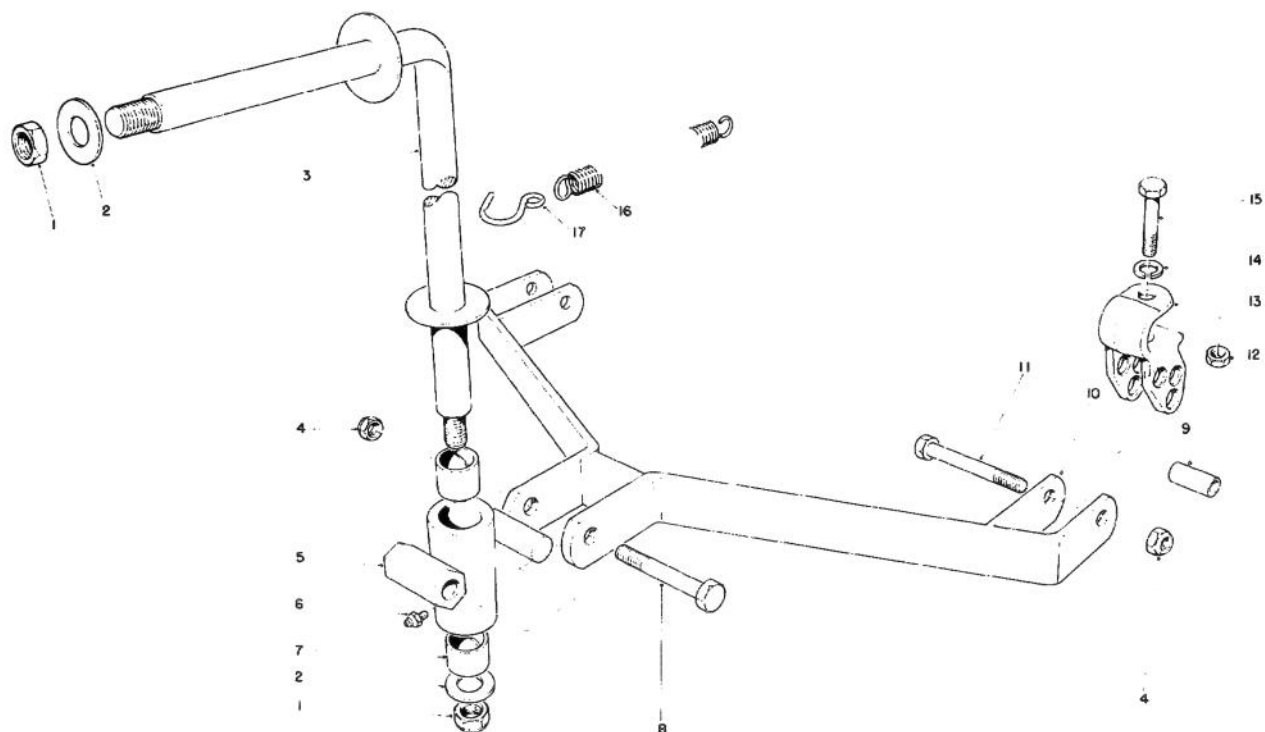


LIFT BAIL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-50	Nut — Lock	14
2	3-8448	Washer — Thrust	14
3	26-8310	Bail Lift No. 1, 2 & 3 Cutting Units	3
*	28-8720	Bail Lift No. 4, 5, 6 & 7 Cutting Units	4
4	3296-23	Nut Lock	21
5	6-1030	Housing Assy. (Incl. Ref. #6 & 7)	7
6	302-5	Grease Fitting	7
7	3-0348	Bushing	14

Ref. No.	Part No.	Description	No. Used
8	325-17	Screw — Cap Hex. Hd.	7
9	5-1091	Spacer	14
10	3-9280	Draw Bar	7
11	325-14	Screw — Cap Hex. Hd.	14
12†	3217-8	Nut	14
13†	5-1090	Clamp	14
14†	3253-6	Lockwasher	14
15†	324-10	Capscrew	14
16	5-1706	Spring	7
17	3-2198	S-Hook	7

*Not Illustrated

†Optional components required for attaching Toro Spartan mowers.

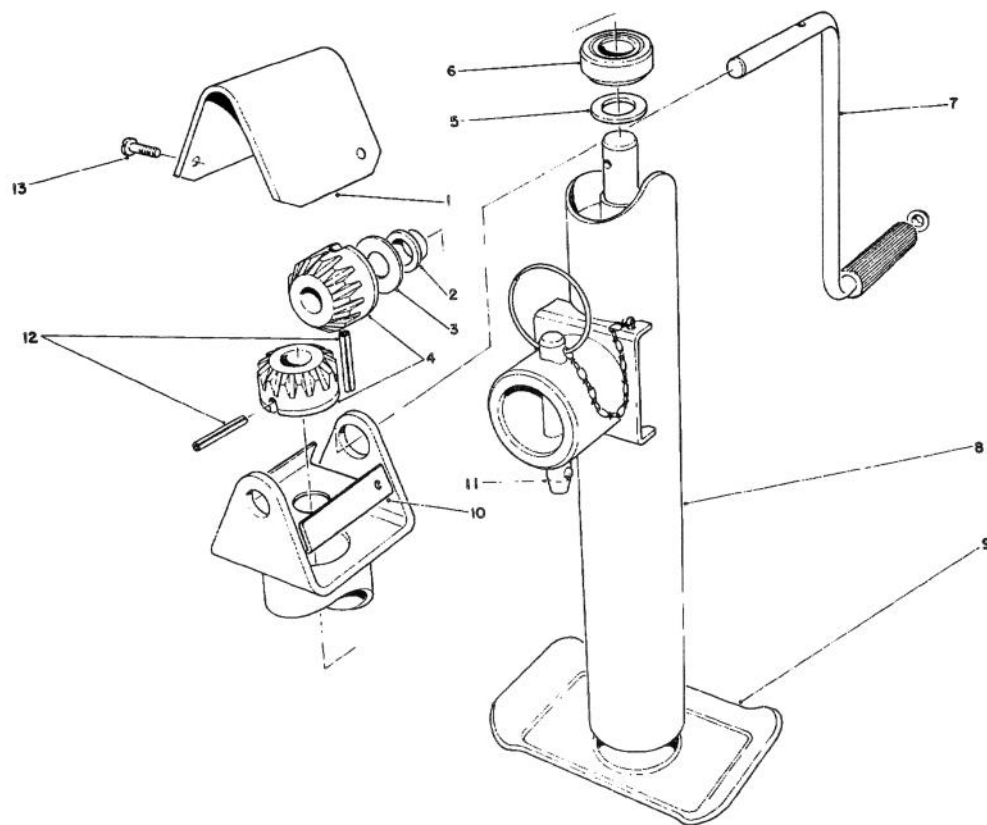


JACK ASSEMBLY NO. 55-7180

Ref. No.	Part No.	Description	No. Used
1	47-5690	Cover — Gear Box	1
2		Bushing	1
3		Washer — Thrust	1
4		Gear — Bevel	2
5		Washer — Flat	1
6		Bearing — Thrust	1
7	47-5650	Crank — Assembly Side Wind	1
8	55-7210	Outer Tube Assembly	1
9	47-5710	Inner Tube/ Screw Assembly	1

Ref. No.	Part No.	Description	No. Used
10	55-7220	Bracket — Thrust	1
11	55-7190	Pin & Chain Assembly	1
12	32121-51	Pin — Roll, Slotted	2
13	3250-16	Screw — Machine, Pan Hd.	2
*	48-1700	Bevel Gear Kit (Incl. Ref. #2-4 & 12)	1
*	48-1710	Bearing Kit (Incl. Ref. #5 & 6)	1


*Not Illustrated

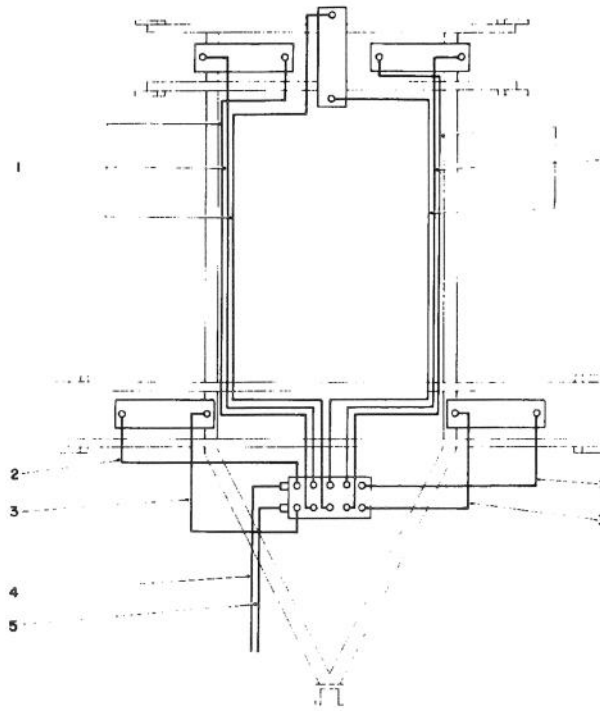

HYDRAULIC SCHEMATIC

Ref. No.	Part No.	Description	No. Used
1	47-3760	Hydraulic Hose Assembly	6
2	47-3750	Hydraulic Hose Assembly	2
3	47-3740	Hydraulic Hose Assembly	2

Ref. No.	Part No.	Description	No. Used
4	52-5990	Hose — Hydraulic (Orange)	1
5	52-5991	Hose — Hydraulic (Black)	1

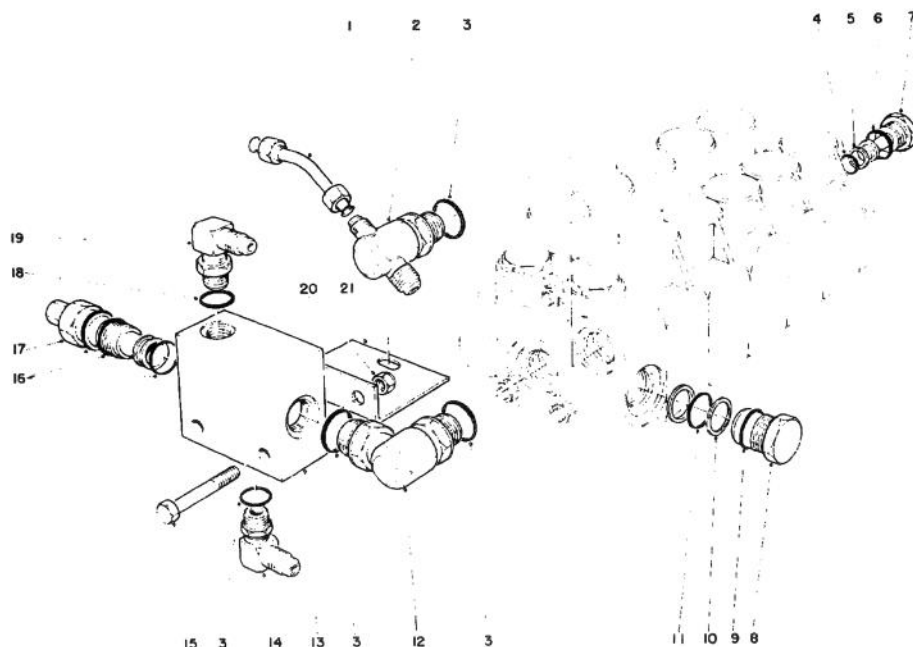


CLOSED CENTER CONVERSION KIT NO. 48-1900 (Optional)

Ref. No.	Part No.	Description	No. Used
1	48-1850	Tube — Hydraulic Return	1
2	48-1840	Fitting — Tee (Incl. Ref. #3)	1
3	237-80	"O"-Ring	4
4	353-825	Seal — O-Ring	1
5	353-823	Washer — Back Up	1
6	353-824	Seal — O-Ring	1
7	48-1820	Plug — Conversion Closed Center (Incl. Ref. #4-6)	1
8	48-1910	Plug — Relief (Incl. Ref. #9-11)	1
9	353-826	Seal — O-Ring	1
10	353-759	Washer — Back Up	2
11	353-758	Seal — O-Ring	1
12	48-1830	Fitting — Elbow (Incl. Ref. #3)	1


Ref. No.	Part No.	Description	No. Used
13	48-1890	Valve Assembly — Pressure Reducing (Incl. Ref. #17)	1
14†	353-426	Elbow — 90° (Incl. Ref. #3)	1
15	323-11	Screw — Cap Hex. Hd.	2
16	48-1860	Seal Kit	1
17	48-1870	Cartridge — Pressure Reducing (Incl. Ref. #16)	1
18	237-42	O-Ring	1
19	353-374	Fitting — Elbow (Incl. Ref. #18)	1
20	3296-26	Nut — Lock	2
21	48-1920	Support — Pressure Reducing Valve	1

†Not included in kit part of Reelmaster Transport Frame.

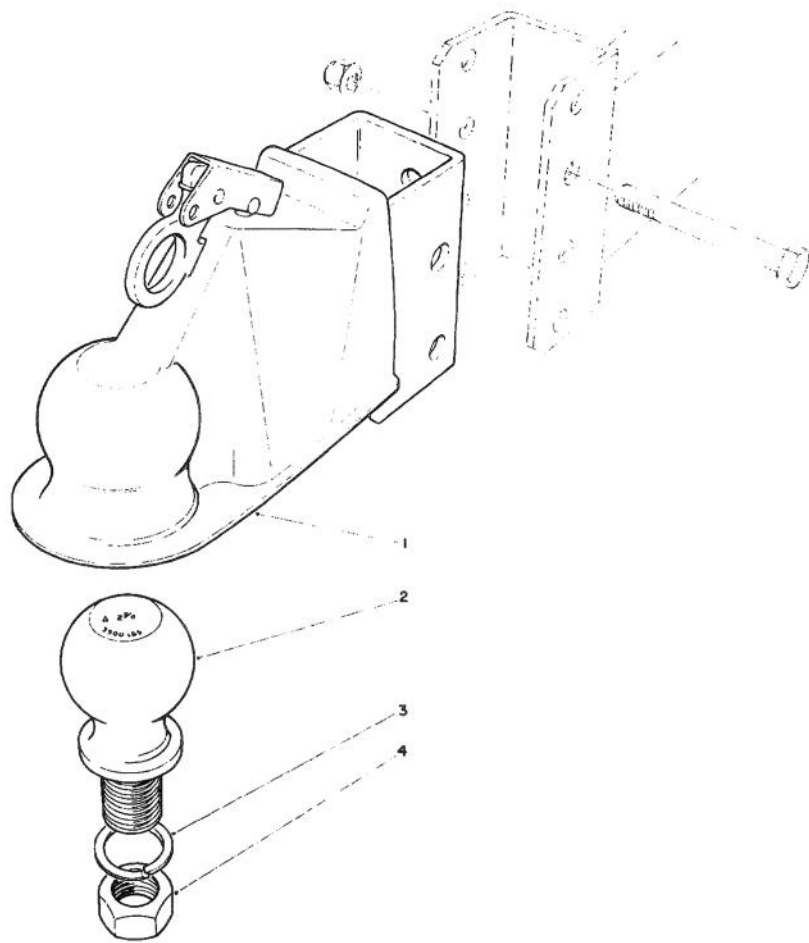

BALL COUPLER KIT NO. 53-9760 (Optional)


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	53-9780	Ball Coupler Assembly	1	3		Lockwasher	1
2	53-9770	Ball — Coupling (Incl. Ref. #3 & 4)	1	4		Nut — Full	1

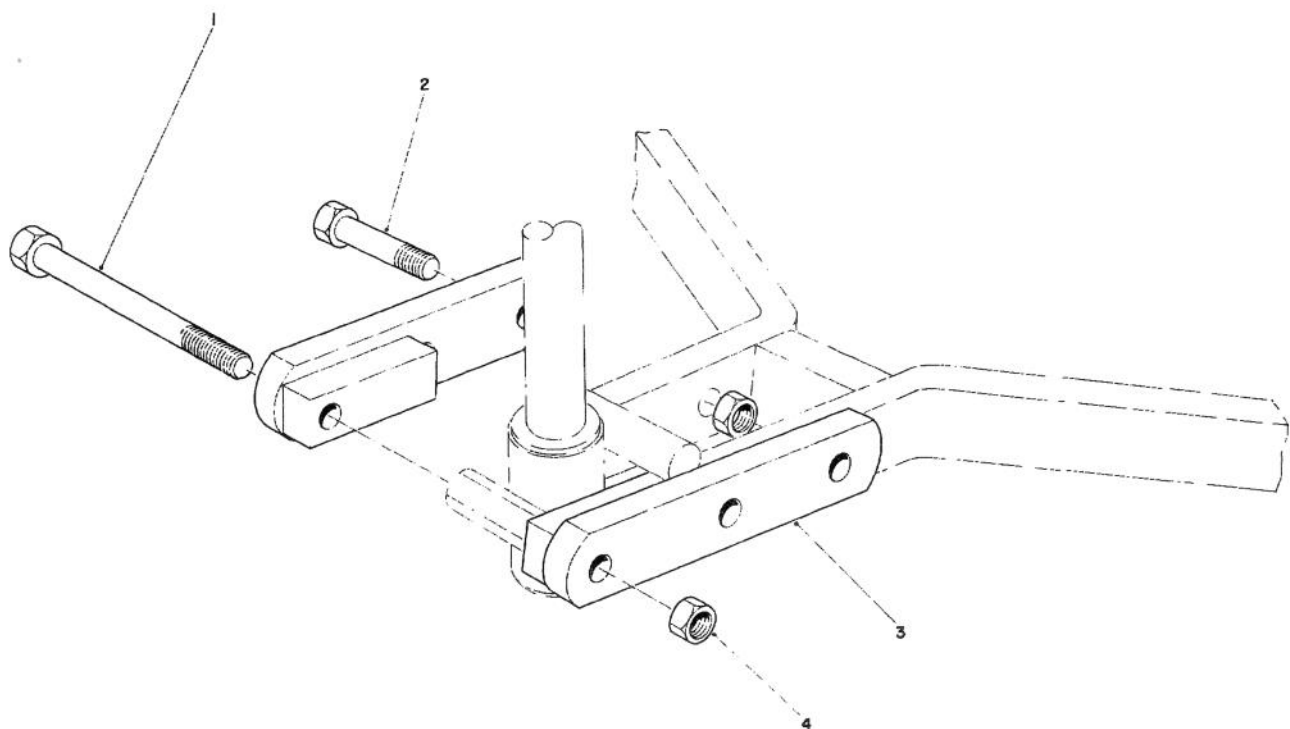

**18" WHEEL CONVERSION KIT FOR REELMASTER & SPARTAN MOWER
NO. 51-3060 (Optional)
(FOR LIFT ARMS #6 & 7 ONLY)**

Ref. No.	Part No.	Description	No. Used
1	325-19	Screw — Cap Hex. Hd.	2
2	325-7	Screw — Cap Hex. Hd.	8

Ref. No.	Part No.	Description	No. Used
3	51-3030	Extension — Drawbar	4
4	32153-5	Nut — Lock	10

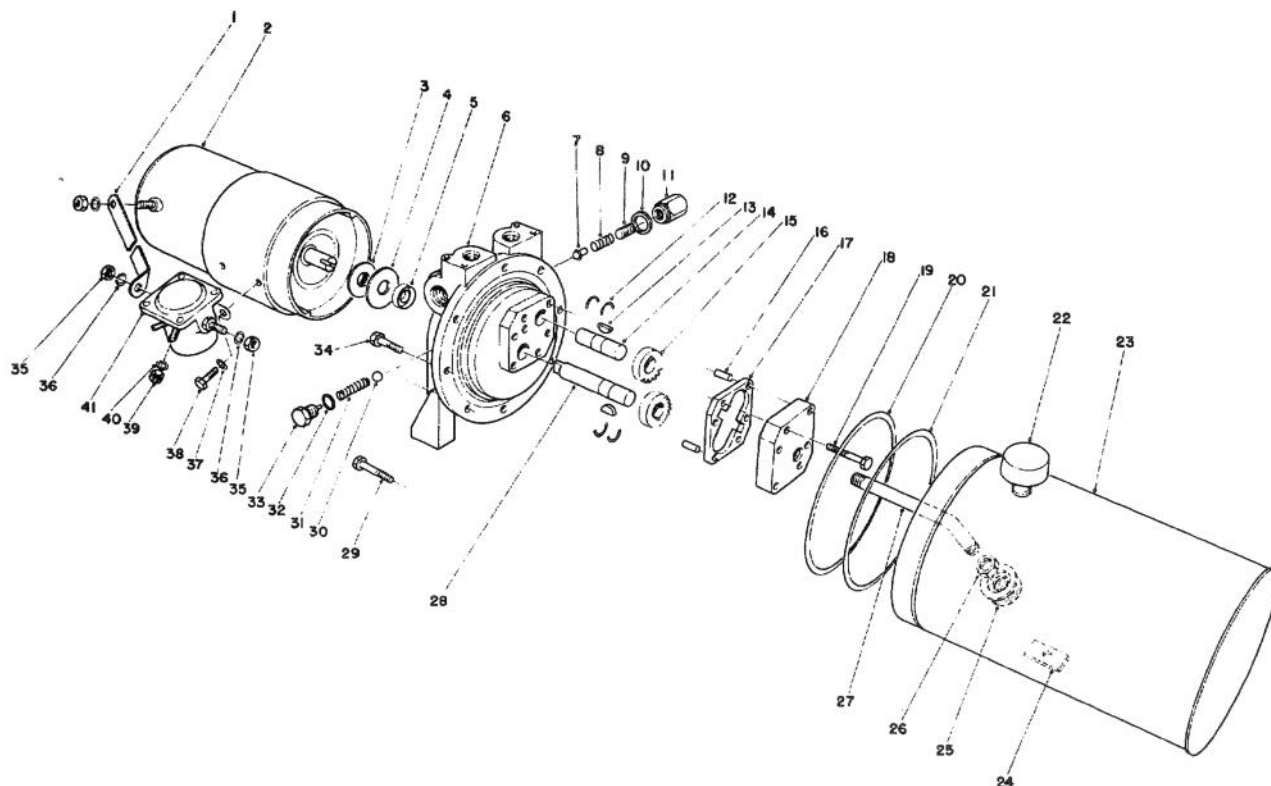


ELECTRO-HYDRAULIC POWER PACK KIT MODEL NO. 33460 (Optional)

Ref. No.	Part No.	Description	No. Used
1	52-3970	Jumper	1
2	52-3910	Motor	1
3	52-3920	Washer — Backup	1
4	52-3930	Washer — Thrust	1
5	52-4510	Seal — Shaft	1
6	52-4130	Center Plate Assembly	1
7	52-4180	Poppet	1
8	52-4190	Spring	1
9	52-4200	Screw — Adjusting	1
10	52-4210	Seal — Ring	1
11	52-4220	Cap	1
12	52-4490	Retaining Ring	4
13	52-4500	Key — Woodruff	2
14	52-4280	Idler Shaft	1
15	52-4480	Gear	2
16	52-4250	Dowel	2
17	52-4230	Gear Plate	1
18	52-4240	Cover Plate	1
19	52-4260	Screw — Cap	2
20	52-4110	Ring — Backup	1
21	52-4090	Seal — Face	1
22	52-4120	Filler Breather	1
23	52-4020	Tank	1

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
24	52-4040	Magnet	1
25	52-4080	Strainer — Suction	1
26	52-4070	Nut — Lock	1
27	52-4030	Suction Tube	1
28	52-4270	Drive Shaft	1
29	52-4050	Screw — Cap Socket Hd.	2
30	52-4170	Ball	1
31	52-4160	Spring	1
32	52-4150	"O" — Ring Seal	1
33	52-4140	Plug — Valve	1
34	52-4060	Screw — Cap, Socket Hd.	6
35	52-3960	Nut — Hex	2
36	52-3950	Washer — Lock	2
37	52-3990	Washer — Lock	2
38	52-3980	Screw — Cap Hex. Hd.	2
39	52-4000	Nut — Hex	1
40	52-4010	Washer — Lock	1
41	52-3940	Solenoid	1
*	53-9330	Center Plate & Gear Kit (Incl. Ref. #5-6, 12-19 & 28)	1
*	53-9350	Gear & Shaft Assembly (Incl. Ref. #12-15 & 28)	1

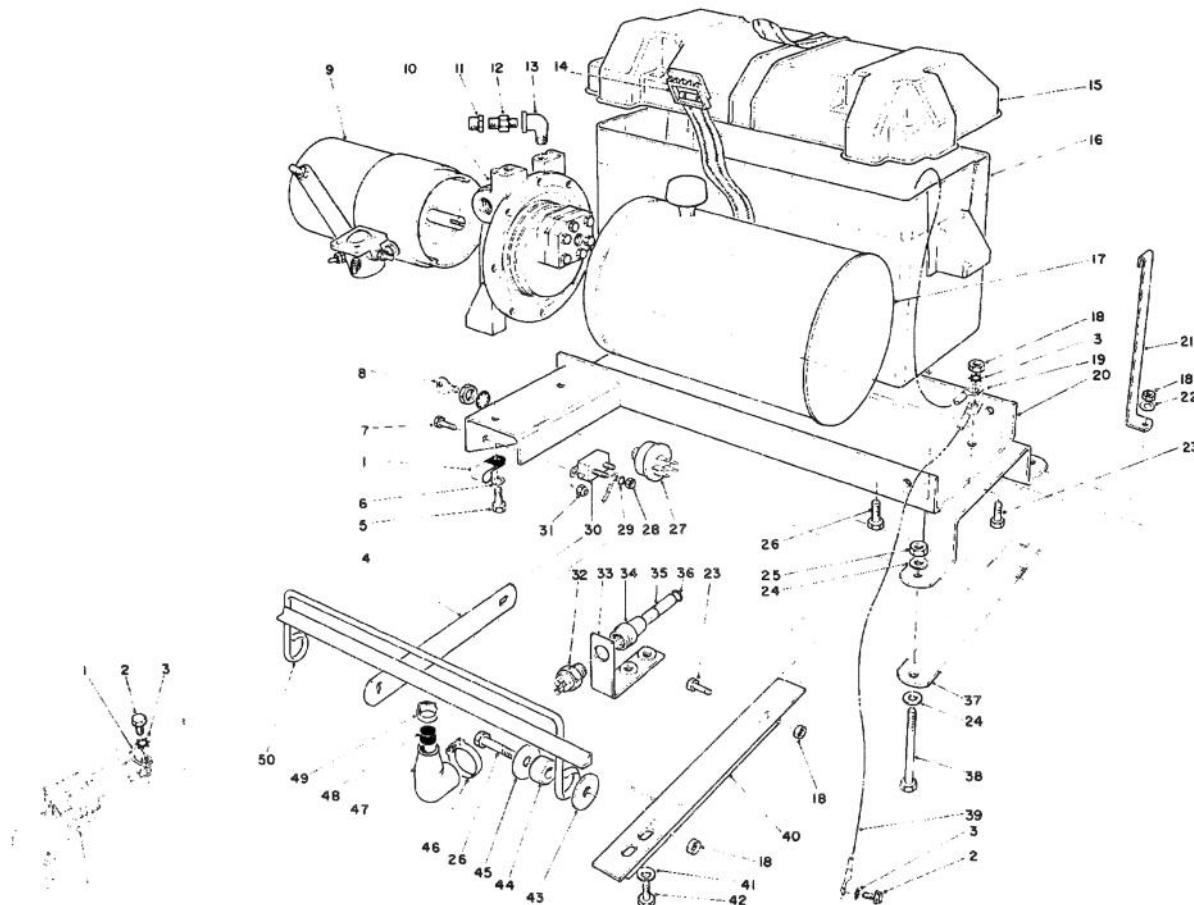


ELECTRO-HYDRAULIC POWER PACK KIT MODEL NO. 33460 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
1	18-2970	"R" Clamp	6
2	32144-41	Screw Hex. Hd. Thread Forming	2
3	3255-8	Washer - Lock External Tooth	3
4	52-4360	Strap - Switch Bail	1
5	323-6	Screw - Cap Hex. Hd.	2
6	3253-21	Washer - Lock	2
7	32105-8	Screw Machine Hex. Hd.	2
8	218-412	Key (Set of 2)	1
9	52-3890	Motor Assembly	1
10	52-4100	Pump and Center Plate Assembly	1
11	2812-4	Reducer Pipe Bushing	2
12	353-880	Pipe Coupling	2
13	2811-10	Street Elbow 90° Pipe	2
14	52-4290	Strap - Battery Box	1
15	52-4320	Cover - Battery Box	1
16	52-4310	Bottom - Battery Box	1
17	52-3900	Tank Assembly	1
18	32153-3	Nut - Lock	9
19	52-4410	Wire - Battery to Ground	1
20	52-3810	Support - Power Pack	1
21	52-4330	Hold Down - Battery Box	2
22	3256-23	Washer - Plain	2
23	322-3	Screw - Cap Hex. Hd.	5
24	3256-24	Washer - Plain	8
25	3296-39	Nut - Lock	4
26	322-6	Screw - Cap Hex. Hd.	4

Ref. No.	Part No.	Description	No. Used
27	12-8140	Key Switch (Incl. Ref. #8)	1
28	3219-14	Nut	2
29	3253-2	Lockwasher	2
30	52-3860	Circuit Breaker	1
31	3296-12	Nut - Lock	2
32	38-0430	Switch - Neutral	1
33	40-7420	Bracket - Switch	1
34	353-704	Tube - Nut	1
35	38-3260	Pin - Switch	1
36	237-7	O-Ring - Static	1
37	53-3850	Strap - Battery Holddown	2
38	323-21	Screw - Cap Hex. Hd.	4
39	52-4470	Wire - Power Pack Ground	1
40	52-4350	Support - Switch Bail	1
41	3253-3	Washer - Lock	2
42	321-3	Screw - Cap Hex. Hd.	2
43	3-8664	Washer - Thrust	2
44	52-4340	Pivot - Switch Bail	2
45	5-1350	Washer	2
46	2412-85	Clamp - Large	1
47	218-331	Boot	1
48	44-8520	Plug - Rubber	1
49	2412-84	Clamp - Small	1
50	52-4370	Switch Bail	1
*	52-3790	Switch Assembly (Incl. Ref. #32-36)	1
*	52-4300	Battery Box (Incl. Ref. #14-16)	1

*Not Illustrated

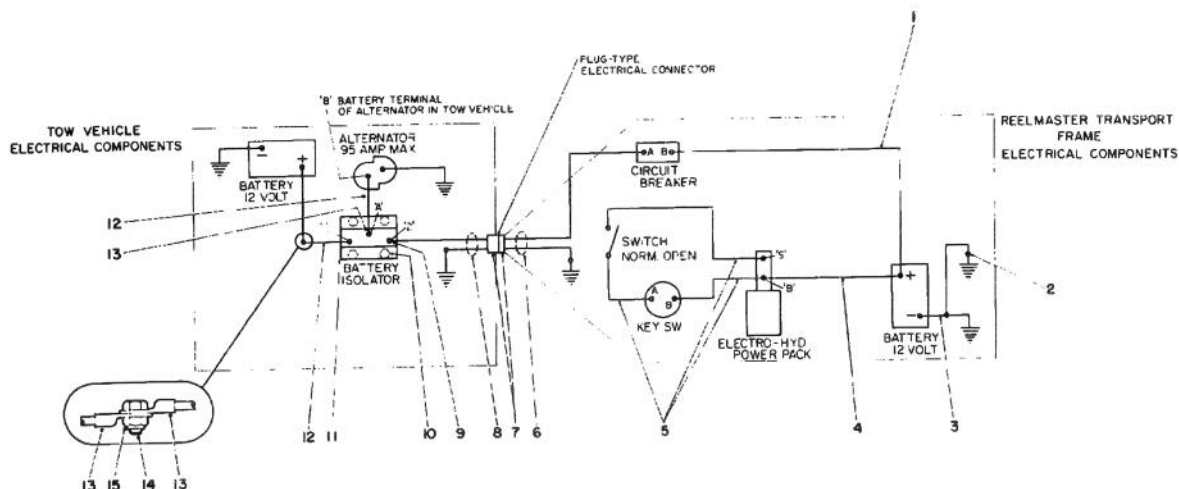

ELECTRO-HYDRAULIC POWER PACK KIT MODEL NO. 33460 (Optional) (Continued)

Ref. No.	Part No.	Description	No. Used
1	52-4430	Wire Battery to Circuit Breaker	1
2	52-4470	Wire - Power Pack Ground	1
3	52-4410	Wire - Battery to Ground	1
4	52-4440	Wire - Battery to Power Pack	1
5	52-4400	Wiring Harness - Power Pack	1
6	52-4460	Wire Assembly Frame	1
7	218-545	Connector - 2 Pole	2
8	52-4420	Wire Assy. - Tow Vehicle	1

Ref. No.	Part No.	Description	No. Used
9	218-331	Boot	2
10	32144-32	Screw - Thread Forming	4
11	52-3870	Isolator - Multi Battery	1
12	52-4450	Wire Assembly	2
13	218-544	Terminal - Closed End	3
14	32105-8	Screw - Machine Hex. Hd.	1
15	3296-12	Nut - Lock	1