



Form No. 3482-564 Rev A

Count on it.

Parts Catalog

Reelmaster®

7000-D 4-Wheel Drive Traction Unit

Model No. 03780—Serial No. 420900000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

 
For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame and Roll-Over Protection System Assembly	5
Front Frame Assembly No. 130-1617	7
Front Shroud, Headlight and Roller Assembly	8
Engine and Flywheel Mounting Assembly	9
Engine and Air Cleaner Assembly	10
Air Cleaner Assembly No. 99-5410	12
Radiator Mounting Assembly	13
Radiator and Fan Assembly	14
Hydraulic Motor Assembly No. 137-5571	15
Front Reel Lift Assembly	16
Gear Motor Assembly No. 115-8250	18
Hydraulic Cylinder Assembly No. 125-1660	19
Hydraulic Cylinder Assembly No. 125-1658	20
Rear Reel Lift Assembly	21
Hydraulic Cylinder Assembly No. 125-1659	23
Hydraulic Tank Assembly	24
Fuel System Assembly	25
Battery and Storage Box Assembly	26
Battery Storage Box Assembly No. 115-9100	27
Storage Box Assembly No. 115-9101	28
Seat Mount Assembly	29
Vinyl Premium Seat Assembly No. 117-5676	31
Air Ride Seat Suspension Assembly No. 130-2702	32
Control Console Assembly	34
Joystick Bracket Assembly No. 120-5280	35
Steering and Pedals Assembly	36
Steering Tilt Column Assembly No. 106-3622	38
Steering Valve Assembly No. 114-8119	39
Forward/Reverse Pedal Assembly	40
Hood Assembly	41
Front Traction Assembly	42
RH Brake Assembly No. 100-3069	43
LH Brake Assembly No. 100-3070	44
Hydraulic Piston Motor Assembly No. 121-3100	45
Planetary Assembly No. 163-2646	46
Rear Traction Assembly	47
Steer Cylinder Assembly No. 119-3903	49
Bevel Pinion Shaft Assembly Rear Axle Assembly No. 110-4750	50
Differential Assembly Rear Axle Assembly No. 110-4750	51
Axle Support Assembly Rear Axle Assembly No. 110-4750	52
Bevel Gear Case Assembly Rear Axle Assembly No. 110-4750	53
Bevel Gear Shaft Assembly Rear Axle Assembly No. 110-4750	54
Axle Case Assembly Rear Axle Assembly No. 110-4750	55
Axle Assembly Rear Axle Assembly No. 110-4750	56
Piston Motor Assembly No. 121-3101	57
Hydraulic Pump Assembly	58
Piston Pump Assembly No. 114-4188	60
Control Assembly No. 115-4446	62
Four Section Pump Assembly No. 114-4189	63
Hydraulic System Components Assembly	64
Mow Manifold Assembly No. 130-1656	66
5-Plex Mow Manifold Block Assembly	67
Lift Manifold Assembly No. 130-1669	68
Juction Manifold Assembly No. 130-1670	69

Contents (continued)


Fan Drive Manifold Assembly No. 119-3943	70
3-Way Valve Manifold Assembly No. 138-6946	71
Rear Traction Manifold Assembly No. 121-3078	72
Traction Hydraulic Circuit Assembly	73
Steering Hydraulic Circuit Assembly	75
Fan Drive Hydraulic Circuit Assembly	76
Lift Circuit Hydraulic Assembly	77
Hydraulic Mow Circuit Assembly	78
Front Mow Circuit Hydraulic Assembly	79
Rear Hydraulic Mow Circuit Assembly	80
Electrical Assembly	81
Battery and Engine Electrical Assembly	82
Cylinder Block Assembly	83
Gear Housing Assembly	84
Flywheel Housing and Oil Sump Assembly	86
Cylinder Head and Cover Assembly	88
Intake Manifold Assembly	90
Exhaust Manifold Assembly	92
Diesel Particulate Filter Assembly	94
Turbine Assembly	96
Camshaft and Driving Gear Assembly	98
Crankshaft and Piston Assembly	99
Lubrication and Oil System Assembly	100
Lubrication Oil Line Assembly	102
Cooling Water System Assembly	104
Fuel Pump Assembly	106
Fuel Injection Valve Assembly	108
Fuel Line Assembly	110
Starting Motor Assembly	112
Generator Assembly	114
Electronic Control Unit Assembly	116
Electric Parts Assembly	118
Gasket Set	120
Attachments and Accessories	122

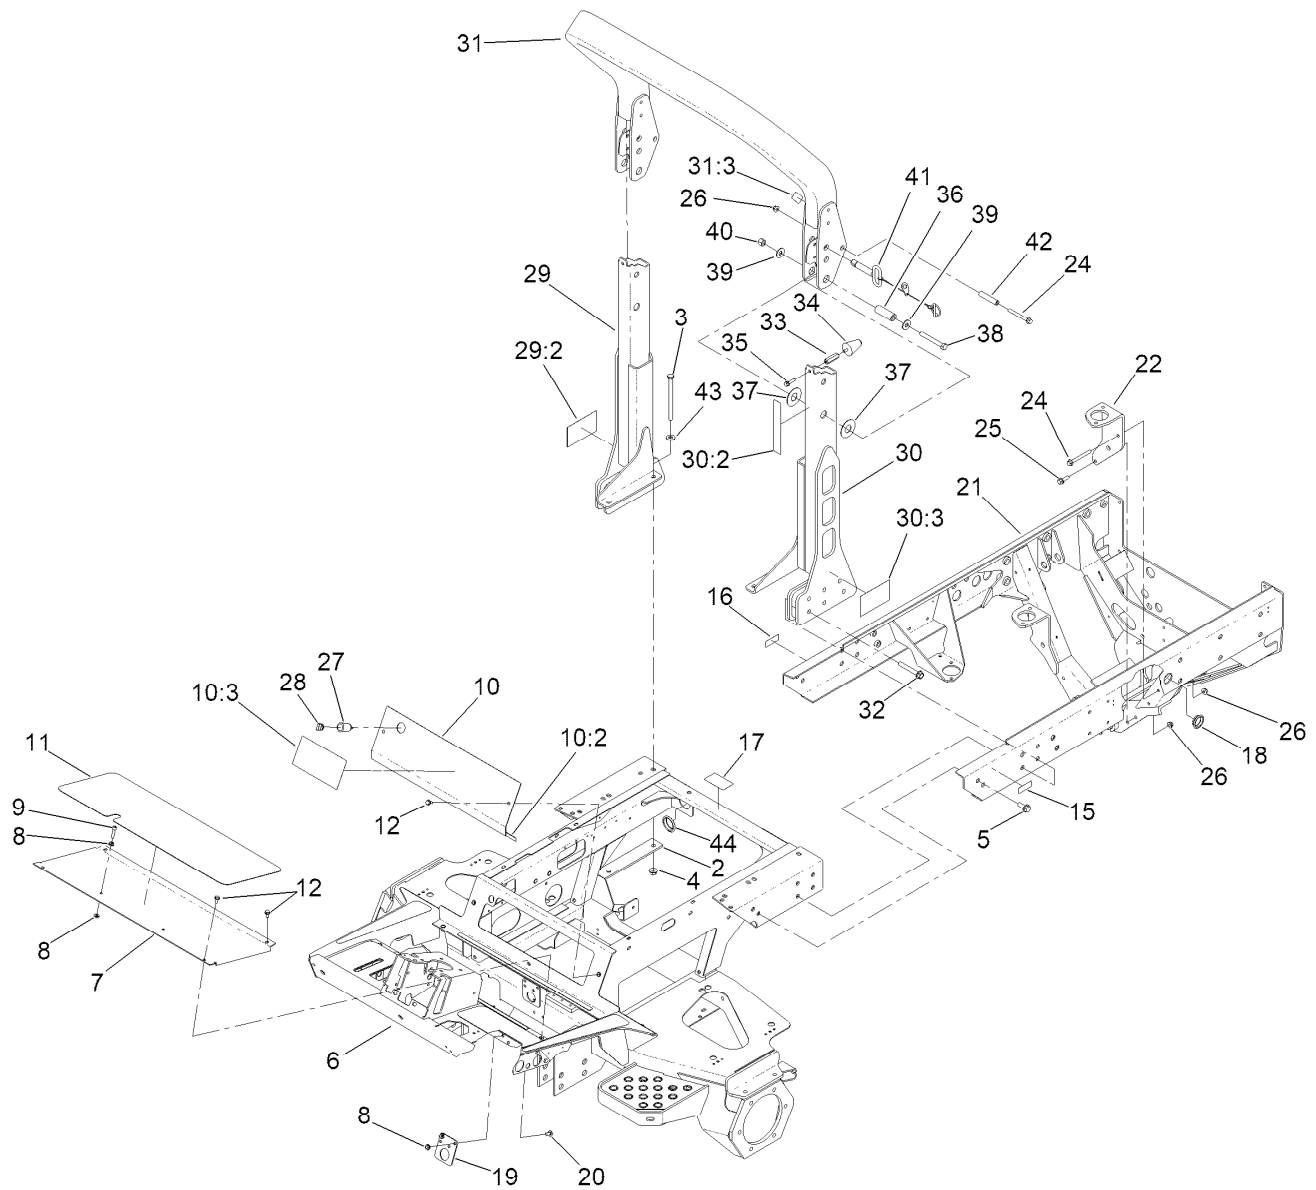

Frame and Roll-Over Protection System Assembly

Ref.	Part Number	Qty.	Description
2	104-5584-0P	2	Plate-Reinforcement,ROPS
3	325-33	4	Screw-HH
4	32128-49	4	Nut-HHF
5	3234-38	4	Screw-HHF
6	130-1617	1	Frame-Front
7	75-1410-01	1	Plate-Access, Floor
8	32128-20	4	Nut-HF
9	3274-18	1	Screw-HSH
10	130-1659	1	Access Plate ASM
10:2	105-9860	2	Seal-Foam
10:3	120-1683	1	Decal-Danger
11	75-0630	1	Tread-Foot, Center
12	3234-7	6	Screw-HHF
15	93-6680	1	Decal-Diesel
16	93-6686	1	Decal-Oil, HYD
17	106-6754	1	Decal-Danger
18	105-9194	4	Plug
19	104-5516-0P	1	Support-Tube
20	137-3061	2	Bolt-CARR
21	130-1601-03	1	Frame-Rear
22	130-1632-0P	1	Bracket-Engine Mount


Ref.	Part Number	Qty.	Description
24	116-4701	3	Screw-HHF
25	3234-24	1	Screw-HHF
26	119-4042	4	Nut-HF, NI
27	99-7411	1	Point-Power
28	99-7416	1	Cap
29	136-2901	1	RH ROPS ASM
29:2	94-8099	1	Decal
30	136-2900	1	LH ROPS ASM
30:2	120-8947	1	Decal-Danger, ROPS
30:3	94-8099	1	Decal
31	136-2885	1	Top Tube ASM
31:3	98-4387	1	Decal-Protection, Ear
32	114-8419	12	Screw-HHF
33	136-2899	2	Standoff-Hex
34	114-1925	2	Bumper-Rubber
35	3234-36	2	Screw-HHF
36	136-2890	2	Spacer
37	136-2893	4	Washer-Plastic
38	325-17	2	Screw-HH
39	3256-6	4	Washer-Flat
40	3296-23	2	Nut-Lock, NI

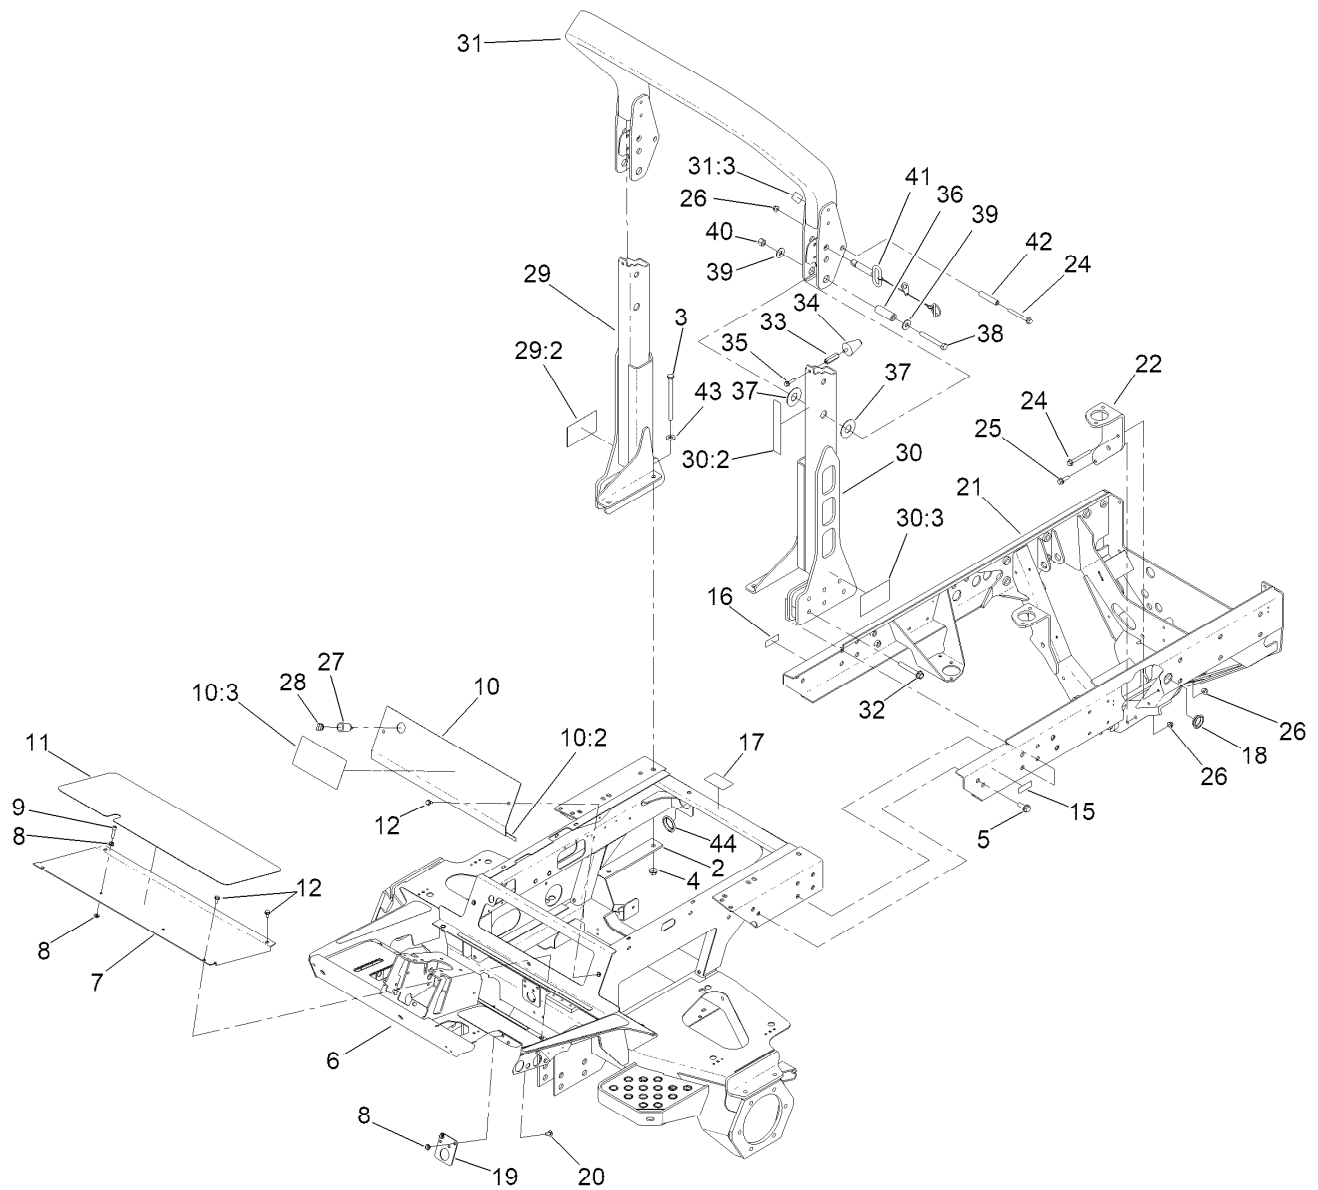 

Frame and Roll-Over Protection System Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
41	136-2892	2	Pin ASM
42	80-1890	2	Spacer

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
43	87-7270	4	Washer-Thrust
44	240-2	1	Grommet-Rubber

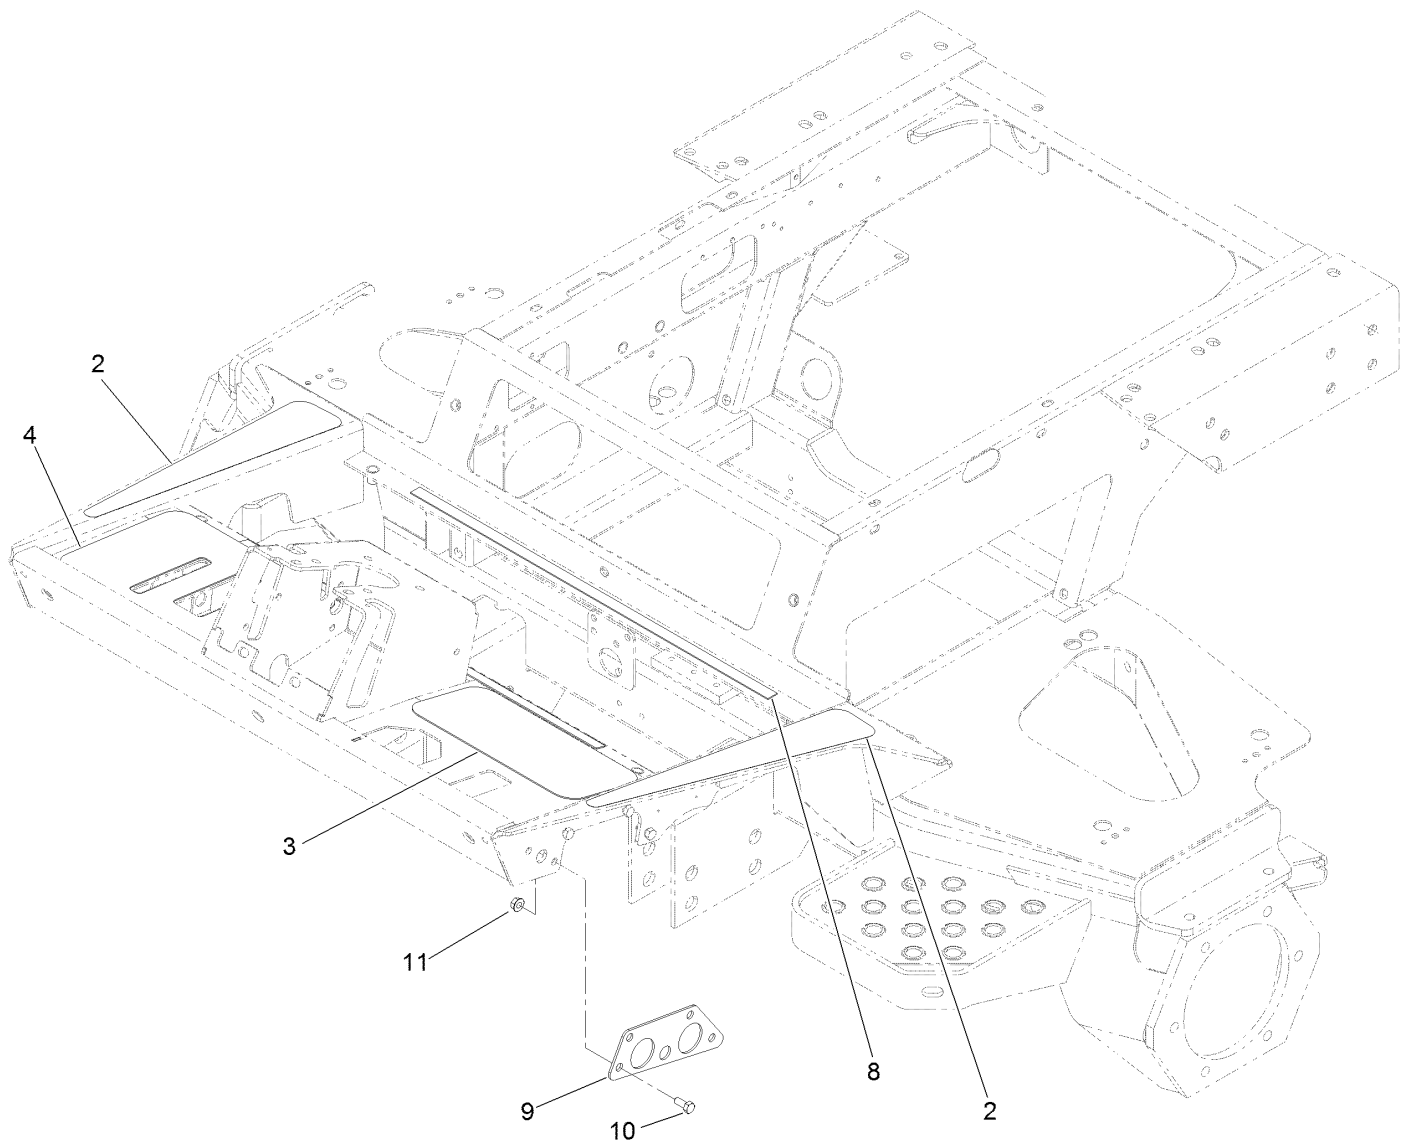 


Front Frame Assembly No. 130-1617

Ref.	Part Number	Qty.	Description
2	93-7592	2	Tread-Rest, Foot
3	75-0620	1	Tread-Foot, LH
4	119-1497	1	Tread-Foot, RH
8	105-9860	2	Seal-Foam
9	106-7794-01	2	Plate-Mount, HYD Fitting
10	322-3	8	Screw-HH
11	32128-20	8	Nut-HF

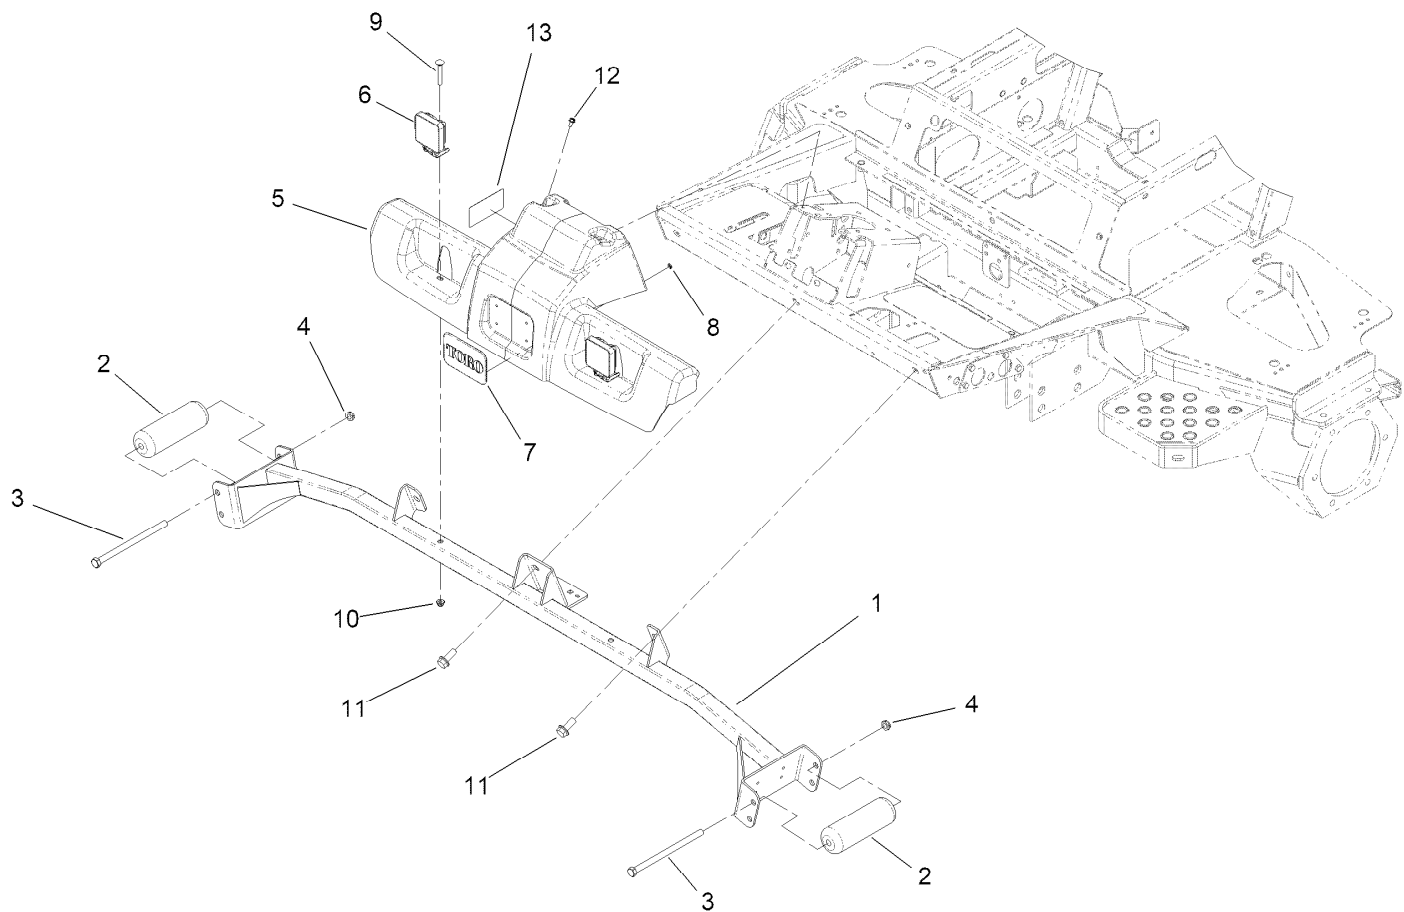 

Front Shroud, Headlight and Roller Assembly


Ref.	Part Number	Qty.	Description
1	125-1663-01	1	Support-Roller
2	31-0750	2	Roller-Front
3	325-42	2	Screw-HH
4	3296-45	2	Nut-Hex
5	115-9137	1	Shroud-Platform
6	145-2598	2	Light-Work, LED
7	93-6028	1	Plate-Logo
8	138-6996	4	Nut-Push
9	3230-7	2	Bolt-CARR
10	119-4041	2	Nut-HF
11	3234-38	3	Screw-HHF
12	32104-17	2	Screw-HWH
13	120-1670	1	Decal-Speed, Mow

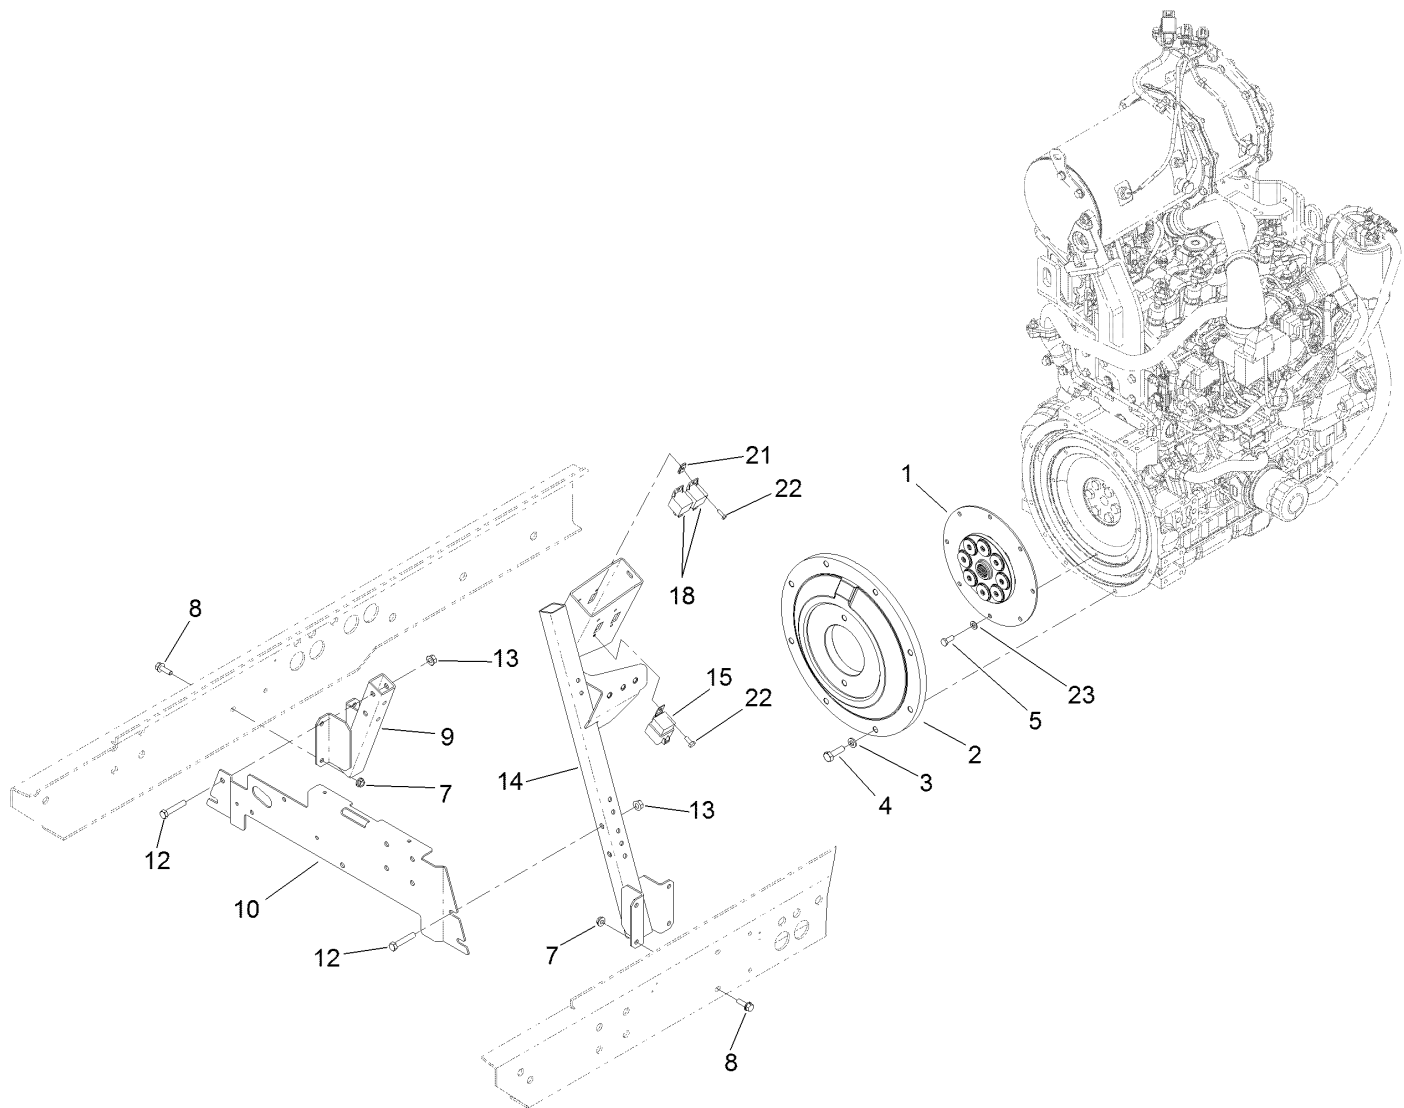 

Engine and Flywheel Mounting Assembly

Ref.	Part Number	Qty.	Description
1	120-4176	1	Coupling-Spring, Flywheel
2	115-6657-0P	1	Plate-Flywheel (Machined)
3	107-1413	8	Washer-Hardened
4	117-5663	8	Screw-HH
5	139-9940	8	Screw-HH,Patch
7	32128-20	8	Nut-HF
8	3234-29	8	Screw-HHF
9	104-5420-0P	1	Support-Battery
10	114-8134-0P	1	Bracket-Manifold, Mow


Ref.	Part Number	Qty.	Description
12	323-10	4	Screw-HH
13	32128-21	4	Nut-HF Lock
14	136-3615-0P	1	A/C Mount
15	99-7430	1	Relay-Mini
18	99-7435	2	Relay
21	3290-277	3	Nut-Speed
22	3290-134	3	Screw
23	87-7510	8	Washer-Flat

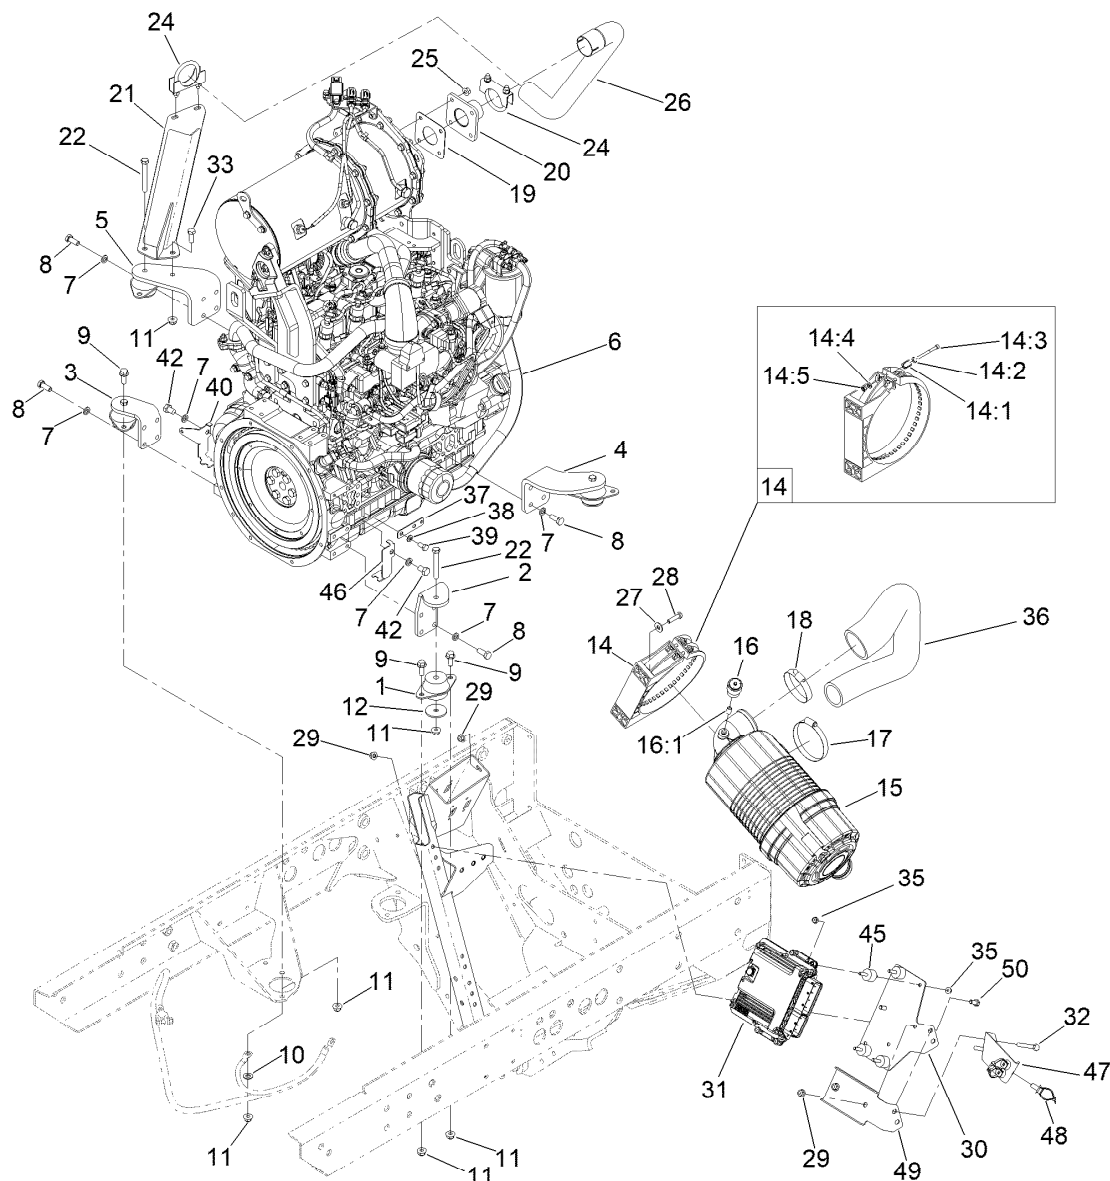 

Engine and Air Cleaner Assembly

Ref.	Part Number	Qty.	Description
1	53-9682	4	Mount-Engine
2	120-8001-0P	1	Mount-Engine, LH Front
3	120-8002-0P	1	Mount-Engine, RH Front
4	120-8003-0P	1	Mount-Engine, LH Rear
5	120-8004-0P	1	Mount-Engine, RH Rear
6	138-6917	1	Engine-Yanmar
7	48-9590	18	Washer-Lock
8	33115-025	16	Screw-HH
9	3234-11	8	Screw-HHF
10	3256-24	1	Washer-Plain
11	119-4042	13	Nut-HF, NI
12	139-1726	4	Washer-Rebound
14	99-5414	1	Strap-Cleaner, Air
14:1	108-1512	2	Spring
14:2	3256-22	2	Washer-Flat
14:3	33113-050	2	Screw-HH
14:4	33093-00	2	Washer-Flat
14:5	33023-00	2	Nut-Lock
15	99-5410	1	Air Cleaner ASM
16	104-3563	1	Indicator
16:1	94-1416	1	Adapter-Indicator


Ref.	Part Number	Qty.	Description
17	2412-110	1	Clamp-Band/Screw
18	2412-125	1	Clamp-Hose
19	121-3058	1	Gasket-Exhaust
20	121-3060	1	Flange-Exhaust
21	121-3098-0P	1	Support-Tailpipe
22	323-14	4	Screw-HH
24	18-2130	2	Clamp
25	33004-00	4	Nut-HF
26	121-3061	1	Pipe-Exhaust
27	3256-3	2	Washer-Flat
28	322-6	2	Screw-HH
29	119-4041	6	Nut-HF
30	136-3405-0P	1	Bracket-Ecu Mount
31	121-5592	1	Electronic Control Unit
32	322-11	2	Screw-HH
33	323-6	1	Screw-HH
35	104-7201	8	Nut-HF, NI
36	121-3142	1	Hose-Air Cleaner, Outlet
37	121-5636	1	Tab-Harness
38	3253-4	2	Washer-Lock
39	33114-016	2	Screw-HH

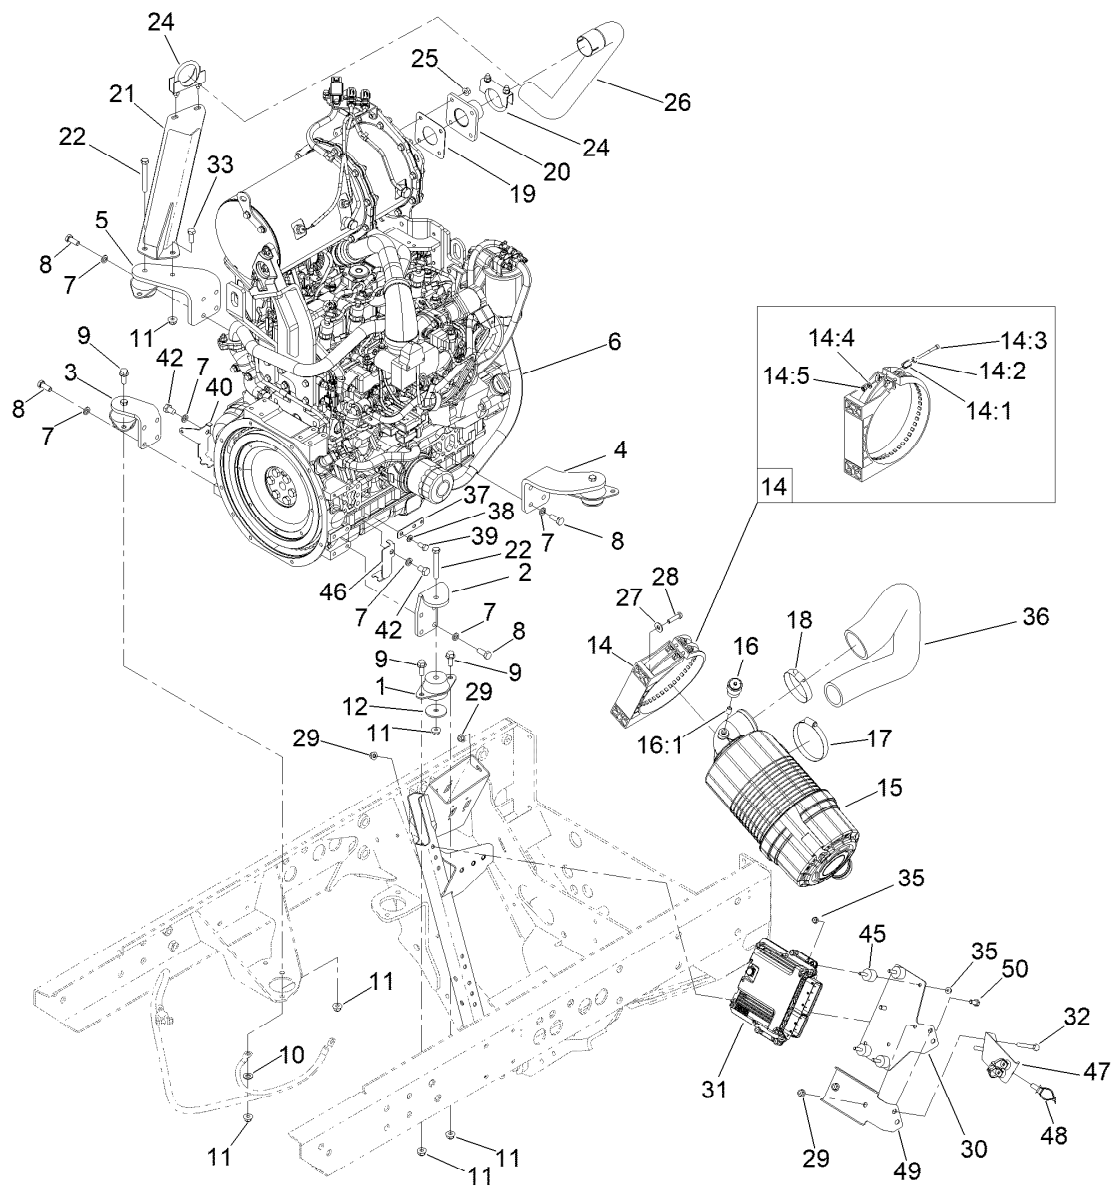 

Engine and Air Cleaner Assembly (continued)

Ref.	Part Number	Qty.	Description
40	127-2774	1	Bracket-Harness, RH
42	33115-016	2	Screw-HH
45	132-1356	4	Mount-Isolator
46	127-2773	1	Bracket-Harness, LH


Ref.	Part Number	Qty.	Description
47	136-3587-0P	1	Bracket-Strain Relief
48	32180-031	3	Clip-Tree (W/Tie)
49	136-3406-0P	1	Support-Ecu Mount
50	322-3	2	Screw-HH

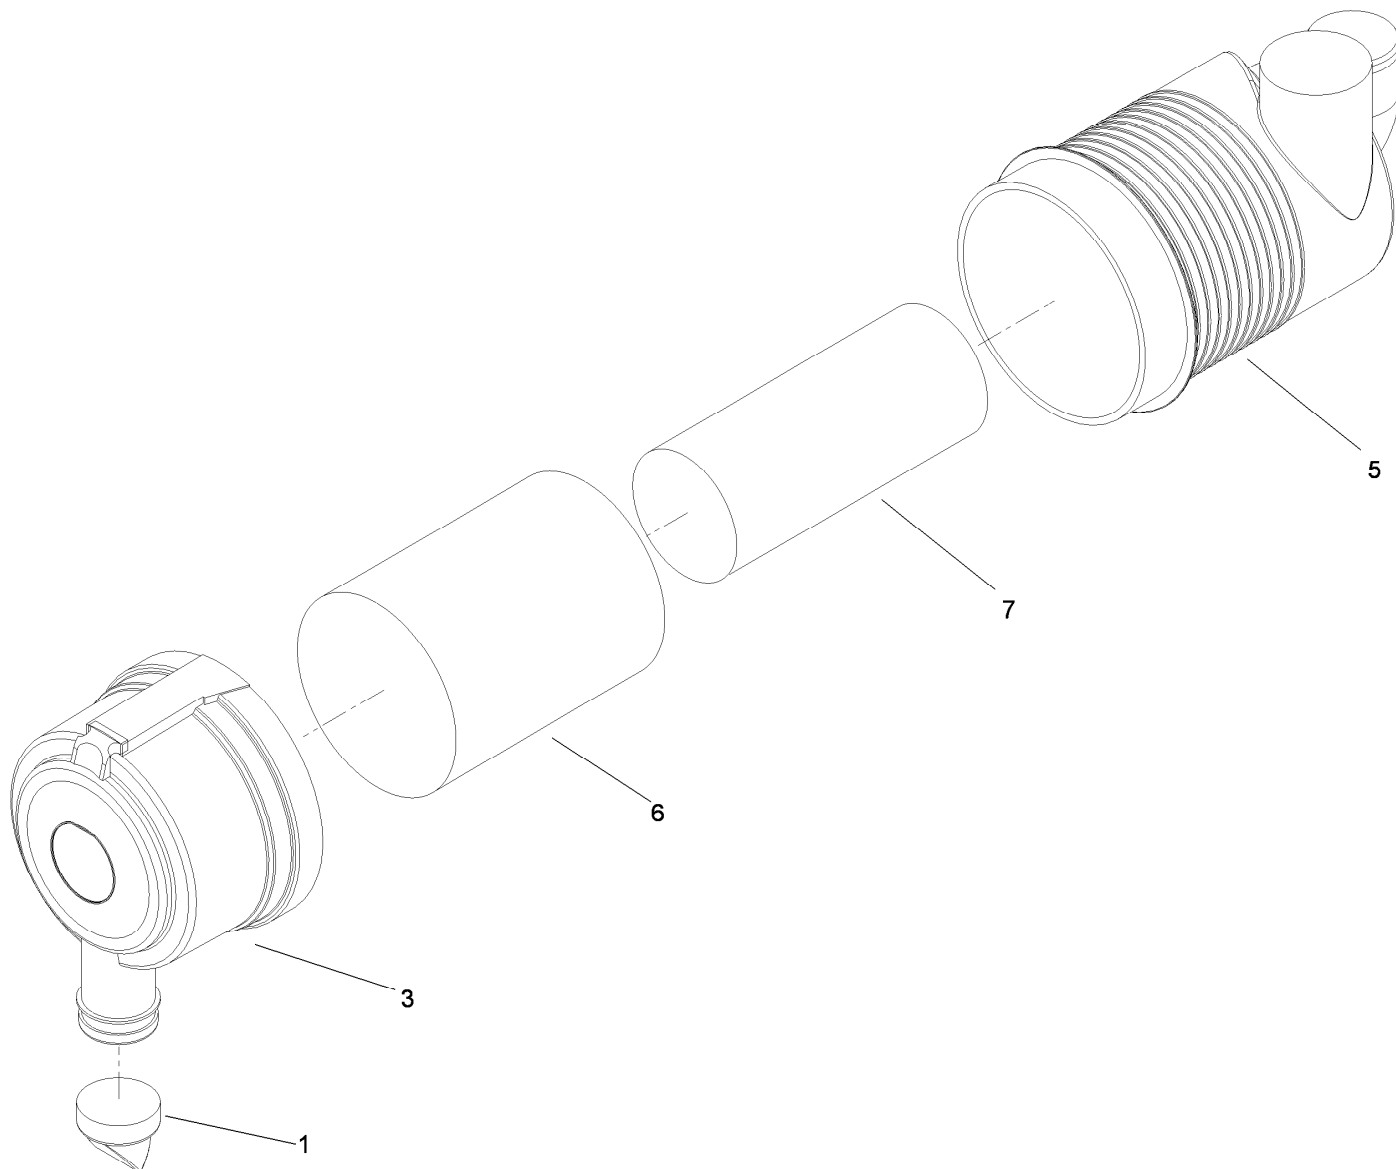 

Air Cleaner Assembly No. 99-5410


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-4258	1	Valve-Vacuator
3	104-4259	1	Cover
5		1	Body ASM ●
6	108-3814	1	Filter-Air
7	108-3816	1	Filter-Air

 ● Not serviced separately

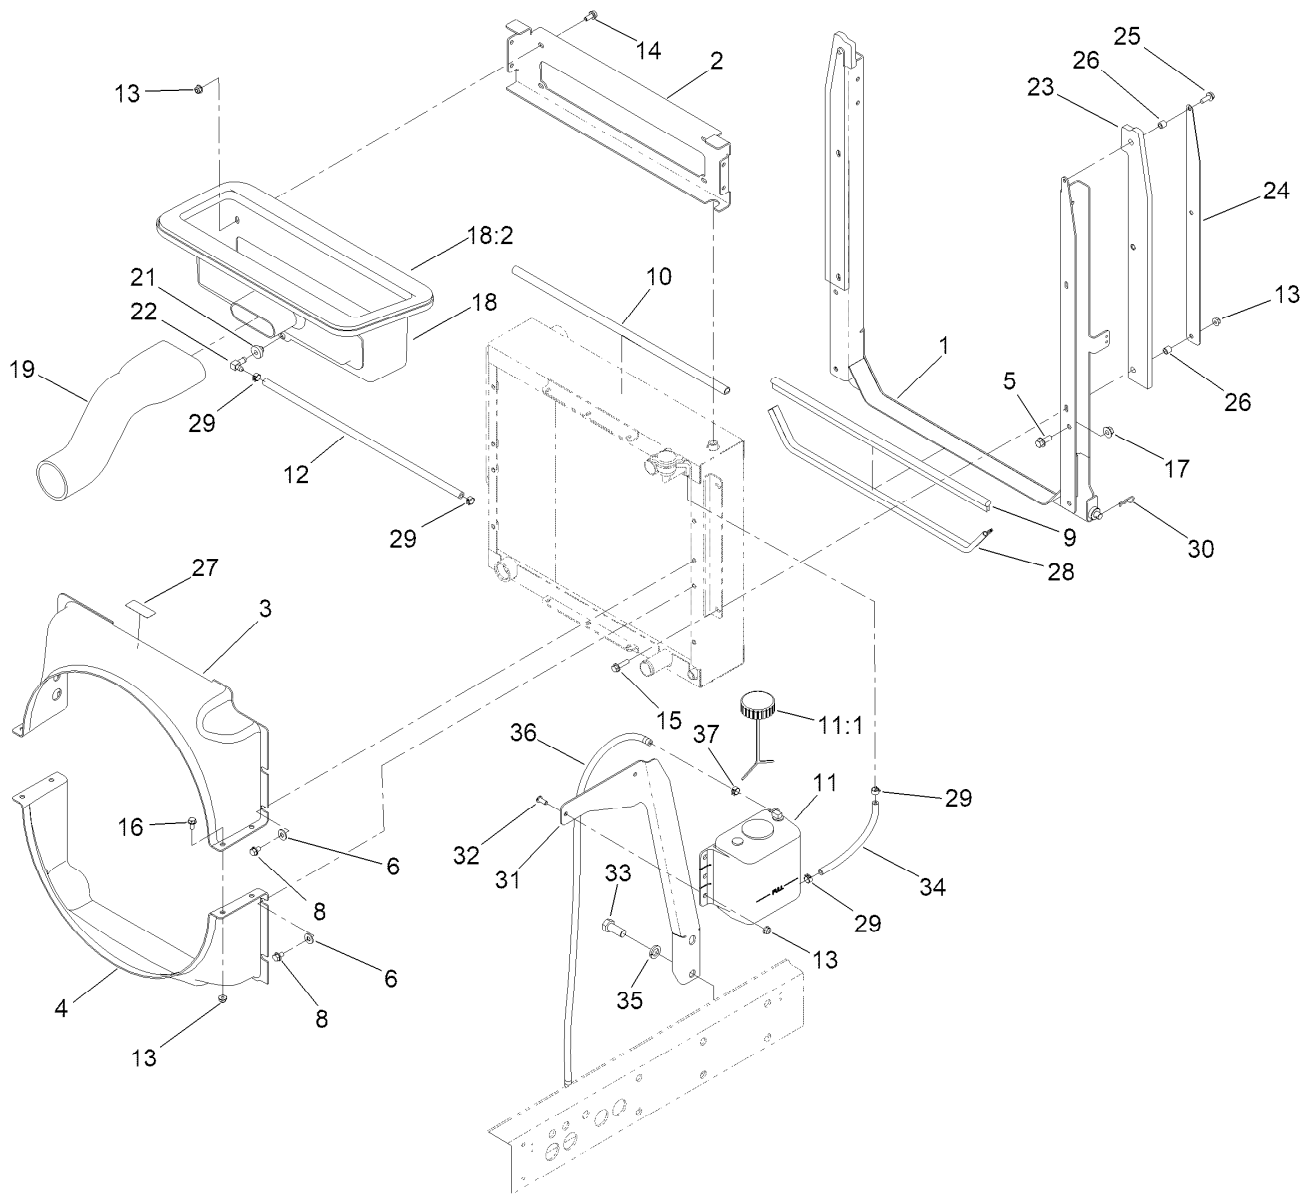

Radiator Mounting Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	121-3084-03	1	Mount-Radiator	19	121-3143	1	Hose-Air Cleaner, Inlet
2	121-3085-0P	1	Plate-Crossover	21	46-6560	1	Bushing
3	125-4615	1	Shroud-Radiator, Upper	22	46-6550	1	Fitting-Elbow, 90 DEG
4	121-3106	1	Shroud-Radiator, Lower	23	121-3087	2	Seal-Foam, Hood
5	3234-11	4	Screw-HHF	24	121-3086-0P	2	Bracket-Seal Hood
6	3256-3	8	Washer-Flat	25	32144-41	2	Screw-Taptite
8	3234-30	8	Screw-HHF	26	1-603903	6	Spacer
9	105-9858	1	Seal-Bulb	27	117-4766	1	Decal-Warning, Fan
10	114-3828	1	Seal-Bulb	28	117-4782	1	Seal-Bulb
11	144-6219	1	Reservoir-Coolant ASM	29	92-2379	4	Clamp-Hose
11:1	87-7050	1	Cap-Reservoir	30	3290-467	2	Pin-Hair
12	110-3258	1	Hose-Fuel	31	136-3693-0P	1	Bracket-Mount, Tank
13	119-4041	18	Nut-HF	32	3274-55	2	Screw-HSBH
14	3234-47	8	Screw-HHF	33	327-4	2	Screw-HH
15	3234-36	4	Screw-HHF	34	109-0282	1	Hose-Fuel
16	3234-7	4	Screw-HHF	35	3253-8	2	Washer-Lock
17	32128-43	4	Nut-Flange	36	109-0273	1	Hose-Fuel
18	115-4363	1	Plenum ASM	37	92-2379	1	Clamp-Hose
18:2	115-4393	1	Seal-Plenum				

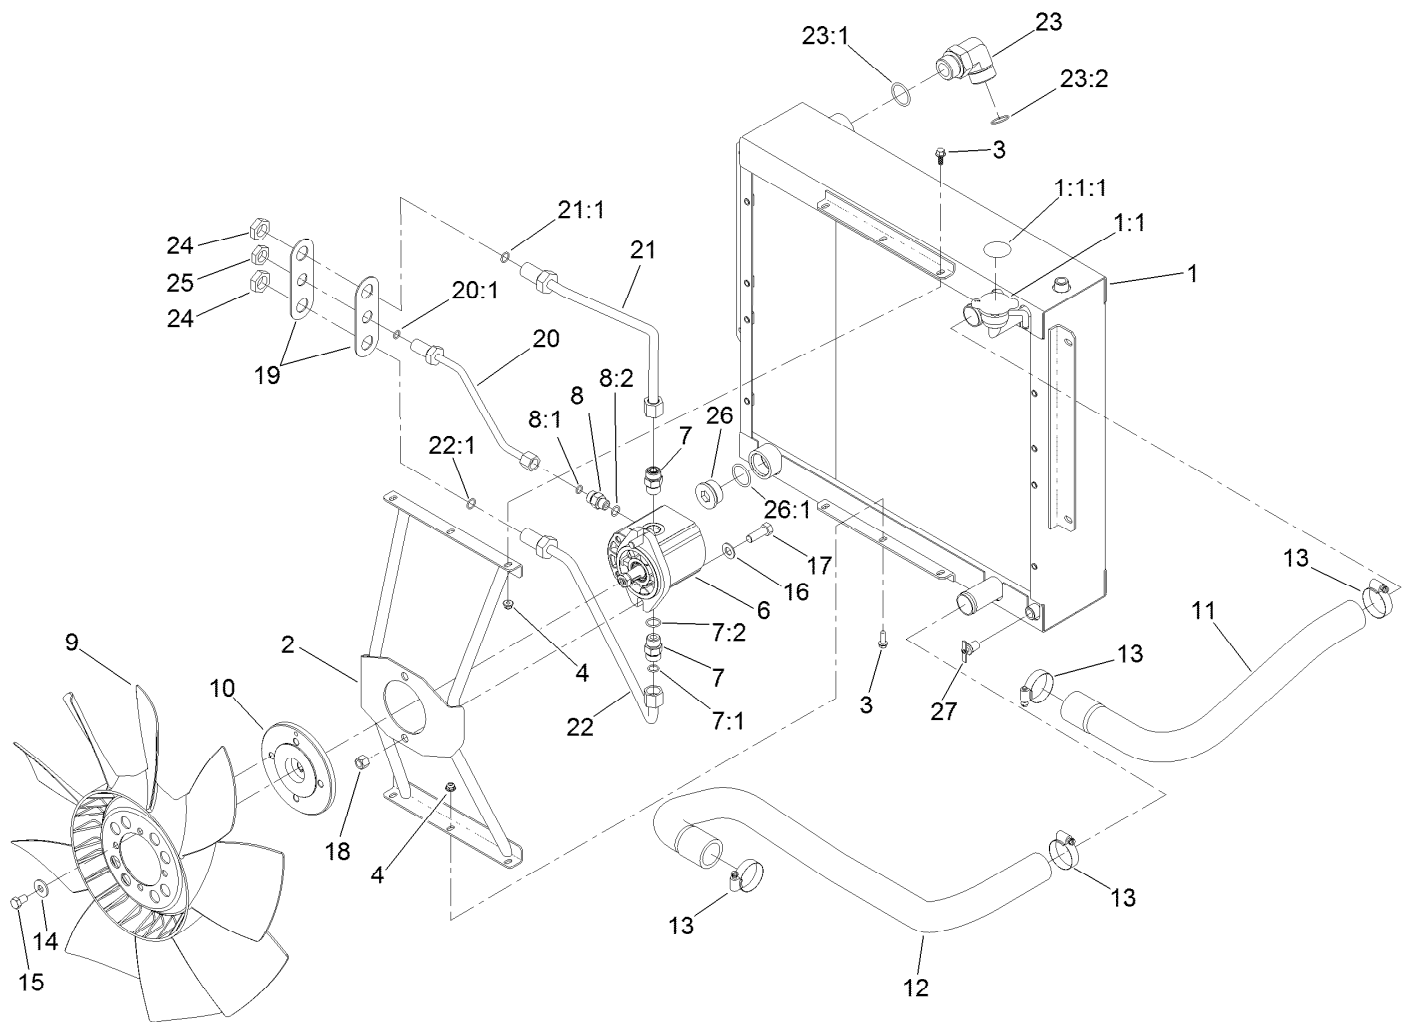 

Radiator and Fan Assembly

Ref.	Part Number	Qty.	Description
1	132-6161	1	Radiator/Oil Cooler
1:1	115-7766	1	Cap-Radiator
1:1:1	106-6755	1	Decal-Cap, Radiator
2	137-5594	1	Mount-Fan
3	99-6810	6	Screw-HHF
4	104-7201	6	Nut-HF, NI
6	137-5571	1	Hydraulic Motor ASM
7	340-4	2	Fitting-Straight
7:1	237-30	1	O-Ring
7:2	237-79	1	O-Ring
8	340-2	1	Fitting-Straight
8:1	237-22	1	O-Ring
8:2	237-42	1	O-Ring
9	114-3825	1	Fan
10	140-6482	1	Hub-Fan
11	121-1476	1	Hose-Radiator, Upper
12	121-1477	1	Hose-Radiator, Lower
13	2412-111	4	Clamp-Hose, W/Liner
14	80-6990	4	Washer-Hardened


Ref.	Part Number	Qty.	Description
15	115-8486	4	Screw-HH
16	3256-25	2	Washer-Flat
17	324-5	2	Screw-HH
18	3296-48	2	Nut-Hex
19	125-4610	2	Shim-Support
20	138-6945	1	Tube ASM
20:1	237-22	1	O-Ring
21	138-6943	1	Tube ASM
21:1	237-30	1	O-Ring
22	138-6944	1	Tube ASM
22:1	237-30	1	O-Ring
23	340-129	2	Fitting-Elbow, 90 DEG
23:1	237-146	1	O-Ring
23:2	340-65	1	O-Ring
24	340-127	2	Nut-Bulkhead
25	340-70	1	Nut-Lock
26	105-3921	1	Fitting-Plug
26:1	237-146	1	O-Ring
27	304-46	1	Draincock

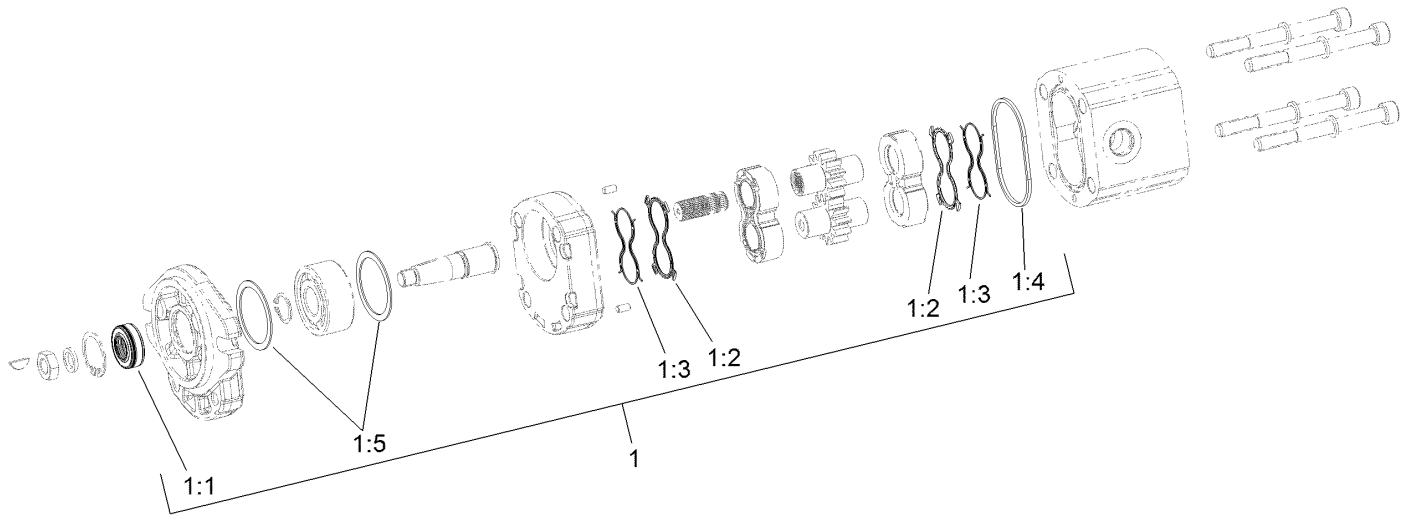 

Hydraulic Motor Assembly No. 137-5571


Ref.	Part Number	Qty.	Description
1	139-1019	1	Seal Kit
1:1		1	Seal-Shaft ●
1:2		2	Seal-Plate, Balancing ●
1:3		2	Seal-Anti Extrusion ●
1:4		1	O-Ring (Housing) ●
1:5		2	Seal-Square ●

 ● Not serviced separately

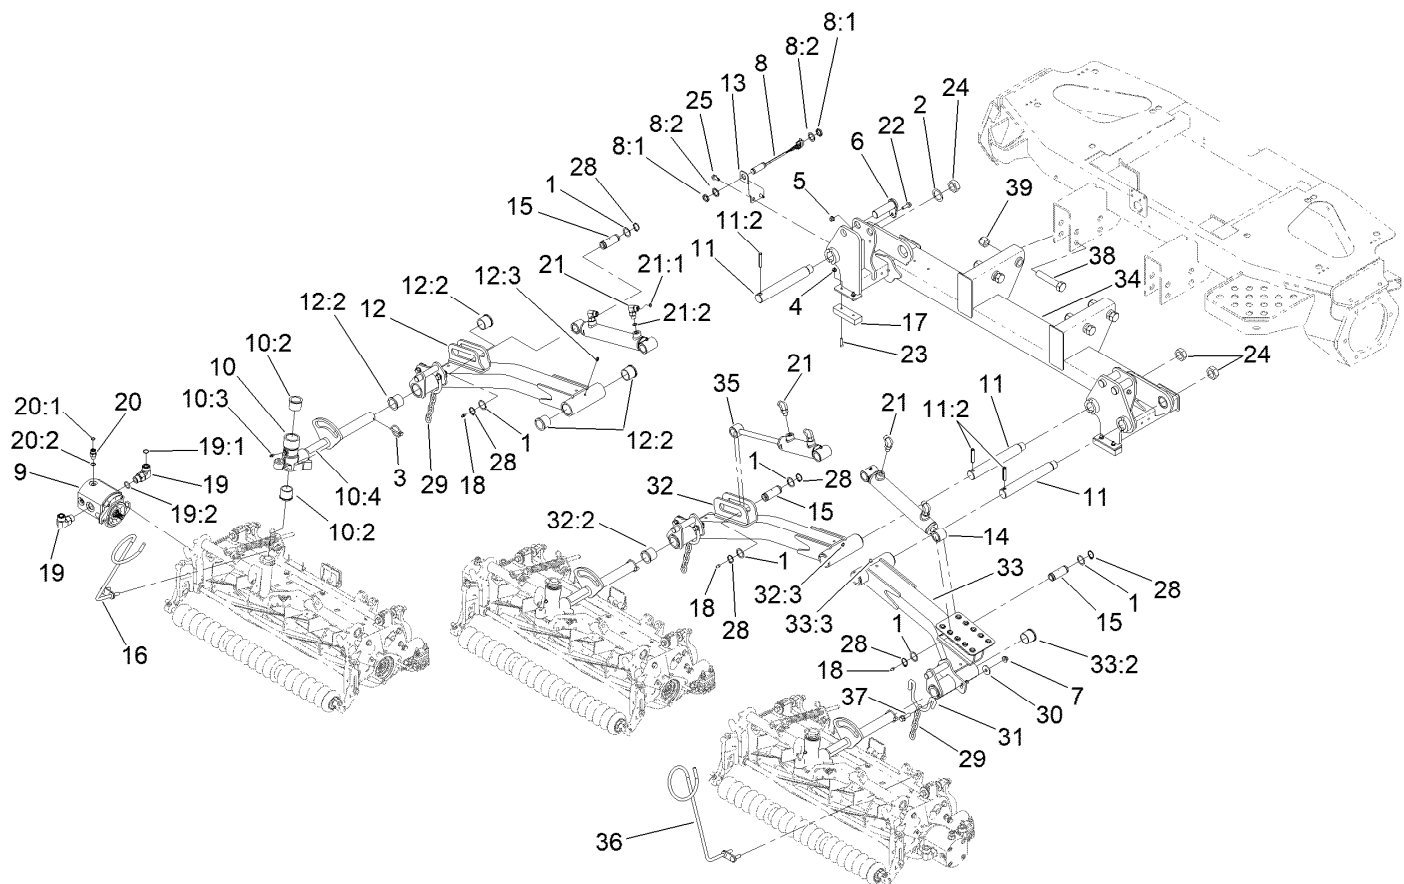

Front Reel Lift Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	5-1550	6	Washer	14	125-1660	2	Cylinder-HYD
2	76-2980	6	Washer-Thrust	15	119-3894	3	Pin-Plain
3	92-1298	3	Pin-Lynch	16	139-5995	1	Guide-Hose, RH
4	104-7201	4	Nut-HF, NI	17	125-1657	2	Bumper-Pad, Recessed
5	119-4041	3	Nut-HF	18	302-5	3	Fitting-Grease
6	125-1906	3	Pin-Cylinder	19	340-17	6	Fitting-Elbow, 90 DEG
7	119-4042	6	Nut-HF, NI	19:1	237-65	1	O-Ring
8	115-5300	1	Proximity Sensor ASM	19:2	237-80	1	O-Ring
8:1	117-3207	2	Nut-Hex	20	340-2	3	Fitting-Straight
8:2	117-3208	2	Washer-Lock, Internal Tooth	20:1	237-22	1	O-Ring
9	115-8250	3	Gear Motor ASM	20:2	237-42	1	O-Ring
10	138-1249	3	Pivot Yoke ASM	21	340-77	6	Fitting-Elbow, 90 DEG
10:2	104-0015	2	Bushing-Flange	21:1	237-22	1	O-Ring
10:3	302-5	1	Fitting-Grease	21:2	237-42	1	O-Ring
10:4	110-9642	1	Decal-Warning	22	3234-17	3	Screw-HHF
11	147-6065	3	Pivot Pin ASM	23	3274-9	4	Screw-HSH
11:2	32121-110	1	Pin-Roll, Slotted	24	3296-49	3	Nut-Lock, NI
12	119-1505	1	#5 Lift Arm ASM	25	32104-32	2	Screw-HWH
12:2	104-0015	4	Bushing-Flange	28	32151-36	6	Ring-Retaining
12:3	302-5	2	Fitting-Grease	29	5-1096	3	Chain-Lift
13	119-1506	1	Bracket-Switch	30	63-8410	6	Washer

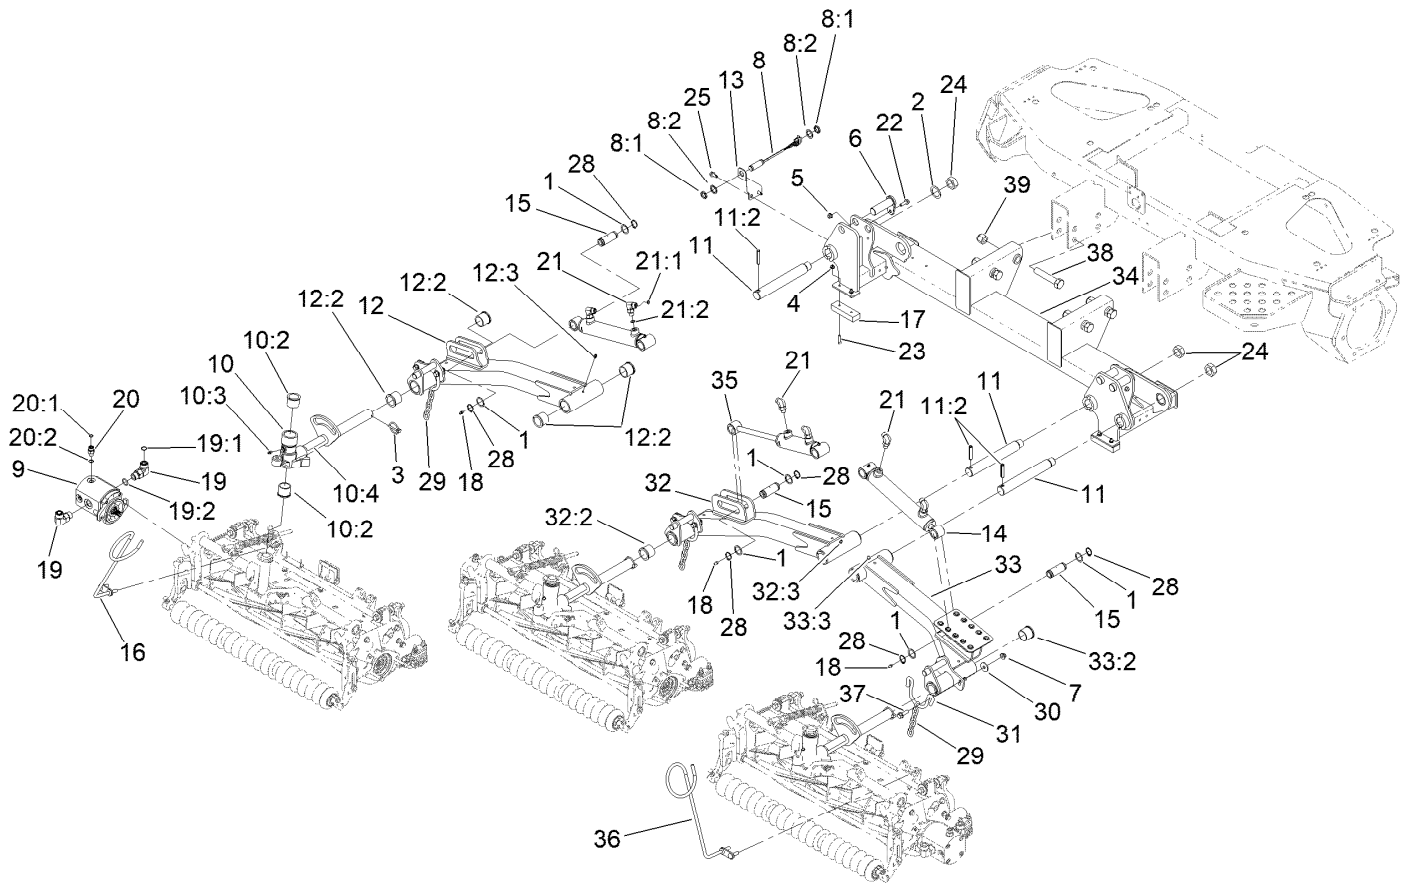 

Front Reel Lift Assembly (continued)


Ref.	Part Number	Qty.	Description
31	110-0922	3	Hoop-Chain
32	119-1501	1	#1 Lift Arm ASM
32:2	104-0015	4	Bushing-Flange
32:3	302-5	2	Fitting-Grease
33	119-1504	1	#4 Lift Arm ASM
33:2	104-0015	4	Bushing-Flange
33:3	302-5	2	Fitting-Grease

Ref.	Part Number	Qty.	Description
34	119-1508-03	1	Frame-Carrier, Front
35	125-1658	1	Cylinder-HYD
36	139-5996	1	Hose Guide ASM-LH
37	119-4061	6	Screw-HHF
38	328-7	4	Screw-HH
39	3296-51	4	Nut-Lock, NI

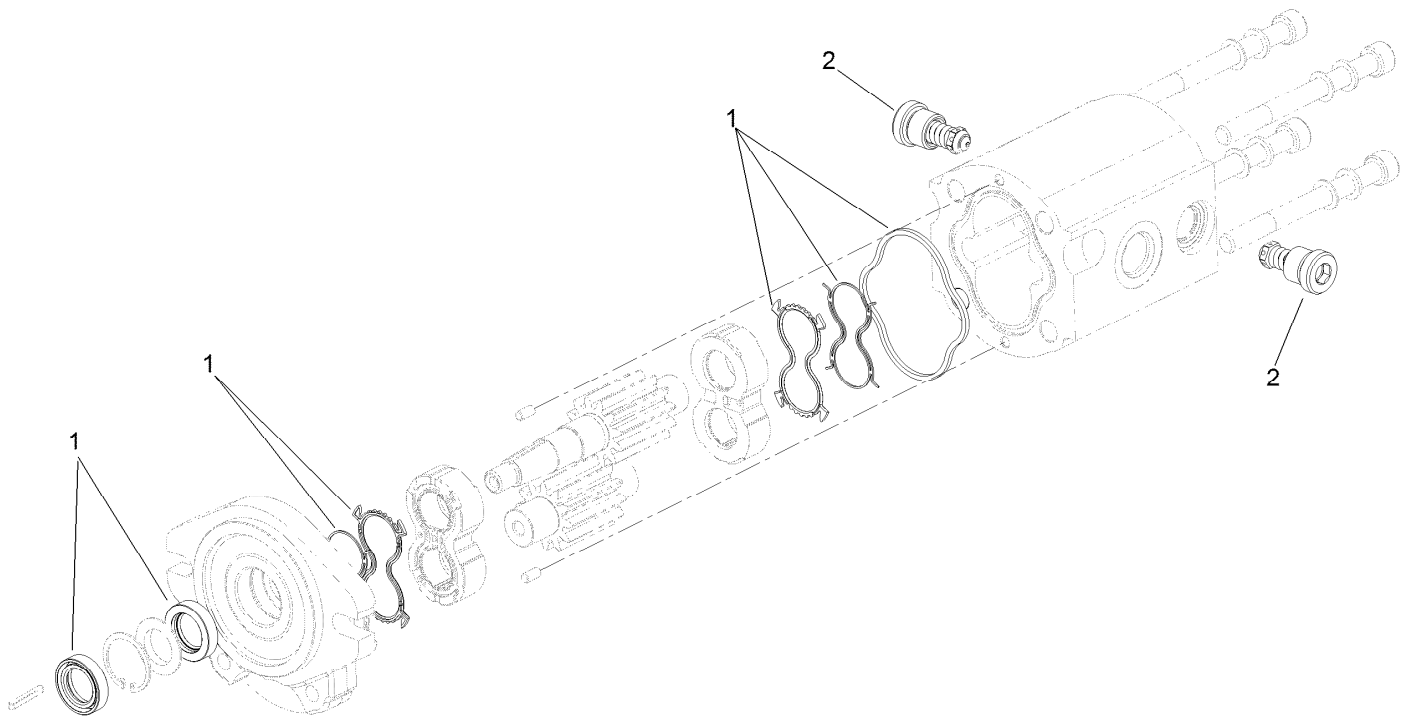 


Gear Motor Assembly No. 115-8250

Ref.	Part Number	Qty.	Description
1	145-2784	1	Seal Kit
2	117-5107	2	Valve-Check

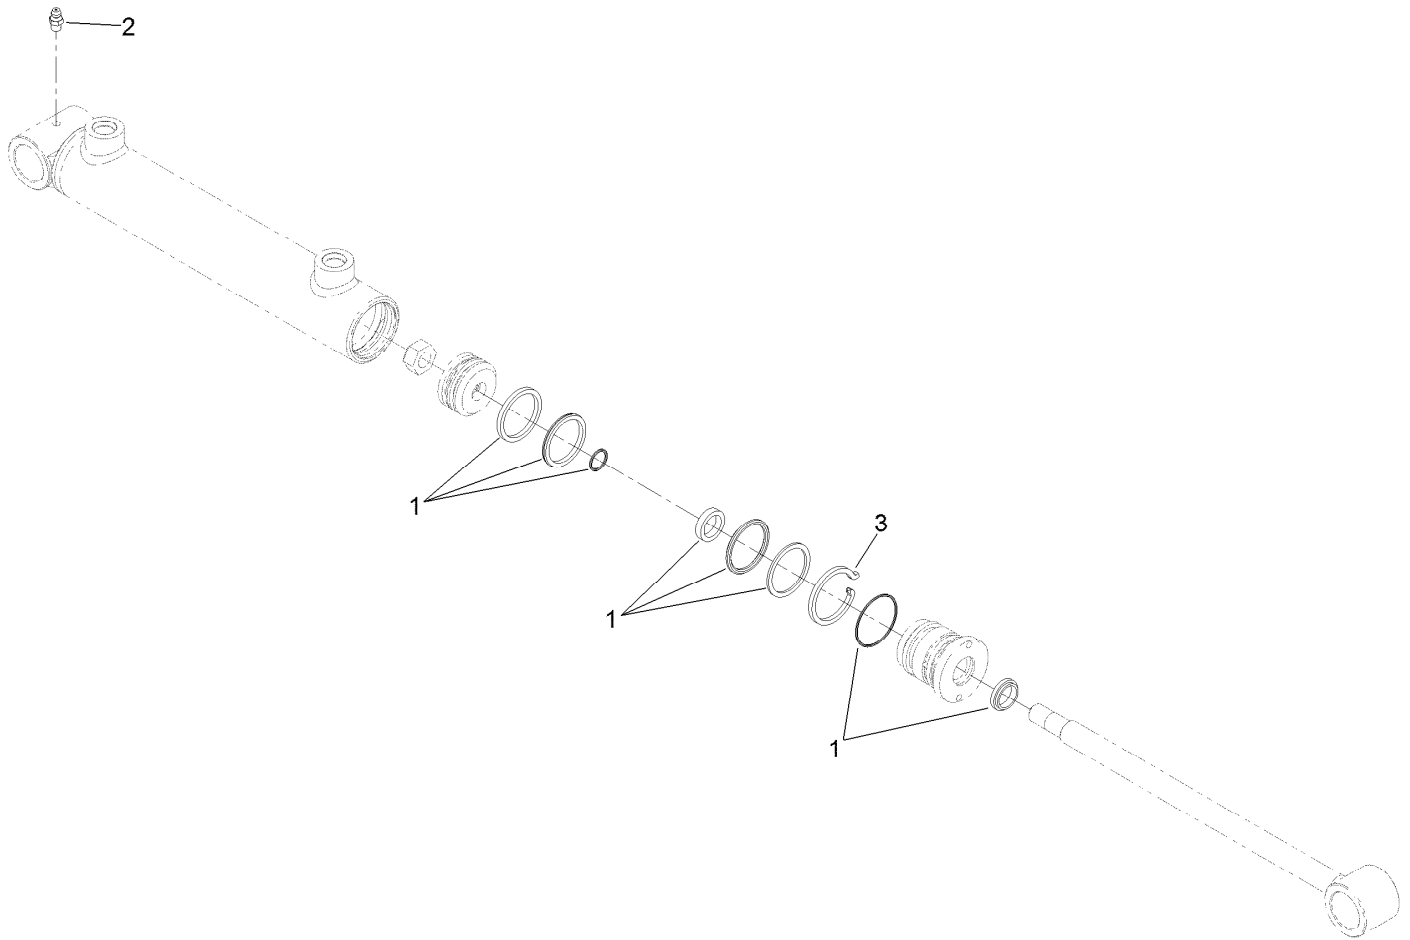 


Hydraulic Cylinder Assembly No. 125-1660

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-1680	1	Cylinder Repair Kit
2	302-5	1	Fitting-Grease
3	84-1680	1	Ring-Retaining

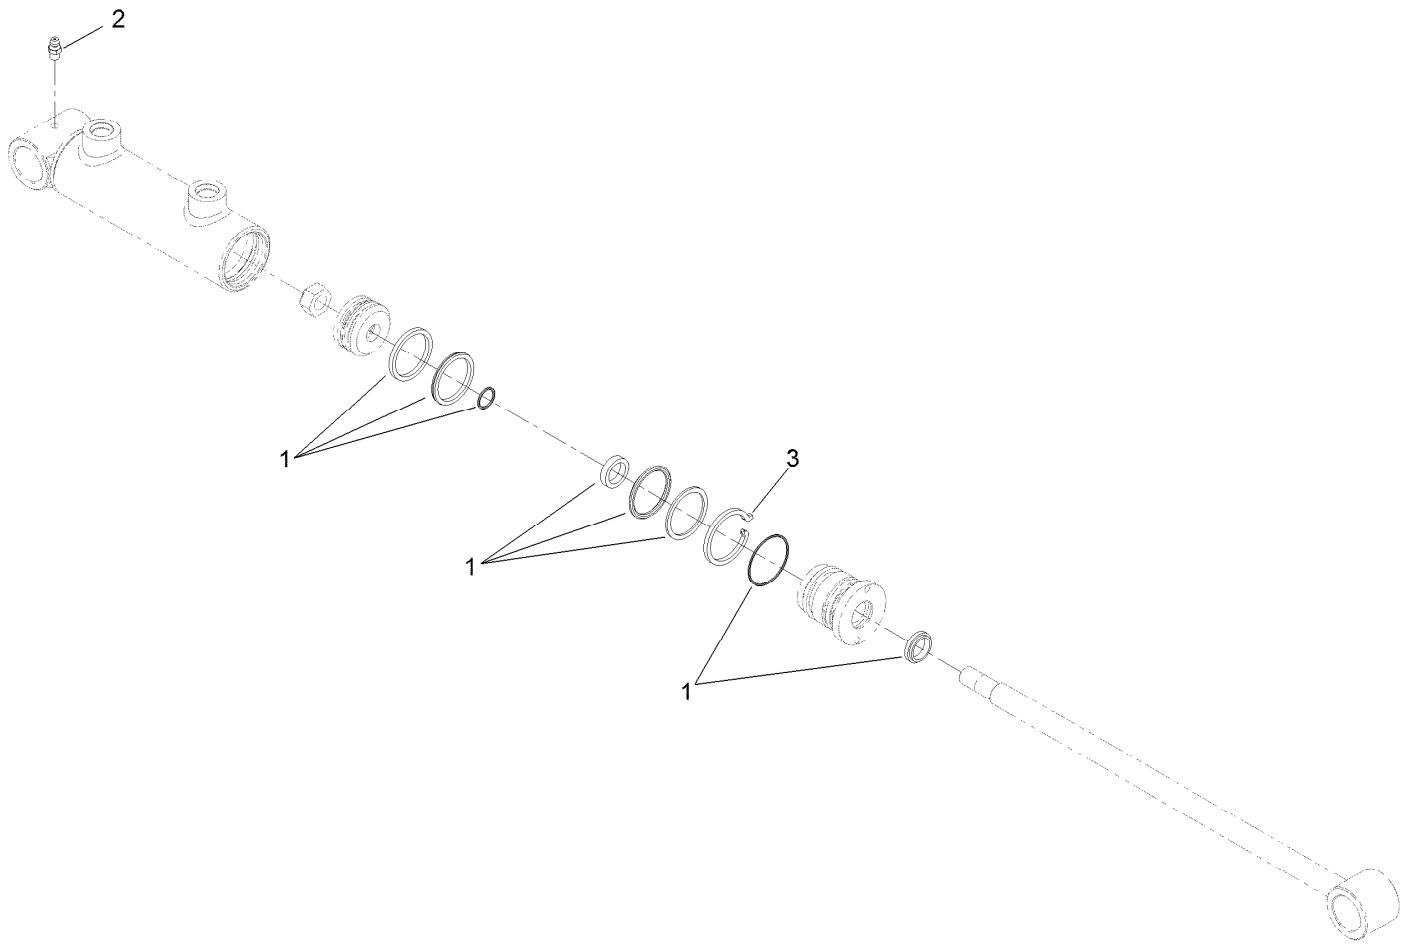 

Hydraulic Cylinder Assembly No. 125-1658


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-1680	1	Cylinder Repair Kit
2	302-5	1	Fitting-Grease
3	84-1680	1	Ring-Retaining

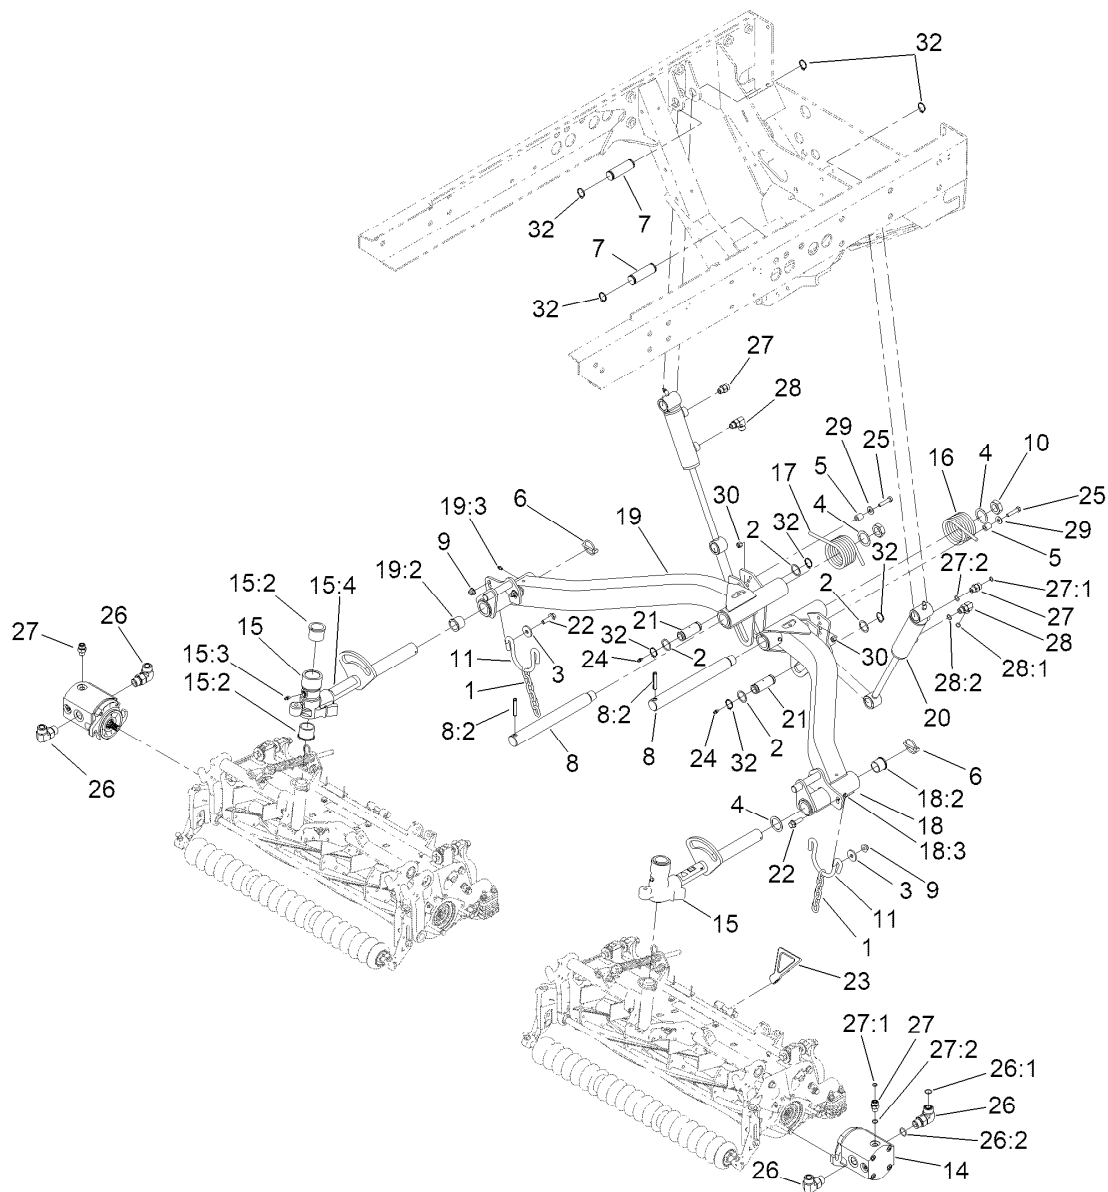 

Rear Reel Lift Assembly


Ref.	Part Number	Qty.	Description
1	5-1096	2	Chain-Lift
2	5-1550	4	Washer
3	63-8410	4	Washer
4	76-2980	4	Washer-Thrust
5	82-6840	2	Spacer
6	92-1298	2	Pin-Lynch
7	92-7548	2	Pin-Cylinder
8	140-6431	2	Pivot Pin ASM
8:2	32121-110	1	Pin-Roll, Slotted
9	119-4042	4	Nut-HF, NI
10	3296-49	2	Nut-Lock, NI
11	110-0922	2	Hoop-Chain
14	115-8250	2	Gear Motor ASM
15	138-1249	2	Pivot Yoke ASM
15:2	104-0015	2	Bushing-Flange
15:3	302-5	1	Fitting-Grease
15:4	110-9642	1	Decal-Warning
16	119-1480	1	Spring-Torsion, LH
17	119-1481	1	Spring-Torsion, RH
18	119-1502	1	#2 Lift Arm ASM
18:2	104-0015	4	Bushing-Flange

Ref.	Part Number	Qty.	Description
18:3	302-5	2	Fitting-Grease
19	119-1503	1	#3 Lift Arm ASM
19:2	104-0015	4	Bushing-Flange
19:3	302-5	2	Fitting-Grease
20	125-1659	2	Cylinder-HYD
21	119-3894	2	Pin-Plain
22	119-4061	4	Screw-HHF
23	119-8010-03	1	Kickstand
24	302-5	2	Fitting-Grease
25	322-7	2	Screw-HH
26	340-17	4	Fitting-Elbow, 90 DEG
26:1	237-65	1	O-Ring
26:2	237-80	1	O-Ring
27	340-2	4	Fitting-Straight
27:1	237-22	1	O-Ring
27:2	237-42	1	O-Ring
28	340-77	2	Fitting-Elbow, 90 DEG
28:1	237-22	1	O-Ring
28:2	237-42	1	O-Ring
29	3256-3	2	Washer-Flat

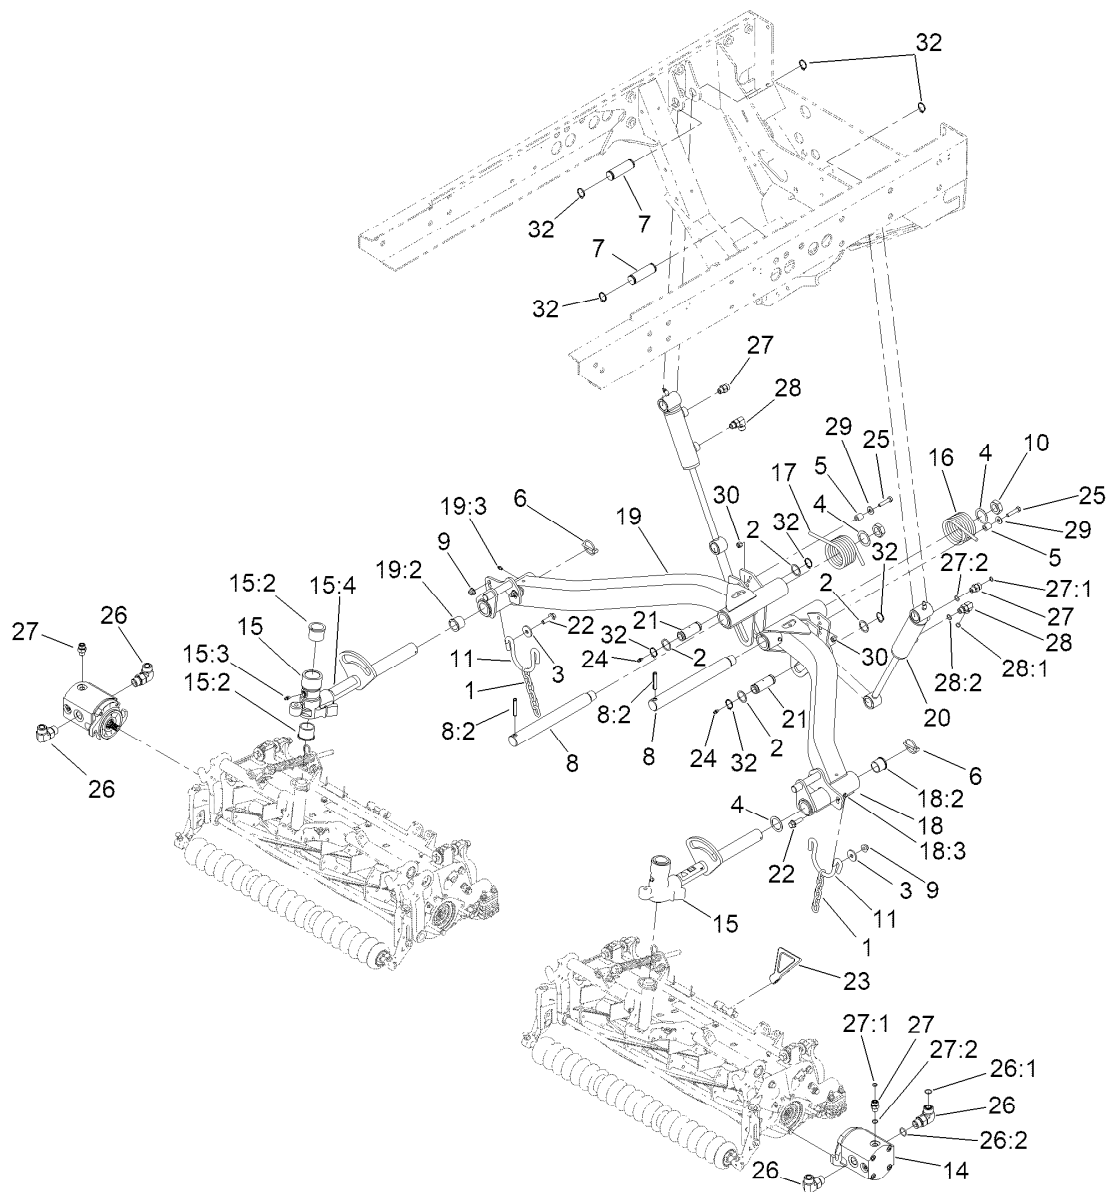 


Rear Reel Lift Assembly (continued)

Ref.	Part Number	Qty.	Description
30	3296-29	2	Nut-Lock, NI
32	32151-36	8	Ring-Retaining

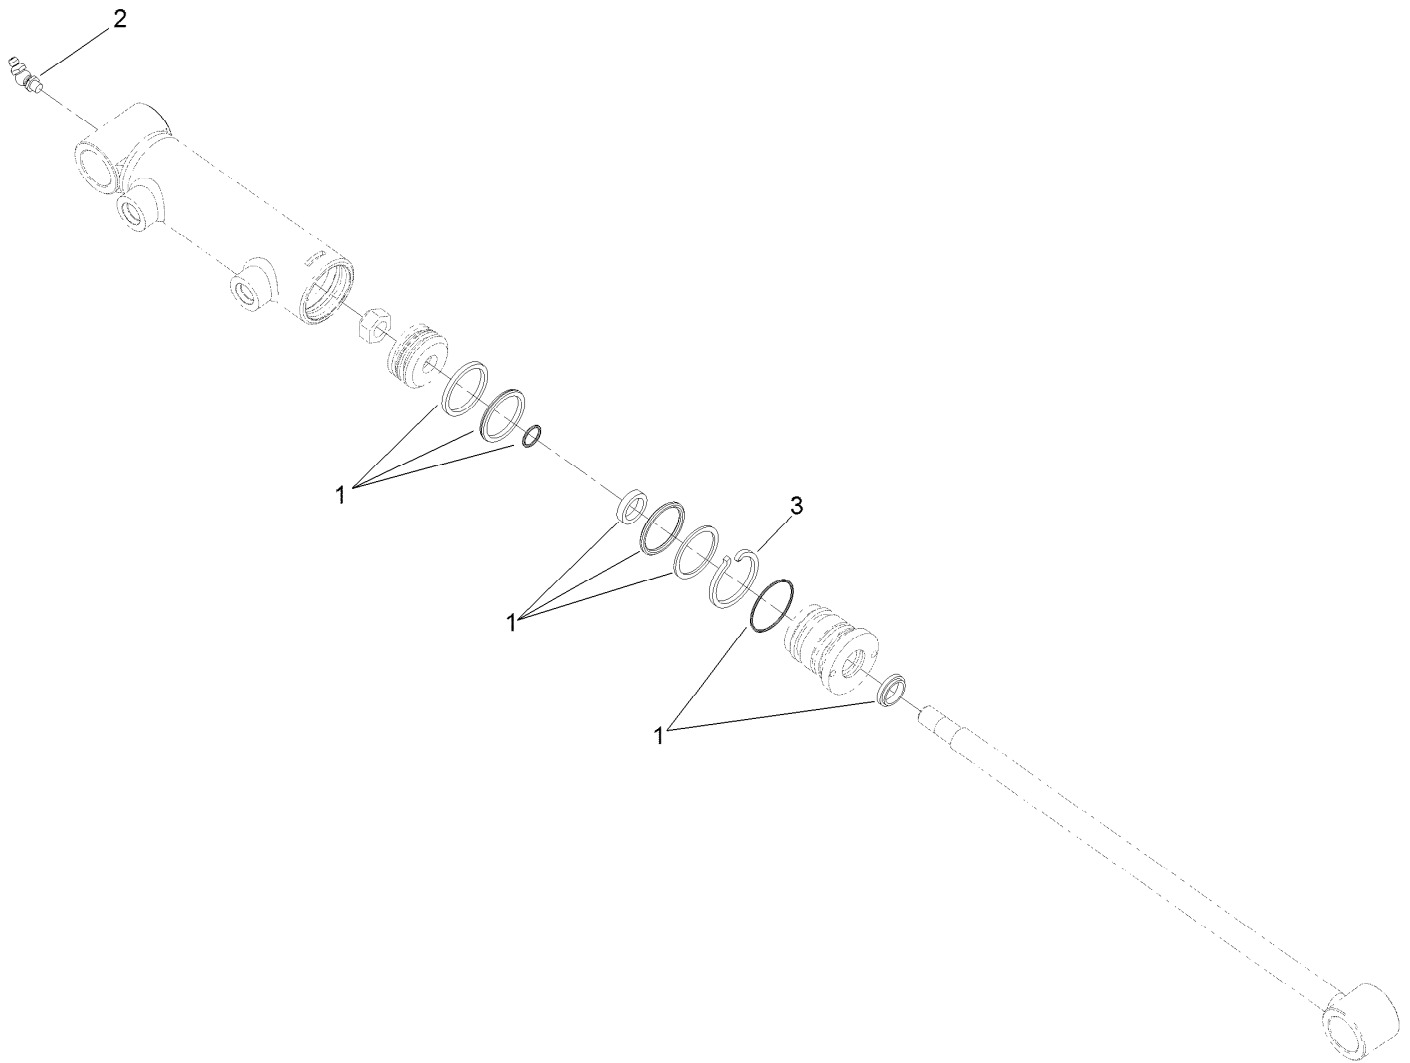 

Hydraulic Cylinder Assembly No. 125-1659


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-1680	1	Cylinder Repair Kit
2	302-10	1	Fitting-Grease
3	84-1680	1	Ring-Retaining

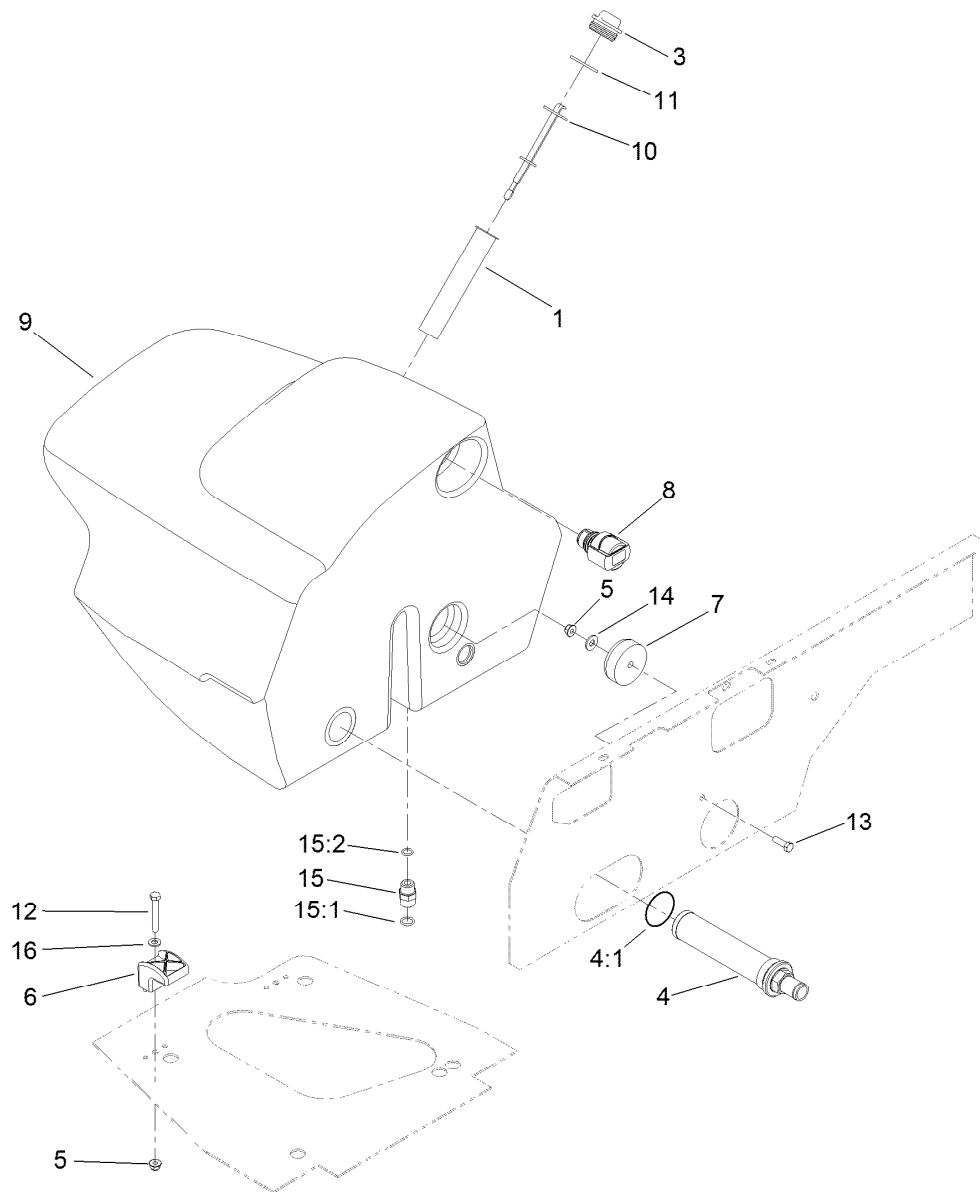 

Hydraulic Tank Assembly

Ref.	Part Number	Qty.	Description
1	61-2790	1	Filter-Screen
3	93-7498	1	Plug-Plastic
4	104-7546	1	Tank Strainer ASM
4:1	340-136	1	O-Ring
5	119-4041	3	Nut-HF
6	107-4543	2	Clamp
7	108-1605	1	Bumper-Recess
8	115-9793	1	Breather
9	119-0017	1	Tank-HYD


Ref.	Part Number	Qty.	Description
10	119-6968	1	Dipstick-Oil
11	237-101	1	O-Ring
12	322-11	2	Screw-HH
13	322-5	1	Screw-HH
14	3256-3	1	Washer-Flat
15	340-4	1	Fitting-Straight
15:1	237-30	1	O-Ring
15:2	237-79	1	O-Ring
16	3256-23	2	Washer-Plain

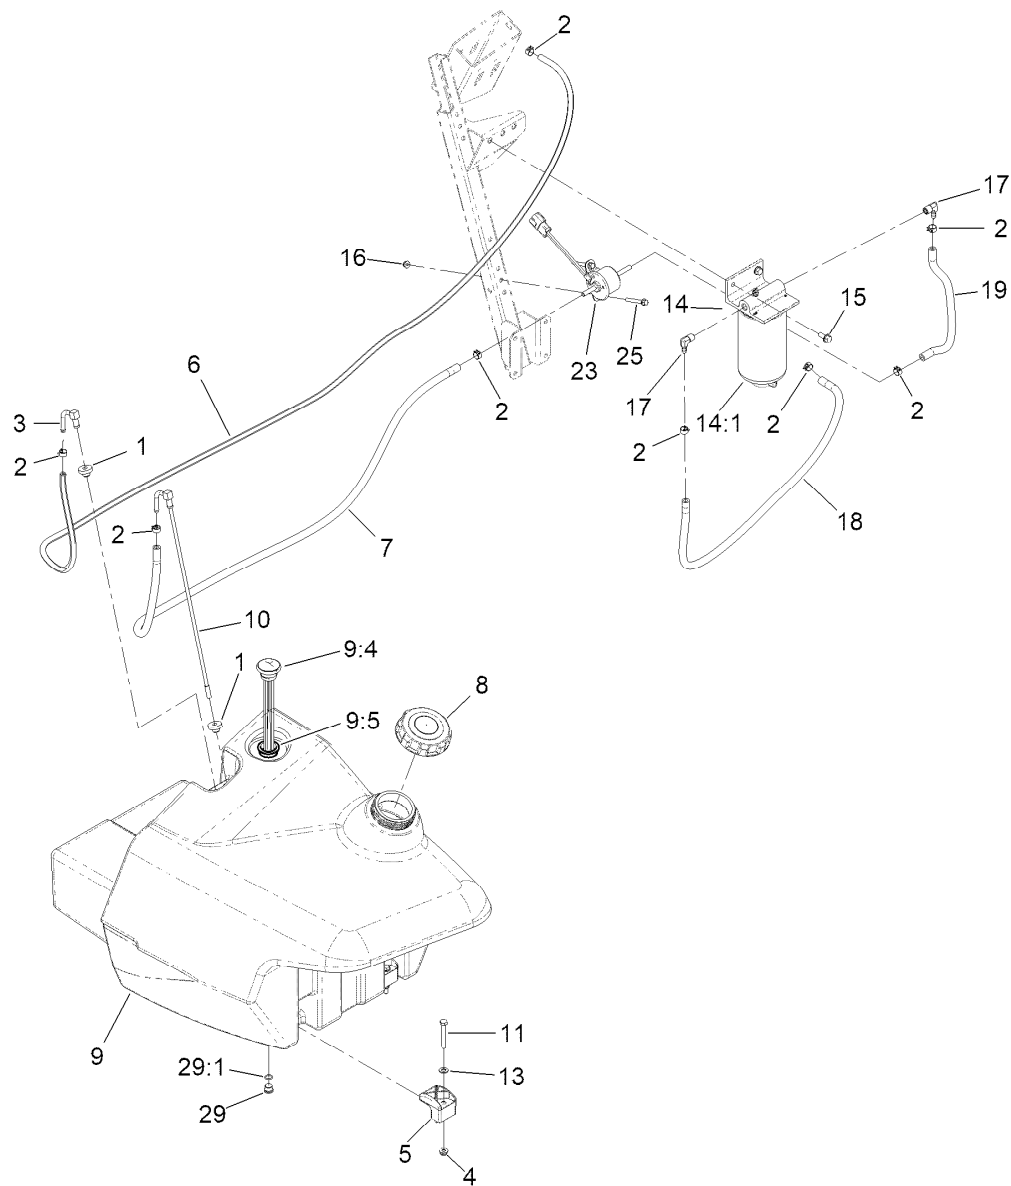 

Fuel System Assembly

Ref.	Part Number	Qty.	Description
1	46-6560	2	Bushing
2	92-2379	8	Clamp-Hose
3	121-3127	1	Fitting-Return
4	119-4041	2	Nut-HF
5	107-4543	2	Clamp
6	119-0577	1	Hose-Fuel
7	110-8802	1	Hose-Fuel
8	125-9172	1	Cap-Fuel, Diesel, Ultra Low Sulfur
9	115-4353	1	Fuel Tank ASM
9:4	117-4790	1	Guage-Fuel
9:5	95-8972	1	Grommet
10	115-4354	1	Tube-Suction, Fuel


Ref.	Part Number	Qty.	Description
11	322-11	2	Screw-HH
13	3256-23	2	Washer-Plain
14	125-2914	1	Filter-Separator
14:1	125-2915	1	Filter-Fuel/Water Separator
15	3234-5	2	Screw-HHF
16	104-7201	2	Nut-HF, NI
17	353-781	2	Fitting-HYD, 90
18	110-6186	1	Hose-Fuel
19	110-4113	1	Hose-Fuel
23	121-5613	1	Pump-Fuel, Electric
25	3234-34	2	Screw-HHF
29	353-989	1	Plug-Hex, Hollow
29:1	237-42	1	O-Ring

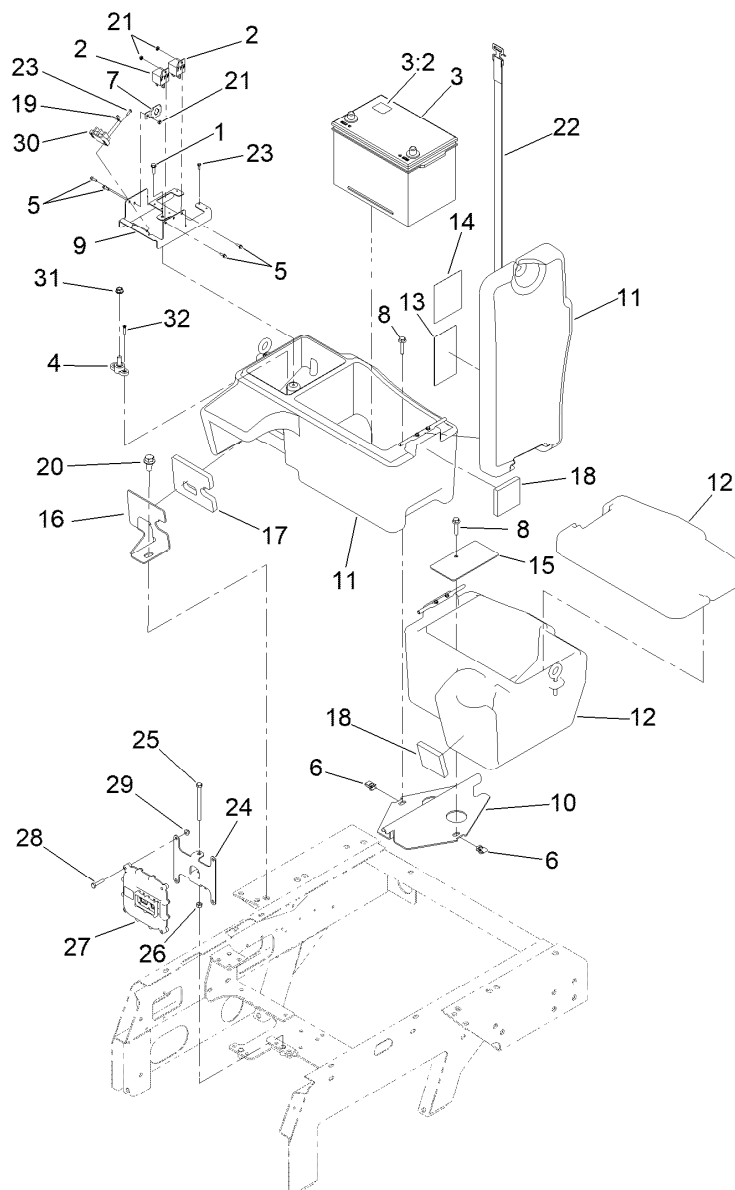 

Battery and Storage Box Assembly


Ref.	Part Number	Qty.	Description
1	46-8091	1	Screw-HWH
2	99-7435	2	Relay
3	139-1005	1	Battery Kit
3:2	139-1006	1	Decal
4	110-8822	1	Block-Junction
5	112-3169	3	Screw-HHF, Serrated
6	112-3306	2	Nut
7	114-5502	1	Clip-Fuse
8	115-1794	2	Screw-HHF
9	115-4356-0P	1	Mount-Fuse Blocks
10	115-4387-0P	1	Support-Box, Storage
11	115-9100	1	Box-Storage, Battery
12	115-9101	1	Box-Storage
13	136-3712	1	Decal-Service
14	145-5258	1	Decal-Fuse, Rm7000
15	117-4768-0P	1	Plate-Storage Box
16	117-4774-0P	1	Clamp [primed]

Ref.	Part Number	Qty.	Description
17	117-4775	1	Seal-Battery Box
18	117-4783	2	Seal-Foam
19	42863	1	Strip-Jumper
20	3234-6	1	Screw-HHF
21	3296-54	3	Nut-Lock
22	3339-175	1	Strapping-Web
23	32144-87	6	Screw-HWHTF
24	117-2360-0P	1	Bracket-Controller Mount
25	322-19	1	Screw-HH
26	3217-6	1	Nut-Hex
27	122-3375	1	Controller-Tec
28	321-8	4	Screw-HH
29	104-7201	4	Nut-HF, NI
30	42862	1	Block-Terminal, Ground
31	3290-357	1	Nut-HSF
32	93-0231	2	Screw-PPH

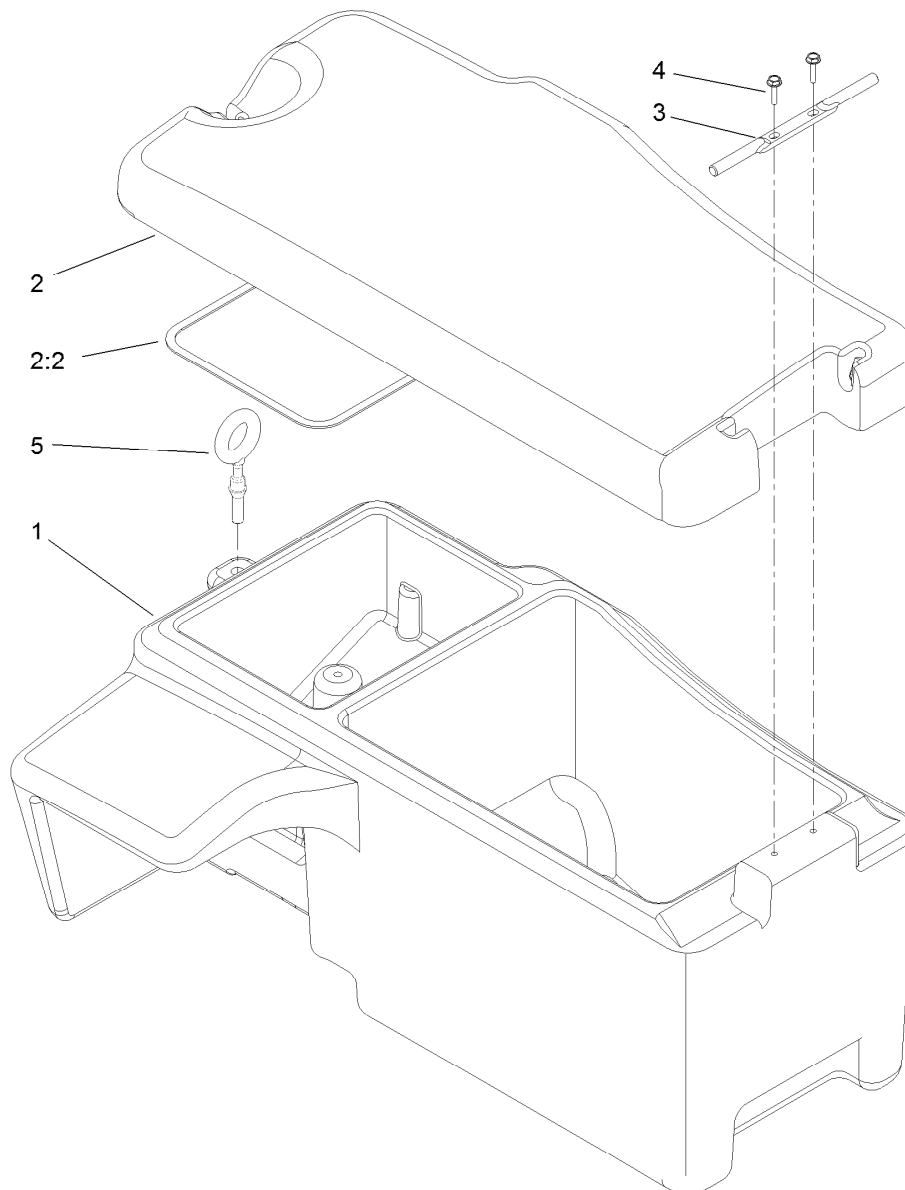 


Battery Storage Box Assembly No. 115-9100

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-8124	1	Box-Storage, RH
2	115-4368	1	Cover ASM
2:2	115-4367	1	Seal-Cover
3	147-2062	1	Hinge
4	98-1375	2	Screw-HWH
5	115-4366	1	Latch-Rubber

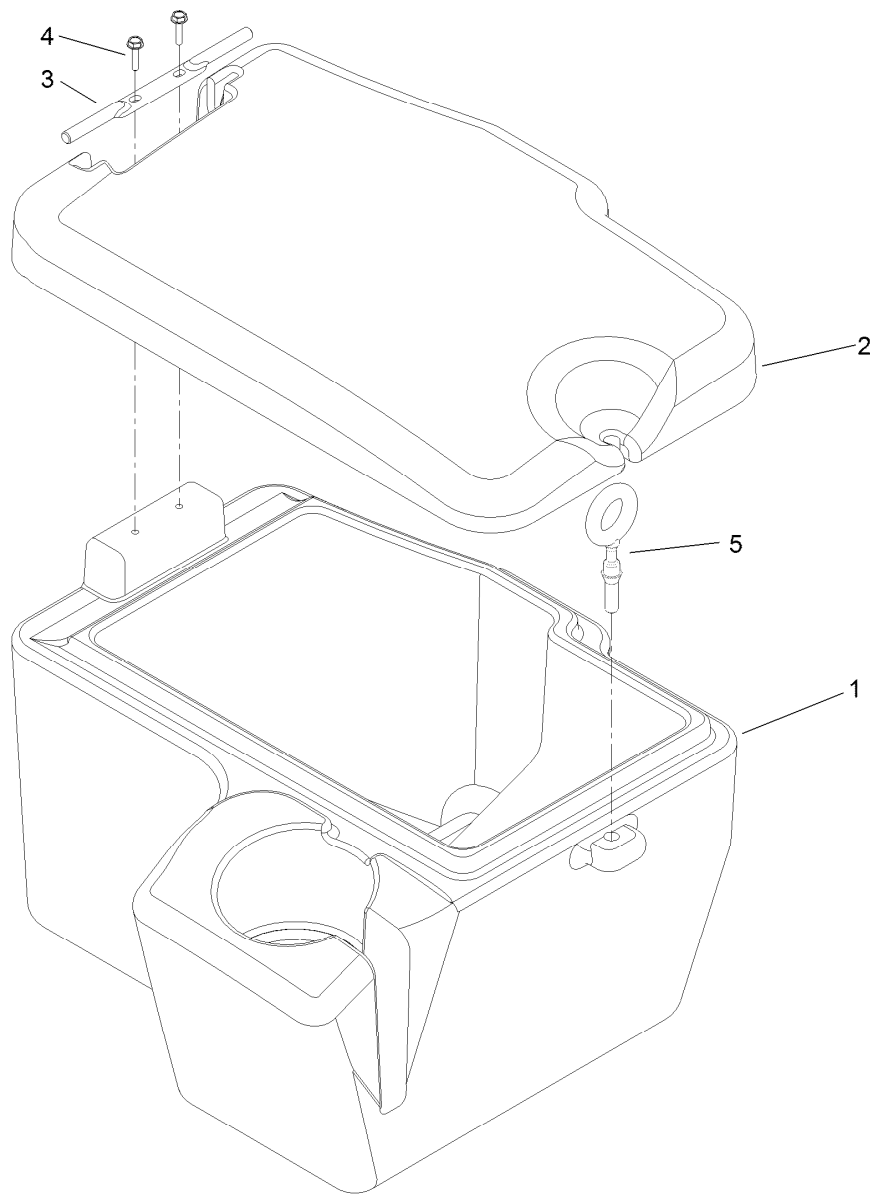 

Storage Box Assembly No. 115-9101

Ref.	Part Number	Qty.	Description
1	114-8123	1	Box-Storage, LH
2	114-8125	1	Cover-Storage Box, LH
3	147-2062	1	Hinge
4	98-1375	2	Screw-HWH
5	115-4366	1	Latch-Rubber

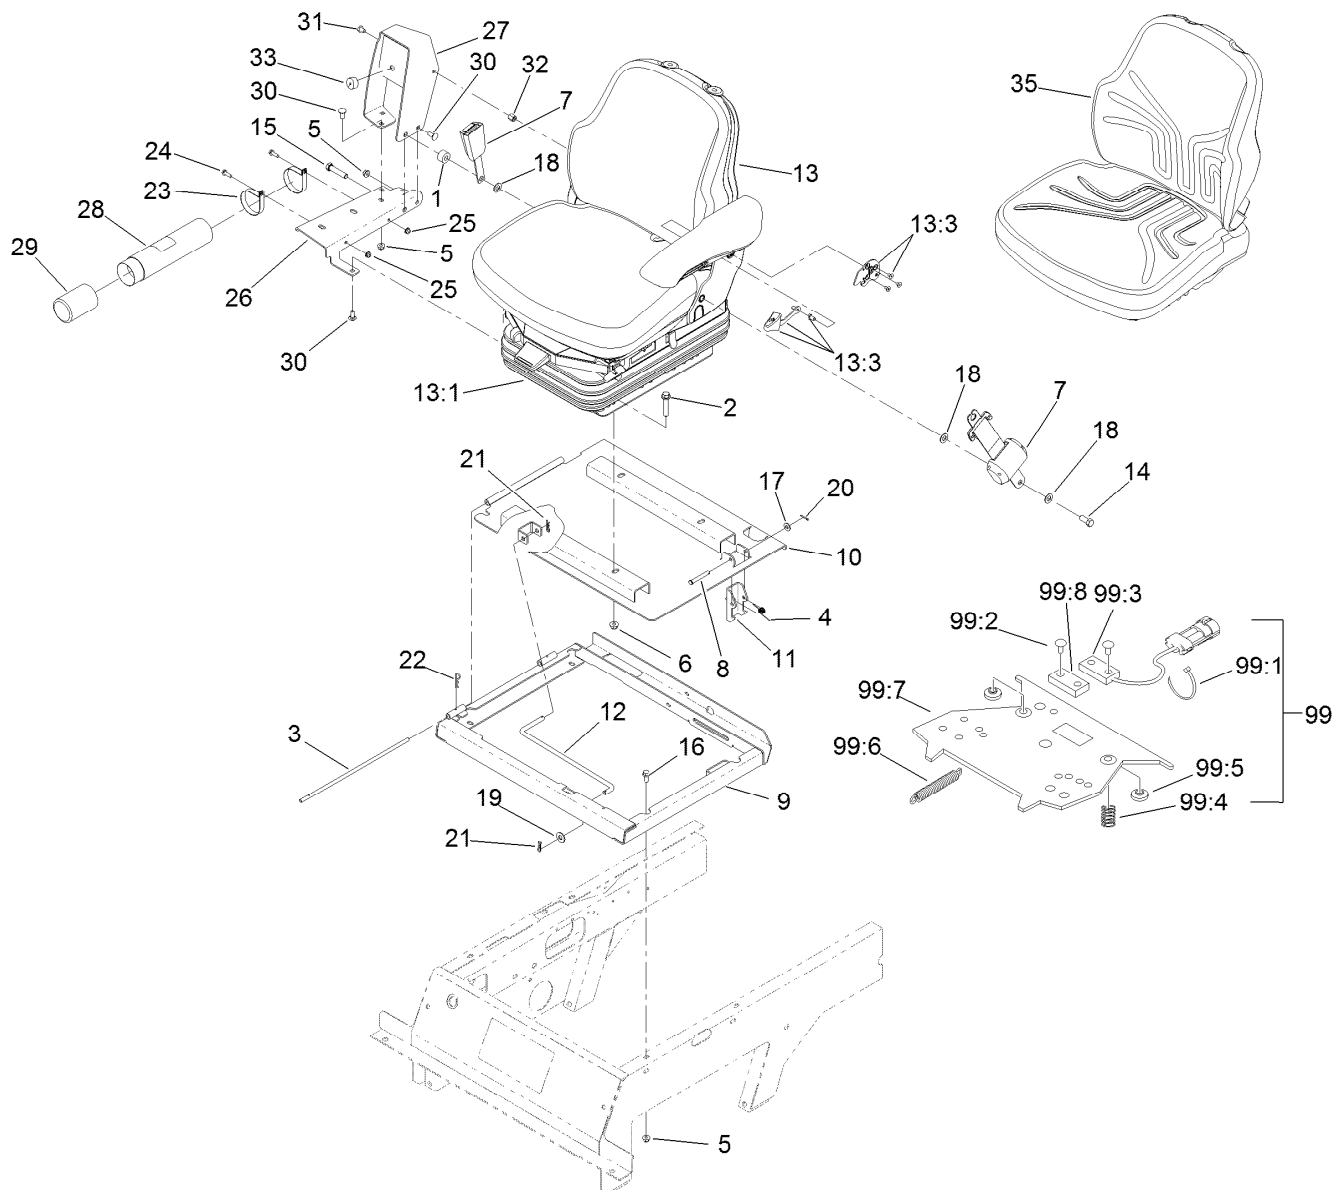 


Seat Mount Assembly

Ref.	Part Number	Qty.	Description
1	17-7190	1	Spacer-Finger
2	66-9302	4	Screw-HHF Lock
3	75-3400	1	Shaft-Pivot, Seat
4	104-4821	1	Spring-Torsion
5	119-4041	8	Nut-HF
6	119-4042	4	Nut-HF, NI
7	110-0413	1	Seatbelt-Retractable
8	110-0618	1	Pin-Clevis
9	115-4400-03	1	Frame-Seat
10	115-4411-03	1	Plate-Seat
11	115-4423-03	1	Latch-Seat Plate
12	117-4797	2	Rod-Seat Frame
13	132-1302	1	Seat And Suspension ASM
13:1	130-2702	1	Air Ride Seat Suspension
13:3	132-1304	1	Backrest Adjustment Kit
14	3212-4	1	Screw-HH
15	3212-8	1	Screw-HH
16	3234-47	4	Screw-HHF

Ref.	Part Number	Qty.	Description
17	3256-2	1	Washer-Flat
18	3256-25	3	Washer-Flat
19	3256-4	2	Washer-Flat
20	3272-6	1	Pin-Cotter
21	3290-307	4	Pin-Cotter
22	3290-467	1	Pin-Hair
23	107-1865	2	R-Clamp
24	32105-15	2	Screw-HWH
25	104-7201	2	Nut-HF, NI
26	130-1657-03	1	Channel-Support
27	130-1650-03	1	Control Panel ASM
28	104-7050	1	Tube-Manual
29	104-7048	1	Cap-Housing
30	137-3061	4	Bolt-CARR
31	108-8646	1	Screw-HH, Lock
32	112-7405	1	Nut-Hex, Coupling
33	110-8911	1	Seal-Foam
35	117-5676	1	Premium Seat ASM

 
● Not serviced separately

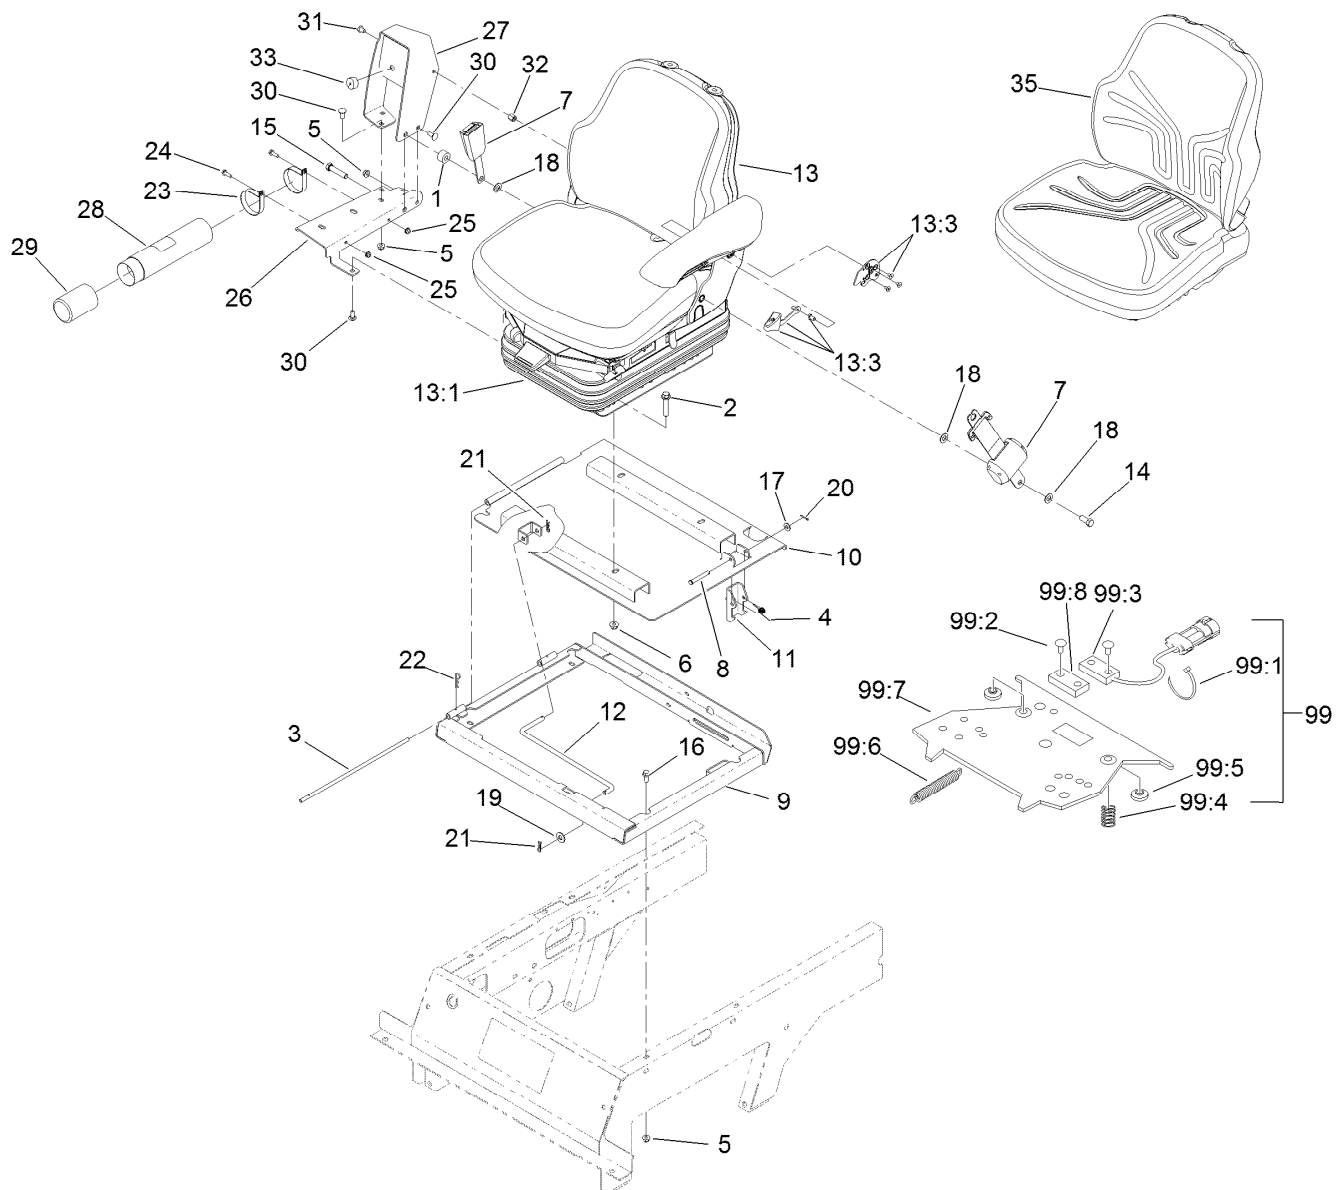

Seat Mount Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
99	108-8024	1	Switch Kit	99:5		2	Bumper-Pressure Plate ●
99:1		3	Wire Tie ●	99:6		1	Spring-Extension ●
99:2		4	Rivet ●	99:7		1	Plate-Mounting ●
99:3		1	Sensor-Seat Switch ●	99:8		1	Magnet ●
99:4		2	Spring-Compression ●				

 ● Not serviced separately

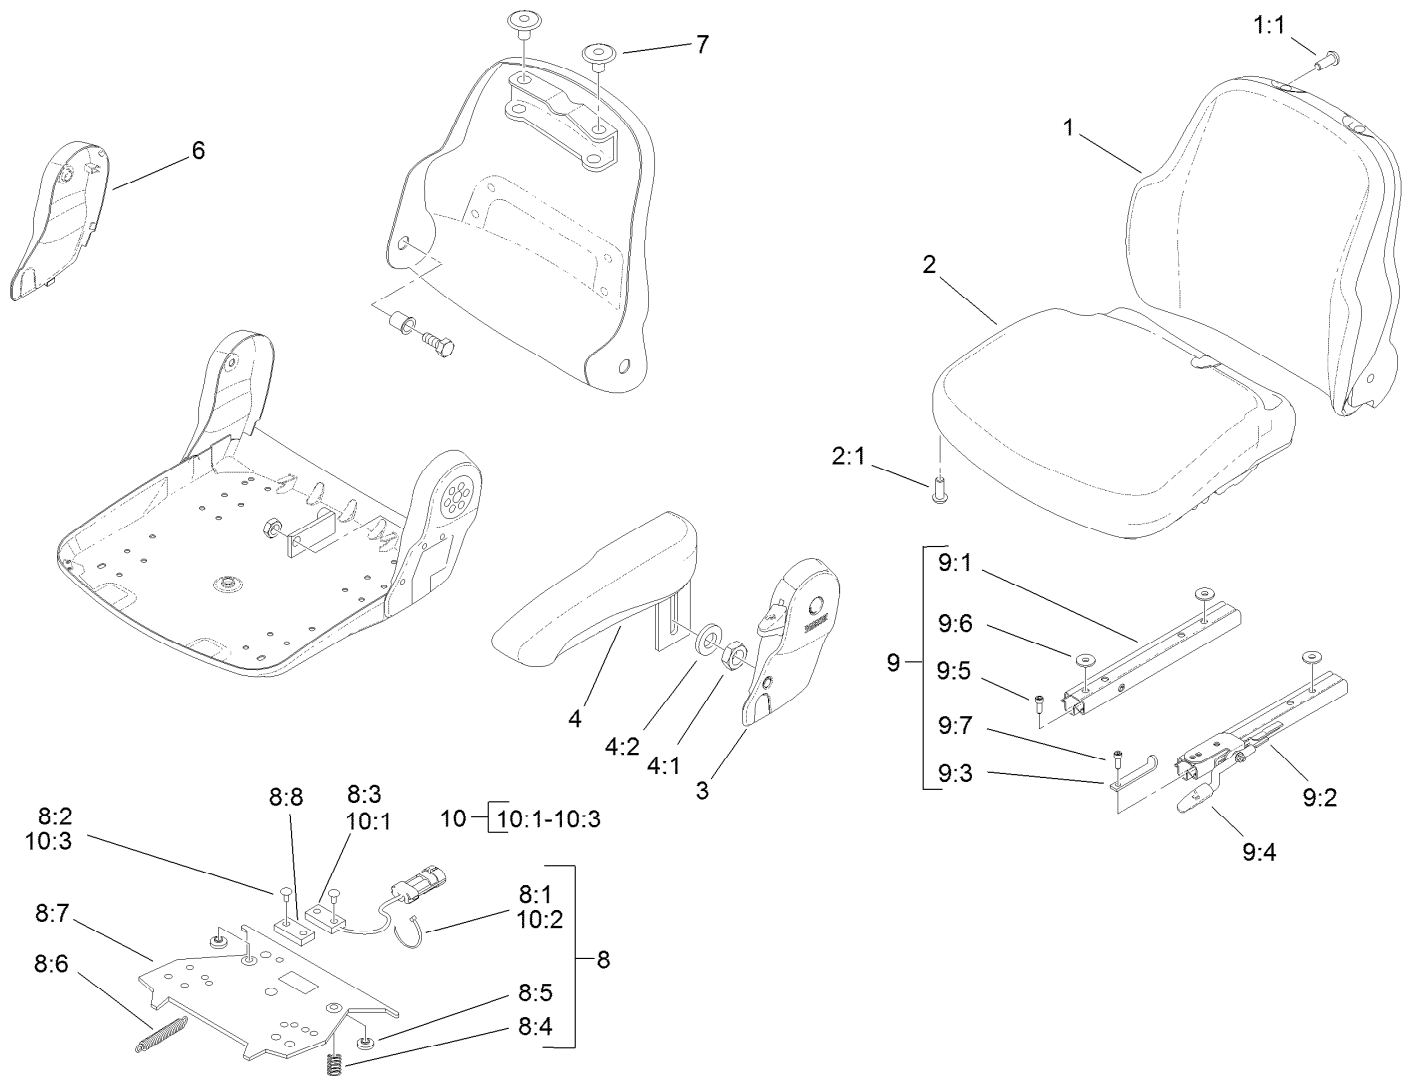


Vinyl Premium Seat Assembly No. 117-5676

Ref.	Part Number	Qty.	Description
1	108-8016	1	Backrest Cushion ASM
1:1	119-7742	4	Screw-Cushion
2	108-8017	1	Seat Cushion ASM
2:1	119-7742	3	Screw-Cushion
3	108-8018	1	Cover-Armrest
4	108-8019	1	LH Armrest ASM
4:1	82-9650	1	Nut
4:2	107-1198	1	Washer
6	108-8021	1	Cover-Armrest
7	108-8022	2	Cover-Black
8	108-8024	1	Switch Kit
8:1		3	Wire Tie ●
8:2		4	Rivet ●
8:3		1	Sensor-Seat Switch ●
8:4		2	Spring-Compression ●
8:5		2	Bumper-Pressure Plate ●

Ref.	Part Number	Qty.	Description
8:6		1	Spring-Extension ●
8:7		1	Plate-Mounting ●
8:8		1	Magnet ●
9	108-8025	1	Adjustment Rail Set
9:1		1	Rail-Adjustment, RH ●
9:2		1	Rail-Adjustment, LH ●
9:3		1	Stop-Rail ●
9:4		1	Handle ●
9:5		3	Screw ●
9:6		3	Washer ●
9:7		1	Screw ●
10	110-6189	1	Switch Kit
10:1		1	Switch ●
10:2		3	Wire Tie ●
10:3		2	Rivet ●

● Not serviced separately

 
Air Ride Seat Suspension Assembly No. 130-2702

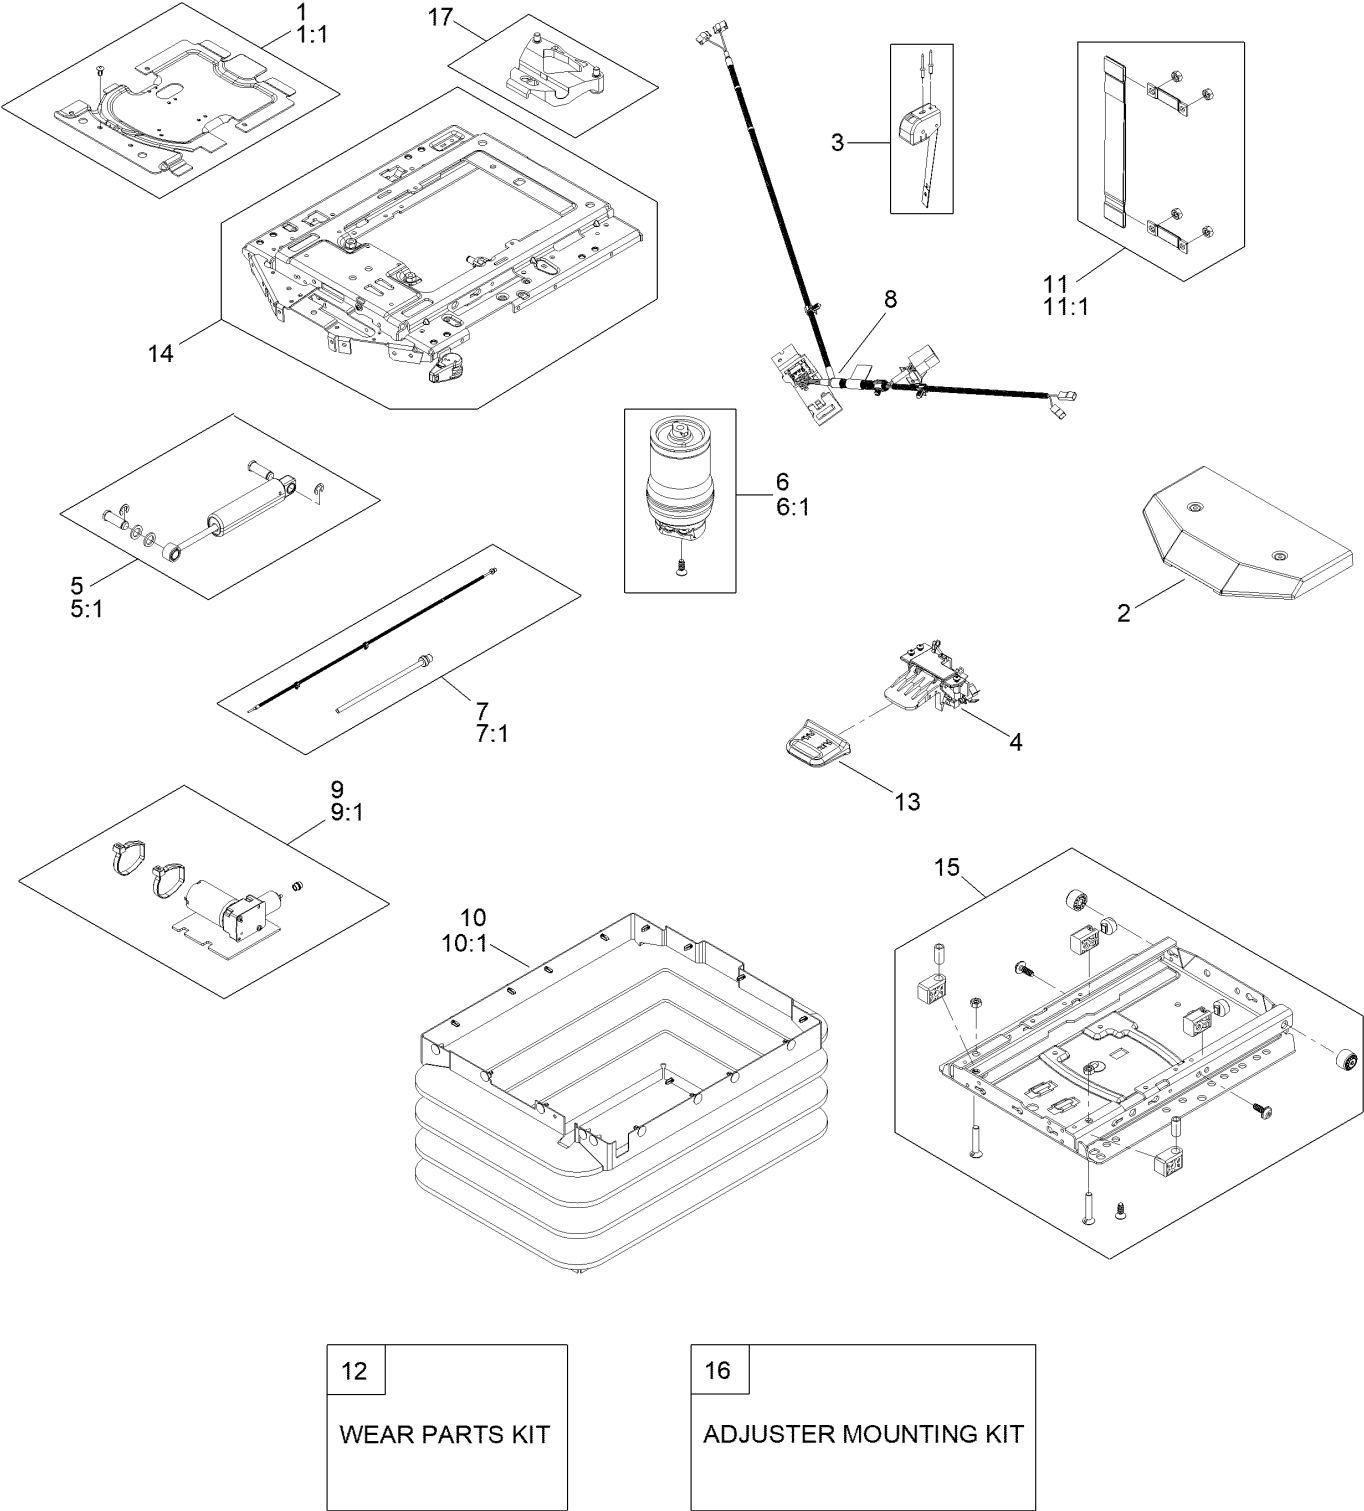

Air Ride Seat Suspension Assembly No. 130-2702 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-2709	1	Cover ASM	9	130-2719	1	Compressor
1:1	130-2710	1	Cover Kit	9:1	130-2720	1	Compressor Kit
2	108-8027	1	Cover	10	130-2721	1	Bellows ASM
3	130-2711	1	Control-Level	10:1	130-2722	1	Bellows Kit
4	108-8029	1	Valve-Control, Air	11	130-2723	1	Tether
5	130-2712	1	Shock Absorber ASM	11:1	130-2724	1	Tether Kit
5:1	130-2713	1	Shock Absorber Kit	12	130-2725	1	Wear Parts Kit ●
6	130-2714	1	Air Spring ASM	13	130-2726	1	Handle
6:1	130-2715	1	Air Spring Kit	14	130-2727	1	Upper Suspension Kit
7	130-2716	1	Air Tube ASM	15	130-2728	1	Lower Suspension Kit
7:1	130-2717	1	Air Tube Kit	16	130-2729	1	Adjuster Mounting Kit ●
8	147-1720	1	Wire Harness ASM	17	130-2730	1	Limiter-Thrust

 
● Not illustrated

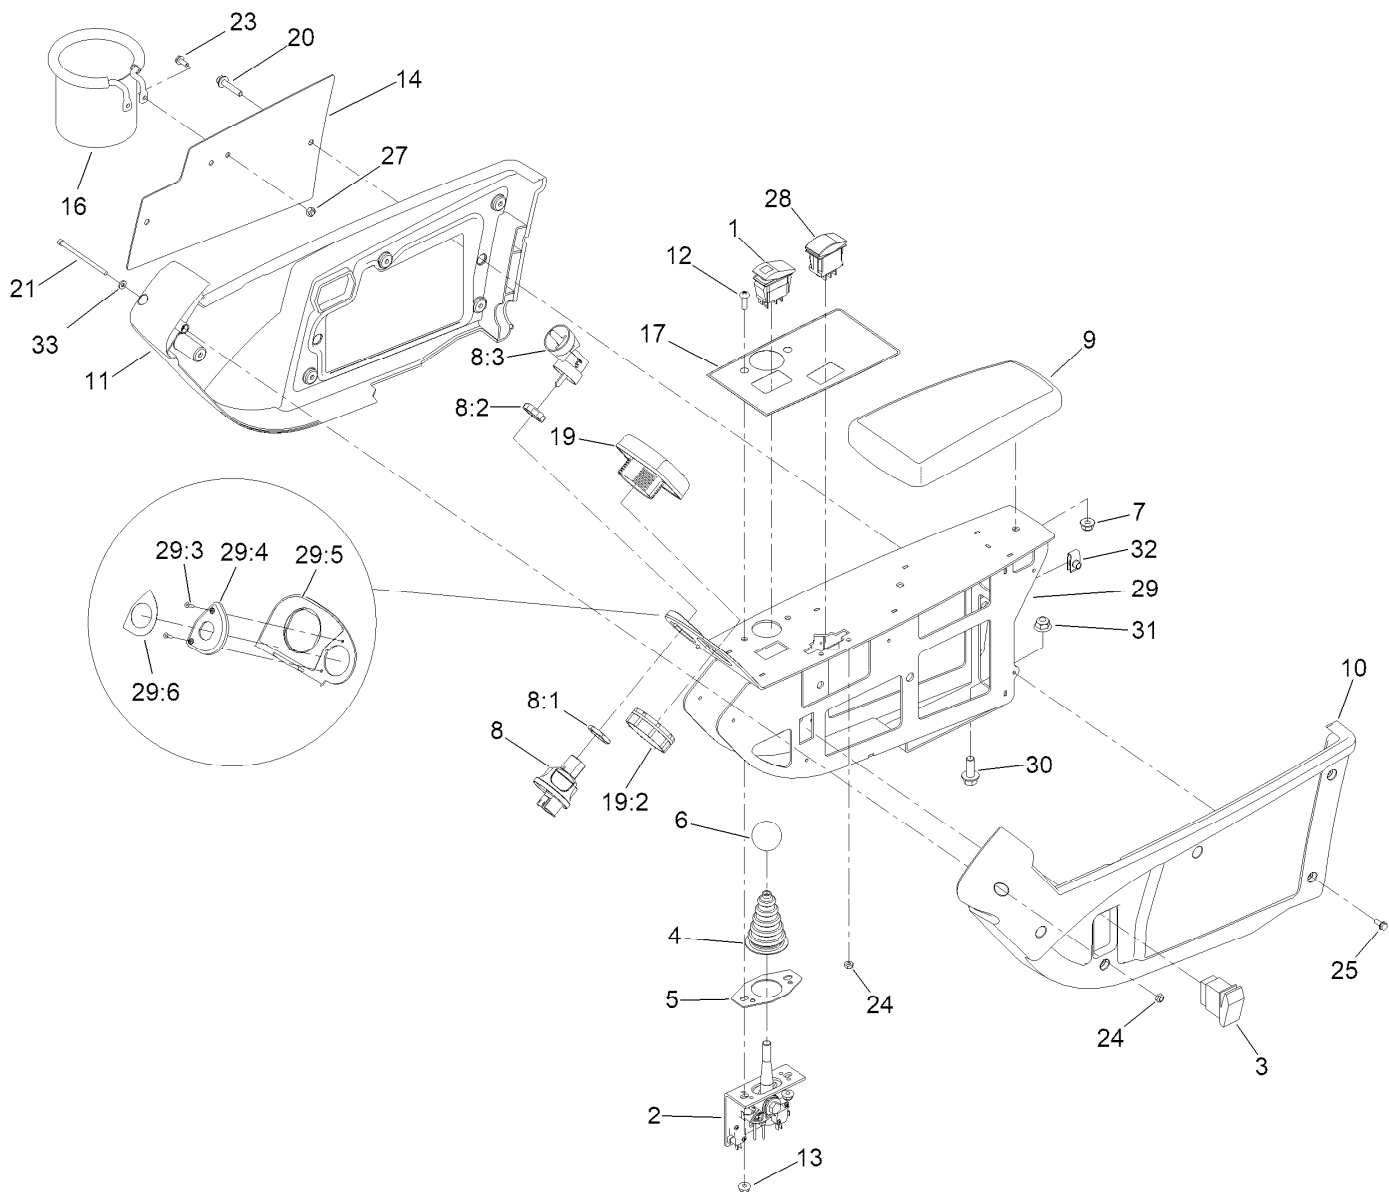

Control Console Assembly

Ref.	Part Number	Qty.	Description
1	105-4232	1	Switch
2	120-5280	1	Bracket-Joystick
3	95-8999	1	Switch-Rocker, On-None-On
4	93-5961	1	Boot-Lever
5	112-9181	1	Plate-Boot
6	233-42	1	Knob
7	119-4041	2	Nut-HF
8	161-4693	1	Switch-Ignition
8:1	121-5160	1	Nut-Hex
8:2	122-2704	1	Nut-Face, M22 (Plastic)
8:3	121-5162	1	Set-Key, Ignition
9	108-7602	1	Rest-Arm
10	108-7604	1	Cover-LH
11	108-7605	1	Cover-RH
12	3258-166	2	Screw-PRH
13	104-7201	2	Nut-HF, NI
14	115-8849-03	1	Plate-Cover
16	161-8355	1	Cup Holder ASM
17	125-8754	1	Decal-Panel, Control

Ref.	Part Number	Qty.	Description
19	161-1700	1	Display-LCD
19:2	161-1723	1	Nut-Display
20	3234-21	2	Screw-HHF
21	161-8374	1	Screw-HSH
23	3290-321	2	Screw-HWH
24	3296-12	1	Nut-Lock, NI
25	32144-112	10	Screw-HWH
27	3296-2	2	Nut-Lock, NI
28	100-1535	1	Switch-Rocker, (On)-Off-(On)
29	130-1612	1	Panel ASM
29:3	3269-17	2	Rivet-Pop
29:4	121-3889	1	Step-Elevated, Switch
29:5	121-3887	1	Decal-Console, Display
29:6	121-3884	1	Decal-Console, Upper
30	3234-42	2	Screw-HHF
31	119-4042	2	Nut-HF, NI
32	107069	2	Clip
33	3256-51	1	Washer-Flat

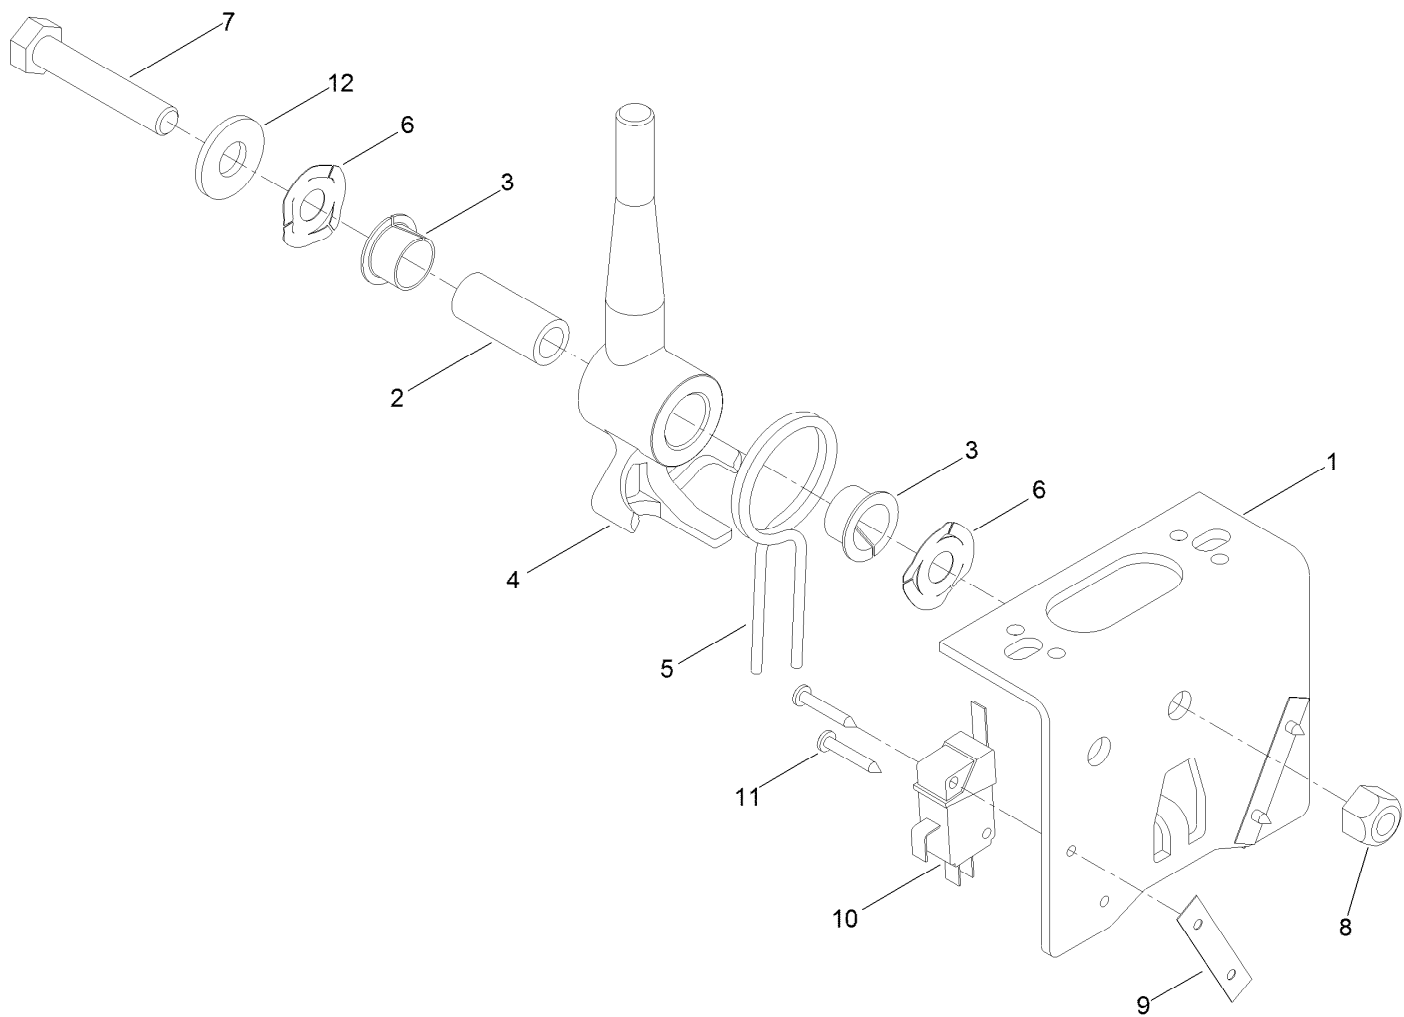 


Joystick Bracket Assembly No. 120-5280

Ref.	Part Number	Qty.	Description
1	115-5357-03	1	Bracket-Joystick
2	106-4192	1	Spacer
3	93-5547	2	Bushing-Nylon
4	119-3540	1	Hub-Pivot, Joystick
5	105-8289	1	Spring-Torsion
6	106-4193	2	Washer-Finger, Spring
7	322-9	1	Screw-HH
8	3296-29	1	Nut-Lock, NI
9	3290-354	2	Nut-Speed
10	108-6496	2	Switch (W/Boot)
11	95-3003	4	Screw-PPHTF
12	3256-3	1	Washer-Flat




Ref.	Part Number	Qty.	Description
21	136-2889	1	Pedal-Brake, RH
21:2	256-42	2	Bushing
21:3	302-5	1	Fitting-Grease
22	120-1691	1	Detent-Brake
23	256-236	2	Bearing-Mount, Flange
24	283-58	2	Pin-Clevis
25	322-3	3	Screw-HH
26	323-12	1	Screw-HH
27	340-2	5	Fitting-Straight
27:1	237-22	1	O-Ring
27:2	237-42	1	O-Ring
28	3229-34	1	Screw-CARR
29	3234-11	4	Screw-HHF
30	3234-13	2	Screw-HHF
31	3256-22	3	Washer-Flat
32	3256-27	1	Washer-Flat
33	3256-69	3	Washer-Flat
34	3272-10	2	Pin-Cotter
35	3272-5	3	Pin-Cotter
36	3274-7	4	Screw-HSH
37	3296-2	1	Nut-Lock, NI

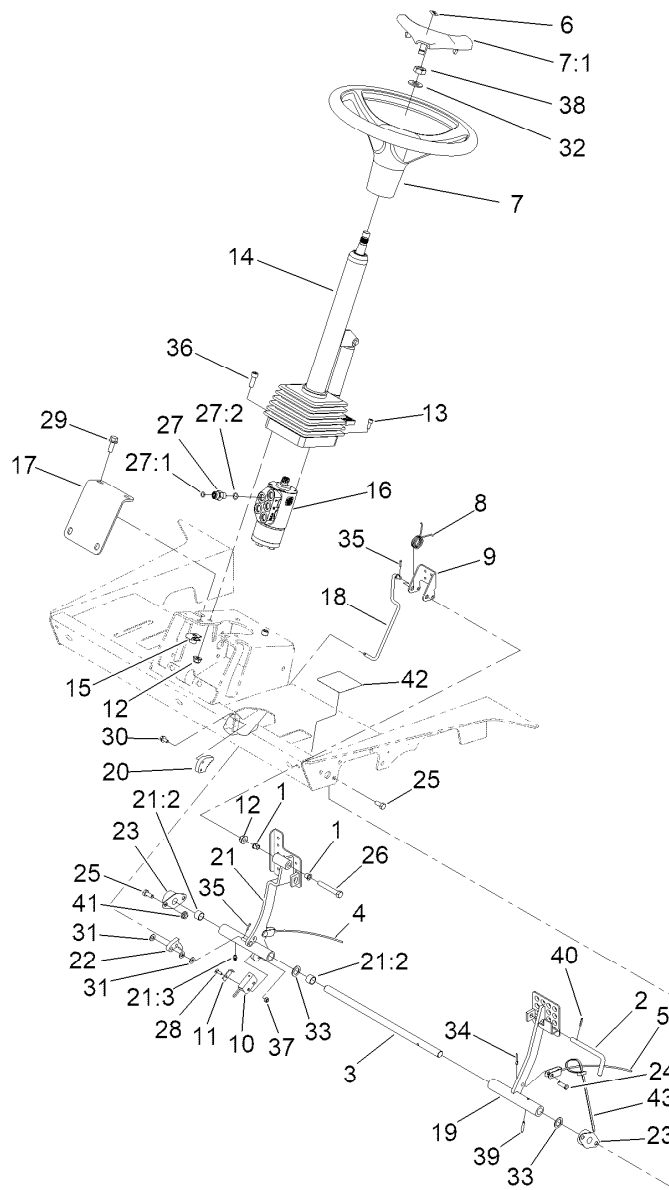 

Steering and Pedals Assembly (continued)

Ref.	Part Number	Qty.	Description
38	3296-33	1	Nut-Lock, NI
39	32121-16	1	Pin-Spring
40	32121-50	1	Pin-Spring


Ref.	Part Number	Qty.	Description
41	32128-20	3	Nut-HF
42	117-4763	1	Decal-Brake
43	3290-378	1	Tie-Cable

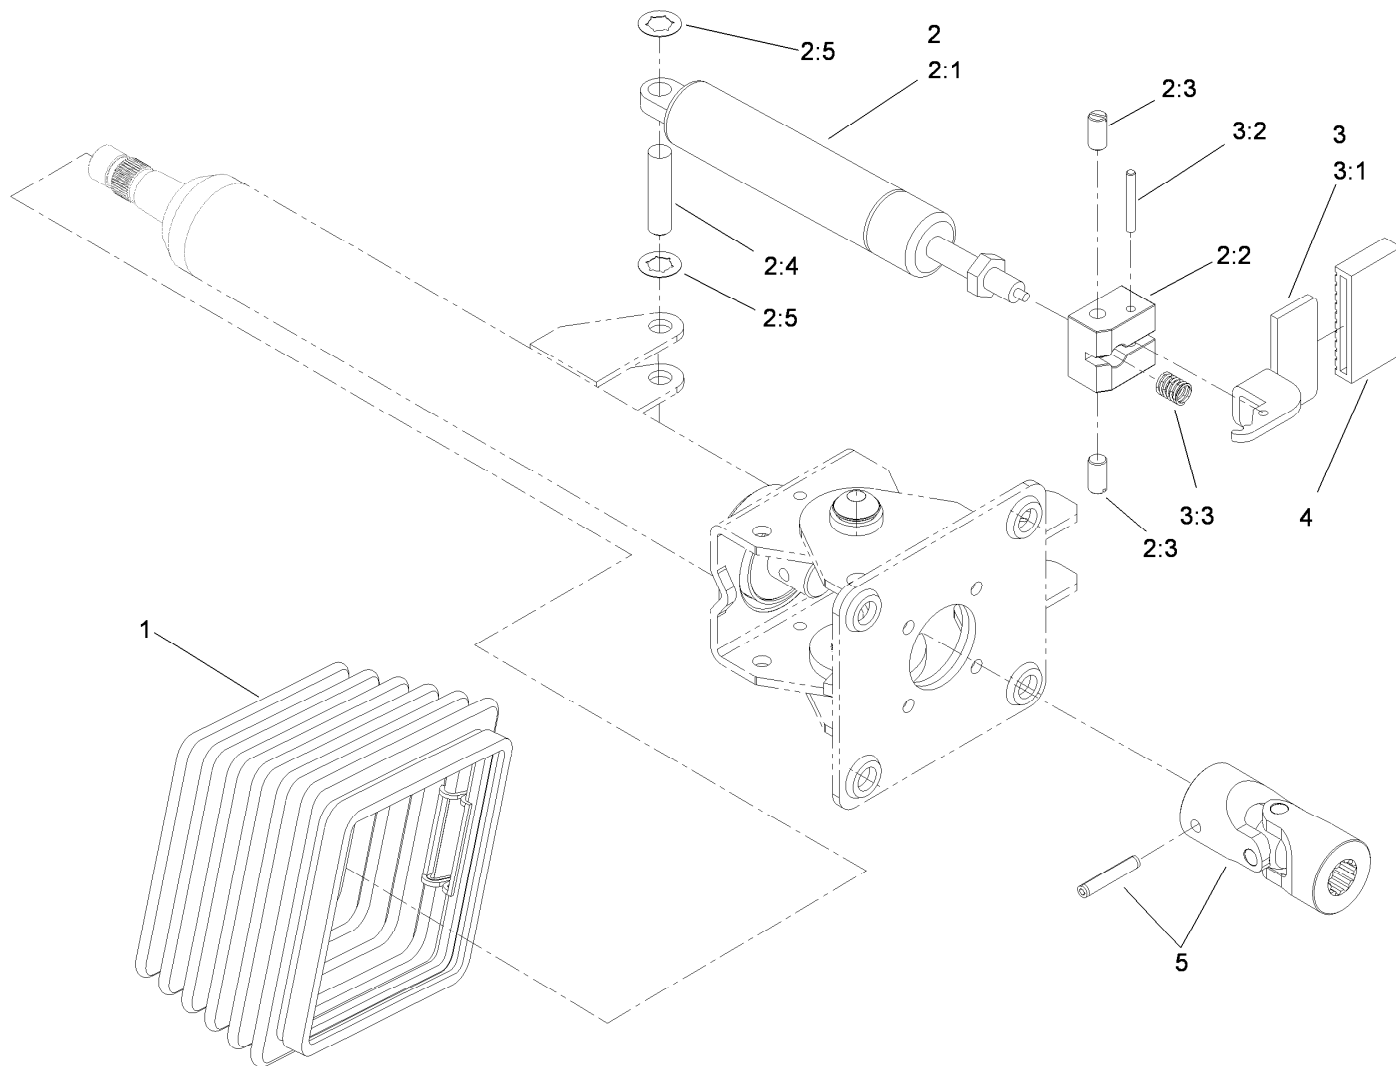 

Steering Tilt Column Assembly No. 106-3622


Ref.	Part Number	Qty.	Description
1	110-6462	1	Bellows-Rubber
2	110-6463	1	Cylinder Service Kit
2:1		1	Cylinder-Gas ●
2:2		1	Block-Pedal ●
2:3		2	Bolt ●
2:4		1	Pin ●
2:5		2	Washer-Lock ●
3	110-6464	1	Pedal Service Kit
3:1		1	Pedal ●
3:2		1	Pin ●
3:3		1	Spring ●
4	110-6465	1	Cover-Pedal
5	120-6256	1	Universal Joint Kit

 ● Not serviced separately

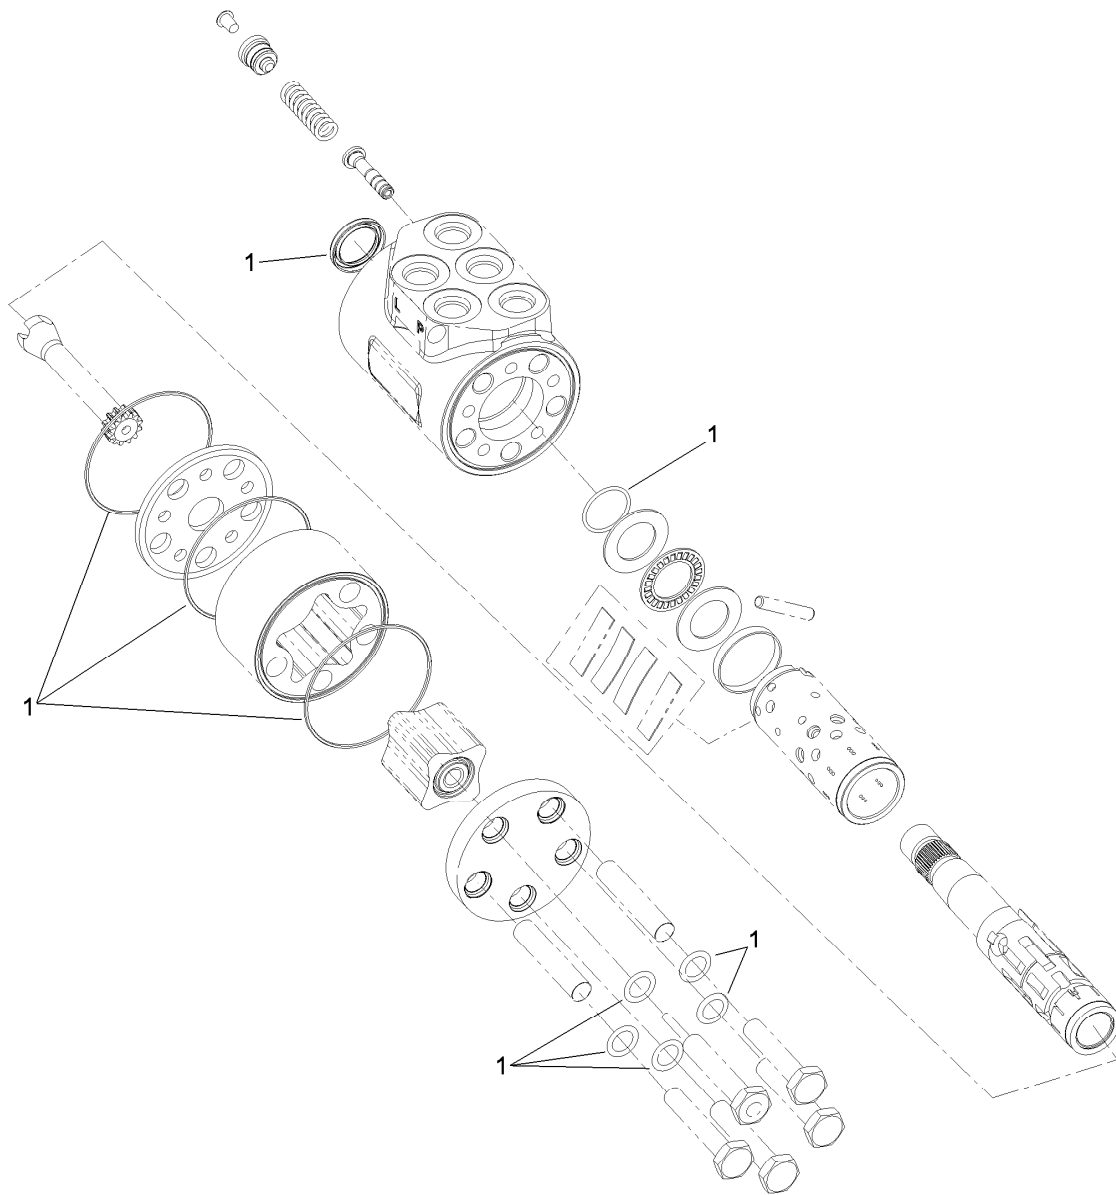

Steering Valve Assembly No. 114-8119


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	106-6716	1	Seal Kit

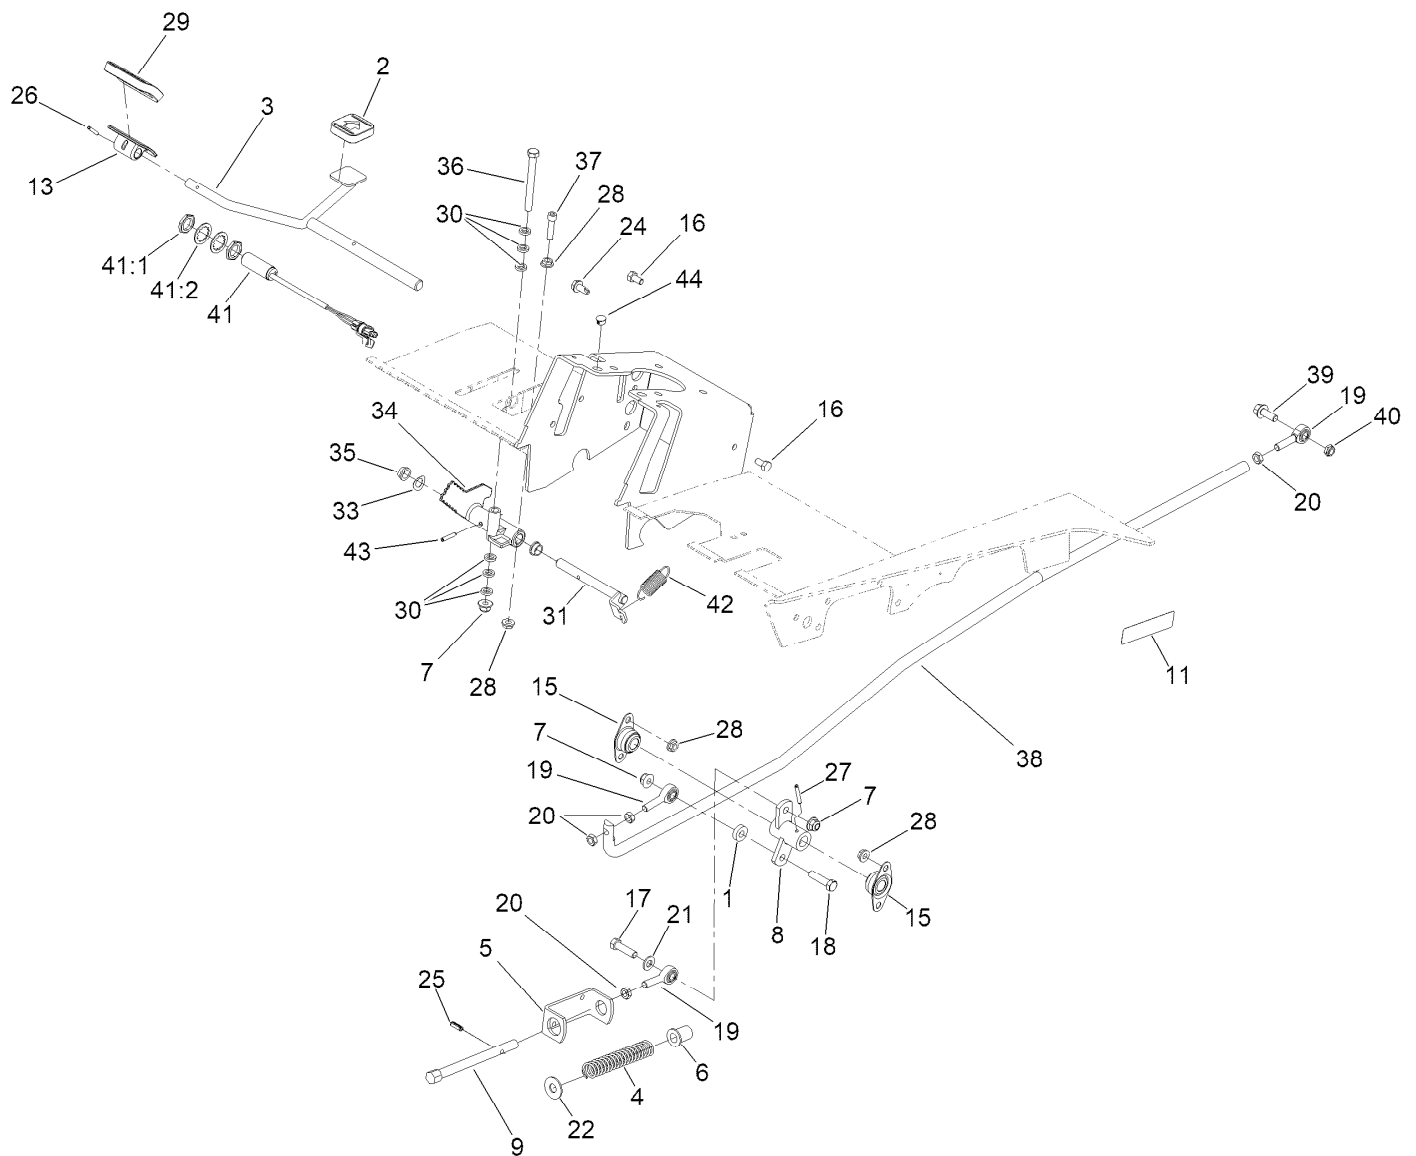 

Forward/Reverse Pedal Assembly

Ref.	Part Number	Qty.	Description
1	5-0652	1	Spacer
2	74-9110	1	Pad-Pedal, Reverse
3	75-2970	1	Pedal-Traction
4	84-9100	1	Spring
5	92-7608-03	1	Bracket-Spring
6	92-7610	1	Retainer-Spring
7	119-4042	3	Nut-HF, NI
8	115-4380-0P	1	Pivot ASM-Traction Hub
9	115-4383	1	Shaft-Spring
11	133-8062	1	Decal-Spark Arrestor
13	117-9507	1	Pedal-Accelerator
15	256-236	2	Bearing-Mount, Flange
16	322-2	4	Screw-HH
17	323-29	1	Screw-HH
18	323-8	1	Screw-HH
19	2411-36	3	Bearing-End, Rod
20	3220-3	4	Nut-HJ
21	3256-24	1	Washer-Plain
22	3256-5	1	Washer-Flat
24	32104-32	2	Screw-HWH
25	32121-11	1	Pin-Roll


Ref.	Part Number	Qty.	Description
26	32121-45	1	Pin-Spring
27	32121-6	1	Pin-Roll, Slotted
28	32128-20	6	Nut-HF
29	74-9100	1	Pad-Pedal, Forward
30	104662	6	Spacer
31	106-3731	1	Rod-Pivot
33	110-8982	1	Washer-Spring
34	145-5294	1	Stop-Mow
35	256-156	2	Bushing-Flange
36	323-15	1	Screw-HH
37	3274-18	1	Screw-HSH
38	130-1634-0P	1	Rod-Traction
39	3234-11	1	Screw-HHF
40	3296-59	1	Nut-Lock, NI
41	115-5300	1	Proximity Sensor ASM
41:1	117-3207	2	Nut-Hex
41:2	117-3208	2	Washer-Lock, Internal Tooth
42	92-7305	1	Spring-Extension
43	32121-16	1	Pin-Spring
44	121-3099	1	Plug-Dome, Thick

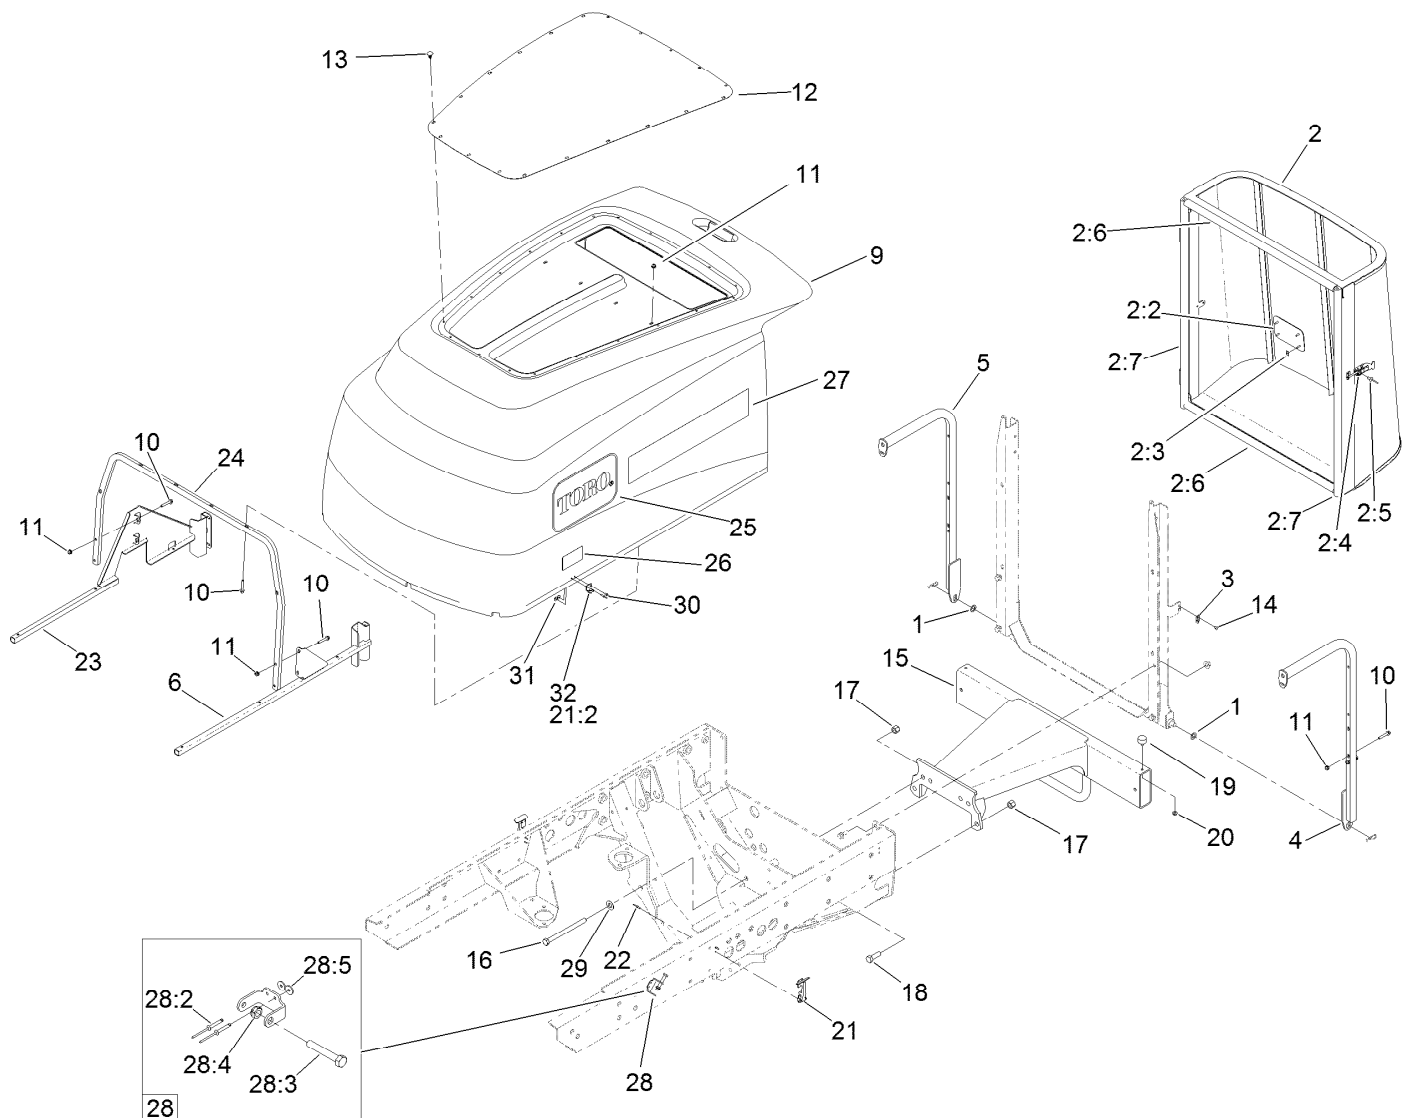 

Hood Assembly

Ref.	Part Number	Qty.	Description
1	98-1629	2	Washer
2	115-4362	1	Screen ASM
2:2	93-6028	1	Plate-Logo
2:3	138-6996	4	Nut-Push
2:4	114-8117	1	Latch-Adjustable
2:5	3269-3	2	Rivet-Pop
2:6	115-4358	2	Seal-Bulb
2:7	115-4359	2	Seal-Bulb
3	115-4357	1	Latch-Keeper
4	114-8109-03	1	Tube-LH
5	114-8108-03	1	Tube-RH
6	114-8102-0P	1	Tube ASM
9	121-3108	1	Hood ASM
10	94-5781	26	Screw-HHF
11	104-7201	26	Nut-HF, NI
12	114-4192-03	1	Screen-Hood
13	117-2382	20	Plug-Plastic
14	3269-3	2	Rivet-Pop
15	120-8020-03	1	Bumper-Rear
16	325-23	2	Screw-HH
17	3296-23	4	Nut-Lock, NI


Ref.	Part Number	Qty.	Description
18	325-6	2	Screw-HH
19	240-14	2	Bumper-Rubber
20	32128-33	2	Nut-HF
21	59-9740	2	Flex Draw Latch ASM
21:2	249-40	1	Keeper
22	3290-55	4	Rivet-Pop
23	121-3136-0P	1	Tube ASM R.H. [primed]
24	121-3133-0P	1	Tube-Hood Frame
25	139-6028	2	Decal-Logo, Toro
26	106-6754	2	Decal-Danger
27	119-3942	2	Decal
28	119-2004	1	CE Latch Kit
28:2	107-0333	2	Rivet-Pop
28:3	322-10	1	Screw-HH
28:4	3296-47	1	Nut-Lock, NI
28:5	3269-10	2	Washer-Back
29	3256-26	2	Washer-Flat
30	3269-17	4	Rivet-Pop
31	3269-10	4	Washer-Back
32	249-40	2	Keeper

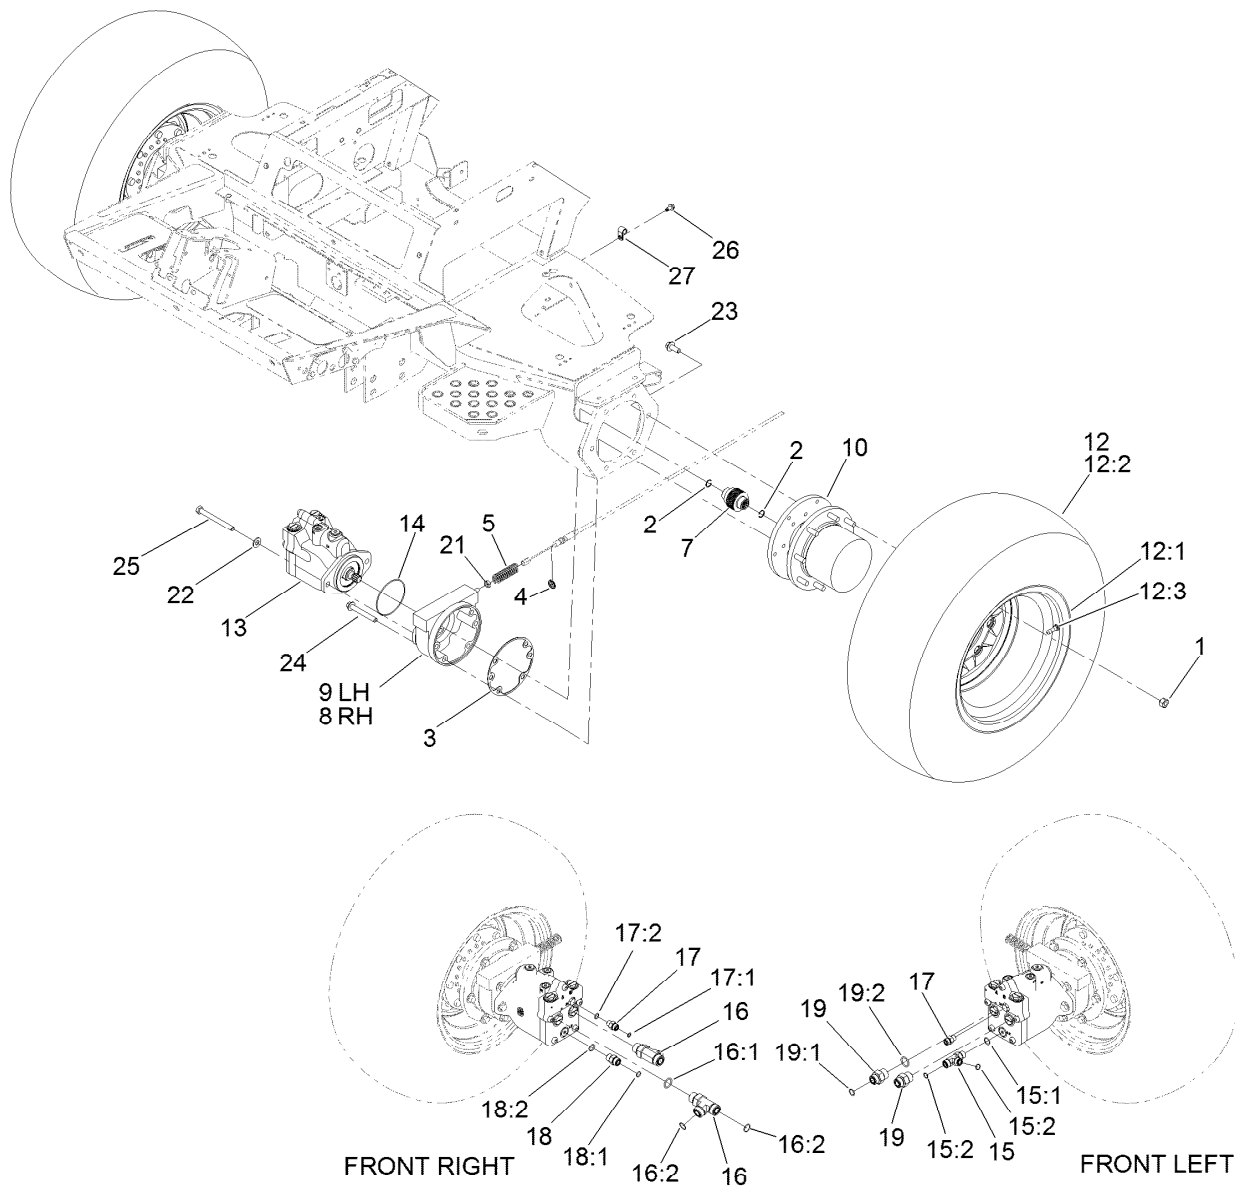 

Front Traction Assembly


Ref.	Part Number	Qty.	Description
1	92-7483	16	Nut-Lug
2	93-7972	4	Ring-Retaining, Internal
3	93-7984	2	Gasket
4	94-3050	2	Plate-Spring
5	94-3088	2	Spring-Compression
7	100-3046	2	Shaft-Brake, Splined
8	100-3069	1	RH Brake ASM
9	100-3070	1	LH Brake ASM
10	163-2646	2	Planetary ASM
12	136-3326	2	Tire & Wheel ASM
12:1	119-1540	1	Wheel-15 Inch
12:2	136-3327	1	Tire
12:3	232-24	1	Stem-Valve
13	121-3100	2	HYD Piston Motor ASM
14	237-166	2	O-Ring
15	340-109	1	Fitting-Tee
15:1	237-79	1	O-Ring
15:2	237-30	2	O-Ring
16	340-148	2	Fitting-Tee

Ref.	Part Number	Qty.	Description
16:1	237-81	1	O-Ring
16:2	237-58	2	O-Ring
17	340-2	2	Fitting-Straight
17:1	237-22	1	O-Ring
17:2	237-42	1	O-Ring
18	340-4	1	Fitting-Straight
18:1	237-30	1	O-Ring
18:2	237-79	1	O-Ring
19	340-8	2	Fitting-Straight
19:1	237-65	1	O-Ring
19:2	237-81	1	O-Ring
21	3218-4	2	Nut-Jam
22	106-9888	4	Washer-Flat
23	33106-030	12	Screw-HHF
24	33106-080	8	Screw-HHF
25	33116-110	4	Screw-HH
26	32104-32	2	Screw-HWH
27	2412-93	2	Clamp-R

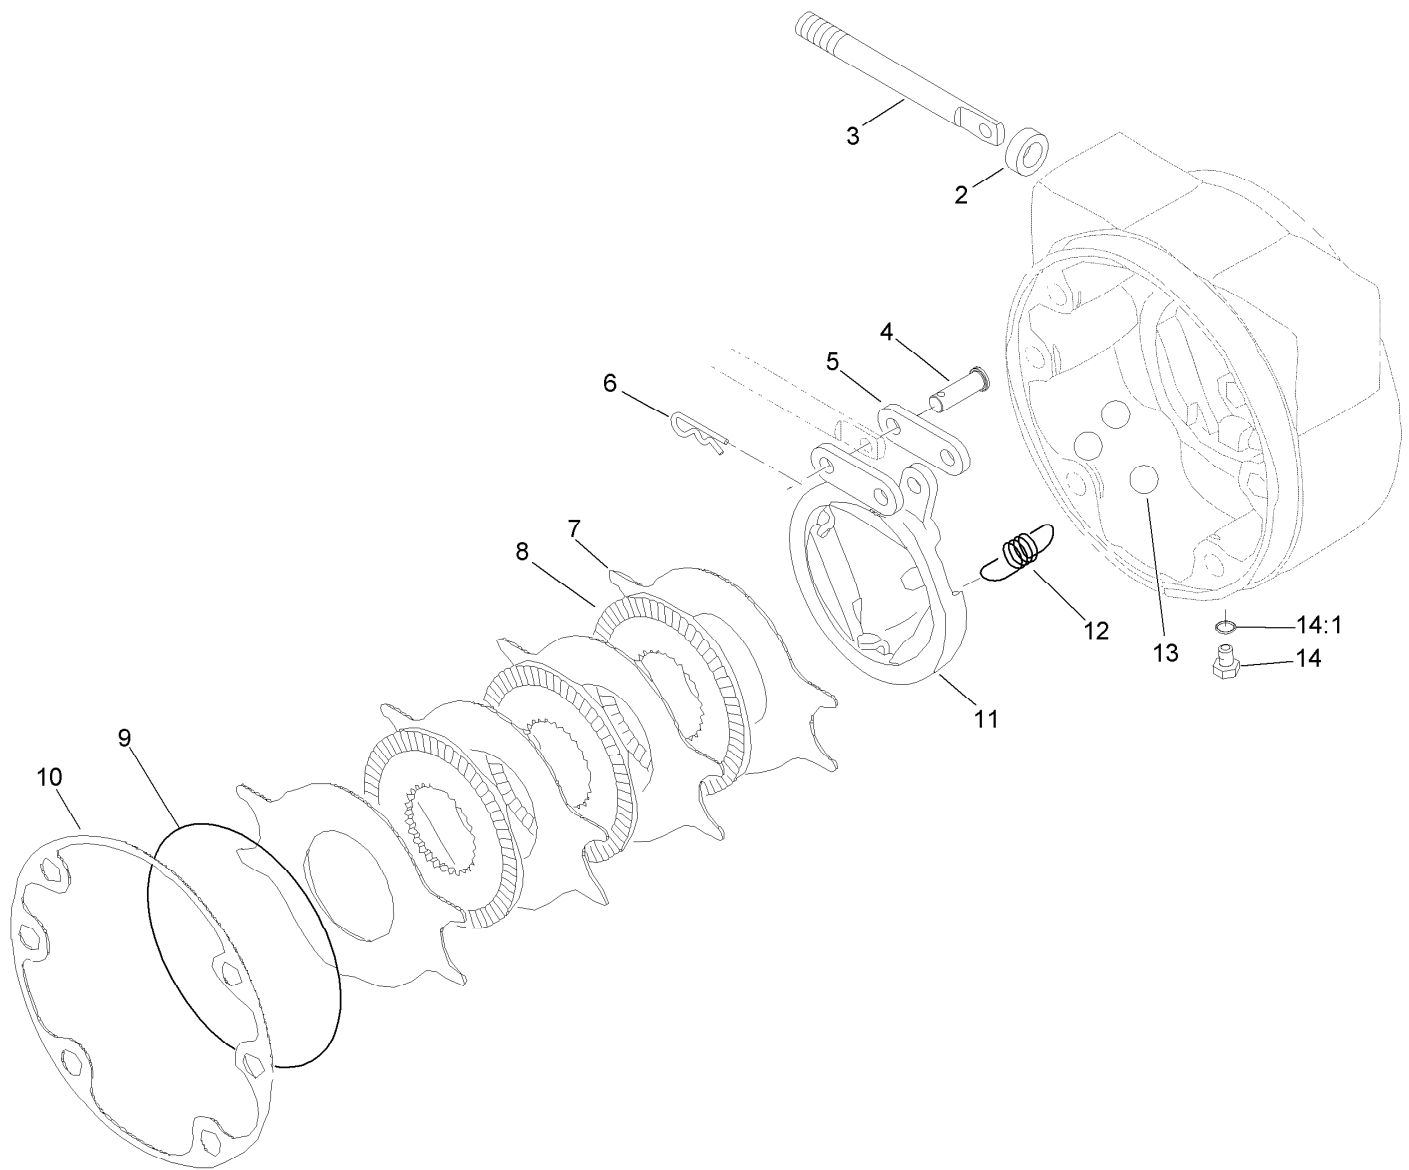 


RH Brake Assembly No. 100-3069

Ref.	Part Number	Qty.	Description
2	93-7977	1	Seal
3	93-7978	1	Rod-Pull
4	93-7983	2	Pin-Clevis
5	93-7980	2	Link
6	93-7979	2	Pin-Hitch
7	93-7986	4	Disc-Stationary
8	104-4278	3	Disc-Rotating
9	93-7976	1	Ring-Retaining
10	93-7984	1	Gasket
11	104-4280	1	Actuator-Rotating
12	93-7987	3	Spring-Extension
13	93-7985	3	Ball
14	353-990	2	Plug ASM
14:1	237-78	1	O-Ring

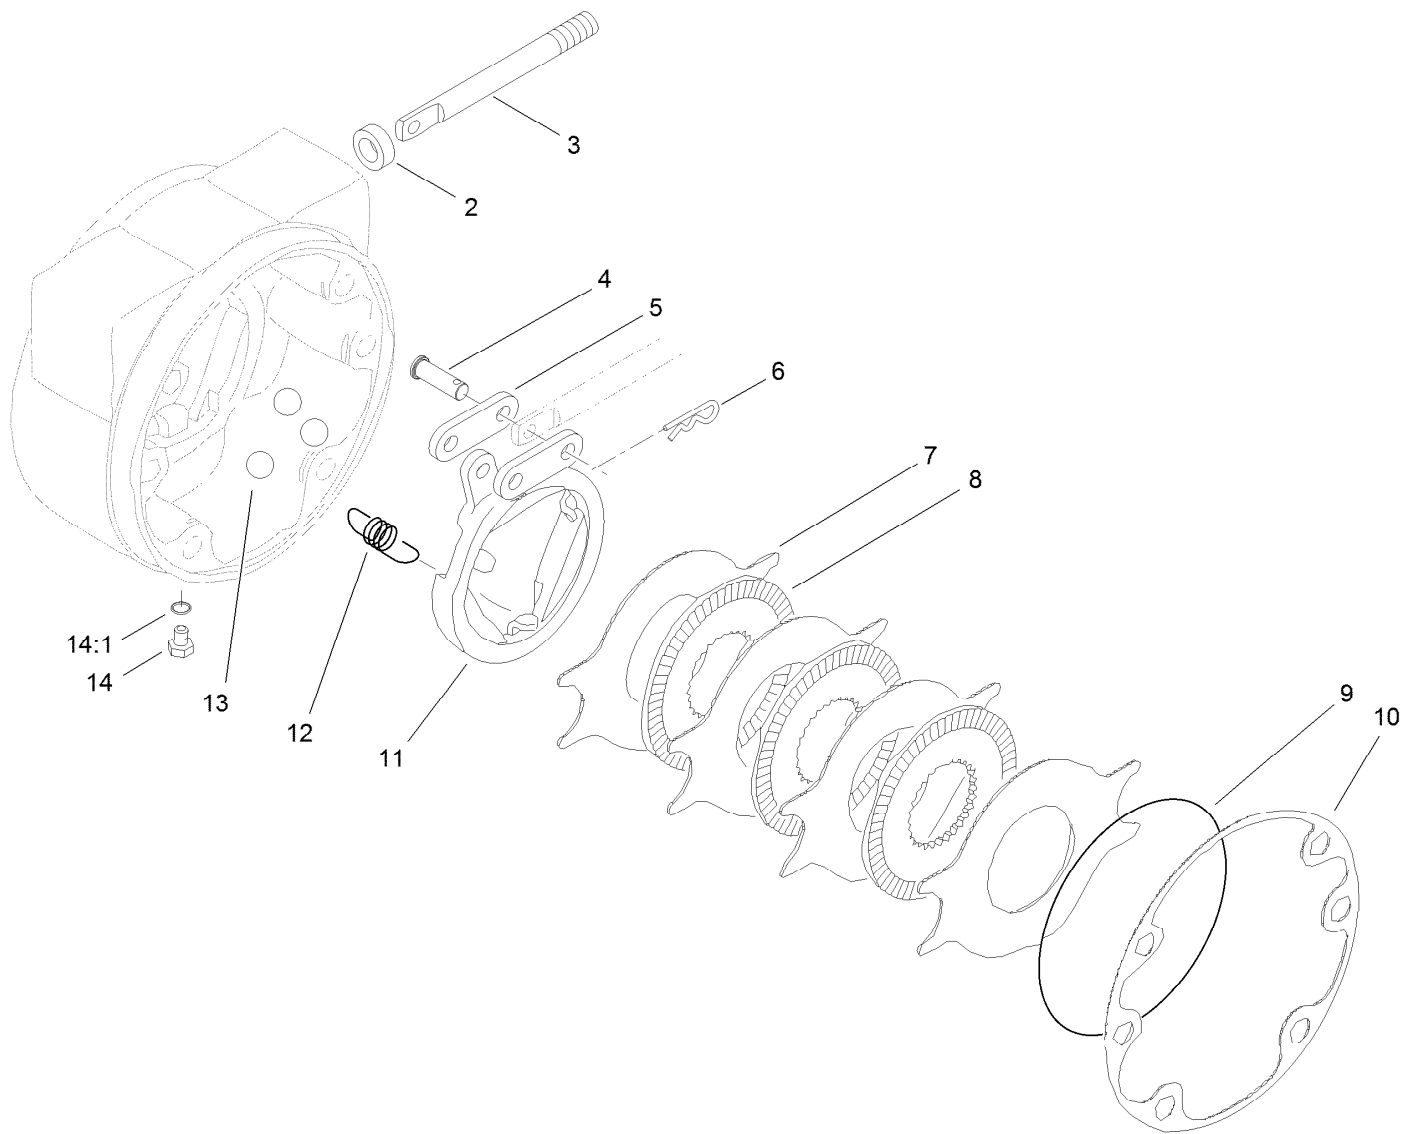 

LH Brake Assembly No. 100-3070


Ref.	Part Number	Qty.	Description
2	93-7977	1	Seal
3	93-7978	1	Rod-Pull
4	93-7983	2	Pin-Clevis
5	93-7980	2	Link
6	93-7979	2	Pin-Hitch
7	93-7986	4	Disc-Stationary
8	104-4278	3	Disc-Rotating
9	93-7976	1	Ring-Retaining
10	93-7984	1	Gasket
11	104-4279	1	Actuator-Rotating
12	93-7987	3	Spring-Extension
13	93-7985	3	Ball
14	353-990	2	Plug ASM
14:1	237-78	1	O-Ring

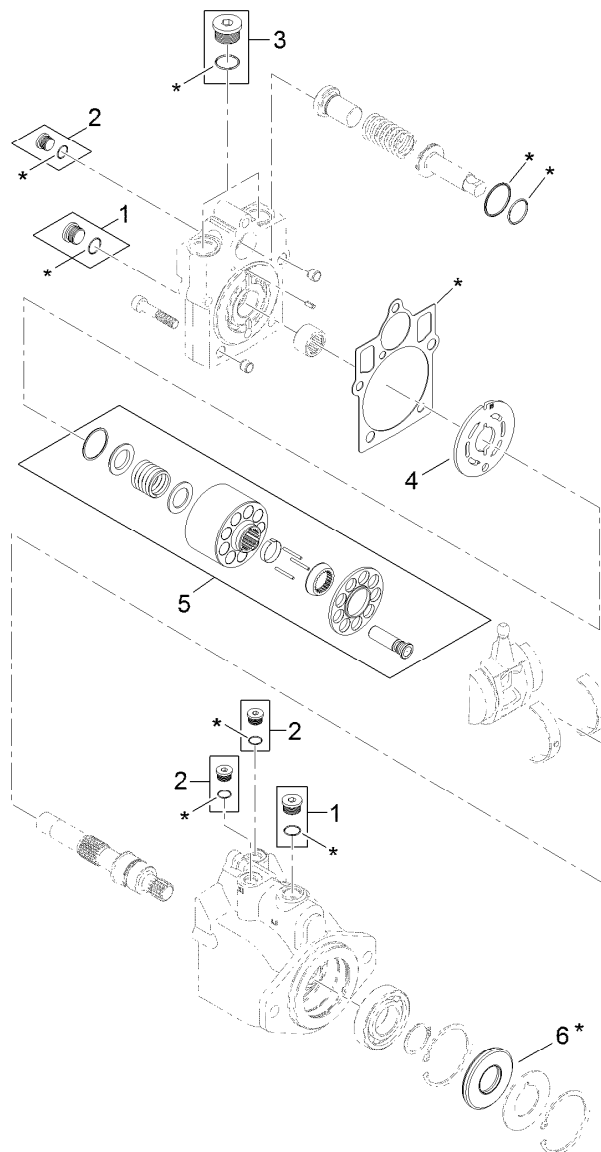 

7 = all items with * are included in overhaul seal kit

Hydraulic Piston Motor Assembly No. 121-3100

Ref.	Part Number	Qty.	Description
1	67-9090	2	Plug
2	69-3080	3	Plug
3	107-4352	1	Plug
4	121-1734	1	Plate-Valve
5	121-1735	1	Cylinder Block Kit
6	69-3190	1	Seal-Lip
7	121-1736	1	Overhaul Seal Kit

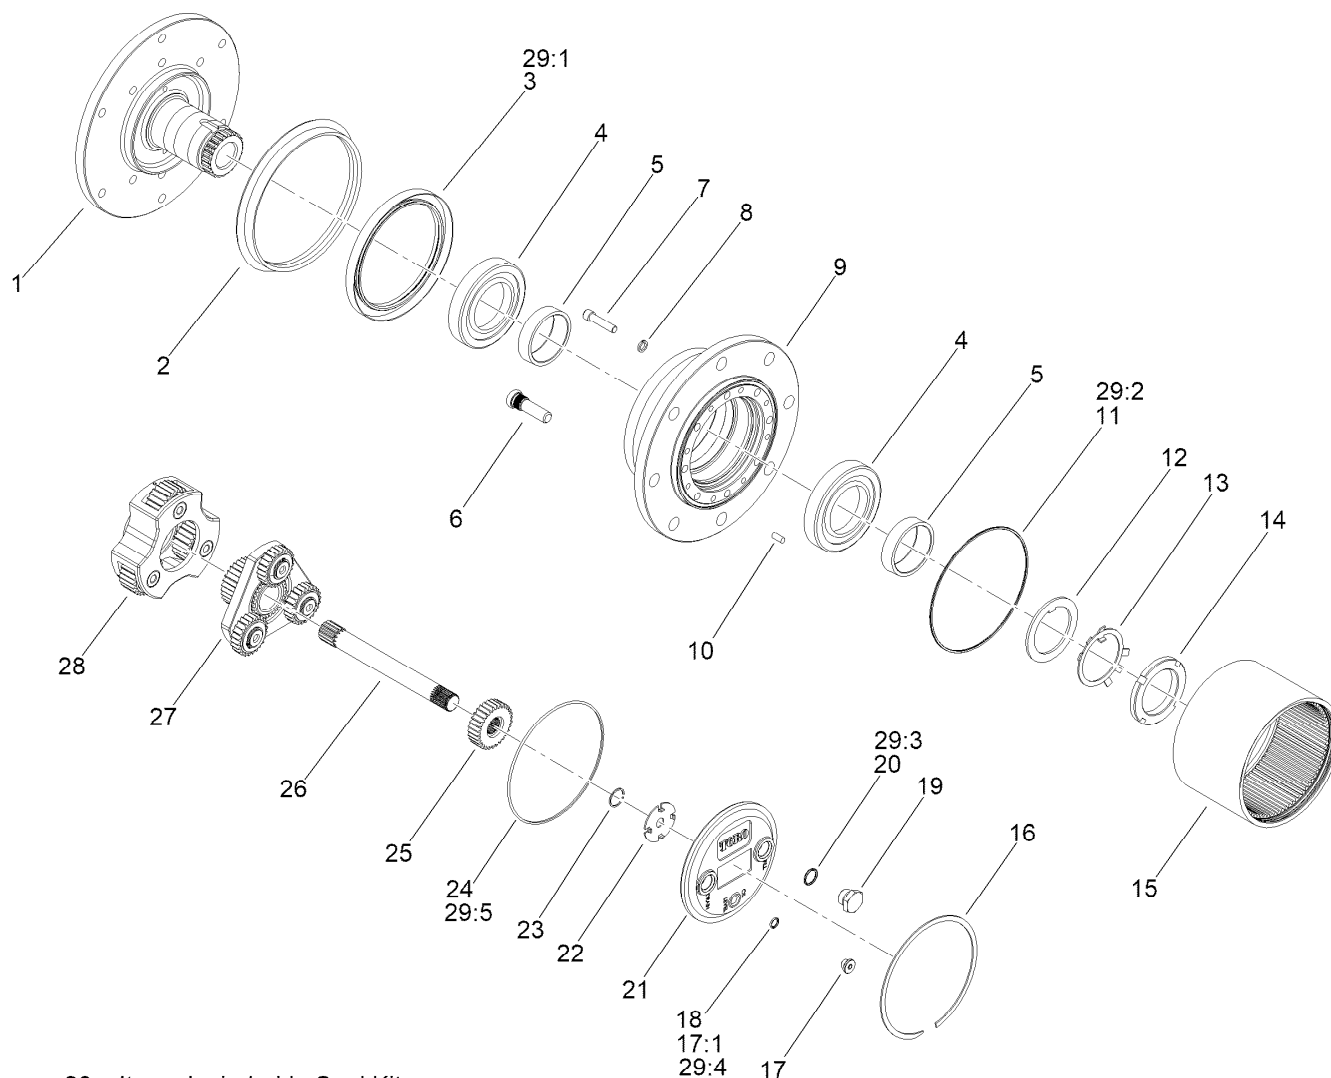 


29 = Items Included in Seal Kit

Planetary Assembly No. 163-2646

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1		1	Spindle ●	18	237-78	1	O-Ring
2	138-1204	1	Seal-Boot	19	138-1211	2	Plug-Flange, Magnetic
3		1	Seal-Lip ●	20	138-1212	2	O-Ring
4	138-1205	2	Bearing-Cup	21	138-1213	1	Cap-End
5	138-1206	2	Bearing-Cone	22	138-1214	1	Washer-Thrust, Sun
6	105-8124	8	Stud-Wheel	23	105-8131	2	Ring-Retaining
7	138-1207	8	Screw-Socket Head	24		1	O-Ring ●
8	138-1208	8	Washer-Lock	25	138-1215	1	Gear-Primary, Sun
9		1	Housing ●	26	138-1216	1	Shaft-Drive
10	105-8121	4	Pin-Dowel	27	138-1217	1	Primary Carrier ASM
11		1	O-Ring ●	28	138-1218	1	Secondary Carrier ASM
12	138-6928	1	Spacer	29	138-1219	1	Seal Kit
13	138-6929	1	Washer	29:1		1	Seal-Lip ●
14	138-6930	1	Nut-Lock	29:2		1	O-Ring ●
15	138-1209	1	Gear-Ring	29:3		1	O-Ring ●
16	138-1210	1	Ring-Snap	29:4		1	O-Ring ●
17	353-990	1	Plug ASM	29:5		1	O-Ring ●
17:1	237-78	1	O-Ring				

 
● Not serviced separately

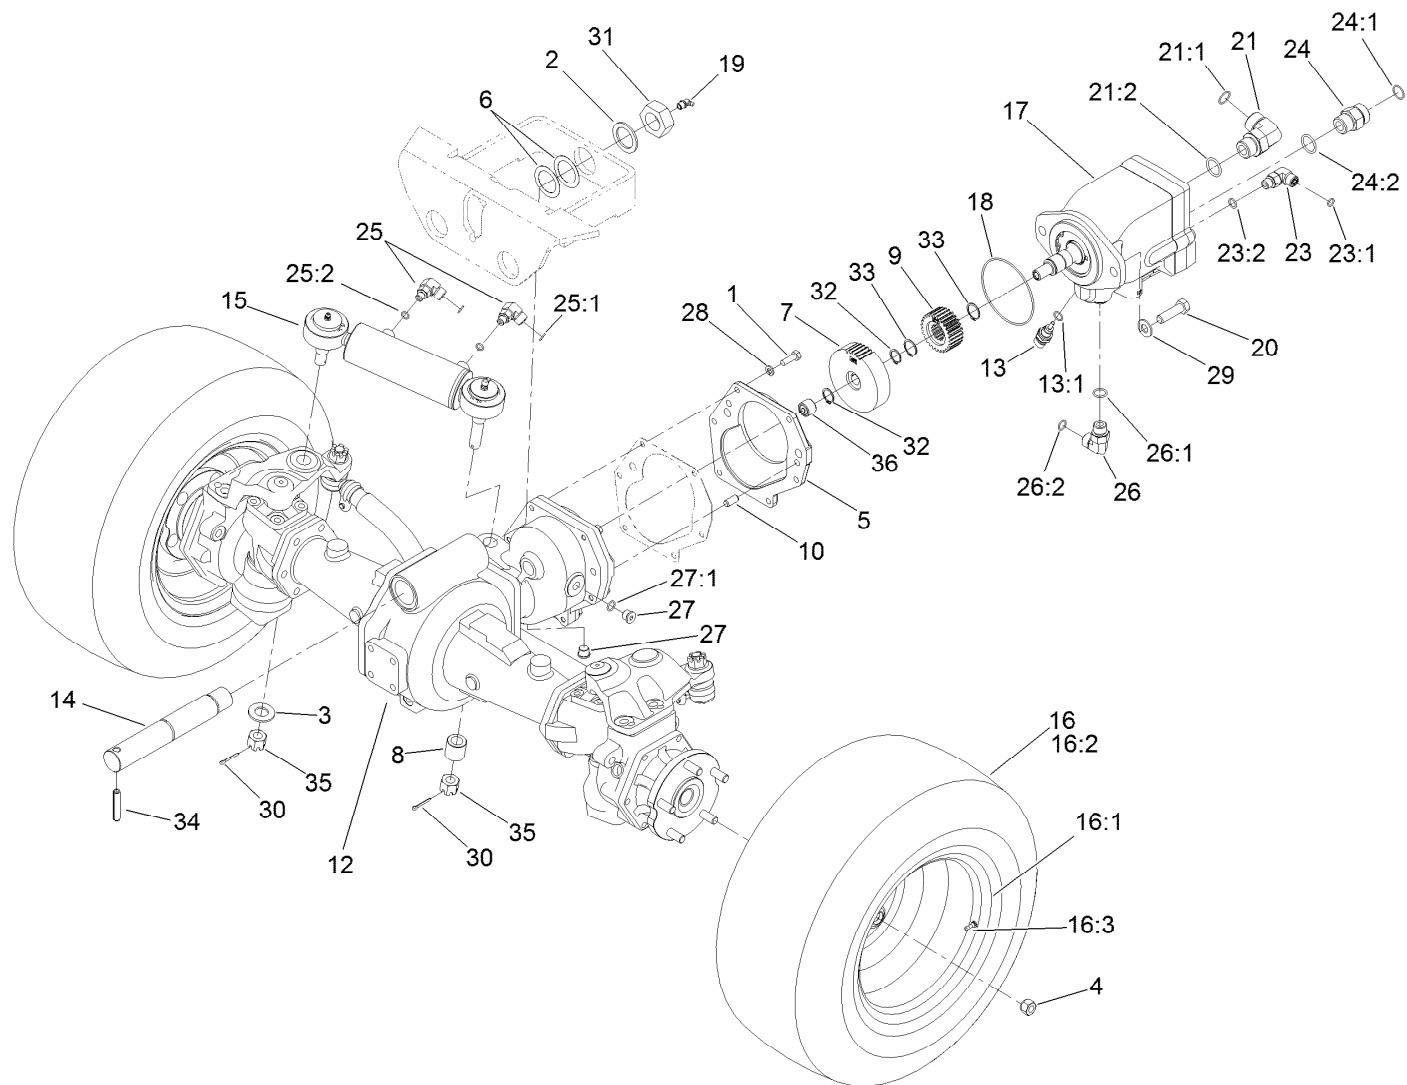

Rear Traction Assembly

Ref.	Part Number	Qty.	Description
1	33114-025	6	Screw-HH
2	92-1765	1	Washer-Thrust
3	92-5836	1	Washer
4	93-5268	10	Nut-Lug
5	95-7541	1	Plate-Cover
6	98-3867	2	Washer-Thrust
7	104-5664	1	Gear-44T
8	100-3796	1	Spacer-Joint, Ball
9	104-5663	1	Pinion-28T
10	104-2353	1	Pin-Dowel
12	110-4750	1	Drive Axle ASM
13	110-8829	1	Sender-Temperature
13:1	237-42	1	O-Ring
14	115-9142	1	Pin-Rear Axle
15	119-3903	1	Steer Cylinder ASM
16	120-1666	2	Tire ASM
16:1	115-1573	1	Rim
16:2	117-5125	1	Tire
16:3	232-27	1	Stem-Valve
17	121-3101	1	Motor-Piston
18	237-166	1	O-Ring


Ref.	Part Number	Qty.	Description
19	302-33	1	Fitting-Grease
20	325-7	2	Screw-HH
21	340-142	1	Fitting-Elbow, 90 DEG
21:1	237-58	1	O-Ring
21:2	237-81	1	O-Ring
23	340-77	1	Fitting-Elbow, 90 DEG
23:1	237-22	1	O-Ring
23:2	237-42	1	O-Ring
24	340-9	1	Fitting-STR
24:1	237-58	1	O-Ring
24:2	237-81	1	O-Ring
25	340-97	2	Fitting-Elbow, 90 DEG
25:1	237-22	1	O-Ring
25:2	237-78	1	O-Ring
26	340-98	1	Fitting-Elbow, 90 DEG
26:1	237-79	1	O-Ring
26:2	237-30	1	O-Ring
27	353-989	2	Plug-Hex, Hollow
27:1	237-42	1	O-Ring
28	3253-4	6	Washer-Lock
29	106-9888	2	Washer-Flat

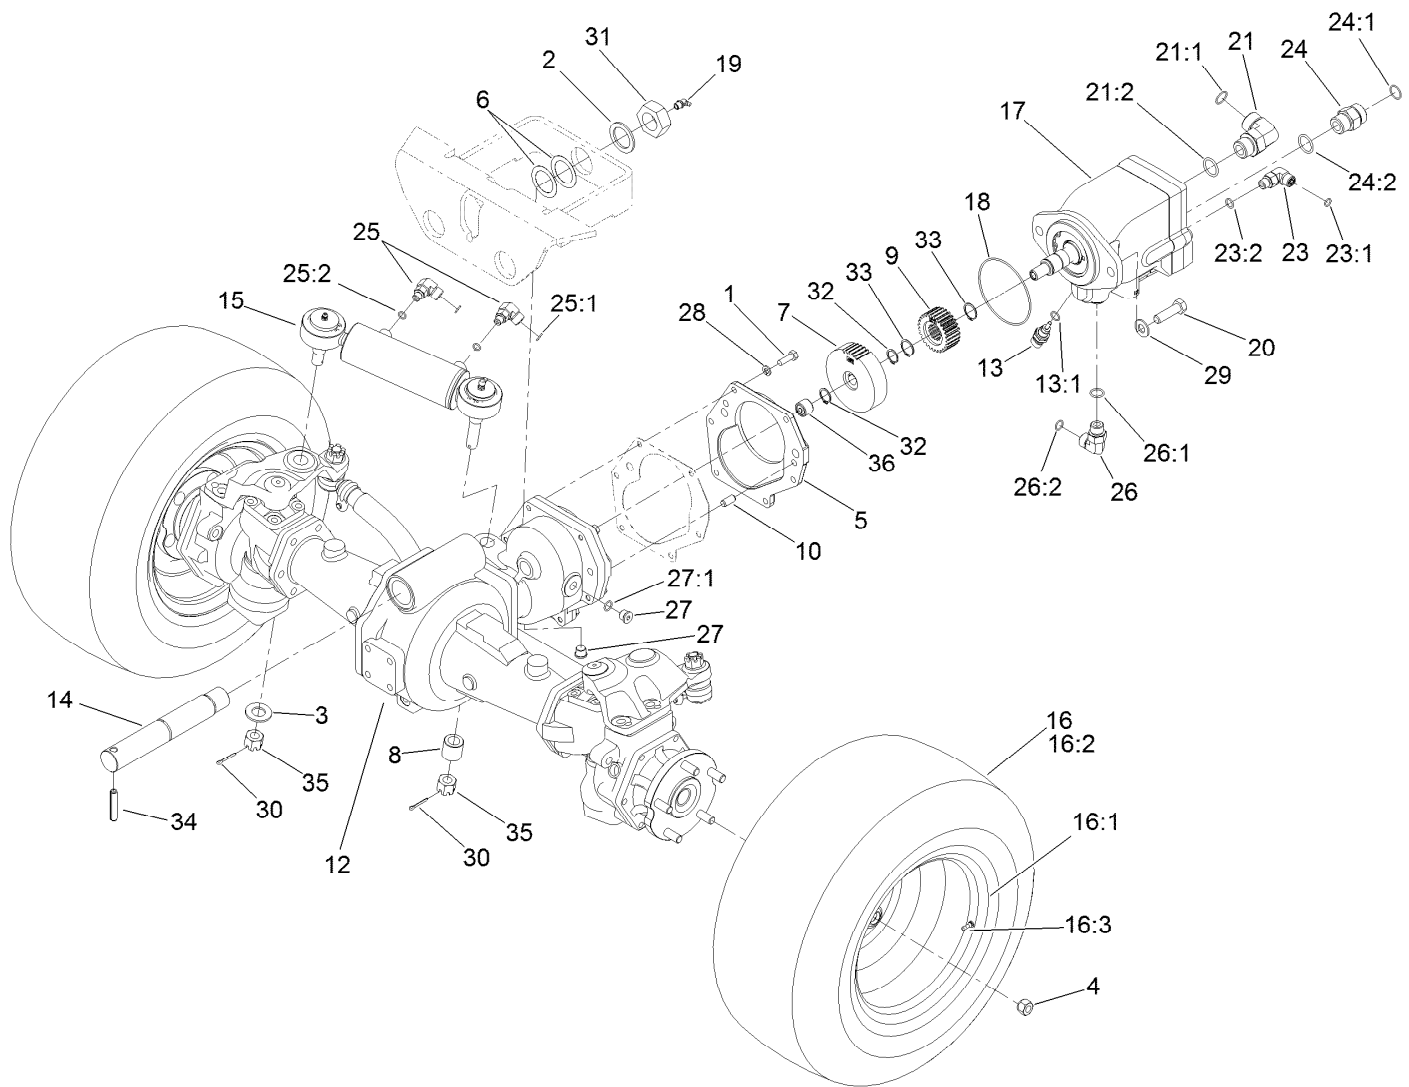 

Rear Traction Assembly (continued)

Ref.	Part Number	Qty.	Description
30	3272-12	2	Pin-Cotter
31	3296-68	1	Nut-Lock, NI
32	32120-15	2	Ring-Snap, EXT
33	32120-76	2	Ring-Snap, EXT


Ref.	Part Number	Qty.	Description
34	32121-110	1	Pin-Roll, Slotted
35	32136-14	2	Nut-Hst
36	74-5700	1	Bearing-Needle, Roller

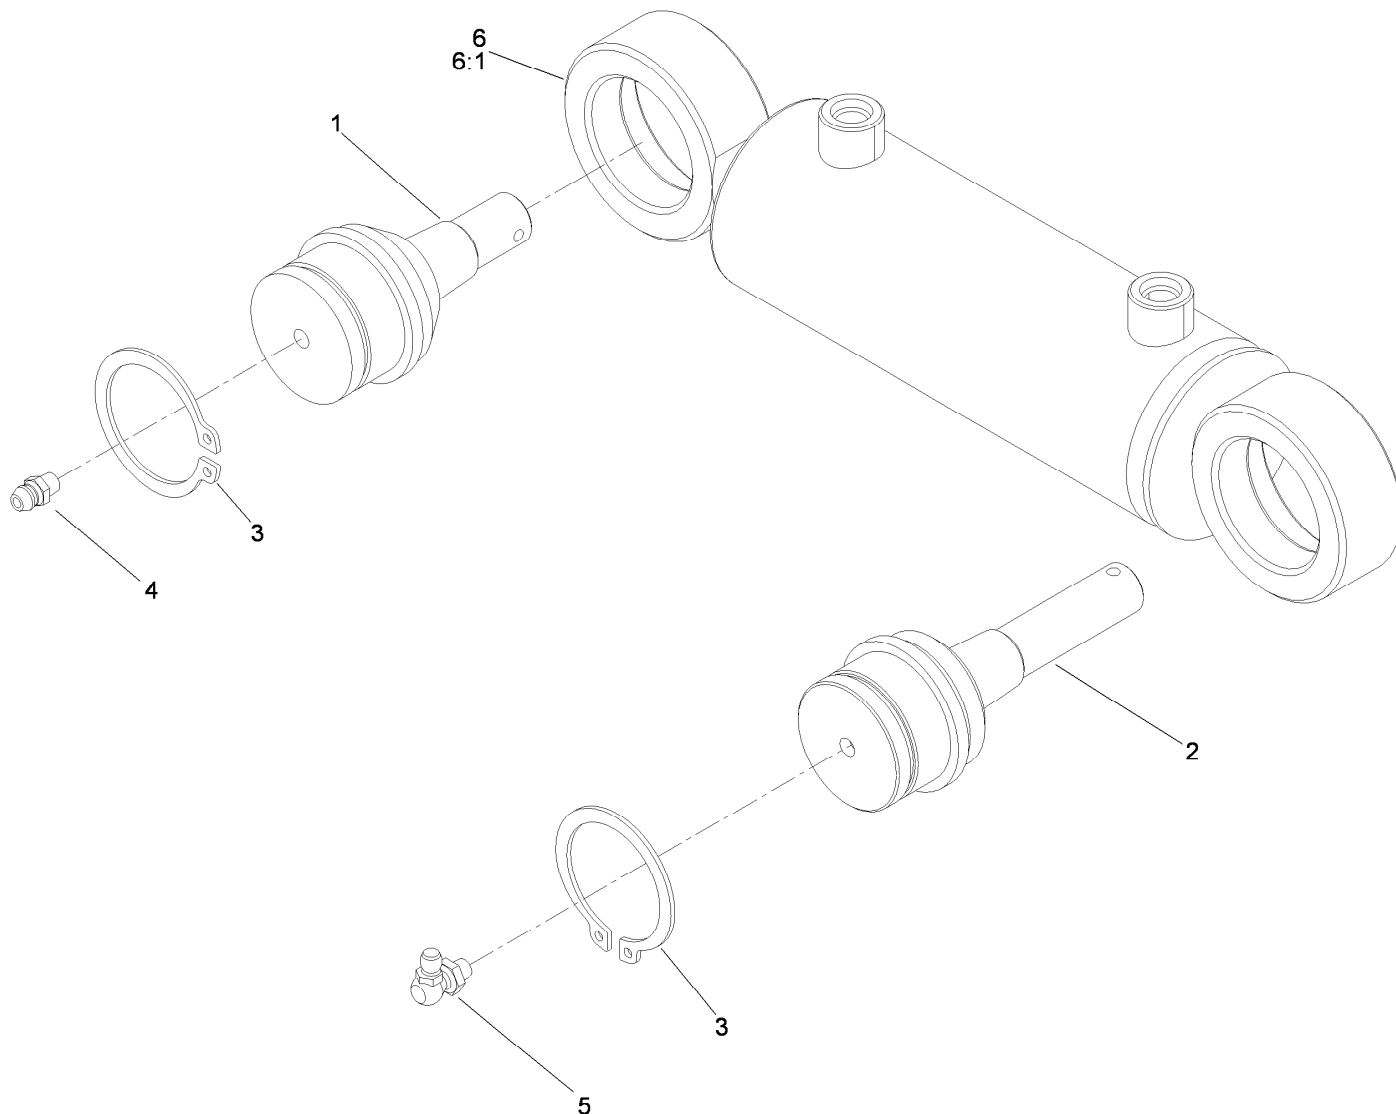 

Steer Cylinder Assembly No. 119-3903

Ref.	Part Number	Qty.	Description
1	106-6774	1	Joint-Ball
2	100-3795	1	Joint-Ball
3	32151-104	2	Ring-Retaining, External
4	302-5	1	Fitting-Grease
5	302-60	1	Fitting-Grease
6	125-1661	1	Cylinder-HYD
6:1	125-1681	1	Cylinder Repair Kit ●

 
● Not illustrated

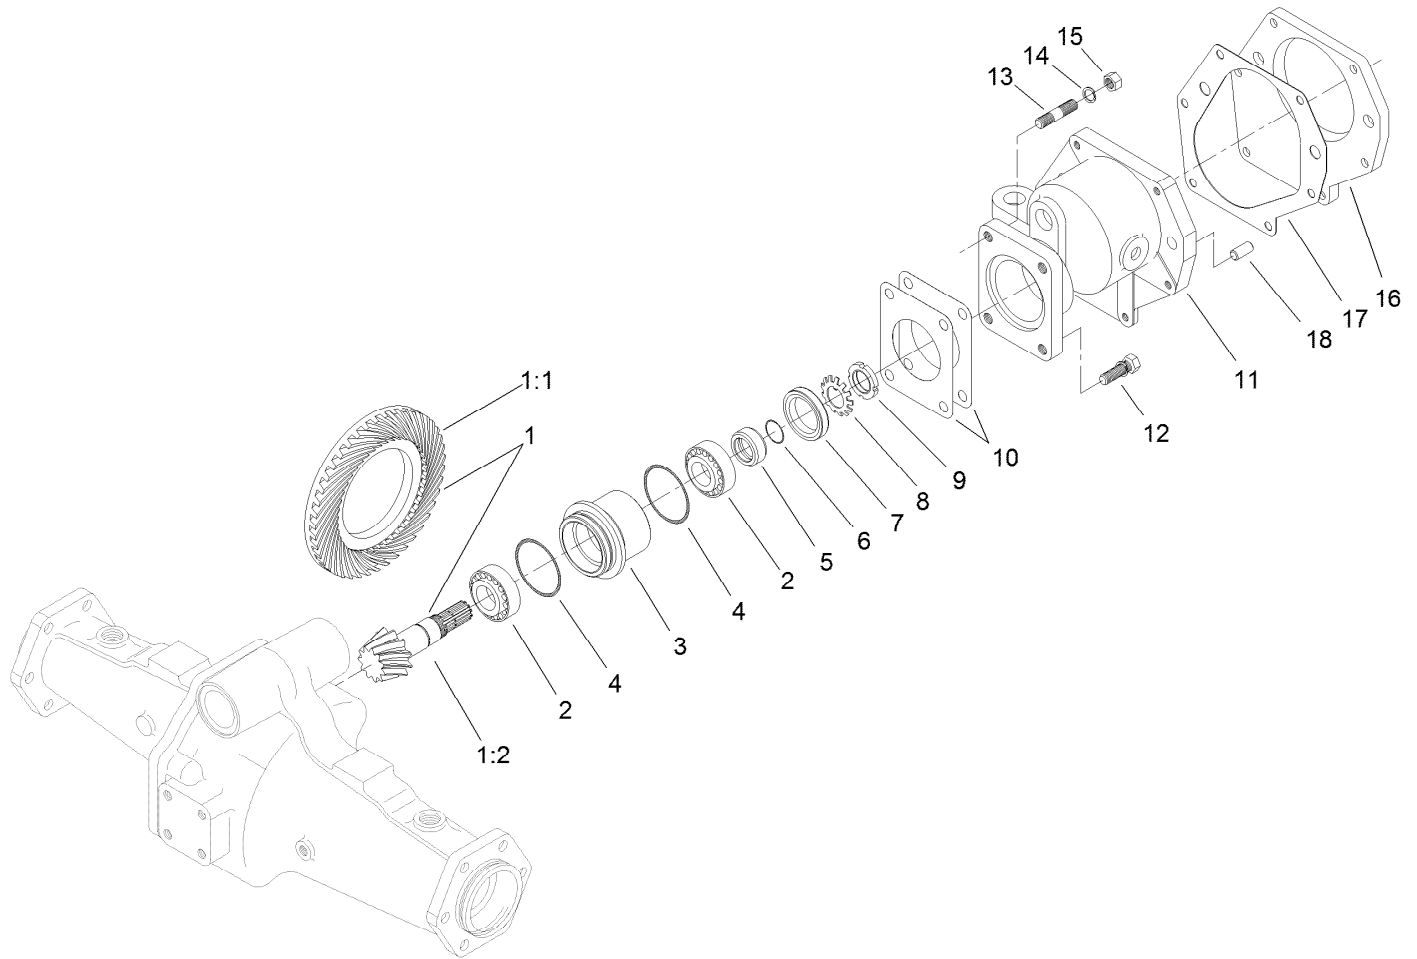

Bevel Pinion Shaft Assembly Rear Axle Assembly No. 110-4750

Ref.	Part Number	Qty.	Description
1	106-1093	1	Ring And Pinion Set
1:1	95-7504	1	Gear-43 Tooth, Bevel Spiral
1:2	106-1092	1	Pinion-Spiral, Bevel
2	99-7570	2	Bearing-Roller, Taper
3	95-7534	1	Case-Bearing
4	106-1065	2	O-Ring
5	99-7572	1	Collar-Seal, Oil
6	106-1066	1	O-Ring
7	99-7574	1	Seal-Oil
8	99-7559	1	Washer-Lock
9	99-7560	1	Nut-Lock


Ref.	Part Number	Qty.	Description
10	99-7550	2	Shim 0.1
10	99-7551	2	Shim 0.2
11	95-7533	1	Case-Gear
12	99-7575	2	Bolt
13	98-7735	2	Stud
14	99-7527	2	Washer-Spring
15	99-7526	2	Nut
16	95-7541	1	Plate-Cover
17	106-1140	1	Gasket
18	104-2353	2	Pin-Dowel

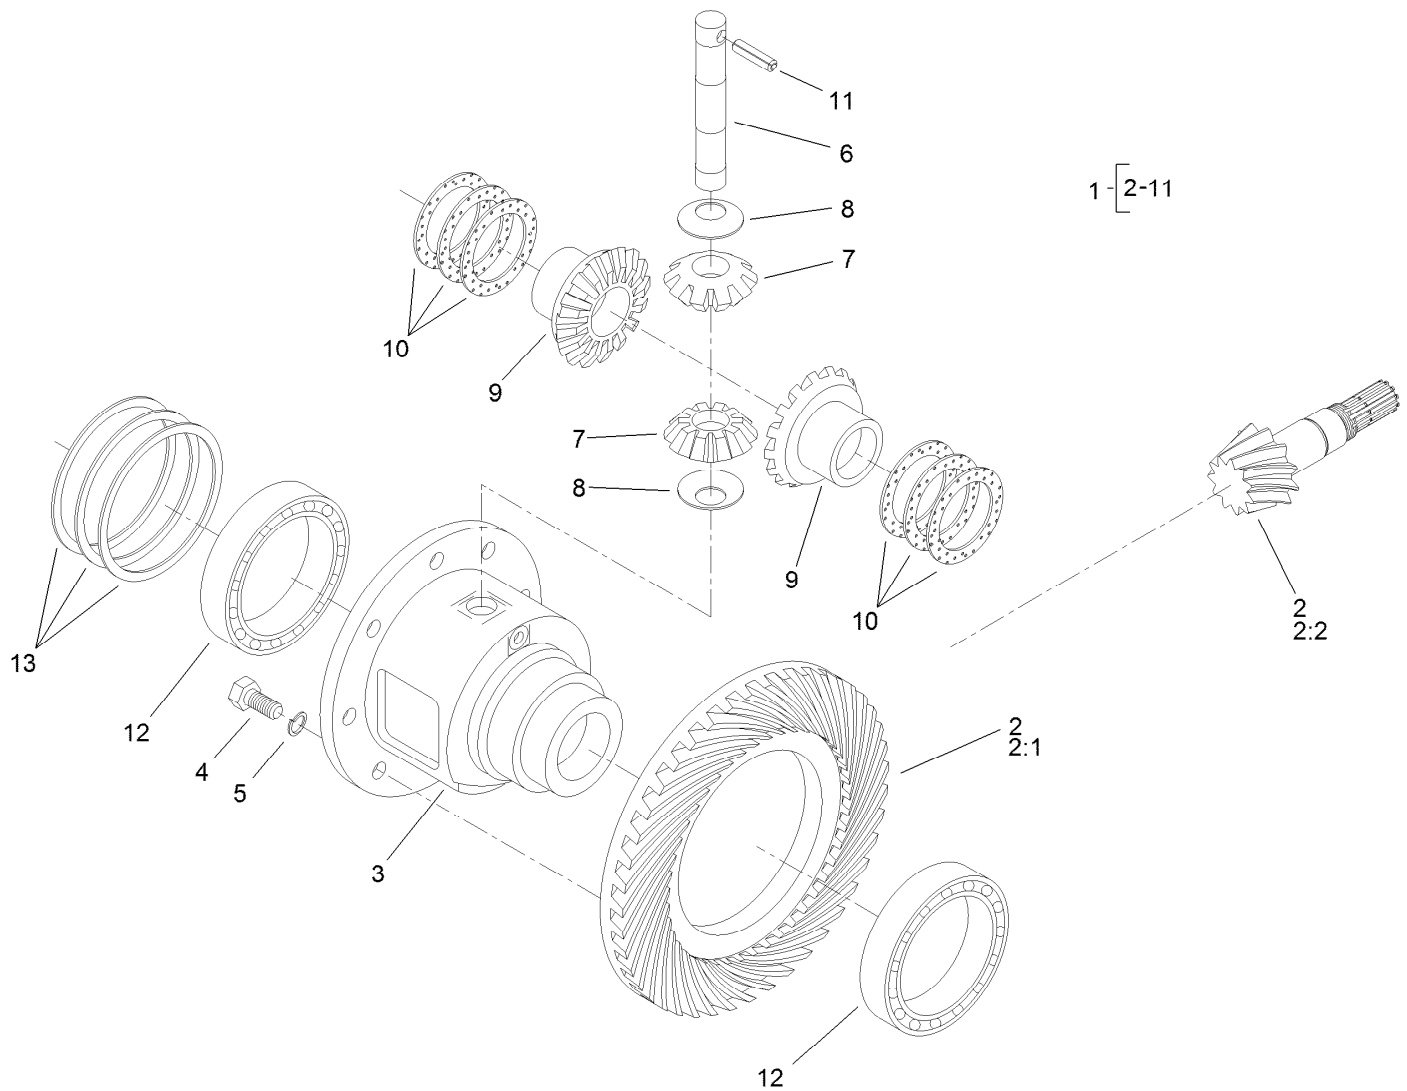 

Differential Assembly Rear Axle Assembly No. 110-4750


Ref.	Part Number	Qty.	Description
1	95-7503	1	Differential ASM
2	106-1093	1	Ring And Pinion Set
2:1	95-7504	1	Gear-43 Tooth, Bevel Spiral
2:2	106-1092	1	Pinion-Spiral, Bevel
3	95-7502	1	Case-Differential
4	99-7576	8	Bolt
5	3253-4	8	Washer-Lock
6	99-7578	1	Shaft-Differential
7	99-7579	2	Pinion-Differential
8	145-5288	2	Washer-Pinion, Differential

Ref.	Part Number	Qty.	Description
9	99-7581	2	Gear-Differential
10	99-7582	2	Washer-Differential
10	99-7583	2	Washer-Differential
10	99-7584	2	Washer-Differential
11	99-7588	1	Pin-Spring
12	99-7562	2	Bearing-Ball
13	99-7585	2	Shim 0.1
13	99-7586	2	Shim 0.2
13	99-7587	2	Shim 0.4

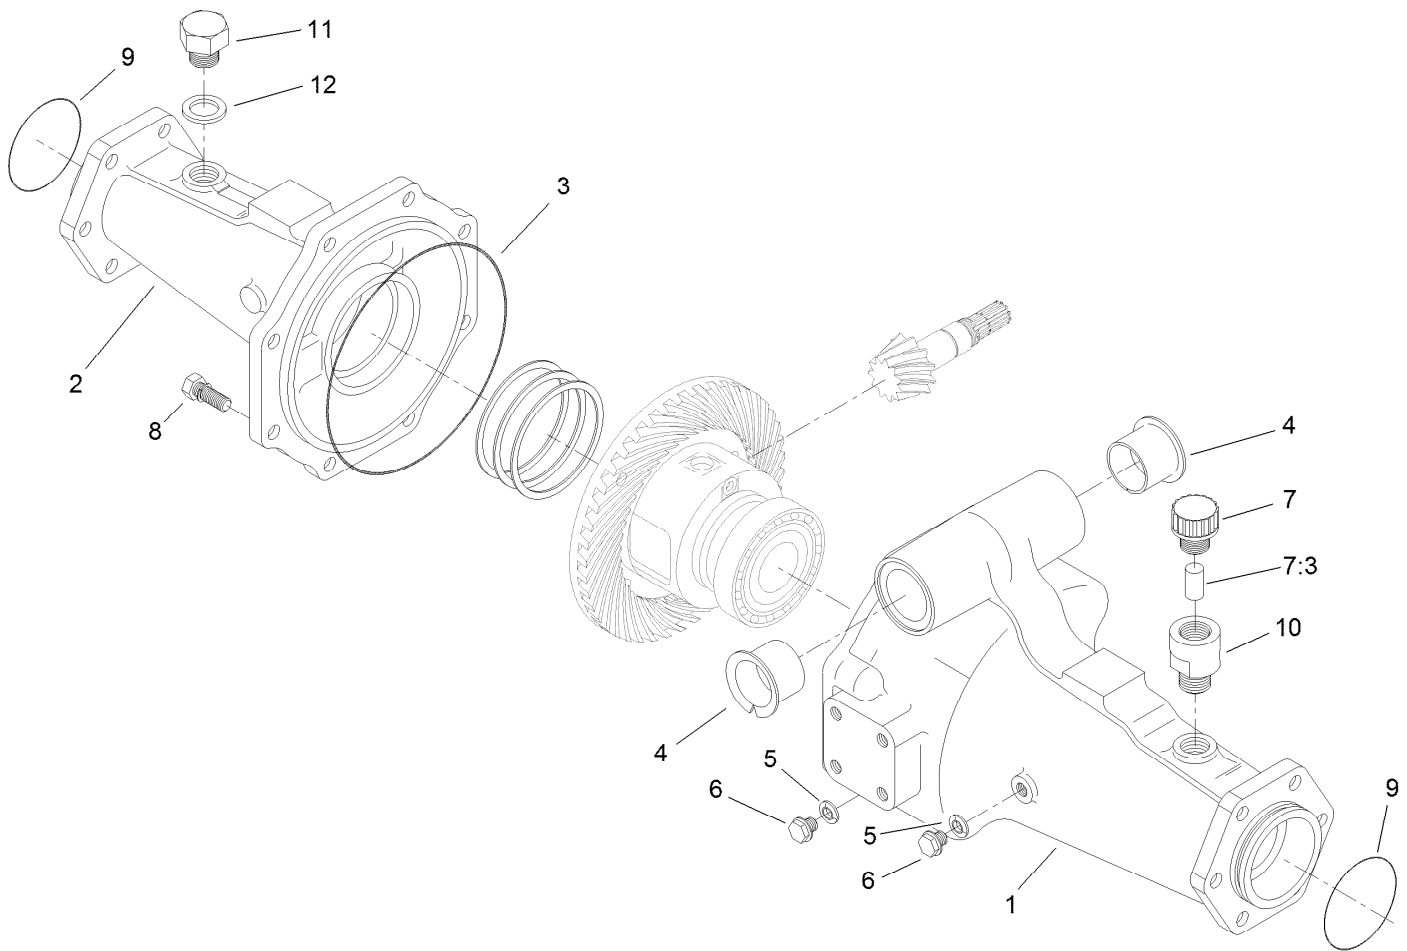 

Axle Support Assembly Rear Axle Assembly No. 110-4750


Ref.	Part Number	Qty.	Description
1	95-7508	1	Support-Axle
2	95-7506	1	Support-Axle
3	106-1067	1	O-Ring
4	95-7537	2	Bushing-Flanged
5	99-7590	2	Washer-Seal
6	99-7589	2	Plug
7	110-4812	1	Axle Vent
7:3	110-4815	1	Insert-Filter, Foam
8	99-7592	8	Bolt
9	106-1068	2	O-Ring
10	104-2377	1	Extension-Vent
11	104-8643	1	Plug
12	104-8644	1	O-Ring

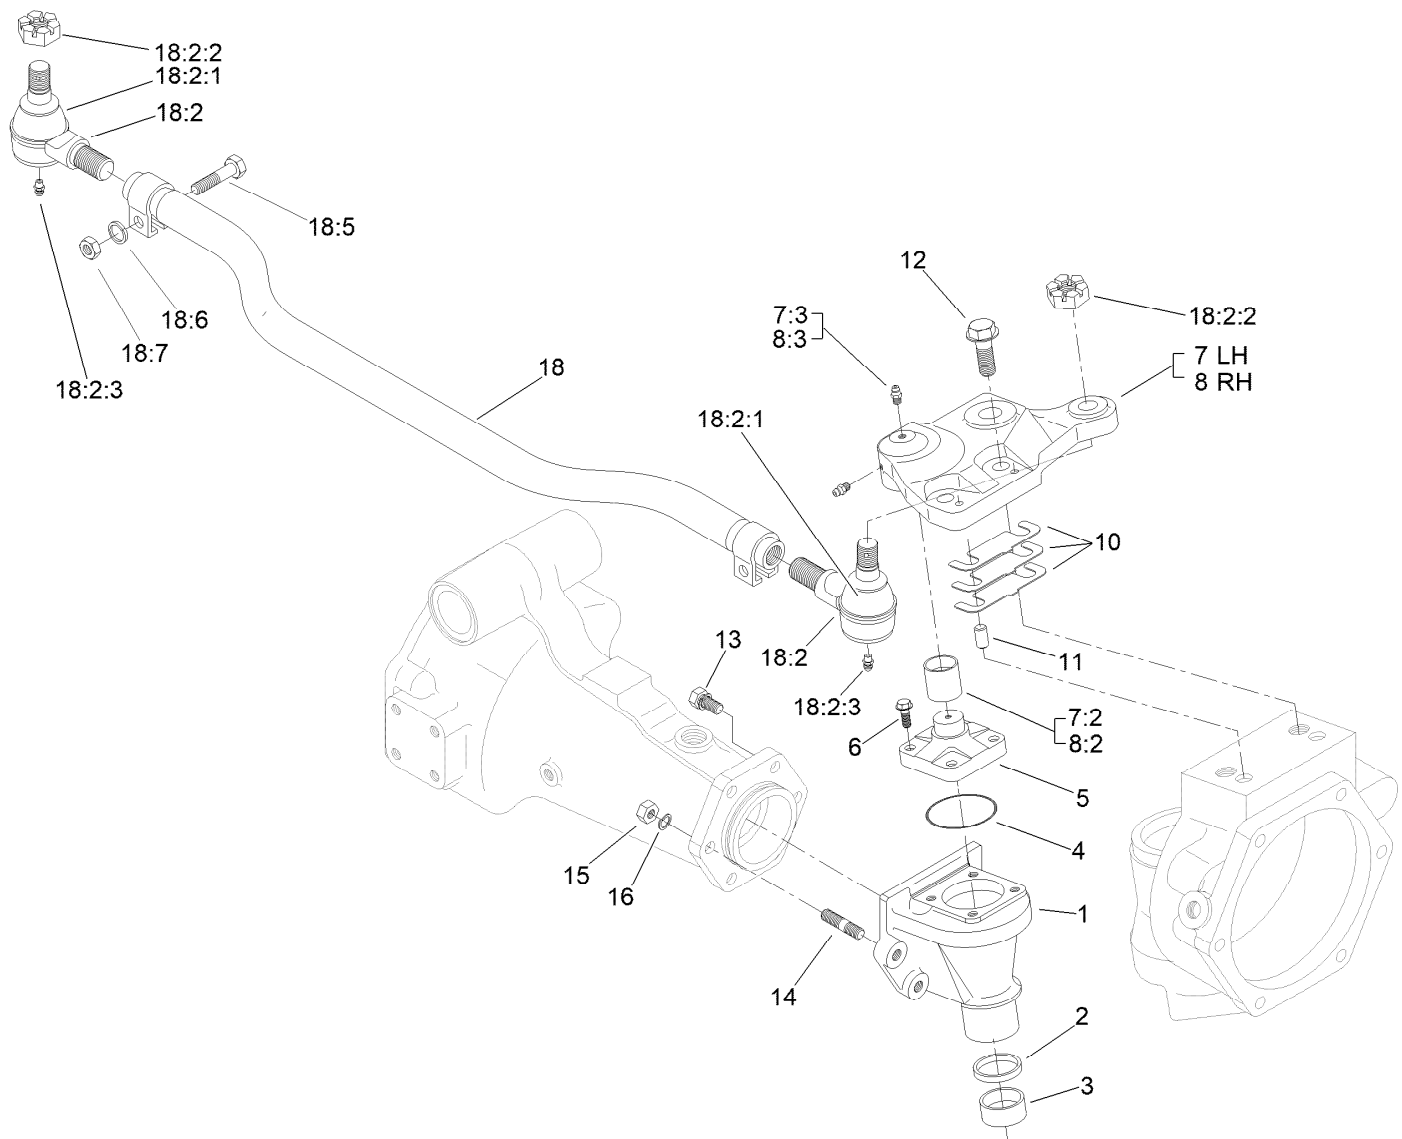 

Bevel Gear Case Assembly Rear Axle Assembly No. 110-4750


Ref.	Part Number	Qty.	Description
1	110-4752	2	Case-Gear, Bevel
2	110-4754	2	Seal-Oil
3	104-2378	2	Bushing
4	106-1069	2	O-Ring
5	104-2373	2	Knuckle
6	104-2374	8	Bolt
7	100-3768	1	LH Steering Arm ASM
7:2	104-8634	1	Bushing
7:3	106-1104	2	Fitting-Grease
8	100-3766	1	RH Steering Arm ASM
8:2	104-8634	1	Bushing
8:3	106-1104	2	Fitting-Grease
10	95-7547	2	Shim 0.1
10	95-7548	2	Shim 0.2
10	95-7549	2	Shim 0.3

Ref.	Part Number	Qty.	Description
11	99-7597	4	Pin-Dowel
12	104-2375	4	Bolt
13	99-7599	8	Bolt
14	99-7525	4	Stud
15	99-7526	4	Nut
16	99-7527	4	Washer-Spring
18	106-1141	1	Steering Tie Rod ASM
18:2	106-1113	2	Tie Rod End ASM - RH Thread
18:2:1	100-3853	1	Cover-Dust
18:2:2	100-3854	1	Nut-Castle
18:2:3	110-4755	1	Fitting-Grease
18:5	100-3855	2	Bolt
18:6	99-7527	2	Washer-Spring
18:7	99-7526	2	Nut

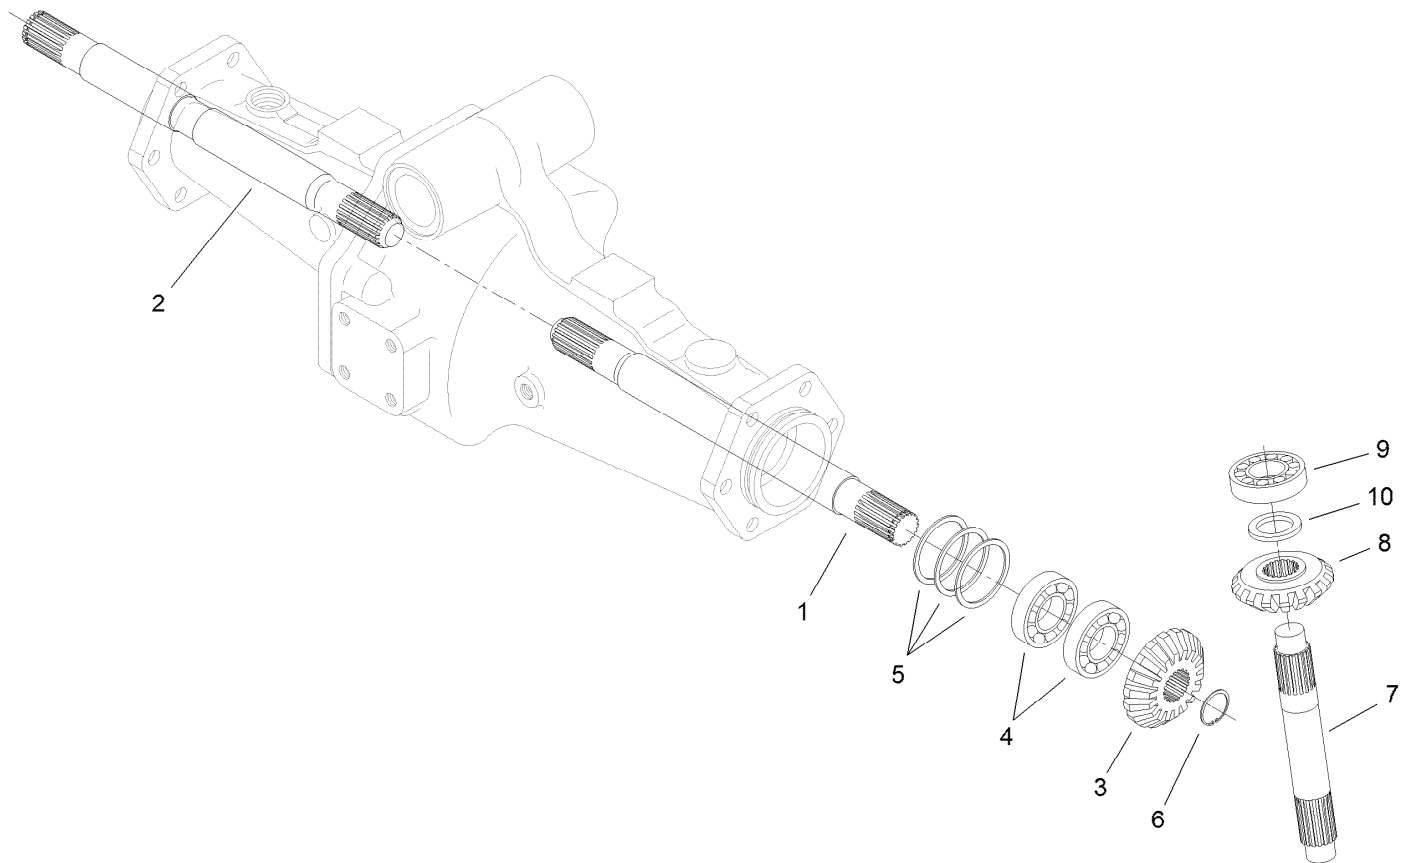 


Bevel Gear Shaft Assembly Rear Axle Assembly No. 110-4750

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	95-7509	1	Shaft-Gear, Differential
2	95-7512	1	Shaft-Gear, Differential
3	95-7517	2	Gear-Bevel, 15 Tooth
4	119-8558	4	Bearing-Noseal
5	99-7552	2	Shim 0.1
5	99-7553	2	Shim 0.2
5	99-7554	2	Shim 0.5
6	99-7531	2	Clip
7	110-4753	2	Shaft-Gear, Bevel
8	95-7519	2	Gear-Bevel, 17 Tooth
9	99-7532	2	Bearing-Roller, Taper
10	99-7558	2	Collar

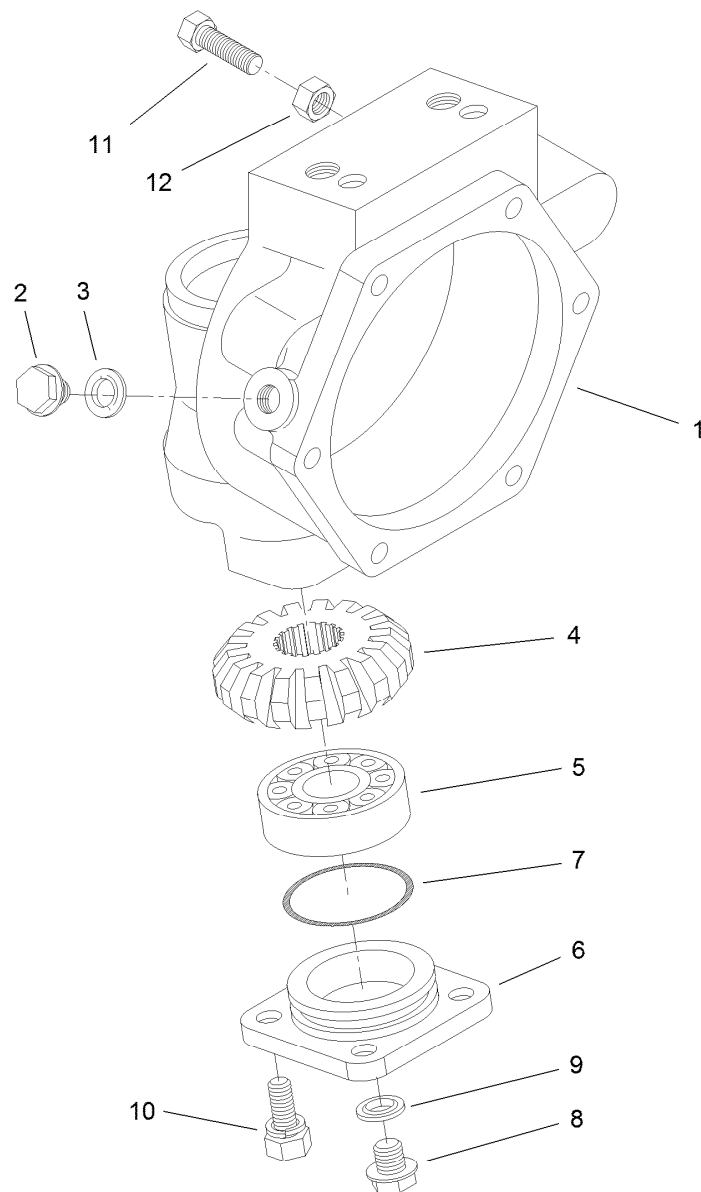 


Axle Case Assembly Rear Axle Assembly No. 110-4750

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	110-4751	2	Case-Axle
2	99-7535	2	Plug
3	99-7536	2	Washer-Seal
4	95-7527	2	Gear-Bevel, 17 Tooth
5	99-7532	2	Bearing-Roller, Taper
6	100-2560	2	Cover
7	106-1070	2	O-Ring
8	99-7589	2	Plug
9	99-7590	2	Washer-Seal
10	100-2562	8	Bolt
11	106-1102	2	Bolt-Stop
12	106-1103	2	Nut

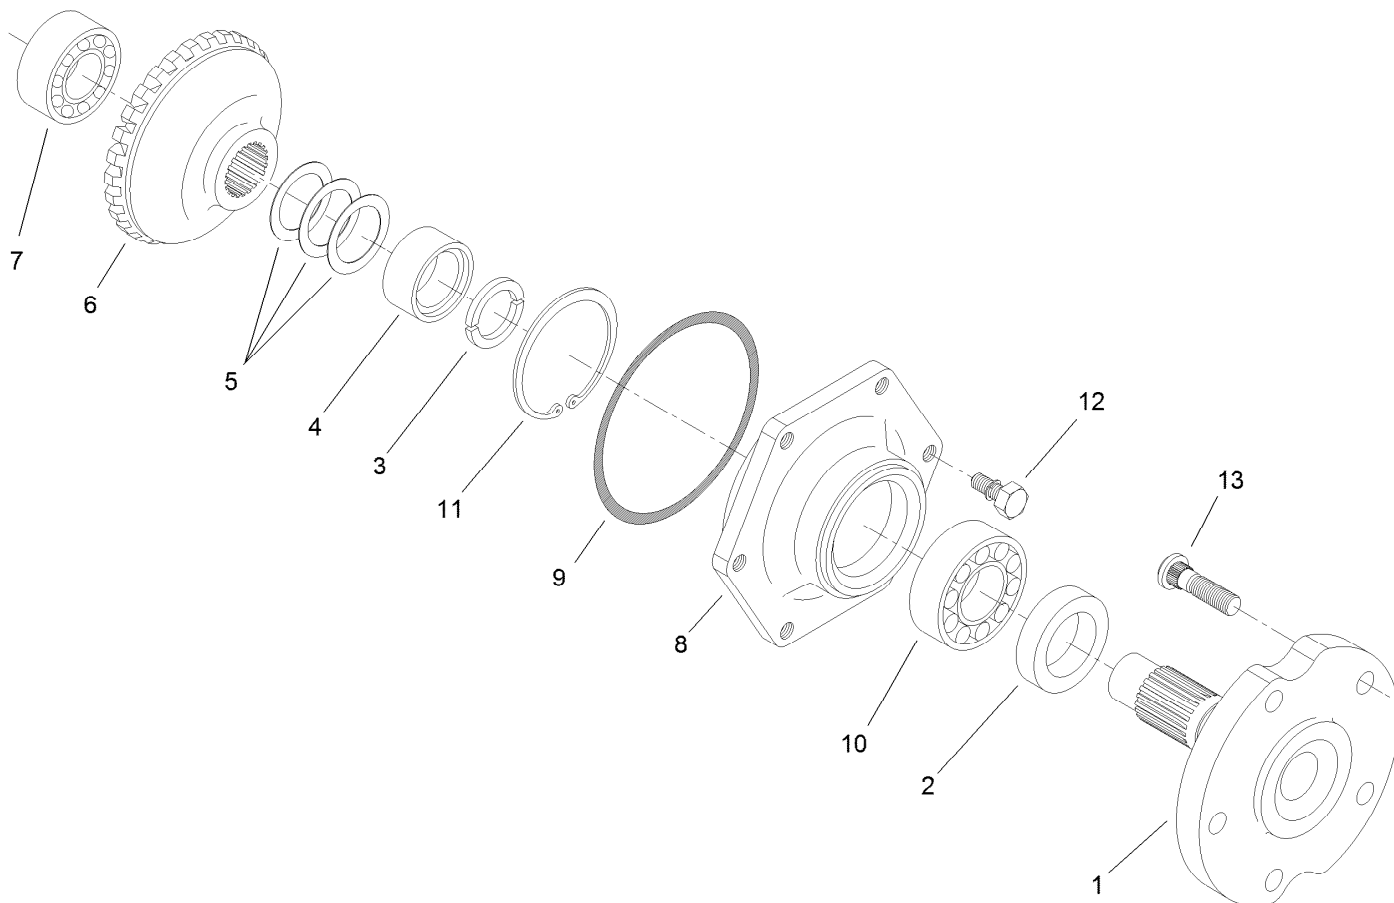 

Axle Assembly Rear Axle Assembly No. 110-4750


Ref.	Part Number	Qty.	Description
1	95-7522	2	Axle
2	99-7564	2	Seal-Oil
3	95-7544	4	Clip
4	95-7523	2	Spacer
5	99-7555	2	Shim 0.3
5	99-7556	2	Shim 0.2
5	99-7557	2	Shim 0.5
6	95-7524	2	Gear-Bevel, 29 Tooth
7	99-7534	2	Bearing-Ball
8	95-7521	2	Cover-Axle
9	106-1071	2	O-Ring
10	93-7775	2	Bearing-Ball
11	99-7539	2	Clip
12	104-2374	12	Bolt
13	99-7563	10	Stud

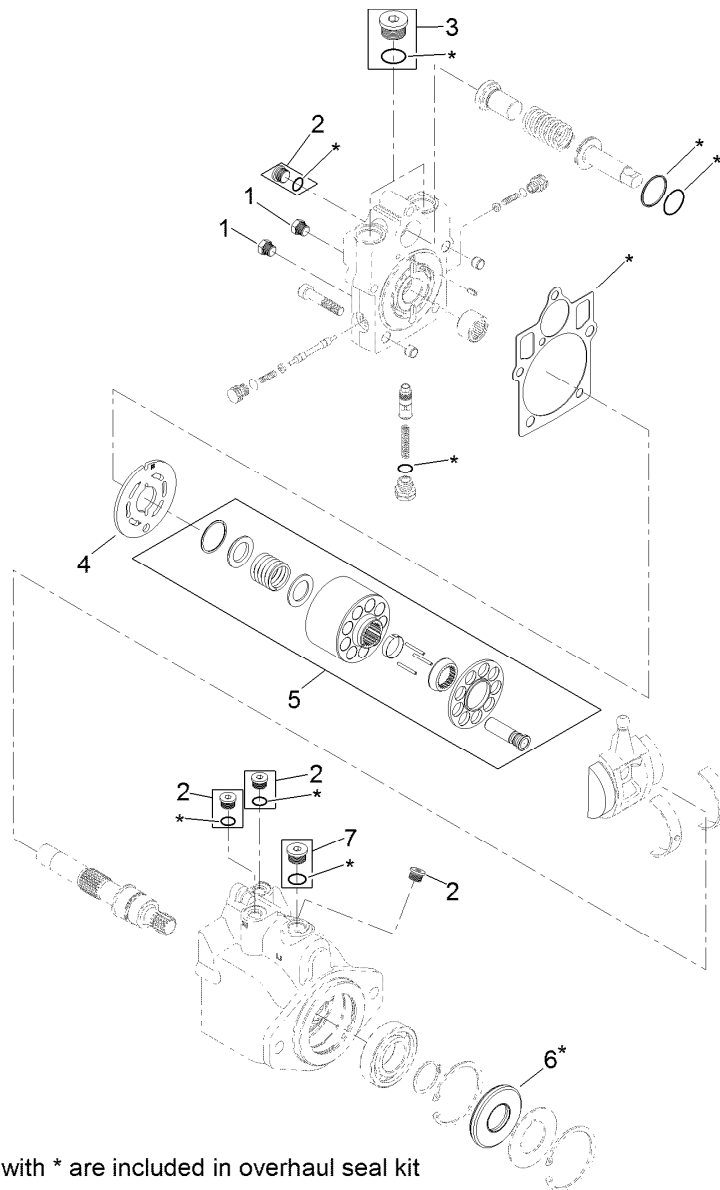 

8 = all items with * are included in overhaul seal kit

Piston Motor Assembly No. 121-3101

Ref.	Part Number	Qty.	Description
1	92-1352	2	Plug
2	69-3080	5	Plug
3	69-3130	2	Plug
4	125-4638	1	Valve Plate
5	125-4639	1	Cylinder Block Kit
6	69-3190	1	Seal-Lip
7	67-9090	1	Plug
8	121-1736	1	Overhaul Seal Kit

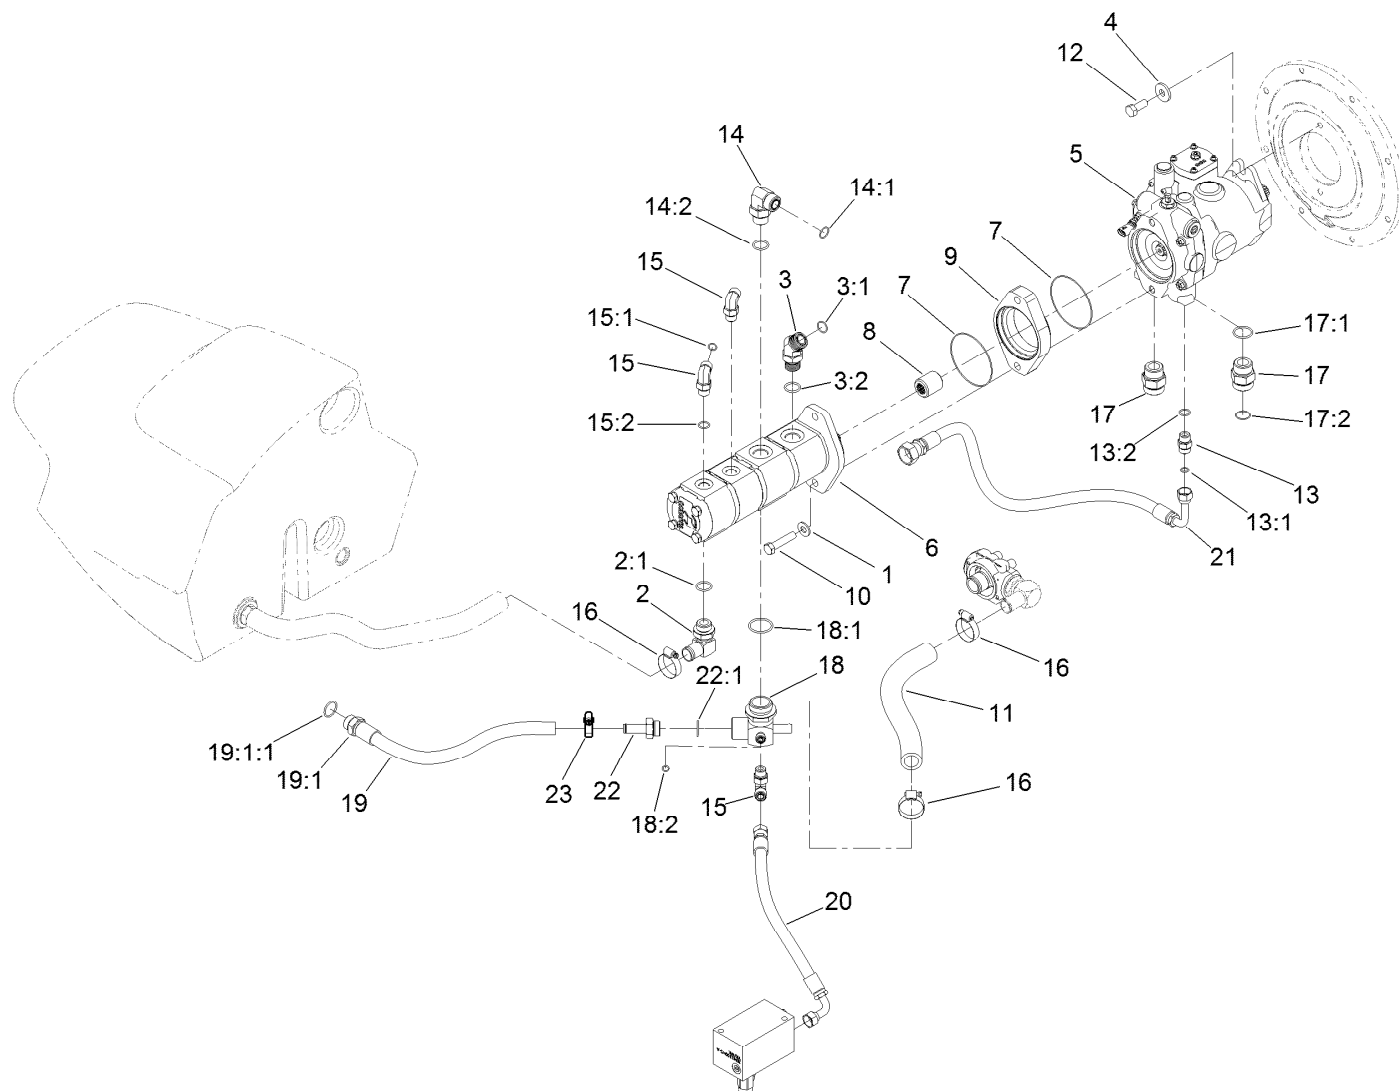 


Hydraulic Pump Assembly

Ref.	Part Number	Qty.	Description
1	87-7270	2	Washer-Thrust
2	100-4202	1	Fitting-90
2:1	237-81	1	O-Ring
3	100-5530	1	Fitting-45 DEG
3:1	237-58	1	O-Ring
3:2	237-81	1	O-Ring
4	110-6147	2	Washer-Flat
5	114-4188	1	Piston Pump ASM
6	114-4189	1	4-Section Pump ASM
7	115-3009	2	O-Ring
8	115-3011	1	Coupler-Pump
9	115-3757	1	Spacer-Pump
10	115-8488	2	Screw-HH
11	163-2612	1	Hose-Suction
12	325-5	2	Screw-HH
13	340-4	1	Fitting-Straight
13:1	237-30	1	O-Ring
13:2	237-79	1	O-Ring

Ref.	Part Number	Qty.	Description
14	340-142	1	Fitting-Elbow, 90 DEG
14:1	237-58	1	O-Ring
14:2	237-81	1	O-Ring
15	340-98	3	Fitting-Elbow, 90 DEG
15:1	237-79	1	O-Ring
15:2	237-30	1	O-Ring
16	2412-111	3	Clamp-Hose, W/Liner
17	104-3797	2	Fitting-Straight
17:1	237-146	1	O-Ring
17:2	340-65	1	O-Ring
18	130-1616	1	Fitting-Tee
18:1	237-101	1	O-Ring
18:2	237-22	1	O-Ring
19	121-3079	1	Hose ASM
19:1		1	Fitting-Straight ●
19:1:1	237-81	1	O-Ring
20	125-4616	1	Hose ASM
21	130-1633	1	Hose ASM

 ● Not serviced separately

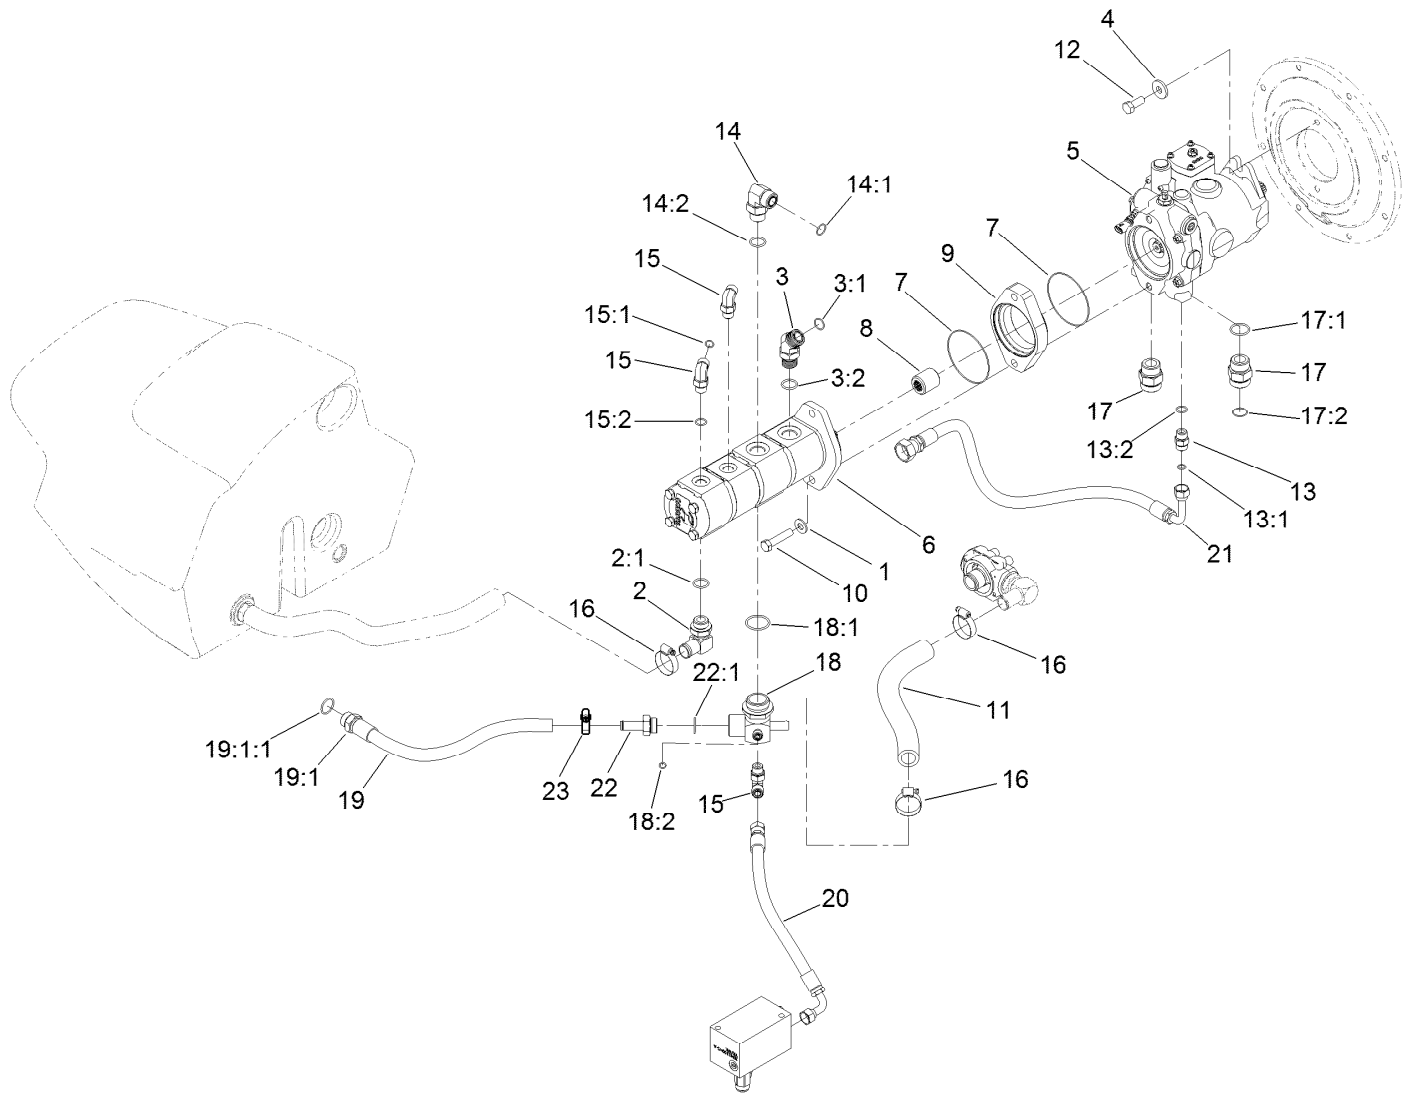


Hydraulic Pump Assembly (continued)

Ref.	Part Number	Qty.	Description
22	121-1526	1	Fitting-STR

Ref.	Part Number	Qty.	Description
22:1	237-81	1	O-Ring
23	2412-129	1	Clamp-Hose

 ● Not serviced separately

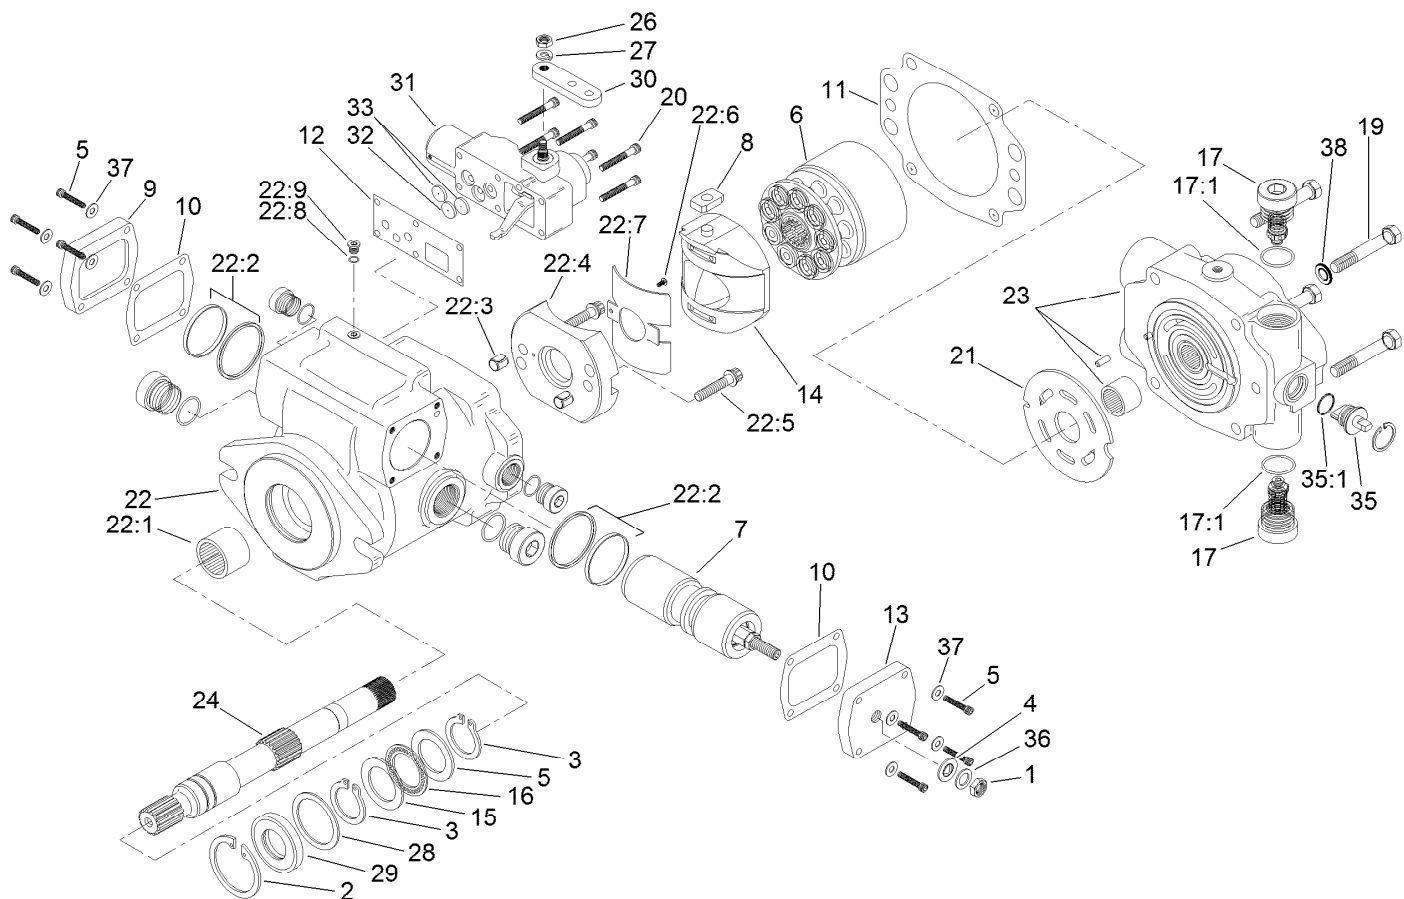


Piston Pump Assembly No. 114-4188

Ref.	Part Number	Qty.	Description
1	3220-3	1	Nut-HJ
2	60-6260	1	Ring
3	76-7000	2	Ring-Retaining
4	94-3027	1	Washer-Seal
5	93-6337	8	Screw
6	105-9851	1	Rotating Kit
7	105-4572	1	Servo Piston ASM
8	94-3032	1	Follower-Piston
9	94-3033	1	Plate-Cover
10	93-6339	2	Gasket
11	105-2900	1	Gasket-Housing
12	105-2901	1	Gasket-Housing, Control
13	105-9853	1	Plate-Cover
14	94-3026	1	Camplate ASM
15	76-6950	2	Race-Thrust
16	76-6960	1	Bearing-Thrust
17	105-2857	2	Valve-Relief
17:1		1	O-Ring ●

Ref.	Part Number	Qty.	Description
19	323-45	4	Screw-HH
20	93-6324	6	Screw
21	105-9854	1	Plate-Valve
22	105-9855	1	Housing ASM
22:1		1	Bearing ●
22:2		2	Seal ASM ●
22:3		2	Dowel-Bushing ●
22:4		1	Cradle ASM ●
22:5		2	Screw ●
22:6		1	Screw ●
22:7		1	Bushing ●
22:8		1	O-Ring ●
22:9		1	Plug ●
23	115-4445	1	Endcover Sub ASM
24	115-3008	1	Shaft-Drive
26	93-6327	1	Nut
27	3253-3	1	Washer-Lock
28	60-6240	1	Washer

 ● Not serviced separately

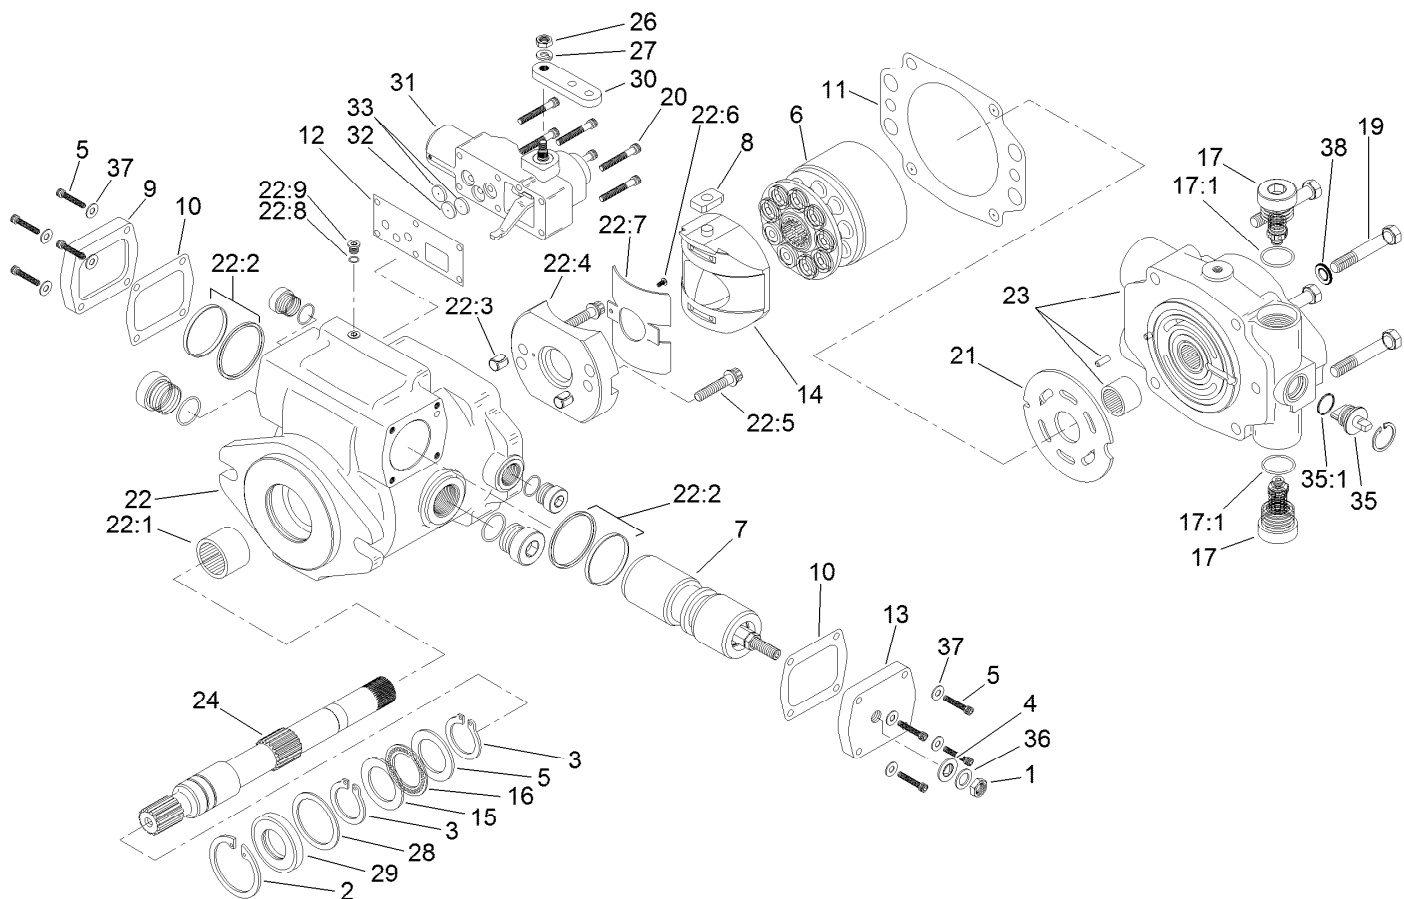


Piston Pump Assembly No. 114-4188 (continued)

Ref.	Part Number	Qty.	Description
29	105-3331	1	Seal-Shaft
30	110-0036	1	Arm-Control
31	115-4446	1	Control-Servo, Manual
32	105-2909	1	Orifice-Control, .036 DIA
33	94-3041	2	Orifice-Control (.028 DIA)

Ref.	Part Number	Qty.	Description
35	105-2864	1	Valve-Bypass
35:1		1	O-Ring ●
36	94-3030	1	Washer
37	93-6336	8	Washer
38	105-9762	4	Washer

 ● Not serviced separately

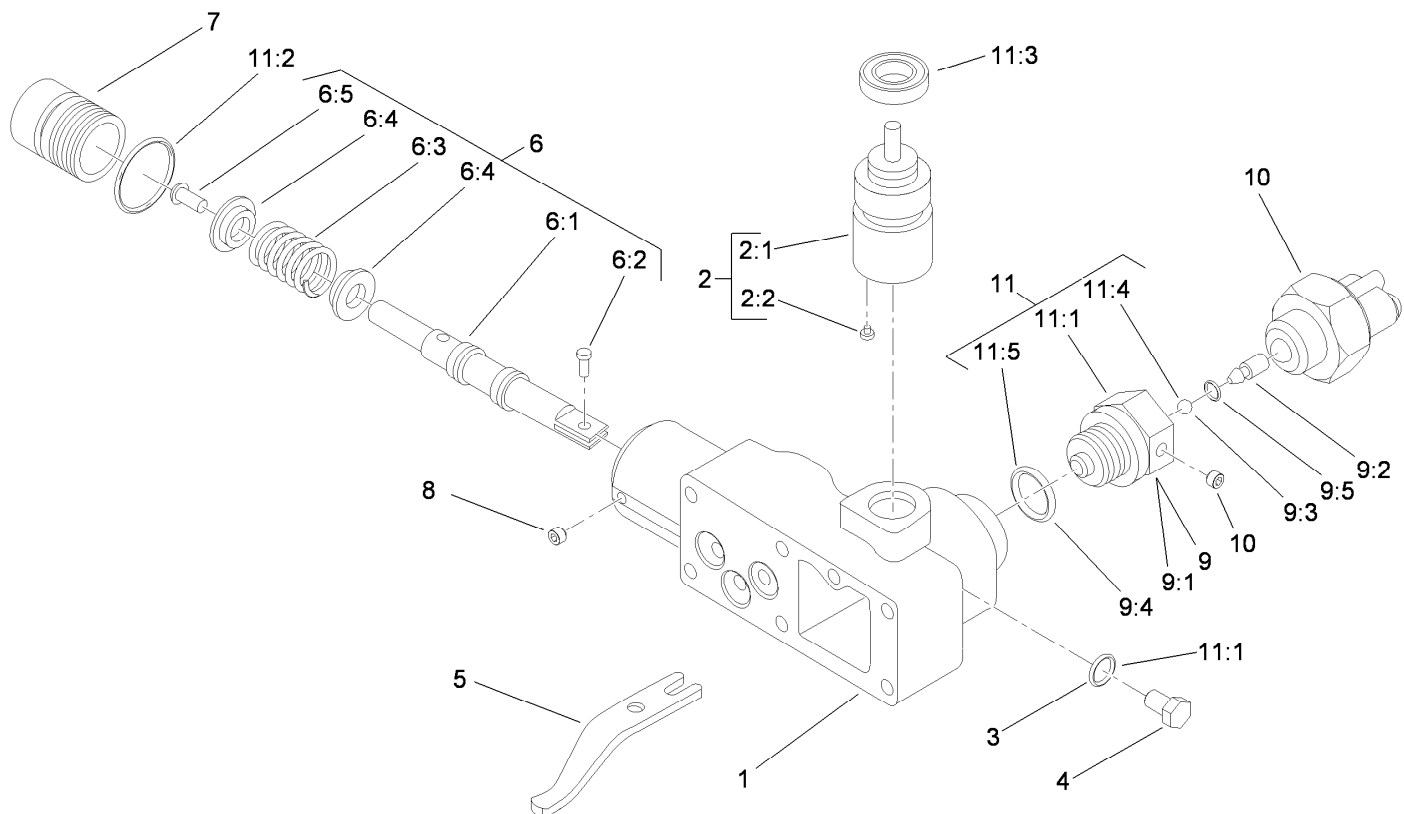


Control Assembly No. 115-4446

Ref.	Part Number	Qty.	Description
1		1	Housing-Control ●
2	108-7099	1	Input Control Shaft ASM
2:1		1	Shaft ●
2:2		1	Pin ●
3		1	O-Ring ●
4		1	Plug ●
5		1	Link-Feedback ●
6	108-7098	1	Valve Spool ASM
6:1		1	Valve-Spool ●
6:2		1	Pin-Dowel ●
6:3		1	Spring ●
6:4		2	Retainer ●
6:5		1	Screw ●
7		1	Plug ●


Ref.	Part Number	Qty.	Description
8		2	Screw-Set ●
9	108-8003	1	Adaptor ASM
9:1		1	Adaptor-Lockout, Neutral ●
9:2		1	Pin ●
9:3		1	Ball ●
9:4		1	O-Ring ●
9:5		1	O-Ring ●
10	115-3795	1	Switch-Neutral
11	94-3044	1	Seal Kit
11:1	117-8979	1	Seal-Shaft
11:2	105-2901	1	Gasket-Housing, Control
11:3		1	O-Ring ●
11:4		1	O-Ring ●
11:5		1	Seal-Wiper ●

 ● Not serviced separately

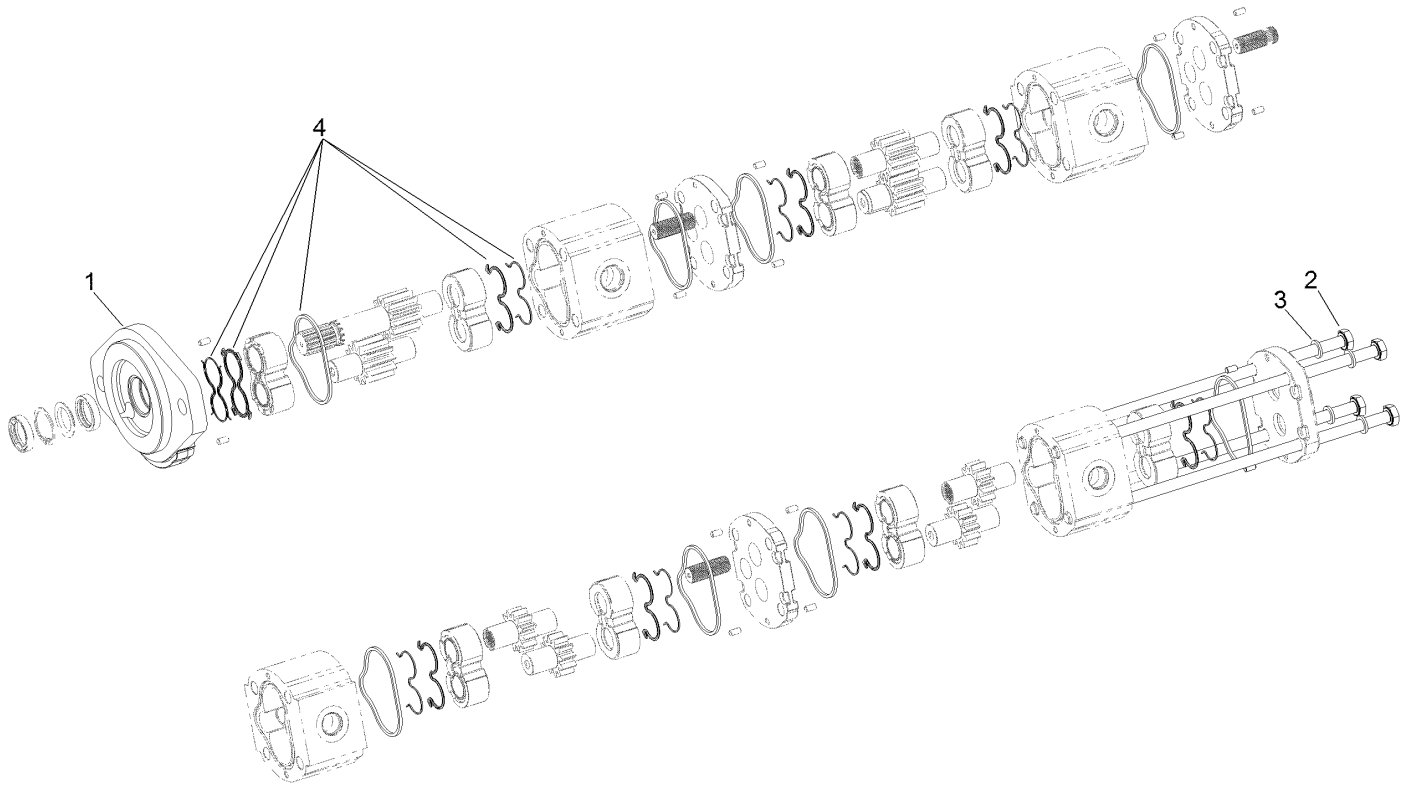


Four Section Pump Assembly No. 114-4189

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-3774	1	Cover-Front
2	115-4444	4	Bolt
3	115-9138	4	Washer
4	115-3776	1	Seal Kit

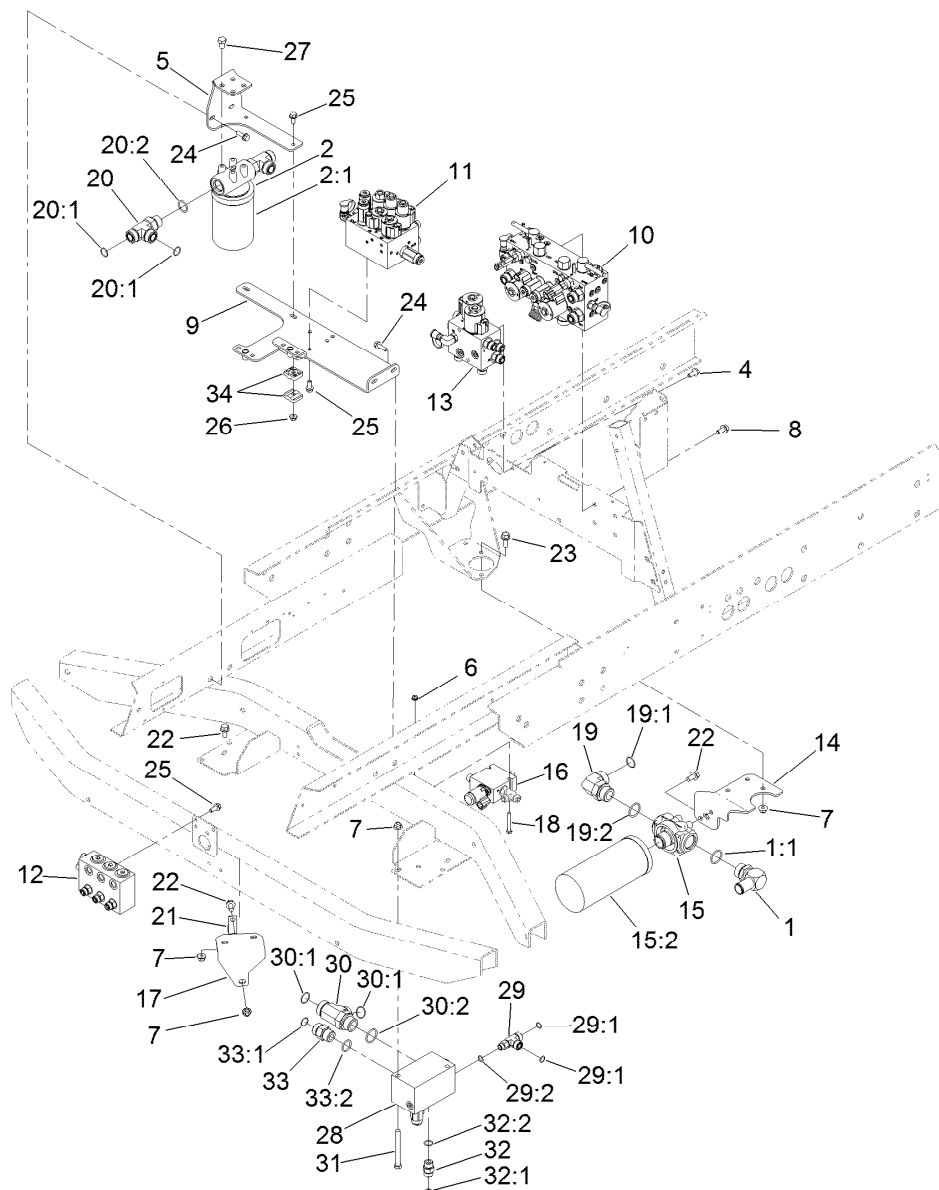 

Hydraulic System Components Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	23-8910	1	Stem-Barb-90	19:1	237-146	1	O-Ring
1:1	237-146	1	O-Ring	19:2	340-65	1	O-Ring
2	93-2242	1	Oil Filter ASM	20	340-148	2	Fitting-Tee
2:1	75-1310	1	Filter-HYD	20:1	237-81	1	O-Ring
4	100-1668	2	Screw-HHF	20:2	237-58	2	O-Ring
5	104-5492-0P	1	Bracket-Filter Head	21	2412-150	1	Clip-J
6	104-7201	2	Nut-HF, NI	22	3234-1	5	Screw-HHF
7	119-4042	7	Nut-HF, NI	23	3234-11	2	Screw-HHF
8	110-1718	4	Screw-HHSF,Patch	24	115-1794	1	Screw-HHF
9	117-2362	1	Bracket-Mount, Valve	25	3234-5	9	Screw-HHF
10	130-1656	1	Mow Manifold ASM	26	119-4041	2	Nut-HF
11	130-1669	1	Lift Manifold ASM	27	33115-016	4	Screw-HH
12	130-1670	1	Junction Manifold ASM	28	121-3078	1	Rear Traction Manifold ASM
13	119-3943	1	Fan Drive Manifold ASM	29	110-0064	1	Fitting-Tee
14	120-8022-0P	1	Plate-Mount,Filter	29:1	237-30	2	O-Ring
15	139-1010	1	Filter Head ASM	29:2	237-42	1	O-Ring
15:2	94-2621	1	Element-Filter	30	104-3795	1	Fitting-Tee
16	138-6946	1	3-Way Valve Manifold ASM	30:1	340-65	2	O-Ring
17	121-3089-0P	1	Plate-Mount,Tube	30:2	237-146	1	O-Ring
18	321-11	2	Screw-HH	31	323-42	2	Screw-HH
19	340-129	1	Fitting-Elbow, 90 DEG	32	340-4	1	Fitting-Straight

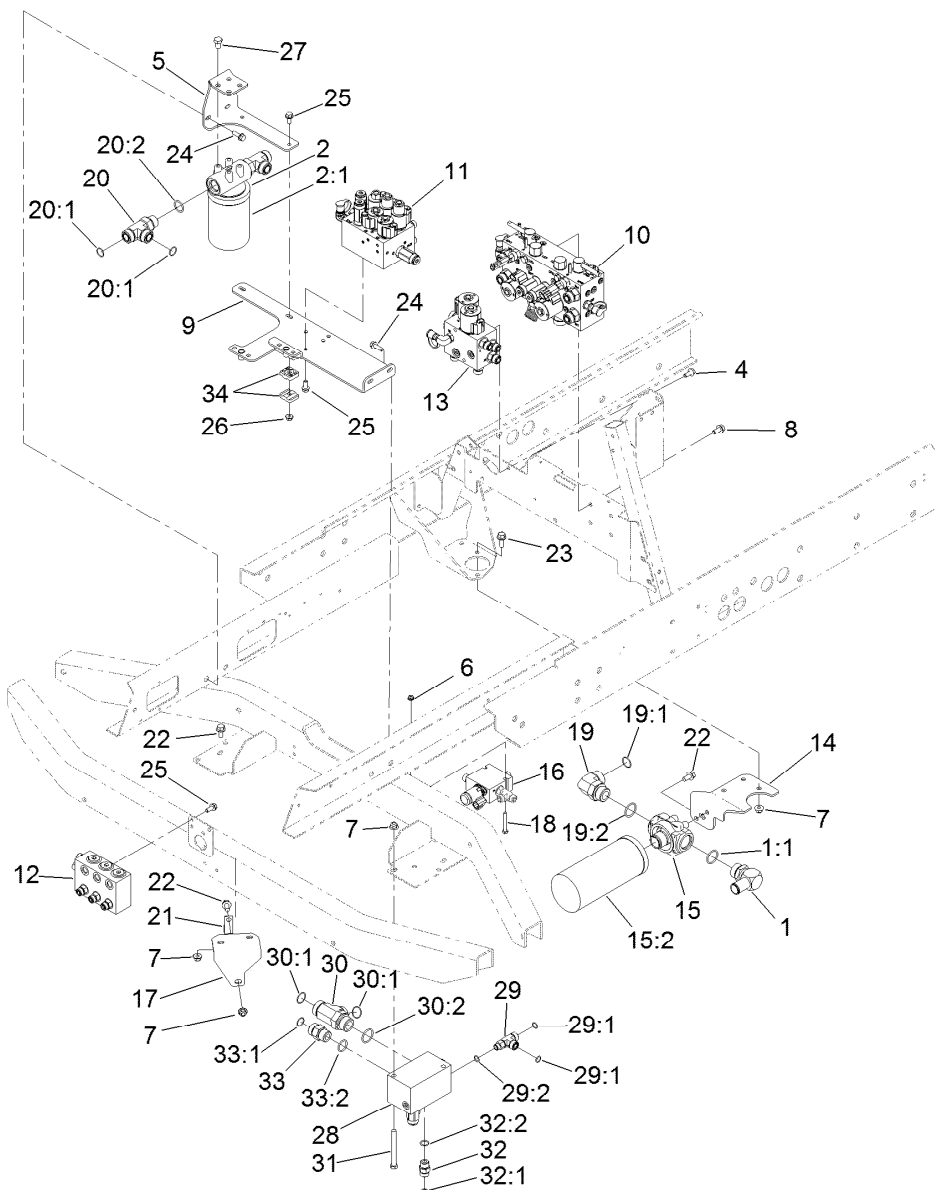 

Hydraulic System Components Assembly (continued)

Ref.	Part Number	Qty.	Description
32:1	237-30	1	O-Ring
32:2	237-79	1	O-Ring
33	340-9	1	Fitting-STR

Ref.	Part Number	Qty.	Description
33:1	237-58	1	O-Ring
33:2	237-81	1	O-Ring
34	56-7973	2	Clamp-Tube

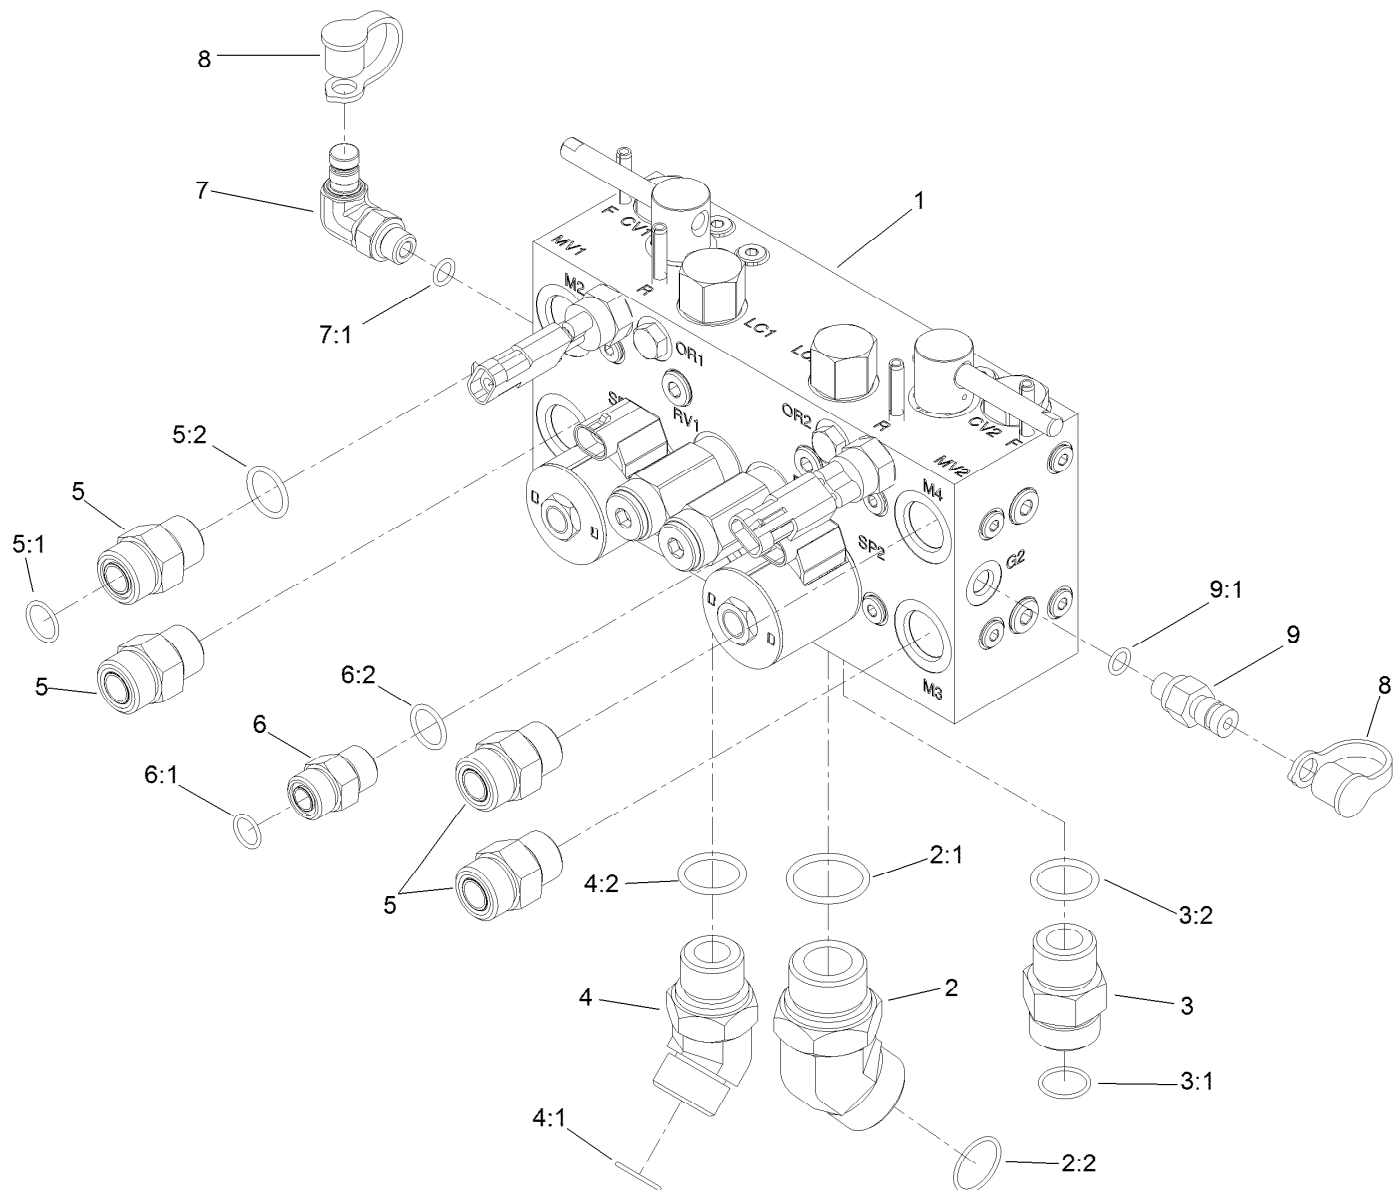 


Mow Manifold Assembly No. 130-1656

Ref.	Part Number	Qty.	Description
1		1	Manifold-Mow 5-Plex ●
2	104-3509	1	Fitting-HYD, 45 DEG
2:1	237-146	1	O-Ring
2:2	340-65	1	O-Ring
3	340-9	1	Fitting-STR
3:1	237-58	1	O-Ring
3:2	237-81	1	O-Ring
4	100-5530	1	Fitting-45 DEG
4:1	237-58	1	O-Ring
4:2	237-81	1	O-Ring
5	340-7	4	Fitting-Straight

Ref.	Part Number	Qty.	Description
5:1	237-65	1	O-Ring
5:2	237-80	1	O-Ring
6	340-4	1	Fitting-Straight
6:1	237-30	1	O-Ring
6:2	237-79	1	O-Ring
7	115-9147	1	Fitting-Elbow, 90 DEG
7:1	237-78	1	O-Ring
8	354-79	2	Cap-Dust
9	354-77	1	Fitting-Quick
9:1	237-78	1	O-Ring

 ● Not serviced separately

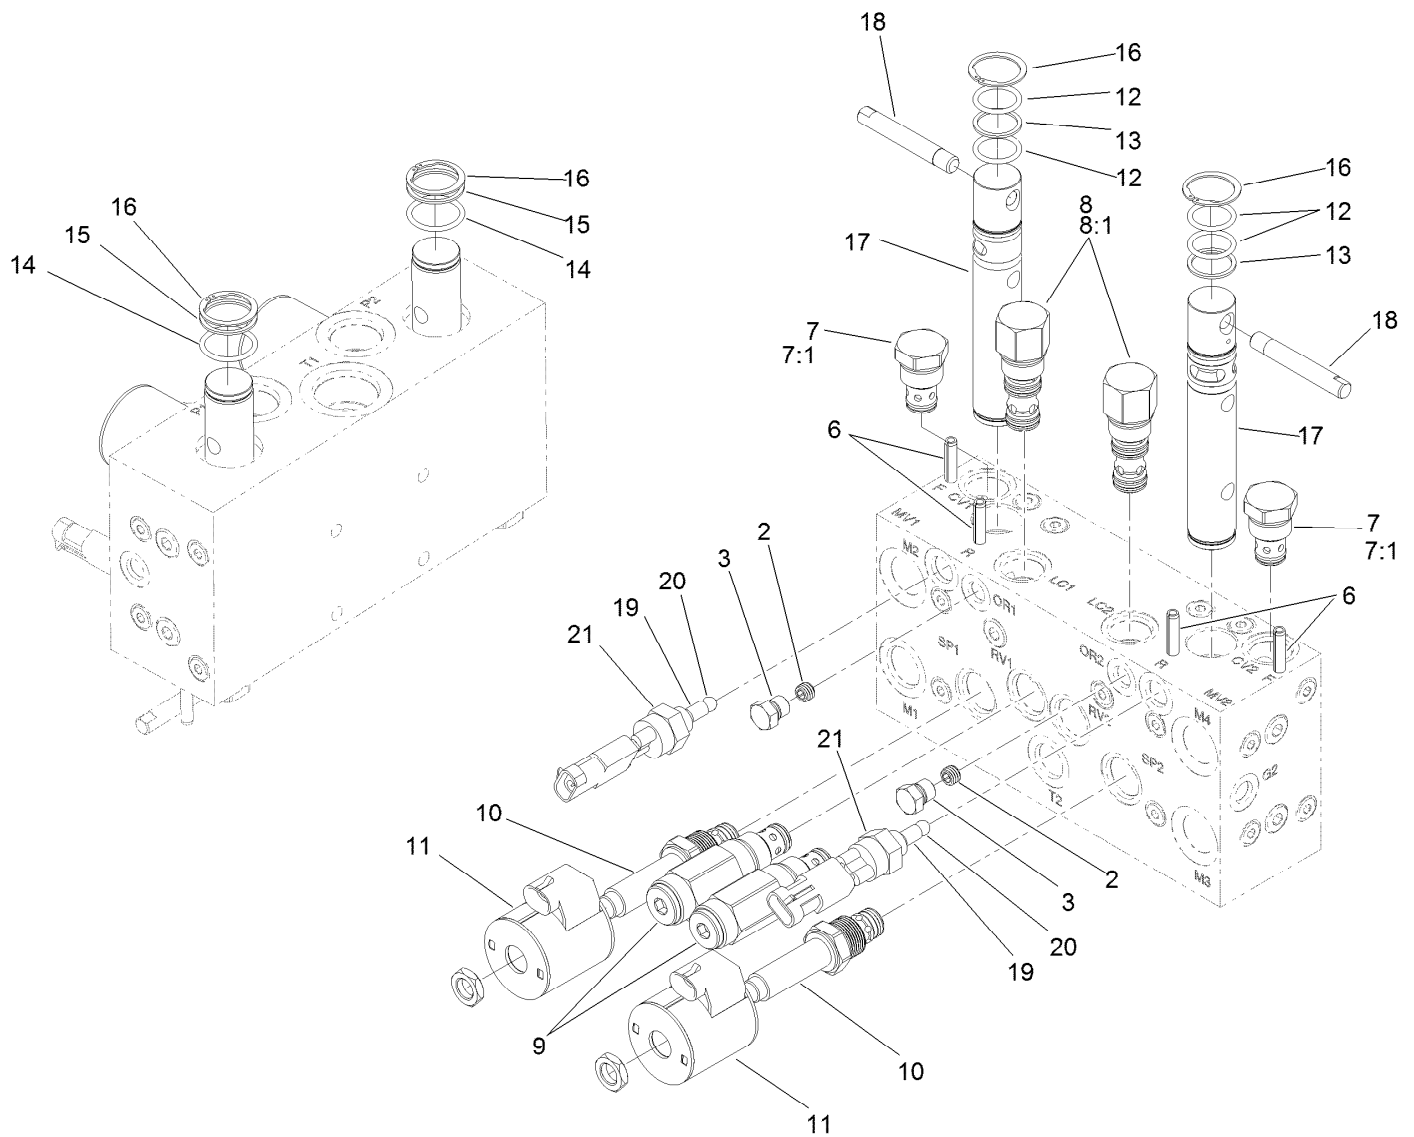


5-Plex Mow Manifold Block Assembly

Ref.	Part Number	Qty.	Description
2	110-8883	2	Plug-Orifice (0.040)
3		2	Plug ■
6	112-6531	4	Pin-Spring
7	110-8881	2	Valve-Check
7:1	105-9159	1	Seal Kit ●
8	120-1693	2	Compensator-Pressure
8:1	119-2159	1	Seal Kit
9	138-6964	2	Valve-Relief, 3000 PSI
10	138-6961	2	Valve-Proportional, NC
11	110-6344	2	Coil-12V, DC

Ref.	Part Number	Qty.	Description
12	120-1657	4	O-Ring
13	120-1656	2	Ring-Backup
14	125-1652	2	O-Ring
15	120-1654	2	Ring-Backup
16	120-1653	4	Ring-Retaining, External
17	120-1652	2	Spool-Backlap
18	120-1651	2	Handle-Spool
19	120-1650	2	Pin
20	117-4605	2	Ball-SS
21	72-4320	2	Switch-Ball

● Not illustrated

 ■ Not serviced separately

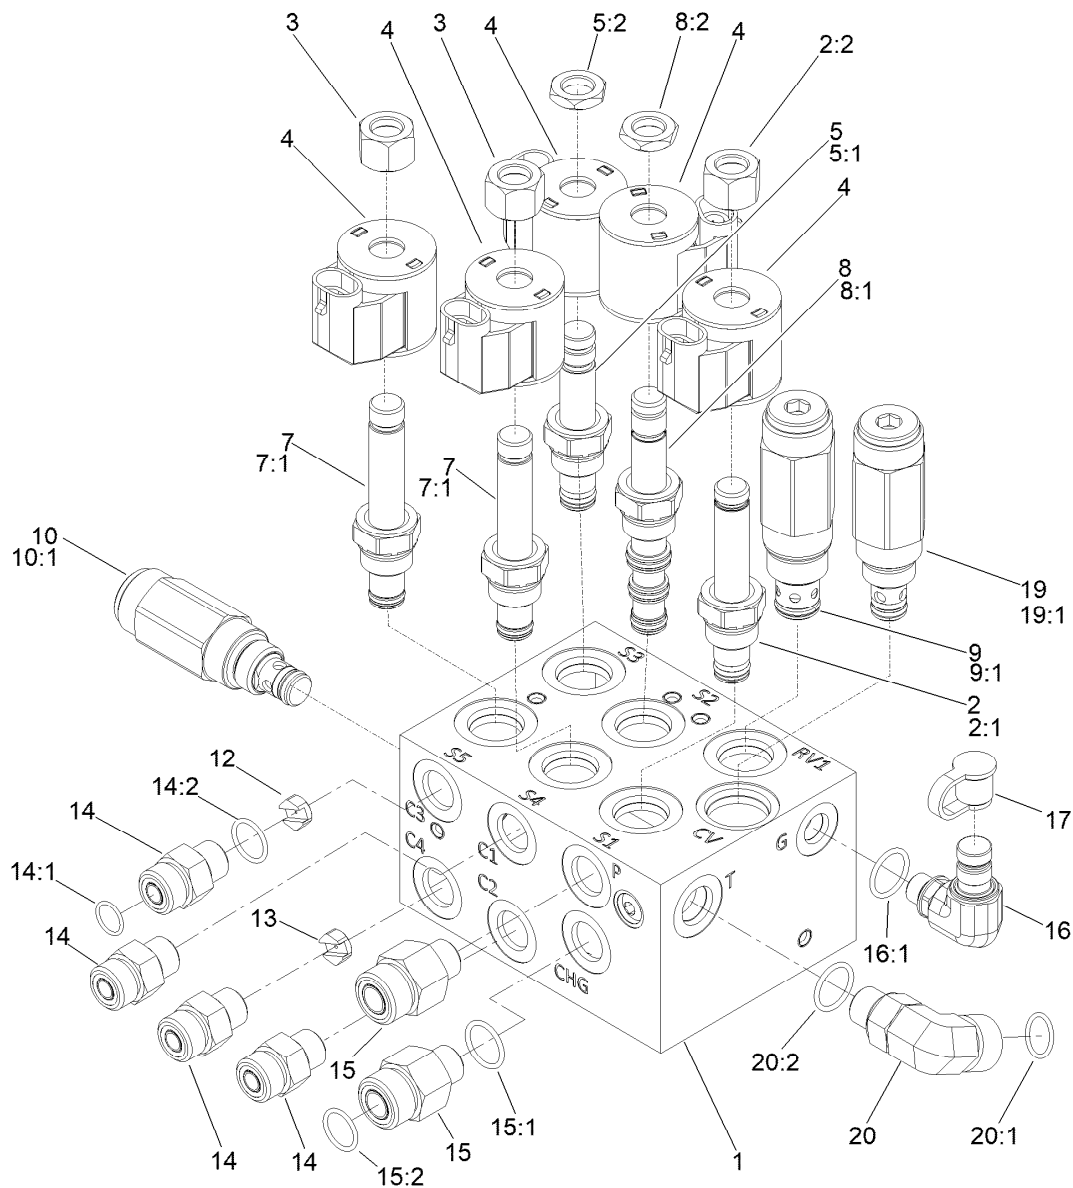


Lift Manifold Assembly No. 130-1669

Ref.	Part Number	Qty.	Description
1		1	Manifold Block ●
2	107-7517	1	Valve-Solenoid
2:1	105-9156	1	Seal Kit
2:2	107-7812	1	Nut-Solenoid
3	107-7812	3	Nut-Solenoid
4	110-0497	5	Coil-Solenoid
5	112-9206	1	Solenoid Valve ASM
5:1	105-9156	1	Seal Kit
5:2	110-2634	1	Nut-Coil
7	147-3090	2	Valve-Solenoid
7:1	107-7527	1	Seal Kit
8	120-1665	1	Valve-Solenoid
8:1	112-6520	1	Seal Kit
8:2	110-2634	1	Nut-Coil
9	120-1664	1	Valve-Relief, 1700 PSI
9:1	105-9156	1	Seal Kit
10	120-1663	1	Valve-Relief, 500 PSI
10:1	105-9156	1	Seal Kit

Ref.	Part Number	Qty.	Description
12	120-1662	1	Orifice-Flow Control, .040
13	119-2010	1	Orifice-Control, Flow (0.055)
14	340-2	4	Fitting-Straight
14:1	237-22	1	O-Ring
14:2	237-42	1	O-Ring
15	340-5	2	Fitting-Straight
15:1	237-42	1	O-Ring
15:2	237-30	1	O-Ring
16	115-9147	1	Fitting-Elbow, 90 DEG
16:1	237-78	1	O-Ring
17	354-79	1	Cap-Dust
19	115-4140	1	Valve-Check
19:1	110-8772	1	Seal Kit
20	340-99	1	Fitting-HYD, 90 DEG
20:1	237-30	1	O-Ring
20:2	237-42	1	O-Ring

 
● Not serviced separately

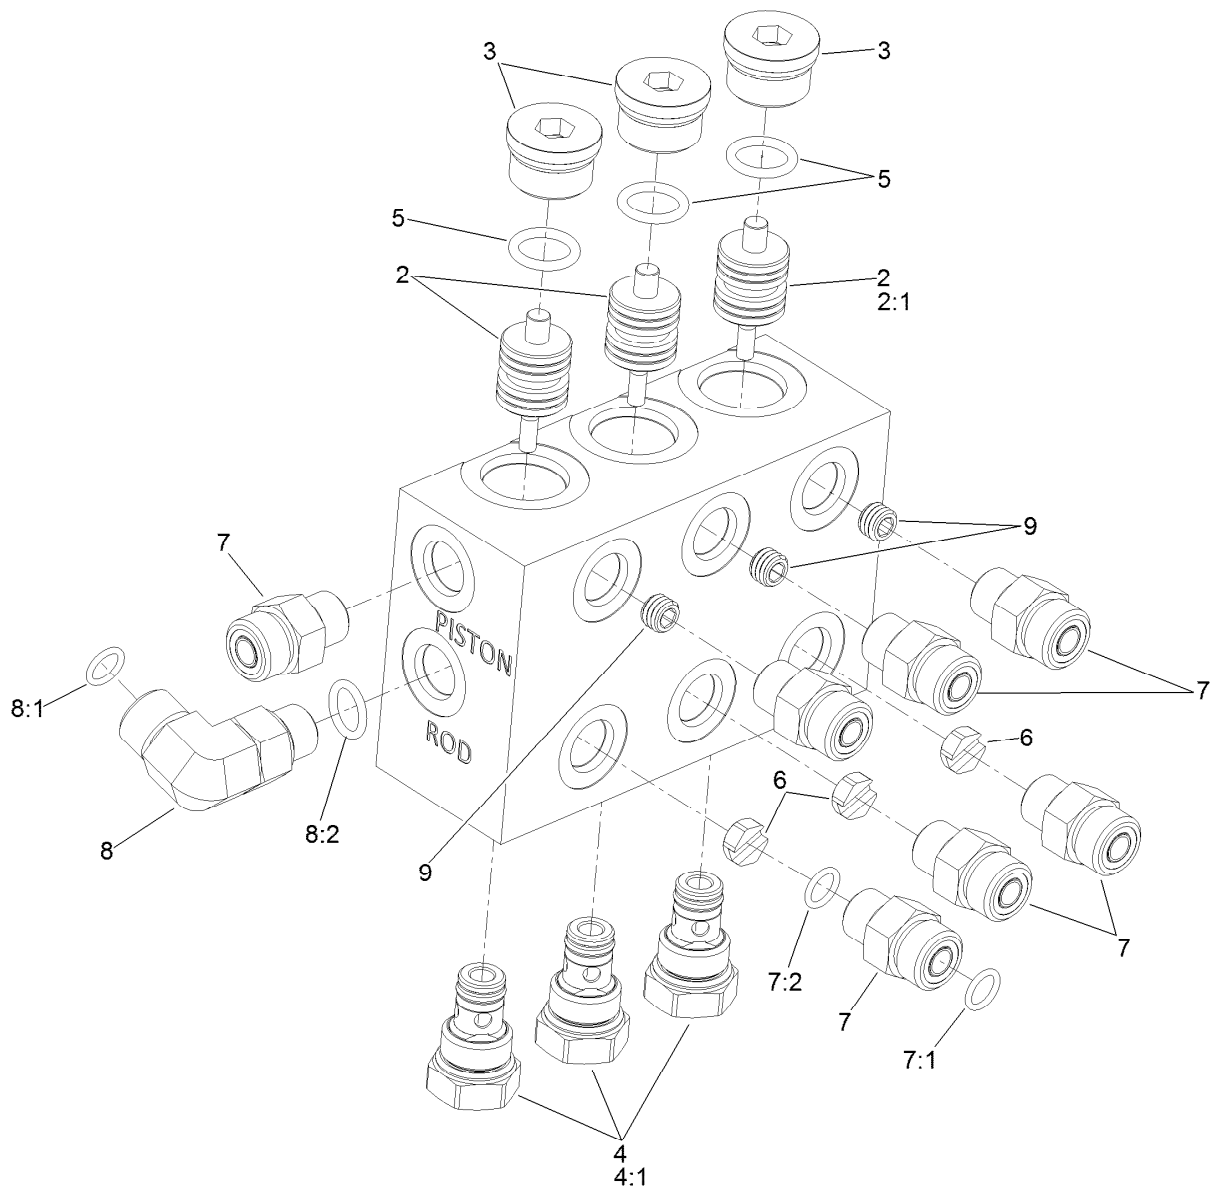

Juction Manifold Assembly No. 130-1670

Ref.	Part Number	Qty.	Description
2	110-8901	3	Piston-Pilot
2:1	110-8900	1	O-Ring
3		3	Plug ●
4	110-9006	3	Valve-Check
4:1	105-9156	1	Seal Kit
5	110-8900	3	O-Ring
6	119-2009	3	Orifice-Flow Control (0.030)
7	340-2	7	Fitting-Straight
7:1	237-22	1	O-Ring
7:2	237-42	1	O-Ring
8	340-77	1	Fitting-Elbow, 90 DEG
8:1	237-22	1	O-Ring
8:2	237-42	1	O-Ring
9	130-1674	1	Orifice-Control, Flow

 ● Not serviced separately

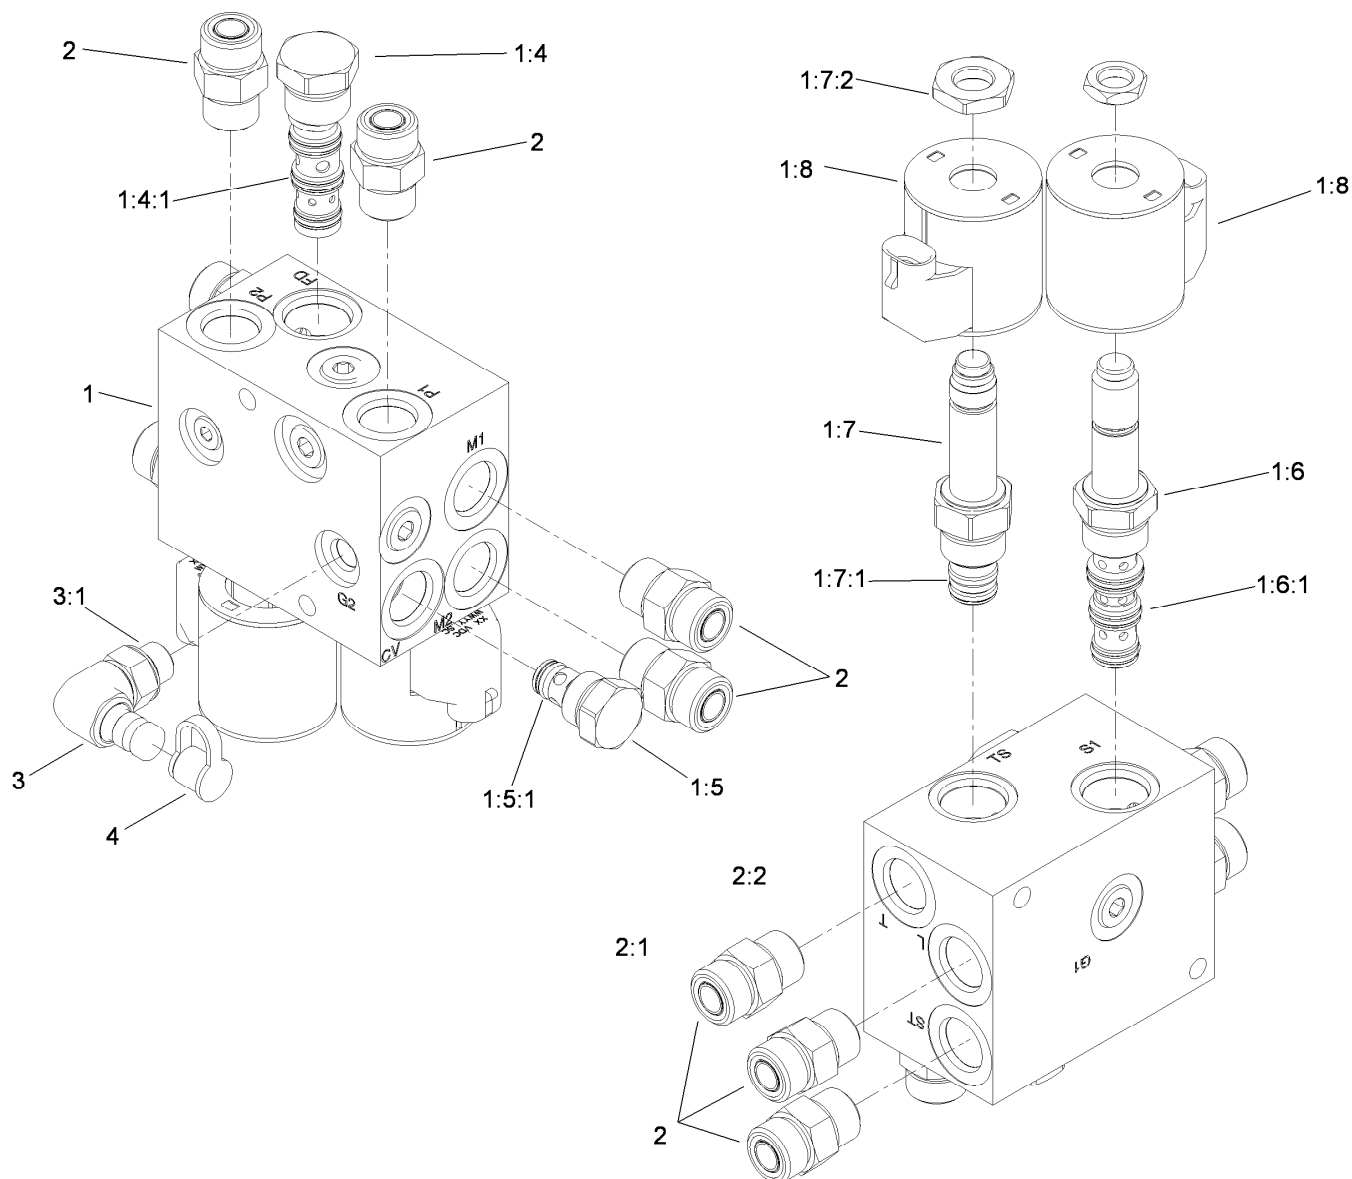


Fan Drive Manifold Assembly No. 119-3943

Ref.	Part Number	Qty.	Description
1		1	Fan Drive Manifold ASM ●
1:4	115-3024	1	Valve-Flow Divider/Combiner
1:4:1	115-3025	1	Seal Kit
1:5	105-9321	1	Check Valve ASM
1:5:1	105-9156	1	Seal Kit
1:6	115-3023	1	Solenoid Valve ASM
1:6:1	110-8908	1	Spool Valve Seal Kit
1:7	115-3022	1	Relief-Proportional


Ref.	Part Number	Qty.	Description
1:7:1	110-6316	1	Seal Kit
1:7:2	119-7715	1	Nut-Coil
1:8	110-6344	2	Coil-12V, DC
2	340-4	7	Fitting-Straight
2:1	237-30	1	O-Ring
2:2	237-79	1	O-Ring
3	115-9147	1	Fitting-Elbow, 90 DEG
3:1	237-78	1	O-Ring
4	354-79	1	Cap-Dust

 ● Not serviced separately

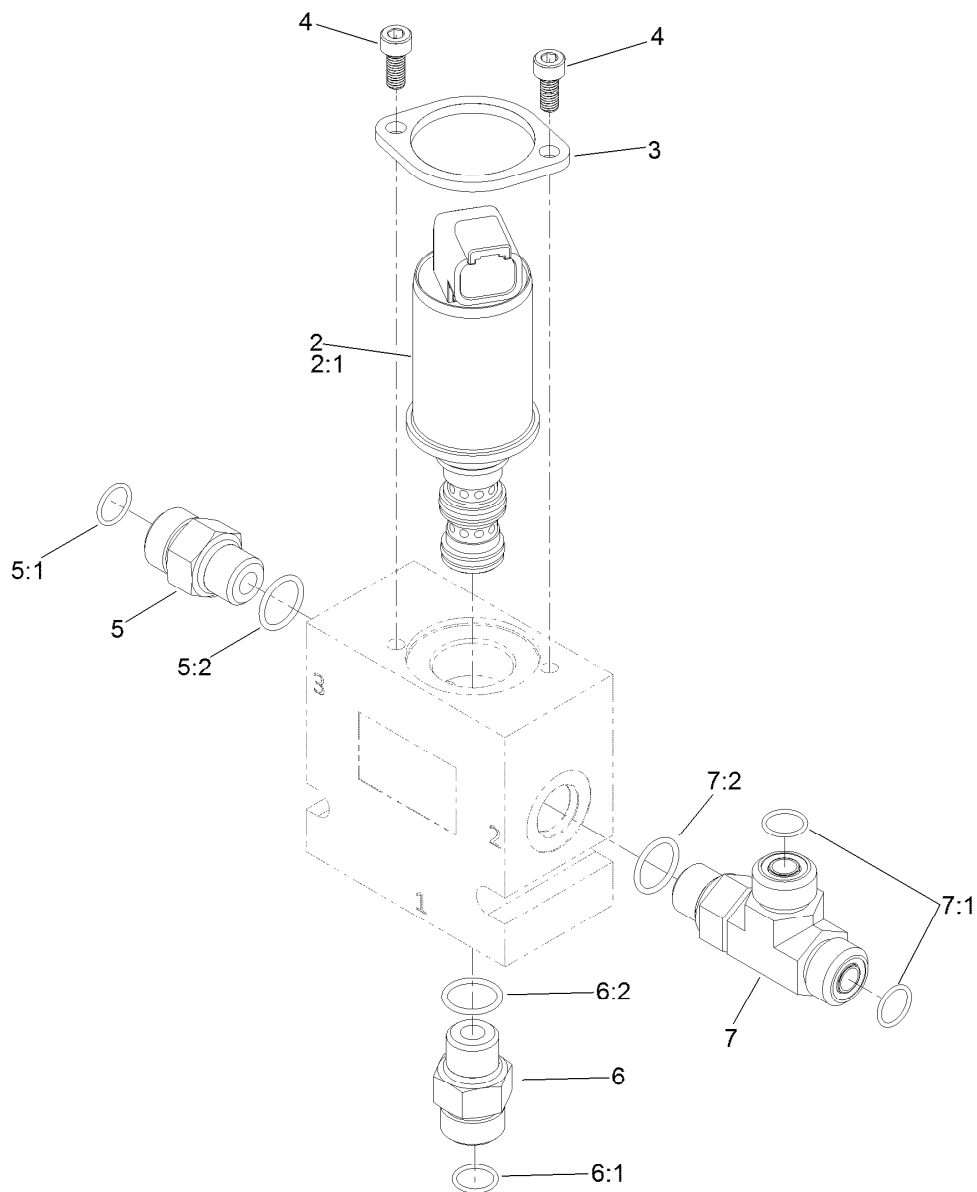


3-Way Valve Manifold Assembly No. 138-6946

Ref.	Part Number	Qty.	Description
2	138-3828	1	Valve-Solenoid, 3 Way 2 Position
2:1	138-3831	1	Seal Kit
3	138-3825	2	Plate-Mounting, Standard
4	138-3827	1	Screw
5	92-9258	1	Adapter-Check
5:1	237-22	1	O-Ring
5:2	237-42	1	O-Ring
6	340-2	1	Fitting-Straight
6:1	237-22	1	O-Ring
6:2	237-42	1	O-Ring
7	340-86	1	Fitting-Tee
7:1	237-22	2	O-Ring
7:2	237-42	1	O-Ring

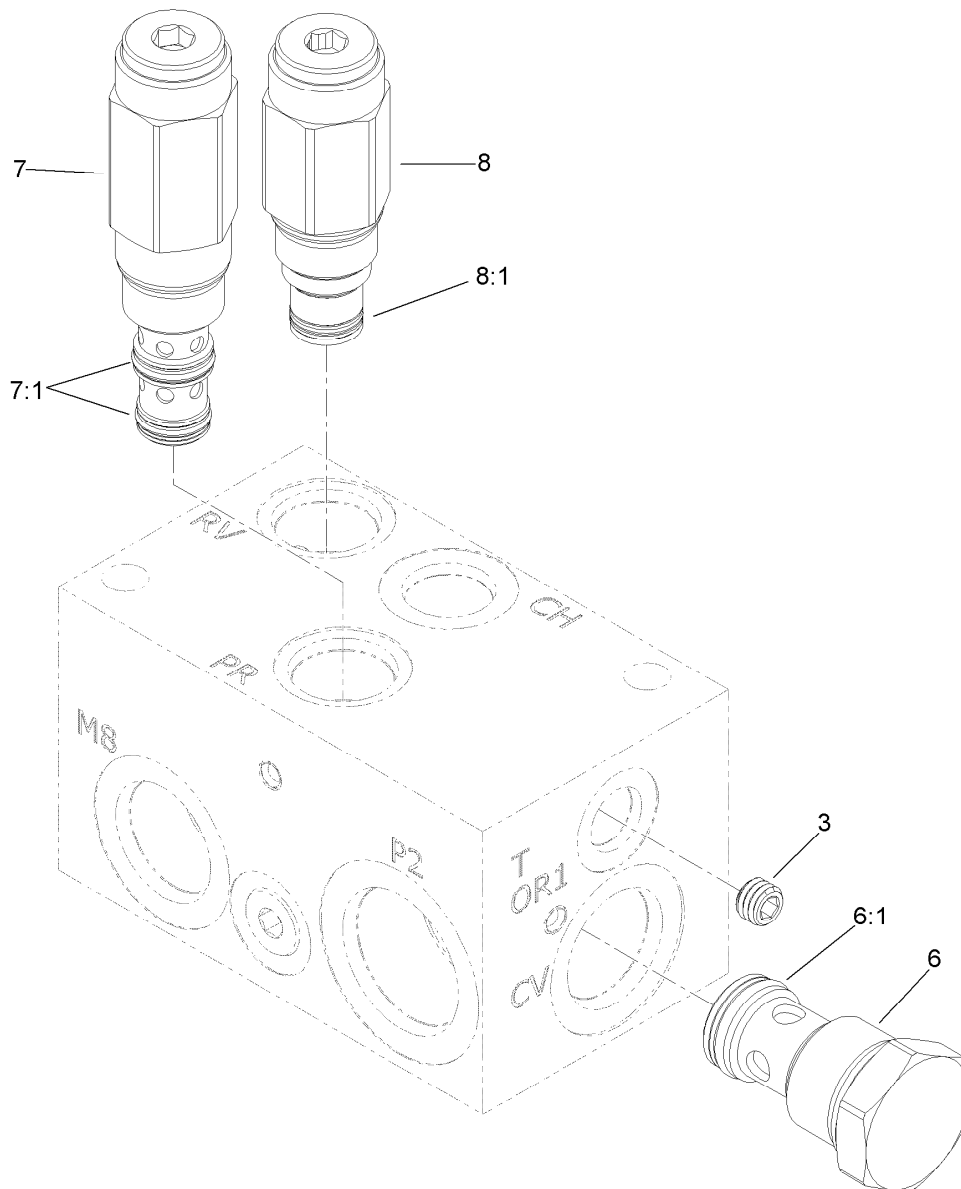 

Rear Traction Manifold Assembly No. 121-3078


Ref.	Part Number	Qty.	Description
3	110-0495	1	Plug-Orifice (0.050 Inch)
6	125-4328	1	Valve-Check
6:1	125-4336	1	Seal Kit
7	125-7567	1	Valve-Pressure Reducing
7:1	125-4334	1	Seal Kit
8	125-7566	1	Valve-Relief
8:1	110-6316	1	Seal Kit

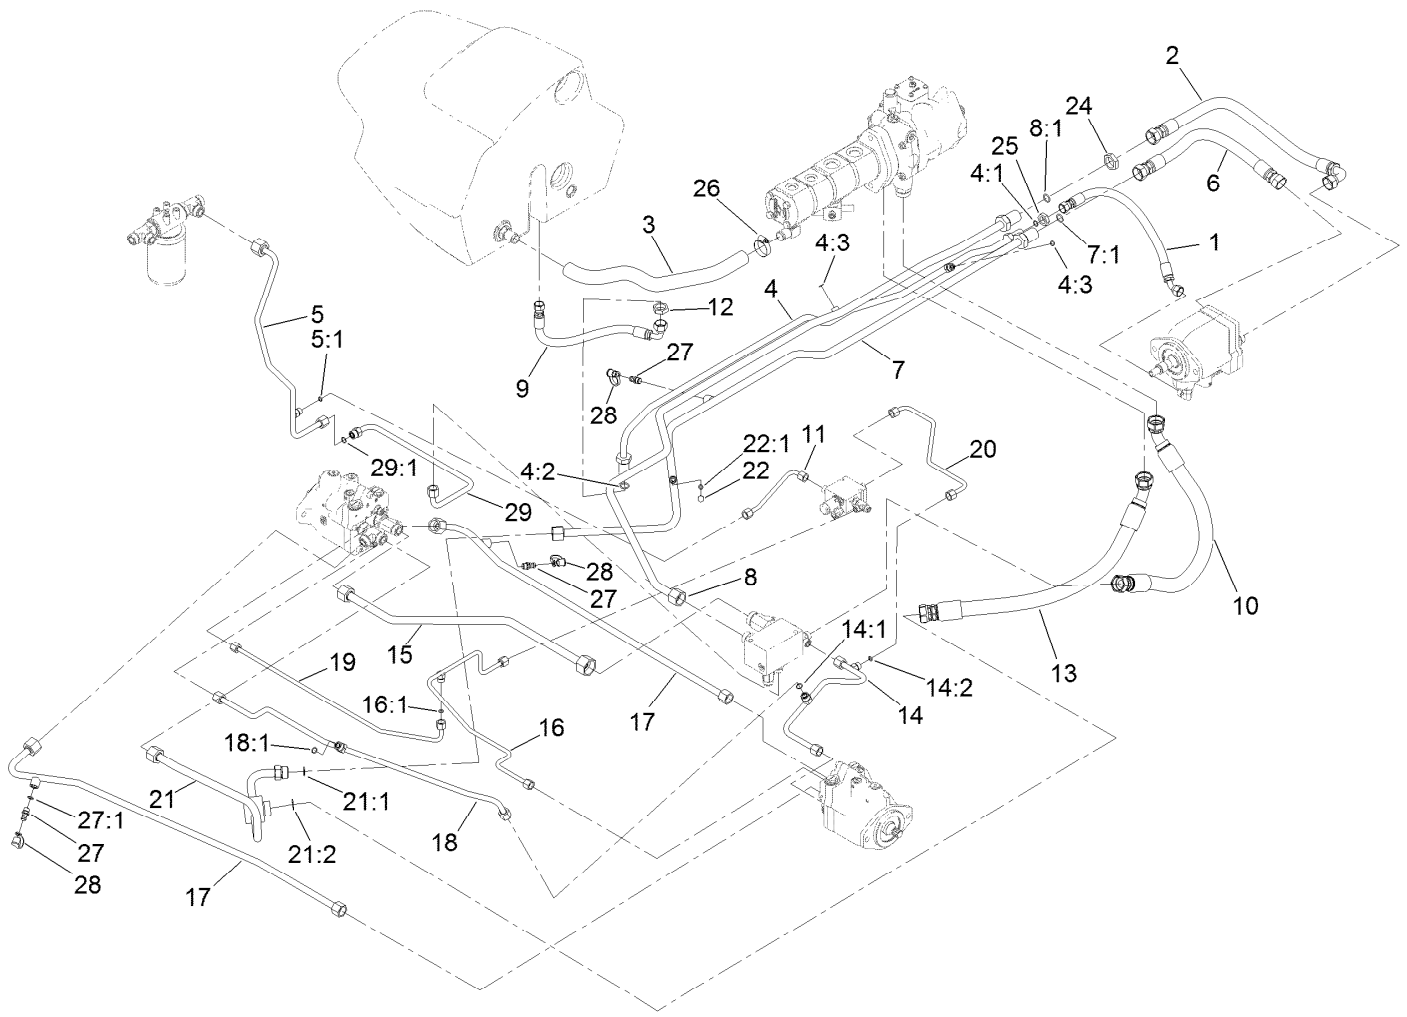 

Traction Hydraulic Circuit Assembly


Ref.	Part Number	Qty.	Description
1	92-2406	1	Hose-HYD
2	104-3789	1	Filter Hose ASM
3	115-4447	1	Hose-Suction
4	130-1647	1	Tube ASM
4:1	237-30	1	O-Ring
4:2	237-65	1	O-Ring
4:3	237-22	2	O-Ring
5	120-8047	1	Tube ASM
5:1	237-22	1	O-Ring
6	120-8053	1	Hose ASM
7	120-8079	1	Tube ASM
7:1	237-58	1	O-Ring
8	130-1653	1	Tube ASM
8:1	237-58	1	O-Ring
9	136-2911	1	Hose ASM
10	125-4559	1	Hose ASM
11	125-4566	1	Tube ASM
12	340-74	1	Nut-Lock, Bulkhead
13	130-1642	1	Hose ASM
14	130-1620	1	Tube ASM
14:1	237-30	1	O-Ring

Ref.	Part Number	Qty.	Description
14:2	237-22	1	O-Ring
15	130-1621	1	Tube ASM
16	130-1622	1	Tube ASM
16:1	237-22	1	O-Ring
17	130-1623	2	Tube ASM
18	130-1624	1	Tube ASM
18:1	237-30	1	O-Ring
19	130-1625	1	Tube ASM
20	130-1627	1	Tube ASM
21	130-1629	1	Tube ASM
21:1	237-58	1	O-Ring
21:2	340-65	1	O-Ring
22	353-512	1	Plug
22:1	237-78	1	O-Ring
24	340-126	2	Nut-Bulkhead
25	340-127	1	Nut-Bulkhead
26	2412-111	1	Clamp-Hose, W/Liner
27	59-7410	3	Fitting-Diagnostic
27:1	237-42	1	O-Ring
28	354-79	3	Cap-Dust

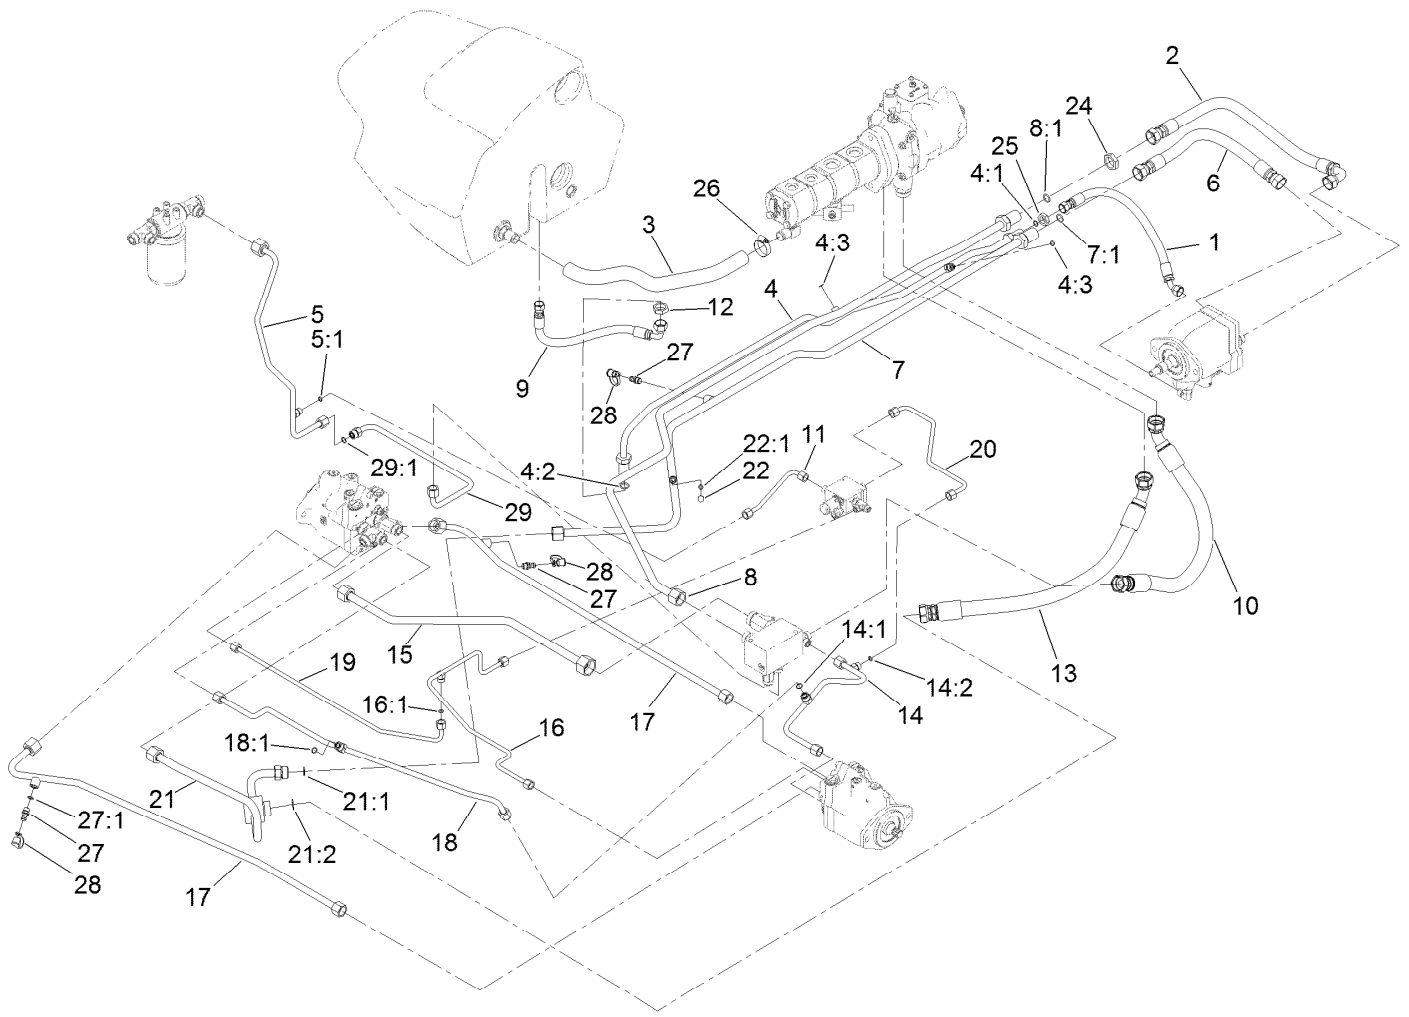 

Traction Hydraulic Circuit Assembly (continued)


Ref.	Part Number	Qty.	Description
29	125-4570	1	Tube ASM
29:1	237-30	1	O-Ring

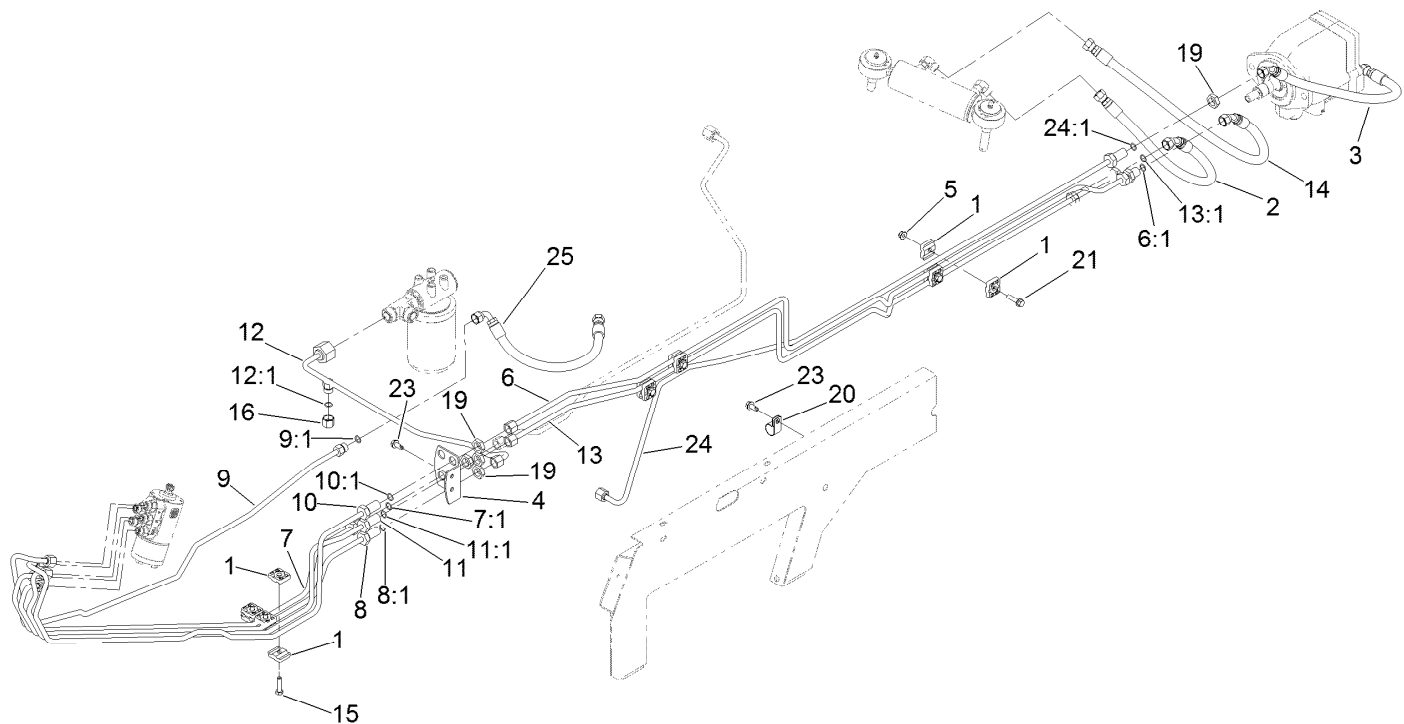 

Steering Hydraulic Circuit Assembly


Ref.	Part Number	Qty.	Description
1	56-7973	12	Clamp-Tube
2	92-7539	1	Hose-HYD
3	92-7595	1	Hose-HYD
4	92-7606-0P	1	Bracket - Bulkhead *b
5	119-4041	3	Nut-HF
6	105-3871	1	Tube ASM
6:1	237-22	1	O-Ring
7	115-4405	1	Tube ASM
7:1	237-22	1	O-Ring
8	115-4406	1	Tube ASM
8:1	237-22	1	O-Ring
9	130-1635	1	Tube ASM
9:1	237-22	1	O-Ring
10	115-4408	1	Tube ASM
10:1	237-22	1	O-Ring
11	115-4409	1	Tube ASM

Ref.	Part Number	Qty.	Description
11:1	237-22	1	O-Ring
12	115-4412	1	Tube ASM
12:1	237-22	1	O-Ring
13	115-9128	1	Tube ASM
13:1	237-22	1	O-Ring
14	125-4560	1	Hose ASM
15	119-4036	3	Screw-HHF
16	340-117	1	Cap
19	340-70	7	Nut-Lock
20	2412-81	1	Clamp-R
21	115-1794	3	Screw-HHF
23	32104-32	3	Screw-HWH
24	120-8052	1	Tube ASM
24:1	237-22	1	O-Ring
25	92-5694	1	Hose-Hydraulic

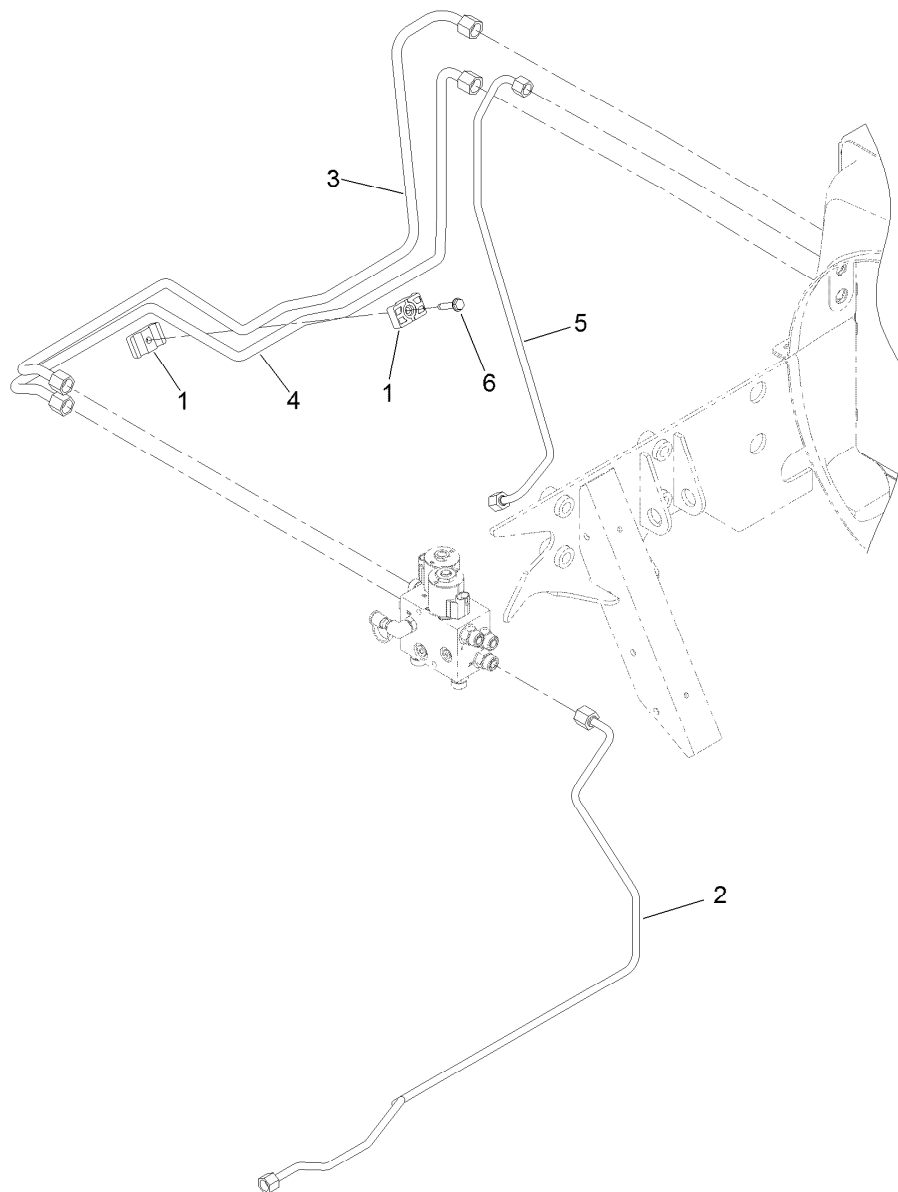 

Fan Drive Hydraulic Circuit Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	56-7976	2	Clamp-Tube
2	115-4422	1	Tube-HYD
3	125-4599	1	Tube ASM
4	125-4601	1	Tube ASM
5	125-4602	1	Tube ASM
6	32144-57	1	Screw-Thd Roll

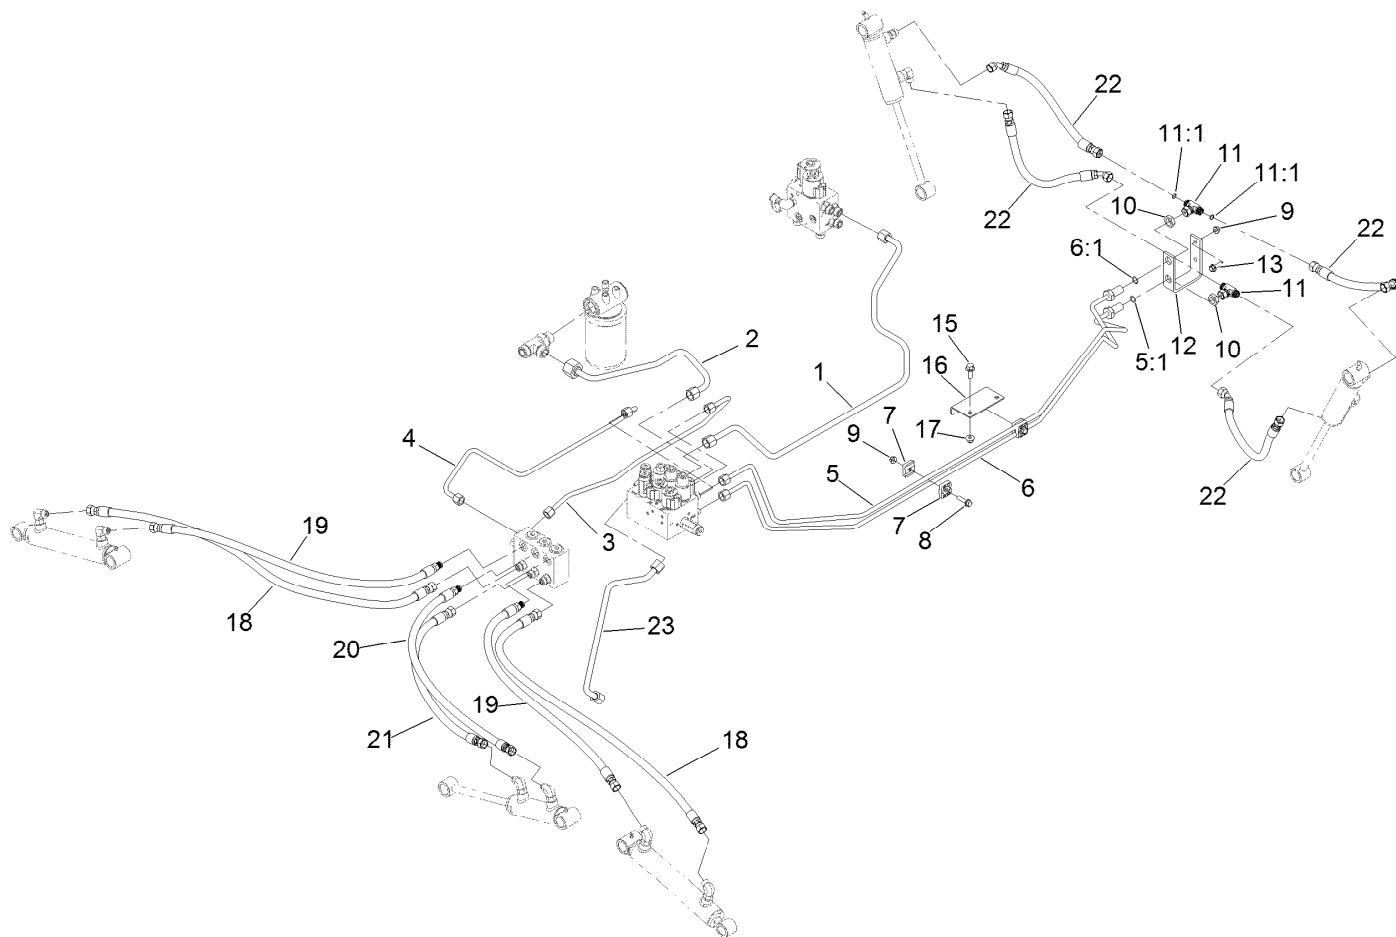 

Lift Circuit Hydraulic Assembly

Ref.	Part Number	Qty.	Description
1	119-1467	1	Tube-HYD
2	130-1648	1	Tube ASM
3	119-1470	1	Tube-HYD
4	119-1471	1	Tube-HYD
5	119-1472	1	Tube-HYD
5:1	237-22	1	O-Ring
6	119-1473	1	Tube-HYD
6:1	237-22	1	O-Ring
7	56-7973	4	Clamp-Tube
8	115-1794	2	Screw-HHF
9	119-4041	4	Nut-HF
10	340-70	2	Nut-Lock
11	340-166	2	Fitting-Tee


Ref.	Part Number	Qty.	Description
11:1	237-22	2	O-Ring
12	105-3992-0P	1	Bracket-Bulkhead
13	3234-17	2	Screw-HHF
15	3234-11	2	Screw-HHF
16	105-3990-0P	1	Bracket-Tube Support
17	119-4042	2	Nut-HF, NI
18	119-3924	2	Hose ASM
19	130-1672	2	Hose ASM
20	119-8632	1	Hose ASM-HYD
21	119-1433	1	Hose ASM
22	105-9238	4	Hose-HYD
23	130-1640	1	Tube ASM

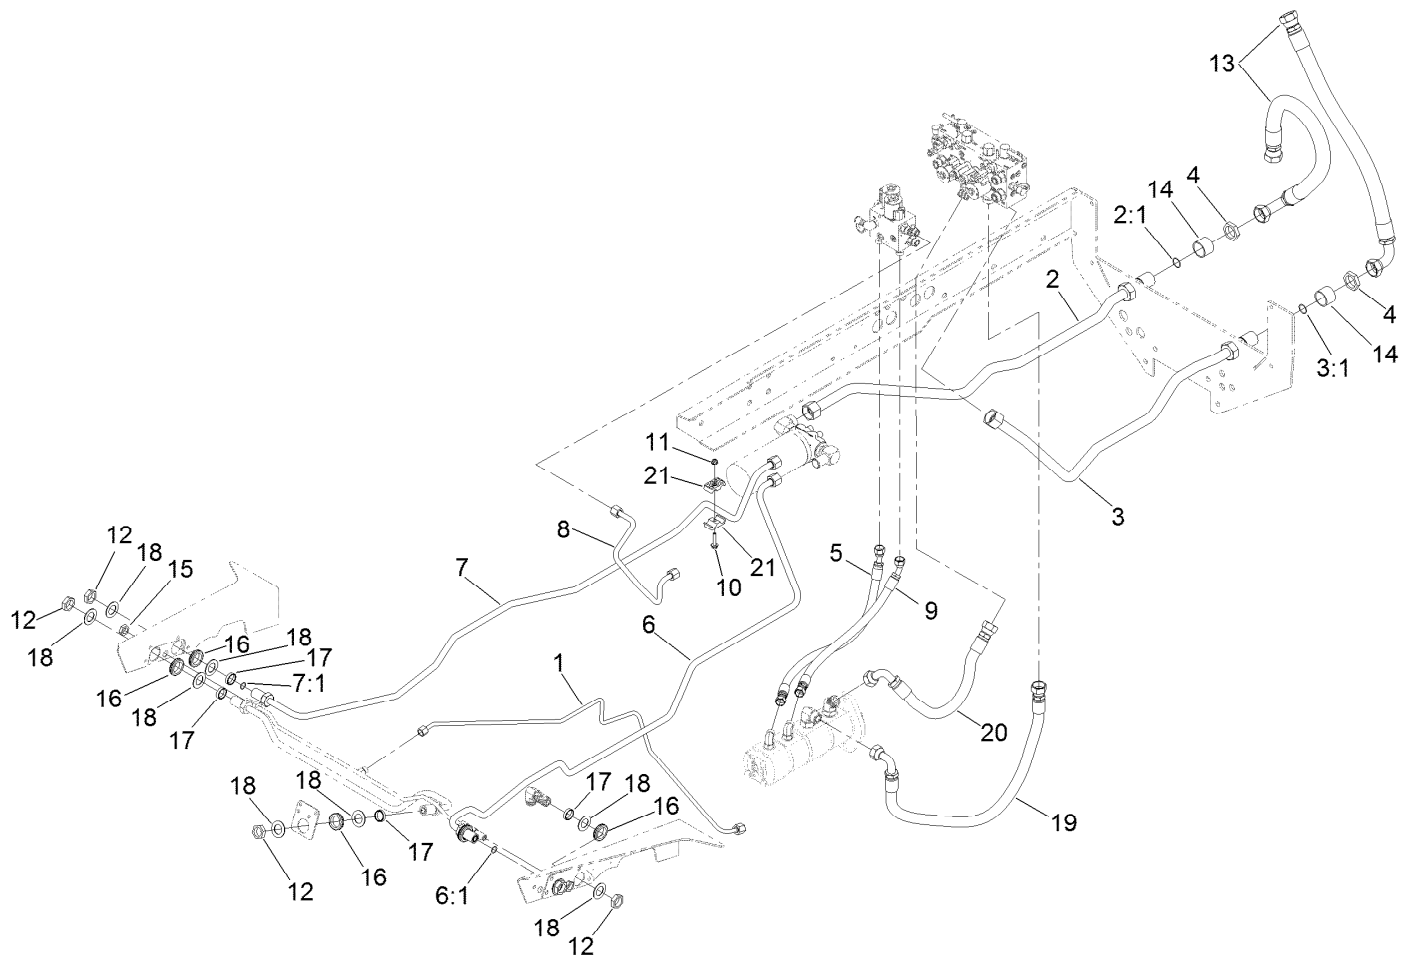 

Hydraulic Mow Circuit Assembly


Ref.	Part Number	Qty.	Description
1	130-1626	1	Tube ASM
2	125-4573	1	Tube ASM
2:1	340-65	1	O-Ring
3	125-4574	1	Tube ASM
3:1	340-65	1	O-Ring
4	340-128	2	Nut-Bulkhead
5	115-4438	1	Hose-HYD
6	119-1453	1	Tube-HYD
6:1	237-65	1	O-Ring
7	119-1454	1	Tube-HYD
7:1	237-65	1	O-Ring
8	119-1469	1	Tube-HYD
9	115-4439	1	Hose-HYD

Ref.	Part Number	Qty.	Description
10	115-1794	1	Screw-HHF
11	119-4041	1	Nut-HF
12	340-74	5	Nut-Lock, Bulkhead
13	108-1689	2	Hose-HYD
14	125-4577	2	Spacer
15	340-70	2	Nut-Lock
16	240-3	5	Grommet-Rubber
17	125-1984	5	Spacer
18	69-9010	10	Washer
19	115-4384	1	Hose-HYD
20	117-4762	1	Hose-HYD
21	56-7971	2	Clamp-Tube

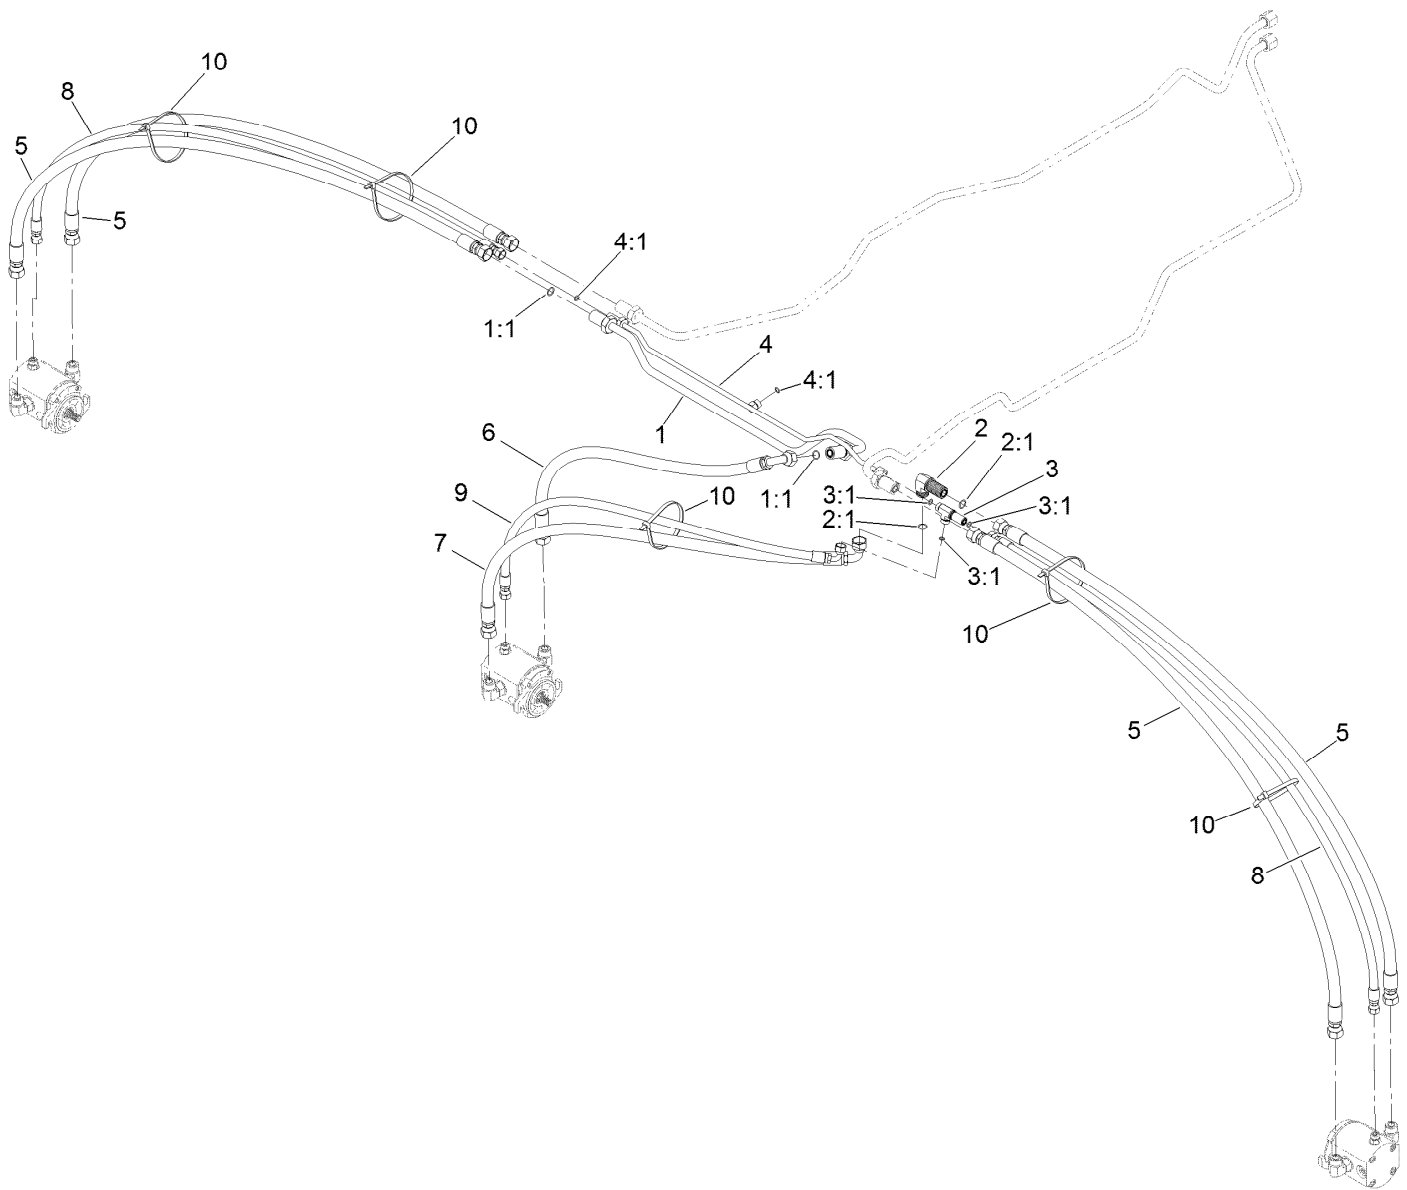 

Front Mow Circuit Hydraulic Assembly


Ref.	Part Number	Qty.	Description
1	119-1466	1	Tube-HYD
1:1	237-65	2	O-Ring
2	340-72	1	Fitting-Bulkhead, 90 DEG
2:1	237-65	2	O-Ring
3	340-68	1	Fitting-Tee, Bulkhead
3:1	237-22	3	O-Ring
4	130-1643	1	Tube ASM
4:1	237-22	2	O-Ring
5	125-1653	4	Hose ASM
6	125-1655	1	Hose ASM
7	98-7402	1	Hose ASM
8	119-3912	2	Hose ASM
9	119-3911	1	Hose ASM
10	3334-945	5	Tie-Cable

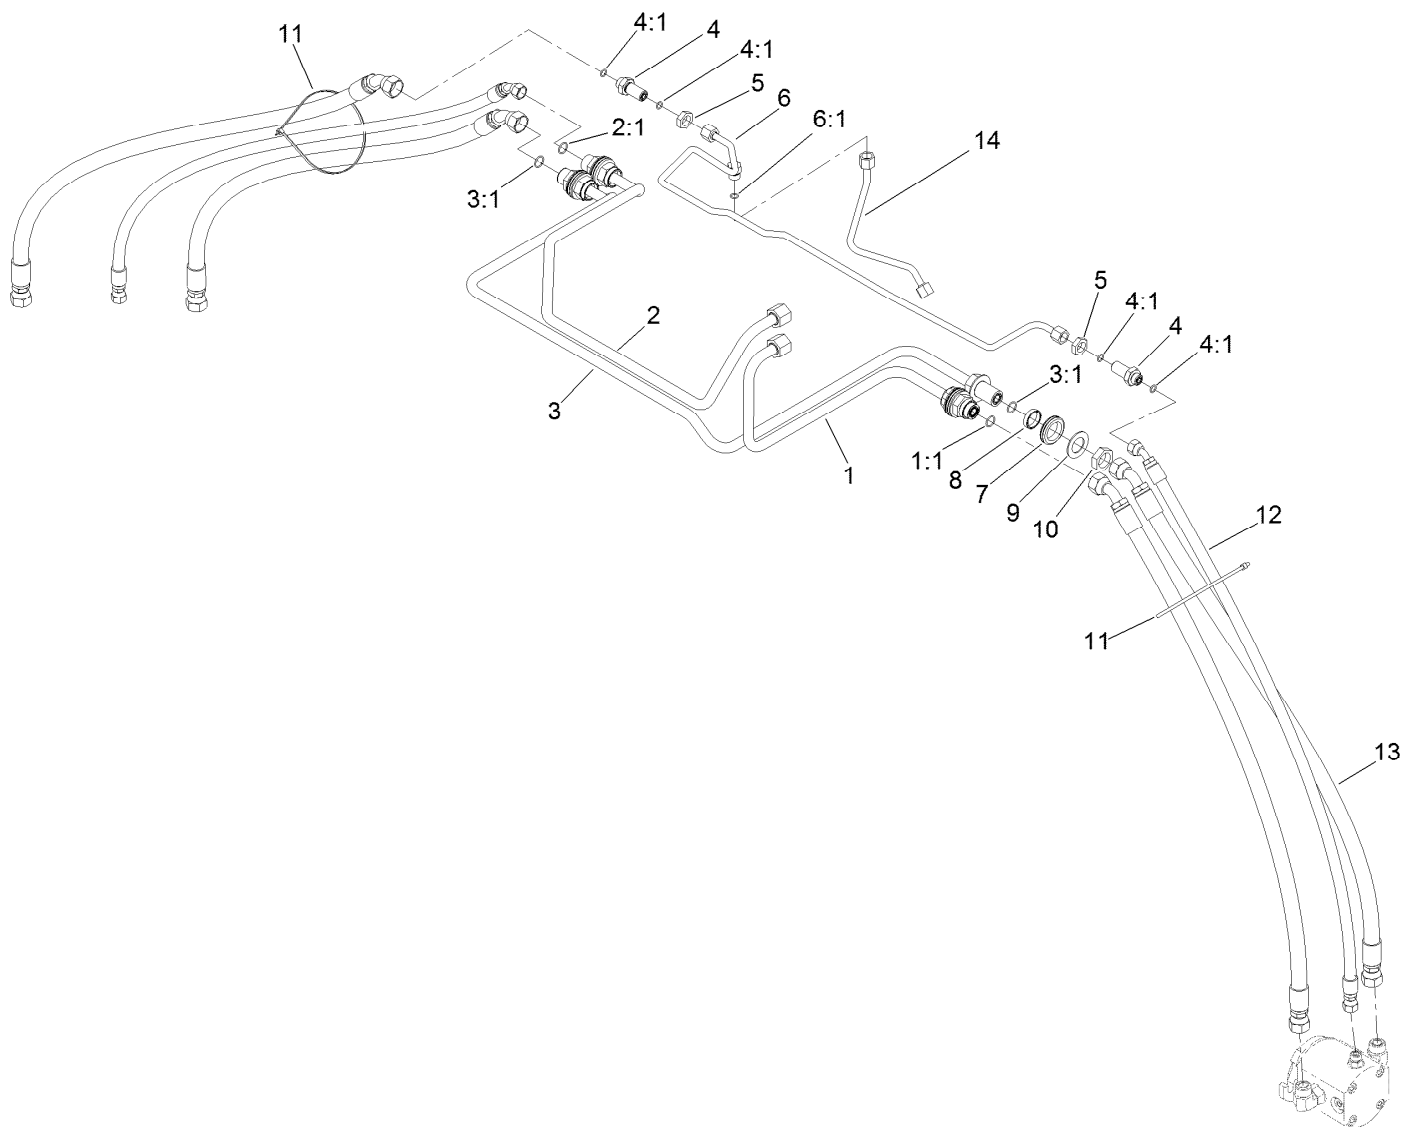 

Rear Hydraulic Mow Circuit Assembly

Ref.	Part Number	Qty.	Description
1	119-1455	1	Tube-HYD
1:1	237-65	1	O-Ring
2	119-1456	1	Tube-HYD
2:1	237-65	1	O-Ring
3	119-1465	1	Tube-HYD
3:1	237-65	2	O-Ring
4	340-71	2	Fitting-Straight, Bulkhead
4:1	237-22	2	O-Ring
5	340-70	2	Nut-Lock
6	130-1630	1	Tube ASM


Ref.	Part Number	Qty.	Description
6:1	237-22	1	O-Ring
7	240-3	4	Grommet-Rubber
8	125-1984	4	Spacer
9	69-9010	8	Washer
10	340-74	4	Nut-Lock, Bulkhead
11	3290-379	2	Tie-Cable
12	119-3914	2	Hose ASM
13	119-3913	4	Hose ASM
14	130-1631	1	Tube ASM

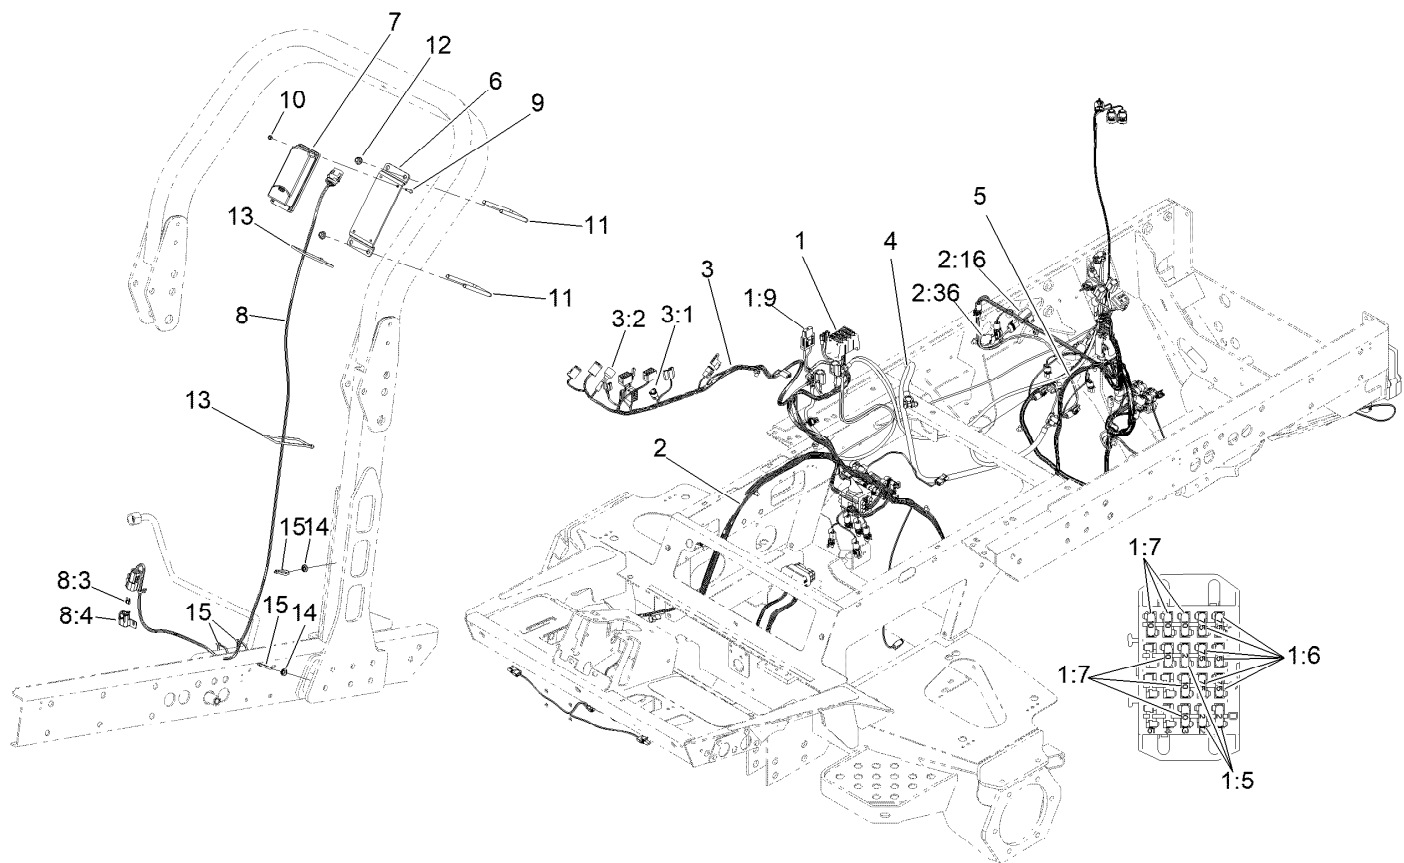 

Electrical Assembly


Ref.	Part Number	Qty.	Description
1	122-1547	1	Harness-Wire, Power Center
1:5	121-8861	3	Fuse-Mini Blade, 2 Amp
1:6	121-8865	6	Fuse-Mini Blade, 7.5 Amp
1:7	121-8866	6	Fuse-Mini Blade, 10 Amp
1:9	114-3342	1	Fuse-Maxi, 60 Amp
2	122-3895	1	Harness-Wire, Main
2:16	32180-019	1	Cover-Fuse, Single
2:36	32180-156	2	Cap-Plug, 6 Way
3	122-3896	1	Harness-Wire, Seat/Console
3:1	32180-043	1	Resistor-120 Ohm
3:2	104-4022	1	Resistor-75 Ohm
4	117-2377	1	Cable-Battery, Negative

Ref.	Part Number	Qty.	Description
5	108-9470	1	Harness-Wire, Fusible Link
6	161-8398-03	1	Bracket-Hmu Mouting
7	161-9001	1	Gateway-Telematics
8	122-2163	1	Harness-Wire
8:3	121-8861	1	Fuse-Mini Blade, 2 Amp
8:4	32180-101	1	Cover-Fuse, Single
9	131-6456	4	Screw-HWH
10	3296-2	4	Nut-Lock, NI
11	136-3644	2	U-Bolt-Sq
12	119-4042	4	Nut-HF, NI
13	3290-379	2	Tie-Cable
14	32180-139	2	Mount-Tie Wrap, Magnetic
15	3290-378	4	Tie-Cable

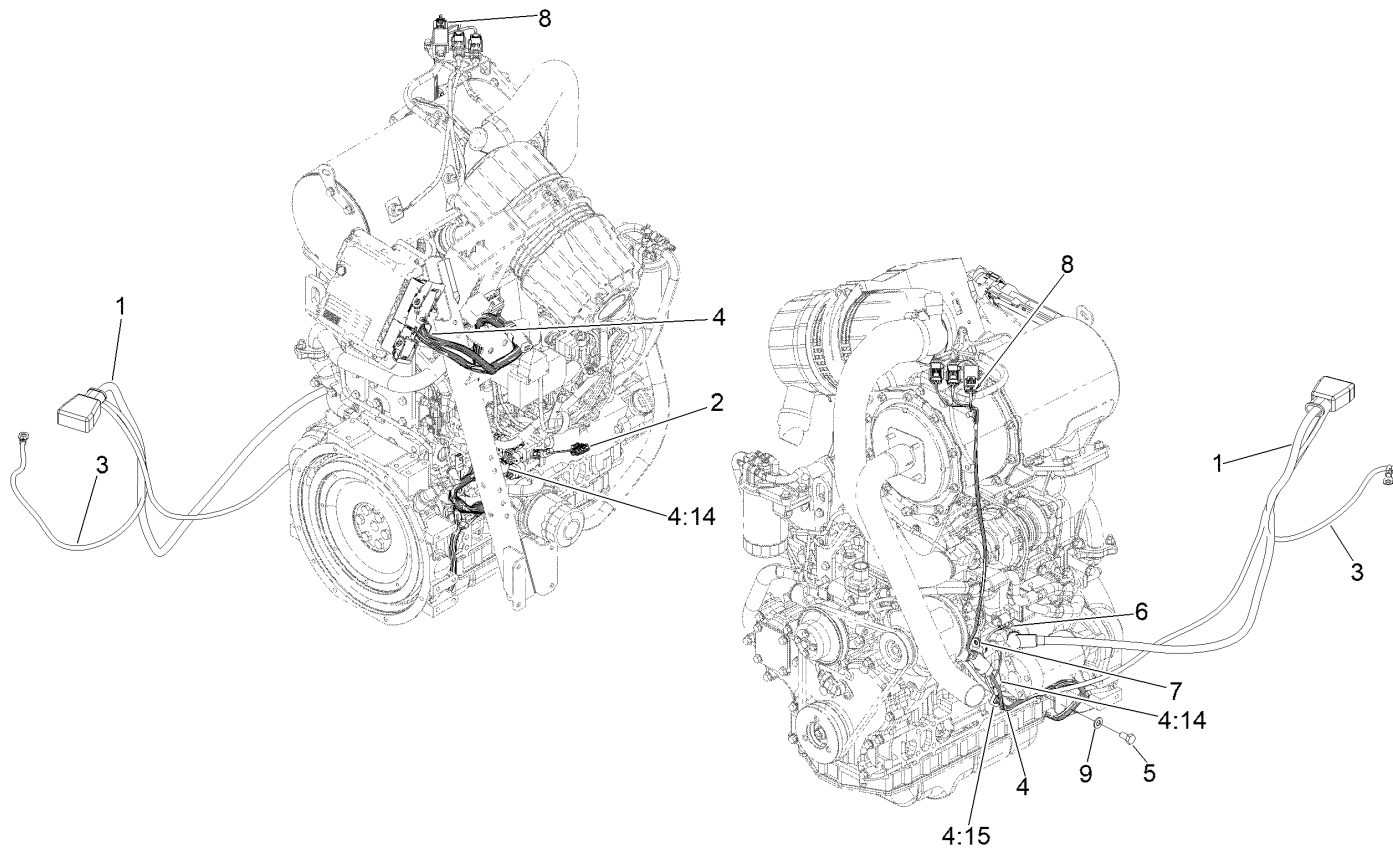 

Battery and Engine Electrical Assembly

Ref.	Part Number	Qty.	Description
1	121-6589	1	Cable-Battery, Positive
2	115-1931	1	Harness-Wire, Fuel Pump Adapter
3	115-1930	1	Cable-Battery, Positive
4	122-2132	1	Harness-Wire, Gm45/4700 Engine T4
4:14	100-4918	2	Diode
4:15	121-8891	1	Resistor (1.6K Ohm)
5	33115-020	1	Screw-HH
6	33004-00	1	Nut-HF
7	33003-00	1	Nut-HF
8	122-2133	1	Harness-Wire, Dpf Sub-Harness
9	33095-00	1	Washer-Flat

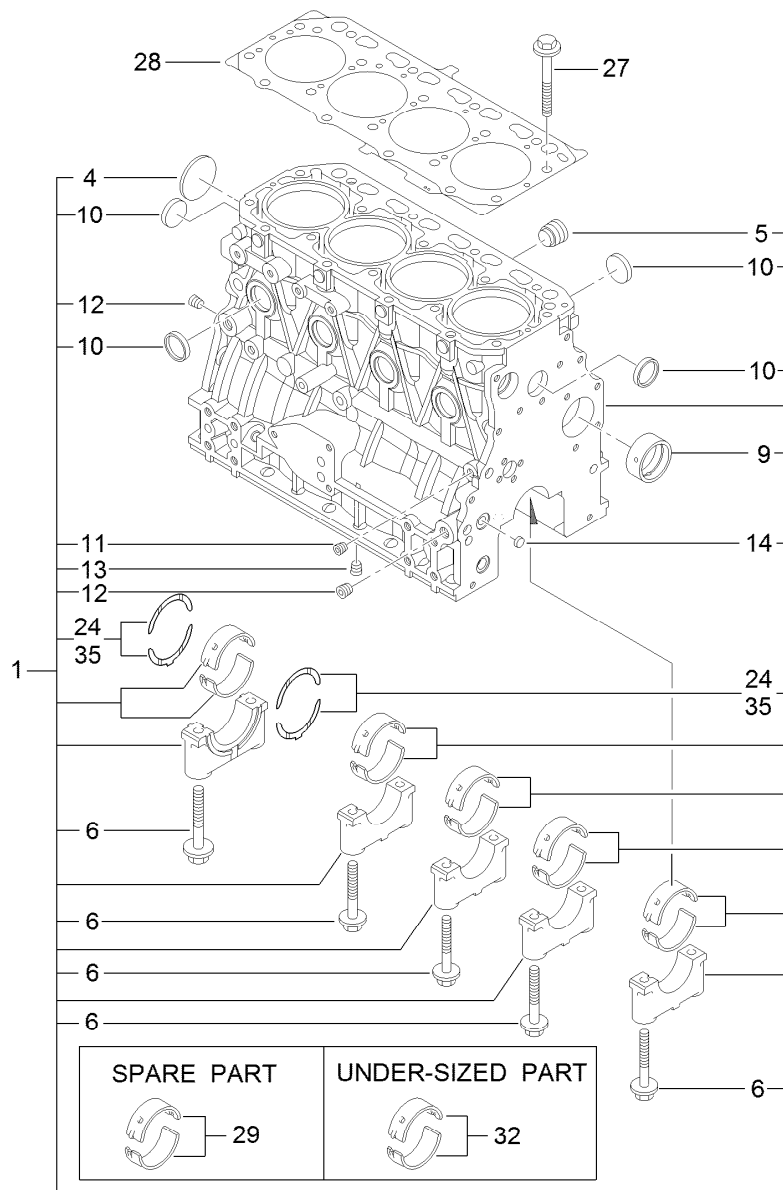 


Cylinder Block Assembly

Ref.	Part Number	Qty.	Description
1	127-3127	1	Cylinder Block ASM
4	125-6980	1	Plug
5	125-7170	1	Plug
6	125-7007	10	Bolt
9	125-7108	1	Bushing
10	125-7239	8	Plug
11	125-6969	1	Plug
12	125-6973	2	Plug

Ref.	Part Number	Qty.	Description
13	125-6973	1	Plug
14	125-7237	1	Plug
24	125-7010	2	Metal-Thrust
27	125-7006	18	Bolt
28	127-3126	1	Gasket-Head, Cylinder
29	125-6981	5	Metal-Main
32	125-7009	5	Metal-Main (0.25)
35	125-7011	1	Metal-Thrust (0.25)

 
Gear Housing Assembly

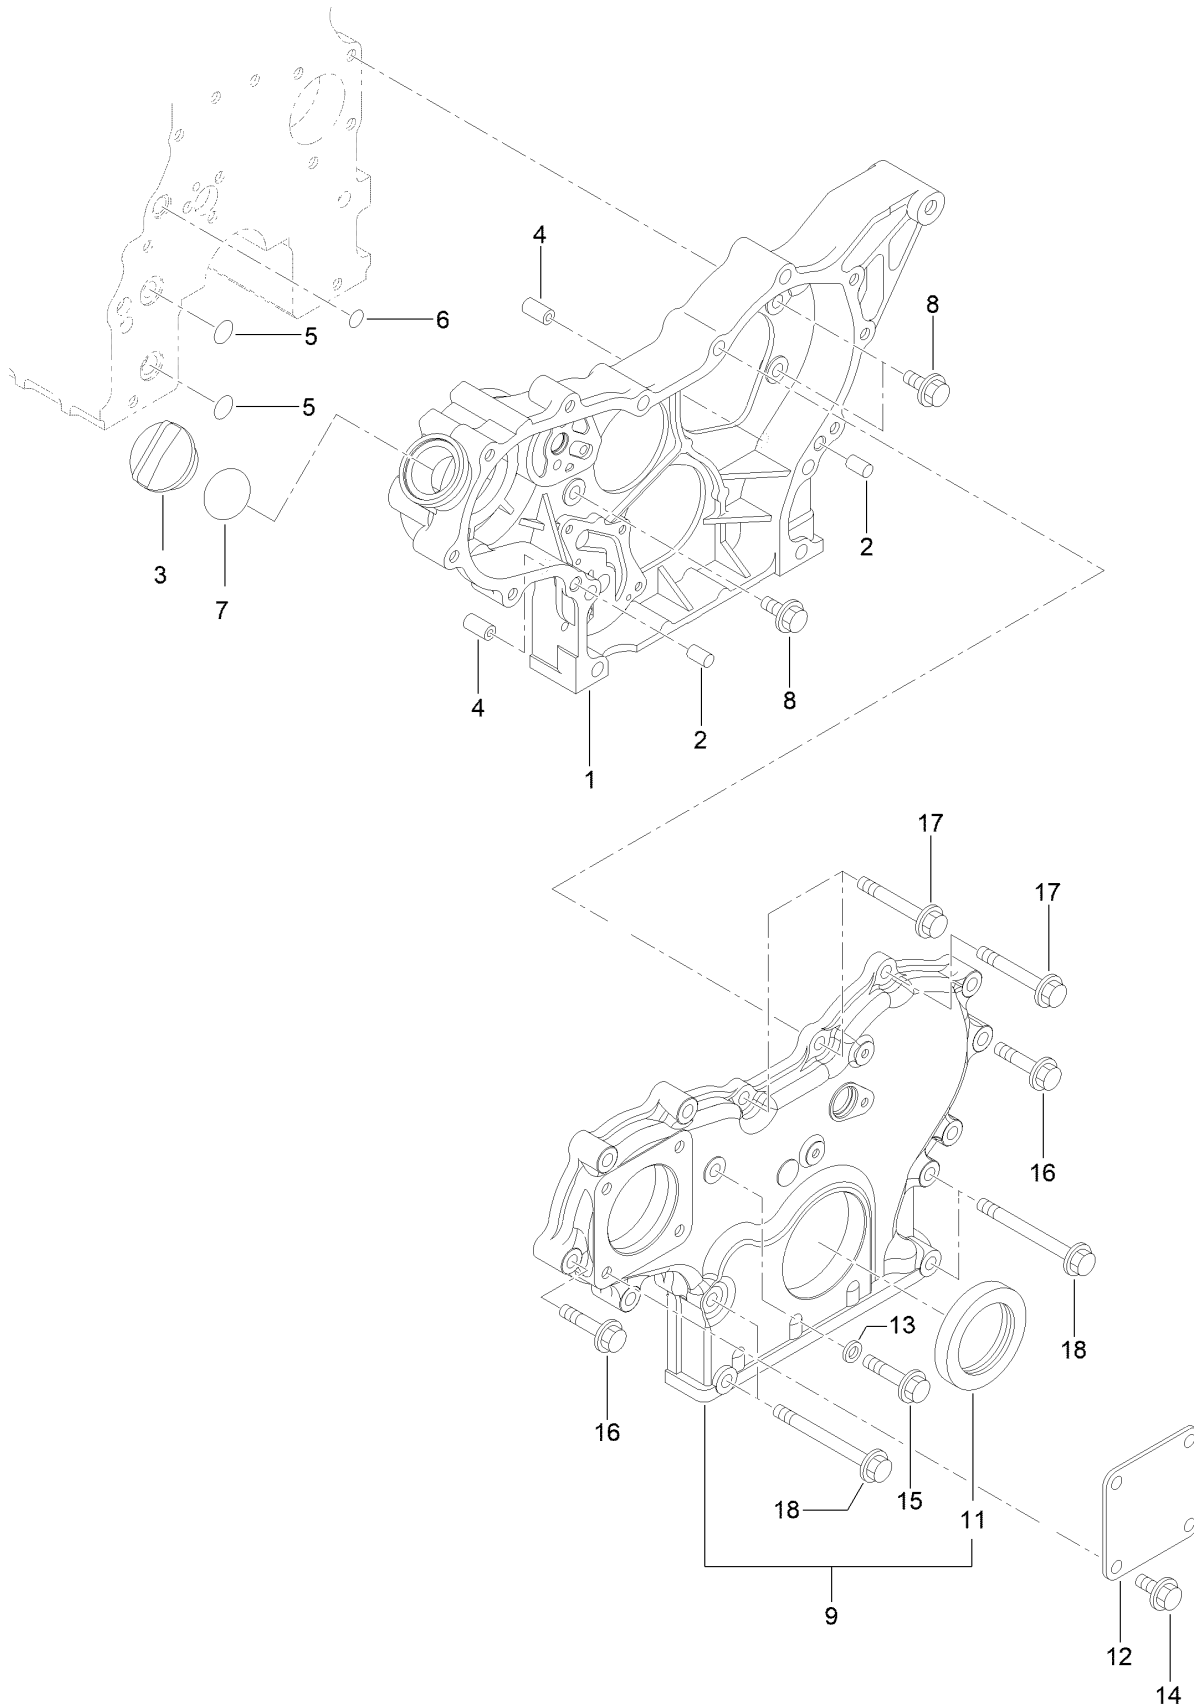

Gear Housing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-7825	1	Case-Gear	11	125-6944	1	Seal-Oil
2	125-6995	2	Pin	12	125-6977	1	Cover
3	125-6972	1	Cover-Filler	13	125-7174	1	Washer-Seal
4	125-7107	2	Pipe	14	125-7214	4	Bolt
5	125-6909	2	O-Ring	15	125-7217	1	Bolt
6	127-2973	1	O-Ring	16	125-7218	7	Bolt
7	125-7197	1	O-Ring	17	125-7222	3	Bolt
8	125-7214	3	Bolt	18	125-7224	4	Bolt
9	127-3024	1	Gearcase Cover ASM				

 
Flywheel Housing and Oil Sump Assembly

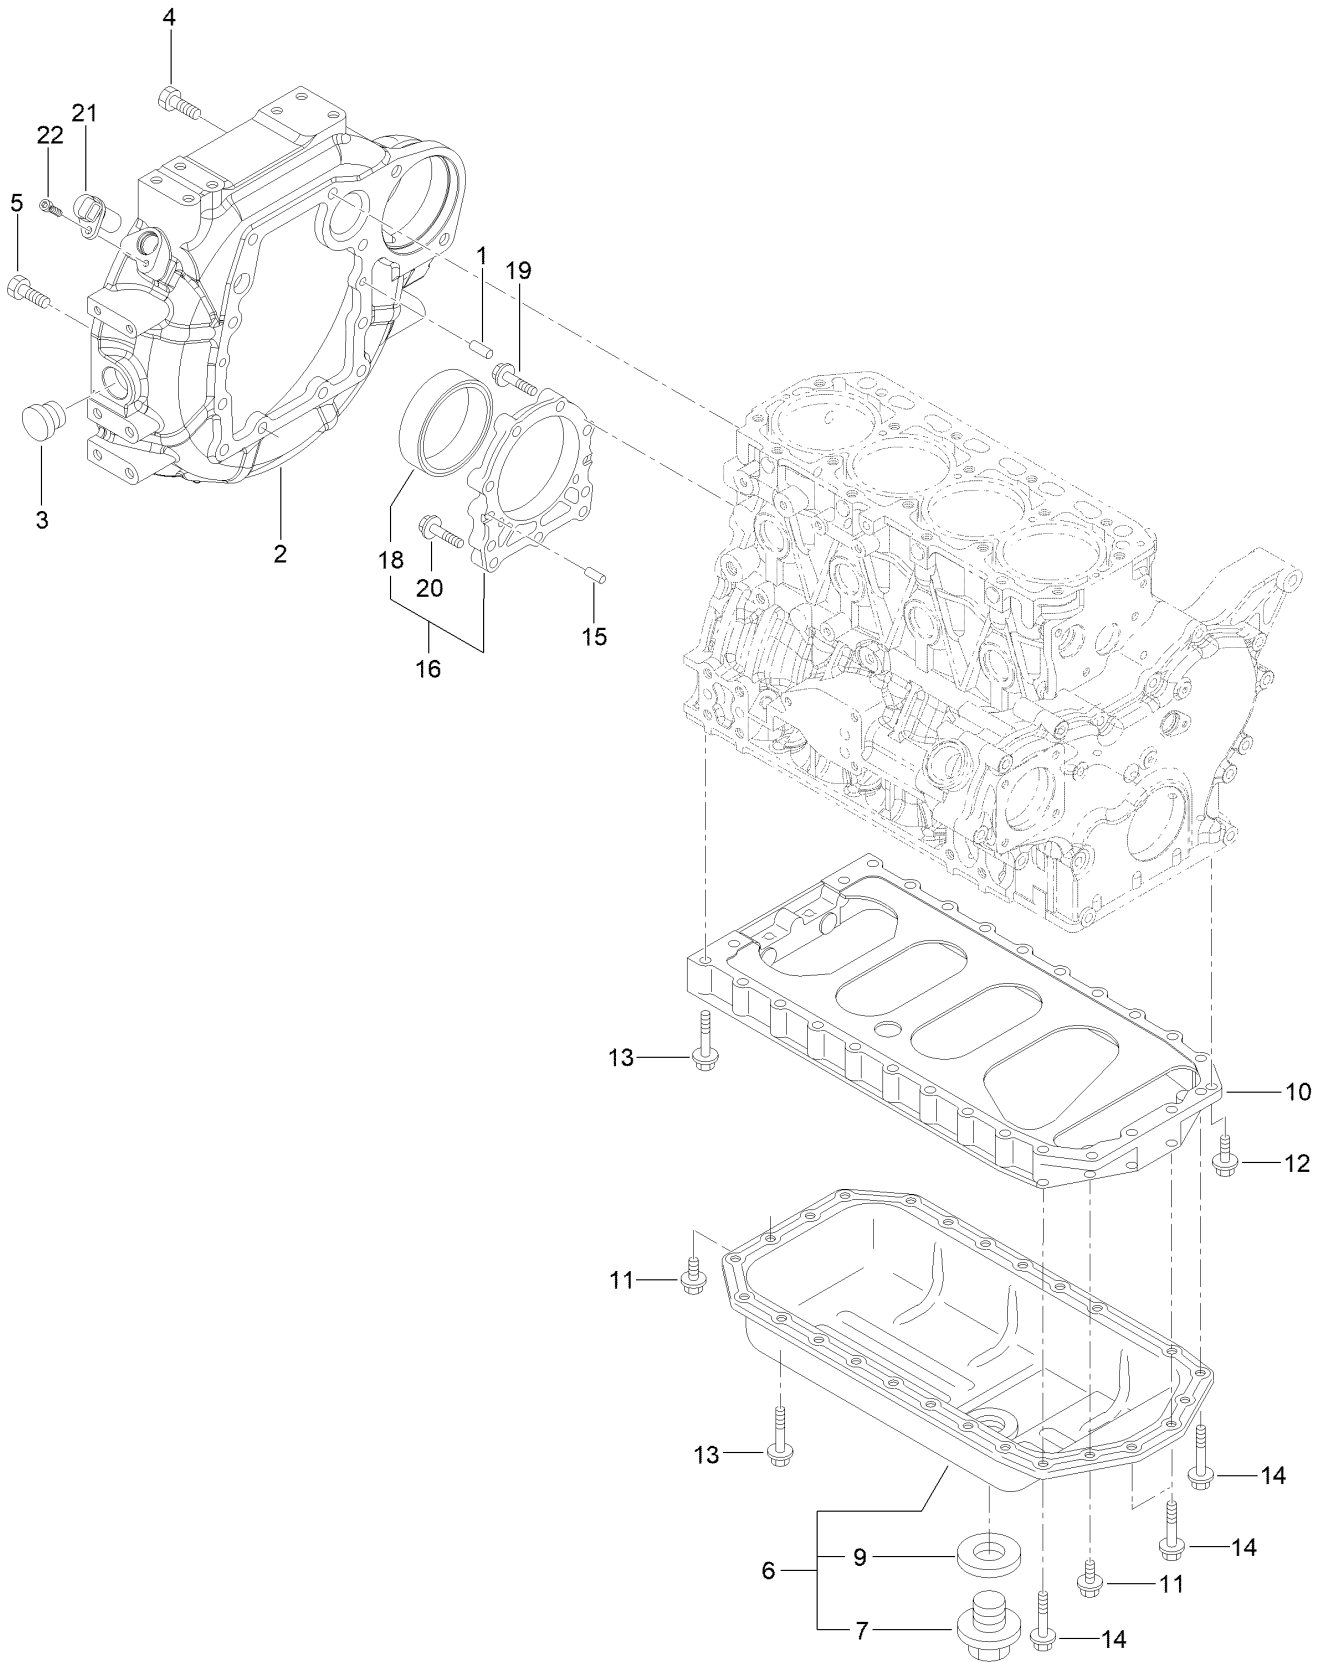

Flywheel Housing and Oil Sump Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-6995	2	Pin	12	125-7215	2	Bolt
2	127-3025	1	Housing-Flywheel	13	125-7219	20	Bolt
3	125-6910	1	Cap	14	125-7220	4	Bolt
4	125-7226	6	Bolt	15	125-6995	2	Pin
5	125-7227	4	Bolt	16	135-4011	1	Case ASM
6	138-7826	1	Oil Pan ASM	18	138-7827	1	Seal, Oil
7	125-6912	1	Plug-Drain	19	125-7045	6	Bolt
9	125-7177	1	Washer-Seal	20	125-7217	3	Bolt
10	125-7035	1	Spacer	21	127-3062	1	Sensor-Rev, Flywheel
11	125-7214	4	Bolt	22	127-3184	1	Bolt

 
Cylinder Head and Cover Assembly

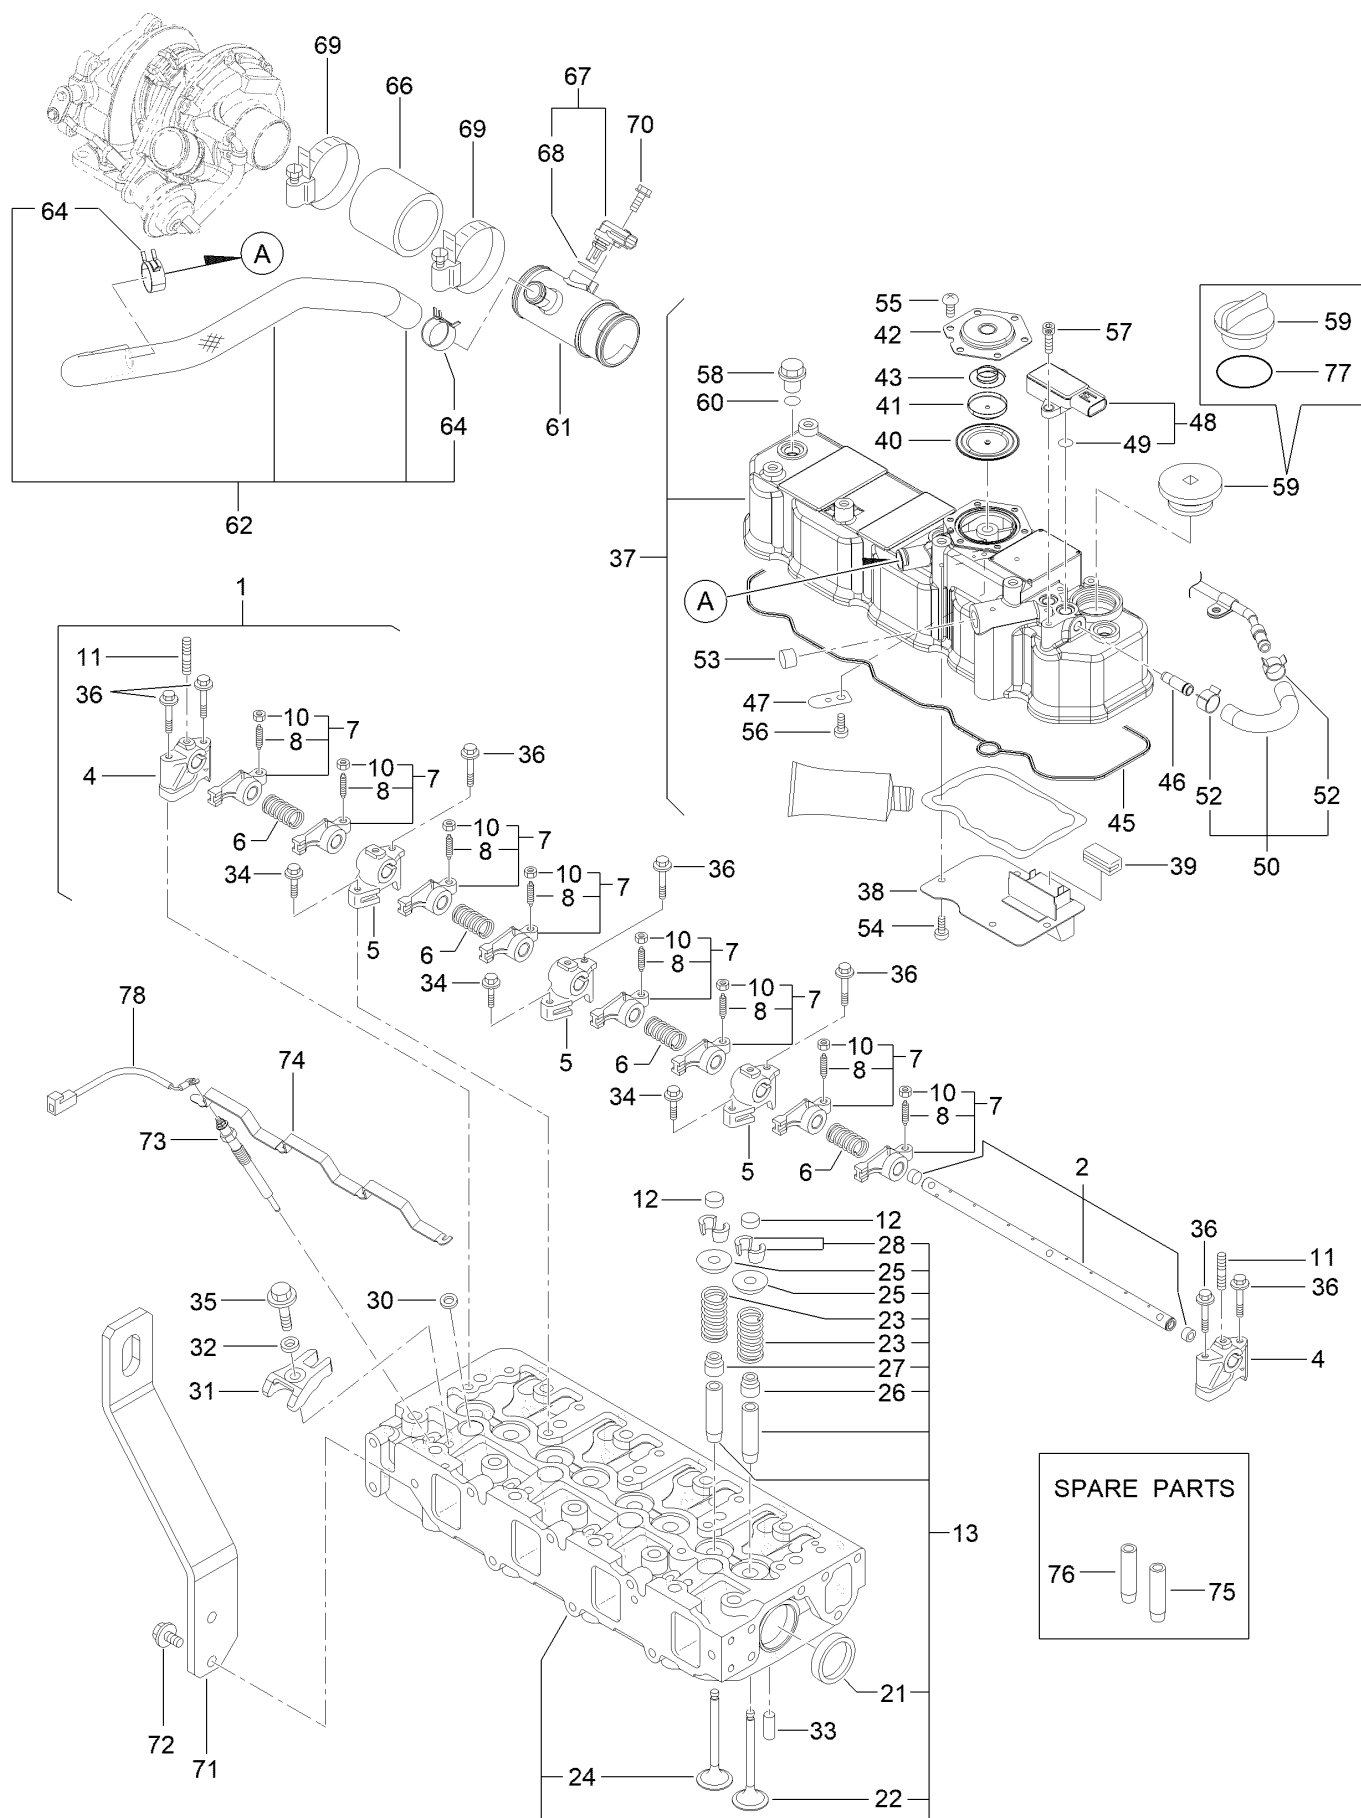

Cylinder Head and Cover Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-3005	1	Shaft ASM	43	125-6962	1	Spring-Diaphragm
2	127-3006	1	Shaft	45	127-3106	1	Gasket-Cover
4	127-2974	2	Support	46	127-3026	1	Joint
5	127-2975	3	Support	47	125-6994	1	Spring
6	127-2995	4	Spring	48	127-3029	1	Sensor-Pressure
7	127-2989	8	Arm-Rocker	49	127-3032	2	O Ring-Sensor, Pressure
8	125-7013	8	Screw-Adjust, Valve	50	127-3040	1	Hose ASM
10	125-7014	8	Nut	52	127-3041	2	Clip-Hose
11	127-3183	3	Stud	53	125-6913	1	Plug
12	127-2996	8	Cap-Valve	54	125-7186	4	Screw
13	127-3132	1	Cylinder Head ASM	55	125-7186	6	Screw
21	125-7240	2	Plug	56	125-7186	1	Screw
22	127-2990	4	Valve	57	127-3184	2	Bolt
23	127-3012	8	Spring	58	125-6974	3	Knob
24	127-2994	4	Valve	59	125-6972	1	Cover-Filler
25	127-3013	8	Retainer-Spring	60	93-0418	3	O-Ring
26	127-2986	4	Seal-Stem, Valve	61	127-3128	1	Joint-Breather
27	127-3027	4	Seal-Stem, Valve	62	127-3129	1	Breather Hose ASM
28	127-3186	8	Pin-Cotter	64	125-7040	2	Clip-Hose
30	127-3021	4	Gasket-Injector	66	127-3133	1	Hose-Intake
31	127-3028	4	Retainer-Injector	67	127-3030	1	Sensor-Temp, Air
32	127-2980	4	Washer-Injector	68	127-3033	1	O-Ring
33	125-7184	2	Pin-Spring	69	125-7190	2	Clamp-Hose
34	125-7215	3	Bolt	70	125-7208	1	Bolt
35	125-7217	4	Bolt	71	127-3130	1	Lifter-Engine
36	125-7220	7	Bolt	72	125-7595	2	Bolt
37	138-7828	1	Head Cover ASM	73	127-2991	4	Plug-Glow
38	127-2988	1	Plate	74	127-3123	1	Connector-Glow Plug
39	125-7012	1	Baffle	75	127-2979	4	Guide
40	125-6959	1	Diaphragm	76	127-2997	4	Guide-Valve
41	125-6960	1	Plate	77	125-7197	1	O-Ring
42	125-6961	1	Plate-Breather	78	131-2704	1	Harness-Wire


 
Intake Manifold Assembly

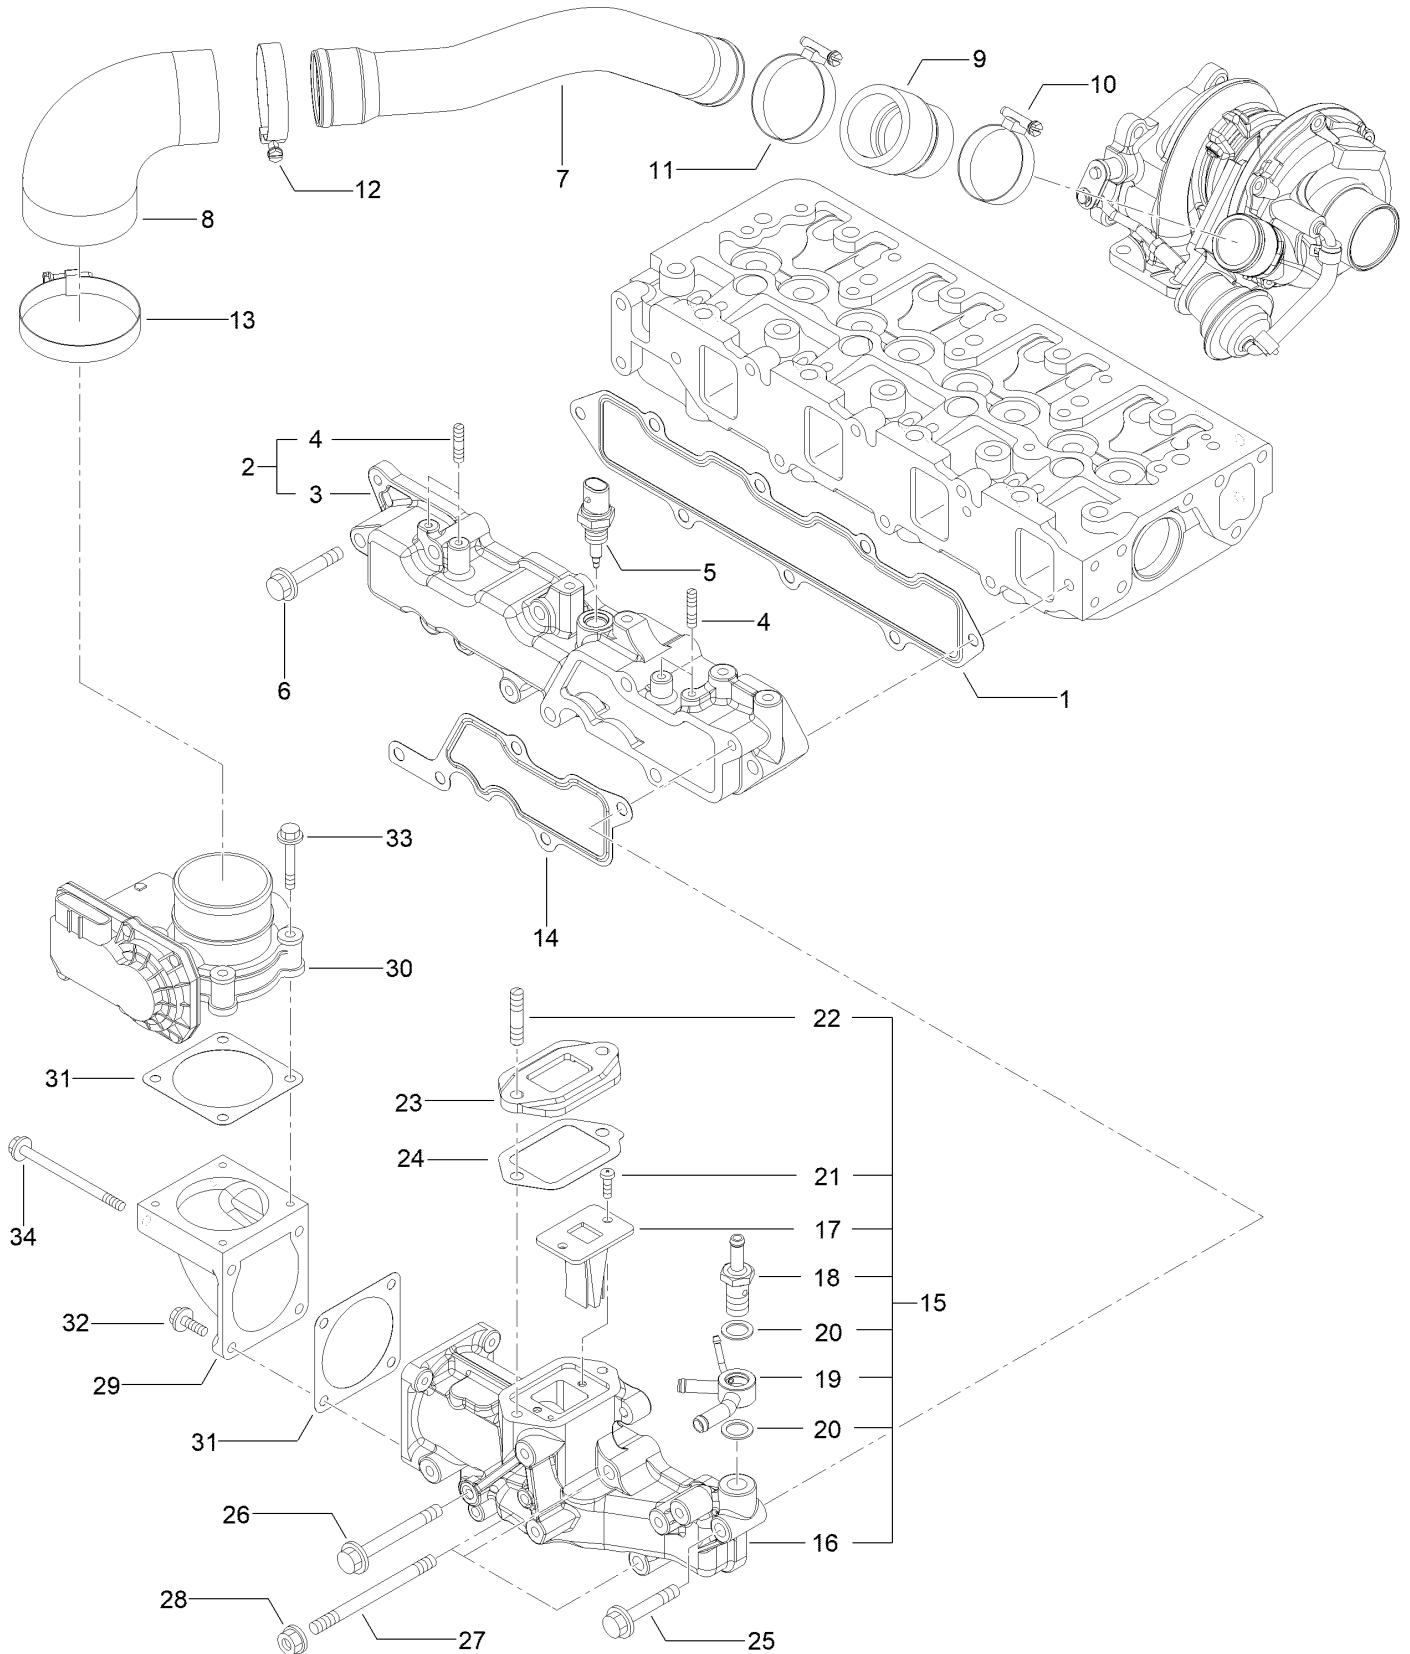

Intake Manifold Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-3107	1	Gasket-Manifold, Intake	18	127-3080	1	Joint-Hose
2	127-3135	1	Intake Manifold ASM	19	127-3081	1	Joint-Hose
3	127-3134	1	Manifold-Intake	20	127-3166	2	Washer-Seal
4	127-3180	4	Stud	21	127-3168	2	Screw
5	137-5167	1	Sensor-Temperature, Air	22	138-7831	2	Stud, M8X 35
6	125-7220	5	Bolt	23	127-3045	1	Spacer-Valve, E G R
7	127-3152	1	Duct-Suction	24	127-3046	1	Gasket-E G R
8	127-3096	1	Joint-Rubber	25	125-7220	1	Bolt
9	127-3153	1	Joint-Rubber	26	127-3178	1	Bolt
10	125-7189	1	Clamp-Hose	27	127-3182	3	Stud
11	127-3170	1	Clamp-Hose	28	125-7229	3	Nut
12	125-7190	1	Clamp-Hose	29	127-3035	1	Bend-Inlet
13	127-3171	1	Clamp-Hose	30	127-3036	1	Body-Throttle
14	127-3034	1	Gasket-Collector	31	127-3037	2	Gasket-Throttle
15	127-3093	1	Intake Collector ASM	32	125-7209	2	Bolt
16	127-3092	1	Collector-Intake	33	125-7211	4	Bolt
17	127-3139	1	Valve-Reed	34	127-3177	2	Bolt

  
Exhaust Manifold Assembly

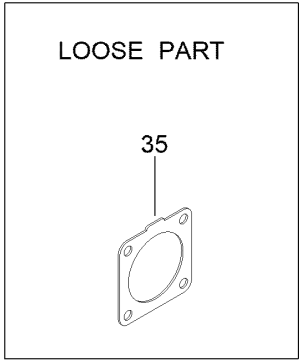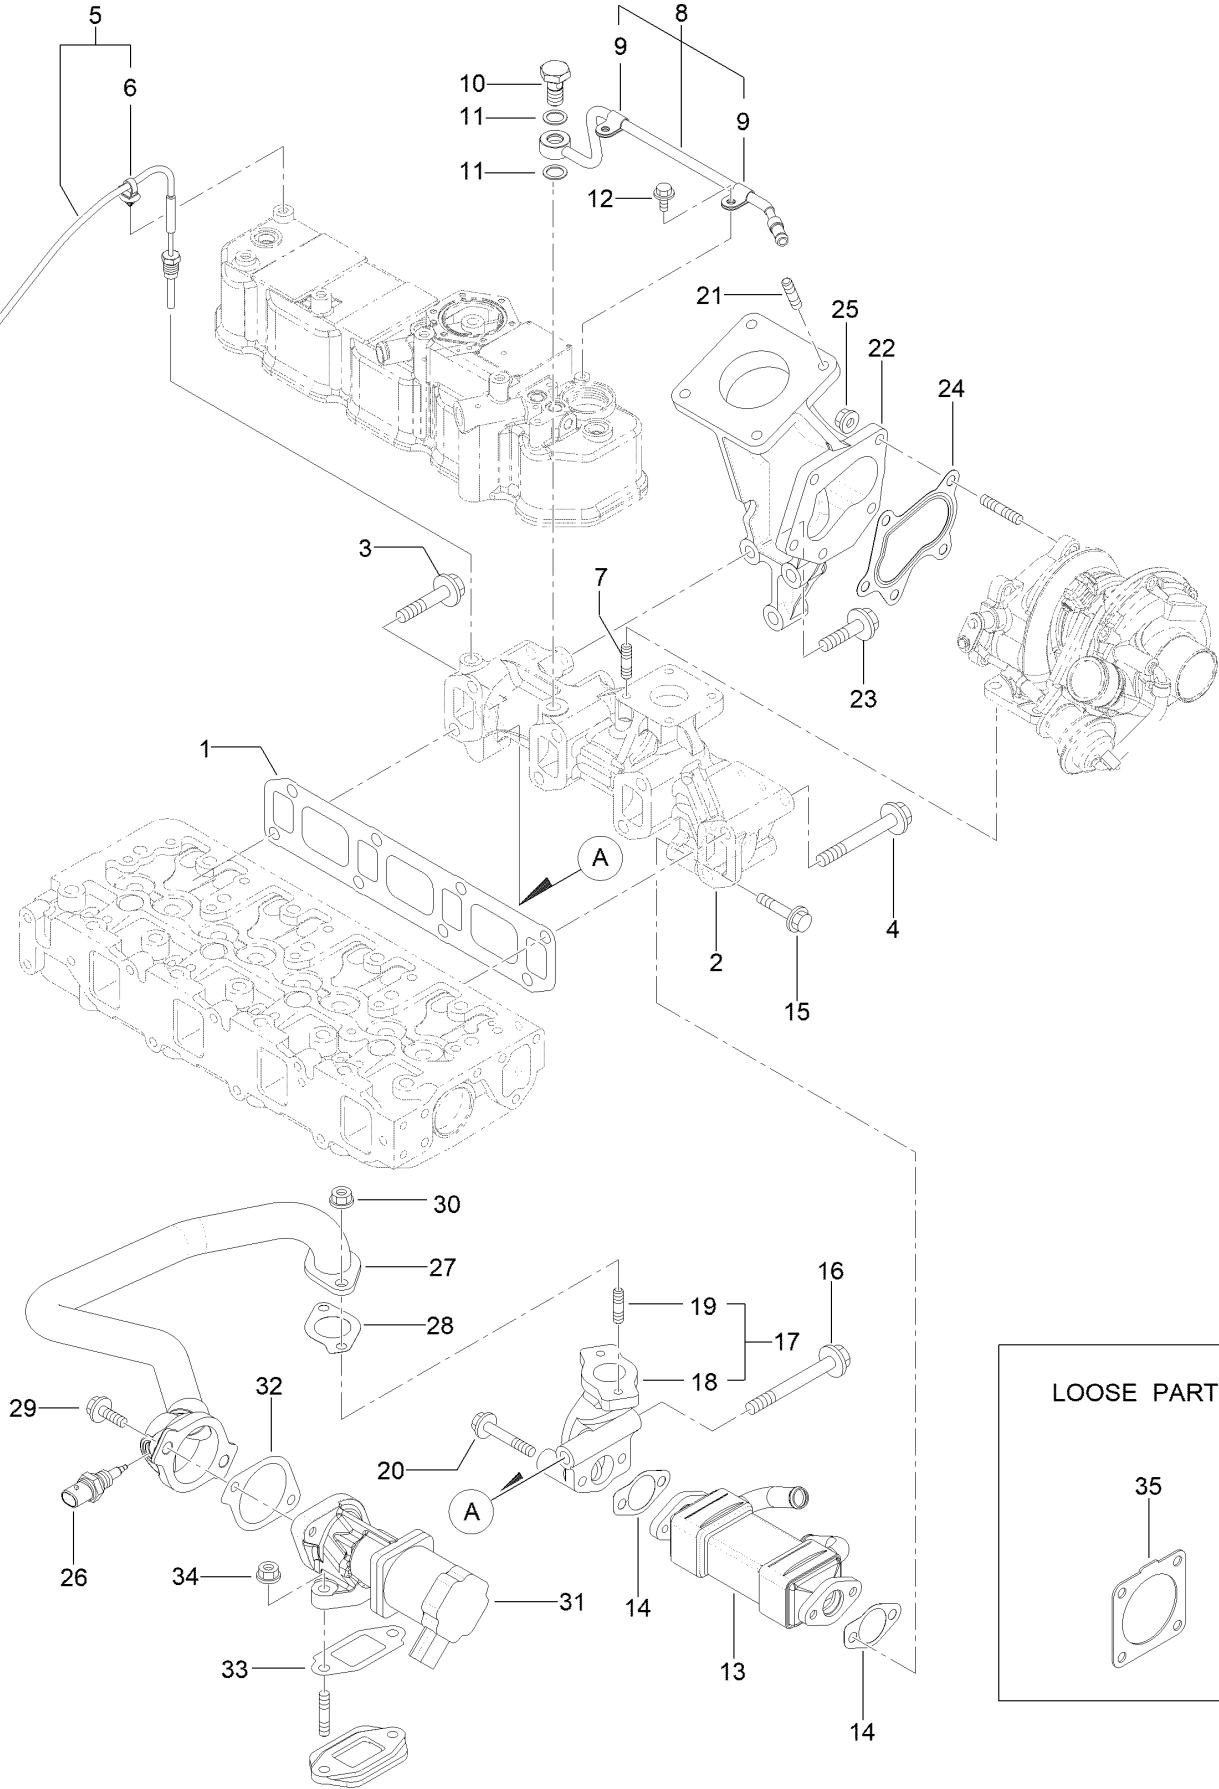

Exhaust Manifold Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-3108	1	Gasket-Manifold, Exhaust	19	125-7043	2	Stud
2	127-3136	1	Manifold-Exhaust	20	125-7220	2	Bolt
3	135-4013	1	Bolt	21	127-2984	4	Stud
4	135-4014	7	Bolt	22	127-3137	1	Pipe-Exhaust
5	127-3140	1	Sensor-Temp, Exhaust	23	133-6792	3	Bolt
6	127-3087	1	Band-Clip	24	125-7071	1	Gasket
7	125-7043	4	Stud	25	125-7229	5	Nut
8	127-3038	1	Exhaust Pipe ASM	26	137-5168	1	Sensor-Gas Temp, E G R
9	127-3173	2	Clamp	27	127-3109	1	E G R Pipe ASM
10	127-3039	1	Bolt-Joint, Pipe	28	127-3016	1	Gasket
11	127-3174	2	Gasket	29	125-7215	2	Bolt
12	125-7206	2	Bolt	30	125-7229	2	Nut
13	127-3042	1	Cooler-E G R	31	127-3110	1	Valve-E G R
14	127-3043	2	Gasket-Cooler, E G R	32	127-3050	1	Gasket-Intake Valve, E G R
15	135-4015	2	Bolt	33	127-3051	1	Gasket-Out Valve, E G R
16	135-4016	1	Bolt	34	125-7229	2	Nut
17	127-3048	1	E G R Pipe ASM	35	127-3019	1	Gasket
18	127-3049	1	Pipe-Out, E G R				

 
Diesel Particulate Filter Assembly

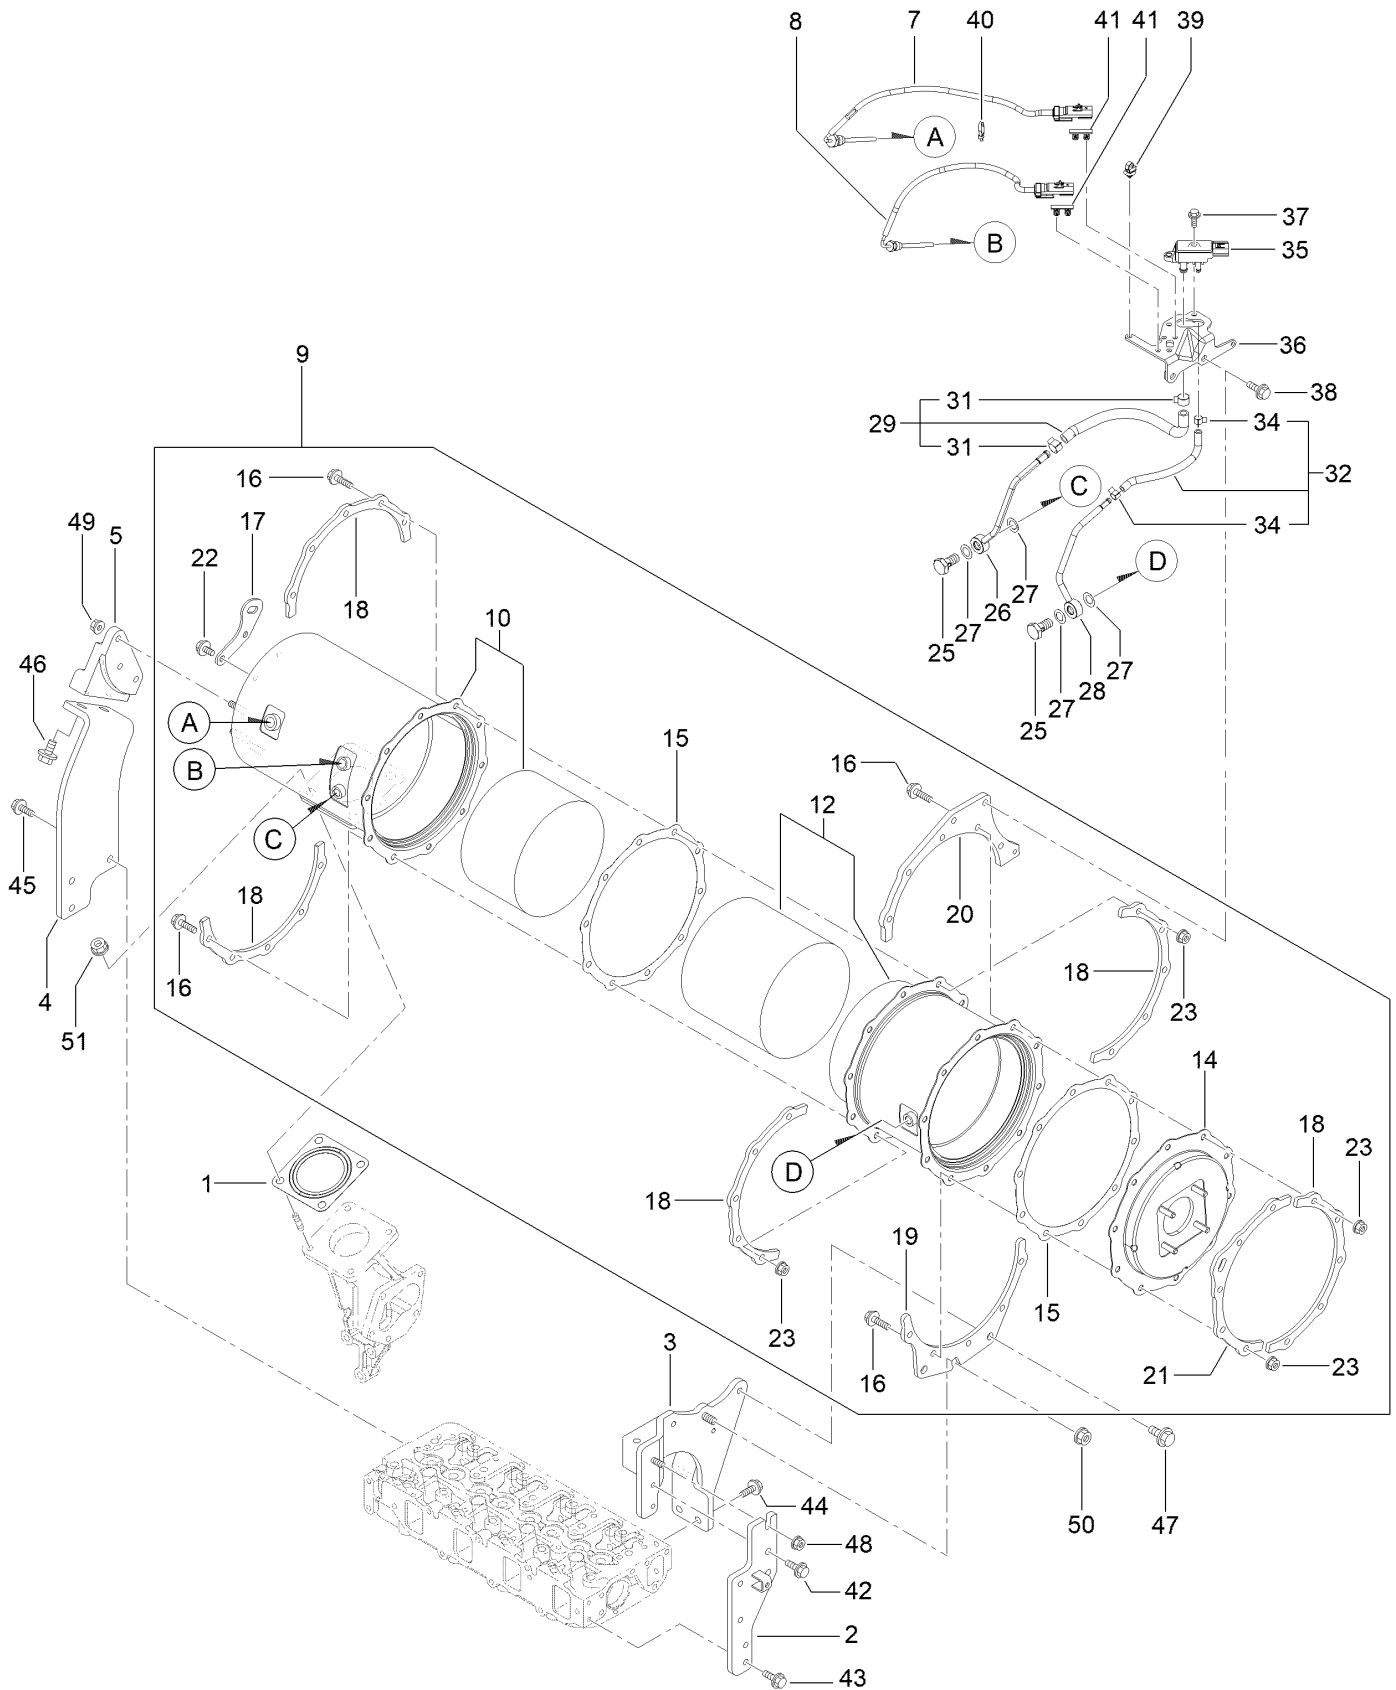

Diesel Particulate Filter Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-2987	1	Gasket-Silencer	28	127-3165	1	Exhaust Pressure Pipe ASM
2	127-3095	1	Stay-D P F	29	127-3114	1	Exhaust Hose ASM
3	139-4533	1	Stay-D P F	31	127-3057	2	Clip-Hose
4	127-3149	1	Stay-D P F	32	127-3059	1	Exhaust Pressure Hose ASM
5	127-3150	1	Stay-D P F	34	127-3058	2	Clip-Hose
7	127-4764	1	Sensor-Temp, Exhaust	35	127-3060	1	Sensor-Pressure
8	127-4765	1	Sensor-Temp, Exhaust	36	127-3061	1	Bracket-Sensor, Pressure
9	127-3157	1	D P F ASM	37	125-7208	2	Bolt
10	127-3141	1	Case-Doc	38	125-7595	2	Bolt
12	127-3142	2	Case-Filter, Soot	39	127-3060	1	Sensor-Pressure
14	127-3143	1	Flange-Outlet	40	127-3087	1	Band-Clip
15	127-3162	2	Gasket-D P F	41	127-3088	2	Clip-Connector
16	127-3055	20	Bolt	42	125-7595	2	Bolt
17	127-3144	1	Lifter-D P F	43	125-7595	2	Bolt
18	127-3145	5	Stiffener-D P F, A	44	125-7595	2	Bolt
19	127-3146	1	Stiffener-D P F, B	45	125-7595	3	Bolt
20	127-3158	1	Stiffener-D P F, D	46	127-3179	2	Bolt
21	127-3147	1	Stiffener-D P F, C	47	127-3179	2	Bolt
22	125-7213	2	Bolt	48	125-7229	1	Nut
23	125-7229	20	Nut	49	125-7229	3	Nut
25	127-3039	2	Bolt-Joint, Pipe	50	125-7230	1	Nut
26	127-3164	1	Exhaust Pressure Pipe ASM	51	125-7230	4	Nut
27	127-3056	4	Gasket-Sensor				

 
Turbine Assembly

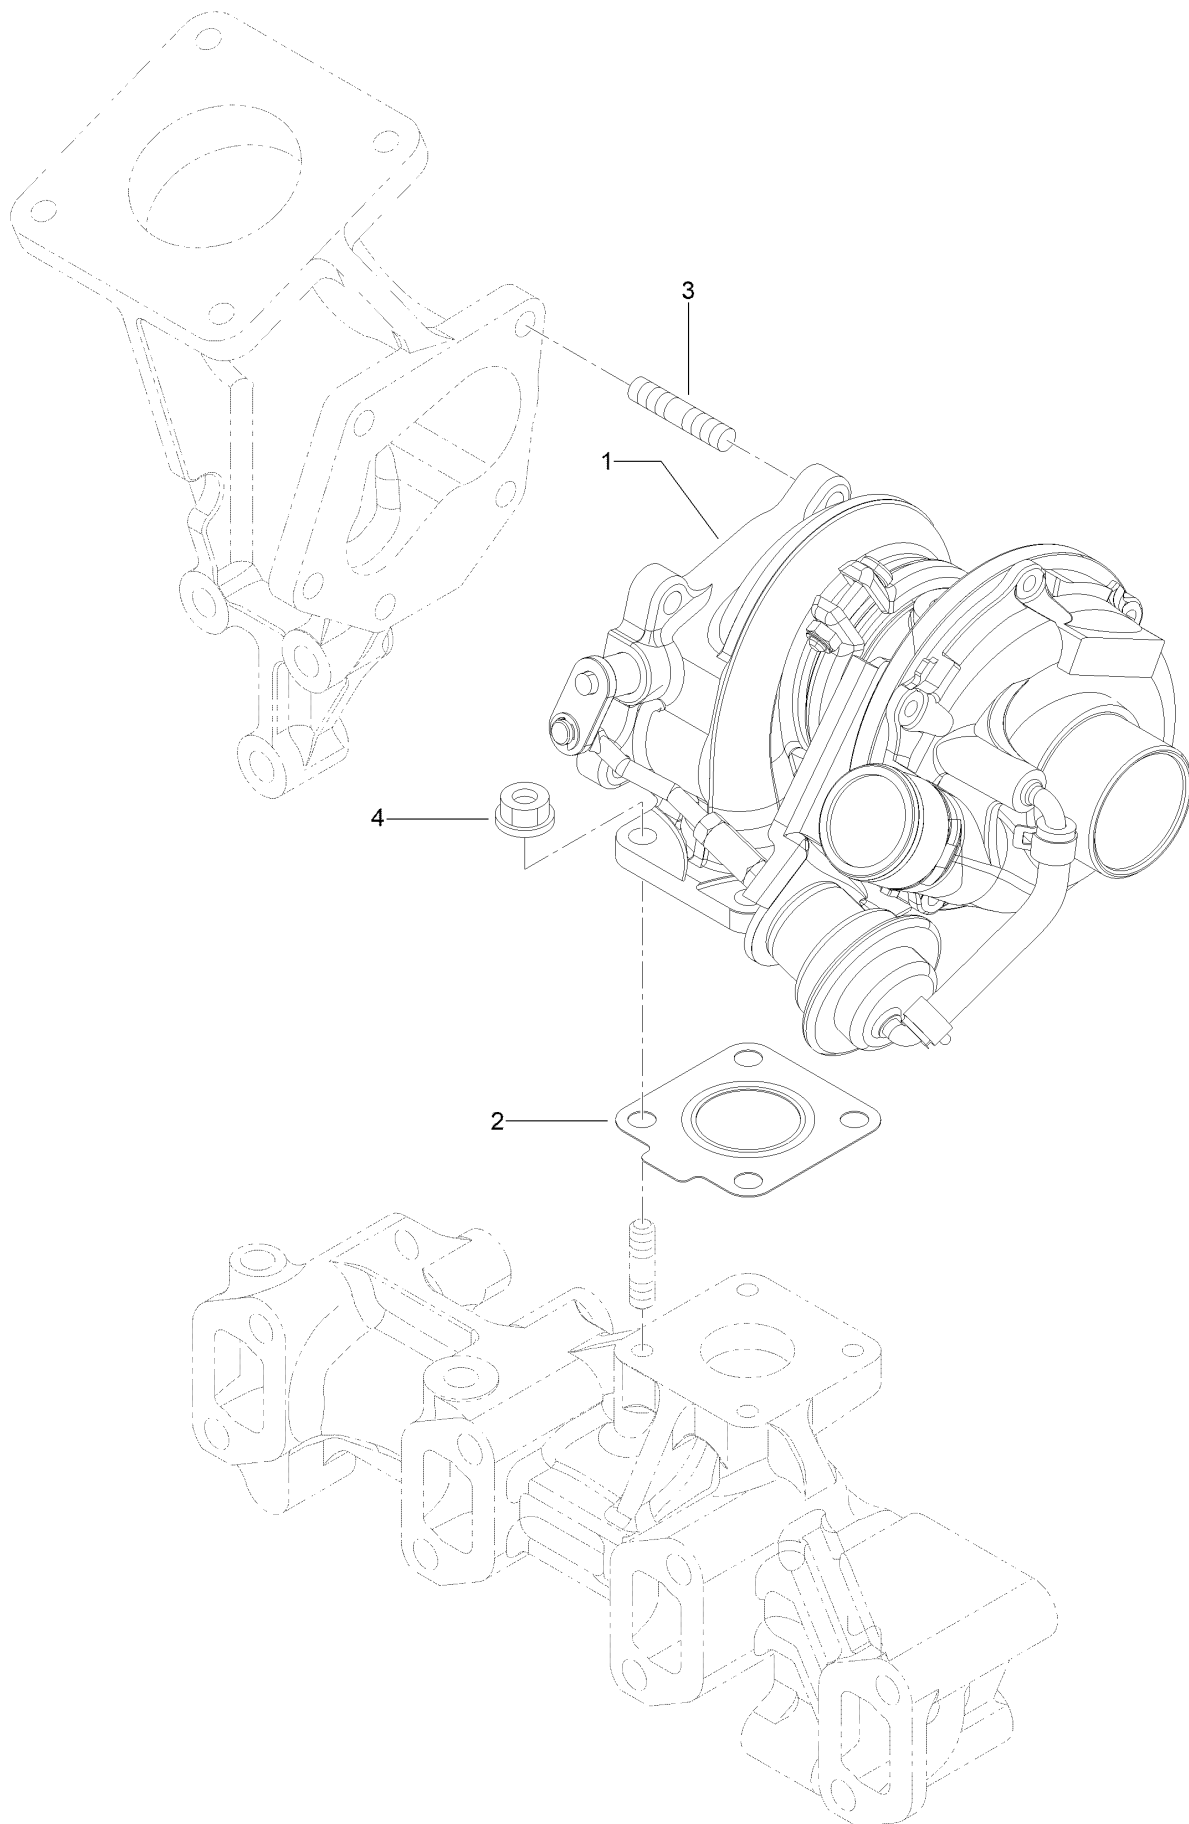

Turbine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-7836	1	Turbocharger
2	125-7070	1	Gasket


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	125-6906	5	Stud
4	125-7229	4	Nut

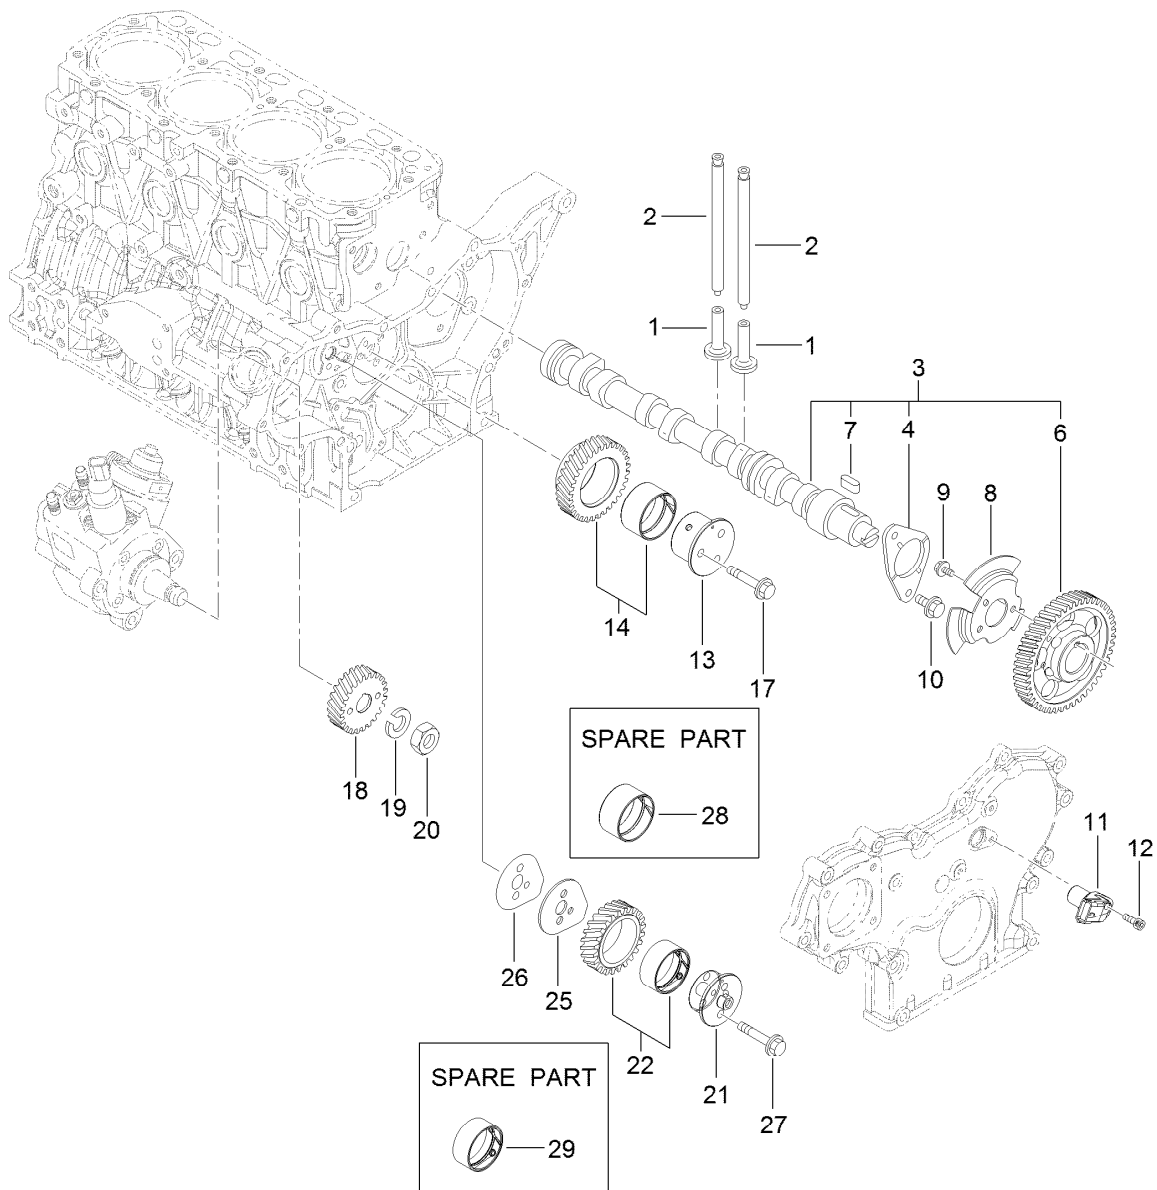 

Camshaft and Driving Gear Assembly

Ref.	Part Number	Qty.	Description
1	125-7016	8	Tappet
2	125-7017	8	Rod-Push
3	127-3113	1	Camshaft ASM
4	125-7008	1	Metal-Thrust
6	127-3052	1	Gear-Camshaft
7	125-7185	1	Key
8	127-3053	1	Pulser-Camshaft
9	125-7205	3	Bolt
10	125-7213	2	Bolt
11	127-3054	1	Sensor-Rev, Gear
12	127-3184	1	Bolt
13	127-3063	1	Shaft-Idle, Gear A

Ref.	Part Number	Qty.	Description
14	127-3066	1	Idle Gear A ASM
17	125-7219	3	Bolt
18	127-3070	1	Gear-Pump, Supply
19	127-3167	1	Washer-Spring
20	127-3185	1	Nut-Lock
21	127-3064	1	Shaft-Idle, Gear B
22	127-3067	1	Idle Gear B ASM
25	127-3068	1	Plate-Idle, Shaft
26	127-3069	1	Gasket-Idle, Shaft B
27	125-7218	2	Bolt
28	125-6927	1	Bushing
29	127-3065	1	Bushing

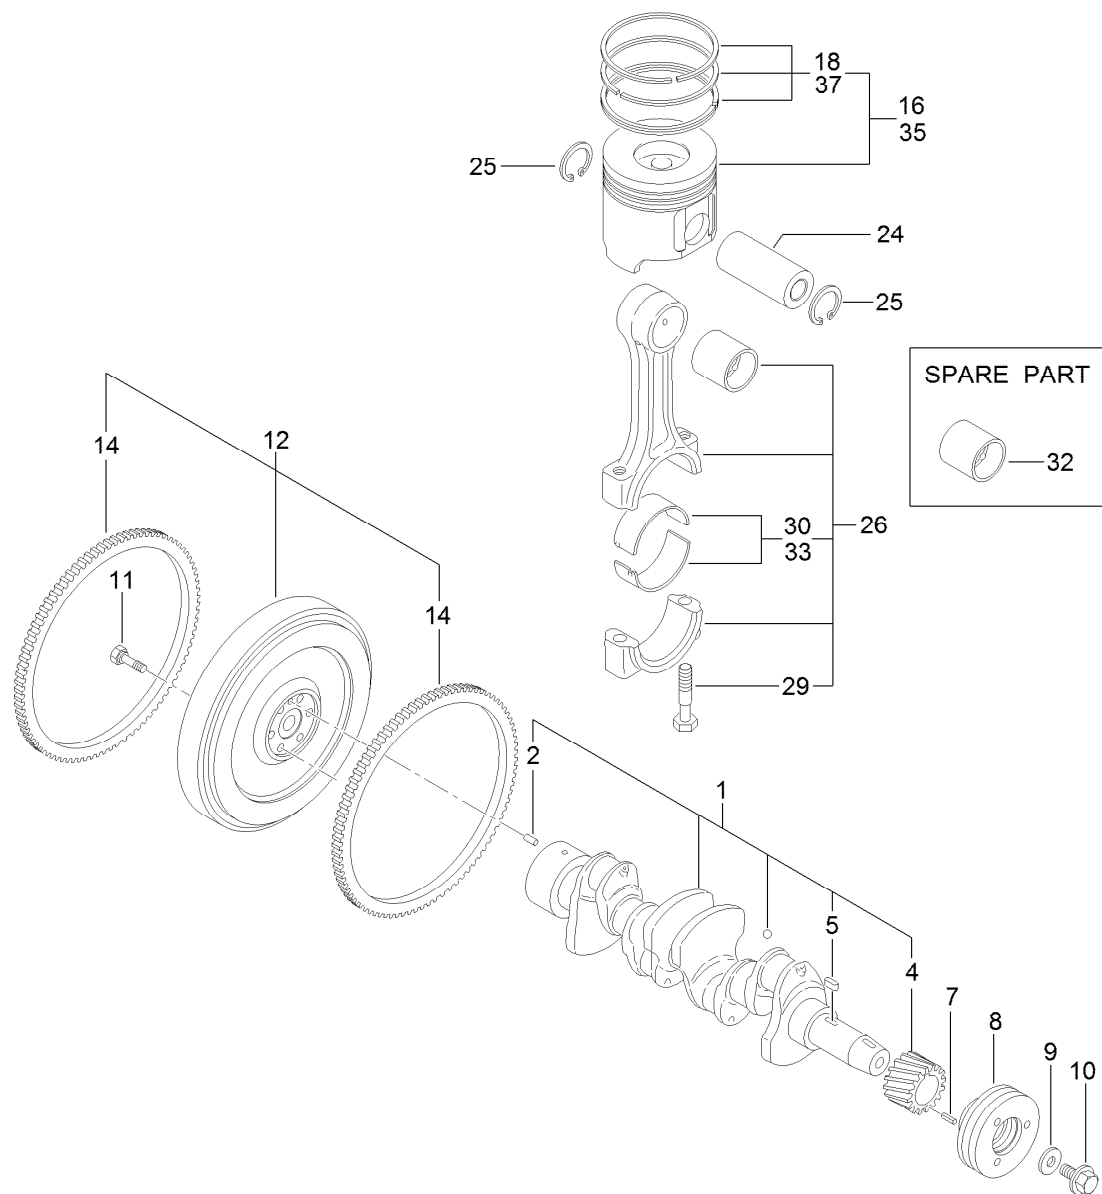 


Crankshaft and Piston Assembly

Ref.	Part Number	Qty.	Description
1	125-7091	1	Crankshaft ASM
2	125-6995	1	Pin
4	125-6937	1	Gear
5	125-7185	1	Key
7	125-7182	1	Pin-Spring
8	125-6925	1	V-Pulley
9	125-7109	1	Washer
10	125-6956	1	Bolt
11	125-6951	6	Bolt
12	127-3160	1	Flywheel ASM
14	125-6943	1	Gear

Ref.	Part Number	Qty.	Description
16	127-3097	4	Piston ASM
18	127-3098	4	Piston Ring ASM
24	125-7030	4	Pin
25	125-7180	8	Ring
26	125-7242	4	Connecting Rod ASM
29	125-6955	8	Bolt
30	125-7018	4	Pin-Crank
32	125-6997	4	Pin-Piston
33	125-7019	4	Pin-Crank (.25)
35	127-3099	4	Piston ASM (0.25 O.S.)
37	127-3100	4	Piston Ring ASM (0.25 O.S.)

 
Lubrication and Oil System Assembly

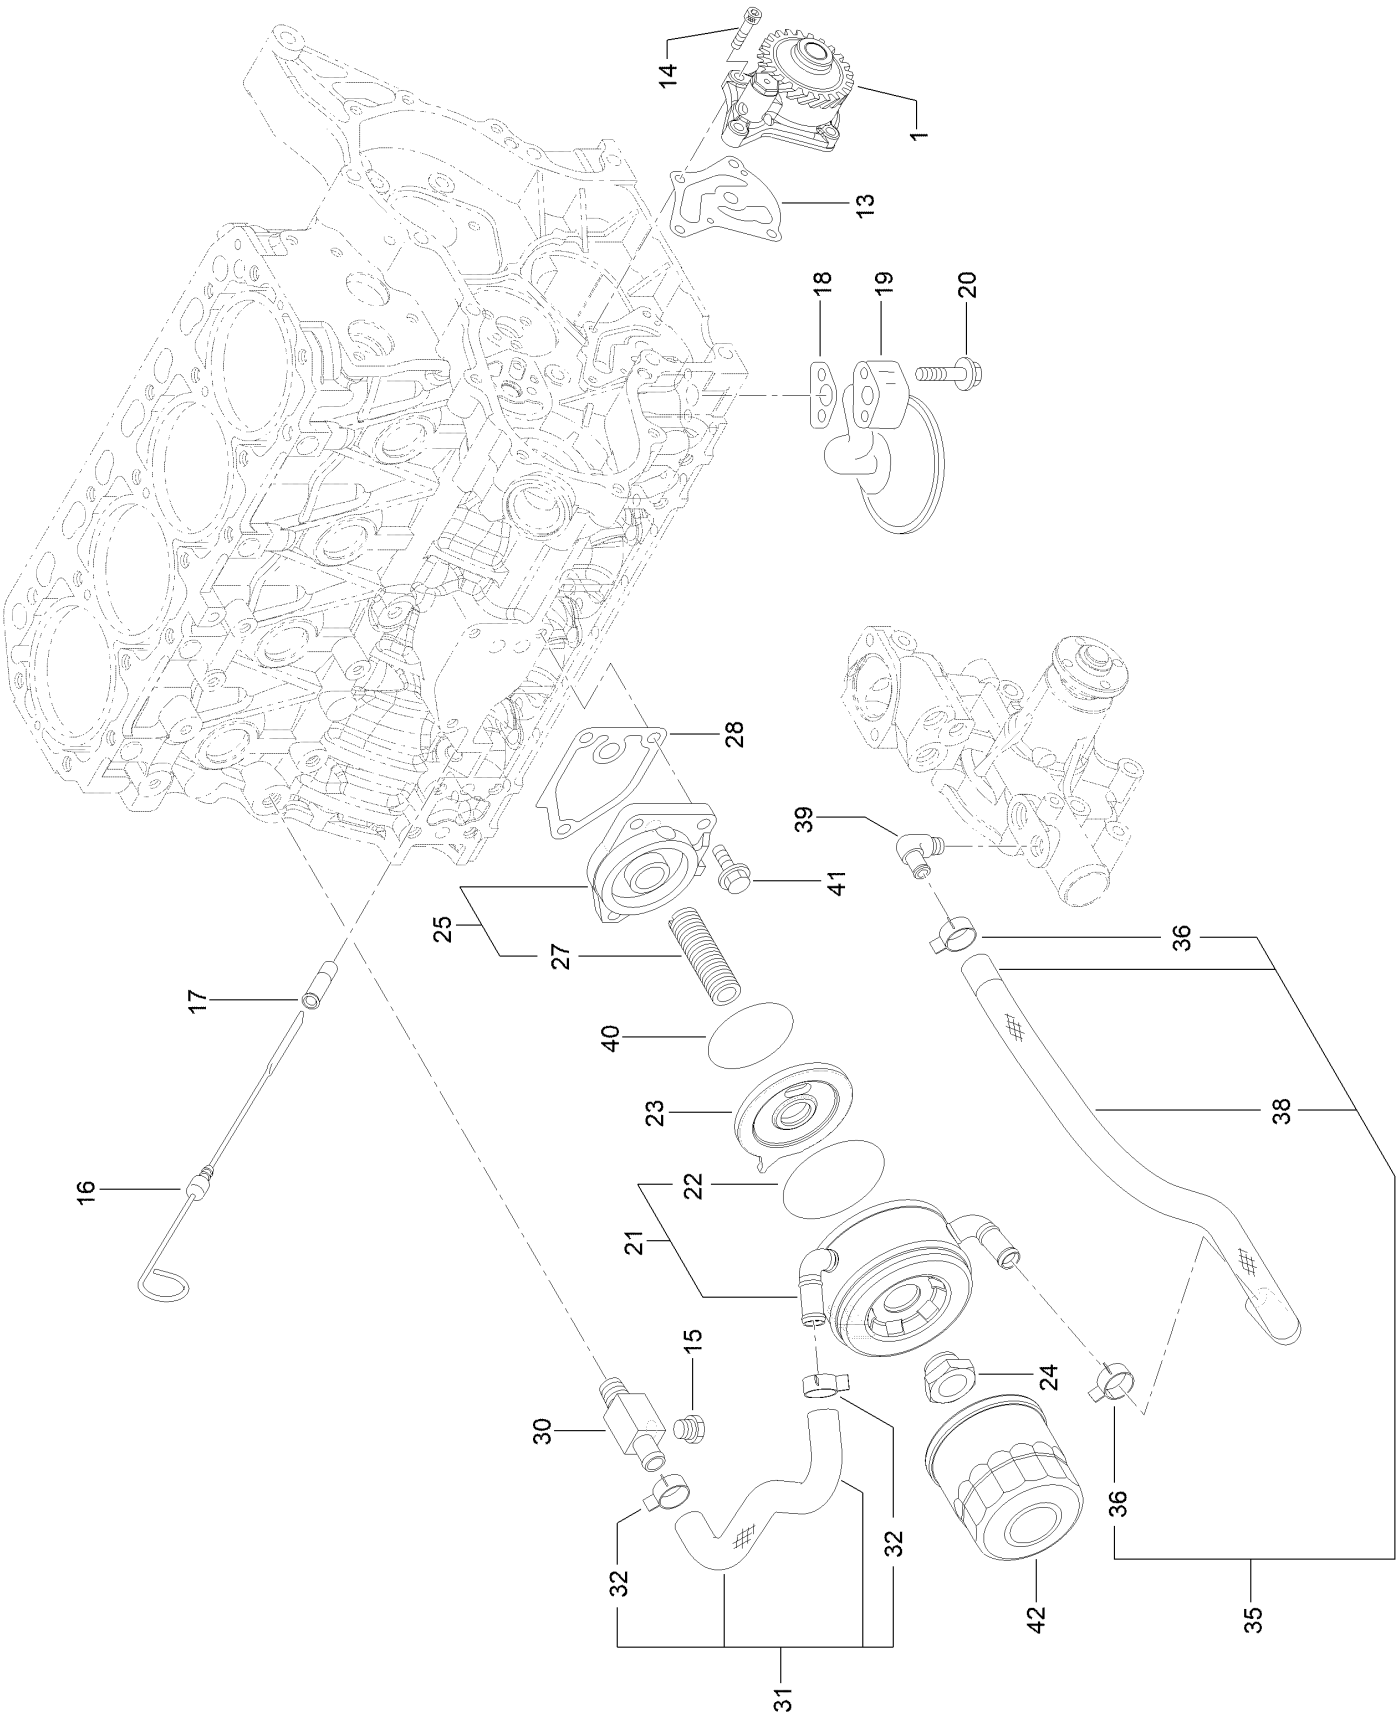

Lubrication and Oil System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-3101	1	Oil Lube Pump ASM	25	127-3009	1	Bracket ASM
13	127-3004	1	Gasket	27	127-3010	1	Stud
14	125-7232	4	Bolt	28	125-7024	1	Gasket
15	125-7171	1	Plug-Drain	30	125-6990	1	Joint
16	125-6987	1	Dipstick	31	127-3102	1	Pipe-Cooling, Water
17	125-6954	1	Guide-Dipstick	32	125-7162	2	Clip
18	125-7022	1	Gasket	35	127-3103	1	Hose-Cooling, Water
19	125-7023	1	Pipe ASM	36	125-7162	2	Clip
20	125-7217	2	Bolt	38	127-3007	1	Tube
21	127-3014	1	Cooler ASM	39	125-7001	1	Elbow
22	127-2985	1	O-Ring	40	127-3176	1	O-Ring
23	138-7839	1	Bracket, Cooler	41	125-7595	3	Bolt
24	125-7041	1	Nut-Cooler, Oil	42	125-7025	1	Filter-Engine, Oil

 
Lubrication Oil Line Assembly

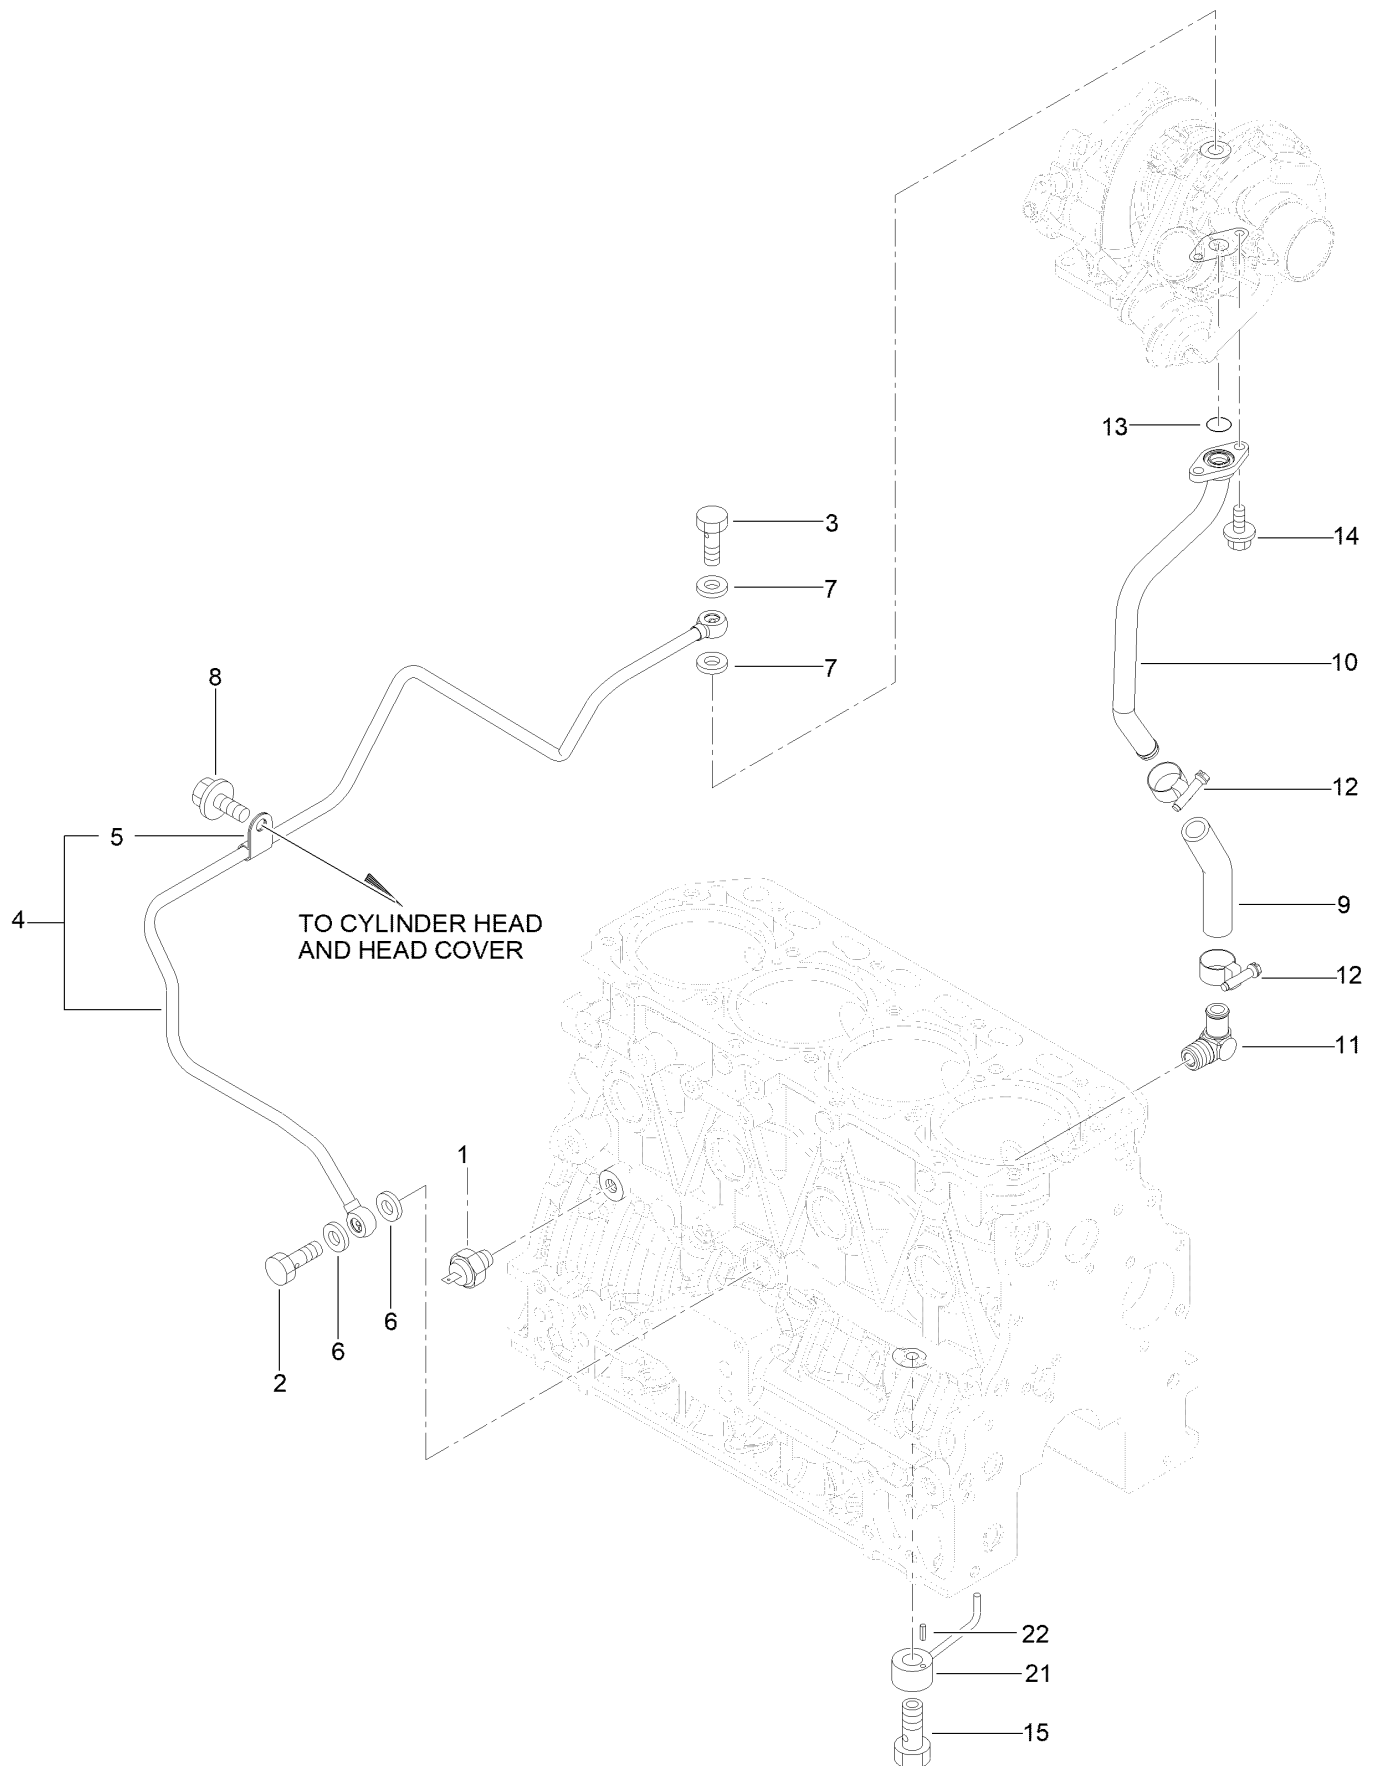

Lubrication Oil Line Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-6918	1	Switch-Oil	10	127-3155	1	Pipe-Lube, Oil
2	125-6975	1	Bolt-Joint, Pipe	11	127-3003	1	Elbow
3	125-6952	1	Bolt-Joint, Pipe	12	127-3169	2	Clamp-Hose
4	127-3154	1	Lube Oil Pipe ASM	13	125-7198	1	O-Ring
5	125-6976	1	Retainer	14	125-7206	2	Bolt
6	125-7175	2	Washer-Seal	15	125-7105	4	Check Valve ASM
7	125-7193	2	Gasket	21	125-7098	4	Nozzle
8	93-0362	1	Bolt	22	125-7182	4	Pin-Spring
9	127-2992	1	Joint				

 
Cooling Water System Assembly

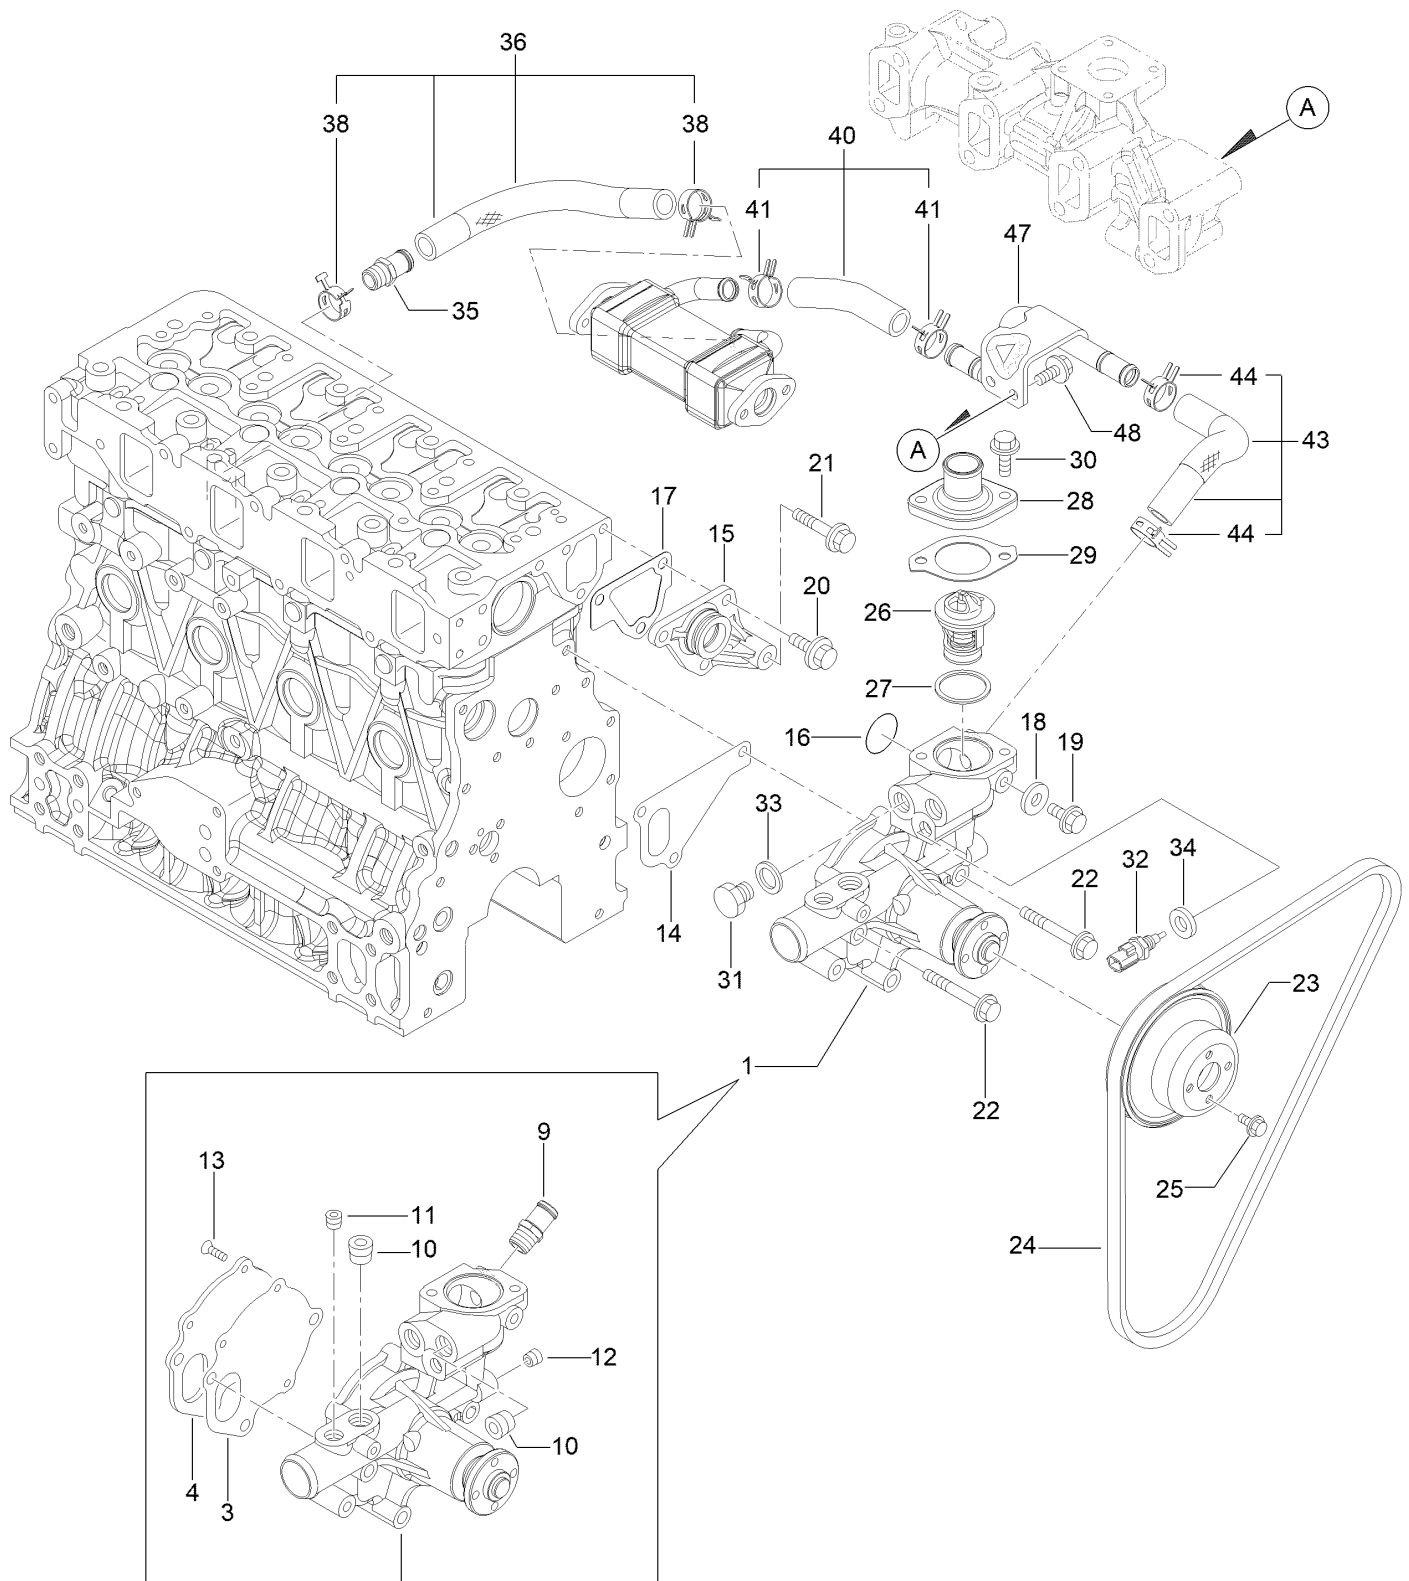

Cooling Water System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-2714	1	Water Pump ASM	25	125-7206	4	Bolt
3	125-6998	1	Gasket	26	125-7029	1	Thermostat
4	125-6999	1	Plate	27	125-7026	1	Gasket
9	127-3017	1	Joint	28	125-7034	1	Cover
10	125-7123	2	Plug	29	125-7110	1	Gasket
11	125-7001	1	Elbow	30	125-7594	2	Bolt
12	125-7195	1	Plug	31	125-6953	1	Plug
13	125-7234	3	Screw	32	125-7124	1	Sensor-Thermostat, CW
14	125-7047	1	Gasket	33	125-6979	1	Gasket
15	125-6986	1	Joint	34	125-7176	1	Washer-Seal
16	125-7048	1	O-Ring	35	127-3017	1	Joint
17	125-6978	1	Gasket	36	127-3072	1	Water In Pipe ASM
18	125-7192	1	Gasket	38	127-3020	2	Clip-Hose
19	125-7212	1	Bolt	40	127-3115	1	Water Out Pipe ASM
20	125-7214	3	Bolt	41	127-3020	2	Clip-Hose
21	125-7219	1	Bolt	43	127-3116	1	Water Out Pipe ASM
22	125-7222	3	Bolt	44	127-3020	2	Clip-Hose
23	125-7039	1	V-Pulley	47	138-7841	1	Water Pipe ASM
24	139-4534	1	V Belt	48	125-7214	2	Bolt

 
Fuel Pump Assembly

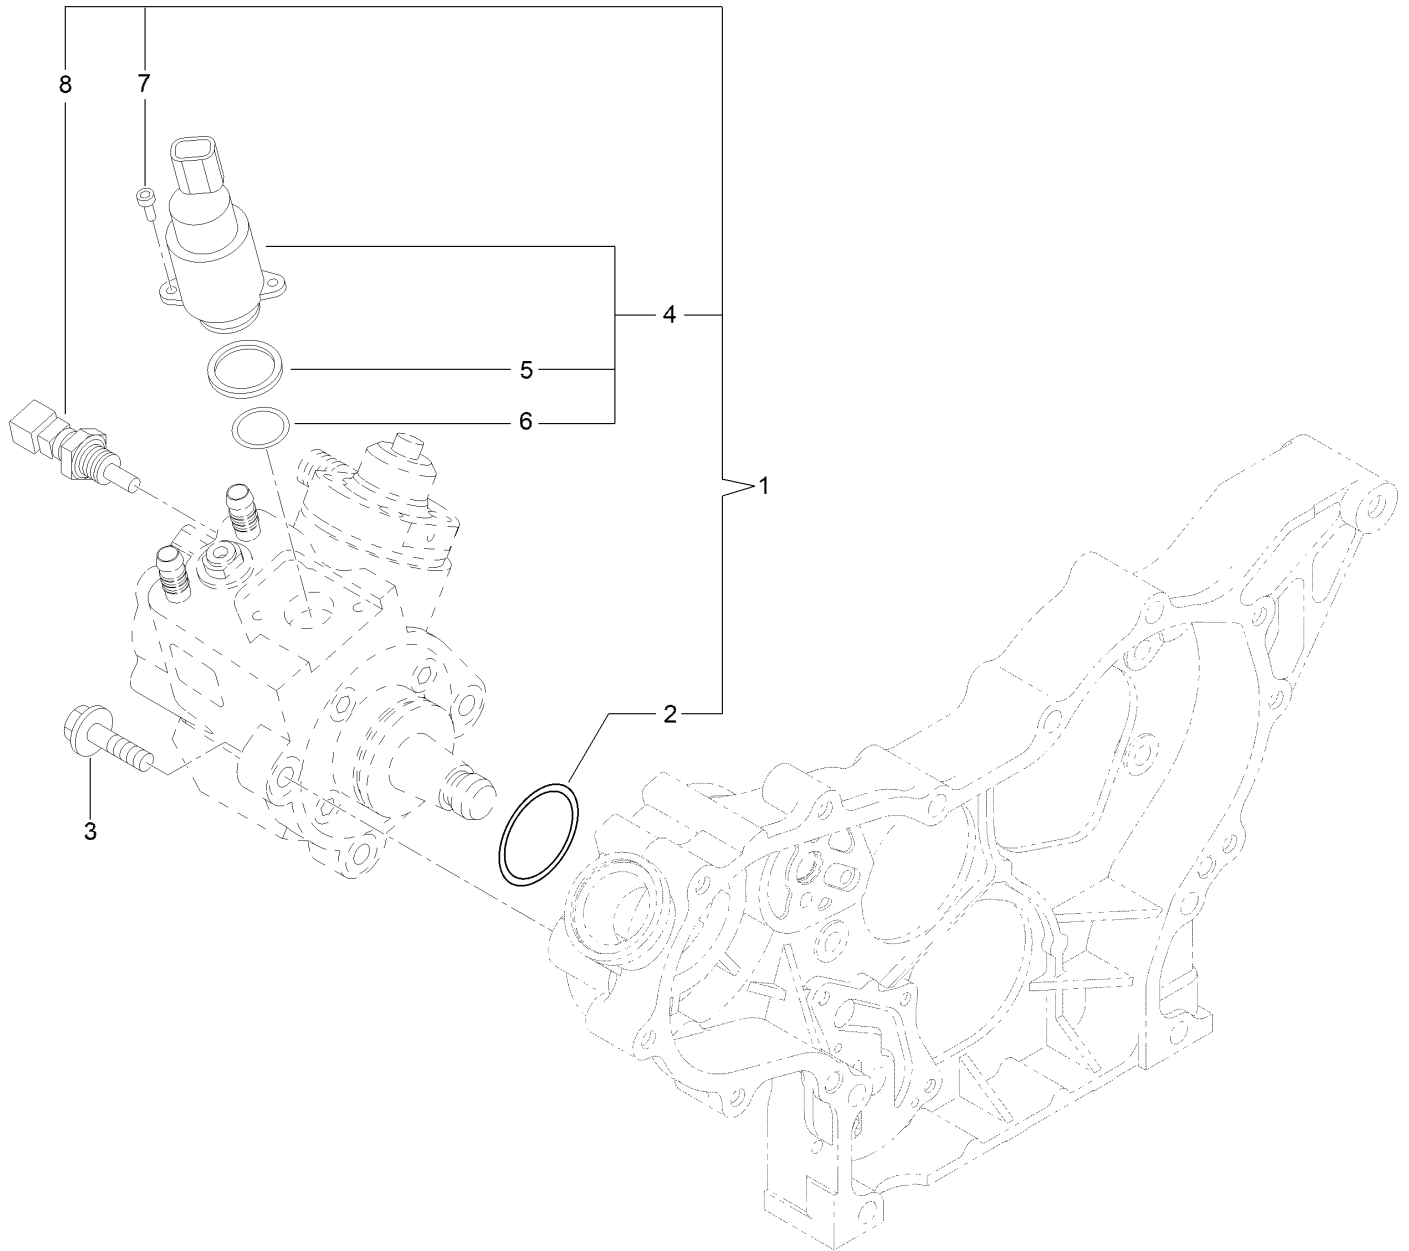

Fuel Pump Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-3073	1	Fuel Pump ASM	5	131-2105	1	Ring-Sealing
2	127-3074	1	O-Ring	6	131-2106	1	O-Ring
3	125-7216	3	Bolt	7	131-2107	2	Bolt
4	131-2103	1	Valve ASM	8	131-2108	1	Sensor-Temperature

 
Fuel Injection Valve Assembly

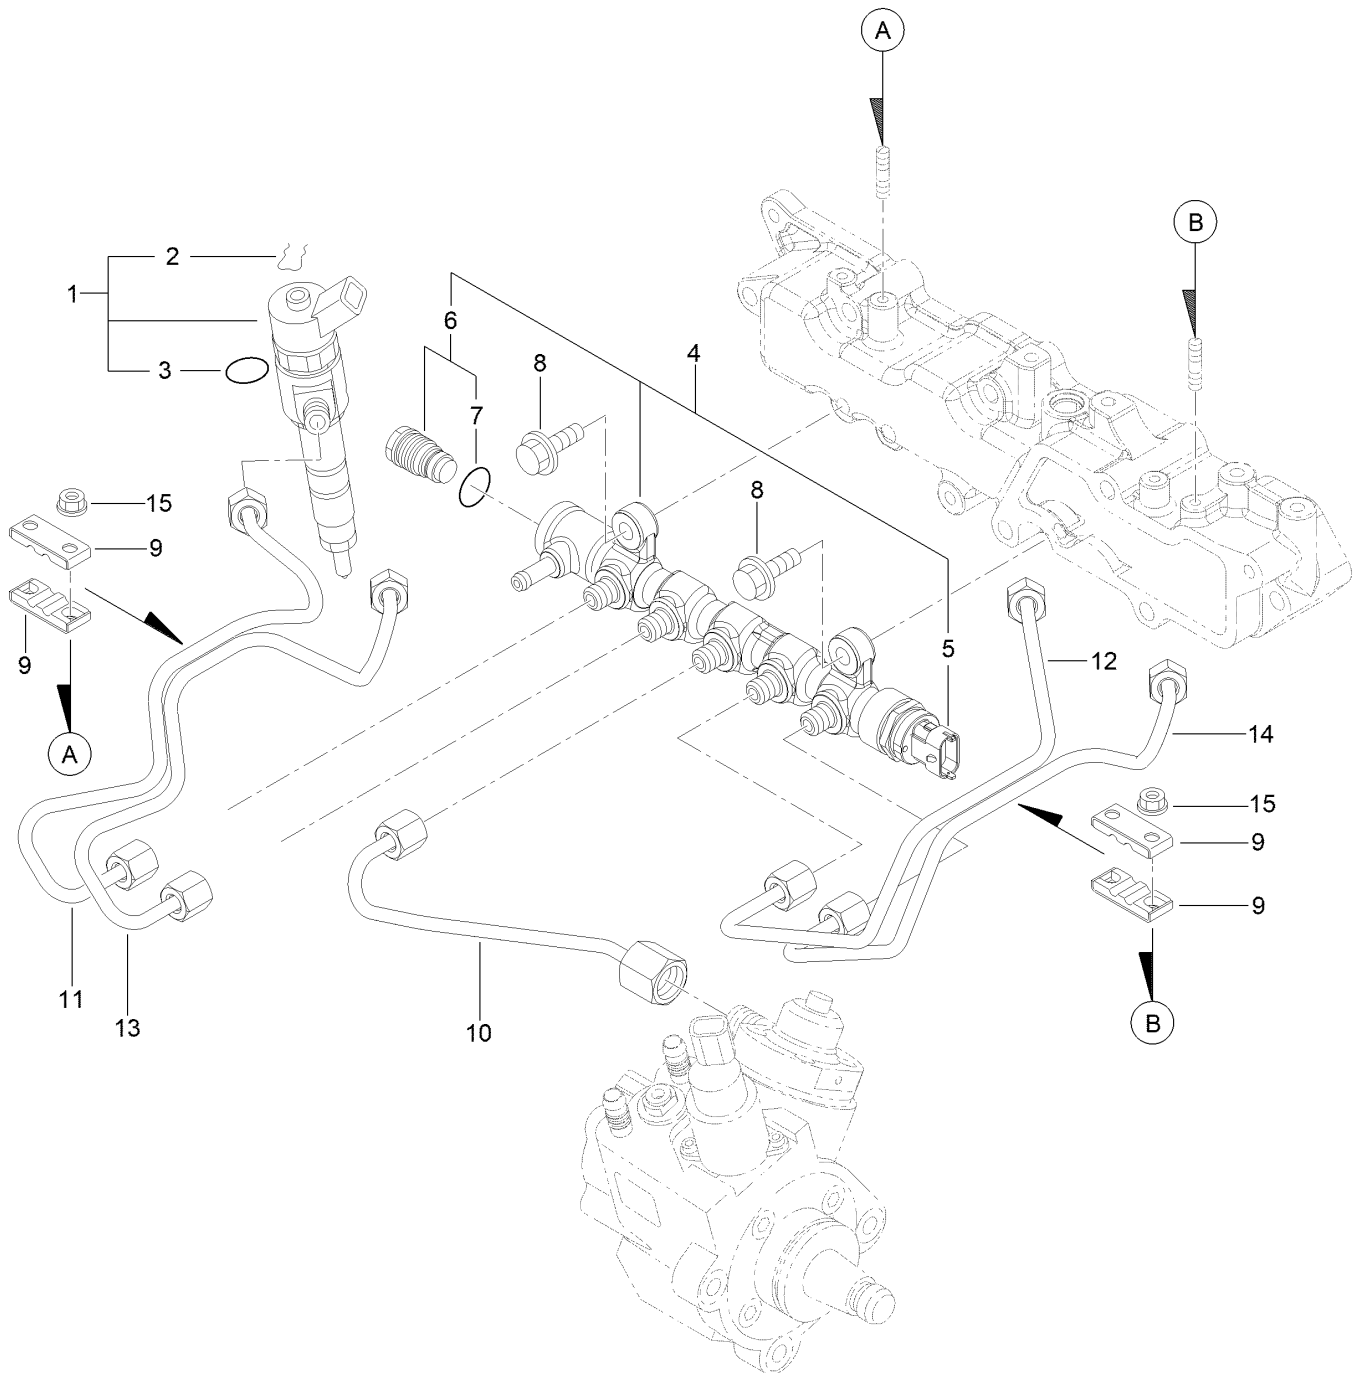

Fuel Injection Valve Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-3104	4	Injector ASM	9	127-2982	4	Retainer
2	130-7430	4	Ring-Retaining	10	127-3082	1	Rail In Pipe ASM
3	137-5173	4	O-Ring	11	127-3121	1	Injection Pipe ASM
4	127-3118	1	Rail ASM	12	127-3083	1	Injection Pipe ASM
5	131-2709	1	Sensor-Pressure, Rail	13	127-3122	1	Injection Pipe ASM
6	131-2710	1	Valve ASM	14	127-3084	1	Injection Pipe ASM
7	131-2711	1	O-Ring	15	125-7231	4	Nut
8	125-7215	2	Bolt				

 
Fuel Line Assembly

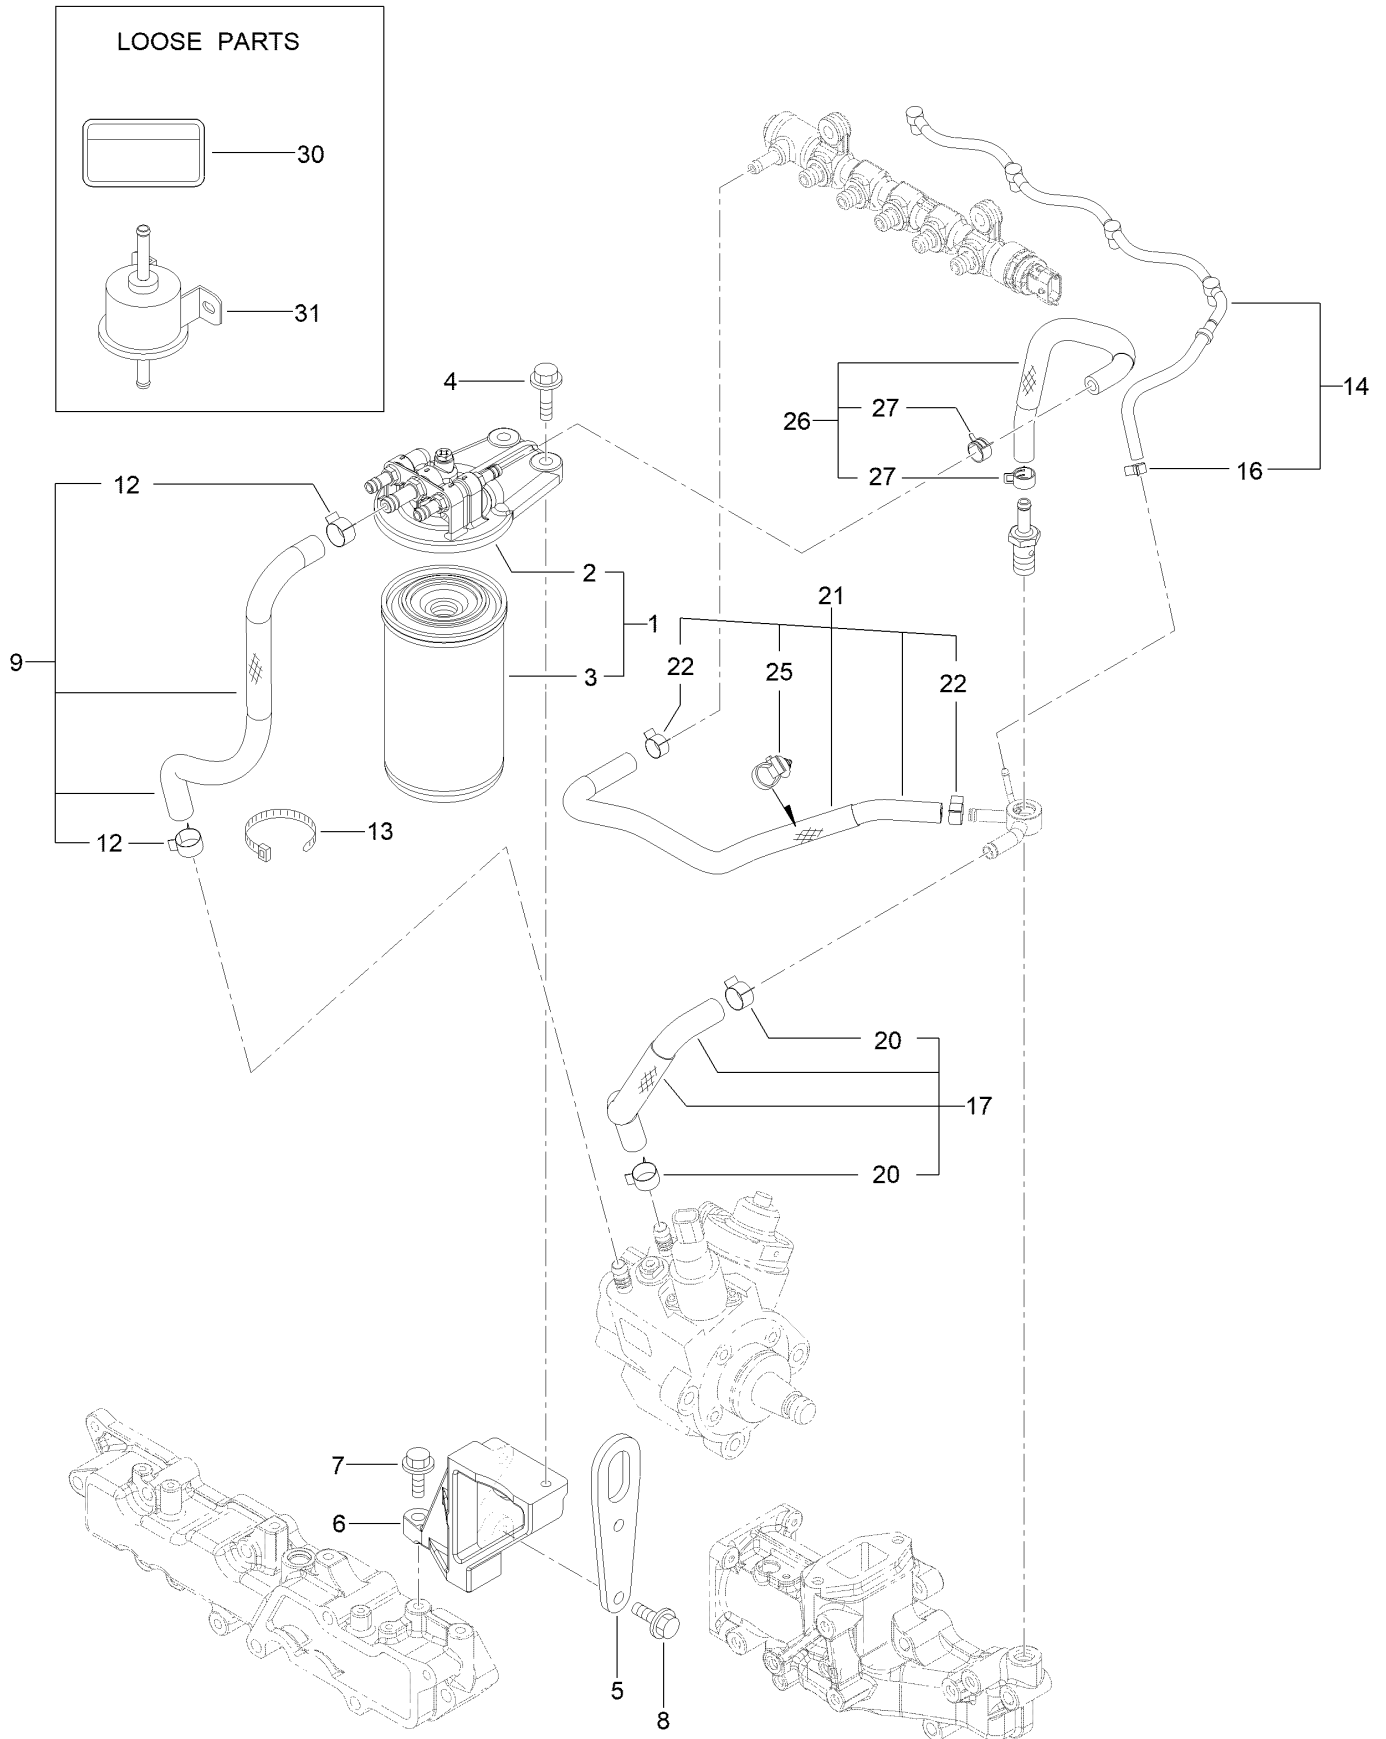

Fuel Line Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	139-4535	1	Filter ASM	14	138-7845	1	Return Pipe ASM
2	127-3076	1	Fuel/Oil Filter Bracket ASM	16	127-3172	1	Clamp-Hose
3	139-6017	1	Filter-Fuel	17	127-3078	1	Fuel Pipe ASM
4	125-7216	2	Bolt	20	125-7191	2	Clamp-Hose
5	127-3091	1	Lifter-Engine	21	127-3119	1	Fuel Pipe ASM
6	127-3105	1	Stay-Bracket, Filter	22	127-2950	2	Clip-Hose
7	125-7215	1	Bolt	25	127-3087	1	Band-Clip
8	125-7216	2	Bolt	26	127-3079	1	Fuel Pipe ASM
9	127-3077	1	Fuel Pipe ASM	27	127-2950	2	Clip-Hose
12	125-7191	2	Clamp-Hose	30	125-6900	1	Label-Caution, Fuel Oil
13	127-2981	1	Band	31	127-3008	1	Fuel Feed Pump ASM

 Starting Motor Assembly

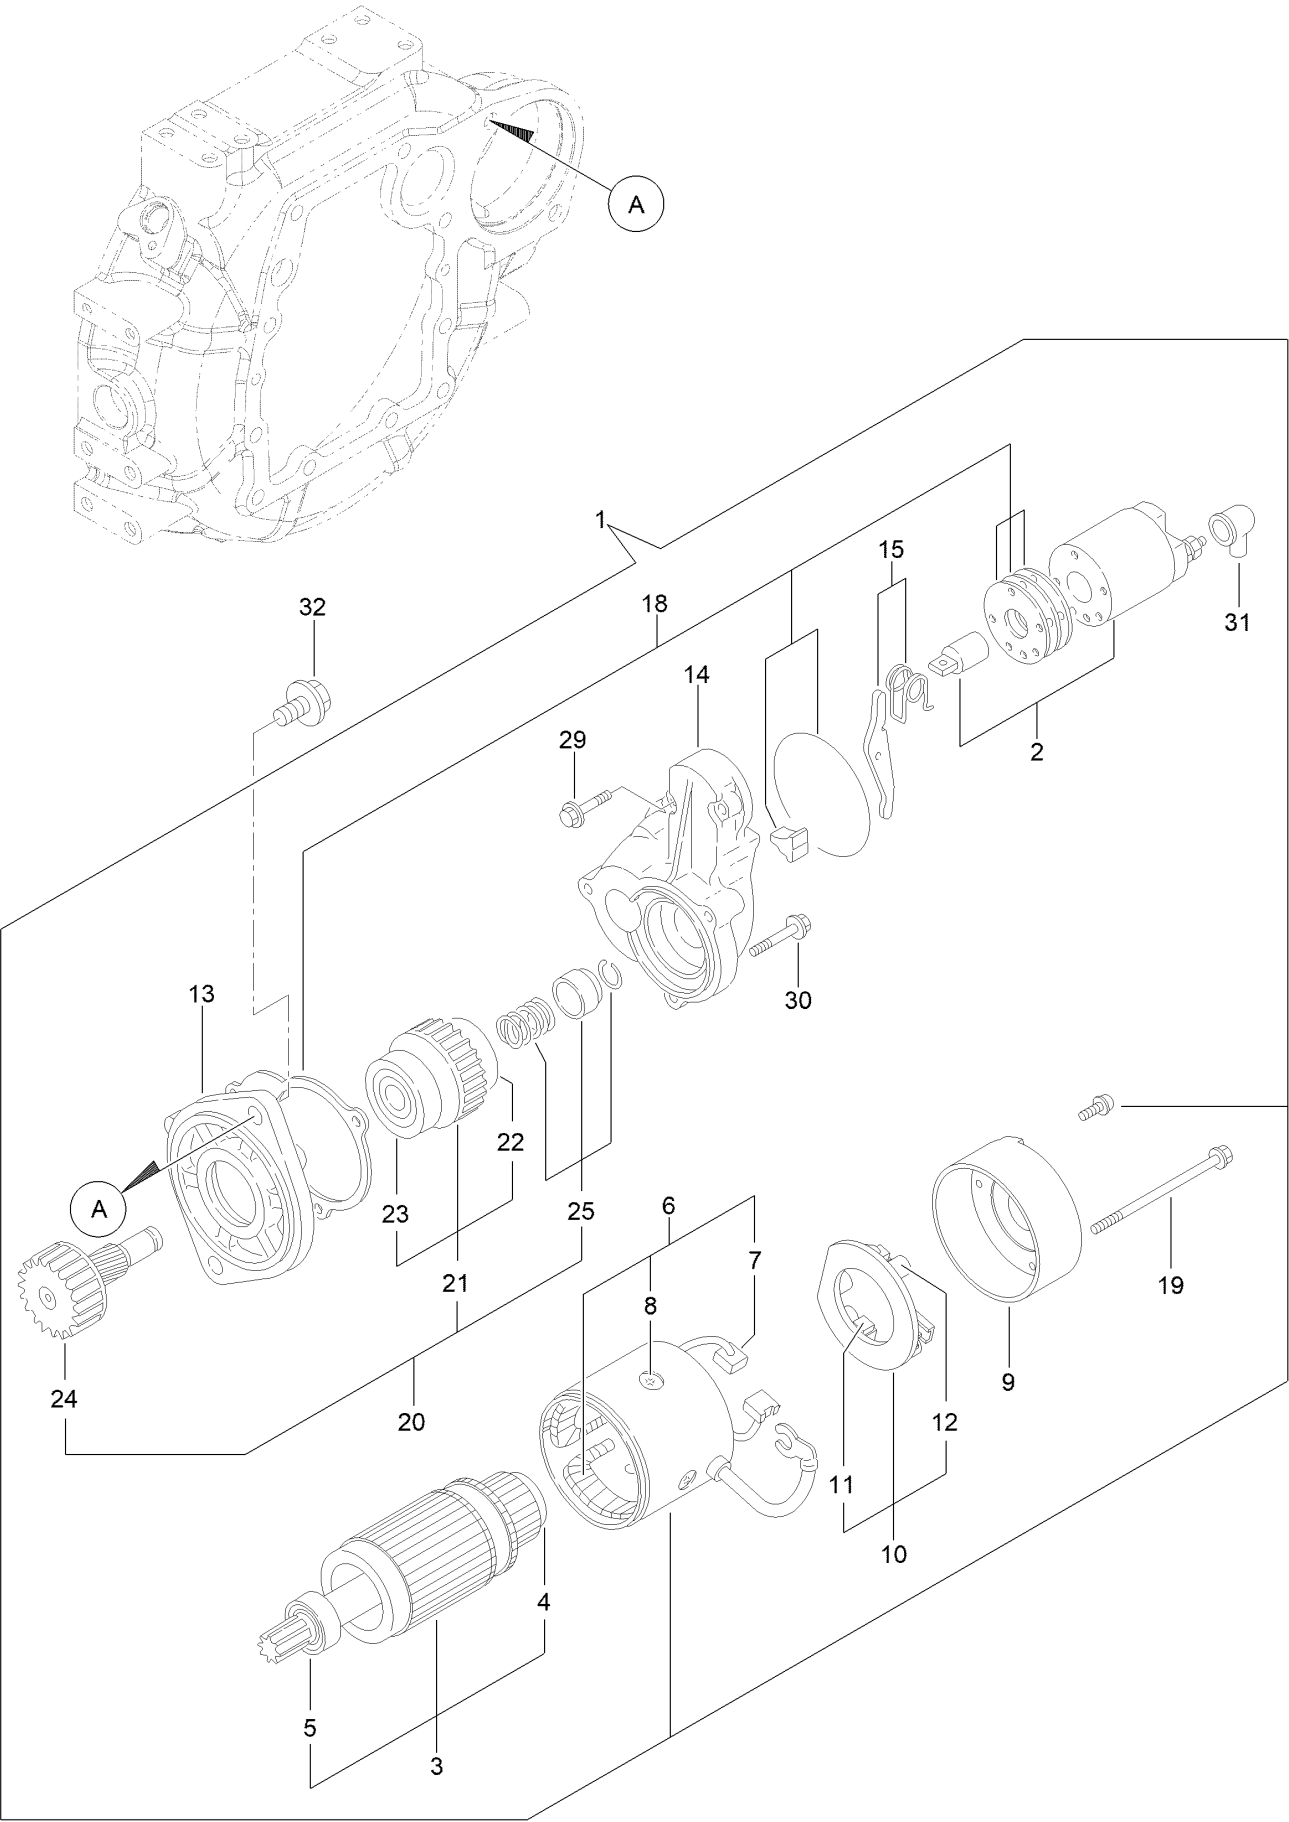


Starting Motor Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-7003	1	Starter
2	125-7004	1	Switch ASM
3	125-7112	1	Armature ASM
4	138-7846	1	Bearing-Ball
5	138-7847	1	Bearing-Ball
6	125-7113	1	Field Coil ASM
7	125-7114	2	Brush
8	138-7848	4	Screw-Set
9	125-7115	1	Cover
10	125-7116	1	Brush Holder ASM
11	138-7849	2	Brush
12	125-7036	4	Spring
13	125-7164	1	Case-Gear
14	125-7005	1	Housing

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
15	125-7165	1	Lever Set
18	125-7037	1	Dust Cover ASM
19	125-7117	2	Bolt-Through
20	125-7166	1	Pinion ASM
21	125-7250	1	Clutch ASM
22	125-7251	1	Bearing-Ball
23	139-4536	1	Bearing-Ball
24	125-7167	1	Shaft
25	125-7168	1	Stopper Set
29	125-7210	2	Bolt
30	125-7211	3	Bolt
31	125-7169	1	Cover
32	125-7225	2	Bolt

 
Generator Assembly

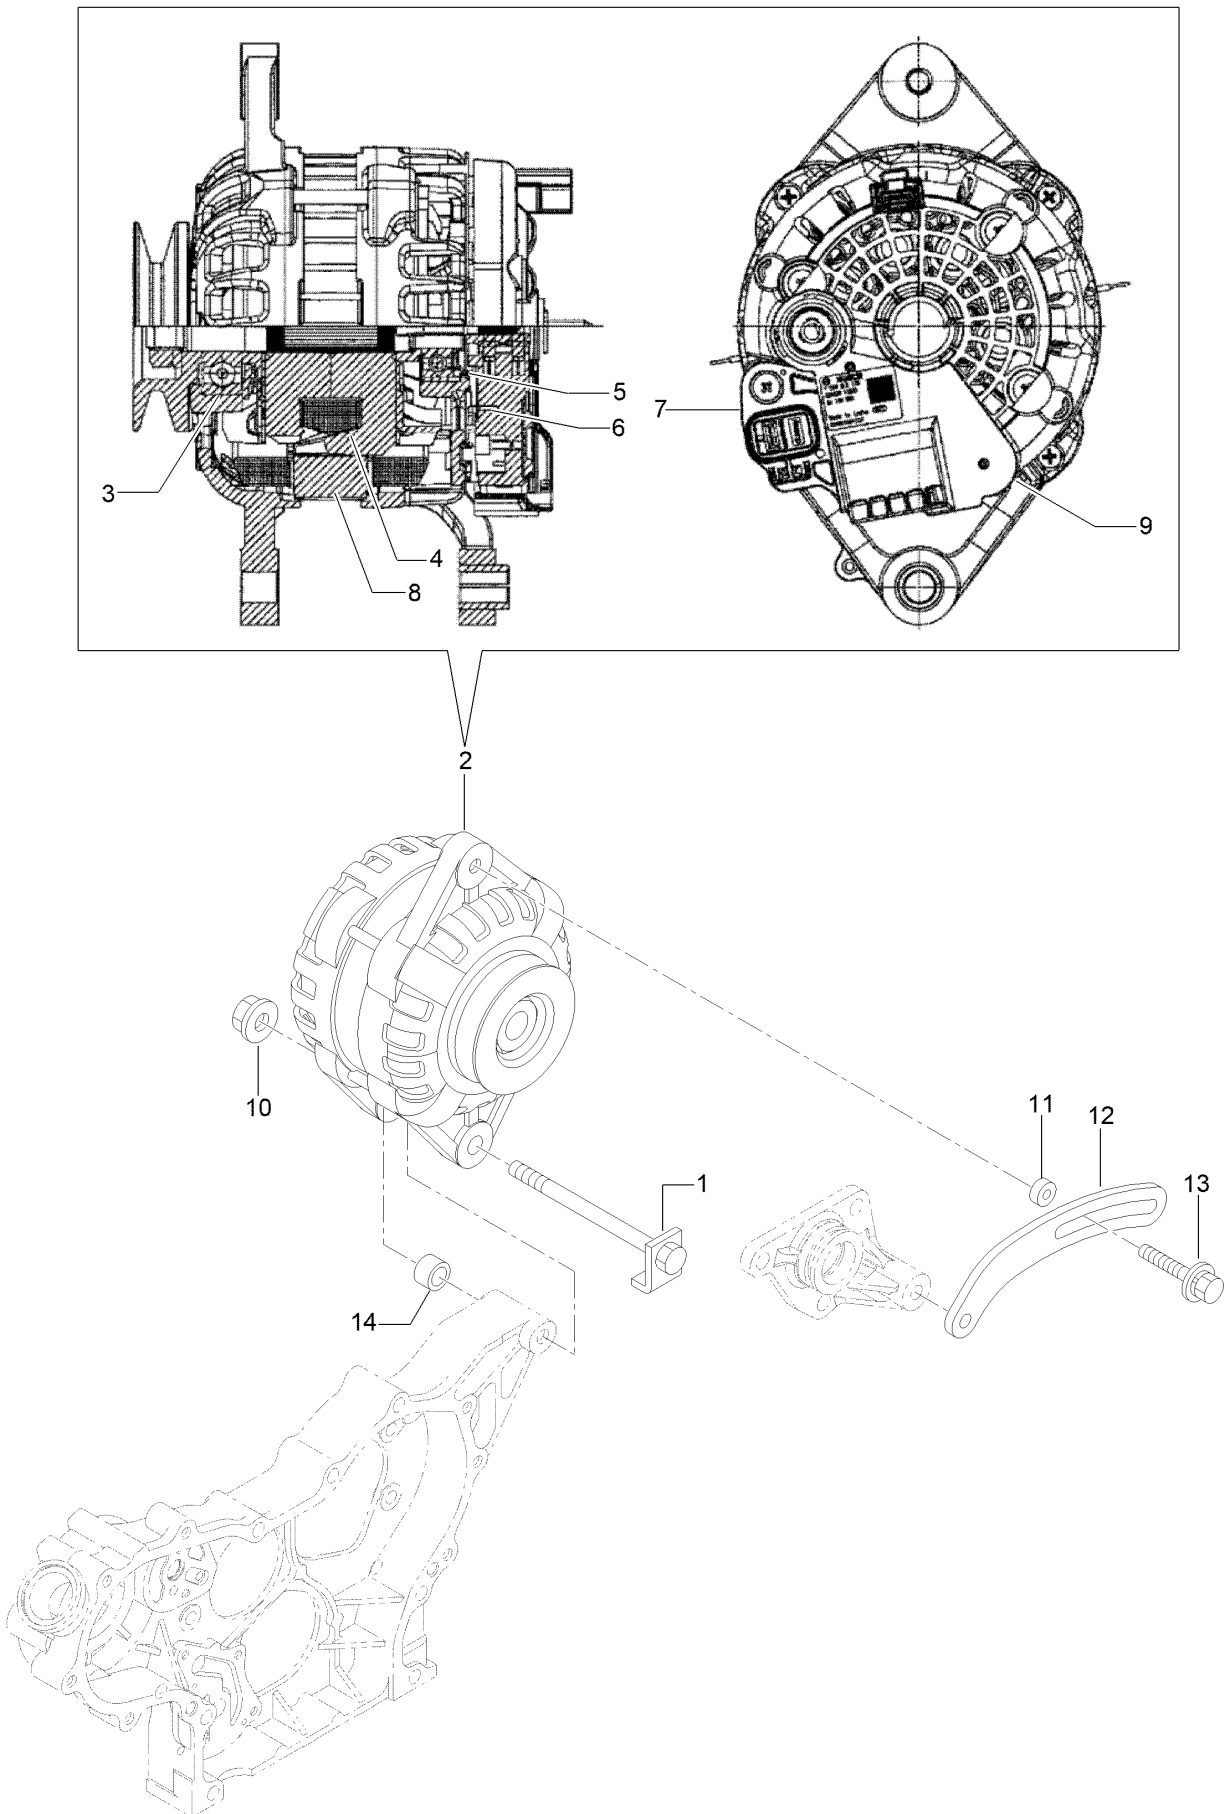

Generator Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-7121	1	Bolt-Stopper	8	139-4542	1	Stator
2	125-7120	1	Alternator-12V	9	139-4543	1	Protector
3	139-4537	1	Bearing-Ball, Fr	10	125-7230	1	Nut
4	139-4538	1	Rotor	11	138-7852	1	Spacer-Alternator
5	139-4539	1	Bearing-Ball, Rr	12	138-7853	1	Adjuster-Belt
6	139-4540	1	Rectifier	13	135-4027	1	Bolt-Adjust
7	139-4541	1	Regulator	14	138-7851	1	Piece-Distance

 
Electronic Control Unit Assembly

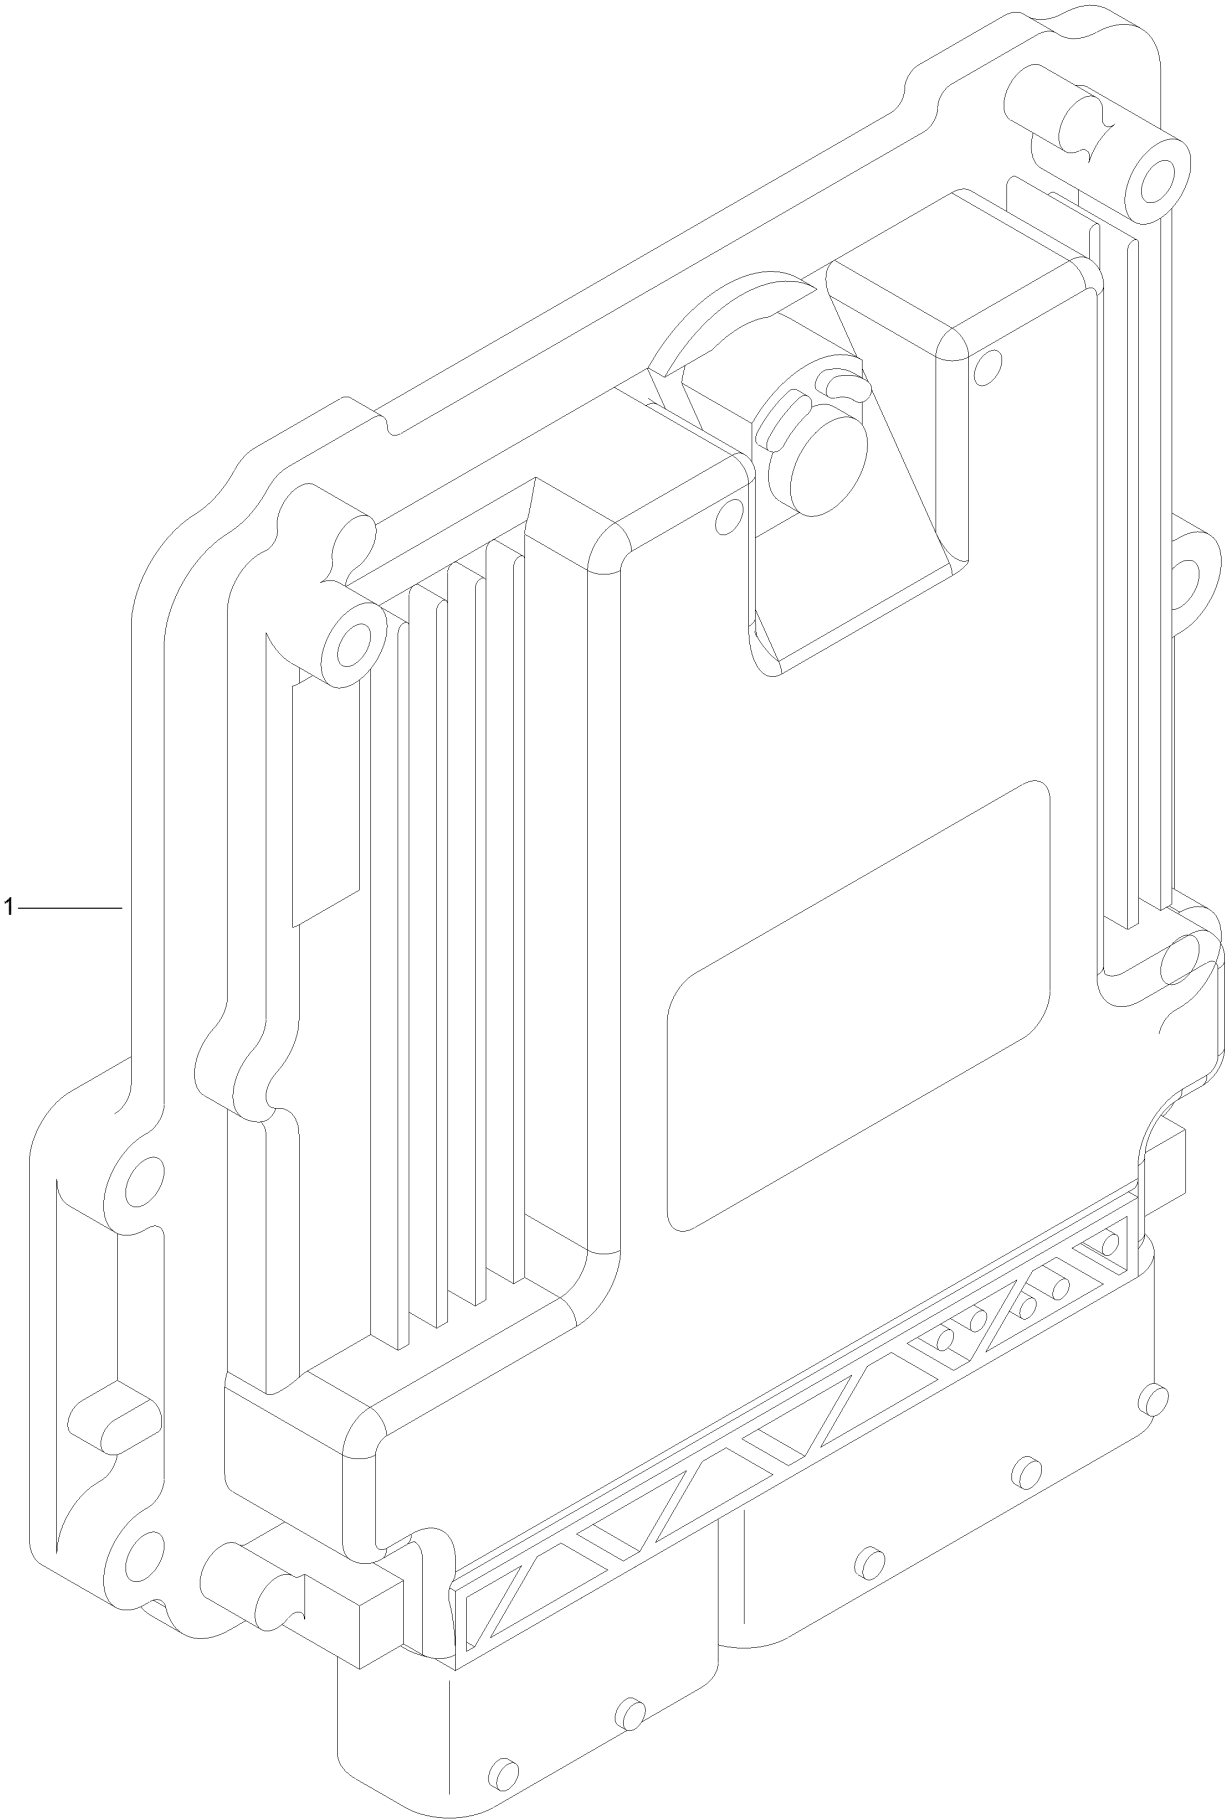

Electronic Control Unit Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-5592	1	Electronic Control Unit

 
Electric Parts Assembly

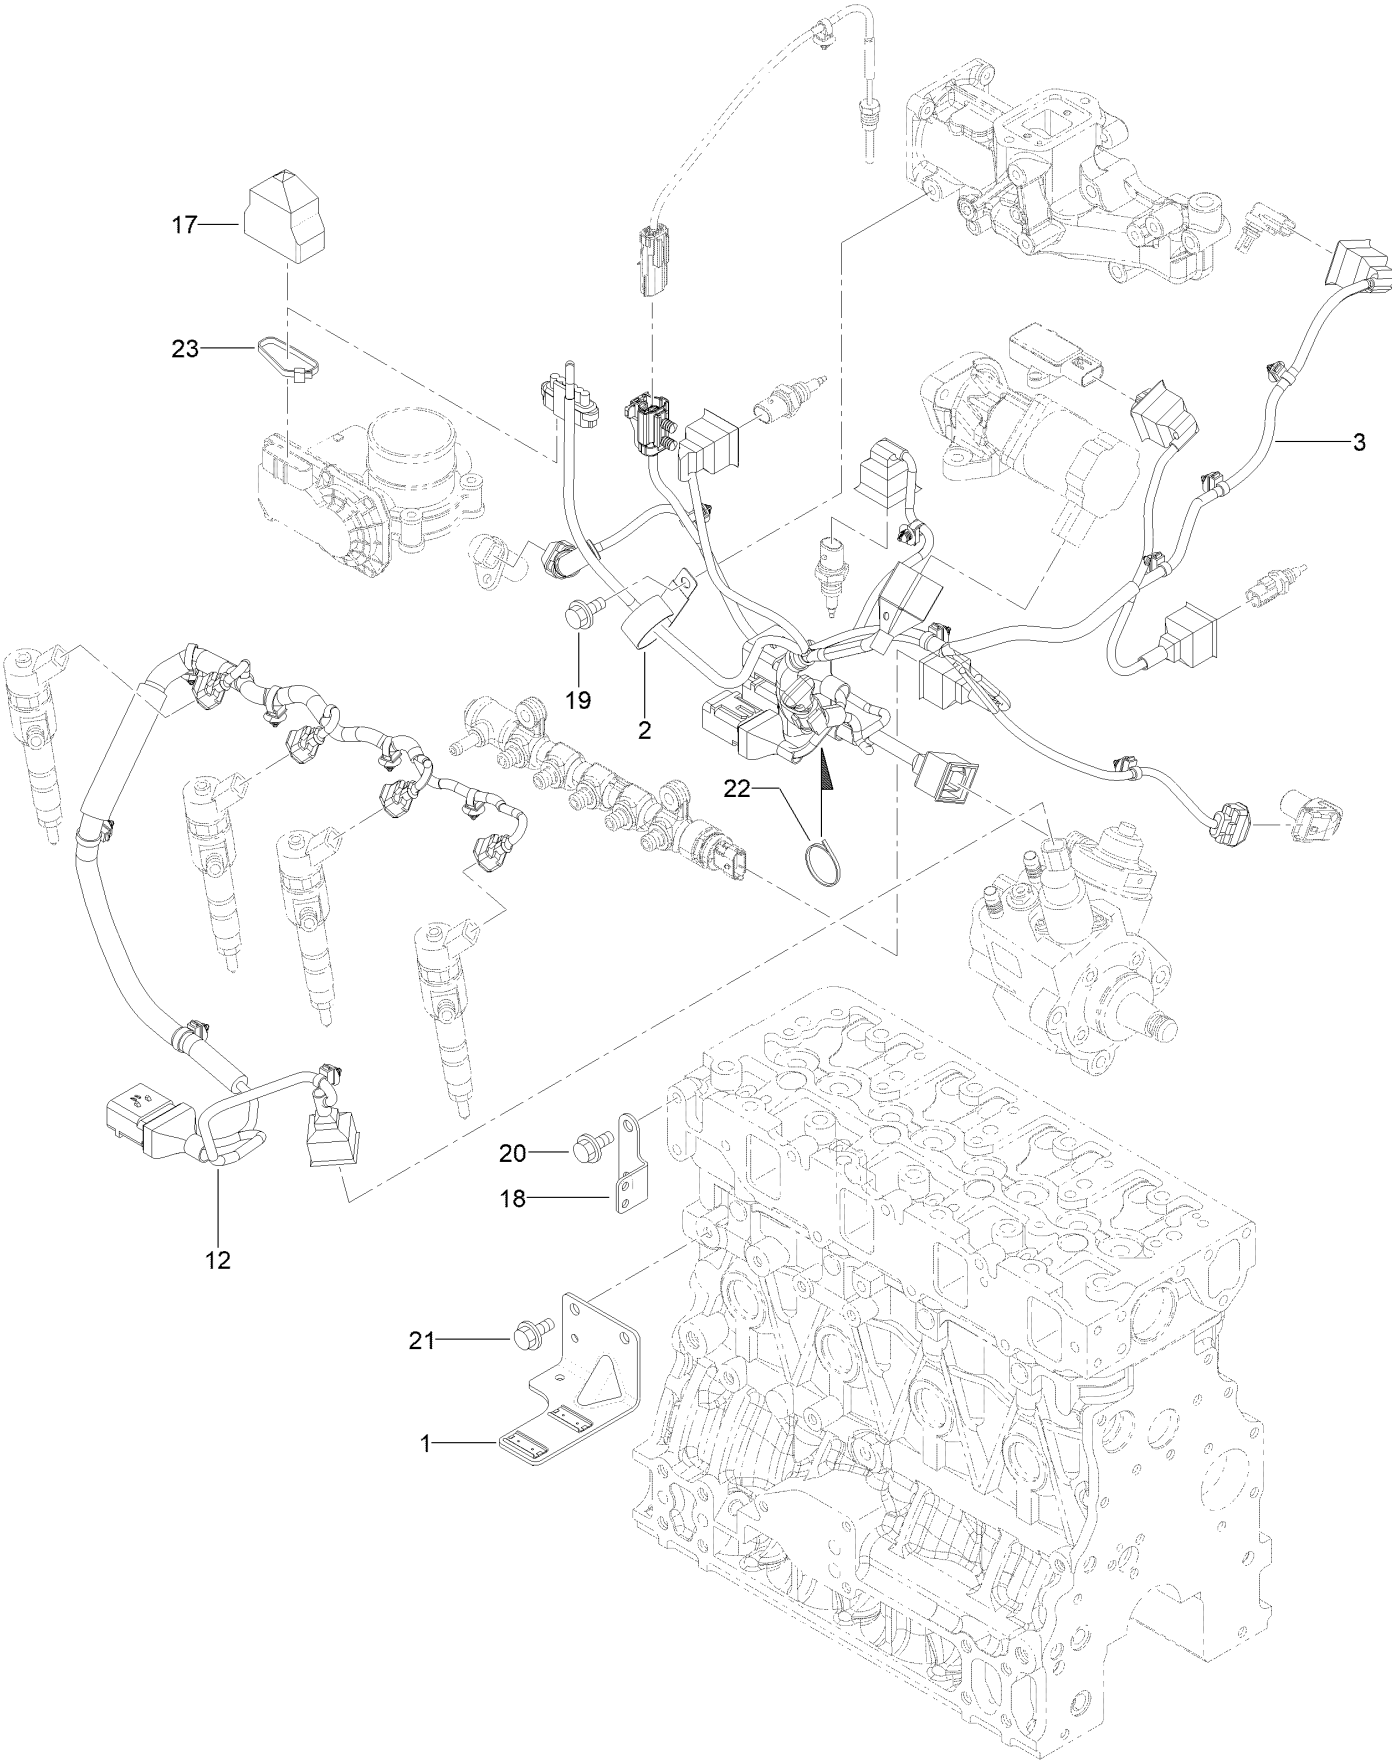

Electric Parts Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-3086	1	Bracket-Connector	19	125-7212	1	Bolt
2	127-3018	1	Clip	20	125-7212	2	Bolt
3	138-7855	1	Harness B	21	125-7212	2	Bolt
12	127-3125	1	Harness C	22	127-3187	1	Band
17	131-2713	1	Boot-Cap	23	127-3188	1	Band
18	127-3090	1	Bracket-Harness				

 Gasket Set

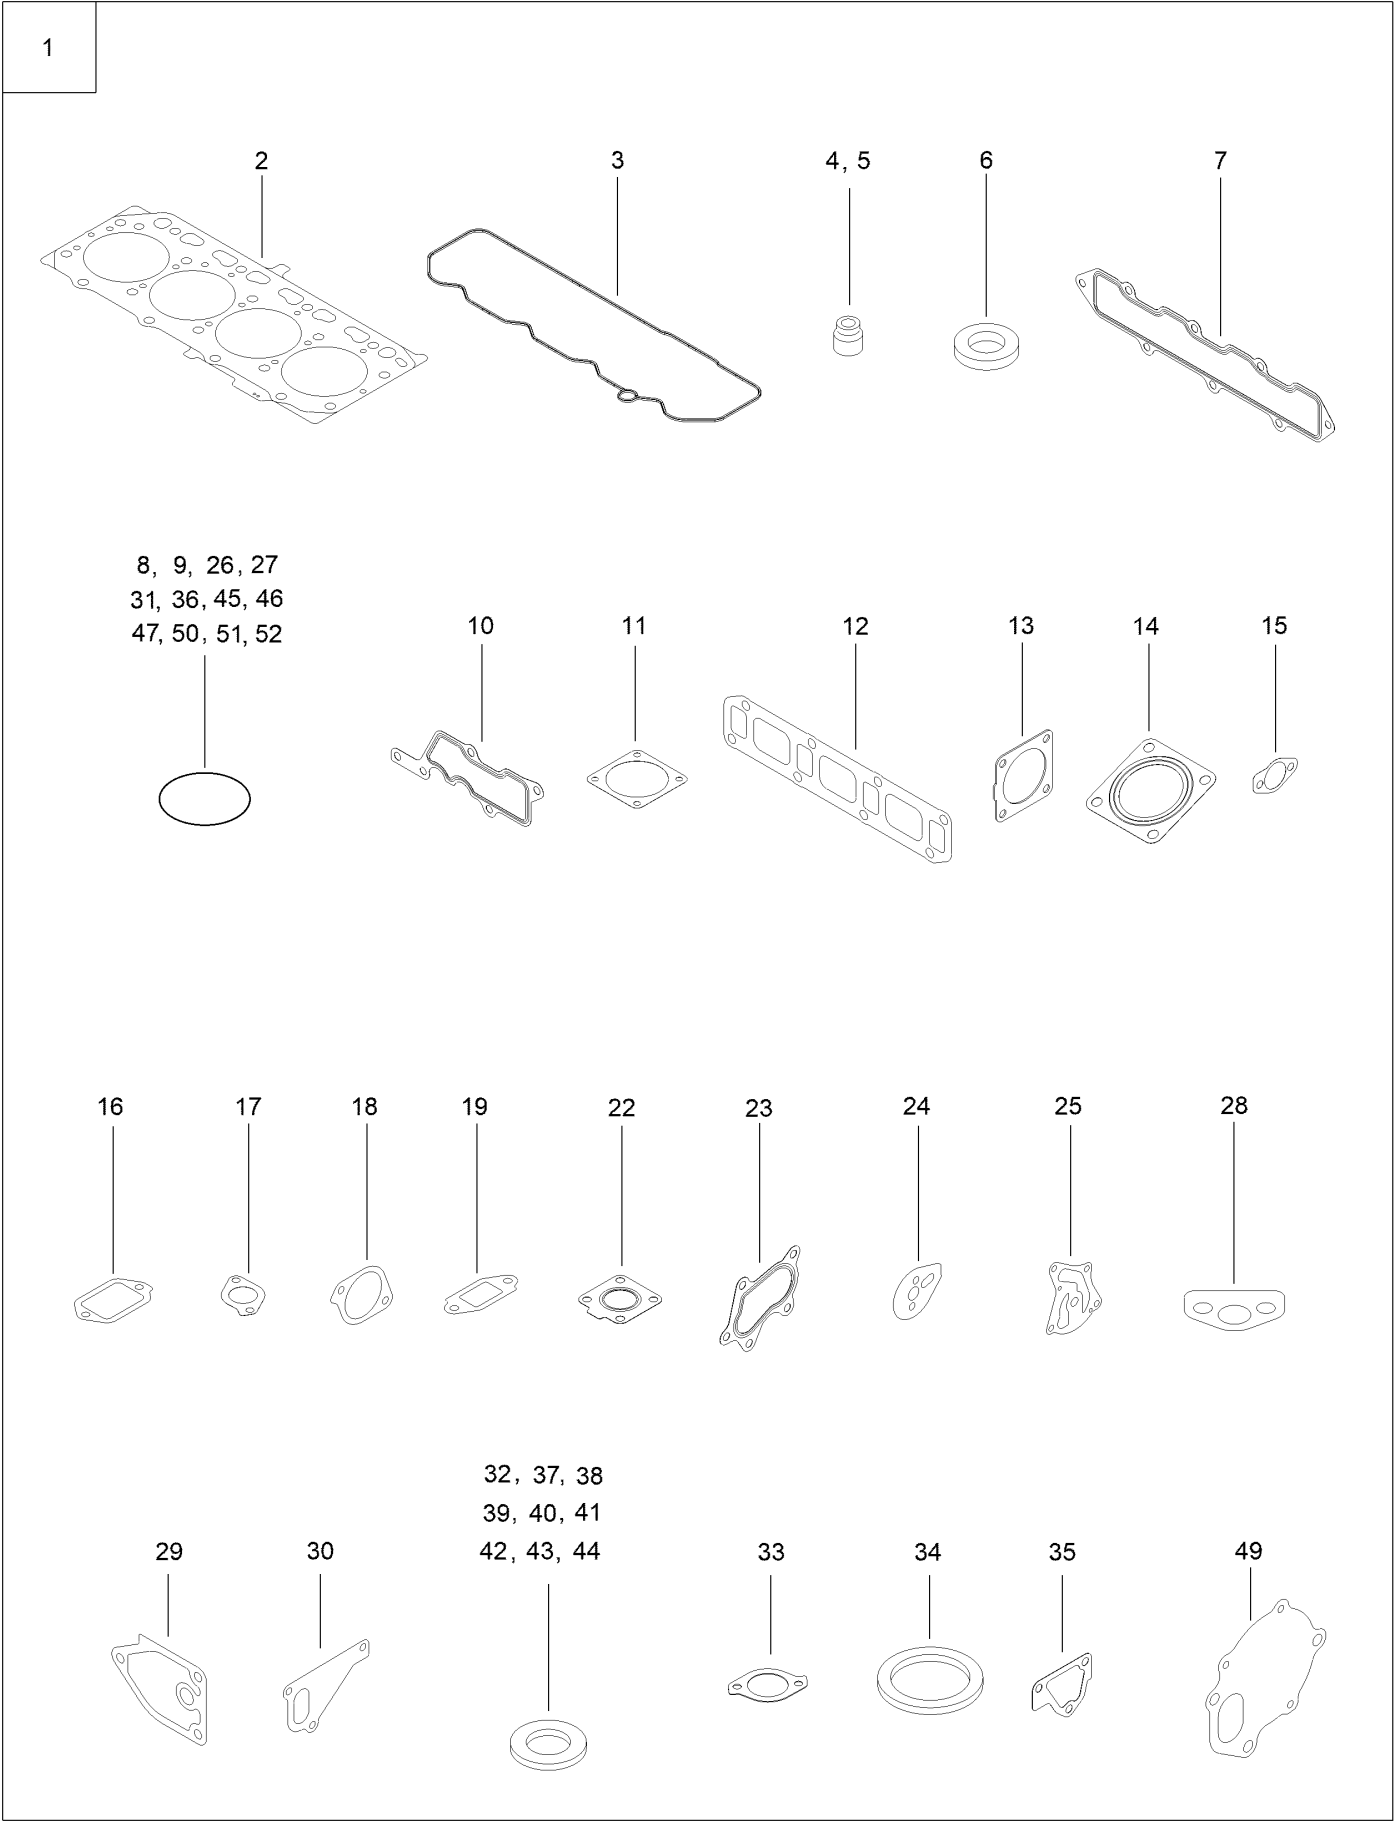

Gasket Set (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-3189	1	Gasket Kit	28	125-7022	1	Gasket
2	127-3126	1	Gasket-Head, Cylinder	29	125-7024	1	Gasket
3	127-3106	1	Gasket-Cover	30	125-7047	1	Gasket
4	127-2986	4	Seal-Stem, Valve	31	125-7048	1	O-Ring
5	127-3027	4	Seal-Stem, Valve	32	125-6979	1	Gasket
6	127-3021	4	Gasket-Injector	33	125-7110	1	Gasket
7	127-3107	1	Gasket-Manifold, Intake	34	125-7026	1	Gasket
8	127-3032	2	O Ring-Sensor, Pressure	35	125-6978	1	Gasket
9	127-3033	1	O-Ring	36	127-3074	1	O-Ring
10	127-3034	1	Gasket-Collector	37	125-7174	1	Washer-Seal
11	127-3037	2	Gasket-Throttle	38	125-7175	2	Washer-Seal
12	127-3108	1	Gasket-Manifold, Exhaust	39	125-7176	1	Washer-Seal
13	127-3019	1	Gasket	40	127-3166	2	Washer-Seal
14	127-2987	1	Gasket-Silencer	41	125-7177	1	Washer-Seal
15	127-3043	2	Gasket-Cooler, E G R	42	125-7192	1	Gasket
16	127-3046	1	Gasket-E G R	43	125-7193	2	Gasket
17	127-3016	1	Gasket	44	127-3174	2	Gasket
18	127-3050	1	Gasket-Intake Valve, E G R	45	93-0418	3	O-Ring
19	127-3051	1	Gasket-Out Valve, E G R	46	125-7197	1	O-Ring
22	125-7070	1	Gasket	47	125-7198	1	O-Ring
23	125-7071	1	Gasket	49	125-6998	1	Gasket
24	127-3069	1	Gasket-Idle, Shaft B	50	127-2985	1	O-Ring
25	127-3004	1	Gasket	51	131-2106	1	O-Ring
26	125-6909	2	O-Ring	52	130-7433	1	O-Ring
27	127-2973	1	O-Ring				

Attachments and Accessories

For 03780 — Reelmaster 7000-D 4-Wheel Drive Traction Unit

Product Name	Model/Part
Operator Cooling Fan	03247
Switch Panel-Universal Sunshade.....	03248
Operator Golf Ball Guard, Reelmaster 3100/3500/5010 or Groundsmaster 3500/4300 Series Traction Unit	03614
27in 8-Blade EDGESERIES (Radial Reel) DPA Cutting Unit.....	03721
27in 11-Blade EDGESERIES (Radial Reel) DPA Cutting Unit.....	03722
32in 8-Blade EDGESERIES (Radial Reel) DPA Cutting Unit.....	03727
27in Verticutter Cutting Unit	03731
Premium All Purpose Grease (Tube)	108-1190
Wireless Hourmeter	115-4754
Large Seat Cover.....	131-6691
PX Hydraulic Fluid (5 Gal)	133-8086
PX Hydraulic Fluid (55 Gal).....	133-8087
Reverse Tow Kit.....	136-3620
Adapter-ball Guard	137-1392
Beacon Kit	138-2699
Power Harness Kit (GM45XX/GM47XX/GM7XXX).....	138-2995
Work Lights Kit, Groundsmaster and Reelmaster Traction Units with Universal Sunshade.....	140-1554
Brush and Handle Kit.....	29-9100
White Universal Sunshade	30669
Red Universal Sunshade	30671
New Red Paint - Gallon	361-11
Dark Metallic Gray Aerosol Paint	361-12
Semi-Gloss Black Spray Paint	361-9
1000 Hour Mvp Kit-Tier IV.....	44967
Air Dry Red Paint - Qt	5340

Notes:



Count on it.