 




MODEL NO. 22025-6000001 &amp; UP

# PARTS CATALOG

## 21" COMMERCIAL SIDE DISCHARGE H.P. 2-CYCLE

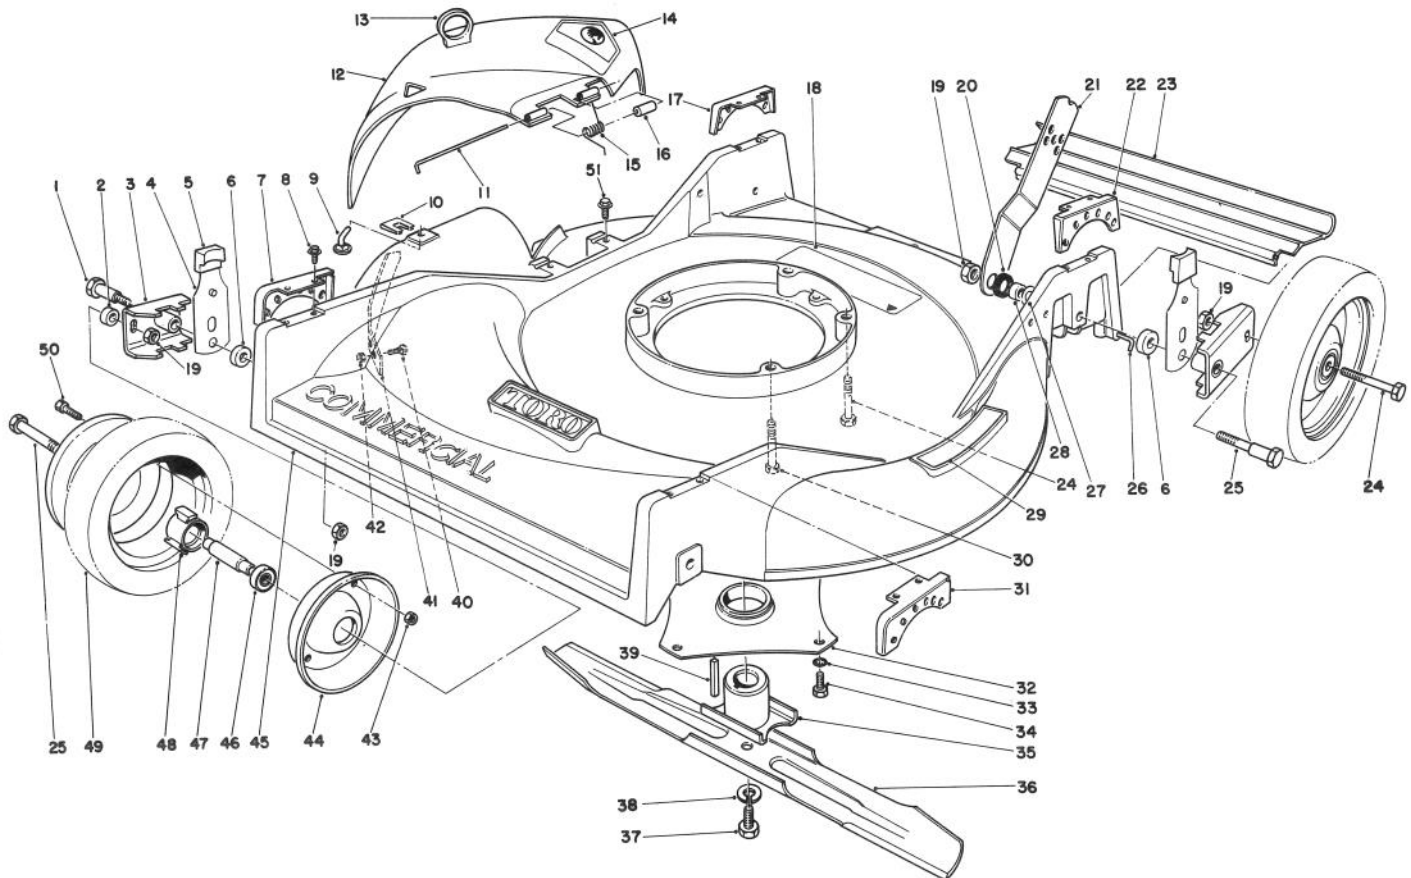 


### HOUSING ASSEMBLY

| Ref. No. | Part No. | Description            | No. Used |
|----------|----------|------------------------|----------|
| 1        | 49-9180  | Screw — Pivot          | 2        |
| 2        | 52-2480  | Spacer — Wheel         | 4        |
| 3        | 49-9160  | Pivot Arm Assembly     | 4        |
| 4        | 49-8800  | Spring Arm Assembly    | 4        |
| 5        | 25-7740  | Knob — Arm             | 4        |
| 6        | 53-7930  | Spacer — Pivot Arm     | 4        |
| 7        | 52-2510  | Quadrant — Front R.H.  | 1        |
| 8        | 11-9760  | Screw — Thread Forming | 8        |
| 9        | 28-3260  | Pin — Chute            | 1        |
| 10       | 28-3250  | Clip — Pin             | 1        |
| 11       | 52-2570  | Pin — Deflector Hinge  | 1        |
| 12       | 53-7910  | Deflector              | 1        |
| 13       | 28-1430  | Loop — Lift            | 1        |
| 14       | 39-5770  | Decal — Danger         | 1        |
| 15       | 52-2560  | Spring — Deflector     | 1        |

| Ref. No. | Part No. | Description                 | No. Used |
|----------|----------|-----------------------------|----------|
| 16       | 28-3270  | Sleeve — Spring             | 1        |
| 17       | 52-2530  | Quadrant — Rear R.H.        | 1        |
| 18       | 29-4720  | Decal — Safety Instructions | 1        |
| 19       | 3296-39  | Nut — Lock                  | 8        |
| 20       | 27-6510  | Spacer — Handle Latch       | 2        |
| 21       | 27-7071  | Latch — Handle              | 2        |
| 22       | 52-2540  | Quadrant — Rear L.H.        | 1        |
| 23       | 52-2640  | Shield — Rear Safety        | 1        |
| 24       | 323-12   | Screw — Cap Hex Hd.         | 7        |
| 25       | 52-2260  | Screw — Pivot Rear          | 2        |
| 26       | 33-3201  | Rod — Shield                | 1        |
| 27       | 3290-340 | Washer Belleville           | 2        |
| 28       | 52-2360  | Spacer — Handle Brace       | 2        |
| 29       | 46-7370  | Decal — Step Pad            | 1        |

PRICE \$1.00

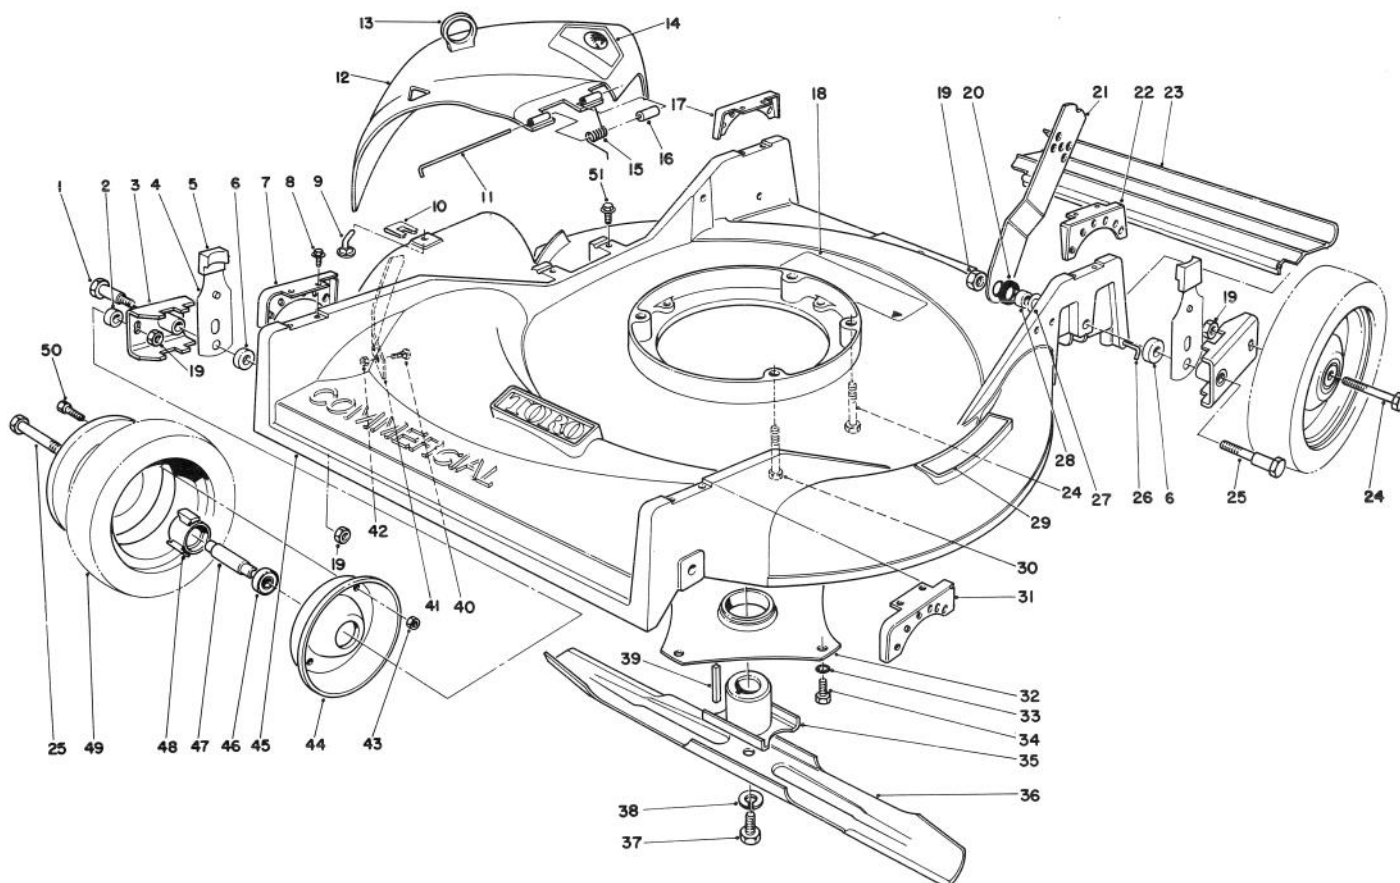


## HOUSING ASSEMBLY (Continued)

| Ref. No. | Part No. | Description                    | No. Used |
|----------|----------|--------------------------------|----------|
| 30       | 323-11   | Screw — Cap Hex Hd.            | 1        |
| 31       | 52-2520  | Quadrant — Front L.H.          | 1        |
| 32       | 52-2500  | Crankshaft Protector           | 1        |
| 33       | 3254-6   | Washer — Lock Internal Tooth   | 4        |
| 34       | 32144-11 | Screw — Thread Forming Hex Hd. | 4        |
| 35       | 52-2170  | Blade Retainer                 | 1        |
| 36       | 8-5230   | Blade — 21"                    | 1        |
| 37       | 26-0671  | Screw — Blade                  | 1        |
| 38       | 3253-22  | Washer — Lock                  | 1        |
| 39       | 27-8590  | Key — Square                   | 1        |
| 40       | 3230-16  | Carriage Bolt                  | 2        |
| 41       | 52-2650  | Bar — Safety                   | 1        |
| 42       | 3296-29  | Locknut                        | 2        |

| Ref. No. | Part No. | Description                                        | No. Used |
|----------|----------|----------------------------------------------------|----------|
| 43       | 3296-56  | Nut — Lock                                         | 16       |
| 44       | 53-7780  | Plate — Wheel Half                                 | 8        |
| 45       | 53-7890  | Housing                                            | 1        |
| 46       | 52-2450  | Bearing — Wheel                                    | 8        |
| 47       | 52-2440  | Spacer — Bearing                                   | 4        |
| 48       | 52-2410  | Hub — Bearing Support                              | 4        |
| 49       | 53-7740  | Tire                                               | 4        |
| 50       | 3234-26  | Screw — Cap Hex Hd.                                | 16       |
| 51       | 46-6811  | Screw/Washer Assembly                              | 2        |
| *        | 53-7760  | Hub Assembly (Incl. Ref. #43, 44, 46-48 & 50)      | 4        |
| *        | 53-7720  | Wheel & Tire Assembly (Incl. Ref. #43, 44 & 46-50) | 4        |

 \*Not Illustrated

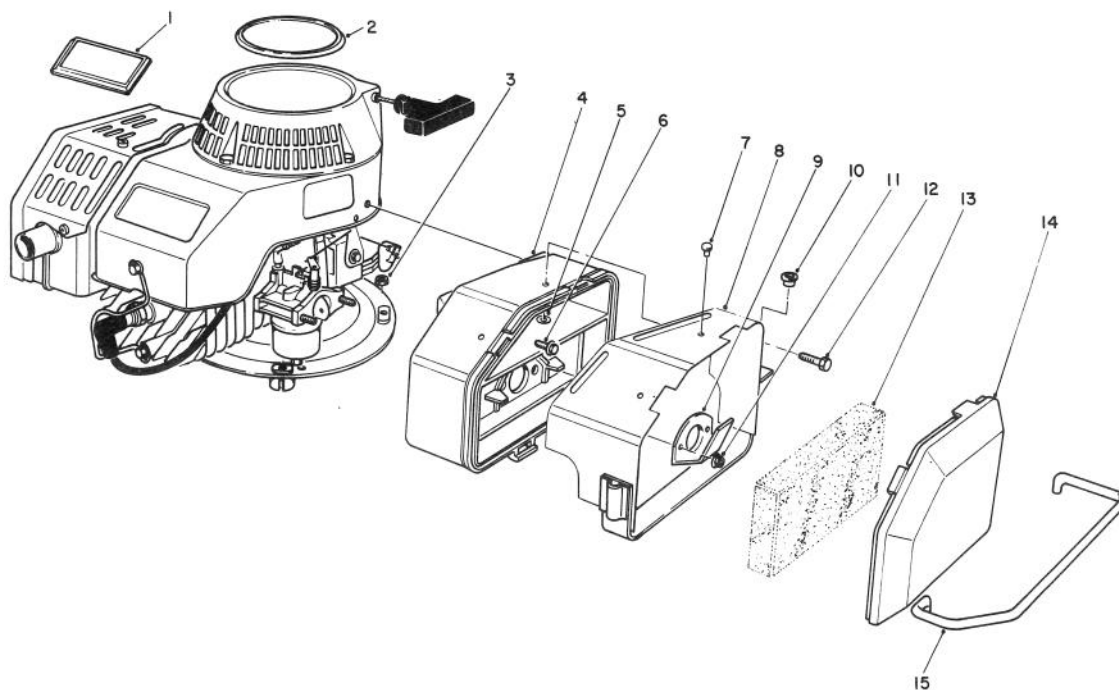


## ENGINE ASSEMBLY

| Ref. No. | Part No. | Description                                    | No. Used |
|----------|----------|------------------------------------------------|----------|
| 1        | 46-8291  | Plate — Logo Toro                              | 1        |
| 2        | 49-9030  | Plate — Logo Engine                            | 1        |
| 3        | 3218-3   | Nut — Hex Jam                                  | 3        |
| 4        | 52-2200  | Air Cleaner Assembly<br>(Incl. Ref. #5, 7 & 8) | 1        |
| 5        | 3269-6   | Washer                                         | 2        |
| 6        | 51-3220  | Capscrew — Hex Flange                          | 1        |
| 7        | 3269-5   | Rivet                                          | 2        |
| 8        | 52-2250  | Air Cleaner Band                               | 1        |

| Ref. No. | Part No. | Description           | No. Used |
|----------|----------|-----------------------|----------|
| 9        | 81-0140  | Deflector — Spitback  | 1        |
| 10       | 237-127  | Snap Bushing          | 1        |
| 11       | 49-7810  | Locknut — Hex Flange  | 2        |
| 12       | 81-1280  | Capscrew — Hex Flange | 1        |
| 13       | 81-0100  | Filter — Foam         | 1        |
| 14       | 81-0120  | Cover — Air Cleaner   | 1        |
| 15       | 52-2240  | Guard — Air Cleaner   | 1        |
| *        | 59260    | Complete Engine       | 1        |

 \*Not Illustrated

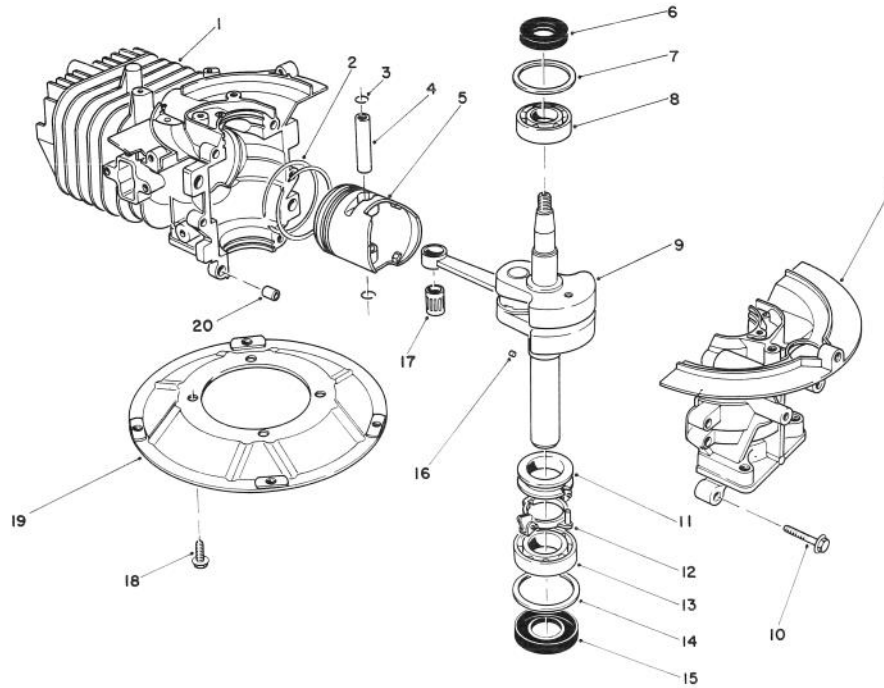


## SHORT BLOCK ASSEMBLY

| Ref. No. | Part No. | Description                        | No. Used |
|----------|----------|------------------------------------|----------|
| 1        | 81-2800  | Crankcase/Cylinder Assy.           | 1        |
| 2        | 81-0590  | Ring Set                           | 1        |
| 3        | 81-0620  | Circlip                            | 2        |
| 4        | 81-0600  | Wrist Pin                          | 1        |
| 5        | 81-2140  | Piston — 58 mm                     | 1        |
| 6        | 81-0720  | Oil Seal — Upper                   | 1        |
| 7        | 81-0710  | Thrust Washer — Upper              | 1        |
| 8        | 81-0690  | Bearing — Upper 20 mm              | 1        |
| 9        | 81-2150  | Crankshaft/Connecting Rod Assembly | 1        |
| 10       | 81-0540  | Bolt (30 mm Lg.)                   | 6        |

| Ref. No. | Part No. | Description            | No. Used |
|----------|----------|------------------------|----------|
| 11       | 81-0770  | Collar — Governor      | 1        |
| 12       | 81-0750  | Bracket — Governor Arm | 1        |
| 13       | 81-0700  | Bearing — Lower 25 mm  | 1        |
| 14       | 81-0730  | Thrust Washer — Lower  | 1        |
| 15       | 81-0740  | Oil Seal — Lower       | 1        |
| 16       | 81-0760  | Pin                    | 1        |
| 17       | 81-0610  | Bearing — Wrist Pin    | 1        |
| 18       | 81-0570  | Bolt                   | 4        |
| 19       | 81-0560  | Plate — Mounting       | 1        |
| 20       | 81-0520  | Pin — Crankcase Dowel  | 2        |
| *        | 11-6309  | Short Block            | 1        |

 \*Not Illustrated

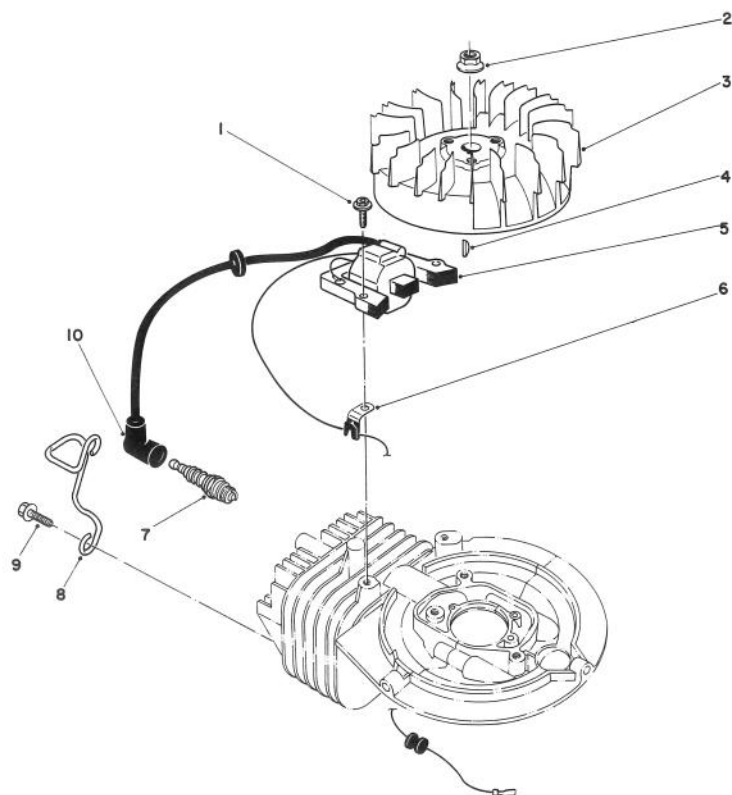


## FLYWHEEL & MAGNETO ASSEMBLY

| Ref. No. | Part No. | Description                                                     | No. Used |
|----------|----------|-----------------------------------------------------------------|----------|
| 1        | 81-2050  | Capscrew — Allenhead                                            | 2        |
| 2        | 81-1330  | Nut                                                             | 1        |
| 3        | 81-1980  | Flywheel — Magneto<br>(Machine Serial #6000001<br>thru 6003540) | 1        |
| *        | 81-2810  | Flywheel — Magneto<br>(Machine Serial #6003541<br>& UP)         | 1        |
| 4        | 81-2370  | Key — Flywheel                                                  | 1        |

| Ref. No. | Part No. | Description                                                         | No. Used |
|----------|----------|---------------------------------------------------------------------|----------|
| 5        | 81-1990  | Coil/Ignition Assembly<br>(Machine Serial #6000001<br>thru 6003540) | 1        |
| *        | 81-2820  | Coil/Ignition Assembly<br>(Machine Serial #6003541<br>& UP)         | 1        |
| 6        | 81-1480  | Clamp                                                               | 1        |
| 7        | 81-0181  | Spark Plug                                                          | 1        |
| 8        | 81-2120  | Guard — Spark Plug                                                  | 1        |
| 9        | 81-2350  | Bolt — Self Tapping<br>(20 mm Lg.)                                  | 2        |
| 10       | 81-1500  | Cap Assembly — Spark Plug                                           | 1        |
| *        | 41-7650  | Puller — Flywheel                                                   | 1        |

\*Not Illustrated

 Note: Do not interchange Coil/Ignition Assemblies or Flywheels.

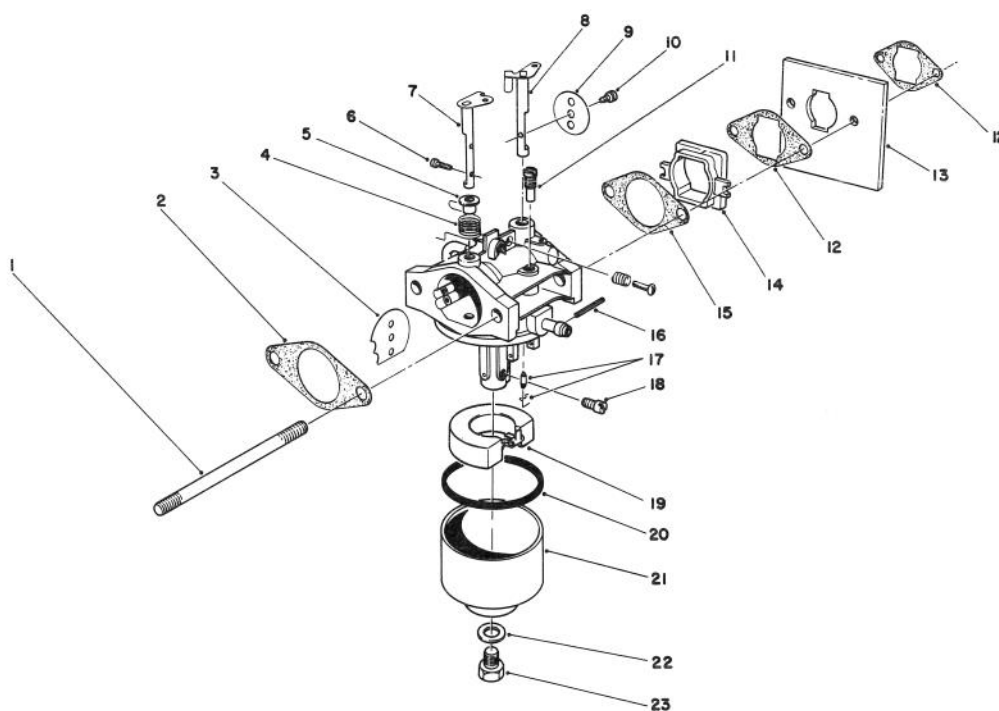


## CARBURETOR ASSEMBLY

| Ref. No. | Part No. | Description            | No. Used |
|----------|----------|------------------------|----------|
| 1        | 81-2240  | Stud Bolt — Carburetor | 2        |
| 2        | 81-0090  | Gasket                 | 1        |
| 3        | 81-0240  | Valve — Choke          | 1        |
| 4        | 81-0230  | Spring — Choke         | 1        |
| 5        | 81-0220  | Bushing — Choke        | 1        |
| 6        | 81-2160  | Screw — Choke Plate    | 2        |
| 7        | 81-1950  | Shaft — Choke          | 1        |
| 8        | 81-0250  | Shaft — Throttle       | 1        |
| 9        | 81-0260  | Valve — Throttle       | 1        |
| 10       | 81-0270  | Screw — Throttle       | 1        |
| 11       | 81-1030  | Jet — Pilot (#40)      | 1        |
| 12       | 81-2320  | Gasket — Shield        | 2        |
| 13       | 81-2330  | Shield — Carburetor    | 1        |
| 14       | 81-2190  | Insulator — Carburetor | 1        |

| Ref. No. | Part No. | Description                                             | No. Used |
|----------|----------|---------------------------------------------------------|----------|
| 15       | 81-0780  | Gasket — Carburetor                                     | 1        |
| 16       | 81-0980  | Pin — Float                                             | 1        |
| 17       | 81-1600  | Needle Valve — Float                                    | 1        |
| 18       | 81-1940  | Jet — Main (#76.3)                                      | 1        |
| *        | 81-2340  | Jet — Main (#72.5) High Alt. Above 6,000 Ft. (Optional) | 1        |
| 19       | 81-0970  | Float                                                   | 1        |
| 20       | 81-1010  | Gasket — Float Bowl                                     | 1        |
| 21       | 81-1610  | Bowl — Float                                            | 1        |
| 22       | 81-1020  | Gasket — Bowl Capscrew                                  | 1        |
| 23       | 81-1000  | Capscrew — Bowl                                         | 1        |
| *        | 81-1960  | Carburetor Kit (Incl. Ref. #2, 15, 17, 20 & 22)         | 1        |
| *        | 81-1930  | Carburetor Assembly Complete                            | 1        |

 
\*Not Illustrated

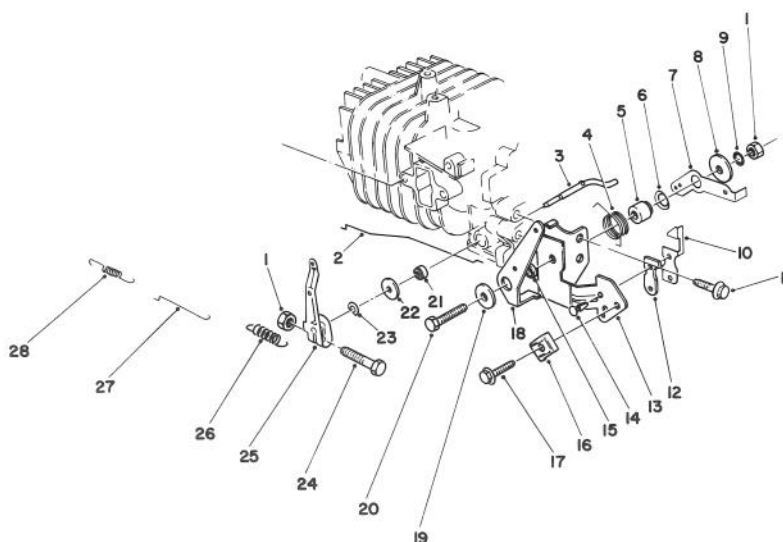

## GOVERNOR ASSEMBLY (Machine Serial No. 6000001 thru 6003540)

| Ref. No. | Part No. | Description                  | No. Used |
|----------|----------|------------------------------|----------|
| 1        | 81-0900  | Nut                          | 2        |
| 2        | 81-1720  | Rod — Choke                  | 1        |
| 3        | 81-0840  | Shaft — Governor             | 1        |
| 4        | 81-2460  | Spring — Choke Control Lever | 1        |
| 5        | 81-1770  | Spacer — Governor            |          |
|          |          | Spring Lever                 | 1        |
| 6        | 81-1820  | Washer — Governor            |          |
|          |          | Spring Lever                 | 1        |
| 7        | 81-1670  | Lever — Governor Spring      | 1        |
| 8        | 50-0760  | Washer — Choke Control Lever | 1        |
| 9        | 81-1450  | Washer — Lock                | 1        |
| 10       | 81-1840  | Terminal — Kill Switch       | 1        |
| 11       | 81-1170  | Bolt — Self Tapping          |          |
|          |          | (15 mm Lg.)                  | 1        |
| 12       | 81-1830  | Insulator — Kill Switch      | 1        |
| 13       | 81-1680  | Bracket — Throttle Control   | 1        |

 
| Ref. No. | Part No. | Description                     | No. Used |
|----------|----------|---------------------------------|----------|
| 14       | 81-1850  | Rivet — Kill Switch             | 2        |
| 15       | 81-1760  | Spacer — Choke Control Lever    | 1        |
| 16       | 81-1690  | Clamp — Cable                   | 1        |
| 17       | 50-0130  | Bolt — Cable Clamp              | 1        |
| 18       | 81-1710  | Lever — Choke Control           | 1        |
| 19       | 81-1750  | Washer                          | 1        |
| 20       | 81-1730  | Bolt — Throttle Control Bracket | 1        |
| 21       | 81-0850  | Oil Seal — Governor Shaft       | 1        |
| 22       | 81-0860  | Washer                          | 1        |
| 23       | 81-0870  | E — Ring                        | 1        |
| 24       | 81-0890  | Bolt                            | 1        |
| 25       | 81-0880  | Lever — Throttle Control        | 1        |
| 26       | 81-0940  | Spring — Governor               | 1        |
| 27       | 81-0910  | Rod — Carburetor                | 1        |
| 28       | 81-0920  | Spring — Carburetor Rod         | 1        |

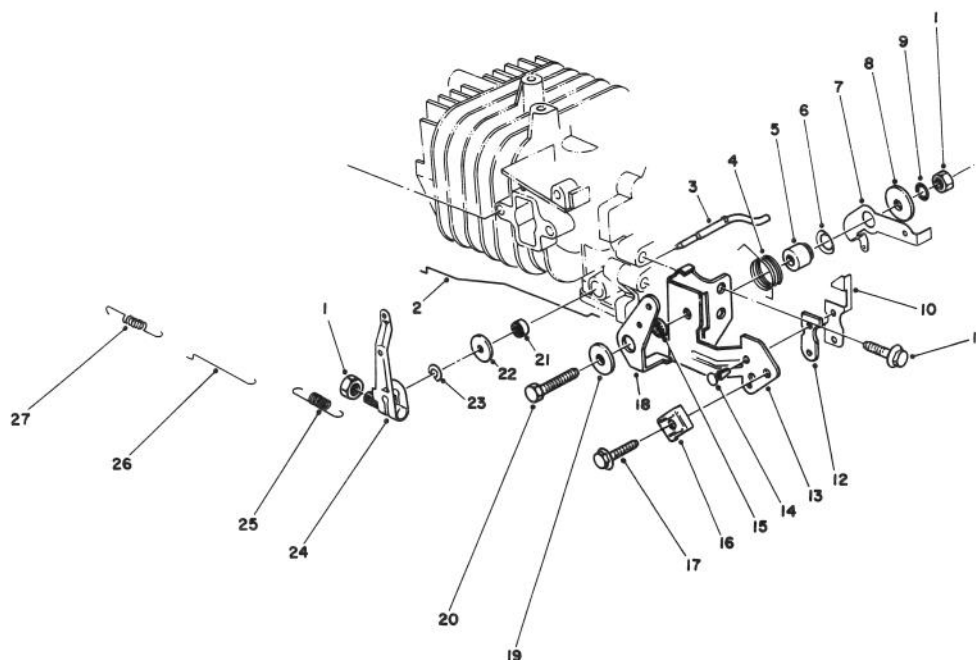

## GOVERNOR ASSEMBLY (Machine Serial No. 6003641 & UP)

| Ref. No. | Part No. | Description                     | No. Used |
|----------|----------|---------------------------------|----------|
| 1        | 81-0900  | Nut                             | 2        |
| 2        | 81-1720  | Rod — Choke                     | 1        |
| 3        | 81-0840  | Shaft — Governor                | 1        |
| 4        | 81-2460  | Spring — Choke Control Lever    | 1        |
| 5        | 81-1770  | Spacer — Governor Spring Lever  | 1        |
| 6        | 81-1820  | Washer — Governor Spring Lever  | 1        |
| 7        | 81-2850  | Lever — Governor Spring         | 1        |
| 8        | 81-1750  | Washer — Governor Control Lever | 1        |
| 9        | 81-1450  | Washer — Lock                   | 1        |
| 10       | 81-1840  | Terminal — Kill Switch          | 1        |
| 11       | 81-1170  | Bolt — Self Tapping (15 mm Lg.) | 1        |
| 12       | 81-1830  | Insulator — Kill Switch         | 1        |
 
| Ref. No. | Part No. | Description                     | No. Used |
|----------|----------|---------------------------------|----------|
| 13       | 81-2420  | Bracket — Throttle Control      | 1        |
| 14       | 81-1850  | Rivet — Kill Switch             | 2        |
| 15       | 81-2470  | Spacer — Choke Control Lever    | 1        |
| 16       | 81-2430  | Clamp — Cable                   | 1        |
| 17       | 50-0130  | Bolt — Cable Clamp              | 1        |
| 18       | 81-1710  | Lever — Choke Control           | 1        |
| 19       | 50-0760  | Washer — Choke Control Lever    | 1        |
| 20       | 81-1730  | Bolt — Throttle Control Bracket | 1        |
| 21       | 81-0850  | Oil Seal — Governor Shaft       | 1        |
| 22       | 81-0860  | Washer                          | 1        |
| 23       | 81-0870  | E-Ring                          | 1        |
| 24       | 81-2840  | Throttle Control Lever Assembly | 1        |
| 25       | 81-2830  | Spring — Governor               | 1        |
| 26       | 81-0910  | Rod — Carburetor                | 1        |
| 27       | 81-0920  | Spring — Carburetor Rod         | 1        |

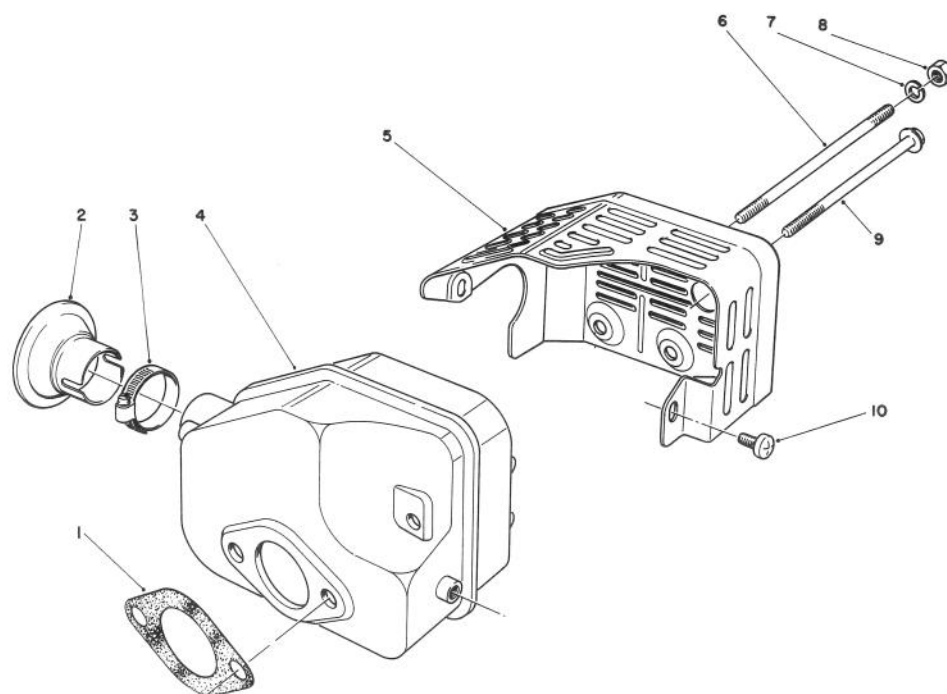


## MUFFLER ASSEMBLY

| Ref. No. | Part No. | Description               | No. Used |
|----------|----------|---------------------------|----------|
| 1        | 81-1080  | Gasket — Muffler          | 1        |
| 2        | 81-0200  | Spark Arrester (Optional) | 1        |
| 3†       |          | Clamp                     | 1        |
| 4        | 81-1090  | Muffler                   | 1        |
| 5        | 81-2450  | Cover — Muffler           | 1        |

| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| 6        | 81-1100  | Stud — Muffler       | 2        |
| 7        | 81-1120  | Lockwasher           | 2        |
| 8        | 81-1110  | Nut                  | 2        |
| 9        | 81-1150  | Bolt — Self Tapping  | 1        |
| 10       | 81-1140  | Screw — Phillips Hd. | 2        |

 † Obtain Locally

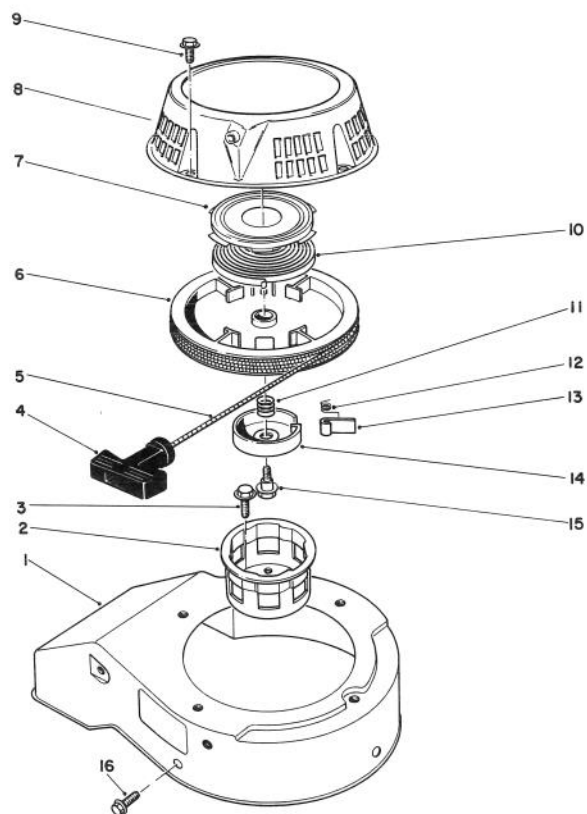


## RECOIL STARTER ASSEMBLY

| Ref. No. | Part No. | Description              | No. Used |
|----------|----------|--------------------------|----------|
| 1        | 81-2080  | Cover — Cooling Fan      | 1        |
| 2        | 81-1290  | Pulley — Starter Cup     | 1        |
| 3        | 81-1300  | Bolt 16 mm Lg.           | 3        |
| 4        | 81-1630  | Handle — Recoil          | 1        |
| 5        | 81-1270  | Rope                     | 1        |
| 6        | 81-1210  | Pulley — Rope            | 1        |
| 7        | 81-1640  | Retainer — Recoil Spring | 1        |
| 8        | 81-2100  | Case — Starter           | 1        |
| 9        | 81-1280  | Bolt                     | 4        |
| 10       | 81-1200  | Spring — Recoil          | 1        |
| 11       | 81-1240  | Spring — Compression     | 1        |

| Ref. No. | Part No. | Description                            | No. Used |
|----------|----------|----------------------------------------|----------|
| 12       | 81-1220  | Spring — Dog                           | 1        |
| 13       | 81-1230  | Dog — Starter                          | 1        |
| 14       | 81-1250  | Retainer — Dog                         | 1        |
| 15       | 81-1260  | Bolt Shoulder                          | 1        |
| 16       | 81-1170  | Bolt — Self Tapping<br>(15 mm Lg.)     | 2        |
| *        | 81-2030  | Starter Assembly<br>(Incl. Ref. #4-15) | 1        |
| *        | 81-2300  | Recoil & Cup<br>(Incl. Ref. #7 & 10)   | 1        |

 
\*Not Illustrated

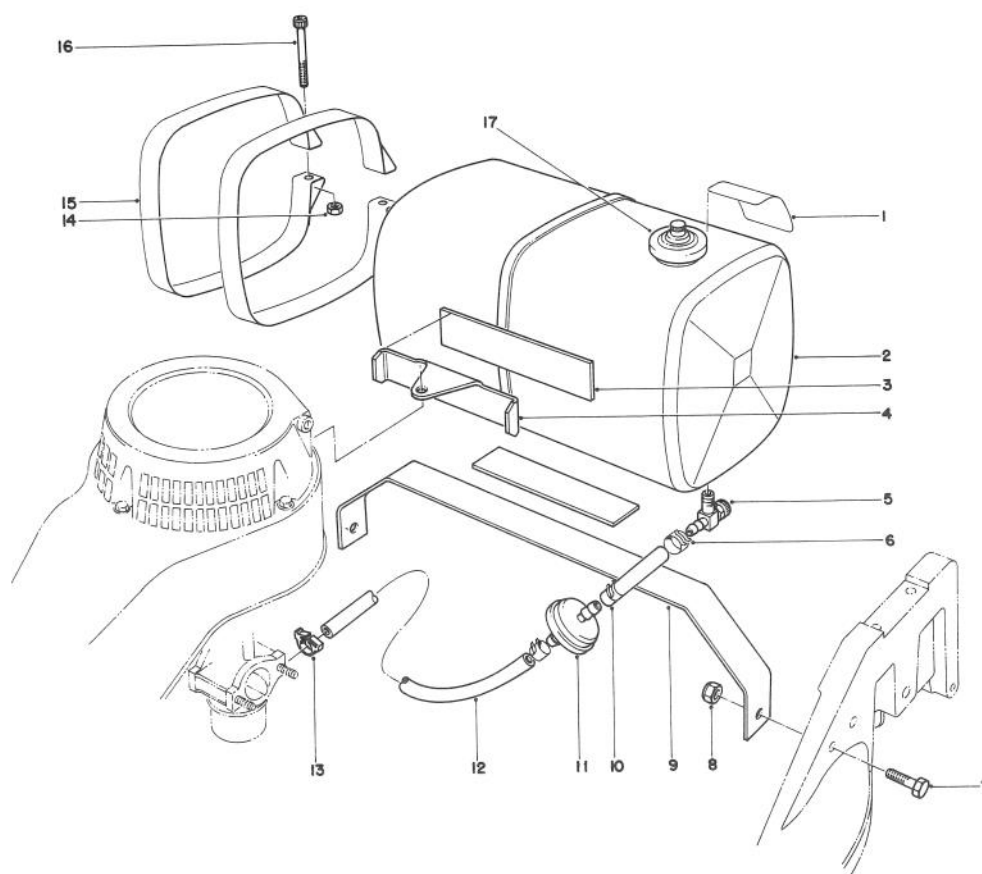

## GAS TANK ASSEMBLY

| Ref. No. | Part No. | Description               | No. Used |
|----------|----------|---------------------------|----------|
| 1        | 52-2350  | Decal — Fuel Tank         | 1        |
| 2        | 52-2331  | Gas Tank (Incl. Ref. #17) | 1        |
| 3        | 52-2290  | Pad — Isolator            | 2        |
| 4        | 52-2270  | Mount — Tank, Front       | 1        |
| 5        | 304-71   | Valve — Fuel Shutoff      | 1        |
| 6        | 2412-86  | Clamp — Fuel Line         | 3        |
| 7        | 322-6    | Screw — Cap Hex Hd.       | 2        |
| 8        | 3296-29  | Nut — Lock                | 2        |
| 9        | 52-2280  | Mount — Tank, Bottom      | 1        |

 
| Ref. No. | Part No. | Description                | No. Used |
|----------|----------|----------------------------|----------|
| 10       | 51-3210  | Line — Fuel                | 1        |
| 11       | 42-5240  | Filter — Fuel              | 1        |
| 12       | 51-3211  | Line — Fuel                | 1        |
| 13       | 51-3200  | Clamp — Fuel Line          | 1        |
| 14       | 3217-5   | Nut — Hex                  | 2        |
| 15       | 39-0570  | Strap — Tank Mounting      | 2        |
| 16       | 3274-62  | Screw — Cap Hex Socket Hd. | 2        |
| 17       | 55-4700  | Cap — Gas                  | 1        |

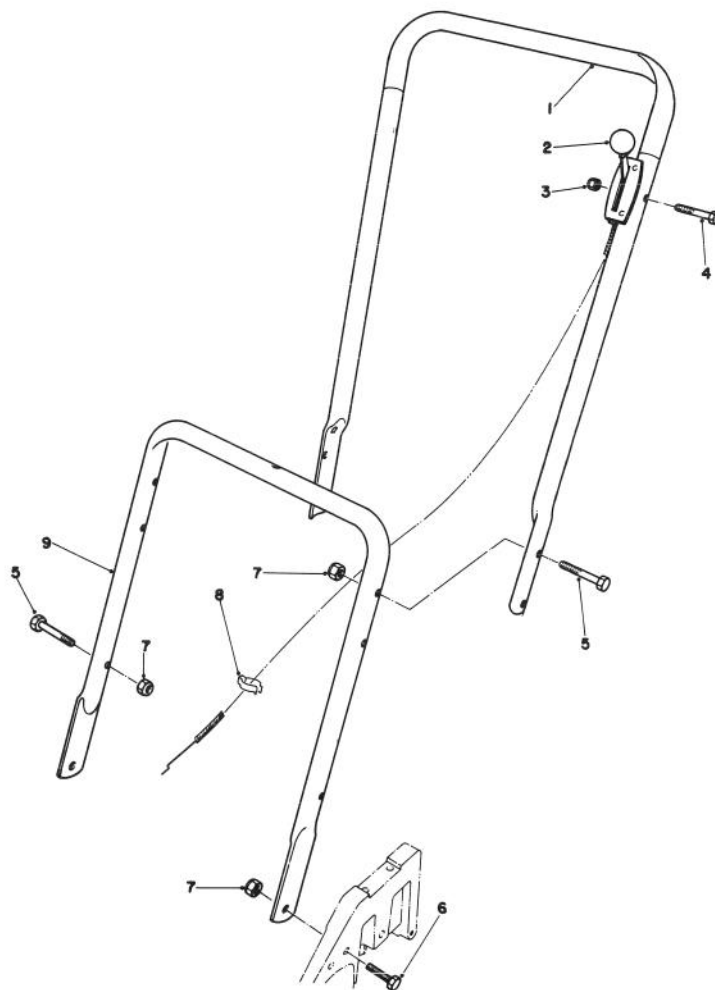

## HANDLE ASSEMBLY

| Ref. No. | Part No. | Description         | No. Used |
|----------|----------|---------------------|----------|
| 1        | 52-2380  | Handle — Upper      | 1        |
| 2        | 53-7831  | Control — Bowden    | 1        |
| 3        | 3296-42  | Nut — Lock          | 1        |
| 4        | 321-10   | Screw — Cap Hex Hd. | 1        |
| 5        | 322-7    | Screw — Cap Hex Hd. | 6        |
 
| Ref. No. | Part No. | Description         | No. Used |
|----------|----------|---------------------|----------|
| 6        | 322-6    | Screw — Cap Hex Hd. | 2        |
| 7        | 3296-29  | Nut — Lock          | 8        |
| 8        | 3290-378 | Clip — Bowden       | 1        |
| 9        | 52-2370  | Handle — Lower      | 1        |

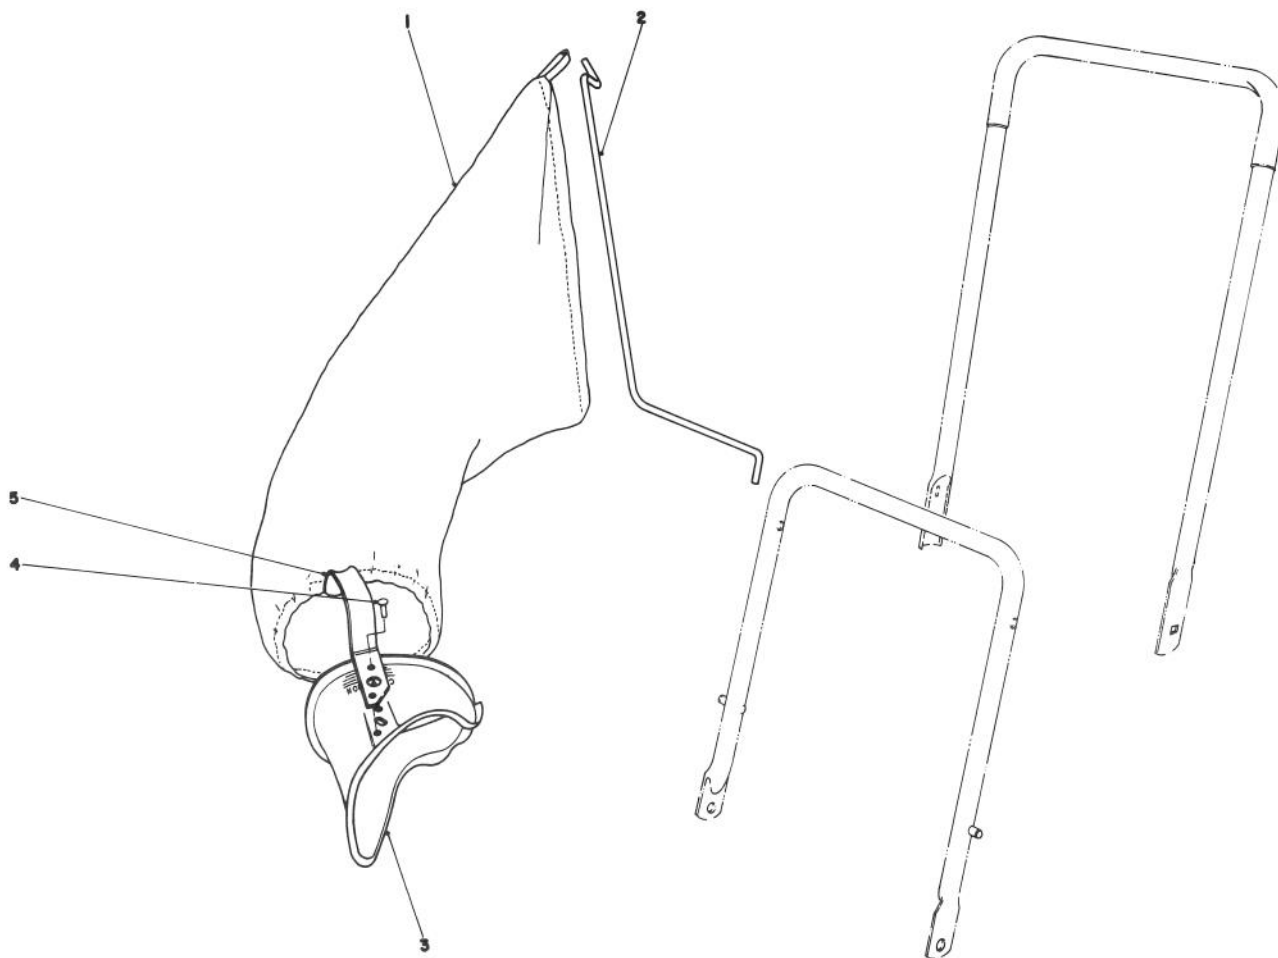

### GRASS BAGGING KIT NO. 38-0050 (Optional)

| Ref. No. | Part No. | Description                               | No. Used |
|----------|----------|-------------------------------------------|----------|
| 1        | 6-0929   | Grass Bag                                 | 1        |
| 2        | 19-4210  | Bag Rod                                   | 1        |
| 3        | 38-0010  | Grass Chute Assembly<br>(Incl. Ref. #4-5) | 1        |

| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| 4        | 3295-26  | Rivet — Semi Tubular | 2        |
| 5        | 38-0030  | Handle Bag Chute     | 1        |

# The Toro Promise

## A ONE YEAR LIMITED WARRANTY

*The Toro Company promises to repair your TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:*

### Commercial Products ..... 1 Year

*The costs of parts and labor are included, but the customer pays the transportation costs on walk rotary mowers with cutting unit width of less than 25".*

If you feel your TORO product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact your Authorized TORO Distributor or Commercial Dealer (the Yellow Pages of your telephone directory is a good reference source).
2. The Toro Distributor or Commercial Dealer will advise on the arrangements that can be made to inspect and repair your product.
3. The TORO Distributor or Commercial Dealer will inspect the product and advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without an extra charge to you.

If for any reason you are dissatisfied with the distributor's analysis of the defect or the service performed, you may contact us.

Write:

TORO Commercial Products Service Department  
8111 Lyndale Avenue South  
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Distributor or Commercial Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This Warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper condition is the responsibility of the owner.

All warranty repairs reimbursable under the Toro Promise must be performed by an Authorized TORO Commercial Dealer or Distributor using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Distributor or Commercial Dealer are not reimbursable under the Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

### COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any

reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

Compliance with Radio Interference Regulations Certified.  
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.



## MAINTENANCE RECORD

[illegible]