



Form No. 3482-760 Rev A

Count on it.

Parts Catalog

Multi Pro® 1750 Turf Sprayer

Model No. 41196—Serial No. 420800000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Roll-Over Protection System and Seat Assembly	6
Frame Assembly.	8
Rear Drive Assembly	10
Case Assembly Transaxle Assembly No. 120-7610.	12
Center Plate Assembly Transaxle Assembly No. 120-7610	13
Main Shaft Assembly Transaxle Assembly No. 120-7610	14
Reduction Shaft Assembly Transaxle Assembly No. 120-7610	15
Reverse Shaft Assembly Transaxle Assembly No. 120-7610	16
Main Shift Assembly Transaxle Assembly No. 120-7610.	17
Counter Shaft Assembly Transaxle Assembly No. 120-7610	18
Differential Gear Assembly Transaxle Assembly No. 120-7610	19
Differential Carrier Assembly Transaxle Assembly No. 120-7610	20
Differential Lock Assembly Transaxle Assembly No. 120-7610	21
Axle Shaft Assembly Transaxle Assembly No. 120-7610	22
Brake Caliper Assembly No. 127-7424.	23
Brake Hydraulic Assembly	24
Master Cylinder Assembly No. 104-6782.	25
Front Suspension Assembly	26
Hydraulic Cylinder Assembly No. 125-0720	29
Pedal Assembly	30
Parking Brake Lever and Cable Assembly	31
Control Console Mount Assembly	32
Gear Shift and Drift Lock Control Assembly	33
Shift Assembly No. 106-7887.	34
Control Console Assembly	36
Hood, Dash and Headlight Assembly	38
Seat Base and Front Fender Assembly	40
Air Cleaner Assembly	42
Air Cleaner Assembly No. 138-5650.	44
Hydraulic Steering Assembly	45
Hydraulic Pump Assembly No. 121-6545.	47
Steering Valve Assembly No. 138-6100.	48
Boom Lift Hydraulic Assembly	49
Hydraulic Cylinder Assembly No. 117-0701.	50
On-Off Boom Lift Valve Assembly No. 136-2400	52
Engine Mounting Assembly	54
Pump Assembly No. 145-3381	56
Exhaust Assembly	58
Fuel Tank, Filter and Line Assembly	60
Fuel Tank Assembly No. 115-9048	62
Driveshaft Connection Assembly.	64
Driveshaft Assembly No. 119-6040.	66
Clutch and Bell Housing Assembly	67
Spray Tank Assembly	68
Tank Assembly No. 121-6491	69
Spray Tank Lid Assembly No. 138-6283	70
Filter Assembly No. 130-7096	71
Spray Tank Valve Assembly	72
Section Manifold Assembly.	74
3-Way Valve Assembly No. 147-3183.	76
Bypass Valve Assembly No. 127-9805.	77
Agitation Manifold Assembly	78
M100 Manifold Assembly No. 161-4110.	80
Hose Assembly.	82

Contents (continued)

Main Wiring Harness and Battery Assembly 84

Wiring Harness Assembly No. 122-4313 86

Center Boom Mount Assembly..... 88

LH Single Turret Body Assembly No. 108-3725 90

Double Turret Body Assembly No. 108-3727 91

RH Single Body Turret Assembly No. 108-3726 92

 
Boom Pivot Mount Assembly 94

Boom Pivot Bracket Assembly 95

Left and Right Hand Boom Assembly 96

Attachments and Accessories 97


Roll-Over Protection System and Seat Assembly

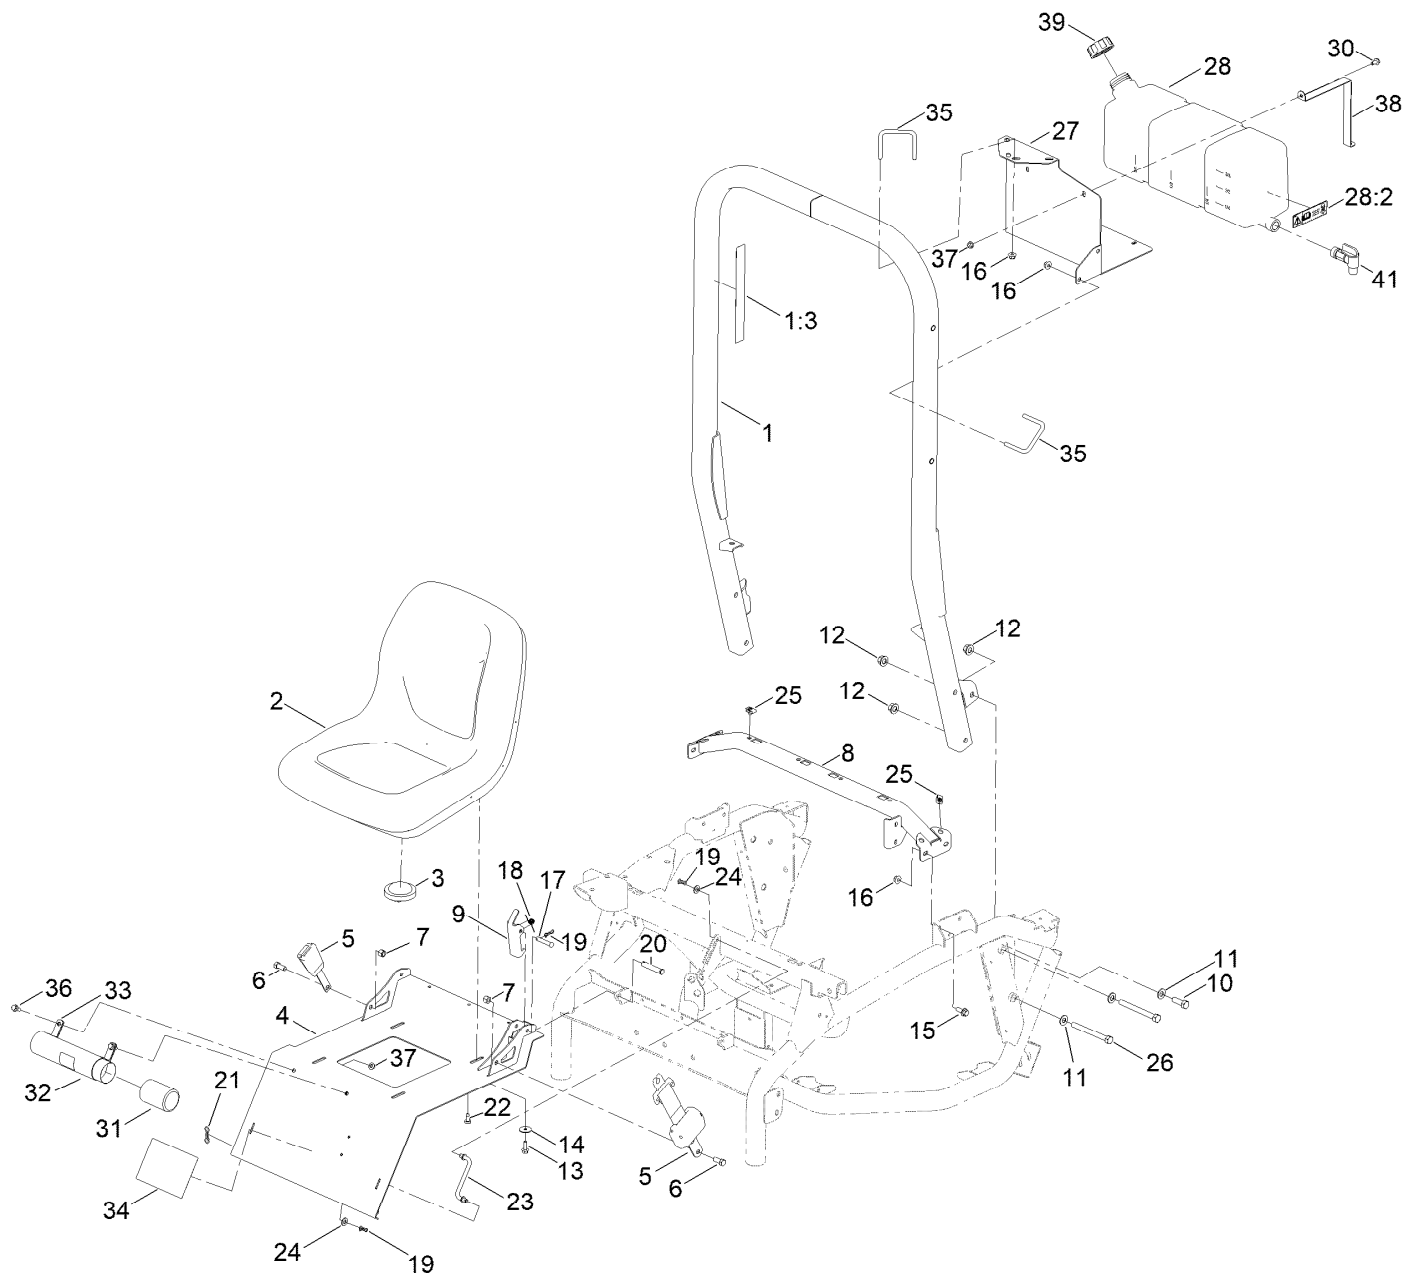

Roll-Over Protection System and Seat Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-3918	1	ROPS ASM	20	100-6541	2	Pin-Clevis
1:3	127-3939	1	Decal-ROPS	21	119-1416	2	Pin-Cotter, Locking
2	112-2923	1	Seat ASM	22	87-8460	3	Bumper-Rubber
3	100-3524	1	Switch-Seat	23	125-0909	1	Rod-Prop, Seat
4	125-0872-03	1	Plate-Seat	24	3256-24	2	Washer-Plain
5	110-0413	1	Seatbelt-Retractable	25	94-2413	3	Nut-U
6	3212-4	2	Screw-HH	26	325-19	4	Screw-HH
7	3296-7	2	Nut-Lock	27	131-5797-03	1	Mount-Tank, Eye Wash
8	163-2948-03	1	Seat Cross-Member, ASM [black]	28	132-7745	1	Fresh Water Tank ASM
9	125-0916	1	Latch-Seat	28:2	120-0616	3	Decal-Water, Fresh
10	325-6	2	Screw-HH	30	3234-7	4	Screw-HHF
11	3256-26	6	Washer-Flat	31	104-7048	1	Cap-Housing
12	139-1689	6	Nut-HF	32	104-7050	1	Tube-Manual
13	33104-025	4	Screw-HHF	33	2412-133	2	Clamp-R
14	3256-57	4	Washer-Flat	34	133-0382	1	Decal-Service/Maintenance
15	3234-42	4	Screw-HHF	35	119-6727	2	U-Bolt
16	119-4042	8	Nut-HF, NI	36	3234-47	2	Screw-HHF
17	283-82	1	Pin-Clevis	37	119-4041	6	Nut-HF
18	104-4821	1	Spring-Torsion	38	132-7628-03	2	Band-Tank, Eye Wash
19	119-1415	3	Pin-Cotter, Locking	39	137-4291	1	Cap-Tank, Fresh Water
				41	100-7011	1	Spigot-90 DEG

 
Frame Assembly

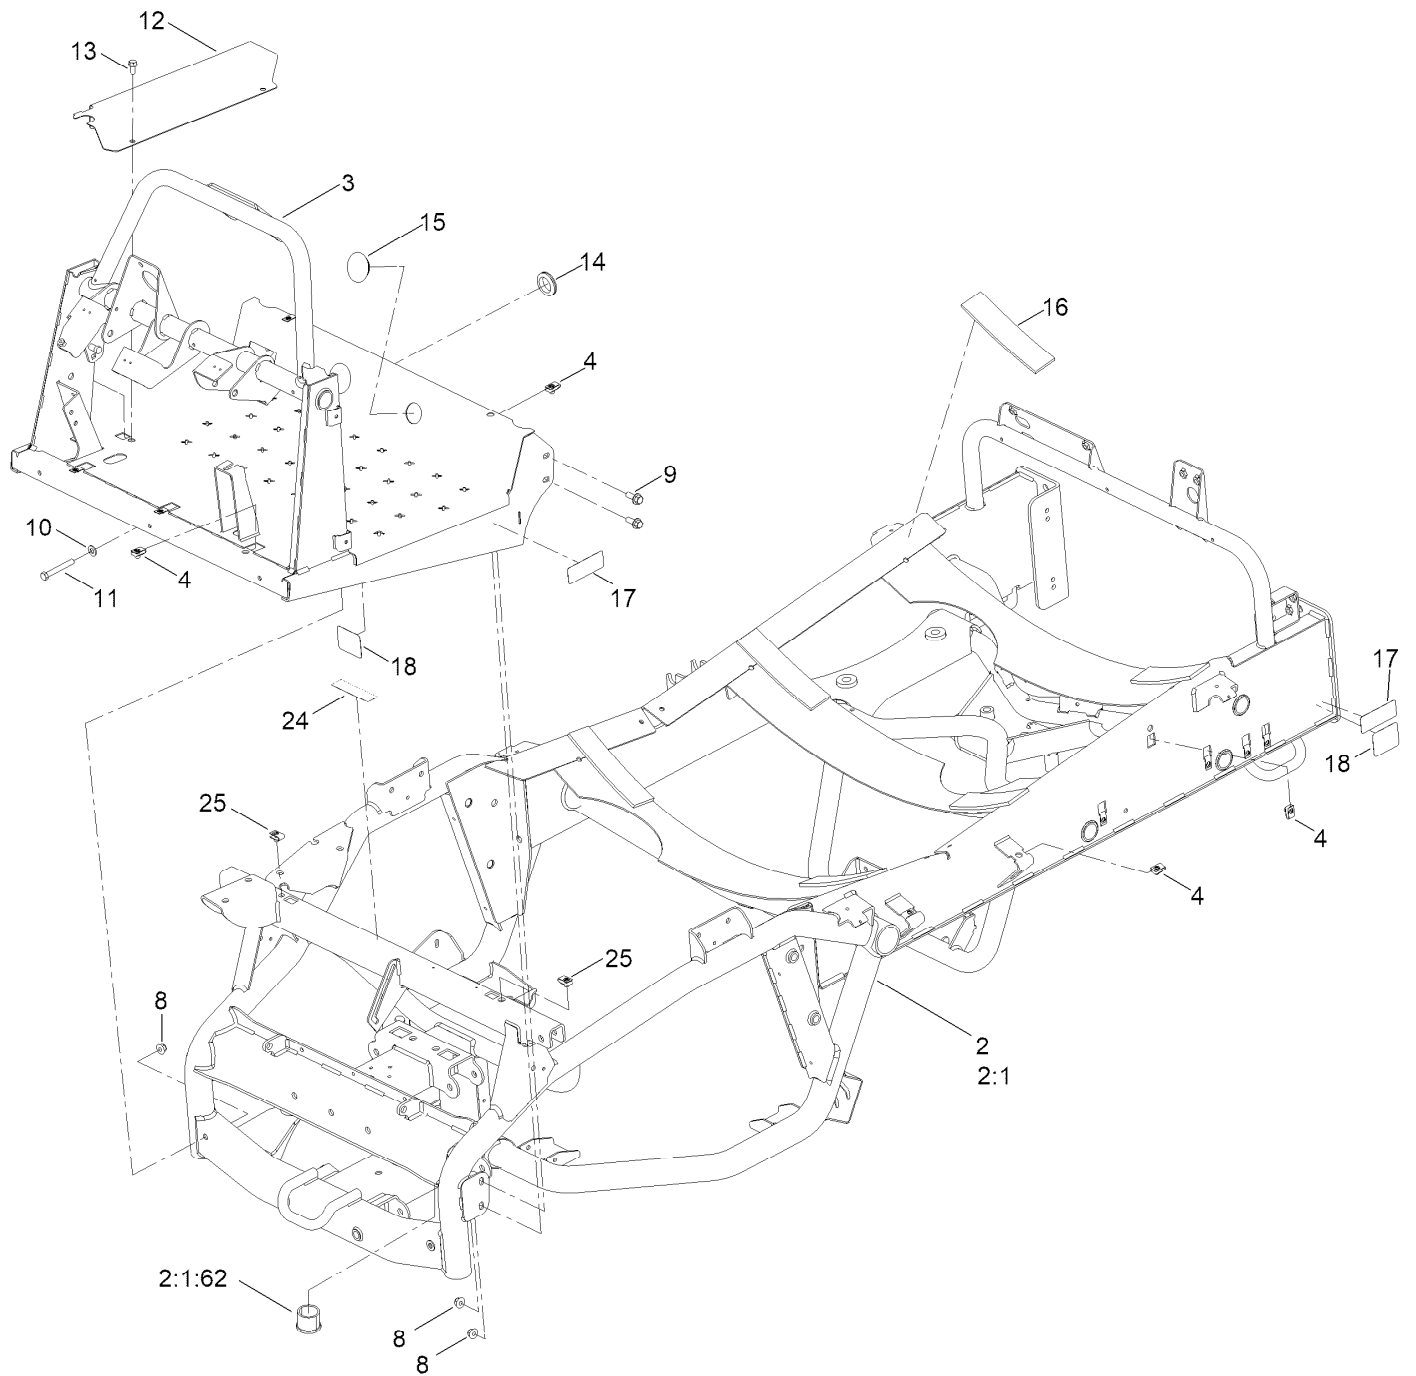

Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	121-6501-03	1	Frame ASM	12	125-0871-03	1	Cover-Hose
2:1		1	Frame ●	13	3234-47	2	Screw-HHF
2:1:62	104-0015	2	Bushing-Flange	14	240-3	2	Grommet-Rubber
3	163-2919-03	1	Platform ASM [black]	15	121-3397	2	Plug-Grommet
4	94-2413	19	Nut-U	16	125-8094	6	Pad-Tank
8	119-4042	6	Nut-HF, NI	17	106-9206	4	Decal-Torque, Wheel
9	3234-42	4	Screw-HHF	18	125-6694	3	Decal-Tie Down
10	3256-24	2	Washer-Plain	24	133-8062	1	Decal-Spark Arrestor
11	323-13	2	Screw-HH	25	115-7721	2	Nut-Clip, U

 
● Not serviced separately

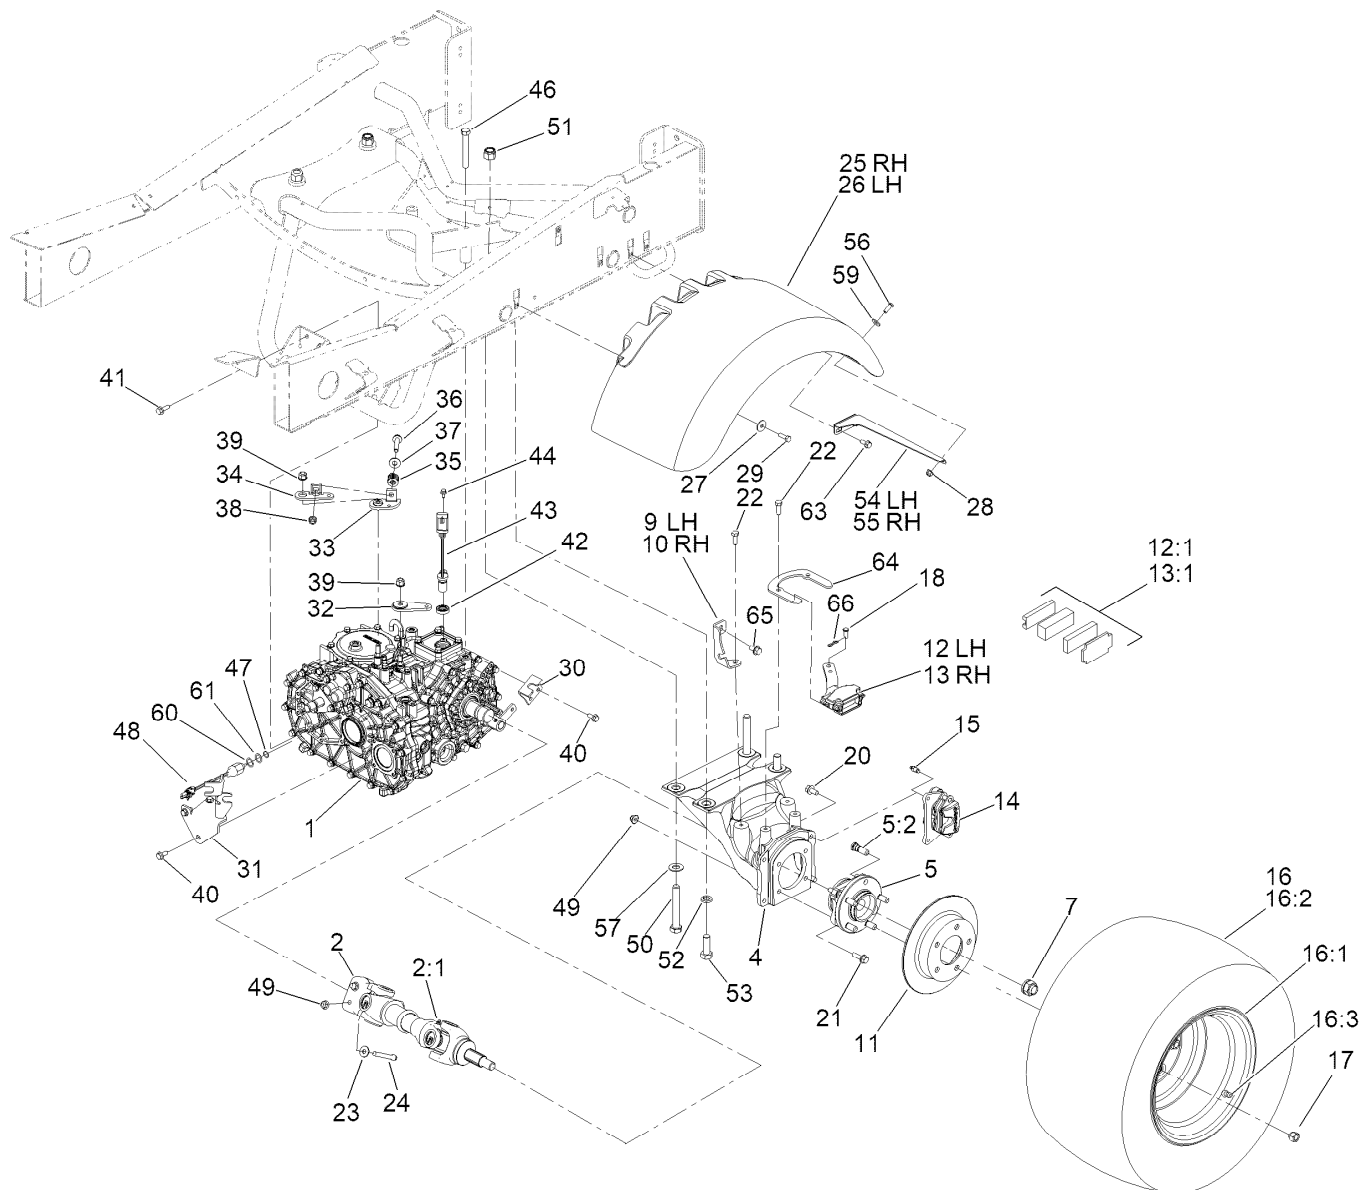

Rear Drive Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	120-7610	1	Transaxle ASM	16:2	144-6171	1	Tire - 24/13-12,6 Ply
2	138-5600	2	Driveshaft ASM	16:3	232-27	1	Stem-Valve
2:1	302-5	2	Fitting-Grease	17	139-2564	10	Nut-Lug
4	131-4311	2	Axle-Housing	18	283-85	2	Pin-Clevis
5	121-9751	2	Hub-Bearing, Wheel	20	3234-1	4	Screw-HHF
5:2	121-9752	5	Stud-Wheel	21	3234-24	8	Screw-HHF
7	115-2164	2	Nut-Spindle	22	323-6	6	Screw-HH
9	131-4362	1	Bracket-Cable, LH	23	80-6990	4	Washer-Hardened
10	131-4346	1	Bracket-Cable, RH	24	98-2939	4	Screw-Cap
11	114-8351	2	Rotor-Brake	25	112-6805	1	Fender-RH
12	114-8365	1	Caliper-Mechanical, LH	26	112-6806	1	Fender-LH
12:1	115-7847	1	Parking Brake Pad Kit	27	3256-82	6	Washer-Flat
13	114-8366	1	Caliper-Mechanical, RH	28	119-4041	2	Nut-HF
13:1	115-7847	1	Parking Brake Pad Kit	29	322-5	6	Screw-HH
14	127-7424	2	Brake Caliper ASM	30	87-4470	1	Bracket-Lock, Differential
15	119-9509	2	Screw-Bleed	31	107-8749-0P	1	Bracket-Cable, Welded
16		2	Wheel And Tire ASM ●	32	132-6764	1	Lever-Shift
16:1	163-2934	1	Wheel	33	87-7970	1	Arm-Shift

 ● Not serviced separately

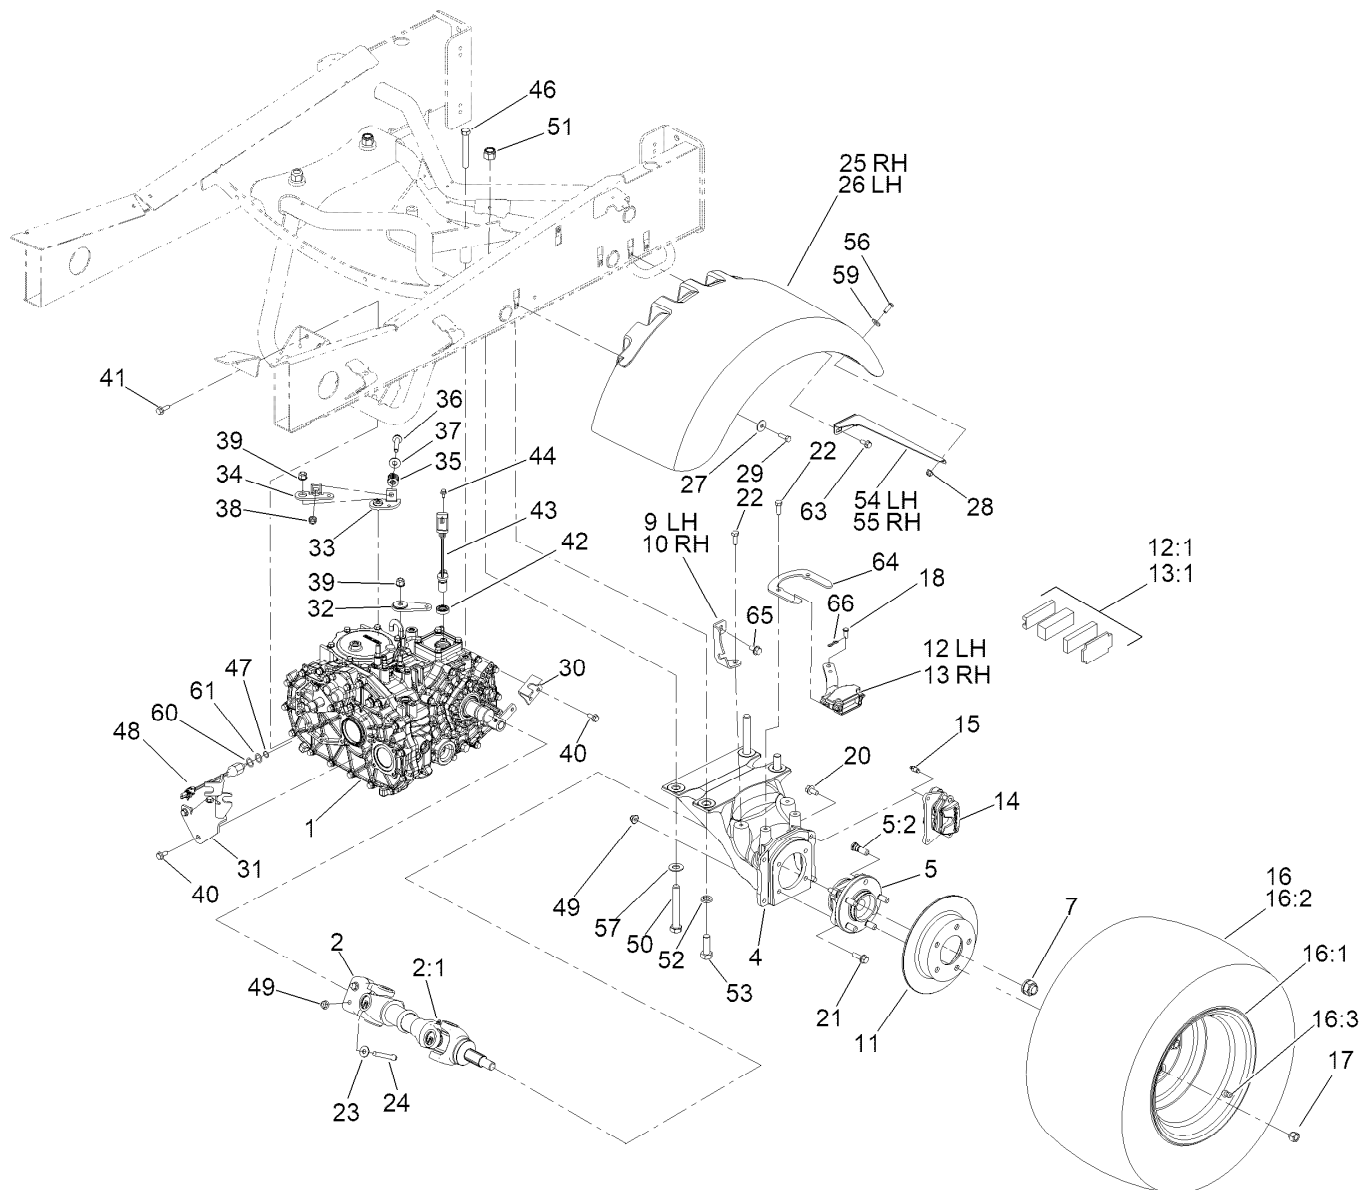


Rear Drive Assembly (continued)

Ref.	Part Number	Qty.	Description
34	87-8250	1	Plate-Arm, Shift
35	87-6910	1	Spring-Compression
36	66-9302	1	Screw-HHF Lock
37	3256-4	1	Washer-Flat
38	3290-357	1	Nut-HSF
39	103-9511	2	Nut-Flg
40	98-7977	5	Screw-HHF
41	33104-025	4	Screw-HHF
42	92-3735	1	Seal-Sensor, Oil
43	120-4800	1	Sensor-Geartooth
44	33103-012	1	Screw-HHF
46	33116-090	2	Screw-HH
47	237-30	1	O-Ring
48	161-5403	1	Switch-Plunger, Off-(On)
49	119-4042	12	Nut-HF, NI

Ref.	Part Number	Qty.	Description
50	327-29	4	Screw-HH
51	127-3958	4	Nut-Lock, NI
52	3253-23	4	Washer-Lock
53	327-5	4	Screw-HH
54	125-7959-03	1	Bracket-Fender
55	125-7960-03	1	Bracket-Fender
56	3274-32	2	Screw-HSBH
57	3256-27	4	Washer-Flat
59	3256-71	2	Washer-Flat
60	125-8106	3	Shim
61	125-8107	3	Shim
63	3234-47	4	Screw-HHF
64	131-4257-0P	2	Support-Park Brake
65	110-9380	2	Screw-HWH
66	119-1415	2	Pin-Cotter, Locking

 
● Not serviced separately

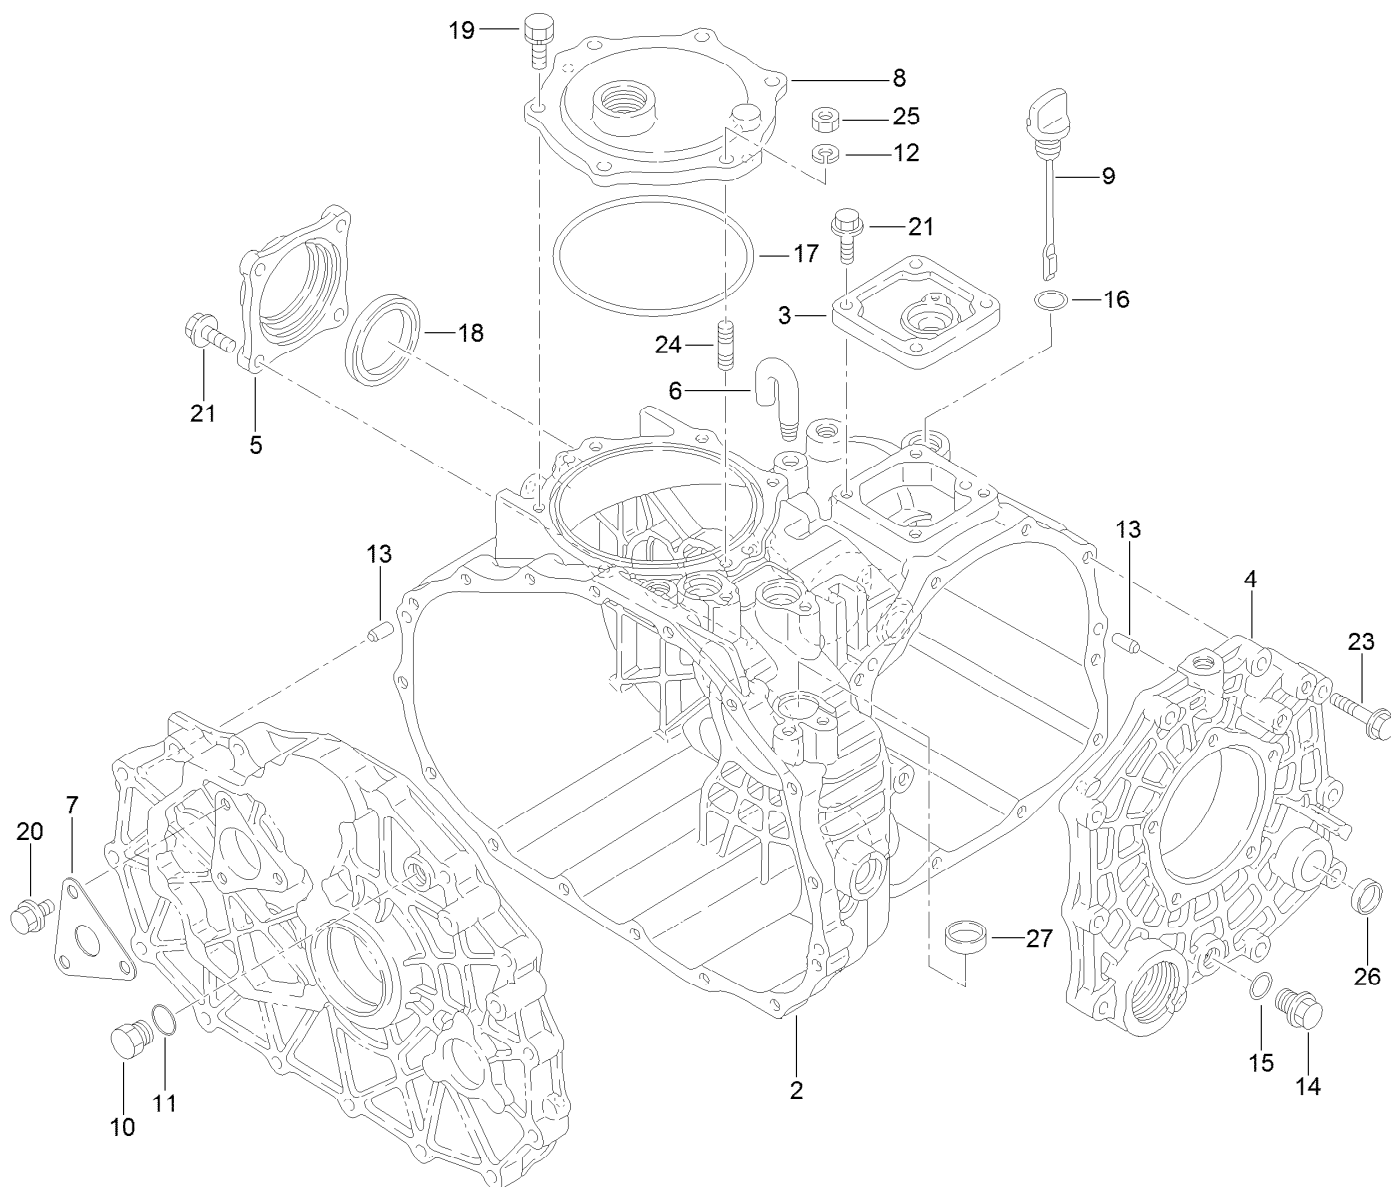

Case Assembly Transaxle Assembly No. 120-7610


Ref.	Part Number	Qty.	Description
2	92-0651	1	Case-Transmission
3	92-3736	1	Cover ASM
4	92-0653	1	Cover-Side
5	92-0655	1	Cover-Seal, Axle
6	127-3925	1	Breather
7	100-8594	1	Cover-Shaft, Input
8	100-8595	1	Cover-PTO
9	92-0662	1	Cap-Oil
10	100-6924	1	Plug
11	100-6925	1	Packing
12	92-0762	1	Washer-Spring
13	92-0765	4	Pin-Parallel
14	92-0773	1	Plug-Drain

Ref.	Part Number	Qty.	Description
15	92-0787	1	O-Ring
16	92-0788	1	O-Ring
17	92-0790	1	O-Ring
18	92-0793	1	Seal-Oil
19	92-0796	5	Bolt
20	100-6928	3	Bolt
21	33114-025	8	Screw-HH
23	33114-040	10	Screw-HH
24	92-0804	1	Stud
25	48-7930	1	Nut
26	100-6926	1	Cap-Sealing
27	100-6927	1	Cap-Sealing

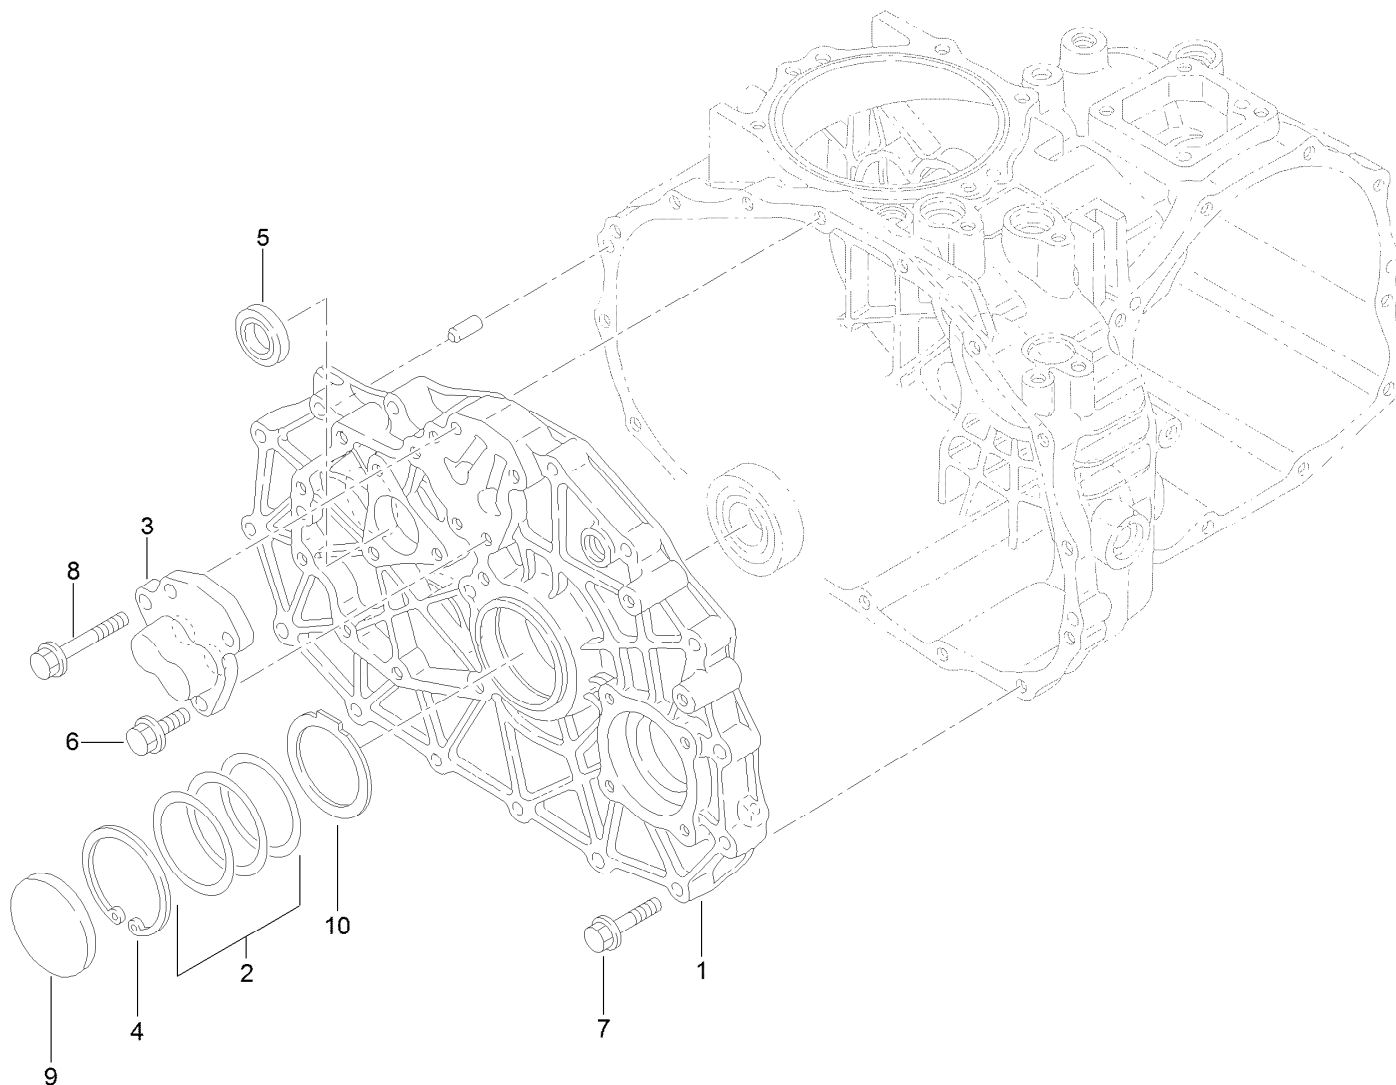 

Center Plate Assembly Transaxle Assembly No. 120-7610


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	100-4461	1	Plate-Center
2	100-4460	1	Shim-Set
3	92-0706	1	Shaft-Fork
4	92-0759	1	Ring-Snap
5	92-0791	1	Seal-Oil
6	33114-025	3	Screw-HH
7	33114-040	15	Screw-HH
8	48-7560	1	Bolt-HH
9	92-0807	1	Cap-Sealing
10	100-4465	1	Shim (W/Tab)

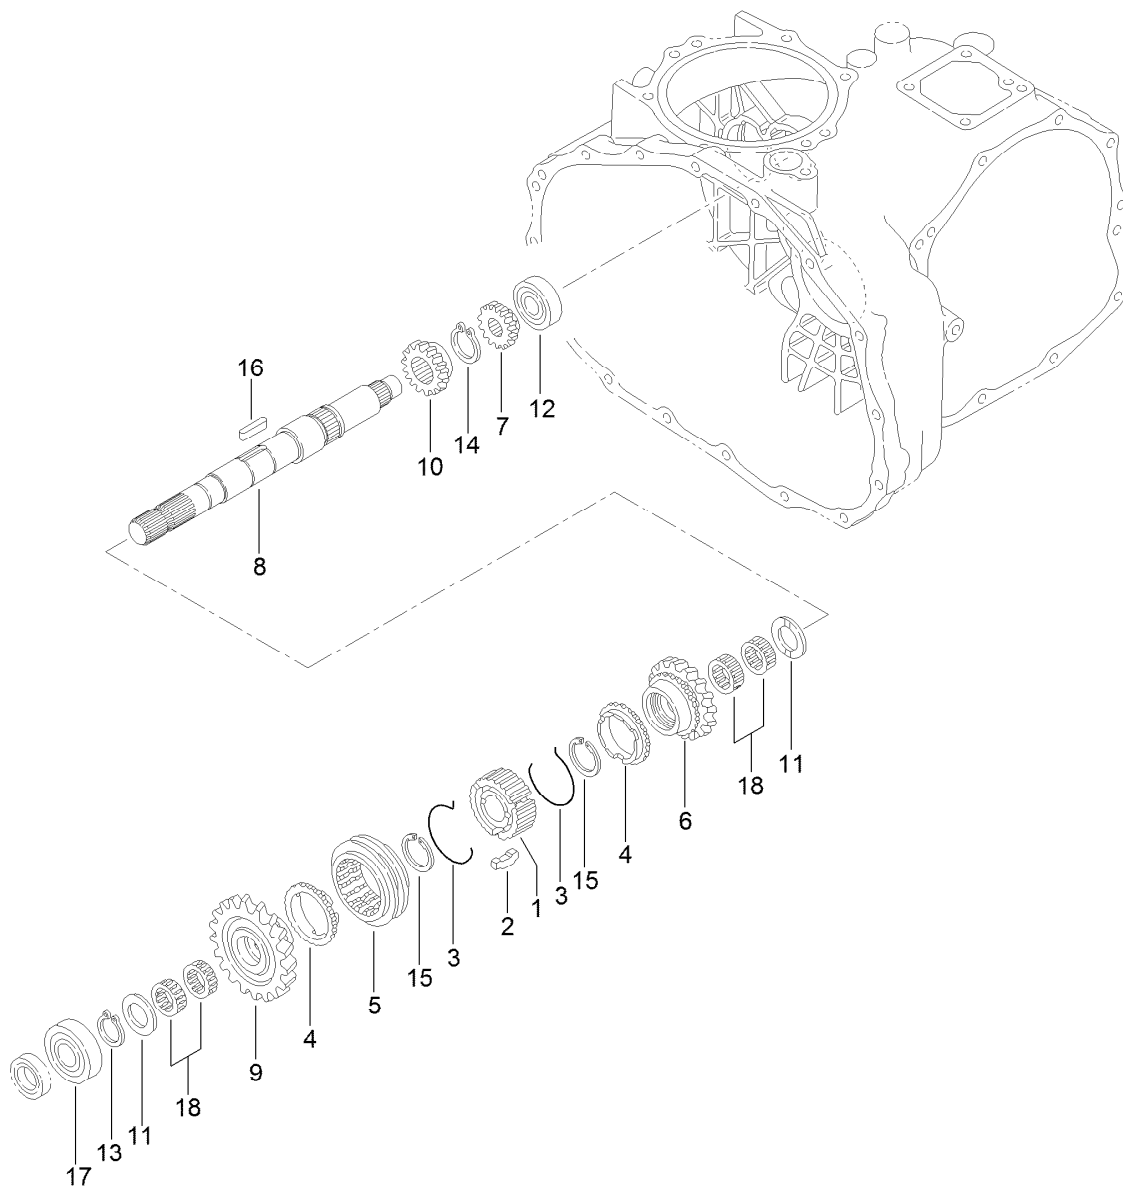 

Main Shaft Assembly Transaxle Assembly No. 120-7610

Ref.	Part Number	Qty.	Description
1	92-0664	1	Hub-Synchro
2	92-0665	3	Key-Synchro
3	92-0666	2	Spring-Synchro
4	92-0667	2	Ring-Synchro
5	92-0668	1	Shifter-Synchro
6	127-3926	1	Gear-Main, 23T
7	92-0673	1	Gear-Main, 14 Tooth
8	100-8596	1	Shaft-Main
9	108-3694	1	Gear-Main, 36T


Ref.	Part Number	Qty.	Description
10	100-8598	1	Gear-Main, 20 Tooth
11	92-0740	2	Washer-Thrust
12	92-0650	1	Bearing
13	92-0753	1	Ring-Snap
14	92-0754	1	Ring-Snap
15	92-0763	2	Ring-Snap
16	92-0772	1	Key
17	251-8	1	Bearing-Ball
18	92-0781	4	Bearing-Needle

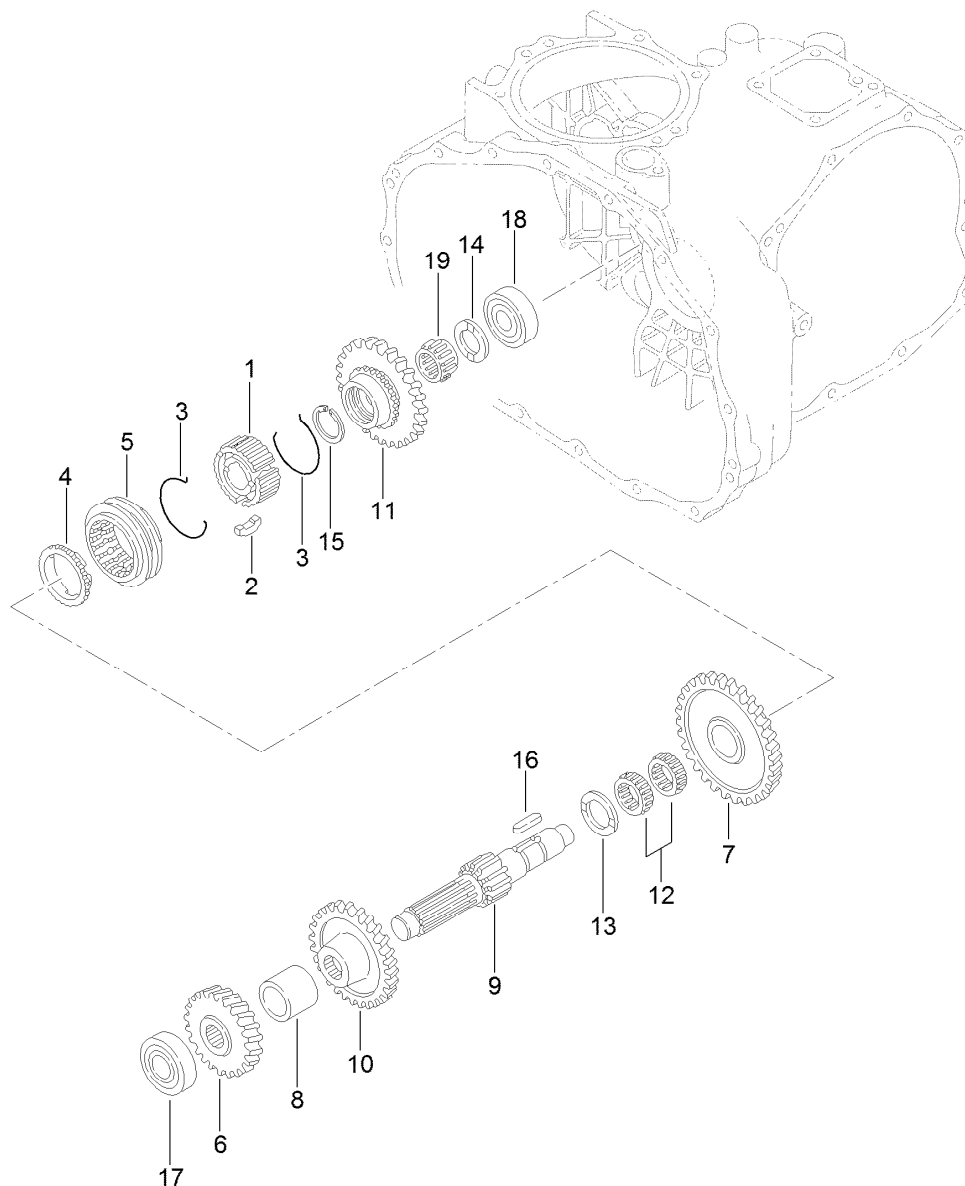 

Reduction Shaft Assembly Transaxle Assembly No. 120-7610


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	92-0664	1	Hub-Synchro
2	92-0665	3	Key-Synchro
3	92-0666	2	Spring-Synchro
4	92-0667	1	Ring-Synchro
5	92-0668	1	Shifter-Synchro
6	100-8599	1	Gear-Red, 25 Tooth
7	108-3697	1	Gear-Reduction, 47T
8	100-8601	1	Collar
9	127-3927	1	Shaft-Reduction
10	127-3928	1	Gear-Reduction, 31T

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11	92-0819	1	Gear-Reduction, 40 Tooth
12	92-0681	2	Bearing-Needle
13	92-0682	1	Washer-Thrust
14	92-0740	1	Washer-Thrust
15	92-0763	1	Ring-Snap
16	92-0772	1	Key
17	105-7985	1	Bearing
18	92-0778	1	Bearing
19	92-0782	1	Bearing-Needle

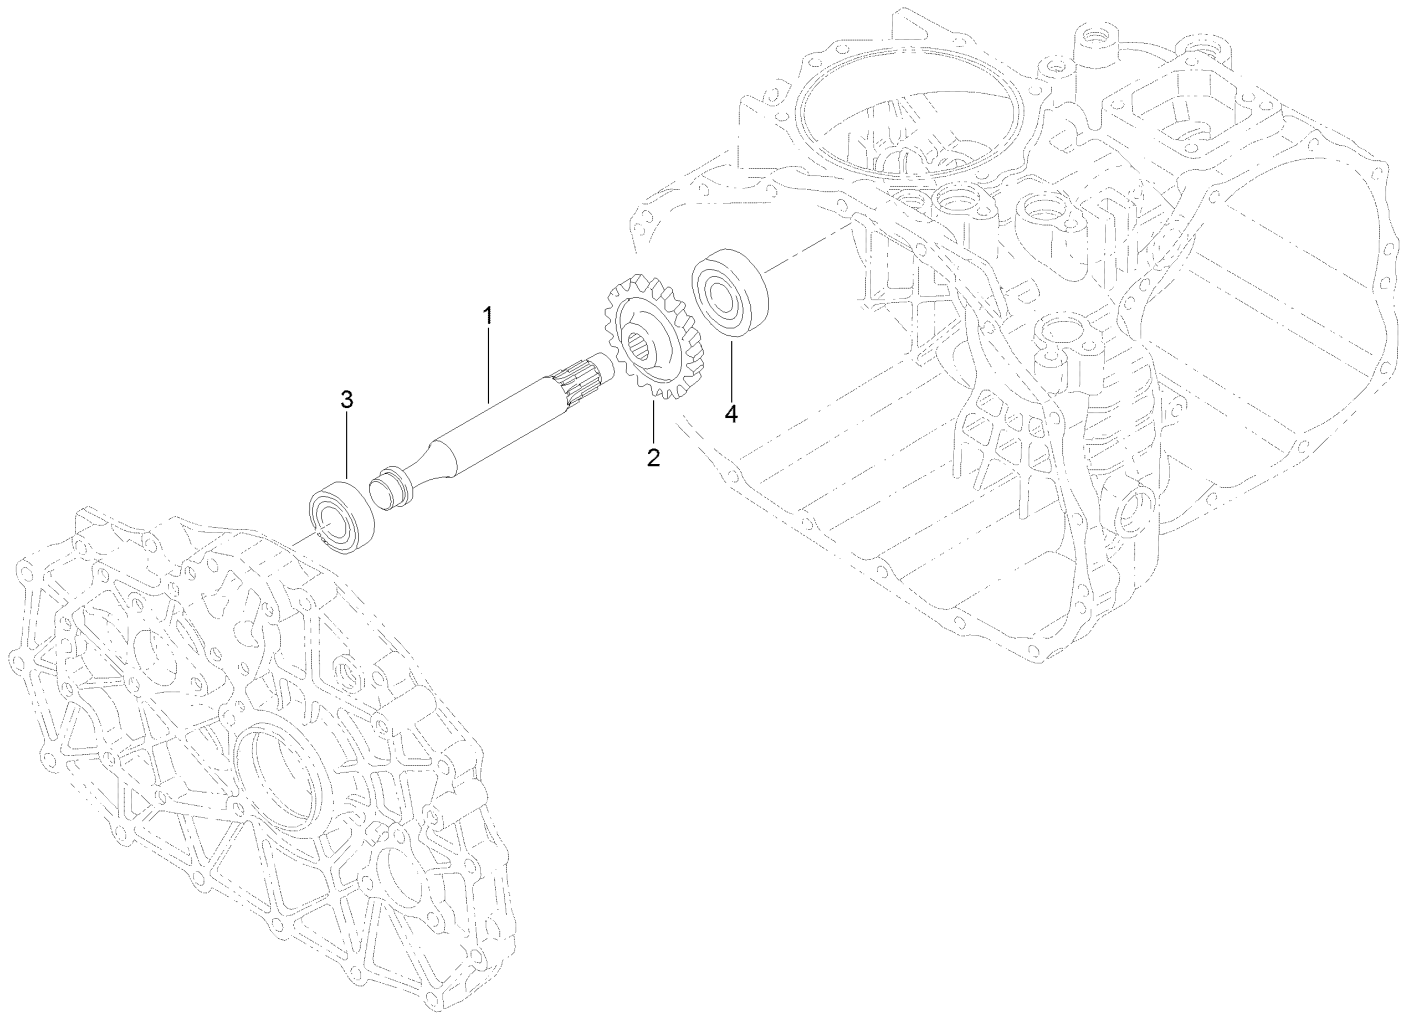 

Reverse Shaft Assembly Transaxle Assembly No. 120-7610

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	100-8602	1	Shaft-Idler, Reverse
2	92-0684	1	Gear-Reverse, 33 Tooth
3	251-346	1	Bearing-Ball
4	92-0778	1	Bearing

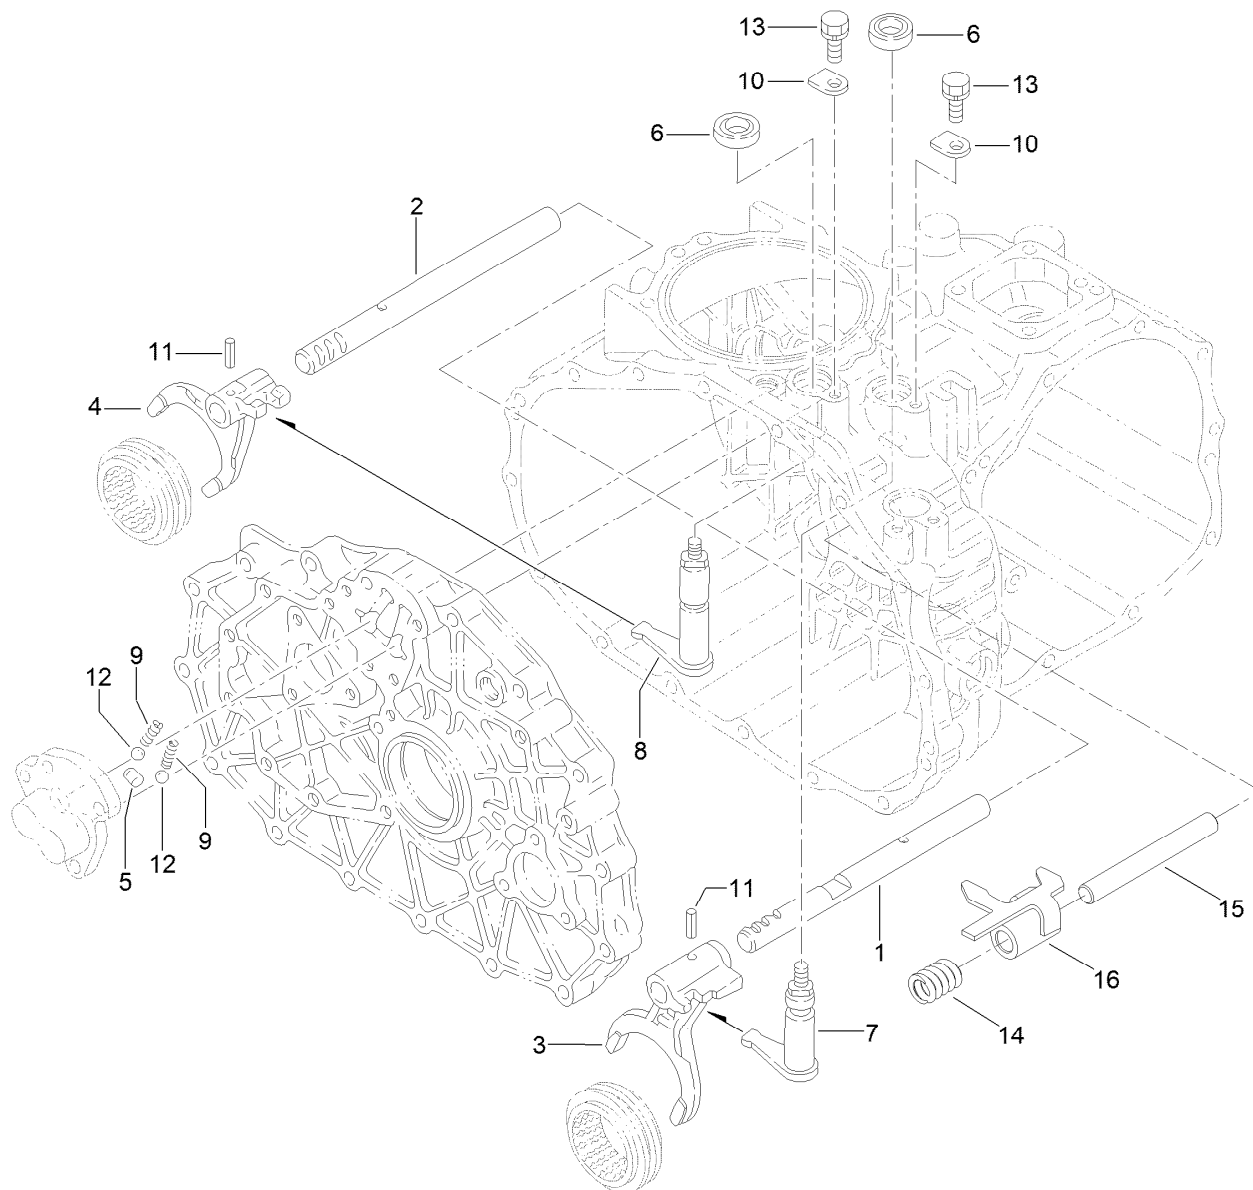 


Main Shift Assembly Transaxle Assembly No. 120-7610

Ref.	Part Number	Qty.	Description
1	92-0698	1	Shaft-Fork
2	92-0699	1	Shaft-Fork
3	92-0700	1	Fork-Shift
4	92-0701	1	Fork-Shift
5	92-0705	1	Lock-Spindle
6	92-0729	2	Seal-Oil
7	127-3929	1	Arm-Shift
8	127-3930	1	Arm-Shift


Ref.	Part Number	Qty.	Description
9	92-0731	2	Spring
10	92-0732	2	Plate-Keeper
11	92-0769	2	Pin-Roll
12	92-0785	2	Ball-Steel
13	33114-016	2	Screw-HH
14	127-3931	1	Spring-Switch ●
15	127-3932	1	Shaft-Switch ●
16	127-3933	1	Plate-Switch ●

 ● Not illustrated

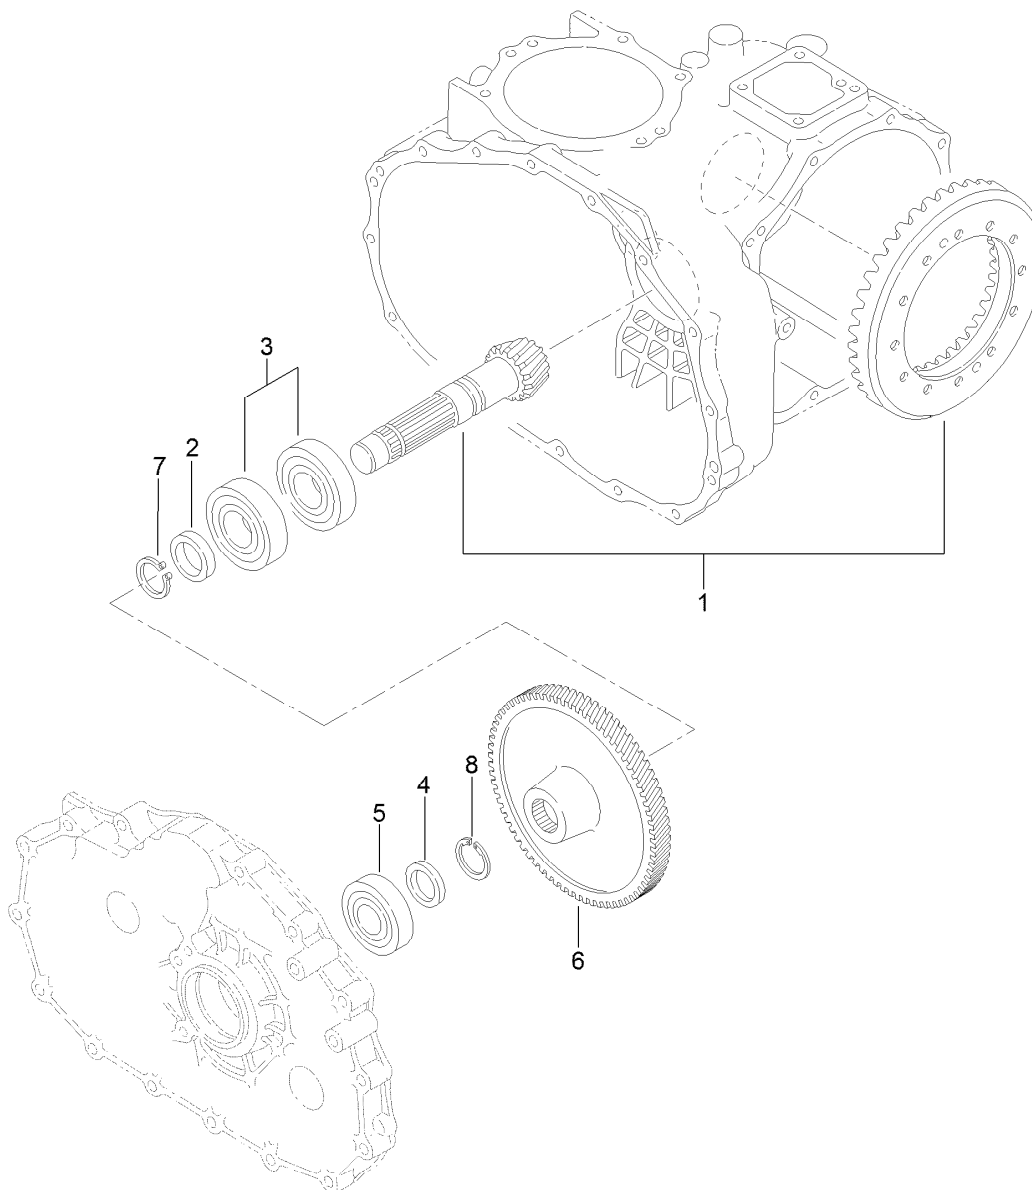


Counter Shaft Assembly Transaxle Assembly No. 120-7610

Ref.	Part Number	Qty.	Description
1	92-0710	1	Gear-Ring
2	92-0713	1	Collar
3	92-0714	2	Bearing
4	92-0716	1	Collar
5	92-0712	1	Bearing-Ball
6	100-8603	1	Gear-Count
7	92-0755	1	Ring-Snap
8	92-0764	1	Ring-Snap

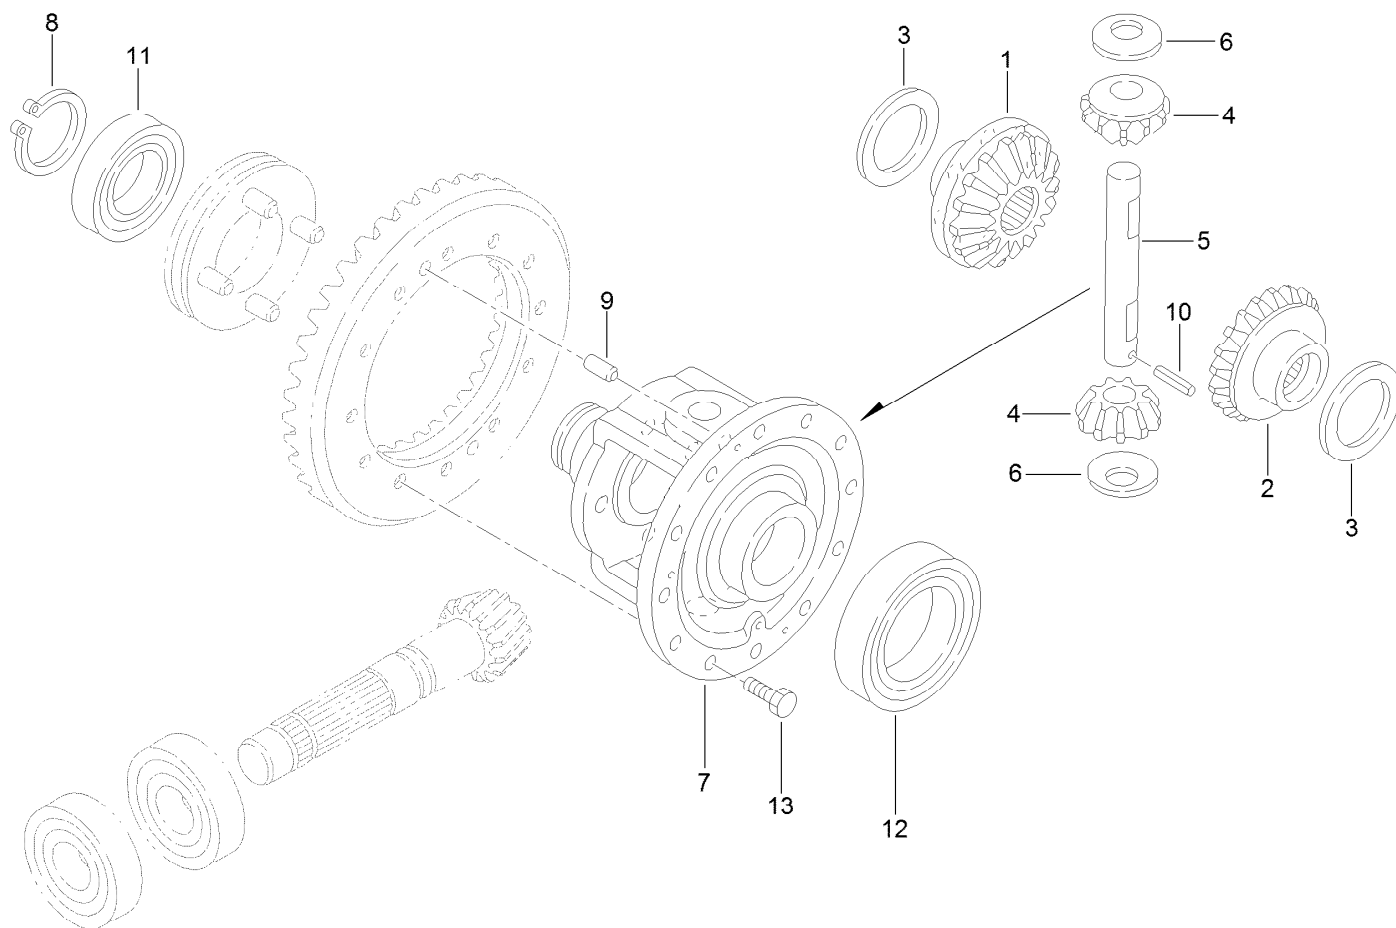 


Differential Gear Assembly Transaxle Assembly No. 120-7610

Ref.	Part Number	Qty.	Description
1	92-0745	1	Gear-Side, LH
2	92-0746	1	Gear-Side, RH
3	92-0747	2	Side-Gear, Left Inner
4	92-0748	2	Pinion-Differential
5	92-0749	1	Shaft-Pinion
6	92-0750	2	Washer
7	92-0720	1	Case-Differential
8	92-0756	1	Ring-Snap
9	92-0765	2	Pin-Parallel
10	92-0768	1	Pin-Roll, Spring
11	92-0775	1	Bearing
12	92-0776	1	Bearing
13	92-0803	12	Bolt

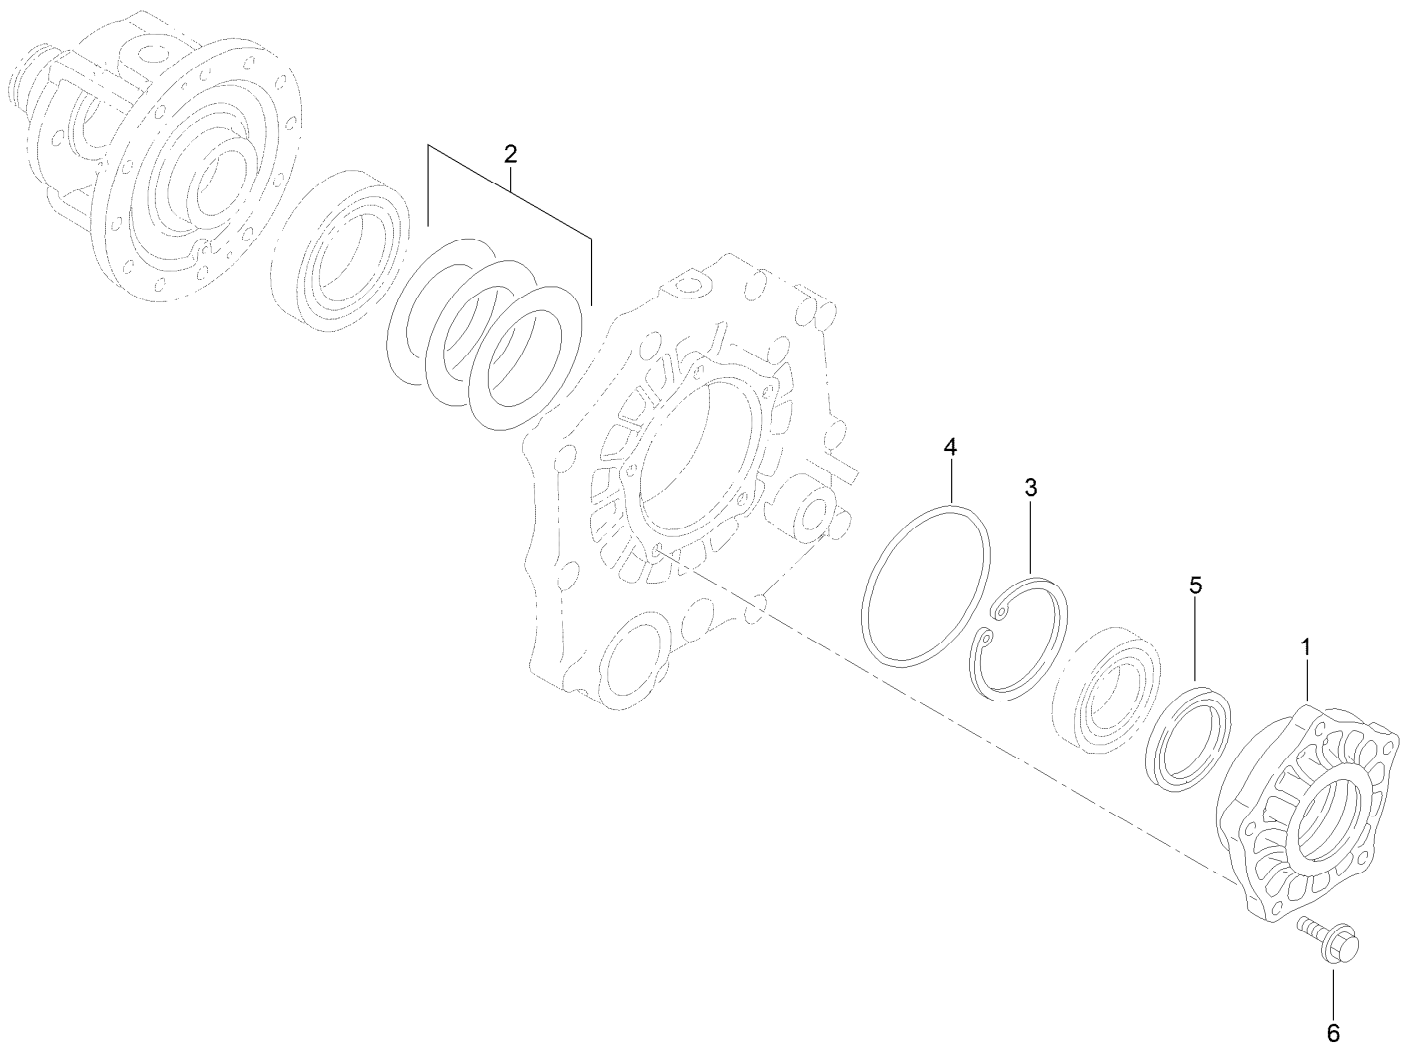 


Differential Carrier Assembly Transaxle Assembly No. 120-7610

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	92-0654	1	Carrier-Differential
2	92-0809	1	Set-Shim
3	92-0760	1	Ring-Snap
4	92-0789	1	O-Ring
5	92-0793	1	Seal-Oil
6	48-7730	5	Screw-Cap, HH

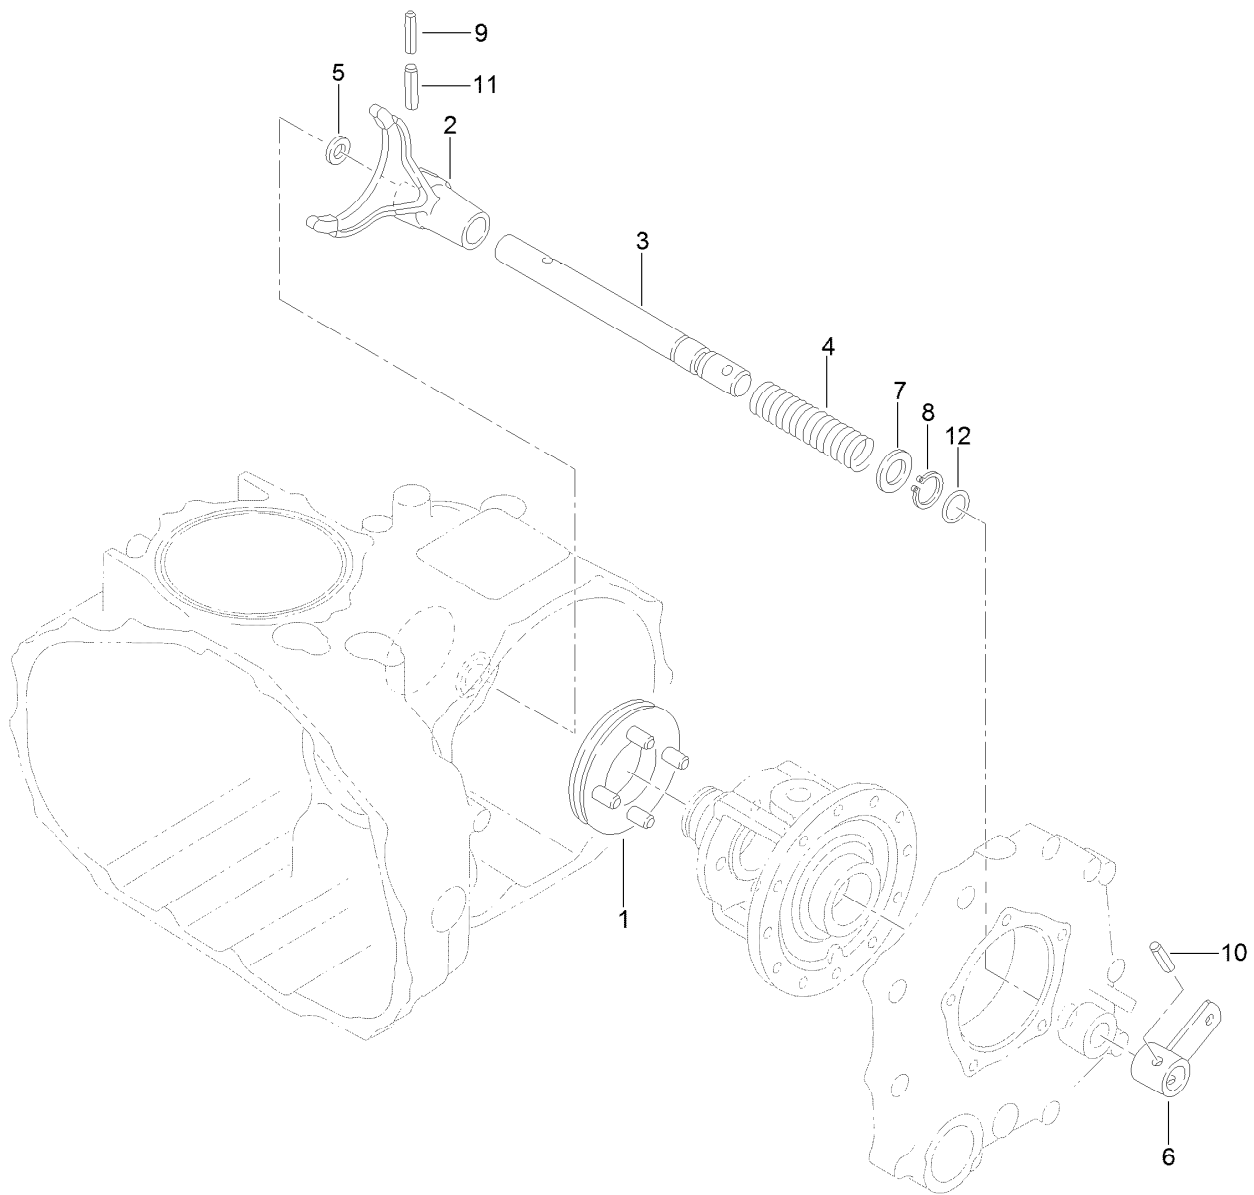 


Differential Lock Assembly Transaxle Assembly No. 120-7610

Ref.	Part Number	Qty.	Description
1	92-0730	1	Slider-Differential, Lock
2	92-0721	1	Fork-Lock, Differential
3	92-0722	1	Shaft-Fork, Lock Differential
4	92-0723	1	Spring-Lock, Differential
5	92-0744	1	Washer
6	92-0724	1	Arm-Lock, Differential
7	92-0733	1	Washer
8	92-0753	1	Ring-Snap
9	92-0768	1	Pin-Roll, Spring
10	92-0770	1	Pin-Roll, Spring
11	92-0771	1	Pin-Roll, Spring
12	92-0787	1	O-Ring

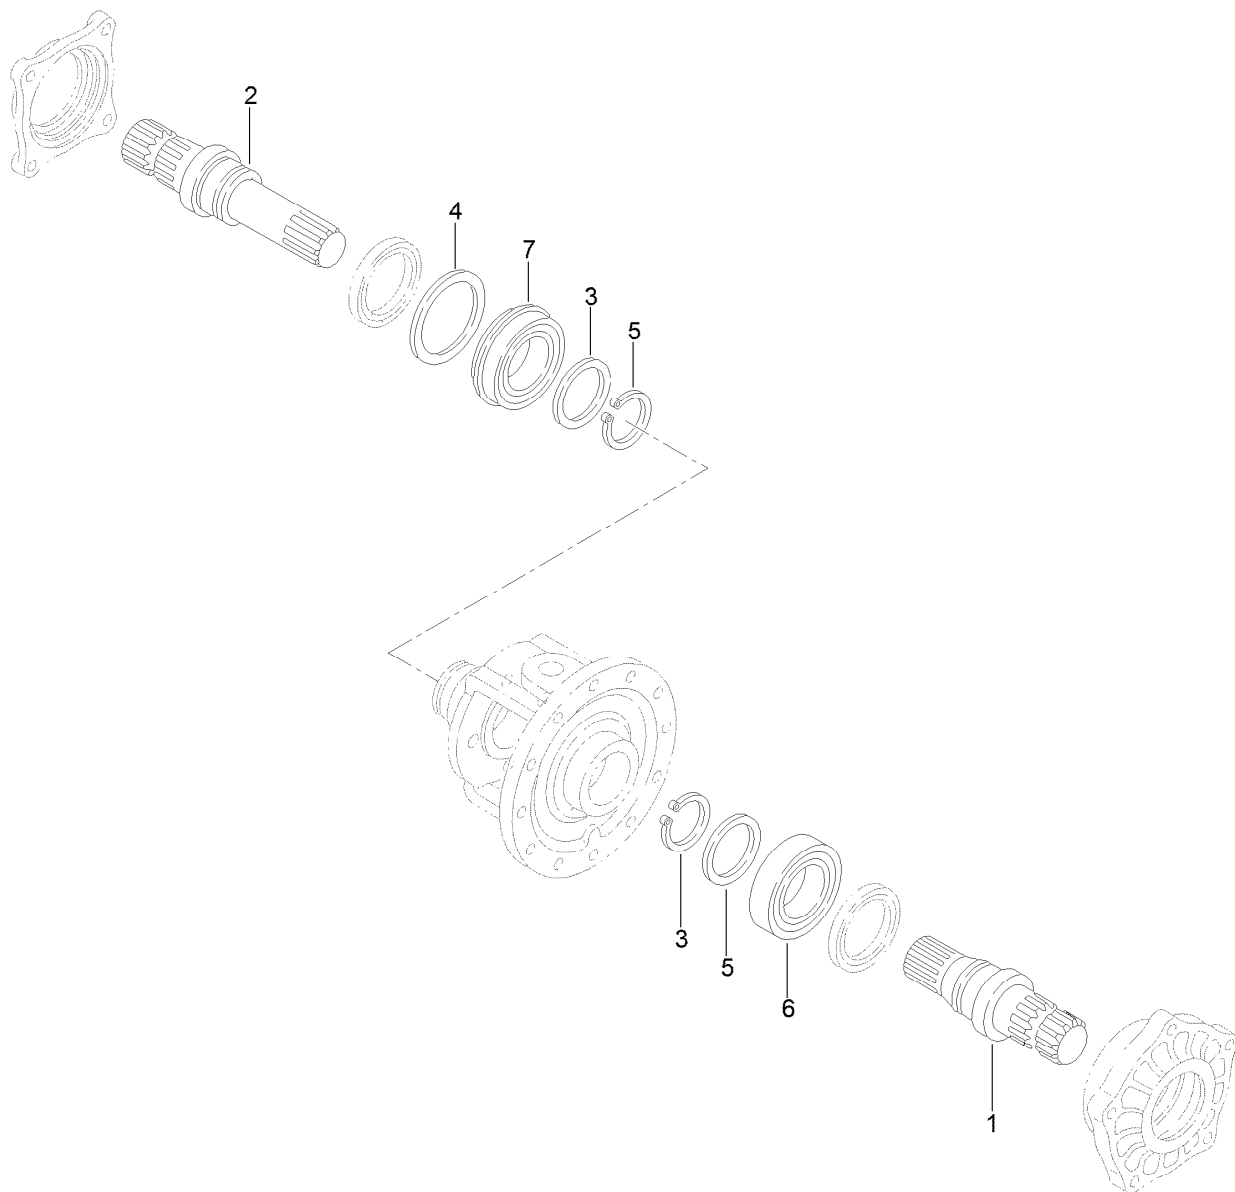 


Axle Shaft Assembly Transaxle Assembly No. 120-7610

Ref.	Part Number	Qty.	Description
1	92-0725	1	Shaft-Axle, Left
2	92-0726	1	Shaft-Axle, Right
3	92-0727	2	Washer
4	92-0728	1	Washer
5	92-0756	2	Ring-Snap
6	92-0775	1	Bearing
7	92-0780	1	Bearing

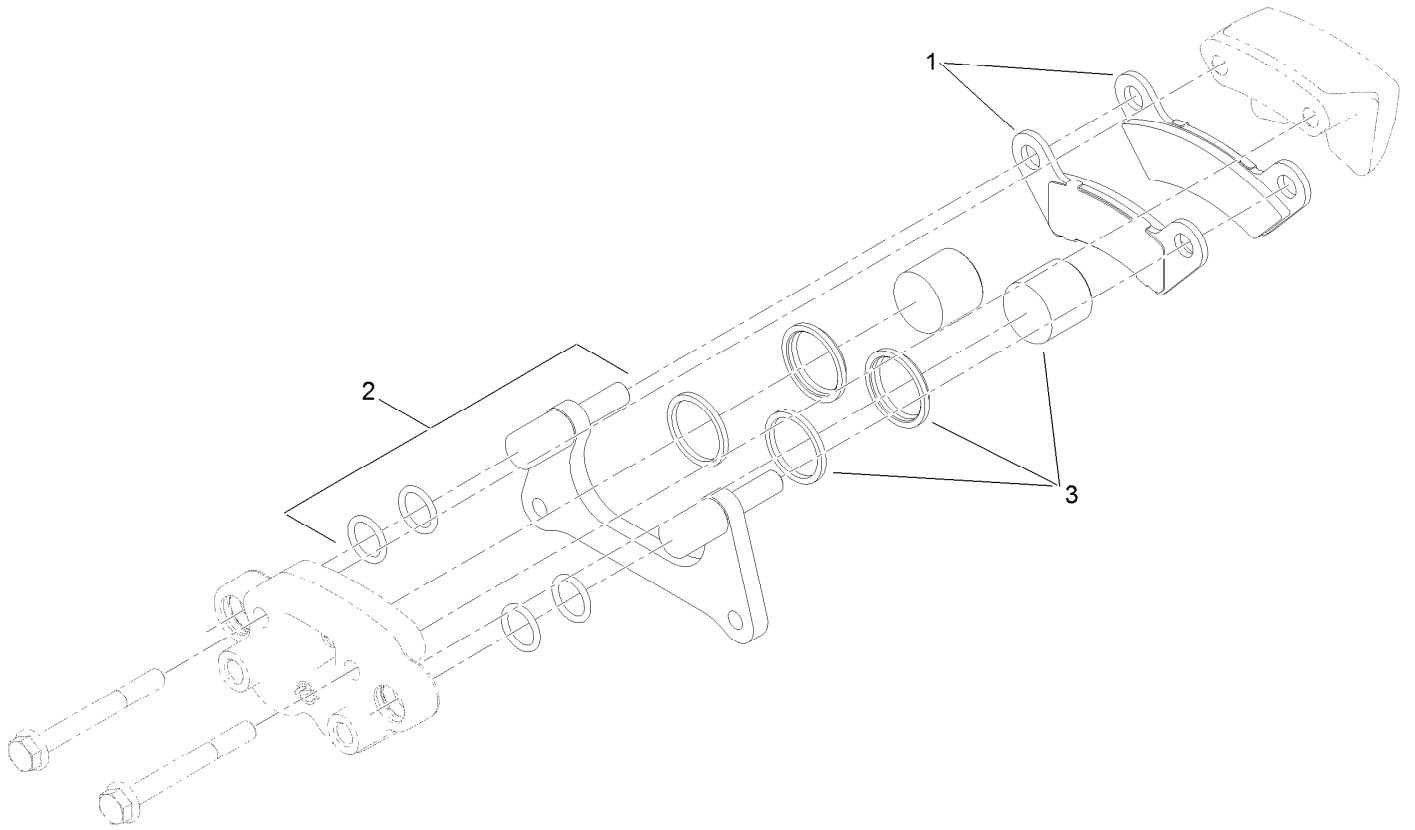 

Brake Caliper Assembly No. 127-7424


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-2580	1	Brake Pad Service Kit (Front, Qty 4)
2	119-9511	1	Bracket Kit
3	133-0614	1	Piston Kit

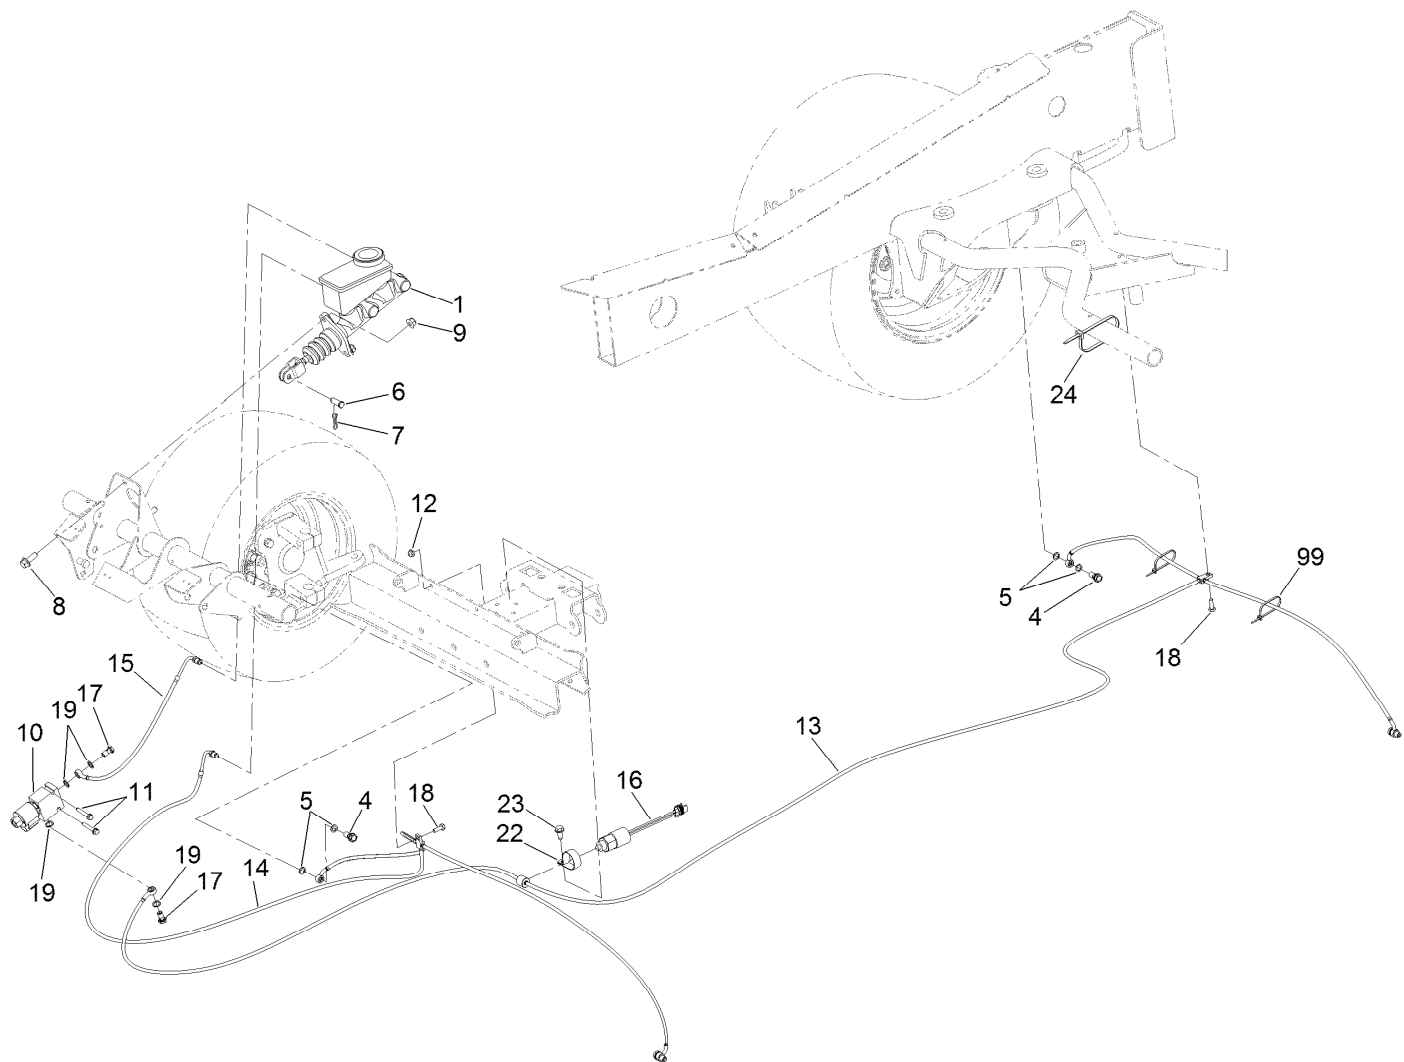 

Brake Hydraulic Assembly


Ref.	Part Number	Qty.	Description
1	104-6782	1	Master Cylinder ASM
4	120-4875	4	Bolt-Flange, Banjo
5	115-2341	8	Washer-Banjo
6	283-2	1	Pin-Clevis
7	119-1415	1	Pin-Cotter, Locking
8	3234-11	2	Screw-HHF
9	119-4042	2	Nut-HF, NI
10	125-0900	1	Valve-Brake Hold
11	94-2691	2	Screw-HWH Taptite
12	104-7201	1	Nut-HF, NI
13	125-7998	1	Line-Brake, Rear

Ref.	Part Number	Qty.	Description
14	125-7999	1	Line-Brake, Front
15	125-8000	1	Line-Brake, Solenoid
16	130-7148	1	Switch-Pressure
17	125-8005	2	Bolt-Banjo
18	321-4	2	Screw-HH
19	127-3914	4	Washer-Banjo
22	2412-74	1	R-Clamp
23	32104-32	1	Screw-HWH
24	3290-378	3	Tie-Cable
99	3290-379	6	Tie-Cable

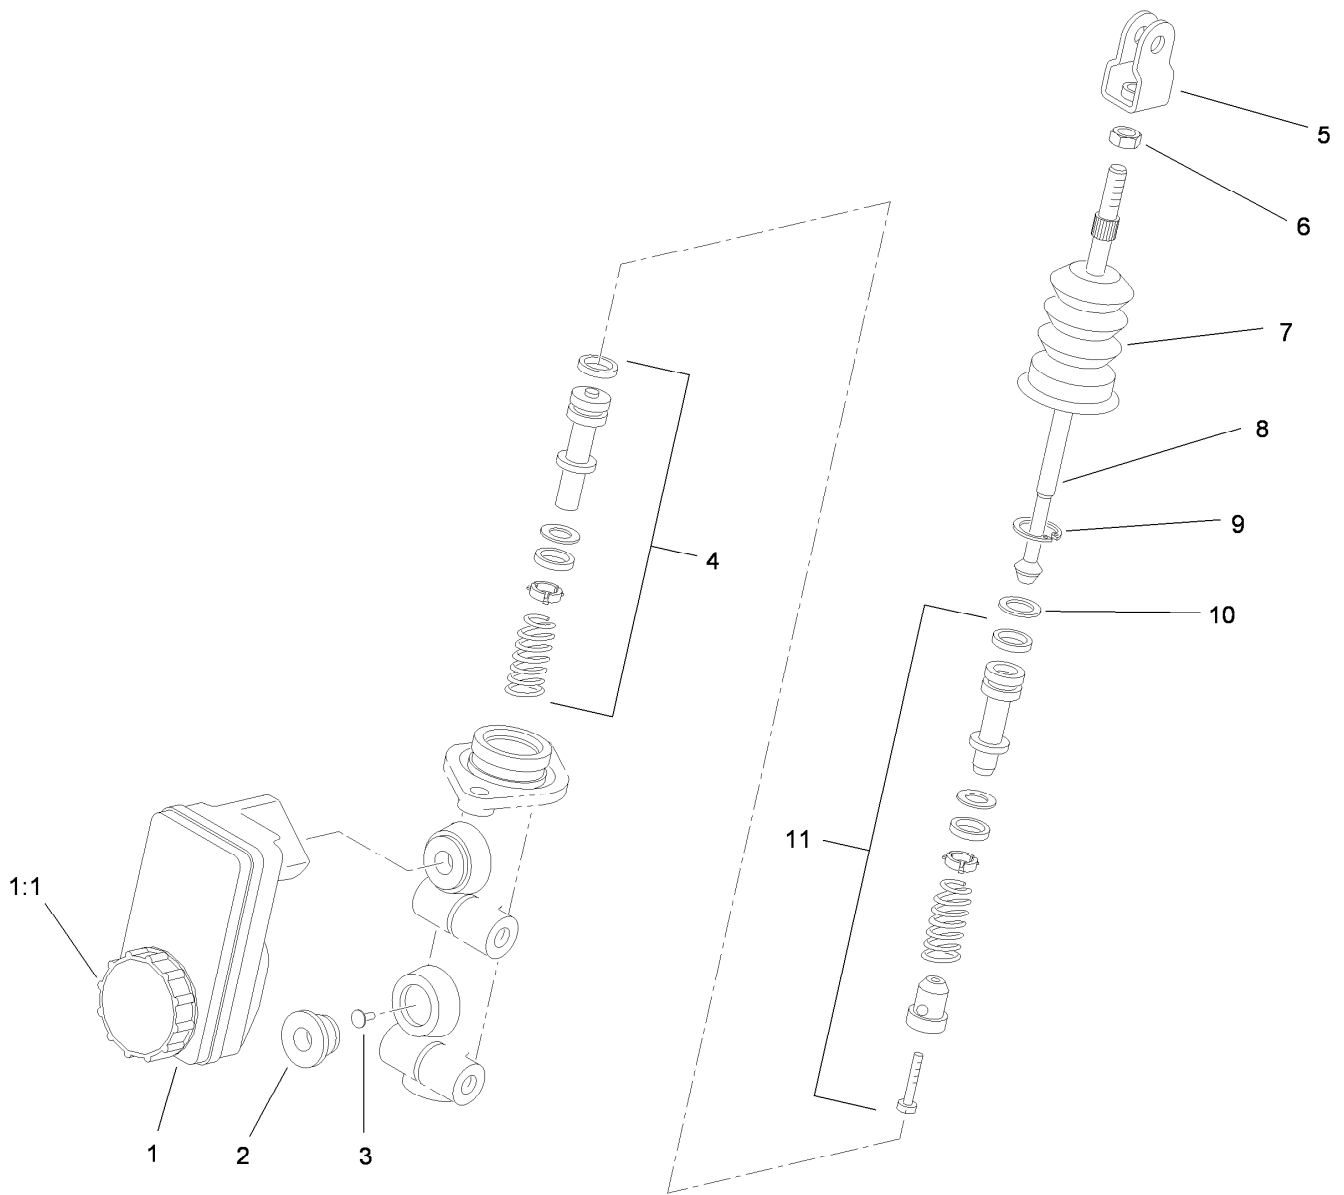 

Master Cylinder Assembly No. 104-6782

Ref.	Part Number	Qty.	Description
1	104-6845	1	Reservoir ASM
1:1	92-4112	1	Cap ASM
2	93-8971	2	Seal-Port, Flange
3	92-4103	1	Pin-Stop
4	92-4102	1	Secondary Piston ASM
5	92-4110	1	Clevis
6	21-0360	1	Nut-Hex
7	94-5209	1	Cover-Dust
8	94-5210	1	Rod-Push
9	92-4109	1	Ring-Snap
10	92-4108	1	Retainer-Washer
11	92-4101	1	Primary Piston ASM

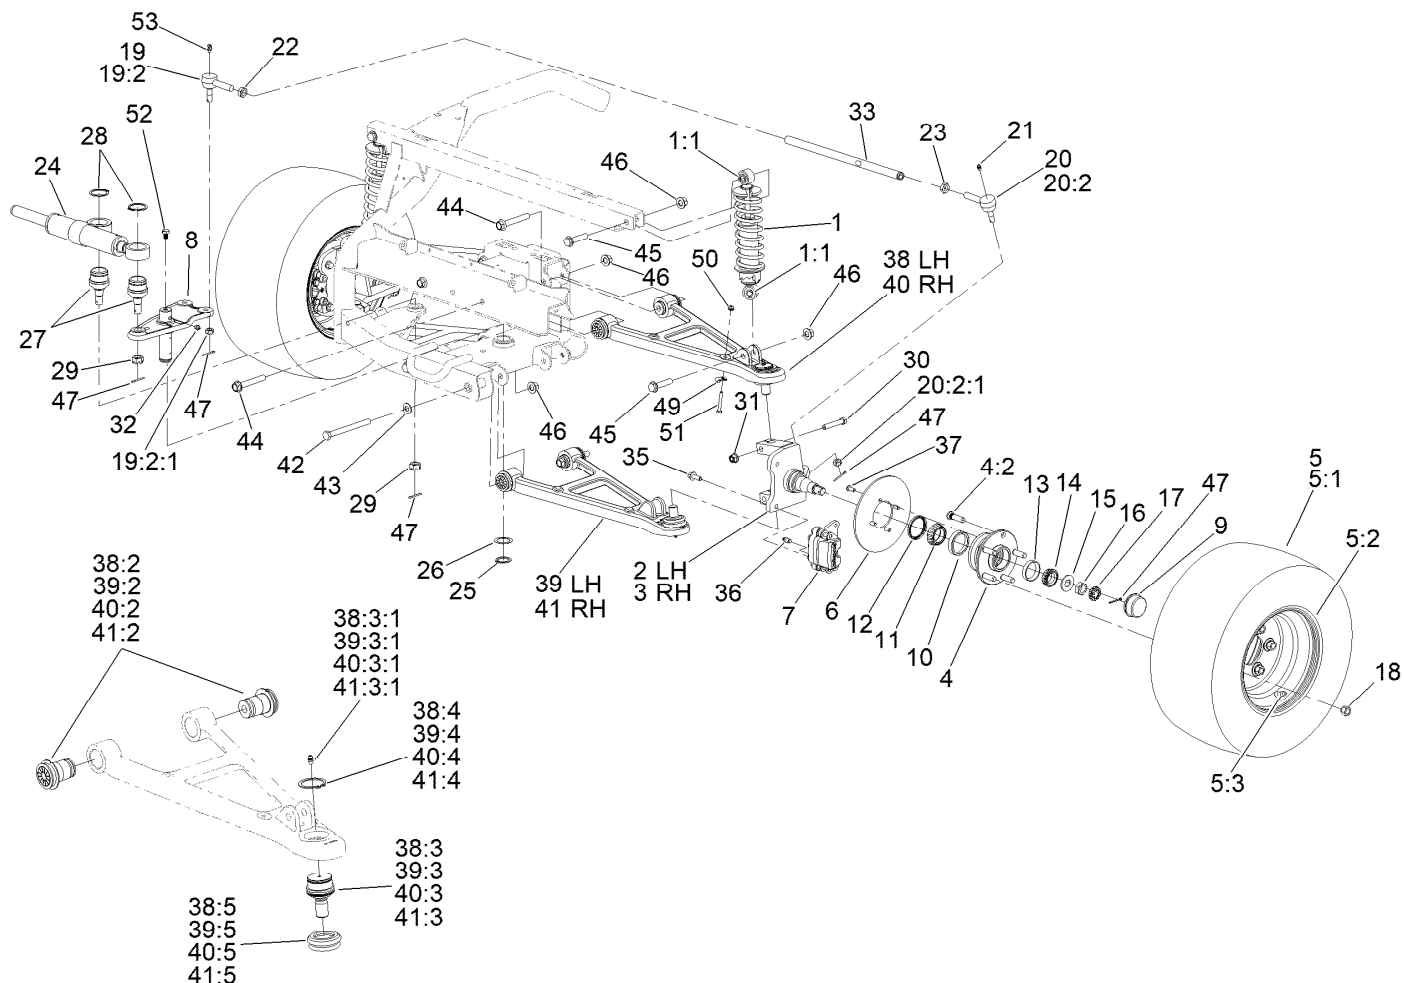 


Front Suspension Assembly

Ref.	Part Number	Qty.	Description
1	147-3170	2	Shock ASM - Coil Over
1:1	131-8574	2	Isolator-Shock
2	147-3160	1	Spindle, LH
3	147-4654	1	Spindle, RH
4	117-8071	2	Hub ASM
4:2	10-6830	5	Stud-Type, Drive
5		2	Tire And Wheel ASM ●
5:1	120-7639	1	Tire
5:2	163-2932	1	Wheel
5:3	232-27	1	Stem-Valve
6	136-6295	2	Rotor-Brake
7	127-7424	2	Brake Caliper ASM
8	137-1602	1	Pitman Arm (Mach)
9	241-119	2	Cap-Dust
10	254-107	2	Cup-Bearing, Tapered
11	254-106	2	Cone-Bearing, Tapered
12	108-7019	2	Seal-Shaft
13	254-72	2	Bearing-Cup, Tapered

Ref.	Part Number	Qty.	Description
14	254-94	2	Bearing-Cone, Tapered
15	93-0309	2	Washer-Tab
16	3220-7	2	Nut-Jam
17	93-0307	2	Nut-Lock, Retainer
18	139-2564	10	Nut-Lug
19	112772-03	2	Joint-Ball, RH
19:2		1	Socket-Balljoint ●
19:2:1	915031	1	Nut
20	112771-03	2	Joint-Ball, LH
20:2		1	Socket-Balljoint ●
20:2:1	915031	1	Nut
21	302-5	2	Fitting-Grease
22	3220-11	2	Nut-Jam
23	3218-21	2	Nut-Jam LH
24	125-0720	1	Cylinder-Hydraulic, Steering
25	32151-77	1	Ring-Retaining, External
26	76-2980	2	Washer-Thrust
27	117-9875	2	Joint-Ball

 ● Not serviced separately

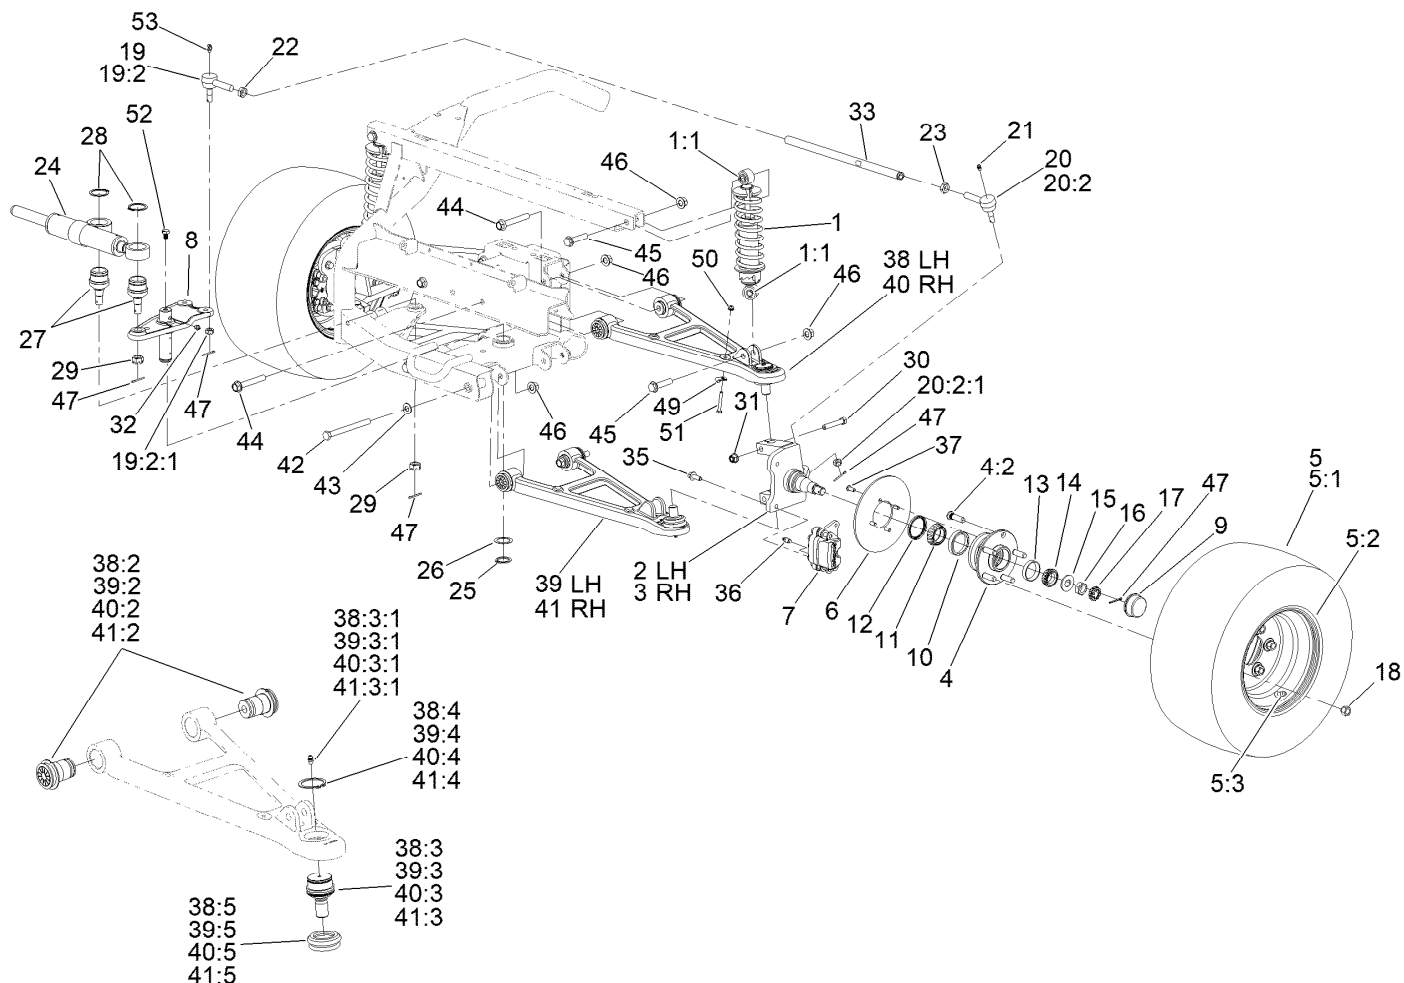


Front Suspension Assembly (continued)

Ref.	Part Number	Qty.	Description
28	32151-104	2	Ring-Retaining, External
29	32136-2	2	Nut-SHH
30	324-10	4	Screw-HH
31	114-8417	4	Nut-HF, NI
32	302-52	1	Fitting-Grease
33	115-7654	2	Tie Rod
35	3234-11	4	Screw-HHF
36	119-9509	2	Screw-Bleed
37	3274-55	8	Screw-HSBH
38	125-8021	1	LH Upper Control Arm ASM
38:2	87-1450	2	Bushing-Flange
38:3	115-2165	1	Ball Joint
38:3:1	302-5	1	Fitting-Grease
38:4	32151-104	1	Ring-Retaining, External
38:5	87-2420	1	Seal-Joint, Ball
39	125-8022	1	LH Lower Control Arm ASM
39:2	87-1450	2	Bushing-Flange
39:3	115-2165	1	Ball Joint

Ref.	Part Number	Qty.	Description
39:3:1	302-5	1	Fitting-Grease
39:4	32151-104	1	Ring-Retaining, External
39:5	87-2420	1	Seal-Joint, Ball
40	125-8023	1	RH Upper Control Arm ASM
40:2	87-1450	2	Bushing-Flange
40:3	115-2165	1	Ball Joint
40:3:1	302-5	1	Fitting-Grease
40:4	32151-104	1	Ring-Retaining, External
40:5	87-2420	1	Seal-Joint, Ball
41	125-8024	1	RH Lower Control Arm ASM
41:2	87-1450	2	Bushing-Flange
41:3	115-2165	1	Ball Joint
41:3:1	302-5	1	Fitting-Grease
41:4	32151-104	1	Ring-Retaining, External
41:5	87-2420	1	Seal-Joint, Ball
42	325-22	2	Screw-HH
43	3256-26	2	Washer-Flat
44	114-8419	6	Screw-HHF

 ● Not serviced separately

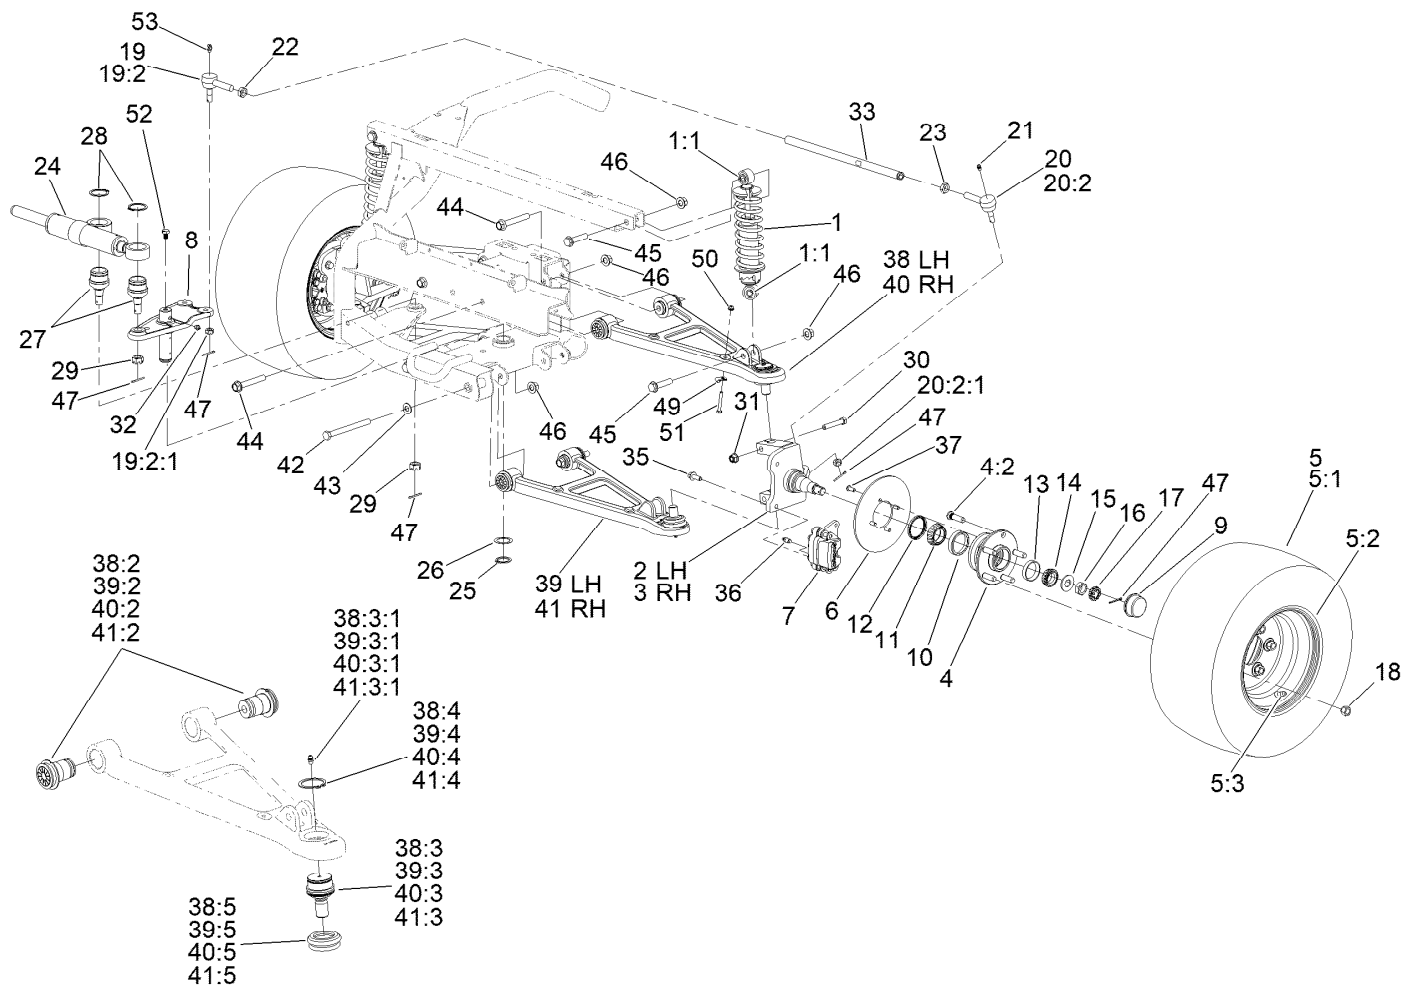


Front Suspension Assembly (continued)

Ref.	Part Number	Qty.	Description
45	3234-46	4	Screw-HHF
46	139-1689	12	Nut-HF
47	3272-12	8	Pin-Cotter
49	2412-72	2	Clip-Closed, Insulated


Ref.	Part Number	Qty.	Description
50	104-7201	2	Nut-HF, NI
51	321-11	2	Screw-HH
52	302-60	2	Fitting-Grease
53	138-6279	1	Screw-Cap, HH

 ● Not serviced separately

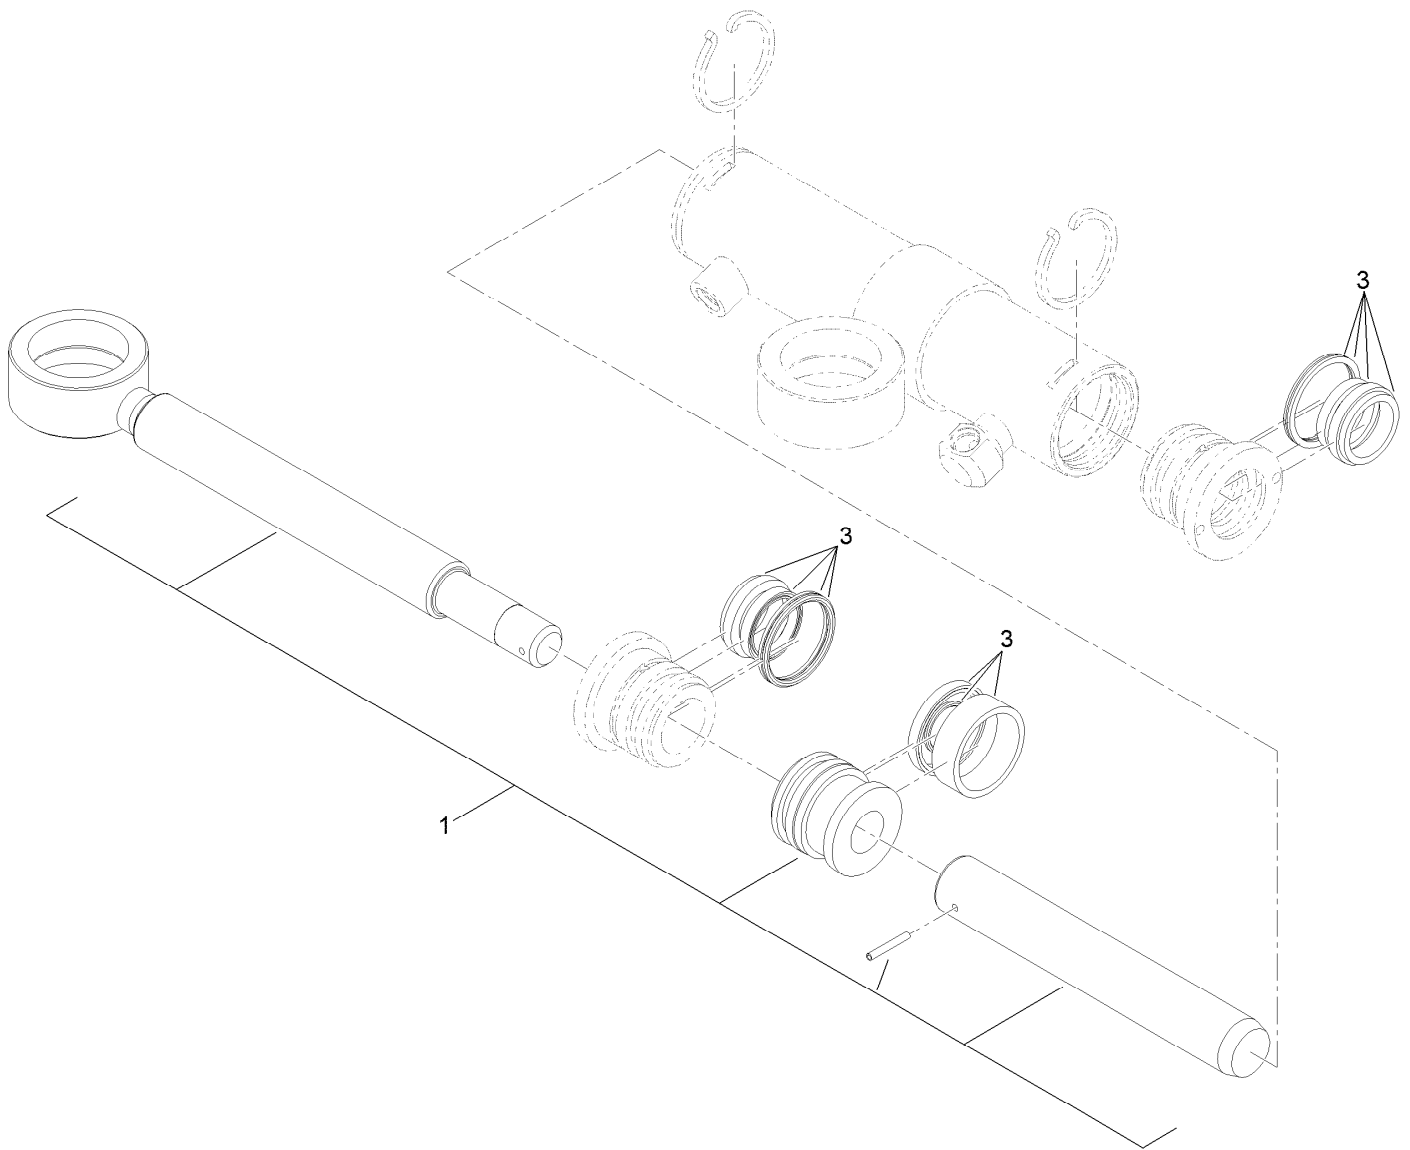

Hydraulic Cylinder Assembly No. 125-0720


Ref.	Part Number	Qty.	Description
1	125-0722	1	Rod-Cylinder
3	115-2160	1	Cylinder Repair Kit

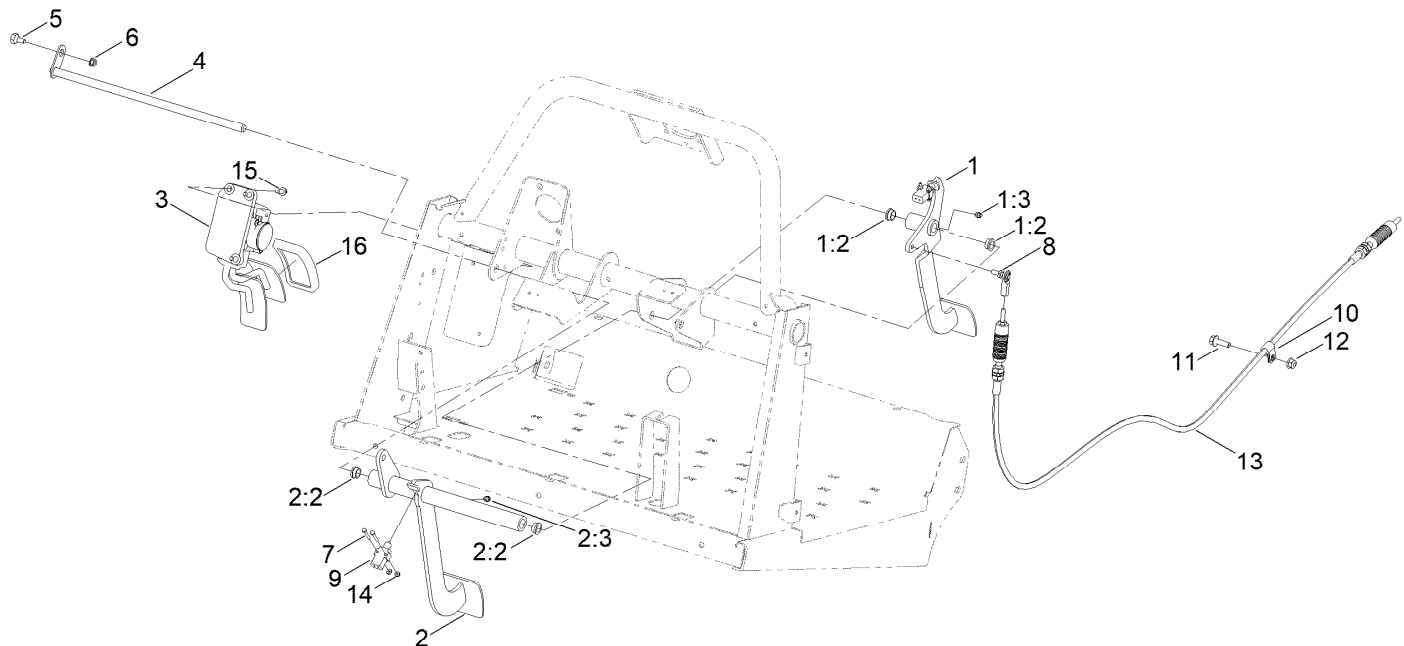 

Pedal Assembly

Ref.	Part Number	Qty.	Description
1	147-3587	1	Pedal, Clutch ASM
1:2	256-156	2	Bushing-Flange
1:3	302-5	1	Fitting-Grease
2	147-3585	1	Pedal, Brake ASM
2:2	256-156	2	Bushing-Flange
2:3	302-5	1	Fitting-Grease
3	144-2740	1	Pedal ASM-Accelerator
4	163-2930	1	Pivot ASM
5	63-3410	1	Screw-Shoulder
6	32128-33	1	Nut-HF


Ref.	Part Number	Qty.	Description
7	32105-9	4	Screw-HH
8	110-2554	1	Rod End-Spherical
9	99-3410	2	Switch
10	2412-93	1	Clamp-R
11	3234-17	1	Screw-HHF
12	119-4041	1	Nut-HF
13	125-0957	1	Cable-Clutch
14	3296-9	4	Nut-Hex
15	49-2040	3	Screw-HWHTF
16	140-4572	1	Pedal Pad-Throttle

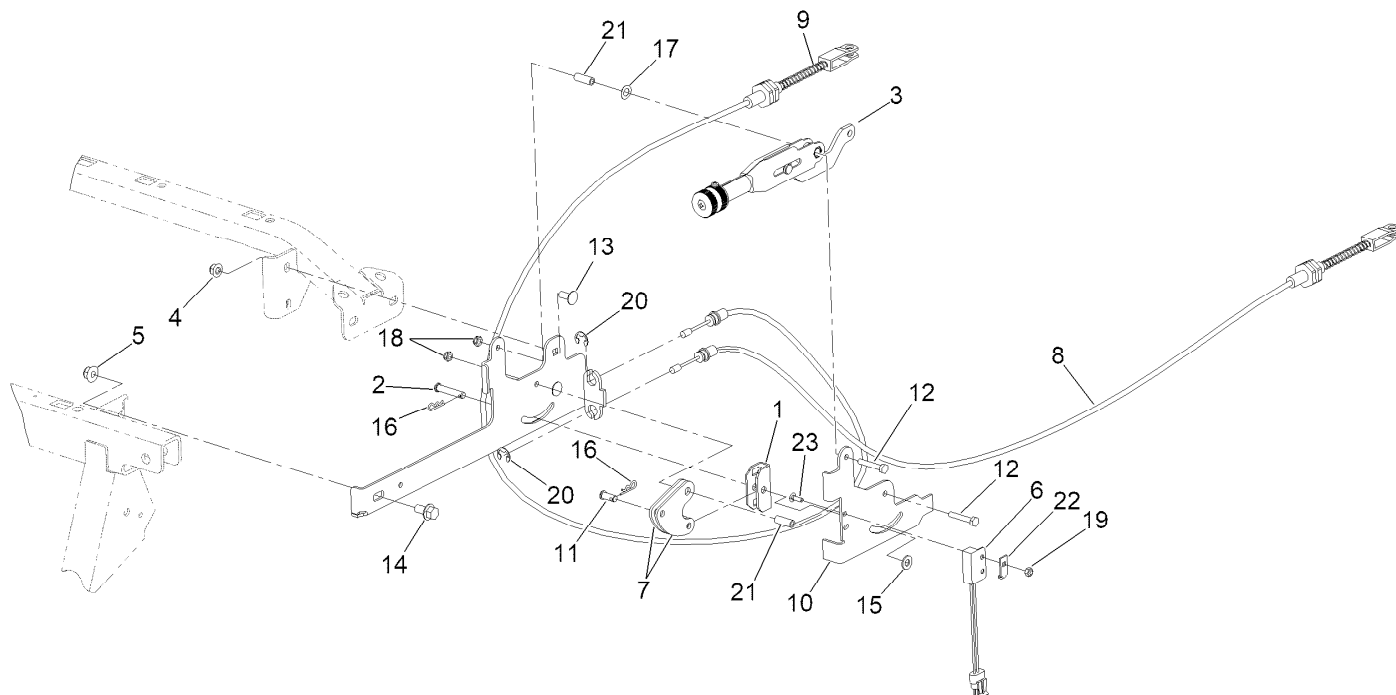 

Parking Brake Lever and Cable Assembly

Ref.	Part Number	Qty.	Description
1	87-3480	1	Bracket-Equalizer, Cable
2	94-3829	1	Pin-Clevis
3	87-2710	1	Lever-Brake
4	119-4041	2	Nut-HF
5	119-4042	1	Nut-HF, NI
6	105-0023	1	Sensor, Switch-Proximity
7	106-7814	2	Bellcrank
8	136-2444	1	Cable-Parking Brake, LH
9	136-2445	1	Cable-Parking Brake, RH
10	136-2353-0P	1	Parking Brake ASM [primed]
11	283-62	1	Pin-Clevis
12	321-9	2	Screw-HH

Ref.	Part Number	Qty.	Description
13	137-3061	2	Bolt-CARR
14	3234-1	1	Screw-HHF
15	3256-23	1	Washer-Plain
16	3290-307	2	Pin-Cotter
17	3290-477	1	Washer-Curved
18	3296-56	2	Nut-Lock, NI
19	3296-2	1	Nut-Lock, NI
20	32120-47	2	Ring-Retaining, External
21	114402	2	Spacer
22	100-4872	1	Plate-Switch, Neutral
23	3229-34	1	Screw-CARR

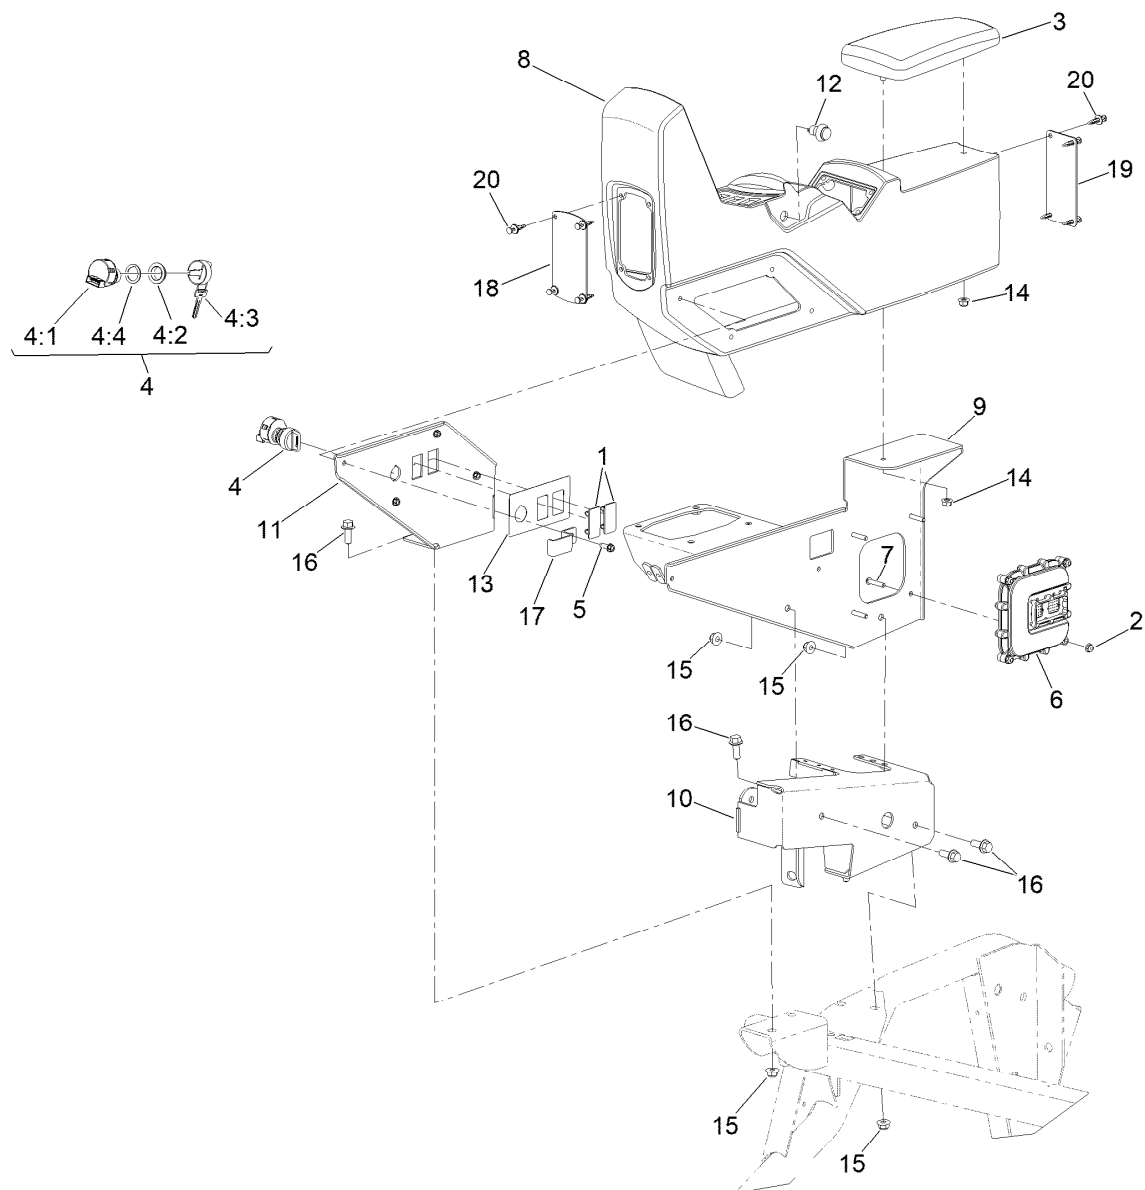 

Control Console Mount Assembly

Ref.	Part Number	Qty.	Description
1	99-7420	2	Plug-Hole
2	104-7201	4	Nut-HF, NI
3	108-7602	1	Rest-Arm
4	110-2580	1	Switch-Key, Supervisor
4:1		1	Switch-Key ●
4:2	108-8660	1	Nut-Mounting
4:3	110-5221	1	Set-Key, Supervisor
4:4	108-8659	1	Washer-Backup
5	49-2040	4	Screw-HWHTF
6	122-3374	1	Controller
7	120-0834	4	Screw-HSBH
8	161-4147	1	Console-Armrest
9	125-4108-0P	1	Console-Mount ASM [primed]


Ref.	Part Number	Qty.	Description
10	125-4188-0P	1	Shifter-Mount [primed]
11	125-4191-03	1	Console Mount ASM
12	125-7996	1	Switch-Pb, Momentary
13	125-8114	1	Decal-Control Panel
14	119-4041	2	Nut-HF
15	119-4042	6	Nut-HF, NI
16	3234-11	6	Screw-HHF
17	136-2309	1	Bracket-Mount, Radio
18	147-4692-03	1	Plate-Cover, Front
19	147-4693-03	1	Plate-Cover, Rear
20	125-9622	8	Rivet-Blind

● Not serviced separately



Ref.	Part Number	Qty.	Description
13	125-0880	2	Cable-Shift
14	125-0894	1	Handle-Difflock
15	125-8030-03	1	Cover-Shifter
16	3218-18	1	Nut-Jam
17	3220-1	4	Nut-Jam
18	32128-13	1	Nut-HF
19	323-10	2	Screw-HH
20	3290-357	2	Nut-HSF
21	93-6083	4	Screw-HWH
22	283-62	5	Pin-Clevis
23	32120-47	1	Ring-Retaining, External
24	3290-307	5	Pin-Cotter
25	108-4925	1	Washer

 Shift Assembly No. 106-7887

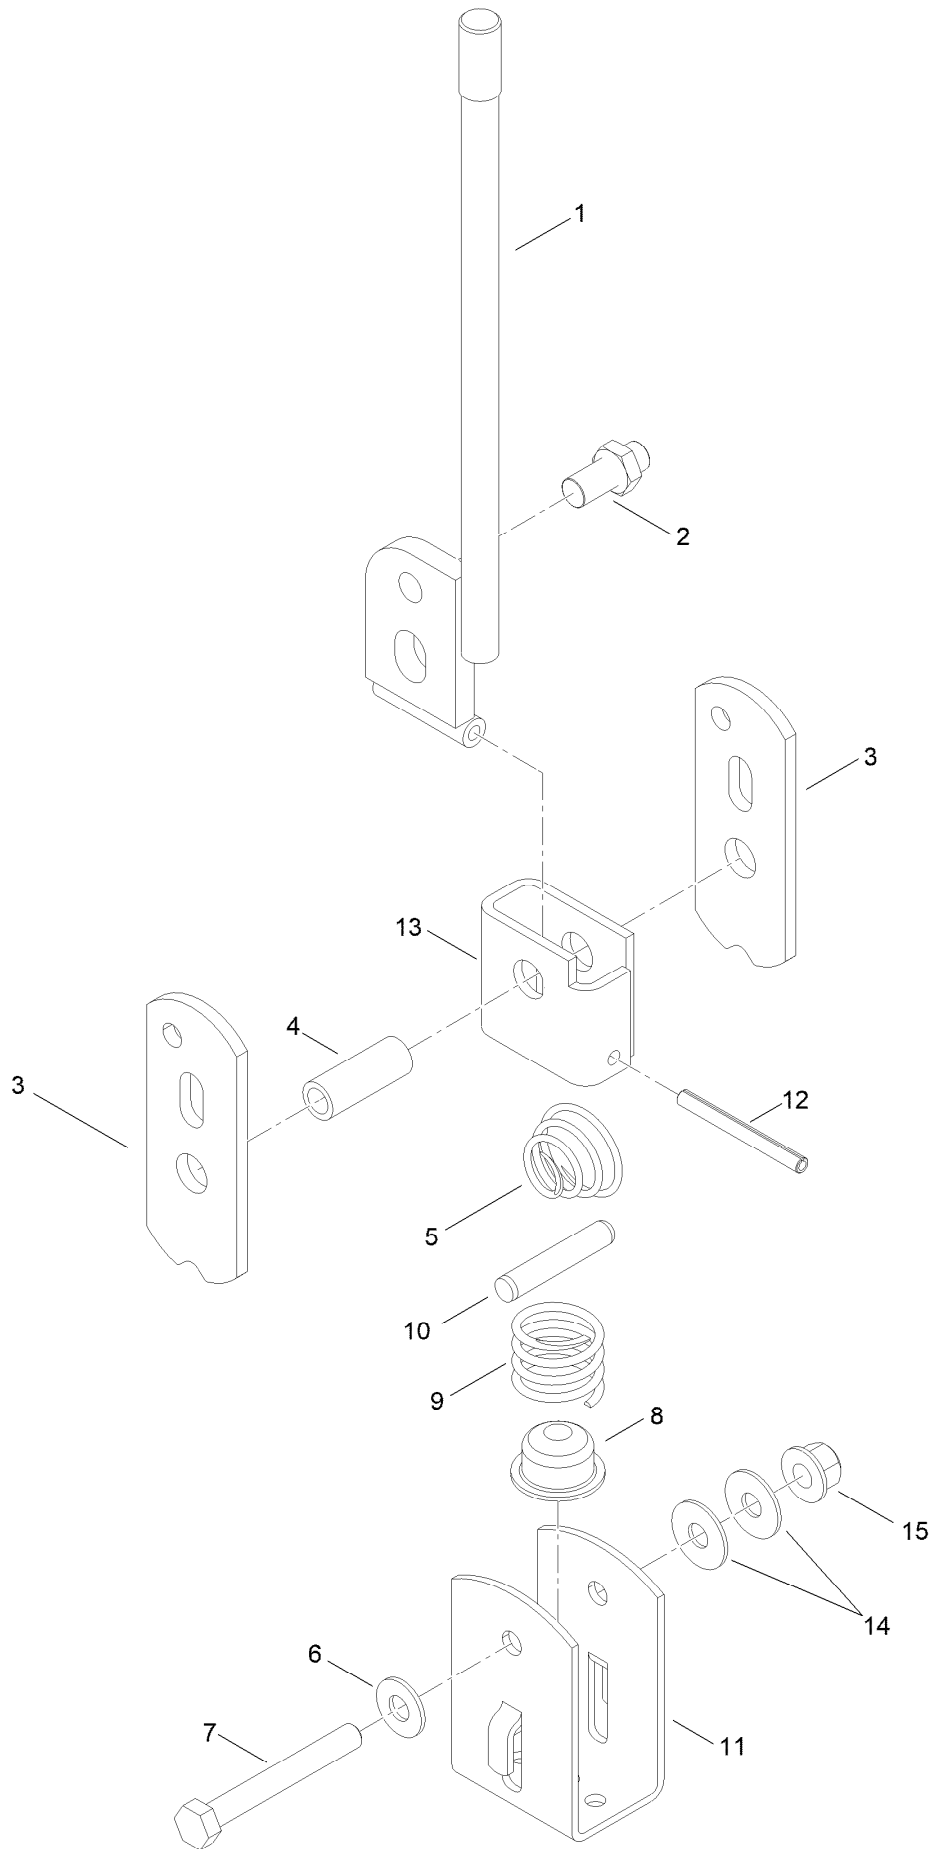


Shift Assembly No. 106-7887 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-3469	1	Lever-Shift
2	87-3650	1	Pin-Shift
3	87-3540	2	Link-Shift
4	87-2520	1	Tube-Pivot
5	87-2900	1	Spring-Compression
6	87-8640	1	Washer-Flat
7	322-12	1	Screw-HH
8	87-3530	1	Button-Shifter

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
9	87-3660	1	Spring-Compression
10	3290-507	1	Pin-Dowel
11	87-3520	1	Clevis
12	32121-48	1	Pin-Spring
13	87-6040	1	Bracket-Shifter
14	3290-456	2	Washer-Belleville
15	119-4041	1	Nut-HF

 
Control Console Assembly

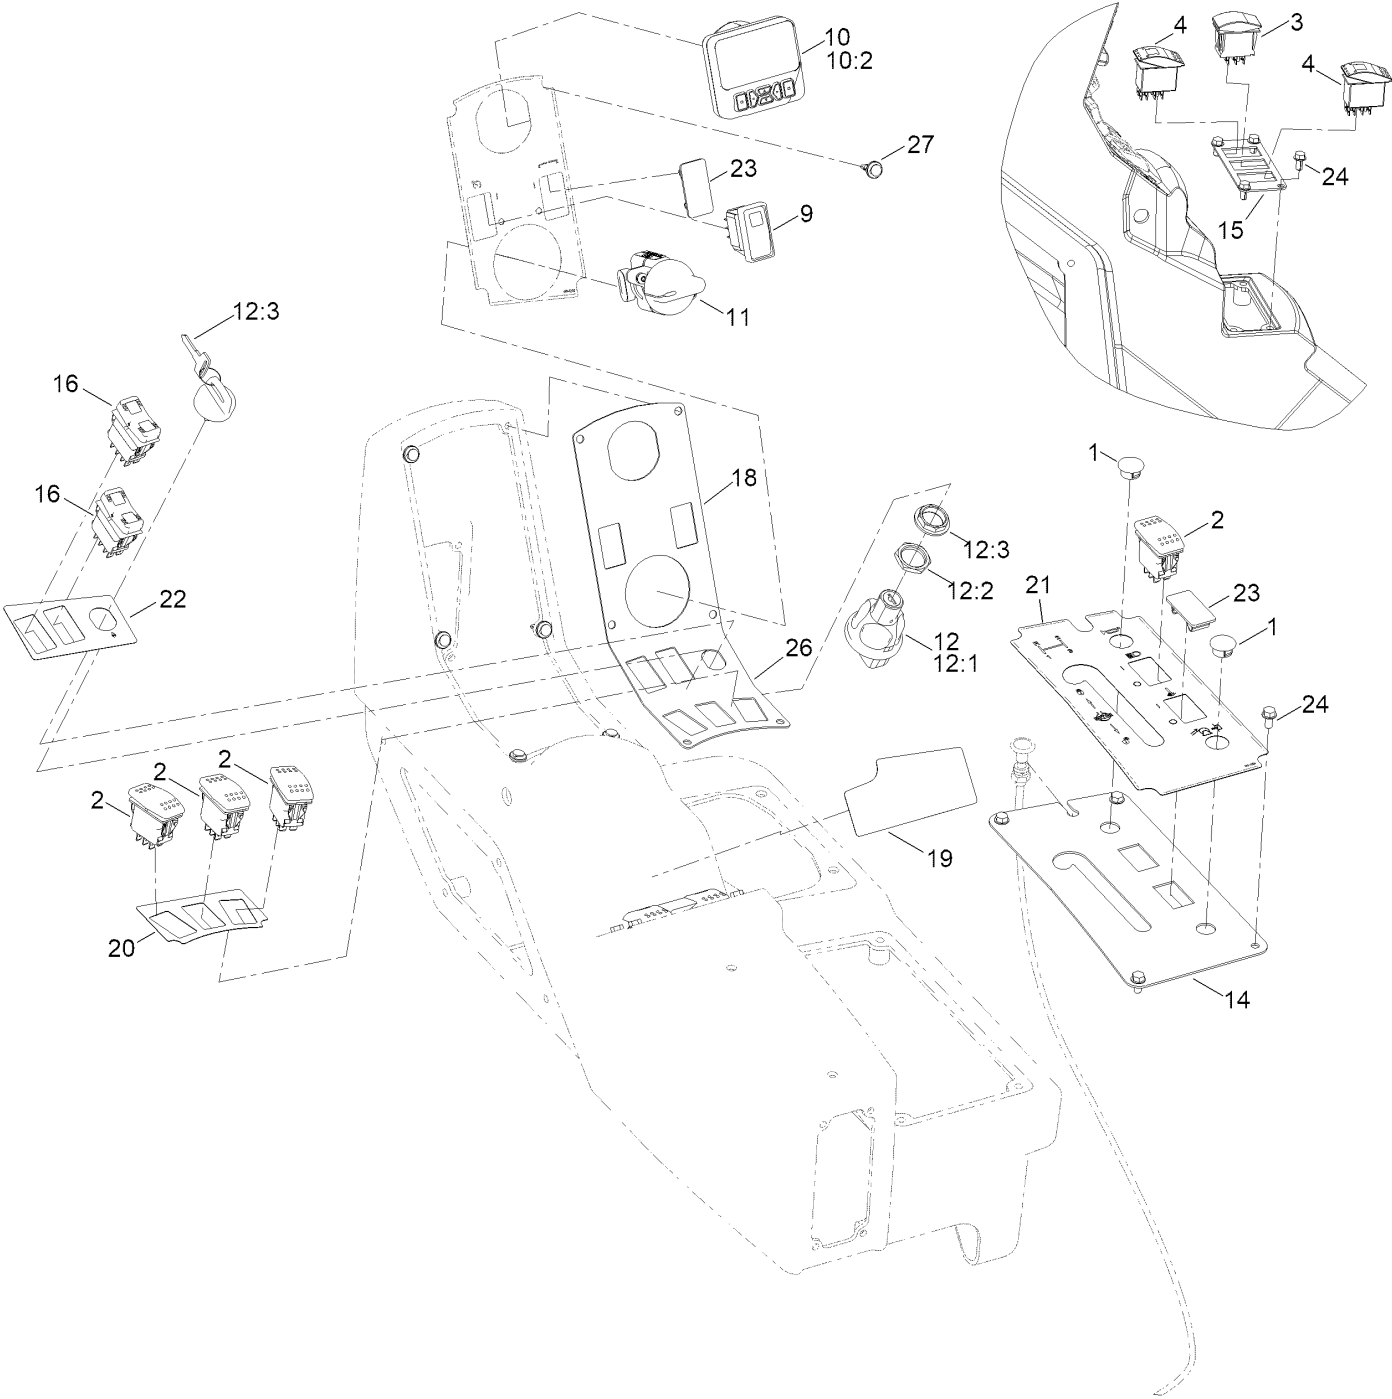

Control Console Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	94-5627	2	Plug-Dome	12:2	122-2704	1	Nut-Face, M22 (Plastic)
2	95-8999	4	Switch-Rocker, On-None-On	12:3	121-5162	1	Set-Key, Ignition
3	100-1535	1	Switch-Rocker, (On)-Off-(On)	14	125-0896-03	1	Panel-Cover
4	100-8490	2	Switch-Rocker, On-None-On	15	125-0898-03	1	Panel-Switches
9	122-2719	1	Switch-Rocker, On-None-(On)	16	125-0899	2	Switch-Rocker
10	161-1700	1	Display-LCD	18	163-7160	1	Decal-Control Panel, Upper
10:2	161-1723	1	Nut-Display	19	130-8293	1	Decal-Control Panel, Rear
11	163-2962	1	Sensor-Position, Rotary	20	161-4145	1	Decal-Control Panel, Spray
12	161-4693	1	Switch-Ignition	21	163-2966	1	Decal-Control Panel
12:1	121-5160	1	Nut-Hex	22	161-4144	1	Decal-Switch Panel, Center
				23	99-7420	2	Plug-Hole
				24	93-6083	8	Screw-HWH
				26	163-7153-03	1	Panel-Switches
				27	125-9622	6	Rivet-Blind

 
Hood, Dash and Headlight Assembly

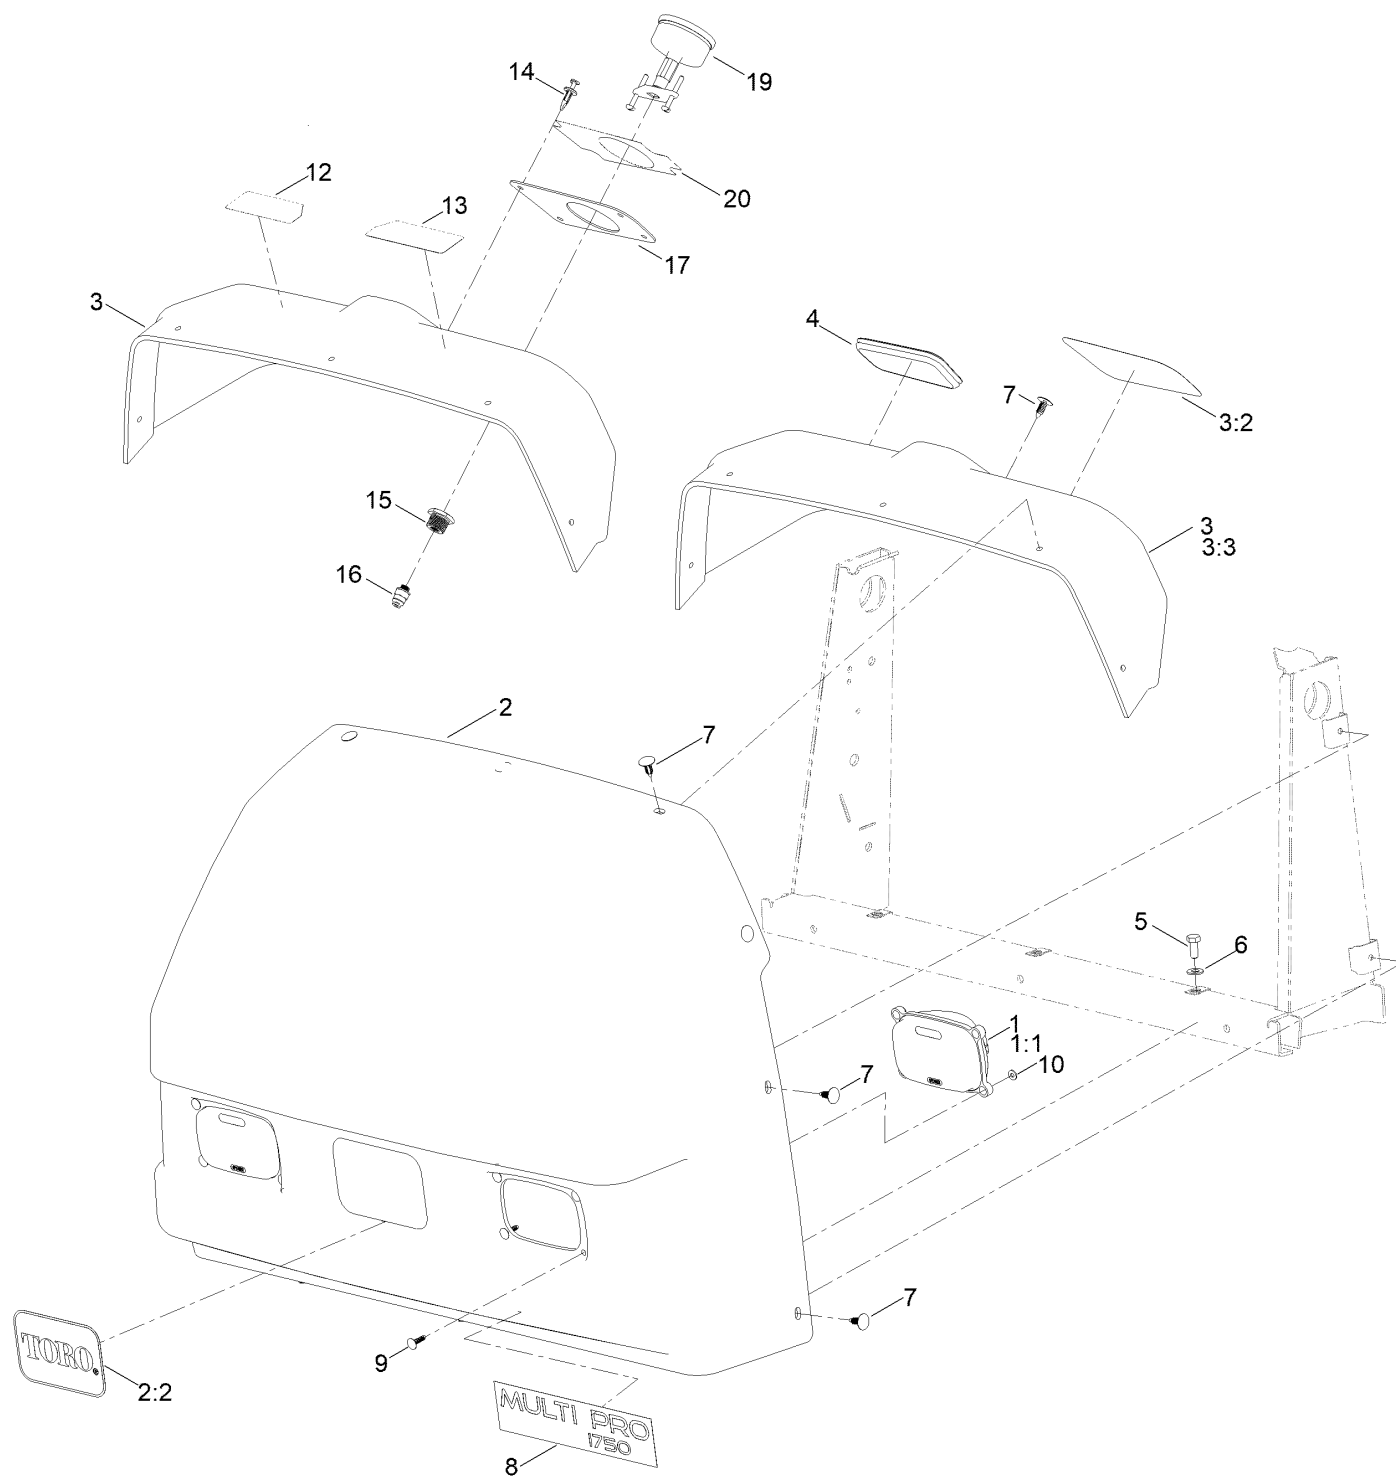

Hood, Dash and Headlight Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-0672	2	Headlight ASM	8	127-3944	1	Decal
1:1	125-0673	1	Halogen-Bulb	9	125-8067	8	Plug-Plastic
2	127-3982	1	Hood	10	3256-21	8	Washer-Flat
2:2	67-1300	1	Decal	12	163-2967	1	Decal-Warning
3	163-2998	1	Dash	13	163-2968	1	Decal-Warning
3:2	163-2967	1	Decal-Warning	14	125-9622	4	Rivet-Blind
3:3	163-2968	1	Decal-Warning	15	100-8665	1	Reducer-Gauge, Pressure
4	125-8059	1	Cover- Reservoir, Brake	16	100-8667	1	Coupler-Reducer
5	322-3	3	Screw-HH	17	163-7154-03	1	Bracket-Hand Throttle
6	3256-23	3	Washer-Plain	19	120-8546	1	Gauge-Pressure
7	117-2382	10	Plug-Plastic	20	164-1047	1	Decal-Dash Panel

 
Seat Base and Front Fender Assembly

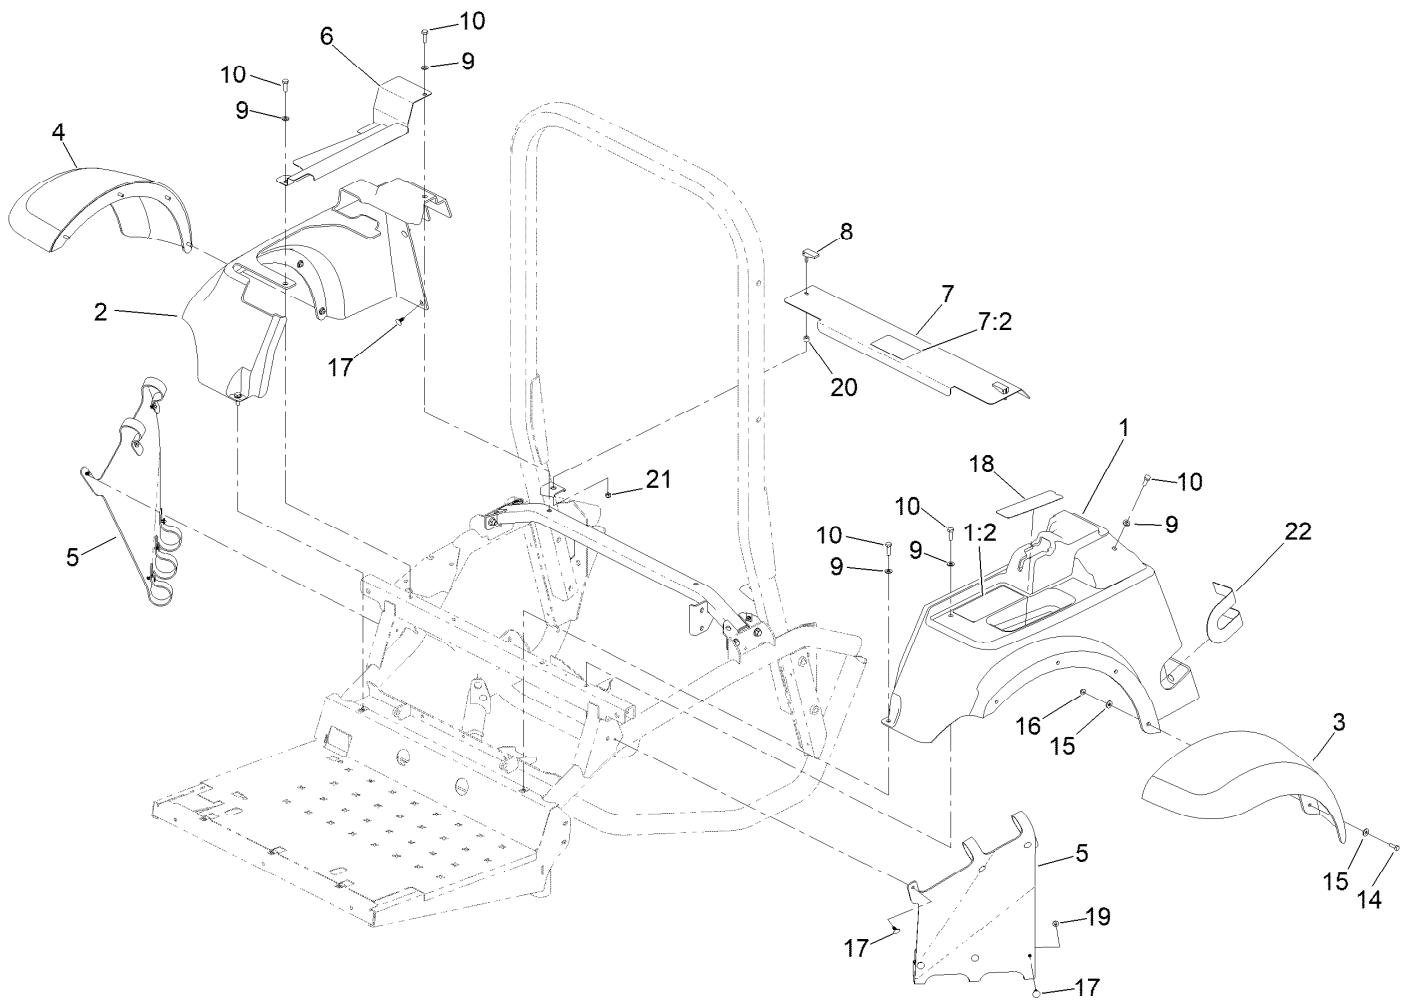

Seat Base and Front Fender Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-3980	1	LH Seatbase ASM	9	3256-23	7	Washer-Plain
1:2	127-3935	1	Decal-Start-Up/Shut-Down	10	322-5	7	Screw-HH
2	164-1048	1	Seatbase-RH	14	321-5	8	Screw-HH
3	125-0902	1	Fender-LH	15	3256-2	16	Washer-Flat
4	125-0903	1	Fender-RH	16	104-7201	8	Nut-HF, NI
5	125-0935	2	Shroud-Fender, Inner	17	117-2382	16	Plug-Plastic
6	164-1060-01	1	Cover-Console, End	18	125-8093	1	Pad-Pocket
7	127-3979	1	Cover-Engine	19	3256-16	10	Washer-Flat
7:2	127-3937	1	Decal-Warning, Engine	20	106-6778	2	Bushing-Latch, Swell
			Cover	21	1-804254	2	Nut-Lock, HH
8	106-6777	2	Handle-Latch, Swell	22	131-5822	1	Guard-Rubber

 Air Cleaner Assembly

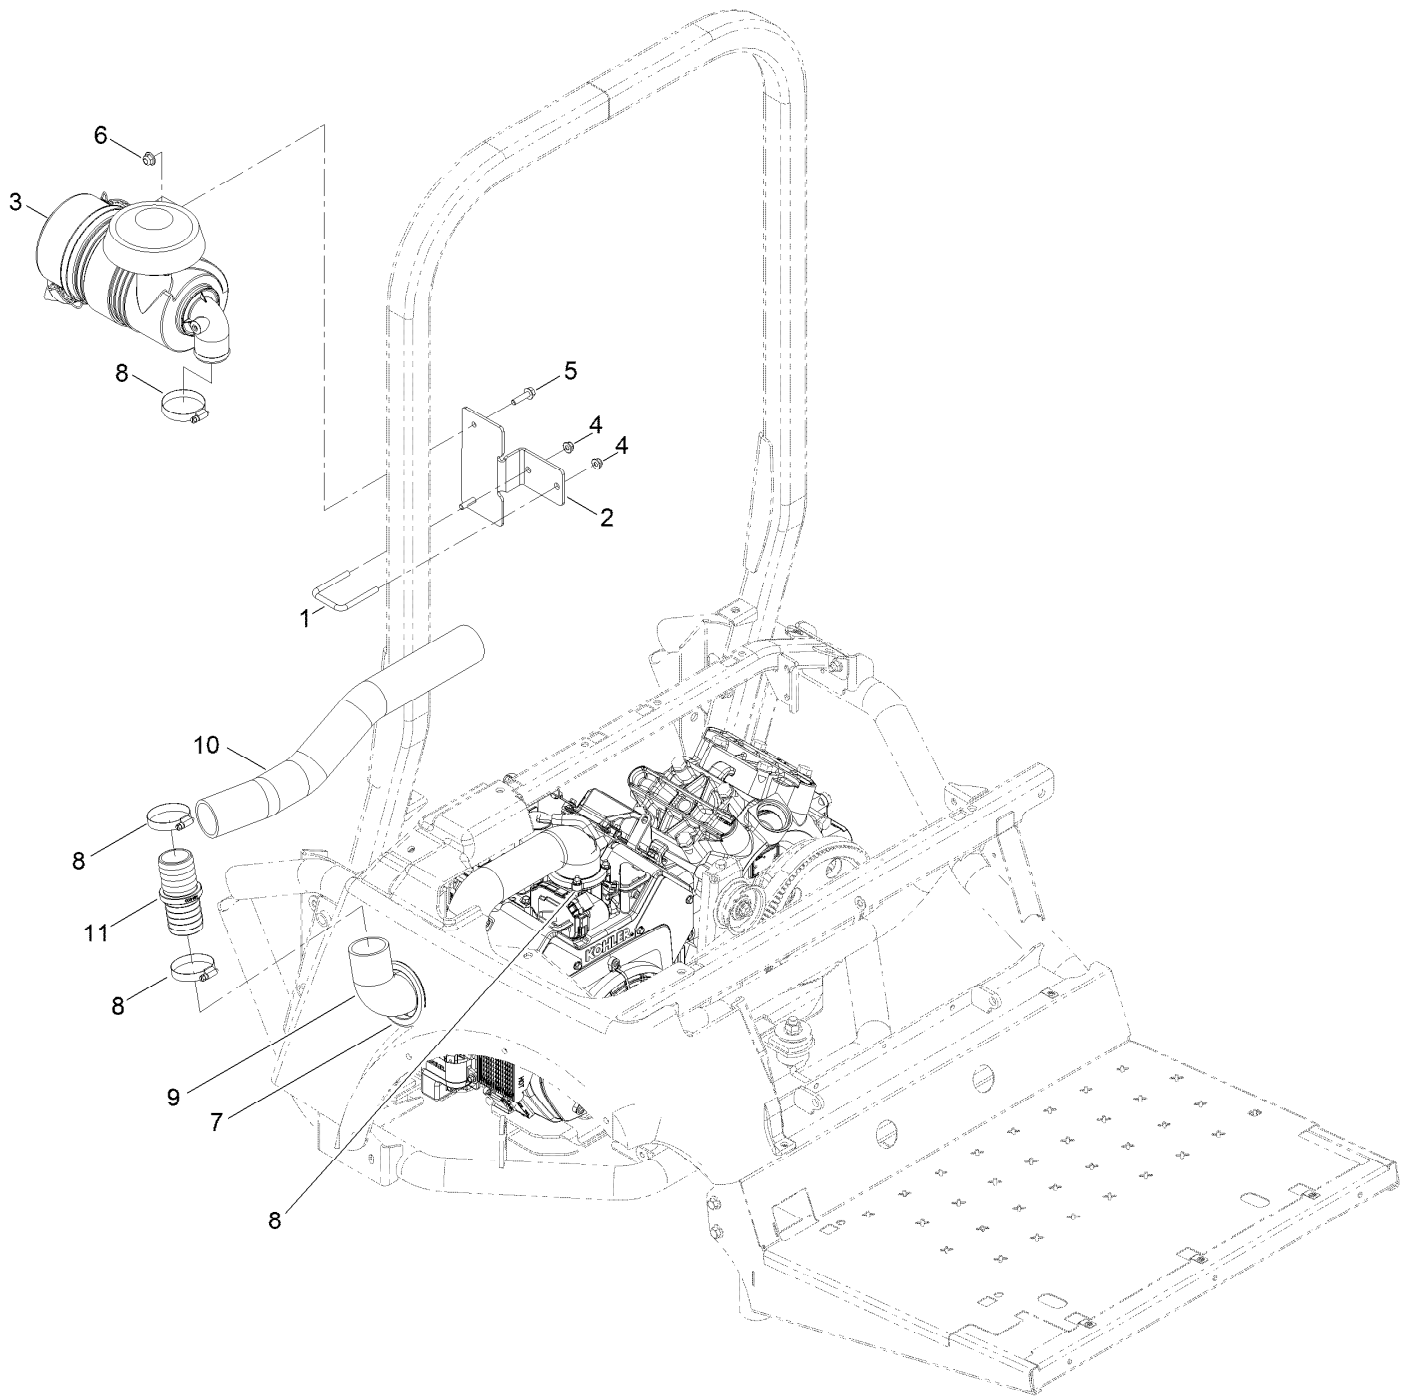


Air Cleaner Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	109-2394	1	U-Bolt	7	144-6568	1	Grommet-Rubber
2	163-7196-03	1	Mount-Air Cleaner	8	2412-130	4	Clamp-Hose
3	138-5650	1	Air Cleaner ASM	9	164-1033	1	Hose-Air Intake, Engine
4	119-4041	2	Nut-HF	10	164-1034	1	Hose-Air Intake, Filter
5	119-4036	2	Screw-HHF	11	164-1046	1	Fitting-Hose Mender, 2" To
6	119-4042	2	Nut-HF, NI			2"	

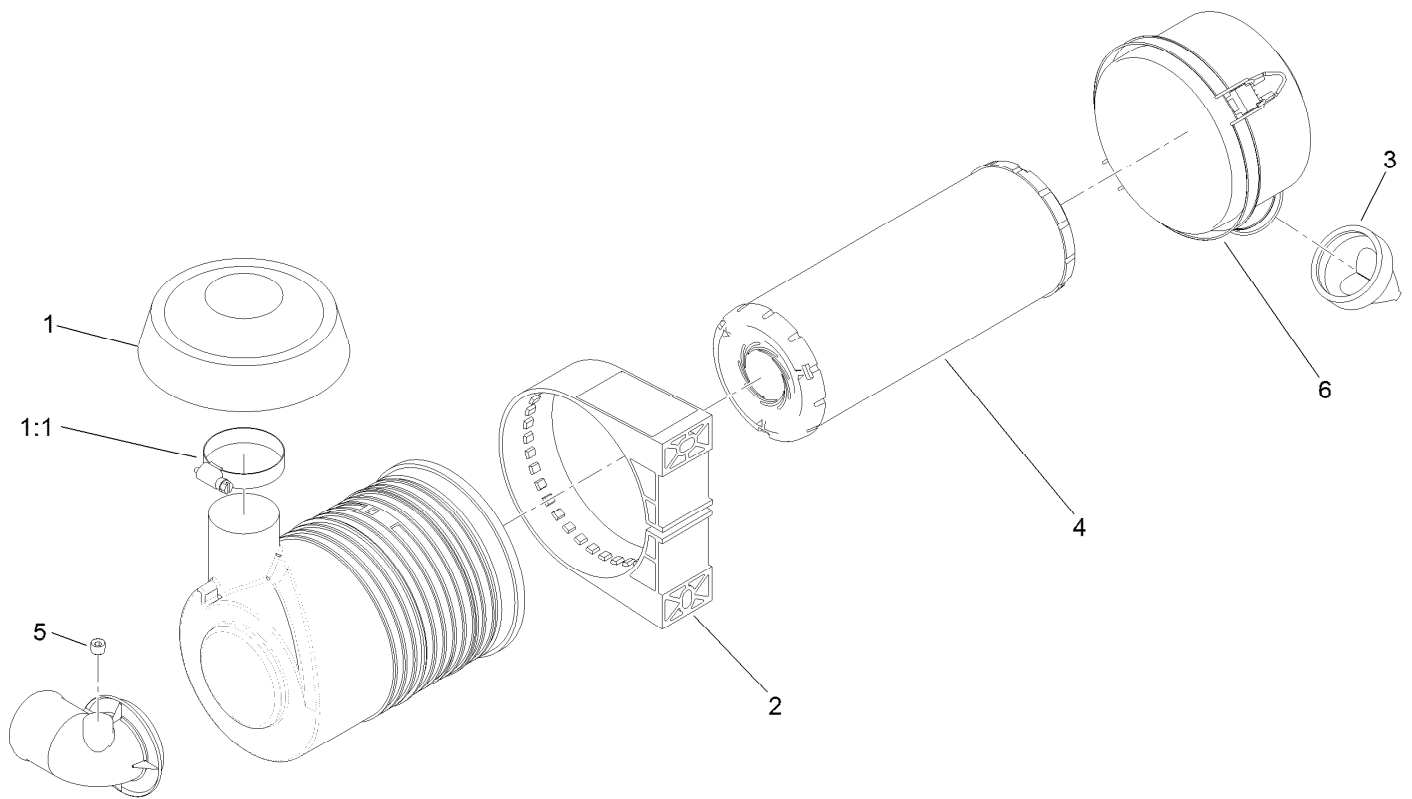 

Air Cleaner Assembly No. 138-5650


Ref.	Part Number	Qty.	Description
1	139-0686	1	Rain Cap ASM
1:1	2412-130	1	Clamp-Hose
2	98-4525	1	Bracket-Cleaner, Air
3	87-9400	1	Valve-Vacuator
4	108-3810	1	Filter-Air
5	285-17	1	Plug-Pipe
6	98-9771	1	Cover ASM

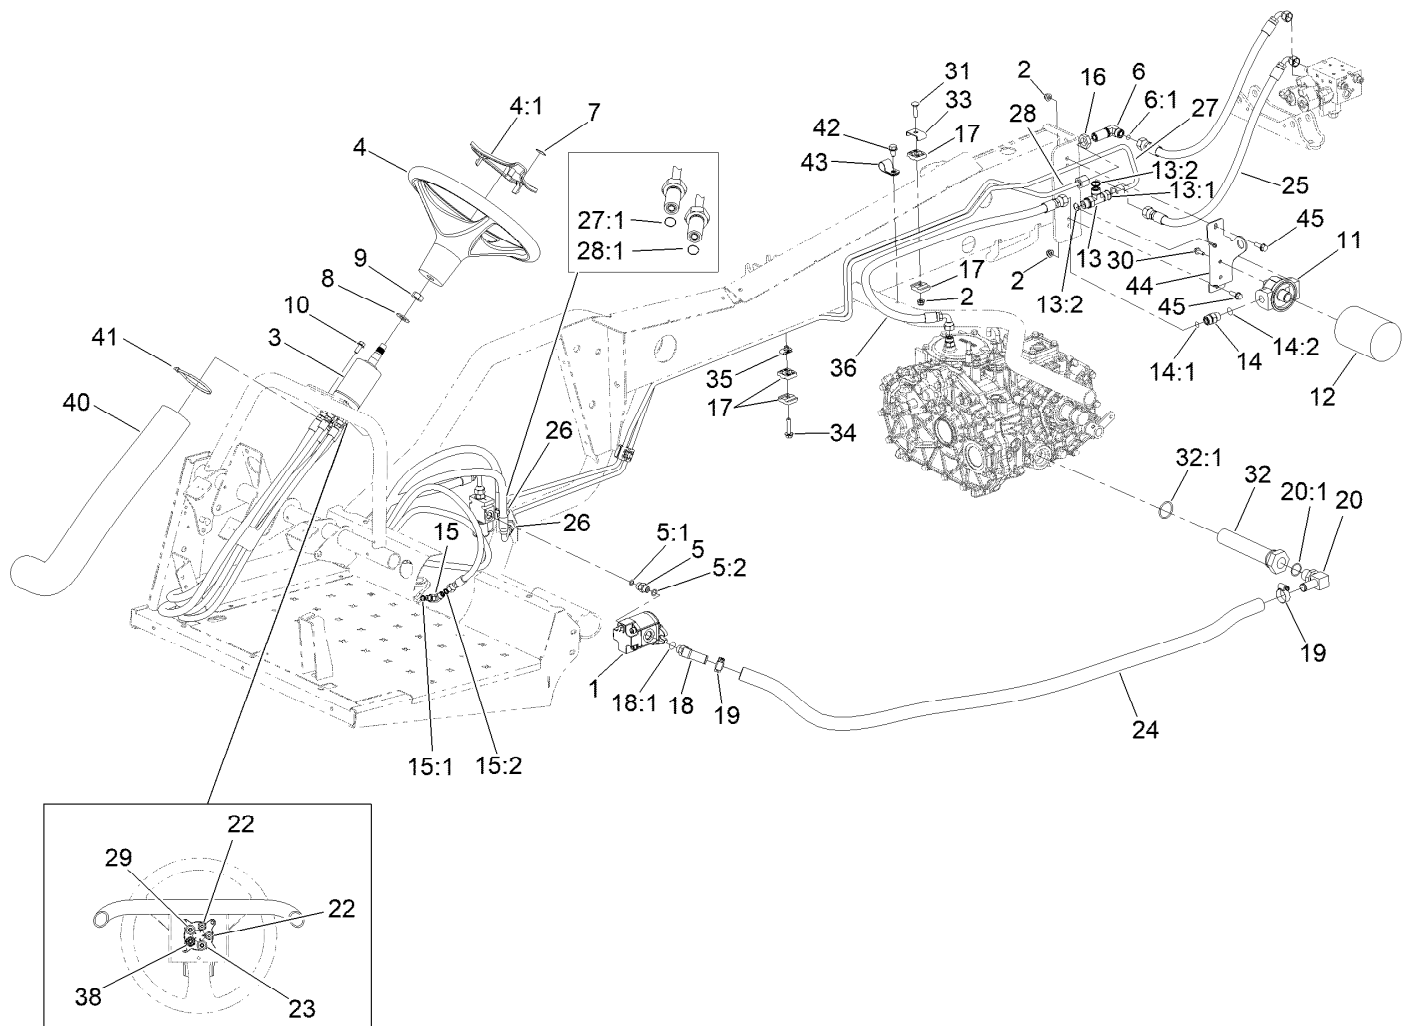 

Hydraulic Steering Assembly

Ref.	Part Number	Qty.	Description
1	121-6545	1	HYD Pump ASM
2	119-4041	4	Nut-HF
3	138-6100	1	Steering Control Unit
4	98-1471	1	Wheel-Steering
4:1	98-1468	1	Cover-Wheel, Steering
5	340-2	2	Fitting-Straight
5:1	237-22	1	O-Ring
5:2	237-42	1	O-Ring
6	93-9151	1	Fitting-HYD
6:1	237-30	2	O-Ring
7	98-1459	1	Decal
8	3256-27	1	Washer-Flat
9	3296-33	1	Nut-Lock, NI
10	33104-020	4	Screw-HHF
11	87-8780	1	Head-Filter
12	54-0110	1	Filter-Oil, Transmission
13	340-109	1	Fitting-Tee
13:1	237-79	1	O-Ring
13:2	237-30	2	O-Ring
14	340-4	1	Fitting-Straight
14:1	237-30	1	O-Ring


Ref.	Part Number	Qty.	Description
14:2	237-79	1	O-Ring
15	340-132	2	Fitting-Elbow, 90 DEG
15:1	237-78	1	O-Ring
15:2	237-21	1	O-Ring
16	340-127	1	Nut-Bulkhead
17	56-7973	6	Clamp-Tube
18	93-6848	1	Fitting-Elbow 45
18:1	237-79	1	O-Ring
19	2412-129	2	Clamp-Hose
20	353-987	1	Fitting-Elbow, 90
20:1	237-81	1	O-Ring
22	108-5675	2	Hydraulic Hose ASM
23	127-3987	1	Hose ASM
24	125-0952	1	Hose-Suction
25	125-0949	2	Hydraulic Hose ASM
26	340-70	2	Nut-Lock
27	125-4058	1	Hydraulic Tube ASM
27:1	237-22	1	O-Ring
28	125-4059	1	Hydraulic Tube ASM
28:1	237-22	1	O-Ring
29	114-7702	1	Hose-HYD

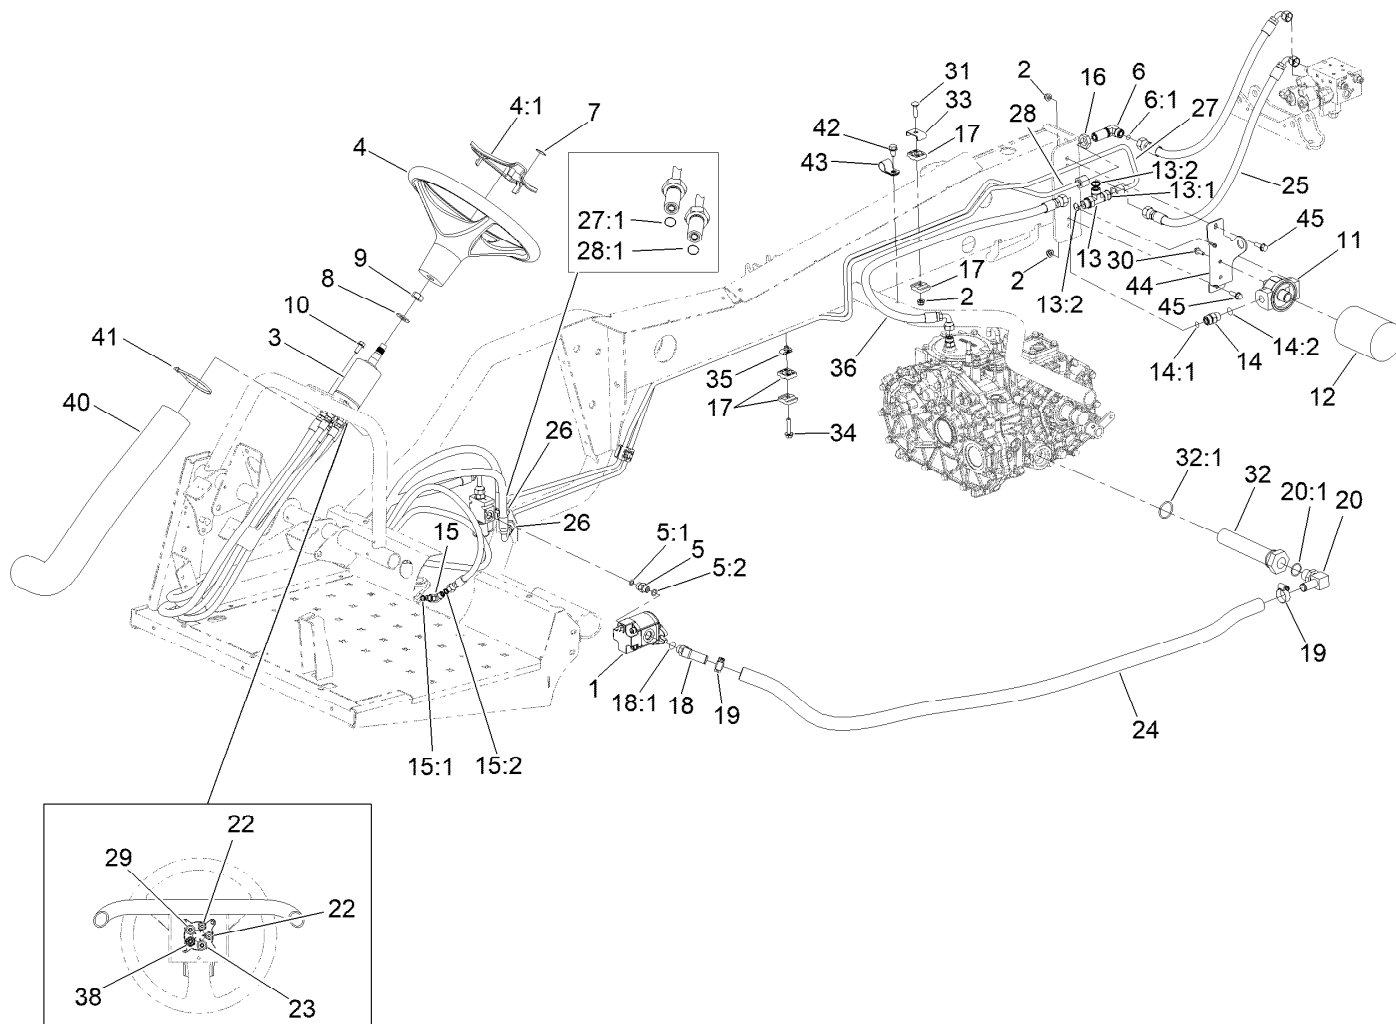 

Hydraulic Steering Assembly (continued)


Ref.	Part Number	Qty.	Description
30	3234-4	2	Screw-HHF
31	3230-3	2	Screw-CARR
32	147-6678	1	Strainer-Hydraulic
32:1	237-101	1	O-Ring
33	119-1418	2	Plate-Clamp, Short
34	115-1794	1	Screw-HHF
35	94-2413	1	Nut-U
36	94-5961	1	Hose

Ref.	Part Number	Qty.	Description
38	120-2061	1	Hose-HYD
40	106-6713	1	Cover-Lines, Steering
41	3290-379	4	Tie-Cable
42	110-9380	1	Screw-HWH
43	2412-81	1	Clamp-R
44	136-2313-03	1	Mount-Filter
45	3234-29	2	Screw-HHF

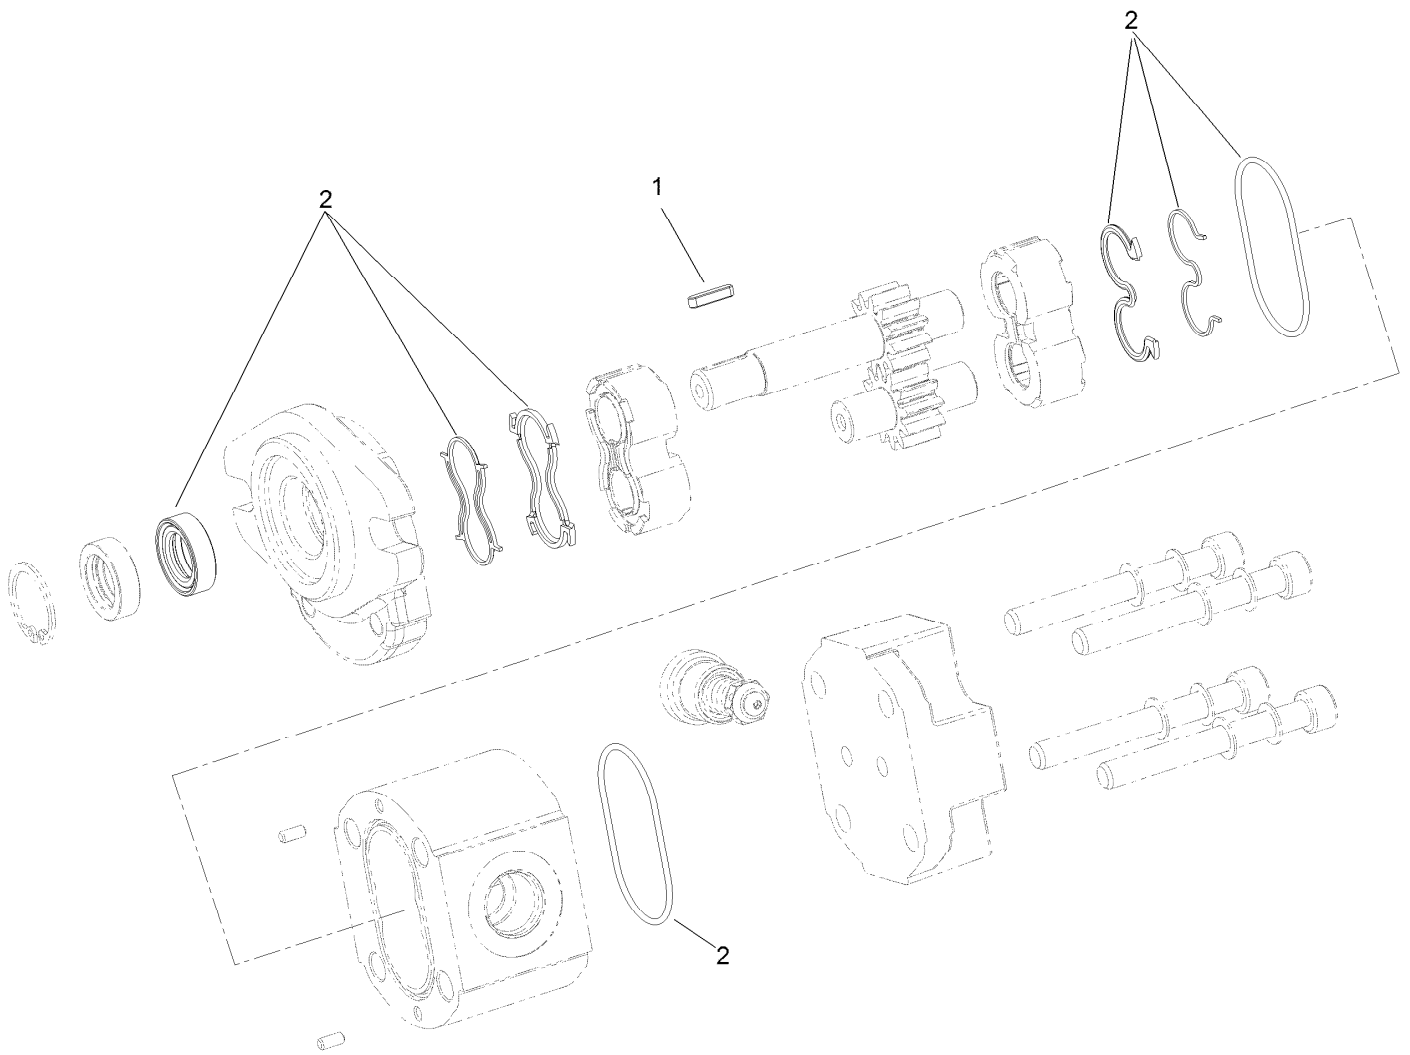 

Hydraulic Pump Assembly No. 121-6545


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-8147	1	Key, Square
2	125-8148	1	Seal Kit

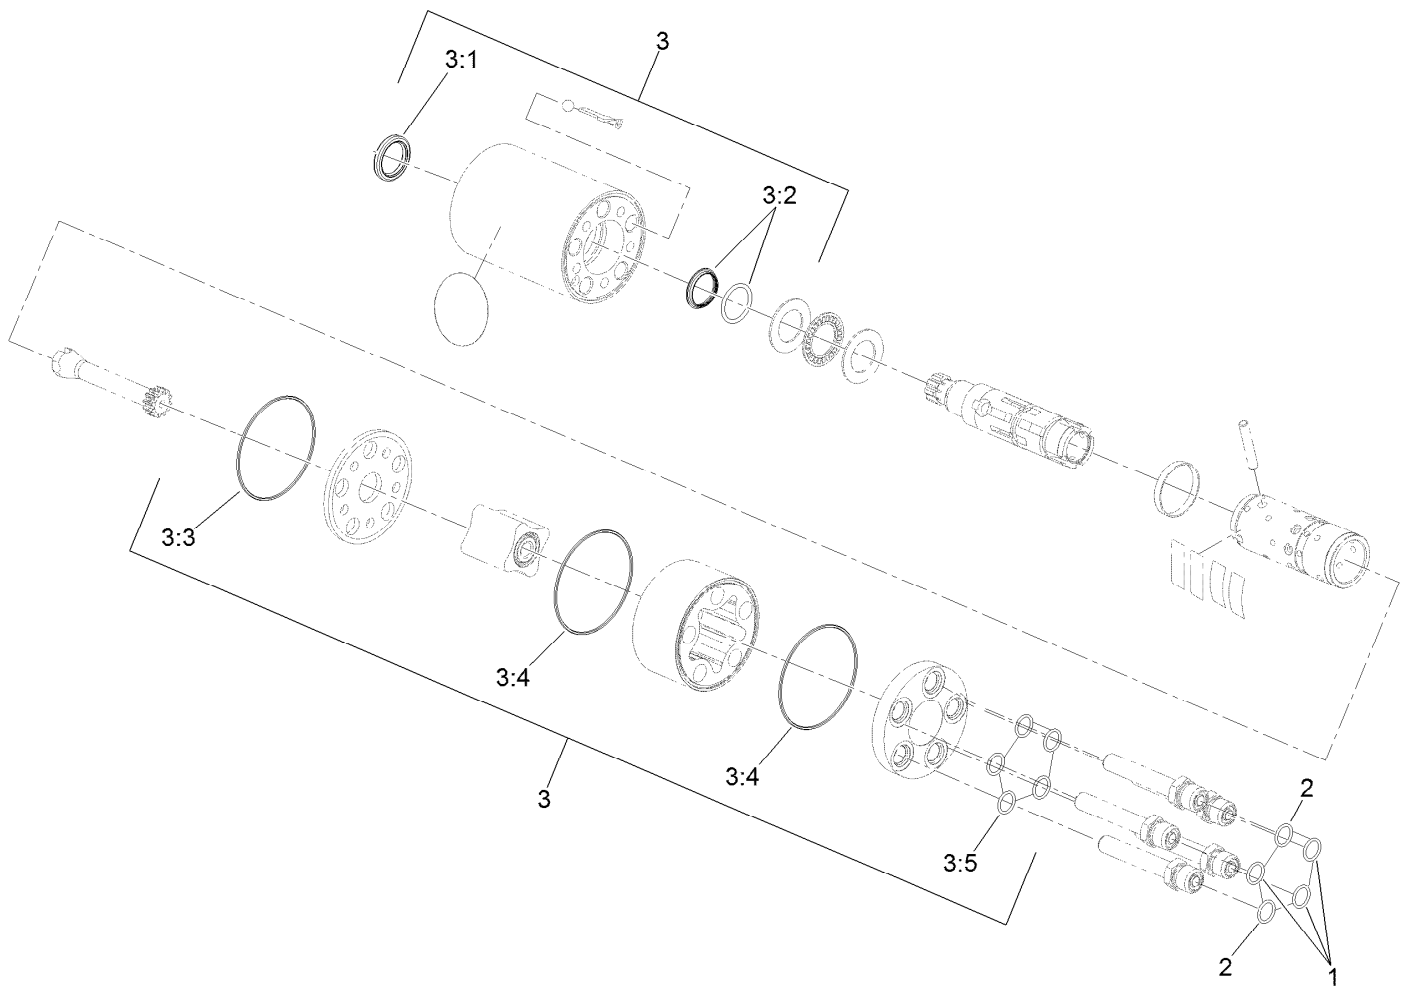 

Steering Valve Assembly No. 138-6100

Ref.	Part Number	Qty.	Description
1	237-21	3	O-Ring
2	237-22	2	O-Ring
3	106-6716	1	Seal Kit
3:1		1	Ring-Seal, Dust ●
3:2		1	Seal-Shaft ●
3:3		1	O-Ring ●
3:4		2	O-Ring ●
3:5		5	O-Ring ●

 ● Not serviced separately

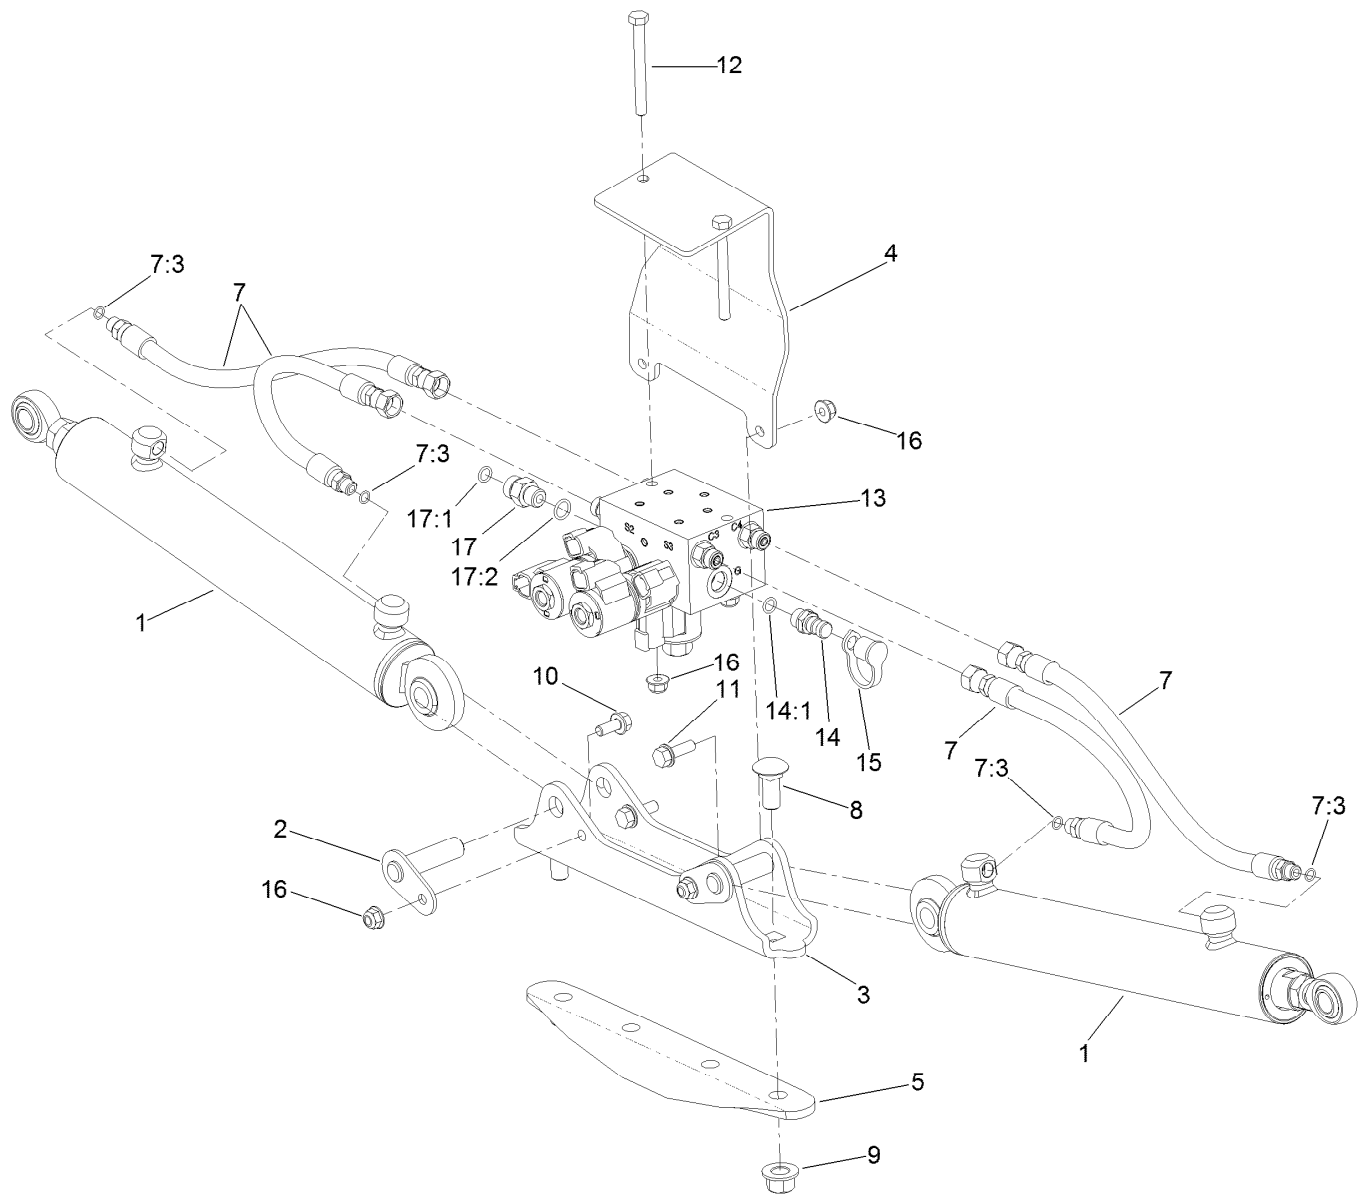


Boom Lift Hydraulic Assembly

Ref.	Part Number	Qty.	Description
1	117-0701	2	Hydraulic Cylinder ASM
2	112-7884	2	Pin-Pivot
3	119-4856-03	1	Plate-Mount, Cylinders
4	130-8201-03	1	Mount-Valve
5	131-0297-03	1	Plate-Stiffener, Boom
7	119-4859	4	Hose ASM
7:3	237-78	1	O-Ring
8	110-5067	2	Screw-CARR
9	139-1689	2	Nut-HF
10	110-5053	2	Screw-HHF

Ref.	Part Number	Qty.	Description
11	3234-29	2	Screw-HHF
12	322-14	2	Screw-HH
13	136-2400	1	On-Off Boom Lift Valve ASM
14	59-7410	1	Fitting-Diagnostic
14:1	237-42	1	O-Ring
15	354-79	1	Cap-Dust
16	119-4041	6	Nut-HF
17	340-2	2	Fitting-Straight
17:1	237-22	1	O-Ring
17:2	237-42	1	O-Ring

 Hydraulic Cylinder Assembly No. 117-0701

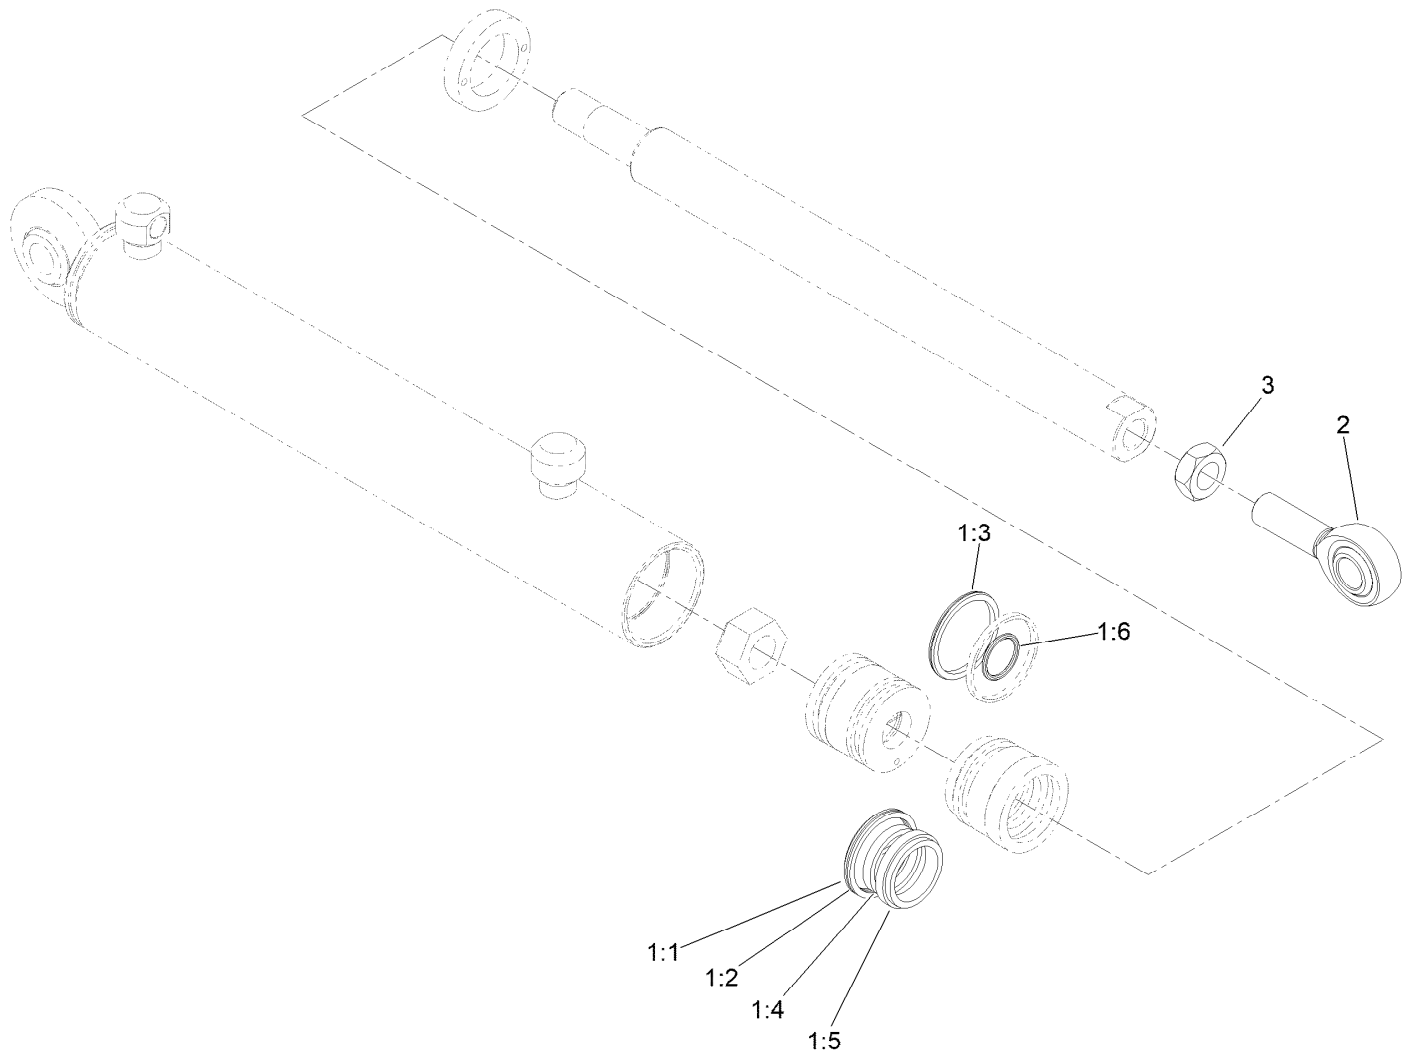


Hydraulic Cylinder Assembly No. 117-0701 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-8026	1	Seal Kit ●	1:5		1	Dust Seal ■
1:1		1	O-Ring ■	1:6		1	O-Ring ■
1:2		1	Ring-Backup ■	2	119-8027	1	Rod End
1:3		1	Bp Seal ■	3	3220-6	1	Nut-Jam
1:4		1	Bs Seal ■				

● Not illustrated

■ Not serviced separately

 On-Off Boom Lift Valve Assembly No. 136-2400

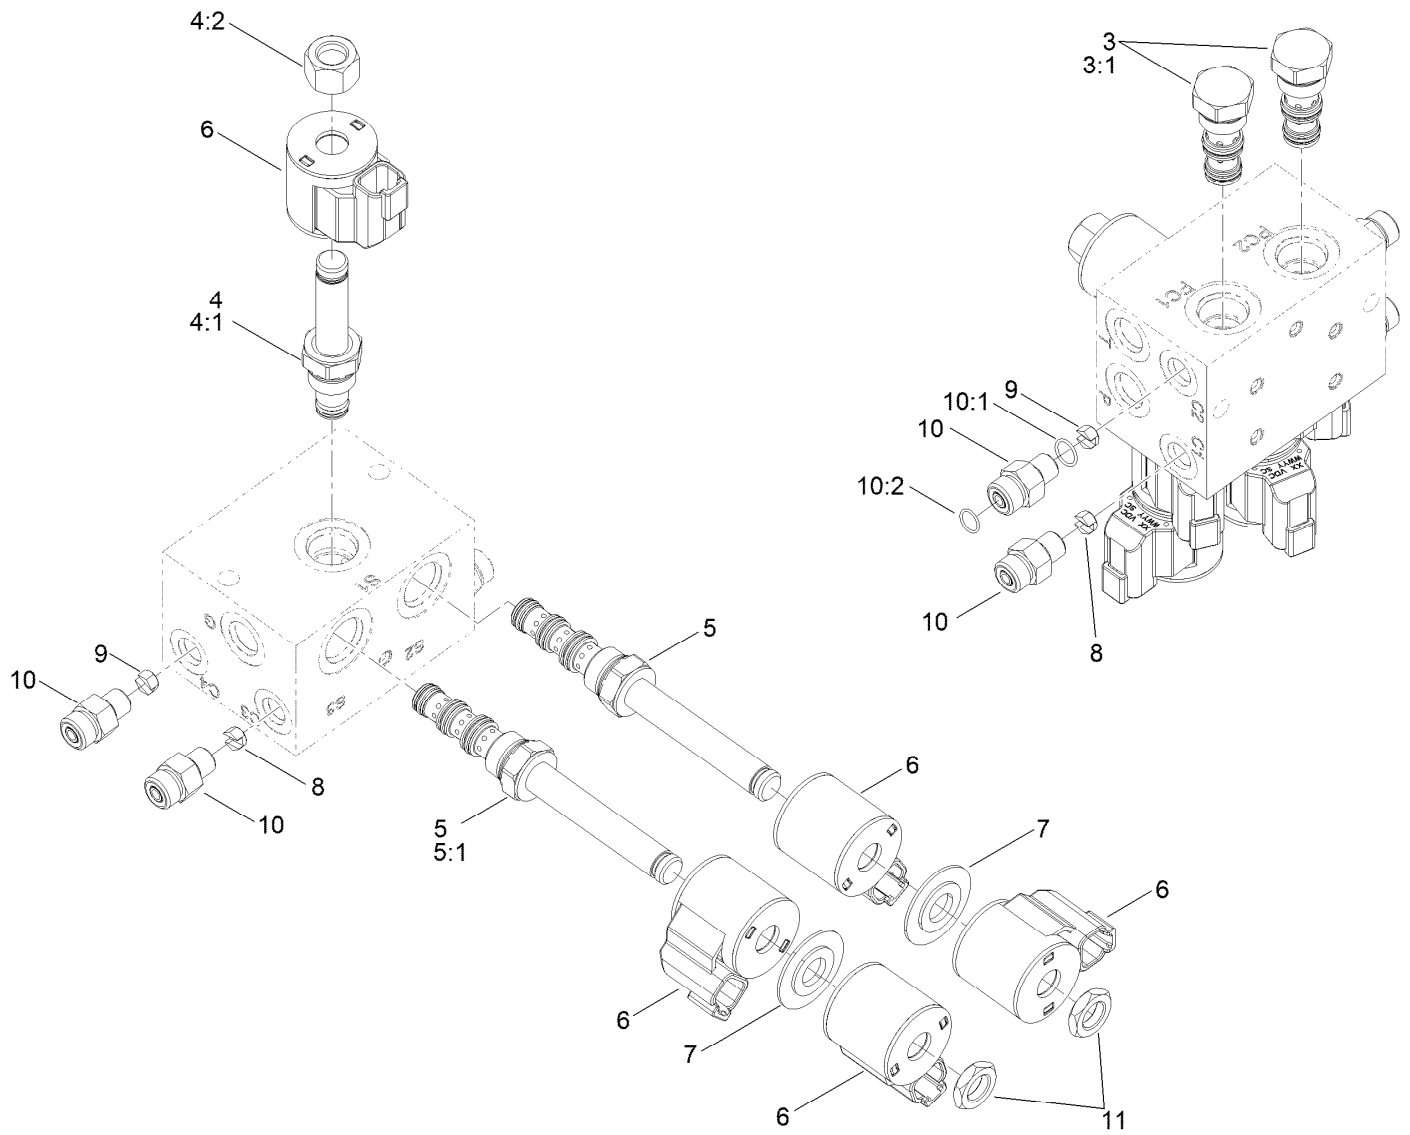


On-Off Boom Lift Valve Assembly No. 136-2400 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	136-2430	2	Valve-Check, Po
3:1	120-0886	1	Seal Kit
4	107-7517	1	Valve-Solenoid
4:1	105-9156	1	Seal Kit
4:2	107-7812	1	Nut-Solenoid
5	120-2587	2	Valve-Solenoid
5:1	112-6520	1	Seal Kit
6	119-8036	5	Coil

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7	120-2586	2	Spacer-Coil
8	110-8903	2	Orifice-Control, Flow (0.055)
9	125-8849	2	Orifice-Flow Control
10	340-92	4	Fitting-Straight
10:1	237-78	1	O-Ring
10:2	237-21	1	O-Ring
11	110-2634	2	Nut-Coil

 
Engine Mounting Assembly

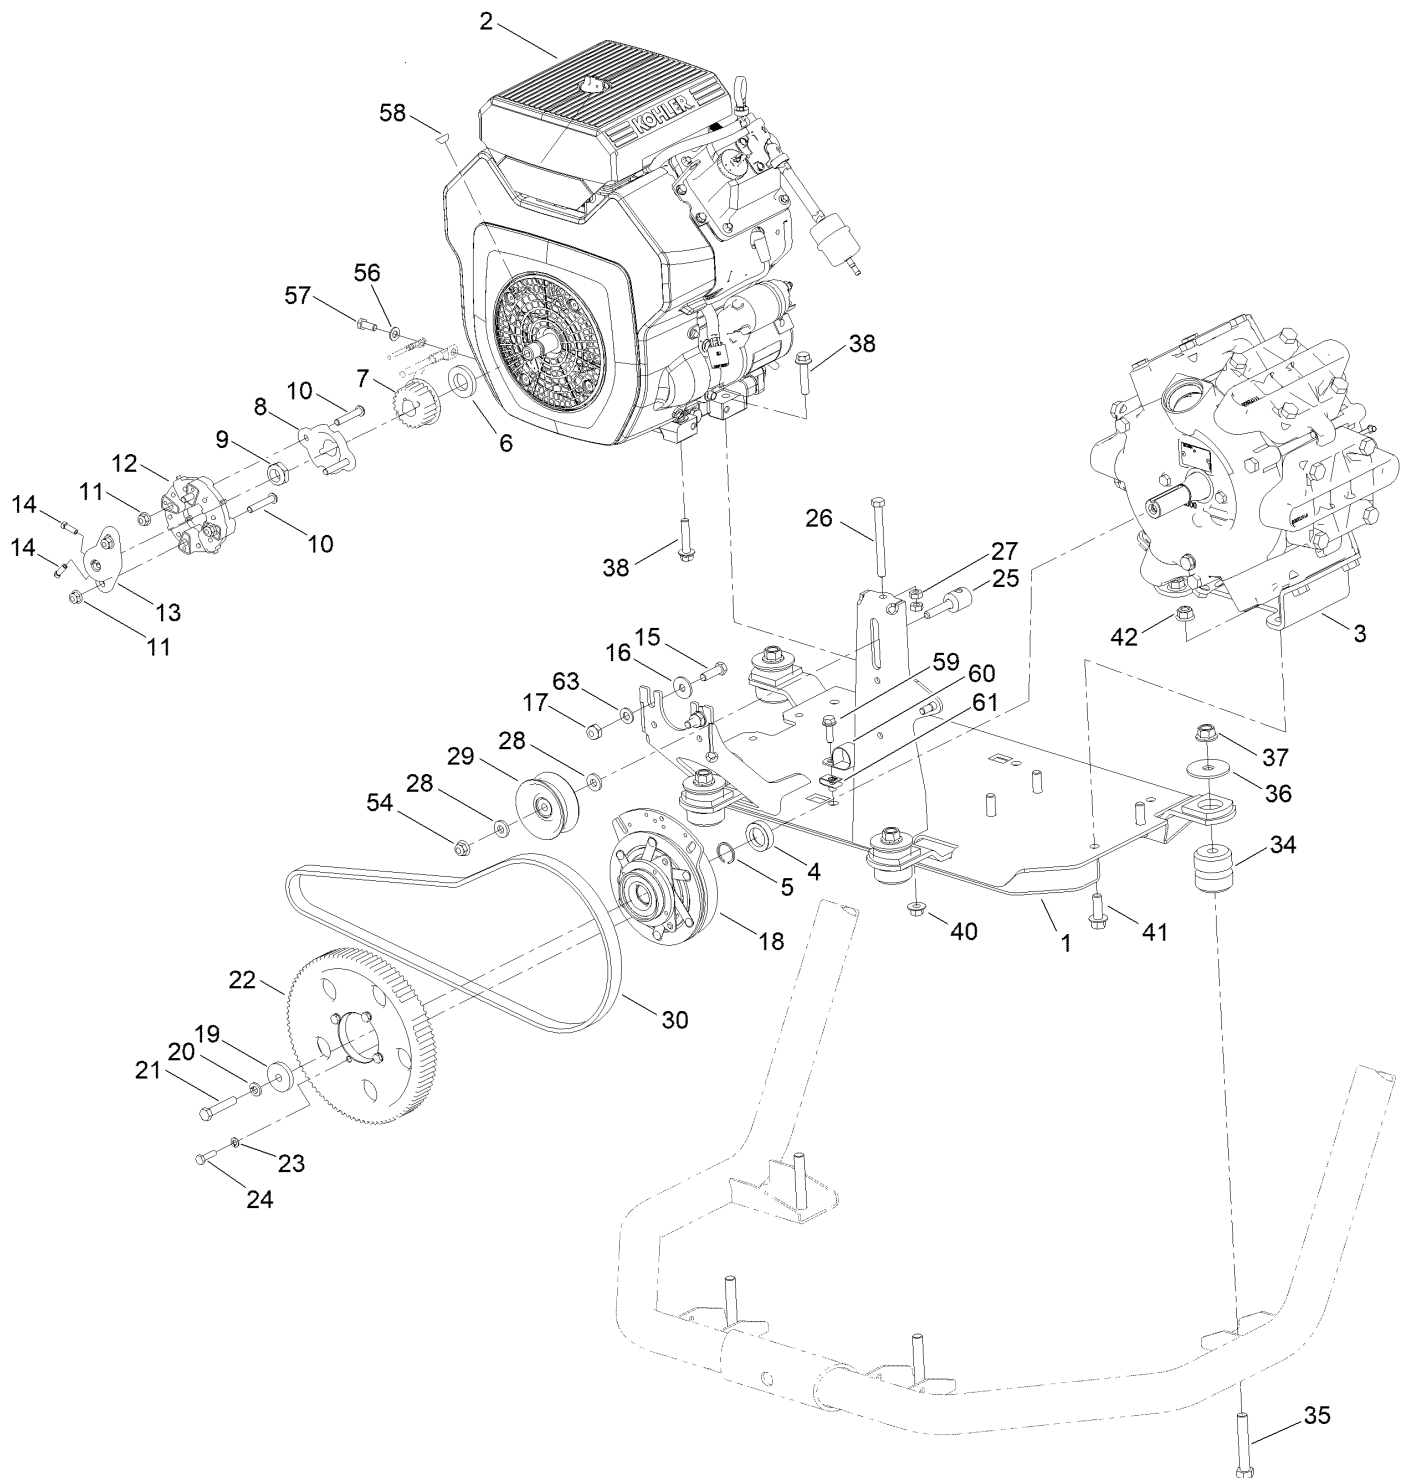

Engine Mounting Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-6511-03	1	Mount-Engine	24	321-6	4	Screw-HH
2		1	Engine-Rehlko, Ech749 ■●	25	125-0605	1	Shaft-Idler
3	145-3381	1	Pump ASM	26	107-4026	1	Screw-HH
4	108-3301	1	Retainer-Spacer	27	3217-7	2	Nut-Hex
5	108-3302	1	Ring-Snap	28	43-0940	2	Spacer
6	104-1105	1	Spacer-Support, Deck	29	1-633167	1	Sheave-Idler
7	125-8017	1	Sprocket-22 Tooth	30	125-0765	1	Belt-Synchronous
8	125-4092	1	Adaptor-Sprocket, Flanged	34	106-7865	4	Mount-Engine
9	3296-15	1	Nut-Lock, NI	35	325-12	4	Screw-HH
10	125-7977	4	Screw-HSBH	36	41985	4	Washer-Special
11	119-4041	4	Nut-HF	37	139-1689	4	Nut-HF
12	119-0652	1	Coupler-Rubber	38	3234-19	4	Screw-HHF
13	115-2169	1	Hub-Pump	40	32128-43	4	Nut-Flange
14	3241-6	2	Screw-SQH	41	3234-15	4	Screw-HHF
15	323-7	2	Screw-HH	42	114-8417	4	Nut-HF, NI
16	52-2861	2	Washer	54	119-4042	1	Nut-HF, NI
17	3296-44	2	Nut-Lock, NI	56	3256-23	1	Washer-Plain
18	120-7625	1	Clutch-Electric	57	33114-020	1	Screw-HH
19	125-0604	1	Spacer-Clutch	58	3257-5	1	Key-Woodruff
20	3253-5	1	Washer-Lock	59	3234-17	1	Screw-HHF
21	3211-46	1	Screw-HH	60	2412-126	1	R-Clamp
22	125-7982	1	Sprocket-90 Tooth	61	115-7721	1	Nut-Clip, U
23	3253-3	4	Washer-Lock	63	3256-24	2	Washer-Plain

 Pump Assembly No. 145-3381

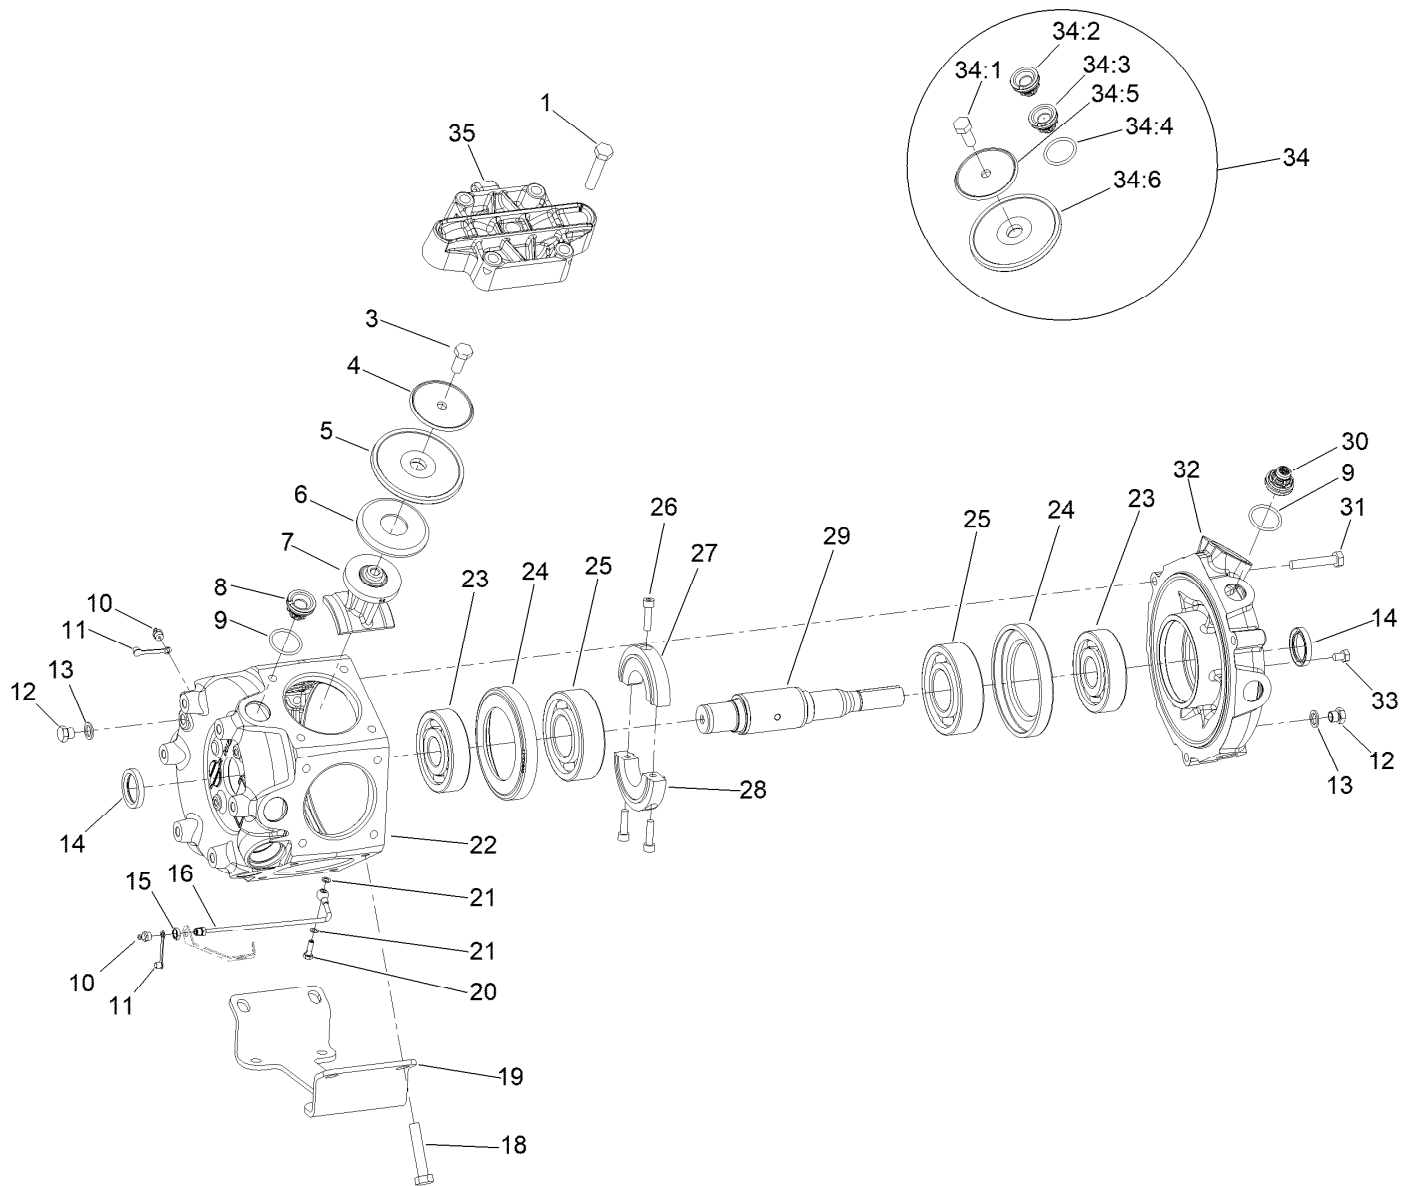


Pump Assembly No. 145-3381 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-0773	20	Bolt-Hex
3	120-0777	6	Bolt-Hex
4	120-0778	6	Disc-Diaphragm
5	120-0779	6	Diaphragm
6	120-0780	6	Disc-Backing, Diaphragm
7	125-8141	6	Rod-Connectiing
8	99-0861	10	Valve-Pump
9	100-6651	12	O-Ring
10	133-2879	2	Nipple-Grease
11	133-2880	2	Cap-Grease Nipple, Yellow
12	120-0785	2	Plug
13	120-0786	2	Seal
14	120-0783	2	Seal-Oil
15	133-2878	1	Nut
16	133-2877	1	Tube-Banjo, Long
18	120-0774	4	Bolt-Hex
19	120-0787	1	Foot-Pump
20	133-2830	1	Bolt-Banjo
21	136-2251	2	Gasket
22	133-2821	1	Housing-Pump, Main

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
23	120-0788	2	Bearing-Ball
24	133-2820	2	Spacer-Metal
25	120-0791	2	Bearing-Ball
26	125-8146	3	Bolt-Allen
27	133-2828	1	Counter Weight
28	133-2829	1	Counter Weight
29	133-2826	1	Shaft - Crank
30	120-0793	2	Valve W/Hole
31	120-0794	3	Bolt-Hex
32	133-2822	1	Housing-Pump, Front
33	120-0784	4	Bolt-Hex
34	120-0796	1	Pump Kit
34:1	120-0777	6	Bolt-Hex
34:2	99-0861	10	Valve-Pump
34:3	120-0793	2	Valve W/Hole
34:4	100-6651	12	O-Ring
34:5	120-0778	6	Disc-Diaphragm
34:6	120-0779	6	Diaphragm
35	145-3399	1	Pump Head Kit

 
Exhaust Assembly

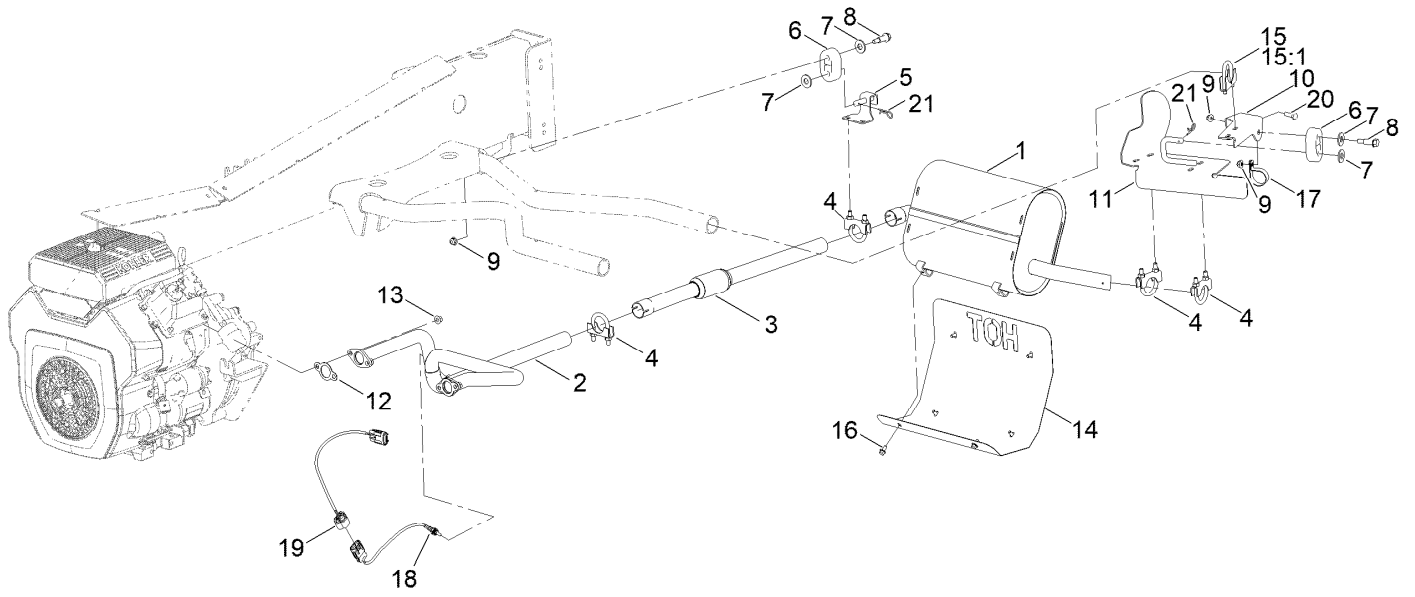

Exhaust Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-9736	1	Muffler-Venturi	13	33004-00	4	Nut-HF
2	163-7081	1	Manifold-Exhaust	14	127-9787	1	Shield-Heat, Muffler
3	163-7082	1	Tail-Exhaust	15	2112-9	1	Clamp
4	2112-11	4	Clamp-Muffler	15:1	32128-20	2	Nut-HF
5	163-7090	1	Tailpipe-Hanger, ASM	16	3234-13	6	Screw-HHF
6	161-4120	2	Grommet-Muffler, Short	17	2412-74	1	R-Clamp
7	29-8910	4	Washer	18	143-3709	1	Sensor, O2, Kohler
8	140-3759	2	Bolt-Shoulder,HHF	19	163-7058	1	Harness-Extension, O2 Sensor
9	119-4041	3	Nut-HF	20	322-5	1	Screw-HH
10	163-7089	1	Mount-Muffler	21	3290-467	1	Pin-Hair
11	163-7094	1	Muffler-Shield, ASM				
12	110-6697	2	Gasket-Exhaust				

 
Fuel Tank, Filter and Line Assembly

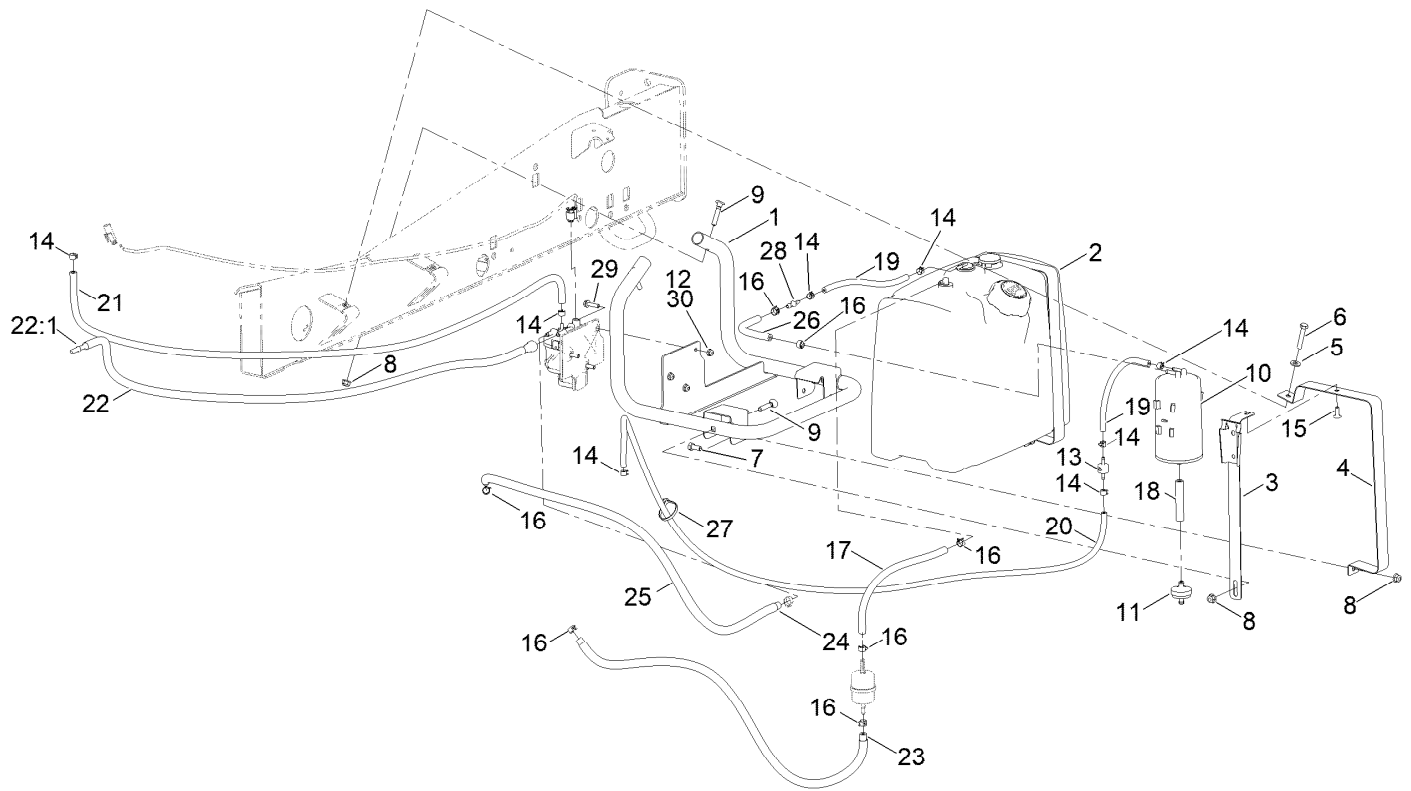

Fuel Tank, Filter and Line Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-2974-03	1	Tube ASM-Fuel Tank [black]	17	114-3766	1	Hose-Fuel
2	115-9048	1	Fuel Tank ASM	18	110-0047	1	Hose-Fuel
3	125-8129-03	1	Strap-Cannister, Carbon	19	115-7871	2	Hose-Fuel
4	125-0853	2	Strap-Fuel Tank	20	163-2903	1	Hose-Fuel
5	33094-00	2	Washer-Plain	21	117-9568	1	Hose-Fuel
6	322-41	2	Bolt-Hex, TAP	22	163-2982	1	Hose-Fuel ASM
7	322-3	2	Screw-HH	22:1	127-0578	1	Fitting-STR
8	119-4041	5	Nut-HF	23	109-0284	1	Hose-Fuel
9	17-9420	3	Screw-Handle	24	109-0273	1	Hose-Fuel
10	127-8685	1	Canister-Carbon	25	116-9189	2	Sleeve-Thermal
11	115-7854	1	Filter-Fuel, Inline	26	109-0306	1	Hose-Fuel
12	104-7201	1	Nut-HF, NI	27	3290-378	2	Tie-Cable
13	133-8499	1	Valve-Check, Vacuum	28	121-2573	1	Fitting-Straight
14	2412-80	8	Clamp-Hose	29	120-4654	3	Screw-HHF
15	1-807512	1	Bolt-CARR	30	104-7201	3	Nut-HF, NI
16	2412-98	6	Clamp-Hose				

 Fuel Tank Assembly No. 115-9048

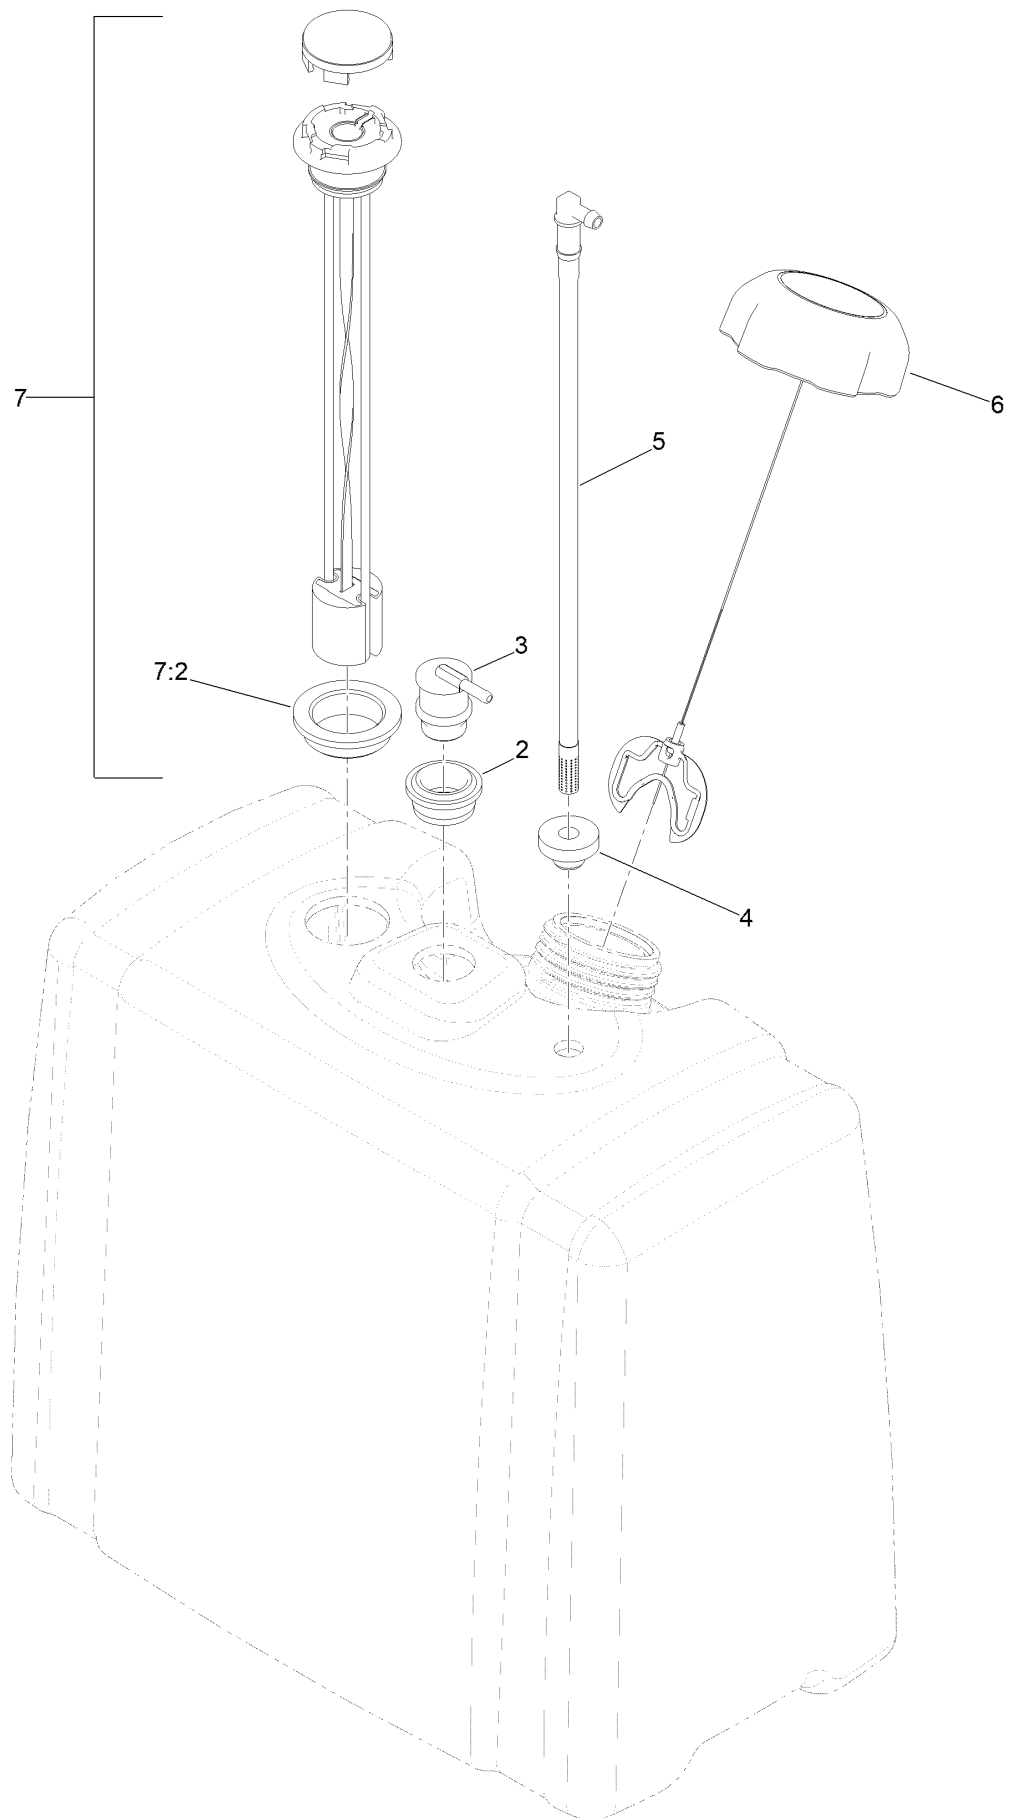


Fuel Tank Assembly No. 115-9048 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	114-0284	1	Grommet
3	114-0285	1	Valve-Rollover
4	46-6560	1	Bushing
5	115-9044	1	Pipe-Stand


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	137-4127	1	Cap-Fuel
7	119-0509	1	Gauge ASM
7:2	119-0508	1	Seal

 Driveshaft Connection Assembly

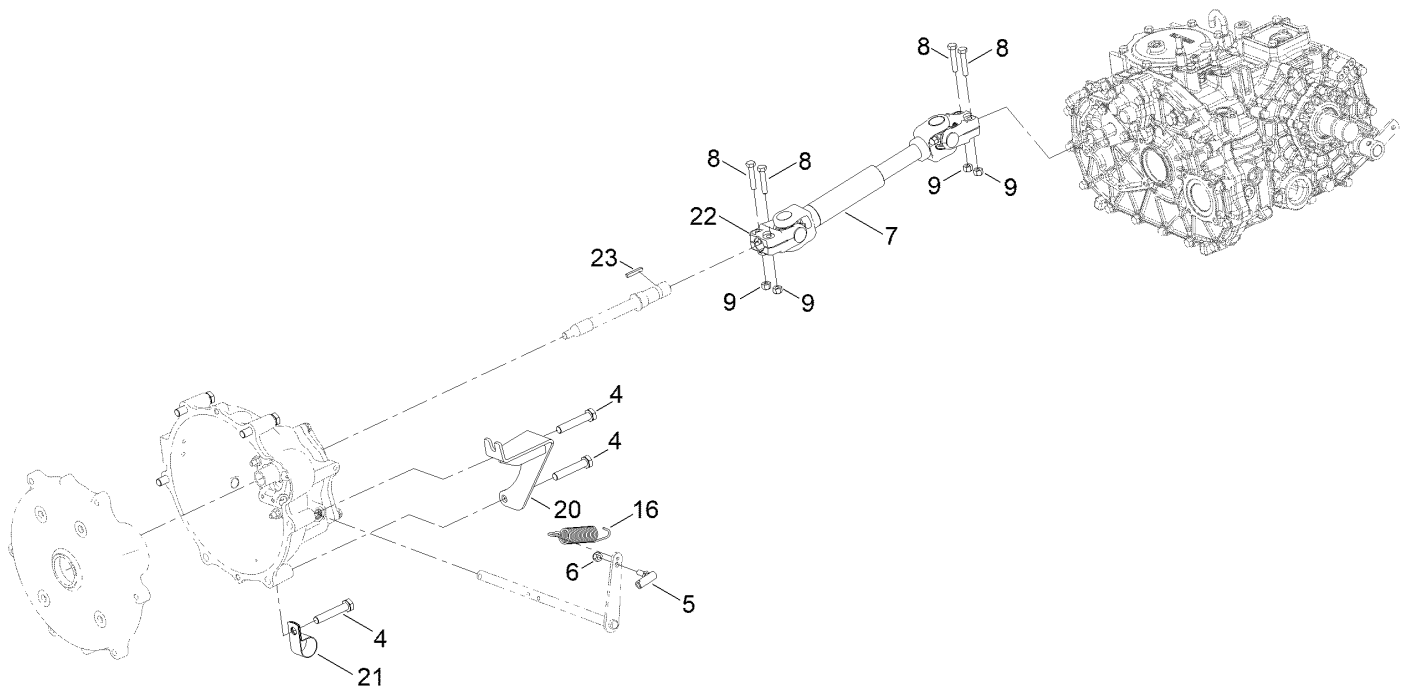


Driveshaft Connection Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	107-7983	6	Screw-HH	16	68-9950	1	Spring-Traction
5	2411-33	1	Balljoint-RH (W/Grommet)	20	163-2958-0P	1	Clutch-Cable Mount, ASM [primed]
6	3296-4	1	Nut-Lock	21	100-1424	1	Clamp-R
7	119-6040	1	Driveshaft ASM	22	3245-32	1	Screw-HSH
8	322-8	4	Screw-HH	23	92-0049	1	Key-Square
9	3296-29	4	Nut-Lock, NI				

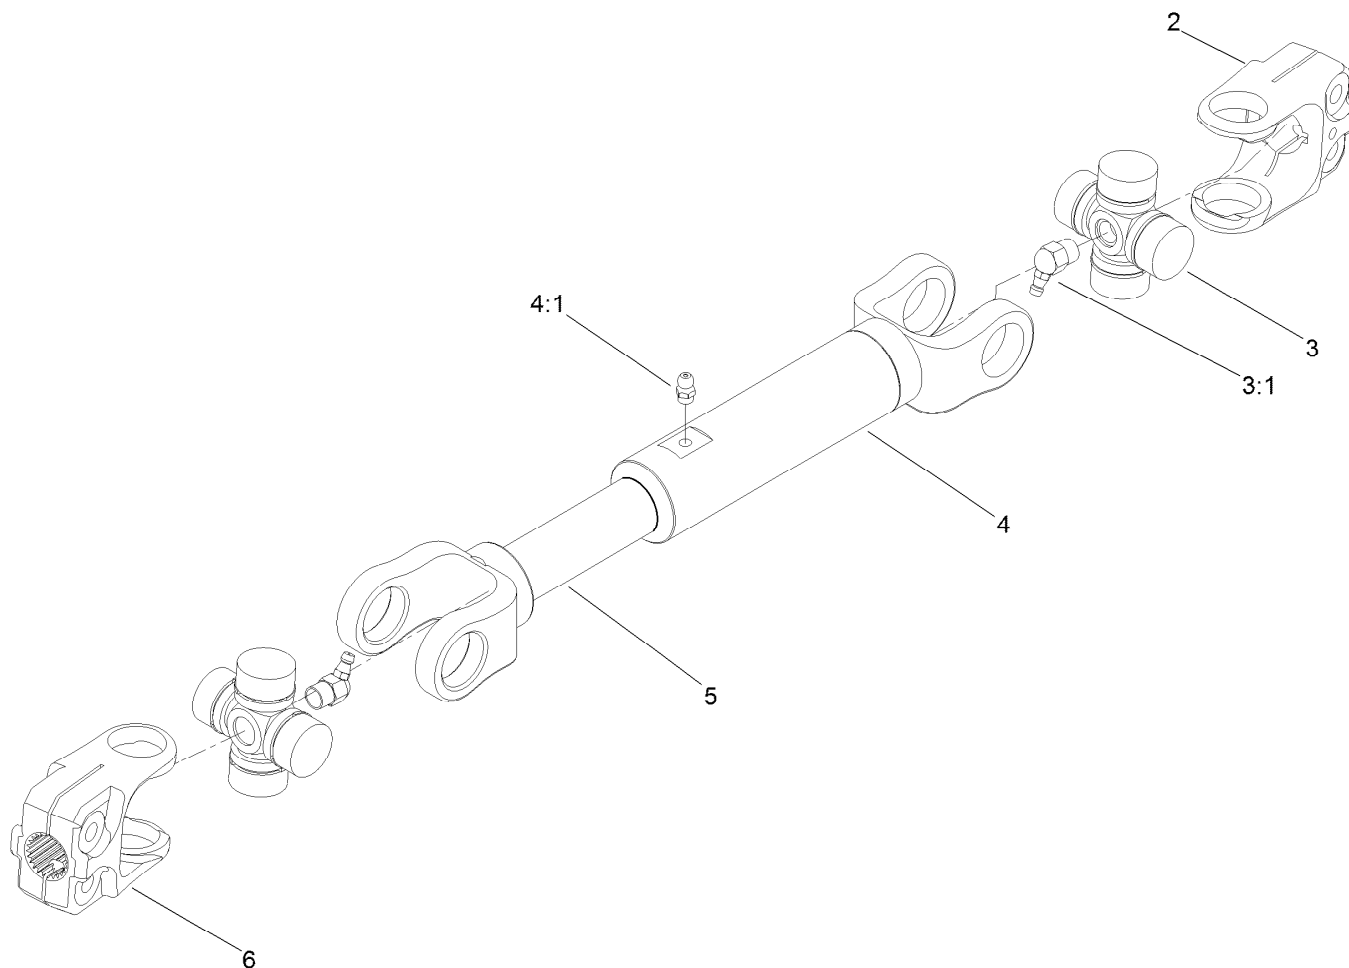 

Driveshaft Assembly No. 119-6040

Ref.	Part Number	Qty.	Description
2	100-8633	1	Yoke-Keyed
3	54-9180	2	U-Joint Kit
3:1	62-3820	1	Fitting-Grease
4	110-4706	1	Tube-Yoke, Slip
4:1	302-58	1	Fitting-Straight
5	110-4705	1	Shaft-Yoke, Slip
6	100-8632	1	Yoke-Splined

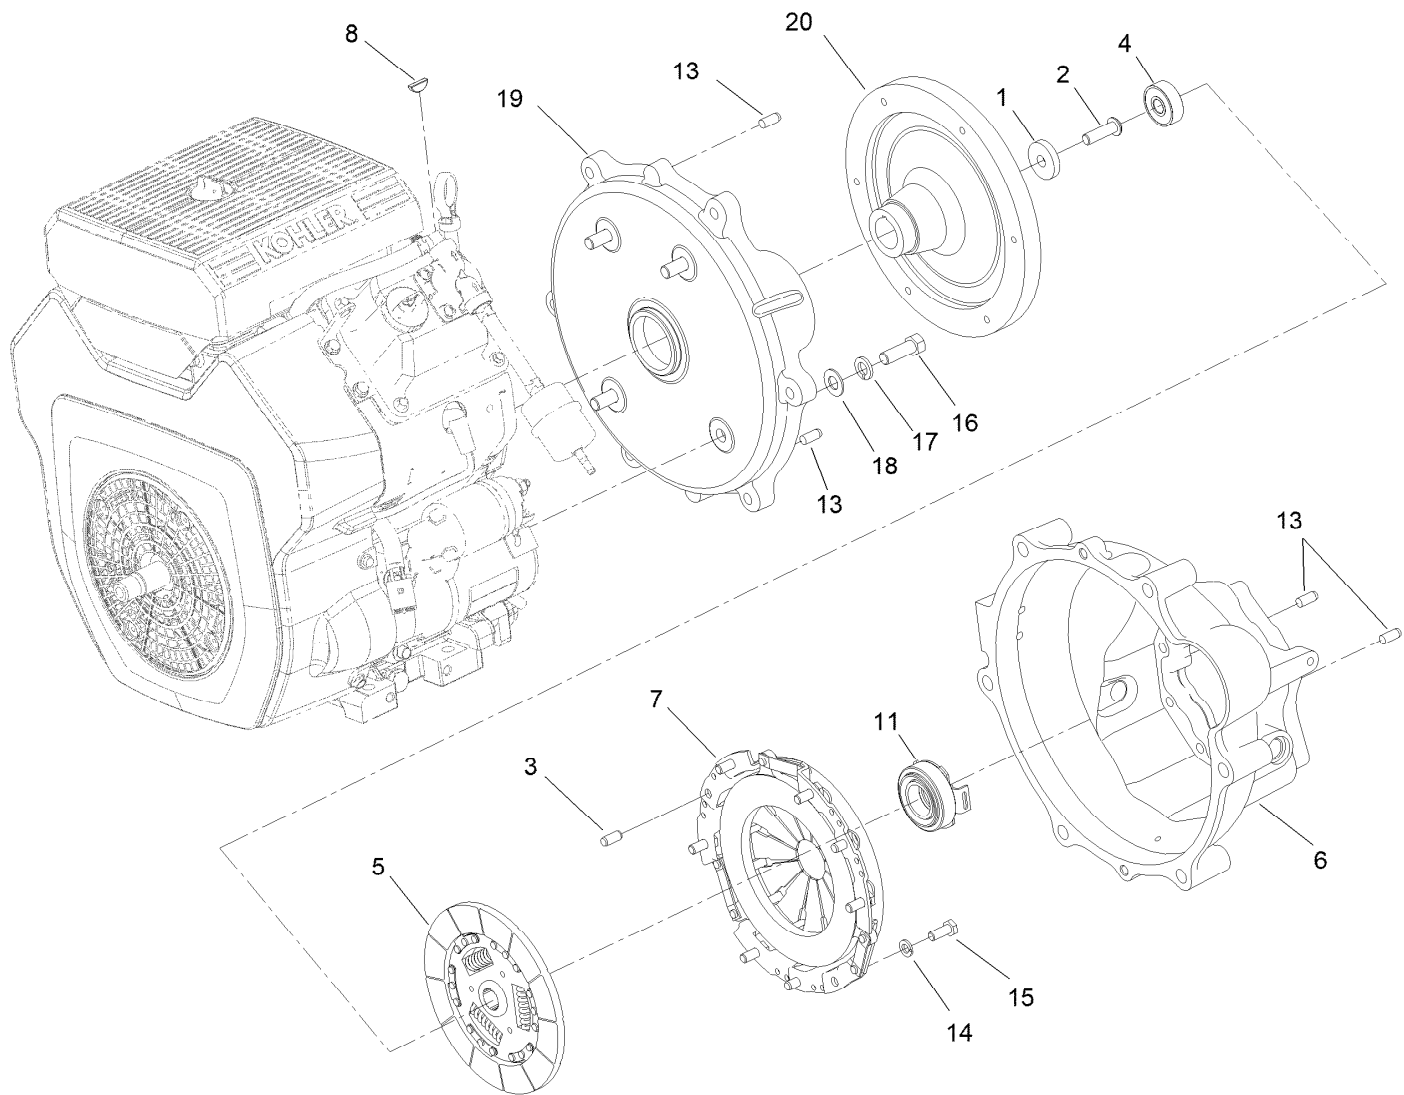 


Clutch and Bell Housing Assembly

Ref.	Part Number	Qty.	Description
1	87-6080	1	Washer
2	3274-1	1	Screw-HSH
3	42-7160	3	Pin
4	87-6460	1	Bearing-Ball (W/Seal)
5	98-2959	1	Disc-Clutch
6		1	Bell Housing ASM ●
7	98-2958	1	Cover-Clutch
8	3257-5	1	Key-Woodruff
11	110-2538	1	Bearing-Release, Clutch

Ref.	Part Number	Qty.	Description
13	87-1910	2	Pin-Dowel
14	3253-4	6	Washer-Lock
15	33114-020	6	Screw-HH
16	324-5	4	Screw-HH
17	3253-6	4	Washer-Lock
18	3256-25	4	Washer-Flat
19	107-7991	1	Adapter-Clutch
20	87-6480	1	Flywheel

 
● Not serviced separately

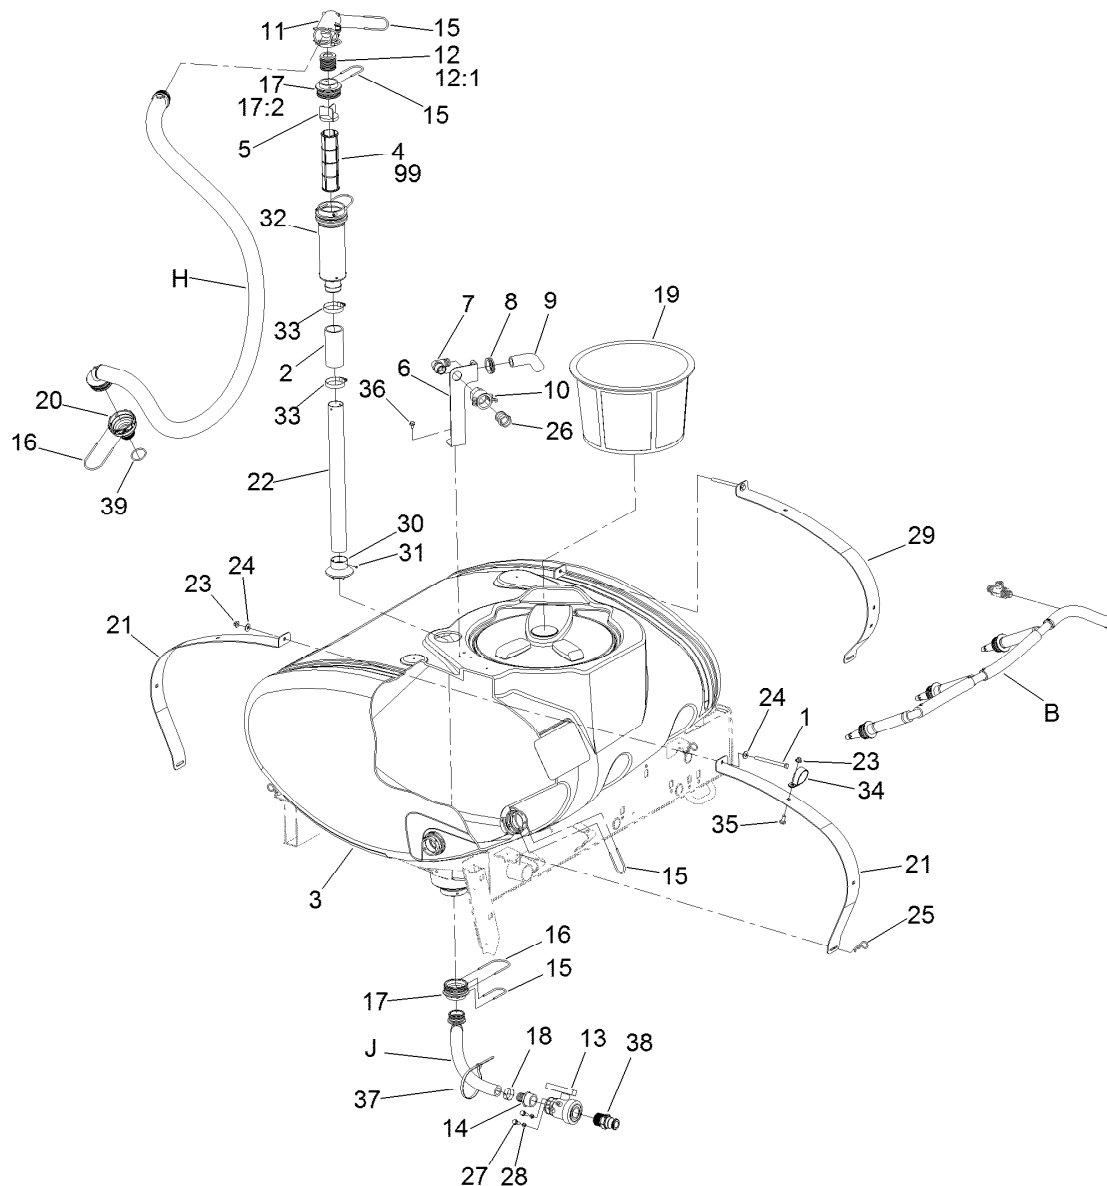

Spray Tank Assembly

Ref.	Part Number	Qty.	Description
1	323-59	2	Bolt-Cap
2	100-8649	1	Hose-Suction
3	121-6491	1	Tank ASM
4	100-8642	1	Screen-Suction
5	100-8641	1	Vane-Screen
6	110-5082-03	1	Bracket-Anti Siphon
7	41140	1	Elbow
8	110-5090	1	Grommet
9	110-5088	1	Hose-Fill
10	100-6779	1	Coupling-Female
11	100-6704	1	Tee
12	106-4947	1	Connector
12:1	100-8637	2	O-Ring
13	108-0069	1	Valve-Ball
14	110-5224	1	Fitting-Barbed, Straight
15	100-8635	8	Fork
16	117-7996	2	Fork
17	117-7928	2	Adapter ASM
17:2	100-6989	1	O-Ring
18	2412-34	1	Clamp-Hose
19	119-9419	1	Basket-Filter


Ref.	Part Number	Qty.	Description
20	133-2883	1	Fitting
21	121-6477-03	2	Band-Tank
22	125-7997	1	Tube-Suction
23	119-4042	3	Nut-HF, NI
24	3256-4	4	Washer-Flat
25	3290-343	4	Pin-Hair
26	41316	1	Adapter-Quick
27	3234-29	2	Screw-HHF
28	3296-47	2	Nut-Lock,NI
29	125-0987-03	2	Band-Tank, Rear
30	100-6714	1	Foot-Tube, Suction
31	108-3270	1	Screw-TAP
32	130-7096	1	Filter ASM
33	2412-130	2	Clamp-Hose
34	114-9566	1	Clamp-R
35	3231-2	1	Bolt-CARR
36	3234-30	1	Screw-HHF
37	1-809066	1	Cable Tie-Plastic
38	132-7787	1	Coupler-Quick
39	133-2884	1	O-Ring
99	133-0385	2	Screen-Teejet, 50 Mesh

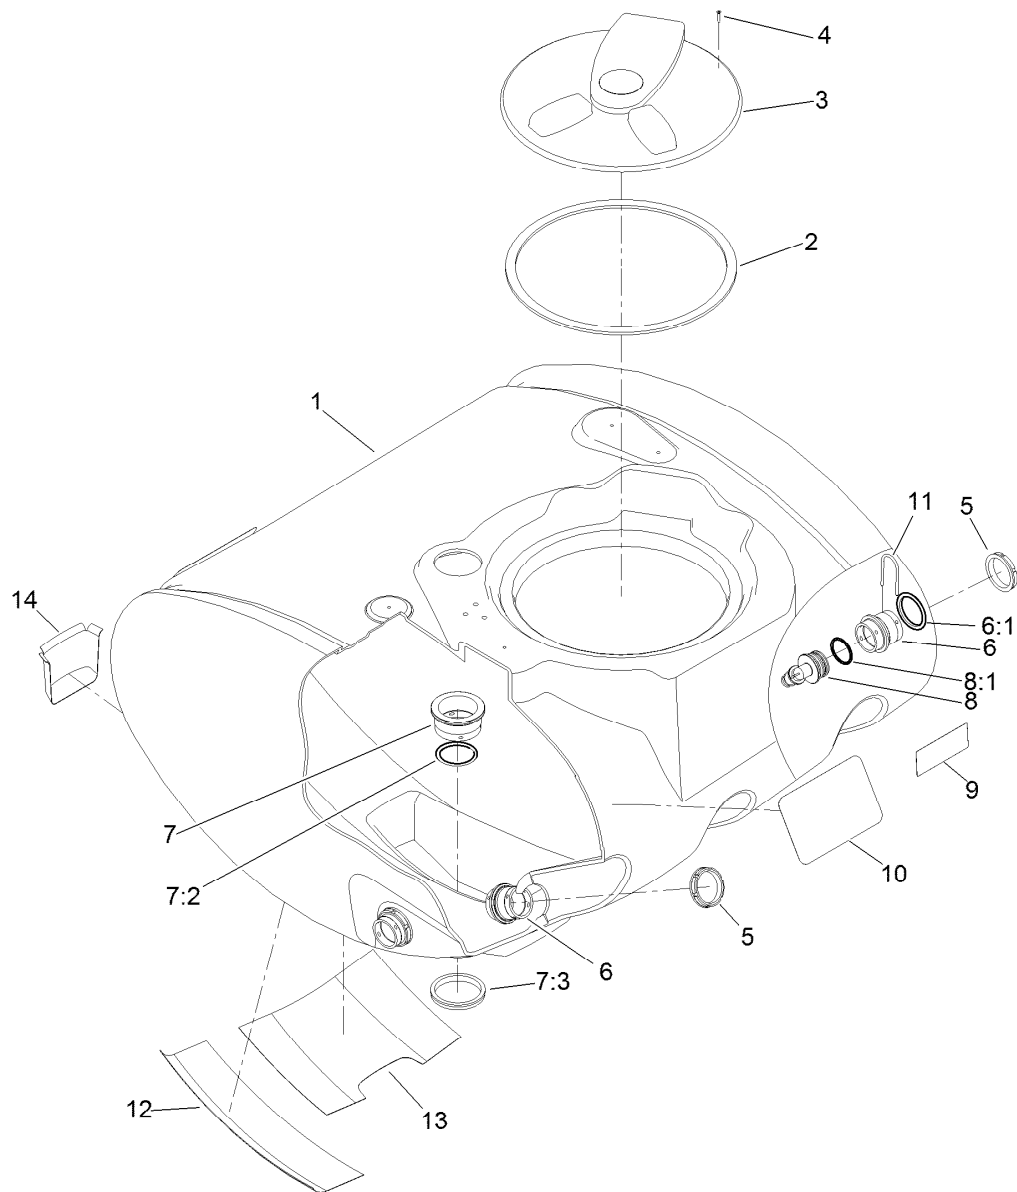 

Tank Assembly No. 121-6491


Ref.	Part Number	Qty.	Description
1	121-6490	1	Tank-175 Gallon
2	119-9378	1	Gasket-Lid, Tank
3	138-6283	1	Lid ASM - Sprayer Tank
4	107-8635	8	Screw-PFH
5	100-7051	4	Nut-Bulkhead
6	108-3358	5	Fitting-Bulkhead
6:1	107-2864	1	Gasket-Bulkhead
7	117-7851	1	Bulkhead ASM
7:2	100-8646	1	Gasket-Bulkhead

Ref.	Part Number	Qty.	Description
7:3	100-8647	1	Nut-Bulkhead
8	106-4933	2	Hosebarb ASM
8:1	100-8637	1	O-Ring
9	120-0622	1	Decal-Warning
10	121-6486	2	Decal-Tank
11	100-8635	2	Fork
12	125-7967	1	Heat Tape-Shield, Front
13	125-7968	1	Heat Tape-Shield, Side
14	125-7969	1	Heat Tape-Shield, Sump

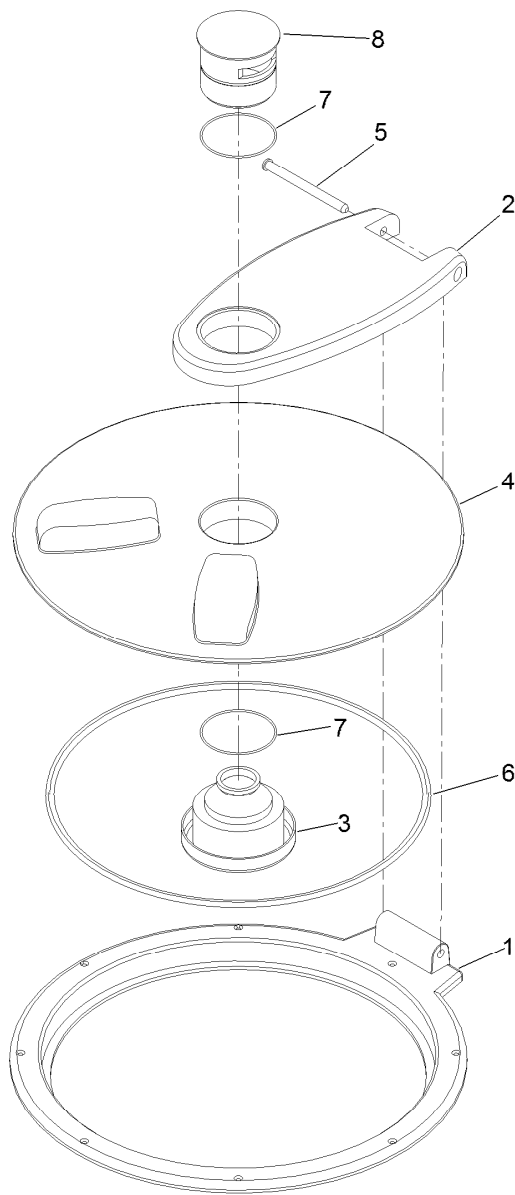 


Spray Tank Lid Assembly No. 138-6283

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-9381	1	Ring-Lid
2	119-9382	1	Arm-Lid
3	119-9383	1	Vent-Lid
4	119-9384	1	Cover-Lid
5	119-9385	1	Pin-Pivot
6	138-6281	1	Seal - Tank Lid
7	119-9386	2	O-Ring
8	119-9387	1	Cap-Lid

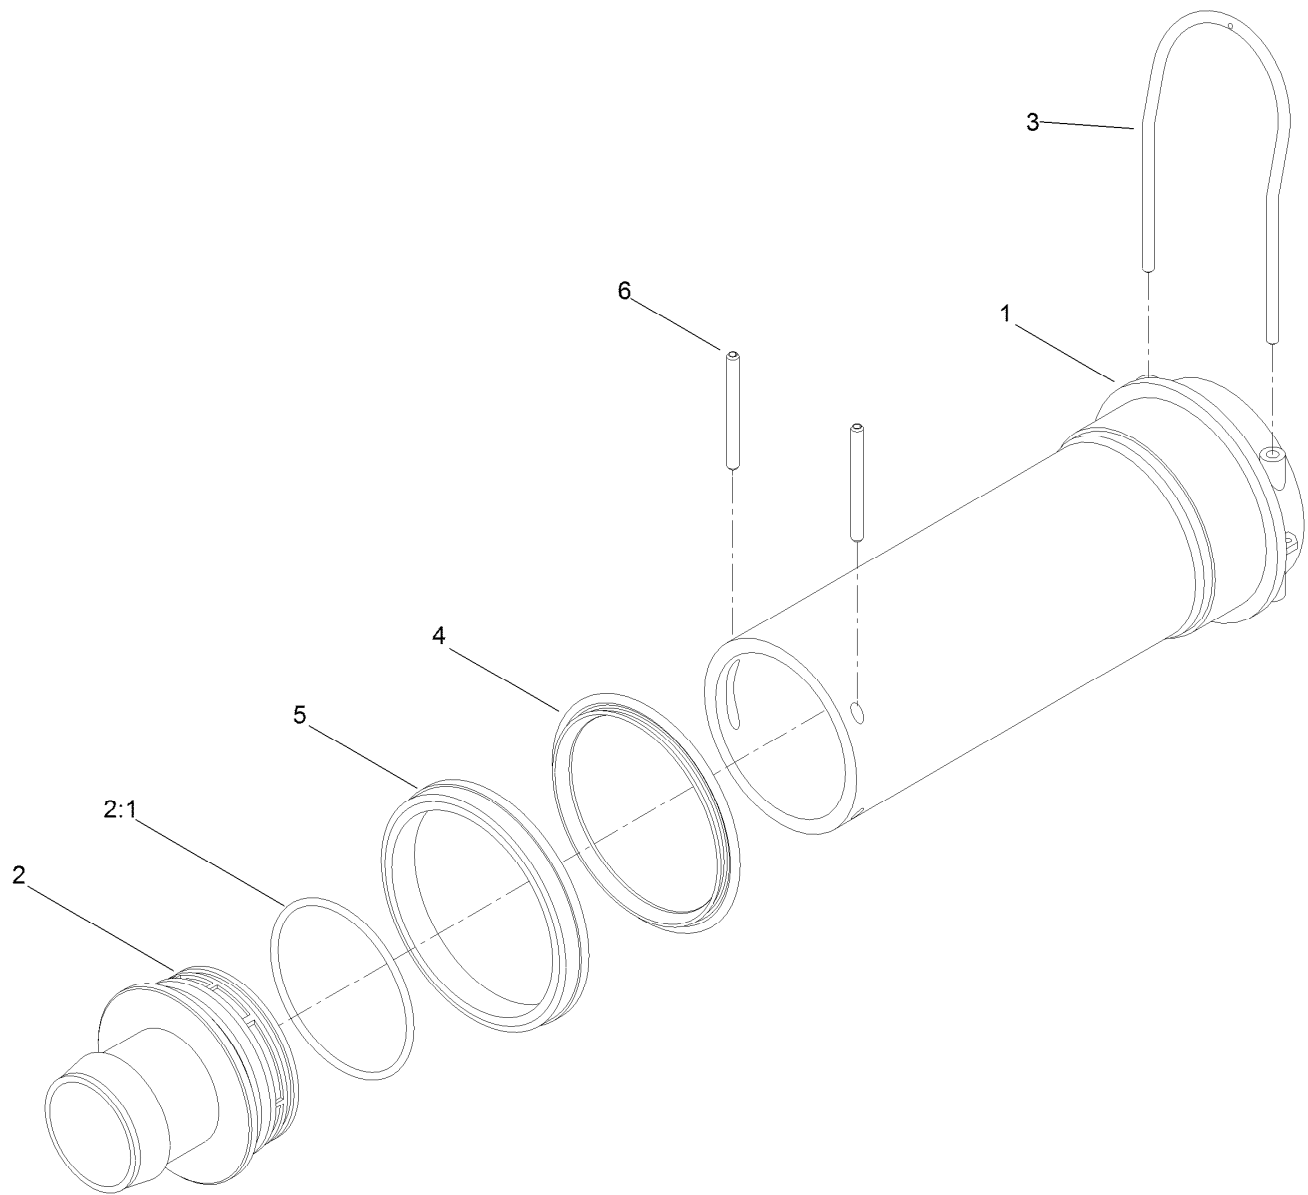 

Filter Assembly No. 130-7096


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	100-8643	1	Housing-Filter
2	106-4942	1	Hosebarb-Straight
2:1	100-6989	1	O-Ring
3	100-8636	1	Fork-Special
4	100-8646	1	Gasket-Bulkhead
5	100-8647	1	Nut-Bulkhead
6	100-8644	2	Pin-Expansion

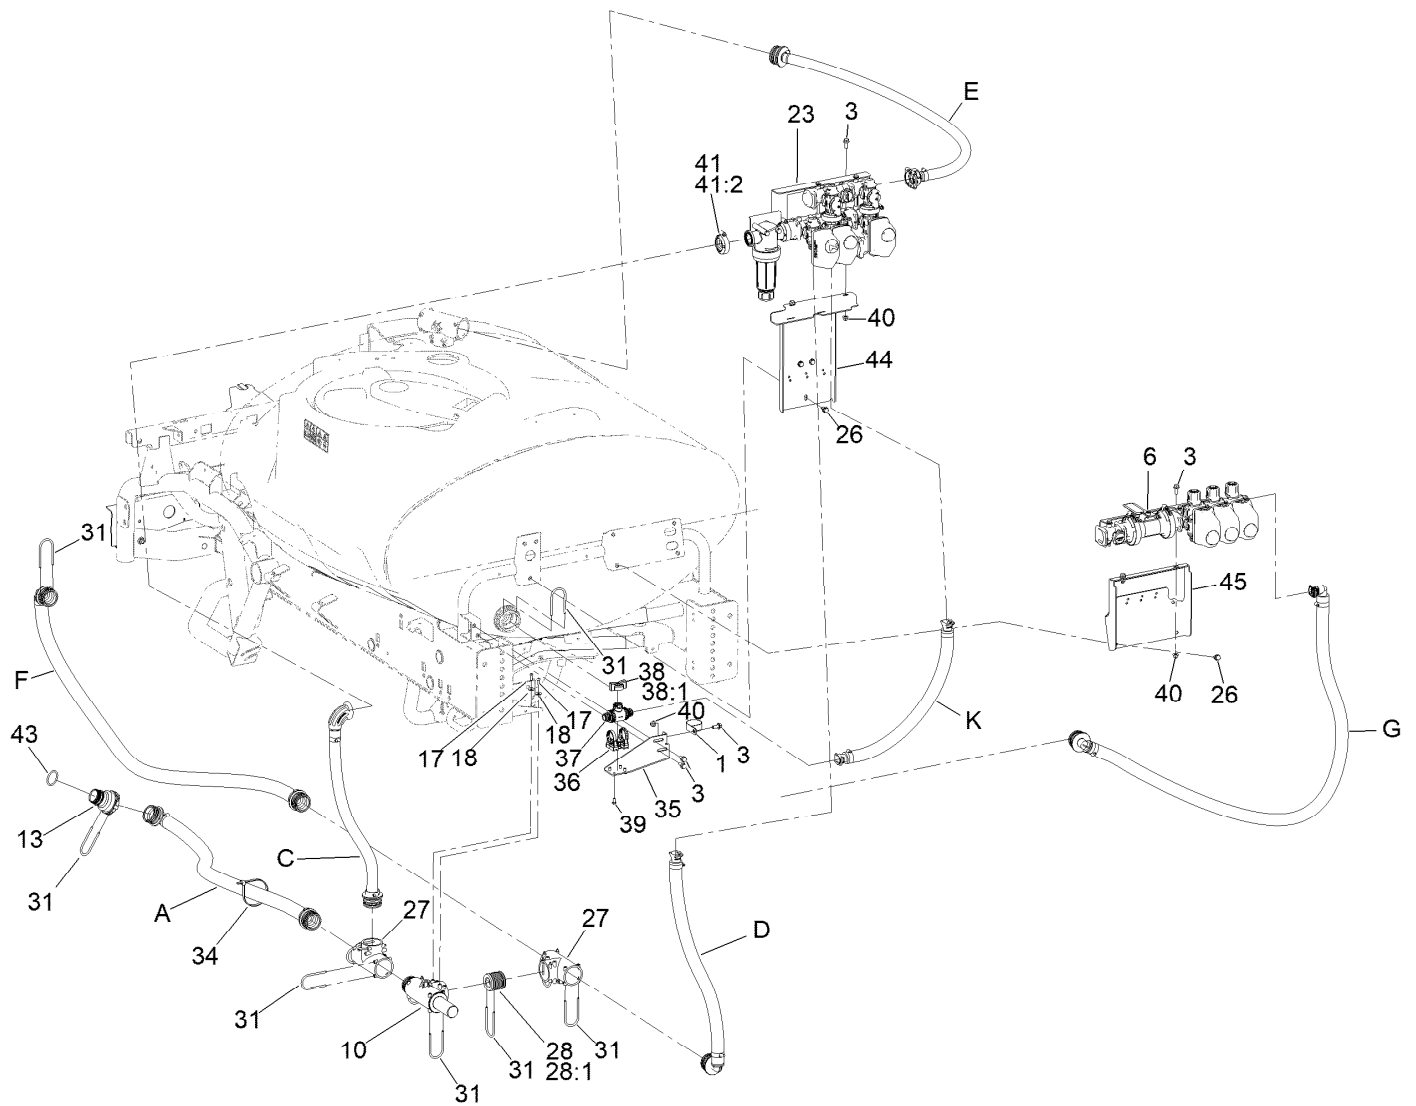 

Spray Tank Valve Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	2412-147	1	Clamp-R	35	132-4318-03	1	Mount-Bracket, Agitation
3	139-2598	5	Screw-HHF	36	132-4302	1	Mount-Valve
6		1	Manifold ASM, Section ●	37	131-0249	1	On/Off 2-Way Valve Kit
10	117-7874	1	Relief Valve ASM	38	131-0264	1	Agitation Throttling Handle Kit
13	133-2881	1	Fitting	38:1	131-0263	1	Screw-Handle
17	32144-32	2	Screw-PPH	39	33113-012	4	Screw-HH
18	3256-61	2	Washer-Flat	40	119-4041	5	Nut-HF
23		1	Manifold ASM, Agitation ●	41	127-9829	1	Clamp/Gasket Kit
26	32104-32	9	Screw-HWH	41:2	127-1145	1	Gasket-Flange
27	100-6704	2	Tee	43	133-2882	1	O-Ring
28	106-4947	1	Connector	44	147-4658-03	1	Valve-Mount, ASM [black]
28:1	100-8637	2	O-Ring	45	147-4662-03	1	Agitation-Mount, ASM [black]
31	100-8635	12	Fork				
34	3334-945	3	Tie-Cable				

 
● Not serviced separately

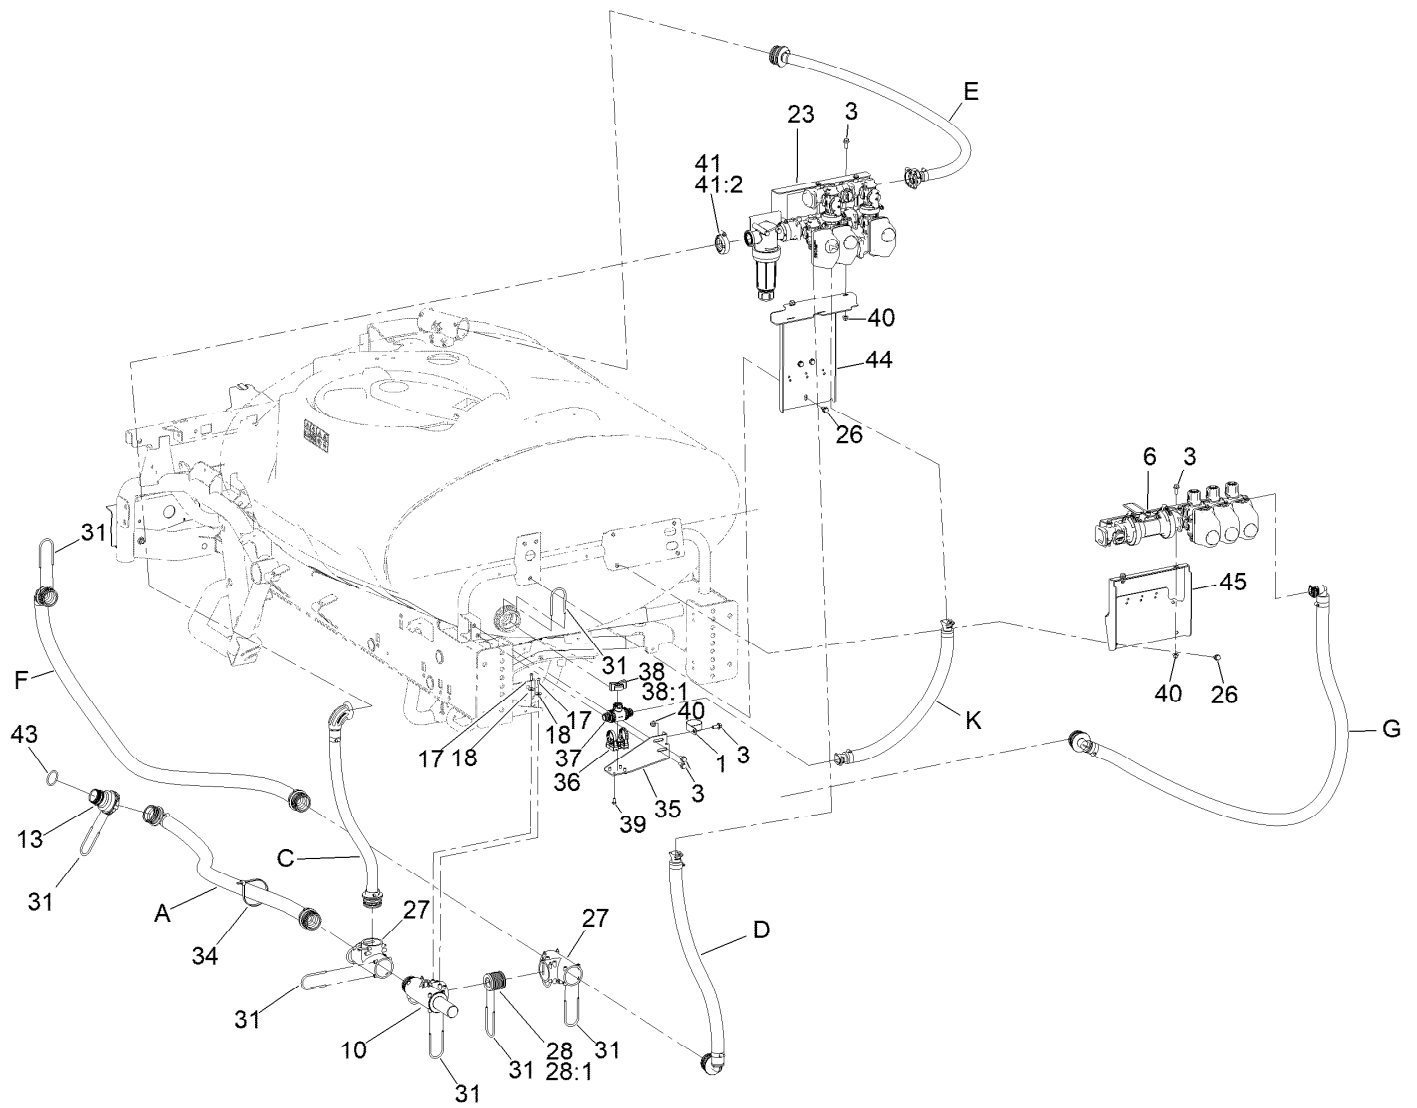

Spray Tank Valve Assembly (continued)

● Not serviced separately

 
Section Manifold Assembly

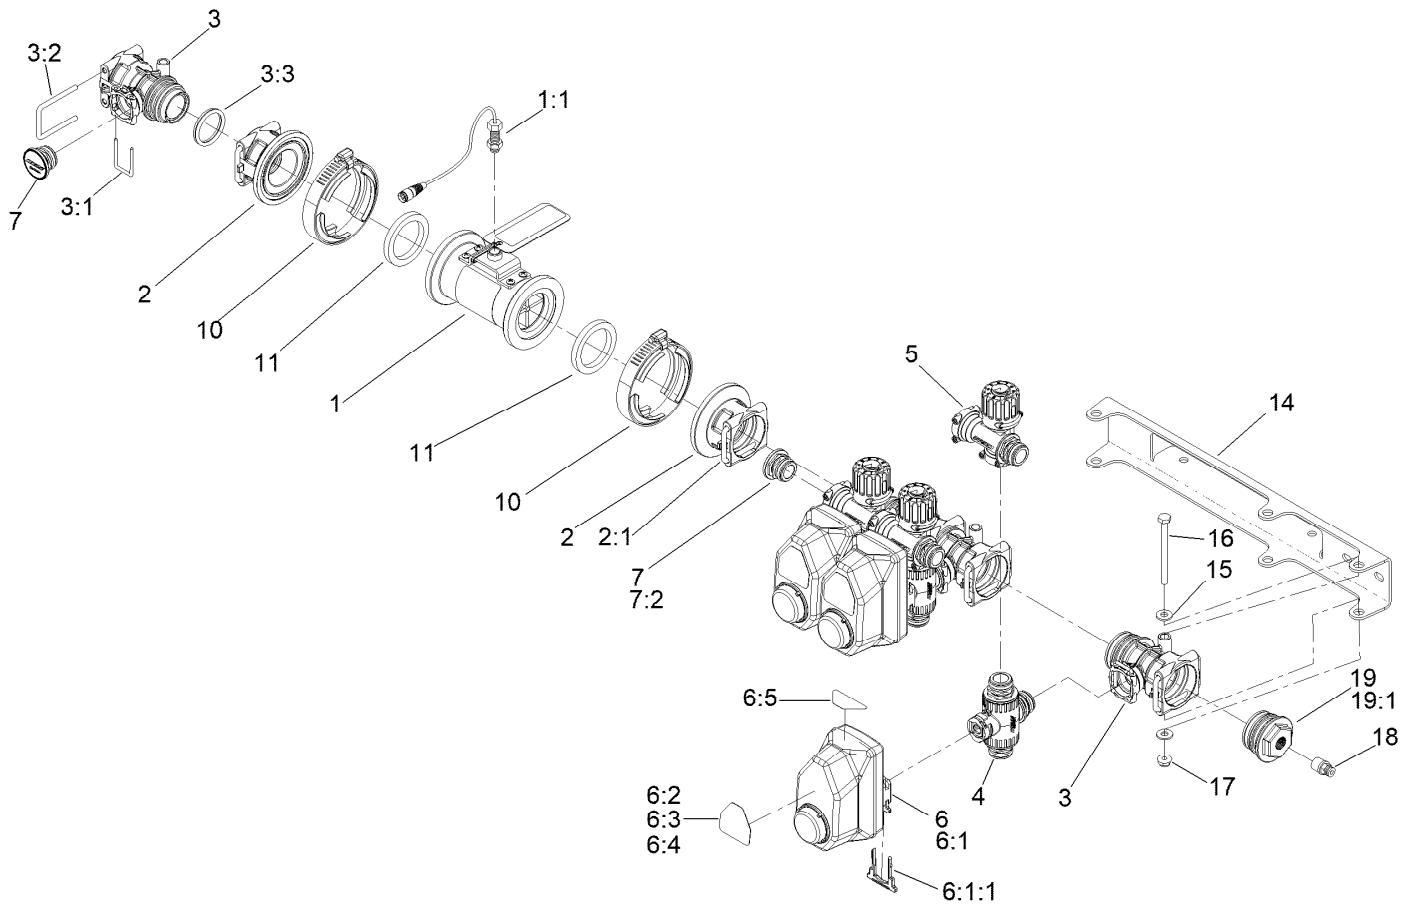

Section Manifold Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-4730	1	Flow Meter ASM	6:3	127-6981	1	Decal-Valve, On/Off
1:1	147-4733	1	Sensor - Flow Meter, Fm270Plf	6:4	127-6982	1	Decal-Valve, Master Boom
2	147-3197	2	Kit Qf, Flange-M200 Female	6:5	127-6976	1	Decal-Valve, Bypass Adjust
2:1	147-3186	1	Pin-Fork, Qf Large	7	127-9810	2	Male Cap Fitting Kit
3	147-3187	4	Kit-Qf, Manifold Tee	7:2	127-1187	1	O-Ring, Endcap
3:1	147-3185	1	Pin-Fork, Qf Small	10	104-9089	2	Clamp-Screw, Worm
3:2	147-3186	1	Pin-Fork, Qf Large	11	104-9090	2	Gasket
3:3	147-3188	1	Seal-Manifold, Qf Series	14	147-4659	1	Brkt-Section
4	147-3183	3	Kit-Tx2 - 3Way Manifold	15	3256-22	6	Washer-Flat
5	127-9805	3	Bypass Valve ASM	16	321-23	3	Screw-HH
6	140-7377	3	Kit-Actuator Pi, On/Off	17	104-7201	3	Nut-HF, NI
6:1		1	Actuator - On/Off ●	18	131-3709	1	Coupler
6:1:1	130-7301	1	Hairpin-Actuator	19	161-4187	1	Kit Qf, Plug-Male W/Port
6:2	127-6979	1	Decal-Valve, Agitation	19:1	147-3188	1	Seal-Manifold, Qf Series

 ● Not serviced separately

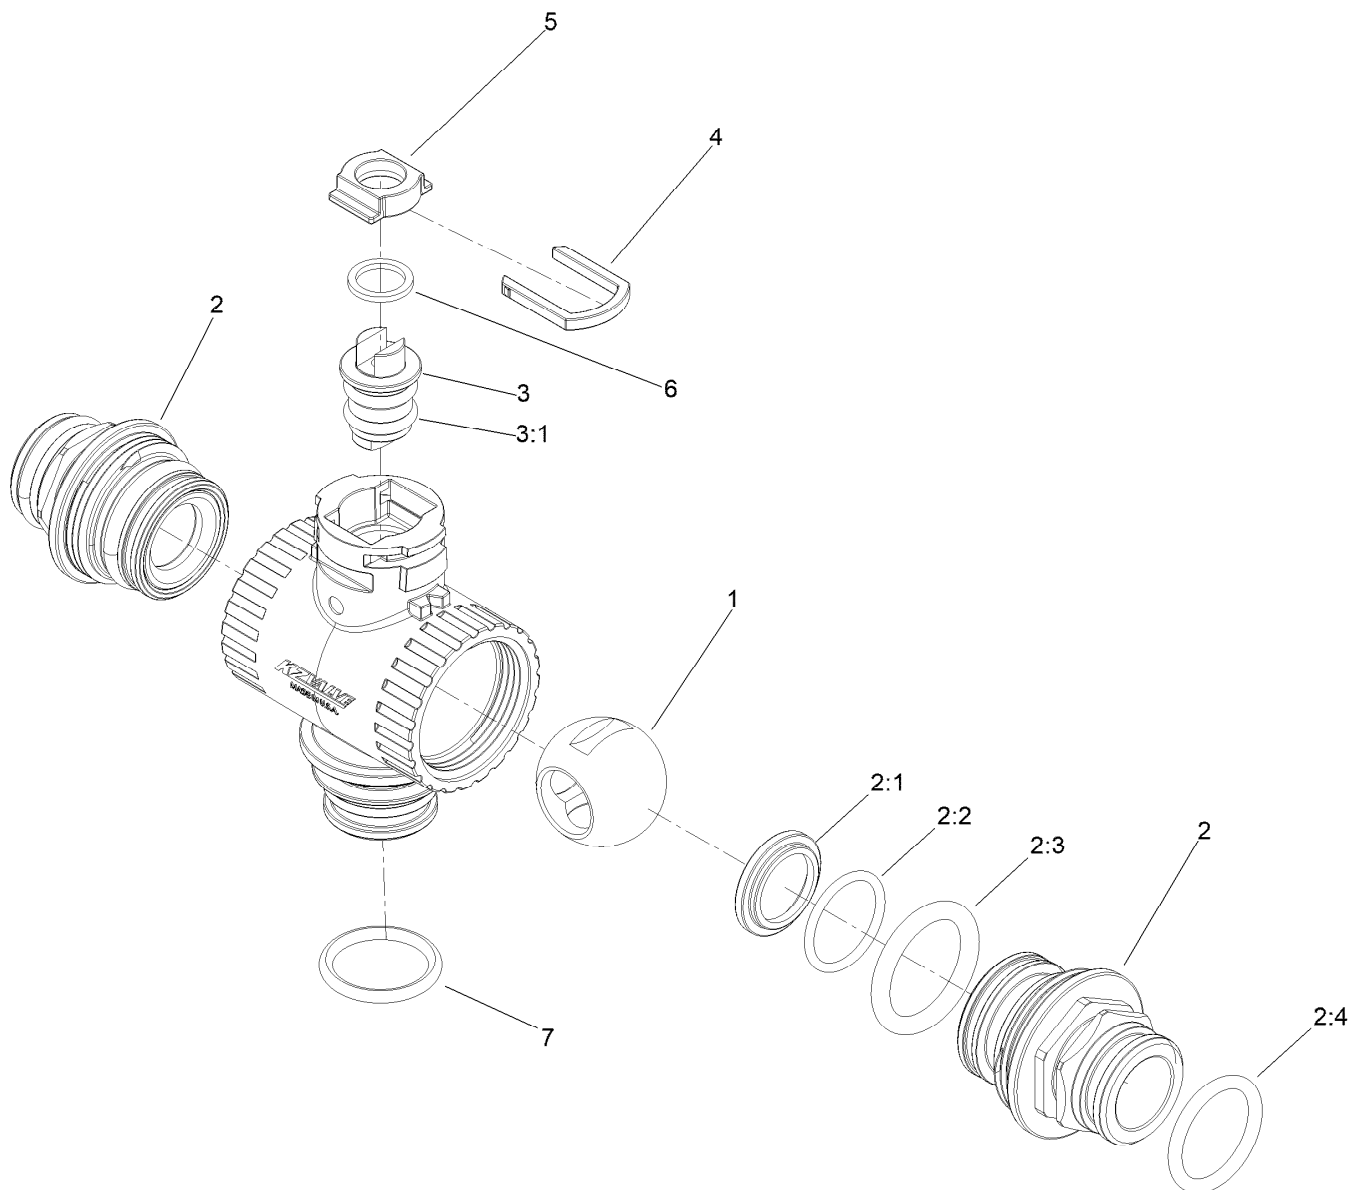

3-Way Valve Assembly No. 147-3183


Ref.	Part Number	Qty.	Description
1	127-1194	1	Ball-Valve, 3Way
2	130-7317	2	Endcap Kit
2:1	127-1192	1	Seat-Ball
2:2	127-1188	1	O-Ring, Seat (Ball)
2:3	127-1189	1	O-Ring, Endcap
2:4	127-1187	1	O-Ring, Endcap
3	130-8248	1	Valve Stem Kit
3:1	127-1197	2	O-Ring-Stem
4	127-1190	1	Fork-Stem, Valve
5	127-1195	1	Seat-Stem, Valve
6	127-1196	1	Washer-Stem, Valve
7	127-1187	1	O-Ring, Endcap

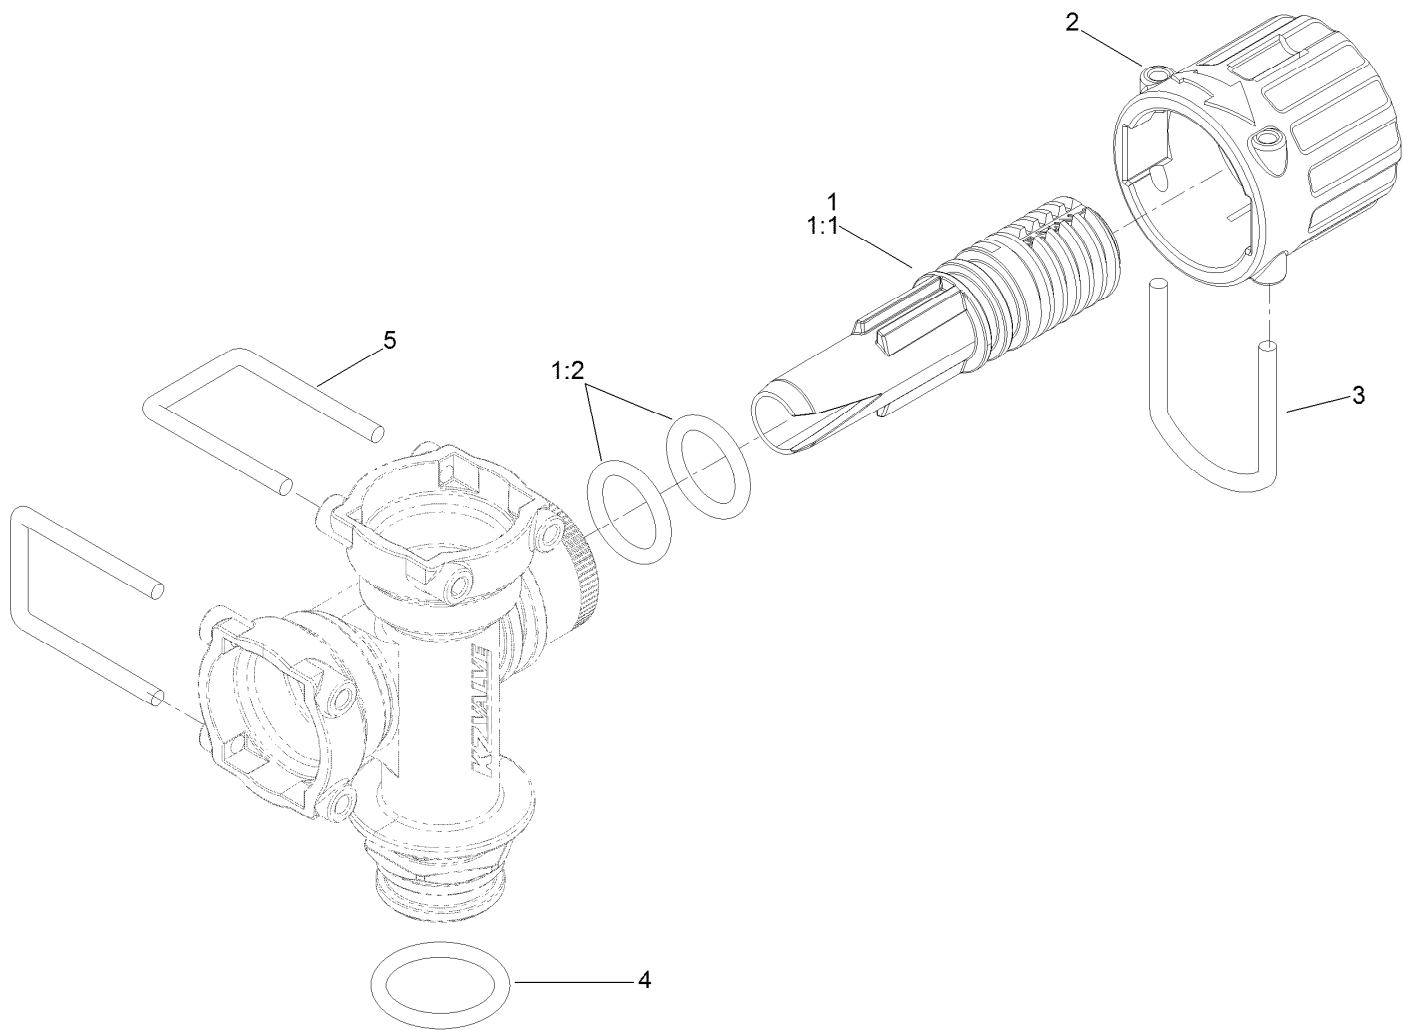 

Bypass Valve Assembly No. 127-9805

Ref.	Part Number	Qty.	Description
1	131-0298	1	Bypass Needle Kit
1:1	127-1182	1	Needle-Bypass
1:2	127-1181	2	Oring-Bypass Needle
2	127-1180	1	Knob-Bypass
3	127-1179	1	Fork-Bypass Knob
4	127-1187	1	O-Ring, Endcap
5	133-0398	2	Pin-Fork

 Agitation Manifold Assembly

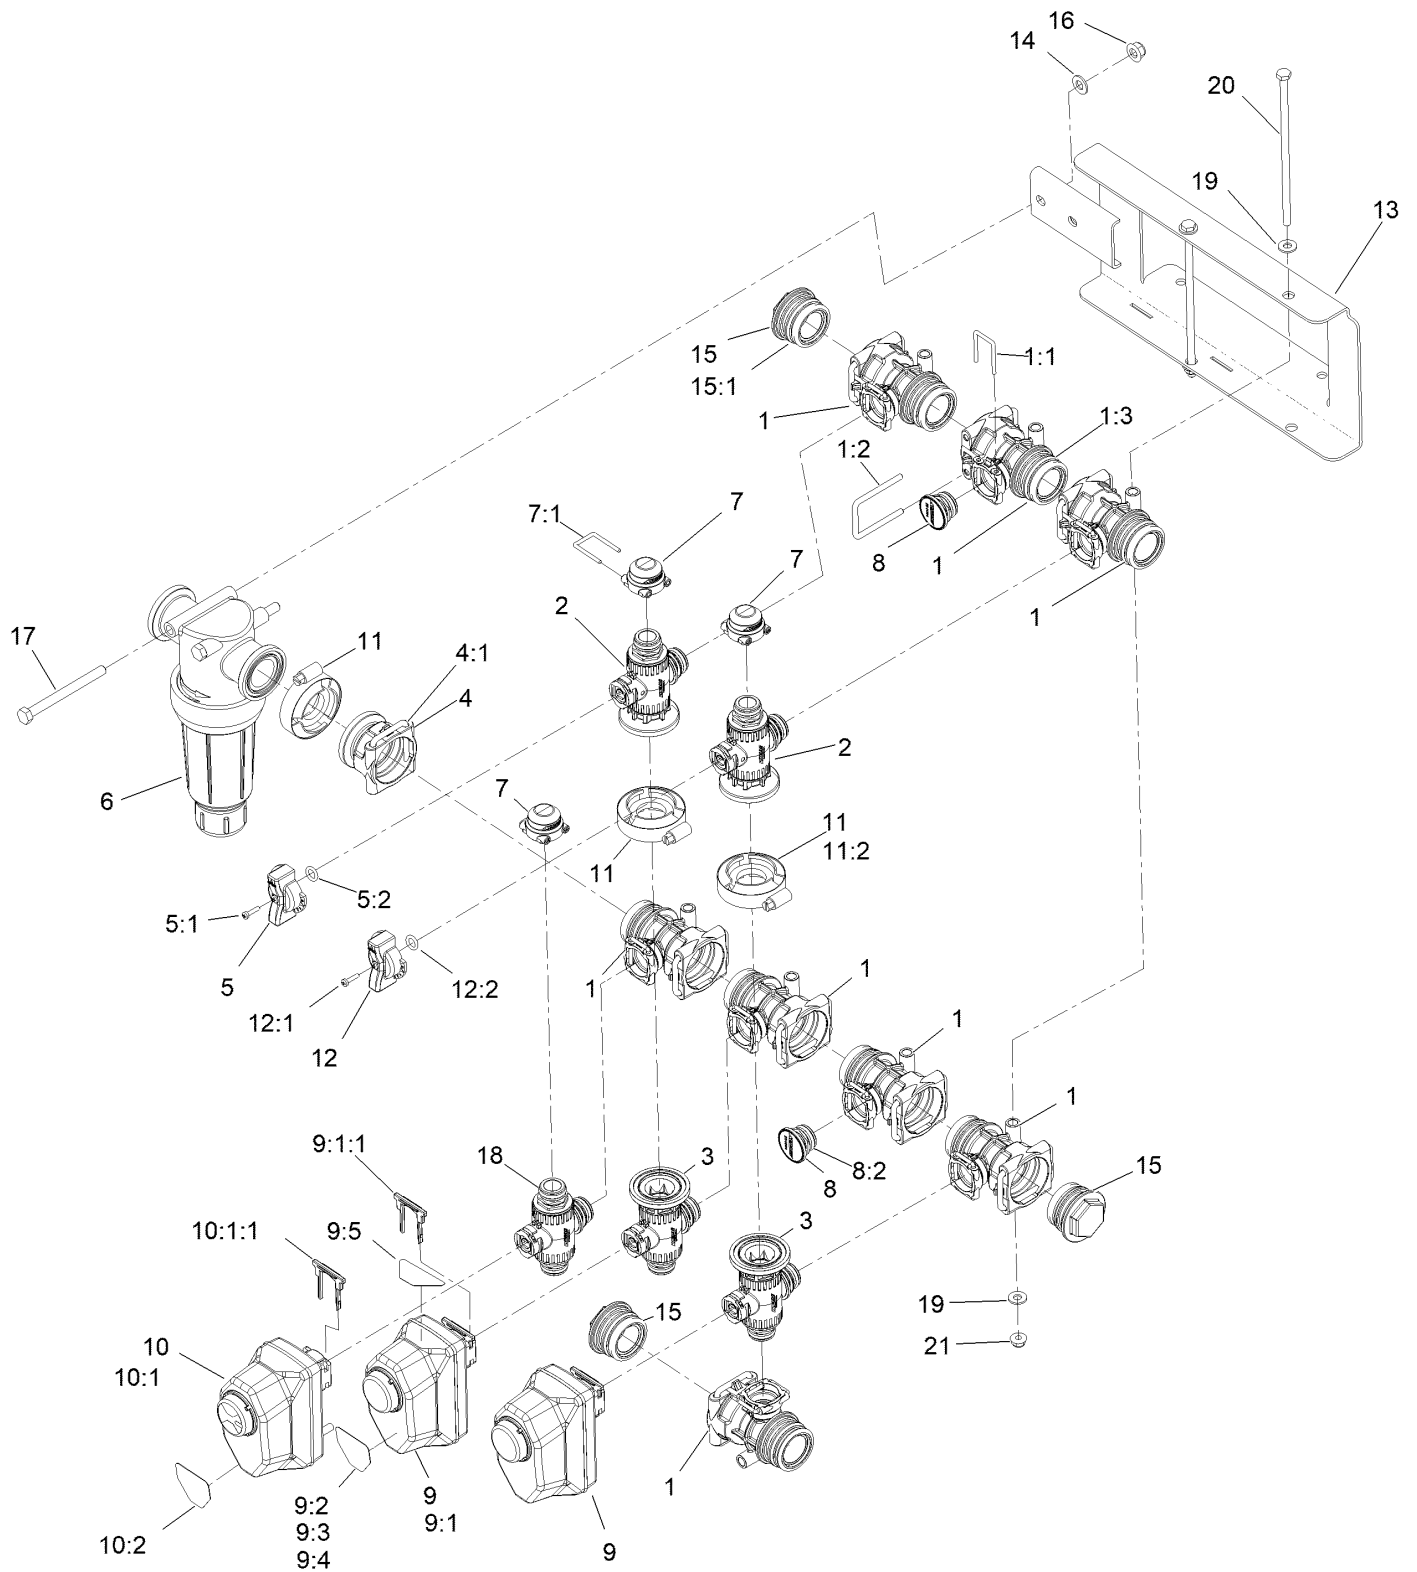


Agitation Manifold Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-3187	8	Kit-Qf, Manifold Tee	9:4	127-6982	1	Decal-Valve, Master Boom
1:1	147-3185	1	Pin-Fork, Qf Small	9:5	127-6976	1	Decal-Valve, Bypass Adjust
1:2	147-3186	1	Pin-Fork, Qf Large	10	144-6163	1	Kit-Actuator Regulating Pi
1:3	147-3188	1	Seal-Manifold, Qf Series	10:1		1	Actuator-Regulating Pi ●
2	161-4110	2	Kit-Tx2 Manifold Valve, Reg	10:1:1	130-7301	1	Hairpin-Actuator
3	147-3192	2	Kit-Tx2, 3Way Flange Manifold	10:2	127-6984	1	Decal-Valve, Regulating
4	147-3189	1	Kit-Qf, Flange-M100 Female	11	127-9829	3	Clamp/Gasket Kit
4:1	147-3186	1	Pin-Fork, Qf Large	11:2	127-1145	1	Gasket-Flange
5	131-0265	1	Agitation Regulating Handle Kit	12	131-0266	1	Master Regulating Handle Kit
5:1	131-0263	1	Screw-Handle	12:1	131-0263	1	Screw-Handle
5:2	127-1197	1	O-Ring-Stem	12:2	127-1197	1	O-Ring-Stem
6	131-3791	1	Filter-Pressure	13	161-4105	1	Agitation-Mount, ASM
7	127-9811	3	Fitting-Cap, Female	14	3256-23	2	Washer-Plain
7:1	133-0398	1	Pin-Fork	15	147-3193	3	Kit Qf, Plug-Male W/O Port
8	127-9810	2	Male Cap Fitting Kit	15:1	147-3188	1	Seal-Manifold, Qf Series
8:2	127-1187	1	O-Ring, Endcap	16	119-4041	2	Nut-HF
9	140-7377	2	Kit-Actuator Pi, On/Off	17	322-22	2	Screw-HH
9:1		1	Actuator - On/Off ●	18	161-4111	1	Kit-Tx2 Manifold Qd, Reg
9:1:1	130-7301	1	Hairpin-Actuator	19	3256-22	4	Washer-Flat
9:2	127-6979	1	Decal-Valve, Agitation	20	161-4128	2	Screw-HH
9:3	127-6981	1	Decal-Valve, On/Off	21	104-7201	2	Nut-HF, NI

● Not serviced separately

 M100 Manifold Assembly No. 161-4110

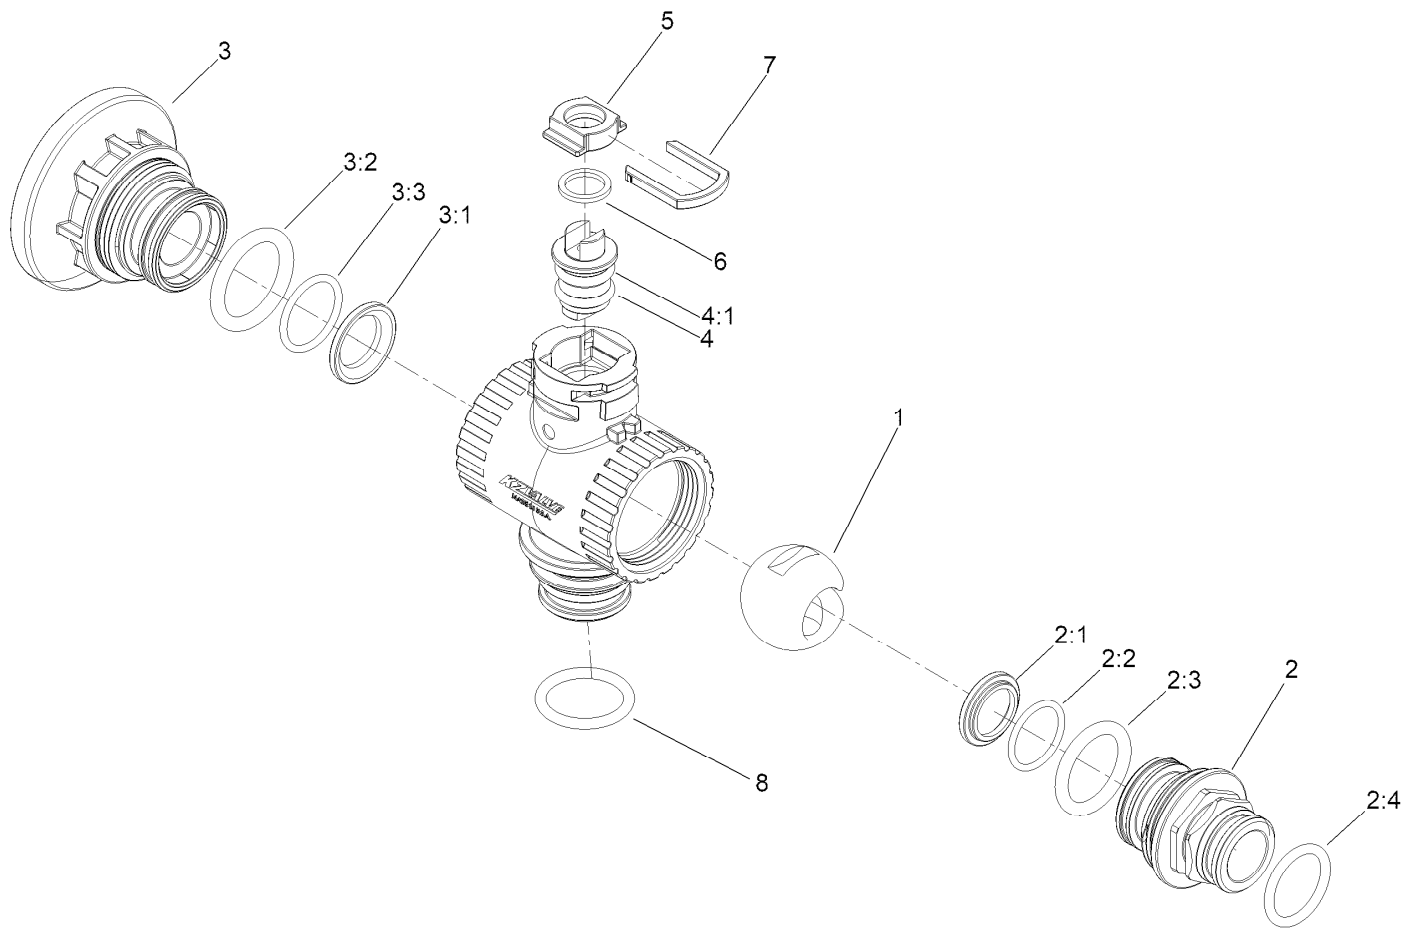


M100 Manifold Assembly No. 161-4110 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1113	1	Ball-V
2	130-7317	1	Endcap Kit
2:1	127-1192	1	Seat-Ball
2:2	127-1188	1	O-Ring, Seat (Ball)
2:3	127-1189	1	O-Ring, Endcap
2:4	127-1187	1	O-Ring, Endcap
3	130-8249	1	Endcap Kit
3:1	127-1192	1	Seat-Ball

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3:2	127-1188	1	O-Ring, Seat (Ball)
3:3	127-1189	1	O-Ring, Endcap
4	130-8248	1	Valve Stem Kit
4:1	127-1197	2	O-Ring-Stem
5	127-1195	1	Seat-Stem, Valve
6	127-1196	1	Washer-Stem, Valve
7	127-1190	1	Fork-Stem, Valve
8	127-1187	1	O-Ring, Endcap

 Hose Assembly

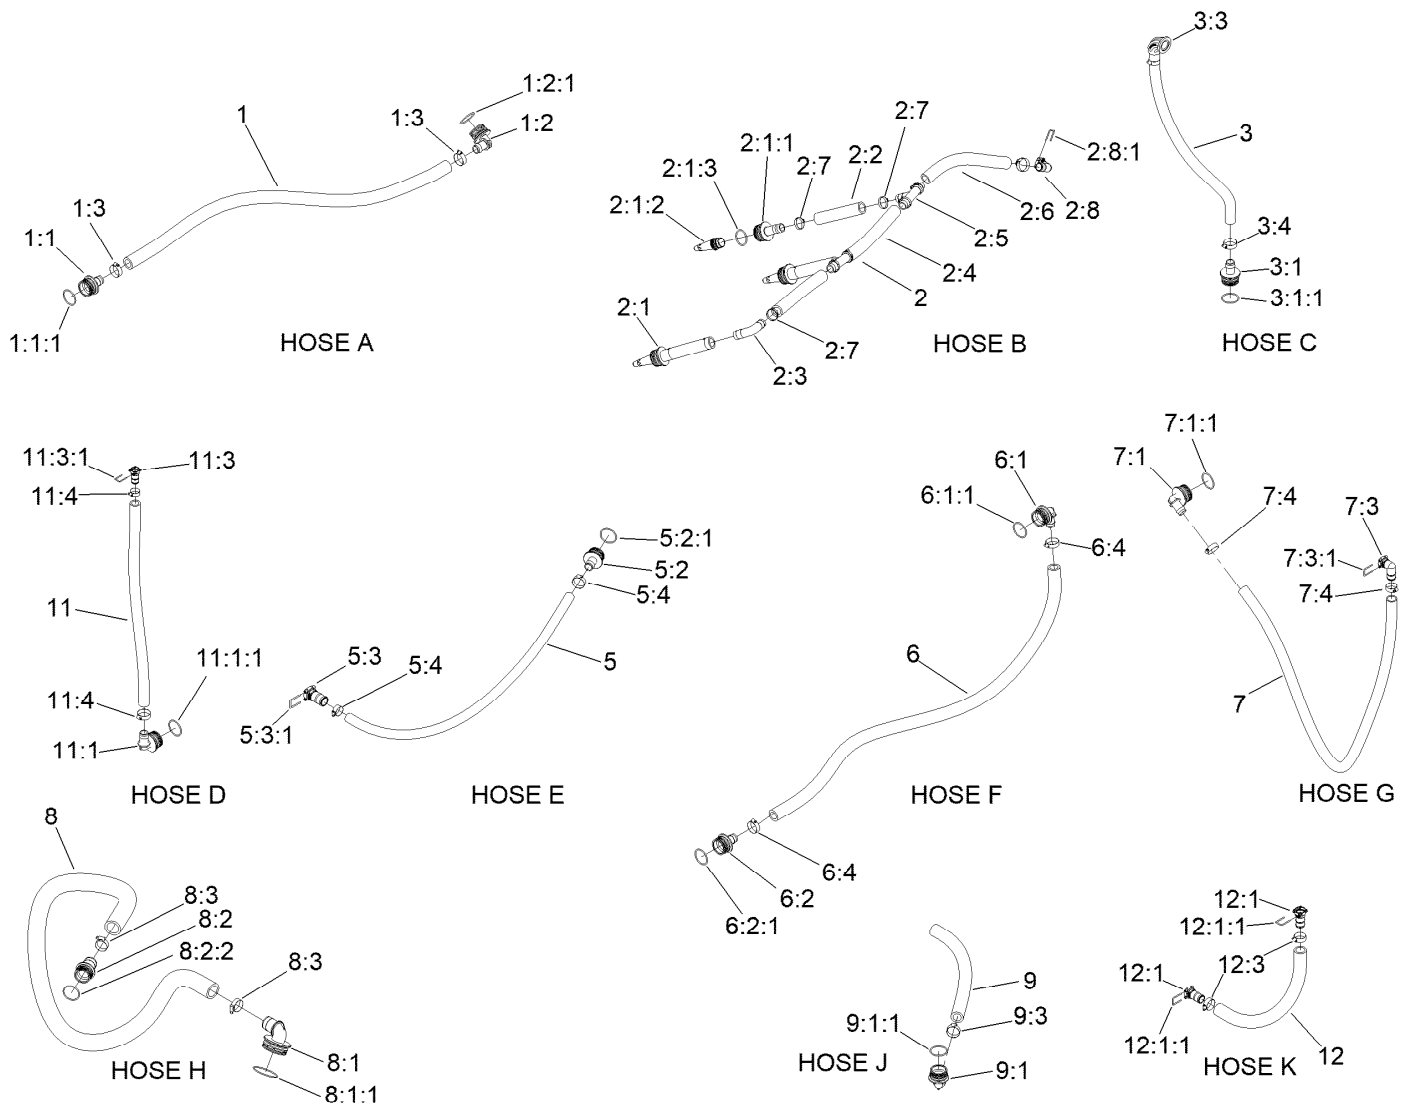


Reference Spray Tank Assembly page and Spray Tank Valve Assembly page for hose locations and orientation

Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-6539	1	Main Supply Hose ASM	6	125-0601	1	Regulating Hose ASM
1:1	106-4932	1	Hosebarb-Straight	6:1	106-4933	1	Hosebarb ASM
1:1:1	100-8637	1	O-Ring	6:1:1	100-8637	1	O-Ring
1:2	106-4933	1	Hosebarb ASM	6:2	106-4932	1	Hosebarb-Straight
1:2:1	100-8637	1	O-Ring	6:2:1	100-8637	1	O-Ring
1:3	2412-34	2	Clamp-Hose	6:4	2412-34	2	Clamp-Hose
2	139-3094	1	Hose-Agitation, ASM	7	132-4315	1	Hose-Bypass
2:1	131-3731	3	Agitation Nozzle ASM	7:1	106-4933	1	Hosebarb ASM
2:1:1	131-3732	1	Fitting-Barb	7:1:1	100-8637	1	O-Ring
2:1:2	120-8579	1	Nozzle-Agitation	7:3	131-0213	1	90 DEG Barb Fitting Kit
2:1:3	121-4996	1	O-Ring	7:3:1	133-0398	1	Pin-Fork
2:2	125-0665	3	Nozzle-Hose, Agitation	7:4	2412-34	2	Clamp-Hose
2:3	117-7867	1	Elbow-Hosebarb	8	125-0603	1	Top Suction Hose ASM
2:4	125-0664	2	Tee-Hose, Agitation	8:1	106-4952	1	Hosebarb-90 DEG
2:5	117-7866	2	Tee-Hosebarb	8:1:1	100-6989	1	O-Ring
2:6	132-4311	1	Hose-Agitation	8:2	117-7982	1	Hosebarb ASM
2:7	2412-34	12	Clamp-Hose	8:2:2	100-8637	1	O-Ring
2:8	131-0213	1	90 DEG Barb Fitting Kit	8:3	41327	2	Clamp-Hose
2:8:1	133-0398	1	Pin-Fork	9	125-0647	1	Drain Hose ASM
3	132-4314	1	Hose-Supply	9:1	106-4933	1	Hosebarb ASM
3:1	106-4932	1	Hosebarb-Straight	9:1:1	100-8637	1	O-Ring
3:1:1	100-8637	1	O-Ring	9:3	2412-34	1	Clamp-Hose
3:3	131-0241	1	Fitting-Elb 90	11	132-4316	1	Hose-Regulating
3:4	2412-34	2	Clamp-Hose	11:1	106-4933	1	Hosebarb ASM
5		1	Hose ASM, Agitation Bypass	11:1:1	100-8637	1	O-Ring
			●	11:3	127-9806	1	Fitting Kit
5:2	106-4932	1	Hosebarb-Straight	11:3:1	133-0398	1	Pin-Fork
5:2:1	100-8637	1	O-Ring	11:4	2412-34	2	Clamp-Hose
5:3	161-4117	1	Kit-Fitting, Qf 1" Barb	12	132-4319	1	Hose-Regulating
			Female	12:1	127-9806	2	Fitting Kit
5:3:1	147-3186	1	Pin-Fork, Qf Large	12:1:1	133-0398	1	Pin-Fork
5:4	2412-34	2	Clamp-Hose	12:3	2412-34	2	Clamp-Hose

● Not serviced separately

 
Main Wiring Harness and Battery Assembly

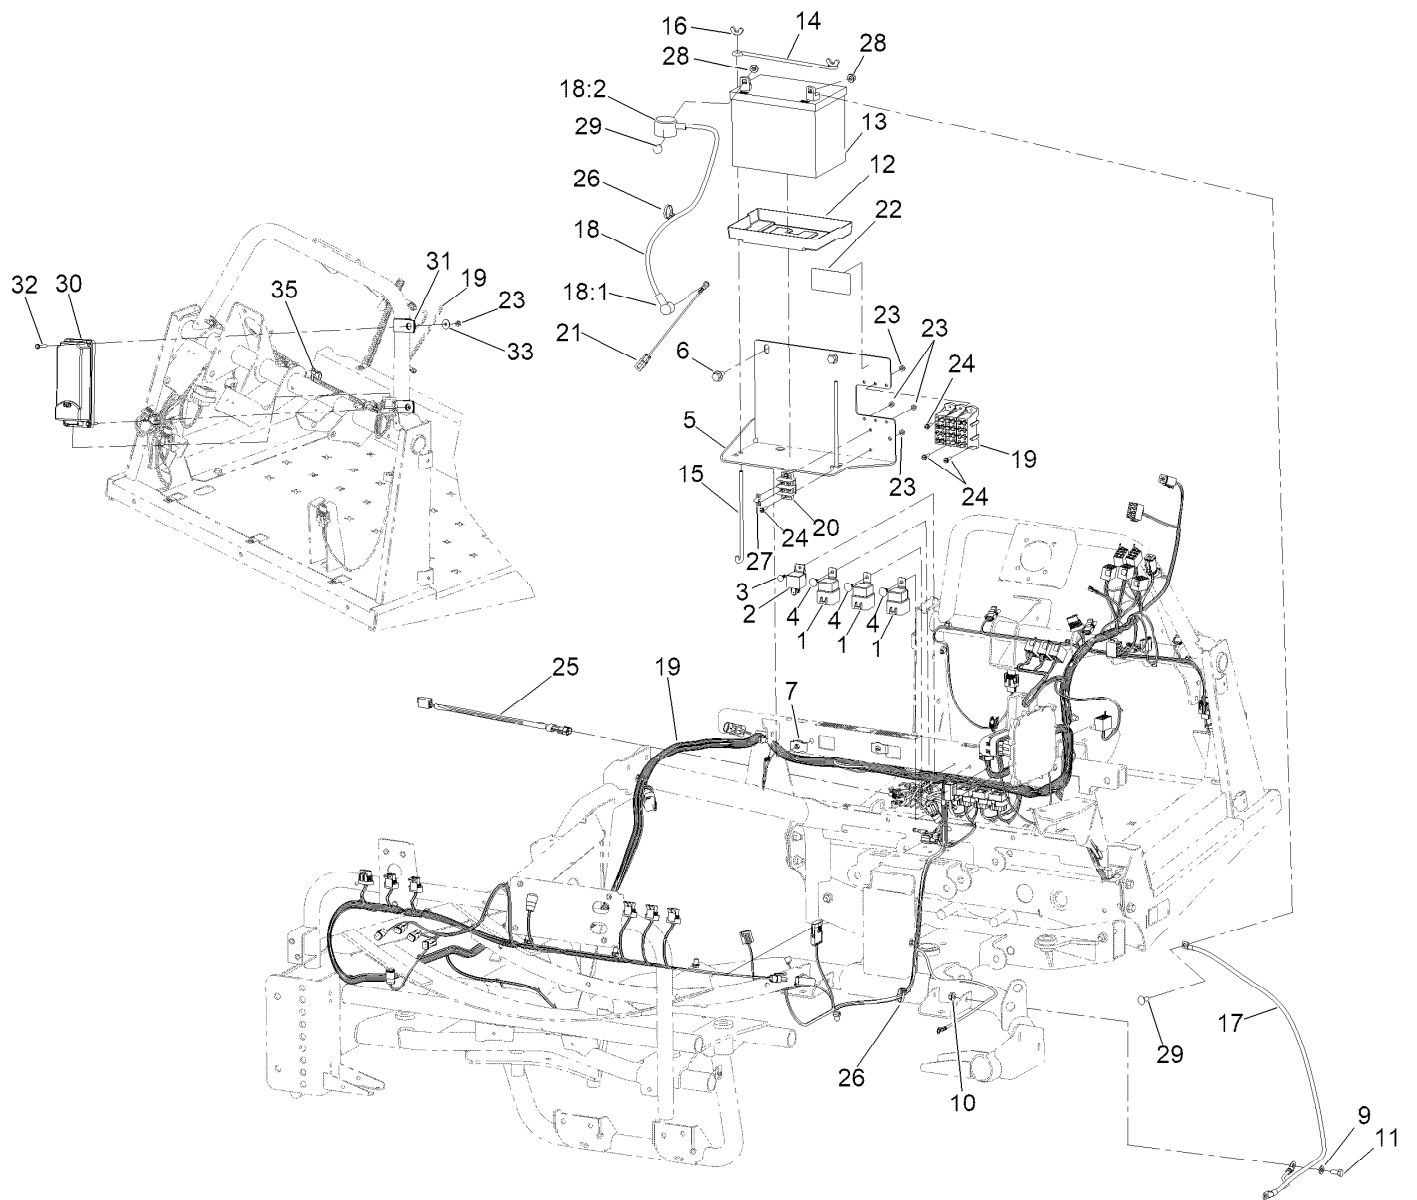

Main Wiring Harness and Battery Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	99-7430	3	Relay-Mini	18:2	109-2407	1	Insulator-Battery
2	99-7435	1	Relay	19	122-4312	1	Harness-Wire Mp1750
3	125-8067	1	Plug-Plastic	20	42862	1	Block-Terminal, Ground
4	117-2382	3	Plug-Plastic	21	108-9455	1	Harness-Wire, Fusible Link
5	125-0908-0P	1	Base - Battery	22	144-6007	1	Decal - Fuse Block
6	3234-11	2	Screw-HHF	23	3296-2	7	Nut-Lock, NI
7	105-4886	2	Nut-Tinnerman	24	32105-13	5	Screw-HWH
9	3256-23	1	Washer-Plain	25	108-8657	1	Harness-Wire, Seat
10	32128-25	1	Nut-HF	26	3290-379	2	Tie-Cable
11	322-3	1	Screw-HH	27	42863	1	Strip-Jumper
12	106948	1	Tray-Battery	28	119-4041	2	Nut-HF
13	104-8162	1	Battery	29	3230-1	2	Bolt-CARR
14	100-6434	1	Rod-Hold Down, Battery	30	161-9001	1	Gateway-Telematics
15	100-6435	2	Post-Battery	31	2412-82	2	Clamp-R
16	1-543792	2	Wingnut	32	131-6456	2	Screw-HWH
17	122-0137	1	Cable-Battery, Negative	33	3256-61	2	Washer-Flat
18	109-7621	1	Positive Battery Cable ASM	35	3290-378	11	Tie-Cable
18:1	1-543393	1	Insulator-Solenoid				

 Wiring Harness Assembly No. 122-4313

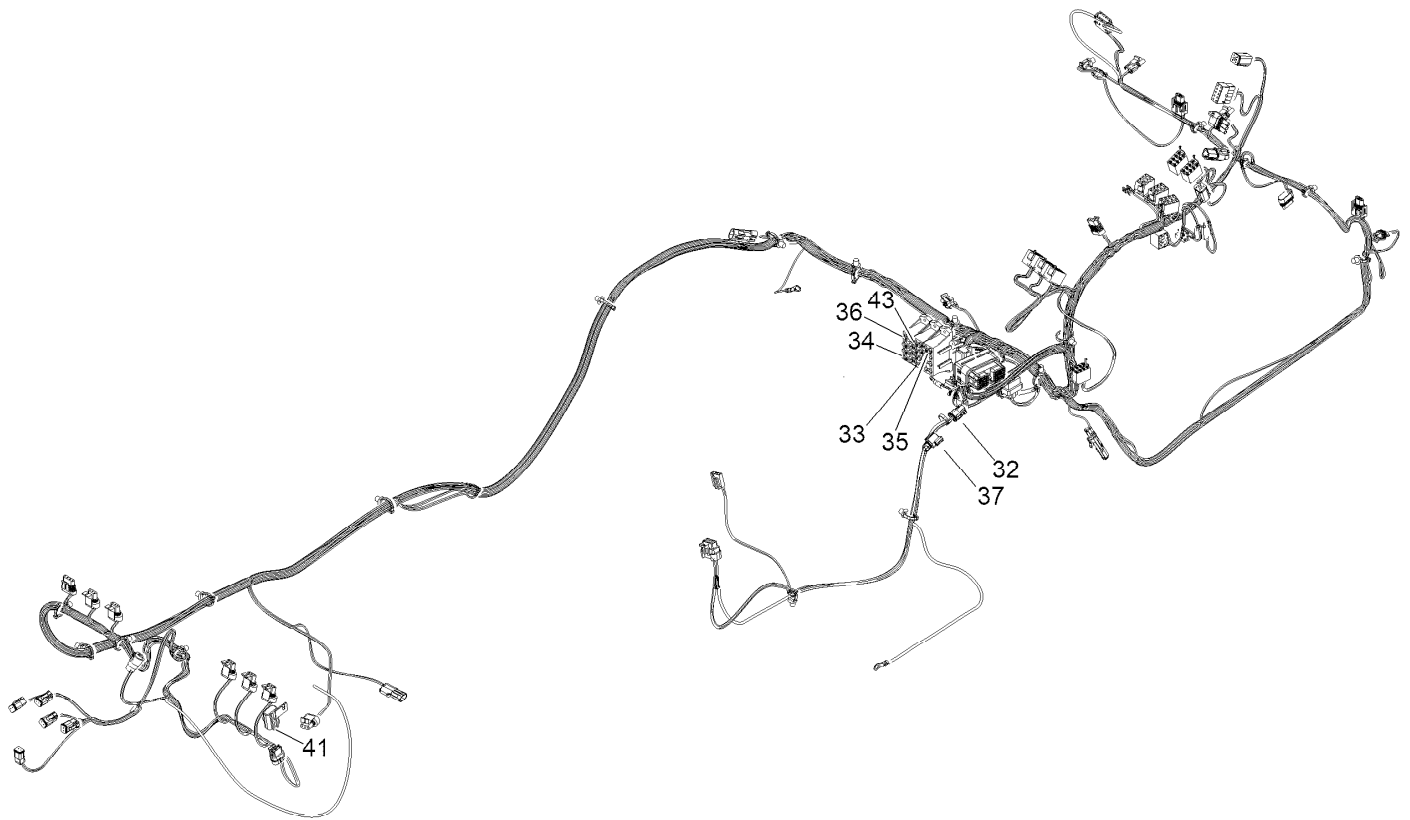


Wiring Harness Assembly No. 122-4313 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
32	32180-043	1	Resistor-120 Ohm
33	94-6710	1	Fuse-2 Amp
34	109355	3	Fuse-Blade, 15 Amp
35	109103	1	Fuse-Blade, 30 Amp


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
36	218-578	1	Fuse-Blade, 10 Amp
37	32180-089	1	Cap-Plug, 3 Way
41	32180-019	1	Cover-Fuse, Single
43	114241	3	Fuse-Blade, 7.5 Amp

 Center Boom Mount Assembly

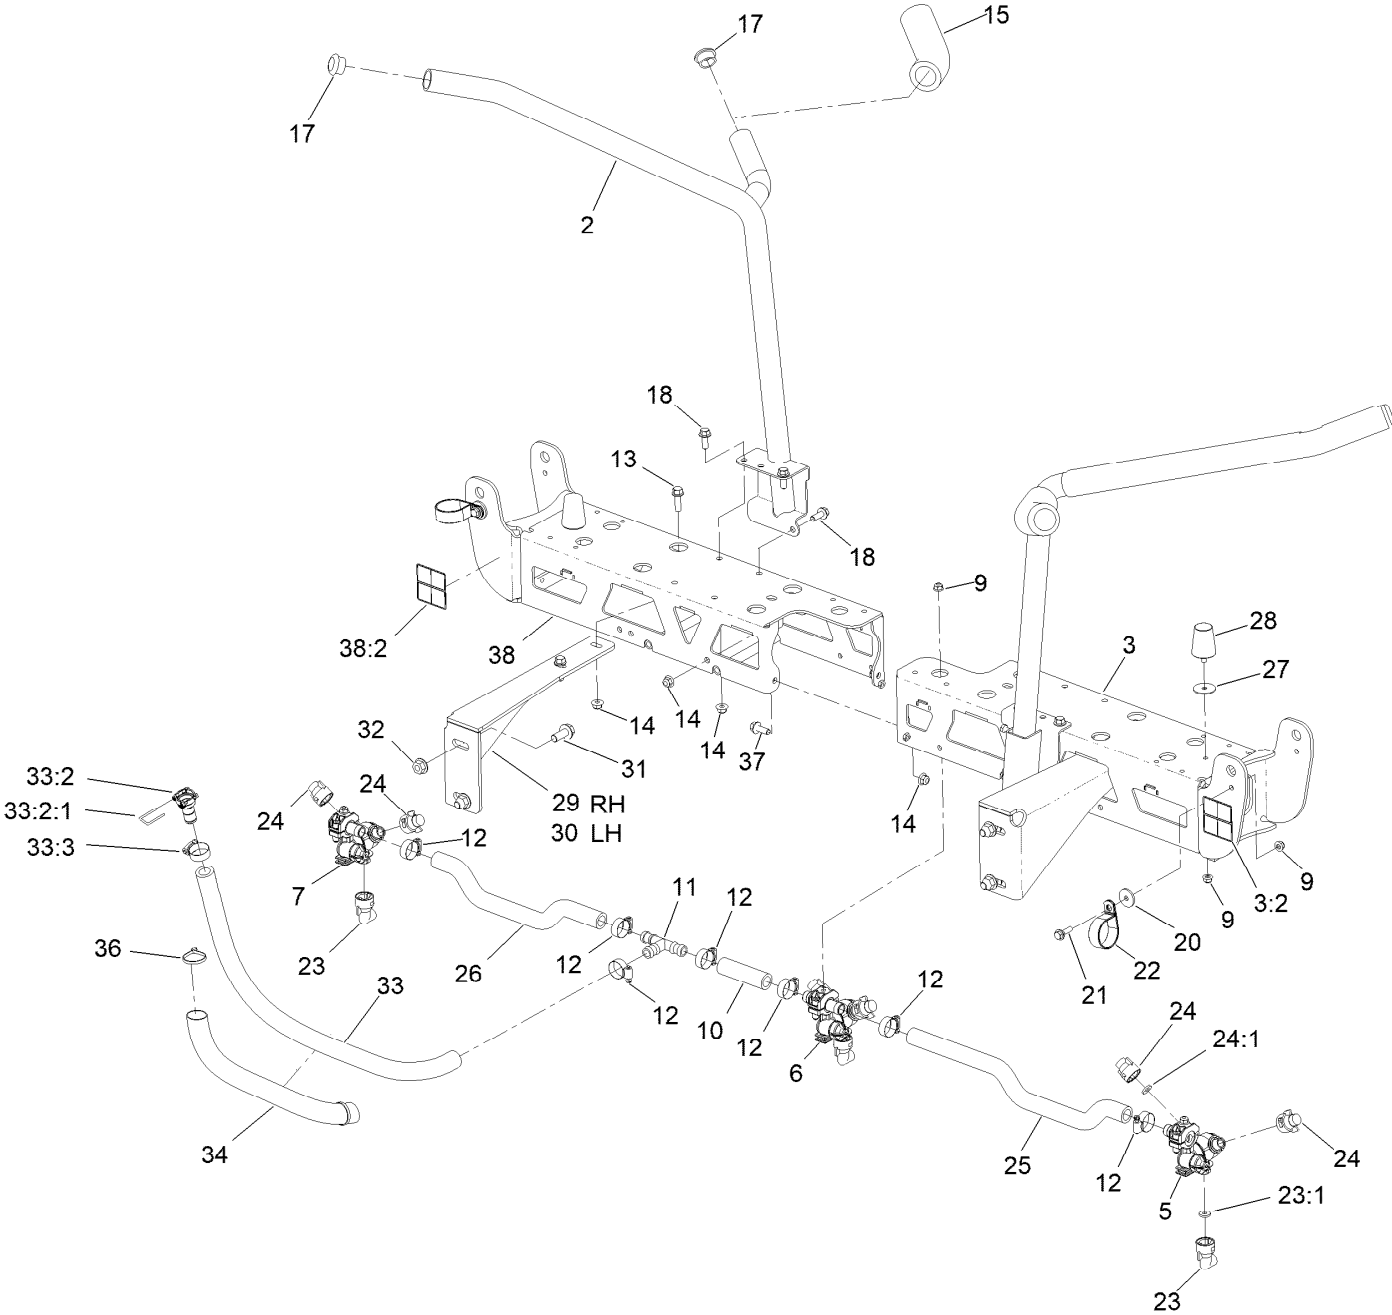

Center Boom Mount Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	161-4174	2	Cradle ASM	24	95-9187	6	Cap-Blank
3	136-0381	1	Boom-LH	24:1	40998	1	Seat-Gasket
3:2	120-0617	2	Decal-Warning, Pinch, Crush	25	108-3735	1	Hose-Boom, Center (LH)
5	108-3725	1	LH Single Body Turret ASM	26	108-3718	1	Hose-Boom, Center (RH)
6	108-3727	1	Double Turret Body ASM	27	3256-68	2	Washer-Flat
7	108-3726	1	RH Single Body Turret ASM	28	110-5070	2	Bumper
9	119-4041	7	Nut-HF	29	130-8244-03	1	Mount-Boom, RH
10	108-3717	1	Hose-Boom	30	130-8245-03	1	Mount-Boom, LH
11	108-3439	1	Tee	31	110-5057	4	Capscrew-HHF
12	2412-129	7	Clamp-Hose	32	139-1689	4	Nut-HF
13	110-5050	4	Screw-HHF	33	132-4323	1	Hose-Boom, Center
14	119-4042	12	Nut-HF, NI	33:2	127-9807	1	Straight Fitting Kit
15	108-3457	2	Spacer	33:2:1	133-0398	1	Pin-Fork
17	108-3489	4	Cap-Tube	33:3	2412-129	1	Clamp-Hose
18	110-5052	6	Screw-HHF	34	127-3923	1	Conduit-Convoluted
20	108-3743	2	Washer	36	3290-378	2	Tie-Cable
21	108-3744	2	Screw-Shoulder	37	3234-42	2	Screw-HHF
22	114-9566	2	Clamp-R	38	136-0382	1	Boom-RH
23	95-9186	3	Cap	38:2	120-0617	2	Decal-Warning, Pinch, Crush
23:1	40998	1	Seat-Gasket				

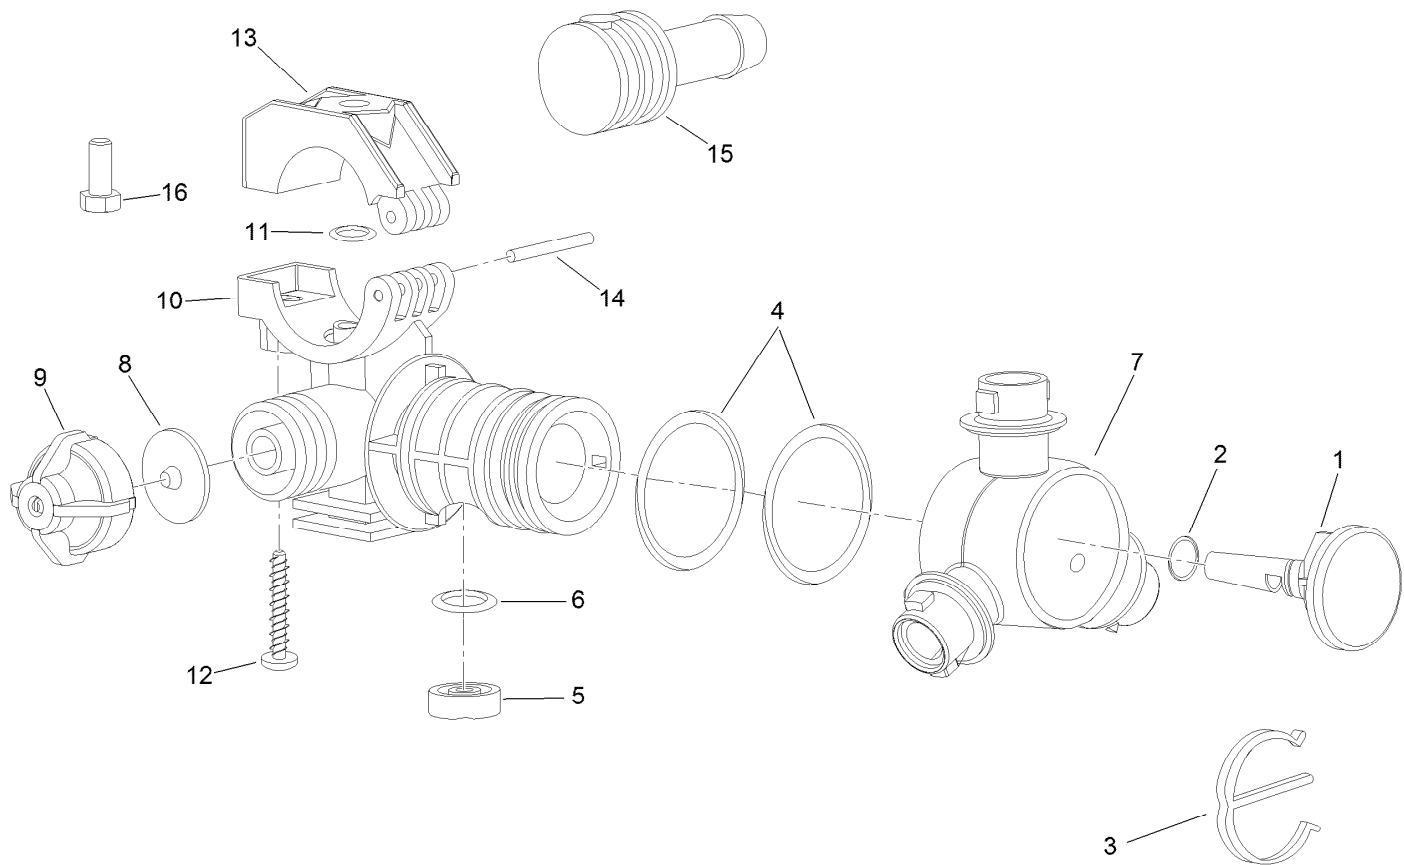 

LH Single Turret Body Assembly No. 108-3725

Ref.	Part Number	Qty.	Description
1	95-9200	1	Plug
2	95-9198	1	O-Ring
3	95-9197	1	E-Clip
4	95-9199	2	O-Ring
5	108-3264	1	Seal-Viton
6	108-3265	1	O-Ring-Viton
7	95-9196	1	Turret
8	41003	1	Diaphragm

Ref.	Part Number	Qty.	Description
9	95-9193	1	Cap-Diaphragm
10	95-9192	1	Body-Split Eyelet
11	95-9191	1	O-Ring
12	99-0811	1	Screw-Clamp
13	99-0812	1	Clamp-Upper
14	99-0814	1	Pin-Pivot
15	95-9201	1	Shank-Hose
16	322-3	1	Screw-HH

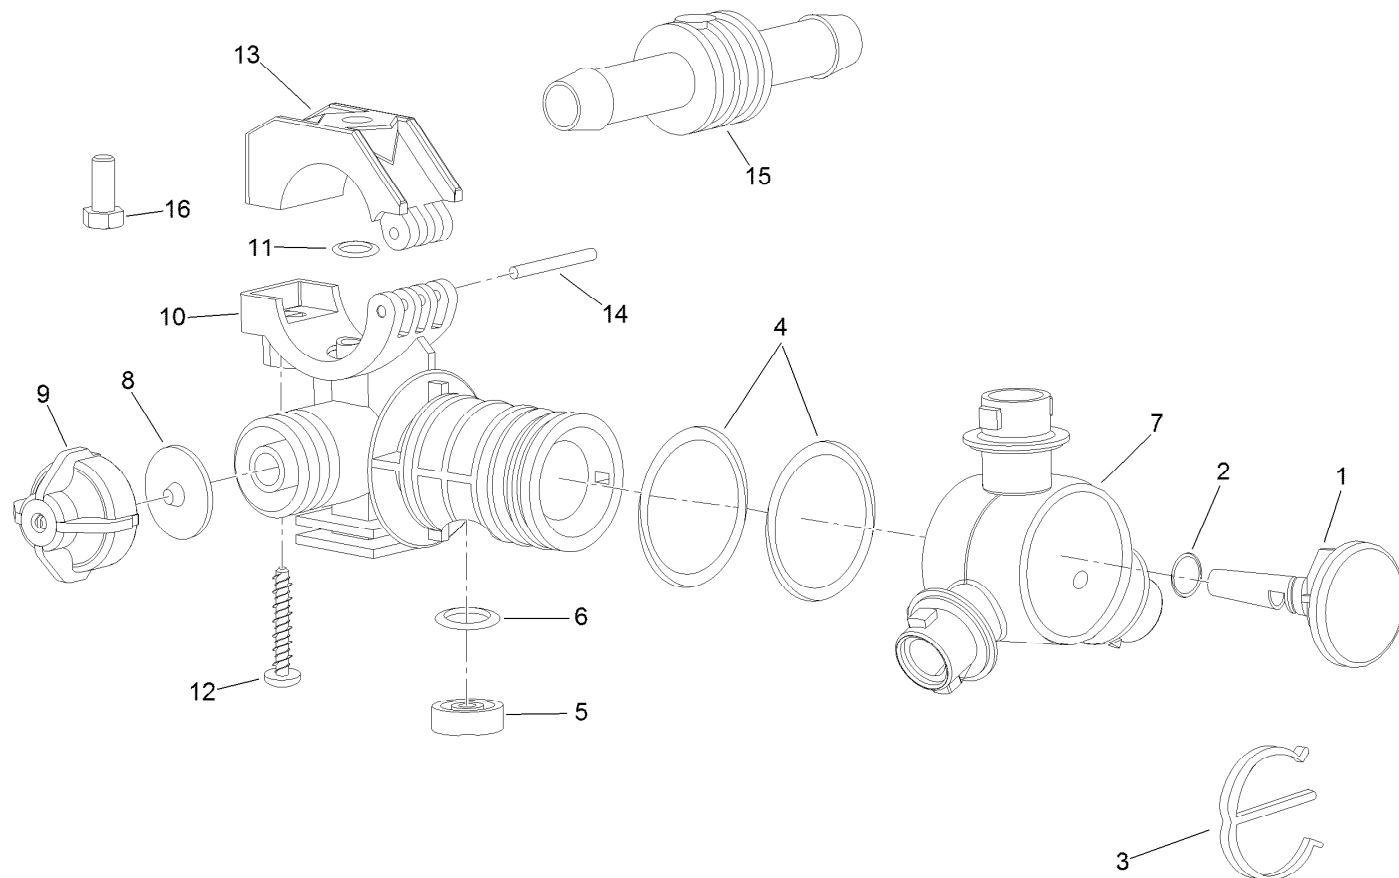 


Double Turret Body Assembly No. 108-3727

Ref.	Part Number	Qty.	Description
1	95-9200	1	Plug
2	95-9198	1	O-Ring
3	95-9197	1	E-Clip
4	95-9199	2	O-Ring
5	108-3264	1	Seal-Viton
6	108-3265	1	O-Ring-Viton
7	95-9196	1	Turret
8	41003	1	Diaphragm

Ref.	Part Number	Qty.	Description
9	95-9193	1	Cap-Diaphragm
10	95-9192	1	Body-Split Eyelet
11	95-9191	1	O-Ring
12	99-0811	1	Screw-Clamp
13	99-0812	1	Clamp-Upper
14	99-0814	1	Pin-Pivot
15	95-9202	1	Shank-Hose
16	322-3	1	Screw-HH

 
RH Single Body Turret Assembly No. 108-3726

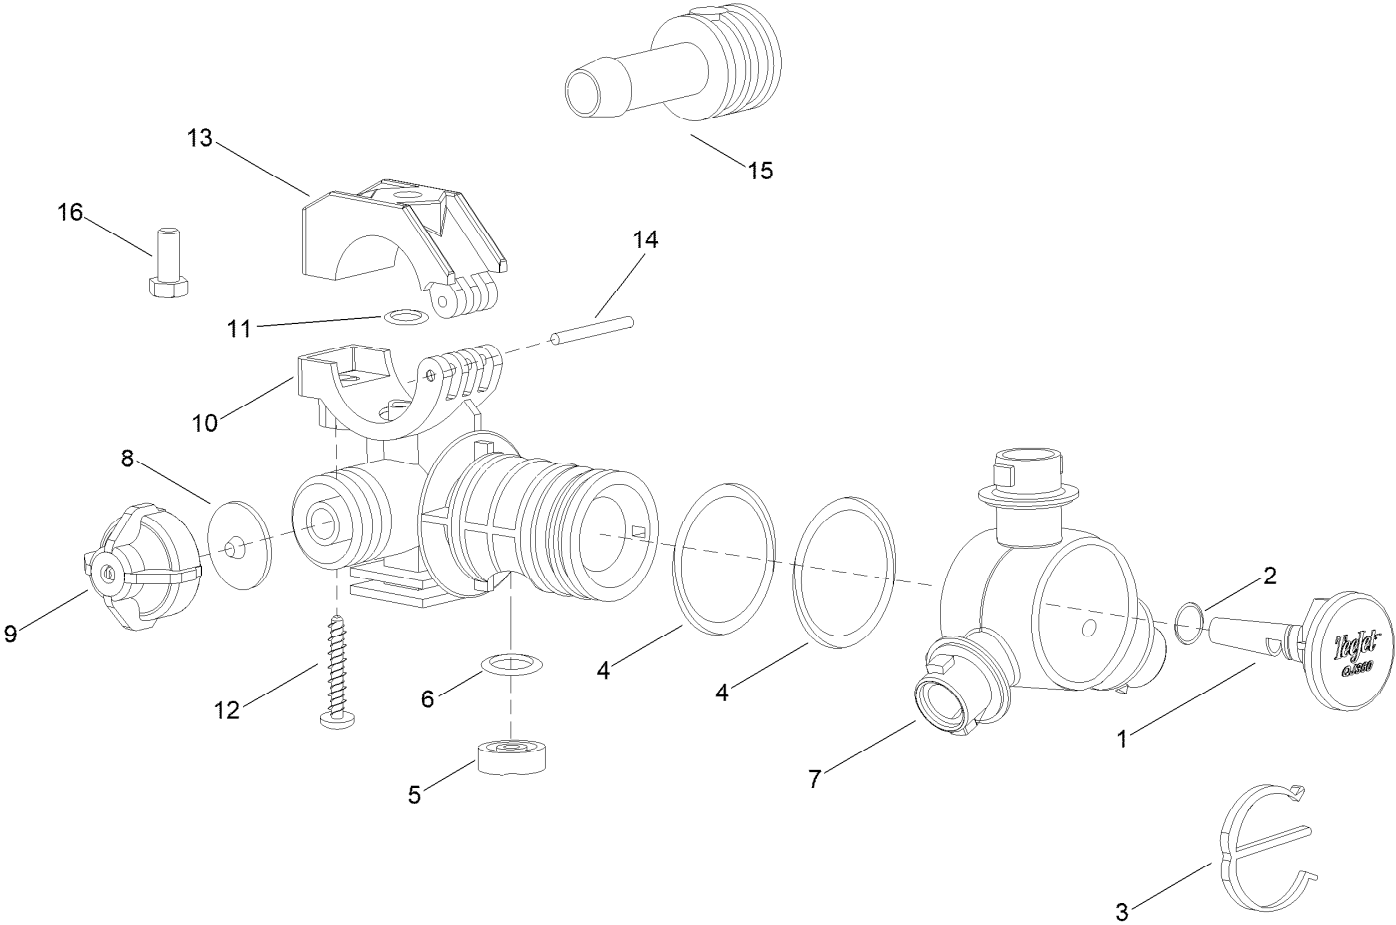

RH Single Body Turret Assembly No. 108-3726 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	95-9200	1	Plug
2	95-9198	1	O-Ring
3	95-9197	1	E-Clip
4	95-9199	2	O-Ring
5	108-3264	1	Seal-Viton
6	108-3265	1	O-Ring-Viton
7	95-9196	1	Turret
8	41003	1	Diaphragm


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
9	95-9193	1	Cap-Diaphragm
10	95-9192	1	Body-Split Eyelet
11	95-9191	1	O-Ring
12	99-0811	1	Screw-Clamp
13	99-0812	1	Clamp-Upper
14	99-0814	1	Pin-Pivot
15	95-9201	1	Shank-Hose
16	322-3	1	Screw-HH

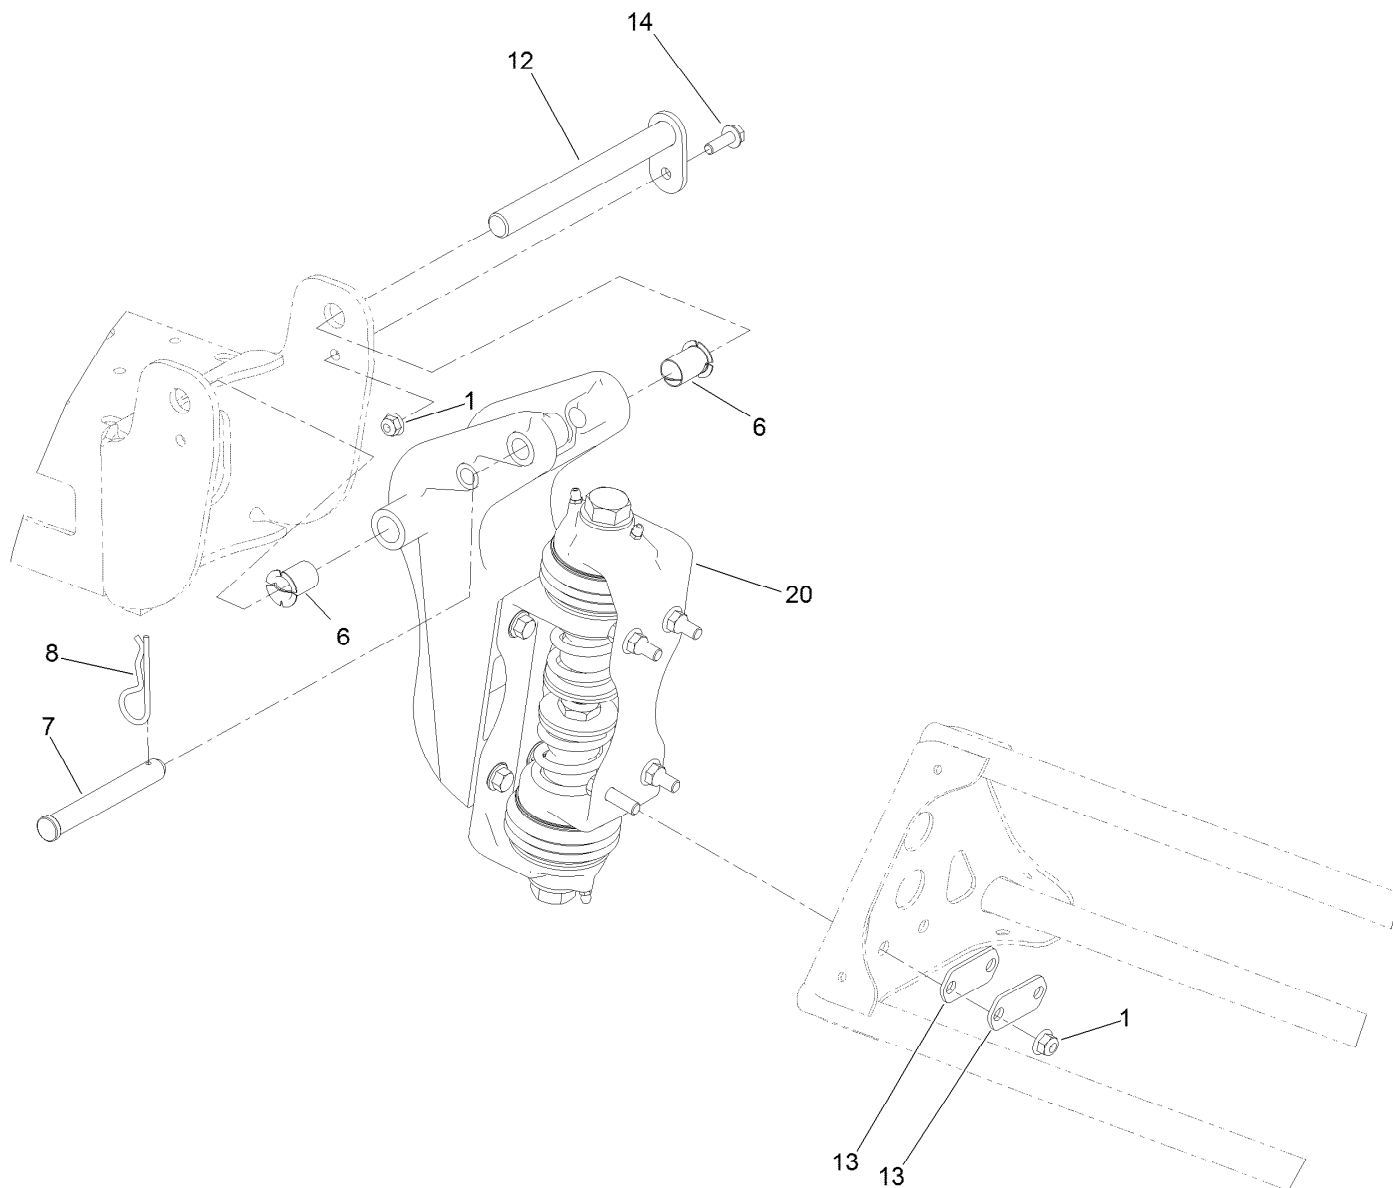 

Boom Pivot Mount Assembly


Ref.	Part Number	Qty.	Description
1	119-4041	2	Nut-HF
6	100-8541	4	Bushing-A Arm
7	108-3436	2	Pin-Clevis
8	3290-468	2	Pin-Cotter
12	108-3419	2	Pivot Pin ASM
13	108-3605	8	Plate-Backing
14	108-3748	2	Screw-HHF
20		2	Pivot Bracket Assembly ●

 ● Not serviced separately

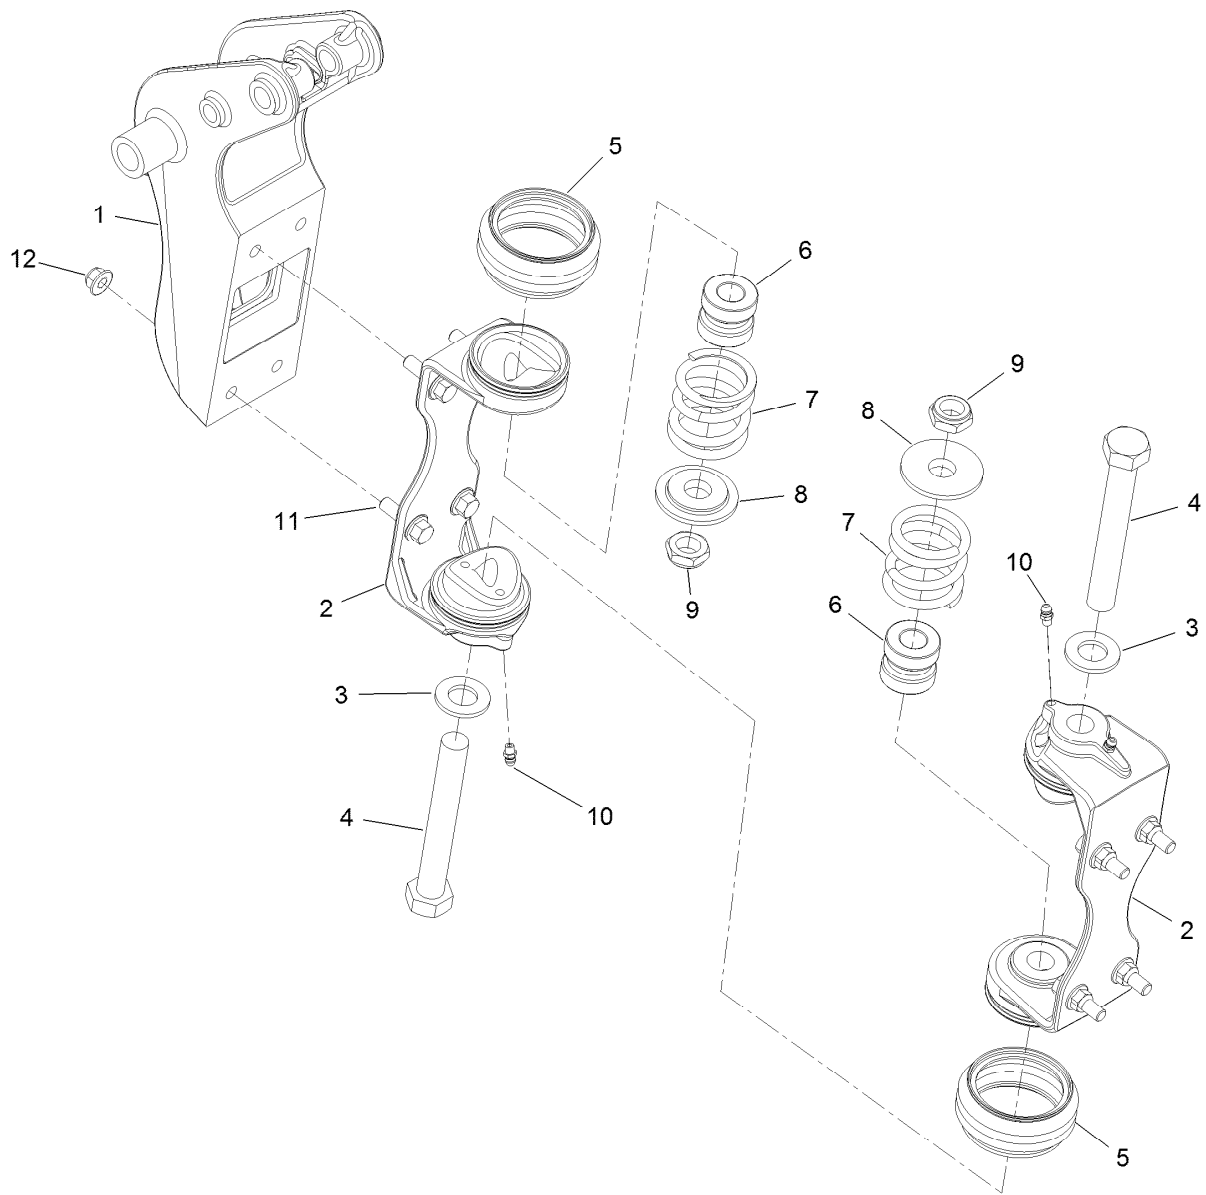

Boom Pivot Bracket Assembly

Ref.	Part Number	Qty.	Description
1	137-1673	1	Bracket-Pivot
2	137-1674	2	Hinge
3	110-5054	2	Washer-Flat
4	108-3738	2	Screw-HH
5	108-3459	2	Boot-Hinge
6	120-8541	2	Dampener-Hinge
7	108-3440	2	Spring-Breakaway, Boom
8	108-3444	2	Retainer-Spring
9	3296-15	2	Nut-Lock, NI
10	302-5	4	Fitting-Grease
11	110-5050	8	Screw-HHF
12	119-4042	8	Nut-HF, NI

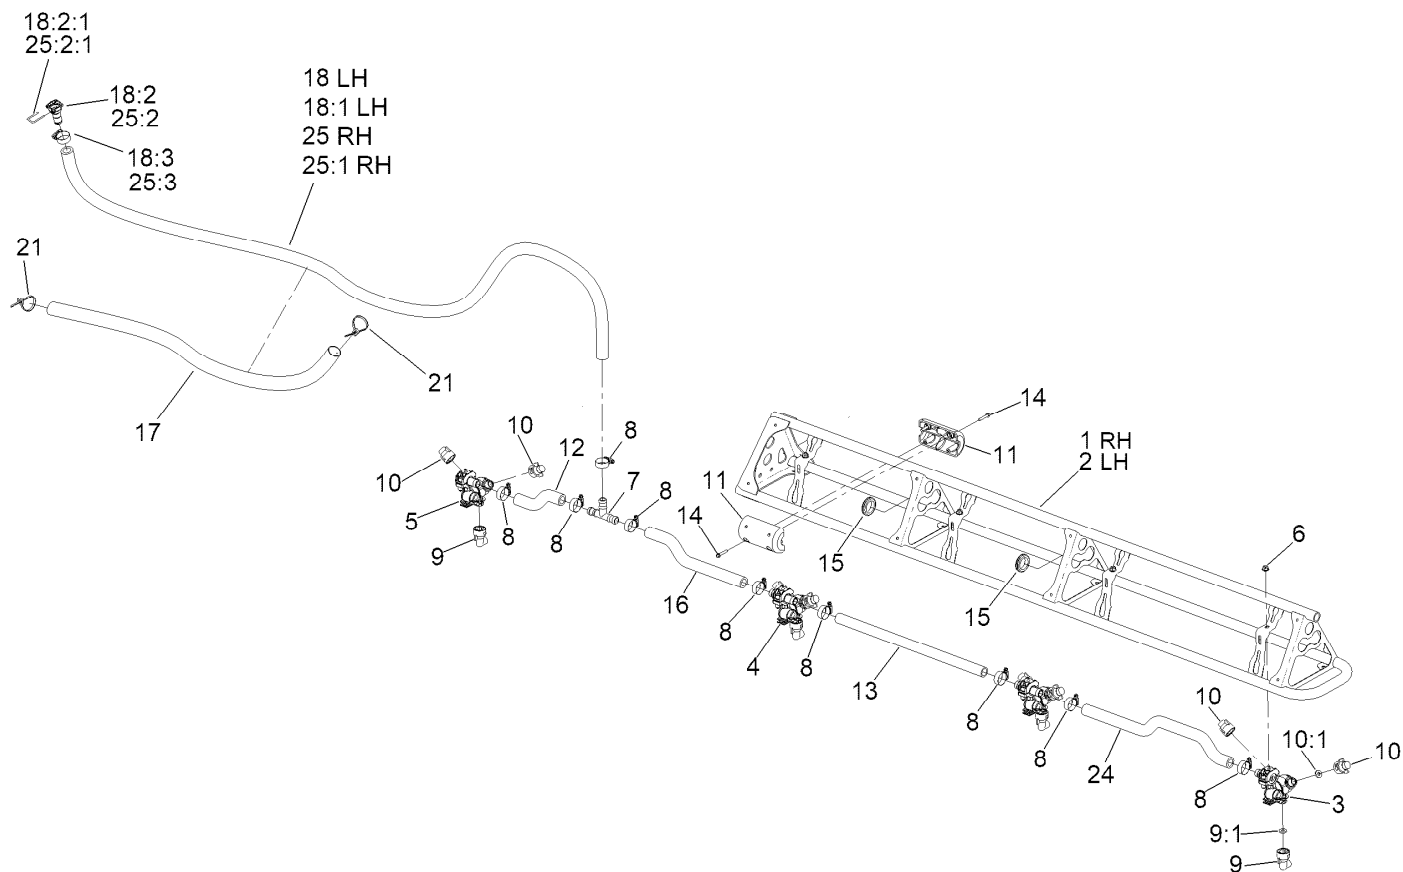 

Left and Right Hand Boom Assembly

Ref.	Part Number	Qty.	Description
1	108-3524-03	1	Boom-RH
2	108-3525-03	1	Boom-LH
3	108-3725	2	LH Single Body Turret ASM
4	108-3727	4	Double Turret Body ASM
5	108-3726	2	RH Single Body Turret ASM
6	119-4041	8	Nut-HF
7	108-3439	2	Tee
8	2412-129	18	Clamp-Hose
9	95-9186	8	Cap
9:1	40998	1	Seat-Gasket
10	95-9187	16	Cap-Blank
10:1	40998	1	Seat-Gasket
11	119-9368	8	Block Slide
12	136-0437	2	Hose-Formed
13	40506	2	Hose-Jumper
14	119-9369	16	Screw-HHF

Ref.	Part Number	Qty.	Description
15	240-3	4	Grommet-Rubber
16	136-0436	2	Hose-Formed
17	107-8650	2	Conduit-Convolutd
18	132-4322	1	Hose-Boom
18:1	125-8046	1	Hose-Supply, Hose Reel
18:2	127-9807	1	Straight Fitting Kit
18:2:1	133-0398	1	Pin-Fork
18:3	2412-129	1	Clamp-Hose
21	3290-378	4	Tie-Cable
24	108-3735	2	Hose-Boom, Center (LH)
25	132-4324	1	Hose-Boom
25:1	127-9769	1	Hose-Supply
25:2	127-9807	1	Straight Fitting Kit
25:2:1	133-0398	1	Pin-Fork
25:3	2412-129	1	Clamp-Hose

Attachments and Accessories

For 41196 — Multi Pro 1750 Turf Sprayer

Product Name	Model/Part
Premium ATF (Drum).....	108-1185
Premium ATF (Pail)	108-1186
Premium All Purpose Grease (Tube)	108-1190
License Plate Kit.....	120-8506
Covered Boom Spring Upgrade Kit.....	120-8508
Premium Engine Oil 10w30 (55 Gallon Drum)	121-6392
Premium Engine Oil 10w30 (5 Gallon Pail)	121-6393
Lance Suction Assembly	127-9826
Sonic Boom Finish Kit.....	130-8227
Finishing Kit, Foam Marker for Multi Pro 1750 Turf Sprayer	136-0457
Pump Head Kit.....	145-3399
White Universal Sunshade	30669
Red Universal Sunshade	30671
Rear Work Light Kit.....	41010
Single Nozzle Kit.....	41023
Hand Spray Wand Kit	41118
EU Compliance Kit.....	41155
Pro Foam Concentrate (4 x 1 Gallon)	41157
Chemical Pre-Mix Kit	41158
Electric Hose Reel Kit	41159
CE Kit	41202
Tank Clean Rinse Kit	41208
Ultra Sonic Boom Leveling Kit	41219
Foam Marker Kit	41249
Drift Reduction Boom Shroud Kit	41602
Pro-Foam.....	41607
Geolink Global	41713
Geolink Finish Kit MP 1750.....	41742
Spark Arrestor Screen	94-8157

Notes:

Notes:



Count on it.