



# TimeCutter<sup>®</sup> ZX Riding Mowers

Form No. 3328-454 Rev A

## Setup Instructions

**Note:** If needed, a Decal Kit, 106-6412, and French manual are available for the customer. Order the Decal Kit from the Toro Parts Department and the French manual from either the Toro Parts Department or online at [www.toro.com](http://www.toro.com).

## Loose Parts

**Note:** Use the chart below to verify that all parts have been shipped.

Description	Qty.	Use
Bolt, 1/4 x 3/4 inch	2	Installing the battery
Washer, 1/4 inch	2	
Nut, 1/4 inch	2	
Seat	1	Installing the seat
Spacer	2	
Knob	2	
Flat washer, 5/16 inch	2	
Left-hand control lever	1	Installing the motion control levers
Right-hand control lever	1	
Bolt, 3/8 x 1 inch	4	
Curved washer, 3/8 inch	4	
Hose coupling	1	Washing the underside of the mower
Key	1	
<i>Operator's Manual</i>	1	Read before operating the machine.
Engine Operator's Manual	1	
Registration card	1	Fill out and return to Toro.



### Warning





#### CALIFORNIA

#### Proposition 65 Warning

Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. *Wash hands after handling.*

# Installing the Battery

Bulk electrolyte with 1.260 specific gravity must be purchased from a local battery supply outlet.

**Danger**

**Battery electrolyte contains sulfuric acid which is a deadly poison and causes severe burns.**


- Do not drink electrolyte and avoid contact with skin, eyes or clothing. Wear safety glasses to shield your eyes and rubber gloves to protect your hands.
- Fill the battery where clean water is always available for flushing the skin.
- Follow all instructions and comply with all safety messages on the electrolyte container.

1. Remove the battery from the machine and place it on a level surface; refer to the *Operator's Manual*, Removing the Battery.

**Important** Never fill the battery with electrolyte while the battery is installed in the tractor. Electrolyte could be spilled on other parts and cause corrosion.

2. Clean the top of the battery with a paper towel.
3. Remove the vent caps from the battery (Fig. 1). Slowly pour electrolyte into each battery cell until the electrolyte level is up to the Upper line on the battery case (Fig. 1).

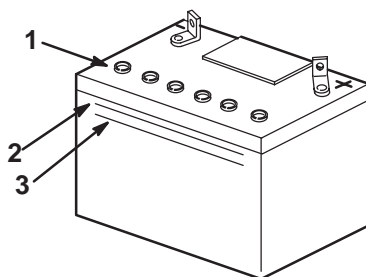

**Important** Do not overfill the battery because electrolyte (sulfuric acid) can cause severe corrosion and damage to the chassis.



**Figure 1**

1. Vent caps
2. Upper line
3. Lower line


4. Wait five to ten minutes after filling the battery cells. Add electrolyte, if necessary, until the electrolyte level is up to the Upper line (Fig. 1) on the battery case.
5. Install the battery vent caps.
6. Charge the battery for 1 hour at 25 to 30 amps or 6 hours at 4 to 6 amps (Fig. 2). Do not overcharge the battery.

**Warning**

**Charging the battery produces gasses that can explode.**

**Never smoke near the battery and keep sparks and flames away from battery.**

7. When the battery is fully charged, unplug the charger from the electrical outlet, then disconnect the charger leads from the battery posts (Fig. 2).
8. Install the battery in the tractor and connect the battery cables; refer to the *Operator's Manual*, Installing the Battery.

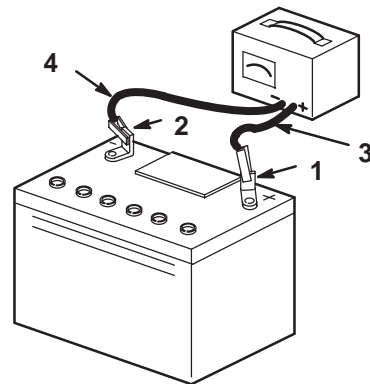


**Figure 2**

1. Positive post
2. Negative post
3. Charger red (+) wire
4. Charger black (-) wire

## Installing the Motion Control Levers

1. Remove the 4 bolts (3/8 x 1 inch) and 4 curved washers (3/8 inch) which attach the motion control levers to the control arm shafts for shipping (Fig. 3).


2. Place the levers (with the mounting plates toward the rear of the machine) on the outside of the control arm shaft and loosely secure them with the 4 bolts and curved washers removed in step 1 (Fig. 3).

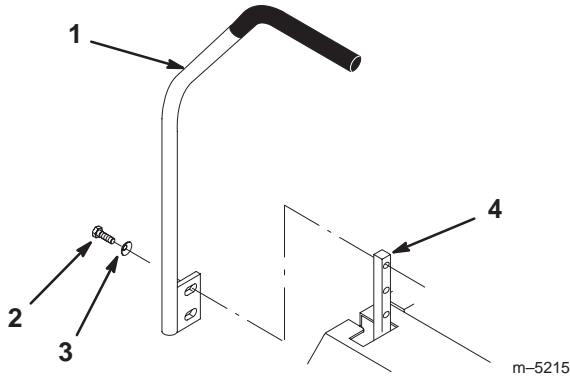

**Figure 3**

- |                       |                            |
|-----------------------|----------------------------|
| 1. Control arm        | 3. Curved washer, 3/8 inch |
| 2. Bolt, 3/8 x 1 inch | 4. Control arm shaft       |

3. Position the levers so that the bolts are in the center of the slots on the lever mounting plate and tighten the bolts until they are snug.
4. Align the front/rear position of the levers with each other while in the neutral position. Loosen the bolts and adjust the levers by sliding and/or tilting the lever(s) forward or backward until they are properly aligned.
5. If the ends of the motion control levers hit against each other while they are in the drive position (Fig. 4) (the levers are rotated in as far as possible), make adjustments by moving the levers outward to the neutral lock position and carefully bend them outward. Move them back to the drive position and check for clearance. Repeat if necessary.

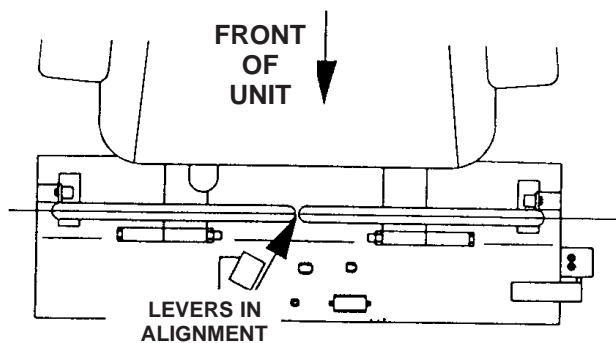


**Figure 4**

## Installing the Seat

1. Cut the plastic ties securing the seat to the machine for shipping. Remove the seat.


2. Remove the knobs and flat washers (5/16 inch) from the seat support.
3. Remove the spacers between the seat and seat support.
4. Raise the seat support on the machine (Fig. 5).
5. Slide the shoulder bolts on the bottom of the seat into the slots on the seat support (Fig. 5).
6. Secure the seat to the seat support with the spacers, flat washers and knobs removed in step 2 and 3 (Fig. 5).

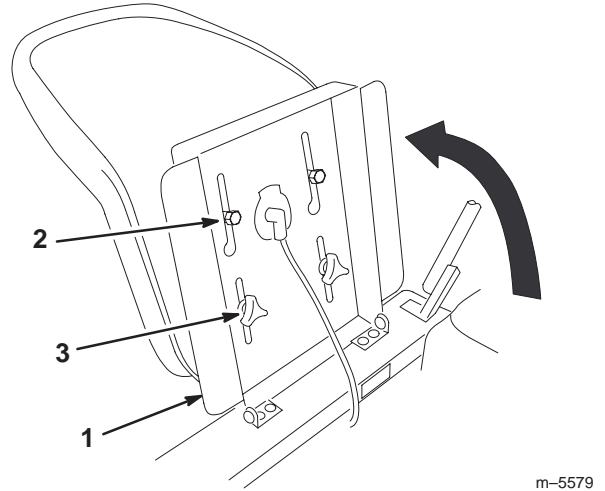

**Figure 5**

- |                  |         |
|------------------|---------|
| 1. Seat support  | 3. Knob |
| 2. Shoulder bolt |         |

**Important** Make sure the spacers are between the seat and support, and the knobs pass through the washers, seat support, spacers and into the seat (Fig. 6).

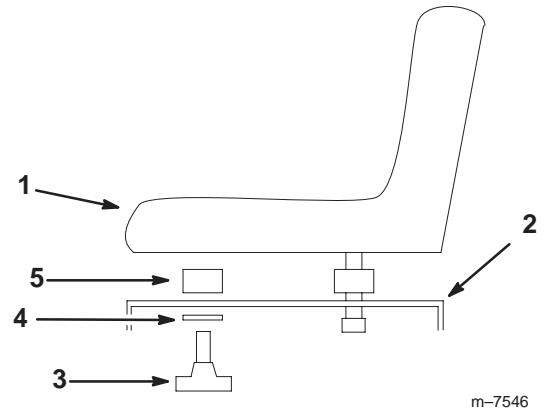

**Figure 6**

- |                 |           |
|-----------------|-----------|
| 1. Seat         | 4. Washer |
| 2. Seat support | 5. Spacer |
| 3. Knob         |           |

7. Lower the seat and adjust it if necessary; refer to Positioning the Seat in the *Operator's Manual*.

## **Washing the Underside of the Mower**

A hose coupling is included in loose parts for washing the underside of the mower. See the *Operator's Manual* for the proper procedure.

## **Checking the Mower Adjustment**

The mower deck was leveled at the factory. If the mower is not cutting level, adjust the side-to-side level and the front-to-rear blade slope. See the *Operator's Manual* for the proper procedure.

## **Checking the Side Discharge Chute**

Remove the plastic tie holding the side discharge chute up, and lower the chute into place.

## **Checking the Engine Oil Level**

Before you start the engine and use the machine, check the oil level in the engine crankcase; refer to Checking the Oil Level in the *Operator's Manual*.

## **Checking the Tire Pressure**

Check the front and rear tires for proper inflation. Refer to Tire Pressure in the *Operator's Manual* for the recommended inflation pressure.