



Form No. 3478-427 Rev B

Count on it.

Parts Catalog

TimeCutter® ZR4200T Zero Turn Riding Mower

Model No. 74679—Serial No. 420000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Frame Assembly 4

Deck Lift Assembly 6

Tire and Caster Assembly 8

Traction Drive Assembly 10

LH Hydro Transmission Assembly No. 139-7450 12

RH Hydro Transmission Assembly No. 139-7451 14

Brake Assembly 16

Rear Tire Assembly 18

Seat Assembly 20

Seat Assembly No. 147-5157 22

Motion Control Assembly 24

Engine and Muffler Assembly 26

Fuel and Body Styling Assembly 28

Electrical Assembly 30

 
42 Inch Deck and Decal Assembly 32

Model Specific Assembly 34

Clutch Assembly 36

Attachments and Accessories 38


Frame Assembly

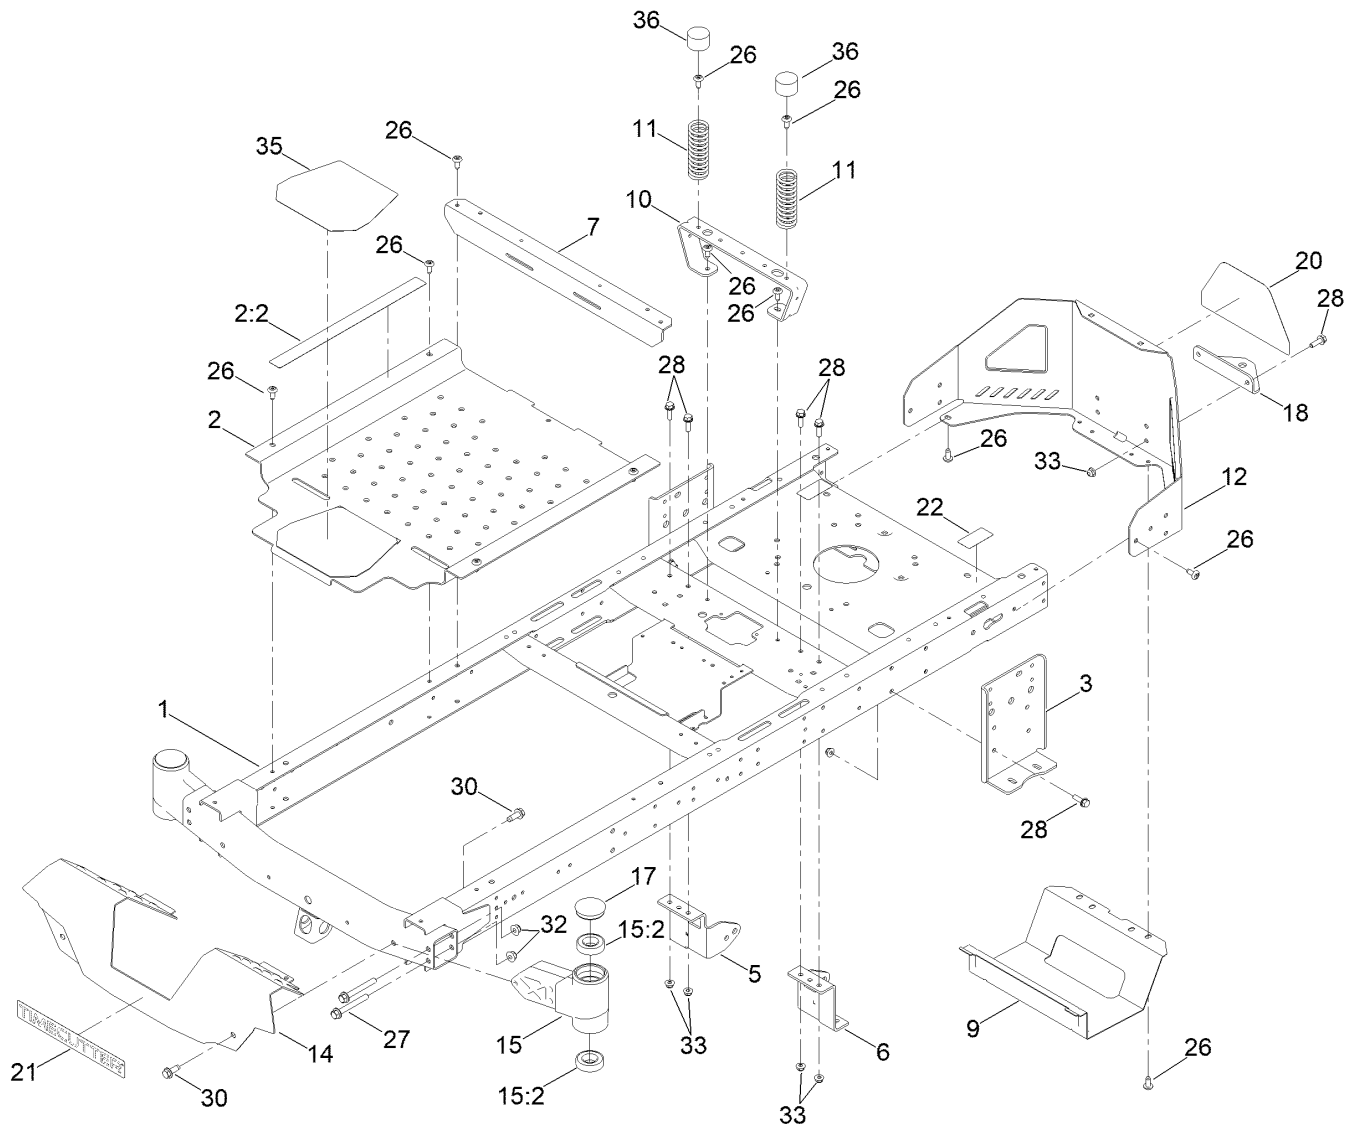

Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-9820-01	1	Frame Assembly	17	138-7200	2	Cap-Grease
2	140-5045	1	Pan-Floor ASM	18	117-1232-03	1	Bracket-Hitch
2:2	144-5288	1	Decal-Warning	20	139-5890	1	Decal-Timecutter
3	138-7520-01	2	Plate-Mount, Hydro	21	139-2387	1	Decal-Timecutter
5	137-7020-01	1	Mount-Hydro, Front (Right)	22	121-2989	2	Decal-Bypass
6	139-3211-01	1	Mount-Hydro, Front (Left)	26	138-9753	20	Screw
7	138-9791-01	1	Brace-Cross	27	139-2429	4	Screw-HHF
9	138-0867-03	1	Guard-Muffler	28	139-2596	14	Screw-HHF
10	138-6036-03	1	Support-Seat	30	139-2428	4	Screw-HWH
11	138-2548	2	Spring-Compression	32	139-2430	4	Nut-HF, NI
12	138-9820-03	1	Guard-Engine	33	119-4041	14	Nut-HF
14	138-9827-01	1	Footrest	35	139-3220	1	Tread-Step
15	163-6006	2	Axle-Stub	36	701178	2	Cap-Protector
15:2	109-3678	2	Bearing-Ball				

 
Deck Lift Assembly

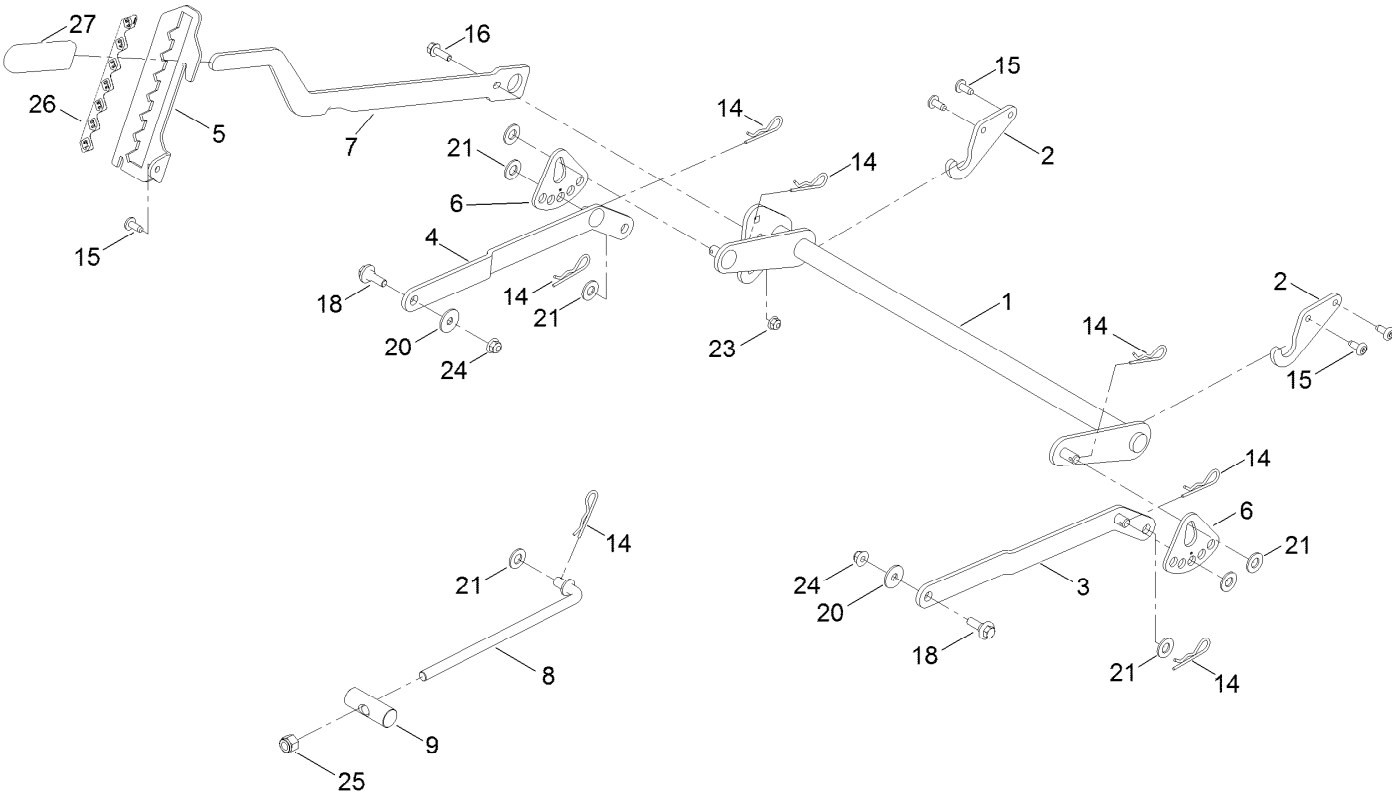

Deck Lift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-7093-03	1	Deck Lift ASM	15	138-9753	5	Screw
2	138-6021	2	Bracket-Pivot, Decklift	16	139-2596	1	Screw-HHF
3	137-9844	1	LH Arm ASM	18	137-9847	2	Screw-Shoulder
4	137-9846	1	RH Arm ASM	20	140-5063	2	Washer-Hardened, Cz
5	139-2350-01	1	Bracket-HOC	21	139-2611	7	Washer-Flat
6	138-2564	2	Plate-Adjustment, HOC	23	119-4041	1	Nut-HF
7	137-7087-03	1	Lever-Lift	24	119-4042	2	Nut-HF, NI
8	138-6050	1	Rod-Mount, Deck	25	139-1725	1	Nut-Hex
9	119-8810	1	Pin-Pivot	26	140-2748	1	Decal-HOC
14	139-2562	7	Pin-Hair	27	1-633268	1	Grip-Lever

 
Tire and Caster Assembly

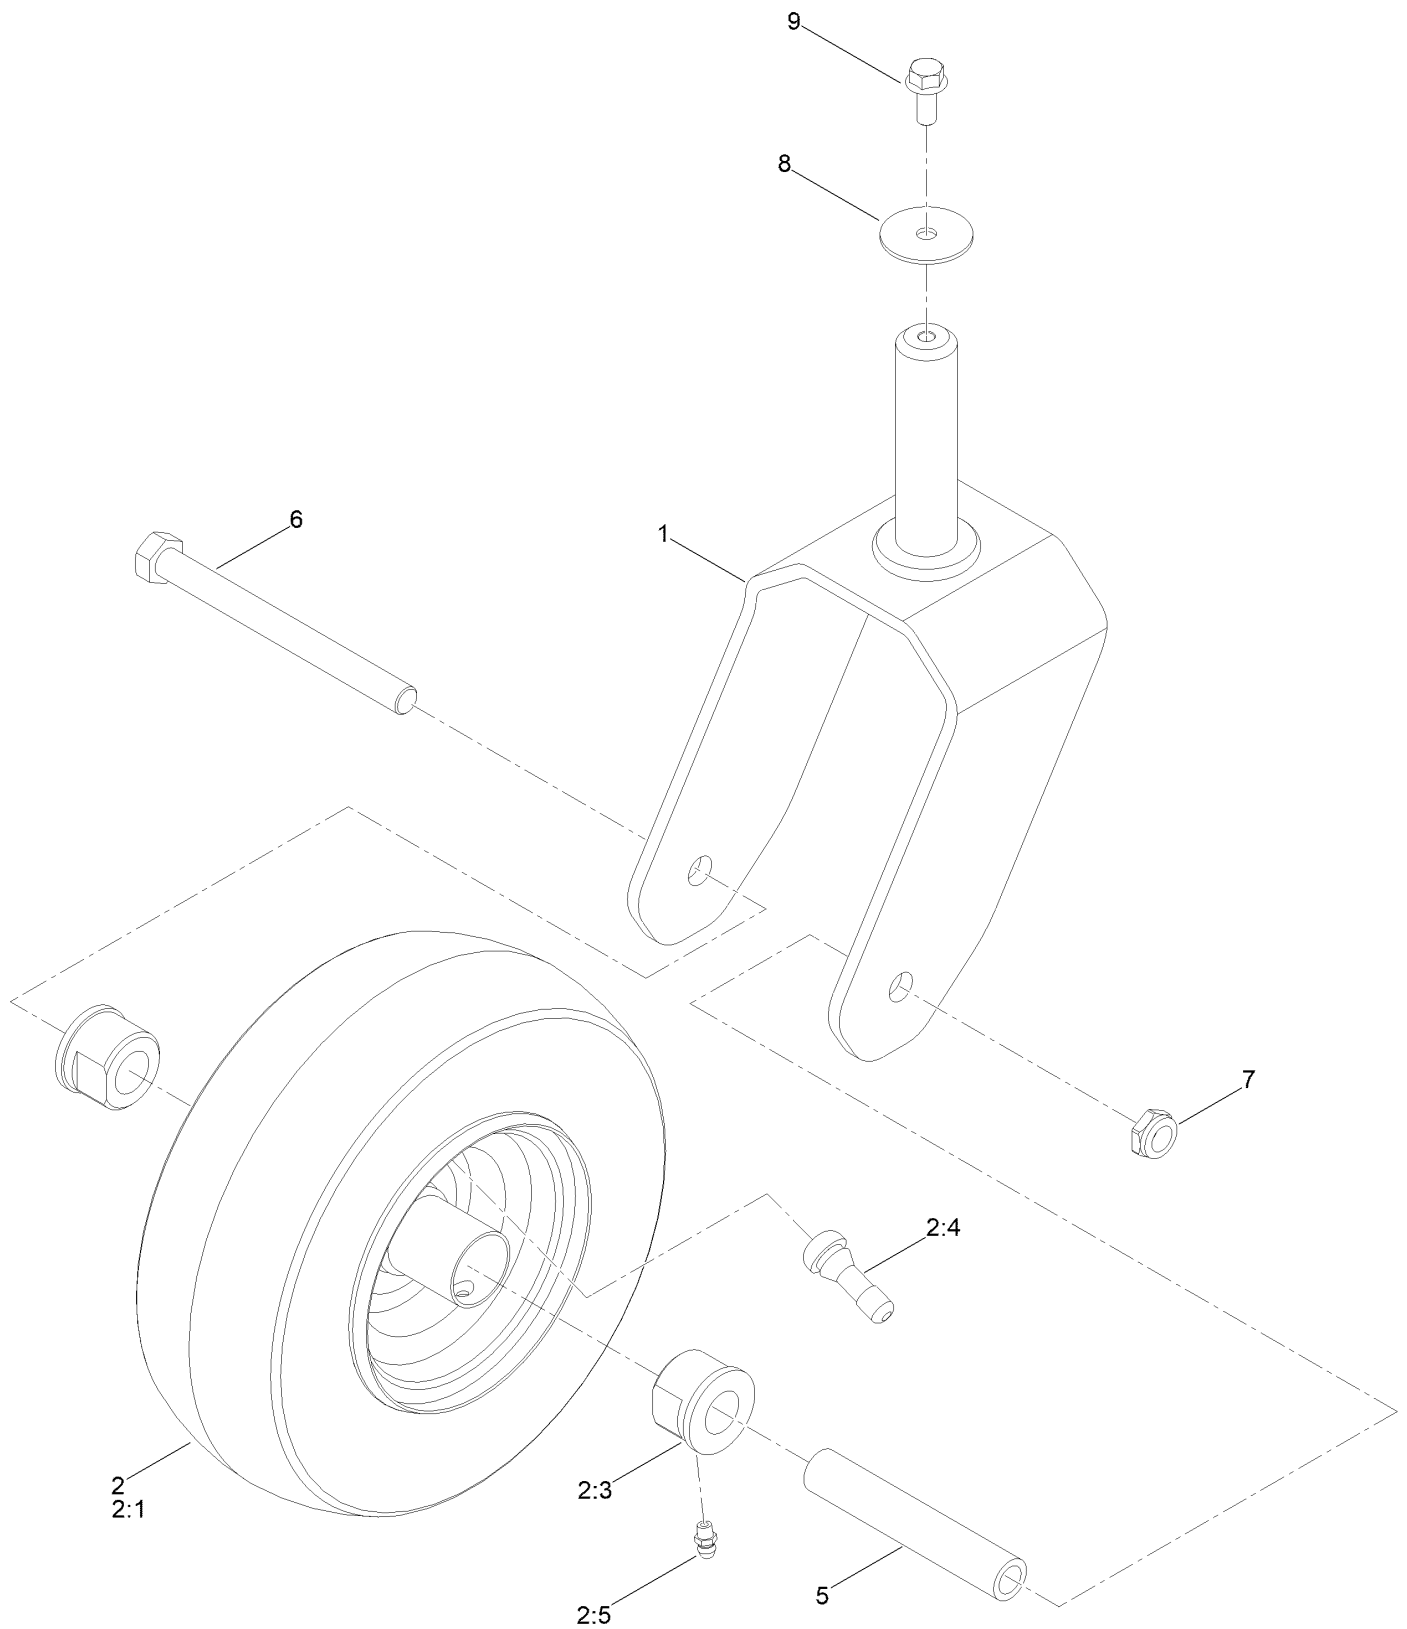

Tire and Caster Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	139-3274-01	2	Fork ASM	5	138-7240	2	Bushing-Spanner
2	147-2935	2	Tire ASM	6	139-2607	2	Screw-HH
2:1	147-2936	1	Tire	7	139-2617	2	Nut-Lock, NI
2:3	114-1640	2	Bushing-Flange	8	115-1151	2	Washer-Flat
2:4	232-27	1	Stem-Valve	9	139-2598	2	Screw-HHF
2:5	302-5	1	Fitting-Grease				

 
Traction Drive Assembly

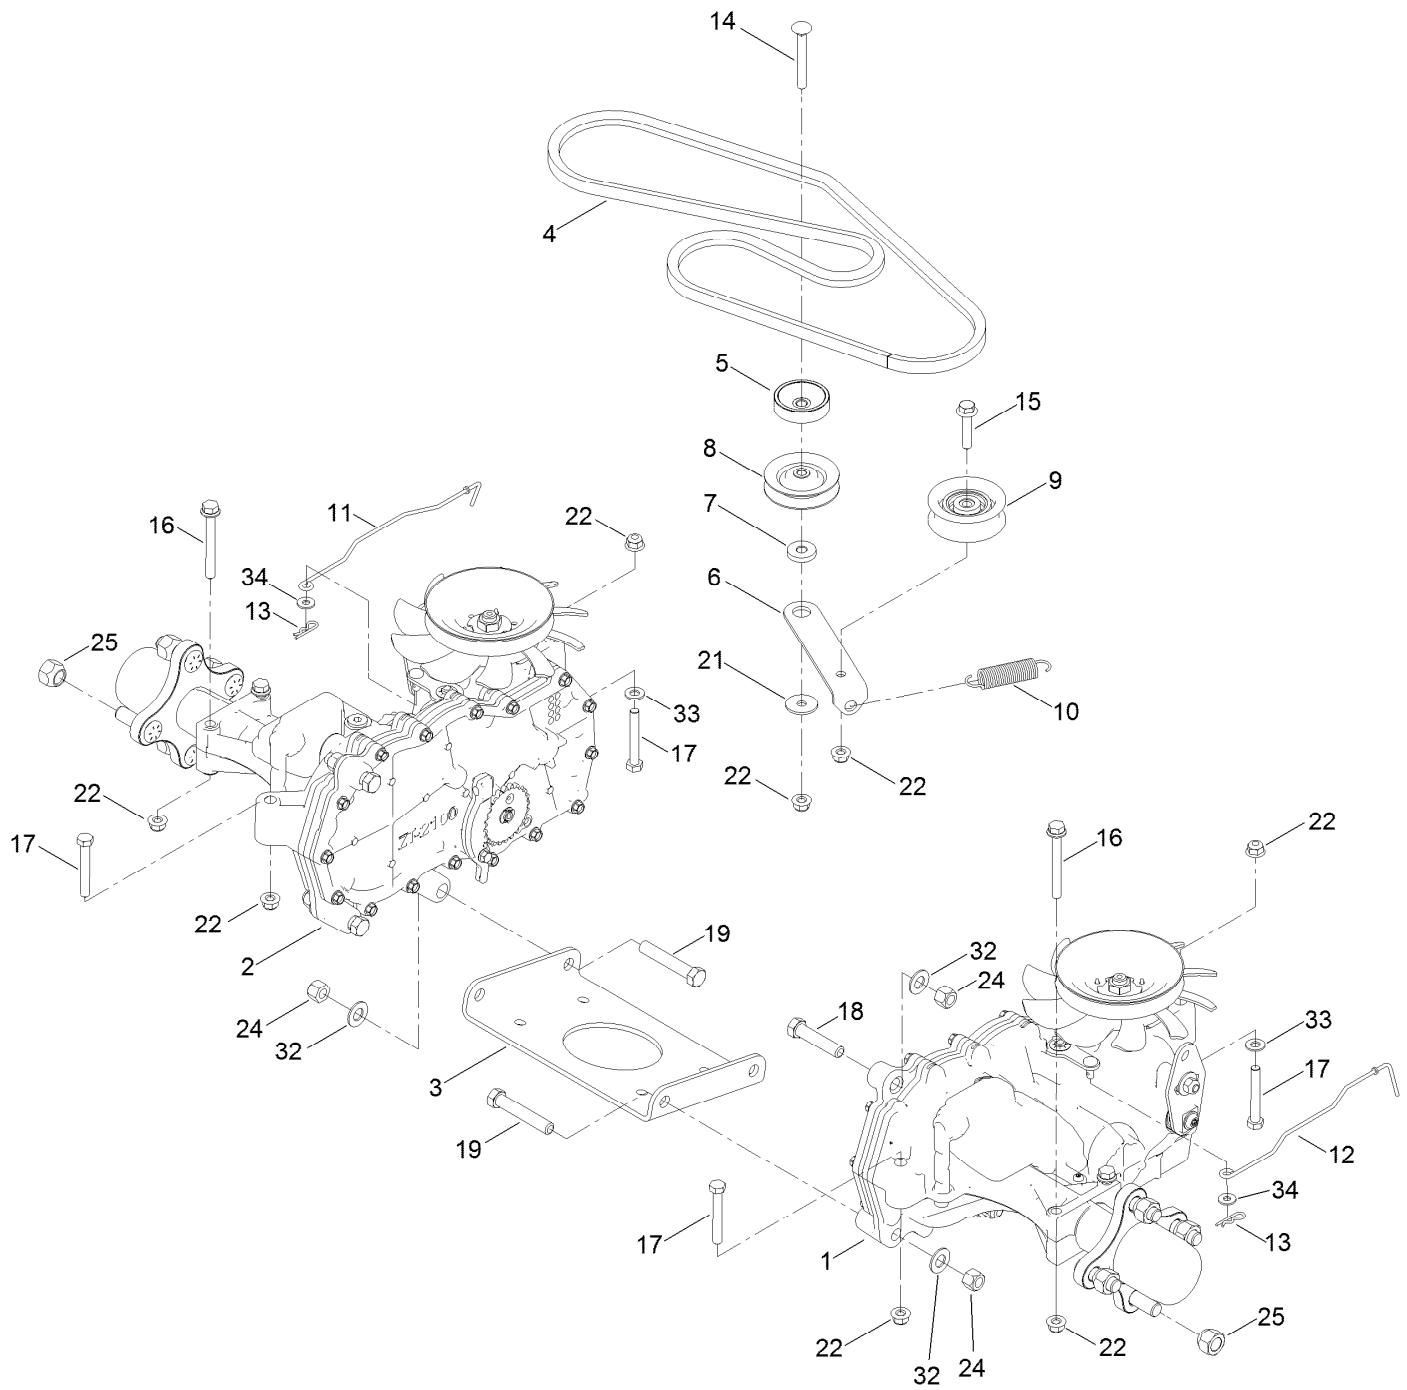

Traction Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	139-7450	1	LH Hydro Transaxle ASM	14	139-2588	1	Screw-CARR
2	139-7451	1	RH Hydro Transaxle ASM	15	140-5024	1	Screw-HHF
3	138-2571-03	1	Crossplate-Hydro	16	138-7590	4	Screw-HHF
4	139-2399	1	V-Belt	17	120-9738	4	Screw-HH
5	138-9809	1	Spacer	18	139-2605	2	Screw-HH
6	138-7276	1	Arm-Idler	19	139-2603	4	Screw-HH
7	138-7277	1	Spacer-Arm, Idler	21	5-4460	1	Washer-Pivot
8	68-0030	1	Idler	22	119-4041	10	Nut-HF
9	138-7597	1	Pulley-Idler, Flat	24	119-4039	6	Nut-Hex
10	137-7040	1	Spring-Return, Pedal	25	139-2564	8	Nut-Lug
11	138-7245	1	Rod-Bypass, RH	32	139-2610	6	Washer-Flat
12	138-7243	1	Rod-Bypass, LH	33	120-9683	2	Washer-Plain
13	137-3083	2	Pin-Hair	34	119-8952	2	Washer-Spcl

 LH Hydro Transmission Assembly No. 139-7450

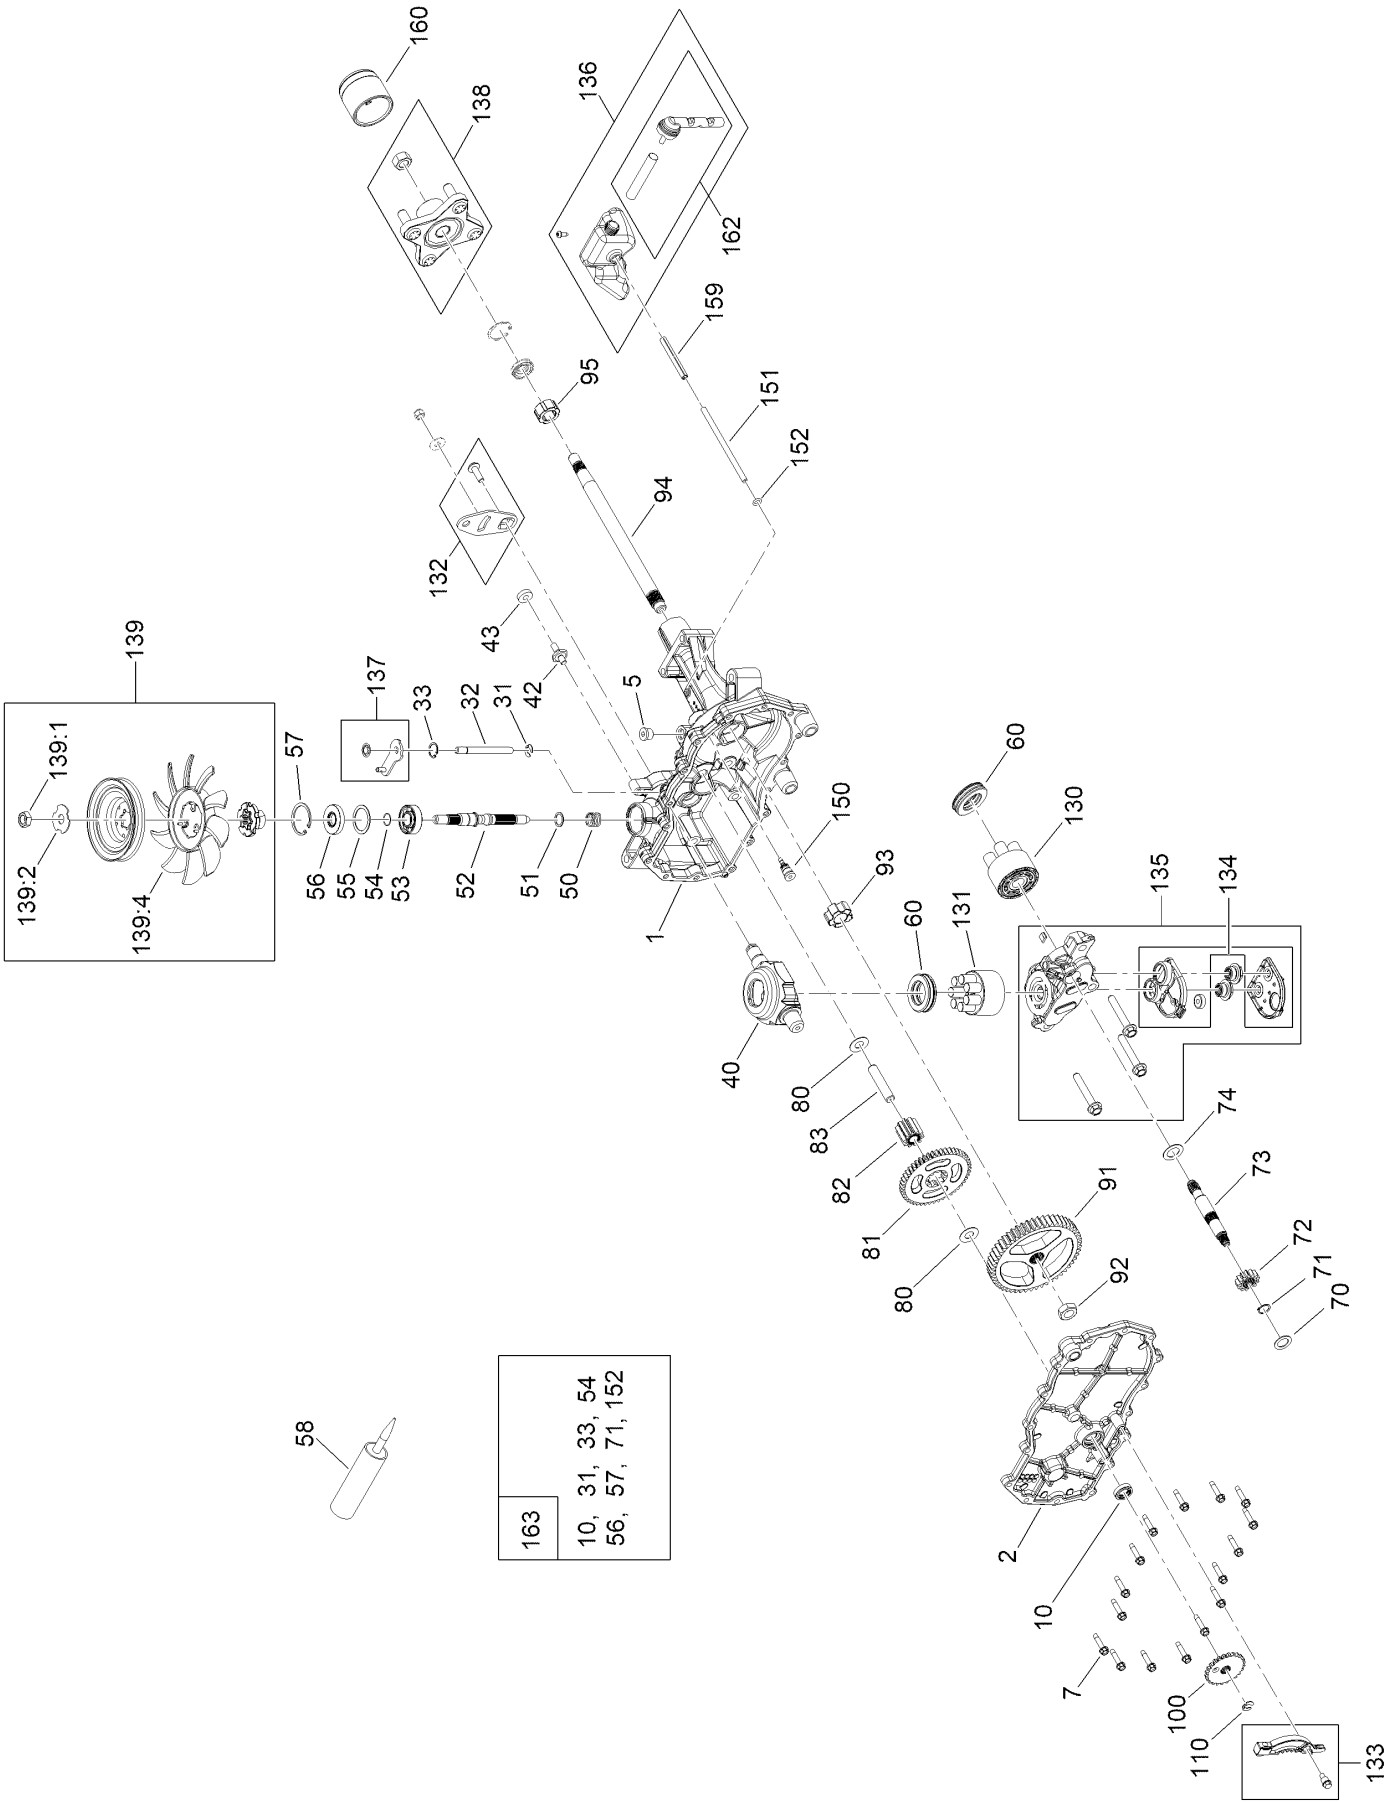


LH Hydro Transmission Assembly No. 139-7450 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-5532	1	Main Housing ASM	82	104-5318	1	Gear-Jackshaft, 10T
2	120-5534	1	Housing Side Kit	83	104-5329	1	Pin-Jackshaft
5	104-2189	1	Plug-Thread, Straight	91	120-5539	1	Gear-Bull
7	117-5359	16	Screw-HHF	92	104-2142	1	Nut-HJ
10	104-2147	1	Sealant, Silicone - Non-Flammable ●	93	115-8314	1	Bushing-Inboard
31	106-8677	1	Ring-Retaining, External	94	120-5540	1	Shaft-Axle
32	106-8678	1	Rod-Bypass	95	120-5541	1	Bearing-Sleeve
33	106-8679	1	Ring-Retaining, Internal	100	106-8694	1	Disc-Brake, Cog
40	104-5304	1	Swashplate-Trunnion	110	106-8677	1	Ring-Retaining, External
42	104-2116	1	Stud	130	103-2666	1	Cylinder Block Kit
43	112-9853	1	Puck-Friction	131	110-8561	1	Pump Block ASM
50	133-1793	1	Spring-Block	132	117-5362	1	Control Arm Kit
51	120-5538	1	Washer	133	106-8688	1	Brake Arm Kit
52	104-5306	1	Shaft-Input	134	112-9861	1	Center Section Filter Kit
53	104-5311	1	Bearing-Ball	135	114-1634	1	Filter Kit
54	104-5307	1	Ring-Retaining	136	121-5730	1	RH Expansion Tank Kit
55	104-5308	1	Spacer	137	120-5549	1	Bypass Kit
56	104-5310	1	Seal-Lip	138	121-5731	1	Hub Kit
57	104-5309	1	Ring-Retaining	139	135-7349	1	Fan And Pulley Kit
58	104-2147	1	Sealant, Silicone - Non-Flammable	139:1	116-9714	1	Nut-HJ
60	94-6922	2	Bearing-Thrust	139:2	116-9708	1	Washer-Slotted
70	104-5339	1	Washer-Flat	139:4	135-7364	1	Fan 7.0 X 10 Blade
71	104-5340	1	Ring-Retaining	150	104-5349	1	Fitting-SAE
72	104-5316	1	Gear-Pinnion, 13T	151	115-8302	1	Hose
73	106-8683	1	Shaft-Motor	152	104-5361	1	O-Ring
74	104-5360	1	Washer	159	121-5728	1	Case-Tube
80	94-1933	1	Washer	160	125-0041	1	Cap-Axle
81	104-5317	1	Gear-10T/48T	162	139-3278	1	Breather ASM Kit
				163	120-7103	1	Seal And Ring Kit

● Not illustrated

 RH Hydro Transmission Assembly No. 139-7451

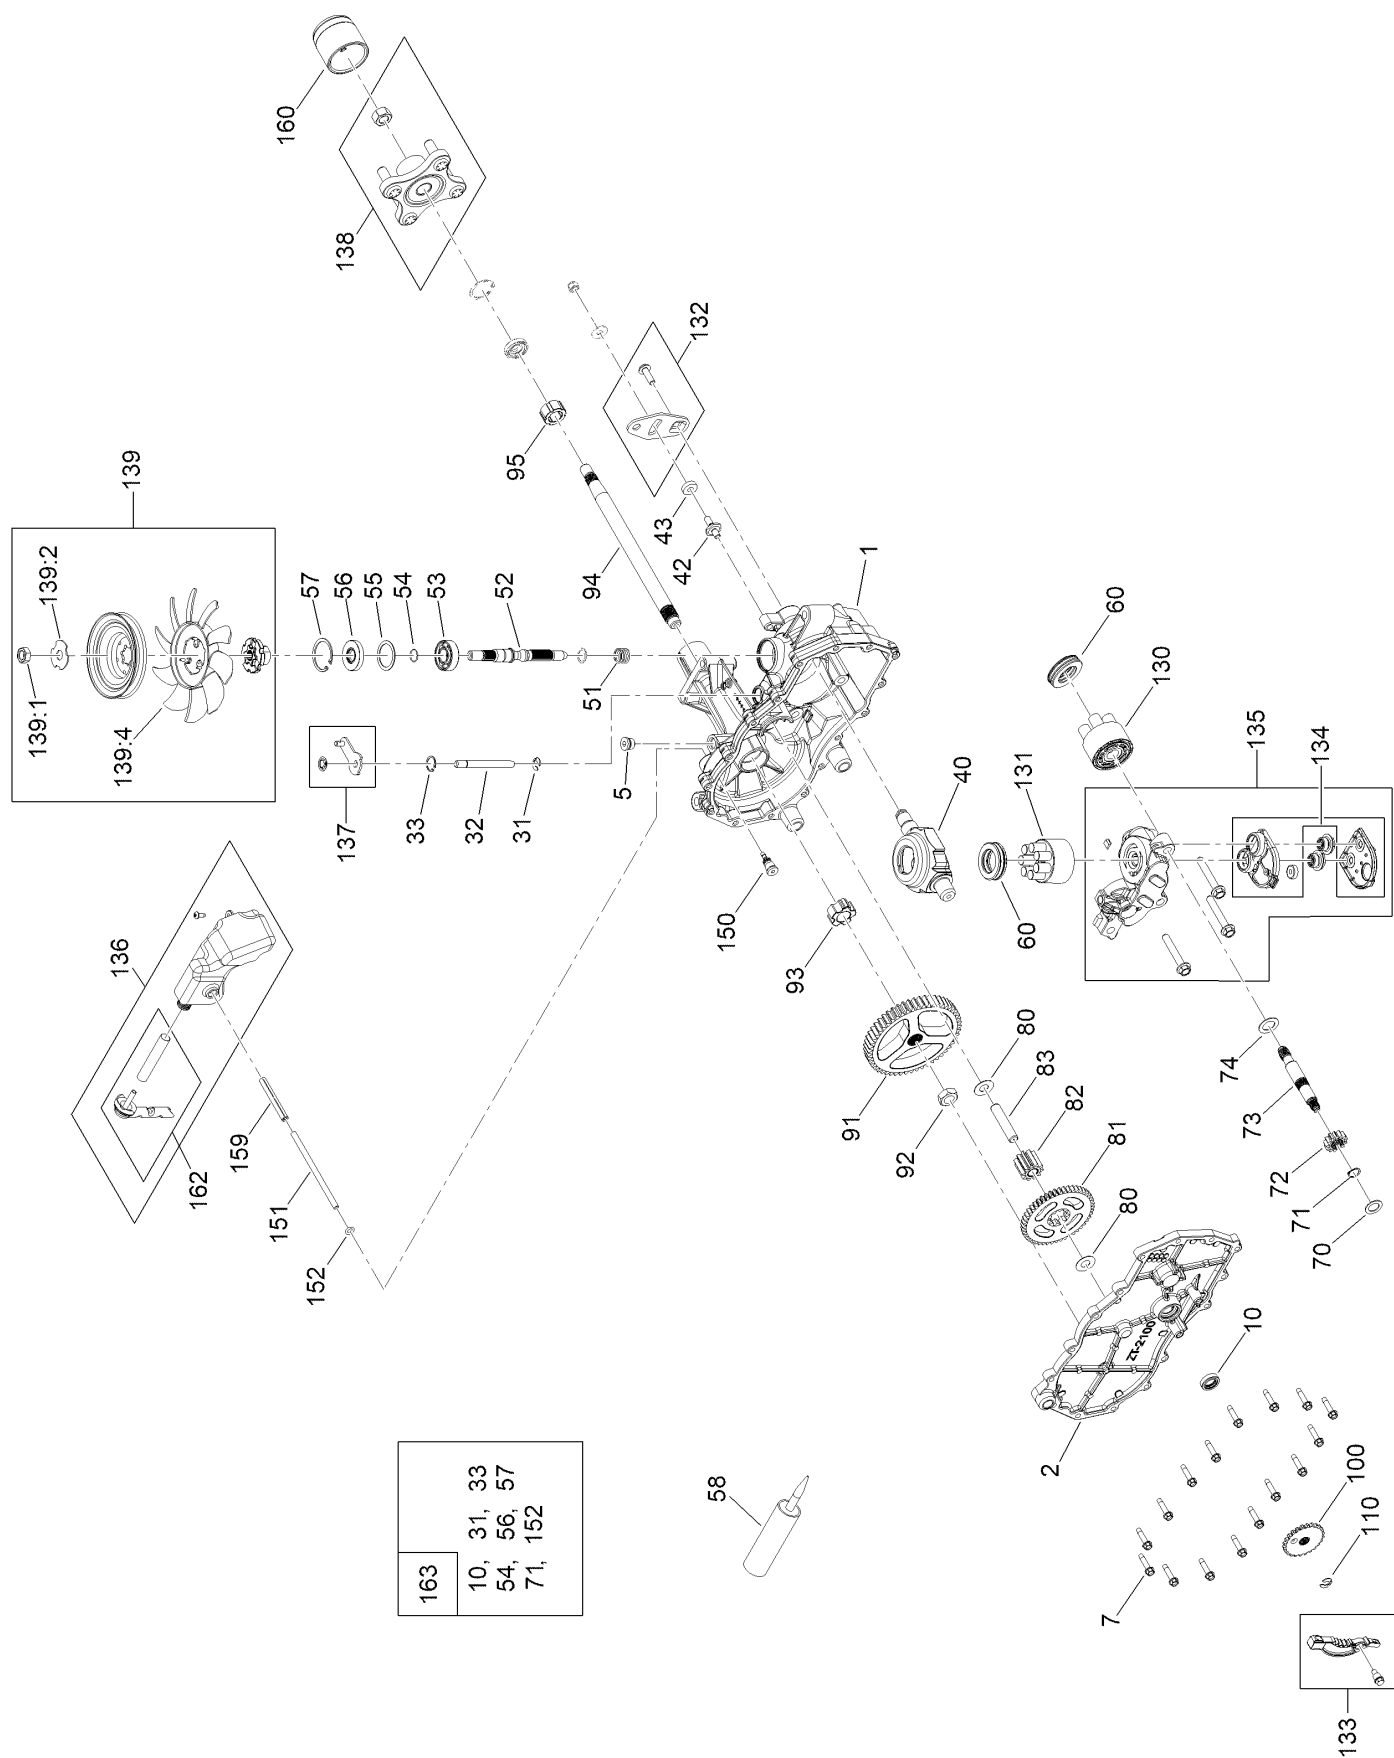


RH Hydro Transmission Assembly No. 139-7451 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-5531	1	Main Housing ASM	82	104-5318	1	Gear-Jackshaft, 10T
2	120-5533	1	Housing Side Kit	83	104-5329	1	Pin-Jackshaft
5	104-2189	1	Plug-Thread, Straight	91	120-5539	1	Gear-Bull
7	117-5359	16	Screw-HHF	92	104-2142	1	Nut-HJ
10	104-2147	1	Sealant, Silicone - Non-Flammable ●	93	115-8314	1	Bushing-Inboard
31	106-8677	2	Ring-Retaining, External	94	120-5540	1	Shaft-Axle
32	106-8678	1	Rod-Bypass	95	120-5541	1	Bearing-Sleeve
33	106-8679	1	Ring-Retaining, Internal	100	106-8694	1	Disc-Brake, Cog
40	104-5304	1	Swashplate-Trunnion	110	106-8677	1	Ring-Retaining, External
42	104-2116	1	Stud	130	103-2666	1	Cylinder Block Kit
43	112-9853	1	Puck-Friction	131	110-8561	1	Pump Block ASM
51	133-1793	1	Spring-Block	132	117-5362	1	Control Arm Kit
51	120-5538	1	Washer	133	106-8688	1	Brake Arm Kit
52	104-5306	1	Shaft-Input	134	112-9862	1	Center Section Filter Kit
53	104-5311	1	Bearing-Ball	135	114-1634	1	Filter Kit
54	104-5307	1	Ring-Retaining	136	121-5735	1	LH Expansion Tank Kit
55	104-5308	1	Spacer	137	107-2489	1	Bypass Arm Kit
56	104-5310	1	Seal-Lip	138	121-5731	1	Hub Kit
57	104-5309	1	Ring-Retaining	139	135-7349	1	Fan And Pulley Kit
58	104-2147	1	Sealant, Silicone - Non-Flammable	139:1	116-9714	1	Nut-HJ
60	94-6922	2	Bearing-Thrust	139:2	116-9708	1	Washer-Slotted
70	104-5339	1	Washer-Flat	139:4	135-7364	1	Fan 7.0 X 10 Blade
71	104-5340	1	Ring-Retaining	150	104-5349	1	Fitting-SAE
72	104-5316	1	Gear-Pinnion, 13T	151	115-8302	1	Hose
73	106-8683	1	Shaft-Motor	152	104-5361	1	O-Ring
74	104-5360	1	Washer	159	121-5728	1	Case-Tube
80	94-1933	1	Washer	160	125-0041	1	Cap-Axle
81	104-5317	1	Gear-10T/48T	162	139-3278	1	Breather ASM Kit
				163	120-7103	1	Seal And Ring Kit

● Not illustrated

 
Brake Assembly

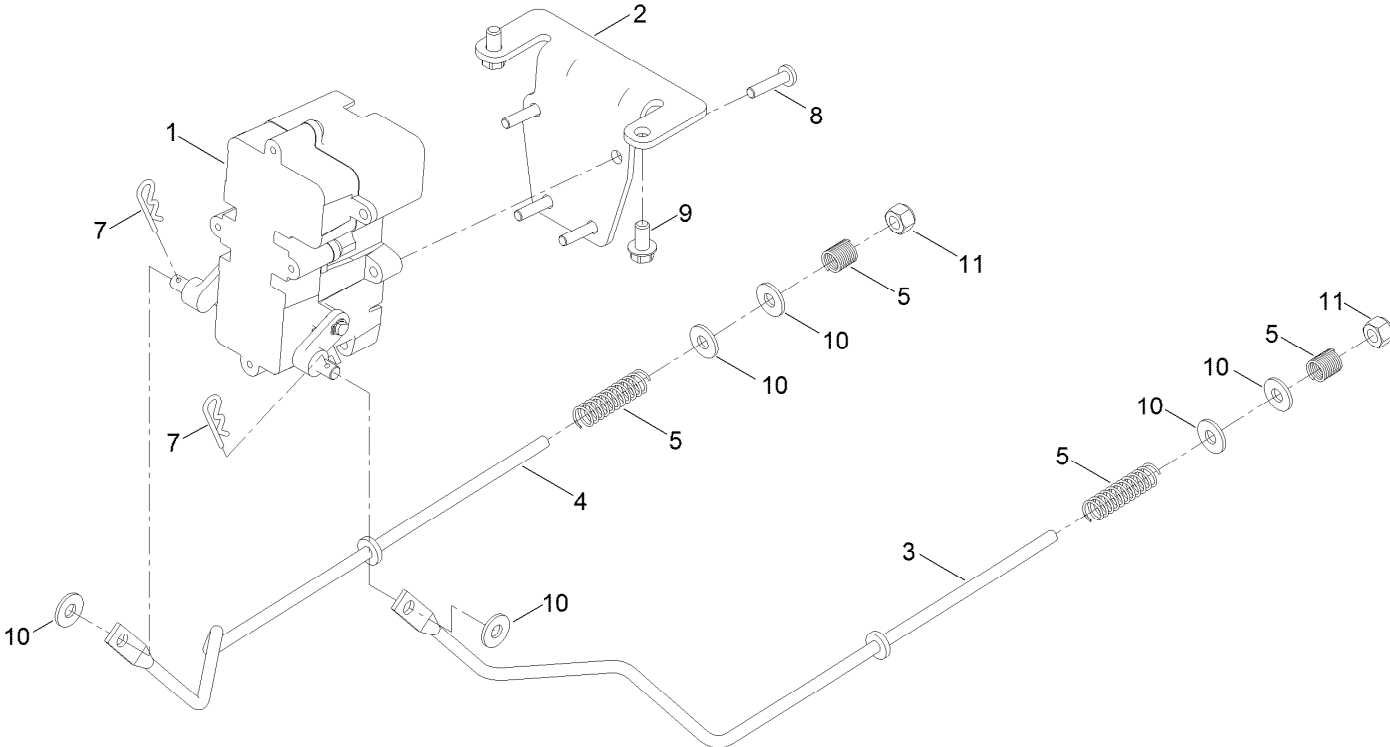

Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-2514	1	Brake Box ASM	7	137-3083	2	Pin-Hair
2	133-9284-03	1	Bracket-Mount, Brake	8	32144-36	4	Screw-PPH
3	138-2591	1	Rod-Brake, LH	9	32144-4	2	Screw-HWH
4	138-2592	1	Rod-Brake, RH	10	119-8952	6	Washer-Spcl
5	117-1169	4	Spring-Compression	11	137-3088	2	Nut-Hex

 Rear Tire Assembly

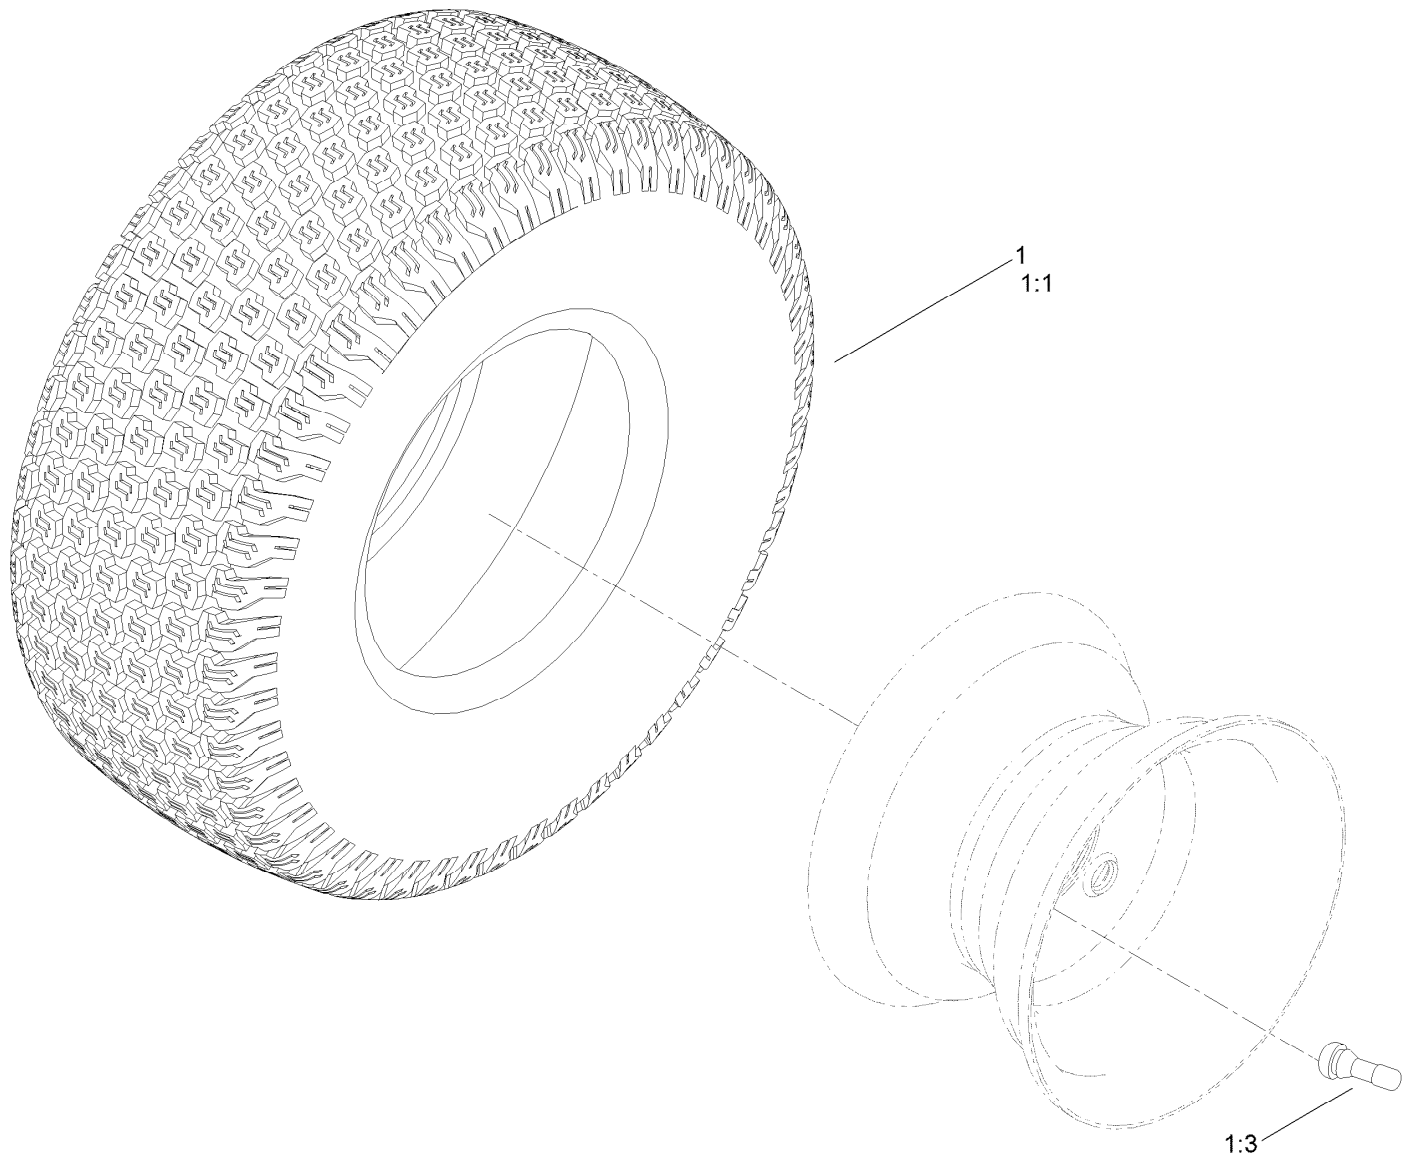


Rear Tire Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	139-5846	2	Tire ASM	1:3	232-27	1	Stem-Valve
1:1	126-1618	1	Tire	1:99	107-2491	1	Tube-Tire ●

● Not illustrated


 
Seat Assembly

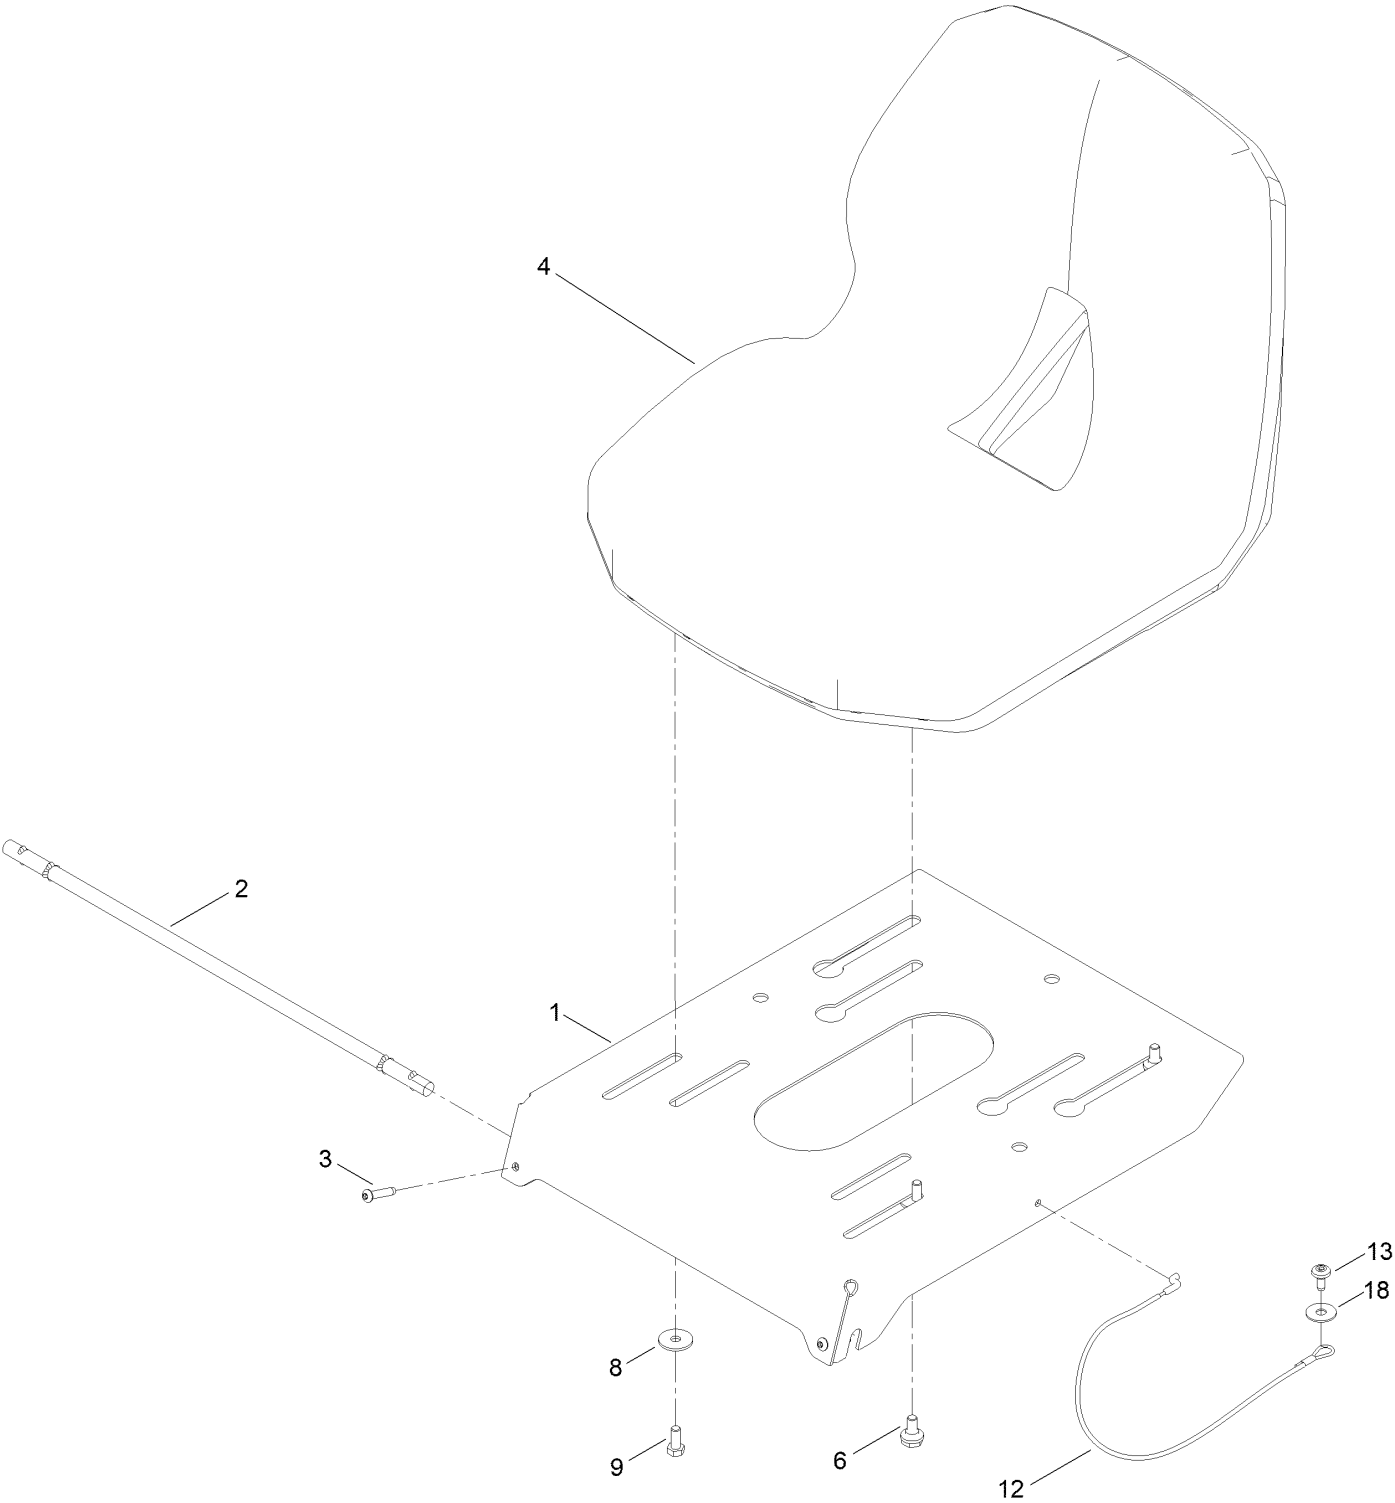

Seat Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-9781-03	1	Pan-Seat	8	5-4460	2	Washer-Pivot
2	138-7555	1	Rod-Pivot	9	137-3052	2	Screw-HH
3	137-3010	2	Screw-BHCS	12	139-2398	1	Cable-Lanyard
4	147-5157	1	Seat-16 In	13	120-7950	1	Screw-Torx
6	37-8771	2	Bolt-Shoulder, HF	18	147-5287	1	Washer-Flat

  
Seat Assembly No. 147-5157

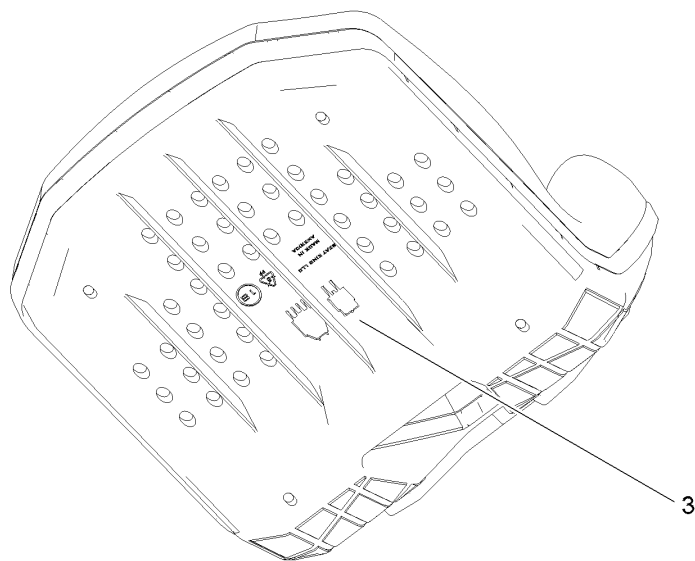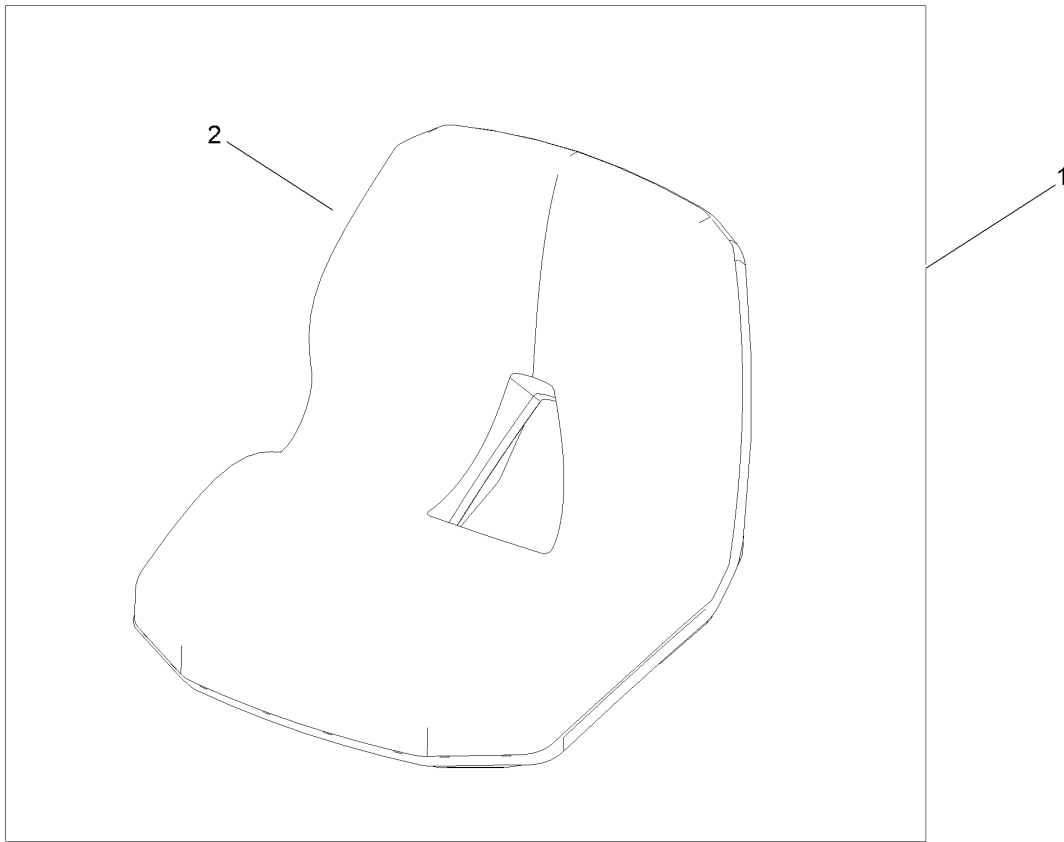

Seat Assembly No. 147-5157 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	139-5891	1	Seat-16 In
2	147-2983	1	Cover-Seat
3	82-2190	1	Switch-Bail

 Motion Control Assembly

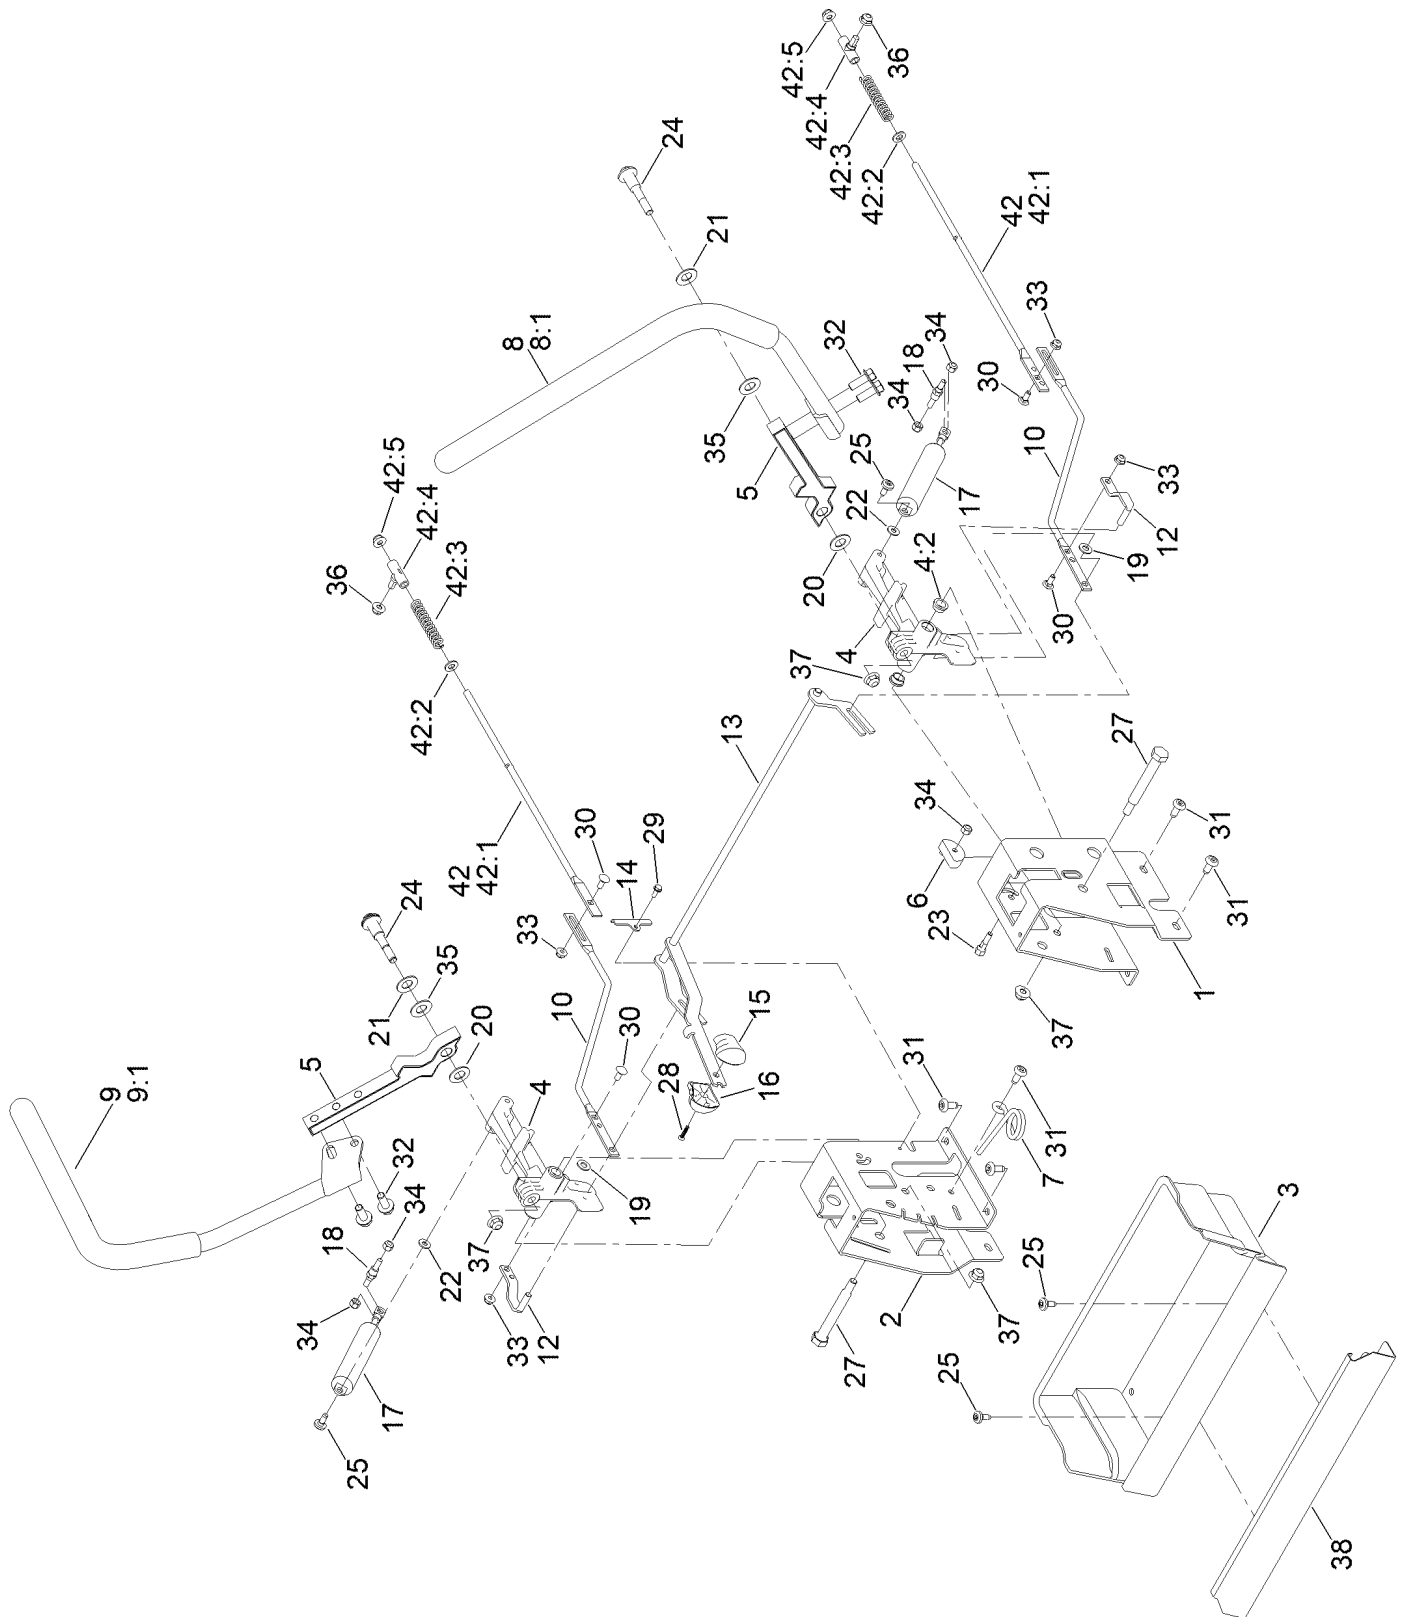


Motion Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	163-6075-03	1	Plate-Control Box, LH	22	119-8952	2	Washer-Spcl
2	163-6076-03	1	Plate-Control Box, RH	23	139-5811	2	Bolt-Pivot, Eccentric
3	145-0421	1	Box-Storage	24	139-2556	2	Bolt-Pivot
4	119-3470	2	Actuator Arm ASM	25	120-7950	4	Screw-Torx
4:2	256-156	2	Bushing-Flange	27	115-5099	2	Bolt-Pivot
5	133-9299-05	2	Arm-Control	28	94-4496	1	Screw-PPH
6	139-5803	2	Eccentric	29	139-1713	2	Screw-Thd Roll
7	138-7539	2	Spring-Torsion	30	100-1445	4	Bolt-CARR
8	133-7055	1	Handle-Control, LH	31	138-9753	10	Screw
8:1	121-0726	1	Grip	32	139-2597	4	Screw-HHF
9	133-7057	1	Handle-Control, RH	33	137-3005	4	Nut-HF
9:1	121-0726	1	Grip	34	137-3088	6	Nut-Hex
10	138-2580	2	Rod-Hydro, Front	35	117-1240	2	Washer
12	121-1753	2	Pin-Rod, Hydro	36	119-4041	2	Nut-HF
13	138-9750	1	Speed Control ASM	37	119-4042	4	Nut-HF, NI
14	138-7541	2	Plate-Retainer	38	139-3280-01	1	Plate-Kick
15	132-9368	1	Knob-RH	42		2	Rod Hydro ASM ●
16	132-9369	1	Knob-LH	42:1	144-1818	1	Rod-Hydro, Rear
17	132-6853	2	Damper-Non Cavitating	42:2	120-9683	1	Washer-Plain
18	138-7215	2	Stud-Damper	42:3	138-7252	1	Spring-Compression
19	93-6079	2	Spacer-Nylon	42:4	138-7218	1	Mount-Rod, Hydro
20	120-2273	2	Washer-Flat	42:5	119-4041	1	Nut-HF
21	119-8925	2	Washer-Belleville				

● Not serviced separately

 Engine and Muffler Assembly

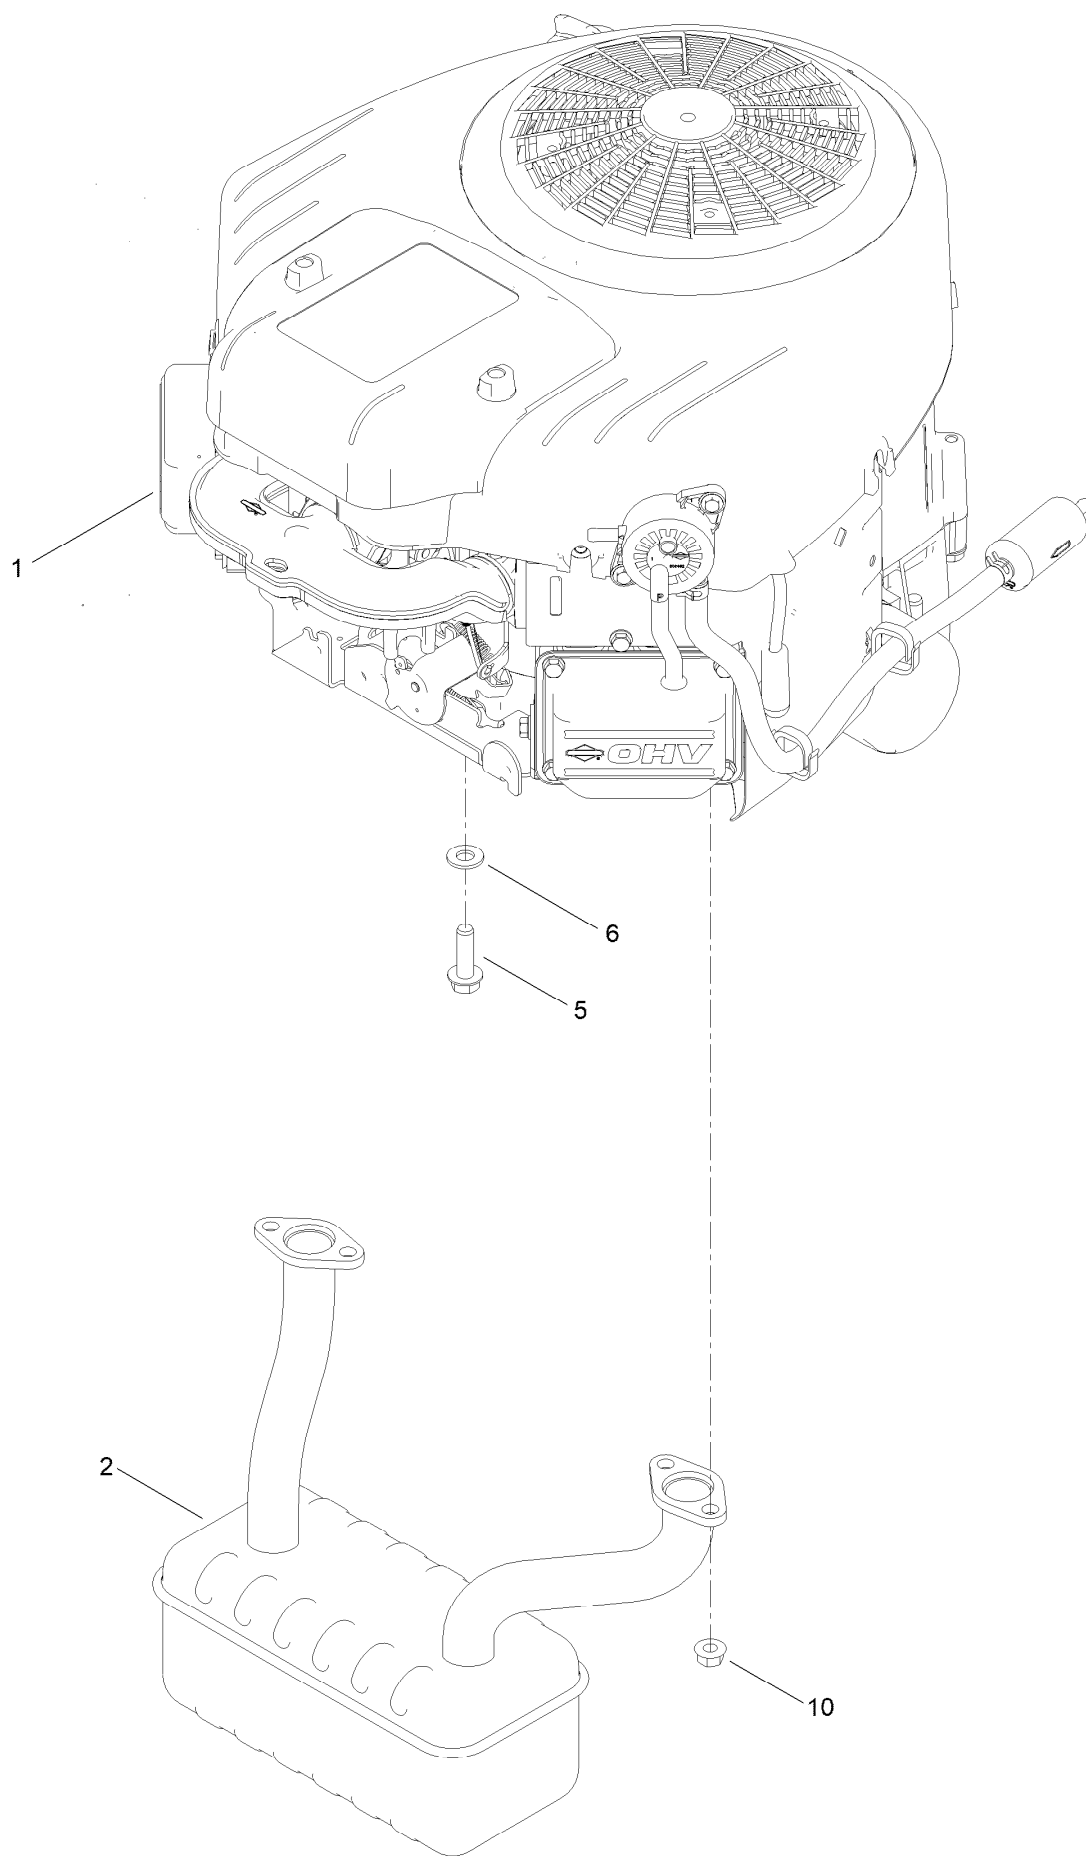

Engine and Muffler Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Engine-B&s Exi ■▲
1:1	147-5158	2	Gasket-Exhaust, Briggs Twin ●
2	145-6318	1	Muffler

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	139-2576	4	Screw-HWH
6	115-1166	3	Washer-Plain
10	33004-00	4	Nut-HF

● Not illustrated
▲ Obtain parts from www.briggsandstratton.com

■ Not serviced separately

 Fuel and Body Styling Assembly

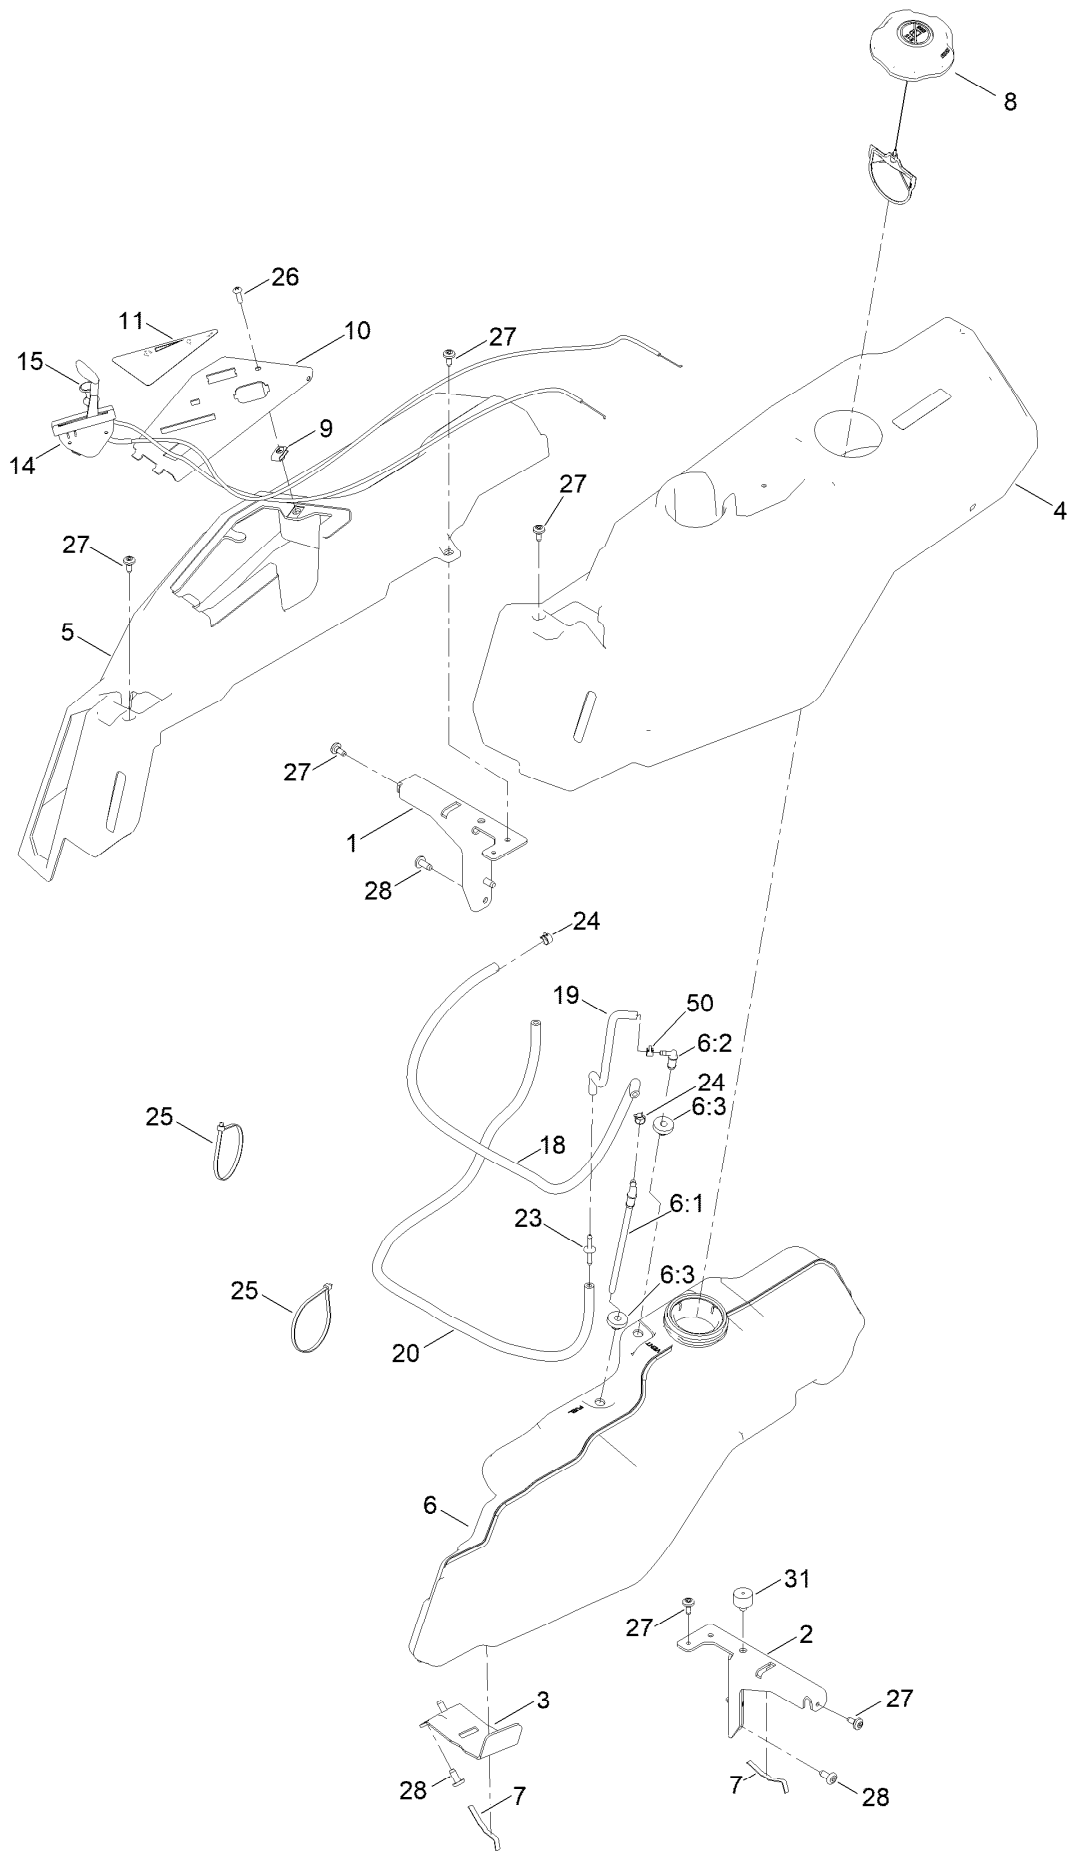


Fuel and Body Styling Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-6070-03	1	Support-Pod, RH
2	138-6071-03	1	Support-Pod, LH
3	139-3271-03	1	Support-Tank, Fuel
4	138-6074	1	Pod-LH
5	138-6075	1	Pod-RH
6	144-5304	1	Tank-Fuel ASM
6:1	139-1091	1	Connector-Elbow, 90 DEG
6:2	144-5302	1	Fitting-Elbow 90
6:3	46-6560	2	Bushing
7	609830	2	Spring
8	137-4119	1	Cap-Fuel, Ratcheting
9	107069	1	Clip
10	139-2380-03	1	Panel - Control
11	139-2391	1	Decal-Panel, Control

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
14	147-7698	1	Cable-Throttle
15	139-2402	1	Cable-Choke
18	109-0307	1	Hose-Fuel
19	136-6345	1	Hose-Fuel
20	110-3958	1	Hose-Fuel ●
23	144-1983	1	Adapter Orifice
24	2412-98	2	Clamp-Hose
25	3290-379	2	Tie-Cable
26	3258-166	1	Screw-PRH
27	120-7950	6	Screw-Torx
28	138-9753	6	Screw
31	120-7893	1	Bumper-Grommet
50	2412-80	1	Clamp-Hose

● Not illustrated

 
Electrical Assembly

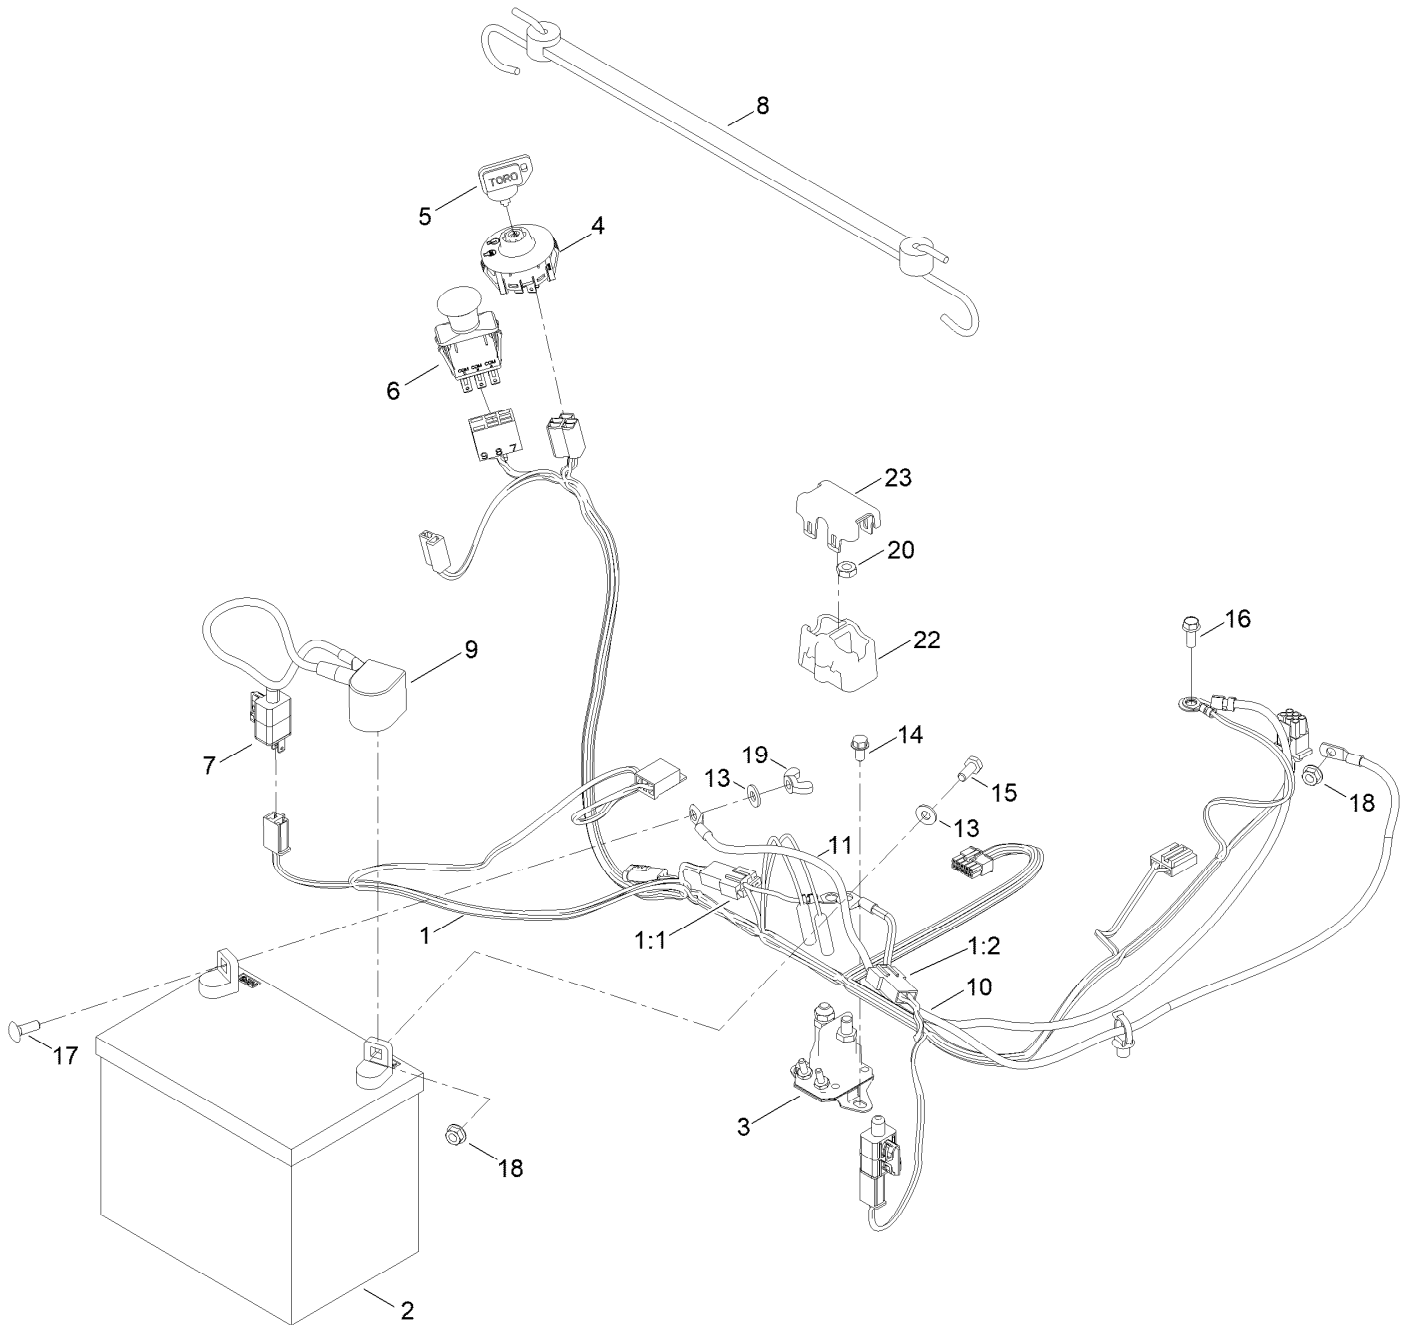

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-2521	1	Harness-Wire	11	121-5726	1	Cable-Battery, Black
1:1	109355	1	Fuse-Blade, 15 Amp	13	120-9679	2	Washer-Flat
1:2	109102	1	Fuse-Blade, 25 Amp	14	32144-4	2	Screw-HWH
2	105-1692	1	Battery- Dry, 12V, 230 CCA	15	137-3041	1	Screw-HH
3	117-1197	1	Solenoid	16	32144-85	1	Screw-HWH Thd Form
4	137-4100	1	Switch-Ignition	17	137-3053	1	Screw-CARR
5	63-8360	1	Key-Ignition	18	139-2575	2	Nut-HF
6	103-5221	1	Switch-PTO	19	32103-22	1	Nut-Wing
7	110-6765	2	Switch	20	139-2580	2	Nut-HJ
8	139-2381	1	Strap-Rubber	22	140-2080	1	Cover-Solenoid
9	140-2713	1	Cable-Battery, Pos	23	140-2081	1	Cap-Solenoid
10	139-2431	1	Cable-Battery, Red (8 Gauge)				

 
42 Inch Deck and Decal Assembly

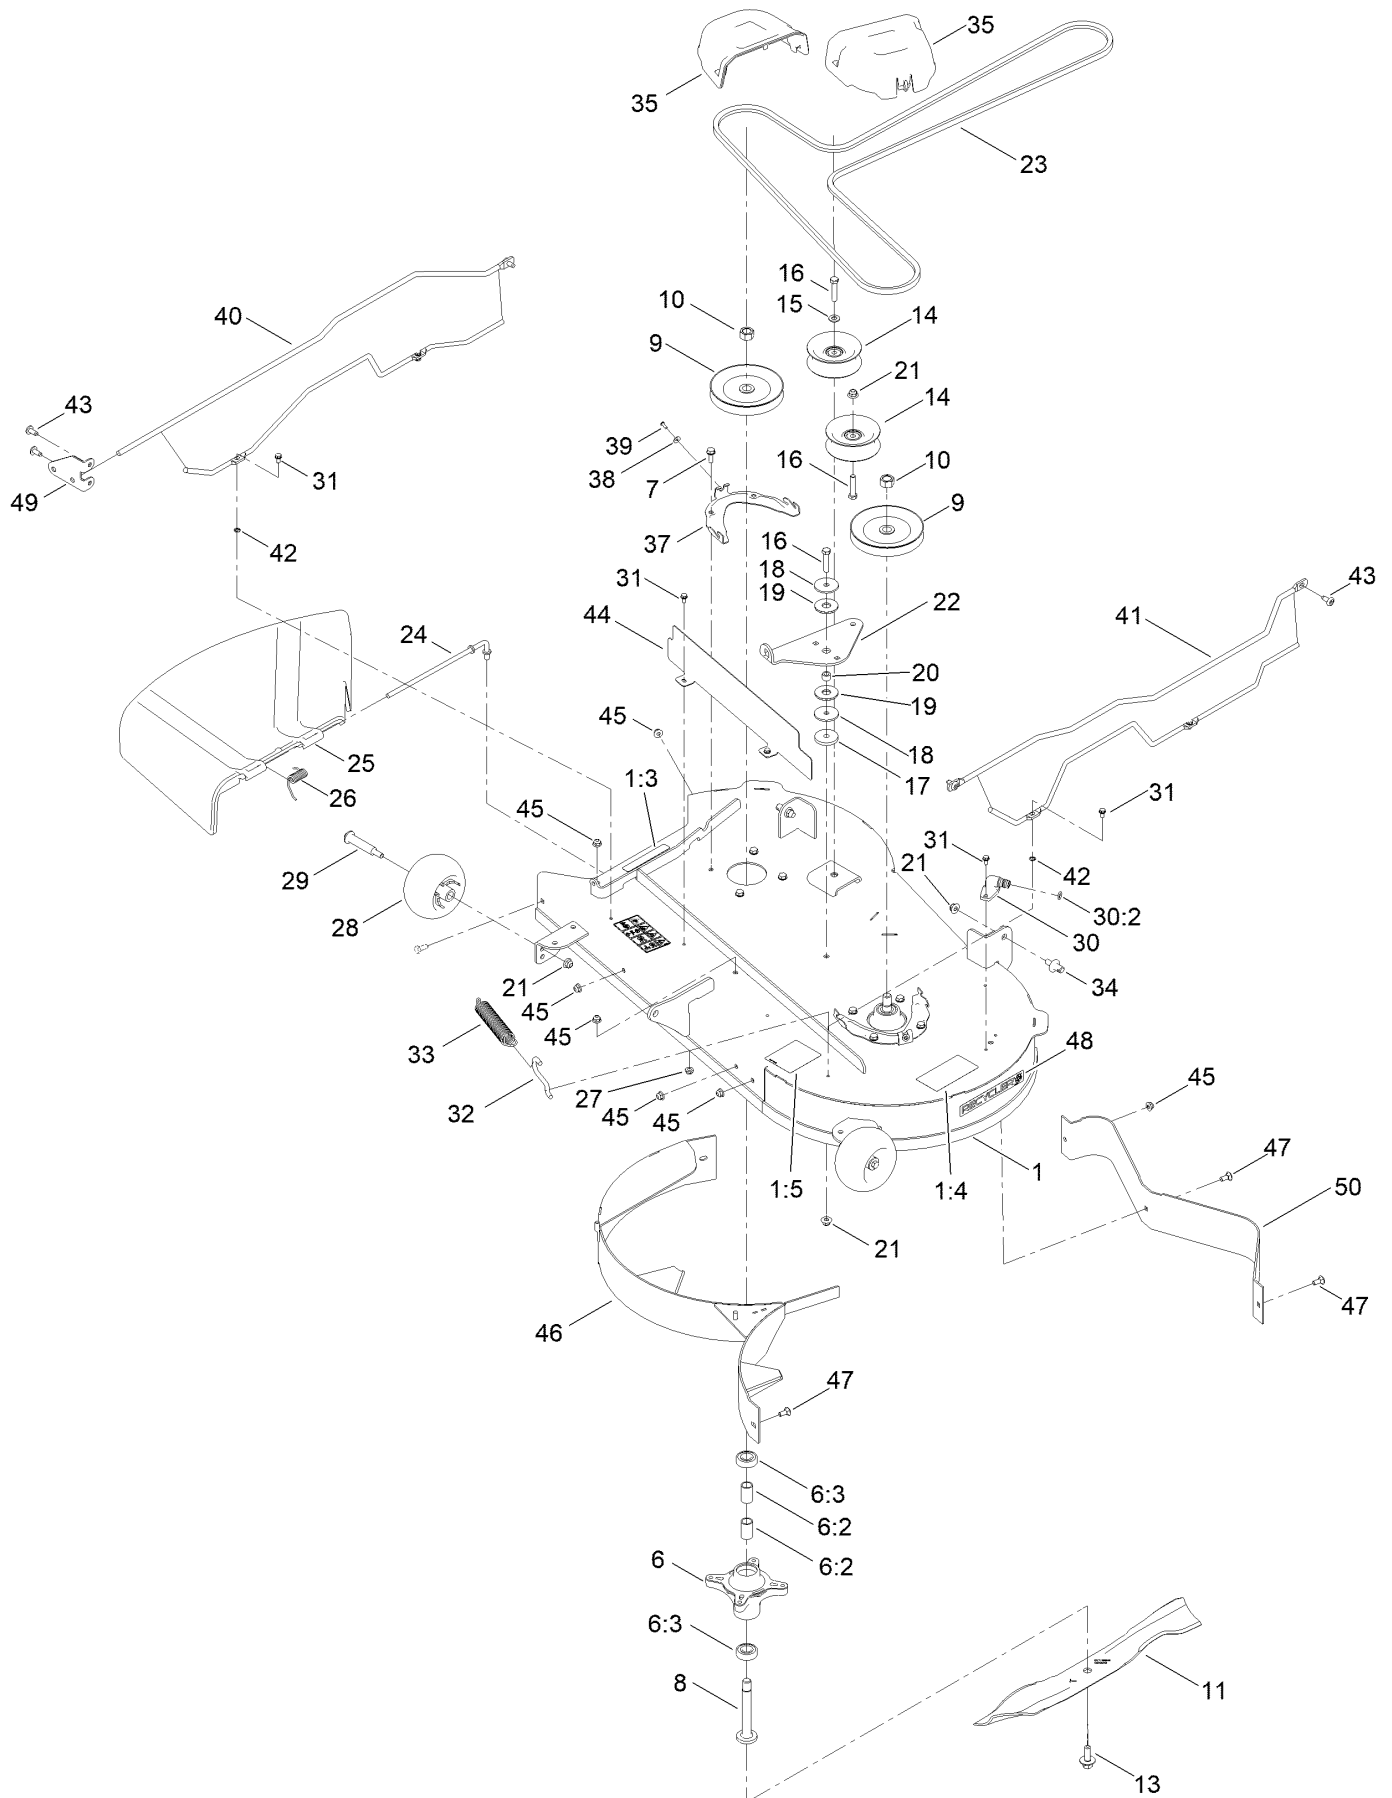

42 Inch Deck and Decal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-9769	1	42In Deck And Decal ASM	26	138-7268	1	Spring-Torsion
1:3	130-0731	1	Decal-Danger	27	121-4600	1	Nut-Hex
1:4	132-0872	2	Decal-Danger, Deck	28	1-603299	2	Roller-Scalp, Anti
1:5	105-7015	1	Decal-Routing, Belt	29	139-2551	2	Bolt-Shoulder
6	139-3214	2	Spindle ASM	30	133-9289	1	Fitting-Washout
6:2	120-7935	2	Spacer	30:2	133-9290	1	O-Ring
6:3	138-9770	2	Bearing-Ball	31	32144-4	8	Screw-HWH
7	32144-41	8	Screw-Taptite	32	138-7267	1	Hook-Spring, Return
8	117-7268	2	Shaft-Spindle	33	138-7265	1	Spring Extension
9	139-2433	2	Pulley	34	139-5871	2	Pin-Deck
10	139-2578	2	Nut-Hex	35	144-1905	2	Cover-Belt
11	117-5376-03	2	Blade-Mulch	37	139-3272-03	2	Bracket-Cover, Belt
13	145-0411	2	Bolt-Blade, Sems	38	137-3079	2	Washer-Plain
14	132-9420	2	Pulley-Idler, Flat	39	94-6961	2	Screw
15	115-1166	1	Washer-Plain	40	161-6253	1	Left Guard ASM
16	138-0722	3	Screw-HH	41	161-6254	1	Right Guard ASM
17	139-5802	1	Washer-Plain	42	1-803037	4	Nut-Retaining
18	139-1726	2	Washer-Rebound	43	138-9753	5	Screw
19	114-0463	2	Washer-Friction, Composite	44	137-2039-03	1	Shield-Front
20	115-4986	1	Spacer	45	119-4041	7	Nut-HF
21	119-4042	6	Nut-HF, NI	46	138-9837-03	1	Baffle-Recycling
22	138-7262	1	Arm-Idler (Mty/Wdm)	47	139-2630	4	Bolt-CARR
23	119-8819	1	V-Belt	48	119-2368	1	Decal-Recycler
24	137-2019	1	Rod-Pivot	49	140-5183-01	1	Plate-Mount, Guard
25	138-7502	1	Deflector-Discharge	50	140-2701-03	1	Deflector

 
Model Specific Assembly

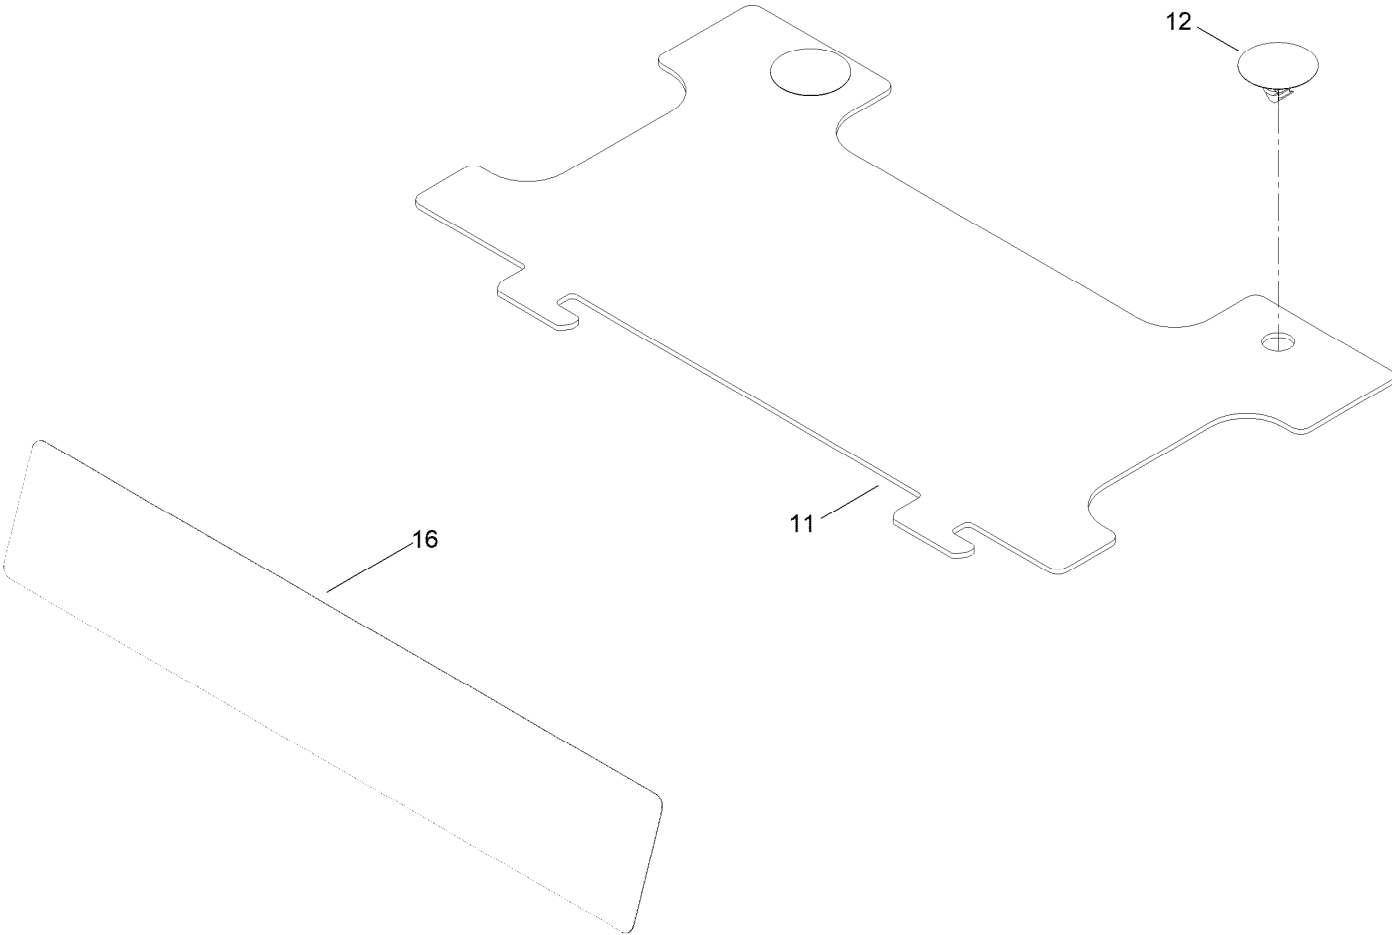

Model Specific Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11	140-0355	1	Shield
12	139-3205	2	Rivet-Pa66
16	161-4580	1	Decal Zr4200T

 Clutch Assembly

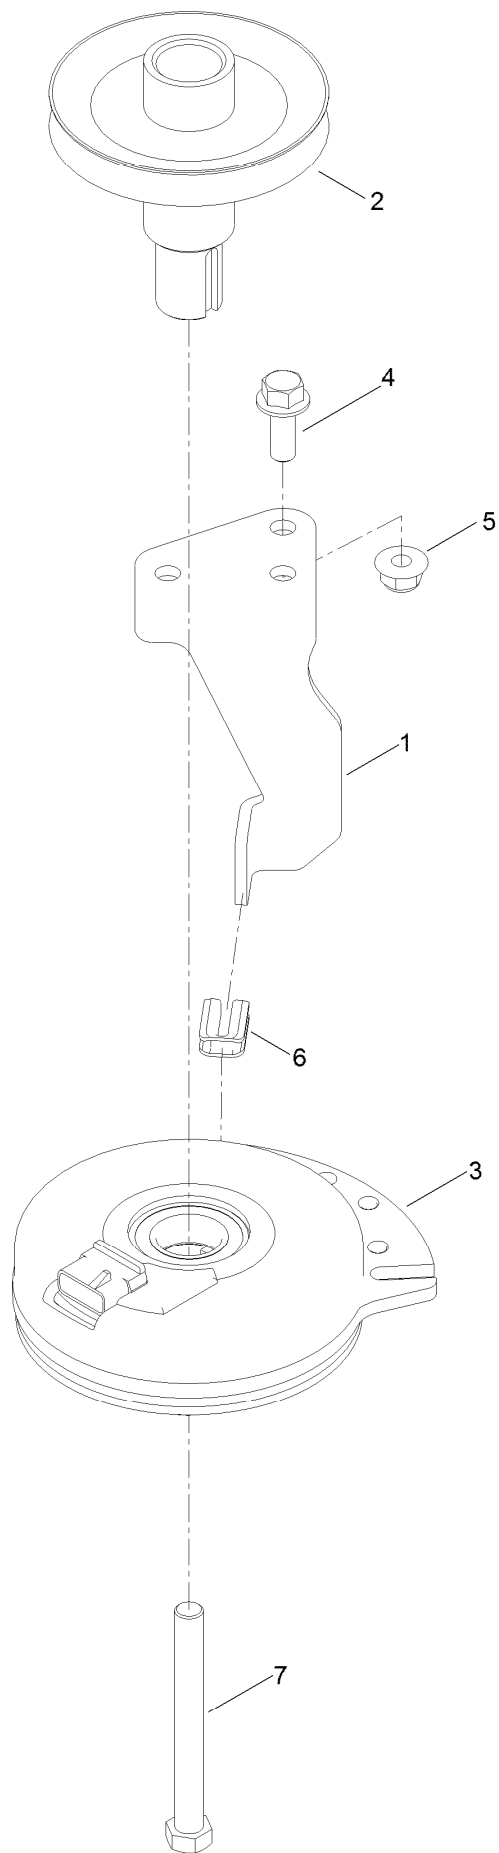

Clutch Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-7275	1	Stop-Clutch (Narrow)	5	119-4042	1	Nut-HF, NI
2	138-9792	1	Pulley-Engine	6	120-2217	1	Isolator-Clutch
3	117-7468	1	Clutch-Electric	7	139-2571	1	Screw-HH
4	139-2597	1	Screw-HHF				

Attachments and Accessories

For 74679 — TimeCutter ZR4200T Zero Turn Riding Mower

Product Name	Model/Part
Hourmeter Kit	116-5461
Seat Cover W/O Arm Rest - TC 18in.....	117-0096
Jack Kit	127-6666
Fuel Stabilizer .05 oz	130-2393
4-Cycle Fuel, Snow And Lawn 32oz Can	131-3823
Toro Premium Fuel Treatment 12oz Bottle.....	131-6572
Replacement Blade Kit	137-1999-03P
Front Weight Kit	140-2050
Assist Bar Kit	140-2052
Sunshade Kit	140-2054
LED Light Kit.....	140-2056
Deluxe Seat Kit	140-2057
Armrest Kit.....	140-2058
Jack Mount Kit	140-2711
Bagging Enhancement Kit	148-1287
42in Recycler Kit.....	148-1292
42 Inch Striping Kit.....	161-4523
Deck Footlift Assist Kit	161-4527
Floormat Kit	161-4528
Caster Wheel Kit.....	161-4530
10W30 4-Cycle Engine Oil (32oz Bottle).....	38280
Toro 4-Cycle SAE 30 Oil (32oz Bottle)	38903
Storage Cover	490-7516
Mower Deck Drive Belt, TimeCutter SS Riding Mower with 42-inch Mowing Deck.....	79004
Twin Bagger, Timecutter 42 Inch Fab.....	79411
ROPS Kit	79485
Slope Sensor Kit.....	79486

Notes:



Count on it.