



Form No. 3483-687 Rev A

Count on it.

Parts Catalog

GrandStand® HDX Mower **With 52in TURBO FORCE® Cutting Unit**

Model No. 72506—Serial No. 420770829 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

52 Inch Deck Assembly	4
Deck and Decal Assembly No. 145-1562	6
Deflector Assembly No. 144-2635	8
Spindle Assembly No. 137-9780	10
Ground Drive Assembly	12
LH Transmission Assembly No. 161-1323	14
RH Transmission Assembly No. 161-9807	16
Hydraulic Hose Assembly	18
Motion Control Assembly	20
Control Handle Assembly No. 132-5157	22
Control Handle Assembly No. 132-5158	24
Parking Brake Assembly	26
Deck Lift Assembly	28
HOC Lever Assembly No. 161-6735	30
Deck Strut Assembly No. 147-4557	32
Frame Assembly	34
Wheel and Bearing Assembly	36
Platform Assembly	38
Engine Assembly	40
Muffler Guard Assembly No. 146-8503	42
Fuel Tank Assembly	44
Electrical Assembly	46
Attachments and Accessories	48


52 Inch Deck Assembly

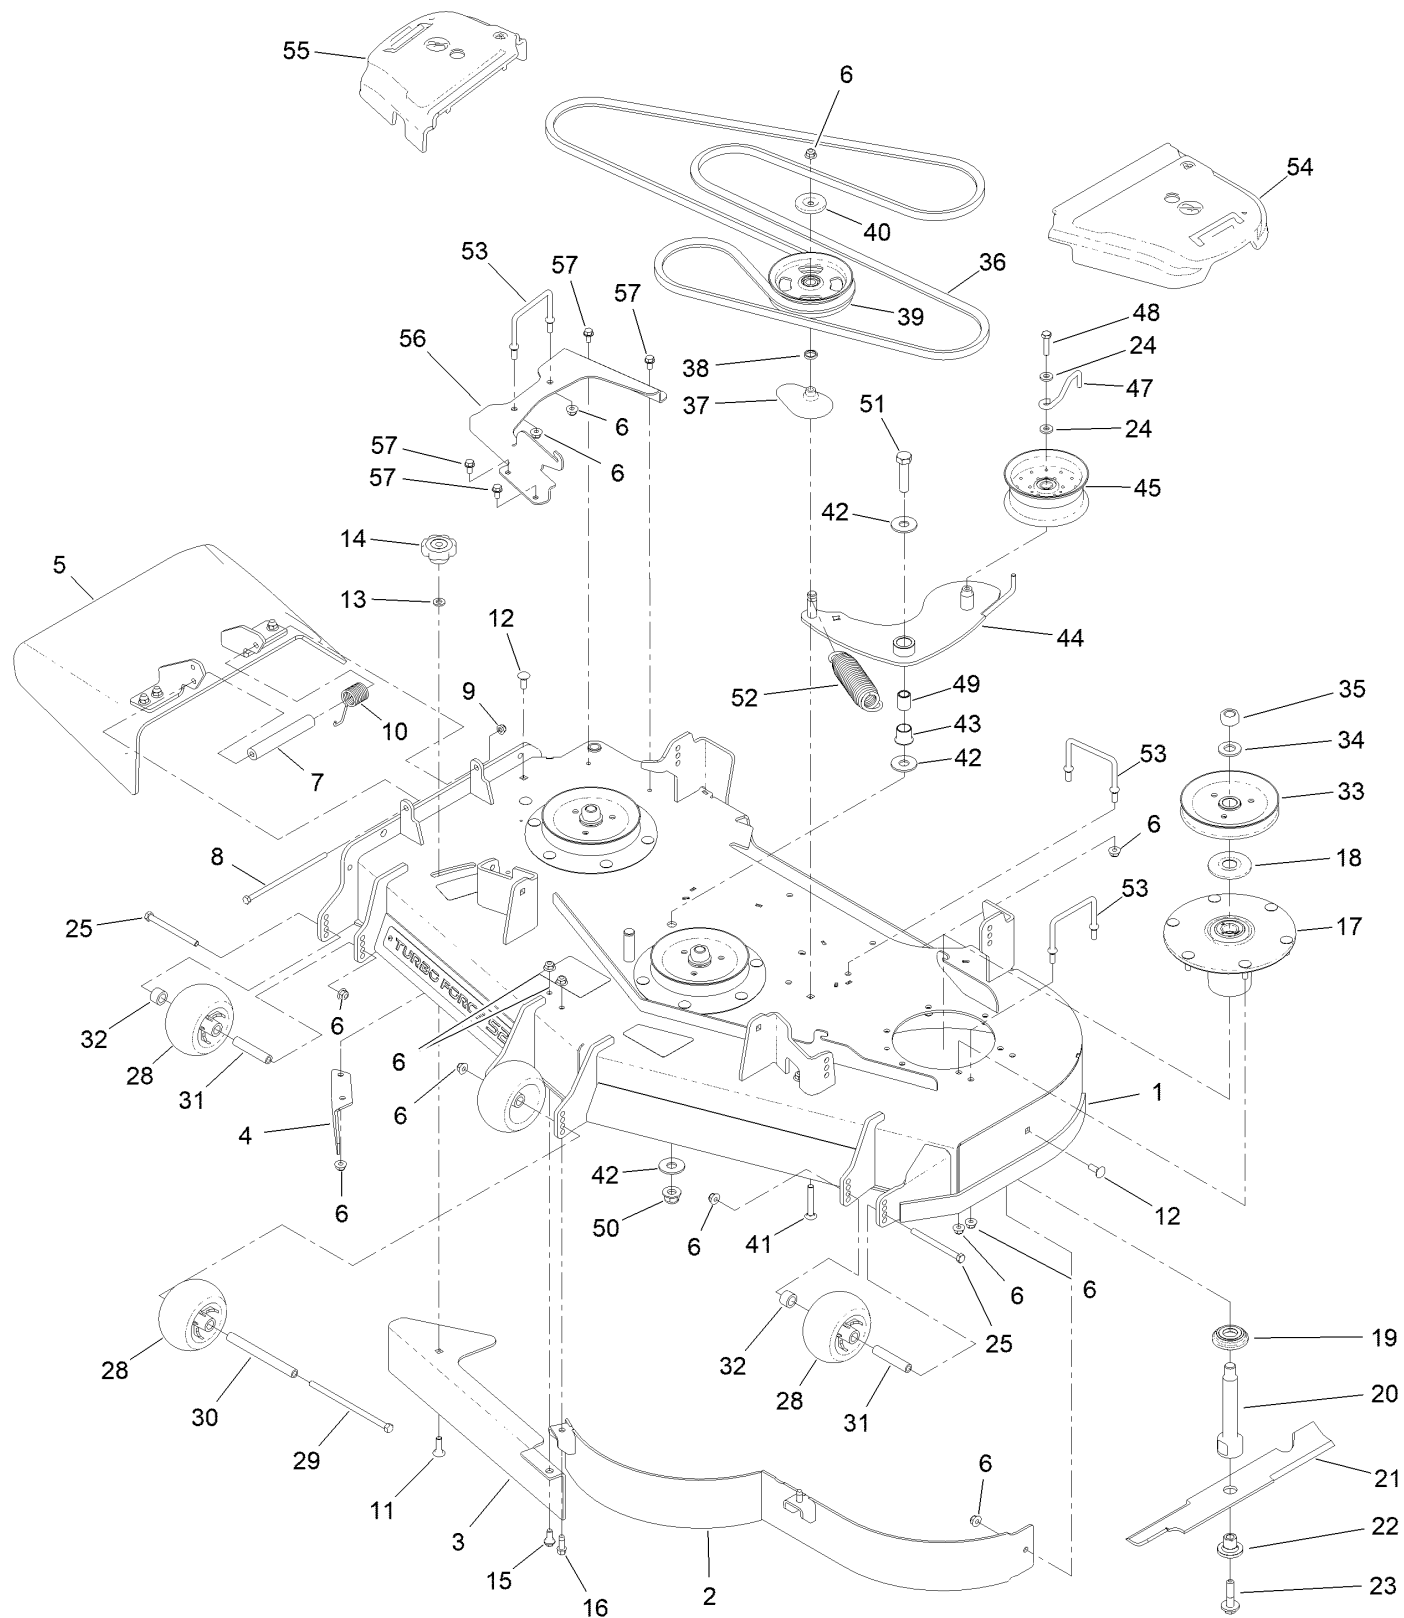

52 Inch Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-1562	1	52 Deck ASM W/Decals	31	133-2129	2	Tube-Shafting
2	114-1979-01	1	Baffle-52 Inch	32	133-2128	2	Tube-Spacer
3	139-8105-01	1	Plate-Baffle, Formed	33	138-6061	3	Sheave-Blade, Drive
4	106-3216-01	1	Baffle-Discharge	34	103-2802	3	Washer
5	144-2635	1	Rubber Deflector ASM	35	116-7306	3	Nut-Hex
6	119-4042	34	Nut-HF, NI	36	135-4711	1	Belt, 5V
7	105-4622	1	Spacer	37	109-2872	1	Spacer-Pulley
8	322-50	1	Screw-HH	38	107-4293	1	Spacer-Plate, BBC
9	119-4041	1	Nut-HF	39	136-5405	1	Pulley-Idler, Flat
10	108-4052	1	Spring-Torsion	40	132-5153	1	Shield-Dust
11	119-4162	1	Screw-CARR	41	3231-44	1	Screw-CARR
12	3231-2	3	Bolt-CARR	42	104-9216	3	Washer-Hardened
13	100-4852	1	Washer-Hardened	43	135-1248	1	Bushing, Igus
14	109-1092	1	Knob	44	161-5151-03	1	Idler Arm ASM [black]
15	94-7582	1	Bolt-Shoulder	45	116-4666	1	Idler-Pulley, Flat
16	92-1624	2	Screw-HWH Thd Form	47	147-4644	1	Wireform Belt Guide,Idler, Top
17	137-9780	3	Spindle ASM	48	323-8	1	Screw-HH
18	103-1330	3	Guard-Bearing, Top	49	163-3438	1	Bushing-Idler Pivot
19	137-9784	3	Guard-Bottom	50	133-9681	1	Nut-HF
20	138-6045	3	Shaft-Spindle	51	327-9	1	Screw-HH
21	140-1242	3	Blade-Flow, High	52	116-6317	1	Spring-Extension
22	137-9787	3	Bushing-Hex	53	109-6982	3	Wireform-Cover
23	109-9220	3	Screw-Sems	54	109-6936	1	Cover-Belt, LH
24	138-7207	2	Spacer-Hub, Blower	55	109-6935	1	Cover-Belt, RH
25	323-23	2	Screw-HH	56	147-4639-01	1	Platform-Belt Cover 52
28	1-603299	4	Roller-Scalp, Anti	57	32144-70	4	Screw-HWHTF
29	108-5388	1	Screw-HH				
30	98-5967	1	Spacer-Wheel				

Deck and Decal Assembly No. 145-1562

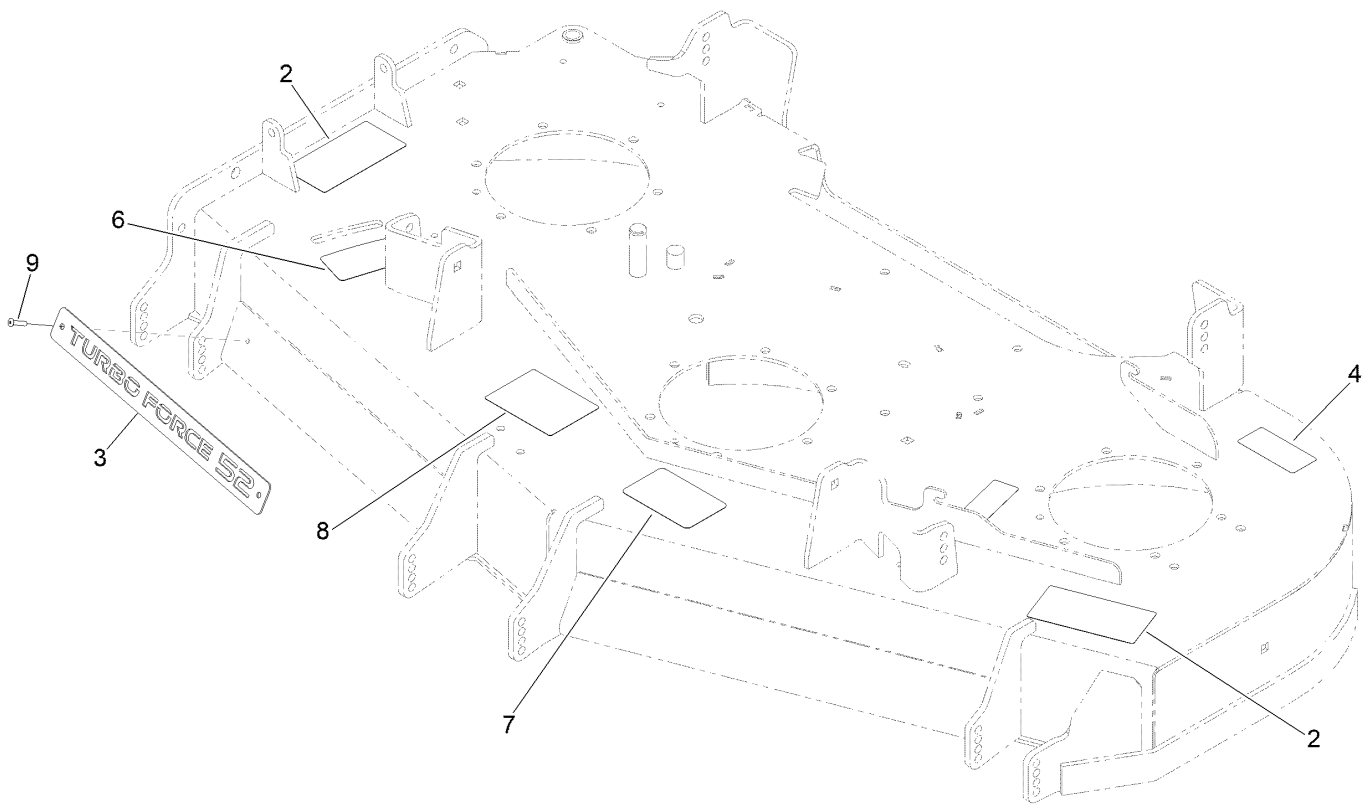


Deck and Decal Assembly No. 145-1562 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	161-6620	2	Decal-Danger, Deck
3	147-4975-03	1	Plate-Turbo Force
4	116-8283	1	Decal-Torque, Bolt
6	138-1147	1	Decal - Baffle Adjustment

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7	161-1343	1	Decal-Belt, Tension
8	127-0326	1	Decal-Scalp, Anti
9	130-8451	2	Rivet-Trifold

Deflector Assembly No. 144-2635

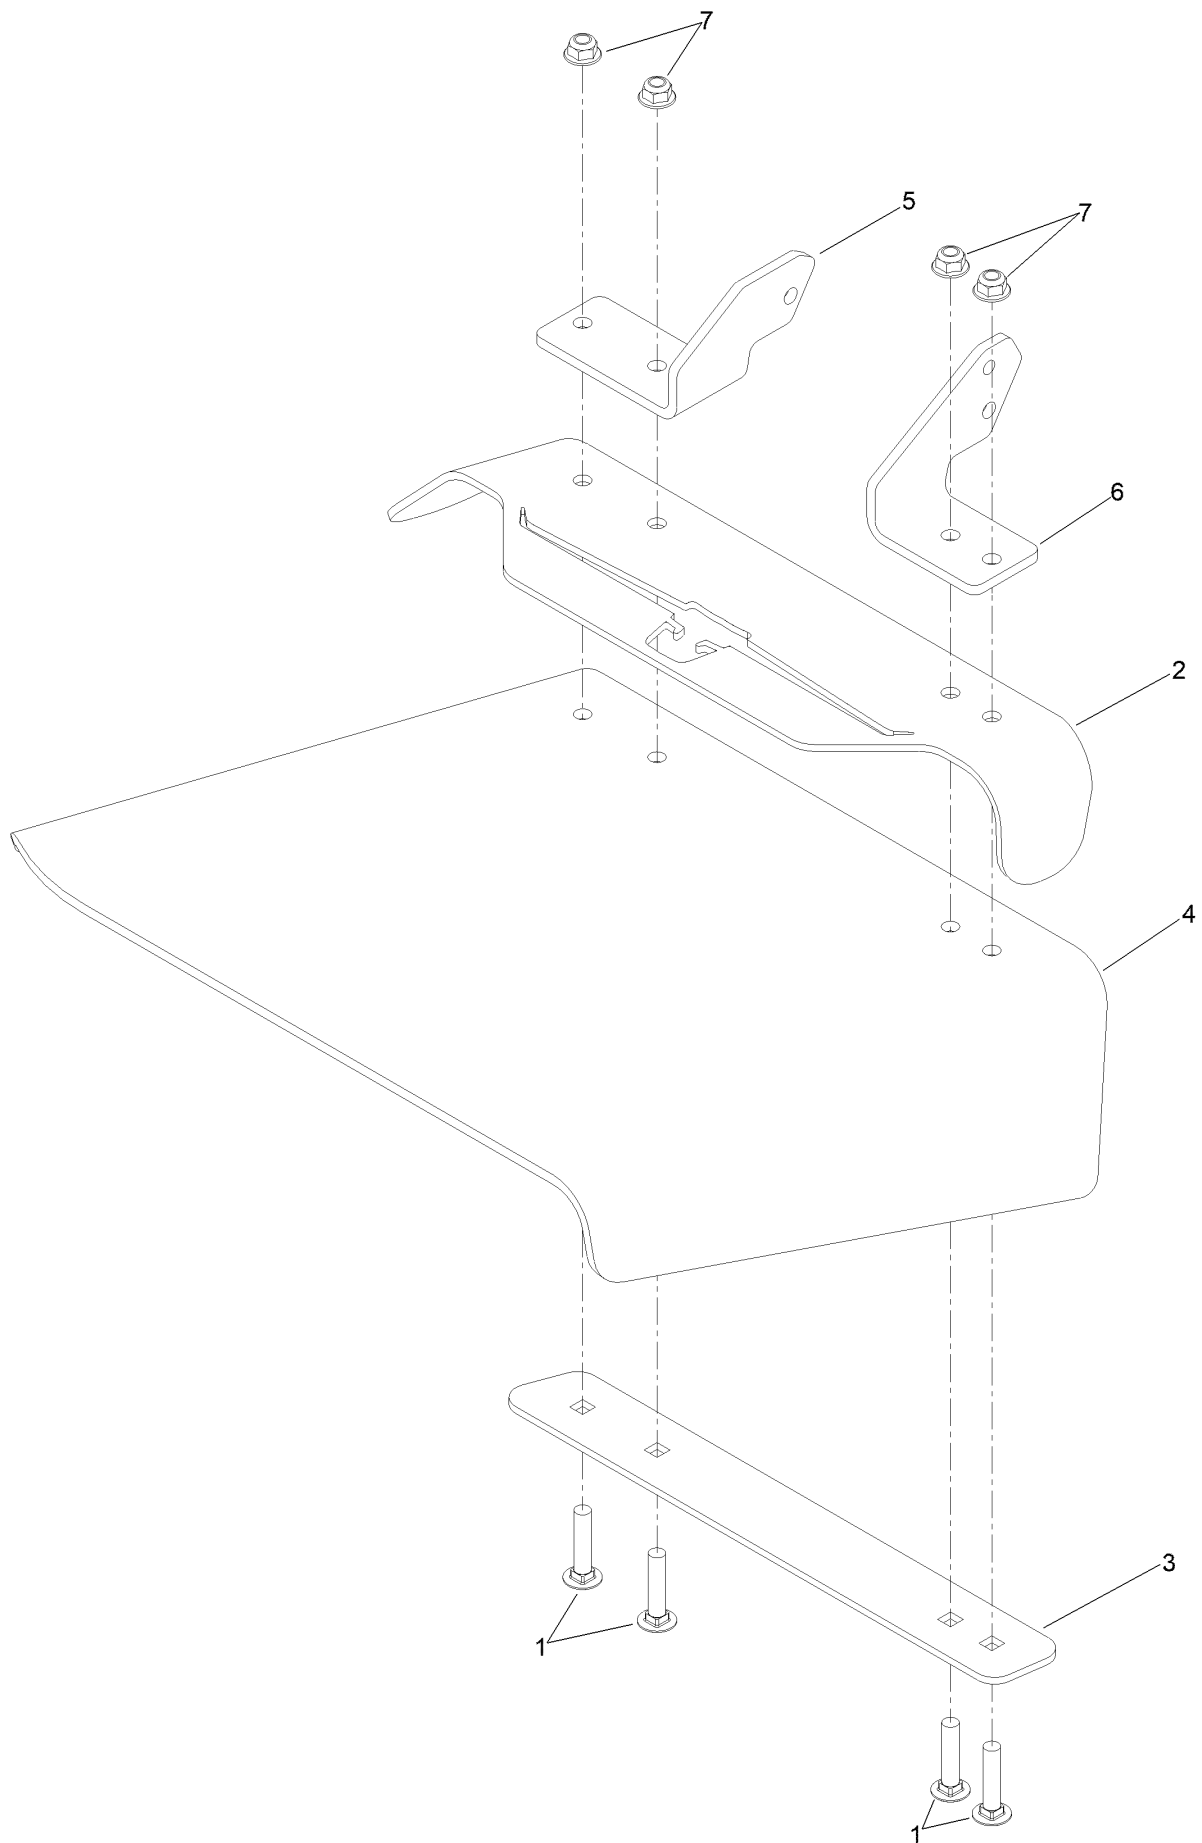


Deflector Assembly No. 144-2635 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3231-5	4	Screw-CARR
2	161-9815-01	1	Plate-Deflector Mount
3	106-3248-03	1	Strap-Discharge
4	161-3464	1	Deflector-Deck, Rubber

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	119-4042	4	Nut-HF, NI


Spindle Assembly No. 137-9780

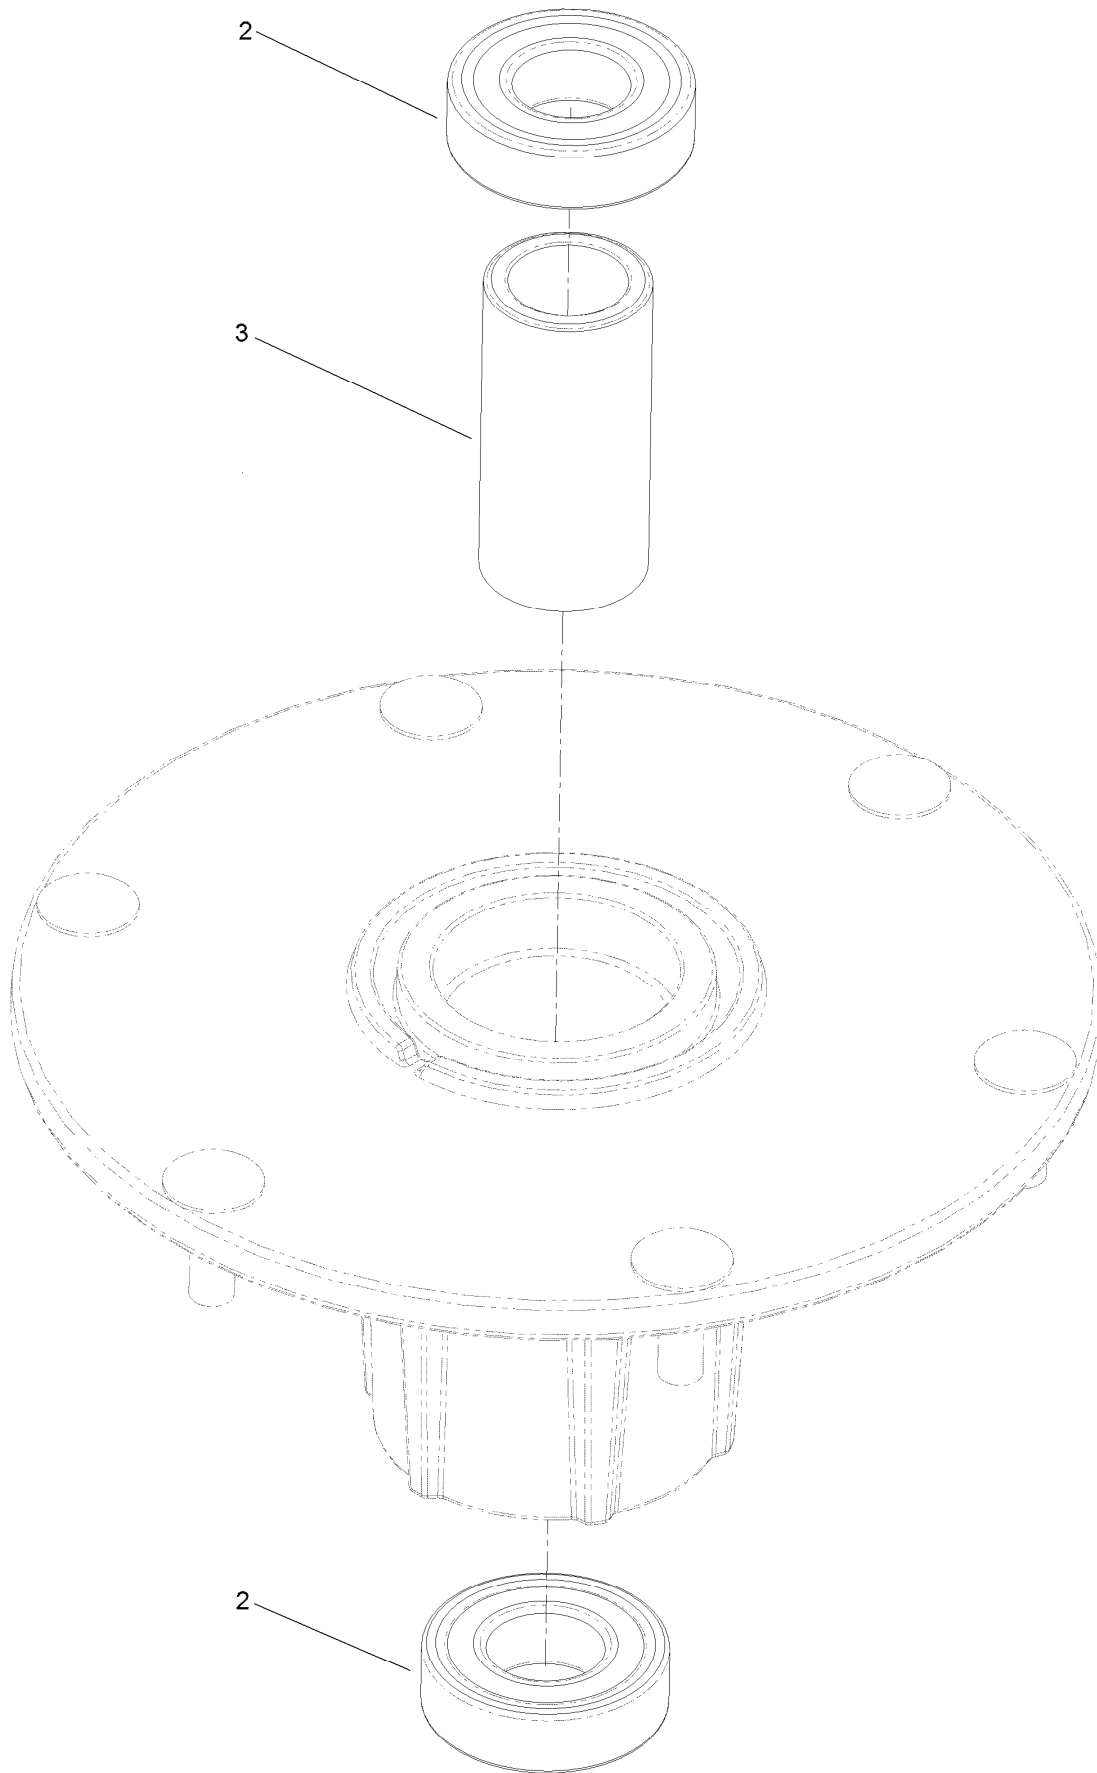

Spindle Assembly No. 137-9780 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	116-0720	2	Bearing-Ball
3	138-6042	1	Spacer-Bearing

Ground Drive Assembly

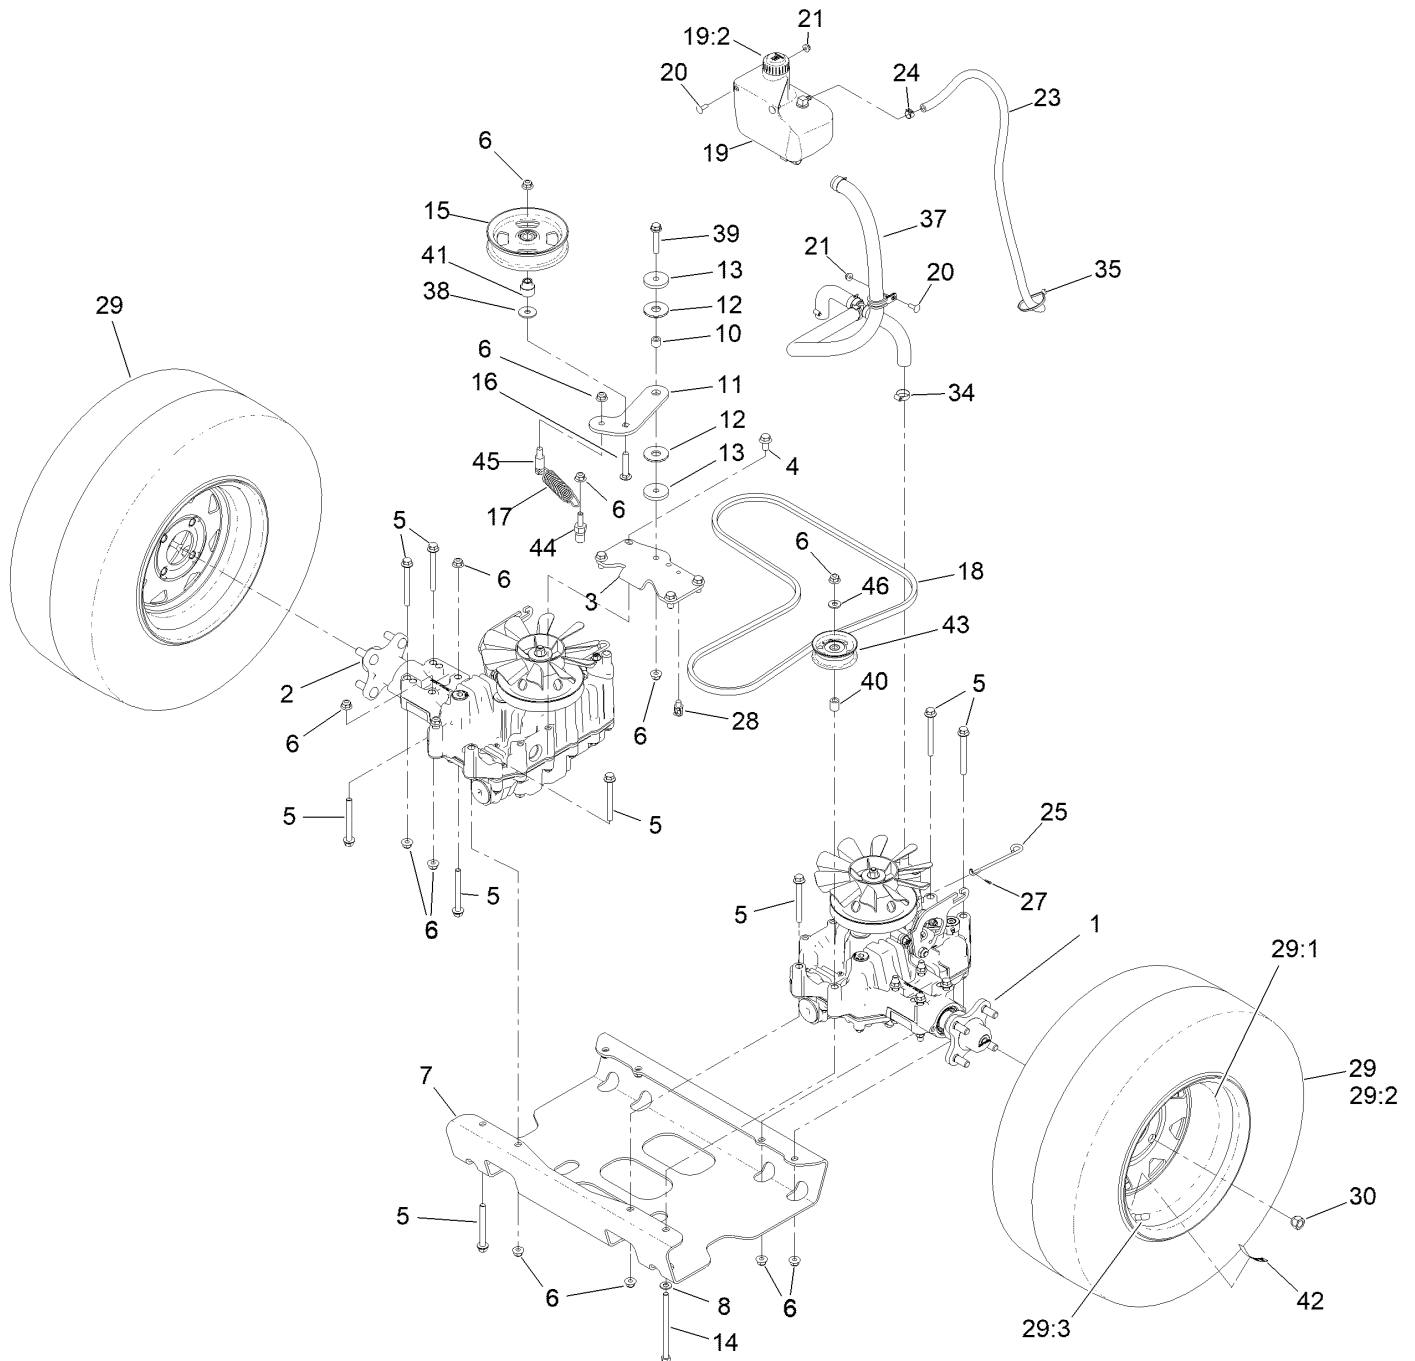


Ground Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-1323	1	LH Transmisson (Tzt13Sy)	24	92-2379	1	Clamp-Hose
2	161-9807	1	RH Transmisson (Tzt13Sx)	25	145-6176	2	Rod-Bypass
3	147-4756-05	1	Plate, Support, Transaxle	27	108-2992	2	Pin-Hair
4	161-1312	4	Screw-Bshs	28	161-1316	2	Clip, Fir Tree
5	116-4701	15	Screw-HHF	29	140-7958	2	Wheel And Tire ASM
6	119-4042	19	Nut-HF, NI	29:1	140-7967	1	Wheel
7	147-4636-05	1	Plate-Hydro	29:2	140-7973	1	Tire
8	3256-24	1	Washer-Plain	29:3	232-27	1	Stem-Valve
10	1-413088	1	Bushing-Lever, Lift	30	139-2564	8	Nut-Lug
11	147-4757	1	Plate-Arm, Idler	34	2412-129	2	Clamp-Hose
12	114-0463	2	Washer-Friction, Composite	35	3290-378	1	Tie-Cable
13	110-9981	2	Washer-Plain	37		1	HYD Hose ASM ■
14	323-25	1	Screw-HH	38	93-8806	1	Washer-Hardened
15	136-5405	1	Pulley-Idler, Flat	39	108-3742	1	Screw-HHF
16	3231-6	1	Screw-CARR	40	115-1451	1	Spacer-Wheel
17	138-1104	1	Spring-Extension	41	138-7227	1	Bushing-Idler
18	145-5186	1	Belt-V	42	126-2055	2	Decal-Torque, Wheel Hub Lug
19	132-1135	1	Tank-HYD	43	130-8362	1	Pulley-Idler, Flat
19:2	133-8677	1	Cap-Vented	44	132-4724	1	Pin-Anchor, Spring
19:5	140-9463	1	Strainer-Neck, Removable ●	45	110-3841	1	Anchor-Spring
20	3229-25	3	Screw-CARR	46	109-6658	1	Nut-Flange, NI
21	104-7201	3	Nut-HF, NI				
23	109-0309	1	Hose-Fuel				

● Not illustrated

■ Not serviced separately

LH Transmission Assembly No. 161-1323

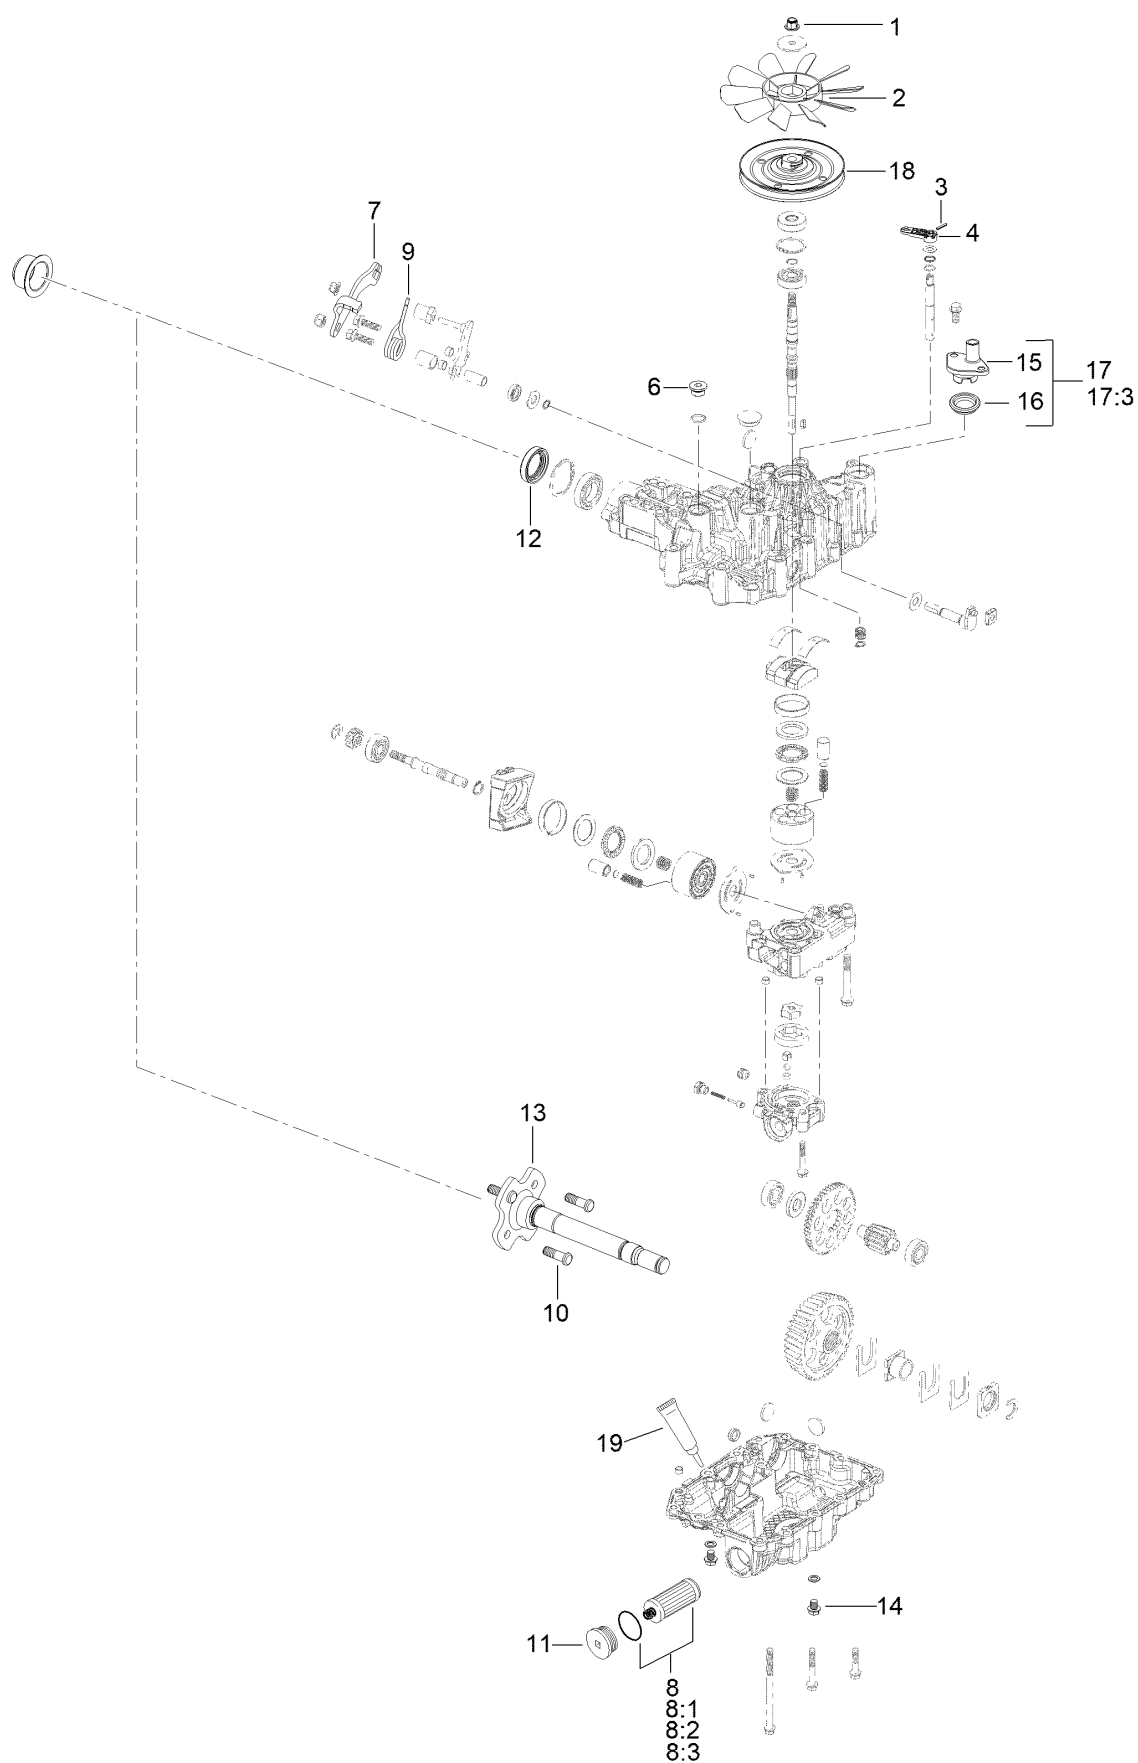

LH Transmission Assembly No. 161-1323 (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-4737	1	Nut-Lock
2	132-4738	1	Fan
3	104-3265	1	Pin
4	132-4700	1	Lever-Bypass
5	161-7919	1	Brake Kit, Y ●
6	132-4735	1	Cap-Oil
7	161-7914	1	Lever-Control, LH
8	144-3842	1	2 Transmission Filter Kit
8:1		2	Filter (1A6370-26450) ■
8:2	136-5410	2	O-Ring
8:3		4	Sealing Washer ● ■
9	137-4109	1	Spring-Torsion
10	137-9509	4	Stud-Wheel
11	138-4613	1	Cap-Oil Filter
12	139-5587	1	Seal-Axle, Ua
13	163-7372	1	Axle ASM Kit

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
13:1		2	Thrust Washer ● ■
13:2		1	Oil Seal Ua18Lip ● ■
13:3		1	Collar 25.4 ● ■
13:4		1	Flange ASM, Axle ● ■
13:5		1	Bearing 6006 ● ■
13:6		1	Ring 20 ● ■
13:7		1	Bushing ● ■
13:8		1	Ring 55 ● ■
14	139-5589	2	Drain Bolt
15	139-5590	1	Expansion Fitting
16	139-5591	1	Grommet Seal, Expansion Fitting
17	139-7871	1	Expansion Fitting - W/ Seal
17:3		1	M8*20 Flange Bolt ■
18	161-7916	1	Pulley
19	163-4197	1	Seal Kit, Hydro ●

● Not illustrated

■ Not serviced separately

RH Transmission Assembly No. 161-9807

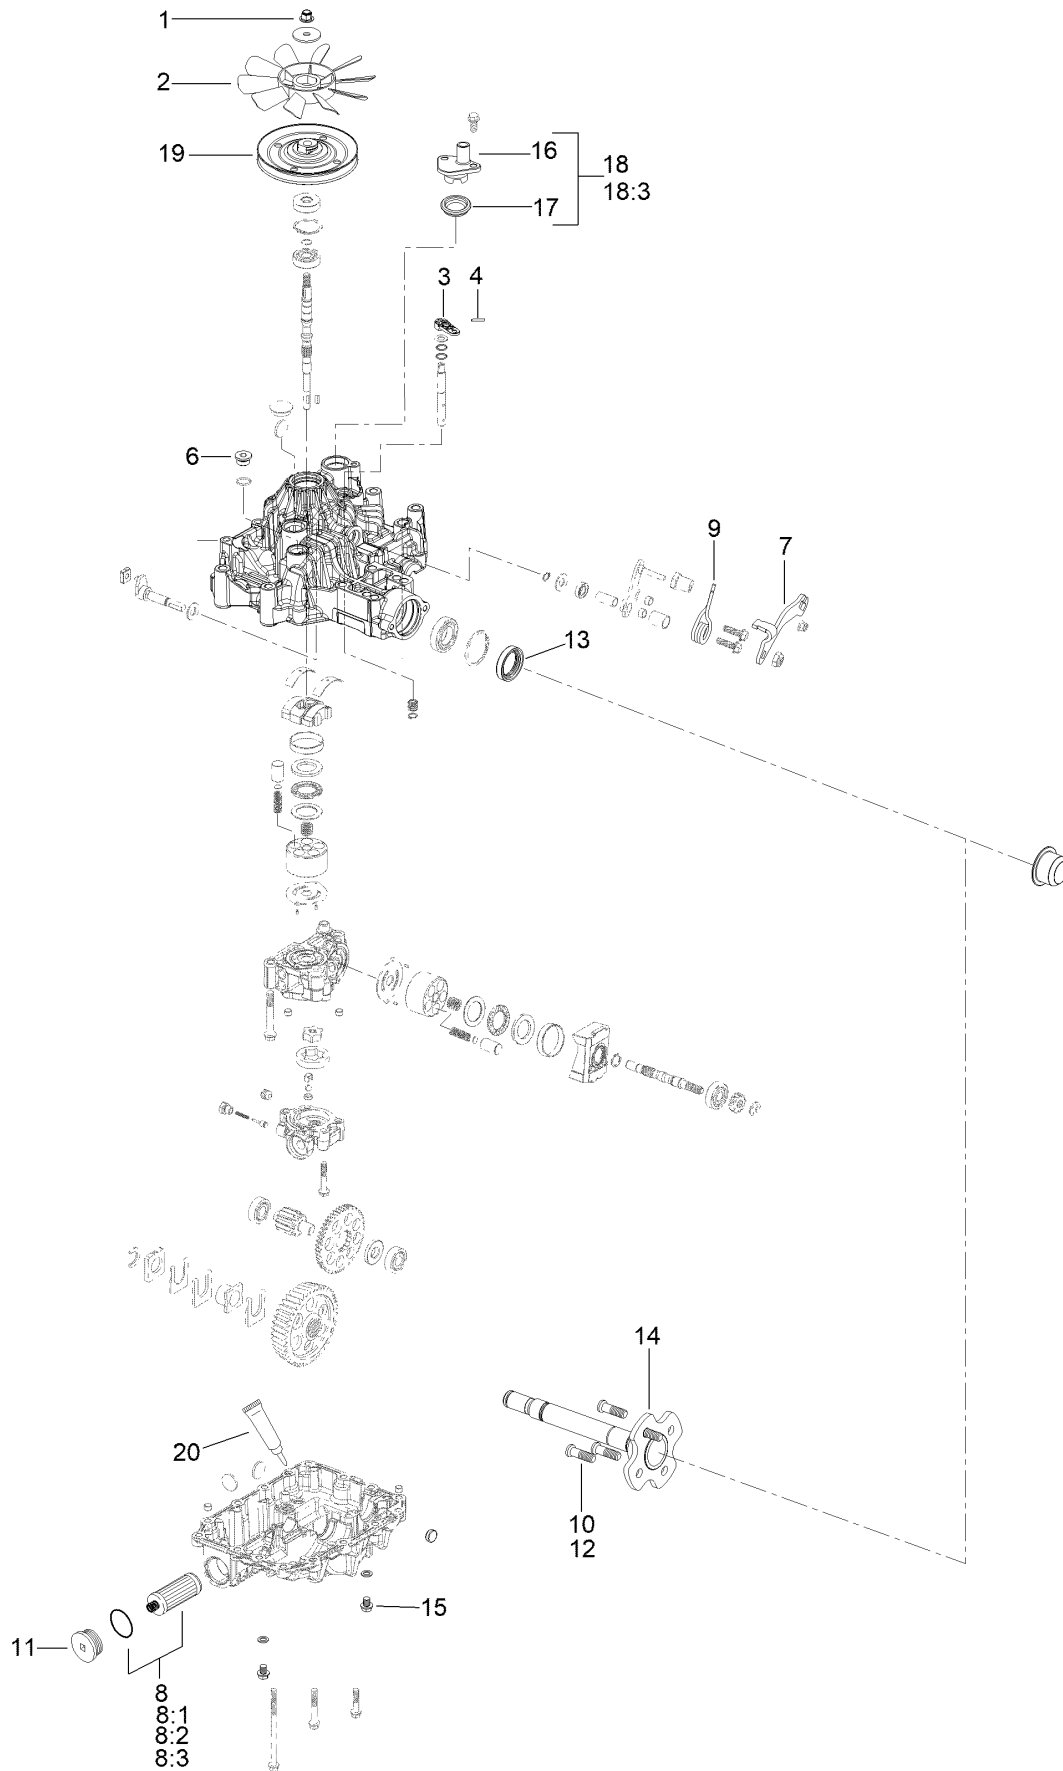

RH Transmission Assembly No. 161-9807 (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-4737	1	Nut-Lock
2	132-4738	1	Fan
3	104-3265	1	Pin
4	132-4700	1	Lever-Bypass
5	161-7917	1	Brake Kit, X ●
6	132-4735	1	Cap-Oil
7	161-7915	1	Lever-Control, RH
8	144-3842	1	2 Transmission Filter Kit
8:1		2	Filter (1A6370-26450) ■
8:2	136-5410	2	O-Ring
8:3		4	Sealing Washer ●■
9	137-4109	1	Spring-Torsion
10	137-9509	1	Stud-Wheel
11	138-4613	1	Cap-Oil Filter
12	137-9509	4	Stud-Wheel
13	139-5587	1	Seal-Axle, Ua
14	163-7372	1	Axle ASM Kit

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
14:1		2	Thrust Washer ●■
14:2		1	Oil Seal Ua18Lip ●■
14:3		1	Collar 25.4 ●■
14:4		1	Flange ASM, Axle ●■
14:5		1	Bearing 6006 ●■
14:6		1	Ring 20 ●■
14:7		1	Bushing ●■
14:8		1	Ring 55 ●■
15	139-5589	2	Drain Bolt
16	139-5590	1	Expansion Fitting
17	139-5591	1	Grommet Seal, Expansion Fitting
18	139-7871	1	Expansion Fitting - W/ Seal
18:3		1	M8*20 Flange Bolt ■
19	161-7916	1	Pulley
20	163-4197	1	Seal Kit, Hydro ●

● Not illustrated

■ Not serviced separately

Hydraulic Hose Assembly

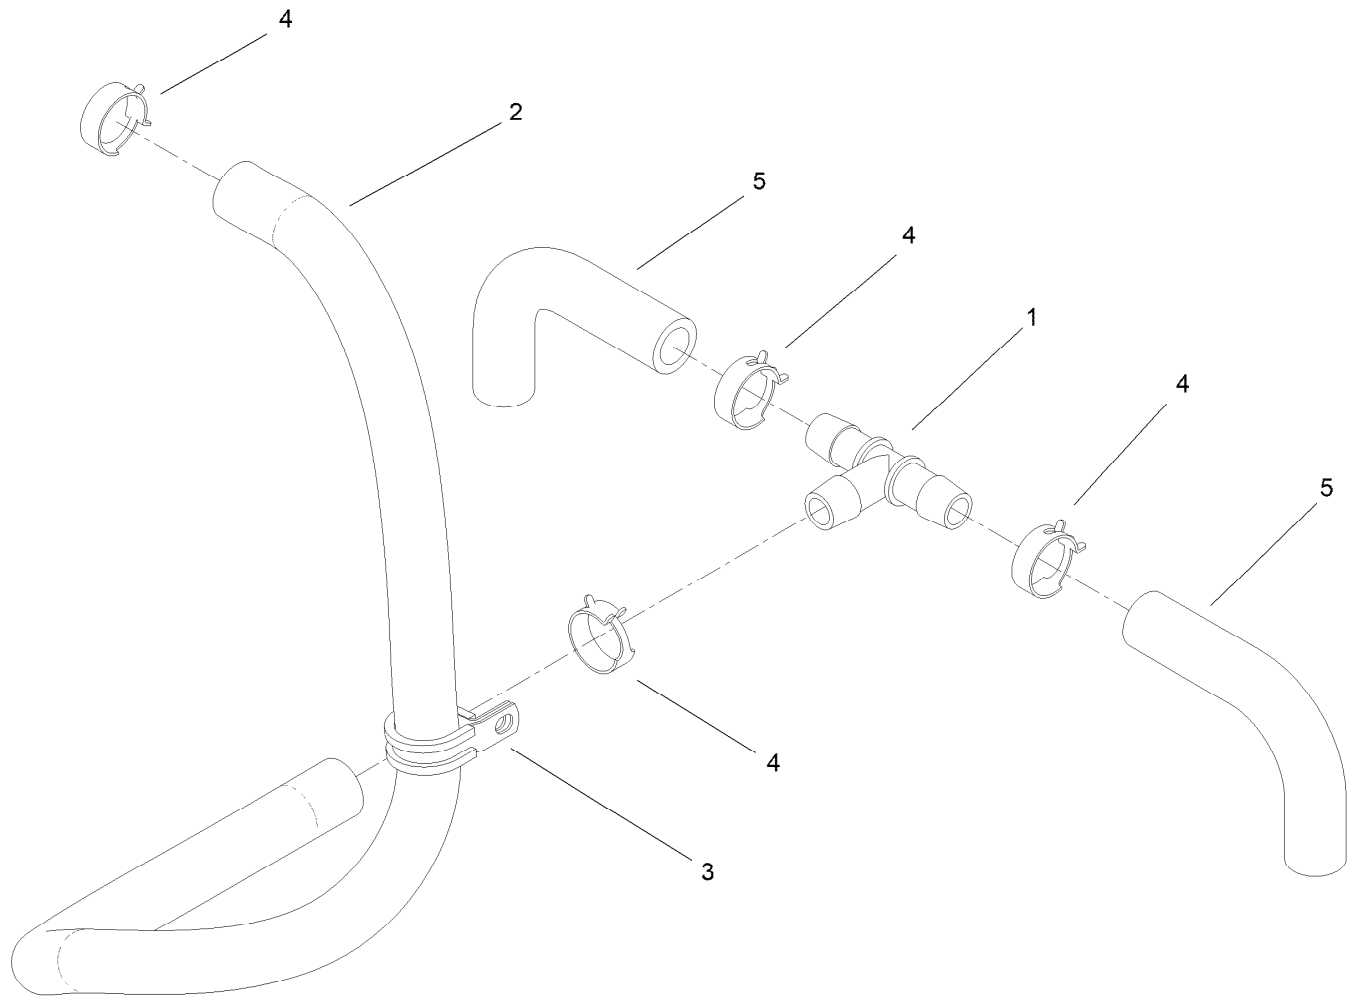


Hydraulic Hose Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	139-4055	1	Fitting Tee
2	145-1644	1	Hydraulic Hose
3	147-0201	1	R-Clamp

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	145-3599	4	Hose Clamp
5	145-6177	2	Hose-Hydraulic

Motion Control Assembly

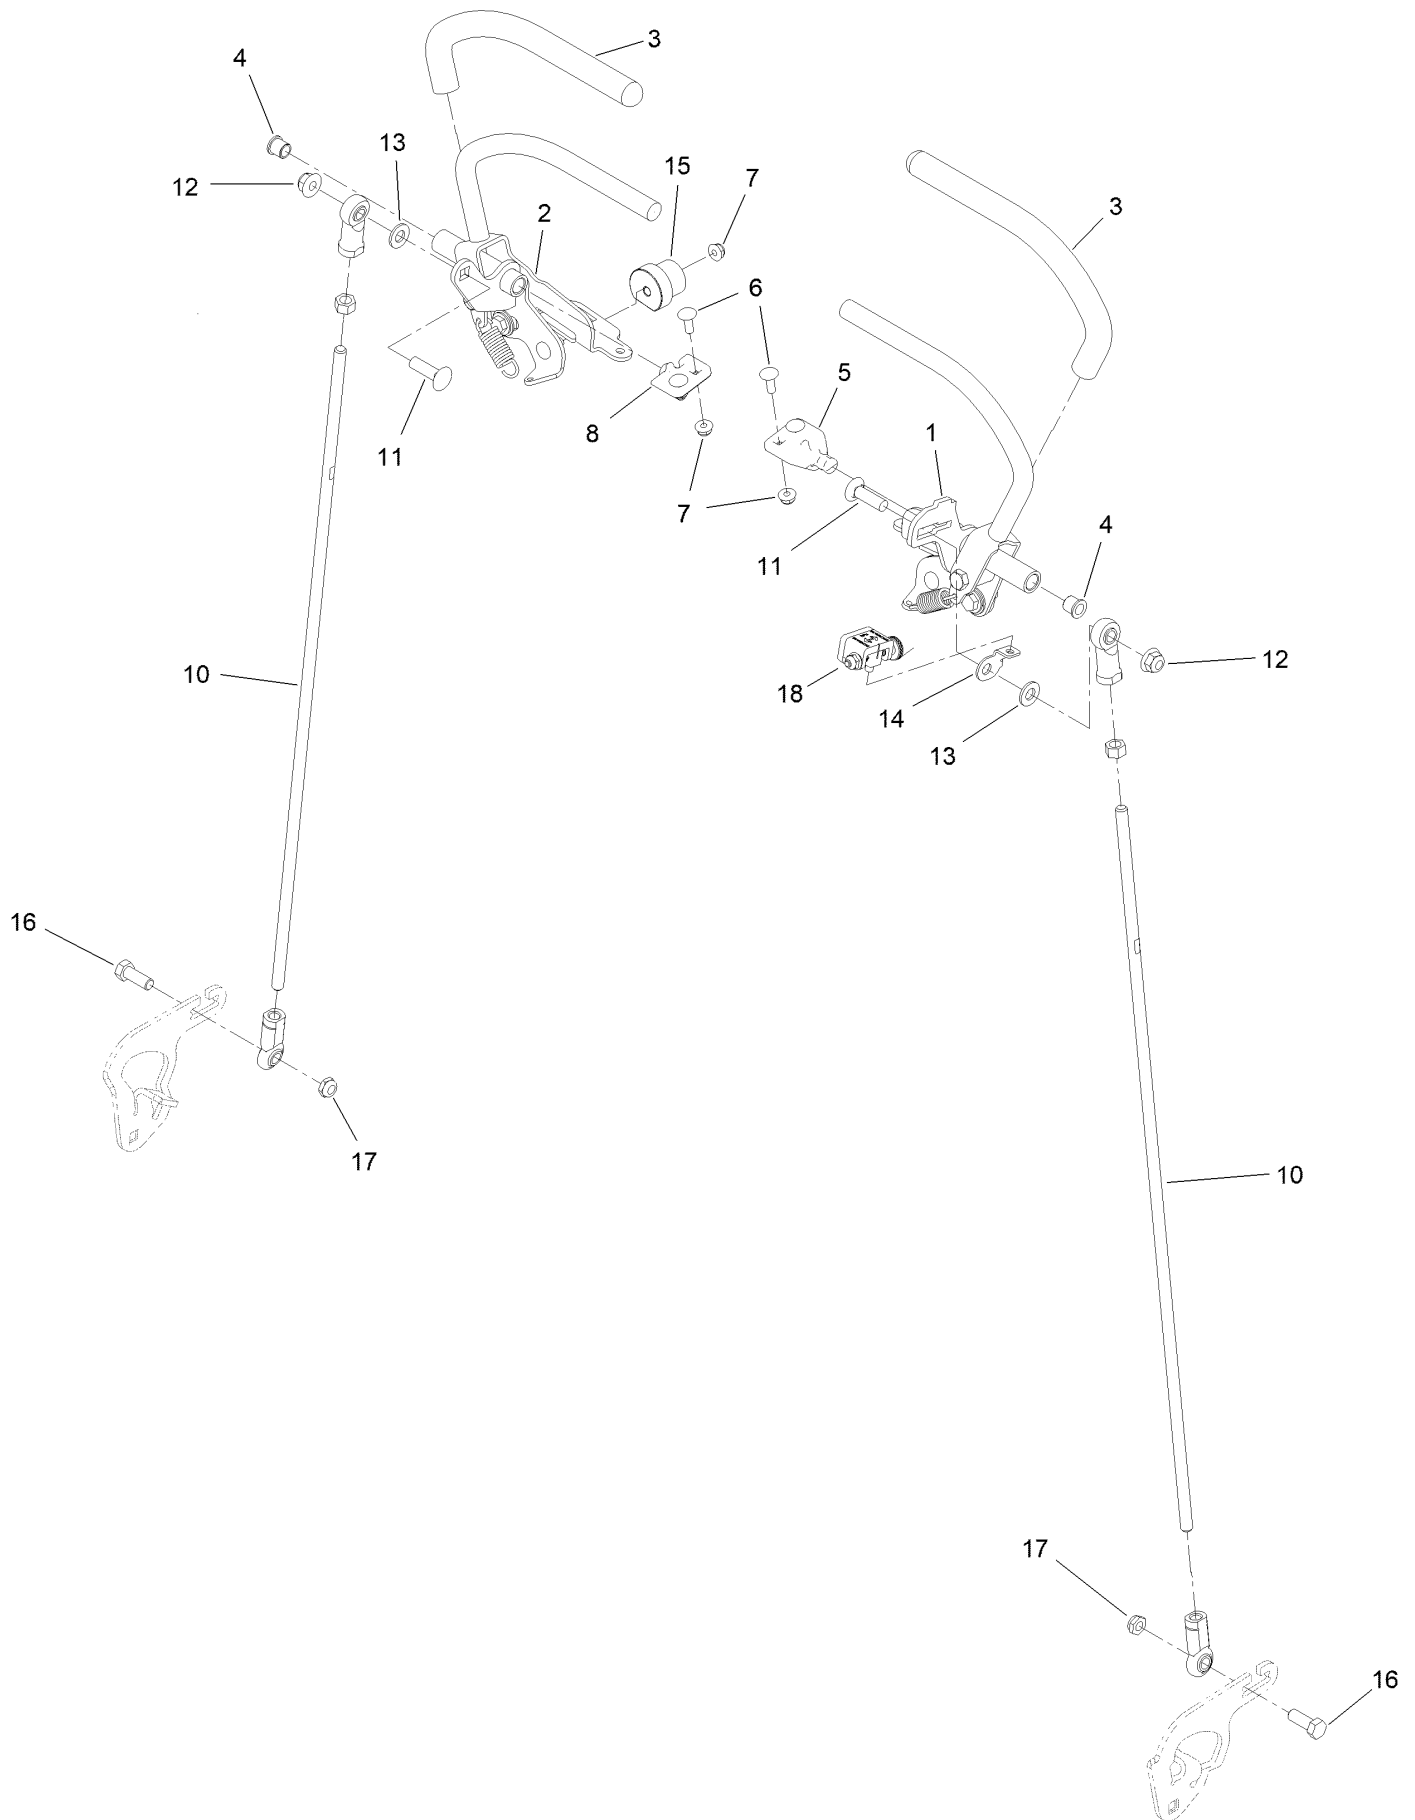

Motion Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-5157	1	LH Control Handle ASM	11	3231-28	2	Screw-CARR
2	132-5158	1	RH Control Handle ASM	12	119-4042	2	Nut-HF, NI
3	119-0222	2	Grip	13	3256-24	2	Washer-Plain
4	103-9928	2	Bearing	14	132-7538	1	Bracket-Adjustment, Speed
5	120-3288	1	Tab-Pivot, LH	15	126-1499	2	Cam
6	3229-1	4	Screw-CARR	16	323-6	2	Screw-HH
7	104-7201	6	Nut-HF, NI	17	3296-59	2	Nut-Lock, NI
8	120-3287	1	Tab-Pivot, RH	18	132-7595	1	Speed Setting Tool
10	161-2803	2	RH Control Rod ASM				

Control Handle Assembly No. 132-5157



Control Handle Assembly No. 132-5157 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	131-3562	1	Bearing-Sleeve
4	323-10	1	Screw-HH
5	119-4042	1	Nut-HF, NI
6	110-7191	2	Washer-Thrust

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7	116-2670	1	Screw-Shoulder
8	119-4041	1	Nut-HF
9	132-5146	1	Spring-Extension

Control Handle Assembly No. 132-5158




Control Handle Assembly No. 132-5158 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	119-4042	1	Nut-HF, NI
4	323-10	1	Screw-HH
5	110-7191	2	Washer-Thrust
6	116-2670	1	Screw-Shoulder

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7	119-4041	1	Nut-HF
8	131-3562	1	Bearing-Sleeve
9	132-5146	1	Spring-Extension


Parking Brake Assembly

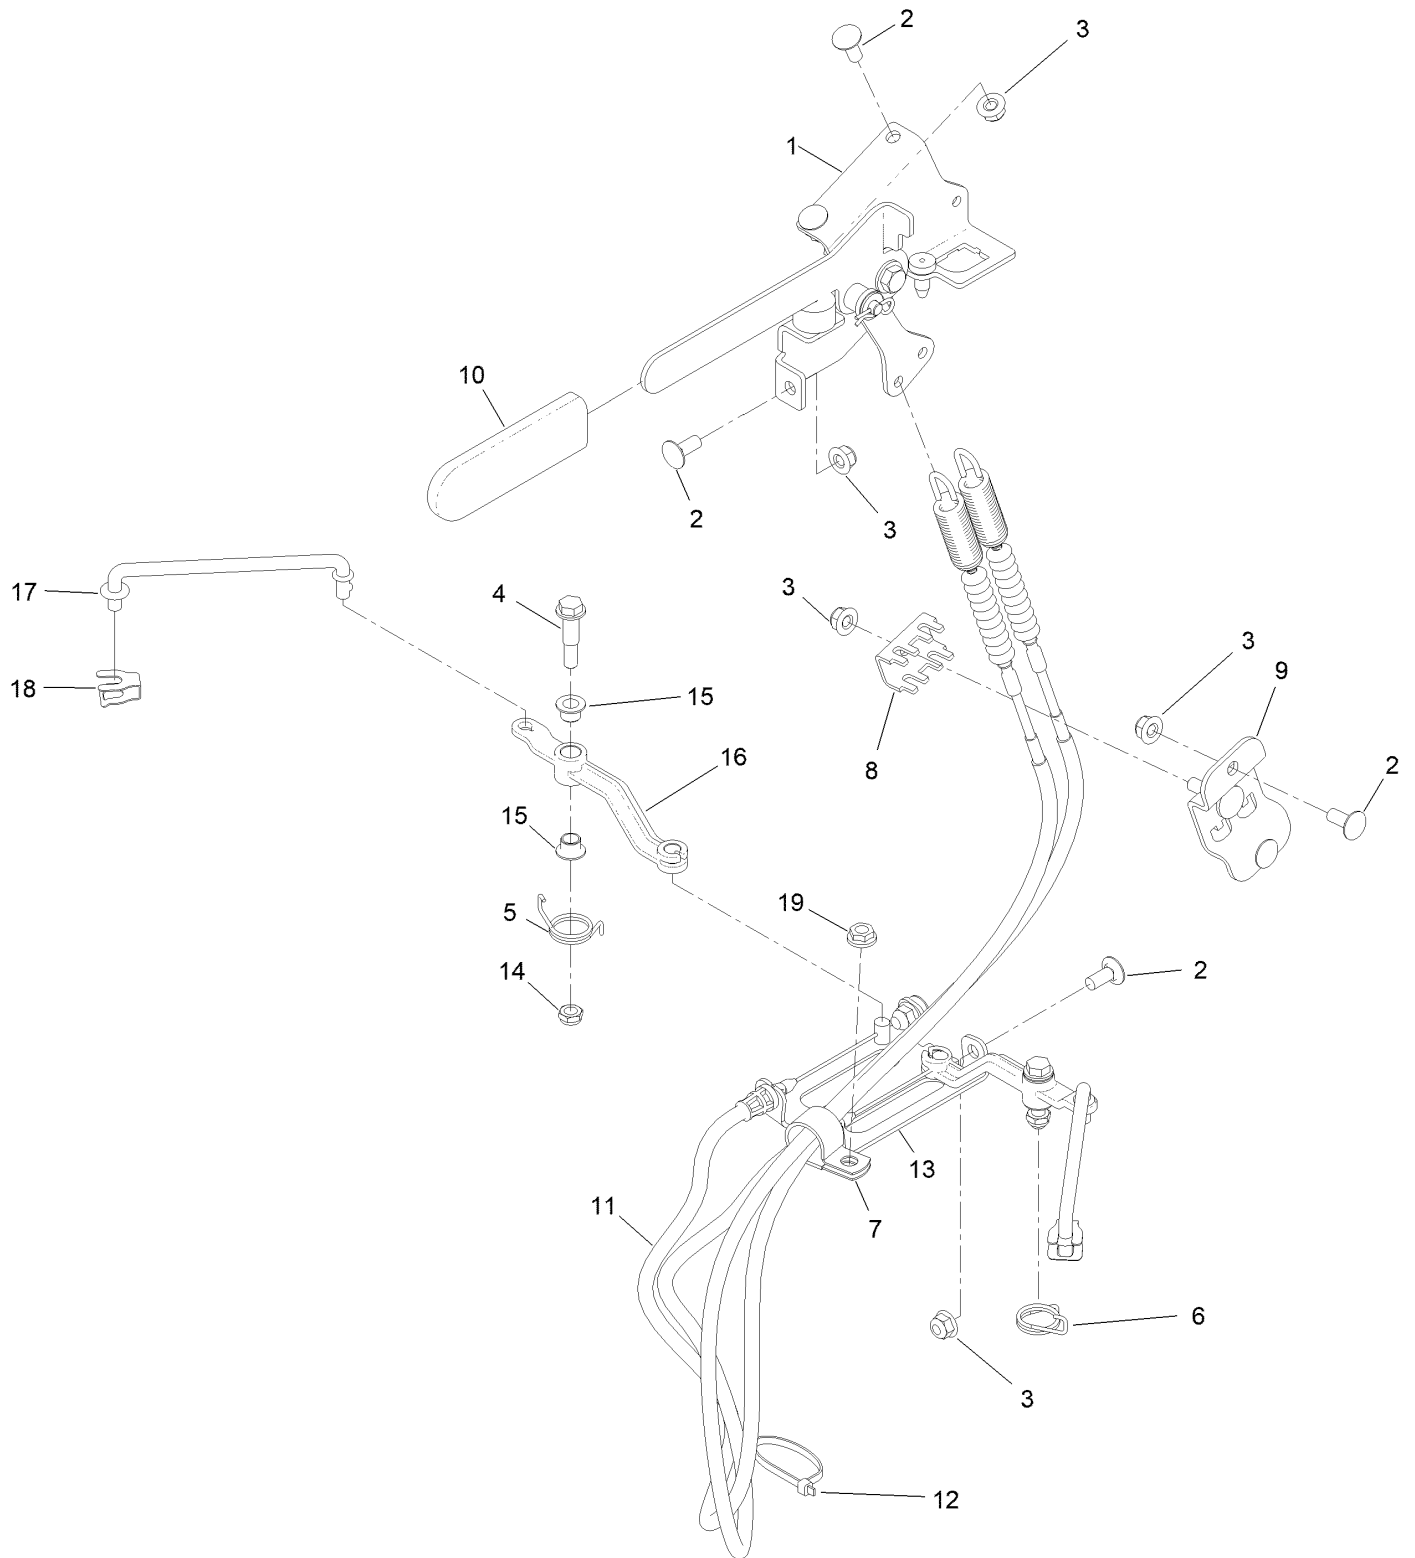

Parking Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-5170	1	Brake Handle ASM	11	145-1643	2	Cable-Brake
2	137-3061	7	Bolt-CARR	12	3290-378	1	Tie-Cable
3	119-4041	8	Nut-HF	13	147-3494	1	Bracket-Cable, Mount
4	116-8607	2	Screw-Shoulder	14	3296-47	2	Nut-Lock,NI
5	139-1508	1	Spring-Torsion	15	137-2374	4	Bushing-Flange
6	139-1538	1	Spring-Torsion	16	147-4801	2	Arm-Brake
7	2412-39	1	Clamp-R	17	147-3484	2	Rod-Brake
8	132-1187	1	Clamp-Cable	18	147-4783	2	Retainer-Rod
9	132-7582	1	Mount-Cable, Brake	19	32128-20	1	Nut-HF
10	1-633268	1	Grip-Lever				

Deck Lift Assembly

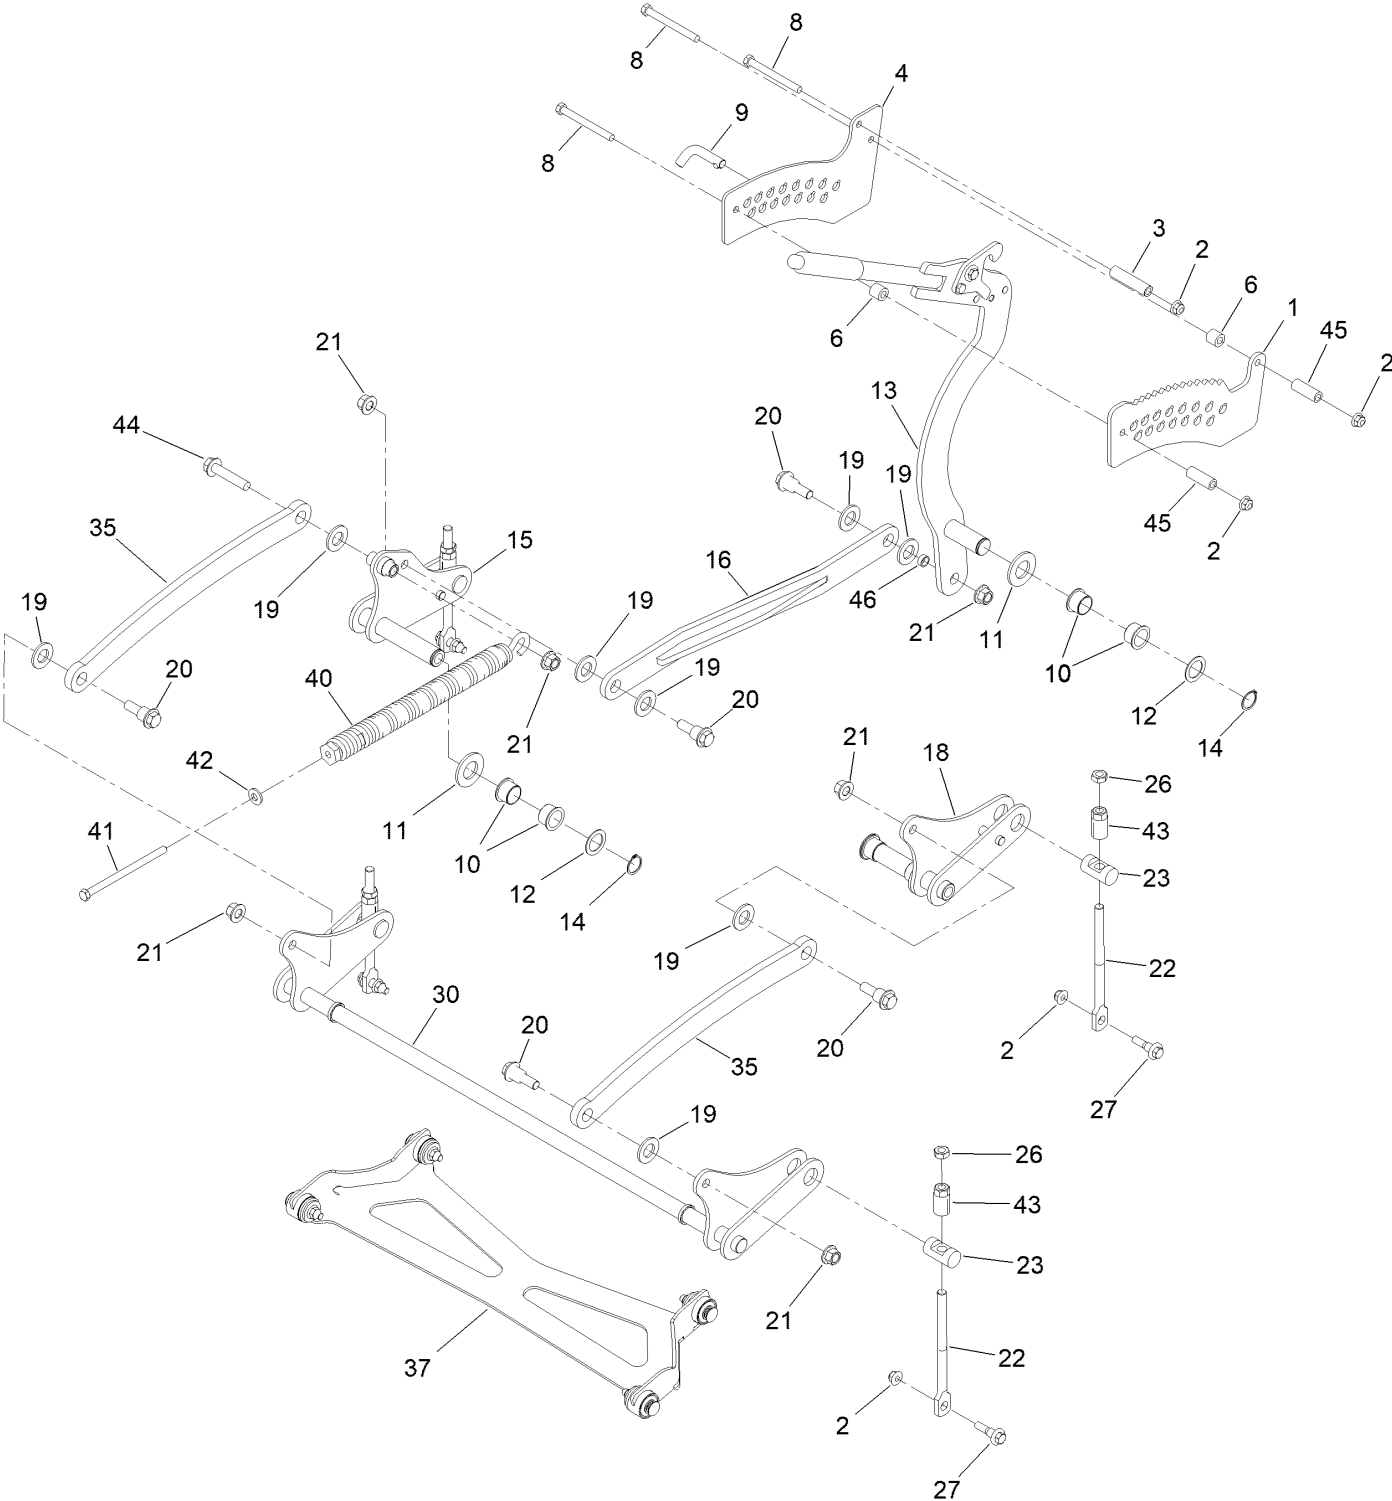

Deck Lift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-4887	1	Plate-HOC, Inner	20	116-0780	5	Screw-Shoulder, HHF
2	119-4042	7	Nut-HF, NI	21	139-1689	6	Nut-HF
3	138-1111	1	Spacer	22	147-4822	4	Link-Adjuster, Deck Lift
4	132-7581	1	HOC Plate And Decal ASM	23	109-8353	4	Trunnion
6	121-1760	2	Spacer	26	3218-5	4	Nut-Jam
8	116-4701	3	Screw-HHF	27	130-0742	4	Bolt-Shoulder
9	116-5584	1	Pin-HOC	30	163-0503-03	1	Front Cross Shaft ASM [black]
10	127-0369	6	Bushing	35	127-1948-03	2	Link-Lift
11	3256-62	3	Washer-Plain	37	147-4557	1	ASM-Deck Strut W/Bushings
12	10-8110	3	Washer-Thrust	40	116-0886	1	Spring-Extension
13	161-6735	1	HOC Lever ASM	41	323-58	1	Bolt-TAP, HH
14	32151-29	3	Ring-Retaining	42	98-5975	1	Washer-Belleville
15	147-2441-03	1	RH Rear Lift Arm ASM [black]	43	109-7840	4	Adjuster-Lift, Deck
16	147-4810-03	1	HOC Link ASM [black]	44	127-7444	1	Screw-HHF
18	147-2446-03	1	LH Rear Lift Arm ASM [black]	45	95-6448	2	Spacer
19	3256-28	8	Washer-Flat	46	138-2235	1	Spacer

HOC Lever Assembly No. 161-6735




HOC Lever Assembly No. 161-6735 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	161-6736-01	1	Lift Lever ASM [red]
2	136-0530	1	Rod-Latch, Release
3	114-8187	1	Spring-Compression
4	114-1207	1	Washer-Special
5	115-2750	1	Knob
6	115-3592	1	Grip
7	119-2309	1	Bolt-Shldr,HH

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
8	103-1363	4	Rivet
9	614672	1	Screw-Shoulder, HWH
10	110-8982	1	Washer-Spring
11	104-7201	1	Nut-HF, NI
12	119-4042	1	Nut-HF, NI
13	138-4888	1	Latch-HOC
14	138-4863	1	Plug-Wear

Deck Strut Assembly No. 147-4557

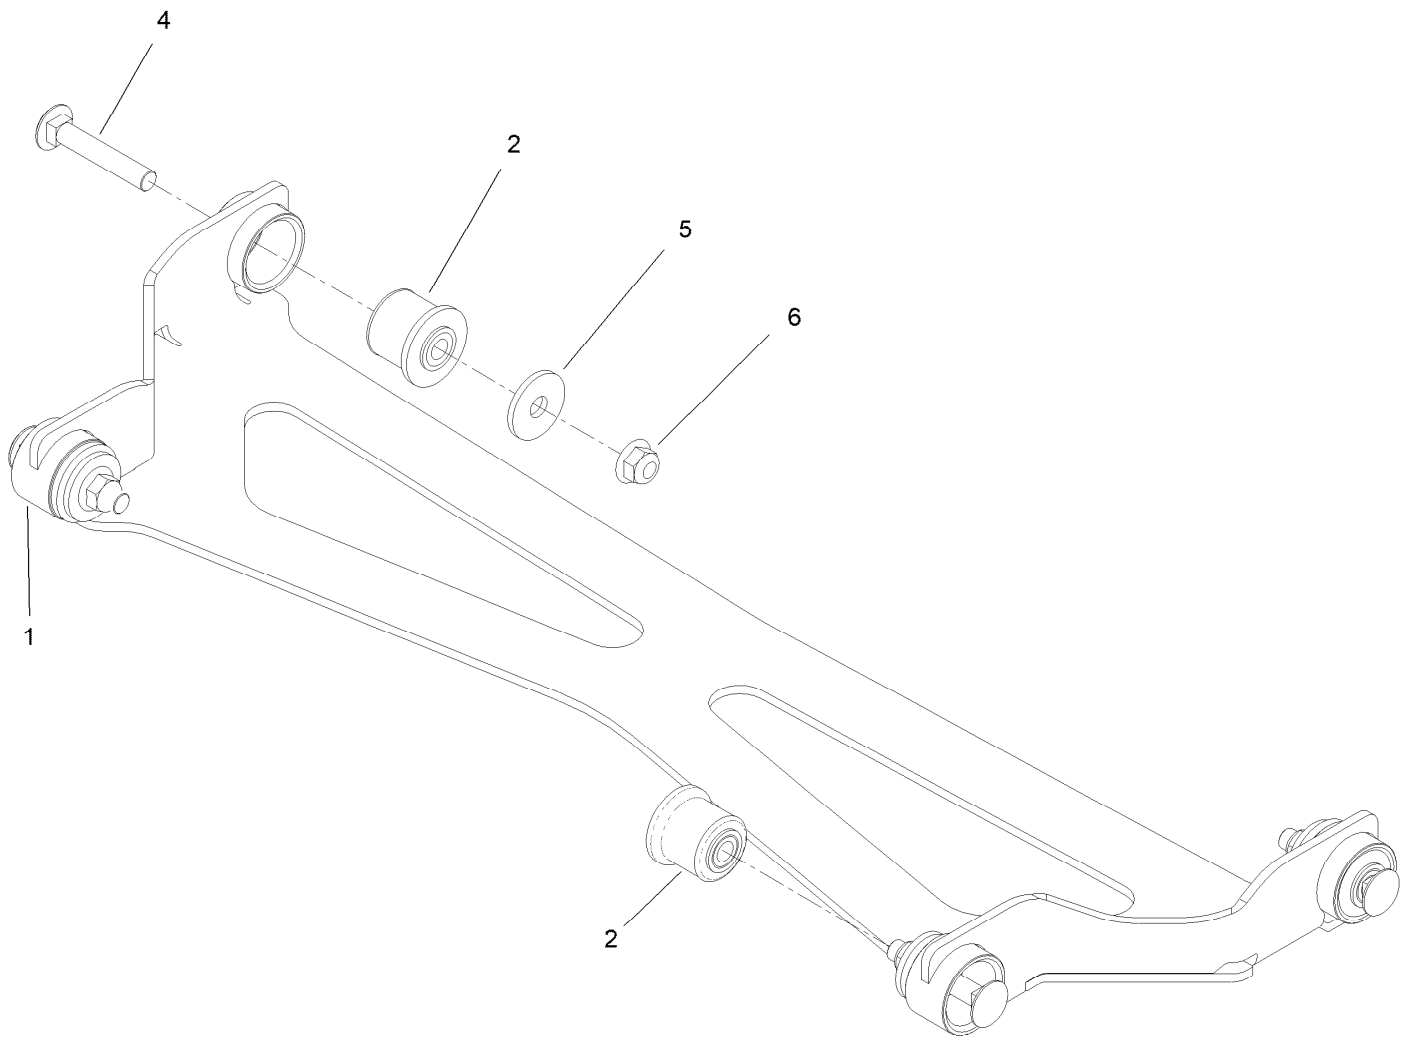


Deck Strut Assembly No. 147-4557 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-4558-03	1	ASM-Deck Strut [black]
2	147-7351	4	Spacer, Bushing ASM
4	3231-7	4	Screw-CARR

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	2844	4	Washer
6	119-4042	4	Nut-HF, NI


Frame Assembly

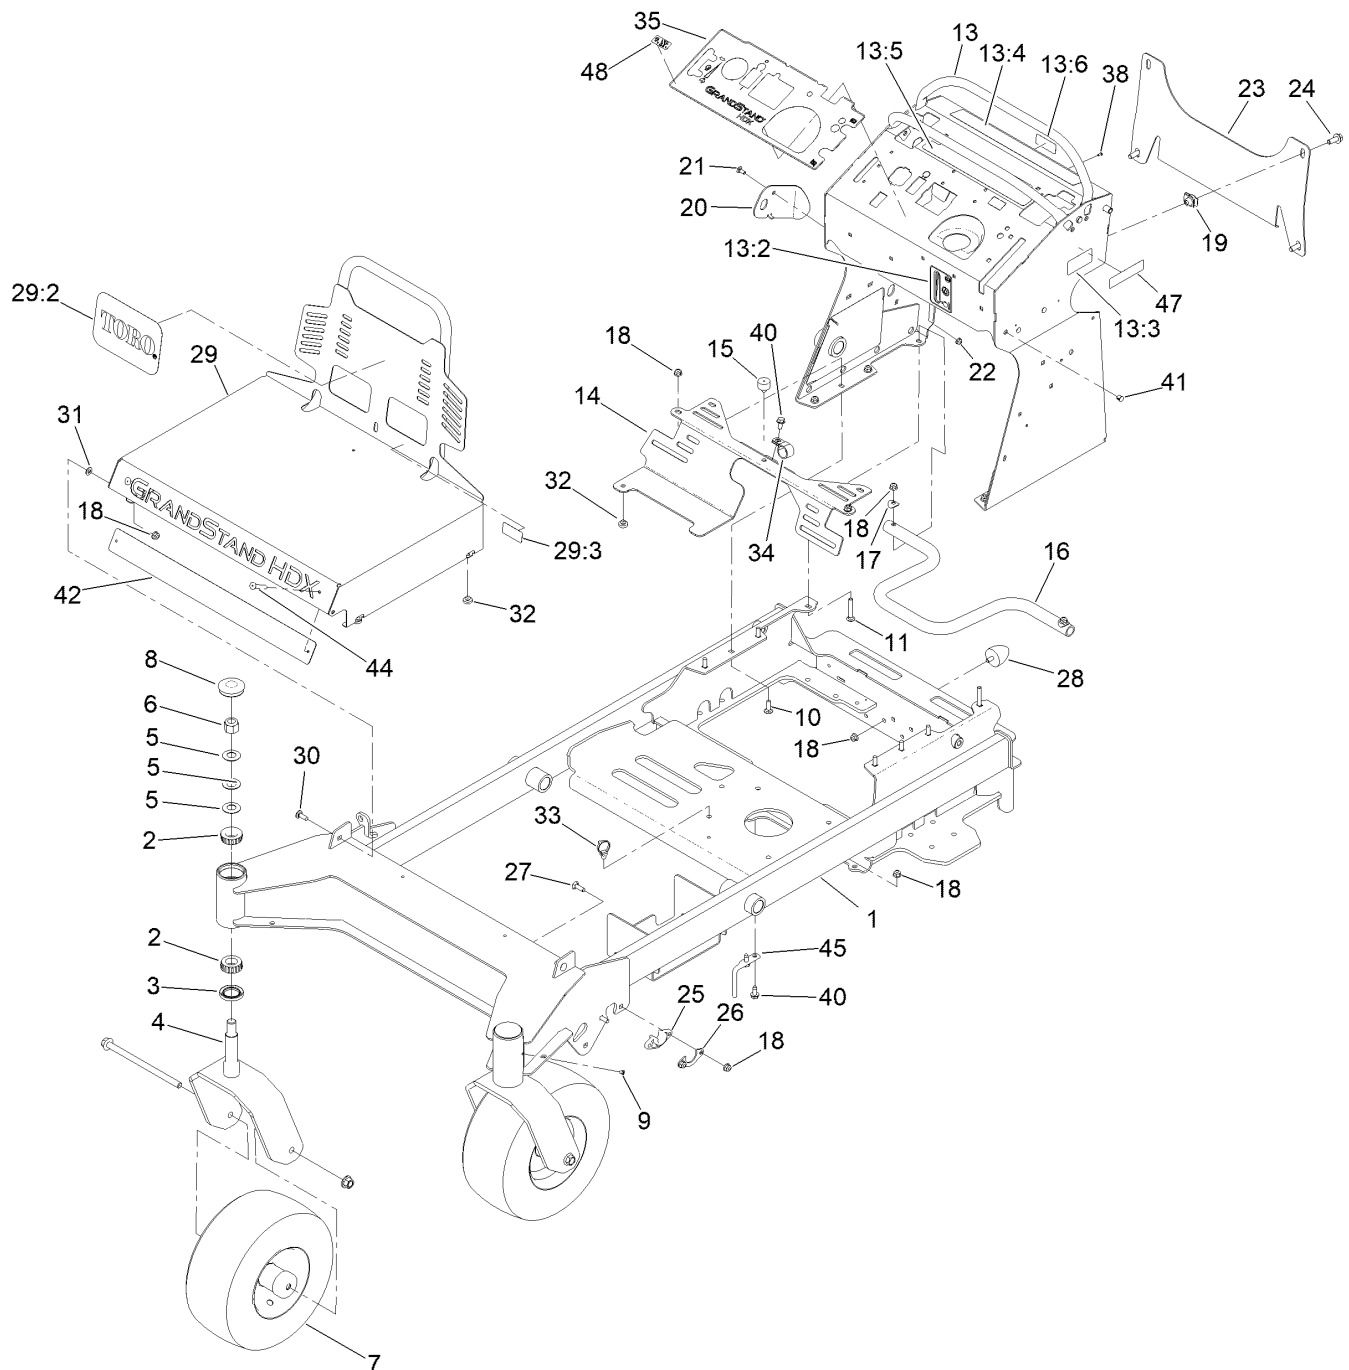

Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-4594-01	1	Frame-52	22	104-7201	1	Nut-HF, NI
2	1-543509	4	Bearing-Roller, Tapered	23	147-4771-05	1	Bracket-Cross
3	116-5647	2	Seal-Grease	24	3234-42	4	Screw-HHF
4	142-9968-01	2	Caster-Fork	25	139-5872	2	Bearing-Flange
5	1-633508	6	Washer-Bellville	26	116-2887	2	Gusset-Lift, Deck
6	3296-51	2	Nut-Lock, NI	27	3230-22	4	Screw-CARR
7	140-4896	2	Semi Pneumatic ASM 13X6.50-6	28	1-543963	3	Bumper-Rubber
8	144-0375	2	Cap-Grease	29	163-4104	1	Engine Guard ASM W/Decals
9	1-811010	2	Plug	29:2	104-7213	1	Decal
10	3230-2	6	Bolt-CARR	29:3	133-4641	1	Decal-Warning, No Riders
11	3230-6	2	Bolt-CARR	30	3230-10	2	Bolt-CARR
13	145-5163	1	Tower Decal ASM	31	93-6079	2	Spacer-Nylon
13:2	147-7921	1	Decal-Oil Level	32	1-513658	6	Bumper
13:3	116-8775	1	Decal-Fill, Fuel	33	32180-030	1	Clip-Tie
13:4	139-2878	1	Decal-Warning	34	2412-39	1	Clamp-R
13:5	131-3526	1	Decal-Controls	35	147-4764	1	Decal-Panel Control, Kawasaki
13:6	147-0212	1	Decal - Fuse	38	3290-271	2	Rivet-Pop
14	161-1339-01	1	Guard-Fan	40	32144-70	3	Screw-HWHTF
15	120-7893	1	Bumper-Grommet	41	104-9368	4	Plug-Dome
16	145-1586-01	1	Tube-Fuel Tank Mount	42	147-4805-01	1	Plate-Backing
17	137-3009	2	Washer-Cup	44	130-8451	2	Rivet-Trifold
18	119-4041	19	Nut-HF	45	147-4825	1	Guide-Belt
19	105-4886	4	Nut-Tinnerman	47	133-8062	1	Decal-Spark Arrestor
20	147-4952	1	Plate-Striker	48	132-0905	1	Decal-Shutdown, CE
21	3229-11	1	Screw-CARR				

Wheel and Bearing Assembly

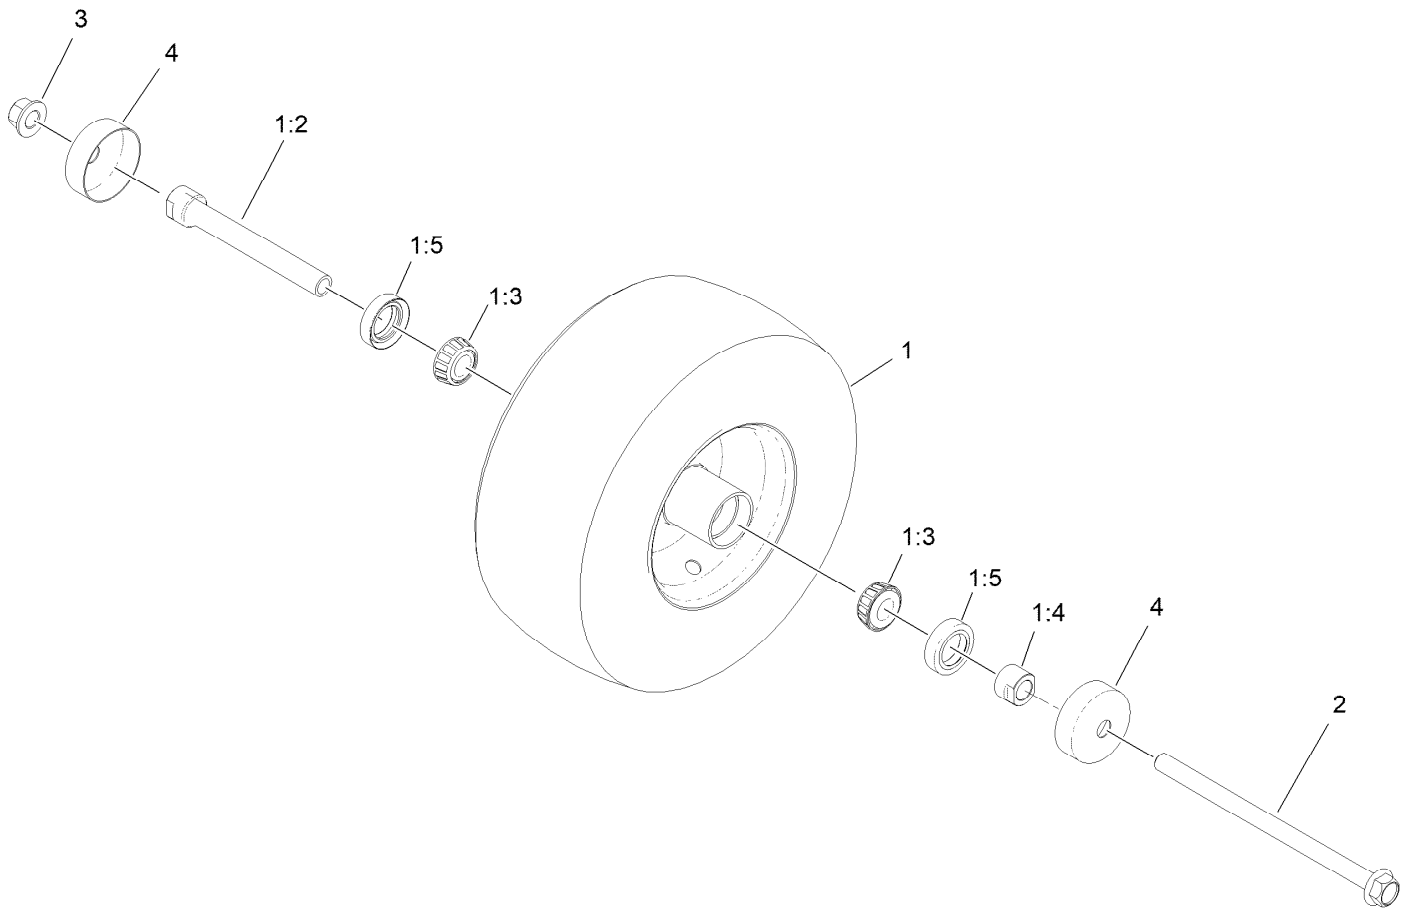


Wheel and Bearing Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Wheel And Bearings ASM ●	1:5	103-0063	2	Seal-Caster
1:2	126-7796	1	Caster Axle ASM	2	126-5389	1	Screw-HHF
1:3	1-633585	2	Bearing-Cone, Taper	3	139-1689	1	Nut-HF
1:4	103-3051	1	Spacer-Nut	4	103-2768	2	Guard-Seal

● Not serviced separately


Platform Assembly

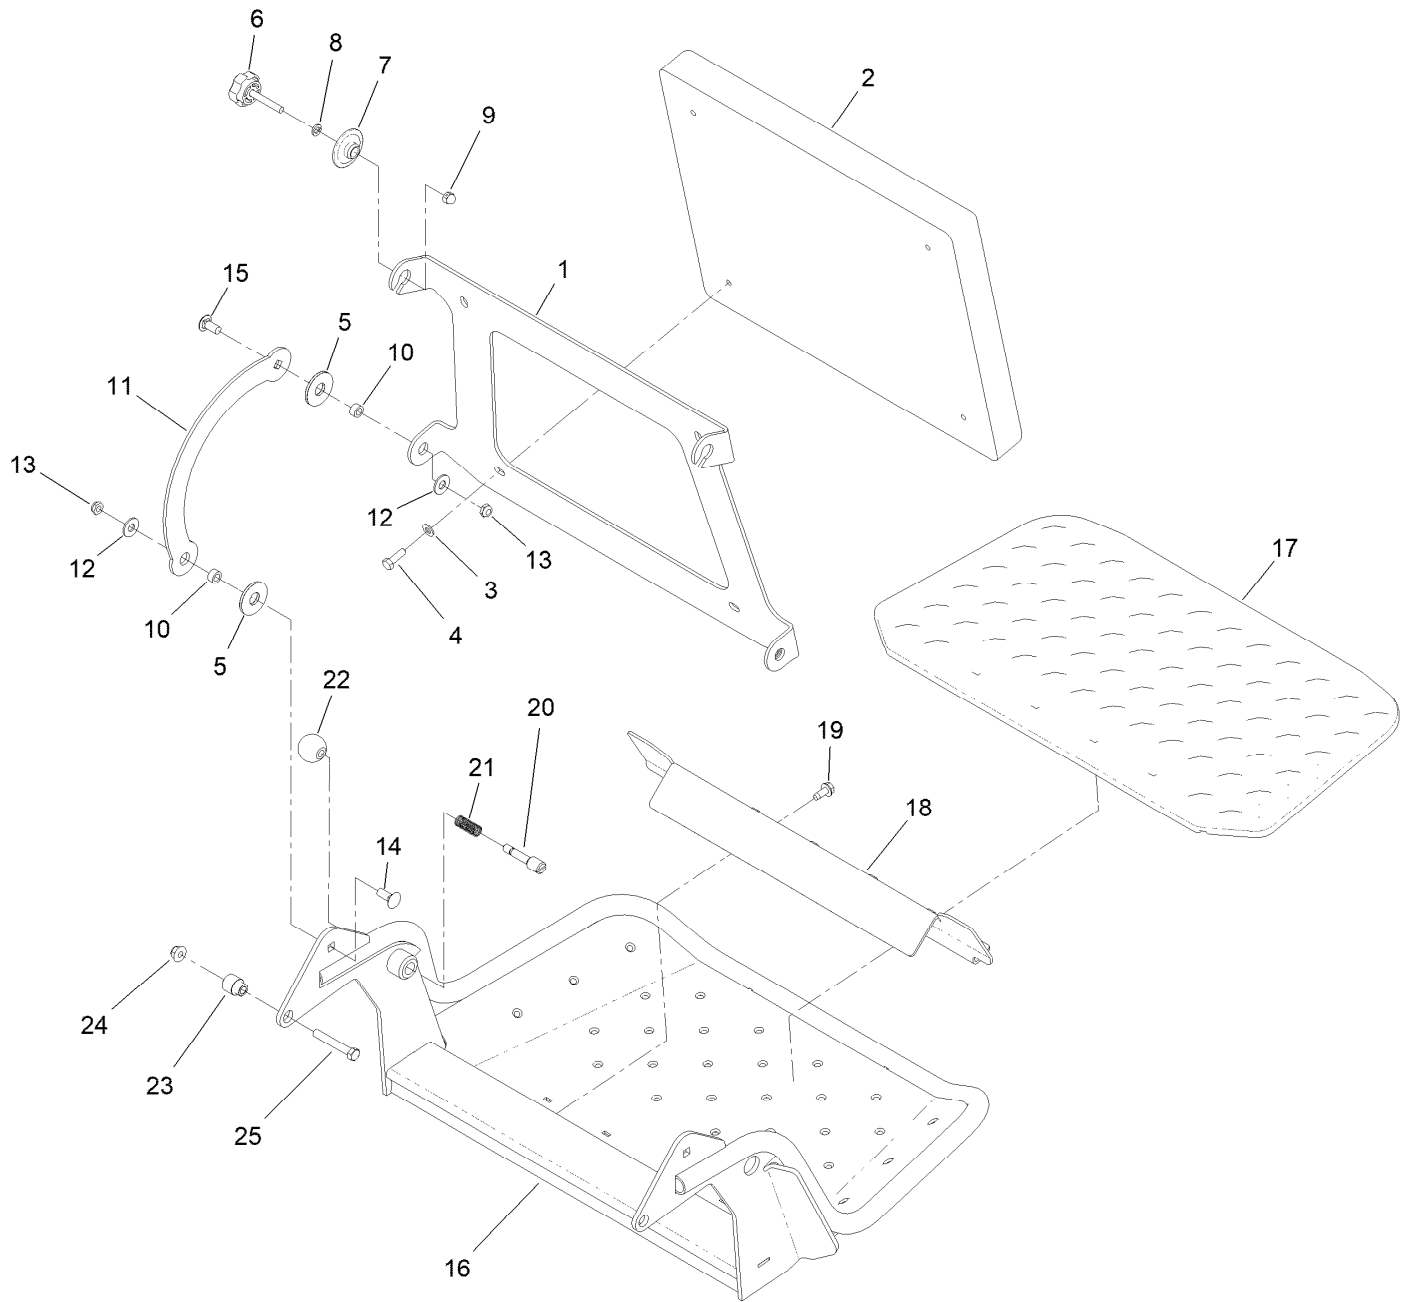

Platform Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-8499-05	1	Hinge-Pad	14	3231-2	2	Bolt-CARR
2	147-4839	1	Cushion-Pad	15	3231-27	2	Screw-CARR
3	3256-23	4	Washer-Plain	16	163-3498-01SP	1	Platform ASM
4	121-7999	4	Screw-HH, Patch	17	126-7157	1	Mat-Platform
5	114-0463	4	Washer-Friction, Composite	18	161-6798	1	Shield Clamp Kit
6	133-1426	2	Knob	19	32144-70	2	Screw-HWHTF
7	116-2886	2	Slide-Bushing	20	119-8650	1	Pin-Latch
8	3253-4	2	Washer-Lock	21	114-5348	1	Spring
9	137-4808	2	Nut-Acorn	22	1-603175	1	Knob-Ball
10	111044	4	Spacer	23	132-7583	2	Bushing-Flanged
11	114-1915-01	2	Link-Pad	24	119-4042	2	Nut-HF, NI
12	3256-4	4	Washer-Flat	25	323-47	2	Screw-HH
13	3296-59	4	Nut-Lock, NI				

Engine Assembly

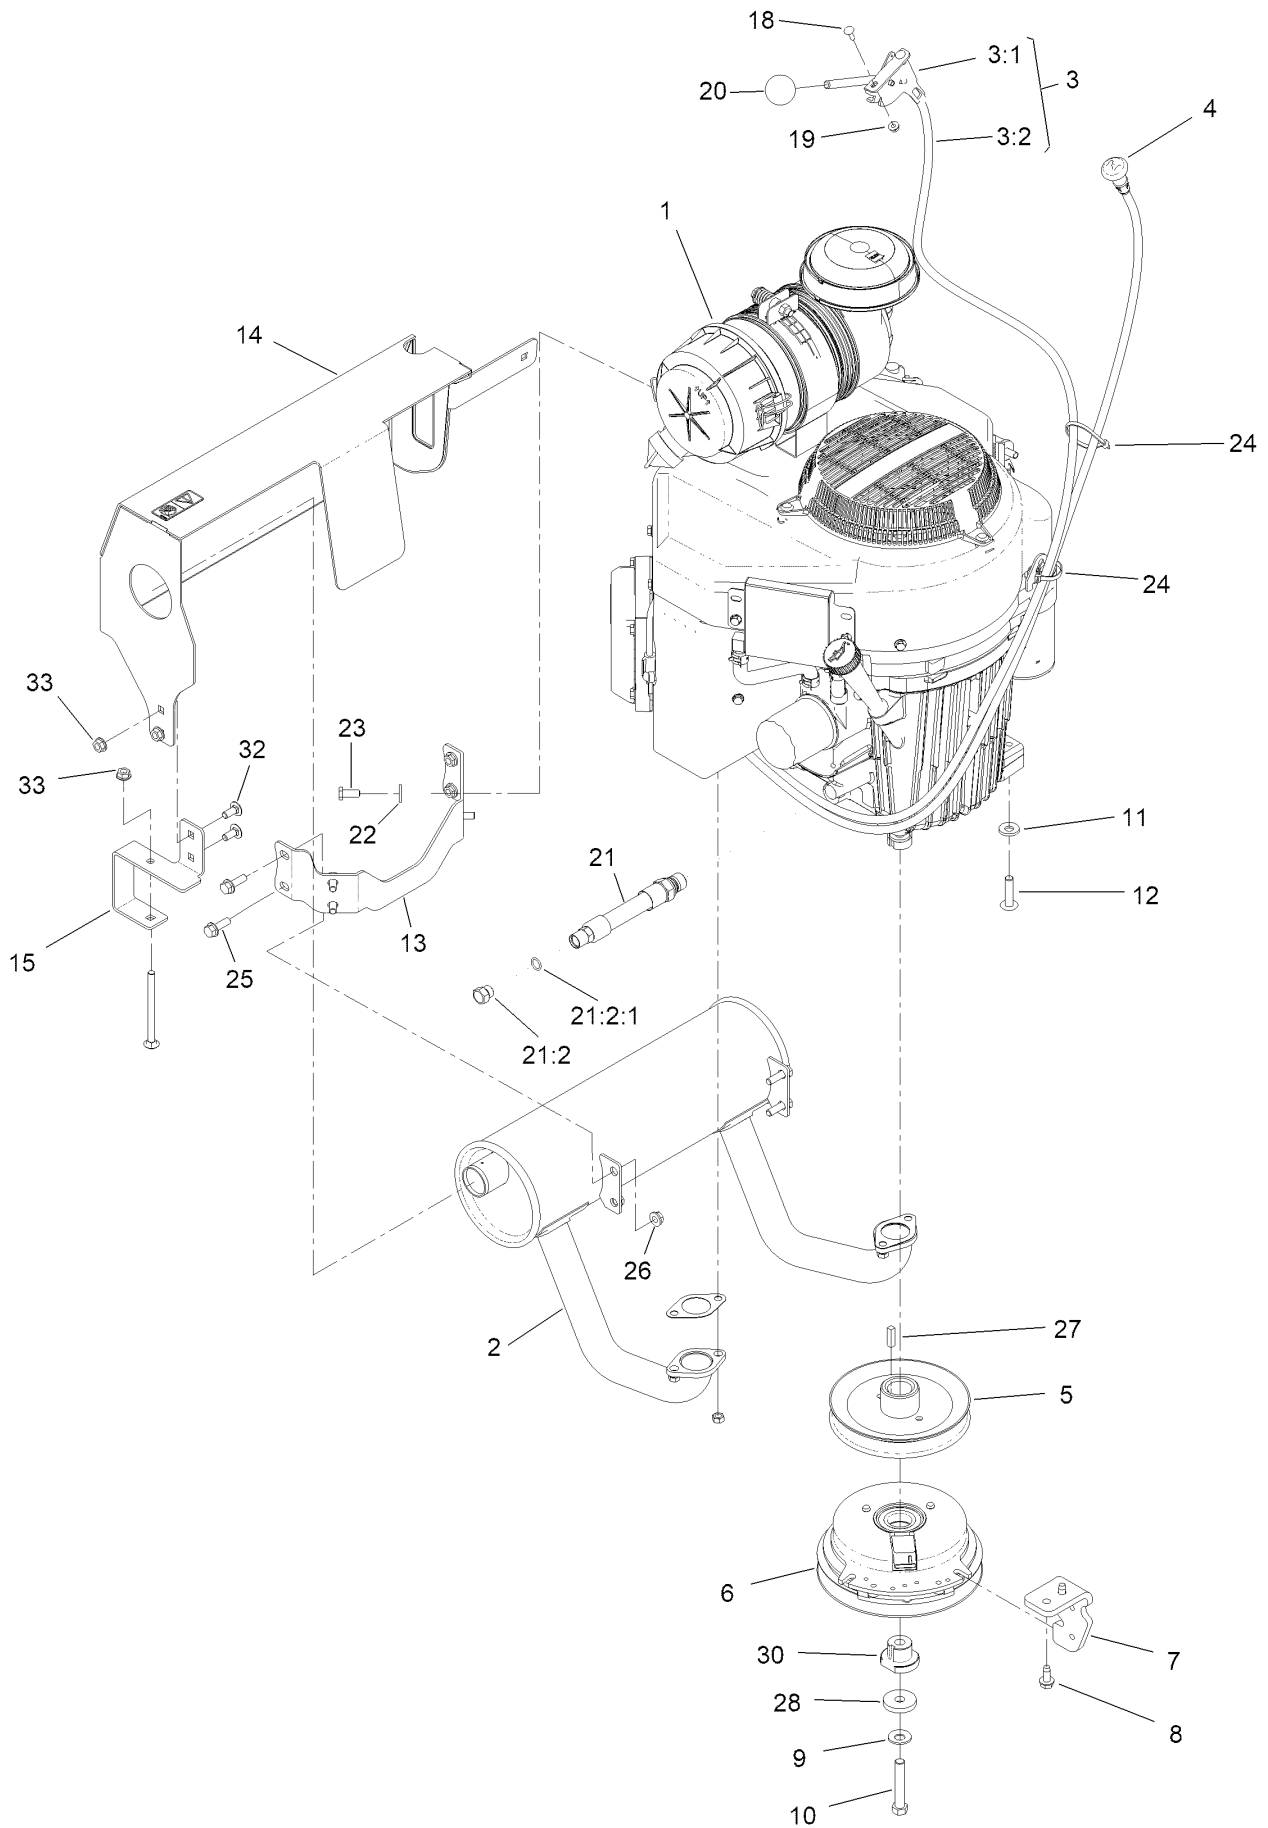

Engine Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Engine Kawasaki Fx921V ■ ▲	14	146-8503	1	ASM-Muffler Guard HDX Kawi
1:1	KW10761	1	Filter-Oil Kaw ●	15	146-8438-05	1	Bracket-Muffler Guard HDX Kawi
1:2	119-5944	1	Element-Filter, Air (Outer) ●	18	1-807533	2	Bolt-CARR
1:3	119-5945	1	Element-Filter, Air (Inner) ●	19	32128-17	2	Nut-Lock, Flange
1:4	142-6949	1	Filter-Fuel ●	20	1-603175	1	Knob-Ball
1:5	KW10676	2	Spark Plug ●	21	133-4659	1	Hose ASM
2	145-6192	1	Muffler, Kawi Fx921	21:2	353-508	1	Plug-HH
3	145-1598	1	Throttle ASM	21:2:1	237-42	1	O-Ring
3:1	145-6187	1	Lever-Control	22	1-303334	4	Washer-Spring
3:2	145-5189	1	Cable-Throttle	23	33114-020	4	Screw-HH
4	145-5188	1	Cable-Choke	24	3290-378	2	Tie-Cable
5	145-6115	1	Pulley	25	3234-17	4	Screw-HHF
6	139-7910	1	Clutch-200Cms	26	32128-20	4	Nut-HF
7	147-0345-05	1	Bracket, Clutch Stop	27	1-807259	1	Key
8	32144-70	2	Screw-HWHTF	28	1-543610	1	Washer-Flat
9	1-603610	1	Washer-Spring	30	147-4838	1	Spacer, D-Drive
10	3212-10	1	Screw-HH	32	137-3061	2	Bolt-CARR
11	98-5975	4	Washer-Belleville	33	32128-25	2	Nut-HF
12	126-0983	4	Screw-BHTF				
13	147-4556	1	Bracket-Muffler				

● Not illustrated

▲ Obtain parts from www.kawpower.com

■ Not serviced separately

Muffler Guard Assembly No. 146-8503

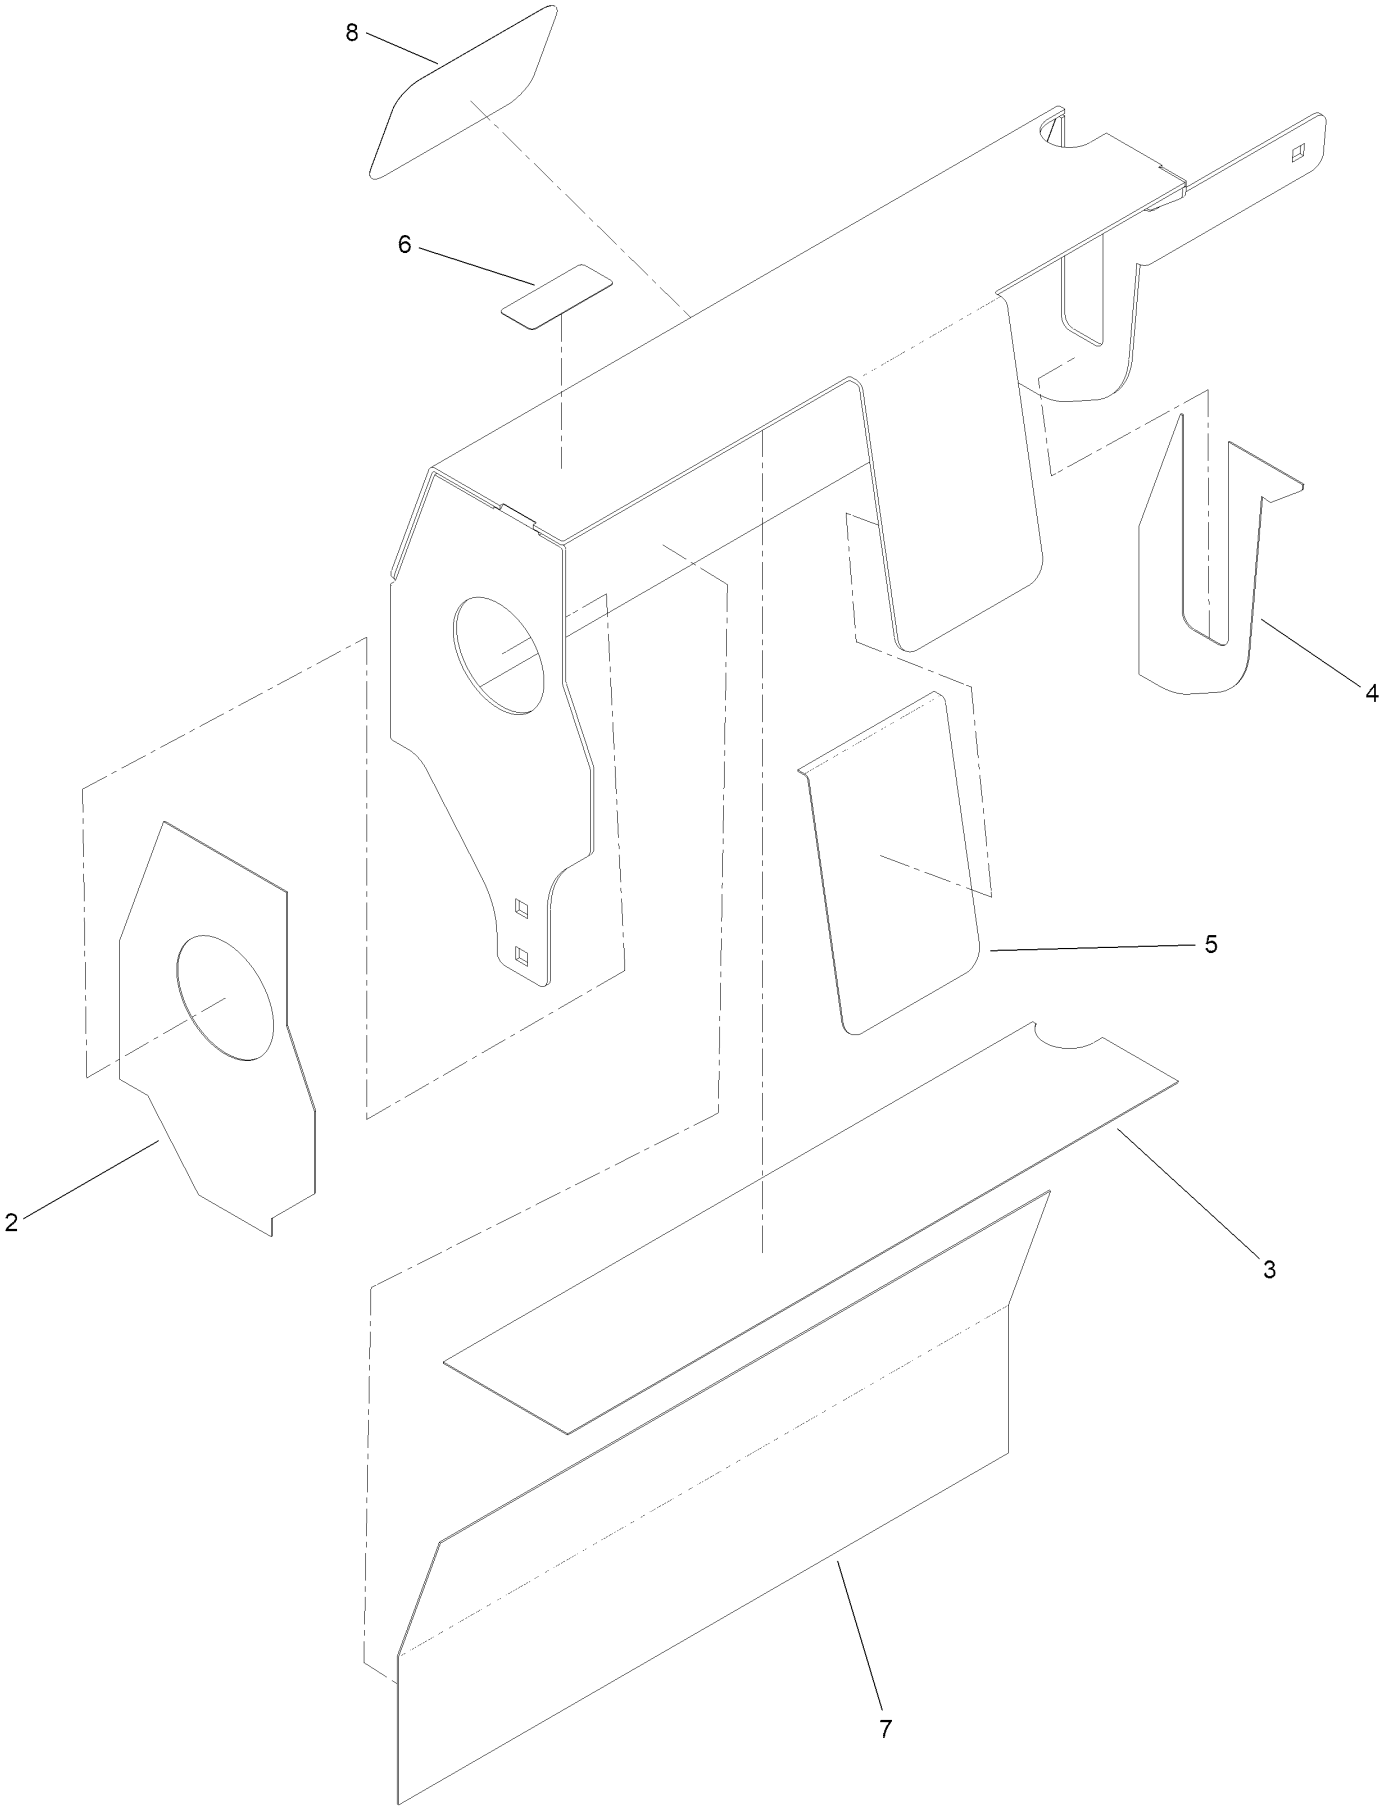


Muffler Guard Assembly No. 146-8503 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	146-8501	1	Shield-Insulation
3	146-8502	1	Shield-Insulation
4	146-8505	1	Shield-Insulation
5	146-8504	1	Shield-Insulation

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	127-0392	1	Decal-Hot Surface
7	146-8693	1	Shield-Insulation
8	94-2579	1	Decal


Fuel Tank Assembly

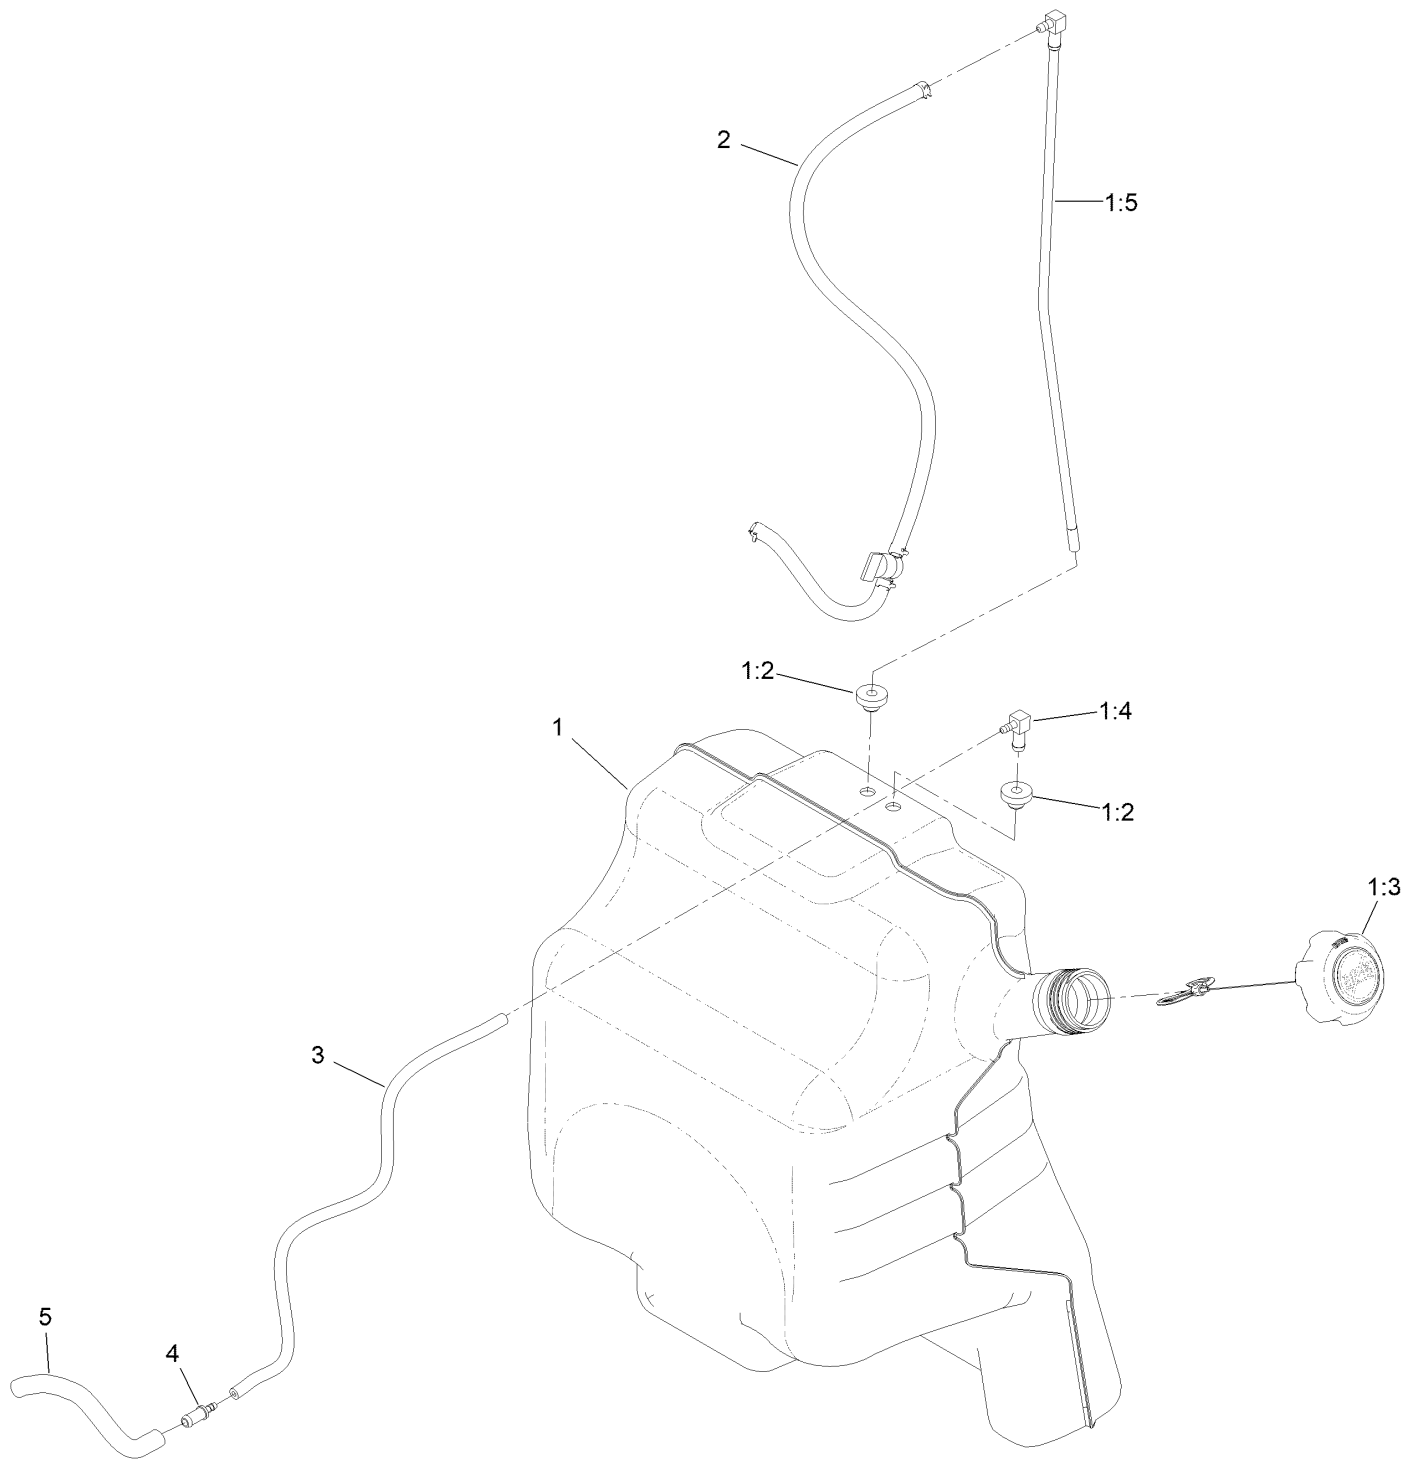

Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-7560	1	Fuel Tank ASM	2	145-6123	1	Fuel Line ASM
1:2	46-6560	2	Bushing	3	110-8255	1	Hose-Fuel
1:3	137-4127	1	Cap-Fuel	4	98-2952	1	Fitting-Straight
1:4	104-5228	1	Fitting-Elbow, 90 DEG	5	132-7576	1	Hose-Fuel
1:5	145-6195	1	ASM, Tube-Fuel				

Electrical Assembly

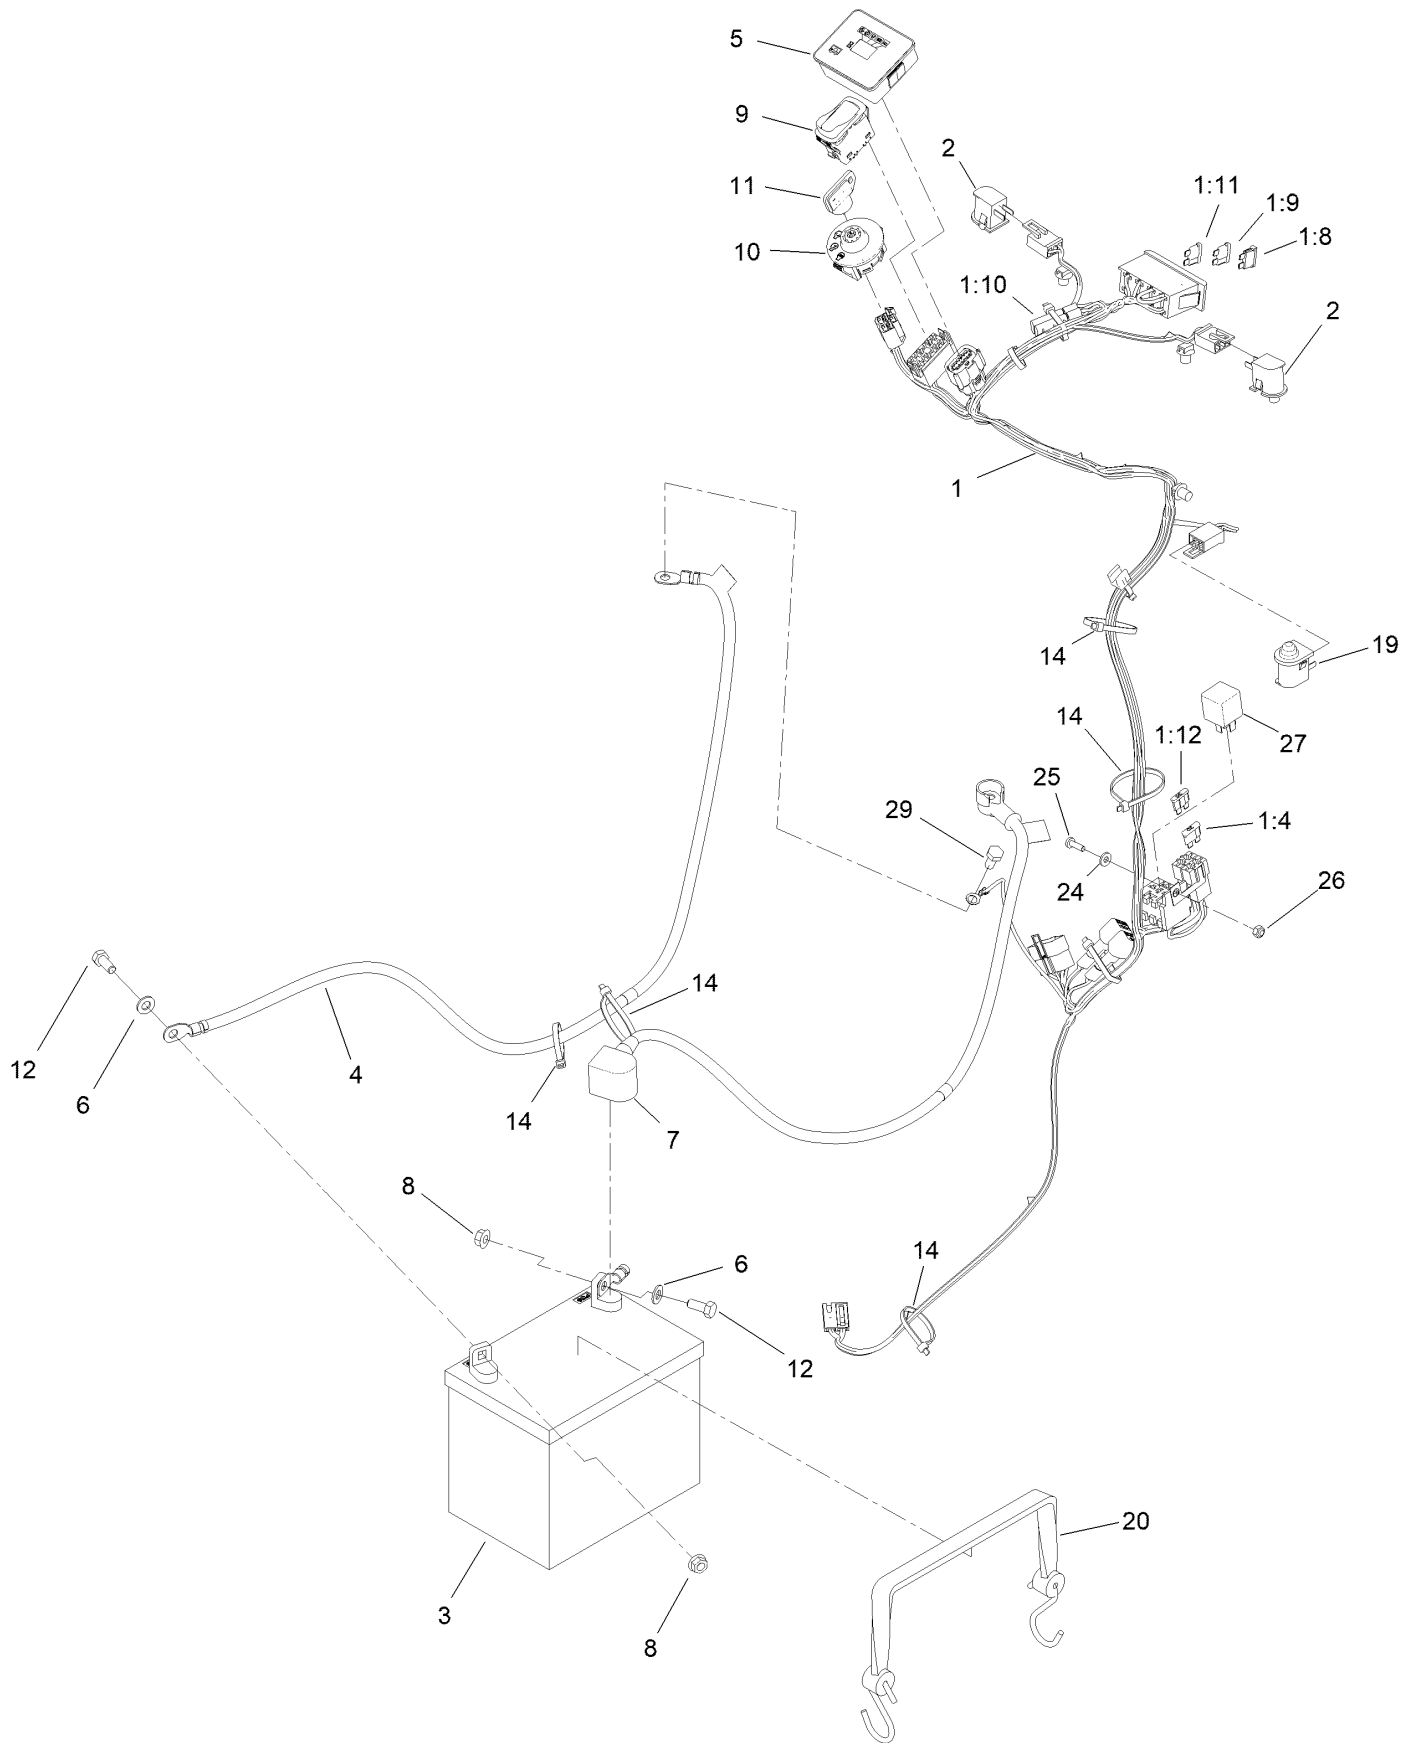

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-5228	1	Harness-Wire, Grandstand	8	109-5715	2	Nut-HHF, Smooth
1:4	109101	1	Fuse-Blade, 20 Amp	9	139-6367	1	Switch-Rocker, (On)-On-Off
1:8	109355	2	Fuse-Blade, 15 Amp	10	137-4101	1	Switch-Ignition
1:9	218-578	1	Fuse-Blade, 10 Amp	11	63-8360	1	Key-Ignition
1:10	116-0053	2	Cap-Plug	12	322-3	2	Screw-HH
1:11	110928	1	Fuse-Blade, 5 Amp	14	3290-378	5	Tie-Cable
1:12	109103	1	Fuse-Blade, 30 Amp	19	133-4654	1	Switch-Plunger
2	82-2190	2	Switch-Bail	20	139-2381	1	Strap-Rubber
3	104-8162	1	Battery	24	3256-14	1	Washer-Flat
4	147-4797	1	Battery-Cable, Bk ASM	25	3290-500	1	Screw-PPH
5	140-1884	1	Module-Meter, Hour	26	3296-2	1	Nut-Lock, NI
6	3256-23	2	Washer-Plain	27	1-643275	1	Relay
7	147-4794	1	Battery-Cable, Rd ASM	29	33114-016	1	Screw-HH

Attachments and Accessories

For 72506 — GrandStand HDX Mower With 52in TURBO FORCE Cutting Unit

Product Name	Model/Part
HYPR-OIL 500 (quart)	114-4713
HYPR-OIL 500 (gallon).....	114-4714
HYPR-OIL 500-5 (5 gallon).....	114-4715
Harness Wire Splitter	121-5988
Toro Premium Fuel Treatment 12oz Bottle.....	131-6572
Speed Setting Tool.....	132-7595
Chute Gate Kit W/ Bag.....	133-1434
Trash Bag Assembly	133-1435
Light Kit.....	133-1437
HOC Set Blocks.....	133-1439
Hydro Oil Change Kit	133-1457
Strobe Light Kit	133-1495
5 Gallon Bucket	133-2533
Hydraulic Cap Lock Kit.....	136-5420
Bucket Mount Kit.....	136-5681
Recycler Kit	139-6653
Blade-18.00 High Flow	140-1242
Blade-18.00 Medium Flow	140-4856
Blade-18.00 Low Flow	140-4857
Blade-18.00 Atomic	140-4858
Blade-18.00 Recycler	140-4859
6 Pack-Blade, 18.00 High Flow.....	140-4882
6 Pack-Blade, 18.00 Med Flow	140-4883
6 Pack-Blade, 18.00 Low Flow	140-4884
6 Pack-Blade, 18.00 Atomic.....	140-4885
6 Pack-Blade, 18.00 Recycler.....	140-4886
2 Transmission Filter Kit	144-3842
Spark Arrestor, 1.5in	146-0561
10W30 4-Cycle Engine Oil (32oz Bottle).....	38280
Toro 4-Cycle SAE 30 Oil (32oz Bottle)	38903

Notes:

Notes:

Notes:



Count on it.