



Form No. 3471-256 Rev D

Count on it.

Parts Catalog

Greensmaster® eTriFlex 3370 Traction Unit

Model No. 04591—Serial No. 418200000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

 
Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Frame Assembly	4
ROPS Assembly	5
Platform Assembly	6
Traction Pedal Assembly	7
Brake Pedal Assembly	8
Brake Actuator Assembly	9
Brake Rod Assembly No. 137-2185	10
Steering Assembly	11
Steering Housing Assembly	12
Wheel Spindle Assembly No. 119-4490	13
Console Assembly	14
Joystick Bracket Assembly No. 120-5280	15
Seat Plate Assembly	16
Traction Assembly	17
RH Wheel Motor Assembly No. 139-8565	18
Gearbox Assembly No. 127-1529	19
LH Wheel Motor Assembly No. 139-8567	20
Lift Assembly	21
Suspension, Reel Motor and Basket Assembly	22
Electric Reel Motor Assembly	23
Basket Assembly No. 132-9599	24
Suspension Pin Position Assembly	25
Hood Assembly	26
Hood Assembly No. 145-1442	27
Electrical Assembly	28
Wire Harness Assembly No. 122-2788	30
Controller Assembly	31
Harness Bracket Assembly	33
Battery Assembly	34
Miscellaneous Parts Assembly	35
Suspension A-Arm Assembly	36
Suspension Crossarm Assembly	37
Attachments and Accessories	38

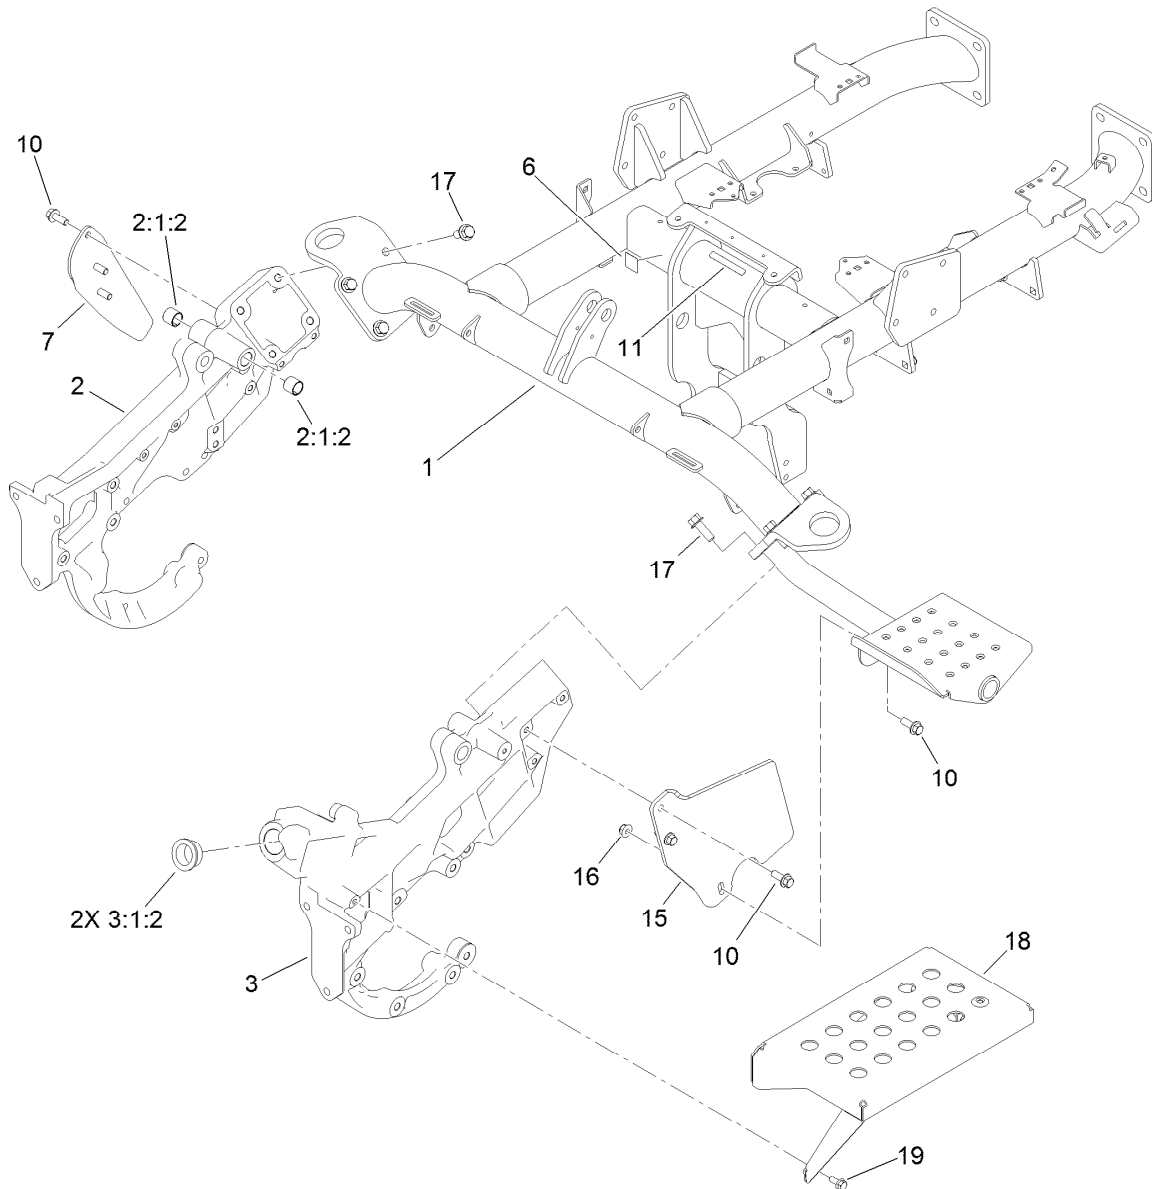


Frame Assembly

Ref.	Part Number	Qty.	Description
1	139-8585SP	1	Frame ASM
2	139-8318	1	Side Casting, RH
2:1:2	94-9609	2	Bushing-Straight
3	139-8319	1	Side Casting, LH
3:1:2	60-0080	2	Bushing
6	138-9470	1	Decal-Markings, CE-Uk
7	133-0062-01	1	Bracket-Jack
10	3234-42	6	Screw-HHF
11	133-8061	1	Decal-Warning
15	133-0004-01	1	Bracket-Step
16	104-8301	1	Nut-HF, NI
17	117-9035	8	Screw-HHF
18	132-9994-01	1	Step
19	3234-47	4	Screw-HHF

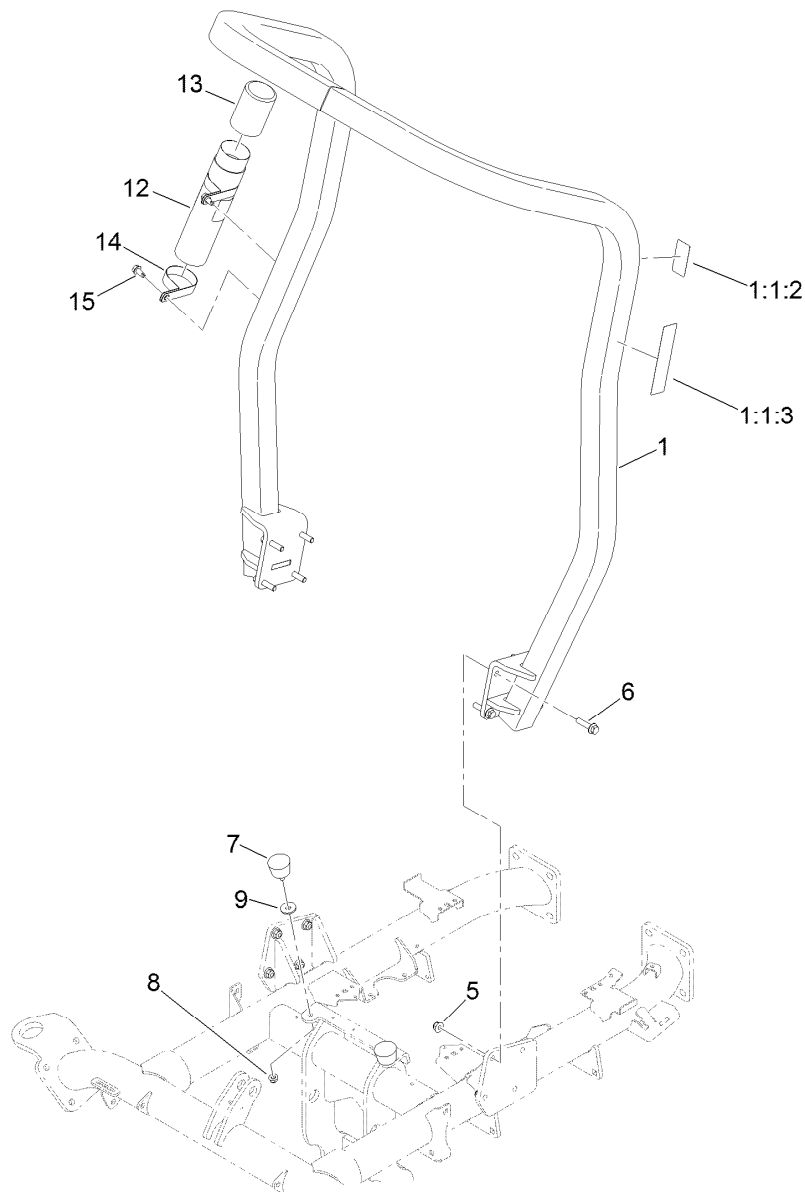 


ROPS Assembly

Ref.	Part Number	Qty.	Description
1	139-8311	1	ROPS ASM
1:1:2	115-8199	1	Decal-ROPS
1:1:3	115-8226	1	Decal-ROPS
5	104-8301	8	Nut-HF, NI
6	137-7951	8	Screw-HHF
7	68-3270	2	Bumper-Rubber
8	104-8300	2	Nut-HF, NI
9	52-2861	2	Washer
12	104-7050	1	Tube-Manual
13	104-7048	1	Cap-Housing
14	2412-133	2	Clamp-R
15	32104-32	2	Screw-HWH

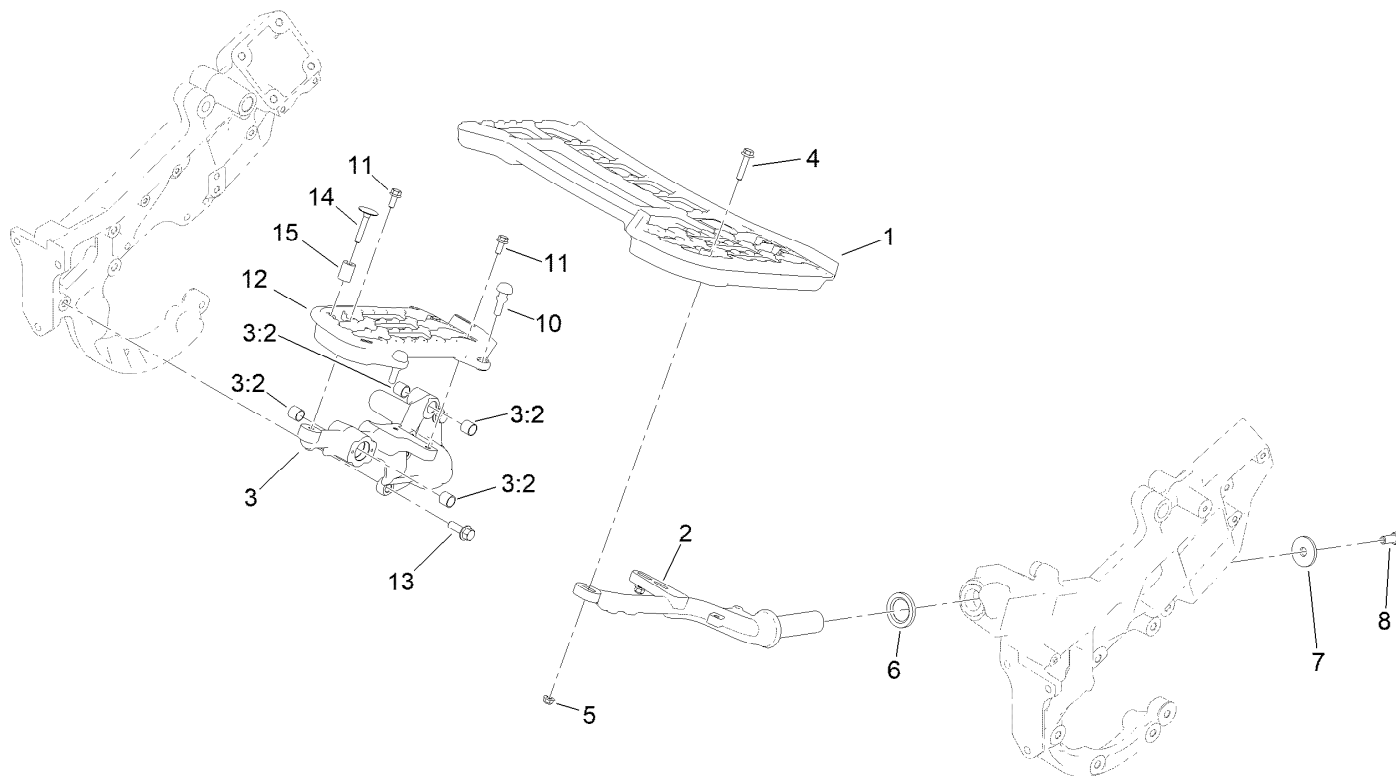 

Platform Assembly


Ref.	Part Number	Qty.	Description
1	137-7768	1	Platform-LH
2	139-8575-01	1	Support-Platform, LH (Mach)
3	132-9895	1	Support-Platform, RH
3:2	256-311	4	Bushing
4	115-1794	3	Screw-HHF
5	104-8300	3	Nut-HF, NI
6	94-8946	1	Washer-Thrust
7	84-1560	1	Washer-Thrust
8	324-4	1	Screw-HH
10	117-9072	2	Bumper-Rubber
11	3234-47	3	Screw-HHF
12	117-9008	1	Platform-RH
13	117-9035	3	Screw-HHF
14	115-8240	1	Screw-Elevator
15	119-0718	1	Spacer

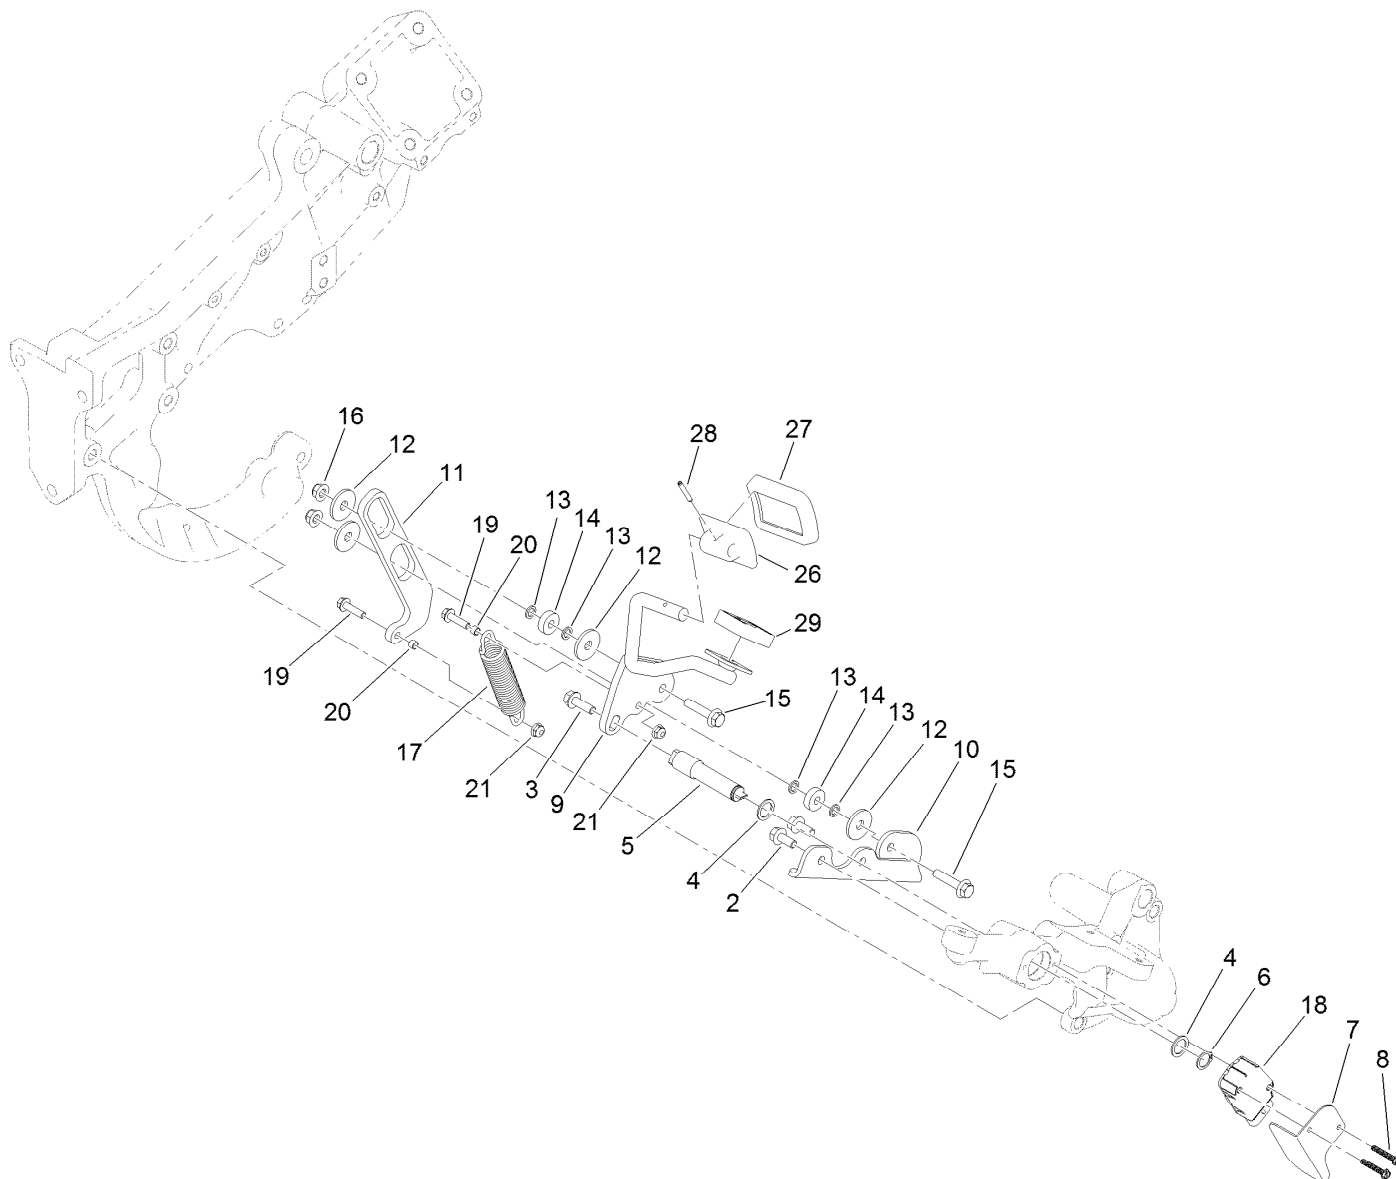 

Traction Pedal Assembly

Ref.	Part Number	Qty.	Description
2	98-9940	2	Screw-HHF
3	115-5142	1	Screw-HHF, Patch
4	7-3590	2	Washer
5	132-9852	1	Shaft-Pedal
6	32151-62	1	Ring-Retaining
7	121-7035	1	Shield-Sensor
8	692501	2	Screw-SHWH
9	137-7814-01	1	Rod-Traction
10	137-7811-01	1	Bracket-Control, Motion
11	145-1063	1	Link-Connecting
12	107675	4	Washer
13	75-5470	4	Spacer-Bearing


Ref.	Part Number	Qty.	Description
14	251-259	2	Bearing-Ball
15	115-1794	2	Screw-HHF
16	104-8300	2	Nut-HF, NI
17	137-7944	1	Spring-Extension
18	122-0917	1	Sensor-Position
19	120-4654	2	Screw-HHF
20	121-2015	2	Spacer
21	104-7201	2	Nut-HF, NI
26	117-9507	1	Pedal-Accelerator
27	74-9100	1	Pad-Pedal, Forward
28	32121-45	1	Pin-Spring
29	74-9110	1	Pad-Pedal, Reverse

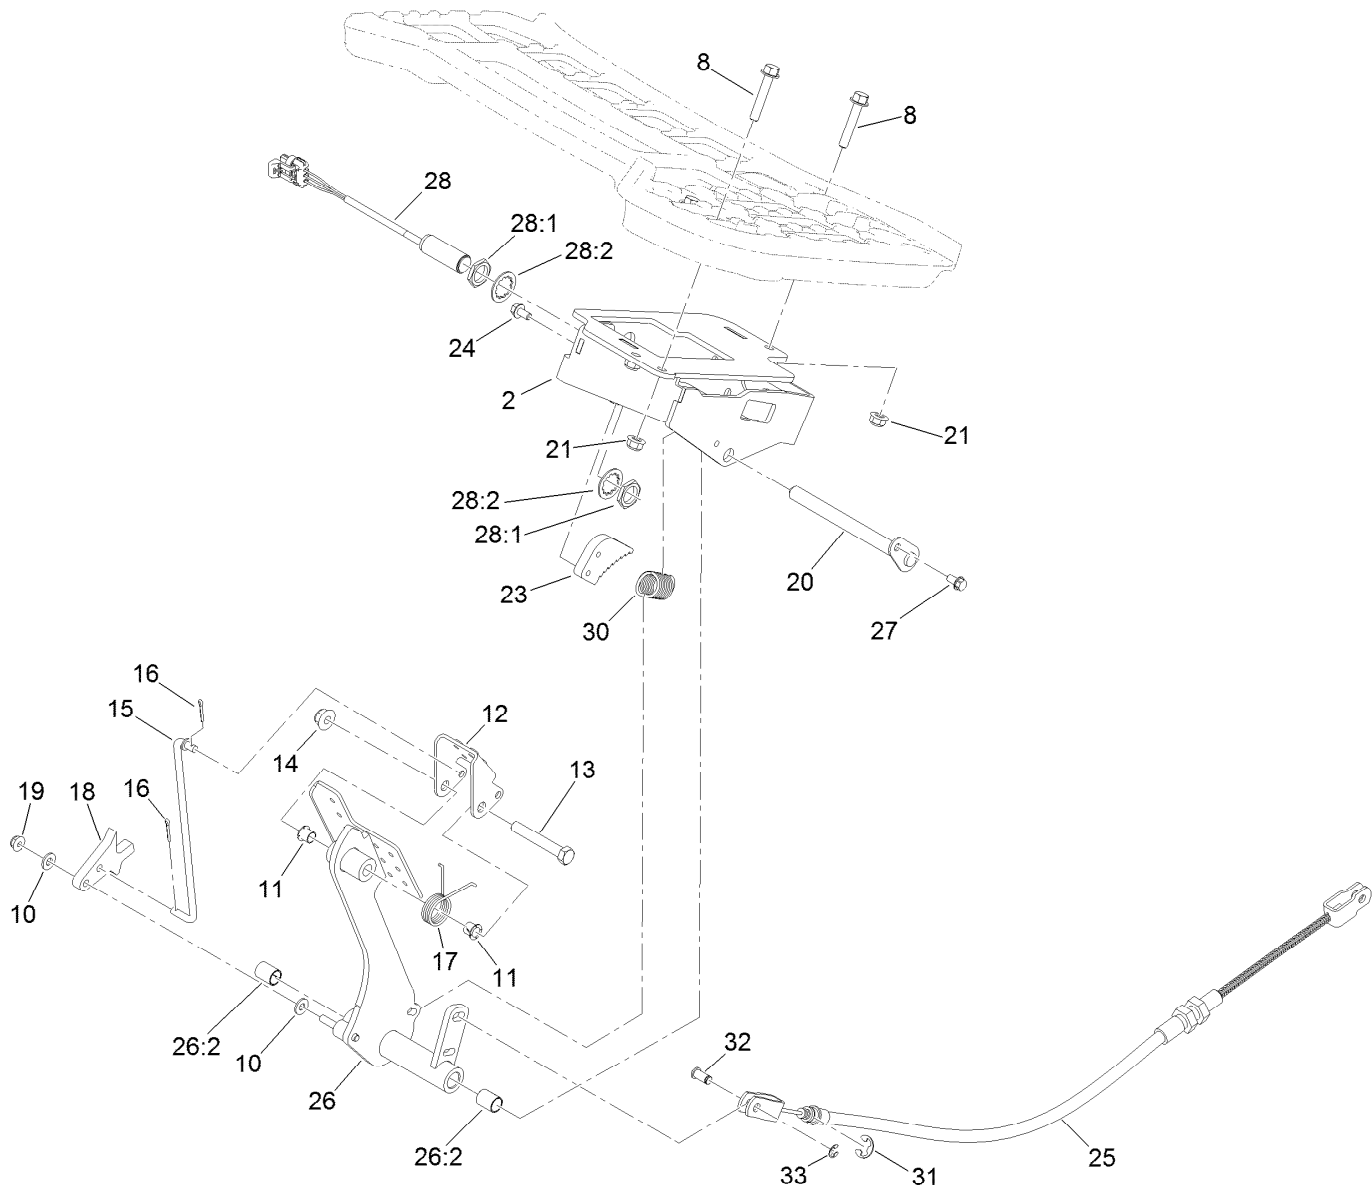 

Brake Pedal Assembly

Ref.	Part Number	Qty.	Description
2	132-9890-03	1	Support-Pedal
8	94-5780	3	Screw-HWH
10	3256-22	2	Washer-Flat
11	52-2891	2	Bushing-Flanged, Nylon
12	99-7963-03	1	Pedal-Park
13	323-12	1	Screw-HH
14	104-8301	1	Nut-HF, NI
15	115-0129	1	Rod-Pawl, Brake
16	3272-6	2	Pin-Cotter
17	99-7140	1	Spring-Torsion
18	117-0238	1	Detent
19	104-7201	1	Nut-HF, NI
20	147-3599	1	Pivot-Pedal
21	104-8300	3	Nut-HF, NI


Ref.	Part Number	Qty.	Description
23	99-7214	1	Pawl-Brake
24	119-1065	2	Screw-Lock, HF
25	137-7770	1	Cable-Brake
26	137-8109	1	Brake Pedal ASM
26:2	133-0090	2	Bushing-Split
27	32144-4	1	Screw-HWH
28	115-5300	1	Proximity Sensor ASM
28:1	117-3207	2	Nut-Hex
28:2	117-3208	2	Washer-Lock, Internal Tooth
30	136-7316	1	Spring-Extension
31	32120-47	1	Ring-Retaining, External
32	109-6887	1	Pin-Clevis
33	701197	1	E-Ring

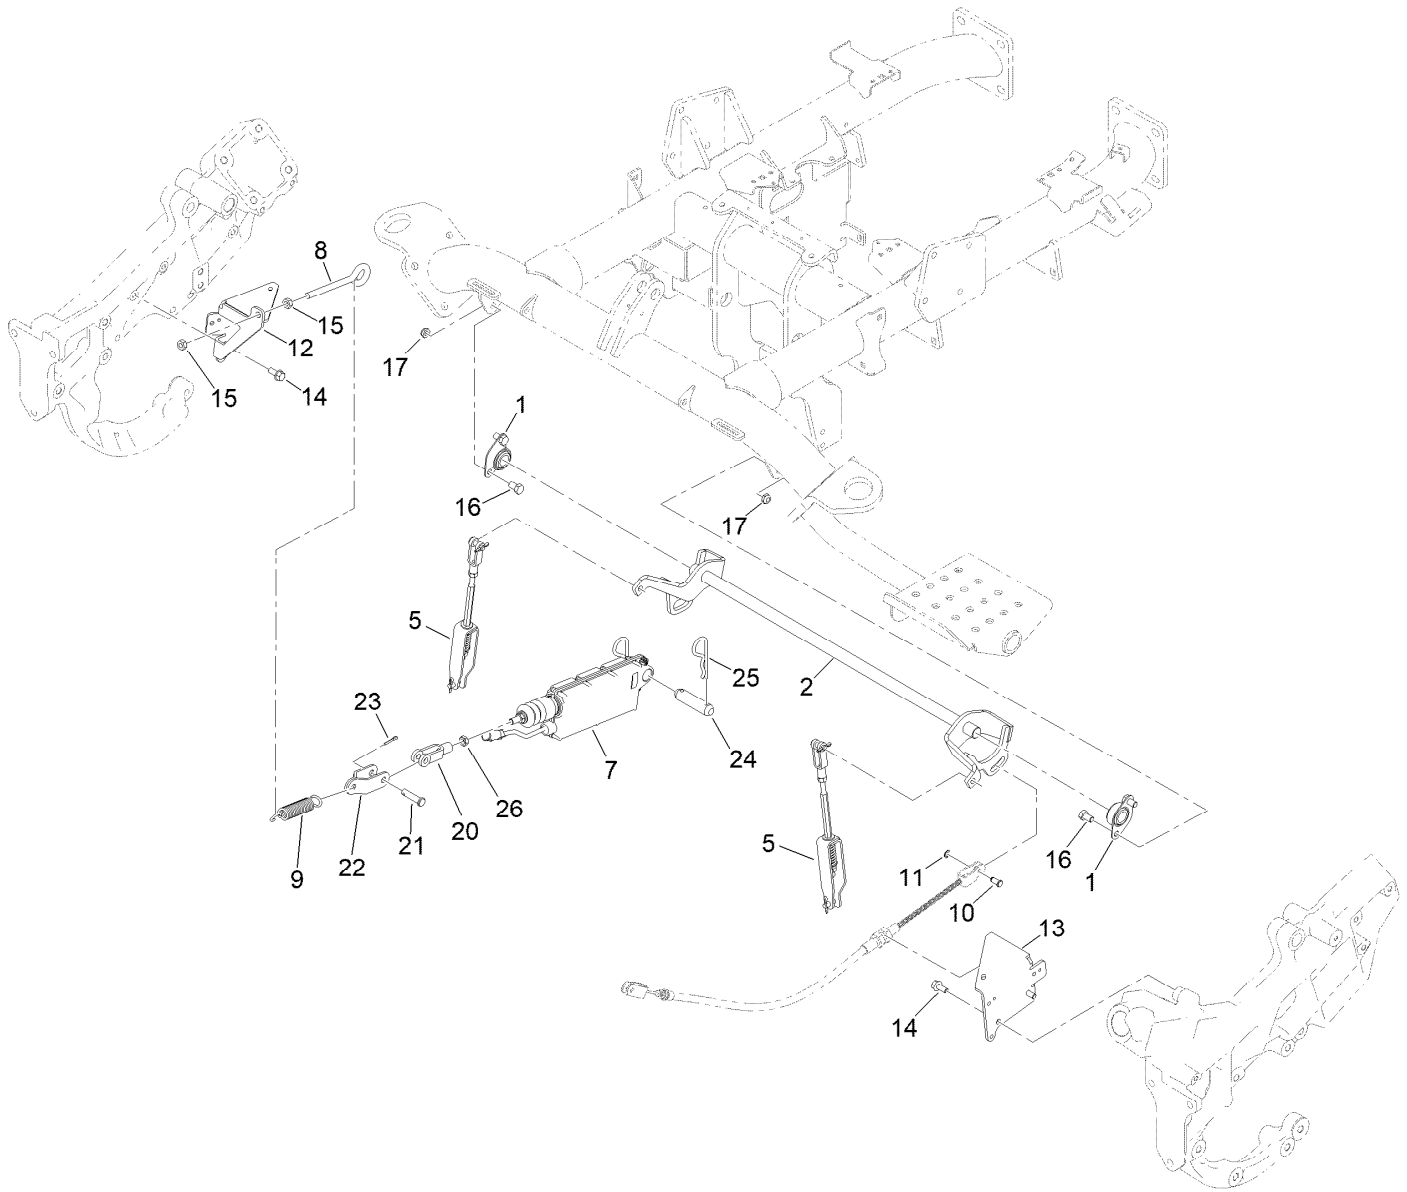 

Brake Actuator Assembly


Ref.	Part Number	Qty.	Description
1	1-633102	2	Bearing-Flange, Side
2	145-0060-03	1	Cross Shaft-Brake [black]
5	137-2185	2	Brake Rod ASM
7	139-8587	1	Actuator-Brake
8	137-8026	1	Bolt-Eye
9	93-5985	1	Spring-Extension
10	109-6887	1	Pin-Clevis
11	701197	1	E-Ring
12	137-7790-03	1	Bracket-Spring
13	137-7769-03	1	Bracket-Cable
14	98-9940	4	Screw-HHF

Ref.	Part Number	Qty.	Description
15	3217-7	2	Nut-Hex
16	323-34	4	Screw-HH
17	3296-59	4	Nut-Lock, NI
20	1-633131	1	Yoke-Linkage, Brake
21	283-10	1	Pin-Clevis
22	137-7838	1	Link ASM
23	3272-10	1	Pin-Cotter
24	27-4240	1	Pin-Cylinder
25	3290-256	2	Pin-Hair
26	3220-3	1	Nut-HJ

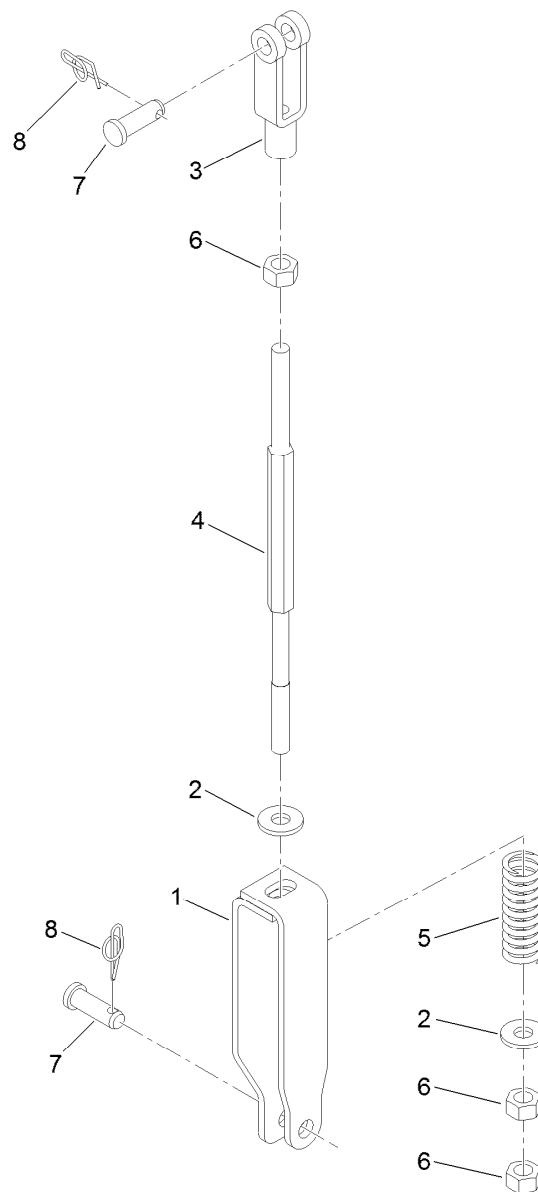 

Brake Rod Assembly No. 137-2185


Ref.	Part Number	Qty.	Description
1	137-2180	1	Brake Clevis ASM
2	120-9646	2	Washer-Flat
3	282-2	1	Yoke
4	137-8056	1	Rod-Brake
5	137-8085	1	Spring-Seat, Compression
6	3219-2	3	Nut-Hex
7	283-1	2	Pin-Clevis
8	116-6639	2	Pin-Cotter, Locking

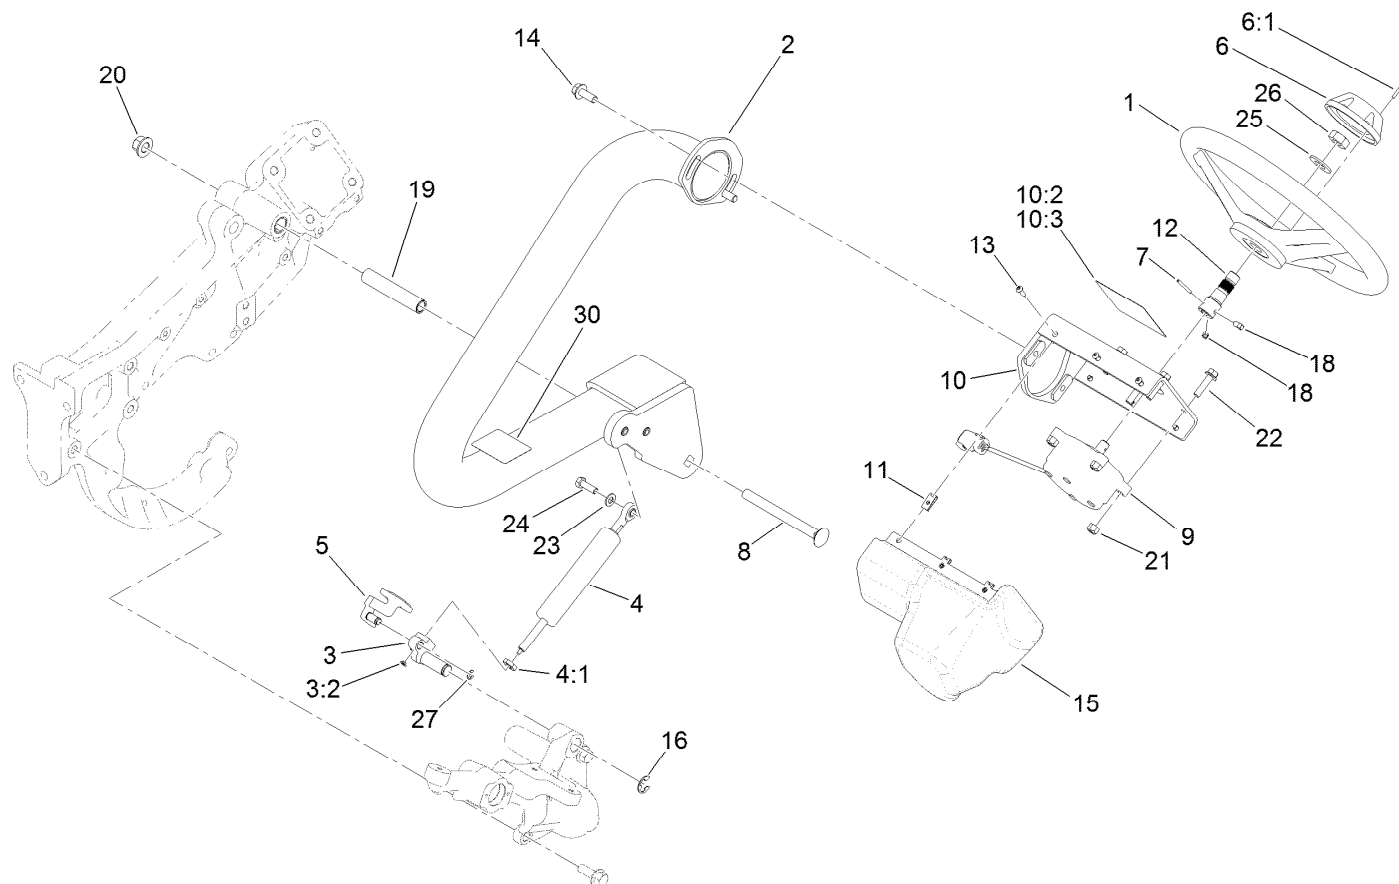 

Steering Assembly

Ref.	Part Number	Qty.	Description
1	145-0051	1	Steering Wheel
2	145-0093-01	1	Arm-Steering
3	133-9030	1	Pivot Lever ASM
3:2	133-8995	1	Bushing
4	133-9036	1	Cylinder-Gas
4:1	112-8617	1	Nut-Hex
5	138-6456	1	Lever (Mach)
6	68-5140	1	Cap-Wheel, Steering
6:1	32144-21	1	Screw
7	933156	1	Pin-Roll
8	140-7029	1	Screw-CARR
9	132-9935	1	Steering Unit
10	137-8092	1	Steering Mount ASM
10:2	139-8320	1	Decal-Danger
10:3	139-8321	1	Decal-Danger, CE
11	3290-277	6	Nut-Speed


Ref.	Part Number	Qty.	Description
12	136-4262	1	Shaft-Adapter, Steering
13	3274-39	6	Screw-HSBH
14	3234-42	2	Screw-HHF
15	119-9300	1	Cover-Valve, Steering
16	32120-19	1	E-Ring
18	126-3824	2	Screw-Set, SQH
19	117-9002	1	Spacer
20	99-5107	1	Nut-HF Nylock
21	3296-29	4	Nut-Lock, NI
22	119-4036	4	Screw-HHF
23	3256-23	1	Washer-Plain
24	322-5	1	Screw-HH
25	3256-27	1	Washer-Flat
26	3296-33	1	Nut-Lock, NI
27	701197	1	E-Ring
30	119-9346	1	Decal-Arm, Steering

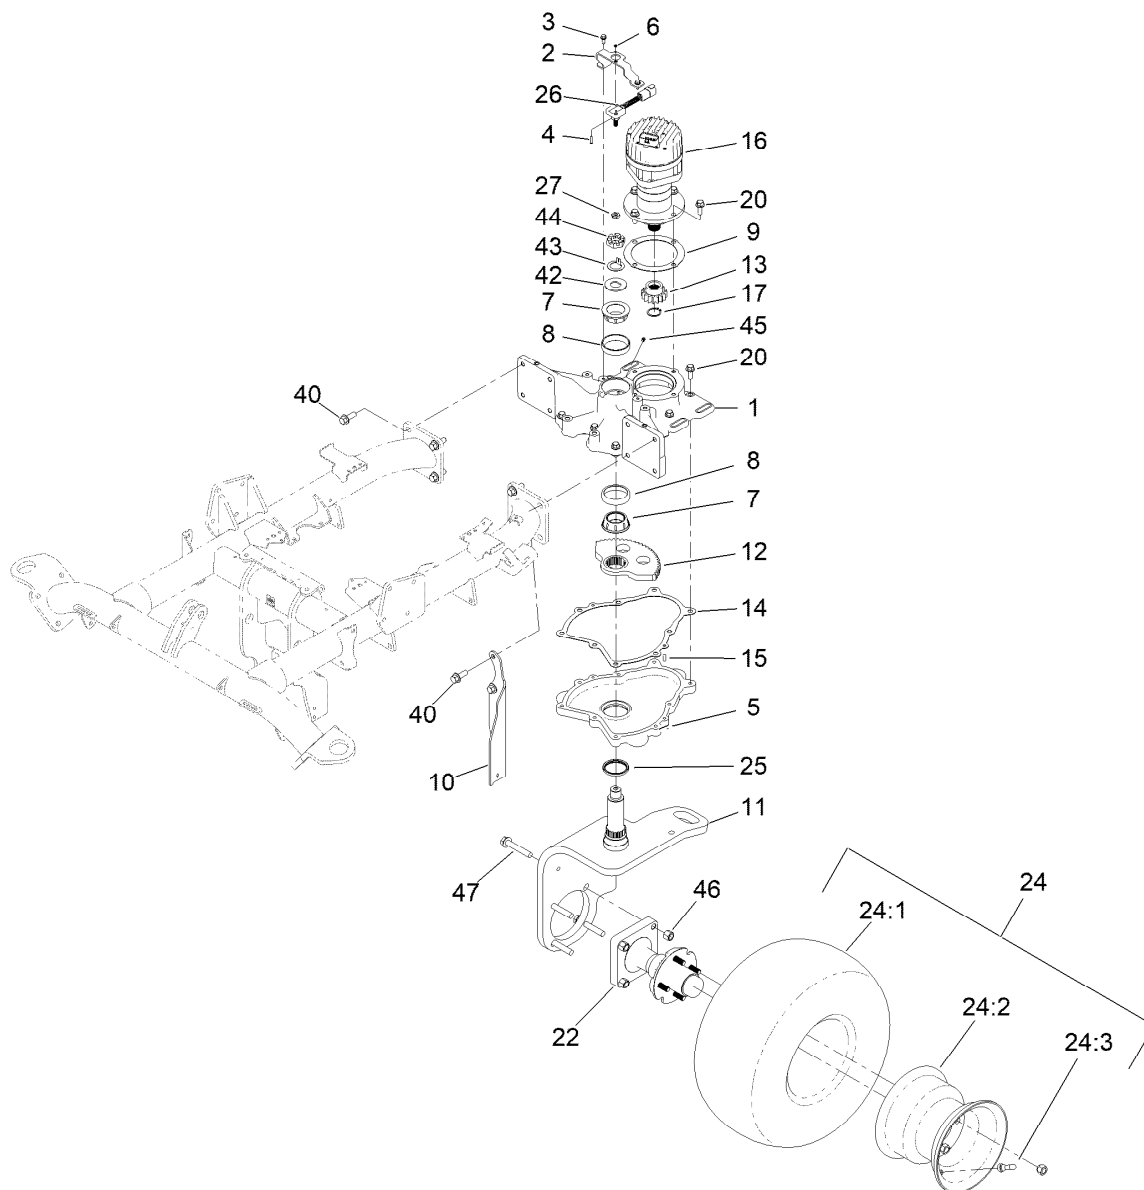 

Steering Housing Assembly


Ref.	Part Number	Qty.	Description
1	139-8314	1	Housing-Steering
2	137-7868-03	1	Bracket-Sensor, Steering
3	32144-10	2	Screw-HWH
4	3290-313	2	Screw-SPH
5	137-8166-03	1	Housing
6	3296-52	2	Nut-Lock, NI
7	107-7589	2	Cone-Bearing (W/ Seal)
8	107-7590	2	Cup-Bearing
9	133-0347	1	Gasket
10	145-1396	1	Bracket-Jack
11	139-8313	1	Fork-Caster
12	137-8170	1	Gear-Spur, 64T
13	133-0346	1	Pinion-16T
14	133-0348	1	Gasket
15	136-2667	2	Pin-Dowel
16	133-0349	1	Steering Unit ASM
17	32120-2	1	Ring-Retaining
20	3234-42	13	Screw-HHF

Ref.	Part Number	Qty.	Description
22	119-4490	1	Wheel Spindle ASM
24	117-9033	1	Wheel And Tire ASM
24:1	120-2783	1	Tire
24:2	217-60	1	Rim
24:3	232-27	1	Stem-Valve
25	108-7019	1	Seal-Shaft
26	122-0914	1	Sensor-Rotary, Body/Magnet Matched Set
27	112-8617	1	Nut-Hex
40	117-9035	8	Screw-HHF
42	137-8171	1	Washer
43	137-7943	1	Washer-Tang
44	137-7942	1	Nut-Castle
45	302-59	1	Plug-EXT Hex Spl
46	3296-23	4	Nut-Lock, NI
47	3234-40	4	Screw-HF

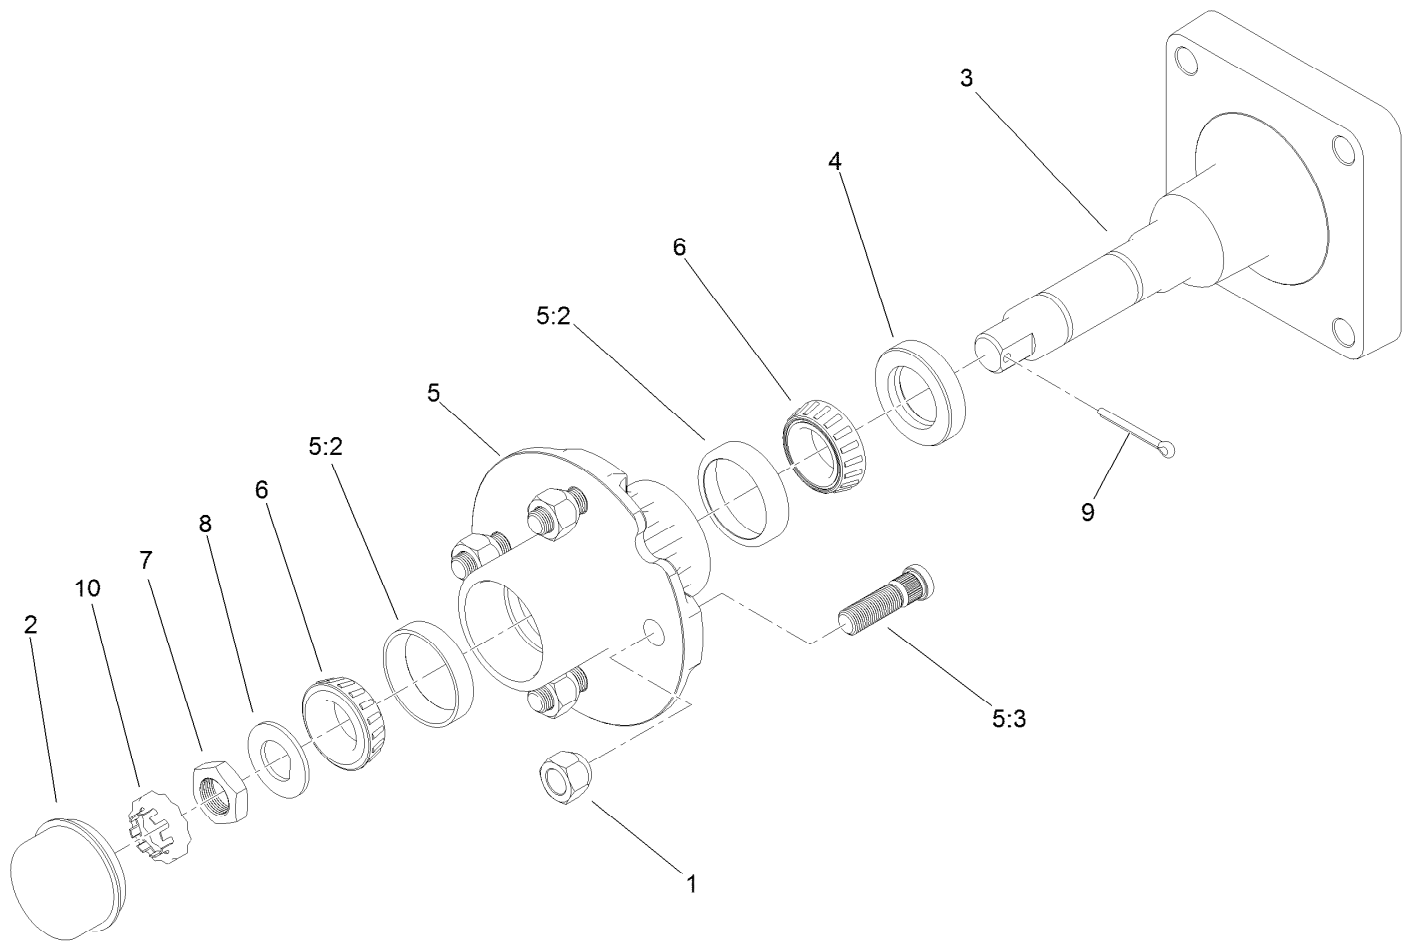 

Wheel Spindle Assembly No. 119-4490


Ref.	Part Number	Qty.	Description
1	139-2564	4	Nut-Lug
2	241-119	1	Cap-Dust
3	112-7173	1	Spindle
4	112-1690	1	Seal-Oil
5	117-9093	1	Hub ASM
5:2	254-72	2	Bearing-Cup, Tapered
5:3	114-3918	4	Stud-Wheel
6	254-92	2	Cone-Bearing, Outer
7	117-8260	1	Nut
8	117-8259	1	Washer-Spindle
9	3272-18	1	Pin-Cotter
10	93-0307	1	Nut-Lock, Retainer

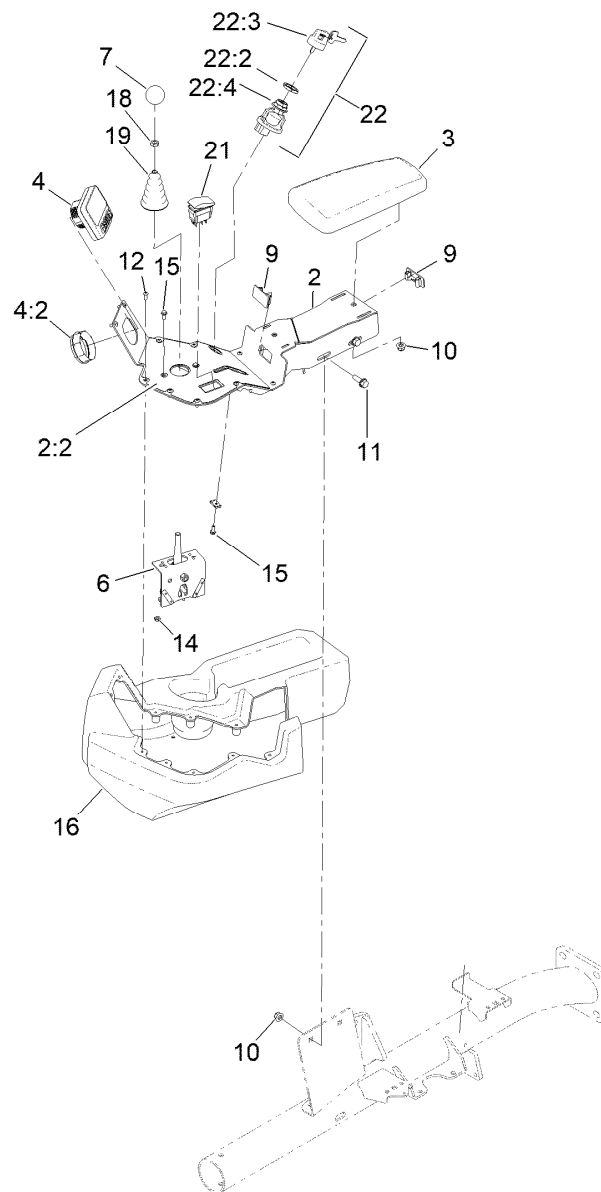 

Console Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	137-8094	1	Console ASM
2:2	137-8058	1	Decal-Console
3	108-7602	1	Rest-Arm
4	161-1700	1	Display-LCD
4:2	161-1723	1	Nut-Display
6	120-5280	1	Bracket-Joystick
7	120-9752	1	Knob-Round, Yellow
9	99-7420	2	Plug-Hole
10	104-8300	4	Nut-HF, NI
11	3234-29	2	Screw-HHF
12	115-9830	10	Screw-HSBH

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
14	3296-12	2	Nut-Lock, NI
15	3290-321	2	Screw-HWH
16	132-9955	1	Cover-Console
18	3218-3	1	Nut-Jam
19	93-5961	1	Boot-Lever
21	112-3530	1	Switch-Rocker, On-On-On
22	106-5269	1	Ignition Switch ASM
22:2	108-8660	1	Nut-Mounting
22:3	106-5270	1	Ignition Key Set
22:4	108-8659	1	Washer-Backup

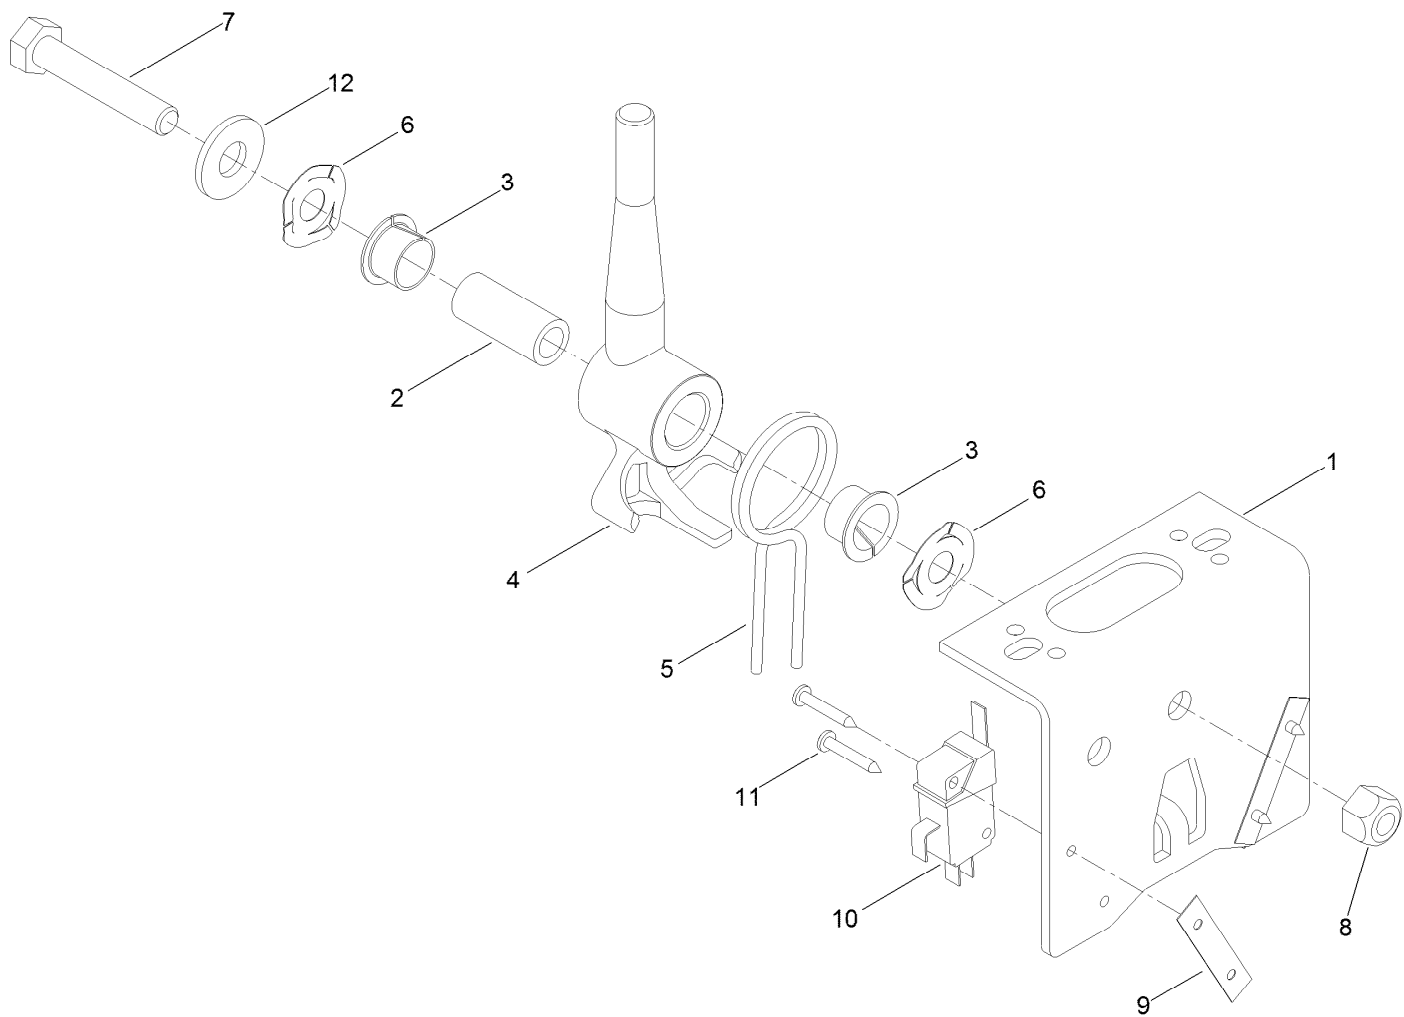 


Joystick Bracket Assembly No. 120-5280

Ref.	Part Number	Qty.	Description
1	115-5357-03	1	Bracket-Joystick
2	106-4192	1	Spacer
3	93-5547	2	Bushing-Nylon
4	119-3540	1	Hub-Pivot, Joystick
5	105-8289	1	Spring-Torsion
6	106-4193	2	Washer-Finger, Spring
7	322-9	1	Screw-HH
8	3296-29	1	Nut-Lock, NI
9	3290-354	2	Nut-Speed
10	108-6496	2	Switch (W/Boot)
11	95-3003	4	Screw-PPHTF
12	3256-3	1	Washer-Flat

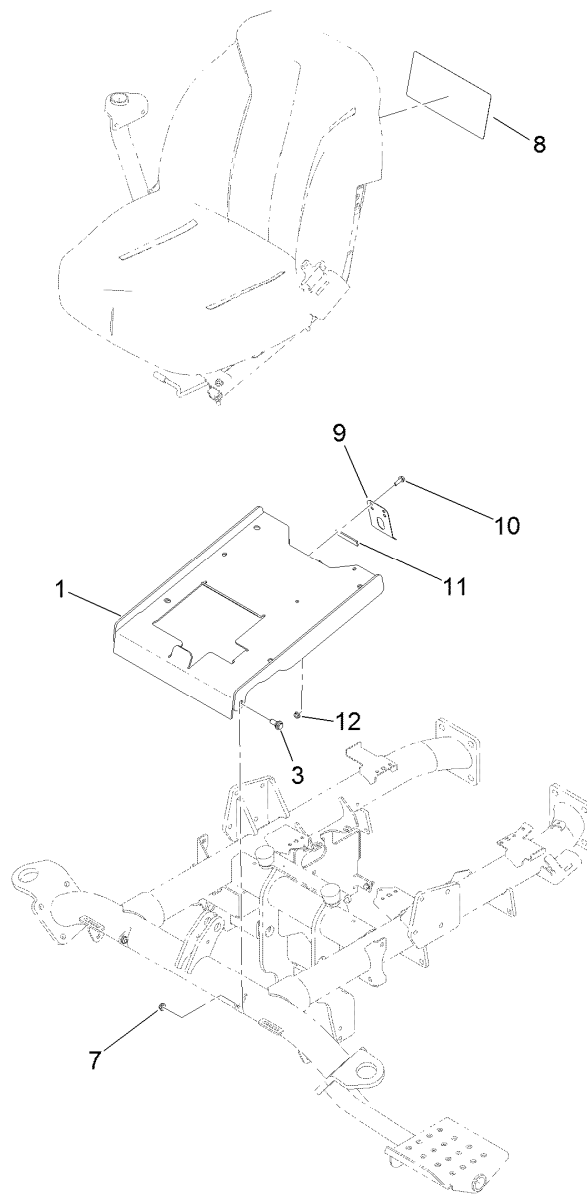 

Seat Plate Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	139-8552-03	1	Plate-Seat
3	94-7582	2	Bolt-Shoulder
7	3296-59	2	Nut-Lock, NI
8	137-8052	1	Decal-Service
9	139-8557	1	Latch-Seat
10	115-5103	2	Screw-HHF
11	120-5753	1	Strip-Foam
12	104-7201	2	Nut-HF, NI

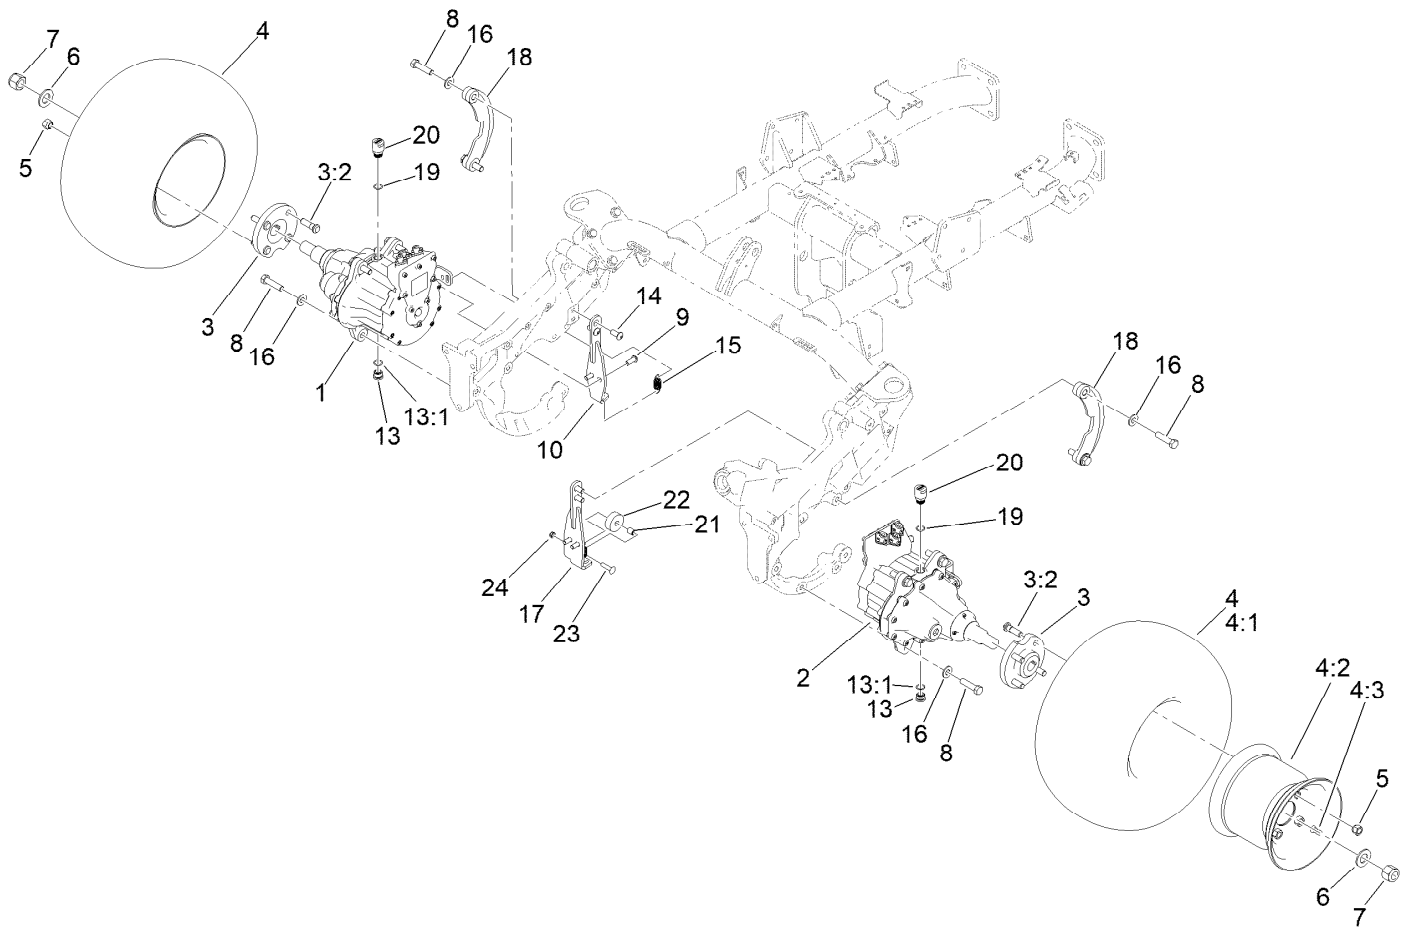 

Traction Assembly


Ref.	Part Number	Qty.	Description
1	139-8565SP	1	RH Wheel Motor ASM
2	139-8567SP	1	LH Wheel Motor ASM
3	140-6228	2	Hub ASM-Wheel
3:2	10-6830	4	Stud-Type, Drive
4	117-9030	2	Wheel And Tire ASM
4:1	120-2783	1	Tire
4:2	117-9032	1	Rim
4:3	232-27	1	Stem-Valve
5	139-2564	8	Nut-Lug
6	AU496-11094	2	Washer-Flat
7	137-7973	2	Nut-Hex
8	325-8	12	Screw-HH
9	3274-94	4	Screw-HSBH
10	137-7727-01	1	Gusset-Motor, RH

Ref.	Part Number	Qty.	Description
13	133-7659	2	Plug ASM W/Magnet
13:1	237-79	1	O-Ring
14	3274-105	4	Screw-HSBH
15	136-7153	2	Spring-Extension
16	87-7270	12	Washer-Thrust
17	139-8348-01	1	Gusset-LH
18	132-9996-01	2	Link-Support
19	237-79	2	O-Ring
20	139-8576	2	Valve-Breather
21	88-7450	1	Spacer-Lever, Control
22	139-8346	1	Roller
23	112-6950	1	Screw-CARR
24	3296-47	1	Nut-Lock,NI

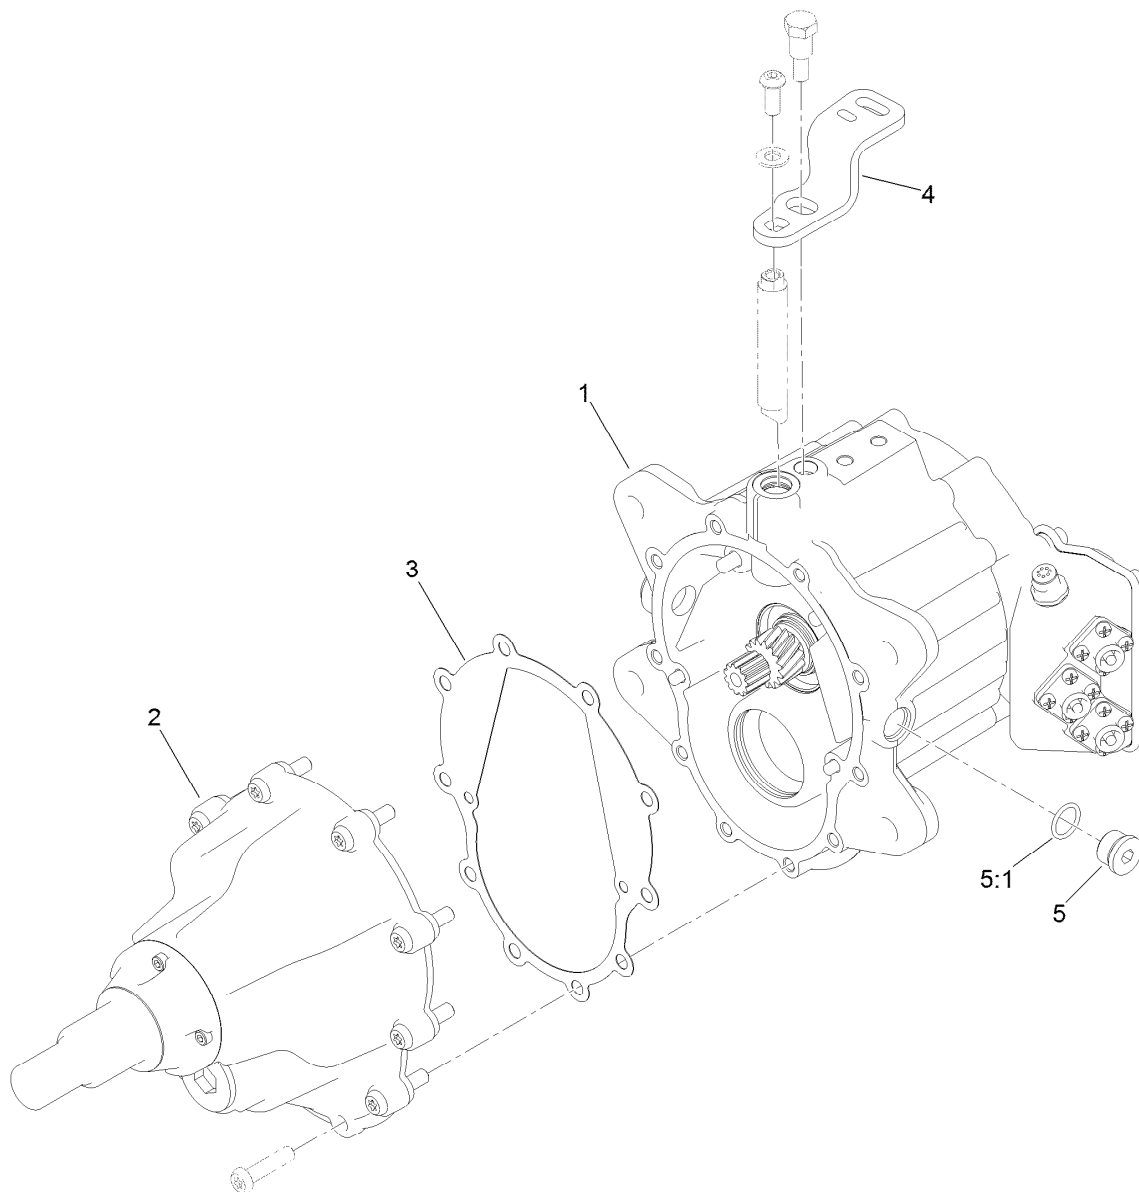 

RH Wheel Motor Assembly No. 139-8565


Ref.	Part Number	Qty.	Description
1	139-8566SP	1	RH Motor ASM
2	127-1529	1	Gear Box ASM
3	121-9254	1	Gasket-Gearbox
4	132-9873	1	Lever-Brake, RH
5	353-988	2	Plug-Hex
5:1	237-79	1	O-Ring

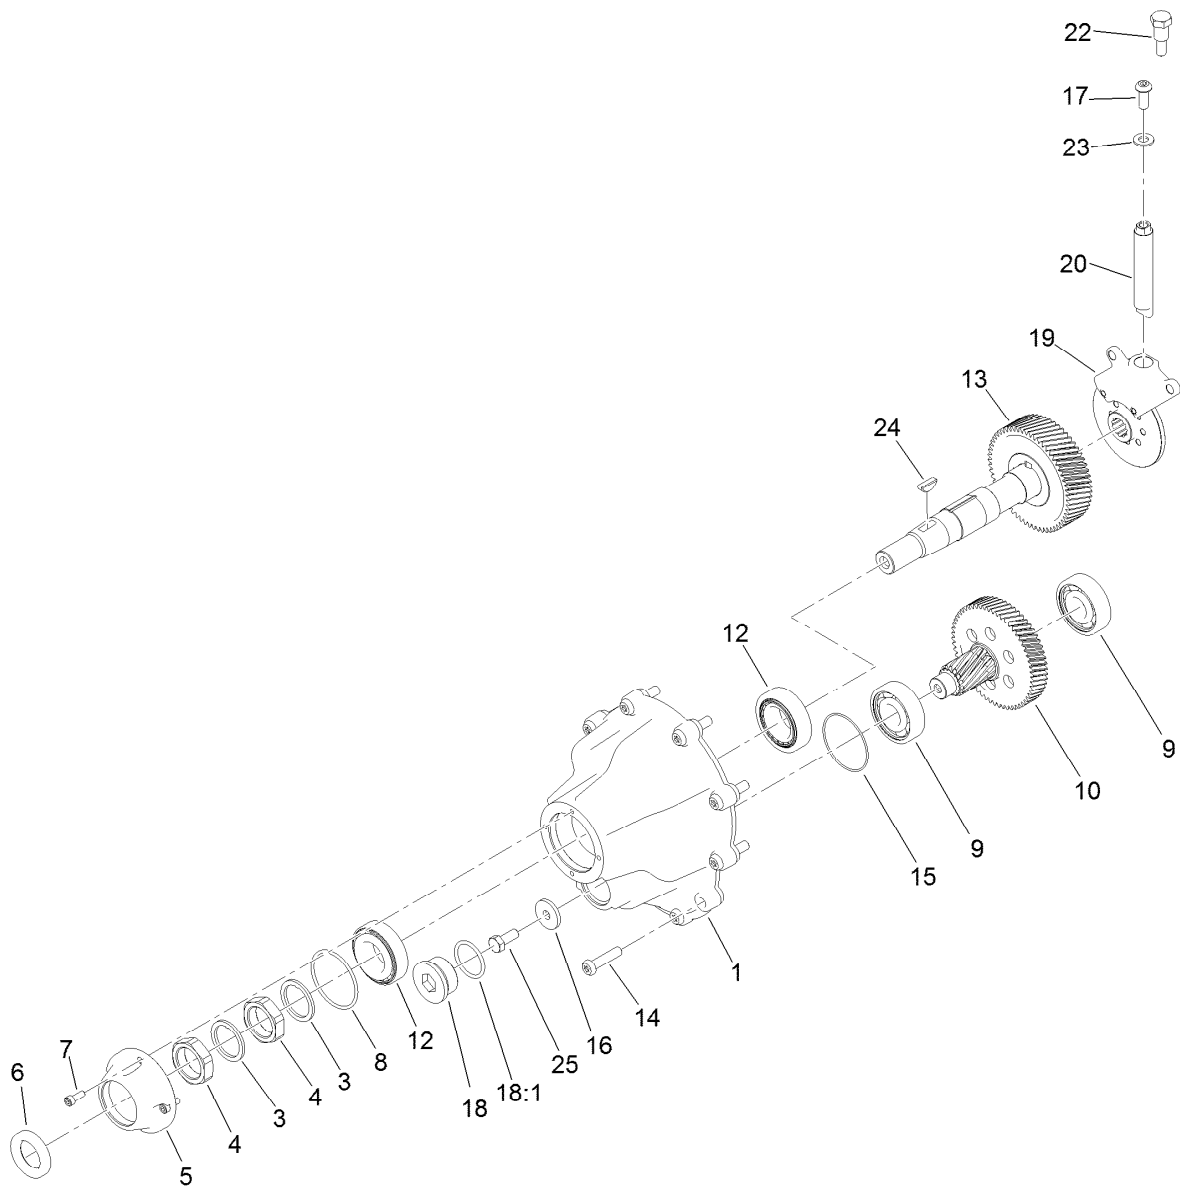 

Gearbox Assembly No. 127-1529


Ref.	Part Number	Qty.	Description
1	127-1559	1	Cover-Motor, Axle
3	121-5235	2	Washer-Special
4	121-9263	2	Nut-Jam
5	127-1561	1	Cover-Nose, Axle
6	137-7857	1	Seal-Shaft
7	112-5181	4	Screw -HSH
8	108-9919	1	O-Ring
9	121-9266	2	Bearing-Ball
10	132-9978	1	Countershaft Gear ASM
12	121-9256	2	Bearing-Taper
13	132-9841	1	Shaft ASM
14	127-1519	10	Screw-BHCS

Ref.	Part Number	Qty.	Description
15	121-9273	1	O-Ring
16	132-9927	1	Washer-Flat
17	3274-96	1	Screw-HSBH
18	105-3921	1	Fitting-Plug
18:1	237-146	1	O-Ring
19	132-9974	1	Brake ASM
20	121-9247	1	Shaft-Brake
22	121-9250	1	Pin-Lever, Stop
23	120-9683	1	Washer-Plain
24	132-9904	1	Key-Woodruff #91
25	137-7767	1	Screw-HH

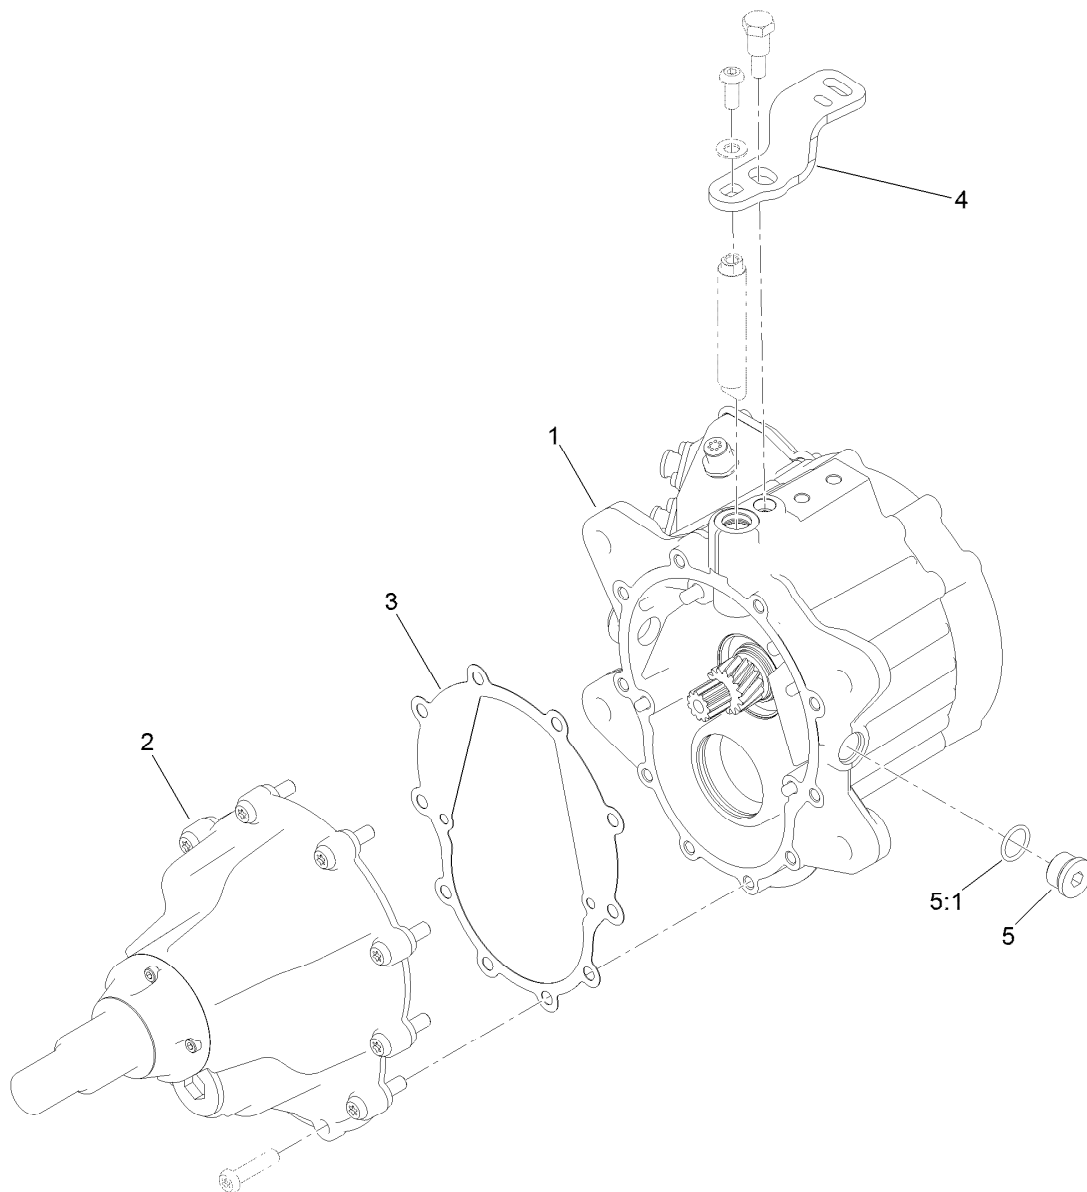 


LH Wheel Motor Assembly No. 139-8567

Ref.	Part Number	Qty.	Description
1	139-8568SP	1	LH Motor ASM
2	127-1529	1	Gear Box ASM
3	121-9254	1	Gasket-Gearbox
4	132-9874	1	Lever-Brake, LH
5	353-988	2	Plug-Hex
5:1	237-79	1	O-Ring

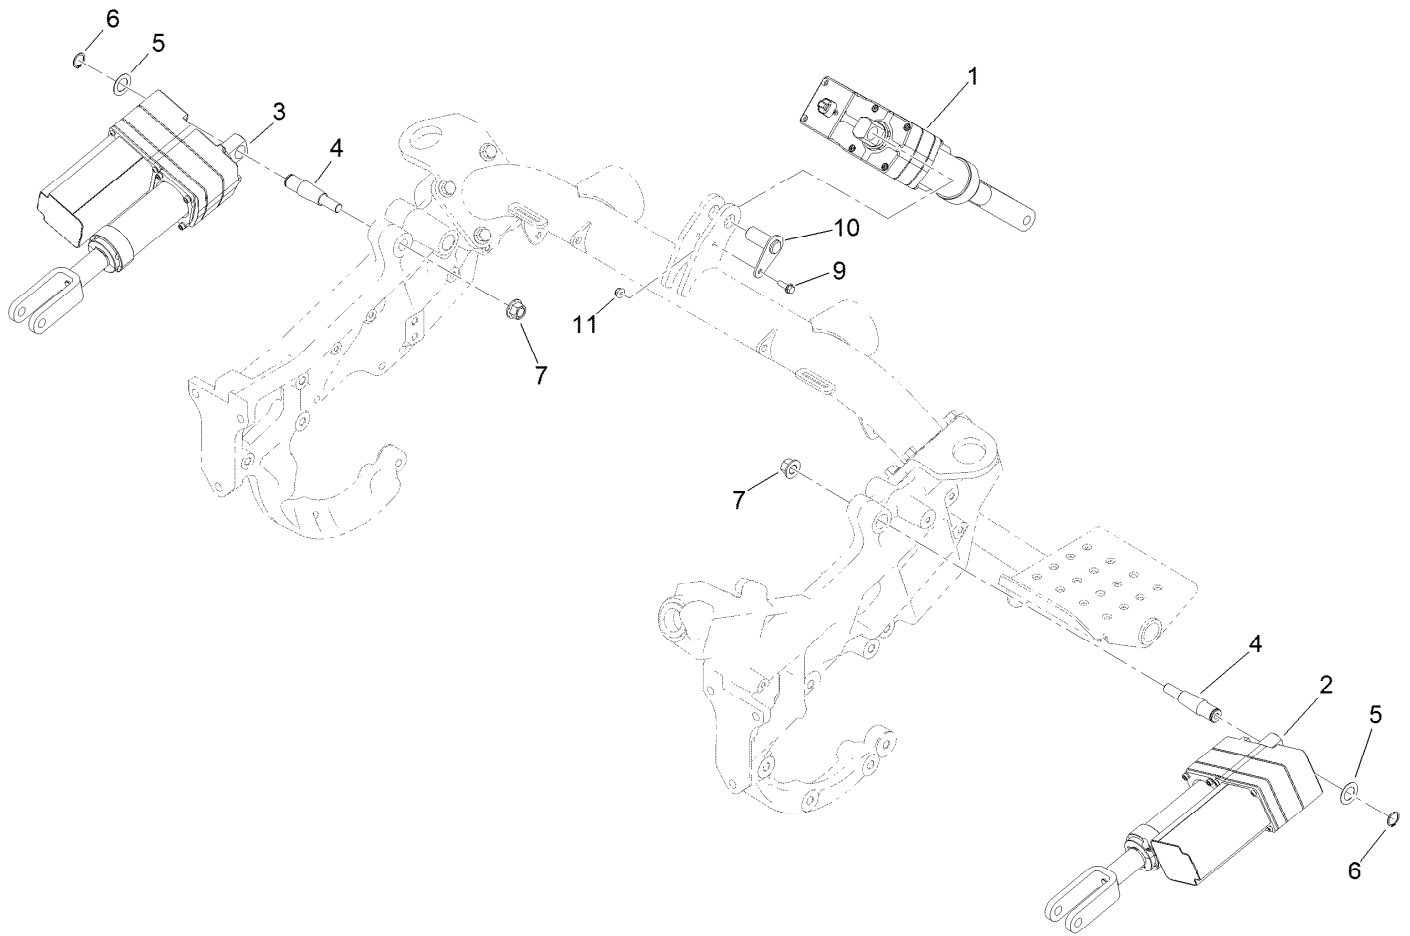 

Lift Assembly

Ref.	Part Number	Qty.	Description
1	137-7933	1	Actuator-1 Crown
2	137-7934	1	Actuator-2 Crown
3	137-7935	1	Actuator-3 Crown
4	136-2691	2	Pin-Tapered
5	9202574	2	Washer-Flat
6	32120-72	2	Ring-Snap
7	99-5107	2	Nut-HF Nylock
9	115-5103	1	Screw-HHF
10	137-7766	1	Pin ASM
11	104-7201	1	Nut-HF, NI

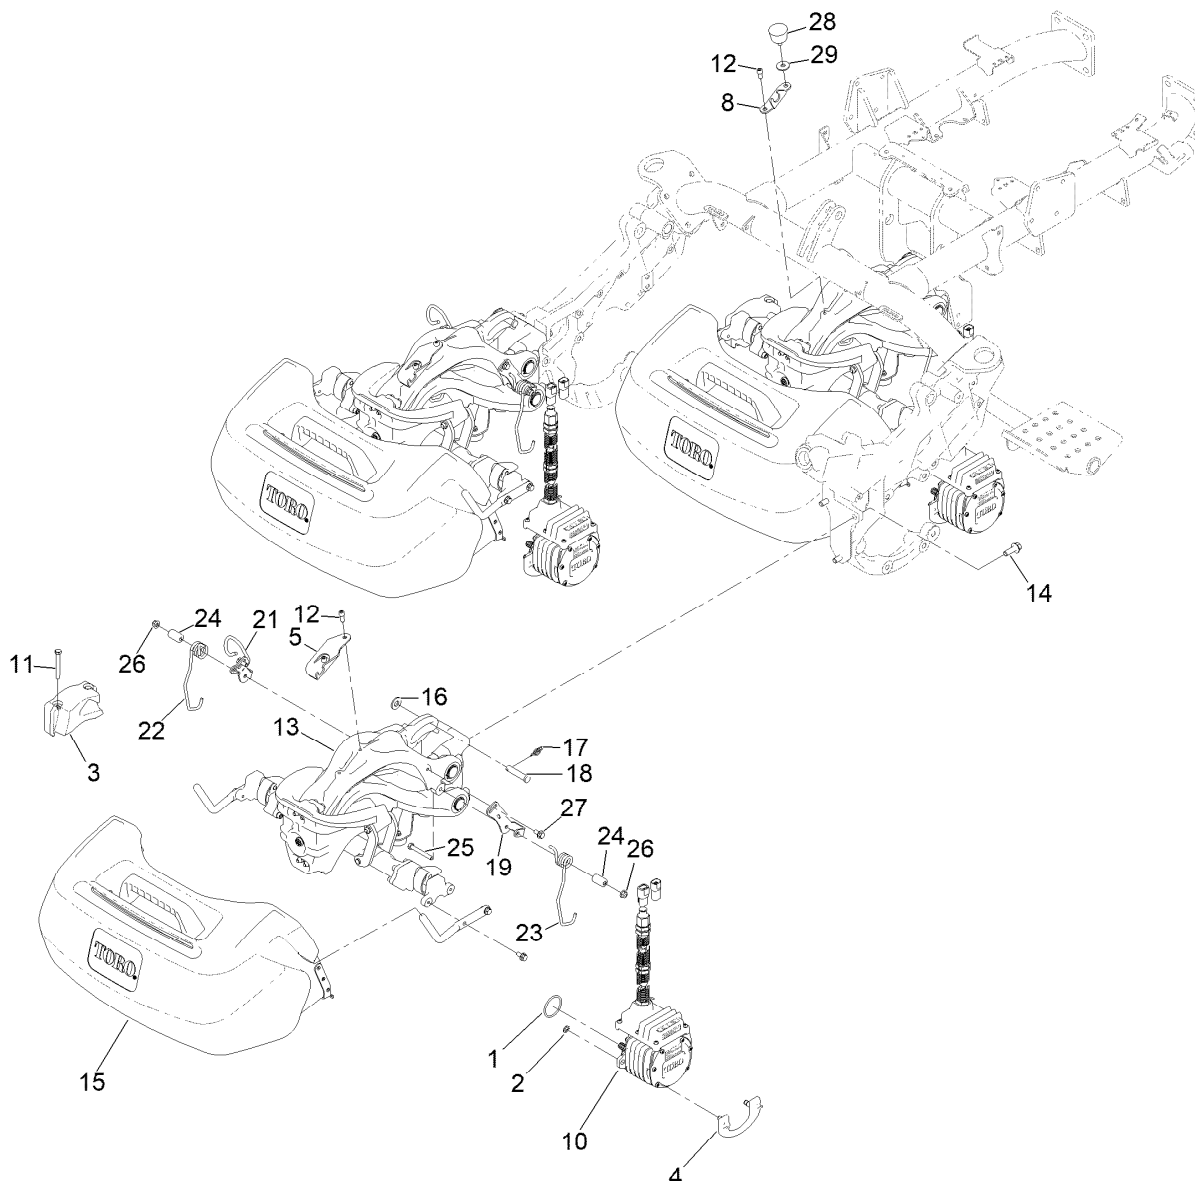 


Suspension, Reel Motor and Basket Assembly

Ref.	Part Number	Qty.	Description
1	115-3298	3	O-Ring
2	133-8926	6	Ring-Retaining (Metric)
3	117-6774-03	3	Weight-Electric
4	115-5389	3	Cam-Mount, Motor
5	119-7487	2	Bracket-Clamp, Hose
8	119-7540	1	Bracket-Hose, Rear
10		3	Rem/Inv ASM, 5In Grn ●
11	322-13	6	Screw-HH
12	100-2401	5	Screw-HSH
13		3	Suspension ASM ●
14	117-9035	9	Screw-HHF
15	132-9599	3	Basket ASM
16	29-8910	3	Washer


Ref.	Part Number	Qty.	Description
17	112-1491	3	Pin-Cotter
18	92-2739	3	Pin-Clevis
19	133-8998	3	Retainer-Spring, LH
21	133-9025	3	Bracket ASM
22	117-6826	3	Spring-Stabilizer, RH
23	117-6827	3	Spring-Stabilizer, LH
24	117-6825	6	Spacer
25	322-12	6	Screw-HH
26	104-8300	6	Nut-HF, NI
27	114-7728	6	Screw-HHF, Patch
28	68-3270	1	Bumper-Rubber
29	52-2861	1	Washer

 ● Not serviced separately

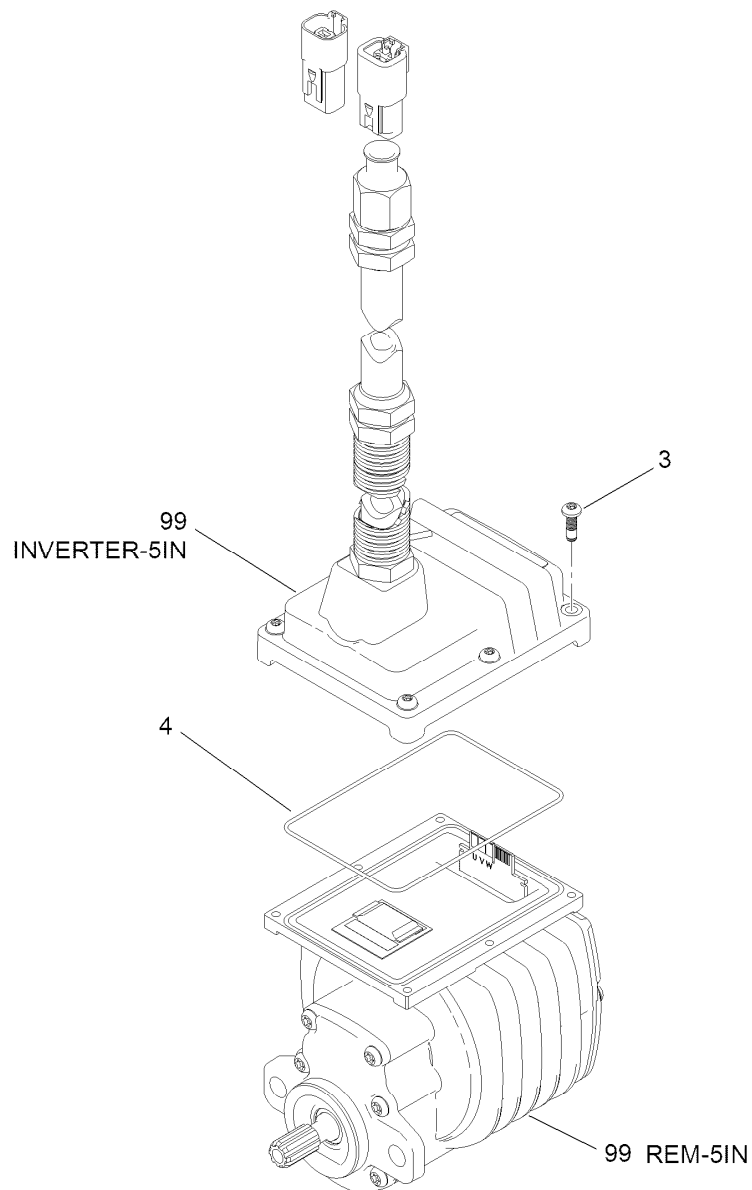


Electric Reel Motor Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	144-6692	6	Screw-Tph
4	144-6738	1	O-Ring-Formed, Controller
4	144-6731	1	Controller And Motor Service Kit
99	161-0344	1	Rem-5In Greens
99	161-0345	1	Inverter-5In Greens

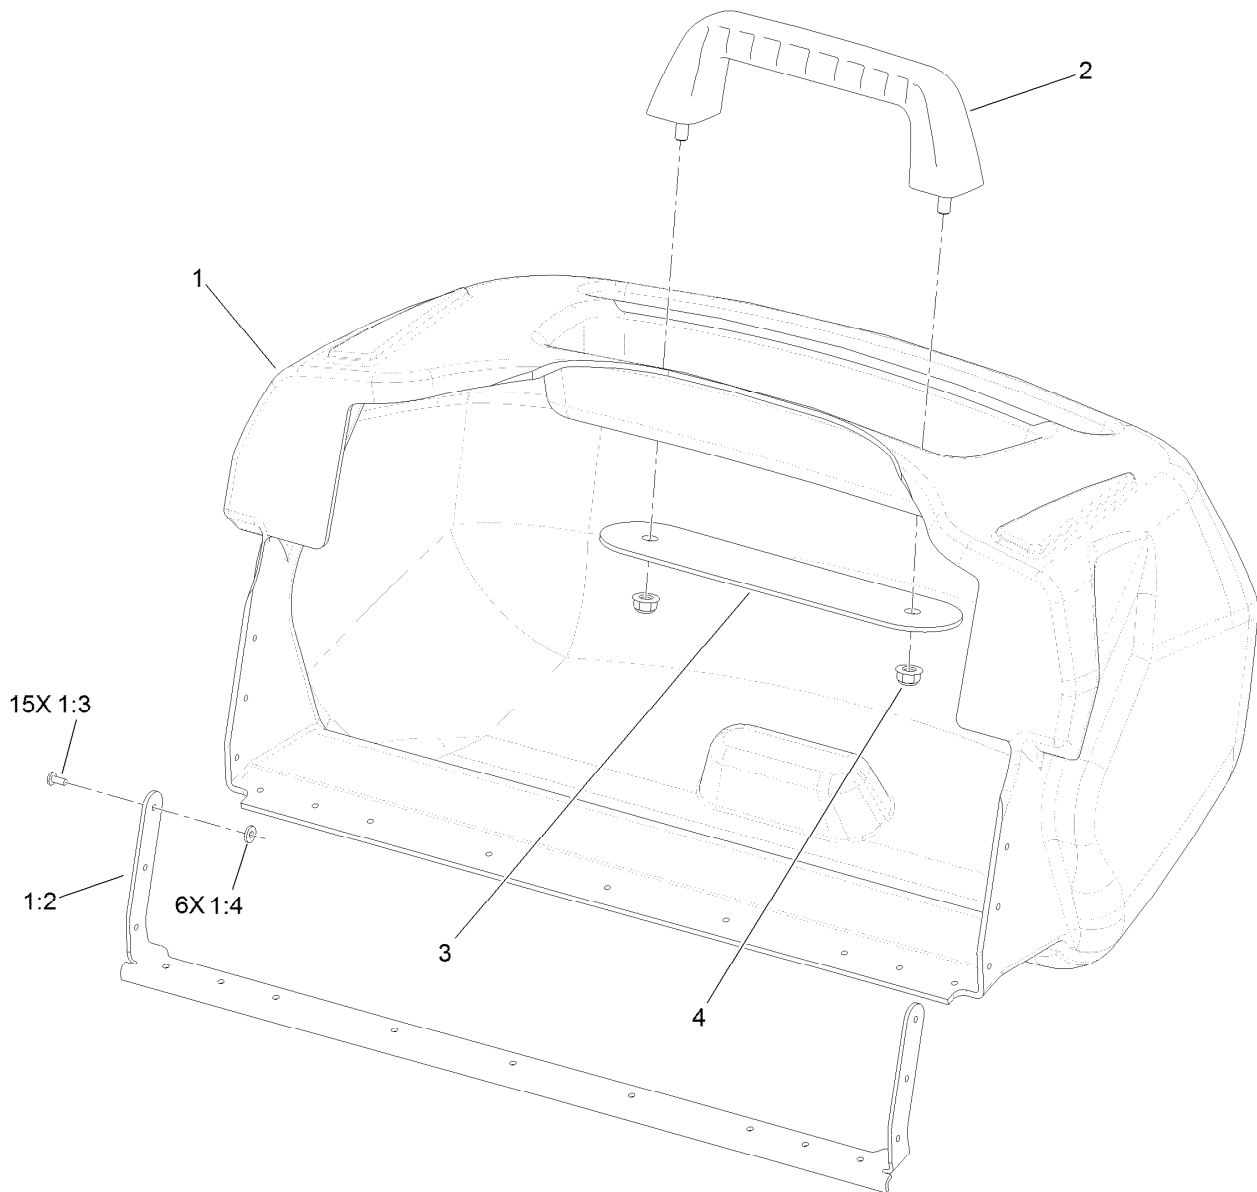 


Basket Assembly No. 132-9599

Ref.	Part Number	Qty.	Description
1	132-9510	1	Basket Assembly
1:2	132-3806	1	Support-Basket
1:3	3269-25	15	Rivet-Pop
1:4	3256-75	6	Washer-Flat
2	117-8088	1	Handle-Grab
3	117-8092-03	1	Plate-Mounting
4	104-8300	2	Nut-HF, NI

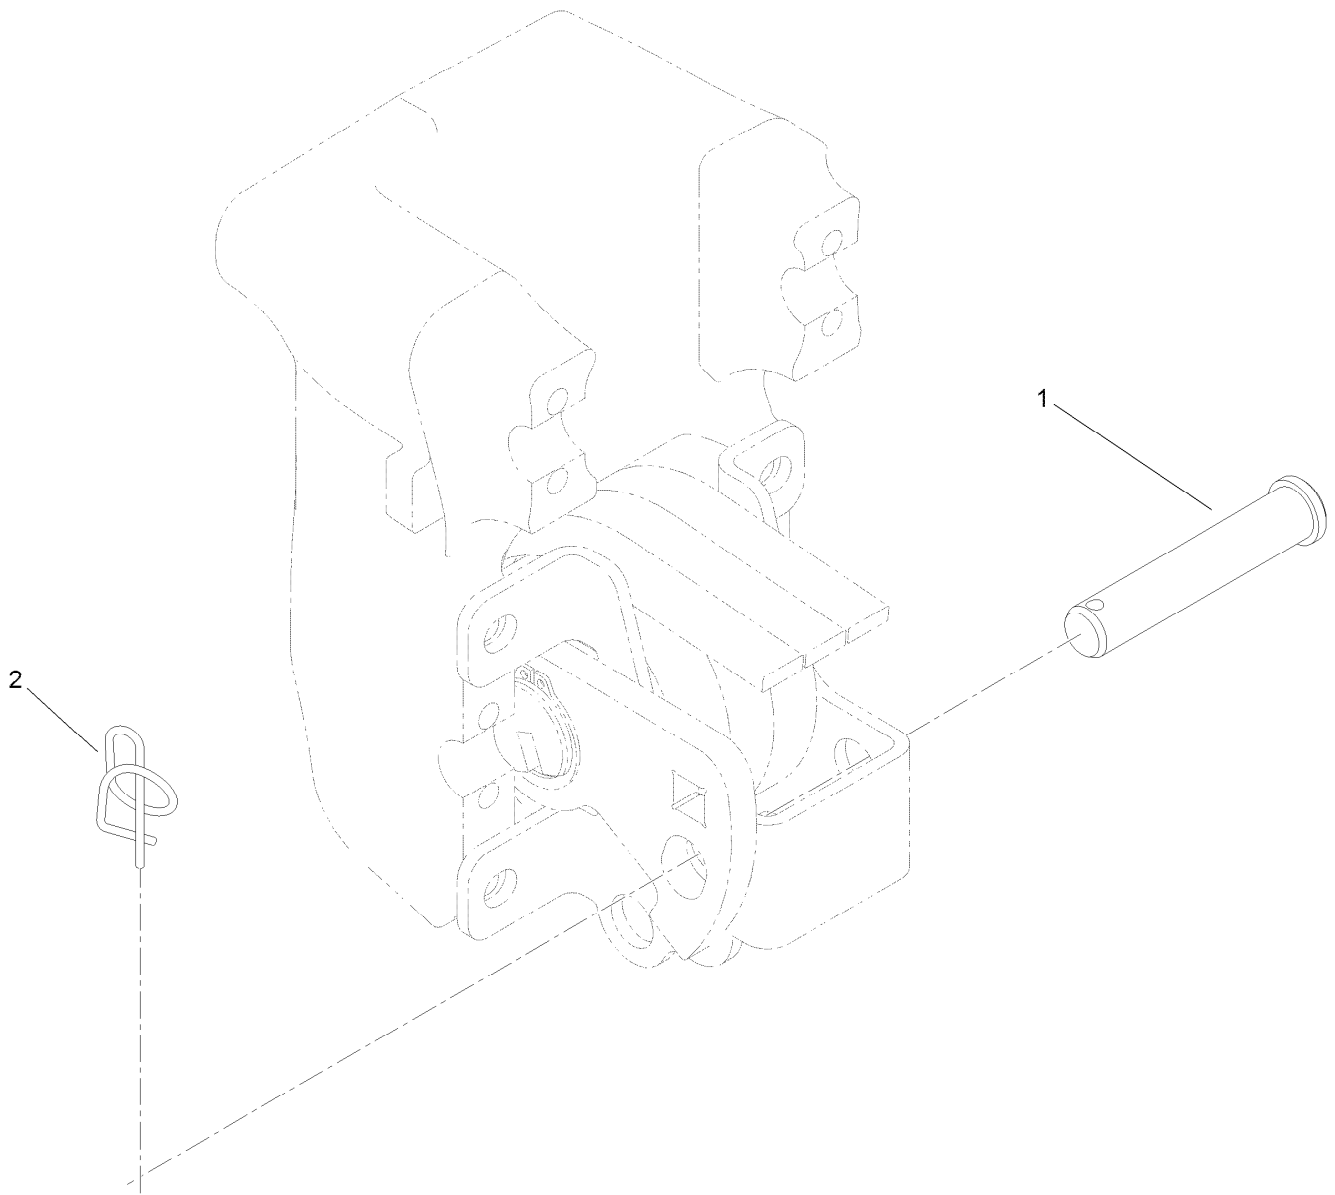 

Suspension Pin Position Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	100-6541	3	Pin-Clevis
2	112-1491	3	Pin-Cotter

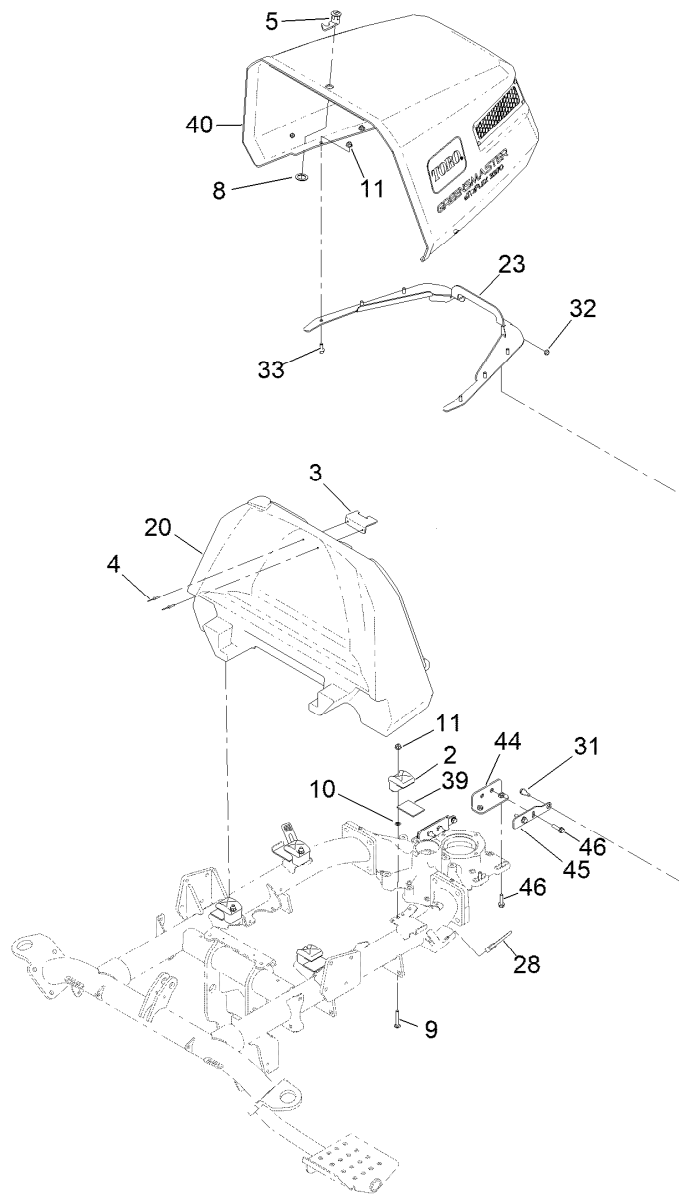 

Hood Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	107-4543	4	Clamp	23	137-2193-03	1	Bracket-Hinge, Shroud
3	145-1438	1	Bracket-Latch	28	131-8402	2	Strap-Down, Hold
4	3290-382	2	Rivet-Pop	31	115-1958	2	Bolt-Shoulder
5	98-5398	1	Latch	32	99-6007	2	Nut-Lock, NI
5:1	3218-20	1	Nut-Jam ●	33	3234-47	6	Screw-HHF
8	99-4958	1	Spacer	39	136-4259	4	Foam-Strip, Tank
9	3230-6	4	Bolt-CARR	40	145-1442	1	Battery Hood ASM
10	109-5667	4	Nut-Push	44	137-2242-03	2	Bracket-Hood
11	104-8300	10	Nut-HF, NI	45	137-7914	2	Bracket-Hood
20	137-7829	1	Cover-Battery	46	119-4036	8	Screw-HHF

 ● Not illustrated

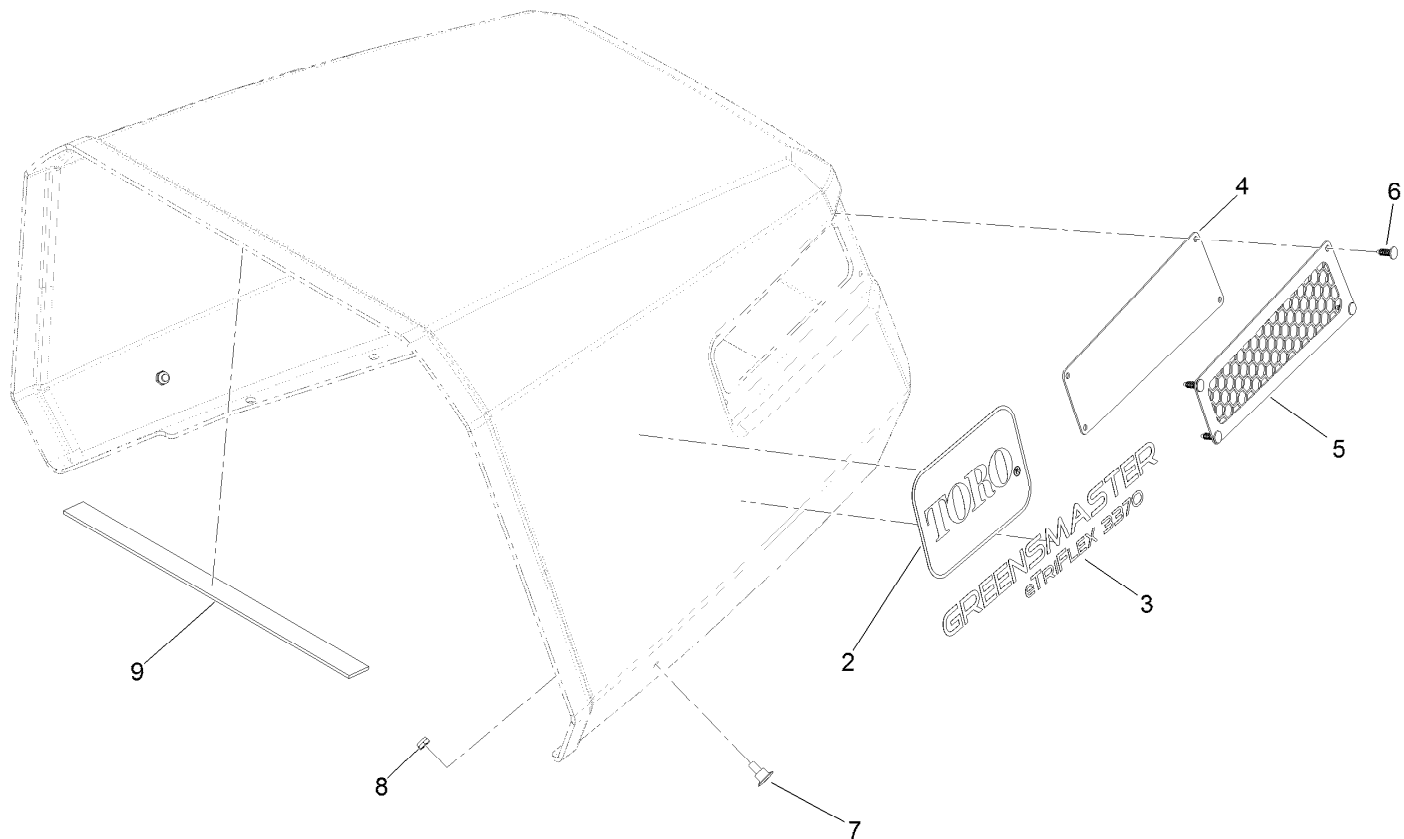

Hood Assembly No. 145-1442


Ref.	Part Number	Qty.	Description
2	62-5550	2	Decal
3	137-7928	2	Decal-Etriflex 3370
4	137-7926-03	2	Screen
5	137-7911-03	2	Screen
6	120-6737	8	Plug-Plastic
7	125-1122	2	Screw
8	3296-56	2	Nut-Lock, NI
9	137-8082	1	Strip-Foam

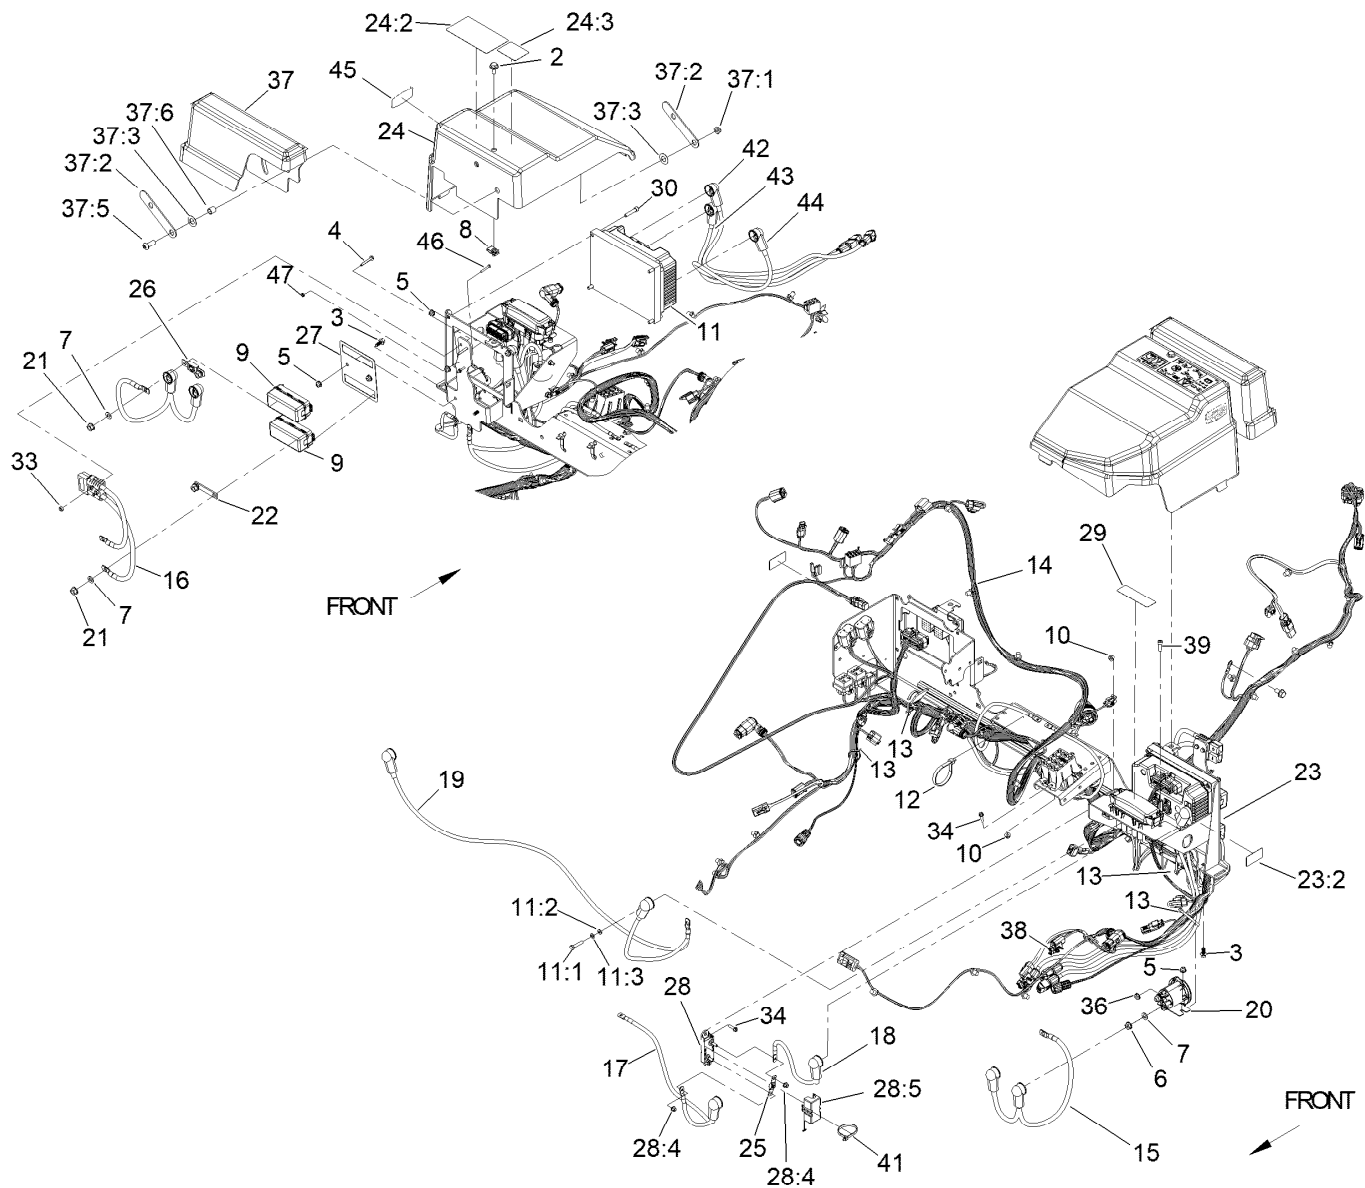 

Electrical Assembly

Ref.	Part Number	Qty.	Description
2	19-1470	1	Screw-Shoulder
3	99-6810	6	Screw-HHF
4	100-4352	2	Screw-HWH
5	104-7201	10	Nut-HF, NI
6	107-0380	4	Nut-HF
7	107-0394	8	Washer-Flat
8	112-3306	1	Nut
9	114-3318	2	Holder-Fuse, Mega
10	120-4578	6	Nut-HF
11	120-4780	1	Controller-Motor, Traction
11:1	33113-030	5	Screw-HH
11:2	33093-00	5	Washer-Flat
11:3	43-5930	5	Washer-Lock, Spring
12	3334-945	3	Tie-Cable
13	3290-379	4	Tie-Cable
14	122-2788	1	Harness-Wire, Etriflex
15	122-1695	1	Cable-Battery, Positive
16	122-1698	1	Cable-Battery, Pos And Neg
17	122-1108	1	Cable-Battery, Positive
18	122-1112	1	Cable-Battery, Positive
19	122-1115	1	Cable-Battery, Negative


Ref.	Part Number	Qty.	Description
20	122-1274	2	Contactor-DC, 48V
21	127-2371	4	Nut-HF
22	132-9815	1	Strap-Jumper
23	145-1436	1	Bracket ASM
23:2	137-8127	2	Decal-No Spray
24	145-1437	1	LH Cover ASM
24:2	147-3125	1	Decal-Charging
24:3	147-3126	1	Decal-Service, Shut-Off
25	122-3646	1	Fuse-80A
26	139-8414	1	Fuse-175 Amp
27	145-1439	1	Bracket-Fuses
28	137-7861	1	Fuse Block ASM
28:4	120-4580	2	Nut-HF
28:5	137-7863	1	Cover-Fuse
29	137-8037	1	Decal-Fuses, Cutting Unit
30	3274-51	4	Screw-HSH
33	3296-2	2	Nut-Lock, NI
34	32105-13	6	Screw-HWH
36	32149-8	4	Nut-Keps
37	145-4587	1	Charge Port Cover Kit
37:1	121-4600	2	Nut-Hex

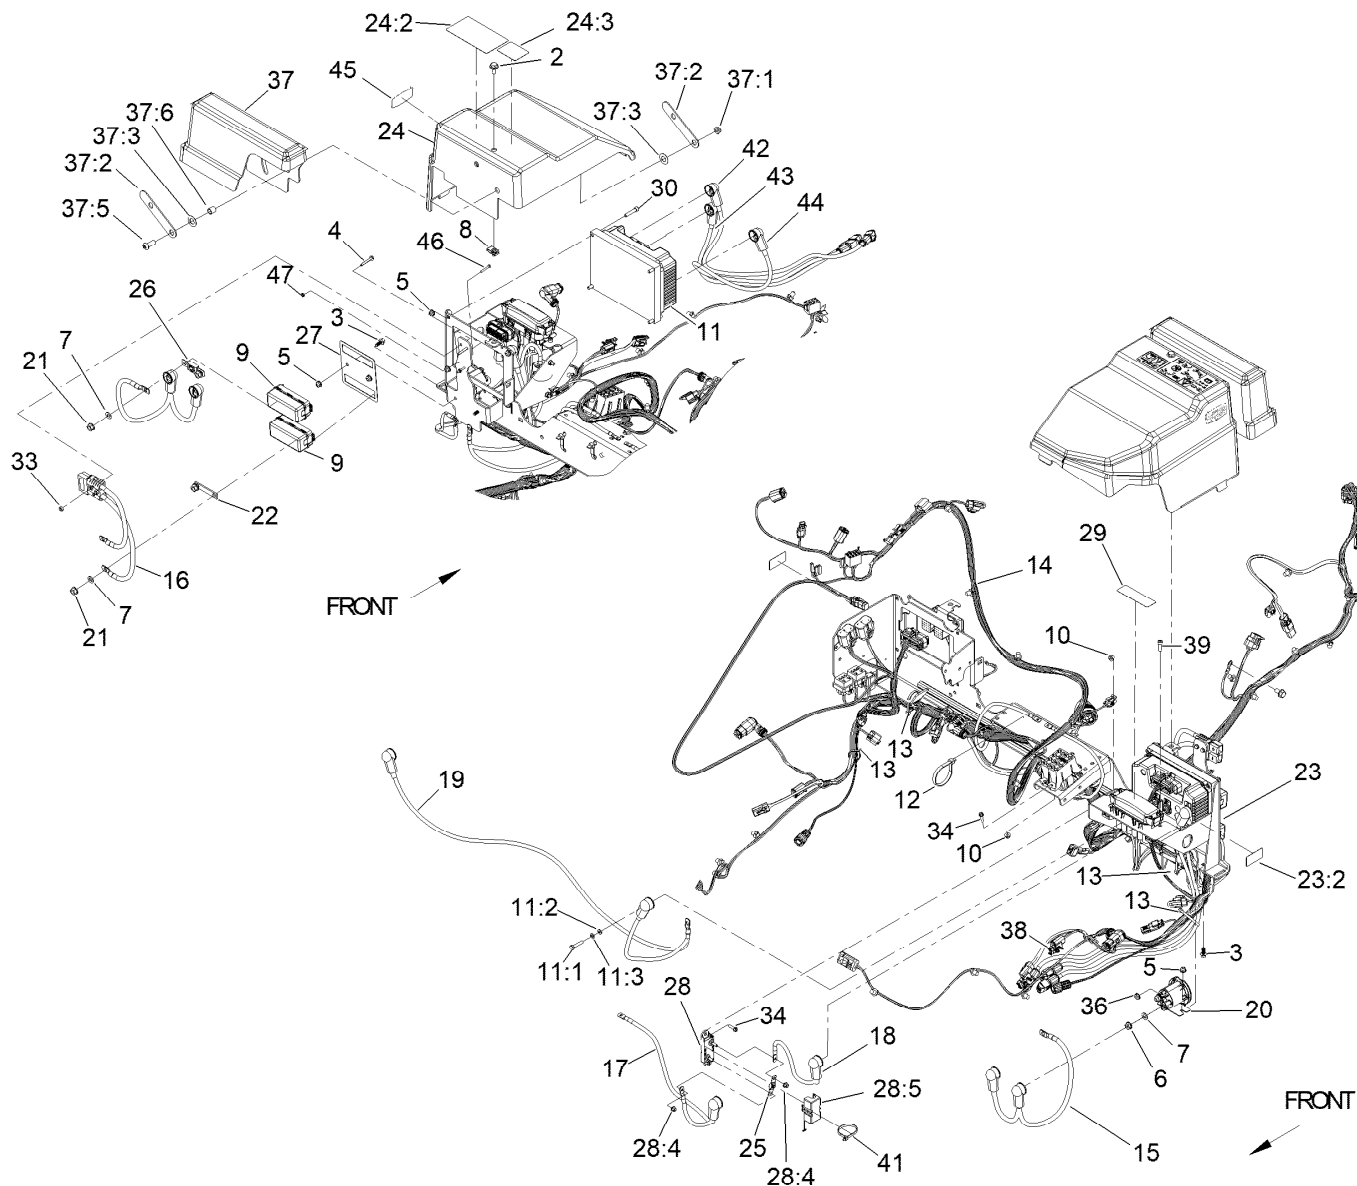 

Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
37:2	145-4563	2	Bar-Pivot
37:3	110-4068	4	Washer-Plastic
37:5	3274-94	2	Screw-HSBH
37:6	103-1166	2	Spacer-Tube, Pump Link
38	32180-103	2	Clip-Connector
39	52-6290	2	Screw-HSH
41	3290-378	1	Tie-Cable

Ref.	Part Number	Qty.	Description
42	122-1611	1	Cable-Battery, Positive
43	122-1612	1	Cable-Battery, Positive
44	122-1613	1	Cable-Battery, Positive
45	119-7580	1	Decal-Smart, Energy
46	32105-9	2	Screw-HH
47	120-9684	2	Nut-Lock

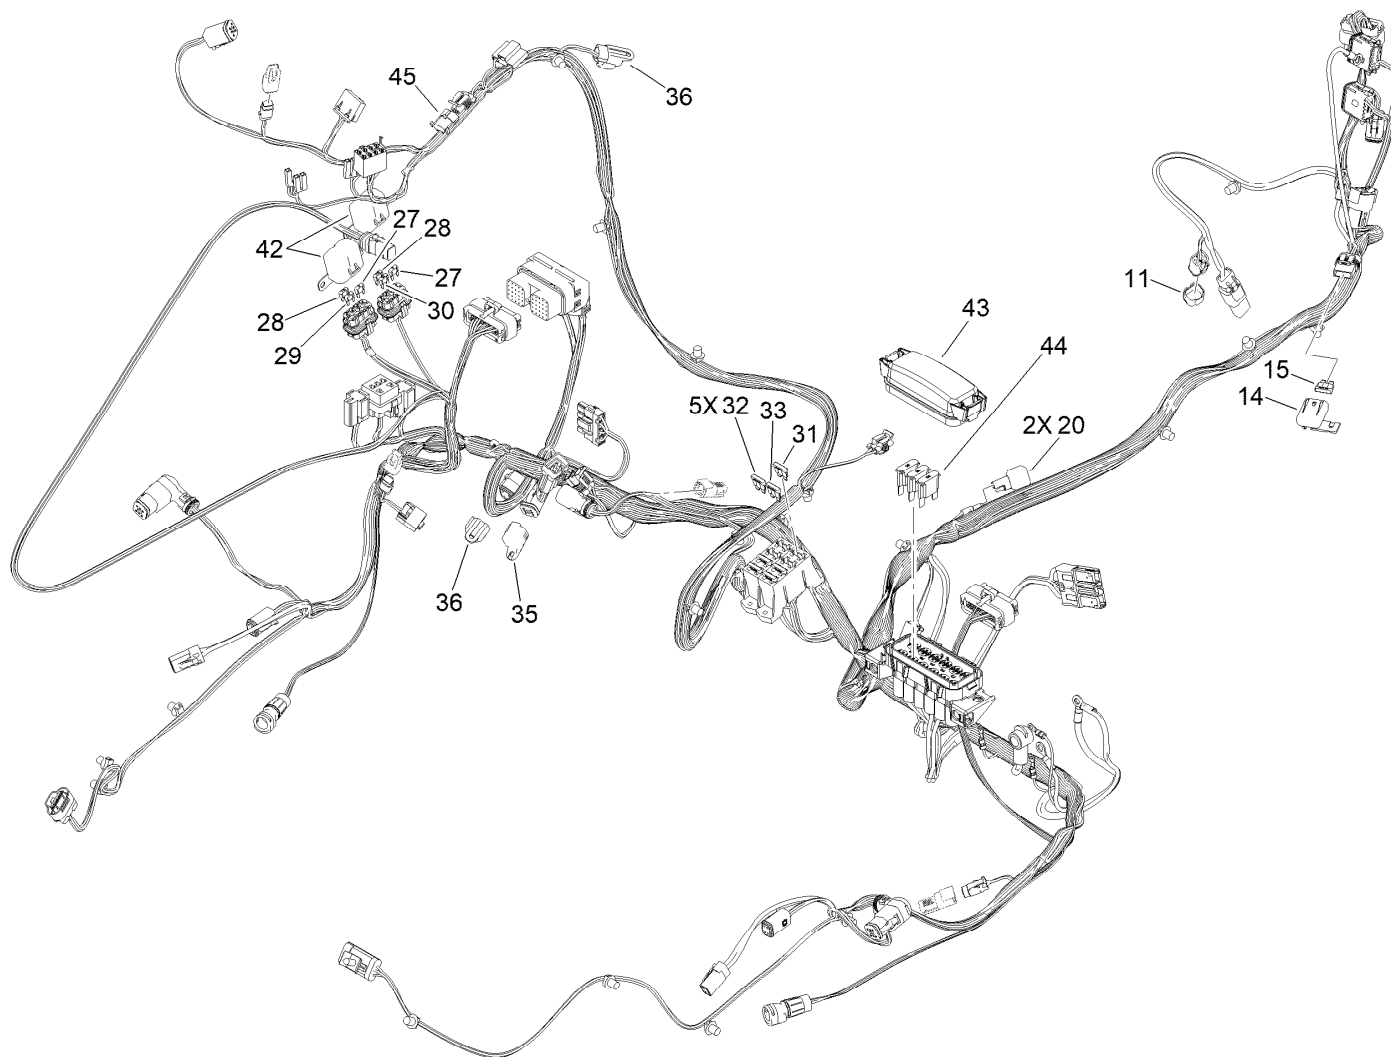 


Wire Harness Assembly No. 122-2788

Ref.	Part Number	Qty.	Description
11	32180-260	1	Cap-Deutsch, Dust, 4 Way
12	32180-091	1	Cap-Dust, 2 Way ●
14	32180-019	1	Cover-Fuse, Single
15	117-4720	1	Fuse-Blade, 3A
20	100-4918	1	Diode
21	32180-282	1	Conn, Res, 120 Ohm ●
27	121-8861	3	Fuse-Mini Blade, 2 Amp
28	121-8865	1	Fuse-Mini Blade, 7.5 Amp
29	121-8866	1	Fuse-Mini Blade, 10 Amp
30	121-8867	1	Fuse-Mini Blade, 15 Amp

Ref.	Part Number	Qty.	Description
31	117-4722	1	Fuse-Blade, 5A
32	117-4724	5	Fuse-Blade, 10A
33	117-4728	1	Fuse-Blade, 30A
35	32180-156	1	Cap-Plug, 6 Way
36	32180-089	2	Cap-Plug, 3 Way
42	32180-179	2	Cover-Bussman
43	32180-146	1	Cover-Fuse
44	122-0255	3	Fuse-Maxi, 35 Amp-58V
45	32180-056	1	Cap

 
● Not illustrated

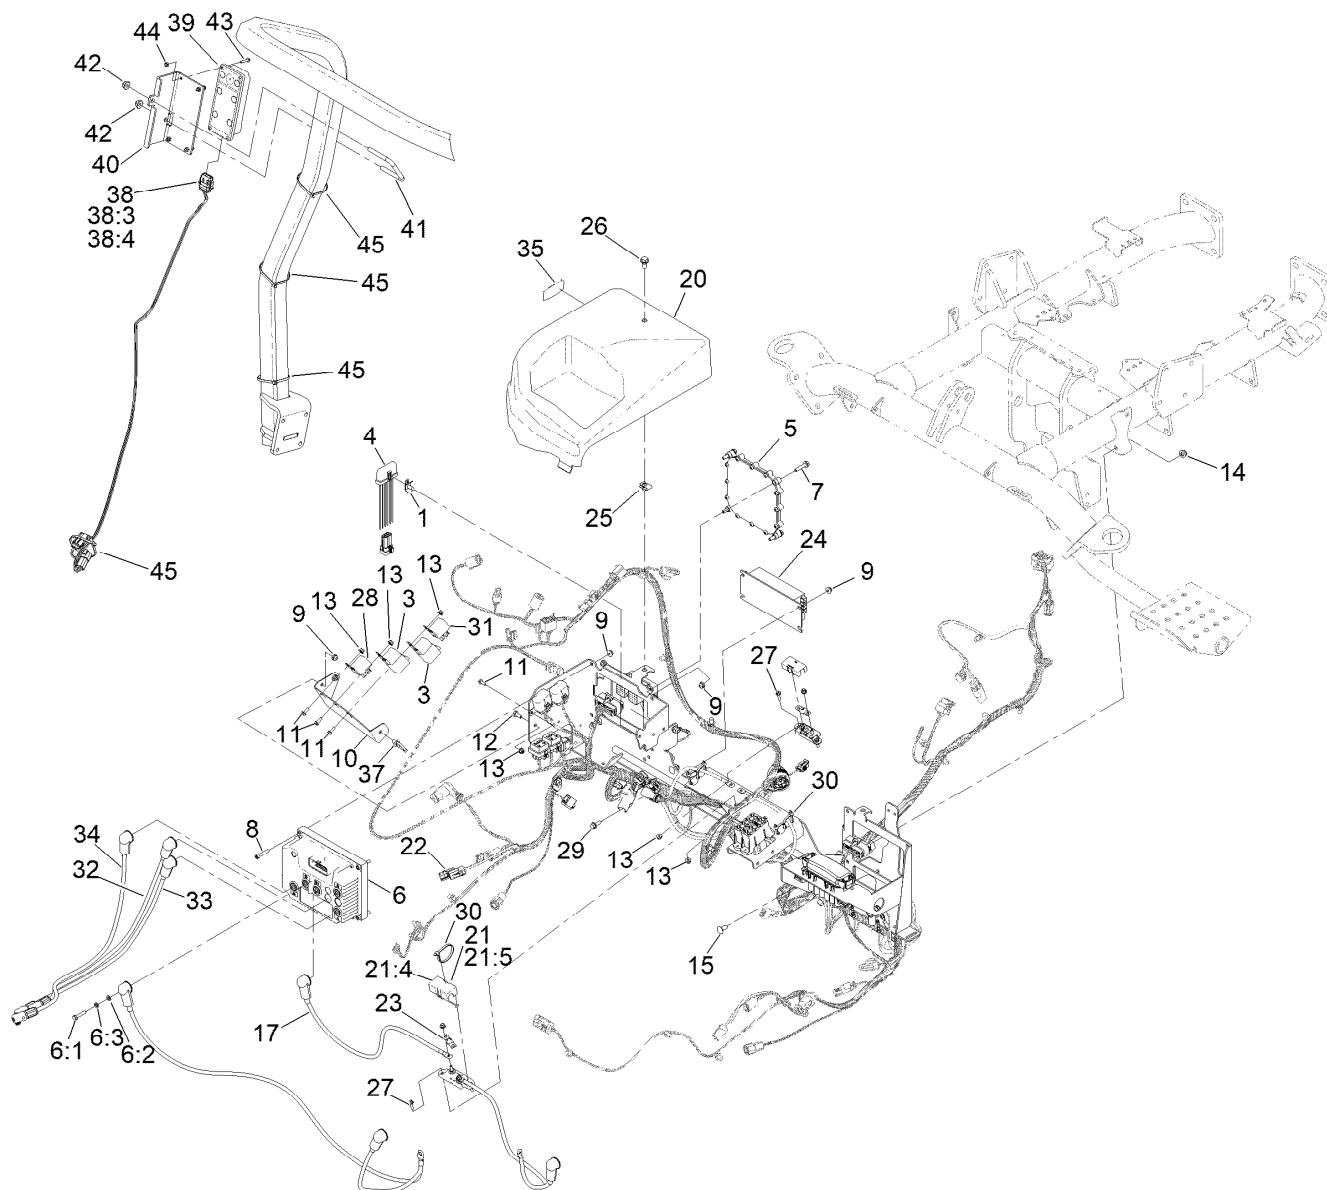

Controller Assembly

Ref.	Part Number	Qty.	Description
1	32180-011	3	Clip-Connector
3	99-7430	1	Relay-Mini
4	112-9630	1	Module-Reel, I.D.
5	127-2770	1	Controller
6	120-4780	1	Controller-Motor, Traction
6:1	33113-030	5	Screw-HH
6:2	33093-00	5	Washer-Flat
6:3	43-5930	5	Washer-Lock, Spring
7	127-8639	4	Screw-HHF
8	3274-51	4	Screw-HSH
9	104-7201	12	Nut-HF, NI
10	147-3088-0P	1	Bracket-Component
11	32105-23	7	Screw
12	321-3	2	Screw-HH
13	120-4578	9	Nut-HF
14	104-8300	4	Nut-HF, NI
15	3230-1	4	Bolt-CARR
17	122-1110	1	Cable-Battery, Positive
20	133-0095	1	Cover-RH
21	137-7861	1	Fuse Block ASM
21:4	120-4580	2	Nut-HF


Ref.	Part Number	Qty.	Description
21:5	137-7863	1	Cover-Fuse
22	32180-103	2	Clip-Connector
23	122-3646	1	Fuse-80A
24	144-6975	1	Converter DC-DC
25	112-3306	1	Nut
26	19-1470	1	Screw-Shoulder
27	32105-13	2	Screw-HWH
28	122-3199	1	Relay - Dg57CM
29	3234-4	2	Screw-HHF
30	3290-378	3	Tie-Cable
31	122-3200	1	Relay
32	122-1614	1	Cable-Battery, Positive ASM
33	122-1615	1	Cable-Battery, Positive ASM
34	122-1616	1	Cable-Battery, Positive ASM
35	119-7580	1	Decal-Smart, Energy
37	32180-030	1	Clip-Tie
38	122-2161	1	Harness-Wire
38:3	121-8861	1	Fuse-Mini Blade, 2 Amp
38:4	32180-101	1	Cover-Fuse, Single
39	161-9001	1	Gateway-Telematics
40	163-2492-03	1	Bracket-Mount, Hmu

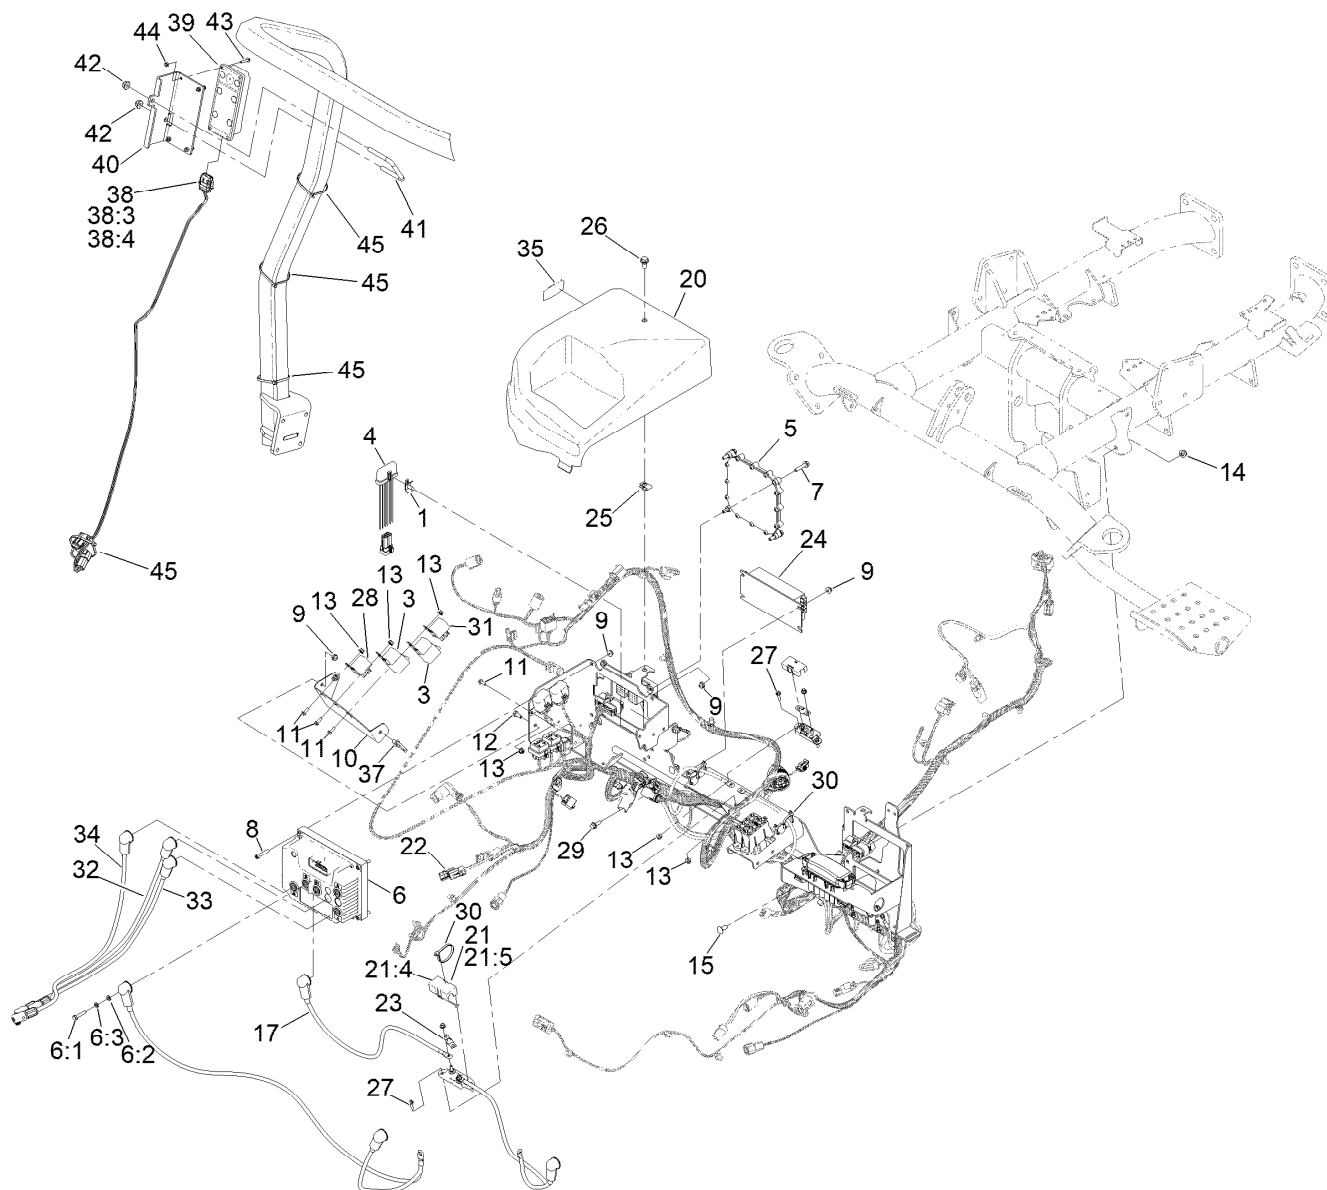 

Controller Assembly (continued)


Ref.	Part Number	Qty.	Description
41	119-6727	1	U-Bolt
42	104-8301	2	Nut-HF, NI
43	131-6456	4	Screw-HWH

Ref.	Part Number	Qty.	Description
44	3296-2	4	Nut-Lock, NI
45	3290-379	4	Tie-Cable

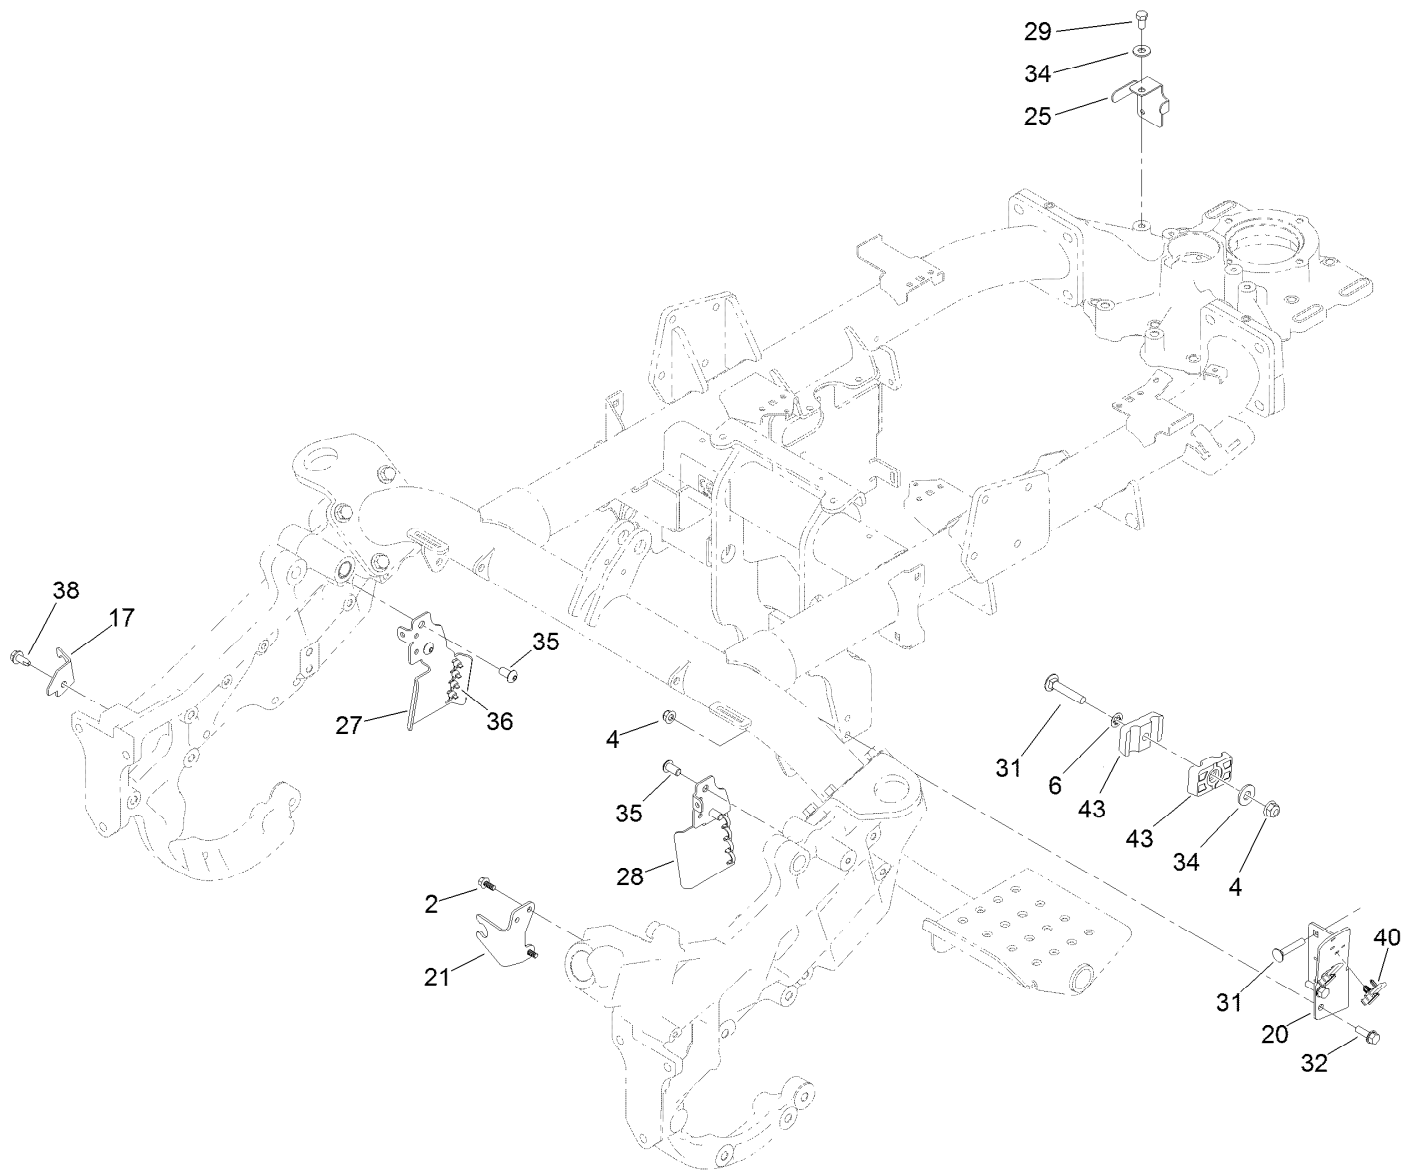 

Harness Bracket Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
2	99-6810	2	Screw-HHF	29	3210-2	1	Screw-HH
4	104-8300	3	Nut-HF, NI	31	3230-5	1	Bolt-CARR
6	109-5667	1	Nut-Push	32	3234-29	2	Screw-HHF
17	139-8409	1	Brkt-Hose	34	3256-3	2	Washer-Flat
20	133-0083-03	1	Bracket-Hose, Rear	35	3274-80	4	Screw-HH
21	136-2697	1	Bracket-Hose	36	3290-378	8	Tie-Cable
25	137-7859	1	Bracket-Harness	38	32104-32	1	Screw-HWH
27	137-7905-01	1	Bracket-Harness, RH	40	32180-103	2	Clip-Connector
28	137-7906-01	1	Bracket-Harness, LH	43	56-7971	2	Clamp-Tube

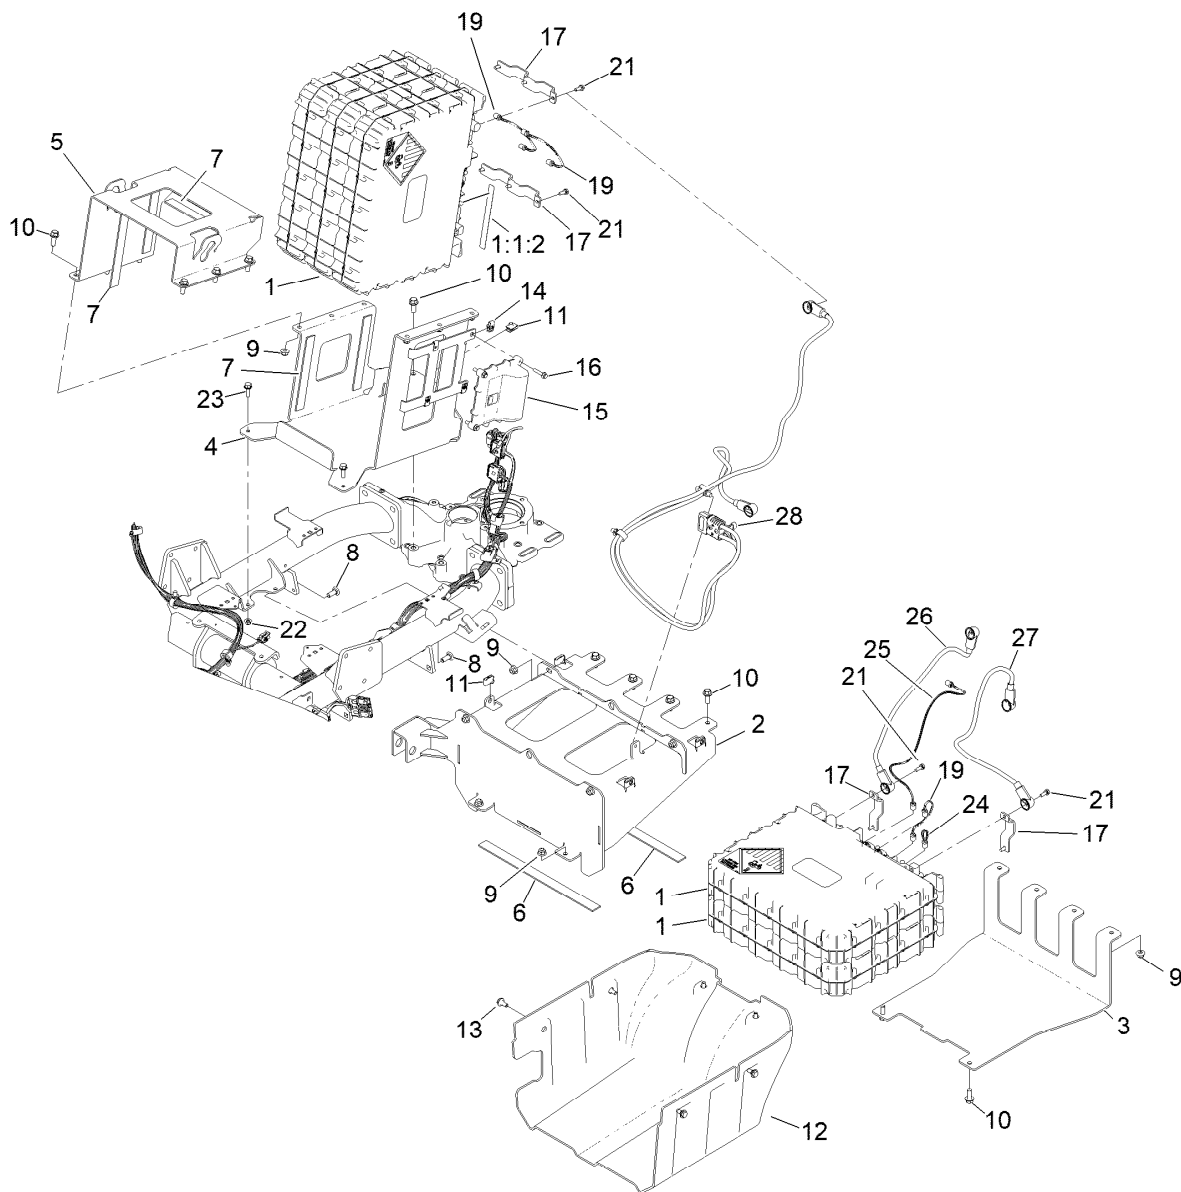 


Battery Assembly

Ref.	Part Number	Qty.	Description
1	145-5385	5	Battery ASM
1:1:2	145-5338	1	Decal-Warning, Battery
1:1:14	32180-466	2	Nut-Mounting, Jwpf Panel Lock ●
2	145-1352-03	1	Mount-Battery [black]
3	145-1356-03	1	Plate-Base
4	145-1392-03	1	Mount-Base [black]
5	145-1391-03	1	Strap-Top
6	137-8082	2	Strip-Foam
7	137-8083	9	Strip-Foam
8	3231-22	4	Screw-CARR
9	104-8301	16	Nut-HF, NI
10	3234-42	14	Screw-HHF
11	115-7721	6	Nut-Clip, U
12	145-1362	1	Cover-Battery
13	19-1470	6	Screw-Shoulder


Ref.	Part Number	Qty.	Description
14	107069	4	Clip
15	122-1683	1	Controller-Tec 2402
16	3234-21	4	Screw-HHF
17	147-3877	6	Bar-Bus, 400A
19	140-9565	3	Harness-Wire, Data Interface
21	145-5783	10	Screw-Sems
22	104-8300	2	Nut-HF, NI
23	3234-29	2	Screw-HHF
24	122-2323	1	Harness-Wire, Can Terminator
25	122-2494	1	Harness-Wire, Data (Long)
26	122-2564	1	Cable-Battery, Rd ASM
27	122-2565	1	Cable-Battery, Bk ASM
28	122-2585	1	Cable-Battery, Rd/Bk ASM

 ● Not illustrated

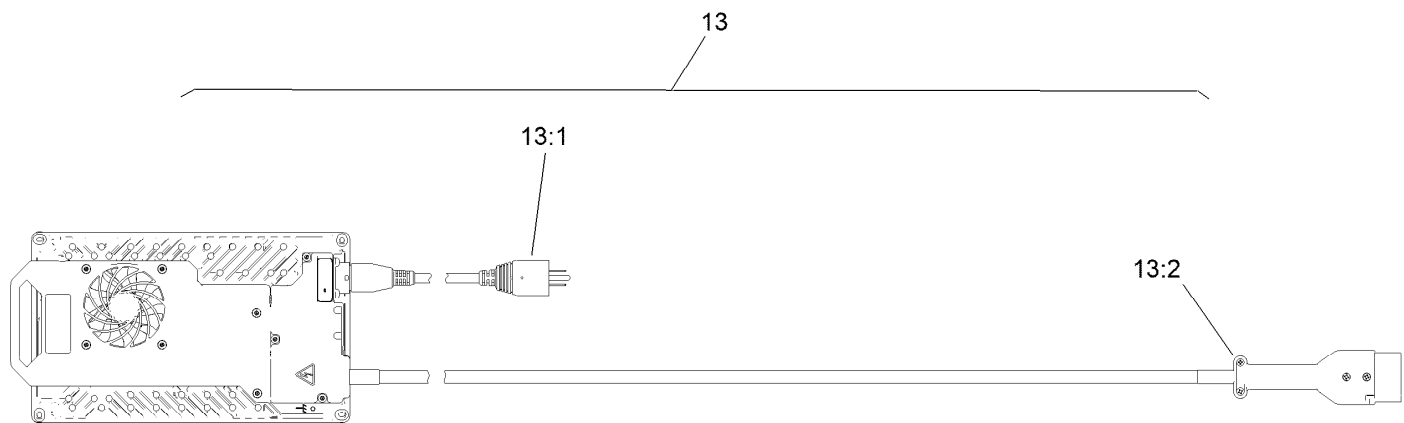

Miscellaneous Parts Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
13	147-3134	1	Charger-1200W
13:1	147-1678	1	Cord-AC, 120V
13:2	147-0227	1	Cable, DC-Hypercell

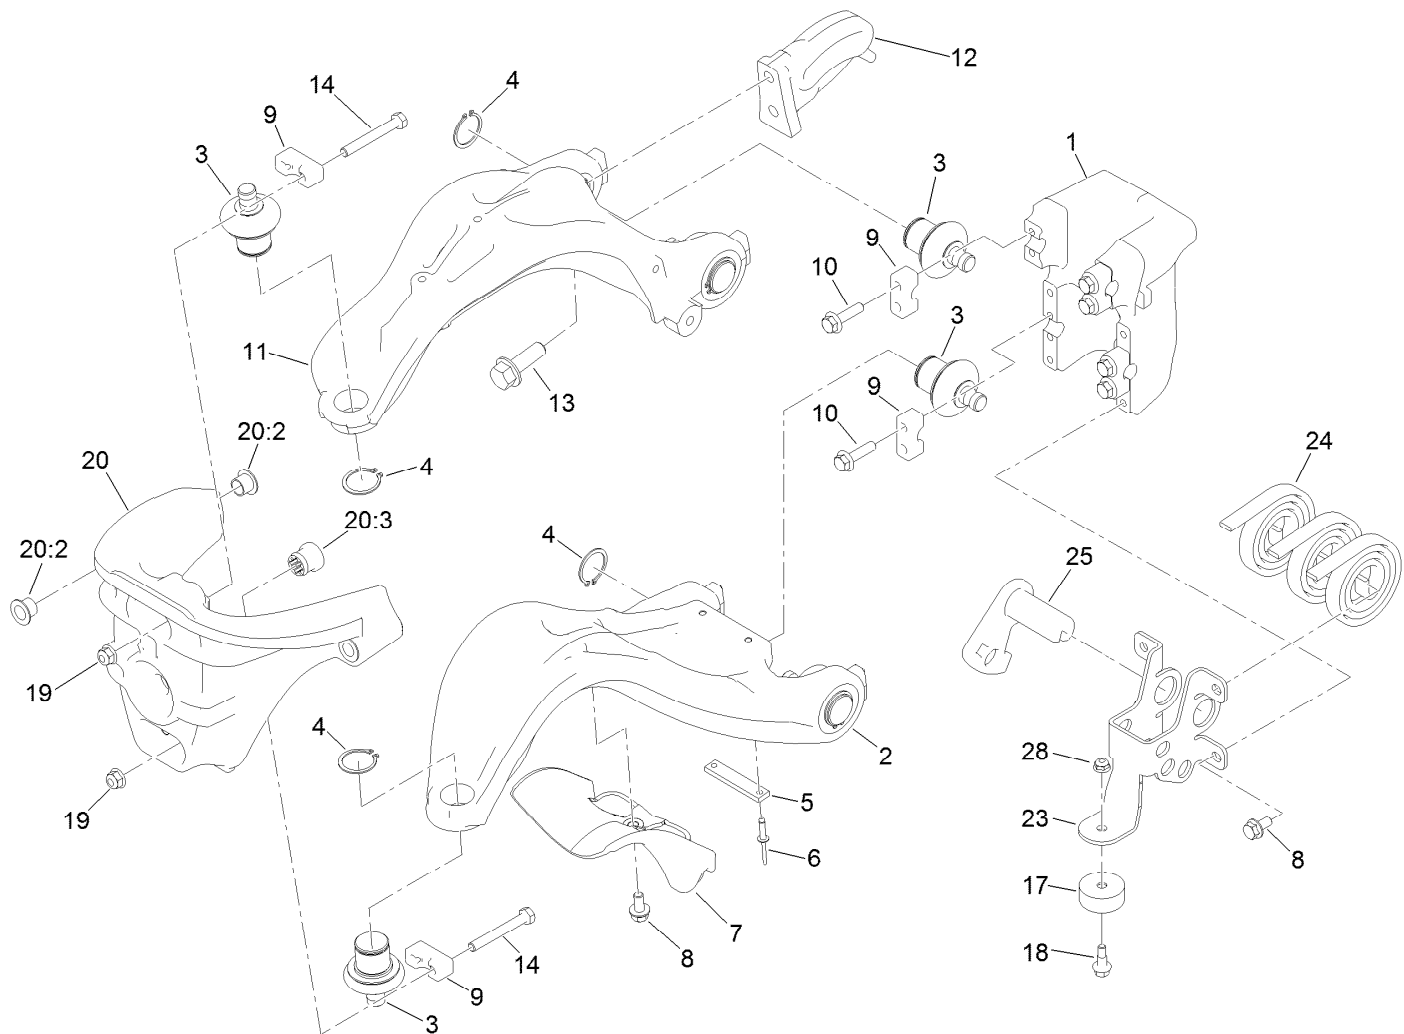 

Suspension A-Arm Assembly

Ref.	Part Number	Qty.	Description
1	117-9480	1	Mount-Pivot, A-Arms
2	117-6656	1	A-Arm, Lower
3	132-6959	6	Balljoint
4	120-3225	6	Ring-Retaining, EXT
5	117-6674	1	Plate-Striker
6	3269-28	2	Rivet-Pop
7	117-6755	1	Stop-Steering
8	114-7728	5	Screw-HHF, Patch
9	112-5647	6	Clamp
10	132-3837	8	Screw-HHF
11	139-6452	1	A-Arm, Upper
12	139-8407	1	Plate-Lift

Ref.	Part Number	Qty.	Description
13	100-6116	2	Screw-HHF
14	132-3838	4	Screw-HH
17	133-0308	1	Bumper-Rubber
18	133-0315	1	Screw-Shoulder, HF
19	161-4706	4	Nut-Flange, Nylock
20	120-3216	1	Steering Head ASM
20:2	125-5239	4	Bushing-Flange
20:3	131-1836	1	Grommet
23	140-5232	1	C-Balance Mount
24	114-9306	3	Spring
25	140-5234	1	Tensioner
28	104-7201	1	Nut-HF, NI

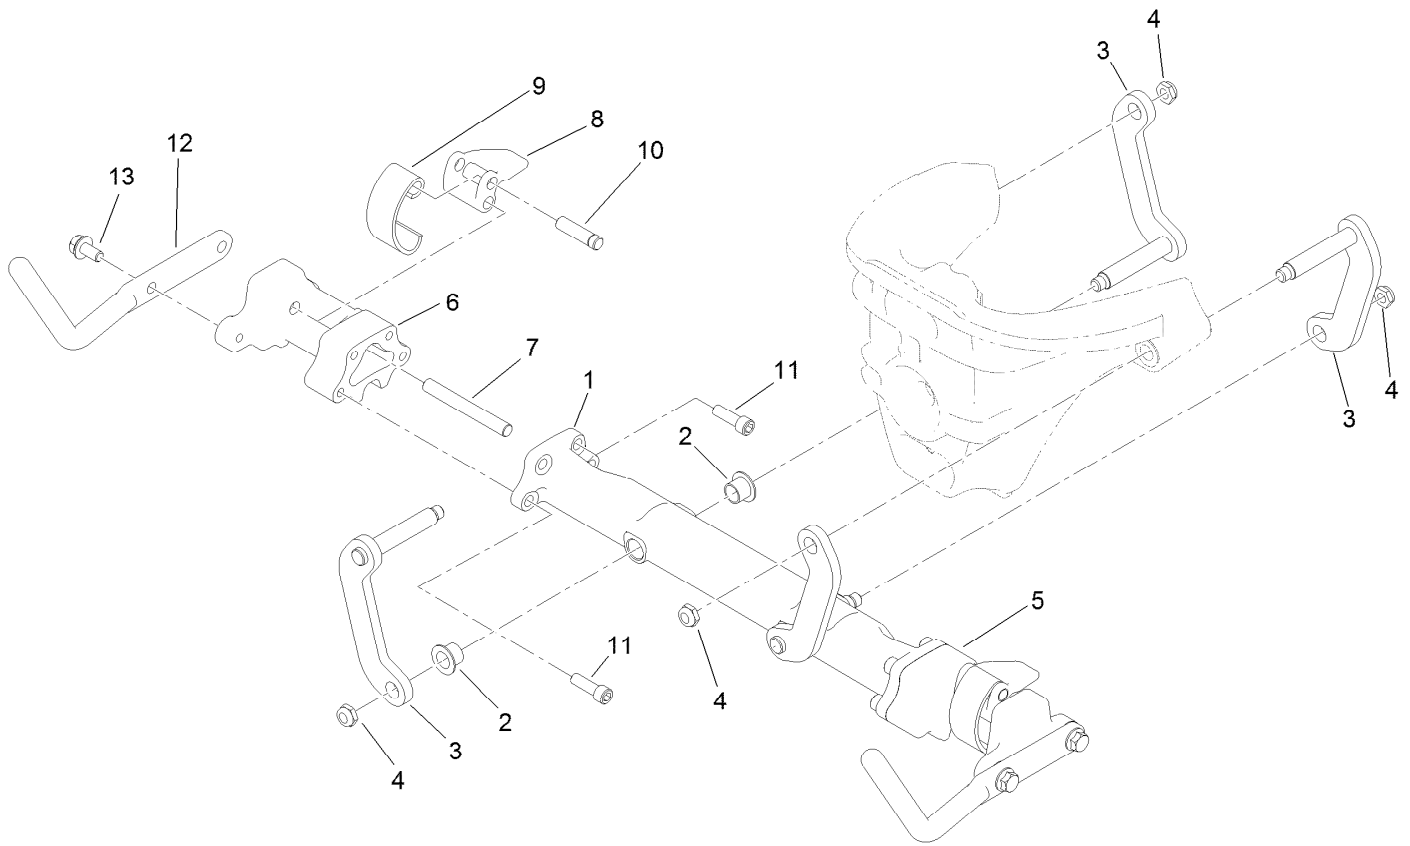 

Suspension Crossarm Assembly

Ref.	Part Number	Qty.	Description
1	120-3217	1	Crossarm
2	125-5239	4	Bushing-Flange
3	117-6654	4	Link
4	3296-59	4	Nut-Lock, NI
5	117-9482	1	Mount-Cross Arm, LH
6	117-9492	1	Mount-Cross Arm, RH
7	114-8051	2	Pin-Pivot
8	114-8047	2	Lever
9	114-8048	2	Spring
10	114-8049	2	Pin-Pivot
11	120-3227	8	Screw-HSH
12	120-2784-01	2	Horn-Basket
13	114-7728	4	Screw-HHF, Patch

Attachments and Accessories

For 04591 — Greensmaster eTriFlex 3370 Traction Unit

Product Name	Model/Part
Turf Evaluator	04399
Light Kit.....	04500
3WD Kit, Electric Triflex	04503
Standard Greensmower Seat Kit	04508
8-Blade DPA Reel Mower	04651
11-Blade DPA Reel Mower	04653
14-Blade DPA Reel Mower	04655
8-Blade TRIFLEX FWY Cutting Unit	04657
Anti-Bobbing Kit.....	04716
Tri-Roller	04722
Spiker	04723
Premium Seat.....	04729
Paint-Black Bottle	112-0176
Paint-Red Bottle	112-0178
Wireless Hourmeter	115-4754
Premium Armrest Kit.....	119-7105
Weight Kit	119-7129
Armrest Kit.....	121-3660
Hi-Back Seat Cover	133-1308
Rear Light Kit.....	137-7945
Front Light Mount Kit, TriFlex/eTriFlex	137-7947
Bag Kit.....	137-8130
Bimini Shade Kit	138-8579
Kit-Fuses	139-8482
Wheel-Assembly.....	144-3664
Tire - 20 X 10.00-8, 4ply.....	144-3665
Charger-1200W	147-3134
Cord-AC, 120V	147-6297
Adapter, AC, 250V/10A, EU To UK	147-7791
Adapter, AC, 250V/10A, EU To Australia	147-7792
Toro Red 12oz Aerosol Can	361-10
Semi-Gloss Black Spray Paint.....	361-9
Height-of-Cut Bar.....	94-9010

Notes:



Count on it.