



Form No. 3451-124 Rev G

Count on it.

Parts Catalog

60in Z Master®

Revolution® Series Riding Mower

Model No. 18760—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Main Frame Assembly	4
Roll-Over Protection System Assembly No. 161-3495.	6
Drive Assembly	8
Guards Assembly	10
Battery Assembly	12
Battery Assembly No. 145-5385	14
Battery Charger Assembly No. 147-1677.	16
Seat Mount Assembly	18
Seat Assembly No. 145-8422	20
Motion Control and Parking Brake Assembly.	22
Right Motion Control Assembly No. 145-1325.	24
Left Motion Control Assembly No. 145-1326	26
Front Caster Wheel Assembly	28
Caster and Wheel Assembly	30
Rear Wheel Assembly	32
Electrical and Wire Harness Assembly	34
Wire Harness Assembly No. 144-2673.	36
Deck Lift Assembly.	38
Deck Strut Assembly No. 140-1179	40
Electrical Components Assembly	42
Decal Assembly	44
Deck Assembly.	46
Deck Decal Assembly No. 147-7825	48
Deflector Assembly No. 147-1642.	50
Attachments and Accessories	52

Main Frame Assembly

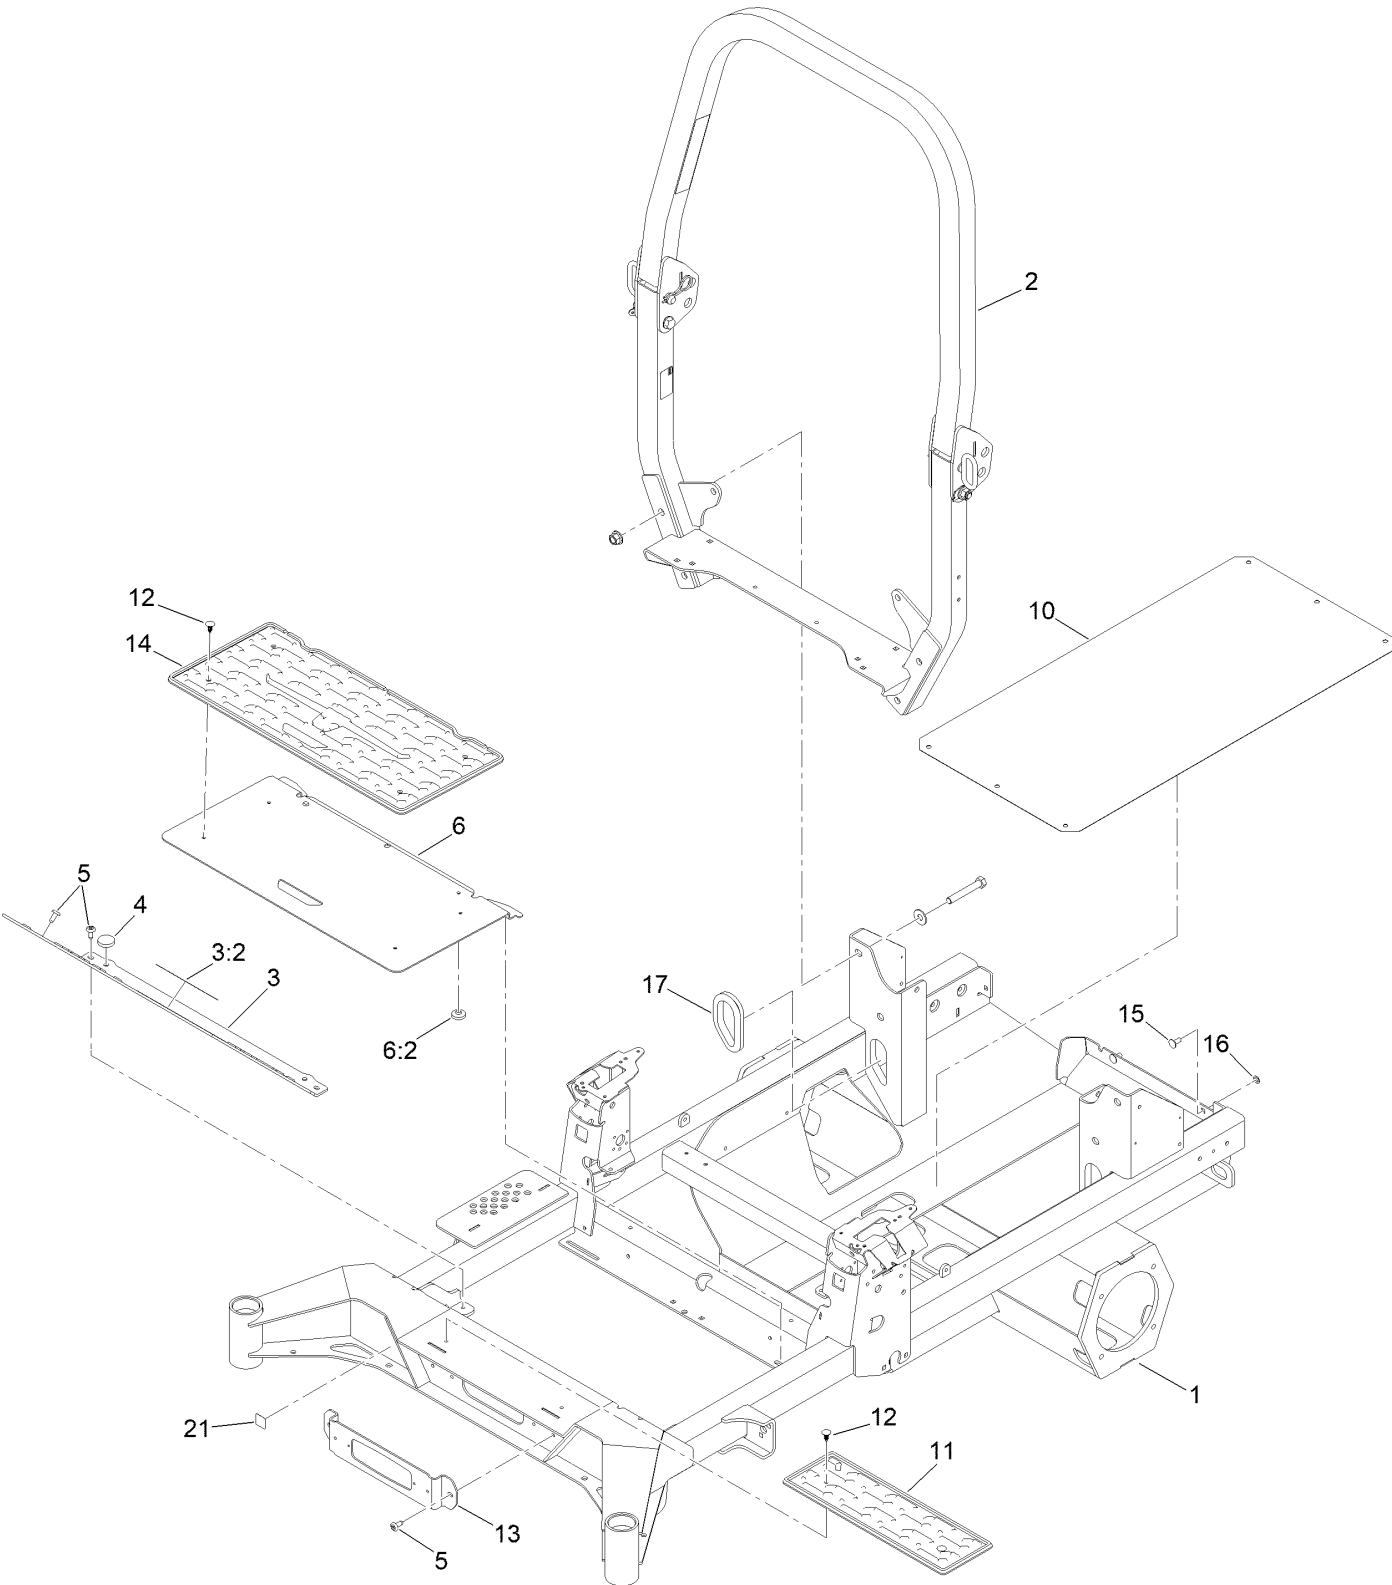


Main Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-1288-01	1	Frame	11	140-4992	1	Step
2	161-3495	1	ROPS ASM	12	117-2382	6	Plug-Plastic
3	145-3666	1	Toeboard W/Decal	13	140-4994-01	1	Bracket-Light
3:2	145-3665	1	Decal-Danger	14	140-7950	1	Floormat-Fixed Seat
4	109-9233	2	Bumper-Push-In, Rubber	15	3230-22	2	Screw-CARR
5	138-9753	6	Screw	16	117-2749	2	Nut-Push
6	138-6098	1	Floor Pan ASM	17	144-6568	2	Grommet-Rubber
6:2	109-9233	2	Bumper-Push-In, Rubber	21	147-0290	1	Decal-Light, Warning
10	147-7856-01	1	Plate-Skid				

Roll-Over Protection System Assembly

No. 161-3495

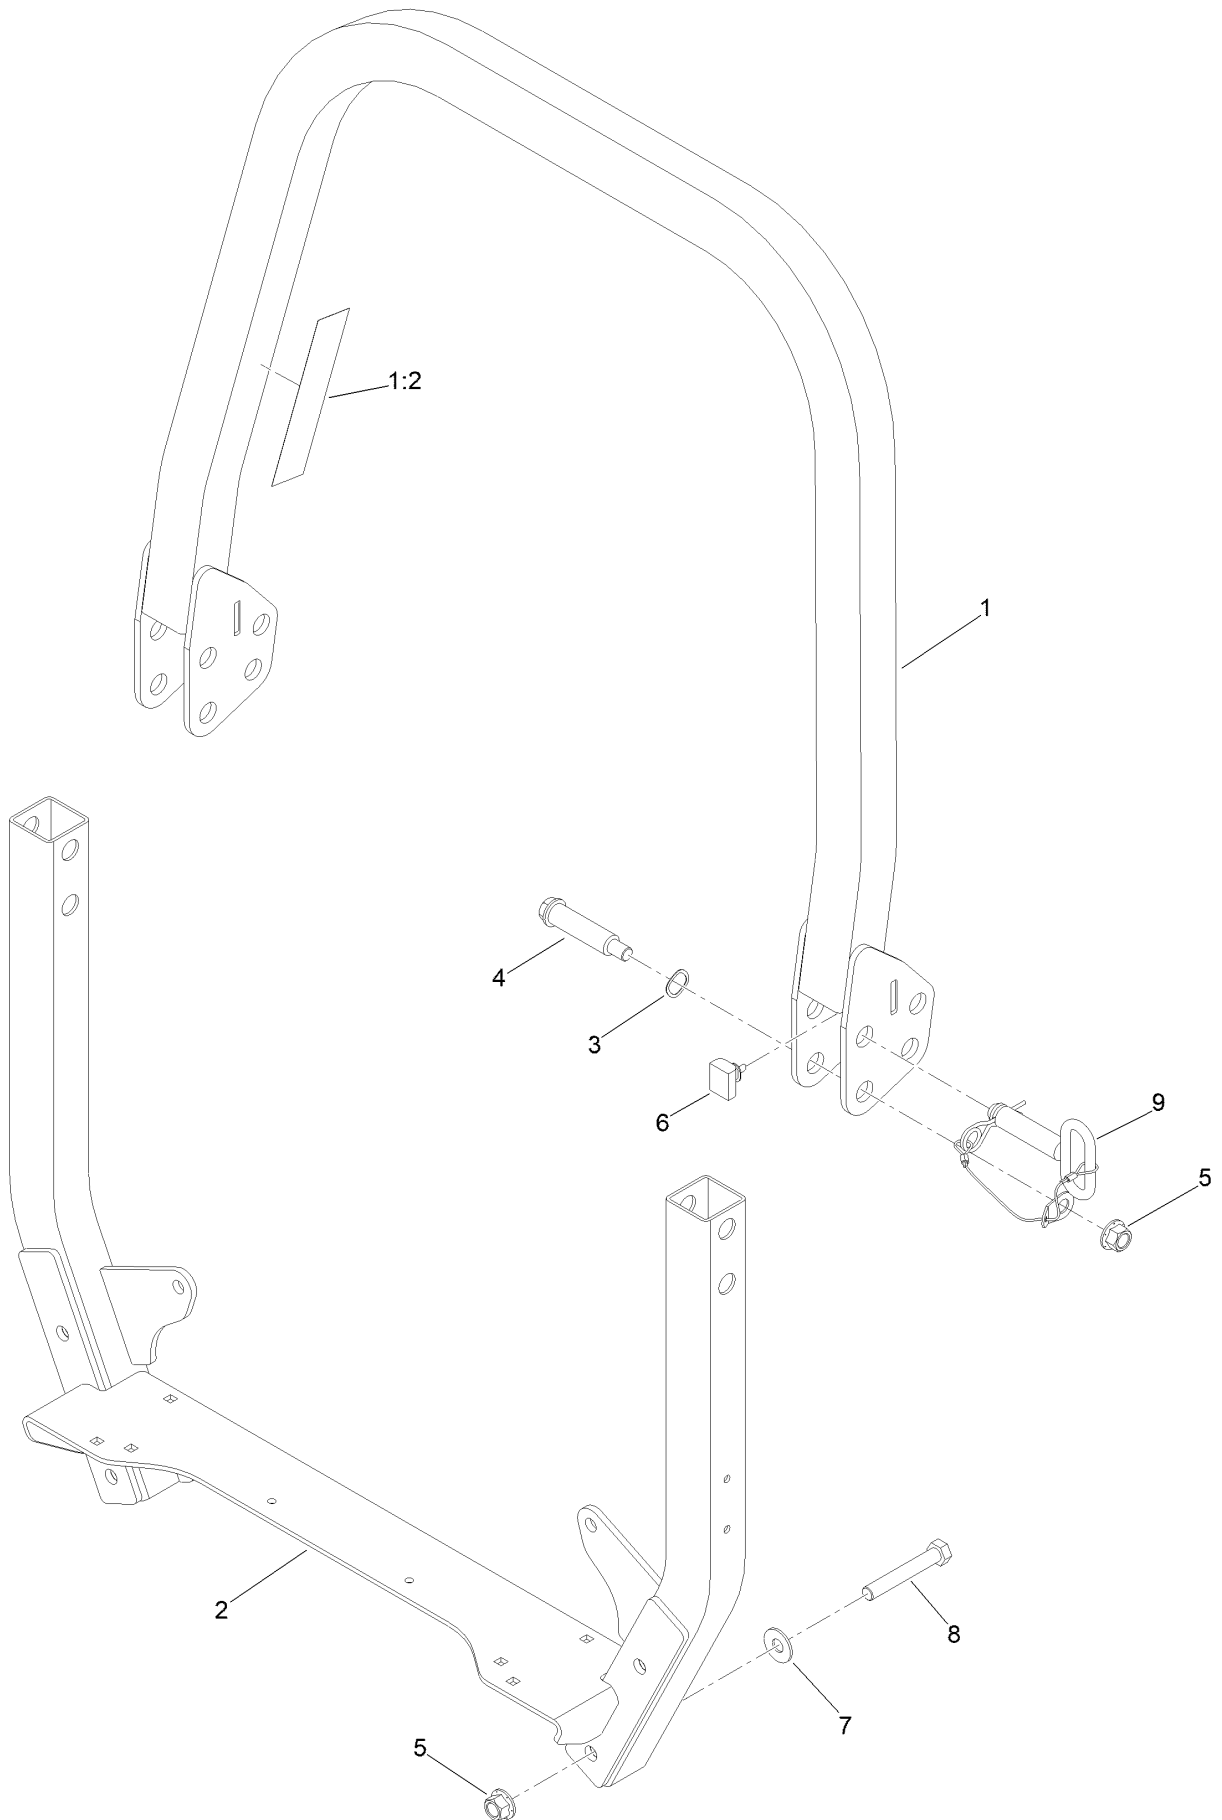

Roll-Over Protection System Assembly


No. 161-3495 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Upper ROPS ASM ●
1:2	107-3069	1	Decal-Warning
2		1	ROPS-Lower ●
3	119-4164	2	Washer-Wave
4	126-9209	2	Bolt-Shoulder

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	99-5107	6	Nut-HF Nylock
6	109-5337	2	Bumper-ROPS
7	109-9505	4	Washer-Spring
8	325-13	4	Screw-HH
9	161-4477	2	ROPS Pin ASM

● Not serviced separately


Drive Assembly

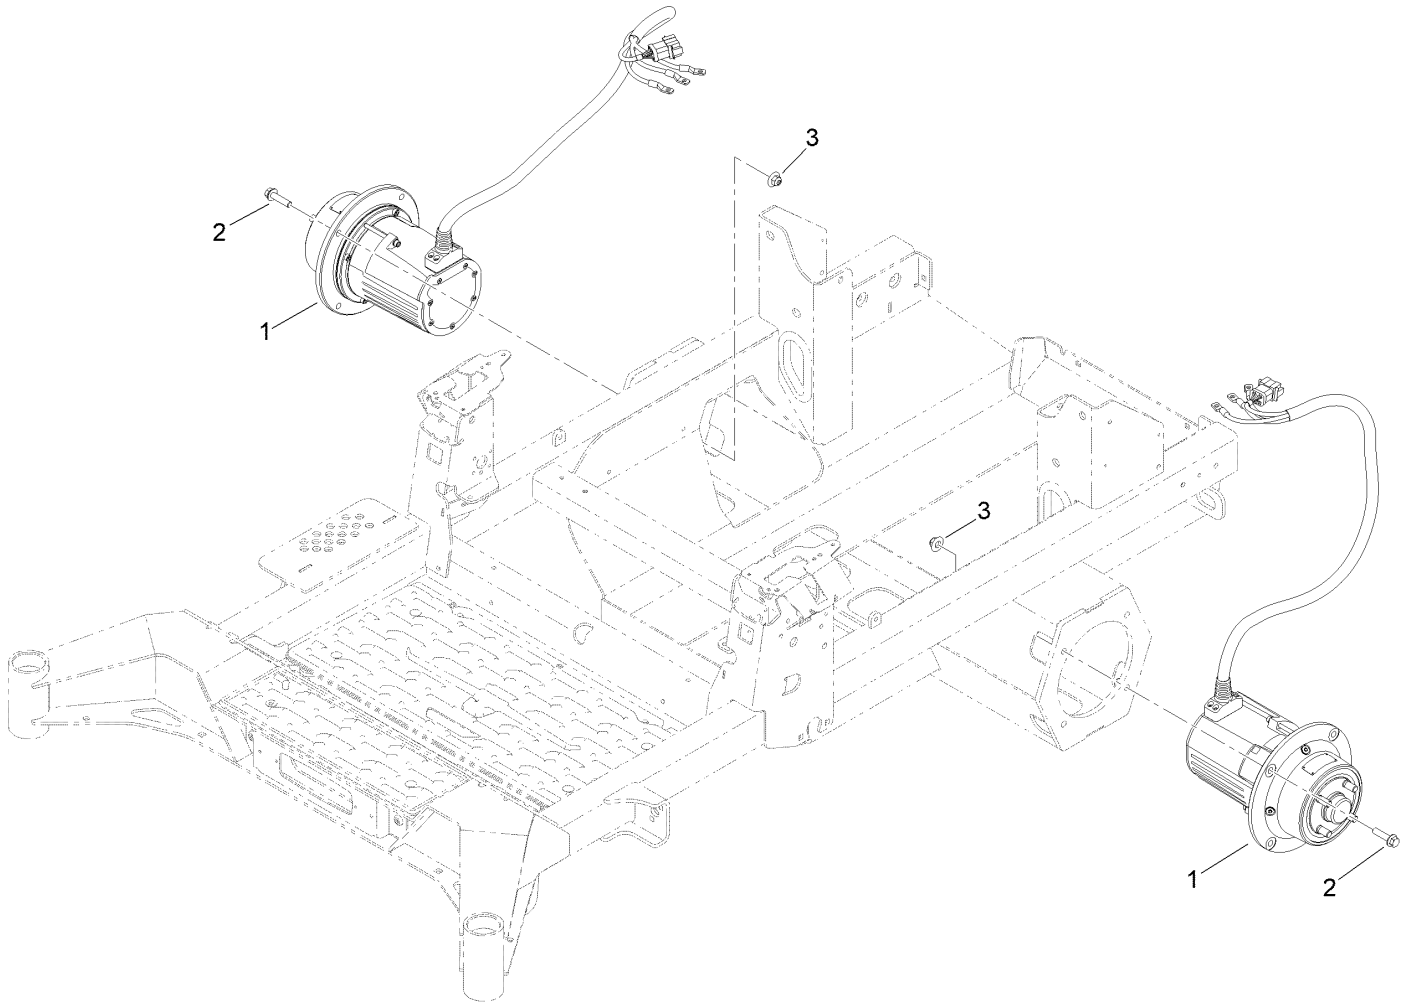

Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-6261	1	Motor/Gearbox ASM
2	114-4681	8	Screw-HHF
3	109-6658	8	Nut-Flange, NI


Guards Assembly

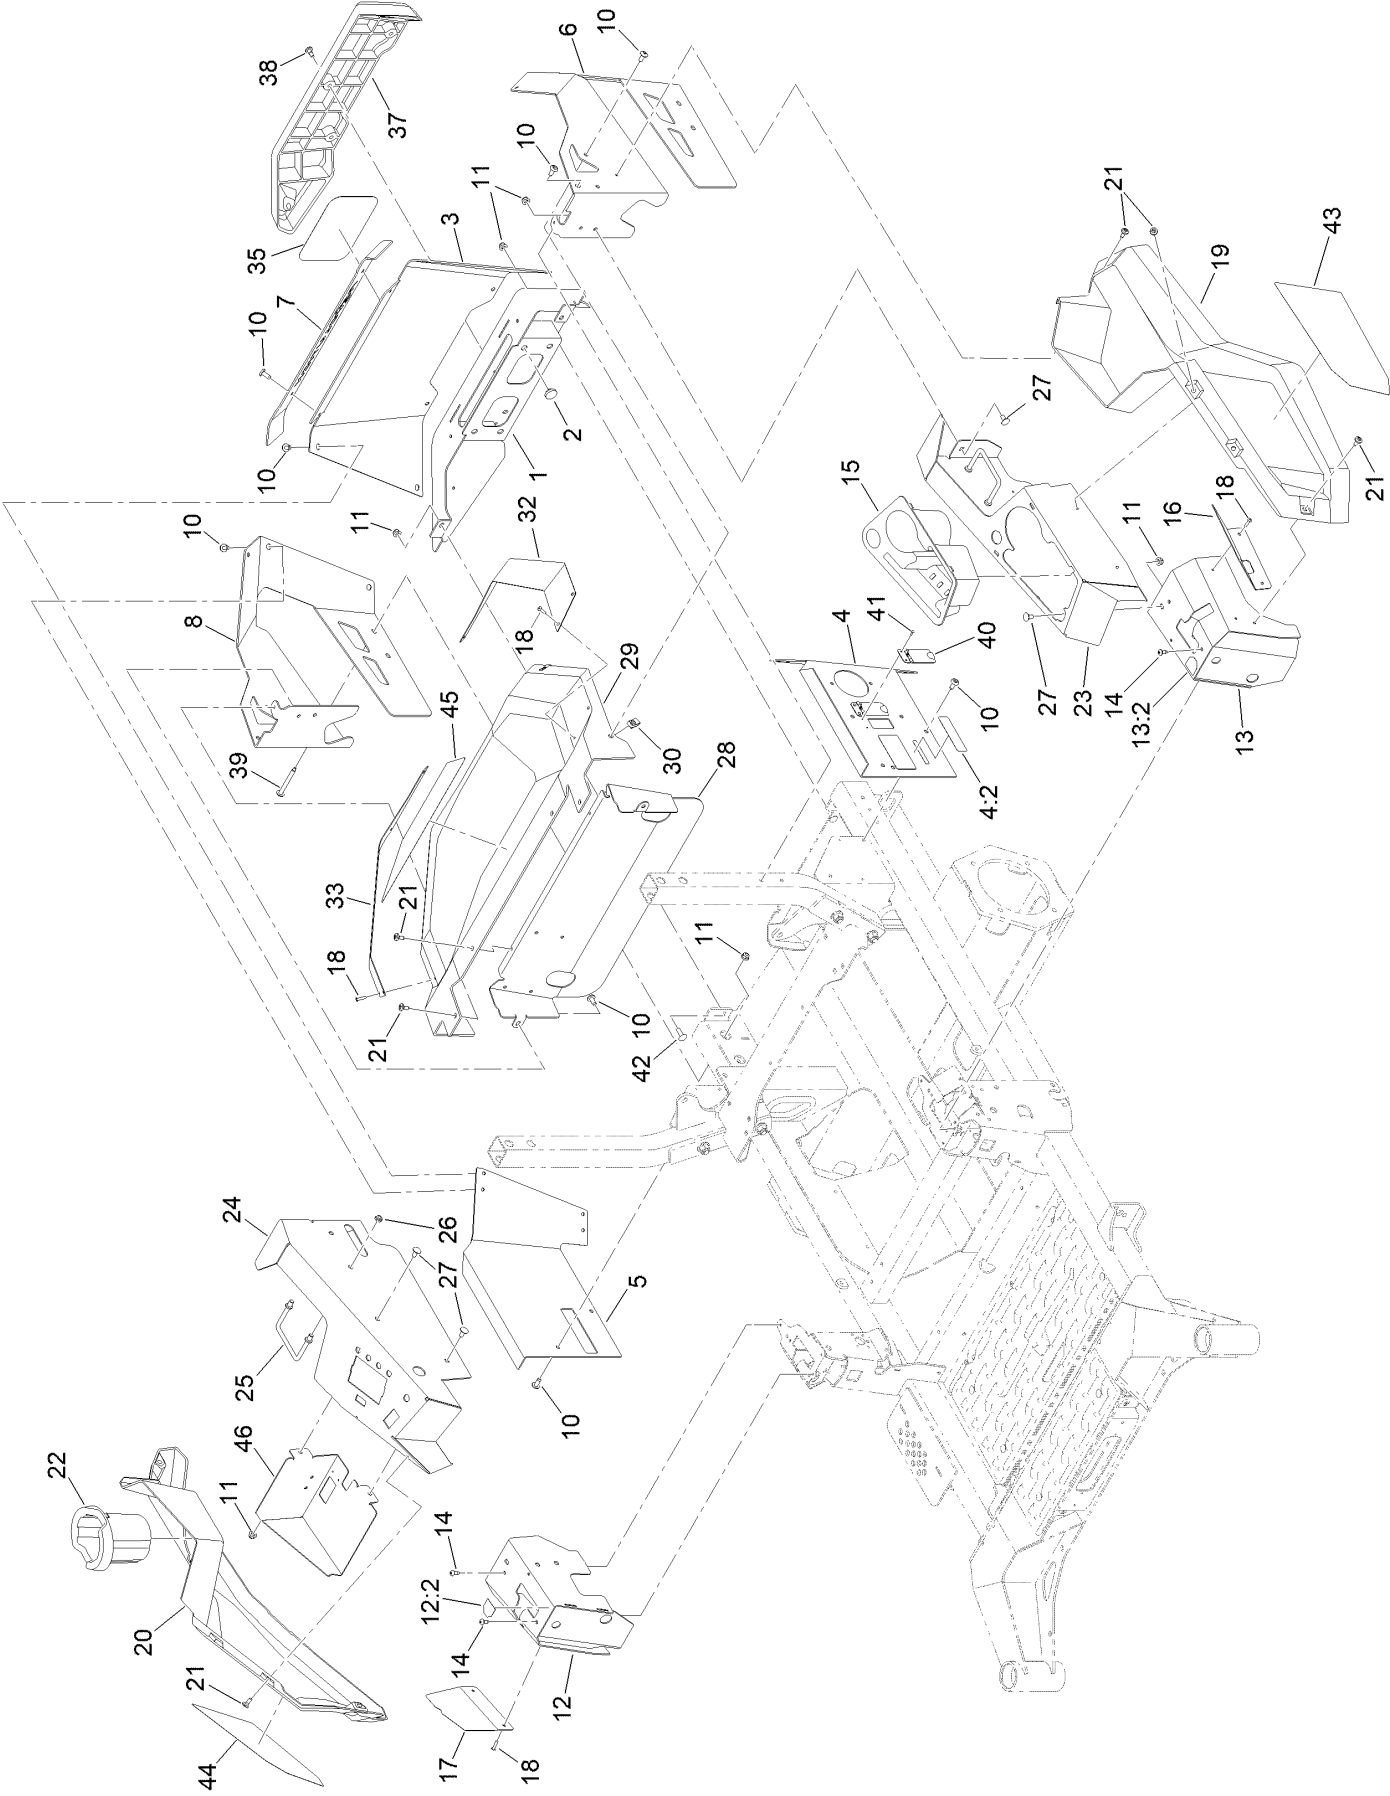

Guards Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-6621-01	1	Guard-Rear	22	140-8019	1	Cupholder-RH
2	135-0505	4	Bumper-Seat	23	145-1287-01	1	Console-LH
3	144-6608	1	Plate-Rear, Upper	24	147-7810-01	1	Console-RH
4	147-4637	1	LH Rear Guard ASM	25	144-2642	2	Rod-Support, Pod
4:2	144-7008	1	Decal-Service, Shut-Off	26	3296-59	4	Nut-Lock, NI
5	147-1608-03	1	Guard-Rear, RH	27	3230-18	6	Screw-CARR
6	144-6624-01	1	Guard-Rear, LH	28	147-1627-03	1	Plate-Cover, Component
7	145-5704-01	1	Guard-Rear, Top	29	145-1253	1	Cover-Rear
8	144-6612-01	1	Guard-Rear, RH	30	112-3306	4	Nut
10	138-9753	26	Screw	32	145-1254	1	Plate-Rear, LH
11	104-8300	14	Nut-HF, NI	33	145-1255	1	Plate-Rear, RH
12	145-1316	1	RH Cover ASM	35	145-1978	1	Decal-Logo, Silver
12:2	139-2394	1	Decal-Control Lever, RH	37	144-6622	1	Bumper-Rear
13	145-1319	1	LH Cover ASM	38	135-2015	5	Screw-Shoulder
13:2	139-2395	1	Decal-Control Lever, LH	39	126-6267	4	Screw-TTH
14	87-6620	4	Screw-Tph Thd Form	40	144-6628	2	Plate-Cover, Spring
15	140-7968	1	Cup Holder	41	923786	4	Rivet
16	140-7996-03	1	Plate-Cover, LH Front	42	3230-22	2	Screw-CARR
17	140-7998-03	1	Plate-Cover, RH Front	43	145-1974	1	Decal-Pod, LH
18	130-8451	12	Rivet-Trifold	44	145-1975	1	Decal-Pod, RH
19	144-2666	1	Side Pod, LH	45	147-7817	1	Decal-Hypercell
20	140-7980	1	Side Pod, RH	46	147-7781-01	1	Plate-Cover, Electrical
21	120-7950	12	Screw-Torx				


Battery Assembly

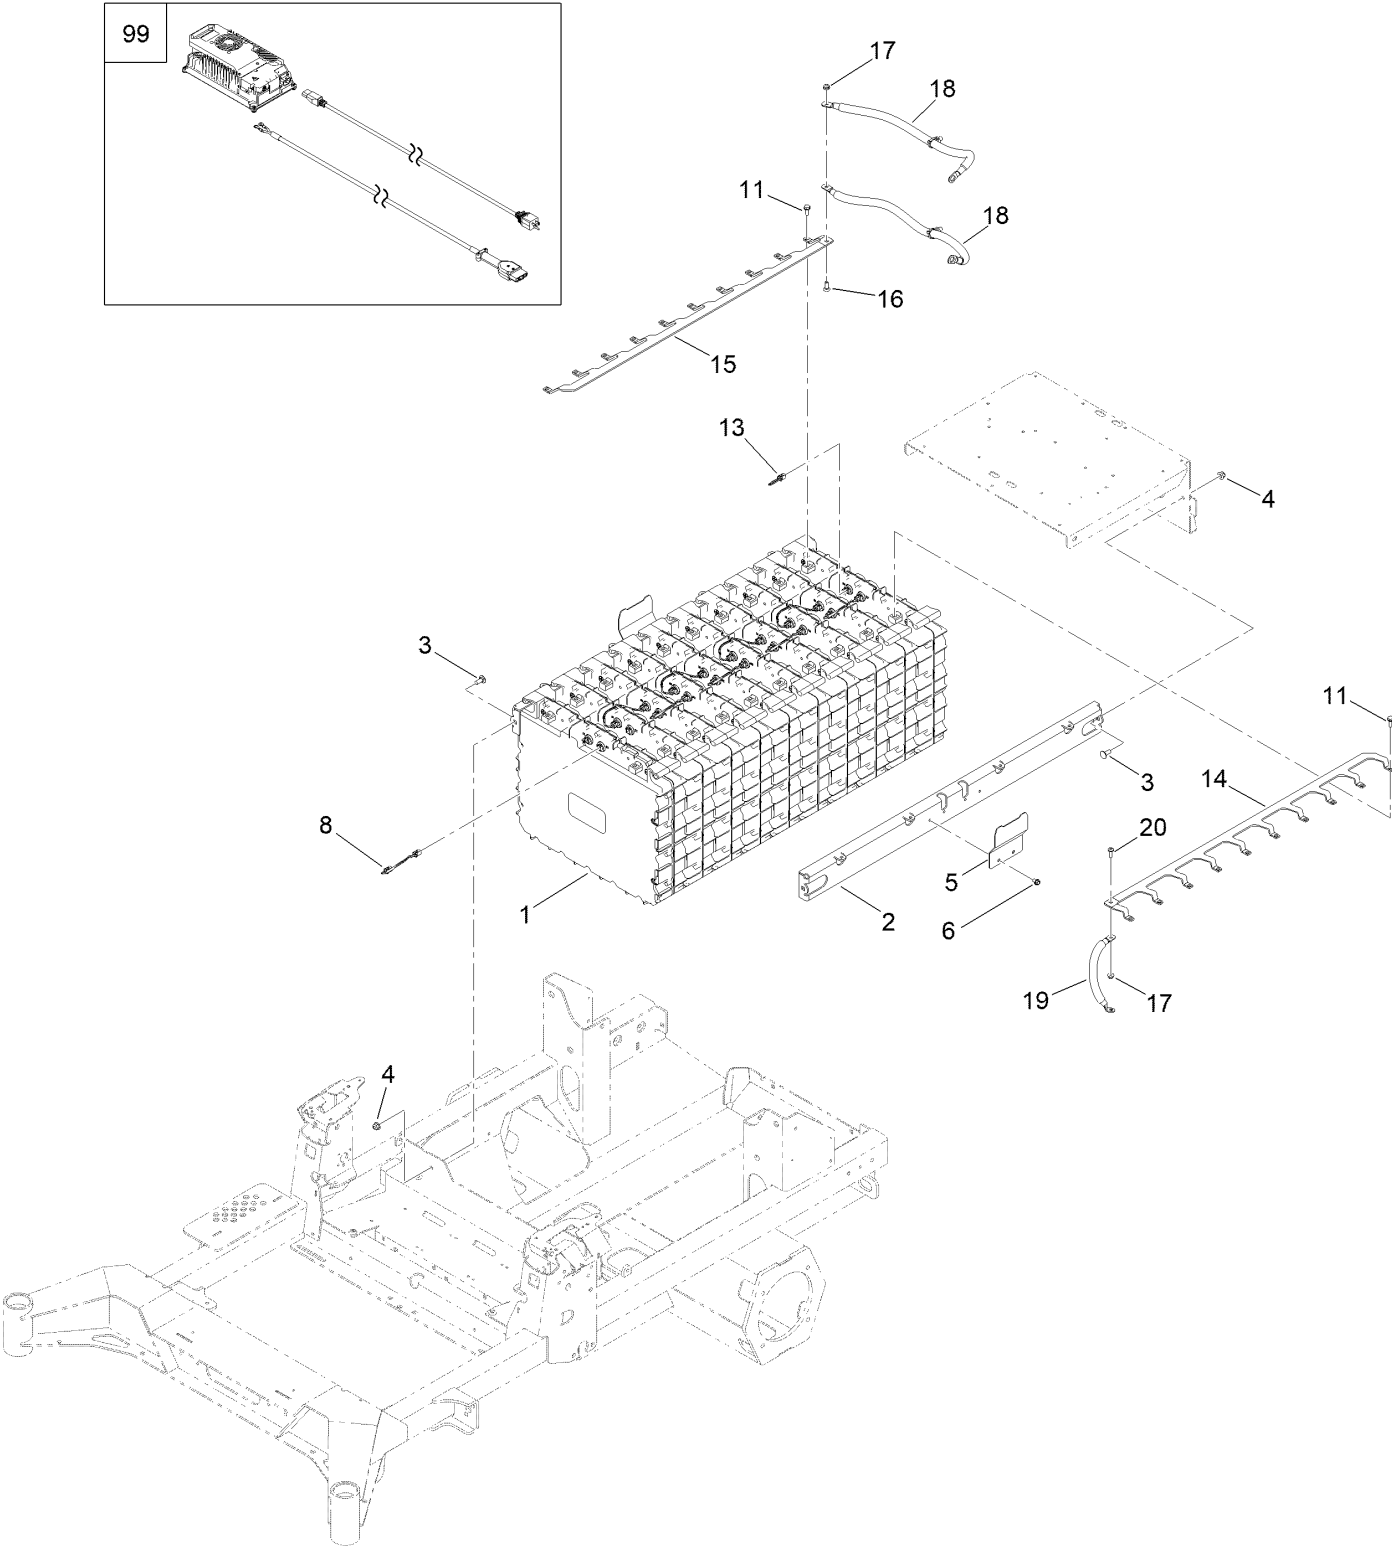

Battery Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-5385	10	Battery ASM	14	147-1666	1	Busbar-10, Bk
2	147-7809-03	2	Plate-Retainer	15	147-1632	1	Busbar-10, Rd
3	3230-23	4	Bolt-CARR	16	1-807512	1	Bolt-CARR
4	104-8300	4	Nut-HF, NI	17	104-7201	2	Nut-HF, NI
5	147-7773-03	2	Plate-Cover	18	147-4560	2	Cable-Battery, Rd ASM
6	99-8445	4	Screw-HWH	19	147-4570	1	Cable-Battery, Bk ASM
8	140-9565	9	Harness-Wire, Data Interface	20	138-0689	1	Screw-PH
11	145-5783	20	Screw-Sems	99	147-1677	1	Charger-1200W
13	122-2323	1	Harness-Wire, Can Terminator				


Battery Assembly No. 145-5385

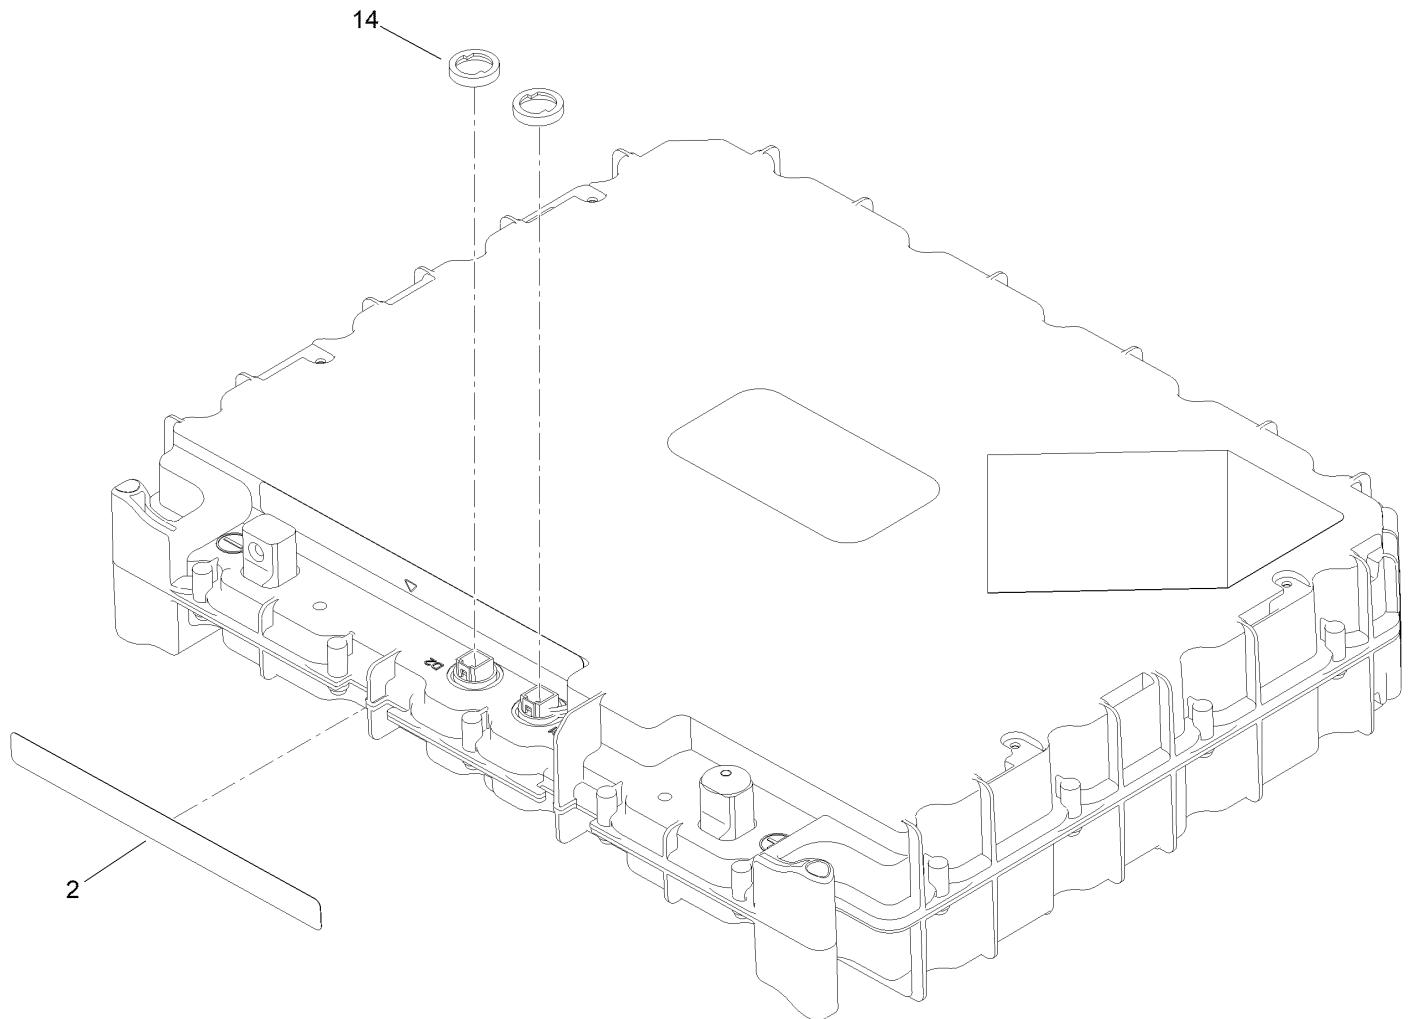

Battery Assembly No. 145-5385 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	145-5338	1	Decal-Warning, Battery
14	32180-466	2	Nut-Mounting, Jwpf Panel Lock


Battery Charger Assembly No. 147-1677

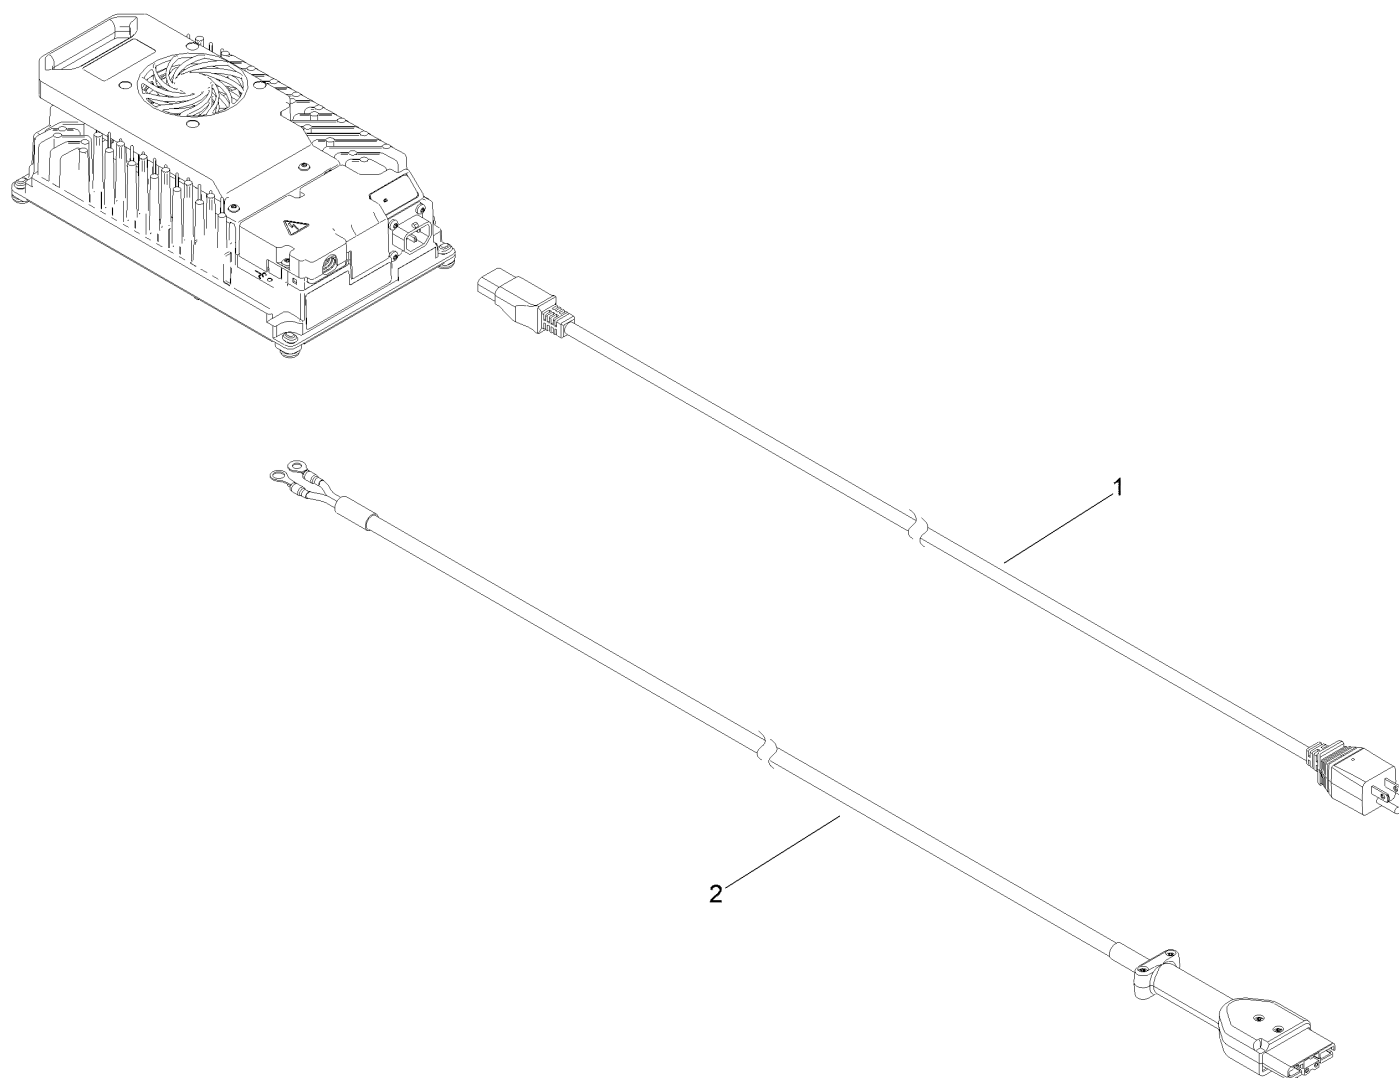

Battery Charger Assembly No. 147-1677 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-1678	1	Cord-AC, 120V
2	147-0227	1	Cable, DC-Hypercell

Seat Mount Assembly

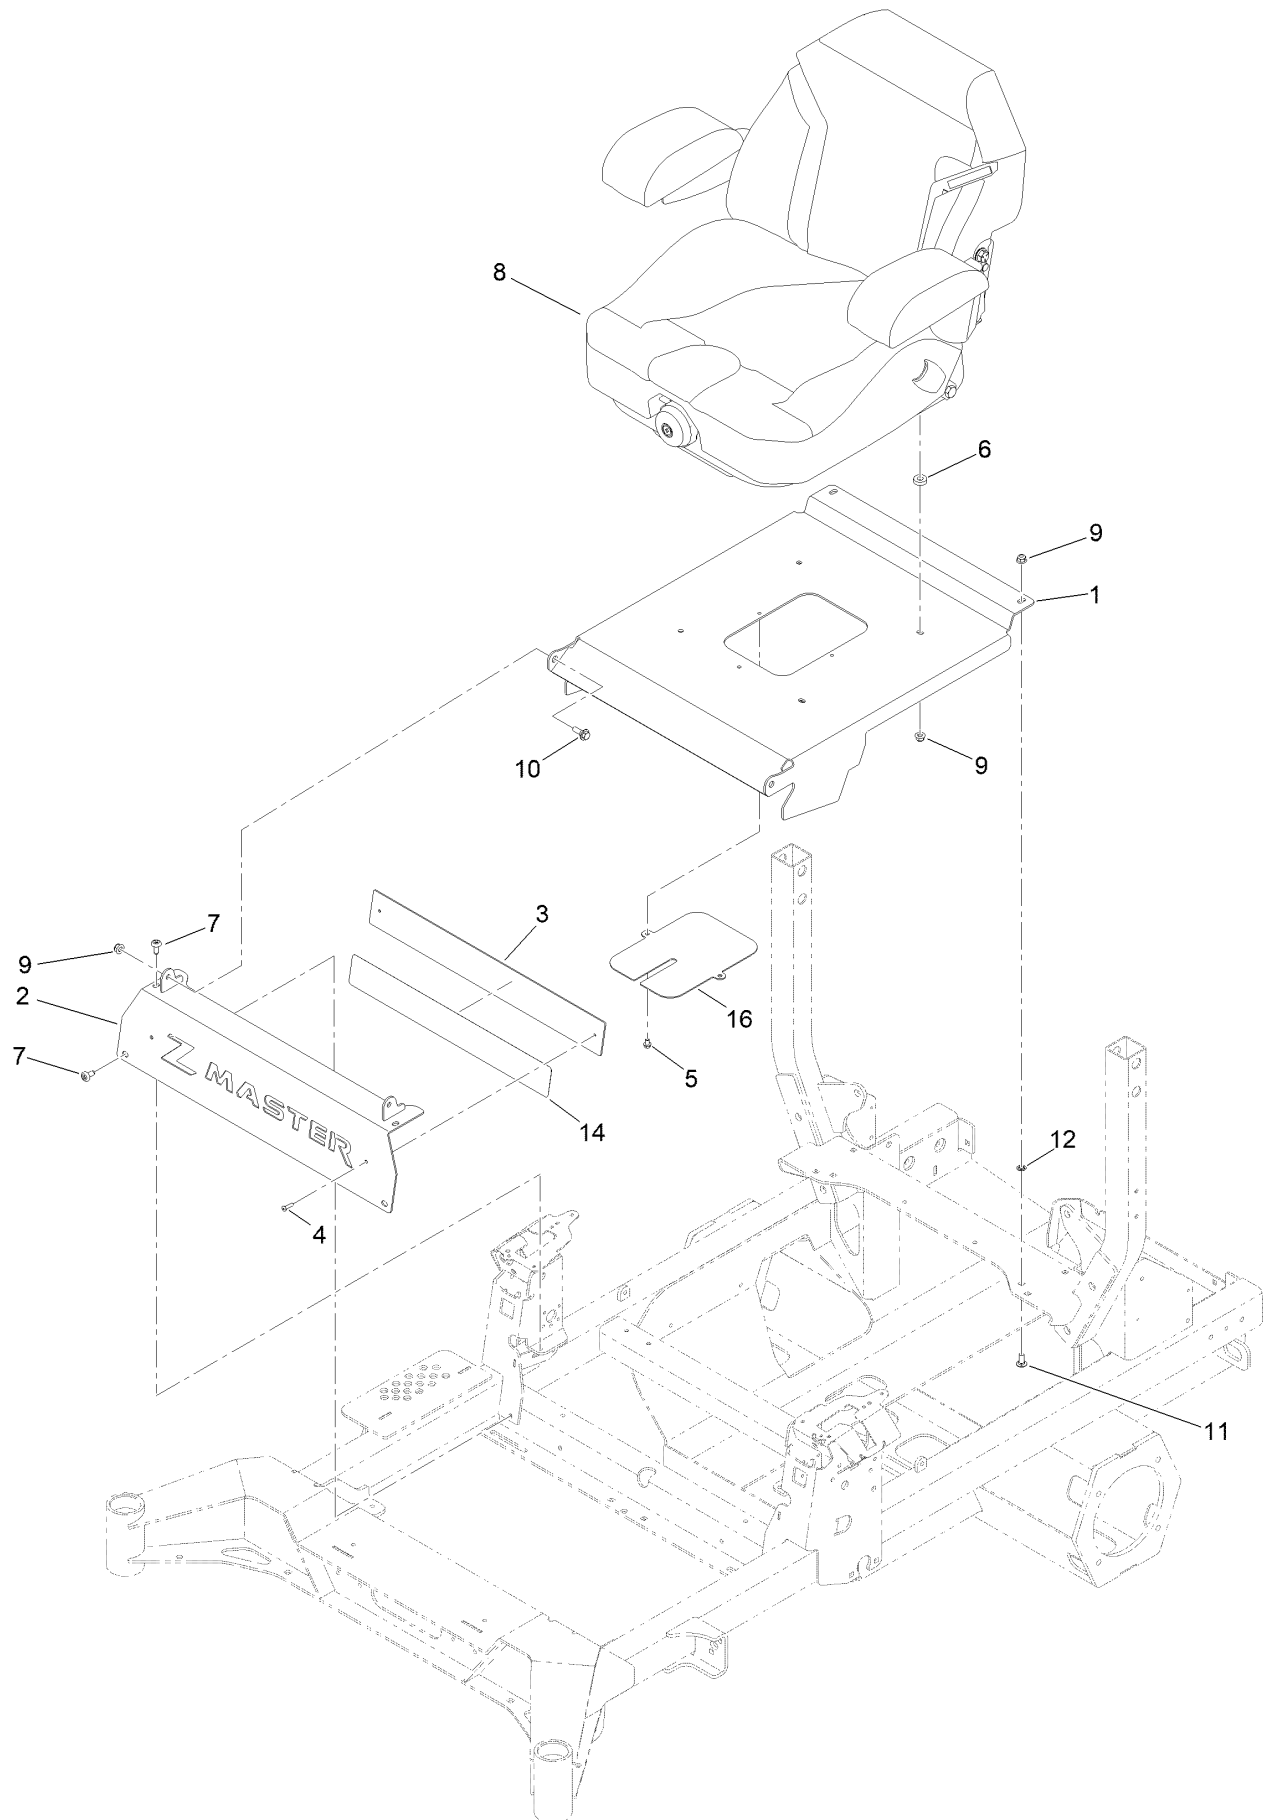


Seat Mount Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-7804-03	1	Pan-Seat
2	145-1311-03	1	Badge Plate ASM
3	147-4954-01	1	Plate-Backer
4	130-8451	2	Rivet-Trifold
5	99-8445	2	Screw-HWH
6	5-0652	4	Spacer
7	138-9753	4	Screw

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
8	145-8422	1	Suspension Seat ASM
9	104-8300	8	Nut-HF, NI
10	116-1297	2	Screw-Shoulder
11	3230-23	2	Bolt-CARR
12	117-2749	2	Nut-Push
14	145-7011	1	Decal-Backer Plate
16	147-7789-03	1	Plate-Cover, Seat

Seat Assembly No. 145-8422

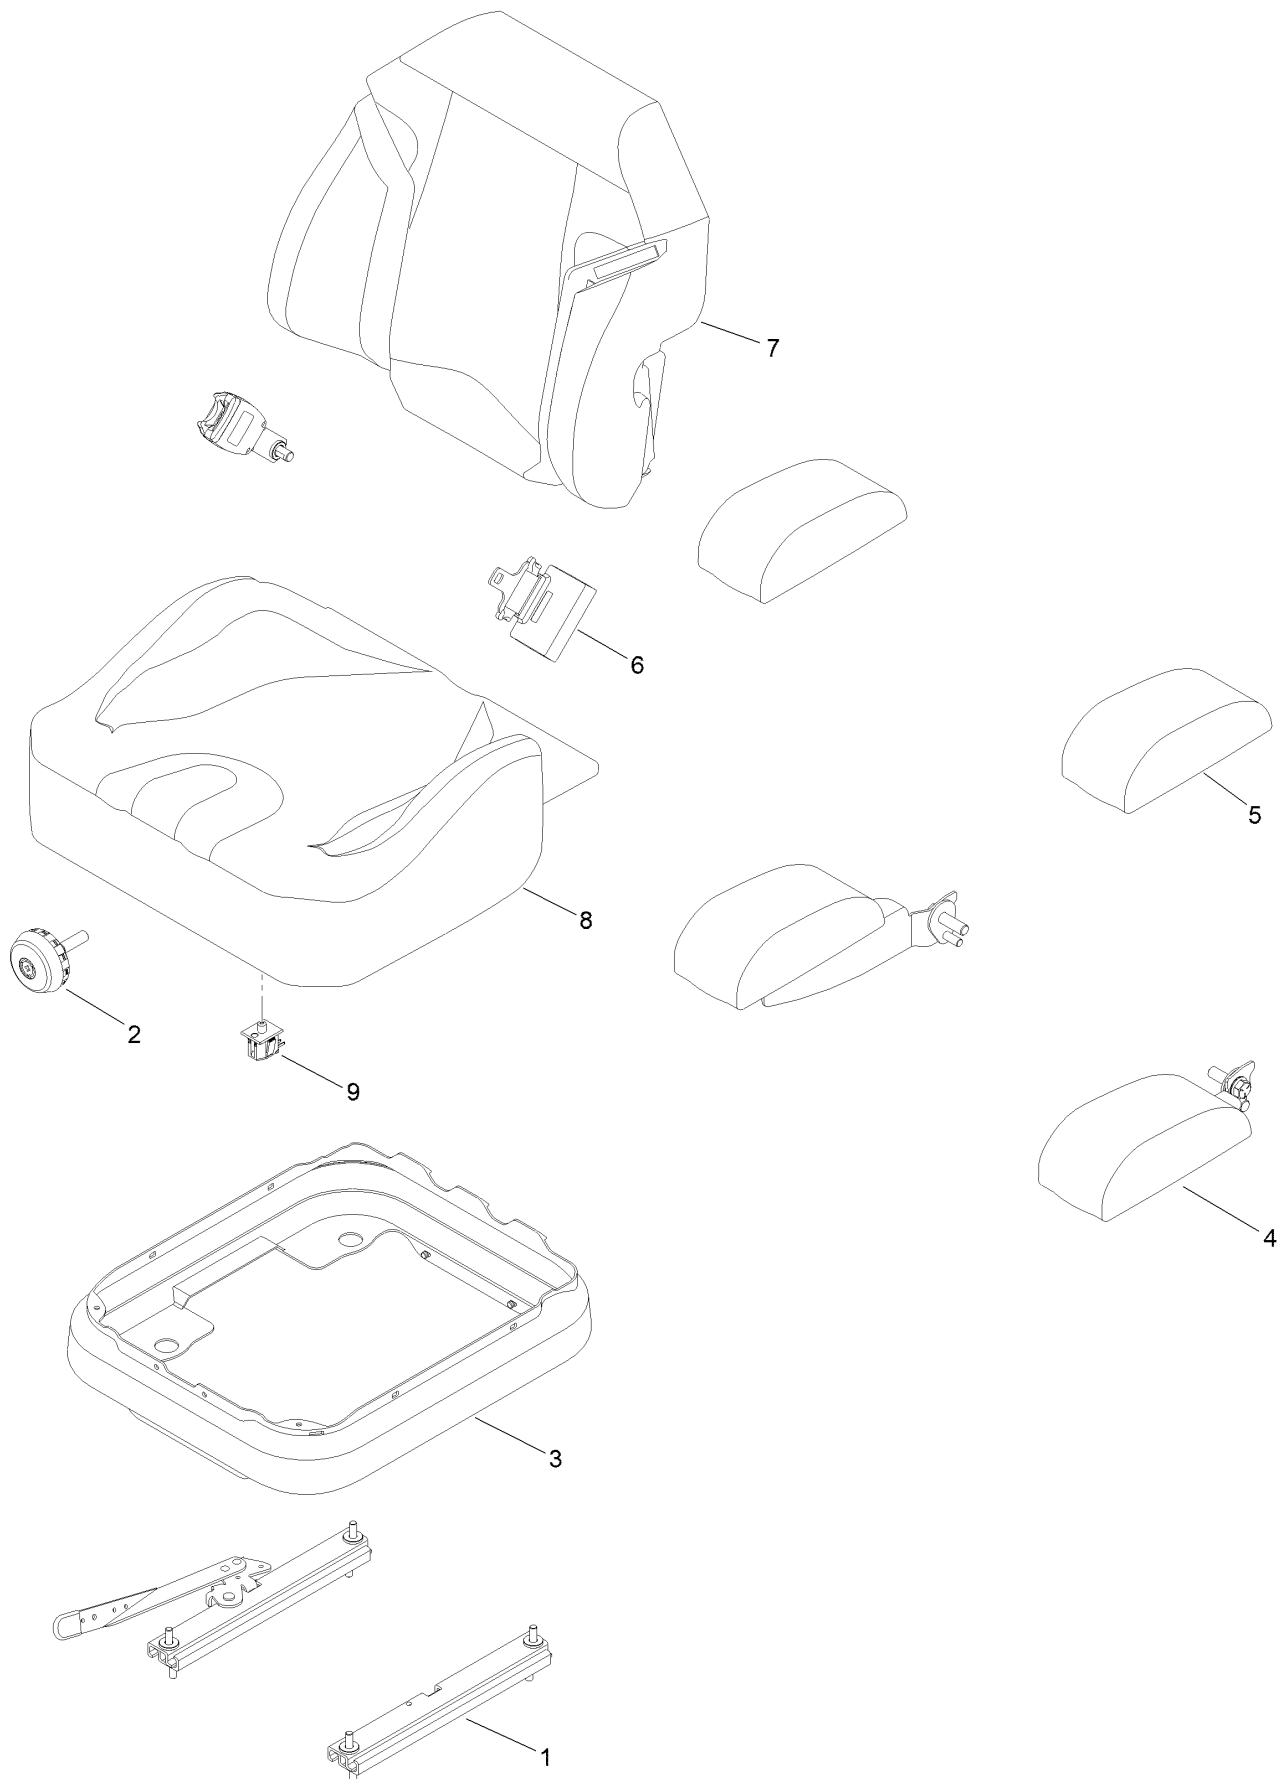


Seat Assembly No. 145-8422 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-8012	1	Seat Track Set
2	140-7118	1	Knob-Weight Adjust ASM
3	126-8559	1	Bellows-Seat
4	147-7925	1	Arm Rest Kit
5	147-7926	1	Pads-Armrest W/ Hardware

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	146-0595	1	Seat Belt Kit
7	147-7922	1	Cover-Back, Seat
8	147-7923	1	Cover-Bottom, Seat
9	145-3520	1	Switch-Plunger, On-(On)


Motion Control and Parking Brake Assembly

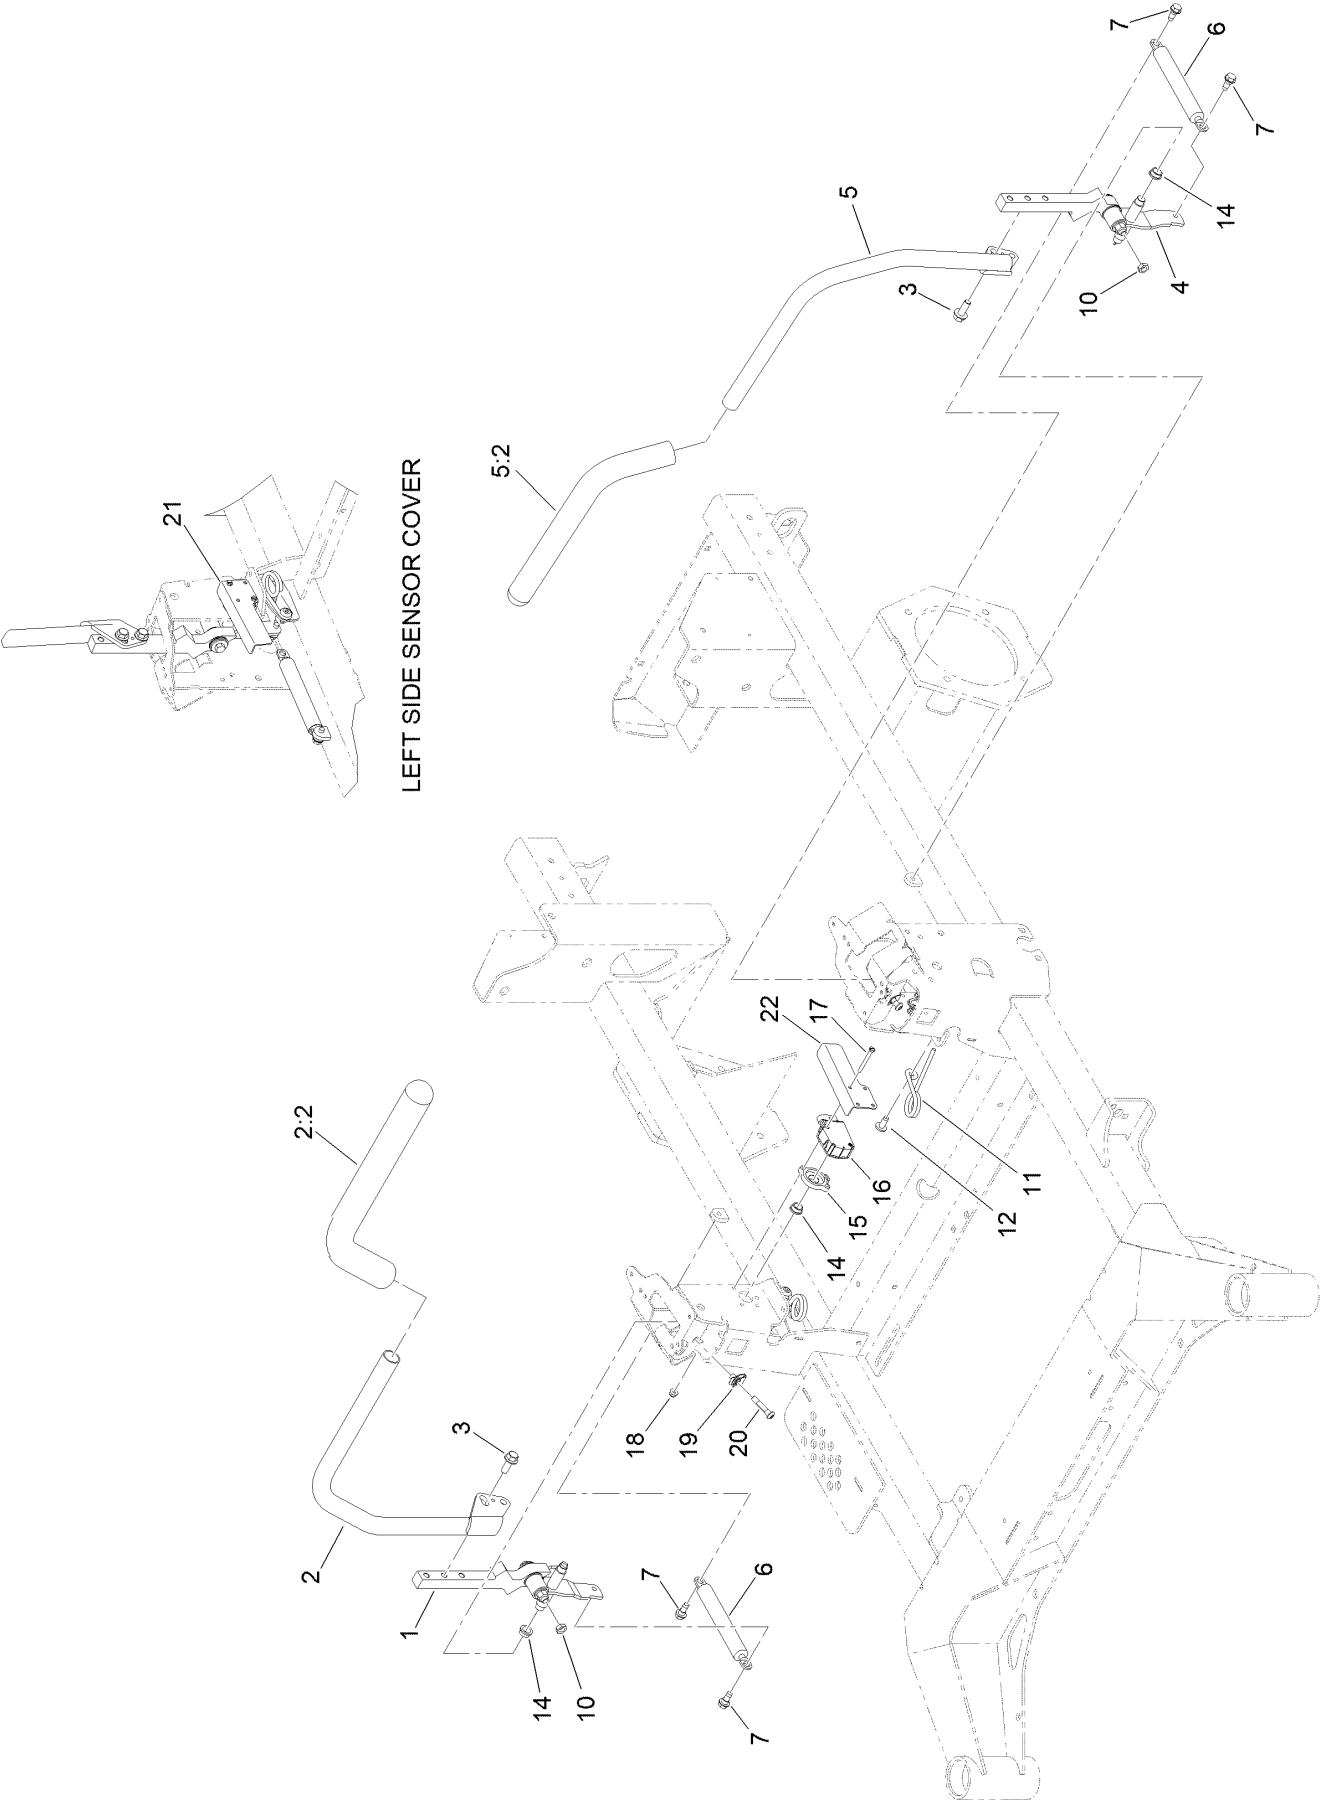

Motion Control and Parking Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-1325	1	RH Motion Control ASM	12	138-9753	2	Screw
2	147-2390	1	RH Handle ASM	14	256-156	4	Bushing-Flange
2:2	109-5668	1	Grip-Lever, Control	15	140-5028	2	Spacer-Sensor
3	3234-42	4	Screw-HHF	16	122-0917	2	Sensor-Position
4	145-1326	1	LH Motion Control ASM	17	3290-424	4	Screw-SHH
5	147-2391	1	LH Handle ASM	18	135-6342	4	Nut-Hex Flange
5:2	109-5668	1	Grip-Lever, Control	19	112-3306	2	Nut
6	142-6851	2	Damper	20	126-4299	2	Screw-HSBH
7	126-4424	4	Screw-Shoulder	21	147-7778-03	1	Plate-Cover, Sensor LH
10	3218-3	2	Nut-Jam	22	147-7779-03	1	Plate-Cover, Sensor RH
11	138-7539	2	Spring-Torsion				

Right Motion Control Assembly No. 145-1325

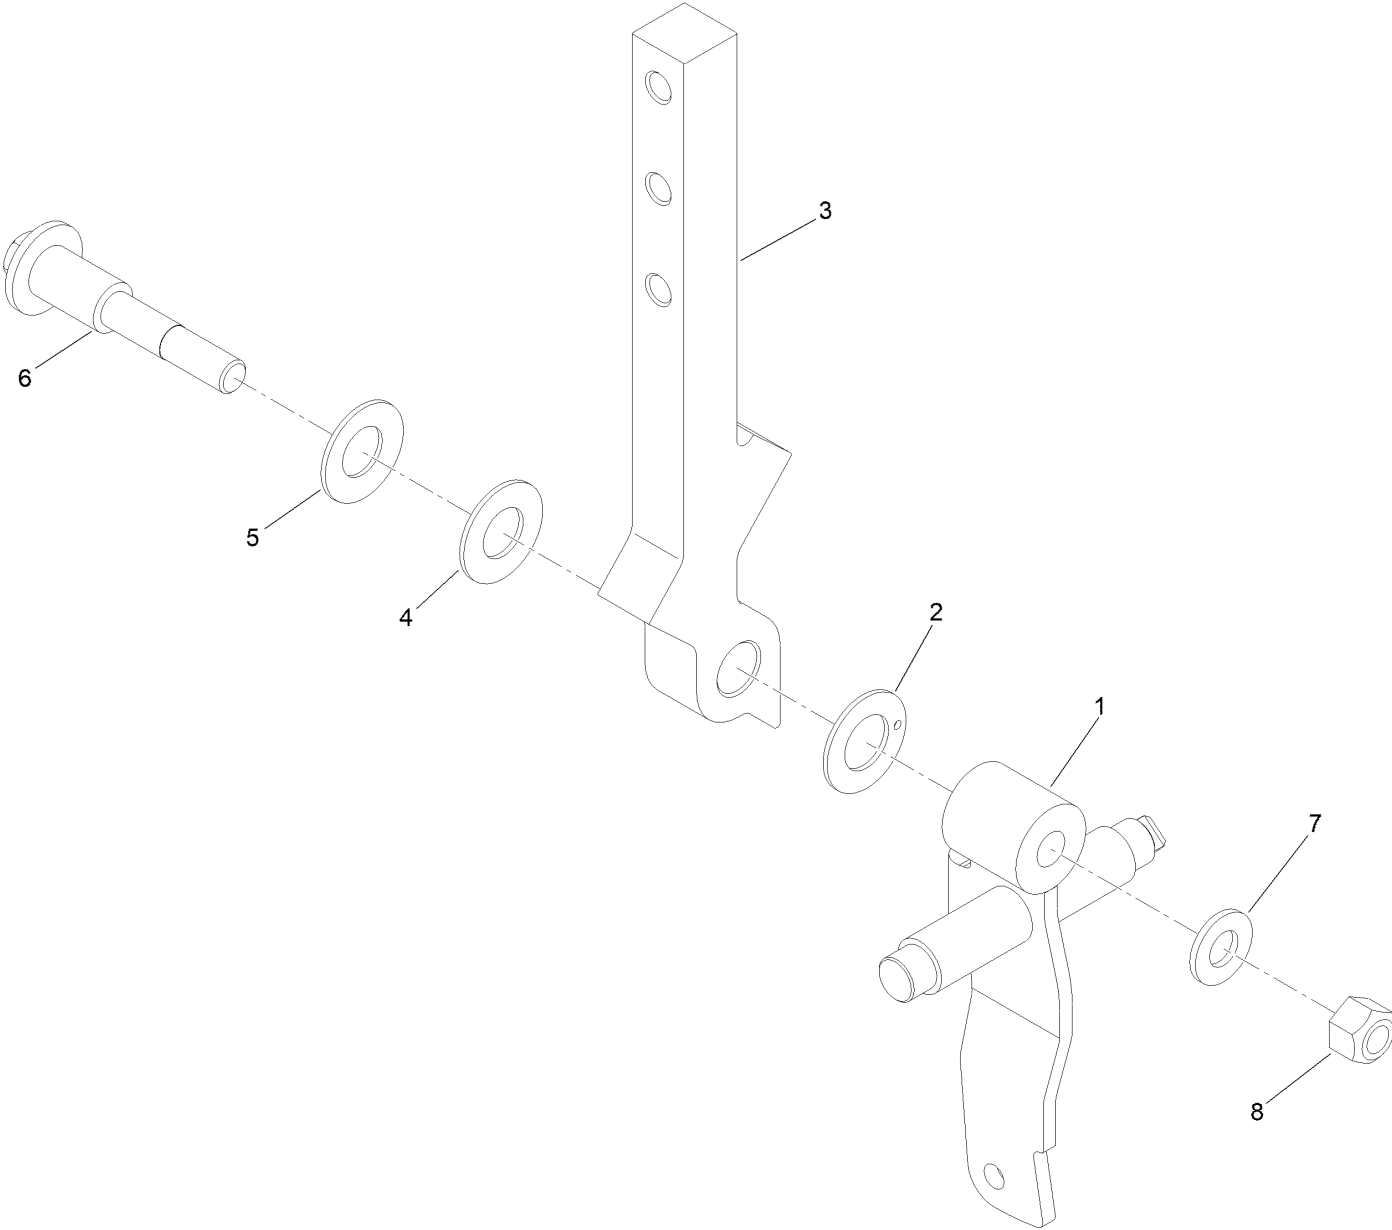


Right Motion Control Assembly No. 145-1325 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-1323	1	RH Ctrl Arm ASM
2	126-7296	1	Washer-Friction
3	147-2389	1	Arm-Control
4	117-1240	1	Washer

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	119-8925	1	Washer-Belleville
6	117-1198	1	Bolt-Pivot
7	3256-24	1	Washer-Plain
8	32152-2	1	Nut-Lock, Cone

Left Motion Control Assembly No. 145-1326

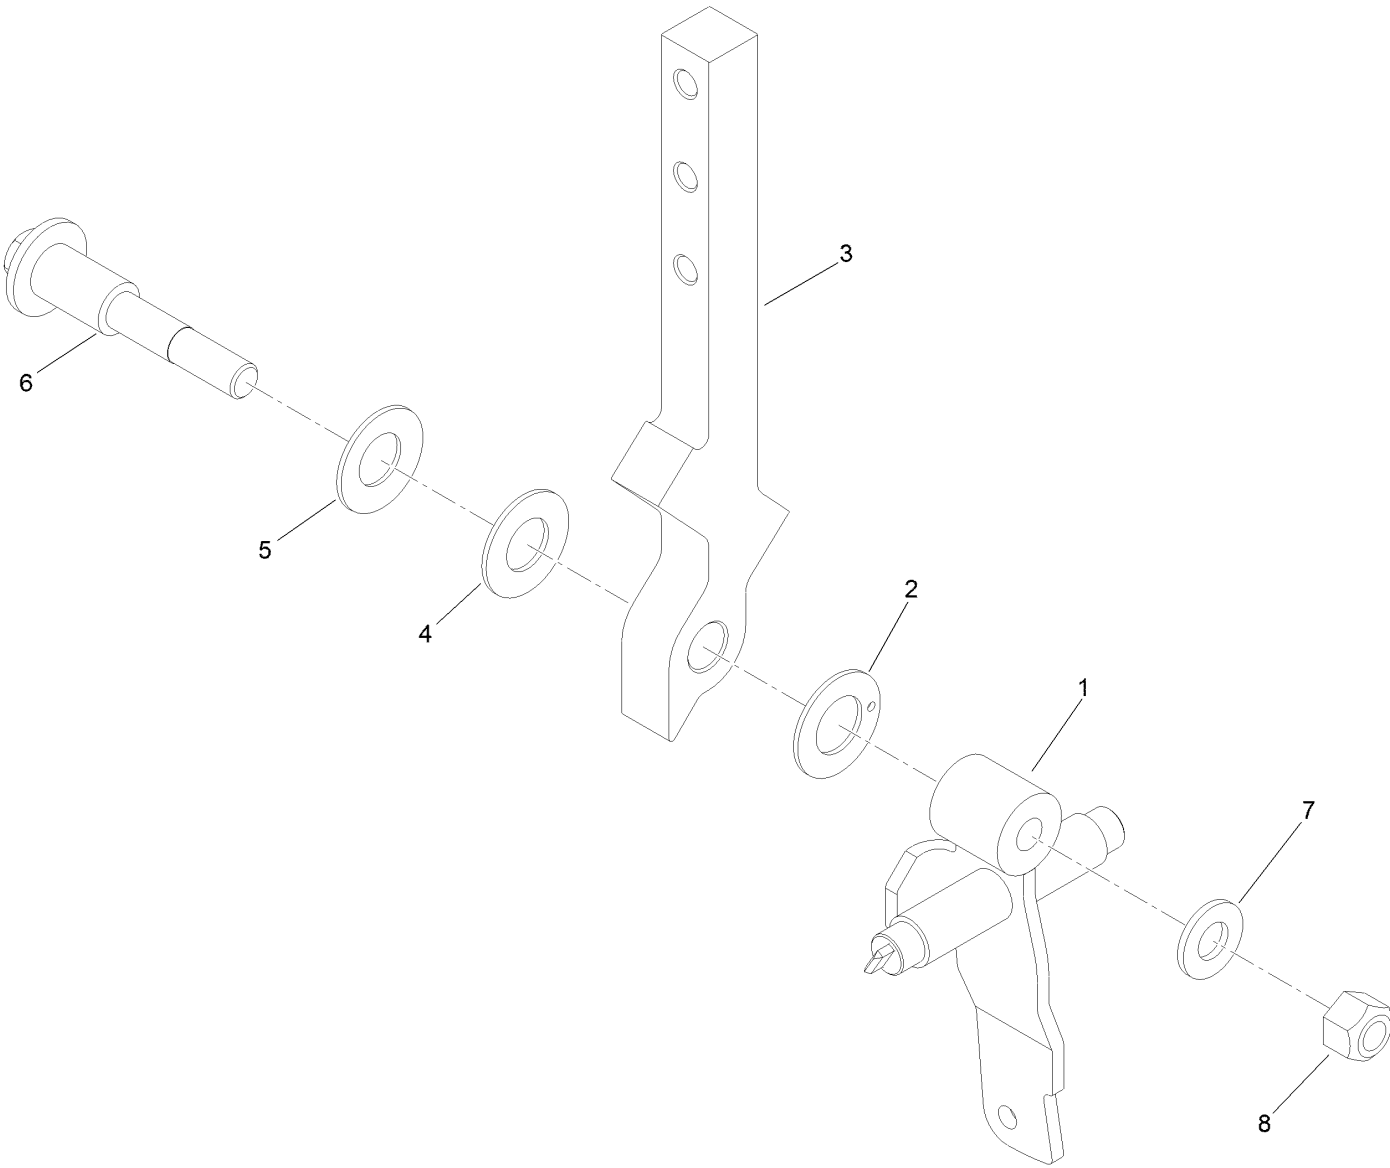


Left Motion Control Assembly No. 145-1326 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-1320	1	LH Ctrl Arm ASM
2	126-7296	1	Washer-Friction
3	147-2389	1	Arm-Control
4	117-1240	1	Washer

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	119-8925	1	Washer-Belleville
6	117-1198	1	Bolt-Pivot
7	3256-24	1	Washer-Plain
8	32152-2	1	Nut-Lock, Cone

Front Caster Wheel Assembly

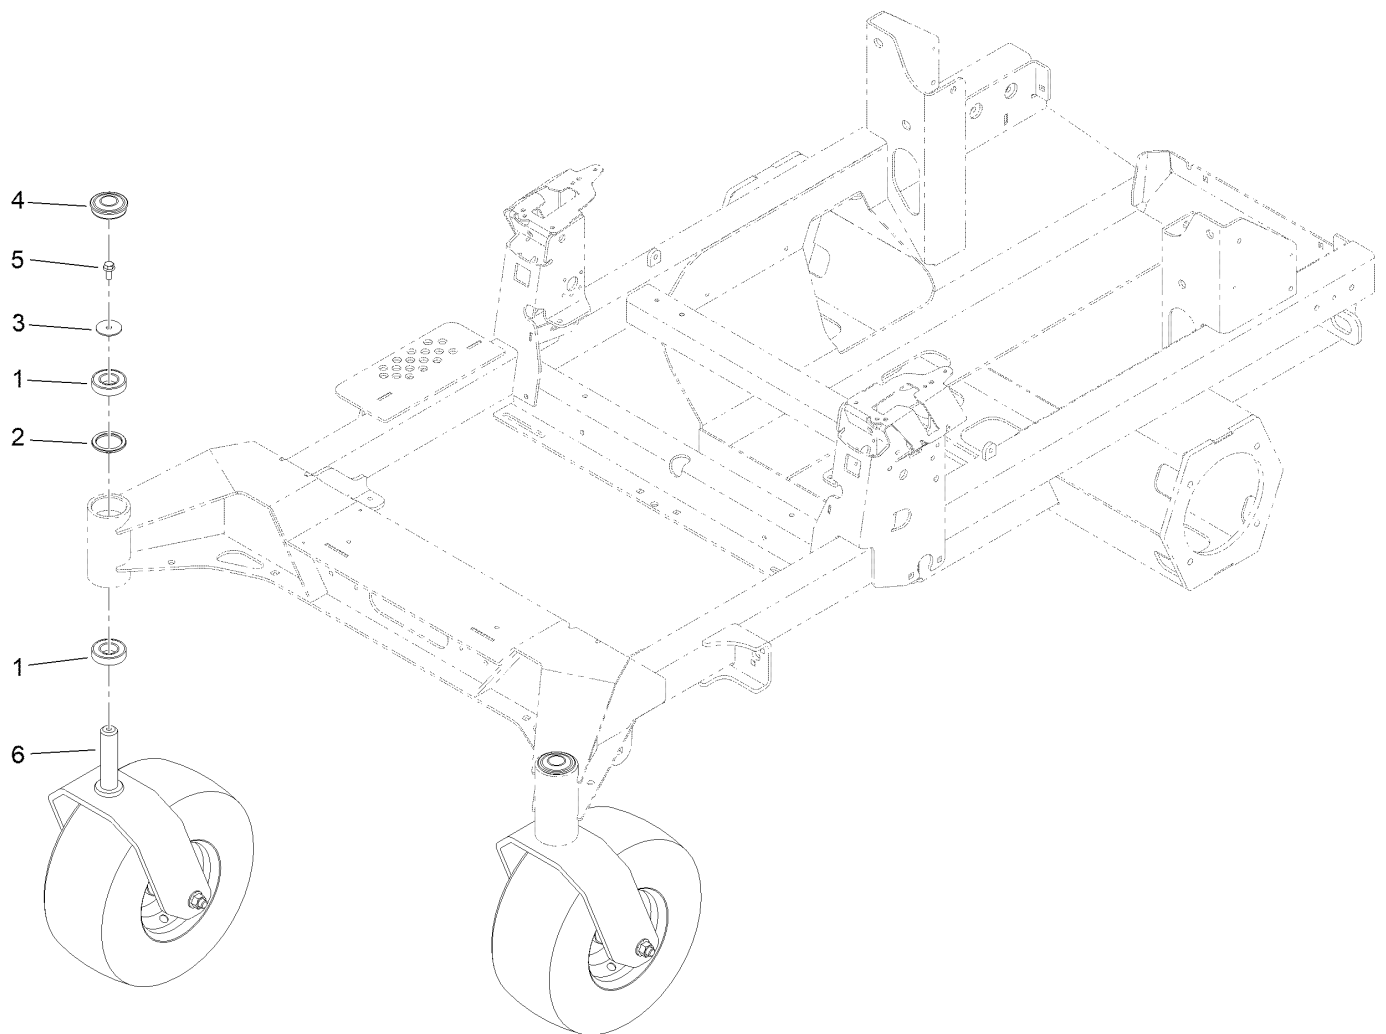


Front Caster Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	109-3678	4	Bearing-Ball	4	144-0375	2	Cap-Grease
2	145-3660	2	Spacer-Bearing	5	100-1668	2	Screw-HHF
3	3256-68	2	Washer-Flat	6		2	Front Caster W/ Fork ASM ●

● Not serviced separately

Caster and Wheel Assembly


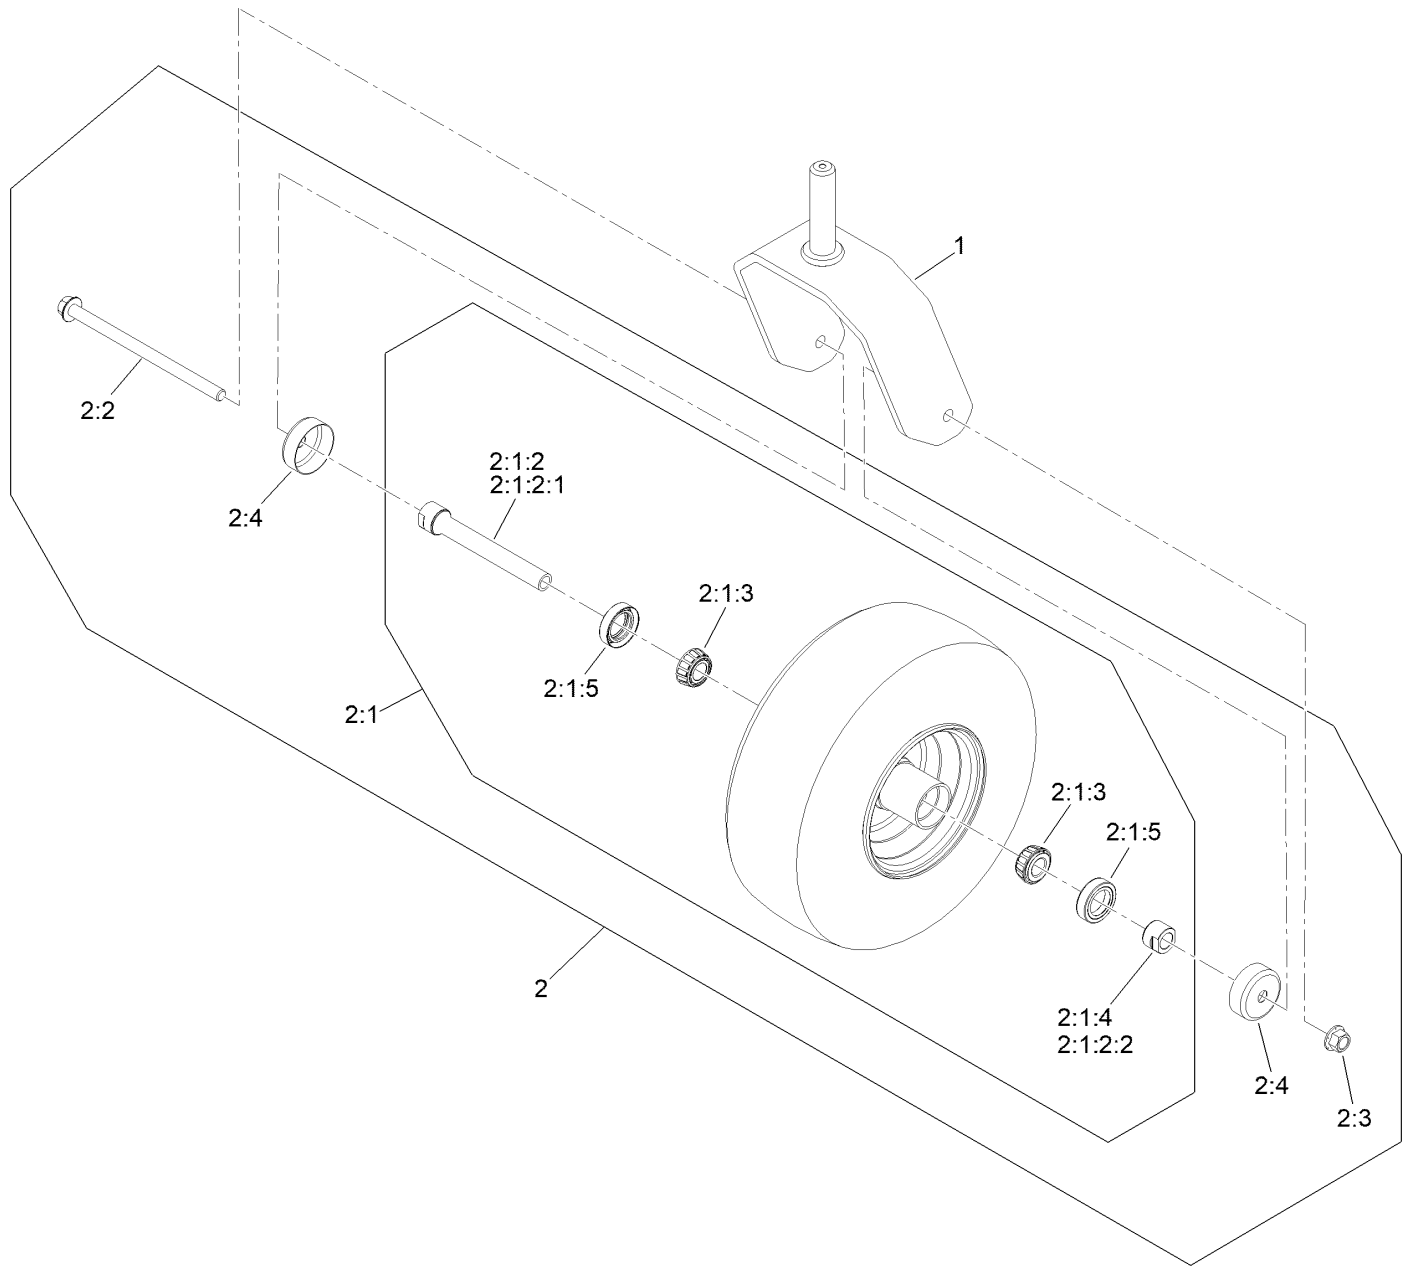


Caster and Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-7827-01	1	Fork-Caster	2:1:3	1-633585	2	Bearing-Cone, Taper
2	140-4896	1	Semi Pneumatic ASM	2:1:4	103-3051	1	Spacer-Nut
			13X6.50-6	2:1:5	103-0063	2	Seal-Caster
2:1		1	Wheel And Bearings ASM ●	2:2	126-5389	1	Screw-HHF
2:1:2	126-7796	1	Caster Axle ASM	2:3	99-5107	1	Nut-HF Nylock
2:1:2:1	126-5220	1	Axle-Caster	2:4	103-2768	2	Guard-Seal
2:1:2:2	103-3051	1	Spacer-Nut				

● Not serviced separately

Rear Wheel Assembly

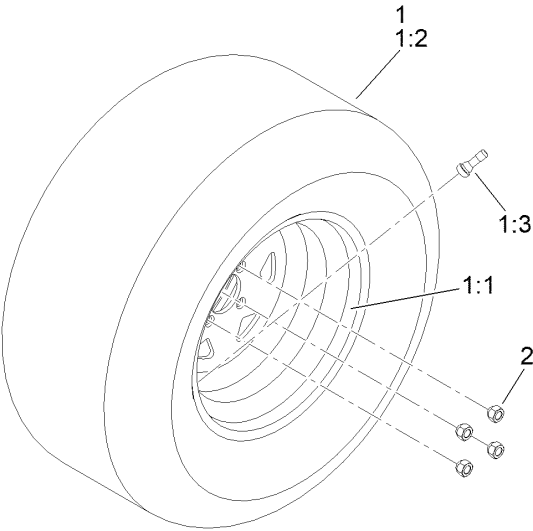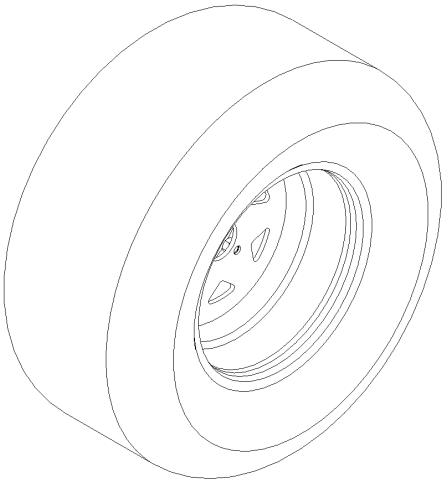


Rear Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-6630	2	Wheel And Tire ASM
1:1	145-1258	1	Wheel
1:2	140-7975	1	Tire

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1:3	232-27	1	Stem-Valve
2	242-35	8	Nut-Wheel


Electrical and Wire Harness Assembly

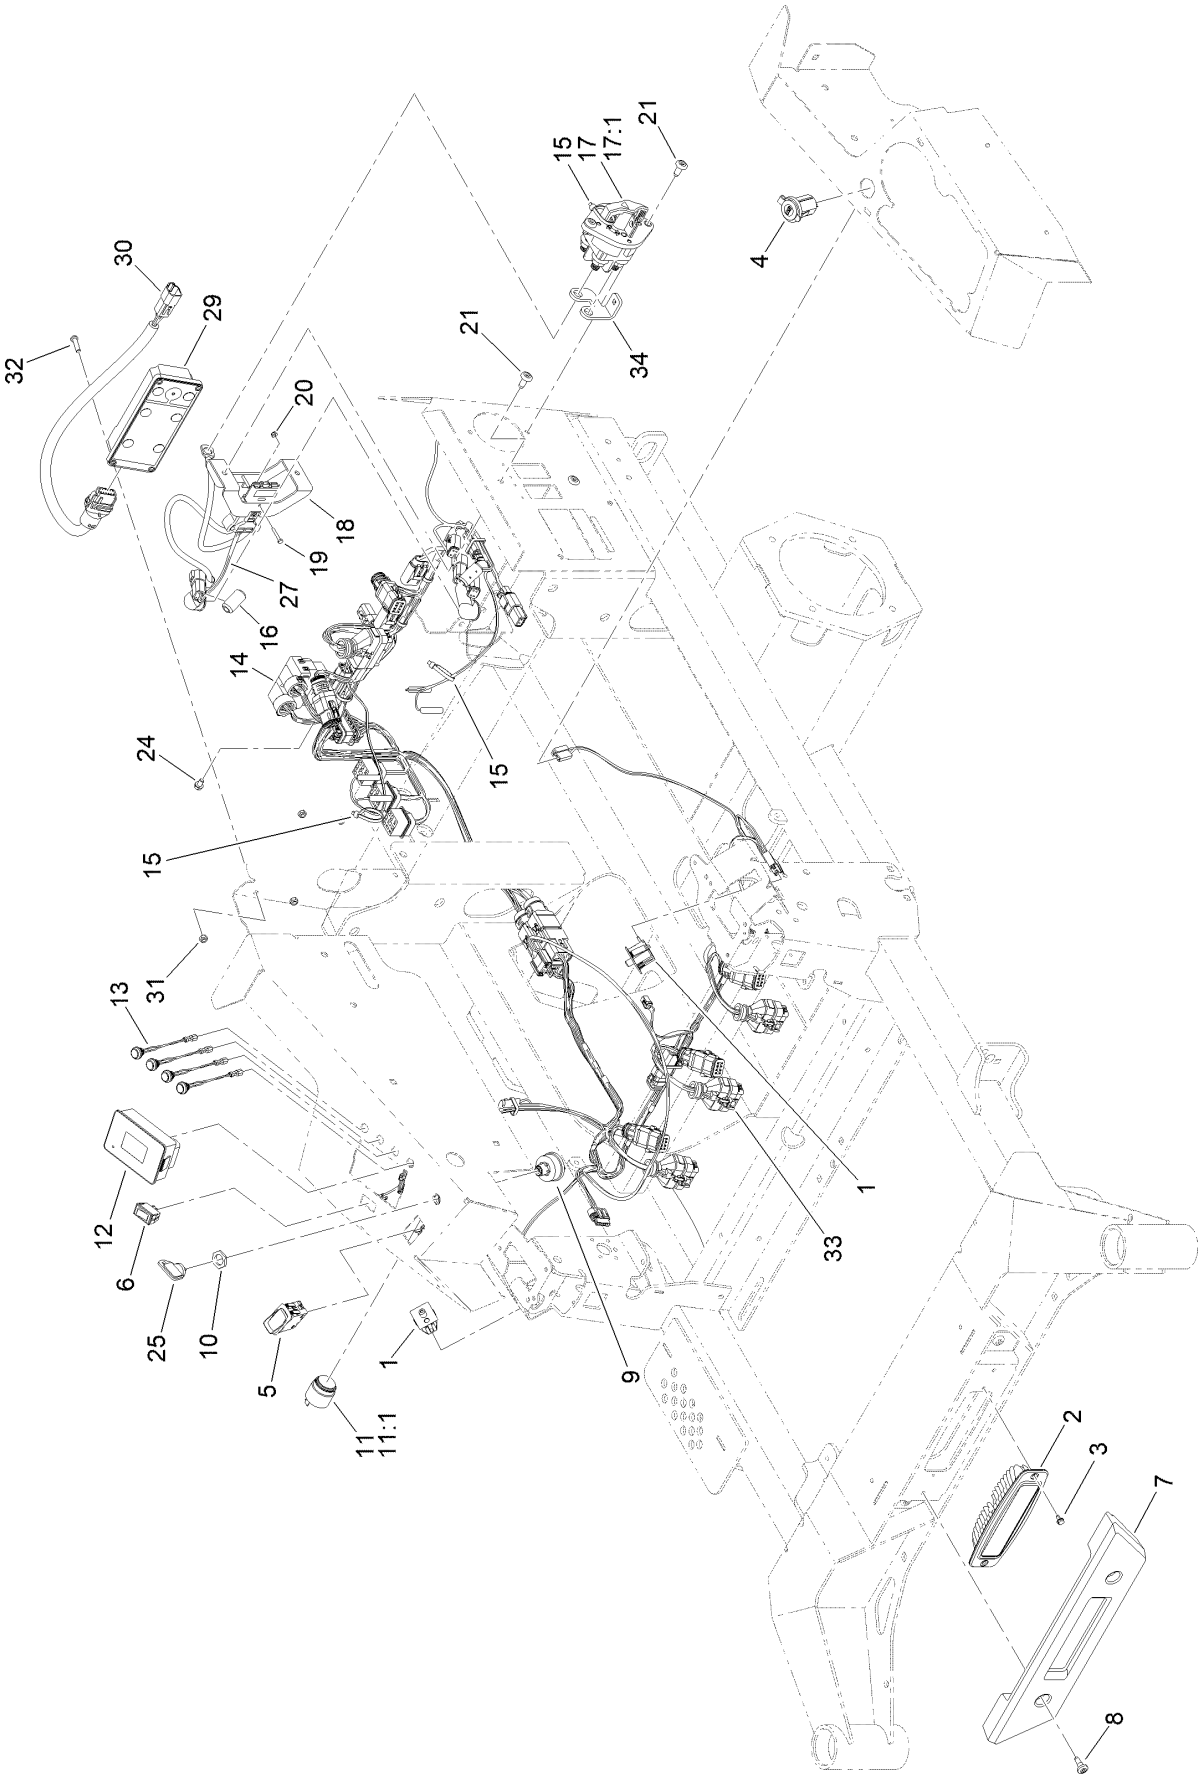

Electrical and Wire Harness Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-3520	2	Switch-Plunger, On-(On)	16	139-7720	1	Ferrite, Snap-On
2	139-8089	1	Light - Flush Mount	17	122-0603	1	Switch-Disconnect
3	104-2065	2	Screw-HWH	17:1	33006-00	1	Nut-HF
4	140-7955	1	Port-Power, USB	18	145-3597-03	1	Bracket-Charger, Dual
5	139-6368	1	Switch-Rocker, On-None-On	19	32105-9	1	Screw-HH
6	92-8875	1	Switch-Rocker	20	3296-9	1	Nut-Hex
7	140-4993	1	Bumper-Front	21	138-9753	4	Screw
8	135-2015	2	Screw-Shoulder	24	99-8445	1	Screw-HWH
9	139-7716	1	Switch-Key, Spst	25	63-8360	1	Key-Ignition
10	101884	1	Nut	27	145-4800	1	Harness-Wire, Charger Port
11	80-9330	1	Audio Alarm ASM	29	139-8189	1	Controller
11:1	104-5107	1	Nut-Plastic, Knurled	30	147-0250	1	Harness-Wire
12	122-1201	1	Module-Display	31	33023-00	4	Nut-Lock
13	136-9678	4	Cable Assy-Pushbutton	32	112-9356	4	Screw-HSBH
14	144-2673	1	Harness-Wire, Main	33	145-4807	1	Harness-Wire, Deck
15	3290-378	3	Tie-Cable	34	147-0370	1	Busbar-2, Switch

Wire Harness Assembly No. 144-2673

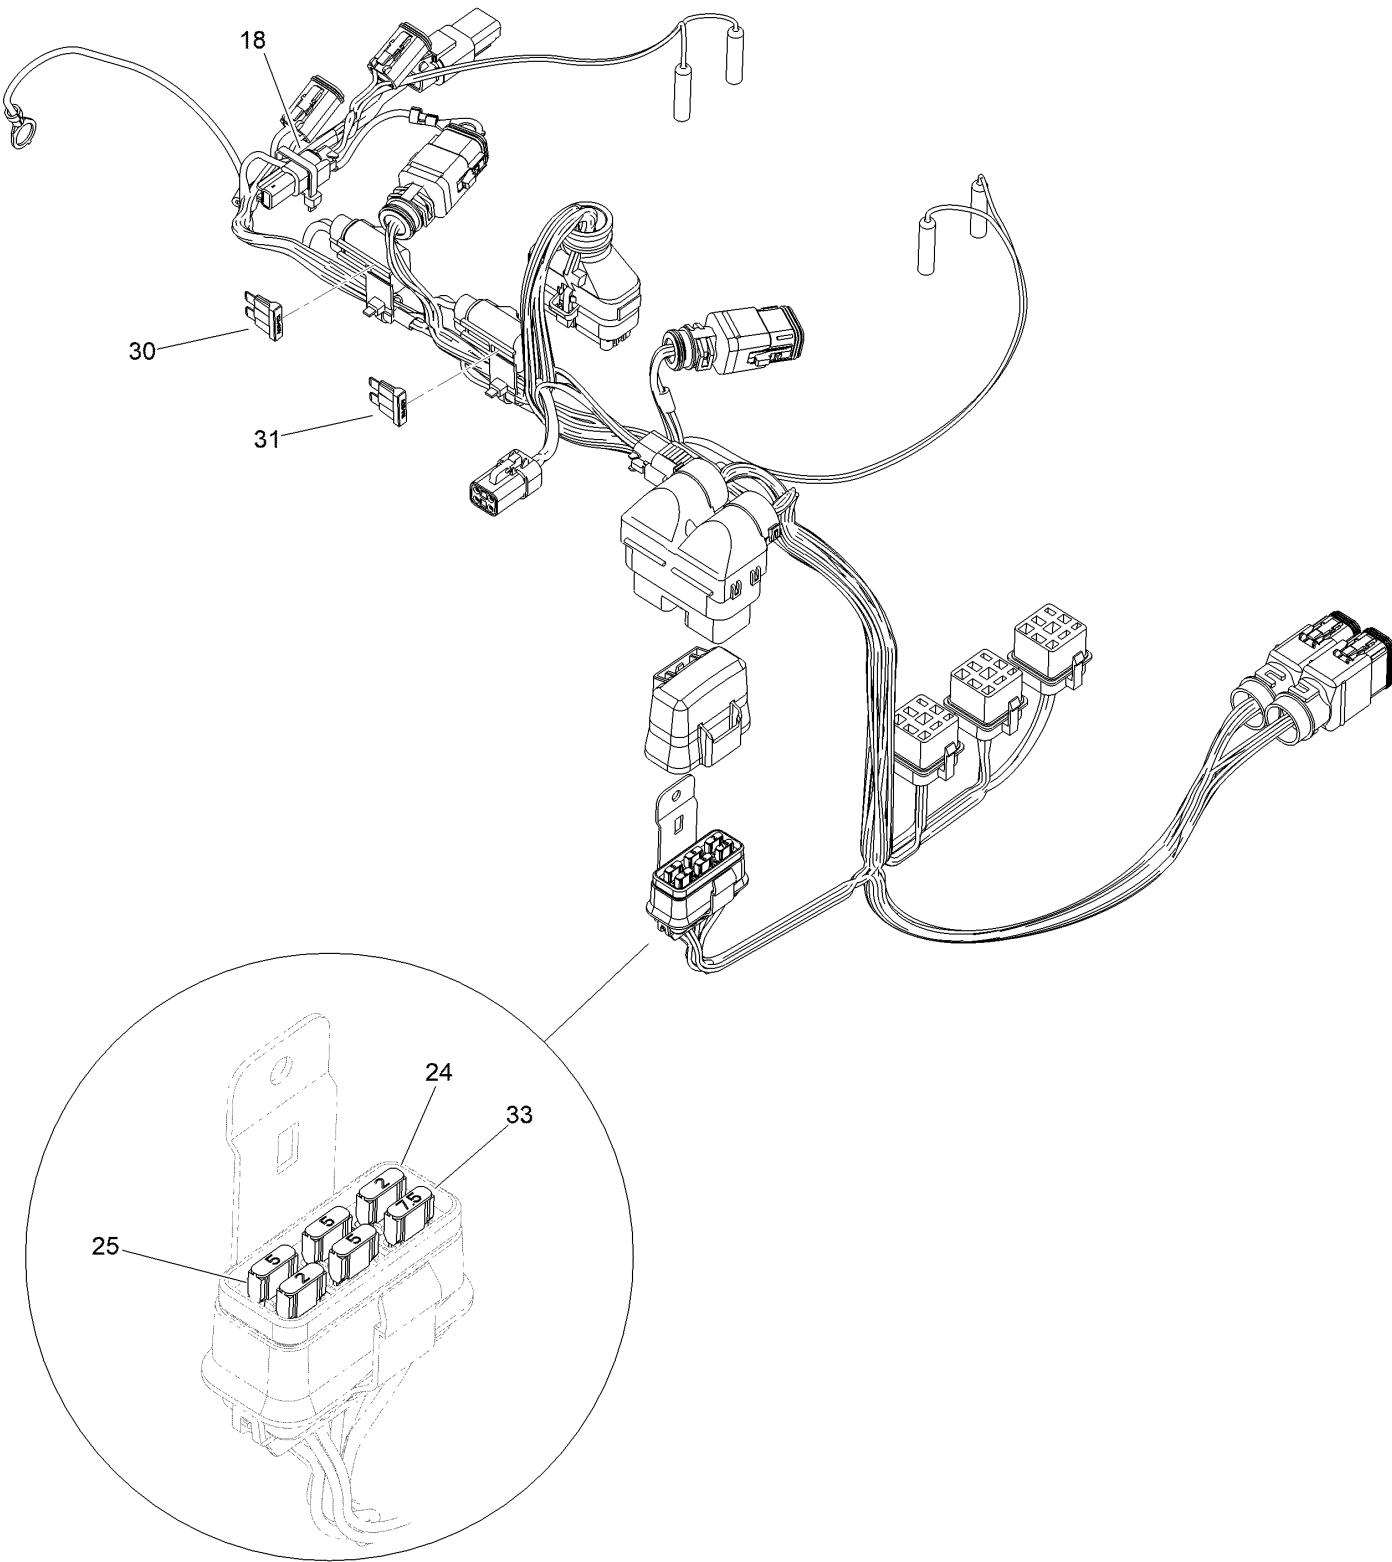


Wire Harness Assembly No. 144-2673 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
18	32180-282	1	Conn, Res, 120 Ohm
24	121-8861	2	Fuse-Mini Blade, 2 Amp
25	121-8864	3	Fuse-Mini Blade, 5 Amp

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
30	117-4724	1	Fuse-Blade, 10A
31	117-4725	1	Fuse-Blade, 15A
33	121-8865	1	Fuse-Mini Blade, 7.5 Amp


Deck Lift Assembly

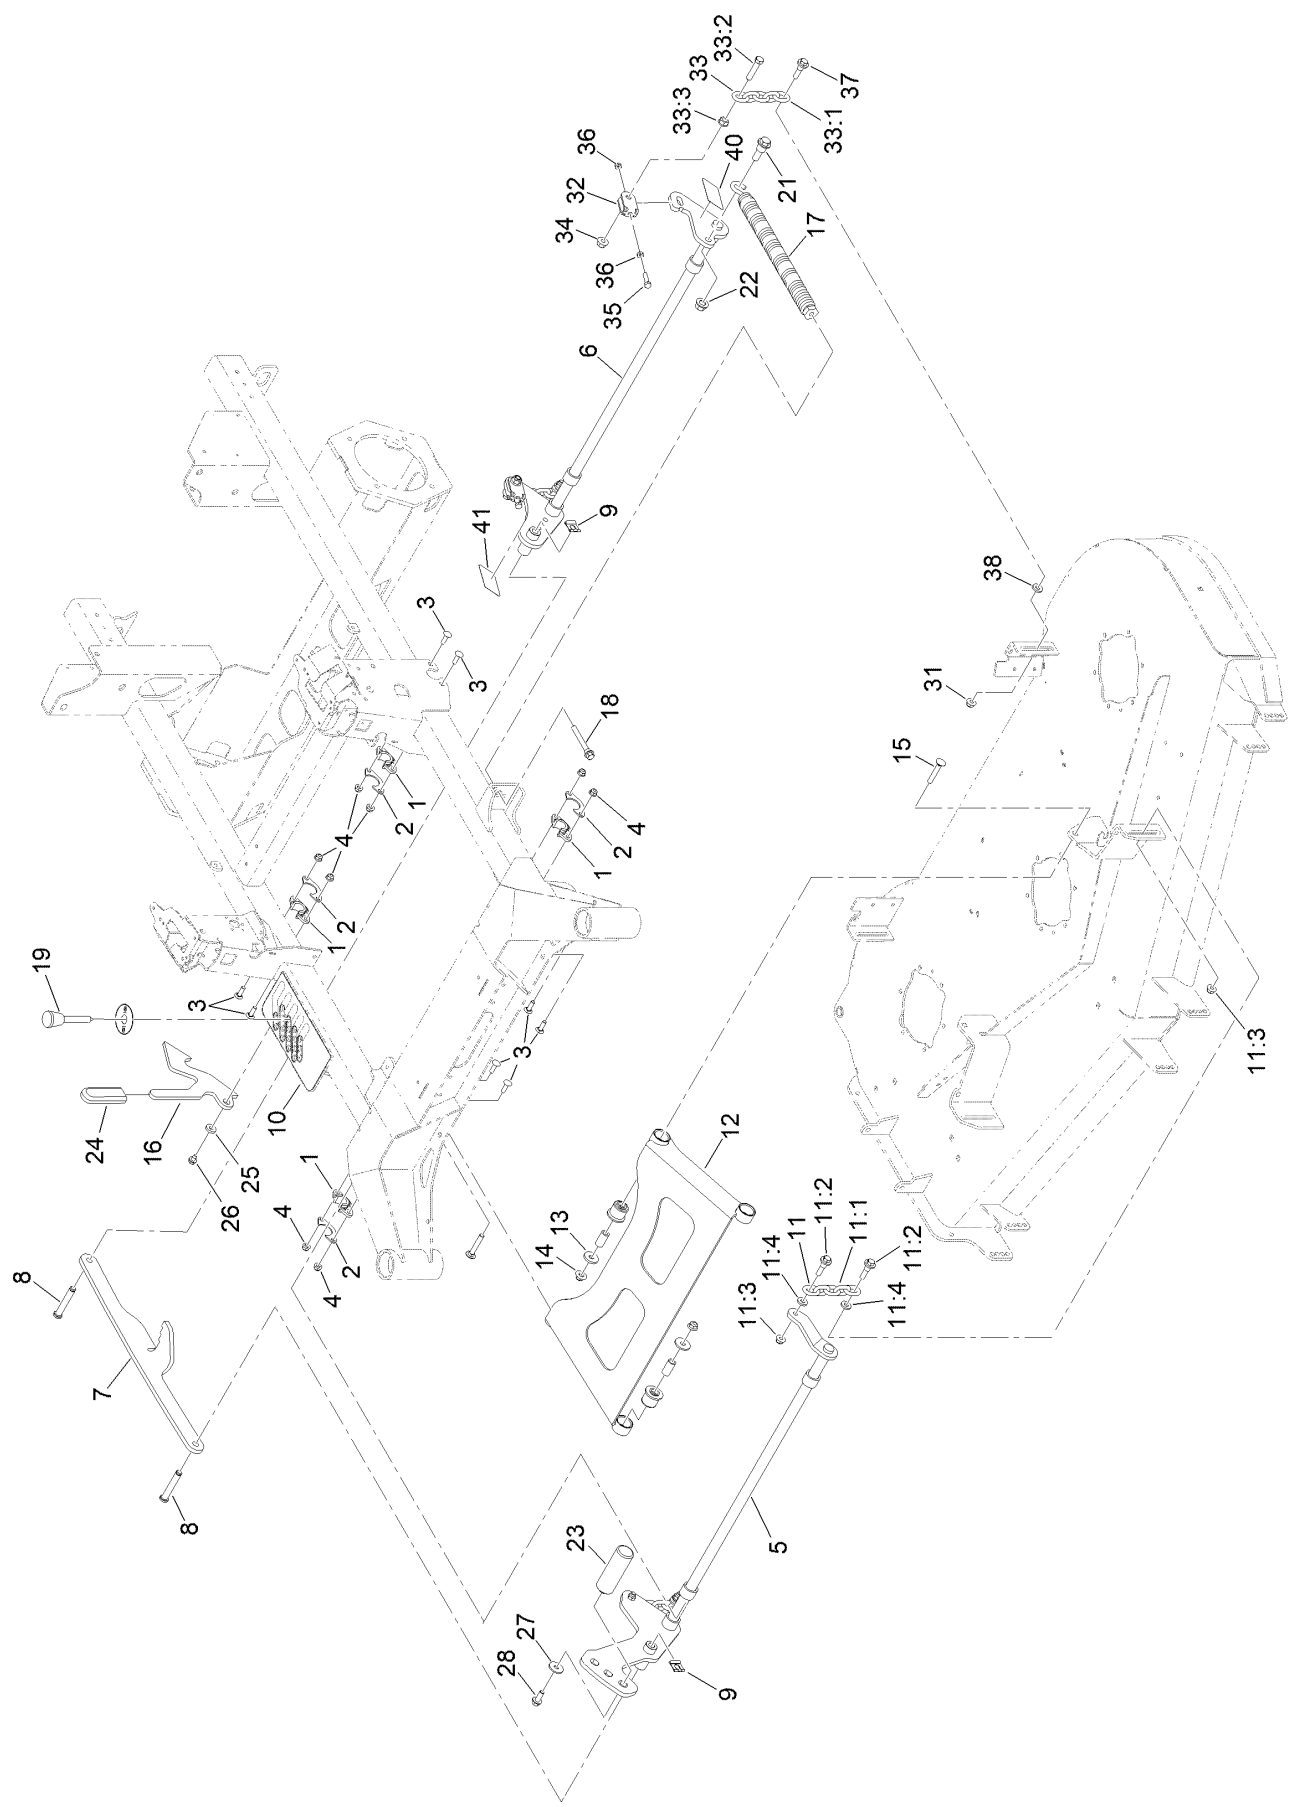

Deck Lift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	139-5872	4	Bearing-Flange	19	126-5401	1	Pin-HOC
2	116-2887	4	Gusset-Lift, Deck	21	116-0780	1	Screw-Shoulder, HHF
3	3230-22	8	Screw-CARR	22	99-5107	1	Nut-HF Nylock
4	104-8300	8	Nut-HF, NI	23	140-4959	1	Pedal-Foot Lift
5	139-8050-03	1	Front Deck Lift Shaft ASM	24	132-4749	1	Grip-Lever
6	145-1951-03	1	Adj Deck Lift Shaft ASM	25	104-7658	1	Spacer
7	126-4639-03	1	Link-HOC	26	9266934	1	Screw
8	126-9181	2	Pin-Clevis	27	2844	1	Washer
9	138-8491	2	Clip-Pin	28	3234-42	1	Screw-HHF
10	139-6699	1	Decal-HOC	31	104-8301	2	Nut-HF, NI
11	126-8877	2	Deck Chain ASM	32	109-9066	2	Yoke-Adjust, Deck
11:1	1-633447	1	Chain-Lift, Deck	33	116-0756	2	Deck Lift Chain ASM
11:2	130-0742	2	Bolt-Shoulder	33:1	1-633447	1	Chain-Lift, Deck
11:3	104-8301	2	Nut-HF, NI	33:2	109-9065	1	Screw-HH-Spcl
11:4	43-0940	2	Spacer	33:3	32128-37	1	Nut-HF
12	140-1179	1	Deck Strut W/ Bushings ASM	34	114-8417	2	Nut-HF, NI
13	1-373034	2	Washer	35	322-47	2	Screw-HH
14	109-6658	2	Nut-Flange, NI	36	3218-2	4	Nut-Hex Jam
15	3231-7	2	Screw-CARR	37	130-0742	2	Bolt-Shoulder
16	140-1249	1	Plate-Transport Lock	38	43-0940	2	Spacer
17	116-0886	1	Spring-Extension	40	145-1972	1	Decal-Rake, LH
18	92-7674	1	Bolt-Shoulder	41	145-1973	1	Decal-Rake, RH

Deck Strut Assembly No. 140-1179

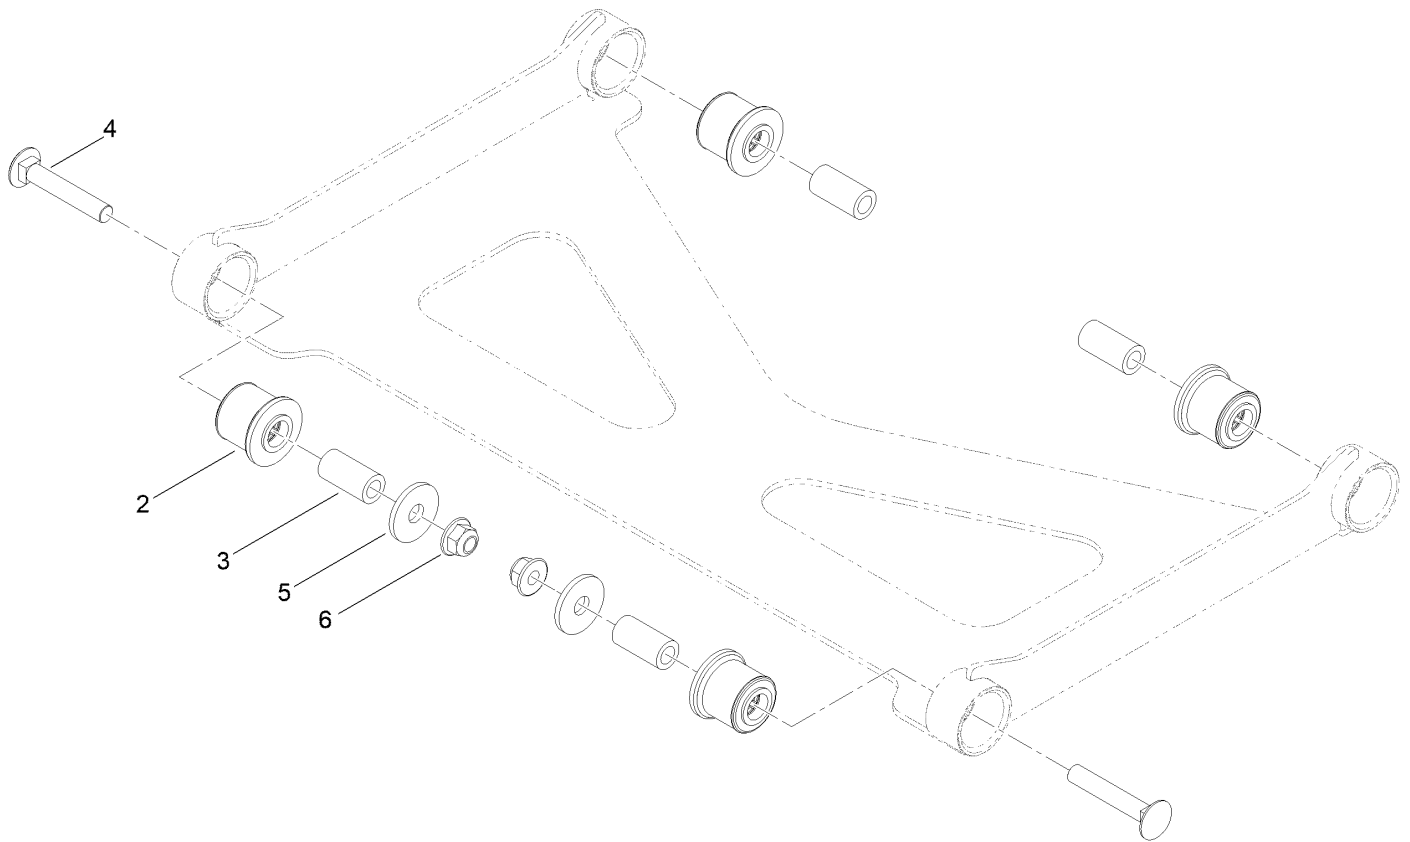


Deck Strut Assembly No. 140-1179 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	126-8360	4	Bushing-Rubber, Suspension
3	108-6544	4	Spacer

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	3231-7	2	Screw-CARR
5	2844	2	Washer
6	104-8301	2	Nut-HF, NI

Electrical Components Assembly


CONTACTOR ASSEMBLY

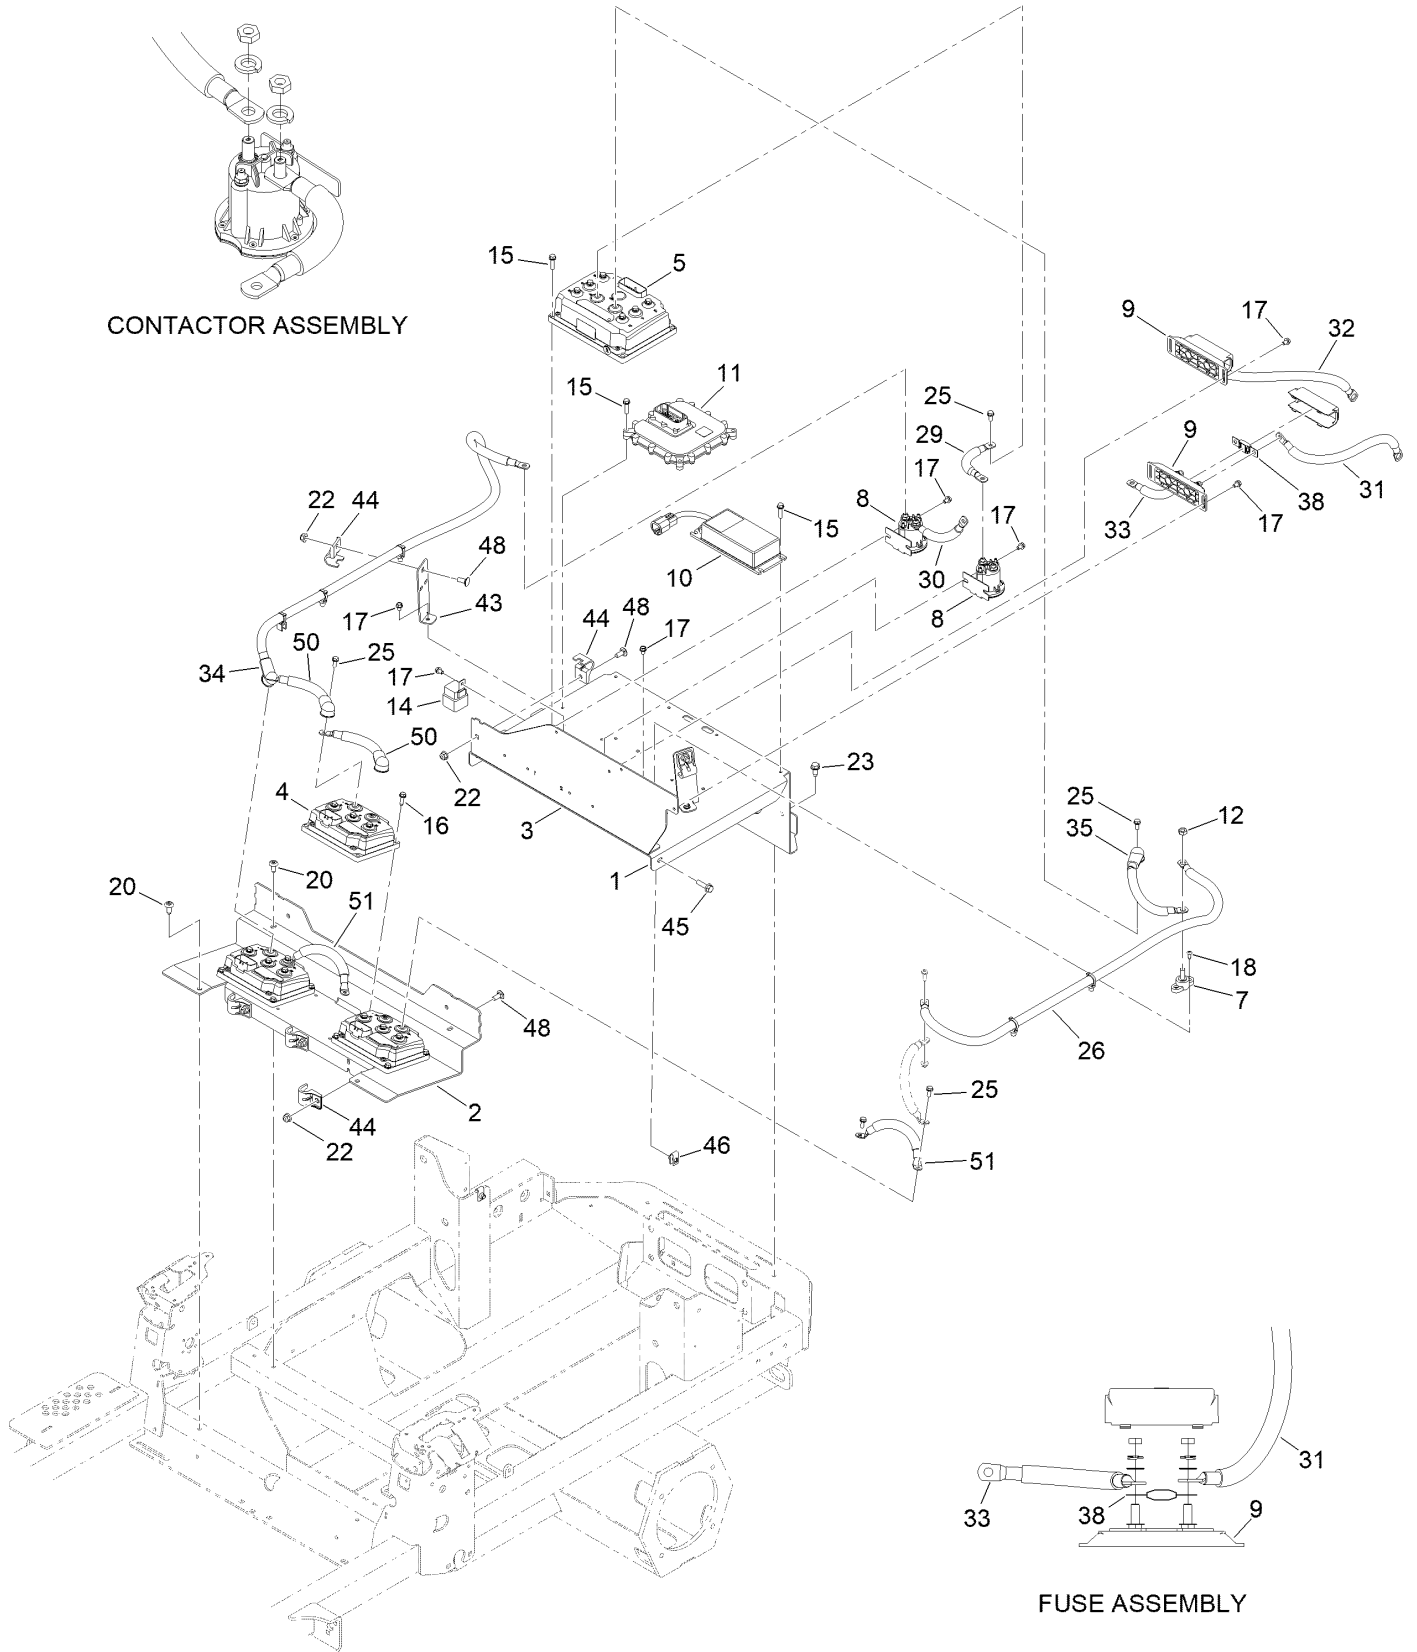

Electrical Components Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-1606-03	1	Bracket-Chassis	25	145-5782	23	Screw-Sems
2	147-1611-03	1	Plate-Controller, Deck	26	147-4567	1	Cable-Battery, Bk ASM
3	147-1607-03	1	Plate, Fuse-Mnt	29	147-4564	1	Cable-Battery, Rd ASM
4	145-7270	3	Inv/Ctrlr-48V	30	147-4563	1	Cable-Battery, Rd ASM
5	138-8984	1	Inv/Ctrlr-48V, Dual 94Arms	31	147-4561	1	Cable-Battery, Rd ASM
7	110-8823	1	Block-Junction	32	147-4562	1	Cable-Battery, Rd ASM
8	145-3542	2	Contactor-DC, 12V	33	147-4563	1	Cable-Battery, Rd ASM
9	145-4958	2	Holder-Fuse	34	147-4565	1	Cable-Battery, Rd ASM
10	144-6975	1	Converter DC-DC	35	147-4568	1	Cable-Battery, Bk ASM
11	127-2770	1	Controller	38	122-2561	2	Fuse-200A
12	3217-7	1	Nut-Hex	43	147-1610-03	2	Bracket-Cable
14	70-1480	3	Relay	44	145-6985	6	Mount-Cable
15	32144-86	12	Screw-HWHTF	45	3234-29	2	Screw-HHF
16	32144-44	12	Screw-HWH, Thread Roll	46	115-7721	2	Nut-Clip, U
17	99-8445	15	Screw-HWH	48	3230-23	6	Bolt-CARR
18	105-6849	2	Screw-Forming, Thread	50	147-0238	2	Cable-Battery, Rd ASM
20	138-9753	4	Screw	51	147-0239	2	Cable-Battery, Bk ASM
22	104-8300	6	Nut-HF, NI				
23	32144-70	2	Screw-HWHTF				


Decal Assembly

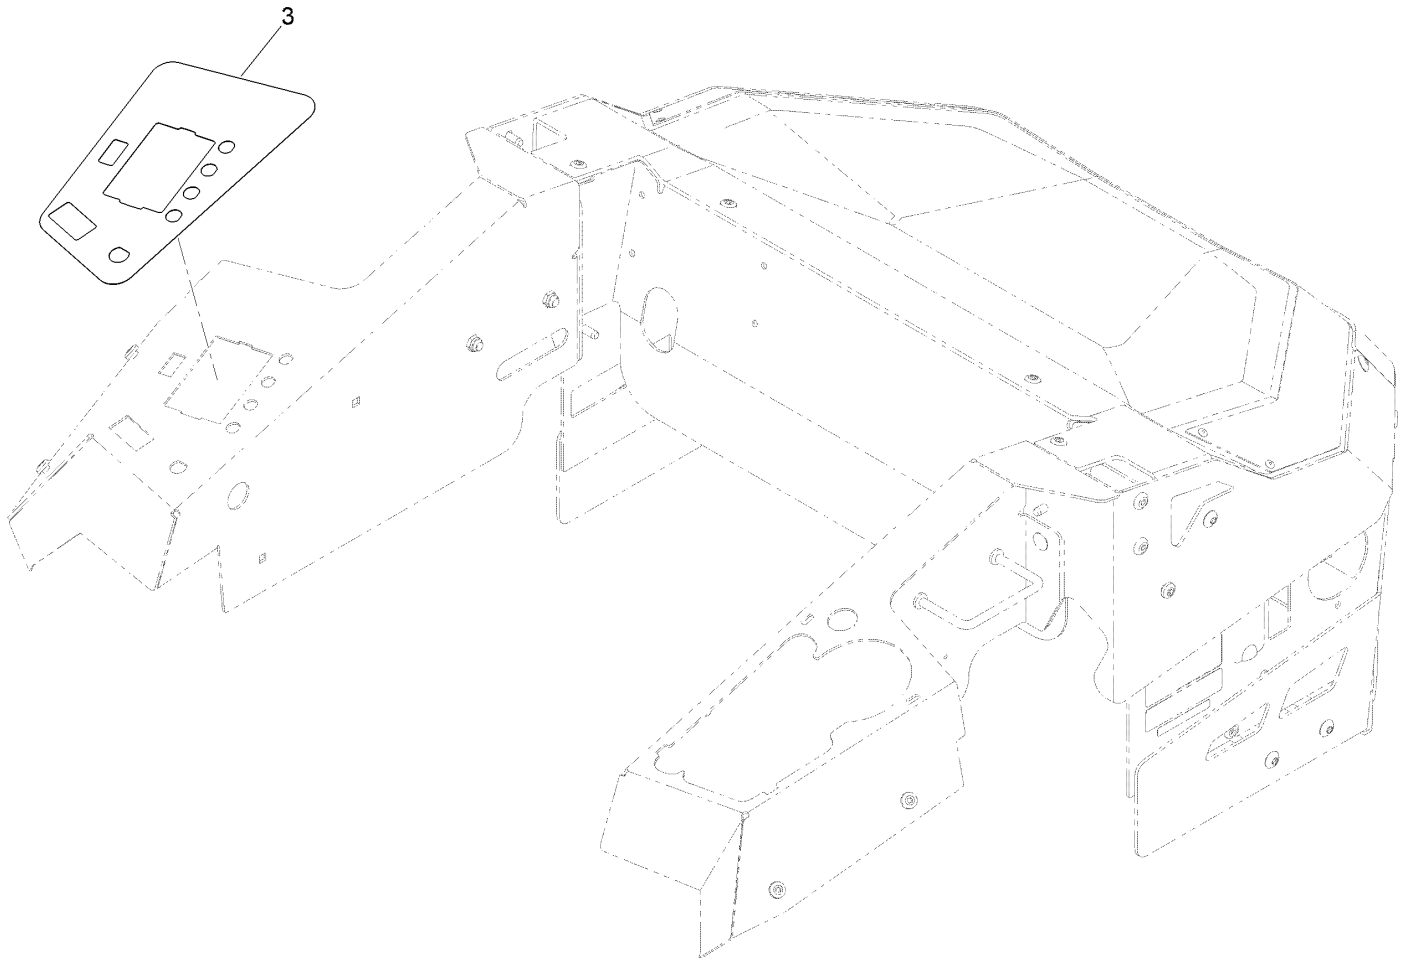

Decal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	145-1946	1	Decal-Panel, Control


Deck Assembly

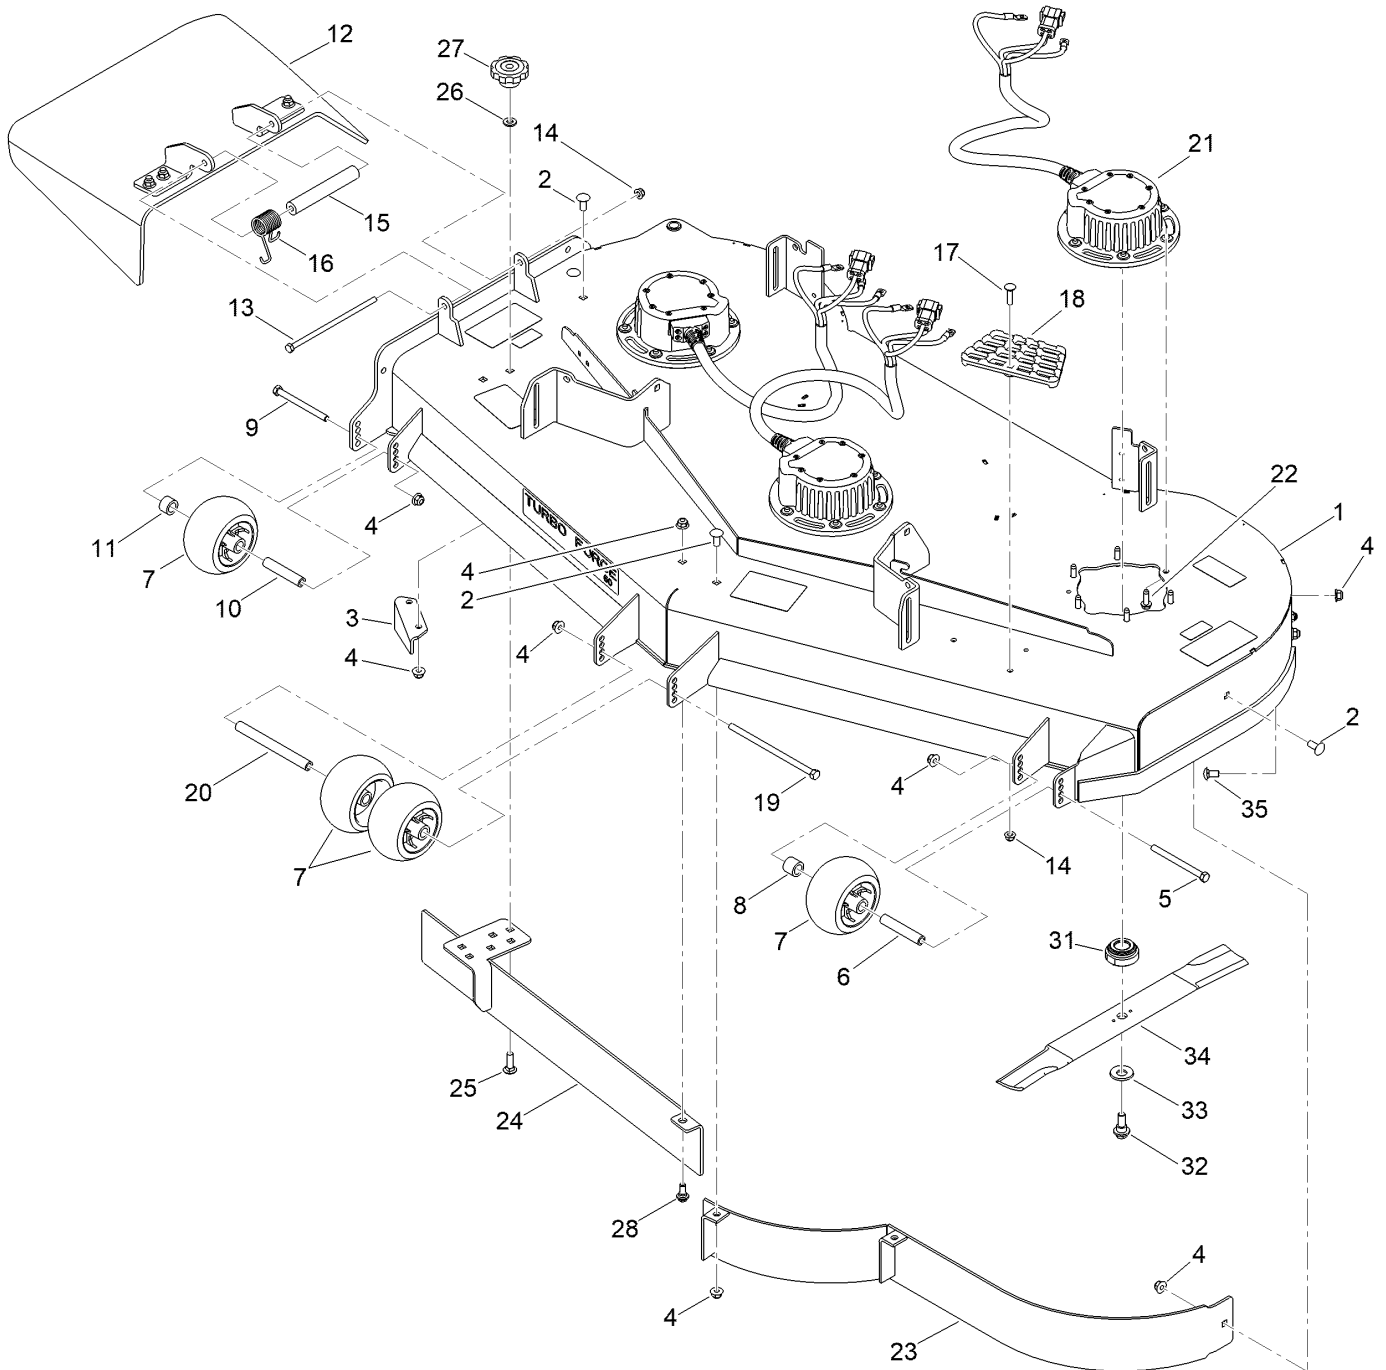

Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-7825	1	Deck ASM-60In	18	126-4781-03	1	Step-Deck
2	3231-27	5	Screw-CARR	19	108-5388	1	Screw-HH
3	107-8541-01	1	Baffle-Discharge	20	98-5967	1	Spacer-Wheel
4	104-8301	12	Nut-HF, NI	21	147-1689	1	Motor/Gen
5	323-23	1	Screw-HH	22	701243	18	Screw-Thd Roll, HWH
6	98-7912	1	Tube-Spanner	23	114-5842-01	1	Baffle
7	1-603299	4	Roller-Scalp, Anti	24	145-3636-01	1	Baffle-Turbo Force
8	98-7913	1	Tube-Spacer	25	3231-25	1	Bolt-CARR
9	323-17	1	Screw-HH	26	100-4852	1	Washer-Hardened
10	133-2129	1	Tube-Shafting	27	109-1092	1	Knob
11	133-2128	1	Tube-Spacer	28	94-7582	1	Bolt-Shoulder
12	147-1642	1	Rubber Deflector ASM	31	145-3439	3	Retainer-Blade
13	322-50	1	Screw-HH	32	145-3499	3	Screw-Shoulder, HWH
14	104-8300	2	Nut-HF, NI	33	125-1736	3	Washer-Belleville
15	105-4622	1	Spacer	34	145-3505-03	3	Blade-20.5In, Med Sail
16	108-4052	1	Spring-Torsion	35	3231-21	3	Screw-CARR
17	3230-3	1	Screw-CARR				

Deck Decal Assembly No. 147-7825

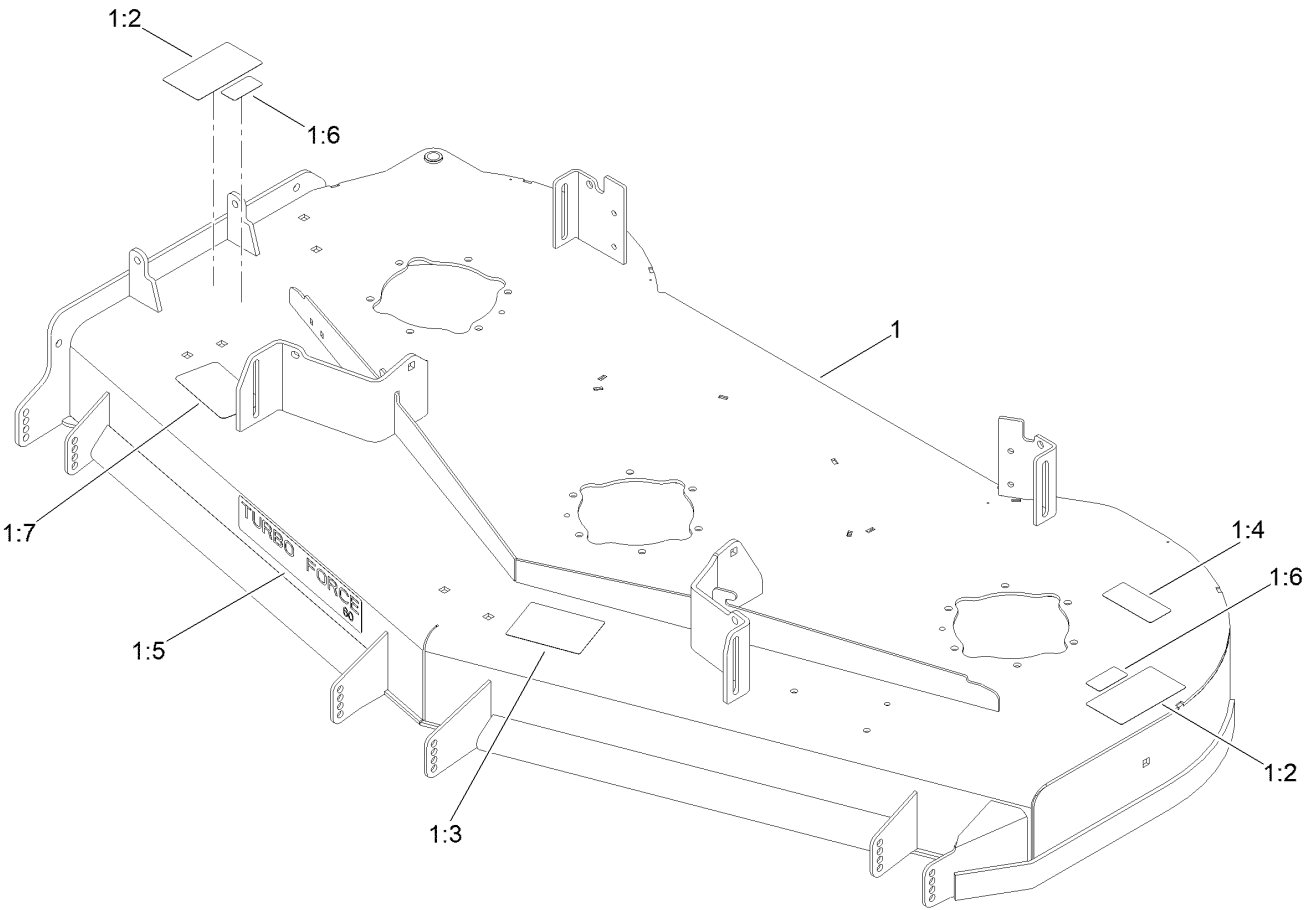


Deck Decal Assembly No. 147-7825 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Deck ASM W/Decals 60 ●	1:5	107-1619	1	Decal
1:2	117-3848	2	Decal-Danger	1:6	137-8127	2	Decal-No Spray
1:3	127-0326	1	Decal-Scalp, Anti	1:7	145-8411	1	Decal-Adjustable Baffle
1:4	147-0288	1	Decal-Danger				

● Not serviced separately

Deflector Assembly No. 147-1642

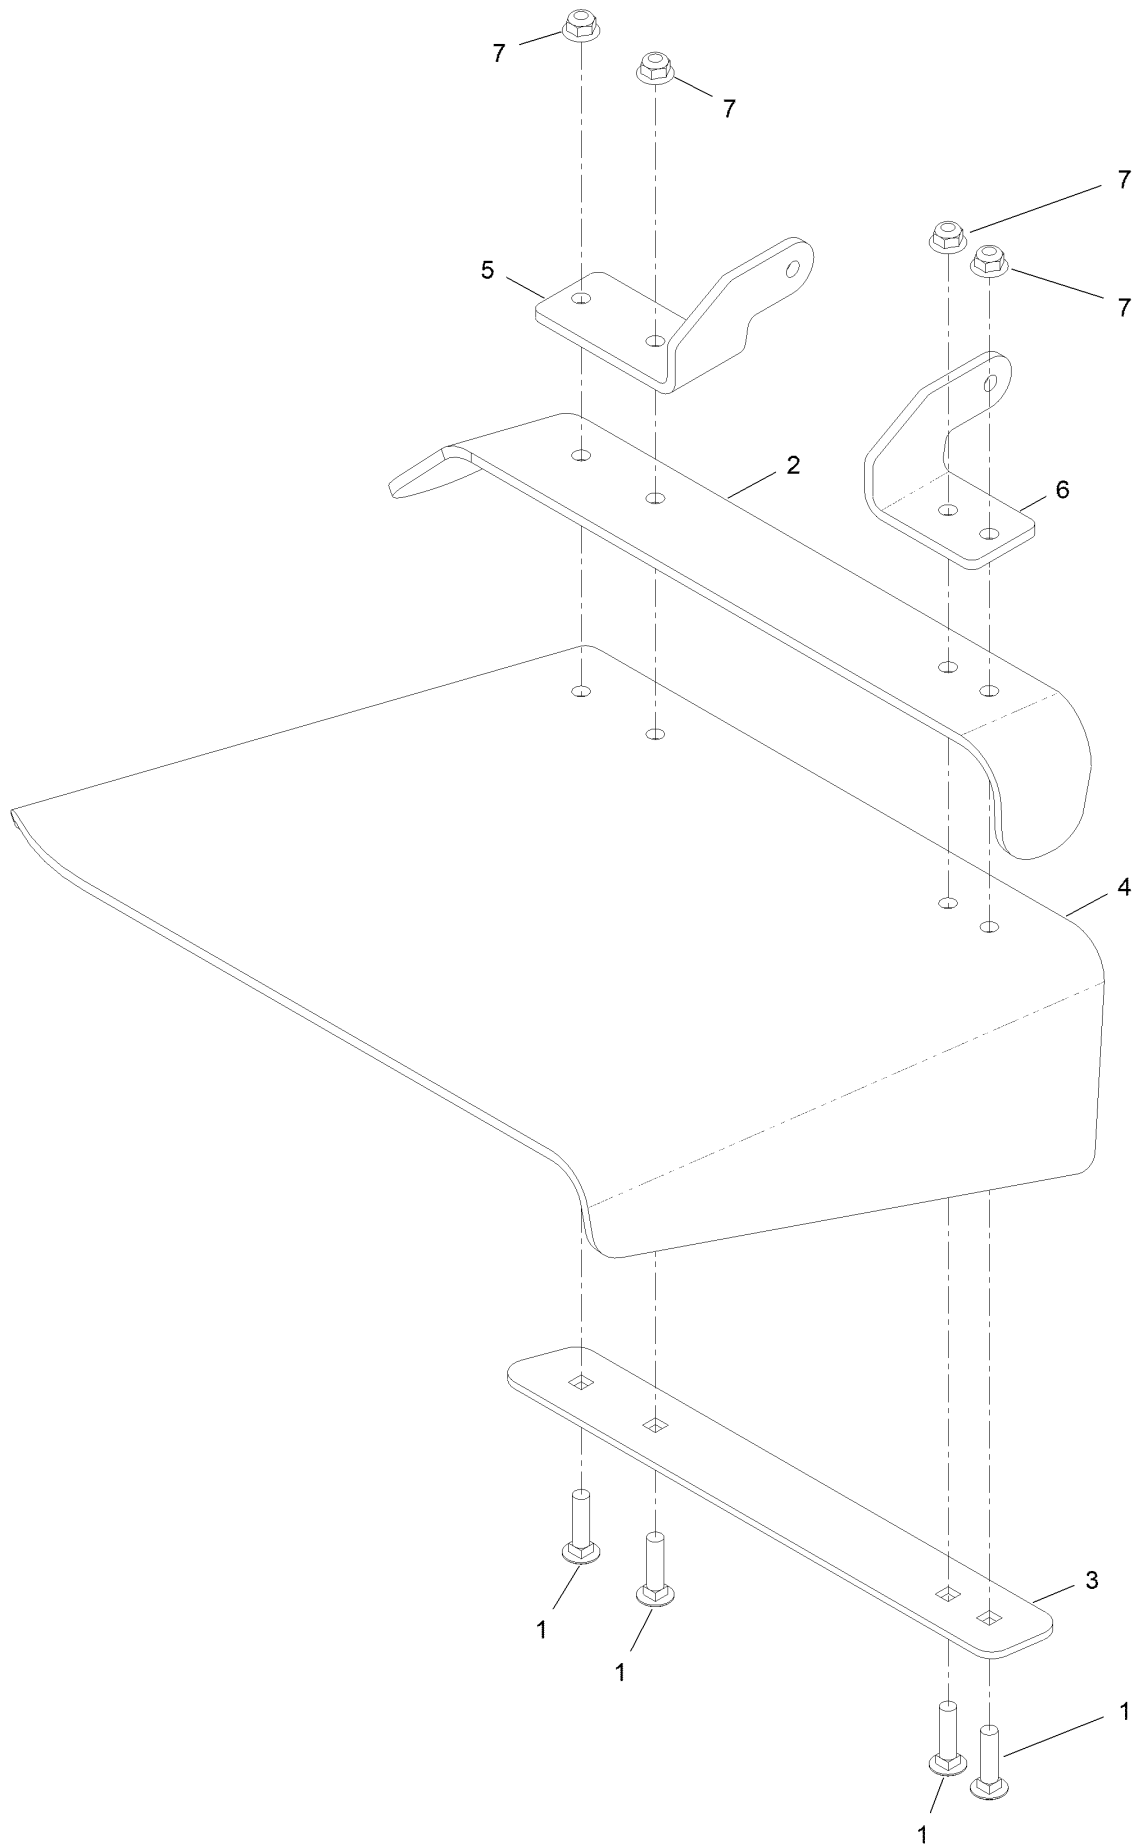

Deflector Assembly No. 147-1642 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	139-8114	1	Deflector-Deck, Rubber

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	147-0386-01	1	Plate-Hinge, Rear
6	147-0387-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-HF, NI

Attachments and Accessories

For 18760 — 60in Z Master Revolution Series Riding Mower

Product Name	Model/Part
Anti-Scalp Kit (Trim Side).....	108-4140
Jack Kit	127-6666
Recycler Kit	139-6655
Trimmer Mount	144-2665
Jack Mount Kit	144-2676
Hardtop Sun Canopy	144-3719
Oil-Gear, Synthetic, Quart.....	144-6880
Blade-20.5in, Med Sail.....	145-3505-03
Blade-20.5in, Recycler	145-3508-03
Handle Extension Kit	145-3615
Blade-20.5in, High Sail	147-0253-03
Blade-20.5in, Atomic Sail.....	147-0262-03
Wiring Harness Adapter Kit.....	147-1612

Notes:

Notes:

Notes:



Count on it.