



Workman[®] 200 Spray System Heavy-Duty Workman[®] Vehicles

Model No. 41229 - 240000401 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Skid and Frame Assembly	 3	Upper Tank Drain Bulkhead Assembly	 16
Fresh Water Tank Assembly	 4	Top Mounted Suction Assembly No. 107-2800	 17
Fresh Water Tank Assembly No. 100-8438	 5	Lower Sprayer Components Assembly	 18
Tank and Cover Assembly	 6	Safety Valve Assembly No. 100-6820	 19
200 Gallon Tank Assembly No. 106-1366	 7	Control Assembly	 20
Lid Seal Assembly	 8	EVC Control Valve Assembly	 21
Lid Assembly	 9	Control Box Assembly	 23
Pump and Drive Assembly	 10	Hose Assembly	 24
Pump Assembly No. 106-5121	 11	Electrical Harness Assembly	 26
Drive Shaft Assembly No. 107-2810	 12	Center Boom Assembly	 27
Upper Sprayer Components Assembly	 13	Extension Boom Assembly	 28
Suction and Drain Assembly	 14		
Tank Drain Assembly	 15		

Part Description Abbreviations

 
Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
CARR. carriage	NI. nylon insert
DEG. degrees	PPH. phillips pan head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power take off
HF. hex flange	RH. right hand
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HS. hex	STD. standard
HSBH. hex socket button head	TAP. self tapping
HSFH. hex socket flat head	TTH. torx truss head
HSH. hex socket head	WH. wing head
HWH. hex washer head	
HWHTF. hex washer head thread forming	
HYD. hydraulic	

Footnotes

❶ Not illustrated


❷ Not serviced separately

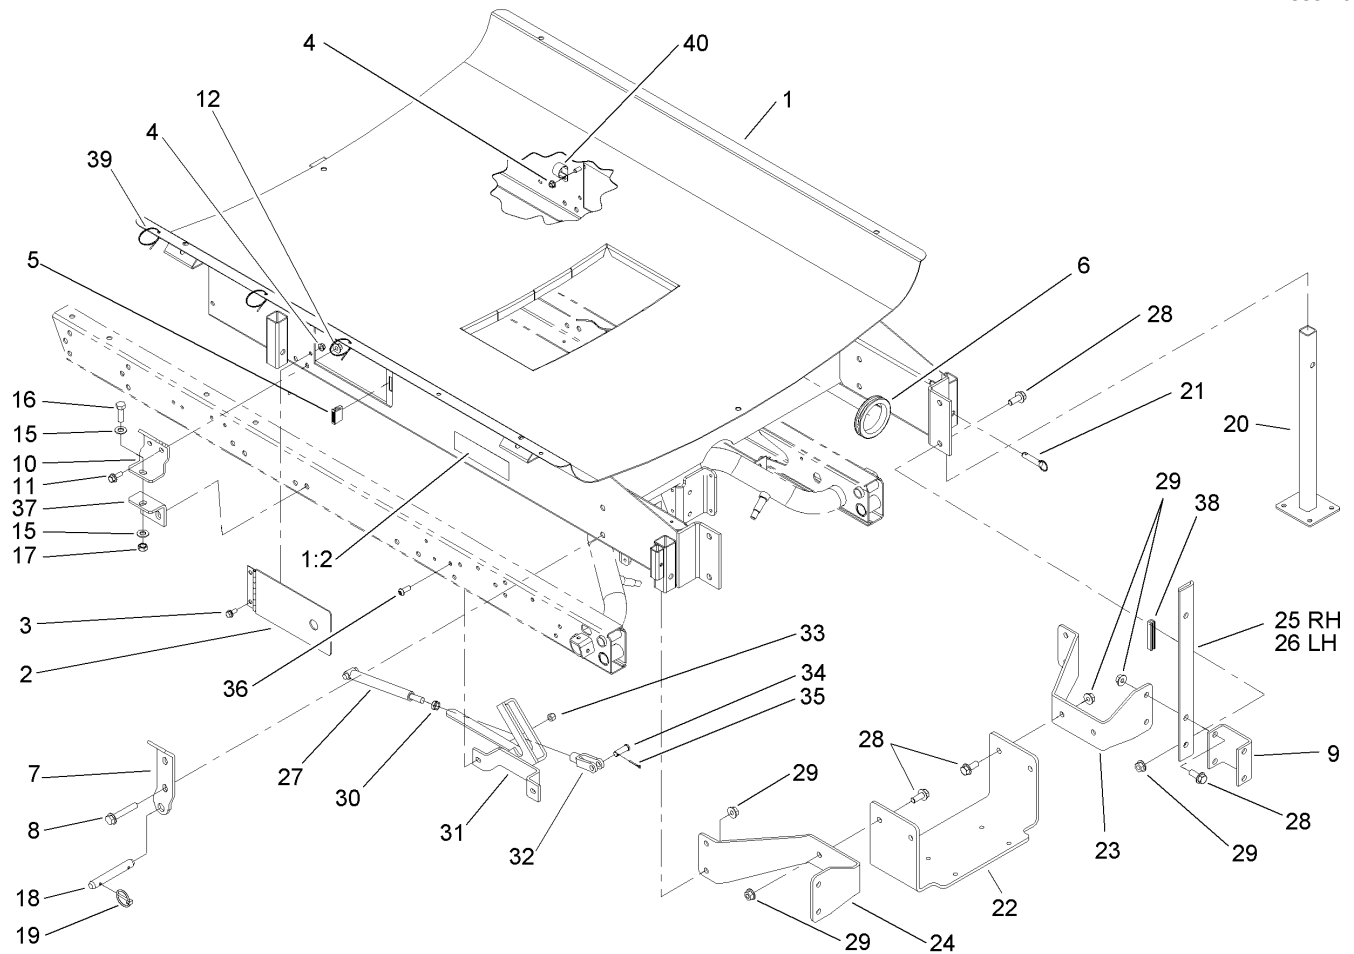

Skid and Frame Assembly


Ref	Part No.	Qty.	Description
1	106-1367	1	Skid ASM
1:2	106-1365	1	Decal-Danger
2	106-1290-03	2	Door ASM
3	3234-5	4	Screw
4	32128-20	4	Nut-HF
5	92-3700	2	Magnet-Door
6	237-102	3	Grommet
7	107-2858	2	Lug-Pivot
8	3234-40	4	Screw-HF
9	92-8533-03	2	Bracket-Mounting, Boom
10	107-2859	2	Bracket-Mount, Front
11	3234-42	4	Screw-HHF
12	32128-43	4	Nut-Flange
15	3256-26	4	Washer-Flat
16	325-6	2	Screw-HH
17	32153-5	2	Nut-Lock, Side
18	92-1233	2	Pin-Clevis
19	92-1298	4	Pin-Lynch
20	105-9482-03	4	Jack Stand ASM
21	100-4523	4	Pin-Hitch
22	106-1345-03	1	Base-Pump
23	107-2829-03	1	Bracket-Pump, RH
24	107-2828-03	1	Bracket-Pump, LH
25	106-7987-03	1	Angle-Boom Mount, RH

Ref	Part No.	Qty.	Description
26	106-7986-03	1	Angle-Boom Mount ,lh
27	106-2503	1	Prop Rod ASM
28	3234-32	12	Screw-HHF
29	32128-49	16	Nut-HHF
30	3220-5	1	Nut-Jam
31	106-2491-03	1	Strut Support Bracket ASM
32	100-7338	1	Clevis
33	3296-39	2	Nut-Lock, NI
34	104-3634	1	Pin-Clevis
35	3272-11	1	Pin-Cotter
36	3274-94	2	Screw-HSBH
37	92-2667-03	2	Bracket-Attachment, Mount
38	70-2041	1	Trim
39	3290-378	3	Tie-Cable
40	2412-126	1	R-Clamp

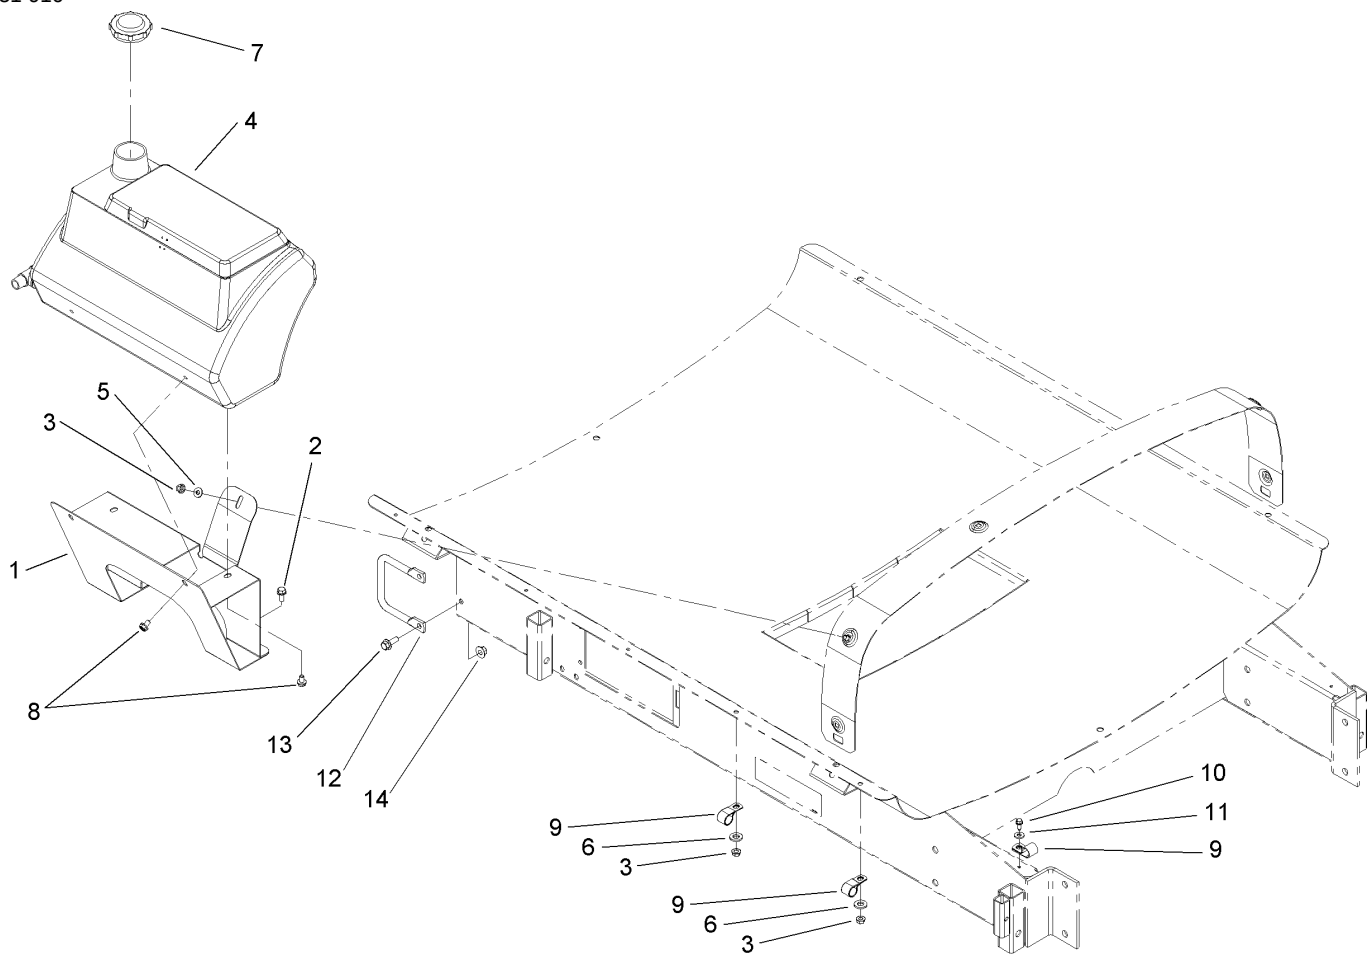 


Fresh Water Tank Assembly

Ref	Part No.	Qty.	Description				
1	107-2819-03	1	Fresh Water Tank Bracket ASM				
2	322-5	2	Screw-HH				
3	3296-29	3	Nut-Lock, NI				
4	100-8438	1	Fresh Water Tank ASM				
5	3256-56	1	Washer-Flat				
6	3256-23	2	Washer-Flat				
7	100-7008	1	Cap-Tank, Fresh Water				
8	3234-28	4	Screw-HHF				
9	2412-4	3	Clamp				
10	32144-10	1	Screw-HWH				
11	3256-2	1	Washer-Flat				
12	106-1357	2	Handle				
13	3234-42	4	Screw-HHF				
14	32128-43	4	Nut-Flange				

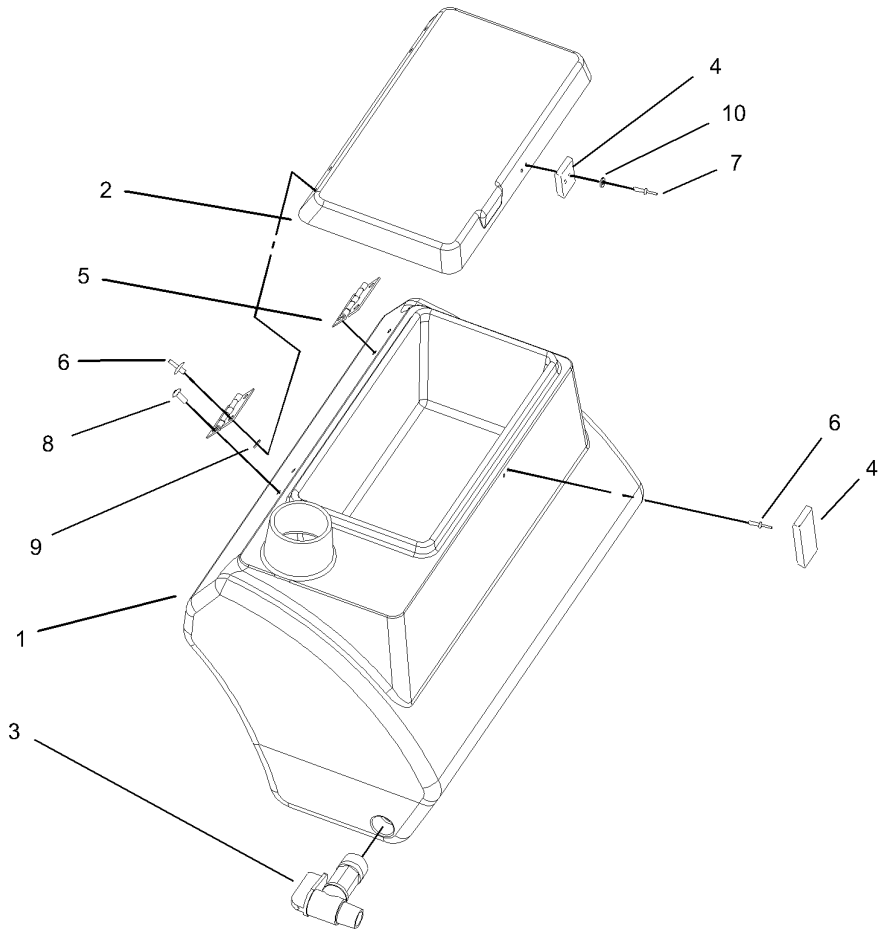 


Fresh Water Tank Assembly No. 100-8438

Ref	Part No.	Qty.	Description				
1		1	Tank-Water, Fresh				
2	100-8397	1	Cover-Tank				
3	100-7011	1	Spigot-90 DEG				
4	100-7009	1	Latch-Draw				
5	100-7010	2	Hinge				
6	100-7062	4	Rivet				
7	100-7063	4	Rivet				
8	100-7064	4	Screw				
9	100-7065	4	Washer				
10	100-7066	2	Washer				

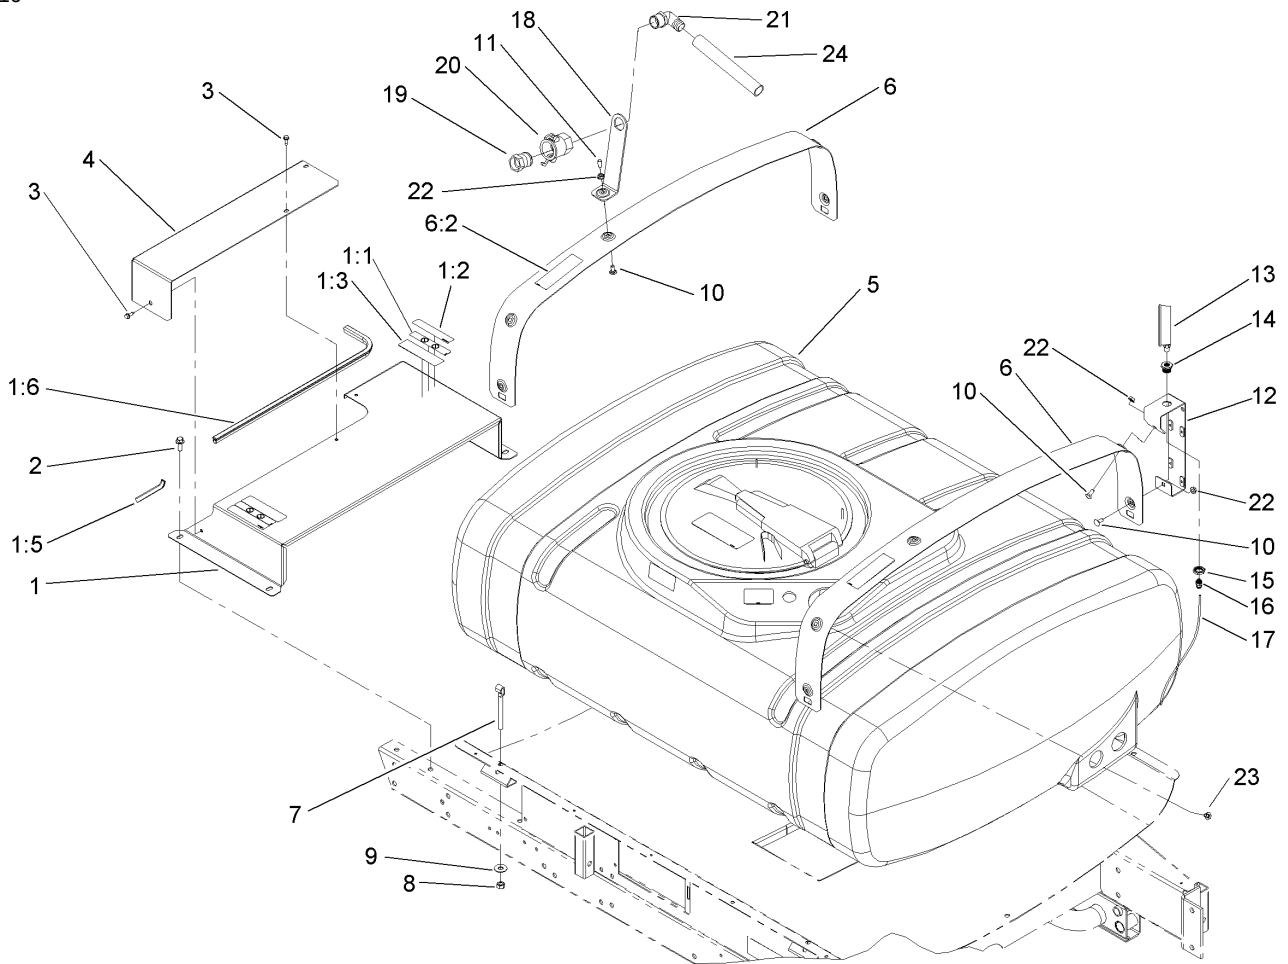 


Tank and Cover Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-2275	1	Radiator Cover ASM	19	41316	1	Adapter-Quick
1:1	93-6687	2	Decal-No Step	20	100-6779	1	Coupling-Female
1:2	93-6689	2	Decal-No Riders	21	41140	1	Elbow
1:3	93-7814	2	Decal-Danger	22	32128-20	3	Nut-HF
1:5	92-3627	1	Trim	23	3230-19	1	Screw-CARR
1:6	42657	1	Trim-Panel, Front	24	104-9075	1	Hose-Siphon, Anti
2	3234-42	4	Screw-HHF				
3	32104-95	3	Screw-HWH				
4	93-6427-03	1	Panel-Radiator				
5	106-1366	1	200 Gallon Tank ASM				
6	106-1368	2	Band-Tank				
6:2	106-5016	1	Decal-Caution, Electric Shock				
7	92-3668	4	Bolt-J				
8	3217-8	4	Nut-Hex				
9	3256-5	4	Washer-Flat				
10	3230-1	3	Bolt-CARR				
11	42452	1	Cap-Protective				
12	106-7997-03	1	Tee Mounting Bracket ASM				
13	104-8949	1	Gauge-Pressure				
14	100-8665	1	Reducer-Gauge, Pressure				
15	100-8666	1	Nut-Reducer				
16	100-8667	1	Coupler-Reducer				
17	107-2834	1	Tubing-Pressure				
18	100-6778-03	1	Bracket-Anti-Siphon				

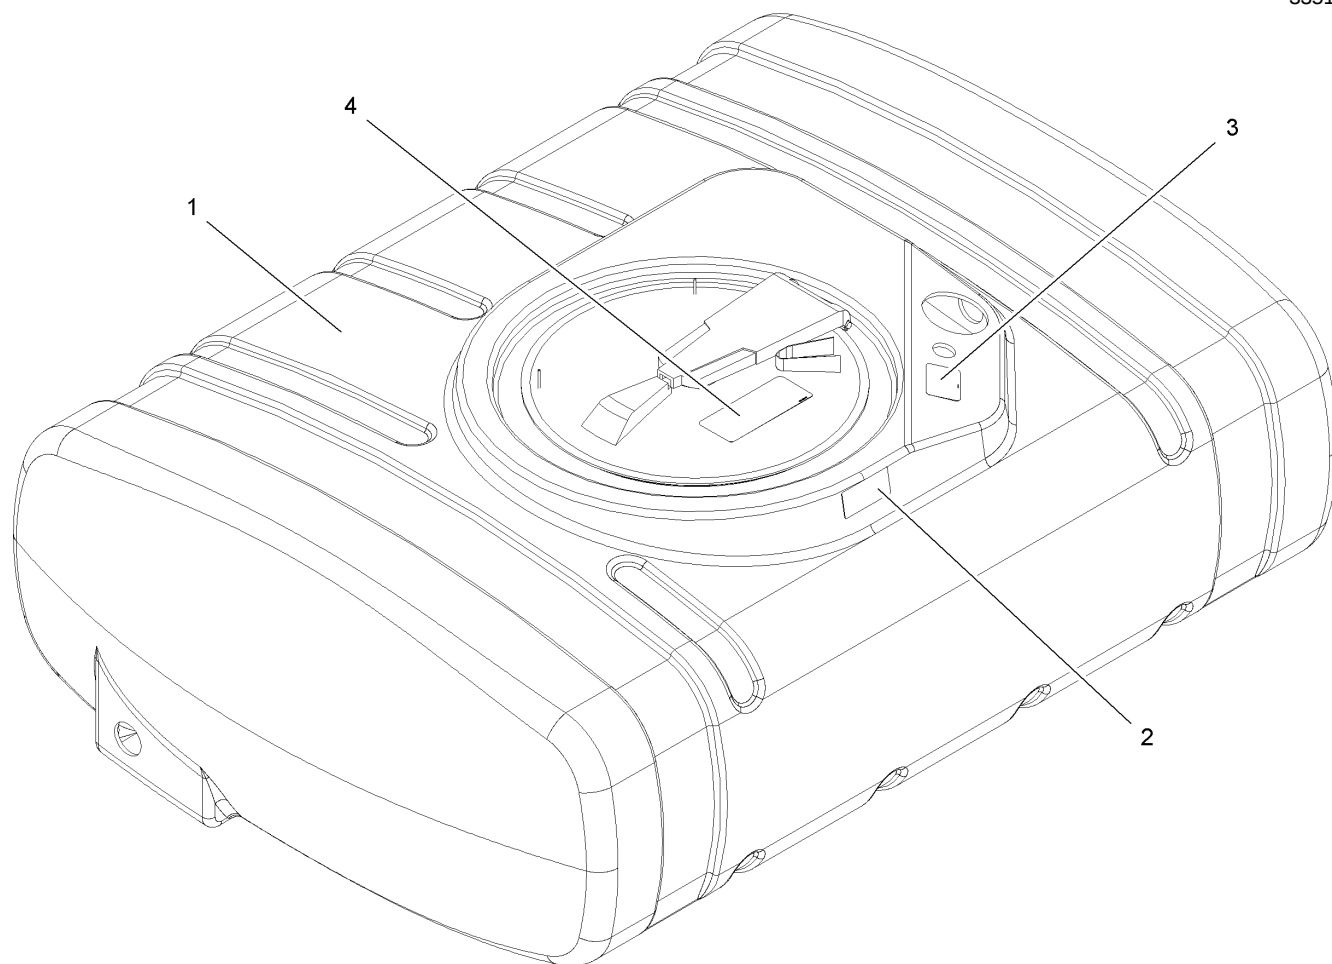 


200 Gallon Tank Assembly No. 106-1366

Ref	Part No.	Qty.	Description				
1		1	Spray Tank ASM				
2	106-1355	1	Decal-No Tank Entry				
3	106-5065	1	Decal-Drain, Tank				
4	93-0688	1	Decal-Warning, Chemical				

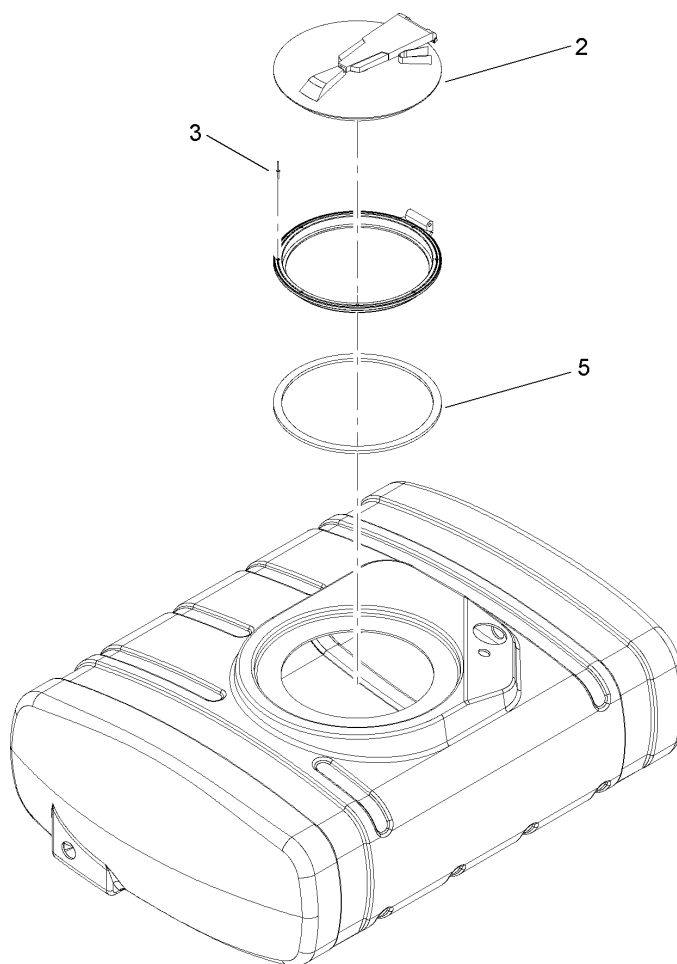 


Lid Seal Assembly

Ref	Part No.	Qty.	Description
2		1	Screw Type Tank Lid ASM
3	93-0833	8	Rivet
5	106-4991	1	Seal-Lid

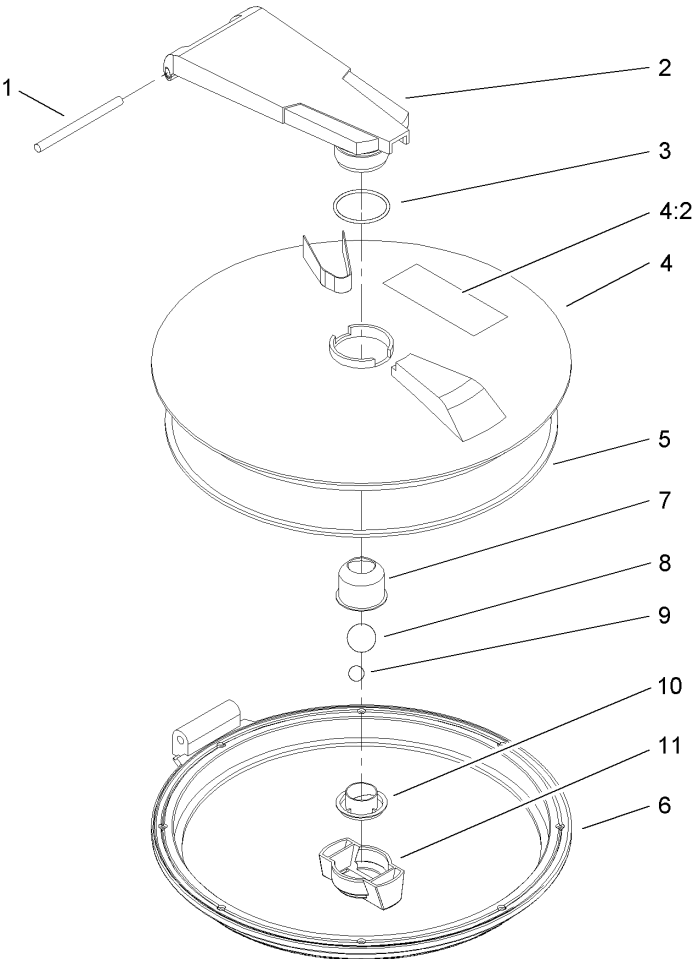 


Lid Assembly

Ref	Part No.	Qty.	Description				
1	106-5000	1	Pin-Pivot				
2	106-5001	1	Arm				
3	106-5002	1	O-Ring				
4	106-1369	1	Lid				
4:2	93-0688	1	Decal-Warning, Chemical				
5	106-5004	1	Seal-Lid				
6	106-5005	1	Ring				
7	106-5006	1	Cup-Vent				
8	106-5007	1	Ball-Floating				
9	106-5008	1	Ball-Weight				
10	106-5009	1	Holder-Ball				
11	106-5010	1	Nut-Wing				

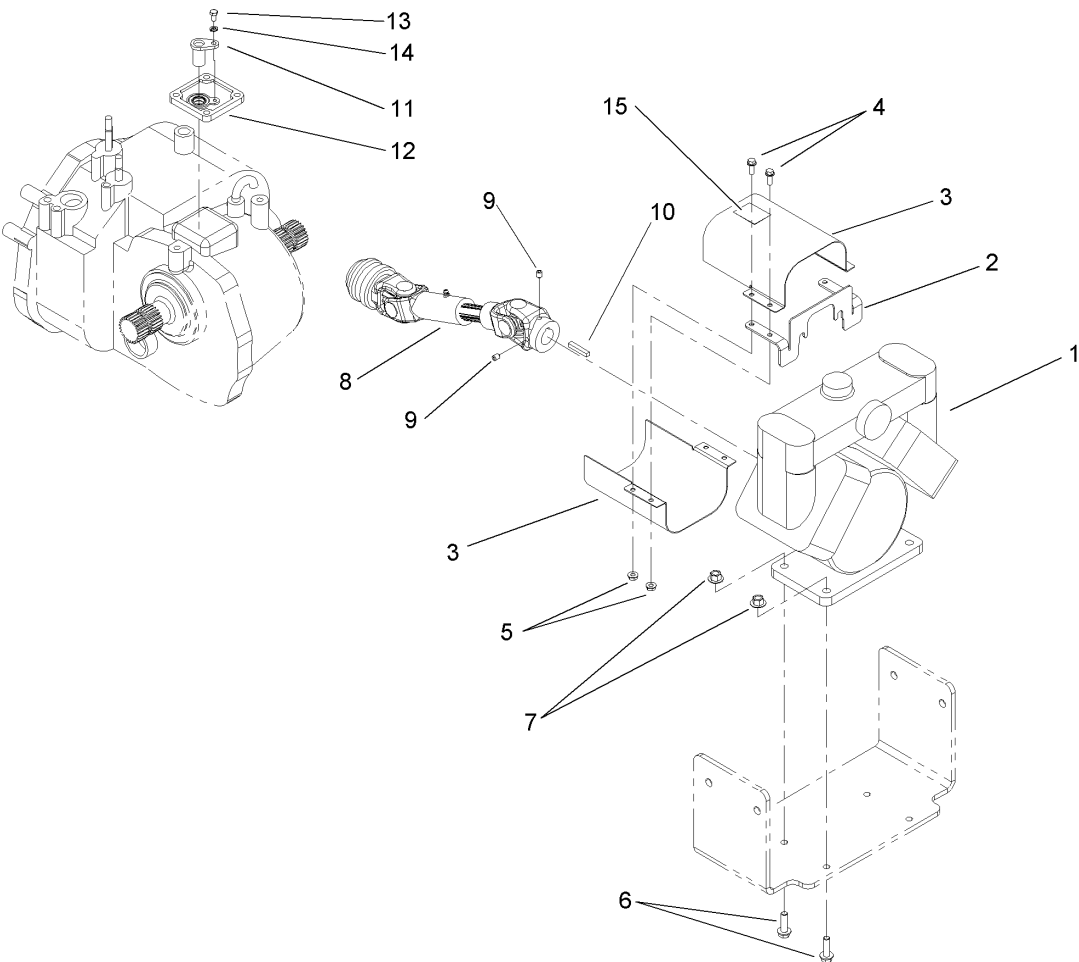 


Pump and Drive Assembly

Ref	Part No.	Qty.	Description				
1	106-5121	1	Pump				
2	104-8970-03	1	Bracket-Shroud				
3	104-8971-03	2	Shroud-Drive, Pump				
4	3234-4	4	Screw-HHF				
5	32128-33	4	Nut-HF				
6	3234-24	4	Screw-HHF				
7	32128-43	4	Nut-Flange				
8	107-2810	1	Shaft-Drive, PTO				
9	3246-18	2	Setscrew				
10	67-7490	1	Key-Square				
11	85-4350	1	Sensor-Geartooth				
12	92-3736	1	Cover ASM				
13	33113-012	1	Screw-HH				
14	48-8020	1	Washer-Spring				
15	106-1354	1	Decal-540 Rpm				

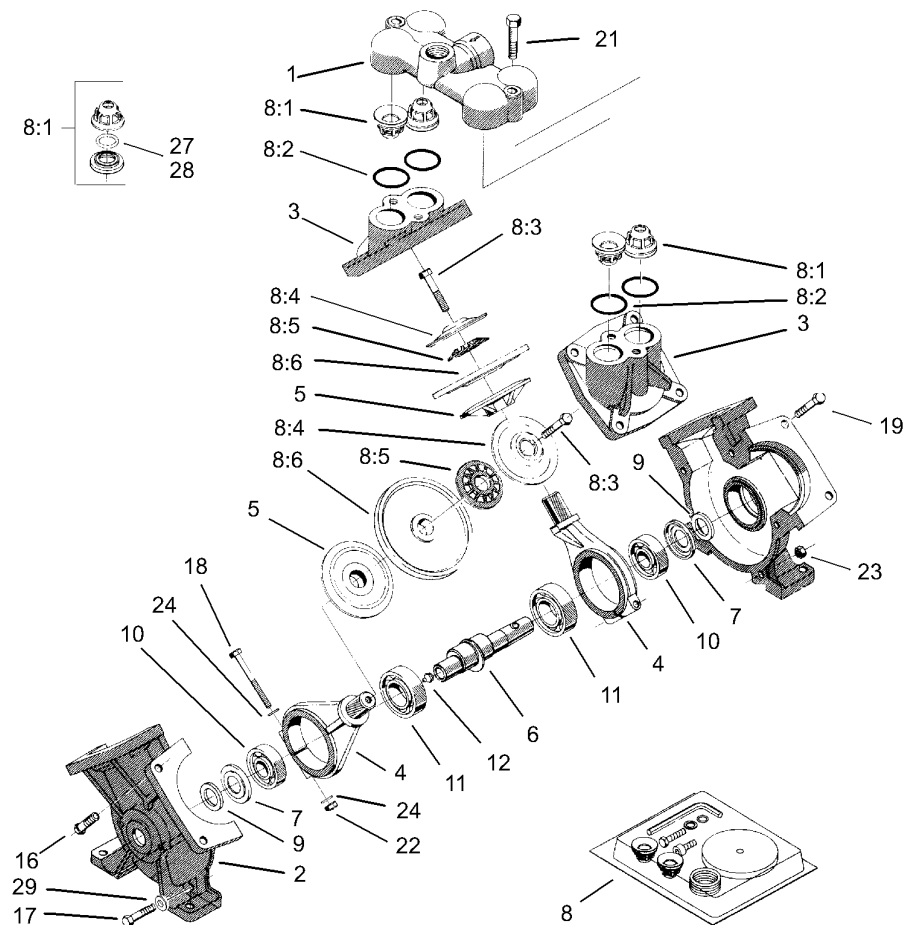 


Pump Assembly No. 106-5121

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-5139	1	Cover-Valve	23	106-5149	5	Nut
2	106-5140	2	Housing-Pump	24	100-8316	4	Washer-Lock
3	106-5141	2	Cover-Diaphragm	27	100-8336	4	O-Ring
4	106-5142	2	Rod-Connecting	28	106-5138	4	O-Ring
5	100-8314	2	Disc-Back, Diaphragm	29	106-5137	2	Washer
6	104-9052	1	Crankshaft-Keyed				
7	100-8325	2	Plate-Dust				
8	106-5150	1	Repair Kit				
8:1	100-8307	4	Valve				
8:2	100-6652	4	Gasket				
8:3	106-5147	2	Bolt				
8:4	100-8311	2	Washer				
8:5	100-8312	2	Washer-Nylon				
8:6	100-8313	2	Diaphragm				
9	99-0868	2	Felt-Seal				
10	100-8327	2	Bearing-Ball				
11	100-8329	2	Bearing-Ball				
12	99-0873	1	Fitting-Grease				
16	106-5143	3	Bolt				
17	106-5144	2	Bolt				
18	106-5145	2	Bolt				
19	106-5146	8	Bolt				
21	106-5148	2	Bolt				
22	100-8326	2	Nut-Hex				

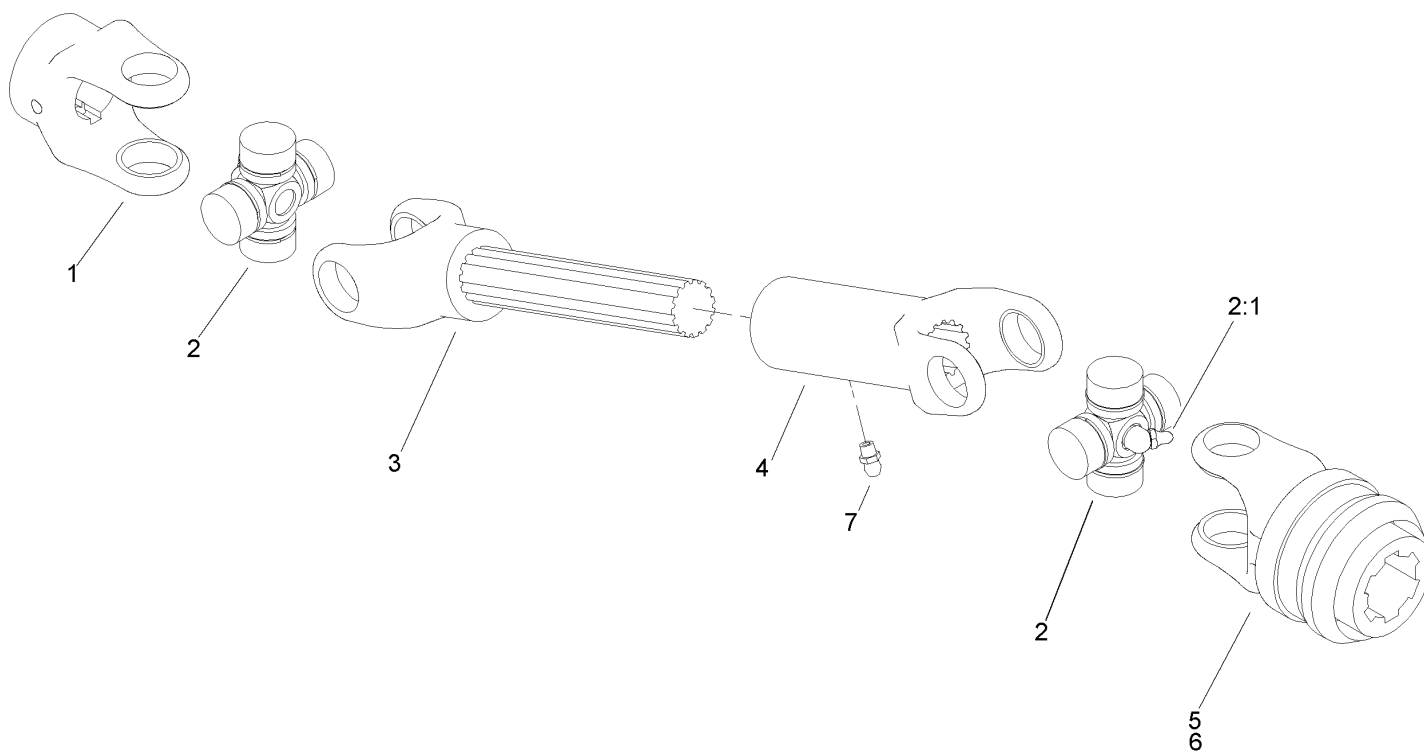 

Drive Shaft Assembly No. 107-2810


Ref	Part No.	Qty.	Description
1	107-2823	1	Yoke-Shaft
2	54-9180	2	U-Joint Kit
2:1	62-3820	1	Fitting-Grease
3	107-2824	1	Shaft-Yoke, Slip
4	94-7379	1	Tube-Yoke, Slip
5	99-4476	1	Spring-Lok Yoke ASM
6	99-4477	1	Spring-Lok Repair Kit
7	302-5	1	Fitting-Grease

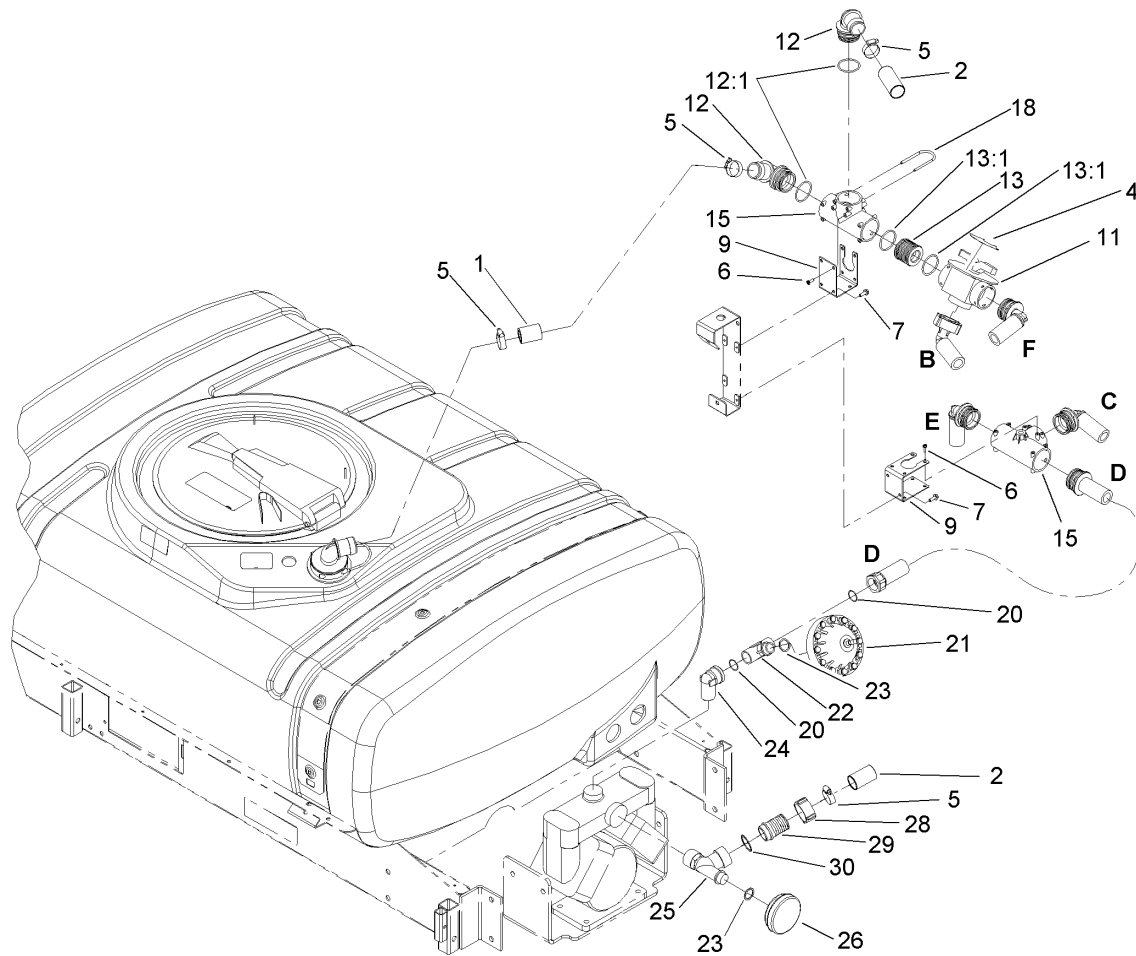 

Upper Sprayer Components Assembly


Ref	Part No.	Qty.	Description
1	107-2804	1	Hose-Suction
2	107-2805	1	Hose-Suction
4	107-8621	1	Decal-Agitation
5	41327	4	Clamp-Hose
6	32144-32	8	Screw
7	3234-4	4	Screw-HHF
9	100-8478	2	Bracket-Tee
11	100-8673	1	Agitation Valve ASM
12	106-4946	2	Hosebarb-90 DEG
12:1	100-8637	1	O-Ring
13	106-4947	1	Connector
13:1	100-8637	2	O-Ring
15	100-6704	2	Tee
18	100-8635	8	Fork
20	100-6655	1	Gasket
21	100-6662	1	Damper-Pressure
22	100-8699	1	Tee
23	100-6656	2	O-Ring
24	100-8698	1	Elbow
25	100-8681	1	Tee
26	100-6660	1	Suction Damper ASM
28	100-8678	1	Nut
29	100-8679	1	Hosebarb
30	100-8680	1	Seal

Ref	Part No.	Qty.	Description
31	3334-945	3	Tie-Cable

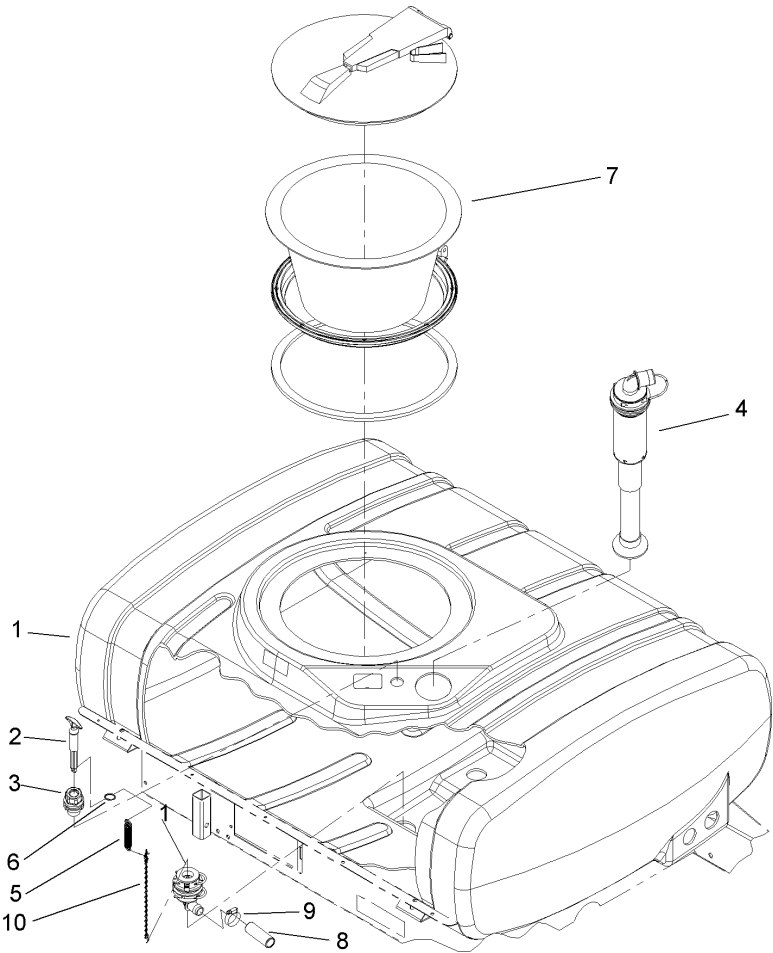 


Suction and Drain Assembly

Ref	Part No.	Qty.	Description				
1		1	Tank Drain ASM				
2	106-1347	1	Handle-Drain				
3		1	Upper Tank Drain Bulkhead ASM				
4	107-2800	1	Top Mounted Suction ASM				
5	106-1391	1	Spring-Extension				
6	106-1392	1	Ring-Retaining, Spiral, Ext				
7	104-9051	1	Basket-Strainer				
8	106-1351	1	Hose-Drain				
9	2412-34	1	Clamp-Hose				
10	106-1356	1	Chain ASM				

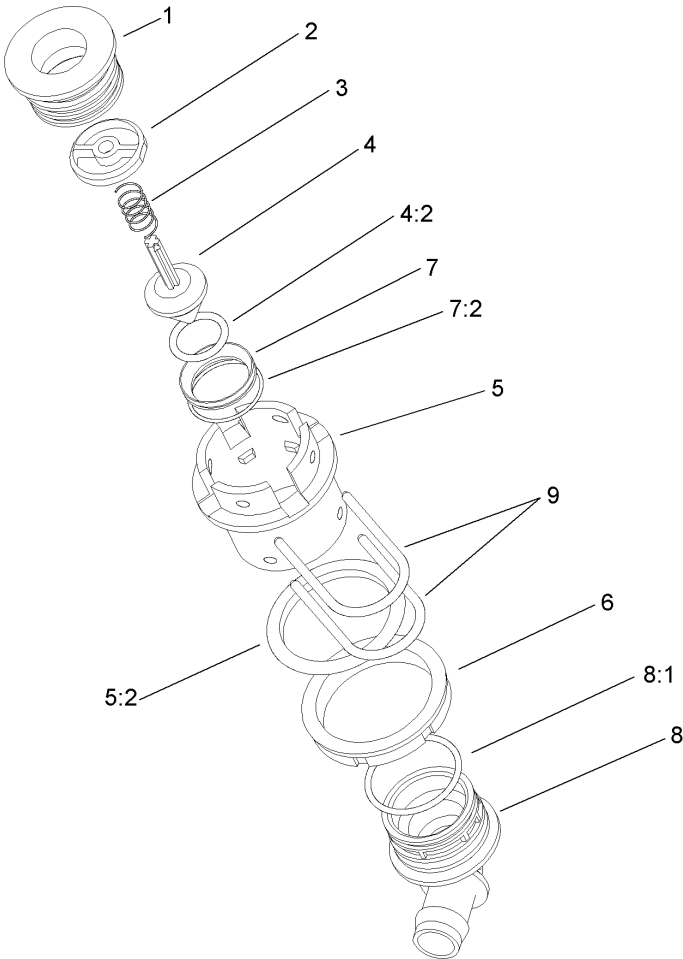 


Tank Drain Assembly

Ref	Part No.	Qty.	Description				
1	107-2868	1	Adapter				
2	107-2869	1	Holder-Plunger				
3	107-2871	1	Spring				
4	107-2870	1	Drain Plunger ASM				
4:2	107-2872	1	O-Ring				
5	107-2862	1	Drain Bulkhead ASM				
5:2	107-2864	1	Gasket-Bulkhead				
6	100-7051	1	Nut-Bulkhead				
7	107-2867	1	Seat Drain ASM				
7:2	107-2866	1	O-Ring				
8	106-4933	1	Hosebarb ASM				
8:1	100-8637	1	O-Ring				
9	100-8635	2	Fork				

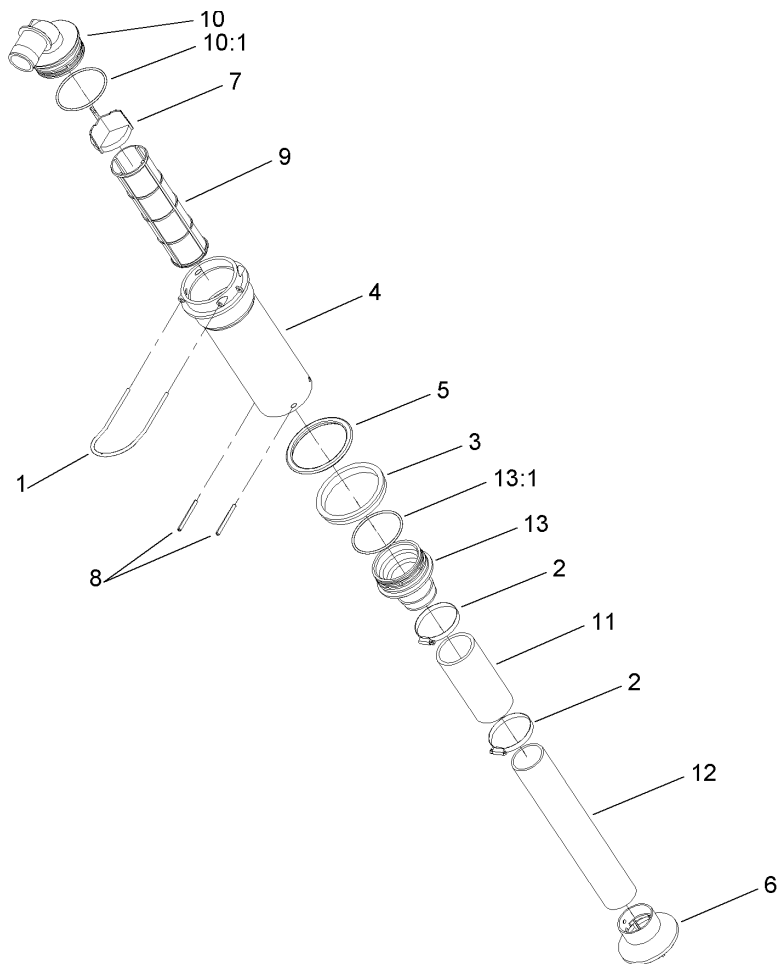 


Top Mounted Suction Assembly No. 107-2800

Ref	Part No.	Qty.	Description				
1	100-8636	1	Fork-Special				
2	26392	2	Clamp-Hose				
3	100-8647	1	Nut-Bulkhead				
4	100-8643	1	Housing-Filter				
5	100-8646	1	Gasket-Bulkhead				
6	100-6714	1	Foot-Suction Tube				
7	100-8641	1	Vane-Screen				
8	100-8644	2	Pin-Expansion				
9	100-8642	1	Screen-Suction, Mesh 50				
10	106-4952	1	Hosebarb-90 DEG				
10:1	100-6989	1	O-Ring				
11	100-8649	1	Hose-Suction				
12	107-2801	1	Tube-Suction				
13	106-4942	1	Hosebarb-Straight				
13:1	100-8640	1	O-Ring				

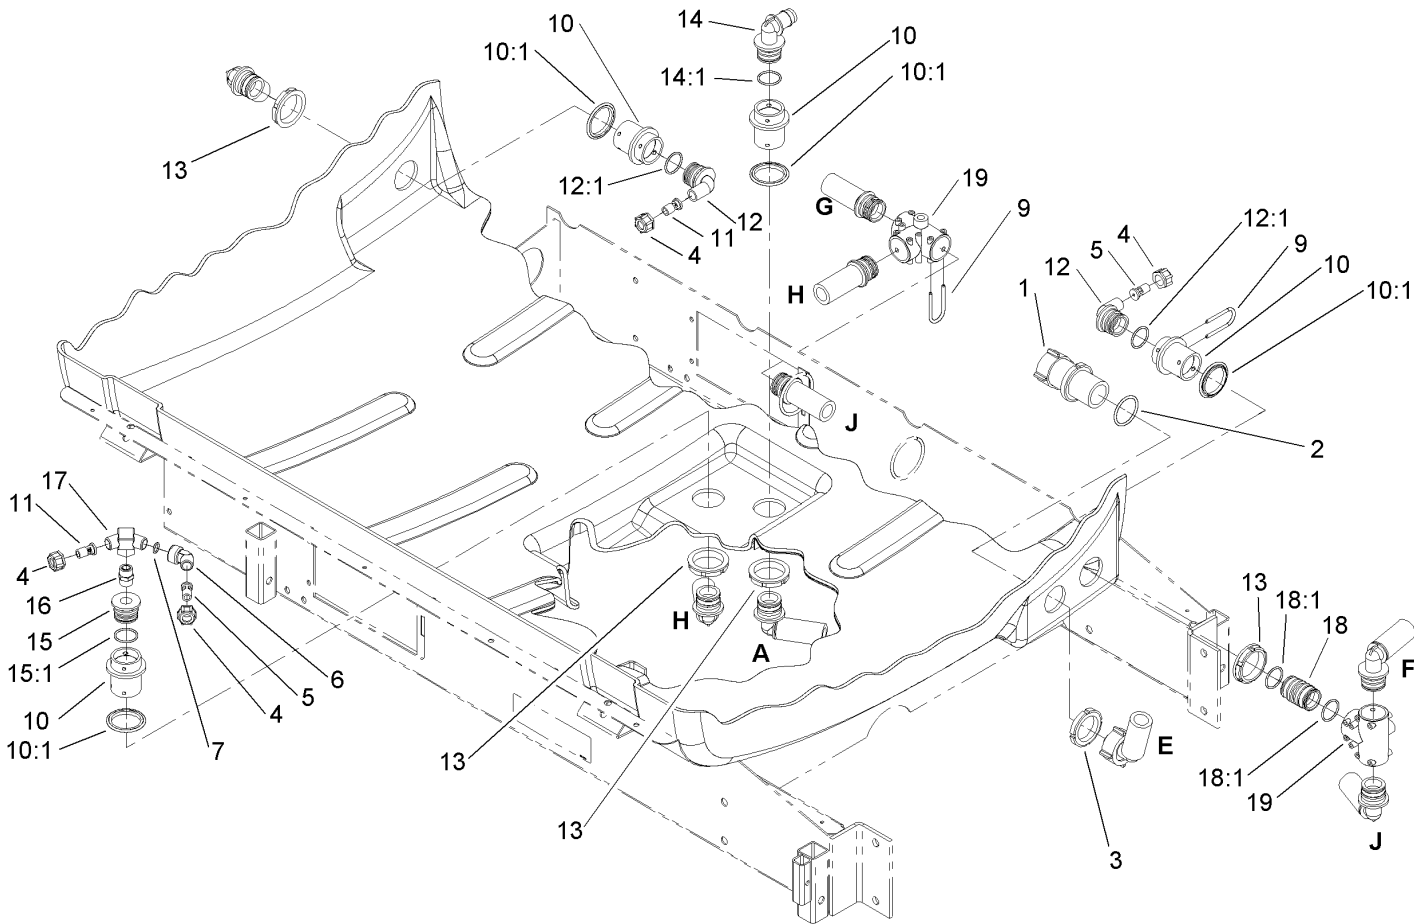 


Lower Sprayer Components Assembly

Ref	Part No.	Qty.	Description				
1	100-6820	1	Valve-Safety, 225 Psi				
2	100-6652	1	Gasket				
3	99-0761	1	Ringnut				
4	99-0766	4	Nut				
5	100-6705	2	Nozzle-Agitation				
6	99-0768	1	Elbow-60 DEG				
7	100-6653	1	O-Ring				
9	100-6708	14	Fork				
10	106-4896	4	Fitting-Bulkhead				
10:1	100-6710	1	Gasket-Bulkhead				
11	100-6706	2	Nozzle-Agitation				
12	106-4944	2	Fitting-90 DEG				
12:1	100-6712	1	O-Ring				
13	100-6713	4	Nut-Bulkhead				
14	106-4945	1	Elbow				
14:1	100-6712	1	O-Ring				
15	106-4943	1	Adapter ASM				
15:1	100-6712	1	O-Ring				
16	100-6722	1	Nipple				
17	100-6723	1	Tee				
18	107-2802	1	Connector (S53)				
18:1	100-6712	2	O-Ring				
19	104-9041	2	Tee				

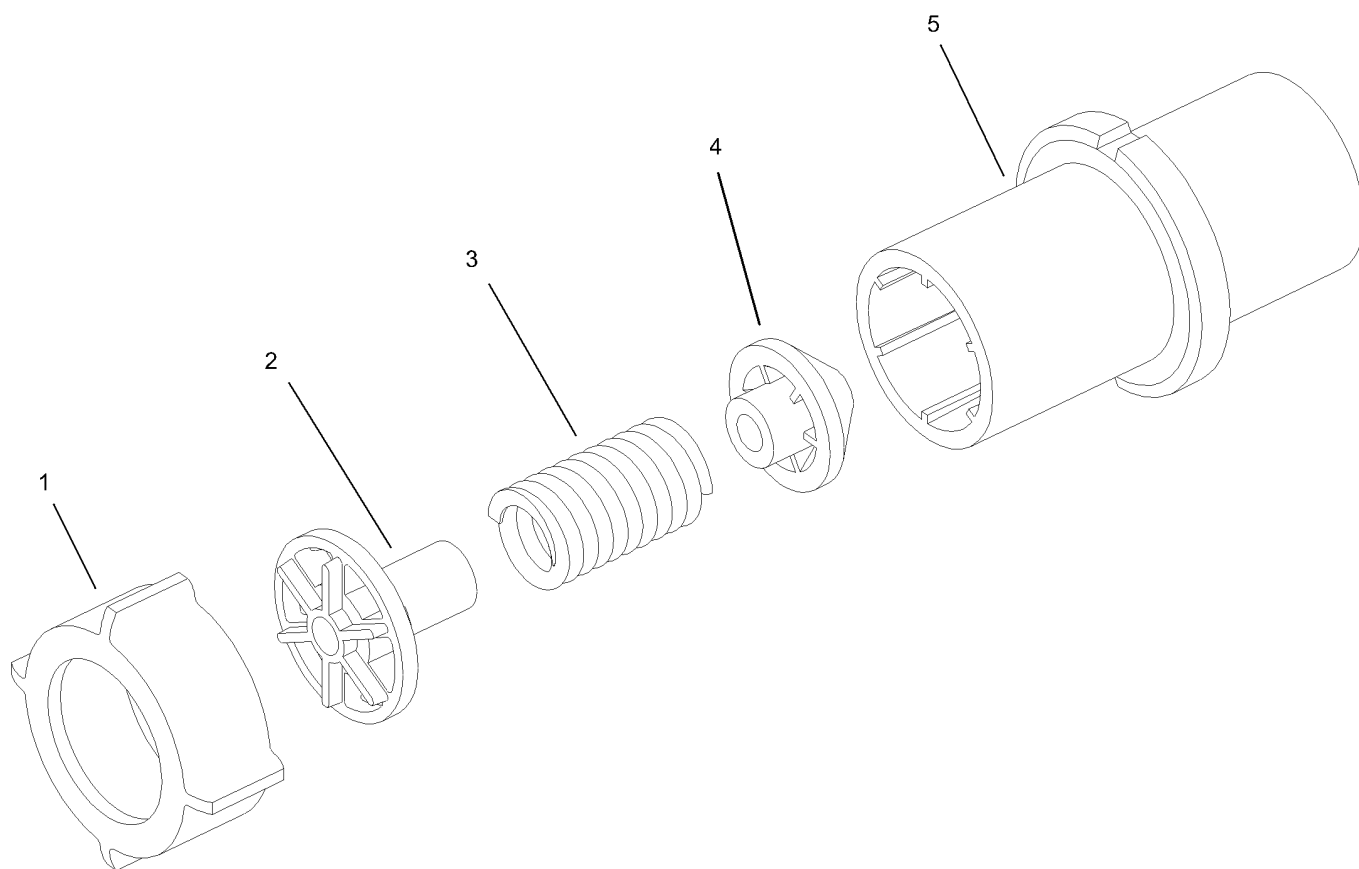 


Safety Valve Assembly No. 100-6820

Ref	Part No.	Qty.	Description
1	100-8678	1	Nut
2	100-6724	1	Valve-Relief, Seat
3	100-6725	1	Spring-Relief, Valve
4	100-6726	1	Cone-Relief, Valve
5	100-6727	1	Housing-Relief, Valve

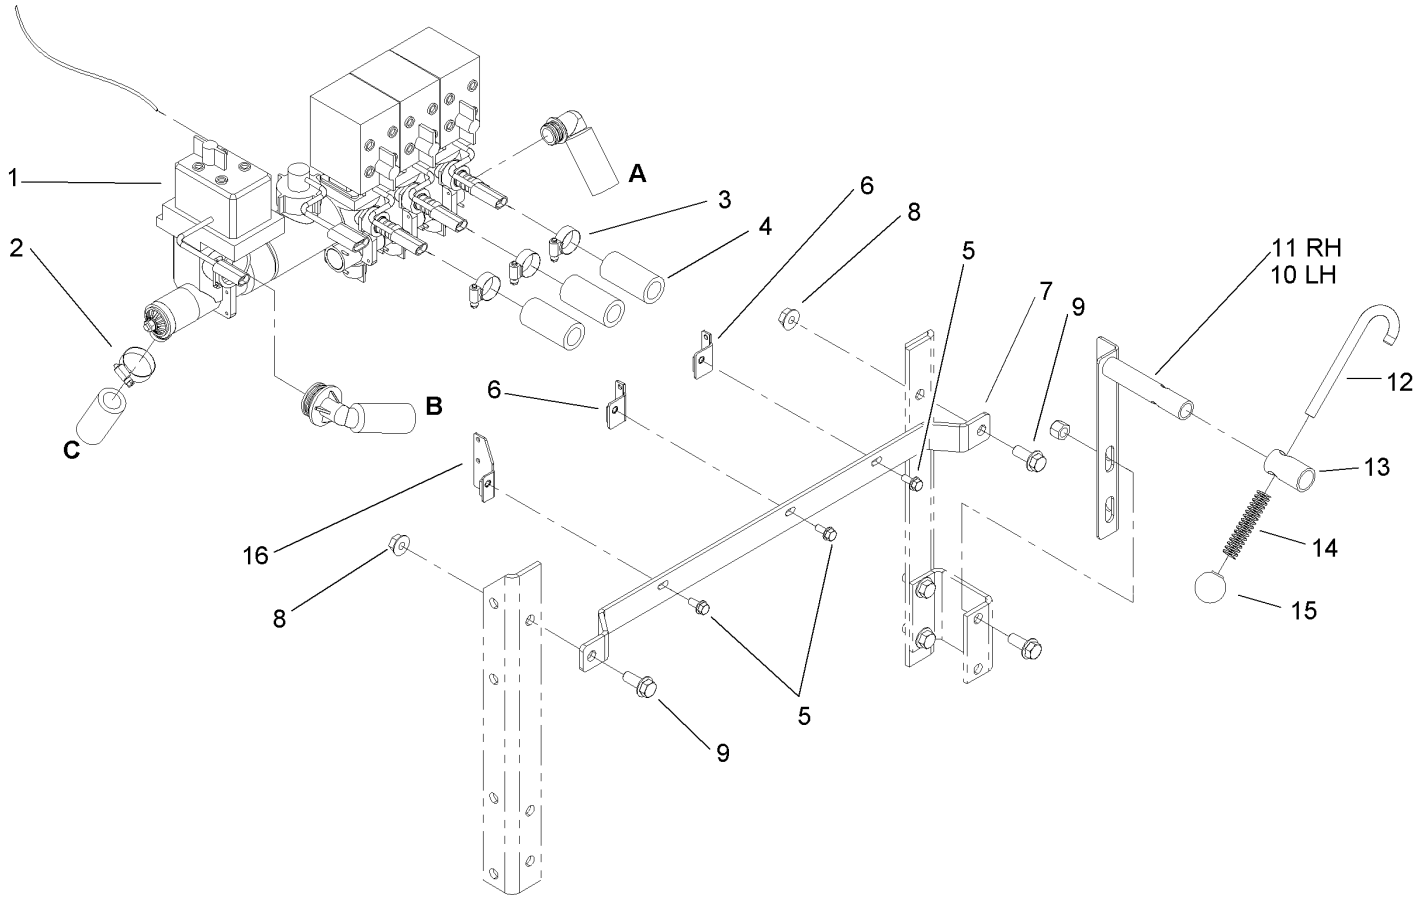 


Control Assembly

Ref	Part No.	Qty.	Description				
1		1	Valve-Control, Evc				
2	2412-3	1	Clamp-Hose				
3	2412-129	3	Clamp-Hose				
4	41340	3	Hose-Boom				
5	3234-5	3	Screw				
6	100-8432-03	2	Bracket				
7	107-2847-03	1	Bracket-Valve				
8	32128-49	2	Nut-HHF				
9	3234-32	2	Screw-HHF				
10	107-2838-03	1	Holder-Tube, LH				
11	107-2839-03	1	Holder-Boom, RH				
12	92-8562	2	Hook-Restraint, Boom				
13	107-2853	2	Hose-Hold In				
14	92-8563	2	Spring				
15	92-8564	2	Knob				
16	100-8433-03	1	Bracket				

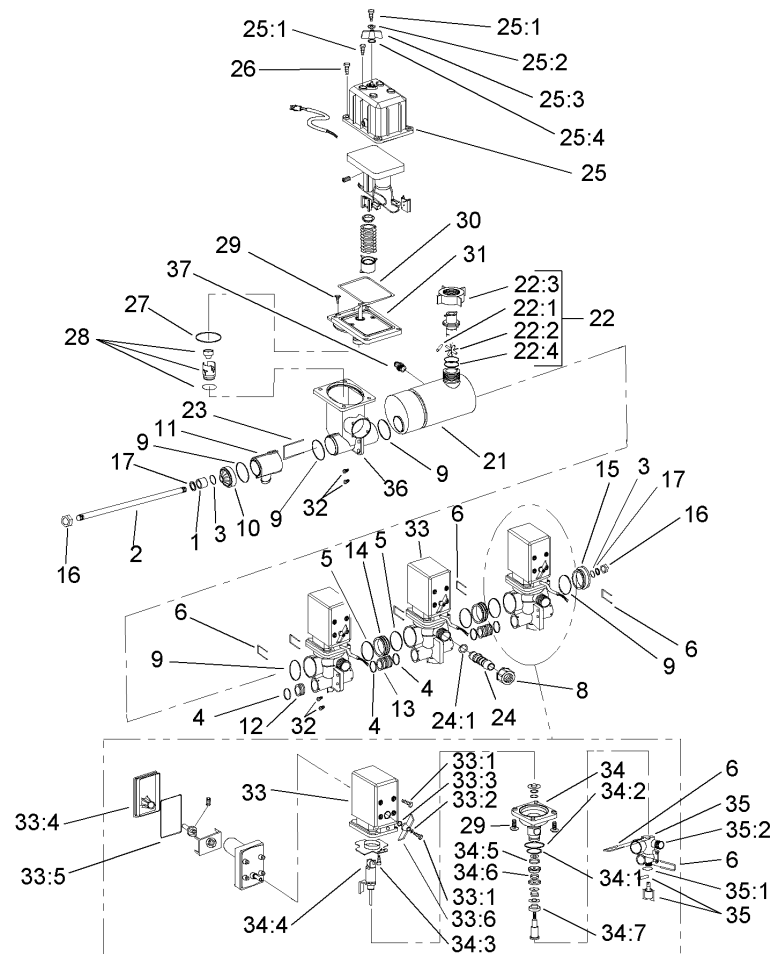 

EVC Control Valve Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	100-6897	1	Bushing	24:1	100-6645	1	O-Ring
2	100-6909	1	Rod-Threaded	25	106-1358	1	Rate Control Motor ASM
3	100-6887	2	O-Ring	25:1	100-6876	1	Screw
4	100-6882	5	O-Ring	25:2	100-6877	1	Washer-Lock
5	100-6646	5	O-Ring	25:3	100-6903	1	Grip-Hand
6	100-6885	9	Fork-Valve, Boom	25:4	100-6880	1	O-Ring
8	99-0850	3	Nut	26	100-6918	4	Screw-Plastic
9	100-6892	4	O-Ring	27	100-6904	1	O-Ring
10	100-6913	1	Cover	28	100-6905	1	Rate Valve Repair Kit
11	100-6908	1	T-Piece	29	100-6917	16	Screw-Plastic
12	100-6891	1	Cap-End	30	100-6901	1	Gasket-Housing, Valve Motor
13	100-6890	2	Joiner-Bypass, Boom	31	100-6899	1	Section-Spindle, Valve Rate
14	100-6896	2	Joiner-Valve, Boom	32	100-6916	6	Screw-Plastic
15	100-6915	1	Cover-End	33	107-2861	3	Boom Valve Motor ASM
16	100-6894	2	Nut	33:1	100-6876	3	Screw
17	100-6634	2	Washer	33:2	100-6877	3	Washer-Lock
21	100-6920	1	Housing-Meter, Flow	33:3	100-6880	3	O-Ring
22	100-6900	1	Flow Sensor ASM	33:4	100-6874	3	Cover-Valve, Boom
22:1	100-6906	1	Shaft-Rotor	33:5	100-6912	3	Cover-Seal
22:2	100-6919	1	Meter-Flow, Rotor	33:6	100-6875	3	Handgrip-Valve, Boom
22:3	100-8678	1	Nut	34	100-6889	3	Section-Spindle, Boom Valve
22:4	100-8653	1	O-Ring	34:1	100-8653	1	O-Ring
23	100-6907	1	Fork	34:2	100-6882	5	O-Ring
24	106-5112	3	Hosebarb ASM	34:3	100-6911	1	Pin-Roller

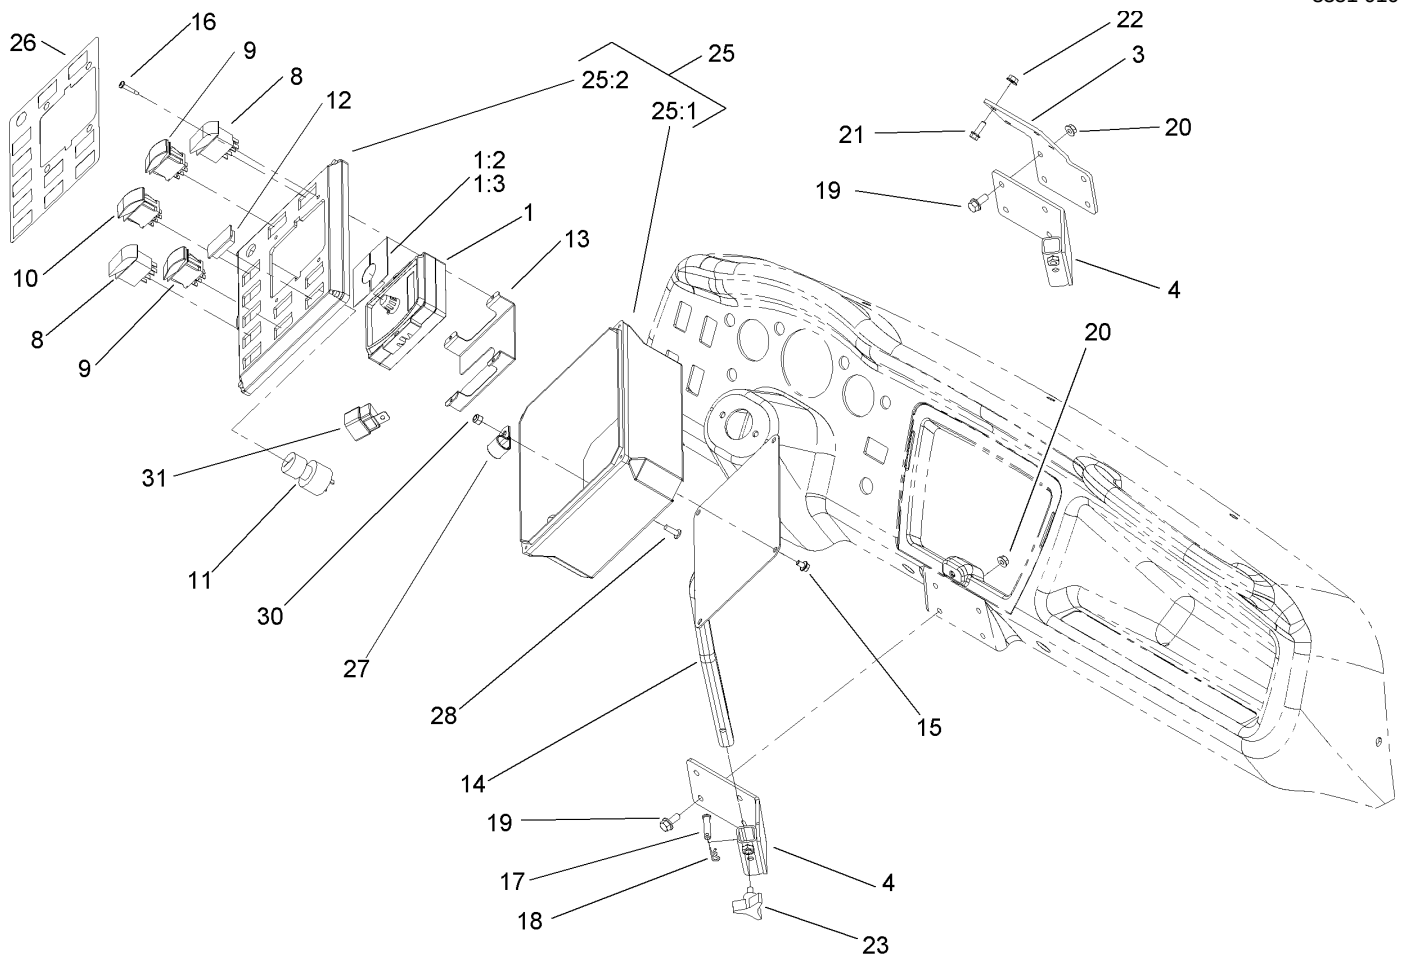 


Control Box Assembly


Ref	Part No.	Qty.	Description
1	108-3312	1	Spray-Monitor
1:2	108-3307	1	Decal-Monitor
1:3	108-3309	1	Decal-Monitor
3	107-2811-03	1	Bracket-Adapter, Control
4	106-7992-03	1	Receiver ASM
8	100-8490	4	Switch-Dpdt
9	100-1535	3	Switch
10	100-8589	1	Switch-Rocker
11	94-5245	1	Switch-Key
12	99-7420	3	Plug-Hole
13	107-2831	1	Bracket-Monitor
14	106-7995-03	1	Control Box Mount ASM
15	3234-26	4	Screw
16	104-1451	4	Screw-Tap, PPH
17	283-6	1	Pin-Clevis
18	3290-307	1	Pin-Hair
19	3234-17	4	Screw-HHF
20	104-8300	4	Nut-Flange, NI
21	3234-4	4	Screw-HHF
22	32128-33	4	Nut-HF
23	92-9674	1	Knob
25		1	Control Enclosure ASM
25:1	106-1378	1	Base-Enclosure, Control
25:2	106-1349	1	Cover-Enclosure, Control

Ref	Part No.	Qty.	Description
26	107-2825	1	Decal-Switchplate
27	2412-4	1	Clamp
28	321-5	1	Screw-HH
30	32128-33	1	Nut-HF
31	99-7430	1	Relay

 
3351-916

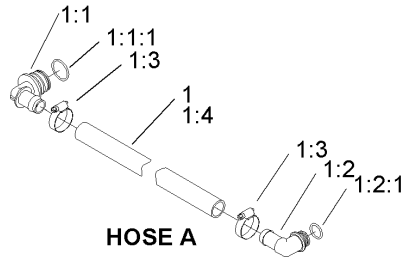


HOSE A

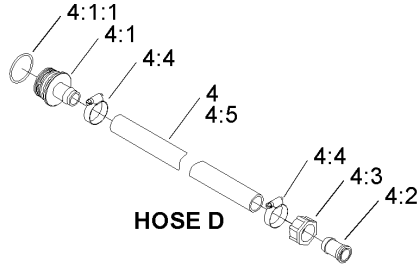 


HOSE D

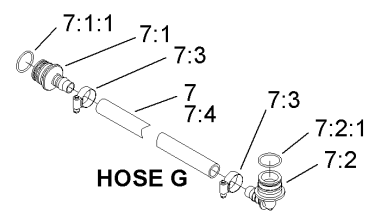 


HOSE G

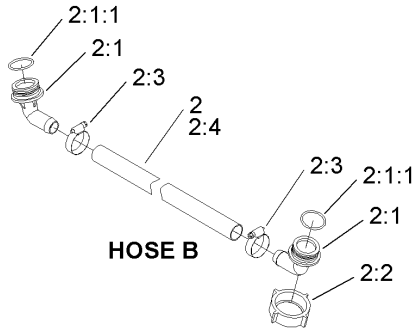 


HOSE B

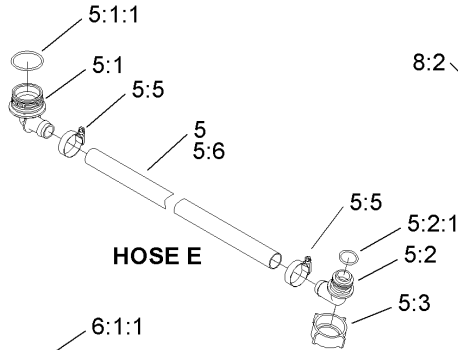 


HOSE E

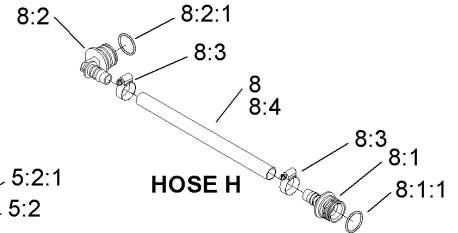 


HOSE H

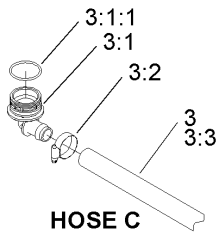 

HOSE C

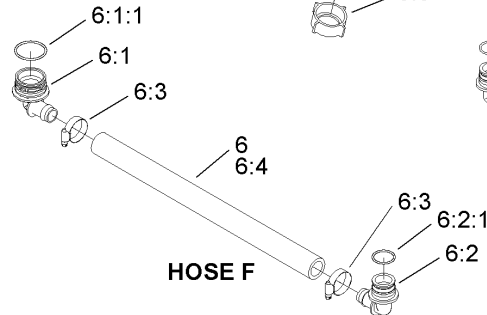 

HOSE F









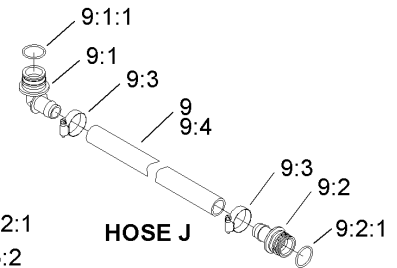 


HOSE J

Hose Assembly


Ref	Part No.	Qty.	Description
②1		1	Boom Bypass Hose ASM
1:1	106-4945	1	Elbow
1:1:1	100-6712	1	O-Ring
1:2	106-4948	1	Hose Barb ASM
1:2:1	100-6882	1	O-Ring
1:3	2412-3	2	Clamp-Hose
1:4	104-9037	1	Hose-Boom Bypass
②2		1	Agitation Supply Hose ASM
2:1	106-4950	2	Hose Barb ASM
2:1:1	100-8671	1	O-Ring
2:2	100-8669	1	Nut
2:3	2412-3	2	Clamp-Hose
2:4	104-8710	1	Hose
②3		1	Tee Controls Hose ASM
3:1	106-4933	1	Hosebarb ASM
3:1:1	100-8637	1	O-Ring
3:2	2412-3	1	Clamp-Hose
3:3	107-2832	1	Hose
②4		1	Manifold Tee Hose ASM
4:1	106-4932	1	Hosebarb-Straight
4:1:1	100-8637	1	O-Ring
4:2	99-0781	1	Hosebarb
4:3	99-0769	1	Nut
4:4	2412-3	2	Clamp-Hose

Ref	Part No.	Qty.	Description
4:5	107-2807	1	Hose
②5		1	Relief Valve Hose ASM
5:1	106-4933	1	Hosebarb ASM
5:1:1	100-8637	1	O-Ring
5:2	106-4949	1	Hosebarb-110 DEG
5:2:1	100-6646	1	O-Ring
5:3	100-8678	1	Nut
5:5	2412-3	2	Clamp-Hose
5:6	104-8710	1	Hose
②6		1	Agitation Valve Hose ASM
6:1	106-4933	1	Hosebarb ASM
6:1:1	100-8637	1	O-Ring
6:2	106-4945	1	Elbow
6:2:1	100-6712	1	O-Ring
6:3	2412-3	2	Clamp-Hose
6:4	106-4975	1	Hose
②7		1	Front Agitation Hose ASM
7:1	106-4939	1	Hosebarb-Straight
7:1:1	100-6712	1	O-Ring
7:2	106-4940	1	Hosebarb-90 DEG
7:2:1	100-6712	1	O-Ring
7:3	2412-129	2	Clamp-Hose
7:4	107-2813	1	Hose
②8		1	Middle Agitation Hose ASM

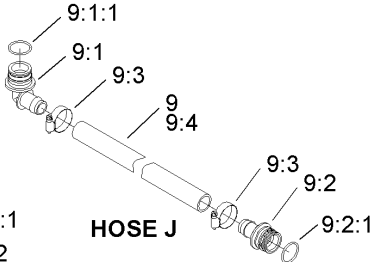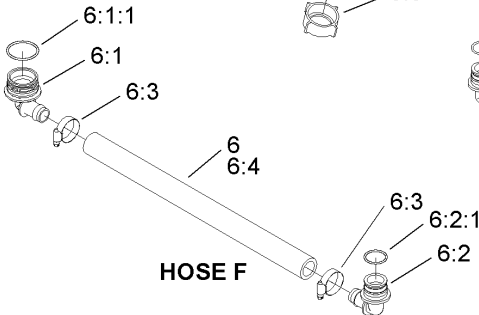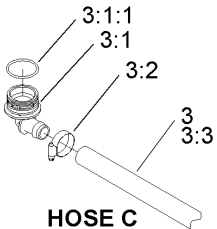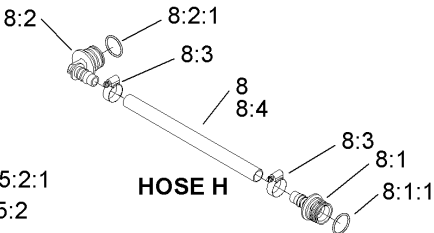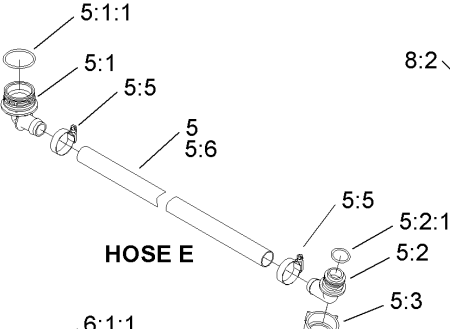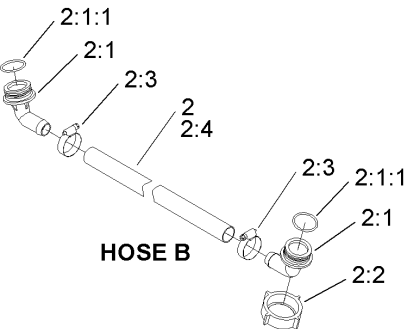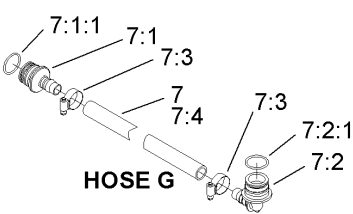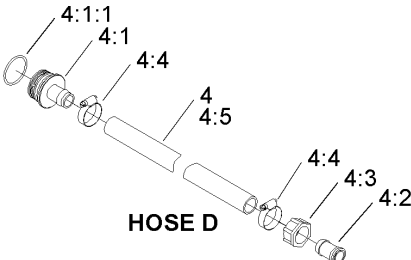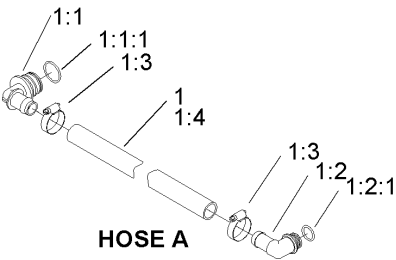         


Hose Assembly (continued)

Ref	Part No.	Qty.	Description				
8:1	106-4939	1	Hosebarb-Straight				
8:1:1	100-6712	1	O-Ring				
8:2	106-4940	1	Hosebarb-90 DEG				
8:2:1	100-6712	1	O-Ring				
8:3	2412-129	2	Clamp-Hose				
8:4	106-1360	1	Hose				
29		1	Agitation Tee Hose ASM				
9:1	106-4945	1	Elbow				
9:1:1	100-6712	1	O-Ring				
9:2	106-4935	1	Hosebarb ASM				
9:2:1	100-6712	1	O-Ring				
9:3	2412-3	2	Clamp-Hose				
9:4	107-2812	1	Hose				

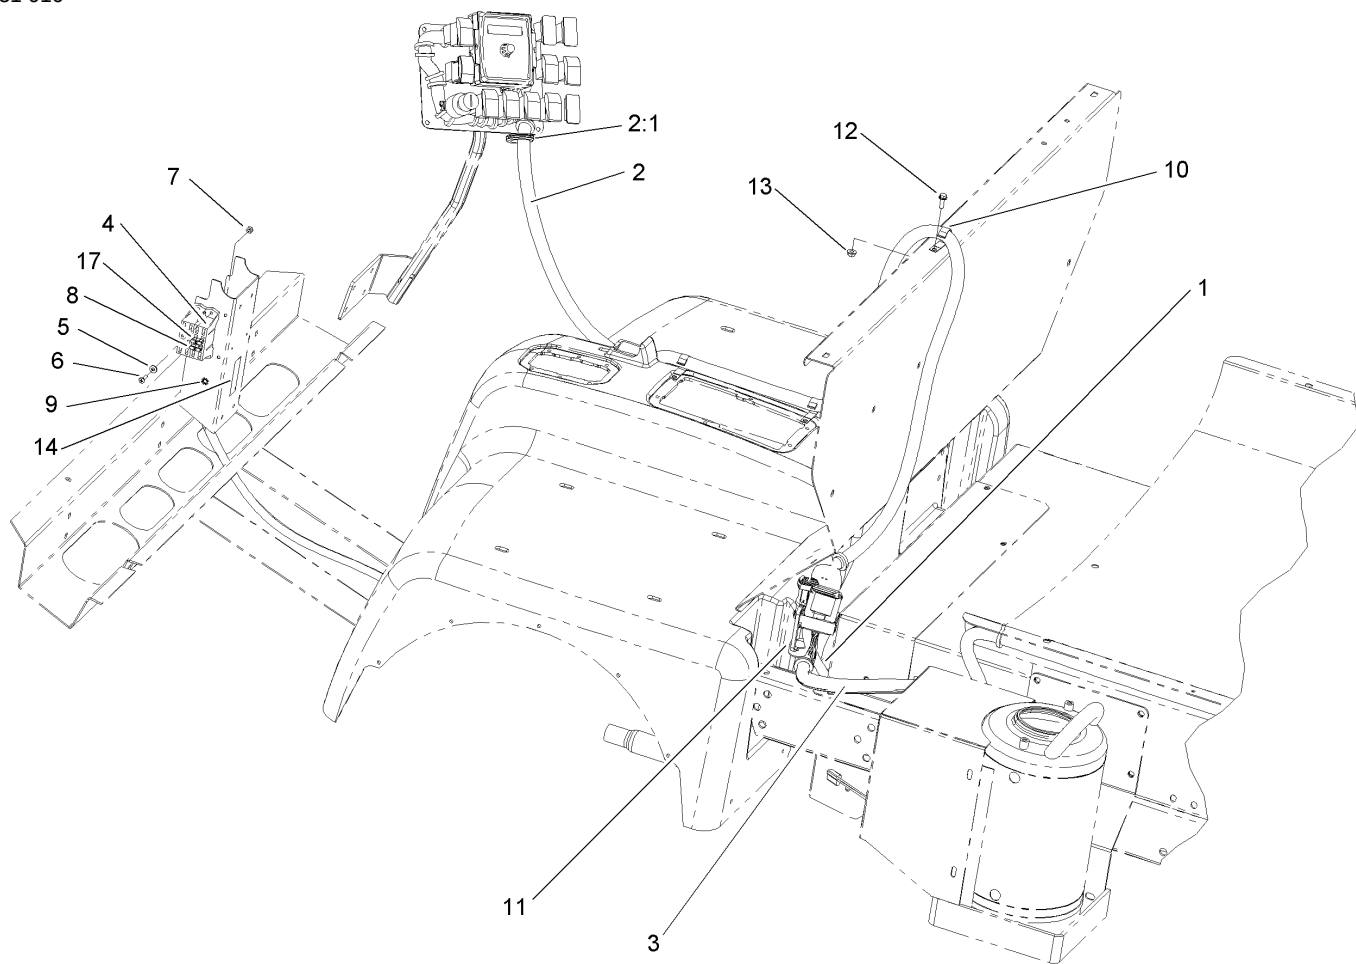 


Electrical Harness Assembly

Ref	Part No.	Qty.	Description				
1	107-2840	1	Harness-Power				
2	107-2841	1	Harness-System, Spray				
2:1	32180-033	1	Grommet				
3	107-2842	1	Harness-Control, Sprayer				
❶3:1	94-6710	4	Fuse-Blade, 2 Amp				
4	92-2641	1	Harness-Wire, Fuse Box				
5	3256-14	2	Washer-Flat				
6	3250-13	2	Screw-PPH				
7	3296-2	2	Nut-Lock				
8	218-578	1	Fuse-10 Amp				
9	3255-7	1	Washer-Lock/ext				
10	106-1362	3	J-Clamp				
11	100-8815	1	Cap-Dust, Nipple				
12	3234-4	1	Screw-HHF				
13	32128-33	1	Nut-HF				
14	106-1374	1	Decal-Block, Fuse				
17	109103	1	Fuse-30 Amp				
❶99	3290-378	8	Tie-Cable				

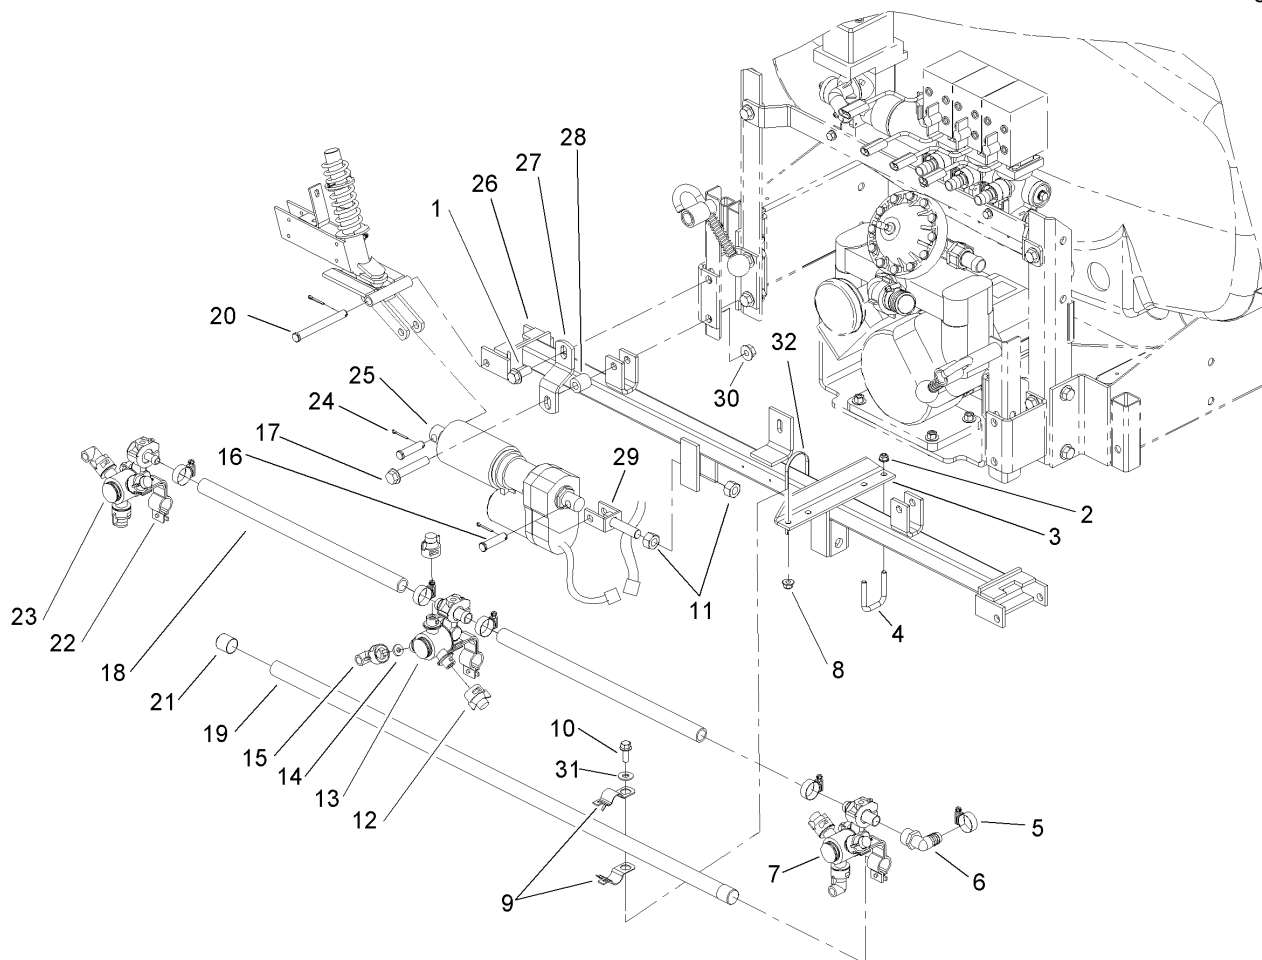 

Center Boom Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	3234-32	2	Screw-HHF	25	92-3757	2	Actuator-Boom
2	104-8300	4	Nut-Flange, NI	26	42227-03	1	Main Frame Tube ASM
3	106-5085-03	2	Plate-Boom, Center	27	104-8761-03	2	Strap-Support, Boom
4	301950	2	U-Bolt-Square	28	42257	2	Spacer-Tubular
5	2412-129	5	Clamp-Hose	29	42237	2	Adjustable Clevis ASM
6	95-9314	1	Elbow	30	32128-49	4	Nut-HHF
7	104-8790	1	Body-Turret, Double	31	3256-4	2	Washer-Flat
8	104-8301	2	Nut-Flange, NI	32	3290-378	4	Tie-Cable
9	40494	2	Clamp ASM				
10	3234-11	2	Screw-HHF				
11	3217-11	4	Nut-Hex				
12	95-9187	22	Cap-Blank				
13	104-8789	1	Body-Turret, Double				
14	40998	11	Seat-Gasket				
15	95-9186	11	Cap				
16	42195	4	Pin-Clevis				
17	3234-40	2	Screw-HF				
18	40506	2	Hose-Jumper				
19	40493-03	1	Pipe-Boom, Center				
20	283-83	2	Pin-Clevis				
21	92-8420	2	Cap-Boom				
22	95-9185	11	Clamp				
23	104-8787	1	Body-Turret, Single (Lh)				
24	3272-11	6	Pin-Cotter				

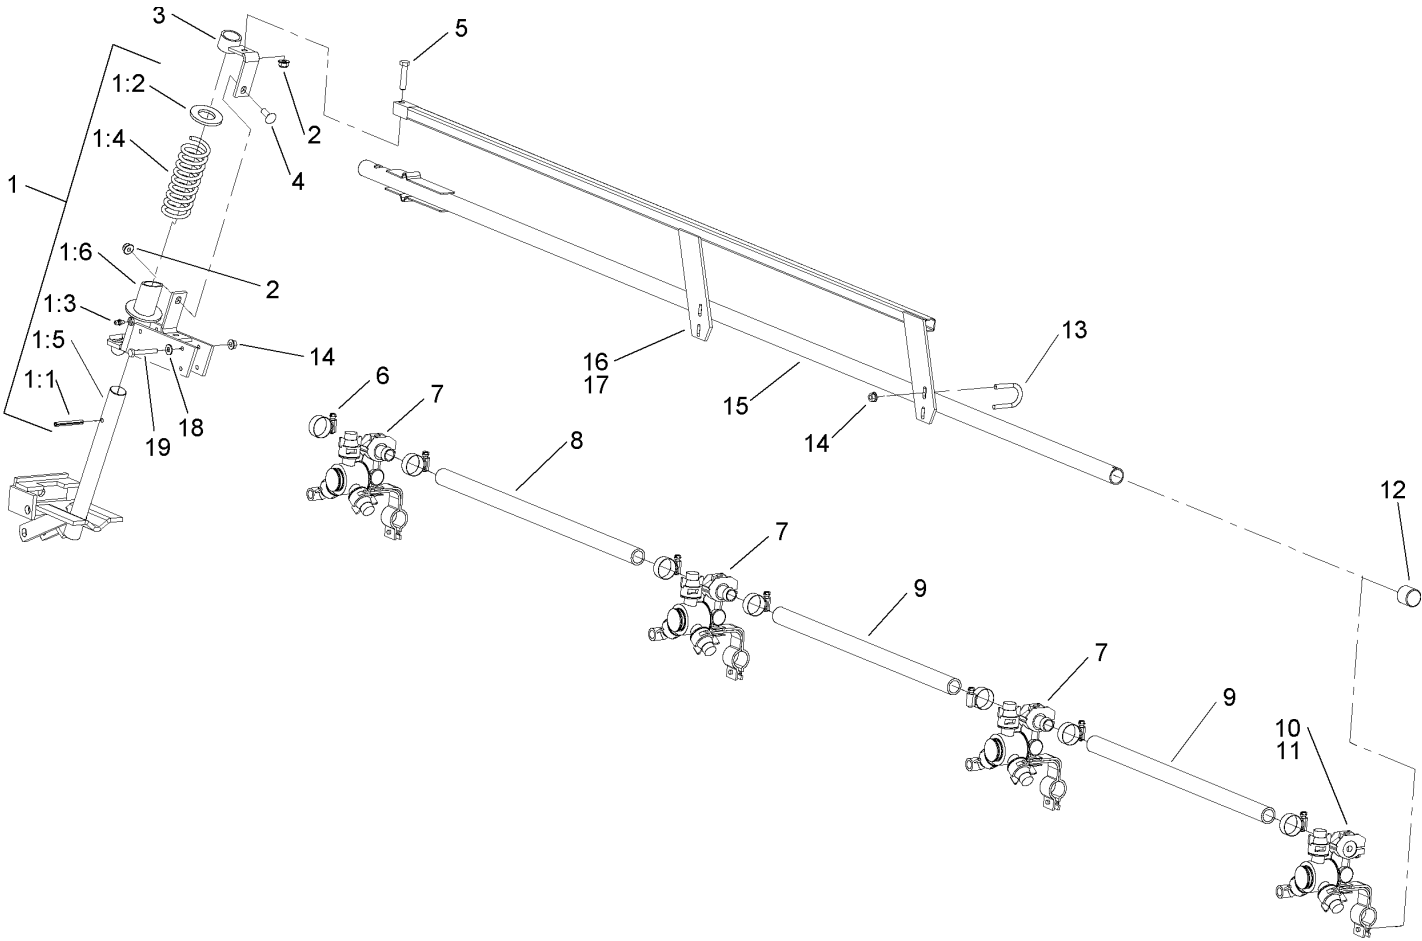 

Extension Boom Assembly

Ref	Part No.	Qty.	Description
1	42840	2	Breakaway ASM
1:1	32121-78	1	Pin-Roll
1:2	3256-62	1	Washer-Flat
1:3	302-5	1	Fitting-Grease
1:4	42196-03	1	Spring
1:5	42243-03	1	Hinge ASM
1:6	42706-03	1	Breakaway Pivot ASM
2	104-8300	4	Nut-Flange, NI
3	42707-03	2	Support Bracket ASM
4	3230-16	2	Screw-CARR
5	322-7	2	Screw-HH
6	2412-129	14	Clamp-Hose
7	104-8789	6	Body-Turret, Double
8	95-2229	2	Hose
9	40506	4	Hose-Jumper
10	104-8788	1	Body-Turret, Single (Rh)
11	104-8787	1	Body-Turret, Single (Lh)
12	92-8420	2	Cap-Boom
13	92-0010	4	U-Bolt
14	32128-32	16	Nut-HHF
15	106-5076-03	2	Boom Extension ASM
16	42710-03	1	RH Boom Support ASM
17	42711-03	1	LH Boom Support ASM
18	3256-22	8	Washer-Flat

Ref	Part No.	Qty.	Description
19	321-10	8	Screw-HH

NOTES

NOTES

NOTES

