



Three-Wheel Drive Kit Greensmaster® 3150

Model No. 04433

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Roll-Over Protection System Assembly No. 105-8258	 3	Rear Wheel and Hydraulic Assembly	 4
		Motor and Hub Assembly No. 104-2076	 5
		Hydraulic Motor Assembly No. 92-9169	 6

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR.	as required	INC.	incorporated
ASM.	assembly	LH.	left hand
CARR.	carriage	NI.	nylon insert
DEG.	degrees	PPH.	phillips pan head
FH.	flat head	PTH.	phillips truss head
GA.	gauge	PTO.	power take off
HF.	hex flange	RH.	right hand
HH.	hex head	SFH.	slotted fillister head
HHF.	hex head flange	SHH.	slotted hex head
HHFTF.	hex head flange thread forming	SHWH.	slotted hex washer head
HJ.	hex jam	SPH.	slotted pan head
HLH.	hex lag head	SQH.	square head
HOC.	height-of-cut	SRH.	slotted round head
HS.	hex	STD.	standard
HSBH.	hex socket button head	TAP.	self tapping
HSFH.	hex socket flat head	TTH.	torx truss head
HSH.	hex socket head	WH.	wing head
HWH.	hex washer head		
HWHTF.	hex washer head thread forming		
HYD.	hydraulic		

Footnotes

- ❶ Not serviced separately


3

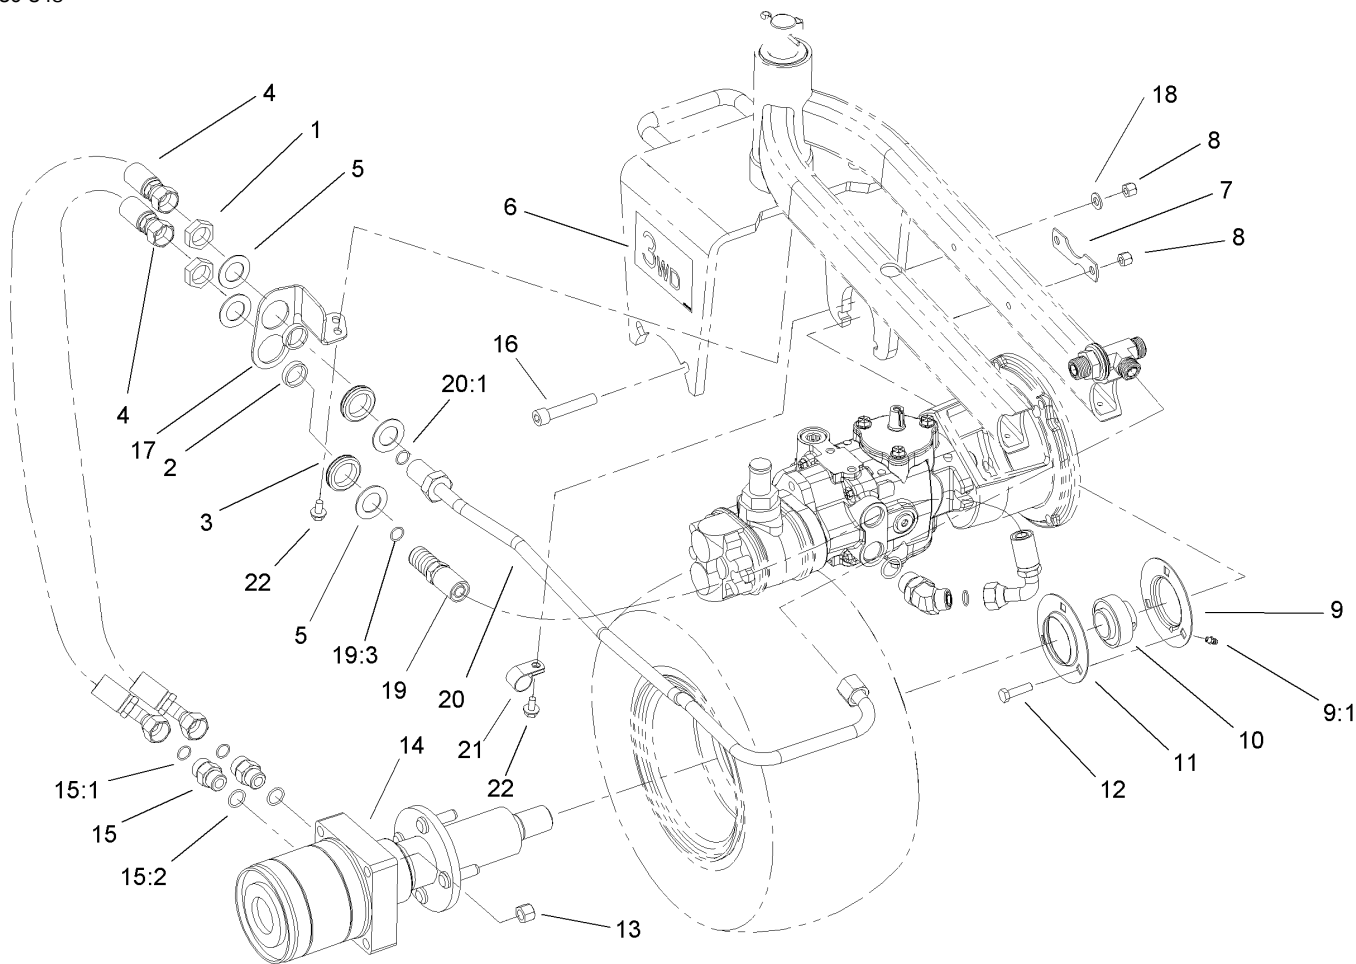

Rear Wheel and Hydraulic Assembly


Ref	Part No.	Qty.	Description
1	340-74	2	Locknut-Bulkhead
2	69-9000	2	Spacer
3	240-3	2	Grommet-Rubber
4	92-9197	2	Hose-HYD
5	69-9010	4	Washer
6	92-9752	2	Decal - 3 Wheel Drive
7	88-8350	1	Tab-Bearing
8	3296-39	3	Nut-Lock, NI
9	85-8940	1	Flangette-Relube
9:1	302-5	1	Fitting-Grease
10	251-352	1	Bearing
11	85-8950	1	Flangette-STD
12	323-29	3	Screw-HH
13	3296-23	2	Nut-Lock, NI
14	104-2076	1	Motor And Hub ASM
15	340-7	2	Adapter
15:1	237-65	1	O-Ring
15:2	237-80	1	O-Ring
16	3274-93	2	Screw-HSH
17	105-8325-01	1	Bracket-Bulkhead, 3wd
18	3256-24	1	Washer-Flat
19	105-8320	1	Hose ASM
19:3	237-65	1	O-Ring
20	105-8319	1	Tube-HYD

Ref	Part No.	Qty.	Description
20:1	237-65	1	O-Ring
21	2412-41	1	Clamp
22	32144-14	3	Screw-HWH

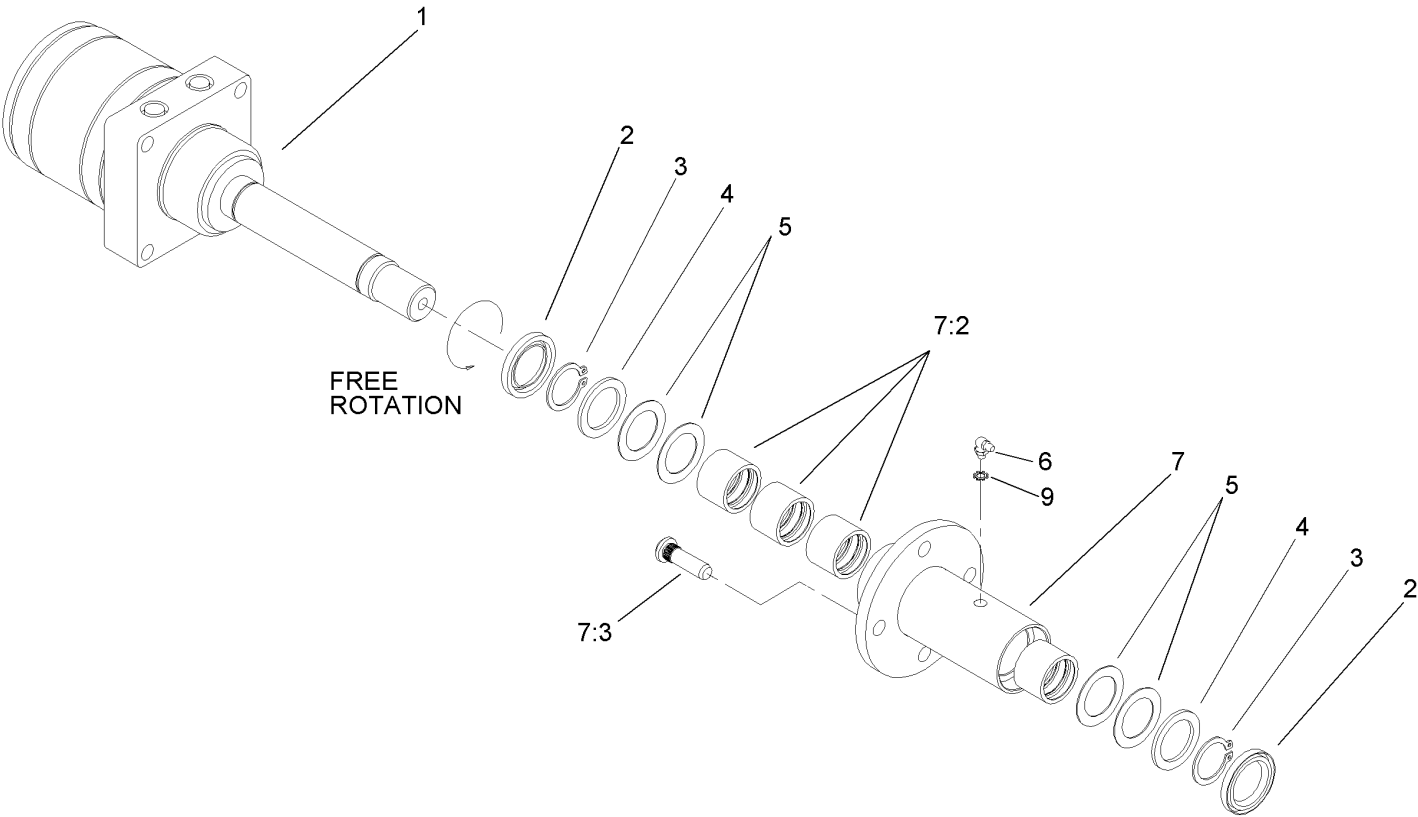

Motor and Hub Assembly No. 104-2076

Ref	Part No.	Qty.	Description				
1	92-9169	1	Motor-HYD				
2	92-9165	2	Seal				
3	32151-10	2	Ring-Snap				
4	92-9159	2	Washer				
5	92-9166	4	Washer-Thrust				
6	302-40	1	Fitting-Grease				
7	104-2075	1	3wd Hub ASM				
7:2	92-9167	4	Clutch-Roller				
7:3	10-6830	4	Stud-Type, Drive				
9	3255-7	1	Washer-Lock/ext				

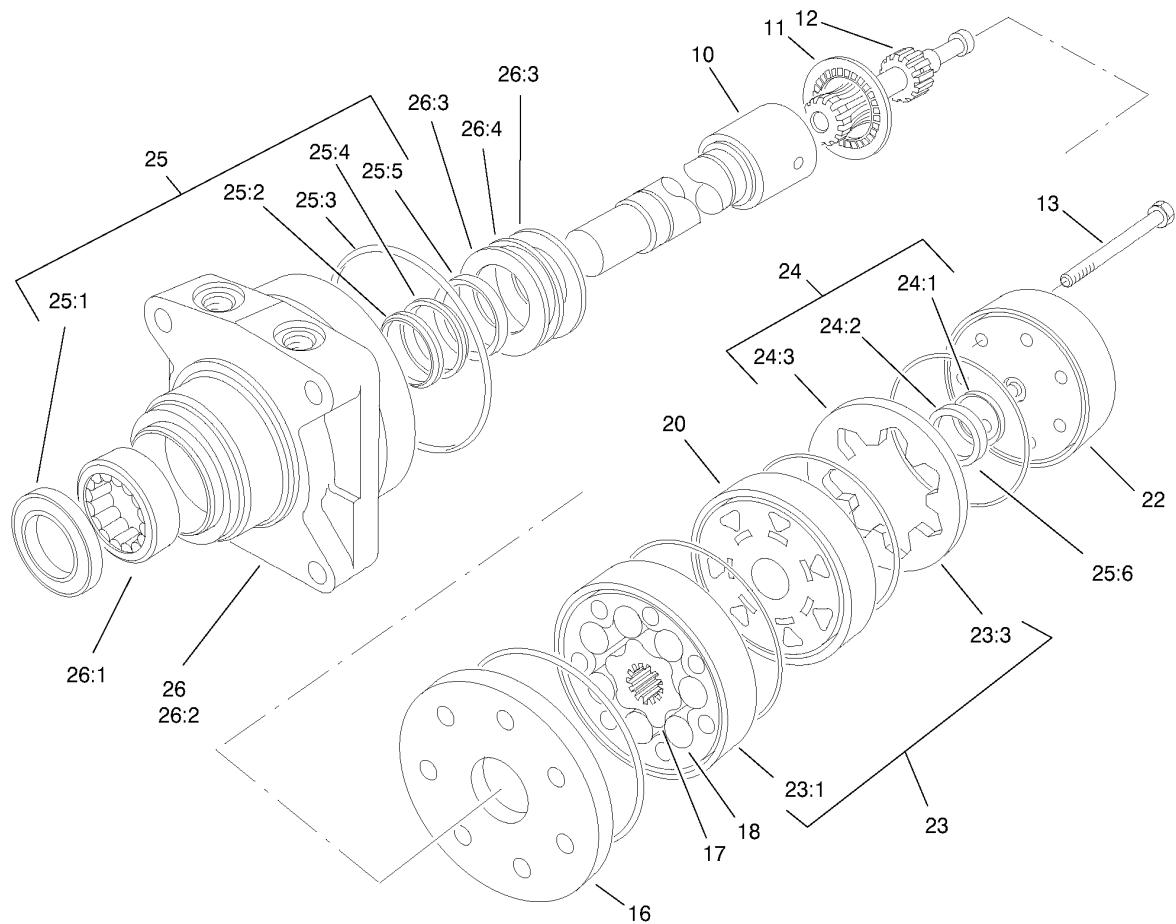

Hydraulic Motor Assembly No. 92-9169

Ref	Part No.	Qty.	Description
10	92-9760	1	Shaft-Coupling
11	76-0850	1	Bearing-Thrust
12	92-9758	7	Link-Drive
13	92-9756	1	Screw-Cap, HH
16	92-9754	1	Plate-Wear
17		1	Rotor
18		7	Vane
20	92-9755	1	Manifold
22	76-0940	1	End Cover ASM
23	92-9757	1	Set-Rotor
23:1		1	Stator
23:3		1	Ring-Commutator
24	76-0880	1	Commutator ASM
24:1		1	Seal-Commutator
24:2		1	Commutator
24:3		1	Ring-Commutator
25	76-0800	1	Seal Kit
25:1		1	Seal-Dirt & Water
25:2		1	Washer-Back-Up
25:3		5	Ring-Seal
25:4		1	Washer-Back-Up
25:5		1	Seal-Inner
25:6		1	Seal-Commutator
26	92-9753	1	Housing ASM

Ref	Part No.	Qty.	Description
26:1		1	Bearing
26:2		1	Housing
26:3		2	Washer-Thrust
26:4		1	Bearing-Thrust

NOTES

