


MODEL NO. 16575-6000001 & UP

PARTS CATALOG

21" H.P. SIDE DISCHARGE

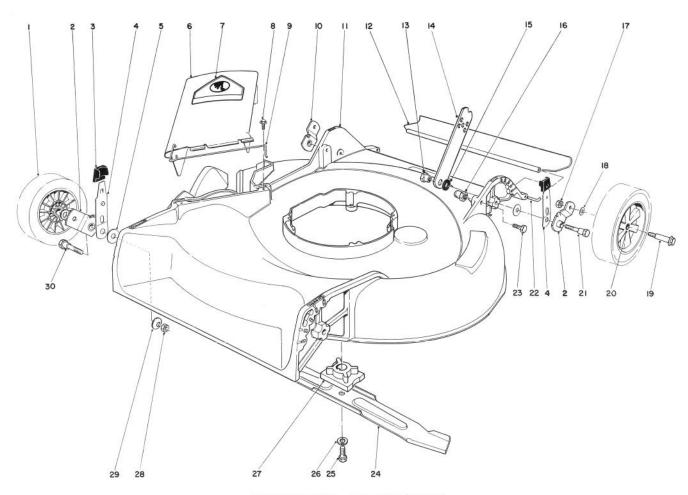


HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	11-9509	Wheel & Tire Assembly	
		(Incl. Ref. #20)	4
2	20-2140	Pivot Arm "A"	2
2	25-7740	Knob — Spring Arm	4 4 4
4	25-8000	Spring Arm	4
5	5-4460	Washer — Pivot	4
6	27-7817	Deflector Assembly	
		(Incl. Ref. #7 & 10)	1
7	39-5770	Decal — Danger	1
7 8	46-6811	Screw & Washer Assembly	2
9	20-2640	Hinge — Spring	1
10	20-2130	Pivot Arm "B"	2
11	11-4589	Housing (Incl. Ref. #8)	1
12	22-4950	Shield — Rear	1
13	27-6520	Nut — Shoulder	2 2 2
14	27-7080	Latch — Handle	2
15	3-3287	Spacer — Handle Latch	2

Ref. No.	Part No.	Description	No. Used
16	12-2080	Nut — Shoulder	2
17	52-3620	Nut — Lock	4
18	40-1940	Washer — Wheel Bolt	4
19	27-6230	Bolt — Wheel	4
20	27-6250	Bushing — Wheel	8
21	28-8880	Screw — Pivot	
22	33-3201	Rod — Rear Shield	1 2
23	322-6	Screw — Cap Hex Hd.	2
24	20-2720	Blade	1
25	26-0671	Screw — Blade	1
26	3253-22	Washer — Lock	1
27	49-7890	Retainer — Blade	1
28	3296-29	Nut — Lock	2
29	3290-456	Washer	2
30	3-0655	Screw — Pivot	2 2 2
*	12-1739	Loose Parts	1


^{*}Not illustrated

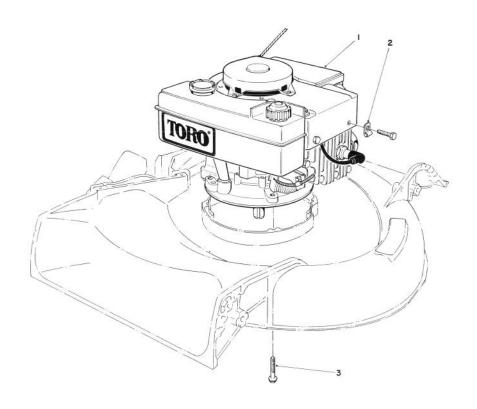

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1 2	2412-63	Engine Clamp — Casing	1
		1	


Part No.	Description	No. Used
11-0580	Screw — Engine	3
		, , ,

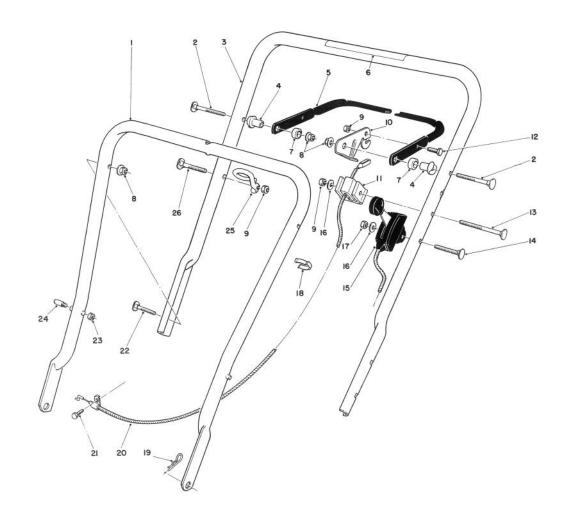

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	49-1690	Lower Handle Assembly	1
2	17-9421	Screw — Handle	2
3	12-4419	Handle — Upper (Incl. Ref. #6)	1
4	49-1630	Support — Spacer	2
5	49-4220	Bar — Control	1
6	52-7510	Decal — Warning	1
7	256-276	Spacer — Nylon	2
8	3296-58	Nut — Flange Lock	4
9	3296-42	Nut — Lock	3
10	46-7950	Lever — Control	1
11	46-6980	Support — Cable	1
12	321-3	Capscrew	1
13	46-6434	Screw — Handle	1
14	46-6430	Screw — Handle	1


Ref. No.	Part No.	Description	No. Used
15	46-6000	Control — Throttle (Bend Type #1) (Sheath Lg. 30") (Wire Lg. 2-1/8")	1
16	3256-22	Washer — Flat	2
17	3296-56	Nut — Lock	1
18	218-465	Clip — Cable (Double)	1
19	3290-255	Pin — Cotter Hair	2
20	46-8010	Cable — Brake	1
21	2210-250	Capscrew	1
22	17-9424	Screw — Handle	2
†23	3296-47	Nut — Lock	2
†24	49-2750	Pin — Handle	2 2
25	46-8080	Guide — Rope	1
26	46-6433	Screw — Handle	1

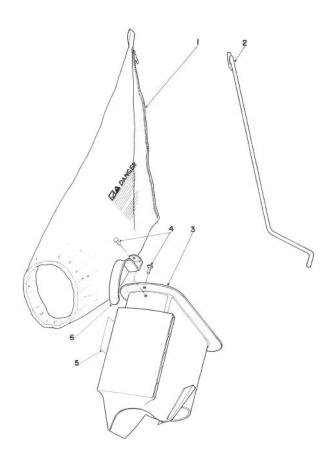

BAGGING KIT NO. 47-6510 (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
1	6-0929	Grass Bag	1
2	47-5830	Bag Rod	1
3	6-1089	Grass Chute (Incl. Ref. #4 & 6)	1

Ref. No.	Part No.	Description	No. Used
4 5	3295-26 36-5230	Rivet Decal — Bag Chute	2
6	20-4650	Handle Chute	1

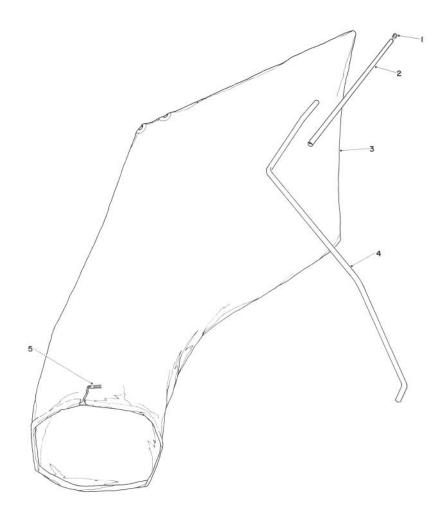


GIANT BAGGING KIT NO. 29-9750 (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
1	2410-29	Сар	1
1 2 3	29-7000	Tube 25"	1
3	8-4719	Bag (Incl. Ref. #5)	1

Ref. No.	Part No.	Description	No. Used
4 5	22-4820 3-2781	Hanger Rod Bag Cord Fasteners	1 1

ENGINE TECUMSEH MODEL NO. TVS100-44001

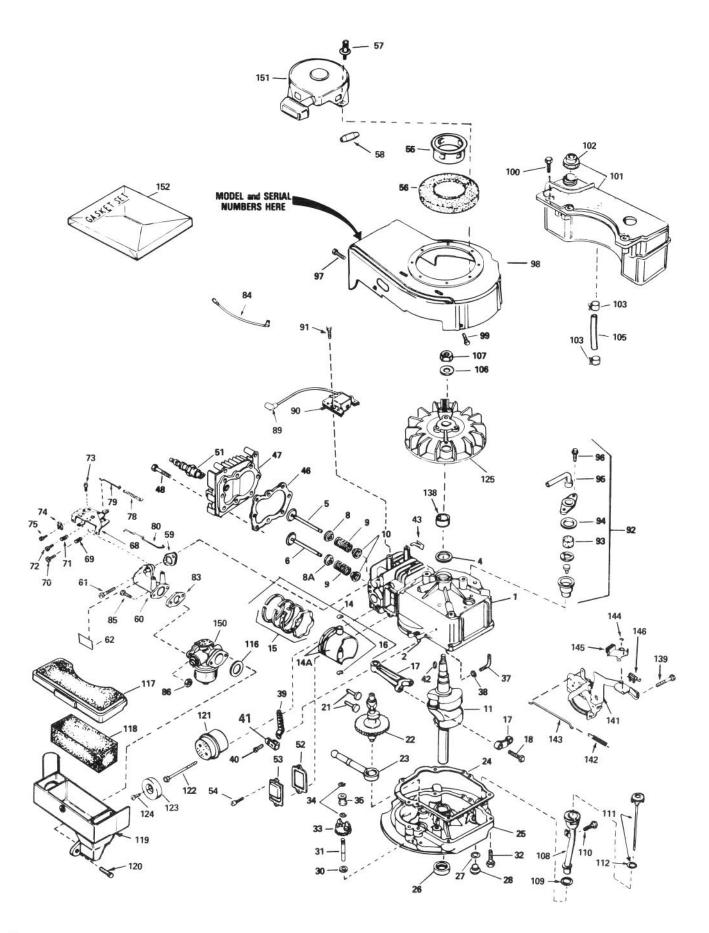


ENGINE TECUMSEH MODEL NO. TVS100-44001

Ref. No.	Part No.	Description	No. Used
1	35010	Cylinder Assembly	
		(Incl. Ref. #2 & 4)	1
2	26727	Pin — Dowel	2
4	32600	Seal — Oil	1
5	29314B	Valve — Intake (Std.)	
Ŭ	2000	(Incl. Ref. #10)	1
5	29315C	Valve — Intake (1/32" oversize)	
٠	200.00	(Incl. Ref. #10)	1
6	29313C	Valve — Exhaust (Std.)	
١ ١	200100	(Incl. Ref. #10)	1
6	29315C	Valve — Exhaust (1/32"	
١	255150	oversize) (Incl. Ref. No. 10)	1
8	35390	Seal Assembly — Intake Valve	1
8A	31671	Cap — Upper Valve Spring	
8A	310/1	(Exhaust)	1
_	04.070	Spring — Valve	2
9	31672	Cap — Lower Valve Spring	2
10	31673	Crankshaft	1
11	34440	3.4	
14	34851	Piston — Pin & Ring Assy. (Std.)	1
		(Incl. Ref. #14A, 15 & 16)	1
14	34852	Piston — Pin & Ring Assembly	
		(.010 oversize)	1
57727		(Incl. Ref. #14A, 15 & 16)	1
14	34853	Piston — Pin & Ring Assembly	
		(.020 oversize)	4
		(Incl. Ref. #14A, 15 & 16)	1
14A	32603B	Piston & Pin Assembly (Std.)	
		(Incl. Ref. #16)	1
14A	32604B	Piston & Pin Assembly (.010	
		oversize) (Incl. Ref. #16)	1
14A	32605B	Piston & Pin Assembly (.020	
		oversize) (Incl. Ref. #16)	1
15	34854	Ring Set — Piston (Std.)	1
15	34855	Ring Set — Piston	
		(.010 oversize)	1
15	34856	Ring Set — Piston	5078
		(.020 oversize)	1
16	20381	Ring — Piston Pin Retaining	2
17	30963B	Rod Assembly — Connecting	
		(Incl. Ref. #18)	1
18	32610A	Screw — Connecting Rod	2
21	27241	Lifter — Valve	2
22	33553	Camshaft (Mechanical	
		Compression Release)	1
23	29914	Pump Assembly — Oil	1
24	*35261	Gasket — Mounting Flange	1
25	34831	Flange Assembly — Mounting	
		(Incl. Ref. #26, 27, 28 & 31)	1
26	26208	Seal — Oil	1
27	*28833	Gasket — Oil Drain Plug	1
28	27244	Plug — Oil Drain	1
30	30590A	Washer — Flat	1
31	30574	Shaft — Mechanical Governor	1
32	650488	Screw — Hex Hd.	6
02	000,00		

Ref. No.	Part No.	Description	No. Used
33	30591	Gear Assembly — Governor	
		(Incl. Ref. #30)	1
34	29193	Ring — Retaining	2
35	30588A	Spool — Governor	1
37	30589	Rod — Governor (Incl. Ref. #38)	1
38	28277	Washer — Flat	1
39	31383A	Lever — Governor	1
40	650548	Screw — Hex Washer Hd.	1
41	31335	Clamp — Governor Lever	1
42	611004	Key — Flywheel (Solid State)	1
43	29443	Clip — Spring	1
46	*33015	Gasket — Cylinder Head	1
47	34342	Head — Cylinder	1
48	6021A	Screw — Hex Flange Hd.	8
51	35078	Plug — Spark (Autolite 458,	
31	33070	Champion J-19LM or	
		equivalent)	1
52	*27234	Gasket — Breather	1
53	32755	Cover — Valve Spring	1
54	650128	Screw — Fil. Hd.	2
55	34449	Hub — Starter	1
56	35009	Screen — Starter	1
57	35009	Pop Rivet	1.57
57		(Can be purchased locally)	1
58	34985	Rope Stop & Staple Assembly	1
59	*34690	Gasket — Intake Pipe	1
60	31384A	Pipe — Intake (Incl. Ref. #59)	1
61	650451	Screw — Hex Hd.	2
62	34144	Decal — Primer	1
2000	34144 33131A	Control Assy. — Remote Speed	' '
68	33131A	(Incl. Ref. #69 thru 72)	1
69	33802	Spring — Compression	1
70	650777	Screw — Fil. Hd.	1
71	31342	Spring — Compression	1
72	650549	Screw — Fil Hd	1
	30200	Screw — Hex Washer Hd.	
73	30200	Self-Tap.	2
74	27702	Clip — Conduit	1
74	27793 28942	Screw — Hex Washer Hd.	1 1
75	31361	Spring — Governor	1
78	34337	Link — Governor Spring	1 1
79	34337	Link — Governor-to-Throttle	1
80	*26756	Gasket — Carburetor	1
		Wire — Ground	1
84	34961	Screw — Hex Hd.	2
85	6201	Nut & Lockwasher	2
86	29752		1
89	610118	Cover — Spark Plug	1
90	34443A	Solid State Assembly Screw — Hex Hd.	2
91	650814		2
92	34214A	Breather Assembly	1
00	22724	(Incl. Ref. #93 thru 96)	1
93	33734	Element — Breather	1
94	*33735	Gasket — Breather	1
95	33886	Tube — Breather	1


ENGINE TECUMSEH MODEL NO. TVS100-44001 (Continued)

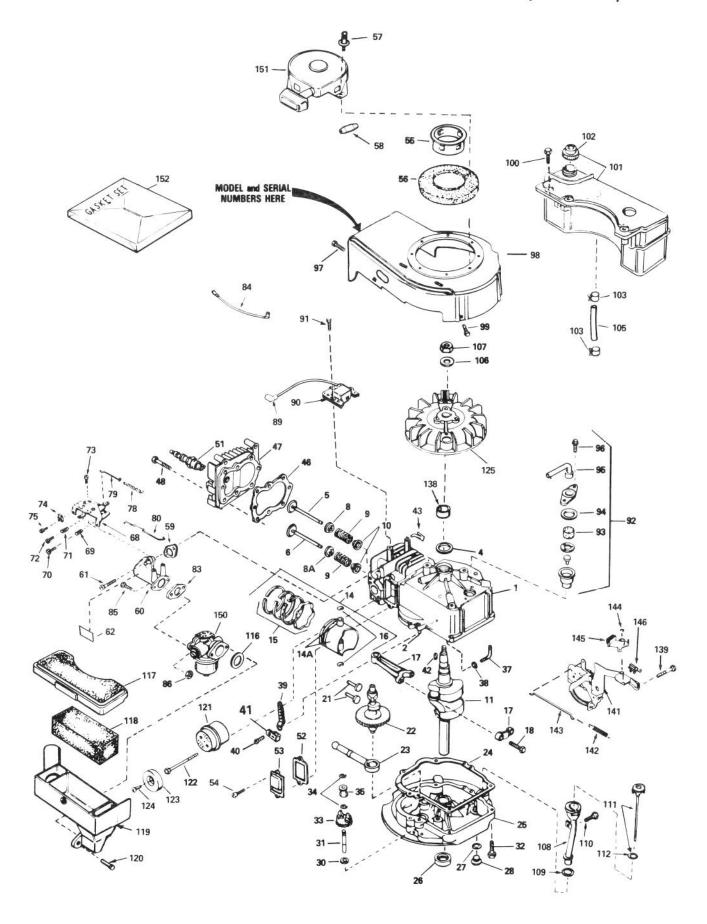

ENGINE TECUMSEH MODEL NO. TVS100-44001 (Continued)

96 30200 Screw — Hex Washer Hd. Self-Tap. 2 98 34936 Housing — Blower 1 99 650831 Screw — Hex Washer Hd. Power Lok Thread 2 100 28763 Screw — Hex Washer Hd. Tank Assembly — Fuel (Incl. Ref. #102) 1 102 33032 Cap — Fuel Tank 1 103 26460 Clamp — Fuel Line 2 106 650815 Washer — Belleville 1 107 650816 Nut — Flywheel 1 108 34264 Tube — Oil Fill 1 109 34265 Gasket — Oil Fill Tube 1 100 650562 Screw — Hex Washer Hd. 1 111 34281 Dipstick — Oil (Incl. Ref. #112) 1 12 33590 "O" Ring 1 116 *34338 Gasket — Air Cleaner 1 117 34341 Cover — Air Cleaner 1	Ref. No.	Part No.	Description	No. Used
97 30200 Screw — Hex Washer Hd.	96	30200	Screw — Hex Washer Hd.	
98 34936 Housing — Blower 1 99 650831 Screw — Hex Washer Hd. 2 100 28763 Screw — Hex Washer Hd. 3 101 34476 Tank Assembly — Fuel (Incl. Ref. #102) 1 102 33032 Cap — Fuel Tank 1 103 26460 Clamp — Fuel Line 2 105 30705 Line — Fuel 1 106 650815 Washer — Belleville 1 107 650816 Nut — Flywheel 1 108 34264 Tube — Oil Fill 1 109 34265 Gasket — Oil Fill Tube 1 110 650562 Screw — Hex Washer Hd. 1 111 34281 Dipstick — Oil (Incl. Ref. #112) 1 112 33590 "O" Ring 1 116 *34338 Gasket — Air Cleaner 1			H 10 가입니다 : 점속 사람 다	2
98	97	30200	[[마루(4)[[마루(4]]]][[[마루(4]]] [[마루(4]][[마루(4]]][[마루(4]][[마루(4]]][[마루(4]][[마루(4]][[[마루(4]][[[마루(4]][[[n]][[n]][[n]][[[n]][[[n]][[[n]][[[n]][[[n]][[[n]][[[n]][[[n]][[[n]][[[n]][[n]][[[
99 650831 Screw — Hex Washer Hd. Power Lok Thread 2 100 28763 Screw — Hex Washer Hd. 3 101 34476 Tank Assembly — Fuel (Incl. Ref. #102) 1 102 33032 Cap — Fuel Tank 1 103 26460 Clamp — Fuel Line 2 105 30705 Line — Fuel 1 106 650815 Washer — Belleville 1 107 650816 Nut — Flywheel 1 108 34264 Tube — Oil Fill 1 109 34265 Gasket — Oil Fill Tube 1 110 650562 Screw — Hex Washer Hd. 1 111 34281 Dipstick — Oil (Incl. Ref. #112) 1 112 33590 "O" Ring 1 116 *34338 Gasket — Air Cleaner 1			Control of the contro	100000
Power Lok Thread 2 100 28763 Screw — Hex Washer Hd. 3 101 34476 Tank Assembly — Fuel (Incl. Ref. #102) 1 102 33032 Cap — Fuel Tank 1 103 26460 Clamp — Fuel Line 2 105 30705 Line — Fuel Line 1 106 650815 Washer — Belleville 1 107 650816 Nut — Flywheel 1 108 34264 Tube — Oil Fill 1 109 34265 Gasket — Oil Fill Tube 1 110 650562 Screw — Hex Washer Hd. 1 111 34281 Dipstick — Oil (Incl. Ref. #112) 1 112 33590 "O" Ring 1 116 *34338 Gasket — Air Cleaner 1				1
100 28763 Screw — Hex Washer Hd. 3 101 34476 Tank Assembly — Fuel (Incl. Ref. #102) 1 102 33032 Cap — Fuel Tank 1 103 26460 Clamp — Fuel Line 2 105 30705 Line — Fuel 1 106 650815 Washer — Belleville 1 107 650816 Nut — Flywheel 1 108 34264 Tube — Oil Fill 1 109 34265 Gasket — Oil Fill Tube 1 110 650562 Screw — Hex Washer Hd. 1 111 34281 Dipstick — Oil (Incl. Ref. #112) 1 112 33590 "O" Ring 1 116 *34338 Gasket — Air Cleaner 1	99	650831		
101 34476 Tank Assembly — Fuel (Incl. Ref. #102) 1 102 33032 Cap — Fuel Tank 1 103 26460 Clamp — Fuel Line 2 105 30705 Line — Fuel 1 106 650815 Washer — Belleville 1 107 650816 Nut — Flywheel 1 108 34264 Tube — Oil Fill 1 109 34265 Gasket — Oil Fill Tube 1 110 650562 Screw — Hex Washer Hd. 1 111 34281 Dipstick — Oil (Incl. Ref. #112) 1 112 33590 "O" Ring 1 116 *34338 Gasket — Air Cleaner 1			A SECTION OF THE SECT	
(Incl. Ref. #102) 1 1 1 1 1 1 1 1 1				3
102 33032 Cap — Fuel Tank 1 103 26460 Clamp — Fuel Line 2 105 30705 Line — Fuel 1 106 650815 Washer — Belleville 1 107 650816 Nut — Flywheel 1 108 34264 Tube — Oil Fill 1 109 34265 Gasket — Oil Fill Tube 1 110 650562 Screw — Hex Washer Hd. 1 111 34281 Dipstick — Oil (Incl. Ref. #112) 1 112 33590 "O" Ring 1 116 *34338 Gasket — Air Cleaner 1	101	344/6		1
103 26460 Clamp — Fuel Line 2 105 30705 Line — Fuel 1 106 650815 Washer — Belleville 1 107 650816 Nut — Flywheel 1 108 34264 Tube — Oil Fill 1 109 34265 Gasket — Oil Fill Tube 1 110 650562 Screw — Hex Washer Hd. 1 111 34281 Dipstick — Oil (Incl. Ref. #112) 1 112 33590 "O" Ring 1 116 *34338 Gasket — Air Cleaner 1	102	22022		
105 30705 Line — Fuel 1 106 650815 Washer — Belleville 1 107 650816 Nut — Flywheel 1 108 34264 Tube — Oil Fill 1 109 34265 Gasket — Oil Fill Tube 1 110 650562 Screw — Hex Washer Hd. 1 111 34281 Dipstick — Oil (Incl. Ref. #112) 1 112 33590 "O" Ring 1 116 *34338 Gasket — Air Cleaner 1				1
106 650815 Washer — Belleville 1 107 650816 Nut — Flywheel 1 108 34264 Tube — Oil Fill 1 109 34265 Gasket — Oil Fill Tube 1 110 650562 Screw — Hex Washer Hd. 1 111 34281 Dipstick — Oil (Incl. Ref. #112) 1 112 33590 "O" Ring 1 116 *34338 Gasket — Air Cleaner 1				
107 650816 Nut — Flywheel 1 108 34264 Tube — Oil Fill 1 109 34265 Gasket — Oil Fill Tube 1 110 650562 Screw — Hex Washer Hd. 1 111 34281 Dipstick — Oil (Incl. Ref. #112) 1 112 33590 "O" Ring 1 116 *34338 Gasket — Air Cleaner 1				
108 34264 Tube — Oil Fill 1 109 34265 Gasket — Oil Fill Tube 1 110 650562 Screw — Hex Washer Hd. 1 111 34281 Dipstick — Oil (Incl. Ref. #112) 1 112 33590 "O" Ring 1 116 *34338 Gasket — Air Cleaner 1		130 30 30 30 30 10 10 10		
109 34265 Gasket — Oil Fill Tube 1 110 650562 Screw — Hex Washer Hd. 1 111 34281 Dipstick — Oil (Incl. Ref. #112) 1 112 33590 "O" Ring 1 116 *34338 Gasket — Air Cleaner 1				
110 650562 Screw — Hex Washer Hd. 1 111 34281 Dipstick — Oil (Incl. Ref. #112) 1 112 33590 "O" Ring 1 116 *34338 Gasket — Air Cleaner 1				100
111 34281 Dipstick — Oil (Incl. Ref. #112) 1 112 33590 "O" Ring 1 116 *34338 Gasket — Air Cleaner 1				1
112 33590 "O" Ring 1 116 *34338 Gasket — Air Cleaner 1		34281	Dipstick — Oil (Incl. Ref. #112)	1
	112	33590		
117 34341 Cover — Air Cleaner 1	116	*34338		887
	117	34341	Cover — Air Cleaner	1


Ref. No.	Part No.	Description	No. Used
118	34340	Element — Air Cleaner	1
119	34858	Body — Air Cleaner	1
120	650806	Screw — Hex Washer Hd.	
		Shoulder	2
121	27181B	Muffler (Incl. Ref. #122)	1
122	650795	Screw — Hex Hd.	2
123	32431	Cover — Muffler	1
124	650643	Screw — Pan Hd. Self-Tap.	1
125	611046A	Flywheel	1
138	34080	Spacer — Flywheel Key	1
139	650839	Screw — Hex Hd. Self-Tap.	2
141	35015	Bracket Assembly — Brake	1
142	34965	Spring — Extension	1
143	34966	Link — Control	1
144	32309	Ring — Retaining	1
145	34968	Lever — Brake	1
146	610973	Terminal Assembly	1
150	632098	Carburetor (Inc. Ref. #83)	1
151	590420A	Starter — Rewind	1
152	33238C	Gasket Set	
2020	re 2000 filli	(Incl. Items Marked *)	1

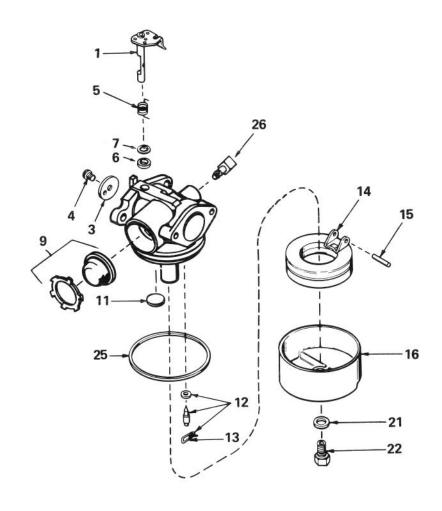

CARBURETOR NO. 632098

Ref. No.	Part No.	Description	No. Used
1	631615	Shaft & Lever Assy., Throttle	1
3	631616	Shutter — Throttle	1
4	650506	Screw — Throttle Shutter	1
5	631767	Spring — Throttle Return	1
6	631971	Seal — Dust	1
7	631184	Washer — Flat	1
9	632047	Primer Assembly	1
11	631027	Plug — Welch	1
12	631021	Inlet Needle — Seat & Clip Assy. (Incl. Ref. #13)	1
		2	

Ref. No.	Part No.	Description	No. Used
13	631022	Clip — Inlet Needle	1
14	632019	Float — Carburetor	1
15	631024	Shaft — Float	1
16	631700	Bowl — Float	1
21	631334	Gasket — Bowl-To-Body	1
22	631937	Nut — Float Bowl	1
25	631028	Gasket — Bowl-To-Body	1
26	631807	Fitting — Fuel Inlet	1

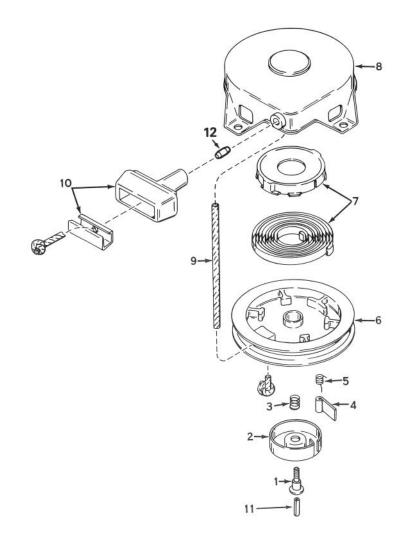

REWIND STARTER NO. 590420A

Ref. No.	Part No.	Description	No. Used
1	590409A	Screw — Retainer	1
2	590410	Retainer — R.H.	1
3	590411	Spring — Brake	1
4	590148	Dog — Starter	1
5	590412	Spring — R.H. Dog	1
6	590413A	Pulley	1
7	590414	Spring & Keeper Assy.	1

Ref. No.	Part No.	Description	No. Used
8	590536	Housing Assy. — Starter	
		(Incl. #1)	1 1
9	590535	Rope — Starter	1 0 1
10	590387	Handle Assy. — Starter	1
11	590459	Pin — Centering	1
12	34985	Stop & Staple — Rope	1
1		(Not used on all models)	1

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Mower has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on the mower housing between the rear wheels. In any correspondence concerning the mower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

- 1. Model and serial numbers of the mower.
- 2. Part number, description, and quantity of part(s) desired.

Note: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

The Toro Promise

A ONE YEAR LIMITED WARRANTY

The Toro Company promises to repair your TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should you feel your TORO Product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

- Contact any Authorized TORO Service Dealer, TORO Master Service Dealer, or TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
- He will either instruct you to return the product to him or recommend another Authorized TORO Service outlet which might be more convenient.
- Bring the product along with your original sales slip, or other evidence of purchase date, to the service dealer.
- The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the dealer's analysis of the defect or the service performed, you may contact us.

Write:

TORO Consumer Service Department 8111 Lyndale Avenue South Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND

FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Service Dealer using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Service Account are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason

you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.