

Fifth Wheel Hitch Kit Heavy-Duty Workman® Vehicles

Model No. 44230 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2004 All Rights Reserved 3352-329

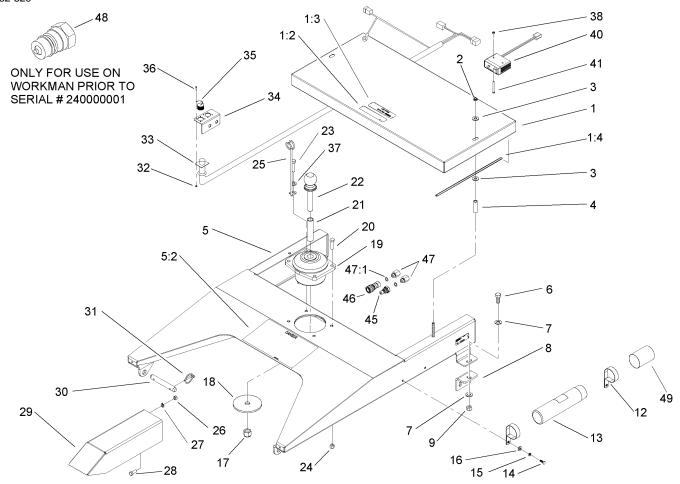


Fifth Wheel Hitch Assembly

Ref	Part No.	Qty.	Description
1	100-9382	1	Access Lid ASM
1:2	93-6689	1	Decal-No Riders
1:3	54-0890	1	Decal-Rotating
1:4	92-4527	1	U-Channel, Lid
2	3296-59	2	Nut-Lock, NI
3	3256-4	4	Washer-Flat
4	92-4528	2	Spacer-Lid
5	100-9383	1	Frame ASM
5:2	01-506-1300	1	Decal-Danger
6	325-5	2	Screw-HH
7	3256-26	4	Washer-Flat
8	92-2667-03	2	Bracket-Attachment, Mount
9	3296-25	2	Nut-Lock, NI
12	2412-133	2	R-Clamp
13	104-7050	1	Housing-Manual
14	321-4	2	Screw-HH
15	3253-3	2	Washer-Lock
16	3256-2	2	Washer-Flat
17	3296-51	1	Nut-Lock, NI
18	92-4508-03	1	Washer-Rebound
19	01-286-0740	1	Isolator-Rubber
20	324-6	3	Screw-HH
21	92-4523	1	Spacer-Rebound
22	92-4550	1	Hitch Ball ASM

Ref	Part No.	Qty.	Description
23	324-7	1	Screw-HH
24	3296-48	4	Nut-Lock, NI
25	92-4544	1	Bracket-Wire
26	3217-7	4	Nut-Hex
27	3253-5	4	Washer-Lock
28	323-6	4	Screw-HH
29	92-4509-03	1	Anti-Tip Bar ASM
30	92-1233	2	Pin-Clevis
31	92-1298	4	Pin-Lynch
32	3296-52	4	Nut-Lock NI
33	107-8001	1	Harness-Wire, Electric Brake
34	92-4524-03	1	Bracket
35	92-4541	1	Plug-Cap, Wire
36	3290-93	4	Screw-Head, Pan
37	3256-25	1	Washer-Flat
38	3296-2	2	Nut-Lock
40	108-3144	1	Controler-Brake, Electric
41	32105-20	2	Screw-HH
43	218-594	1	Fuse-20 Amp (Not Illustrated)
45	106-7969	1	Coupler-Quick, Male
46	106-7968	1	Coupler-Quick, Female
47	106-1381	2	Fitting-Straight
47:1	237-42	1	O-Ring
48	92-2672	2	Coupling-HYD

2-1 3352-329

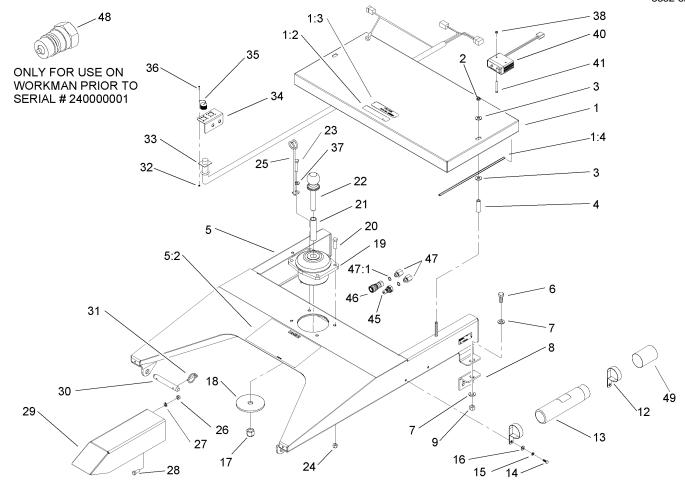

Fifth Wheel Hitch Assembly (continued)

Ref	Part No.	Qty.	Description		
49	104-7048	1			
			'		
		I			
		I			
		I			

