



Mid-Size ProLine Pistol Grip Hydro 15 HP with 48in Side Discharge Mower

Model No. 30528 - 240002001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Engine and Fuel System Assembly	 3	Head / Valve / Breather Assembly Kohler CV15T 41624	 20
Transmission and Drive Pulley Assembly	 4	Ignition / Electrical Assembly Kohler CV15T 41624	 21
Linkage Assembly	 5	Blower Housing and Baffle Assembly Kohler CV15T 41624	 22
Wheel Drive Assembly	 6	Starting System Assembly Kohler CV15T 41624	 23
Hydraulic Assembly	 7	Fuel System Assembly Kohler CV15T 41624	 24
Lower Control Assembly	 9	Engine Control Assembly Kohler CV15T 41624	 25
Upper Handle Assembly	 10	Air Intake / Filtration Assembly Kohler CV15T 41624	 26
Electrical Assembly	 12	Exhaust Assembly Kohler CV15T 41624	 27
Deck Assembly	 13		
Front Caster and Blade Brake Assembly	 14		
Spindle, Blade and Belt Assembly	 16		
Crankshaft Assembly Kohler CV15T 41624	 17		
Crankcase Assembly Kohler CV15T 41624	 18		
Oil Pan / Lubrication Assembly Kohler CV15T 41624	 19		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
CARR. carriage	NI. nylon insert
DEG. degrees	PPH. phillips pan head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power take off
HF. hex flange	RH. right hand
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HS. hex	STD. standard
HSBH. hex socket button head	TAP. self tapping
HSFH. hex socket flat head	TTH. torx truss head
HSH. hex socket head	WH. wing head
HWH. hex washer head	
HWHTF. hex washer head thread forming	
HYD. hydraulic	


Footnotes

- | | |
|--|---------------------------|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain Parts From Your Local Kohler Dealer | |

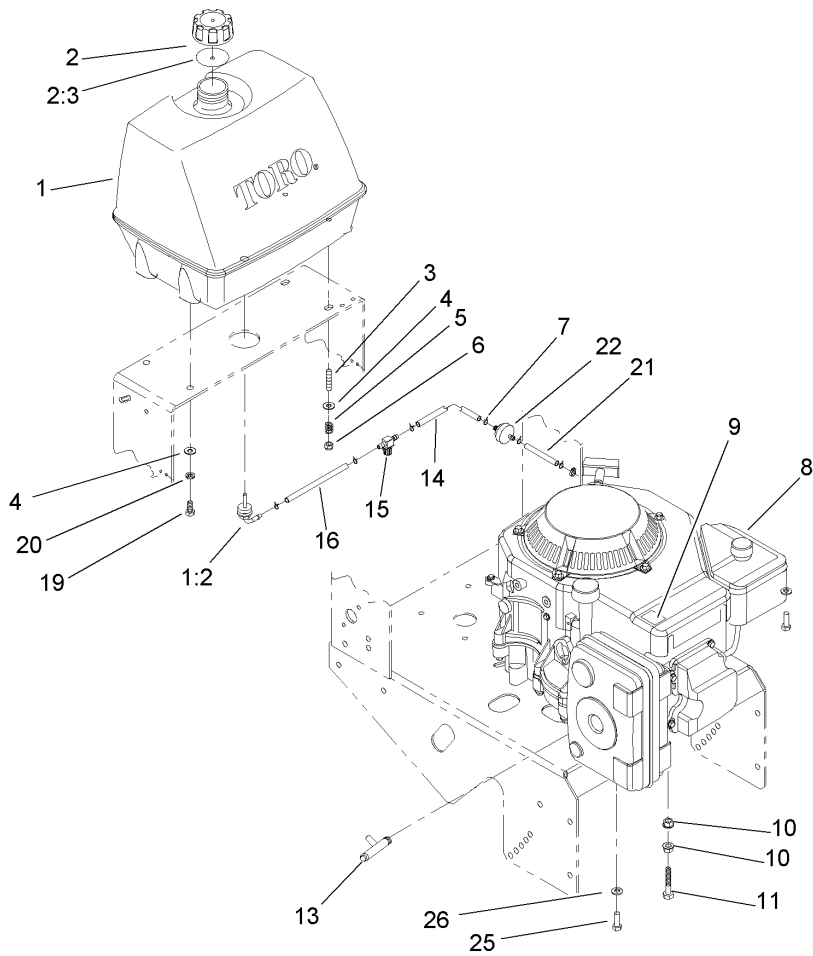

Engine and Fuel System Assembly


Ref	Part No.	Qty.	Description				
1	106-0730	1	Fuel Tank ASM				
1:2	103-2605	1	Fitting-Fuel, Bulkhead				
2	88-3980	1	Gas Cap ASM				
2:3	88-4010	1	Gasket-Cap, Gas				
3	1-633023	2	Stud				
4	3256-23	4	Washer-Flat				
5	1-633349	2	Spring-Tank, Fuel				
6	3296-47	2	Nut-Lock, NI				
7	1-303077	6	Clamp				
8		1	Engine-Kohler, Cv15t-41624				
9	106-0699	1	Decal-Warning, Hot Surfaces				
10	3290-357	2	Nut-HHF				
11	323-13	1	Screw-HH				
13	103-1965	1	Valve-Drain, Oil				
14	1-603776	1	Hose-Line, Fuel				
15	1-603770	1	Valve-Fuel				
16	1-603955	1	Hose-Fuel				
19	322-3	2	Screw-HH				
20	1-805005	2	Washer-Lock				
21	47-2983	1	Hose-Fuel				
22	1-303197	1	Filter-Fuel				
25	33114-025	4	Screw-HH				
26	1-303334	3	Washer-Spring				

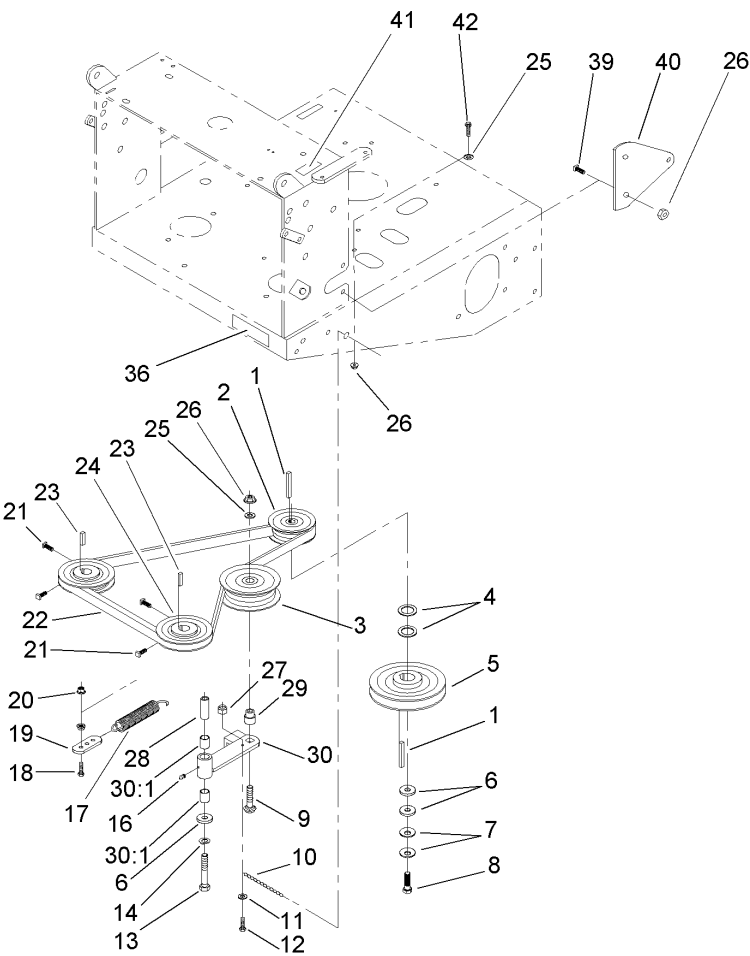

Transmission and Drive Pulley Assembly

Ref	Part No.	Qty.	Description
1	1-807259	2	Key
2	1-653035	1	Pulley
3	1-603843	1	Pulley-Idler
4	1-523157	2	Washer-Spacer
5	103-1667	1	Sheave
6	1-373034	3	Washer
7	1-603610	2	Washer-Spring
8	3212-6	1	Screw-HH
9	3231-29	1	Screw-CARR
10	1-323365	1	Chain-Link, Twist
11	3256-14	1	Washer-Flat
12	1-809069	1	Screw-Cap Socket Head
13	323-12	1	Screw-HH
14	3253-5	1	Washer-Lock
16	302-19	1	Fitting-Grease
17	1-603402	1	Spring-Extension
18	322-5	1	Screw-HH
19	1-603801	1	Anchor-Spring
20	32128-20	6	Nut-HF
21	1-803050	4	Screw-Set
22	106-2740	1	V-Belt-Hydro Drive
23	1-807272	2	Key
24	1-413010	2	Sheave W/hub
25	3256-24	2	Washer-Flat


Ref	Part No.	Qty.	Description
26	3290-357	7	Nut-HHF
27	3296-2	1	Nut-Lock
28	1-603044	1	Bushing
29	1-603496	1	Bushing-Idler
30	1-602521	1	Idler Arm ASM
30:1	103-4681	2	Sleeve-Bearing
36	98-0776	1	Decal-Caution
39	323-4	2	Screw-HH
40	1-413497	1	Bellcrank
41	95-2814	1	Decal-Shut Off, Fuel
42	323-7	1	Screw-HH

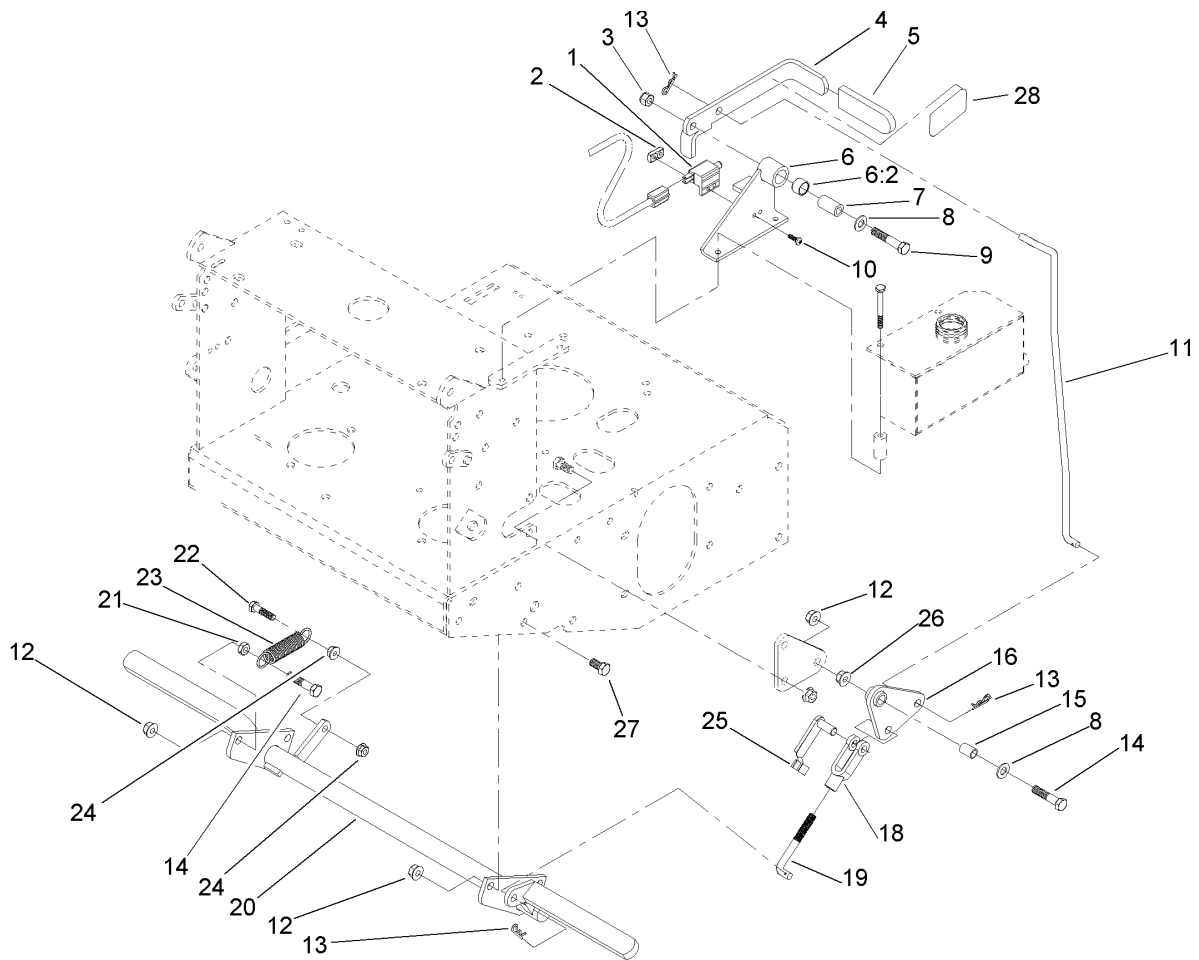

Linkage Assembly

Ref	Part No.	Qty.	Description
1	1-513051	1	Switch-Open, Normally
2	1-633181	1	Plate-Tapped
3	3296-39	1	Nut-Lock, NI
4	1-412501-03	1	Lever-Parkbrake
5	1-303020	1	Grip-Lever
6	1-414504	1	Bracket ASM
6:2	1-413347	2	Sleeve-Bushing
7	1-413344	1	Bushing-Pivot
8	3256-24	2	Washer-Flat
9	323-10	1	Screw-HH
10	3290-500	2	Screw-PPH
11	1-413496	1	Linkage-Upper
12	3290-357	5	Nut-HHF
13	1-806003	3	Pin-Hair
14	323-9	2	Screw-HH
15	1-303548	1	Bushing-Plastic
16	1-414508	1	Bellcrank ASM
18	1-633131	1	Yoke-Linkage, Brake
19	1-413489	1	Linkage-Lower
20	103-2004-03	1	Brake
21	3218-3	1	Nut-Jam
22	322-6	1	Screw-HH
23	1-323161	1	Spring-Idler
24	32128-20	2	Nut-HF


Ref	Part No.	Qty.	Description
25	103-2399	1	Pin-Spring, Clevis
26	32128-21	1	Nut-HF
27	323-4	3	Screw-HH
28	103-2103	1	Decal-Brake, Park

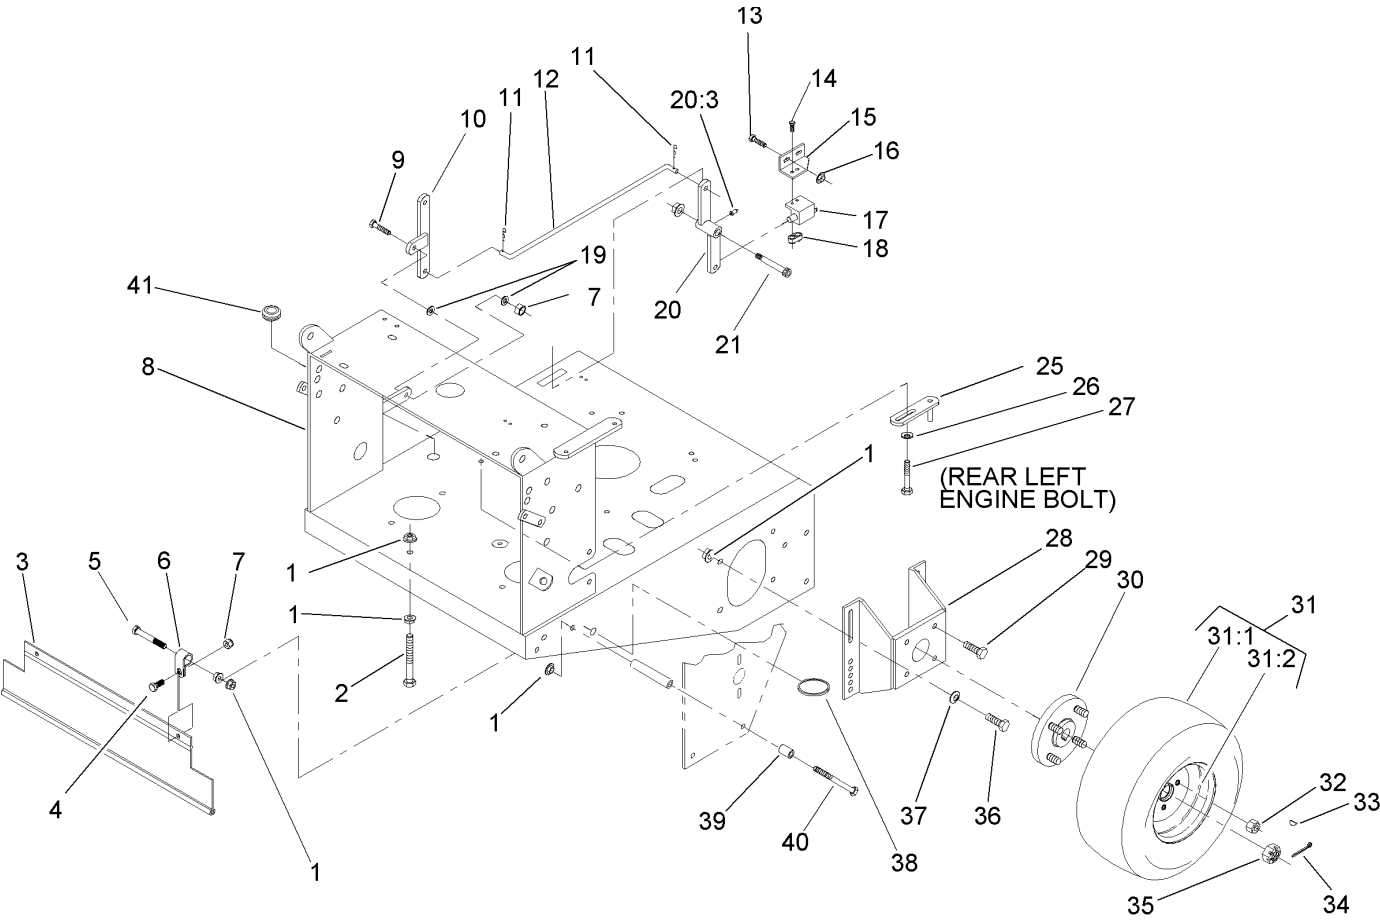

Wheel Drive Assembly

Ref	Part No.	Qty.	Description
1	3290-357	11	Nut-HHF
2	323-11	1	Screw-HH
3	103-2056	1	Shield-Drag
4	322-3	2	Screw-HH
5	323-13	4	Screw-HH
6	1-413510	2	Clip-Loom
7	3296-29	3	Nut-Lock, NI
8	103-6495-01	1	Deck-Engine
9	322-6	2	Screw-HH
10	1-322090-01	1	Bellcrank ASM
11	1-806003	3	Pin-Hair
12	1-323172	1	Linkage-Engage, Blade
13	321-3	2	Screw-HH
14	3290-500	1	Screw-PPH
15	1-323213	1	Bracket-Switch, Blade
16	32128-33	2	Nut-HF
17	1-513051	1	Switch-Open, Normally
18	1-633181	1	Plate-Tapped
19	3256-23	5	Washer-Flat
20	1-322108	1	Bellcrank ASM
20:3	302-40	1	Fitting-Grease
21	1-809062	1	Screw
25	1-322110	1	Guide-Belt
26	1-303334	1	Washer-Spring


Ref	Part No.	Qty.	Description
27	33114-030	1	Screw-HH
28	1-402062-01	2	Mount-Motor
29	3234-12	8	Screw-HHF
30	1-602997	2	Hub W/studs
31		2	Wheel And Tire ASM
31:1	1-613264	1	Tire-Turfmaster
31:2	1-603715	1	Wheel-Rim
32	242-50	8	Nut-Lug
33	1-807019	2	Key-Woodruff
34	1-806800	2	Pin-Cotter
35	32136-5	2	Nut-Hex Slotted
36	323-6	8	Screw-HH
37	98-5975	12	Washer-Belleville
38	1-323366	1	Ring-Split
39	105-4820	1	Spacer-Short
40	323-23	1	Screw-HH
41	1-543296	1	Grommet

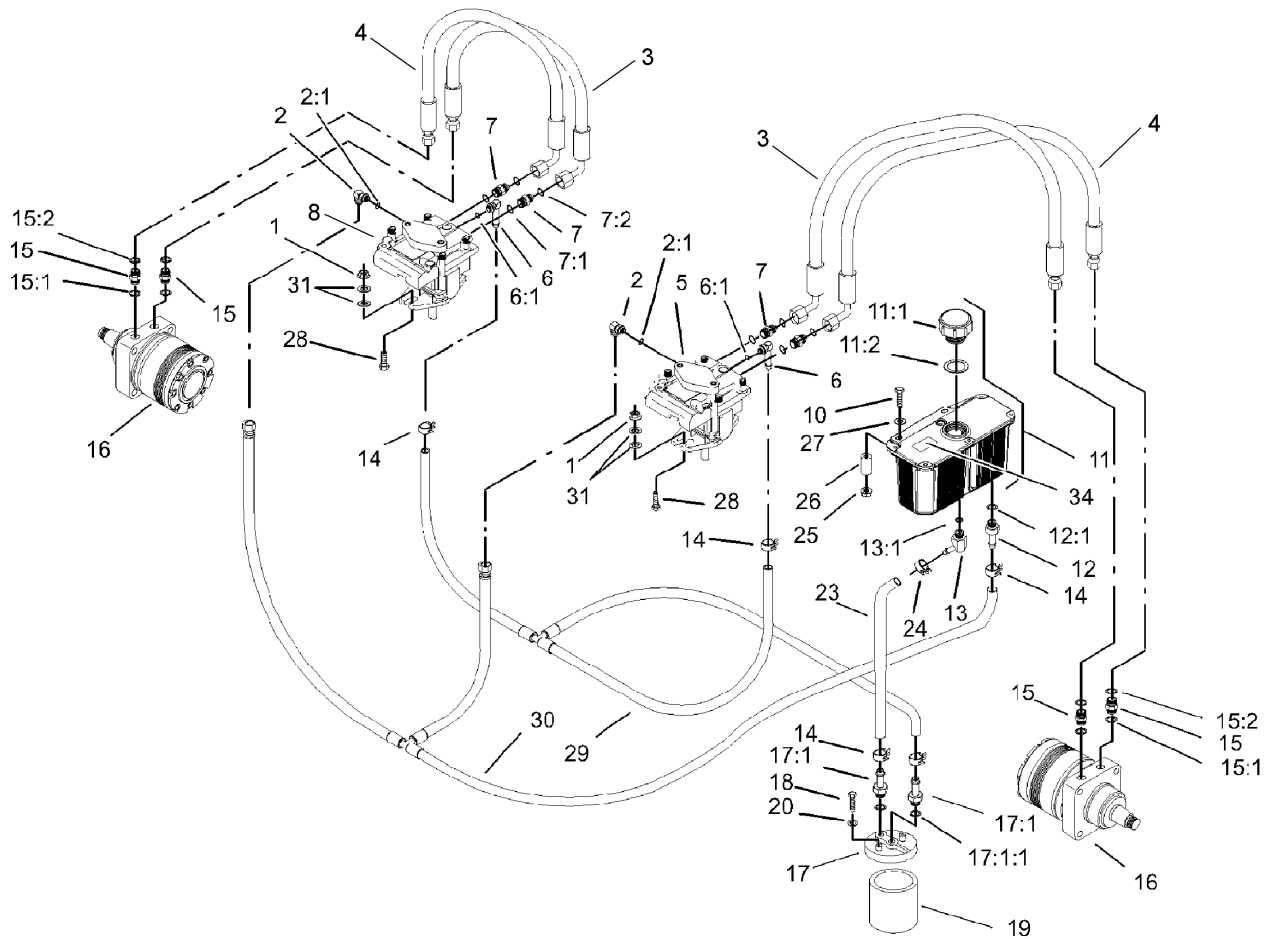

Hydraulic Assembly


Ref	Part No.	Qty.	Description
1	3290-357	4	Nut-HHF
2	103-1802	2	Fitting-Hyd, 90 DEG
2:1	237-42	1	O-Ring
3	1-323241	2	Hose-Pressure, High
4	1-613034	2	Hose-Pressure, High
5	103-4611	1	Pump-HYD
●5:1	105-6184	1	Seal Kit
●5:2	105-6185	1	Plate-Valve
●5:8	103-2664	1	Input Shaft Kit
●5:9	94-6922	1	Bearing-Thrust
●5:10	103-2666	1	Cylinder Block Kit
6	103-1799	2	Elbow-90 DEG
6:1	237-42	1	O-Ring
7	1-603990	4	Fitting-Straight
7:1	237-79	1	O-Ring
7:2	1-603992	1	O-Ring
8	103-4247	1	Pump-HYD
●8:1	105-6184	1	Seal Kit
●8:2	105-6185	1	Plate-Valve
●8:8	103-2664	1	Input Shaft Kit
●8:9	94-6922	1	Bearing-Thrust
●8:10	103-2666	1	Cylinder Block Kit
10	321-15	2	Screw-HH
11	103-1946	1	Reservoir-HYD

Ref	Part No.	Qty.	Description
11:1	103-1948	1	Cap-Reservoir, HYD
11:2	103-1949	1	Gasket-Cap
12	103-1801	1	Adapter-Straight
12:1	237-42	1	O-Ring
13	103-1807	1	Elbow-45 DEG
13:1	237-42	1	O-Ring
14	103-1988	3	Clamp-Hose
15	1-603991	4	Fitting-Straight
15:1	237-80	1	O-Ring
15:2	1-603992	1	O-Ring
16	1-603718	2	Motor-Wheel
●16:1	1-000119	1	Seal Kit
17	103-2889	1	Filter Head ASM
17:1	103-1912	2	Adapter-Straight
17:1:1	237-42	1	O-Ring
18	321-3	2	Screw-HH
19	1-633750	1	Filter-HYD
20	1-805004	2	Washer-Lock
23	103-2959	1	Hose-Charge
24	103-1716	3	Clamp-Hose
25	32128-33	2	Nut-HF
26	103-2191	2	Spacer
27	3256-22	2	Washer-Flat
28	323-7	4	Screw-HH

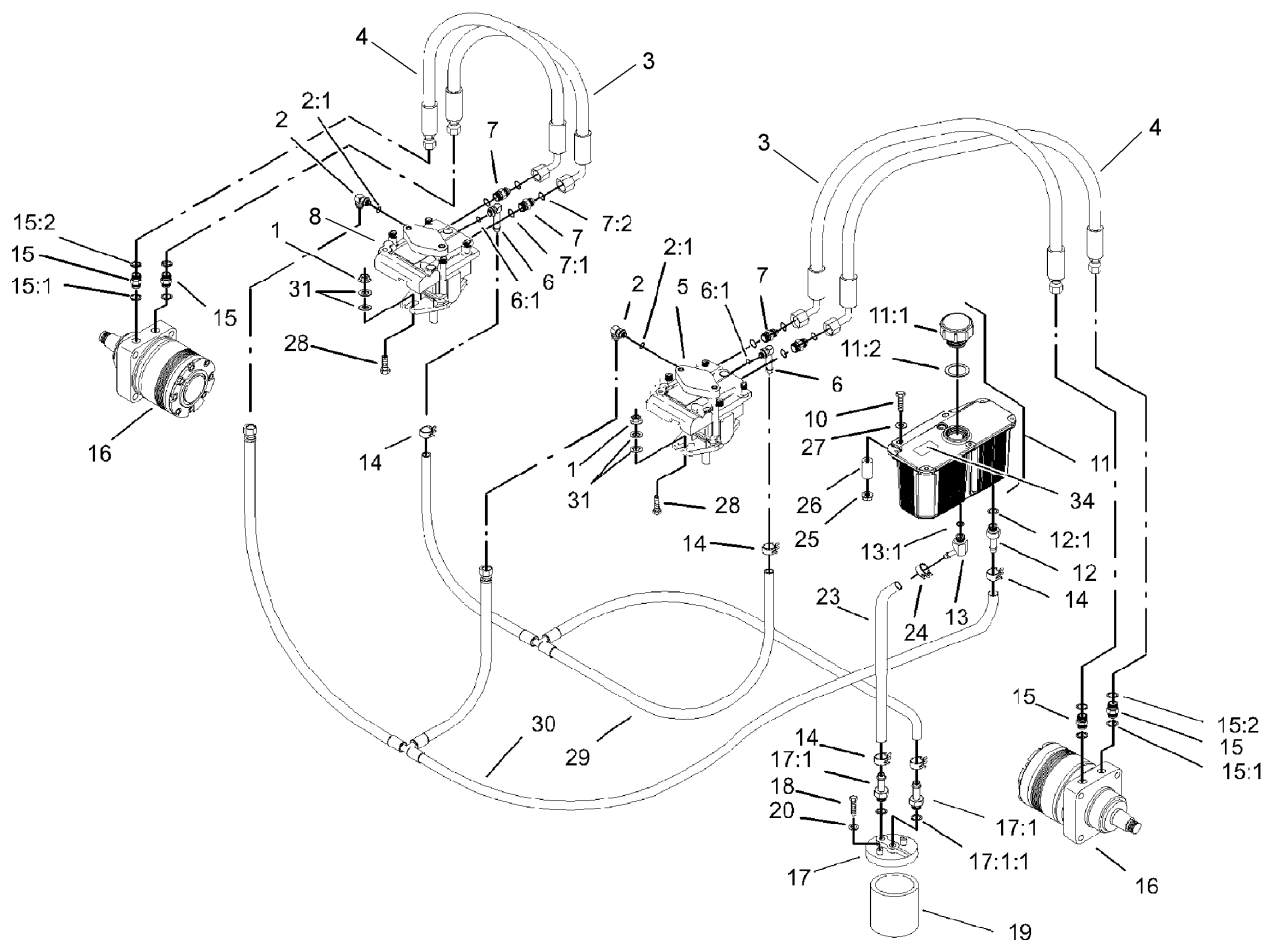

Hydraulic Assembly (continued)


Ref	Part No.	Qty.	Description
29	103-3914	1	Charge Hose ASM
30	103-4019	1	Case Drain Hose ASM
31	3256-3	8	Washer-Flat
34	1-523552	1	Decal-Tank, HYD

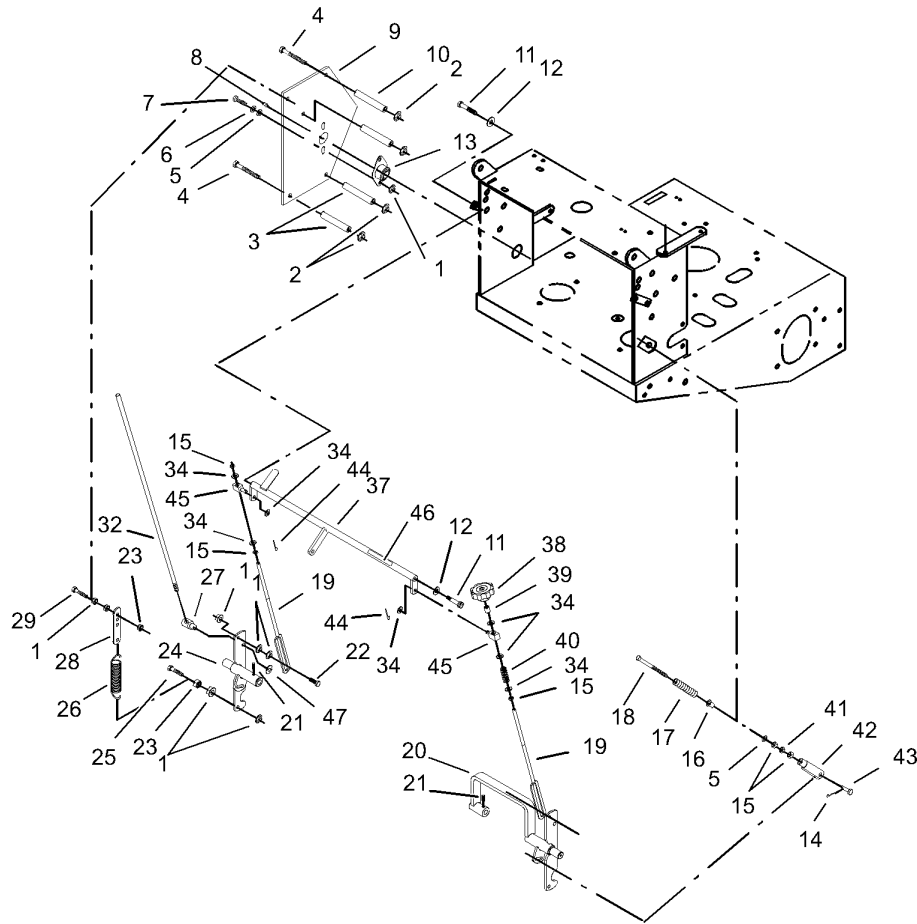

Lower Control Assembly

Ref	Part No.	Qty.	Description
1	32128-20	12	Nut-HF
2	3290-357	7	Nut-HHF
3	1-323197-01	4	Spacer-Shield
4	323-16	7	Screw-HH
5	3256-2	6	Washer-Flat
6	1-805005	4	Washer-Lock
7	322-3	4	Screw-HH
8	302-19	2	Fitting-Grease
9	103-4753-01	2	Shield
10	1-323195-01	4	Spacer-Shield
11	1-809056	2	Screw
12	3256-24	2	Washer-Flat
13	1-633102	2	Bearing-Flange, Side
14	1-806003	2	Pin-Hair
15	3219-2	7	Nut-Hex
16	1-603735	2	Bushing-Flanged
17	1-603807	2	Spring-Return, Neutral
18	1-603737	2	Bolt-Return, Neutral
19	1-413350	2	Link-Control, Speed
20	103-4796-01	1	Shaft-Control, RH
21	1-803022	2	Screw-Set
22	1-403180	2	Screw-HH
23	3296-29	4	Nut-Lock, NI
24	103-1190-01	1	Shaft-Control, LH

Ref	Part No.	Qty.	Description
25	322-6	2	Screw-HH
26	1-603693	2	Spring-Extension
27	103-1235	2	Swivel-Lever, Drive
28	1-613089	2	Tab-Spring, Extension.
29	1-800016	2	Bolt-TAP HH
32	1-413219	2	Rod-Lever, Drive
34	3256-23	7	Washer-Flat
37	1-412203-01	1	Crank-Control, Speed
38	1-413151	1	Knob-Tracking
39	1-603903	1	Spacer
40	1-323245	1	Spring-Compression
41	3220-2	2	Nut-Jam
42	1-303105	2	Yoke-Adjustable
43	1-808280	2	Pin-Clevis
44	3272-5	2	Pin-Cotter
45	1-603676	2	Swivel-Adjustable, Short
46	105-4109	1	Decal-Tracking
47	32151-47	2	Ring-Retaining

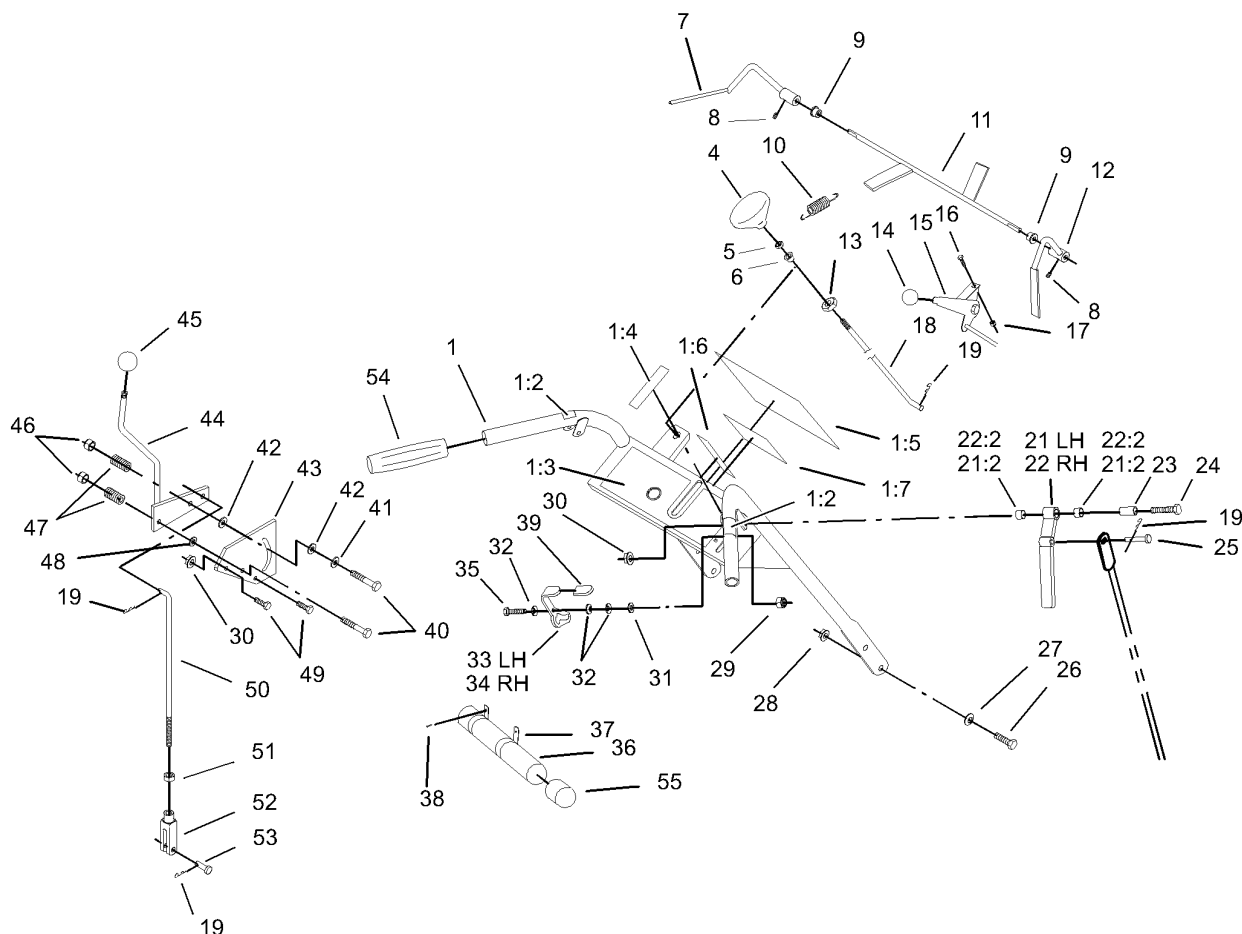


Upper Handle Assembly

Ref	Part No.	Qty.	Description
1	106-0751	1	Handle ASM
1:2	105-4110	2	Decal-Lock, Neutral
1:3	106-0829	1	Decal-Control Panel, hydro
1:4	1-323689	1	Decal-Throttle
1:5	106-0750	1	Decal
1:6	95-5537	1	Decal-Engage, Deck
1:7	106-2743	1	Decal-Caution, Brake
4	1-323134	1	Knob-Push/pull
5	3218-2	1	Nut-Jam
6	1-323143	1	Bearing-Nylon
7	1-412183-03	1	Lever-LH
8	1-803322	2	Screw-Set
9	1-303365	2	Bushing-Nylon
10	1-303363	1	Spring-Extension
11	106-2717-03	1	Operator Presence Control Rod
12	1-412185-03	1	Lever-RH
13	1-323142	1	Nut-Push
14	1-513592	1	Knob-Ball
15	1-323322	1	Cable-Control, Throttle
16	1-807513	2	Bolt-CARR
17	3296-2	2	Nut-Lock
18	1-323181	1	Linkage-Blade
19	1-806003	3	Pin-Hair
21	103-0218	1	LH Drive Lever ASM


Ref	Part No.	Qty.	Description
21:2	1-413152	2	Sleeve-Bushing
22	103-0219	1	RH Drive Lever ASM
22:2	1-413152	2	Sleeve-Bushing
23	1-603749	2	Bushing-Lever, Drive
24	321-9	2	Screw-HH
25	1-613055	2	Pin-Clevis
26	323-6	4	Screw-HH
27	98-5975	4	Washer-Belleville
28	3290-357	4	Nut-HHF
29	3296-42	2	Nut-Lock, NI
30	32128-33	4	Nut-HF
31	3256-2	2	Washer-Flat
32	1-303435	6	Washer-Spring
33	1-413148	1	Latch-Lever, LH Drive
34	1-413150	1	Latch-Lever, RH Drive
35	321-10	2	Screw-HH
36	104-7050	1	Housing-Manual
37	2412-120	2	R-Clamp
38	32104-76	2	Screw
39	1-303019	2	Grip-Latch
40	322-10	2	Screw-HH
41	1-603716	1	Washer-Friction
42	1-323244	2	Washer-Friction
43	1-603730	1	Plate-Lever, Shifter



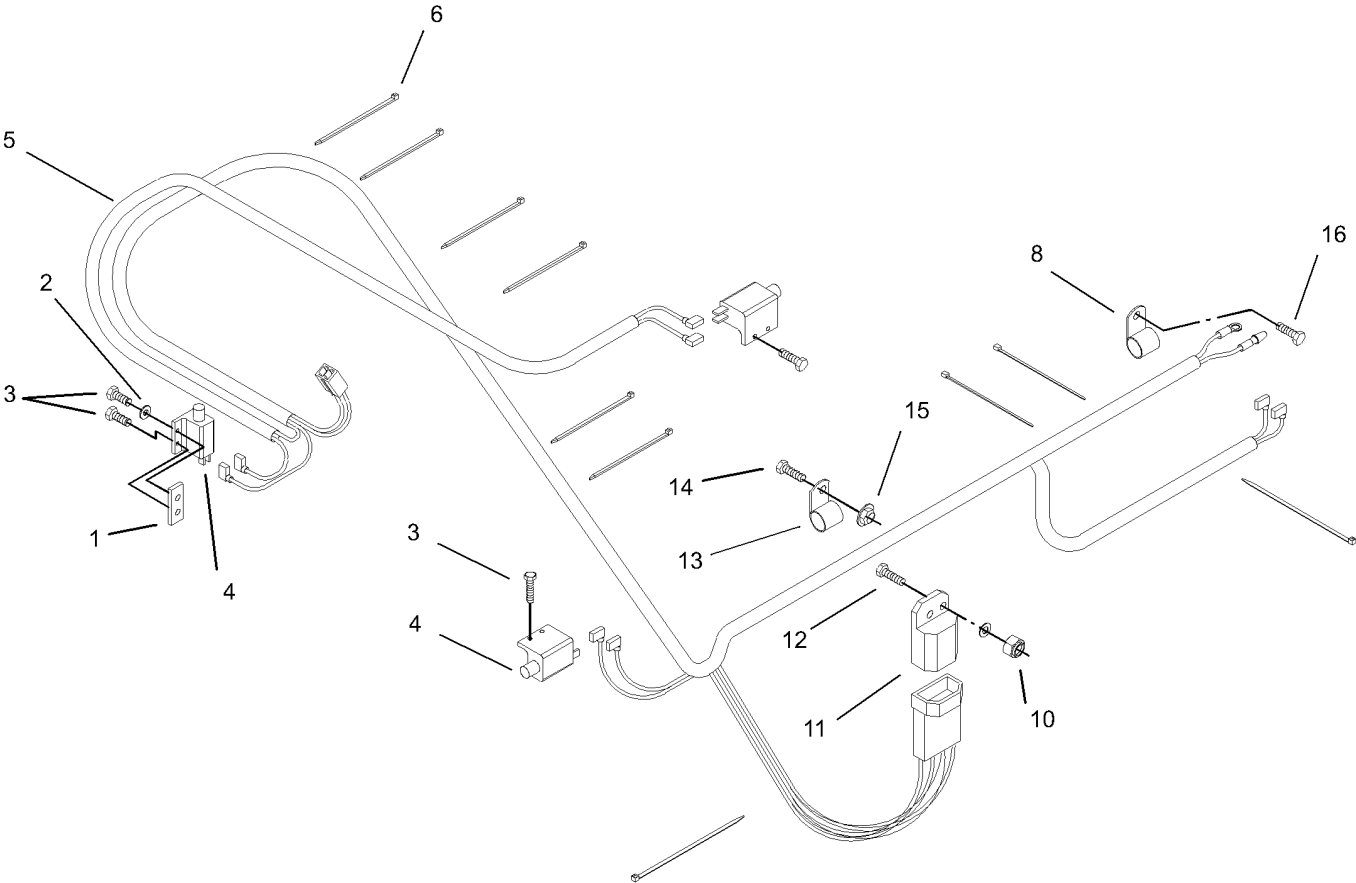

Electrical Assembly


Ref	Part No.	Qty.	Description				
1	1-633181	2	Plate-Tapped				
2	3256-14	1	Washer-Flat				
3	3290-500	3	Screw-PPH				
4	1-513051	2	Switch-Open, Normally				
5	103-2286	1	Harness-Wire				
6	1-303287	6	Tie-Plastic				
8	1-413510	1	Clip-Loom				
10	3296-42	2	Nut-Lock, NI				
11	1-323430	1	Module-Interlock				
12	321-4	1	Screw-HH				
13	1-603727	1	Clip-Loom				
14	321-3	1	Screw-HH				
15	32128-33	1	Nut-HF				
16	33114-016	1	Screw-HH				

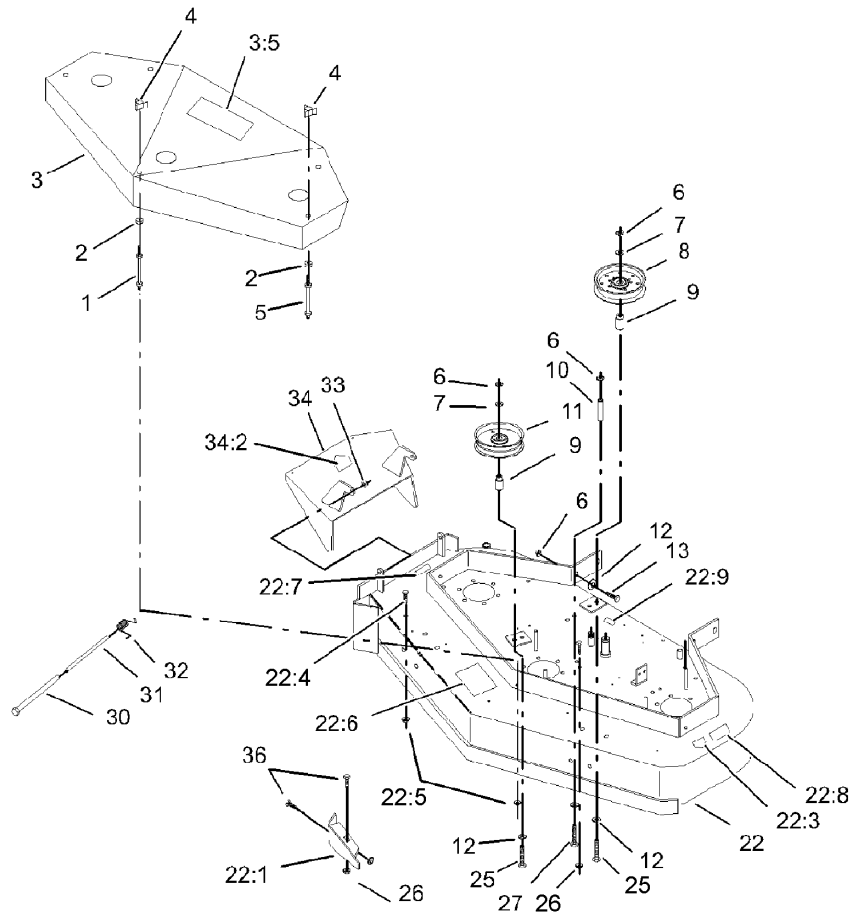

Deck Assembly

Ref	Part No.	Qty.	Description
1	1-303536	3	Stud-Shield, Belt (Long)
2	1-323417	5	Washer
3	1-404246	1	Shield-Belt
3:5	106-0712	1	Decal
4	106-4161	5	Knob-Handle
5	1-303537	2	Stud-Shield, Belt (Short)
6	3290-357	9	Nut-HHF
7	3256-24	2	Washer-Flat
8	1-403186	1	Idler-Pulley, Flat
9	1-403184	2	Bushing-Idler
10	1-403188	1	Spacer
11	1-613098	1	Pulley-Idler
12	98-5975	9	Washer-Belleville
13	323-8	6	Screw-HH
22	1-404270	1	Deck
22:1	1-402107-01	1	Baffle-Dogleg
22:3	1-403005	1	Decal-Danger
22:4	322-2	4	Screw-HH
22:5	32128-20	4	Nut-HF
22:6	66-1340	1	Decal-Danger
22:7	67-5360	1	Decal-Danger
22:8	98-5130	1	Decal-Torque, Bolt
22:9	99-3943	1	Decal-Routing, Belt
25	323-13	2	Screw-HH


Ref	Part No.	Qty.	Description
26	32128-20	14	Nut-HF
27	323-20	1	Screw-HH
30	1-800291	1	Screw-HH
31	1-323636	1	Spacer-Spring
32	98-3280	1	Spring-Deflector
33	3296-29	1	Nut-Lock, NI
34	1-404245	1	Chute
34:2	54-9220	1	Decal-Danger
36	322-2	12	Screw-HH

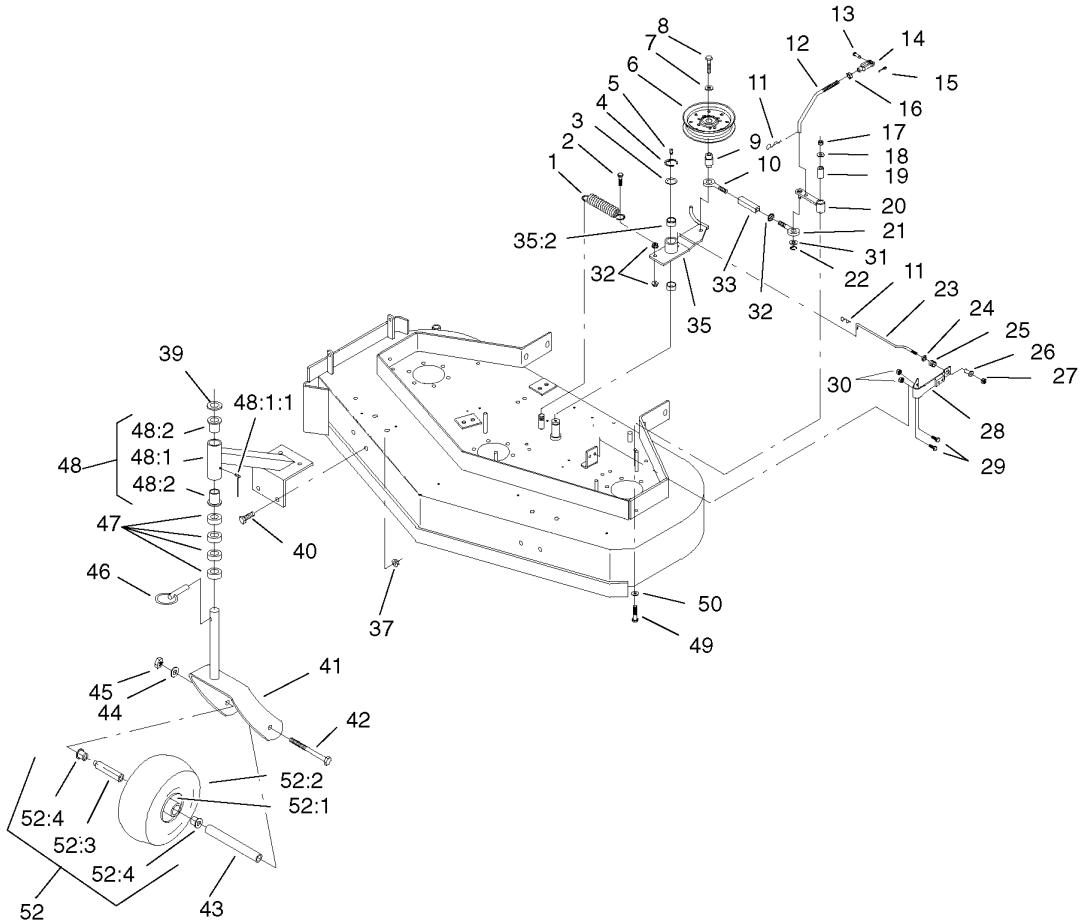

Front Caster and Blade Brake Assembly


Ref	Part No.	Qty.	Description
1	1-323071	1	Spring-Extension
2	322-6	2	Screw-HH
3	1-303352	1	Washer-Spindle
4	32151-103	1	Ring-Snap
5	302-19	1	Fitting-Grease
6	1-603843	1	Pulley-Idler
7	98-5975	3	Washer-Belleville
8	702809	1	Screw-Cap
9	1-303434	1	Bushing-Engagement
10	1-303348	1	Eyebolt-Thread, LH
11	1-806003	3	Pin-Hair
12	1-323174	1	Linkage-Arm, Assist
13	1-808280	1	Pin-Clevis
14	1-303105	1	Yoke-Adjustable
15	3272-5	1	Pin-Cotter
16	3219-2	1	Nut-Hex
17	3296-29	1	Nut-Lock, NI
18	3256-3	1	Washer-Flat
19	1-403179	1	Tube-Pivot
20	1-322235	1	Arm-Assist
21	1-303238	1	Eyebolt-Thread, RH
22	32120-35	1	E-Ring
23	1-323714	1	Rod-Brake
24	1-323748	1	Ring-Push On

Ref	Part No.	Qty.	Description
25	1-323747	1	Spring-Compression
26	1-323746	1	Spacer-Flanged
27	3296-56	1	Nut-Lock, NI
28	1-324372	1	Pad / Spring ASM
29	321-4	2	Screw-HH
30	3296-42	2	Nut-Lock, NI
31	3256-23	1	Washer-Flat
32	32128-20	3	Nut-HF
33	1-303236	1	Body-Turnbuckle
35	103-3600	1	Idler Arm ASM
35:2	1-323729	2	Sleeve-Bearing
37	3290-357	8	Nut-HHF
39	1-513338	2	Washer-Flat
40	323-4	8	Screw-HH
41	1-322145-01	2	Fork
42	325-20	2	Screw-HH
43	1-513547	2	Spacer
44	3253-7	2	Washer-Lock
45	3217-9	2	Nut-Hex
46	1-809020	2	Pin
47	1-303314	8	Spacer-Caster
48	1-302203	2	Support ASM
48:1		1	Support-Caster
48:1:1	302-52	1	Fitting-Grease

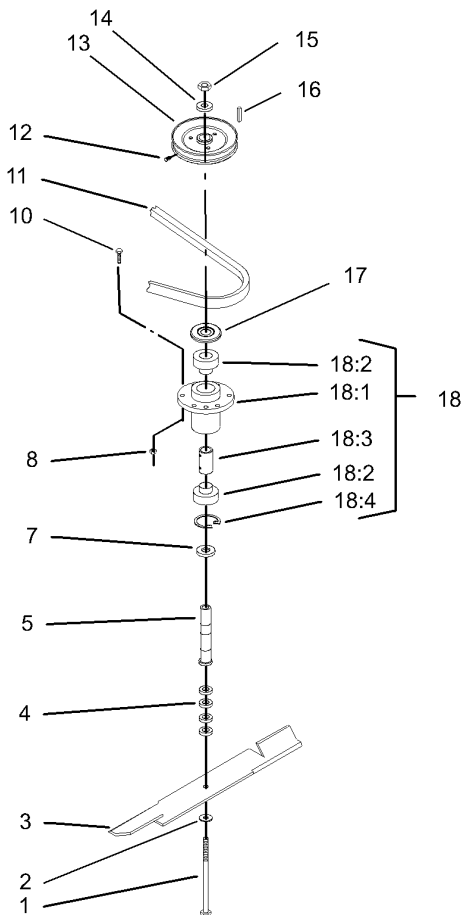


Spindle, Blade and Belt Assembly

Ref	Part No.	Qty.	Description				
1	1-800861	3	Screw-Cap, HH				
2	1-513208	3	Washer-Spring				
3	103-2507	3	Blade-Lift, Low				
3	103-2527	3	Blade-Notched				
4	1-323539	12	Spacer-Drive, Blade				
5	1-323529	3	Tube-Spindle, Short				
7	103-2535	3	Spacer-Guard, Bottom				
8	3296-39	18	Nut-Lock, NI				
10	323-7	18	Screw-HH				
11	1-403171	1	Belt-Drive, Blade				
12	1-803310	3	Screw-Set				
13	1-403183	3	Sheave				
14	1-323339	3	Washer-Retainer, Sheave				
15	3219-6	3	Nut-Hex				
16	1-807267	3	Key				
17	103-1330	3	Guard-Bearing, Top				
18	103-2533	3	Cutter Housing ASM				
18:1	1-323532	1	Housing-Spindle				
18:2	103-2477	2	Bearing-Ball				
18:3	103-2534	1	Spacer-Bearing				
18:4	32120-8	1	Ring-Snap				

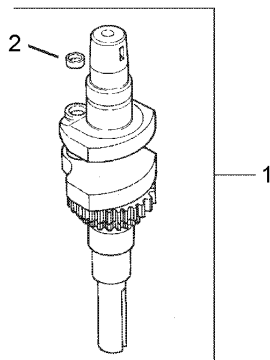


Crankshaft Assembly Kohler CV15T 41624

Ref	Part No.	Qty.	Description
③1	12 014 30-S	1	Crankshaft (Includes 2)
③2	12 139 01-S	1	Plug-Cup

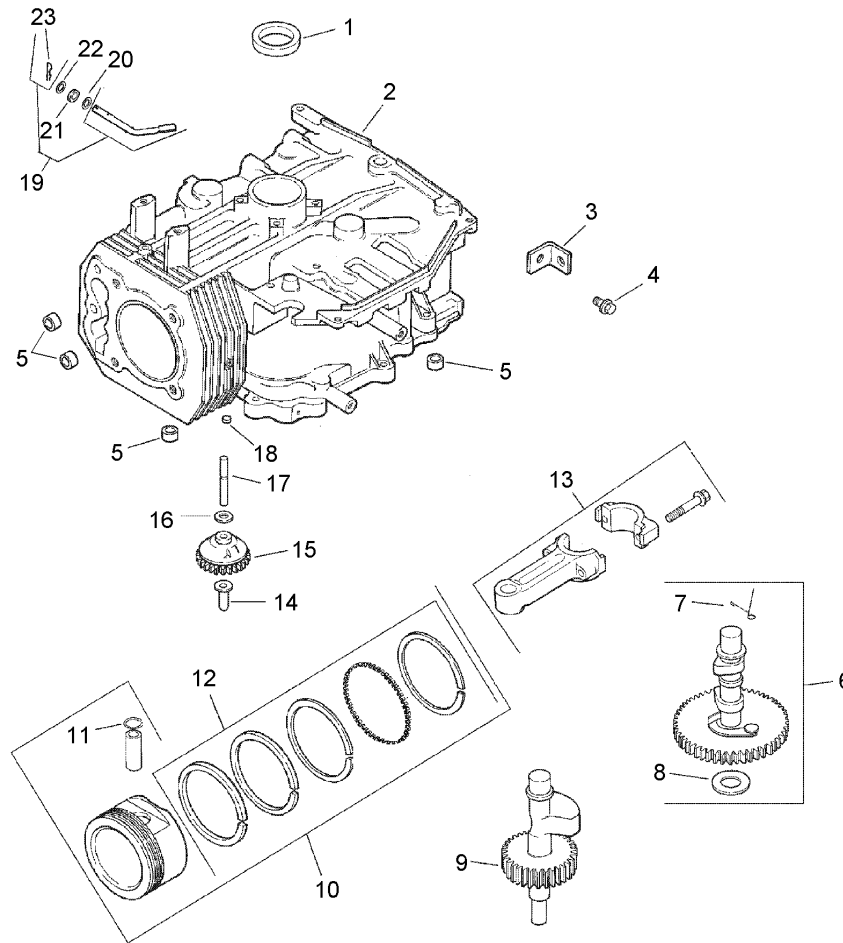


Crankcase Assembly Kohler CV15T 41624

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	12 032 03-S	1	Seal-Crankshaft	12	12 108 09-S	1	Ring Set (.50)
2	12 032 03-S	1	Crankcase (Use: Short Block 12 522 18)	13	12 067 05-S	1	Rod-Connecting (Std.)
3	12 445 02-S	1	Strap-Lifting	13	12 067 06-S	1	Rod-Connecting (.25)
4	M-839025-S	1	Screw-Hf, M8x1.25x25	14	12 380 01-S	1	Pin-Regulating, Governor
5	24 380 13-S	4	Pin-Locating	15	12 043 05-S	1	Gear-Governor
6	12 755 49-S	1	Camshaft Kit (Includes 7,8)	16	M-631005-S	1	Washer-Plain, 6mm
7	12 089 37-S	1	Spring-Actuating	17	12 144 02-S	1	Shaft-Gear, Governor
8	12 422 08-S	1	Shim-Camshaft (Blue)	18	52 139 09-S	1	Plug-Cup
8	12 422 09-S	1	Shim-Camshaft (Red)	19	12 755 64-S	1	Governor Cross Shaft Kit (Includes 23)
8	12 422 10-S	1	Shim-Camshaft (Yellow)	20	X-25-102-S	1	Washer-Plain, 1/4in
8	12 422 11-S	1	Shim-Camshaft (Green)	21	12 032 01-S	1	Seal-Cross Shaft, Governor
8	12 422 12-S	1	Shim-Camshaft (Gray)	22	M-631015-S	1	Washer-Plain, 6mm
8	12 422 13-S	1	Shim-Camshaft (Black)	23	12 154 05-S	1	Clip-Pin, Hitch
8	12 422 07-S	1	Shim-Camshaft (White)				
9	12 144 27-S	1	Shaft-Balance				
10	12 874 07-S	1	Piston W/ring Set (Std.) (Includes 11,12)				
10	12 874 08-S	1	Piston W/ring Set (.25)				
10	12 874 09-S	1	Piston W/ring Set (.50)				
10	12 874 11-S	1	Piston W/ring Set (.08)				
11	12 018 02-S	2	Retainer-Pin, Piston				
12	12 108 07-S	1	Ring Set (Std.)				
12	12 108 08-S	1	Ring Set (.25)				

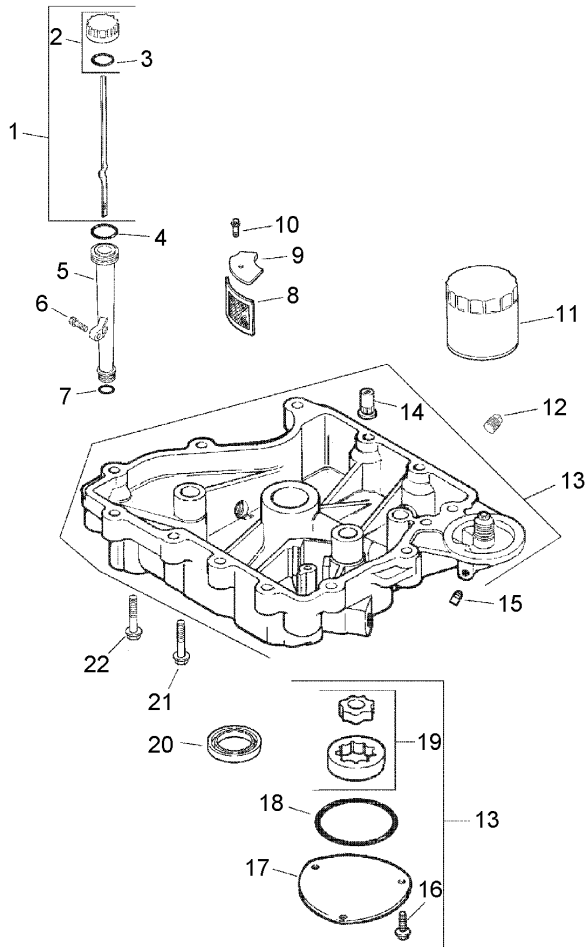

Oil Pan / Lubrication Assembly
Kohler CV15T 41624


Ref	Part No.	Qty.	Description				
❶1	12 038 01-S	1	Dipstick ASM (Includes 2,3)				
❷2	25 755 13-S	1	Oil Fill Cap Kit (Includes 3)				
❸3	25 153 02-S	1	O-Ring (Dipstick)				
❹4	12 153 02-S	1	O-Ring (Upper Oil Fill Tube)				
❺5	12 123 04-S	1	Tube-Fill, Oil				
❻6	M-545020-S	1	Screw-Hf, M5x0.8x20				
❼7	12 153 01-S	1	O-Ring (Lower Oil Fill Tube)				
❽8	25 162 07-S	1	Screen-Pickup, Oil				
❾9	12 096 03-S	1	Cover-Pickup Screen, Oil				
❿10	M-545016-S	1	Screw-Hf, M5x0.8x16				
⓫11	12 050 01-S	1	Filter-Oil				
⓬12	25 139 57-S	2	Pipe Plug-Sq. Hd., 3/8in				
⓭13	12 199 50-S	1	Oil Pan ASM (Includes 14,16-19)				
⓮14	25 462 09-S	1	Valve-Relief, Oil Pressure				
⓯15	25 139 52-S	1	Plug-Pipe, 1/8in				
⓰16	M-545016-S	3	Screw-Hf, M5x0.8x16				
⓱17	12 096 34-S	1	Cover-Pump, Oil				
⓲18	12 153 06-S	1	O-Ring (Oil Pump Cover)				
⓳19	12 393 01-S	1	Pump-Oil				
⓴20	12 032 03-S	1	Seal-Crankshaft				
⓵21	24 086 16-S	11	Screw-Hf, M8x1.25x45				
⓶22	24 086 17-S	1	Screw-Hf, M8x1.25x45				

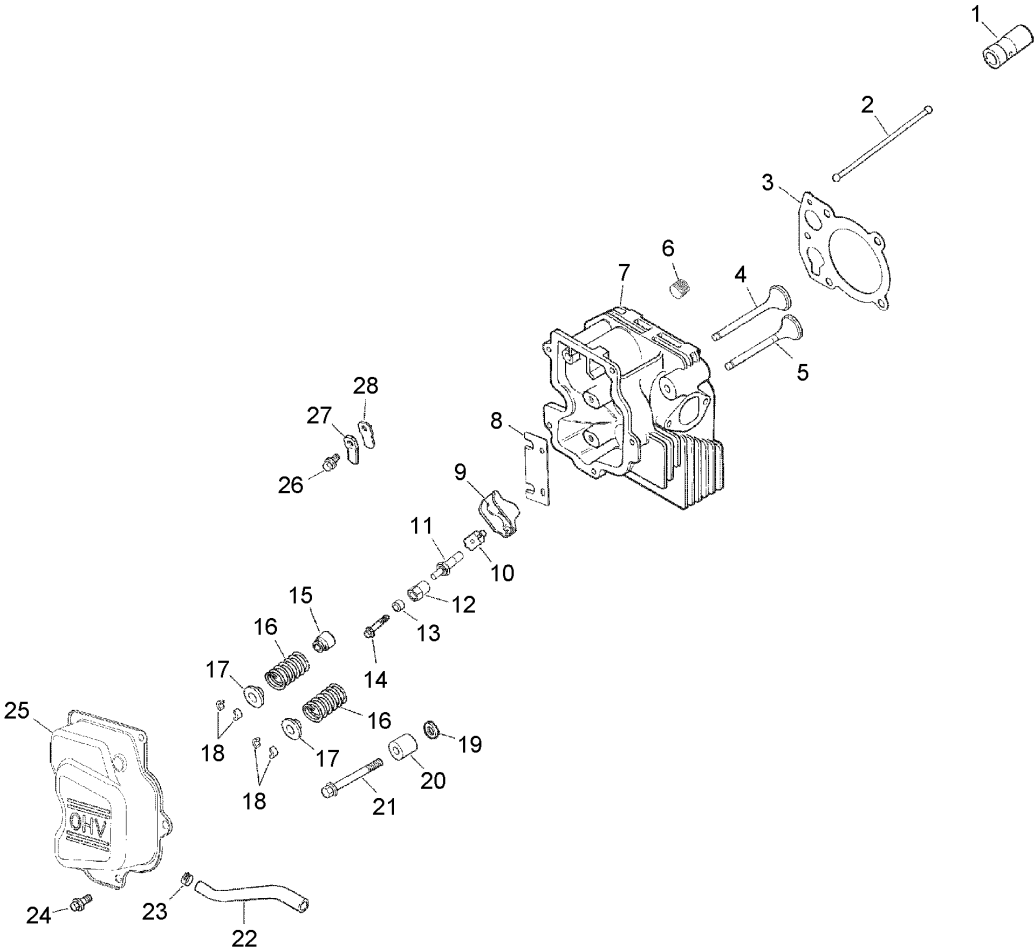

Head / Valve / Breather Assembly
Kohler CV15T 41624


Ref	Part No.	Qty.	Description
❶1	25 351 01-S	2	Lifter-Valve
❷2	12 411 04-S	2	Rod-Push
❸3	12 041 10-S	1	Gasket-Head, Cylinder
❹4	12 017 01-S	1	Valve-Intake (Std.)
❺5	12 016 01-S	1	Valve-Exhaust (Std.)
❻6	25 139 60-S	1	Pipe Plug-Hex. Ctsk., 1/8in N.p.t.f.
❼7	12 318 19-S	1	Head-Cylinder
❽8	12 146 22-S	2	Plate-Guide
❾9	25 186 01-S	2	Arm-Rocker
❿10	25 599 01-S	2	Pivot-Arm, Rocker
⓫11	25 072 12-S	2	Stud-Rocker
⓬12	25 100 29-S	2	Nut-Hex
⓭13	25 086 112-S	2	Screw-Set
⓮14	M-640034-S	2	Screw-Hf, M6x1.0x34
⓯15	66 032 05-S	2	Seal-Stem, Valve
⓰16	12 089 34-S	2	Spring-Valve
⓱17	12 173 01-S	2	Cap-Spring, Valve
⓲18	12 755 03-S	2	Retainer Kit
⓳19	12 468 05-S	1	Washer-Plain, 13/32in
⓴20	12 112 13-S	1	Spacer-Head Bolt, Exhaust Port
⓵21	20 086 02-S	5	Screw-Hf, M10x1.5x81
⓶22	25 237 14-S	2	Clamp-Hose, 11/16in
⓷23	12 326 18-S	1	Hose-Breather
⓸24	M-645016-S	5	Screw-Hf, M6x1.0x16

Ref	Part No.	Qty.	Description
❶25	12 096 47-S	1	Cover-Valve
❶26	M-545010-S	1	Screw-Hf, M5x0.8x10
❶27	66 018 04-S	1	Retainer-Reed, Breather
❶28	12 402 02-S	1	Reed-Breather
❶❷	12 017 02-S	1	Valve-Intake (.25)
❶❸	12 016 02-S	1	Valve-Exhaust (.25)

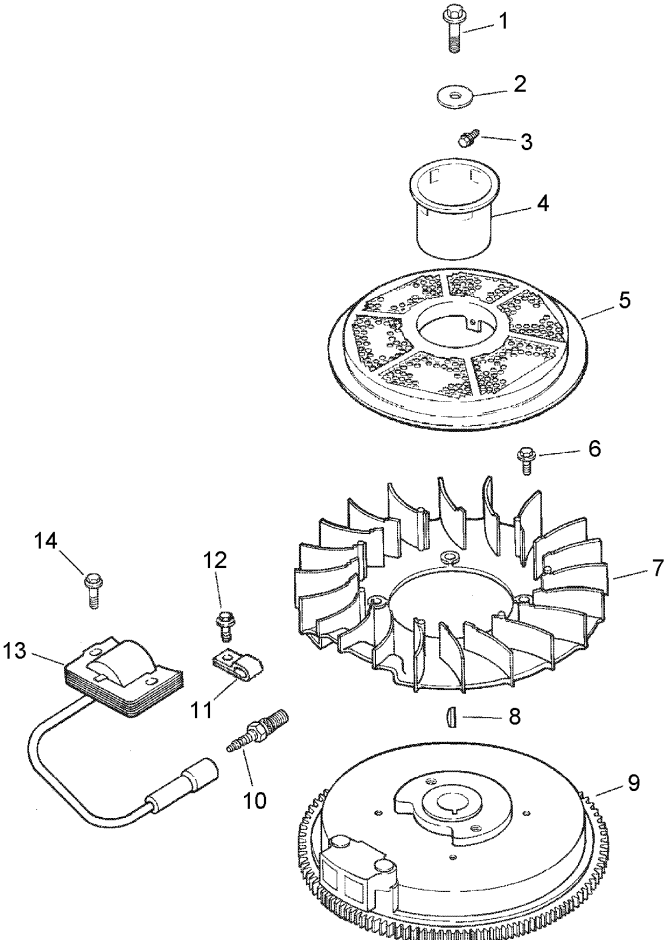


Ignition / Electrical Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description				
1	12 086 14-S	1	Screw-Hf, M10x1.5x46				
2	12 468 03-S	1	Washer-Plain, 3/8in				
3	M-545010-S	3	Screw-Hf, M5x0.8x10				
4	12 109 07-S	1	Cup-Drive, Starter				
5	12 162 09-S	1	Screen-Grass				
6	25 086 47-S	4	Bolt-Shoulder				
7	12 157 03-S	1	Fan				
8	X-42-15-S	1	Key				
9	12 025 56-S	1	Flywheel				
10	12 132 02-S	1	Spark Plug				
11	X-728-1-S	1	Clip-Cable				
12	M-545010-S	3	Screw-Hf, M5x0.8x10				
13	12 584 05-S	1	Module-Ignition				
14	M-545020-S	2	Screw-Hf, M5x0.8x20				
15	25 086 110-S	2	Screw-Tapping, Slotted				
16	12 518 07-S	1	Lead-White (18in, 18 Gauge, Fully Insulated Female Disconnect Terminals)				
17	12 454 03-S	1	Tie-Wire				

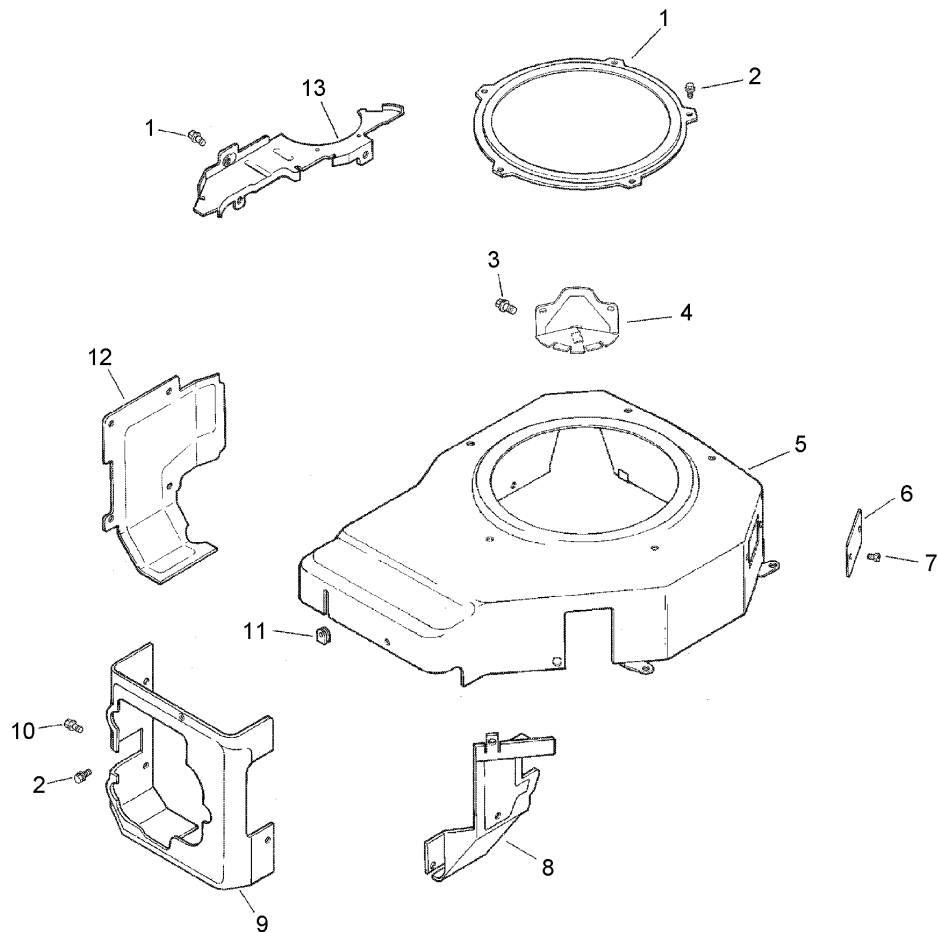


Blower Housing and Baffle Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description				
1	12 314 10-S	1	Guard-Screen, Grass				
2	M-545010-S	8	Screw-Hf, M5x0.8x10				
3	M-550010-S	6	Screw-Hf, M5x0.8x10				
4	12 096 29-S	1	Cover-Starter				
5	12 027 53-S	1	Housing-Blower				
6	12 096 27-S	1	Cover (Rectifier-regulator)				
7	M-639016-S	2	Screw-Hf, M6x1.0x16				
8	12 063 10-S	1	Baffle-Side, Intake				
9	12 063 08-S	1	Baffle-Head, Cylinder				
10	M-561016-S	1	Screw-Forming, Thread				
11	12 313 03-S	1	Grommet-Leads, Spark Plug				
12	12 063 19-S	1	Baffle-Cylinder				
13	12 146 07-S	1	Plate-Housing-Blower				
13	12 113 124-S	1	Decal-15hp				
13	25 113 39-S	1	Decal-Lamination, Clear				

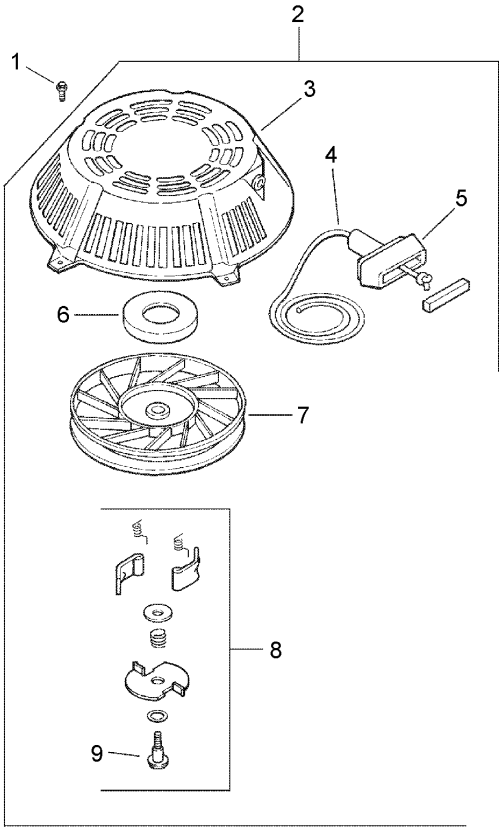


Starting System Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description				
❶1	M-550010-S	5	Screw-Hf, M5x0.8x10				
❷2	12 165 01-S	1	Retractable Starter ASM (Includes 3-9)				
❸3	12 081 01-S	1	Housing-Starter				
❹4	12 160 01-S	1	Rope-Starter				
❺5	25 166 01-S	1	Handle-Start, Recoil				
❻6	12 089 06-S	1	Spring And Keeper				
❼7	12 093 01-S	1	Pulley				
❸8	12 757 06-S	1	Dog Repair Kit (Includes 9)				
❹9	41 086 09-S	1	Screw-Pozidriv				
❶❸	12 113 07-S	1	Decal-Starting				

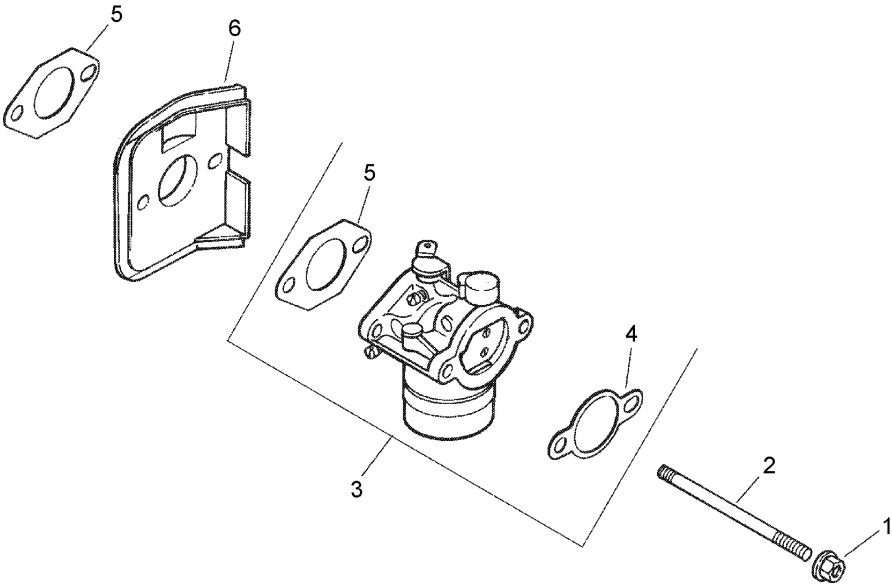

Fuel System Assembly
Kohler CV15T 41624


Ref	Part No.	Qty.	Description				
❸1	M-641060-S	2	Nut-Hf, M6x1.0				
❸2	M-629116-S	2	Stud-M6x1.0x116				
❸3	12 853 140-S	1	Carburetor Kit (Includes 4,5 [qty. 1])				
❸4	12 041 02-S	1	Gasket-Cleaner, Air				
❸5	12 041 01-S	2	Gasket-Carburetor				
❸6	12 265 04-S	1	Deflector-Heat				
❶❸	12 757 02-S	1	Float Kit				
❶❸	12 757 03-S	1	Carburetor Repair Kit				
❶❸	12 757 08-S	1	Choke Repair Kit				
❶❸	12 757 36-S	1	Throttle Shaft Bearing Kit				
❶❸	12 757 37-S	1	Bowl Replacement Kit				
❶❸	12 755 92-S	1	High Altitude Kit				

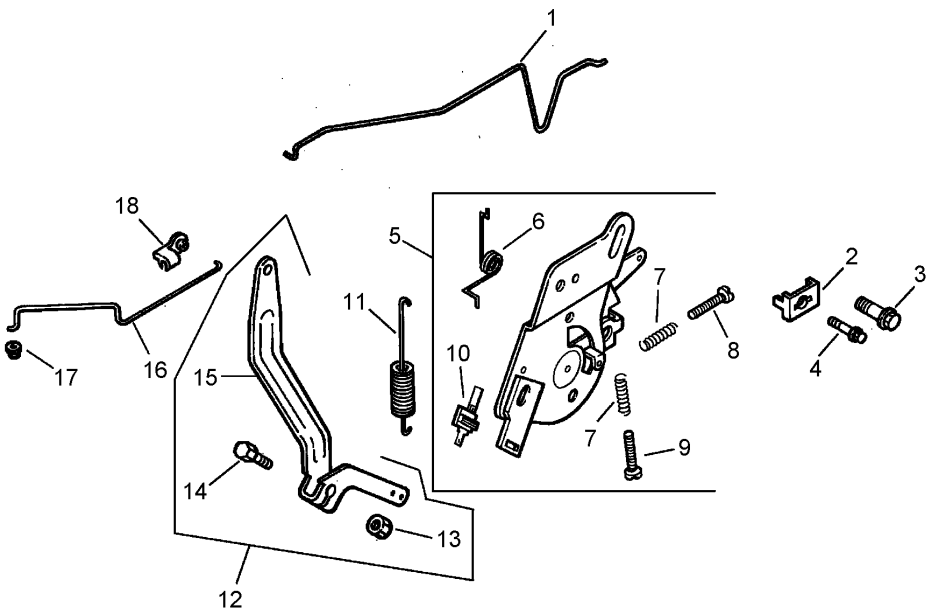

Engine Control Assembly


Kohler CV15T 41624

Ref	Part No.	Qty.	Description				
1	12 079 07-S	1	Linkage-Choke				
2	12 237 01-S	1	Clamp-Cable				
3	M-664020-S	2	Screw-Lobed Socket, M6x1.0x20				
4	M-545016-S	2	Screw-Hf, M5x0.8x16				
5	12 536 06-S	1	Speed Control ASM (Includes 6-10)				
6	12 089 23-S	1	Spring-Return, Choke				
7	12 089 11-S	2	Spring-Control, Speed				
8	12 086 39-S	1	Screw-Pan Head (W/loctite)				
9	M-443020-S	1	Screw-Pan Head, M4x0.7x20				
10	25 452 14-S	1	Terminal-Switch, Kill				
11	12 089 19-S	1	Spring-Governor				
12	12 755 83-S	1	Governor Lever Kit (Includes 13-15)				
13	12 100 07-S	1	Nut-HF				
14	52 211 04-S	1	Bolt-Head, Round				
15	12 090 28-S	1	Lever-Governor				
16	12 079 01-S	1	Linkage-Throttle				
17	25 158 08-S	1	Bushing-Linkage, Retaining				
18	25 158 11-S	1	Bushing-Linkage, Throttle				

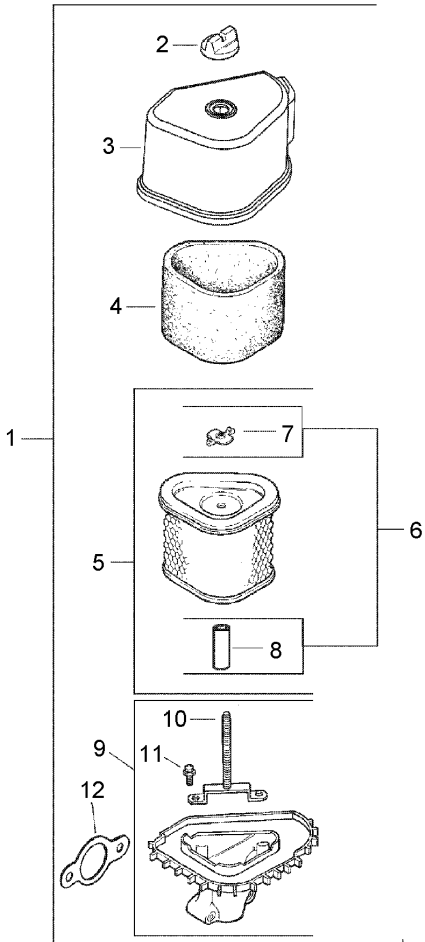

Air Intake / Filtration Assembly
Kohler CV15T 41624

Ref	Part No.	Qty.	Description				
1	12 743 04-S	1	Air Cleaner Kit (Includes 2-12)				
2	20 341 01-S	1	Knob-Cover, Air Cleaner				
3	12 096 44-S	1	Cover-Cleaner, Air				
4	12 083 12-S	1	Element-Precleaner				
5	12 083 10-S	1	Element-Cleaner, Air (Includes 6-8)				
6	12 743 12-S	1	Seal Kit (Includes 7,8)				
7	12 100 08-S	1	Nut-Wing				
8	12 032 11-S	1	Seal				
9	12 094 14-S	1	Base-Cleaner, Air (Includes 10,11)				
10	12 072 04-S	1	Stud-M6x1.0x66				
11	12 086 01-S	2	Screw-No. 10 Hi-Lo, Thread Forming				
12	12 041 02-S	1	Gasket-Cleaner, Air				
13	12 113 04-S	1	Decal-Cleaner, Air				

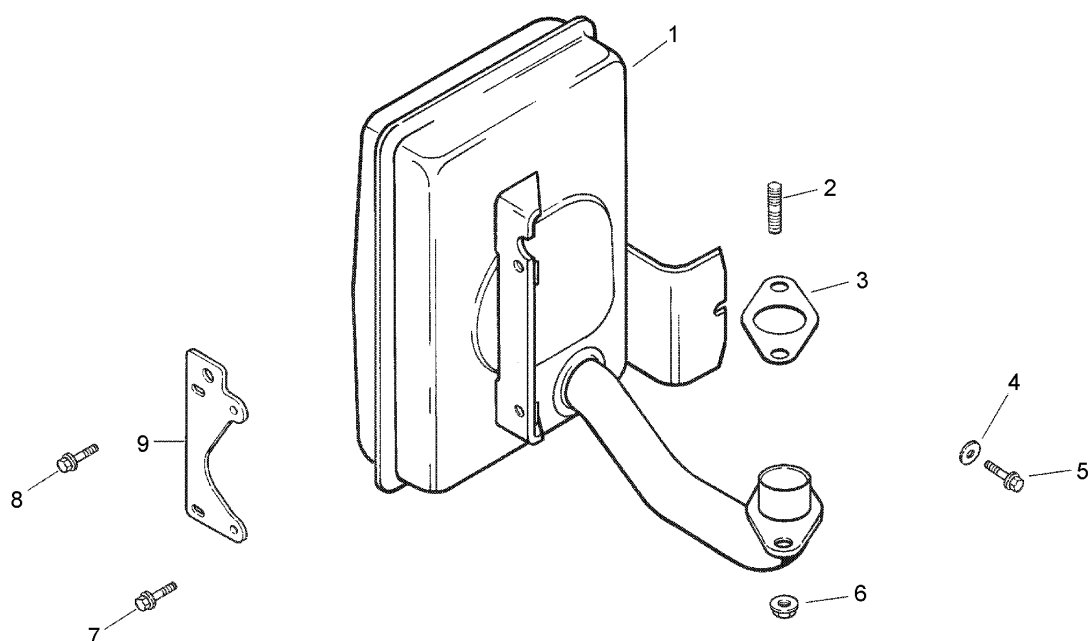

Exhaust Assembly Kohler CV15T 41624

Ref	Part No.	Qty.	Description				
③1	12 068 44-S	1	Muffler				
③2	25 072 04-S	2	Stud-M8x1.25x33				
③3	12 041 03-S	1	Gasket-Manifold, Exhaust				
③4	X-25-78-S	1	Washer-Plain, 1/4in				
③5	M-545016-S	1	Screw-Hf, M5x0.8x16				
③6	M-841080-S	2	Nut-Hf, M8x1.25				
③7	M-645016-S	2	Screw-Hf, M6x1.0x16				
③8	M-645025-S	2	Screw-Hf, M6x1.0x25				
③9	12 126 71-S	1	Bracket-Muffler				
①③	12 112 20-S	2	Spacer				
①③	12 522 18	1	Block-Short				
①③	12 755 93-S	1	Gasket Set				

