


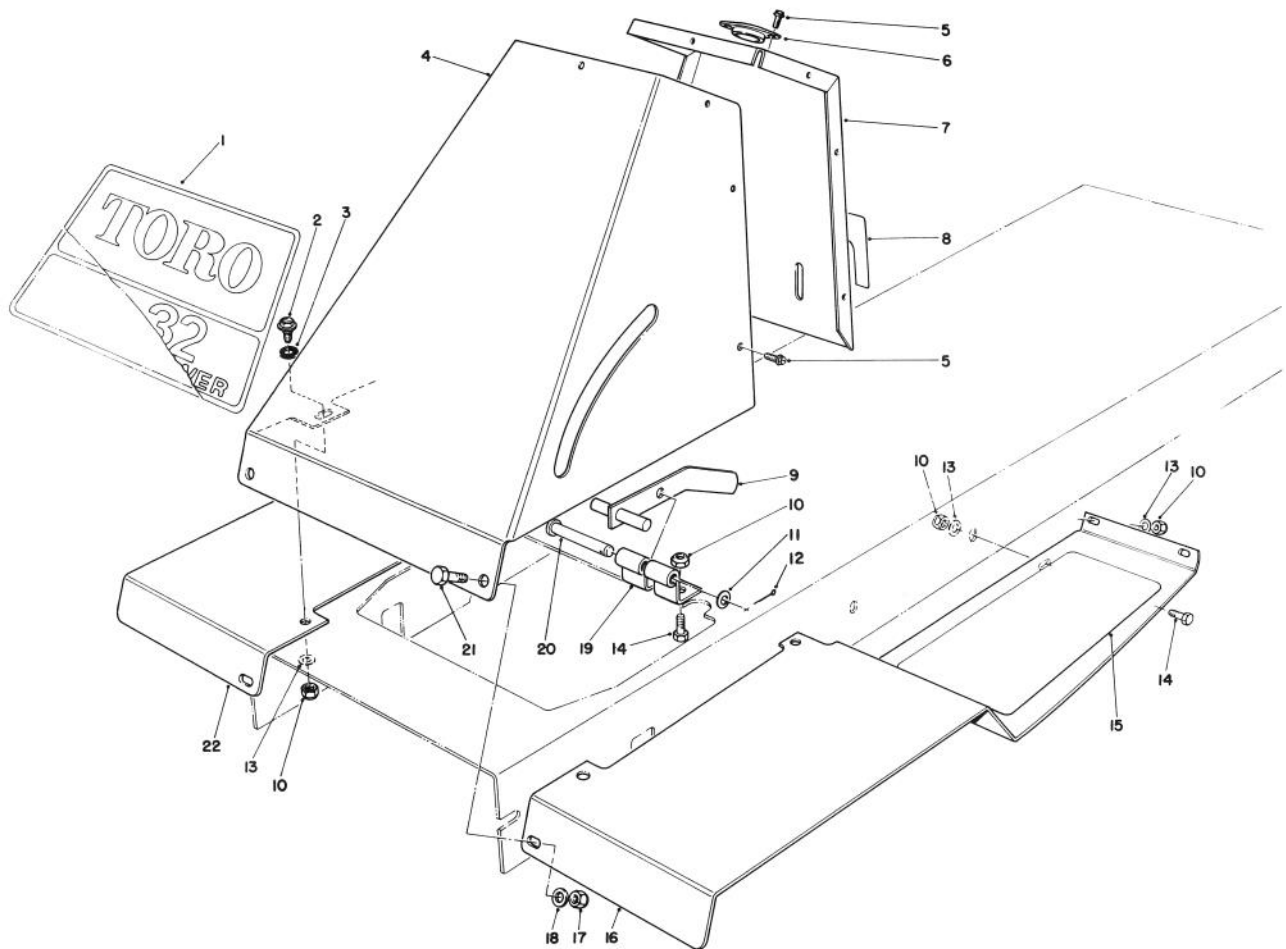


MODEL NO. 56155-6000001 & UP

**PARTS
CATALOG**
11 H.P. REAR ENGINE RIDER — ELECTRIC

FRONT TOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	53-8080	Decal — Toro 1132	1
2	5-2490	Bolt — Shoulder	4
3	3-3287	Spacer — Rubber	4
4	56-7130	Tower — Front	1
5	32104-76	Screw — Self Tap Acorn Head	9
6	56-7170	Guide — Steering Shaft	1
7	56-7140	Tower — Rear	1
8	56-7810	Decal — Parking Brake	1
9	47-1290	Parking Brake	1
10	3296-29	Nut — Lock	15
11	3296-24	Washer — Flat	1

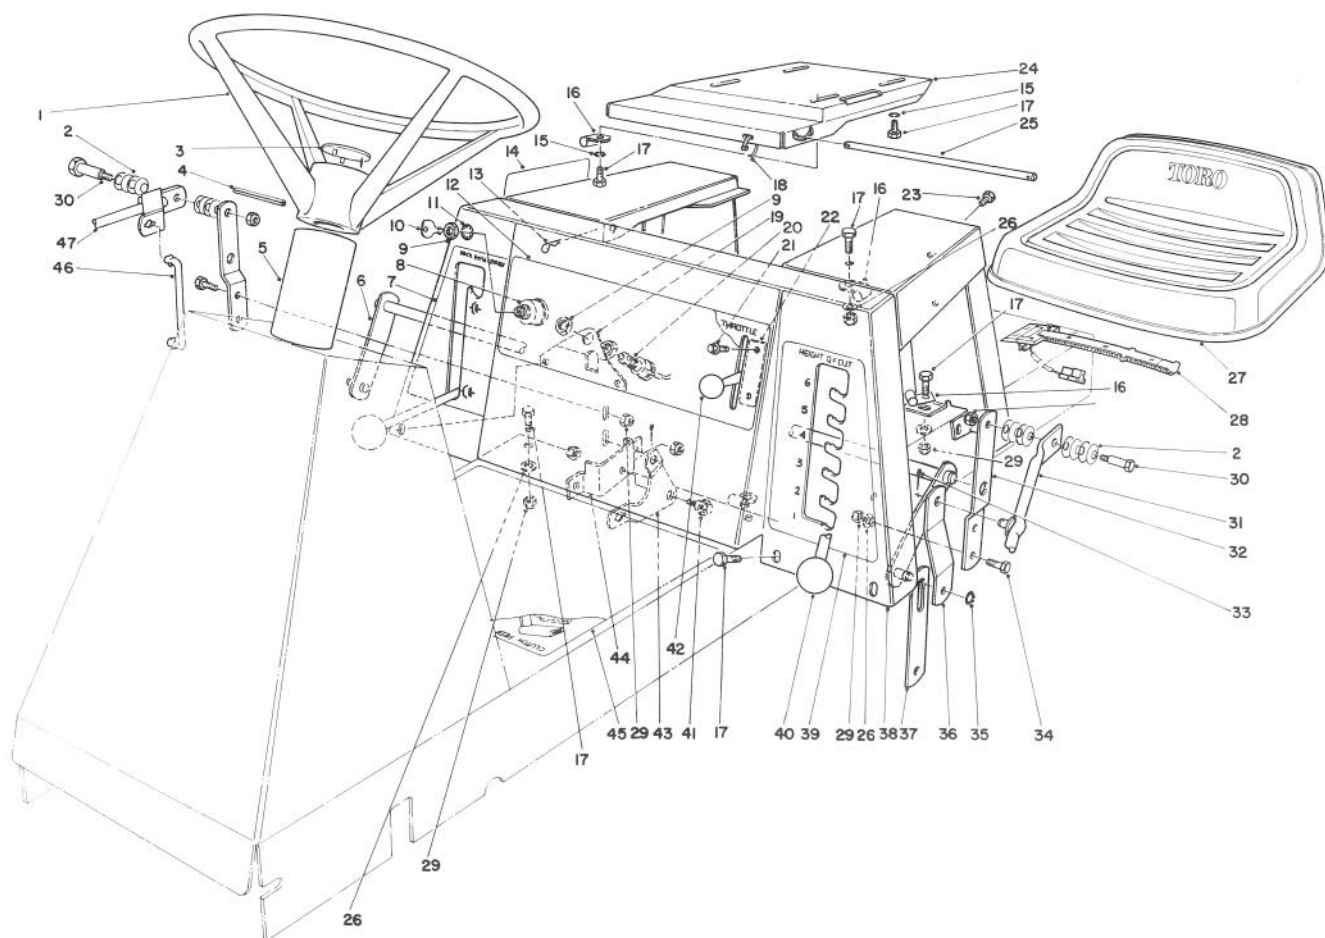
Ref. No.	Part No.	Description	No. Used
12	3272-6	Cotter Pin	1
13	3256-23	Washer — Flat Plain	9
14	322-3	Capscrew	6
15	47-1440	Tread — Foot	2
16	47-0940	Footrest — L.H.	1
17	32152-4	Nut — Lock	2
18	3256-22	Washer — Plain	2
19	47-2060	Bracket — Parking Brake	1
20	283-52	Clevis Pin	1
21	321-3	Capscrew	2
22	47-0930	Footrest — R.H.	1



SEAT & STEERING WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	49-3240	Steering Wheel Assembly (Incl. Ref. #3)	1
2	3290-413	Washer — Belleville	16
3	47-2070	Insert — Steering Wheel	1
4	32121-78	Pin — Roll	1
5	47-1980	Cover — Steering Shaft	1
6	56-7400	Lever Arm — Height-of-Cut	1
7	56-7840	Decal — Deck Engage	1
8	23-0660	Switch — Ignition (Incl. Ref. #9-11)	1
9	218-461	Nut — Lock	3
10	218-412	Key — Set of 2	1
11	3254-5	Washer — Lock	1
12	56-7820	Decal — Ignition & Throttle	1
13	3290-307	Hairpin Cotter	2
14	44-7260	Decal — Shift Pattern	1
15	3253-4	Washer — Lock	3
16	2412-68	Clamp — Wire	4
17	322-3	Screw — Hex Hd.	15
18	3290-378	Cable Tie	1
19	56-7150	Bracket — Switch Mount	1
20	56-7640	Switch — Deck (Incl. Ref. #8)	1
21	32104-76	Screw — Self Tapping Acorn Head	2
22	56-7220	Throttle Control (Incl. Ref. #42)	1
23	321-3	Screw — Hex Hd.	2

Ref. No.	Part No.	Description	No. Used
24	56-7200	Base — Seat	1
25	56-7210	Rod — Seat Base	1
26	3256-23	Washer — Flat	8
27	55-8690	Seat Assembly	1
28	38-1420	Switch — Seat	1
29	3296-29	Nut — Lock	10
30	28-0540	Bolt — Shoulder	2
31	47-1850	Lever — Height-of-Cut	1
32	47-1840	Bracket — Height-of-Cut	2
33	3272-6	Pin — Cotter	1
34	322-5	Screw — Hex Hd.	5
35	32151-61	Ring — Retaining	2
36	56-7360	Bracket — Height-of-Cut Engagement	1
37	56-7370	Link — Deck Suspension	2
38	56-7300	Body Assembly	1
39	56-7830	Decal — Height-of-Cut	1
40	233-48	Knob	2
41	19-1470	Bolt — Shoulder	1
42	233-59	Knob	1
43	56-7540	Bell Crank — Deck Engage	1
44	56-7550	Bracket — Bell Crank	1
45	56-7800	Decal — Instructions	1
46	56-7560	Link — Bell Crank	1
47	56-7250	Lift Arm Assembly	1

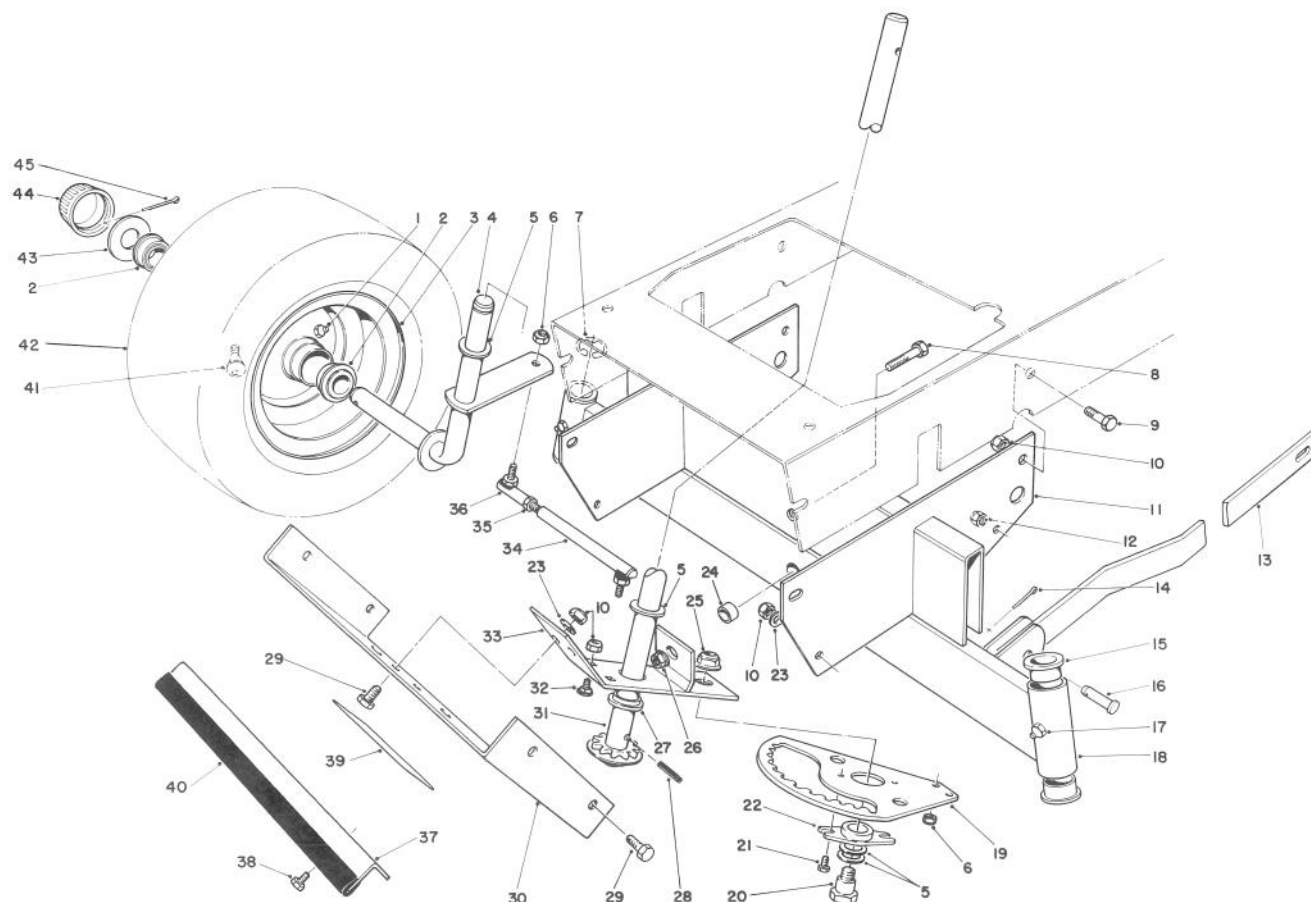


FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	302-5	Grease Fitting	2
2	251-210	Bearing	4
3	217-80	Rim	2
4	47-0600	Spindle — R.H.	1
*	47-0590	Spindle — L.H.	1
5	3-6498	Washer — Thrust	5
6	3296-4	Nut — Lock	4
7	32151-48	Ring — Retaining External	2
8	325-6	Capscrew	1
9	322-2	Capscrew	2
10	3296-29	Nut — Lock	8
11	47-0760	Axle Support	1
12	32152-4	Nut — Lock	1
13	47-0010	Arm — Front Deck Suspension	2
14	3272-6	Pin — Cotter	2
15	27-9080	Flange Bearing	4
16	283-2	Pin — Clevis	2
17	302-49	Grease Fitting	2
18	47-0980	Axle — Front (Incl. Ref. #15 & 17)	1
19	56-7510	Rack — Steering	1
20	56-7530	Bolt — Shoulder	1
21	12-3270	Screw — Special	2
22	56-7520	Bushing — Sector	1
23	3256-23	Washer — Plain	6

Ref. No.	Part No.	Description	No. Used
24	28-0380	Spacer — Front Axle	1
25	32128-21	Nut — Flange Lock	1
26	32128-23	Nut — Lock	1
27	47-0700	Bearing — Flange	1
28	32121-9	Pin — Roll	1
29	322-4	Screw — Cap Hex Hd.	6
30	56-7180	Cover — Front	1
31	56-7500	Shaft — Steering	1
32	3230-18	Bolt — Carriage	2
33	56-7470	Rack — Bracket Steering (Incl. Ref. #27)	1
34	47-0610	Tie Rod — Steering (Incl. Ref. #35 & 36)	2
35	3220-2	Jam Nut	2
36	2411-32	Ball Joint	2
37	57-6010	Guard — Front	1
38	32144-11	Thread Form Screw	2
39	26-4830	Decal — Warning	1
40	57-6040	Trim — Front Guard	1
41	232-27	Valve Stem w/Cap	2
42	231-116	Tire	2
43	28-2480	Washer	2
44	28-0060	Hub Cap	2
45	3272-12	Pin — Cotter	2
†	232-44	Inner Tube	2

* Not Illustrated


† Service Replacement Part

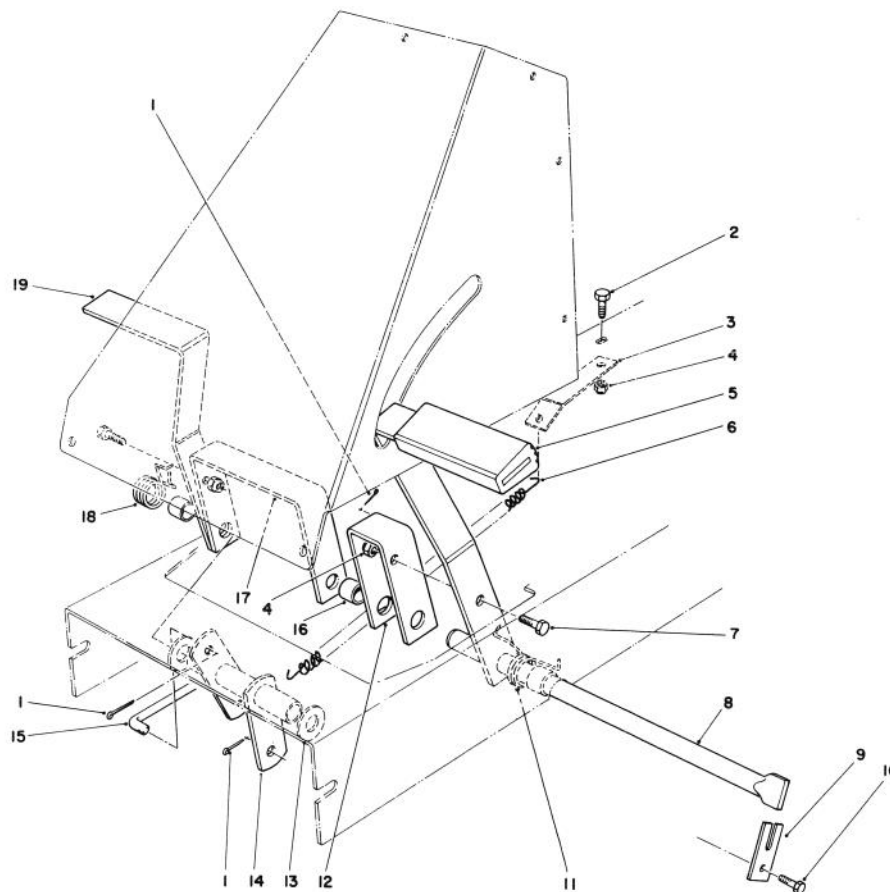

BRAKE & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3272-6	Cotter Pin	3
2	322-3	Hex Hd. Capscrew	1
3	56-7240	Bracket — Spring Retaining	1
4	3296-29	Locknut	3
5	47-1570	Pad — Foot Pedal	2
6	27-8960	Spring — Extension	1
7	322-5	Hex Hd. Capscrew	2
8	47-0770	Shaft — Pedal Pivot	1
9	47-0780	Retainer — Shaft	1
10	321-3	Hex Hd. Capscrew	1

Ref. No.	Part No.	Description	No. Used
11	56-7070	Spring — Torsion Clutch	1
12	47-0560	Bracket — Clutch Pedal	1
13	3256-27	Washer — Flat	2
14	56-7650	Pivot Tube	1
15	56-7570	Rod — Engagement	1
16	47-0570	Spacer — Pedal	3
17	47-0550	Bracket — Brake Pedal	1
18	56-7080	Spring — Torsion Brake	1
19	47-0540	Pedal	2

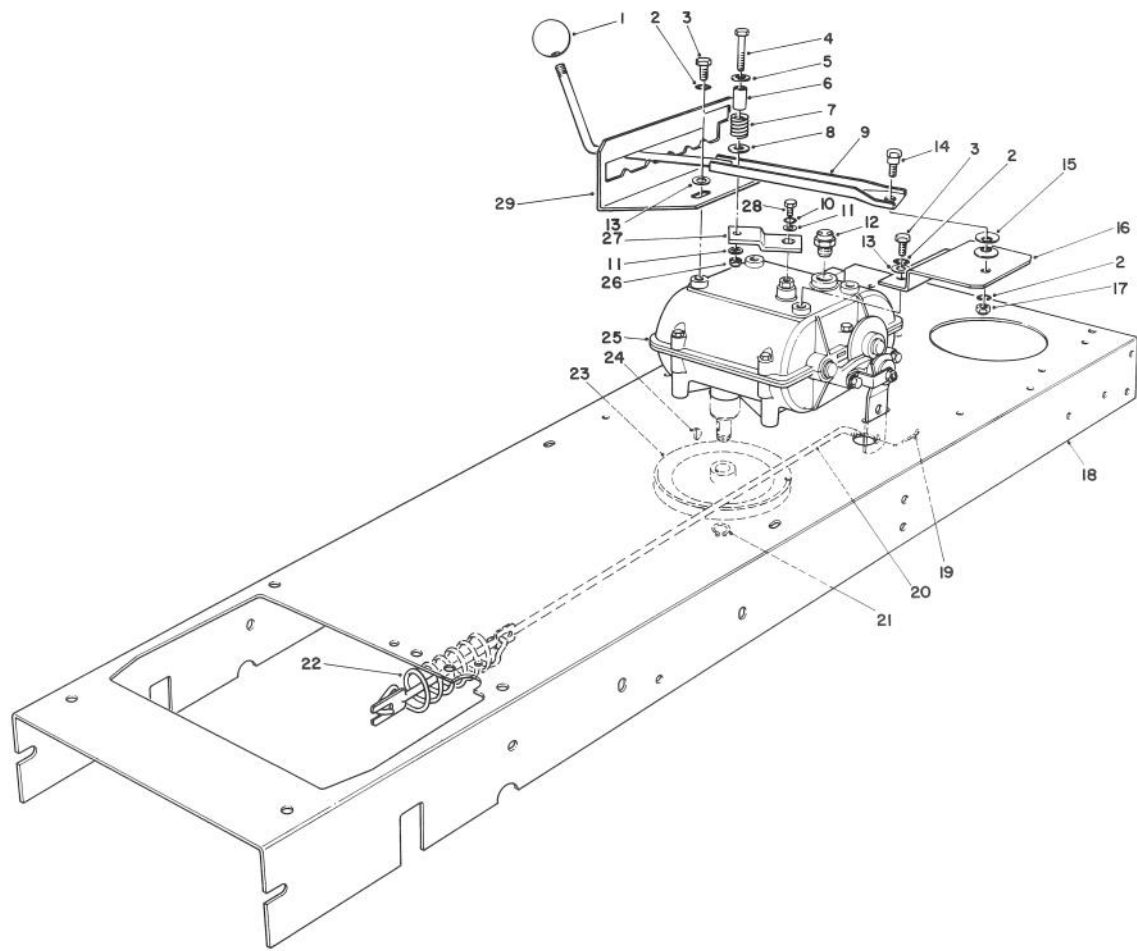


TRANSMISSION LINKAGE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-48	Knob	1
2	3253-4	Lockwasher	4
3	32144-11	Screw — Thread Forming	4
4	321-15	Hex Hd. Capscrew	1
5	3256-55	Washer — Fender	1
6	56-7740	Spacer — Split	1
7	56-7730	Spring — Compression	1
8	3256-4	Washer — Flat	1
9	56-7600	Lever — Shift	1
10	3253-3	Lockwasher	2
11	3256-22	Washer — Flat	2
12	28-4250	Switch — Neutral Start	1
13	3256-23	Washer — Flat	1
14	19-1470	Bolt — Shoulder	1
15	3290-413	Washer — Belleville	2

Ref. No.	Part No.	Description	No. Used
16	56-7610	Bracket — Shift Mounting	1
17	3296-29	Locknut	1
18	56-7160	Frame — Main	1
19	3272-6	Cotter Pin	1
20	56-7060	Rod — Brake	1
21	32120-64	Ring — Retaining	1
22	57-9940	Spring — Brake	1
23	7-4085	Pulley — Transmission	1
24	3257-5	Key — Woodruff	1
25	47-1530	Transmission — 5 Speed	1
26	32152-4	Locknut	1
27	56-7620	Lever — Shift	1
28	329-4	Hex Hd. Capscrew	1
29	56-7630	Gate — Shift	1



TRANSMISSION MODEL 770A

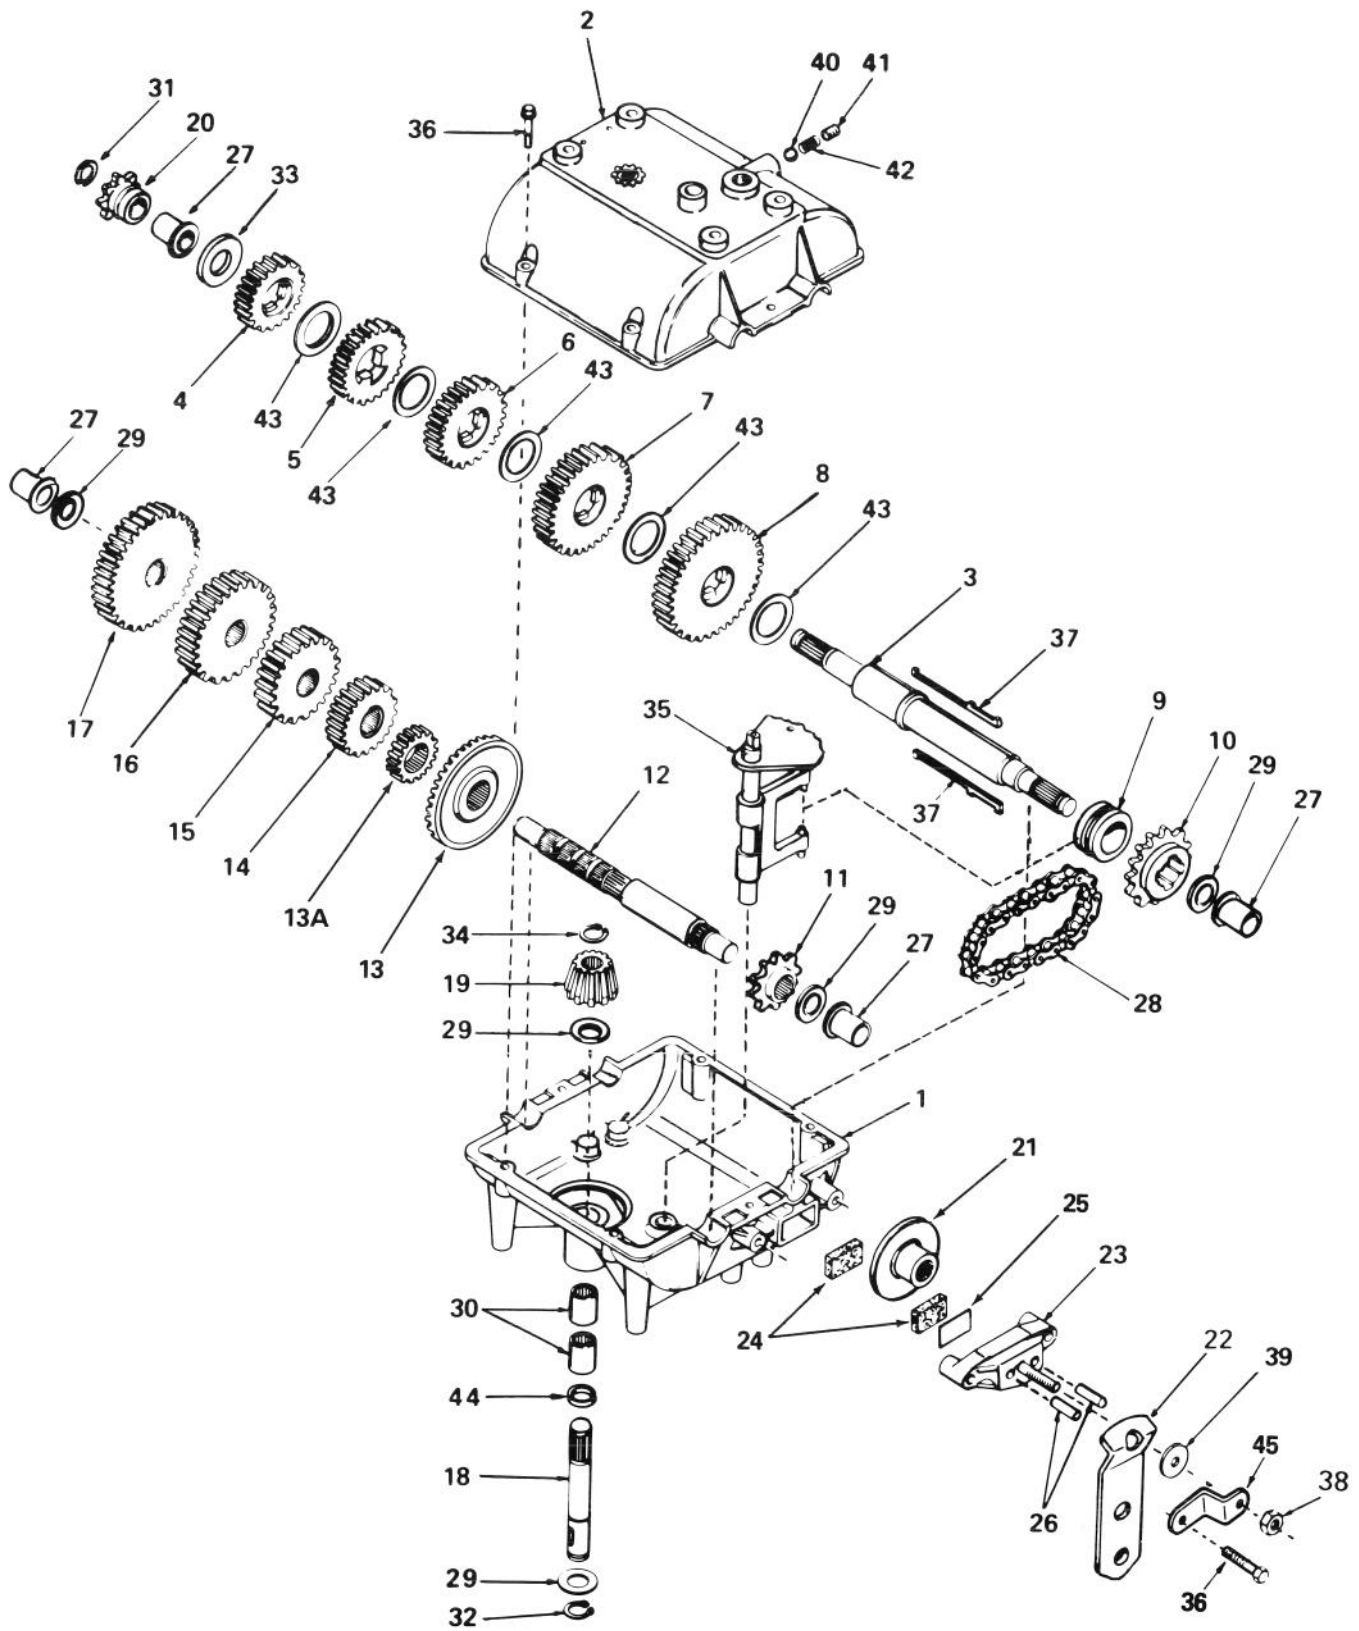

TRANSMISSION MODEL 770A

Ref. No.	Part No.	Description	No. Used
1	770061	Case — Transmission	1
2	772083	Cover — Transmission	1
3	776161	Shaft — Output & Brake	1
4	778121A	Gear — Spur (20 teeth)	1
5	778122A	Gear — Spur (22 teeth)	1
6	778123A	Gear — Spur (25 teeth)	1
7	778124A	Gear — Spur (30 teeth)	1
8	778125	Gear — Spur (35 teeth)	1
9	784266	Collar — Shift	1
10	786083	Sprocket (18 teeth)	1
11	786082	Sprocket (9 teeth)	1
12	776134	Shaft — Counter	1
13	778137A	Gear — Bevel (42 teeth)	1
13A	778136	Gear — Spur (15 teeth)	1
14	778126A	Gear — Spur (20 teeth)	1
15	778127A	Gear — Spur (25 teeth)	1
16	778128A	Gear — Spur (28 teeth)	1
17	778129A	Gear — Spur (30 teeth)	1
18	776135	Shaft — Input	1
19	778113A	Bevel Pinion — Input	1
20	786048	Sprocket (8 teeth)	1
21	790003	Disk — Brake	1
22	790013	Lever — Brake	1
23	790025	Holder — Brake Pad	1

Ref. No.	Part No.	Description	No. Used
24	790006	Pad — Brake	1
25	790007	Plate — Brake Pad	1
26	786026	Pin — Dowel	1
27	780105A	Bushing — Flanged	1
28	786081	Chain Roller (No. 41 chain, 24 links)	1
29	780072	Race — Thrust	1
30	780086	Bearing — Needle	1
31	792072	Ring — Retaining	1
32	792035	Ring — Retaining	1
33	780109	Washer	1
34	788040	Ring — Retaining	1
35	784267	Rod & Fork Assy. — Shift	1
36	792073	Screw — Hex Hd.	1
37	792089A	Key	1
38	792075	Nut — Lock	1
39	792076	Washer — Flat	1
40	792077	Ball — Steel	1
41	792078	Screw — Set	1
42	792079	Spring	1
43	780108	Washer — Thrust	1
44	792001	Ring — Square Cut	1
45	786086	Bracket — Brake Lever	1

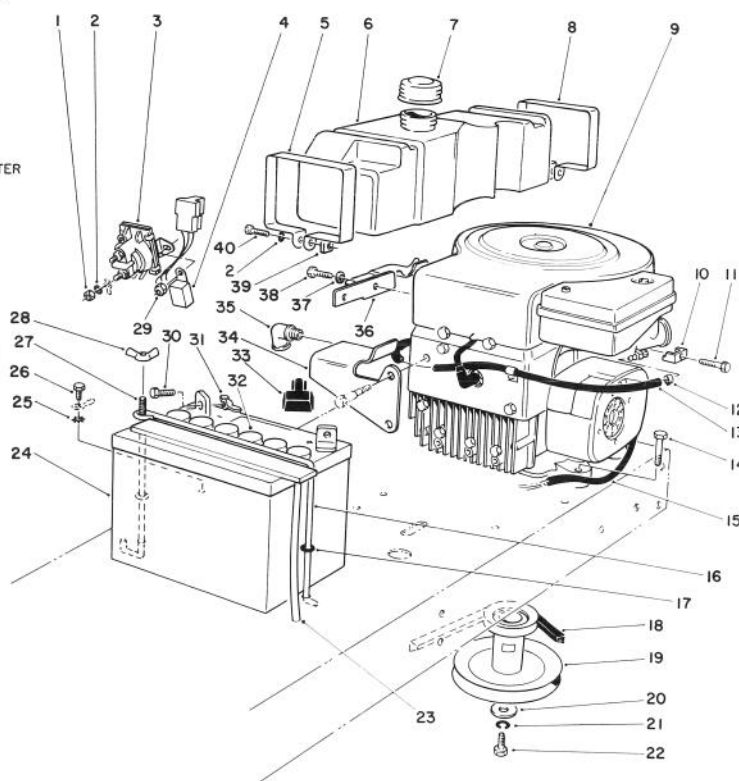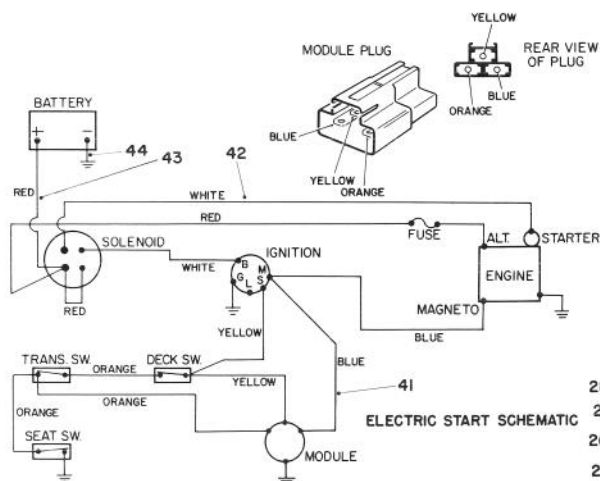


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3218-1	Hex Jam Nut	2
2	3253-2	Lockwasher	4
3	47-1910	Solenoid	1
4	28-7890	Module — Interlock	1
5	57-4060	Retainer — Tank Front	1
6	56-7050	Tank — Fuel (5 qt.)	1
7	55-3570	Cap — Fuel Tank	1
8	57-4070	Retainer — Tank Rear	1
9	56-7770	Engine — 11 H.P.	1
10	2210-249	Clamp — Casing	1
11	2210-248	Hex Hd. Capscrew	1
12	2210-185	Clamp — Fuel Line	2
13	47-2987	Line — Fuel	1
14	322-7	Hex Hd. Capscrew	4
15	57-4150	Cover — Protective	1
16	56-7710	Hold Down — Battery	1
17	237-143	O-Ring	2
18	47-1410	Belt — Traction Drive	1
19	47-1960	Pulley — Engine	1
20	3256-25	Washer — Flat	1
21	3253-22	Lockwasher	1
22	3212-5	Hex Hd. Capscrew	1
23	56-2540	Tube — Vent	1

Ref. No.	Part No.	Description	No. Used
24	56-7700	Battery	1
25	3254-2	Ext. Tooth Lockwasher	1
26	32104-82	Hex Hd. Self Tapping Screw	1
27	56-7720	Post — Battery	1
28	32103-12	Wing Nut	1
29	32152-4	Locknut	2
30	321-3	Hex Hd. Capscrew	2
31	32103-22	Wing Nut	2
32	218-560	Cap — Battery	6
33	28-8080	Boot — Terminal	1
34	56-4390	Bracket — Tank Front	1
35	2811-10	Elbow — 90° Street	1
36	57-4050	Bracket — Tank Rear	1
37	3256-23	Washer	2
38	322-4	Hex Hd. Capscrew	2
39	32107-11	Nut — Square	2
40	3274-51	Hex Hd. Capscrew	2
41	56-7680	Wiring Harness	1
42	56-7660	Wiring Harness — Starter	1
43	56-7670	Cable — Battery Positive	1
44	56-7870	Cable — Battery Negative	1
*	3290-379	Cable Tie	1


* Not Illustrated

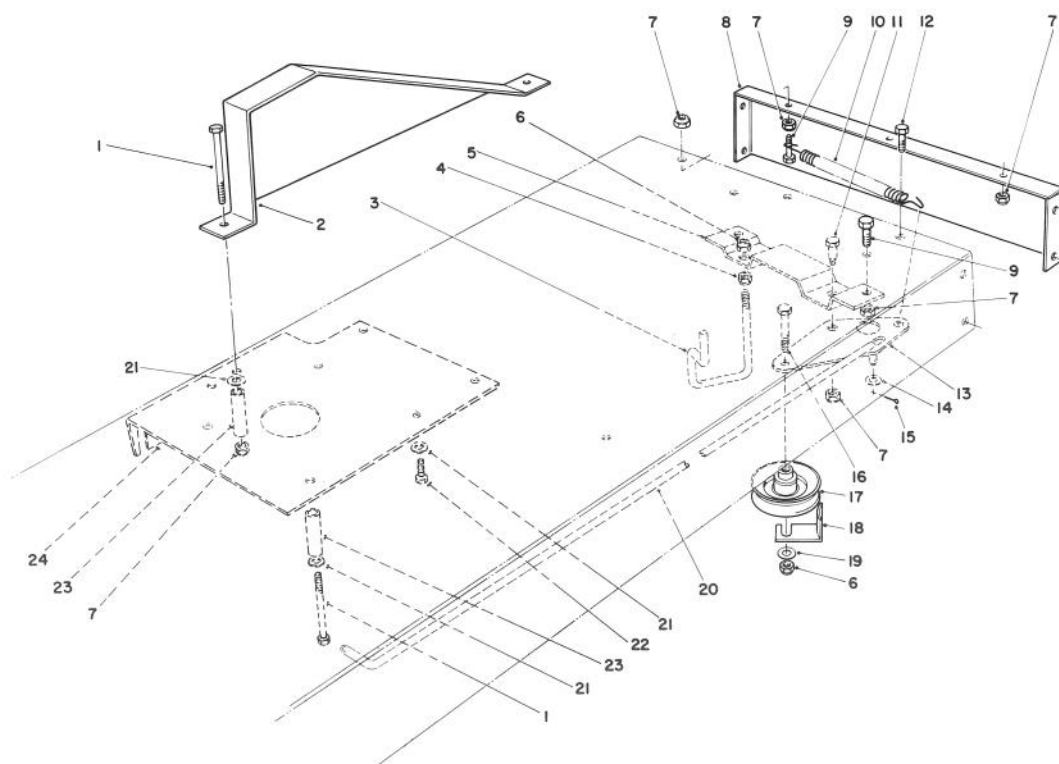

TRACTION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322-11	Hex Hd. Capscrew	2
2	47-1220	Guard — Chain	1
3	47-0500	Guide — Belt	1
4	32153-2	Locknut	1
5	47-0471	Bracket — Traction Support	1
6	32152-2	Locknut	2
7	3296-29	Locknut	8
8	47-0730	Frame — Rear	1
9	322-7	Hex Hd. Capscrew	2
10	27-8960	Spring — Extension	1
11	37-8770	Bolt — Shoulder	1
12	322-3	Hex Hd. Capscrew	2

Ref. No.	Part No.	Description	No. Used
13	47-0481	Bracket — Traction Pivot	1
14	3256-22	Washer — Flat	1
15	3272-6	Pin — Cotter	1
16	323-9	Hex Hd. Capscrew	1
17	12-5820	Pulley — Idler	1
18	12-9020	Retainer Belt	1
19	3256-24	Washer — Flat	1
20	47-0490	Rod — Traction	1
21	3256-23	Washer — Flat	7
22	32140-45	Hex Hd. Machine Screw	3
23	47-0920	Spacer — Split	2
24	47-1950	Plate — Reinforcement	1

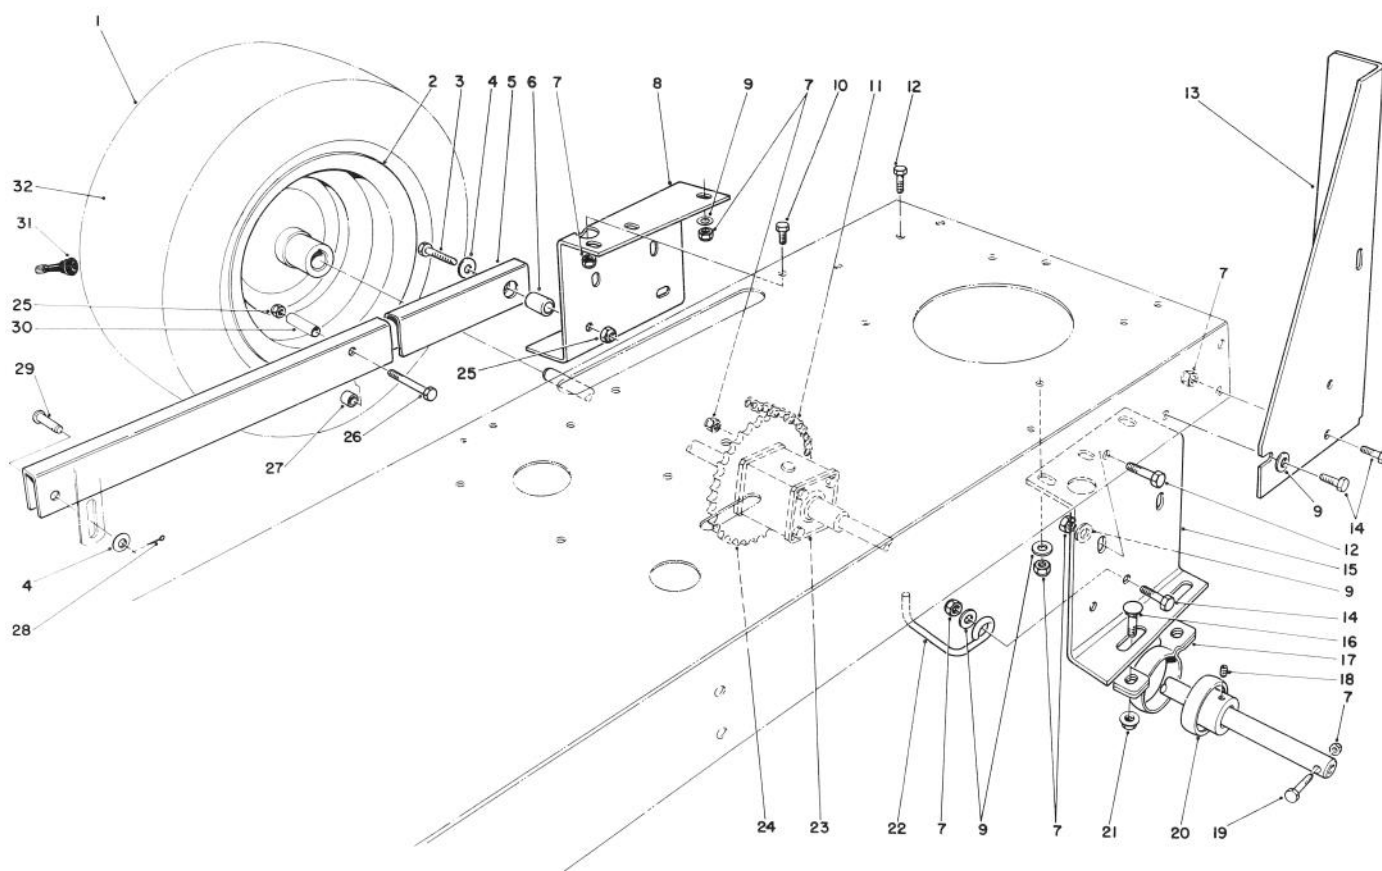


REAR AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	231-117	Tire	2
2	242-78	Rim	2
3	323-9	Hex Hd. Capscrew	2
4	3256-24	Washer — Flat	4
5	47-0020	Arm — Rear Deck Suspension	2
6	56-7430	Pin — Arm Support	2
7	3296-29	Locknut	18
8	56-7410	Support — Axle Rear R.H.	1
9	3256-23	Washer — Flat	12
10	322-3	Hex Hd. Capscrew	1
11	56-7230	Chain — Roller	1
12	322-4	Hex Hd. Capscrew	4
13	56-7450	Standbar — L.H.	1
*	56-7440	Standbar — R.H.	1
14	322-5	Hex Hd. Capscrew	7
15	56-7420	Support — Axle Rear L.H.	1
16	3231-30	Carriage Bolt	4

Ref. No.	Part No.	Description	No. Used
17	47-1480	Retainer — Pillow Block	2
18	3245-35	Set Screw 1/4-28	4
*	3246-15	Set Screw 5/16-18	4
19	322-9	Hex Hd. Capscrew	2
20	47-1490	Bearing — Ball (Incl. Ref. #18)	2
21	32128-21	Flange Locknut	4
22	47-2010	Belt Guide — Engine Pulley	1
23	56-7110	Differential	1
24	56-7090	Sprocket — Differential	1
25	32152-2	Locknut	4
26	323-13	Hex Hd. Capscrew	2
27	47-0910	Spacer — Inner	2
28	3272-6	Pin — Cotter	2
29	283-42	Pin — Clevis	2
30	47-0920	Spacer — Split	2
31	232-27	Valve Stem w/Cap	2
32†	232-39	Inner Tube	2

* Not Illustrated

† Service Replacement Part

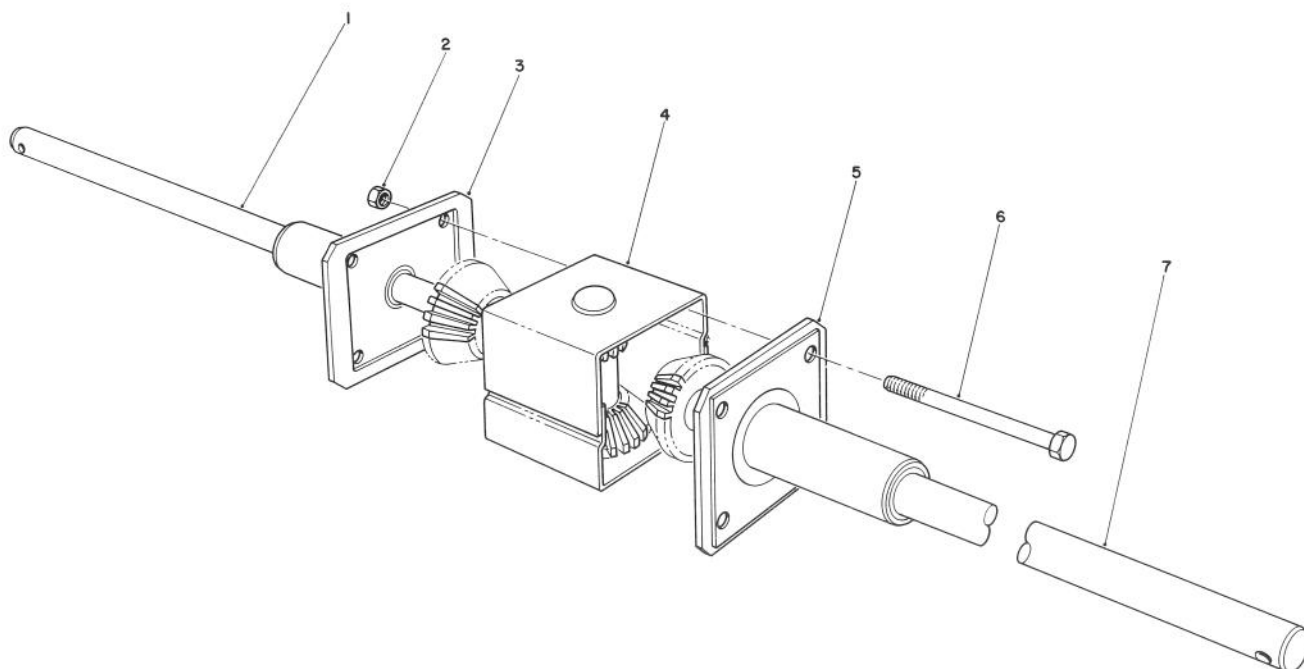


DIFFERENTIAL ASSEMBLY

(Used on units with serial no. 6000101 thru 6001114 & 6001322 & up)

Ref. No.	Part No.	Description	No. Used
1	55-7760	Axle — R.H.	1
2	32152-1	Locknut	4
3	55-7770	End Cap — R.H.	1
4	55-7780	Gear Case — Transfer	1

Ref. No.	Part No.	Description	No. Used
5	55-7771	End Cap — L.H.	1
6	322-22	Hex Hd. Capscrew	4
7	55-7761	Axle — L.H.	1
*	56-7110	Differential Complete	1

* Not Illustrated

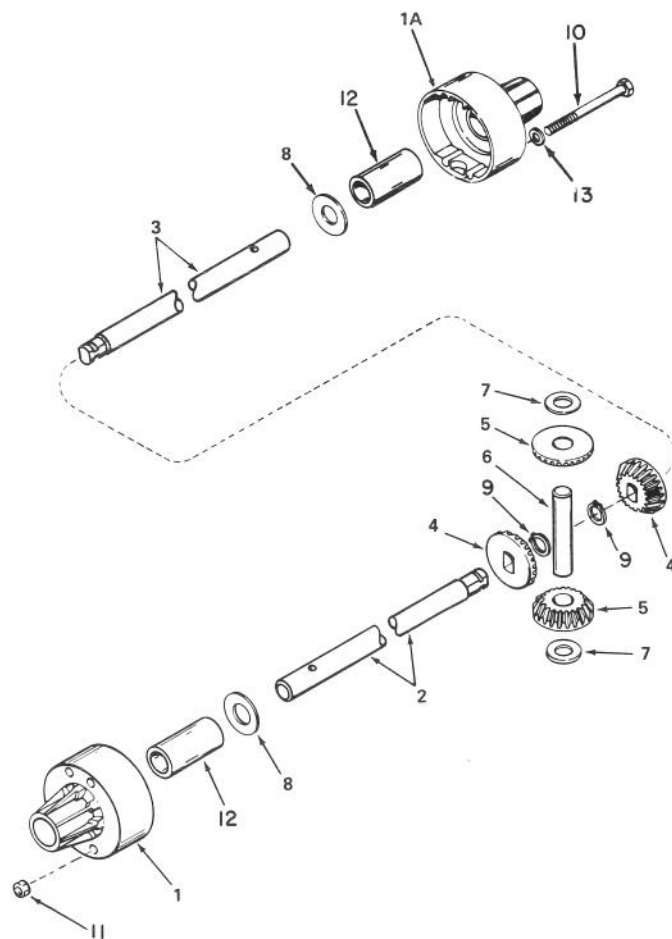


DIFFERENTIAL MODEL 100-050

(Used on units with serial no. 6001115-6001321)

Ref. No.	Part No.	Description	No. Used
1	774344	Housing — Differential Carrier (Incl. #13)	1
1A	774345	Housing — Differential Carrier (Incl. #13)	1
2	774661	Axle (10-1/4" long)	1
3	774662	Axle (18-7/8" long)	1
4	778067	Gear — Bevel	1
5	778068	Gear — Pinion	1


Ref. No.	Part No.	Description	No. Used
6	786040	Pin — Drive	1
7	780096	Washer — Thrust	1
8	780001	Washer — Sprocket	1
9	792018	Ring — Snap	1
10	792041	Screw — Hex. Hd.	1
11	792042	Nut — Lock	1
12	780077	Bushing	1
13	792061	Washer	1

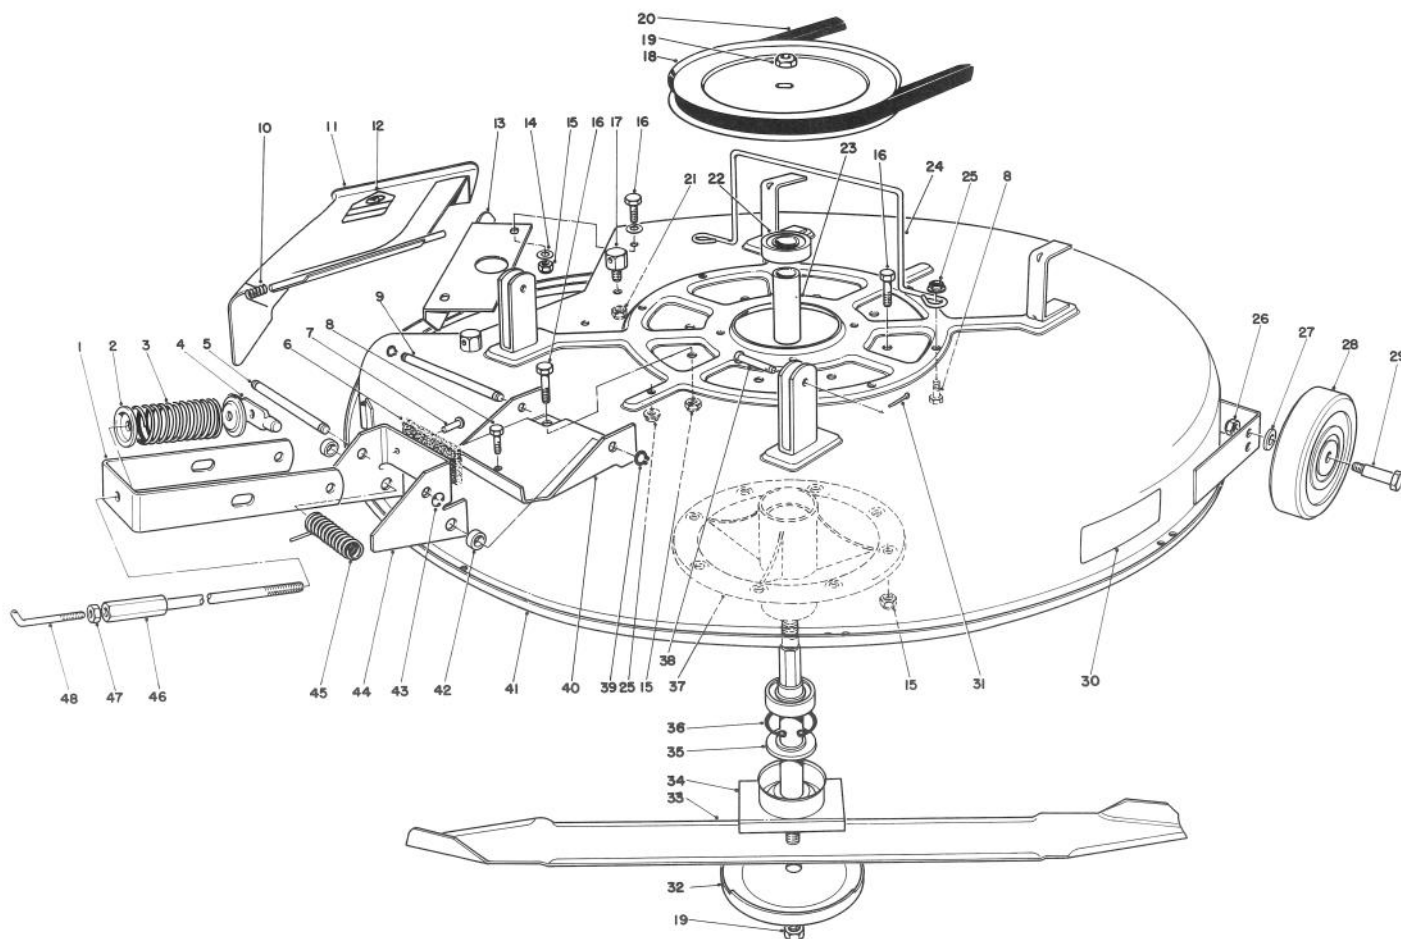

MOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	47-1180	Bracket — Engagement	1
2	47-1140	Retainer — Spring Top	2
3	47-0960	Spring — Compression	1
4	47-1200	Shaft — Adjusting	1
5	47-1230	Pin — Clevis	1
6	47-0210	Pad — Brake	1
7	3295-43	Rivet	2
8	321-4	Capscrew	3
9	47-1670	Pin — Clevis	1
10	28-8010	Spring — Torsion	1
11	44-5930	Deflector Assembly (Incl. Ref. #12)	1
12	54-9220	Decal — Deflector Caution	1
13	44-5720	Baffle Deck	1
14	3256-23	Washer — Plain	4
15	3296-29	Nut — Lock	10
16	322-4	Capscrew	10
17	28-7350	Pivot Post	1
18	47-1350	Pulley	1
19	17-0980	Nut — Special	2
20	47-1420	V-Belt	1
21	32153-2	Nut — Lock	1
22	251-297	Bearing	2
23	47-0100	Spacer — Bearing	1
24	57-4210	Guide — Belt	2


Ref. No.	Part No.	Description	No. Used
25	32128-10	Nut — Locking Flange	3
26	3296-39	Nut — Lock	2
27	3256-24	Washer — Plain	2
28	29-6010	Wheel	2
29	56-6590	Wheel Bolt	2
30	47-7240	Decal — Deck	1
31	3272-6	Cotter Pin	2
32	7-3522	Anti-Scalp Cup	1
33	33-4750	Blade	1
34	47-0090	Spindle Shaft	1
35	47-0110	Spacer — Spindle	1
36	32120-11	Ring — Retaining Internal	1
37	56-7030	Spindle Body	1
38	283-2	Pin Clevis	2
39	32151-57	Ring — Retaining External	2
40	47-1240	Channel — Deck Engagement	1
41	47-1600	Cutter Deck	1
42	47-1900	Spacer — Deck Brake Support	2
43	32120-18	Ring — Retaining External	2
44	47-1610	Support Deck Brake Assembly (Incl. Ref. #6 & 7)	1
45	40-6230	Spring — Torsional	1
46	47-1150	Hub — Adjusting	1
47	3218-3	Nut — Jam	1
48	47-1130	Rod — Adjusting	1

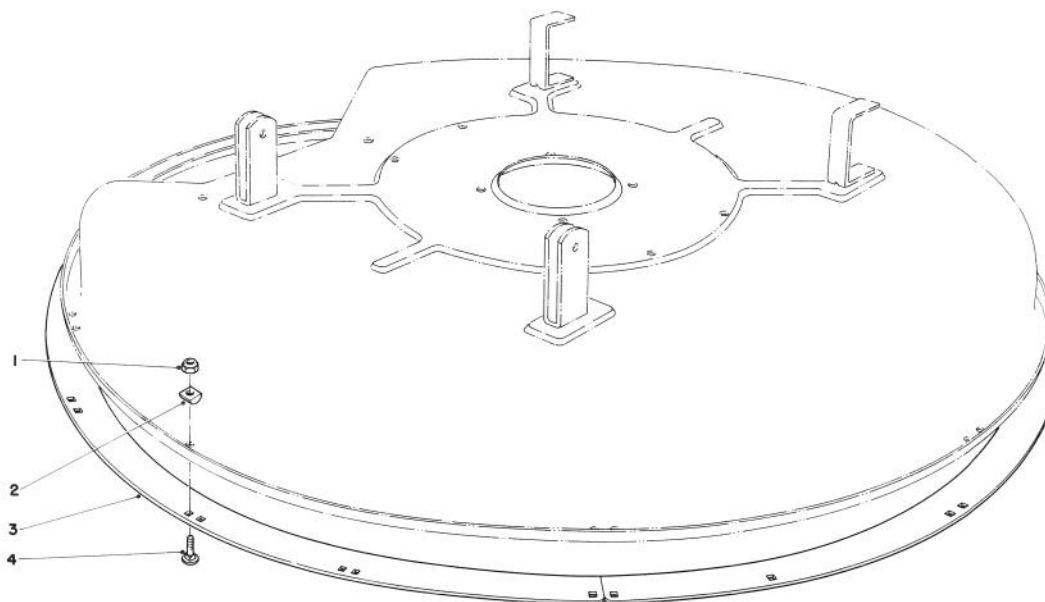

WET GRASS BAGGING KIT NO. 38-5730 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3296-29	Locknut	12
2	56-7880	Spacer — Deck Ring	12


Ref. No.	Part No.	Description	No. Used
3	38-6030	Ring — Deck	4
4	3230-2	Carriage Bolt	12

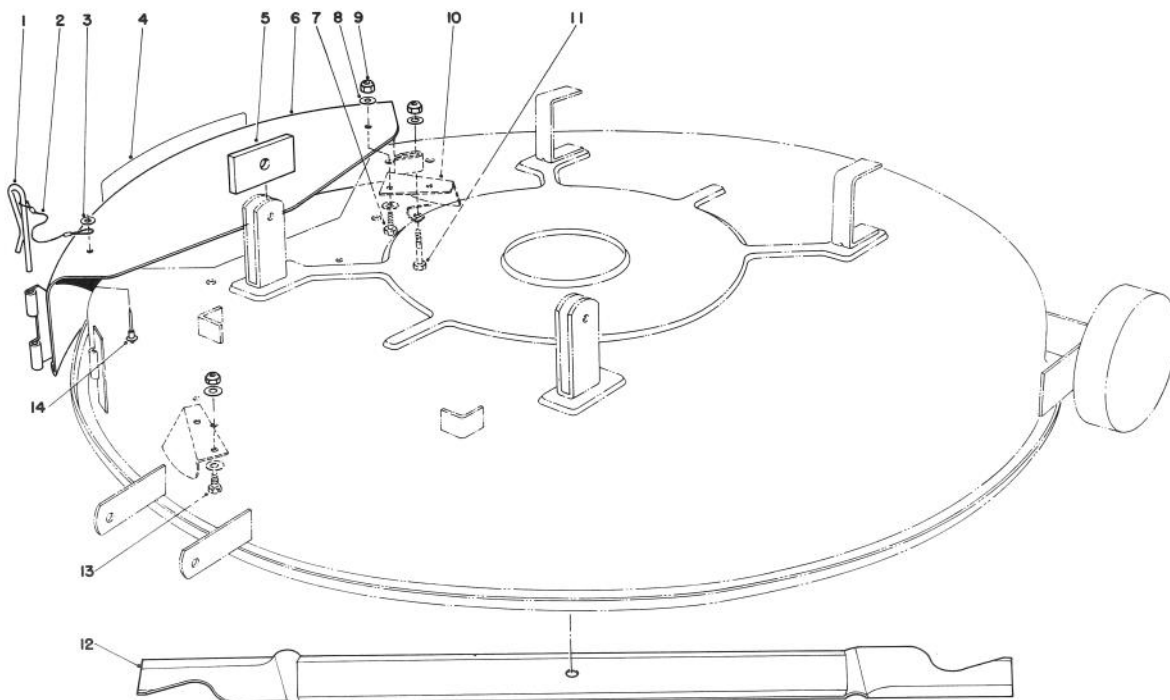

MULCHER KIT MODEL 59155 (Optional)

Ref. No.	Part No.	Description	No. Used
1	28-8130	Pin — Chute Locking	1
2	28-8070	Lanyard	1
3	3256-49	Washer	1
4	44-5910	Decal — Mulcher Cover	1
5	44-5820	Spacer — Deck Angle	2
6	44-5700	Cover — Mulcher Assembly (Incl. Ref. #1-4 & 14)	1
7	322-5	Capscrew — Hex Head	1

Ref. No.	Part No.	Description	No. Used
8	3256-23	Washer	9
9	3296-29	Locknut	5
10	44-5810	Kicker	2
11	322-10	Capscrew — Hex Head	1
12	39-3480	Blade — Mulcher	1
13	322-3	Capscrew — Hex Head	3
14	3290-282	Rivet — Pop	1

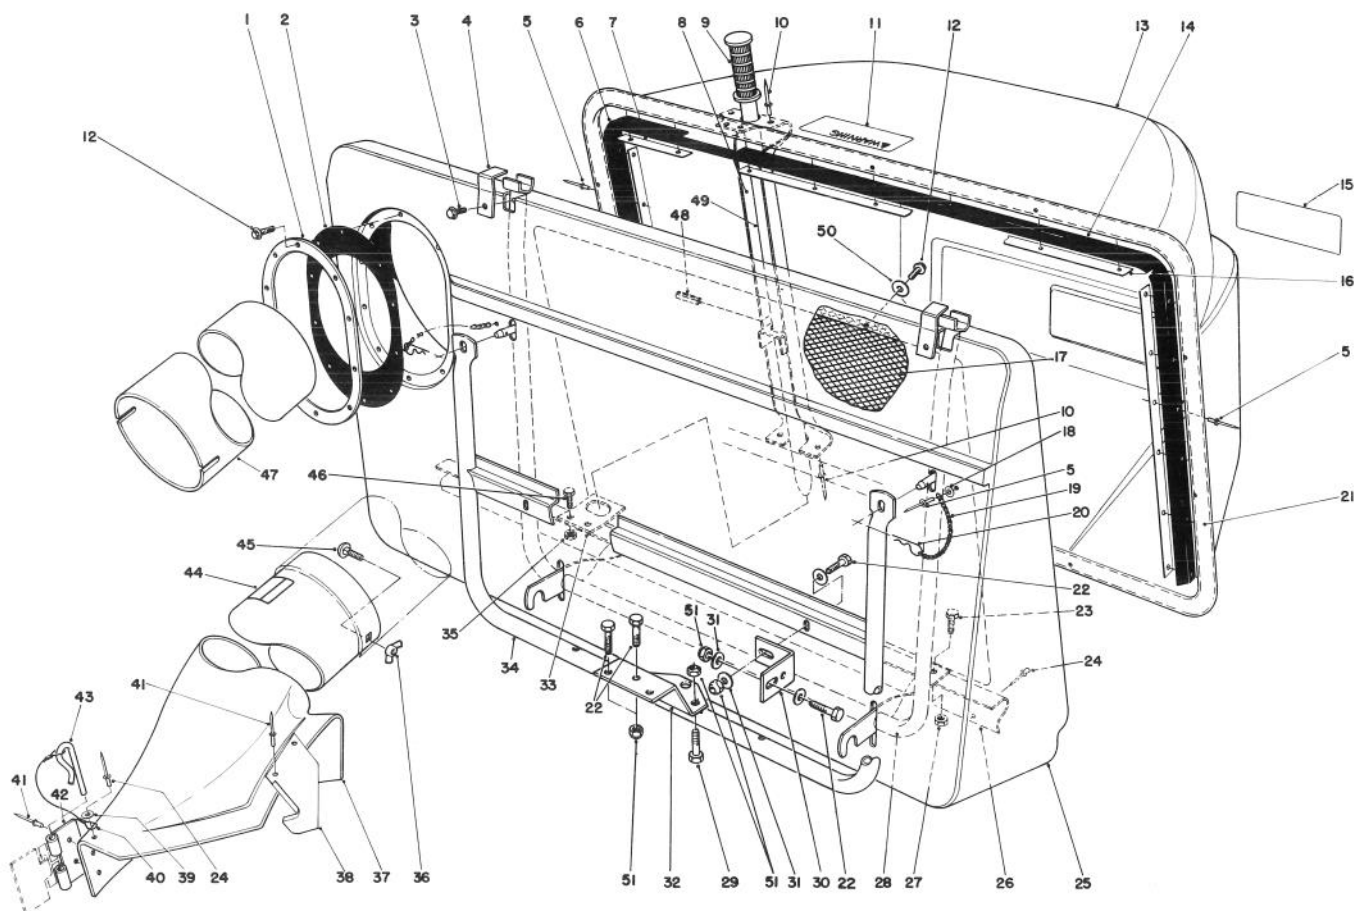


EASY-EMPTY GRASS CATCHER MODEL 59111 (Optional)

Ref. No.	Part No.	Description	No. Used
1	28-7760	Ring — Retainer	1
2	28-7770	Ring — Retainer Rubber	1
3	32104-60	Screw — Hex Hd. Self Tapping	2
4	28-7700	Retainer Pivot Bracket	2
5	3290-415	Domed Head Rivet	22
6	36-2520	Seal — Bag R.H.	1
7	29-5540	Retainer — Ext. Top	1
8	38-2920	Channel — Dump Handle	1
9	233-40	Grip Handle	1
10	3290-409	Domed Head Rivet	16
11	55-7270	Decal — Warning	1
12	32104-76	Screw — Self Tapping	18
13	36-2120	Grass Basket — Rear	1
14	36-2530	Seal — Bag L.H.	1
15	25-2200	Decal	1
16	29-5550	Retainer — Ext. Bag	3
17	28-7840	Screen — Bag	1
18	5-1254	Washer	2
19	2830-10	Chain	2
20	3290-355	Hair Pin Cotter	2
21	28-7670	Frame — Bag Support	1
22	322-4	Capscrew — Hex Head	7
23	322-2	Capscrew — Hex Head	2
24	3290-282	Rivet	6
25	28-7810	Bag Front	1
26	28-7830	Frame Support Bracket	1
27	32152-1	Locknut	2

Ref. No.	Part No.	Description	No. Used
28	28-7710	Bag Frame	1
29	322-7	Capscrew — Hex Head	4
30	56-7190	Bracket — Mtg. Grass Catcher	2
31	3256-23	Washer — Plain	9
32	51-2970	Bracket — Mtg. Grass Catcher	1
33	28-7820	Hanger — Frame Tower	1
34	28-7780	Bag Support	1
35	32152-4	Locknut	2
36	32103-14	Wing Nut	2
37	28-8060	Chute Assembly (Incl. Ref. #24, 38-44)	1
38	33-2090	Bracket — Chute Support	1
39	3256-49	Washer	1
40	28-8070	Lanyard	1
41	3290-412	Rivet	4
42	28-8050	Bracket — Chute Mounting	1
43	28-8130	Pin — Chute Locking	1
44	54-9220	Decal — Danger	1
45	3229-1	Carriage Bolt	2
46	321-3	Capscrew — Hex Head	2
47	47-7210	Duct	1
48	32121-79	Roll Pin	1
49	29-5470	Dump Handle	1
50	3256-61	Washer — Fender	8
51	3296-29	Nut — Lock	9
*†	56-6740	Hanger Extension	2

* Not Illustrated


† Service Replacement Part

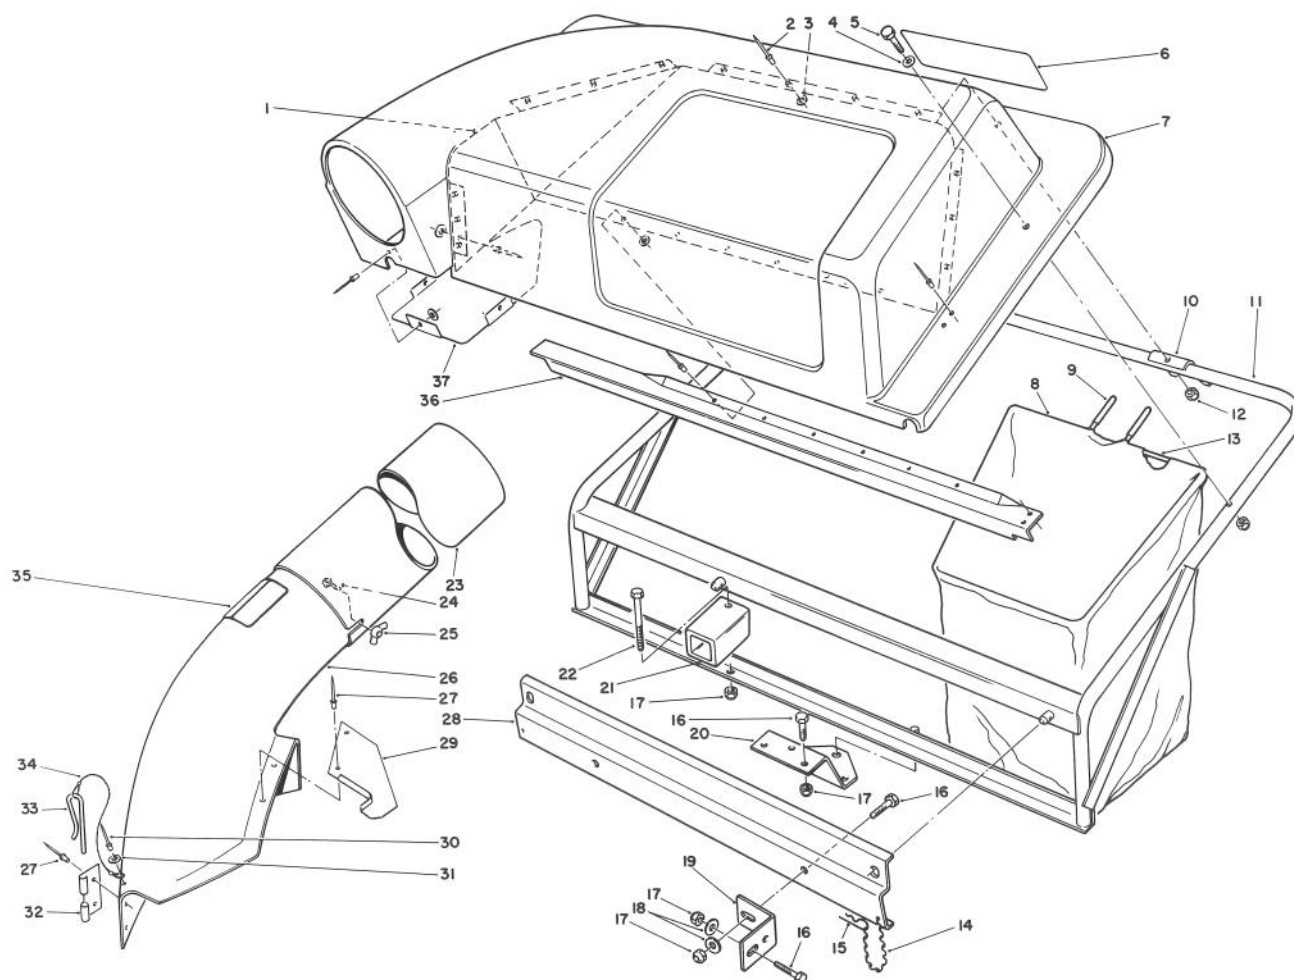

TWIN BAGGER GRASS CATCHER MODEL NO. 59122 (Optional)

Ref. No.	Part No.	Description	No. Used
1	36-4230	Screen — Cover	1
2	3269-4	Rivet — Pop	23
3	3256-14	Washer — Plain	21
4	3256-23	Washer — Plain	4
5	322-7	Screw — Cap Hex Hd.	4
6	47-6890	Decal — Twin Bagger	1
7	47-2190	Cover	1
8	47-2560	Bag — Twin Bagger (Incl. Ref. #9 & 13)	2
9	47-2550	Grip — Bag Handle	2
10	47-2580	Bracket — Bag Frame	2
11	47-2630	Frame	1
12	32111-8	Nut — Acorn	4
13	47-2620	Frame — Bag	1
14	2830-9	Chain	2
15	3290-355	Hair Pin Cotter	2
16	322-4	Capscrew	7
17	3296-29	Nut — Lock	8
18	3256-23	Washer — Flat	8
19	56-7190	Bracket — Mtg. Grass Catcher	2

Ref. No.	Part No.	Description	No. Used
20	51-2970	Plate — Mtg. Grass Catcher	1
21	51-2960	Tube — Frame Support	1
22	322-10	Screw — Cap Hex Hd.	1
23	47-7210	Duct	1
24	3229-1	Carriage Bolt	2
25	32103-14	Nut — Wing	2
26	28-8060	Chute Assembly (Incl. Ref. #27, 29-35)	1
27	3290-412	Pop Rivet	4
28	36-4550	Bracket — Frame Support	1
29	33-2090	Bracket Chute Support	1
30	3290-282	Pop Rivet	1
31	3256-49	Washer — Plain	1
32	28-8050	Bracket Chute Mounting	1
33	28-8130	Pin — Chute Locking	1
34	28-8070	Lanyard	1
35	54-9220	Decal — Instruction Chute	1
36	47-2650	Bracket — Screen Support	1
37	47-6760	Shield — Cover	1

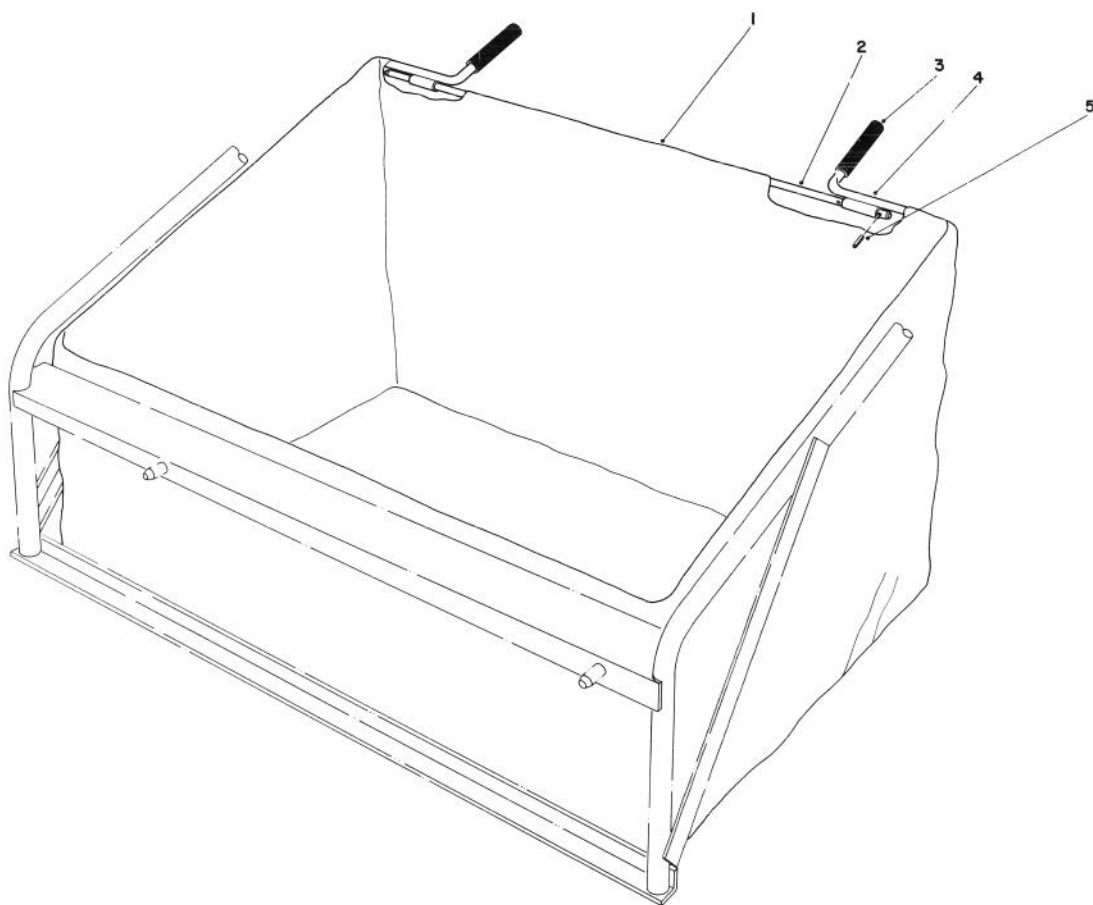


LEAF BAG MODEL NO. 59123 (Optional)

Ref. No.	Part No.	Description	No. Used
1	47-6860	Bag — Leaf Catcher	1
2	47-6800	Rod — Bag Frame	1
3	47-6710	Grip — Leaf Bag Handle	2
4	47-6830	Bag Frame	1

Ref. No.	Part No.	Description	No. Used
5	32121-73	Rollpin	2
*	505-78	Adhesive — Plastic	1
*	47-7550	Bag (Complete)	1

* Not Illustrated

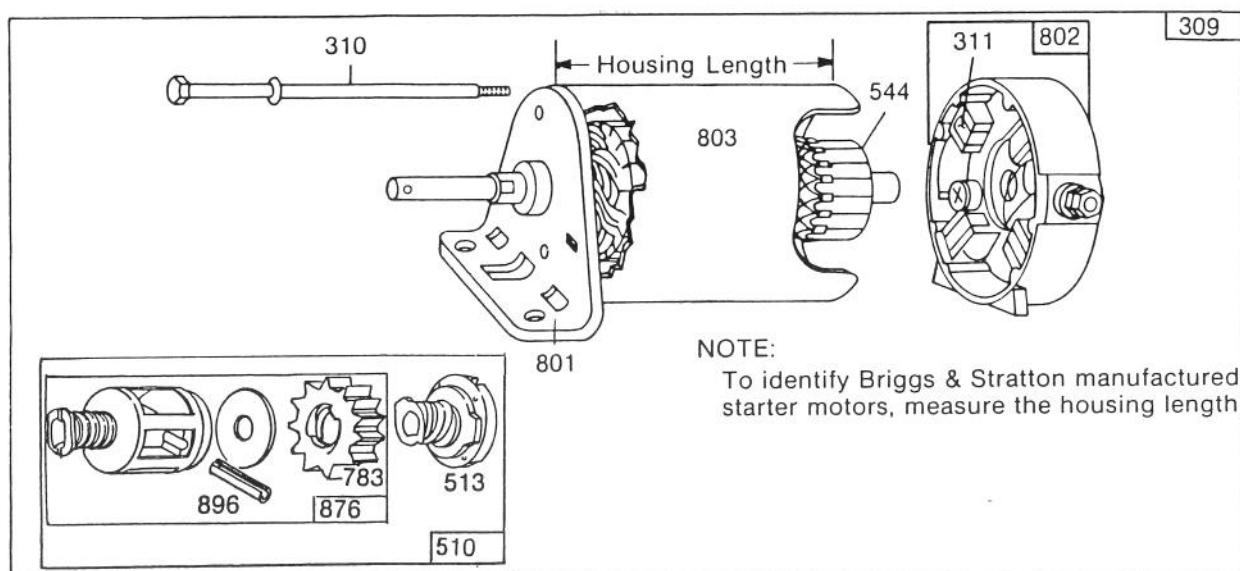


ENGINE BRIGGS & STRATTON MODEL NO. 252707-0621-01 (Continued)

Ref. No.	Part No.	Description	No. Used
309	394805	Motor and Drive Assembly	1
310	94003	Thru Bolt Assembly	1
311	395538	Brush Assembly	1
510	396865	Drive Assembly	1
513	391135	Clutch Assembly	1
544	390837	Armature Assembly	1

Ref. No.	Part No.	Description	No. Used
783	280104	Gear	1
801	394856	End Cap Assembly — Drive	1
802	395537	End Cap Assy. — Commutator	1
803	393825	Housing Assembly	1
876	393254	Retainer Kit	1
896	93754	Roll Pin	1

ENGINE BRIGGS & STRATTON MODEL NO. 252707-0621-01

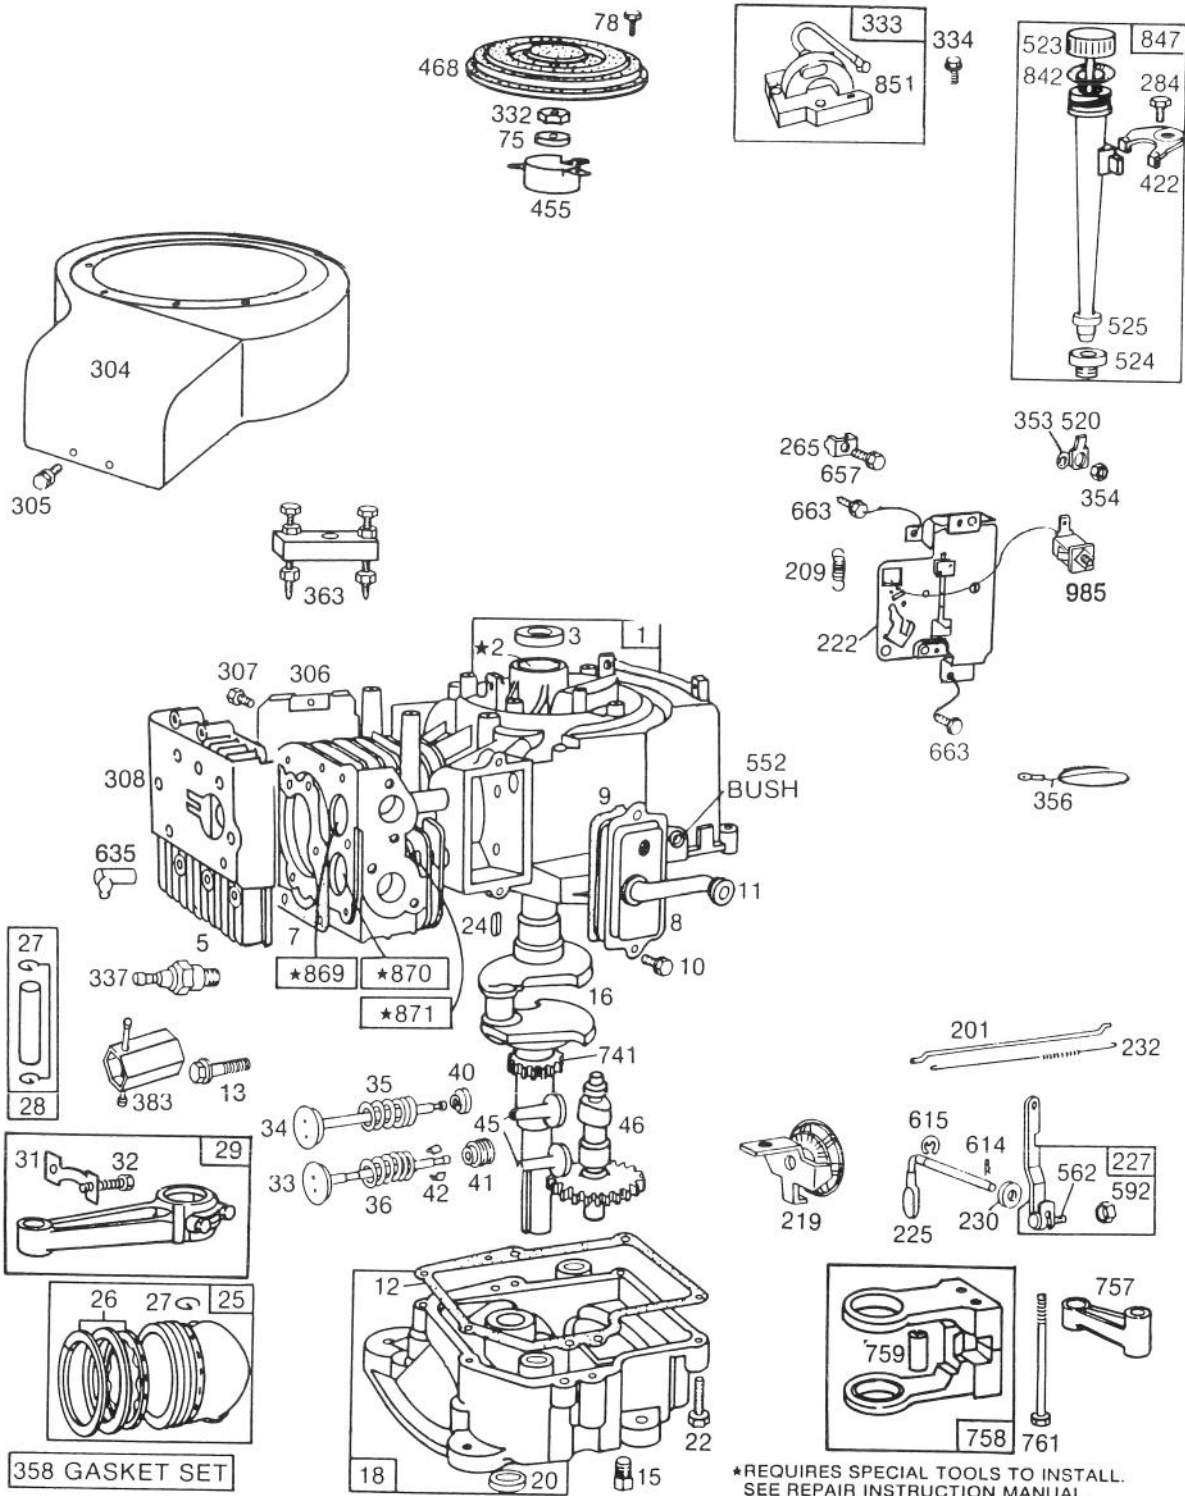


Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL NO. 252707-0621-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	396324	Cylinder Assembly	1	219	391764	Oil Slinger — Gov. Gear and Bracket Assembly	1
2	261623	Bearing — Cylinder	1	222	390784	Plate — Gov. Control	1
3	391086	Seal — Oil	1	225	231058	Crank — Governor (1/4" dia.)	1
5	212914	Head — Cylinder	1	227	391733	Lever Assy. — Governor (For 1/4" dia. Crank)	1
7	*271075	Gasket — Cylinder Head	1	230	222450	Washer — Gov. Crank (1/4" I.D.)	1
8	391406	Breather Assembly	1	232	260584	Spring — Governor Link	1
9	*27803	Gasket — Valve Cover	1	265	221535	Clamp — Casing	1
10	93394	Screw — Sem	1	284	93572	Screw — Clamp Mounting	1
11	280100	Tube — Breather	1	304	391556	Housing — Blower	1
12	*270808	Gasket — Crankcase Cover, 1/64" thick	1	305	93158	Screw — Blower Housing Mounting Sem	1
	*270915	Gasket — Crankcase Cover, .005" thick	1	306	222744	Shield — Cylinder	1
	*270916	Gasket — Crankcase Cover, .009" thick	1	307	93163	Screw — Cylinder Shield Mounting Sem	1
13	93723	Screw — Cylinder Head	1	308	222725	Cover — Cylinder Head	1
15	91084	Plug — Oil Drain	1	332	92284	Nut — Hex	1
16	392299	Crankshaft Note: To Replace Crankshaft Gear Key, Order Part No. 94196.	1	333	398265	Armature Group	1
18	391784	Base — Engine	1	334	93381	Screw — Armature Mounting Sem	1
20	291675	Seal — Oil	1	337	298809	Plug — Spark (1-1/2" high — 37-42 M.M.)	1
22	93585	Screw — Engine Base Mounting Sem	1	353	92791	Washer — Lock, Shakeproof	1
24	222698	Key — Flywheel	1	354	90576	Nut — Hex, 8-32	2
25	391285	Piston Assy. — Standard	1	356	398808	Wire — Ground	1
	391287	Piston Assy. — .010" O.S.	1	358	393411	Gasket Set	1
	391288	Piston Assy. — .020" O.S.	1	363	19203	Puller — Flywheel	1
	391289	Piston Assy. — .030" O.S.	1	383	89838	Wrench — Spark Plug	1
		Piston Ring Sets:		422	223394	Clamp — Oil Filler Tube	1
		Note: For Chrome Ring Set — Std. Size, Order No. 392331.		455	222561	Cup — Screen Mounting	1
26	391780	Ring Set — Piston, Std.	1	468	222562	Screen — Flush Rotating	1
	391781	Ring Set — Piston, .010" O.S.	1	520	93722	Terminal — Spade	1
	391782	Ring Set — Piston, .020" O.S.	1	523	391841	Cap and Dipstick — Oil Filler	1
	391783	Ring Set — Piston, .030" O.S.	1	524	68838	Seal — Filler Tube	1
27	260924	Lock — Piston Pin	1	525	280134	Tube — Oil Filler	1
28	299691	Pin Assy. — Piston, Std.	1	552	231055	Bushing — Gov. Crank (1/4" I.D.)	1
	391286	Pin Assy. — Piston, .005" O.S.	1	562	92613	Bolt — Governor Lever	1
29	391775	Rod Assy. — Connecting Note: For Connecting Rod with .020" undersize Crankpin Bore — Order No. 393712.	1	592	231082	Nut — Hex, 10-24	1
31	222299	Lock — Conn. Rod Screw	1	614	93306	Cotter — Hair Pin	1
32	92909	Screw — Conn. Rod	1	615	93307	Retainer — E-Ring	1
33	261185	Valve — Exhaust	1	635	66538	Elbow — Spark Plug	1
34	261462	Valve — Intake	1	657	93496	Screw — Sem	1
35	65906	Spring — Intake Valve	1	663	93572	Screw	1
36	26828	Spring — Exhaust Valve	1	741	262199	Gear — Timing	1
40	221596	Retainer — Intake Valve	1	757	212359	Link — Counterweight	1
41	292260	Rotocoil — Exhaust Valve	1	758	391373	Counterweight Assy.	1
42	93630	Retainer — Exhaust Valve Rotocoil	2	759	298909	Pin — Counterweight	1
45	261183	Tappet — Valve	1	761	93875	Screw — Counterweight	1
46	212897	Gear — Cam	1	842	270920	Seal — Oil Filler Cap	1
75	220865	Washer — Spring	1	847	392067	Fill Group — Oil	1
78	93805	Screw — Sem	1	851	221798	Terminal — Ignition Cable	1
201	261609	Link — Governor	1	869	261463	Seat — Intake Valve (Std.)	1
209	261306	Spring — Governor	1	870	210940	Seat — Exhaust Valve (Std.)	1
				871	231218	Guide — Exhaust or Intake Valve (Brass)	1
						See Repair Manual	
				985	398525	Insulator Assembly	1

* Included in Gasket Set — Part No. 393411.

ENGINE BRIGGS & STRATTON MODEL NO. 252707-0621-01

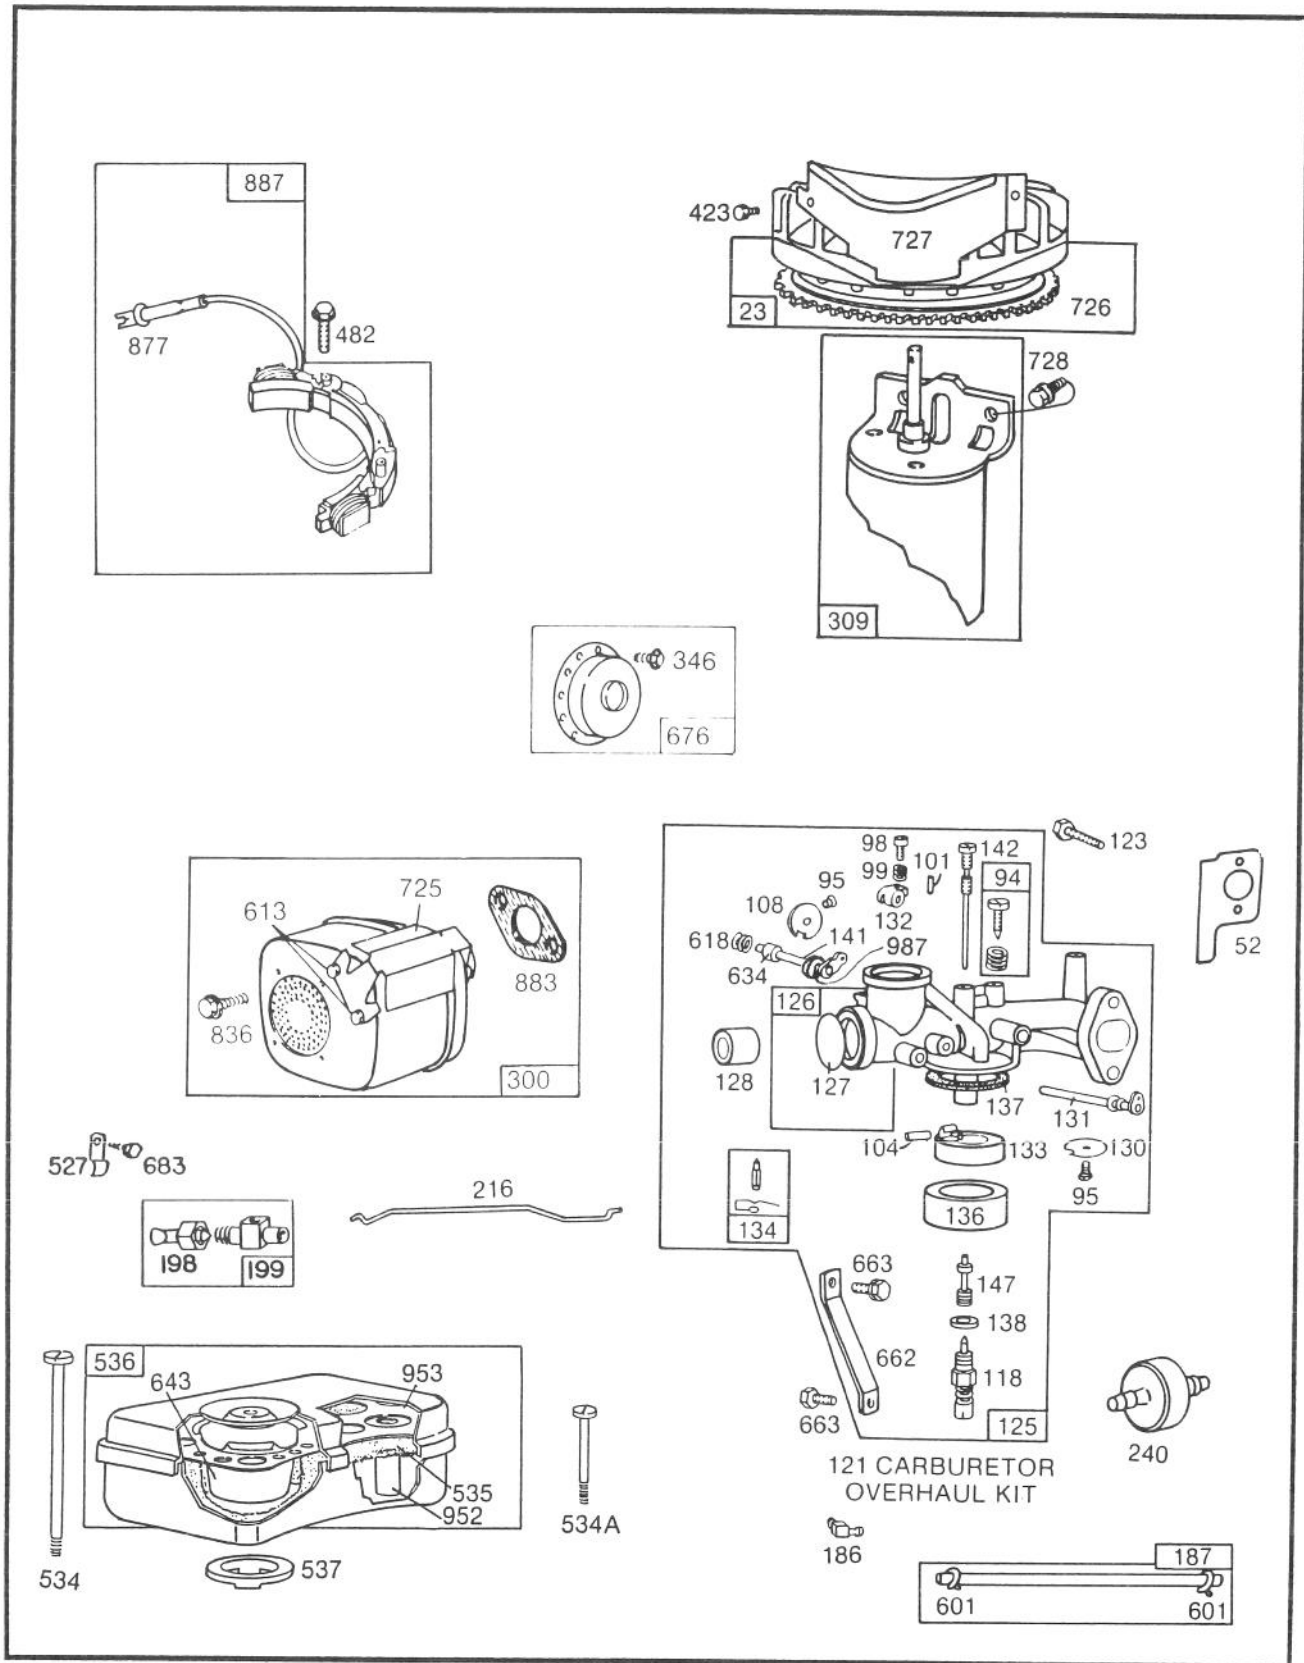

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL NO. 252707-0621-01 (Continued)

Ref. No.	Part No.	Description	No. Used
23	391988	Flywheel and Ring Gear Assy. — Magneto	1
52	*270872	Gasket — Carburetor Mtg.	1
94	†292681	Valve Assy. — Carburetor Idle	1
95	93499	Screw — Throttle and Choke Valve Mtg. Sem	1
98	91920	Screw — Machine, Fill. Hd. 8-32 x 5/8"	1
99	26157	Spring — Throttle Adjustment	1
101	93043	Pin — Throttle Stop	1
104	†230896	Pin — Float Hinge	1
108	222010	Valve Choke	1
118	†396568	Valve — Needle	1
121	299852	Carburetor Overhaul Kit	1
123	93357	Screw — Carburetor Mtg.	1
125	393410	Carburetor Assembly (Choke-A-Matic)	1
126	391787	Body Assembly Carburetor (Two 271013 Foam Washers Included in Ref. 126)	1
127	†221997	Plug — Welch	1
128	211960	Venturi — Carburetor	1
130	222433	Valve — Throttle	1
131	490017	Shaft and Lever — Throttle	1
132	211712	Stop — Throttle	1
133	299707	Float — Carburetor	1
134	†394681	Valve — Fuel Inlet	1
136	221995	Bowl — Float	1
137	†270511	Gasket — Float Bowl	1
138	†222014	Washer — Float Bowl	1
141	390684	Shaft and Lever — Choke	1
142	†299740	Nozzle — Carburetor	1
147	231323	Screw — Nozzle	1
186	67218	Connector — Fuel Pipe	1
187	393815	Line — Fuel	1
198	293934	Valve — Fuel Shut-off	1
199	390303	Connector — Fuel Pipe	1
216	261610	Link — Choke	1

Ref. No.	Part No.	Description	No. Used
240	298090	Filter — Fuel	1
300	394150	Muffler — Exhaust	1
309		Motor — Starting (12 Volt)	1
		See Chart for Replacement Parts for Starting Motor	
346	93705	Screw	4
423	93984	Screw — Sem	1
482	93621	Screw — Sem	1
527	221428	Clamp	2
534	93622	Screw — Air Cleaner	1
534A	93323	Screw — Air Cleaner	1
535	270843	Element — Air Cleaner	1
536	391786	Cleaner Assembly — Air	1
537	270853	Gasket — Air Cleaner	1
601	93053	Clamp — Fuel Pipe	1
613	93927	Screw — Hex Hd.	3
618	261116	Spring — Choke Return	1
634	270382	Washer — Choke Shaft	1
643	222380	Cup — Air Cleaner Support	1
662	222311	Bracket — Carburetor	1
663	93572	Screw	1
676	223372	Deflector Muffler	1
683	93572	Screw	2
725	223023	Shield — Muffler	1
726	392134	Gear — Ring (Includes Mtg. Parts)	1
727	395405	Cover and Starter (Includes Mounting Screws)	1
728	93535	Screw — Sem	1
836	93559	Screw — Hex Hd.	1
877	393814	Diode and Connector Assy. (D.C.)	1
883	270917	Gasket — Exhaust Pipe	1
887	391529	Stator Assembly — Alternator (D.C.)	1
952	222495	Spacer — Air Cleaner	1
953	222382	Screen — Air Cleaner	1
987	398970	Seal — Throttle Shaft	1

† Included in Carburetor Overhaul Kit — Part No. 299852.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Rider has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on the left side of frame in front of rear wheel. In any correspondence concerning the Rider, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial numbers of the Rider.
2. Part number, description, and quantity of part(s) desired.

Note: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

The Toro Promise

A TWO YEAR LIMITED WARRANTY

The Toro Company promises to repair your TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential Product 2 Years

Residential Products Used Commercially 45 Days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should you feel your TORO Product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact any Authorized TORO Service Dealer, TORO Master Service Dealer, or TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
2. He will either instruct you to return the product to him or recommend another Authorized TORO Service outlet which might be more convenient.
3. Bring the product along with your original sales slip, or other evidence of purchase date, to the service dealer.
4. The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the dealer's analysis of the defect or the service performed, you may contact us.

Write:

TORO Consumer Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND

FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Service Dealer using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Service Account are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason

you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.