



53cm Heavy-Duty Recycler[®] Rear Bagger Lawnmower

Model No. 22167TE - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Housing and Discharge Assembly	 3	Crankshaft and Piston Assembly Honda GXV160K1-A1T	 14
Housing Assembly No. 98-7142	 4	Camshaft Assembly Honda GXV160K1-A1T	 15
Wheel and Tire Assembly No. 53-7720	 5	Recoil Starter Assembly Honda GXV160K1-A1T	 16
Gear Case Assembly No. 74-1861	 6	Fan Cover Assembly Honda GXV160K1-A1T	 17
Engine Assembly	 7	Carburetor Assembly Honda GXV160K1-A1T	 18
Handle Assembly	 8	Air Cleaner Assembly Honda GXV160K1-A1T	 19
Gear Case and Rear Wheel Assembly	 9	Muffler Assembly Honda GXV160K1-A1T	 20
Rear Wheel Assembly No. 74-1720	 10	Flywheel Assembly Honda GXV160K1-A1T	 21
Grass Bag Assembly No. 106-0975	 11	Control Assembly Honda GXV160K1-A1T	 22
Cylinder Head Assembly Honda GXV160K1-A1T	 12	Label Assembly Honda GXV160K1-A1T	 23
Cylinder Barrel Assembly Honda GXV160K1-A1T	 13		

Part Description Abbreviations

 
Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
BBC. blade brake clutch	NI. nylon insert
CARR. carriage	NPTF. national pipe thread fine
DEG. degrees	PFH. phillips flat head
EXT. external	PPH. phillips pan head
FH. flat head	PPHTF. phillips pan head thread forming
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power-take-off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll-over-protection-system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HS. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard
HWHTF. hex washer head thread forming	TAP. self tapping
HYD. hydraulic	TTH. torx truss head

Footnotes


❶ Not serviced separately

❷ Obtain from your local Honda dealer

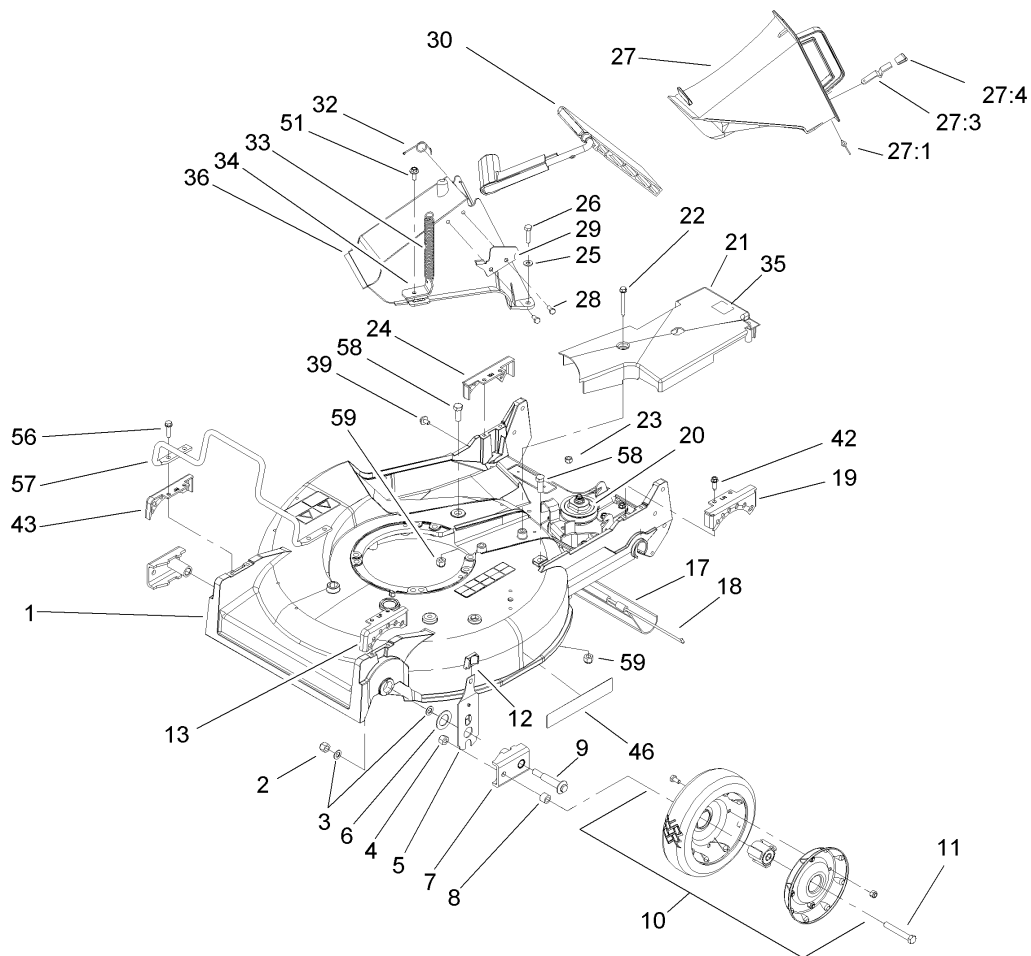


Housing and Discharge Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	98-7142	1	Housing	27:1	3295-35	1	Rivet-Head, Flat
2	3296-6	2	Nut-Lock	27:3	76-4640	1	Latch-Plug, Discharge
3	40-1940	2	Washer	27:4	76-4650	1	Grip-Latch
4	32152-2	2	Nut-Lock, Cone	28	46-8090	2	Screw-Plastite
5	66-7560	2	Front Spring Arm ASM	29	93-3154	1	Latch-Plate
6	257-3	2	Washer-Thrust	30	93-7351	1	Discharge Door ASM
7	61-8300	2	Arm-Pivot, Front	32	80-3770	1	Retainer-Door
8	52-2480	2	Spacer-Wheel	33	76-4660	1	Spring-Door
9	27-6232	2	Bolt-Wheel	34	71-9350	1	Bracket-Spring
10	53-7720	2	Wheel And Tire ASM	35	93-6664	1	Decal-Grease
11	323-12	2	Screw-HH	36	82-9151	1	Tunnel-Discharge
12	25-7740	2	Knob-Arm	39	46-6810	1	Screw And Washer ASM
13	49-8760	1	Quadrant-Front, LH	42	49-2040	4	Screw-HWHTF
17	44-0580	1	Shield-Trailing	43	49-8770	1	Quadrant-Front, RH
18	33-3208	1	Rod-Shield	46	106-0689	1	Decal
19	49-8740	1	Quadrant-Rear, LH	51	46-6811	3	Screw-HWH
20	74-1861	1	Gear Case ASM	56	32144-86	4	Screw-HWHTF
21	74-1770	1	Cover-Belt	57	99-6722	1	Guard-Engine
22	37-7260	2	Screw-HH	58	323-6	2	Screw-HH
23	3296-42	2	Nut-Lock, NI	59	3296-39	2	Nut-Lock, NI
24	49-8750	1	Quadrant-Rear, RH				
25	3256-22	2	Washer-Flat				
26	321-8	2	Screw-HH				
27	77-0502	1	Discharge Plug ASM				

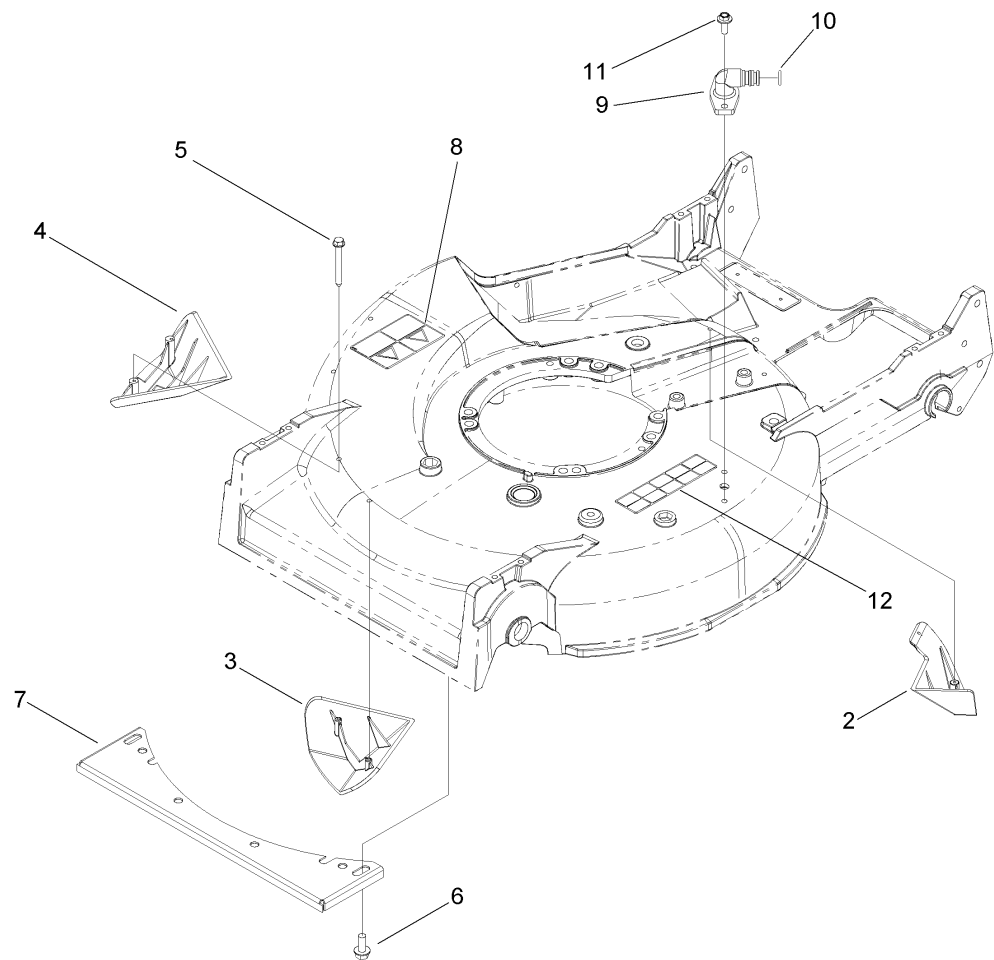 


Housing Assembly No. 98-7142

Ref	Part No.	Qty.	Description				
2	92-1750	1	Kicker-Rear				
3	92-1720	1	Kicker-Front				
4	92-1730	1	Kicker-RH				
5	32144-111	6	Screw-PPH				
6	32144-70	4	Screw-HH				
7	46-5400-03	1	Shield				
8	93-6654	1	Decal-Danger Covers				
9	95-2747	1	Fitting-Washout				
10	46-6290	1	O-Ring				
11	46-6811	2	Screw-HWH				
12	93-6657	1	Decal-Danger				

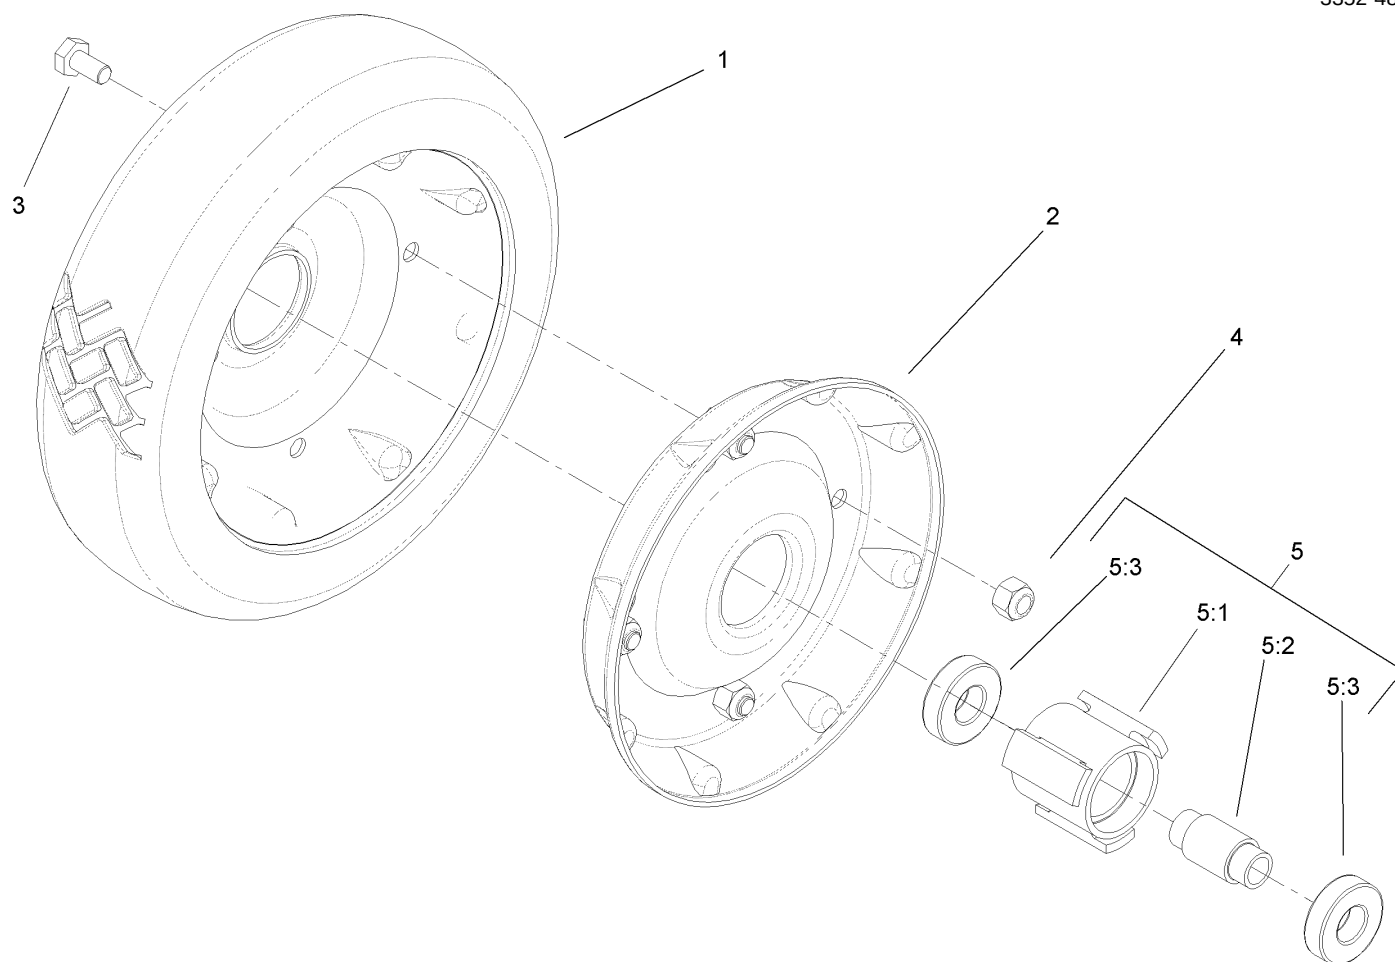 

Wheel and Tire Assembly No. 53-7720


Ref	Part No.	Qty.	Description				
1	53-7740	1	Tire				
2	53-7780-06	2	Plate-Wheel, Half				
3	321-2	4	Screw-HH				
4	3296-42	4	Nut-Lock, NI				
①5		1	Hub And Bearing ASM				
5:1	52-2410	1	Hub-Bearing				
5:2	52-2440	1	Spacer-Bearing				
5:3	52-2450	2	Bearing-Wheel				

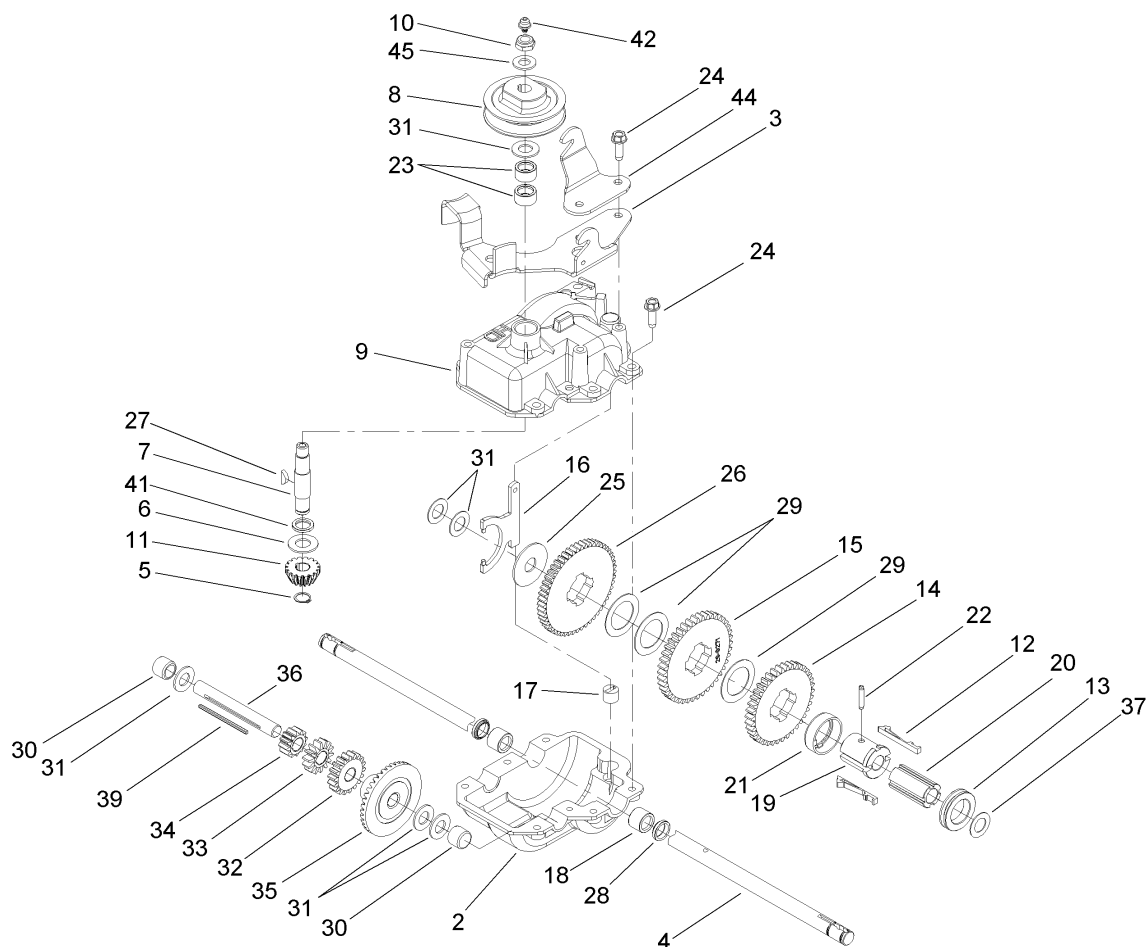 

Gear Case Assembly No. 74-1861


Ref	Part No.	Qty.	Description
2	74-1920	1	Case-Gear, Lower
3	49-8461-03	1	Bracket-Guide, Belt
4	74-1890	1	Shaft-Output
5	32151-57	1	Ring-Retaining
6	47-2910	1	Washer-Thrust
7	13-5149	1	Shaft-Input W/Zerk
8	39-6740	1	Pulley
9	13-9739	1	Upper Gearcase ASM
10	3296-5	1	Nut-Lock
11	39-6660	1	Pinion-Bevel
12	29-9330	2	Key-Shift
13	29-9340	1	Collar-Shift
14	42-4740	1	Gear-38 Tooth
15	29-9271	1	Gear-42 Tooth
16	60-8870	1	Yoke-Shift
17	29-9570	1	Bushing-Yoke
18	47-6730	2	Seal-Oil
19	55-8010	1	Sleeve-Gear
20	39-6720	1	Sleeve
21	55-8020	1	Retainer-Key
22	3285-19	1	Pin-Groove
23	47-7270	2	Bearing
24	49-2040	6	Screw-HWHTF
25	29-9690	1	Washer

Ref	Part No.	Qty.	Description
26	46-3560	1	Gear
27	3257-1	2	Key-Woodruff
28	48-2060	2	Bearing-Roller
29	36-4770	3	Washer
30	252-103	2	Bearing-Closed
31	36-4792	4	Washer-Thrust
32	39-6650	1	Gear-18T
33	46-3550	1	Gear-14T
34	46-3540	1	Gear-12T
35	74-1760	1	Gear-Bevel
36	53-7950	1	Shaft-Intermediate
37	36-4780	3	Washer
39	39-7842	1	Key
41	47-7260	1	Seal
42	302-63	1	Zerk
44	74-1750-03	1	Braket-Engage, Traction
45	3256-45	1	Washer-Flat

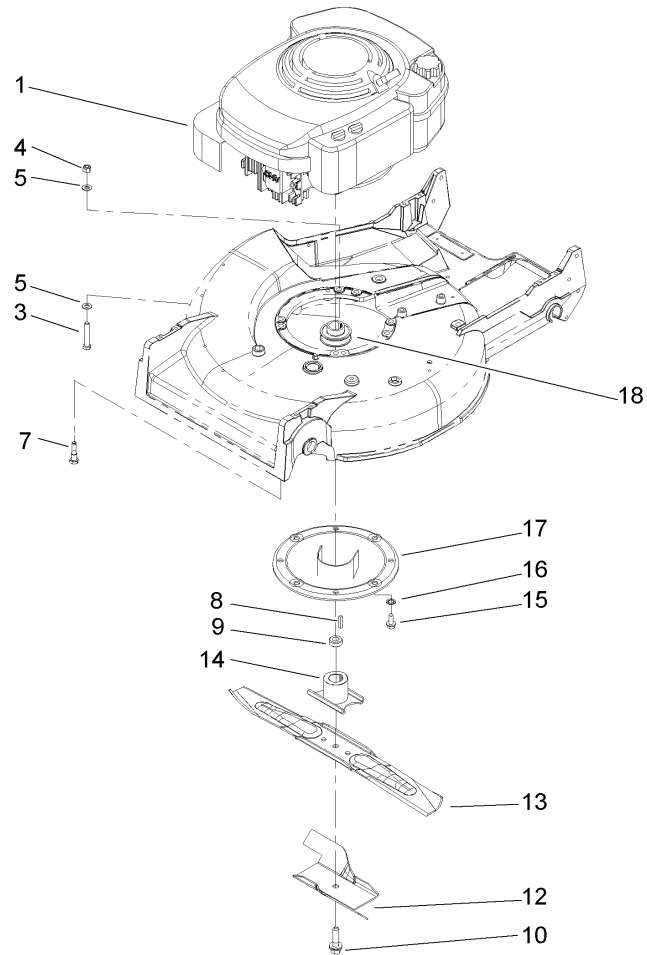 

Engine Assembly


Ref	Part No.	Qty.	Description				
1		1	Engine-Honda, Gxv 160K1A1T				
3	322-10	1	Screw-HH				
4	3296-29	1	Nut-Lock, NI				
5	3256-23	2	Washer-Flat				
7	103-2678	3	Screw-Shoulder				
8	5-1077	1	Key-Square				
9	103-3795	1	Spacer-Retainer, Blade				
10	105-8579	1	Bolt-Blade				
12	92-1599-03	1	Stiffener-Blade				
13	91-2256-03	1	Blade-21 Inch				
14	52-2170	1	Retainer-Blade				
15	32144-70	3	Screw-HH				
16	3254-6	3	Washer-Lock, Internal				
17	65-5860	1	Protector-Crankshaft				
18	46-7910	1	Pulley-Driver				

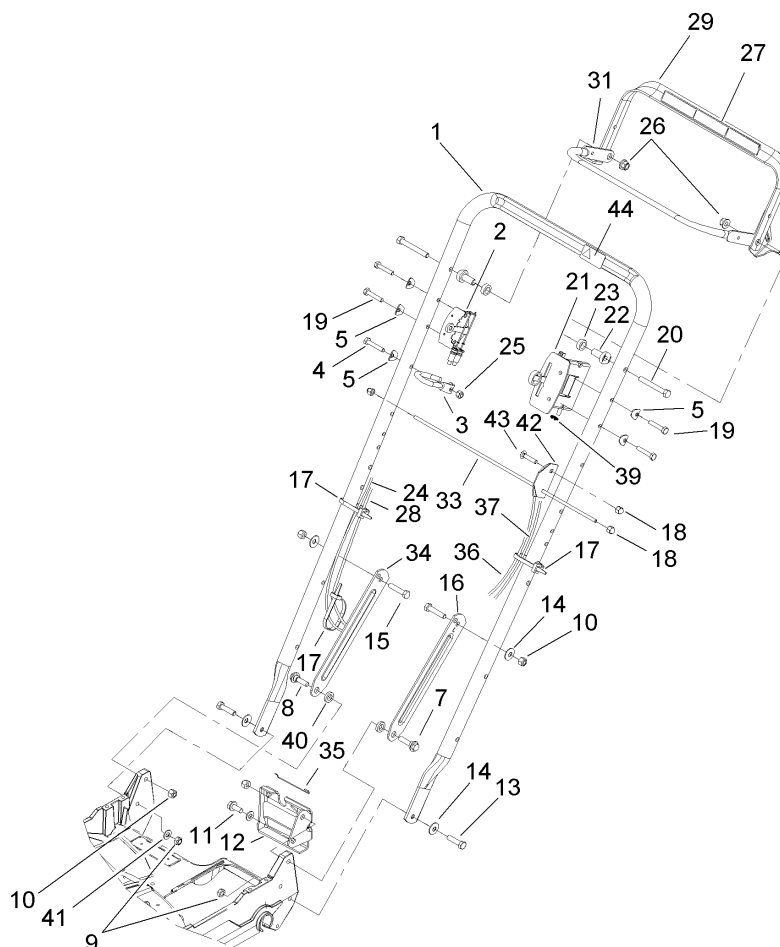 

Handle Assembly

Ref	Part No.	Qty.	Description
1	99-2545-03	1	Handle-Proline
2	99-2544	1	Control-Shift
3	46-8081	1	Guide-Rope
4	321-9	1	Screw-HH
5	3-7501	5	Washer
7	27-7210	1	Screw-Shoulder
8	3-3287	2	Spacer-Latch, Handle
9	3296-47	2	Nut-Lock, NI
10	3296-29	4	Nut-Lock, NI
11	32144-70	1	Screw-HH
12	74-1741	1	Bracket-Adjustment, Traction
13	322-6	2	Screw-HH
14	3290-456	4	Washer-Belleville
15	322-7	2	Screw-HH
16	100-3298-03	1	Latch-Handle, LH
17	3290-378	3	Tie-Cable
18	32111-7	3	Nut-Cap
19	321-13	4	Screw-HH
20	322-12	2	Screw-HH
21	103-5296	1	Control-Throttle
22	49-1631	2	Spacer-Support
23	256-276	2	Spacer-Nylon
24	107-4081	1	Cable-Brake
25	3296-42	1	Nut-Lock, NI


Ref	Part No.	Qty.	Description
26	3296-58	2	Nut-Lock, NI
27	94-6046	1	Decal-Operation
28	99-2543	1	Cable-Shift
29	94-4371-03	1	Traction Bail ASM
31	94-4370-03	1	Brake Bail ASM
33	48-2810	1	Rod-Support, Bag
34	100-3297-03	1	Latch-Handle, RH
35	46-7030	1	Retainer-Cable
36	74-1791	1	Cable-Traction
37	106-0888	1	Throttle Cable ASM
39	32151-86	4	E-Ring
40	27-7211	1	Screw-Shoulder
41	3256-23	2	Washer-Flat
42	104-1326	1	Plate-Aligning, Bag
43	3229-3	1	Screw-CARR
44	98-4387	1	Decal-Protection, Ear

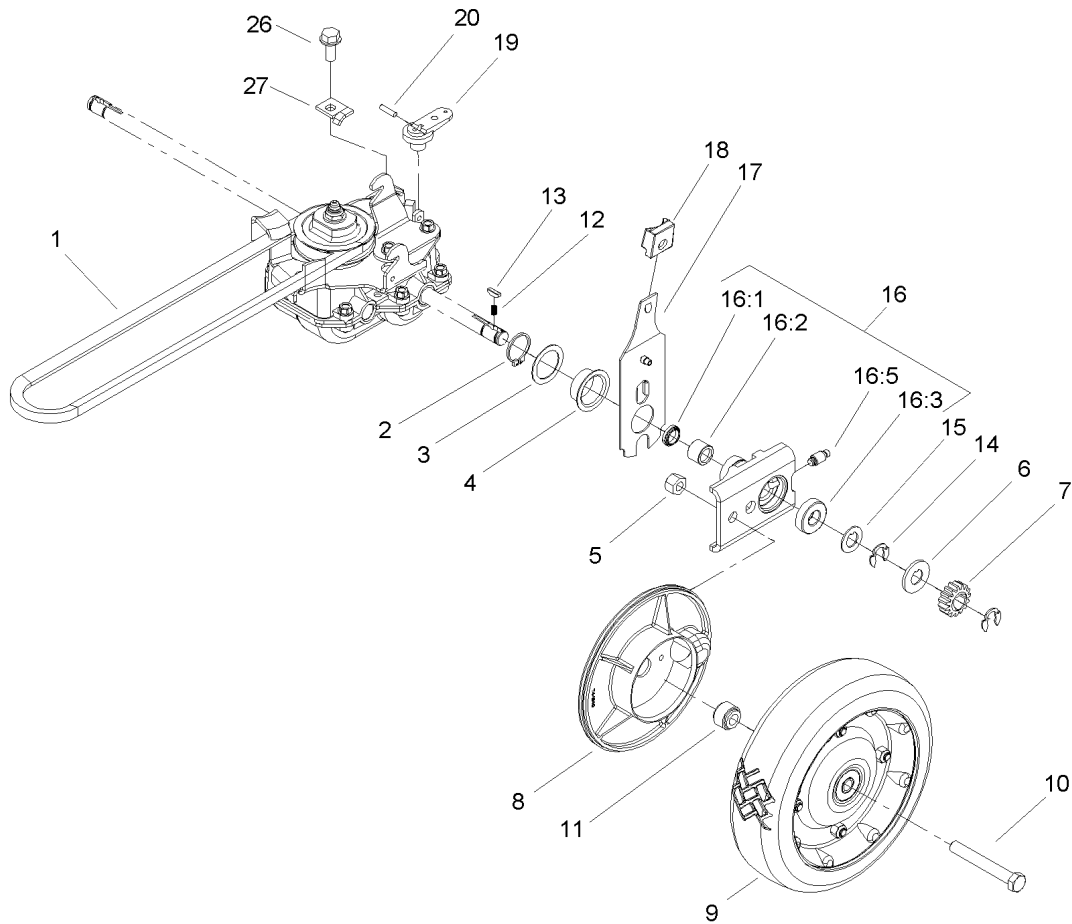 

Gear Case and Rear Wheel Assembly


Ref	Part No.	Qty.	Description
1	36-8070	1	V-Belt
2	32151-36	2	Ring-Retaining
3	74-1810	2	Washer
4	48-2170	2	Cap-End
5	32152-2	2	Nut-Lock, Cone
6	62-3830	2	Washer-Thrust, Outer
7	39-9160	2	Gear-Pinion
8	74-1640	2	Cover-Wheel
9	74-1720	2	Wheel And Tire ASM
10	323-13	2	Screw-HH
11	74-1650	2	Spacer-Cover, Wheel
12	39-9650	2	Spring-Compression
13	612066	2	Key
14	32151-68	4	Ring-Retaining
15	49-7700	2	Washer-Thrust, Outer
16	74-1851	2	Pivot Arm ASM
16:1	47-6730	1	Seal-Oil
16:2	48-2060	1	Bearing-Roller
16:3	52-2450	1	Bearing-Wheel
16:5	92-6316	1	Zerk
17	66-7561	2	Rear Spring Arm ASM
18	25-7740	2	Knob-Arm
19	29-9560	1	Lever-Shift
20	32121-99	1	Pin-Coil

Ref	Part No.	Qty.	Description
26	32144-70	1	Screw-HH
27	62-3720	1	Clamp-Cable

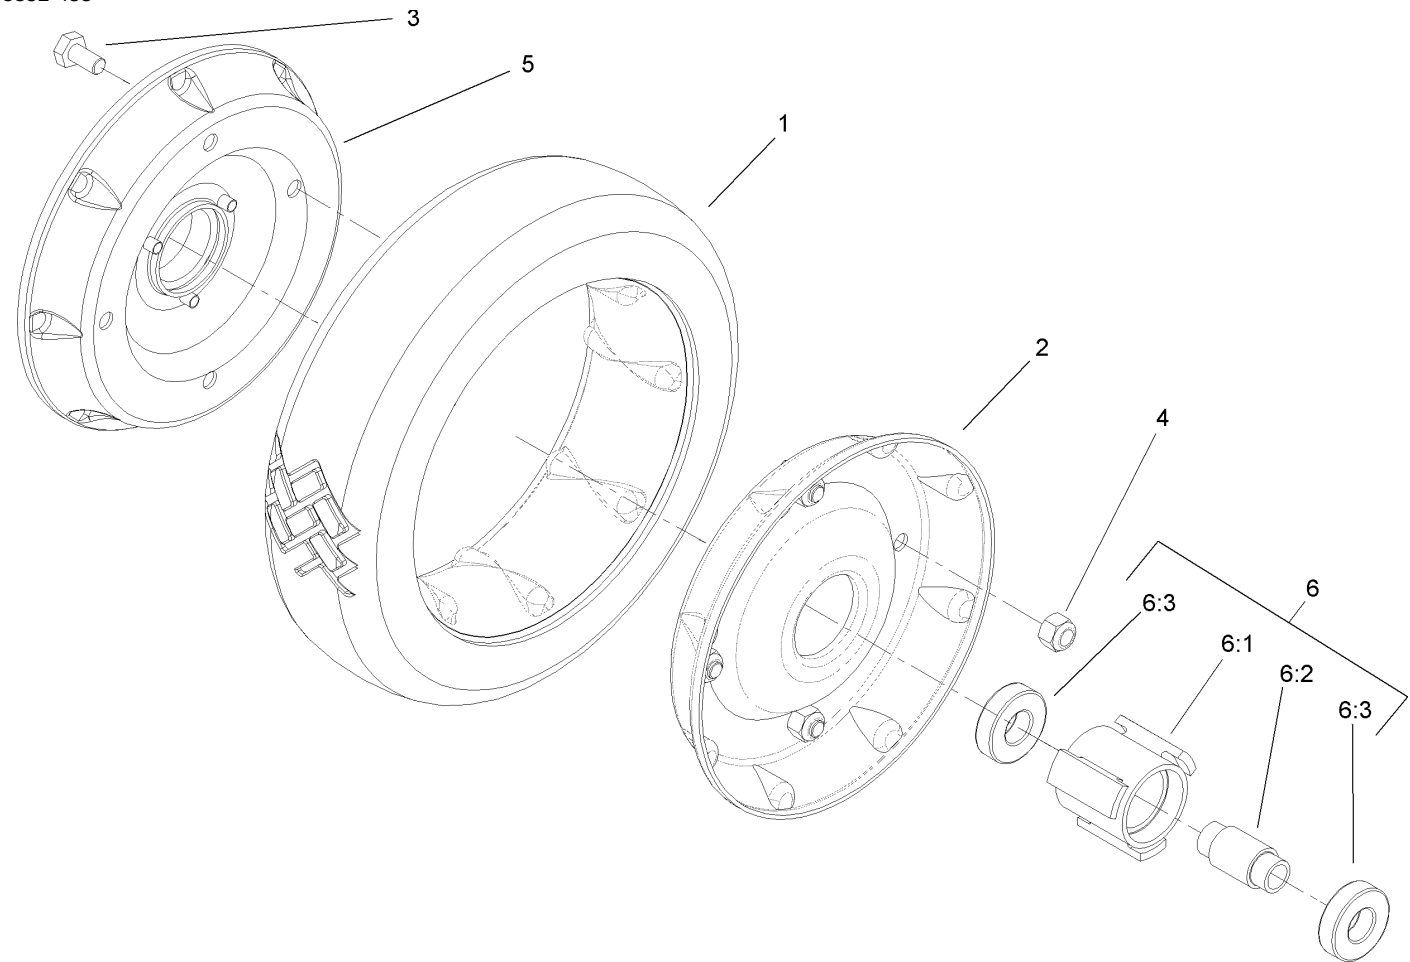 


Rear Wheel Assembly No. 74-1720

Ref	Part No.	Qty.	Description				
1	53-7740	1	Tire				
2	53-7780-06	1	Plate-Wheel, Half				
3	321-2	4	Screw-HH				
4	3296-42	4	Nut-Lock, NI				
5	92-4957-06	1	Wheel Half / Gear ASM				
6		1	Hub And Bearing ASM				
6:1	52-2410	1	Hub-Bearing				
6:2	52-2440	1	Spacer-Bearing				
6:3	52-2450	2	Bearing-Wheel				

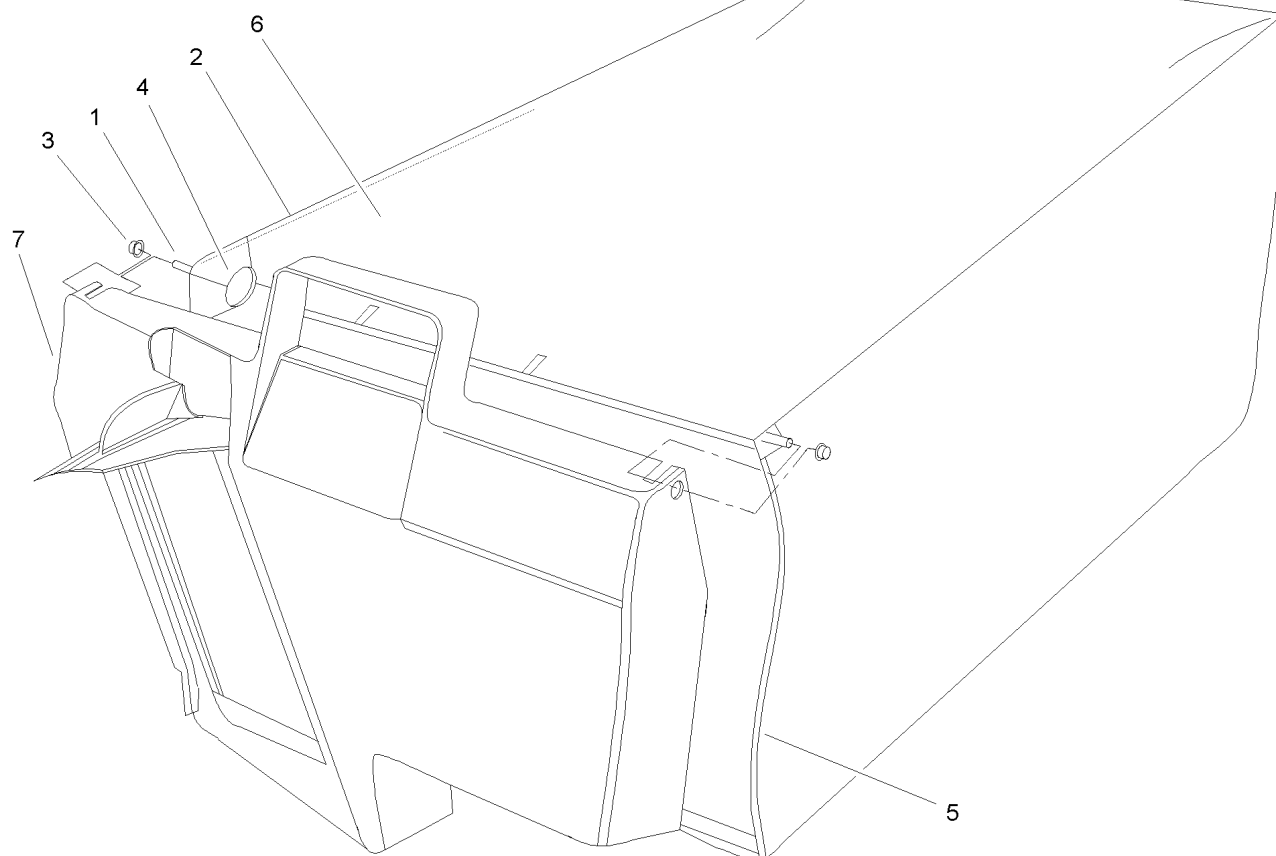 

Grass Bag Assembly No. 106-0975


Ref	Part No.	Qty.	Description
1	33-4820	1	Hinge-Door, Bag
2	42-4030	1	Frame-Bag, Upper
3	3290-422	2	Nut-Push
4	36-6910	2	Spring
5	42-4020	1	Frame-Bag
6	106-0926	1	Bag-Grass
7	48-2840	1	Door-Bag, Grass

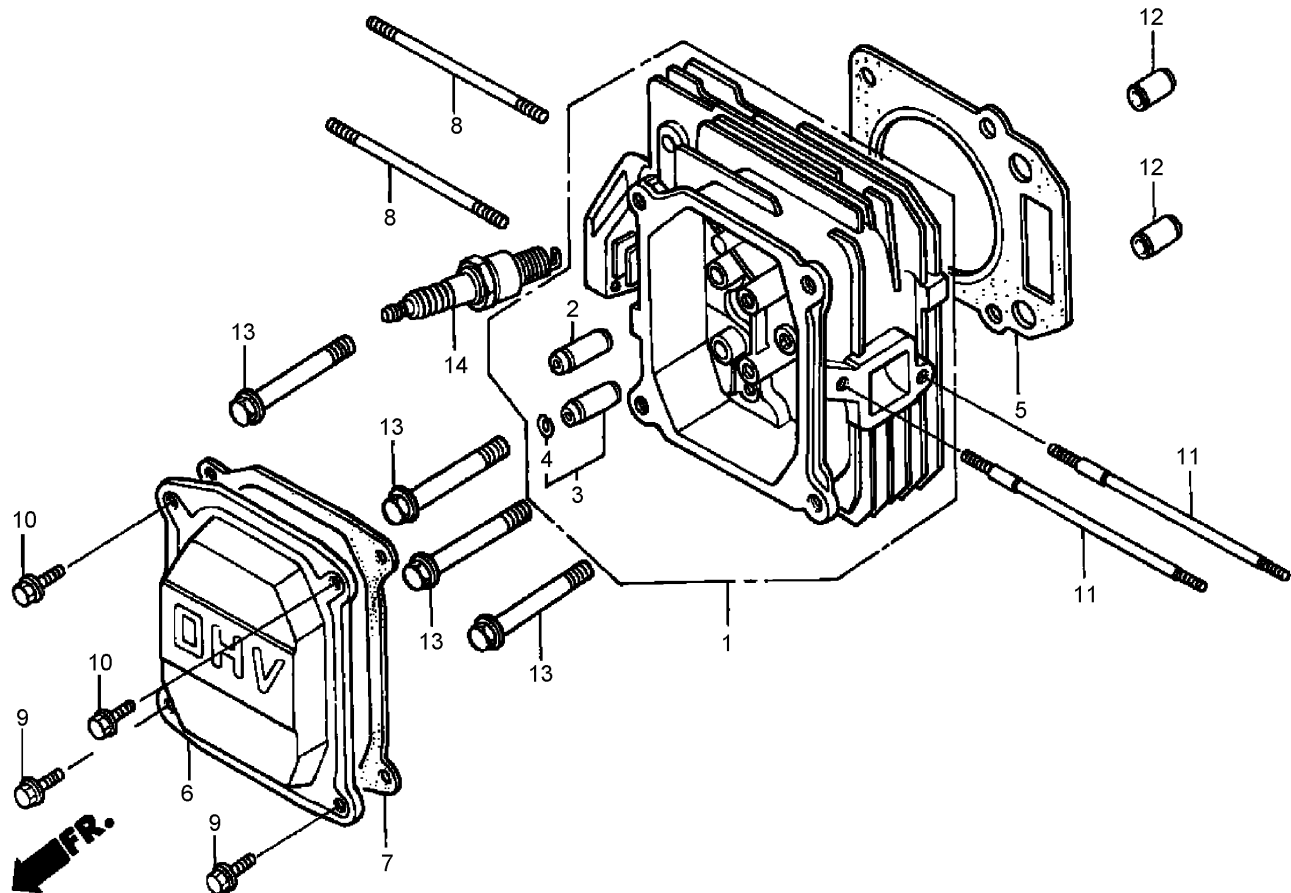 

Cylinder Head Assembly
Honda GXV160K1-A1T

Ref	Part No.	Qty.	Description
❶1	12200-ZE7-405	1	Head-Cylinder
❷2	12204-ZE1-306	1	Guide-Valve (Os)
❸3	12205-ZE1-315	1	Guide-Valve, Exhaust (Os)
❹4	12216-ZE5-300	1	Clip-Guide, Valve
❺5	12251-ZE7-000	1	Gasket-Head, Cylinder
❻6	12311-ZG9-800	1	Cover-Head
❼7	12391-ZE7-T00	1	Gasket-Cover, Cylinder Head
❽8	90048-ZC3-000	2	Bolt-Stud (6X85)
❾9	90013-883-000	2	Bolt-Flange (6X12) (Ct200)
❿10	90013-883-000	2	Bolt-Flange (6X12) (Ct200)
⓫11	90043-ZE6-000	2	Bolt-Stud (6X109)
⓬12	94301-10160	2	Pin-Dowel (10X16)
⓭13	95701-08050-00	4	Bolt-Flange (8X50)
⓮14	98079-54846	1	Plug-Spark (Bpr4Es)
⓯14	98079-54855	1	Plug-Spark (W14Epr-U)


Ref	Part No.	Qty.	Description
❶14	98079-55846	1	Plug-Spark (Bpr5Es)
❷14	98079-55855	1	Plug-Spark (W16Epr-U)
❸14	98079-56846	1	Spark Plug (Bpr6Es) (Ngk)
❹14	98079-56855	1	Plug-Spark (W20Epr-U)

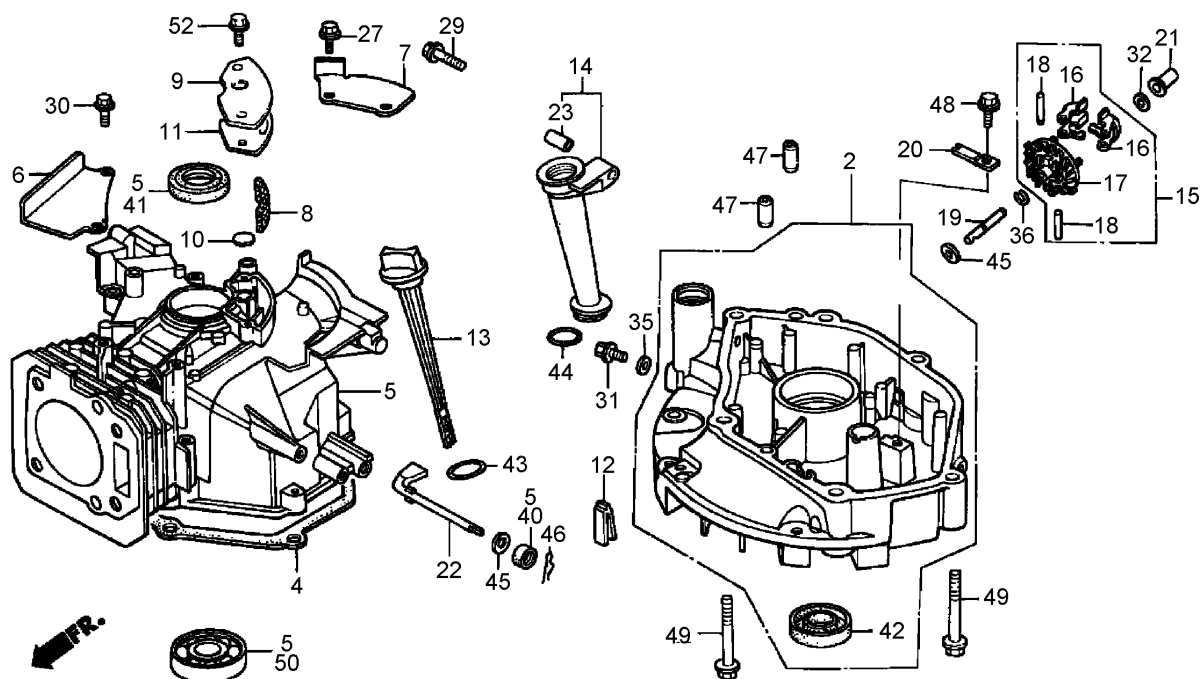 

Cylinder Barrel Assembly Honda GXV160K1-A1T

Ref	Part No.	Qty.	Description
2	11300-ZE7-408	1	Oil Pan ASM
4	11381-ZE7-M10	1	Gasket-Pan, Oil
5	12000-ZE7-405	1	Cylinder ASM
6	12125-ZE7-000	1	Plate-Guide
7	12126-ZE7-W00	1	Plate A-Guide
8	12367-883-003	1	Filter-Breather
9	12370-ZE7-000	1	Cover-Breather
10	12372-ZE7-000	1	Valve-Breather
11	12373-ZE7-000	1	Gasket-Cover, Breather
12	15335-ZE7-000	1	Rubber-Return, Oil
13	15620-ZE6-810	1	Dipstick-Oil
14	15630-ZE6-810	1	Extension-Filler, Oil (106Mm)
15	16510-ZE6-000	1	Governor ASM


Ref	Part No.	Qty.	Description
16	16511-ZE1-000	2	Weight-Governor
17	16512-ZE6-000	1	Holder-Weight, Governor
18	16513-ZE1-000	2	Pin-Weight, Governor
19	16515-ZE6-010	1	Shaft-Holder, Governor
20	16525-ZE6-010	1	Plate-Holder, Governor Shaft
21	16531-ZE1-000	1	Slider-Governor
22	16541-ZE7-000	1	Shaft-Arm, Governor
23	17240-ZE6-000	1	Collar-Extension
27	90013-883-000	2	Bolt-Flange (6X12) (Ct200)
29	90017-883-000	1	Bolt-Flange (6X32)
30	90022-888-010	2	Bolt-Flange (6X20)
31	90131-ZE1-000	1	Bolt-Plug, Drain
32	90451-ZE1-000	1	Washer-Thrust (6Mm)

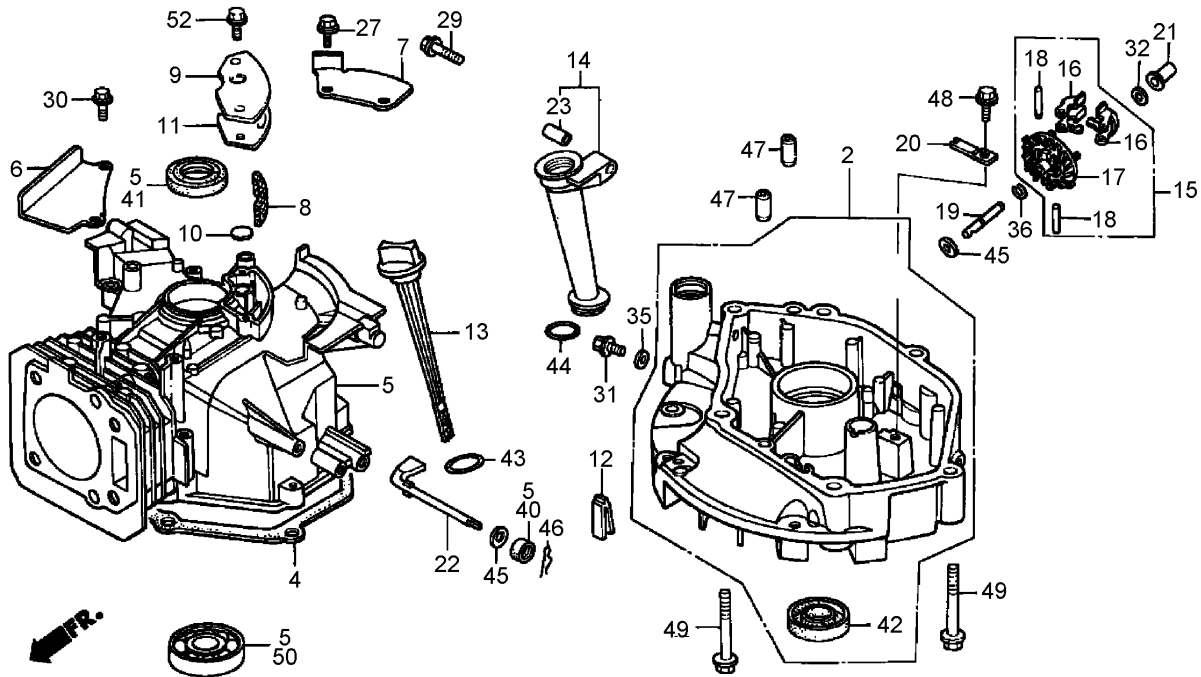 

Cylinder Barrel Assembly

Honda GXV160K1-A1T (continued)


Ref	Part No.	Qty.	Description				
235	90601-ZE1-000	1	Washer-Plug, Drain (10.2Mm)				
236	90602-ZE1-000	1	Clip-Holder, Governor				
240	91231-891-003	1	Seal-Oil (6X11X4)				
241	91201-ZG9-U71	1	Seal-Oil (25X38X7)				
241	91252-888-003	1	Seal-Oil (25X38X7) (Arai)				
242	91252-894-004	1	Seal-Oil (25.4X40X7)				
243	91301-ZE9-003	1	O-Ring (22.5X2.2)				
244	91301-805-000	1	O-Ring (26X2.7)				
245	94101-06800	2	Washer-Plain (6Mm)				
246	94251-08000	1	Pin-Lock (8Mm)				
247	94301-08140	2	Pin-Dowel (8X14)				
248	95701-06012-08	1	Bolt-Flange (6X12)				
249	95701-08050-00	6	Bolt-Flange (8X50)				
250	96100-62050-00	1	Bearing-Ball, Radial				
252	90014-952-000	2	Bolt-Flange (6X14)				

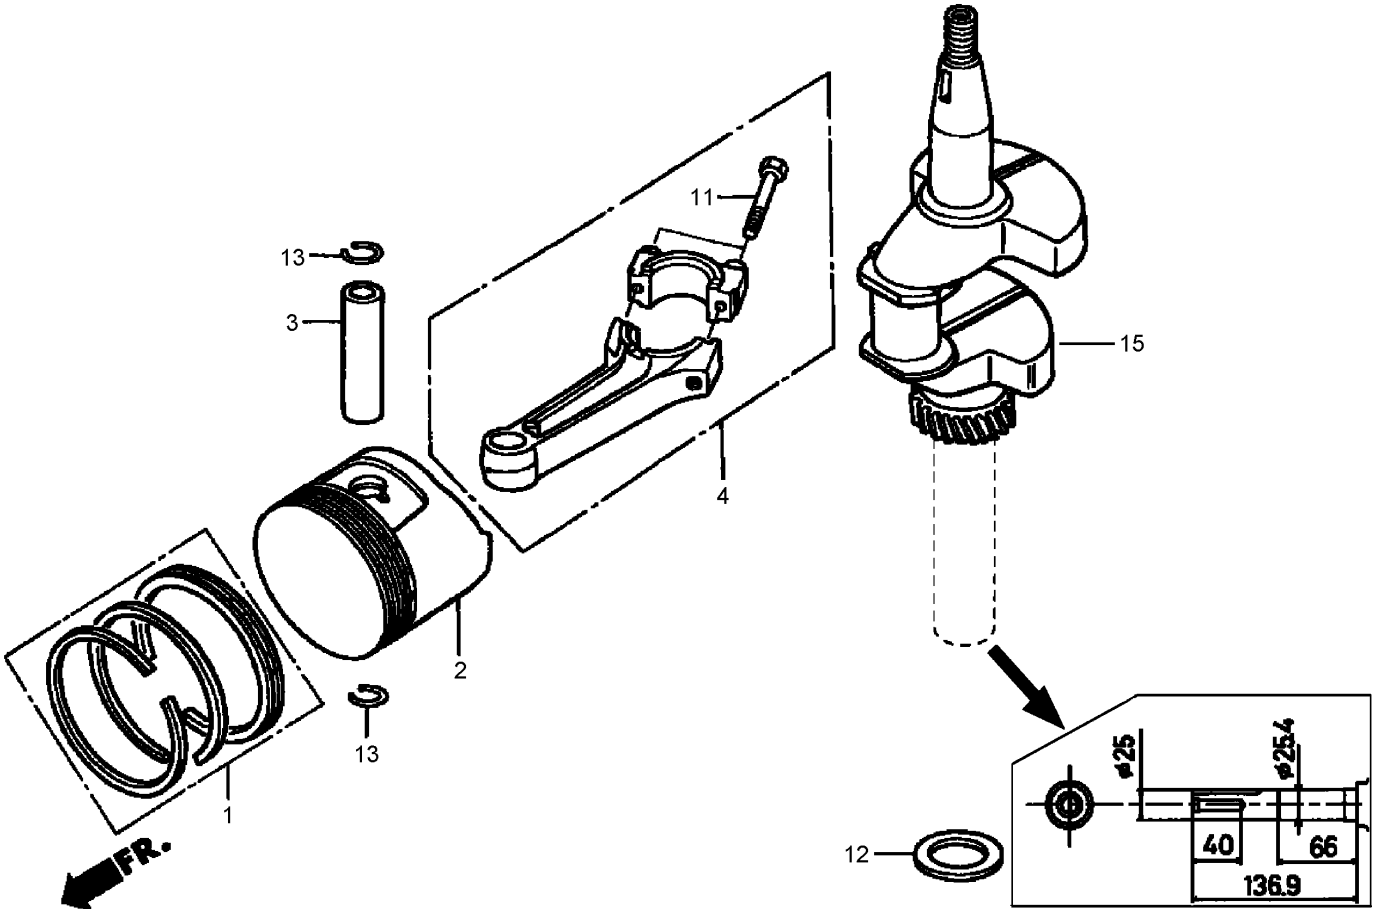 

Crankshaft and Piston Assembly
Honda GXV160K1-A1T

Ref	Part No.	Qty.	Description
❶1	13010-ZL0-003	1	Ring Set-Piston (STD)
❶1	13010-ZL0-004	1	Ring Set-Piston (STD) (Nippon)
❶1	13011-ZL0-003	1	Ring Set-Piston (Os0.25)
❶1	13011-ZL0-004	1	Ring Set-Piston (Os0.25)(Nippon)
❶1	13012-ZL0-003	1	Ring Set-Piston (Os0.50)
❶1	13012-ZL0-004	1	Ring Set-Piston (Os0.50) (Nippon)
❶1	13013-ZL0-003	1	Ring Set-Piston (0.75)
❶1	13013-ZL0-004	1	Ring Set-Piston (0.75)(Nippon)
❷2	13101-ZE7-020	1	Piston (STD)
❷2	13102-ZE7-020	1	Piston (Os 0.25)
❷2	13103-ZE7-020	1	Piston (Os 0.50)
❷2	13104-ZE7-020	1	Piston (0.75)
❸3	13111-ZE1-000	1	Pin-Piston


Ref	Part No.	Qty.	Description
❹4	13200-ZE7-000	1	Connecting Rod ASM
❹4	13200-ZE7-305	1	Connecting Rod ASM (Us 0.25)
❺11	90001-ZE1-000	2	Bolt-Rod, Connecting
❺12	90401-ZE7-W00	1	Washer-Thrust (25.6Mm)
❺13	90551-ZE1-000	2	Clip-Pin, Piston (18Mm)
❺15	13310-ZE7-V10	1	Crankshaft

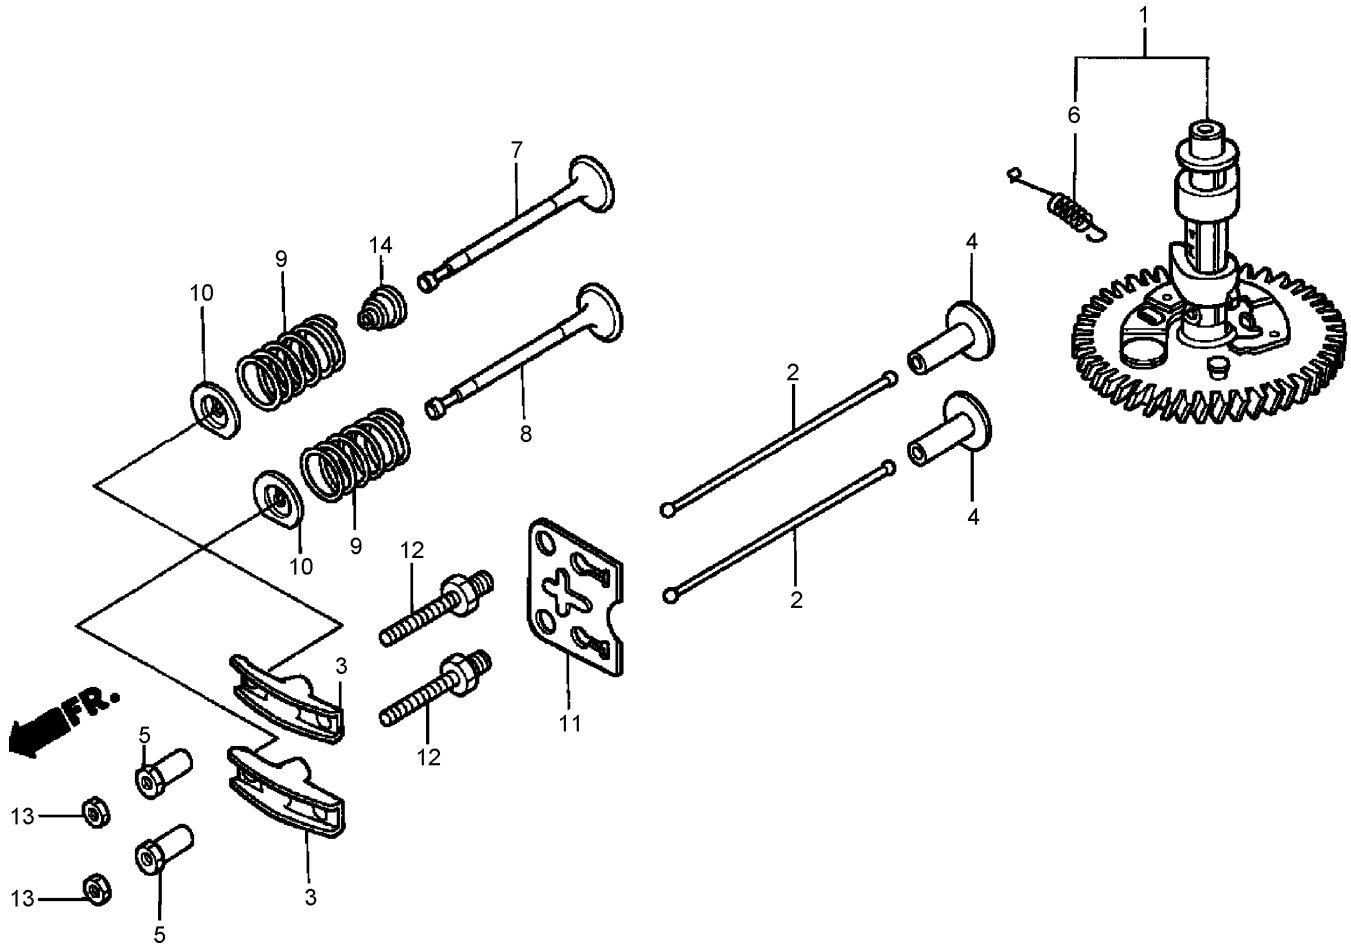 

Camshaft Assembly
Honda GXV160K1-A1T

Ref	Part No.	Qty.	Description
❶1	14100-ZE7-000	1	Camshaft ASM
❷2	14410-ZE1-010	2	Rod-Push
❸3	14431-ZE1-000	2	Arm-Rocker, Valve
❹4	14441-ZE1-010	2	Lifter-Valve
❺5	14451-ZE1-013	2	Pivot-Arm, Rocker
❻6	14568-ZE1-000	1	Spring-Return, Weight
❼7	14711-ZF1-000	1	Valve-Intake
❽8	14721-ZE7-000	1	Valve-Exhaust
❾9	14751-ZE1-000	2	Spring-Valve
❿10	14771-ZE1-000	2	Retainer-Valve Spring, Intake
⓫11	14791-ZE1-010	1	Plate-Guide, Push Rod
⓬12	90012-ZE0-010	2	Bolt-Pivot (8Mm)
⓭13	90206-ZE1-000	2	Nut-Adj., Pivot


Ref	Part No.	Qty.	Description
❿14	12209-ZE6-003	1	Seal-Stem, Valve

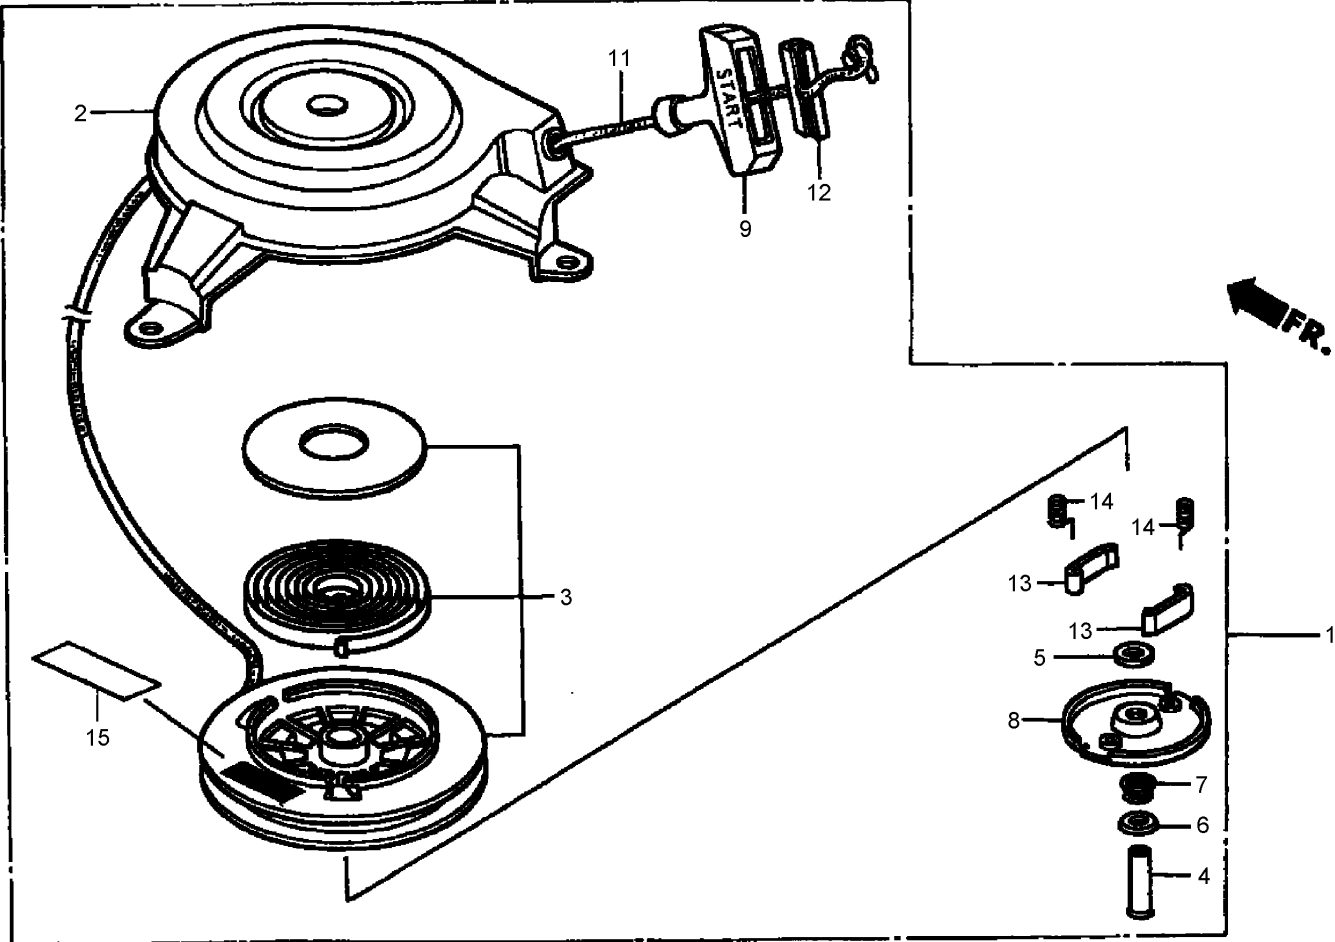 

Recoil Starter Assembly
Honda GXV160K1-A1T

Ref	Part No.	Qty.	Description
❶1	28400-ZG9-W52	1	Recoil Starter ASM
❷2	28402-ZG9-802	1	Housing ASM
❸3	28415-ZG9-802	1	Pulley And Spring ASM
❹4	28419-ZG9-802	1	Pin-Center
❺5	28431-ZG9-802	1	Plate A-Friction
❻6	28432-ZG9-802	1	Plate B-Friction
❼7	28441-ZG9-802	1	Spring-Friction
❽8	28444-ZG9-802	1	Retainer
❾9	28461-ZE6-T02	1	Handle
❿11	28462-ZG9-W52	1	Rope (No.4.5X96In)
⓫12	28463-ZE6-T02	1	Handle-Reinforcement
⓬13	28485-ZE6-T02	2	Ratchet-Starter
⓭14	28486-ZE6-T02	2	Spring-Dog


Ref	Part No.	Qty.	Description
❶15	87284-ZG9-W52	1	Mark-Number, Parts

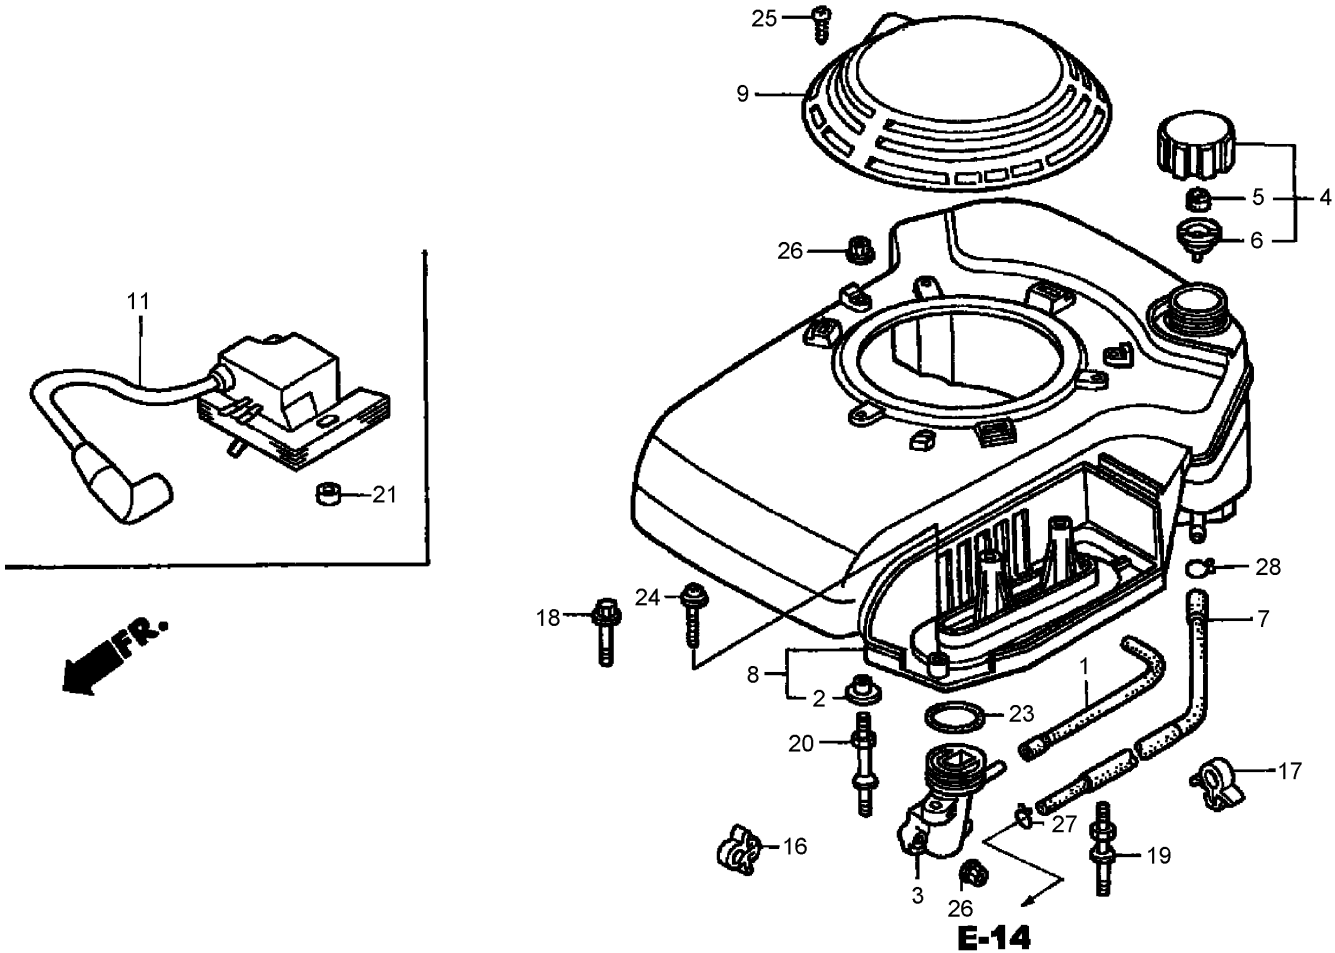 

Fan Cover Assembly
Honda GXV160K1-A1T

Ref	Part No.	Qty.	Description
❶1	15721-ZE7-000	1	Tube-Breather
❷2	17216-PE2-003	3	Collar-Cleaner, Air
❸3	17410-ZE7-W00	1	Elbow-Cleaner, Air
❹4	17620-ZE7-000	1	Fuel Tank Cap ASM
❺5	17622-888-010	1	Sponge-Breather, Fuel Cap
❻6	17624-ZE7-000	1	Gasket-Cap, Fuel
❼7	17700-ZE7-W00	1	Fuel Tank Tube ASM
❽8	19610-ZE7-W11ZA	1	Cover-Fan
❾9	19615-ZG9-801ZA	1	Hood-Cover, Fan
❿11	30500-ZG9-801	1	Ignition Coil ASM
⓫16	36103-ZE1-000	1	Holder-Wire, Stop Switch
⓬17	46392-SC2-003	1	Clamp-Pipe, Brake
⓭18	90015-883-000	1	Bolt-Flange (6X28)


Ref	Part No.	Qty.	Description
❶19	90041-ZE7-W10	2	Bolt-Stud
❷20	90042-ZE7-W00	1	Bolt-Stud
❸21	90402-ZE7-W00	2	Collar-Special
❹23	91301-ZG9-800	1	O-Ring (33.3X3.5)
❺24	93891-06035-10	1	Screw-Washer (6X35)
❻25	93913-24580	1	Screw-Tapping (4X20)
❼26	94050-06000	5	Nut-Flange (6Mm)
⓯27	95002-02080	1	Clip-Tube (B8)
⓰28	95002-50000	1	Clip-Tube (C9)

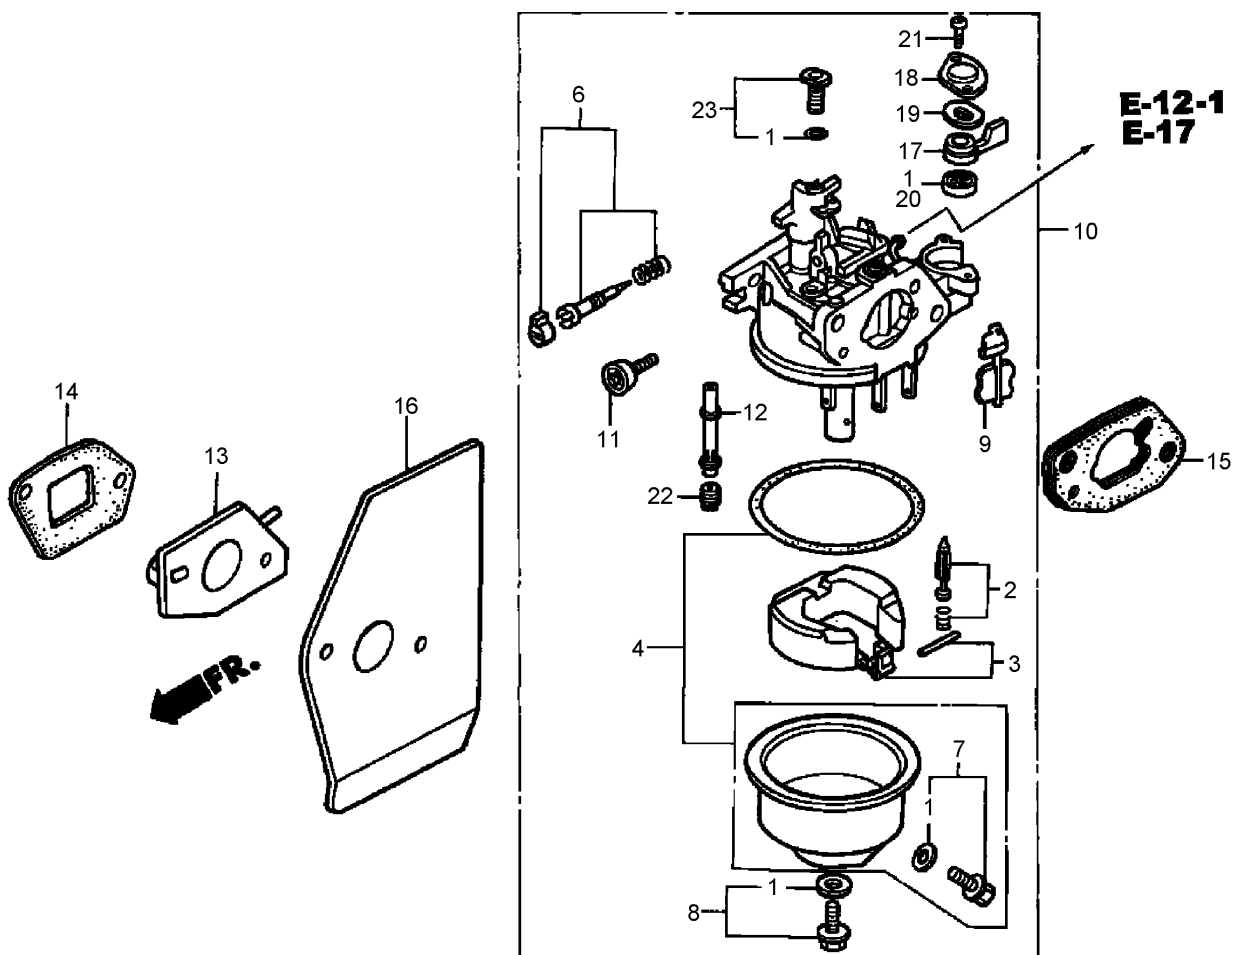 

Carburetor Assembly Honda GXV160K1-A1T


Ref	Part No.	Qty.	Description
❶1	16010-ZE0-025	1	Gasket Set
❷2	16011-ZE0-005	1	Valve Set-Float
❸3	16013-ZE0-005	1	Float Set
❹4	16015-ZE0-831	1	Chamber Set-Float
❺6	16016-ZH7-W01	1	Screw Set
❻7	16024-ZE1-811	1	Screw Set-Drain
❼8	16028-ZE0-005	1	Screw-Set
❽9	16045-ZE7-005	1	Choke Set
❾10	16100-ZE7-W21	1	Carburetor ASM
❿11	16124-ZE0-005	1	Screw-Stop, Throttle
❿12	16166-ZE7-W10	1	Nozzle-Main
❿13	16211-ZE7-000	1	Insulator-Carburetor
❿14	16212-ZE7-M10	1	Gasket-Insulator

Ref	Part No.	Qty.	Description
❿15	16220-ZE6-010	1	Spacer-Carburetor
❿16	16221-ZE7-M11	1	Gasket-Carburetor
❿17	16953-ZE1-812	1	Lever-Valve
❿18	16954-ZE1-812	1	Plate-Setting, Lever
❿19	16956-ZE1-811	1	Spring-Lever, Valve
❿20	16957-ZE1-812	1	Gasket-Valve
❿21	93500-03006-0H	2	Screw-Pan (3X6)
❿22	99101-ZH8-0600	1	Jet-Main (No. 60)
❿22	99101-ZH8-0620	1	Jet-Main (No. 62)
❿22	99101-ZH8-0650	1	Jet-Main (No. 65)
❿23	99204-ZE0-0350	1	Jet Set-Pilot (No. 35)

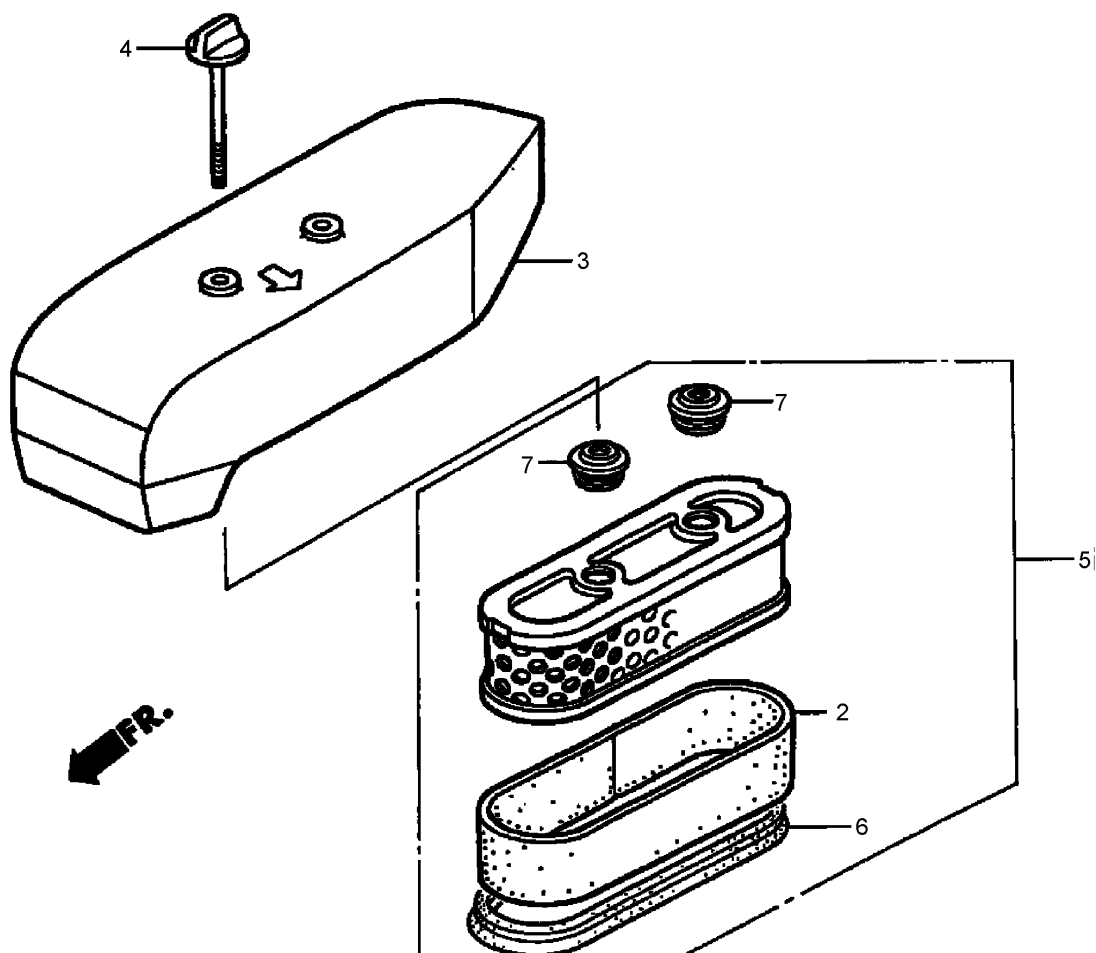 


Air Cleaner Assembly Honda GXV160K1-A1T

Ref	Part No.	Qty.	Description				
22	17218-ZE7-W02	1	Filter (Outer)				
23	17231-ZE7-W00ZA	1	Cover-Cleaner, Air				
24	90004-ZE7-W00	2	Bolt-Cleaner, Air (6X73)				
25	17211-ZE7-W03	1	Element-Cleaner, Air				
26	17217-ZE7-W00	1	Gasket-Element				
27	17232-ZE7-W00	2	Grommet-Cleaner, Air				

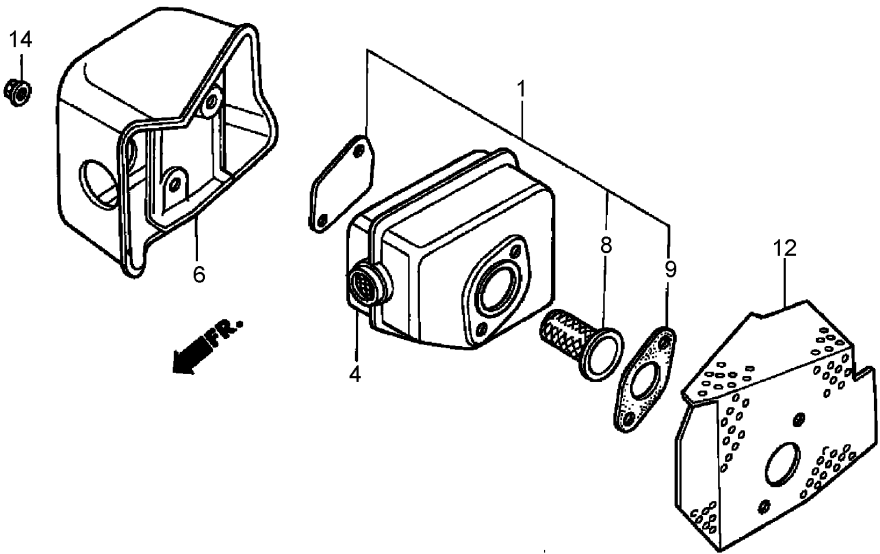 

Muffler Assembly
Honda GXV160K1-A1T


Ref	Part No.	Qty.	Description				
❶1	06180-ZE6-820	1	Spark Arrester Kit				
❷4	18310-ZG9-J01	1	Muffler				
❸6	18320-ZG9-M01	1	Protector-Muffler				
❹8	06180-888-505	1	Spark Arrester Kit				
❺8	06180-888-810	1	Spark Arrester Kit				
❻9	18381-ZE6-820	1	Gasket-Muffler				
❼12	18381-ZG9-M00	1	Gasket-Muffler				
❽14	90343-ZE6-000	2	Nut-Self Lock (6Mm)				

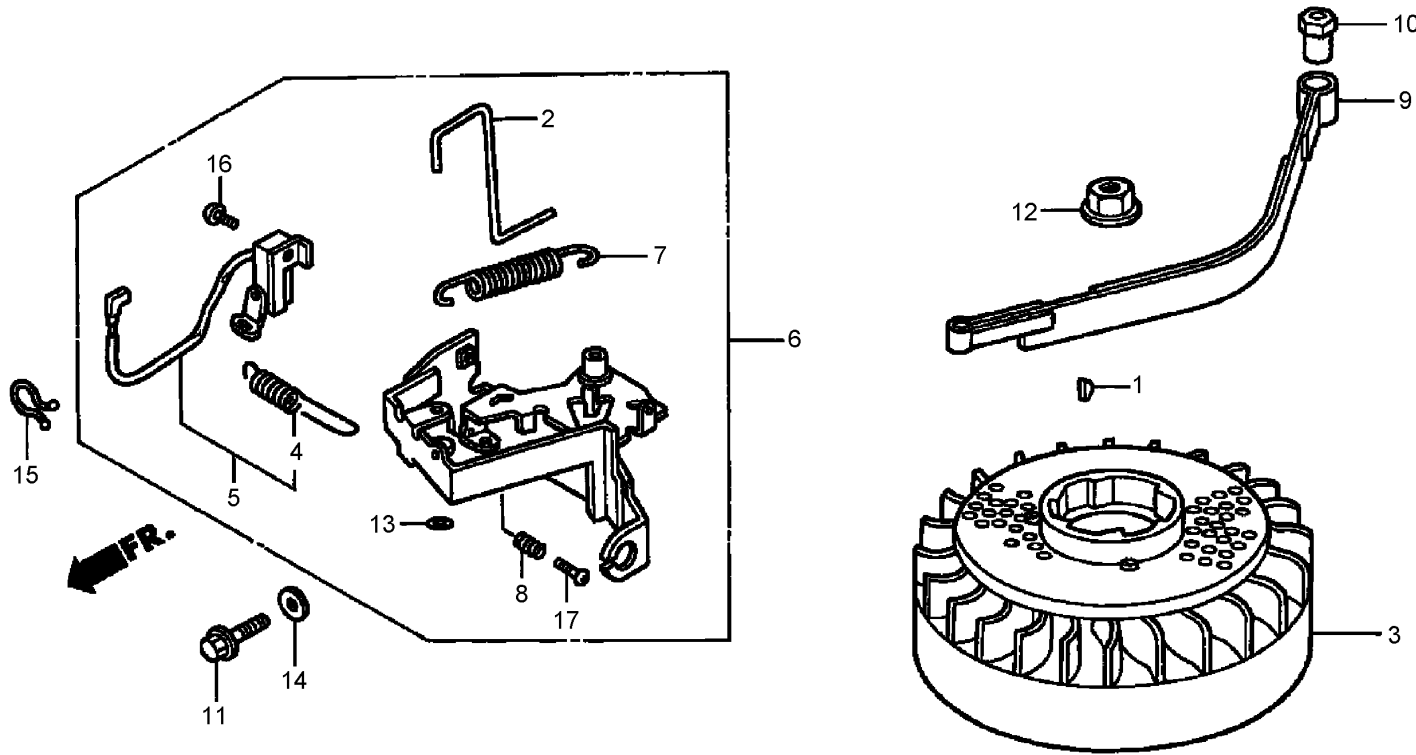 

Flywheel Assembly
Honda GXV160K1-A1T

Ref	Part No.	Qty.	Description
❶1	13331-357-000	1	Key-Woodruff (25X18)
❷2	16566-ZE7-W00	1	Rod-Governor Arm, Return
❸3	31105-ZE7-W00	1	Flywheel ASM
❹4	35129-ZG9-800	1	Spring-Switch, Control
❺5	36100-ZE7-W01	1	Engine Stop Switch ASM
❻6	75101-ZE7-W00	1	Brake Lever ASM
❼7	75113-ZG9-800	1	Spring-Brake, Lever
❽8	75114-ZG9-800	1	Spring-Brake, Adjusting
❾9	75120-ZG9-305	1	Brake
❿10	75123-ZG9-800	1	Collar-Brake, Shaft
❶❶11	90014-952-000	1	Bolt-Flange (6X14)
❶❶❶12	90201-878-003	1	Nut (14Mm)
❶❶❶❶13	90310-ZB7-701	1	Nut-Push (2.6)


Ref	Part No.	Qty.	Description
❶❶❶❶❶❶14	90461-357-000	1	Washer-Sealing (6.5X12)
❶❶❶❶❶❶❶15	90630-ZE7-W01	1	Clip-Purse, Lock
❶❶❶❶❶❶❶❶16	93500-04008-0A	1	Screw-Pan (4X8)
❶❶❶❶❶❶❶❶❶17	93500-05012-0A	1	Screw-Pan (5X12)

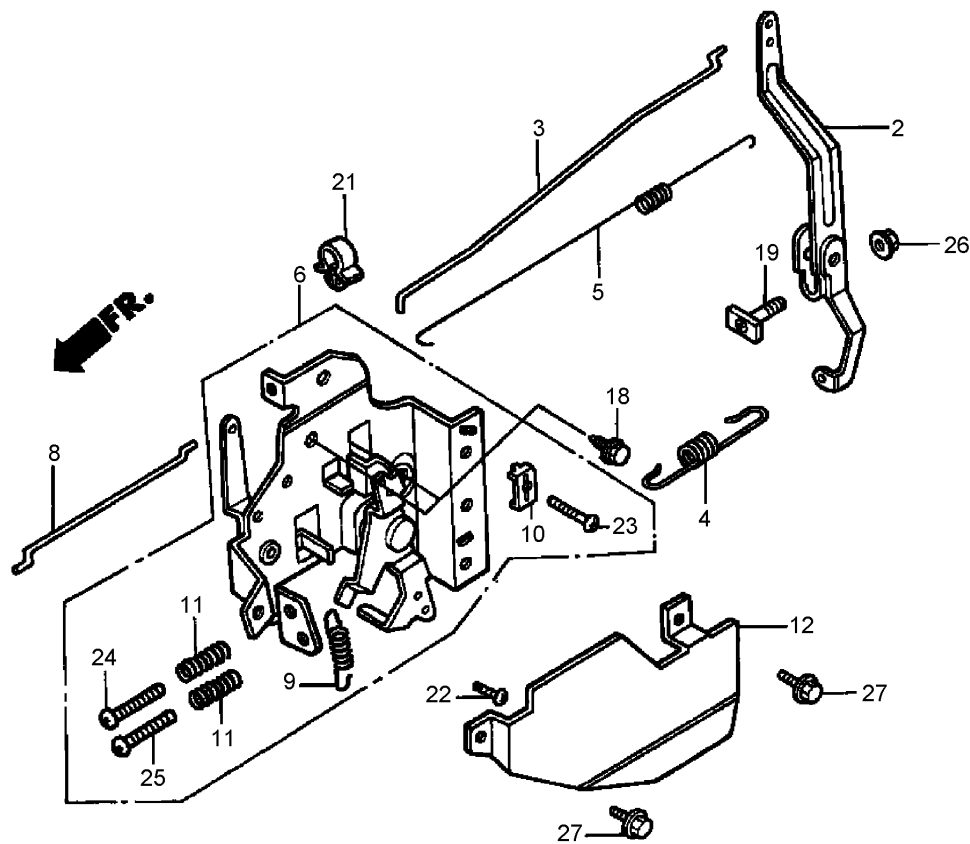 

Control Assembly
Honda GXV160K1-A1T

Ref	Part No.	Qty.	Description
22	16551-ZE7-000	1	Arm-Governor
23	16555-ZE7-000	1	Rod-Governor
24	16561-ZE7-020	1	Spring-Governor (STD)
25	16562-ZE6-000	1	Spring-Return, Throttle
26	16570-ZE7-020	1	Control ASM
28	16573-ZE7-000	1	Rod-Choke
29	16576-ZE7-300	1	Spring-Lever
210	16576-891-000	1	Holder-Cable
211	16584-883-300	2	Spring-Adjusting, Control
212	16585-ZE7-000	1	Protector-Control
218	90013-883-000	2	Bolt-Flange (6X12) (Ct200)
219	90015-ZE5-010	1	Bolt-Arm, Governor
221	90659-680-013	1	Clip-Harness, Wire

Ref	Part No.	Qty.	Description
222	93500-04008-0A	1	Screw-Pan (4X8)
223	93500-05016-0A	1	Screw-Pan (5X16)
224	93500-05020-0A	1	Screw-Pan (5X20)
225	93500-05028-0A	1	Screw-Pan (5X28)
226	94050-06000	1	Nut-Flange (6Mm)
227	95701-06010-00	2	Bolt-Flange (6X10)

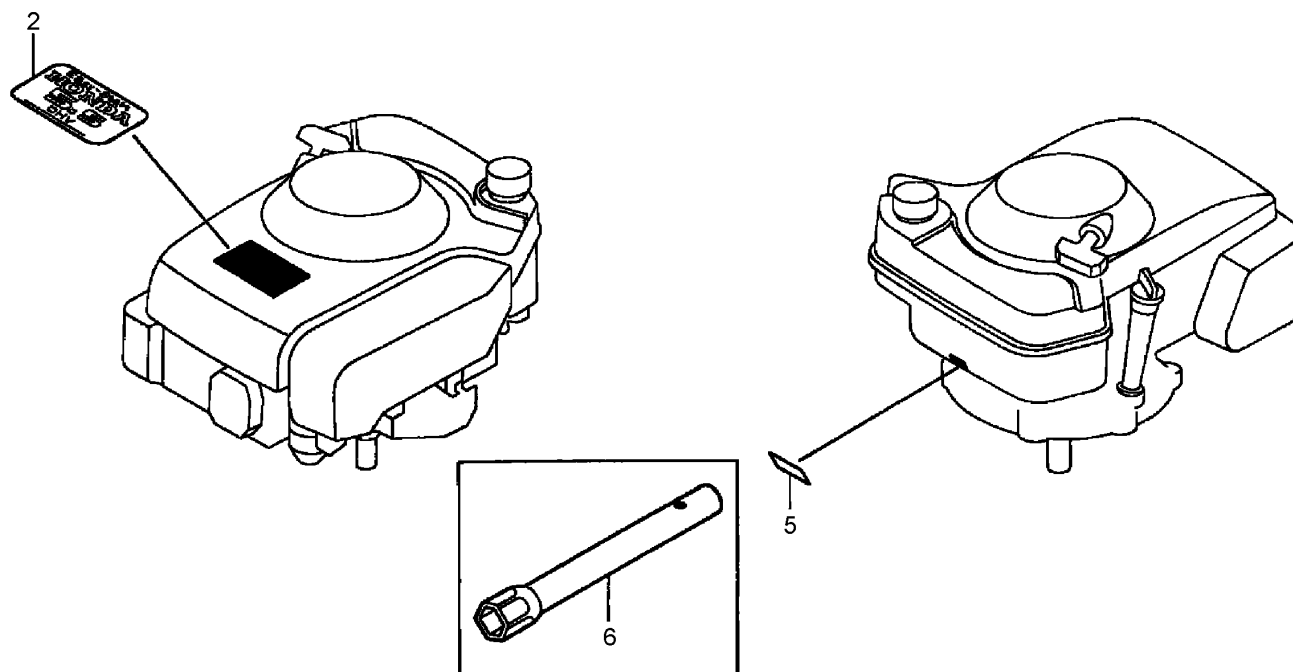 

Label Assembly

Honda GXV160K1-A1T

Ref	Part No.	Qty.	Description
02	87101-ZE7-W31	1	Emblem (5.5)
05	87601-ZE7-V10	1	Mark-Type (A1T)
06	99004-21003	1	Wrench-Box (P21)

NOTES

NOTES

NOTES

