



21in Heavy-Duty Recycler[®] Rear Bagger Lawnmower

Model No. 22175 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Deck, Chute and Wheel Assembly	 3	Valve and Camshaft Assembly	 12
Housing Assembly No. 98-7139	 5	Lubrication Equipment Assembly	 13
Front Wheel and Tire Assembly	 6	Cooling Equipment Assembly	 14
Engine, Fuel Tank and Blade Assembly	 7	Electrical Equipment Assembly	 15
Handle Assembly	 8	Control Equipment Assembly	 16
Grass Bag Assembly No. 106-0975	 9	Carburetor Assembly	 17
Cylinder and Crankcase Assembly	 10	Air Filter and Muffler Assembly	 18
Piston and Crankshaft Assembly	 11	Starter Assembly	 19
		Brake and Lever Assembly	 20

Part Description Abbreviations

 
Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
CARR. carriage	NI. nylon insert
DEG. degrees	NPTF. national pipe thread fine
FH. flat head	PPH. phillips pan head
GA. gauge	PRH. phillips round head
HF. hex flange	PTH. phillips truss head
HH. hex head	PTO. power take off
HHF. hex head flange	RH. right hand
HHFTF. hex head flange thread forming	ROPS. roll over protection system
HJ. hex jam	SFH. slotted fillister head
HLH. hex lag head	SHH. slotted hex head
HOC. height-of-cut	SHWH. slotted hex washer head
HS. hex	SPH. slotted pan head
HSBH. hex socket button head	SQH. square head
HSFH. hex socket flat head	SRH. slotted round head
HS. hex socket head	STD. standard
HWH. hex washer head	TAP. self tapping
HWHTF. hex washer head thread forming	TTH. torx truss head
HYD. hydraulic	WH. wing head

Footnotes

❶ Not illustrated


❷ Not serviced separately

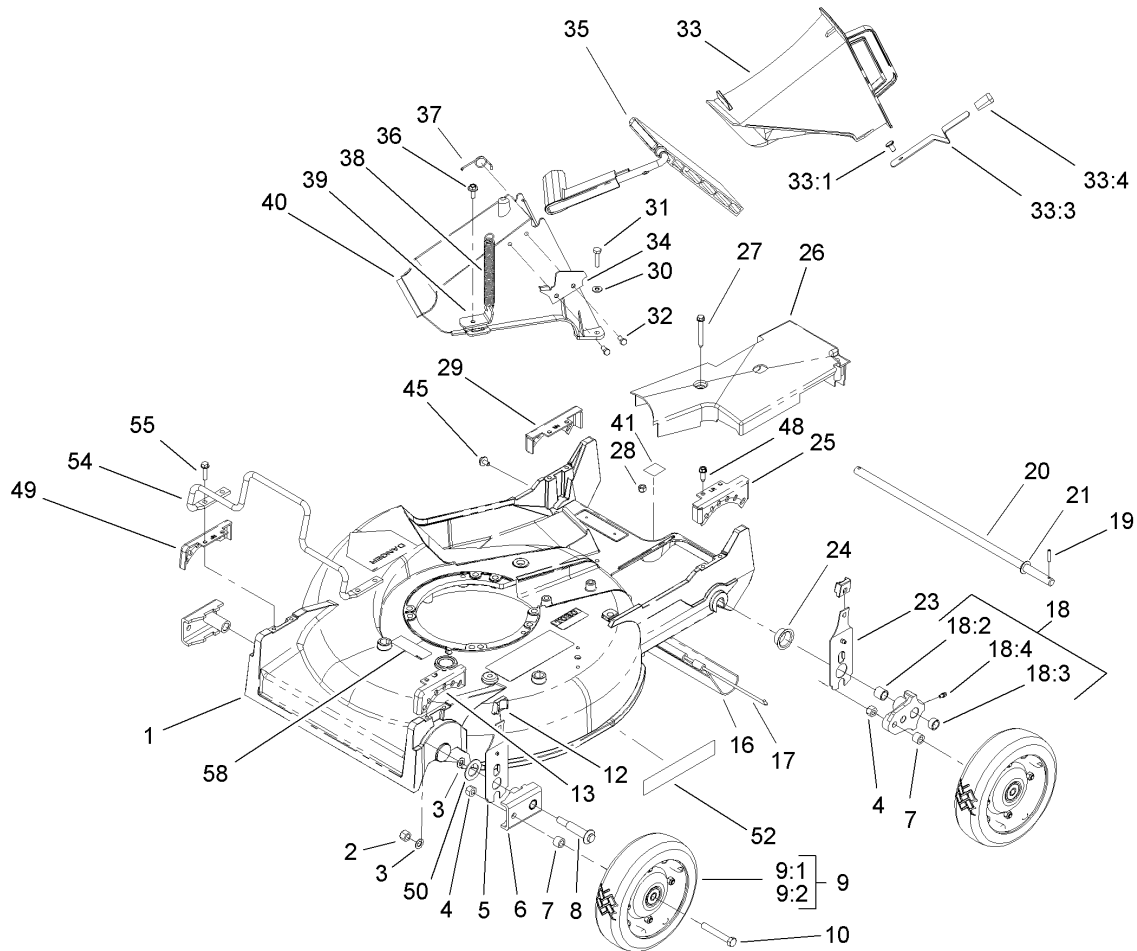

Deck, Chute and Wheel Assembly


Ref	Part No.	Qty.	Description
1	98-7139	1	Housing
2	3296-6	2	Nut-Lock
3	40-1940	4	Washer
4	32152-2	4	Nut-Lock, Cone
5	66-7560	2	Front Spring Arm ASM
6	61-8300	2	Arm-Pivot, Front
7	52-2480	4	Spacer-Wheel
8	27-6232	2	Bolt-Wheel
9	100-2870	4	Wheel And Tire ASM
9:1	53-7740	1	Tire
9:2		1	Wheel ASM
10	323-12	4	Screw-HH
12	25-7740	4	Knob-Arm
13	49-8760	1	Quadrant-Front, LH
16	44-0580	1	Shield-Trailing
17	33-3208	1	Rod-Shield
18	42-3510	2	Pivot Arm ASM
18:2	47-2900	1	Bushing
18:3	47-2890	1	Bushing
18:4	302-56	1	Fitting-Grease
19	32121-108	2	Pin-Spirol
20	49-8790	1	Shaft-Axle, Rear
21	36-4780	4	Washer
23	66-7561	2	Rear Spring Arm ASM

Ref	Part No.	Qty.	Description
24	48-2170	2	Cap-End
25	49-8740	1	Quadrant-Rear, LH
26	63-9441	1	Cover-Belt
27	37-7260	2	Screw-HH
28	3296-42	2	Nut-Lock, NI
29	49-8750	1	Quadrant-Rear, RH
30	3256-22	2	Washer-Flat
31	321-7	2	Screw-HH
32	46-8090	2	Screw-Plastite
33	77-0500	1	Discharge Plug ASM
33:1	3295-35	1	Rivet-Head, Flat
33:3	76-4640	1	Latch-Plug, Discharge
33:4	76-4650	1	Grip-Latch
34	93-3154	1	Latch-Plate
35	93-7351	1	Discharge Door ASM
36	46-6811	1	Screw-HWH
37	80-3770	1	Retainer-Door
38	76-4660	1	Spring-Door
39	71-9350	1	Bracket-Spring
40	82-9152	1	Tunnel-Discharge
41	52-2610	1	Label-Grease, Hp
45	46-6810	1	Screw And Washer ASM
48	49-2040	4	Screw-Tapping
49	49-8770	1	Quadrant-Front, RH

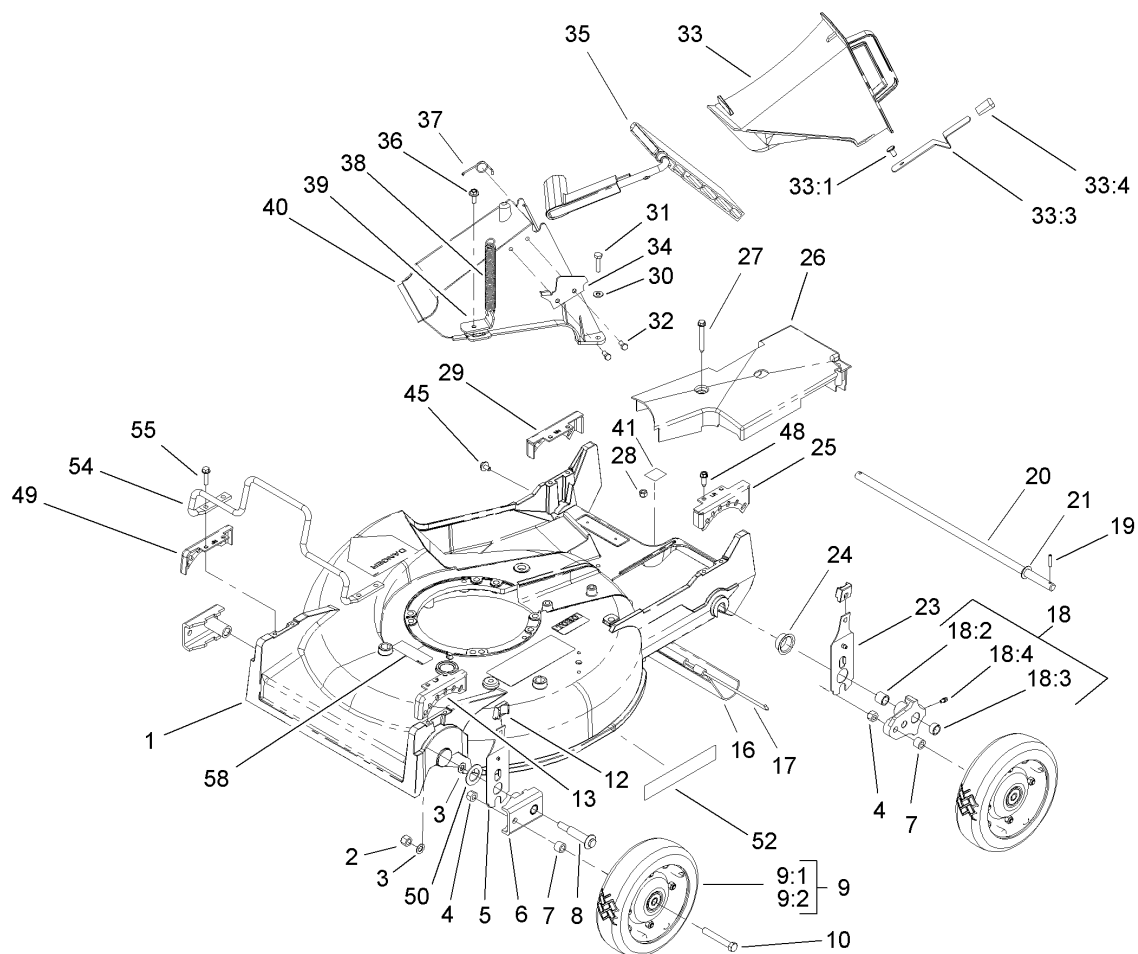 


Deck, Chute and Wheel Assembly (continued)

Ref	Part No.	Qty.	Description
50	257-3	2	Washer-Thrust
52	106-0689	1	Decal
54	99-6722	1	Guard-Engine
55	32144-86	4	Screw-Hwh, Thread Forming
58	68-7410	1	Decal-Blade

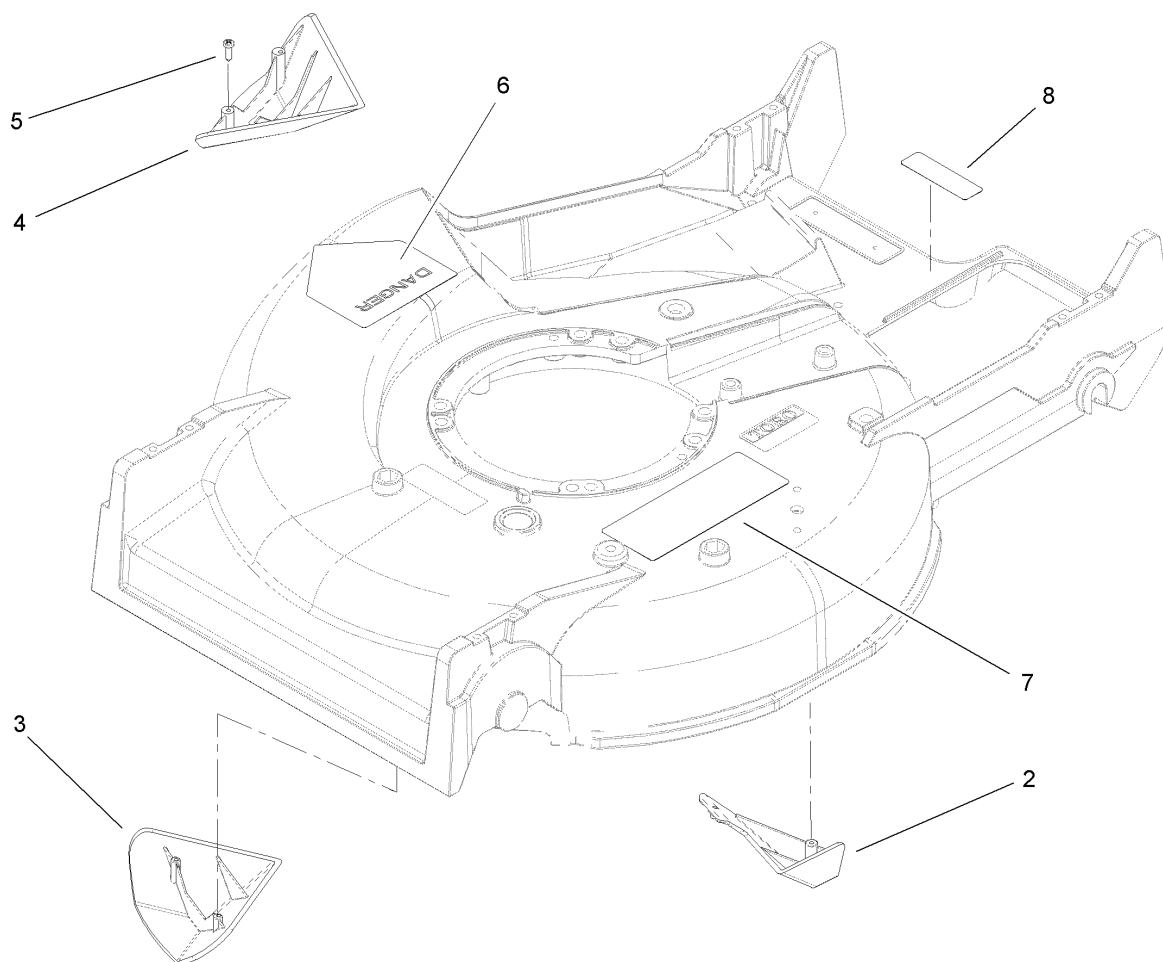 
**Housing Assembly No. 98-7139**

Ref	Part No.	Qty.	Description				
2	92-1750	1	Kicker-Rear				
3	92-1720	1	Kicker-Front				
4	92-1730	1	Kicker-RH				
5	32144-111	6	Screw-PPH				
6	39-5770	1	Decal-Danger				
7	93-0248	1	Decal-Warning				
8	92-1779	1	Decal-Warning				

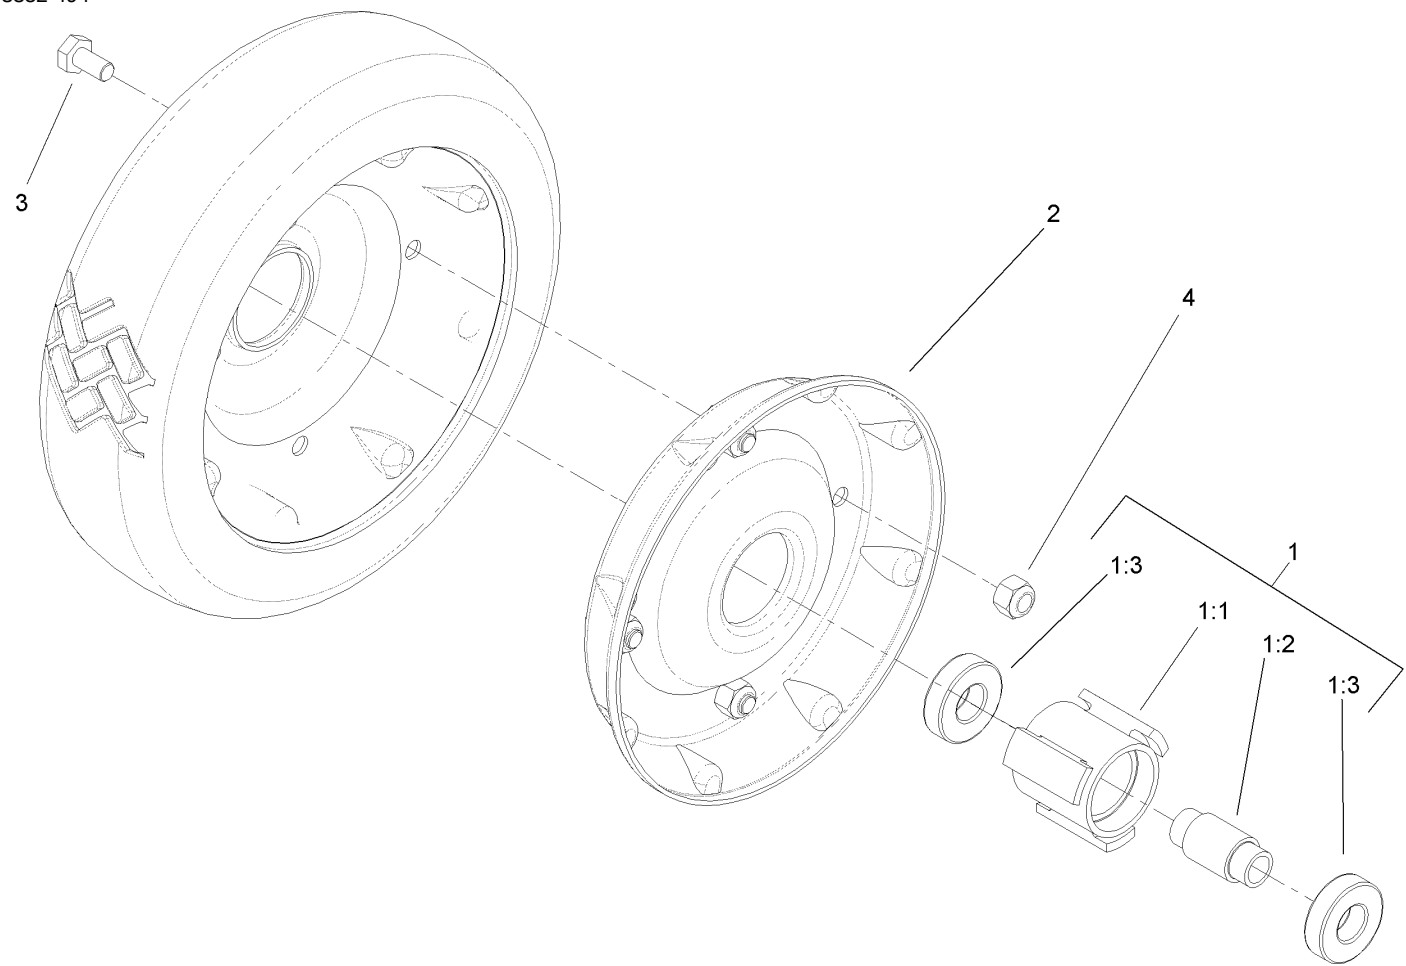 


Front Wheel and Tire Assembly

Ref	Part No.	Qty.	Description				
1		1	Hub And Bearing ASM				
1:1	52-2410	1	Hub-Bearing				
1:2	52-2440	1	Spacer-Bearing				
1:3	52-2450	2	Bearing-Wheel				
2	53-7780-06	2	Plate-Wheel, Half				
3	321-2	4	Screw-HH				
4	3296-42	4	Nut-Lock, NI				

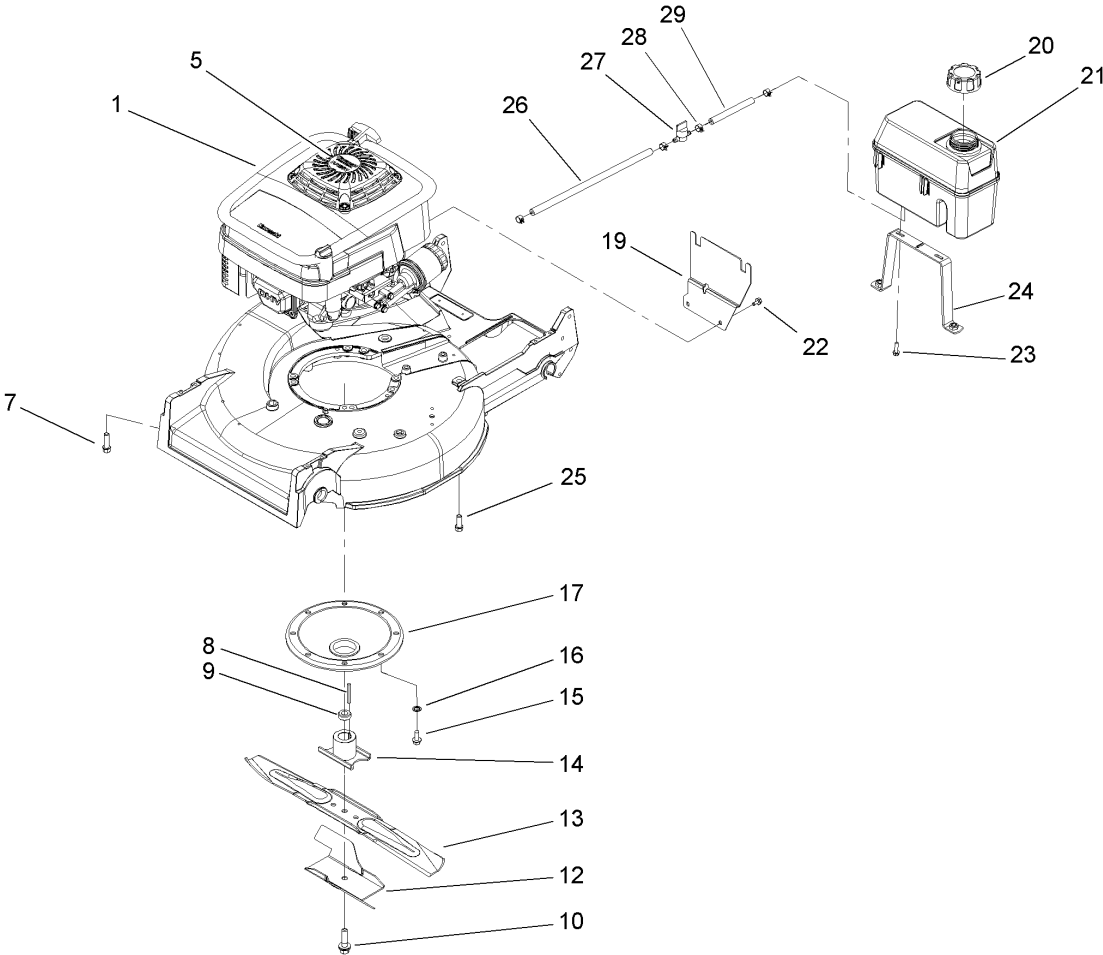 

Engine, Fuel Tank and Blade Assembly


Ref	Part No.	Qty.	Description				
1	108-0844	1	Engine-Kawasaki, Fj180v-Cs10s				
5	107-4201	1	Decal-Recoil				
7	95-1727	4	Screw-Taptite				
8	7-0036	1	Key-Square				
9	103-3795	1	Spacer-Retainer, Blade				
10	105-8579	1	Bolt-Blade				
12	92-1599-03	1	Stiffener-Blade				
13	91-2256-03	1	Blade				
14	52-2170	1	Retainer-Blade				
15	32144-70	3	Screw-HH				
16	3254-6	3	Washer-Lock, Internal				
17	48-2591	1	Protector-Crankshaft				
19	106-0908-03	1	Bracket-Tank				
20	93-7198	1	Gas Cap ASM				
21	106-0625	1	Tank-Fuel				
22	104-2628	3	Screw-HWH				
23	46-8091	2	Screw-HWH				
24	107-4131-03	1	Tank Base				
25	95-1726	2	Screw-Taptite				
26	47-2983	1	Hose-Fuel				
27	1-603770	1	Valve-Fuel				
28	2412-98	4	Clamp				
29	106-0999	1	Hose-Gas				

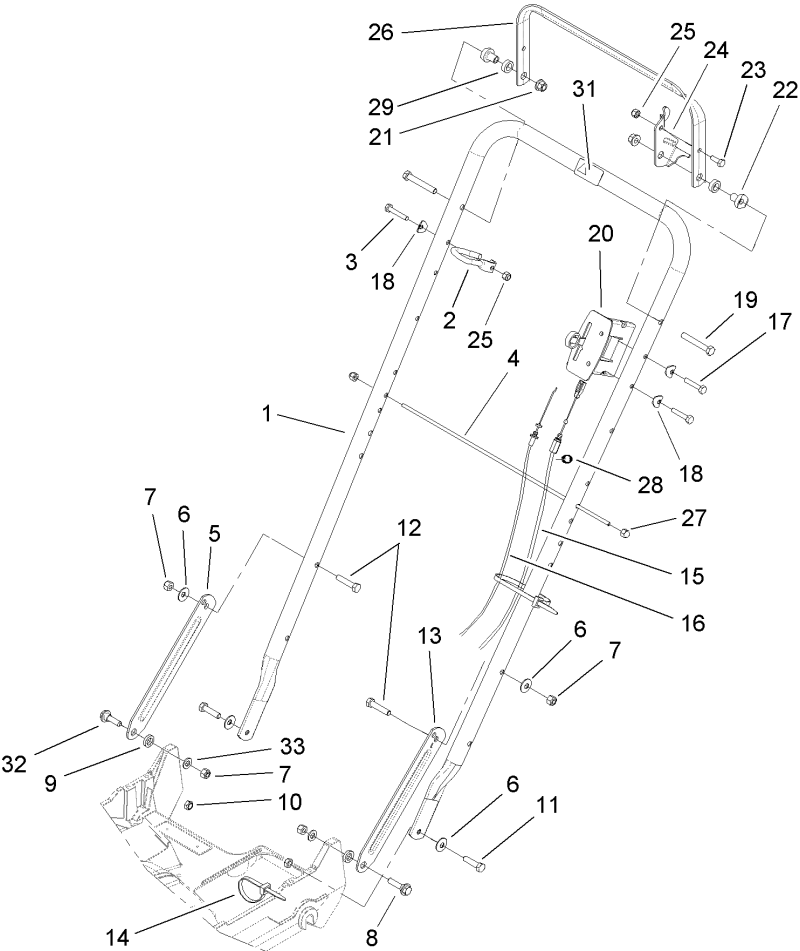 

Handle Assembly


Ref	Part No.	Qty.	Description
1	98-2000-03	1	Handle
2	46-8081	1	Guide-Rope
3	321-9	1	Screw-HH
4	48-2810	1	Rod-Support, Bag
5	100-3297-03	1	Latch-Handle, RH
6	3290-456	4	Washer-Belleville
7	3296-29	4	Nut-Lock, NI
8	27-7210	1	Screw-Shoulder
9	3-3287	2	Spacer-Latch, Handle
10	3296-47	2	Nut-Lock, NI
11	322-6	2	Screw-HH
12	322-7	2	Screw-HH
13	100-3298-03	1	Latch-Handle, LH
14	3290-378	3	Tie-Cable
15	103-2684	1	Cable-Brake
16	106-0888	1	Throttle Cable ASM
17	321-13	2	Screw-HH
18	3-7501	3	Washer
19	322-11	2	Screw-HH
20	103-5296	1	Control-Throttle
21	3296-58	2	Nut-Lock NI
22	49-1630	2	Spacer-Support
23	321-4	1	Screw-HH
24	66-5350	1	Lever-Control

Ref	Part No.	Qty.	Description
25	3296-42	2	Nut-Lock, NI
26	61-8270-03	1	Bar-Control
27	32111-7	2	Nut-Cap
28	32151-86	2	E-Ring
29	256-276	2	Spacer-Nylon
31	98-4387	1	Decal-Protection, Ear
32	27-7211	1	Screw-Shoulder
33	3256-23	2	Washer-Flat
99	106-0975	1	Grass Bag ASM

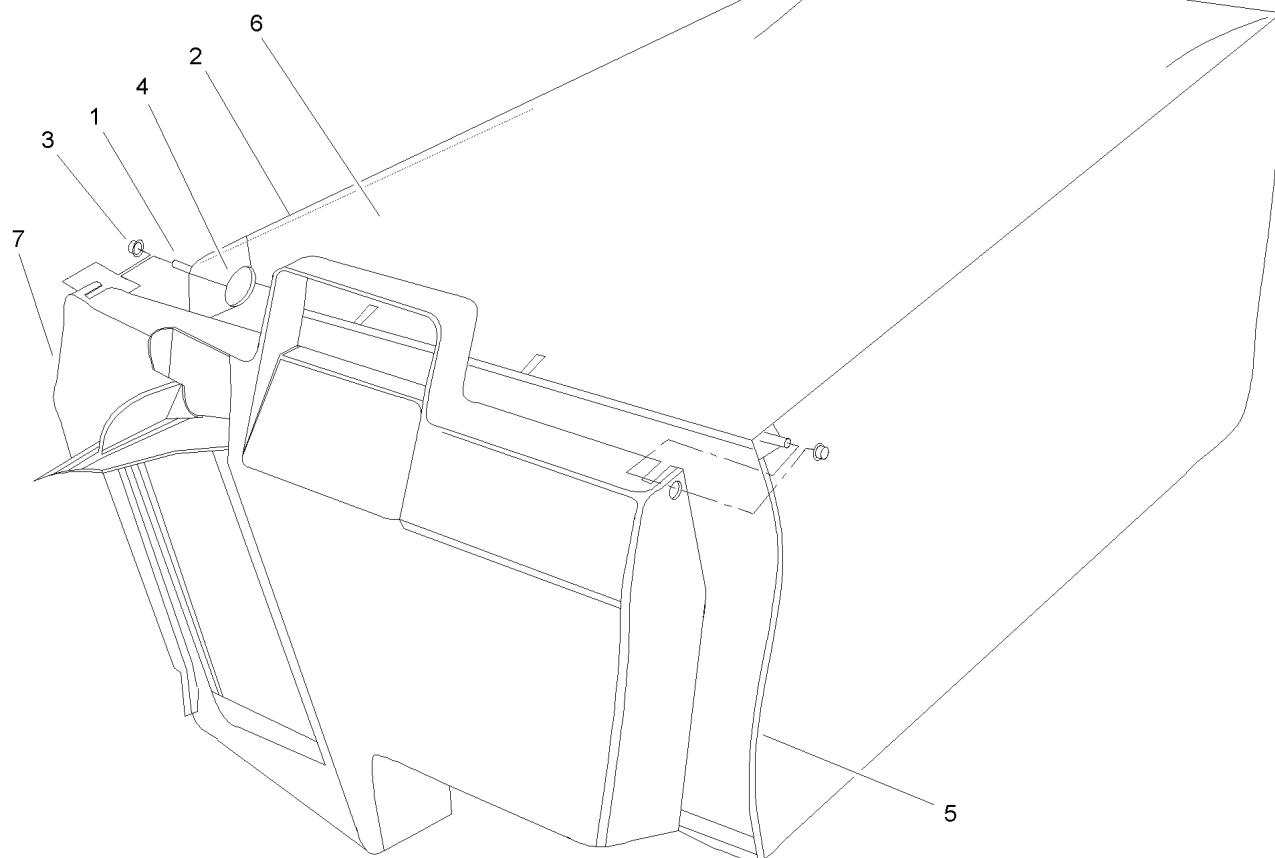 


Grass Bag Assembly No. 106-0975

Ref	Part No.	Qty.	Description				
1	33-4820	1	Hinge-Door, Bag				
2	42-4030	1	Frame-Bag, Upper				
3	3290-422	2	Nut-Push				
4	36-6910	2	Spring				
5	42-4020	1	Frame-Bag				
6	106-0926	1	Bag-Grass				
7	48-2840	1	Door-Bag, Grass				

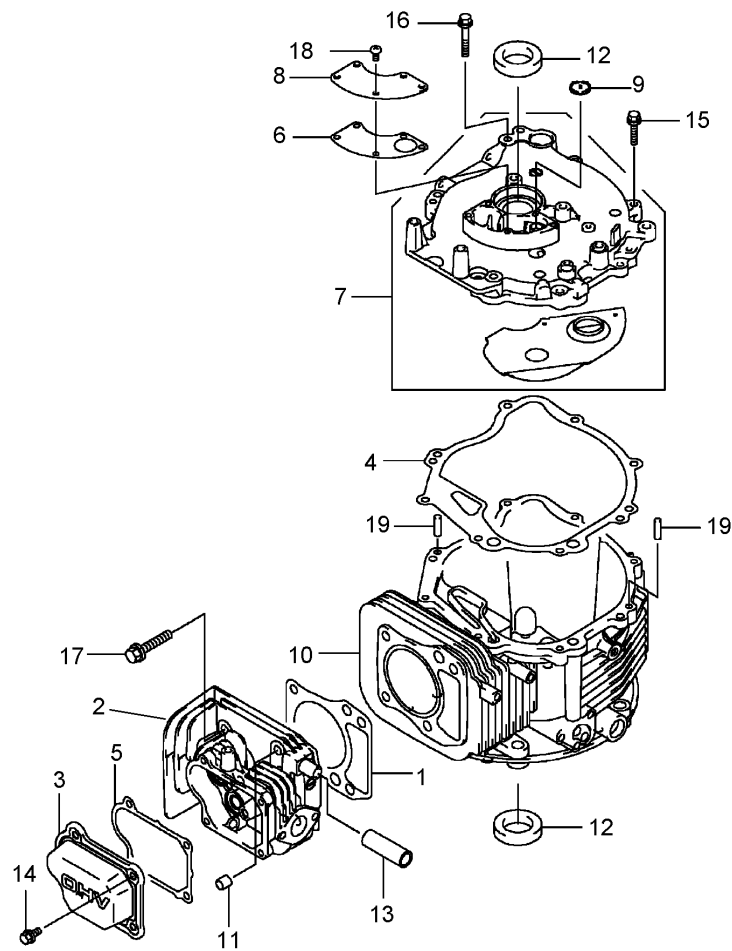 


Cylinder and Crankcase Assembly

Ref	Part No.	Qty.	Description				
1	108-2627	1	Gasket-Head				
2	108-2501	1	Head-Cylinder				
3	108-2502	1	Case-Rocker				
4	108-2503	1	Gasket				
5	108-2504	1	Gasket-Case, Rocker				
6	108-2505	1	Gasket-Breather				
7	108-2506	1	Cover-Comp				
8	108-2507	1	Cover-Breather				
9	108-2508	1	Valve-Breather				
10	108-2509	1	Crankcase-Comp				
11	108-2510	2	Pin				
12	108-2511	2	Seal-Oil				
13	108-2512	1	Tube				
14	100-2804	4	Bolt-Flanged				
15	100-2610	7	Bolt-Flanged				
16	108-2513	1	Bolt-Flange				
17	108-2514	4	Bolt-Flange				
18	100-2763	5	Screw-Pan				
19	108-2515	2	Pin-Dowel				

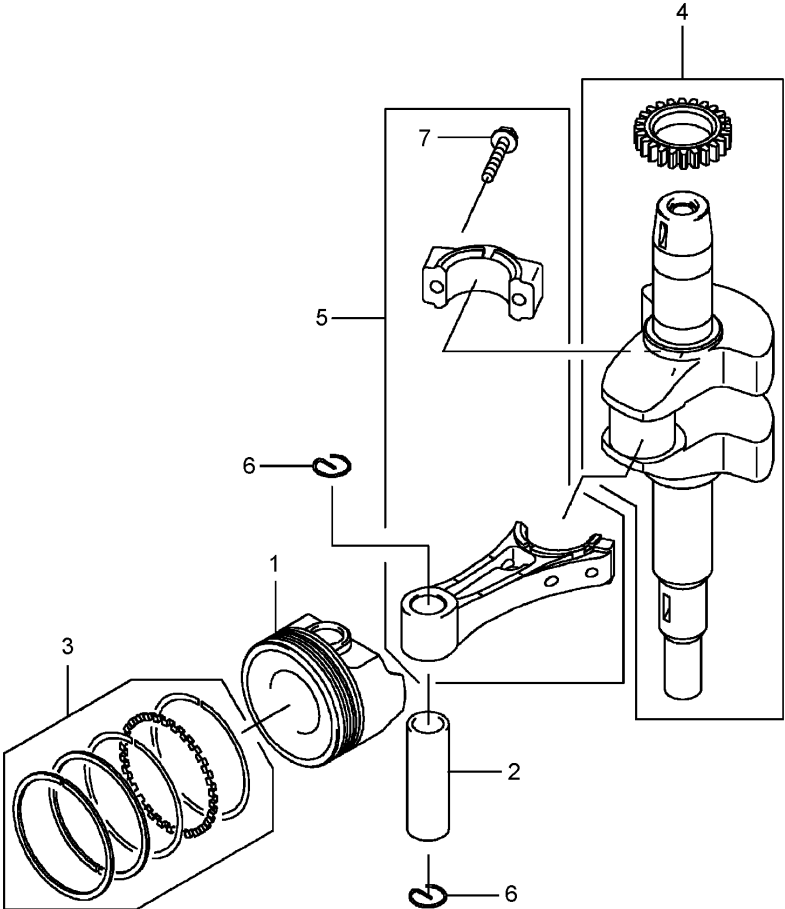 


Piston and Crankshaft Assembly

Ref	Part No.	Qty.	Description				
1	108-2516	1	Piston-Engine				
2	108-2517	1	Pin-Piston				
3	108-2518	1	Ring-Set, Piston				
4	108-2519	1	Crankshaft				
5	108-2520	1	Connecting Rod ASM				
6	108-2521	2	Ring-Snap				
7	108-2522	2	Bolt-Flange				

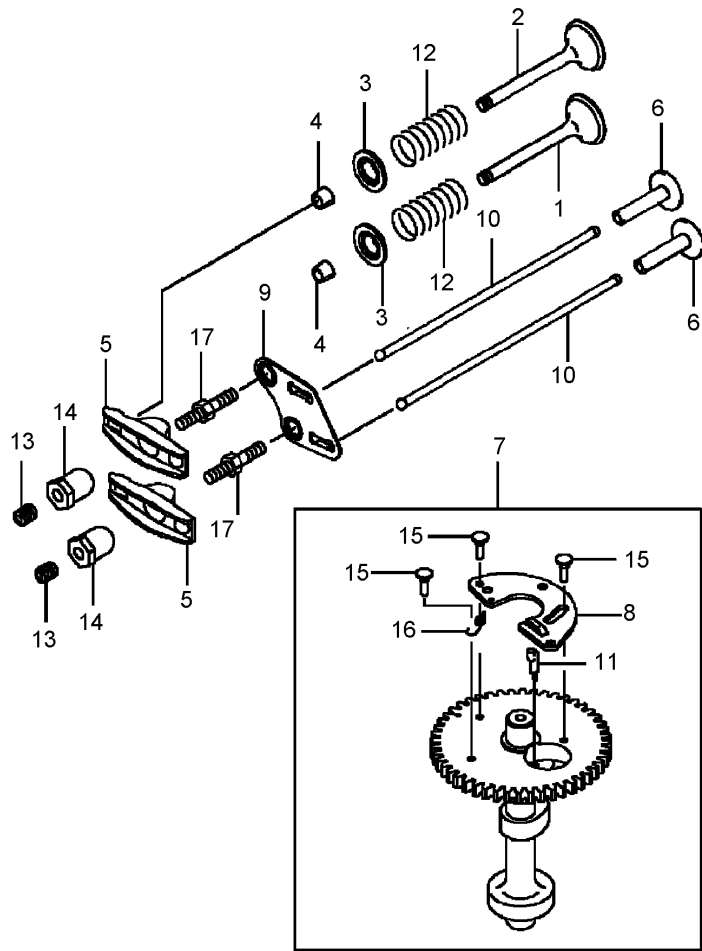 


Valve and Camshaft Assembly

Ref	Part No.	Qty.	Description				
1	108-2523	1	Valve-Intake				
2	108-2524	1	Valve-Exhaust				
3	108-2525	2	Retainer-Spring, Valve				
4	95-9744	4	Collet				
5	108-2526	2	Arm-Rocker				
6	108-2527	2	Tappet				
7	108-2528	1	Camshaft Valve ASM				
8	108-2529	1	Weight				
9	108-2530	1	Guide				
10	108-2531	2	Rod-Push				
11	108-2532	1	Arm				
12	108-2533	2	Spring-Valve, Engine				
13	108-2534	2	Screw				
14	93-8534	2	Nut				
15	108-2535	3	Pin				
16	108-2536	1	Spring				
17	108-2537	2	Bolt				

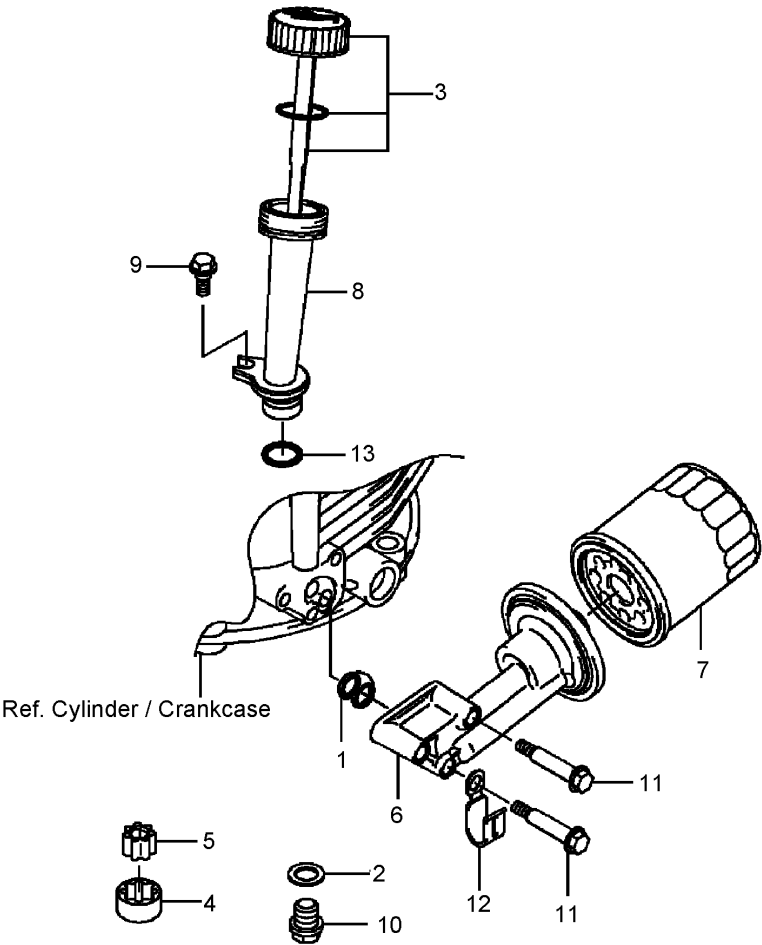 


Lubrication Equipment Assembly

Ref	Part No.	Qty.	Description				
1	100-2644	1	Gasket				
2	108-2538	1	Gasket				
3	108-2539	1	Cap ASM				
4	108-2540	1	Rotor-Pump				
5	108-2541	1	Rotor-Pump				
6	108-2542	1	Pipe				
7	KW10761	1	Filter-Oil				
8	108-2543	1	Filler				
9	108-2544	1	Bolt				
10	108-2545	1	Bolt				
11	108-2546	3	Bolt				
12	108-2547	1	Clamp				
13	100-2690	1	O-Ring				

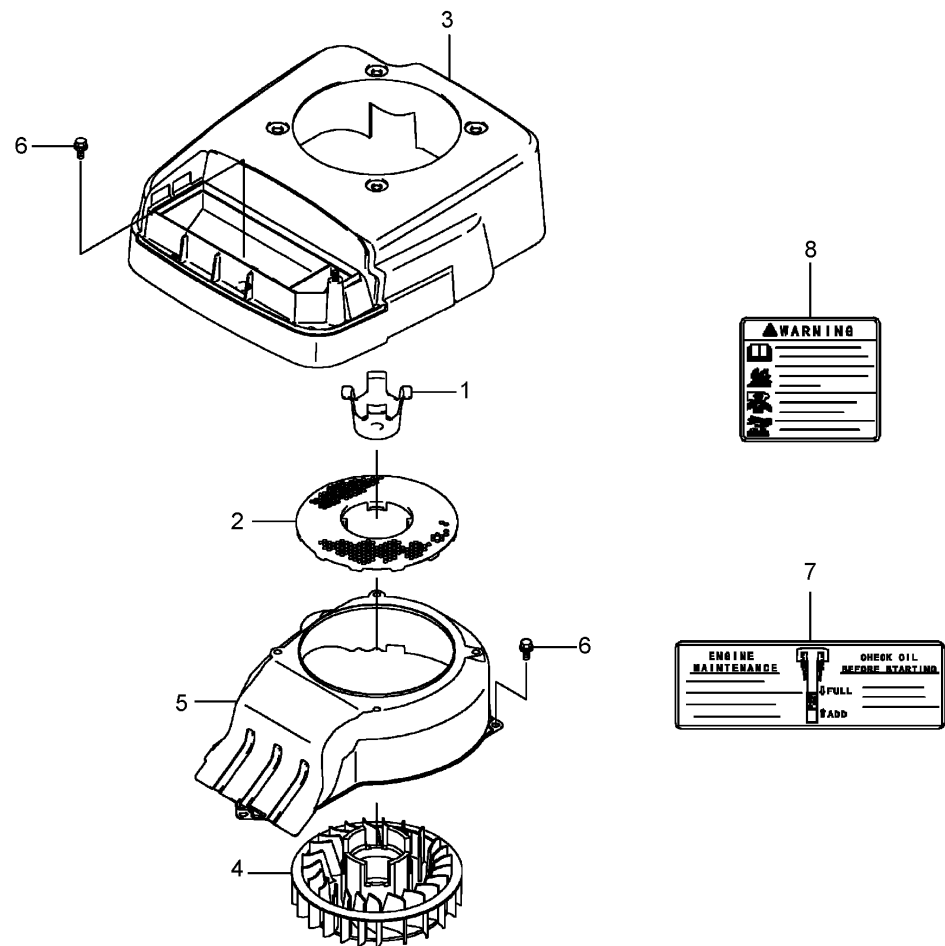 


Cooling Equipment Assembly

Ref	Part No.	Qty.	Description				
1	108-2548	1	Bracket-Fan				
2	108-2549	1	Screen				
3	108-2550	1	Cover				
4	108-2551	1	Fan				
5	108-2552	1	Housing-Fan				
6	100-2804	2	Bolt-Flanged				
7	108-2624	1	Label-Manual				
8	108-2625	1	Label-Warning				

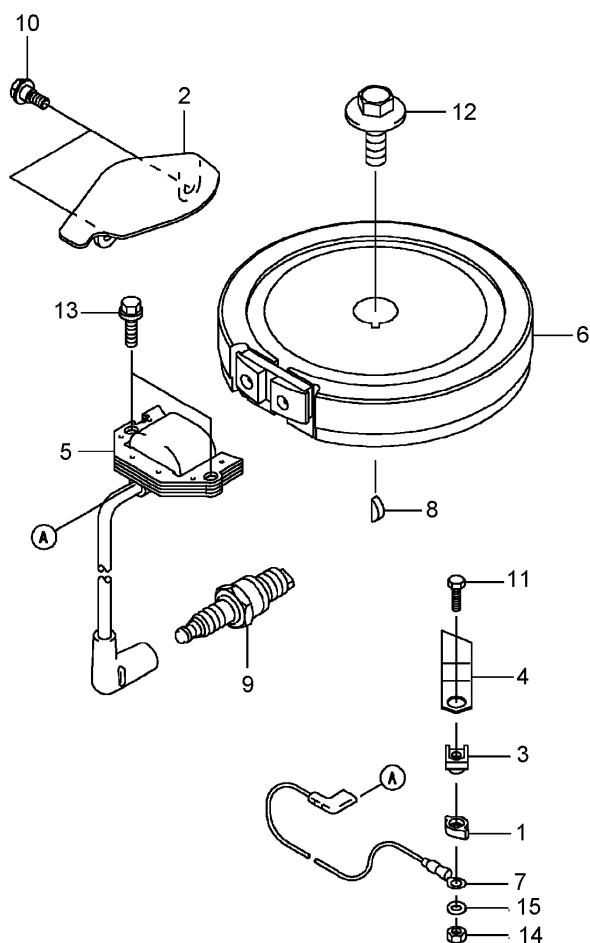 

Electrical Equipment Assembly


Ref	Part No.	Qty.	Description				
1	100-2652	1	Cover				
2	108-2553	1	Cover				
3	100-2653	1	Insulator				
4	100-2796	1	Terminal				
5	108-2554	1	Coil Ignition ASM				
6	108-2555	1	Flywheel				
7	108-2556	1	Wire-Lead				
8	93-8571	1	Key				
9	KW10676	1	Spark Plug				
10	108-2544	2	Bolt				
11	108-2558	1	Bolt				
12	108-2559	1	Bolt				
13	95-9893	2	Bolt-Flanged				
14	100-2668	1	Nut-Hex				
15	100-2798	1	Washer-Plain				

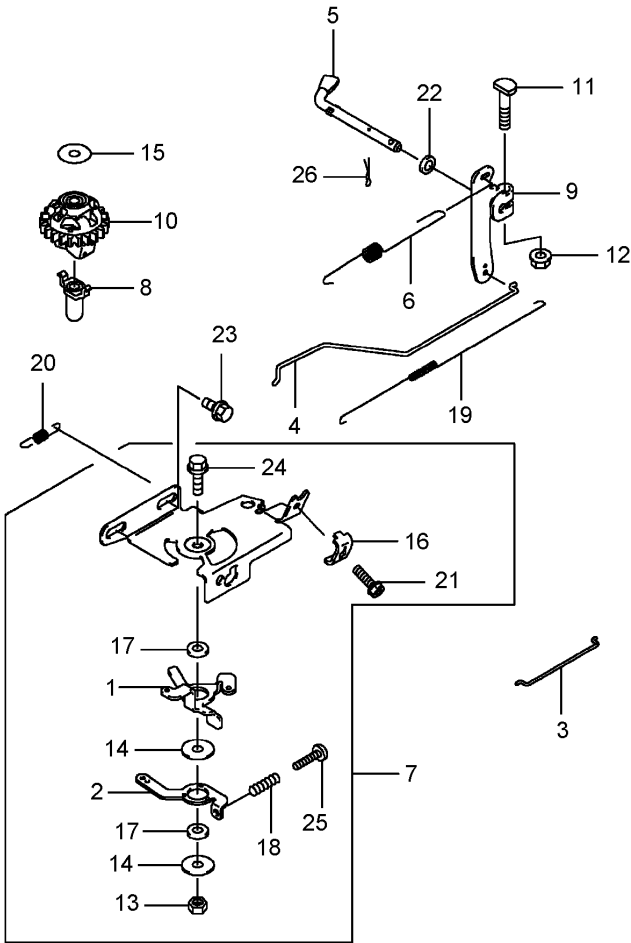 

Control Equipment Assembly


Ref	Part No.	Qty.	Description
1	108-2560	1	Lever
2	108-2561	1	Lever
3	108-2562	1	Link-Choke
4	108-2563	1	Link-Throttle
5	108-2564	1	Arm-Pivot
6	108-2565	1	Spring-Governor
7	108-2566	1	Control Panel ASM
8	108-2567	1	Sleeve
9	108-2568	1	Arm-Governor
10	108-2569	1	Governor ASM
11	108-2570	1	Bolt
12	108-2571	1	Nut
13	108-2572	1	Nut
14	100-2715	2	Washer
15	93-8612	1	Washer
16	95-9849	1	Clamp
17	100-2718	2	Collar
18	93-8588	1	Spring
19	108-2573	1	Spring-Throttle
20	108-2574	1	Spring
21	95-9853	1	Bolt
22	108-2575	1	Washer
23	100-2804	2	Bolt-Flanged
24	108-2576	1	Bolt-Flange

Ref	Part No.	Qty.	Description
25	108-2577	1	Screw-Pan
26	108-2578	1	Pin-Snap

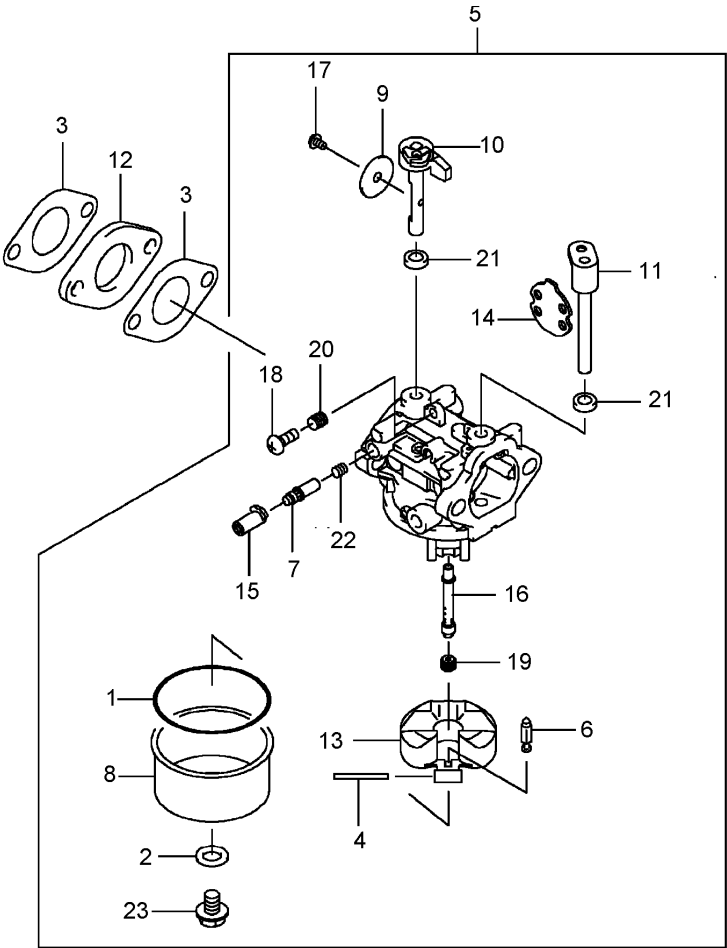 


Carburetor Assembly

Ref	Part No.	Qty.	Description				
1	108-2579	1	Gasket				
2	108-2580	1	Gasket				
3	108-2581	2	Gasket				
4	108-2582	1	Shaft				
5	108-2583	1	Carburetor ASM				
6	108-2584	1	Needle-Jet				
7	108-2585	1	Screw-Pilot,air				
8	108-2586	1	Chamber-Float				
9	108-2587	1	Valve-Throttle				
10	108-2588	1	Shaft-Carburetor				
11	108-2589	1	Shaft-Carburetor				
12	108-2590	1	Insulator				
13	108-2591	1	Float ASM				
14	108-2592	1	Choke Valve ASM				
15	108-2593	1	Limiter				
16	108-2594	1	Nozzle-Main				
17	108-2595	1	Screw				
18	108-2596	1	Screw				
19	108-2597	1	Jet-Main (#74)				
20	108-2598	1	Spring				
21	108-2599	2	Seal				
22	108-2600	1	Spring				
23	108-2601	1	Screw				

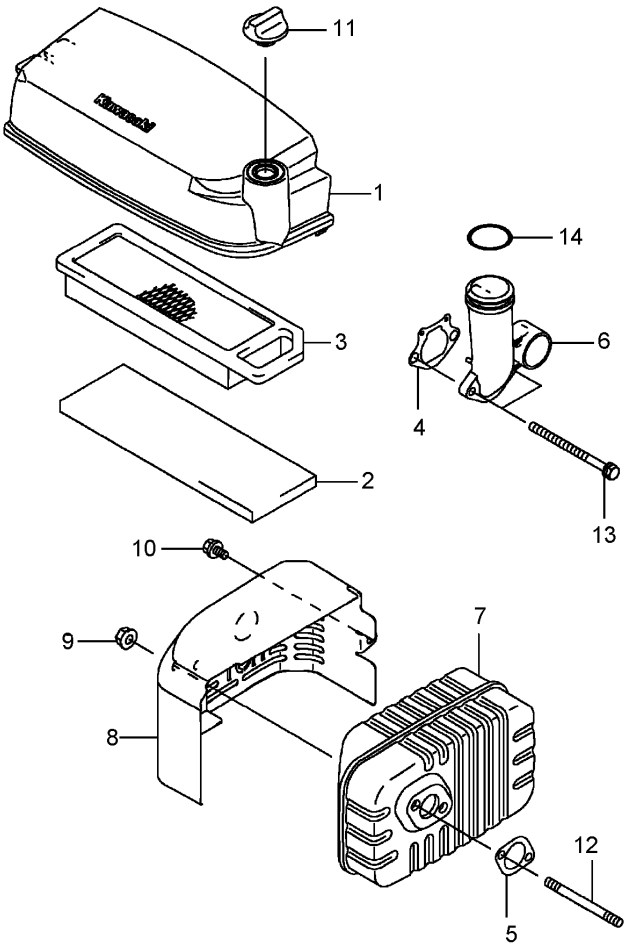 


Air Filter and Muffler Assembly

Ref	Part No.	Qty.	Description				
1	108-2602	1	Case-Filter, Air				
2	108-2603	1	Element-Filter, Air				
3	108-2604	1	Air Filter Element ASM				
4	108-2605	1	Gasket-Pipe, Intake				
5	108-2606	1	Gasket-Muffler				
6	108-2607	1	Pipe-Intake				
7	108-2608	1	Muffler				
8	108-2609	1	Cover-Muffler				
9	108-2610	2	Nut				
10	108-2611	1	Bolt				
11	108-2612	1	Nut				
12	100-2761	2	Bolt-Stud				
13	100-2762	2	Bolt				
14	108-2613	1	O-Ring				

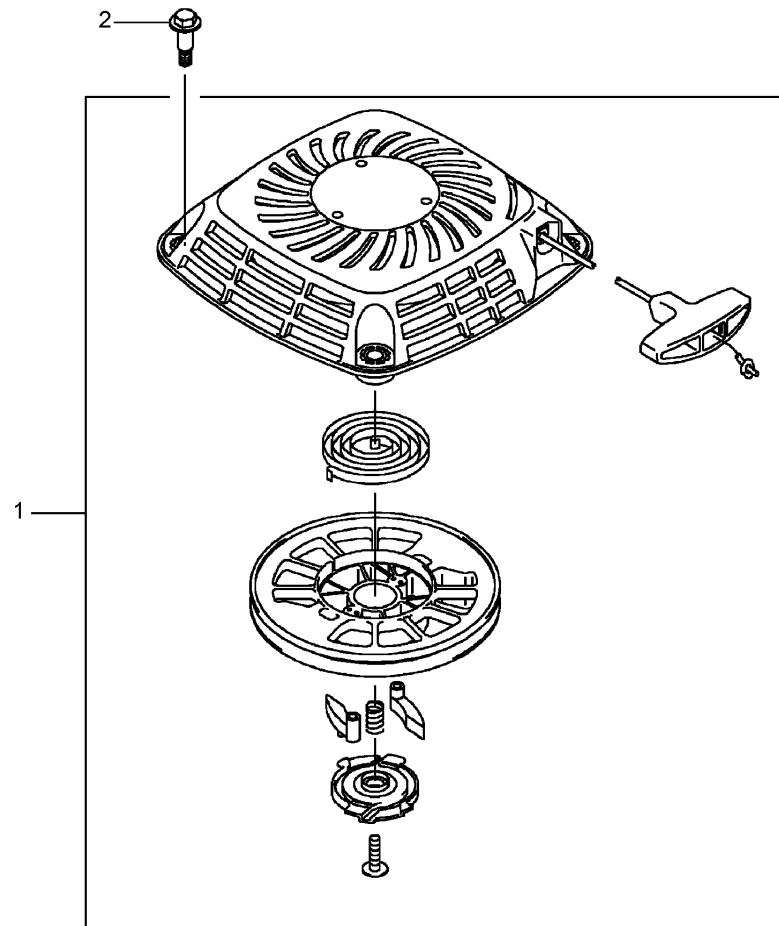 

Starter Assembly

Ref	Part No.	Qty.	Description
1	108-2614	1	Starter-Recoil
2	108-2615	4	Bolt

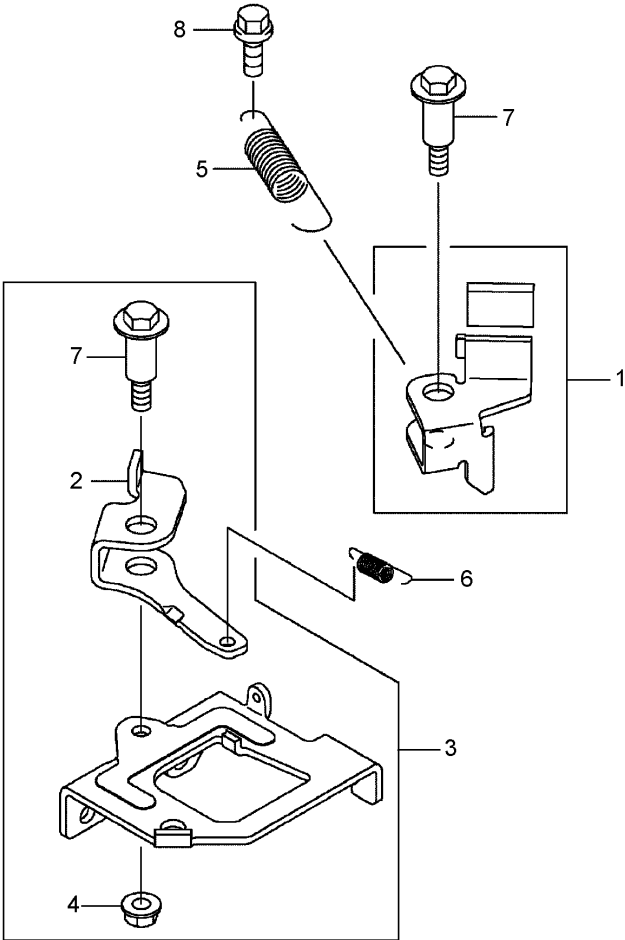 

Brake and Lever Assembly

Ref	Part No.	Qty.	Description				
1	108-2616	1	Lever				
2	108-2617	1	Arm				
3	108-2618	1	Brake Panel ASM				
4	108-2619	1	Nut				
5	108-2620	1	Spring				
6	108-2621	1	Spring				
7	108-2622	2	Bolt				
8	108-2623	1	Bolt-Flange				

NOTES

NOTES

NOTES

