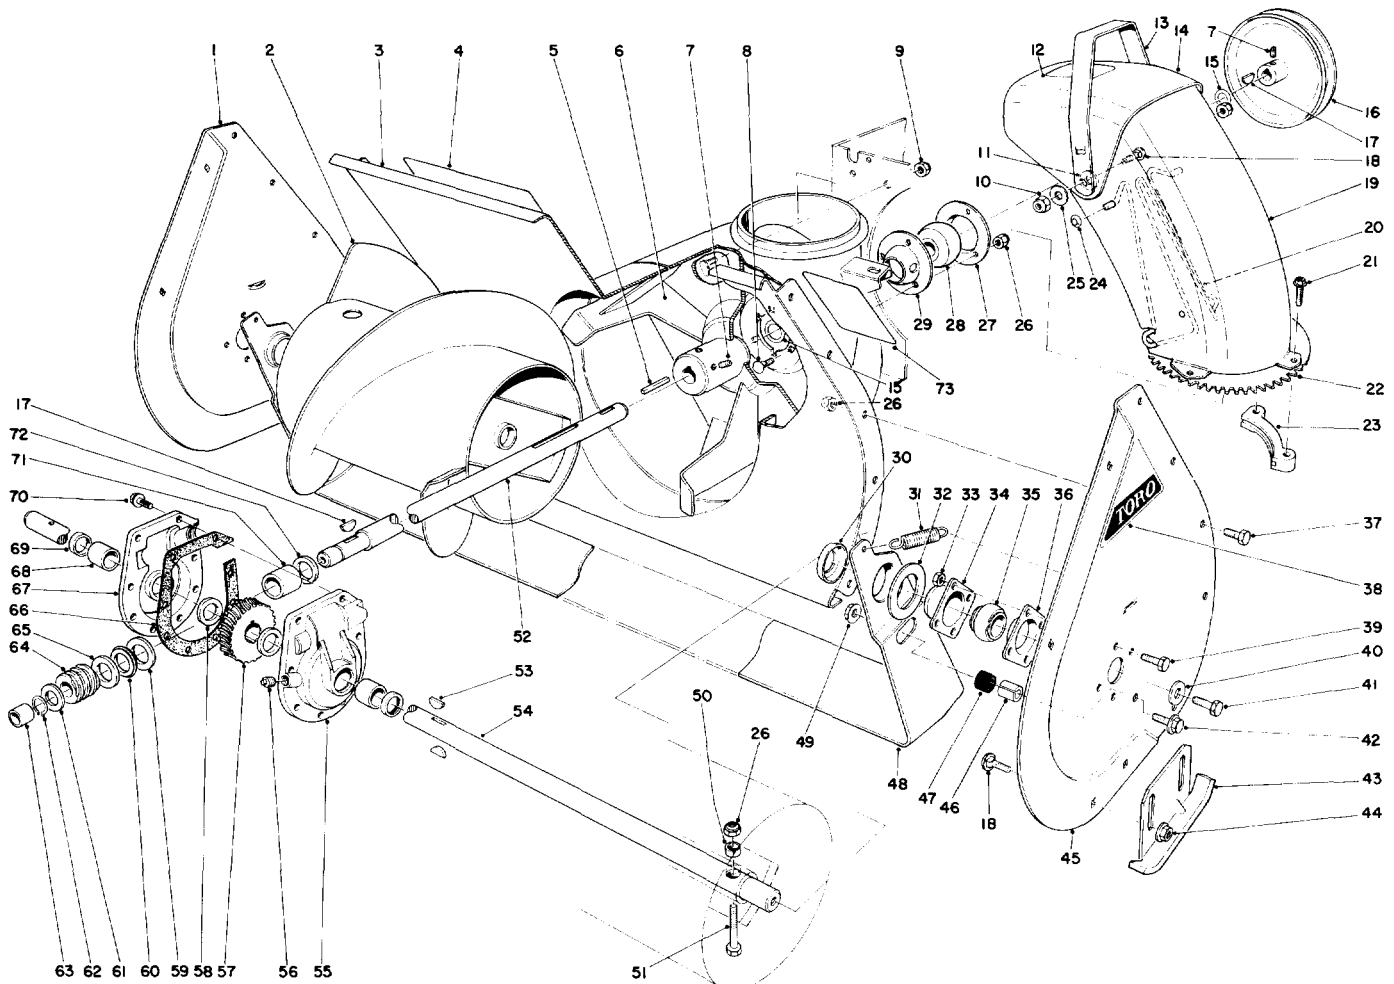


TORO®


MODEL NO. 38080 — 7000001 & UP

**PARTS
CATALOG****824 SNOWTHROWER****AUGER ASSEMBLY**

Ref. No.	Part No.	Description	No. Used
1	43-7440	Sideplate Auger Right	1
2	26-6140	Auger Right	1
*	26-6150	Auger Left	1
3	40-8120	Auger Housing	1
4	54-9910	Decal - Auger Warning	1
5	6-8590	Key - Impeller	1
6	20-1260	Impeller	1
7	3242-4	Set Screw	4
8	3230-1	Carriage Bolt	3
9	3296-39	Locknut	4
10	32152-2	Nut - Lock	2
11	20-4320	Washer Rubber	2
12	53-7660	Decal - Discharge	1
13	20-1410	Handle Deflector	1

Ref. No.	Part No.	Description	No. Used
14	11-9379	Deflector Chute (Incl. Ref. #12)	1
15	3-0737	Thrust Washer	2
16	20-1310	Pulley Impeller	1
17	3257-23	Woodruff Key	2
18	3231-27	Carriage Bolt	6
19	56-2450	Chute	1
20	54-9770	Wire Chute	1
21	27-0210	Special Screw	4
22	43-7470	Swivel Gear Chute	1
23	40-8150	Retainer Chute	2
24	3290-326	Pushnuts	2
25	3290-340	Washer Belleville	2
26	3296-29	Locknut	15


*Not Illustrated

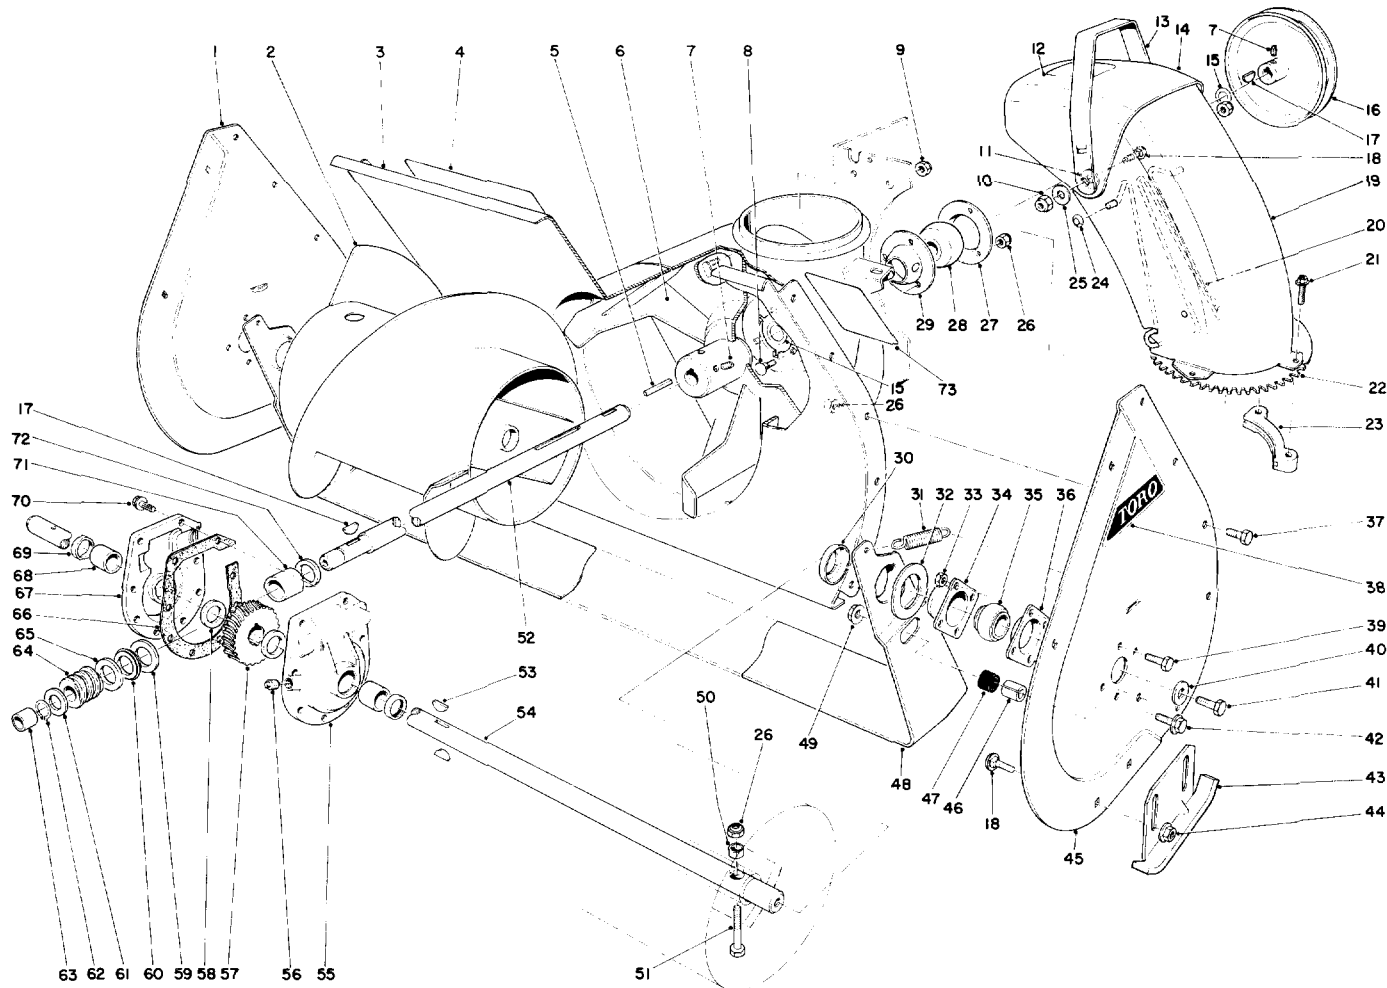

AUGER ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
27	26-6120	Bearing Flange Rear	1
28	26-6100	Bearing Impeller	1
29	26-6110	Bearing Flange Front	1
30	26-6400	Positioner - Scraper Blade	2
31	5-7290	Spring - Scraper Blade	2
32	20-0300	Spacer - Scraper Blade	2
33	32152-4	Locknut	8
34	20-0990	Bearing Flange Auger	2
35	20-0980	Bearing Auger	2
36	20-1000	Bearing Flange Auger	2
37	322-2	Capscrew	10
38	17-6500	Decal - Auger Side Plate	2
39	321-3	Capscrew	8
40	3-0750	Flat Washer	2
41	323-6	Capscrew	2
42	3234-11	Hex Flange Bolt	2
43	20-2840	Skid - Auger	2
44	3290-357	Flange Nut	4
45	43-7430	Sideplate Auger Left	1
46	25-5140	Standoff - Scraper Blade	2
47	25-5150	Bumper - Scraper Blade	2

Ref. No.	Part No.	Description	No. Used
48	20-1320	Scraper Blade	1
49	32128-21	Locknut	2
50	25-5090	Spacer Auger Hub	2
51	17-7030	Bolt Auger	2
52	36-2580	Shaft Impeller	1
53	3257-33	Key Woodruff	2
54	20-1170	Shaft Auger	1
55	37-8860	Gear Case	
		(Incl. Ref. #68 & 69)	1
56	281-1	Pipe Plug	1
57	5-7180	Gear Worm	1
58	252-71	Thrust Bearing	2
59	252-78	Thrust Washer	1
60	252-76	Thrust Bearing	1
61	3-8664	Thrust Washer	1
62	32120-72	Retaining Ring	1
63	256-32	Bushing	1
64	5-7170	Worm	1
65	252-77	Thrust Washer	1
66	51-0460	Gasket	1
67	37-8850	Gear Case (Incl. Ref. #68 & 69)	1

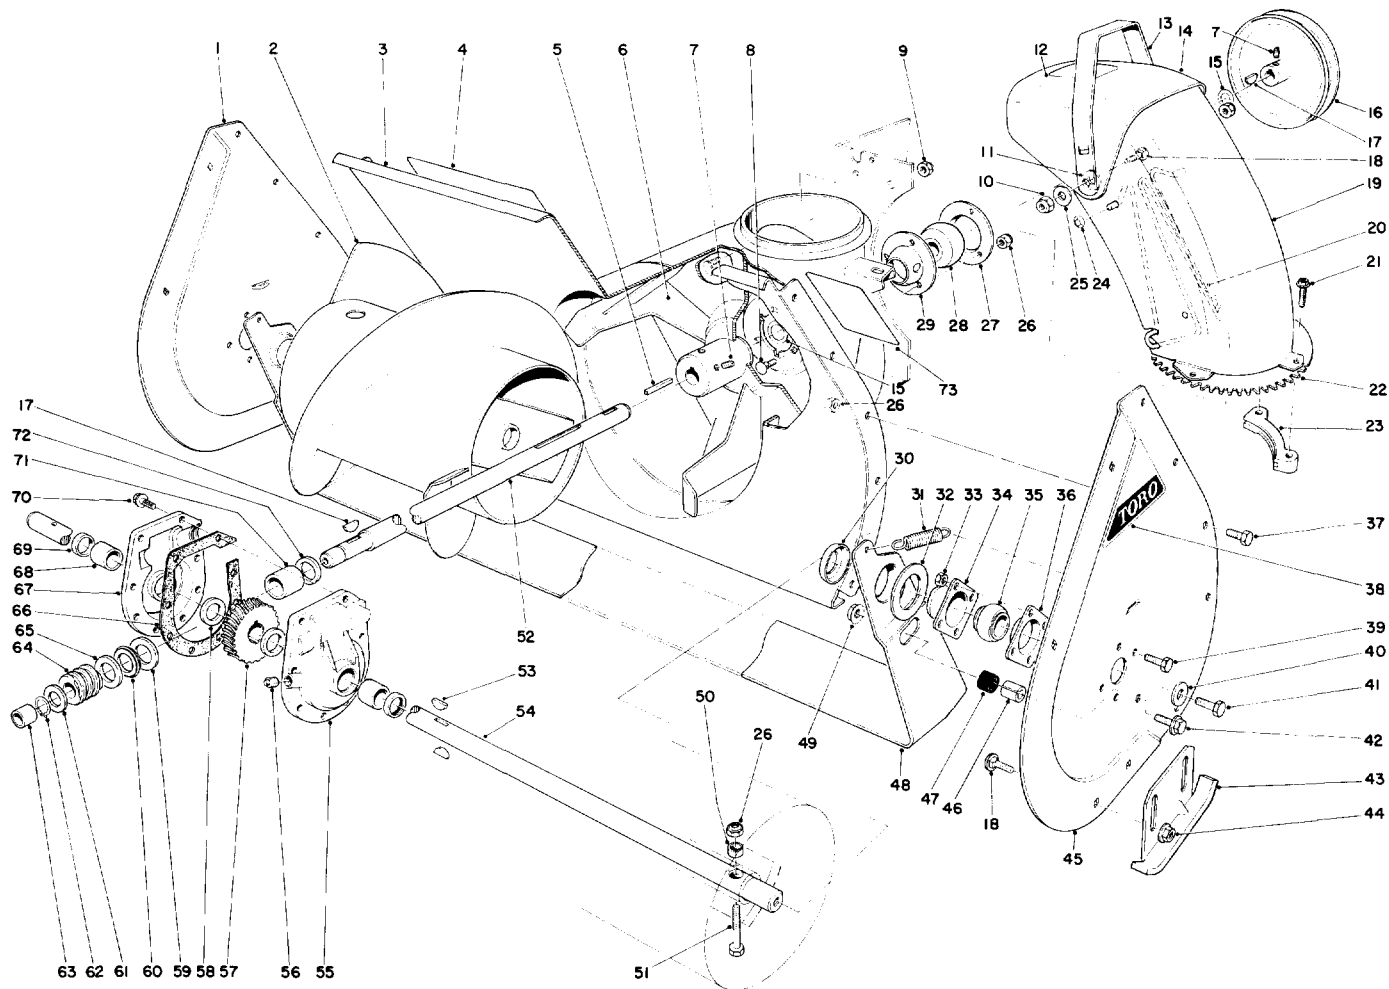


AUGER ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
68	256-237	Bushing	2
69	7-0045	Oil Seal	2
70	32144-41	Thread Form Screw	8
71	20-3210	Bushing	1

Ref. No.	Part No.	Description	No. Used
72	237-87	Seal	1
73	53-7670	Decal - Auger Warning	1
*	19-7000	Gear Case Assembly Complete	1
*	20-0690	Drift Breaker Kit (Optional)	1


*Not Illustrated

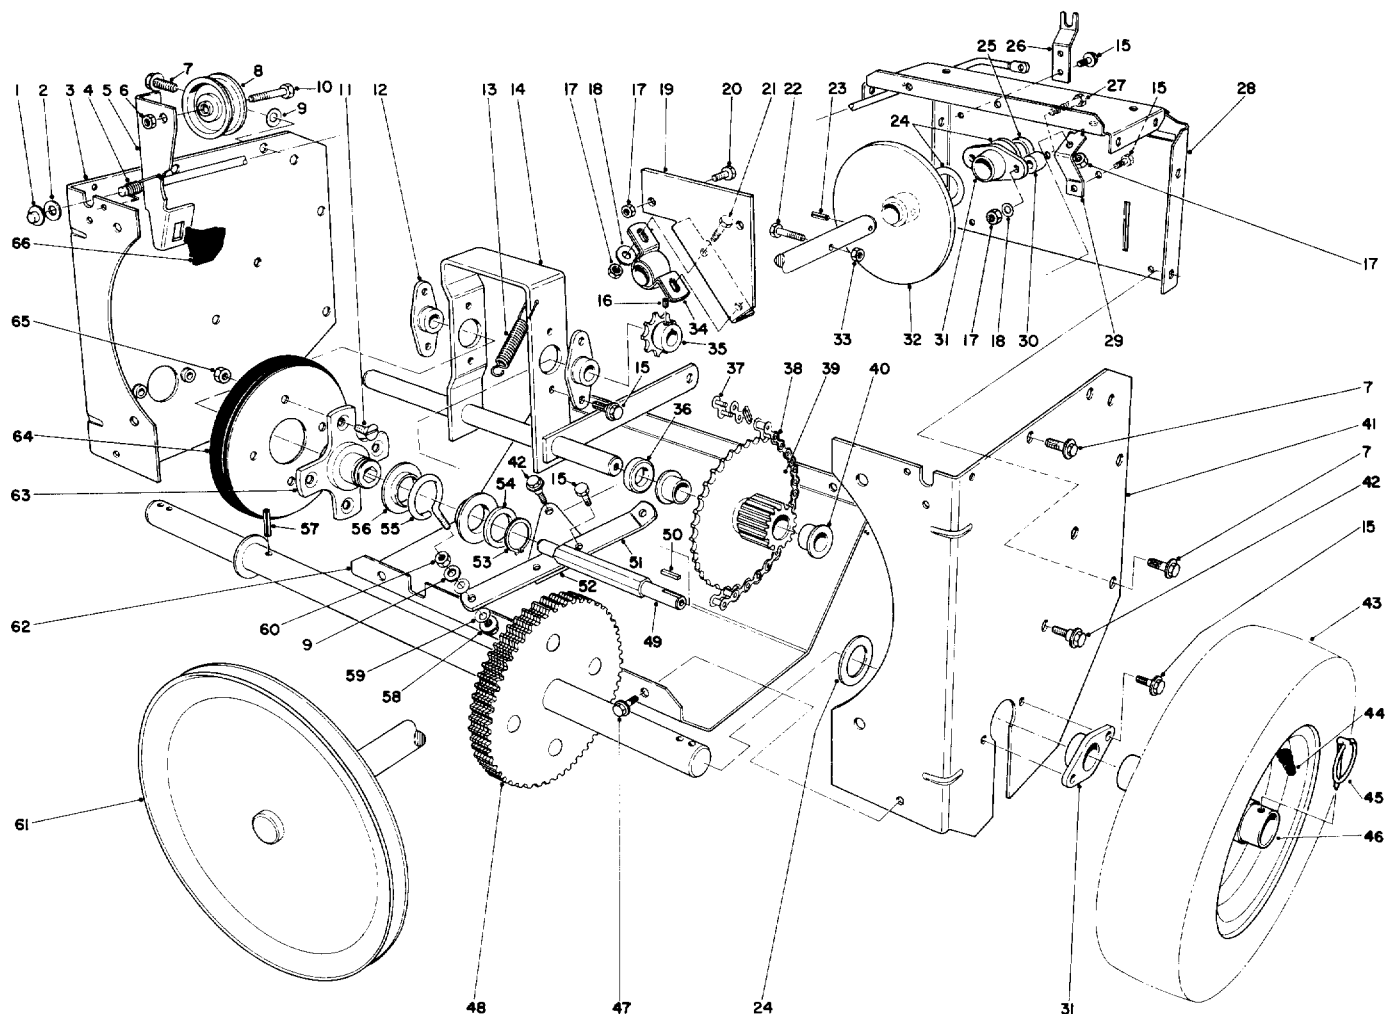

TRACTION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3290-383	Pushnut	1
2	3256-25	Flat Washer	1
3	20-1420	Side Plate Traction	1
4	20-1160	Torsion Spring Clutch	1
5	8-9019	Clutch Rod (Incl. Ref. #66)	1
6	3296-44	Locknut	1
7	32144-69	Hex Hd. Thread Forming Screw	8
8	3-4244	Idler Pulley	1
9	3256-45	Flat Washer	2
10	323-8	Capscrew	1
11	32108-94	Screw Flat Head	4
12	20-1620	Bearing Friction Wheel	2
13	11-4640	Spring - Clutch Control	1
14	20-1580	Pivot Shaft	1
15	32144-11	Screw Thread Forming	13
16	3245-32	Set Screw	2
17	3296-29	Locknut	7
18	3256-23	Washer	4
19	36-9990	Bracket - Shaft Support	1
20	322-2	Capscrew	2
21	322-3	Capscrew	2

Ref. No.	Part No.	Description	No. Used
22	321-33	Capscrew	1
23	32121-6	Roll Pin	1
24	3-0737	Thrust Washer	5
25	26-6370	Spacer Drive Shaft	1
26	20-1080	Support Clutch Rod	1
27	322-9	Capscrew	2
28	26-6360	Frame Center	1
29	20-1760	Pivot Bracket	1
30	26-6380	Standoff Drive Shaft	2
31	20-1730	Bearing Axle	3
32	20-1550	Friction Plate	1
33	32152-4	Locknut	1
34	36-9980	Bearing - Pillow Block	1
35	5-9820	Sprocket	1
36	3-7384	Spacer	1
37	2710-6	Connecting Link	1
38	20-1810	Chain	1
39	20-1640	Gear & Bushing (Incl. Ref. #40)	1
40	3-1506	Bushing - Flanged	2
41	20-1430	Side Plate Traction	1
42	11-8140	Shoulder Screw	3

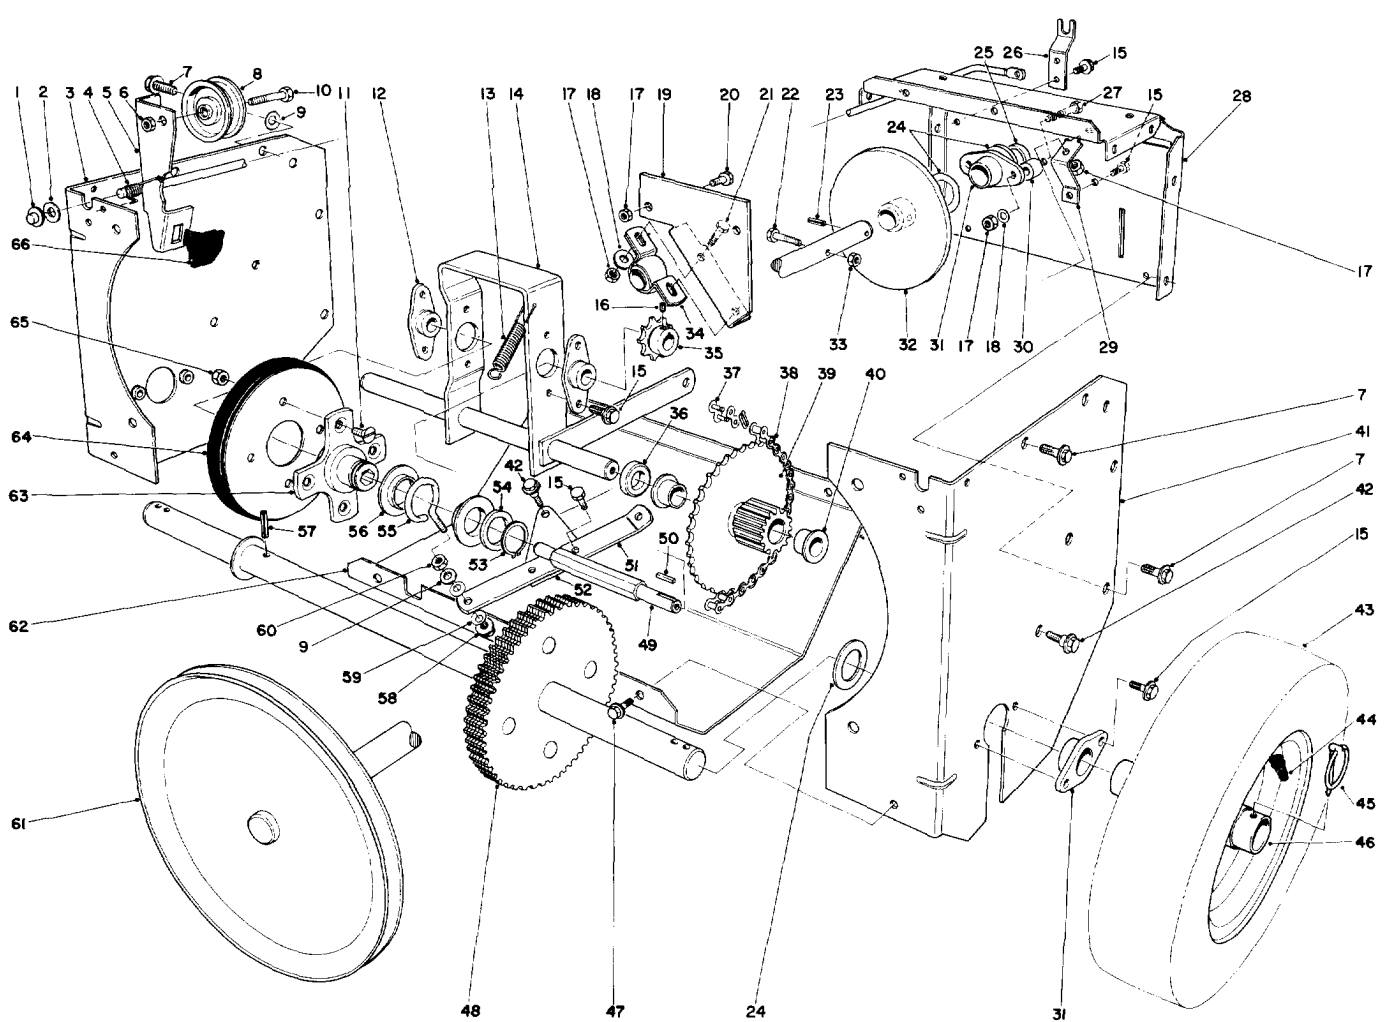


TRACTION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
43	231-120	Tire	2
44	232-46	Tube	2
45	3290-243	Klik Pin	2
46	241-124	Wheel	2
47	32144-10	Screw Thread Forming	4
48	20-1680	Axle & Gear	1
49	20-1630	Shaft Friction Wheel	1
50	3-6168	Square Key	1
51	20-1780	Linkage Shift	1
52	20-1770	Pivot Plate	1
53	32151-36	Snap Ring	1
54	252-71	Thrust Bearing	1
55	11-8050	Slider Ring Collar	1

Ref. No.	Part No.	Description	No. Used
56	11-8080	Ring — Slider	2
57	32121-9	Roll Pin	1
58	32128-12	Flange Nut	1
59	3290-212	Spring Washer	2
60	3296-6	Nut	1
61	22-7930	Drive Shaft	1
62	20-1840	Lower Shield	1
63	20-3310	Hub — Traction Disc	1
64	40-8170	Friction Wheel	1
65	3296-47	Nut — Lock	4
66	40-8140	Brake Pad — Molded	1
*	12-0189	Loose Parts Kit	1
*	56-2700	Tire Chain Kit (Optional)	1


*Not Illustrated

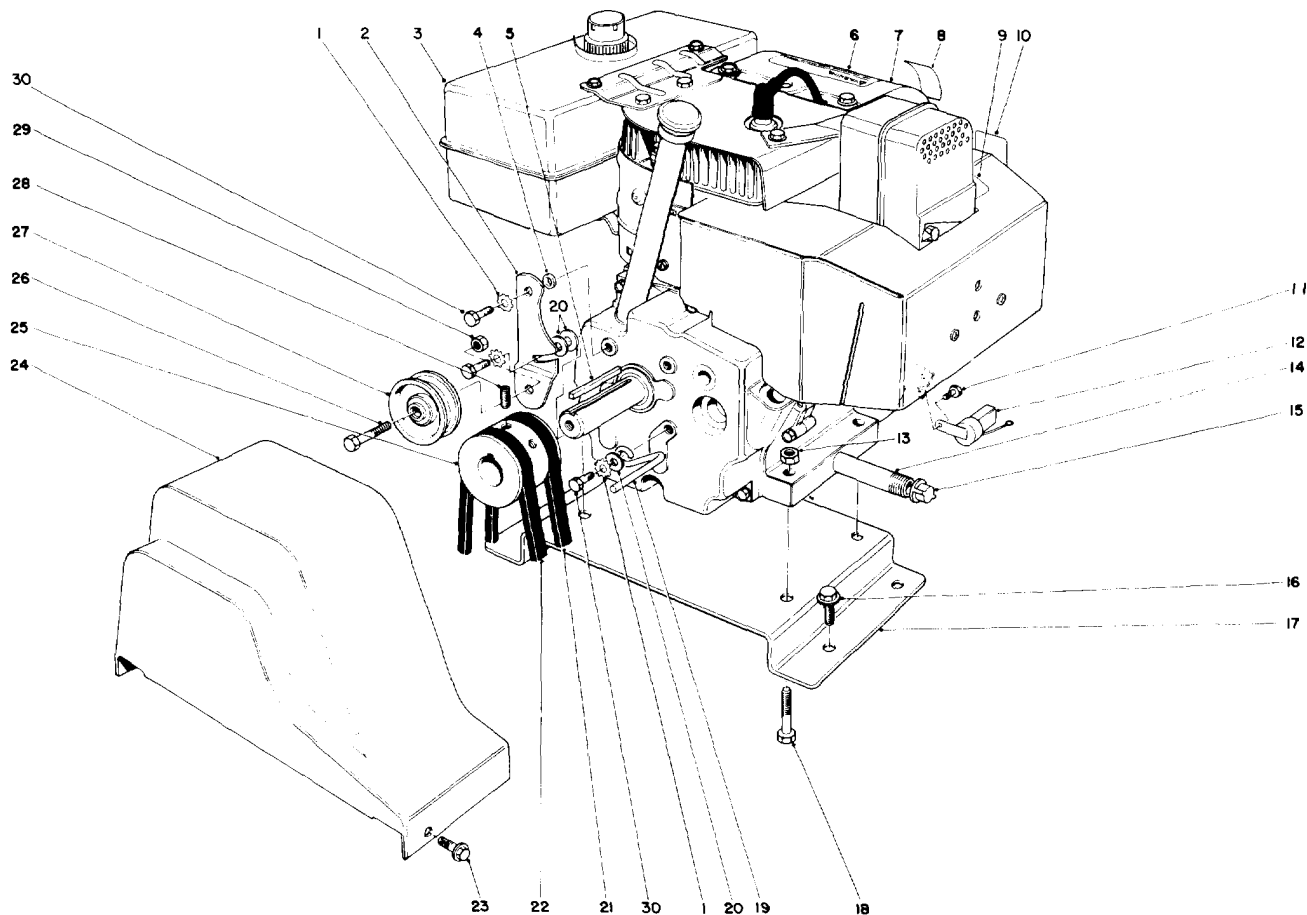

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3255-8	Lockwasher	3
2	20-1800	Idler Arm	1
3	52-2670	Fuel Tank w/Cap	1
4	40-8490	Spacer	1
5	5-0930	Key	1
6	54-9750	Decal — Hazards Caution	1
7	49-2890	Engine	1
8	39-3860	Decal — Primer	1
9	53-7680	Decal — Hot Surface Warning	1
10	39-3850	Decal — Choke	1
11	32144-4	Screw Thread Forming	1
12	41-8601	Module Interlock	1
13	3296-29	Locknut	4
14	289-34	Pipe Nipple	1
15	288-2	Pipe Cap	1


Ref. No.	Part No.	Description	No. Used
16	32144-69	Hex Form Screw	4
17	37-0320	Plate Engine Mounting	1
18	322-7	Capscrew	4
19	17-5530	Belt Retainer	1
20	3256-23	Washer	3
21	20-1820	V-Belt Traction	1
22	26-9670	V-Belt Auger	1
23	32144-10	Screw Thread Forming	2
24	20-1830	Belt Guard	1
25	21-4100	Pulley	1
26	323-8	Capscrew	1
27	3-4244	Idler Pulley	1
28	3246-18	Set Screw	2
29	3296-44	Locknut	1
30	3210-3	Capscrew	3

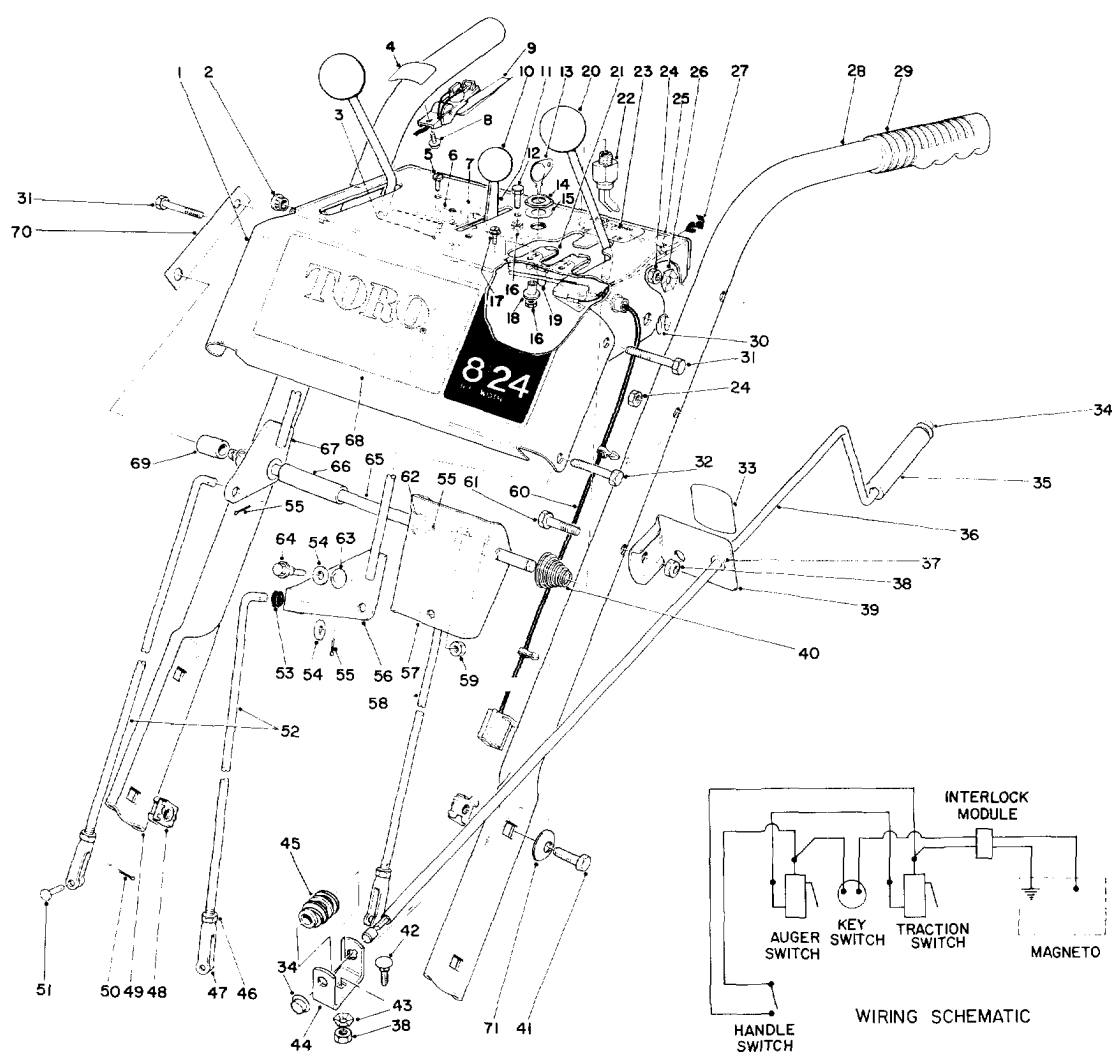

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	40-8470	Escutcheon Plate	1
2	237-130	Snap Bushing	1
3	3290-354	Clip	2
4	29-6360	Decal — Safety Interlock	1
5	3290-313	Pan Head Machine Screw	4
6	40-8200	Switch Micro	2
7	22-7950	Switch Mounting Pad	1
8	12-3270	Screw — Special	1
9	40-9690	Interlock Handle Switch	1
10	233-36	Knob	1
11	40-8480	Throttle Control	1
12	32140-99	Screw — Hex Hd.	2
13	33-2010	Key	2
14	218-461	Nut — Hex	1
15	3254-5	Lockwasher	1
16	3296-2	Locknut	4
17	3251-5	Screw — Machine	2
18	22-9740	Spacer — Interlock	2
19	22-9730	Spring — Interlock	1
20	233-21	Knob	2
21	22-9750	Slide — Interlock	1
22	40-8240	On-Off Switch (Incl. Ref. #14 & 15)	1
23	29-6340	Decal — Instructions	1


Ref. No.	Part No.	Description	No. Used
24	32152-4	Locknut	4
25	43-7450	Wire Clamp	5
26	3290-257	Washer — Pyramidal	2
27	43-7460	Stud Mounting	5
28	25-6040	Handle Left	1
29	6-0450	Handle Grip	2
30	32151-43	Klip Ring	2
31	321-11	Capscrew	3
32	321-9	Capscrew	1
33	29-6370	Decal — Chute Direction	1
34	3290-320	Push-On Speed Nut	2
35	40-8230	Chute Control Grip	1
36	40-8380	Rod — Chute Control	1
37	256-249	Nyliner	1
38	3296-29	Locknut	2
39	6-3069	Chute Control Rod Mounting (Incl. Ref. #33 & 37)	1
40	17-5630	Spring Conical	1
41	323-4	Hex Screw	4
42	3230-2	Carriage Bolt	1
43	3290-238	Washer Pyramidal	1
44	40-8280	Worm Bracket	1
45	40-8250	Worm Chute	1

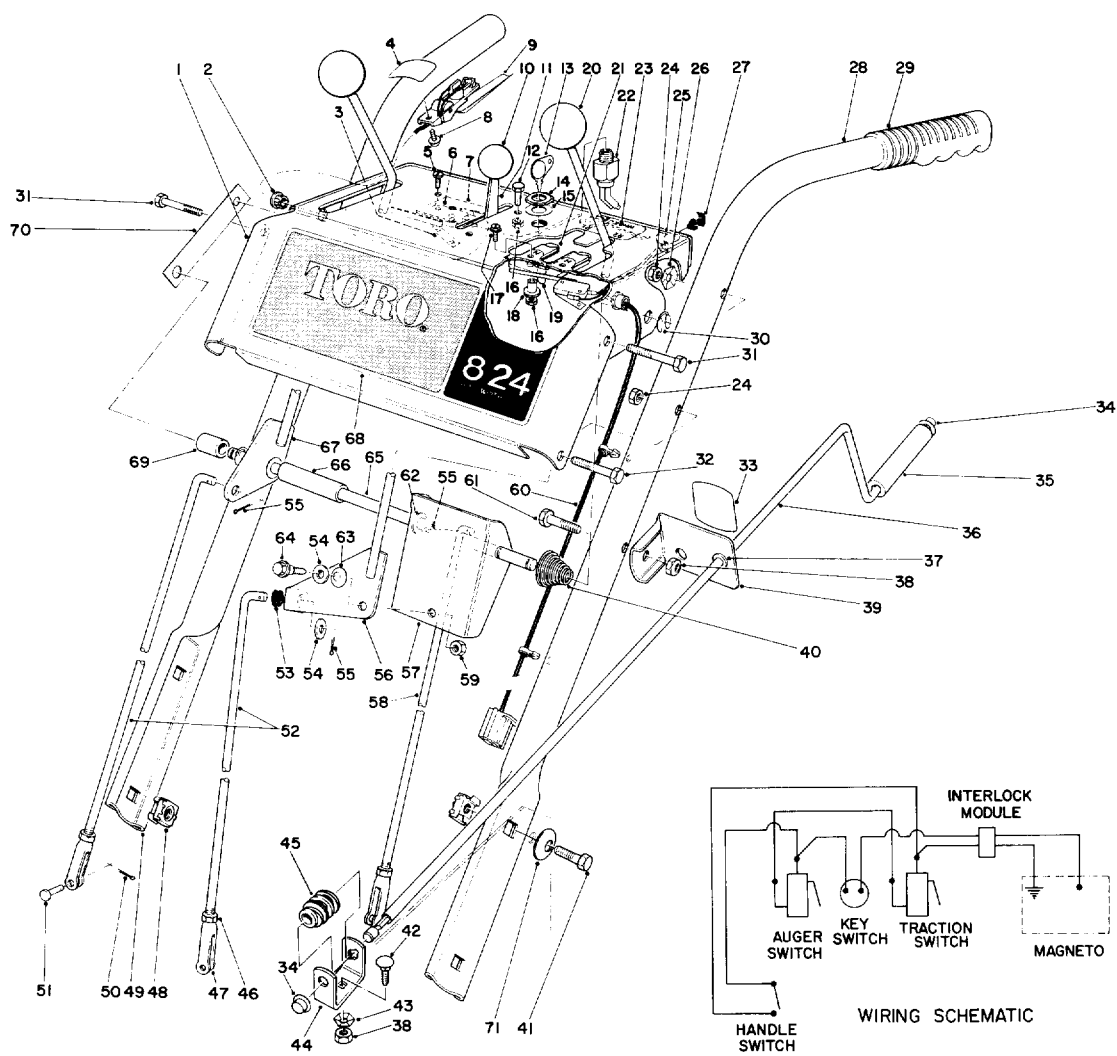

HANDLE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
46	3220-3	Nut — Jam	3
47	40-8180	Clevis	3
48	3290-398	Retainer Nut	4
49	40-8430	Handle Right	1
50	3272-5	Cotter Pin	3
51	283-1	Clevis Pin	3
52	20-1980	Control Rod — Speed Select	2
53	237-89	Rubber Grommet	1
54	3256-24	Washer	2
55	3272-6	Cotter Pin	3
56	20-2020	Shift Lever	1
57	20-2010	Bracket Shift	1
58	20-1970	Control Rod — Traction	1

Ref. No.	Part No.	Description	No. Used
59	32152-1	Locknut	1
60	40-8630	Wire Harness Interlock	1
61	322-9	Capscrew	1
62	3256-25	Washer	2
63	3290-213	Spring Washer	1
64	11-8140	Shoulder Screw	1
65	20-1910	Pivot Rod	1
66	28-5660	Spacer Shift Lever	1
67	20-1920	Lever	1
68	37-0450	Decal — Escutcheon	1
69	28-5670	Spacer — Auger Lever	1
70	25-9760	Strap Escutcheon Support	1
71	3290-461	Washer — Belleville	4

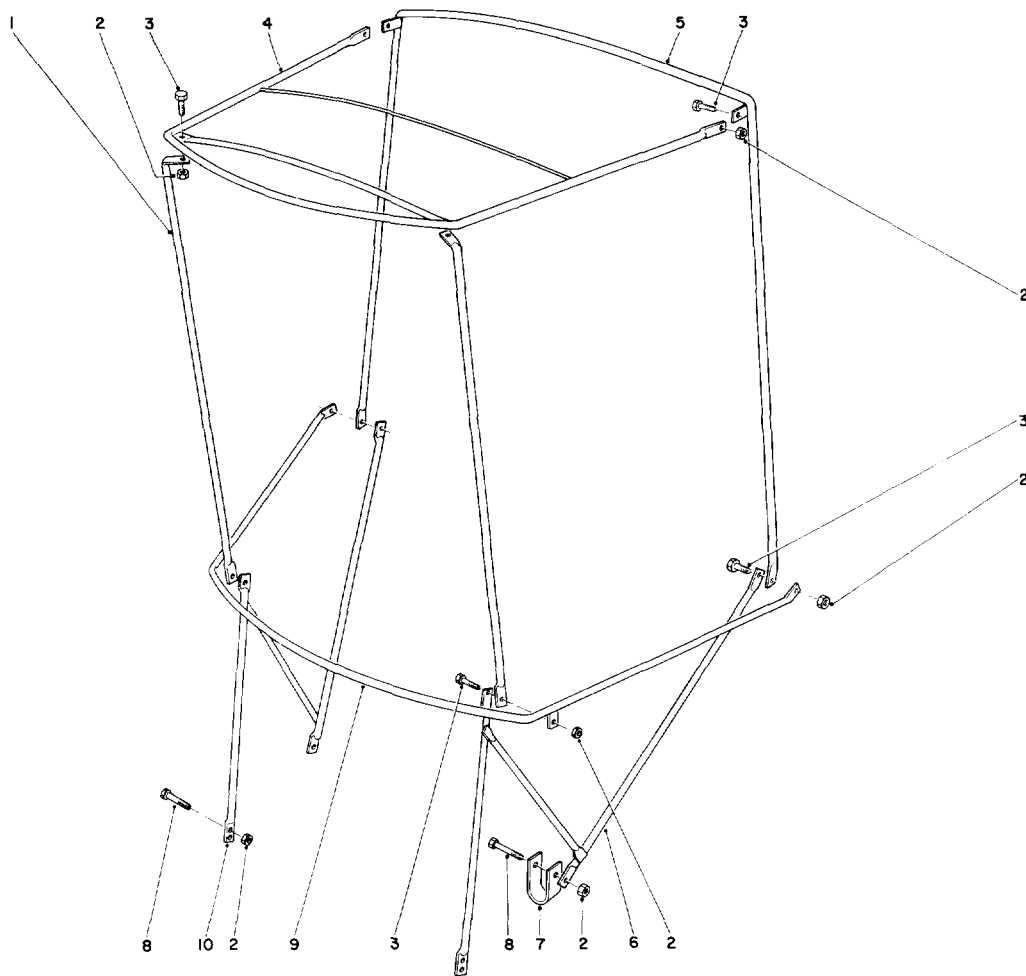


SNOW CAB ASSEMBLY MODEL 42-3380

Ref. No.	Part No.	Description	No. Used
1	12-8040	Front Corner Post	2
2	32153-4	Locknut	12
3	321-4	Capscrew	8
4	12-8010	Top Frame	1
5	12-8030	Rear Vertical Bow	1
6	42-4060	Attaching Bracket L.H.	1

Ref. No.	Part No.	Description	No. Used
7	12-8050	"U" Clamp	2
8	321-11	Capscrew	4
9	12-8020	Horizontal Curved Bow	1
10	42-4050	Attaching Bracket R.H.	1
*		Vinyl Cover	1

*Not Illustrated

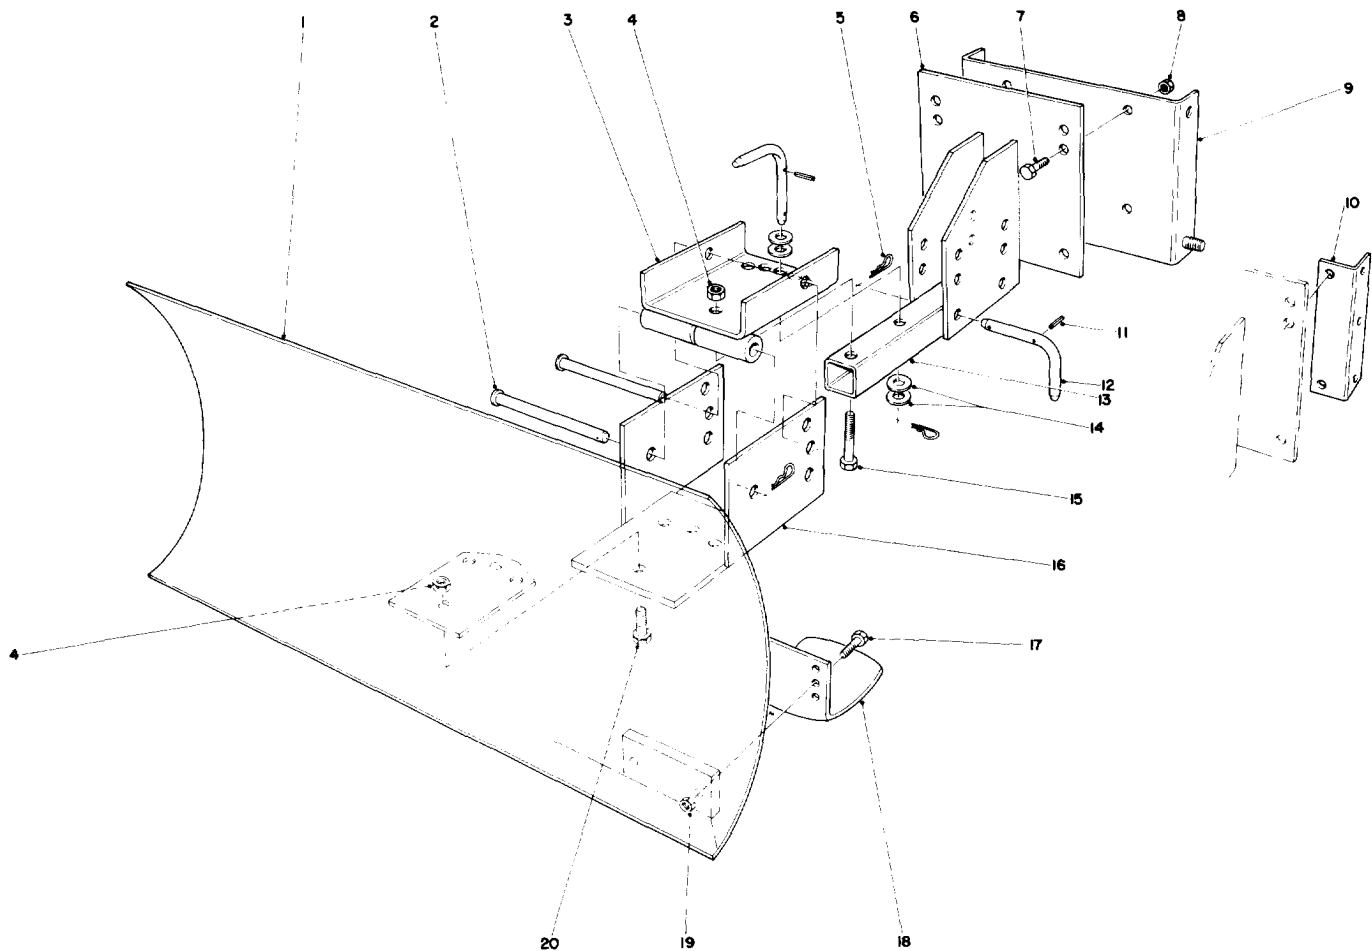


GRADER BLADE ASSEMBLY MODEL 59099

Ref. No.	Part No.	Description	No. Used
1	7-4374	Blade	1
2	283-38	Pin	2
3	20-5090	Swivel Bracket	1
4	32152-3	Locknut	5
5	3290-322	Hair Pin Cotter	5
6	20-5170	Mounting Plate	1
7	323-6	Capscrew	4
8	32152-2	Locknut	4
9	22-4920	Mounting Plate Bracket (Used with 826 and 1132 Only)	1
10	39-7850	Mounting Rail (Used With 3521, 421 & 521 Units Only)	2
11	32121-45	Roll Pin	3
12	20-5210	Pivot Pin (Incl. Ref. #11)	3
13	20-5140	Blade Tongue	1

Ref. No.	Part No.	Description	No. Used
14	3256-5	Flat Washer	4
15	325-11	Capscrew	1
16	20-5130	Blade Adjustment Plate	1
17	322-6	Capscrew	4
18	7-1023	Skid	2
19	32152-1	Locknut	4
20	325-5	Capscrew	4
*		Air Cleaner Kit (Tecumseh)	1
*†	650152	Screw	2
*†	31752	Decal	1
*†	31692	Body	1
*†	30727	Element	1
*†	28820	Screw w/Lockwasher	2
*†	31691	Bracket	1
*†	27277	Gasket	1

* Not Illustrated

10 † Obtain From Your Local Tecumseh Dealer

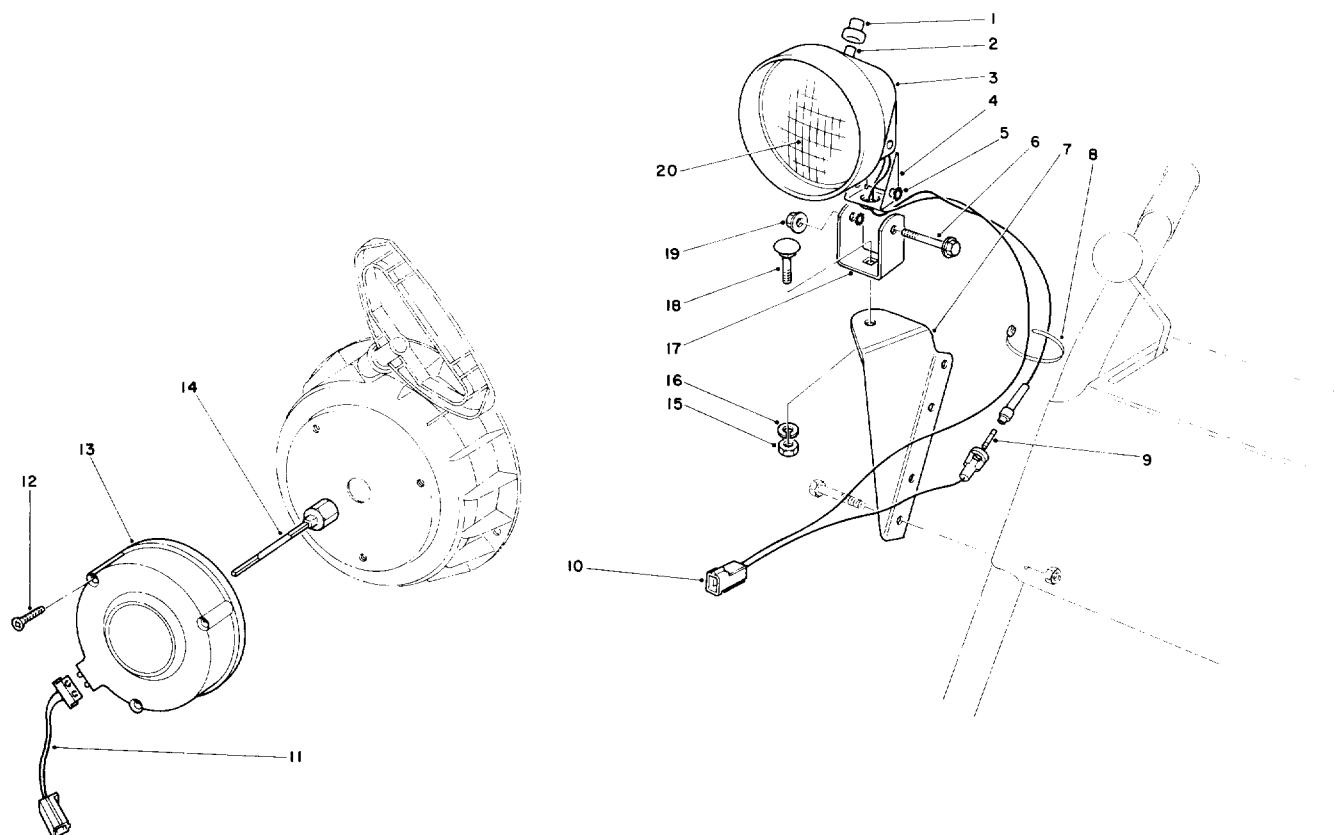


LIGHT KIT NO. 54-9821 (Optional)

Ref. No.	Part No.	Description	No. Used
1	218-473	Boot — Switch	1
2	218-553	Switch Assembly	1
3	218-552	Bucket — Headlamp	1
4	218-554	Bracket	1
5	3255-8	Washer — Lock	2
6	322-13	Screw — Hex. Flange Hd.	1
7	54-9830	Mount — Lamp	1
8	3290-378	Tie Wrap	2
9†		Fuse — 7½ Amp.	1
10	218-555	Wire Assembly	1
11	2210-272	Connector — Light	1
12	2210-273	Screw — Self Tapping	3
13	2210-274	Alternator	1

Ref. No.	Part No.	Description	No. Used
14	2210-268	Shaft — Alternator 3"	1
*	2210-269	Shaft — Alternator 4" (Used with 824 Units Only)	1
15	3217-7	Nut — Hex	1
16	3253-21	Washer — Lock	1
17	218-556	Bracket — U	1
18	3231-2	Bolt — Carriage	1
19	32128-35	Nut — Flange Lock	1
20	218-16	Lens — Sealed Beam	1
*	54-9871	Headlamp Assembly Complete (Incl. Ref. #1-6, 9-10 & 15-20)	1


*Not Illustrated

†Obtain Locally

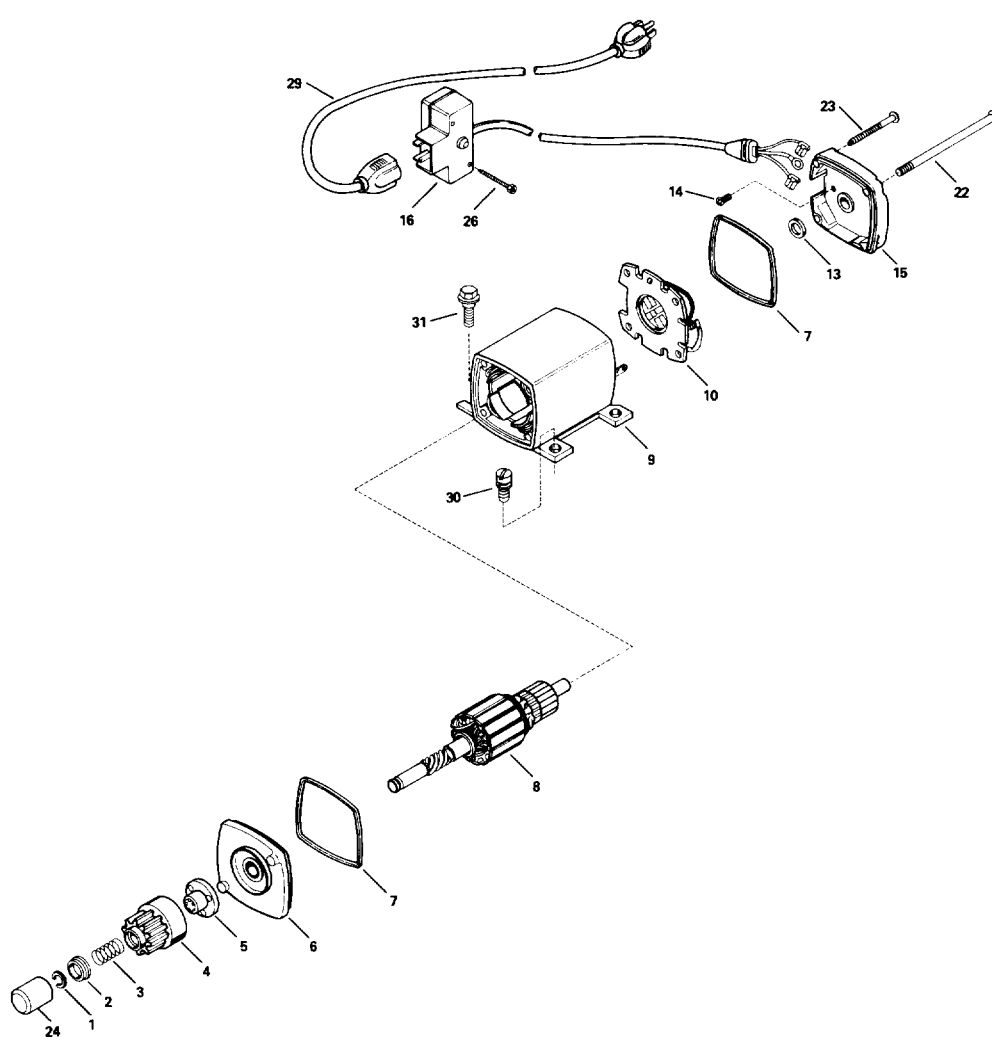

ELECTRIC STARTER MOTOR KIT NO. 33329C

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	33842	Ring, Retainer	1	15	35453	Cap Assy., Commutator end (Incl. Ref. #7)	1
2	33430	Retainer, Spring	1	16	35454	Box Assy., Switch	1
3	33431	Spring, Anti-drift	1	22	35455	Bolt, Case	2
4	33432	Gear	1	23	35456	Screw, Grounding	1
5	33433	Nut, Engaging	1	24	33451	Cover, Dust	1
6	35449	Cap Assy., Drive End (Incl. Ref. #7)	1	26	650819	Screw, Hex Hd. Self-Tap, 6-32 x 1-13/16	2
7	35450	"O" Ring	2	29	32450A	Cord, Extension (10'6")	1
8	33541A	Armature	1	30	30063	Screw, Fil. Hd. Sems, 1/4-20 x 9/16	2
9	35451	Housing Assy.	1	31	650820	Screw, Hex Hd. Shoulder, 1/4-20 x 1/2	2
10	35452	Card Assy., Brush	1				
13	590500	Washer, Thrust	1				
14	33441	Screw, Ground	1				

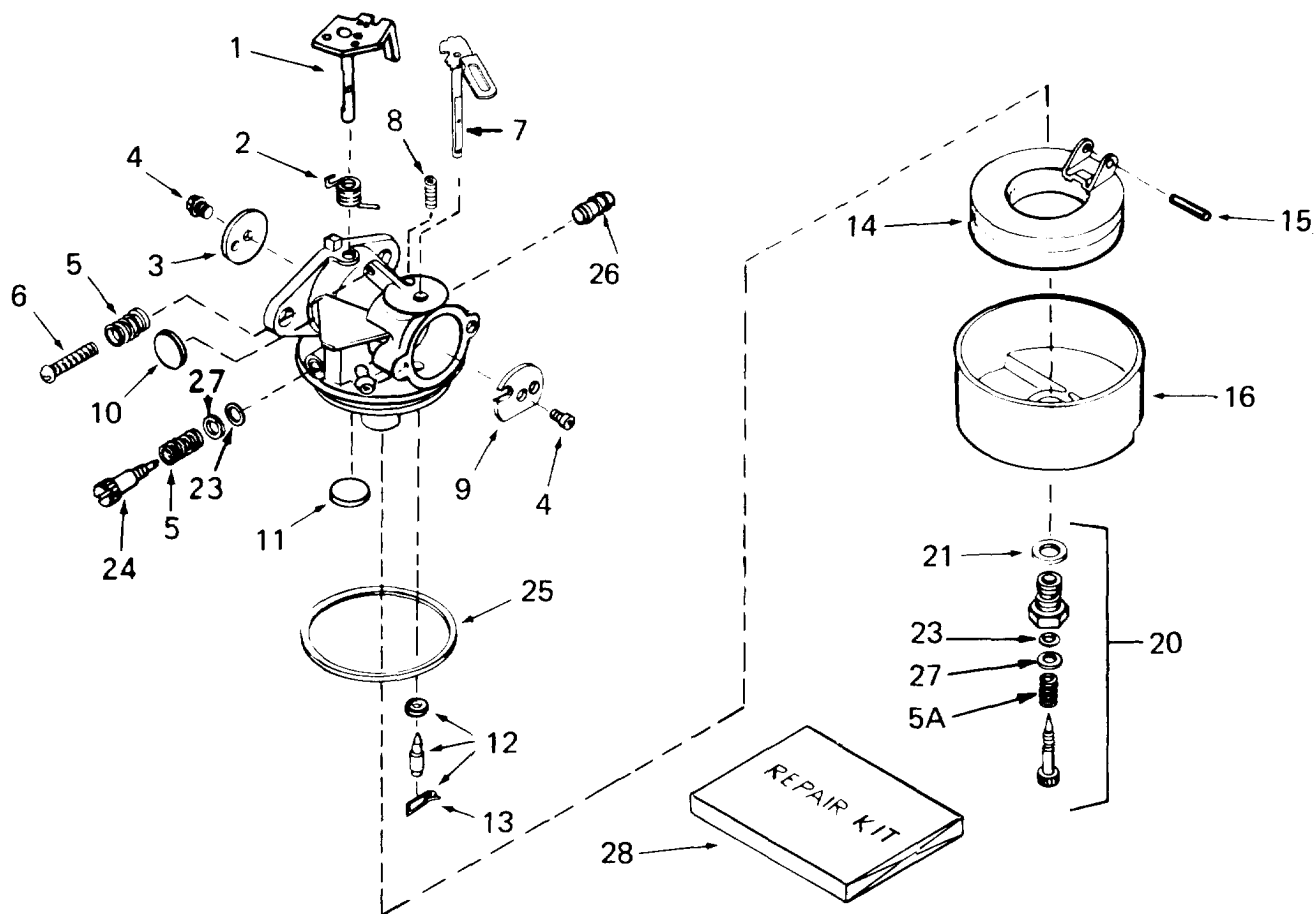


CARBURETOR NO. 632334

Ref. No.	Part No.	Description	No. Used
1	631776	Shaft & Lever Assy., Throttle	1
2	631970	Spring, Throttle Return	1
3	631778	Shutter, Throttle	1
4	650506	Screw, Throttle & Choke Shutter	1
5	630766	Spring, Regulating Screw	1
5A	630738	Spring, Main Adjustment Screw	1
6	650417	Screw, Idle Regulating	1
7	632112	Shaft & Lever Assy., Choke	1
8	630735	Spring, Choke Positioning	1
9	632174	Shutter, Choke	1
10	*630748	Plug, Welch	1
11	*631027	Plug, Welch	1
12	*631021	Inlet Needle, Seat & Clip Assy. (Incl. Ref. #13)	1

Ref. No.	Part No.	Description	No. Used
13	631022	Clip, Inlet Needle	1
14	632019	Float, Carburetor	1
15	*631024	Shaft, Float	1
16	631867	Bowl, Float	1
20	*632239	Adjustment Screw Assy., Main (Incl. Ref. #5A, 21, 23 & 27)	1
21	27110	Gasket, Bowl-to-Body	1
23	*630740	"O" Ring, Adjustment Screw	1
24	*630898	Screw, Idle Adjustment	1
25	*631028	Gasket, Bowl-to-Body	1
26	632164	Fitting, Fuel Inlet	1
27	630739	Washer, Flat	1
28	632240	Repair Kit (Incl. items marked *)	1

*Items Included In Repair Kit Ref. No. 28

ENGINE TECUMSEH MODEL NO. HM80-155291L

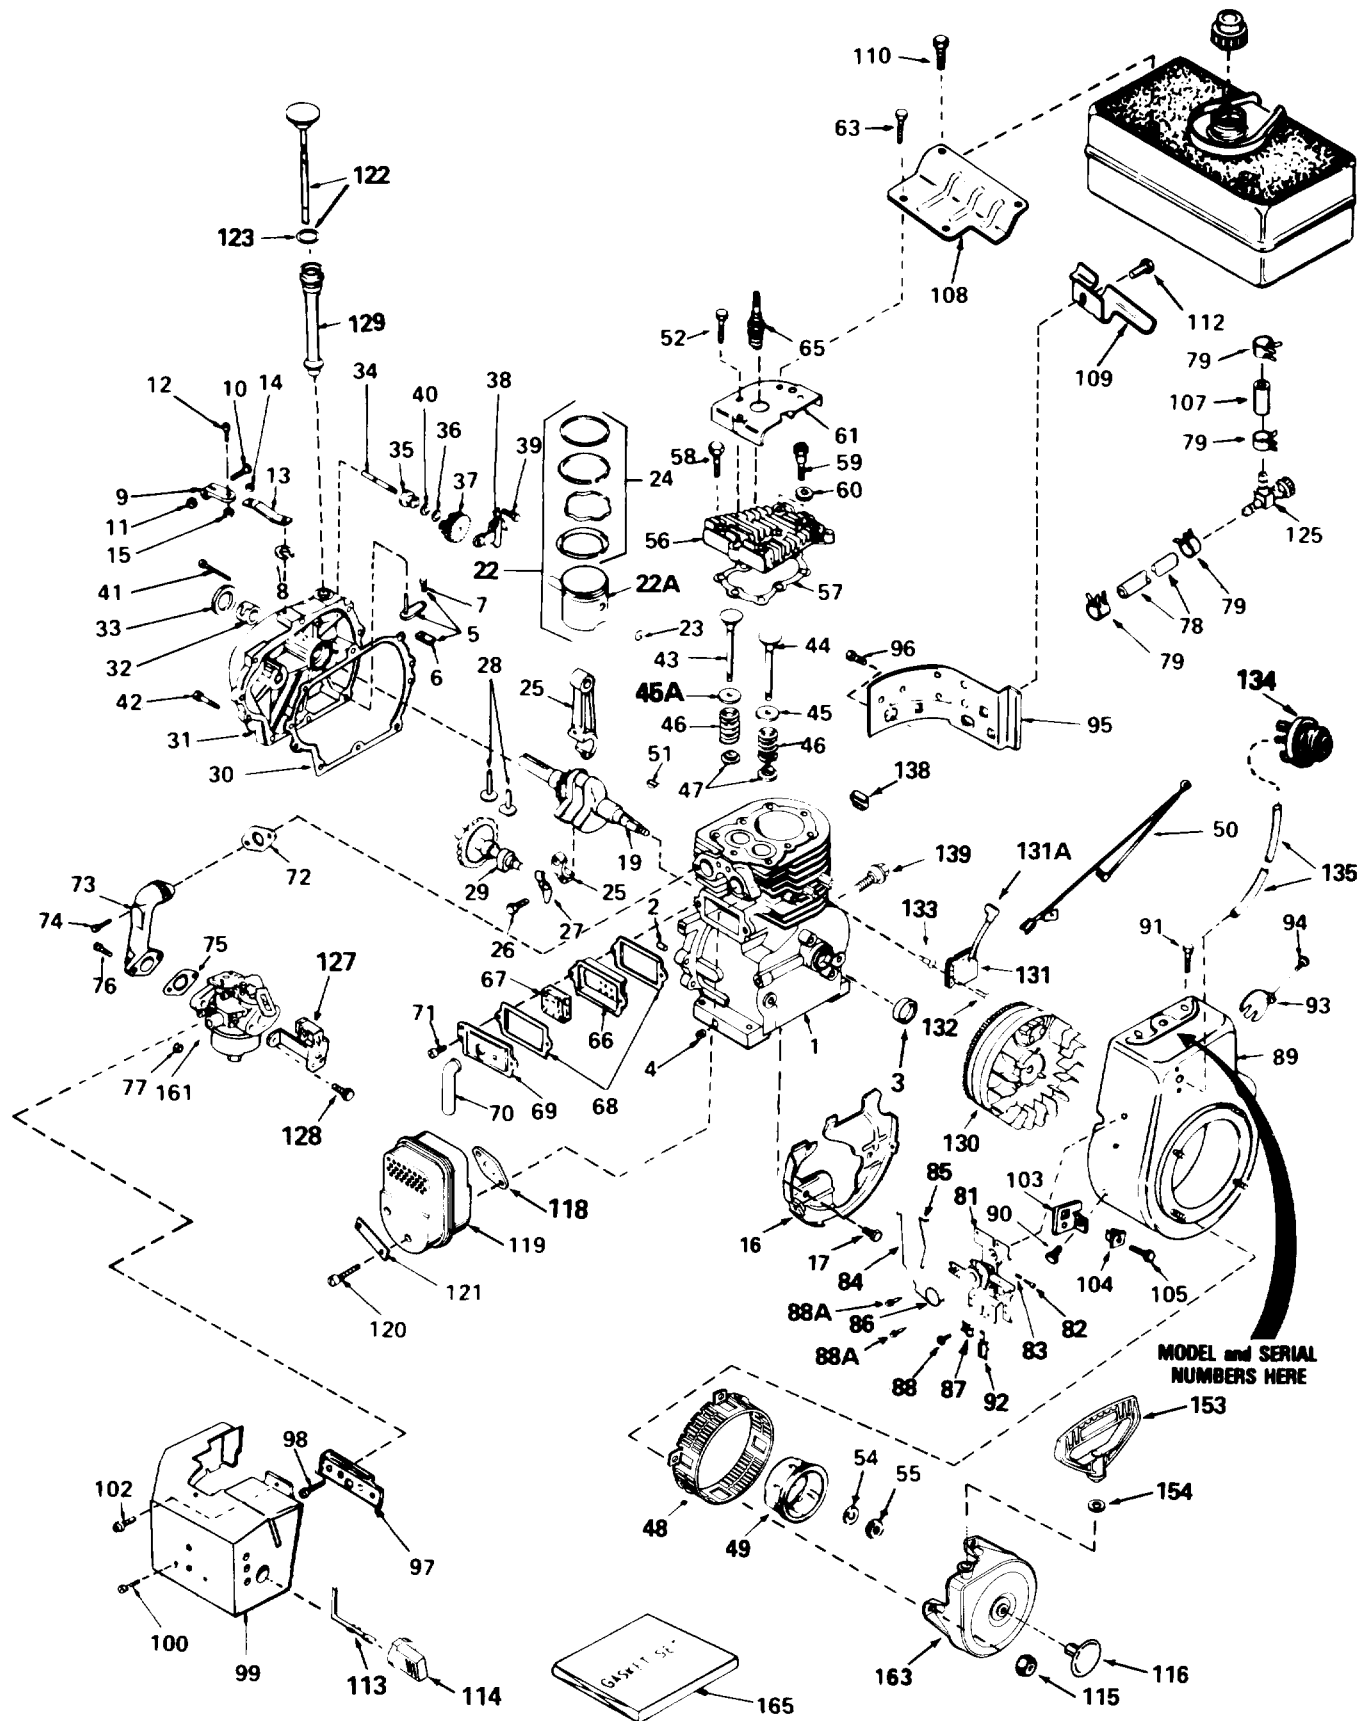


ENGINE TECUMSEH MODEL NO. HM80-155291L

Ref. No.	Part No.	Description	No. Used
1	35385	Cylinder Assy.(Incl.Ref.#2,3,&4)	1
2	27652	Pin, Dowel	2
3	35319	Seal, Oil	1
4	27642	Plug, Oil Drain	2
5	30699C	Rod Assy., Governor (Incl. Ref. #6 & 7)	1
6	30700	Yoke, Governor	1
7	650494	Screw, Fil. Hd.	1
8	29642	Ring, Retaining	1
9	29916	Clamp, Governor Lever	1
10	29826	Screw, Hex Washer Hd.	1
11	29216	Locknut, Hex.	1
12	650548	Screw, Hex Washer Hd.	1
13	33454	Lever, Governor	1
14	29918	Lockwasher	1
15	30322	Locknut, Hex.	1
16	35326	Baffle, Blower Housing	1
17	650561	Screw, Hex Washer Hd.	2
19	35372	Crankshaft Assy.	1
22	34552	Piston, Pin & Ring Assy. (Std.) (Incl. Ref. #22A, 23 & 24)	1
22	34553	Piston, Pin & Ring Assy. (Incl. Ref. #22A, 23 & 24)	1
22	34554	Piston, Pin & Ring Assy. (Incl. Ref. #22A, 23 & 24)	1
22A	34329A	Piston & Pin Assy. (Std.) (Incl. Ref. #23)	1
22A	34330A	Piston & Pin Assy. (Incl.Ref.#23)	1
22A	34331A	Piston & Pin Assy. (Incl.Ref.#23)	1
23	27888	Ring, Piston Pin Retaining	2
24	34332	Ring Set, Piston (Std.)	1
24	34333	Ring Set, Piston (.010 oversize)	1
24	34334	Ring Set, Piston (.020 oversize)	1
25	35373	Rod Assy., Connecting (Incl. Ref. #26 & 27)	1
26	650882	Screw, Connecting Rod	2
27	35374	Dipper, Oil	1
28	34034	Lifter, Valve	2
29	35375	Camshaft (Mechanical Compression Release)	1
30	*35262	Gasket, Cylinder Cover	1
31	35376	Cover, Cylinder (Incl. Ref. #32, 33 & 34)	1
32	35377	Bushing, Crankshaft	1
33	35319	Seal, Oil	1
34	31845	Shaft, Mechanical Governor	1
35	30588A	Spool, Governor	1
36	29193	Ring, Retaining	1
37	35378	Gear Assy., Governor (Incl. Ref. #40)	1
38	33369	Bracket, Governor Gear	1
39	650836	Screw, Hex Washer Hd. Thread Forming	2
40	30590A	Washer, Flat	1
41	650833	Screw, Hex Washer Hd.	7

Ref. No.	Part No.	Description	No. Used
42	650832	Screw, Hex Washer Hd.	1
43	34035	Valve, Intake (Std.)(Incl.Ref.#47)	1
43	34036	Valve, Intake (1/32" oversize) (Incl. Ref. #47)	1
44	27878A	Valve, Exhaust (Std.)(Incl.Ref.#47)	1
44	27880A	Valve, Exhaust (1/32"oversize)(Incl.Ref.#47)	1
45	27882	Cap, Upper Valve Spring (Exhaust)	1
45A	34689	Seal Assy., Intake Valve	1
46	27881	Spring, Valve	2
47	32581	Cap, Lower Valve Spring	2
48	35446	Screen, Starter	1
49	35287	Cup, Starter	1
50	35253	Wire, Ground	1
51	32589	Key, Flywheel	1
52	650738	Screw, Hex Washer Spinlock Hd. Thread Forming	1
54	650880	Washer, Lock	1
55	650881	Nut, Flywheel	1
56	34030	Head, Cylinder	1
57	*34041	Gasket, Cylinder Head	1
58	6021A	Screw, Hex Flange Hd.	7
59	650727	Screw, Special Hex Hd.	2
60	650691	Washer, Flat	2
61	33272A	Cover, Cylinder Head	1
63	650713	Screw, Hex Hd.	2
65	35395	Spark Plug, Resistor (Champion RJ-19LM)	1
66	28423	Body, Breather	1
67	28424	Element, Breather	1
68	*27896	Gasket, Breather Cover	2
69	28425	Cover, Valve Spring	1
70	27627	Tube, Breather	1
71	650128	Screw, Fil. Hd. Sems	2
72	*27915	Gasket, Intake	1
73	33877	Pipe, Intake	1
74	650378	Screw, Fil. Hd. Sems	2
75	*33263	Gasket, Carburetor	1
76	30088A	Screw, Fil. Hd. Sems	2
77	29752	Nut & Lockwasher	2
78	30705	Line, Fuel	1
79	26460	Clamp, Fuel Line	4
81	34664	Control Assy., Speed (Incl. Ref. #82, 83, 86 & 92)	1
82	650549	Screw, Fil. Hd.	1
83	31342	Spring, Compression	1
84	34667	Link, Governor	1
85	33878	Link, Governor Lever-to-Throttle	1
86	34663	Spring, Speed Control	1
87	27793	Clip, Conduit	1
88	28942	Screw, Hex Washer Hd. Sems	1
88A	650821	Screw, Hex Washer Hd. Thread Cutting	2

*Indicates parts included in Gasket Set, Ref. No. 165

ENGINE TECUMSEH MODEL NO. HM80-155291L (Continued)

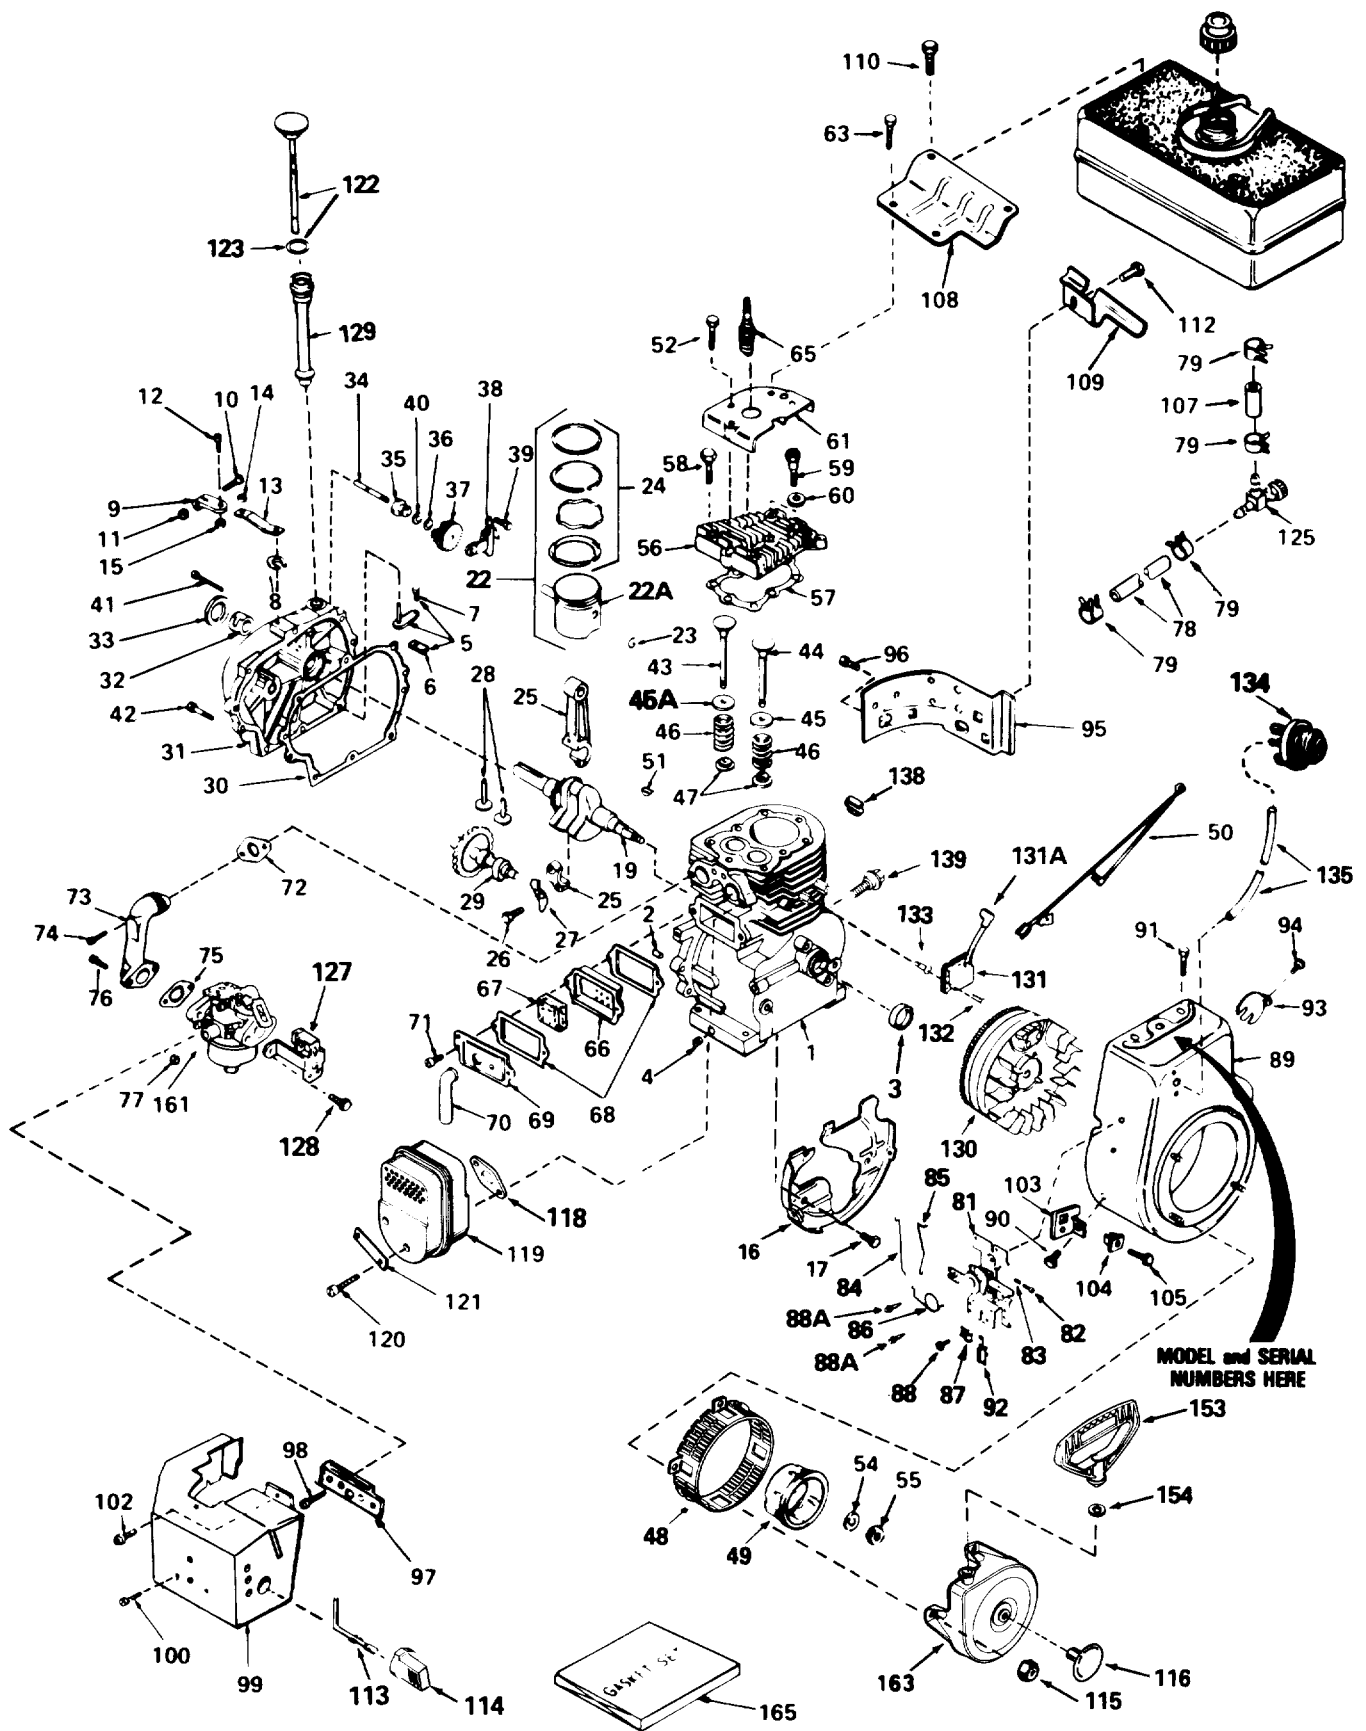


ENGINE TECUMSEH MODEL NO. HM80-155291L (Continued)

Ref. No.	Part No.	Description	No. Used
89	34822A	Housing, Blower	1
90	29747B	Screw, Phil. Hex Hd. Sems	2
91	650788	Screw, Hex Hd. Spinlock	
		Thread Forming	2
92	610973	Terminal Assy.	1
93	33013	Cover, Starter Bubble	1
94	650760	Screw, Pan Hd. Taptite	1
95	33273A	Extension, Blower Housing	1
96	650128	Screw, Fil. Hd. Sems	1
97	33377	Bracket, Carburetor Cover	
		Mounting	1
98	650767	Screw, Hex Washer Hd. Sems	
		Taptite	2
99	35057	Cover, Carburetor	1
100	28942	Screw, Hex Washer Hd. Sems	2
102	650765	Screw, Hex Washer Hd.	
		Self-Drilling	1
103	34126	Bracket, Grommet Mounting	1
104	28545	Grommet, Plastic	1
105	650643	Screw, Pan Hd. Self-Tap	1
107	29774	Line, Fuel	1
108	34154	Plate, Fuel Tank Mounting	1
109	34155	Bracket, Fuel Tank Mounting	1
110	650665	Screw, Hex Washer Hd.	
		Thread Cutting	2
112	650561	Screw, Hex Washer Hd. Durlok	1
113	34586	Rod, Choke	1
114	35438	Knob, Choke	1

Ref. No.	Part No.	Description	No. Used
115	29752	Nut & Lockwasher	4
116	35392	Plug, Starter	1
118	*27930	Gasket, Exhaust	1
119	35056	Muffler	1
120	792093	Screw, Flanged Hex Hd.	2
121	31588	Plate, Muffler Locking	1
122	34011A	Dipstick, Oil (Incl. Ref. #123)	1
123	33590	"O" Ring	1
125	32961	Valve, Fuel Shut-Off	1
127	34587	Bracket, Choke	1
128	28820	Screw, Fil. Hd. Sems	2
129	33893A	Tube, Oil Fill	1
130	611091	Flywheel (W/Ring Gear)	1
131	35135	Solid State Assy. (Incl. Ref. #131A)	1
131A	10118	Cover, Spark Plug	1
132	650814	Screw, Hex Hd. Sems	2
133	650872	Stud, Solid State Mounting	2
134	34814	Primer Assy.	1
135	32180C	Line, Primer	1
138	29443	Clip, Spring	1
139	650820	Screw, Hex Hd. Shoulder	2
153	590574	Starter Handle, Mitten Grip	1
154	650168	Washer, Flat	1
161	632334	Carburetor (Incl. Ref. #75)	1
163	590630	Starter, Rewind	1
165	33279D	Gasket Set (Incl. items marked *)	1

*Indicates parts included in Gasket Set, Ref. No. 165

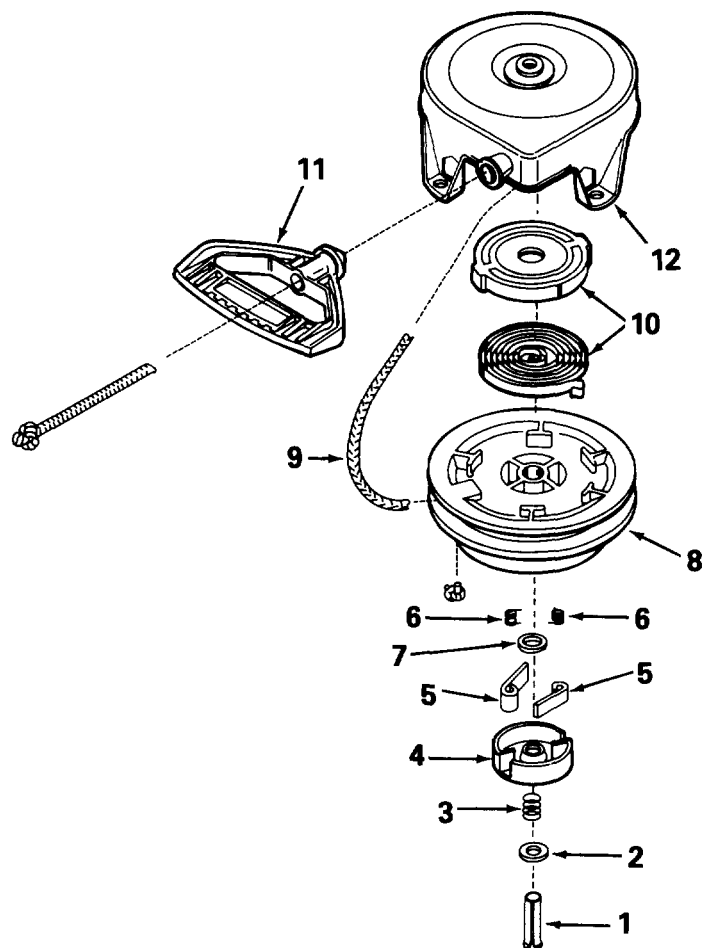

REWIND STARTER NO. 590630

Ref. No.	Part No.	Description	No. Used
1	590599	Pin, Spring	1
2	590600	Washer	1
3	590598	Spring, Brake	1
4	590627	Retainer	1
5	590148	Dog, Starter	2
6	590617	Spring, Dog	2
7	590601	Washer	1

Ref. No.	Part No.	Description	No. Used
8	590628	Pulley	1
9	590451A	Rope, Starter	1
10	590629	Spring & Keeper Assy.	1
11	590574	Handle, Mitten Grip (Not Included With Starter)	1
12	590631	Housing Assy., Starter	1

