



Mid-Size ProLine, Pistol Grip, Gear Drive with 32in Side Discharge Mower

Model No. 30518 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Engine and Fuel System Assembly	 3	Lubrication-Equipment Assembly Kawasaki	
Transmission and Drive Assembly	 4	FH381V-AS25	 19
Wheel Drive Assembly	 6	Cooling Equipment Assembly Kawasaki	
Upper Handle Assembly	 8	FH381V-AS25	 20
Handle Assembly No. 106-2742	 10	Electric-Equipment Assembly Kawasaki	
Deck Assembly	 11	FH381V-AS25	 21
Deflector Assembly	 12	Control-Equipment Assembly Kawasaki	
Front Caster and Blade Brake Assembly	 13	FH381V-AS25	 22
Spindle, Blade and Belt Assembly	 15	Carburetor Assembly Kawasaki FH381V-AS25	 23
Cylinder and Crankcase Assembly Kawasaki		Air-Filter and Muffler Assembly Kawasaki	
FH381V-AS25	 16	FH381V-AS25	 24
Piston and Crankshaft Assembly Kawasaki		Fuel Tank/Fuel Valve Assembly Kawasaki	
FH381V-AS25	 17	Model FH381V-AS25	 25
Valve and Camshaft Assembly Kawasaki		Starter Assembly Kawasaki FH381V-AS25	 26
FH381V-AS25	 18	Decal Assembly Kawasaki FH381V-AS25	 27


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
CARR. carriage	NI. nylon insert
DEG. degrees	PPH. phillips pan head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power take off
HF. hex flange	RH. right hand
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HS. hex	STD. standard
HSBH. hex socket button head	TAP. self tapping
HSFH. hex socket flat head	TTH. torx truss head
HSH. hex socket head	WH. wing head
HWH. hex washer head	
HWHTF. hex washer head thread forming	
HYD. hydraulic	

Footnotes


- | | |
|--|---------------------------|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain parts from your local Kawasaki dealer | |

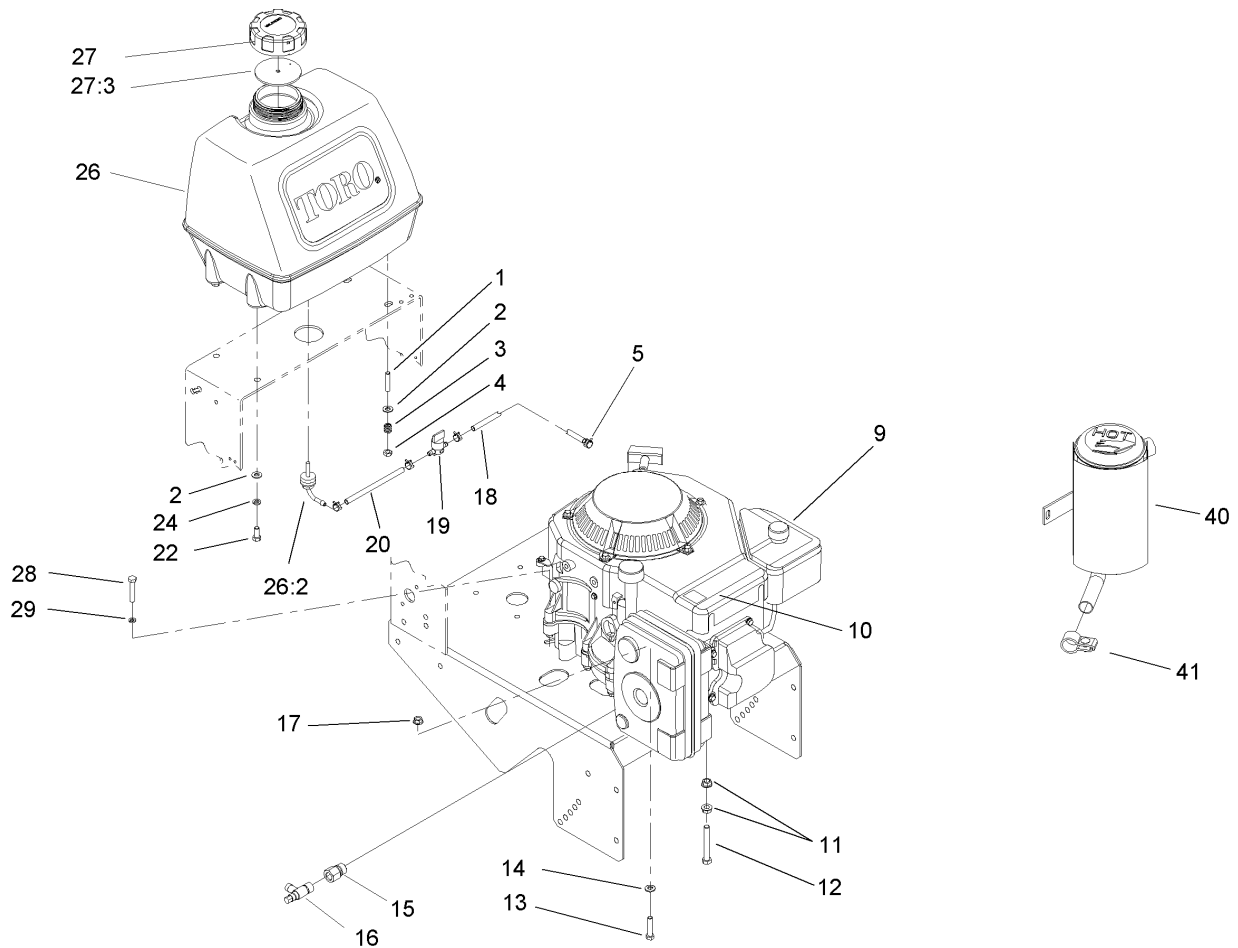

Engine and Fuel System Assembly

Ref	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	4	Clamp
9		1	Engine-Kawasaki, Fh381v-As25
10	63-8440	1	Decal-Surface, Hot
11	3290-357	2	Nut-HHF
12	323-13	1	Screw-HH
13	322-7	4	Screw-HH
14	1-303334	4	Washer-Spring
15	103-1966	1	Adapter
16	103-1965	1	Valve-Drain, Oil
17	32128-20	4	Nut-HF
18	1-303022	1	Hose-Fuel
19	1-603770	1	Valve-Fuel
20	1-603955	1	Hose-Fuel
22	322-3	2	Screw-HH
24	1-805005	2	Washer-Lock
26	106-0730	1	Fuel Tank ASM
26:2	103-2605	1	Fitting-Fuel, Bulkhead
27	88-3980	1	Gas Cap ASM
27:3	88-4010	1	Gasket-Cap, Gas
28	33113-016	1	Screw-HH


Ref	Part No.	Qty.	Description
29	1-805004	1	Washer-Lock
40	100-6467	1	Muffler
41	103-5465	1	Clamp-Muffler
99	1-303335	1	Tie-Plastic

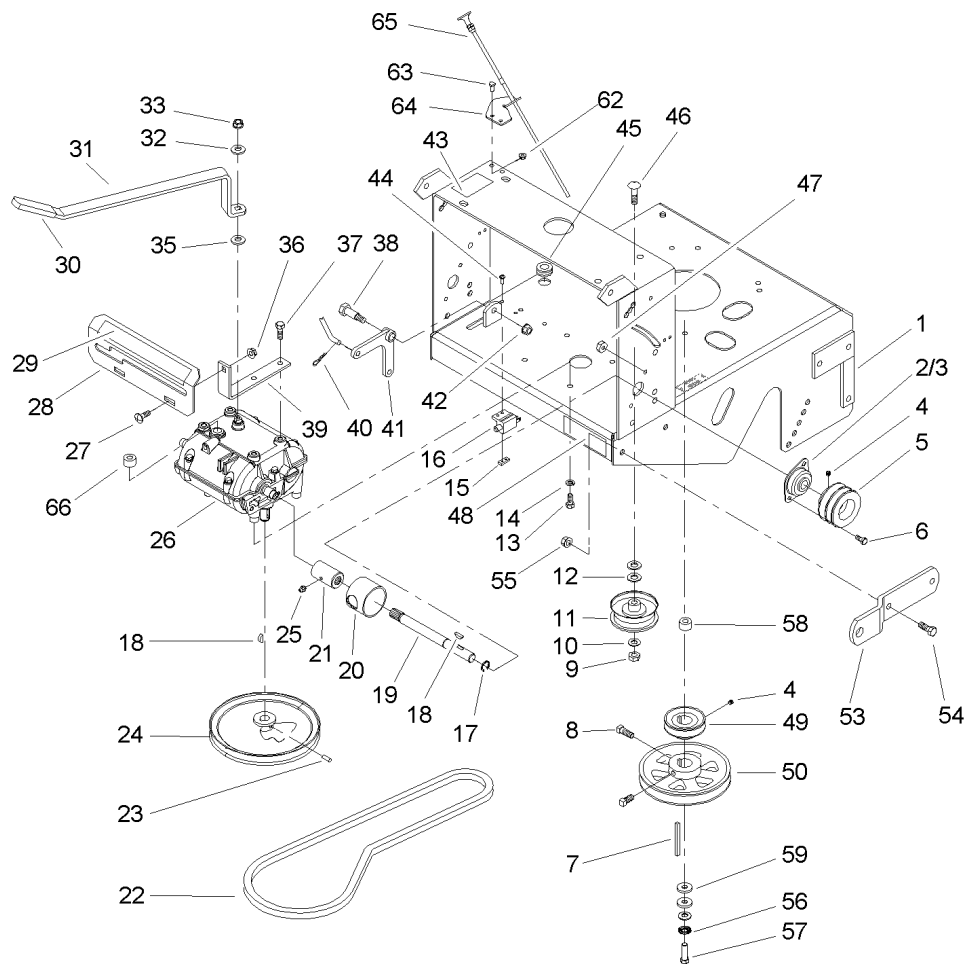

Transmission and Drive Assembly


Ref	Part No.	Qty.	Description
1	103-2923-01	1	Frame-Deck, Rear
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	3	Screw-Set
5	103-6512	2	Sheave-Transmission
6	321-3	4	Screw-HH
7	103-4177	1	Key-Machine
8	3242-4	2	Screw-Set, SQH
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513051	1	Switch-Open, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission

Ref	Part No.	Qty.	Description
25	302-19	2	Fitting-Grease
26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	105-4104	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw-Hwh, Thread Cut
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	1	Pin-Hair
41	1-303186	1	Bellcrank
42	3290-357	1	Nut-HHF
43	95-2814	1	Decal-Shut Off, Fuel
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission

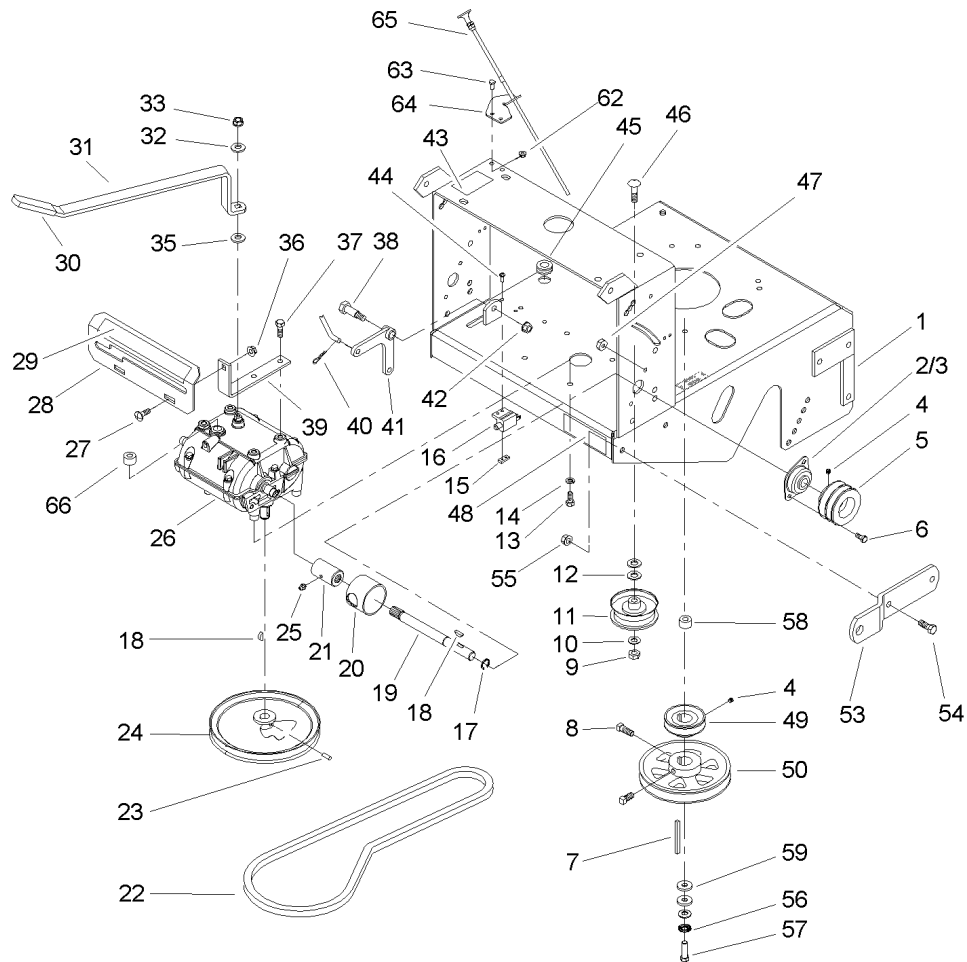

Transmission and Drive Assembly (continued)


Ref	Part No.	Qty.	Description				
50	103-1667	1	Sheave				
53	1-323318-01	2	Hitch-Sulky				
54	323-6	4	Screw-HH				
55	3290-357	4	Nut-HHF				
56	1-603610	2	Washer-Spring				
57	3212-6	1	Screw-HH				
58	1-633453	1	Spacer-Clutch				
59	1-373034	2	Washer				
62	32128-33	2	Nut-HF				
63	321-3	2	Screw-HH				
64	103-1797-01	1	Bracket-Cable, Choke				
65	103-1796	1	Cable-Choke				
66	1-303282	1	Switch-Start, Neutral				

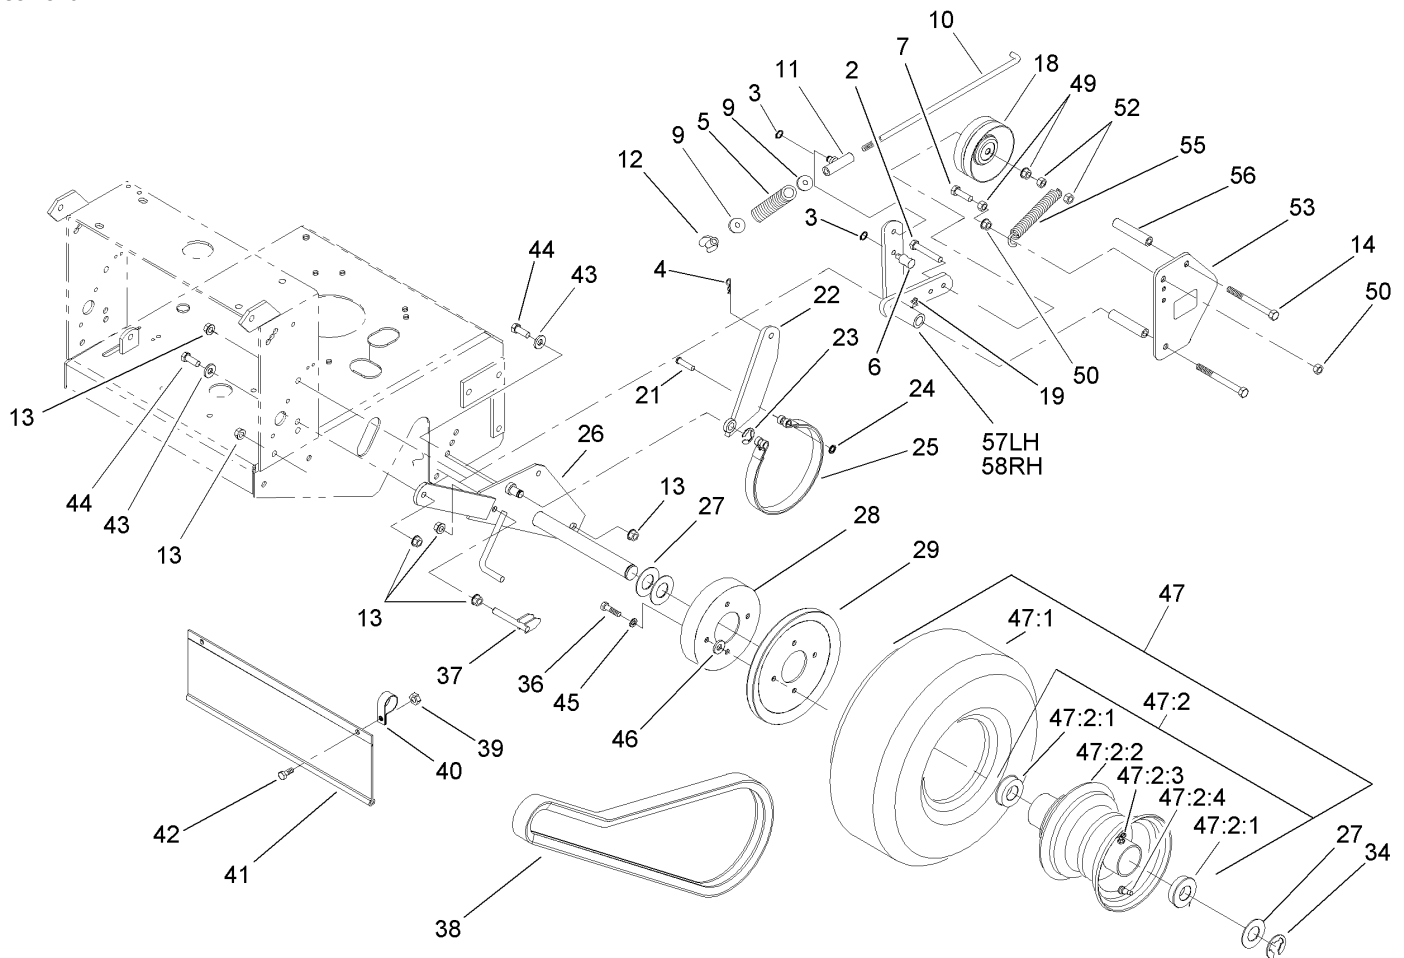

Wheel Drive Assembly

Ref	Part No.	Qty.	Description
2	99-8664	2	Screw-HH
3	32151-47	6	Ring-Retaining
4	1-806003	4	Pin-Hair
5	1-323245	2	Spring-Compression
6	103-1864	2	Swivel-Lever, Drive
7	322-6	2	Screw-HH
9	3256-23	4	Washer-Flat
10	1-323548	2	Linkage-Brake
11	1-322125	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	14	Nut-HHF
14	323-39	4	Screw-HH
18	1-323352	2	Idler-Wheel, Drive
19	302-19	2	Fitting-Grease
21	1-323307	2	Pin-Clevis
22	103-1611-03	2	Arm-Brake ASM
23	32120-47	2	Ring-Retaining, External
24	1-803051	2	Nut-Push
25	1-323262	2	Band-Brake
26	1-322141-03	1	Axle
27	1-543436	8	Washer-Spacer
27	1-523157	6	Washer-Spacer
28	1-323261	2	Drum-Brake
29	1-323349	2	Sheave-Wheel, Drive


Ref	Part No.	Qty.	Description
34	1-808519	2	Ring-Snap
36	322-5	8	Screw-HH
37	1-603430	2	Scraper
38	1-323744	2	Belt-Drive, Wheel
39	3296-29	4	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
45	1-373034	8	Washer
46	1-805005	8	Washer-Lock
47		2	Wheel And Tire ASM
47:1	1-323361	1	Tire
47:2	1-323360	1	Wheel And Hub ASM
47:2:1	1-323329	2	Bearing-Flanged
47:2:2		1	Rim ASM
47:2:3		1	Fitting-Grease
47:2:4		1	Valve Stem And Cap
49	3290-357	2	Nut-HHF
50	32128-20	2	Nut-HF
52	3296-39	8	Nut-Lock, NI
53	1-323287-01	2	Shield-Wheel, Drive
55	1-603402	2	Spring-Extension

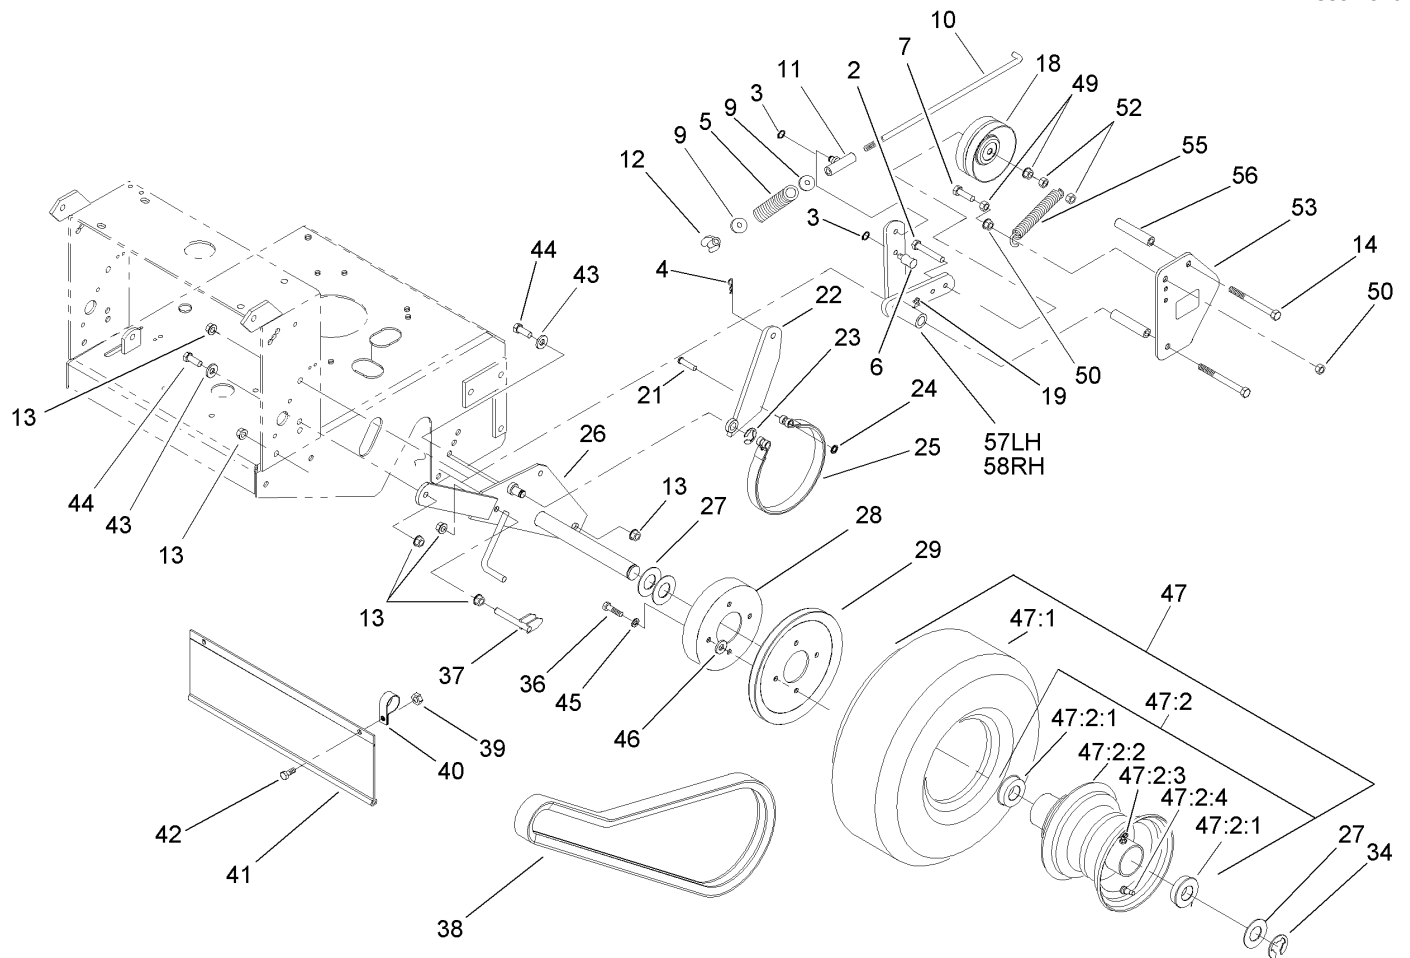

Wheel Drive Assembly (continued)

Ref	Part No.	Qty.	Description
56	103-2676	2	Spacer, shield
57	103-1615-03	1	Arm-Idler, LH
58	103-1616-03	1	Arm-Idler, RH

--	--	--	--

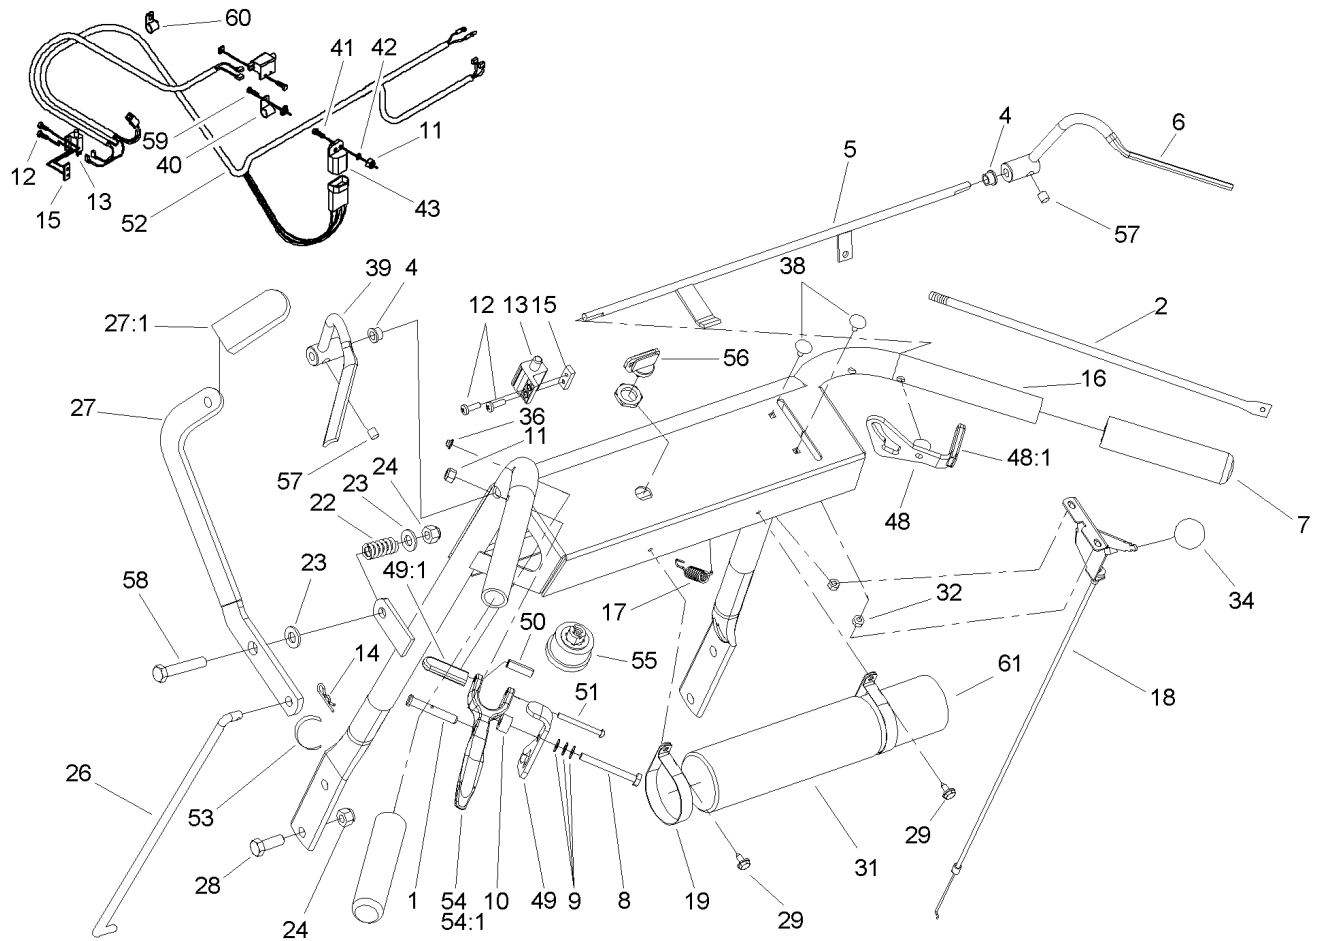


Upper Handle Assembly

Ref	Part No.	Qty.	Description
1	1-808286	2	Pin-Clevis
2	1-323359	2	Linkage-Wheel, Drive
4	1-303365	2	Bushing-Nylon
5	106-2717-03	1	Operator Presence Control Rod
6	1-412185-03	1	Lever-RH
7	1-303097	2	Grip-Handle
8	321-18	2	Screw-HH
9	1-303435	6	Washer-Spring
10	1-323549	2	Spacer
11	3296-42	3	Nut-Lock, NI
12	3290-500	2	Screw-PPH
13	1-513051	1	Switch-Open, Normally
14	1-806003	2	Pin-Hair
15	1-633181	1	Plate-Tapped
16	106-2742	1	Handle ASM
17	1-303363	1	Spring-Extension
18	1-633696	1	Throttle Cable ASM
19	2412-120	2	R-Clamp
22	1-303160	1	Spring-Compression
23	3256-4	2	Washer-Flat
24	3296-39	5	Nut-Lock, NI
26	1-323298	1	Linkage-Blade, Upper
27	1-322157	1	Lever ASM
27:1	1-303020	1	Grip-Lever


Ref	Part No.	Qty.	Description
28	323-6	4	Screw-HH
29	32104-76	2	Screw
31	104-7050	1	Housing-Manual
32	3296-2	2	Nut-Lock
34	1-513592	1	Knob-Ball
36	1-803001	2	Nut
38	1-807513	2	Bolt-CARR
39	1-412183-03	1	Lever-LH
40	1-323229	1	Clip-Loom
41	321-4	1	Screw-HH
42	3256-22	1	Washer-Flat
43	1-323430	1	Module-Interlock
48	1-324280	1	RH Thumb Latch ASM
48:1	1-303019	1	Grip-Latch
49	1-324279	1	LH Thumb Latch ASM
49:1	1-303019	1	Grip-Latch
50	1-806340	2	Pin-Roll
51	1-808250	2	Pin-Drive Lever
52	103-1610	1	Harness-Wiring
53	1-303088	1	Clip-Cable
54	1-302006	2	Drive Lever ASM
54:1	1-303021	1	Grip-Lever, Drive
55	1-403121	1	Switch-Key
56	63-8360	1	Key-Ignition



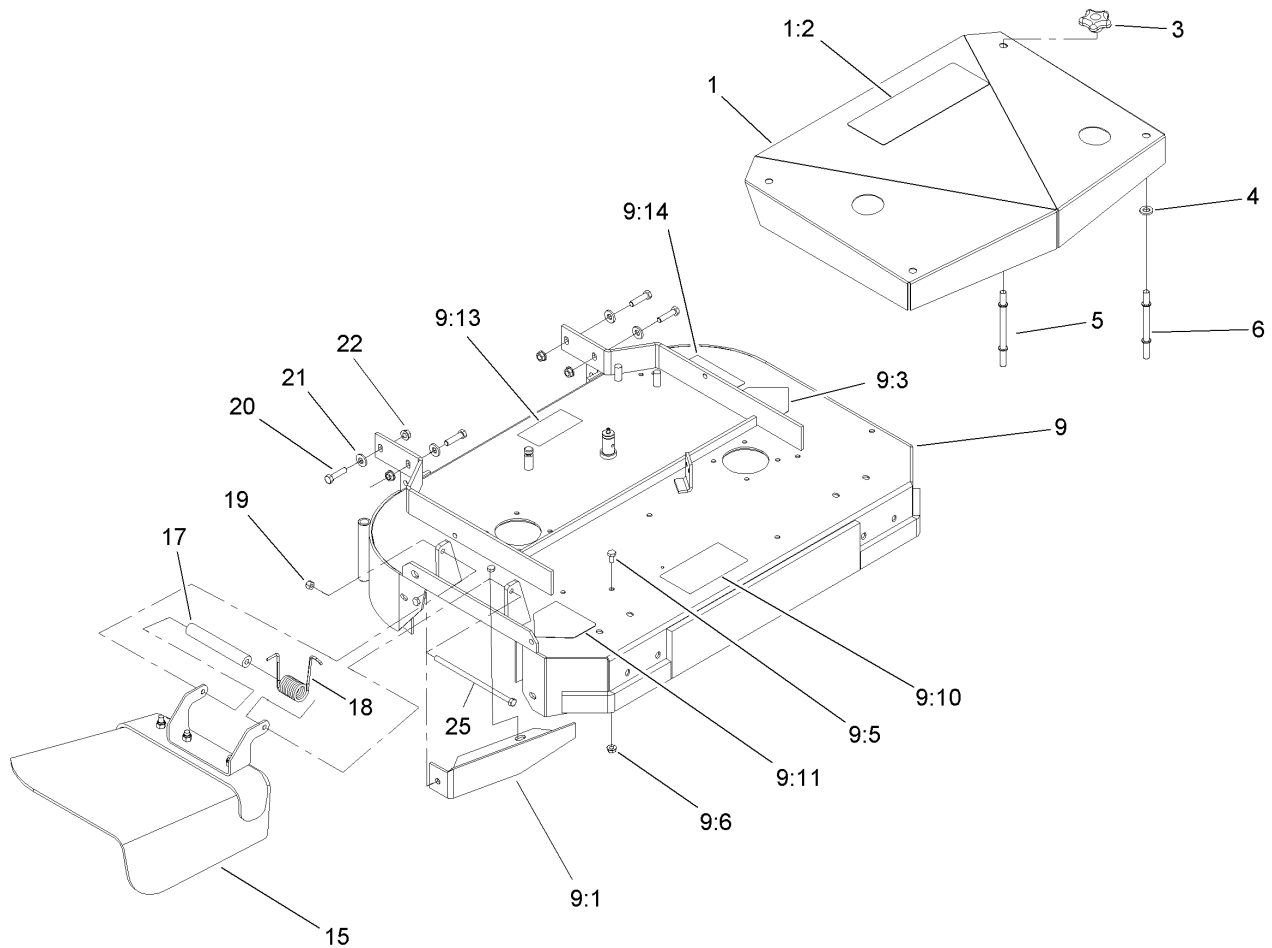


Deck Assembly

Ref	Part No.	Qty.	Description				
1	1-324407	1	Shield-Belt				
1:2	106-0710	1	Decal				
3	106-4161	4	Knob-Handle				
4	1-323417	4	Washer				
5	1-303536	2	Stud-Shield, Belt (Long)				
6	1-303537	2	Stud-Shield, Belt (Short)				
9	107-4213	1	Deck ASM				
9:1	1-302189-01	1	Baffle-Dogleg				
9:3	1-403005	1	Decal-Danger				
9:5	322-2	7	Screw-HH				
9:6	32128-20	7	Nut-HF				
9:10	66-1340	1	Decal-Danger				
9:11	93-1122	1	Decal-Danger				
9:13	98-3296	1	Decal-Routing, Belt				
9:14	98-5130	1	Decal-Torque, Bolt				
15	107-4140	1	Deflector ASM				
17	105-4622	1	Spacer				
18	104-8554	1	Spring-Torsion				
19	3296-29	1	Nut-Lock, NI				
20	323-8	6	Screw-HH				
21	98-5975	6	Washer-Belleville				
22	3290-357	6	Nut-HHF				
25	322-50	1	Screw-HH				

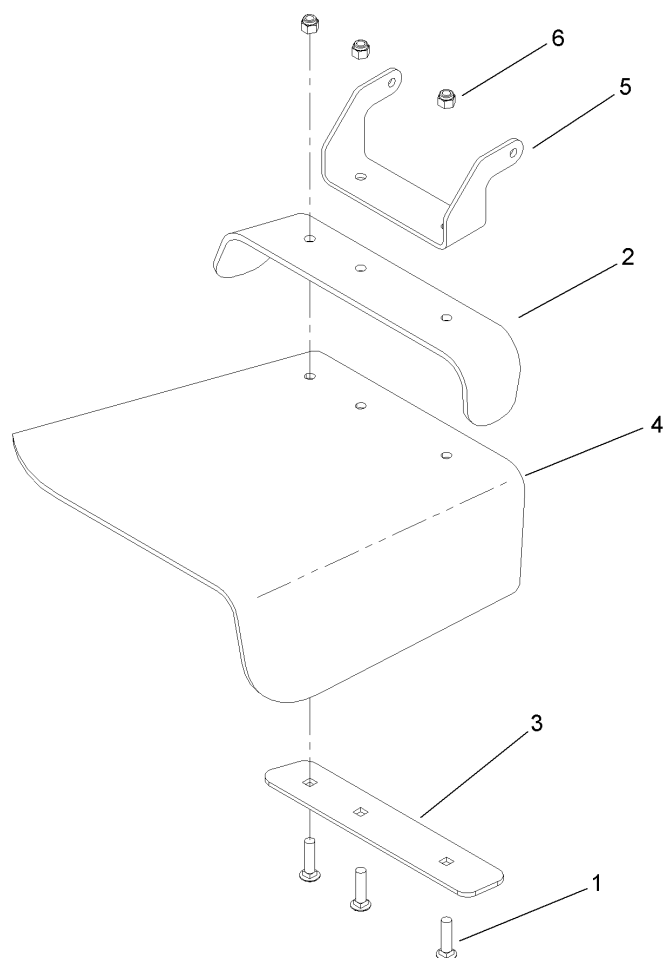

Deflector Assembly


Ref	Part No.	Qty.	Description
1	3231-4	3	Screw-CARR
2	107-4138-01	1	Strap-Deflector, Top
3	107-4139-01	1	Strap-Discharge
4	107-4137	1	Deflector-Rubber
5	107-4164-01	1	Bracket-Mounting, Deflector
6	3296-39	3	Nut-Lock, NI

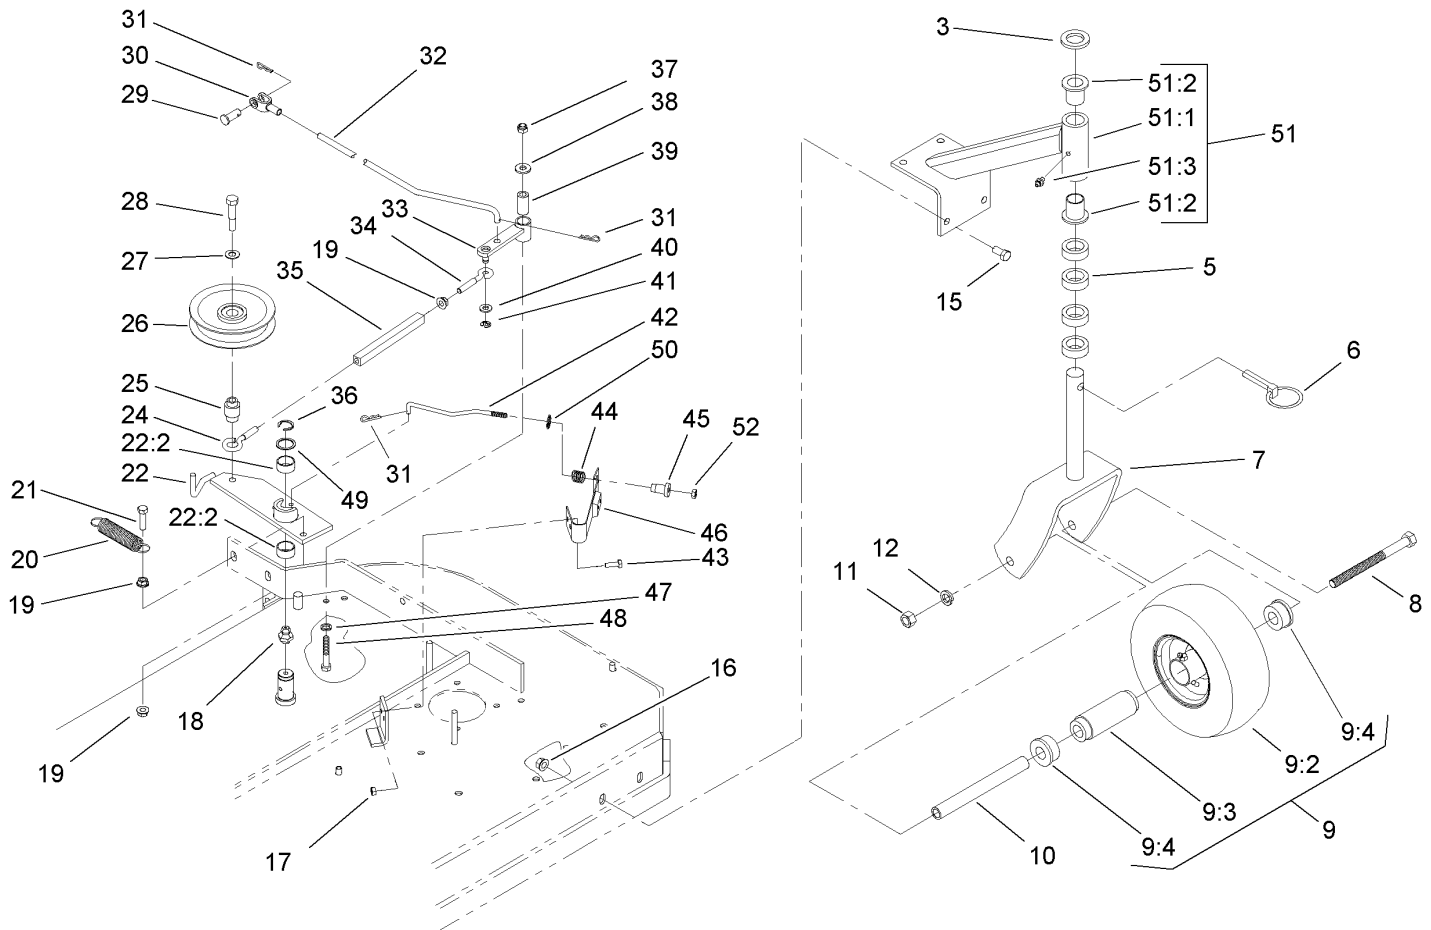

Front Caster and Blade Brake Assembly

Ref	Part No.	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	1-322145-01	2	Fork
8	325-20	2	Screw-HH
9	1-513648	2	Wheel And Tire ASM
9:2	1-513808	1	Tire
9:3	1-513809	1	Bearing
9:4	1-513810	2	Bushing
10	1-513547	2	Spacer
11	3217-9	2	Nut-Hex
12	3253-7	2	Washer-Lock
15	323-4	8	Screw-HH
16	3290-357	8	Nut-HHF
17	3296-42	2	Nut-Lock, NI
18	302-19	1	Fitting-Grease
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	322-6	2	Screw-HH
22	103-3600	1	Idler Arm ASM
22:2	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-Thread, LH
25	1-303434	1	Bushing-Engagement
26	1-603843	1	Pulley-Idler


Ref	Part No.	Qty.	Description
27	98-5975	1	Washer-Belleville
28	702809	1	Screw-Cap
29	1-808280	1	Pin-Clevis
30	1-303105	1	Yoke-Adjustable
31	1-806003	3	Pin-Hair
32	1-323303	1	Linkage-Arm
33	1-322235	1	Arm-Assist
34	1-303238	1	Eyebolt-Thread, RH
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Snap
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot
40	3256-23	1	Washer-Flat
41	32120-35	1	E-Ring
42	1-323718	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad / Spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On

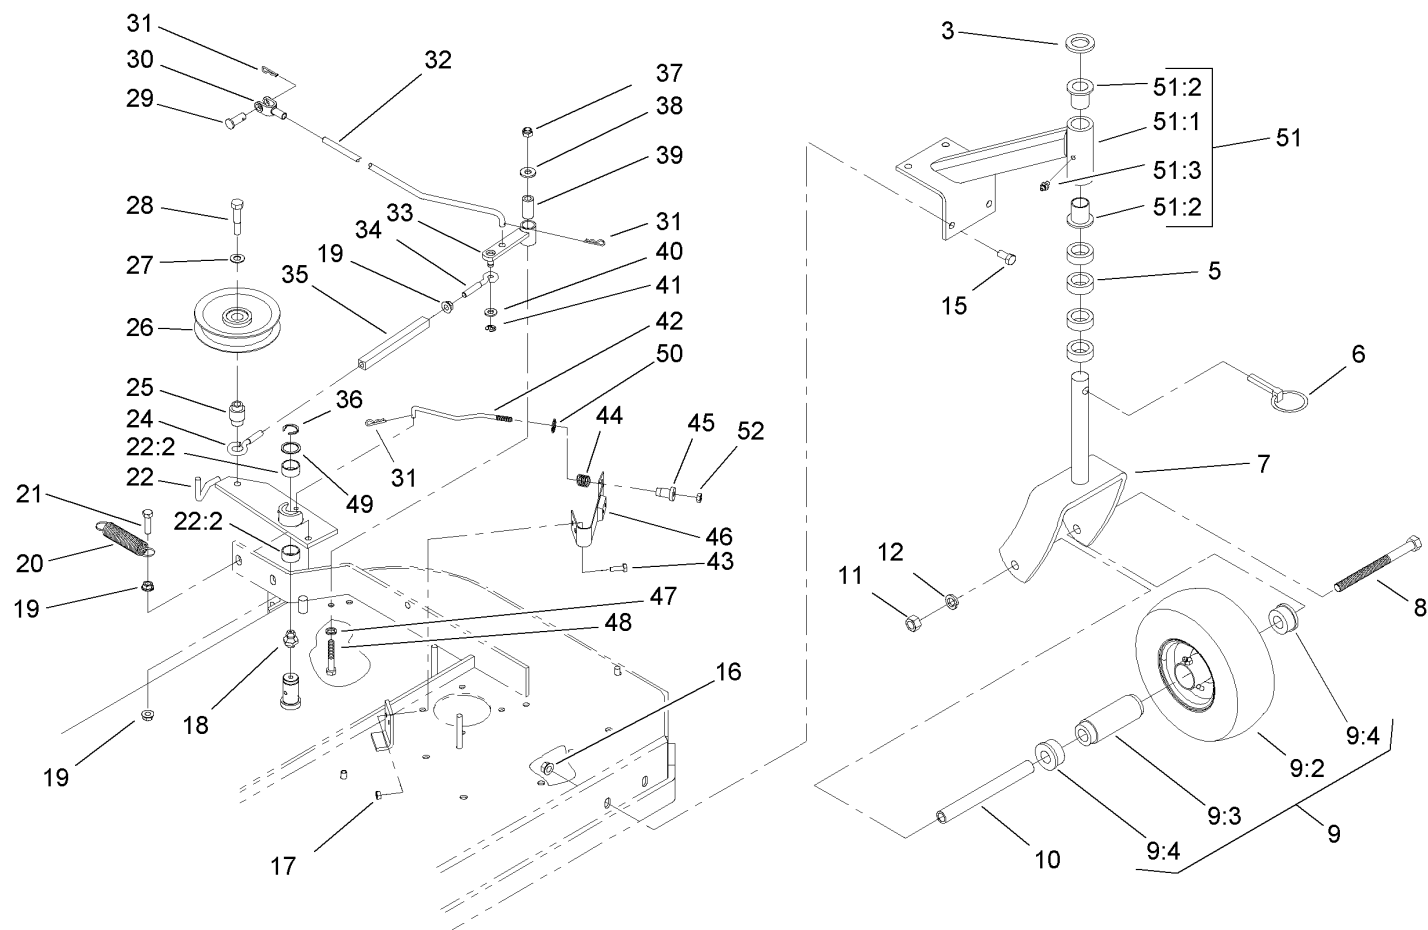

Front Caster and Blade Brake Assembly (continued)


Ref	Part No.	Qty.	Description				
51	1-302203	2	Support ASM				
51:1		1	Support-Caster				
51:2	1-303514	2	Bearing-Flanged				
51:3	302-52	1	Fitting-Grease				
52	3296-56	1	Nut-Lock, NI				

15

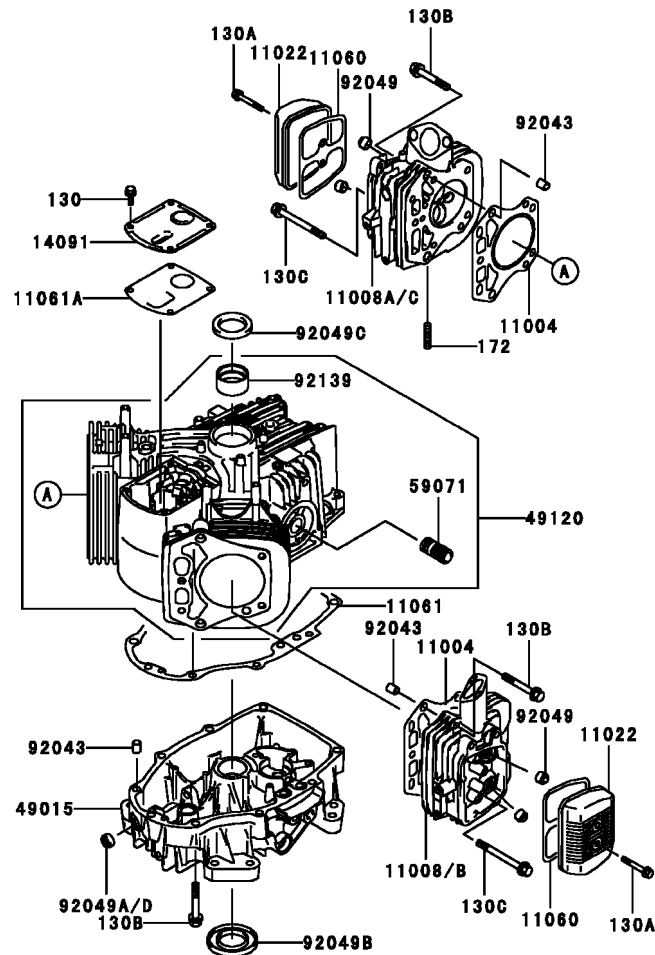


Cylinder and Crankcase Assembly Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
⑤11004	11004-7008	2	Gasket-Head	⑤172	172G0818	4	Bolt-Stud
⑤11008	11008-7011	1	Head-Comp-Cylinder, No.2				
⑤11008A	11008-7017	1	Head-Comp-Cylinder, No.1				
⑤11008B	11008-7021	1	Head-Comp-Cylinder, #2				
⑤11008C	11008-7022	1	Head-Comp-Cylinder, #1				
⑤11022	11022-7003	2	Case-Rocker				
⑤11060	11060-7001	2	Gasket-Case, Rocker				
⑤11061	11061-7007	1	Gasket-Cover, Crankcase				
⑤11061A	11061-7008	1	Gasket-Breather				
⑤14091	14091-7007	1	Cover				
⑤49015	49015-7032	1	Cover-Crankcase				
⑤49120	49120-7015	1	Crankcase-Comp				
⑤59071	59071-2079	1	Joint				
⑤92043	92043-7001	6	Pin				
⑤92049	92049-7001	4	Seal-Oil, Rvc2 (6x11x10.2)				
⑤92049A	92049-7005	1	Seal-Oil, so 8x14x5 HS				
⑤92049B	92049-7015	1	Seal-Oil, Sd (35x62x8 L Hs)				
⑤92049C	92049-7016	1	Seal-Oil, Sd (35x48x8 R Hs)				
⑤92049D	92049-7019	1	Seal-Oil, So (8x14x5 Hs)				
⑤92139	92139-7002	1	Bushing				
⑤130	130B0612	4	Bolt-Flanged				
⑤130A	130B0640	4	Bolt-Flanged				
⑤130B	130T0850	17	Bolt-Flanged				
⑤130C	130T0875	2	Bolt-Flanged				

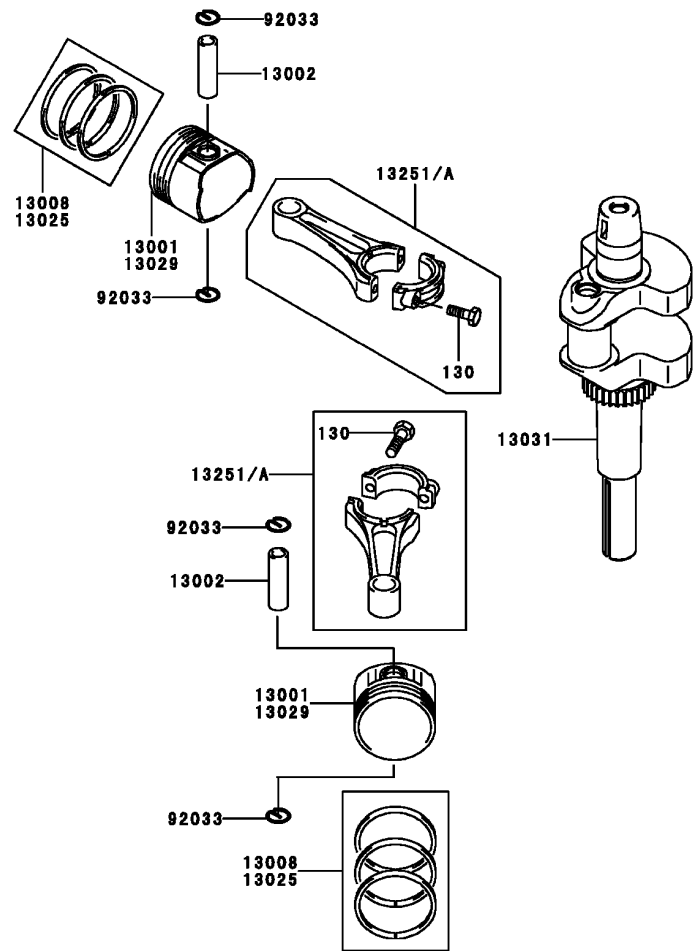


Piston and Crankshaft Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description				
13001	13001-7009	2	Piston-Engine				
13002	13002-7001	2	Pin-Piston				
13008	13008-7001	2	Ring-Set-Piston				
13025	13025-7003	1	Ring-Set-Piston				
13029	13029-7005	1	Piston-Engine				
13031	13031-7033	1	Crankshaft-Comp				
13251	13251-7007	2	Connecting Rod ASM				
13251A	13251-7008	2	Connecting Rod Asm, U/s=0.50				
92033	92033-7005	4	Ring-Snap				
130	130G0630	4	Bolt-Flanged				

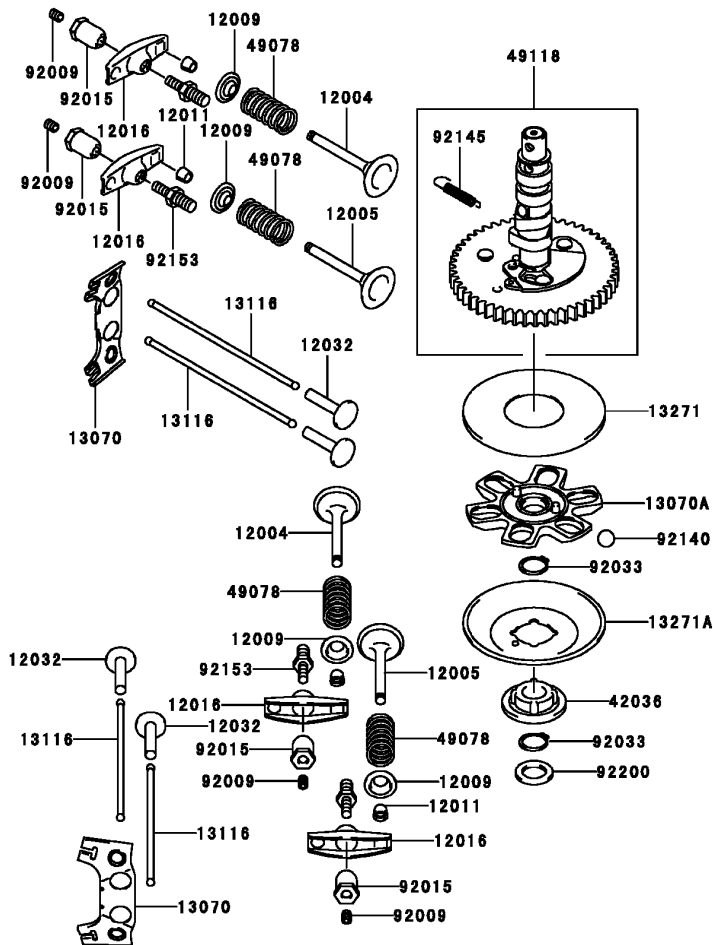


Valve and Camshaft Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description				
③12004	12004-7003	2	Valve-Intake				
③12005	12005-7003	2	Valve-Exhaust				
③12009	12009-7001	4	Retainer-Spring, Valve				
③12011	12011-2056	8	Collet				
③12016	12016-7001	4	Arm-Rocker				
③12032	12032-7001	4	Tappet				
③13070	13070-7001	2	Guide				
③13070A	13070-7004	1	Guide				
③13116	13116-2057	4	Rod-Push				
③13271	13271-7007	1	Plate				
③13271A	13271-7021	1	Plate-Governor				
③42036	42036-7009	1	Sleeve				
③49078	49078-7001	4	Spring-Valve, Engine				
③49118	49118-7009	1	Camshaft-Comp				
③92009	92009-2341	4	Screw				
③92015	92015-2253	4	Nut				
③92033	92033-7001	2	Ring-Snap				
③92140	92140-7002	6	Ball				
③92145	92145-7001	1	Spring				
③92153	92153-7019	4	Bolt				
③92200	92200-7001	1	Washer				

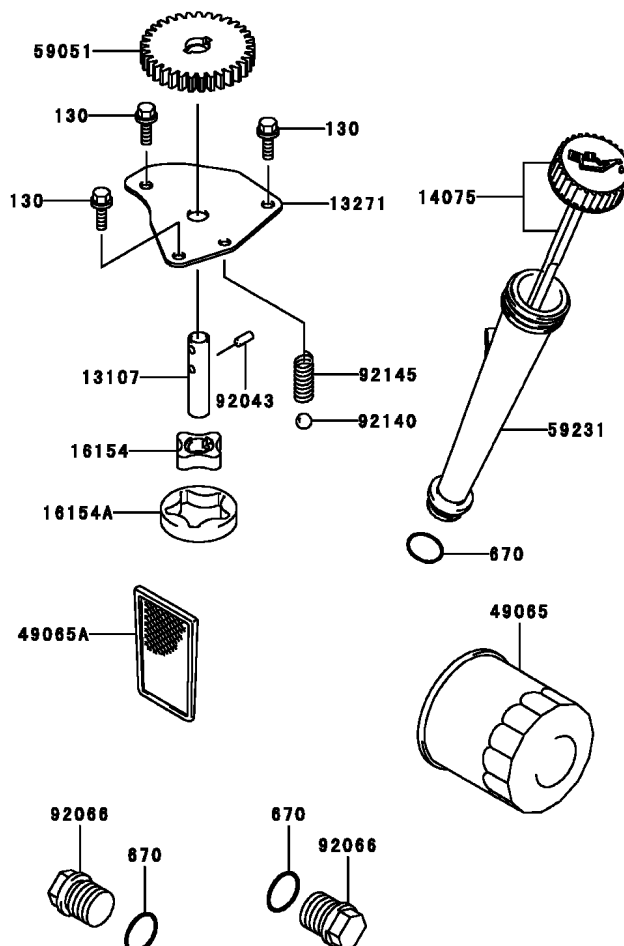


Lubrication-Equipment Assembly Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description				
⑨13107	13107-7009	1	Shaft				
⑨13271	13271-7017	1	Plate				
⑨14075	14075-7009	1	Cap ASM				
⑨16154	16154-2053	1	Rotor-Pump (In)				
⑨16154A	16154-2054	1	Rotor-Pump (Out)				
⑨49065	49065-2078	1	Filter-Oil				
⑨49065A	49065-7004	1	Filter-Oil				
⑨59051	59051-7011	1	Gear-Spur				
⑨59231	59231-7003	1	Filler				
⑨92043	92043-7003	2	Pin				
⑨92066	92066-7003	2	Plug				
⑨92140	92140-7003	1	Ball				
⑨92145	92145-7002	1	Spring				
⑨130	130B0612	3	Bolt-Flanged				
⑨670	670D2016	3	O-Ring (16mm)				

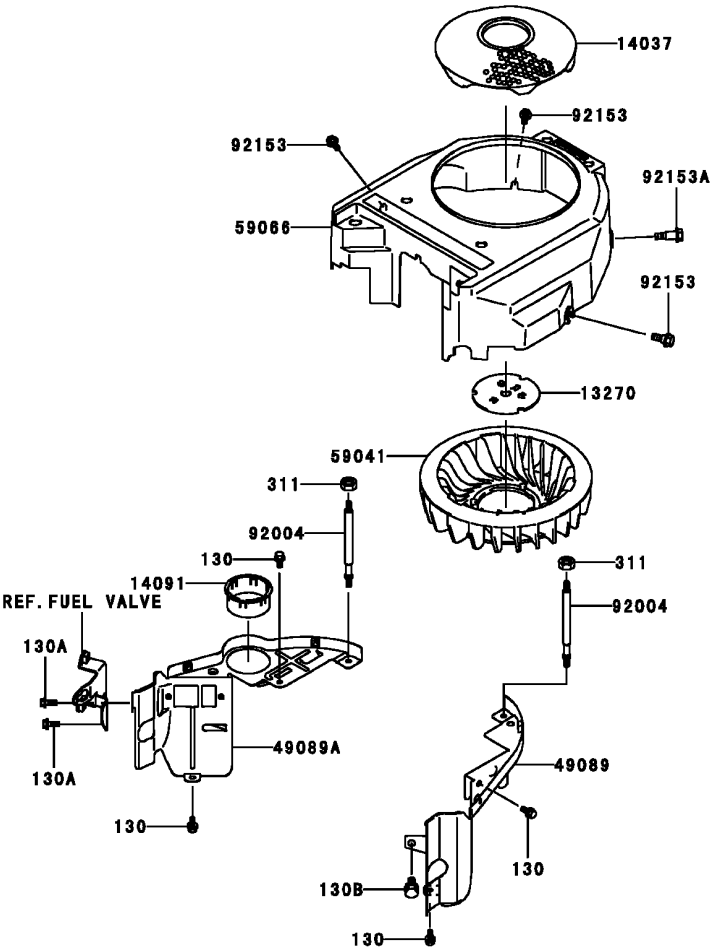


Cooling Equipment Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description				
❸13270	13270-7007	1	Plate				
❸14037	14037-7021-9H	1	Screen				
❸14091	14091-7009	1	Cover				
❸49089	49089-7044	1	Shroud-Engine				
❸49089A	49089-7045	1	Shroud-Engine				
❸59041	59041-7010	1	Fan				
❸59066	59066-7023	1	Housing-Fan				
❸92004	92004-7007	2	Stud				
❸92153	92153-7007	3	Bolt				
❸92153A	92153-7008	1	Bolt				
❸130	130B0612	4	Bolt-Flanged				
❸130A	130B0616	2	Bolt-Flanged				
❸130B	130B0816	1	Bolt-Flanged				
❸311	311F0600	2	Nut-Hex				

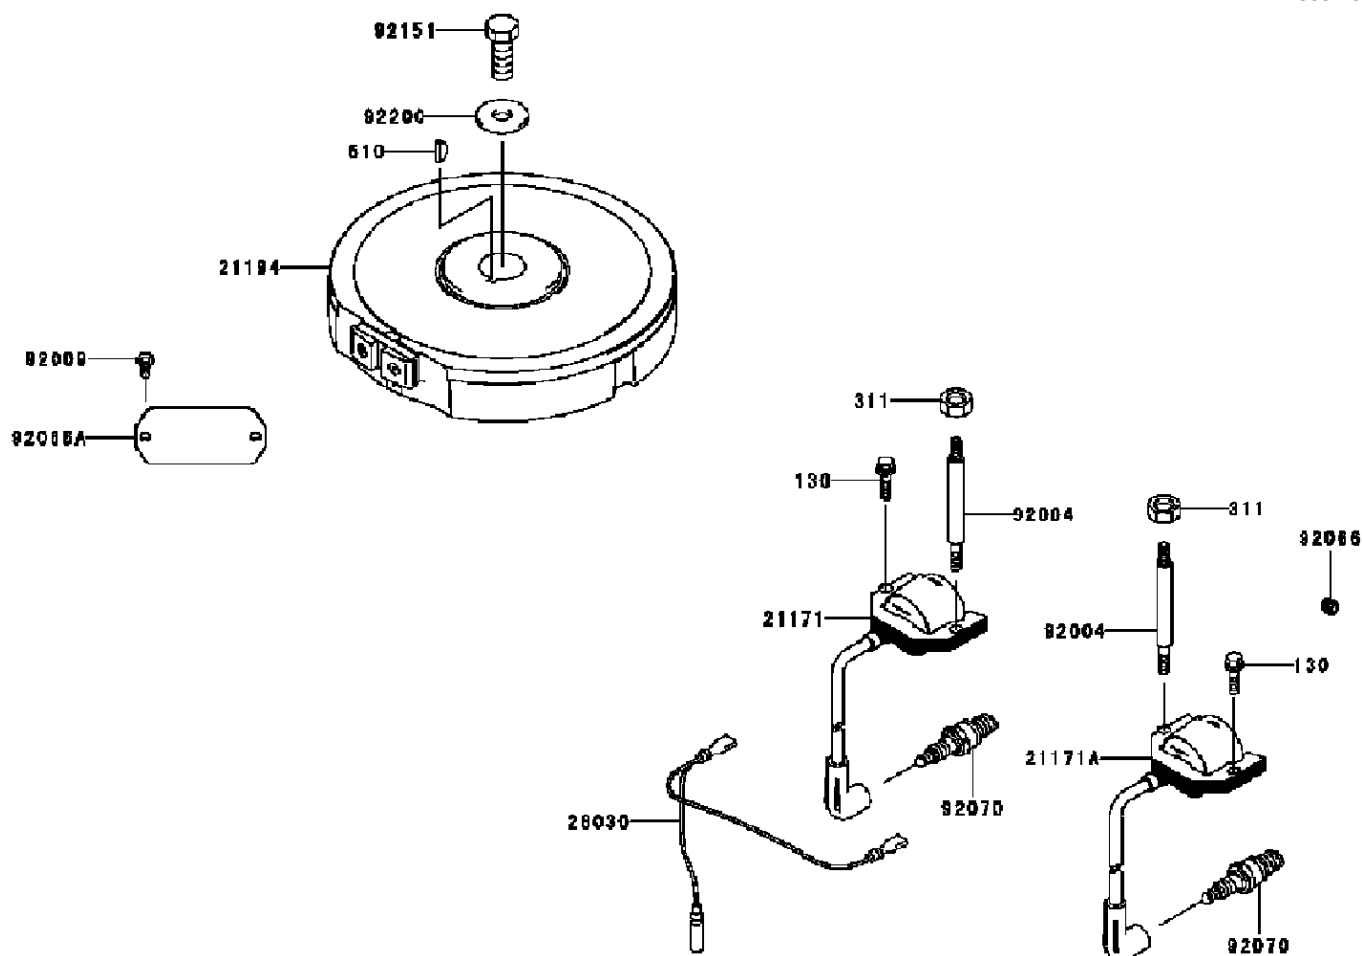


Electric-Equipment Assembly Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description				
⑨211171	21171-7013	1	Ignition Coil ASM				
⑨211171A	21171-7014	1	Ignition Coil ASM				
⑨21194	21194-7013	1	Flywheel-Comp				
⑨26030	26030-7001	1	Harness				
⑨92004	92004-7008	2	Stud				
⑨92009	92009-2308	2	Screw				
⑨92066	92066-7002	1	Plug				
⑨92066A	92066-7005	1	Plug				
⑨92070	92070-7003	2	Plug-Spark (Rcj8y, Solid)				
⑨92151	92151-2097	1	Bolt (12x30)				
⑨92200	92200-7002	1	Washer				
⑨130	130B0620	2	Bolt-Flanged				
⑨311	311F0600	2	Nut-Hex				
⑨510	510A5100	1	Key-Woodruff				

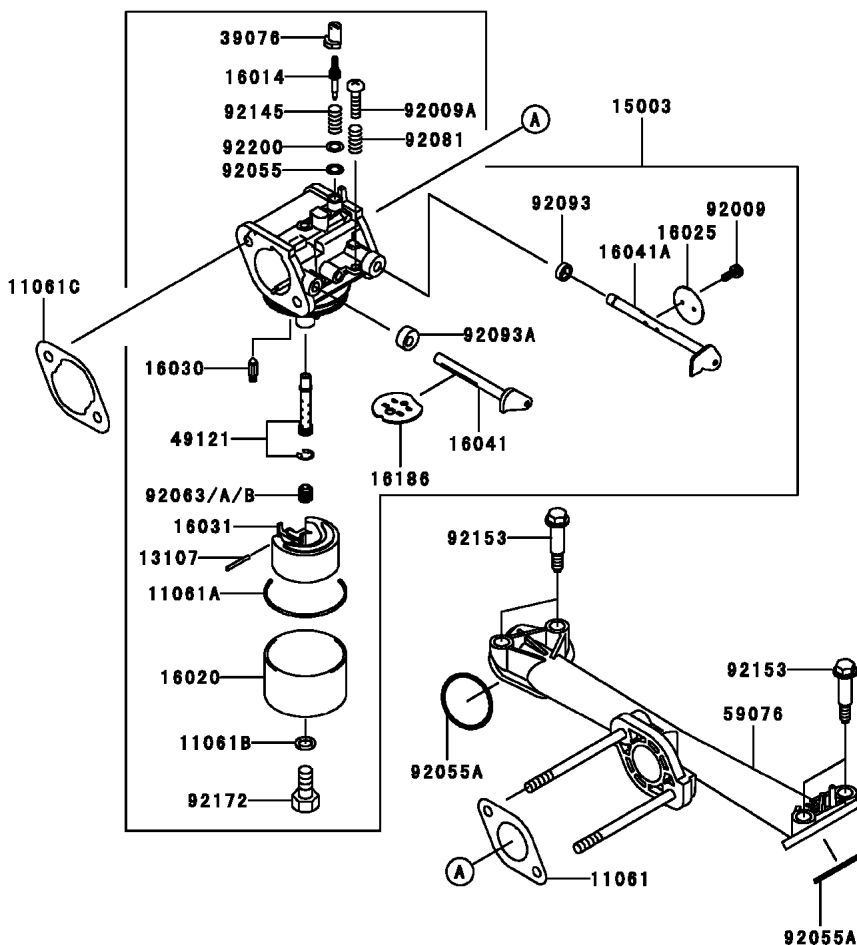

Carburetor Assembly Kawasaki FH381V-AS25


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
①11061	11061-7004	1	Gasket-Insulator	②92081	92081-2234	1	Spring
①11061A	11061-7009	1	Gasket-Chamber	②92093	92093-2100	1	Seal
①11061B	11061-7010	1	Gasket-Screw	②92093A	92093-7003	1	Seal
①11061C	11061-7018	1	Gasket-Cleaner, Air	②92145	92145-7015	1	Spring
①13107	13107-7018	1	Shaft	②92153	92153-7009	4	Bolt
①15003	15003-7054	1	Carburetor-ASM	②92172	92172-7002	1	Screw
①16014	16014-7002	1	Screw-Pilot	②92200	92200-7014	1	Washer
①16020	16020-7003	1	Chamber-Float				
①16025	16025-7006	1	Valve-Throttle				
①16030	16030-7003	1	Valve-Float				
①16031	16031-7002	1	Float				
①16041	16041-7016	1	Shaft-Carburetor, Choke				
①16041A	16041-7018	1	Shaft-Carburetor, Throttle				
①16186	16186-7002	1	Choke Valve ASM				
①39076	39076-7001	1	Limiter				
①49121	49121-7002	1	Nozzle-Main				
①59076	59076-7005	1	Manifold-Intake				
②92009	92009-2083	2	Screw				
②92009A	92009-2349	1	Screw				
②92055	92055-2174	1	Ring-O				
②92055A	92055-7007	2	Ring-O, Id=31				
②92063	92063-7027	1	Jet-Main-#78				
②92063A	92063-7030	1	Jet-Main-#75				
②92063B	92063-7031	1	Jet-Main-#72				

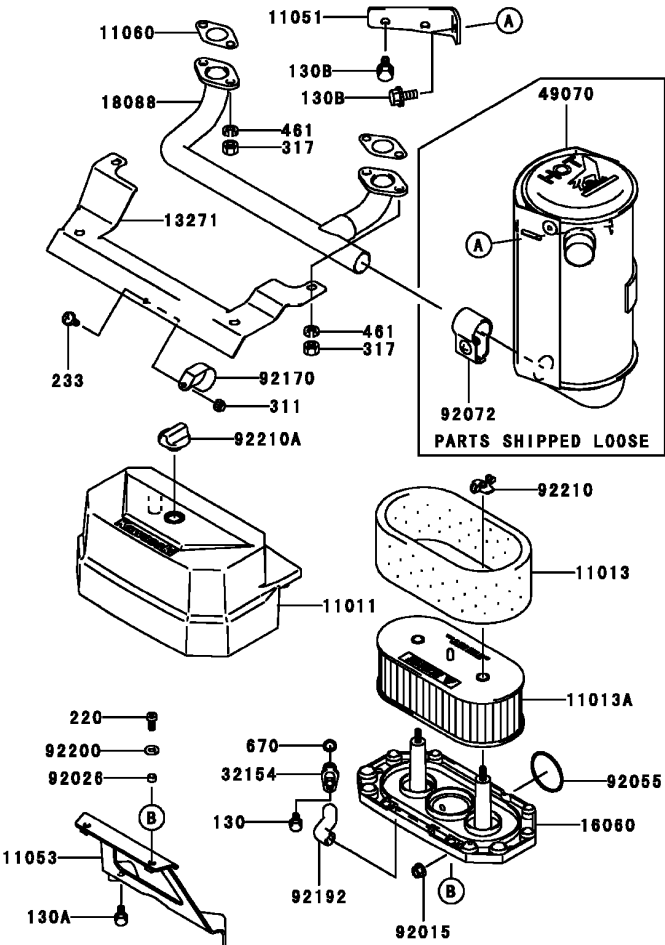

Air-Filter and Muffler Assembly


Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
③11011	11011-7035	1	Case-Air Filter	③220	220B0614	2	Screw-Pan (Cross)
③11013	11013-7025	1	Element-Filter, Air	③233	233B0416	1	Screw-Pan
③11013A	11013-7031	1	Element-Filter, Air	③311	311B0400	1	Nut-Hex
③11051	11051-7005-9H	1	Bracket	③317	317R0800	4	Nut-Hex, Small
③11053	11053-7022	1	Bracket	③461	461F0800	4	Washer-Spring
③11060	11060-7021	2	Gasket-Muffler	③670	670B2010	1	O-Ring
③13271	13271-7022	1	Plate				
③16060	16060-7016	1	Pipe-Intake				
③18088	18088-7001	1	Pipe-Exhaust				
③32154	32154-7006	1	Pipe				
③49070	49070-7015	1	Muffler-Comp				
③92015	92015-1193	2	Nut				
③92026	92026-7001	2	Spacer, 6.2x7.9x5				
③92055	92055-7015	1	O-Ring				
③92072	92072-7008	1	Band				
③92170	92170-7002	1	Clamp				
③92192	92192-7010	1	Tube				
③92200	92200-2070	2	Washer				
③92210	92210-7004	2	Nut				
③92210A	92210-7019	1	Nut				
③130	130B0610	1	Bolt-Flanged				
③130A	130B0612	2	Bolt-Flanged				
③130B	130B0816	2	Bolt-Flanged				

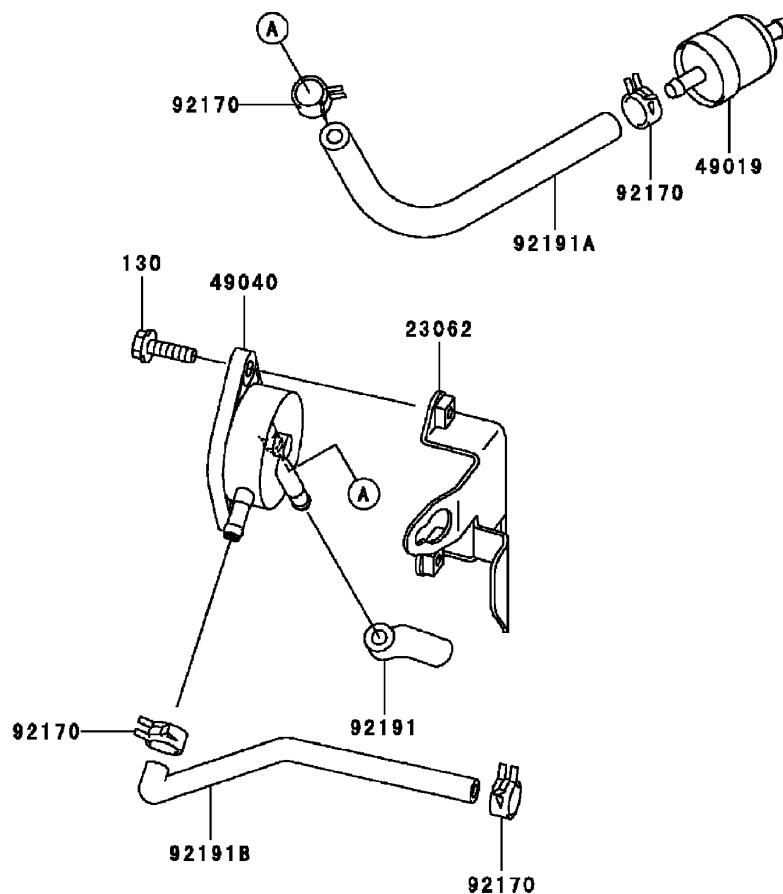

Fuel Tank/Fuel Valve Assembly Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description				
③23062	23062-7004-9H	1	Bracket-Comp				
③49019	49019-7001	1	Filter-Fuel				
③49040	49040-7001	1	Pump-Fuel				
③92170	92170-2088	4	Clamp				
③92191	92191-7002	1	Tube				
③92191A	92191-7003	1	Tube (6.35x12.7x160)				
③92191B	92191-7004	1	Tube				
③130	130B0620	2	Bolt-Flanged				

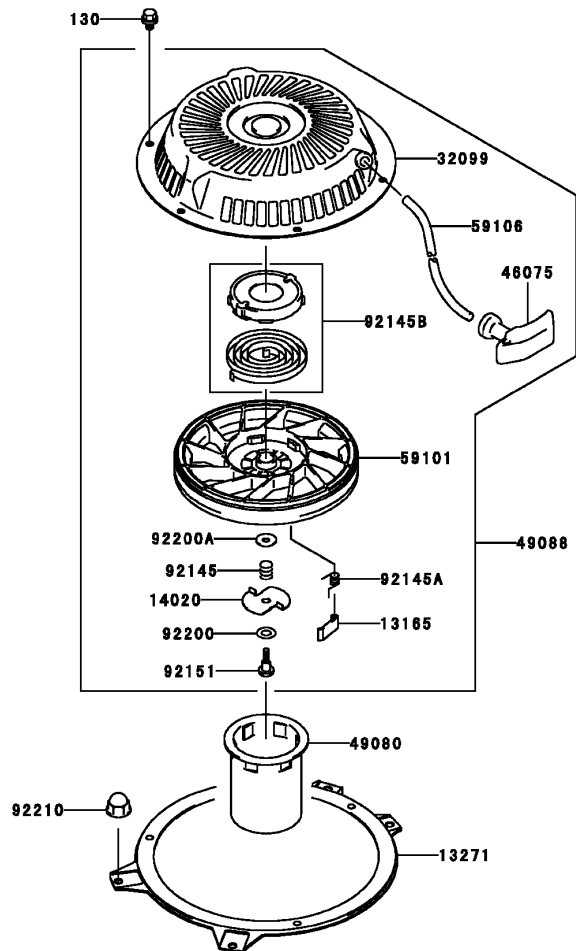

Starter Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description				
③13165	13165-7001	2	Pawl-Starter, Recoil				
③13271	13271-7003-9H	1	Plate				
③14020	14020-7001	1	Retainer				
③32099	32099-7002	1	Case-Starter, Recoil				
③46075	46075-7001	1	Grip-Recoil, Starter				
③49080	49080-7001	1	Pulley-Starting				
③49088	49088-7013	1	Starter-Recoil				
③59101	59101-7001	1	Reel-Recoil				
③59106	59106-7001	1	Rope				
③92145	92145-7006	1	Spring				
③92145A	92145-7007	2	Spring				
③92145B	92145-7008	1	Spring				
③92151	92151-7008	1	Bolt				
③92200	92200-7004	1	Washer				
③92200A	92200-7005	1	Washer				
③92210	92210-0003	4	Nut				
③130	130B0608	3	Bolt-Flanged				

