



Mid-Size ProLine, Pistol Grip, Gear Drive, 13 HP with 36in Side Discharge Mower

Model No. 30519 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Engine and Fuel System Assembly	 3	Lubrication-Equipment Assembly Kawasaki FH381V-AS25	 19
Transmission and Drive Assembly	 4	Cooling Equipment Assembly Kawasaki FH381V-AS25	 20
Wheel Drive Assembly	 6	Electric-Equipment Assembly Kawasaki FH381V-AS25	 21
Upper Handle Assembly	 8	Control-Equipment Assembly Kawasaki FH381V-AS25	 22
Handle Decal Assembly No. 106-2742	 10	Carburetor Assembly Kawasaki FH381V-AS25	 23
Deck Assembly	 11	Air-Filter and Muffler Assembly Kawasaki FH381V-AS25	 24
Deflector Assembly No. 107-4140	 12	Fuel Tank/Fuel Valve Assembly Kawasaki Model FH381V-AS25	 25
Front Caster and Blade Brake Assembly	 13	Starter Assembly Kawasaki FH381V-AS25	 26
Spindle Assembly	 15	Decal Assembly Kawasaki FH381V-AS25	 27
Cylinder and Crankcase Assembly Kawasaki FH381V-AS25	 16	Attachments and Accessories List	 28
Piston and Crankshaft Assembly Kawasaki FH381V-AS25	 17		
Valve and Camshaft Assembly Kawasaki FH381V-AS25	 18		


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
CARR. carriage	NI. nylon insert
DEG. degrees	PPH. phillips pan head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power take off
HF. hex flange	RH. right hand
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HS. hex	STD. standard
HSBH. hex socket button head	TAP. self tapping
HSFH. hex socket flat head	TTH. torx truss head
HSH. hex socket head	WH. wing head
HWH. hex washer head	
HWHTF. hex washer head thread forming	
HYD. hydraulic	

Footnotes


- | | |
|--|--|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Obtain parts from Peerless Transmissions, model 700-070A | ❹ Obtain parts from your local Kawasaki dealer |

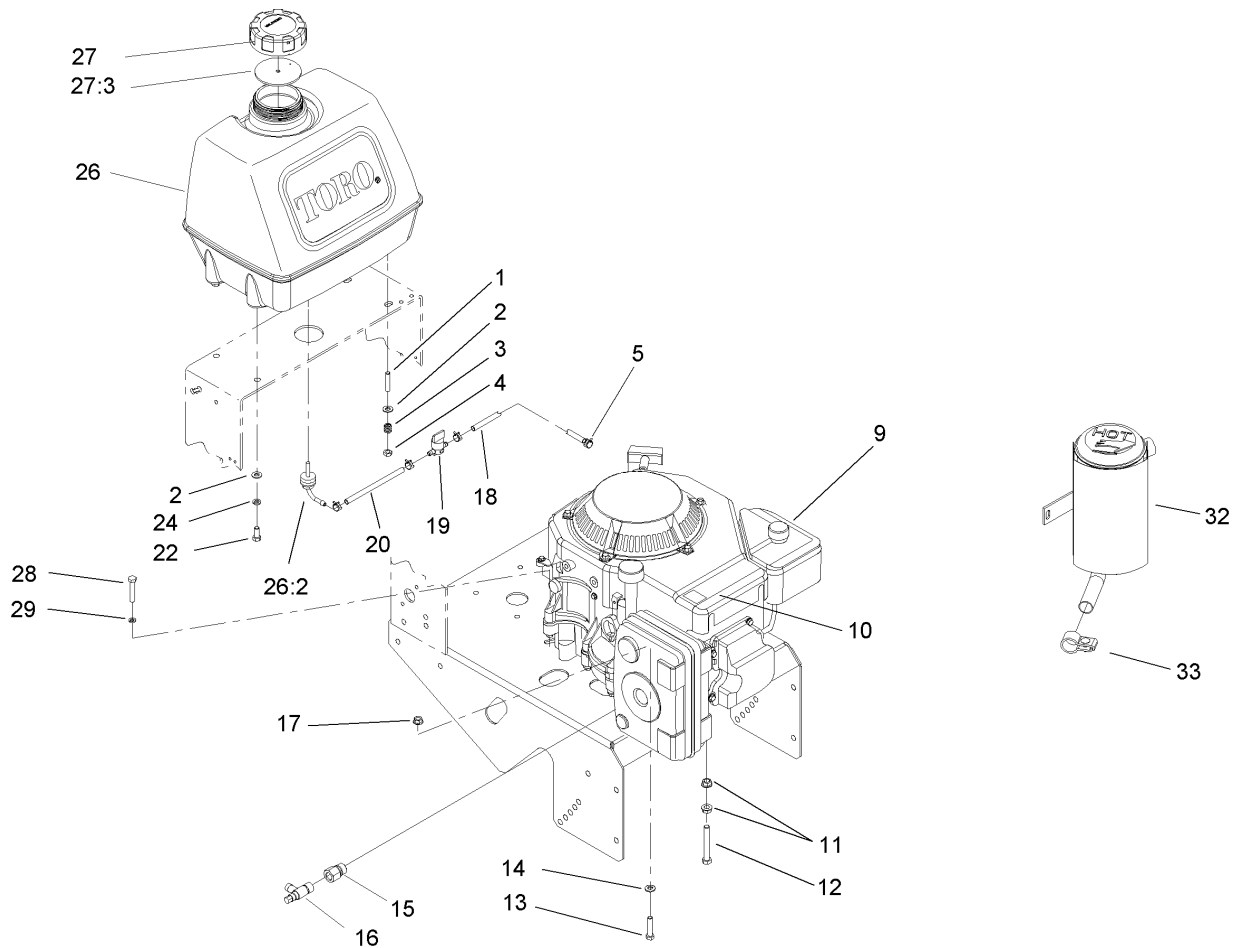

Engine and Fuel System Assembly

Ref	Part No.	Qty.	Description
1	1-633023	2	Stud
2	3256-23	4	Washer-Flat
3	1-633349	2	Spring-Tank, Fuel
4	3296-47	2	Nut-Lock, NI
5	1-303077	4	Clamp
9		1	Engine-Kawasaki, Fh381v-As25
10	63-8440	1	Decal-Surface, Hot
11	3290-357	2	Nut-HHF
12	323-13	1	Screw-HH
13	322-7	4	Screw-HH
14	1-303334	4	Washer-Spring
15	103-1966	1	Adapter
16	103-1965	1	Valve-Drain, Oil
17	32128-20	4	Nut-HF
18	1-303022	1	Hose-Fuel
19	1-603770	1	Valve-Fuel
20	1-603955	1	Hose-Fuel
22	322-3	2	Screw-HH
24	1-805005	2	Washer-Lock
26	106-0730	1	Fuel Tank ASM
26:2	103-2605	1	Fitting-Fuel, Bulkhead
27	88-3980	1	Gas Cap ASM
27:3	88-4010	1	Gasket-Cap, Gas
28	33113-016	1	Screw-HH


Ref	Part No.	Qty.	Description
29	1-805004	1	Washer-Lock
32	100-6467	1	Muffler
33	103-5465	1	Clamp-Muffler
99	1-303335	1	Tie-Plastic

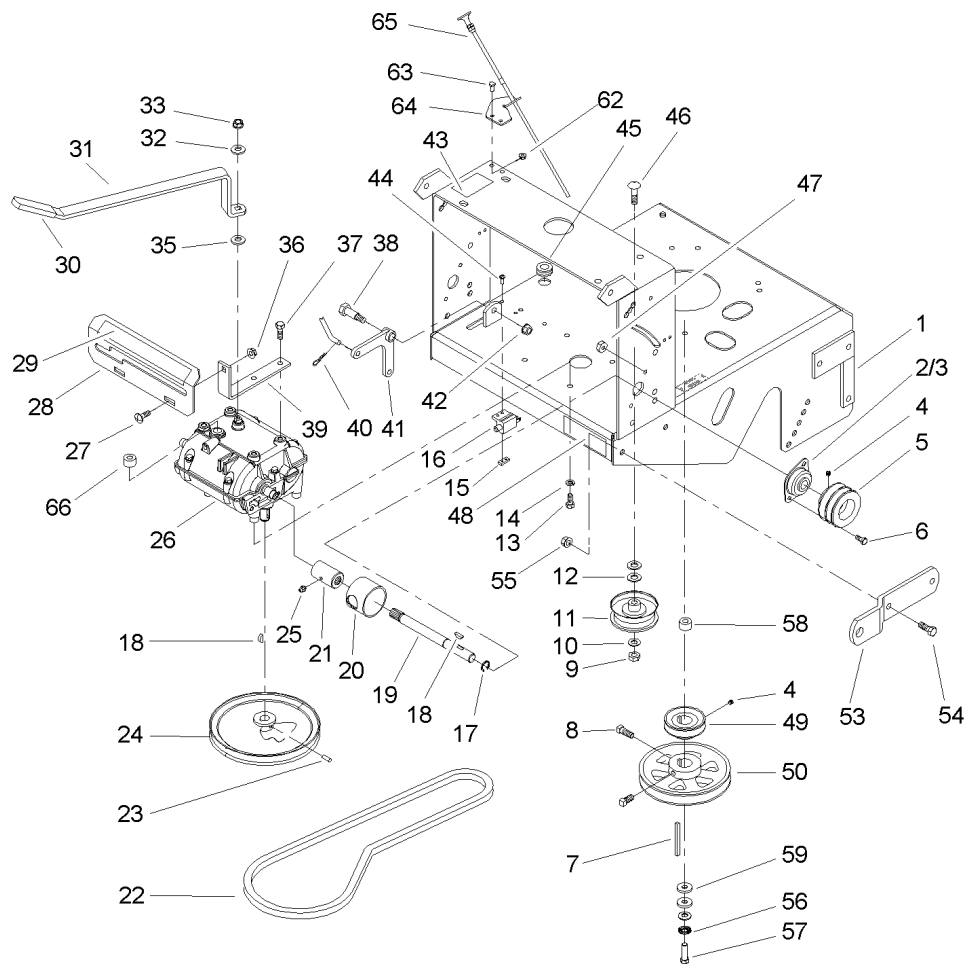

Transmission and Drive Assembly


Ref	Part No.	Qty.	Description
1	103-2923-01	1	Frame-Deck, Rear
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	3	Screw-Set
5	103-6511	2	Sheave-Transmission
6	321-3	4	Screw-HH
7	103-4177	1	Key-Machine
8	3242-4	2	Screw-Set, SQH
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	1-633181	1	Plate-Tapped
16	1-513051	1	Switch-Open, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission

Ref	Part No.	Qty.	Description
25	302-19	2	Fitting-Grease
26	1-323500	1	Transmission
27	3230-1	2	Bolt-CARR
28	1-323387-03	1	Plate-Shift
29	105-4104	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock
35	1-323379	1	Washer
36	32128-20	2	Nut-HF
37	9264964	4	Screw-Hwh, Thread Cut
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	1	Pin-Hair
41	1-303186	1	Bellcrank
42	3290-357	1	Nut-HHF
43	95-2814	1	Decal-Shut Off, Fuel
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission

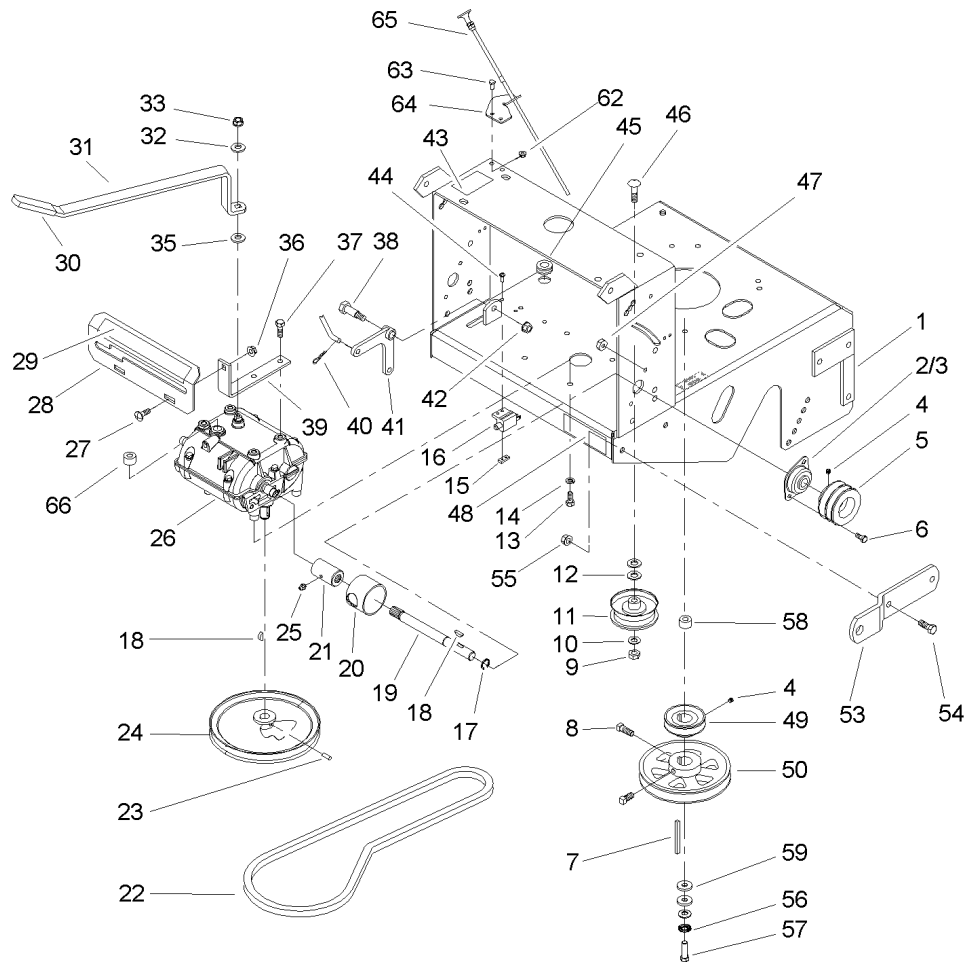

Transmission and Drive Assembly (continued)


Ref	Part No.	Qty.	Description
50	103-1668	1	Sheave
53	1-323318-01	2	Hitch-Sulky
54	323-6	4	Screw-HH
55	3290-357	4	Nut-HHF
56	1-603610	2	Washer-Spring
57	3212-6	1	Screw-HH
58	1-633453	1	Spacer-Clutch
59	1-373034	2	Washer
62	32128-33	2	Nut-HF
63	321-3	2	Screw-HH
64	103-1797-01	1	Bracket-Cable, Choke
65	103-1796	1	Cable-Choke
66	1-303282	1	Switch-Start, Neutral

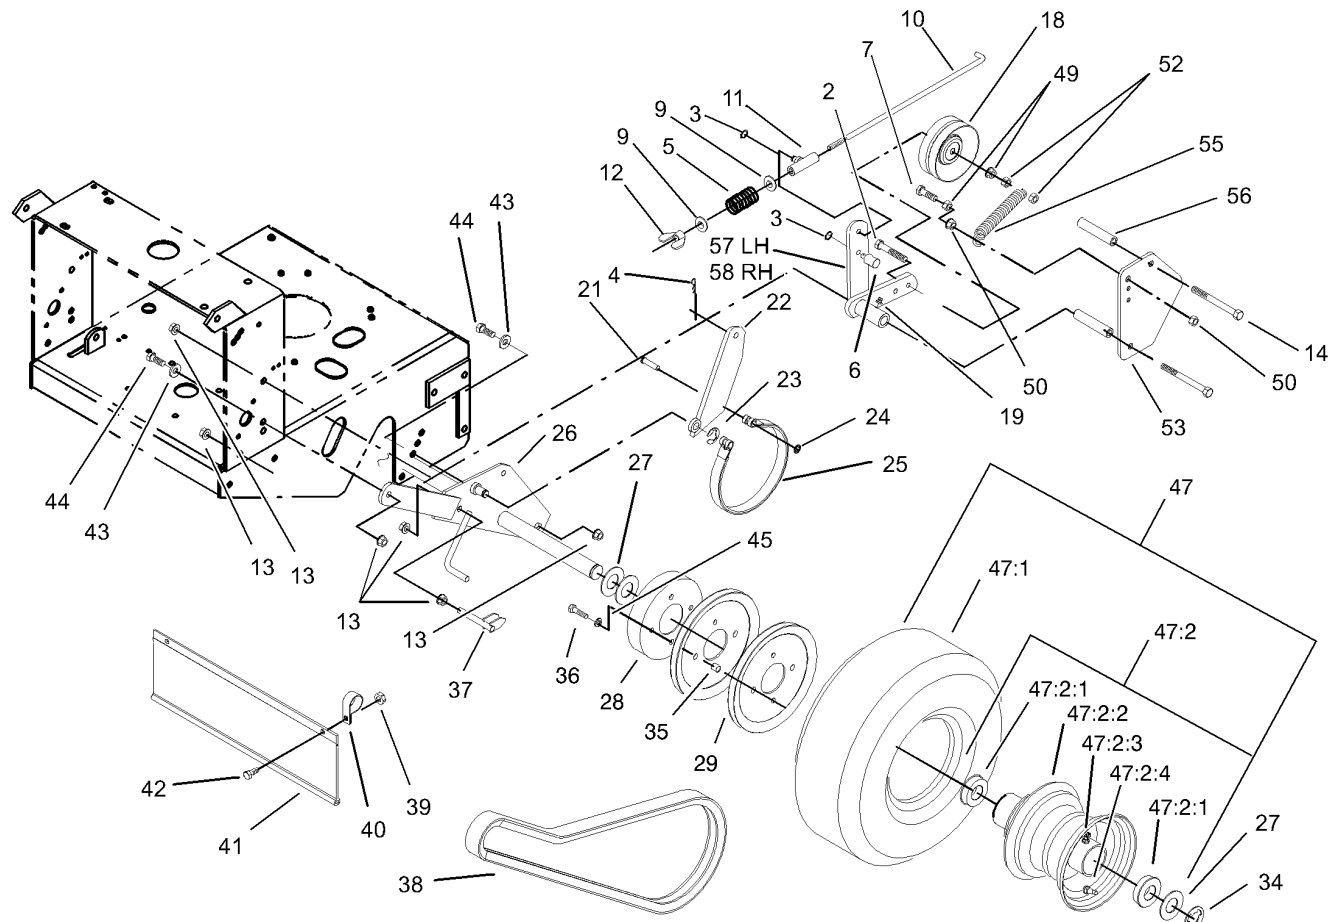

Wheel Drive Assembly

Ref	Part No.	Qty.	Description
2	99-8664	2	Screw-HH
3	32151-47	6	Ring-Retaining
4	1-806003	4	Pin-Hair
5	1-323245	2	Spring-Compression
6	103-1864	2	Swivel-Lever, Drive
7	322-6	2	Screw-HH
9	3256-23	4	Washer-Flat
10	1-323548	2	Linkage-Brake
11	1-322125	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	14	Nut-HHF
14	323-39	4	Screw-HH
18	1-323277	2	Idler-Wheel, Drive
19	302-19	2	Fitting-Grease
21	1-323307	2	Pin-Clevis
22	103-1611-03	2	Arm-Brake ASM
23	32120-47	2	Ring-Retaining, External
24	1-803051	2	Nut-Push
25	1-323262	2	Band-Brake
26	1-322117-03	1	Axle
27	1-543436	8	Washer-Spacer
27	1-523157	6	Washer-Spacer
28	1-323261	2	Drum-Brake
29	1-323253	4	Sheave-Wheel, Drive


Ref	Part No.	Qty.	Description
34	1-808519	2	Ring-Snap
35	1-323260	8	Spacer-Sheave, Wheel
36	322-6	8	Screw-HH
37	1-412358	2	Scraper
38	1-323631	2	V-Belt
39	3296-29	4	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
45	1-373034	8	Washer
47		2	Wheel And Tire ASM
47:1	1-323720	1	Tire-Turfmaster
47:2	1-323328	1	Wheel And Hub ASM
47:2:1	1-323329	2	Bearing-Flanged
47:2:2		1	Rim ASM
47:2:3		1	Fitting-Grease
47:2:4		1	Stem-Valve
49	3290-357	2	Nut-HHF
50	32128-20	2	Nut-HF
52	3296-39	8	Nut-Lock, NI
53	1-323287-01	2	Shield-Wheel, Drive
55	1-603402	2	Spring-Extension

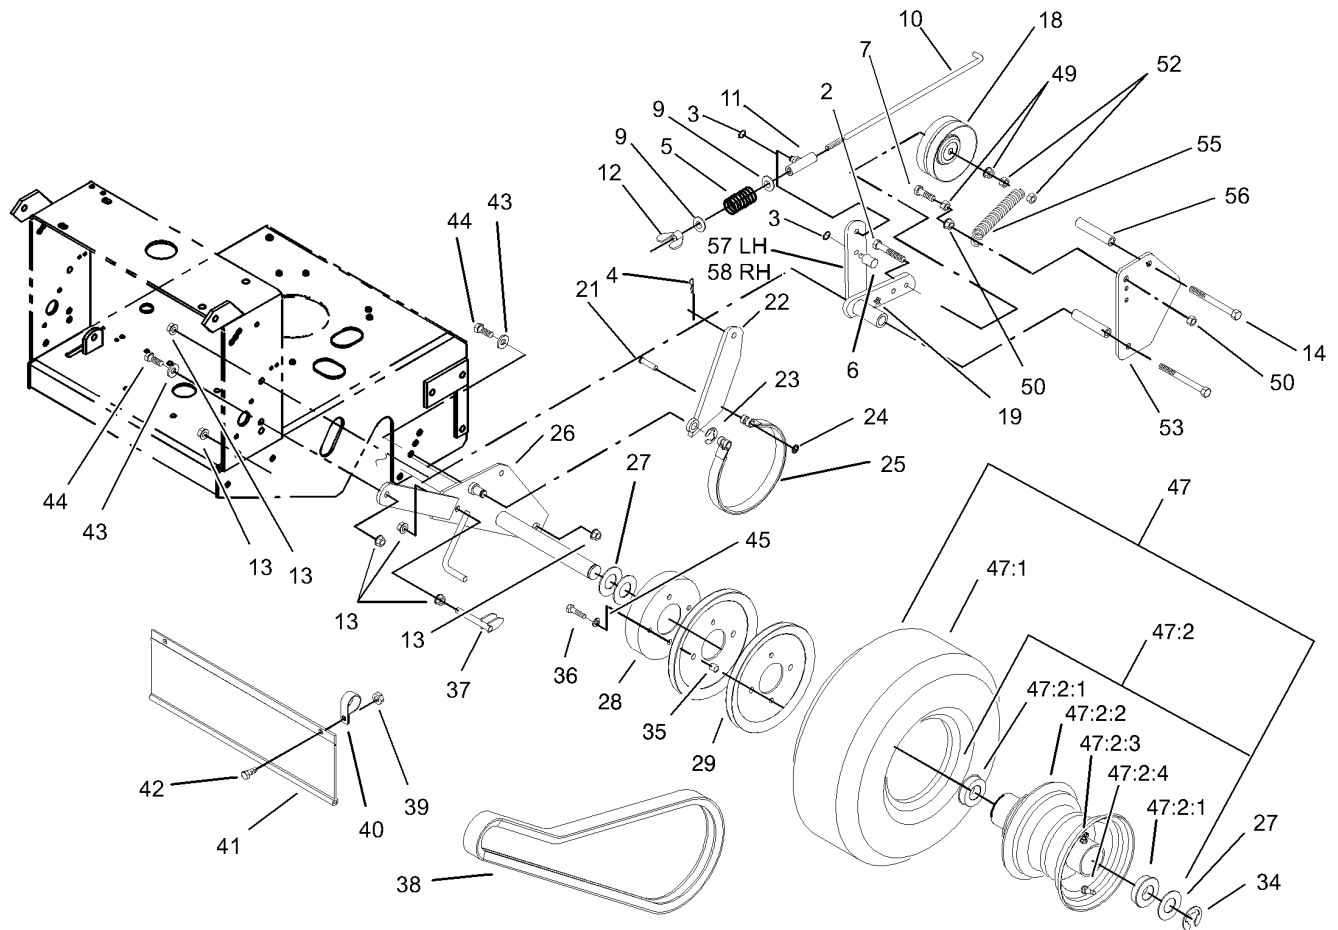

Wheel Drive Assembly (continued)

Ref	Part No.	Qty.	Description
56	1-323283	4	Spacer-Shield
57	103-1615-03	1	Arm-Idler, LH
58	103-1616-03	1	Arm-Idler, RH


--	--	--	--

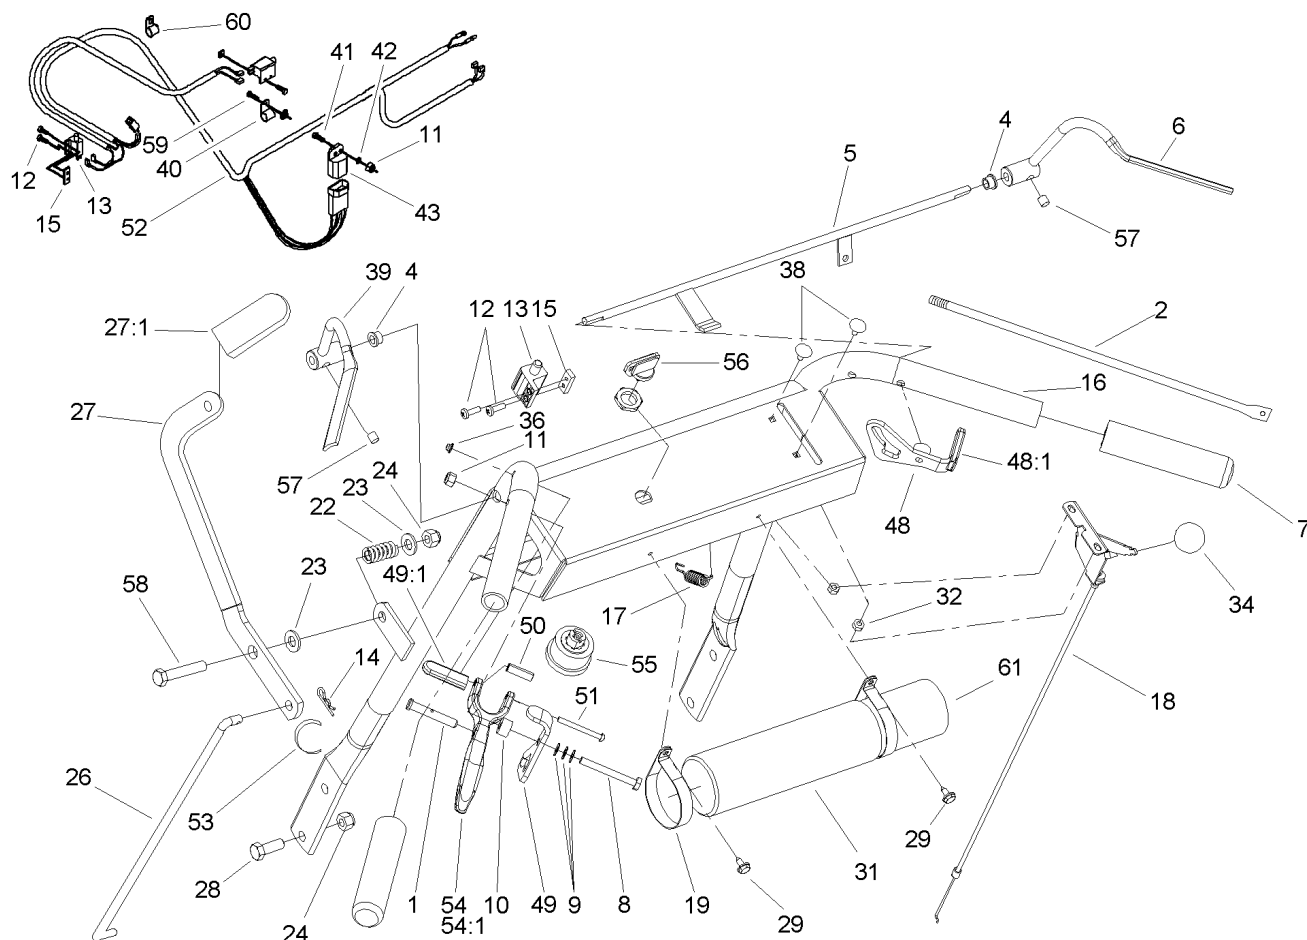

Upper Handle Assembly


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	1-808286	2	Pin-Clevis	28	323-6	4	Screw-HH
2	1-323359	2	Linkage-Wheel, Drive	29	32104-76	2	Screw
4	1-303365	2	Bushing-Nylon	31	104-7050	1	Housing-Manual
5	106-2717-03	1	Operator Presence Control Rod	32	3296-2	2	Nut-Lock
6	1-412185-03	1	Lever-RH	34	1-513592	1	Knob-Ball
7	1-303097	2	Grip-Handle	36	1-803001	2	Nut
8	321-18	2	Screw-HH	38	1-807513	2	Bolt-CARR
9	1-303435	6	Washer-Spring	39	1-412183-03	1	Lever-LH
10	1-323549	2	Spacer	40	1-323229	1	Clip-Loom
11	3296-42	3	Nut-Lock, NI	41	321-4	1	Screw-HH
12	3290-500	2	Screw-PPH	42	3256-22	1	Washer-Flat
13	1-513051	1	Switch-Open, Normally	43	1-323430	1	Module-Interlock
14	1-806003	2	Pin-Hair	48	1-324280	1	RH Thumb Latch ASM
15	1-633181	1	Plate-Tapped	48:1	1-303019	1	Grip-Latch
16	106-2742	1	Handle ASM	49	1-324279	1	LH Thumb Latch ASM
17	1-303363	1	Spring-Extension	49:1	1-303019	1	Grip-Latch
18	1-633696	1	Throttle Cable ASM	50	1-806340	2	Pin-Roll
19	2412-120	2	R-Clamp	51	1-808250	2	Pin-Drive Lever
22	1-303160	1	Spring-Compression	52	103-1610	1	Harness-Wiring
23	3256-4	2	Washer-Flat	53	1-303088	1	Clip-Cable
24	3296-39	5	Nut-Lock, NI	54	1-302006	2	Drive Lever ASM
26	1-323298	1	Linkage-Blade, Upper	54:1	1-303021	1	Grip-Lever, Drive
27	1-322157	1	Lever ASM	55	1-403121	1	Switch-Key
27:1	1-303020	1	Grip-Lever	56	63-8360	1	Key-Ignition



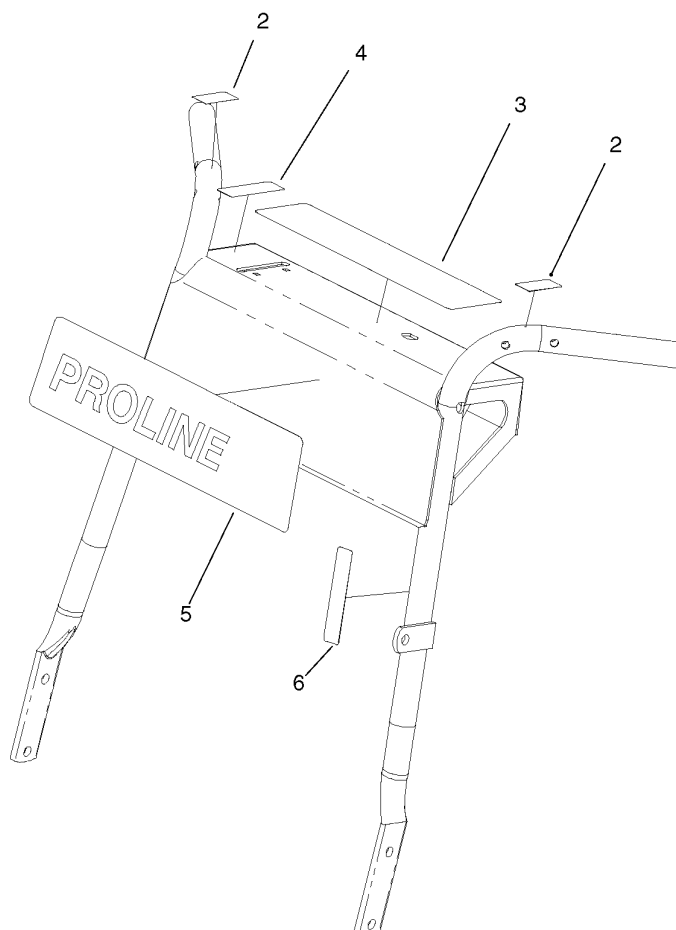


Handle Decal Assembly No. 106-2742

Ref	Part No.	Qty.	Description
2	105-4111	2	Decal-Lock, Neutral
3	106-2737	1	Decal-Warning
4	106-2733	1	Decal-Throttle
5	106-0750	1	Decal
6	95-5537	1	Decal-Engage, Deck

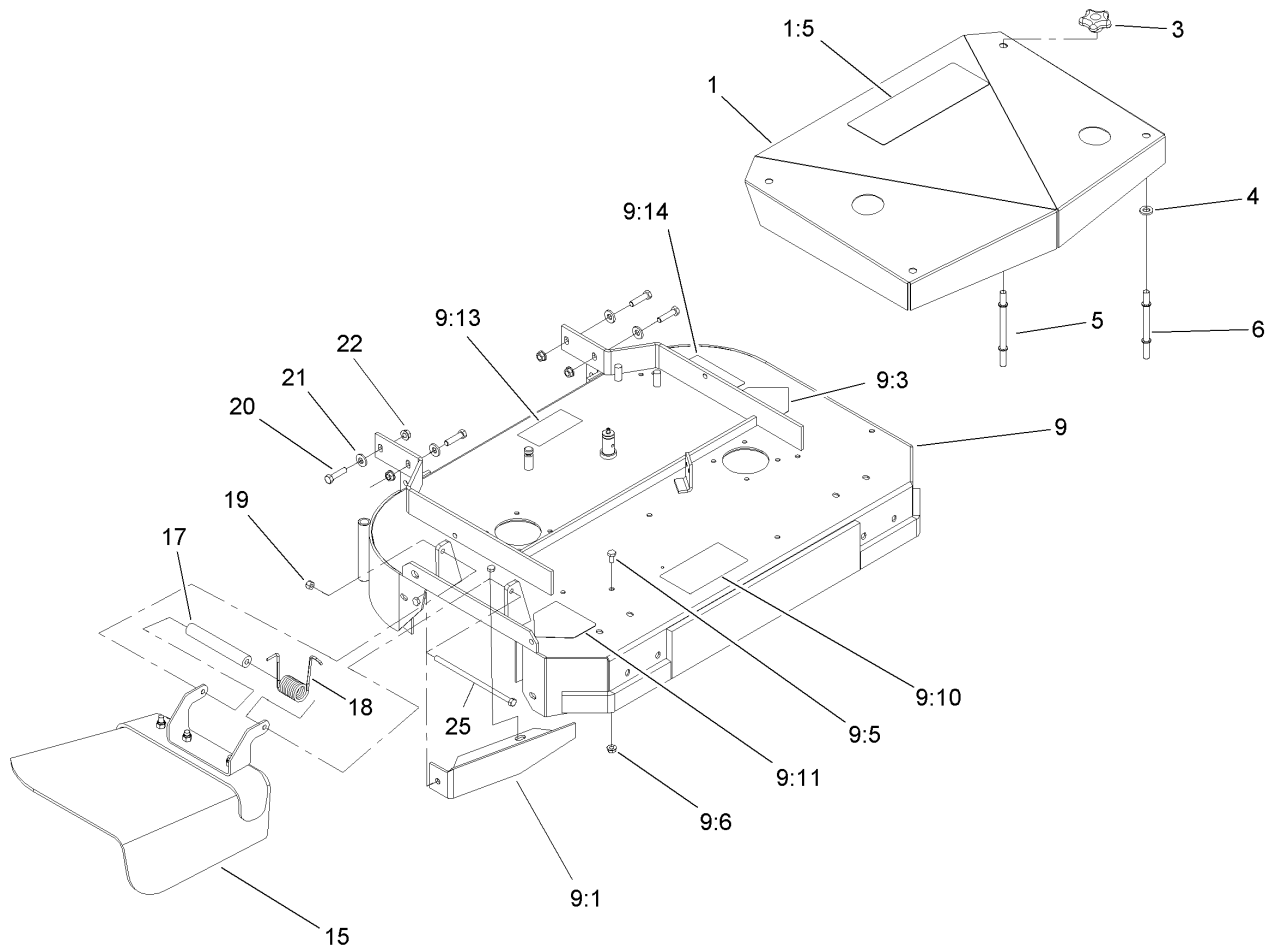


Deck Assembly

Ref	Part No.	Qty.	Description				
1	1-304258	1	Belt Shield ASM				
1:5	106-0711	1	Decal				
3	106-4161	4	Knob-Handle				
4	1-323417	4	Washer				
5	1-303536	2	Stud-Shield, Belt (Long)				
6	1-303537	2	Stud-Shield, Belt (Short)				
9	107-4214	1	Deck ASM				
9:1	1-302189-01	1	Baffle-Dogleg				
9:3	1-403005	1	Decal-Danger				
9:5	322-2	8	Screw-HH				
9:6	32128-20	8	Nut-HF				
9:10	66-1340	1	Decal-Danger				
9:11	93-1122	1	Decal-Danger				
9:13	98-3296	1	Decal-Routing, Belt				
9:14	98-5130	1	Decal-Torque, Bolt				
15	107-4140	1	Deflector ASM				
17	105-4622	1	Spacer				
18	104-8554	1	Spring-Torsion				
19	3296-29	1	Nut-Lock, NI				
20	323-8	6	Screw-HH				
21	98-5975	6	Washer-Belleville				
22	3290-357	6	Nut-HHF				
25	322-50	1	Screw-HH				

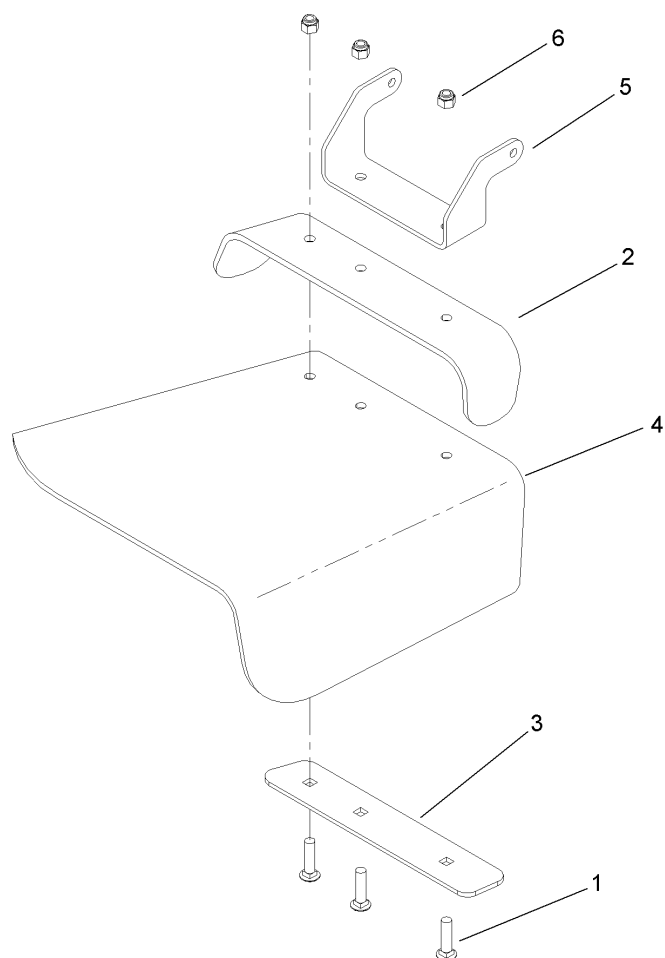

Deflector Assembly No. 107-4140


Ref	Part No.	Qty.	Description
1	3231-4	3	Screw-CARR
2	107-4138-01	1	Strap-Deflector, Top
3	107-4139-01	1	Strap-Discharge
4	107-4137	1	Deflector-Rubber
5	107-4164-01	1	Bracket-Mounting, Deflector
6	3296-39	3	Nut-Lock, NI

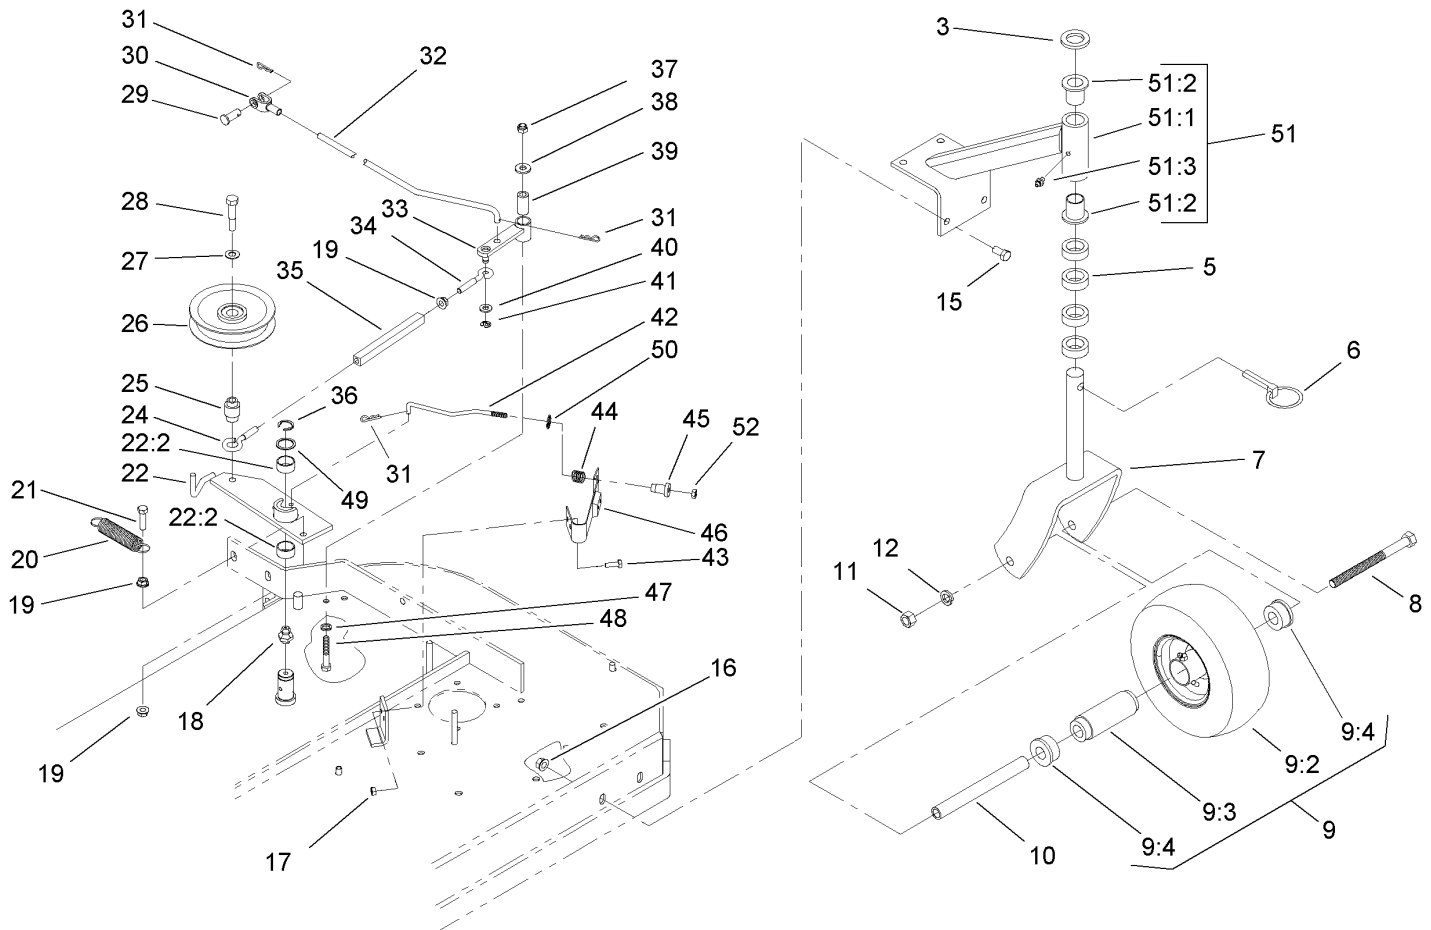

Front Caster and Blade Brake Assembly


Ref	Part No.	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	1-322145-01	2	Fork
8	325-20	2	Screw-HH
9	1-513648	2	Wheel And Tire ASM
9:2	1-513808	1	Tire
9:3	1-513809	1	Bearing
9:4	1-513810	2	Bushing
10	1-513547	2	Spacer
11	3217-9	2	Nut-Hex
12	3253-7	2	Washer-Lock
15	323-4	8	Screw-HH
16	3290-357	8	Nut-HHF
17	3296-42	2	Nut-Lock, NI
18	302-19	1	Fitting-Grease
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	322-6	2	Screw-HH
22	103-3600	1	Idle Arm ASM
22:2	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-Thread, LH
25	1-303434	1	Bushing-Engagement
26	1-603843	1	Pulley-Idle

Ref	Part No.	Qty.	Description
27	98-5975	1	Washer-Belleville
28	702809	1	Screw-Cap
29	1-808280	1	Pin-Clevis
30	1-303105	1	Yoke-Adjustable
31	1-806003	3	Pin-Hair
32	1-323303	1	Linkage-Arm
33	1-322235	1	Arm-Assist
34	1-303238	1	Eyebolt-Thread, RH
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Snap
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot
40	3256-23	1	Washer-Flat
41	32120-35	1	E-Ring
42	1-323715	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad / Spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On

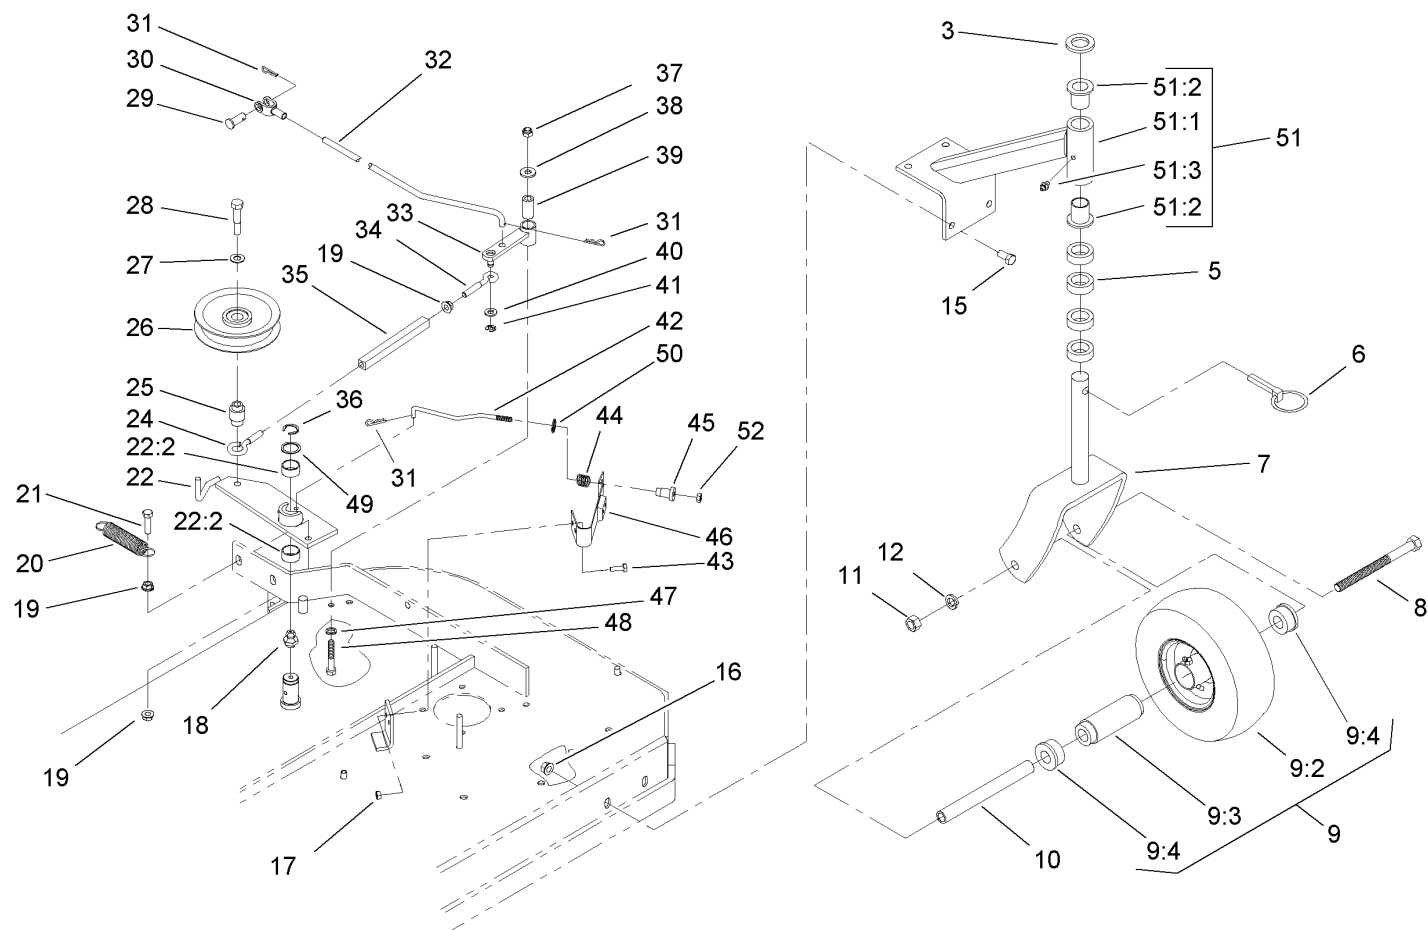


Front Caster and Blade Brake Assembly (continued)

Ref	Part No.	Qty.	Description				
51	1-302203	2	Support ASM				
51:1		1	Support-Caster				
51:2	1-303514	2	Bearing-Flanged				
51:3	302-52	1	Fitting-Grease				
52	3296-56	1	Nut-Lock, NI				

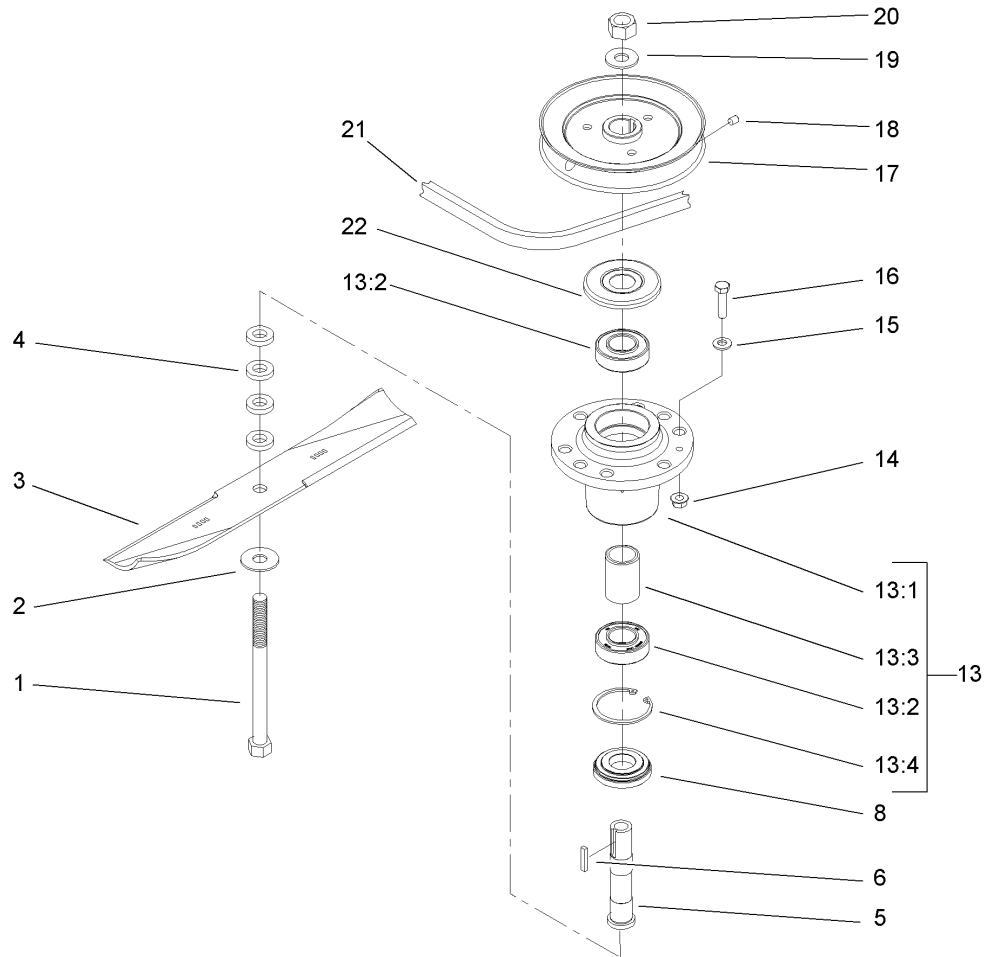


Spindle Assembly

Ref	Part No.	Qty.	Description				
1	1-800861	2	Screw-Cap, HH				
2	1-513208	2	Washer-Spring				
3	103-2528	2	Blade-Notched				
3	103-2508	2	Blade-Lift, Low				
4	1-323539	8	Spacer-Drive, Blade				
5	1-323529	2	Tube-Spindle, Short				
6	1-807267	2	Key				
8	103-2535	2	Spacer-Guard, Bottom				
13		2	Cutter Housing ASM				
13:1	103-7975	1	Housing-Spindle				
13:2	103-2477	2	Bearing-Ball				
13:3	103-2534	1	Spacer-Bearing				
13:4	32120-8	1	Ring-Snap				
14	32128-20	8	Nut-HF				
15	1-303334	8	Washer-Spring				
16	322-6	8	Screw-HH				
17	1-403183	2	Sheave				
18	1-803310	2	Screw-Set				
19	1-323339	2	Washer-Retainer, Sheave				
20	3219-6	2	Nut-Hex				
21	1-323737	1	Belt-Blade, Drive				
22	103-1330	2	Guard-Bearing, Top				

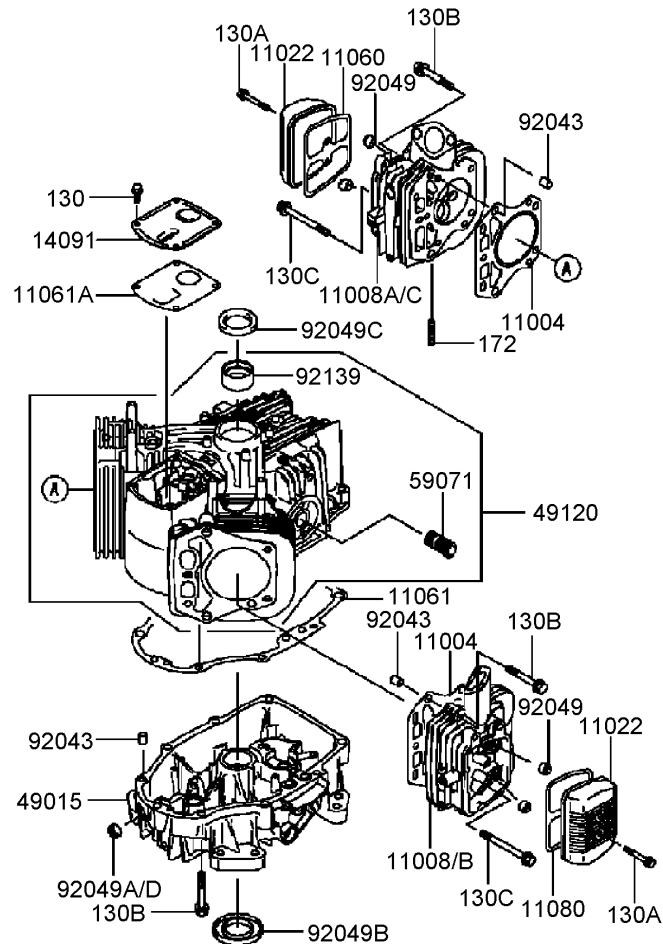


Cylinder and Crankcase Assembly Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
④11004	11004-7008	2	Gasket-Head	④172	172G0818	4	Bolt-Stud
④11008	11008-7011	1	Head-Comp-Cylinder, No.2				
④11008A	11008-7017	1	Head-Comp-Cylinder, No.1				
④11008B	11008-7021	1	Head-Comp-Cylinder, No. 2				
④11008C	11008-7022	1	Head-Comp-Cylinder, No. 1				
④11022	11022-7003	2	Case-Rocker				
④11060	11060-7001	2	Gasket-Case, Rocker				
④11061	11061-7007	1	Gasket-Cover, Crankcase				
④11061A	11061-7008	1	Gasket-Breather				
④14091	14091-7007	1	Cover				
④49015	49015-7032	1	Cover-Crankcase				
④49120	49120-7015	1	Crankcase-Comp				
④59071	59071-2079	1	Joint				
④92043	92043-7001	6	Pin				
④92049	92049-7001	4	Seal-Oil, Rvc2 (6x11x10.2)				
④92049A	92049-7005	1	Seal-Oil,so 8x14x5 HS				
④92049B	92049-7015	1	Seal-Oil, Sd (35x62x8 L Hs)				
④92049C	92049-7016	1	Seal-Oil, Sd (35x48x8 R Hs)				
④92049D	92049-7019	1	Seal-Oil, So (8x14x5 Hs)				
④92139	92139-7002	1	Bushing				
④130	130B0612	4	Bolt-Flanged				
④130A	130B0640	4	Bolt-Flanged				
④130B	130T0850	17	Bolt-Flanged				
④130C	130T0875	2	Bolt-Flanged				

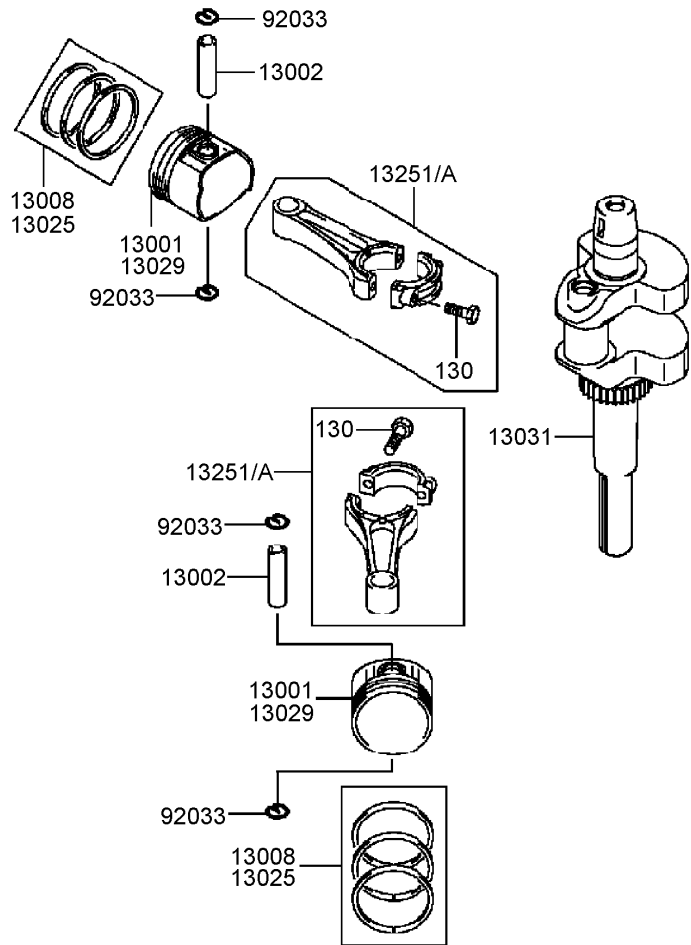


Piston and Crankshaft Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description				
④13001	13001-7009	2	Piston-Engine				
④13002	13002-7001	2	Pin-Piston				
④13008	13008-7001	2	Ring Set-Piston				
④13025	13025-7003	1	Ring Set-Piston (L,0.50)				
④13029	13029-7005	1	Piston-Engine (L,0.50)				
④13031	13031-7033	1	Crankshaft-Comp				
④13251	13251-7007	2	Connecting Rod ASM				
④13251A	13251-7008	2	Connecting Rod ASM (U/s=0.50)				
④92033	92033-7005	4	Ring-Snap				
④130	130G0630	4	Bolt-Flanged				

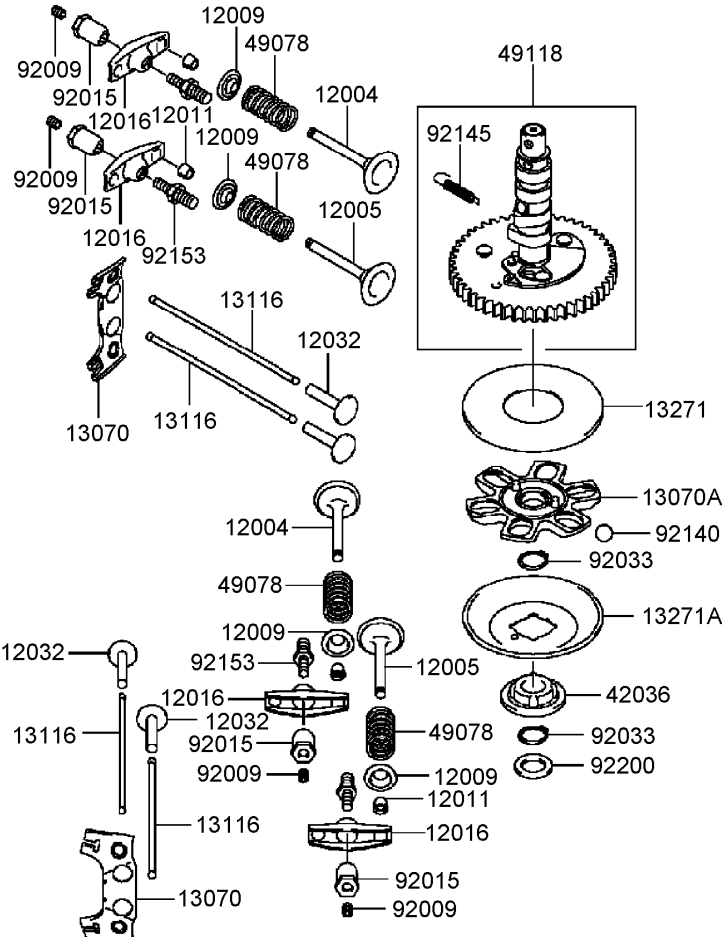


Valve and Camshaft Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description				
④12004	12004-7003	2	Valve-Intake				
④12005	12005-7003	2	Valve-Exhaust				
④12009	12009-7001	4	Retainer-Spring, Valve				
④12011	12011-2056	8	Collet				
④12016	12016-7001	4	Arm-Rocker				
④12032	12032-7001	4	Tappet				
④13070	13070-7001	2	Guide				
④13070A	13070-7004	1	Guide				
④13116	13116-2057	4	Rod-Push				
④13271	13271-7007	1	Plate				
④13271A	13271-7021	1	Plate-Governor				
④42036	42036-7009	1	Sleeve				
④49078	49078-7001	4	Spring-Valve, Engine				
④49118	49118-7009	1	Camshaft-Comp				
④92009	92009-2341	4	Screw				
④92015	92015-2253	4	Nut				
④92033	92033-7001	2	Ring-Snap				
④92140	92140-7002	6	Ball				
④92145	92145-7001	1	Spring				
④92153	92153-7019	4	Bolt				
④92200	92200-7001	1	Washer				

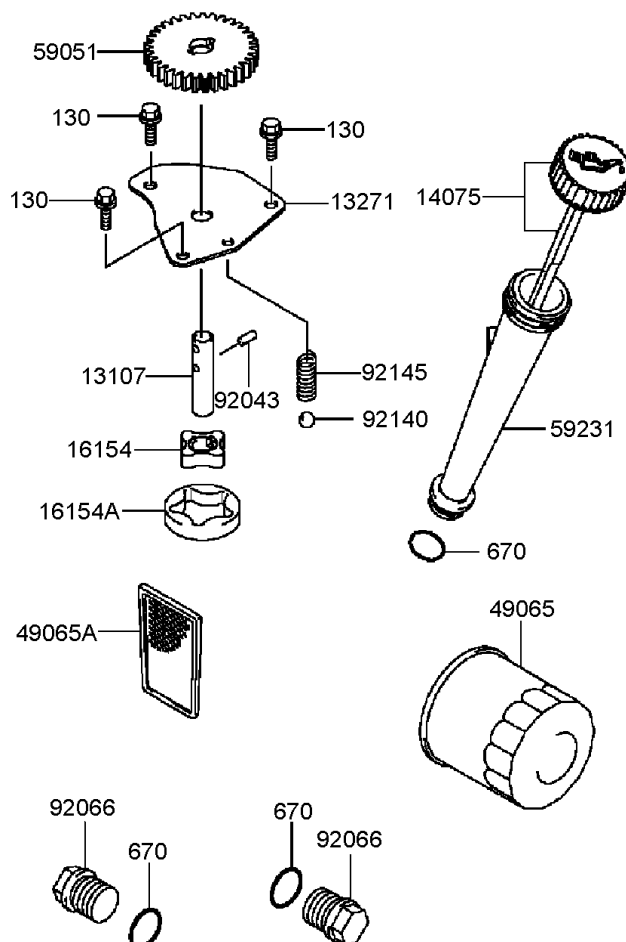


Lubrication-Equipment Assembly Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description				
④13107	13107-7009	1	Shaft				
④13271	13271-7017	1	Plate				
④14075	14075-7009	1	Cap ASM				
④16154	16154-2053	1	Rotor-Pump (In)				
④16154A	16154-2054	1	Rotor-Pump (Out)				
④49065	49065-2078	1	Filter-Oil				
④49065A	49065-7004	1	Filter-Oil				
④59051	59051-7011	1	Gear-Spur				
④59231	59231-7003	1	Filler				
④92043	92043-7003	2	Pin				
④92066	92066-7003	2	Plug				
④92140	92140-7003	1	Ball				
④92145	92145-7002	1	Spring				
④130	130B0612	3	Bolt-Flanged				
④670	670D2016	3	O-Ring (16mm)				

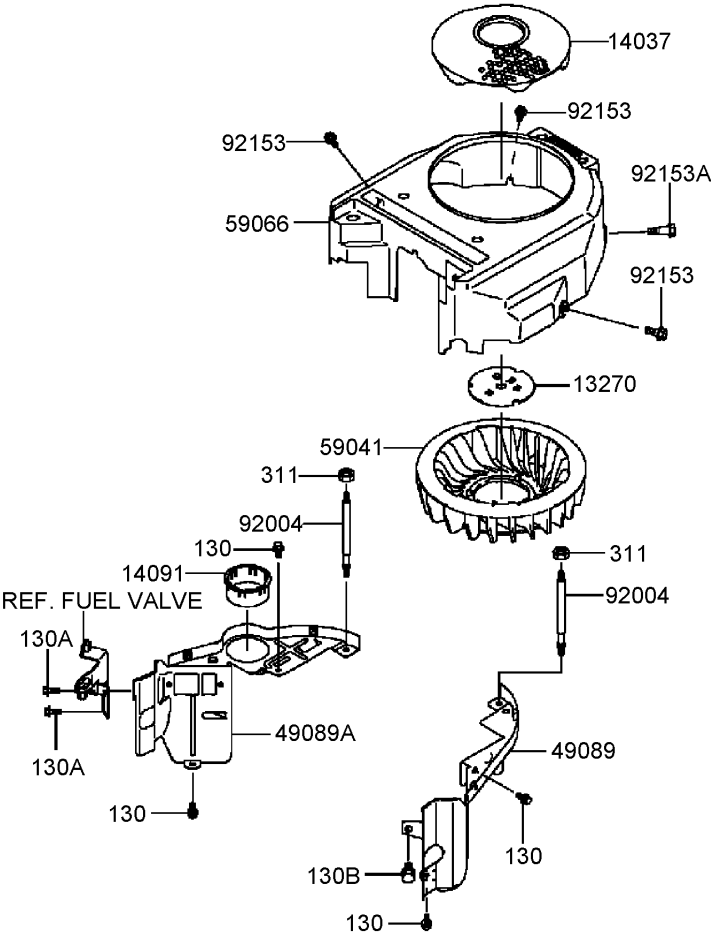


Cooling Equipment Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description				
④13270	13270-7007	1	Plate				
④14037	14037-7021-9H	1	Screen				
④14091	14091-7009	1	Cover				
④49089	49089-7044	1	Shroud-Engine				
④49089A	49089-7045	1	Shroud-Engine				
④59041	59041-7010	1	Fan				
④59066	59066-7023	1	Housing-Fan				
④92004	92004-7007	2	Stud				
④92153	92153-7007	3	Bolt				
④92153A	92153-7008	1	Bolt				
④130	130B0612	4	Bolt-Flanged				
④130A	130B0616	2	Bolt-Flanged				
④130B	130B0816	1	Bolt-Flanged				
④311	311F0600	2	Nut-Hex				

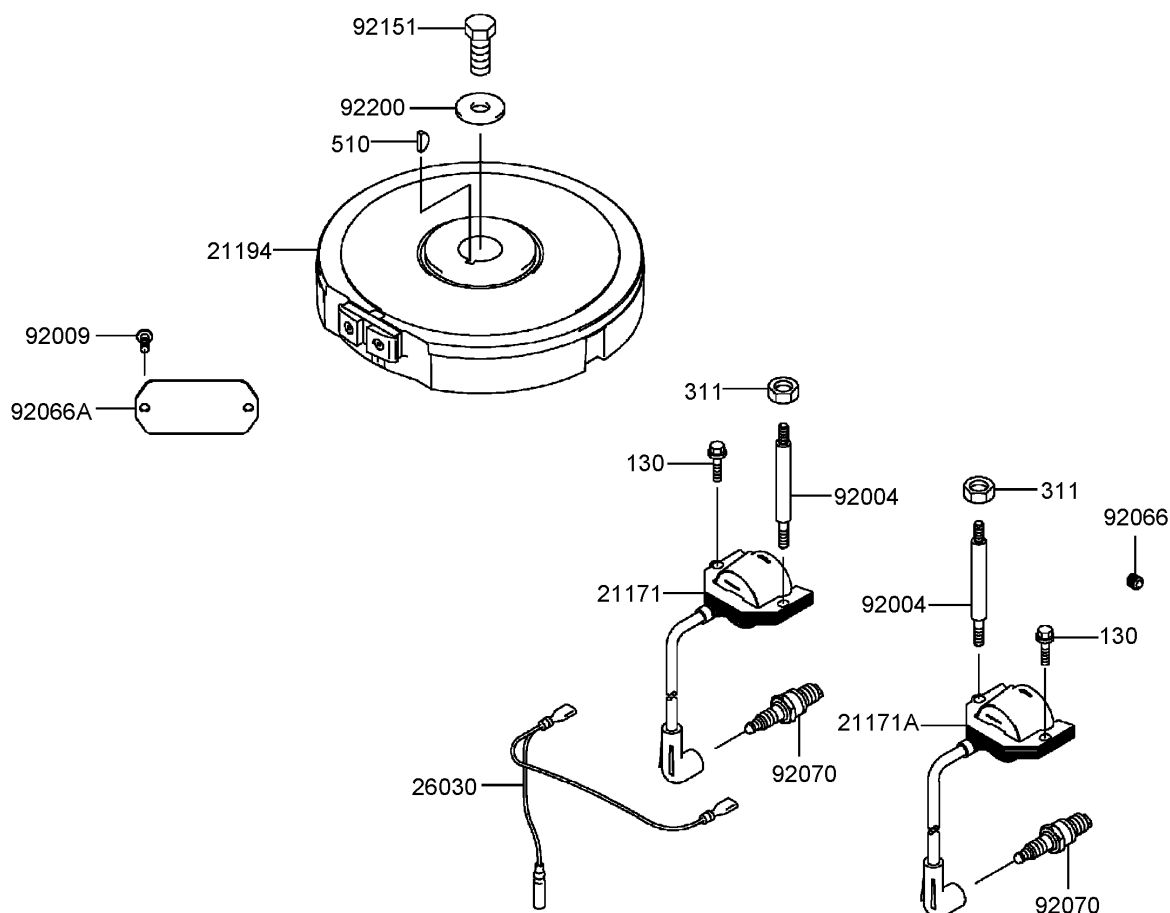


Electric-Equipment Assembly Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description				
④21171	21171-7013	1	Ignition Coil ASM				
④21171A	21171-7014	1	Ignition Coil ASM				
④21194	21194-7013	1	Flywheel-Comp				
④26030	26030-7001	1	Harness				
④92004	92004-7008	2	Stud				
④92009	92009-2308	2	Screw				
④92066	92066-7002	1	Plug				
④92066A	92066-7005	1	Plug				
④92070	92070-7003	2	Plug-Spark (Rcj8y, Solid)				
④92151	92151-2097	1	Bolt (12x30)				
④92200	92200-7002	1	Washer				
④130	130B0620	2	Bolt-Flanged				
④311	311F0600	2	Nut-Hex				
④510	510A5100	1	Key-Woodruff				

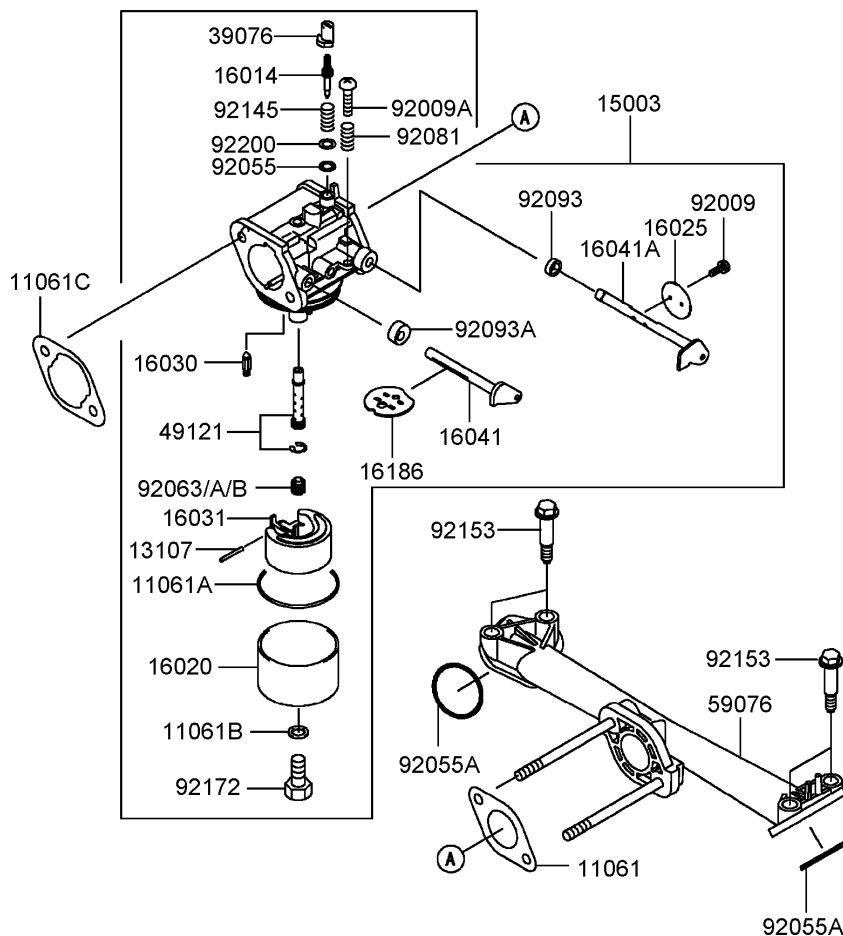

Carburetor Assembly Kawasaki FH381V-AS25


Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
④11061	11061-7004	1	Gasket-Insulator	④92081	92081-2234	1	Spring
④11061A	11061-7009	1	Gasket-Chamber	④92093	92093-2100	1	Seal
④11061B	11061-7010	1	Gasket-Screw	④92093A	92093-7003	1	Seal
④11061C	11061-7018	1	Gasket-Cleaner, Air	④92145	92145-7015	1	Spring
④13107	13107-7018	1	Shaft	④92153	92153-7009	4	Bolt
④15003	15003-7054	1	Carburetor ASM	④92172	92172-7002	1	Screw
④16014	16014-7002	1	Screw-Pilot	④92200	92200-7014	1	Washer
④16020	16020-7003	1	Chamber-Float				
④16025	16025-7006	1	Valve-Throttle				
④16030	16030-7003	1	Valve-Float				
④16031	16031-7002	1	Float				
④16041	16041-7016	1	Shaft-Carburetor, Choke				
④16041A	16041-7018	1	Shaft-Carburetor, Throttle				
④16186	16186-7002	1	Choke Valve ASM				
④39076	39076-7001	1	Limiter				
④49121	49121-7002	1	Nozzle-Main				
④59076	59076-7005	1	Manifold-Intake				
④92009	92009-2083	2	Screw				
④92009A	92009-2349	1	Screw				
④92055	92055-2174	1	O-Ring				
④92055A	92055-7007	2	O-Ring (Id=31)				
④92063	92063-7027	1	Jet-Main (No. 78)				
④92063A	92063-7030	1	Jet-Main (No. 75)				
④92063B	92063-7031	1	Jet-Main (No. 72)				

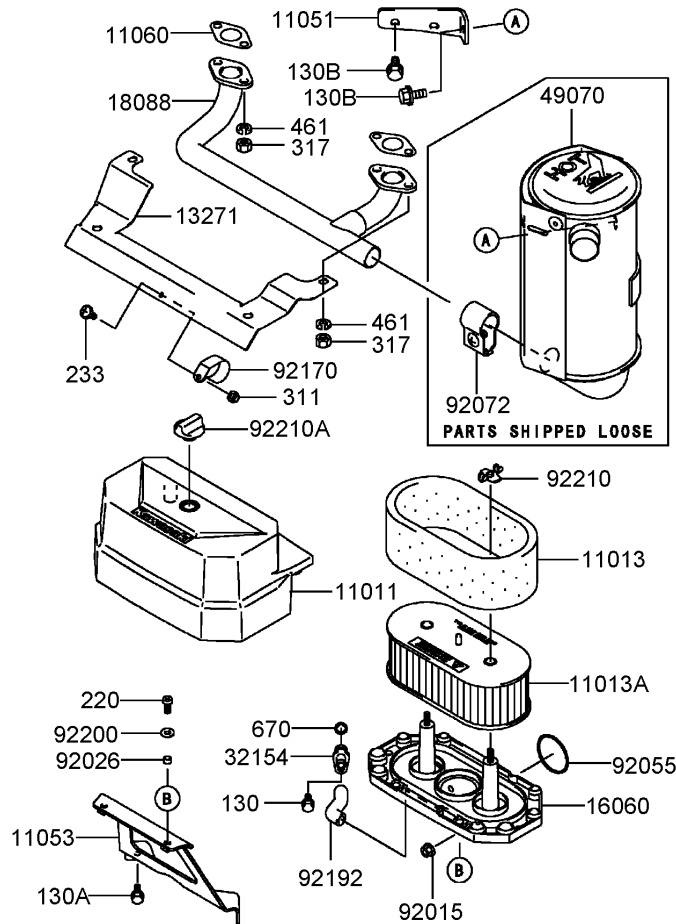

Air-Filter and Muffler Assembly Kawasaki FH381V-AS25


Ref	Part No.	Qty.	Description
④11011	11011-7035	1	Case-Filter, Air
④11013	11013-7025	1	Element-Filter, Air
④11013A	11013-7031	1	Element-Filter, Air
④11051	11051-7005-9H	1	Bracket
④11053	11053-7022	1	Bracket
④11060	11060-7021	2	Gasket-Muffler
④13271	13271-7022	1	Plate
④16060	16060-7016	1	Pipe-Intake
④18088	18088-7001	1	Pipe-Exhaust
④32154	32154-7006	1	Pipe
④49070	49070-7015	1	Muffler-Comp
④92015	92015-1193	2	Nut
④92026	92026-7001	2	Spacer (6.2x7.9x5)
④92055	92055-7015	1	O-Ring
④92072	92072-7008	1	Band
④92170	92170-7002	1	Clamp
④92192	92192-7010	1	Tube
④92200	92200-2070	2	Washer
④92210	92210-7004	2	Nut
④92210A	92210-7019	1	Nut
④130	130B0610	1	Bolt-Flanged
④130A	130B0612	2	Bolt-Flanged
④130B	130B0816	2	Bolt-Flanged

Ref	Part No.	Qty.	Description
④220	220B0614	2	Screw-Pan (Cross)
④233	233B0416	1	Screw-Pan
④311	311B0400	1	Nut-Hex
④317	317R0800	4	Nut-Hex, Small
④461	461F0800	4	Washer-Spring
④670	670B2010	1	O-Ring (10mm)

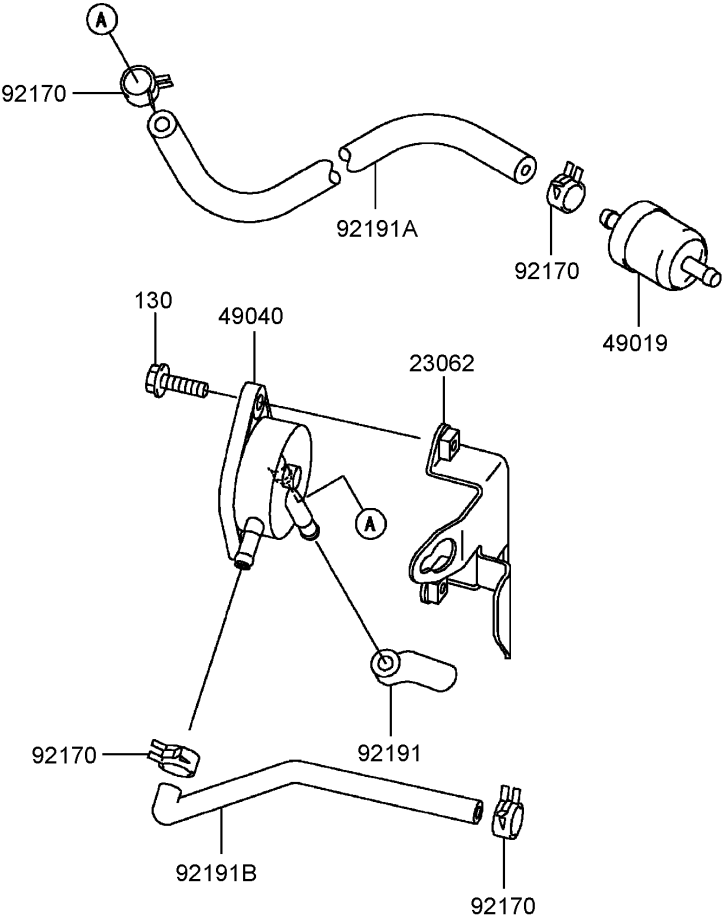

Fuel Tank/Fuel Valve Assembly
Kawasaki Model FH381V-AS25

Ref	Part No.	Qty.	Description				
④23062	23062-7004-9H	1	Bracket-Comp				
④49019	49019-7001	1	Filter-Fuel				
④49040	49040-7001	1	Pump-Fuel				
④92170	92170-2088	4	Clamp				
④92191	92191-7002	1	Tube				
④92191A	92191-7003	1	Tube (6.35x12.7x160)				
④92191B	92191-7004	1	Tube				
④130	130B0620	2	Bolt-Flanged				

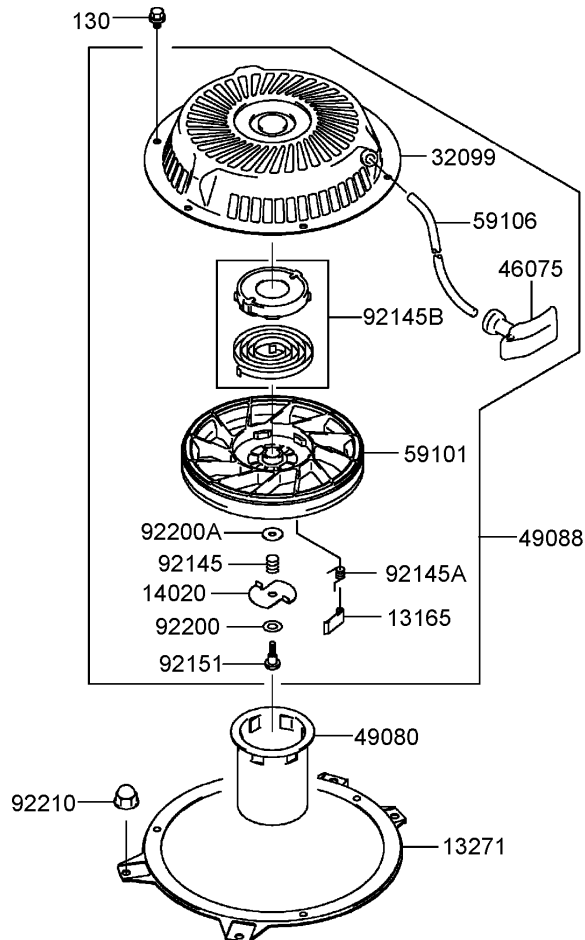

Starter Assembly
Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description				
④13165	13165-7001	2	Pawl-Starter, Recoil				
④13271	13271-7003-9H	1	Plate				
④14020	14020-7001	1	Retainer				
④32099	32099-7002	1	Case-Recoil, Starter				
④46075	46075-7001	1	Grip-Recoil, Starter				
④49080	49080-7001	1	Pulley-Starting				
④49088	49088-7013	1	Starter-Recoil				
④59101	59101-7001	1	Reel-Recoil				
④59106	59106-7001	1	Rope				
④92145	92145-7006	1	Spring				
④92145A	92145-7007	2	Spring				
④92145B	92145-7008	1	Spring				
④92151	92151-7008	1	Bolt				
④92200	92200-7004	1	Washer				
④92200A	92200-7005	1	Washer				
④92210	92210-0003	4	Nut				
④130	130B0608	3	Bolt-Flanged				

ENGINE MAINTENANCE

WARNING

- FOR SAFE OPERATION READ OWNER'S MANUAL.
- GASOLINE IS FLAMMABLE. KEEP AWAY FROM FLAME OR SPARKS.
- IMMEDIATELY RINSE TO PREVENT SKIN AND EYE IRRITATION IN THE EVENT OF A SPILL.
- TO AVOID SLIPS, DO NOT WALK ON WET SURFACES.



Kawasaki	FH361V改KAI 13.0
-----------------	------------------------

Decal Assembly Kawasaki FH381V-AS25

Ref	Part No.	Qty.	Description				
④56033	56033-7001	1	Label-Manual				
④56070	56070-7001	1	Label-Warning				
④56080	56080-2077	1	Label-Brand				
④56080A	56080-7025	1	Label-Brand				

Attachments and Accessories

For 30519 - Mid-Size ProLine Pistol Grip Gear, 13 HP with 36in Side Discharge Mower

Product Name	Model/Part
Atomic Blade with Decal ASM	. 104-8590
Weight Kit	. 107-4100
Sulky	. 30109
36in Recycler Kit	. 30142
Soft Bag (3 bushel)	. 30198

NOTES

NOTES

NOTES

