



## 22in Recycler<sup>®</sup> Lawnmower

Model No. 20041 - 250000001 and up.

### Parts Catalog

---

#### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

#### Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

#### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

| Description                                   | Page     | Description                                  | Page     |
|-----------------------------------------------|----------|----------------------------------------------|----------|
| Housing Assembly                              | ..... 3  | Air Cleaner Assembly Briggs and Stratton     |          |
| Front Axle and Wheel Assembly                 | ..... 4  | 125K05-0186-E1                               | ..... 15 |
| Rear Axle and Transmission Assembly           | ..... 5  | Governor Assembly Briggs and Stratton        |          |
| Transmission Assembly No. 106-3956            | ..... 6  | 125K05-0186-E1                               | ..... 16 |
| Engine and Blade Assembly                     | ..... 7  | Muffler and Fuel Tank Assembly Briggs and    |          |
| Handle Assembly                               | ..... 8  | Stratton 125K05-0186-E1                      | ..... 17 |
| Electric Start Assembly                       | ..... 9  | Blower Housing Assembly Briggs and stratton  |          |
| Rear Bag Assembly                             | ..... 10 | 125K05-0186-E1                               | ..... 18 |
| Cylinder Assembly Briggs and Stratton 125K05- |          | Starter Assembly Briggs and Stratton 125K05- |          |
| 0186-E1                                       | ..... 11 | 0186-E1                                      | ..... 19 |
| Crankshaft Assembly Briggs and Stratton       |          | Starter Motor Assembly Briggs and Stratton   |          |
| 125K05-0186-E1                                | ..... 12 | 125K05-0186-E1                               | ..... 20 |
| Crankcase Assembly Briggs and Stratton        |          | Gasket Assembly Briggs and Stratton 125K05-  |          |
| 125K05-0186-E1                                | ..... 13 | 0186-E1                                      | ..... 21 |
| Carburetor Assembly Briggs and Stratton       |          | Carburetor Overhaul Kit Assembly Briggs and  |          |
| 125K05-0186-E1                                | ..... 14 | Stratton 125K05-0186-E1                      | ..... 22 |

 
## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

|                                            |                                    |
|--------------------------------------------|------------------------------------|
| AR. .... as required                       | INC. .... incorporated             |
| ASM. .... assembly                         | LH. .... left hand                 |
| CARR. .... carriage                        | NI. .... nylon insert              |
| DEG. .... degrees                          | PPH. .... phillips pan head        |
| FH. .... flat head                         | PTH. .... phillips truss head      |
| GA. .... gauge                             | PTO. .... power take off           |
| HF. .... hex flange                        | RH. .... right hand                |
| HH. .... hex head                          | SFH. .... slotted fillister head   |
| HHF. .... hex head flange                  | SHH. .... slotted hex head         |
| HHFTF. .... hex head flange thread forming | SHWH. .... slotted hex washer head |
| HJ. .... hex jam                           | SPH. .... slotted pan head         |
| HLH. .... hex lag head                     | SQH. .... square head              |
| HOC. .... height-of-cut                    | SRH. .... slotted round head       |
| HS. .... hex                               | STD. .... standard                 |
| HSBH. .... hex socket button head          | TAP. .... self tapping             |
| HSFH. .... hex socket flat head            | TTH. .... torx truss head          |
| HSH. .... hex socket head                  | WH. .... wing head                 |
| HWH. .... hex washer head                  |                                    |
| HWHTF. .... hex washer head thread forming |                                    |
| HYD. .... hydraulic                        |                                    |


## Footnotes

- |                                                         |                                               |
|---------------------------------------------------------|-----------------------------------------------|
| ❶ Not serviced separately                               | ❷ Included in Engine Gasket Set-Ref. 358.     |
| ❸ Included in Carburetor Overhaul Kit-Ref. 121.         | ❹ Included in Carburetor Gasket Set-Ref. 977. |
| ❺ Obtain parts from your local Briggs & Stratton dealer |                                               |

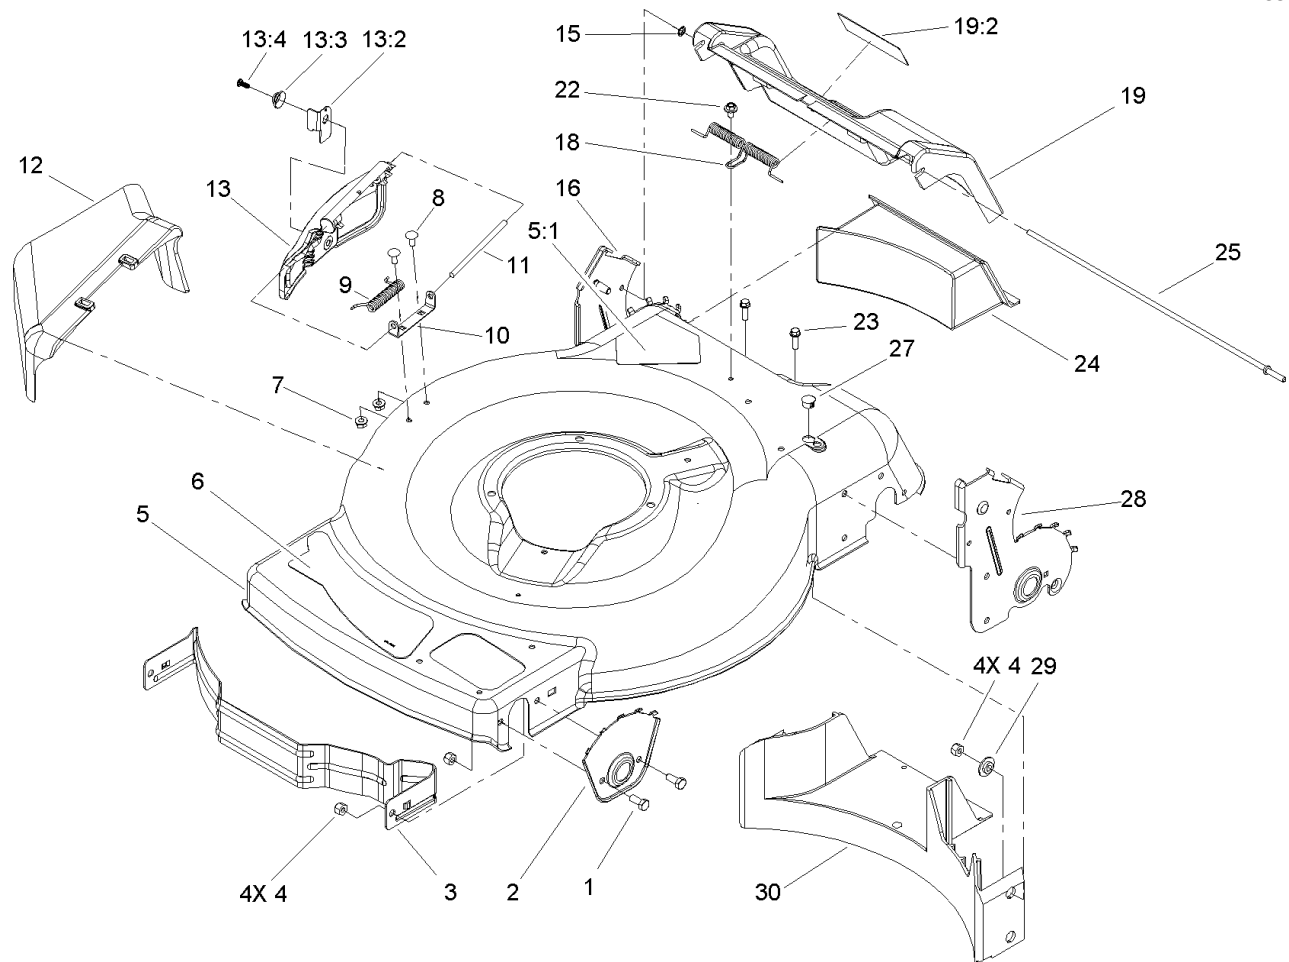


## Housing Assembly
 
| Ref  | Part No.    | Qty. | Description           | Ref | Part No. | Qty. | Description           |
|------|-------------|------|-----------------------|-----|----------|------|-----------------------|
| 1    | 322-3       | 4    | Screw-HH              | 24  | 105-1842 | 1    | Plug-Discharge, Rear  |
| 2    | 105-1808-03 | 2    | Plate-Hoc, Front      | 25  | 105-1827 | 1    | Rod-Pivot, Rear Door  |
| 3    | 104-8694-03 | 1    | Baffle-Front          | 27  | 104-9369 | 1    | Plug-Dome             |
| 4    | 3296-29     | 8    | Nut-Lock, NI          | 28  | 107-0783 | 1    | LH Rear HOC Plate ASM |
| 5    | 104-7915    | 1    | Housing               | 29  | 105-3006 | 4    | Washer-Stepped        |
| 5:1  | 105-6838    | 1    | Decal-Danger          | 30  | 105-1834 | 1    | Baffle-Rear           |
| 6    | 105-1297    | 1    | Decal-Deck            |     |          |      |                       |
| 7    | 32128-32    | 2    | Nut-HHF               |     |          |      |                       |
| 8    | 3229-11     | 2    | Screw-CARR            |     |          |      |                       |
| 9    | 99-5293     | 1    | Spring-Torsion        |     |          |      |                       |
| 10   | 99-5292     | 1    | Bracket-Cover         |     |          |      |                       |
| 11   | 99-5291     | 1    | Rod-Cover             |     |          |      |                       |
| 12   | 105-3028    | 1    | Chute-Discharge, Side |     |          |      |                       |
| 13   | 106-8376    | 1    | Discharge Door ASM    |     |          |      |                       |
| 13:2 | 107-0795    | 1    | Latch-Door            |     |          |      |                       |
| 13:3 | 107-7456    | 1    | Cap-Door              |     |          |      |                       |
| 13:4 | 107-7461    | 1    | Screw-Plastite        |     |          |      |                       |
| 15   | 32112-6     | 1    | Nut-Push              |     |          |      |                       |
| 16   | 107-0790    | 1    | RH Rear HOC Plate ASM |     |          |      |                       |
| 18   | 105-3032    | 1    | Spring-Door, Rear     |     |          |      |                       |
| 19   | 105-1323    | 1    | Rear Door ASM         |     |          |      |                       |
| 19:2 | 105-1295    | 1    | Decal-Warning         |     |          |      |                       |
| 22   | 46-6810     | 1    | Screw And Washer ASM  |     |          |      |                       |
| 23   | 46-8091     | 2    | Screw-HWH             |     |          |      |                       |

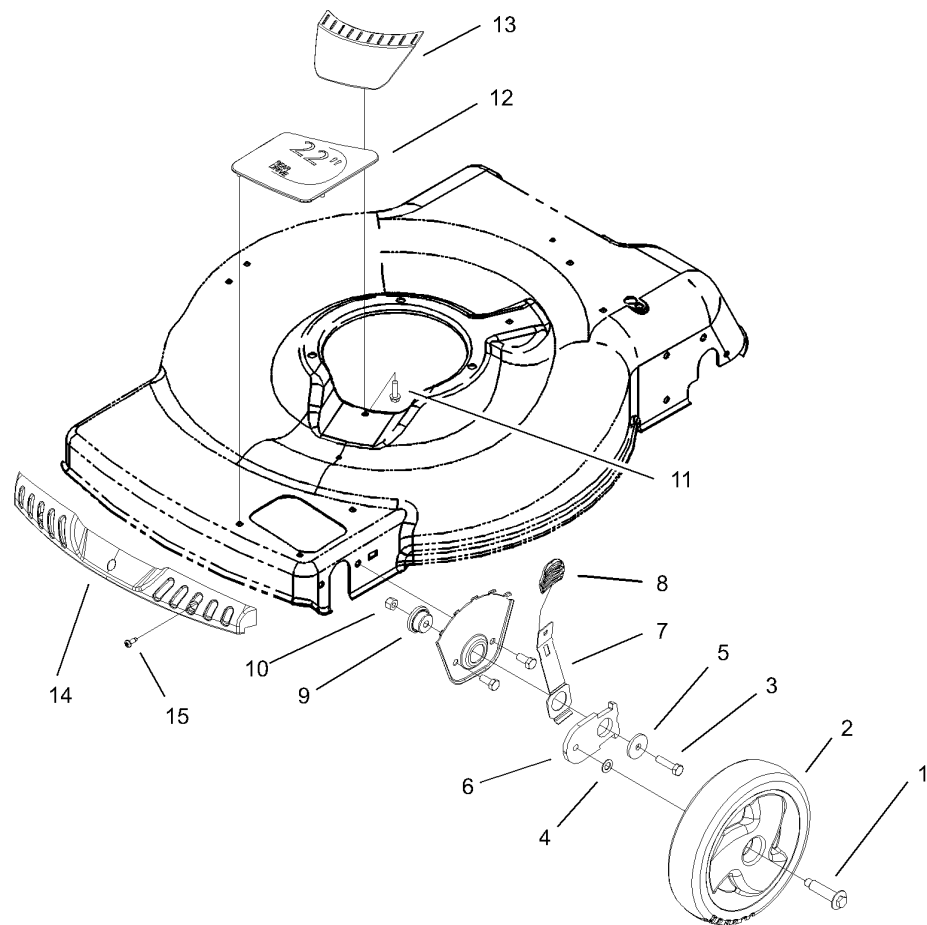

Front Axle and Wheel Assembly


| Ref | Part No. | Qty. | Description          |  |  |  |  |
|-----|----------|------|----------------------|--|--|--|--|
| 1   | 614650   | 2    | Bolt-Shoulder        |  |  |  |  |
| 2   | 105-1814 | 2    | Wheel ASM            |  |  |  |  |
| 3   | 322-6    | 2    | Screw-HH             |  |  |  |  |
| 4   | 40-1940  | 2    | Washer               |  |  |  |  |
| 5   | 105-3048 | 2    | Washer-Flat          |  |  |  |  |
| 6   | 105-1807 | 2    | Arm-Pivot, Front     |  |  |  |  |
| 7   | 105-1809 | 2    | Arm-Spring           |  |  |  |  |
| 8   | 105-3042 | 2    | Knob-Lever, HOC      |  |  |  |  |
| 9   | 105-1818 | 2    | Bushing-Mount, HOC   |  |  |  |  |
| 10  | 3296-29  | 2    | Nut-Lock, NI         |  |  |  |  |
| 11  | 46-8091  | 1    | Screw-HWH            |  |  |  |  |
| 12  | 105-3004 | 1    | Cover-Cutout         |  |  |  |  |
| 13  | 105-3005 | 1    | Cover-Belt Opening   |  |  |  |  |
| 14  | 104-9359 | 1    | Bumper-Mower         |  |  |  |  |
| 15  | 105-6849 | 3    | Screw-Thread Forming |  |  |  |  |

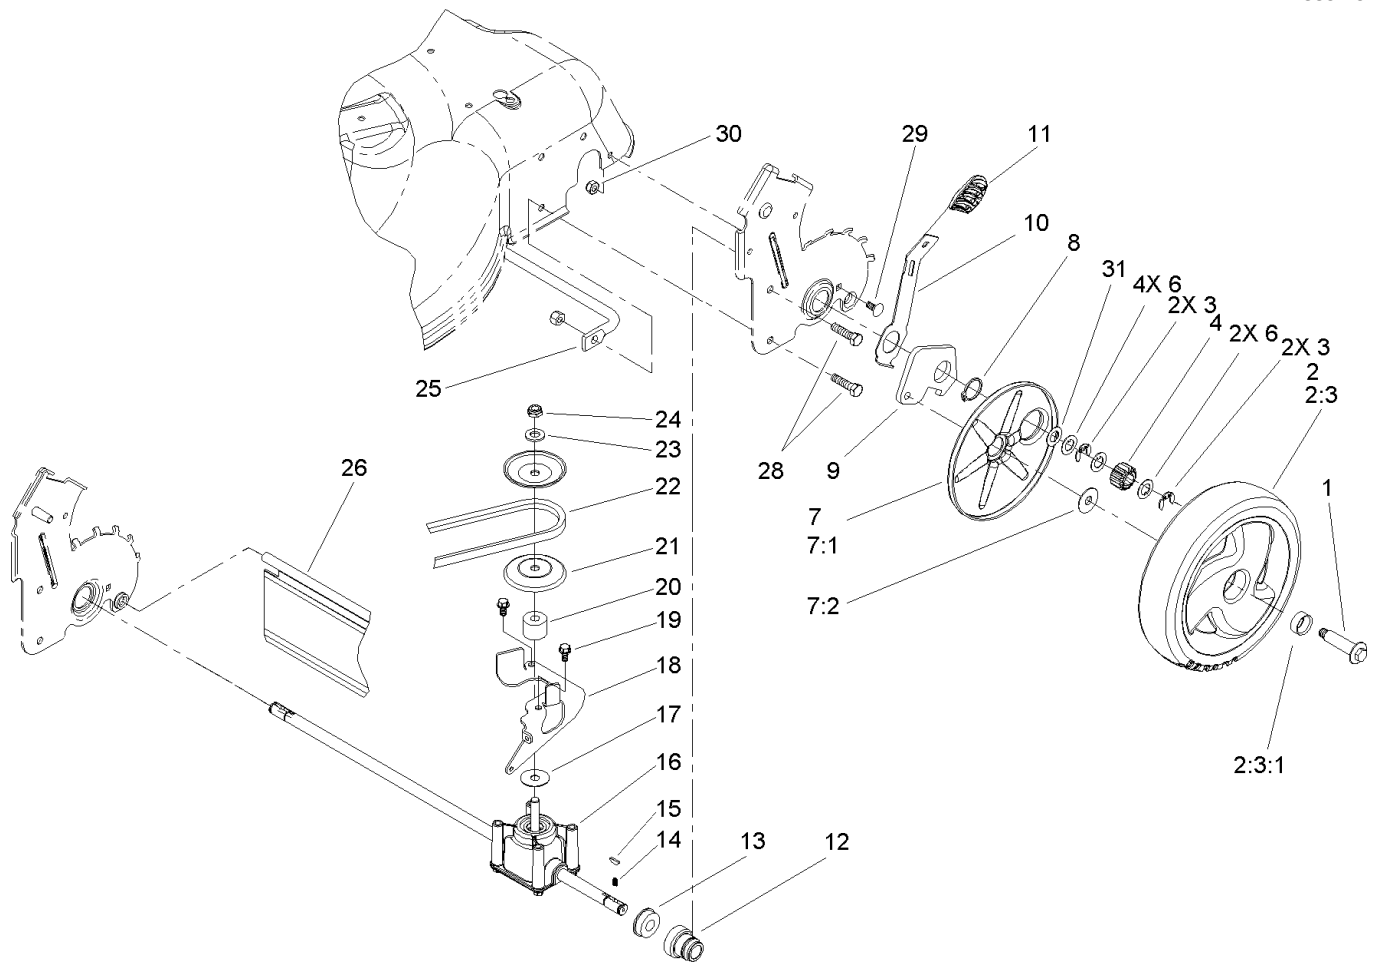 

## Rear Axle and Transmission Assembly


| Ref   | Part No.    | Qty. | Description           |
|-------|-------------|------|-----------------------|
| 1     | 614650      | 2    | Bolt-Shoulder         |
| 2     | 105-3036    | 2    | Wheel Gear ASM        |
| ① 2:3 |             | 1    | Wheel ASM             |
| 2:3:1 | 27-6250     | 2    | Bushing               |
| 3     | 65-2720     | 4    | Klipring-Locking      |
| 4     | 105-3040    | 2    | Gear-Pinion, 15t      |
| 6     | 105-6840    | 6    | Washer-Thrust         |
| ① 7   |             | 2    | Cover-Wheel,asm       |
| 7:1   | 105-1838    | 1    | Cover-Wheel           |
| 7:2   | 614426      | 1    | Washer-Stepped        |
| 8     | 32151-36    | 2    | Ring-Retaining        |
| 9     | 105-1819    | 2    | Arm-Pivot, Rear       |
| 10    | 105-1809    | 2    | Arm-Spring            |
| 11    | 105-3042    | 2    | Knob-Lever, HOC       |
| 12    | 104-8698    | 2    | Retainer-Bearing, HOC |
| 13    | 104-8699    | 2    | Bearing-Ball          |
| 14    | 39-9650     | 2    | Spring-Compression    |
| 15    | 612066      | 2    | Key                   |
| 16    | 106-3956    | 1    | Transmission ASM      |
| 17    | 105-6814    | 1    | Washer-Shield         |
| 18    | 105-1832-03 | 1    | Bracket-Pivot, Rwd    |
| 19    | 32144-4     | 2    | Screw-HWH             |
| 20    | 92-5791     | 1    | Spacer                |
| 21    | 100-1176    | 2    | Pulley-Half           |
 
| Ref | Part No. | Qty. | Description     |
|-----|----------|------|-----------------|
| 22  | 91-2258  | 1    | V-Belt          |
| 23  | 3256-24  | 1    | Washer-Flat     |
| 24  | 3296-5   | 1    | Nut-Lock        |
| 25  | 105-1811 | 1    | Brace-HOC Plate |
| 26  | 105-1843 | 1    | Shield-Trailing |
| 28  | 322-6    | 4    | Screw-HH        |
| 29  | 3229-11  | 2    | Screw-CARR      |
| 30  | 3296-16  | 2    | Nut-Lock, NI    |
| 31  | 36-4780  | 1    | Washer          |

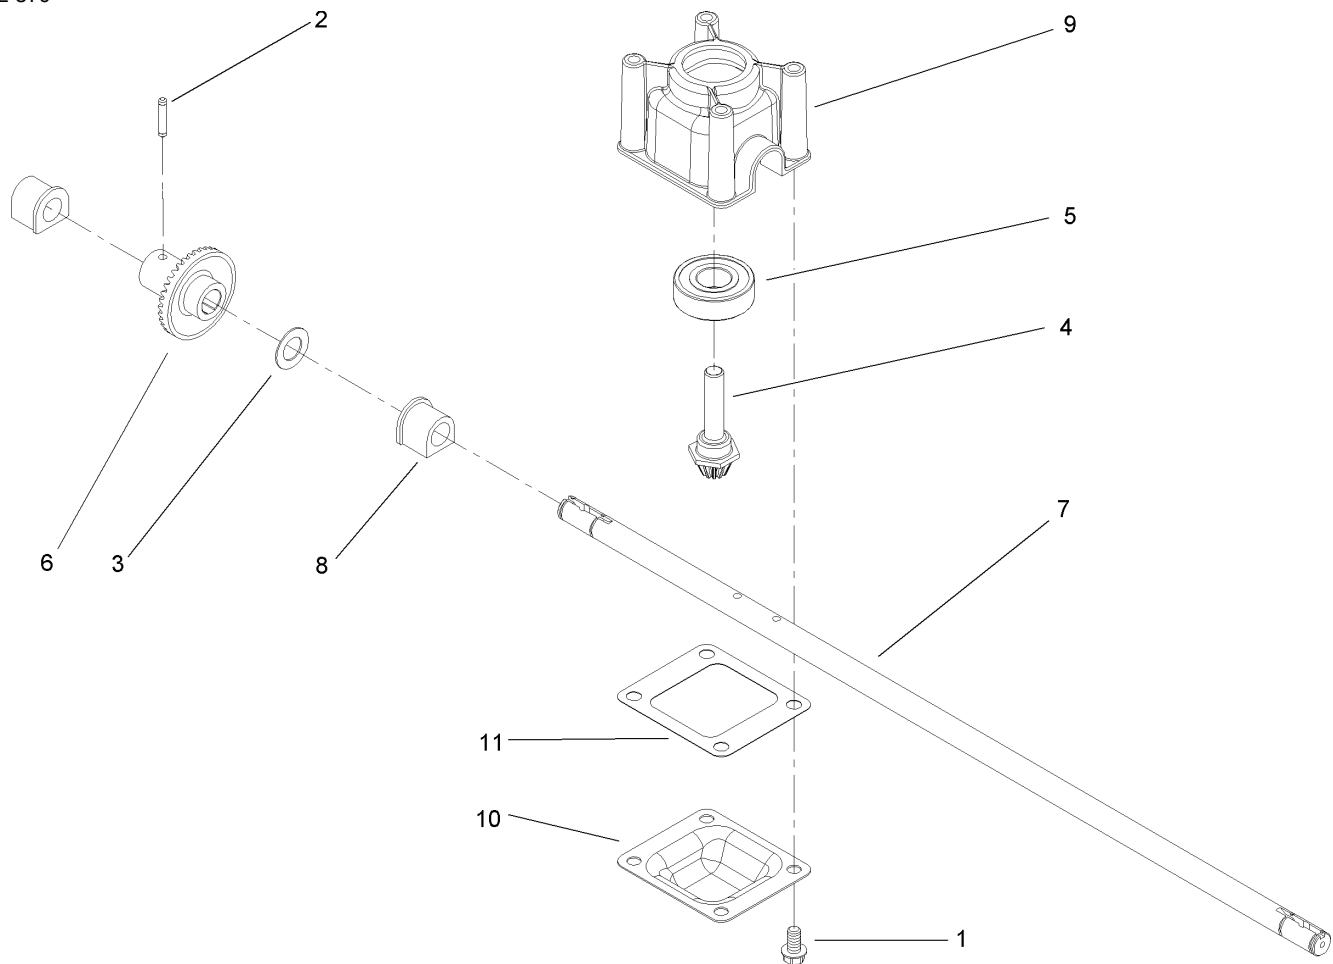


Transmission Assembly No. 106-3956

| Ref | Part No.    | Qty. | Description           |  |  |  |  |
|-----|-------------|------|-----------------------|--|--|--|--|
| 1   | 32144-4     | 4    | Screw-HWH             |  |  |  |  |
| 2   | 3285-19     | 1    | Pin-Groove            |  |  |  |  |
| 3   | 36-4780     | 1    | Washer                |  |  |  |  |
| 4   | 92-5790     | 1    | Pinion                |  |  |  |  |
| 5   | 100-1048    | 1    | Bearing-Ball          |  |  |  |  |
| 6   | 104-8671    | 1    | Gear-Bevel, 37t       |  |  |  |  |
| 7   | 106-3957    | 1    | Shaft-Output          |  |  |  |  |
| 8   | 104-8673    | 2    | Bushing-Shaft, Output |  |  |  |  |
| 9   | 104-8674    | 1    | Gearcase-Upper        |  |  |  |  |
| 10  | 104-8675-03 | 1    | Cover-Gearcase        |  |  |  |  |
| 11  | 105-6839    | 1    | Gasket-Gearcase       |  |  |  |  |

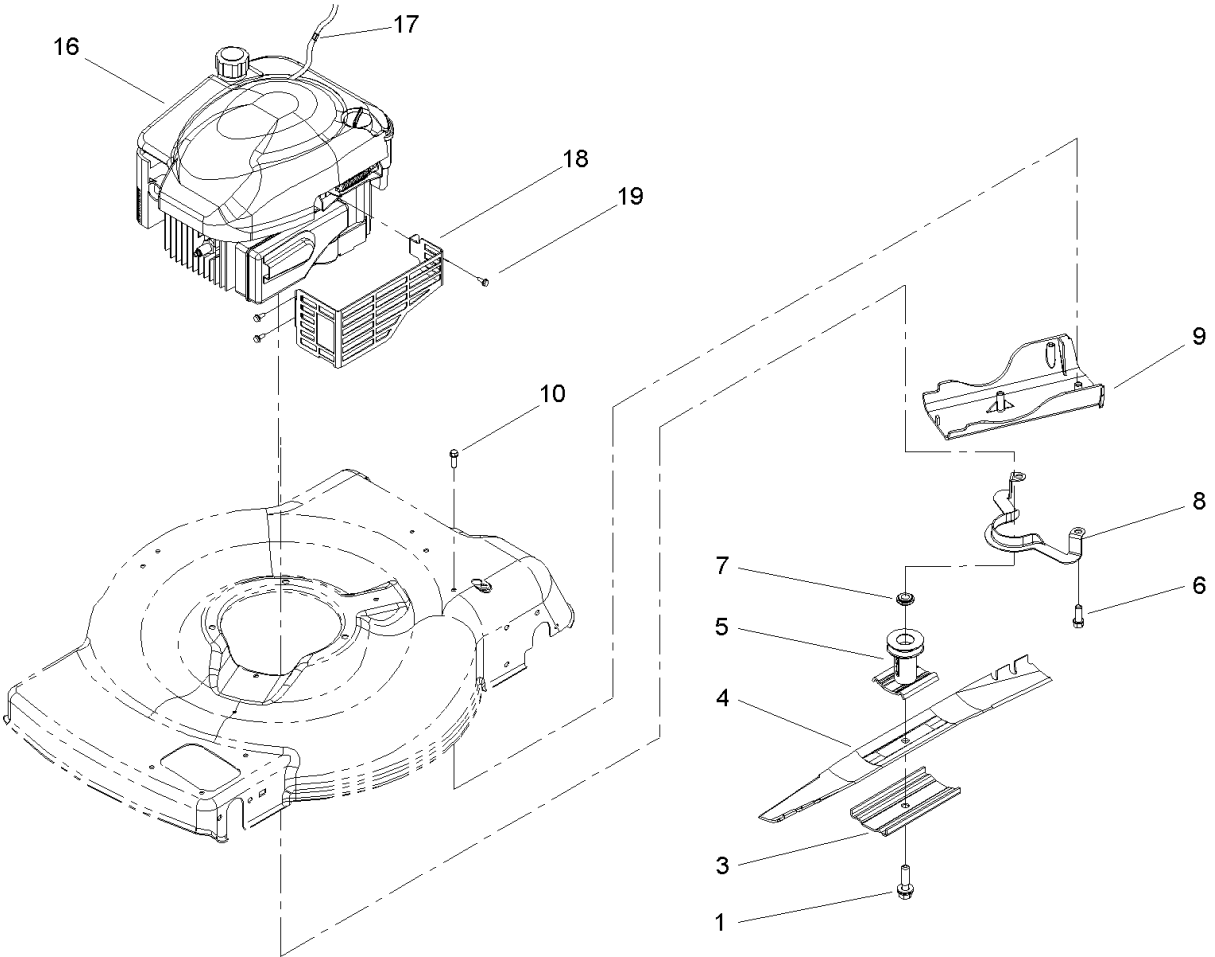 


# Engine and Blade Assembly

| Ref | Part No.    | Qty. | Description                                                 |  |  |  |  |
|-----|-------------|------|-------------------------------------------------------------|--|--|--|--|
| 1   | 105-8579    | 1    | Bolt-Blade                                                  |  |  |  |  |
| 3   | 108-3766-03 | 1    | Support-Blade                                               |  |  |  |  |
| 4   | 104-8697-03 | 1    | Blade-22 Inch                                               |  |  |  |  |
| 5   | 106-3987    | 1    | Blade Driver ASM                                            |  |  |  |  |
| 6   | 95-1726     | 3    | Screw-Tapite                                                |  |  |  |  |
| 7   | 106-3999    | 1    | Spacer-Driver                                               |  |  |  |  |
| 8   | 105-3030-03 | 1    | Guide-Belt                                                  |  |  |  |  |
| 9   | 105-1835    | 1    | Cover-Belt, Rear                                            |  |  |  |  |
| 10  | 46-8091     | 3    | Screw-HWH                                                   |  |  |  |  |
| 16  |             | 1    | Engine-Quantum Briggs And Stratton Model No. 125k05-0186-E1 |  |  |  |  |
| 17  | 2210-316    | 1    | Stop-Rope                                                   |  |  |  |  |
| 18  | 104-7577-03 | 1    | Shield-Muffler                                              |  |  |  |  |
| 19  | 32144-1     | 3    | Screw-Tapite                                                |  |  |  |  |

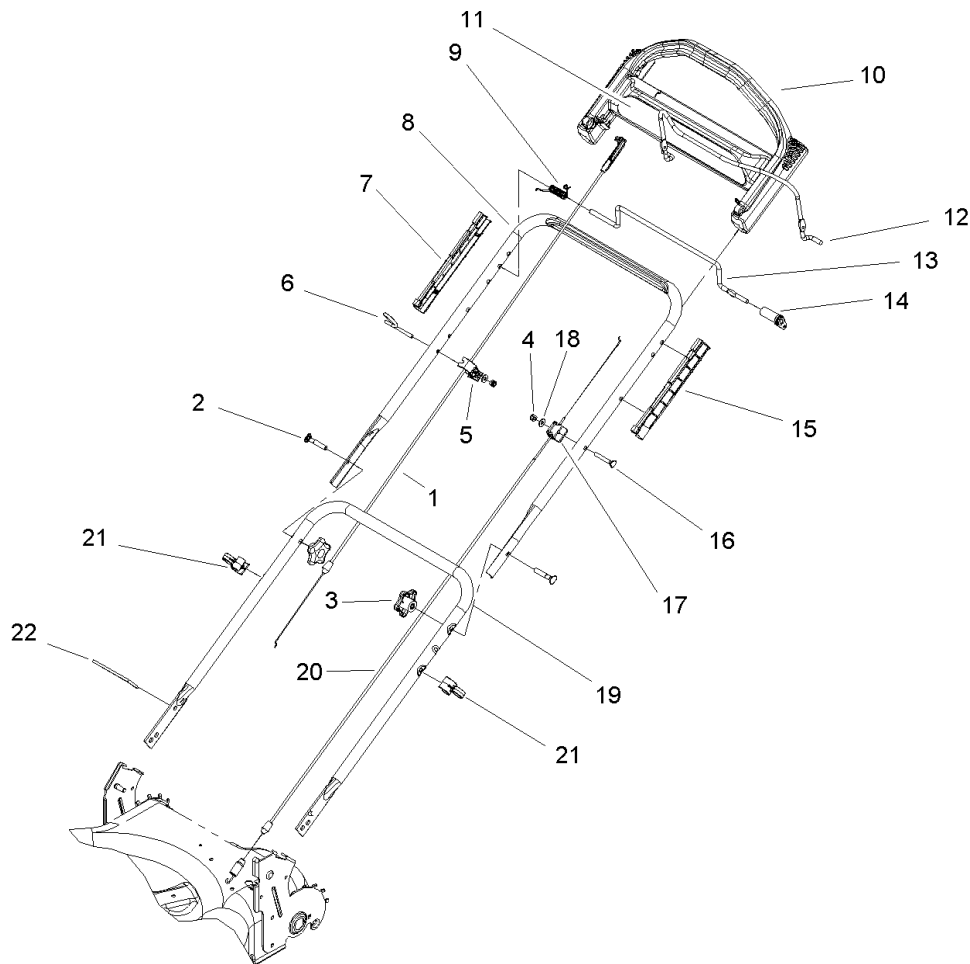


Handle Assembly

| Ref | Part No.    | Qty. | Description           |  |  |  |  |
|-----|-------------|------|-----------------------|--|--|--|--|
| 1   | 104-8676    | 1    | Cable-Brake           |  |  |  |  |
| 2   | 92-2260     | 2    | Screw-Handle          |  |  |  |  |
| 3   | 106-4161    | 2    | Knob-Handle           |  |  |  |  |
| 4   | 3296-73     | 2    | Nut-Lock, NI          |  |  |  |  |
| 5   | 106-8331    | 1    | Anchor-Cable          |  |  |  |  |
| 6   | 106-8330    | 1    | Guide-Rope            |  |  |  |  |
| 7   | 105-6841    | 2    | Guide-RH              |  |  |  |  |
| 8   | 104-8680-05 | 1    | Handle-Upper          |  |  |  |  |
| 9   | 104-8690    | 1    | Spring-Torsion        |  |  |  |  |
| 10  | 104-8678    | 1    | Handle-Control        |  |  |  |  |
| 11  | 105-3033    | 1    | Decal-Control Handle  |  |  |  |  |
| 12  | 104-8679-03 | 1    | Bail-Brake            |  |  |  |  |
| 13  | 99-1588     | 1    | Bar-Control, Traction |  |  |  |  |
| 14  | 99-1589     | 1    | Lever-Traction        |  |  |  |  |
| 15  | 105-6842    | 2    | Guide-LH              |  |  |  |  |
| 16  | 321-50      | 1    | Screw-HH              |  |  |  |  |
| 17  | 92-7729     | 1    | Anchor-Cable, Upper   |  |  |  |  |
| 18  | 3256-1      | 2    | Washer-Flat           |  |  |  |  |
| 19  | 107-0784-05 | 1    | Handle-Lower          |  |  |  |  |
| 20  | 105-1844    | 1    | Cable-Traction        |  |  |  |  |
| 21  | 106-6805    | 2    | Guide-Cable           |  |  |  |  |
| 22  | 614249      | 1    | Strap-Tie             |  |  |  |  |

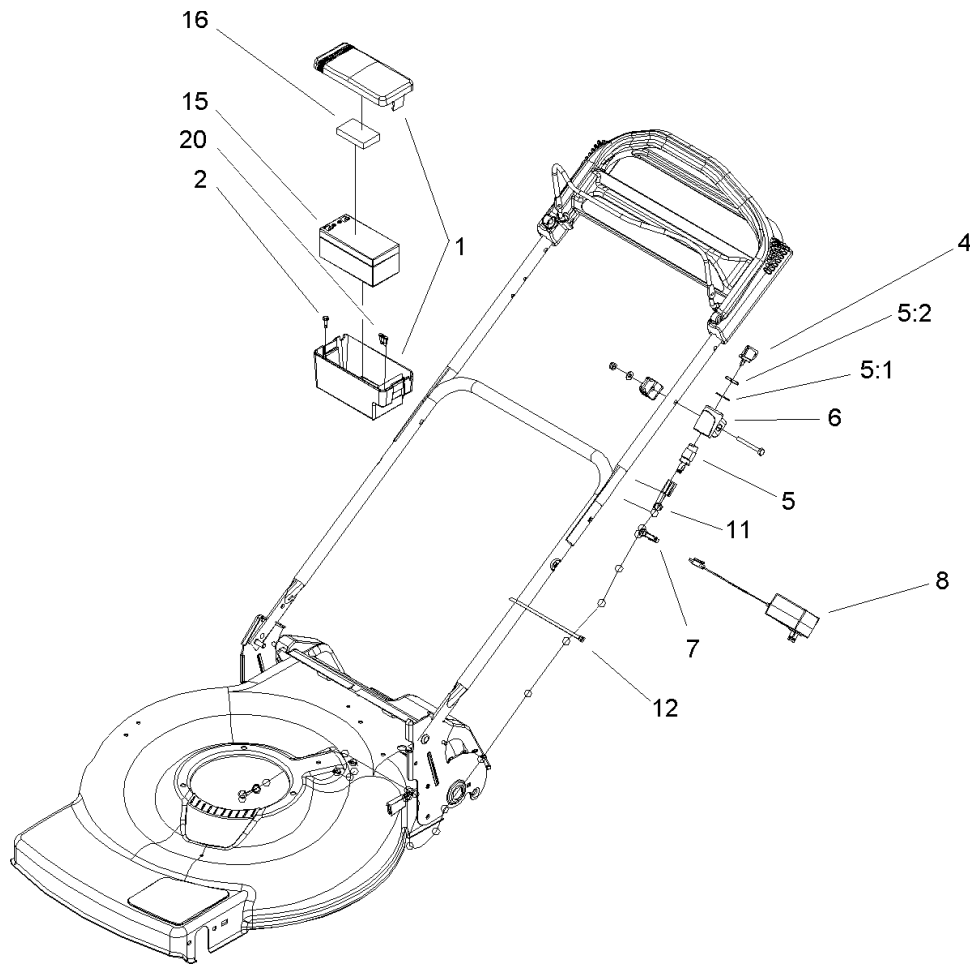 


## Electric Start Assembly
 
| Ref | Part No. | Qty. | Description          |  |  |  |  |
|-----|----------|------|----------------------|--|--|--|--|
| 1   | 108-4844 | 1    | Battery Box ASM      |  |  |  |  |
| 2   | 105-6849 | 2    | Screw-Thread Forming |  |  |  |  |
| 4   | 63-8360  | 1    | Key-Ignition         |  |  |  |  |
| 5   | 46-5780  | 1    | Switch-Starter       |  |  |  |  |
| 5:1 | 3254-5   | 1    | Washer-Tooth         |  |  |  |  |
| 5:2 | 218-461  | 1    | Nut-HH               |  |  |  |  |
| 6   | 104-8692 | 1    | Mount-Switch         |  |  |  |  |
| 7   | 106-8378 | 1    | Harness-Wire         |  |  |  |  |
| 8   | 104-7401 | 1    | Charger-12 Volt      |  |  |  |  |
| 11  | 104-7953 | 1    | Decal-Harness        |  |  |  |  |
| 12  | 614249   | 2    | Strap-Tie            |  |  |  |  |
| 15  | 106-8397 | 1    | Battery-12 Volt      |  |  |  |  |
| 16  | 107-3774 | 1    | Foam-Battery, Top    |  |  |  |  |
| 20  | 99-6124  | 2    | Fuse-40 Amp          |  |  |  |  |

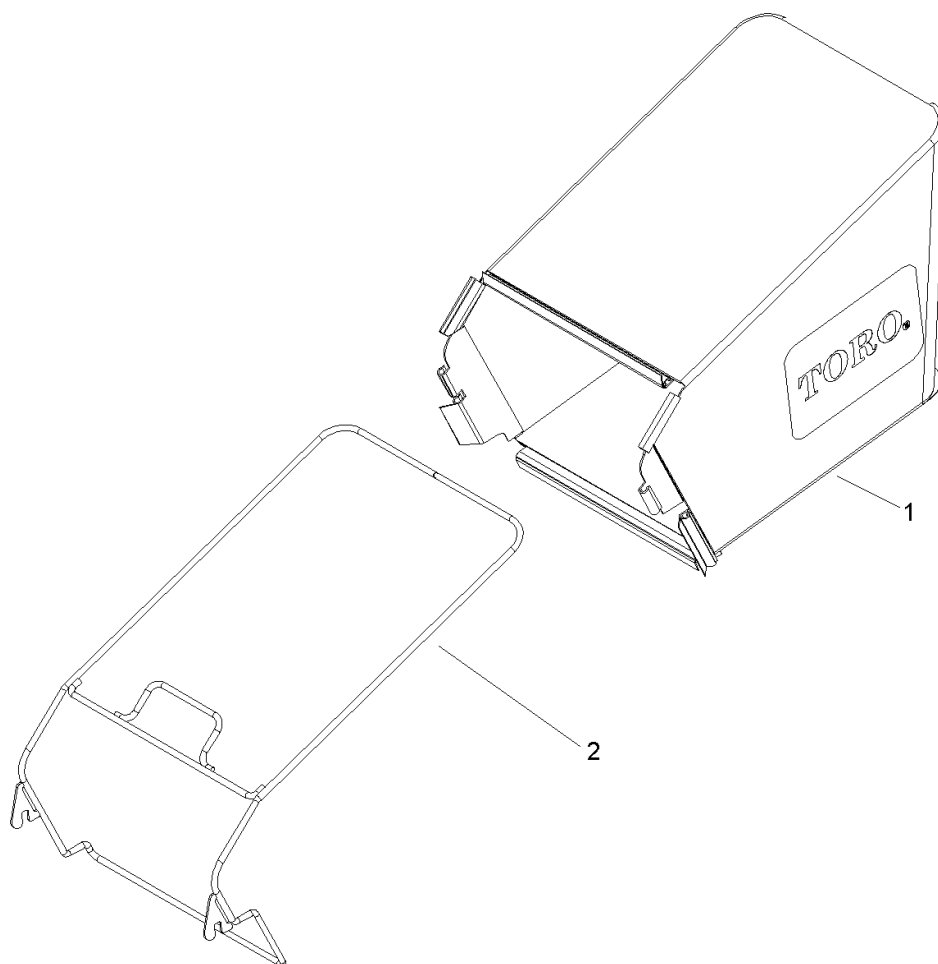

## Rear Bag Assembly

 
| Ref | Part No.    | Qty. | Description   |
|-----|-------------|------|---------------|
| 1   | 107-3779    | 1    | Grass Bag ASM |
| 2   | 105-6831-03 | 1    | Bag Frame ASM |

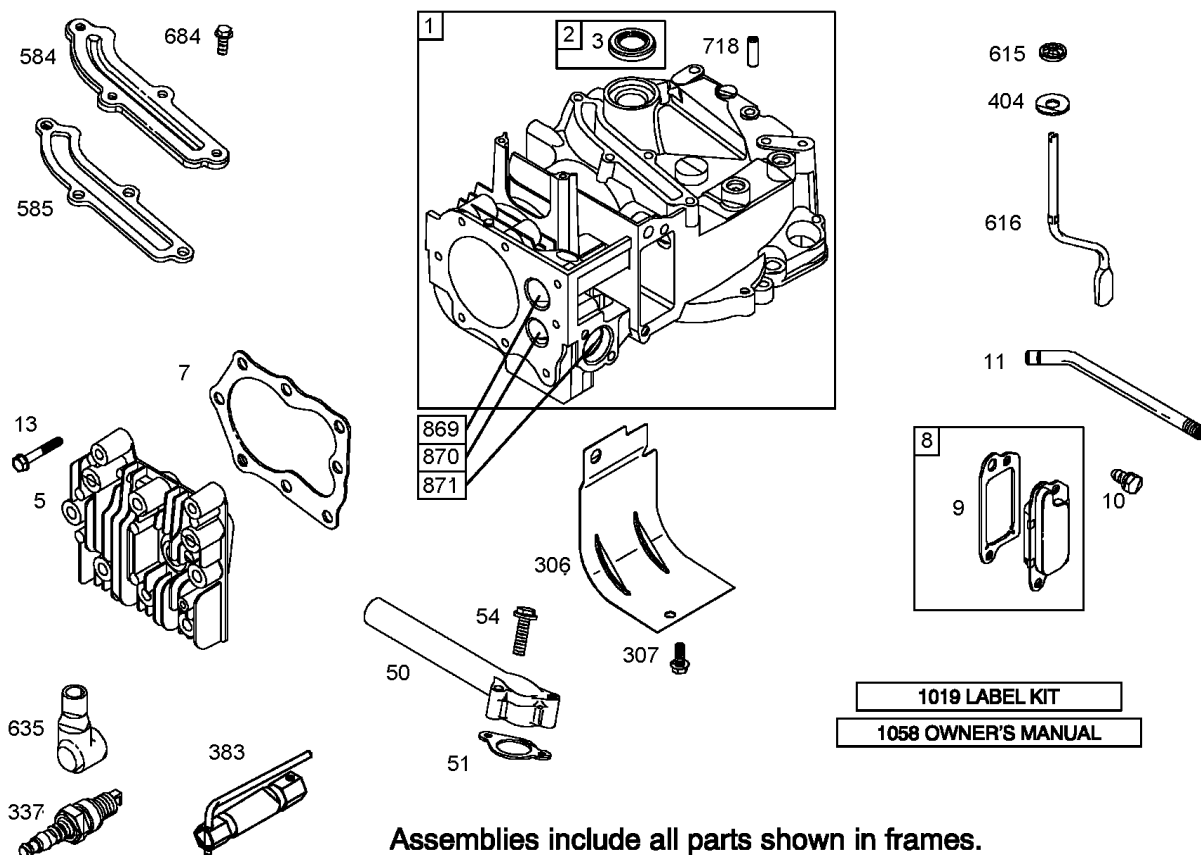

## Cylinder Assembly

### Briggs and Stratton 125K05-0186-E1
 
| Ref | Part No. | Qty. | Description             | Ref  | Part No. | Qty. | Description             |
|-----|----------|------|-------------------------|------|----------|------|-------------------------|
| 1   | 697322   | 1    | Cylinder ASM            | 718  | 690959   | 1    | Pin-locating            |
| 2   | 399269   | 1    | Kit-bushing/seal        | 869  | 691155   | 1    | Seat-valve (Intake)     |
| 3   | 299819   | 1    | Seal-oil Magneto Side)  | 870  | 690380   | 1    | Seat-valve (Exhaust)    |
| 5   | 691160   | 1    | Head-cylinder           | 871  | 262001   | 1    | Bushing-guide (Exhaust) |
| 7   | 692249   | 1    | Gasket-cylinder Head    | 6    | 63709    | 1    | Bushing-guide (Intake)  |
| 8   | 695250   | 1    | Breather ASM            | 1019 | 494256   | 1    | Kit-label               |
| 9   | 699472   | 1    | Gasket-breather         | 1058 | 275177   | 1    | Owner's Manual          |
| 10  | 691125   | 1    | Screw (Breather Asm)    |      |          |      |                         |
| 11  | 691781   | 1    | Tube-breather           |      |          |      |                         |
| 13  | 690912   | 1    | Screw (Cylinder Head)   |      |          |      |                         |
| 50  | 497465   | 1    | Manifold-intake         |      |          |      |                         |
| 51  | 272199   | 1    | Gasket-intake           |      |          |      |                         |
| 54  | 691650   | 1    | Screw (Intake Manifold) |      |          |      |                         |
| 306 | 690450   | 1    | Cylinder Shield         |      |          |      |                         |
| 307 | 690345   | 1    | Screw (Cylinder Shield) |      |          |      |                         |
| 337 | 802592   | 1    | Plug-spark              |      |          |      |                         |
| 383 | 89838    | 1    | Wrench-spark Plug       |      |          |      |                         |
| 404 | 690272   | 1    | Washer (Governor Crank) |      |          |      |                         |
| 584 | 697734   | 1    | Cover-breather Passage  |      |          |      |                         |
| 585 | 691879   | 1    | Gasket-breather Passage |      |          |      |                         |
| 615 | 690340   | 1    | Retainer-governor Shaft |      |          |      |                         |
| 616 | 698801   | 1    | Crank-governor          |      |          |      |                         |
| 635 | 66538    | 1    | Boot-spark Plug         |      |          |      |                         |
| 684 | 690345   | 1    | Screw (Cylinder Shield) |      |          |      |                         |





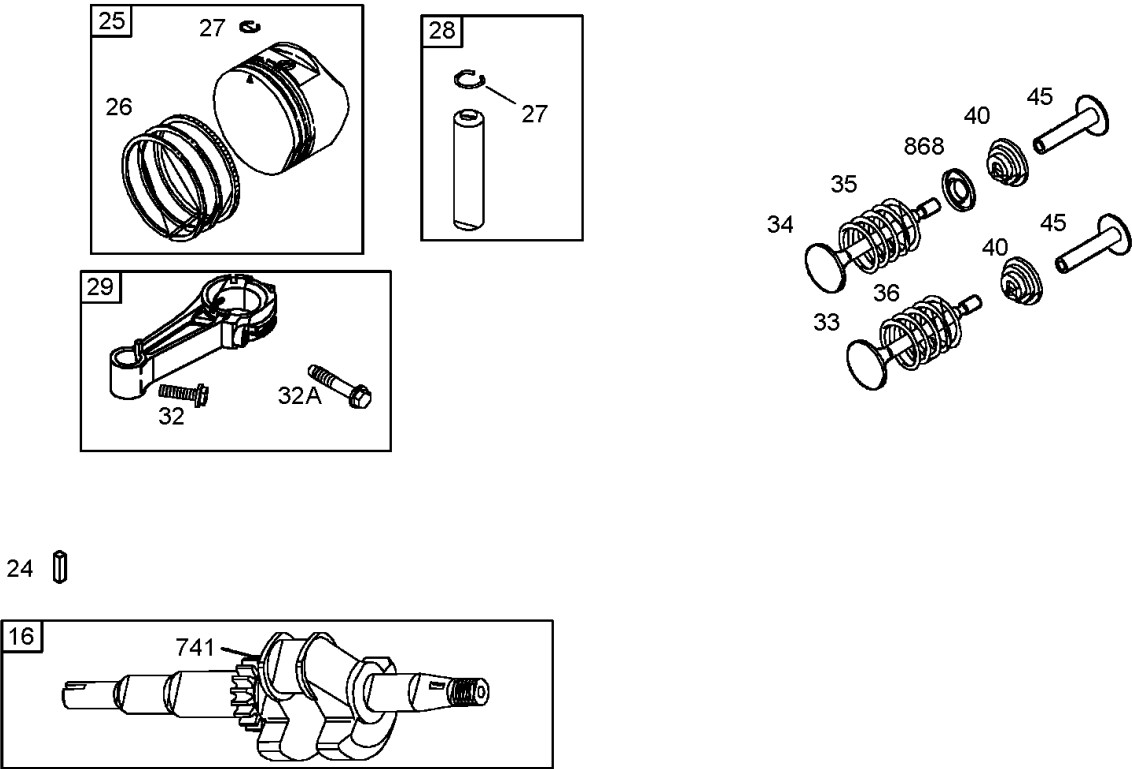


Assemblies include all parts shown in frames.

# Crankshaft Assembly
     
## Briggs and Stratton 125K05-0186-E1


| Ref | Part No. | Qty. | Description                   |  |  |  |  |
|-----|----------|------|-------------------------------|--|--|--|--|
| 16  | 696009   | 1    | Crankshaft                    |  |  |  |  |
| 24  | 222698   | 1    | Key-flywheel                  |  |  |  |  |
| 25  | 790359   | 1    | Piston ASM (Standard)         |  |  |  |  |
|     | 697341   | 1    | Piston ASM (.020in Oversize)  |  |  |  |  |
| 26  | 790360   | 1    | Ring Set (Standard)           |  |  |  |  |
|     | 499427   | 1    | Ring (.020in Oversize)        |  |  |  |  |
| 27  | 691866   | 1    | Lock-piston Pin               |  |  |  |  |
| 28  | 499423   | 1    | Piston Pin (Standard)         |  |  |  |  |
|     | 298908   | 1    | Piston Pin (.005in Undersize) |  |  |  |  |
| 29  | 499424   | 1    | Connecting Rod (Standard)     |  |  |  |  |
| 32  | 691664   | 1    | Screw (Connecting Rod)        |  |  |  |  |
| 32A | 695759   | 1    | Screw (Connecting Rod)        |  |  |  |  |
| 33  | 262651   | 1    | Valve-exhaust                 |  |  |  |  |
| 34  | 262652   | 1    | Valve-intake                  |  |  |  |  |
| 35  | 691270   | 1    | Spring-valve (Intake)         |  |  |  |  |
| 36  | 691270   | 1    | Spring-valve (Intake)         |  |  |  |  |
| 40  | 692194   | 1    | Retainer-valve                |  |  |  |  |
| 45  | 690548   | 1    | Tappet-valve                  |  |  |  |  |
| 741 | 790345   | 1    | Gear-timing                   |  |  |  |  |
| 868 | 697338   | 1    | Seal-valve                    |  |  |  |  |

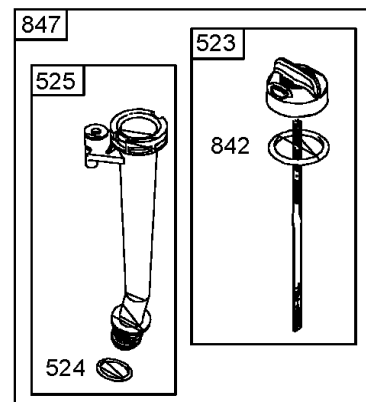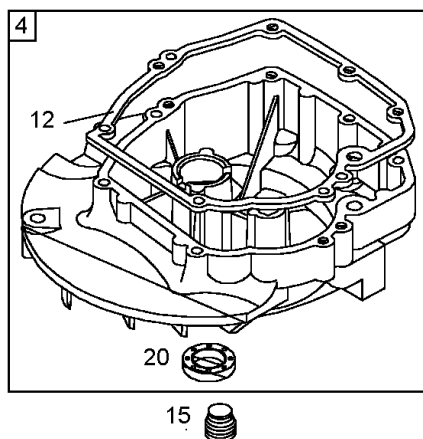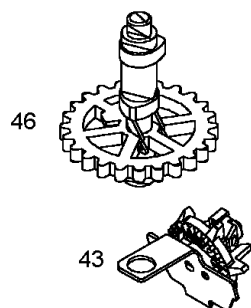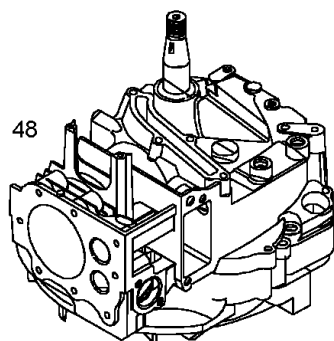

Assemblies include all parts shown in frames.

## Crankcase Assembly Briggs and Stratton 125K05-0186-E1

| Ref | Part No. | Qty. | Description                         |  |  |  |  |
|-----|----------|------|-------------------------------------|--|--|--|--|
| 4   | 493279   | 1    | Sump-engine                         |  |  |  |  |
| 12  | 692232   | 1    | Gasket-crankcase (.015 Thick, Std.) |  |  |  |  |
| 15  | 691680   | 1    | Plug-oil Drain                      |  |  |  |  |
| 20  | 399781   | 1    | Seal-oil                            |  |  |  |  |
| 22  | 691092   | 1    | Screw (Engine Sump)                 |  |  |  |  |
| 43  | 691997   | 1    | Slinger-governor/oil                |  |  |  |  |
| 46  | 691449   | 1    | Camshaft                            |  |  |  |  |
| 48  |          | 1    | Short Block                         |  |  |  |  |
| 287 | 690940   | 1    | Screw (Dipstick Tube)               |  |  |  |  |
| 523 | 499621   | 1    | Dipstick                            |  |  |  |  |
| 524 | 692296   | 1    | Dipstick Tube Seal                  |  |  |  |  |
| 525 | 495265   | 1    | Dipstick Tube                       |  |  |  |  |
| 842 | 691031   | 1    | O-ring Seal (Dipstick Tube)         |  |  |  |  |
| 847 | 692047   | 1    | Dipstick/ Tube ASM                  |  |  |  |  |

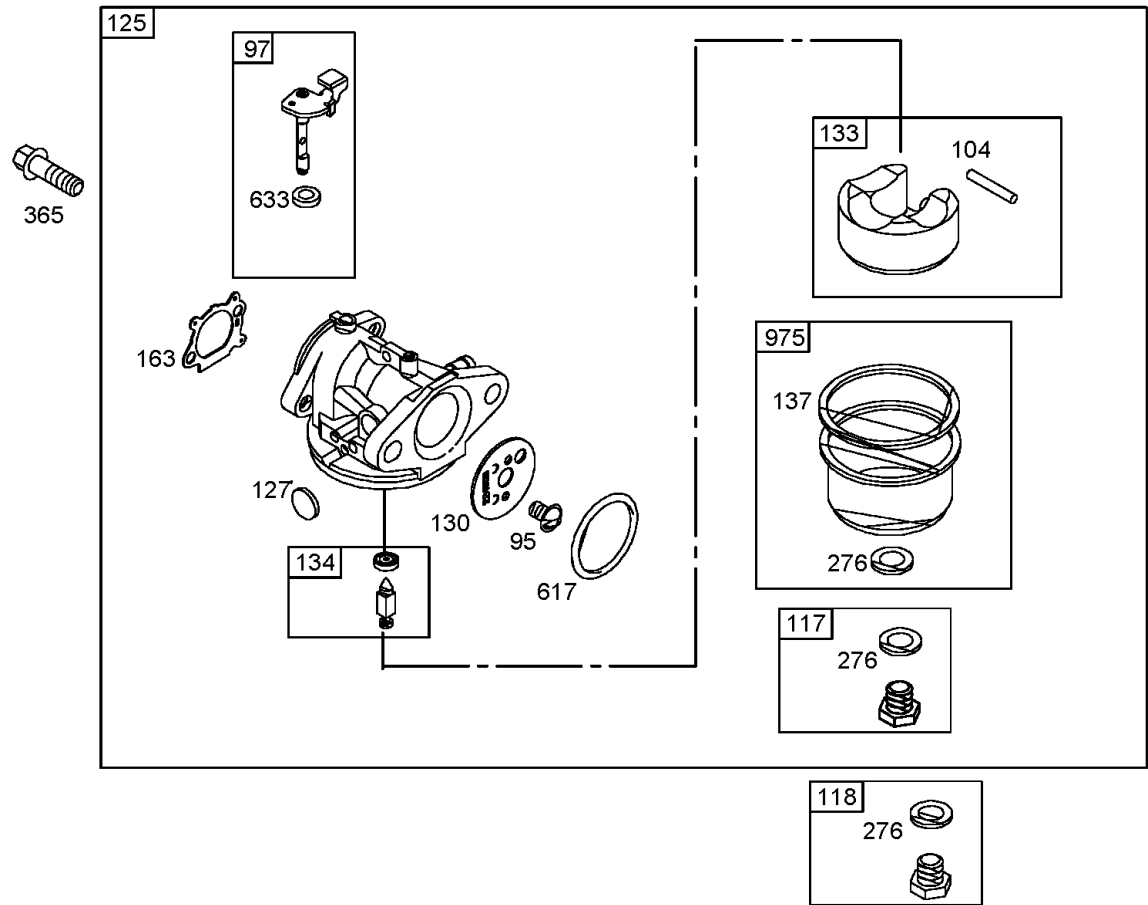


Assemblies include all parts shown in frames.

# Carburetor Assembly
 
## Briggs and Stratton 125K05-0186-E1

| Ref    | Part No. | Qty. | Description                  |  |  |  |  |
|--------|----------|------|------------------------------|--|--|--|--|
| 95     | 691636   | 1    | Screw (Throttle Valve)       |  |  |  |  |
| 97     | 696565   | 1    | Shaft-throttle               |  |  |  |  |
| 95 104 | 691242   | 1    | Pin-float Hinge              |  |  |  |  |
| 117    | 498978   | 1    | Jet-main (Standard)          |  |  |  |  |
| 118    | 494870   | 1    | Jet-main (High Altitude)     |  |  |  |  |
| 125    | 498170   | 1    | Carburetor                   |  |  |  |  |
| 95 127 | 694468   | 1    | Plug-welch                   |  |  |  |  |
| 130    | 696564   | 1    | Valve-throttle               |  |  |  |  |
| 133    | 398187   | 1    | Float-carburetor             |  |  |  |  |
| 95 134 | 398188   | 1    | Kit-needle/seat              |  |  |  |  |
| 95 137 | 693981   | 1    | Gasket-float Bowl            |  |  |  |  |
| 163    | 272653   | 1    | Gasket-air Cleaner           |  |  |  |  |
| 95 276 | 271716   | 1    | Washer-sealing               |  |  |  |  |
| 365    | 692524   | 1    | Screw (Carburetor)           |  |  |  |  |
| 95 617 | 270344   | 1    | Seal-o Ring Intake Manifold) |  |  |  |  |
| 95 633 | 691321   | 1    | Seal-choke/throttle Shaft    |  |  |  |  |
| 975    | 493640   | 1    | Bowl-float                   |  |  |  |  |

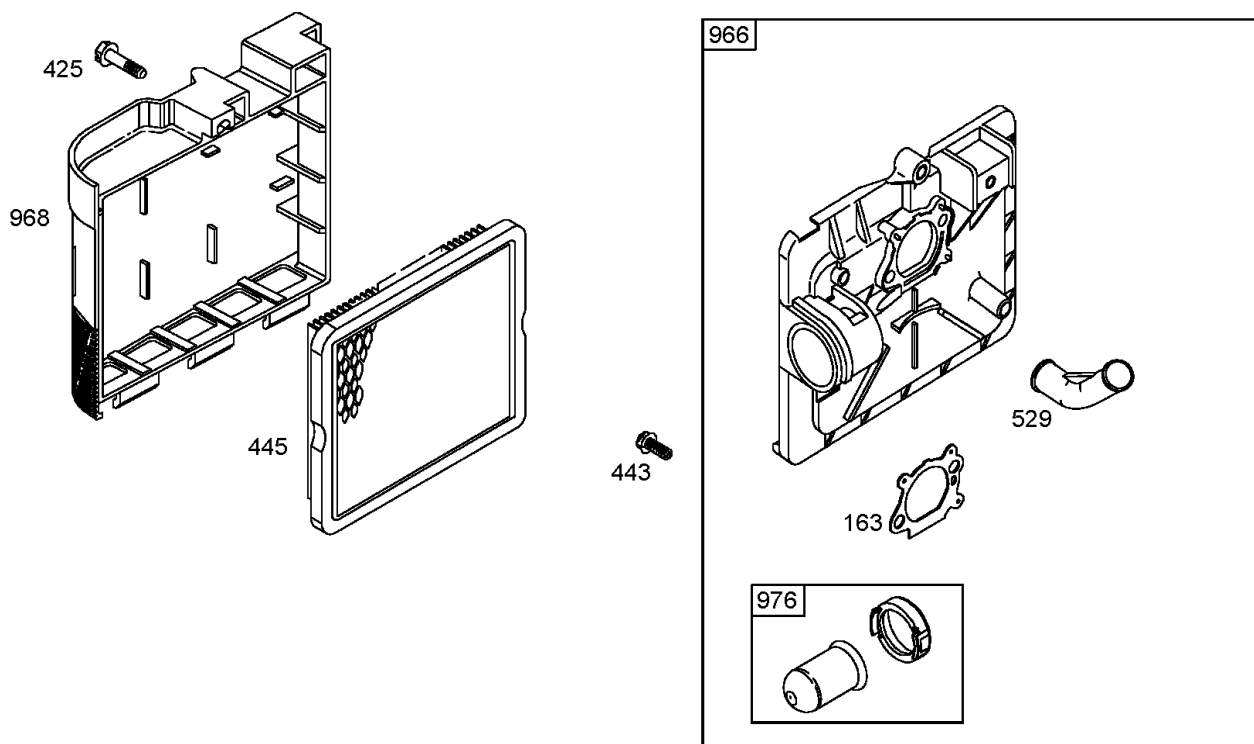


**Assemblies** include all parts shown in frames.

# Air Cleaner Assembly
 
## Briggs and Stratton 125K05-0186-E1


| Ref     | Part No. | Qty. | Description                     |  |  |  |  |
|---------|----------|------|---------------------------------|--|--|--|--|
| 2 3 163 | 272653   | 1    | Gasket—air Cleaner              |  |  |  |  |
| 4 5 425 | 690670   | 1    | Screw (Air Cleaner Cover)       |  |  |  |  |
| 5 443   | 692523   | 1    | Screw (Air Cleaner Primer Base) |  |  |  |  |
| 5 445   | 491588   | 1    | Filter—air Cleaner Cartridge    |  |  |  |  |
| 5 529   | 691923   | 1    | Grommet                         |  |  |  |  |
| 5 966   | 496116   | 1    | Base—air Cleaner Primer         |  |  |  |  |
| 5 968   | 692298   | 1    | Cover—air Cleaner               |  |  |  |  |
| 5 976   | 694395   | 1    | Primer—carburetor               |  |  |  |  |

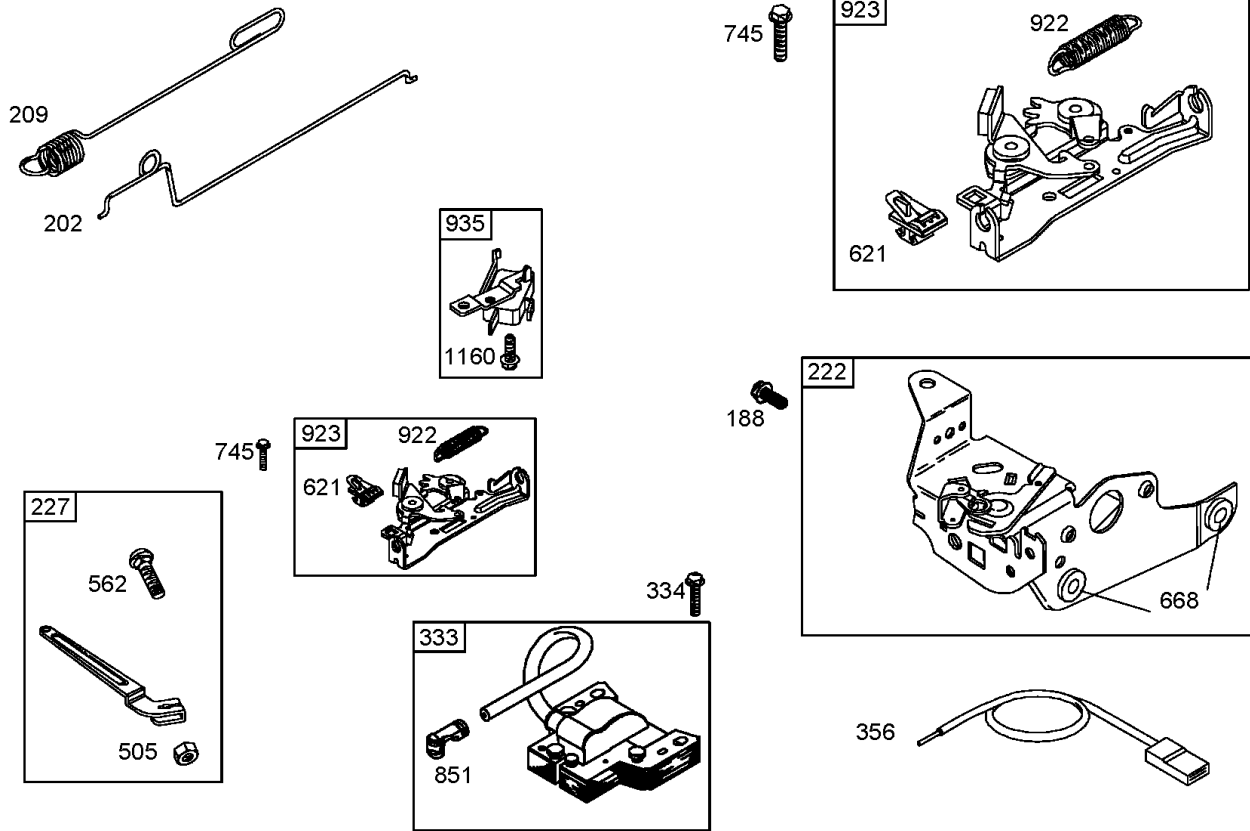

Assemblies include all parts shown in frames.

**Governor Assembly**  
**Briggs and Stratton 125K05-0186-E1**

| Ref   | Part No. | Qty. | Description                   |  |  |  |  |
|-------|----------|------|-------------------------------|--|--|--|--|
| 188   | 693399   | 1    | Screw (Control Bracket)       |  |  |  |  |
| 202   | 691829   | 1    | Link-mechanical Governor      |  |  |  |  |
| 209   | 691292   | 1    | Spring-governor               |  |  |  |  |
| 222   | 692467   | 1    | Bracket-control               |  |  |  |  |
| 227   | 690783   | 1    | Lever-governor Control        |  |  |  |  |
| 333   | 802574   | 1    | Armature-magneto              |  |  |  |  |
| 334   | 691061   | 1    | Screw (Magneto Armature)      |  |  |  |  |
| 356   | 790704   | 1    | Wire-stop                     |  |  |  |  |
| 505   | 691251   | 1    | Nut (Governor Control Lever)  |  |  |  |  |
| 562   | 691119   | 1    | Bolt (Governor Control Lever) |  |  |  |  |
| 621   | 692310   | 1    | Switch-stop                   |  |  |  |  |
| 2 668 | 493823   | 1    | Spacer                        |  |  |  |  |
| 745   | 691648   | 1    | Screw Brake)                  |  |  |  |  |
| 851   | 493880   | 1    | Terminal-spark Plug           |  |  |  |  |
| 922   | 691831   | 1    | Spring-brake                  |  |  |  |  |
| 923   | 691994   | 1    | Brake                         |  |  |  |  |
| 935   | 499421   | 1    | Switch-interlock              |  |  |  |  |
| 1160  | 691627   | 1    | Screw Interlock Switch)       |  |  |  |  |

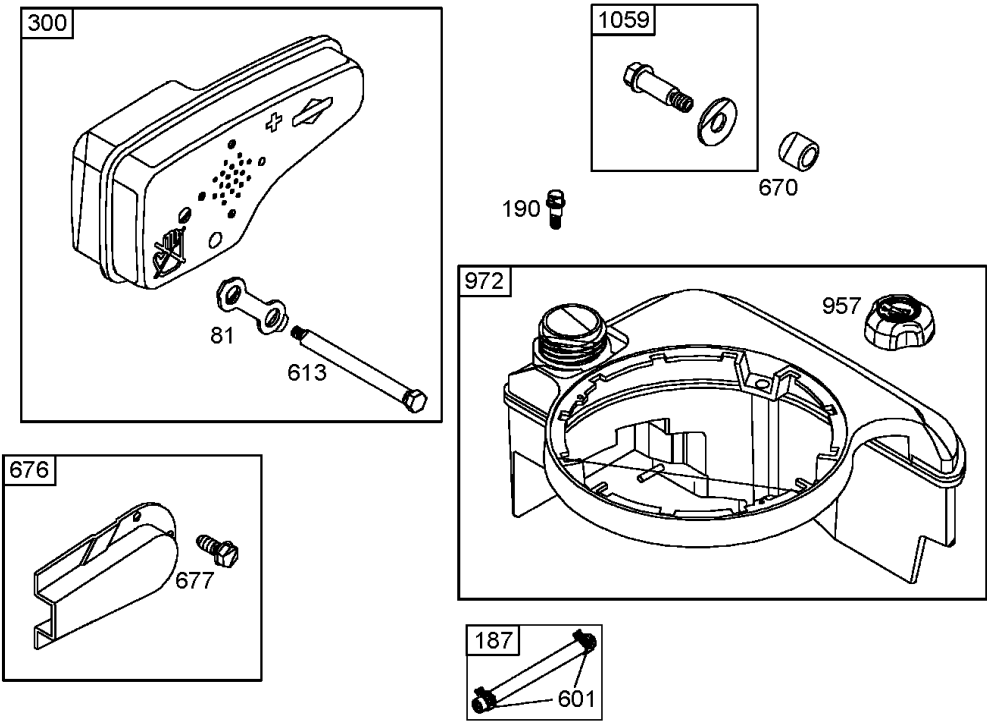


Assemblies include all parts shown in frames.

## Muffler and Fuel Tank Assembly
 
### Briggs and Stratton 125K05-0186-E1


| Ref  | Part No. | Qty. | Description                      |  |  |  |  |
|------|----------|------|----------------------------------|--|--|--|--|
| 81   | 691740   | 1    | Lock-muffler Screw               |  |  |  |  |
| 187  | 691050   | 1    | Line-fuel Cut To Required Length |  |  |  |  |
| 190  | 690940   | 1    | Screw (Dipstick Tube)            |  |  |  |  |
| 300  | 692038   | 1    | Muffler                          |  |  |  |  |
| 601  | 95162    | 1    | Clamp-hose                       |  |  |  |  |
| 613  | 691340   | 1    | Screw-Muffler                    |  |  |  |  |
| 670  | 692294   | 1    | Spacer-fuel Tank                 |  |  |  |  |
| 676  | 493871   | 1    | Deflector-muffler                |  |  |  |  |
| 677  | 690661   | 1    | Screw-Muffler Deflector          |  |  |  |  |
| 957  | 692046   | 1    | Cap-fuel Tank                    |  |  |  |  |
| 972  | 699374   | 1    | Tank-fuel                        |  |  |  |  |
| 1059 | 692311   | 1    | Kit-screw/washer                 |  |  |  |  |

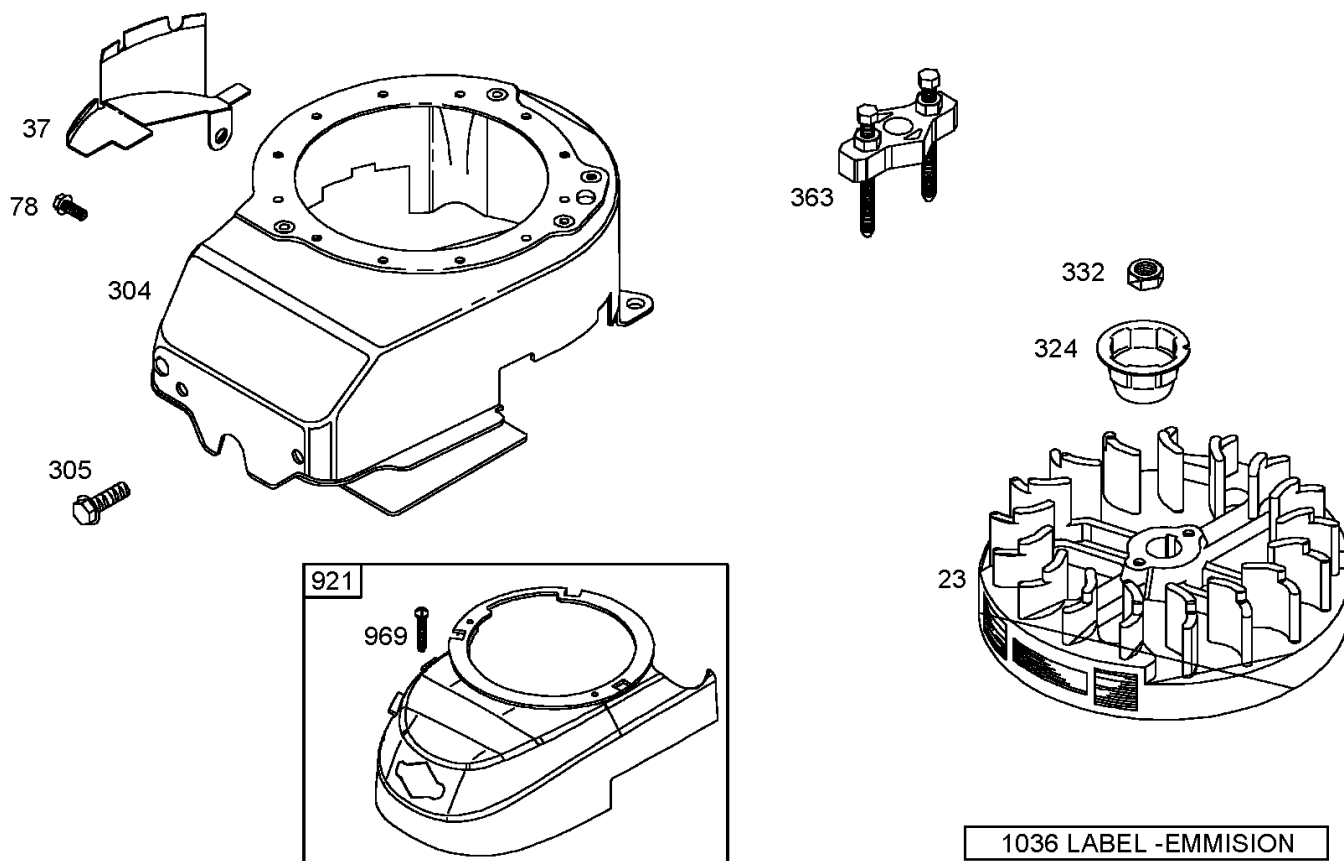

**Assemblies** include all parts shown in frames.


# Blower Housing Assembly Briggs and stratton 125K05-0186-E1

| Ref   | Part No. | Qty. | Description                 |  |  |  |  |
|-------|----------|------|-----------------------------|--|--|--|--|
| 923   | 692315   | 1    | Flywheel                    |  |  |  |  |
| 937   | 694086   | 1    | Guard-flywheel              |  |  |  |  |
| 978   | 691108   | 1    | Screw Flywheel Guard)       |  |  |  |  |
| 9304  | 493293   | 1    | Housing-blower              |  |  |  |  |
| 9305  | 691108   | 1    | Screw Flywheel Guard)       |  |  |  |  |
| 9324  | 695161   | 1    | Cup/screen ASM              |  |  |  |  |
| 9332  | 690662   | 1    | Nut Flywheel)               |  |  |  |  |
| 9363  | 19069    | 1    | Puller-flywheel             |  |  |  |  |
| 9921  | 790036   | 1    | Cover-blower Housing        |  |  |  |  |
| 9969  | 691138   | 1    | Screw Blower Housing Cover) |  |  |  |  |
| 91036 | 790411   | 1    | Label-emission              |  |  |  |  |

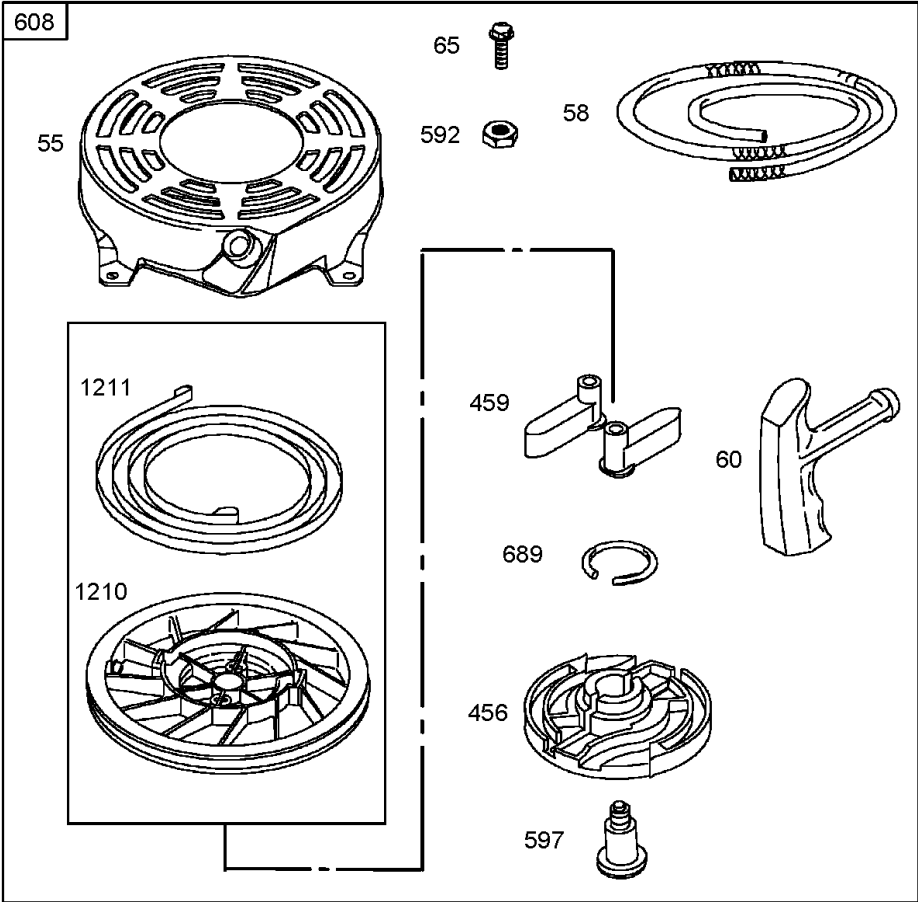

**Starter Assembly**  
**Briggs and Stratton 125K05-0186-E1**


| Ref  | Part No. | Qty. | Description                           |  |  |  |  |
|------|----------|------|---------------------------------------|--|--|--|--|
| 55   | 691421   | 1    | Housing-rewind Starter                |  |  |  |  |
| 58   | 697316   | 1    | Rope-starter (Cut To Required Length) |  |  |  |  |
| 60   | 281434   | 1    | Grip-starter Rope                     |  |  |  |  |
| 65   | 690837   | 1    | Screw (Rewind Starter)                |  |  |  |  |
| 456  | 692299   | 1    | Plate-pawl Friction                   |  |  |  |  |
| 459  | 281505   | 1    | Ratchet-pawl                          |  |  |  |  |
| 592  | 690800   | 1    | Nut (Rewind Starter)                  |  |  |  |  |
| 597  | 691696   | 1    | Screw (Pawl Friction Plate)           |  |  |  |  |
| 608  | 497680   | 1    | Starter-rewind                        |  |  |  |  |
| 689  | 691855   | 1    | Spring-friction                       |  |  |  |  |
| 1210 | 498144   | 1    | Pulley/spring ASM (Spring)            |  |  |  |  |
| 1211 | 498144   | 1    | Pulley/spring ASM (Spring)            |  |  |  |  |

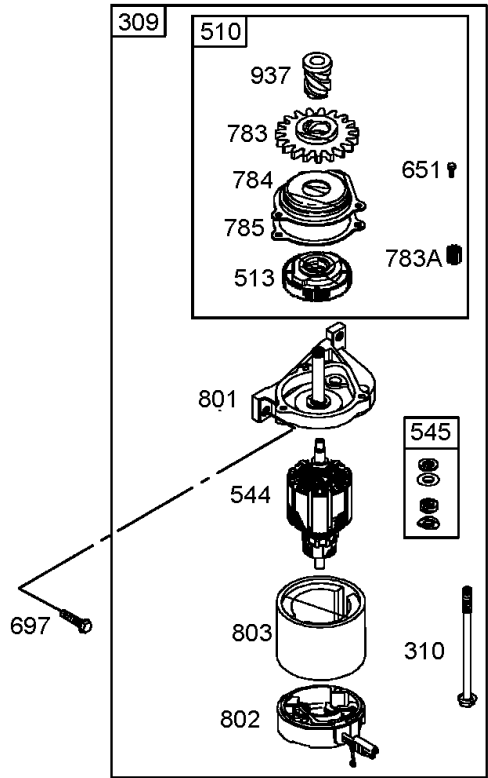

Assemblies include all parts shown in frames.

**Starter Motor Assembly**  
**Briggs and Stratton 125K05-0186-E1**

| Ref  | Part No. | Qty. | Description                |  |  |  |  |
|------|----------|------|----------------------------|--|--|--|--|
| 309  | 695550   | 1    | Motor-starter              |  |  |  |  |
| 310  | 692327   | 1    | Bolt (Starter Motor)       |  |  |  |  |
| 510  | 494147   | 1    | Drive-starter              |  |  |  |  |
| 513  | 692358   | 1    | Clutch-drive               |  |  |  |  |
| 544  | 690786   | 1    | Armature-starter           |  |  |  |  |
| 545  | 492919   | 1    | Washer Set                 |  |  |  |  |
| 651  | 691660   | 1    | Screw (Starter Gear Cover) |  |  |  |  |
| 697  | 691127   | 1    | Screw (Starter Motor)      |  |  |  |  |
| 783  | 691918   | 1    | Gear-pinion                |  |  |  |  |
| 783A | 691269   | 1    | Gear-pinion                |  |  |  |  |
| 784  | 692341   | 1    | Cover-starter Gear         |  |  |  |  |
| 785  | 692352   | 1    | Gasket-starter Cover       |  |  |  |  |
| 801  | 690782   | 1    | Cap-drive                  |  |  |  |  |
| 802  | 695267   | 1    | Cap-end                    |  |  |  |  |
| 803  | 695266   | 1    | Housing-starter            |  |  |  |  |
| 937  | 691325   | 1    | Spline-starter             |  |  |  |  |


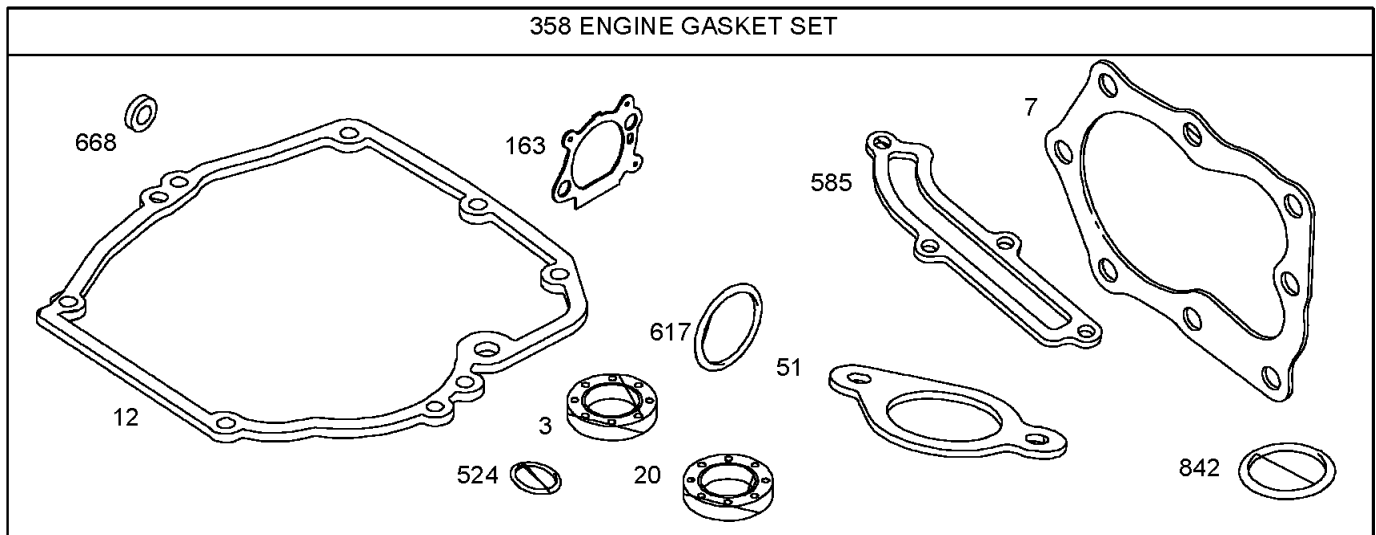 


**Assemblies** include all parts shown in frames.

# Gasket Assembly

## Briggs and Stratton 125K05-0186-E1

| Ref               | Part No. | Qty. | Description                         |  |  |  |  |
|-------------------|----------|------|-------------------------------------|--|--|--|--|
| <del>25</del> 3   | 299819   | 1    | Seal-oil Magneto Side)              |  |  |  |  |
| <del>25</del> 7   | 692249   | 1    | Gasket-cylinder Head                |  |  |  |  |
| <del>25</del> 12  | 692232   | 1    | Gasket-crankcase (.015 Thick, Std.) |  |  |  |  |
| <del>25</del> 20  | 399781   | 1    | Seal-oil                            |  |  |  |  |
| <del>25</del> 51  | 272199   | 1    | Gasket-intake                       |  |  |  |  |
| <del>25</del> 163 | 272653   | 1    | Gasket-air Cleaner                  |  |  |  |  |
| <del>45</del>     |          |      |                                     |  |  |  |  |
| <del>5</del> 358  | 497316   | 1    | Gasket Set-engine                   |  |  |  |  |
| <del>25</del> 524 | 692296   | 1    | Dipstick Tube Seal                  |  |  |  |  |
| <del>25</del> 585 | 691879   | 1    | Gasket-breather Passage             |  |  |  |  |
| <del>25</del> 617 | 270344   | 1    | Seal-o Ring Intake Manifold)        |  |  |  |  |
| <del>45</del>     |          |      |                                     |  |  |  |  |
| <del>25</del> 668 | 493823   | 1    | Spacer                              |  |  |  |  |
| <del>25</del> 842 | 691031   | 1    | O-ring Seal (Dipstick Tube)         |  |  |  |  |

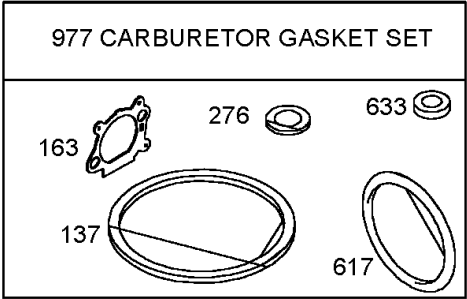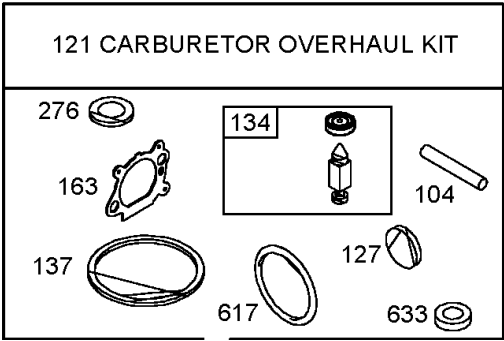

Assemblies include all parts shown in frames.

**Carburetor Overhaul Kit Assembly**

**Briggs and Stratton 125K05-0186-E1**

| Ref  | Part No. | Qty. | Description                  |  |  |  |  |
|------|----------|------|------------------------------|--|--|--|--|
| 1104 | 691242   | 1    | Pin-float Hinge              |  |  |  |  |
| 1121 | 498260   | 1    | Kit-carburetor Overhaul      |  |  |  |  |
| 1127 | 694468   | 1    | Plug-welch                   |  |  |  |  |
| 1134 | 398188   | 1    | Kit-needle/seat              |  |  |  |  |
| 1137 | 693981   | 1    | Gasket-float Bowl            |  |  |  |  |
| 1163 | 272653   | 1    | Gasket-air Cleaner           |  |  |  |  |
| 1276 | 271716   | 1    | Washer-sealing               |  |  |  |  |
| 1617 | 270344   | 1    | Seal-o Ring Intake Manifold) |  |  |  |  |
| 1633 | 691321   | 1    | Seal-choke/throttle Shaft    |  |  |  |  |
| 1977 | 498261   | 1    | Gasket Set-carburetor        |  |  |  |  |

## NOTES

