



Brake Kit Turf Sweeper

Model No. 07086

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Brake, Drum and Wheel Assembly	 3	Left Hand Brake Assembly No. 108-0847	 5
Drum Assembly No. 108-0688	 4	Right Hand Brake Assembly No. 108-0846	 6


Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR.....	as required	HYD.....	hydraulic
ASM.....	assembly	INC.....	incorporated
CARR.....	carriage	LH.....	left hand
DEG.....	degrees	NI.....	nylon insert
EXT.....	external	NPTF.....	national pipe thread fine
FH.....	flat head	PPH.....	phillips pan head
GA.....	gauge	PRH.....	phillips round head
HF.....	hex flange	PTH.....	phillips truss head
HH.....	hex head	PTO.....	power take off
HHF.....	hex head flange	RH.....	right hand
HHFTF.....	hex head flange thread forming	ROPS.....	roll over protection system
HJ.....	hex jam	SFH.....	slotted fillister head
HLH.....	hex lag head	SHH.....	slotted hex head
HOC.....	height-of-cut	SHWH.....	slotted hex washer head
HS.....	hex	SPH.....	slotted pan head
HSBH.....	hex socket button head	SQH.....	square head
HSFH.....	hex socket flat head	SRH.....	slotted round head
HSH.....	hex socket head	STD.....	standard
HWH.....	hex washer head	TAP.....	self tapping
HWHTF.....	hex washer head thread forming	TTH.....	torx truss head


Footnotes

- ❶ Not serviced separately

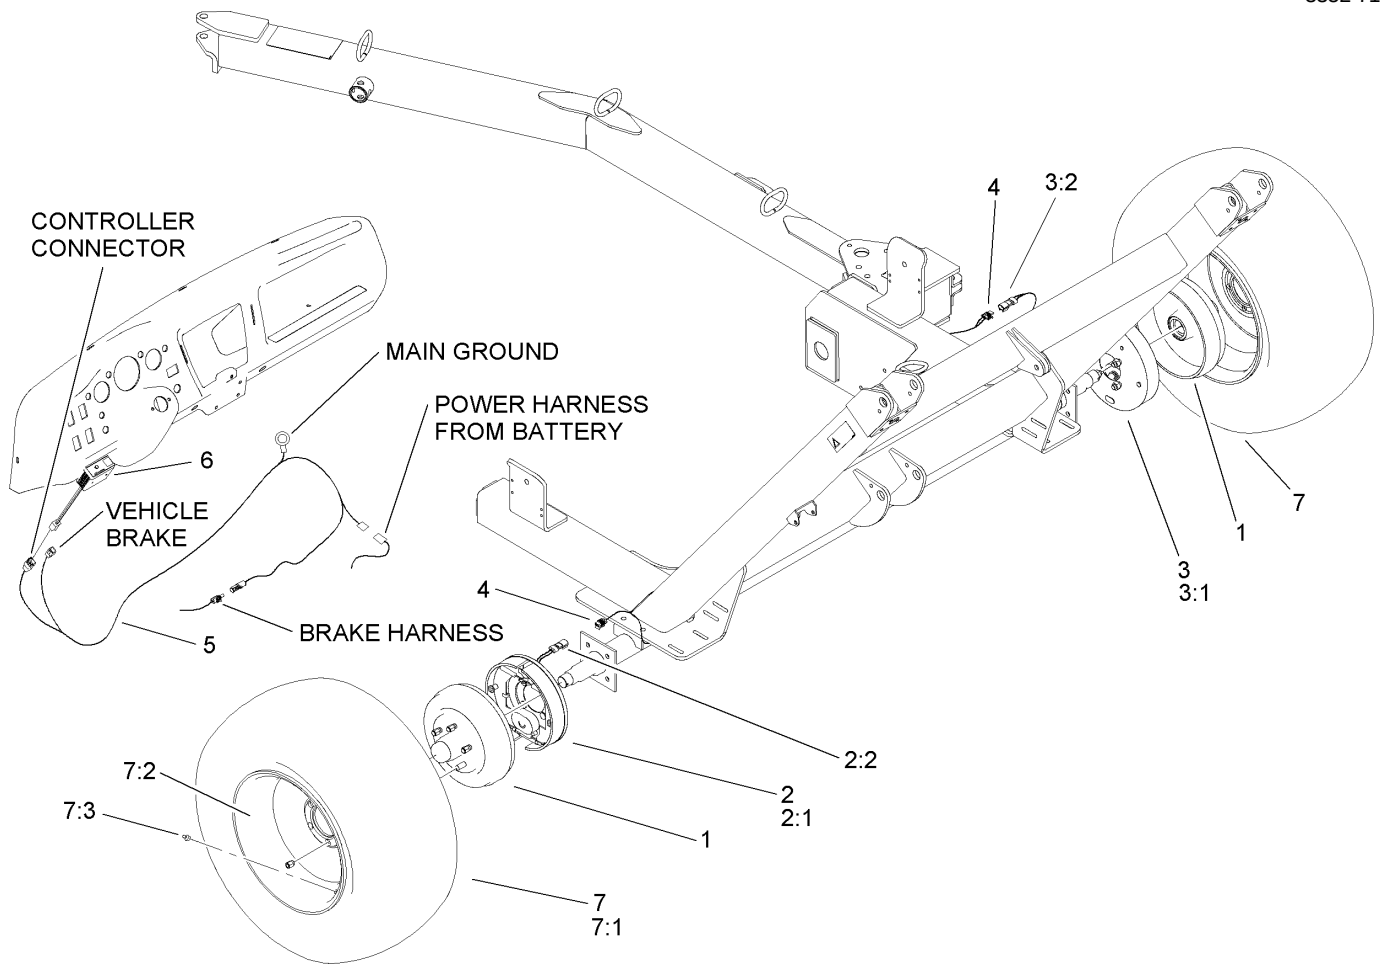


Brake, Drum and Wheel Assembly

Ref	Part No.	Qty.	Description				
1	108-0688	2	Drum And Bearings Kit				
2	108-0847	1	LH Brake And Connector ASM				
❶2:1		1	LH Brake ASM				
❶2:2		1	Connector-Electrical				
3	108-0846	1	RH Brake And Connector ASM				
❶3:1		1	RH Brake ASM				
❶3:2		1	Connector-Electrical				
4	107-1421	1	Harness-Brake				
5	107-1422	1	Harness-Wire, Brake Control				
6	108-3144	1	Controller-Brake, Electric				
7	107-1526	2	Wheel And Tire ASM				
7:1	95-3465	1	Tire				
7:2	107-1524	1	Rim				
7:3	232-24	1	Stem-Valve				

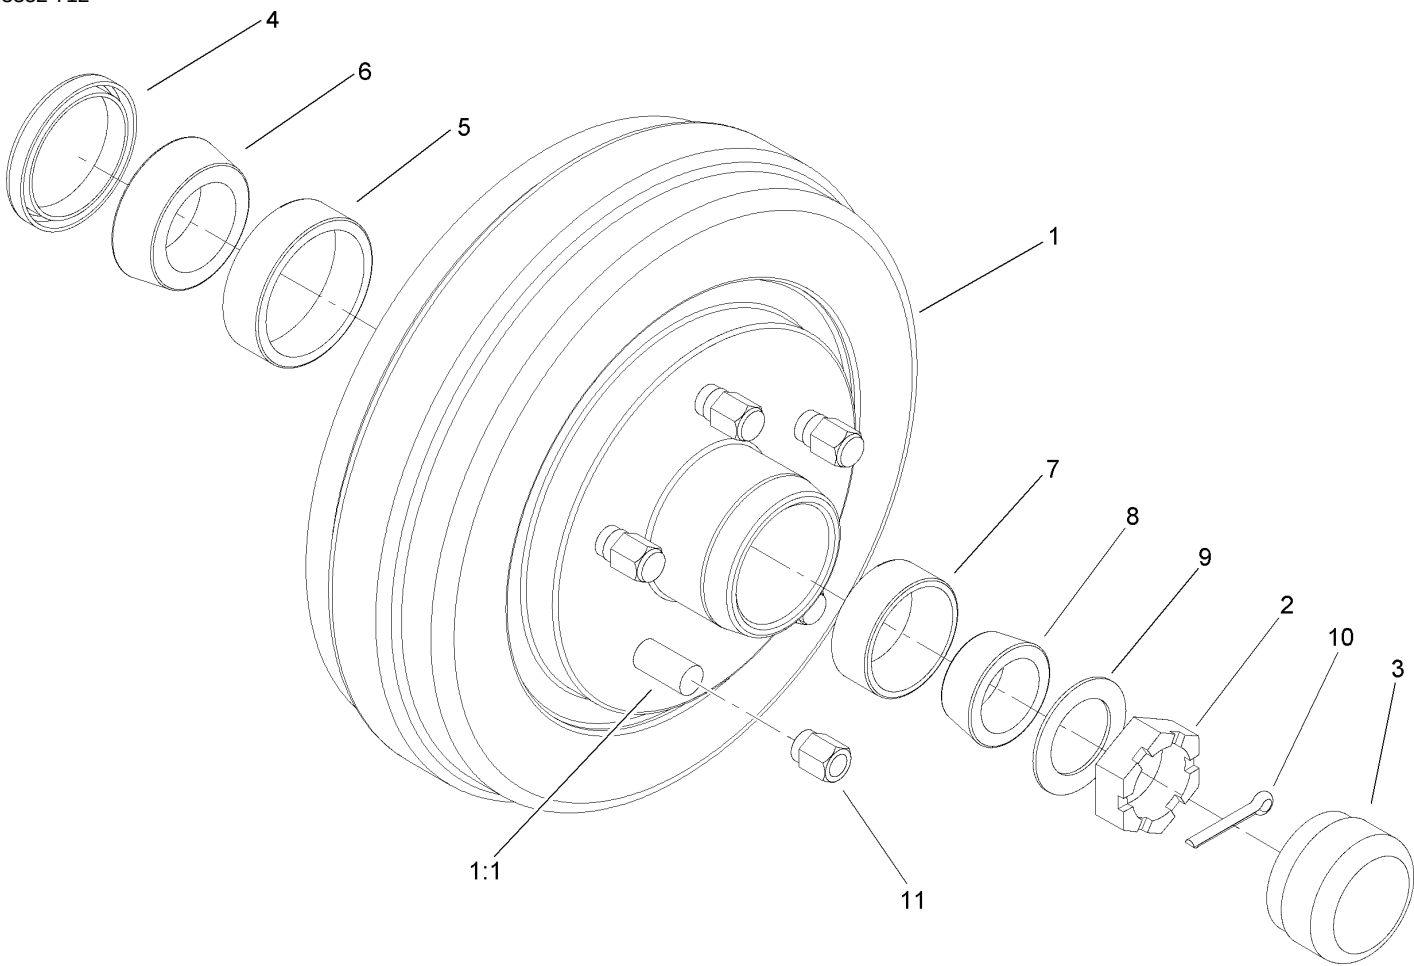


Drum Assembly No. 108-0688

Ref	Part No.	Qty.	Description				
1	108-0701	1	Drum ASM				
1:1	107-1503	5	Stud-Wheel				
2	99-4508	1	Nut-Castle				
3	108-0693	1	Cap-Grease				
4	108-0694	1	Seal-Grease				
5	108-0695	1	Cup-Bearing, Inner				
6	108-0696	1	Cone-Bearing, Inner				
7	108-0697	1	Cup-Bearing, Outer				
8	108-0698	1	Cone-Bearing, Outer				
9	3256-62	1	Washer-Flat				
10	3272-22	1	Pin-Cotter				
11	242-50	5	Nut-Lug				

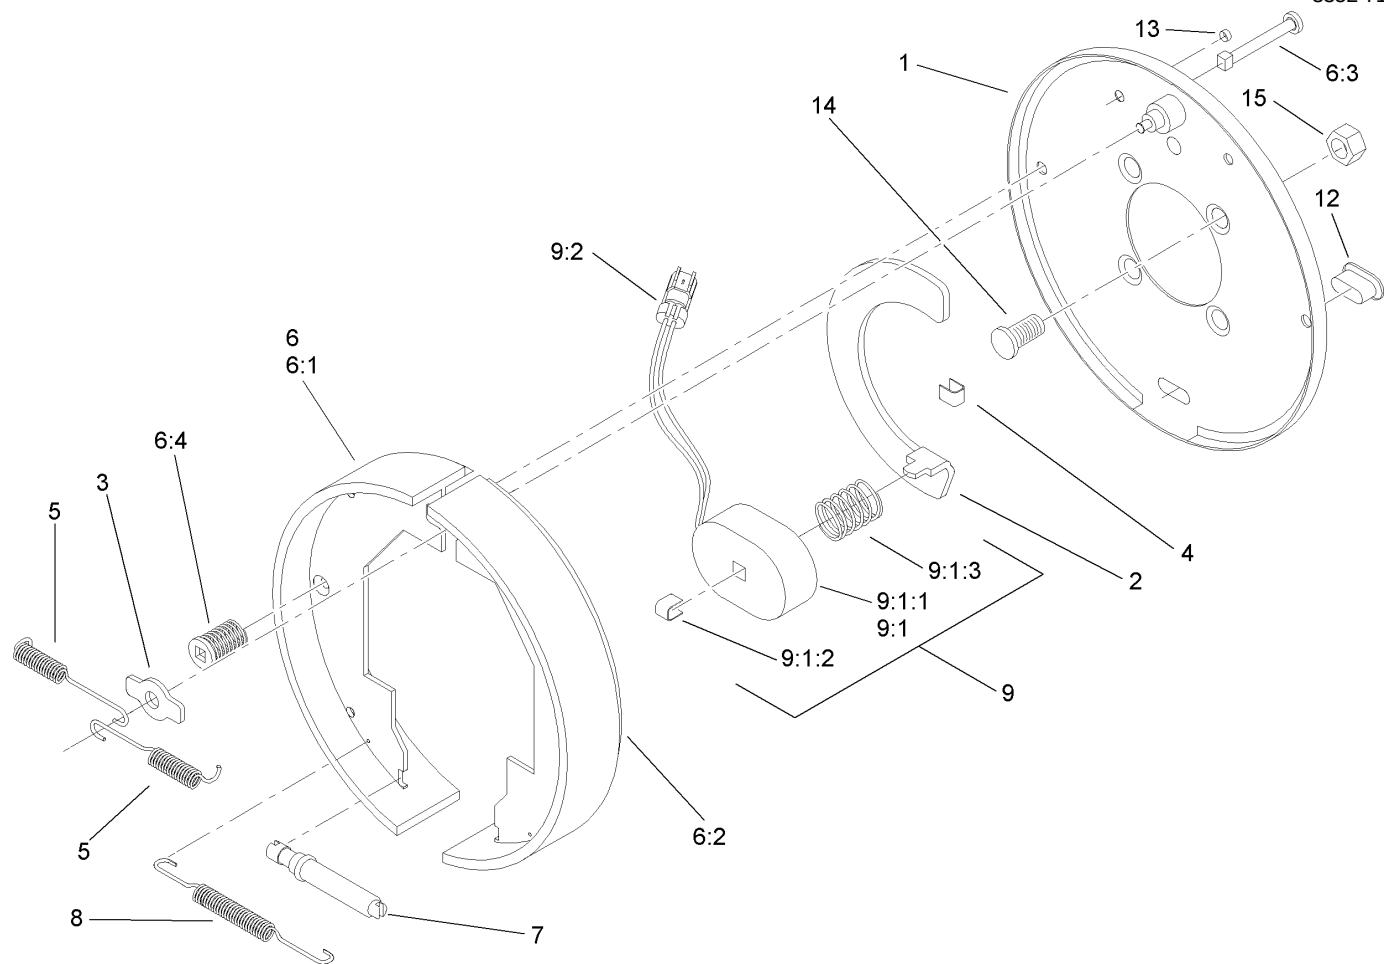

Left Hand Brake Assembly No. 108-0847

Ref	Part No.	Qty.	Description				
1	108-0706	1	Backing Plate ASM				
2	108-0714	1	Arm-Actuating, LH				
3	108-0722	1	Washer				
4	108-0719	3	Clip-Wire				
5	108-0721	2	Spring-Retractor				
6	108-0712	1	Brake Shoe Kit				
6:1	107-1499	1	Shoe-Primary				
6:2	107-1498	1	Shoe-Secondary				
6:3	108-0711	2	Pin-Shoe				
6:4	108-0723	2	Clip-Spring				
7	108-0713	1	Adjuster ASM				
8	108-0720	1	Screw-Spring, Adjusting				
9	107-1469	1	Magnet Kit With Connector				
9:1		1	Magnet Kit				
9:1:1		1	Magnet W/wire				
9:1:2		1	Clip-Magnet				
9:1:3		1	Spring-Magnet				
9:2		1	Connector-Electrical				
12	108-0708	1	Plug-Adjuster				
13	108-0710	1	Grommet-Wire				
14	107-1502	4	Bolt-Press In				
15	3296-7	4	Nut-Lock				

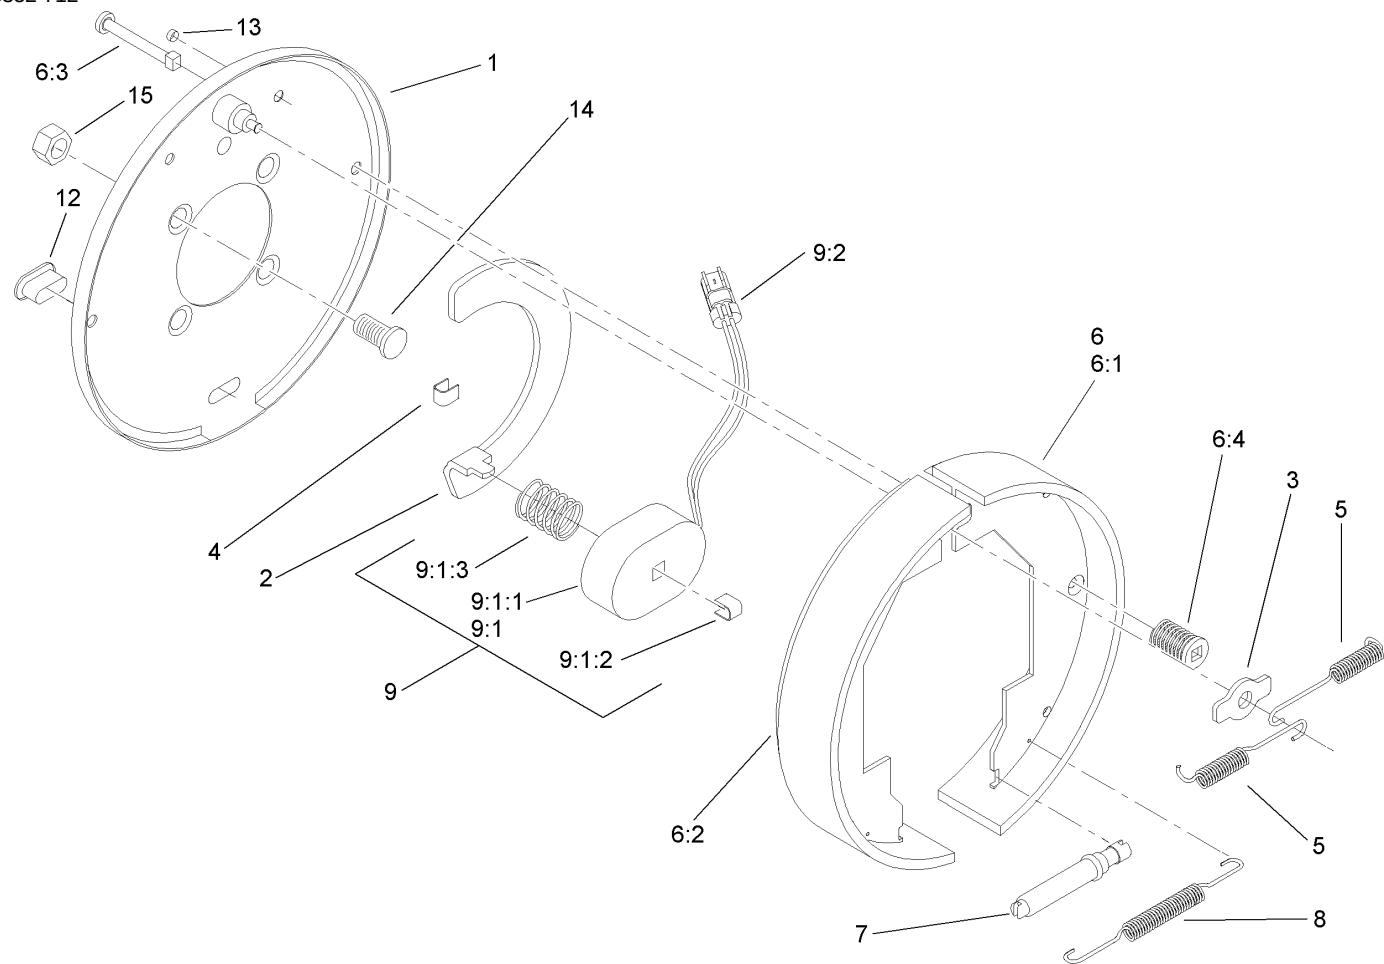

Right Hand Brake Assembly No. 108-0846

Ref	Part No.	Qty.	Description				
1	108-0706	1	Backing Plate ASM				
2	108-0715	1	Arm-Actuating, RH				
3	108-0722	1	Washer				
4	108-0719	3	Clip-Wire				
5	108-0721	2	Spring-Retractor				
6	108-0712	1	Brake Shoe Kit				
6:1	107-1499	1	Shoe-Primary				
6:2	107-1498	1	Shoe-Secondary				
6:3	108-0711	2	Pin-Shoe				
6:4	108-0723	2	Clip-Spring				
7	108-0713	1	Adjuster ASM				
8	108-0720	1	Screw-Spring, Adjusting				
9	107-1469	1	Magnet Kit With Connector				
9:1		1	Magnet Kit				
9:1:1		1	Magnet W/wire				
9:1:2		1	Clip-Magnet				
9:1:3		1	Spring-Magnet				
9:2		1	Connector-Electrical				
12	108-0708	1	Plug-Adjuster				
13	108-0710	1	Grommet-Wire				
14	107-1502	4	Bolt-Press In				
15	3296-7	4	Nut-Lock				

NOTES

