



NEW HOLLAND ..

Grass Collector

Model No. 715204016 - T05MP0001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Description	Page	Description	Page
Hopper Back Assembly	 3	Scroll Assembly	 6
Front Hopper Assembly	 4	Hitch and Suction Tube Assembly	 7
Frame and Bottom Hopper Assembly	 5	Collector Drive Assembly	 8

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
CARR. carriage	NI. nylon insert
DEG. degrees	PPH. phillips pan head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power take off
HF. hex flange	RH. right hand
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HS. hex	STD. standard
HSBH. hex socket button head	TAP. self tapping
HSFH. hex socket flat head	TTH. torx truss head
HSH. hex socket head	WH. wing head
HWH. hex washer head	
HWHTF. hex washer head thread forming	
HYD. hydraulic	

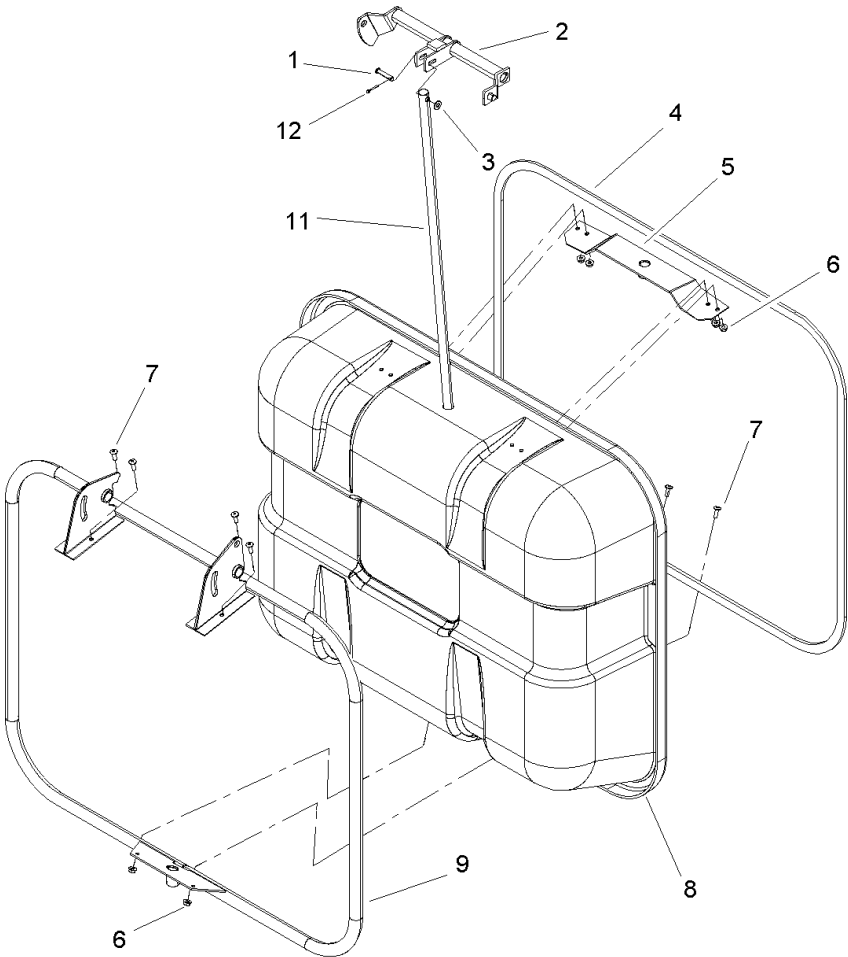

Hopper Back Assembly


Ref	Part No.	Qty.	Description				
1	98-3637	1	Pin				
2	98-3657	1	Lever				
3	3256-23	1	Washer-Flat				
4	98-3645	1	Seal-Stripping				
5	98-9172	1	Bracket-Guide				
6	32128-33	6	Nut-HF				
7	9114604	6	Screw-Head, Truss				
8	98-3606	1	Hopper-Back				
9	98-9171	1	Frame				
11	98-3655	1	Rod-Locking				
12	3272-10	1	Pin-Cotter				

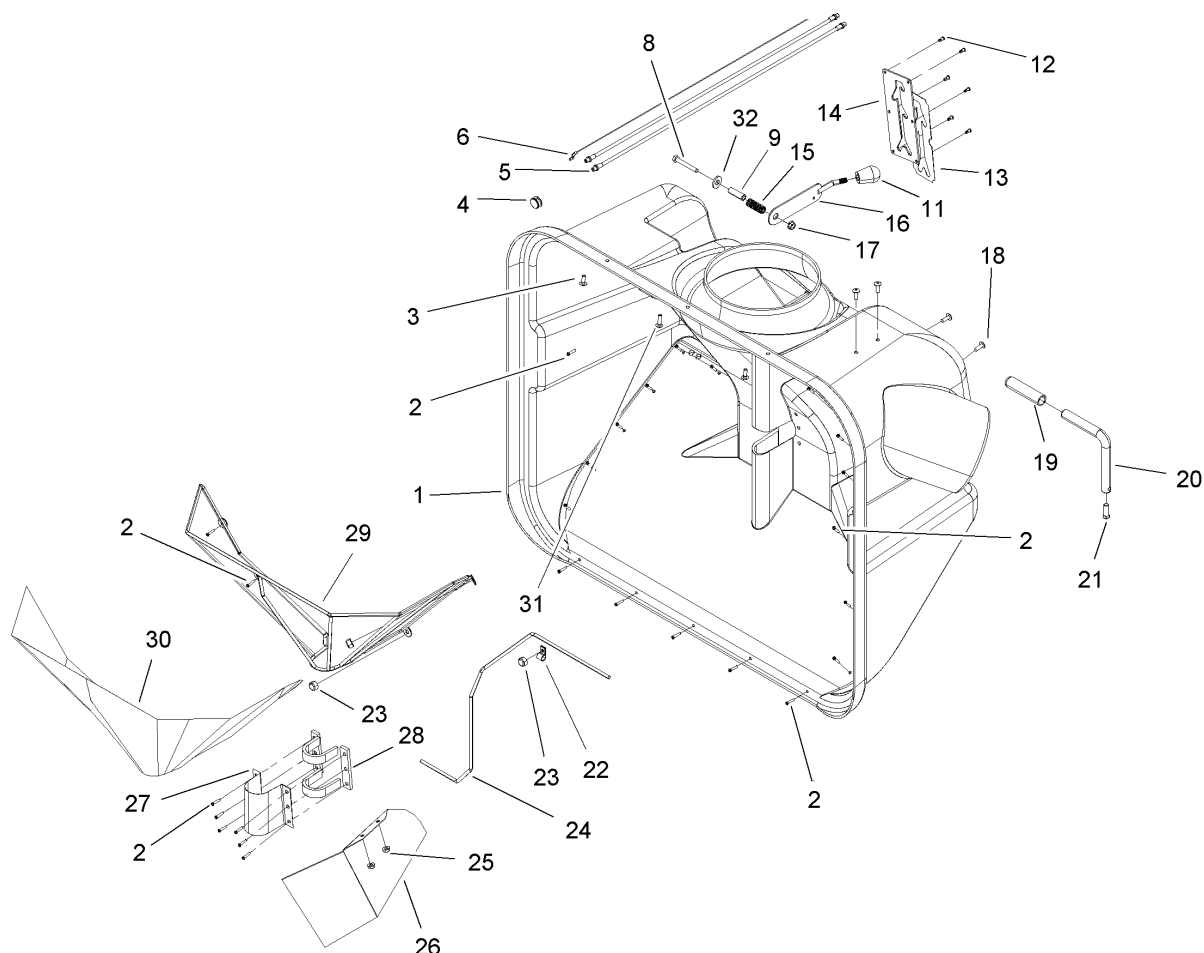

Front Hopper Assembly

Ref	Part No.	Qty.	Description
1	98-3601	1	Hopper-Front
2	32144-23	26	Screw-Hwh, Thread Forming
3	3229-1	2	Screw-CARR
4	98-3650	1	Cap-Rubber
5	98-3618	1	Shield-Cable
6	98-3620	1	Cable
8	322-11	1	Screw-HH
9	98-3648	1	Sleeve
11	98-3672	1	Knob-Oval
12	92-9665	6	Screw-Thread Cut
13	98-3680	1	Decal-Air Direction
14	106-3460	1	Plate-Lever
15	98-3647	1	Spring
16	98-9176	1	Lever-Air Control
17	32128-20	1	Nut-HF
18	9114604	4	Screw-Head, Truss
19	98-3662	1	Grip-Handle
20	98-9185	1	Arm-Fill Gauge
21	3243-5	1	Screw-Set, SQH
22	98-9144	1	Clip-Cable, Nylon
23	3296-8	3	Nut-Lock
24	98-9190	1	Rod-Fill Gauge
25	32128-33	2	Nut-HF
26	98-9186	1	Baffle-Grass


Ref	Part No.	Qty.	Description
27	98-9164	1	Cover-Bearing
28	98-9151	1	Seal-Stripping
29	98-9178	1	Frame-Filter
30	98-9181	1	Filter
31	3229-2	1	Screw-CARR
32	3256-24	1	Washer-Flat

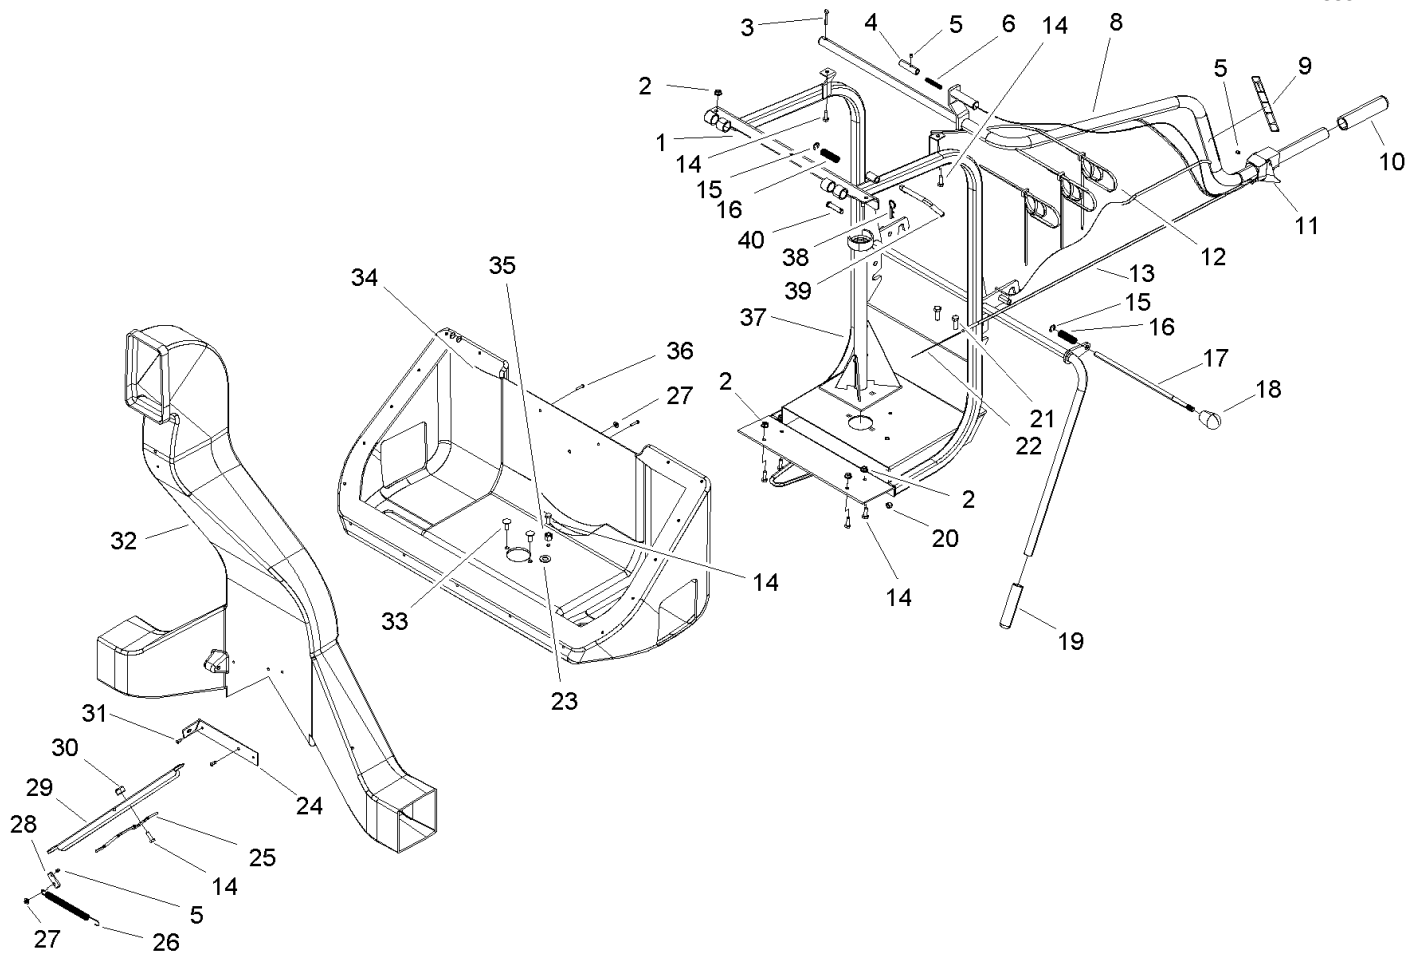

Frame and Bottom Hopper Assembly

Ref	Part No.	Qty.	Description
1	98-3651	1	Frame
2	32128-33	6	Nut-HF
3	3272-21	1	Pin-Cotter
4	98-3665	1	Pin-Lock
5	3245-1	3	Screw-Set, HSH
6	98-3627	1	Spring
8	98-3646	1	Arm-Dump
9	98-3679	1	Label-Dump Arm Operation
10	98-3669	1	Grip-Handle
11	98-3622	1	Lever-Control
12	3290-378	3	Tie-Cable
13	98-3619	1	Shield-Cable
14	321-4	8	Screw-HH
15	98-3659	2	Ring-Retainer
16	98-3640	2	Spring
17	98-3668	1	Pin-Hitch
18	98-3672	1	Knob-Oval
19	98-3662	1	Grip-Handle
20	3296-42	1	Nut-Lock, NI
21	322-5	2	Screw-HH
22	98-3621	1	Cable
23	3256-25	1	Washer-Flat
24	98-3694	1	Bracket-Reinforcing
25	98-3644	1	Lever-Door


Ref	Part No.	Qty.	Description
26	98-3642	1	Spring
27	98-3652	2	Washer-Cap
28	98-3681	1	End-Cable
29	98-9175	1	Door-Air
30	3296-19	1	Nut-Lock NI
31	92-9665	2	Screw-Thread Cut
32	98-3605	1	Dock-Air
33	3230-23	2	Screw-CARR
34	98-3602	1	Hopper-Bottom
35	3296-39	1	Nut-Lock, NI
36	32144-23	2	Screw-Hwh, Thread Forming
37	98-9139	1	Support-Shaft
38	98-3696	1	Hairpin
39	98-3613	1	Hook
40	98-3695	1	Pin-Hitch

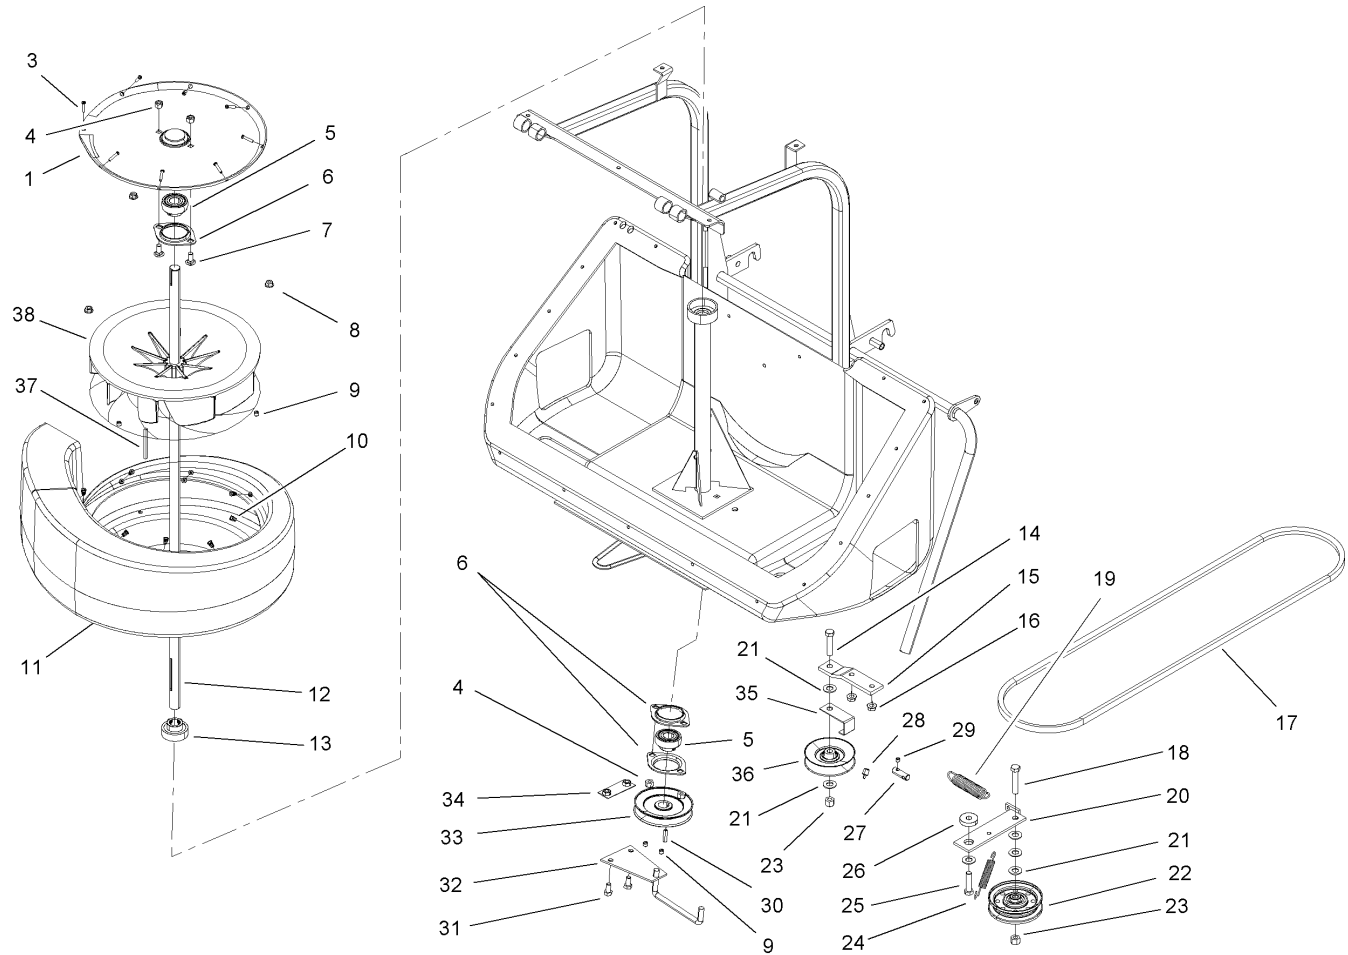

Scroll Assembly


Ref	Part No.	Qty.	Description
1	98-3604	1	Cover-Scroll
3	3250-17	8	Screw-PPH
4	3296-29	4	Nut-Lock, NI
5	98-3690	2	Bearing
6	98-3691	3	Flange
7	3230-1	2	Bolt-CARR
8	32128-33	2	Nut-HF
9	3246-2	2	Screw-Set, HSH
10	98-9145	8	Nut-Insert
11	98-9146	1	Scroll
12	98-9141	1	Shaft
13	98-9150	1	Bearing
14	323-9	1	Screw-HH
15	106-3450	1	Bracket
16	32128-20	2	Nut-HF
17	98-3624	1	Belt-V
18	323-10	1	Screw-HH
19	98-3636	1	Spring
20	98-3630	1	Arm-Idler
21	3256-25	6	Washer-Flat
22	98-9135	1	Idler-Flat
23	3296-39	2	Nut-Lock, NI
24	98-9197	1	Spring-Extension
25	323-8	1	Screw-HH

Ref	Part No.	Qty.	Description
26	98-3632	1	Washer-Flange
27	98-3681	1	End-Cable
28	98-9194	1	Grommet-Cable
29	3245-1	1	Screw-Set, HSH
30	98-3692	1	Key
31	322-2	2	Screw-HH
32	106-3452	1	Guide-Belt
33	98-3623	1	Pulley-V
34	106-3451	1	Plate-Mounting
35	98-9199	1	Guide-Belt
36	98-9198	1	Pulley-V
37	98-3628	1	Key
38	98-9140	1	Fan

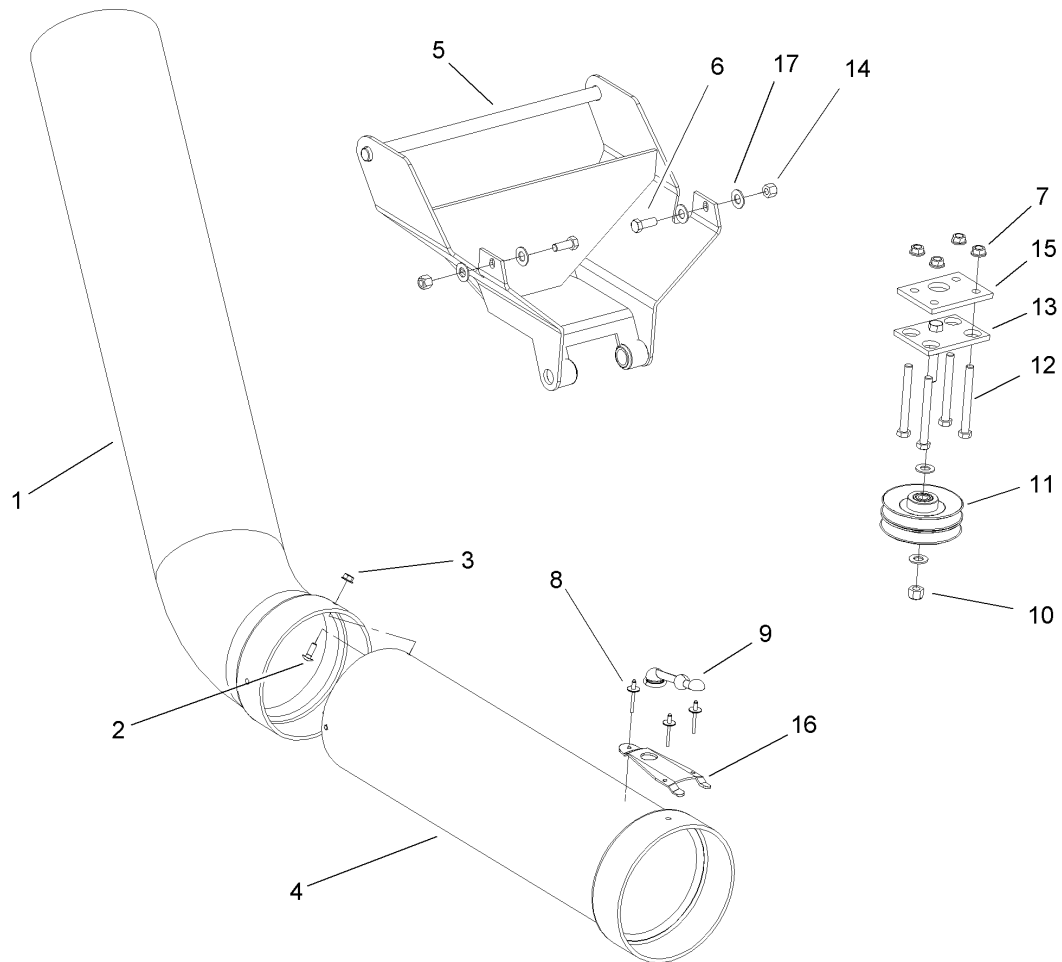

Hitch and Suction Tube Assembly

Ref	Part No.	Qty.	Description				
1	98-3609	1	Tube-Elbow				
2	3229-1	3	Screw-CARR				
3	32128-33	3	Nut-HF				
4	98-3610	1	Tube-Straight				
5	98-3666	1	Hitch-Quick-Tractor				
6	323-6	2	Screw-HH				
7	3290-357	4	Nut-HHF				
8	3269-21	3	Rivet-Pop				
9	98-3693	1	Latch-Rubber				
10	3296-48	1	Nut-Lock, NI				
11	98-3617	1	Idler-Double				
12	323-15	4	Screw-HH				
13	98-3616	1	Plate-Mounting				
14	3296-39	2	Nut-Lock, NI				
15	98-3614	1	Plate				
16	98-3675	1	Bracket				
17	3256-25	6	Washer-Flat				

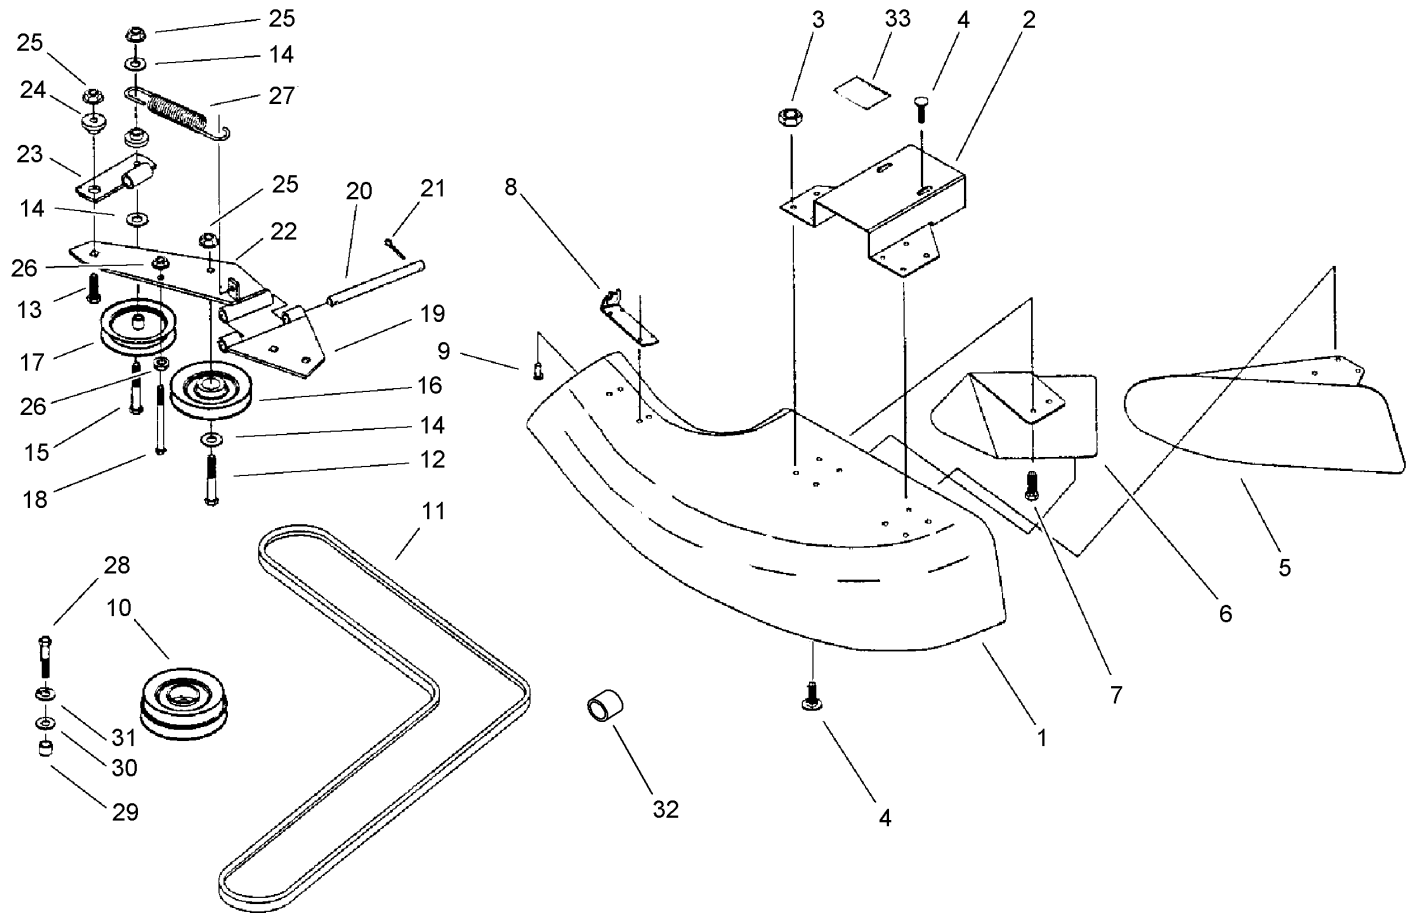

Collector Drive Assembly

Ref	Part No.	Qty.	Description
1	98-3608	1	Boot-Suction
2	98-3607	1	Bracket-Boot
3	32128-33	12	Nut-HF
4	614512	4	Screw
5	98-3626	1	Baffle
6	98-3625	1	Baffle
7	9114604	10	Screw-Head, Truss
8	98-3676	1	Bracket-Latch
9	3269-21	4	Rivet-Pop
10	98-3641	1	Pulley-Double
11	98-3674	1	Belt-V
12	323-8	1	Screw-HH
13	3231-25	1	Screw-CARR
14	3256-25	4	Washer-Flat
15	323-12	1	Screw-HH
16	98-3629	1	Idler-V
17	98-9135	1	Idler-Flat
18	322-13	1	Screw-HH
19	98-3633	1	Hinge
20	98-3638	1	Pin
21	3272-10	2	Pin-Cotter
22	98-3634	1	Holder-Idler
23	98-3635	1	Arm-Idler
24	98-3632	2	Washer-Flange

Ref	Part No.	Qty.	Description
25	3296-39	3	Nut-Lock, NI
26	32128-20	2	Nut-HF
27	98-3636	1	Spring
28	321-6	3	Screw-HH
29	98-3639	3	Spacer-Guard
30	3256-23	3	Washer-Flat
31	3253-3	3	Washer-Lock
32	98-9113	1	Spacer
33	93-7010	1	Decal-Danger

NOTES

NOTES

NOTES

