



Front Replacement Mower Groundsmaster® 580-D

Model No. 30592 - 220000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Description	Page	Description	Page
Deck and Wing Assembly	 3	Castor Arm and Wheel Assembly	 6
Pulley and Drive Assembly	 5	Deck Cover Assembly	 7
		Spindle Assembly	 8

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR.	as required	INC.	incorporated
ASM.	assembly	LH.	left hand
CARR.	carriage	NI.	nylon insert
DEG.	degrees	PPH.	phillips pan head
FH.	flat head	PTH.	phillips truss head
GA.	gauge	PTO.	power take off
HF.	hex flange	RH.	right hand
HH.	hex head	SFH.	slotted fillister head
HHF.	hex head flange	SHH.	slotted hex head
HHFTF.	hex head flange thread forming	SHWH.	slotted hex washer head
HJ.	hex jam	SPH.	slotted pan head
HLH.	hex lag head	SQH.	square head
HOC.	height-of-cut	SRH.	slotted round head
HS.	hex	STD.	standard
HSBH.	hex socket button head	TAP.	self tapping
HSFH.	hex socket flat head	TTH.	torx truss head
HSH.	hex socket head	WH.	wing head
HWH.	hex washer head		
HWHTF.	hex washer head thread forming		
HYD.	hydraulic		

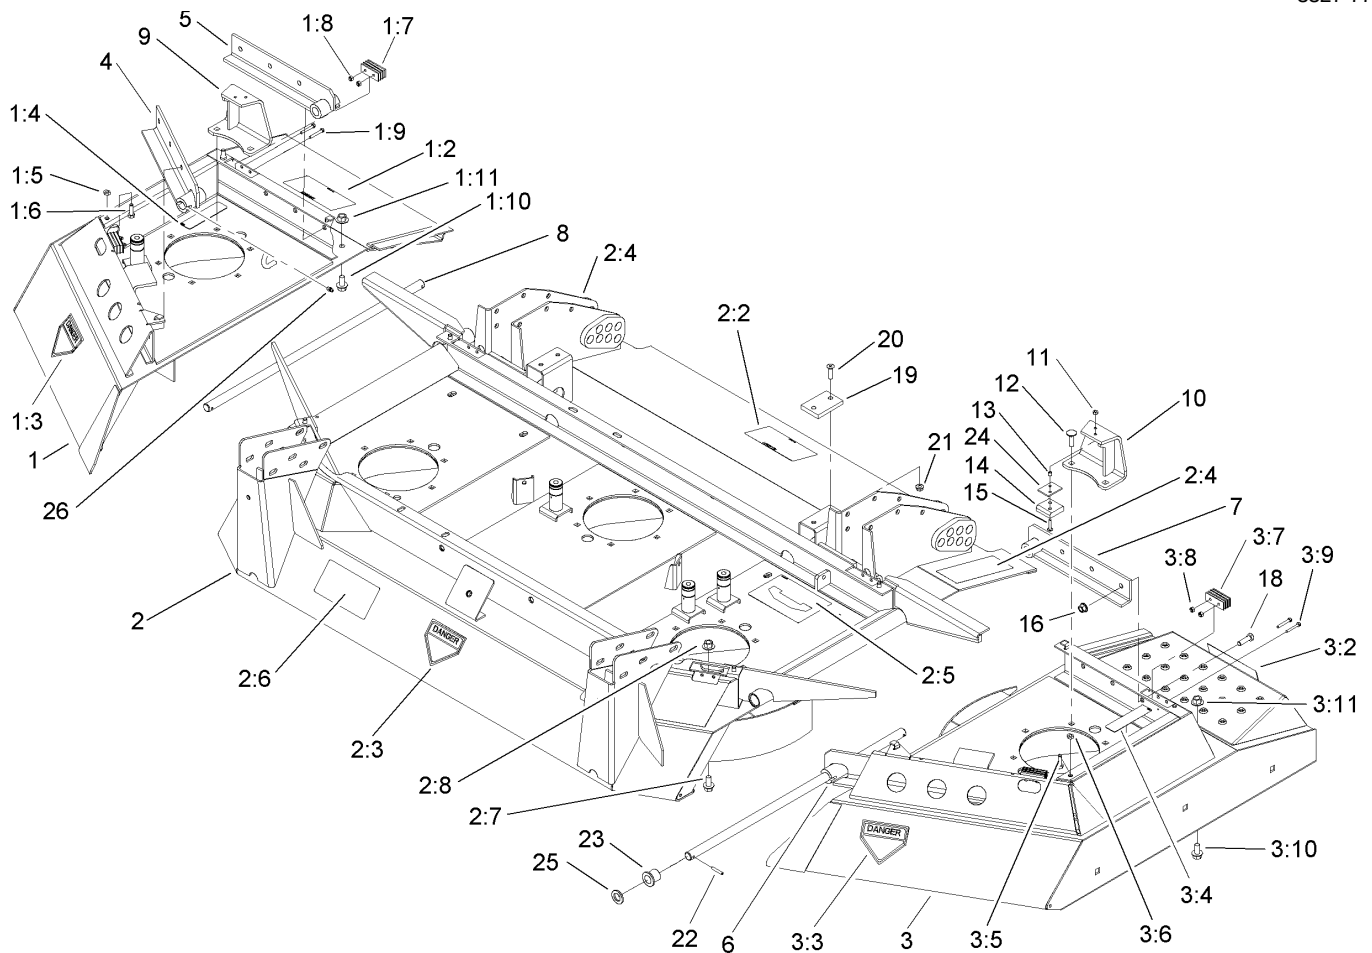

Deck and Wing Assembly


Ref	Part No.	Qty.	Description
1	106-0037	1	RH Wing Deck ASM
1:2	66-1340	1	Decal-Danger
1:3	43-8480	1	Decal-Danger
1:4	67-5360	1	Decal-Danger
1:5	322-5	2	Screw-HH
1:6	3218-2	2	Nut-Jam
1:7	69-6260	2	Magnet
1:8	3296-2	4	Nut-Lock
1:9	32105-1	4	Screw-SHH
1:10	3234-12	2	Screw-HHF
1:11	32128-43	2	Nut-Flange
2	106-0038	1	Center Deck ASM
2:2	66-1340	1	Decal-Danger
2:3	43-8480	1	Decal-Danger
2:4	95-0817	2	Decal-HOC
2:5	106-0040	1	Decal-Routing, Belt
2:6	95-0845	1	Decal-HOC
2:7	3234-12	8	Screw-HHF
2:8	32128-43	8	Nut-Flange
3	106-0039	1	LH Wing Deck ASM
3:2	66-1340	1	Decal-Danger
3:3	43-8480	1	Decal-Danger
3:4	67-5360	1	Decal-Danger
3:5	322-5	2	Screw-HH

Ref	Part No.	Qty.	Description
3:6	3218-2	2	Nut-Jam
3:7	69-6260	2	Magnet
3:8	3296-2	4	Nut-Lock
3:9	32105-1	4	Screw-SHH
3:10	3234-12	2	Screw-HHF
3:11	32128-43	2	Nut-Flange
4	69-6690-01	1	Hinge-Front, Right
5	69-6710-01	1	Hinge-Rear, Right
6	69-6640-01	1	Hinge-Front, Left
7	69-6670-01	1	Hinge-Rear, Left
8	69-6900	2	Shaft-Hinge
9	94-6762-01	1	Bracket-RH
10	94-6760-01	1	Bracket-LH
11	3296-2	4	Nut-Lock
12	3231-25	4	Screw-CARR
13	40-9520	4	Spacer
14	40-0330	2	Cushion-Rubber
15	32122-28	4	Screw
16	32128-36	6	Nut-HF
18	323-6	6	Screw-HH
19	69-9290	2	Pad-Bumper
20	32108-103	4	Screw-FH
21	32128-20	4	Nut-HF
22	32121-6	4	Pin-Roll, Slotted

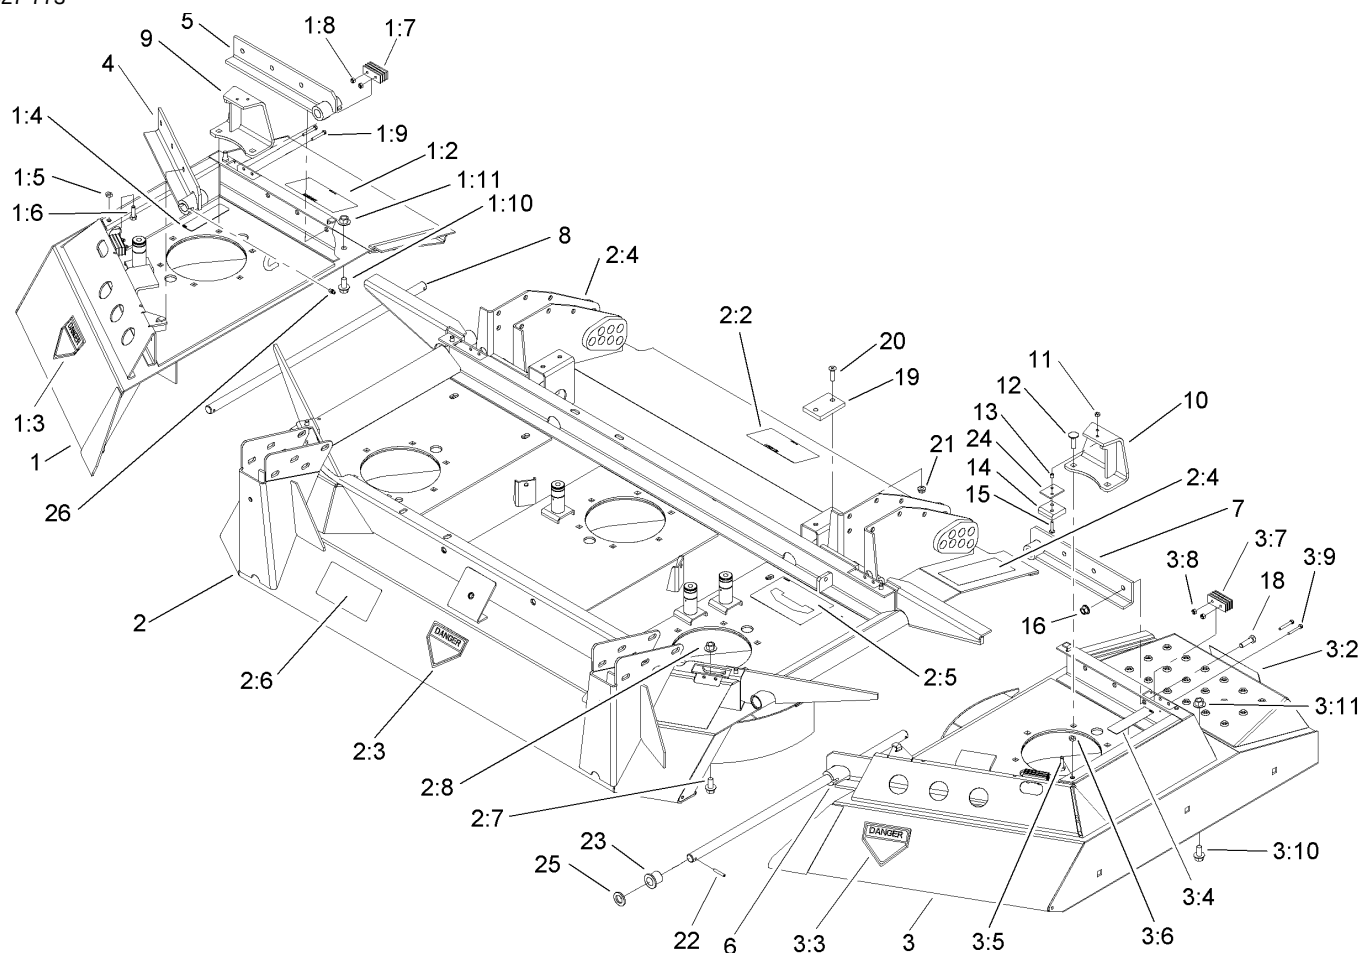

Deck and Wing Assembly (continued)


Ref	Part No.	Qty.	Description
23	92-3162	4	Bushing
24	42-6200	2	Shim-Cushion
25	95-3297	4	Bearing-Thrust
26	302-5	4	Fitting-Grease

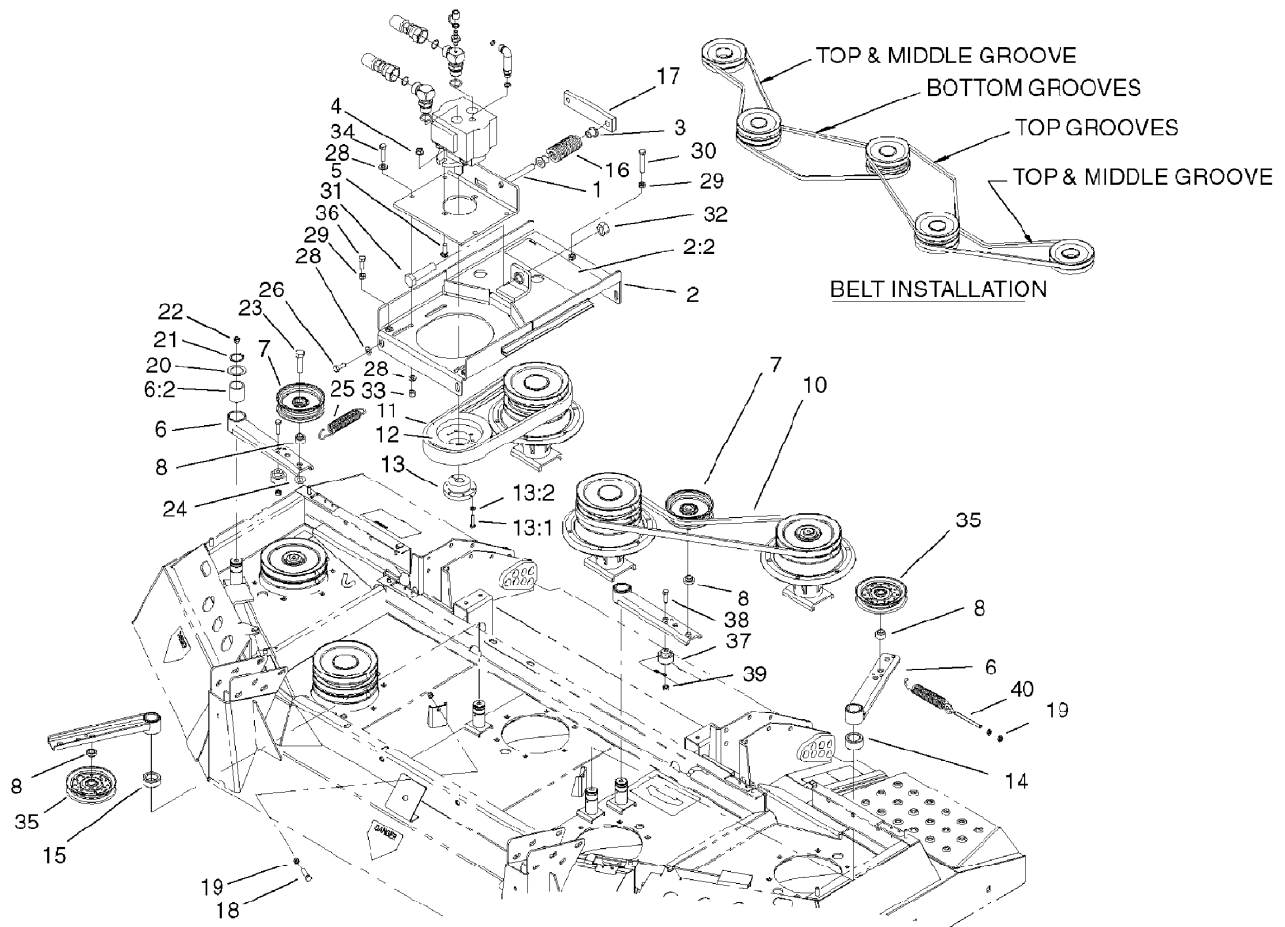

Pulley and Drive Assembly

Ref	Part No.	Qty.	Description
1	105-0655-03	1	Slide Plate ASM
2	106-0043	1	Motor Mount ASM
2:2	106-0044	1	Decal-Belt Tension Adjustment, Gm580d
3	100-1414	4	Holder-Spring
4	32128-36	2	Nut-HF
5	3234-24	2	Screw-HHF
6	105-0722	4	Idler Arm Bushing ASM
6:2	256-254	1	Bushing
7	69-5430	2	Pulley-Idler, Flat
8	69-6970	4	Spacer-Idler, Flat
10	99-2318	4	V-Belt
11	106-0003	1	V-Belt
12	105-0672	1	Pulley
13	105-0671	1	Hub
13:1	32104-96	3	Screw-HH
13:2	3253-3	3	Washer-Lock
14	105-0720	1	Bushing
15	105-0721	1	Bushing
16	106-0029	2	Spring-Compression
17	105-0636-03	1	Bar-Slide
18	322-41	2	Screw-HH
19	3218-2	8	Nut-Jam
20	106-0075	4	Washer-Shim


Ref	Part No.	Qty.	Description
21	32120-2	4	Ring-Retaining
22	302-2	4	Fitting-Grease
23	325-8	4	Screw-HH
24	32128-23	4	Nut-HF
25	76-1670-03	4	Spring-Extension
26	3234-42	4	Screw-HHF
28	3256-24	8	Washer-Flat
29	3218-3	3	Nut-Jam
30	323-49	1	Bolt-TAP
31	106-0042	1	TAP Bolt-HH
32	3218-7	1	Nut-Jam
33	104-8301	4	Nut-Flange, NI
34	323-7	4	Screw-HH
35	63-1540-03	2	Pulley-Idler
36	323-50	2	Bolt-TAP
37	98-3038	2	Bushing-Idler
38	322-6	2	Screw-HH
39	32149-1	2	Nut-Keps
40	100-6177	2	Rod-Tension

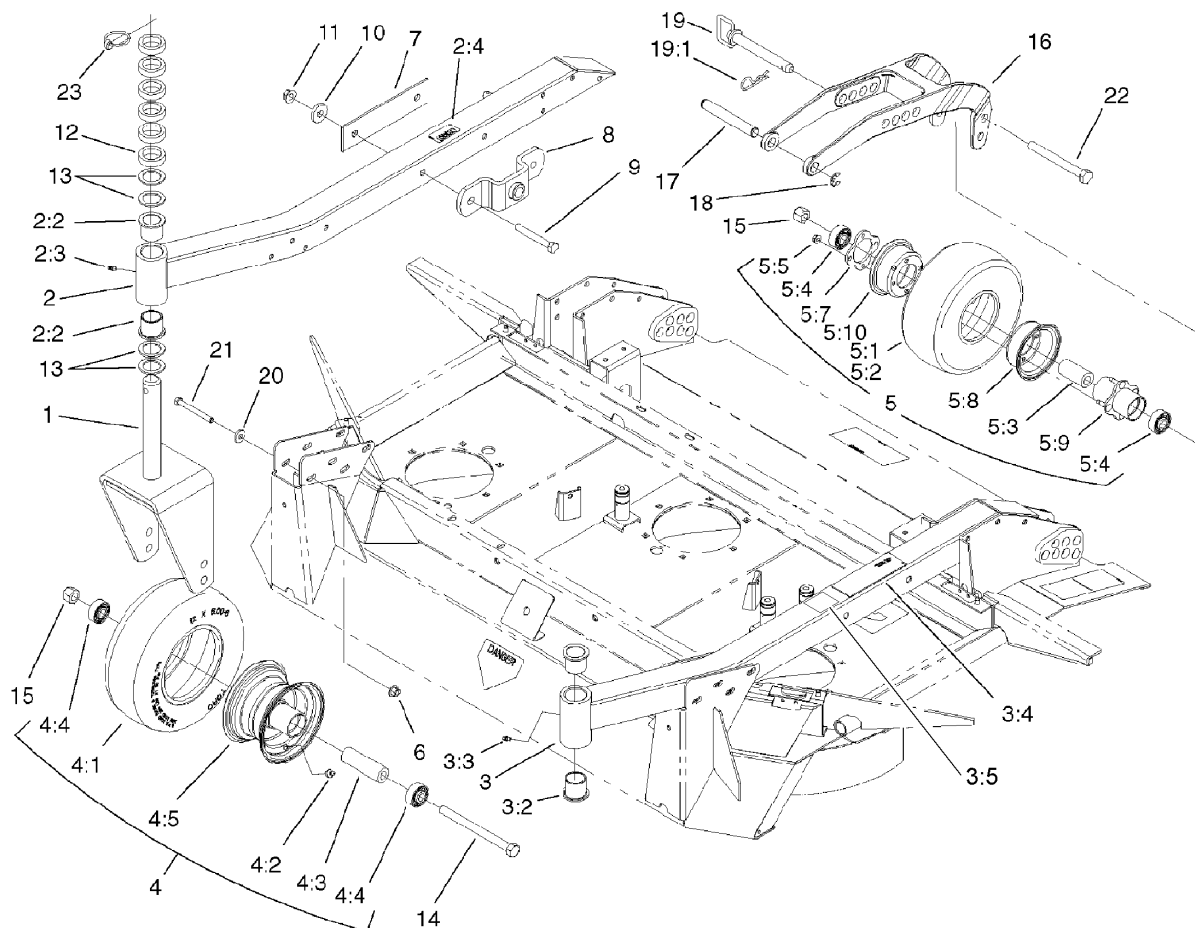

Castor Arm and Wheel Assembly

Ref	Part No.	Qty.	Description
1	98-7302-01	2	Fork-Castor
2	106-0026	1	RH Castor Arm ASM
2:2	69-6470	2	Bushing-Castor
2:3	302-5	1	Fitting-Grease
2:4	53-4860	1	Decal-Standard, Safety
3	106-0027	1	LH Castor Arm ASM
3:2	69-6470	2	Bushing-Castor
3:3	302-5	1	Fitting-Grease
3:4	95-0818	1	Decal-Torque
3:5	93-7252	1	Decal
4	98-7312	2	12in Wheel ASM
4:1	98-7313	1	12in Tire
4:2	232-27	1	Stem-Valve
4:3	93-5630	1	Spacer-Bearing, Inner
4:4	93-4237	2	Bearing
4:5	93-5631	1	6in Rim ASM
5	93-4240	2	10in Wheel ASM
5:1	93-4243	1	Tire
5:2	93-4244	1	Tube-Inner (W/valve)
5:3	93-4241	1	Spacer-Bearing, Inner
5:4	93-4237	2	Bearing
5:5	32128-16	4	Nut-HHF
5:7	93-4242	1	Plate
5:8	93-4239	1	Rim-Wheel, Half


Ref	Part No.	Qty.	Description
5:9	93-5980	1	Hub
5:10	95-2741	1	Rim-Wheel, Half
6	32128-43	16	Nut-Flange
7	69-8790-01	2	Plate-Reinforcing
8	69-7290-01	2	Mount-Joint, Ball
9	325-15	4	Screw-HH
10	30-8770	4	Washer
11	32128-23	4	Nut-HF
12	69-1510	12	Spacer-Castor
13	69-6860	8	Washer-Thrust
14	327-25	2	Screw-HH
15	3296-53	4	Nut-Lock, NI
16	98-3047-01	2	Arm-Pivot
17	69-9260	2	Clevis Pin
18	32151-48	4	E-Ring
19	283-70	2	Pin-Hitch
19:1	3290-343	1	Pin-Hair
20	5-0838	16	Washer
21	323-15	16	Screw-HH
22	327-24	2	Screw-HH
23	3290-384	2	Pin-Lynch

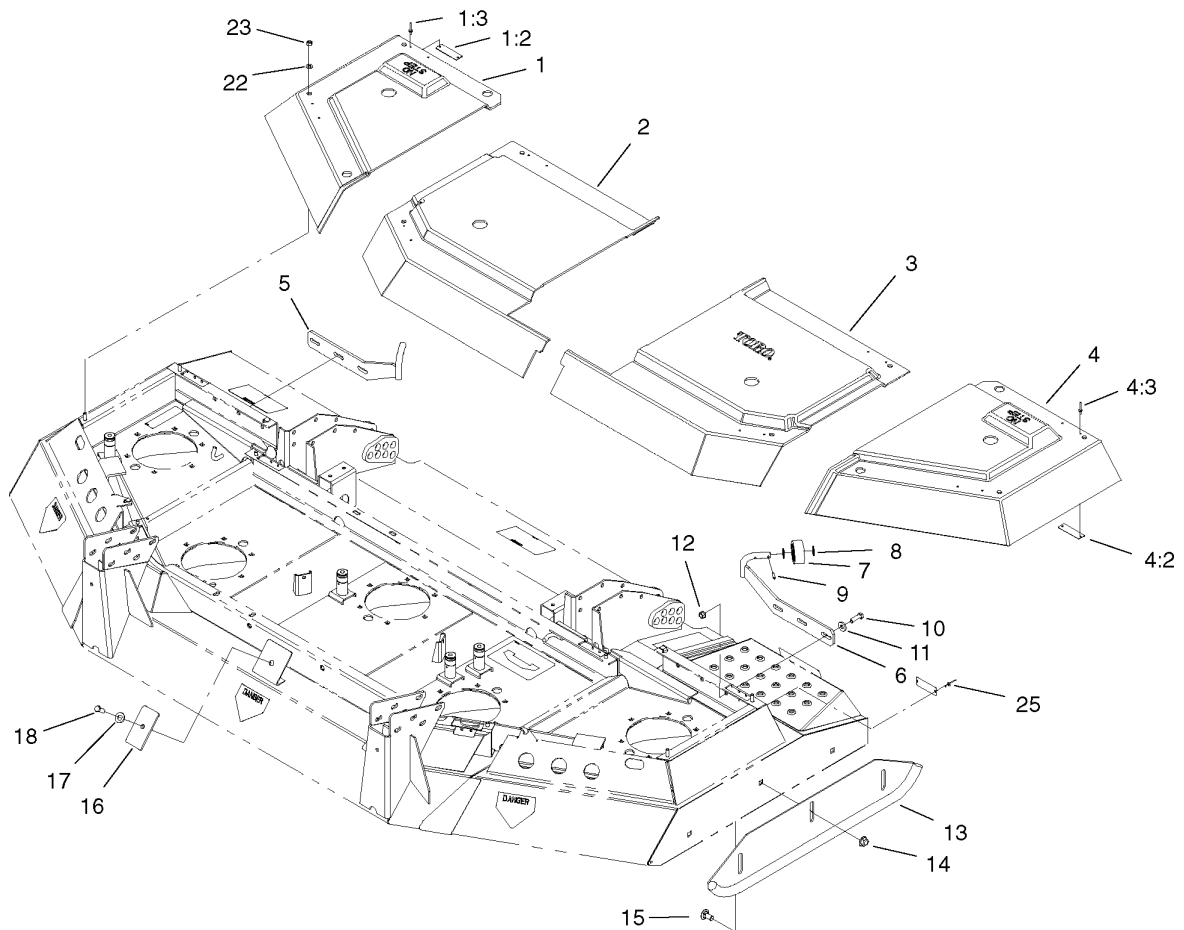

Deck Cover Assembly

Ref	Part No.	Qty.	Description
1	106-0033	1	RH Wing Cover ASM
1:2	69-6870	4	Plate-Magnet
1:3	3269-25	4	Rivet-Pop
2	105-0704	1	Cover-Rh, Center
3	105-0705	1	Cover-Lh, Center
4	106-0036	1	LH Wing Cover ASM
4:2	69-6870	4	Plate-Magnet
4:3	3269-25	4	Rivet-Pop
5	88-9260-01	1	Bracket-Roller, RH
6	88-9270-01	1	Bracket-Roller, LH
7	82-4910	2	Roller
8	3256-69	4	Washer-Flat
9	32121-4	4	Pin-Roll, Slotted
10	323-7	6	Screw-HH
11	5-0838	6	Washer
12	32128-36	6	Nut-HF
13	69-6730-01	2	Skid ASM
14	32128-23	6	Nut-HF
15	3233-9	6	Screw-CARR
16	105-0743-03	1	Cover-Keeper
17	3256-26	1	Washer-Flat
18	323-6	1	Screw-HH
22	3256-71	4	Washer-Flat
23	3296-29	4	Nut-Lock, NI

Ref	Part No.	Qty.	Description
25	3290-271	2	Rivet-Pop

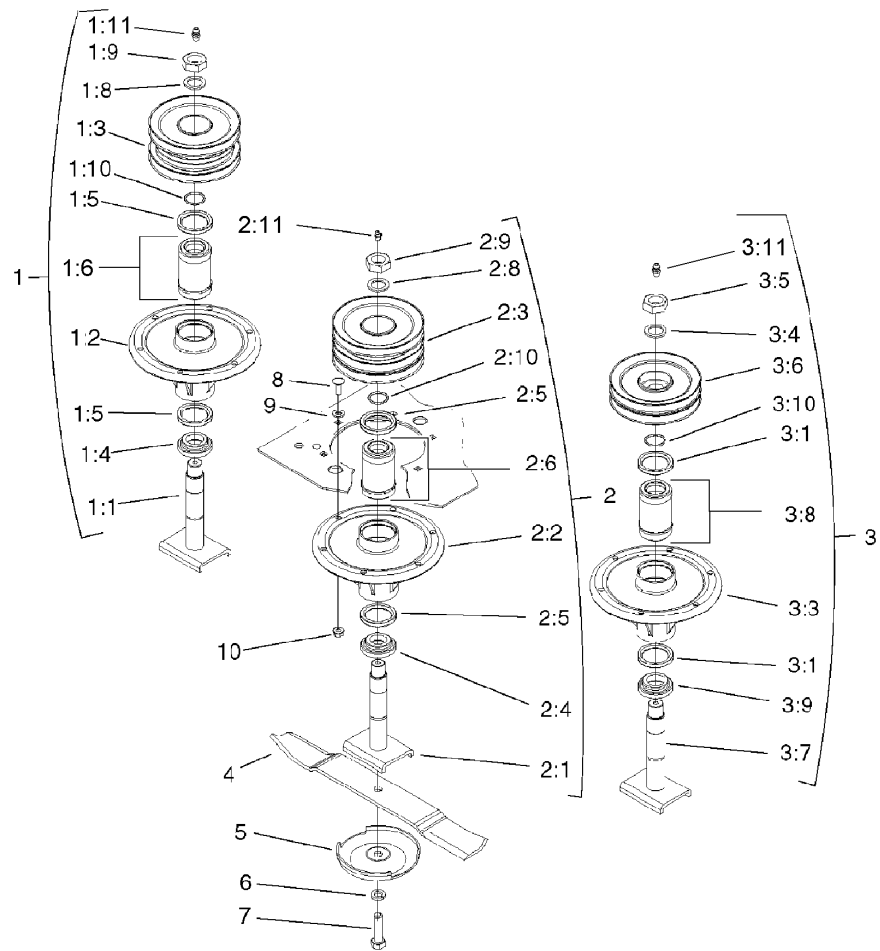

Spindle Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	106-0005	1	Center Spindle ASM	3:3	69-1530	1	Housing-Spindle
1:1	69-6760	1	Shaft-Spindle	3:4	108-1483	1	Washer
1:2	69-1530	1	Housing-Spindle	3:5	3296-49	1	Nut-Lock, NI
1:3	106-0023	1	Pulley-Center	3:6	69-8390-03	1	Spindle Pulley ASM
1:4	69-6950	1	Spacer-Shaft, Spindle	3:7	69-6760	1	Shaft-Spindle
1:5	253-154	2	Seal-Oil	3:8	71-2530	1	Bearing/spacer Kit
1:6	71-2530	1	Bearing/spacer Kit	3:9	69-6950	1	Spacer-Shaft, Spindle
1:8	108-1483	1	Washer	3:10	6590003	1	O-Ring
1:9	3296-49	1	Nut-Lock, NI	3:11	302-2	1	Fitting-Grease
1:10	6590003	1	O-Ring	4	69-6920	5	20" Blade
1:11	302-2	1	Fitting-Grease	5	67-7561	5	Cup-Scalp, Anti
2	106-0006	2	Outer Spindle ASM	6	3253-23	5	Washer-Lock/sp
2:1	69-6760	1	Shaft-Spindle	7	51-4060	5	Screw-Blade
2:2	69-1530	1	Housing-Spindle	8	3231-28	26	Screw-CARR
2:3	106-0022	1	Pulley-Outboard	9	3256-24	40	Washer-Flat
2:4	69-6950	1	Spacer-Shaft, Spindle	10	32128-36	30	Nut-HF
2:5	253-154	2	Seal-Oil				
2:6	71-2530	1	Bearing/spacer Kit				
2:8	108-1483	1	Washer				
2:9	3296-49	1	Nut-Lock, NI				
2:10	6590003	1	O-Ring				
2:11	302-2	1	Fitting-Grease				
3	69-8400	2	Spindle ASM				
3:1	253-154	2	Seal-Oil				

NOTES

NOTES

NOTES

