



Workman[®] 2110 Utility Vehicle

Model No. 07277TC - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Hood and Fender Assembly	 3	Master Cylinder Assembly No. 104-6782	 28
Pedal Assembly	 4	Cylinder Assembly Briggs and Stratton 303440-1326-E1	 29
Shifter Assembly	 5	Crankcase Assembly Briggs and Stratton 303440-1326-E1	 30
Frame Assembly	 6	Crankshaft Assembly Briggs and Stratton 303440-1326-E1	 31
Seat Base Assembly	 7	Cylinder Head Assembly Briggs and Stratton 303440-1326-E1	 32
Front Tire and Steering Assembly	 8	Oil Filter, Tube and Pump Assembly Briggs and Stratton 303440-1326-E1	 33
Engine and Clutch Assembly	 9	Carburetor Assembly Briggs and Stratton 303440-1326-E1	 34
Drive Clutch Assembly No. 108-3049	 11	Intake Manifold Assembly Briggs and Stratton 303440-1326-E1	 35
Starter Generator Assembly No. 99-7108	 12	Governor Assembly Briggs and Stratton 303440-1326-E1	 36
Rear Tire and Transaxle Assembly	 13	Flywheel Assembly Briggs and Stratton 303440-1326-E1	 37
Transaxle Assembly No. 107-0360	 14	Blower Housing Assembly Briggs and Stratton 303440-1326-E1	 38
Driven Clutch Assembly No. 99-7104	 16	Gasket Assembly Briggs and Stratton 303440-1326-E1	 39
Left Hand Brake Assembly No. 104-6807	 17	Carburetor Overhaul Kit Assembly Briggs and Stratton 303440-1326-E1	 40
Right Hand Brake Assembly No. 104-6806	 18		
Drivetrain Mounting, Battery and Air Cleaner Assembly	 19		
Air Cleaner Assembly No. 99-7120	 20		
Upper Steering Assembly	 21		
Steering Gearbox Assembly No. 99-7660	 22		
Box Assembly	 23		
Box and Tailgate Assembly	 24		
Hydraulic Brake Assembly	 25		
Left Hand Caliper Assembly No. 107-0361	 26		
Right Hand Caliper Assembly No. 107-0362	 27		

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	INC. incorporated
ASM. assembly	LH. left hand
CARR. carriage	NI. nylon insert
DEG. degrees	PPH. phillips pan head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power take off
HF. hex flange	RH. right hand
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HS. hex	STD. standard
HSBH. hex socket button head	TAP. self tapping
HSFH. hex socket flat head	TTH. torx truss head
HSH. hex socket head	WH. wing head
HWH. hex washer head	
HWHTF. hex washer head thread forming	
HYD. hydraulic	

Footnotes


- | | |
|---|---|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Included in Engine Gasket Set-Ref. 358. | ❹ Included in Valve Gasket Set-Ref. 1095. |
| ❺ Included in Carburetor Overhaul Kit-Ref. 121. | ❻ Obtain parts from your local Briggs & Stratton dealer |

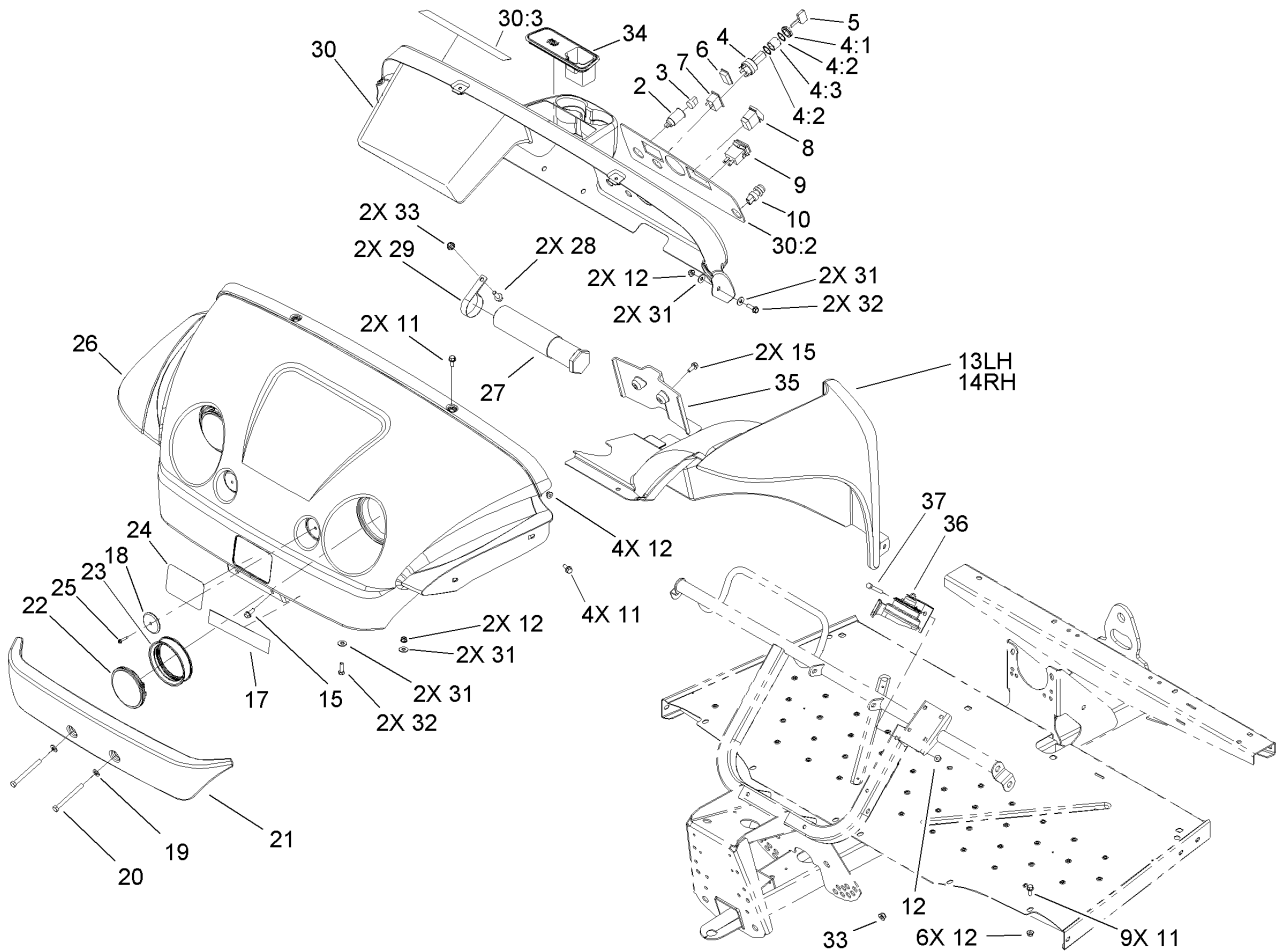

Hood and Fender Assembly

Ref	Part No.	Qty.	Description
2	99-7411	1	Point-Power
3	99-7416	1	Cap
4	104-6929	1	Switch-Ignition
4:1	104-7042	1	Nut-Switch, Plastic
4:2	104-7019	2	Washer-Lock, Internal
4:3	104-7021	1	Spacer-Switch
5	99-7418	2	Key-Ignition
6	99-7420	1	Plug-Hole
7	99-7410	1	Light-Oil
8	95-8999	1	Switch
9	94-4208	1	Hourmeter
10	18-2830	1	Button-Horn
11	3234-5	14	Screw
12	104-8300	15	Nut-Flange, NI
13	104-7076	1	LH Fender ASM
14	104-7077	1	RH Fender ASM
15	104-7206	4	Screw HHF
17	104-7267	1	Decal
18	99-7312	2	Reflector
19	3256-24	2	Washer-Flat
20	323-42	2	Screw-HH
21	99-7733	1	Bumper-Plastic
22	99-7310	2	Headlight
23	99-7311	2	Mount-Headlight


Ref	Part No.	Qty.	Description
24	99-7339	1	Decal
25	32144-89	2	Screw-Forming, Thread
26	104-7003	1	Hood
27	74-0720	1	Tube-Manual
28	3234-11	2	Screw-HHF
29	2412-133	2	R-Clamp
30	107-0700	1	Dash ASM
30:2	107-0699	1	Decal-Panel, Control
30:3	104-6581	1	Decal-Danger
31	3256-3	8	Washer-Flat
32	3234-17	4	Screw-HHF
33	104-8301	4	Nut-Flange, NI
34	104-6930	1	Plug-Rubber
35	104-7075	1	Cover-Channel
36	116749	1	Horn
37	322-11	1	Screw-HH

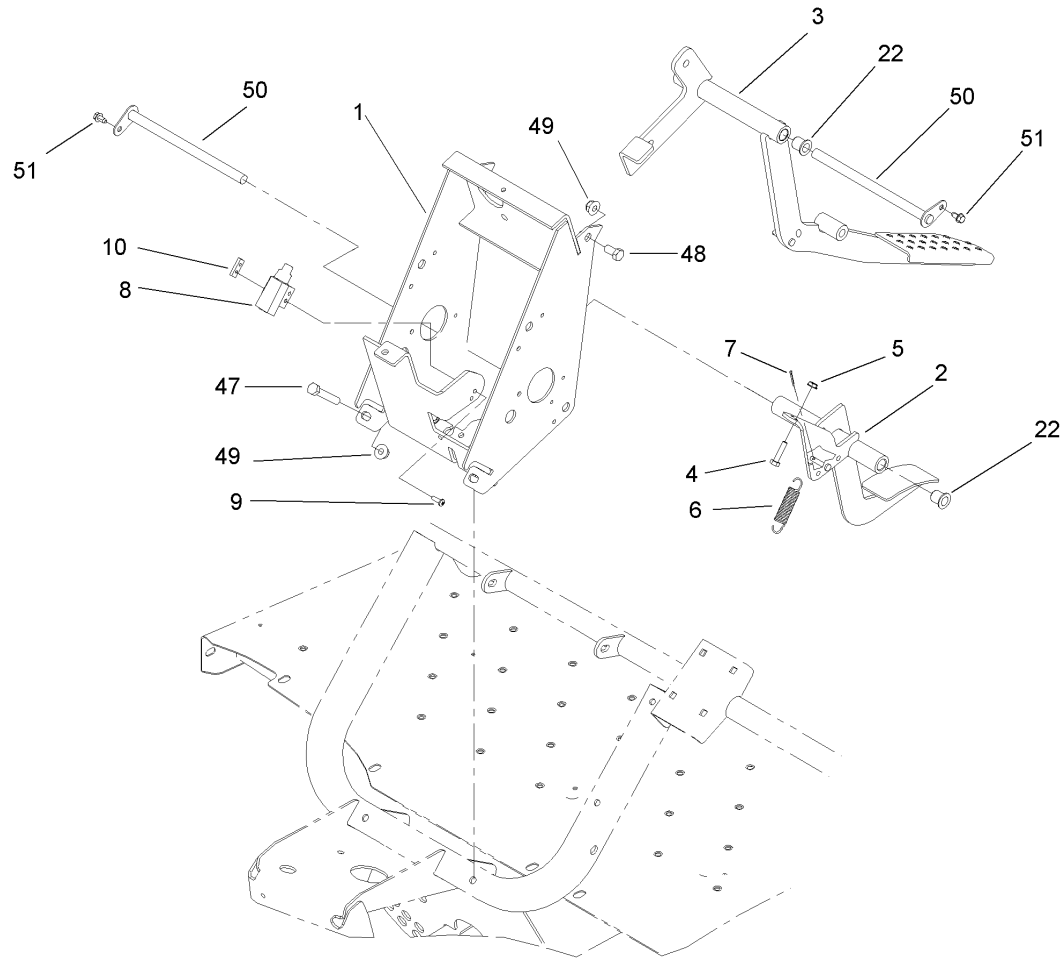 

Pedal Assembly

Ref	Part No.	Qty.	Description				
1	104-7160-03	1	Frame-Pedals				
2	104-7165-03	1	Pedal-Throttle				
3	104-7170-03	1	Pedal-Brake				
4	321-7	2	Screw-HH				
5	32149-2	2	Nut-Keps				
6	104-6415	1	Spring-Return, Pedal				
7	3272-4	1	Pin-Cotter				
8	99-7407	1	Switch				
9	104-7221	2	Screw-PPH				
10	1-633181	1	Plate-Tapped				
22	256-155	4	Bushing-Flange				
47	323-11	2	Screw-HH				
48	323-4	2	Screw-HH				
49	104-8301	4	Nut-Flange, NI				
50	104-7164	2	Pivot-Pedals				
51	12-3270	2	Screw				

 
5

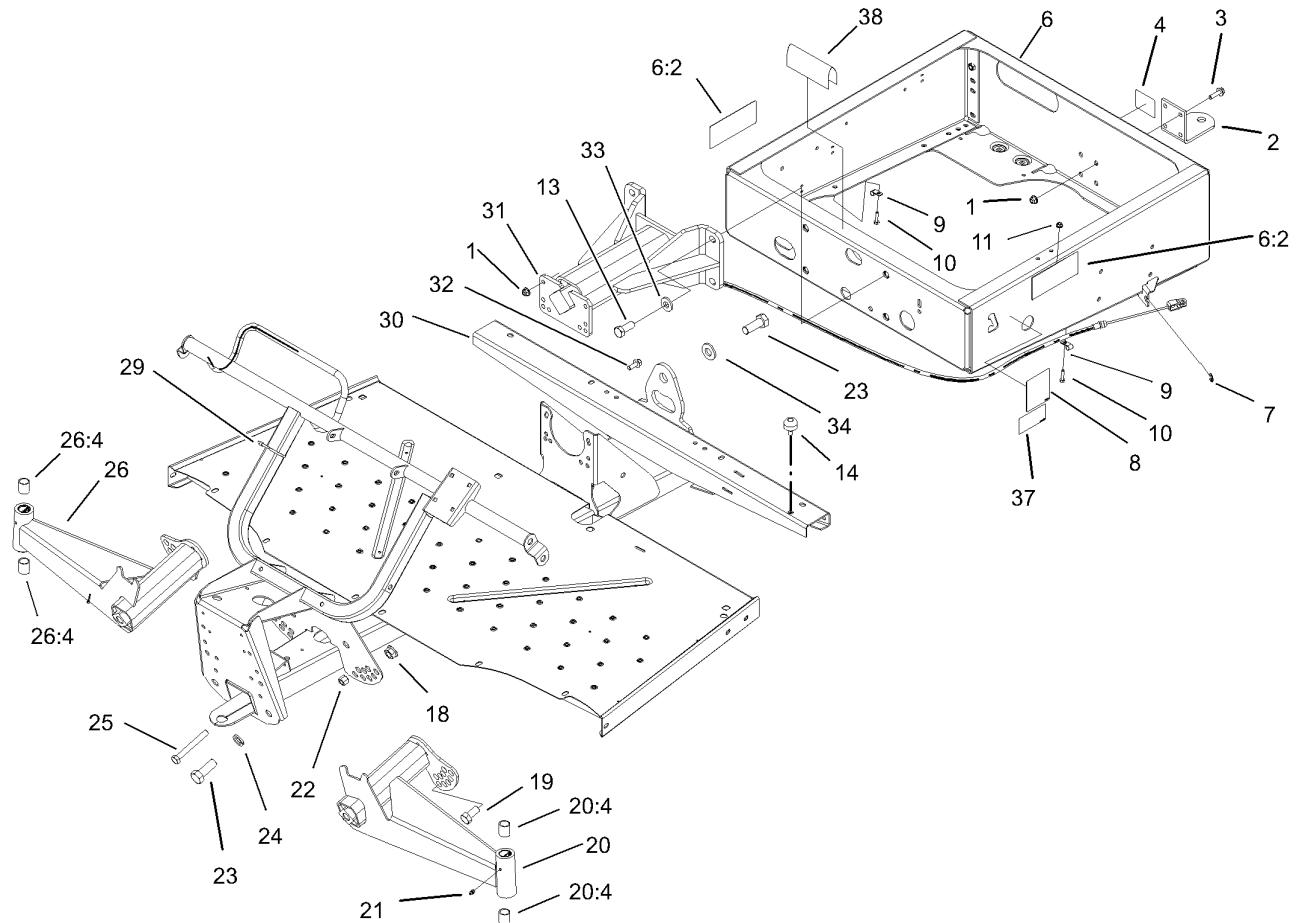

Frame Assembly


Ref	Part No.	Qty.	Description
1	104-8301	8	Nut-Flange, NI
2	99-7654-03	1	Hitch-Duty, Light
3	3234-24	4	Screw-HHF
4	99-7350	1	Decal-Information
6	99-7362	1	Rear Frame ASM
6:2	99-7345	2	Decal-Warning
7	32120-47	2	Ring-Retaining, External
8	99-7349	1	Decal-Information, Boxlatch
9	2412-89	2	Clamp
10	321-6	2	Screw-HH
11	32128-33	2	Nut-HF
13	327-4	4	Screw-HH
14	87-2440	1	Bumper-Rubber
18	32128-54	2	Nut-Hex Flange
19	3214-2	2	Screw-HH
20	99-7685	1	LH A-Arm ASM
20:4	3-0348	2	Bushing
21	302-5	2	Fitting-Grease
22	3296-23	2	Nut-Lock, NI
23	328-24	5	Screw-HH
24	3254-7	4	Washer-Lock, Int
25	325-17	2	Screw-HH
26	99-7684	1	RH A-Arm ASM
26:4	3-0348	2	Bushing

Ref	Part No.	Qty.	Description
29	3290-379	12	Tie-Cable
30	104-7197-03	1	Front Frame ASM
31	99-7700	1	Pivot Yoke ASM
32	3234-11	4	Screw-HHF
33	99-7667	4	Washer-Flat
34	87-3060	1	Washer-Hardened
37	104-6591	1	Decal-Capacity
38	95-5686	1	Trim

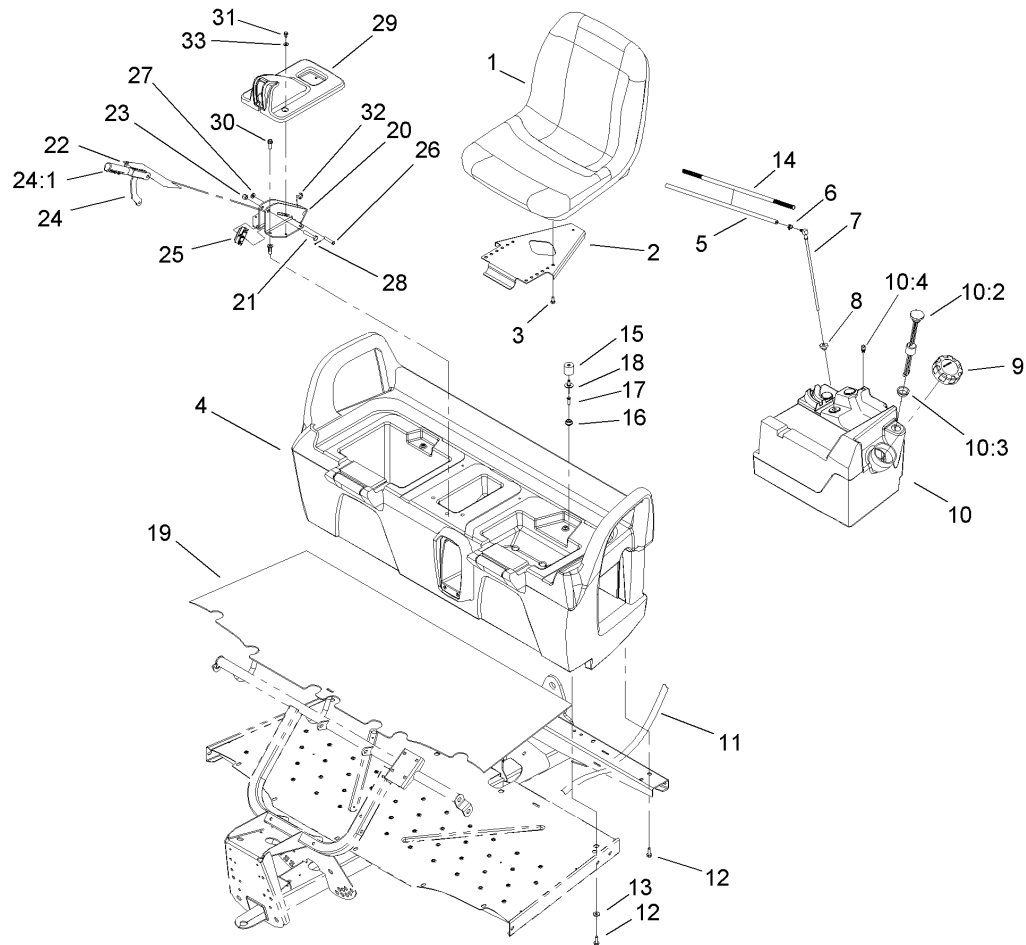 

Seat Base Assembly


Ref	Part No.	Qty.	Description
1	106-6672	2	Seat
2	99-7829	2	Bracket-Seat
3	33114-016	8	Screw-HH
4	104-6847	1	Seat Base ASM
5	99-7187	1	Hose-Fuel
6	2412-98	1	Clamp
7	99-7264	1	Pipe-Stand
8	46-6560	1	Bushing
9	95-4192	1	Unleaded Gas Cap ASM
10	99-7323	1	Fuel Tank ASM
10:2	99-7262	1	Gauge-Fuel
10:3	95-8972	1	Grommet
10:4	99-7267	1	Vent-Air
11	3339-175	1	Strapping-Web, 48in
12	3234-17	8	Screw-HHF
13	88-7200	8	Washer-Flat
14	99-7129	1	Conduit-Line, Fuel
15	99-7830	2	Rubber Receptical ASM
16	99-7833	2	Post-Holding
17	32108-5	2	Screw-FH
18	3290-412	2	Rivet
19	104-6590	1	Mat-Floor
20	104-6844-03	1	Support-Brake, Park ASM
21	323-10	1	Screw-HH

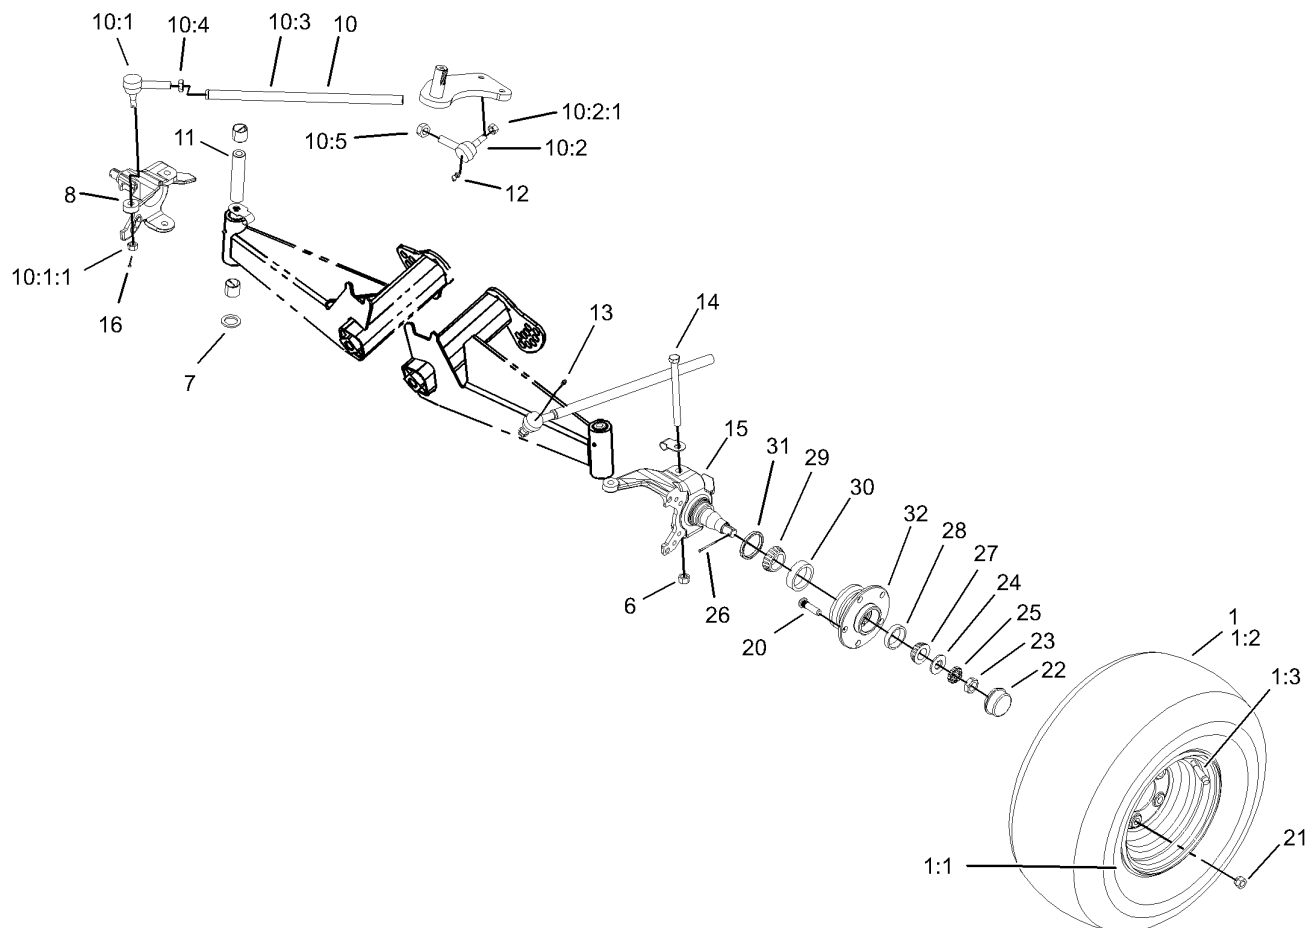 

Front Tire and Steering Assembly

Ref	Part No.	Qty.	Description
1	104-7290	2	Tire/wheel ASM
1:1	104-7288	1	Wheel
1:2	104-7289	1	Tire
1:3	232-27	1	Stem-Valve
6	3296-23	2	Nut-Lock, NI
7	256-115	2	Washer-Thrust
8	104-6877-03	1	Spindle-Disc, RH
10		2	Tie Rod ASM
10:1	112772	1	Joint-Ball, RH
10:1:1	915031	1	Nut
10:2	112771	1	Joint-Ball, LH
10:2:1	915031	1	Nut
10:3	99-7600-03	1	Rod-Tie
10:4	3220-11	1	Nut-Jam
10:5	3218-21	1	Nut-Jam
11	99-7499	2	Sleeve-Kingpin
12	302-60	2	Fitting-Grease
13	302-5	2	Fitting-Grease
14	325-20	2	Screw-HH
15	104-6876-03	1	Spindle-Disc, LH
16	3272-7	4	Pin-Cotter
20	10-6830	10	Stud-Type, Drive
21	242-50	10	Nut-Lug
22	241-119	2	Cap-Dust


Ref	Part No.	Qty.	Description
23	3220-7	2	Nut-Jam
24	93-0309	2	Washer-Tab
25	93-0307	2	Nut-Lock, Retainer
26	3272-12	2	Pin-Cotter
27	254-94	2	Bearing-Cone, Tapered
28	254-72	2	Bearing-Cup, Tapered
29	254-106	2	Cone-Bearing, Tapered
30	254-107	2	Cup-Bearing, Tapered
31	87-3590	2	Seal-Bearing
32	104-6809-03	2	Hub

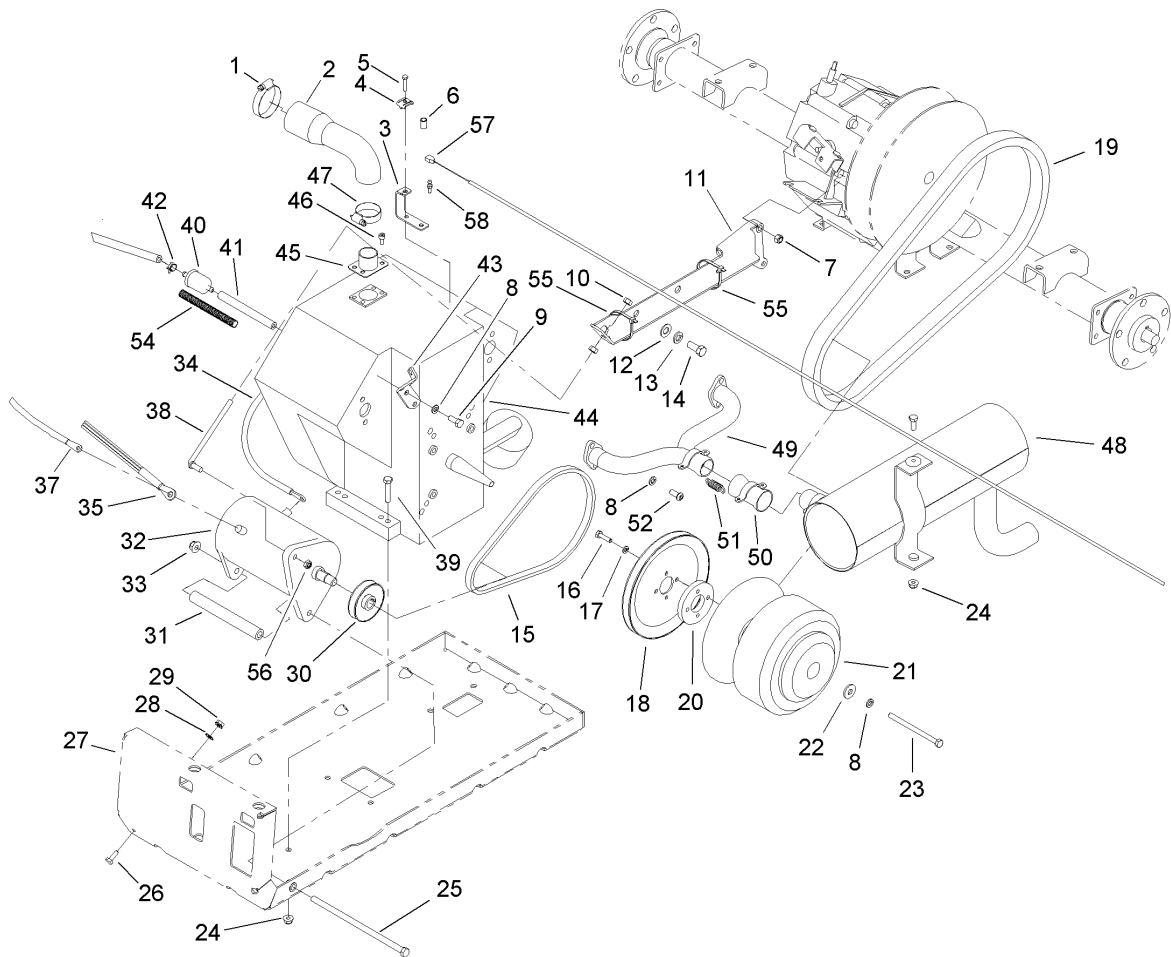 

Engine and Clutch Assembly


Ref	Part No.	Qty.	Description
1	2412-130	1	Clamp-Hose
2	99-7106	1	Hose-Intake
3	107-0319	1	Bracket-Cable
4	81-1690	1	Clamp-Cable
5	3290-432	1	Screw-HH
6	32148-14	1	Insert-Threaded
7	33024-00	2	Nut-Lock
8	3253-4	6	Washer-Lock
9	66-3160	2	Screw-Cap
10	3217-6	2	Nut-Hex
11	104-6631-03	1	Torque Arm ASM
12	3256-25	2	Washer-Flat
13	3253-6	2	Washer-Lock
14	324-4	2	Screw-HH
15	99-7133	1	V-Belt-Starter
16	321-6	4	Screw-HH
17	3253-3	4	Washer-Lock
18	99-7131	1	Pulley-Engine
19	99-7144	1	Belt-Drive
20	99-7064	1	Spacer-Starter
21	108-3049	1	Clutch-Drive
22	5-0838	1	Washer
23	99-7201	1	Screw-HH
24	104-8300	5	Nut-Flange, NI

Ref	Part No.	Qty.	Description
25	99-7203	1	Screw
26	321-4	1	Screw-HH
27	104-6433-03	1	Mount-Engine
28	3255-8	1	Washer-Lock
29	32128-32	1	Nut-HHF
30	99-7130	1	Pulley-Starter
31	99-7053	1	Pivot-Starter
32	99-7108	1	Generator-Starter
33	104-8301	2	Nut-Flange, NI
34	99-7403	1	Cable-Negative
35	99-7437	1	Harness-Wire, Engine
37	104-6926	1	Cable-Positive
38	104-6629	1	Rod-Starter
39	322-8	4	Screw-HH
40	94-2690	1	Filter-Fuel
41	47-2966	1	Hose-Fuel
42	2412-98	3	Clamp
43	104-7152	1	Bracket-Cable, Throttle
44	107-0353	1	Engine-Briggs And Stratton, 303440-1326-E1
45	99-7083	1	Bracket-Intake
46	99-7202	4	Screw
47	2412-3	1	Clamp-Hose
48	104-6475	1	Muffler-Engine

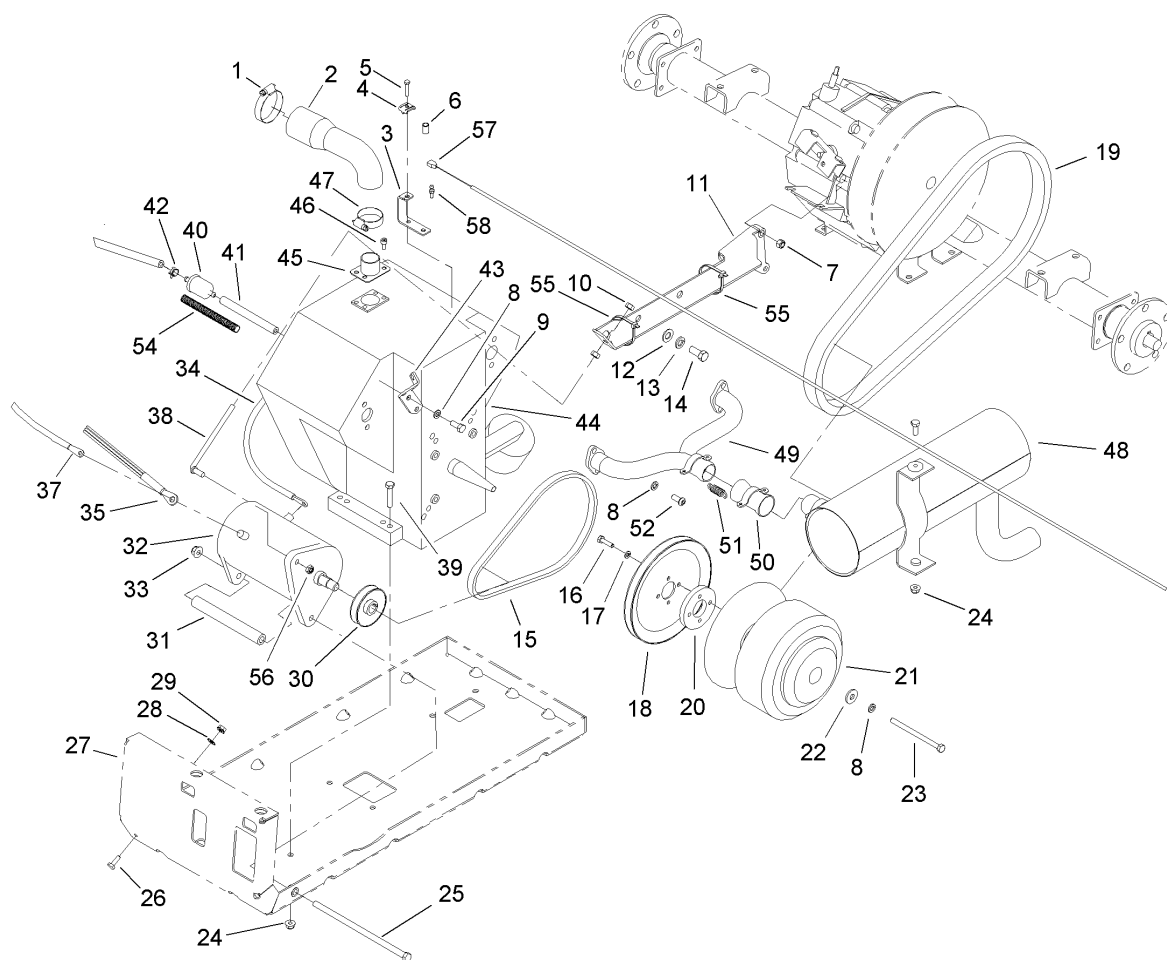 


Engine and Clutch Assembly (continued)

Ref	Part No.	Qty.	Description
49	104-6476	1	Manifold-Engine
50	104-6477	1	Coupler-Exhaust
51	104-6478	4	Spring-Coupler, Exhaust
52	3274-96	4	Screw
54	99-7377	1	Conduit-Line, Fuel
55	3290-379	2	Tie-Cable
56	3296-20	1	Nut-Lock, NI
57	104-7169	1	Cable-Accelerator
58	99-7847	1	Ball-Stud

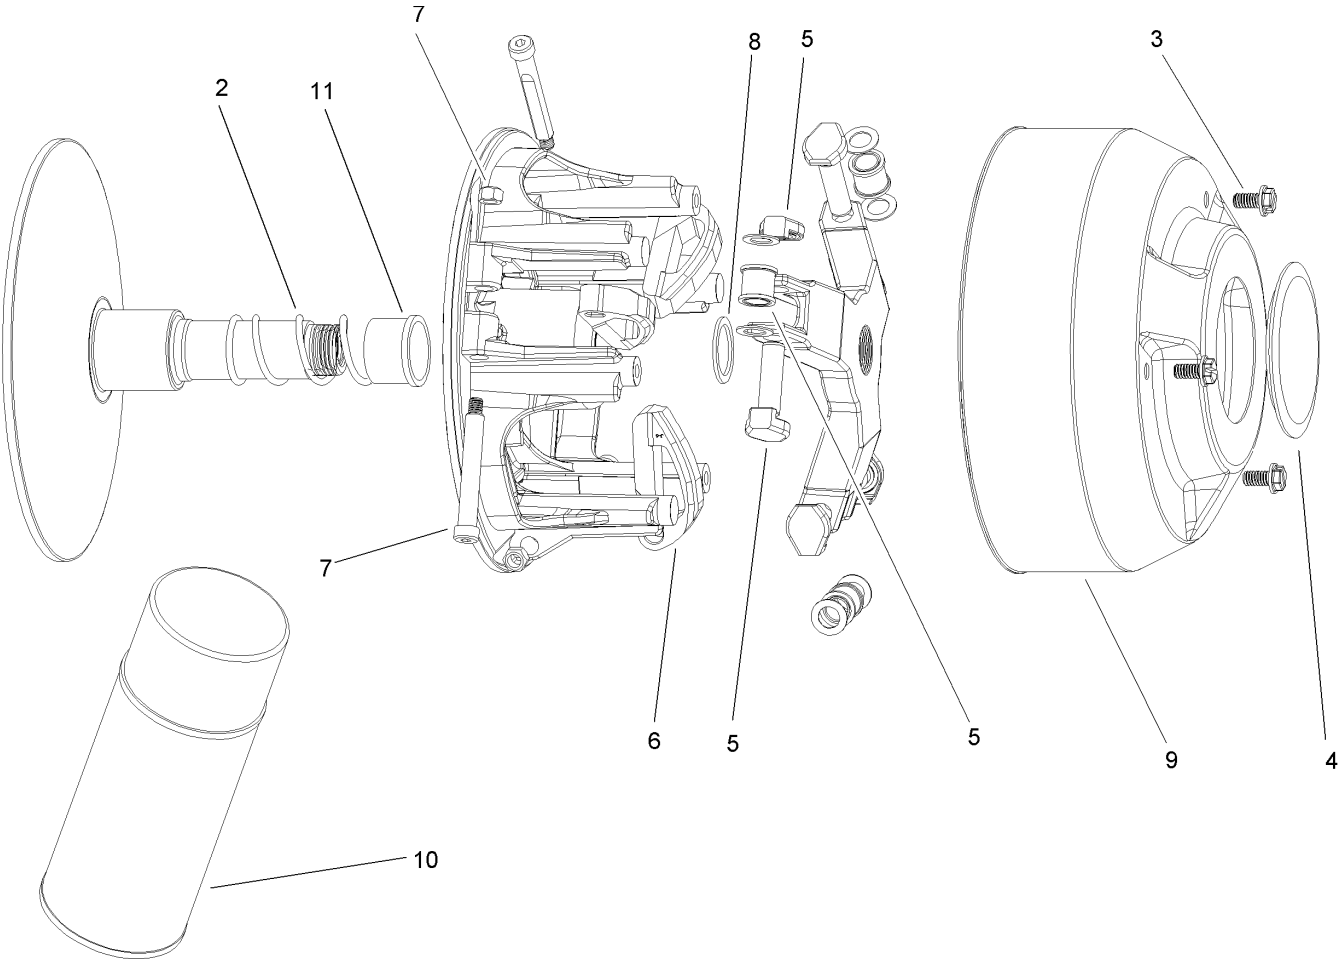 


Drive Clutch Assembly No. 108-3049

Ref	Part No.	Qty.	Description				
2	104-1686	1	Spring				
3	3234-26	3	Screw				
4	104-1690	1	Cap				
5	108-3047	1	Spider ASM				
6	104-1696	1	Arm-Cam				
7	104-4256	1	Pivot Bolt And Nut Kit				
8	104-1687	1	Spacer				
9	104-1691	1	Cover				
10	104-7011	1	Lubricant-Dry				
11	108-3048	1	Spacer-Clutch				

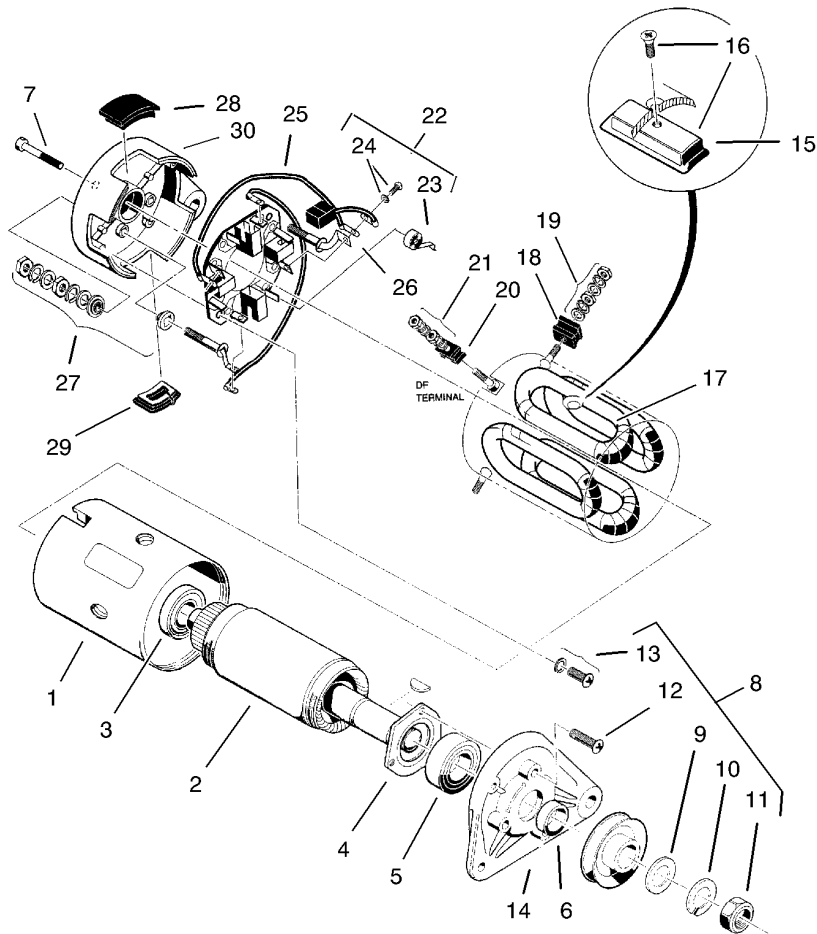 

Starter Generator Assembly No. 99-7108

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1		1	Yoke	25		2	Brush Connector ASM
2	104-1210	1	Armature Kit	26		2	A Terminal ASM
3	104-1211	1	Bearing-Ball, Rear	27	104-1228	2	Screw And Mold ASM
4	104-1212	1	Retainer	28		1	Cover Set
5	104-1213	1	Bearing-Ball, Front	29		1	Cover B
6	104-1214	1	Spacer	30		1	Bracket-Rear
7	104-1215	2	Bolt				
8		1	Nut And Screw Set				
9	104-1216	1	Washer-Plain				
10	104-1217	1	Washer-Spring				
11	104-1218	1	Nut-Hex				
12		3	Screw-Flange				
13	104-1219	2	Set-Screw				
14	104-1220	1	Bracket-Front				
15		4	Pole				
16	104-1221	1	Set-Pole And Screw				
17	104-1222	1	Field Stator Coil ASM				
18		2	F Mold				
19	104-1223	2	Set-Screw				
20		1	Df Mold				
21	104-1224	1	Set-Screw				
22	104-1225	1	Brush Holder Kit				
23	104-1226	4	Spring-Brush				
24	104-1227	1	Brush And Screw Set				

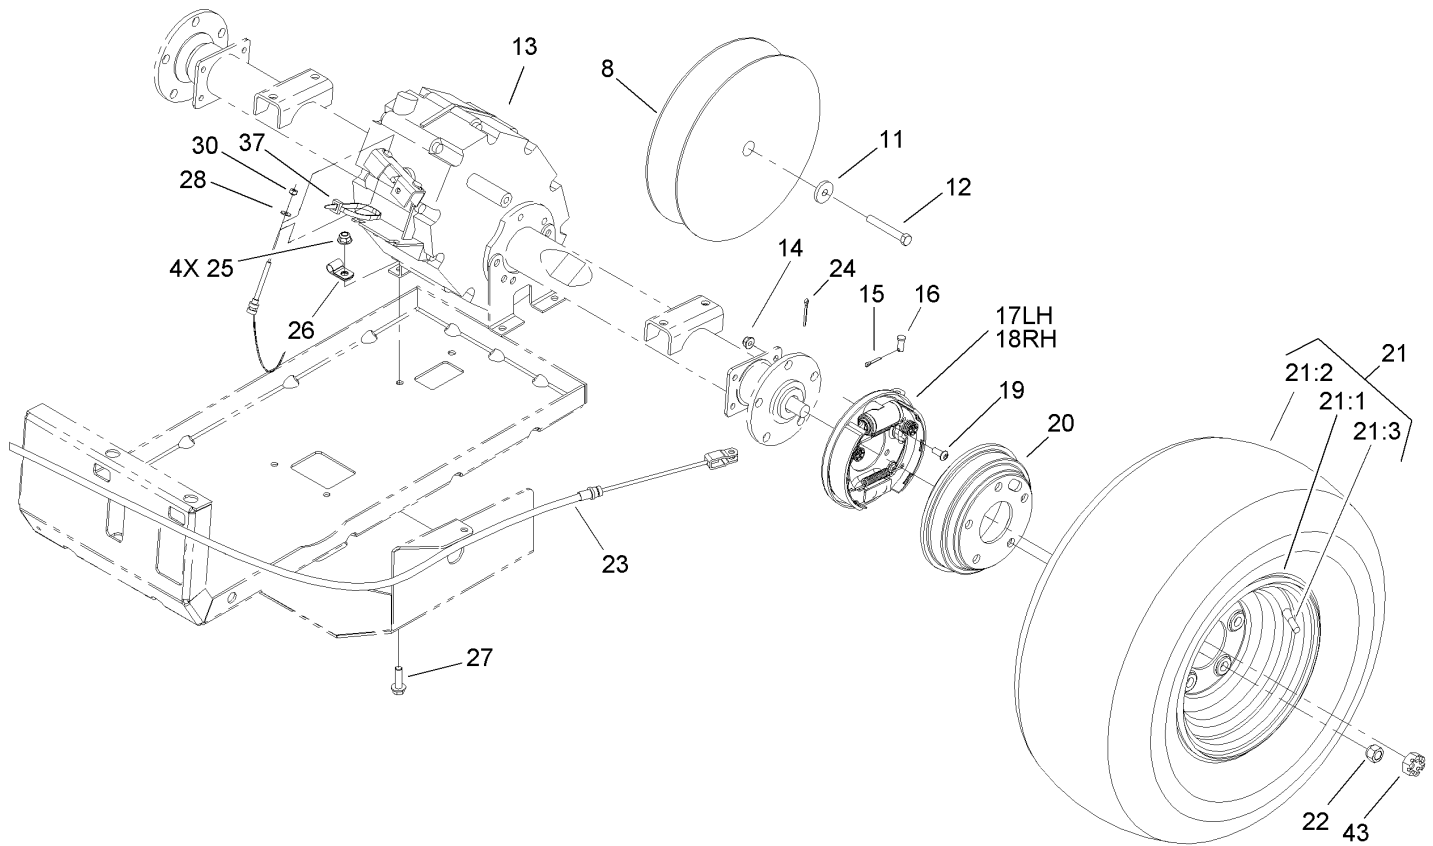 


Rear Tire and Transaxle Assembly

Ref	Part No.	Qty.	Description
8	99-7104	1	Clutch-Driven
11	104-6563	1	Washer-Stepped
12	104-6564	1	Screw-HH
13	107-0360	1	Transaxle
14	104-8300	8	Nut-Flange, NI
15	3272-10	2	Pin-Cotter
16	283-62	2	Pin-Clevis
17	104-6807	1	LH Brake ASM
18	104-6806	1	RH Brake ASM
19	3274-55	8	Screw-HSBH
20	104-6500	2	Drum-Brake
21	104-7282	2	Tire And Wheel ASM
21:1	104-7279	1	Wheel
21:2	104-7281	1	Tire
21:3	232-27	1	Stem-Valve
22	242-50	10	Nut-Lug
23	104-6846	2	Cable-Brake, Park
24	3272-42	2	Pin-Cotter
25	104-8301	4	Nut-Flange, NI
26	2412-10	1	R-Clamp
27	3234-24	4	Screw-HHF
28	3256-49	2	Washer-Flat
30	3296-2	2	Nut-Lock
37	3290-378	1	Tie-Cable

Ref	Part No.	Qty.	Description
43	104-1656	2	Nut-Castle

 
Transaxle Assembly No. 107-0360

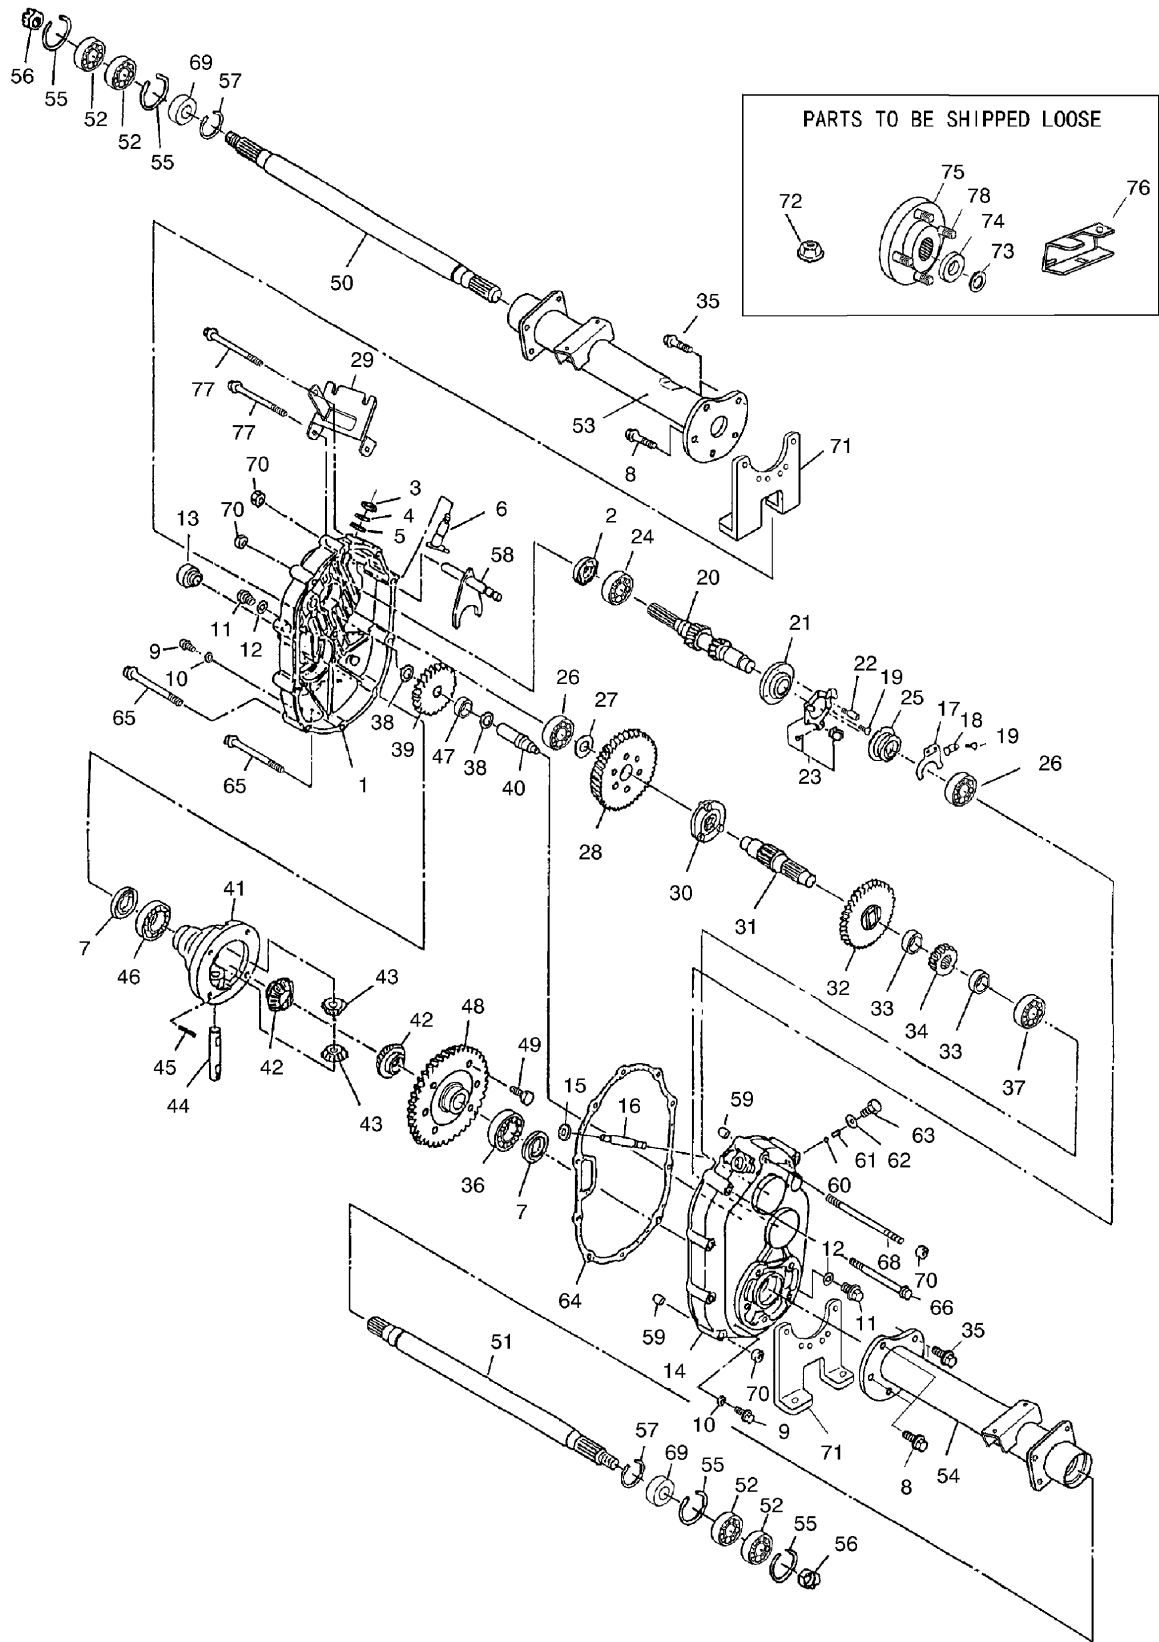

Transaxle Assembly No. 107-0360


Ref	Part No.	Qty.	Description
1	104-1601	1	Case-Lh, Complete
2	104-1602	1	Seal-Oil
3	104-1603	1	Seal-Oil
4	104-1604	1	Ring-Snap
5	104-1605	1	Spacer
6	104-1606	1	Shaft-Selector
7	104-1607	2	Seal-Oil
8	104-1608	4	Bolt-Flange
9	104-1609	2	Plug-Check, Oil
10	104-1610	2	Gasket
11	104-1611	2	Plug-Drain, Oil
12	104-1612	2	Gasket
13	104-1613	1	Plug-Filler, Oil
14	104-1614	1	Case-Complete, RH
15	104-1615	1	Seal-Oil
16	104-1616	1	Shaft-Governor
17	104-1617	1	Fork-Governor
18	104-1618	1	Stopper
19	104-1619	4	Screw And Washer ASM
20	104-7002	1	Shaft-Input, Complete
21	104-1621	1	Base-Governor
22	104-1622	1	Pin-Lock
23	104-1623	1	Unit-Plate, Governor
24	104-1624	1	Bearing-Ball
25	104-1625	1	Sleeve-Governor
26	104-1626	2	Bearing-Ball
27	104-1627	1	Spacer
28	104-1628	1	Gear
29	104-1629	1	Bracket-Wire, Change
30	104-1630	1	Clutch-Pin
31	104-1631	1	Shaft-Center
32	104-1632	1	Gear-47
33	104-1633	2	Collar
34	104-1634	1	Gear
35	104-1635	6	Bolt-Flange
36	104-1636	1	Bearing-Ball
37	104-1637	1	Bearing-Ball
38	104-1638	2	Spacer
39	104-1639	1	Gear-34
40	104-1640	1	Shaft-Counter
41	104-1641	1	Case-Differential
42	104-1642	2	Gear-Side, Differential
43	104-1643	2	Pinion-Differential
44	104-1644	1	Shaft-Differential
45	104-1645	1	Pin
46	104-1646	1	Bearing-Ball
47	104-1647	1	Bearing-Needle
48	104-1648	1	Gear-62
49	104-1649	6	Bolt
50	104-1650	1	Shaft-Axle, LH
51	104-1651	1	Shaft-Axle, RH
52	104-1652	4	Bearing-Ball

Ref	Part No.	Qty.	Description
53	104-1653	1	Case-Axle, LH
54	104-1654	1	Case-Axle, RH
55	104-1655	4	Ring-Snap
56	104-1656	2	Nut-Castle
60	104-1660	1	Ball-Steel
57	104-1657	2	Ring-Snap
58	104-6870	1	Shaft-Shift, Complete
59	104-1659	2	Knock-Pipe
60	104-1660	1	Ball-Steel
61	104-1661	1	Spring
62	104-1662	1	Gasket
63	104-1663	1	Bolt
64	104-1664	1	Gasket
65	104-1665	6	Bolt-Flange
66	104-1666	1	Bolt-Flange
68	104-6866	1	Bolt
69	104-6867	2	Collar
70	33004-00	11	Nut-HF
71	104-1671	2	Bracket-Axle
72	104-1672	1	Nut-Lock
73	104-1673	2	Washer-Spring
74	104-1674	2	Washer
75	104-1675	2	Hub
76	104-6860	1	Lever-Select
77	104-6869	2	Bolt-Flange
78	104-8649	10	Stud

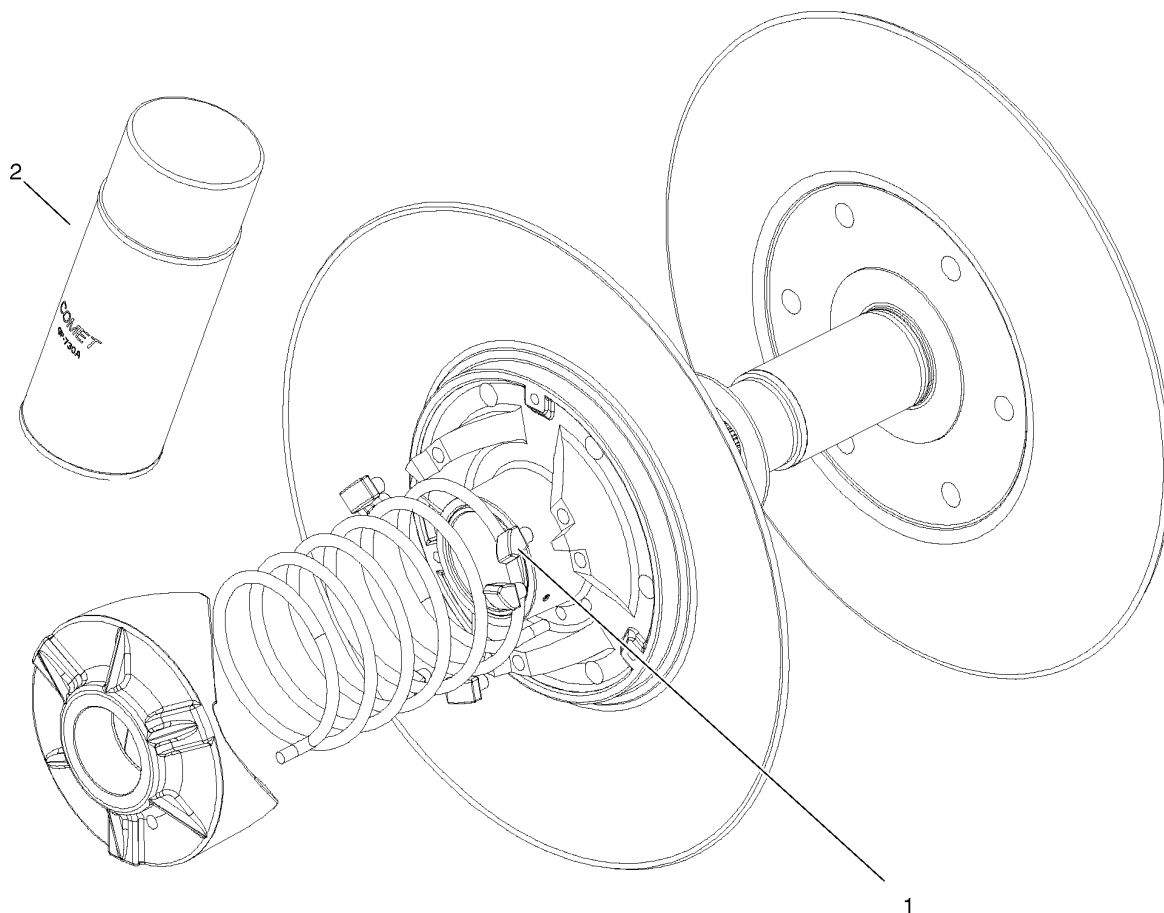 


Driven Clutch Assembly No. 99-7104

Ref	Part No.	Qty.	Description
1	104-4257	1	Button Kit
2	104-7011	1	Lubricant-Dry

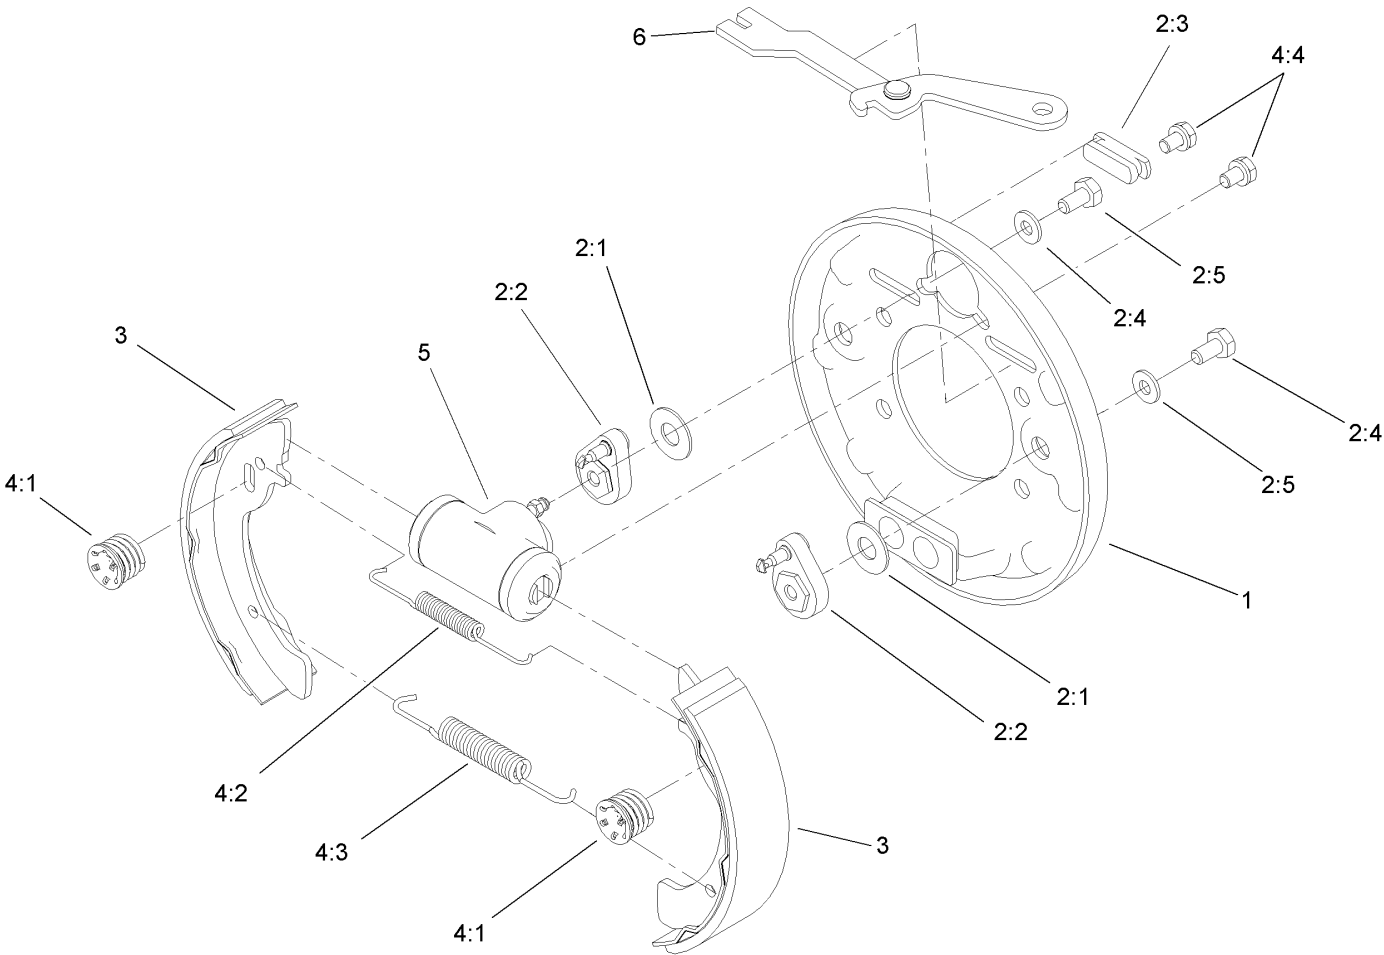 


Left Hand Brake Assembly No. 104-6807

Ref	Part No.	Qty.	Description				
1	100-8586	1	Backing Plate ASM				
2	104-6820	1	Adjuster Kit				
2:1	100-8585	2	Washer-Bellville				
2:2	100-8588	2	Adjuster Lever ASM				
2:3	100-8584	2	Cover-Dust				
2:4		2	Washer				
2:5		2	Bolt				
3	104-6818	4	Shoe And Lining Kit				
4	104-6819	1	Hardware Kit				
4:1	100-8583	2	Shoe Hold Down Spring ASM				
4:2	100-8581	2	Spring-Upper				
4:3	100-8582	2	Spring-Lower				
4:4		2	Bolt And Washer				
5	104-6824	1	Wheel Cylinder ASM				
6	104-6825	1	LH Park Brake Lever ASM				

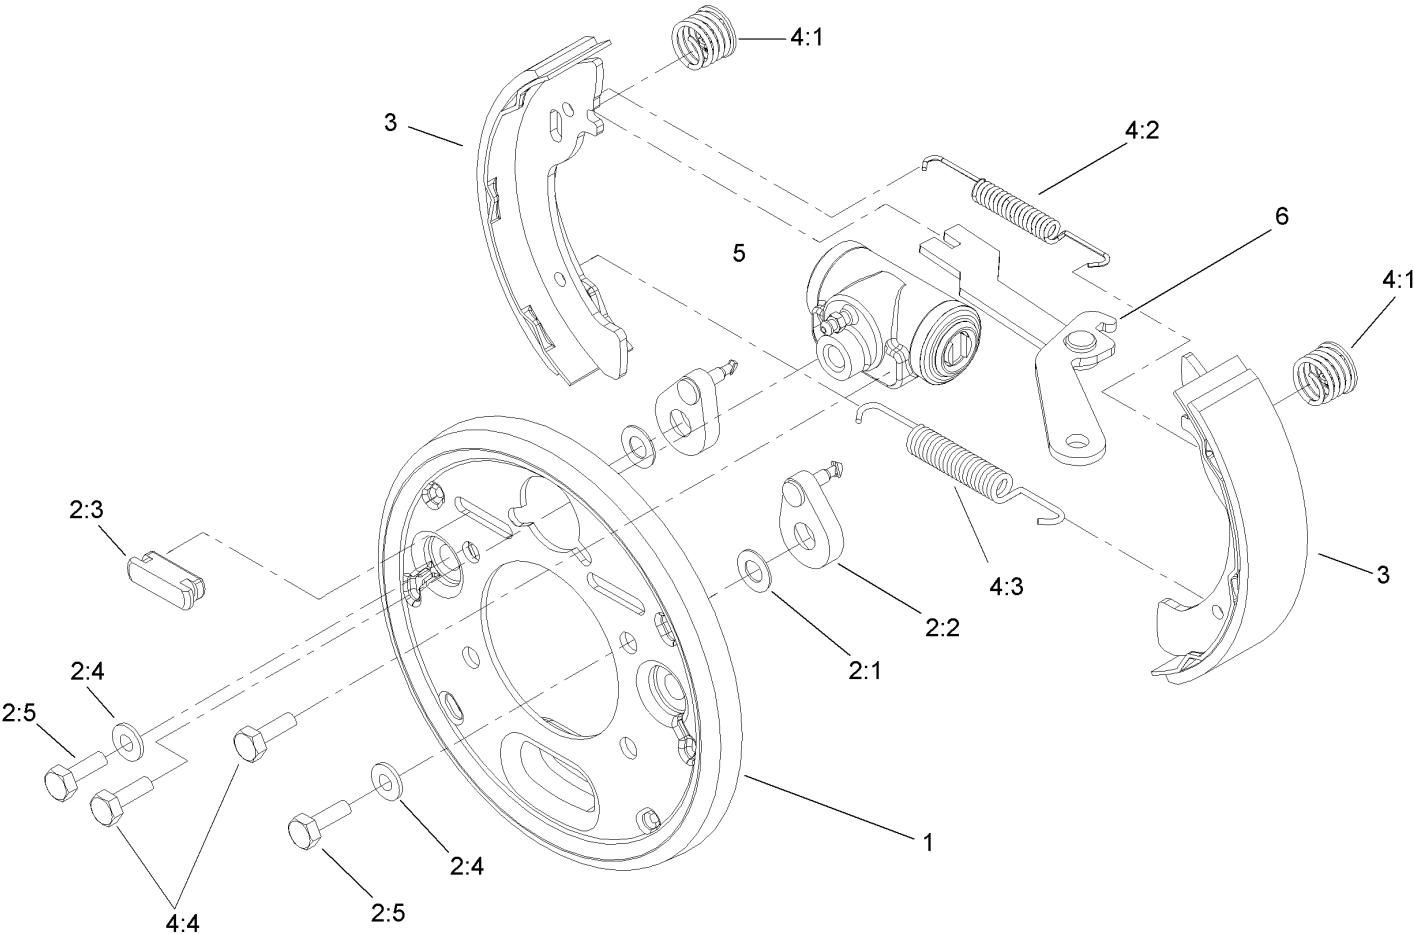 

Right Hand Brake Assembly No. 104-6806


Ref	Part No.	Qty.	Description				
1	100-8586	1	Backing Plate ASM				
2	104-6820	1	Adjuster Kit				
2:1	100-8585	2	Washer-Bellville				
2:2	100-8588	2	Adjuster Lever ASM				
2:3	100-8584	2	Cover-Dust				
2:4		2	Washer				
2:5		2	Bolt				
3	104-6818	4	Shoe And Lining Kit				
4	104-6819	1	Hardware Kit				
4:1	100-8583	2	Shoe Hold Down Spring ASM				
4:2	100-8581	2	Spring-Upper				
4:3	100-8582	2	Spring-Lower				
4:4		2	Bolt And Washer				
5	104-6824	1	Wheel Cylinder ASM				
6	104-6826	1	RH Park Brake Lever ASM				

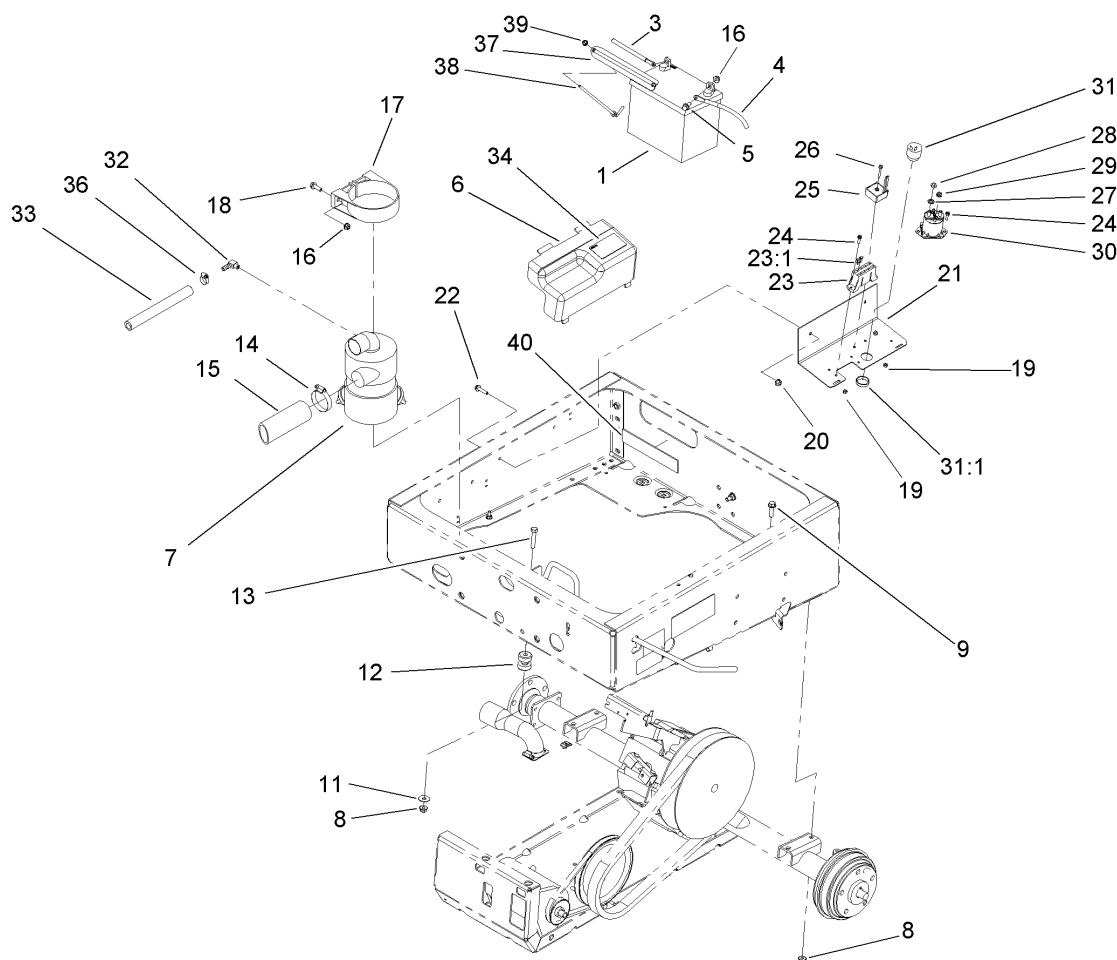 

Drivetrain Mounting, Battery and Air Cleaner Assembly


Ref	Part No.	Qty.	Description
1	104-8162	1	Battery
3	99-7415	1	Cable-Negative
4	99-7404	1	Cable-Positive
5	3234-5	2	Screw
6	99-7325	1	Cover-Electrical
7	99-7120	1	Filter-Air
8	104-8301	6	Nut-Flange, NI
9	3234-24	4	Screw-HHF
11	3256-35	2	Washer-Flat
12	95-2596	2	Mount-Iso
13	323-10	2	Screw-HH
14	2412-130	1	Clamp-Hose
15	104-6528	1	Hose-Intake
16	104-8300	4	Nut-Flange, NI
17	95-5806	1	Bracket-Mounting
18	3234-17	2	Screw-HHF
19	3296-2	5	Nut-Lock
20	32128-32	2	Nut-HHF
21	99-7051-03	1	Mount-Component
22	3234-21	2	Screw-Cap
23	107-0669	1	Harness-Wire, Main
23:1	218-578	3	Fuse-10 Amp
23:2	100-4918	1	Diode
24	32105-13	4	Screw-SHH

Ref	Part No.	Qty.	Description
25	104-6927	1	Regulator
26	32105-1	1	Screw-SHH
27	3255-8	2	Washer-Lock
28	3218-2	2	Nut-Jam
29	32149-8	2	Nut-Keps
30	99-7406	1	Solenoid
31	80-9330	1	Alarm-Audio
31:1	104-5107	1	Nut-Plastic, Knurled
32	99-7230	1	Fitting-90 DEG
33	99-7842	1	Hose-Breather
34	99-7352	1	Decal-Information
36	2412-36	2	Clamp-Hose
37	92-5018-03	1	Clamp-Battery
38	95-4042	2	Hook-Retain, Battery
39	104-7201	2	Nut-HF
40	104-7102	1	Pad-Battery

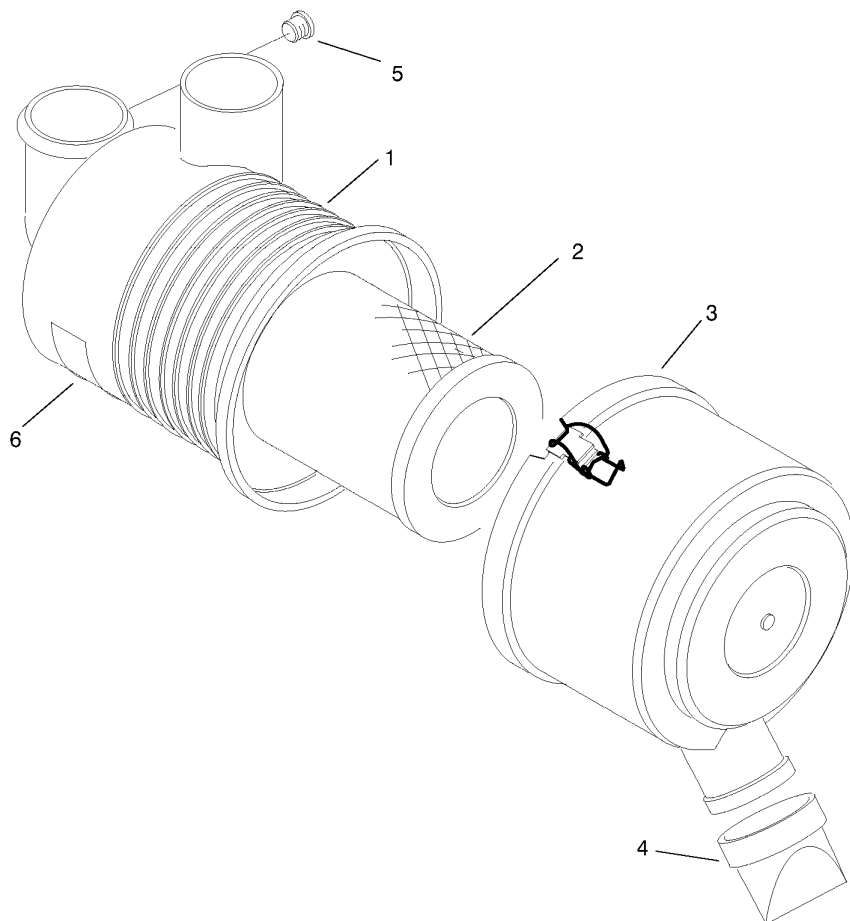 


Air Cleaner Assembly No. 99-7120

Ref	Part No.	Qty.	Description
1		1	Body
2	93-2195	1	Filter
3	94-3652	1	Cover ASM
4	87-9400	1	Valve-Vacuator
5		1	Plug
6		1	Marking

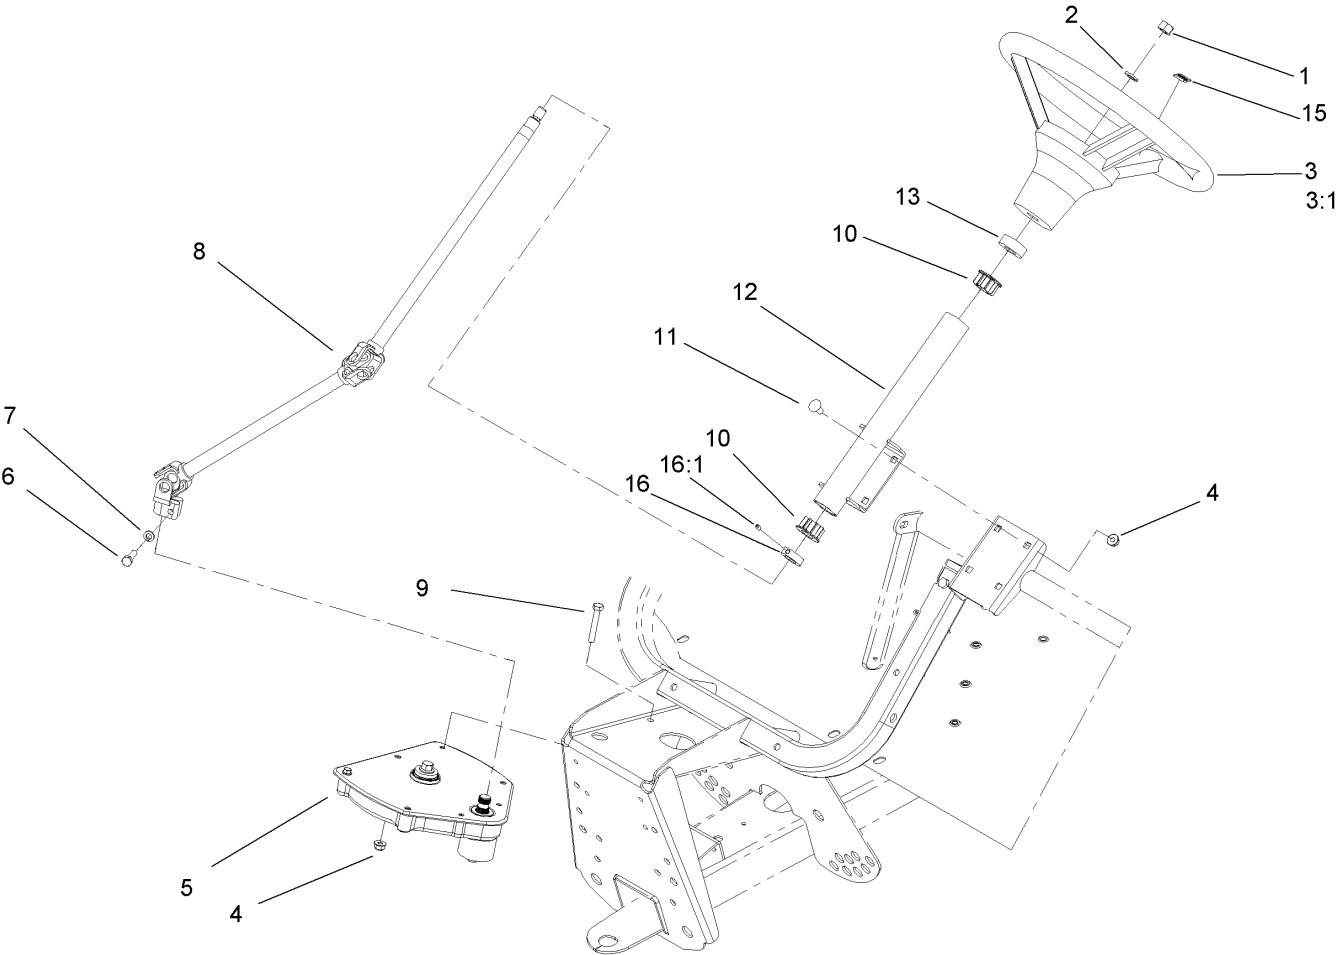 


Upper Steering Assembly

Ref	Part No.	Qty.	Description				
1	3277-1	1	Nut-Hex				
2	48-8070	1	Washer-Lock				
3	98-1471	1	Wheel-Steering				
3:1	98-1468	1	Cover-Wheel, Steering				
4	104-8300	7	Nut-Flange, NI				
5	99-7660	1	Steering Gearbox ASM				
6	48-7730	1	Screw-HH				
7	3253-4	1	Washer-Lock				
8	99-7653	1	Shaft-Steering				
9	322-10	3	Screw-HH				
10	93-1146	2	Bushing-Upper, Steering				
11	3230-1	4	Bolt-CARR				
12	99-7651-03	1	Column-Steering				
13	21-9260	1	Cover-Dust				
15	98-1459	1	Decal				
16	111383	1	Collar				
16:1	3245-32	1	Screw-HS				

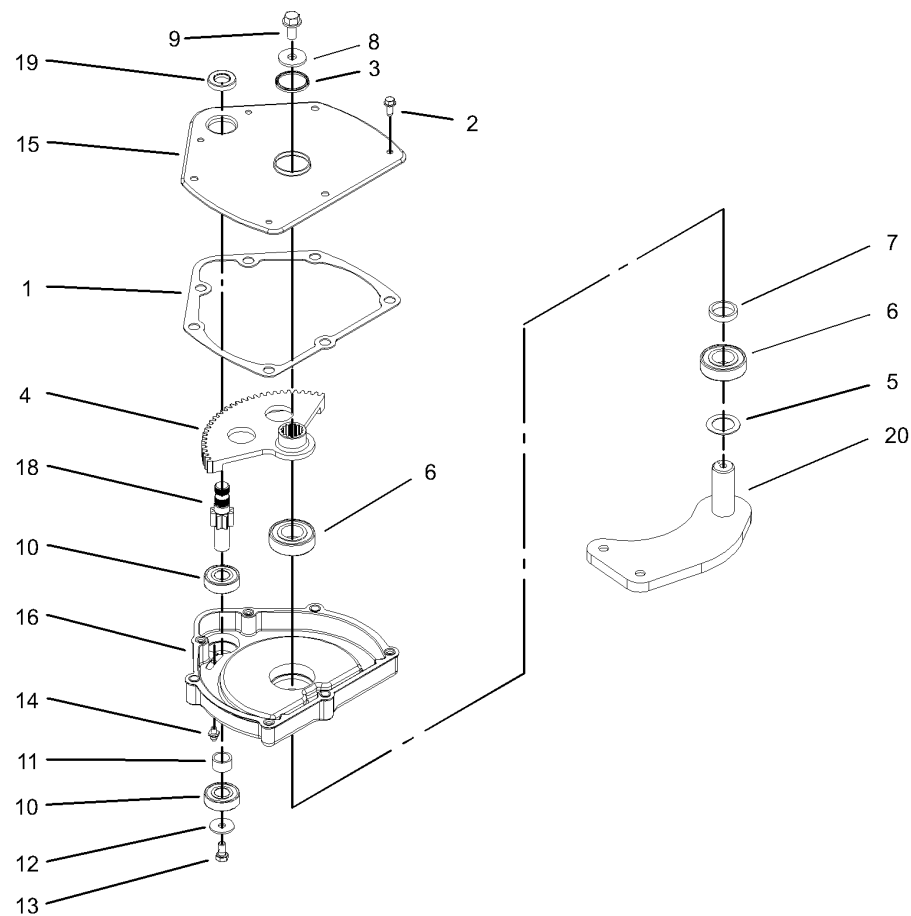 


Steering Gearbox Assembly No. 99-7660

Ref	Part No.	Qty.	Description				
1	94-2135	1	Gasket				
2	32144-10	4	Screw-HWH				
3	103118	1	Seal				
4	99-7843	1	Sector-Gear				
5	3256-42	1	Washer-Flat				
6	251-82	2	Bearing-Ball				
7	94-2218	1	Spacer-Shaft, Output				
8	104-6563	1	Washer-Stepped				
9	104-7156	1	Screw-HHF				
10	38-7820	2	Bearing-Ball				
11	94-2217	1	Spacer-Shaft, Input				
12	1-613235	1	Washer				
13	98-3498	1	Screw-HH				
14	302-5	1	Fitting-Grease				
15	99-7656-03	1	Cover-Housing, Steering				
16	99-7658	1	Housing-Steering				
18	99-7650	1	Gear-Pinion				
19	99-7657	1	Seal-Oil				
20	99-7601-03	1	Arm-Pitman				

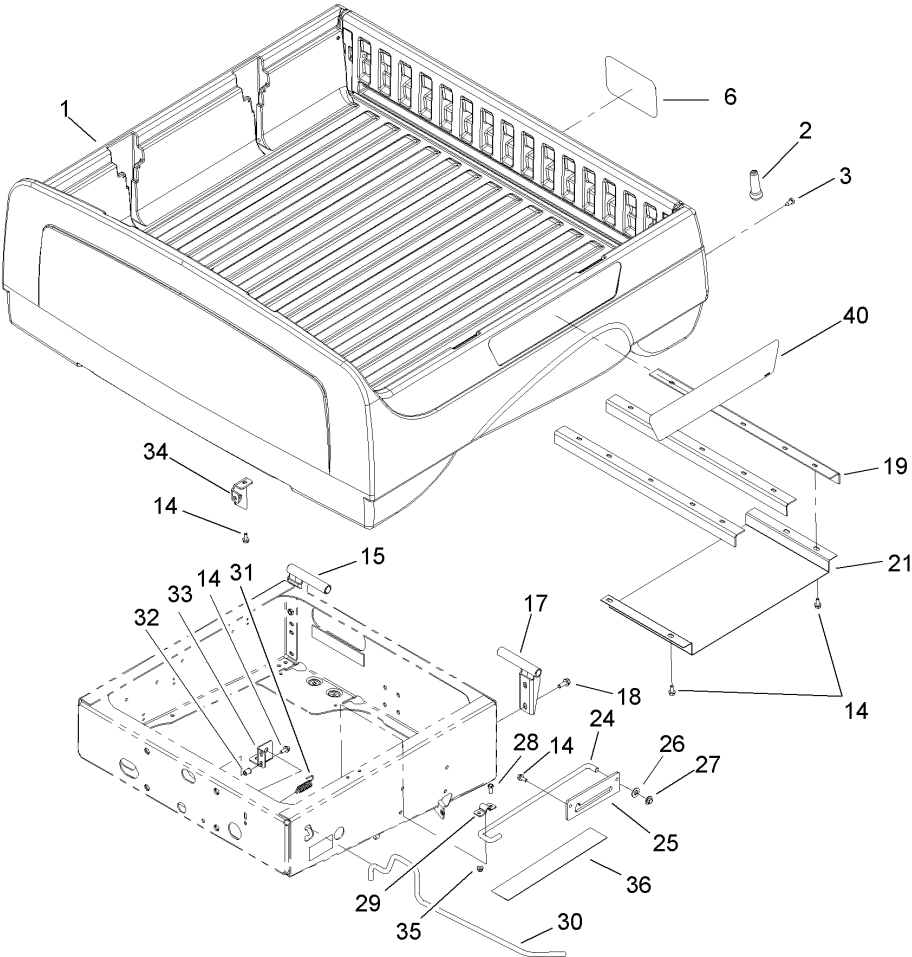 


Box Assembly

Ref	Part No.	Qty.	Description				
1		1	Box And Tailgate ASM				
2	99-7984	2	Knob-Soft Grip, Push-On				
3	87-8460	2	Bumper-Rubber				
6	104-7213	1	Decal				
14	3234-5	18	Screw				
15	99-7309-03	1	RH Pivot Bracket ASM				
17	99-7308-03	1	LH Pivot Bracket ASM				
18	3234-11	4	Screw-HHF				
19	99-7864-03	3	Brace-Box				
21	99-7870	1	Shield-Heat				
24	99-7895	1	Rod-Prop				
25	99-7894	1	Bracket-Rod, Prop				
26	3256-26	1	Washer-Flat				
27	32112-14	1	Nut-Push				
28	3234-17	2	Screw-HHF				
29	99-7896	1	Bracket-U, Prop Rod				
30	99-7745	1	Rod-Latch				
31	5-7290	1	Spring-Tension				
32	32148-7	2	Insert-Nut				
33	99-7744-03	1	Bracket-Latch				
34	99-7742-03	1	Hook-Latch, RH				
35	104-8300	1	Nut-Flange, NI				
36	104-6859	1	Shield-Heat				
40	104-7265	2	Decal				

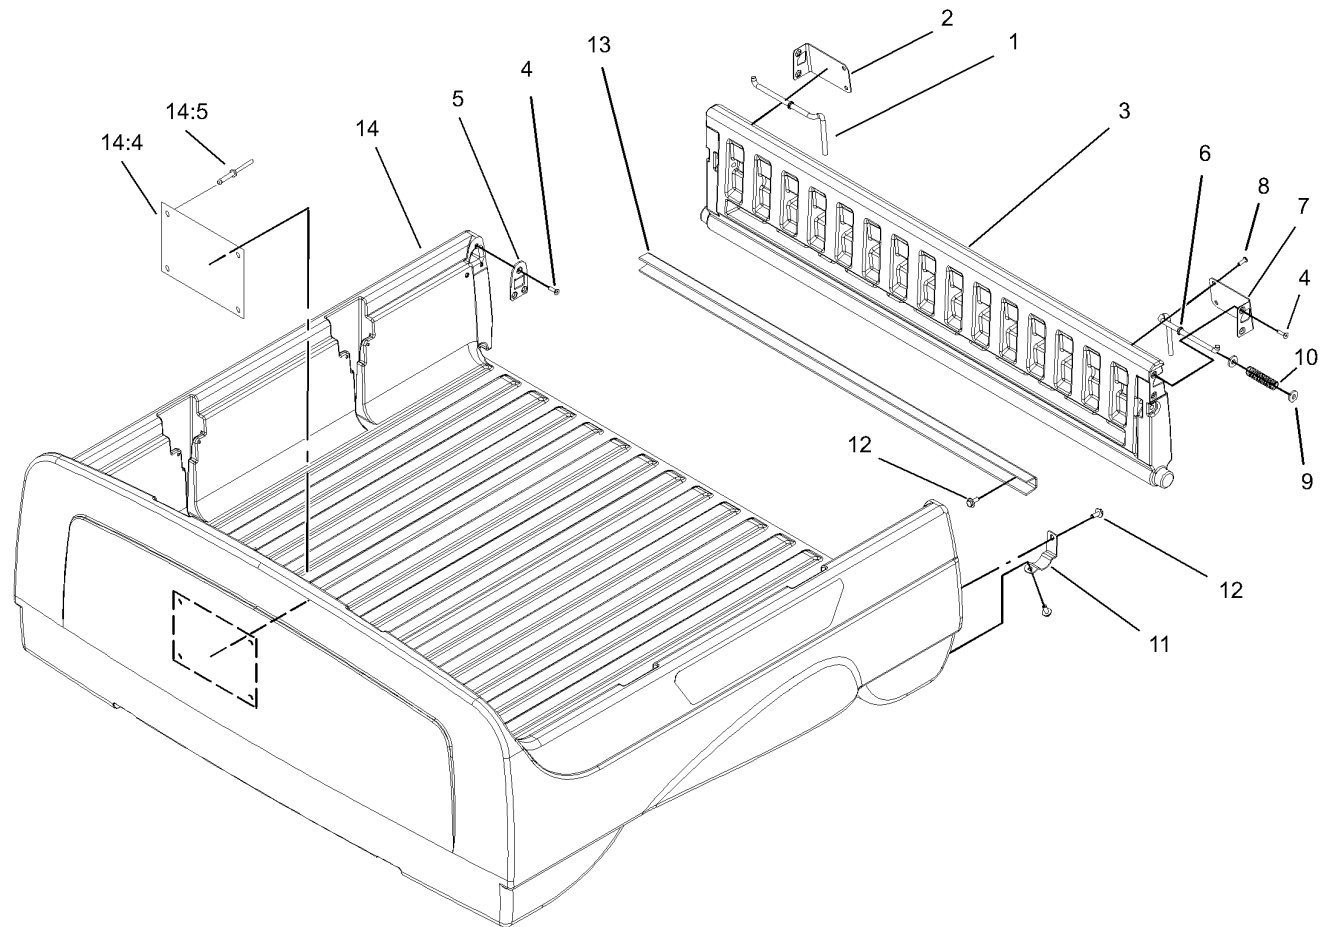 

Box and Tailgate Assembly


Ref	Part No.	Qty.	Description				
1	99-7860	1	Rod-Latch, Right				
2	99-7858	1	Bracket-Tailgate Latch, Right				
3	99-7893	1	Tailgate ASM				
4	99-7334	10	Screw				
5	99-7852	2	Plate-Striker				
6	99-7859	1	Rod-Latch, Left				
7	99-7857	1	Bracket-Tailgate Latch, Left				
8	99-7335	4	Screw				
9	99-7861	4	Washer-Latch				
10	61-8880	2	Spring				
11	99-7286	2	Bracket-Pivot, Tailgate				
12	3234-5	10	Screw				
13	99-7867	1	Channel-Tailgate				
14	104-7203	1	Box ASM				
14:4	99-7954	1	Decal-No Riders				
14:5	3290-415	4	Rivet				

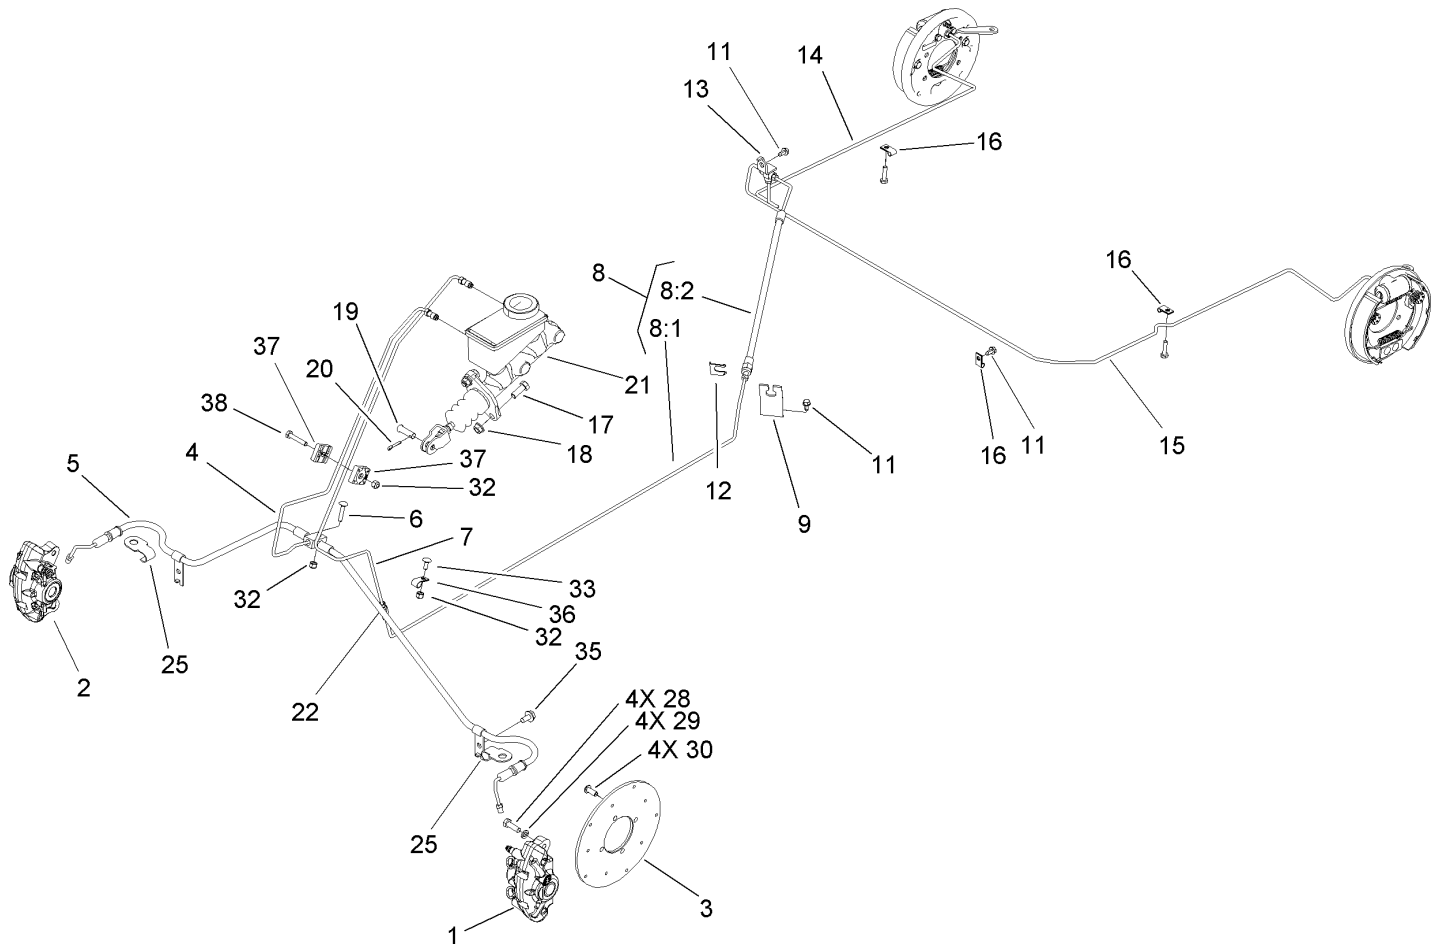 

Hydraulic Brake Assembly


Ref	Part No.	Qty.	Description
1	107-0361	1	Caliper, LH
2	107-0362	1	Caliper, RH
3	104-6891	2	Rotor
4	104-6798	1	Tube-Front, Brake
5	104-7256	1	Hose Asm, Front
6	3229-3	1	Screw-CARR
7	104-6793	1	Tube-Brake, Rear
8		1	Complete Rear Brake Hose ASM
8:1	104-6794	1	Tube-Brake, Rear
8:2	104-6795	1	Hose-Brake, Rear
9	104-6799	1	Bracket-Hose, Brake
11	12-3270	3	Screw
12	104-7092	1	Clip
13	87-3560	1	Tee
14	104-6796	1	Tube-Brake Rear, RH
15	104-6797	1	Tube-Brake Rear, LH
16	2412-72	3	Clip-Closed, Insulated
17	323-6	2	Screw-HH
18	3290-357	2	Nut-HHF
19	283-2	1	Pin-Clevis
20	3272-10	1	Pin-Cotter
21	104-6782	1	Cylinder-Master
22	87-3570	1	Union
25	104-7073	2	Bracket-Hose

Ref	Part No.	Qty.	Description
28	323-6	4	Screw-HH
29	3253-21	4	Washer-Lock
30	3274-55	8	Screw-HSBH
32	3296-42	3	Nut-Lock, NI
33	3229-11	1	Screw-CARR
35	32144-14	2	Screw-HWH
36	2412-89	1	Clamp
37	87-7660	2	Clamp-Tube
38	321-9	1	Screw-HH

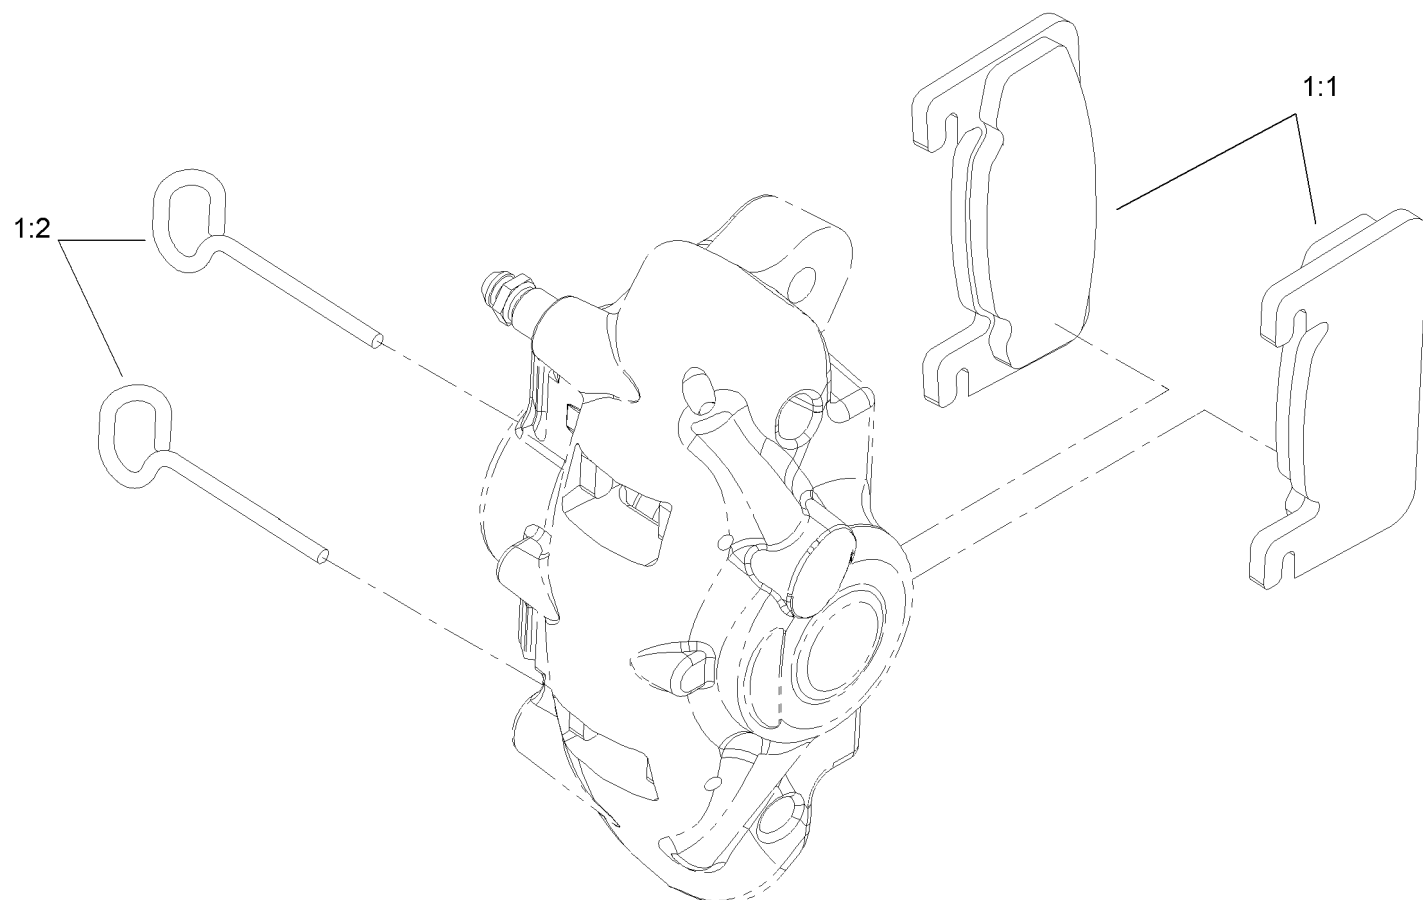 


Left Hand Caliper Assembly No. 107-0361

Ref	Part No.	Qty.	Description
1	107-0708	1	Friction Pad And Pin Kit
②1:1		2	Brake Pad ASM
②1:2		2	Pin

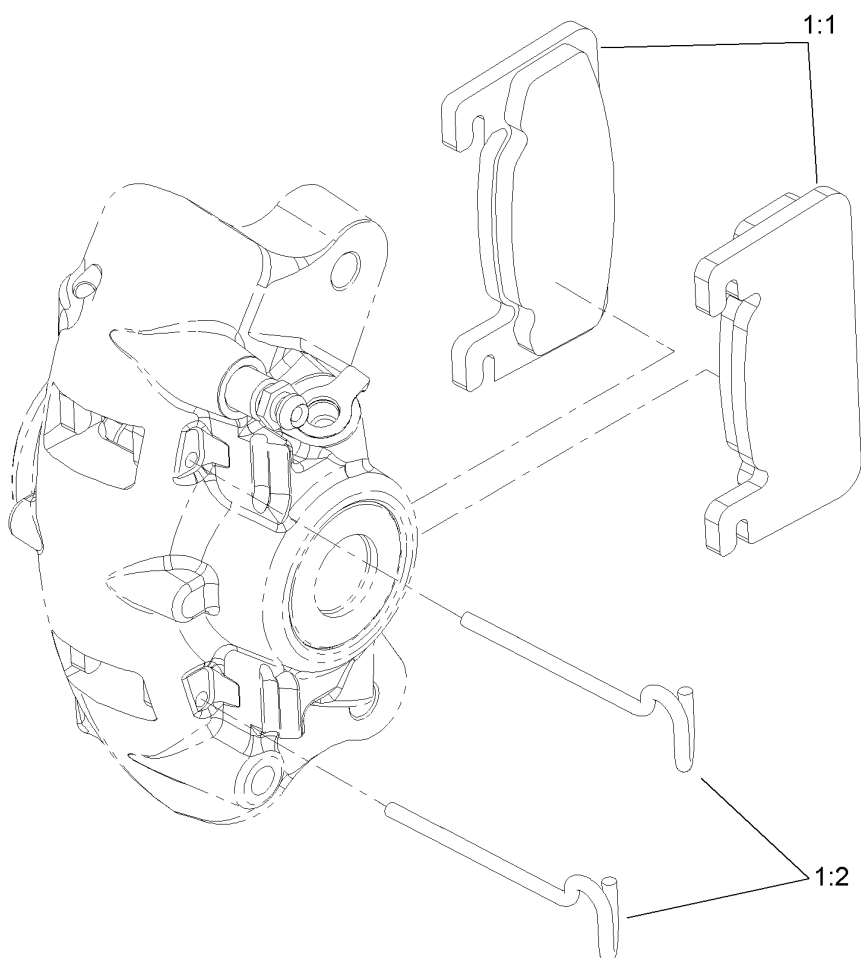 



Right Hand Caliper Assembly No. 107-0362

Ref	Part No.	Qty.	Description
1	107-0708	1	Friction Pad And Pin Kit
②1:1		2	Brake Pad ASM
②1:2		2	Pin

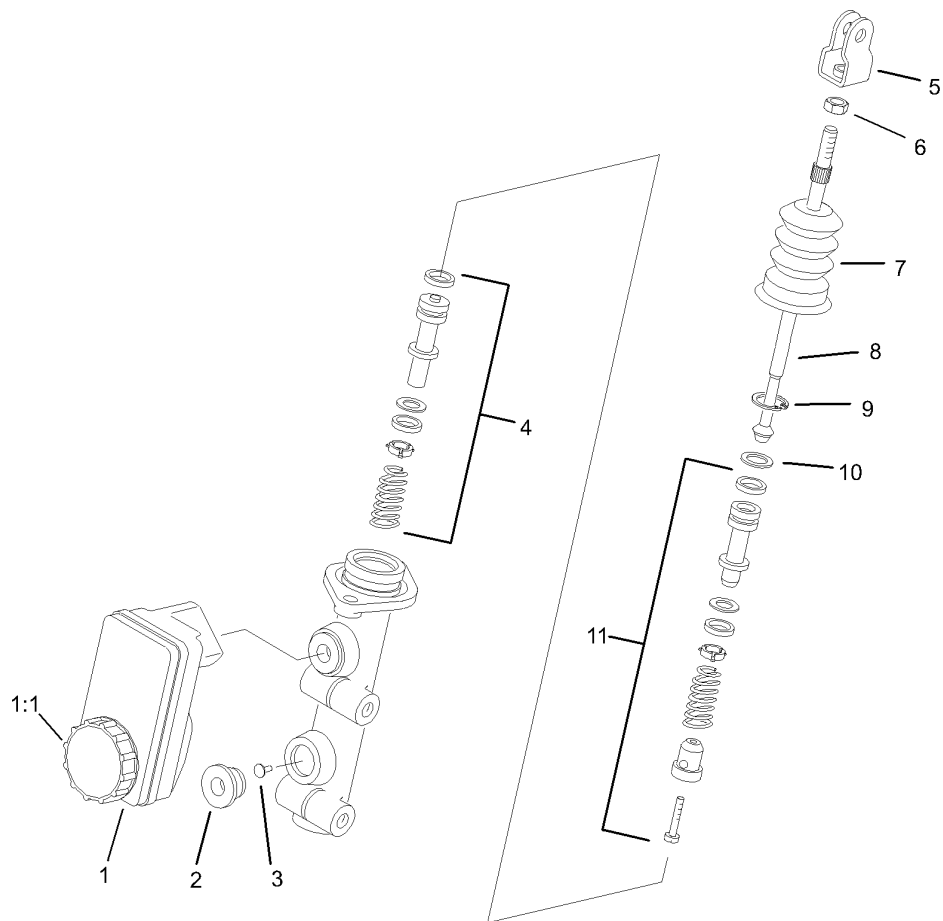 

Master Cylinder Assembly No. 104-6782


Ref	Part No.	Qty.	Description				
1	104-6845	1	Reservoir ASM				
1:1	92-4112	1	Cap ASM				
2	93-8971	2	Seal-Port, Flange				
3	92-4103	1	Pin-Stop				
4	92-4102	1	Secondary Piston ASM				
5	92-4110	1	Clevis				
6	21-0360	1	Nut-Hex				
7	94-5209	1	Cover-Dust				
8	94-5210	1	Rod-Push				
9	92-4109	1	Circlip				
10	92-4108	1	Retainer-Washer				
11	92-4101	1	Primary Piston ASM				

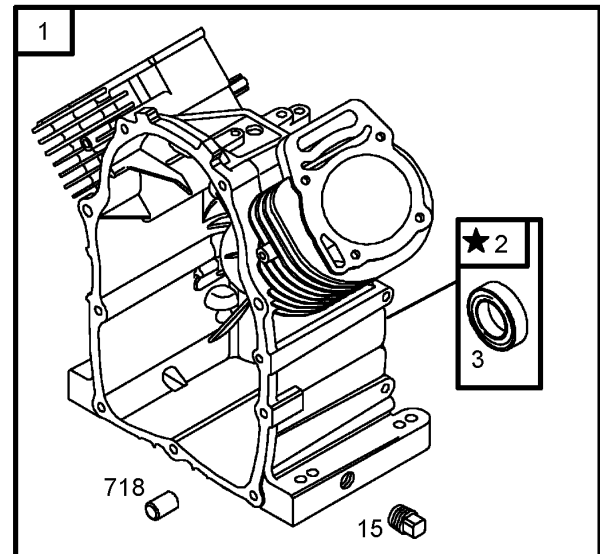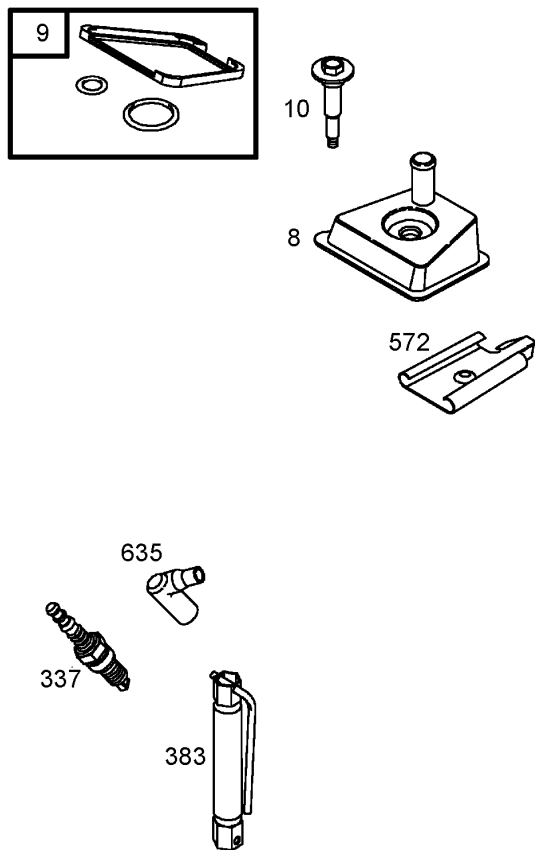  1019 **LABEL KIT**

Assemblies include all parts shown in frames.

Cylinder Assembly
Briggs and Stratton 303440-1326-E1


Ref	Part No.	Qty.	Description
⑥1	692178	1	Cylinder ASM
⑥2	808534	1	Bushing/seal Kit
③⑥3	805101	1	Seal—oil
⑥8	808984	1	Breather ASM
③⑥9	809094	1	Gasket—breather
⑥10	690751	1	Screw
⑥15	690946	1	Plug—drain, Oil
⑥337	496018	1	Plug—spark
⑥383	19374	1	Wrench—Spark Plug
⑥572	690686	1	Baffle—breather
⑥635	692076	1	Boot—Spark Plug
⑥718	690684	1	Pin—locating
⑥1019	808036	1	Label Kit

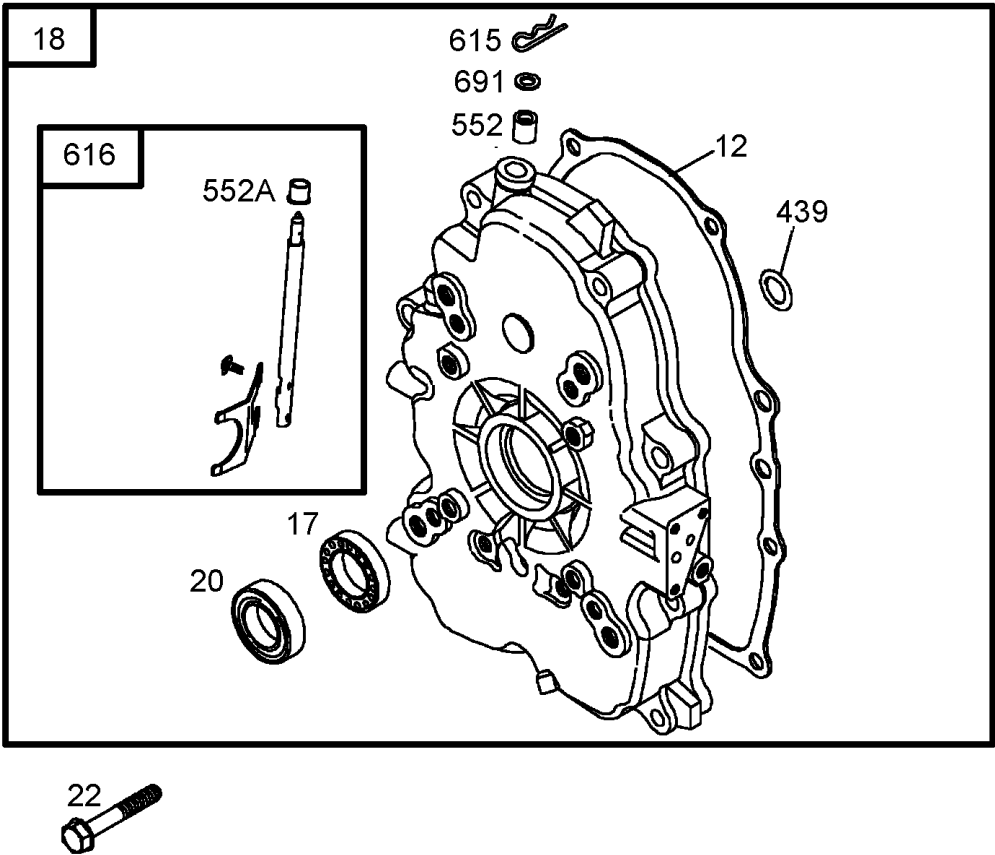 

Assemblies include all parts shown in frames.

Crankcase Assembly
Briggs and Stratton 303440-1326-E1

Ref	Part No.	Qty.	Description				
12	691684	1	Gasket-crankcase				
17	690752	1	Bearing-ball				
18	808847	1	Cover-crankcase				
20	805049	1	Seal-oil				
22	692540	1	Screw				
276A	690704	1	Washer-sealing				
439	692154	1	Seal-o Ring				
552	690701	1	Bushing-crank, Governor				
552A	806686	1	Bushing-crank, Governor				
615	691550	1	Retainer-shaft, Governor				
616	806685	1	Crank-governor				
691	690680	1	Seal-shaft, Governor				

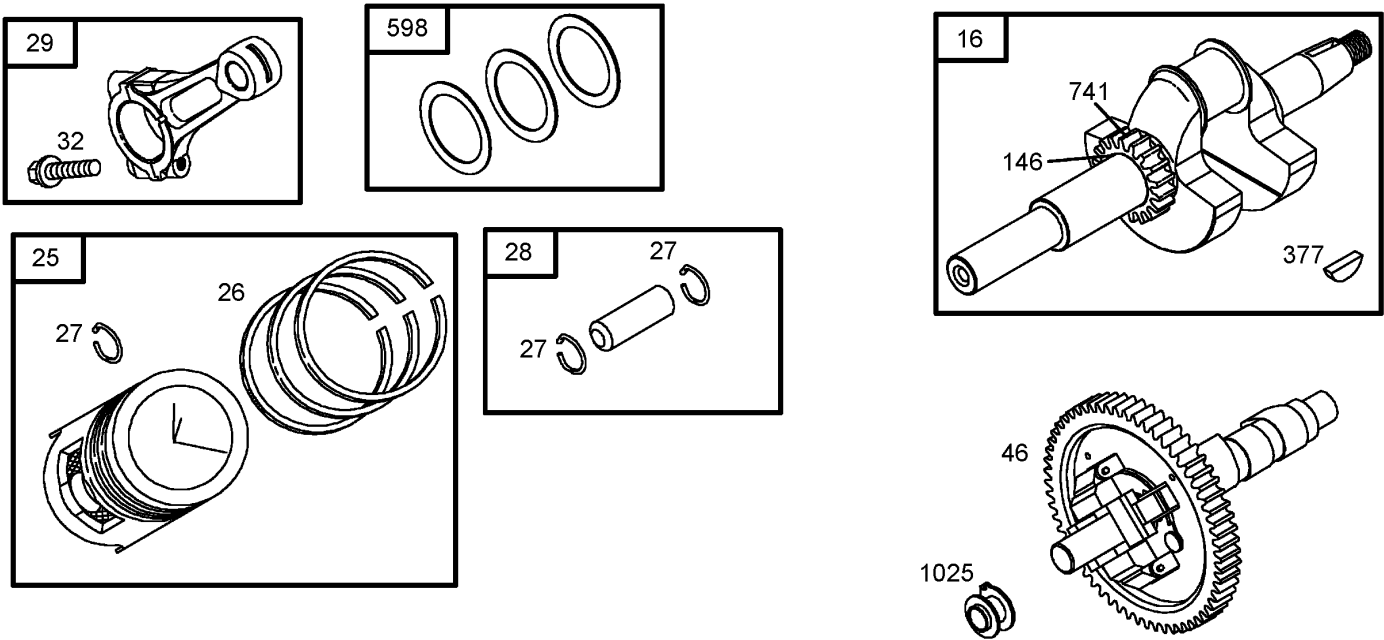 


Assemblies include all parts shown in frames.

Crankshaft Assembly

Briggs and Stratton 303440-1326-E1

Ref	Part No.	Qty.	Description				
16	692163	1	Crankshaft				
25	807619	1	Piston ASM (Standard)				
25	807807	1	Piston ASM (.010 Oversize)				
25	807809	1	Piston ASM (.020 Oversize)				
25	807811	1	Piston ASM (.030 Oversize)				
26	807620	1	Ring Set (Standard)				
26	807808	1	Ring Set (.010 Oversize)				
26	807810	1	Ring Set (.020 Oversize)				
26	807812	1	Ring Set (.030 Oversize)				
27	690683	1	Lock-pin, Piston				
28	807621	1	Pin-piston				
29	807900	1	Rod-connecting (Standard)				
29	807809	1	Piston ASM (.020 Oversize)				
32	690698	1	Screw				
46	692157	1	Camshaft				
146	691639	1	Key-timing				
377	808095	1	Key-woodruff				
598	807625	1	Shim-play, End				
741	691530	1	Gear-timing				
1025	690689	1	Spool-governor				

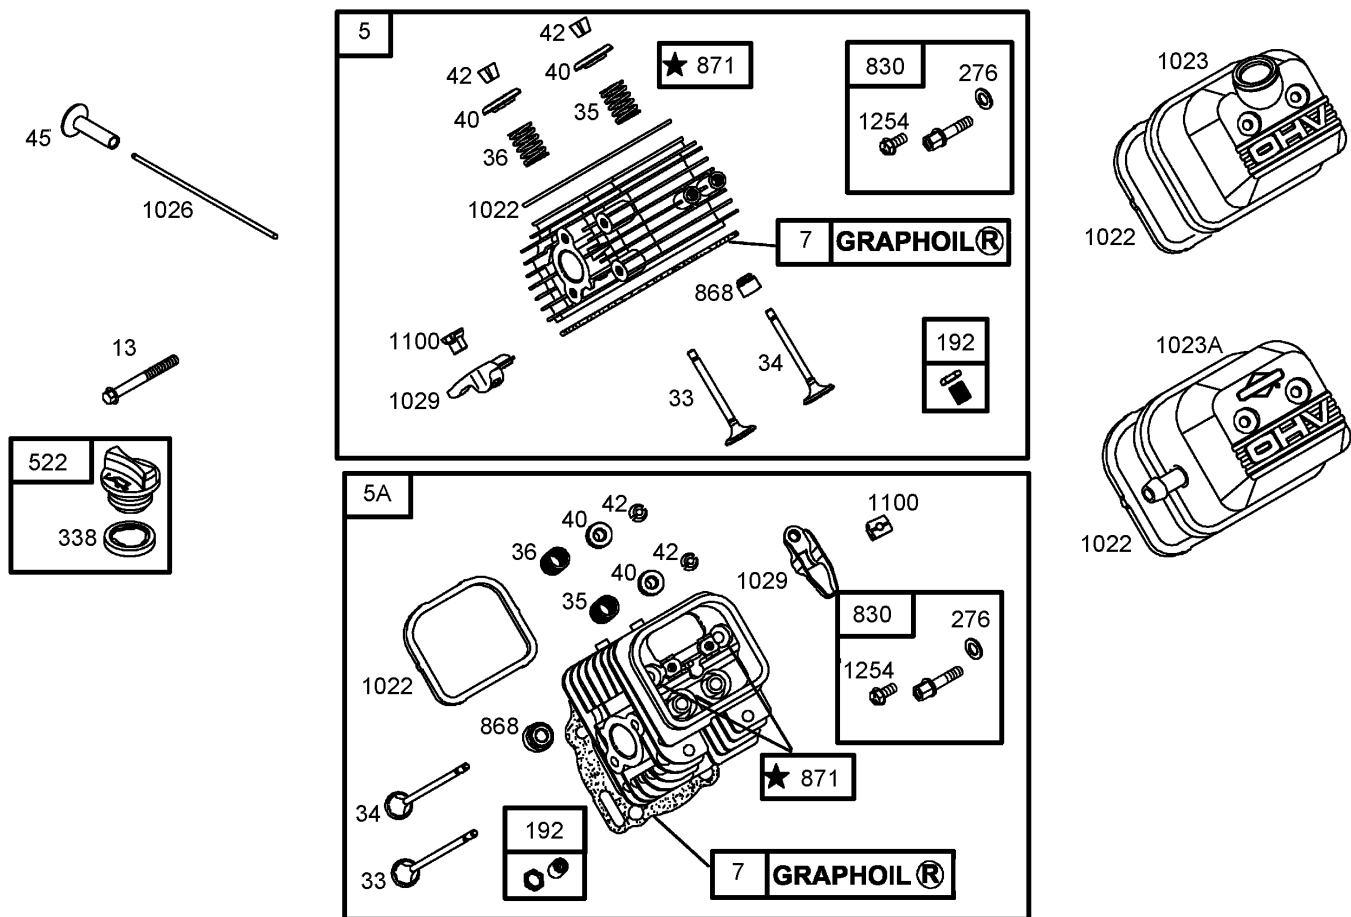 


Assemblies include all parts shown in frames.

Cylinder Head Assembly
Briggs and Stratton 303440-1326-E1

Ref	Part No.	Qty.	Description
65	809200	1	Head-cylinder (Cylinder 1)
65A	809201	1	Head-cylinder (Cylinder 2)
347 6	806085	1	Gasket-head, Cylinder
613	692059	1	Screw
633	807681	1	Valve-exhaust
634	807680	1	Valve-intake
635	692084	1	Spring-valve
636	692084	1	Spring-valve
640	692058	1	Retainer-valve
642	807683	1	Keeper-valve
645	690977	1	Valve Tappet
6192	807623	1	Adjuster-arm, Rocker
6276	807085	1	Washer-sealing
34338 6	691312	1	Gasket-dipstick
6522	491832	1	Plug-dipstick/fill
6830	809157	1	Stud-arm, Rocker
34868 6	691963	1	Seal-valve
36871	692057	1	Bushing-guide, Valve
341022 6	806039	1	Gasket-cover, Rocker
61023	690758	1	Cover-valve
61023A	691558	1	Cover-valve

Ref	Part No.	Qty.	Description
⑥1026	691836	1	Rod-push
⑥1026	691758	1	Rod-push
⑥1029	807323	1	Arm-rocker
⑥1100	690973	1	Pivot-arm, Rocker
⑥1254	807084	1	Screw

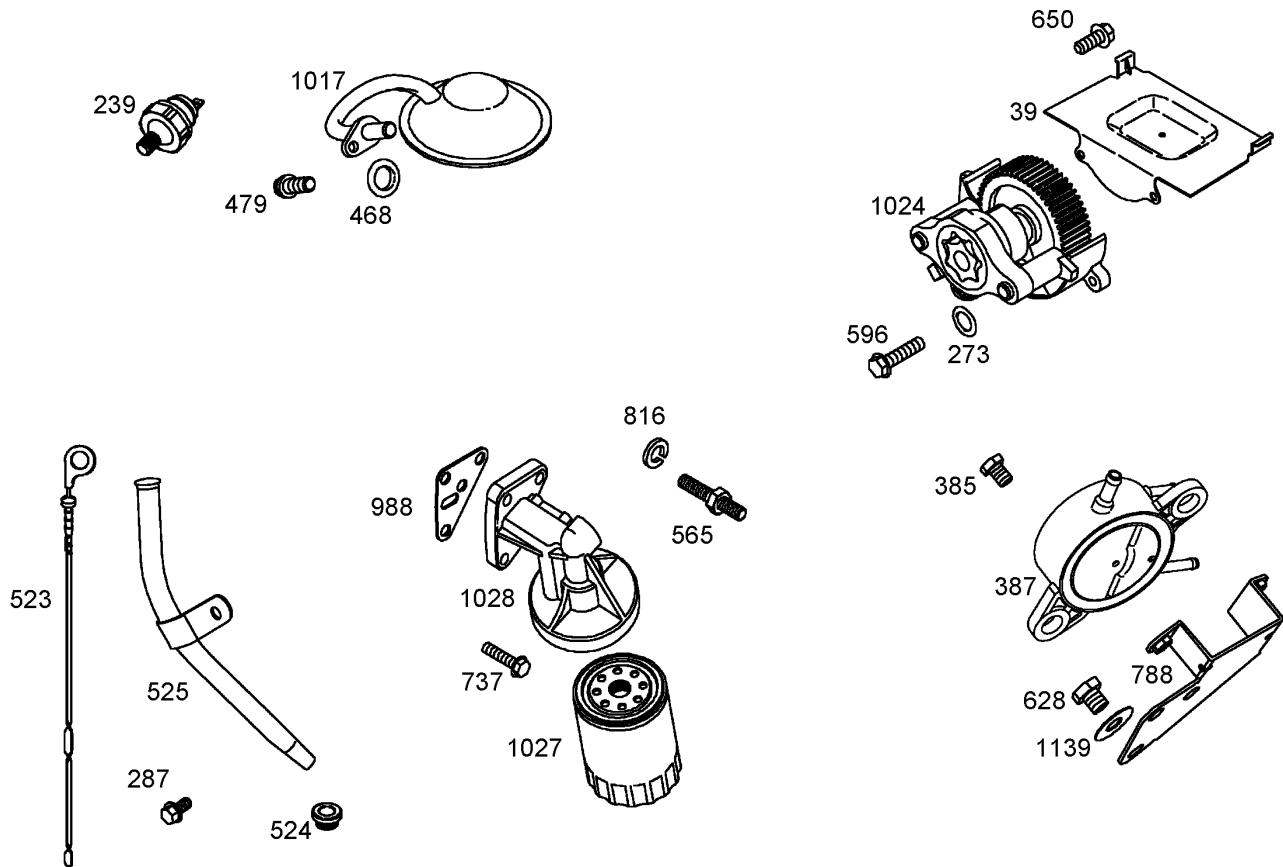 


Assemblies include all parts shown in frames.

Oil Filter, Tube and Pump Assembly

Briggs and Stratton 303440-1326-E1

Ref	Part No.	Qty.	Description				
39	690745	1	Deflector-oil				
239	690233	1	Switch-pressure, Oil				
273	690681	1	Seal-o Ring				
287	692062	1	Screw				
385	807084	1	Screw				
387	808656	1	Pump-fuel				
468	690690	1	Seal-o Ring				
479	692537	1	Screw				
523	693175	1	Dipstick				
524	693172	1	Seal-tube, Dipstick				
525	693173	1	Tube-dipstick				
565	690682	1	Stud				
596	691492	1	Screw				
628	806660	1	Screw (Fuel Pump Bracket)				
650	692539	1	Screw				
737	690679	1	Screw				
788	691559	1	Bracket-pump, Fuel				
816	690706	1	Washer				
988	692063	1	Gasket-adapter, Oil Filter				
1017	690900	1	Screen-pump, Oil				
1024	693185	1	Pump-oil				
1027	492932	1	Filter-oil				
1028	808235	1	Adapter-filter, Oil				
1139	806497	1	Washer				

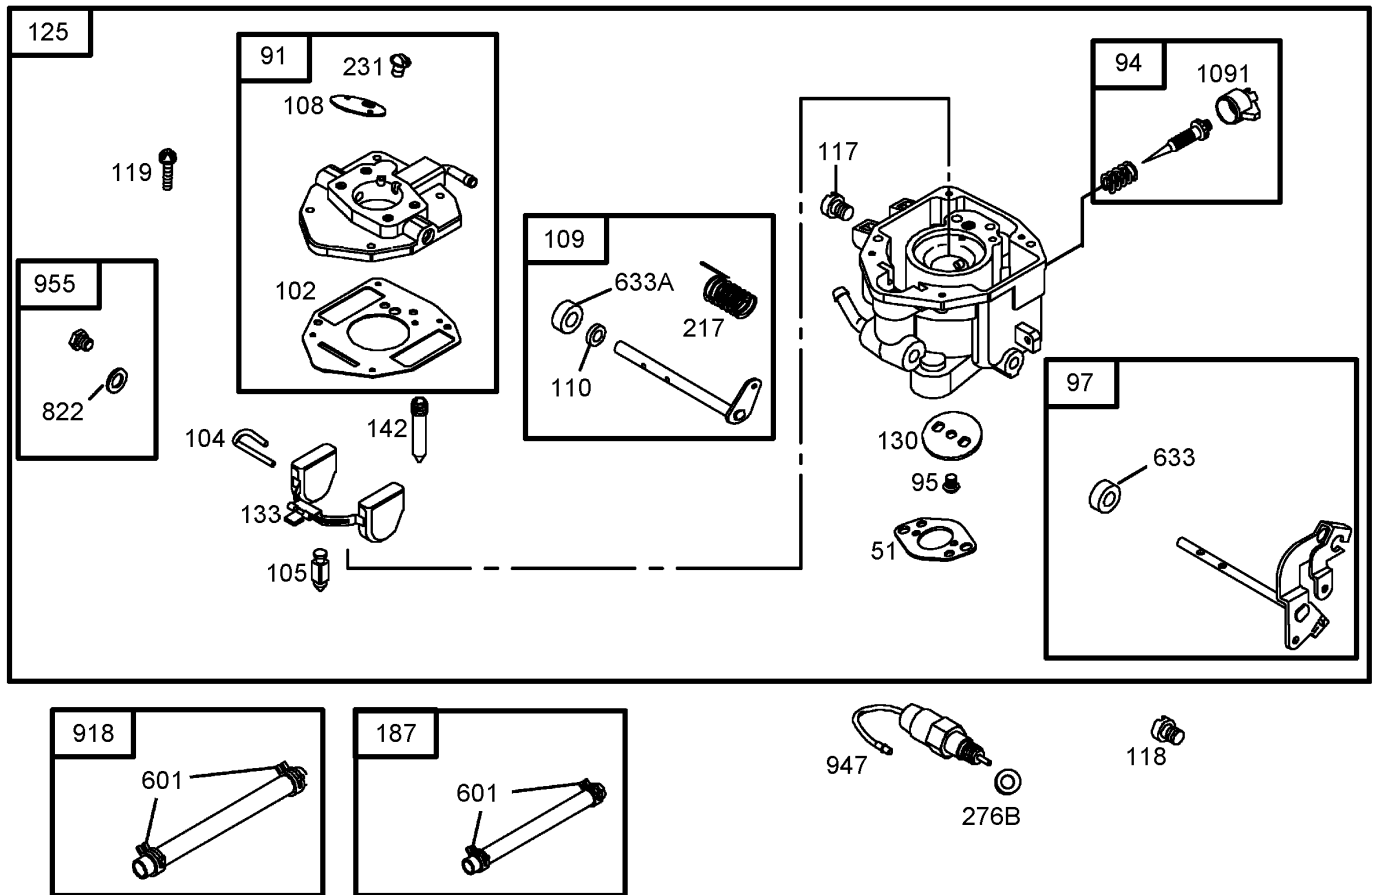 


Assemblies include all parts shown in frames.

Carburetor Assembly

Briggs and Stratton 303440-1326-E1

Ref	Part No.	Qty.	Description
51	691694	1	Gasket-Intake
91	808964	1	Body-carburetor, Upper
94	808257	1	Idle Mixture Kit
95	690718	1	Screw
97	841498	1	Shaft-throttle
102	692077	1	Gasket-body, Carburetor
104	690723	1	Pin-hinge, Float
105	692078	1	Valve-needle, Float
108	690719	1	Valve-choke
109	808962	1	Shaft-choke
110	806861	1	Washer (Choke Shaft)
117	806859	1	Jet-main
118	807115	1	Jet-main (High Altitude)
119	690720	1	Screw
125	841494	1	Carburetor
130	690726	1	Valve-throttle
133	806961	1	Float-carburetor
142	806860	1	Nozzle-carburetor
187	691050	1	Line-fuel Cut To Required Length
217	806862	1	Spring-return, Choke
231	690718	1	Screw
276B	806137	1	Washer-sealing
601	691038	1	Clamp-hose




Ref	Part No.	Qty.	Description
633	806131	1	Seal-shaft, Choke/throttle
633A	690722	1	Seal-shaft, Choke/throttle
822	690724	1	Seal-o Ring
918	393815	1	Line-vacuum
947	692094	1	Solenoid-fuel
955	807723	1	Plug-carburetor
1091	691516	1	Cap-limiter

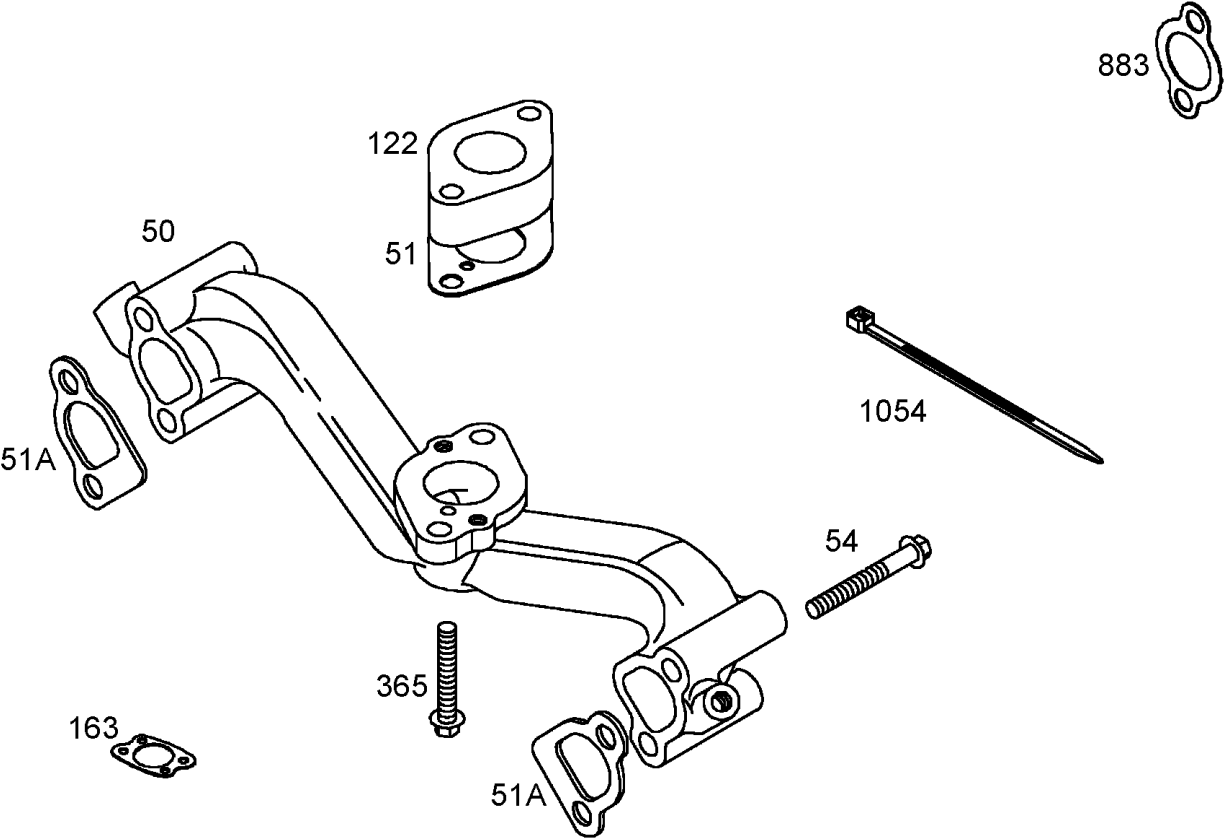 

Assemblies include all parts shown in frames.

Intake Manifold Assembly
Briggs and Stratton 303440-1326-E1





Ref	Part No.	Qty.	Description				
50	690754	1	Manifold-intake				
51	691694	1	Gasket-Intake				
51A	692035	1	Gasket-intake				
54	690676	1	Screw				
122	690691	1	Spacer-carburetor				
163	692081	1	Gasket-cleaner, Air				
365	690711	1	Screw				
883	691613	1	Gasket-exhaust				
1054	280275	1	Tie-cable				

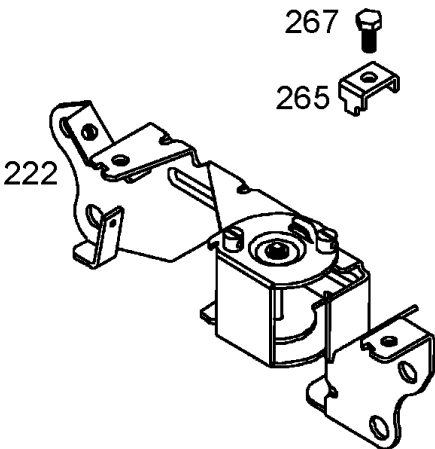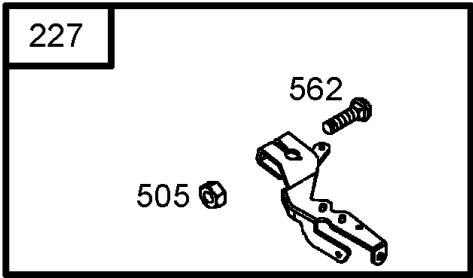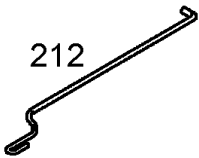   

Assemblies include all parts shown in frames.

Governor Assembly
Briggs and Stratton 303440-1326-E1

Ref	Part No.	Qty.	Description				
209	691507	1	Spring-governor				
212	690712	1	Link-throttle				
222	691570	1	Bracket-control				
227	690236	1	Lever-control, Governor				
232	692073	1	Spring-link, Governor				
265	691024	1	Clamp-casing				
267	692083	1	Screw				
505	690238	1	Nut				
562	690239	1	Bolt				

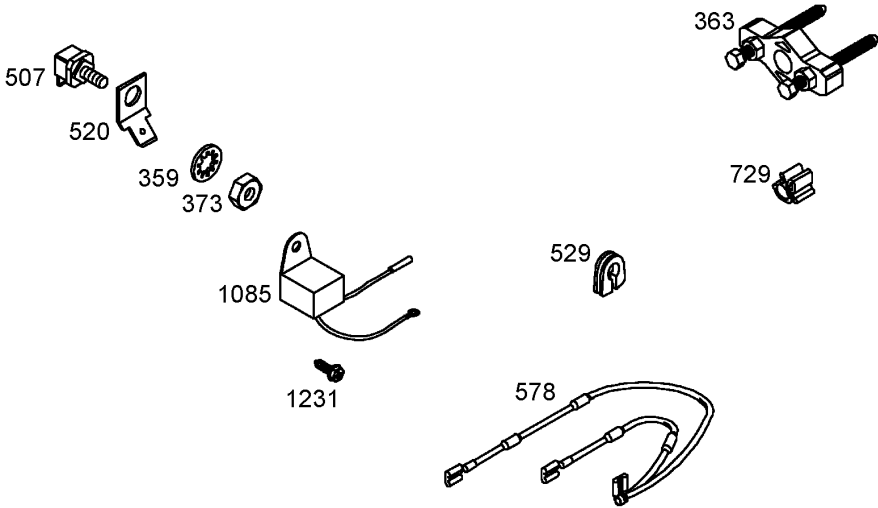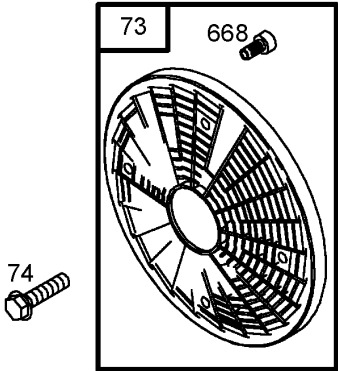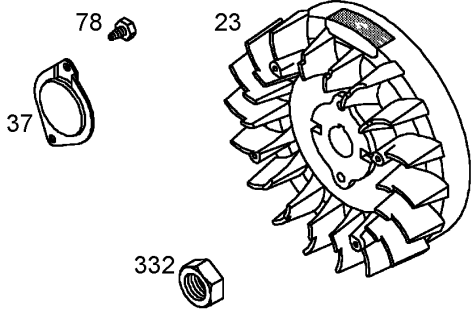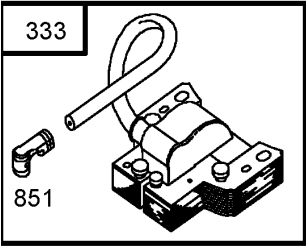    


Assemblies include all parts shown in frames.

Flywheel Assembly

Briggs and Stratton 303440-1326-E1


Ref	Part No.	Qty.	Description				
23	690889	1	Flywheel				
37	841309	1	Guard-flywheel				
73	494439	1	Screen-rotating				
74	691647	1	Screw				
78	690688	1	Screw				
332	690887	1	Nut				
333	492341	1	Armature-magneto				
334	692066	1	Screw				
359	691077	1	Washer				
363	19203	1	Puller-flywheel				
373	691612	1	Nut				
507	691972	1	Insulator				
520	691084	1	Terminal-ground				
529	690744	1	Grommet				
578	692319	1	Wire ASM				
668	691500	1	Spacer				
729	690586	1	Clip-wire				
851	493880	1	Terminal-spark Plug				
1085	809093	1	Module-ignition				
1231	692067	1	Screw				

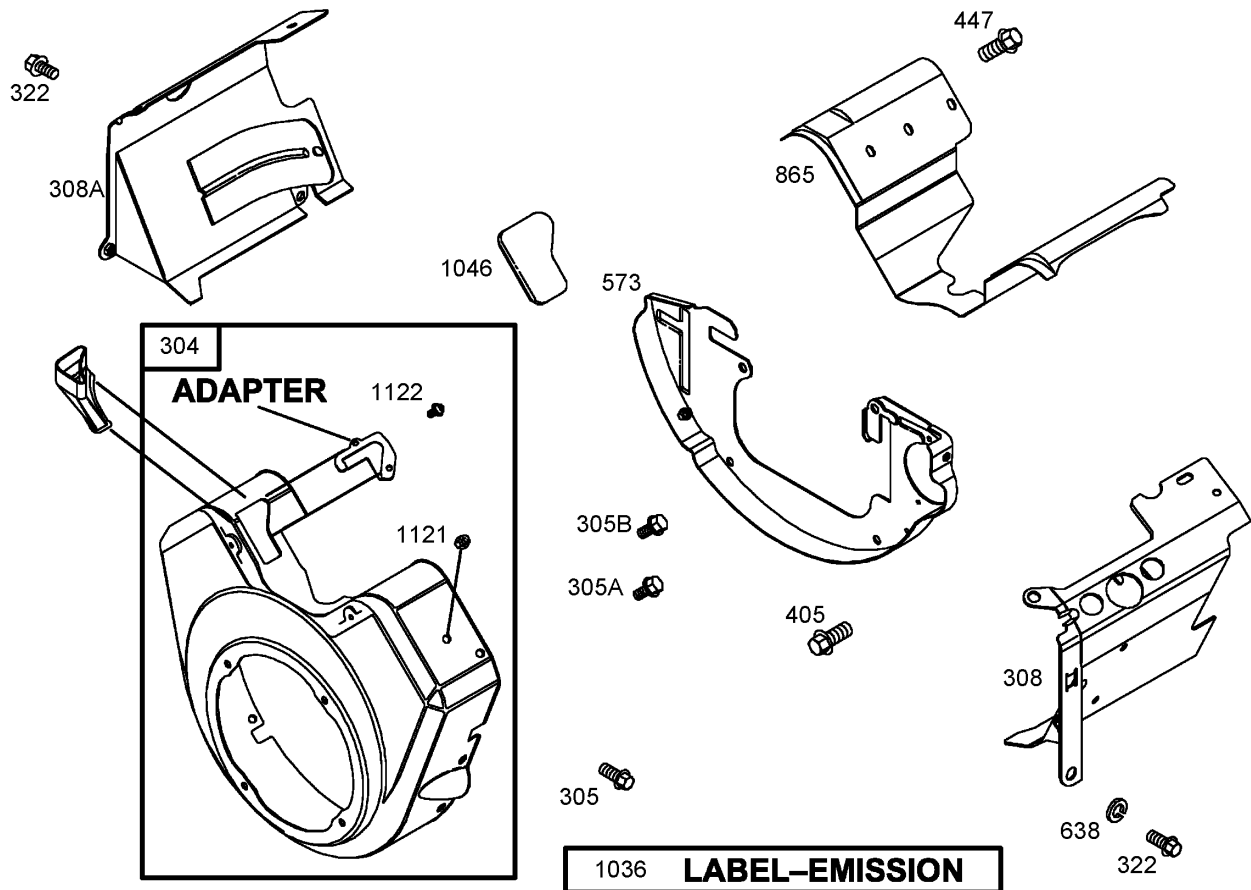 

Assemblies include all parts shown in frames.

Blower Housing Assembly
Briggs and Stratton 303440-1326-E1



Ref	Part No.	Qty.	Description				
⑥304	808408	1	Housing–blower				
⑥305	692539	1	Screw				
⑥305A	692056	1	Screw				
⑥305B	692062	1	Screw				
⑥308	841232	1	Cover–head, Cylinder (Cylinder 1)				
⑥308A	841182	1	Cover–head, Cylinder (Cylinder 2)				
⑥322	692539	1	Screw				
⑥405	807163	1	Screw				
⑥447	692539	1	Screw				
⑥573	690902	1	Plate–back				
⑥638	691551	1	Washer				
⑥865	690750	1	Cover–guide, Air				
⑥1036	806881	1	Label–emission				
⑥1046	692082	1	Plug–housing, Blower				
⑥1121	810056	1	Nut (Air Cleaner)				
⑥1122	93410	1	Screw (Control Wire Casing)				

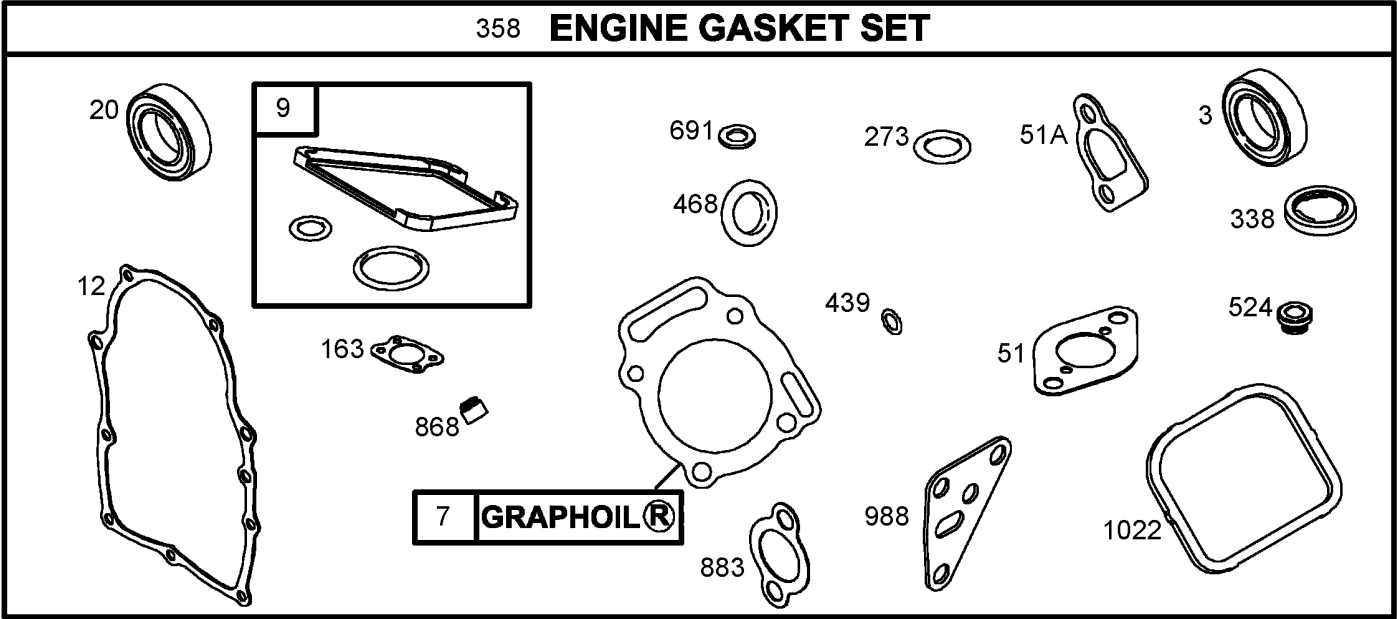 

Assemblies include all parts shown in frames.

Gasket Assembly
Briggs and Stratton 303440-1326-E1

Ref	Part No.	Qty.	Description				
363	805101	1	Seal-oil				
347 6	806085	1	Gasket-head, Cylinder				
369	809094	1	Gasket-breather				
3612	691684	1	Gasket-crankcase				
3620	805049	1	Seal-oil				
3551 6	691694	1	Gasket-Intake				
3451A 6	692035	1	Gasket-intake				
36163	692081	1	Gasket-cleaner, Air				
36273	690681	1	Seal-o Ring				
34338 6	691312	1	Gasket-dipstick				
3358	808390	1	Engine Gasket Set				
36439	692154	1	Seal-o Ring				
36468	690690	1	Seal-o Ring				
36524	693172	1	Seal-tube, Dipstick				
36691	690680	1	Seal-shaft, Governor				
34868 6	691963	1	Seal-valve				
34883 6	691613	1	Gasket-exhaust				
36988	692063	1	Gasket-adapter, Oil Filter				
341022 6	806039	1	Gasket-cover, Rocker				

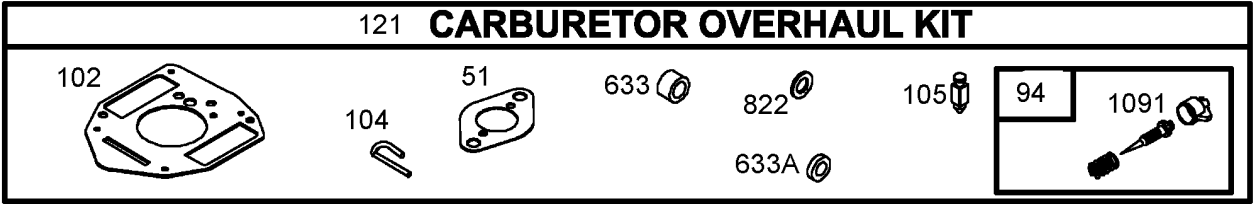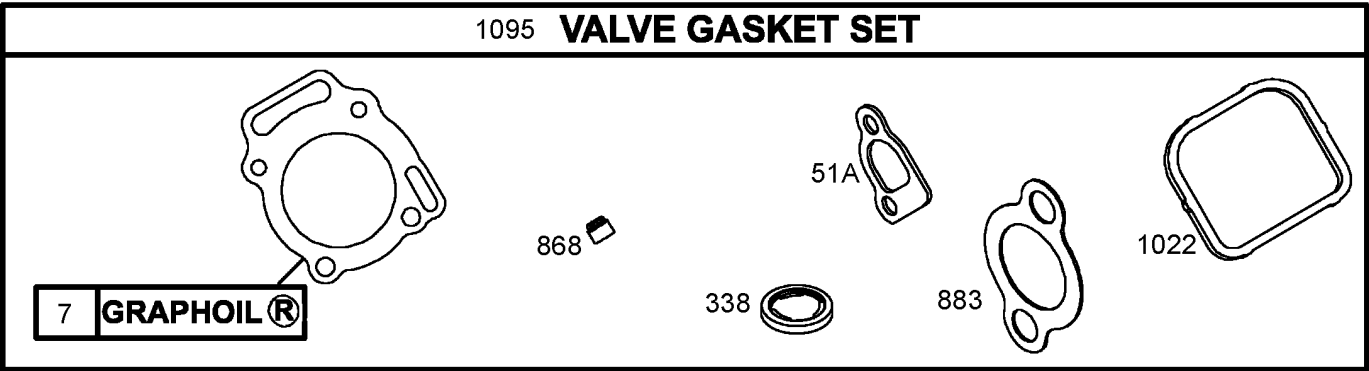  

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly

Briggs and Stratton 303440-1326-E1

Ref	Part No.	Qty.	Description				
347	806085	1	Gasket-head, Cylinder				
551	691694	1	Gasket-Intake				
3451A	692035	1	Gasket-intake				
5694	808257	1	Idle Mixture Kit				
56102	692077	1	Gasket-body, Carburetor				
6104	690723	1	Pin-hinge, Float				
56105	692078	1	Valve-needle, Float				
6121	809023	1	Carburetor Overhaul Kit				
34338	691312	1	Gasket-dipstick				
56633	806131	1	Seal-shaft, Choke/throttle				
56633A	690722	1	Seal-shaft, Choke/throttle				
56822	690724	1	Seal-o Ring				
34868	691963	1	Seal-valve				
34883	691613	1	Gasket-exhaust				
341022	806039	1	Gasket-cover, Rocker				
561091	691516	1	Cap-limiter				
61095	808392	1	Valve Gasket Set				

NOTES

NOTES

NOTES

