



XL 320 Lawn Tractor

Model No. 71199 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame and Body Assembly	 3	Crankshaft Assembly Briggs and Stratton 219907-0170-E1	 20
Hood and Tower Assembly	 4	Crankcase Assembly Briggs and Stratton 219907-0170-E1	 21
Rear Body and Seat Assembly	 5	Oil Filter, Tube and Pump Assembly Briggs and Stratton 219907-0170-E1	 22
Steering Component Assembly	 6	Carburetor Assembly Briggs and Stratton 219907-0170-E1	 23
Fixed Steering Assembly	 7	Governor Assembly Briggs and Stratton 219907-0170-E1	 24
Engine Component Assembly	 8	Blower Housing Assembly Briggs and Stratton 219907-0170-E1	 25
Traction Clutch Assembly	 9	Starter Assembly Briggs and Stratton 219907-0170-E1	 26
Shifter Assembly	 10	Gasket Assembly Briggs and Stratton 219907-0170-E1	 27
5 Speed Transaxle Assembly	 11	Carburetor Overhaul Kit Assembly Briggs and Stratton 219907-0170-E1	 28
32in Deck Assembly	 12	Attachments and Accessories List	 29
32in Deck Blade Drive / Brake Assembly	 13		
Height-of-Cut Assembly	 14		
Electrical Component Assembly	 15		
Engine Assembly	 16		
32in Deck and Baffle Assembly	 17		
Cylinder Assembly Briggs and Stratton 219907-0170-E1	 18		
Cylinder Head Assembly Briggs and Stratton 219907-0170-E1	 19		

Part Description Abbreviations


Part descriptions in this catalog may include the following abbreviations.

AR. as required	HWHTF. hex washer head thread forming
ASM. assembly	HYD. hydraulic
CARR. carriage	INC. incorporated
DEG. degrees	LH. left hand
EXT. external	NI. nylon insert
FH. flat head	NPTF. national pipe thread fine
GA. gauge	PPH. phillips pan head
HF. hex flange	PRH. phillips round head
HH. hex head	PTH. phillips truss head
HHF. hex head flange	PTO. power take off
HHFTF. hex head flange thread forming	RH. right hand
HJ. hex jam	ROPS. roll over protection system
HLH. hex lag head	SFH. slotted fillister head
HOC. height-of-cut	SHH. slotted hex head
HS. hex	SHWH. slotted hex washer head
HSBH. hex socket button head	SPH. slotted pan head
HSFH. hex socket flat head	SQH. square head
HSH. hex socket head	SRH. slotted round head
HWH. hex washer head	STD. standard

Footnotes

- | | |
|---|---|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Included in Engine Gasket Set-Ref. 358. | ❹ Included in Valve Gasket Set-Ref. 1095. |
| ❺ Included in Carburetor Overhaul Kit-Ref. 121. | ❻ Obtain parts from your local Briggs & Stratton dealer |


3

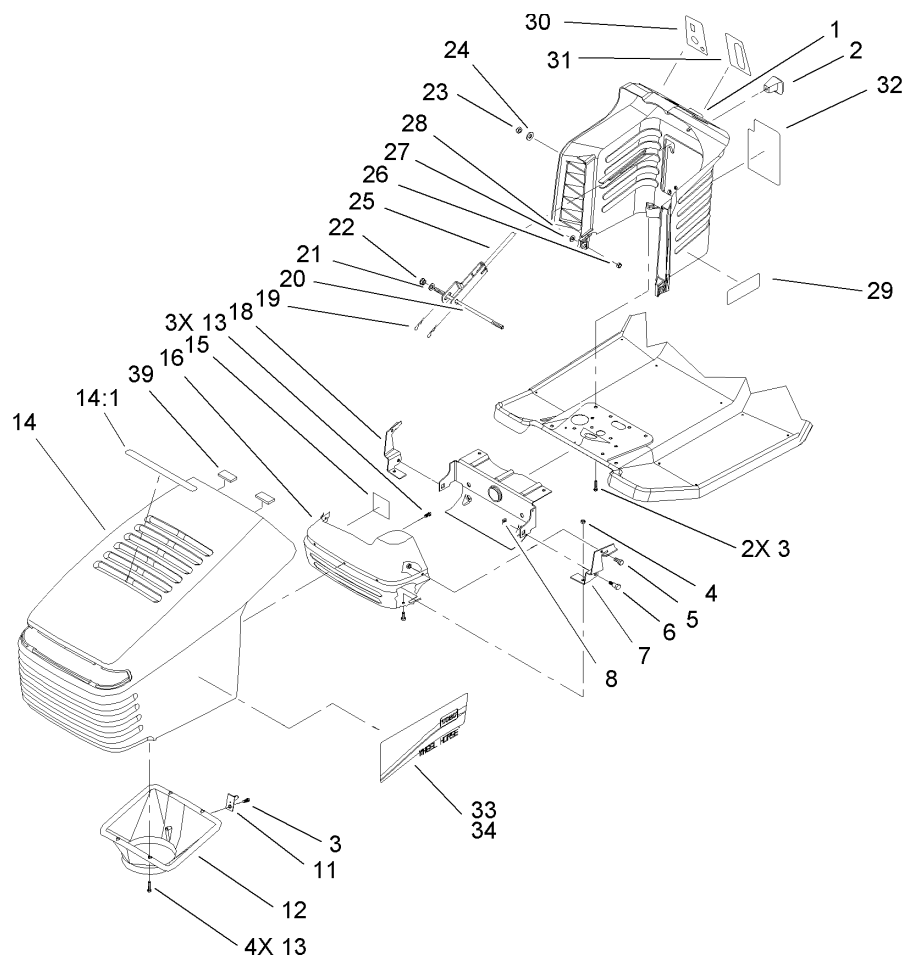

Hood and Tower Assembly

Ref	Part No.	Qty.	Description
1	99-1947	1	Tower-Steering
2	94-5565	1	Knob-Shift
3	46-8091	3	Screw-HWH
4	3296-42	4	Nut-Lock, NI
5	321-2	4	Screw-HH
6	28-0540	2	Bolt-Shoulder
7	88-6050-03	1	Bracket-Hinge, LH
8	3290-496	2	Nut-Retainer
11	94-1984	1	Latch-Pin
12	93-3891	1	Duct-Air, Hood
13	46-8090	7	Screw-Plastite
14	92-8650	1	Hood ASM
14:1	92-5748	1	Decal-Duct, Air
15	92-5782	3	Tape-Foil
16	93-3864-03	1	Shield-Heat
18	88-6040-03	1	Bracket-Hinge, RH
19	3290-307	2	Pin-Hair
20	100-7401	1	Rod-Tower, Pivot
21	3256-24	2	Washer-Flat
22	3218-3	2	Nut-Jam
23	100-7402	2	Nut-Cap
24	100-7403	2	Washer-Flat
25	88-5190-03	1	Lever-Deck, Engage
26	3296-29	2	Nut-Lock, NI


Ref	Part No.	Qty.	Description
27	3256-23	2	Washer-Flat
28	322-3	2	Screw-HH
29	108-7802	2	Decal-Tower
30	99-8140	1	Decal-Ignition
31	92-2461	1	Decal-Throttle
32	92-2462	1	Decal-Deck, Engage
33	105-2497	1	Decal-Hood, LH
34	105-2496	1	Decal-Hood, RH
39	94-1980	2	Foam-Hood

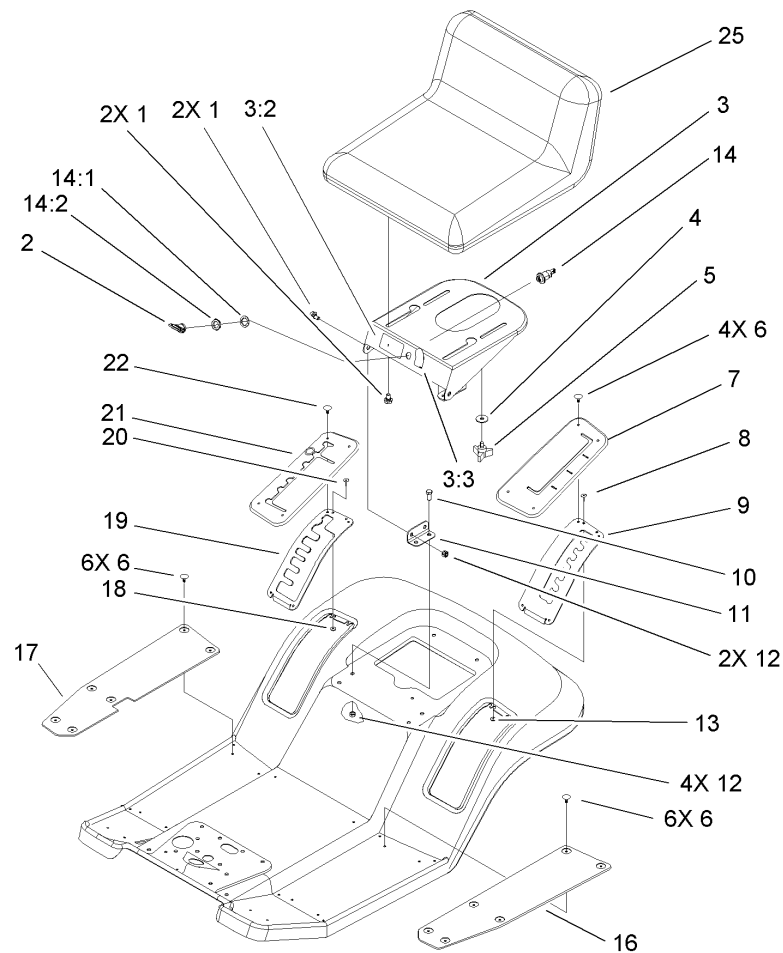

Rear Body and Seat Assembly

Ref	Part No.	Qty.	Description
1	37-8770	4	Bolt-Shoulder
2	63-8360	1	Key-Ignition
3	106-6436	1	Seat Support ASM
3:2	99-2985	1	Danger-Decal
3:3	99-5339	1	Decal
4	5-4460	2	Washer-Pivot
5	92-9674	2	Knob
6	3290-479	16	Fastener-Panel
7	88-5170	1	Cover-HOC
8	3290-282	2	Rivet-Pop
9	88-5030-03	1	Gate-HOC
10	322-3	4	Screw-HH
11	88-4820-03	2	Bracket-Hinge, Seat
12	3296-29	6	Nut-Lock, NI
13	3269-26	2	Washer-Flat
14	46-5780	1	Switch-Starter
14:1	3254-5	1	Washer-Tooth
14:2	218-461	1	Nut-HH
16	88-5240	1	Mat-Foot, LH
17	88-5220	1	Mat-Foot, RH
18	3269-26	2	Washer-Flat
19	88-5020-03	1	Plate-Gate, Shift
20	3290-282	2	Rivet-Pop
21	88-5160	1	Cover-Gate, Shift


Ref	Part No.	Qty.	Description
22	3290-479	4	Fastener-Panel
25	106-6439	1	Seat-11in

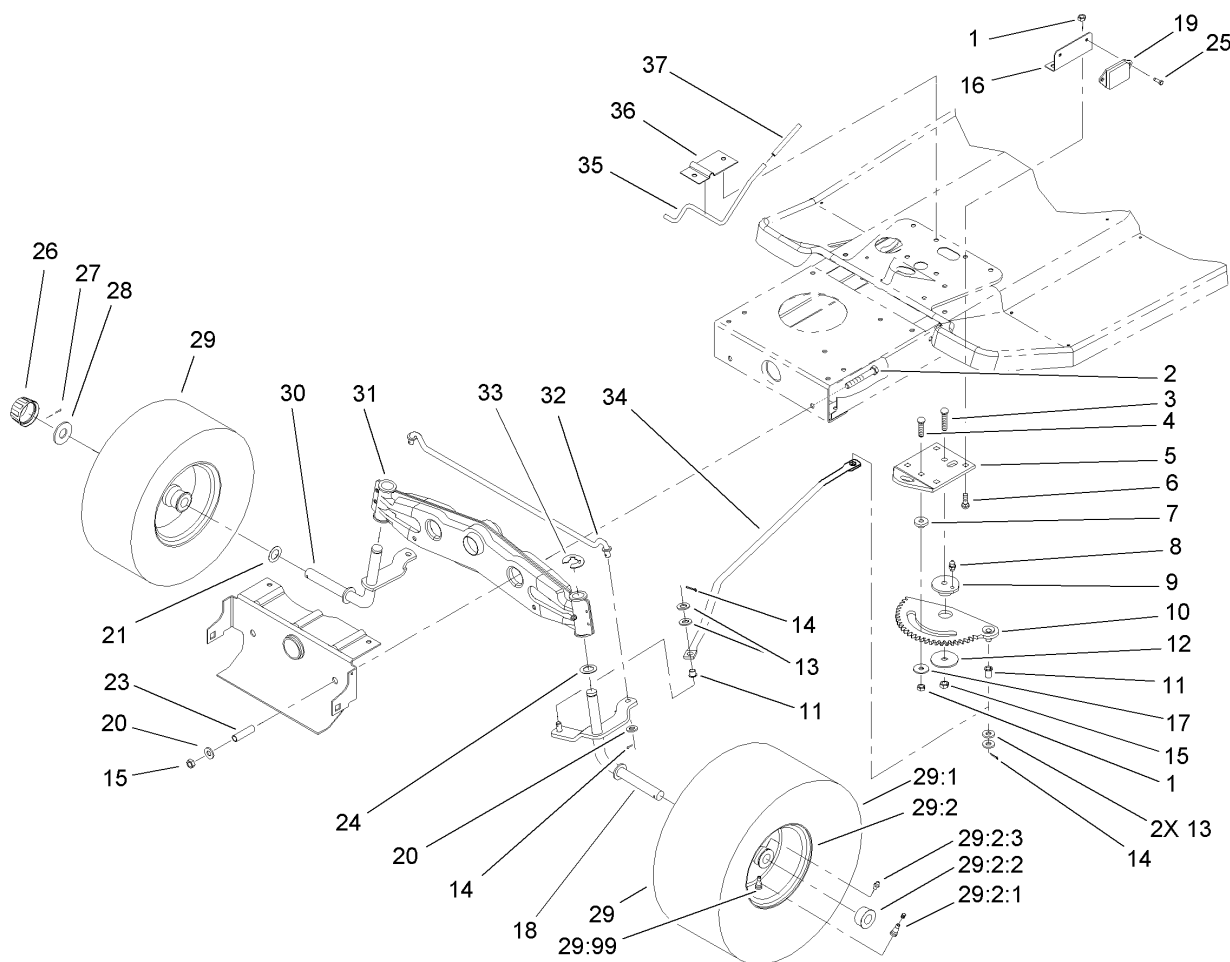

Steering Component Assembly


Ref	Part No.	Qty.	Description
1	3296-29	5	Nut-Lock, NI
2	323-13	2	Screw-HH
3	3231-4	1	Screw-CARR
4	3230-3	1	Screw-CARR
5	88-5130-03	1	Bracket-Rack, Steering
6	3230-2	4	Bolt-CARR
7	88-5010	1	Spacer-Rack, Steering
8	302-26	1	Fitting-Grease
9	88-4670	1	Bushing-Eccentric
10	88-5200	1	Rack-Steering
11	52-2891	2	Bushing-Link, Steering
12	111419	1	Washer-Bearing
13	3256-25	4	Washer-Flat
14	3272-10	4	Pin-Cotter
15	3296-39	3	Nut-Lock, NI
16	99-2956-03	1	Bracket-Module
17	5-4460	1	Washer-Pivot
18	92-7890-03	1	LH Spindle ASM
19	99-3700	1	Module
20	3256-24	4	Washer-Flat
21	3-6498	4	Washer-Thrust
23	88-5470	2	Spacer-Axle, Front
24	3-6498	4	Washer-Thrust
25	9266714	2	Screw-HWH

Ref	Part No.	Qty.	Description
26	61-9780	2	Cap-Hub
27	3272-12	2	Pin-Cotter
28	28-2480	2	Washer
29		2	Front Wheel And Tire ASM
29:1	99-2992	1	Tire
29:2	88-4360	1	Rim ASM
29:2:1	232-27	1	Stem-Valve
29:2:2	110513	2	Bearing-Wheel
29:2:3	302-5	1	Fitting-Grease
29:99	232-38	1	Tube
30	92-7889-03	1	RH Spindle ASM
31	94-1962-03	1	Front Axle ASM
32	88-5380	1	Tie Rod-Steering
33	32151-48	2	E-Ring
34	88-4830	1	Link-Drag
35	88-5510	1	Rod-Brake, Parking
36	88-5520-03	1	Bracket-Brake, Parking
37	88-0890	1	Grip-Brake, Parking

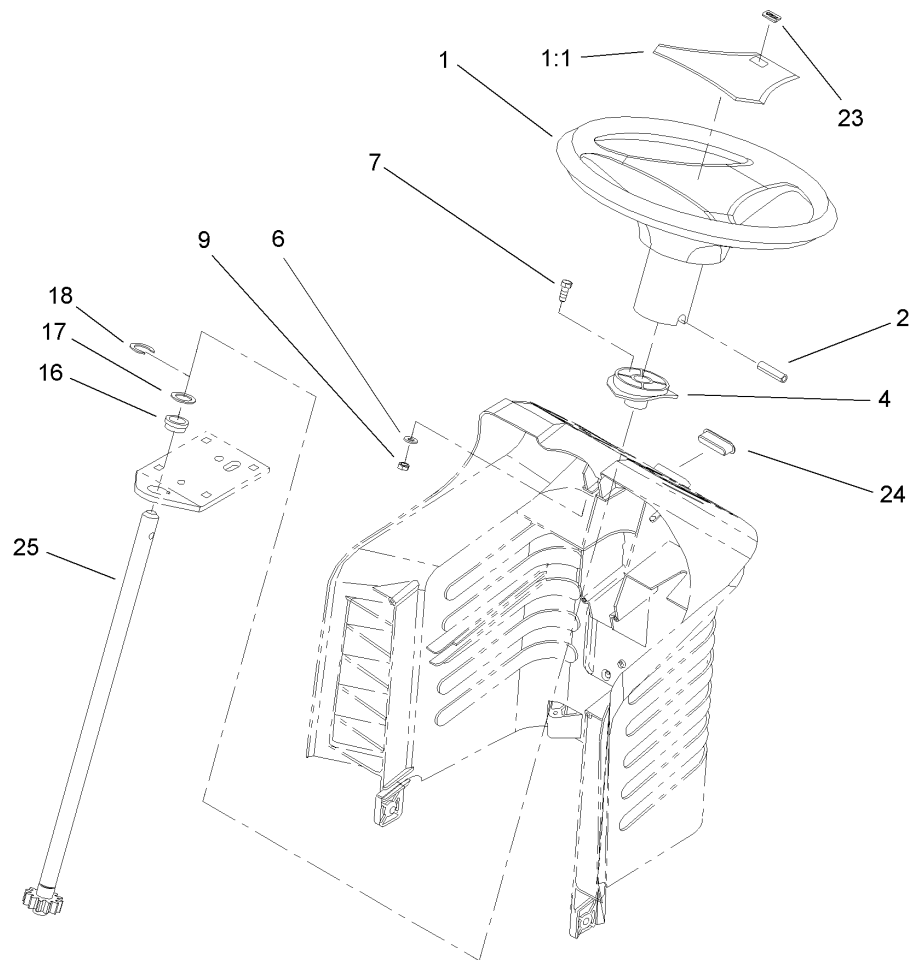

Fixed Steering Assembly


Ref	Part No.	Qty.	Description				
1	98-1467	1	Wheel-Steering				
1:1	98-1468	1	Cover-Wheel, Steering				
2	32121-111	1	Pin-Roll				
4	88-4190	1	Bushing-Sliding				
6	3256-22	2	Washer-Flat				
7	321-4	2	Screw-HH				
9	3296-42	2	Nut-Lock, NI				
16	88-5150	1	Bearing-Flange				
17	3-6498	1	Washer-Thrust				
18	32151-48	1	E-Ring				
23	98-1459	1	Decal				
24	88-4150	1	Plug				
25	88-6380	1	Shaft-Steering, Long				

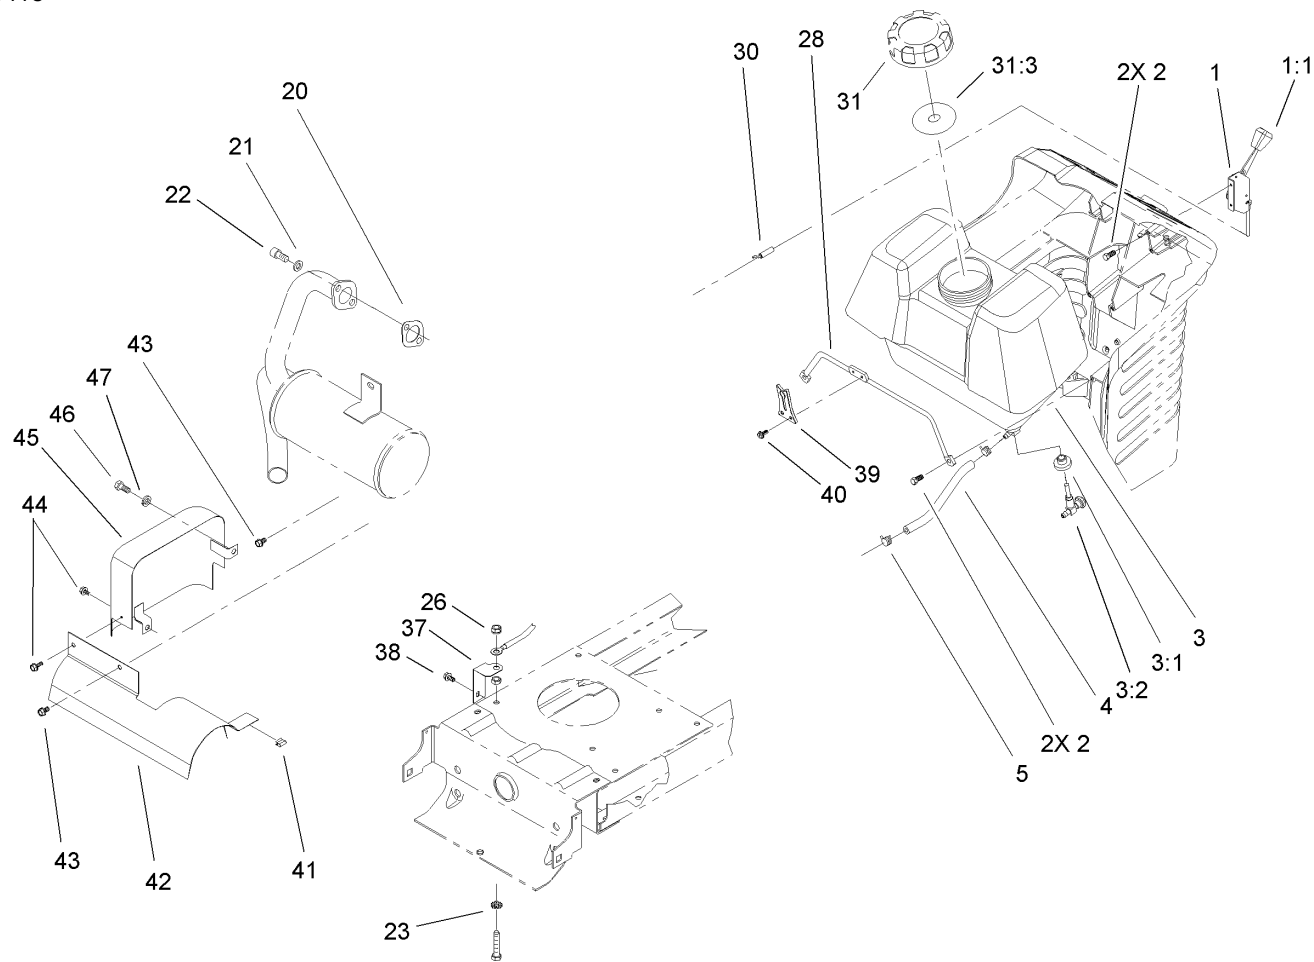

Engine Component Assembly

Ref	Part No.	Qty.	Description
1	88-4340	1	Control-Throttle
1:1	66-0120	1	Knob
2	27-0220	4	Screw-Special
3	88-3880	1	Gas Tank ASM
3:1	46-6560	1	Bushing
3:2	104048	1	Valve-Fuel
4	47-2963	1	Hose-Fuel
5	2412-98	2	Clamp
20	88-4410	1	Gasket-Muffler
21	3253-4	2	Washer-Lock
22	3274-10	2	Screw-HSH
23	3255-8	1	Washer-Lock
26	32149-1	2	Nut-Keps
28	94-1952	1	Rod-Tank, Gas
30	88-4350	1	Cable-Throttle
31	88-3980	1	Gas Cap ASM
31:3	88-4010	1	Gasket-Cap, Gas
37	93-3809	1	Bracket-Ground
38	9266714	1	Screw-HWH
39	94-1951	1	Latch-Hood
40	32144-112	2	Screw-HWH
41	93-3882	1	Clip-Tinnerman
42	105-2462-03	1	Shield-Muffler
43	9266714	2	Screw-HWH


Ref	Part No.	Qty.	Description
44	32104-76	2	Screw
45	93-8450-03	1	Exhaust Shield ASM
46	322-3	1	Screw-HH
47	3253-4	1	Washer-Lock

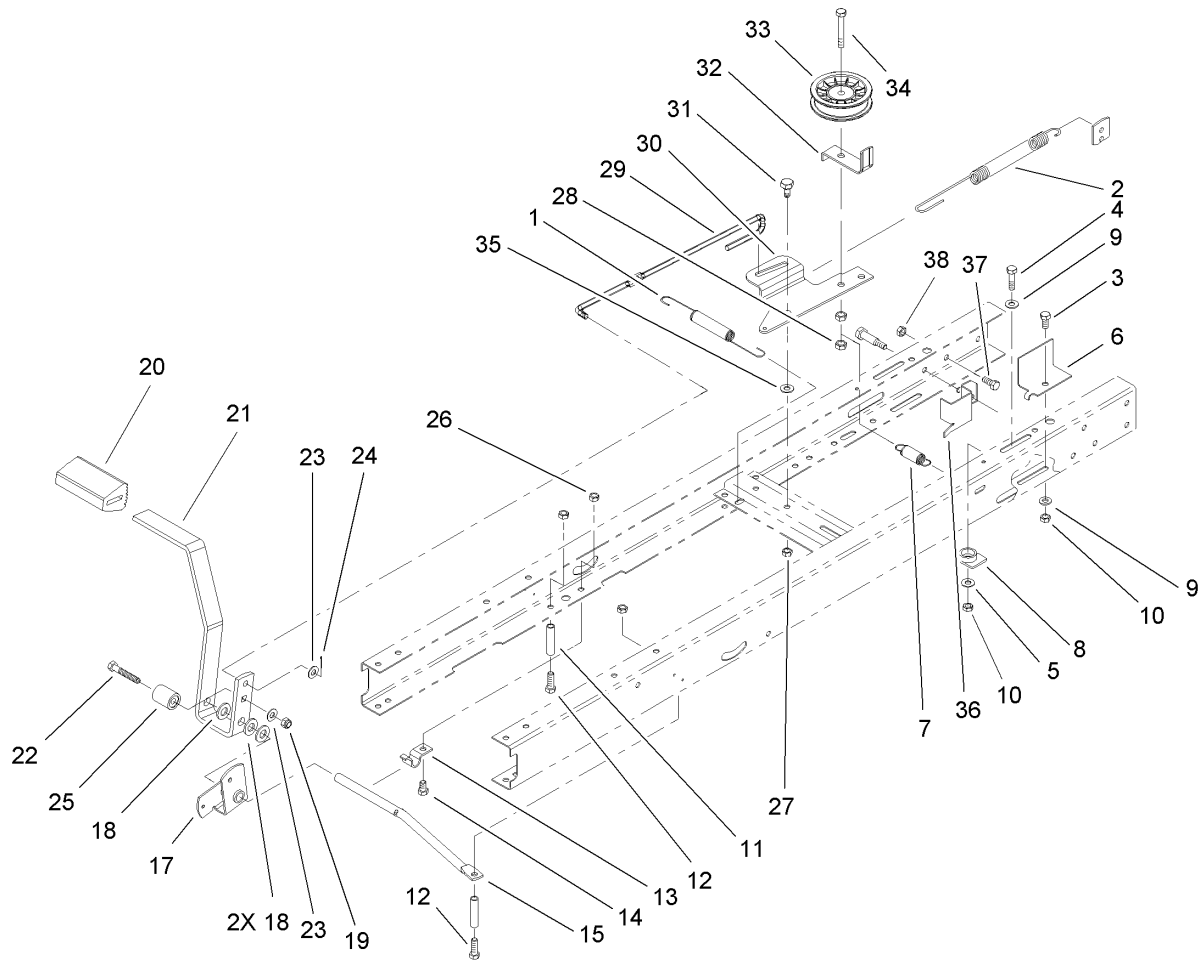

Traction Clutch Assembly


Ref	Part No.	Qty.	Description
1	27-8890	1	Spring-Return
2	94-4295	1	Spring-Brake
3	322-3	1	Screw-HH
4	322-6	1	Screw-HH
5	5-4460	1	Washer-Pivot
6	94-5433	1	Bracket-Belt, Guide
7	88-6330	1	Spring-Extension
8	84-5610	1	Guide-Cable
9	3256-23	2	Washer-Flat
10	3296-29	2	Nut-Lock, NI
11	46-5590	2	Tubing-Spacer
12	322-12	2	Screw-HH
13	88-4810	1	Clamp-Shift, Pivot
14	322-3	1	Screw-HH
15	88-5500	1	Rod-Pedal, Pivot
17	88-4800-03	1	Bellcrank
18	3256-26	3	Washer-Flat
19	3296-47	1	Nut-Lock, NI
20	65-2920	1	Pad-Pedal
21	88-5000-03	1	Pedal-Clutch / Brake
22	322-9	1	Screw-HH
23	3256-23	2	Washer-Flat
24	3272-10	1	Pin-Cotter
25	99-6836	1	Spacer-Plastic

Ref	Part No.	Qty.	Description
26	3296-29	3	Nut-Lock, NI
27	3296-29	1	Nut-Lock, NI
28	3296-59	2	Nut-Lock, NI
29	88-5270	1	Rod-Clutch / Brake
30	88-6070	1	Arm-Idler
31	37-8770	1	Bolt-Shoulder
32	88-5560	1	Guide-Idler, Belt
33	104-4160	1	Pulley-Idler
34	323-10	1	Screw-HH
35	5-4460	1	Washer-Pivot
36	94-4926	1	Bracket-Belt, Guide
37	322-3	1	Screw-HH
38	3296-29	1	Nut-Lock, NI

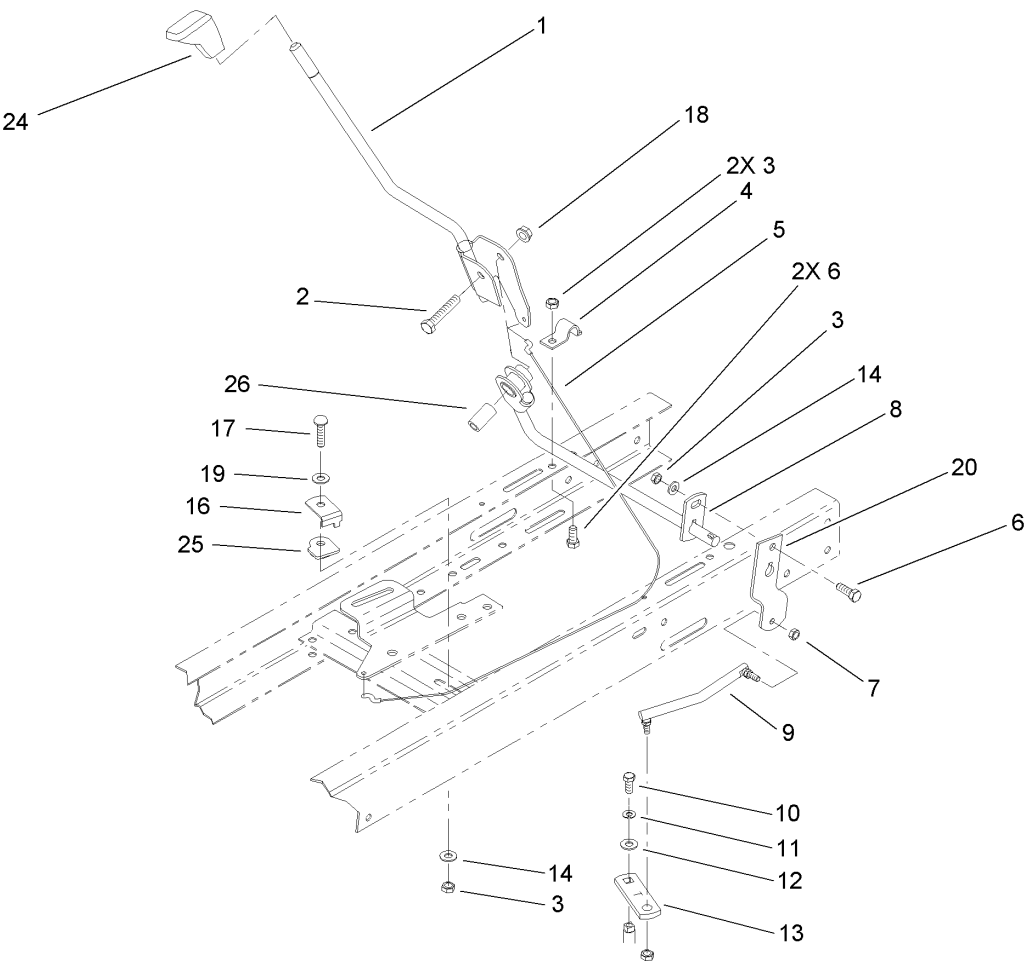


Shifter Assembly

Ref	Part No.	Qty.	Description				
1	94-1991-03	1	Lever-Shift ASM				
2	323-10	1	Screw-HH				
3	3296-29	4	Nut-Lock, NI				
4	88-4810	2	Clamp-Shift, Pivot				
5	55-9321	1	Cable-Clutch				
6	322-3	3	Screw-HH				
7	3296-3	2	Nut-Lock				
8	94-1993-03	1	Shift Pivot ASM				
9	94-5432	1	Link-Shift				
10	329-23	1	Screw-HH				
11	3253-3	1	Washer-Lock				
12	7-5461	1	Spacer				
13	88-5340	1	Lever-Shift				
14	3256-23	2	Washer-Flat				
16	88-5930	1	Keeper-Cable				
17	3230-3	1	Screw-CARR				
18	3296-39	1	Nut-Lock, NI				
19	3256-25	1	Washer-Flat				
20	94-1968	1	Lever-Shift Pivot				
24	94-5565	1	Knob-Shift				
25	84-5610	1	Guide-Cable				
26	94-1997	1	Bushing-Shift, Lever				

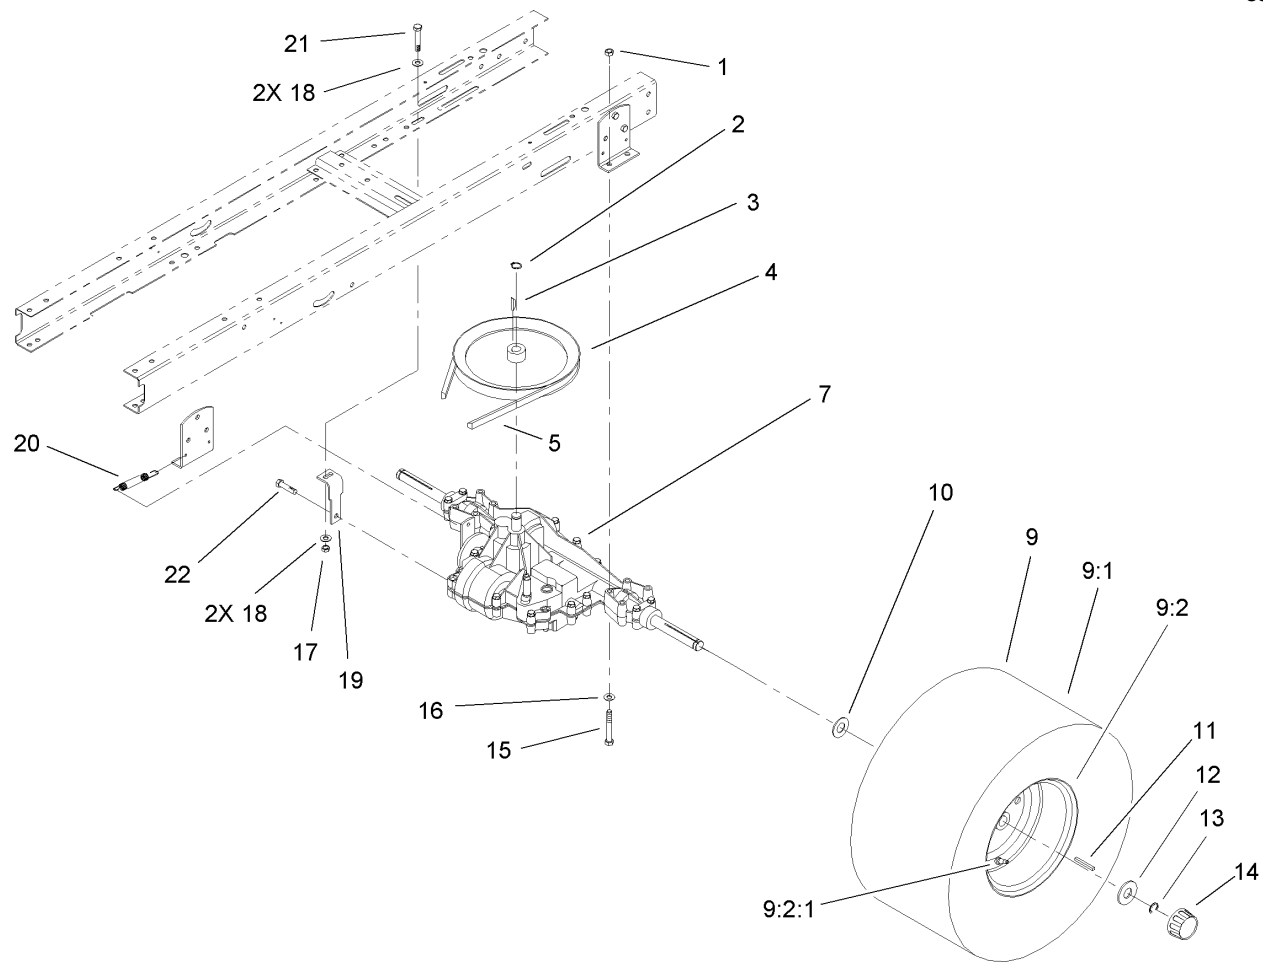


5 Speed Transaxle Assembly

Ref	Part No.	Qty.	Description				
1	3296-29	4	Nut-Lock, NI				
2	32120-64	1	Ring-Snap, External				
3	3257-23	1	Key-Woodruff				
4	88-4840	1	Pulley-Transmission				
5	94-4291	1	V-Belt, Traction				
7	94-6022	1	Transaxle				
29		2	Rear Wheel And Tire ASM				
9:1	99-2336	1	Tire				
9:2	88-4380	1	Rim ASM				
9:2:1	232-27	1	Stem-Valve				
9:99	231-91	1	Tube				
10	3-6498	2	Washer-Thrust				
11	7-0036	2	Key-Square				
12	28-2480	2	Washer				
13	32151-48	2	E-Ring				
14	61-9780	2	Cap-Hub				
15	322-12	4	Screw-HH				
16	3256-23	4	Washer-Flat				
17	3296-29	2	Nut-Lock, NI				
18	3256-23	4	Washer-Flat				
19	94-1969	2	Strap-Torque				
20	26-6701	1	Spring-Brake Return				
21	322-3	2	Screw-HH				
22	32144-14	2	Screw-HWH				

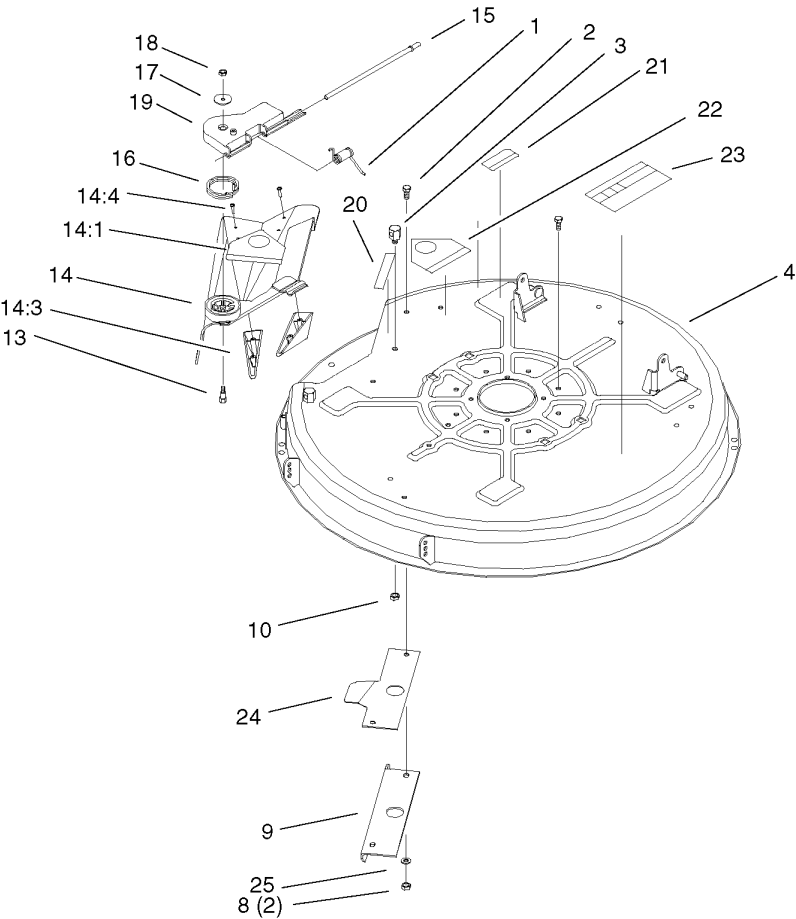


32in Deck Assembly

Ref	Part No.	Qty.	Description				
1	92-2493	1	Spring				
2	322-3	2	Screw-HH				
3	28-7350	1	Post-Pivot				
4	95-7482	1	Deck ASM				
8	3296-29	2	Nut-Lock, NI				
9	44-5720-03	1	Baffle-Deck				
10	3296-59	1	Nut-Lock, NI				
13	92-8916	1	Bolt-Shoulder				
14	100-6200	1	32in Deflector ASM				
14:1	93-1122	1	Decal-Danger				
14:3	93-7696	2	Kicker				
14:4	93-0231	4	Screw-PPH				
15	88-6150	1	Rod-Deflector Hinge				
16	88-6160	1	Spring-Torsion				
17	3256-58	1	Washer-Flat				
18	3296-42	1	Nut-Lock, NI				
19	88-4540	1	Pivot-Hinge Deflector				
20	68-3650	1	Decal-Danger, Deflector				
21	55-4300	2	Decal-Warning				
22	93-1122	1	Decal-Danger				
23	66-1340	1	Decal-Danger				
24	92-2494-03	1	Ramp-Deflector				
25	3256-23	2	Washer-Flat				

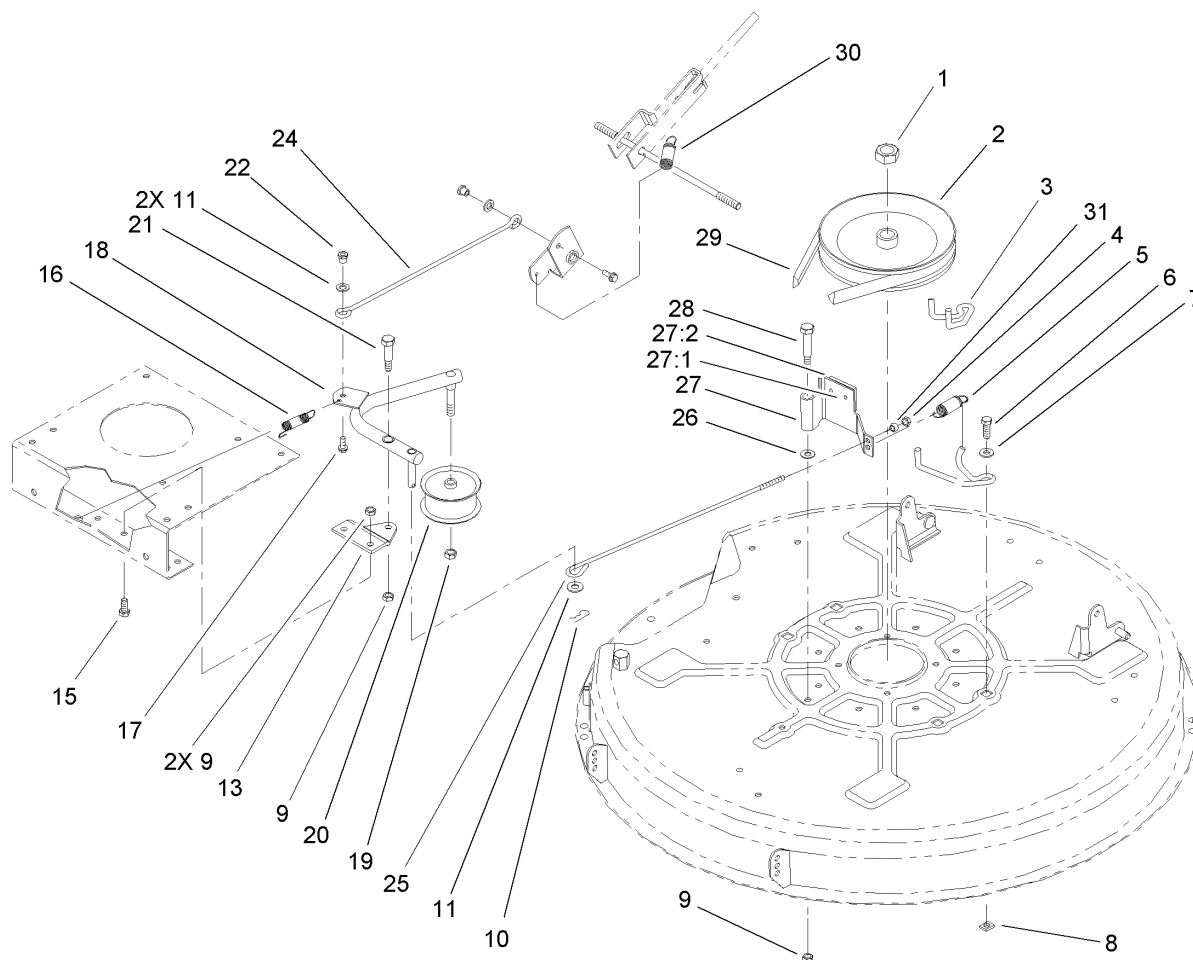


32in Deck Blade Drive / Brake Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex	27:1	3290-282	2	Rivet-Pop
2	88-5060	1	Pulley-Deck	27:2	56-9830	1	Pad-Brake
3	88-5760	2	Guide-Deck Belt	28	88-4590	1	Bolt-Shoulder
4	3296-42	1	Nut-Lock, NI	29	88-6260	1	V-Belt
5	88-6330	1	Spring-Extension	30	88-6420	1	Spring-Cable ASM
6	322-5	2	Screw-HH	31	67-0710	1	Ball-Swivel, Stop
7	5-4460	2	Washer-Pivot				
8	3290-496	2	Nut-Retainer				
9	3296-29	4	Nut-Lock, NI				
10	3290-307	1	Pin-Hair				
11	3256-24	3	Washer-Flat				
13	88-5370-03	1	Plate-Idler Mounting				
15	322-3	2	Screw-HH				
16	26-6700	1	Spring-Brake Return				
17	3234-13	2	Screw-HHF				
18	88-5850-03	1	Arm-Idler ASM				
19	3296-39	1	Nut-Lock, NI				
20	56-9870	1	Pulley-Idler				
21	7-0030	1	Bolt-Shoulder				
22	47-4990	2	Post-Mounting, Linkage				
24	88-5980	1	Rod-Deck Engage				
25	88-5690	1	Rod-Deck Brake				
26	3256-23	1	Washer-Flat				
27	88-6110	1	Brake Arm ASM				

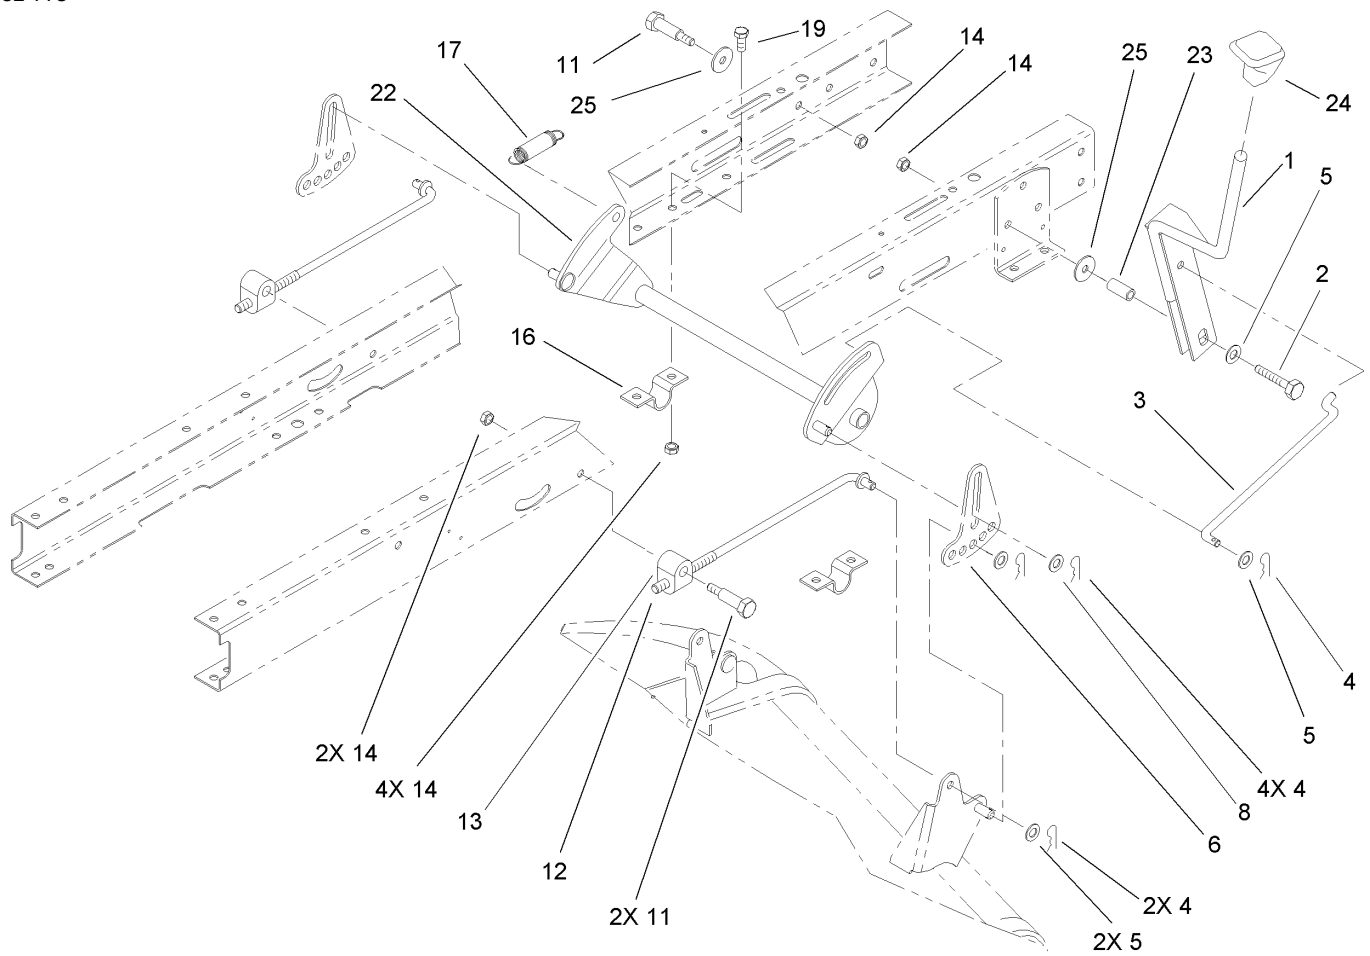

Height-of-Cut Assembly


Ref	Part No.	Qty.	Description				
1	93-3822-03	1	Lever ASM				
2	322-32	1	Screw-HH				
3	88-5900	1	Link-HOC				
4	3290-307	7	Pin-Hair				
5	3256-24	4	Washer-Flat				
6	88-5570-03	2	Link-Adjusting, HOC				
8	80-6990	4	Washer-Hardened				
11	7-0030	3	Bolt-Shoulder				
12	88-5450	2	Rod-Hanger, Rear				
13	88-4230	2	Trunnion-HOC				
14	3296-29	8	Nut-Lock, NI				
16	88-4730	2	Clamp-Hoc, Pivot				
17	88-6460	1	Spring-Extension				
19	322-3	4	Screw-HH				
22	88-5110-03	1	Pivot ASM				
23	65-7210	1	Spacer				
24	94-5565	1	Knob-Shift				
25	5-4460	2	Washer-Pivot				

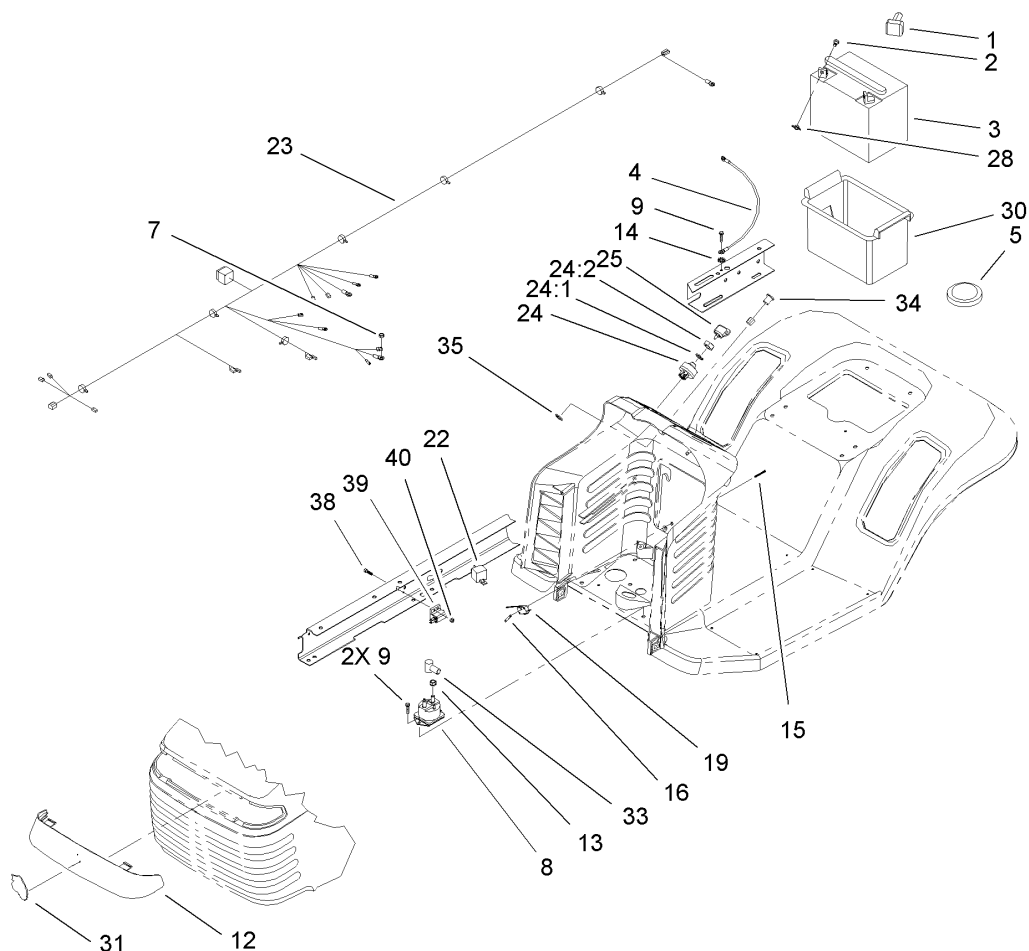

Electrical Component Assembly


Ref	Part No.	Qty.	Description
1	28-8080	1	Boot-Terminal
2	321-4	2	Screw-HH
3	104-1755	1	Battery
4	44-8110	1	Wire ASM
5	100-3524	1	Switch-Seat
7	32149-2	1	Nut-Keps
8	106-8245	1	Solenoid
9	9266714	3	Screw-HWH
12	88-3960	1	Lens-Headlight
13	32149-2	2	Nut-Keps
14	3255-7	2	Washer-Lock/ext
15	93-0539	2	Screw-HH
16	3290-354	1	Nut-Speed
19	88-9932	1	Switch-Micro
22	98-7249	1	Relay
23	106-6434	1	Wire Harness-Gear
24	88-9830	1	Key Switch ASM
24:1	3254-5	1	Washer-Tooth
24:2	218-461	1	Nut-HH
25	63-8360	1	Key-Ignition
28	32103-22	2	Nut-Wing
30	88-4040	1	Box-Battery
31	95-4248	1	Decal
33	93-3190	1	Boot-Insulator, Terminal

Ref	Part No.	Qty.	Description
34	95-7652	1	Light-Indicator
35	99-6059	1	Clip-Retainer
38	3274-14	2	Screw-HSH
39	65-7410	1	Switch-Pole, Single
40	3296-2	2	Nut-Lock

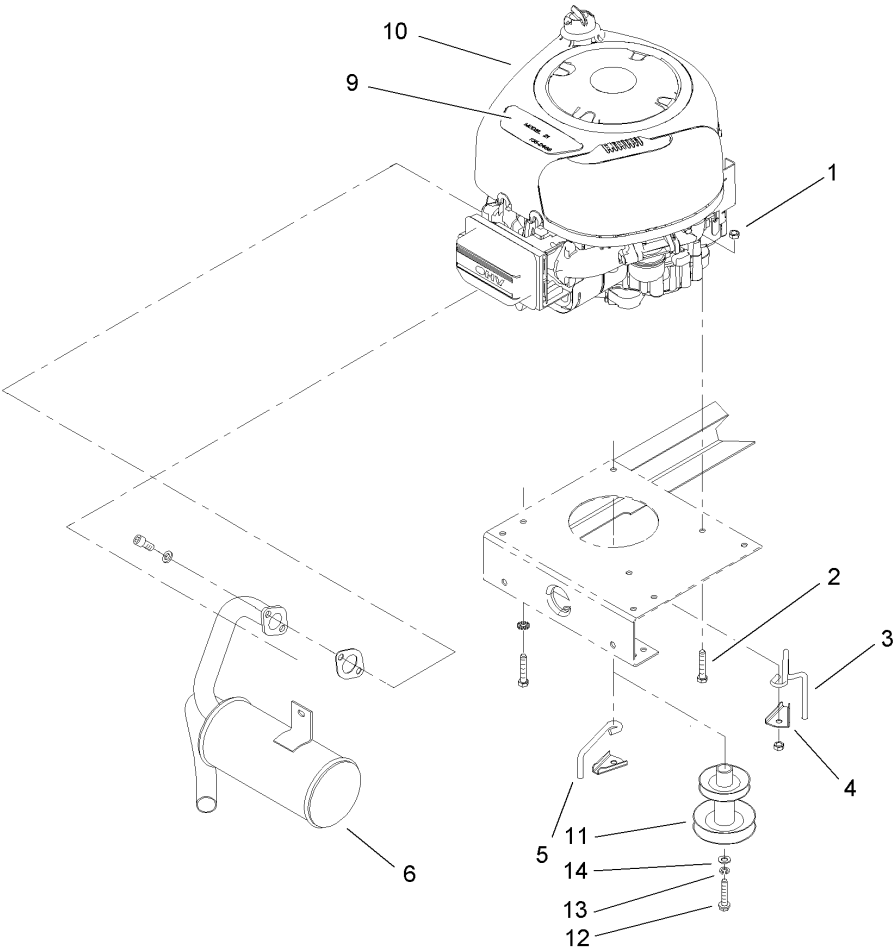

Engine Assembly


Ref	Part No.	Qty.	Description				
1	3296-29	3	Nut-Lock, NI				
2	322-9	4	Screw-HH				
3	88-6060	1	Guide-LH Belt				
4	76-3820	2	Anchor-Guide, Belt				
5	88-5490	1	Guide-Belt RH				
6	105-2461	1	Muffler-Exhaust				
9	107-4903	1	Decal-Engine, l/c				
10		1	Engine-Briggs & Stratton, 219907-0170-E1				
11	88-5050	1	Pulley-Engine				
12	62-3760	1	Screw-HH				
13	3253-22	1	Washer-Lock				
14	3256-25	1	Washer-Flat				

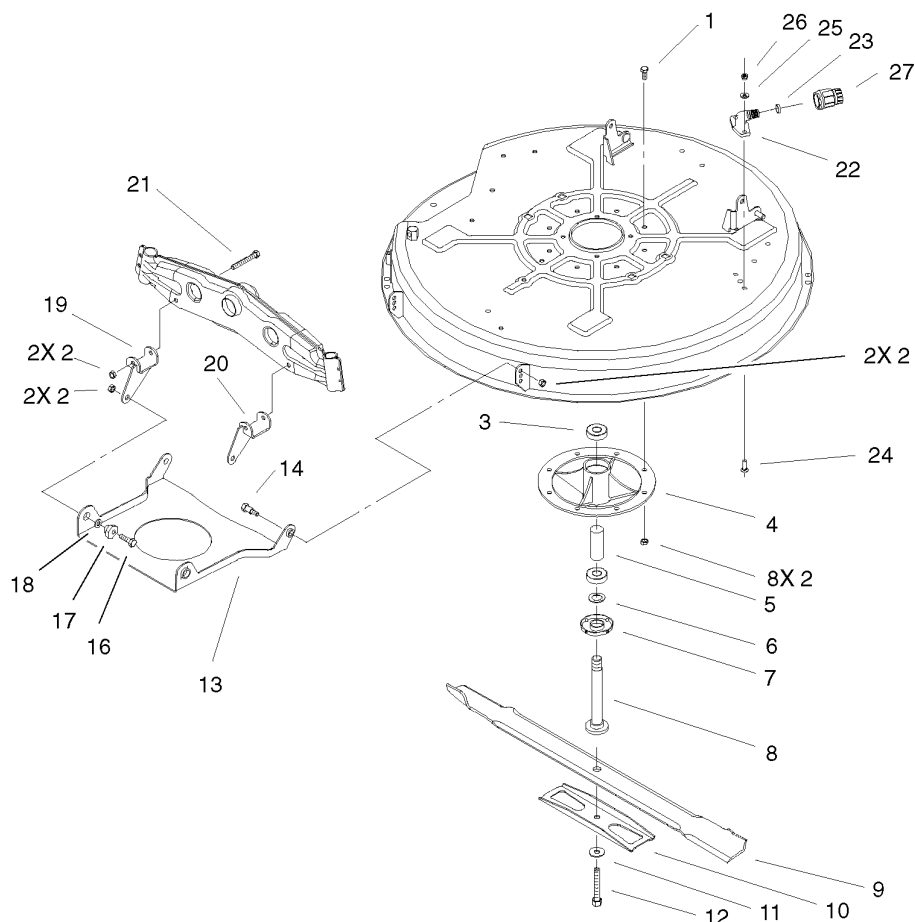

32in Deck and Baffle Assembly

Ref	Part No.	Qty.	Description
1	322-3	8	Screw-HH
2	3296-29	14	Nut-Lock, NI
3	251-297	2	Bearing-Ball
4	56-7030	1	Spindle
5	83-7020	1	Spacer-Bearing
6	80-4390	1	Spacer-Hardned
7	80-4370	1	Shield-Bearing
8	80-4350	1	Shaft-Spindle
9	33-4750-03	1	Blade
10	80-4570-03	1	Stiffener
11	3290-465	1	Washer-Belleville
12	26-0671	1	Screw-Blade
13	88-4940-03	1	Suspension-Pan, Front
14	28-0540	2	Bolt-Shoulder
16	322-6	2	Screw-HH
17	106661	2	Cam
18	3256-23	2	Washer-Flat
19	88-5640-03	1	Bracket RH ASM
20	88-5650-03	1	Bracket LH ASM
21	322-12	2	Screw-HH
22	95-2747	1	Fitting-Washout
23	46-6290	1	O-Ring
24	3229-1	2	Screw-CARR
25	3256-1	2	Washer-Flat


Ref	Part No.	Qty.	Description
26	3296-16	2	Nut-Lock, NI
27	95-3270	1	Connector-Hose

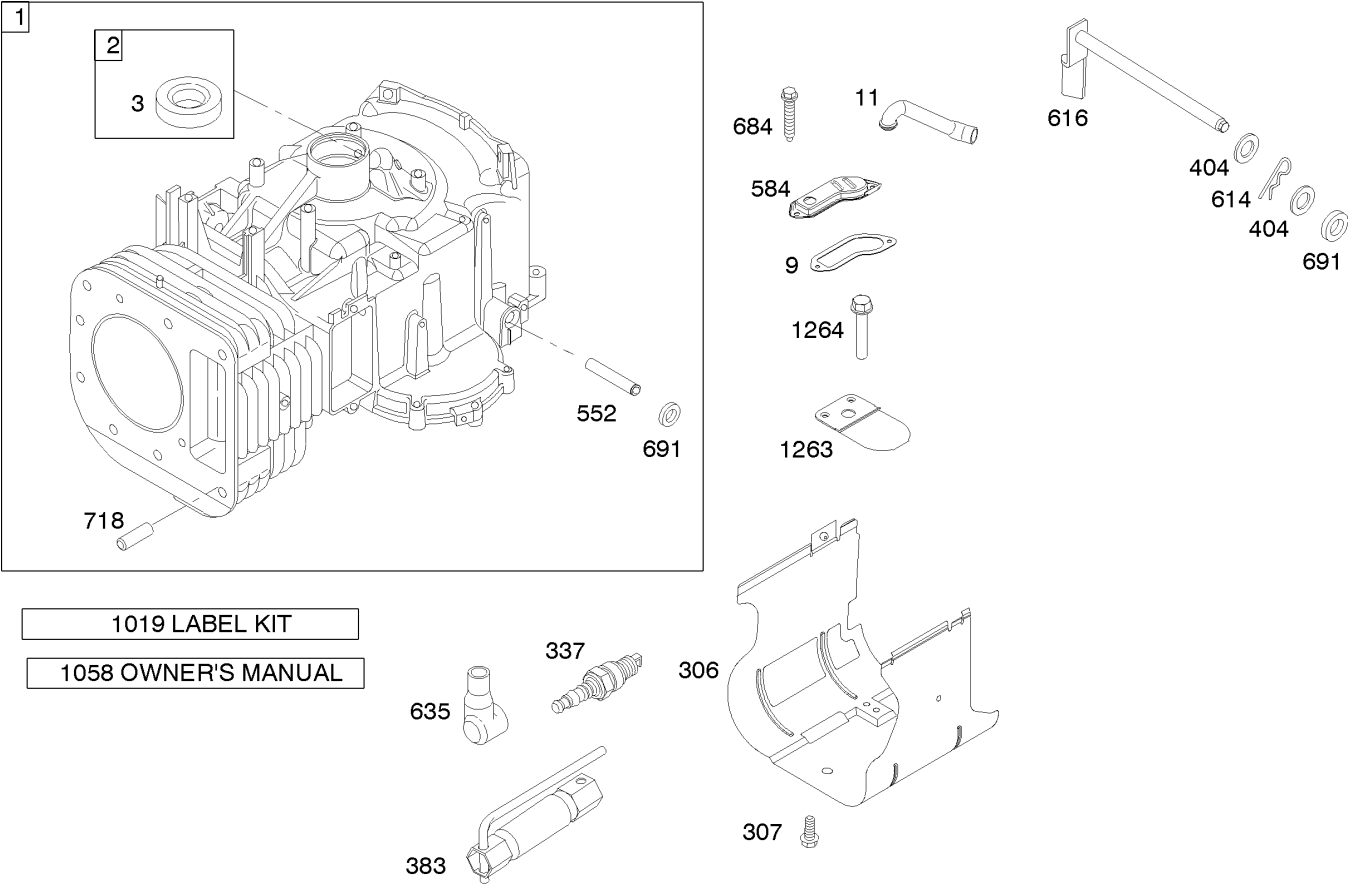

Assemblies include all parts shown in frames.

Cylinder Assembly
Briggs and Stratton 219907-0170-E1


Ref	Part No.	Qty.	Description				
1	697377	1	Cylinder ASM				
2	399265	1	Bushing / Seal Kit				
3	391086	1	Seal-Oil				
9	697109	1	Gasket-Breather				
11	697113	1	Tube-Breather				
306	697359	1	Shield-Cylinder				
307	691003	1	Screw				
337	491055	1	Plug-Spark				
383	89838	1	Wrench-Spark Plug				
404	691691	1	Washer				
552	697144	1	Bushing-Crank, Governor				
584	697112	1	Cover-Passage, Breather				
614	691620	1	Pin-Cotter				
616	692012	1	Crank-Governor				
635	691909	1	Boot-Plug, Spark				
684	697157	1	Screw				
691	692407	1	Seal-Shaft, Governor				
718	690959	1	Pin-Locating				
1019	697143	1	Label Kit				
1058	275038	1	Owner's Manual				
1263	697124	1	Reed-Breather				
1264	697104	1	Screw				

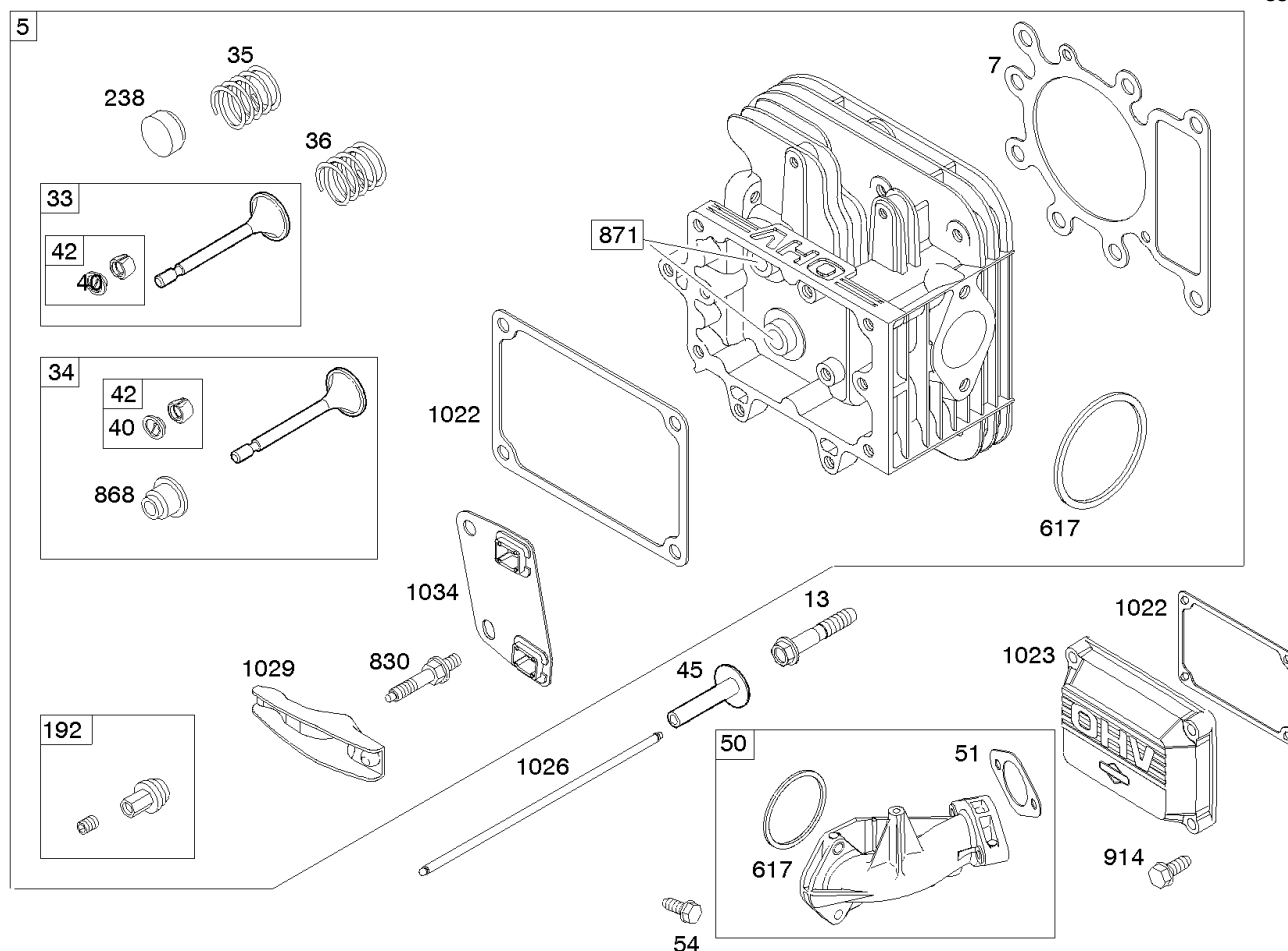

Cylinder Head Assembly Briggs and Stratton 219907-0170-E1

Ref	Part No.	Qty.	Description
5	697396	1	Head-Cylinder
3 4 7	273280	1	Gasket-Head, Cylinder
6			
6 13	690360	1	Screw
6 33	695760	1	Valve-Exhaust
6 34	695761	1	Valve-Intake
6 35	691279	1	Spring-Valve
6 36	691279	1	Spring-Valve
6 40	690964	1	Retainer-Valve
6 42	499586	1	Keeper-Valve
6 45	690564	1	Tappet-Valve
6 50	697361	1	Manifold-Intake
3 4 51	692137	1	Gasket-Intake
5 6			
6 54	691148	1	Screw
6 192	691986	1	Adjustor-Arm, Rocker
6 238	691843	1	Cap-Valve
3 5 617	692138	1	Seal-O Ring
6			
6 830	691095	1	Stud-Arm, Rocker
3 4 868	690968	1	Seal-Valve
6			
6 871	690969	1	Bushing-Valve Guide
6 914	690960	1	Screw
3 4 1022	272475	1	Gasket-Cover, Rocker
6			

Ref	Part No.	Qty.	Description
6 1023	692492	1	Cover-Rocker
6 1026	697394	1	Rod-Push (Intake)
6	697395	1	Rod-Push (Exhaust)
6 1029	691751	1	Arm-Rocker
6 1034	690822	1	Guide-Rod, Push

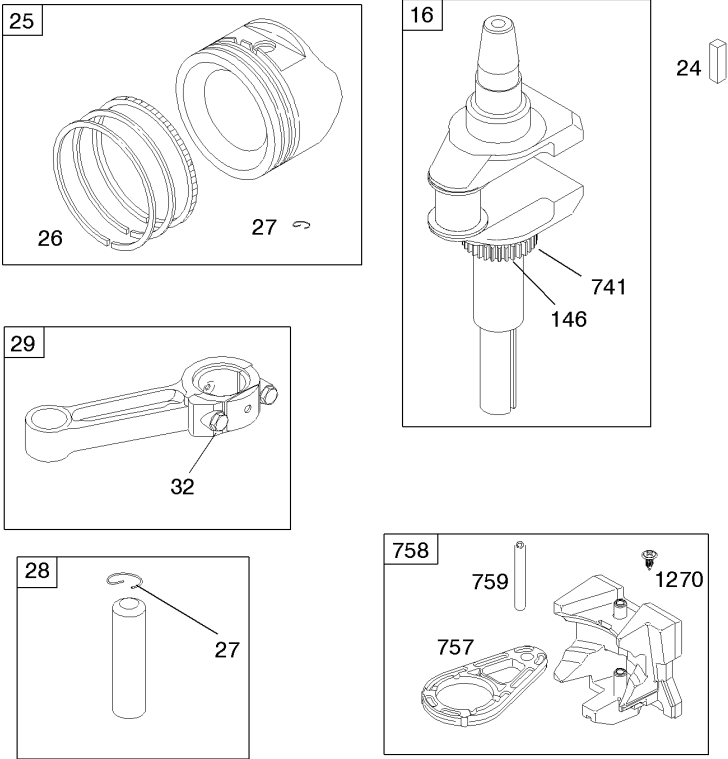


Assemblies include all parts shown in frames.

Crankshaft Assembly

Briggs and Stratton 219907-0170-E1

Ref	Part No.	Qty.	Description				
16	697390	1	Crankshaft				
24	222698	1	Key-Flywheel				
25	698371	1	Piston ASM (Standard)				
25	698373	1	Piston ASM (.020in Oversize)				
26	698375	1	Ring Set (Standard)				
26	698377	1	Ring Set (.020in Oversize)				
27	698469	1	Lock-Pin, Piston				
28	697099	1	Pin-Piston (Standard)				
29	697364	1	Rod-Connecting (Standard)				
32	692852	1	Screw				
146	691639	1	Key-Timing				
741	697128	1	Gear-Timing				
757	697607	1	Link-Counterweight				
758	697391	1	Counterweight				
759	697392	1	Pin-Counterweight				
1270	697156	1	Plug-Counterweight, Avs				


48 SHORT BLOCK

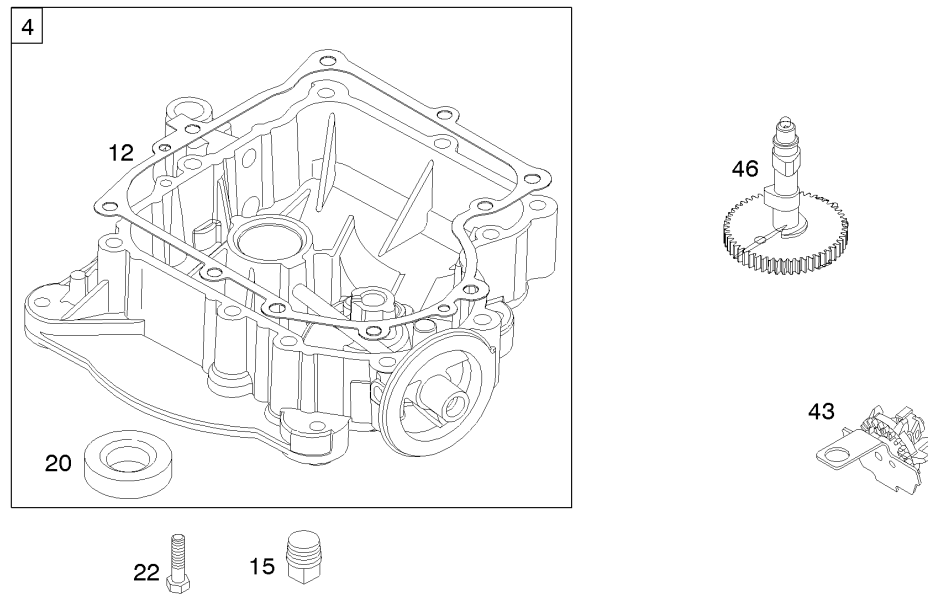

Assemblies include all parts shown in frames.

Crankcase Assembly
Briggs and Stratton 219907-0170-E1


Ref	Part No.	Qty.	Description				
⑥4	697106	1	Sump-Engine				
③⑥12	697110	1	Gasket-Crankcase				
⑥15	690946	1	Plug-Drain, Oil				
③⑥20	690947	1	Seal-Oil				
⑥22	692125	1	Screw				
⑥43	691968	1	Slinger-Governor / Oil				
⑥46	699016	1	Camshaft				
⑥48	697740	1	Short Block				

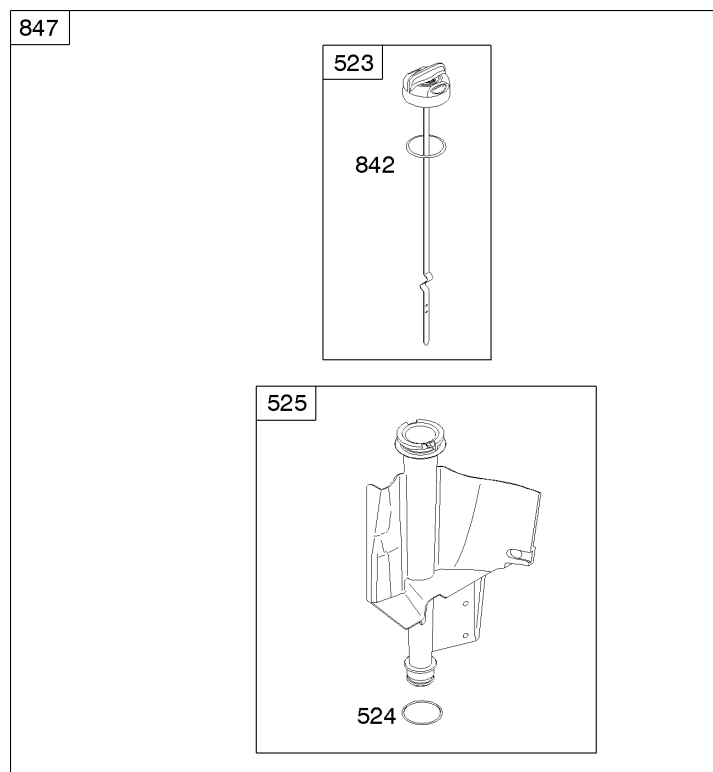

Assemblies include all parts shown in frames.

Oil Filter, Tube and Pump Assembly Briggs and Stratton 219907-0170-E1

Ref	Part No.	Qty.	Description
523	697086	1	Dipstick
524	691032	1	Seal-O Ring
525	697184	1	Tube-Dipstick
5842	691031	1	Seal-O Ring Seal
5847	697611	1	Dipstick And Tube ASM

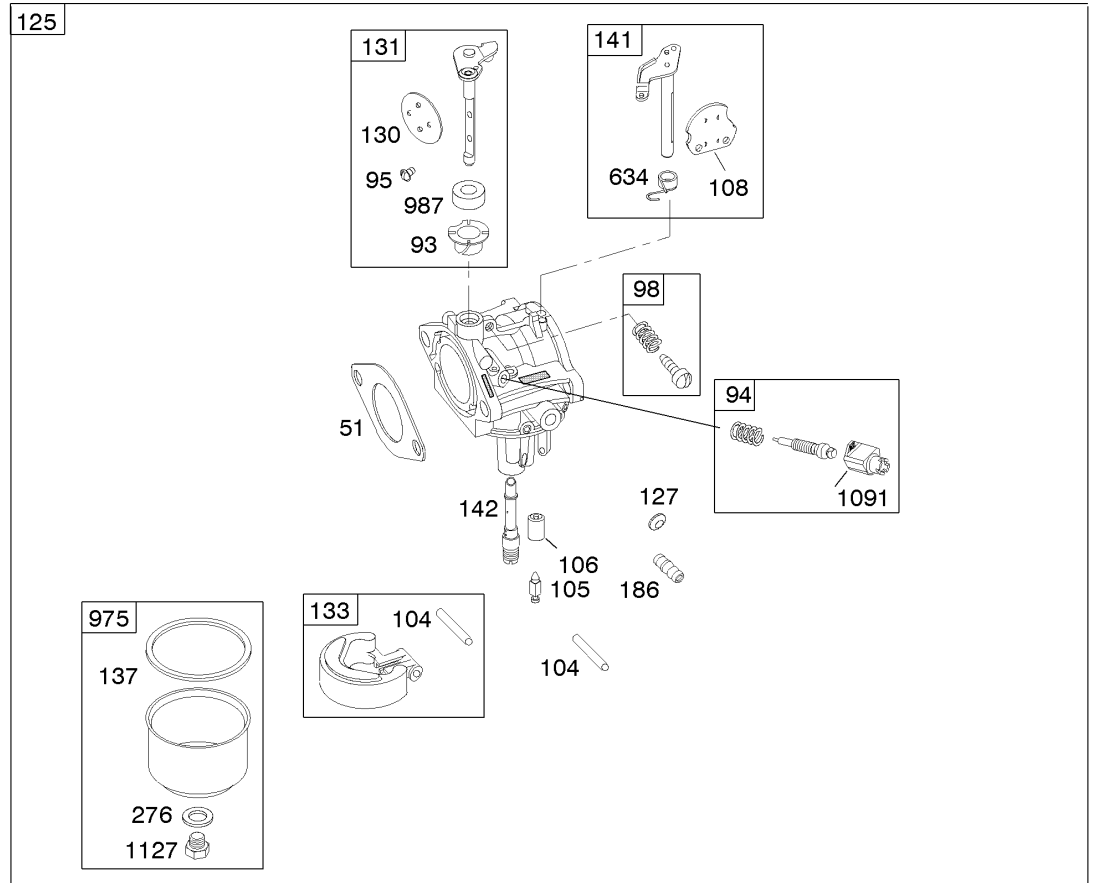


Assemblies include all parts shown in frames.

Carburetor Assembly

Briggs and Stratton 219907-0170-E1

Ref	Part No.	Qty.	Description
⑤ ④ 51	692137	0	Gasket-Intake
⑤ ⑥			
⑥ 53	690227	1	Stud
⑤ ⑥ 93	60602	1	Bushing-Throttle Shaft
⑥ 94	498030	1	Idle Mixture Kit
⑤ ⑥ 95	691636	1	Screw
⑥ 98	495800	1	Idle Speed Kit
⑤ ⑥ 104	690525	1	Pin-Hinge, Float
⑤ ⑥ 105	231855	1	Valve-Needle, Float
⑤ ⑥ 106	690577	1	Seat-Inlet
⑥ 108	691227	1	Valve-Choke (Manual Choke)
⑥ 125	790019	1	Carburetor
⑤ ⑥ 127	694524	1	Plug-Welch
⑥ 130	698774	1	Valve-Throttle
⑥ 131	790175	1	Throttle Shaft Kit
⑥ 133	494381	1	Float-Carburetor
⑤ ⑥ 137	281165	1	Gasket-Bowl, Float
⑥ 141	699027	1	Choke Shaft Kit (Manual Choke)
⑤ ⑥ 142	790025	1	Nozzle-Carburetor
⑥ 143	790028	1	Nozzle-Carburetor (High Altitude)
⑥ 186	698174	1	Connector-Hose
⑥ 187	699331	1	Line-Fuel (Molded)
⑥ 240	394358	1	Filter-Fuel
⑤ ⑥ 276	692255	1	Washer-Sealing

Ref	Part No.	Qty.	Description
⑥ 601	95162	1	Clamp-Hose
⑥ 634	690802	1	Spring/seal ASM
⑥ 654	690958	1	Nut
⑥ 975	495933	1	Bowl-float
⑤ ⑥ 987	691326	1	Seal-Shaft, Throttle
⑥ 1091	691333	1	Cap-Limiter
⑥ 1127	691657	1	Screw

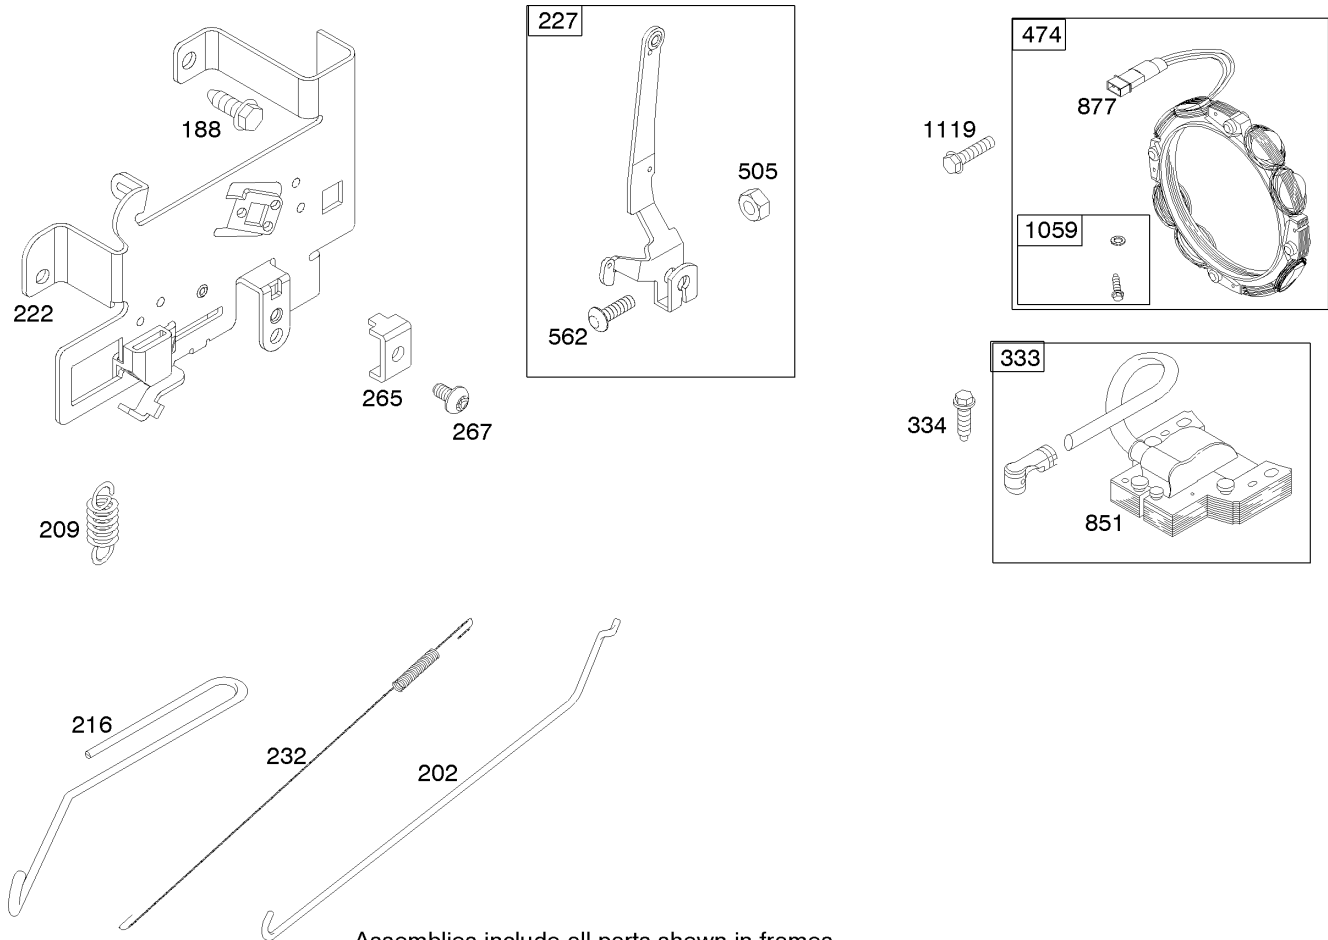


Assemblies include all parts shown in frames.

Governor Assembly

Briggs and Stratton 219907-0170-E1


Ref	Part No.	Qty.	Description				
188	691693	0	Screw				
202	691841	1	Link-Governor, Mechanical				
209	690480	1	Spring-Governor				
216	691840	1	Link-Choke				
222	694042	1	Bracket-Control				
227	691374	1	Lever-Control, Governor				
232	691842	1	Spring-Link, Governor				
265	691024	1	Clamp-Casing				
267	695134	1	Screw				
333	492341	1	Armature-Magneto				
334	691061	1	Screw				
474	696459	1	Alternator				
505	691251	1	Nut				
562	691119	1	Bolt				
851	493880	1	Terminal-Spark Plug				
877	393456	1	Wire-Connector / Alternator				
1119	691183	1	Screw				
1059	698516	1	Screw / Washer Kit				

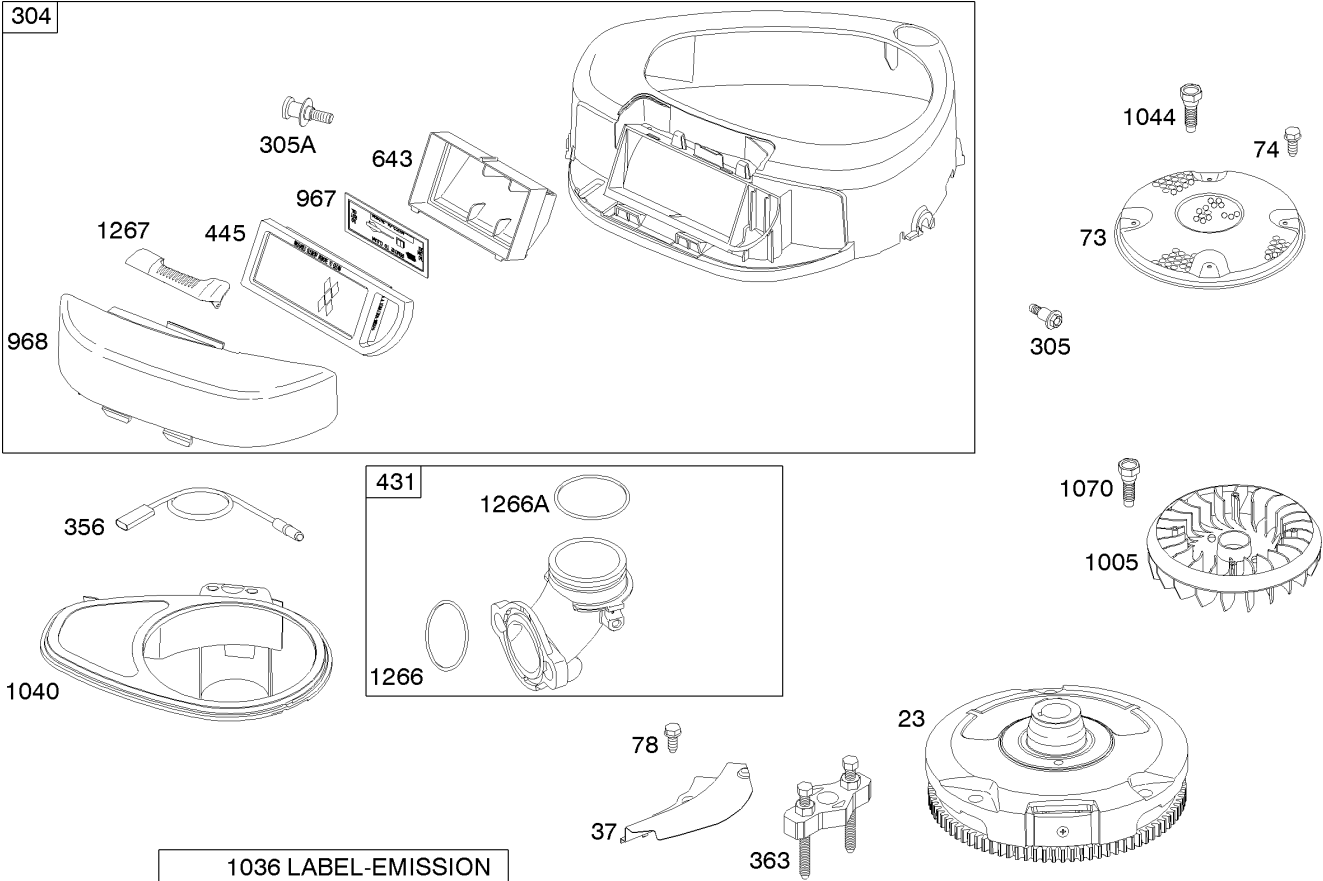

Assemblies include all parts shown in frames.

Blower Housing Assembly
Briggs and Stratton 219907-0170-E1



Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
⑥23	698281	1	Flywheel	③⑤1266A	697123	1	Seal-O Ring
⑥37	697352	1	Guard-Flywheel	⑥			
⑥73	697133	1	Screen-Rotating	⑥1267	697419	1	Latch-Housing, Blower
⑥74	697897	1	Screw				
⑥75	690582	1	Washer-Flywheel				
⑥78	691003	1	Screw				
⑥304	698473	1	Housing-Blower				
⑥305	697102	1	Screw				
⑥305A	697103	1	Screw				
⑥356	690807	1	Wire-Stop				
⑥363	19203	1	Puller-Flywheel				
⑥431	697122	1	Elbow-Intake				
⑥445	698413	1	Retainer-Air Filter				
⑥643	697155	1	Retainer-Air Filter				
⑥967	697292	1	Filter-Pre Cleaner				
⑥968	697420	1	Cover-Air Cleaner				
⑥1005	699044	1	Fan-Flywheel				
⑥1036	697221	1	Decal-Emission				
⑥1040	698368	1	Plate-Trim				
⑥1044	698139	1	Screw				
⑥1070	690372	1	Screw				
③⑤1266	691917	1	Seal-O Ring				
⑥							

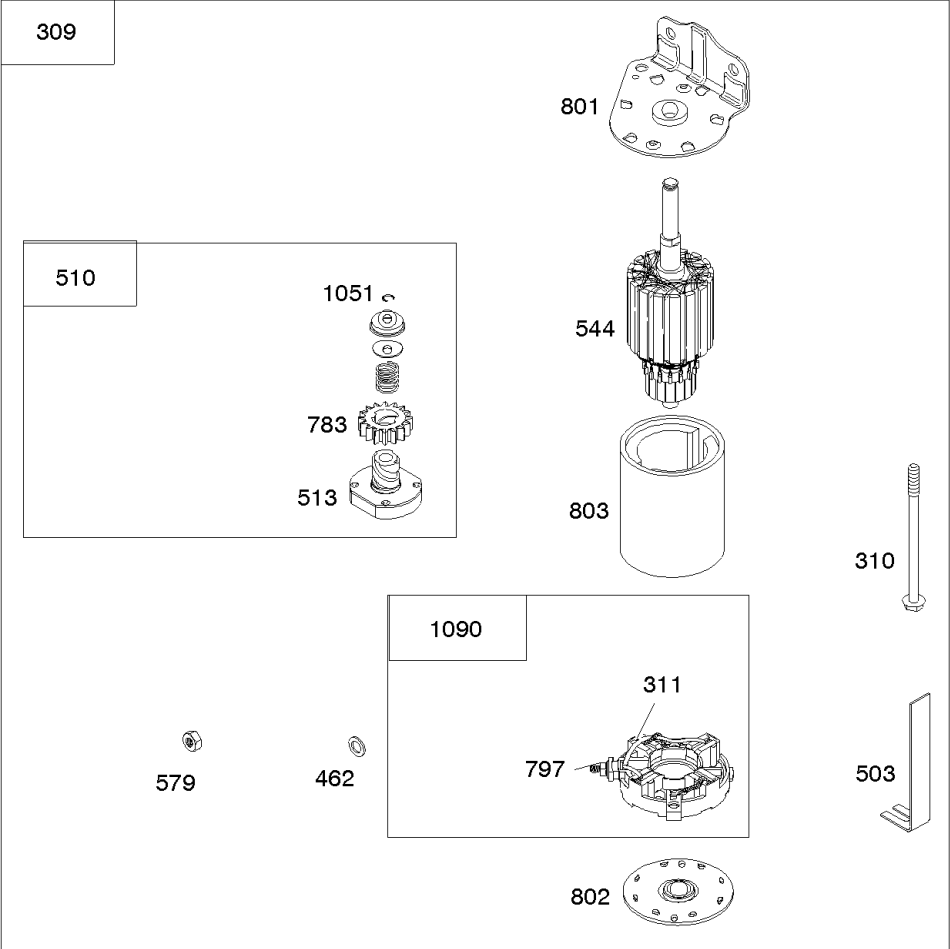

Starter Assembly

Briggs and Stratton 219907-0170-E1


Ref	Part No.	Qty.	Description				
309	693551	1	Motor-Starter				
310	690323	1	Bolt				
311	497608	1	Brush Set				
462	691261	1	Washer				
503	691532	1	Strap-Starter				
510	693699	1	Drive-Starter				
513	692024	1	Clutch-Drive				
544	692034	1	Armature-Starter				
579	691029	1	Nut				
697	690372	1	Screw				
729	691224	1	Clip-Wire				
783	693713	1	Gear-Pinion				
797	693167	1	Nut				
801	691283	1	Cap-Drive				
802	691286	1	Cap-End				
803	693757	1	Housing-Starter				
1051	691265	1	Ring-Retaining				
1090	691293	1	Retainer-Brush				

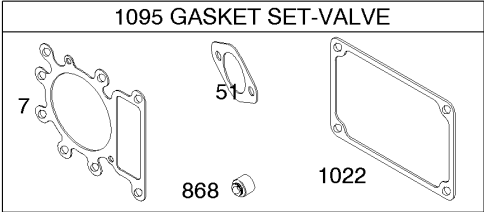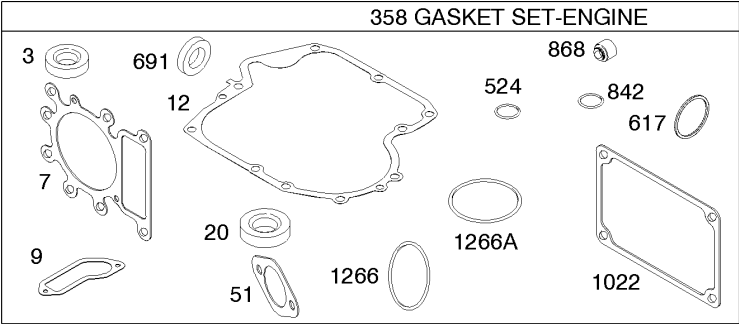

Assemblies include all parts shown in frames.

Gasket Assembly
Briggs and Stratton 219907-0170-E1

Ref	Part No.	Qty.	Description				
3 6 3	391086	1	Seal-Oil				
3 4 7 6	273280	1	Gasket-Head, Cylinder				
3 6 9	697109	1	Gasket-Breather				
3 6 12	697110	1	Gasket-Crankcase				
3 6 20	690947	1	Seal-Oil				
3 4 51 5 6	692137	1	Gasket-Intake				
6 358	697151	1	Engine Gasket Set				
3 4 617 5 6	692138	1	Seal-O Ring				
3 6 524	691032	1	Seal-O Ring				
3 6 691	692407	1	Seal-Shaft, Governor				
3 6 842	691031	1	Seal-O Ring Seal				
3 4 868 6	690968	1	Seal-Valve				
3 4 1022 6	272475	1	Gasket-Cover, Rocker				
6 1095	691581	1	Valve Gasket Set				
3 5 1266 6	691917	1	Seal-O Ring				
3 5 1266A 6	697123	0	Seal-O Ring				

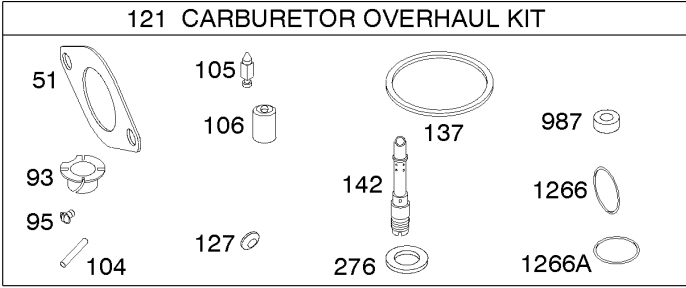

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly
Briggs and Stratton 219907-0170-E1

Ref	Part No.	Qty.	Description				
3451 56	692137	0	Gasket-Intake				
5693	690602	1	Bushing-Shaft, Throttle				
5695	691636	1	Screw				
56104	690525	1	Pin-Hinge, Float				
56105	231855	1	Valve-Needle, Float				
56106	690577	1	Seat-Inlet				
6121	790031	1	Carburetor Overhaul Kit				
56127	694524	1	Plug-Welch				
56137	281165	1	Gasket-Bowl, Float				
56142	790025	1	Nozzle-Carburetor				
56276	692255	1	Washer-Sealing				
55617 6	692138	1	Seal-O Ring				
56987	691326	1	Seal-Shaft, Throttle				
551266 6	691917	0	Seal-O Ring				
551266A 6	697123	1	Seal-O Ring				

Attachments and Accessories

For 71199 - XL 320 Lawn Tractor

Product Name	Model/Part
Tire Chains	47-7220
8in Rear Wheel Weights	59159
32in Recycler Kit	59167
9.0 cu. ft. Twin Bagger	79086
6.0 cu. ft. Easy-Empty Grass Catcher	79096
10 cu. ft. Dump Cart	79901
Sunshade	79913
10 cu. ft. Poly Dump Cart	79935
Folding Loading Ramp	79949
Sweeper	79985
Tractor Rack	79990
Headlight Kit	92-6301
Tower Kit	98-9880

NOTES

NOTES

