



XL 440H Lawn Tractor

Model No. 71286 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame and Body Assembly	 3	Cylinder Head Assembly Briggs and Stratton 31F777-0162-E1	 19
Hood and Tower Assembly	 4	Crankshaft Assembly Briggs and Stratton 31F777-0162-E1	 20
Rear Body and Seat Assembly	 5	Crankcase Assembly Briggs and Stratton 31F777-0162-E1	 21
Steering Assembly	 6	Oil Filter, Tube and Pump Assembly Briggs and Stratton 31F777-0162-E1	 22
Fixed Steering Assembly	 7	Carburetor Assembly Briggs and Stratton 31F777-0162-E1	 23
Engine Assembly	 8	Governor Assembly Briggs and Stratton 31F777-0162-E1	 24
Traction Brake Assembly	 9	Blower Housing Assembly Briggs and Stratton 31F777-0162-E1	 25
Wheel and Tire Assembly	 10	Starter Assembly Briggs and Stratton 31F777-0162-E1	 26
Transaxle Component Assembly	 11	Gasket Assembly Briggs and Stratton 31F777-0162-E1	 27
Side Housing and Bearing Assembly	 12	Carburetor Overhaul Kit Assembly Briggs and Stratton 31F777-0162-E1	 28
Transaxle No. 104-1760	 13	Attachments and Accessories List	 29
Gear Assembly Transaxle No. 104-1760	 14		
Main Housing and Bearing Assembly	 15		
Transaxle No. 104-1760	 16		
Transaxle Installation Assembly	 17		
Height-of-Cut Assembly	 18		
Electrical Assembly			
Cylinder Assembly Briggs and Stratton 31F777-0162-E1			

 
Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. as required	HWHTF. hex washer head thread forming
ASM. assembly	HYD. hydraulic
BBC. blade brake clutch	INC. incorporated
CARR. carriage	LH. left hand
DEG. degrees	NI. nylon insert
EXT. external	NPTF. national pipe thread fine
FH. flat head	PPH. phillips pan head
GA. gauge	PPHTF. phillips pan head thread forming
HF. hex flange	PRH. phillips round head
HH. hex head	PTH. phillips truss head
HHF. hex head flange	PTO. power take off
HHFTF. hex head flange thread forming	RH. right hand
HJ. hex jam	ROPS. roll over protection system
HLH. hex lag head	SFH. slotted fillister head
HOC. height-of-cut	SHH. slotted hex head
HSBH. hex socket button head	SHWH. slotted hex washer head
HSFH. hex socket flat head	SPH. slotted pan head
HSH. hex socket head	SQH. square head
HWH. hex washer head	


Footnotes

- | | |
|---|---|
| ❶ Not illustrated | ❷ Not serviced separately |
| ❸ Included in Engine Gasket Set-Ref. 358. | ❹ Included in Valve Gasket Set-Ref. 1095. |
| ❺ Included in Carburetor Overhaul Kit-Ref. 121. | ❻ Included in Carburetor Gasket Set-Ref. 977. |
| ❼ Obtain from your local Briggs & Stratton dealer | |

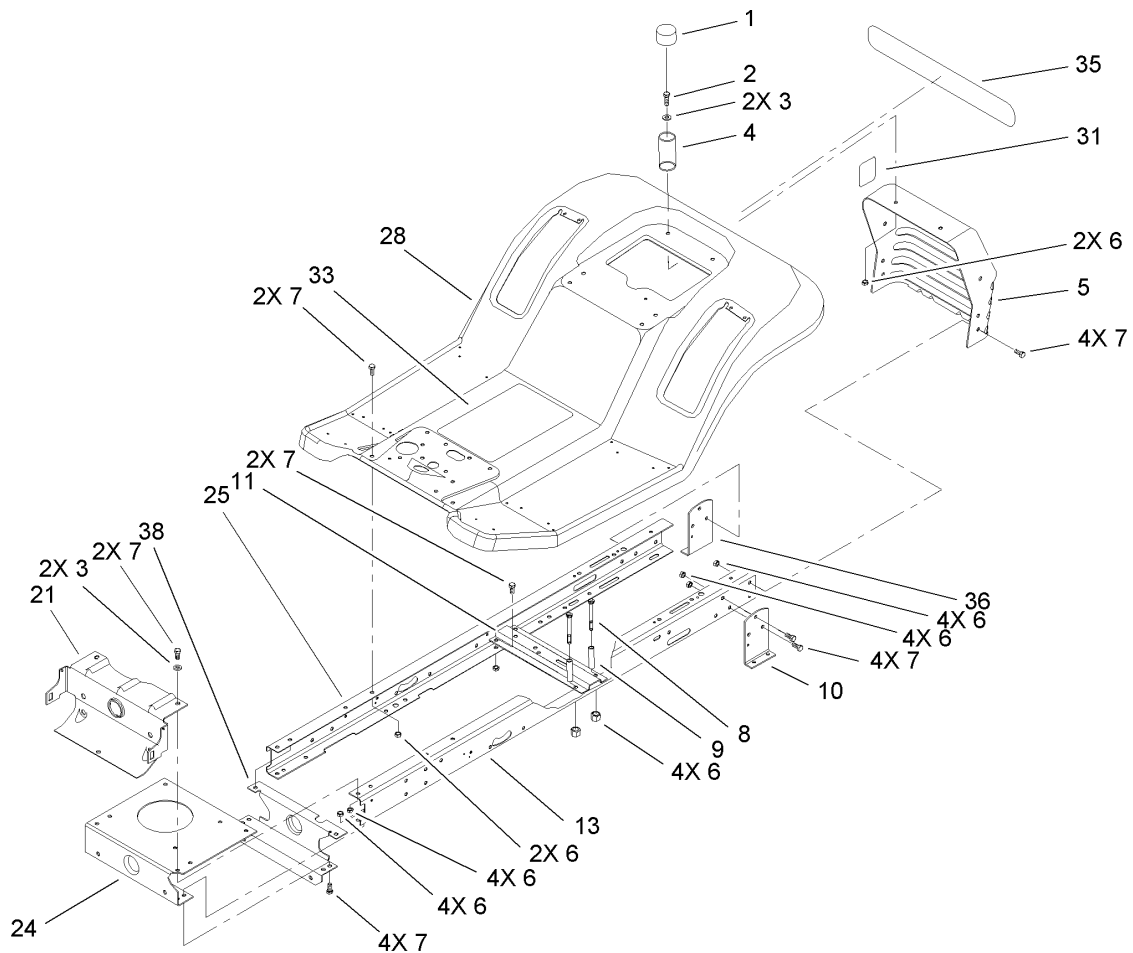

Frame and Body Assembly


Ref	Part No.	Qty.	Description				
1	701178	2	Cap-Protector				
2	322-5	2	Screw-HH				
3	3256-23	4	Washer-Flat				
4	88-6220	2	Spring-Compression				
5	99-2957-03	1	Panel-Rear, Hitch				
6	3296-29	24	Nut-Lock, NI				
7	322-3	20	Screw-HH				
8	322-12	2	Screw-HH				
9	88-5470	2	Spacer-Axle, Front				
10	93-3857-03	1	Bracket-Mounting, LH				
11	88-4620-03	1	Bracket-Idler, Pivot				
13	99-2958-03	1	Rail-Frame, LH				
21	98-3576-03	1	Support-Axle, Front				
24	88-4630-03	1	Plate-Engine, Mounting				
25	99-2959-03	1	Rail-Frame, RH				
28	99-2971	1	Rear Body ASM				
31	100-7449	1	Decal-Valve, Dump				
33	93-6676	1	Decal-Instruction				
35	105-2498	1	Decal-Rear				
36	93-3856-03	1	Bracket-Mounting, RH				
38	93-3831-03	1	Support-Rear				

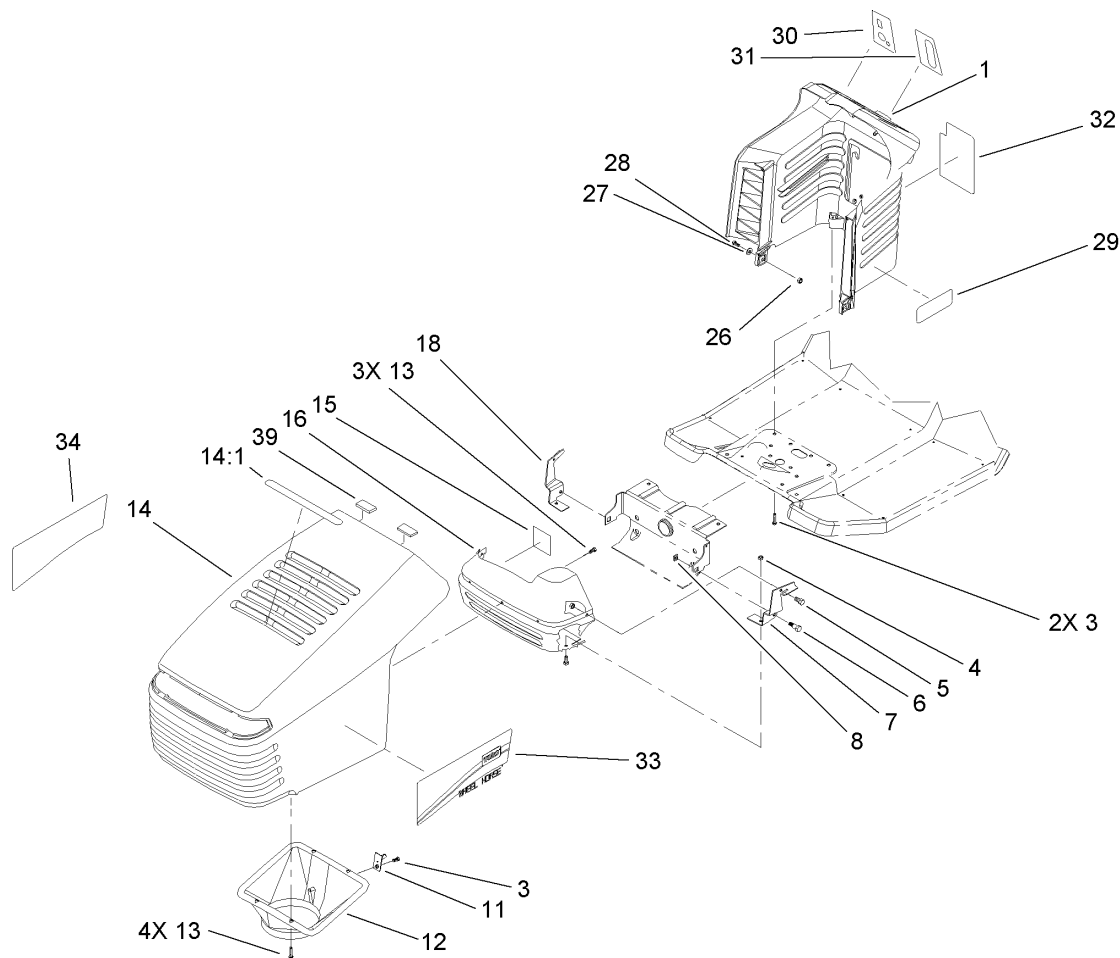 

Hood and Tower Assembly

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
1	107-4920	1	Tower-Steering	39	94-1980	2	Foam-Hood
3	46-8091	3	Screw-HWH				
4	3296-42	4	Nut-Lock, NI				
5	321-2	4	Screw-HH				
6	28-0540	2	Bolt-Shoulder				
7	88-6050-03	1	Bracket-Hinge, LH				
8	3290-496	2	Nut-Retainer				
11	94-1984	1	Latch-Pin				
12	93-3891	1	Duct-Air, Hood				
13	46-8090	7	Screw-Plastite				
14	92-8650	1	Hood ASM				
14:1	92-5748	1	Decal				
15	92-5782	3	Tape-Foil				
16	93-3864-03	1	Shield-Heat				
18	88-6040-03	1	Bracket-Hinge, RH				
26	3296-29	2	Nut-Lock, NI				
27	3256-23	2	Washer-Flat				
28	322-3	2	Screw-HH				
29	108-7805	2	Decal				
30	99-8141	1	Decal-Ignition				
31	92-5730	1	Decal-Throttle				
32	107-4922	1	Decal-Danger				
33	105-2497	1	Decal				
34	105-2496	1	Decal				

 
5

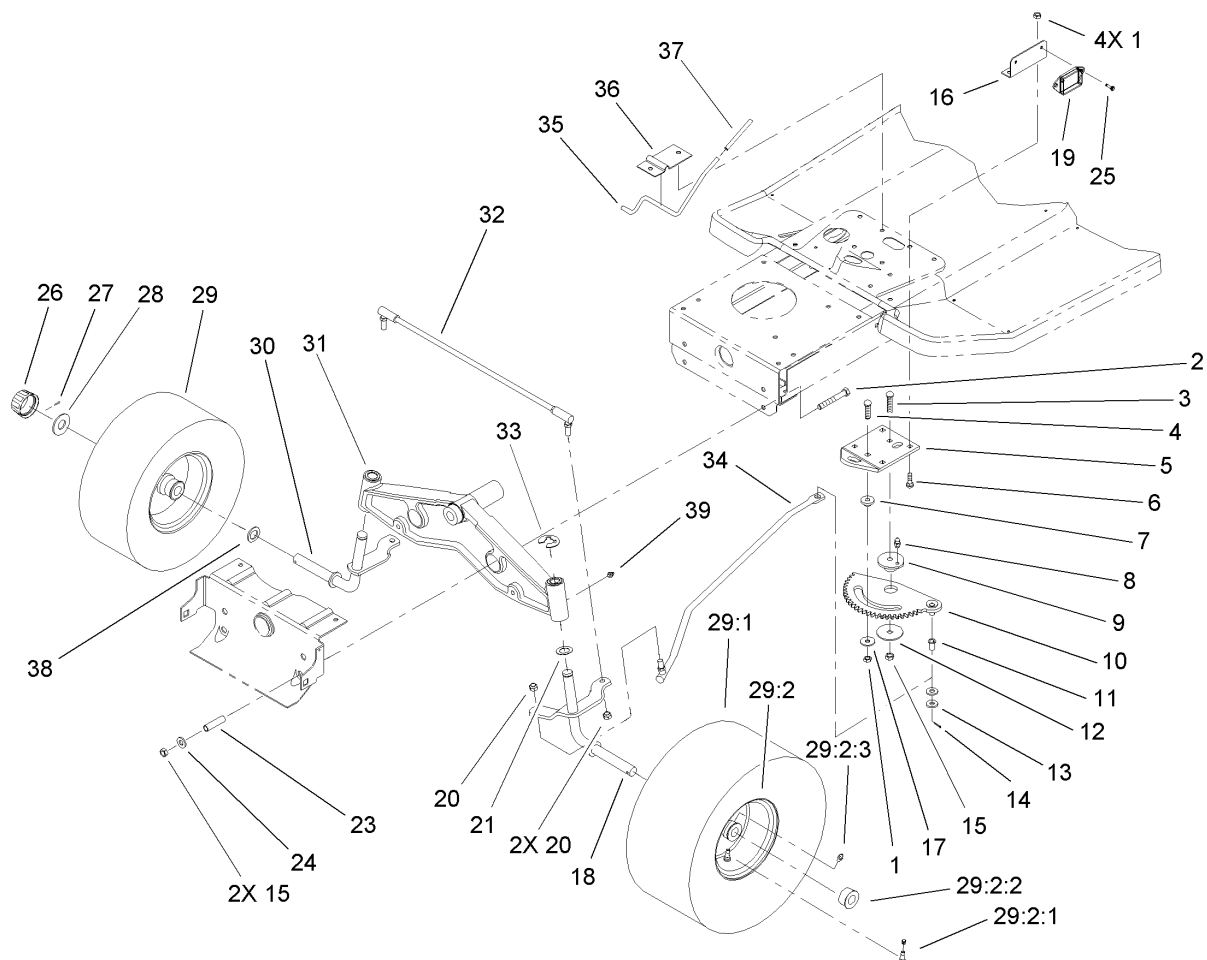

Steering Assembly


Ref	Part No.	Qty.	Description
1	3296-29	5	Nut-Lock, NI
2	323-13	2	Screw-HH
3	3231-4	1	Screw-CARR
4	3230-3	1	Screw-CARR
5	88-5130-03	1	Bracket-Rack, Steering
6	3230-2	4	Bolt-CARR
7	88-5010	1	Spacer-Rack, Steering
8	302-26	1	Fitting-Grease
9	88-4670	1	Bushing-Eccentric
10	88-5200	1	Rack-Steering
11	52-2891	1	Bushing-Link, Steering
12	111419	1	Washer-Bearing
13	3256-25	2	Washer-Flat
14	3272-10	1	Pin-Cotter
15	3296-39	3	Nut-Lock, NI
16	99-2956-03	1	Bracket-Module
17	5-4460	1	Washer-Pivot
18	93-3833-03	1	Spindle-LH
19	99-3701	1	Module-Clutch
20	3296-5	3	Nut-Lock
21	3-6498	2	Washer-Thrust
23	88-5470	2	Spacer-Axle, Front
24	3256-24	2	Washer-Flat
25	9266714	2	Screw-HWH

Ref	Part No.	Qty.	Description
26	61-9780	2	Cap-Hub
27	3272-12	2	Pin-Cotter
28	28-2480	2	Washer
29		2	Front Wheel And Tire ASM
29:1	99-2988	1	Tire
29:2	99-6829	1	Rim ASM
29:2:1	232-27	1	Stem-Valve
29:2:2	110513	2	Bearing-Wheel
29:2:3	302-5	1	Fitting-Grease
29:3	232-39	1	Tube
30	92-7889-03	1	RH Spindle ASM
31	99-2955-03	1	Axle-Front
32	93-3873	1	Tie Rod ASM
33	32151-48	2	E-Ring
34	93-3840	1	Link-Drag
35	88-5510	1	Rod-Brake, Parking
36	88-5520-03	1	Bracket-Brake, Parking
37	88-0890	1	Grip-Brake, Parking
38	3-6498	4	Washer-Thrust
39	302-5	2	Fitting-Grease

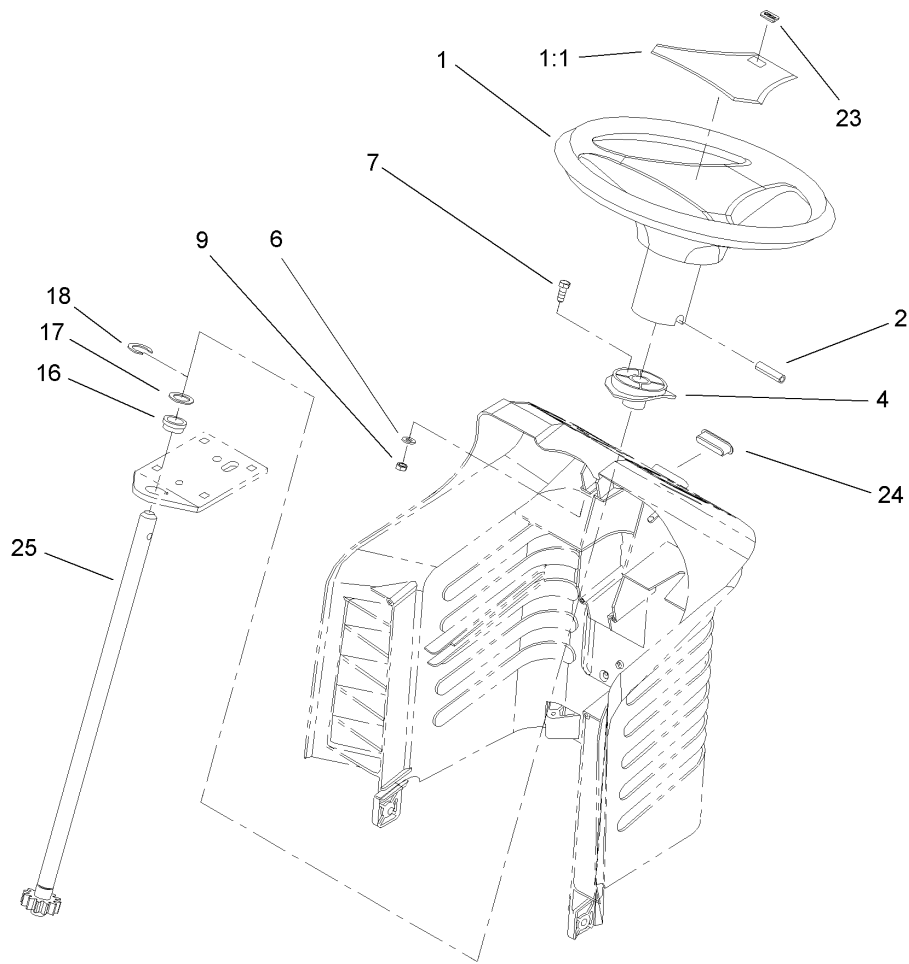 

Fixed Steering Assembly


Ref	Part No.	Qty.	Description				
1	98-1467	1	Wheel-Steering				
1:1	98-1468	1	Cover-Wheel, Steering				
2	32121-111	1	Pin-Roll				
4	88-4190	1	Bushing-Sliding				
6	3256-22	2	Washer-Flat				
7	321-4	2	Screw-HH				
9	3296-42	2	Nut-Lock, NI				
16	88-5150	1	Bearing-Flange				
17	3-6498	1	Washer-Thrust				
18	32151-48	1	E-Ring				
23	98-1459	1	Decal				
24	88-4150	1	Plug				
25	88-6380	1	Shaft-Steering, Long				

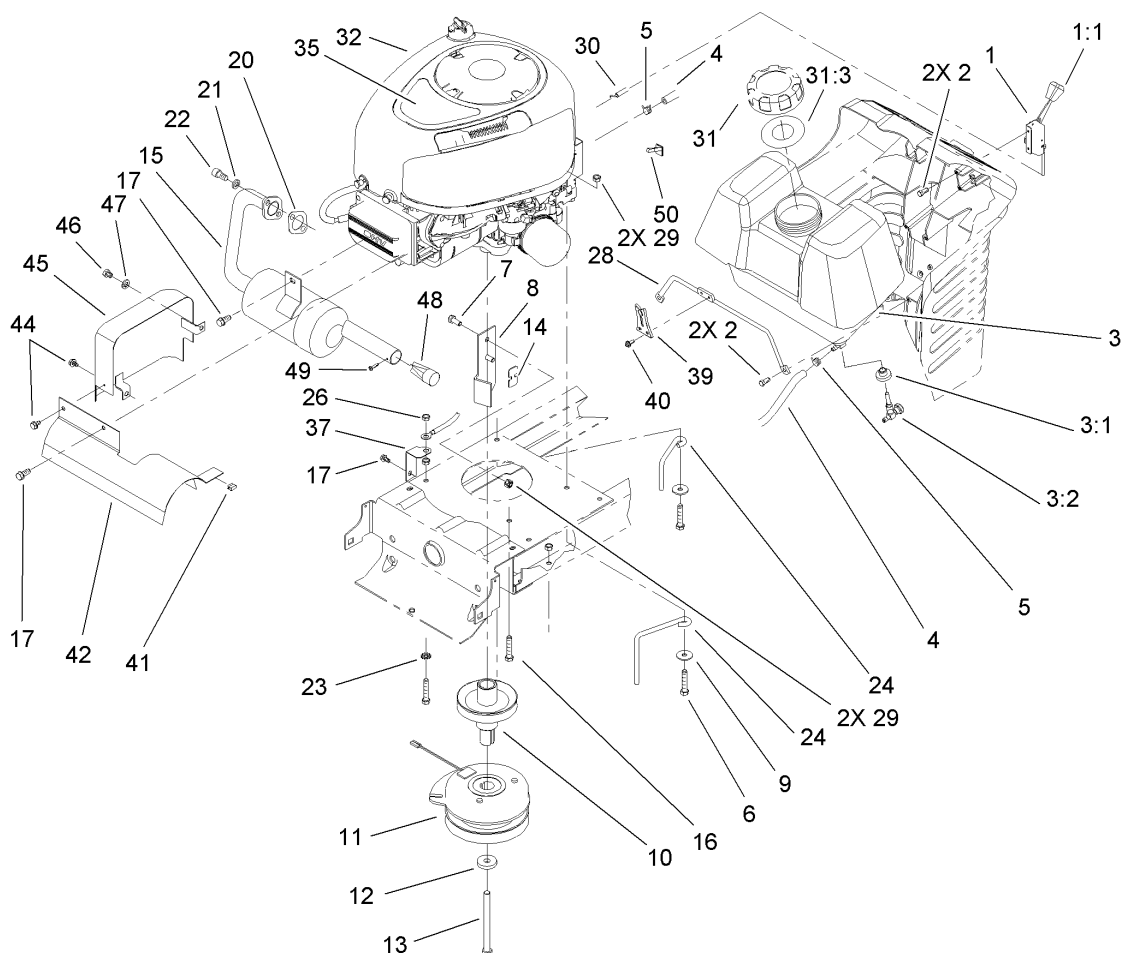 

Engine Assembly

Ref	Part No.	Qty.	Description
1	88-4340	1	Control-Throttle
1:1	66-0120	1	Knob
2	27-0220	4	Screw-Special
3	88-3880	1	Gas Tank ASM
3:1	46-6560	1	Bushing
3:2	104048	1	Valve-Fuel
4	47-2963	1	Hose-Fuel
5	2412-98	2	Clamp
6	322-9	3	Screw-HH
7	322-3	2	Screw-HH
8	107-4914-03	1	Stop-Clutch
9	5-4460	2	Washer-Pivot
10	107-4916	1	Pulley-Engine
11	108-9511	1	Clutch-PTO, Electric
12	112843	1	Washer
13	3212-19	1	Screw-HH
14	98-5023	1	Bumper
15	99-6845	1	Muffler
16	9267154	1	Screw
17	9266714	3	Screw-HWH
20	88-4410	1	Gasket-Muffler
21	3253-4	2	Washer-Lock
22	3274-10	2	Screw-HSH
23	3255-8	1	Washer-Lock


Ref	Part No.	Qty.	Description
24	93-3855	2	Guide-Belt, RH
26	32149-1	2	Nut-Keps
28	94-1952	1	Rod-Tank, Gas
29	3296-29	4	Nut-Lock, NI
30	88-4350	1	Cable-Throttle
31	88-3980	1	Gas Cap ASM
31:3	88-4010	1	Gasket-Cap, Gas
32		1	Engine - Briggs And Stratton, 31F777-0162-E1
35	107-4906	1	Decal
37	93-3809	1	Bracket-Ground
39	94-1951	1	Latch-Hood
40	32144-112	2	Screw-HWH
41	93-3882	1	Clip-Tinnerman
42	93-3880-03	1	Shield-Muffler
44	32104-76	2	Screw
45	93-8450-03	1	Exhaust Shield ASM
46	322-3	1	Screw-HH
47	3253-4	1	Washer-Lock
48	93-9911	1	Screen-Silencer, Exhaust
49	32144-42	1	Screw-HH
50	88-4490	1	Reducer-Throttle, Rpm

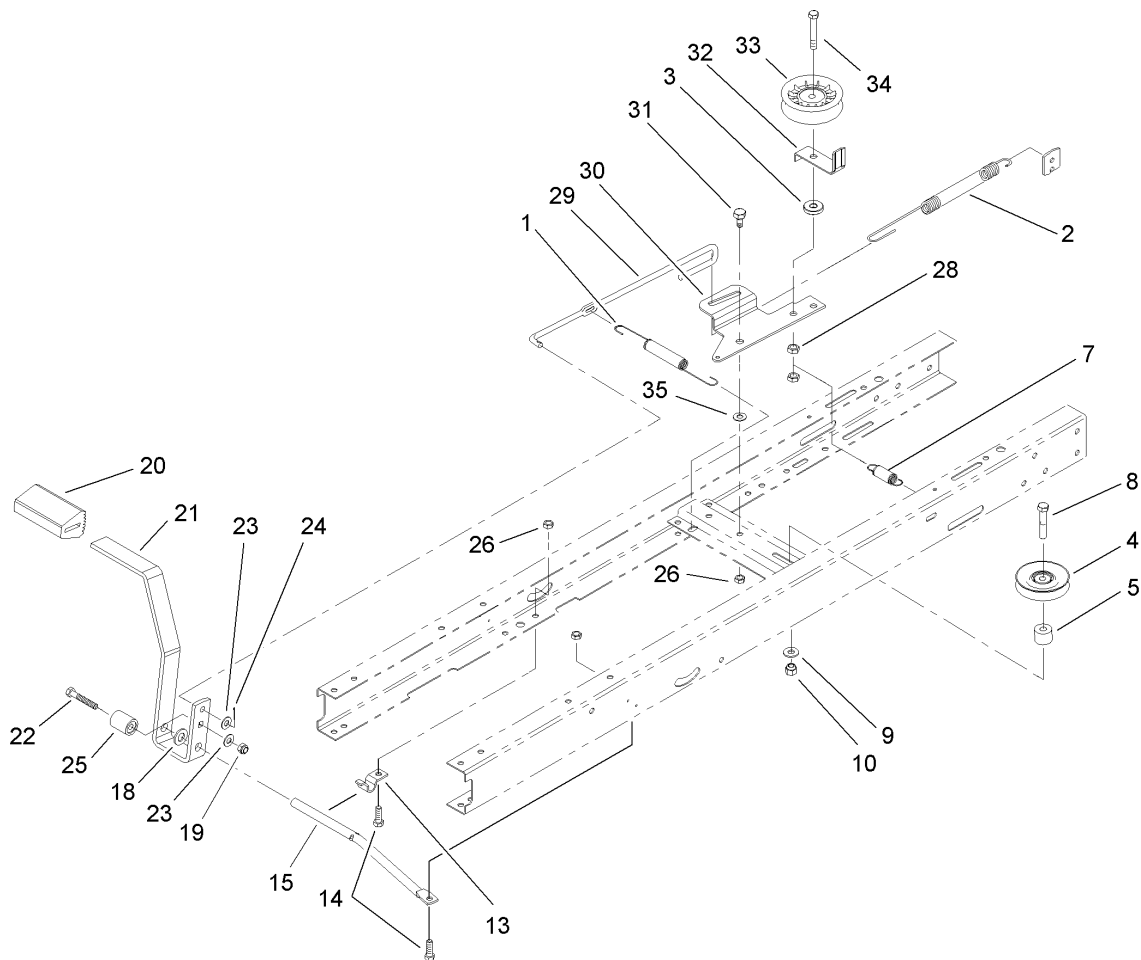 

Traction Brake Assembly


Ref	Part No.	Qty.	Description
1	27-8890	1	Spring-Return
2	100-7422	1	Spring-Brake
3	92-4890	1	Washer
4	92-7102	1	Pulley-Idler
5	92-5791	1	Spacer
7	88-6330	1	Spring-Extension
8	323-10	1	Screw-HH
9	3256-3	1	Washer-Flat
10	3296-39	1	Nut-Lock, NI
13	88-4810	1	Clamp-Shift, Pivot
14	322-3	2	Screw-HH
15	88-5500	1	Rod-Pedal, Pivot
18	3256-26	1	Washer-Flat
19	3296-47	1	Nut-Lock, NI
20	65-2920	1	Pad-Pedal
21	88-5000-03	1	Pedal-Clutch / Brake
22	322-9	1	Screw-HH
23	3256-23	2	Washer-Flat
24	3272-10	1	Pin-Cotter
25	99-6836	1	Spacer-Plastic
26	3296-29	3	Nut-Lock, NI
28	3296-59	2	Nut-Lock, NI
29	88-5270	1	Rod-Clutch / Brake
30	88-6070	1	Arm-Idler

Ref	Part No.	Qty.	Description
31	37-8770	1	Bolt-Shoulder
32	88-5560	1	Guide-Idler, Belt
33	104-4160	1	Pulley-Idler
34	323-11	1	Screw-HH
35	5-4460	1	Washer-Pivot

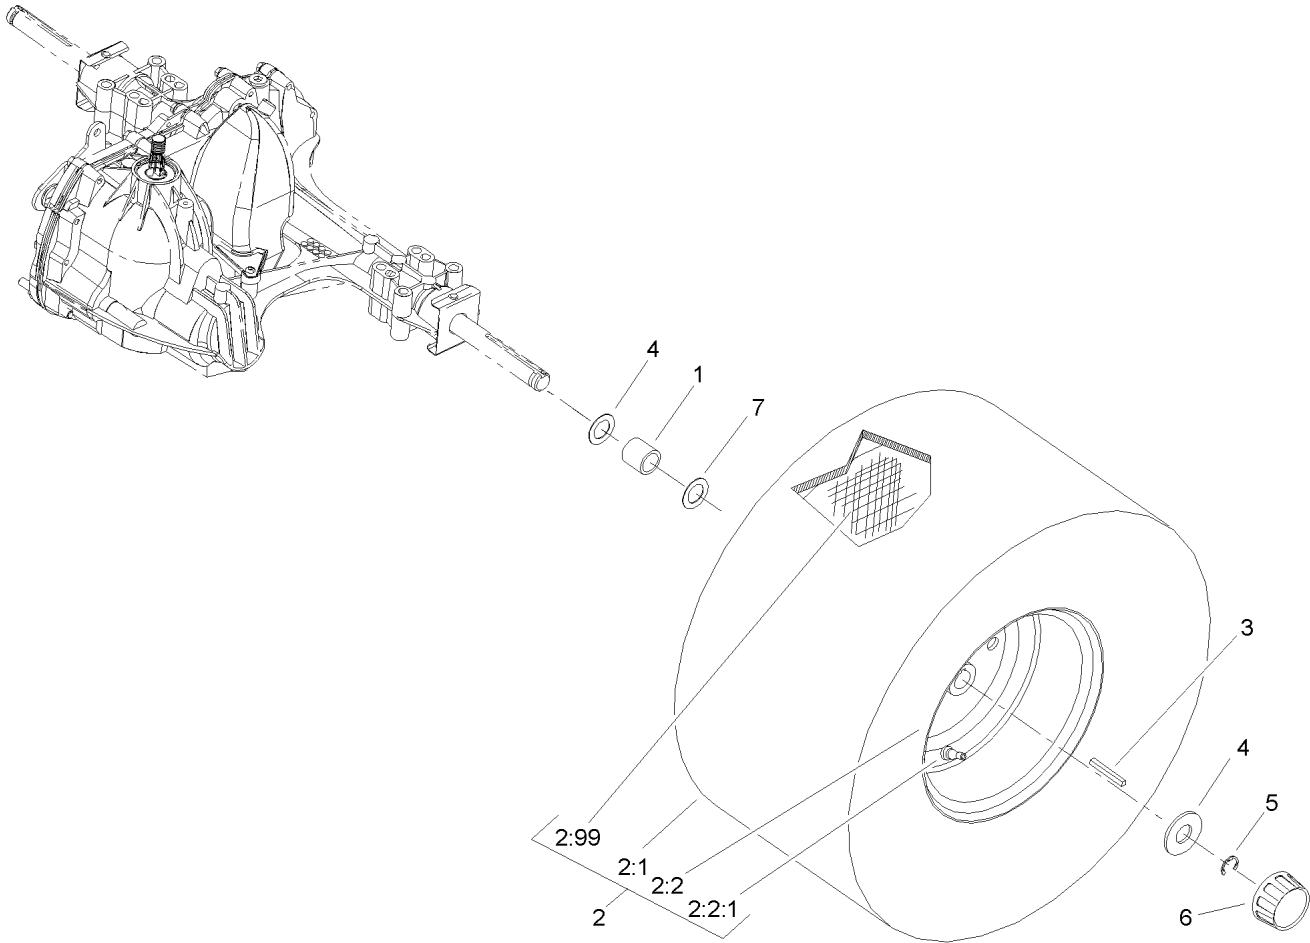 


Wheel and Tire Assembly

Ref	Part No.	Qty.	Description				
1	104-4161	2	Spacer-Wheel				
2		2	Rear Wheel And Tire ASM				
2:1	99-2994	1	Tire				
2:2	88-4390	1	Rim ASM				
2:2:1	232-27	1	Stem-Valve				
2:99	93-3893	1	Tube-Inner				
3	7-0036	2	Key-Square				
4	28-2480	4	Washer				
5	32151-48	2	E-Ring				
6	61-9780	2	Cap-Hub				
7	3-6498	2	Washer-Thrust				

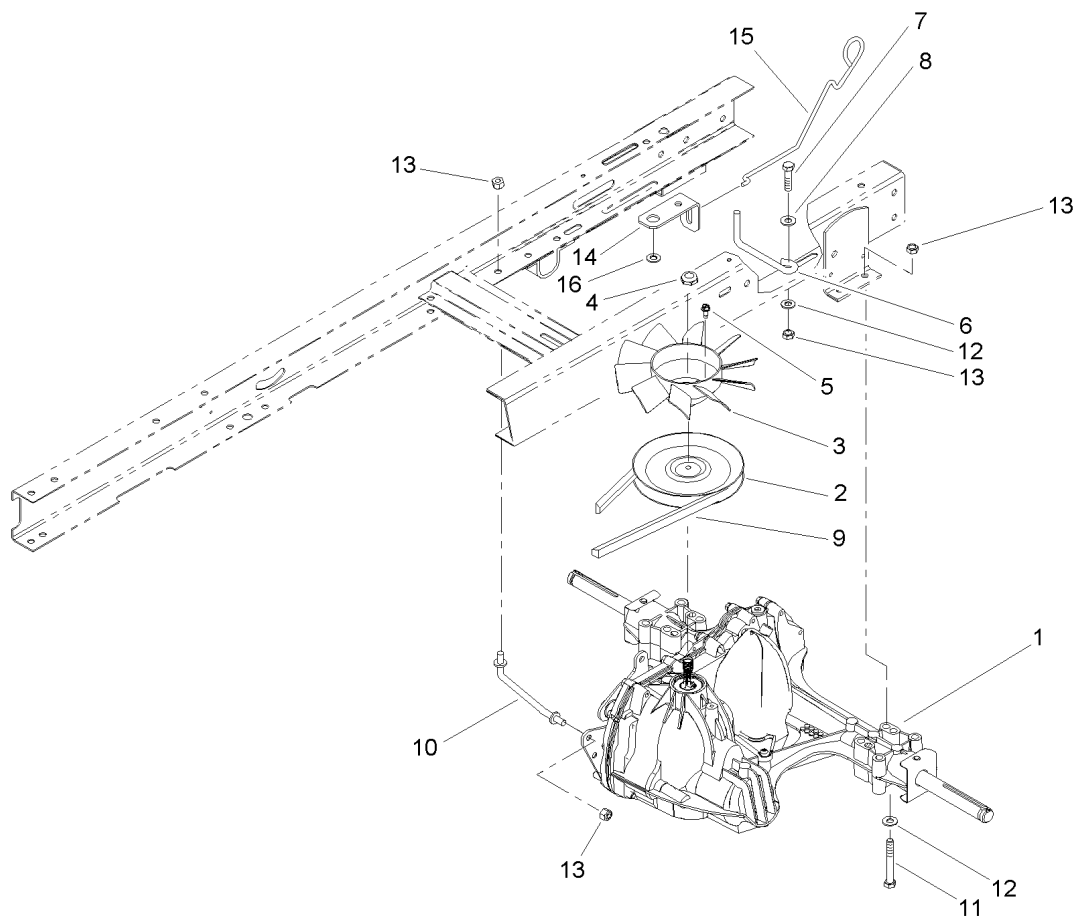 

Transaxle Component Assembly


Ref	Part No.	Qty.	Description				
1	104-1760	1	Transaxle ASM				
2	104-1753	1	Pulley				
3	104-2162	1	Fan				
4	3296-28	1	Nut-Lock, NI				
5	9134304	3	Screw				
6	93-3868	1	Guide-Belt, Transmission				
7	322-5	1	Screw-HH				
8	5-4460	1	Washer-Pivot				
9	88-6250	1	V-Belt				
10	100-6225	1	Strap-Torque				
11	322-13	4	Screw-HH				
12	3256-23	3	Washer-Flat				
13	3296-29	7	Nut-Lock, NI				
14	100-7406	1	Bracket-Bypass				
15	100-7407	1	Wire-Bypass				
16	3256-3	1	Washer-Flat				

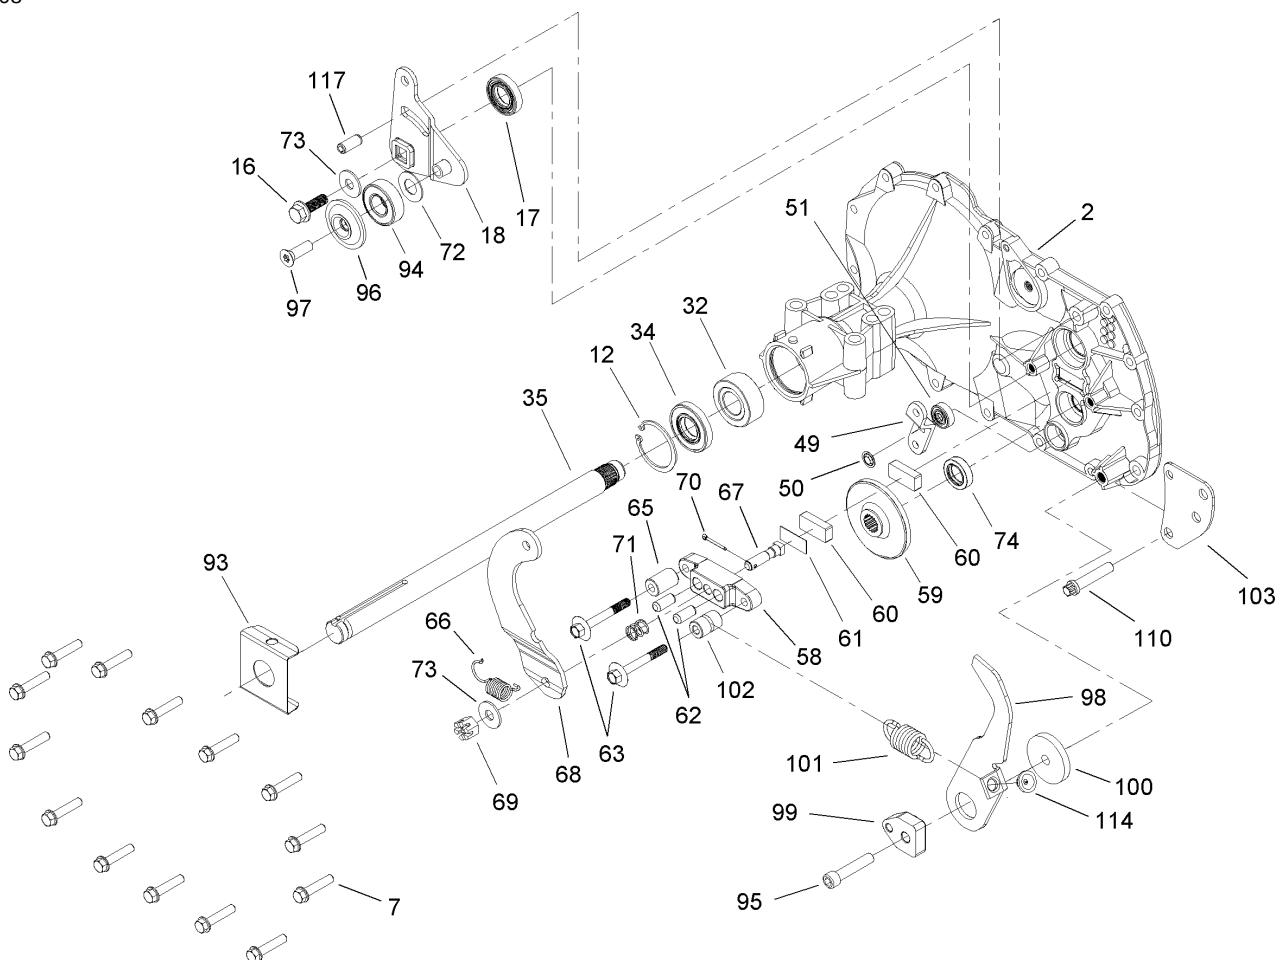 

Side Housing and Bearing Assembly Transaxle No. 104-1760

Ref	Part No.	Qty.	Description
2	104-5302	1	Side Housing ASM
7	104-5305	14	Screw-HHF
12	104-5309	1	Ring-Retaining
16	104-5312	1	Screw-HF
17	104-5313	1	Seal-Lip
18	104-5314	1	Arm-Control
32	104-5321	1	Bearing-Sleeve, Outboard
34	104-5322	1	Seal-Lip
35	104-5323	1	Shaft-Axle, RH
49	104-5336	1	Arm-Bypass
50	104-5337	1	Ring-Retaining
51	104-5338	1	Seal-Lip
58	104-5343	1	Yoke-Brake
59	104-5344	1	Rotor-Brake
60	104-2171	2	Puck-Brake
61	104-2181	1	Puck-Plate
62	104-2176	2	Pin-Brake
63	104-5345	2	Screw-HF
65	104-2180	1	Spacer
66	104-2184	1	Spring-Arm, Brake
67	104-2174	1	Bolt-SQH
68	104-5346	1	Arm-Brake
69	93-3807	1	Nut-Castle
70	3272-7	1	Pin-Cotter


Ref	Part No.	Qty.	Description
71	104-2188	1	Spring-Brake, Anti Drag
72	94-1933	1	Washer
73	5-4460	2	Washer-Pivot
74	104-5347	1	Seal-Oil
93	104-5353	1	Clip-Spring
94	104-2156	1	Bearing
95	104-2155	1	Screw
96	104-2157	1	Spacer-Locating
97	104-2158	1	Screw-Countersunk
98	104-5354	1	Arm-Return
99	104-2119	1	Puck-Adjusting
100	104-5355	1	Washer
101	104-5356	1	Spring-Extension
102	104-5357	1	Spacer
103	104-5358	1	Bracket-Torque
110	104-2148	1	Screw-TTH
114	104-5363	1	Guide-Spring
117	104-5365	1	Pin-Spring

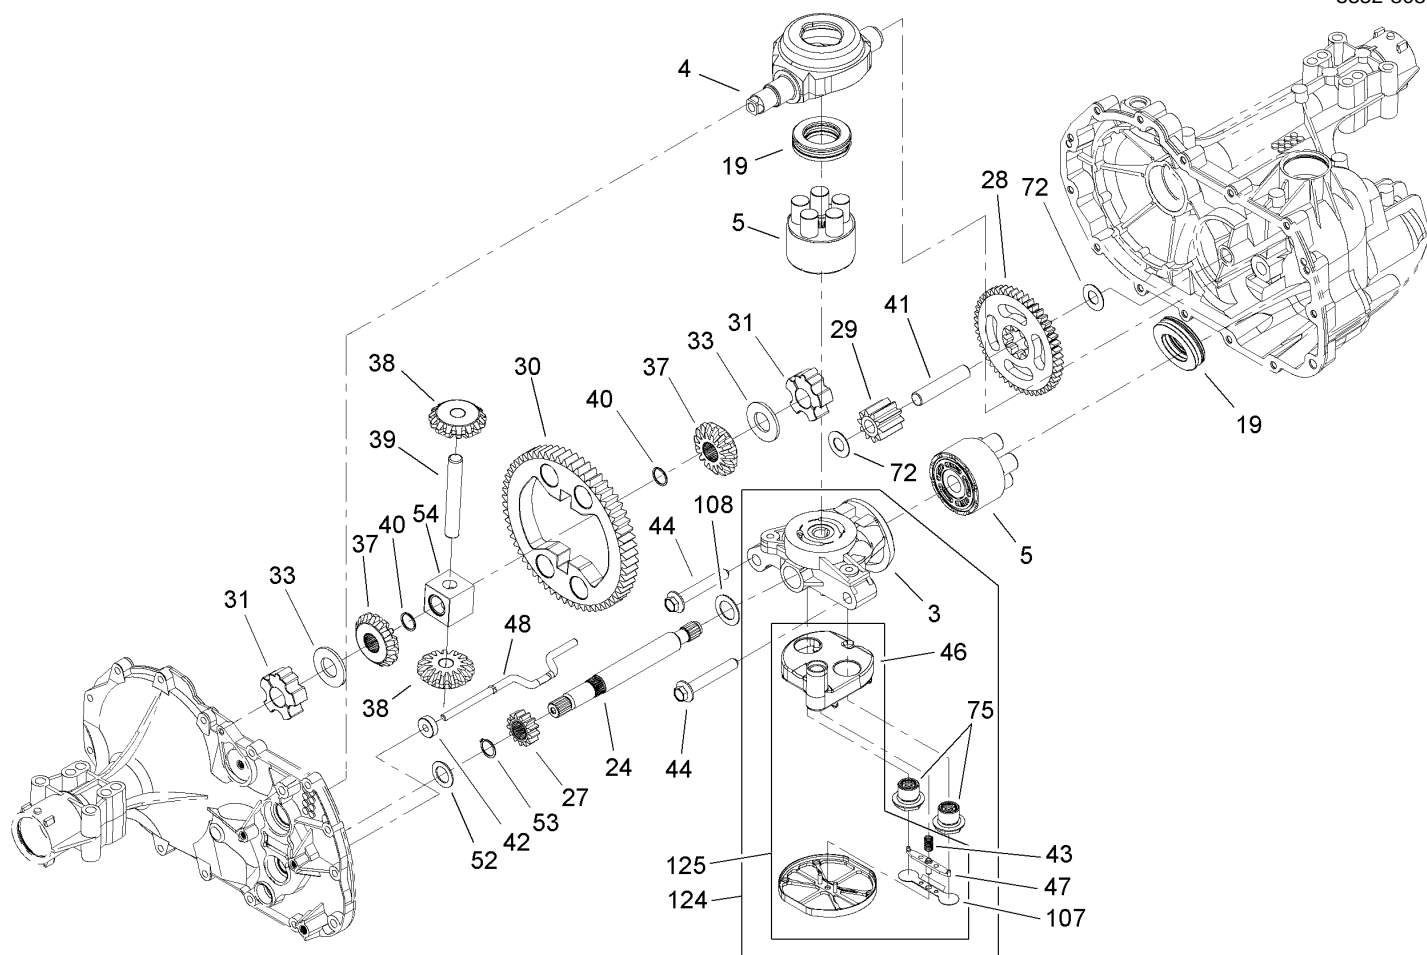 

Gear Assembly Transaxle No. 104-1760


Ref	Part No.	Qty.	Description
3	104-5303	1	Center Section ASM
4	104-5304	1	Swashplate-Trunnion
5	104-2106	2	Cylinder Block ASM
19	94-6922	2	Bearing-Thrust
24	104-5315	1	Shaft-Motor
27	104-5316	1	Gear-Pinion, 13T
28	104-5317	1	Gear
29	104-5318	1	Gear-Jackshaft, 10T
30	104-5319	1	Gear-Bull, 60T
31	104-5320	2	Bearing-Sleeve
33	94-1943	2	Washer
37	104-5325	2	Gear-Miter
38	104-5326	2	Gear-Miter, 15T
39	104-5327	1	Shaft
40	104-5328	2	Ring-Retaining, Spiral
41	104-5329	1	Pin-Jackshaft
42	104-5330	1	Magnet-Ring
43	104-5331	1	Spring-Bypass
44	94-6926	2	Bolt
46	104-5333	1	Base-Filter
47	104-5334	1	Actuator-Bypass
48	104-5335	1	Rod-Actuator, Bypass
52	104-5339	1	Washer-Flat
53	104-5340	1	Ring-Retaining

Ref	Part No.	Qty.	Description
54	104-5341	1	Bearing-Block, Center
72	94-1933	2	Washer
75	104-5348	2	Check Plug ASM
107	104-5359	1	Deflector
108	104-5360	1	Washer-Shaft, Motor
124	106-6522	1	Center Section Filter Bypass ASM
125	106-6523	1	Filter ASM
●127	104-5368	1	Seal Kit

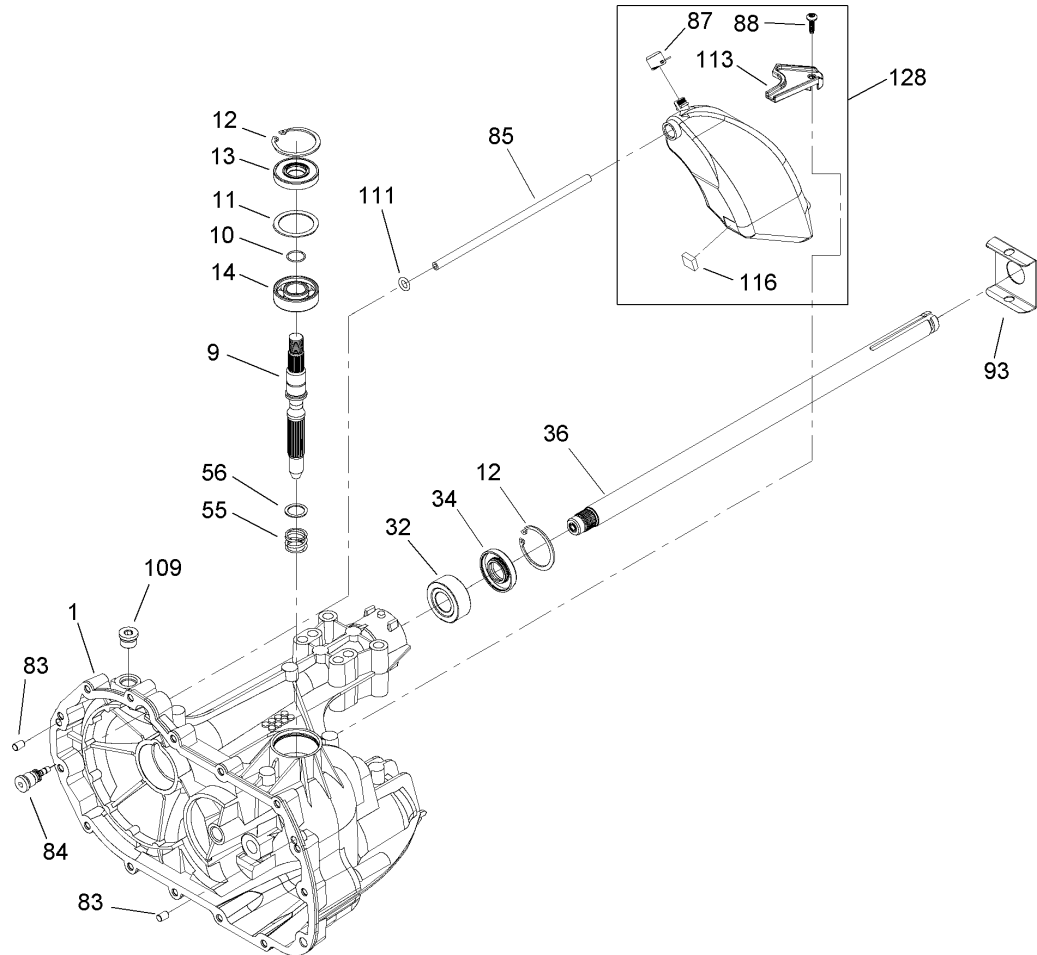 

Main Housing and Bearing Assembly
Transaxle No. 104-1760


Ref	Part No.	Qty.	Description				
1	104-5301	1	Main Housing ASM				
9	104-5306	1	Shaft-Input				
10	104-5307	1	Ring-Retaining				
11	104-5308	1	Spacer				
12	104-5309	2	Ring-Retaining				
13	104-5310	1	Seal-Lip				
14	104-5311	1	Bearing-Ball				
32	104-5321	1	Bearing-Sleeve, Outboard				
34	104-5322	1	Seal-Lip				
36	104-5324	1	Shaft-Axle, LH				
55	94-1936	1	Spring-Block				
56	94-1937	1	Washer-Block, Thrust				
83	104-2170	2	Pin				
84	104-5349	1	Fitting-Sae				
85	104-5350	1	Hose-Expansion, Tank				
87	104-5351	1	Cap-Vent				
88	104-5352	1	Bolt-Tapping, Self				
93	104-5353	1	Clip-Spring				
109	104-2189	1	Plug-Thread, Straight				
111	104-5361	1	O-Ring				
113	104-5362	1	Bracket-Support				
116	104-5364	1	Sponge-Silicone				
128	104-5369	1	Expansion Tank Kit				

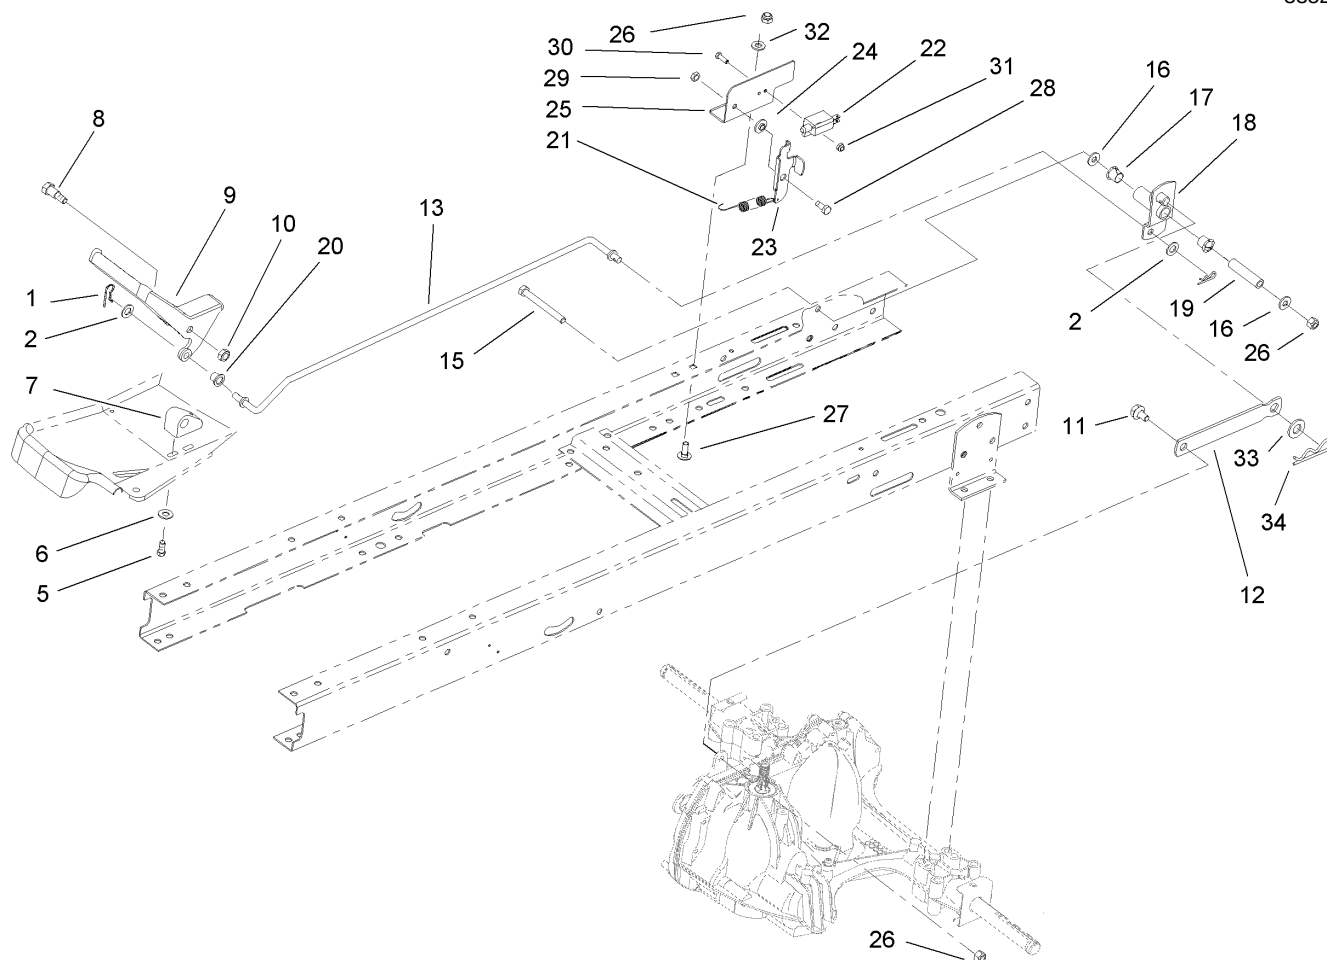 

Transaxle Installation Assembly


Ref	Part No.	Qty.	Description
1	3290-307	2	Pin-Hair
2	3256-38	2	Washer-Flat
5	46-8090	2	Screw-Plastite
6	3256-22	2	Washer-Flat
7	88-4690	1	Block-Pivot
8	23-0310	1	Bolt-Shoulder
9	99-6120-05	1	Pedal-Control, Speed
10	3296-59	1	Nut-Lock, NI
11	37-8770	1	Bolt-Shoulder
12	99-6849	1	Link-Control, Speed
13	99-6839	1	Rod-Control, Speed
15	322-14	1	Screw-HH
16	3256-2	2	Washer-Flat
17	256-257	2	Bushing-Nyliner
18	99-6835-03	1	Pivot ASM
19	99-6832	1	Spacer-Pivot
20	99-6121	1	Bushing
21	99-6805	1	Spring-Extension
22	95-1653	1	Switch-Pole, Single
23	99-6807	1	Bracket-Pivot
24	99-6808	1	Washer-Stepped
25	99-6806	1	Bracket-Adjustment
26	3296-29	4	Nut-Lock, NI
27	3230-18	2	Screw-CARR

Ref	Part No.	Qty.	Description
28	99-6810	1	Screw-HH
29	3296-42	1	Nut-Lock, NI
30	3290-392	2	Screw-HHF
31	3296-1	2	Nut-Lock
32	3256-23	2	Washer-Flat
33	3256-26	1	Washer-Flat
34	9335054	1	Pin-Hair

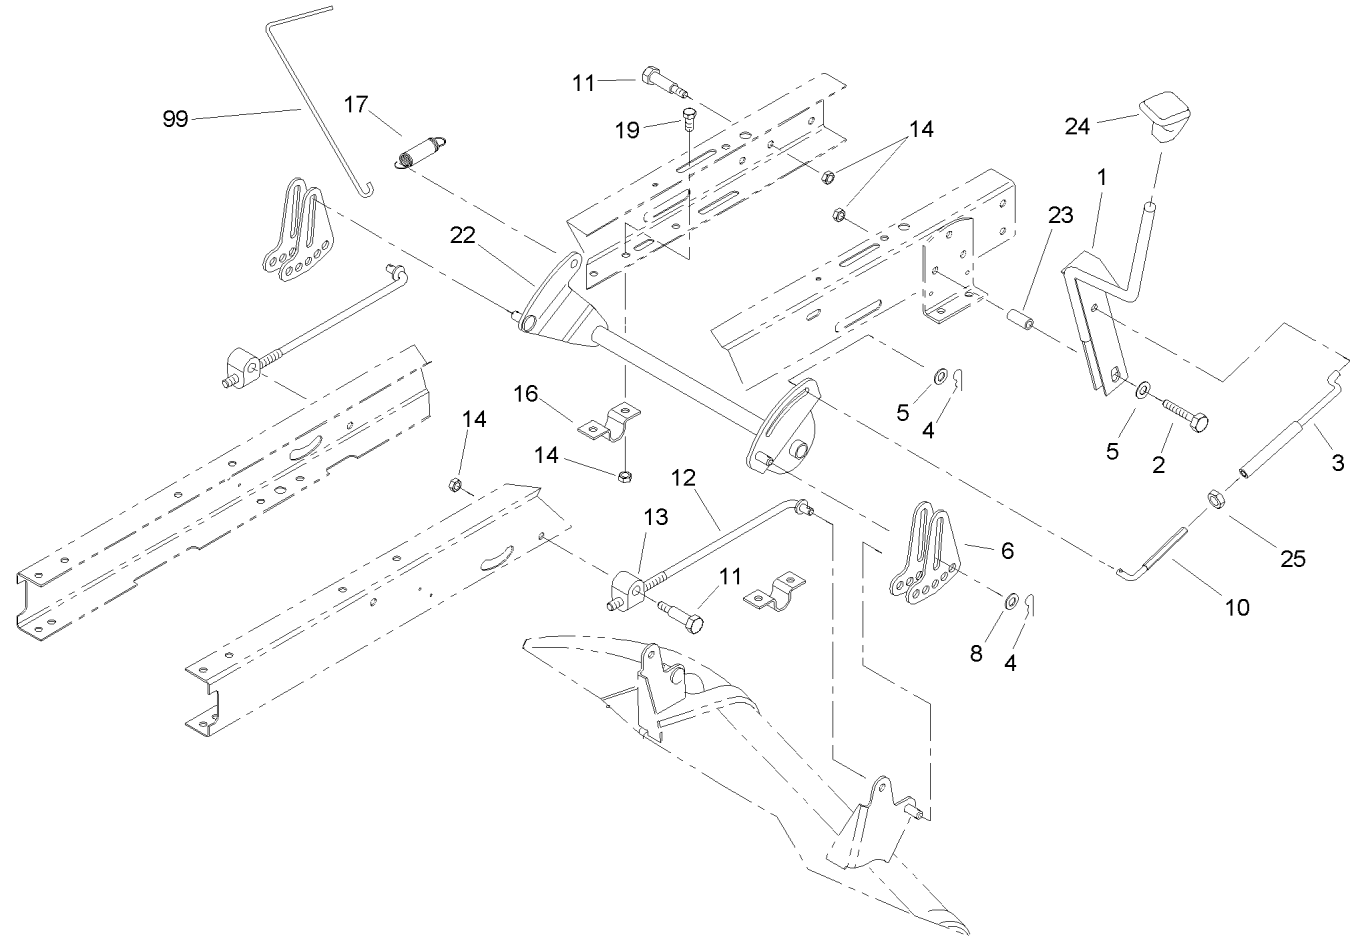 

Height-of-Cut Assembly


Ref	Part No.	Qty.	Description				
1	93-3822-03	1	Lever ASM				
2	322-32	1	Screw-HH				
3	93-3885	1	Tube				
4	3290-307	3	Pin-Hair				
5	3256-24	2	Washer-Flat				
6	88-5570-03	4	Link-Adjusting, HOC				
8	80-6990	2	Washer-Hardened				
10	93-3888	1	Link-HOC				
11	7-0030	3	Bolt-Shoulder				
12	88-5450	2	Rod-Hanger, Rear				
13	88-4230	2	Trunnion-HOC				
14	3296-29	8	Nut-Lock, NI				
16	88-4730	2	Clamp-HOC, Pivot				
17	93-3808	1	Spring-Extension				
19	322-3	4	Screw-HH				
22	93-7660-03	1	Pivot-HOC				
23	65-7210	1	Spacer				
24	94-5565	1	Knob-Shift				
25	3218-2	1	Nut-Jam				
99	92-5771	1	Rod-Removal, Spring				

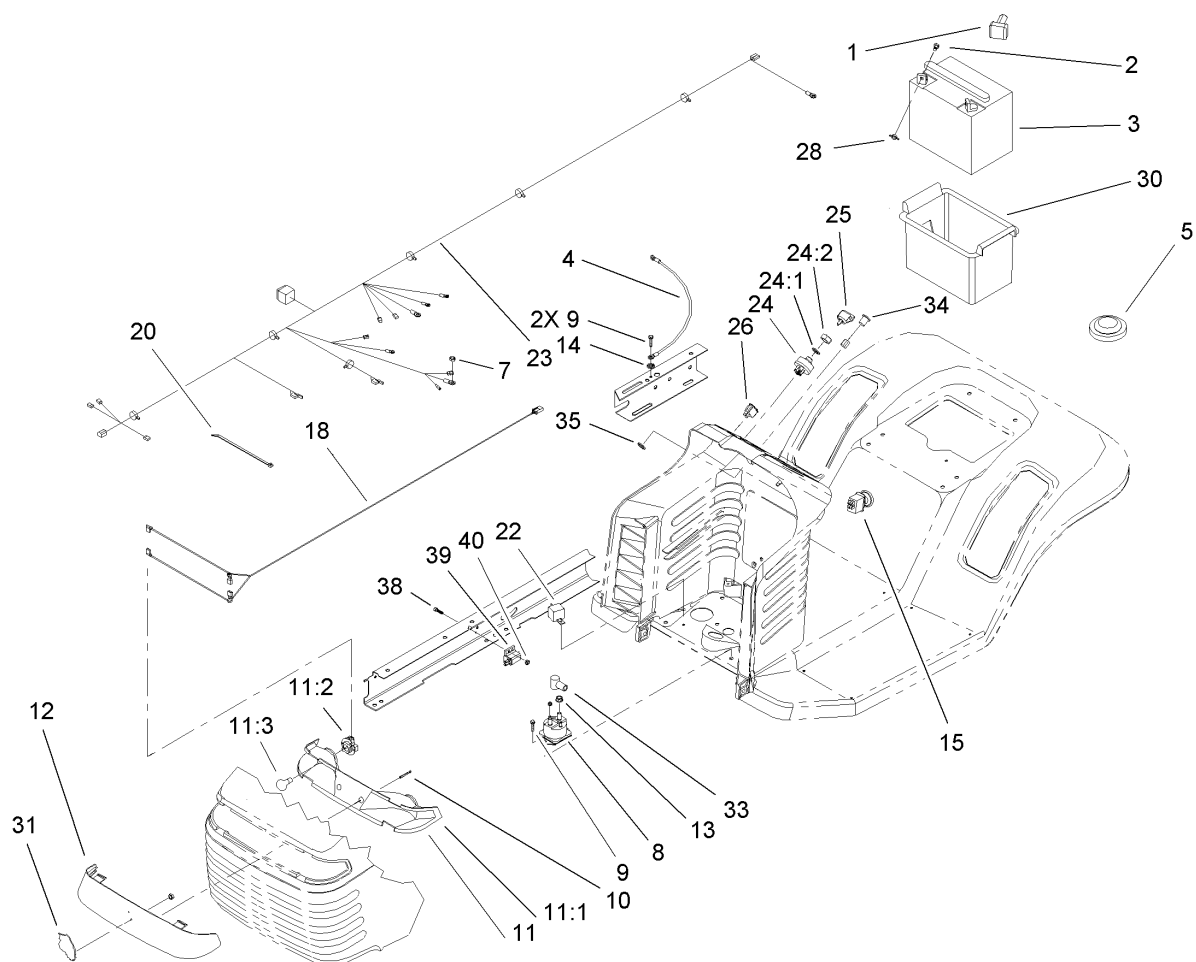 

Electrical Assembly

Ref	Part No.	Qty.	Description
1	28-8080	1	Boot-Terminal
2	321-4	2	Screw-HH
3	104-1755	1	Battery
4	44-8110	1	Wire ASM
5	100-3524	1	Switch-Seat
7	32149-2	1	Nut-Keps
8	106-8245	1	Solenoid
9	9266714	3	Screw-HWH
10	32144-32	2	Screw
11	88-3970	1	Reflector And Lamp ASM
11:1	93-8741	1	Reflector
11:2	116262	2	Socket-Headlight
11:3	7228	2	Bulb
12	88-3960	1	Lens-Headlight
13	32149-2	2	Nut-Keps
14	3255-7	2	Washer-Lock / EXT
15	93-9998	1	Switch-PTO
18	99-1935	1	Harness-Headlight
20	614249	1	Strap-Tie
22	98-7249	1	Relay
23	107-4912	1	Harness-Wire
24	88-9830	1	Key Switch ASM
24:1	3254-5	1	Washer-Tooth
24:2	218-461	1	Nut-HH

Ref	Part No.	Qty.	Description
25	63-8360	1	Key-Ignition
26	92-8875	1	Switch-Rocker
28	32103-22	2	Nut-Wing
30	88-4040	1	Box-Battery
31	95-4248	1	Decal
33	93-3190	1	Boot-Insulator, Terminal
34	95-7652	1	Light-Indicator
35	32151-80	1	Clip-Retainer
38	3274-14	2	Screw-HSH
39	65-7410	1	Switch-Pole, Single
40	3296-2	2	Nut-Lock

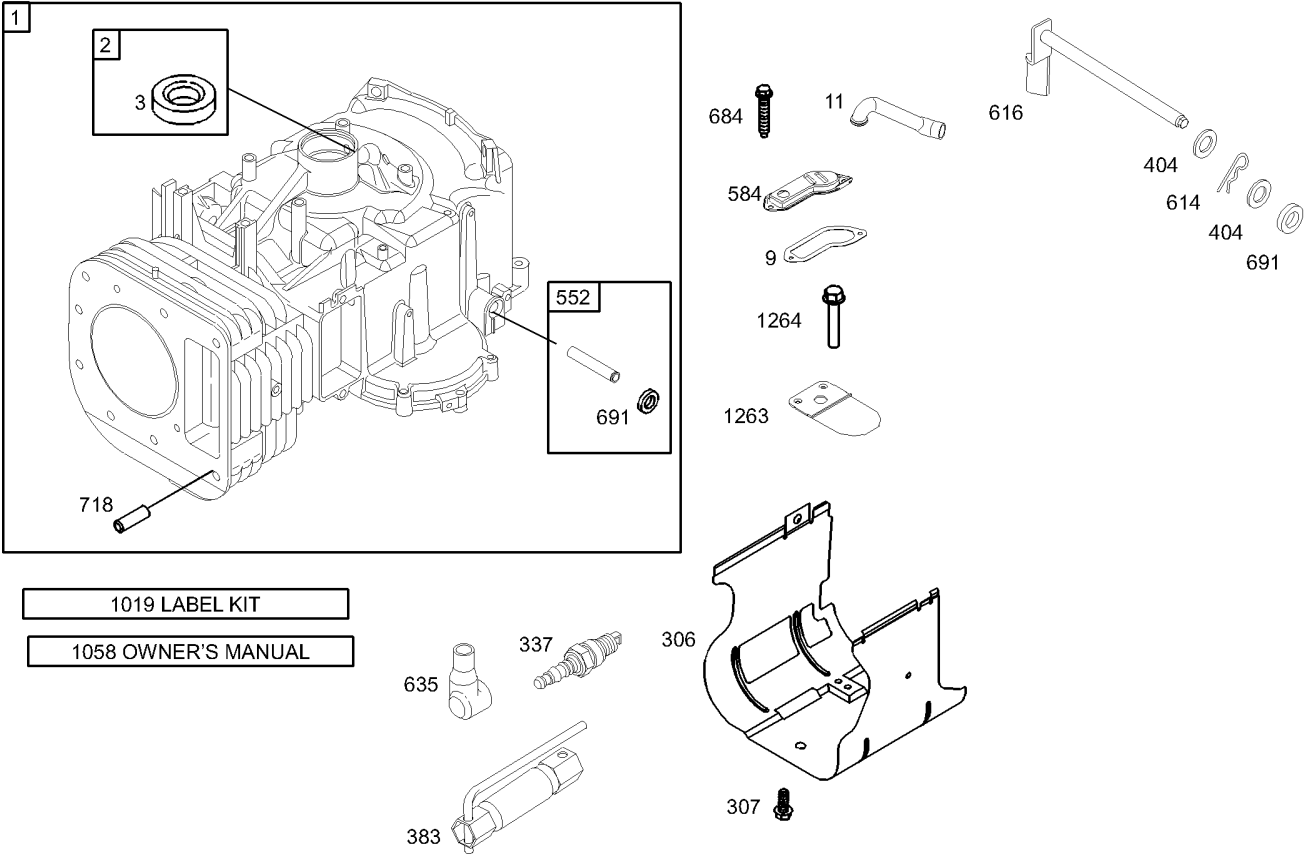 

1019 LABEL KIT


1058 OWNER'S MANUAL

Assemblies include all parts shown in frames.

Cylinder Assembly

Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description				
1	697174	1	Cylinder ASM				
2	399265	1	Bushing / Seal Kit				
3	391086	1	Seal-Oil				
9	697109	1	Gasket-Breather				
11	697113	1	Tube-Breather				
48	697762	1	Short Block ASM				
306	697107	1	Shield-Cylinder				
307	691003	1	Screw				
337	491055	1	Plug-Spark				
383	89838	1	Wrench-Plug, Spark				
404	691691	1	Washer				
552	697144	1	Bushing-Crank, Governor				
584	697112	1	Cover-Passage, Breather				
614	691620	1	Pin-Cotter				
616	692012	1	Crank-Governor				
635	691909	1	Boot-Plug, Spark				
684	697157	1	Screw				
691	692407	1	Seal-Shaft, Governor				
718	690959	1	Pin-Locating				
1019	697143	1	Label Kit				
1058	275038	1	Owner's Manual				
1263	697124	1	Reed-Breather				
1264	697104	1	Screw				

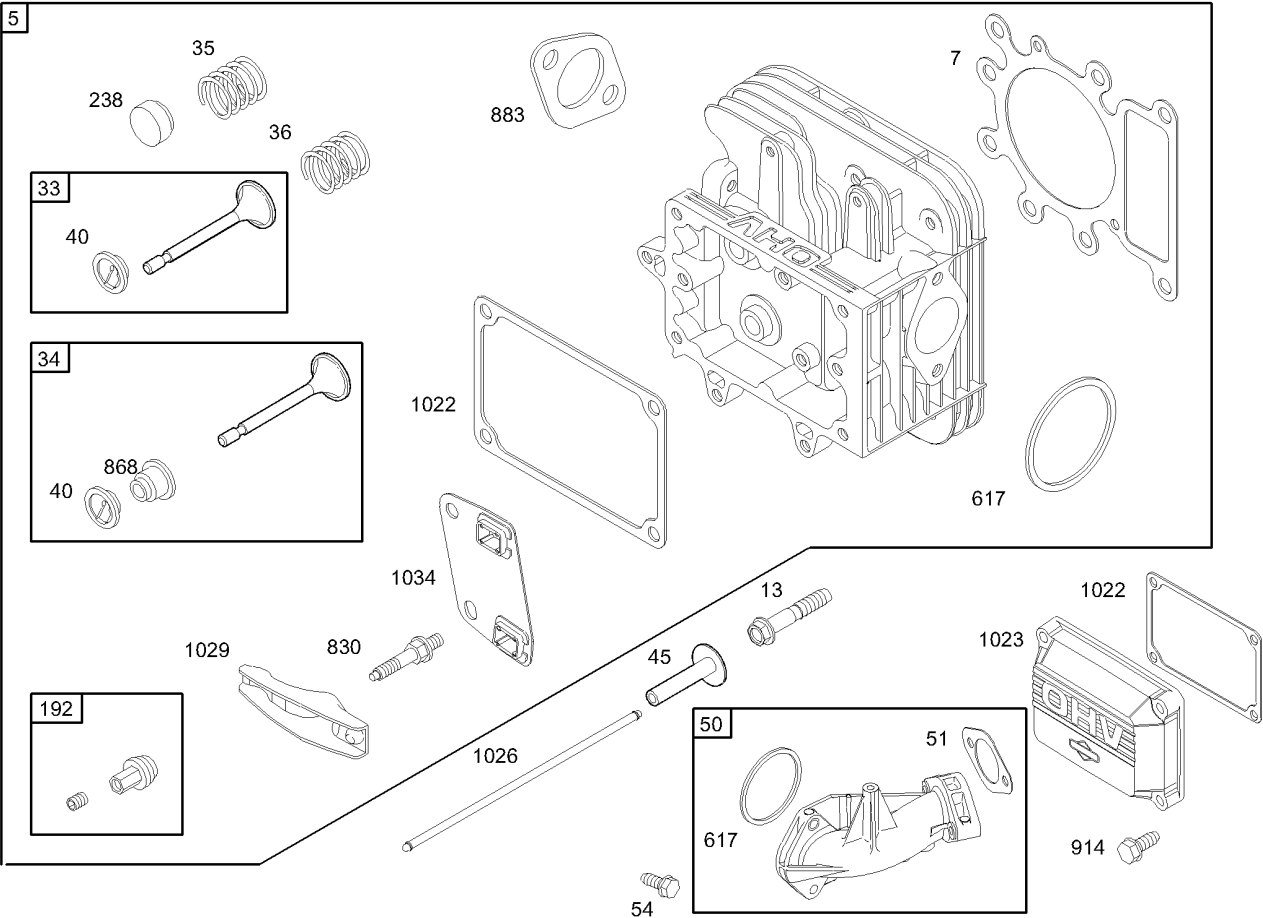 


Cylinder Head Assembly

Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description
75	698147	1	Head-Cylinder
347	692410	1	Gasket-Cylinder Head
7			
713	690360	1	Screw
733	495856	1	Valve-Exhaust
734	495857	1	Valve-Intake
735	691279	1	Spring-Valve
736	691279	1	Spring-Valve
740	691752	1	Retainer-Valve
745	690564	1	Tappet-Valve
750	690193	1	Manifold-Intake
3451	692137	1	Gasket-Intake
56			
754	691148	1	Screw
7192	691986	1	Adjustor-Arm, Rocker
7238	691843	1	Cap-Valve
35617	692138	1	Seal
7			
7830	691095	1	Stud-Arm, Rocker
34868	690968	1	Seal-Valve
7			
7883	692236	1	Gasket-Exhaust
7914	690960	1	Screw
371022	272475	1	Gasket-Cover, Rocker
71023	692492	1	Cover-Rocker

Ref	Part No.	Qty.	Description
71026	692003	1	Rod-Push, Intake
7	692011	1	Rod-Push, Exhaust
71029	691751	1	Arm-Rocker
71034	690822	1	Guide-Rod, Push

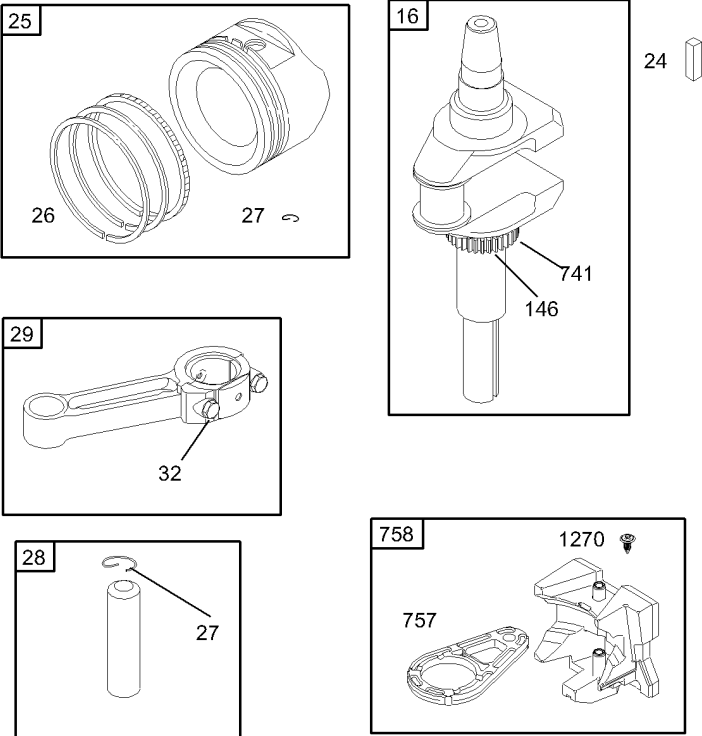 


Assemblies include all parts shown in frames.

Crankshaft Assembly

Briggs and Stratton 31F777-0162-E1


Ref	Part No.	Qty.	Description				
16	697127	1	Crankshaft				
24	222698	1	Key				
25	697159	1	Piston ASM (Standard)				
7	697160	1	Piston ASM (.010" Oversize)				
7	697162	1	Piston ASM (.020" Oversize)				
7	697163	1	Piston ASM (.030" Oversize)				
26	697164	1	Ring Set (Standard)				
7	697165	1	Ring Set (.010" Oversize)				
7	697171	1	Ring Set (.020" Oversize)				
7	697172	1	Ring Set (.030" Oversize)				
27	698469	1	Lock-Pin, Piston				
28	697099	1	Pin-Piston (Standard)				
29	697126	1	Rod-Connecting (Standard)				
7	697264	1	Rod-Connecting (.020In Undersize)				
32	692852	1	Screw				
146	690979	1	Key-Timing				
741	697128	1	Gear-Timing				
757	697607	1	Link-Counterweight				
758	697134	1	Counterweight				
1270	697156	1	Plug-Counterweight, Avs				

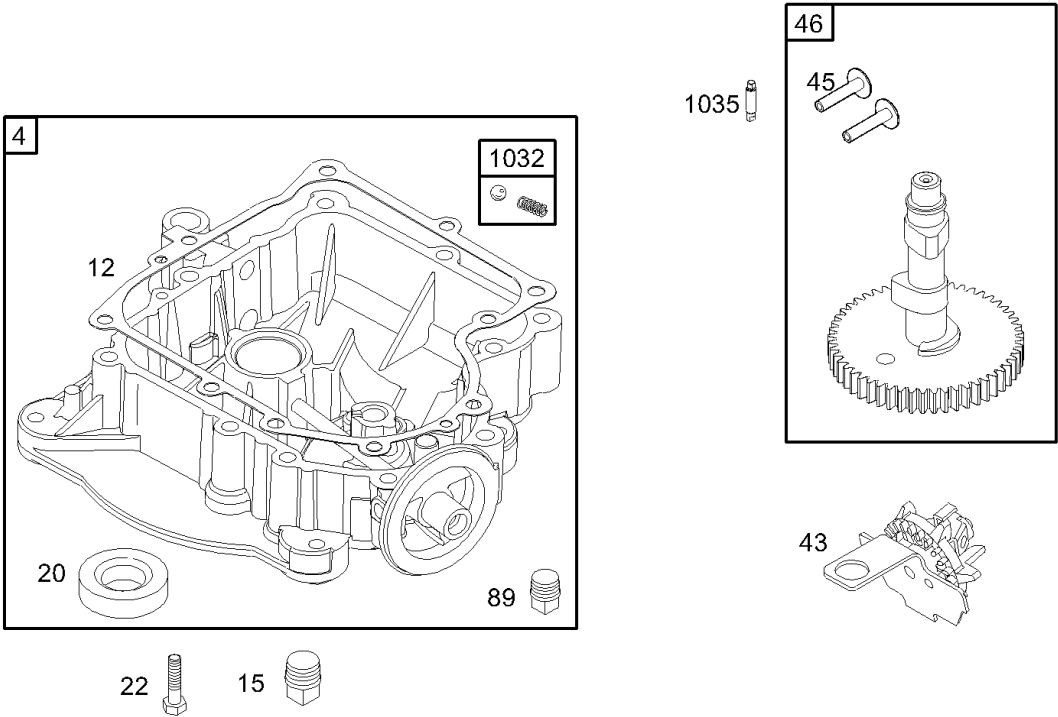 

Assemblies include all parts shown in frames.

Crankcase Assembly
Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description				
4	697188	1	Sump-Engine				
12	697110	1	Gasket-Crankcase				
15	690946	1	Plug-Drain, Oil				
20	690947	1	Seal-Oil				
22	692125	1	Screw				
43	691968	1	Slinger-Governor / Oil				
45	690564	1	Tappet-Valve				
46	693450	1	Camshaft				
89	690283	1	Plug				
1032	491710	1	Ball-Pump, Oil				
1035	693784	1	Shaft-Pump				

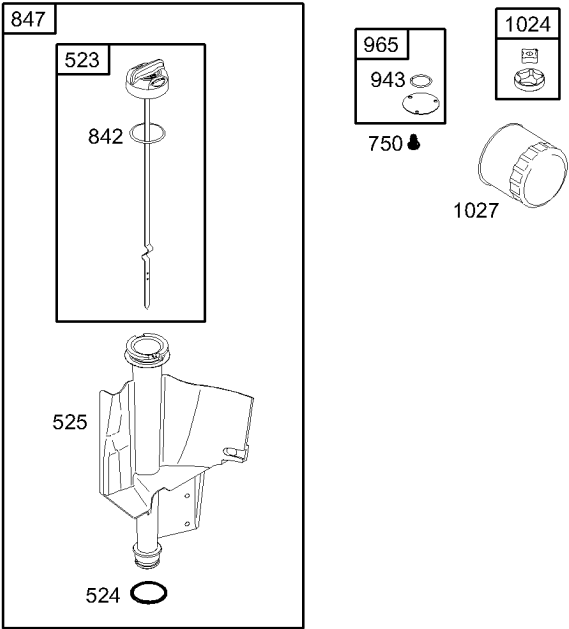 


Assemblies include all parts shown in frames.

Oil Filter, Tube and Pump Assembly

Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description				
7523	697086	1	Dipstick				
87524	691032	1	Seal				
7525	697184	1	Tube-Dipstick				
7750	691033	1	Screw				
87842	691031	1	Seal-O Ring				
7847	697611	1	Dipstick And Tube ASM				
87943	690589	1	Seal-O Ring				
7965	499613	1	Cover-Pump, Oil				
71024	499054	1	Pump-Oil				
71027	492932	1	Filter-Oil				

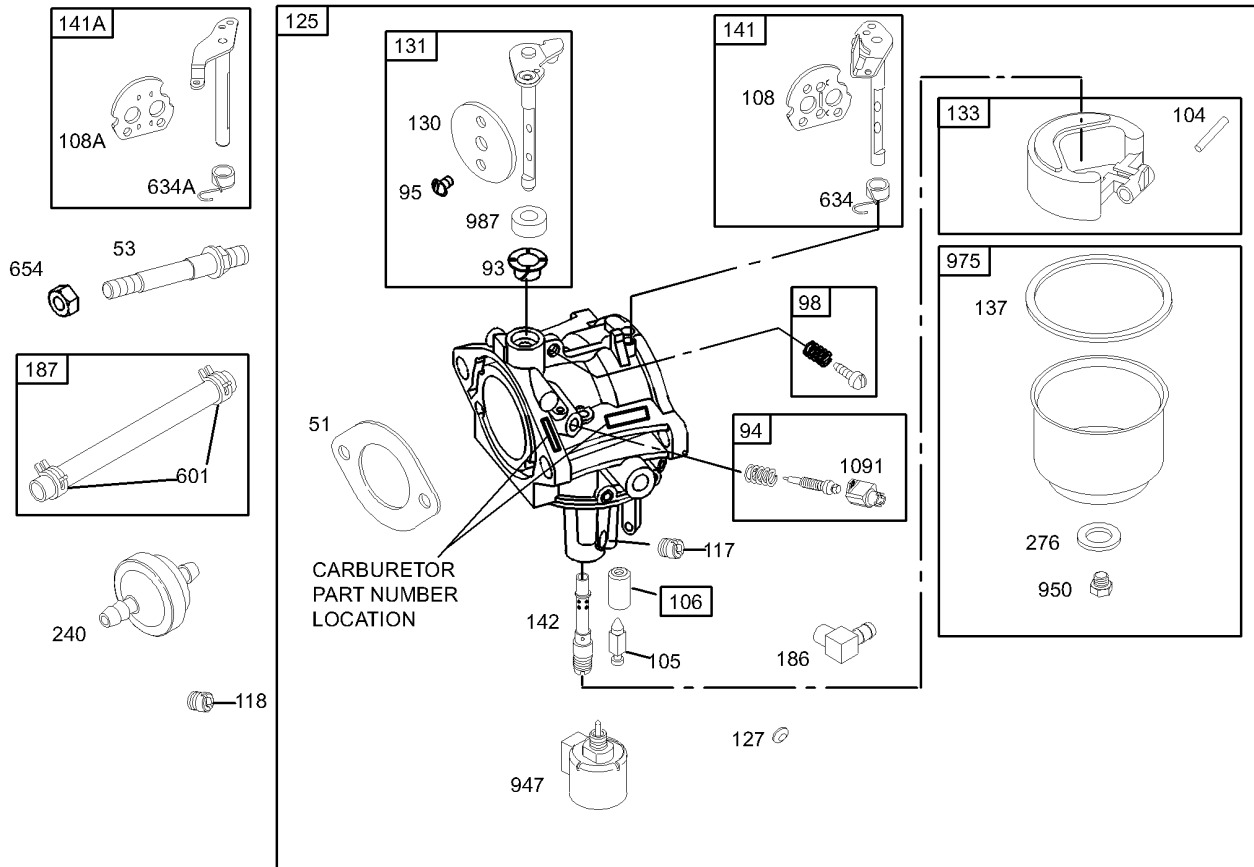 


Assemblies include all parts shown in frames.

Carburetor Assembly

Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description	Ref	Part No.	Qty.	Description
5 4 51	692137	1	Gasket-Intake	7 186	698174	1	Connector-Hose
5 6				7 187	697098	1	Line-Fuel
7 53	690227	1	Stud	7 240	394358	1	Filter-Fuel
5 7 93	690602	1	Bushing-Shaft, Throttle	5 6 276	692255	1	Washer-Sealing
7 94	498030	1	Idle Mixture Kit	7			
5 7 95	691636	1	Screw	7 601	95162	1	Clamp-Hose
7 98	495800	1	Idle Speed Kit	5 7 634	690801	1	Spring / Seal ASM
5 7 104	690525	1	Pin-Hinge, Float	5 7 634A	690802	1	Spring / Seal ASM
5 7 105	231855	1	Valve-Needle, Float	7 654	690958	1	Nut
5 7 106	690577	1	Seat-Inlet	7 947	694393	1	Solenoid-Fuel
7 108	690464	1	Valve-Choke	7 950	691657	1	Screw
7 108A	692344	1	Valve-Choke	7 975	495933	1	Bowl-Float
5 7 117	694352	1	Jet-Main (Standard)	5 7 987	691326	1	Seal-Shaft, Throttle
7 118	697228	1	Jet-Main (High Altitude)	7 1091	691333	1	Cap-Limiter
7 125	697190	1	Carburetor				
7 127	695005	1	Plug-Welch				
7 130	691750	1	Valve-Throttle				
7 131	494379	1	Throttle Shaft Kit				
7 133	494381	1	Float-Carburetor				
5 6 137	281165	1	Gasket-Bowl, Float				
7							
7 141	495097	1	Choke Shaft Kit				
7 141A	495931	1	Choke Shaft Kit				
5 7 142	697140	1	Nozzle-Carburetor				

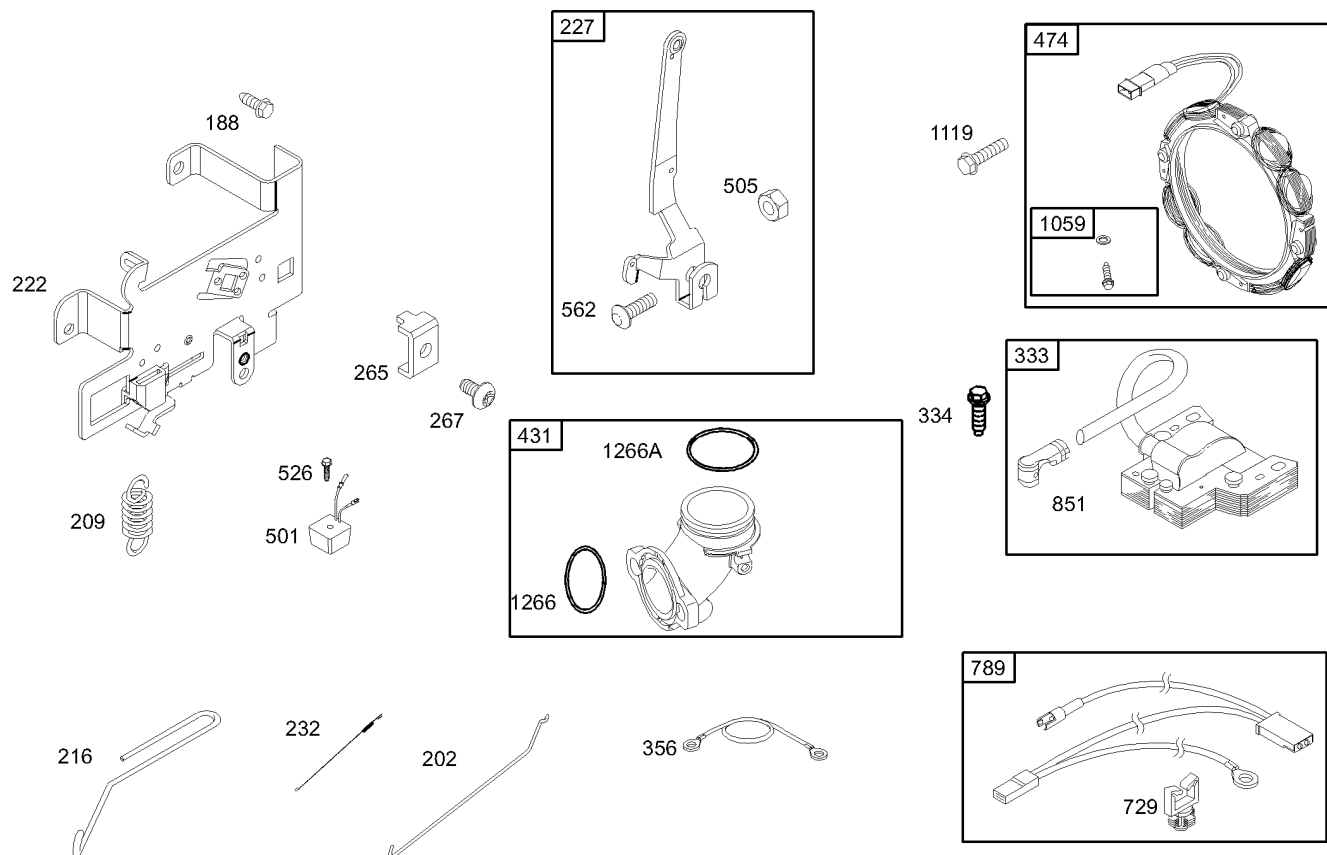 


Assemblies include all parts shown in frames.

Governor Assembly
Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description
7188	691693	1	Screw
7202	691841	1	Link-Governor, Mechanical
7209	692208	1	Spring-Governor
7216	691840	1	Link-Choke
7222	694042	1	Bracket-Control
7227	691374	1	Lever-Control, Governor
7232	691842	1	Spring-Link, Governor
7265	691024	1	Clamp-Casing
7267	695134	1	Screw
7333	492341	1	Armature-Magneto
7334	691061	1	Screw
7356	697089	1	Stop-Wire
7431	697122	1	Elbow-Intake
7474	696458	1	Alternator
7501	691185	1	Regulator
7505	691251	1	Nut
7526	697348	1	Screw
7562	691119	1	Screw
7729	691335	1	Clip-Wire
7789	692037	1	Wiring-Harness
7851	493880	1	Terminal-Plug, Spark
71059	698516	1	Screw/Washer Kit
71119	691183	1	Screw
71266	691917	1	Seal-O Ring

Ref	Part No.	Qty.	Description
③ ⑦ 1266A	697123	1	Seal-O Ring


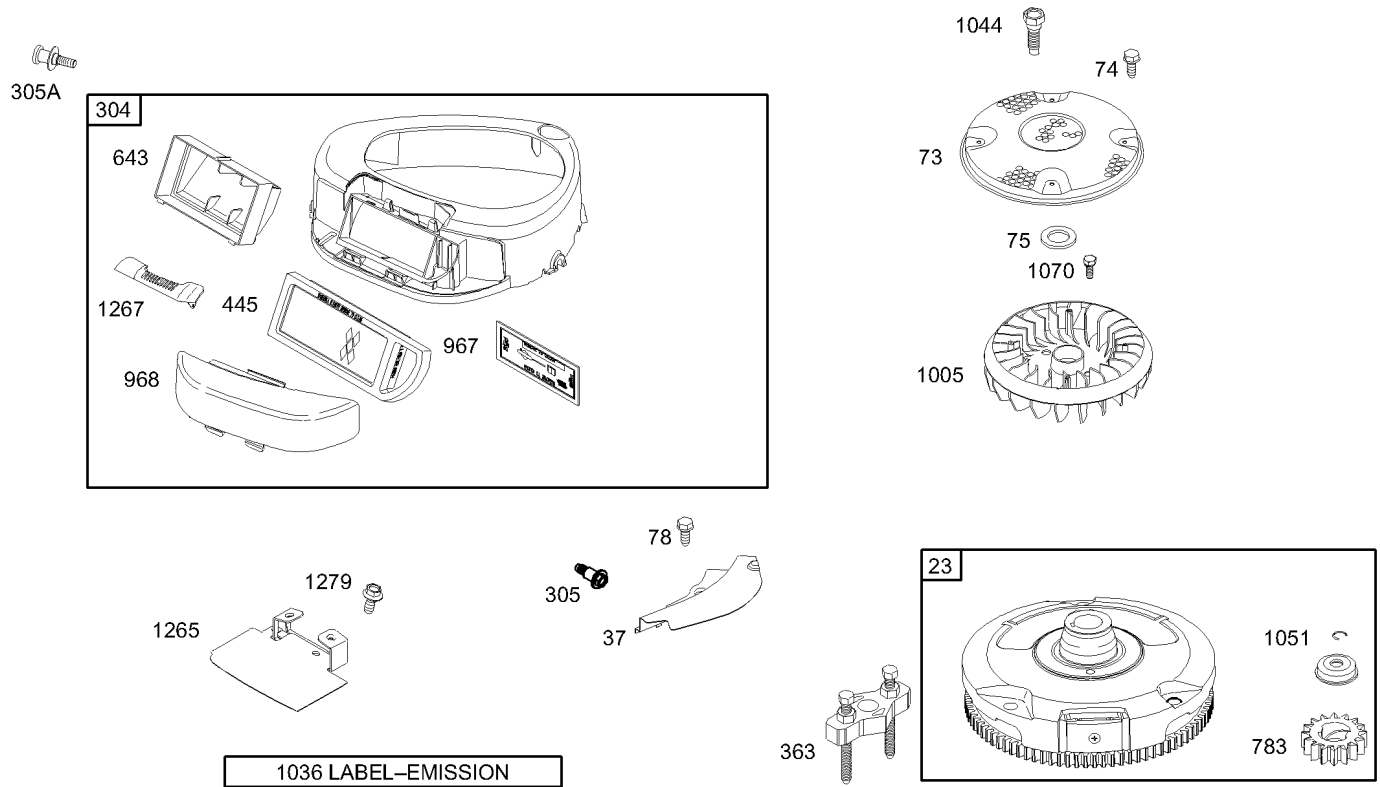 


Assemblies include all parts shown in frames.

Blower Housing Assembly

Briggs and Stratton 31F777-0162-E1



Ref	Part No.	Qty.	Description				
23	693556	1	Flywheel				
37	697108	1	Guard-Flywheel				
73	697133	1	Screen-Rotating				
74	697897	1	Screw				
75	690582	1	Washer-Flywheel				
78	691003	1	Screw				
304	698804	1	Housing-Blower				
305	697102	1	Screw				
305A	697103	1	Screw				
363	19203	1	Puller-Flywheel				
445	697014	1	Filter-Air Cleaner Cartridge				
643	697155	1	Retainer-Air Filter				
783	693713	1	Gear-Pinion				
1070	690372	1	Screw				
967	697015	1	Filter-Pre Cleaner				
968	697084	1	Cover-Cleaner, Air				
1005	697111	1	Fan-Flywheel				
1036	695700	1	Label-Emission				
1044	691658	1	Screw-Crankshaft Extension				
1051	691265	1	Ring-Retaining				
1070	690372	1	Screw				
1265	697125	1	Support-Housing, Blower				
1267	697135	1	Latch-Blower Housing				
1279	690960	1	Screw				

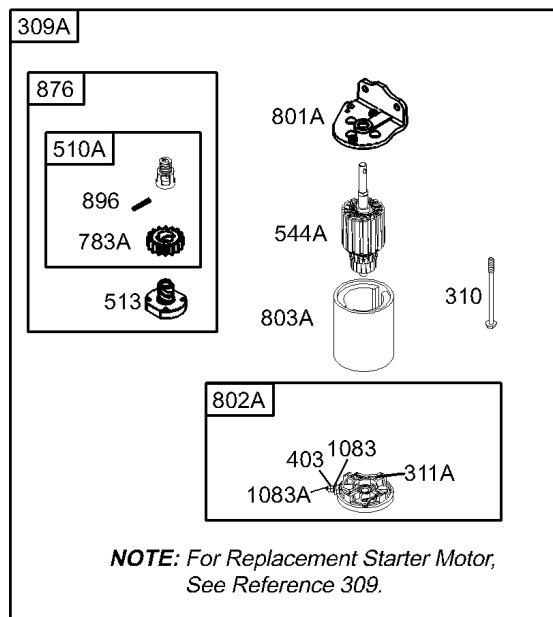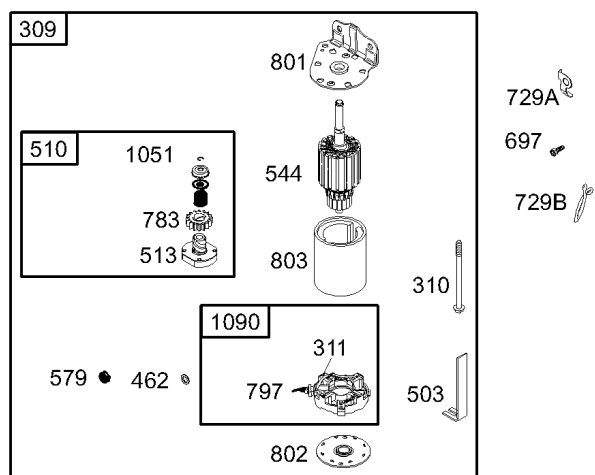  

Starter Assembly Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description
7309	693551	1	Motor-Starter
7309A		1	Motor-Starter(For Replacementstarter Motor, See Ref.309)
7310	690323	1	Bolt
7311	497608	1	Brush Set
7311A	395538	1	Brush Set
7403	690288	1	Washer (End Cap)
7462	691261	1	Washer
7503	691532	1	Strap-Starter
7510	693699	1	Drive-Starter
7510A	495878	1	Drive-Starter
7513	692024	1	Clutch-Drive
7544	692034	1	Armature-Starter
7544A	390837	1	Armature-Starter
7579	691029	1	Nut
7697	690372	1	Screw
7729A	691224	1	Clip-Wire
7729B	694123	1	Clip-Wire
7783	693713	1	Gear-Pinion
7783A	693059	1	Gear-Pinion
7797	693167	1	Nut
7801	691283	1	Cap-Drive
7801A	691429	1	Cap-Drive



Ref	Part No.	Qty.	Description
7802	691286	1	Cap-End
7802A	395537	1	Cap-End
7803	693757	1	Housing-Starter
7803A	398159	1	Housing-Starter
7876	495877	1	Kit-Gear
7896	691641	1	Pin-Drive Retainer
71051	691265	1	Ring-Retaining
71090	691293	1	Retainer-Brush
71083	690958	1	Nut
71083A	691626	1	Nut (End Cap)

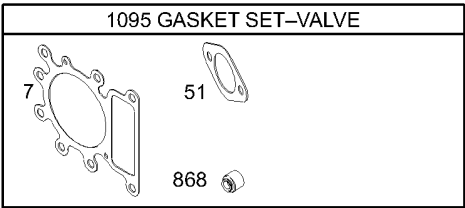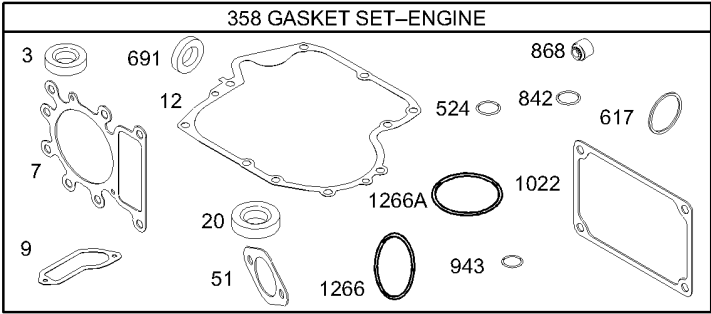  

Assemblies include all parts shown in frames.

Gasket Assembly
Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description				
373	391086	1	Seal-Oil				
3477	692410	1	Gasket-Cylinder Head				
379	697109	1	Gasket-Breather				
3712	697110	0	Gasket-Crankcase				
3720	690947	1	Seal-Oil				
345156	692137	1	Gasket-Intake				
7358	697191	1	Gasket Set-Engine				
356177	692138	1	Seal				
37524	691032	1	Seal				
37691	692407	1	Seal-Shaft, Governor				
37842	691031	1	Seal-O Ring				
348687	690968	1	Seal-Valve				
37943	690589	1	Seal-O Ring				
371022	272475	1	Gasket-Cover, Rocker				
71095	691581	1	Valve Gasket Set				
3512667	691917	1	Seal-O Ring				
351266A7	697123	1	Seal-O Ring				

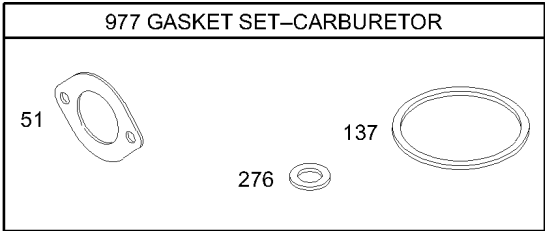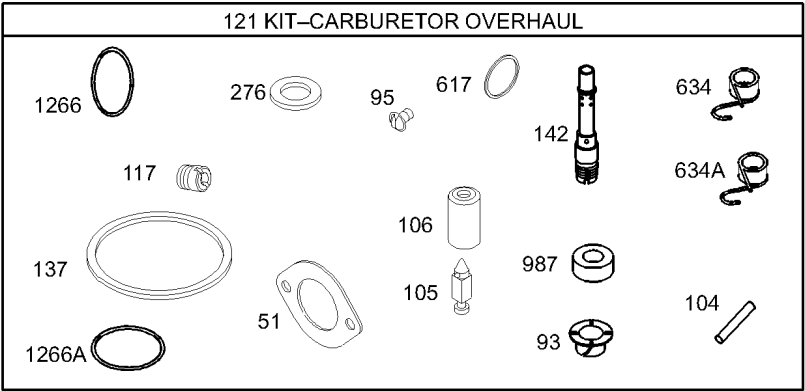  

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly

Briggs and Stratton 31F777-0162-E1

Ref	Part No.	Qty.	Description				
3451 56	692137	1	Gasket-Intake				
5793	690602	1	Bushing-Shaft, Throttle				
5795	691636	1	Screw				
57104	690525	1	Pin-Hinge, Float				
57105	231855	1	Valve-Needle, Float				
57106	690577	1	Seat-Inlet				
57117	694352	1	Jet-Main (Standard)				
7121	697241	1	Carburetor Overhaul Kit				
56137 7	281165	1	Gasket-Bowl, Float				
57142	697140	1	Nozzle-Carburetor				
56276 7	692255	1	Washer-Sealing				
55617 7	692138	1	Seal				
57634	690801	1	Spring / Seal ASM				
57634A	690802	1	Spring / Seal ASM				
7977	690192	1	Carburetor Gasket Set				
57987	691326	1	Seal-Shaft, Throttle				
551266 7	691917	1	Seal-O Ring				
551266A 7	697123	1	Seal-O Ring				

Attachments and Accessories

For 71286 - XL 440H Lawn Tractor

Product Name	Model/Part
Counterweight Kit	100-6230
8in Rear Wheel Weight Kit	59159
11.0 cu. ft. Vac Bagger	79102
42in Snow Blade	79150
44in Baffle Kit	79174
10 cu. ft. Dump Cart	79901
Snow Cab	79912
Sunshade	79913
10 cu. ft. Poly Dump Cart	79935
Folding Loading Ramp	79949
Sweeper	79985
Tractor Rack	79990
Tire Chain Kit	82722
Snow Blade Completing Package	93-3806
Tower Kit	98-9880

NOTES

NOTES

